

Disassembly and Assembly

1104C Industrial Engine (Electronic)

RF1 1-UP (Engine)

RH1 1-UP (Engine)

RK1 1-UP (Engine)



Table of Contents

Disassembly and Assembly Section

Fuel Priming Pump - Remove and Install	4
Fuel Filter Base - Remove and Install	5
Fuel Injection Lines - Remove	7
Fuel Injection Lines - Install	7
Fuel Injector Cover - Remove and Install	9
Fuel Injection Pump - Remove	9
Fuel Injection Pump - Install	11
Fuel Injector - Remove	14
Fuel Injector - Install	14
Turbocharger - Remove	15
Turbocharger - Install	16
Exhaust Manifold - Remove and Install	18
Exhaust Elbow - Remove and Install	19
Inlet and Exhaust Valve Springs - Remove and Install	20
Inlet and Exhaust Valves - Remove and Install	22
Inlet and Exhaust Valve Guides - Remove and Install	25
Inlet and Exhaust Valve Seat Inserts - Remove and Install	27
Engine Oil Filter Base - Remove and Install	29
Engine Oil Cooler - Remove	34
Engine Oil Cooler - Install	35
Engine Oil Relief Valve - Remove and Install (Engine Oil Pump)	36
Engine Oil Relief Valve - Remove and Install (Balancer Unit for the 1104 engines only)	37
Engine Oil Pump - Remove (Engines Without a Balancer)	38
Engine Oil Pump - Install (Engines Without a Balancer)	39
Water Pump - Remove	40
Water Pump - Disassemble	40
Water Pump - Assemble	42
Water Pump - Install	44
Water Temperature Regulator - Remove and Install	44
Flywheel - Remove	47
Flywheel - Install	48
Crankshaft Rear Seal - Remove	49
Crankshaft Rear Seal - Install	49
Crankshaft Wear Sleeve (Rear) - Remove	51
Crankshaft Wear Sleeve (Rear) - Install	52
Flywheel Housing - Remove and Install	53
Crankshaft Pulley - Remove and Install	54
Crankshaft Front Seal - Remove	55
Crankshaft Front Seal - Install	55
Crankshaft Wear Sleeve (Front) - Install	56
Crankshaft Wear Sleeve (Front) - Remove	57
Front Cover - Remove and Install	57
Gear Group (Front) - Remove	58
Gear Group (Front) - Install	60
Idler Gear (Front) - Remove	61
Idler Gear (Front) - Disassemble	63
Idler Gear (Front) - Assemble	64
Idler Gear (Front) - Install	65
Housing (Front) - Remove	67
Housing (Front) - Install	68
Accessory Drive - Remove and Install	70
Crankcase Breather - Remove and Install	72

Valve Mechanism Cover - Remove and Install	74
Rocker Shaft and Pushrod - Remove	76
Rocker Shaft - Disassemble	77
Rocker Shaft - Assemble	77
Rocker Shaft and Pushrod - Install	78
Cylinder Head - Remove	79
Cylinder Head - Install	80
Lifter Group - Remove and Install	83
Camshaft - Remove and Install	84
Camshaft Gear - Remove and Install	85
Camshaft Bearings - Remove and Install	86
Engine Oil Pan - Remove and Install	87
Balancer - Remove (If Equipped)	89
Balancer - Install (If Equipped)	90
Piston Cooling Jets - Remove and Install	92
Pistons and Connecting Rods - Remove	93
Pistons and Connecting Rods - Disassemble	93
Pistons and Connecting Rods - Assemble	94
Pistons and Connecting Rods - Install	96
Connecting Rod Bearings - Remove	97
Connecting Rod Bearings - Install	98
Crankshaft Main Bearings - Remove	99
Crankshaft Main Bearings - Install (Crankshaft in Position)	100
Crankshaft - Remove	103
Crankshaft - Install	105
Crankshaft Timing Ring - Remove and Install	109
Crankshaft Gear - Remove and Install	110
Bearing Clearance - Check	111
Coolant Temperature Sensor - Remove and Install	112
Engine Oil Pressure Sensor - Remove and Install	113
Speed/Timing Sensor - Remove and Install	114
Boost Pressure Sensor - Remove and Install	115
Inlet Air Temperature Sensor - Remove and Install	115
Glow Plugs - Remove and Install	116
V-Belts - Remove and Install	117
Fan - Remove and Install	118
Fan Drive - Remove and Install	119
Electronic Control Module - Remove and Install	120
Voltage Load Protection Module - Remove and Install	121
Alternator - Remove	122
Alternator - Install	123
Electric Starting Motor - Remove and Install	123
Vacuum Pump - Remove and Install	124
Hydraulic Pump (Steering) - Remove	125
Hydraulic Pump (Steering) - Install	125

Index Section

Index	126
-------	-----

**Thank you very much
for your reading.**

**Please click here and go
back to our website.**

**Then, you can download
the complete manual
instantly.**

No waiting.

Have questions.

Please write to me.

**All the problems will be answered
within 12 hours.**

aservicemanuapdf@yahoo.com