

Introduction



Backhoe Loaders KOMATSU - 5

NEW

Basic Technical
Training

Komatsu Backhoe Loader Models:

WB93R - 5 from S/N **F50003**

WB97R - 5 from S/N **F50003**

WB93R-5	WB97R-5
TURBO ENGINE	TURBO ENGINE
POWER-SHUTTLE TRANSMISSION	POWER-SHIFT TRANSMISSION
2 WHEEL STEERING	2 WHEEL STEERING
4 WHEEL DRIVE	4 WHEEL DRIVE
Cab ROPS (ISO 3471) - FOPS (ISO 3449)	

PUBLICATIONS (machines serial numbers)

WB93R-5 from S/N F50003 and up

WB97R-5 from S/N F50003 and up

OPERATION & MAINTENANCE MANUAL

WB93R-5

WEAM006000

WB97R-5

WEAM007400

SHOP MANUALS:

WB93R-5

WEBM005800

WB97R-5

WEBM006300

PARTS BOOK:

WB93R-5

WEPB007500

WB97R-5

WEPB007600

TABLE OF CHAPTERS

- IDENTIFICATION
- SPECS & TEST VALUES
- CABIN
- POWER TRAIN
 - ENGINE
 - TRANSMISSION
 - AXLE
- HYDRAULIC SYSTEM
- STEERING SYSTEM
- ELECTRIC SYSTEM
- WORK EQUIPMENT
- MAINTENANCE
- SAFETY