## Aux Air Spring - Set Forward Axle

## Chassis Suspension


## FT FT

## 62G-015 AUXILIARY AIR SPRING ON RIGHT SIDE FOR PLOW APPLICATIONS 62G-014 AUXILIARY AIR SPRING ON LEFT SIDE FOR MIXER APPLICATIONS


Ideal for applications with extra loads on the one side of the vehicle such as concrete mixers or wing plows. A supplemental air spring is added to the chassis as shown here. A gauge and regulator in the dash are provided for precise adjustment of air bag pressure up to 100PSI.

Pressure Guage



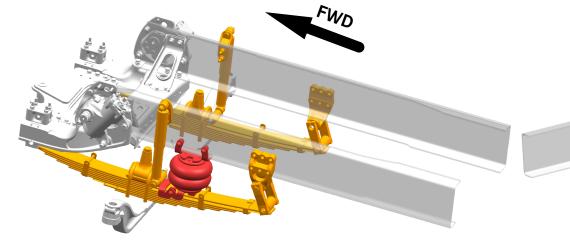



**Isometric View** 

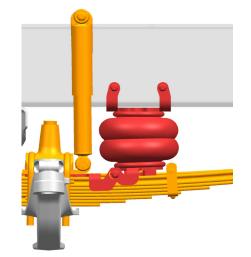


Set Forward Axle –Straight Rail –Left Hand Side

 Cabin View



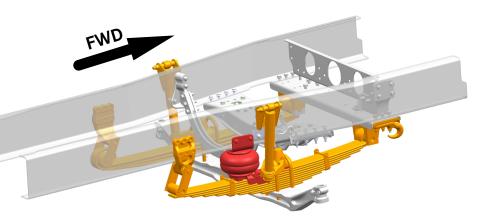

**Isometric View** 

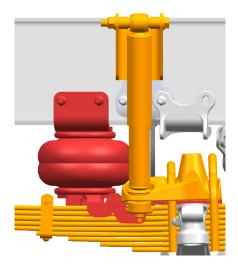

Set Forward Axle –Splayed Rail –Right Hand Side

