


Service Manual Trucks

Group **37**
Release **02**

Wiring diagram

FM9, FM12, FH12 VERSION2

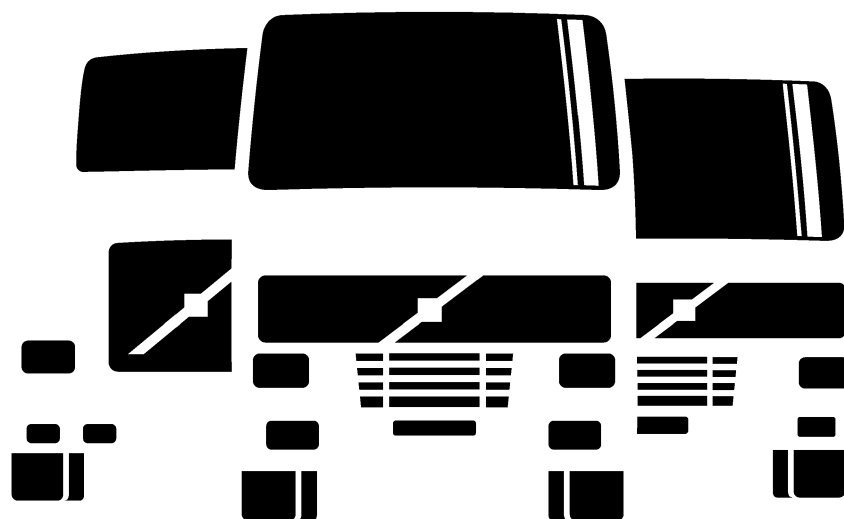

Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to August 02.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

Note: Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

Caution: Indicates an unsafe practice where damage to the product could occur.

Warning: Indicates an unsafe practice where personal injury or severe damage to the product could occur.

Danger: Indicates an unsafe practice where serious personal injury or death could occur.

Volvo Truck Corporation

Göteborg, Sweden

The following information will be superseded by this manual:

SM Group 37 TSP 169444

Order number: TSP175664


© 02 Volvo Truck Corporation, Göteborg, Sweden

All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.


Contents

Example of wiring diagram	2
Component wiring diagram index	5
Component wiring diagrams	8
Illustrations index	76
Illustrations	77
Fuses	137
Relays	139
Wiring harness illustration index	141
Earth connections	144
List of earth connections	146
List of connectors	147
List of components	154
Abbreviations	160
Cable colour code	161
Feedback	


Example of wiring diagram

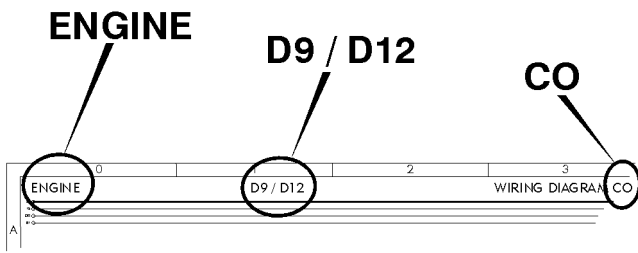


Component wiring diagram title, variant/subtitle and symbol.

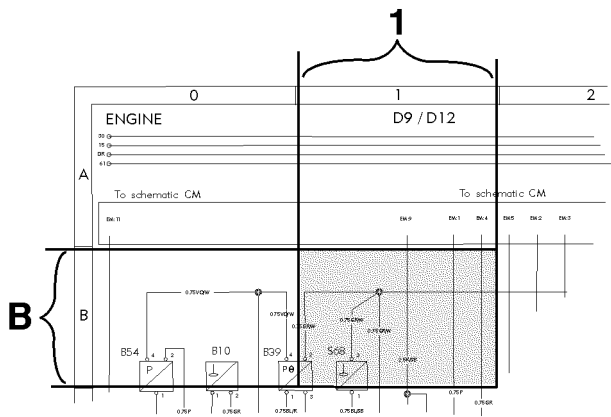


Coordinates (B 1).

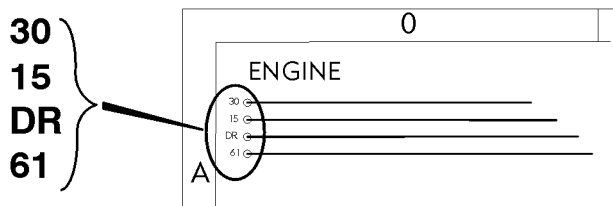


30 Voltage battery, kl.30.
15 Voltage with starter key in drive position, kl.15.
DR Voltage with starter key in drive position, preheat position and start position, kl.DR.
61 Voltage when alternator charges, kl.61.

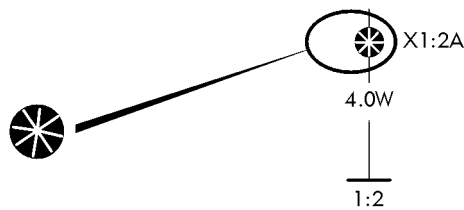

Splice.



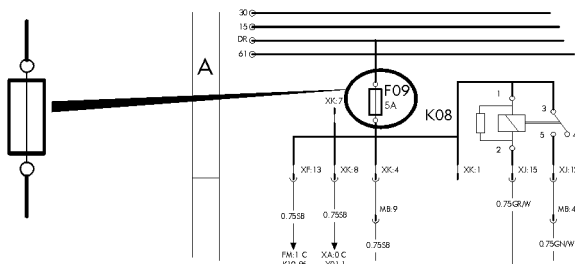


Fuse.

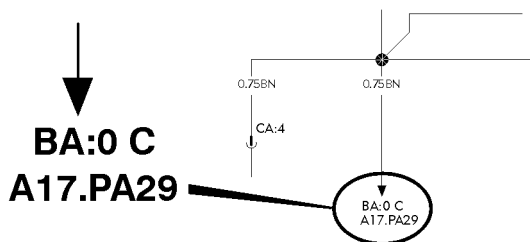

Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.


GEARTRONIC
I-SHIFT
POWERTRONIC

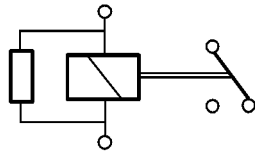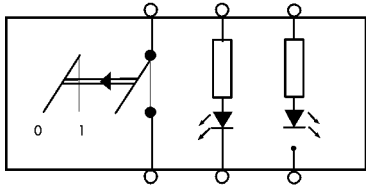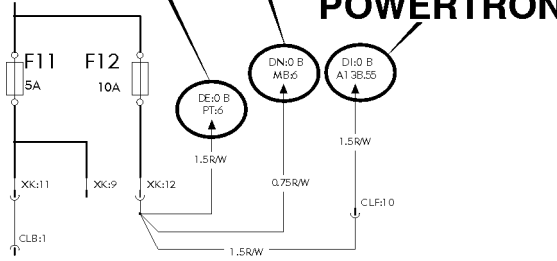


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

Switch.


Relay.

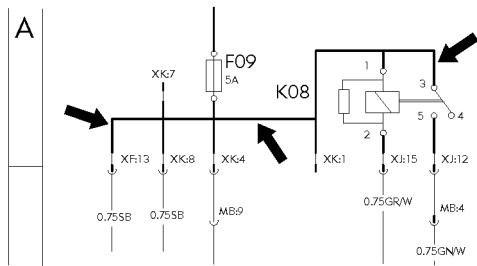


Conductor on circuit card.

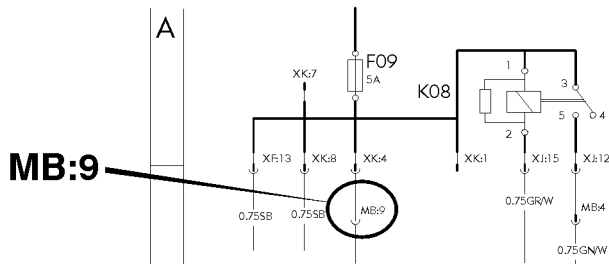


Connector MB terminal 9.

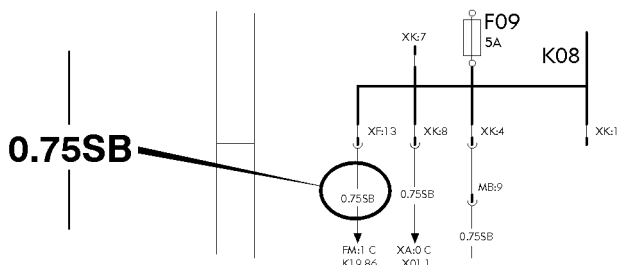

Wire area and colour.

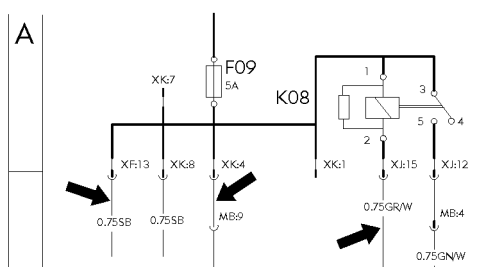

Thin lines, wires.

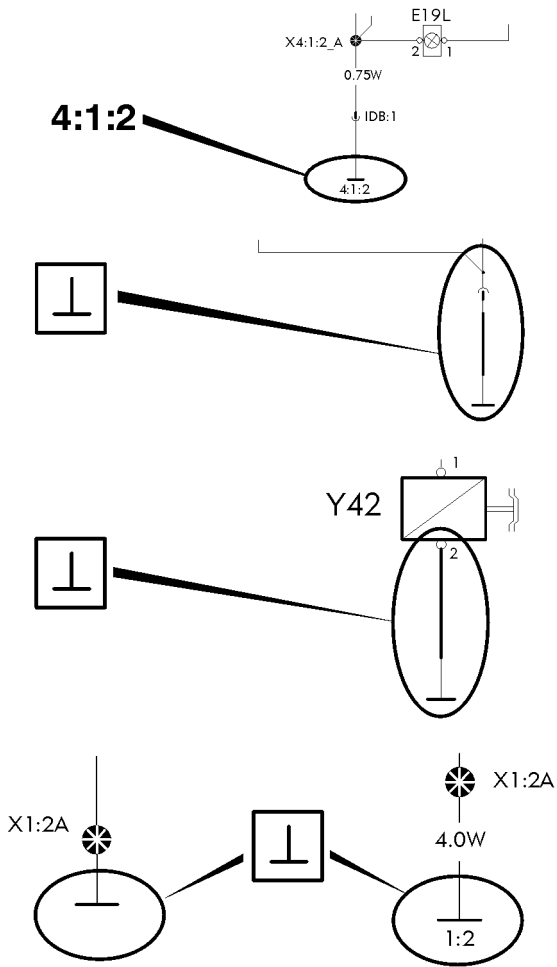

Earth connection point 4, earth connection 1 and wire 2.

Earth connection to circuit card.

Earth connection without wire.


Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.


Component wiring diagram index


AA	Power supply, starting system	page 8
AE	ADR, main switch	page 9
BA	Vehicle ECU	page 10
BI	Instrument cluster	page 11
BM	Tachograph in dash	page 12
BN	Tachograph in shelf	page 13
BU	Dynafleet	page 14
CM	Engine interface	page 15
CO	Engine (D9/D12)	page 16
CP	ISX functions, 12V trailer ABS converter (AUS only)	page 17
CS	Engine ISX (AUS only)	page 18
CU	Fuel filter water drain	page 19
DB	Gear selector ECU	page 20
DE	Geartronic automatic gearshift	page 21
DI	Powertronic	page 22
DM	Retarder manual gearshift	page 23
DN	I-shift	page 24
DQ	Power take off	page 25
DU	Diff-lock	page 26
EC	Trailer ABS/EBS supply	page 27
EE	ABS basic, D-version	page 28
EI	ABS/ASR D-version	page 29
EM	EBS ECU	page 30
EN	EBS modulators	page 31
EQ	ESP	page 32
FA	Air-suspension	page 33
FG	Load indikator	page 34
FK	Bogie lift A-ride	page 35
FM	Axle lock, self steered axle	page 36
FP	Hydraulic steered axle	page 37
FQ	Air dryer	page 38
FU	Central lubrication system	page 39
GA	LCM head lights	page 40


GB	LCM trailer, HL-HID	page 41
GC	LCM rear lights	page 42
GK	Trailer connections (AUS only)	page 43
GM	Wiper, washer	page 44
GQ	Horn	page 45
GU	Headlights adjust	page 46
HG	Climate unit, CU,-BAS,-MCC,-ECC	page 47
HI	Air heater	page 48
HM	Water heater	page 49
HP	Short stop cabheater	page 50
HY	Climat unit, CU,-HEAT,-ACMAN,-ACAUT.	page 51
IA	El. heated/adj. seat	page 52
IE	El. heat/adj. mirrors, El. window winders	page 53
IF	Foldable mirror bracket	page 54
IH	Interior light	page 55
IM	Central locking, immobiliser	page 56
IQ	El. sunroof, cig. lighter, refrigerator	page 57
IR	12V power supply	page 58
IS	SWM, SRS. Air-bag	page 59
IU	Radio	page 60
IX	Intergrated telephone	page 61
IZ	Backup camera	page 62
KA	Cab tilt	page 63
KE	Load light, 5:th wheel lamp	page 64
KI	Light sign	page 65
KM	Beacon warning light	page 66
ME	Extra fuse block, key switch relay	page 67
NA	Body builder (BB), auxsw-6 and swapbody	page 68
NC	Body builder (BB), ELCE-CK, BBM, PTO2	page 69
NI	Extra spotlamps front/roof, max 4x70W	page 70
NK	Burglar alarm	page 71
NR	Body builder (BB), tipper tractor "HYDRKIT"	page 72
NU	Body builder (BB), DUAL-SPEED	page 73
XA	Bus J1708/J1587	page 74
XB	Bus J1939	page 75


Component wiring diagrams

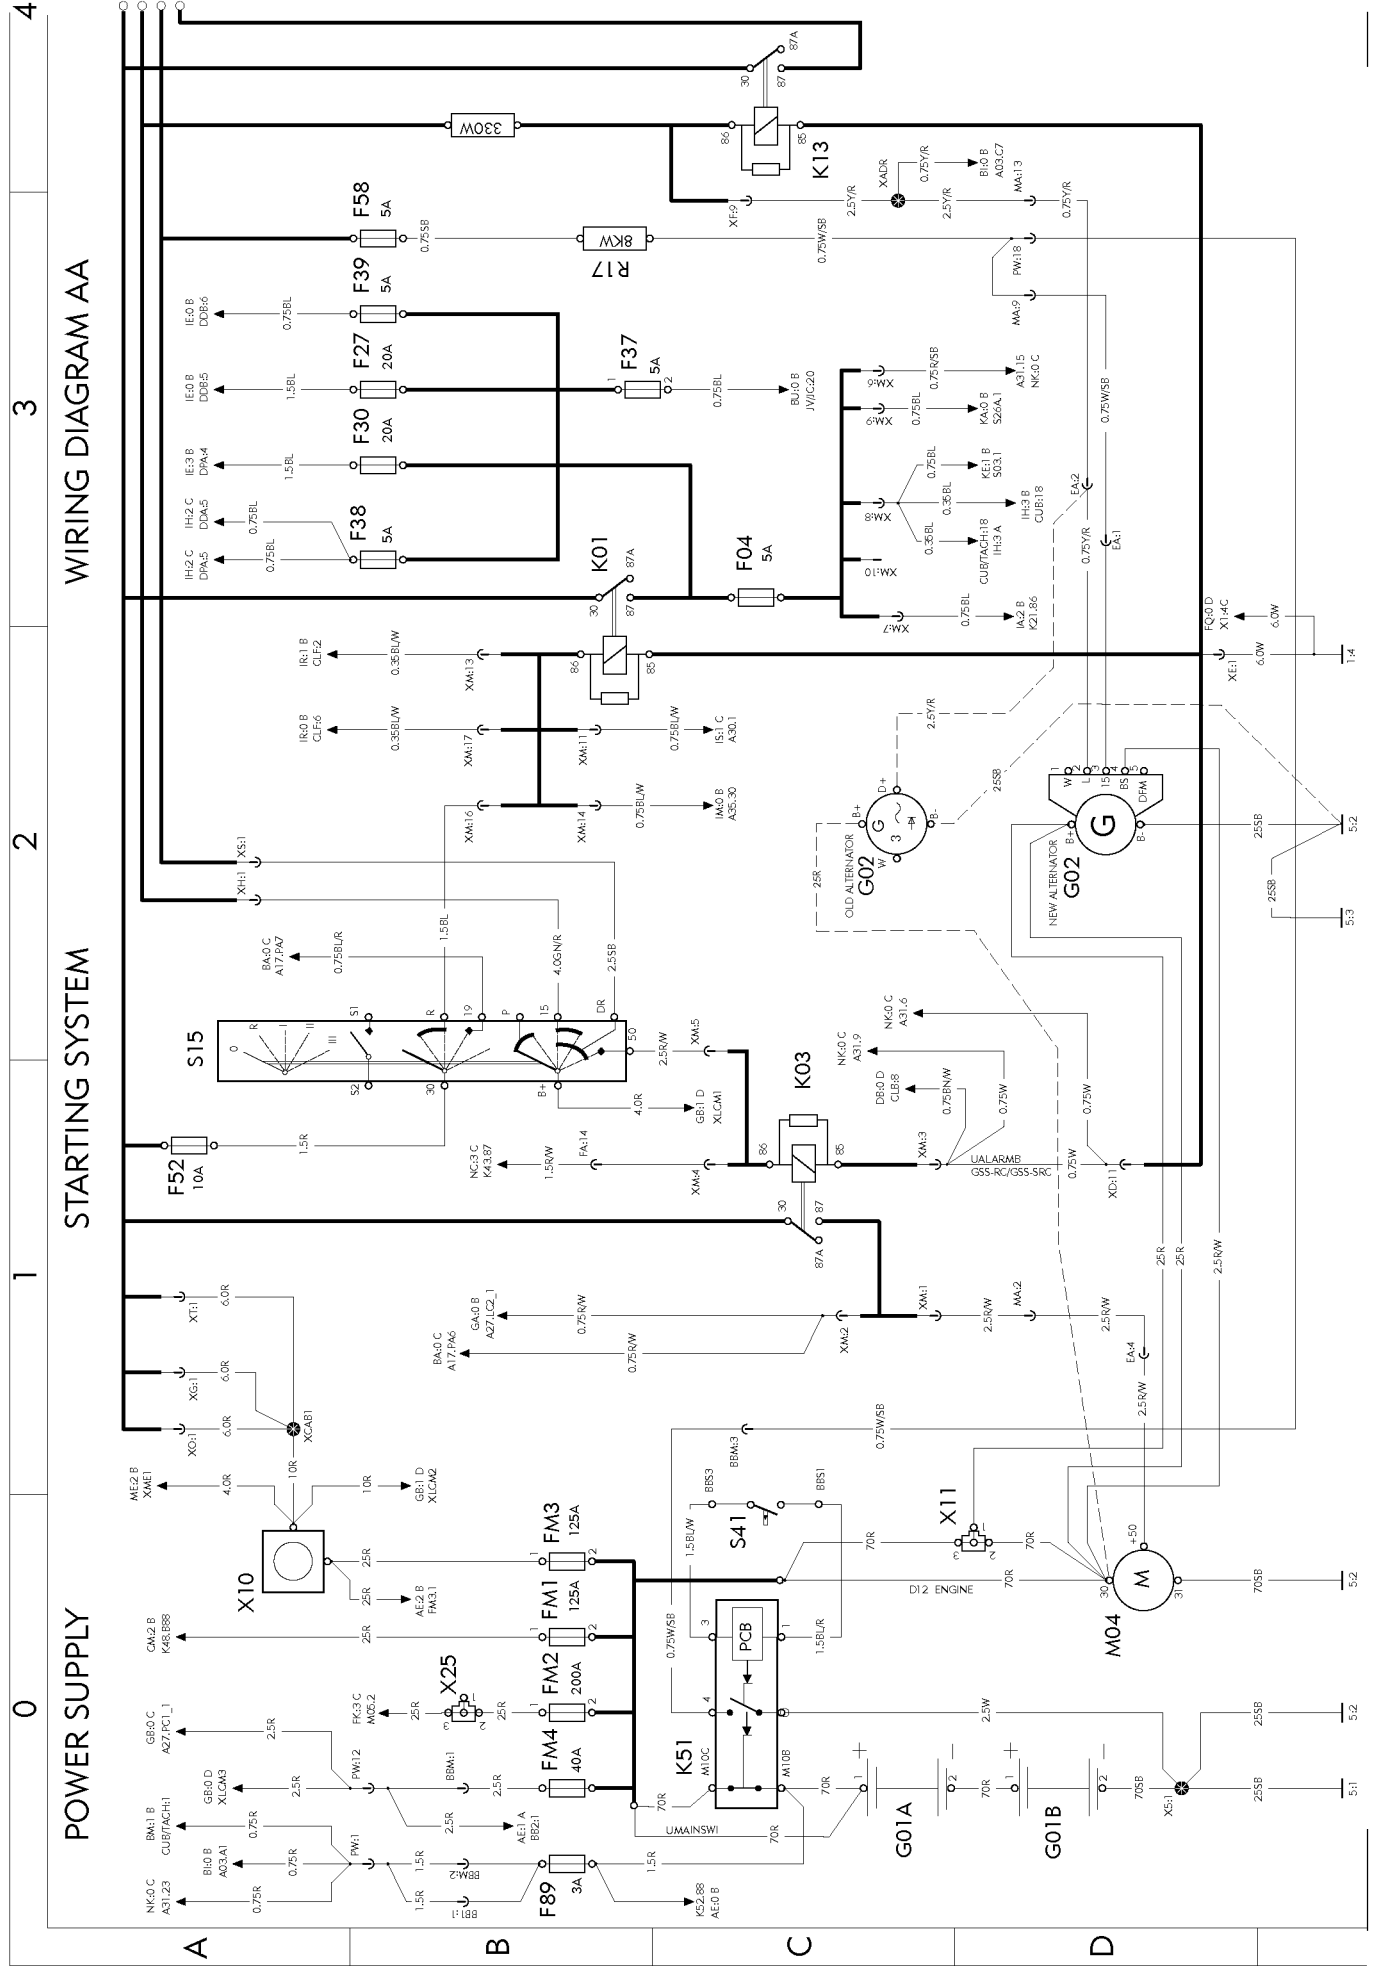


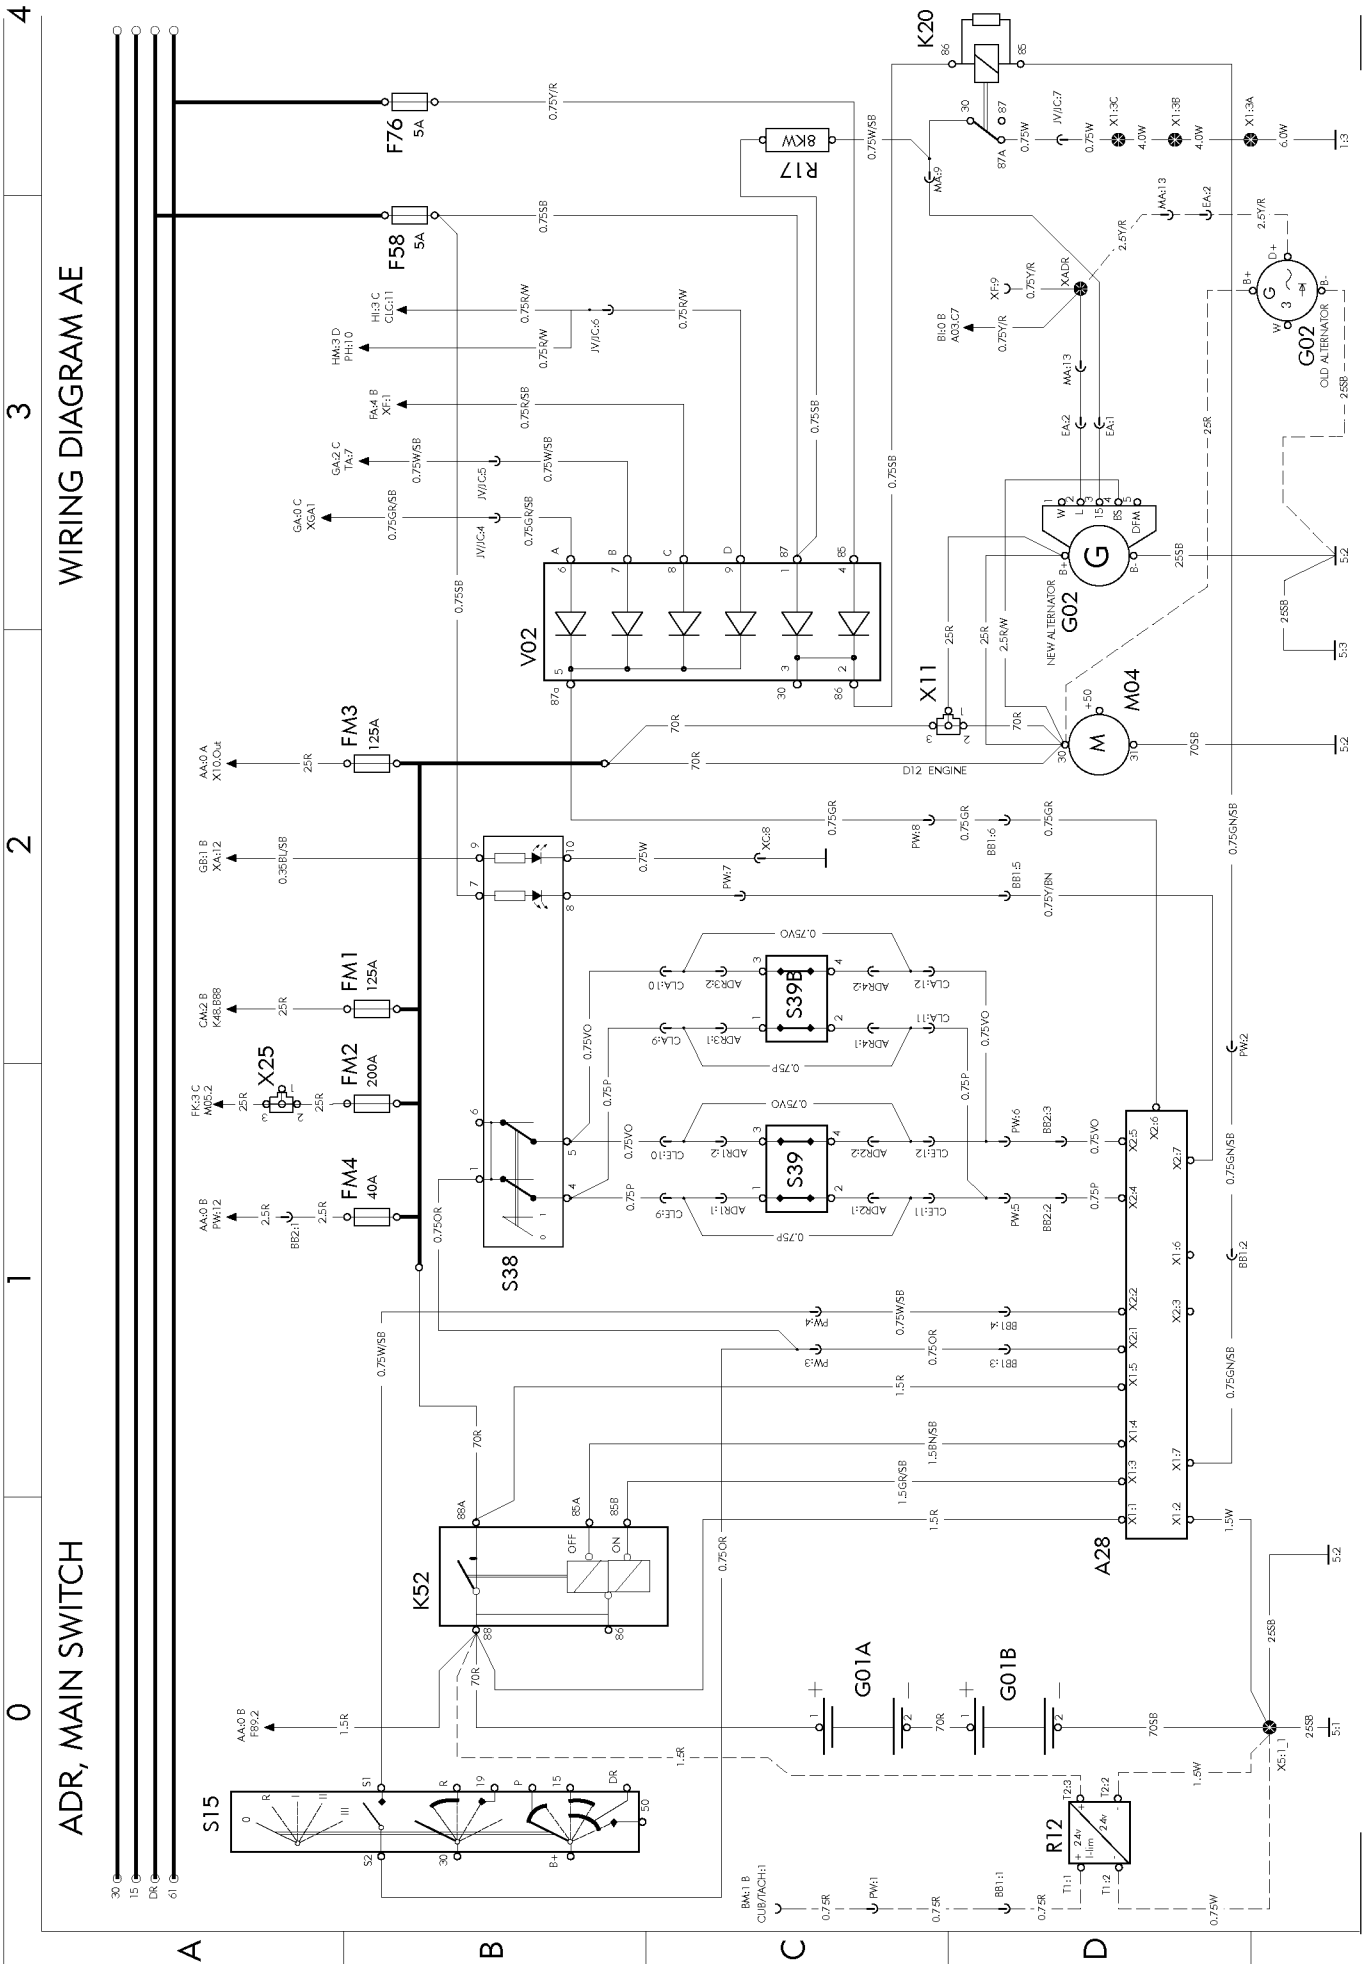


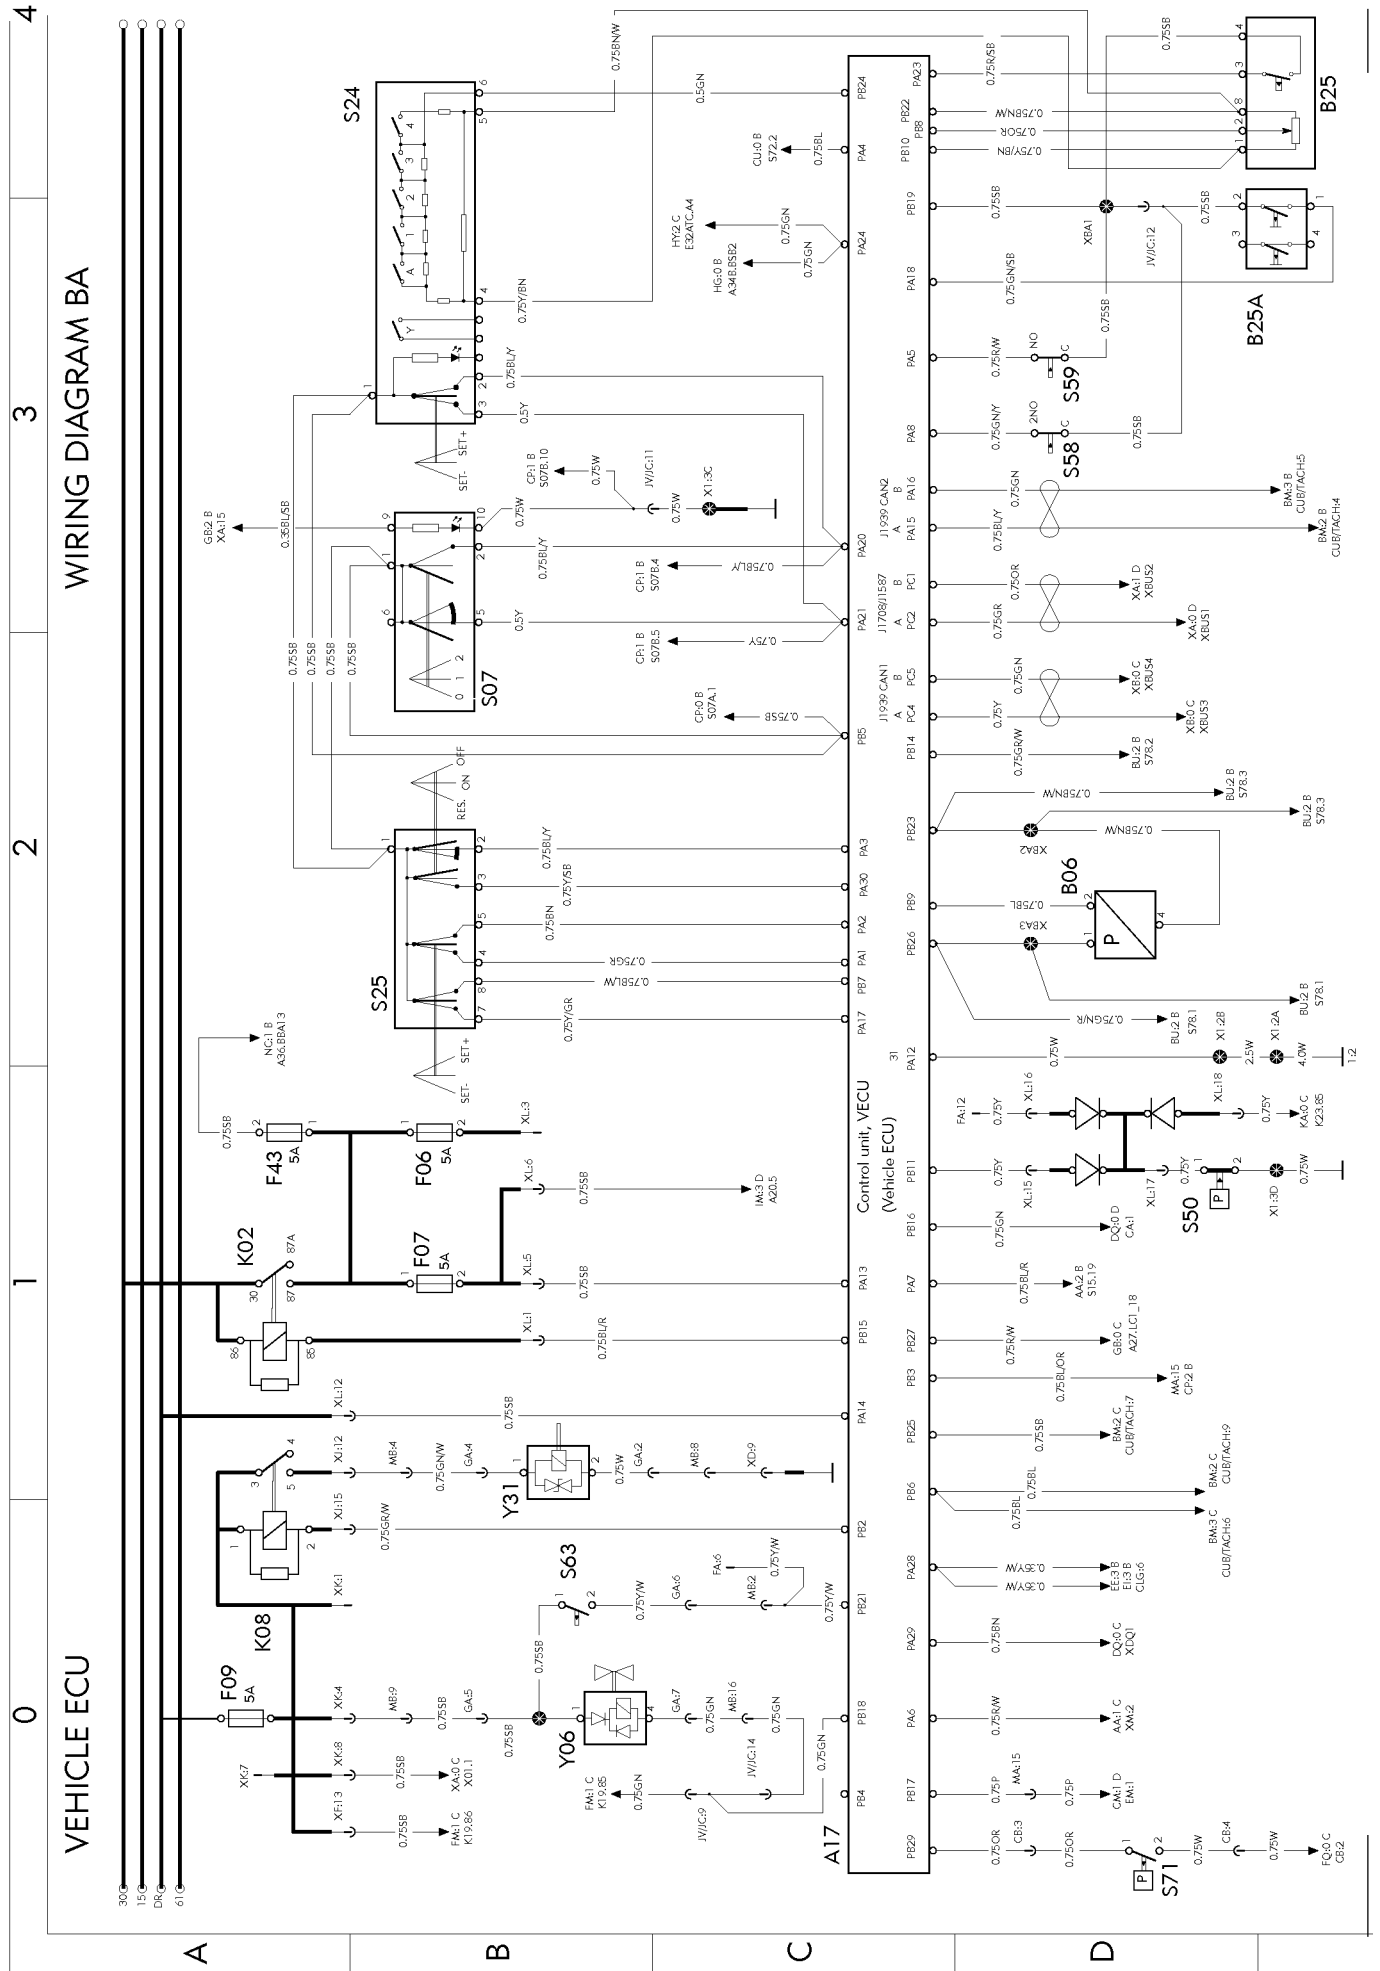

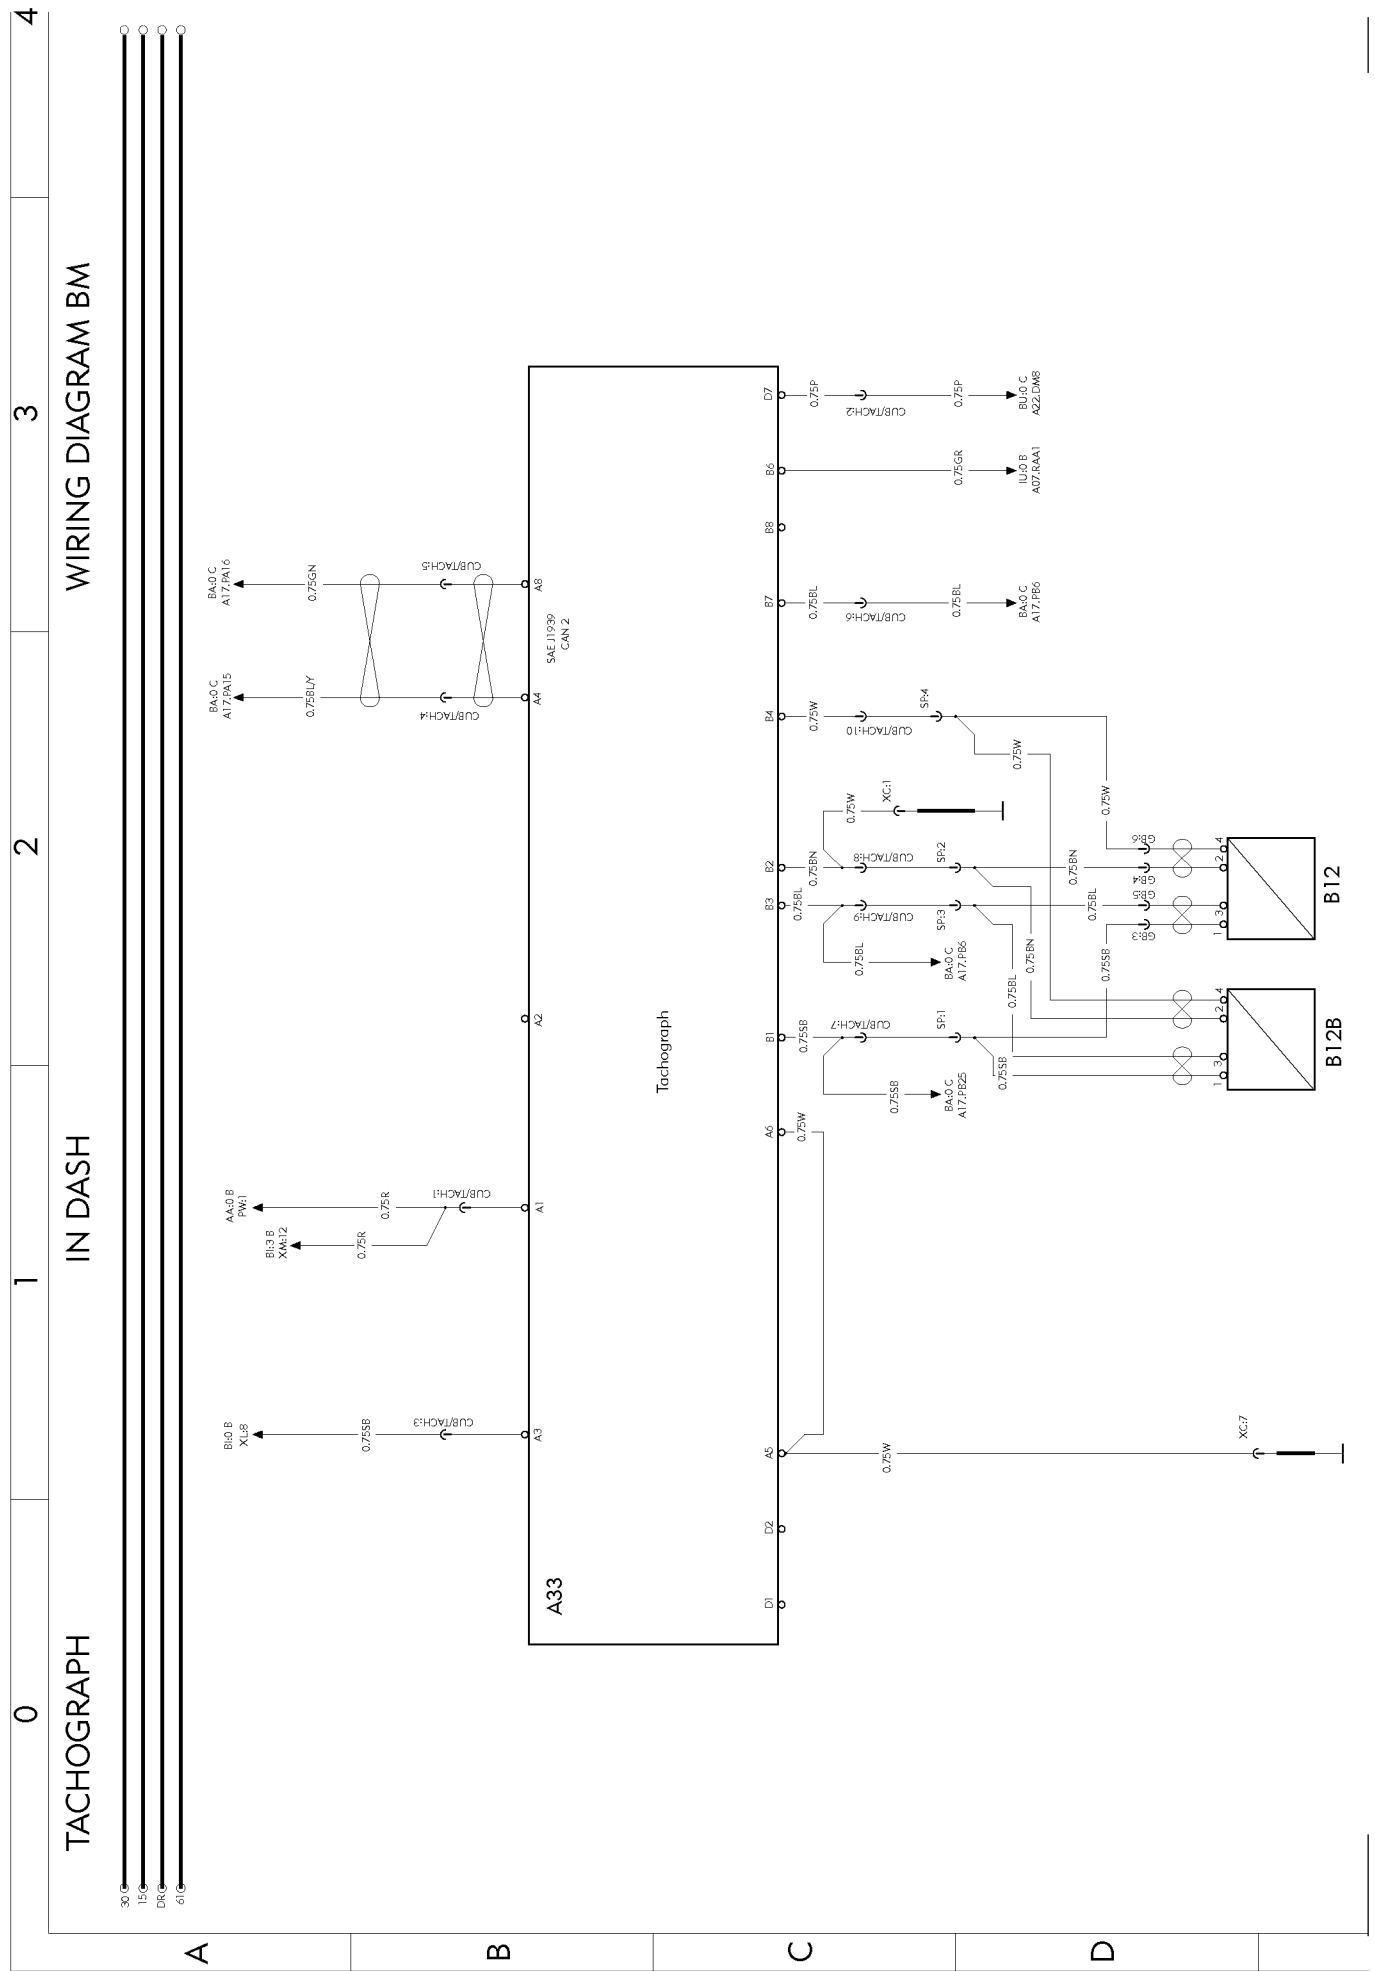

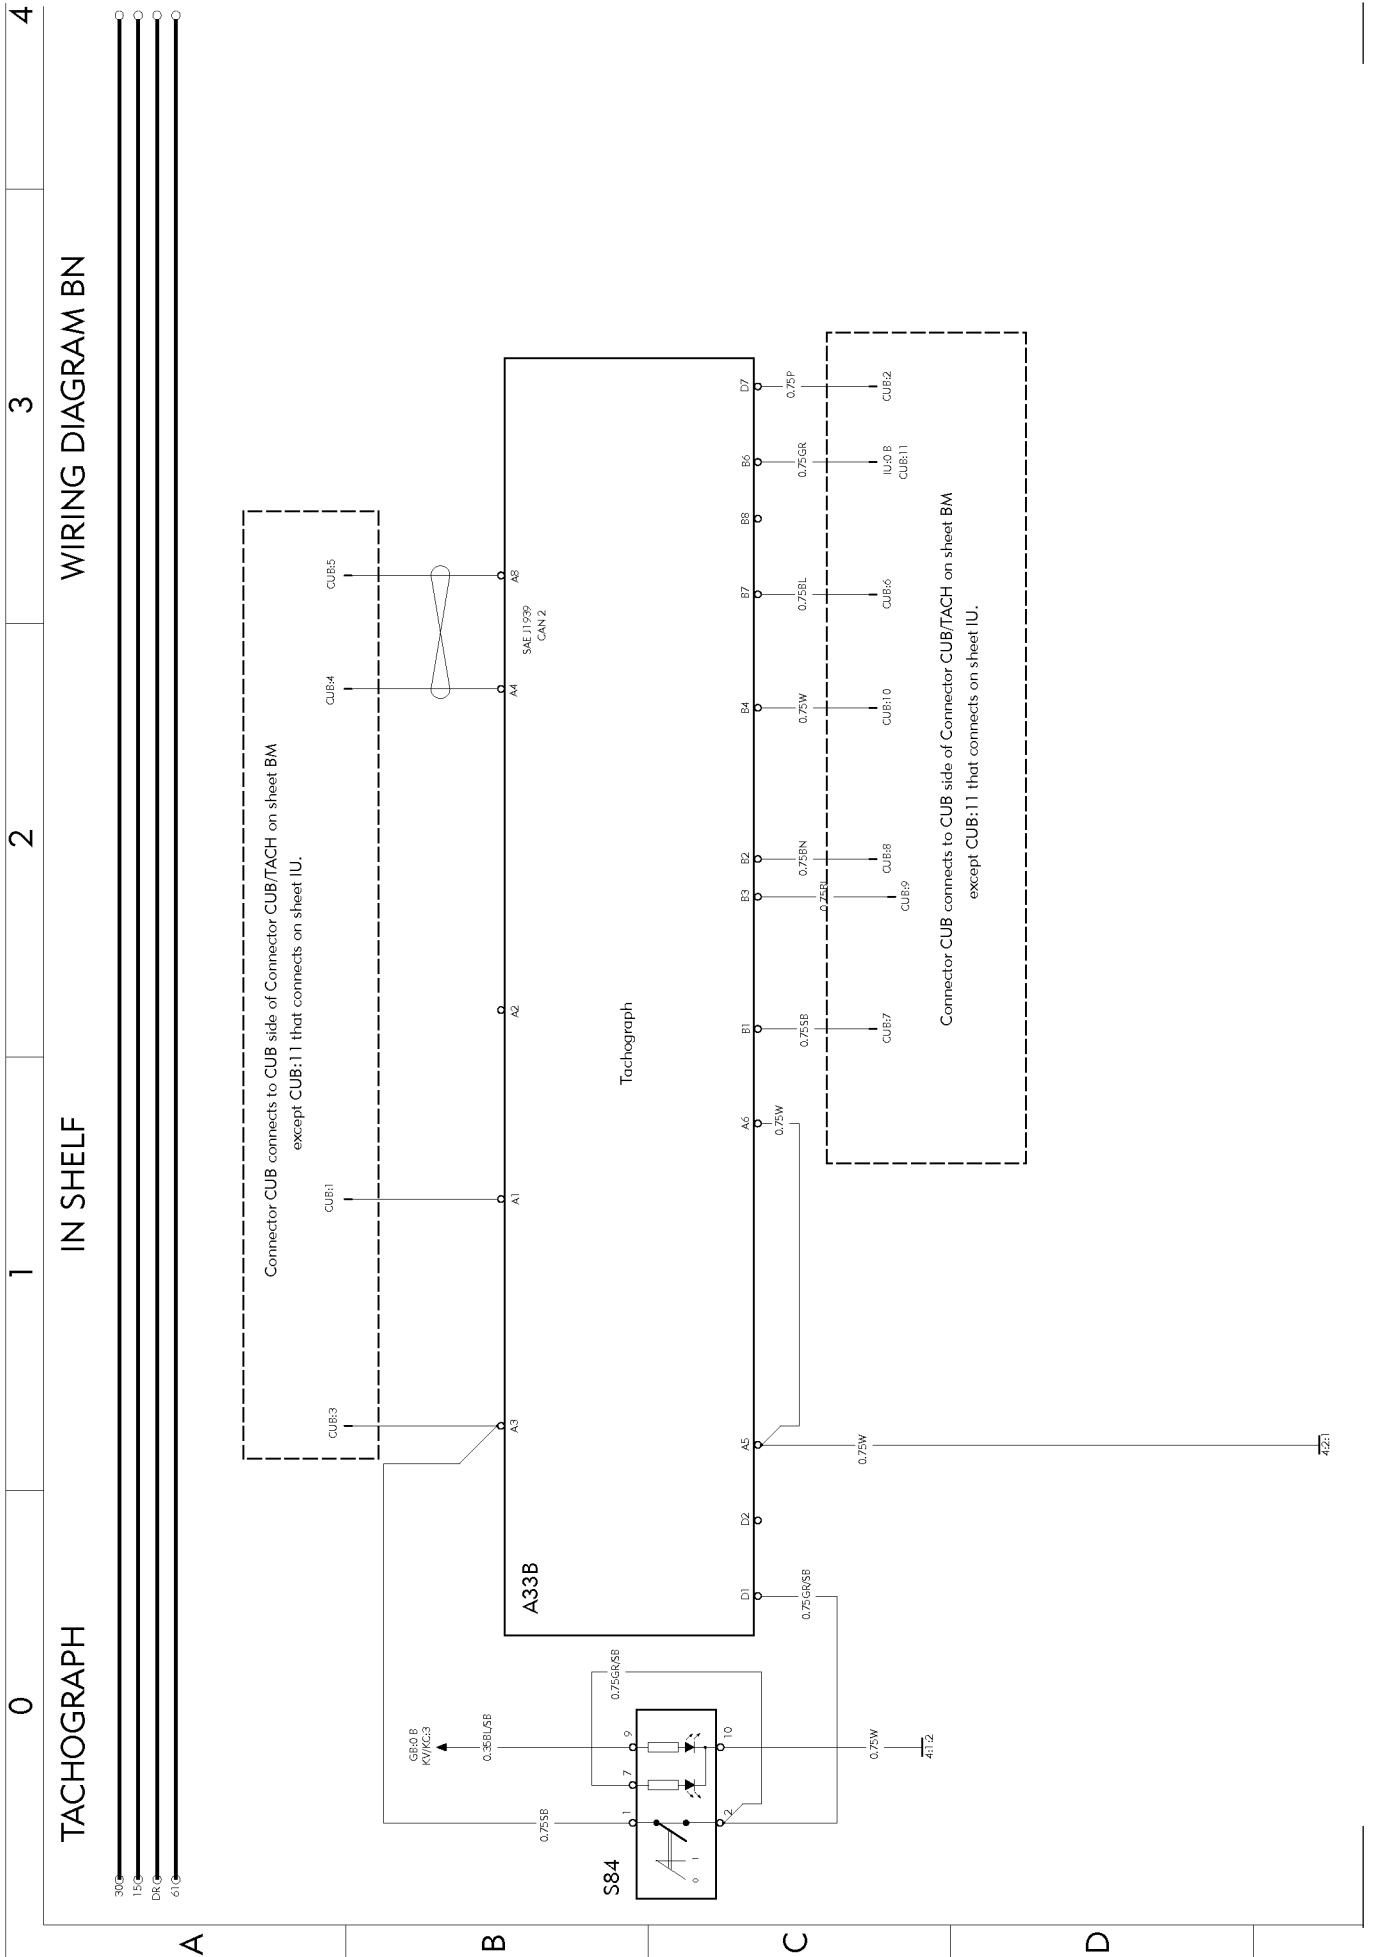

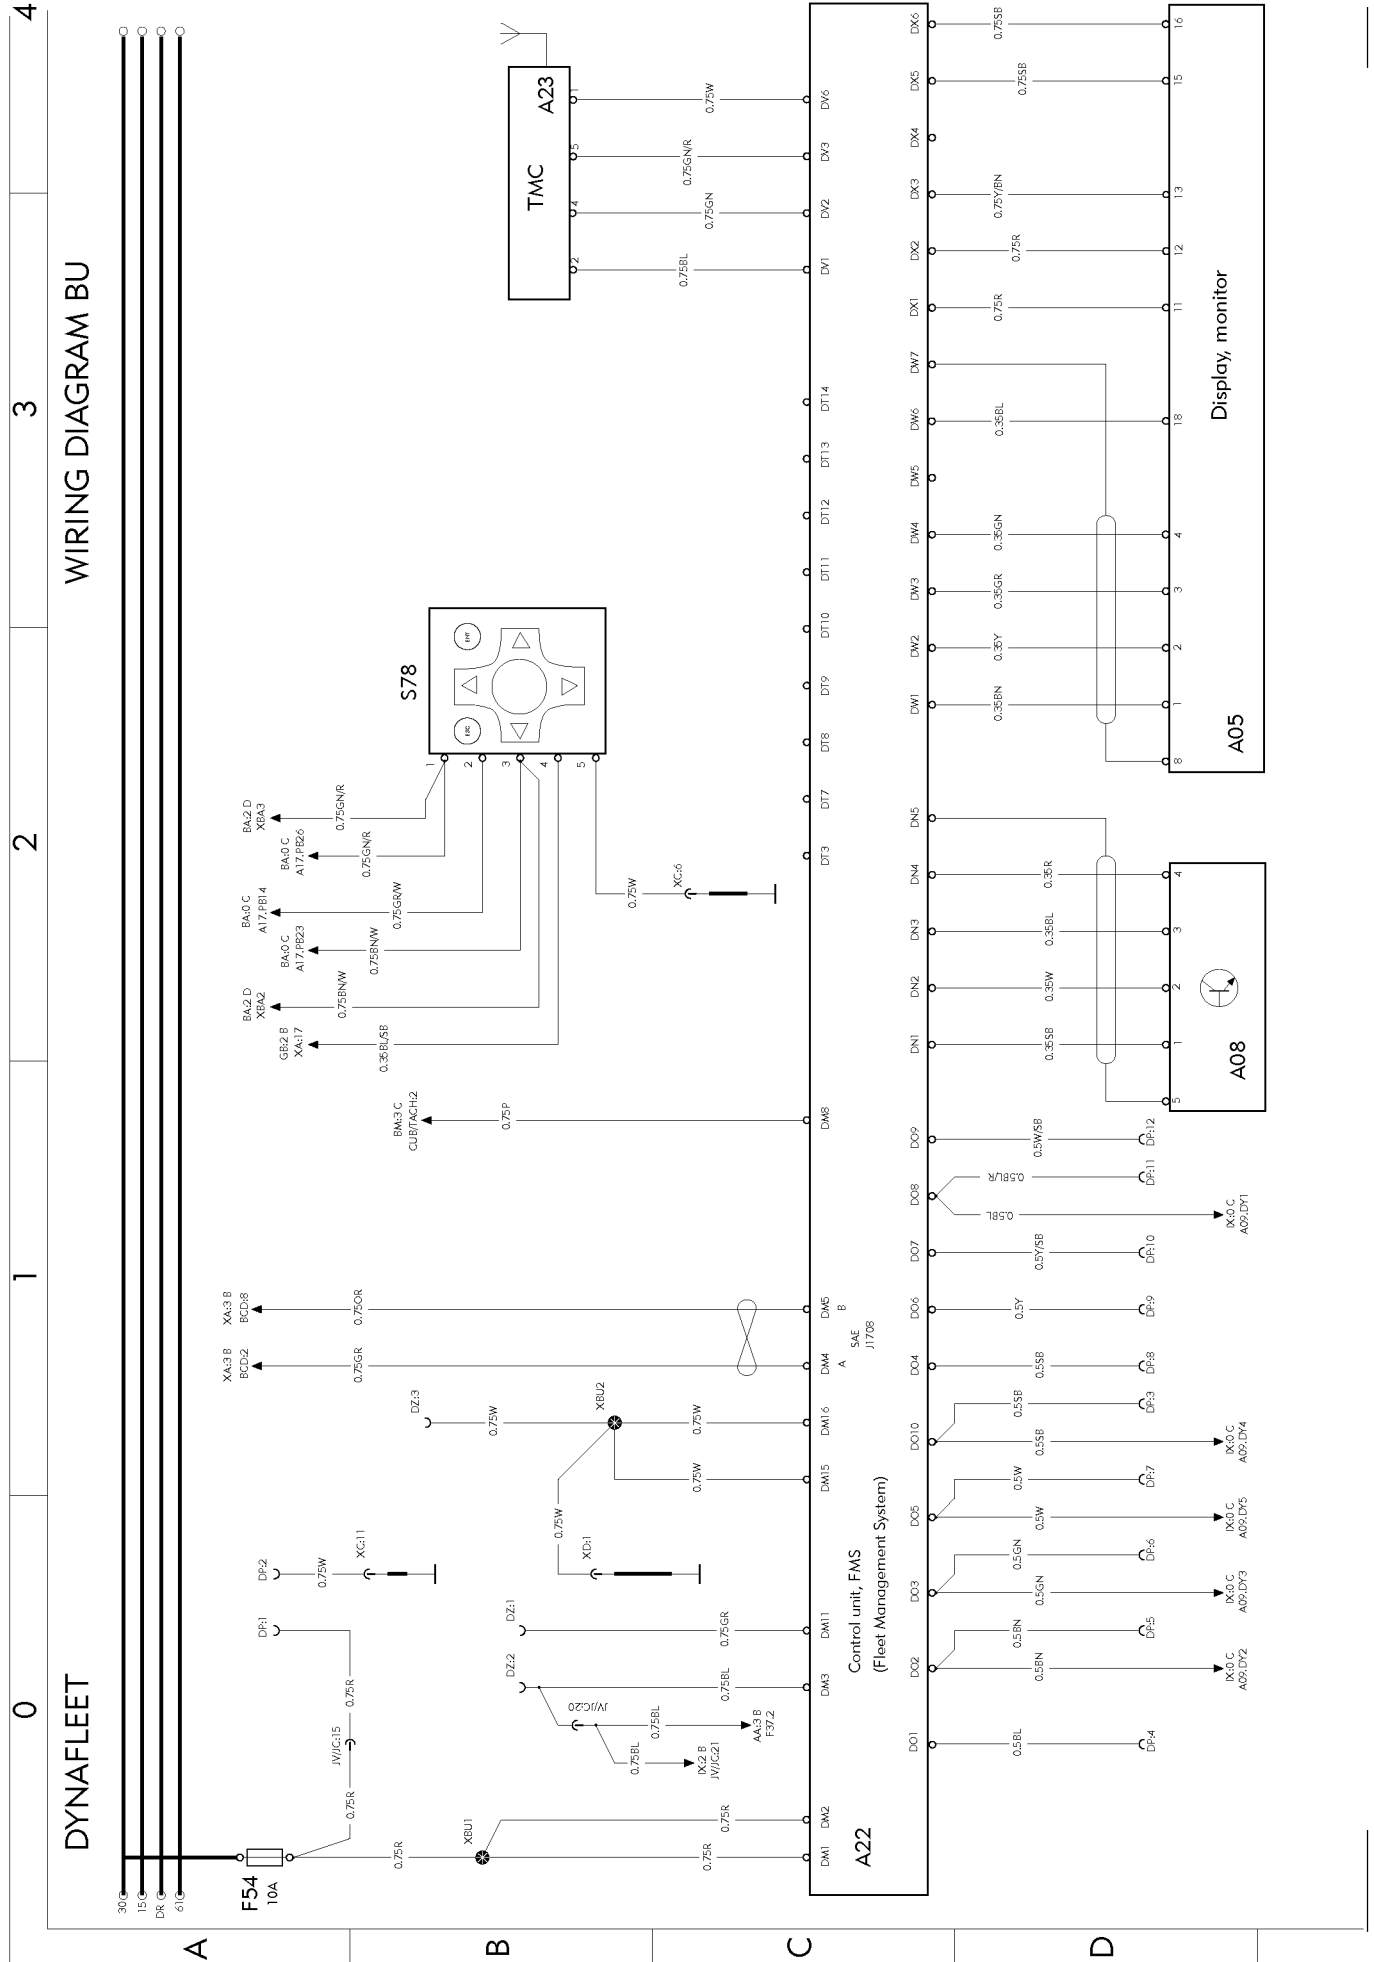

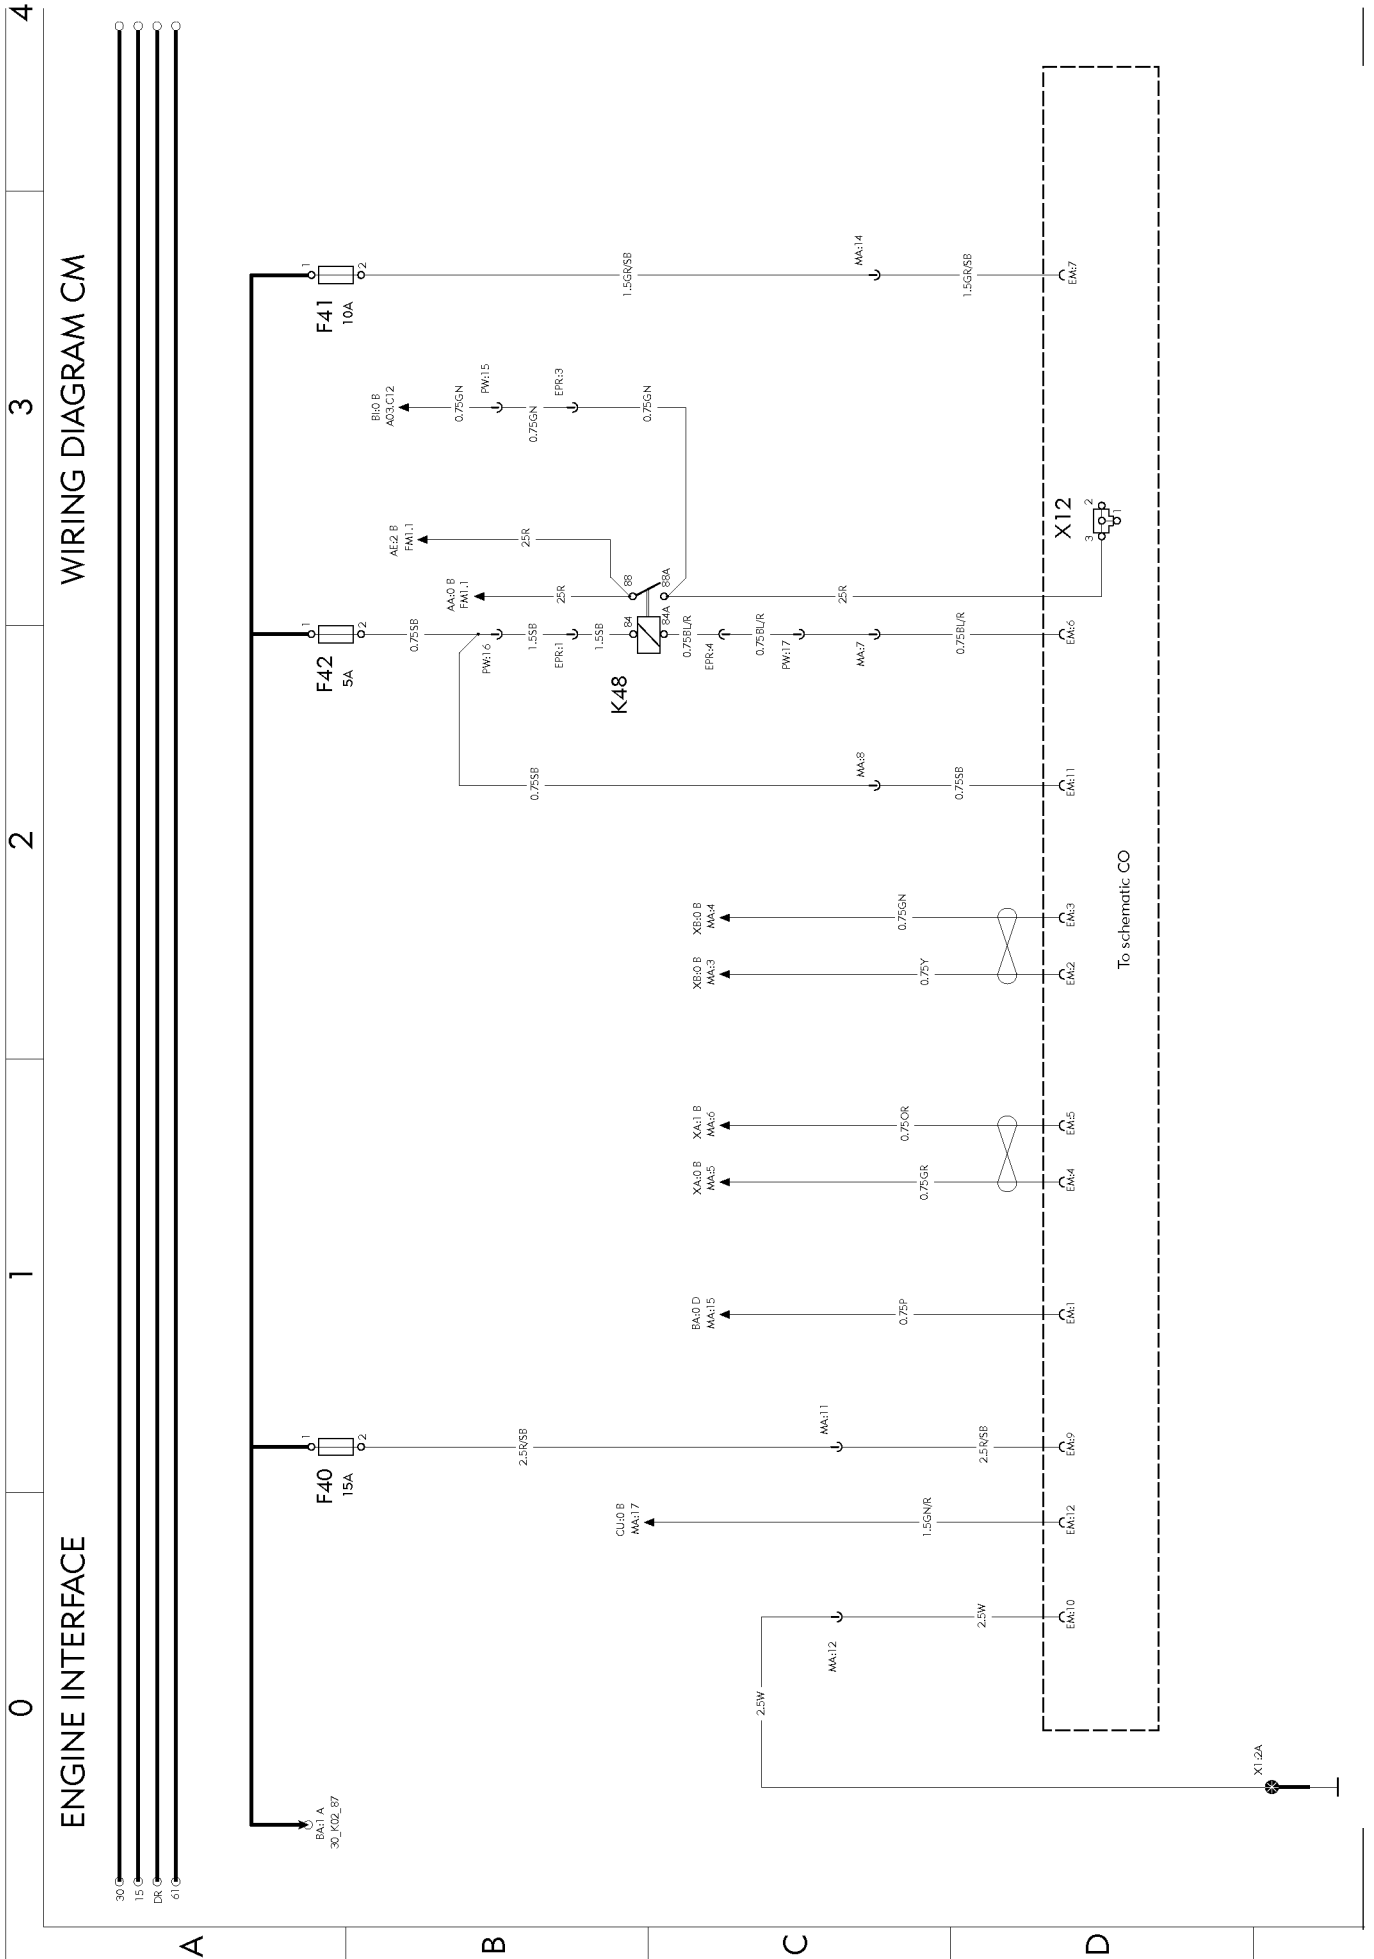


0 1 2 3 4

ENGINE

D9A / D12D


WIRING DIAGRAM CO

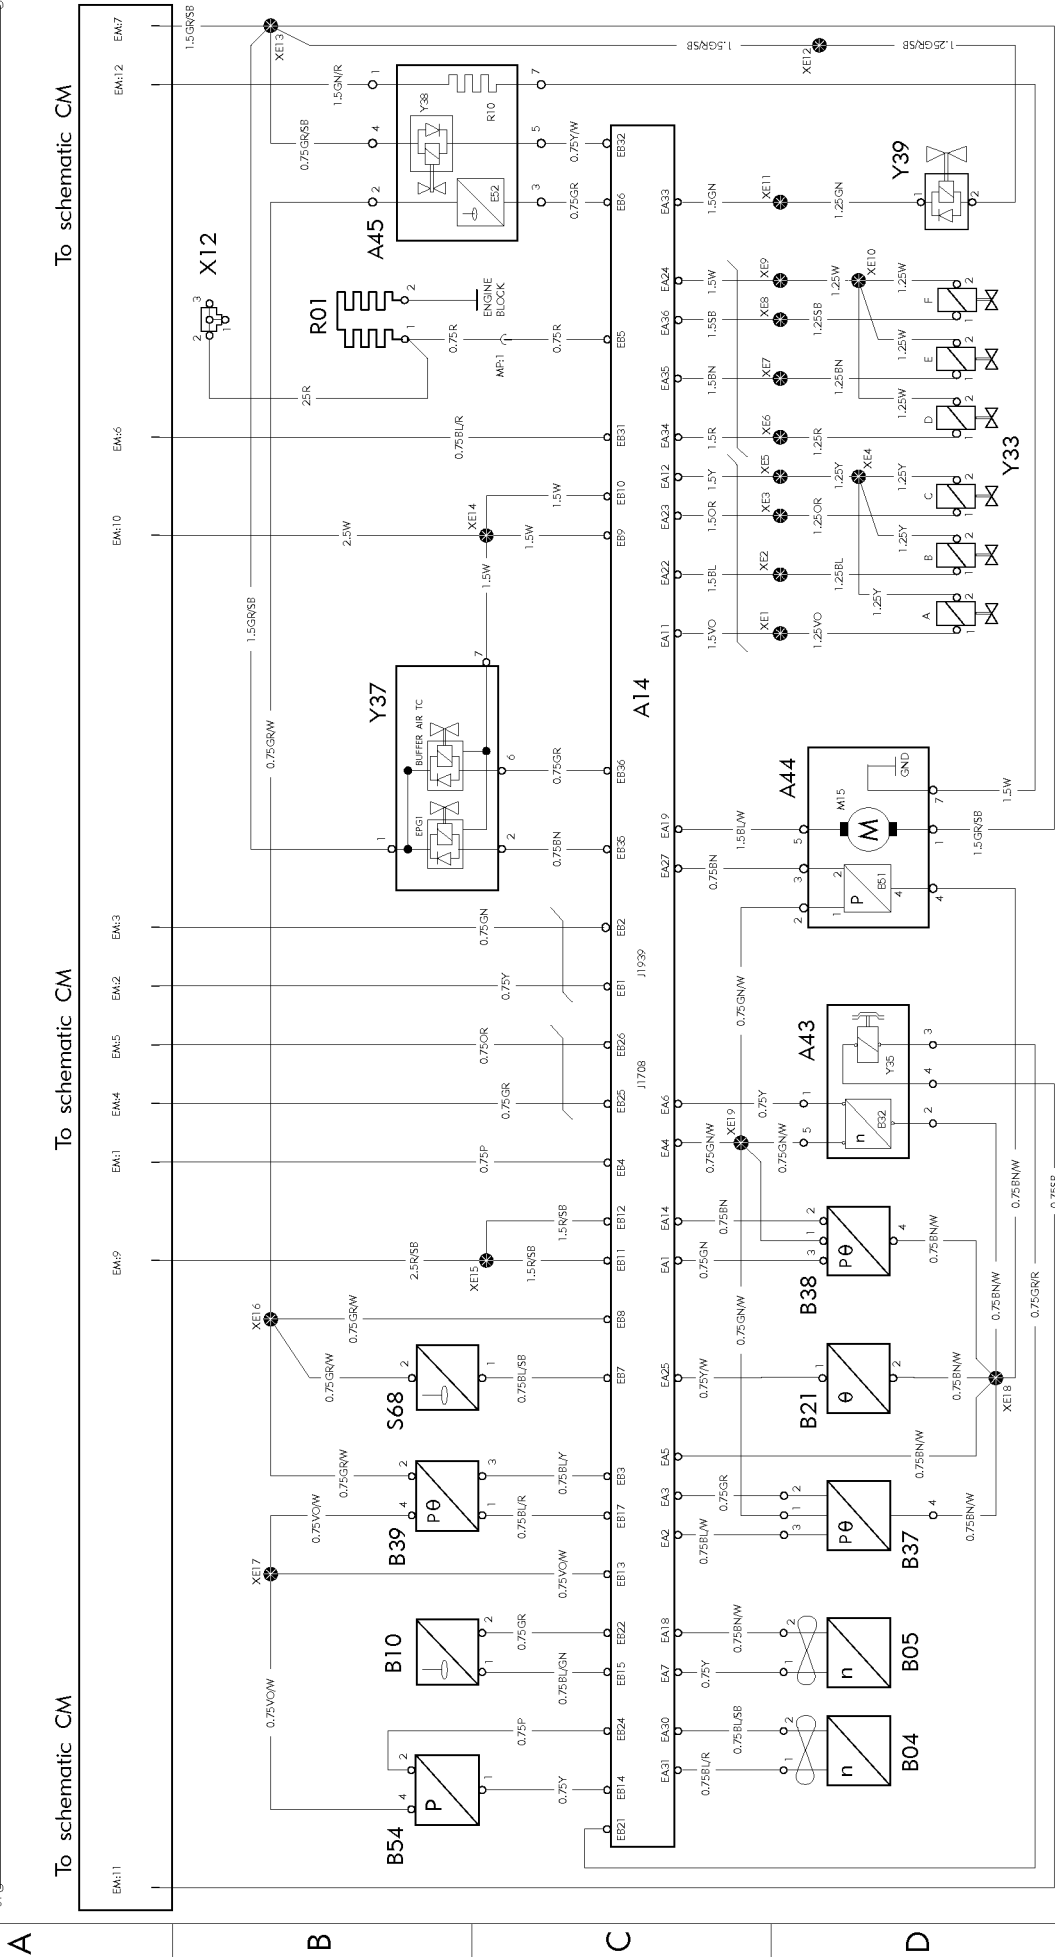



To schematic CM


To schematic CM


To schematic CM

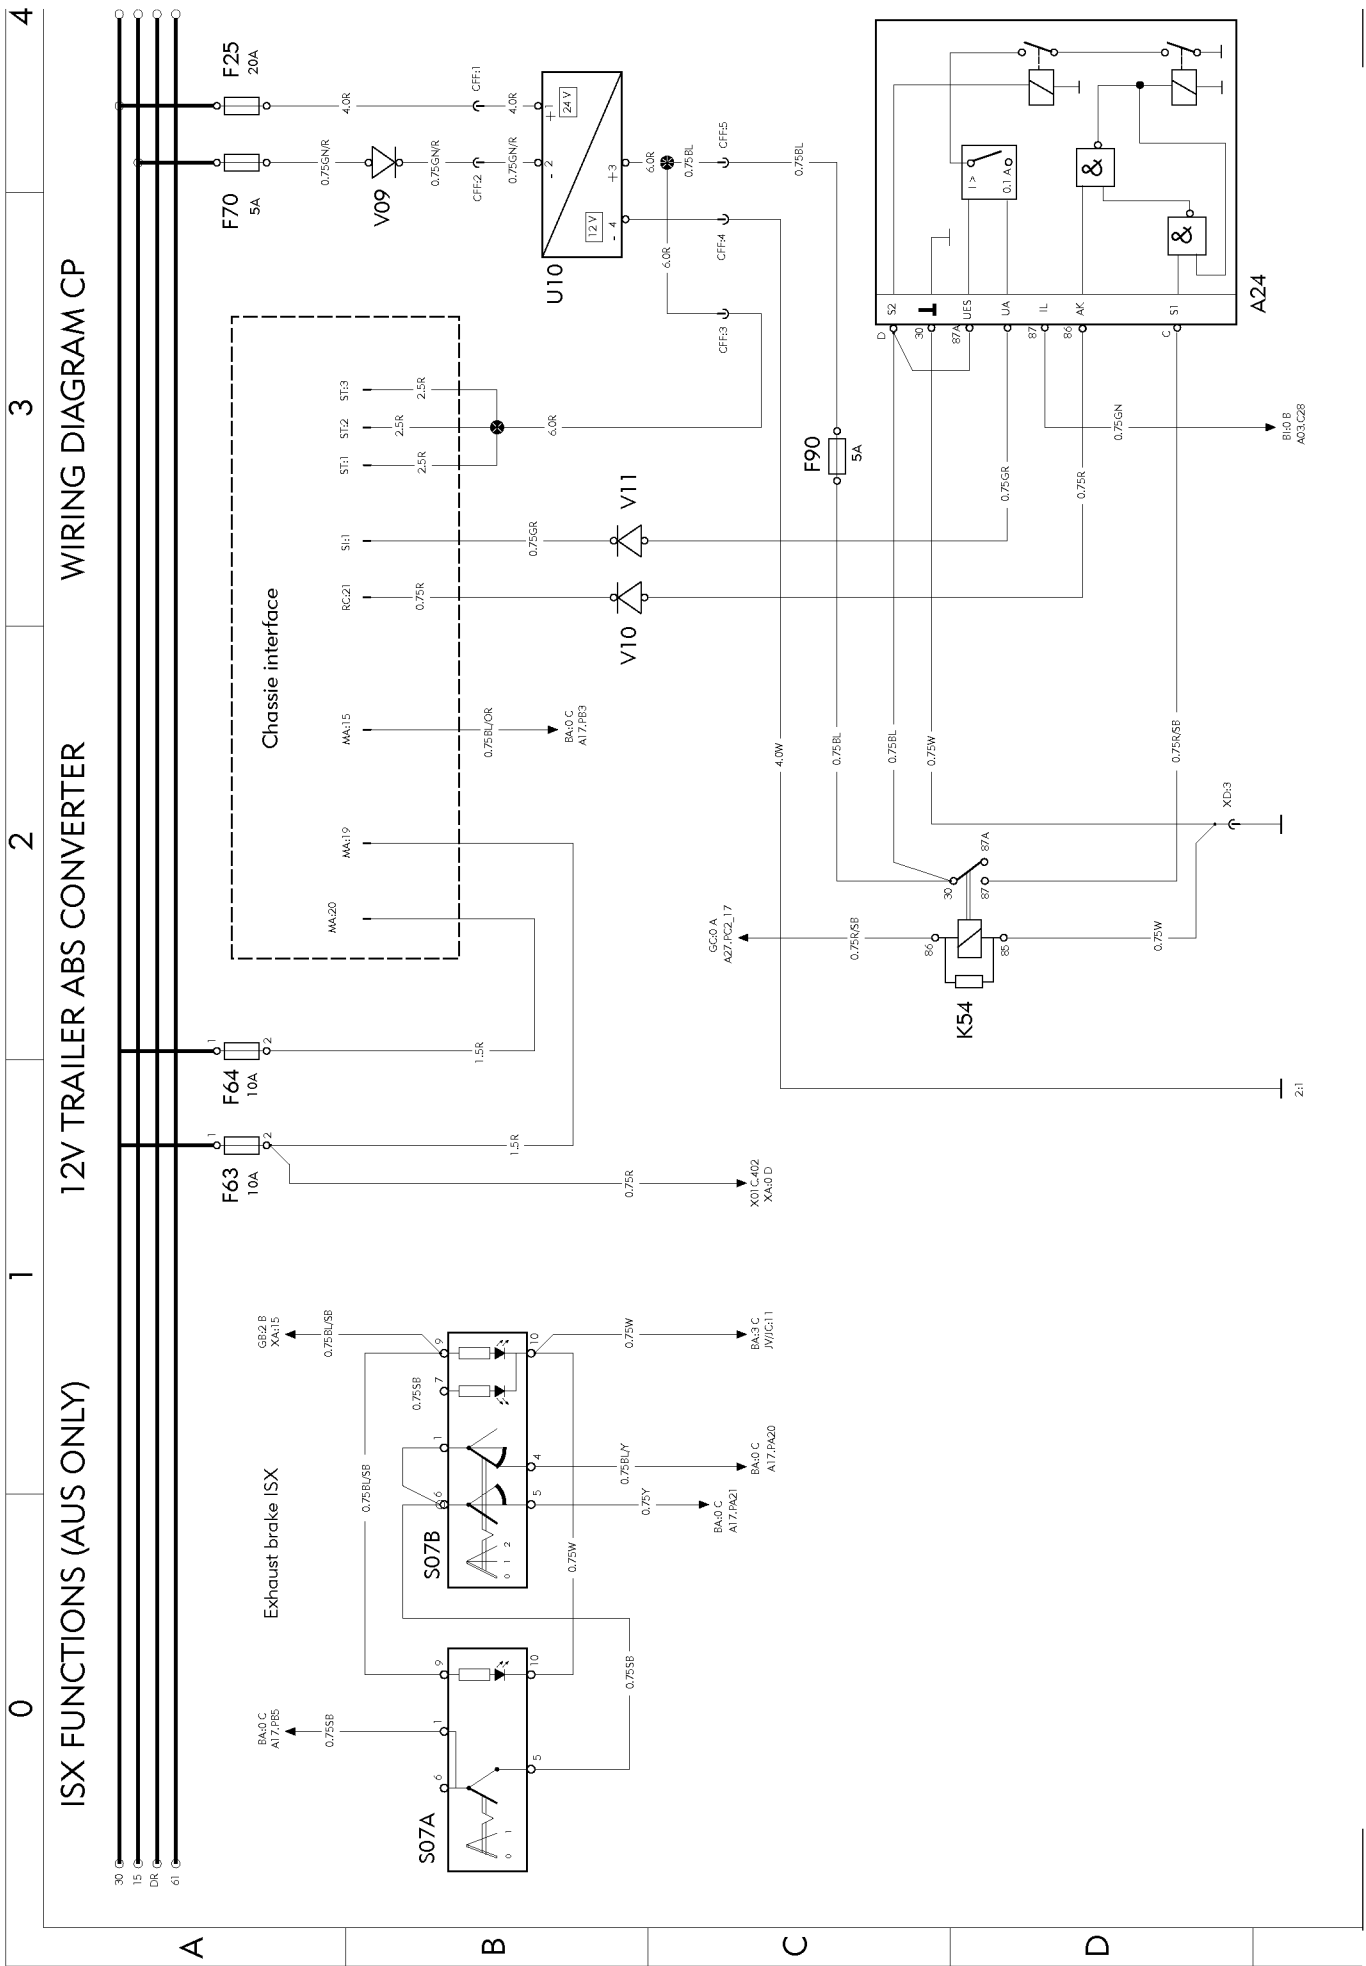


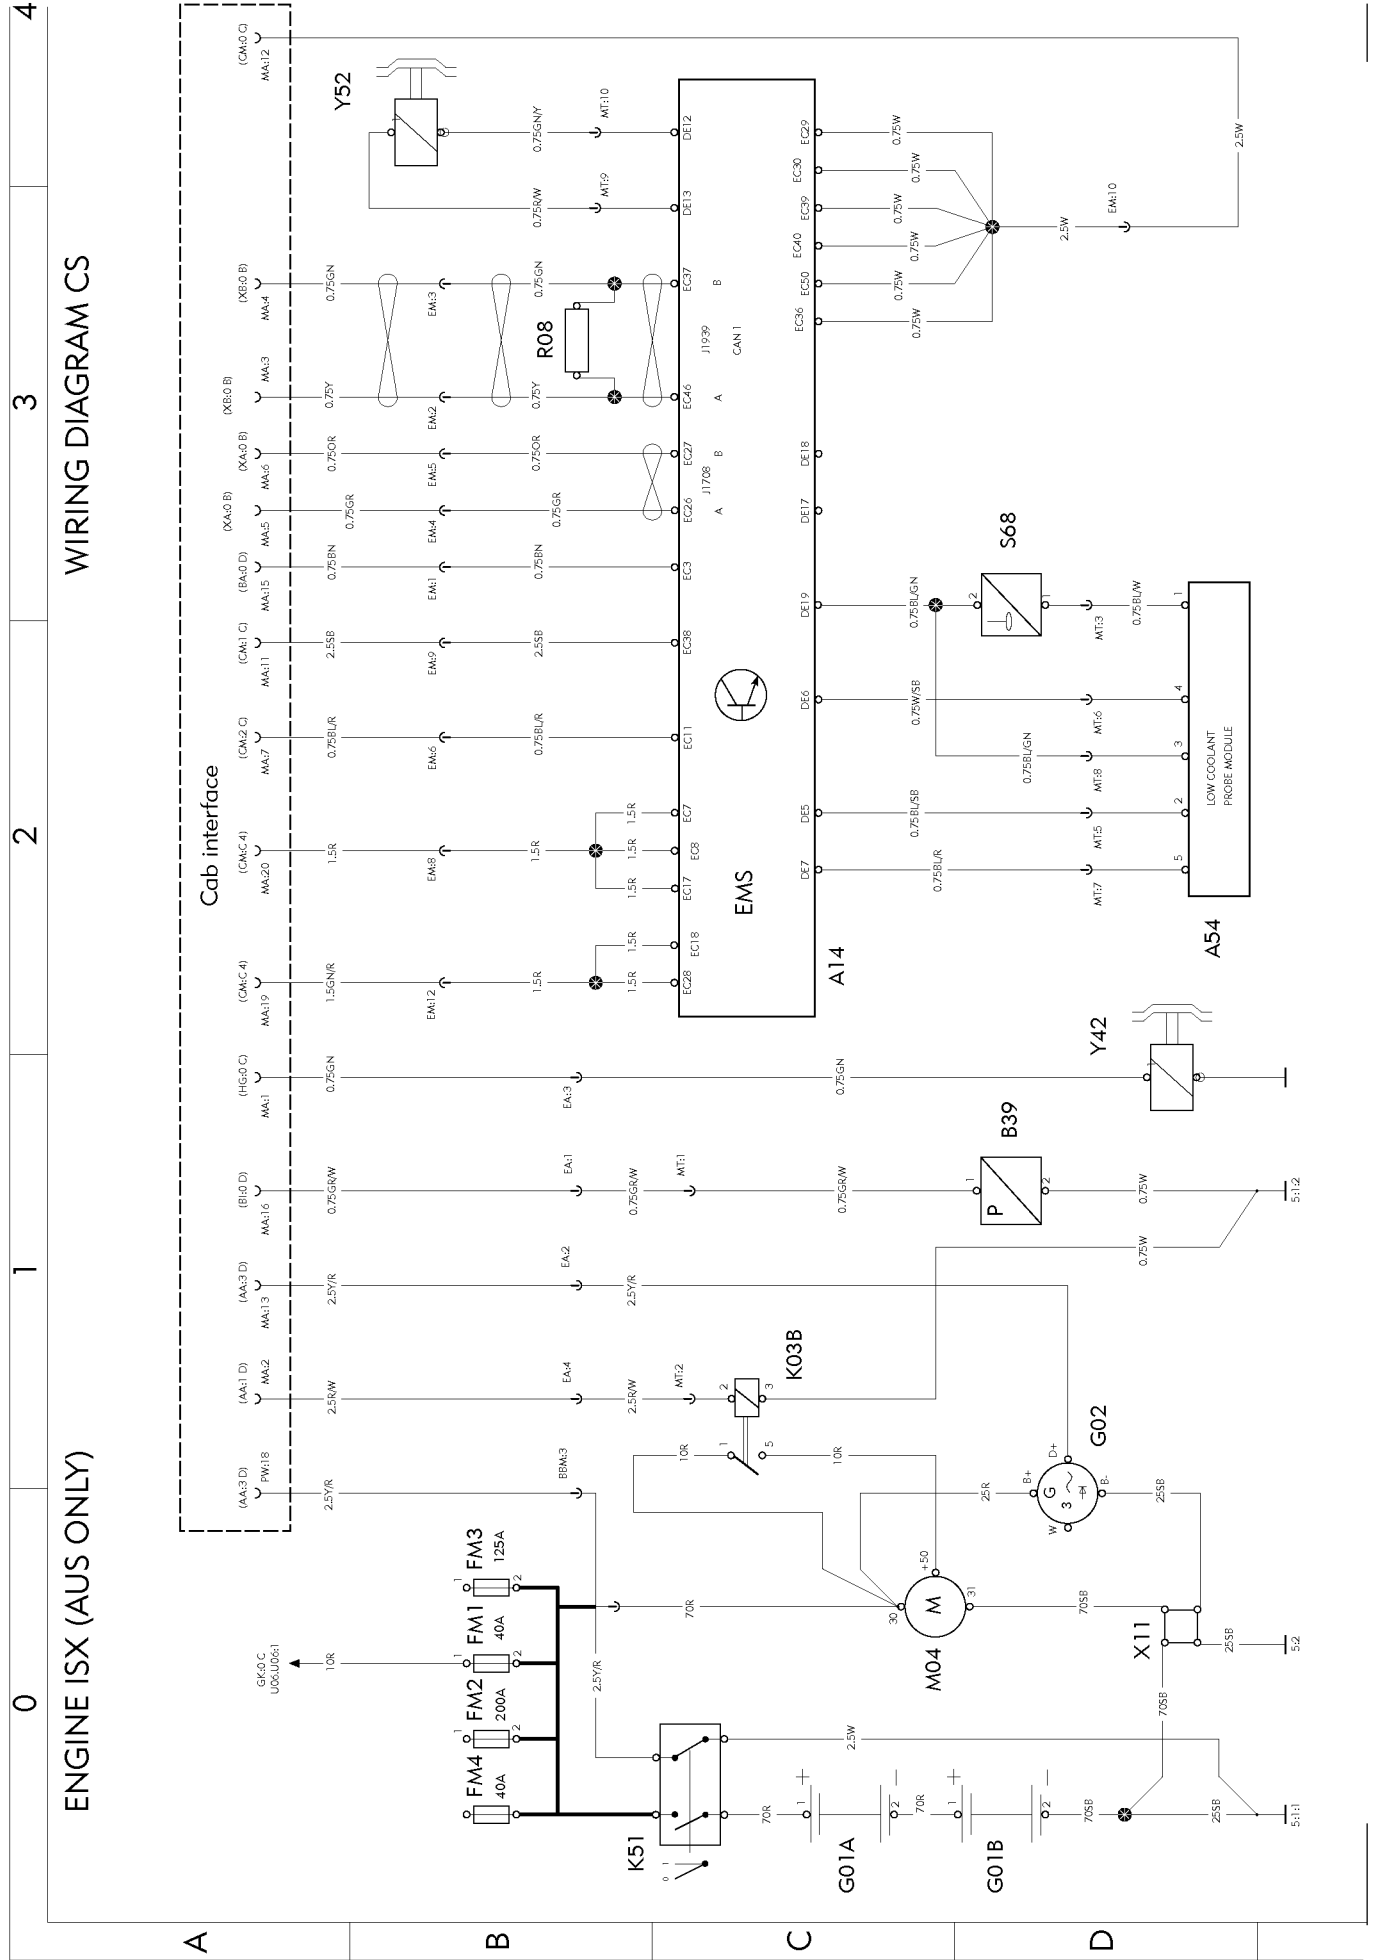


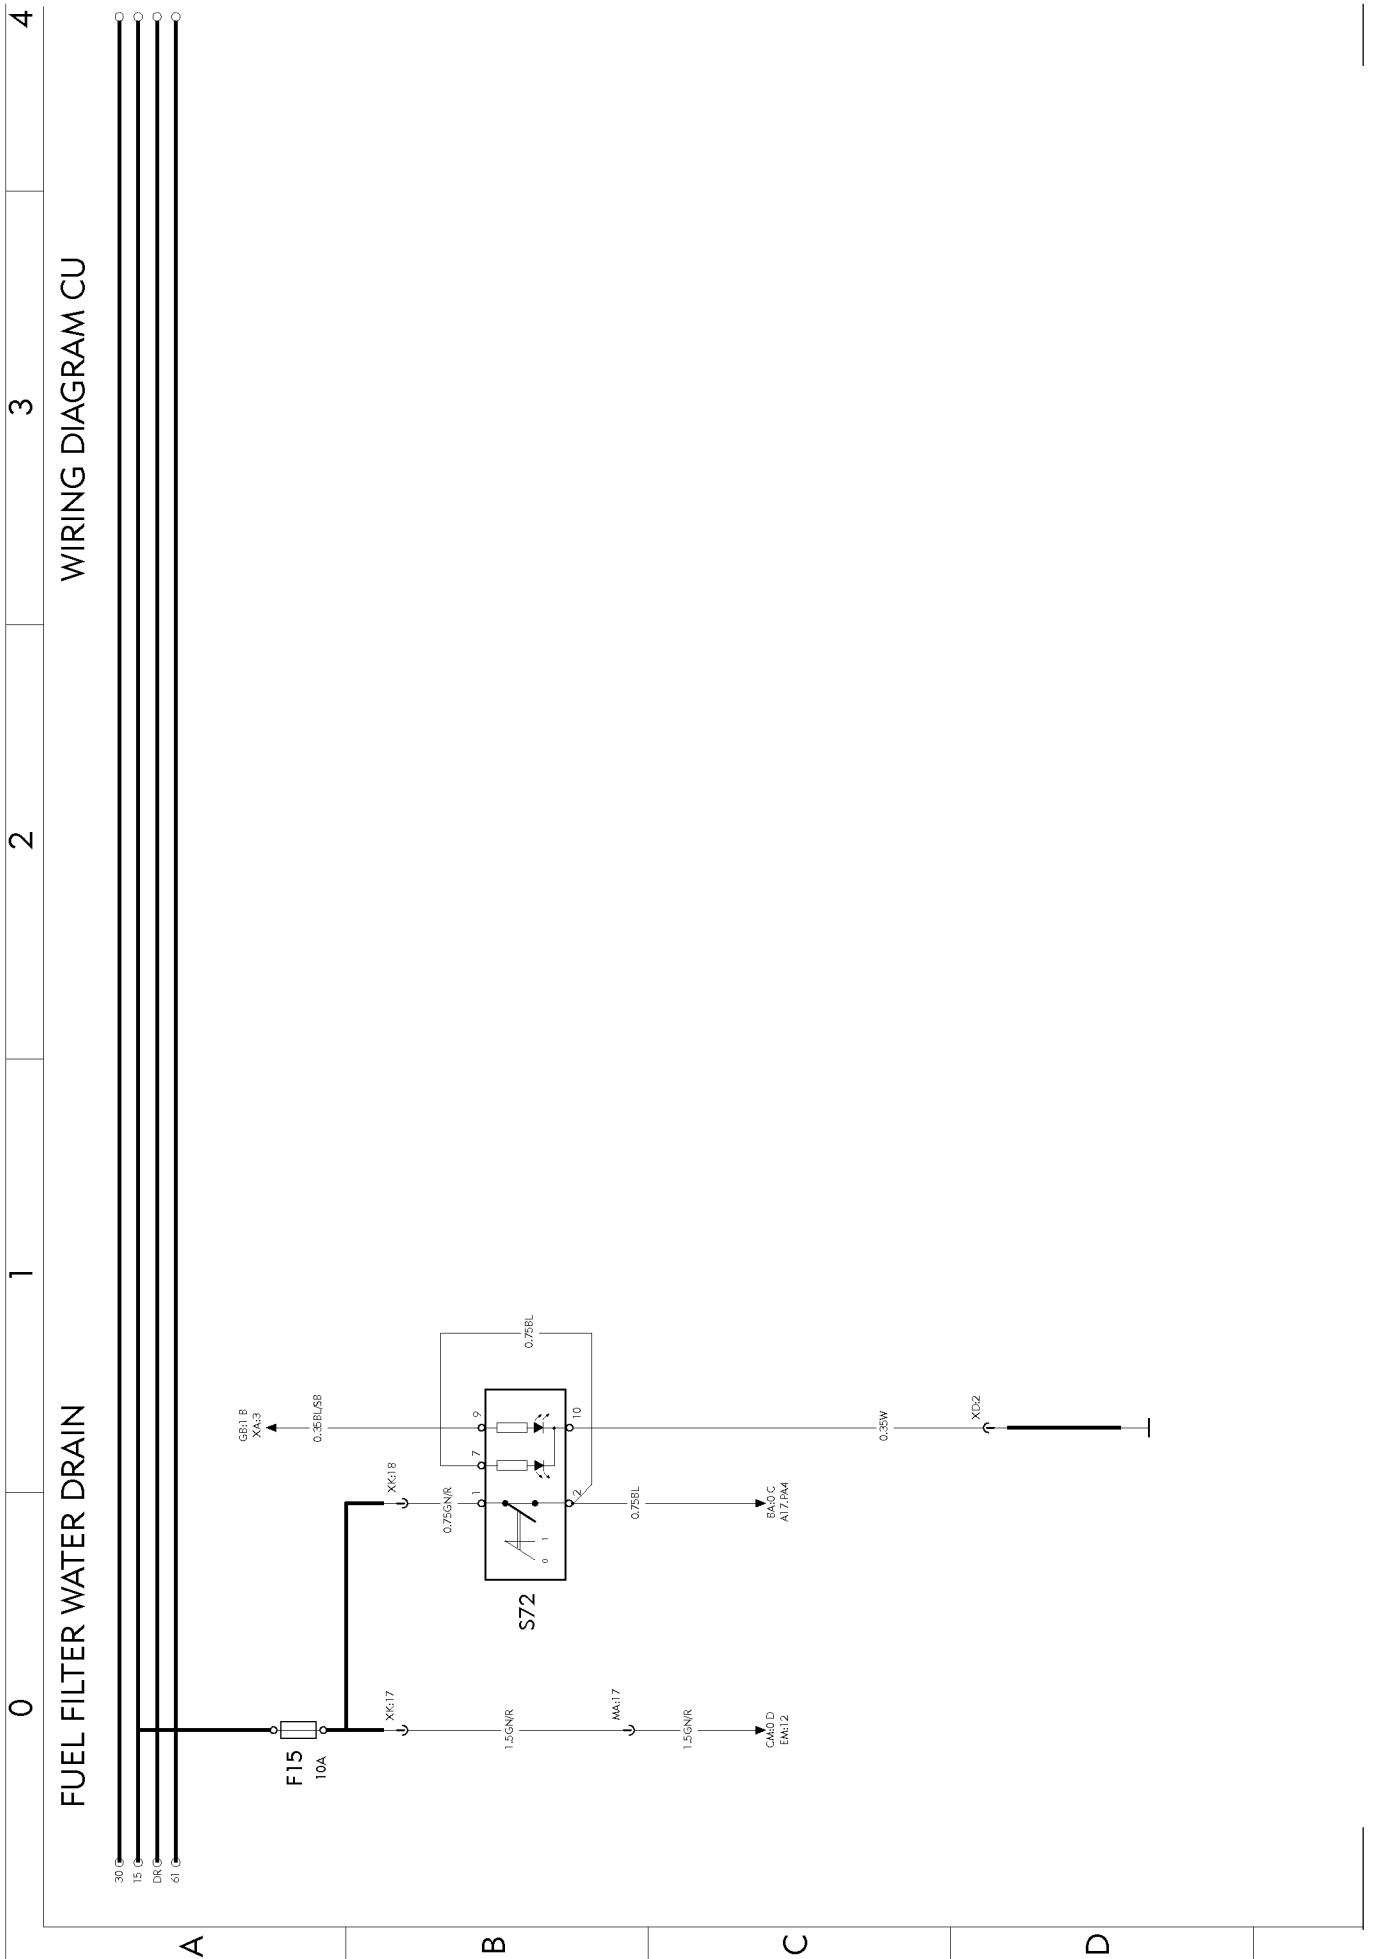


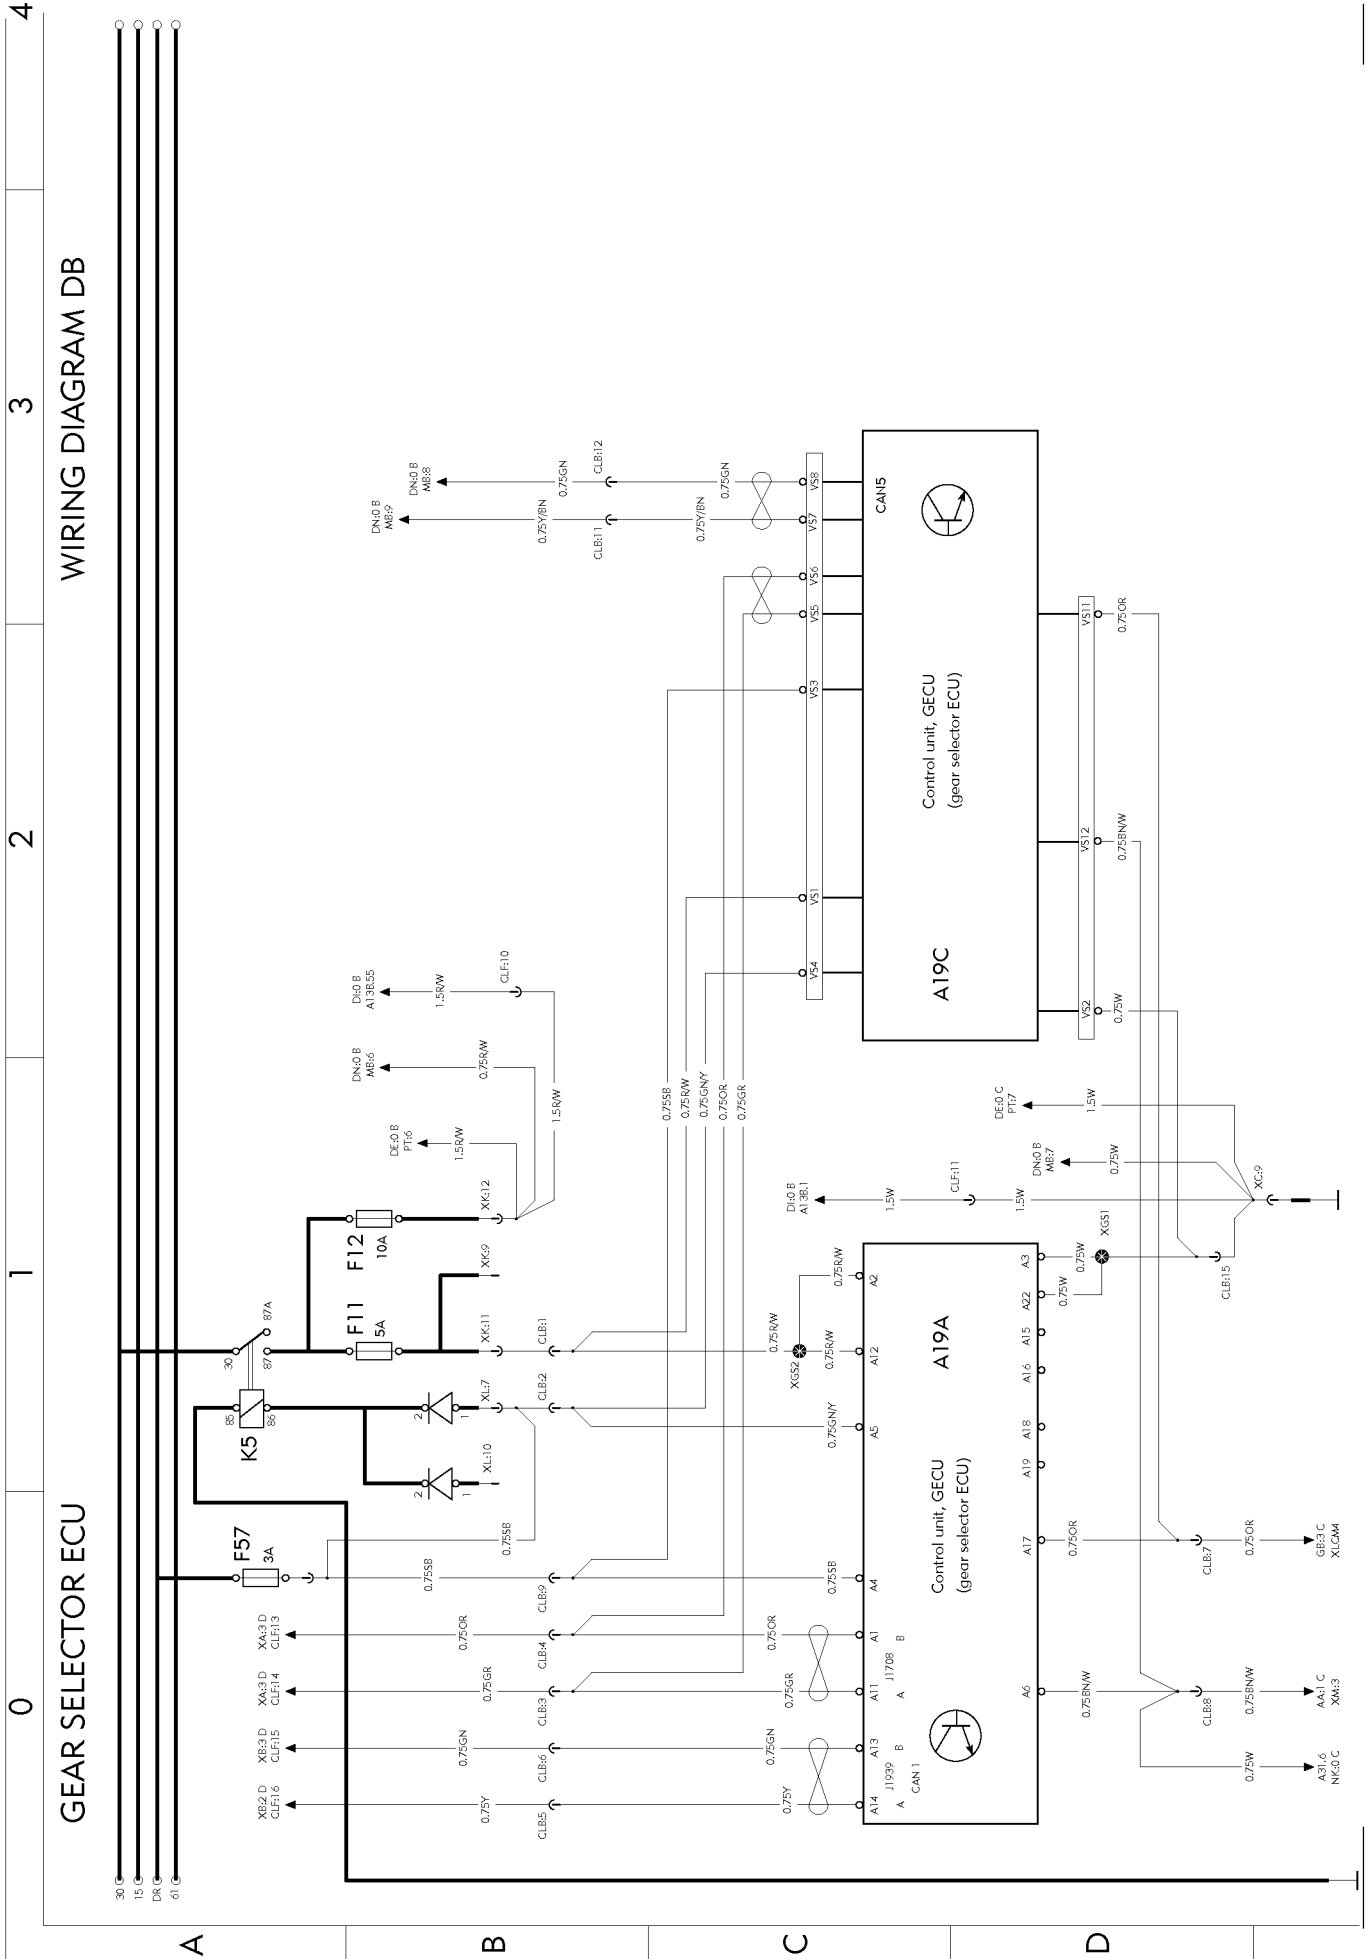


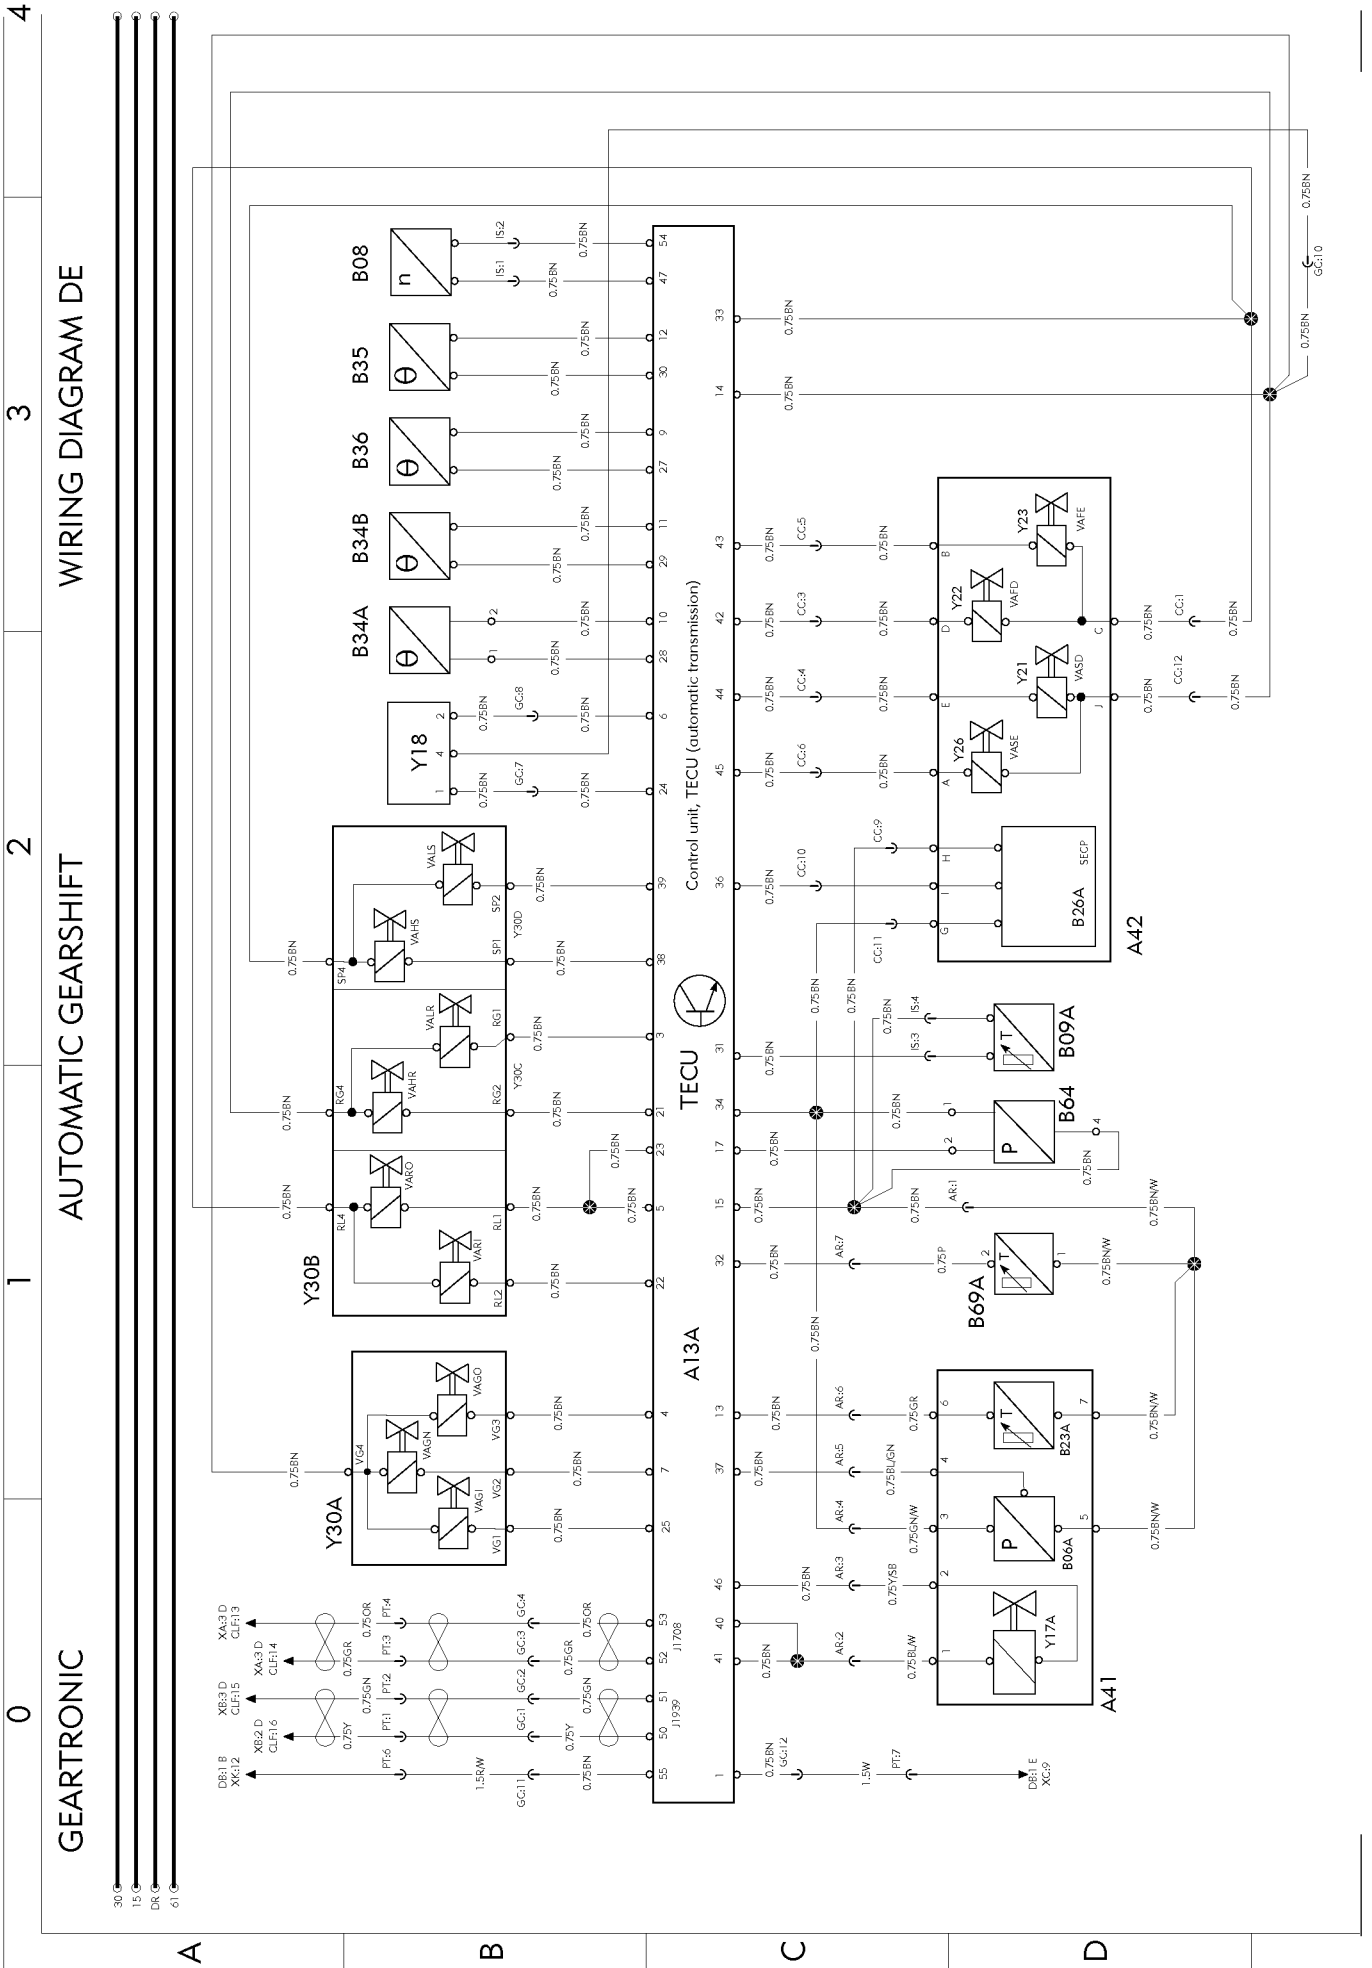


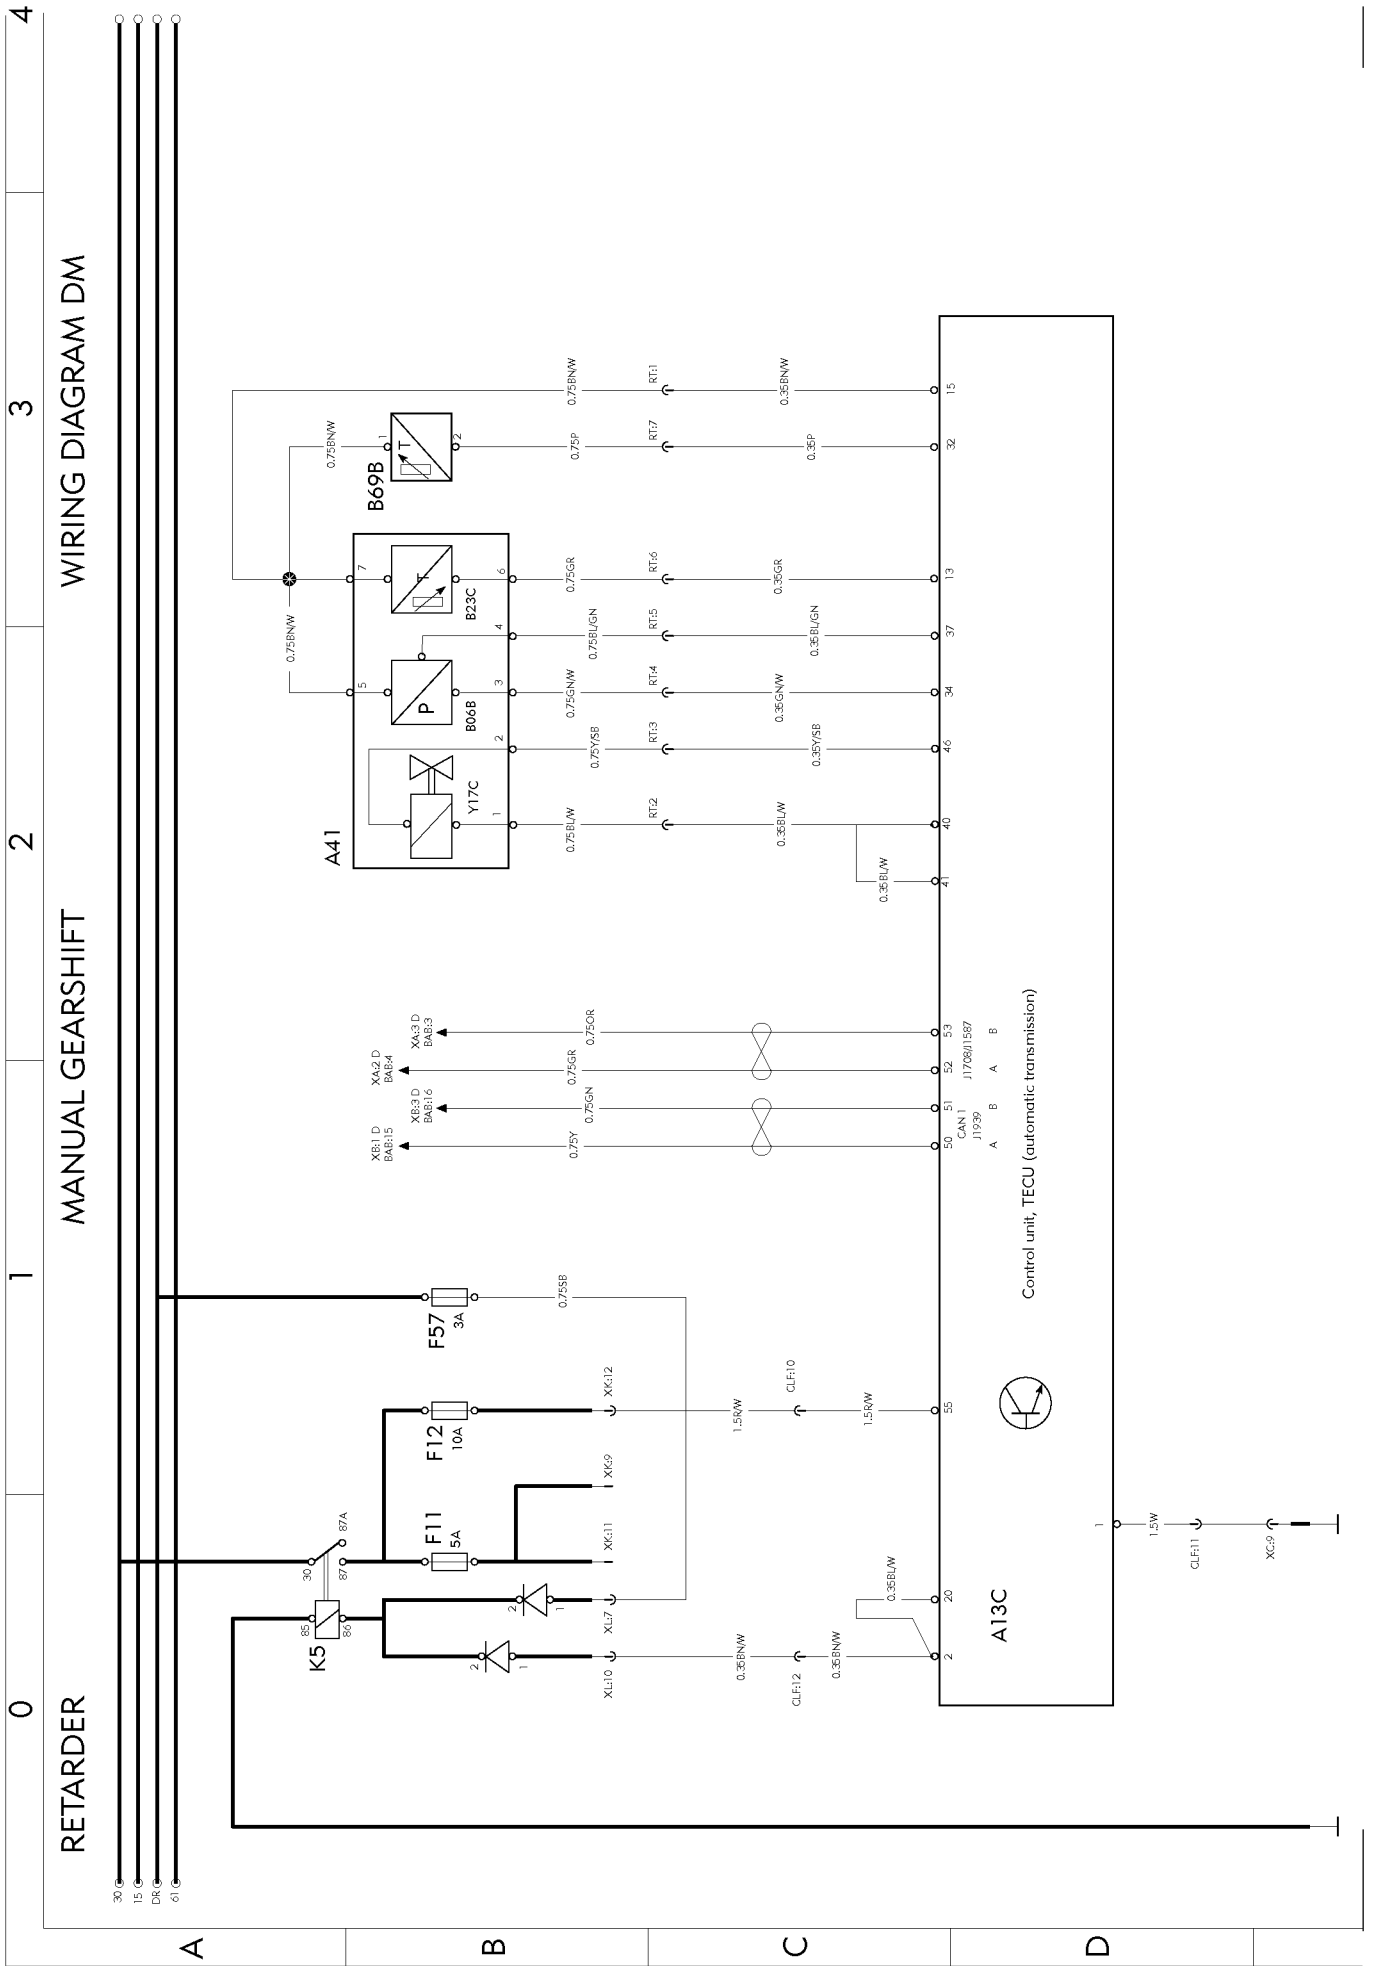


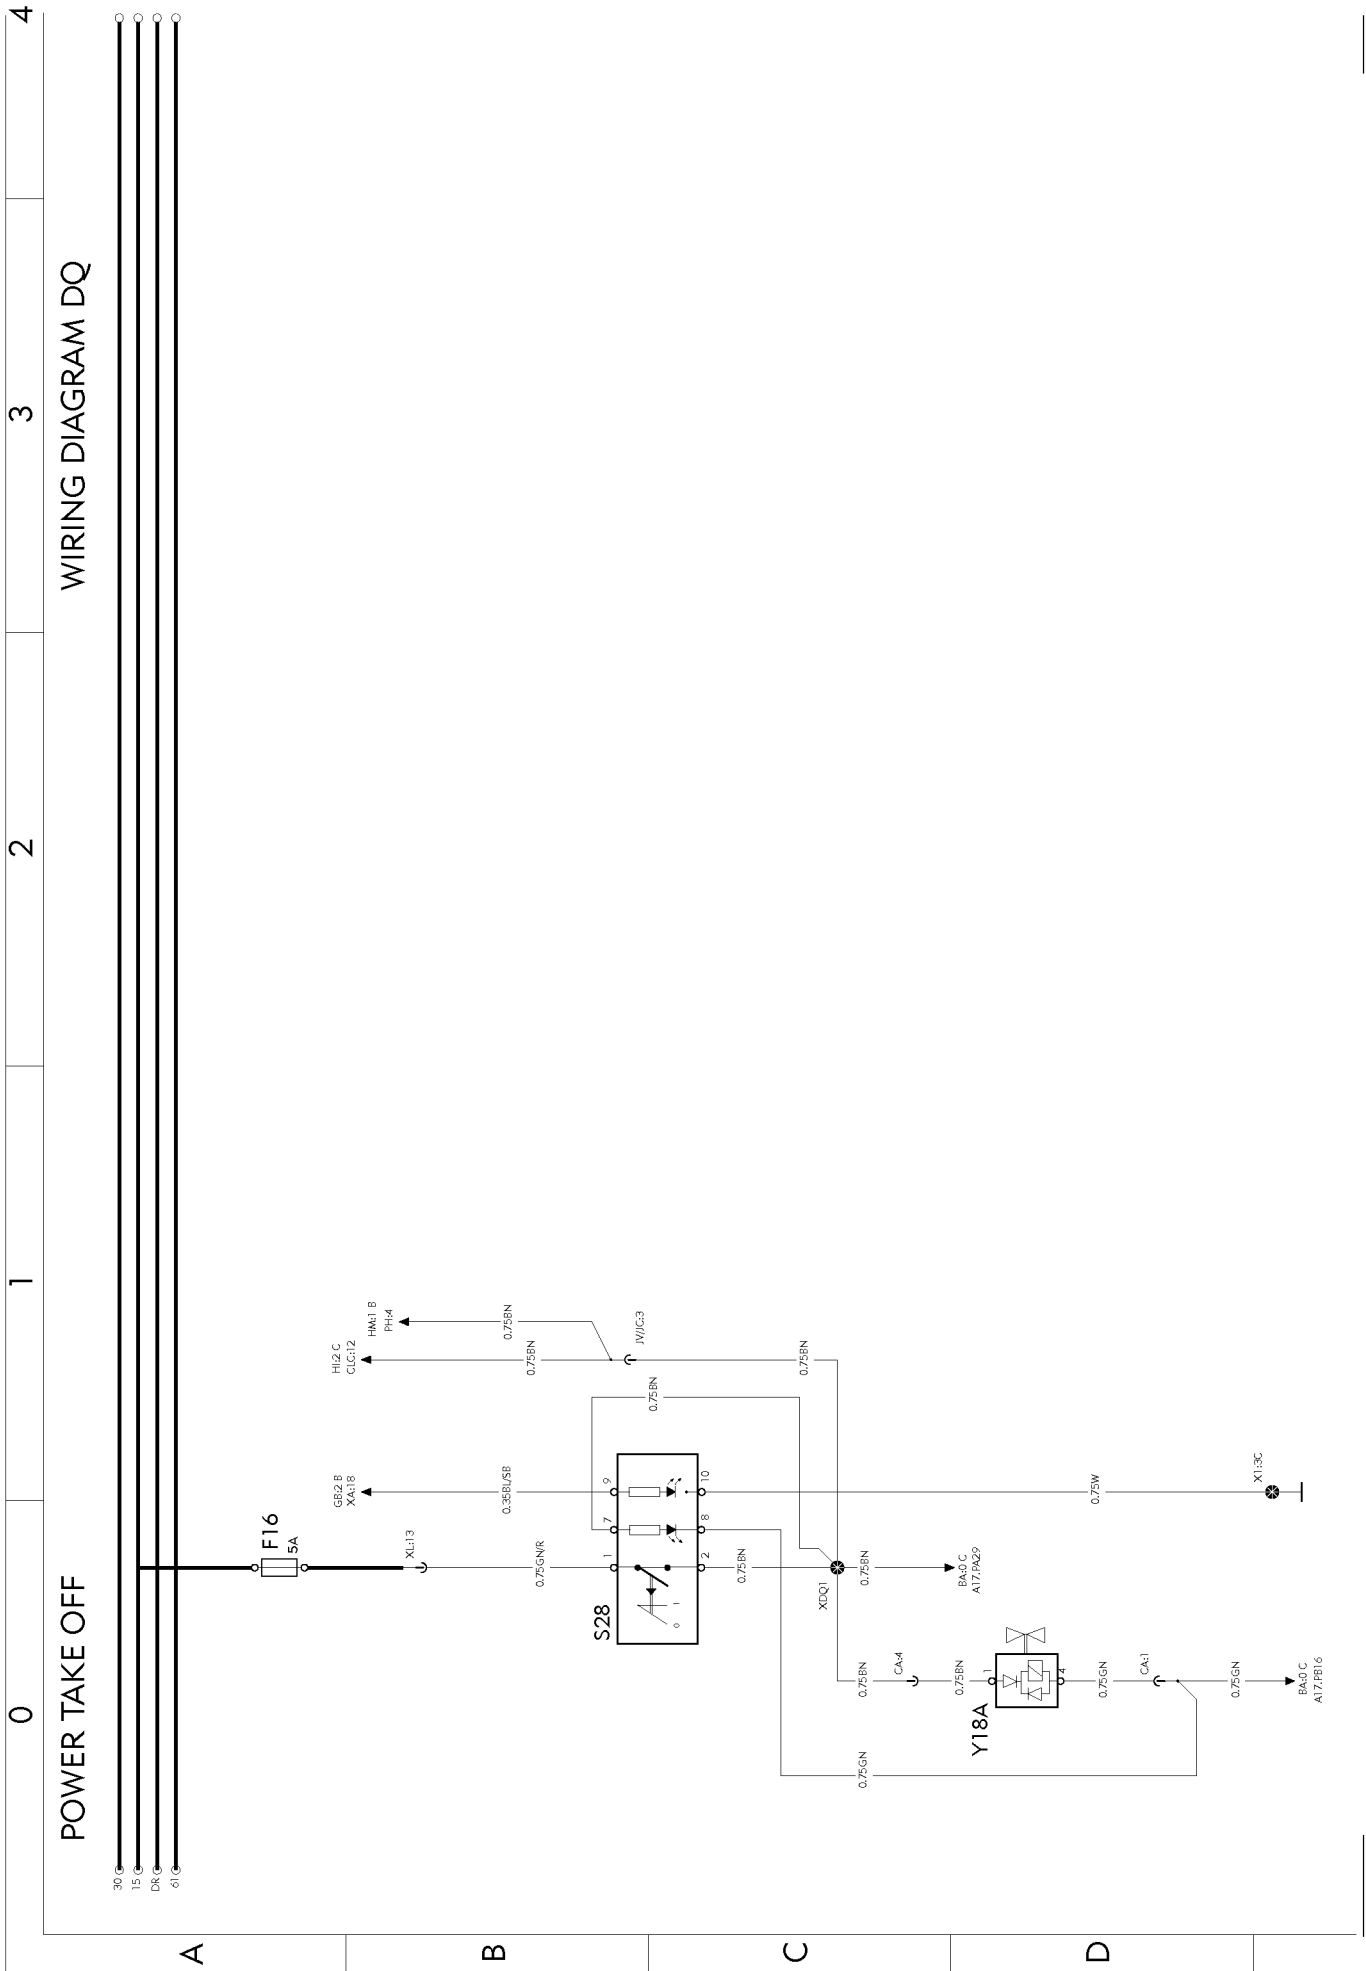


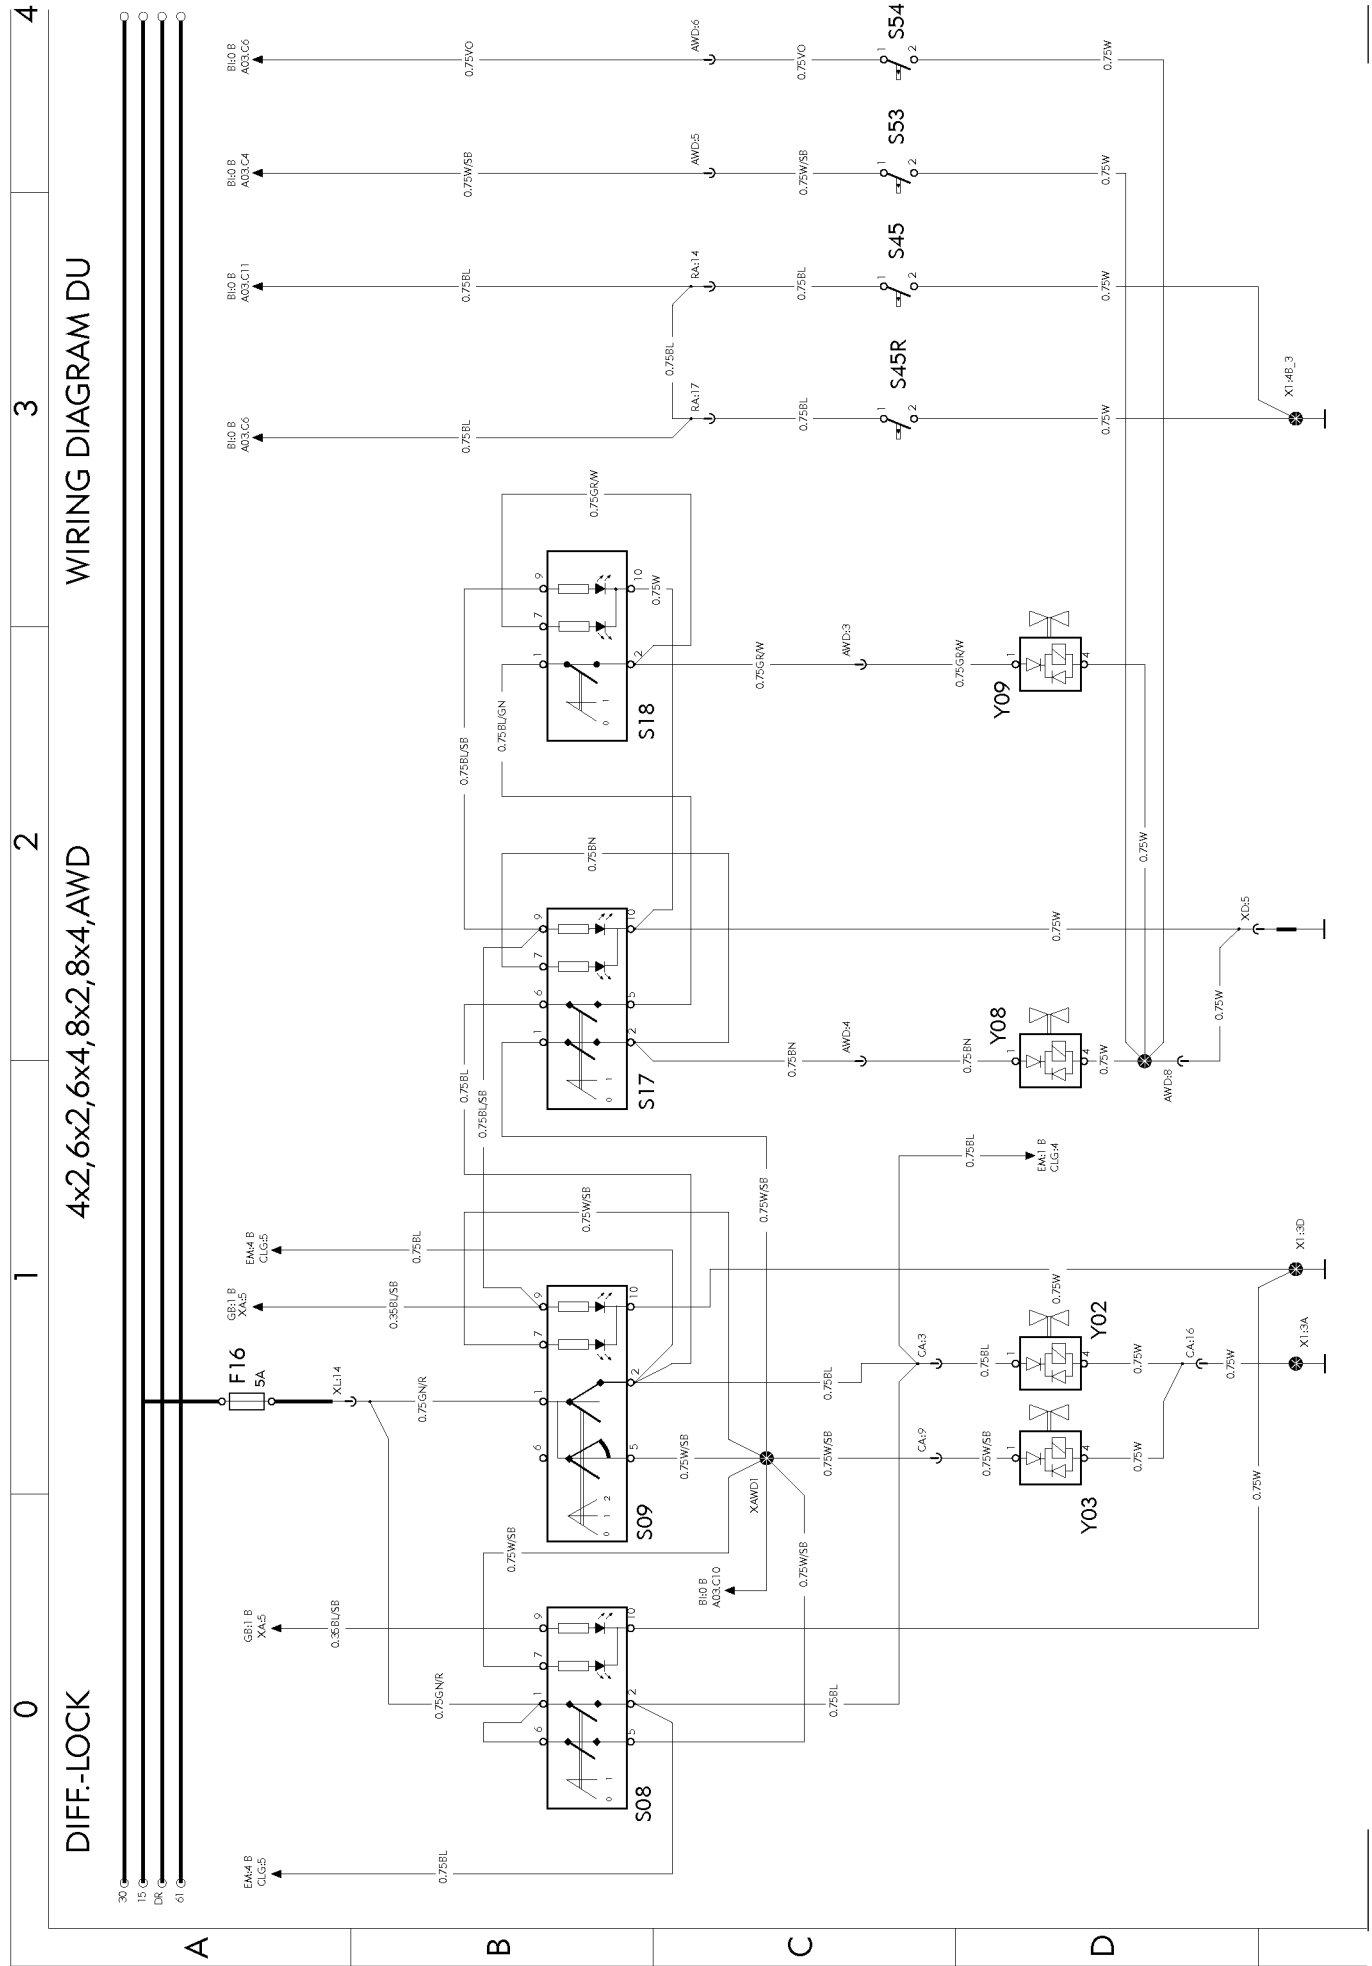


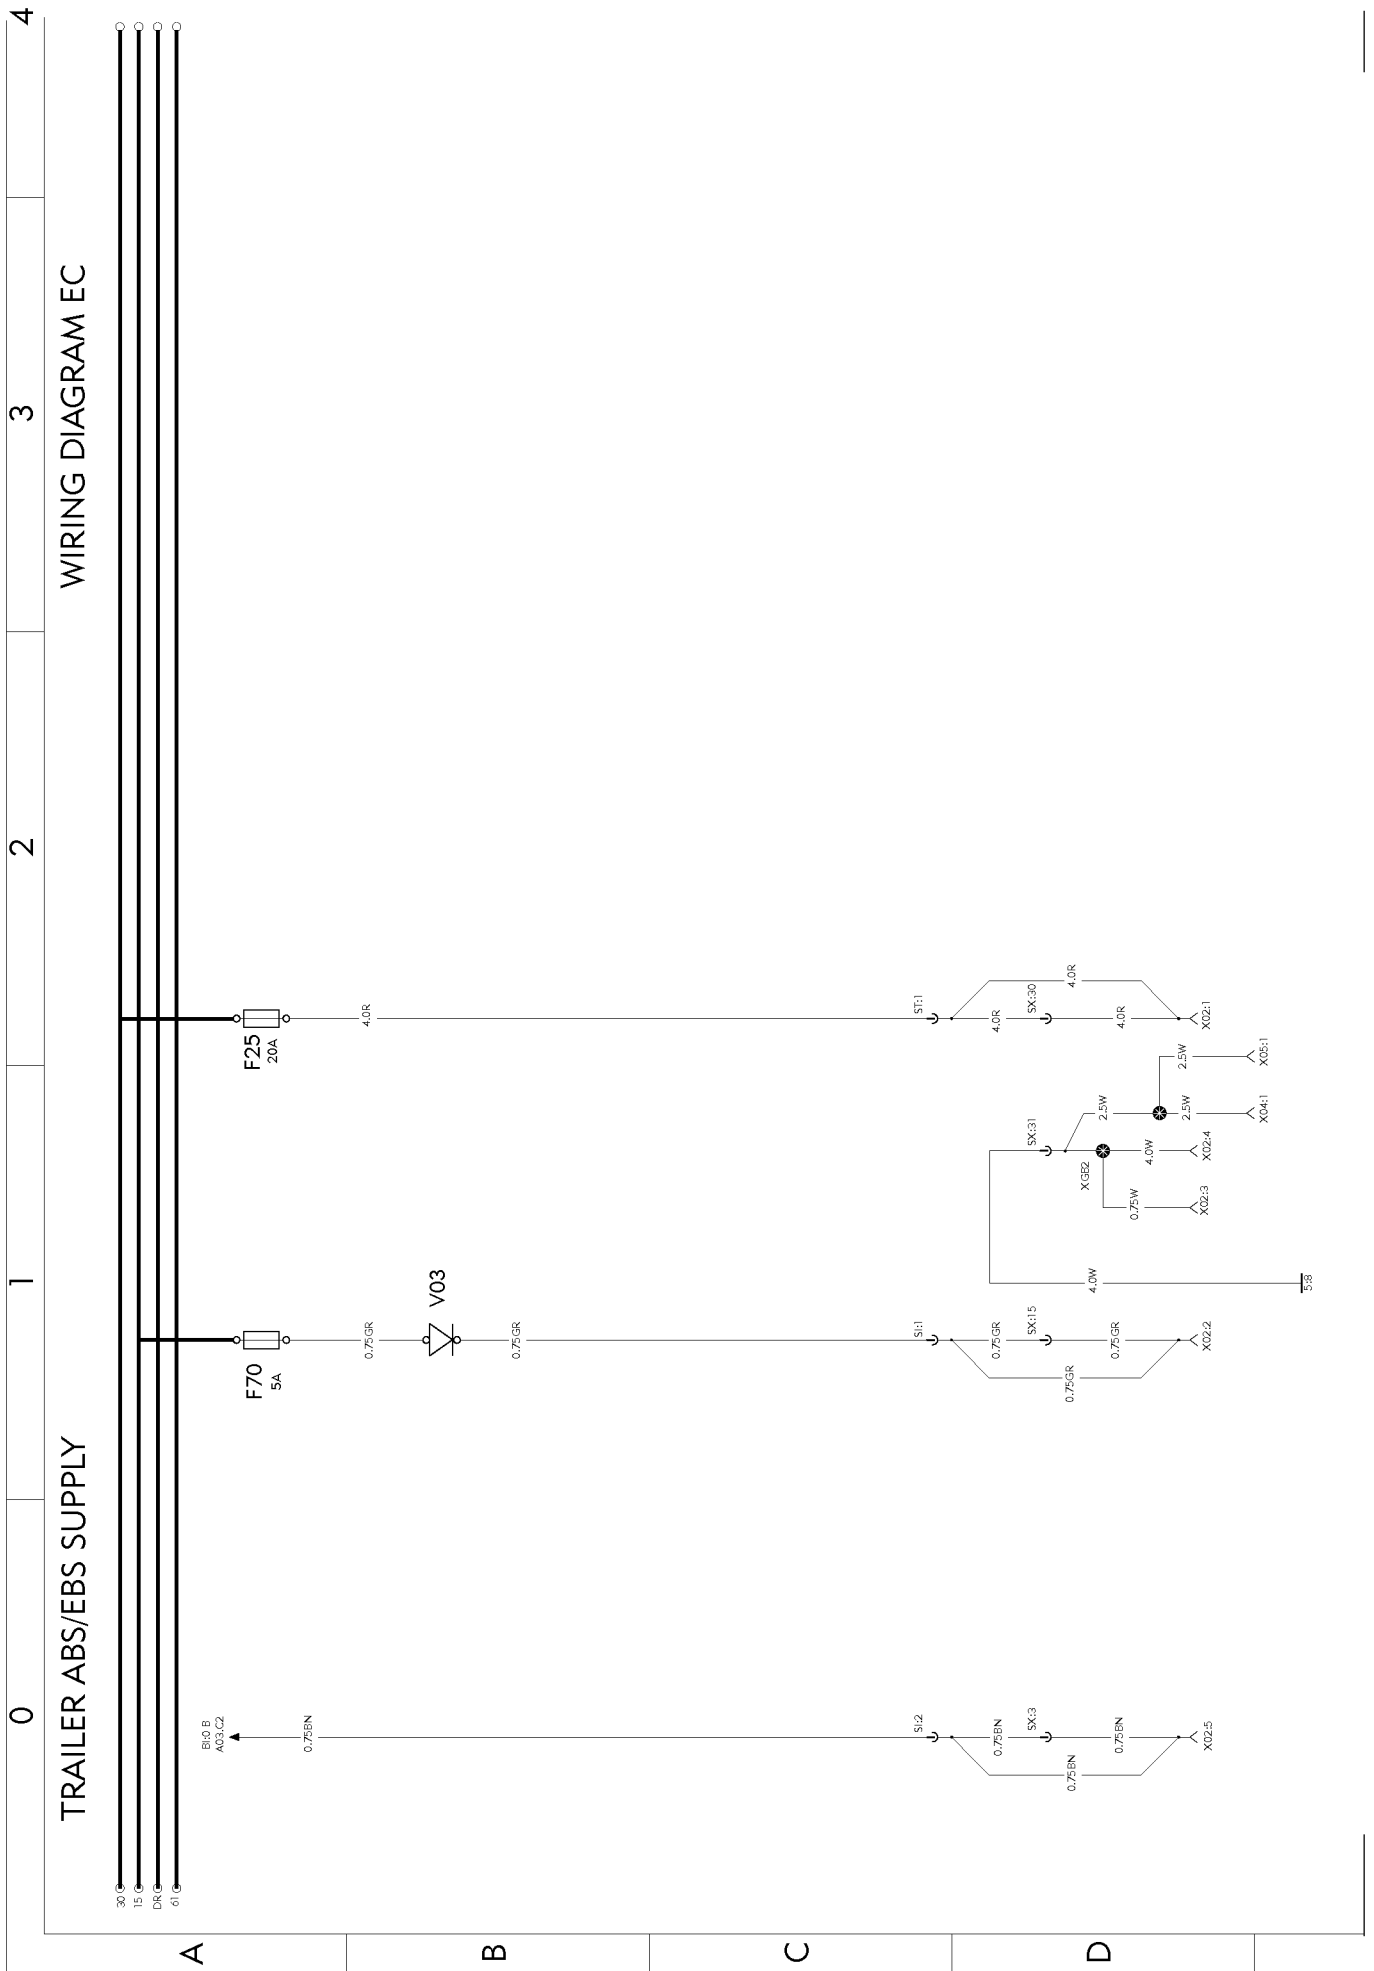


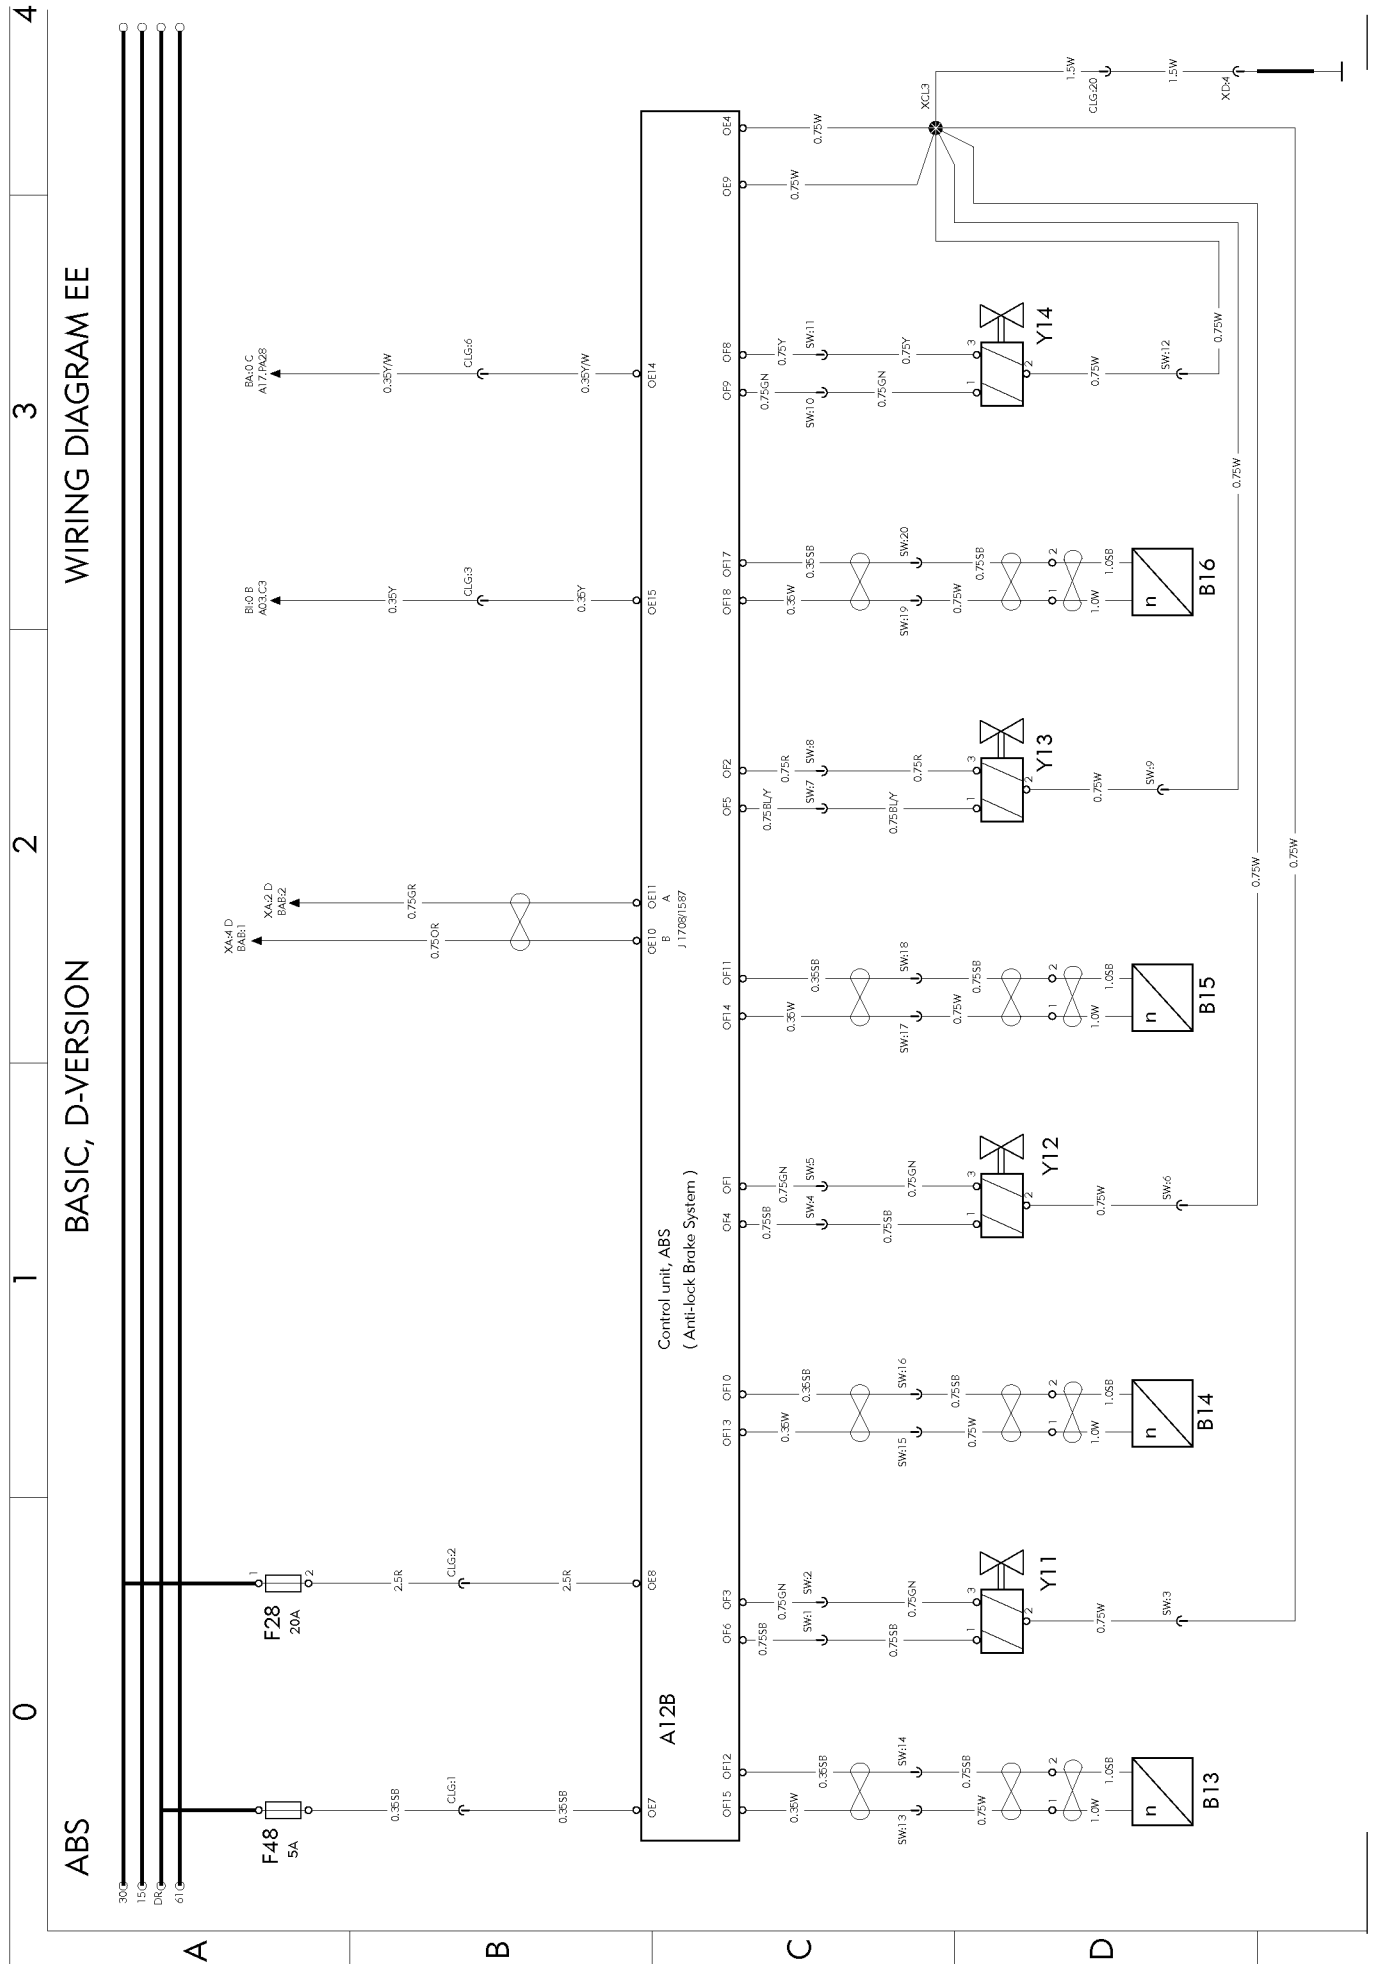


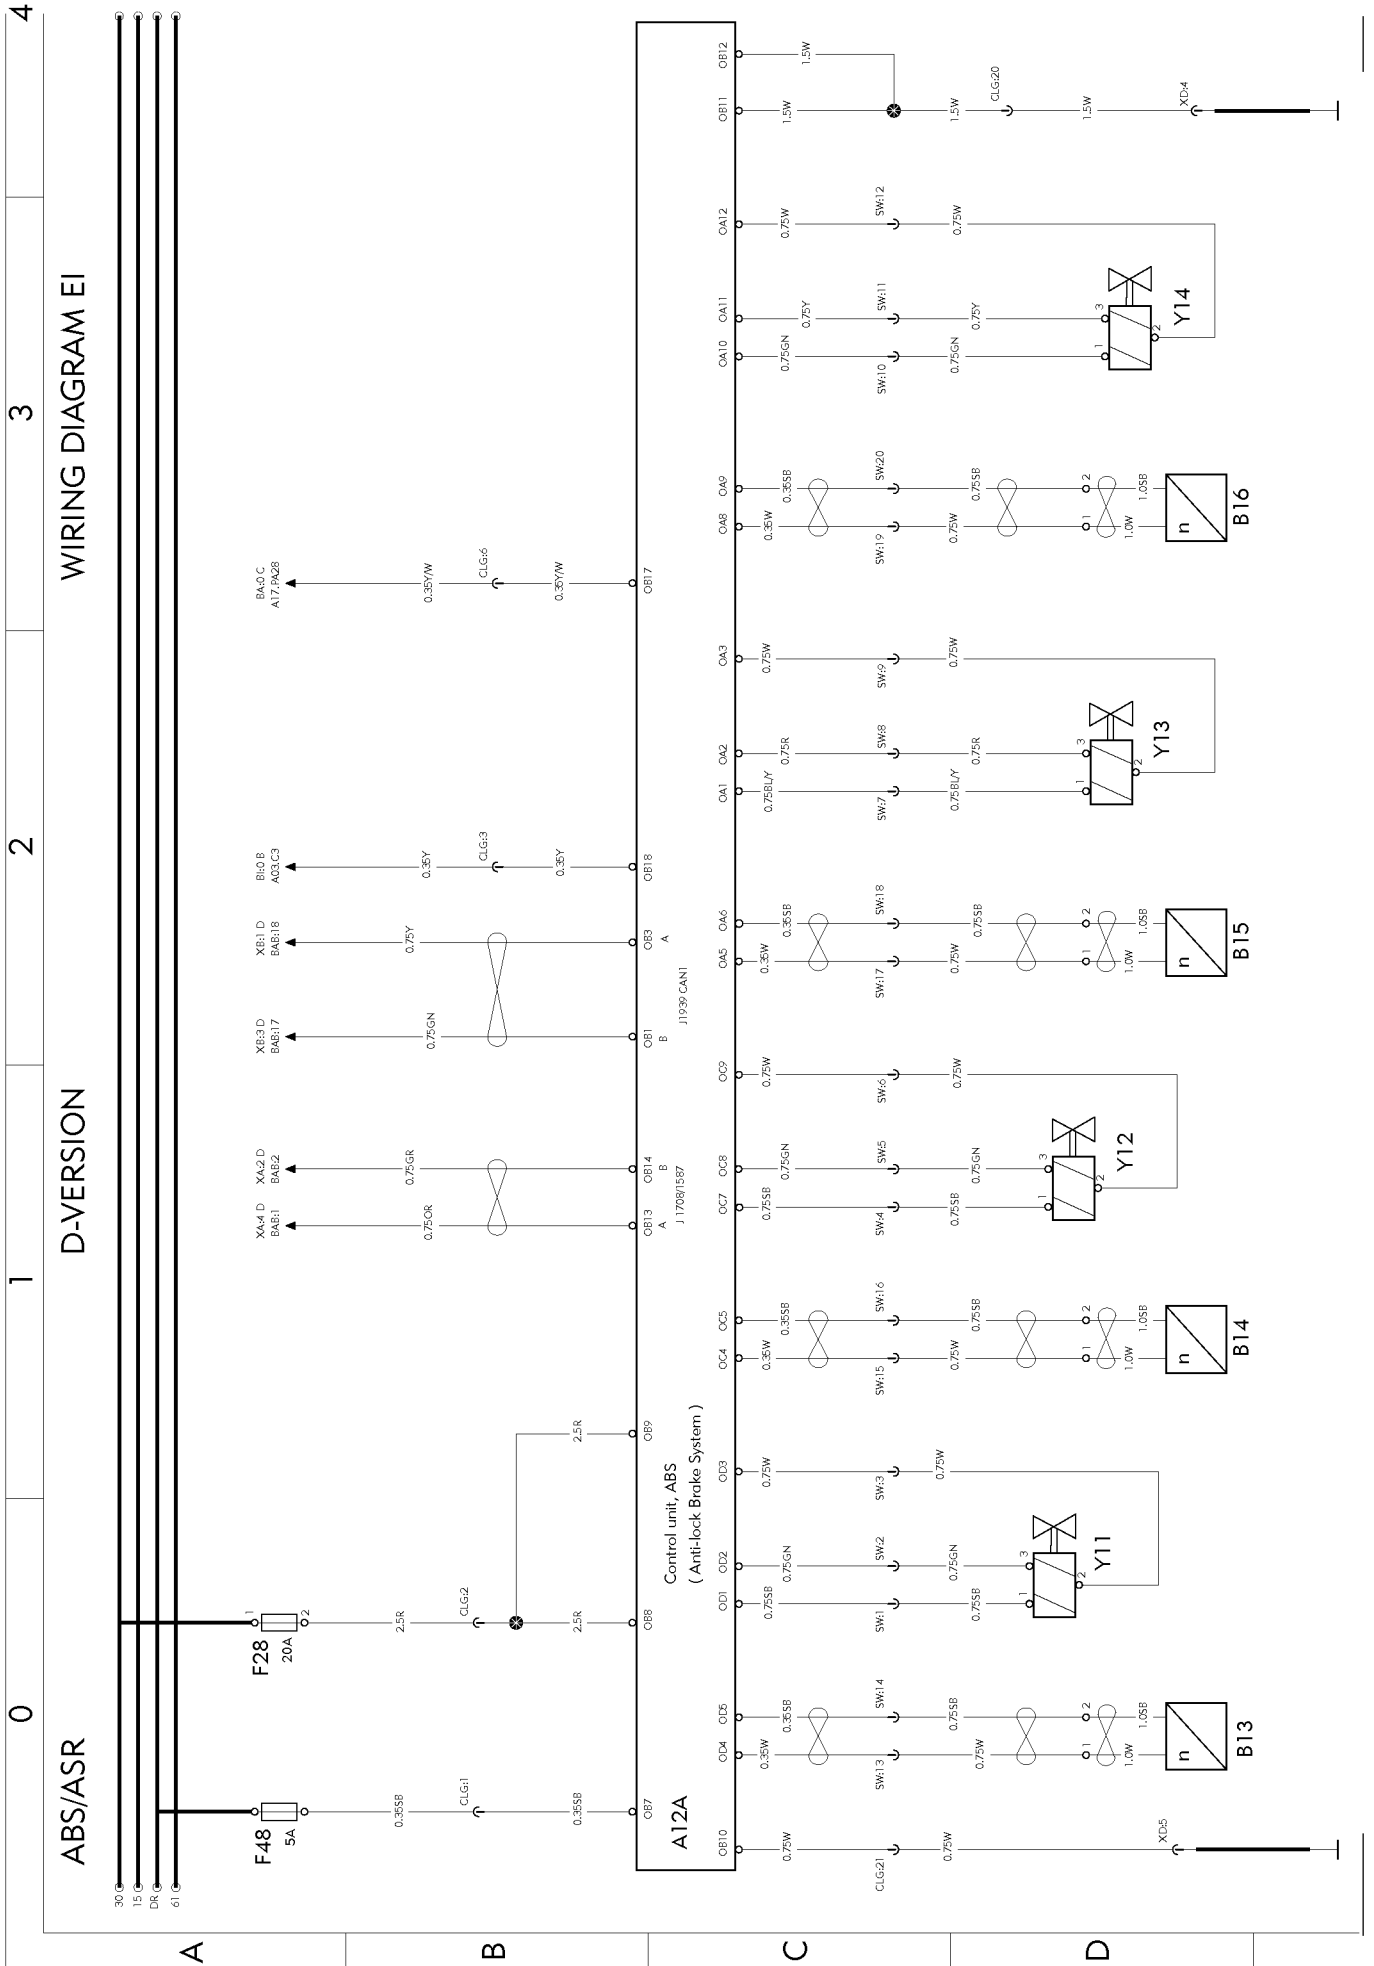


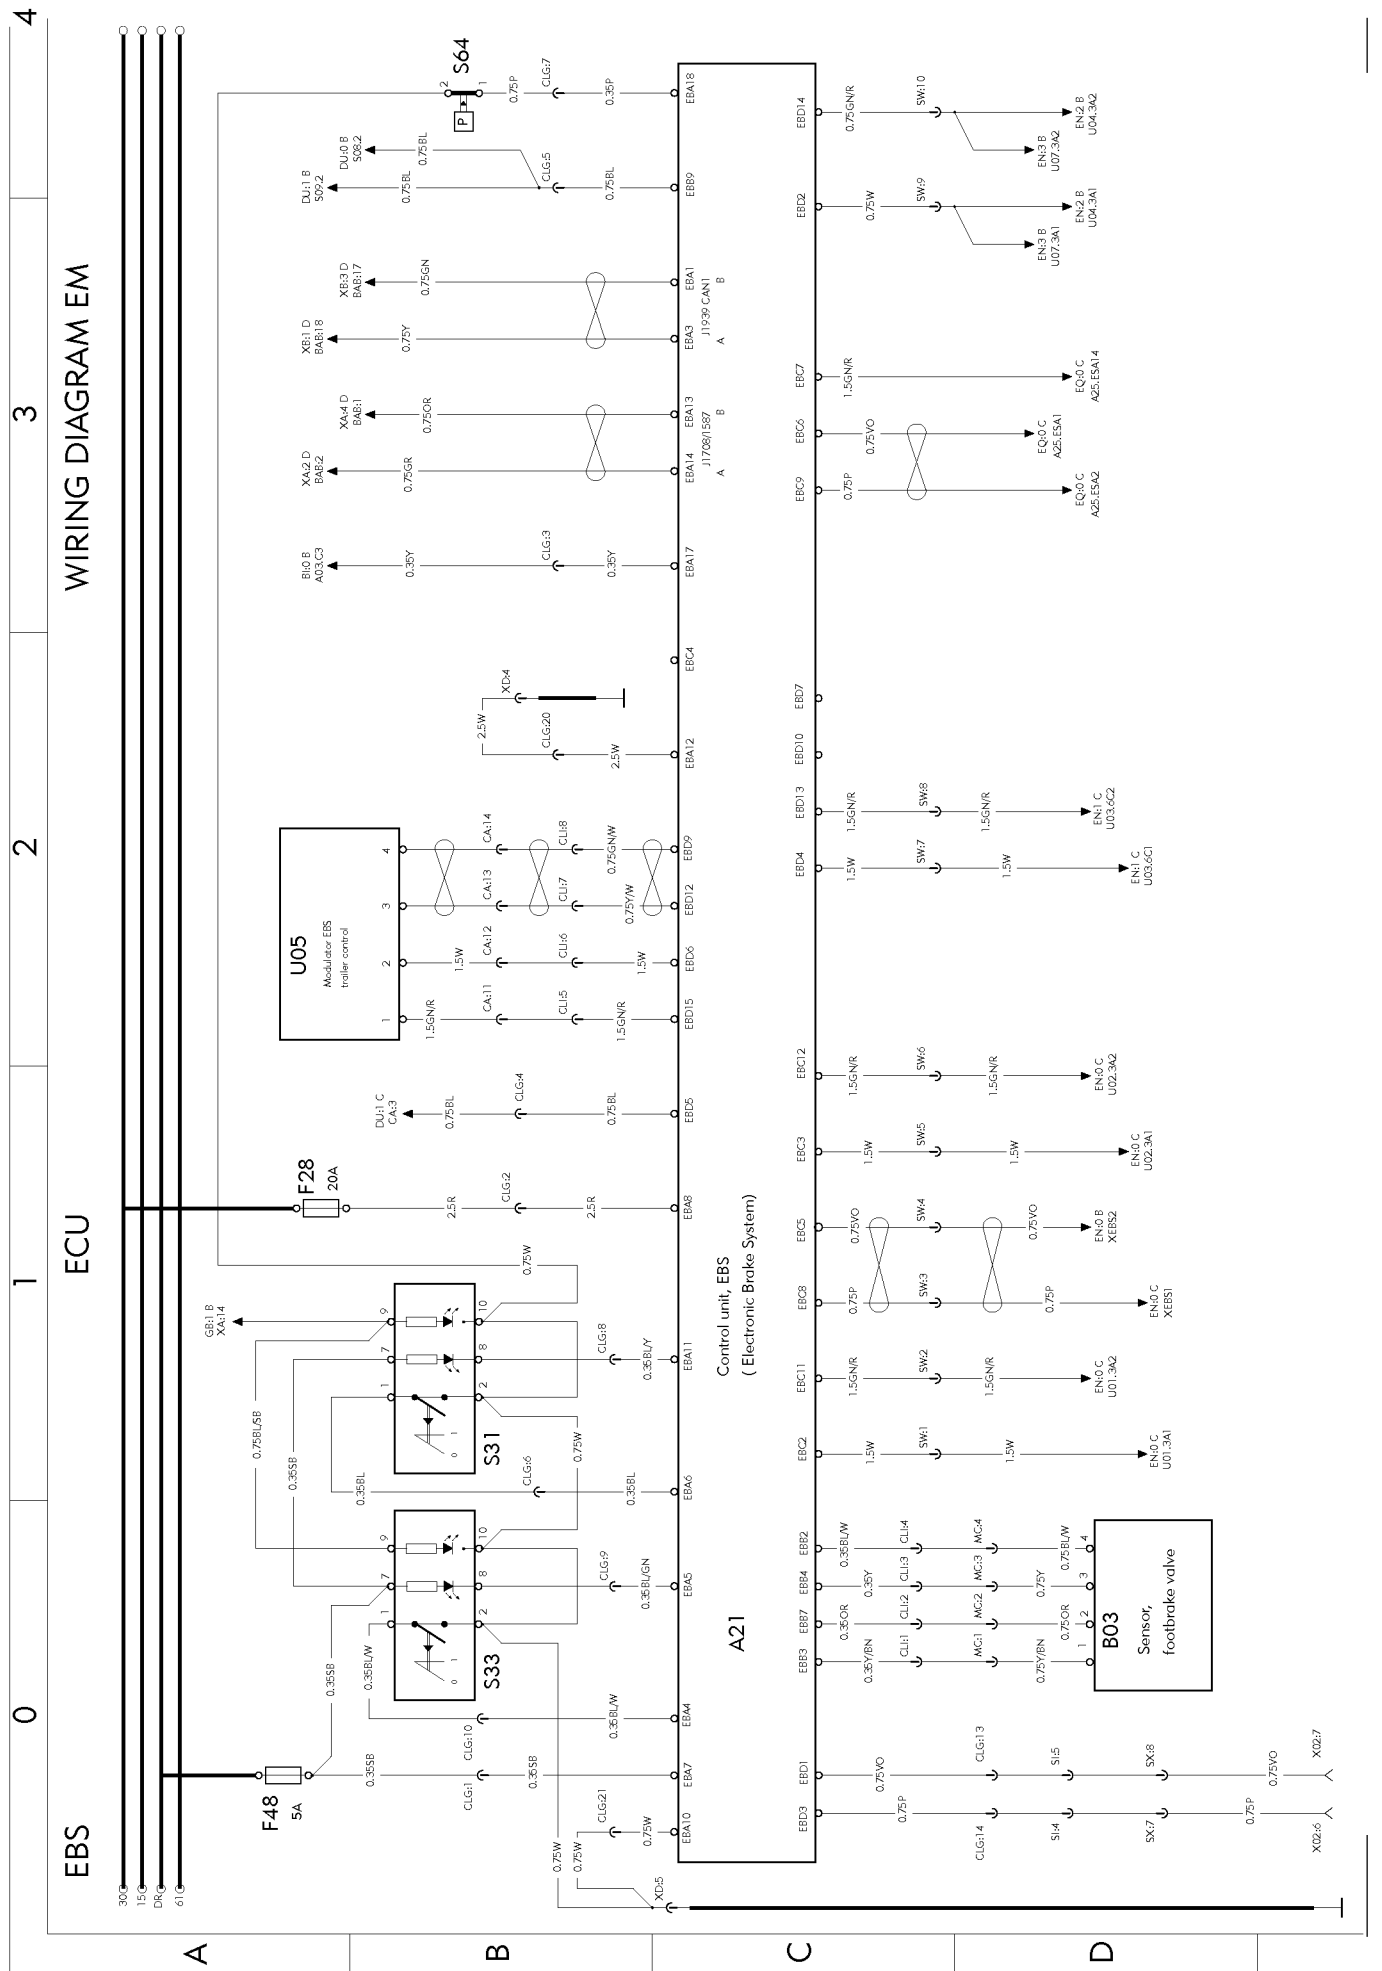


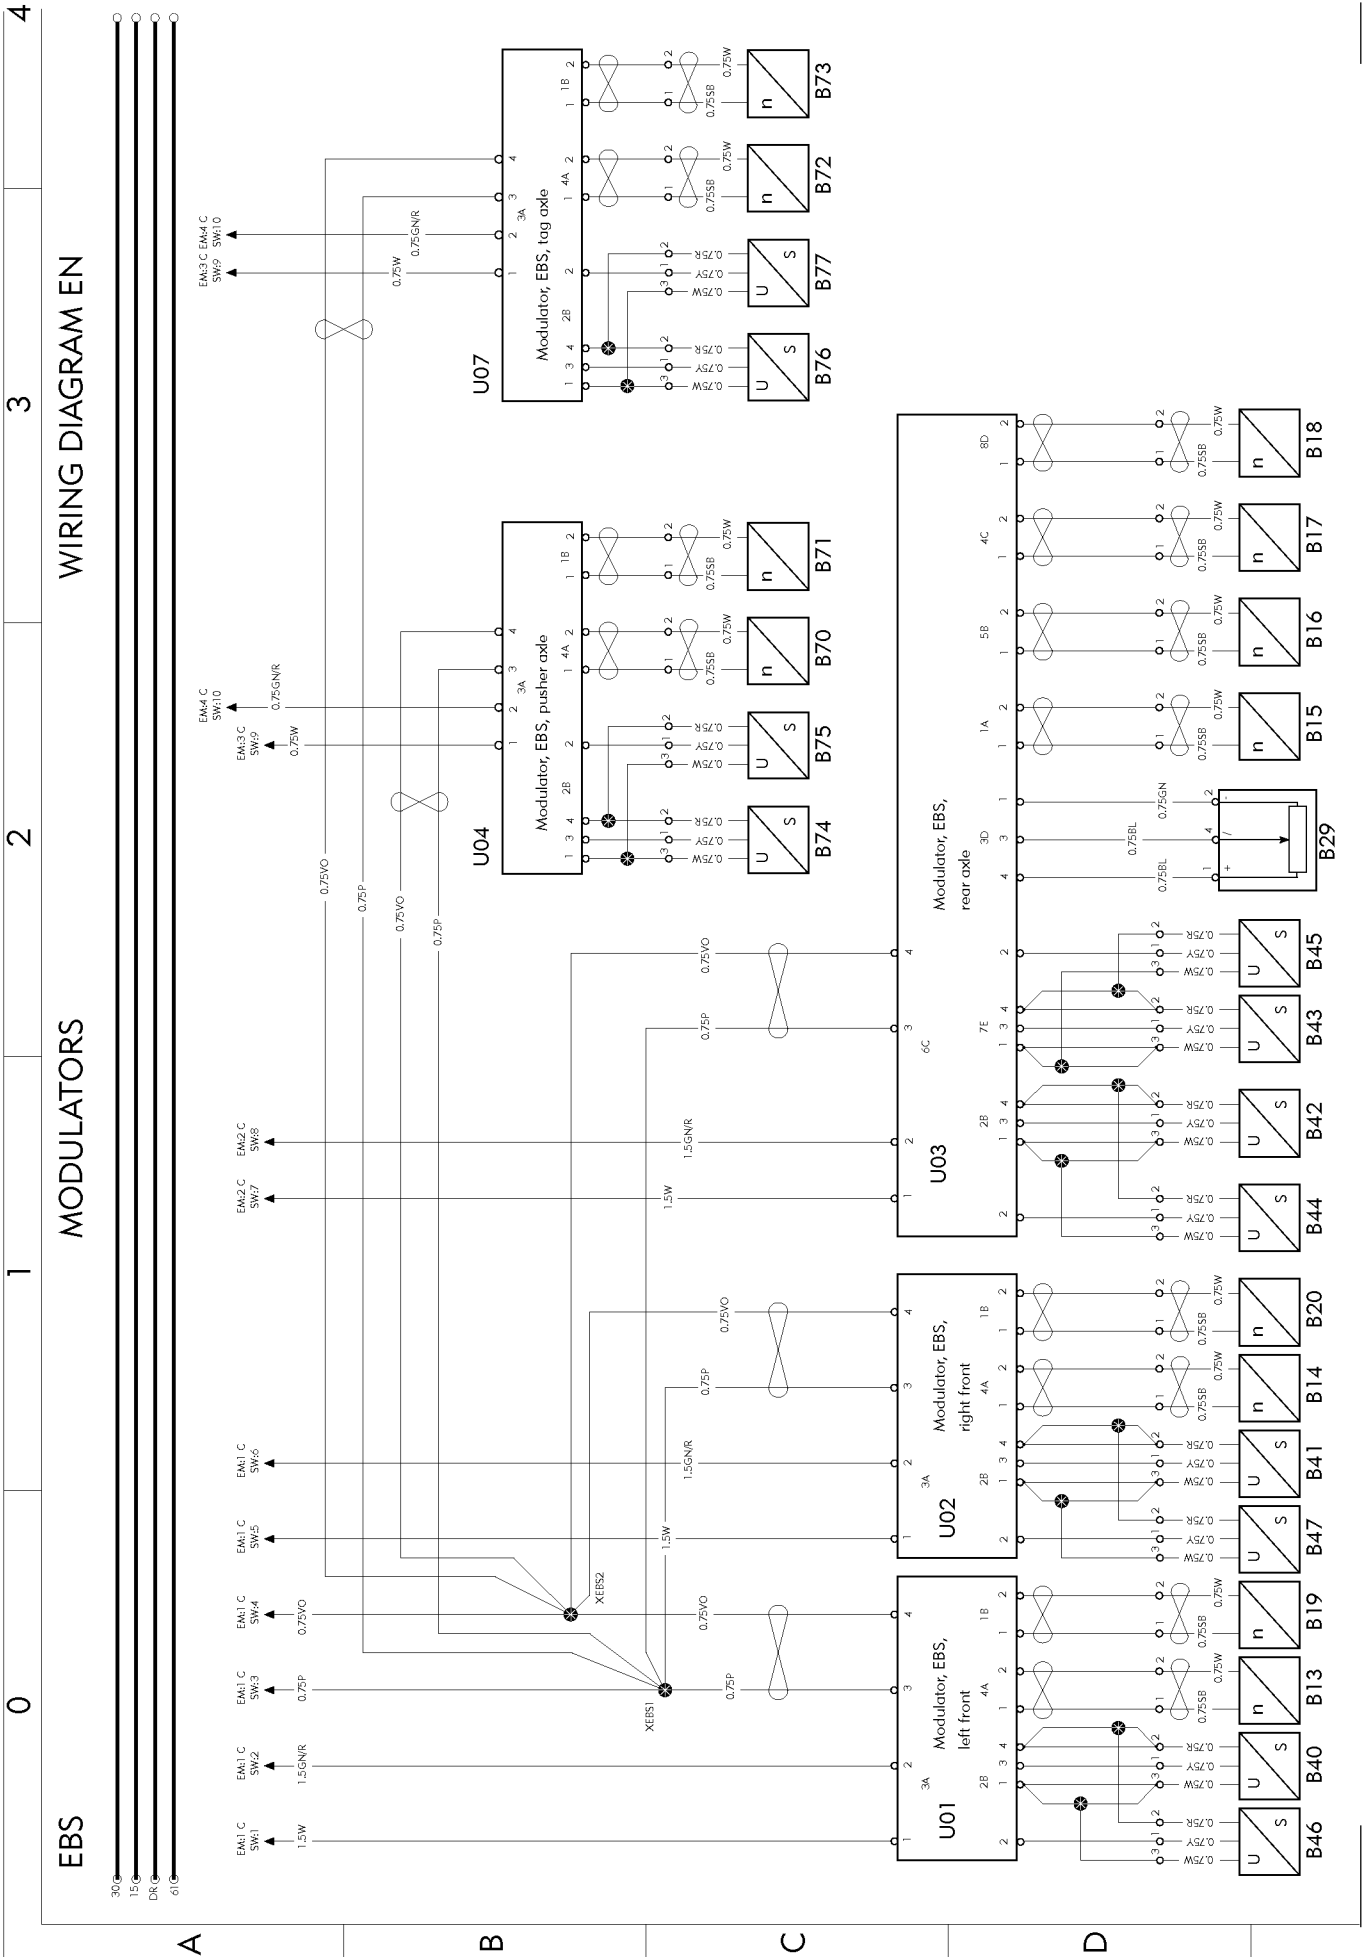


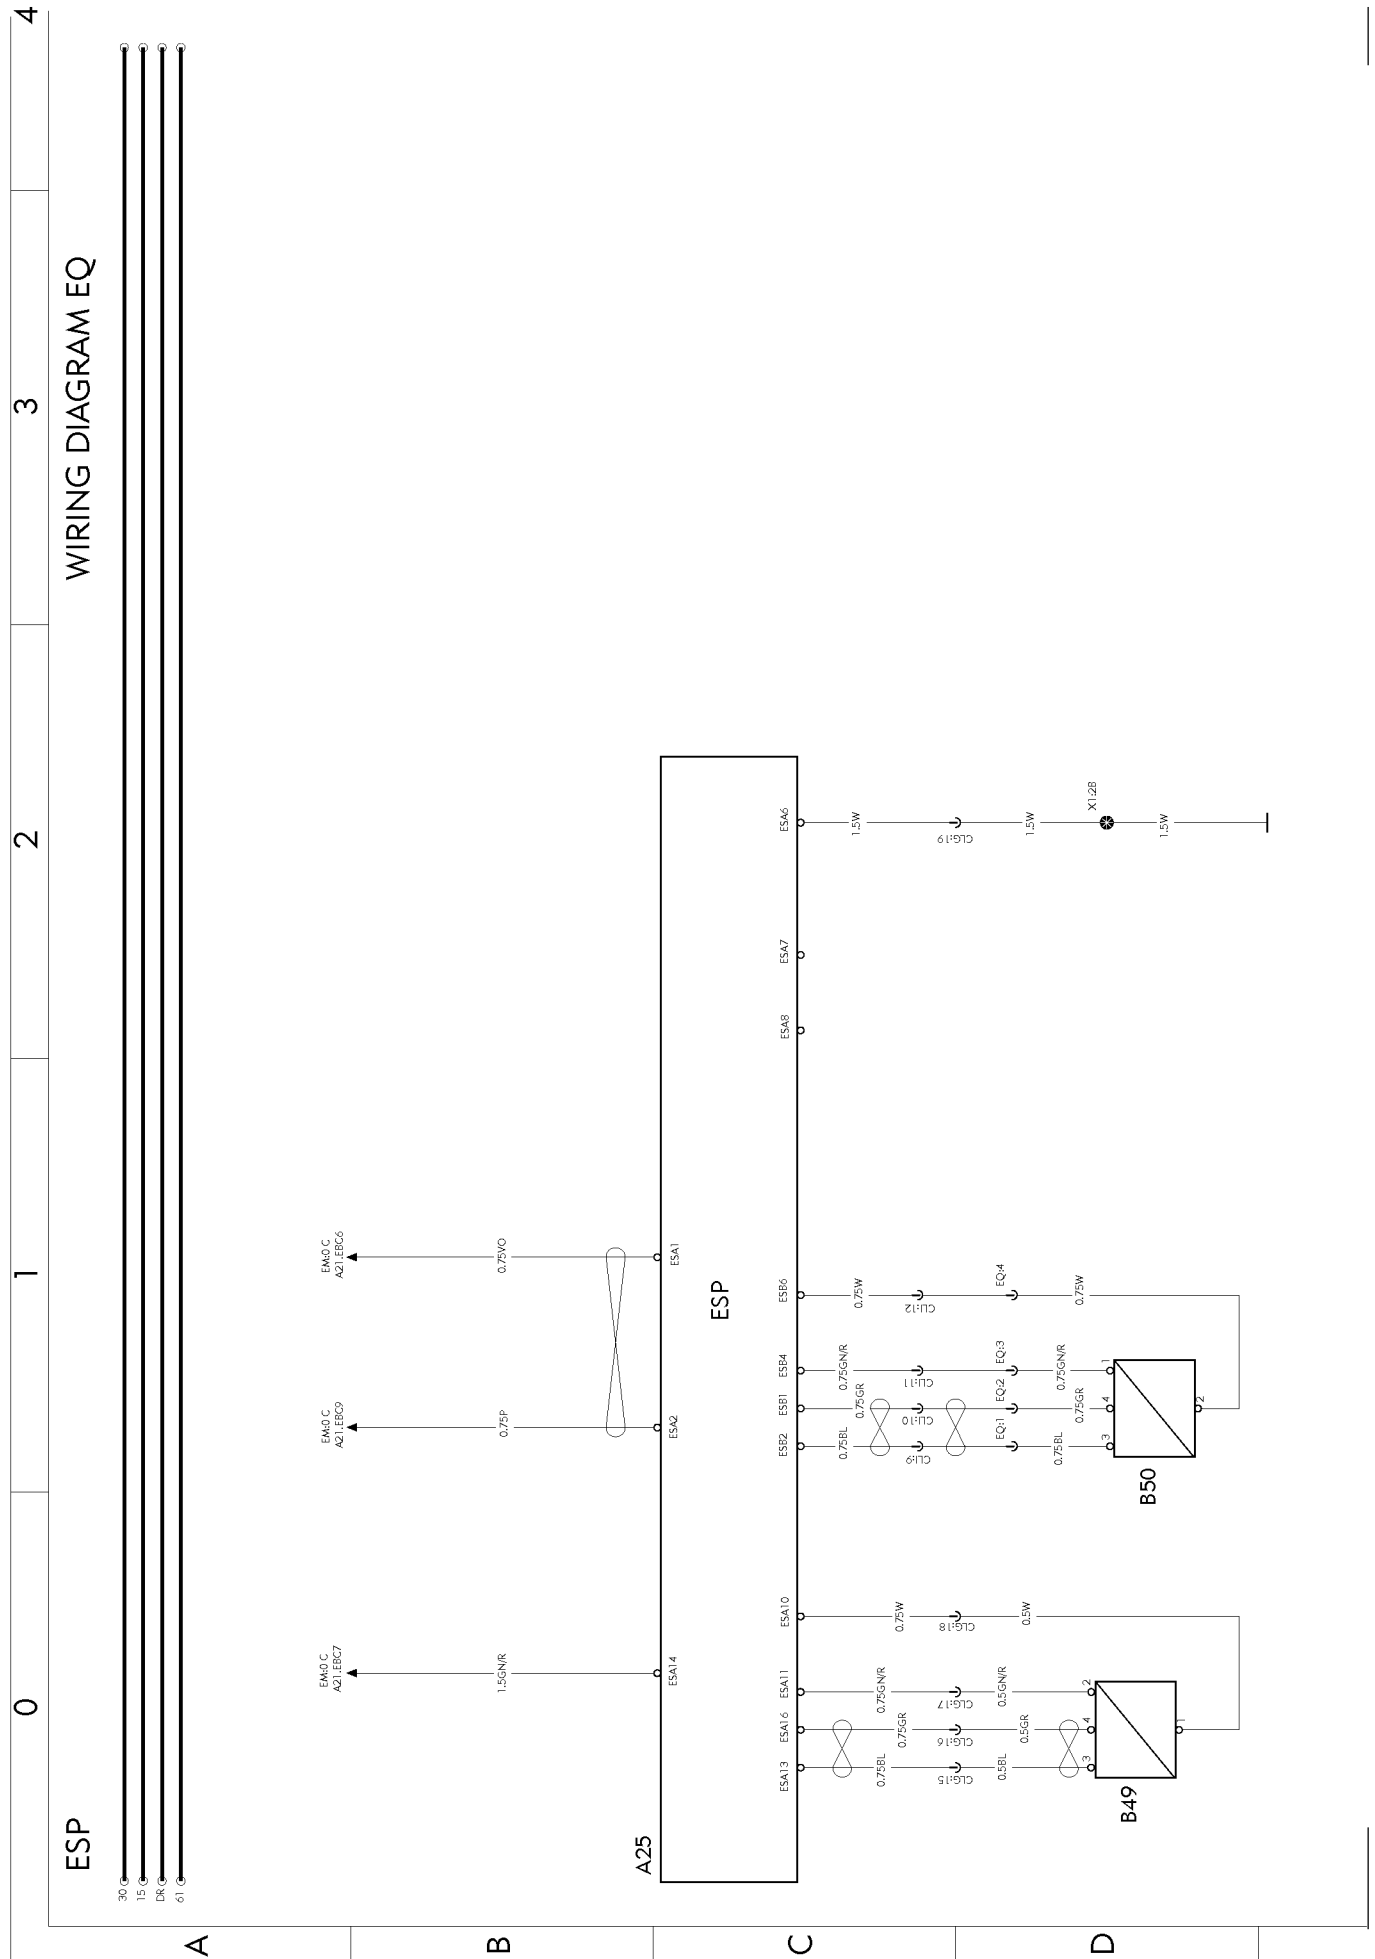


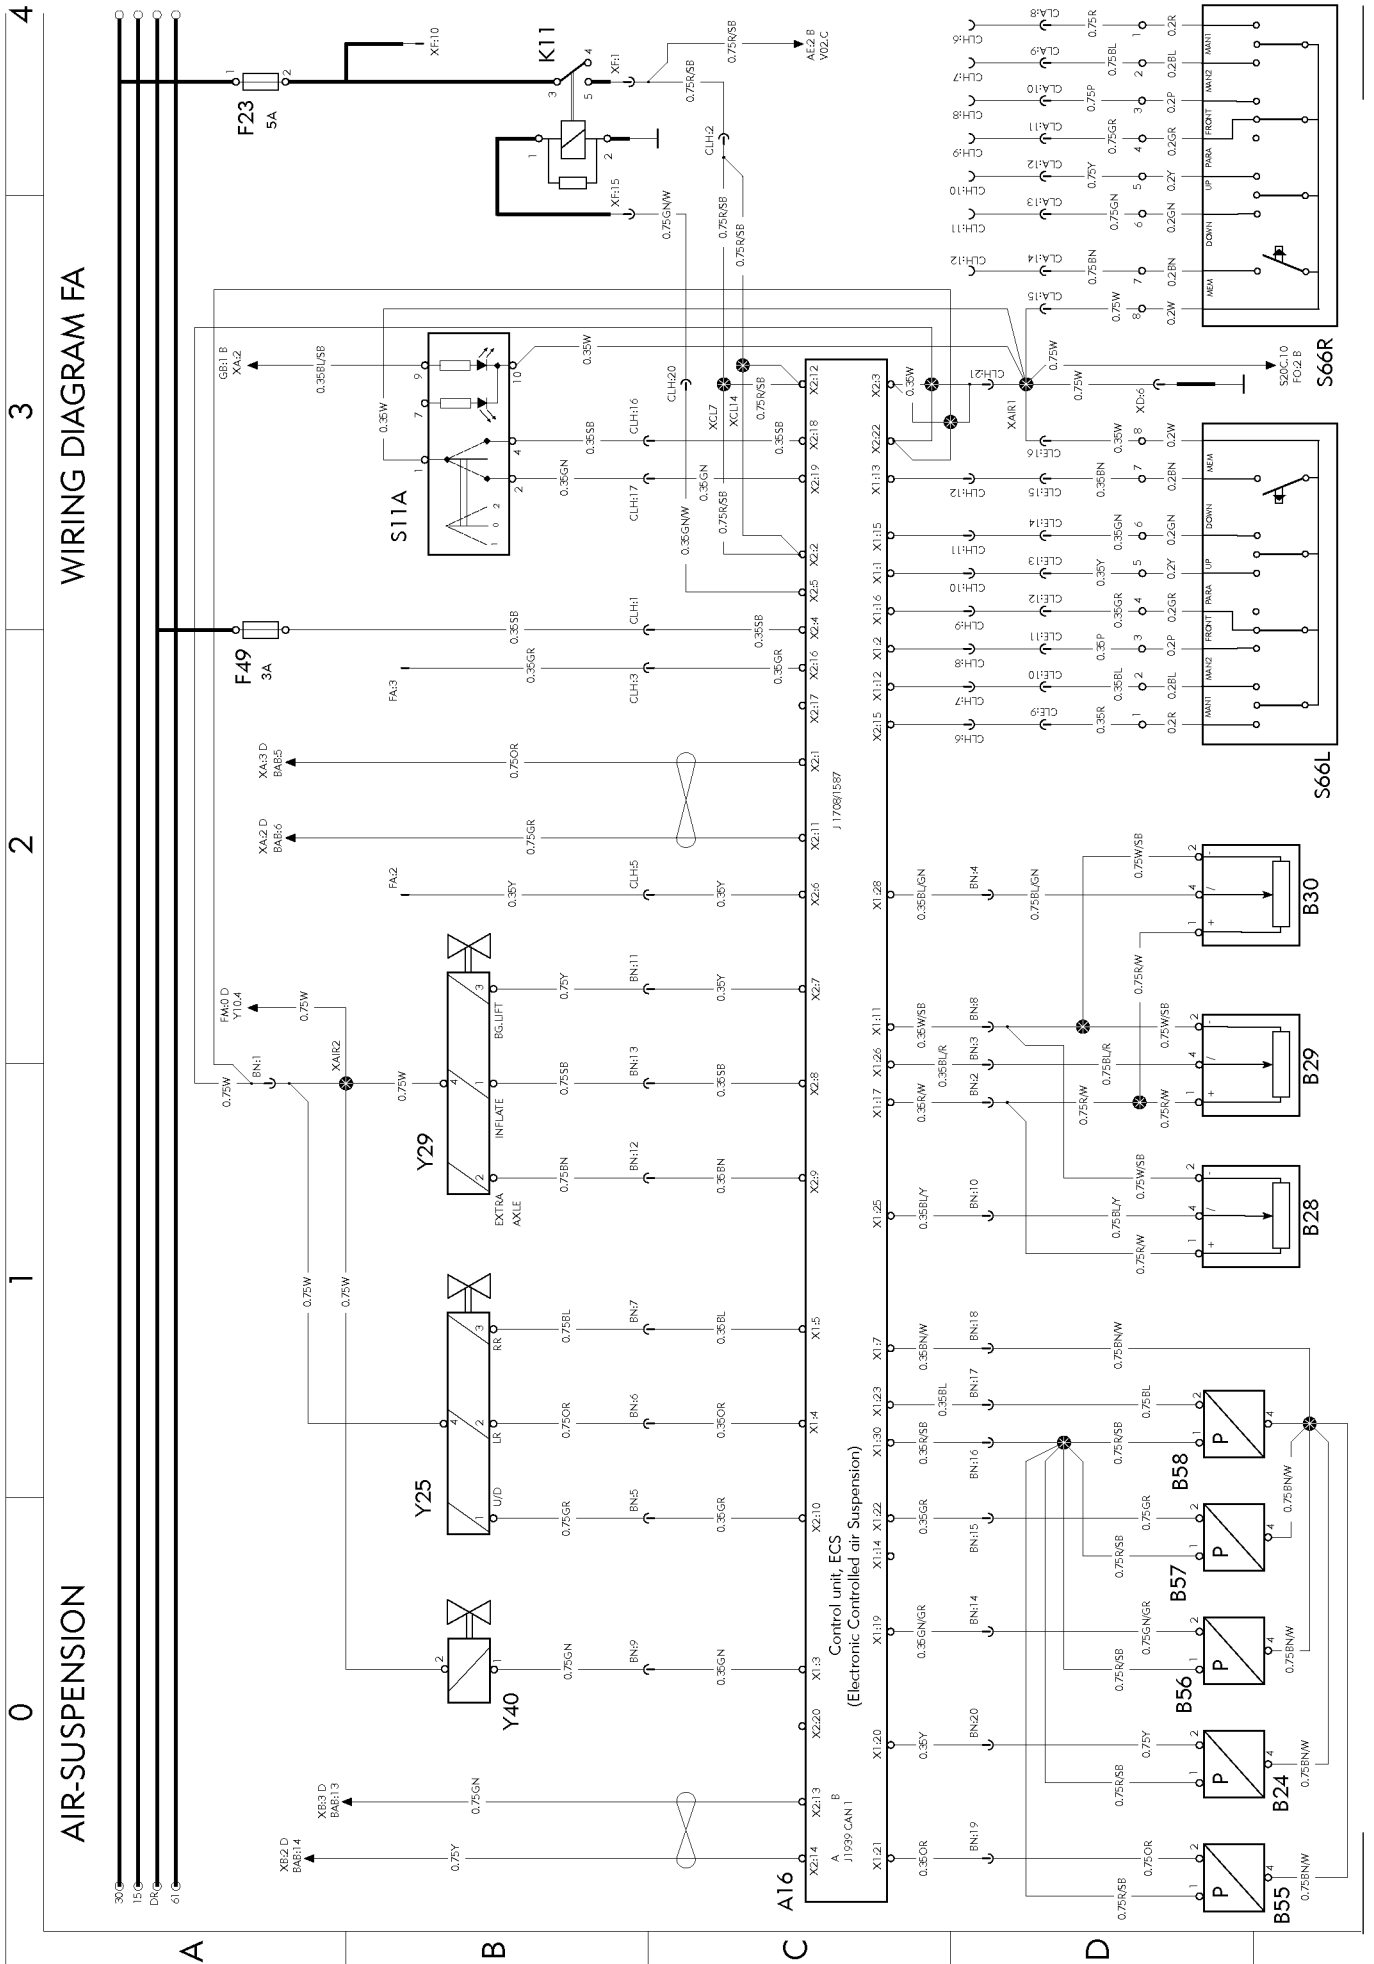


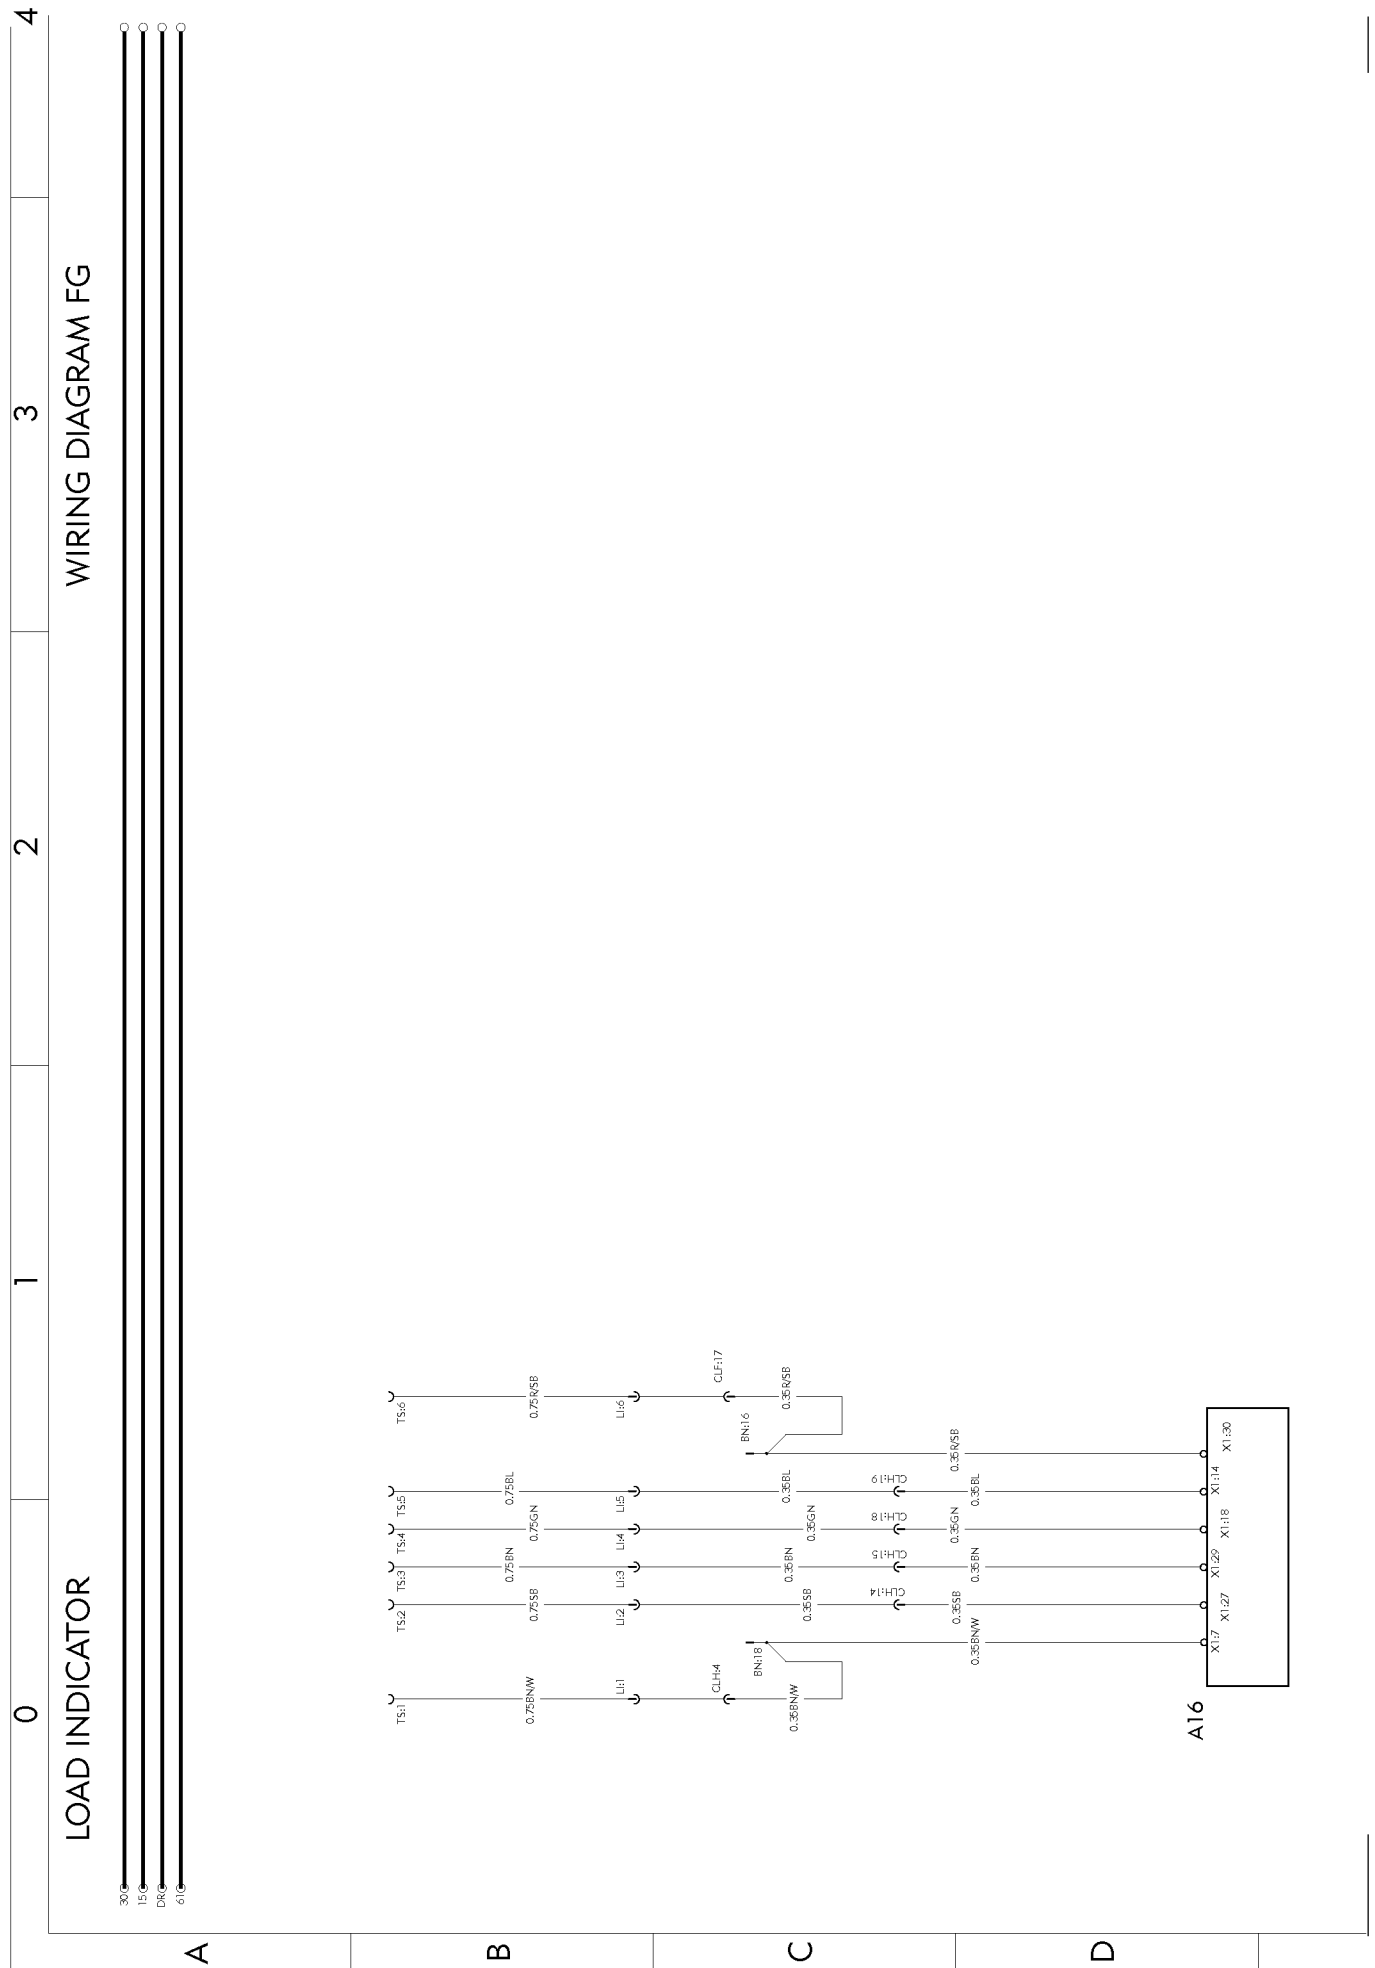


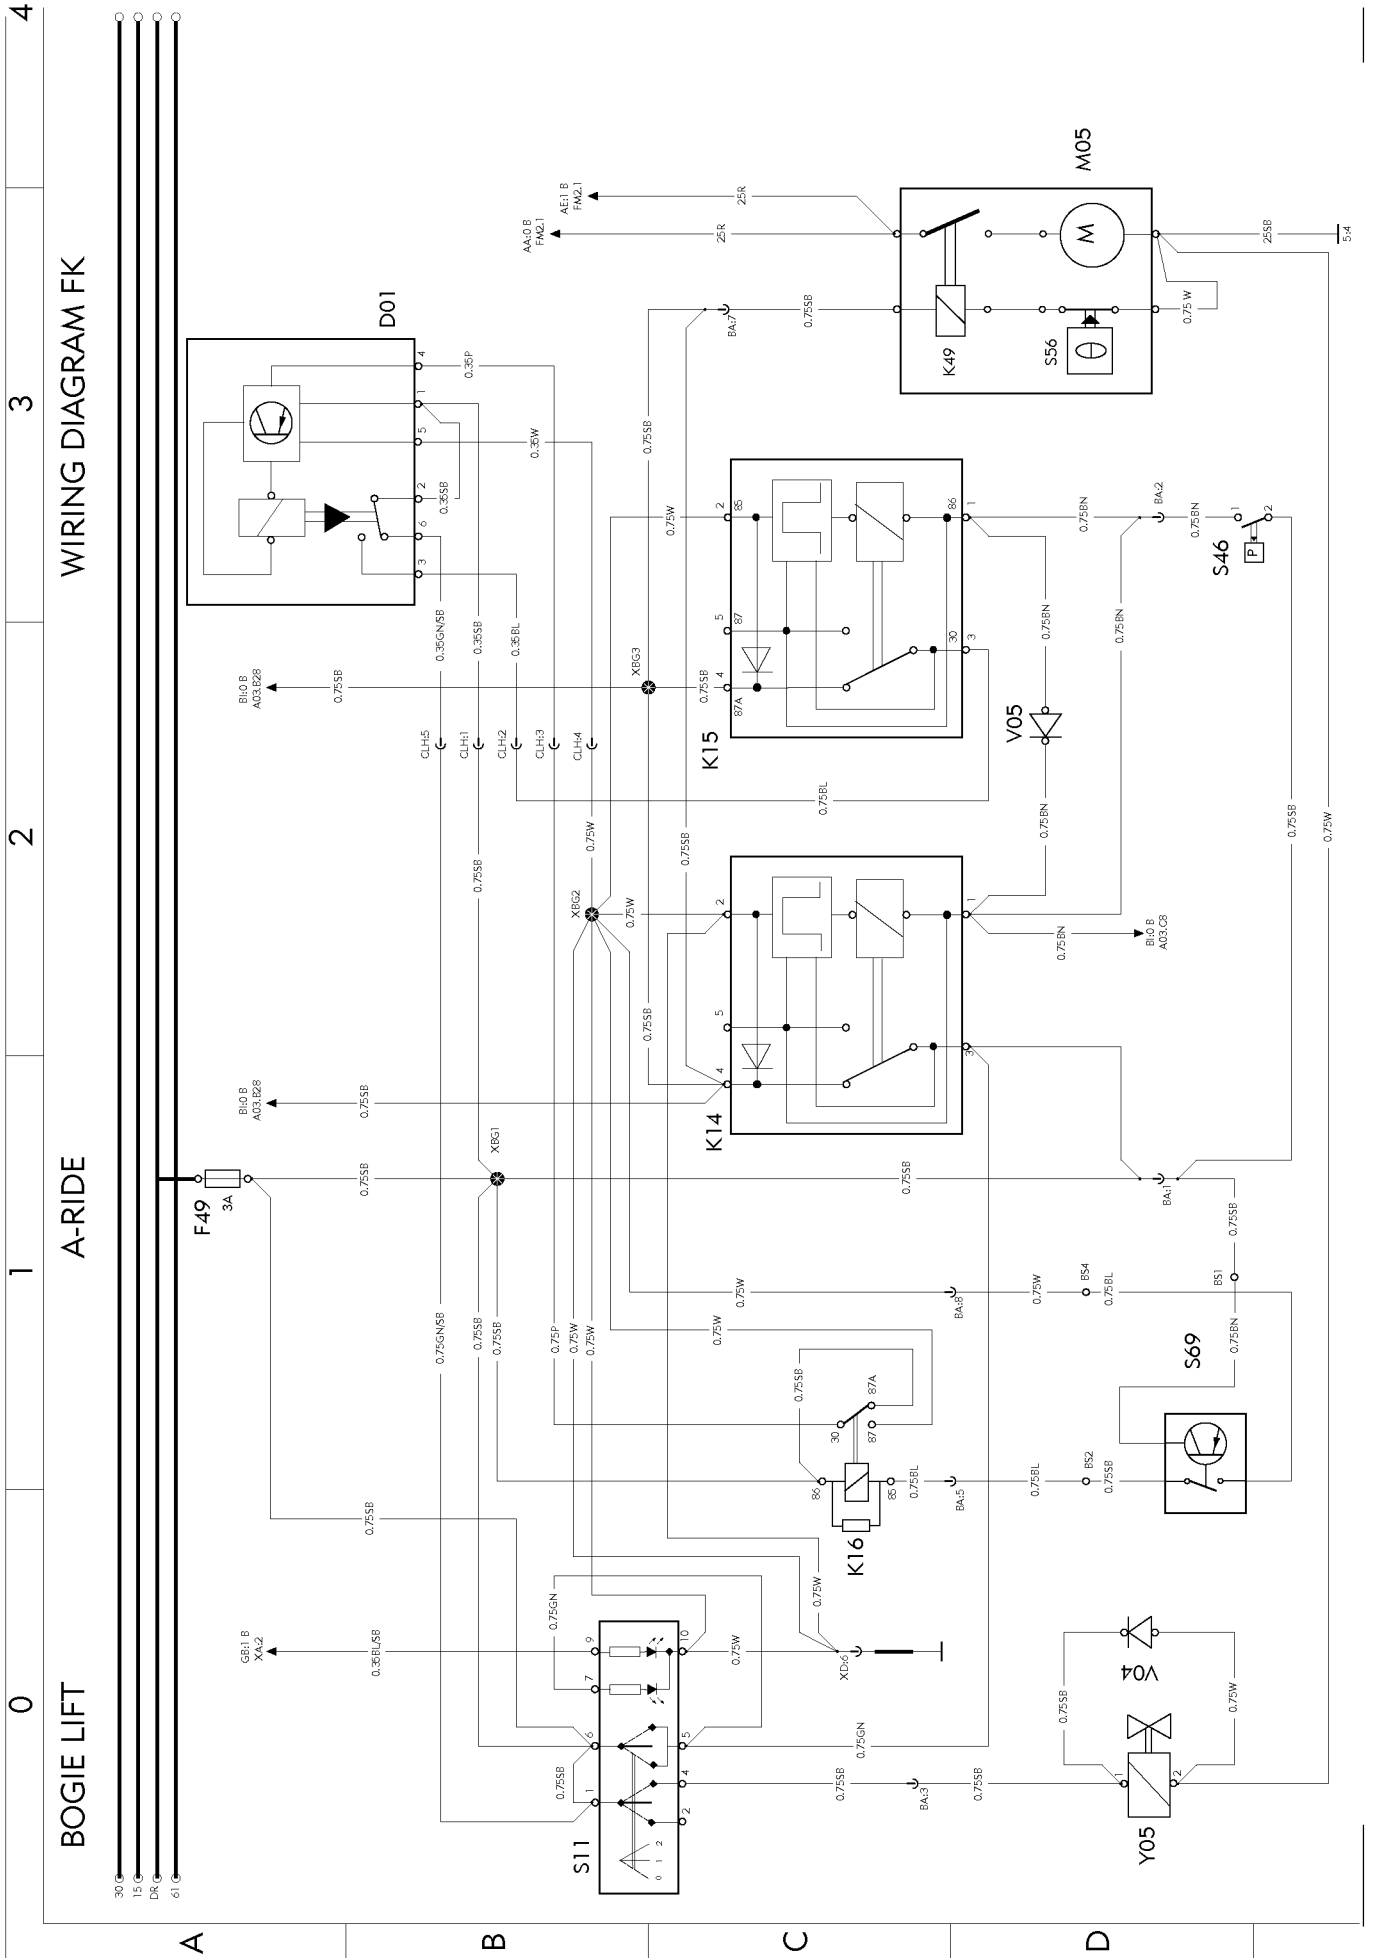


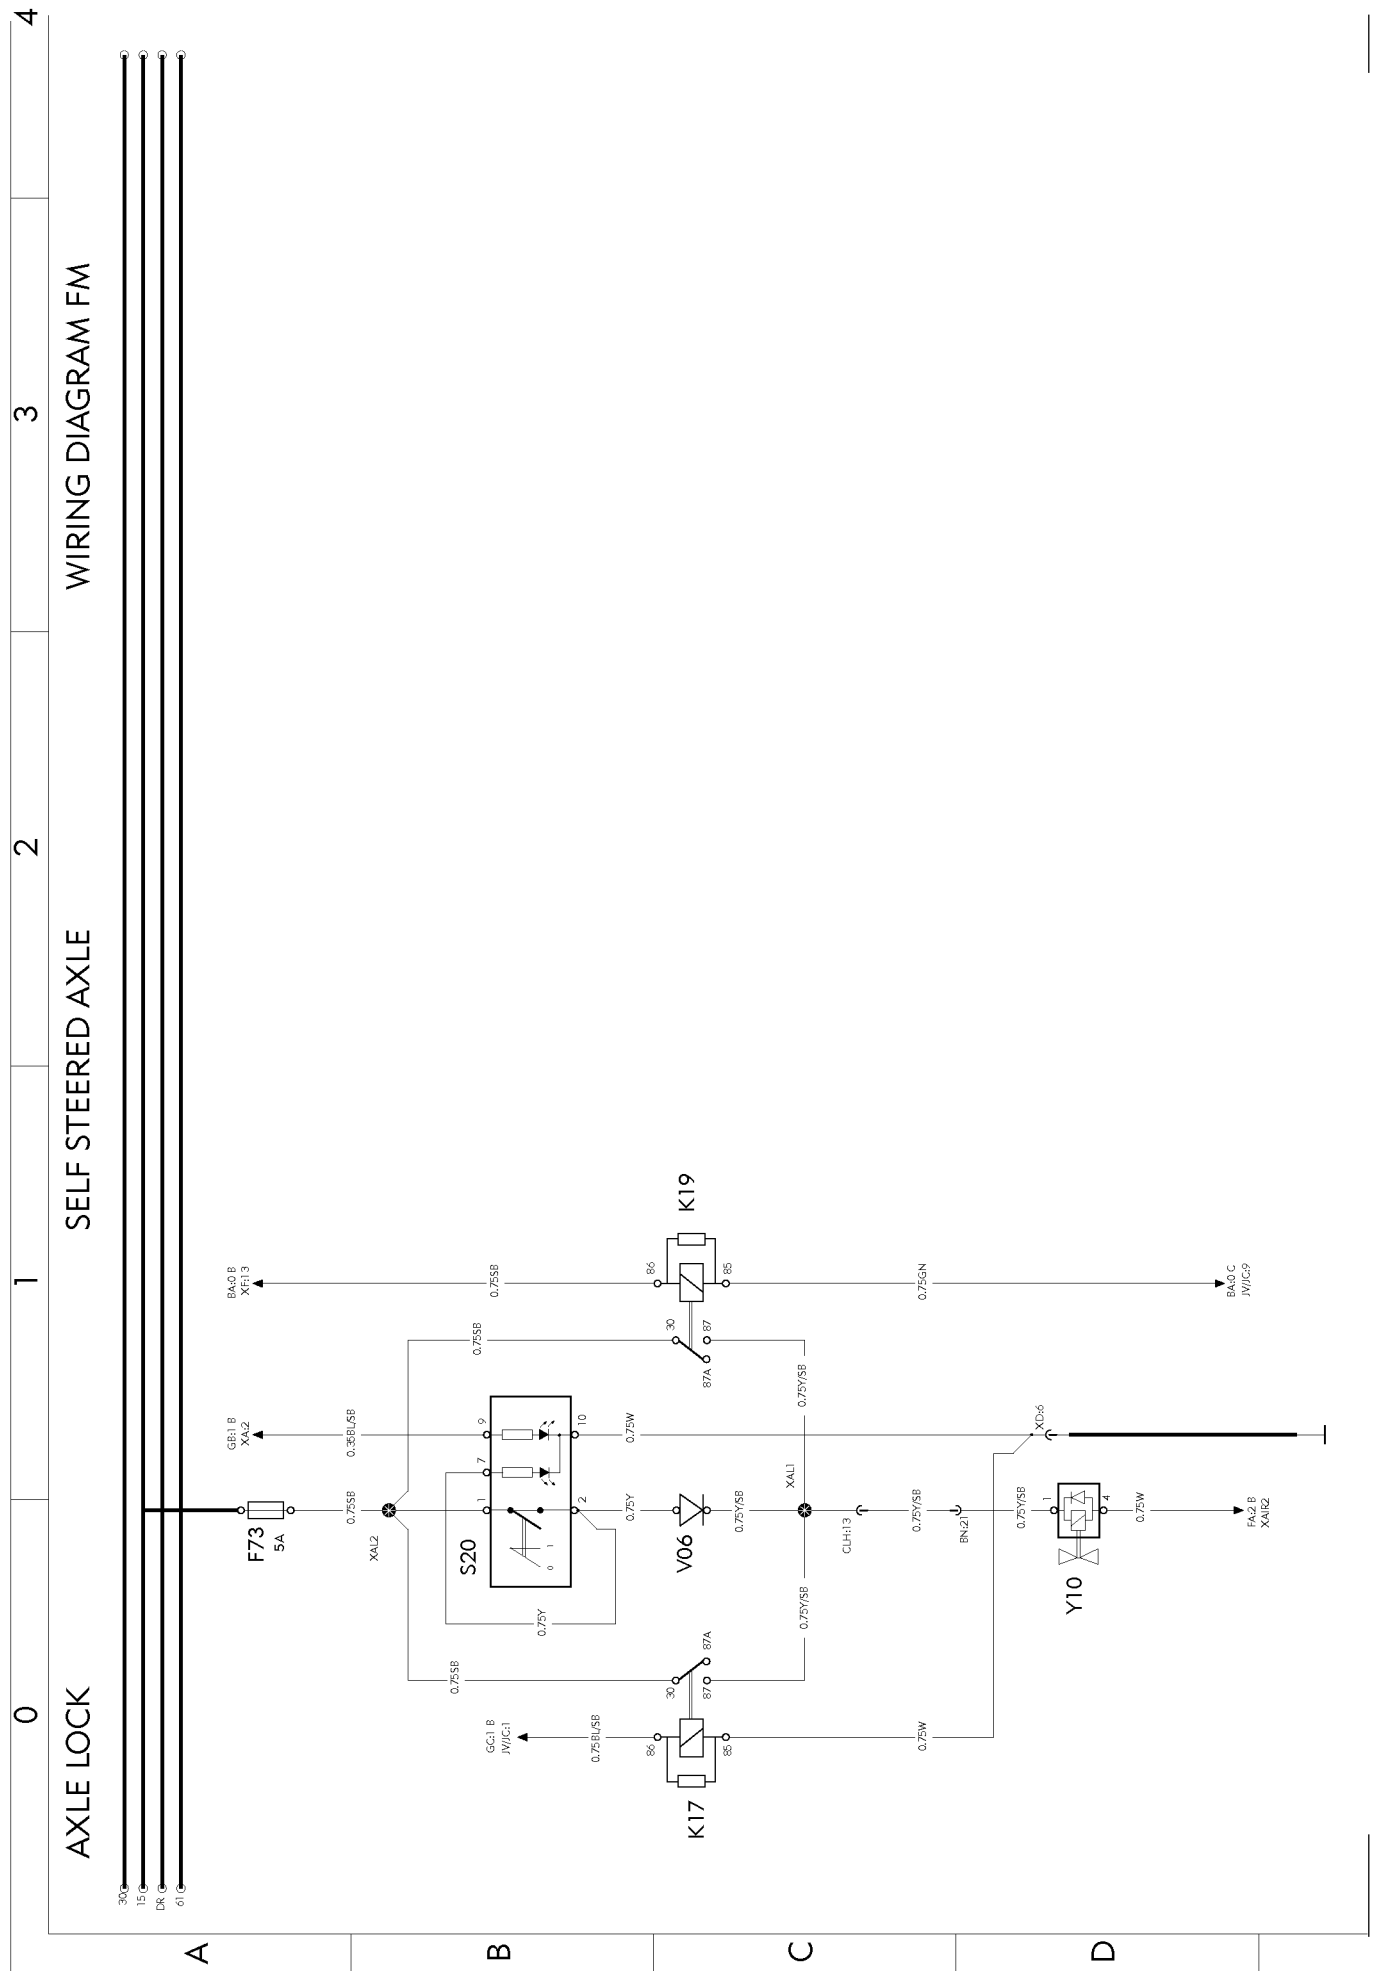


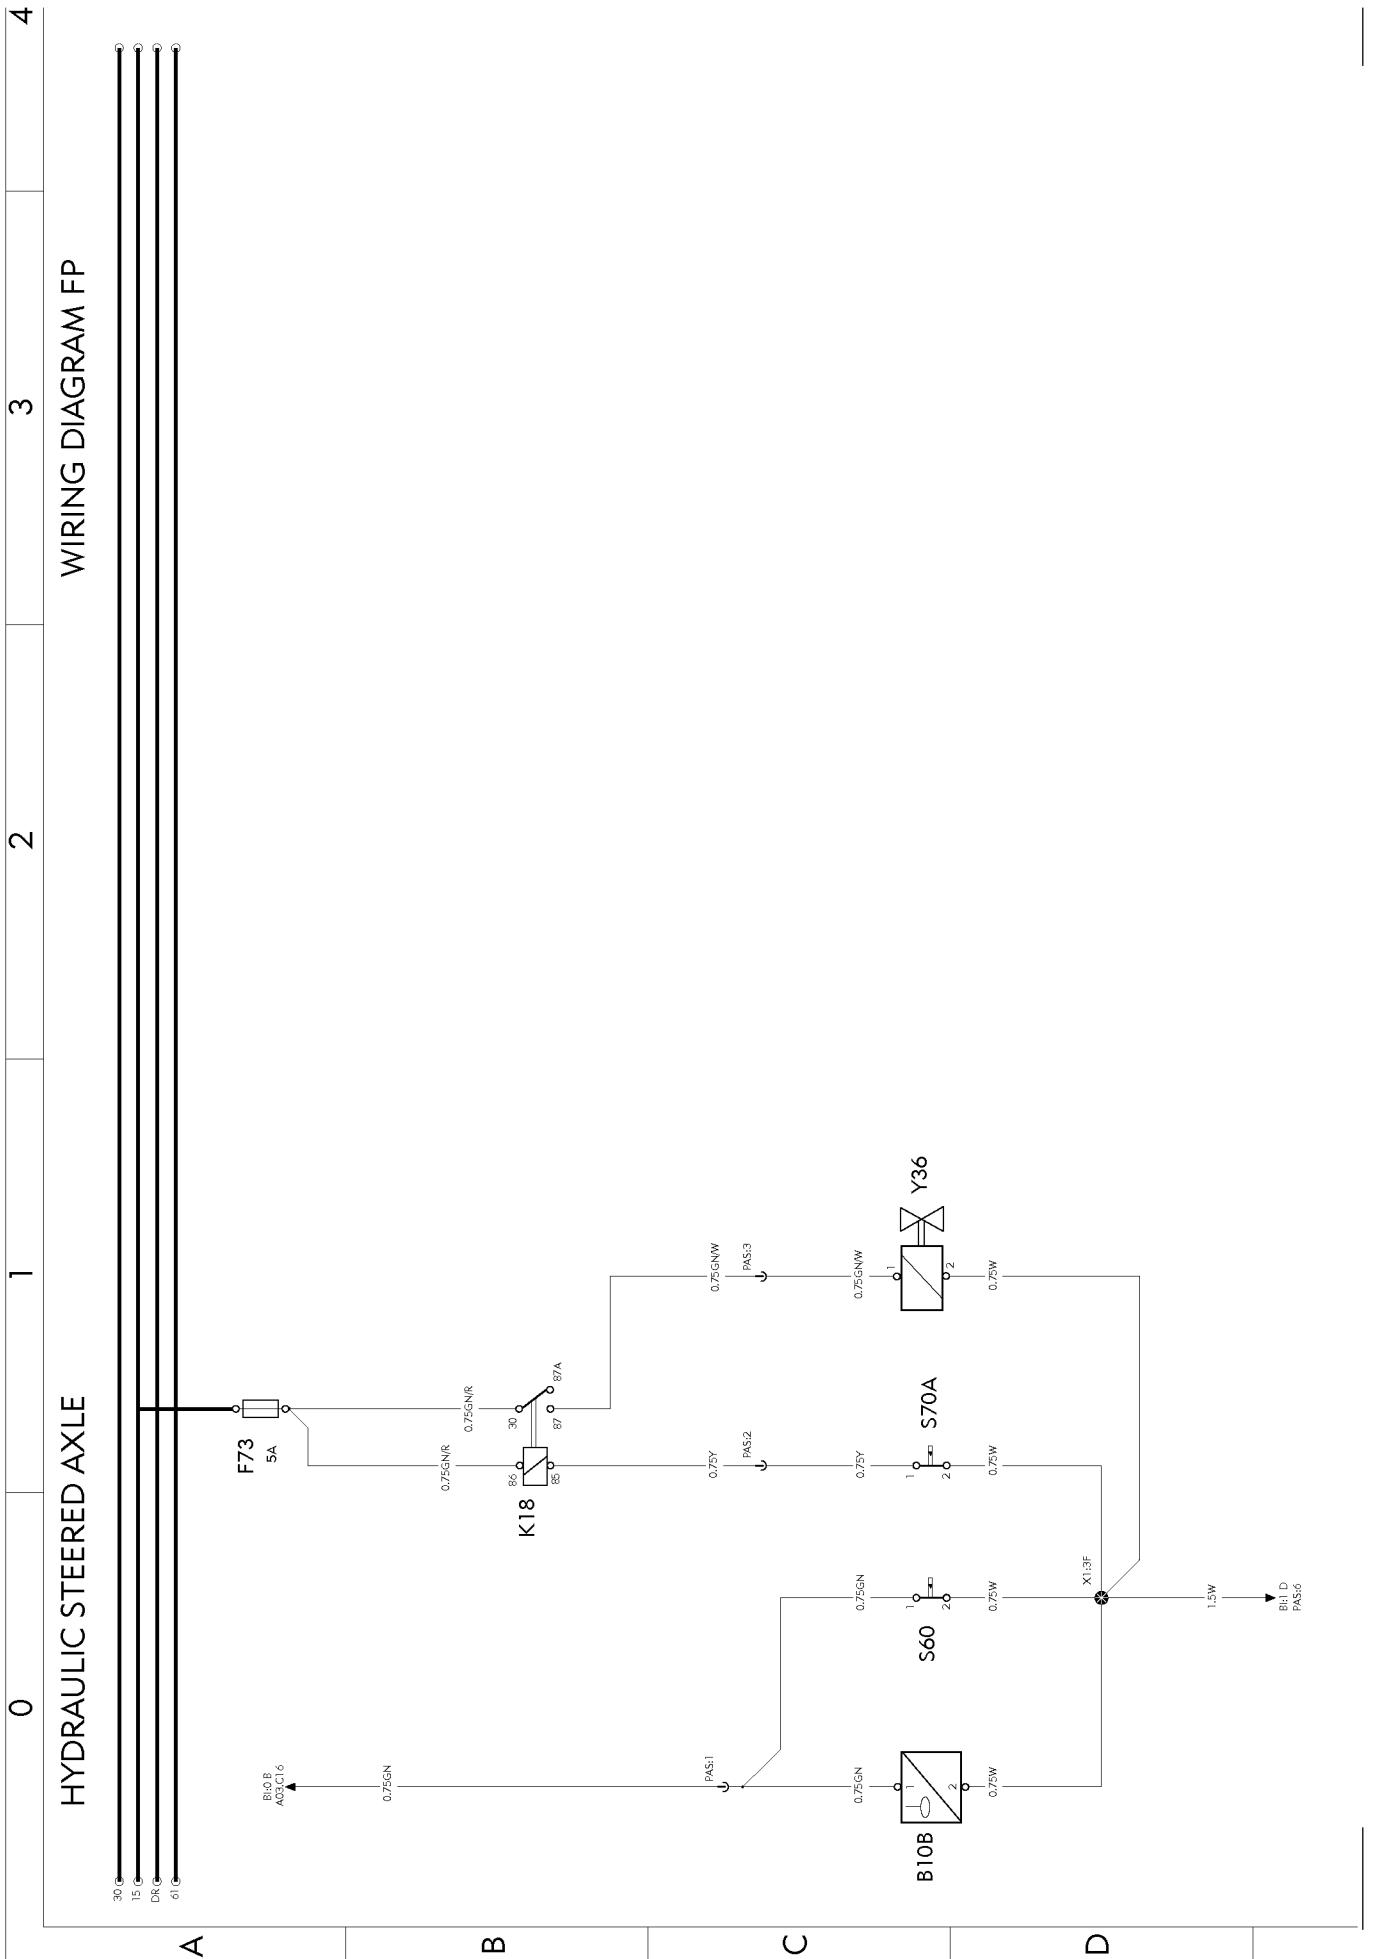


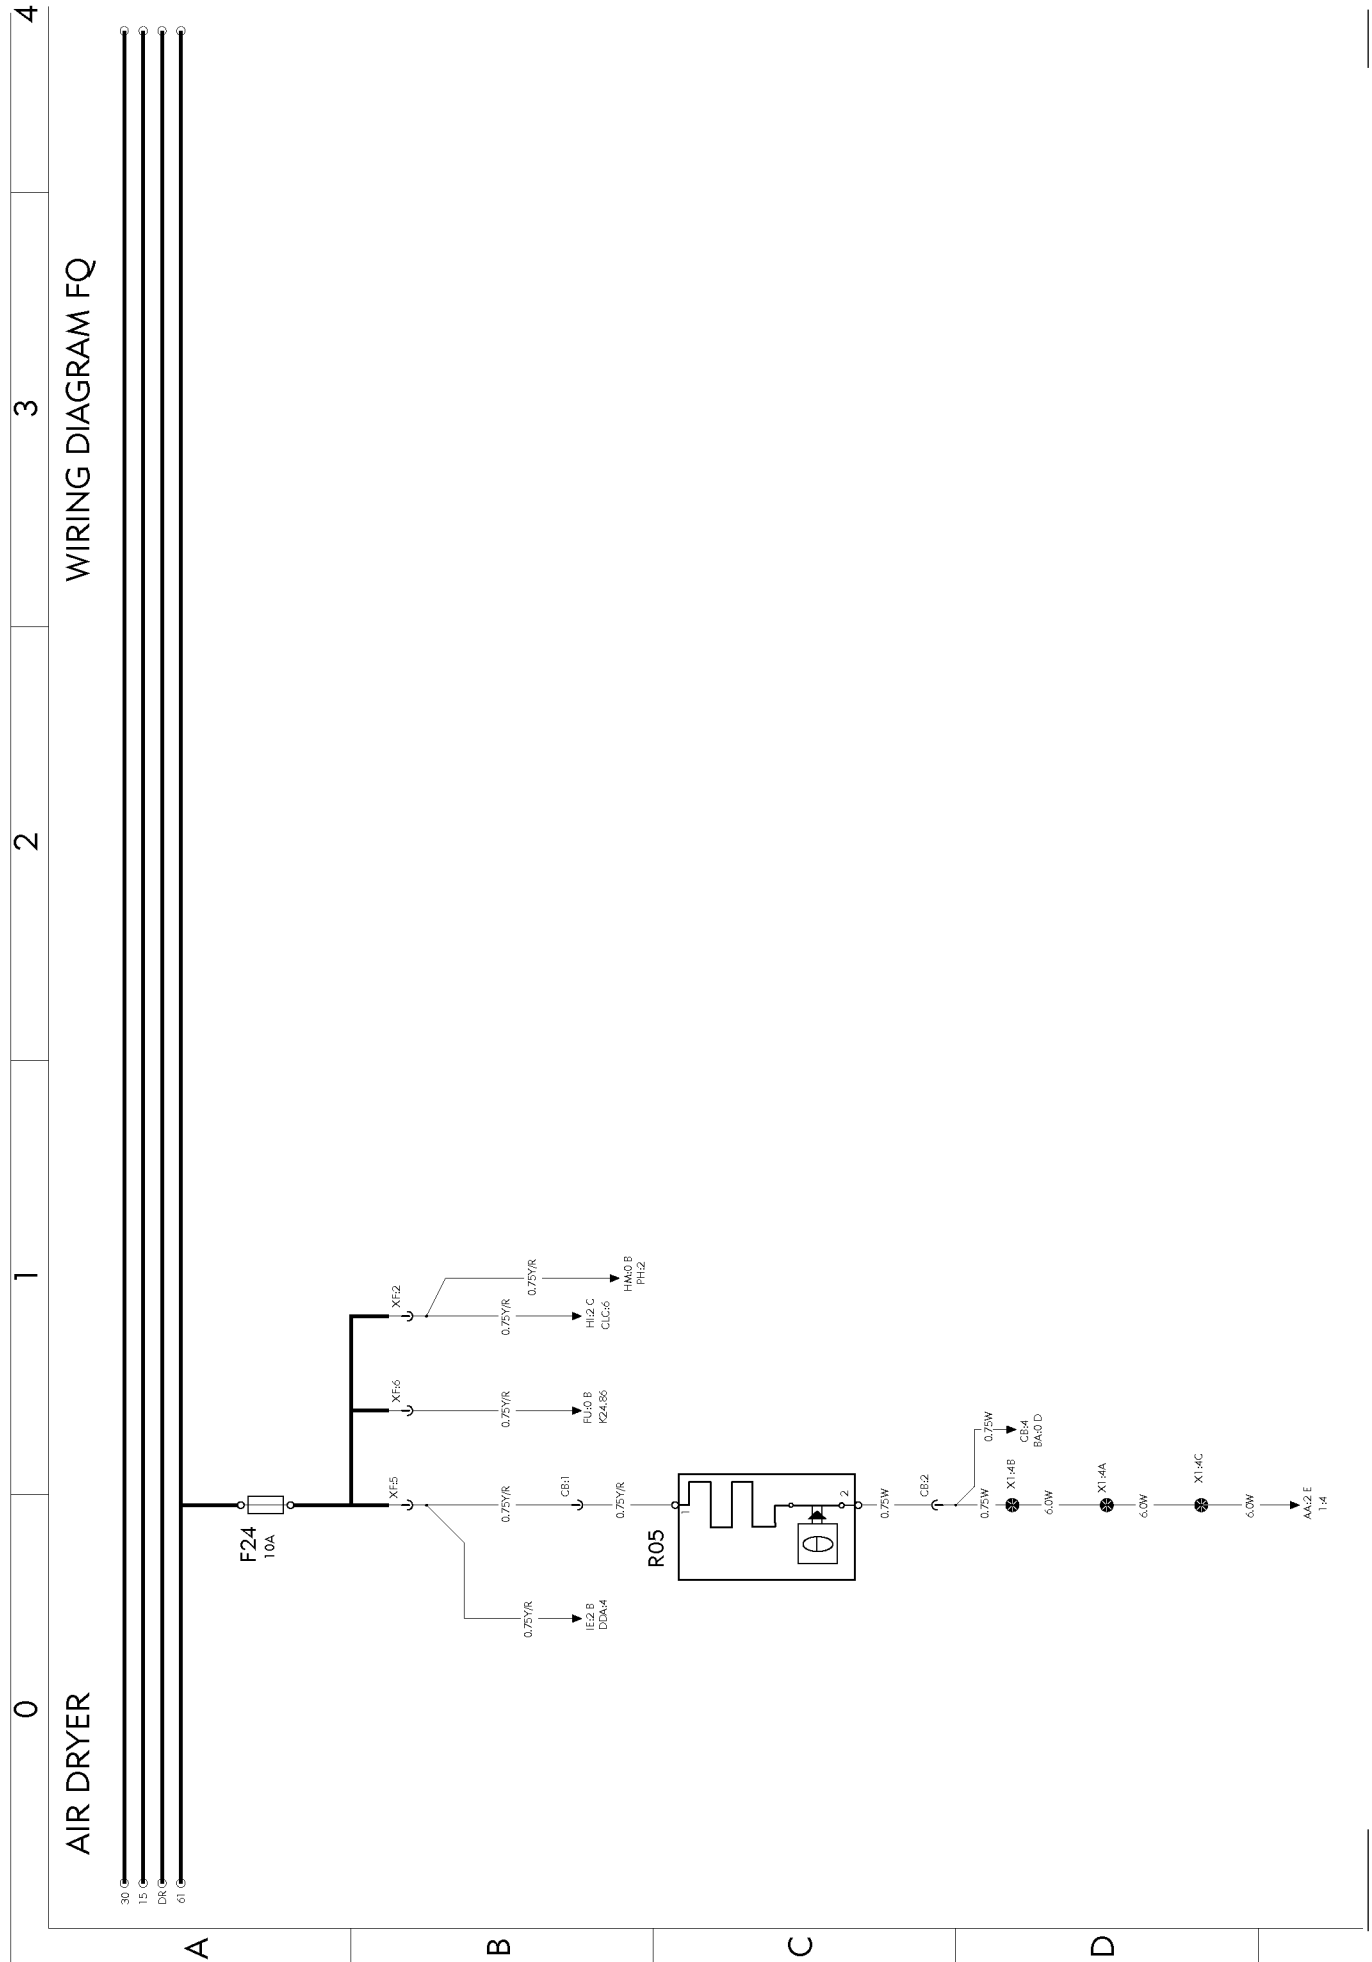


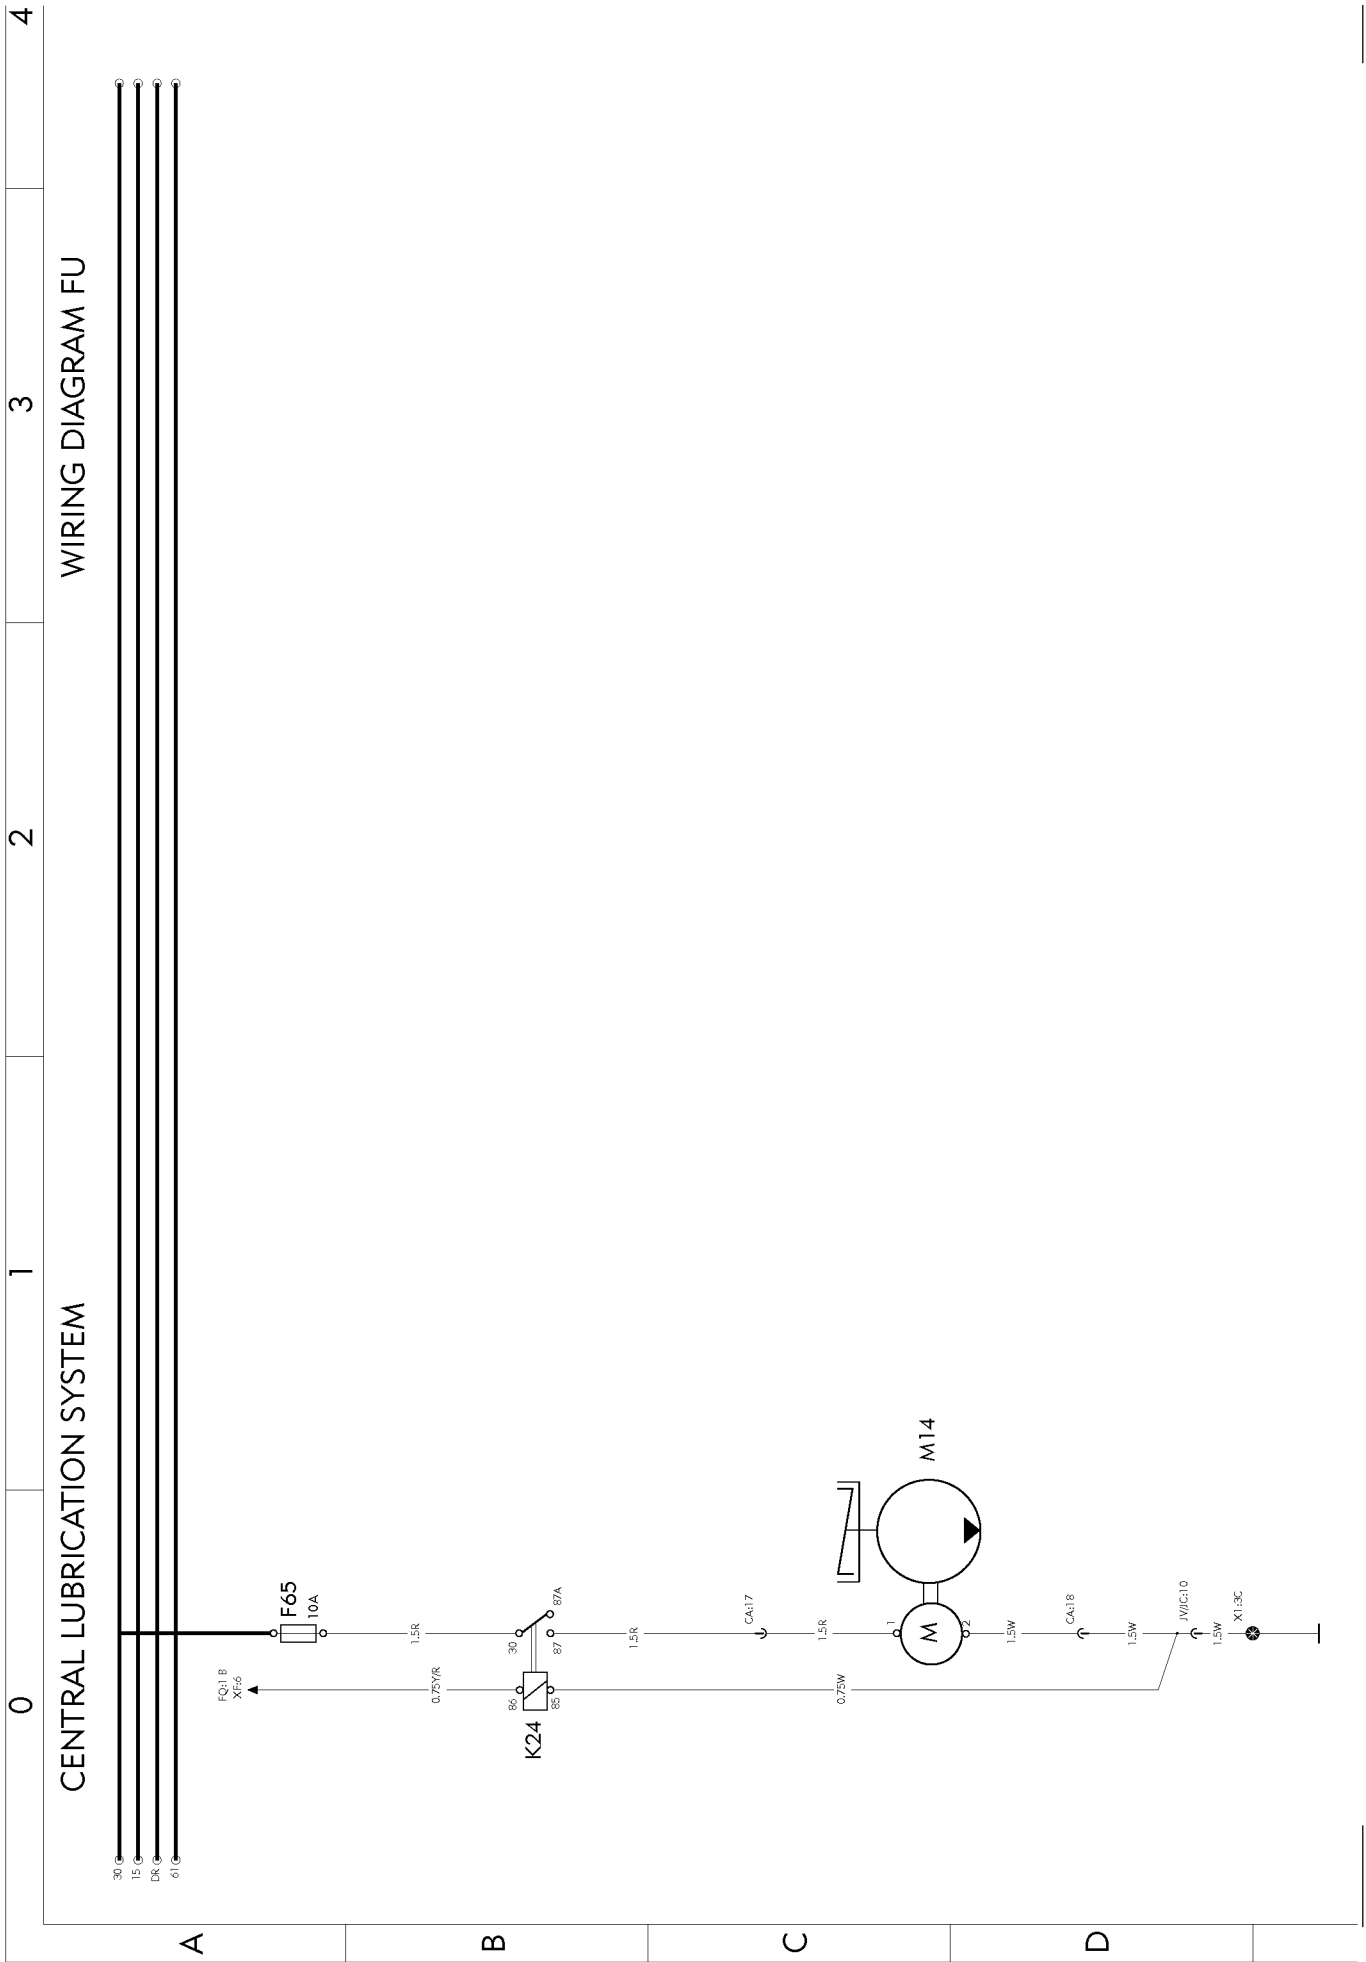


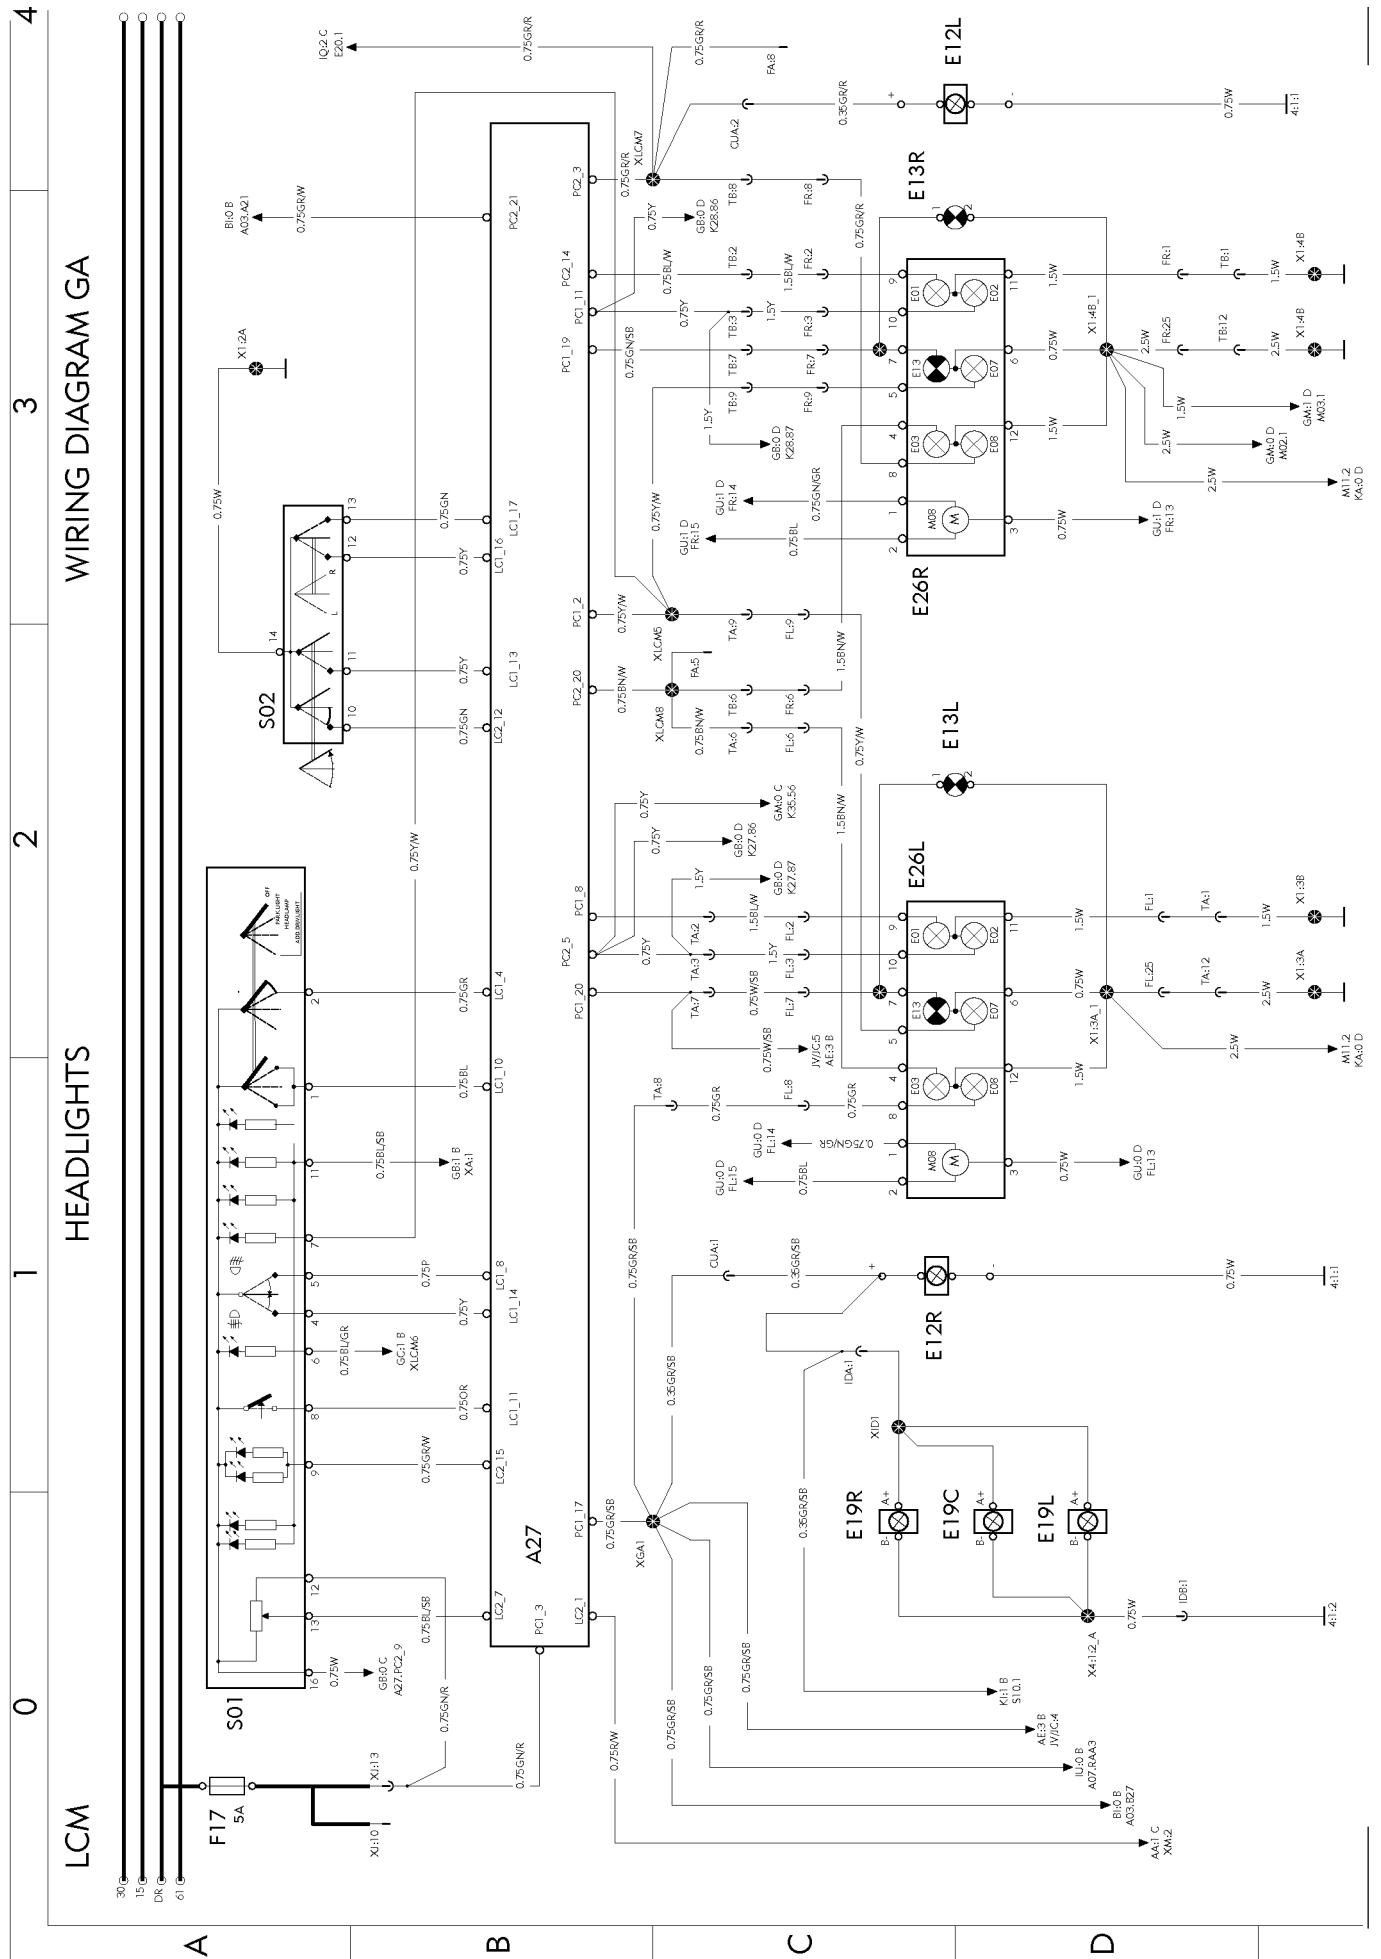


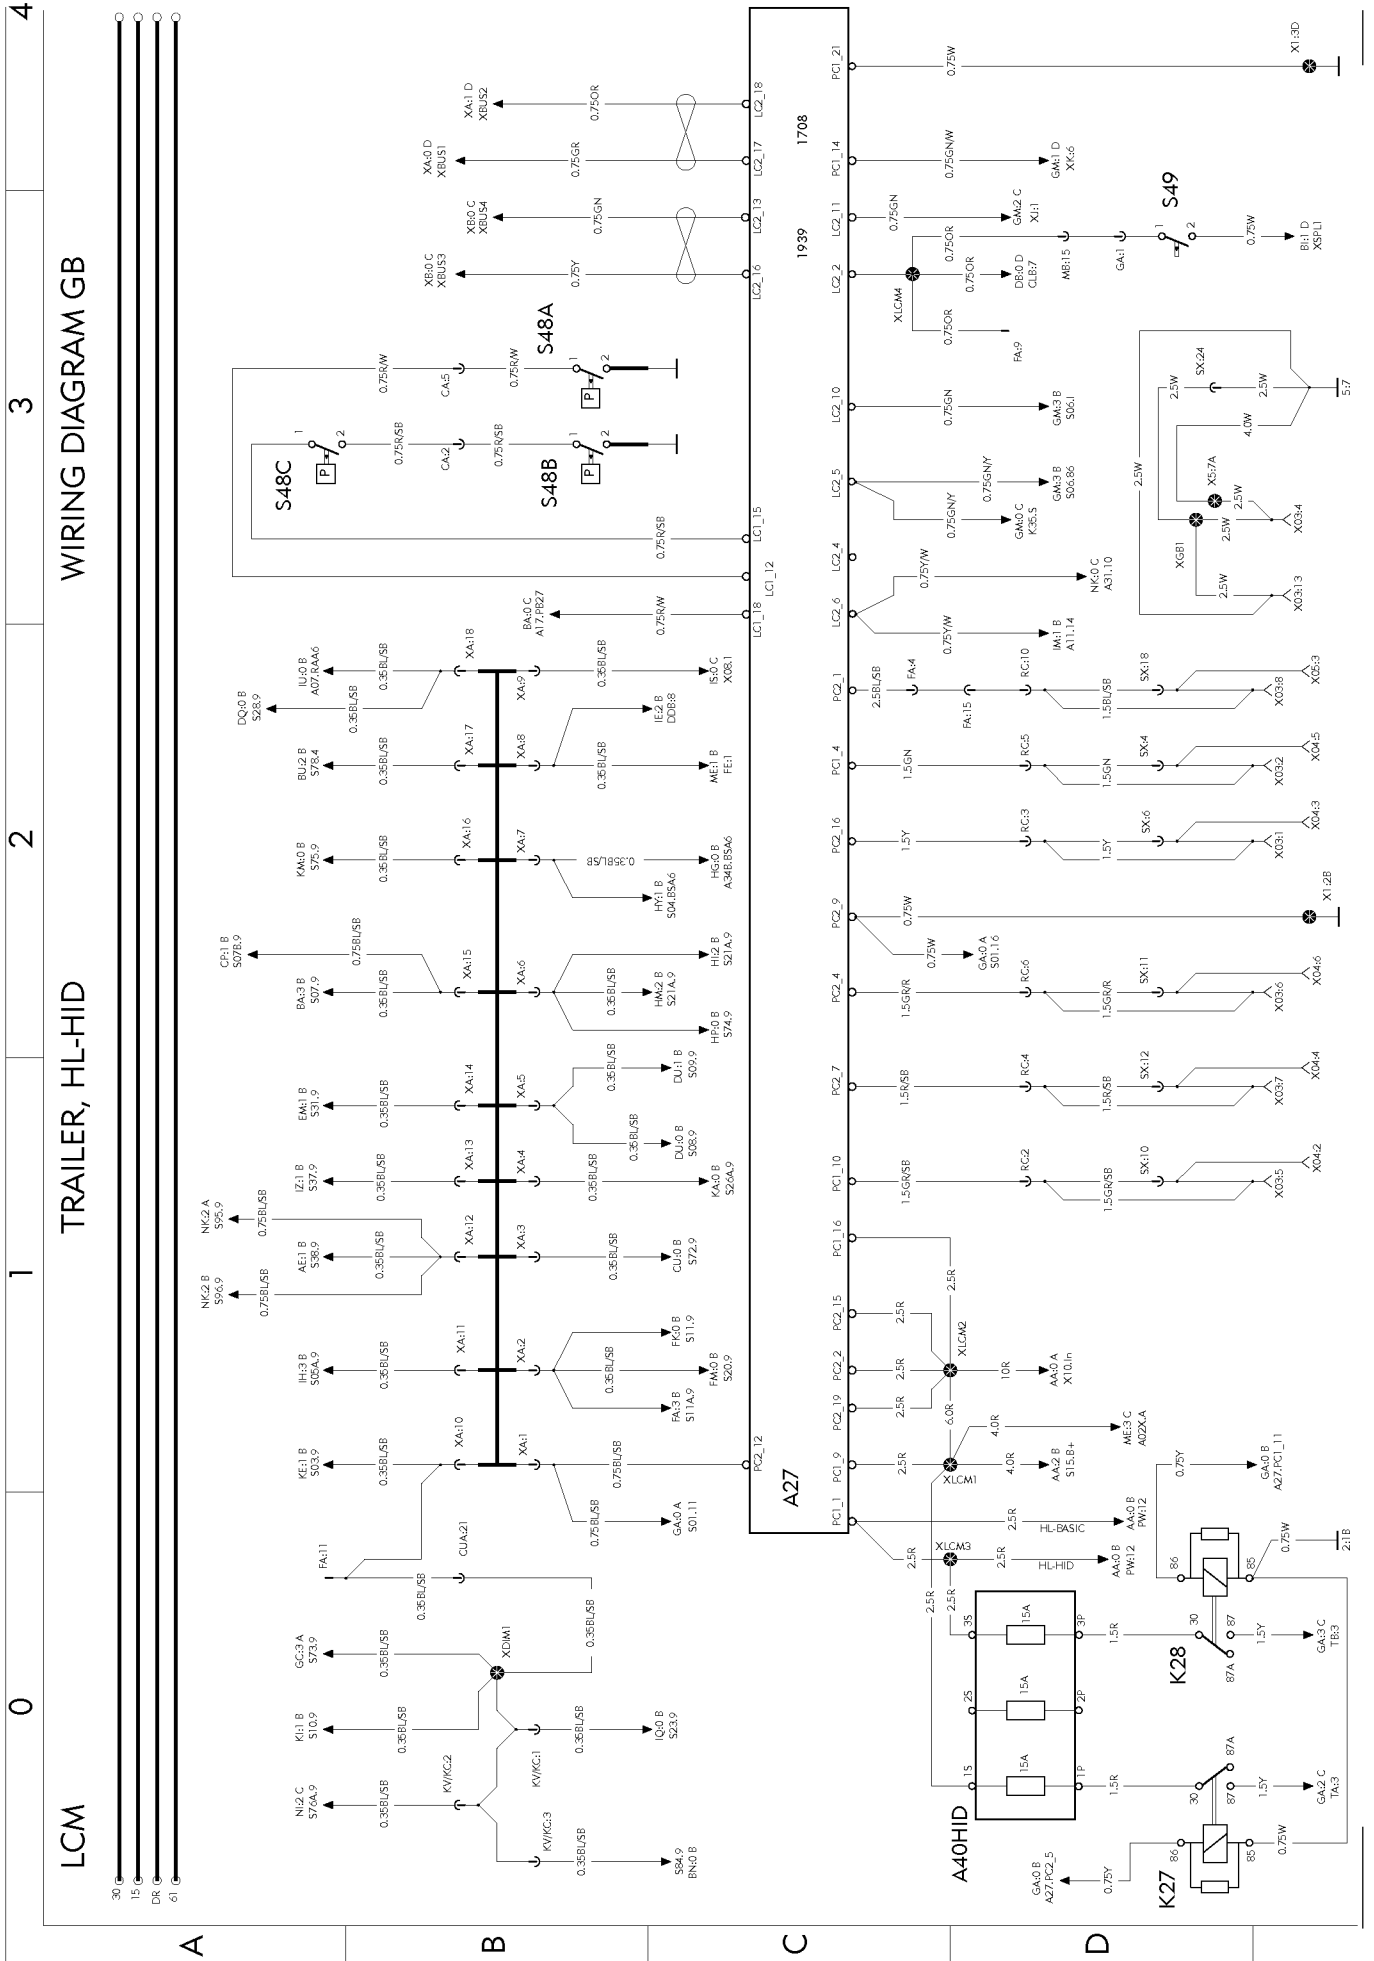


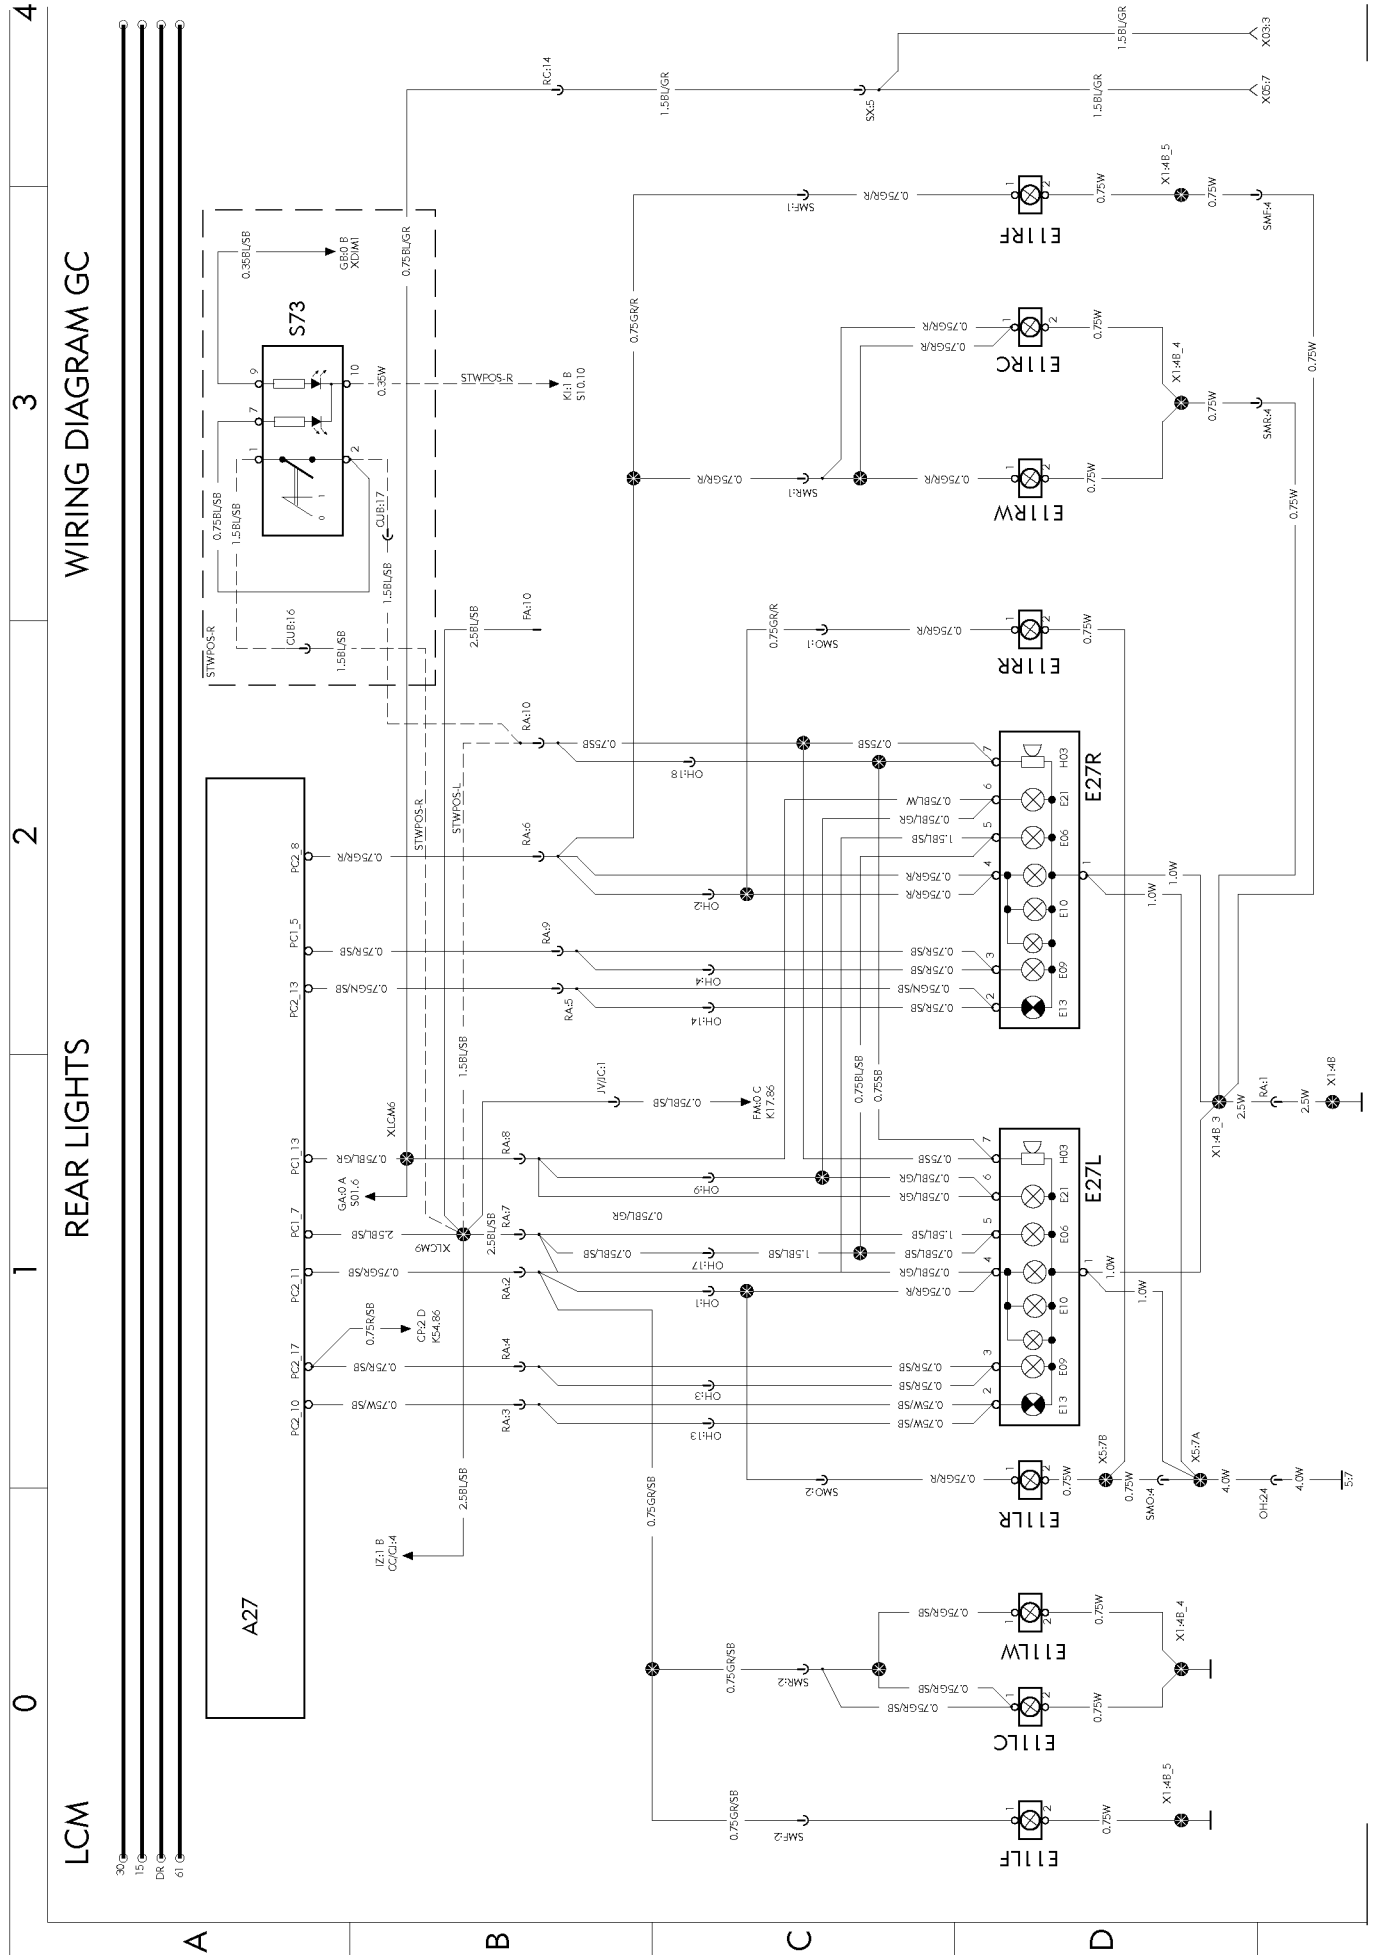


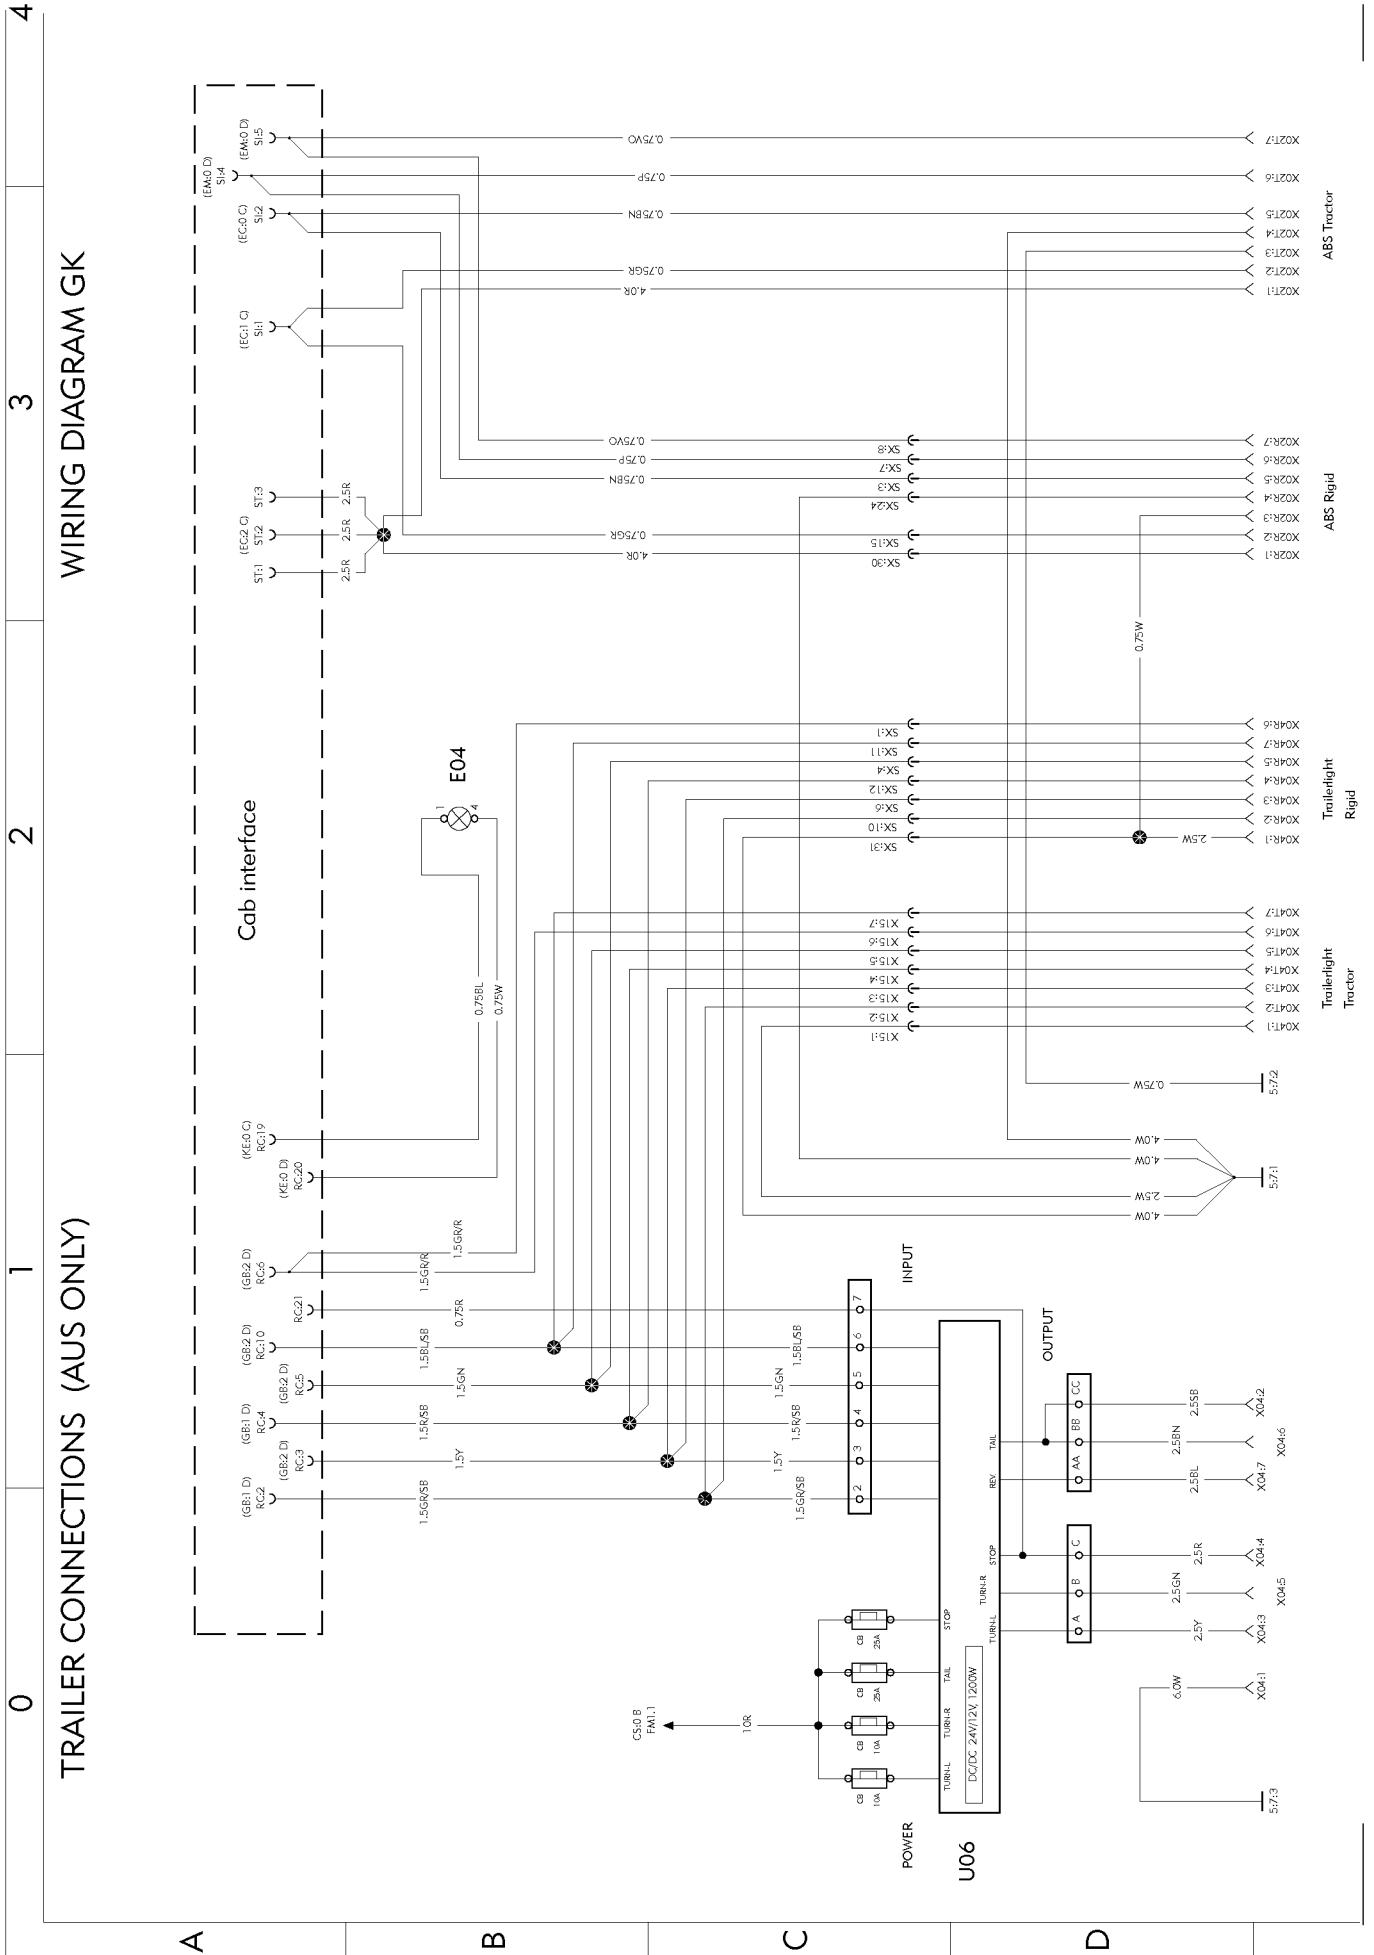


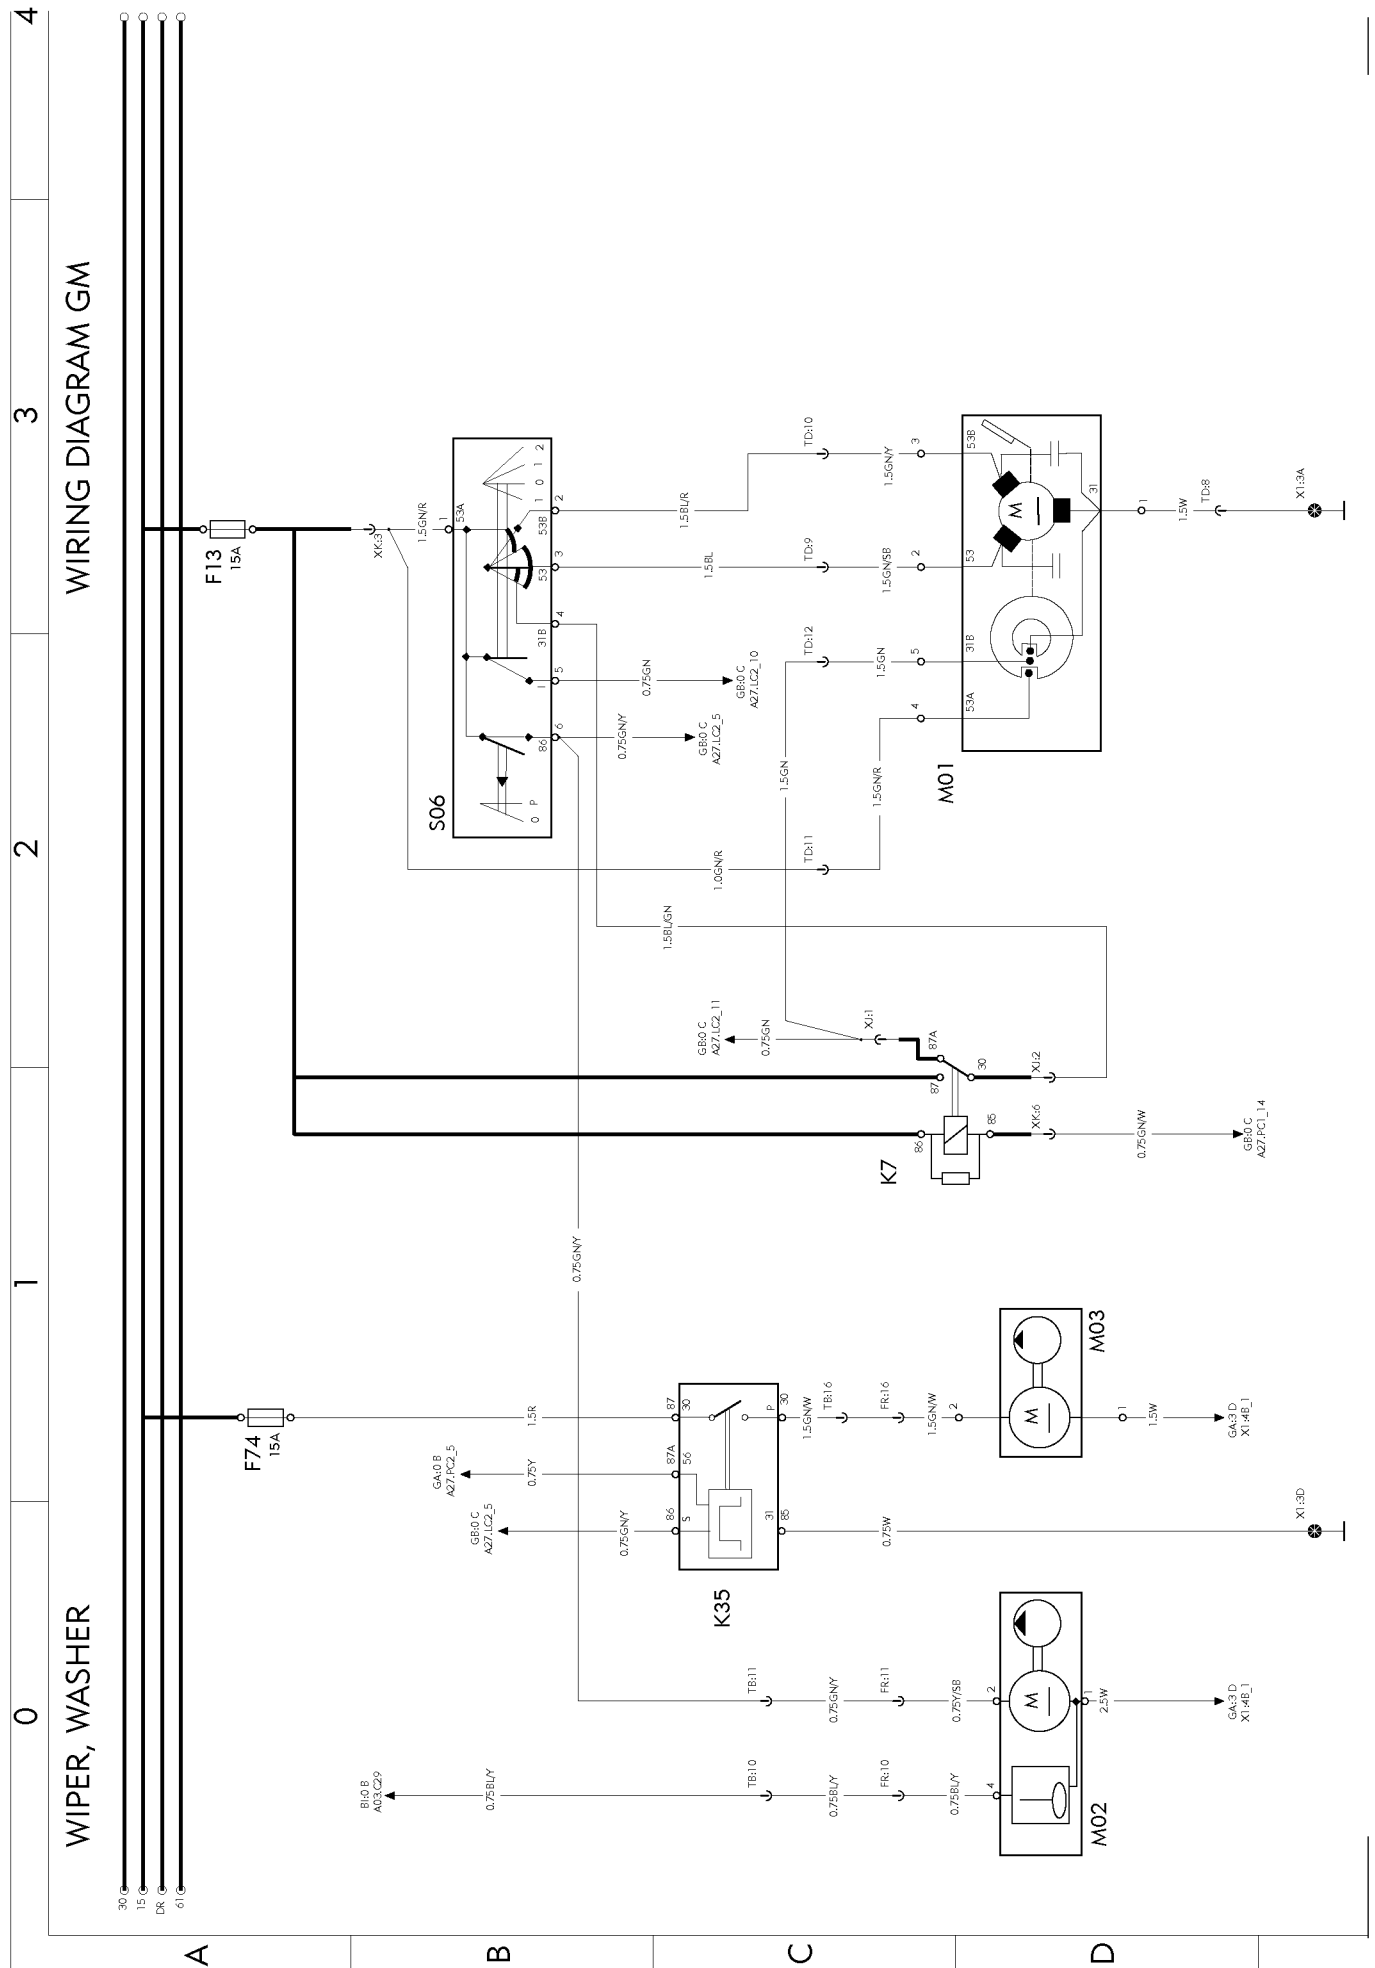


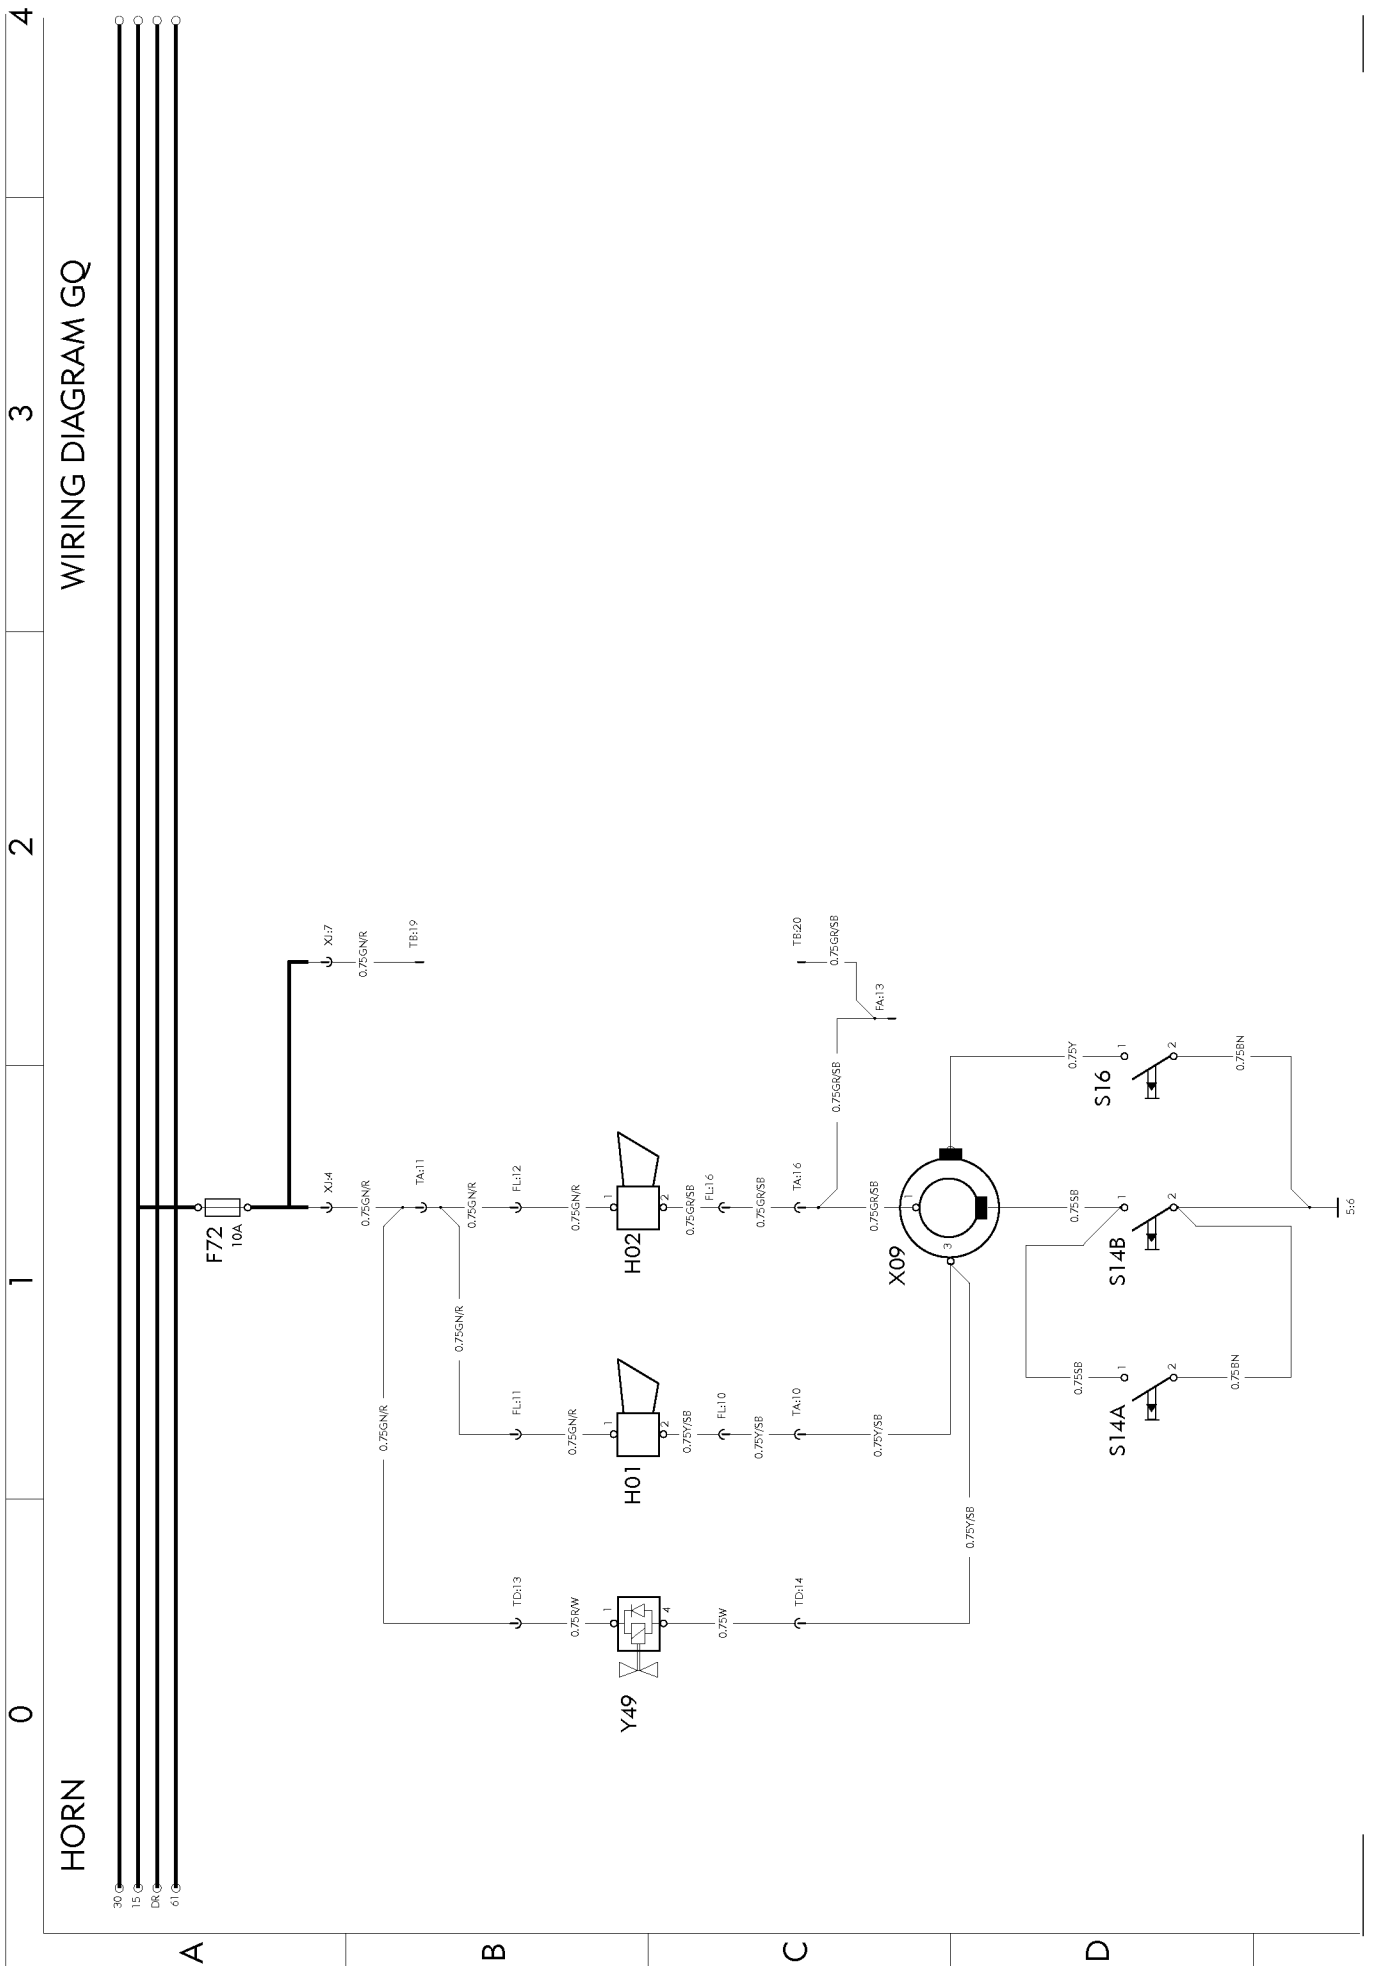


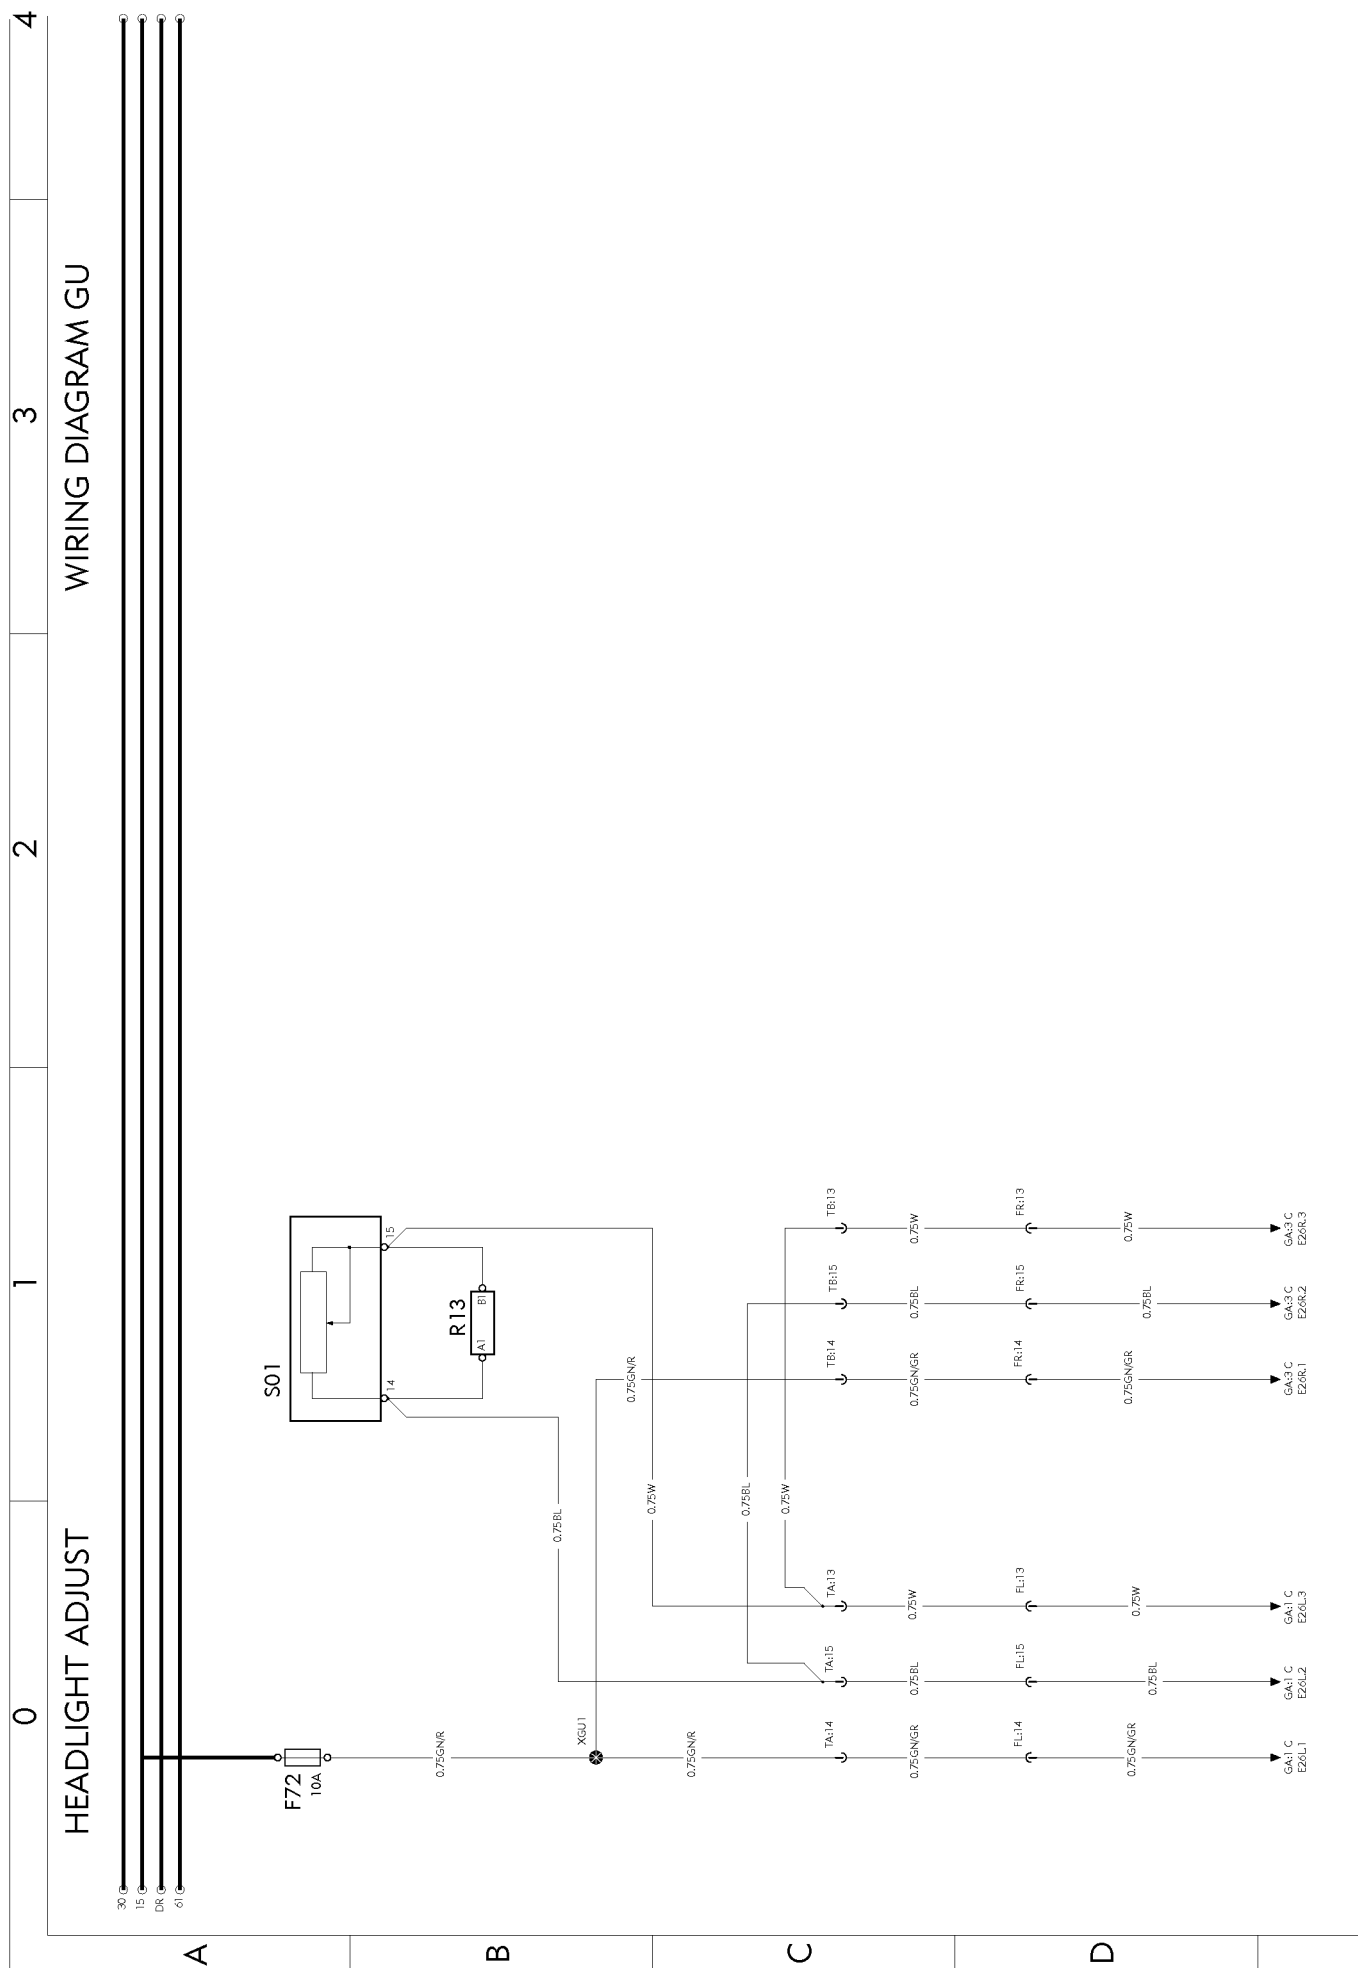


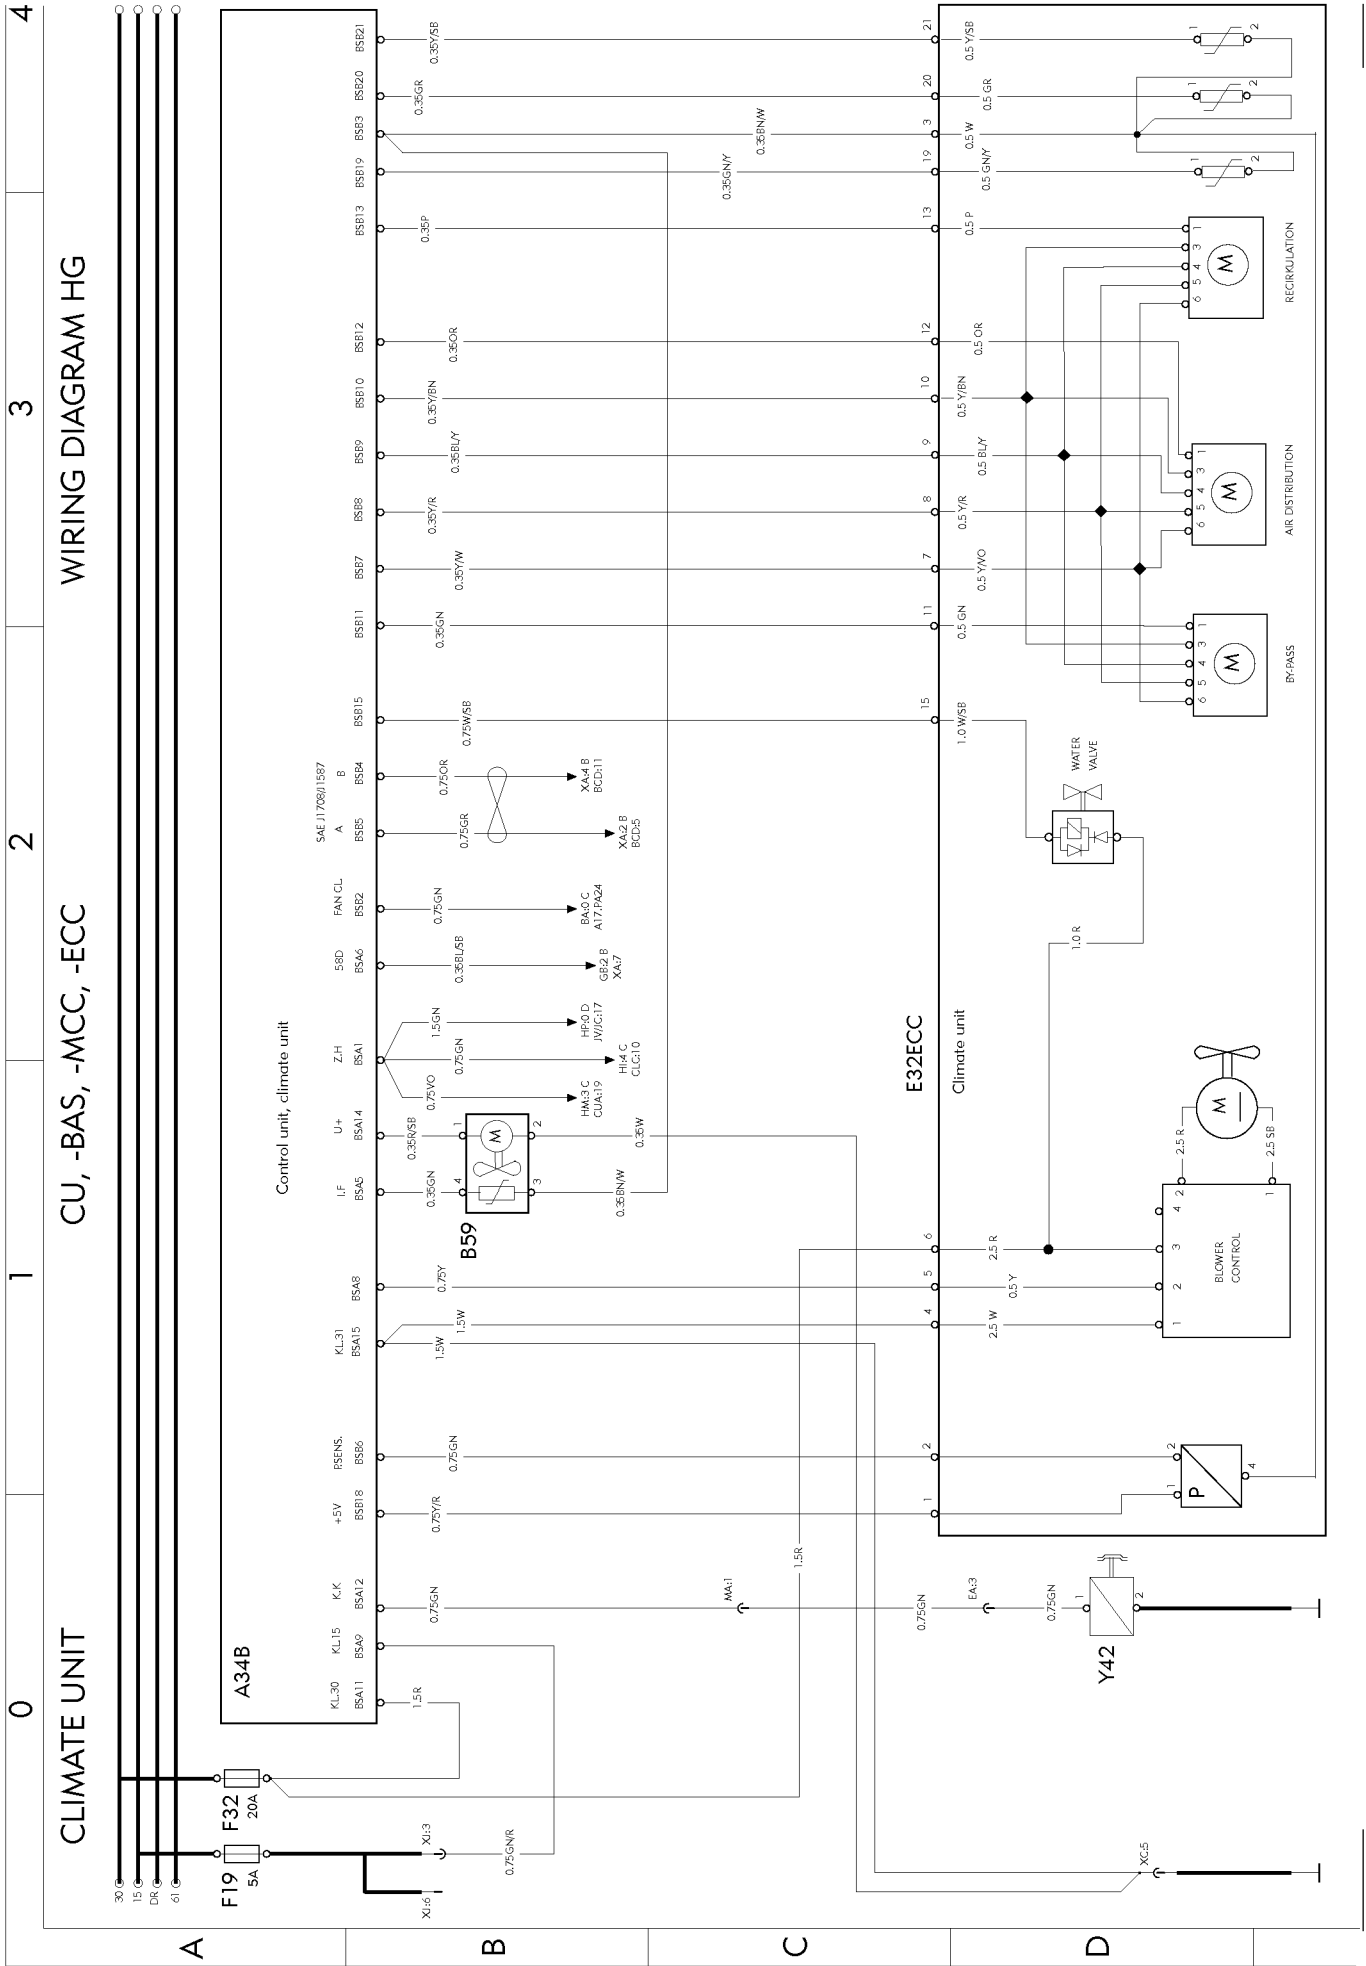


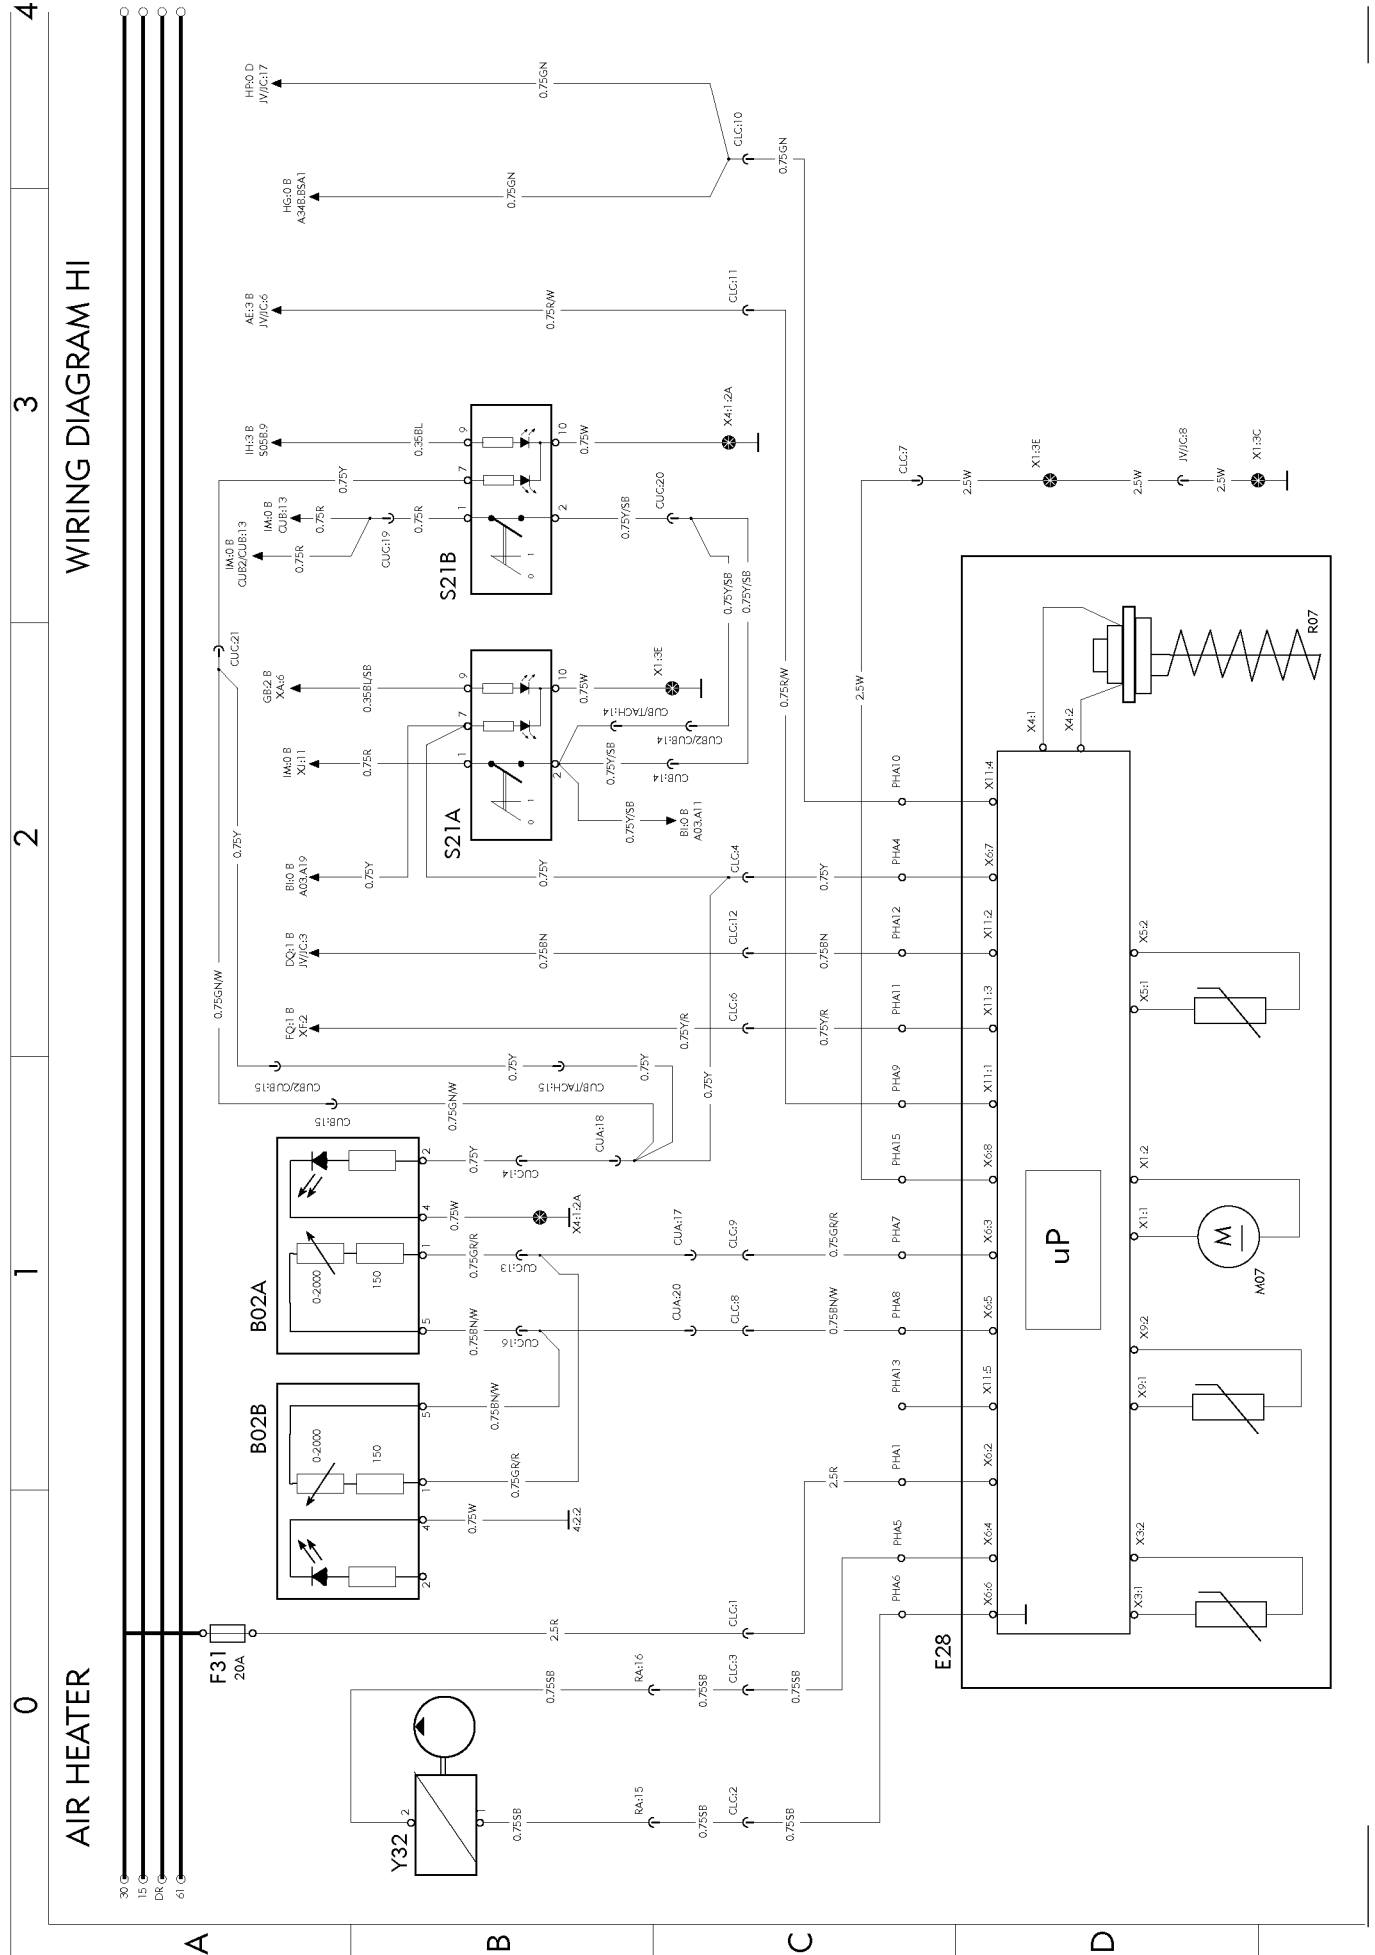


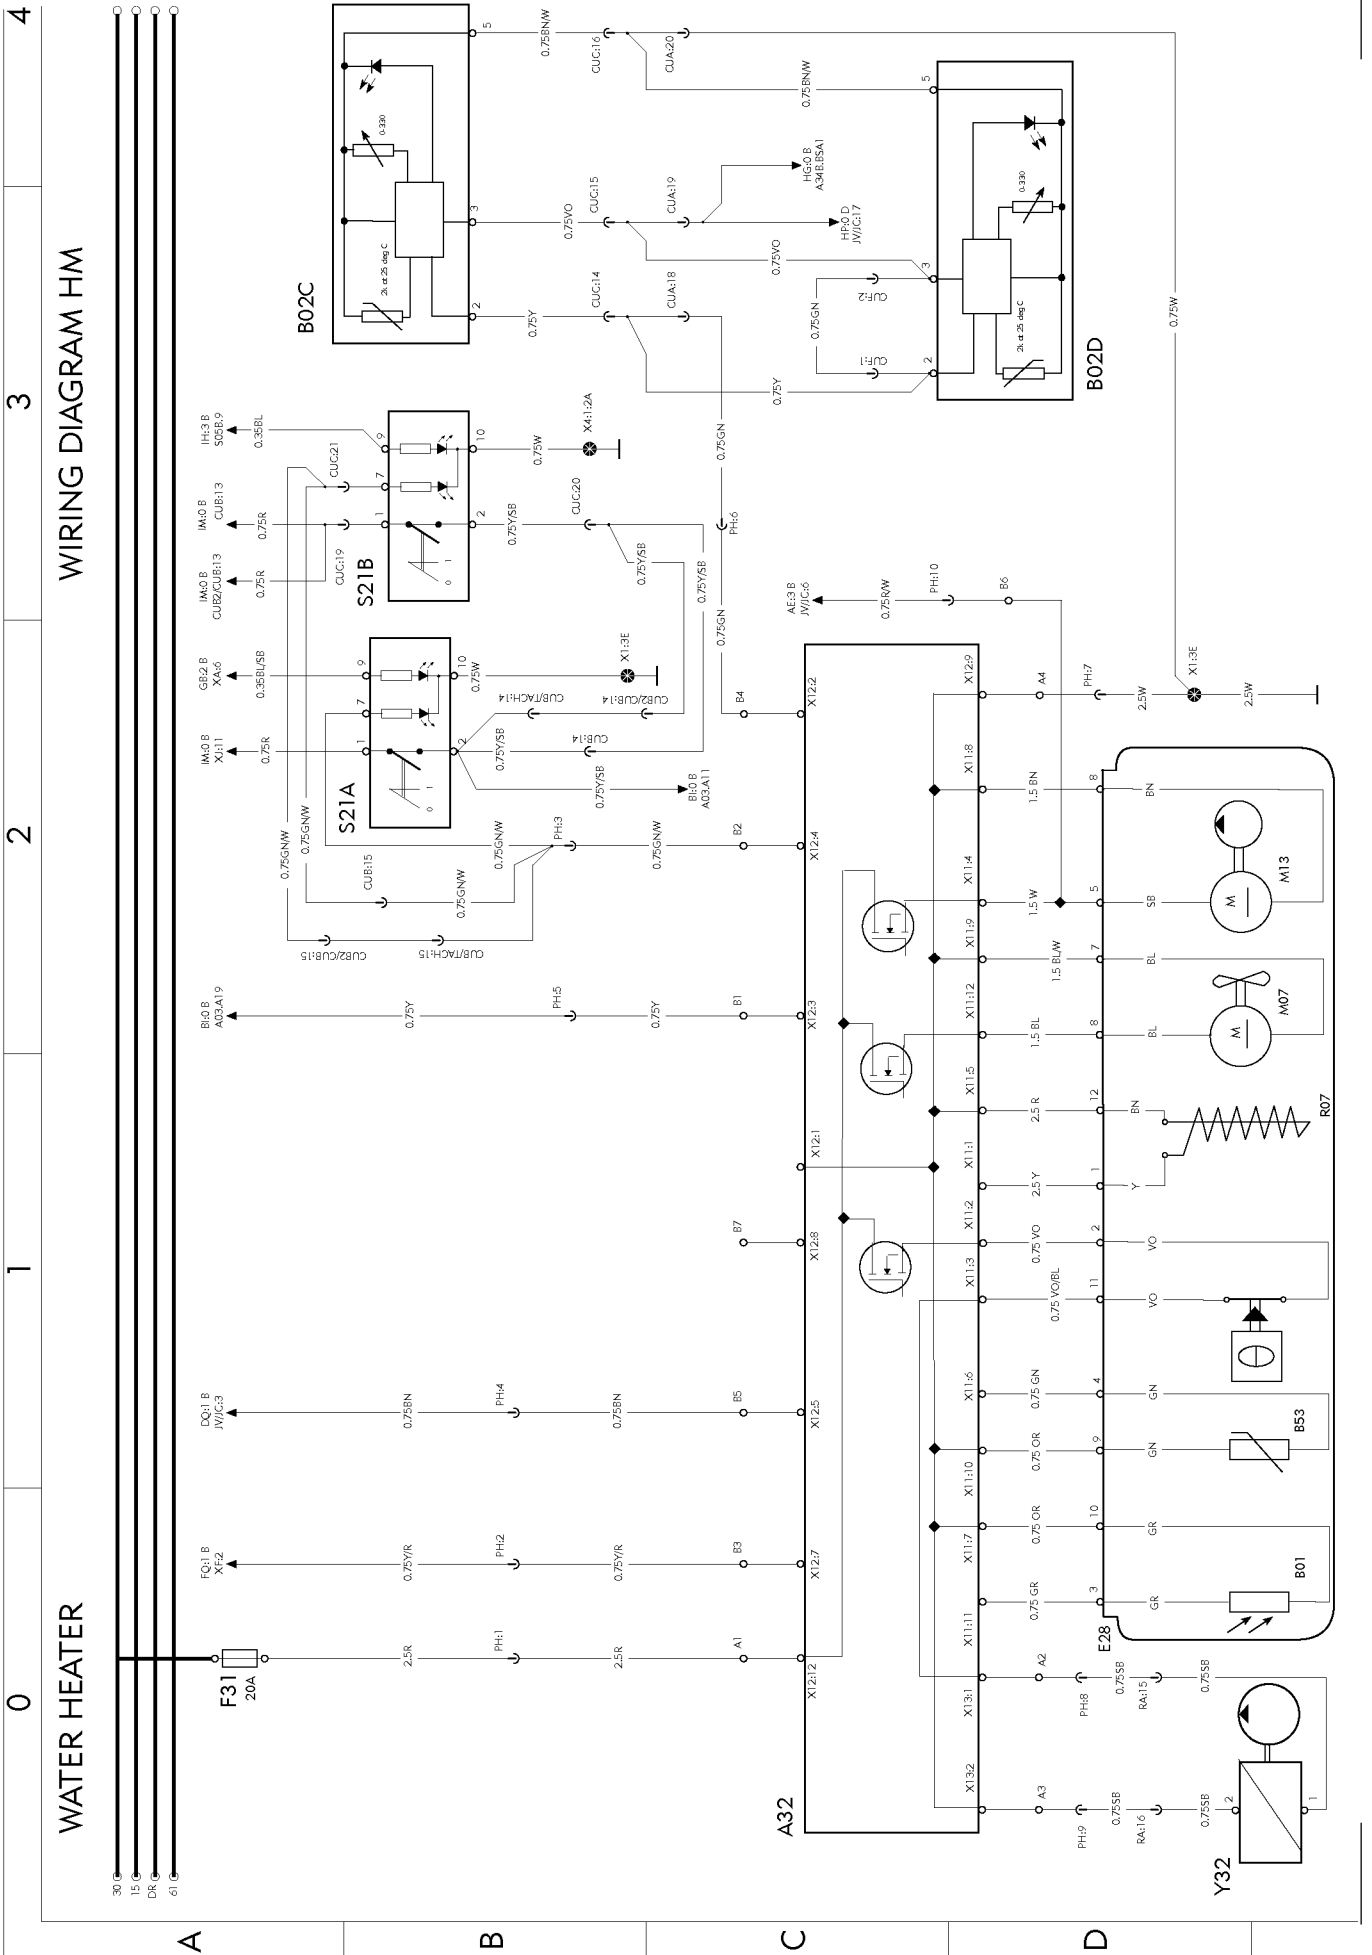


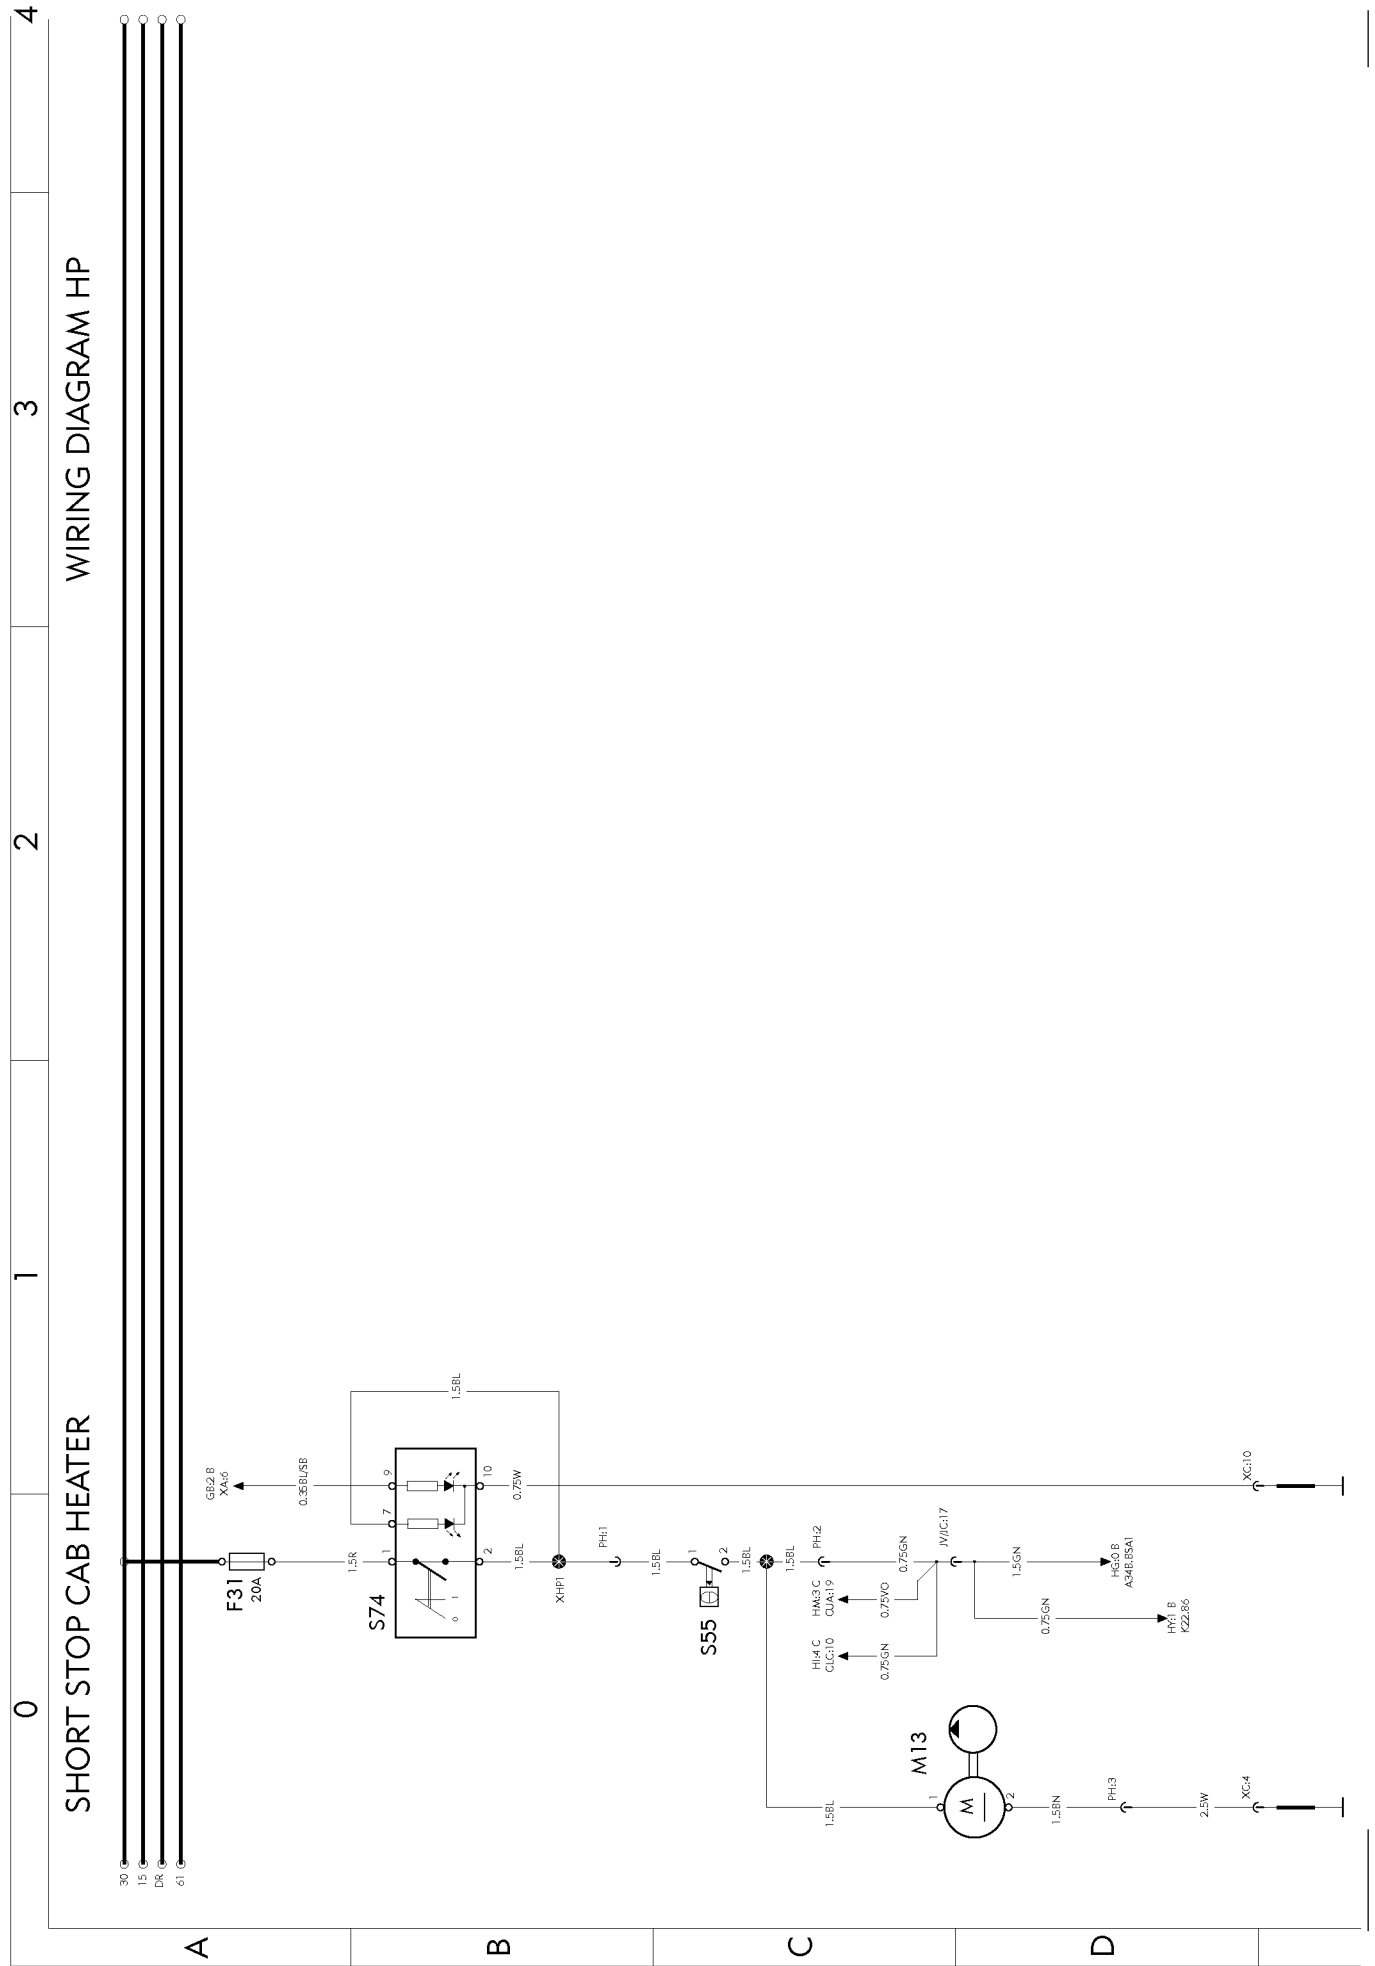


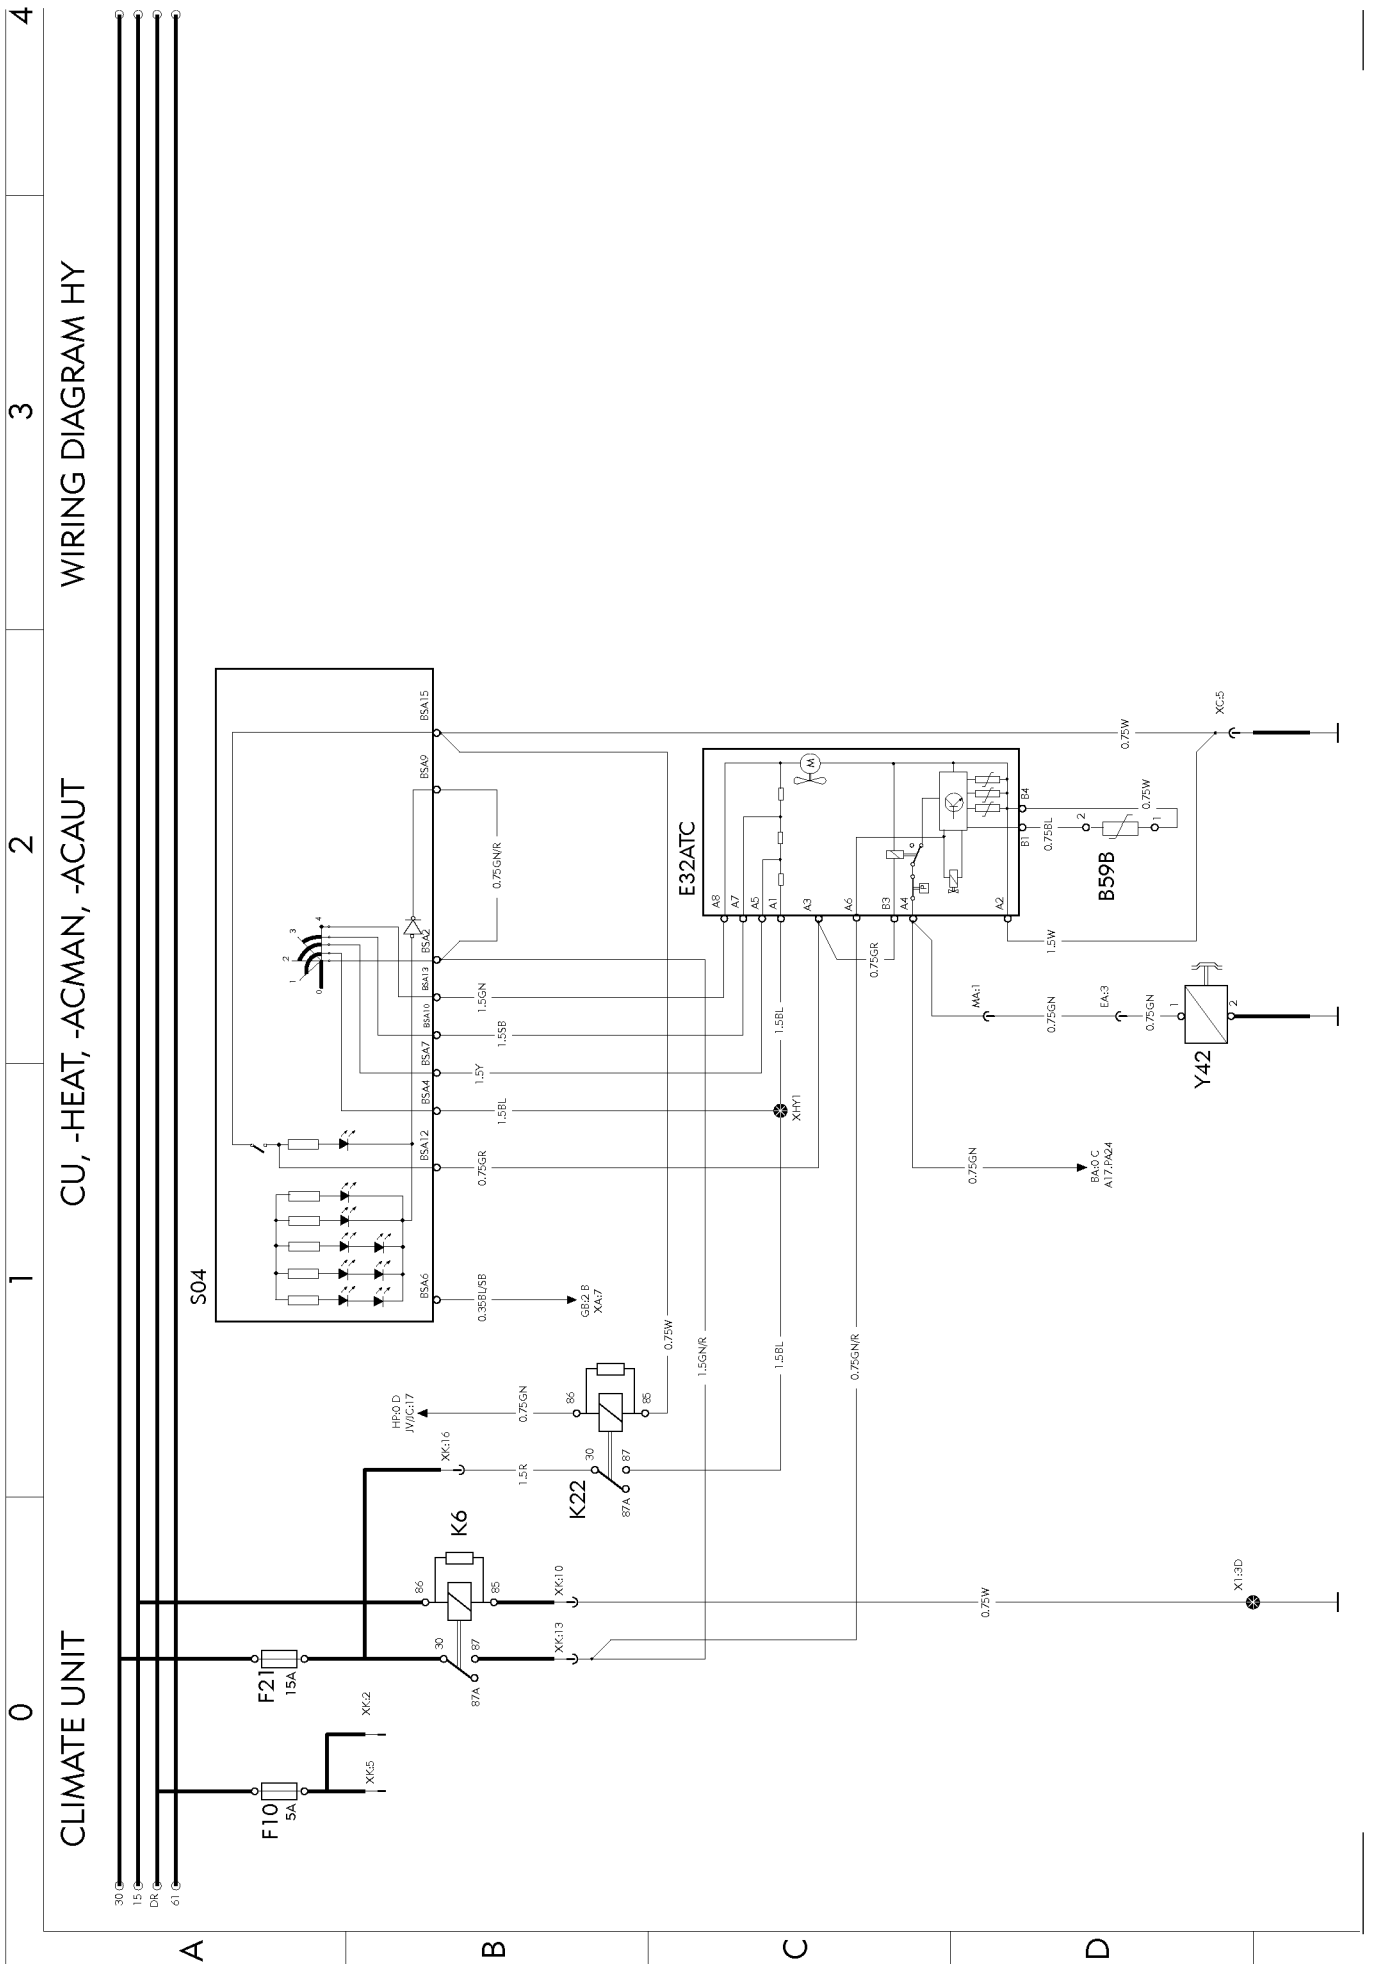


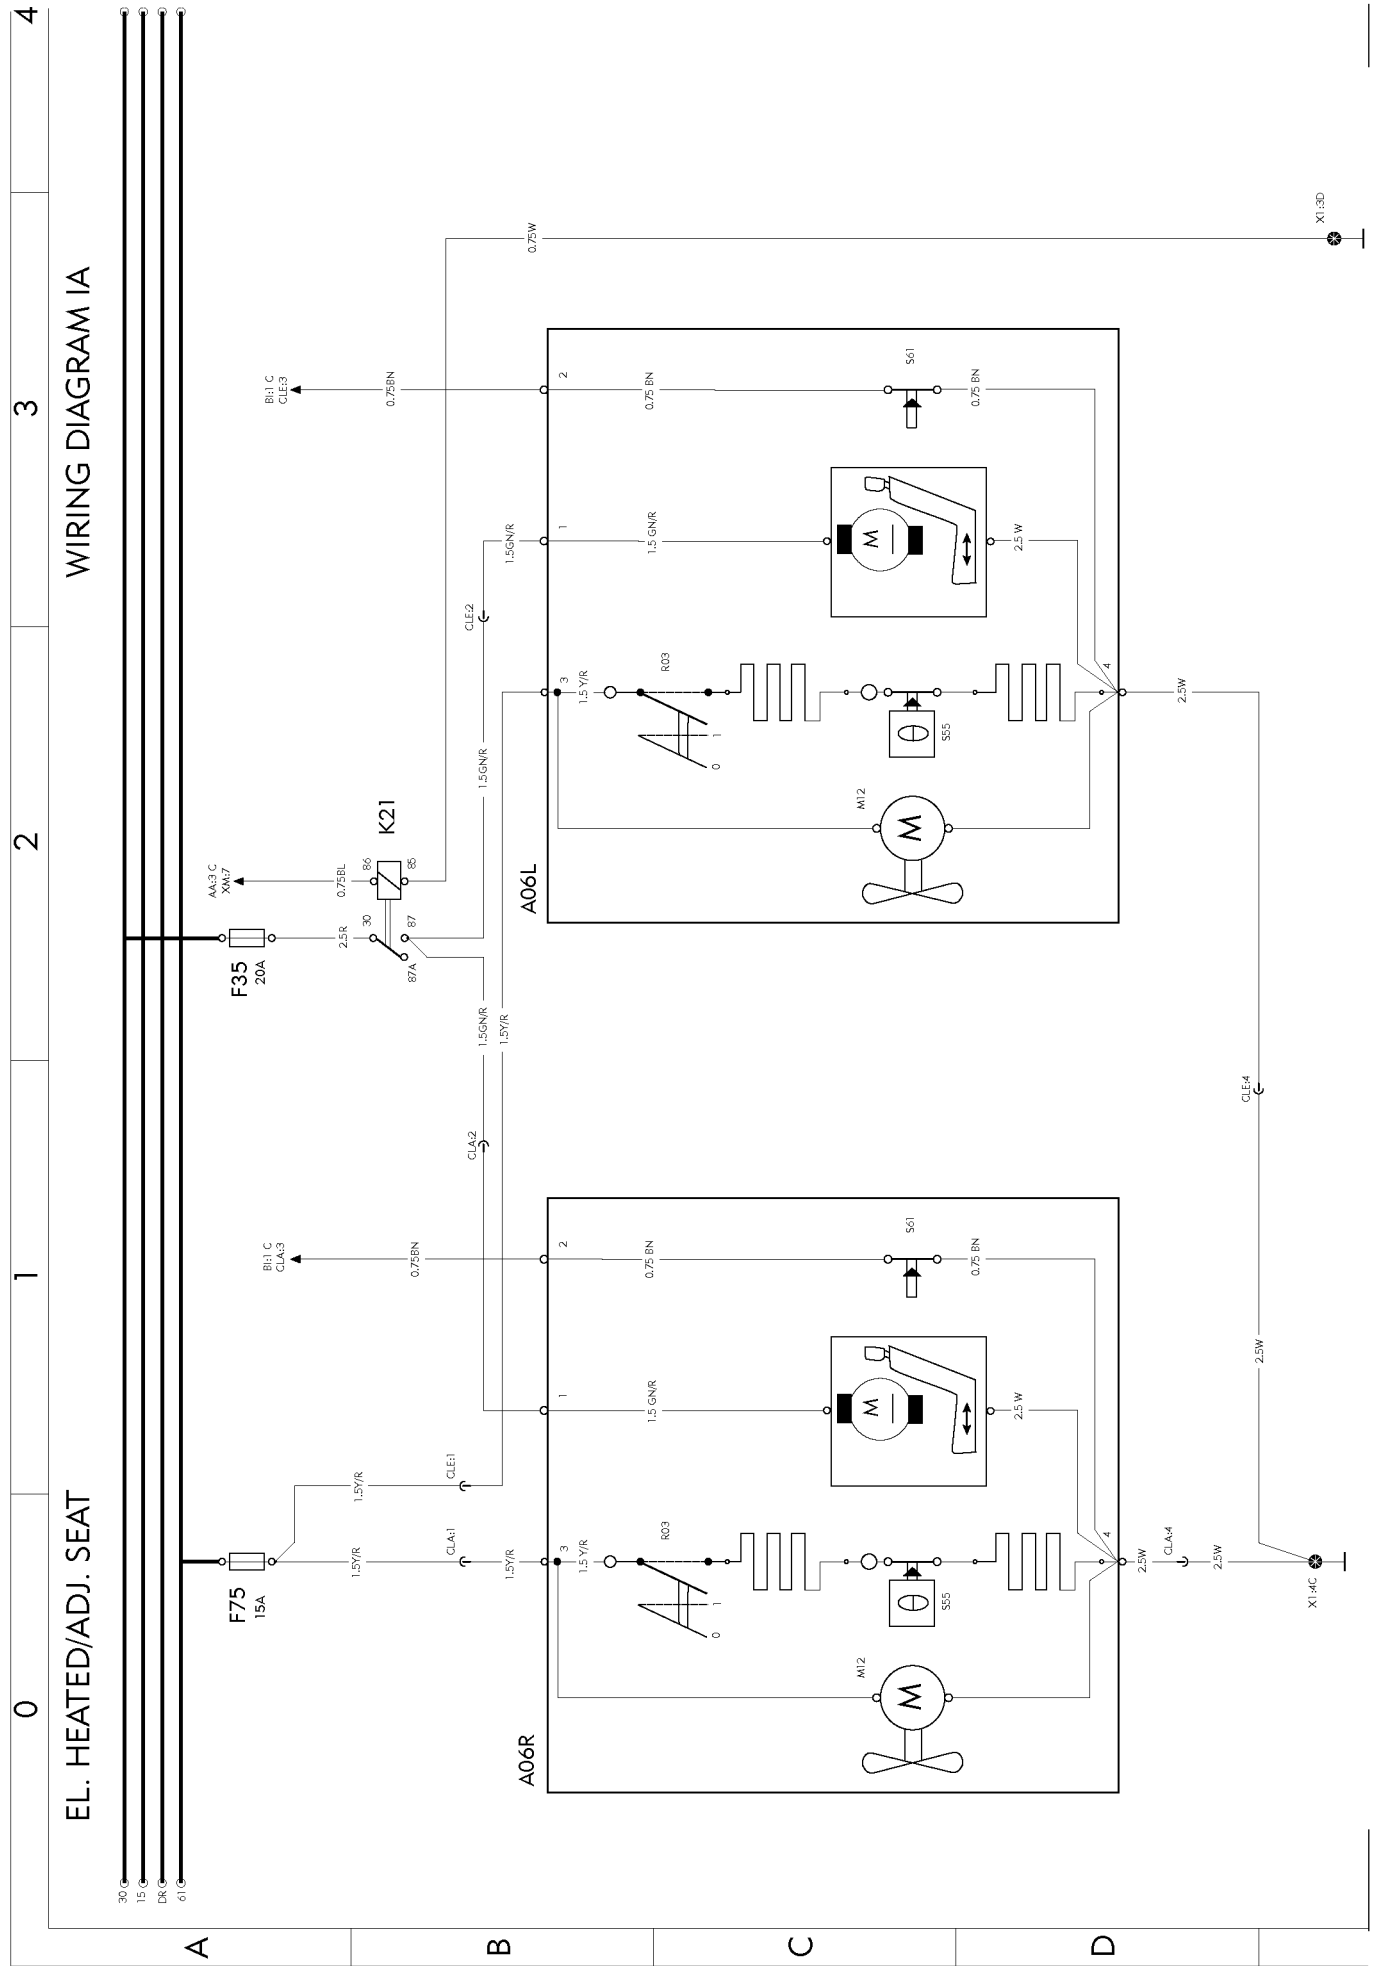


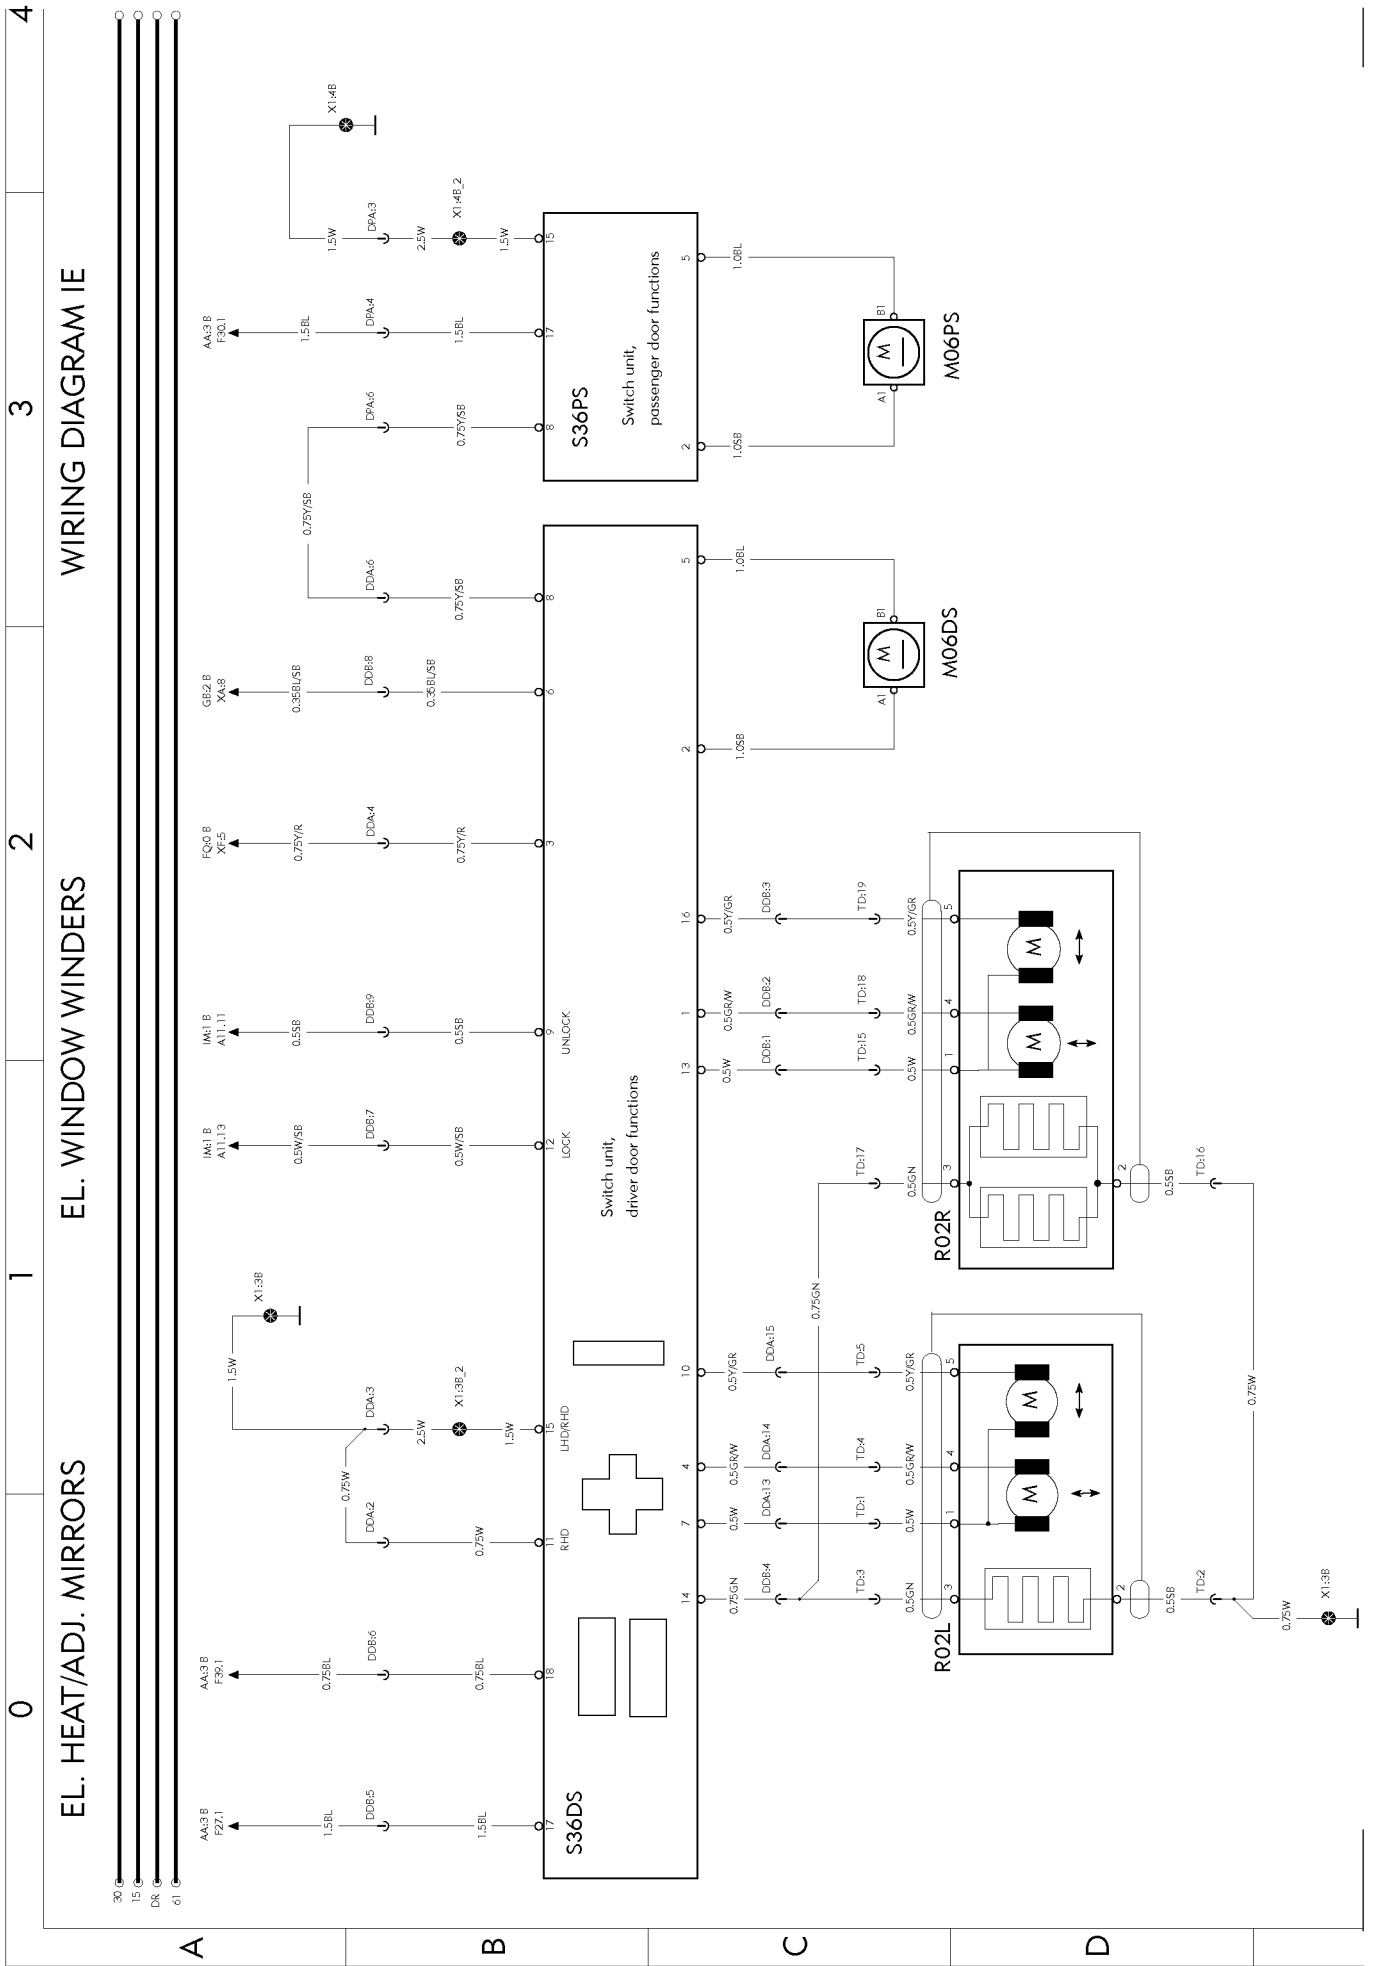


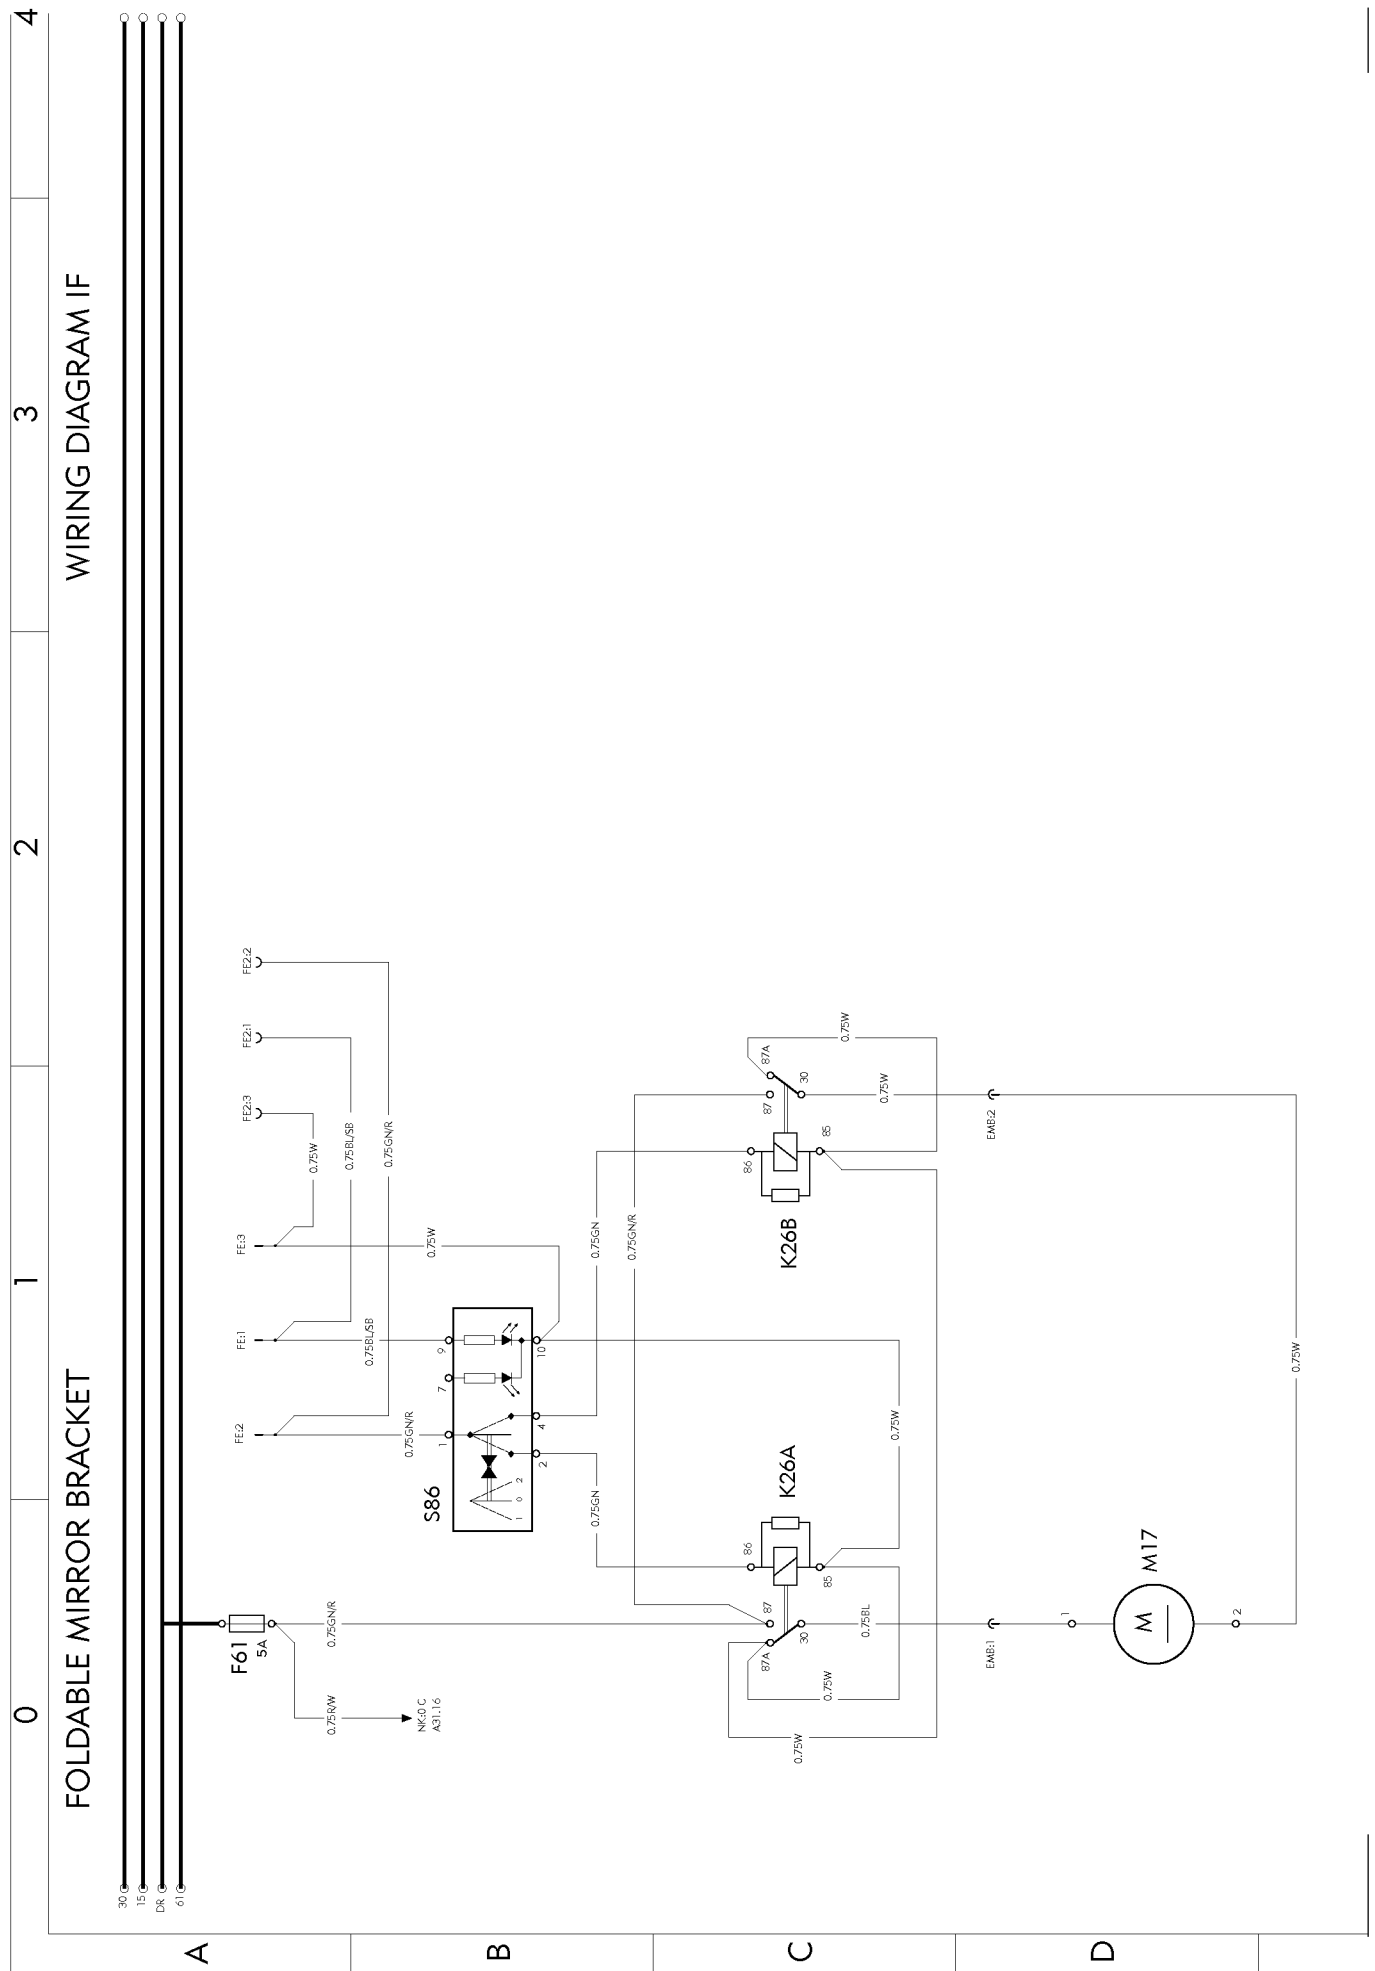


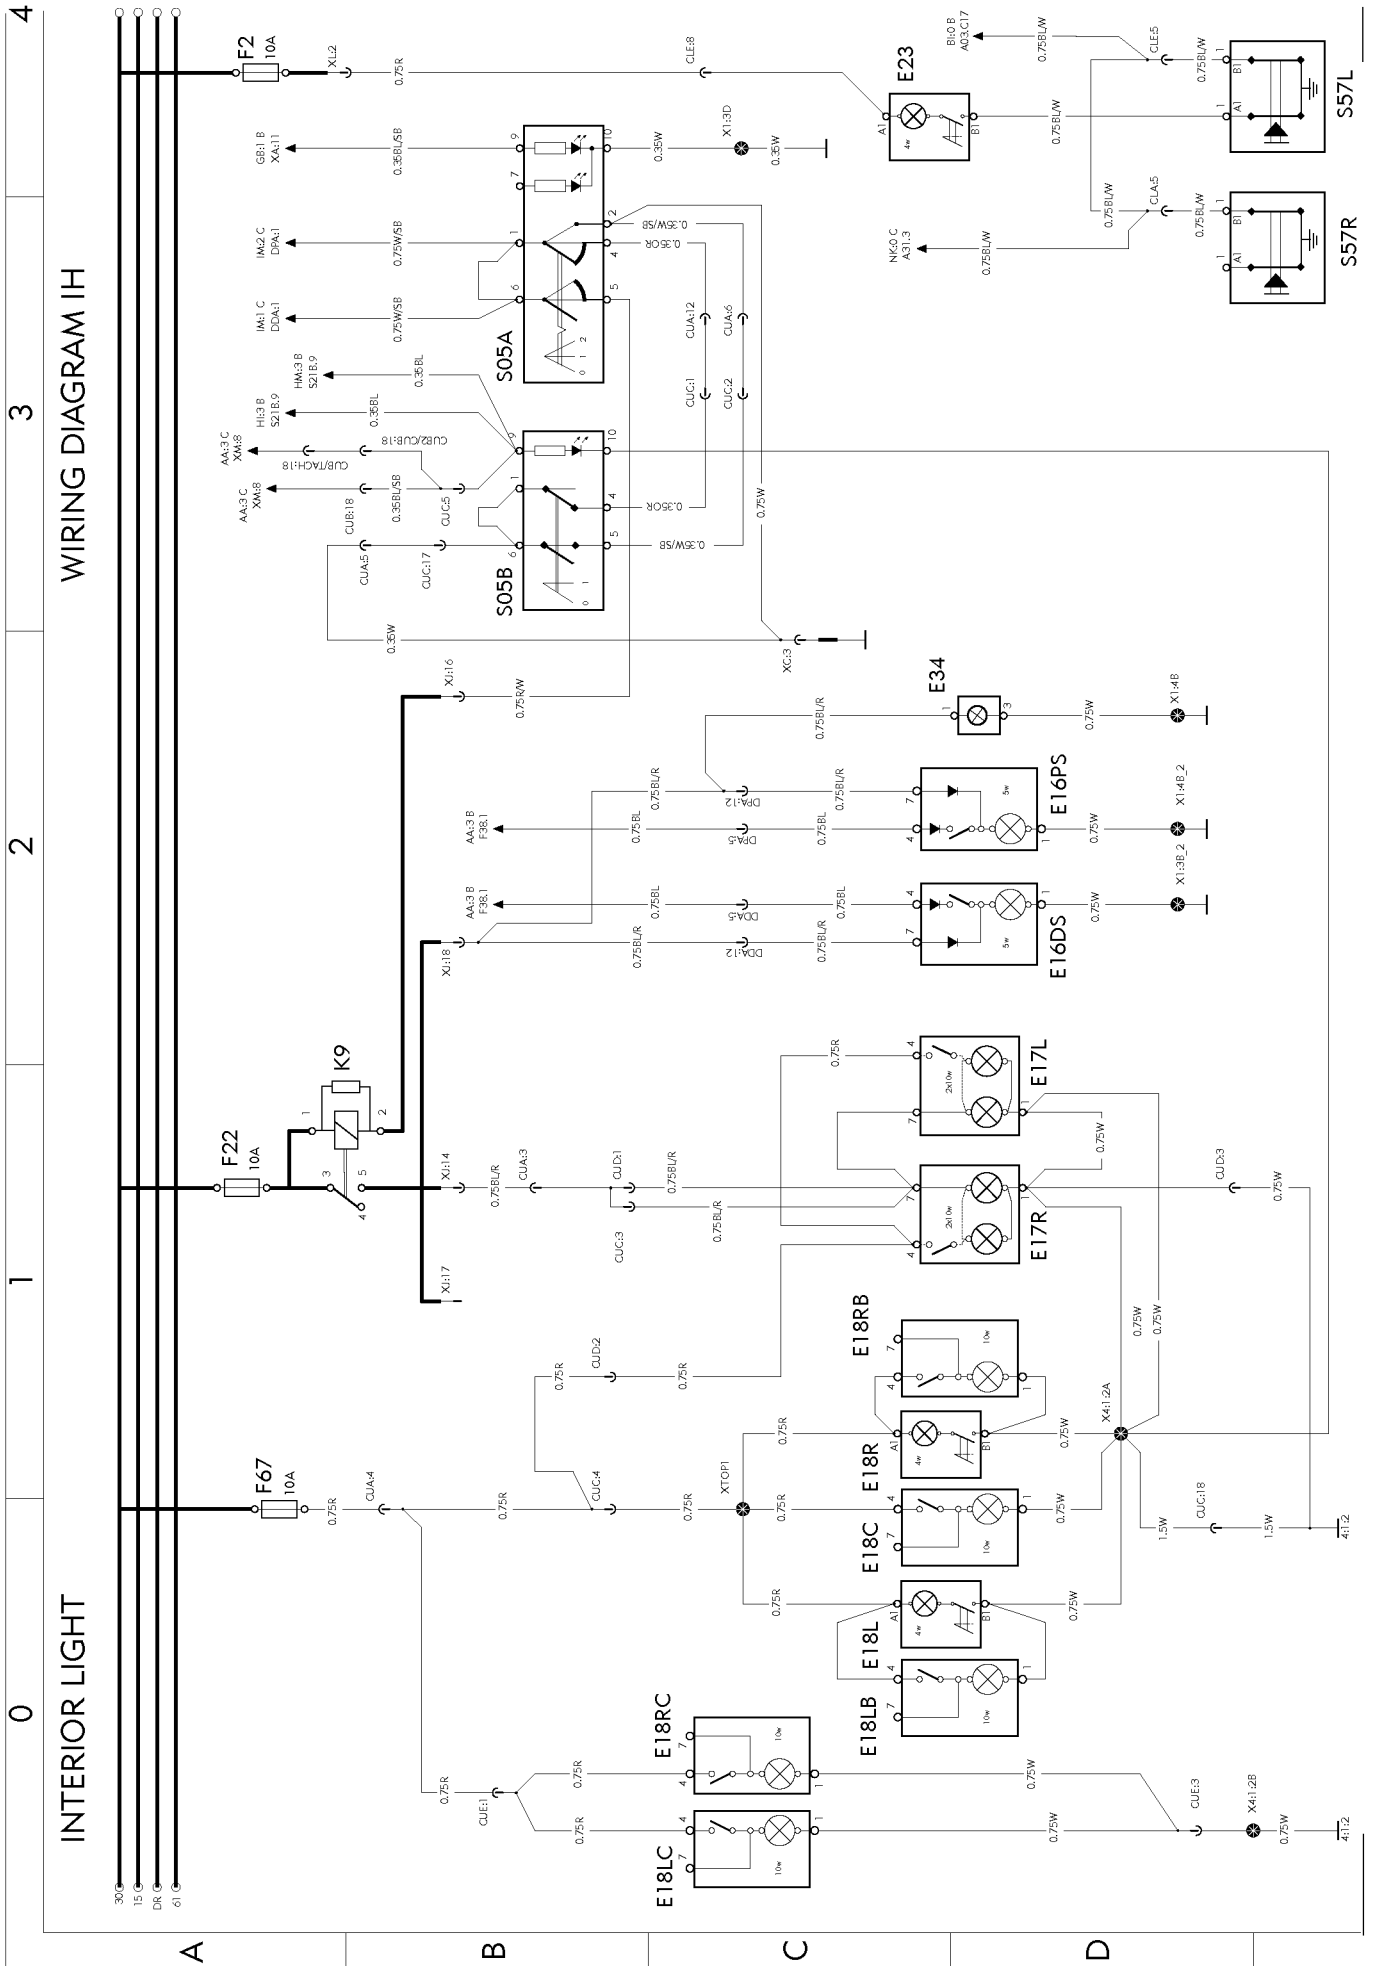


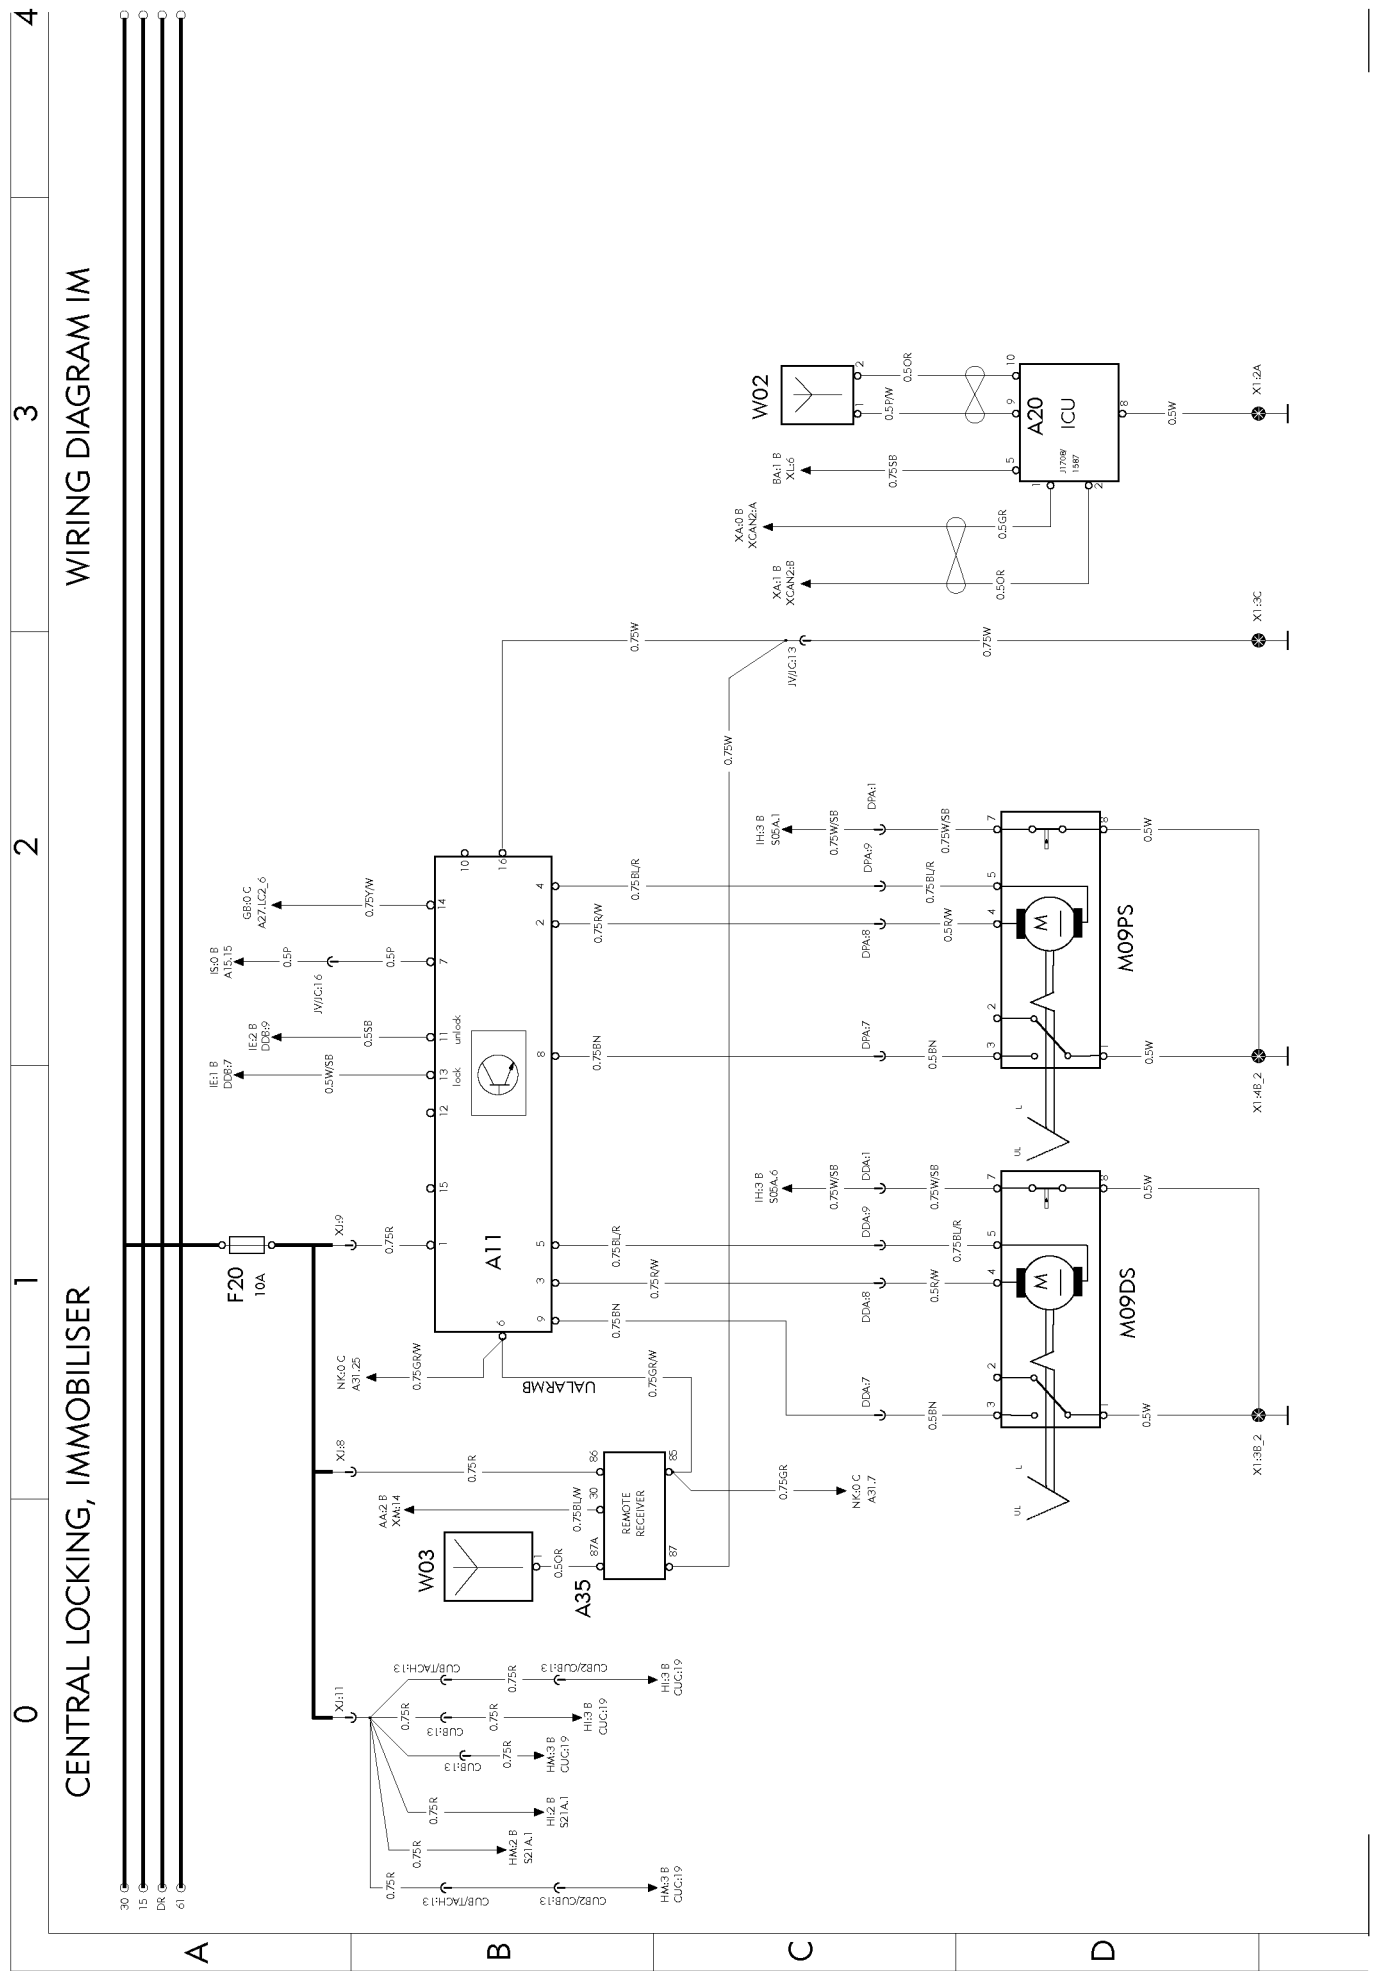


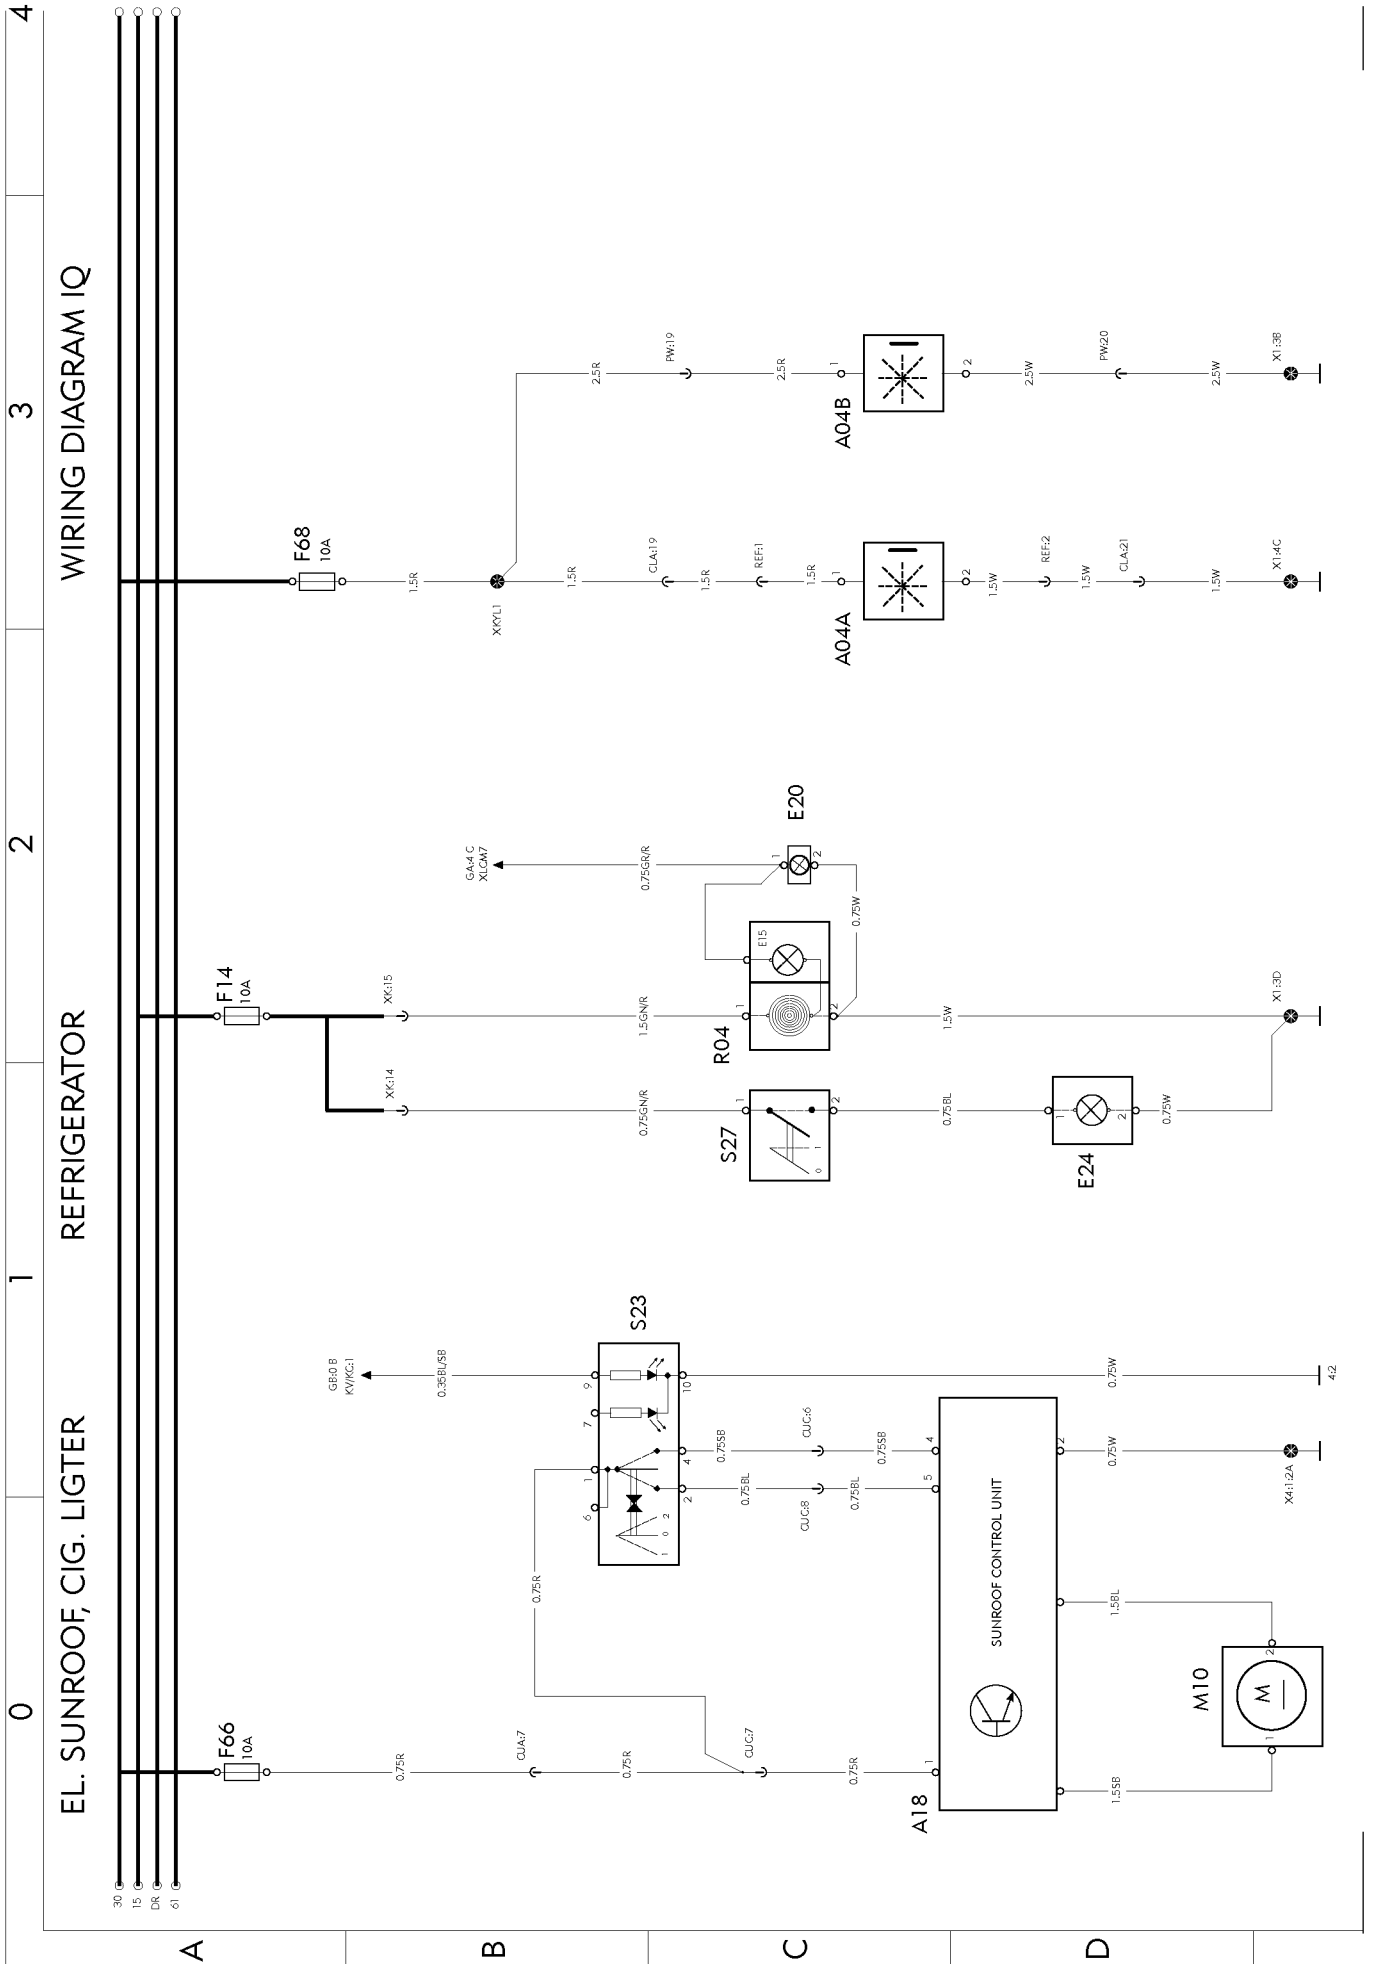


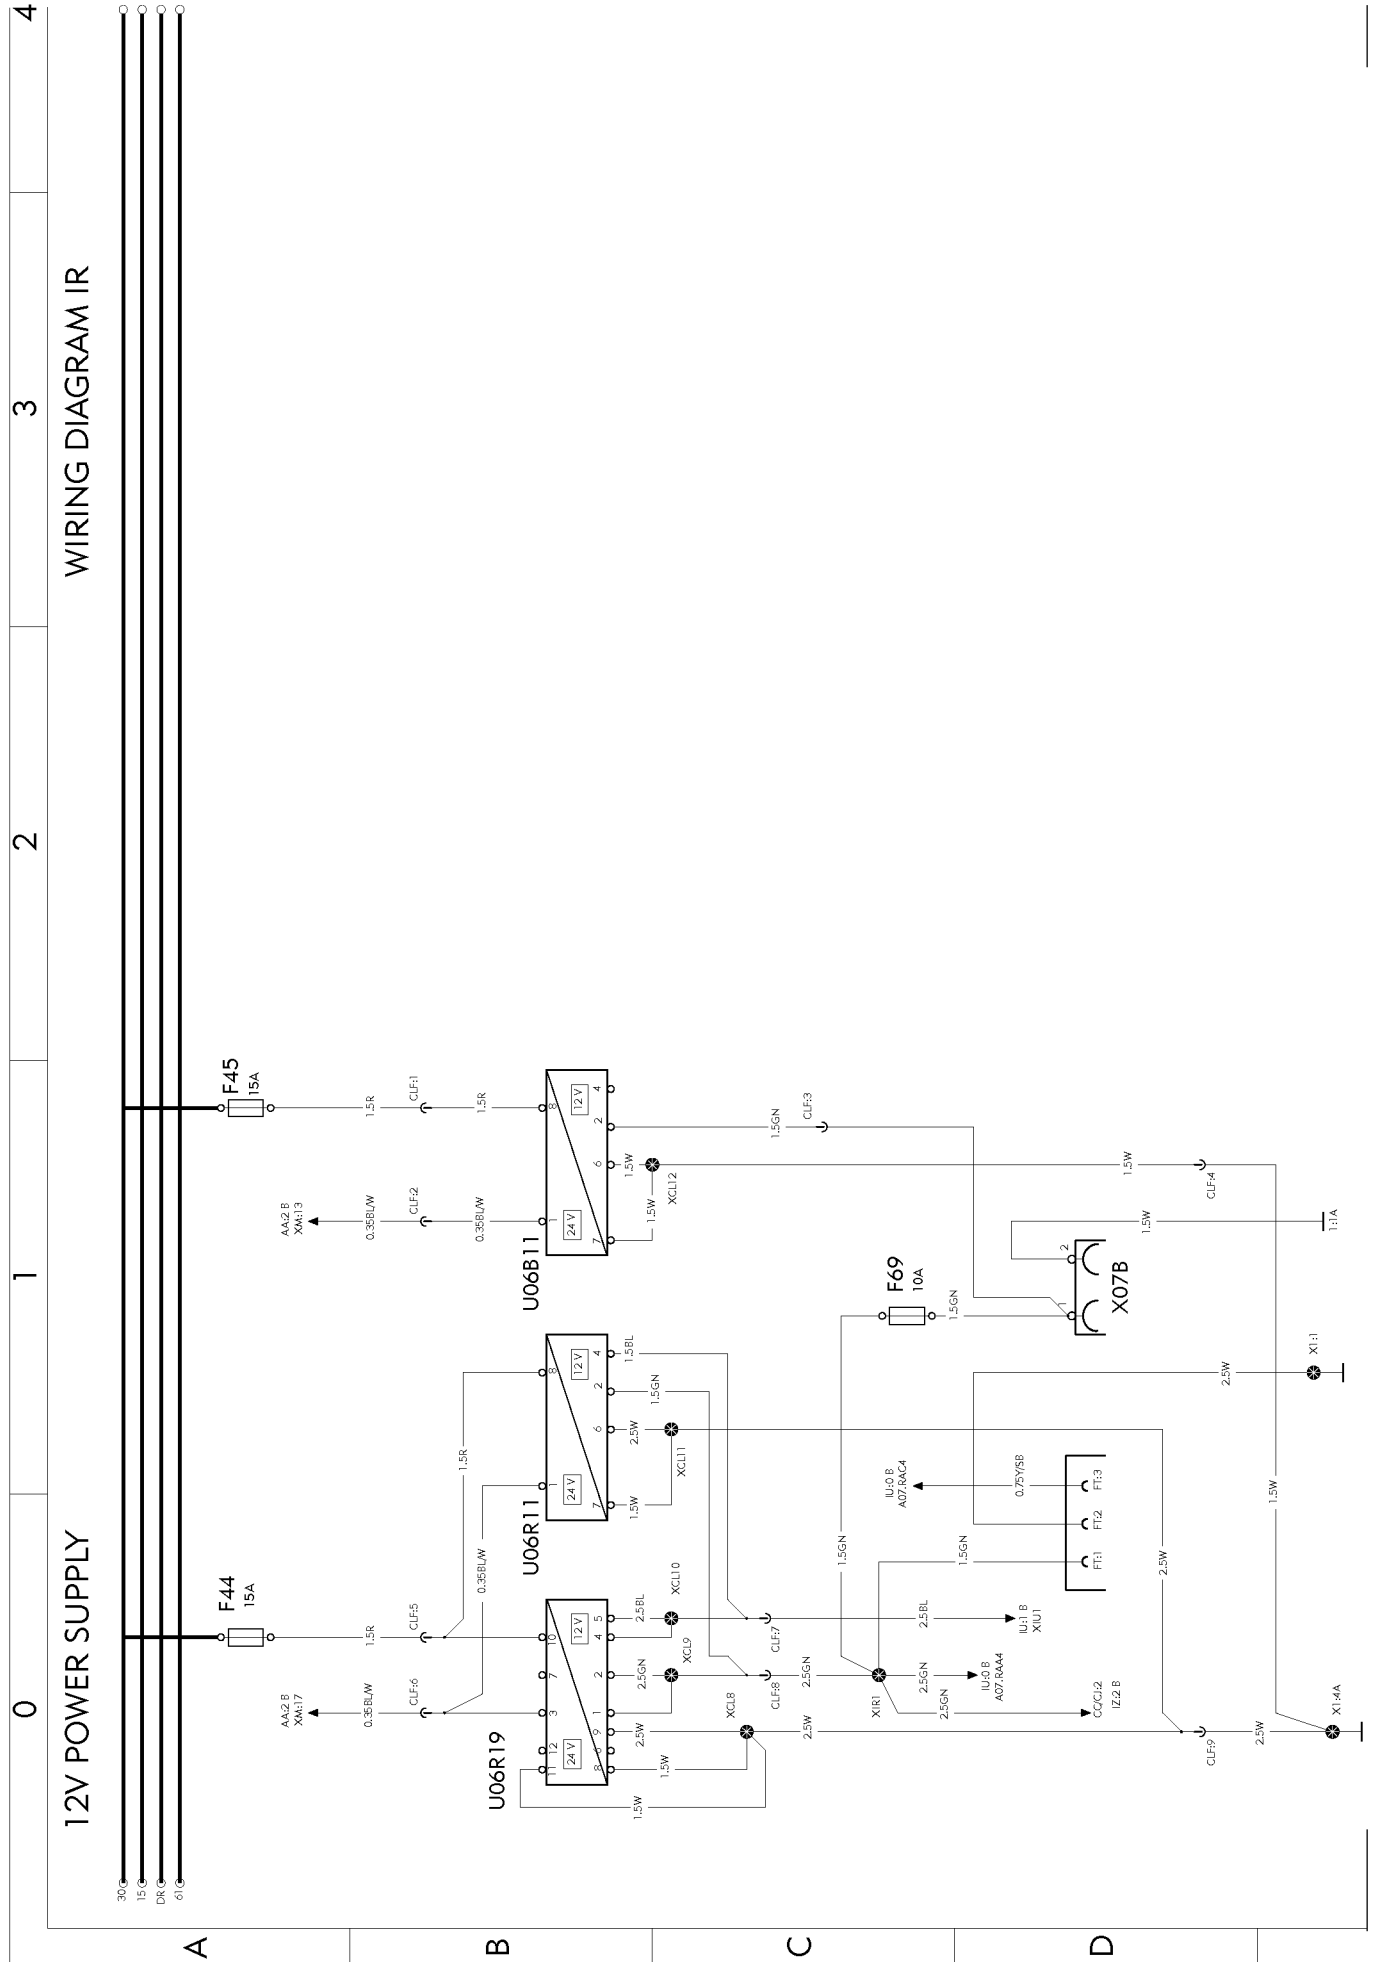


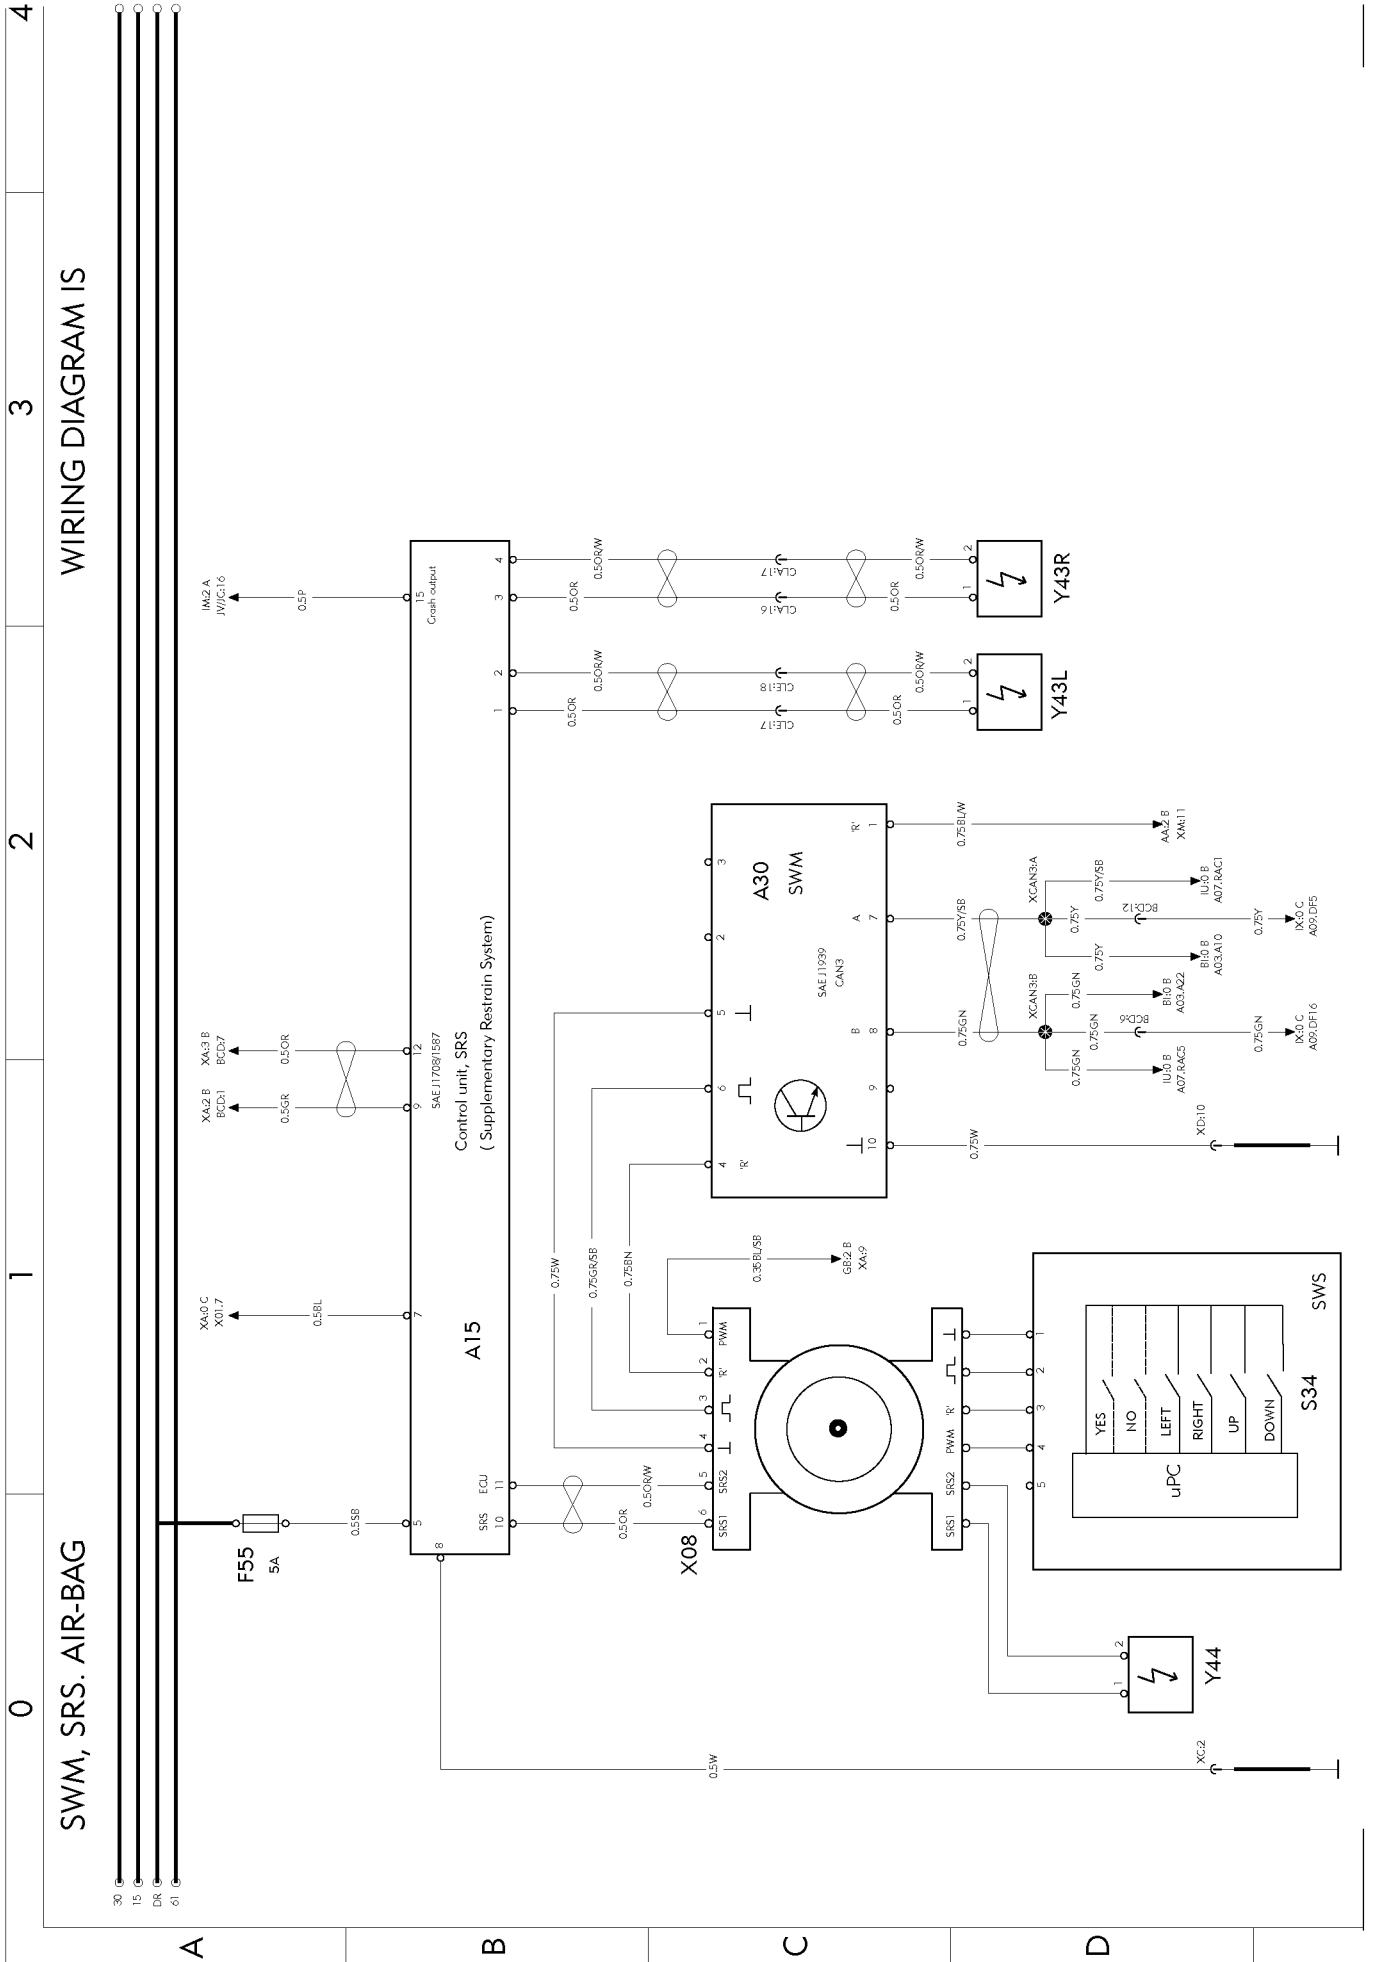


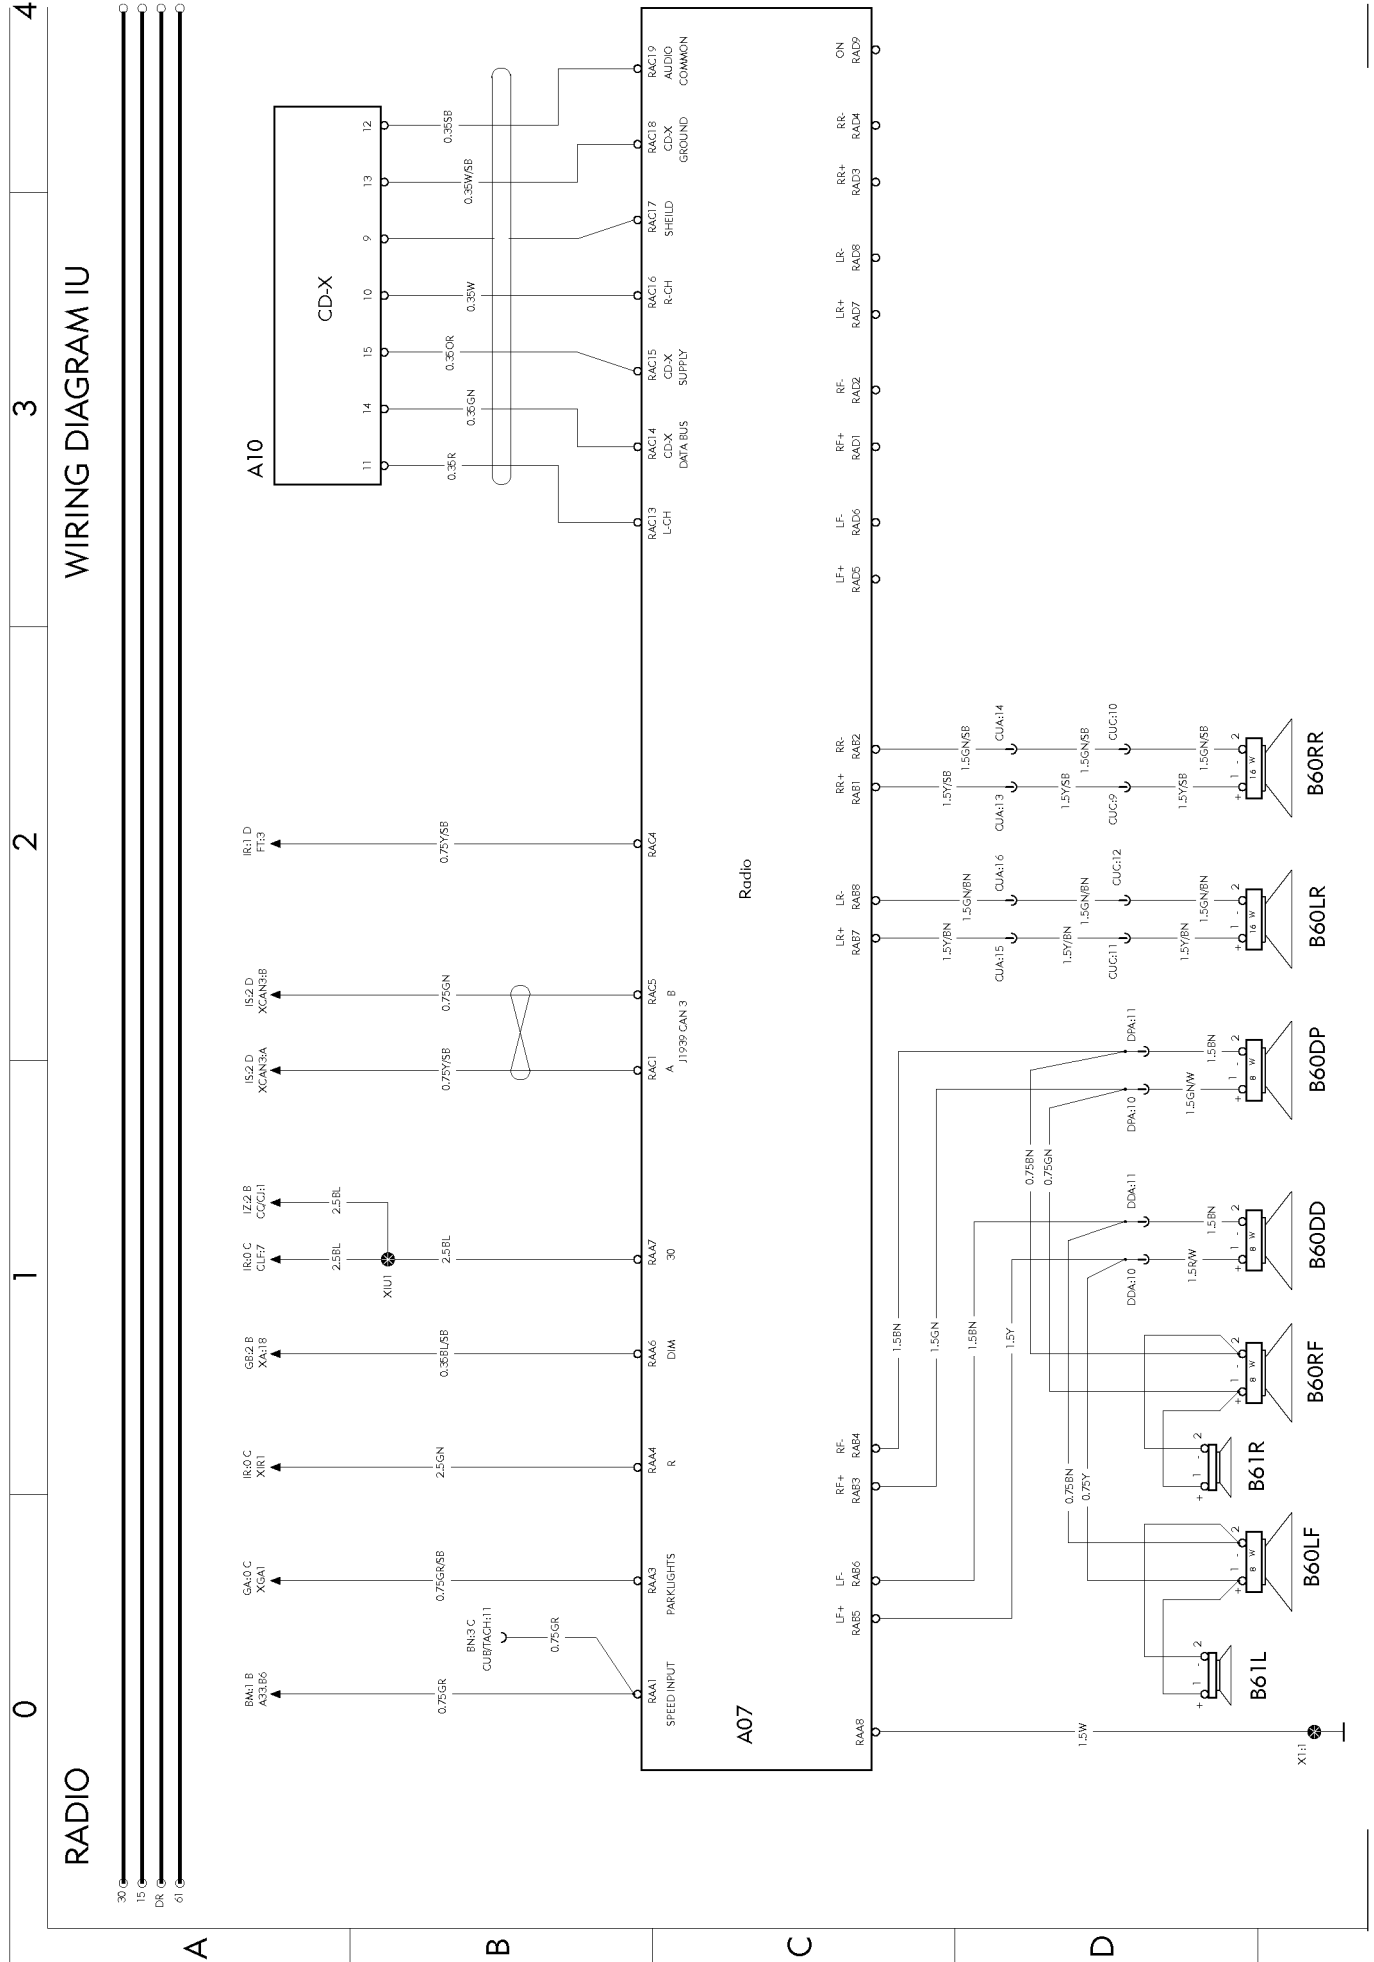


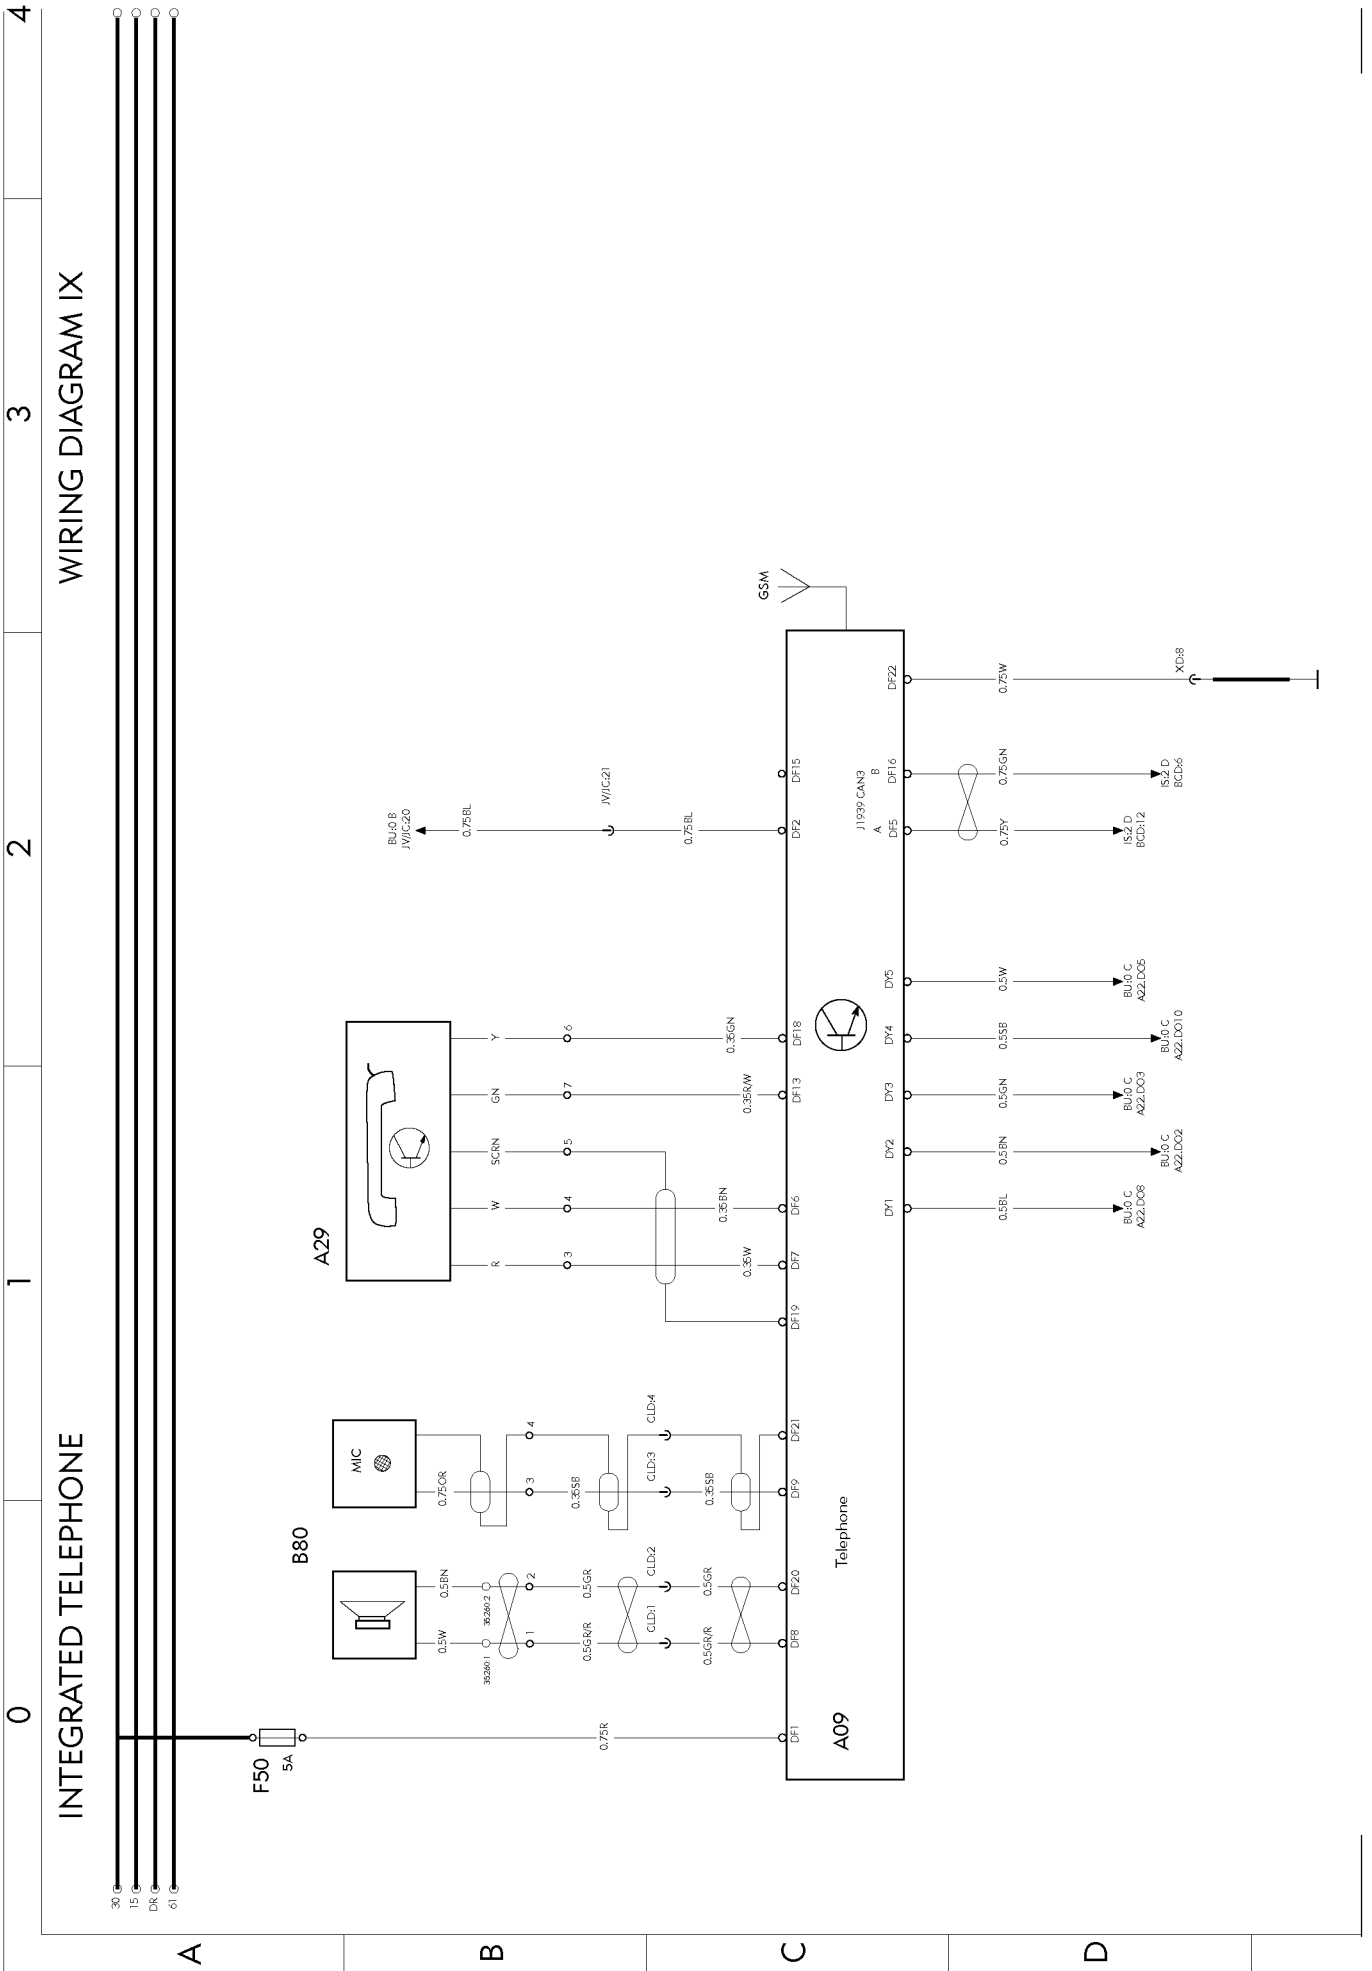


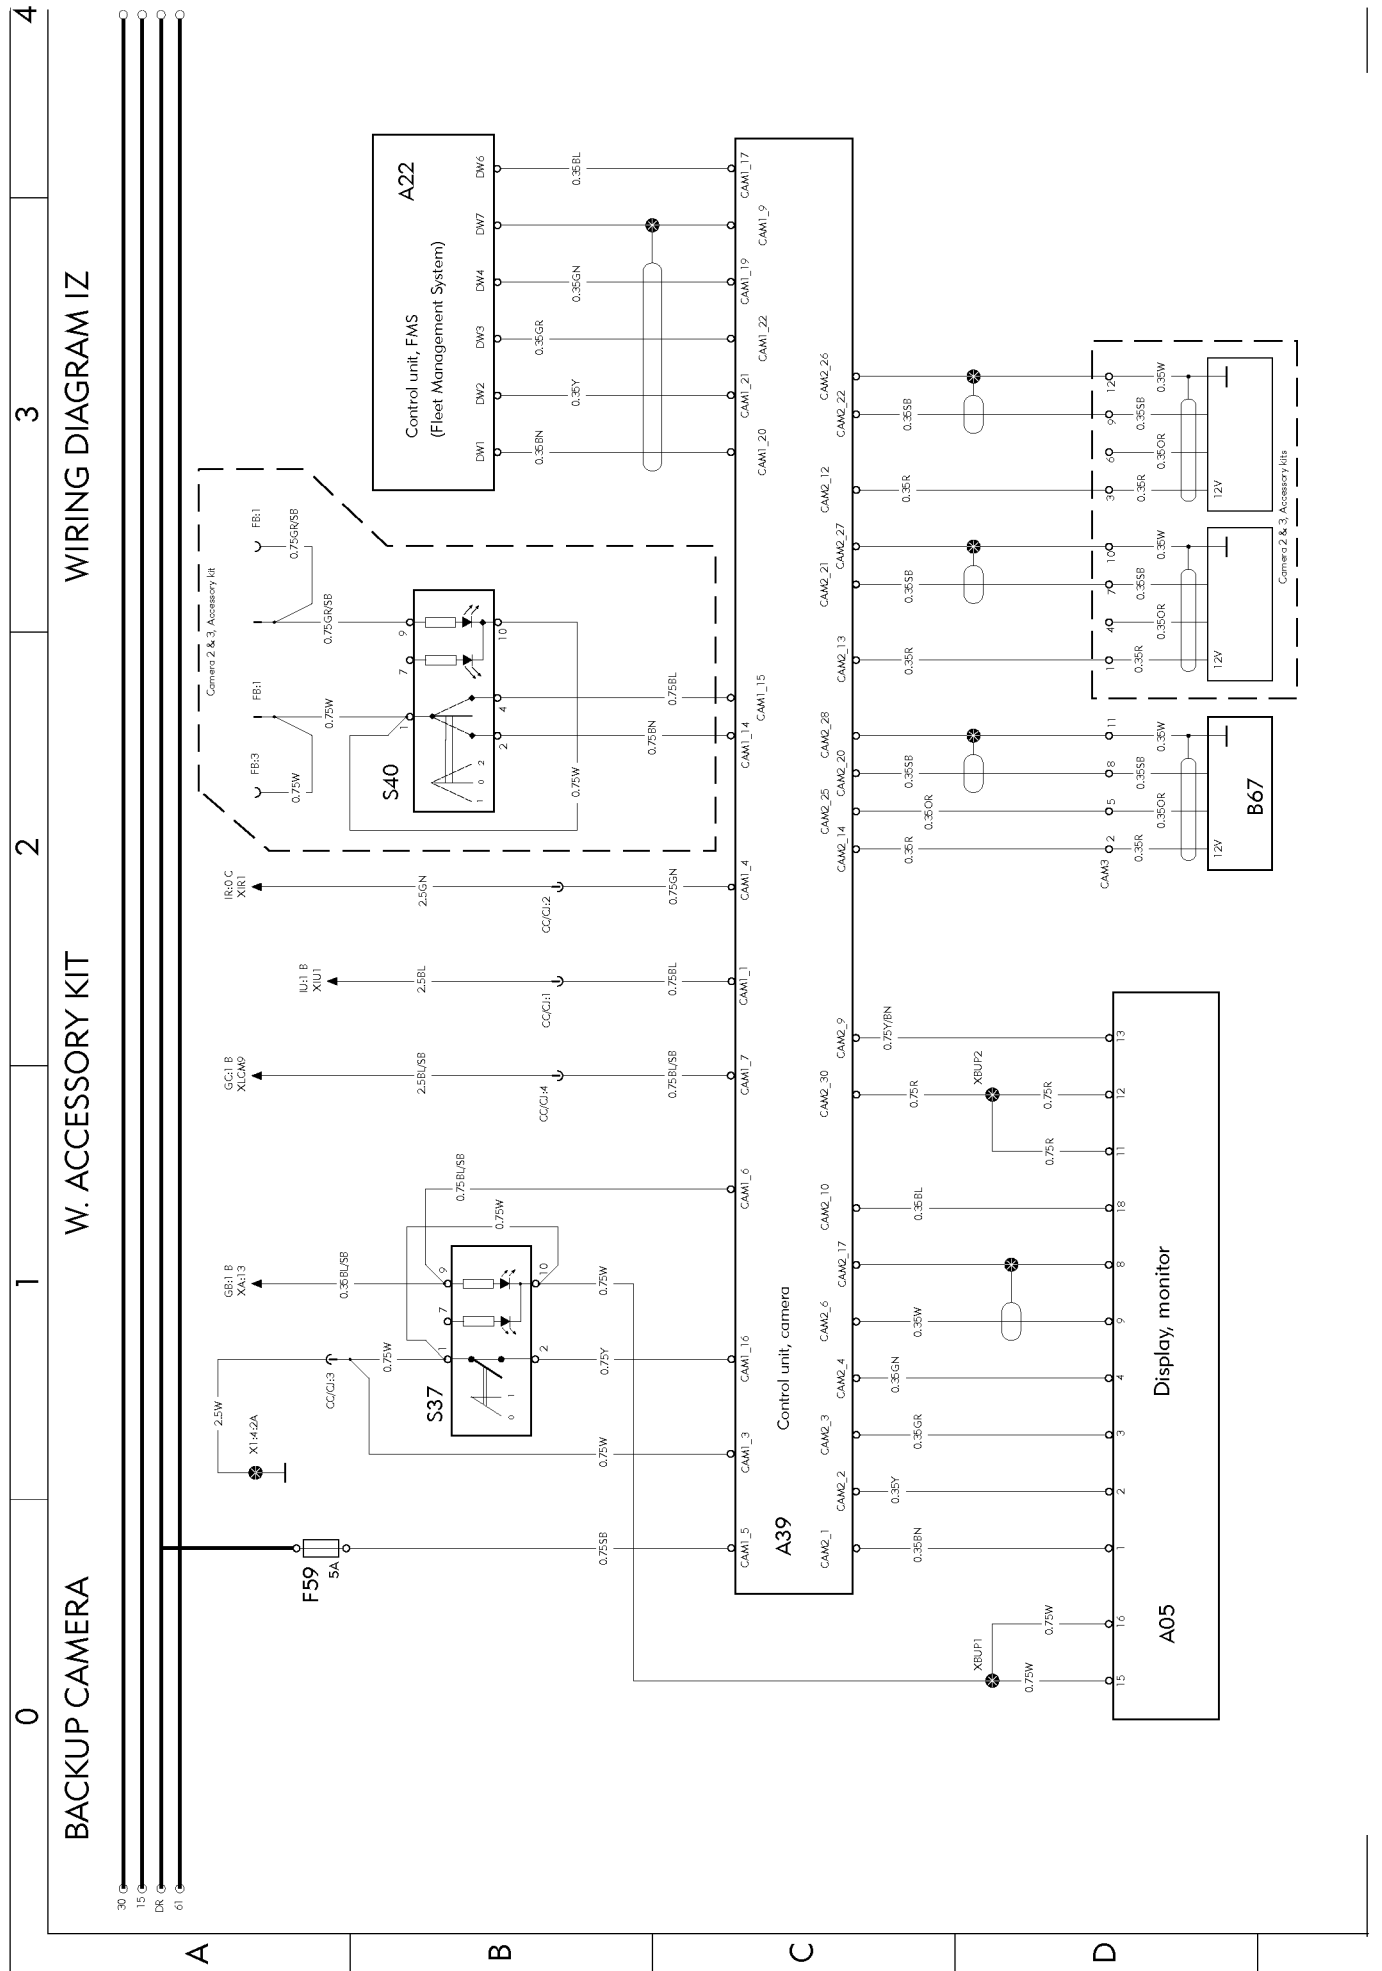


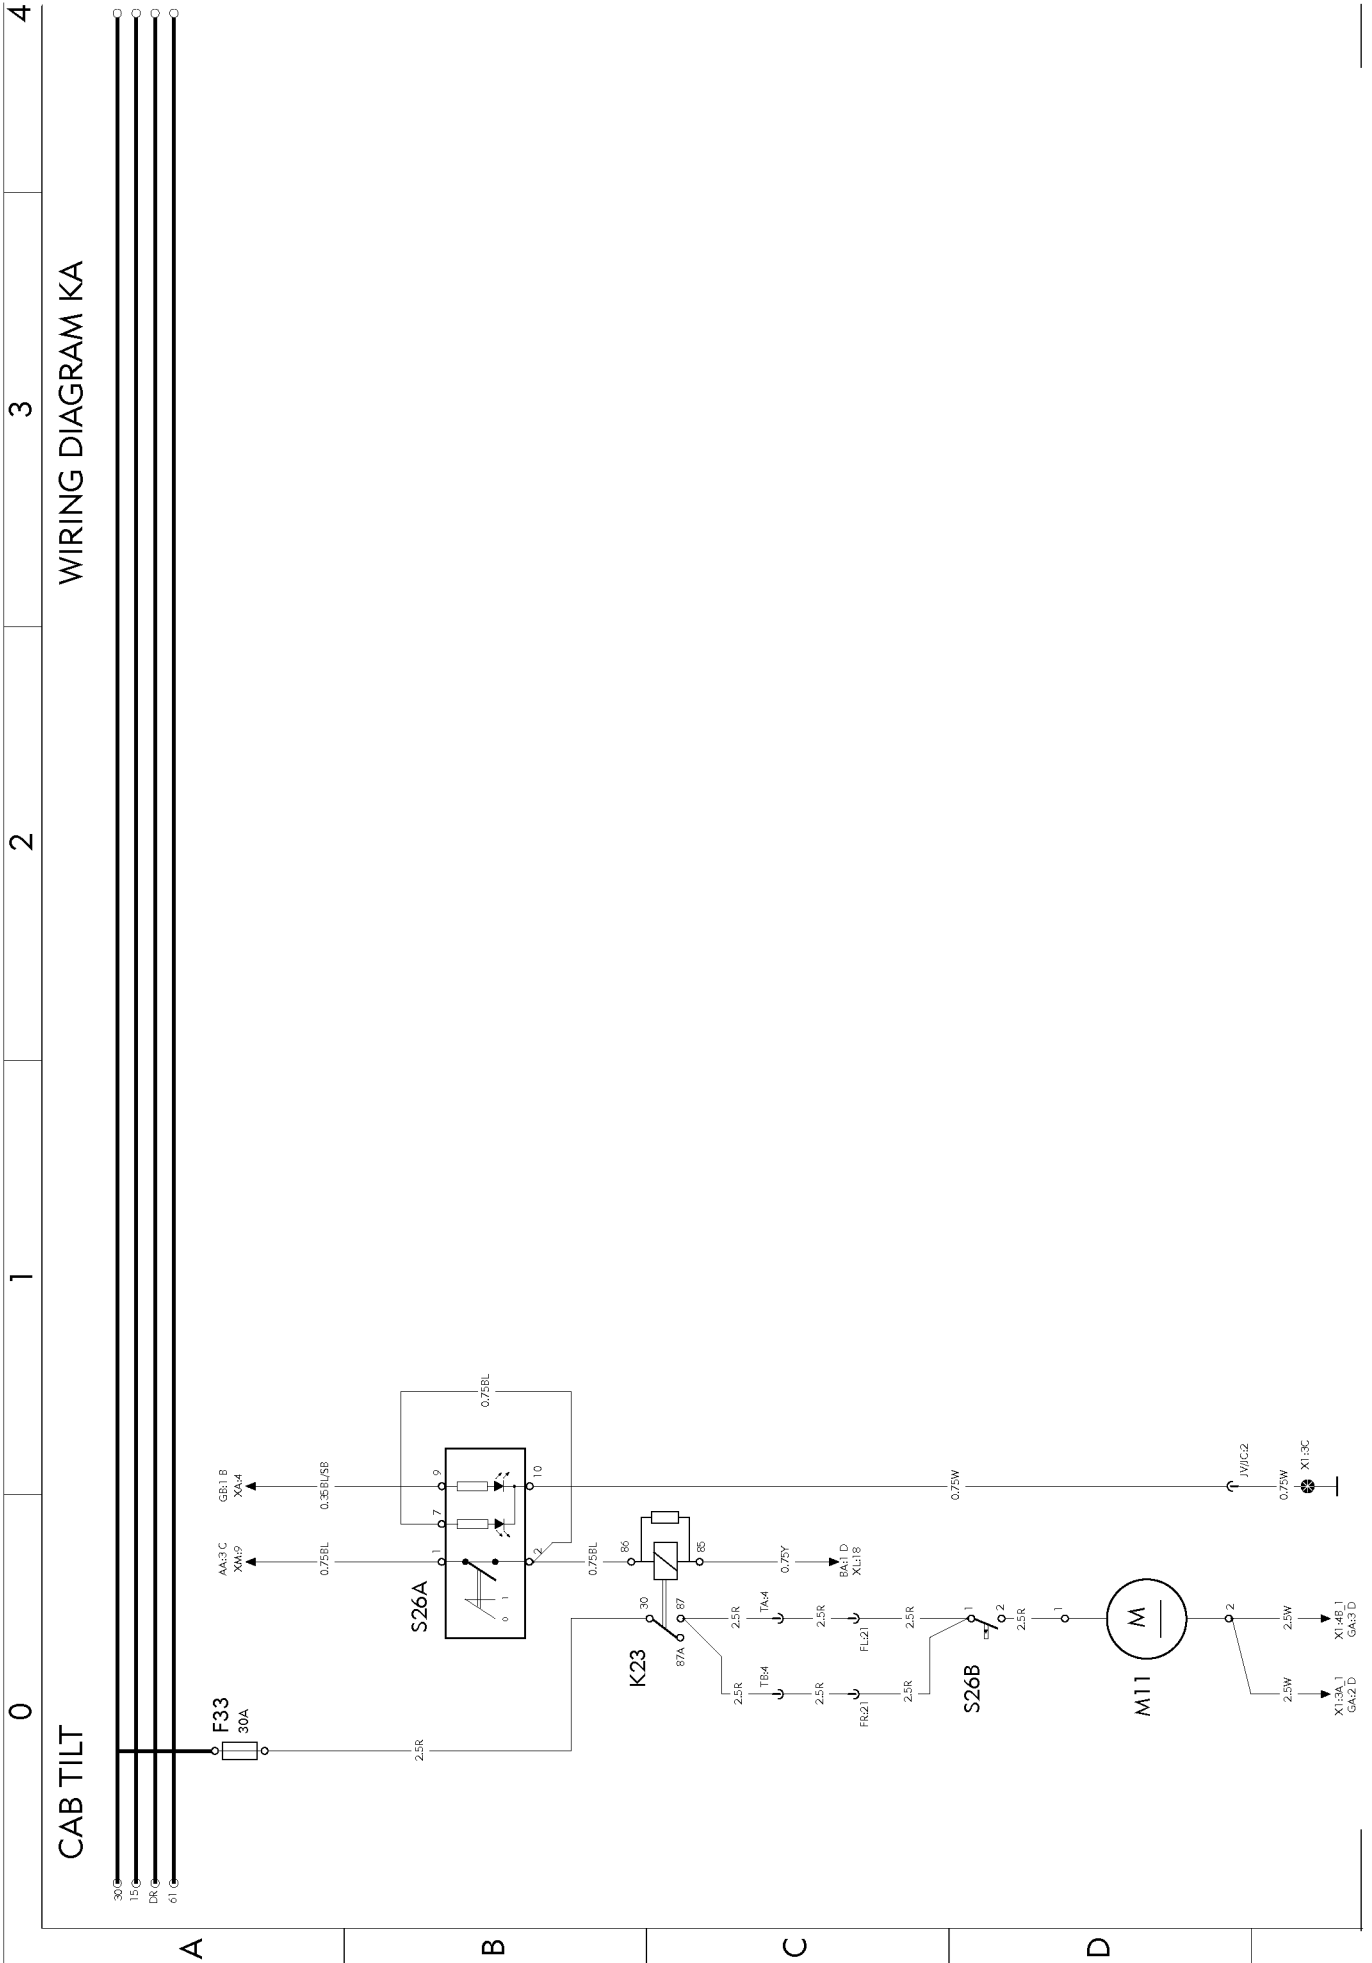


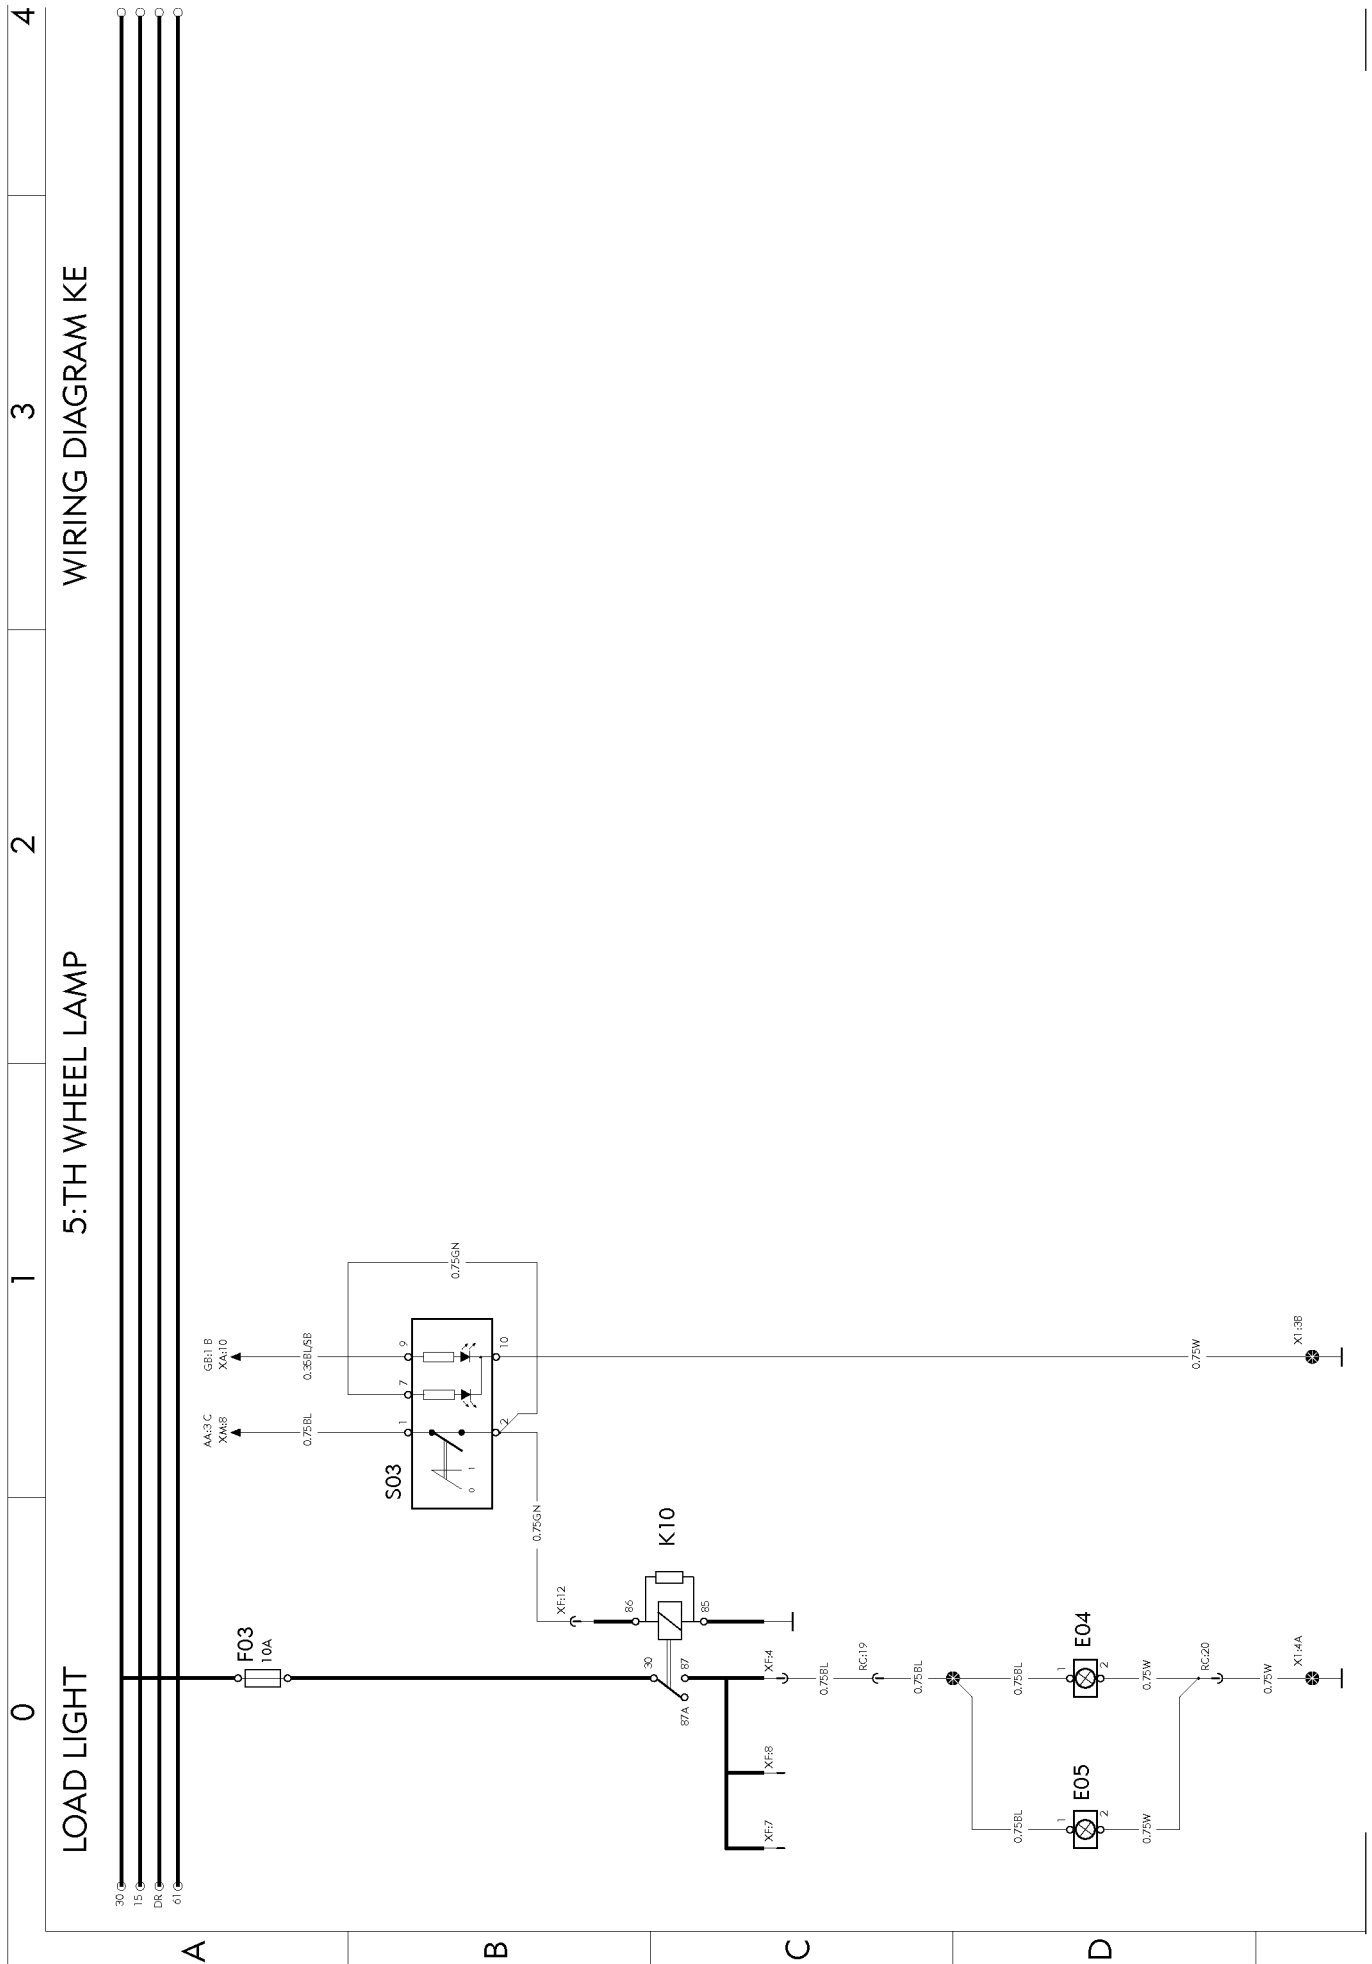


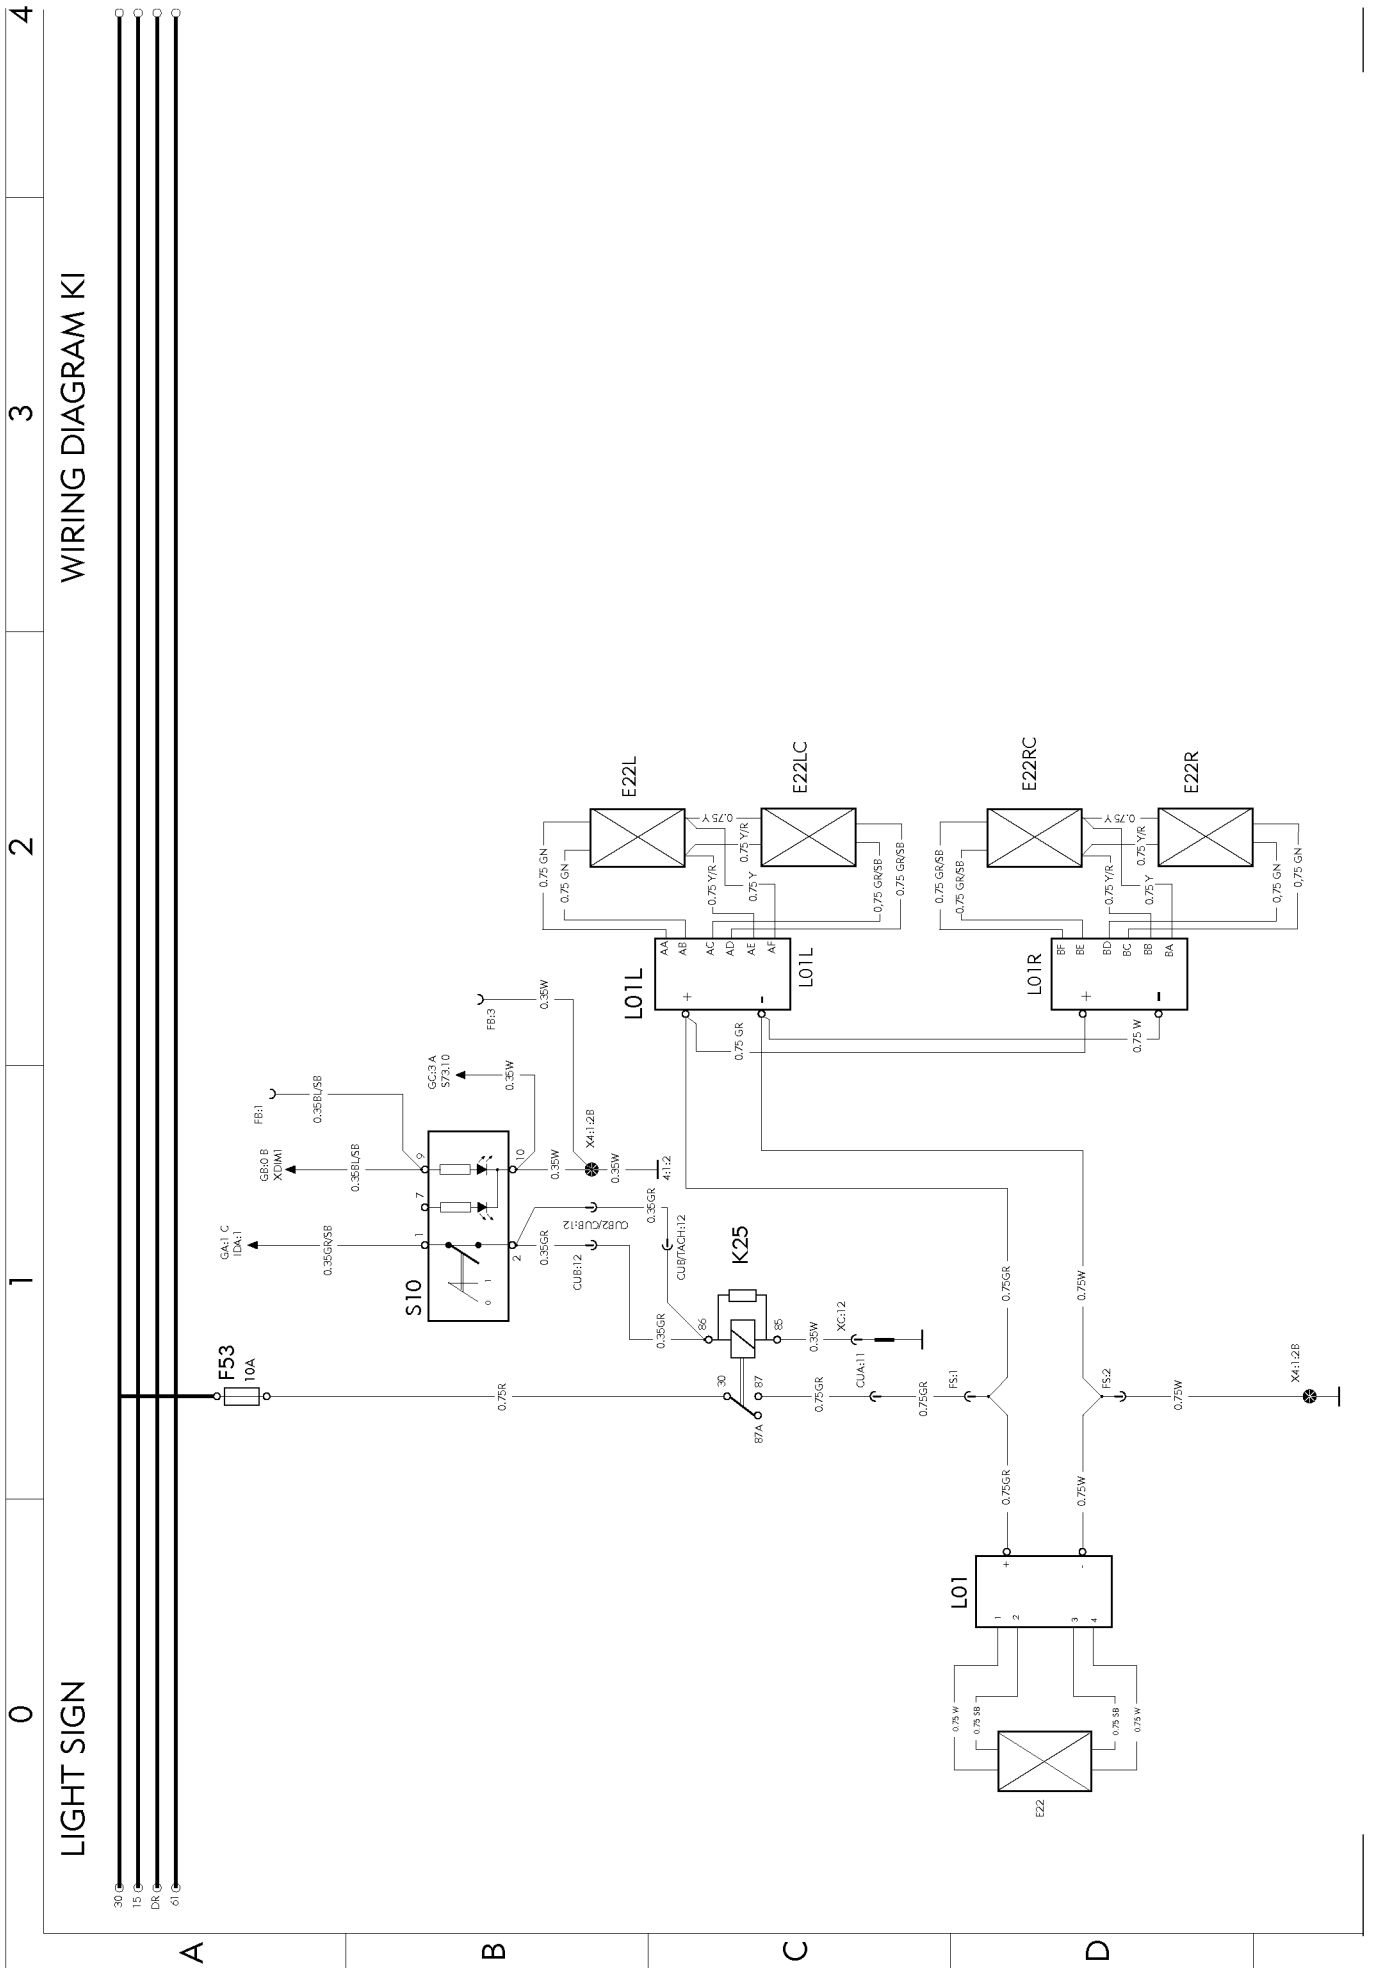


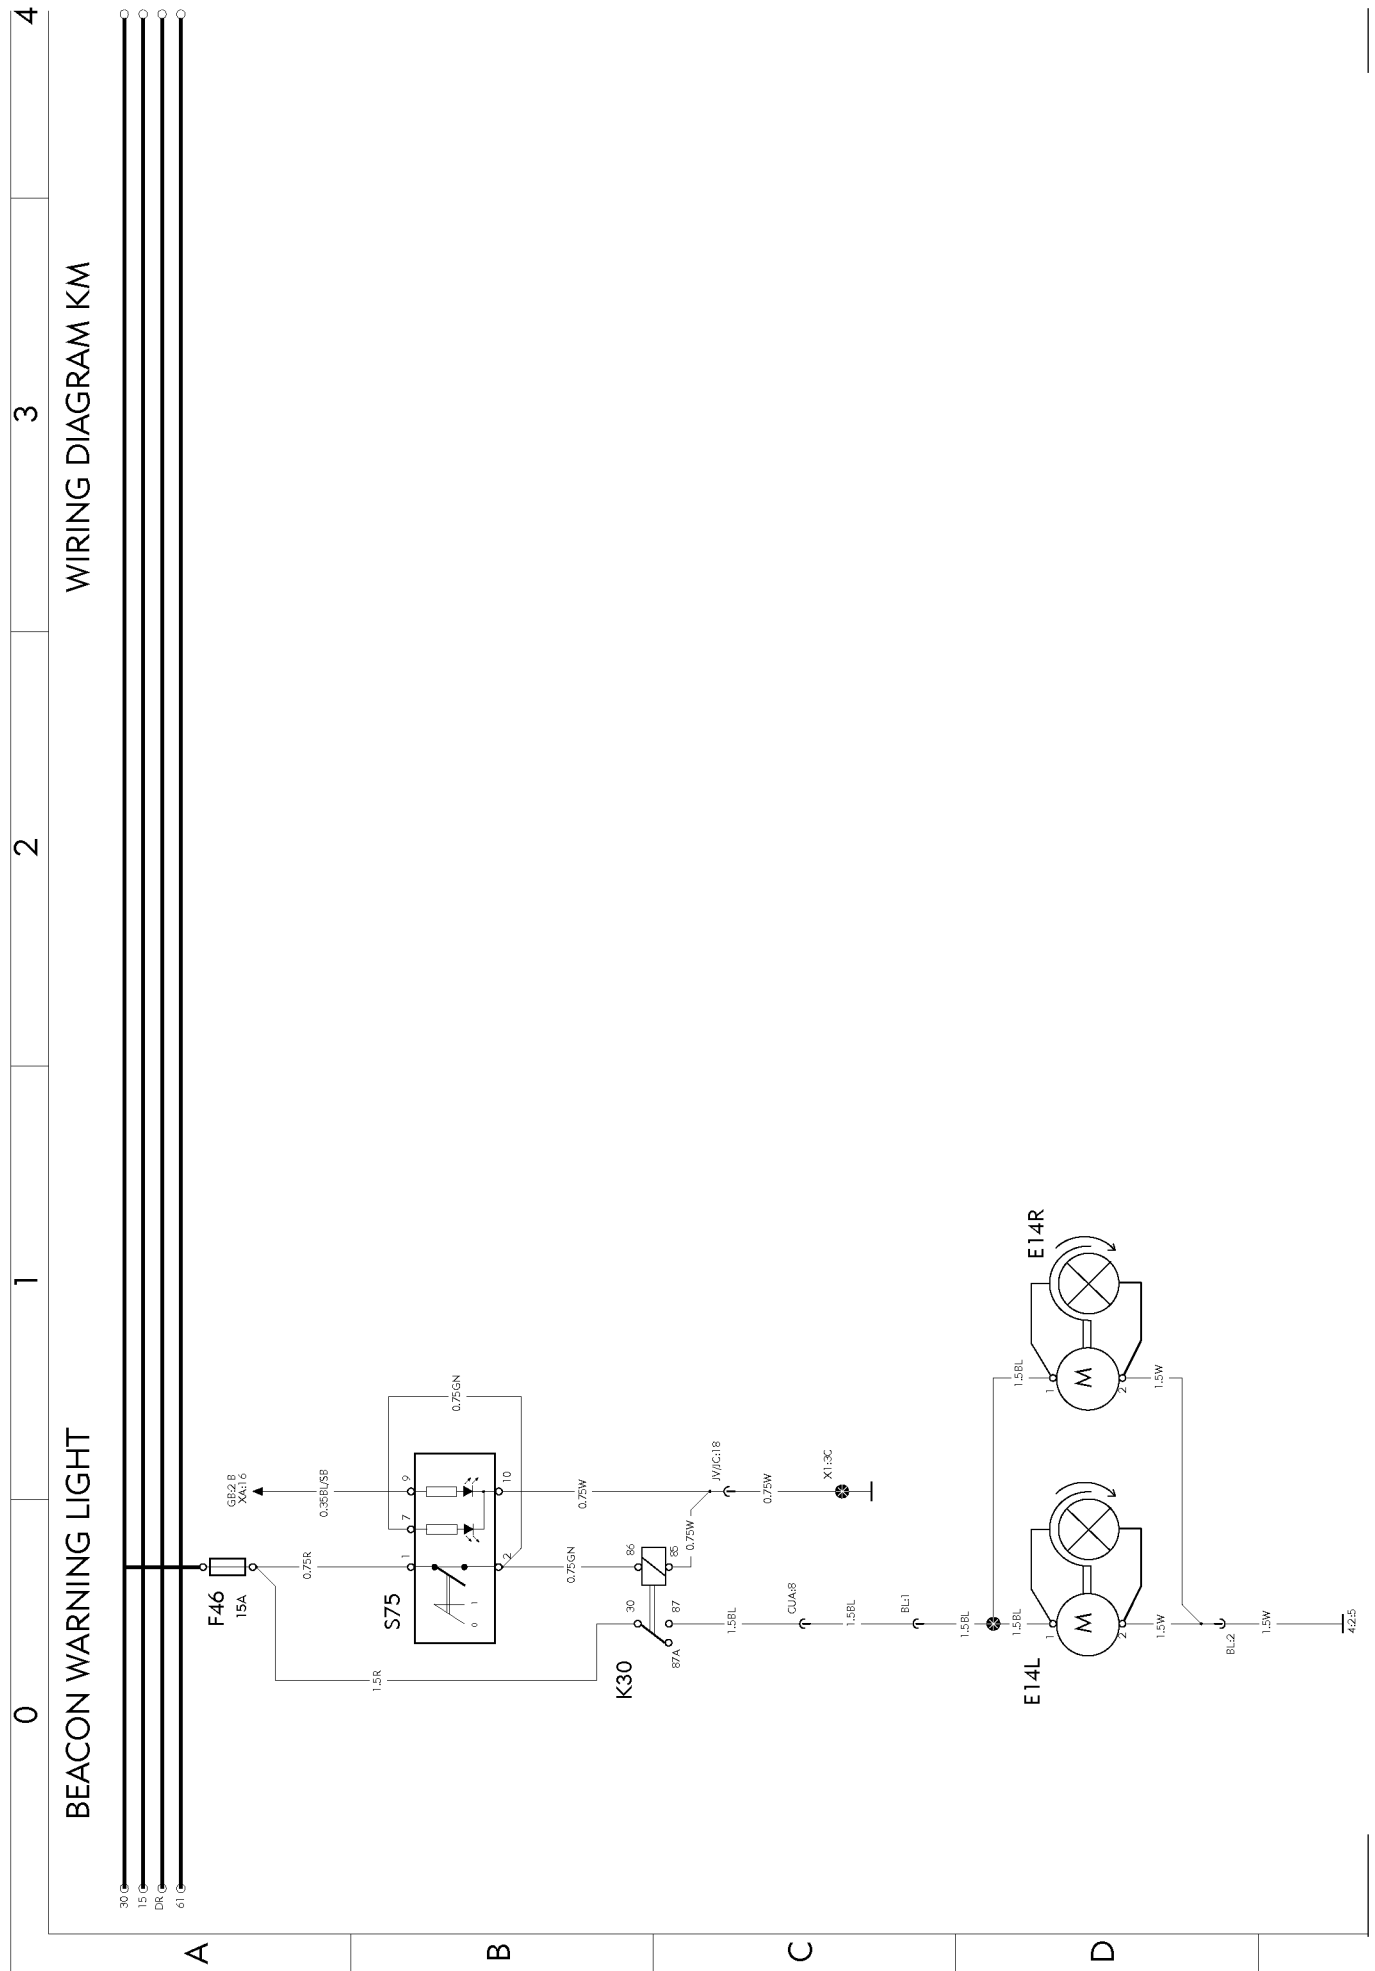


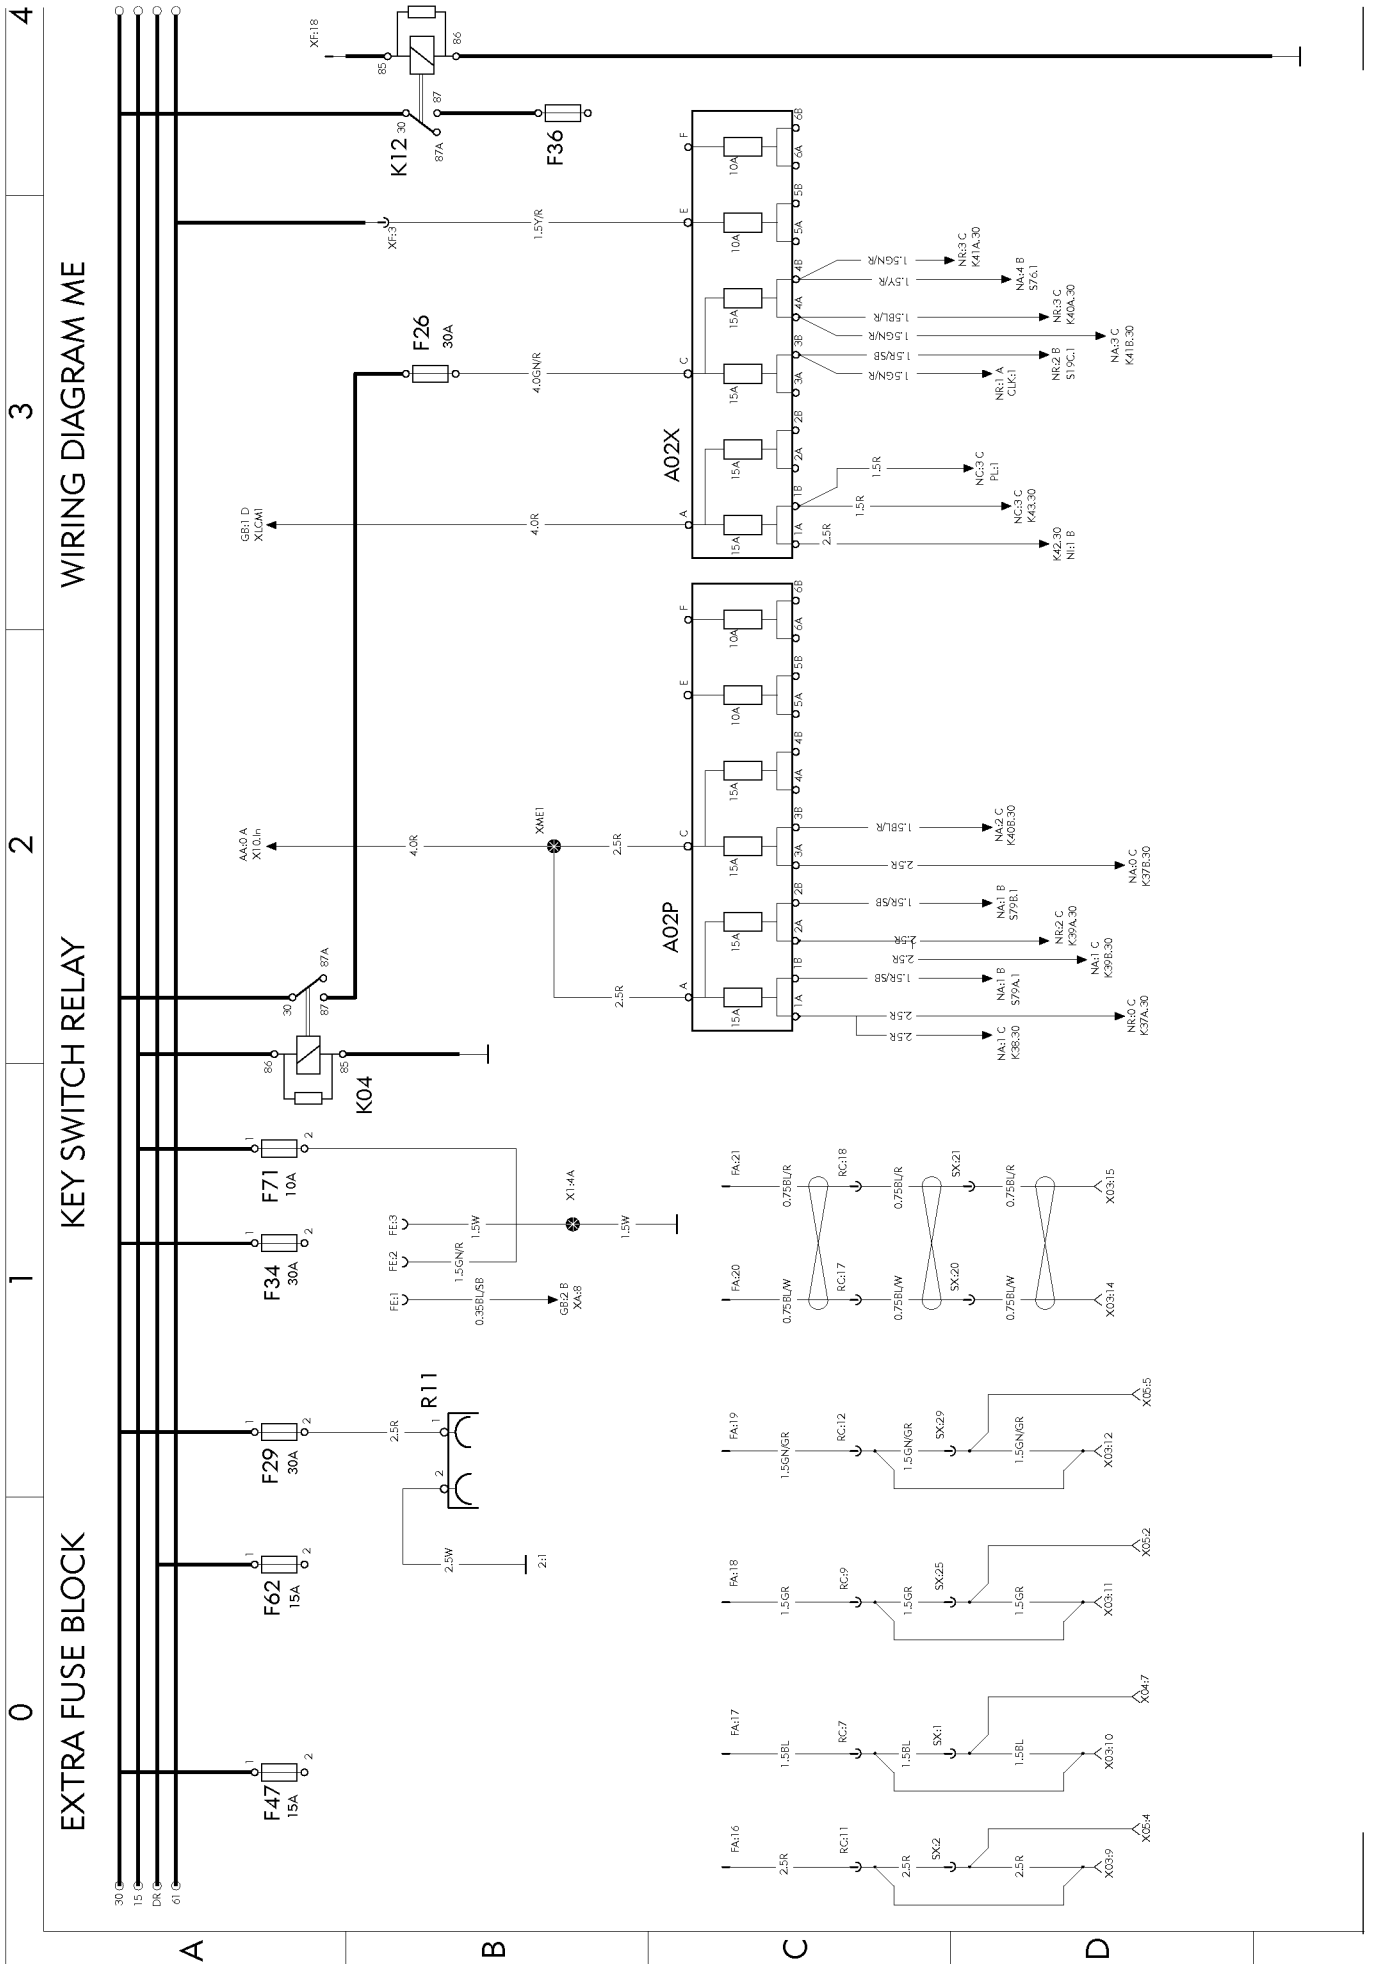


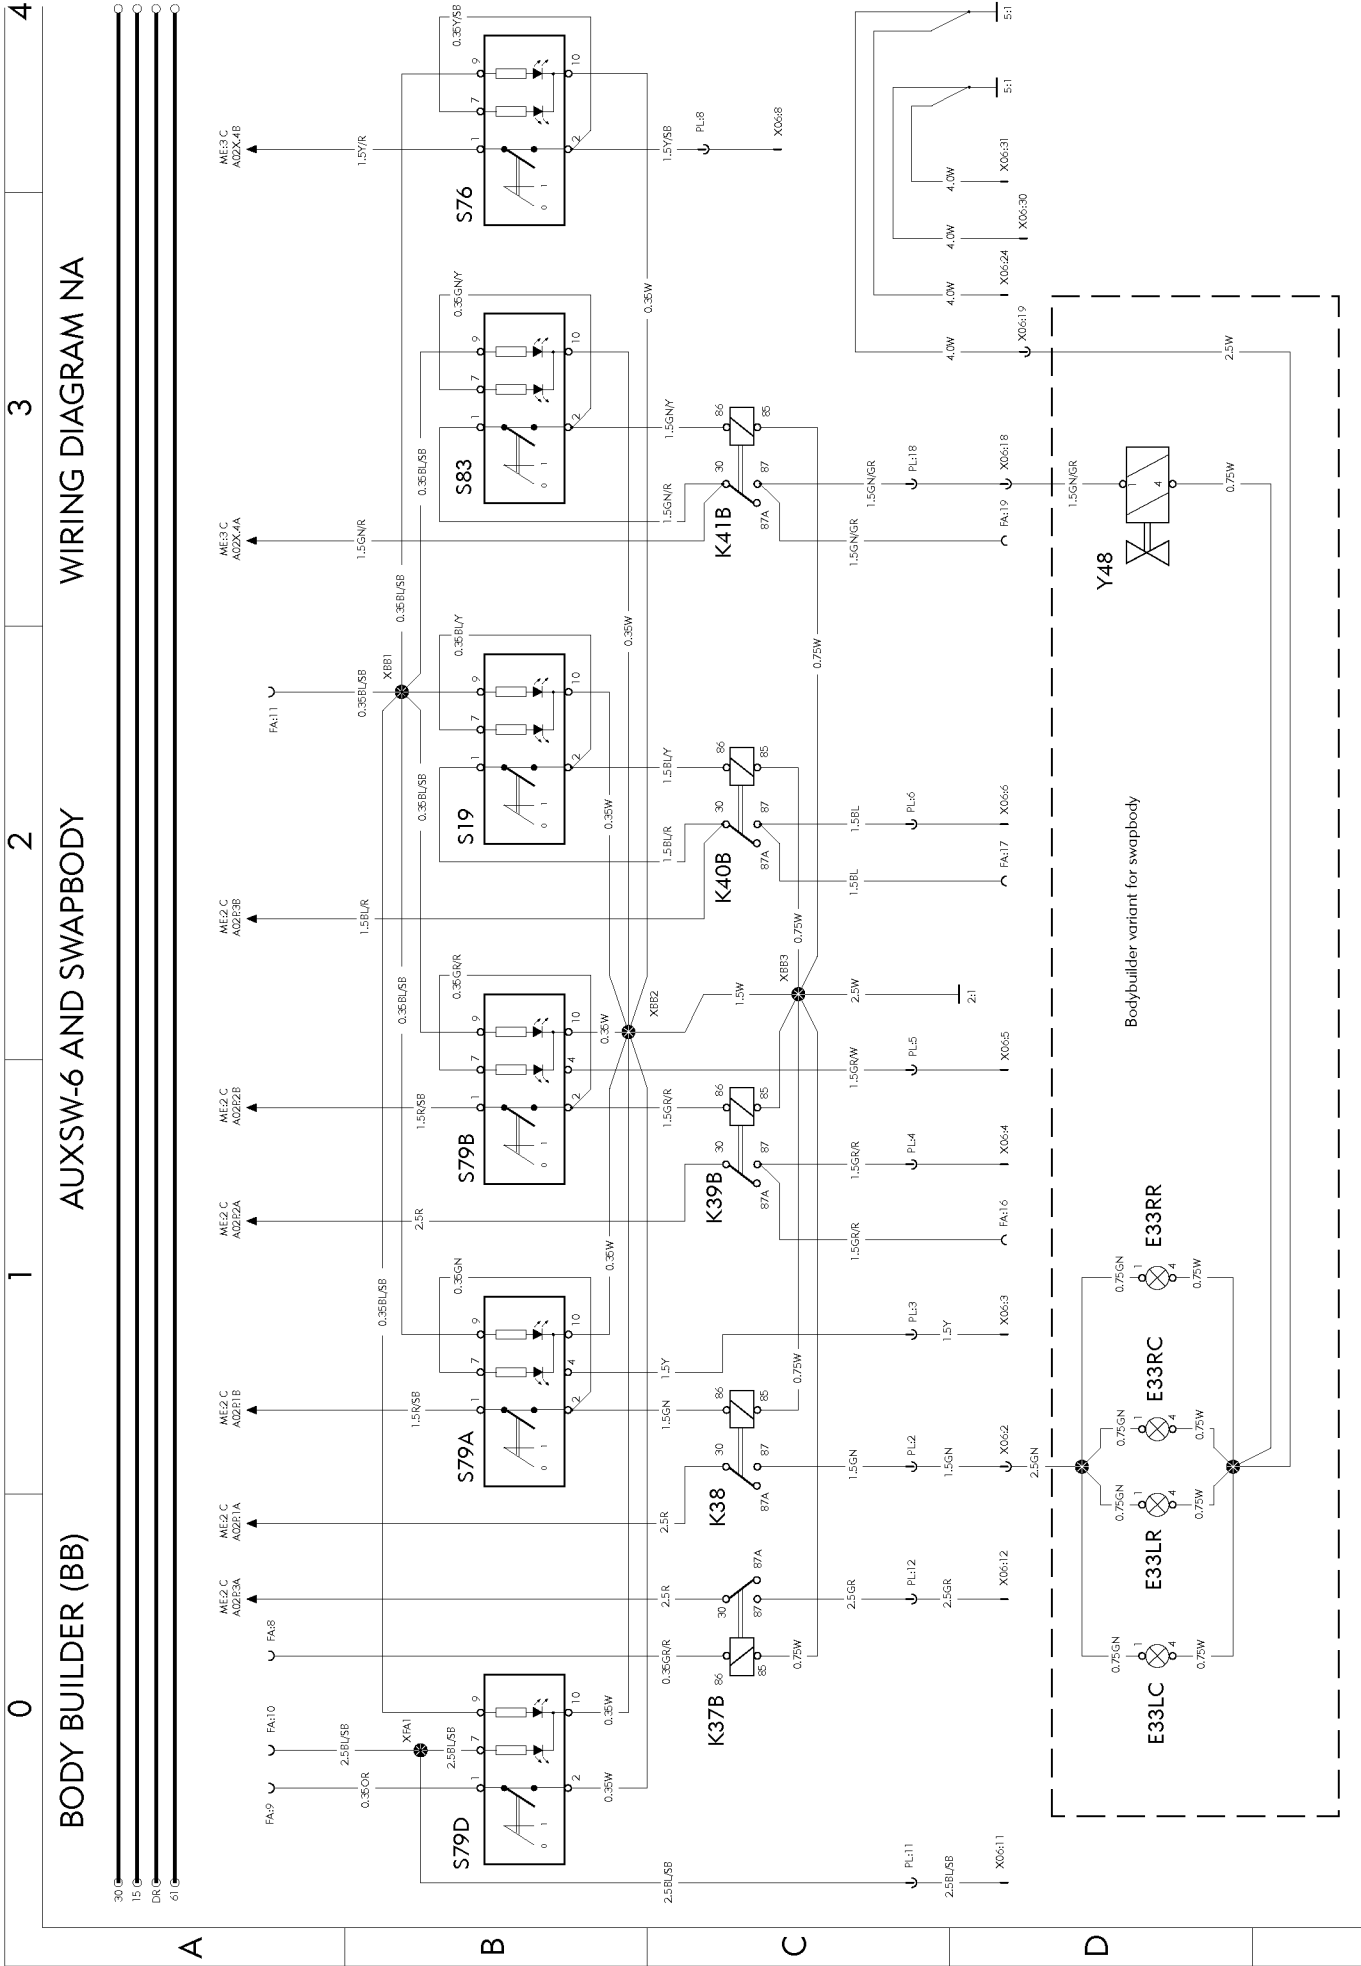


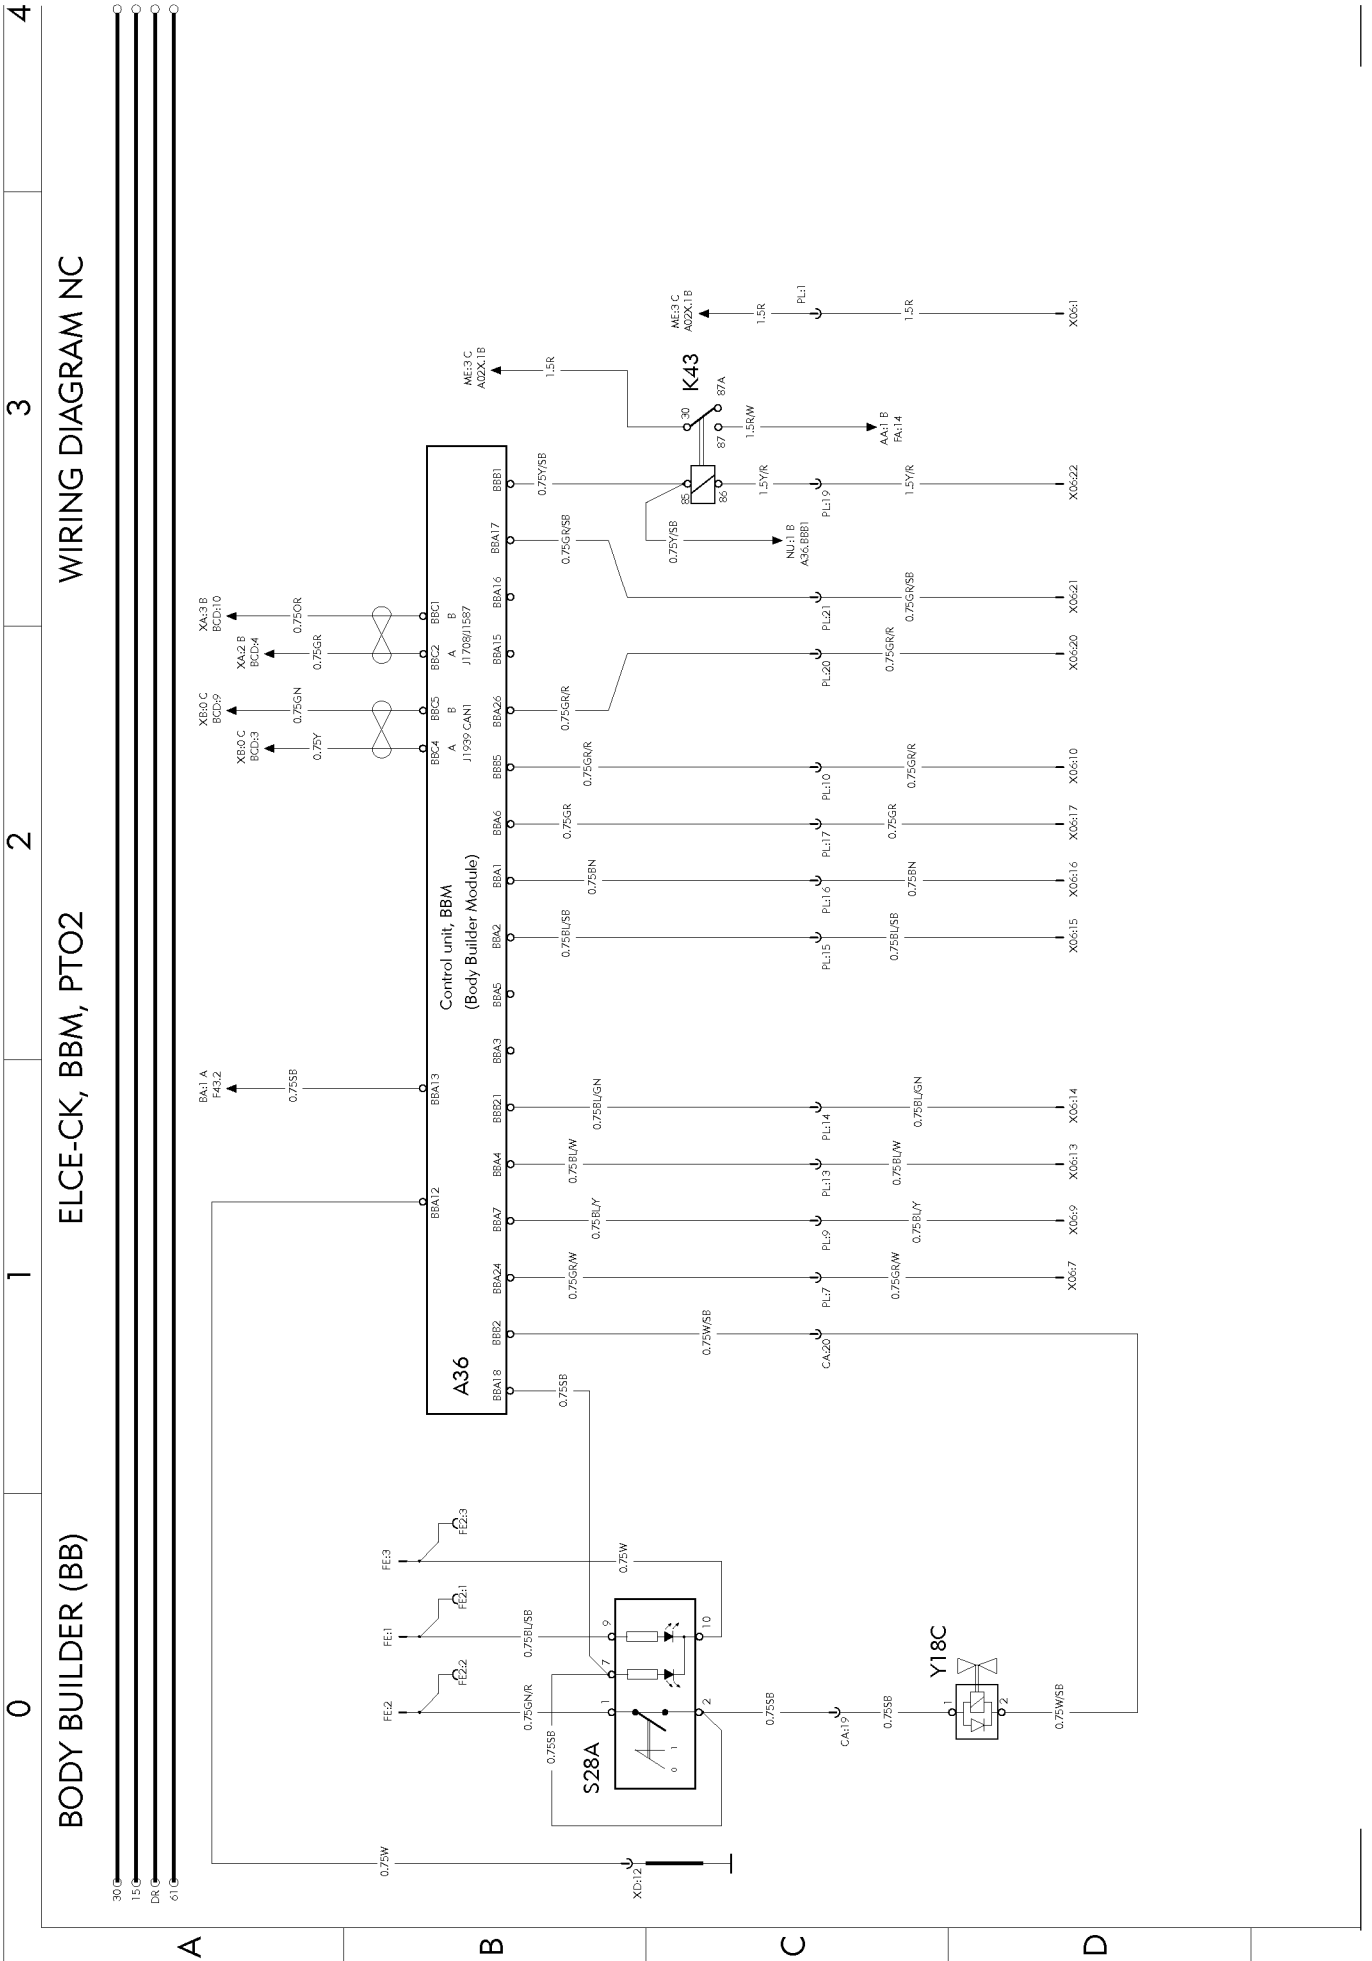


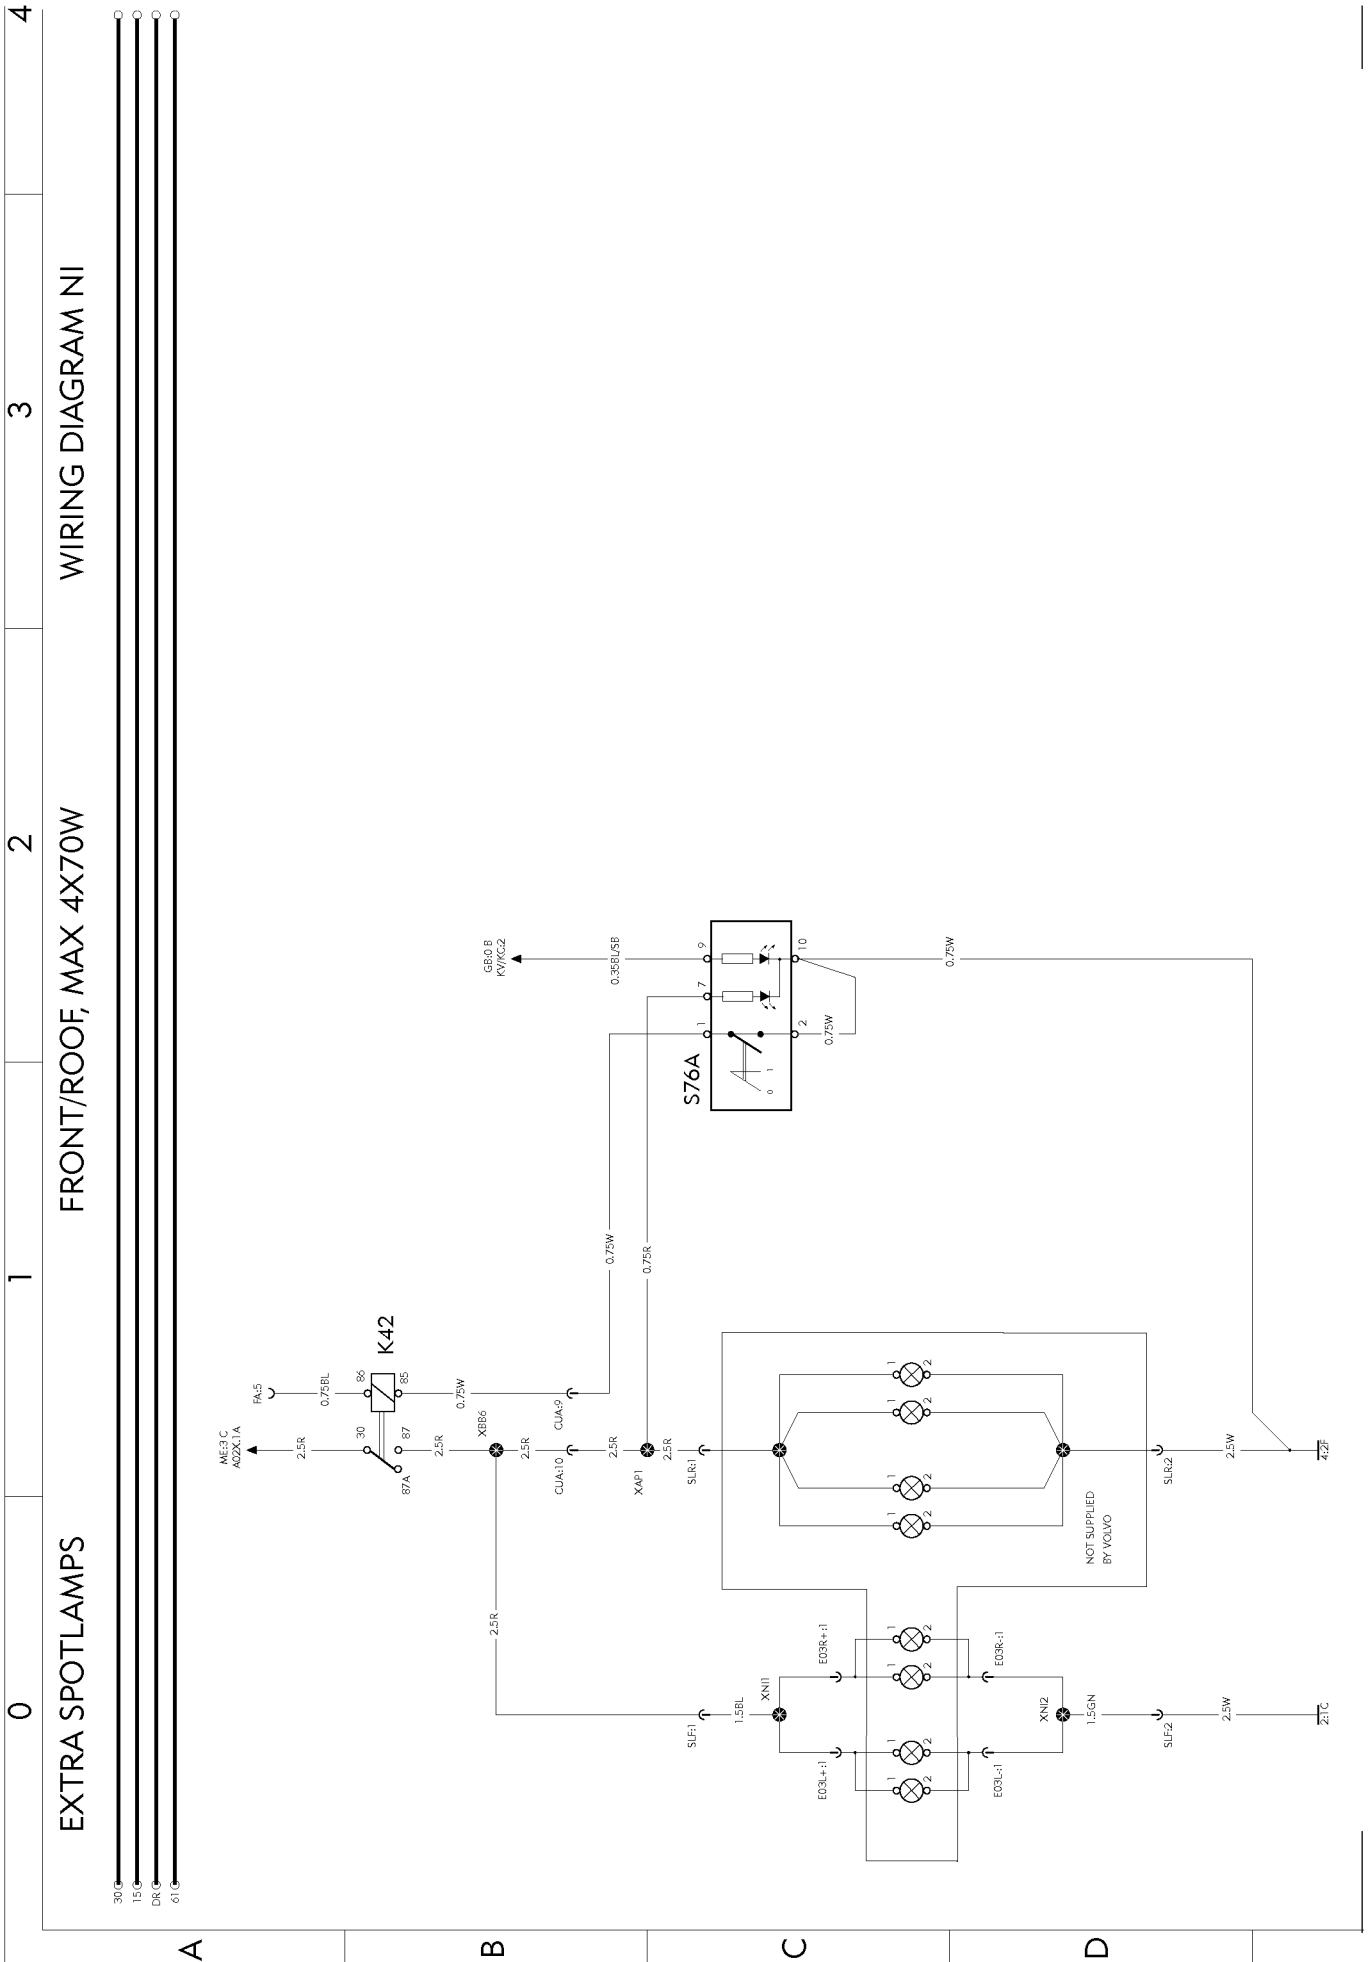

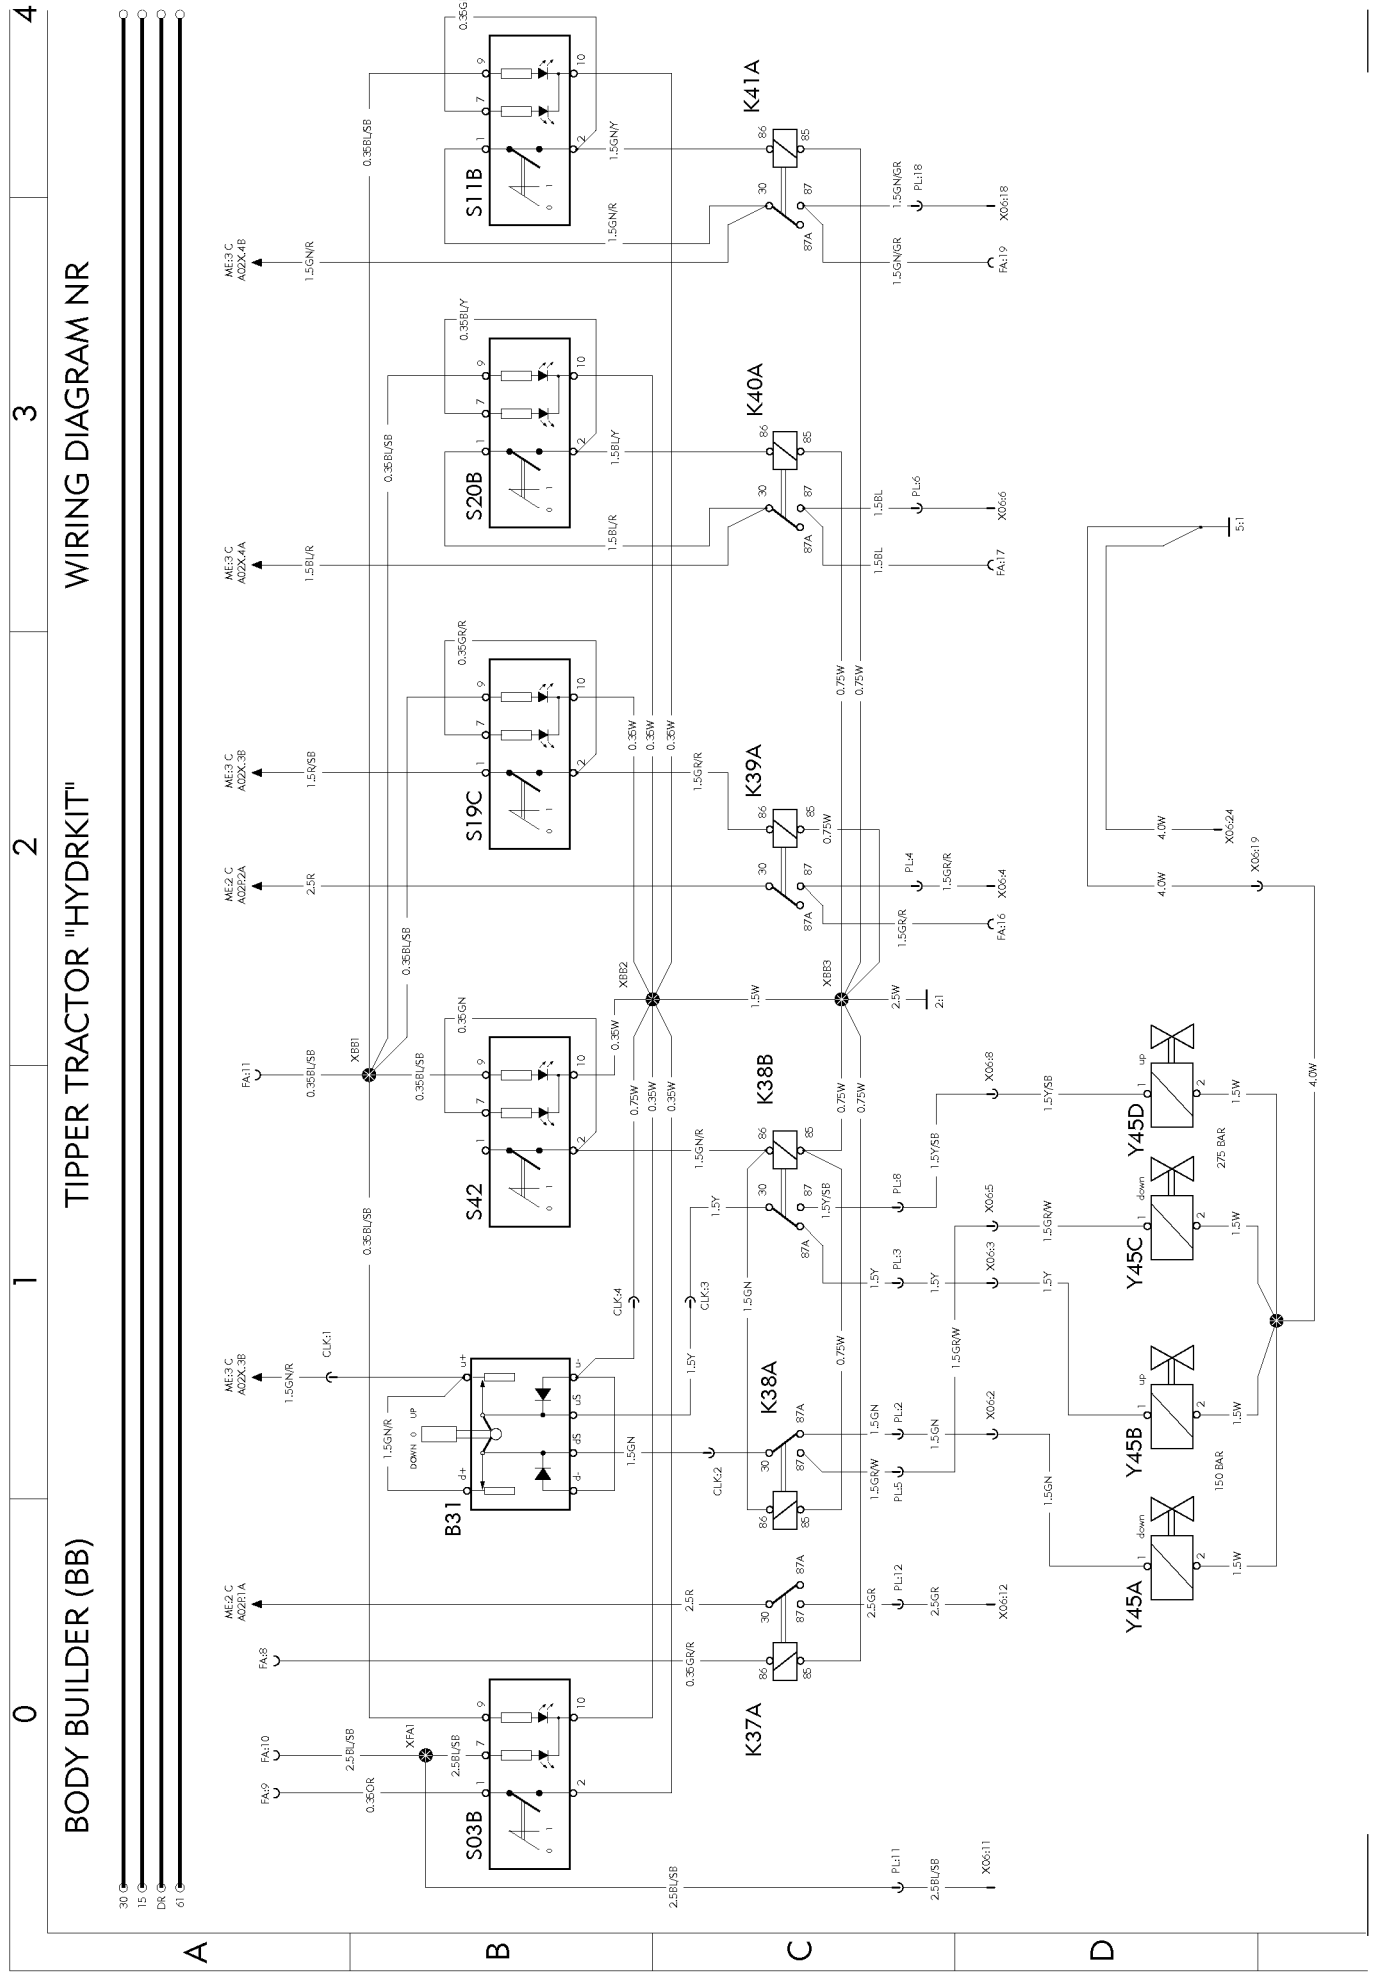

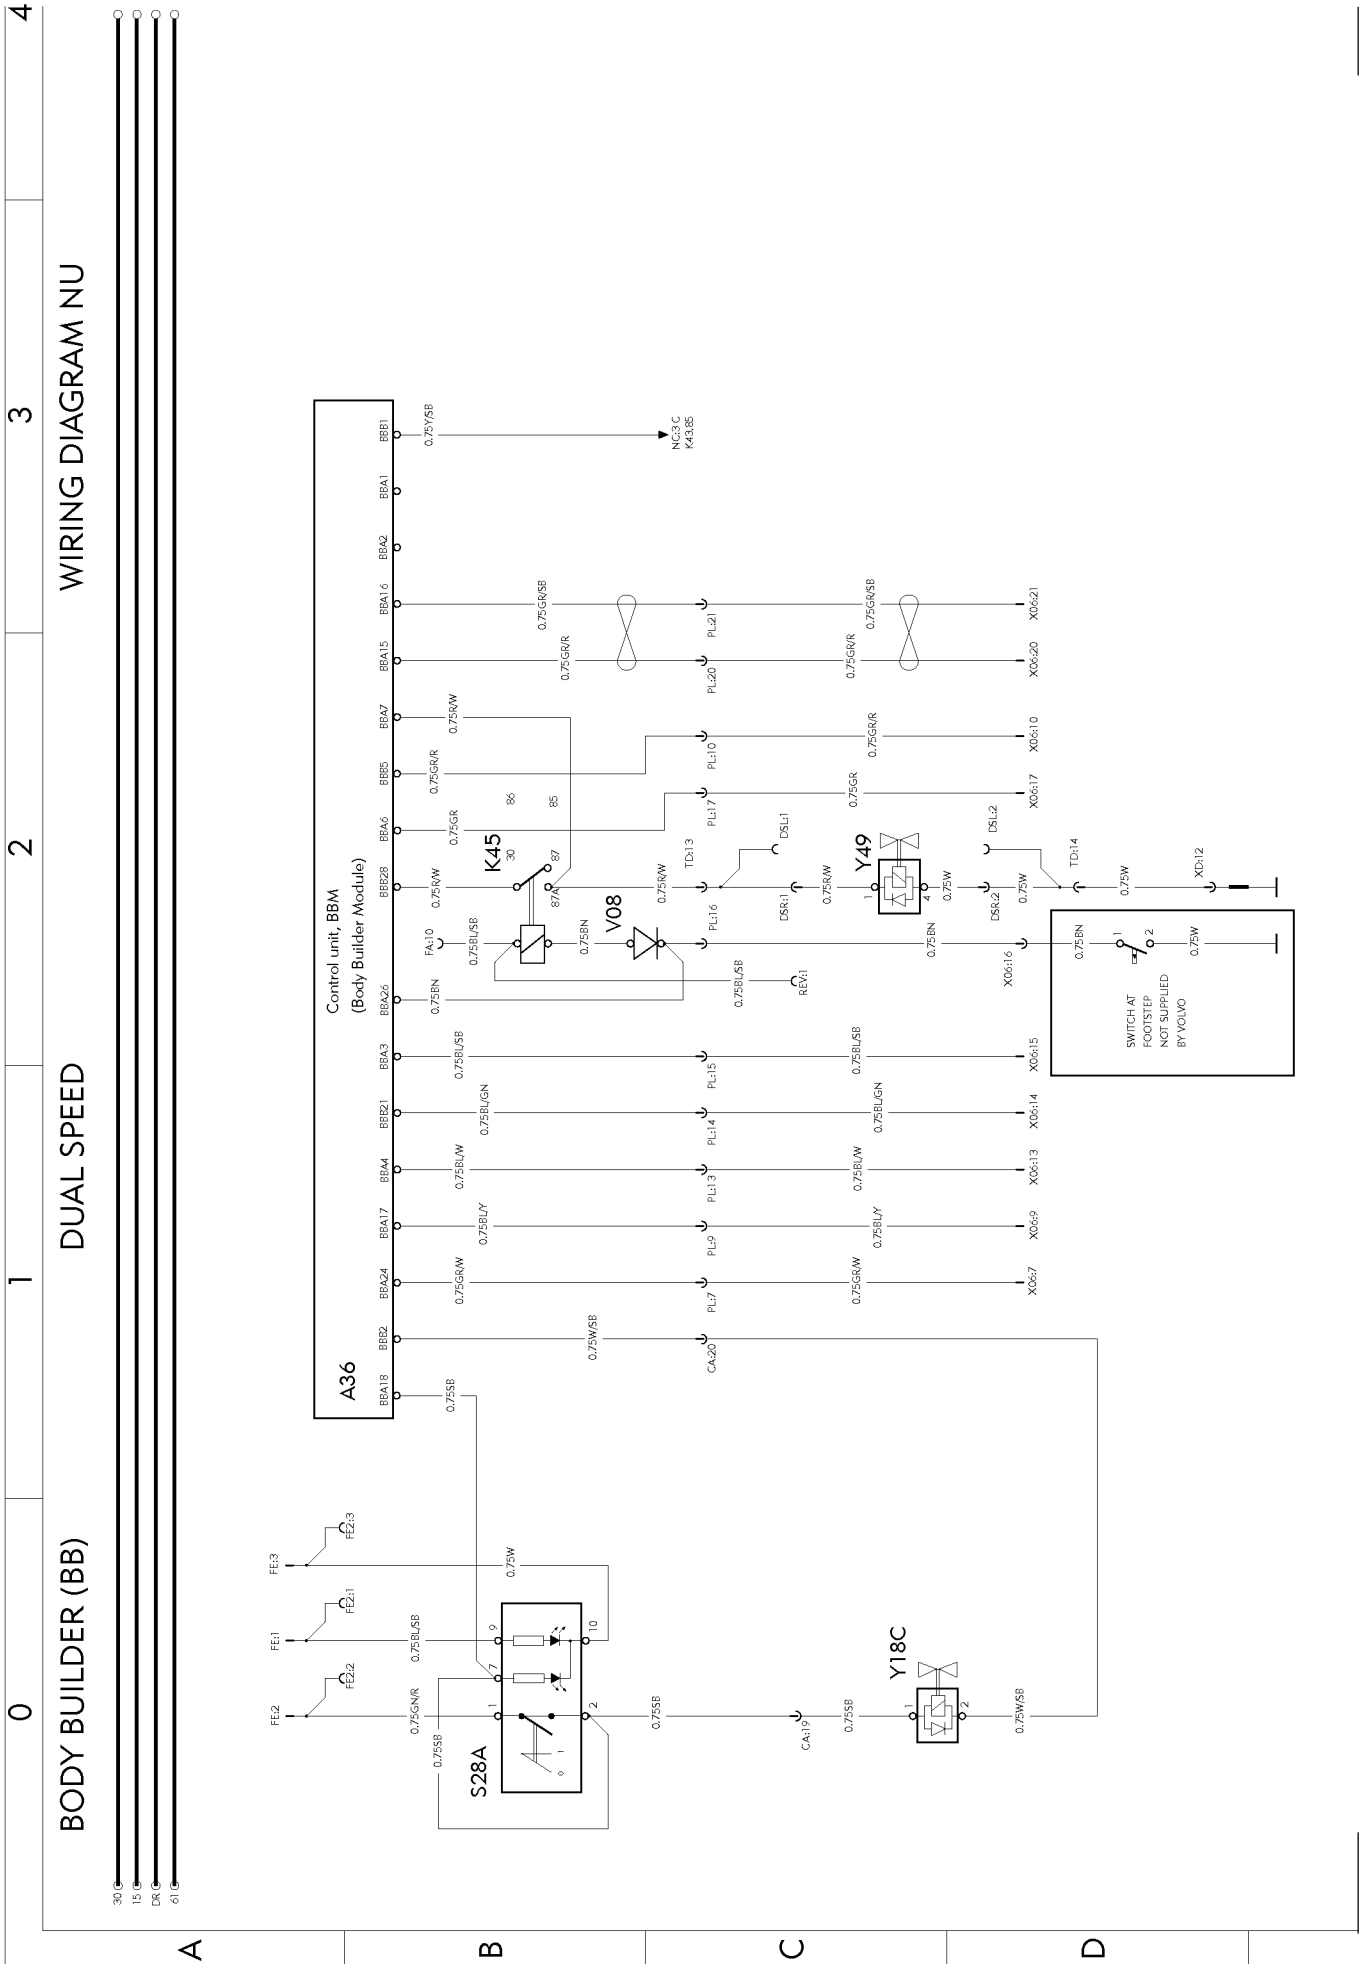

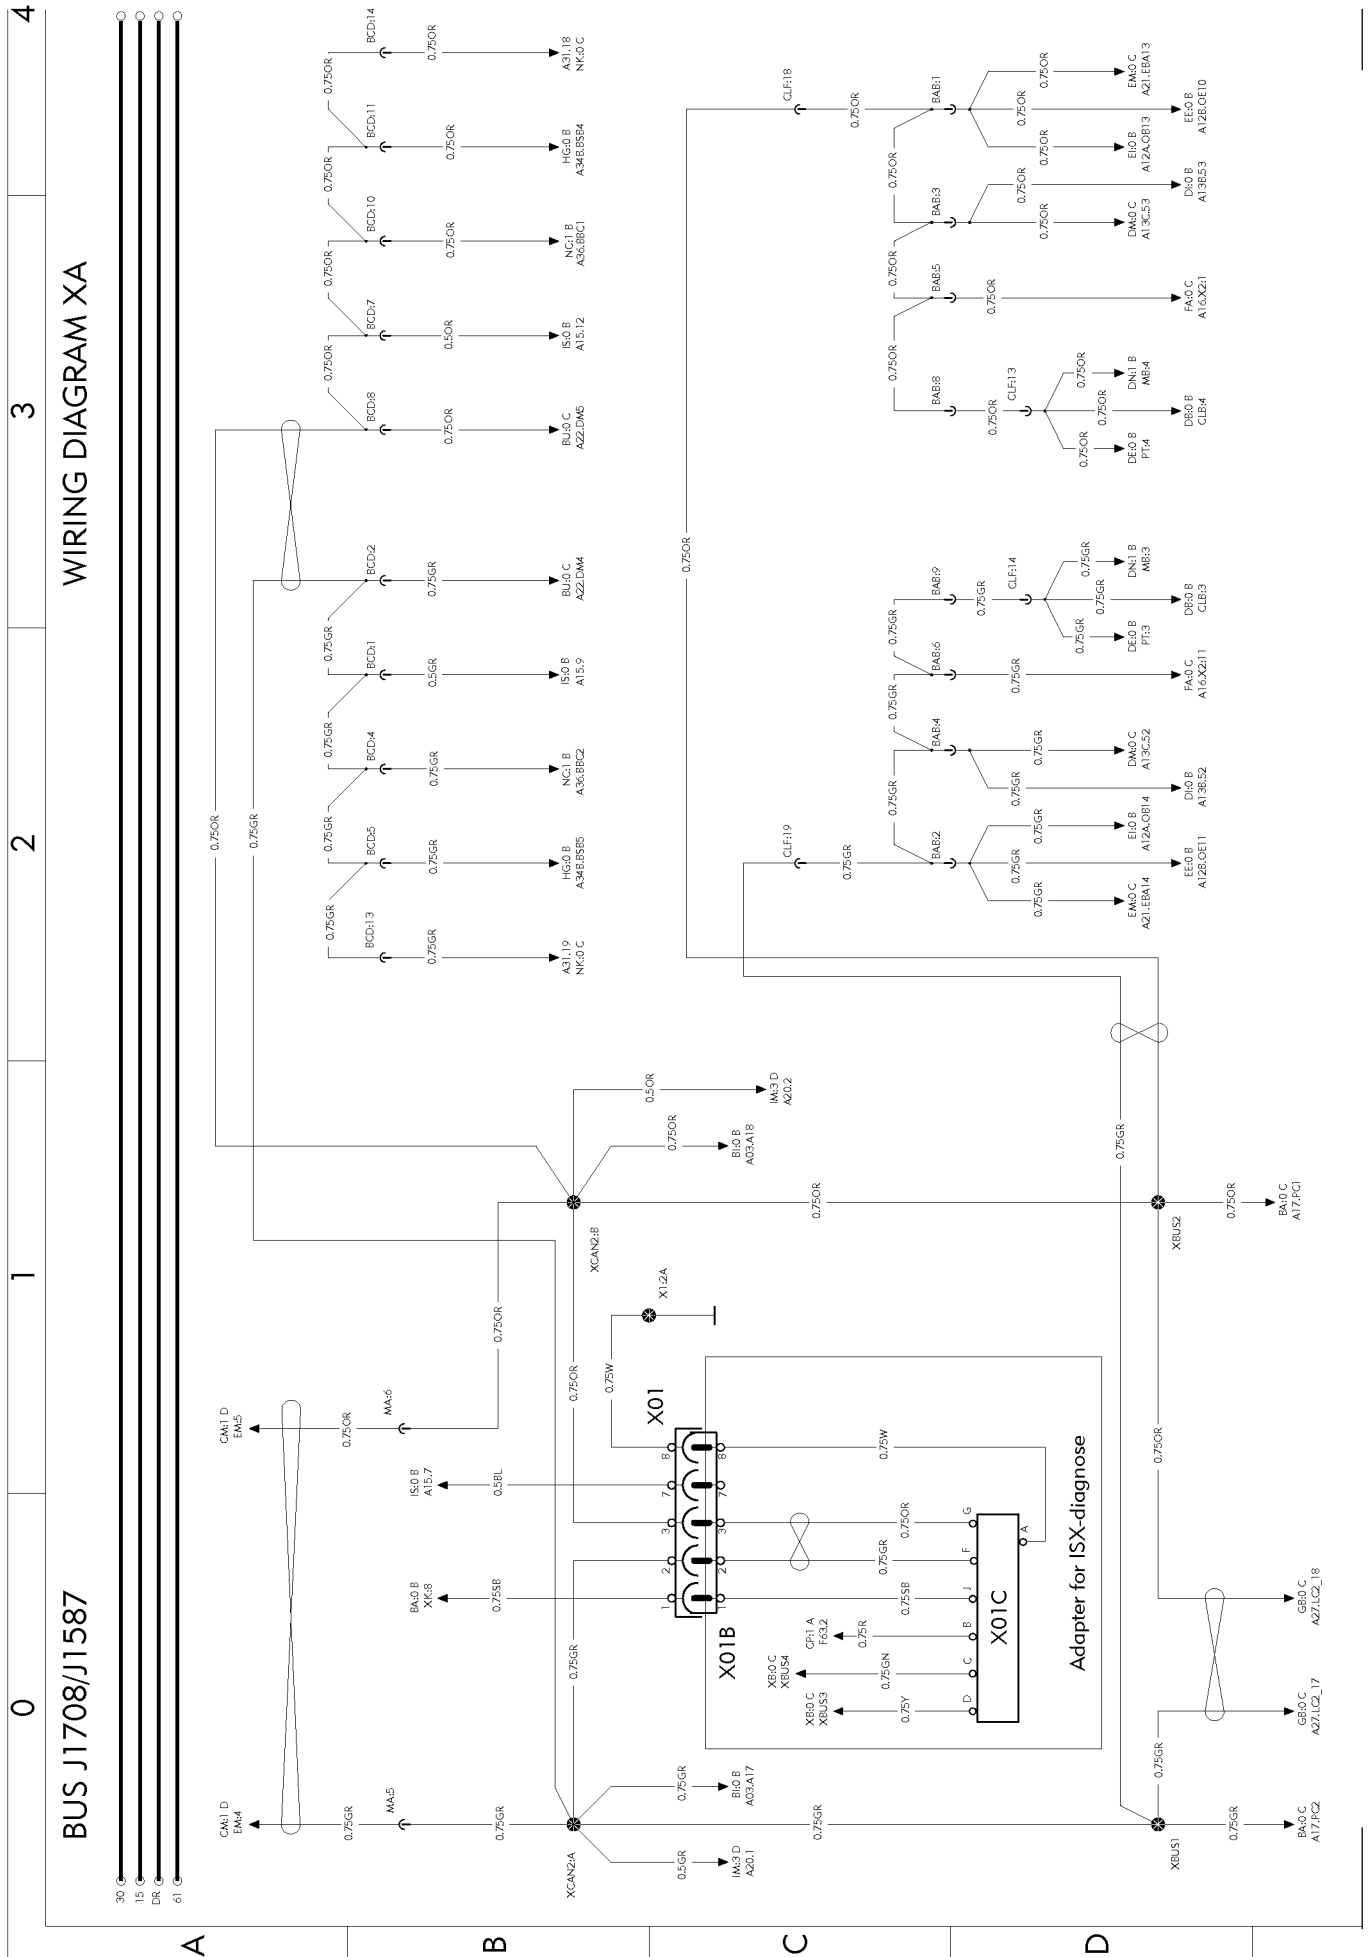


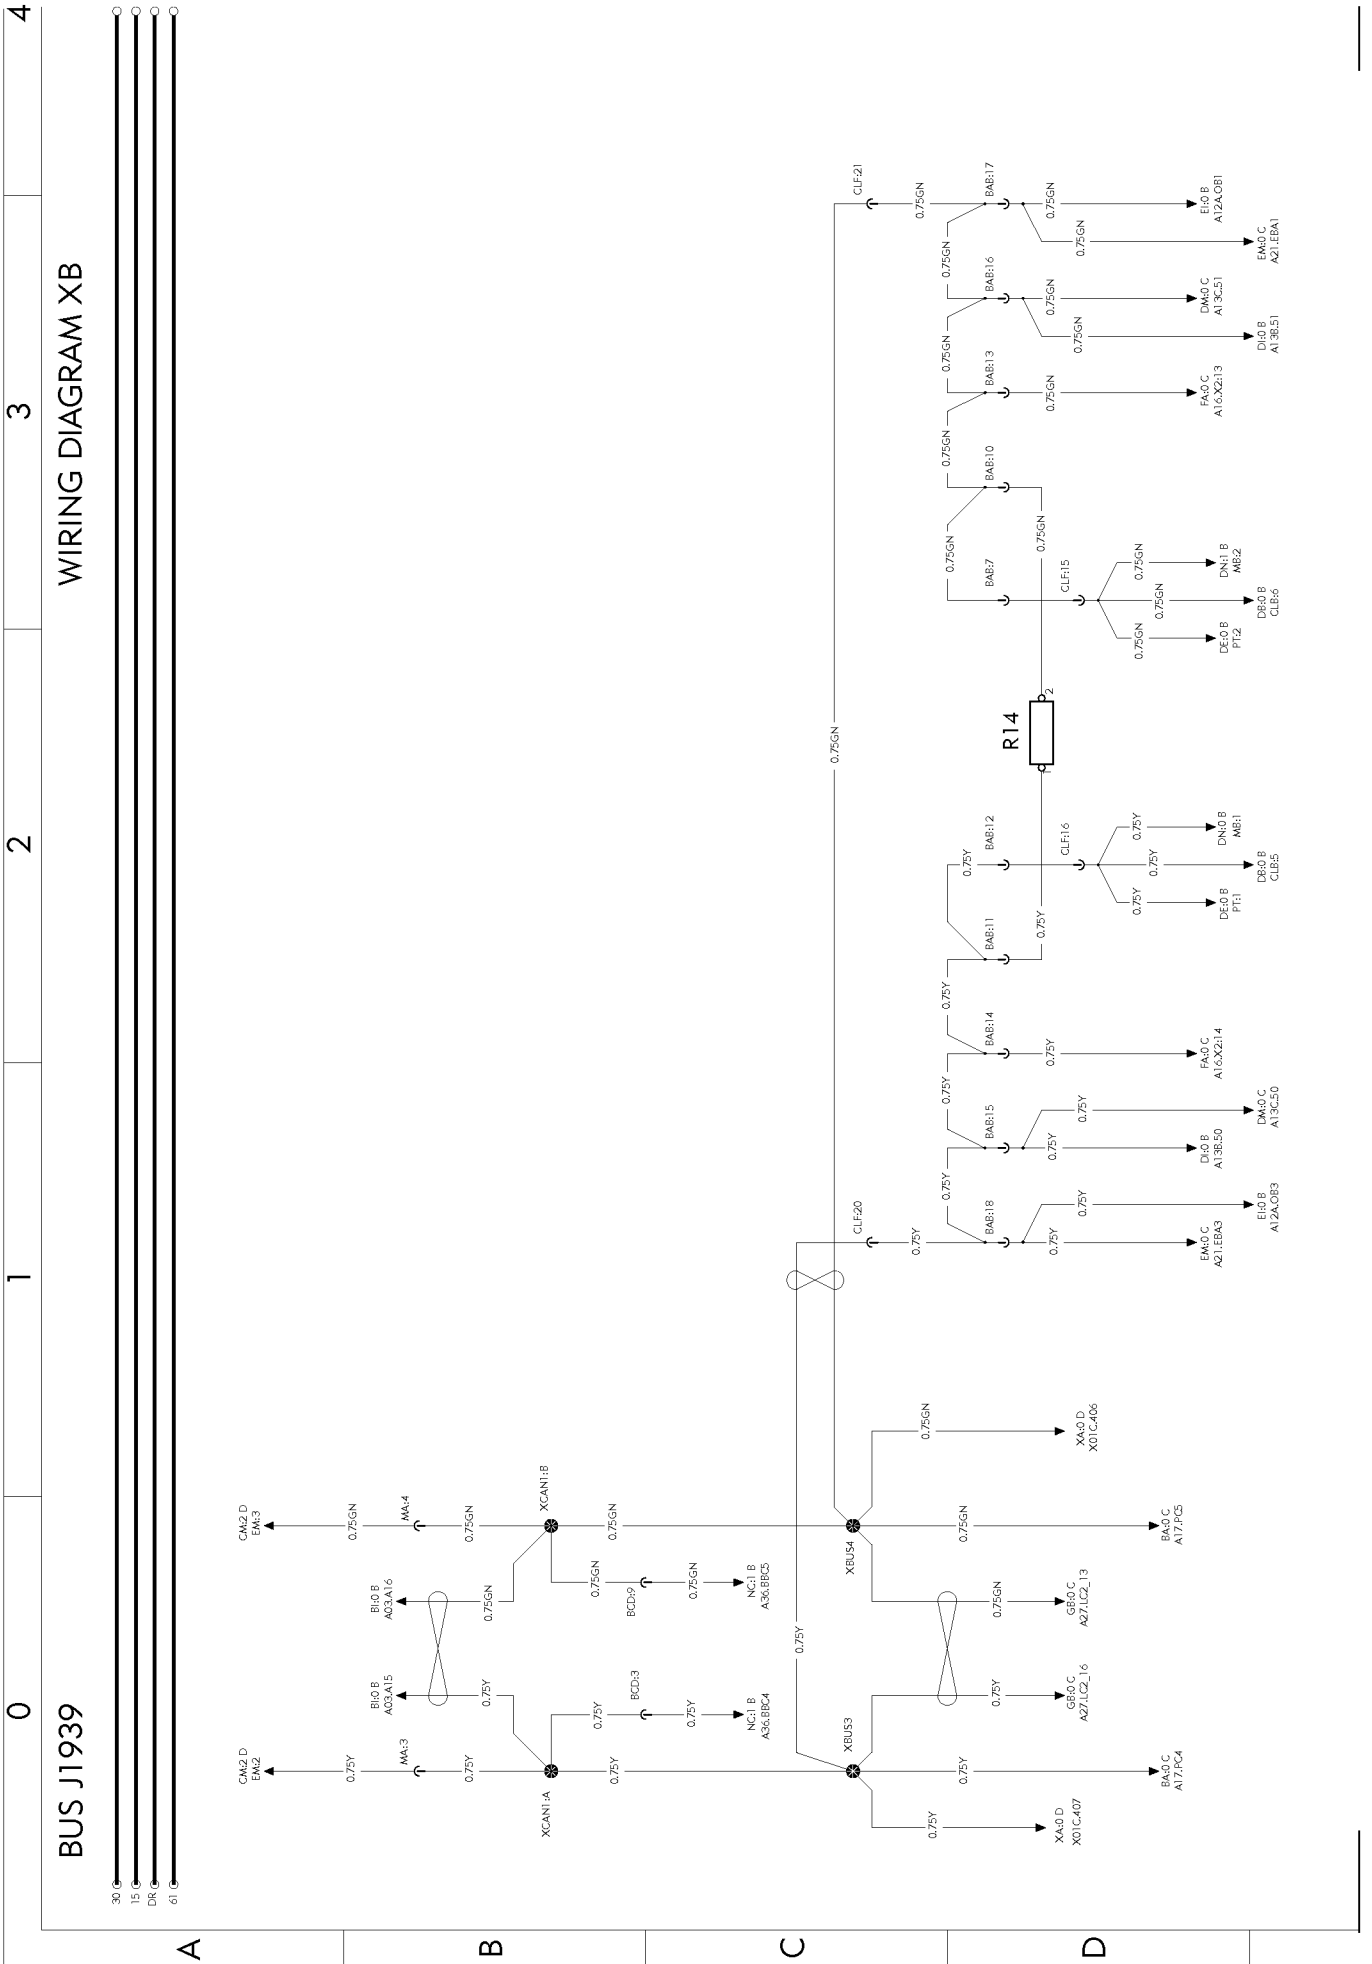

Illustrations index


-	Aerial	page 77
-	Battery cables	page 79
-	Switches	page 80
1000	Wiring harness, instruments	page 82
1006	Wiring harness, roof	page 91
1007	Wiring harness, floor	page 95
1025	Wiring harness, engine-chassi	page 101
1030	Wiring harness, engine	page 103
1037	Wiring harness, bogie lift	page 105
1040	Wiring harness, frame	page 106
1047	Wiring harness, roof beacon light	page 107
1056	Wiring harness, air dryer	page 109
1062	Wiring harness, parking heater, frame	page 109
1063	Wiring harness, trailer connections	page 110
1072	Wiring harness, air suspension chassi	page 111
1077	Wiring harness, side marking lamps	page 112
1083	Wiring harness, door	page 113
1086	Wiring harness, ABS chassi	page 115
1401	Wiring harness, solenoid valves	page 118
1403	Wiring harness, retarder	page 119
1435	Wiring harness, main switch	page 120
1436	Wiring harness, roof sign lighting	page 107
1458	Wiring harness, front wheel drive	page 122
1460	Wiring harness, cab-battery box	page 120
1470	Wiring harness, el.operated mirror arch	page 133
1472	Wiring harness, load indicator	page 123
1476	Wiring harness, cab-engine	page 101
1484	Wiring harness, floor gear shift selector	page 124
1493	Wiring harness, power steering	page 126
1494	Wiring harness, gearbox	page 127
1499	Wiring harness, cab-gearbox	page 127
1501	Wiring harness, upper front	page 131
1502	Wiring harness, lower front left	page 131
1503	Wiring harness, lower front right	page 132
1504	Wiring harness, firewall	page 133
1505	Wiring harness, body builder connections	page 134
1506	Wiring harness, demountable (swap-body)	page 134
1507	Wiring harness, ESP chassi	page 136


Illustrations

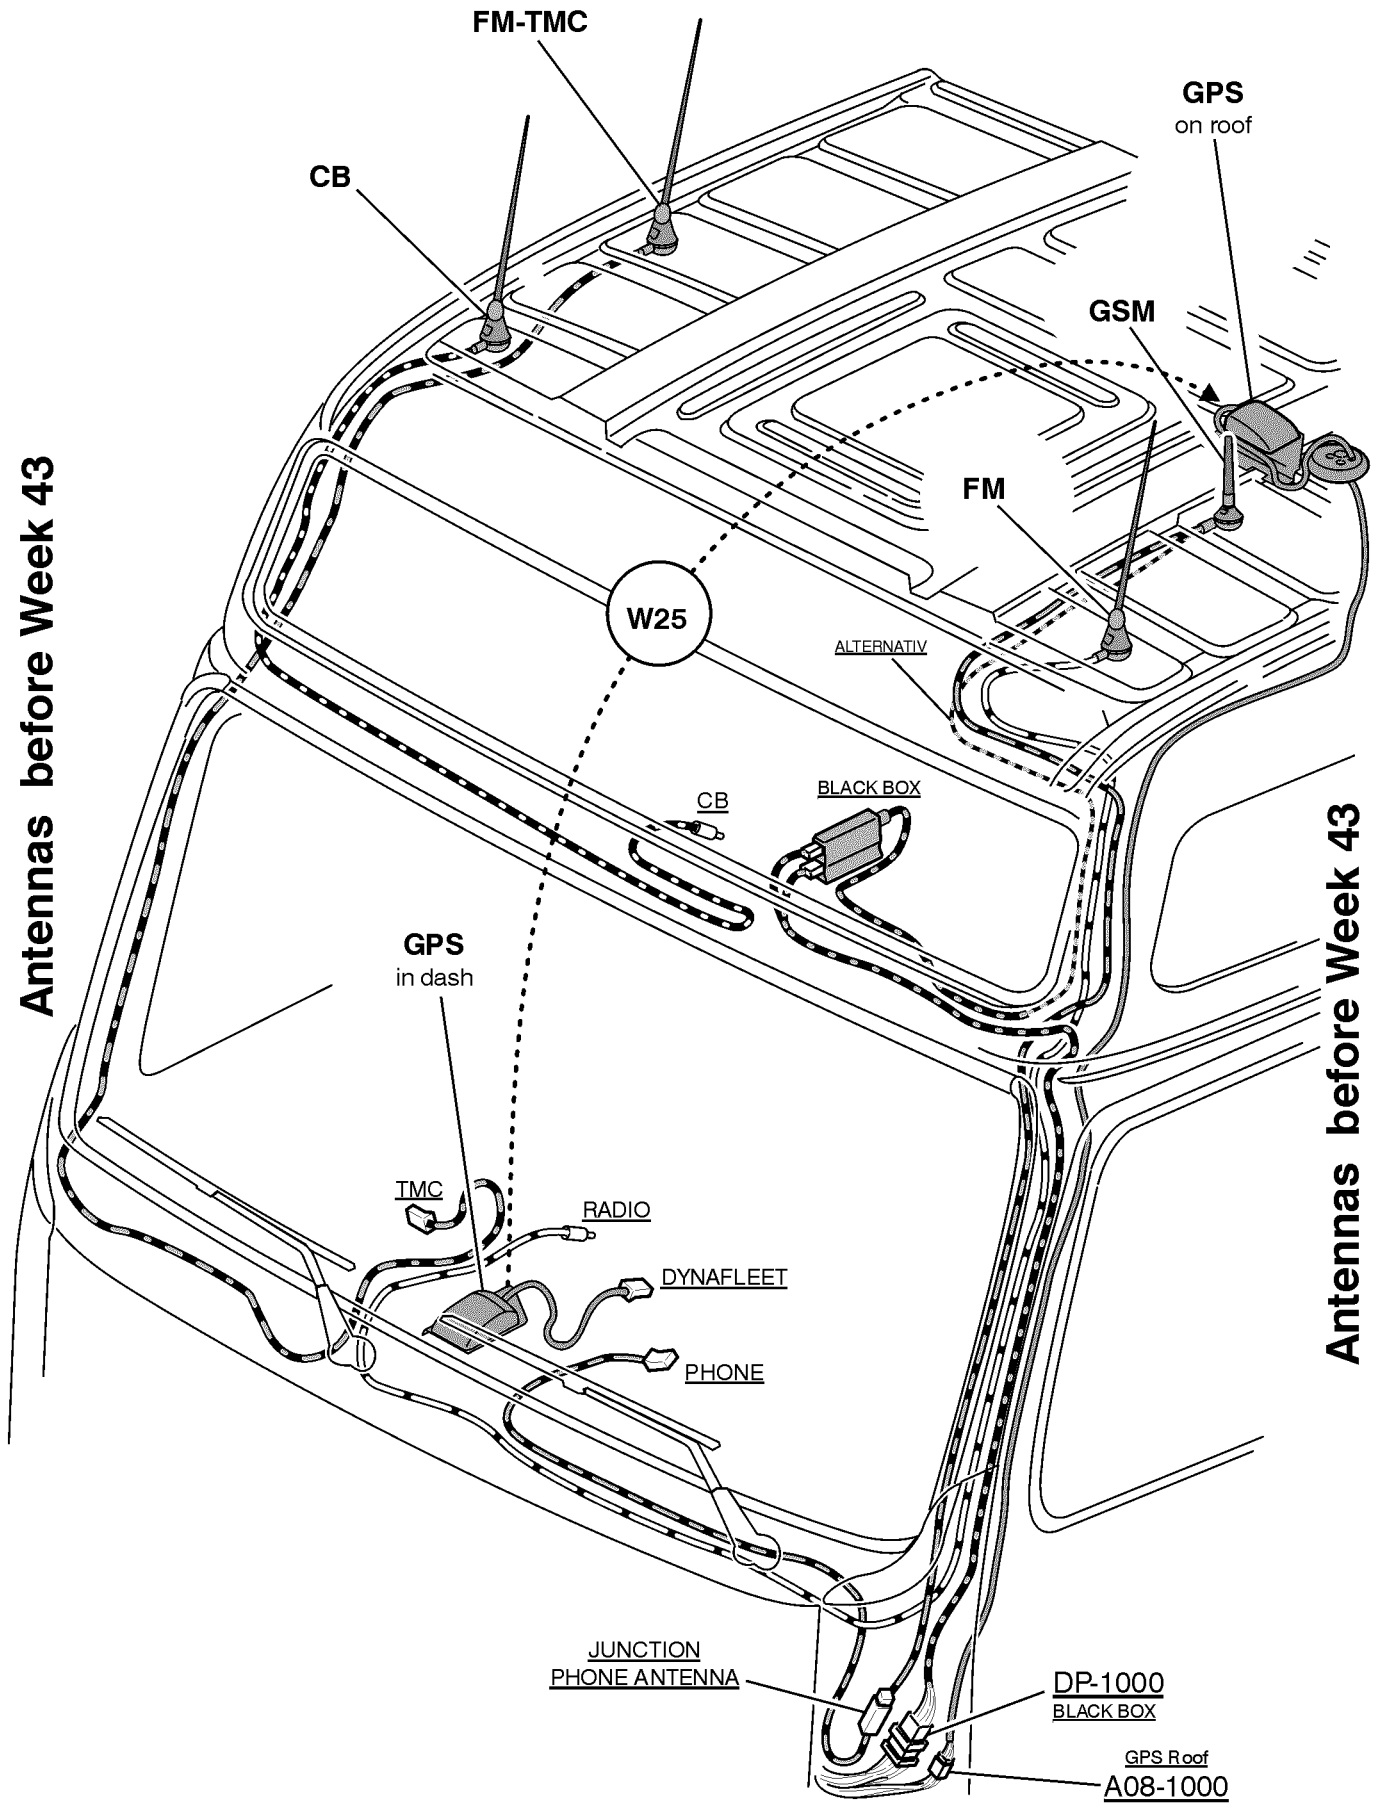


Antennas before Week 43


Antennas before Week 43

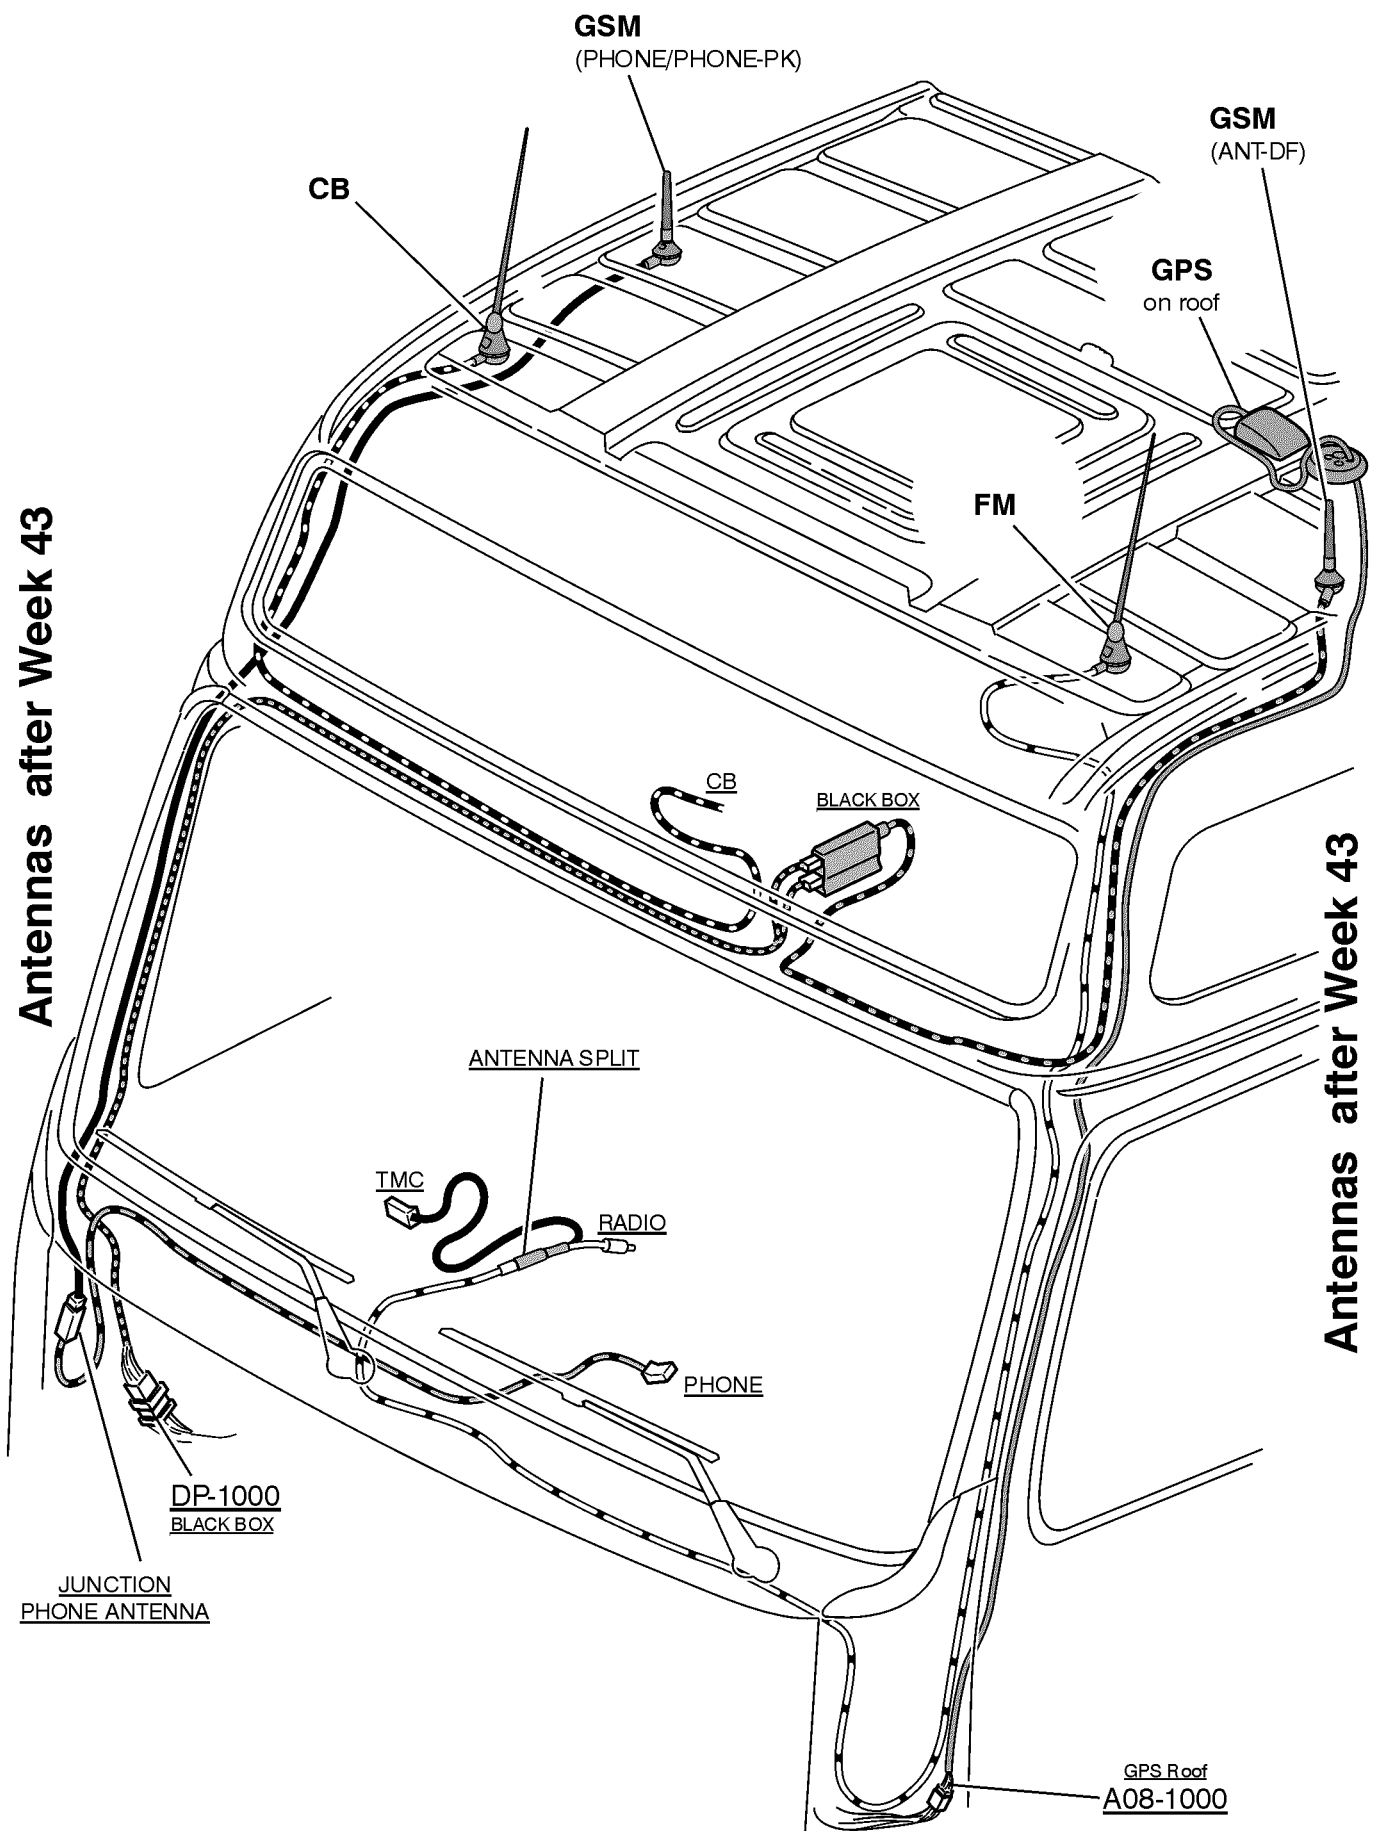


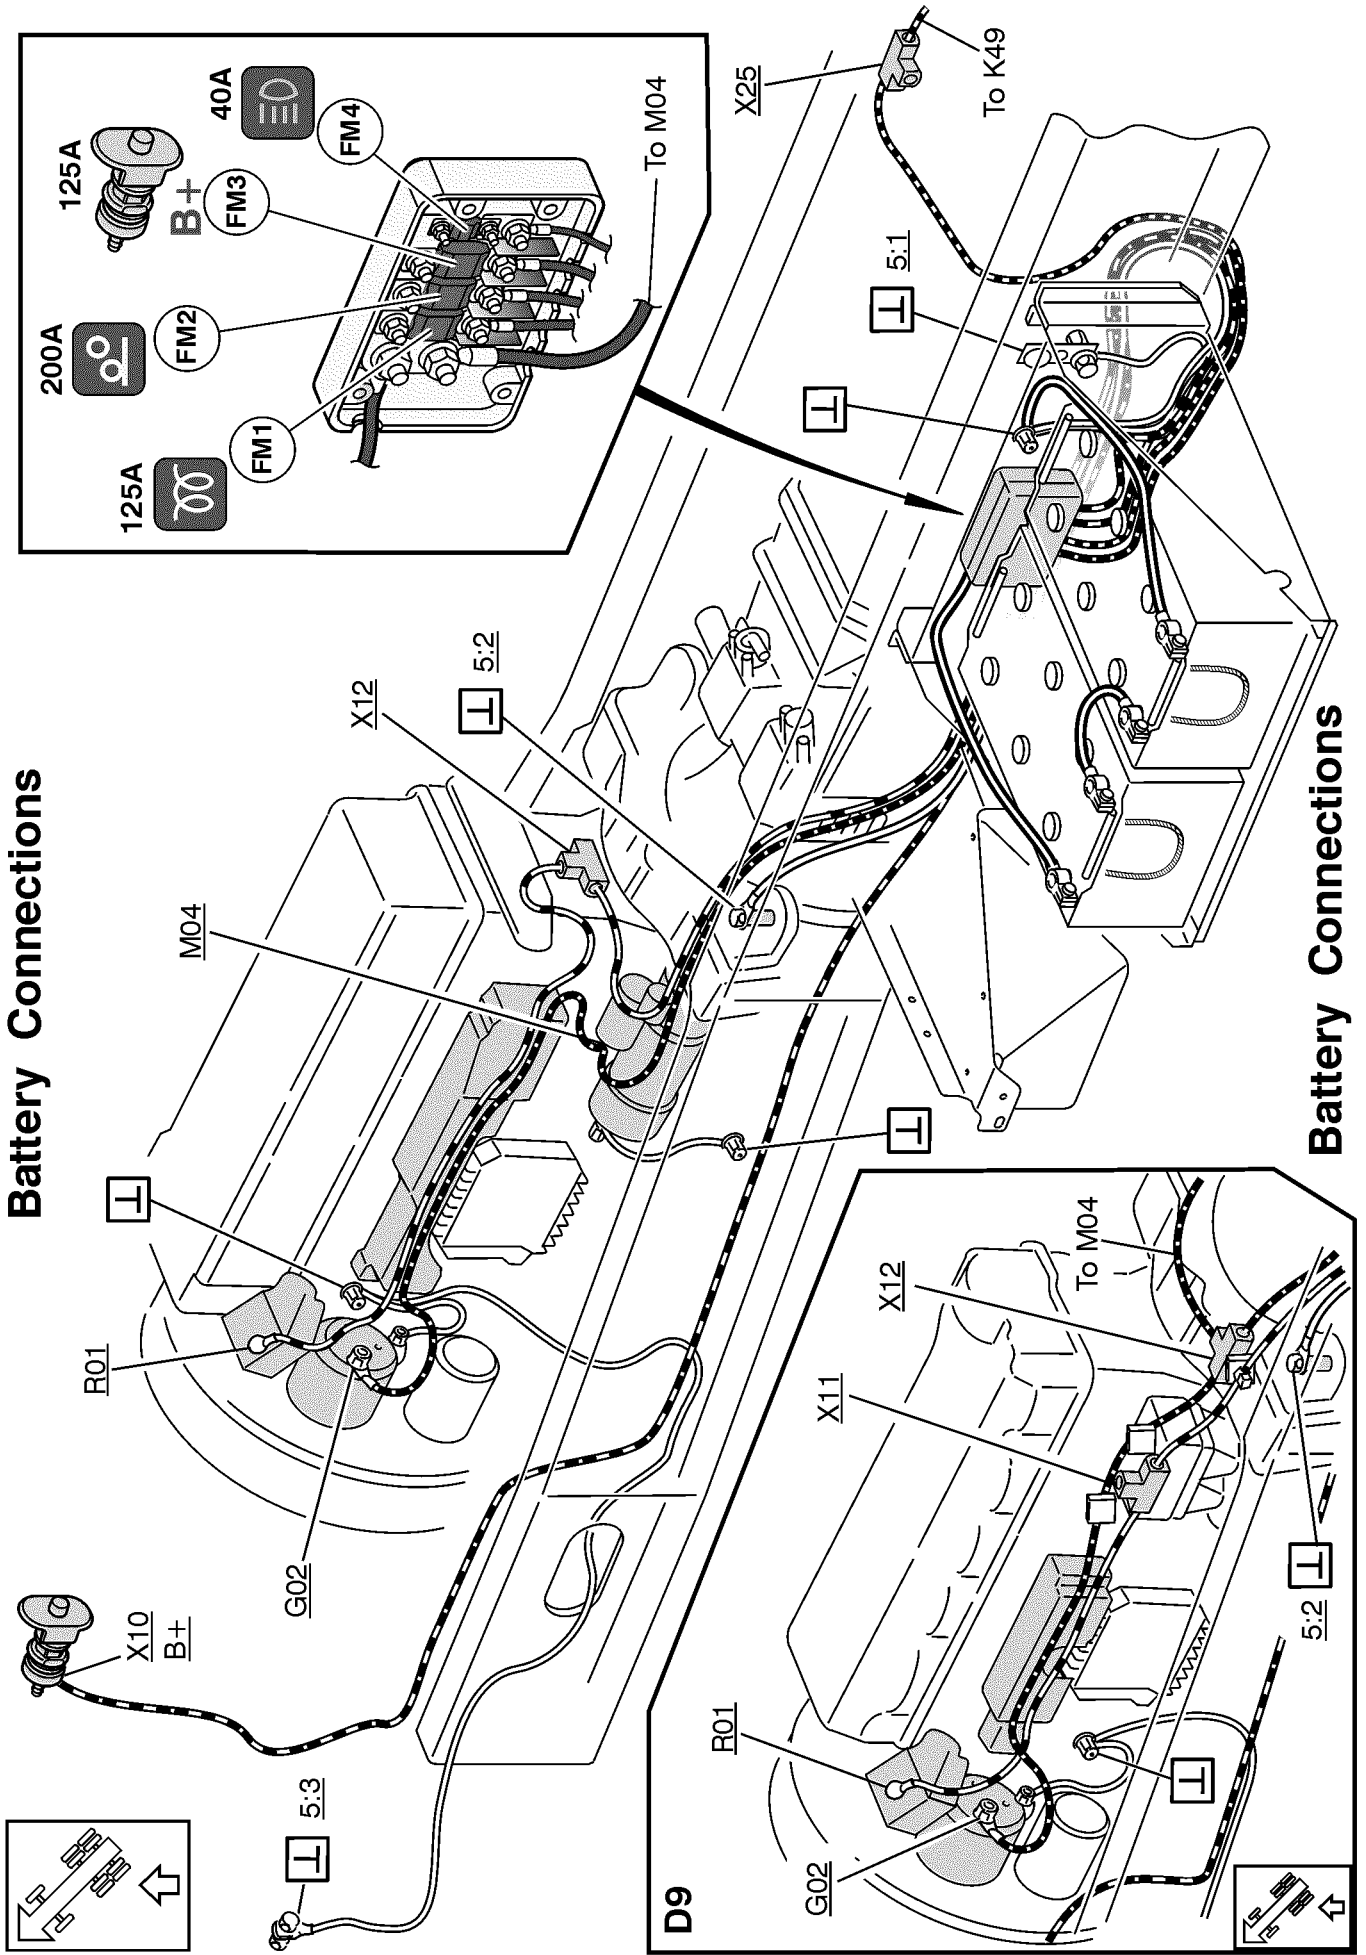


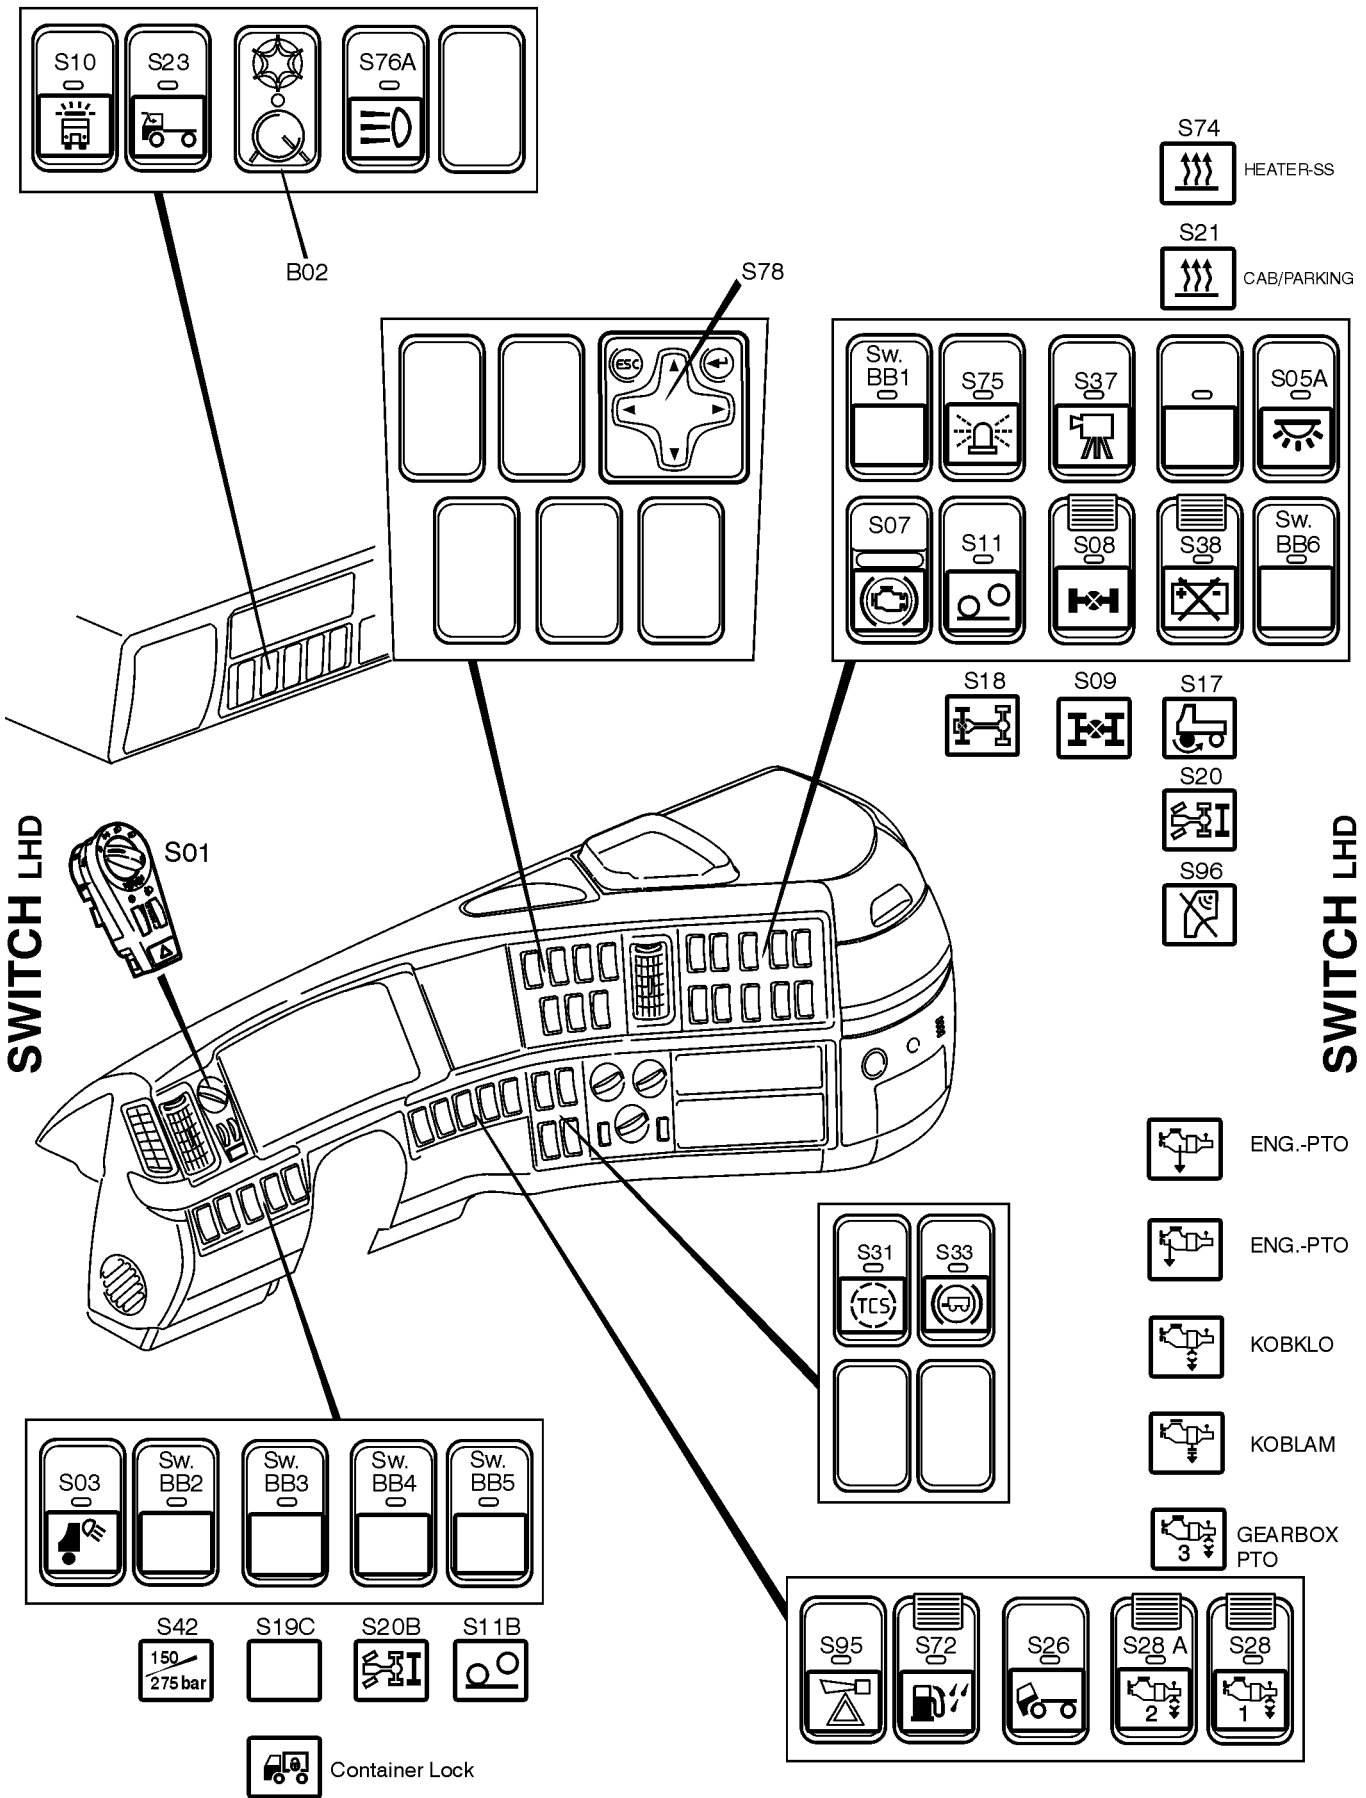




T3016378

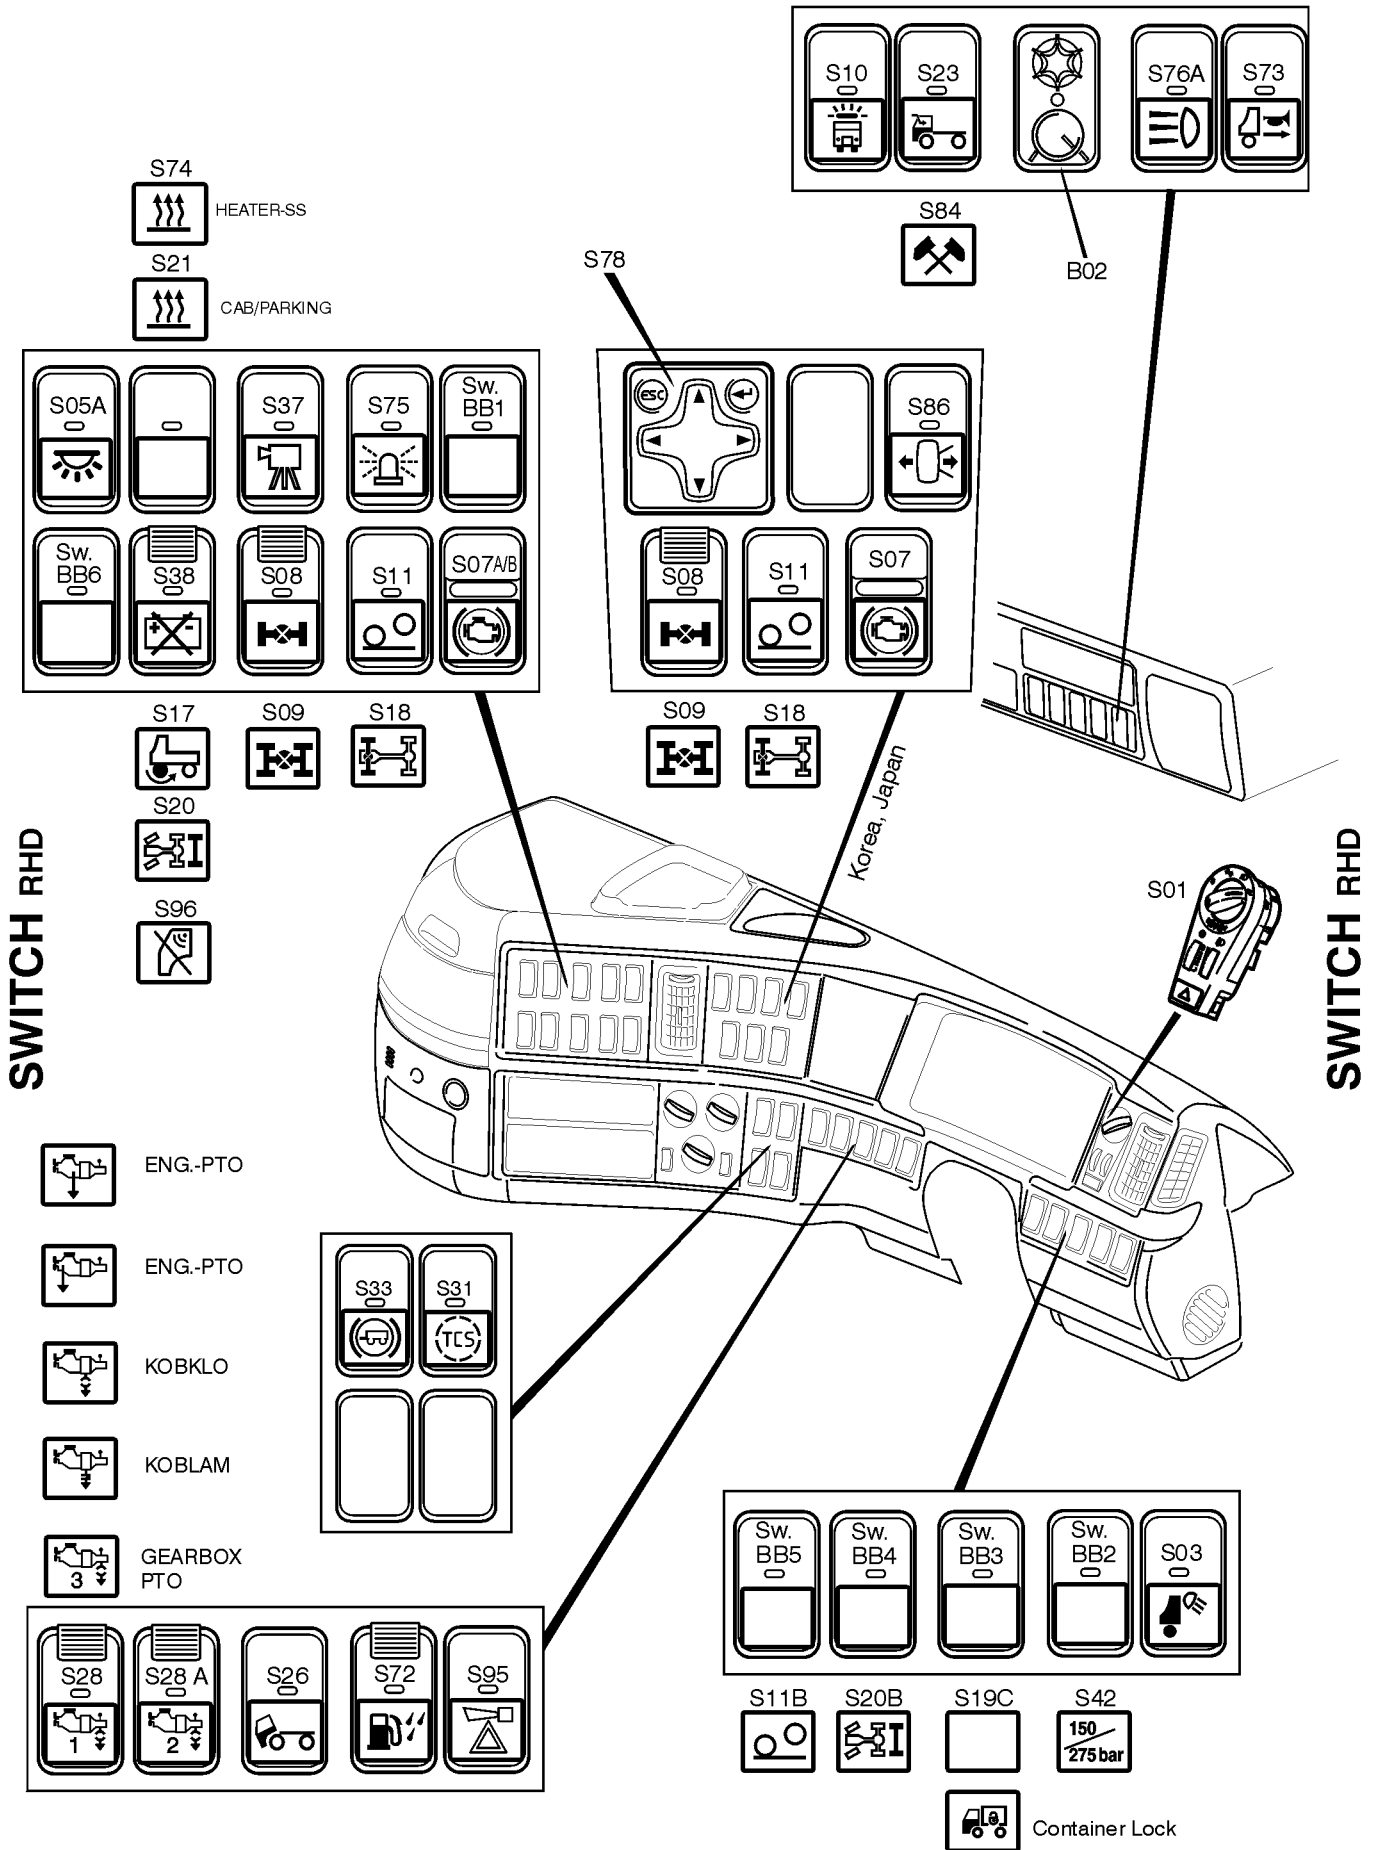

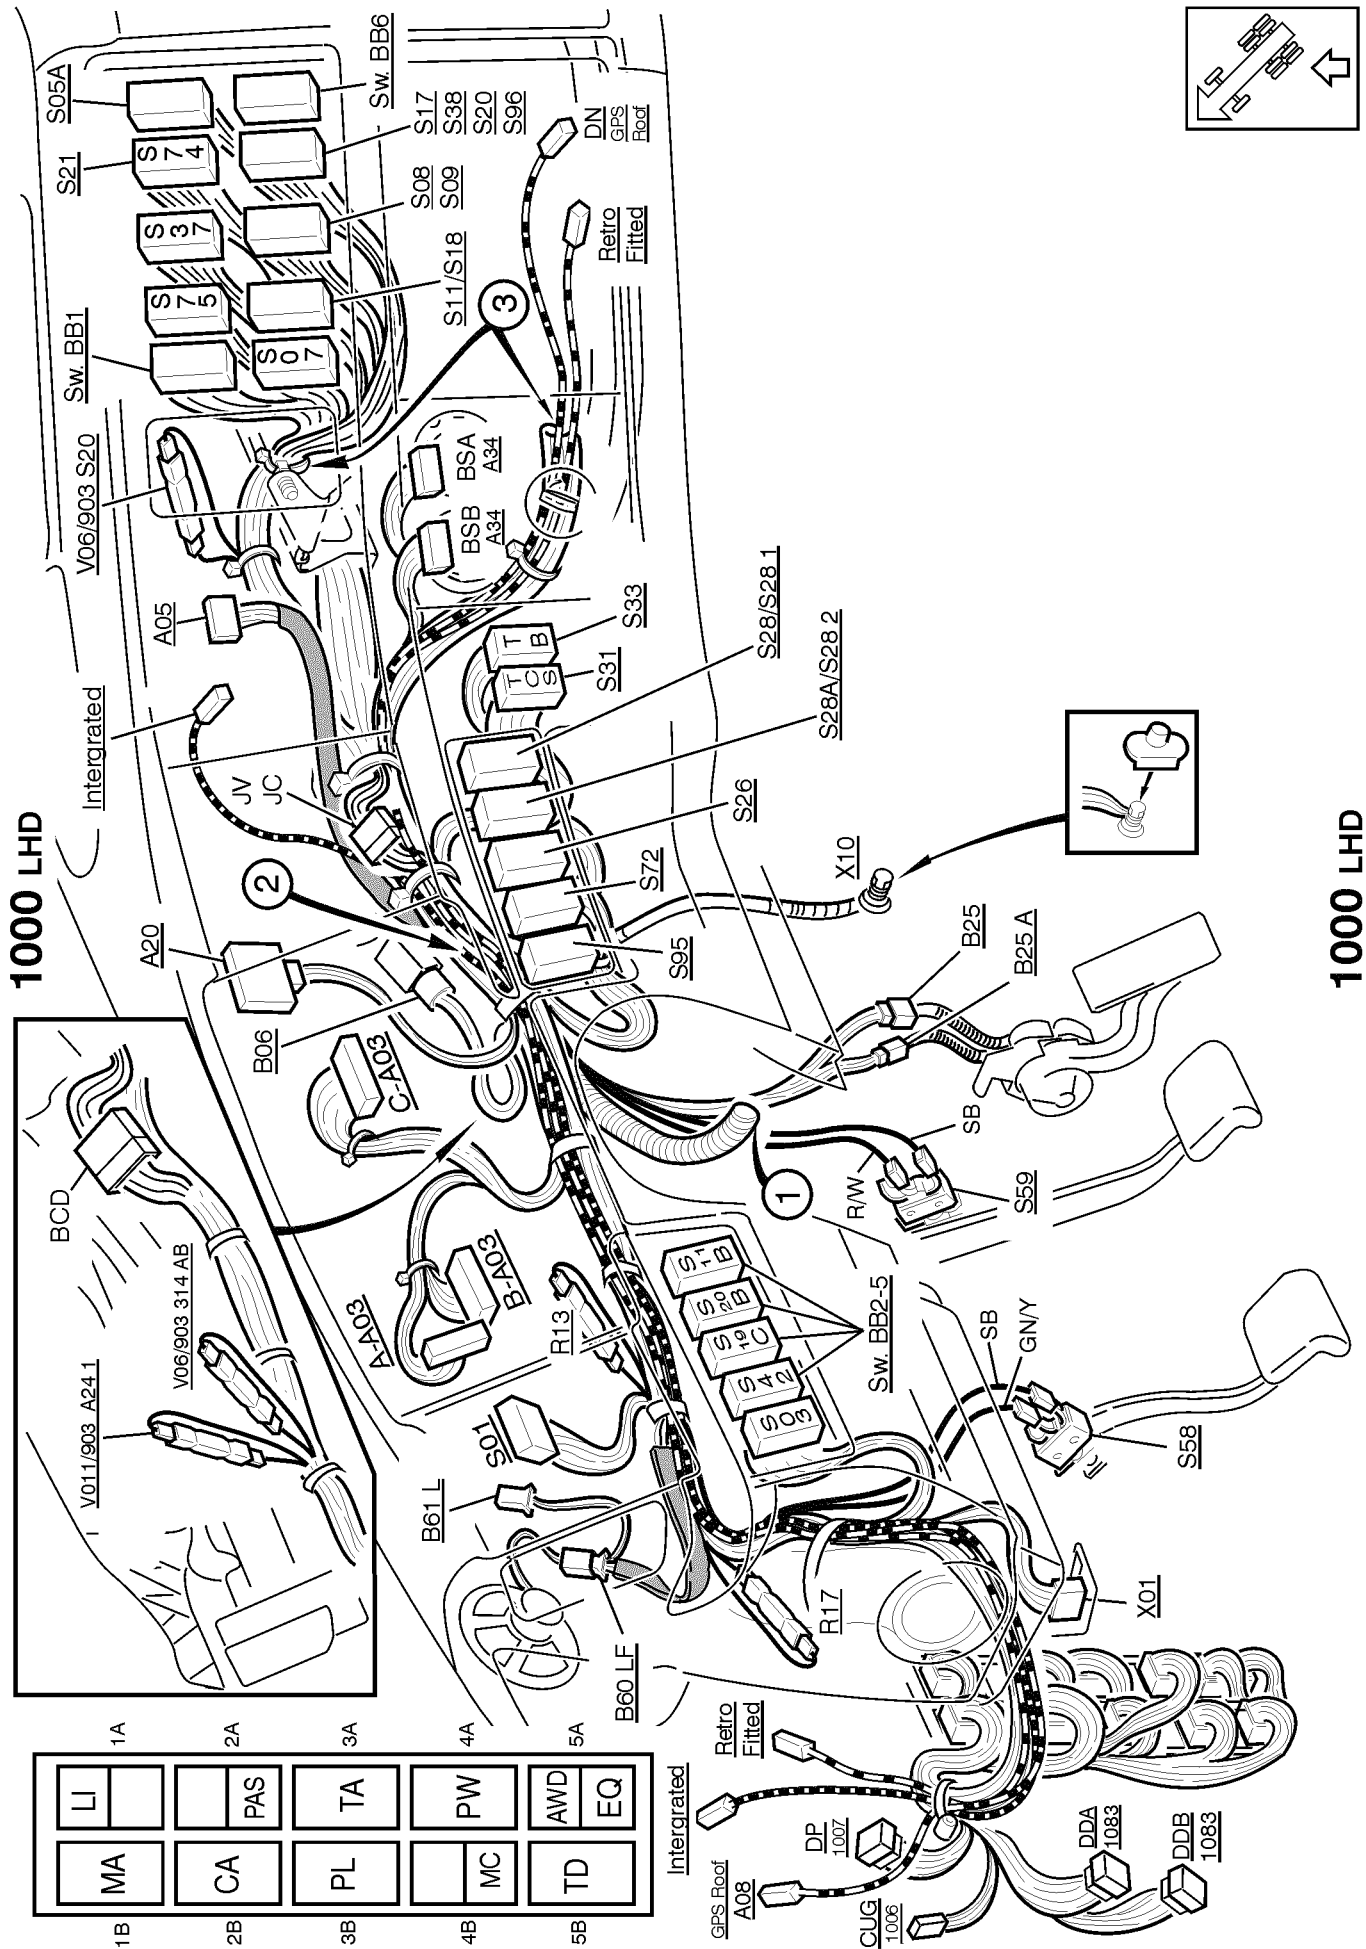

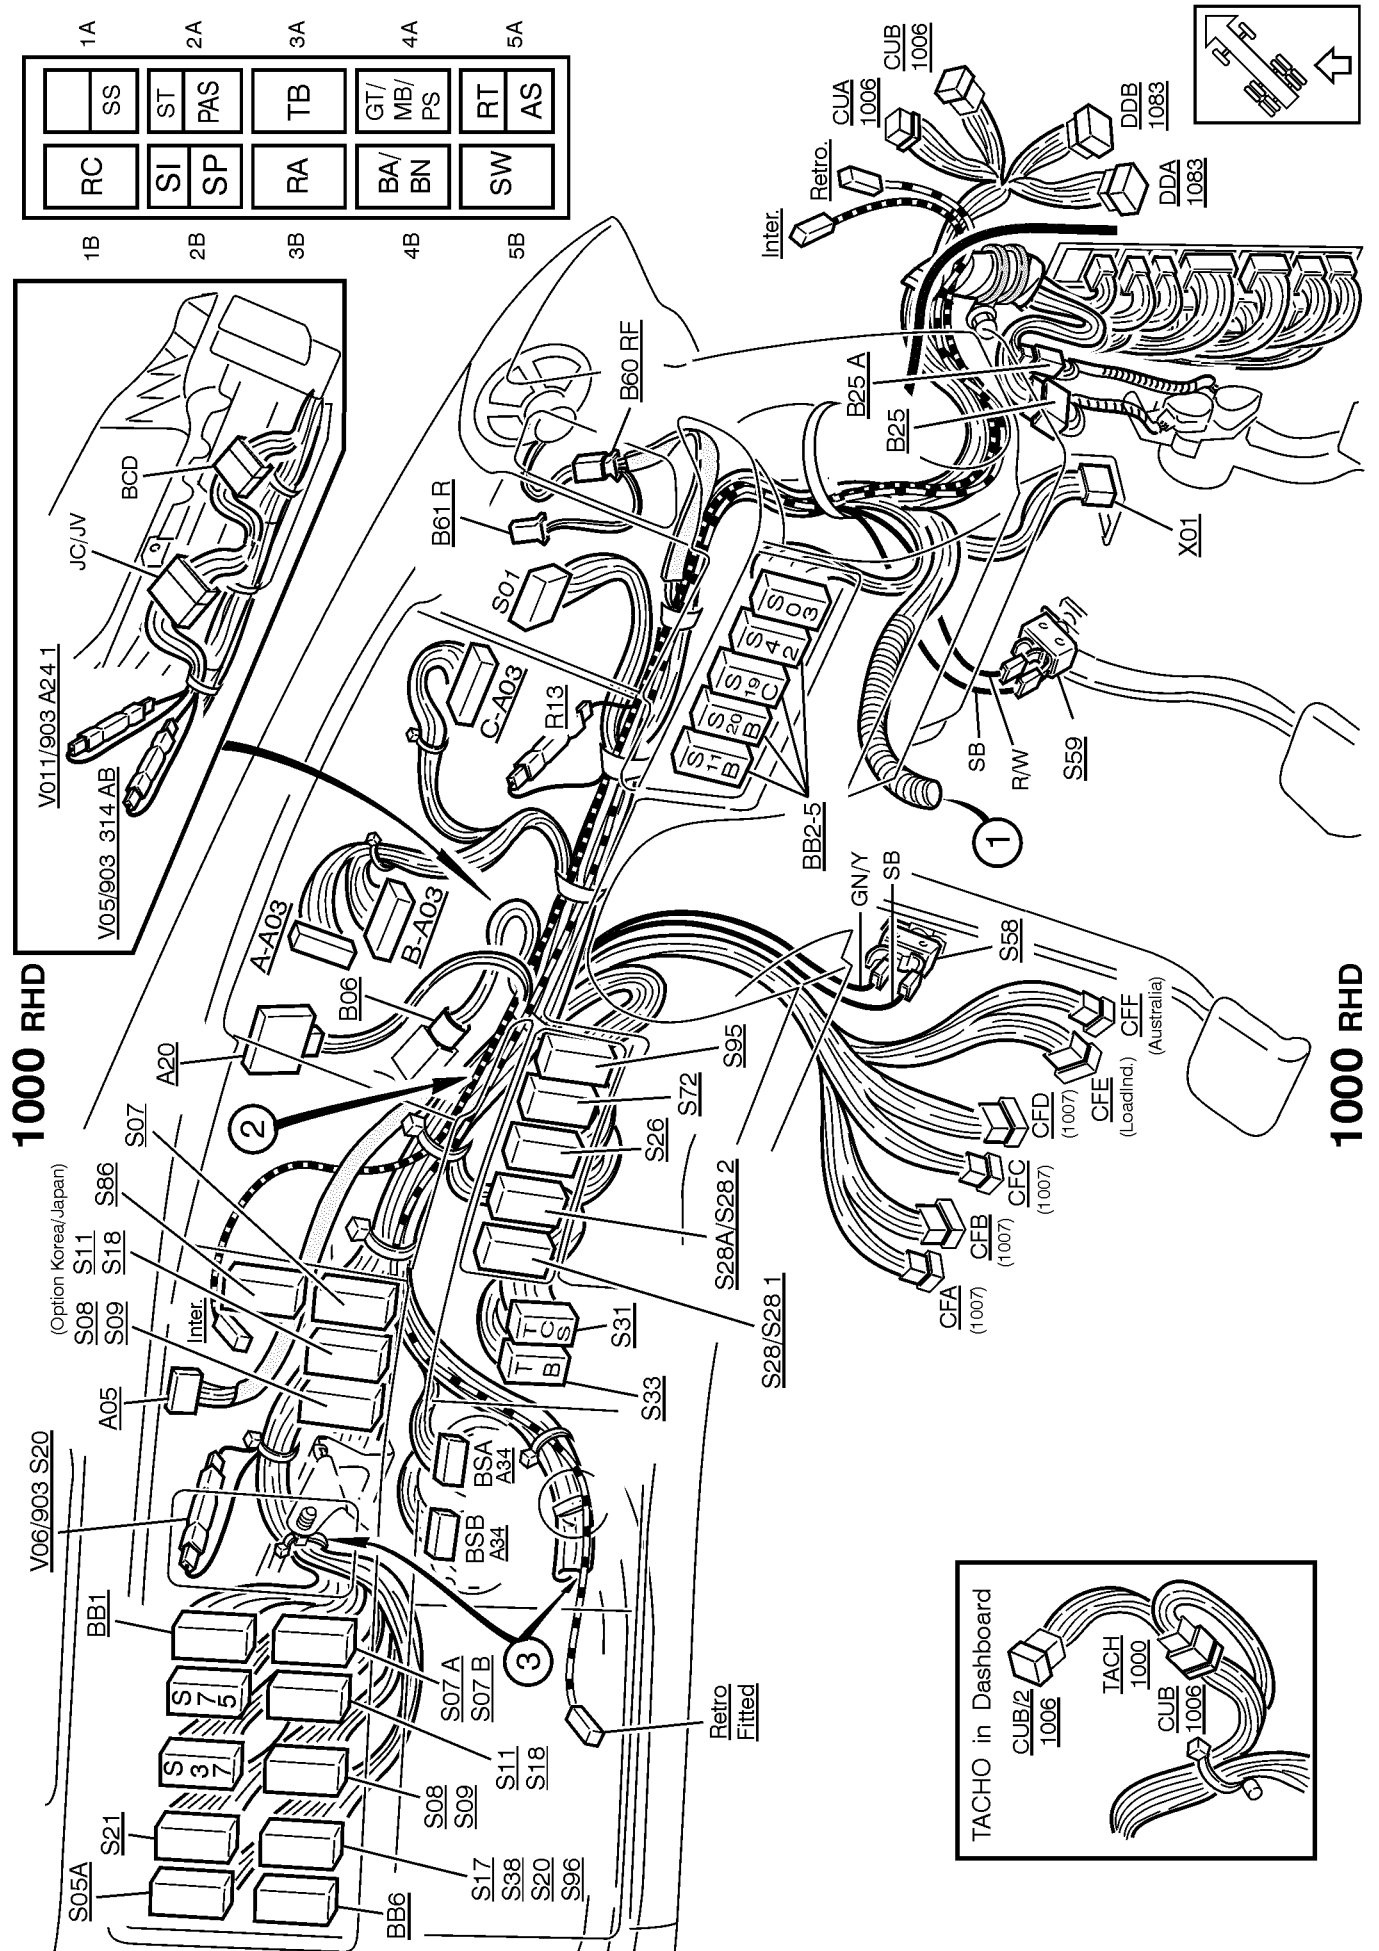


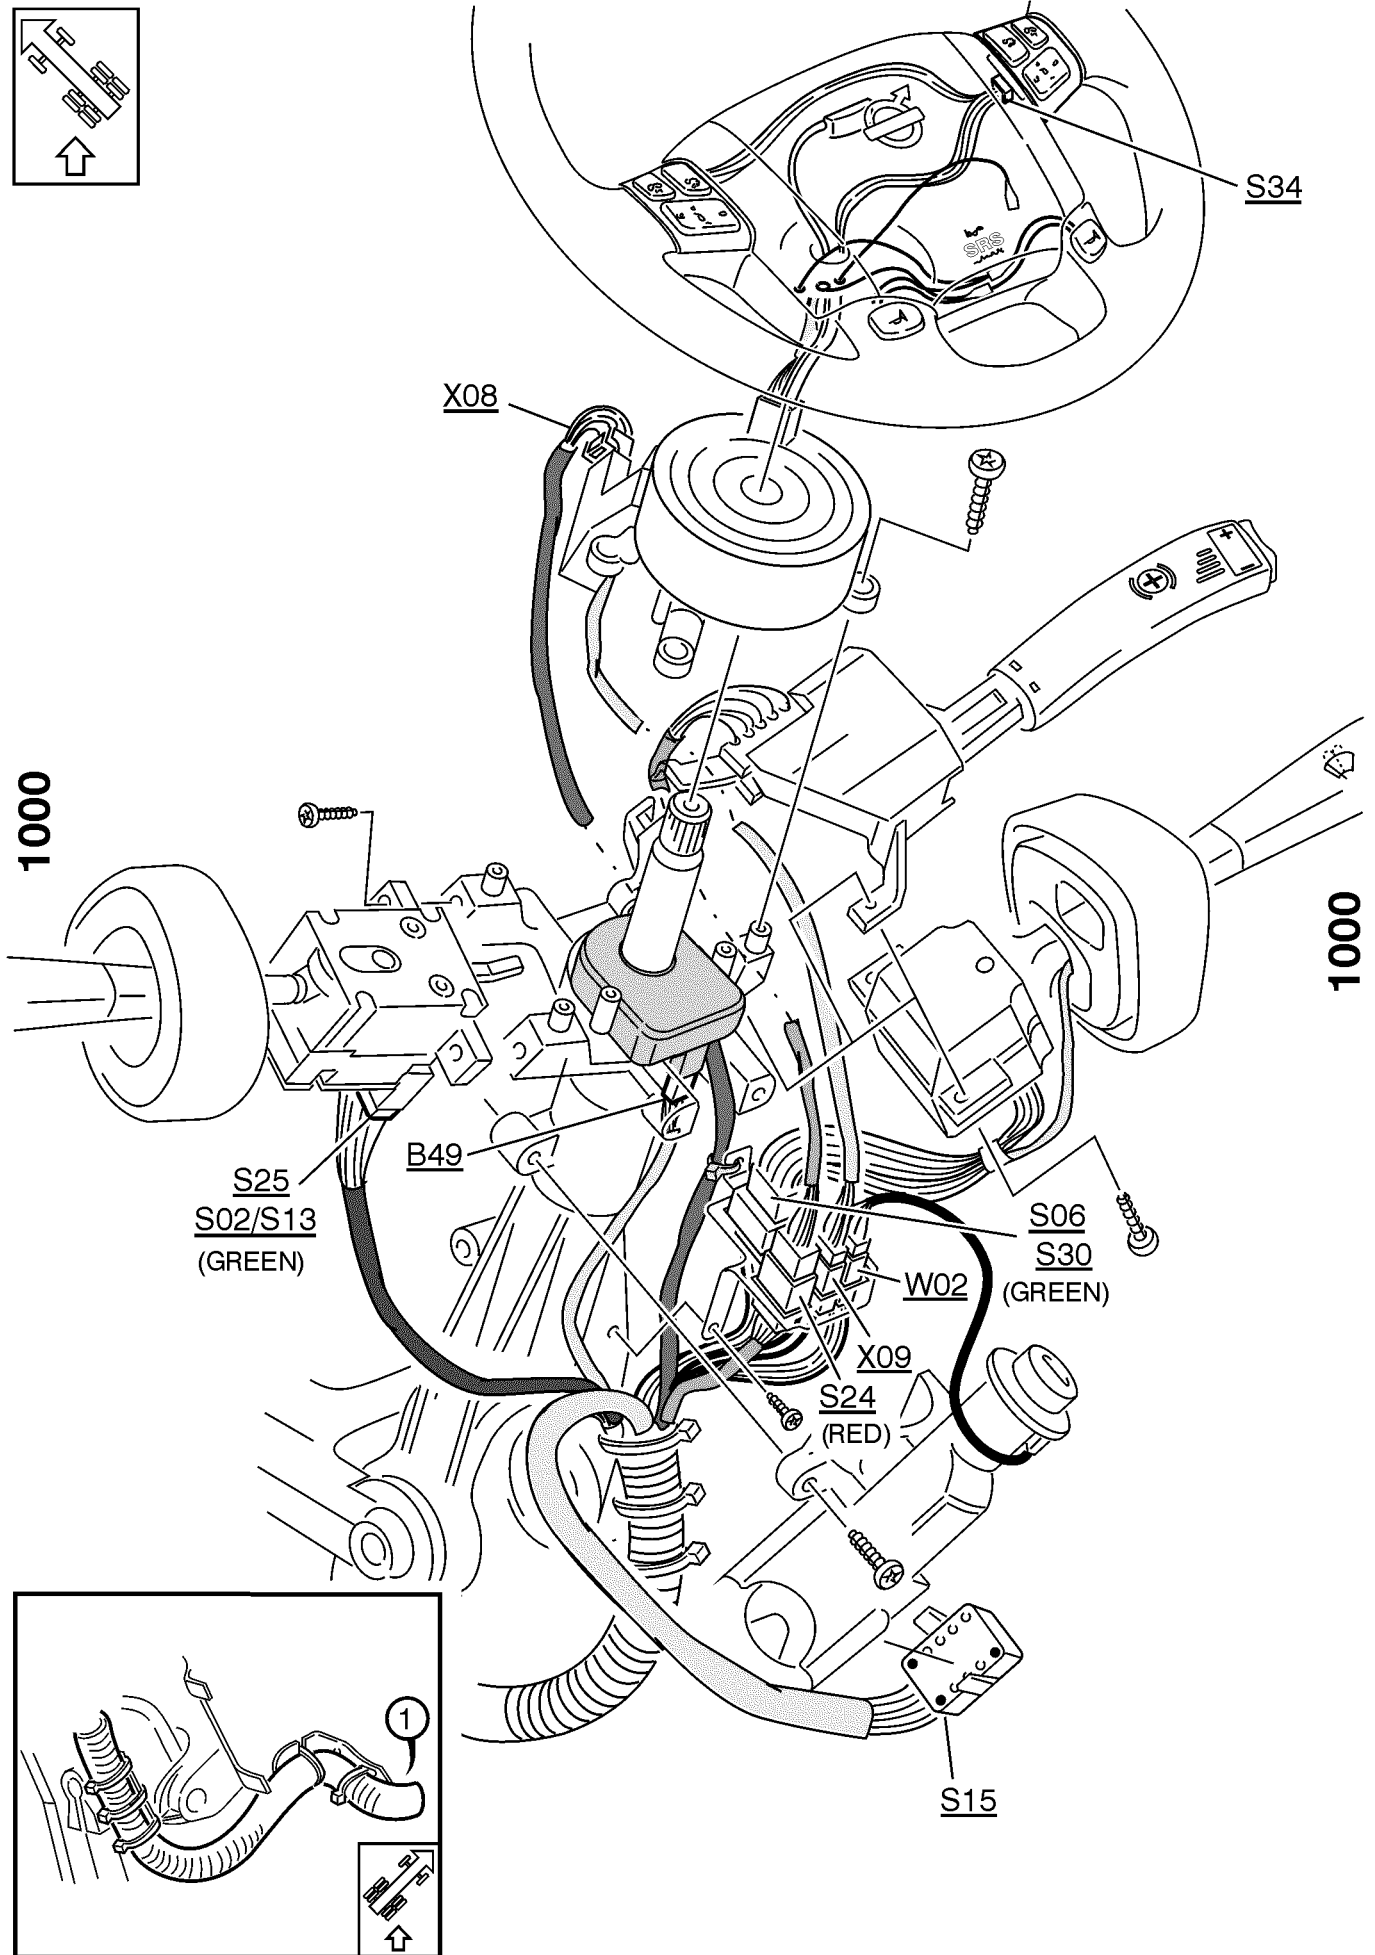


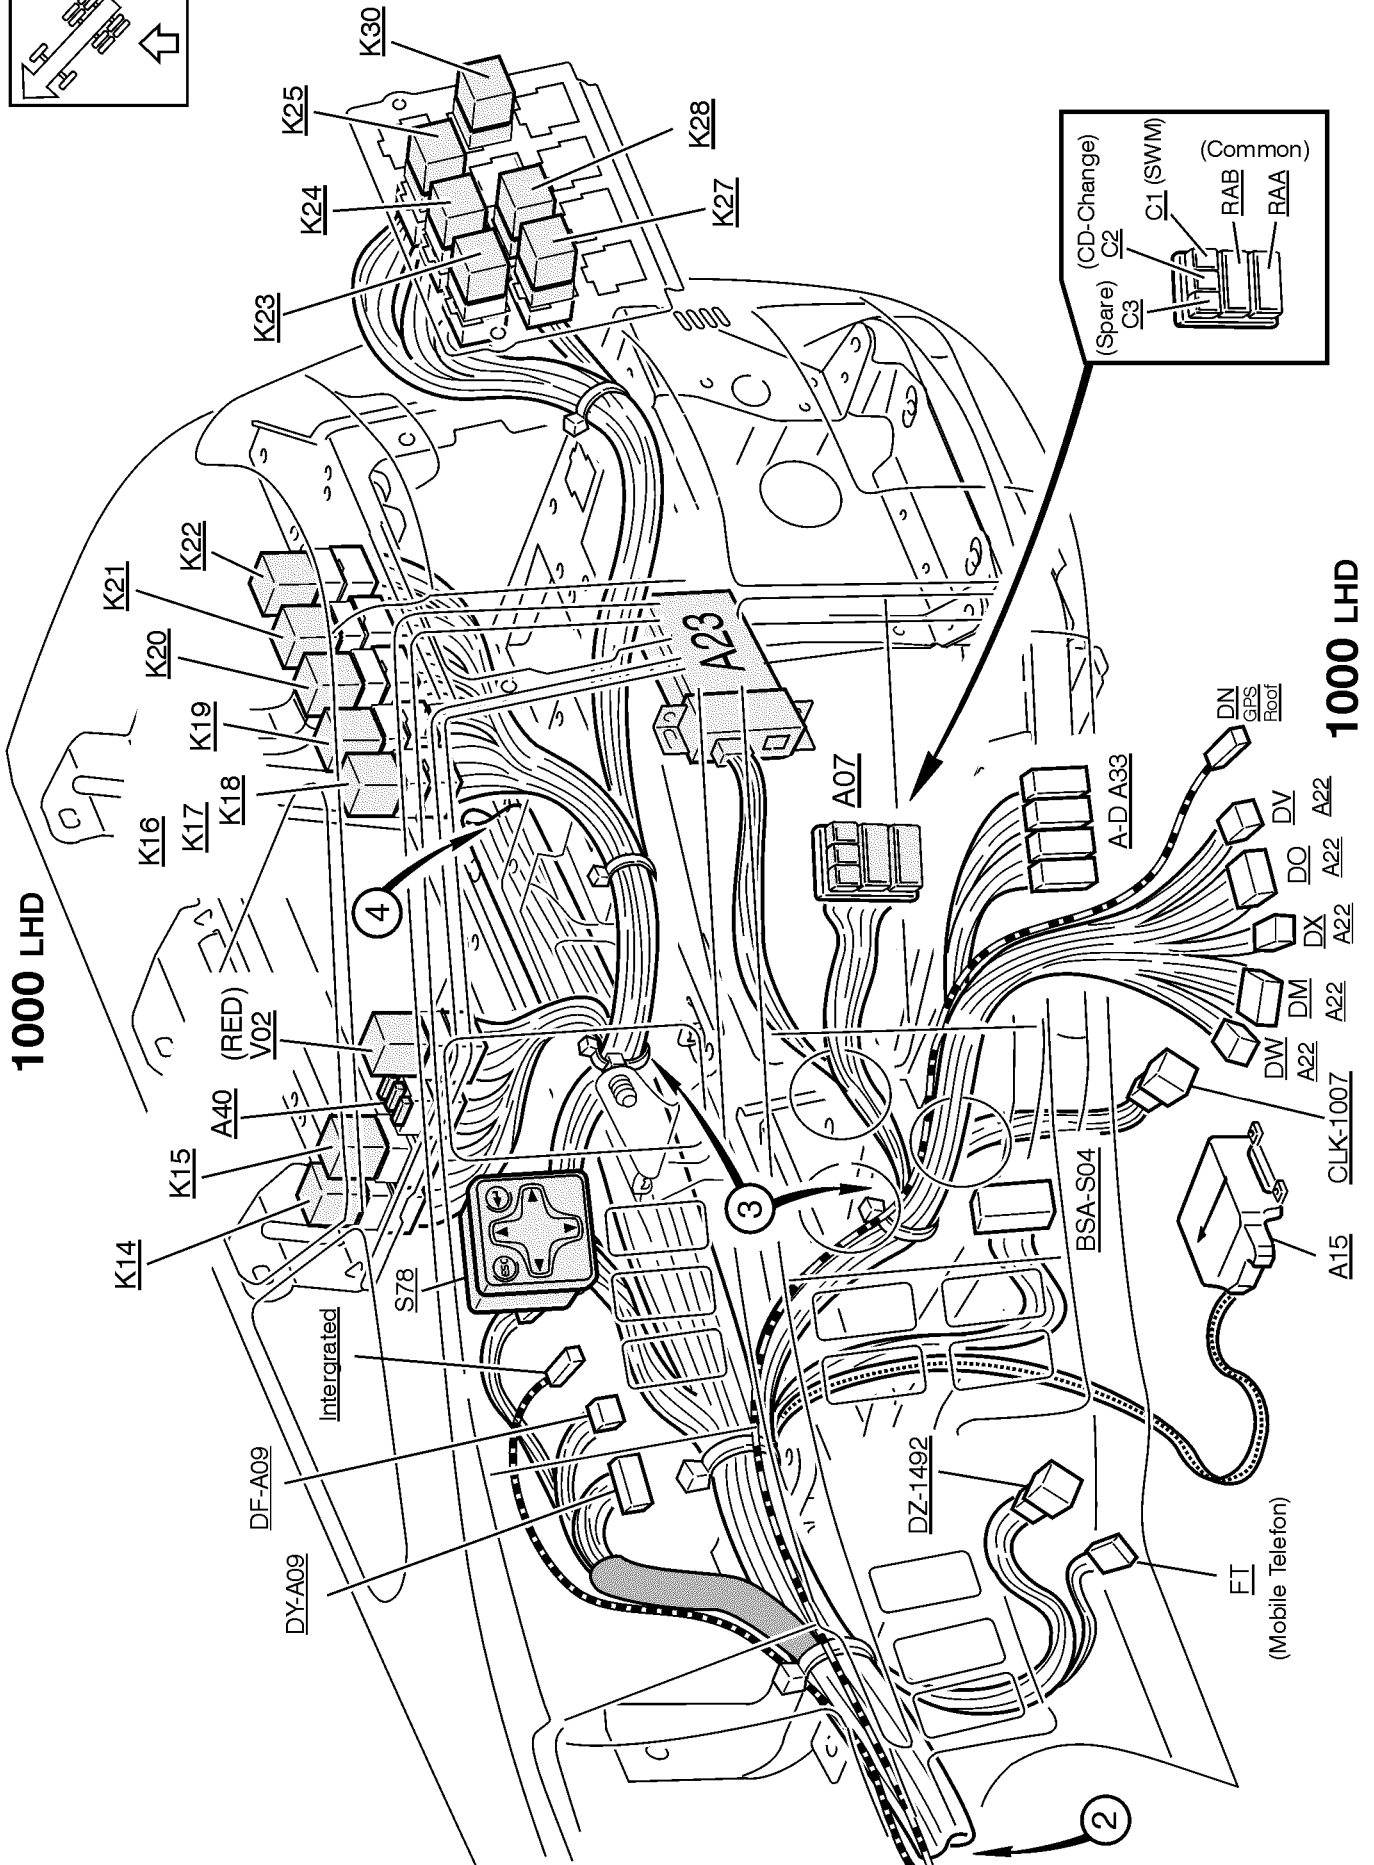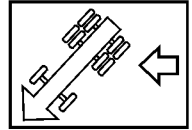



1000 LHD


1000 LHD

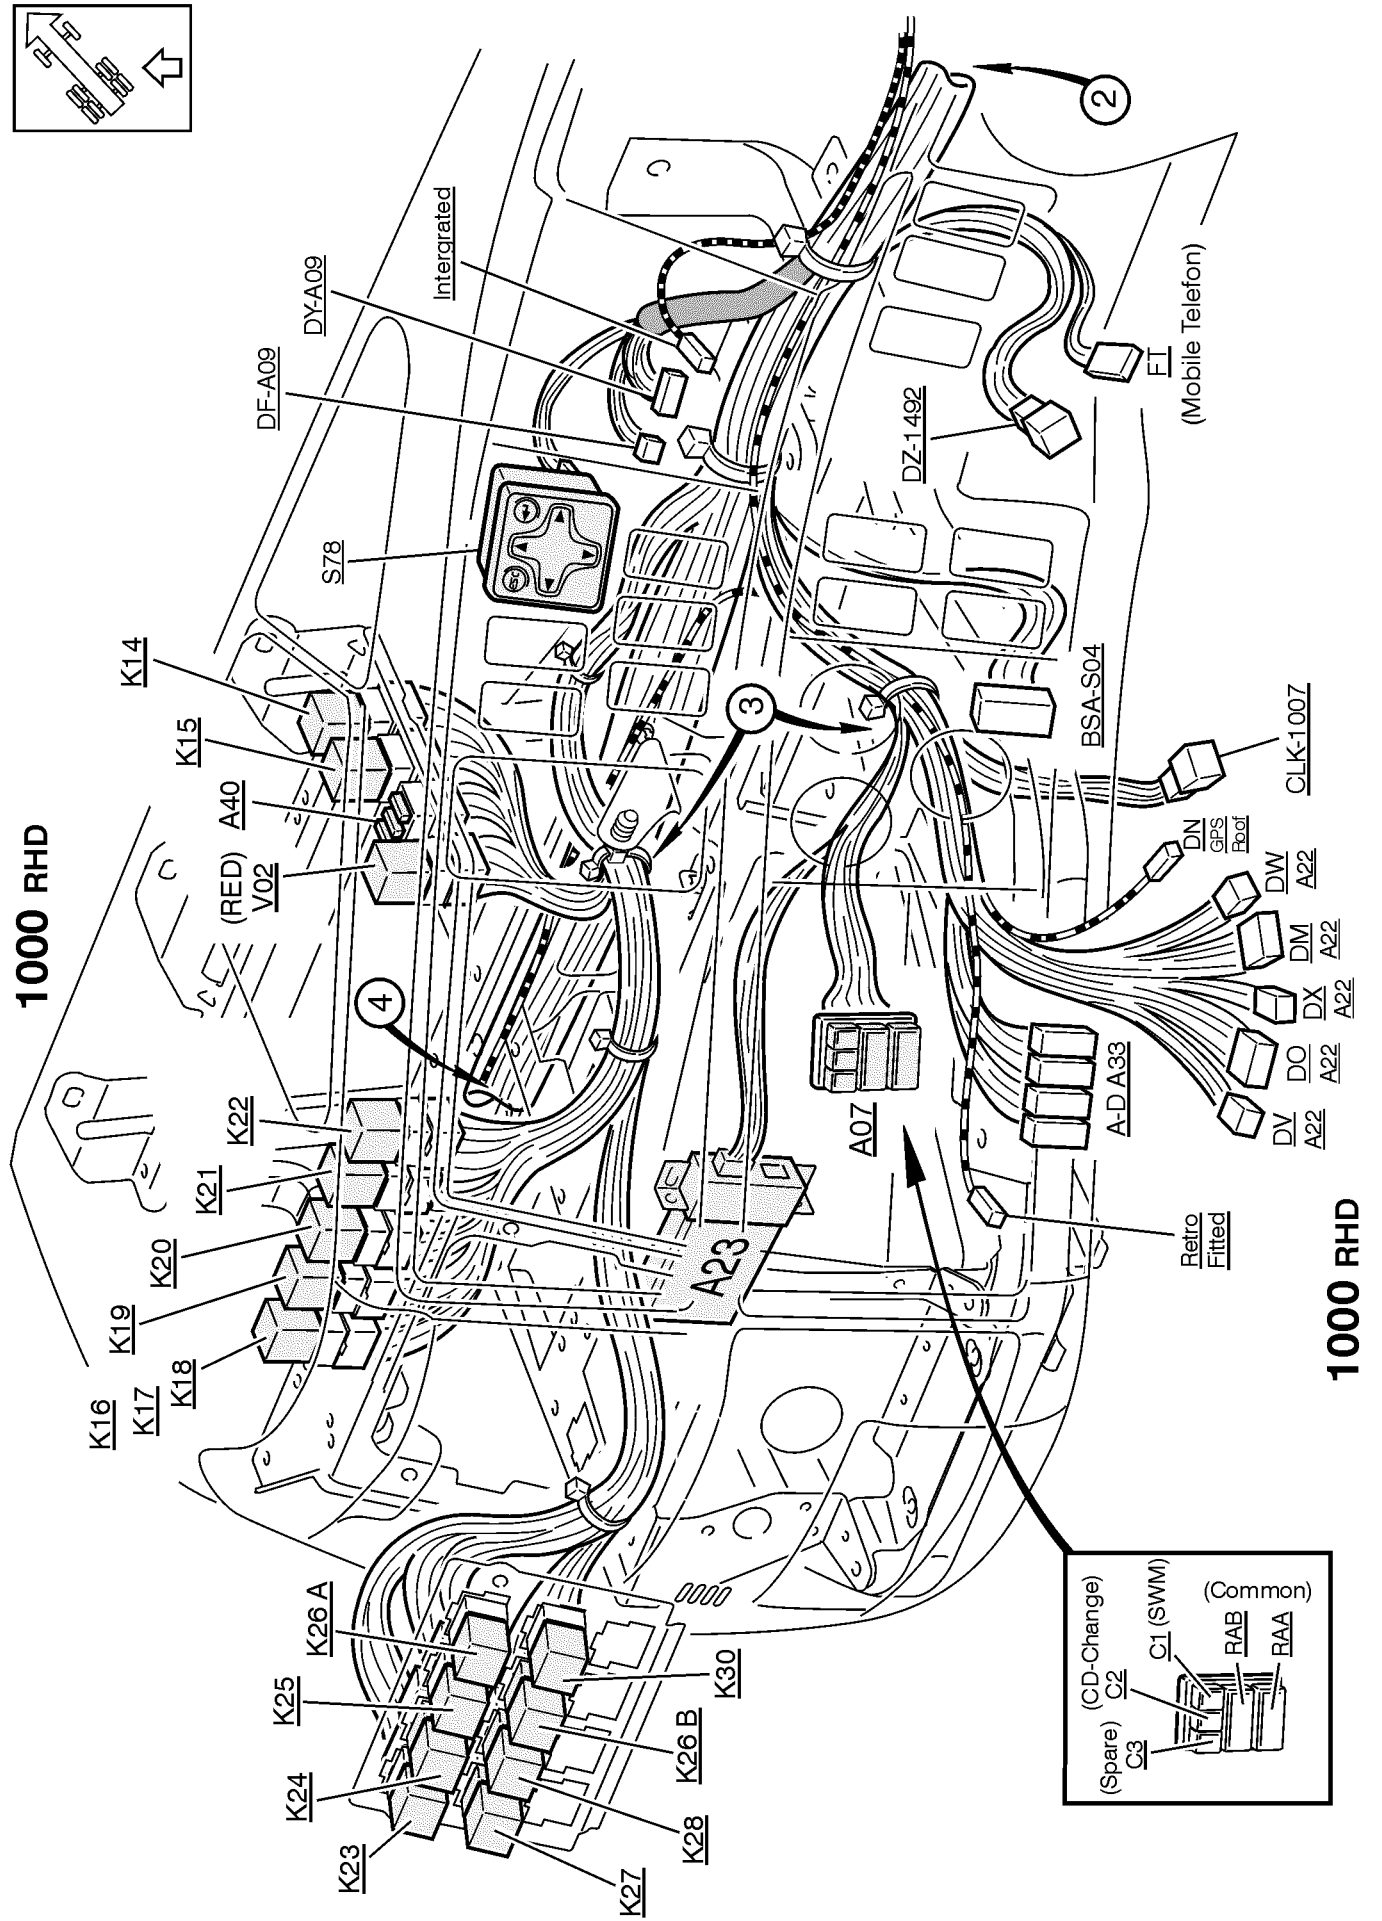


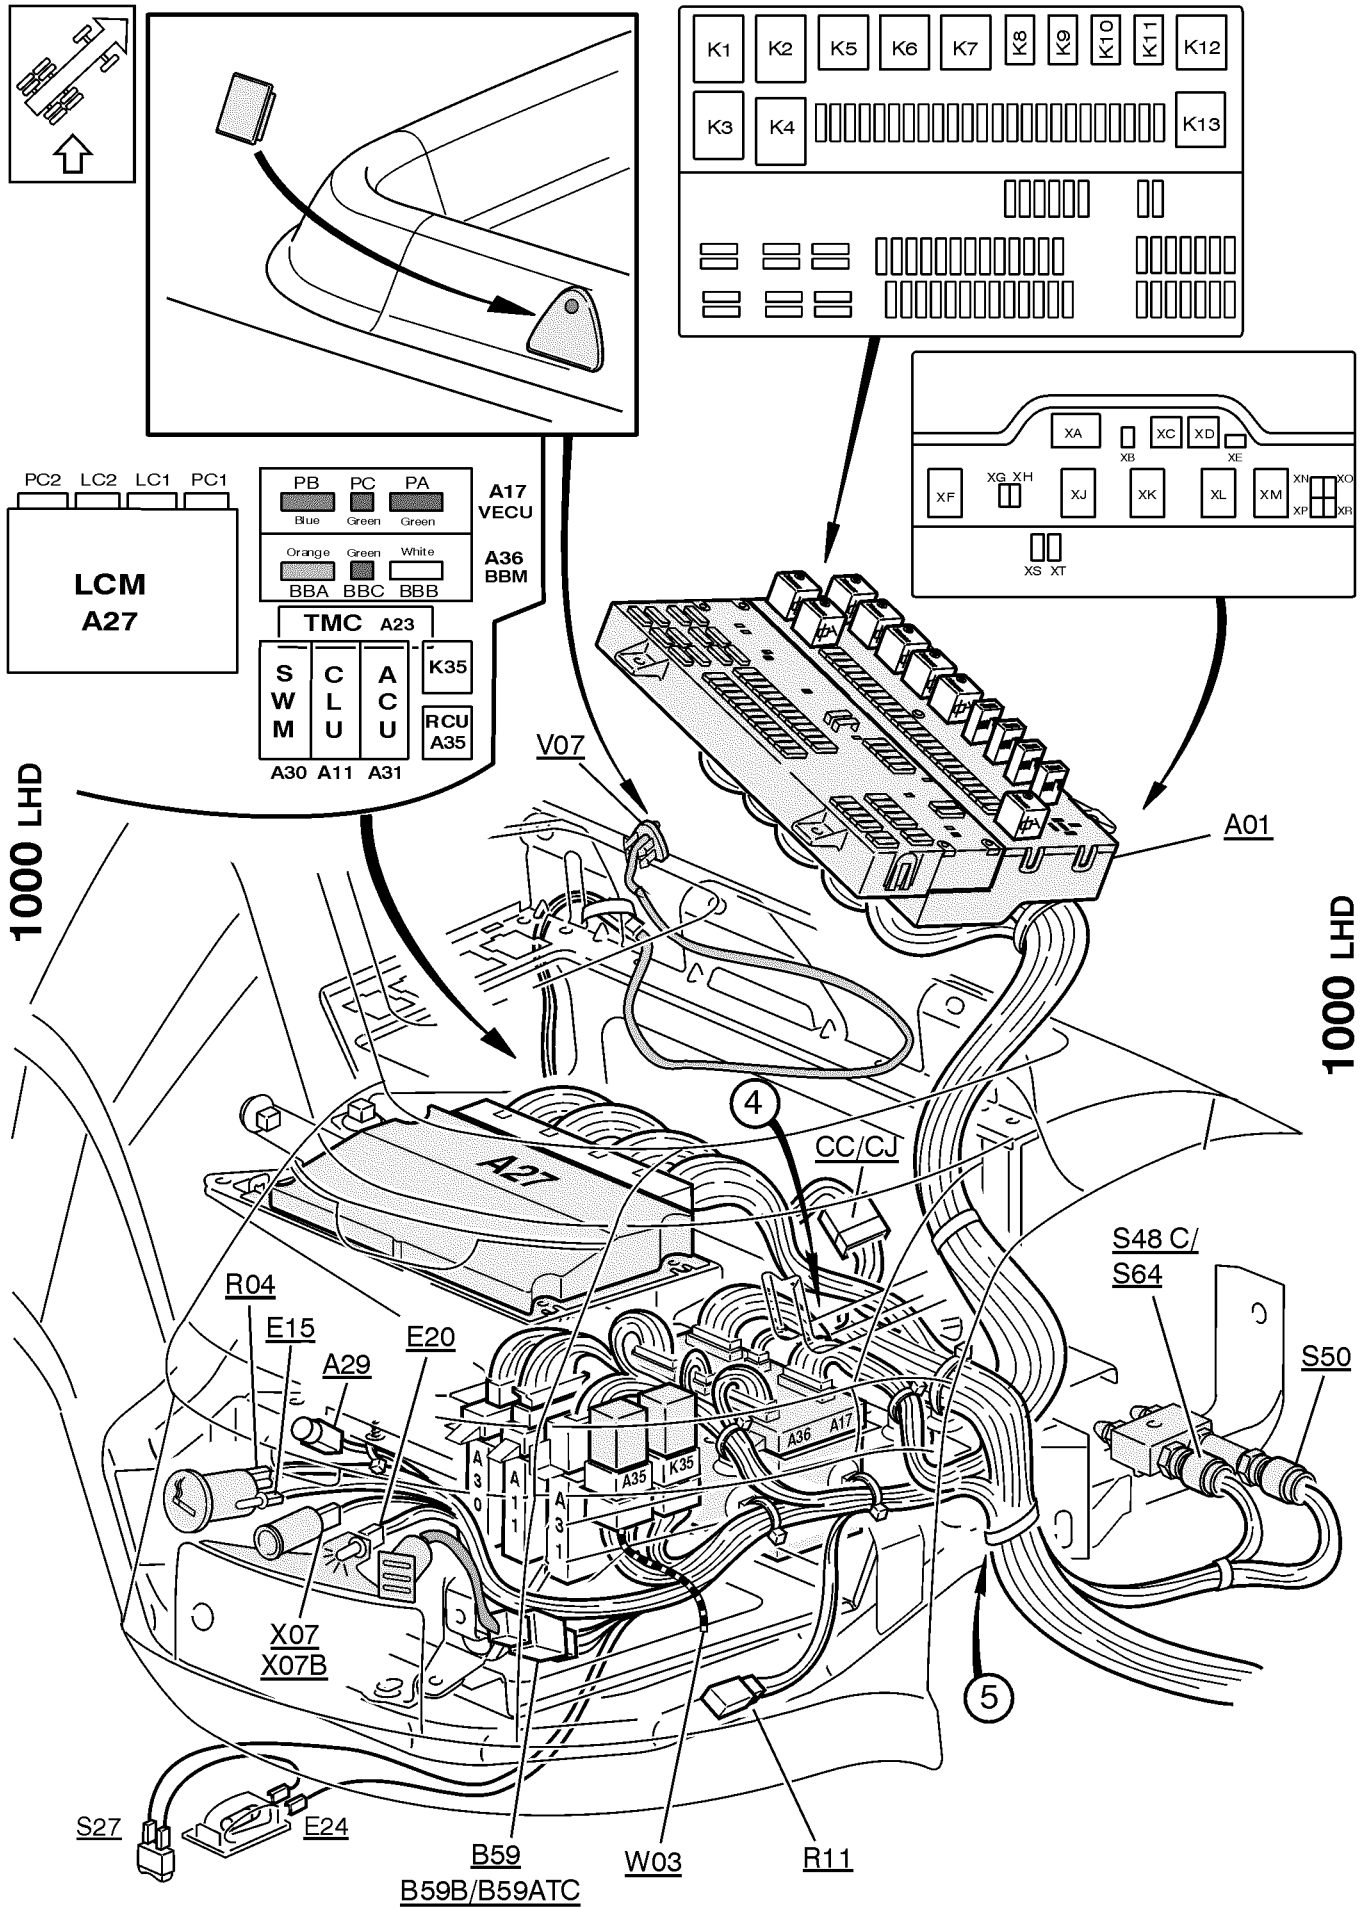


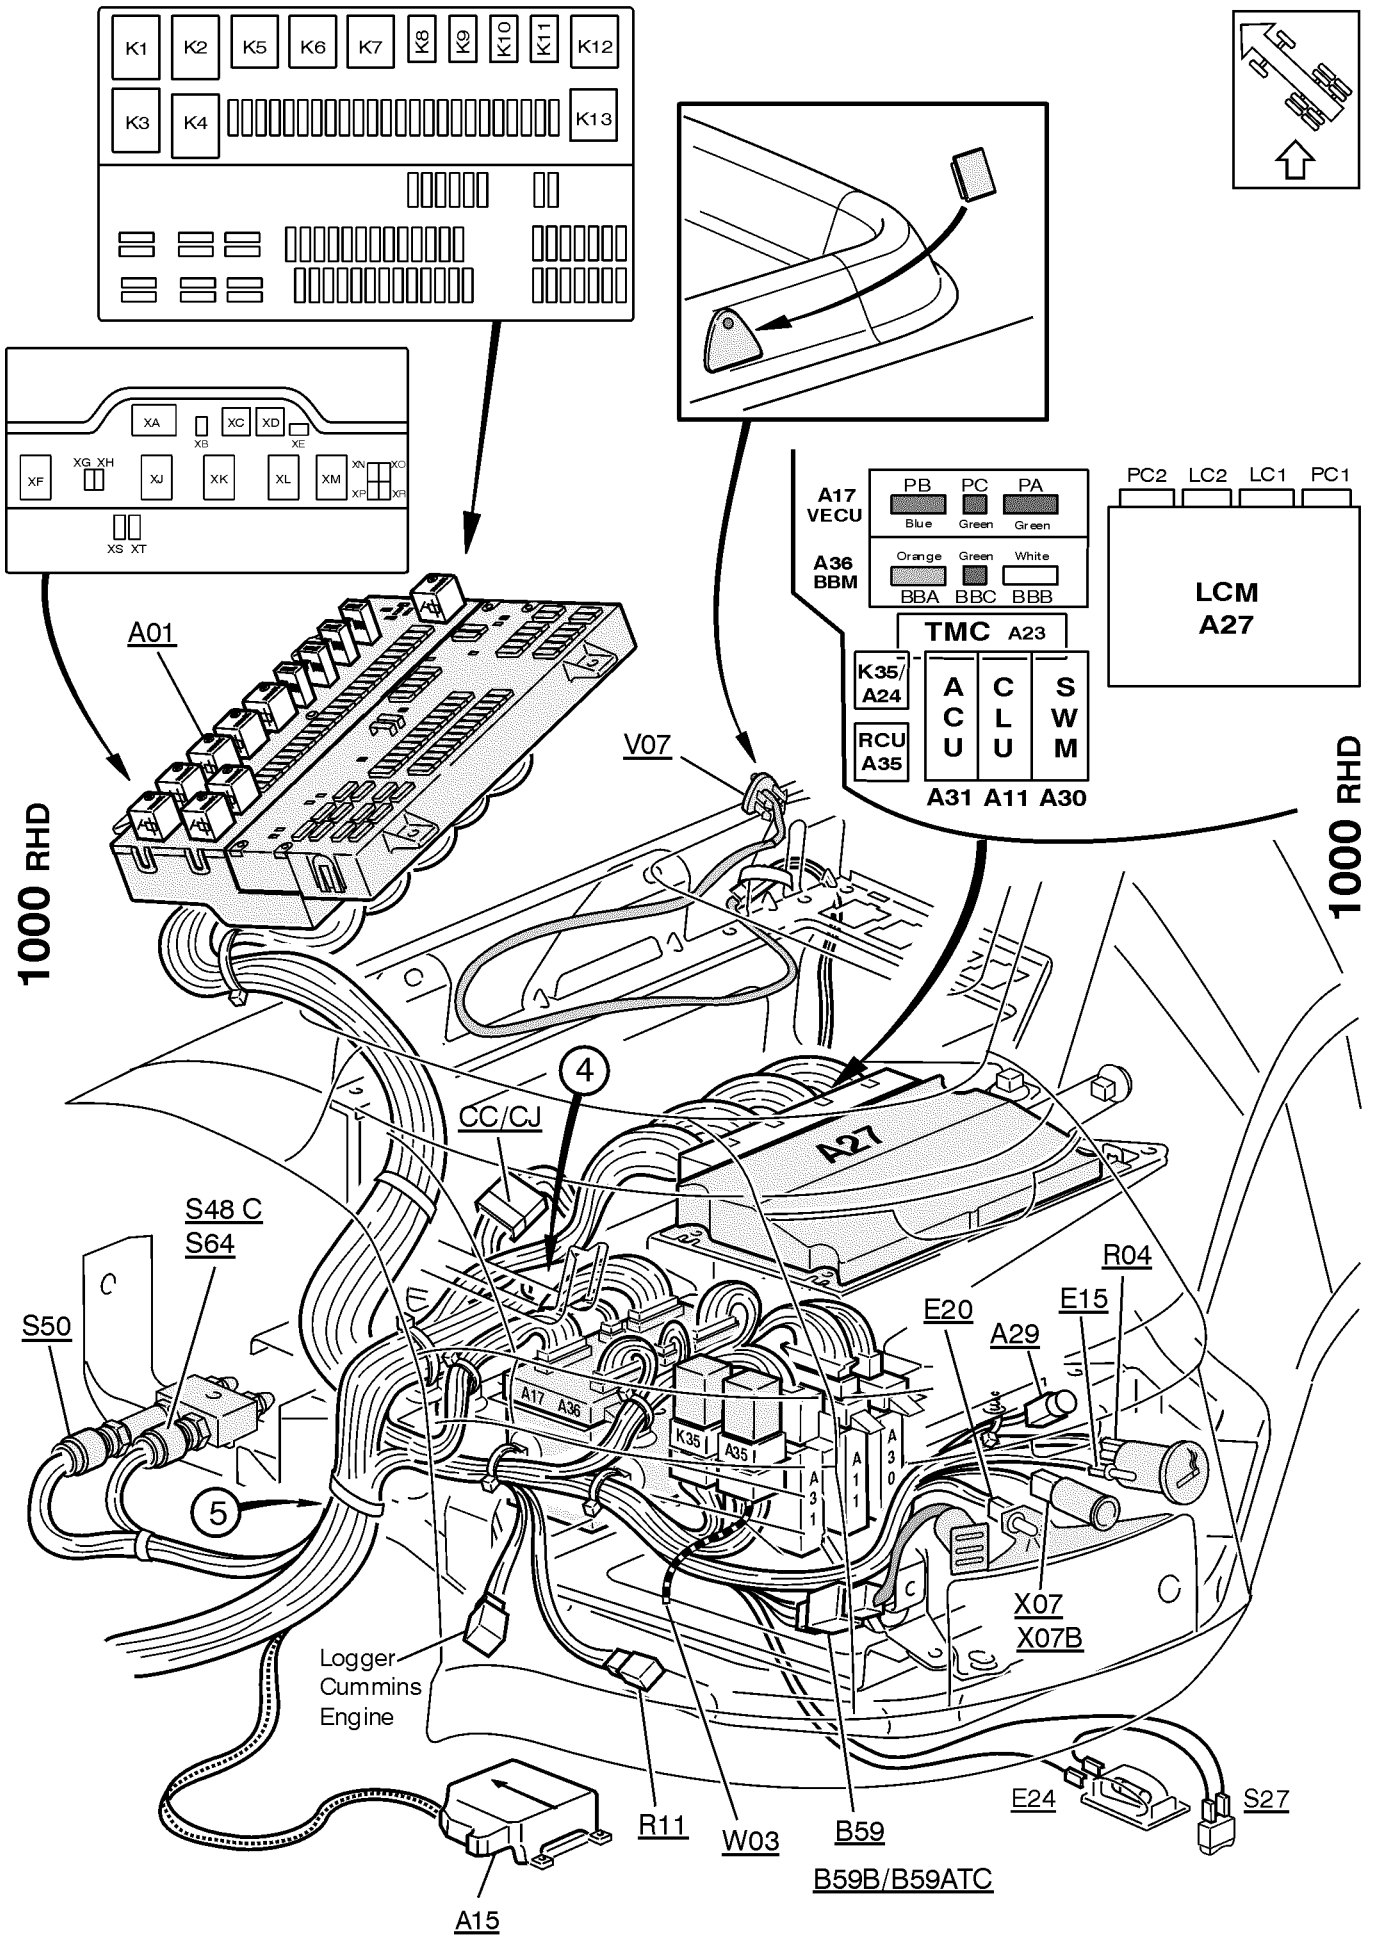



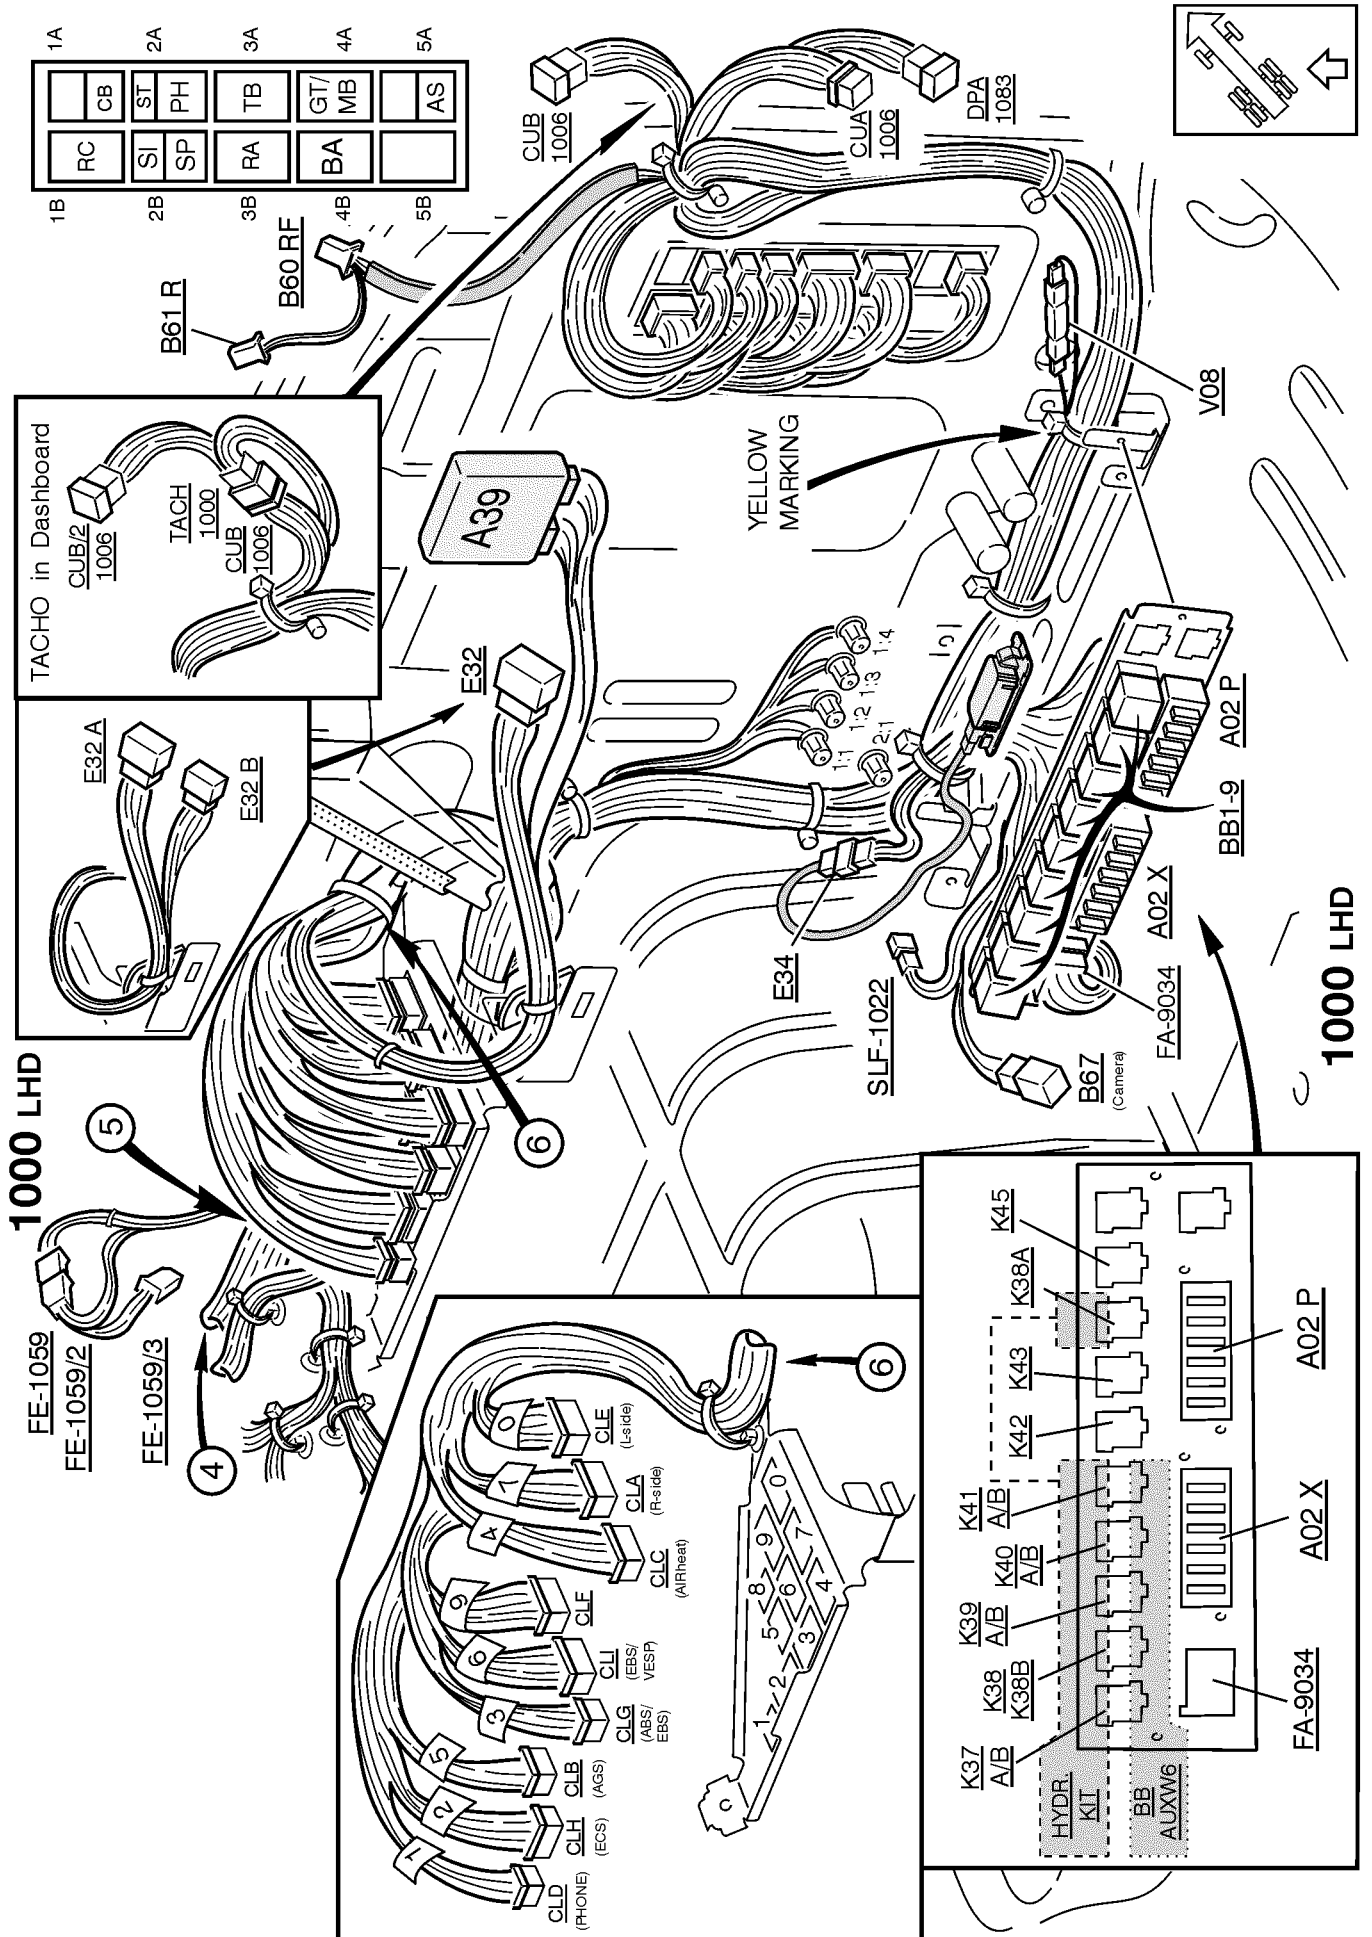


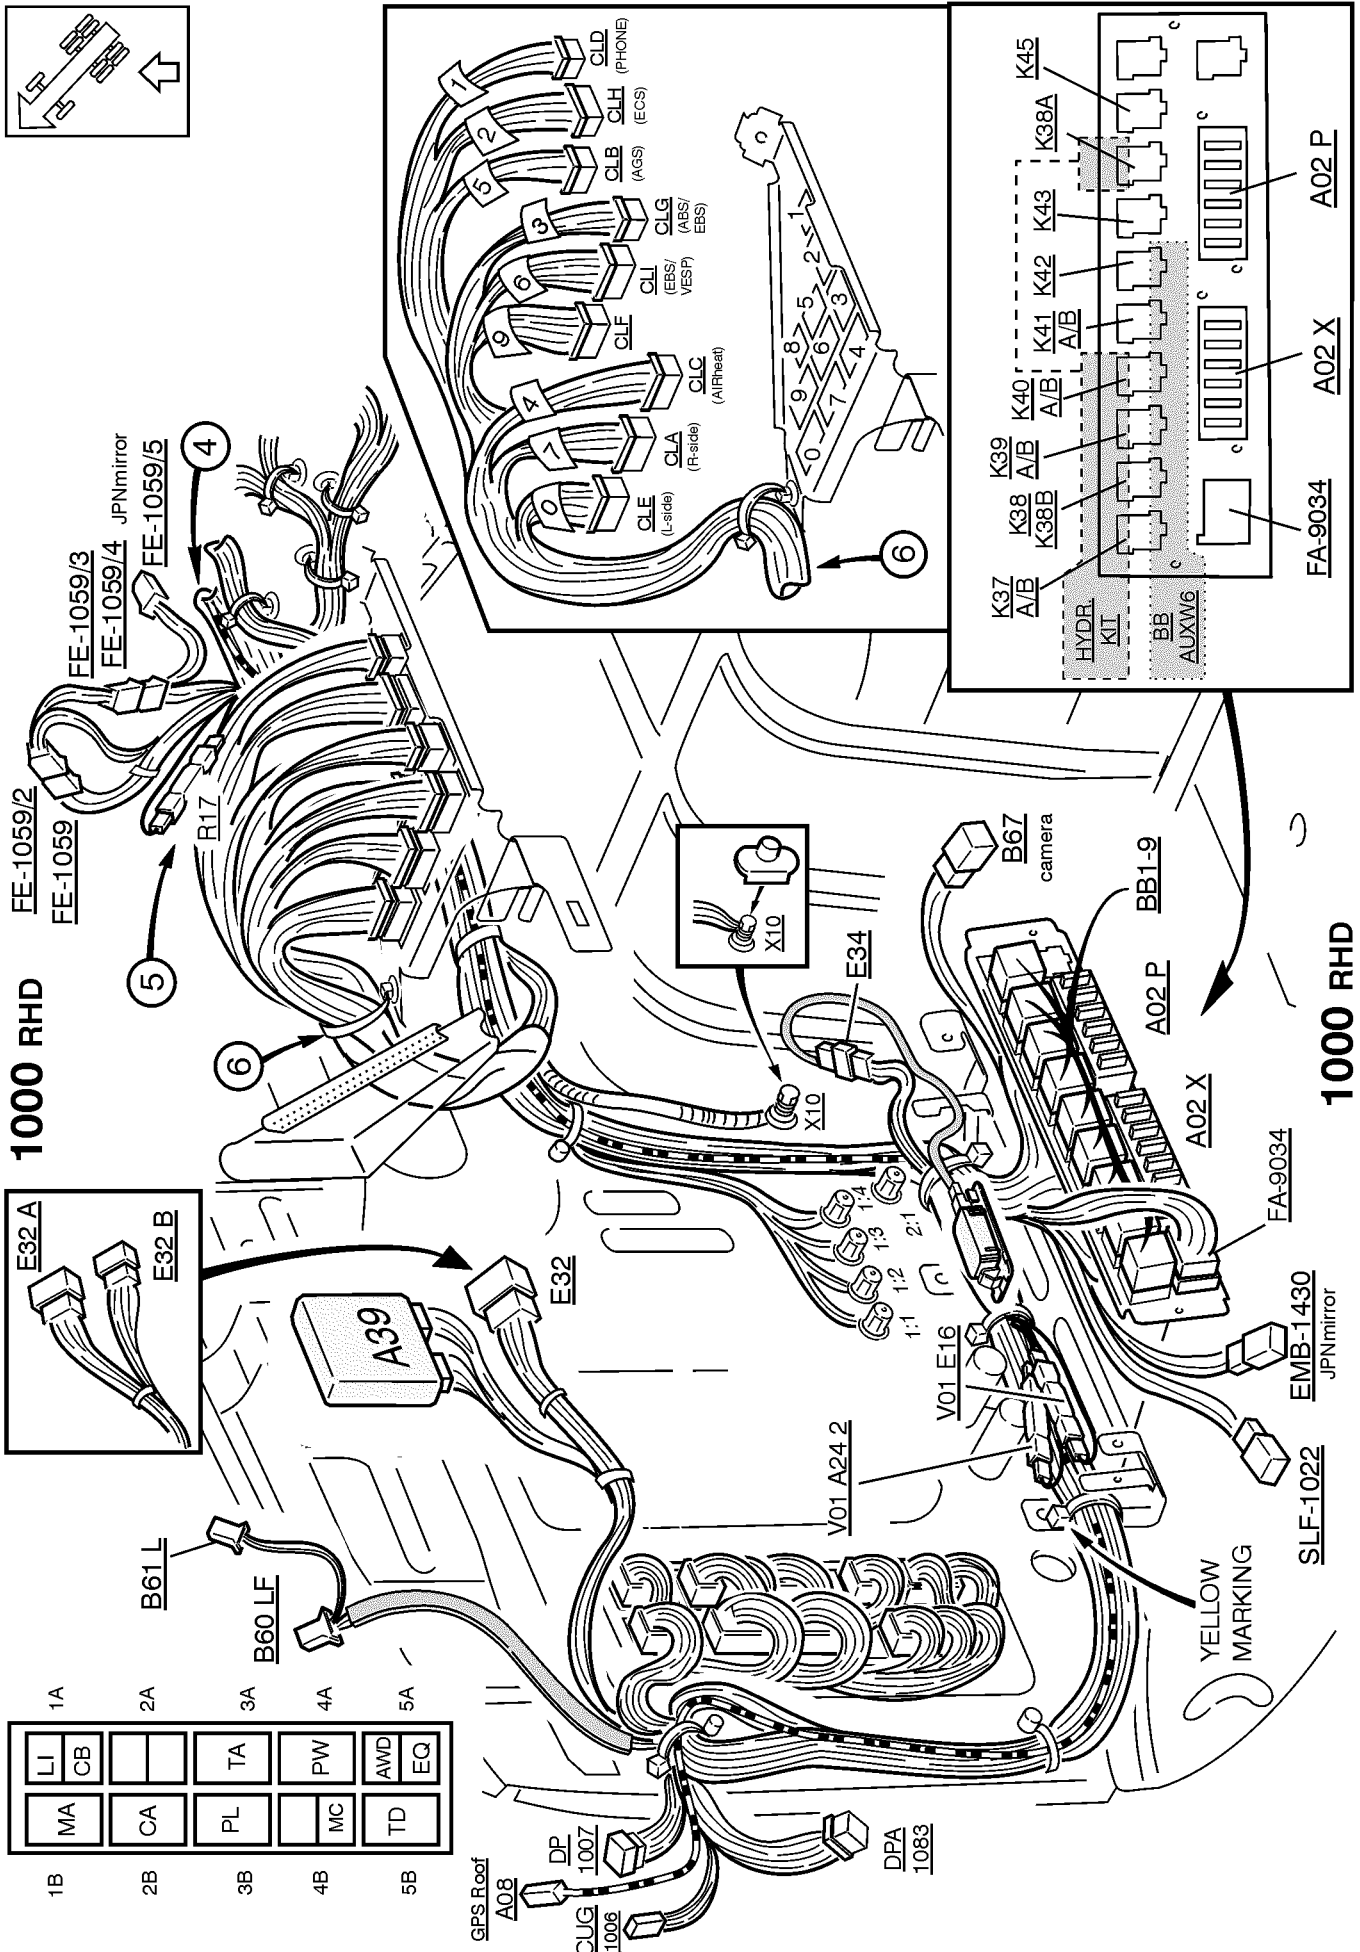


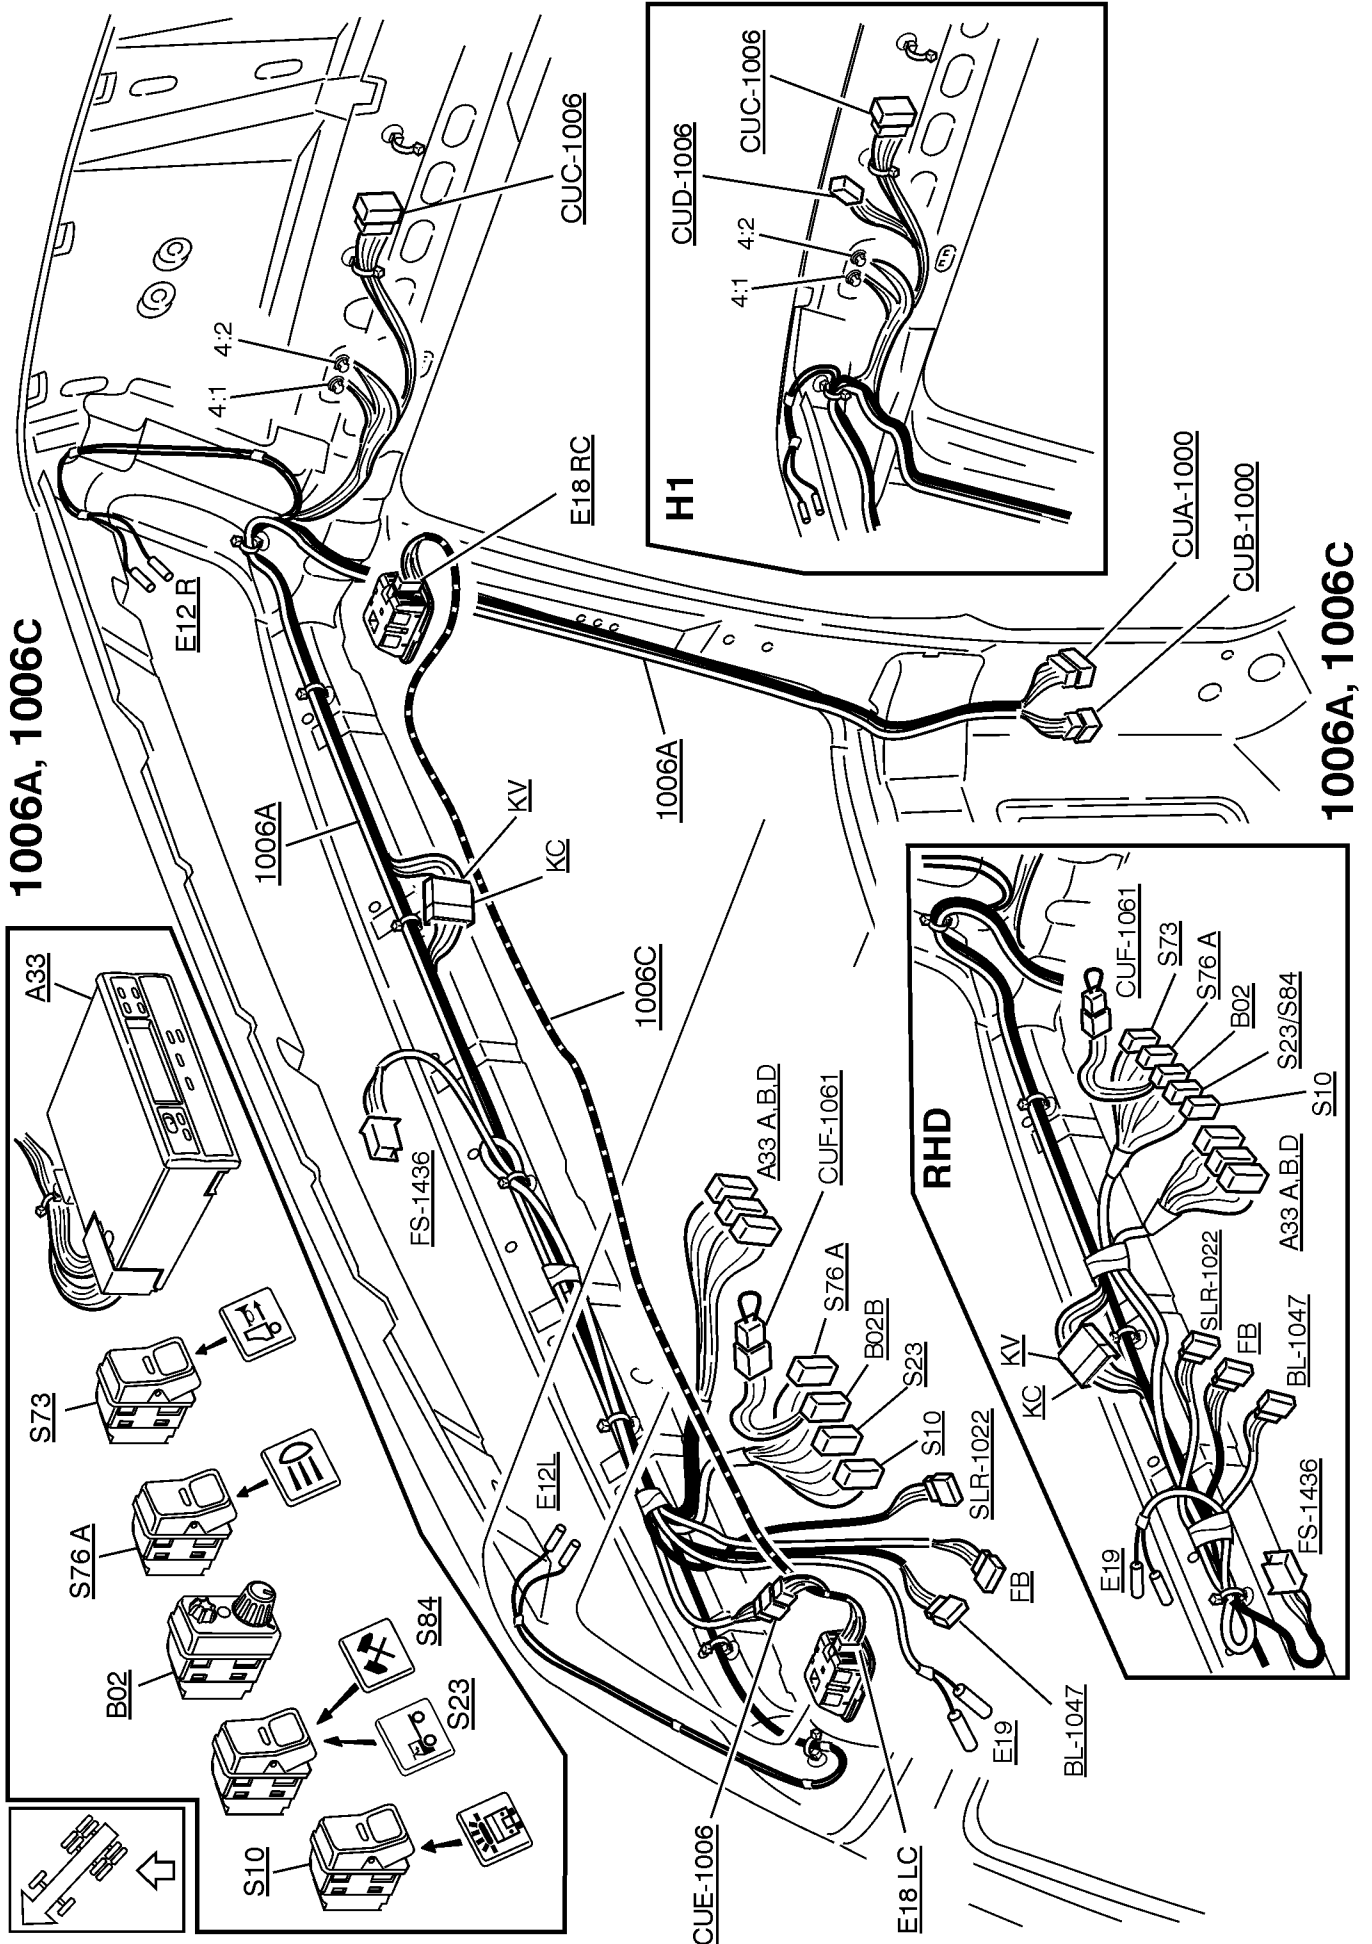





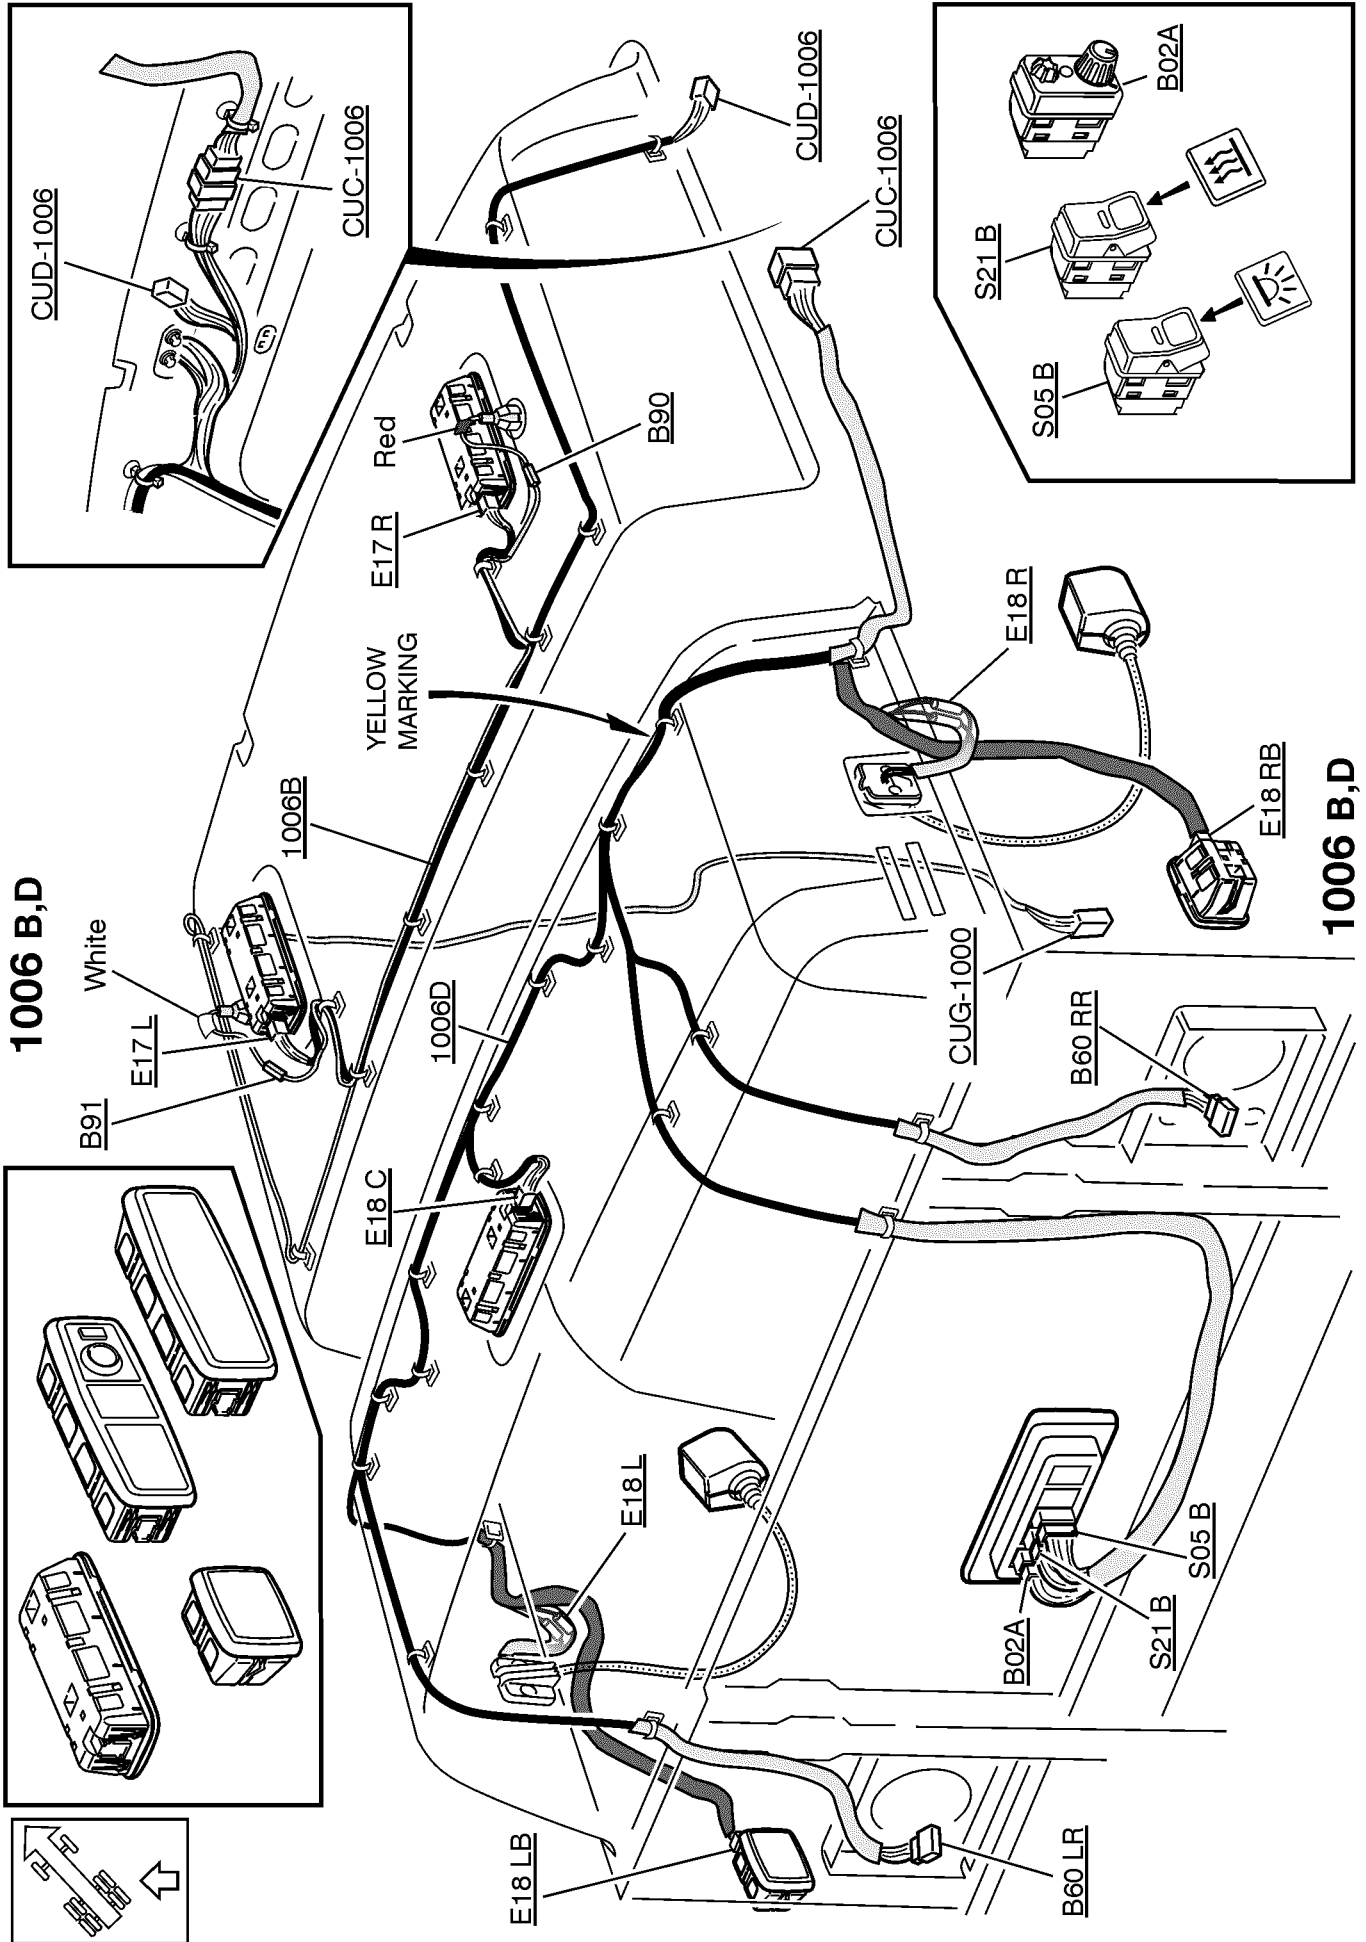


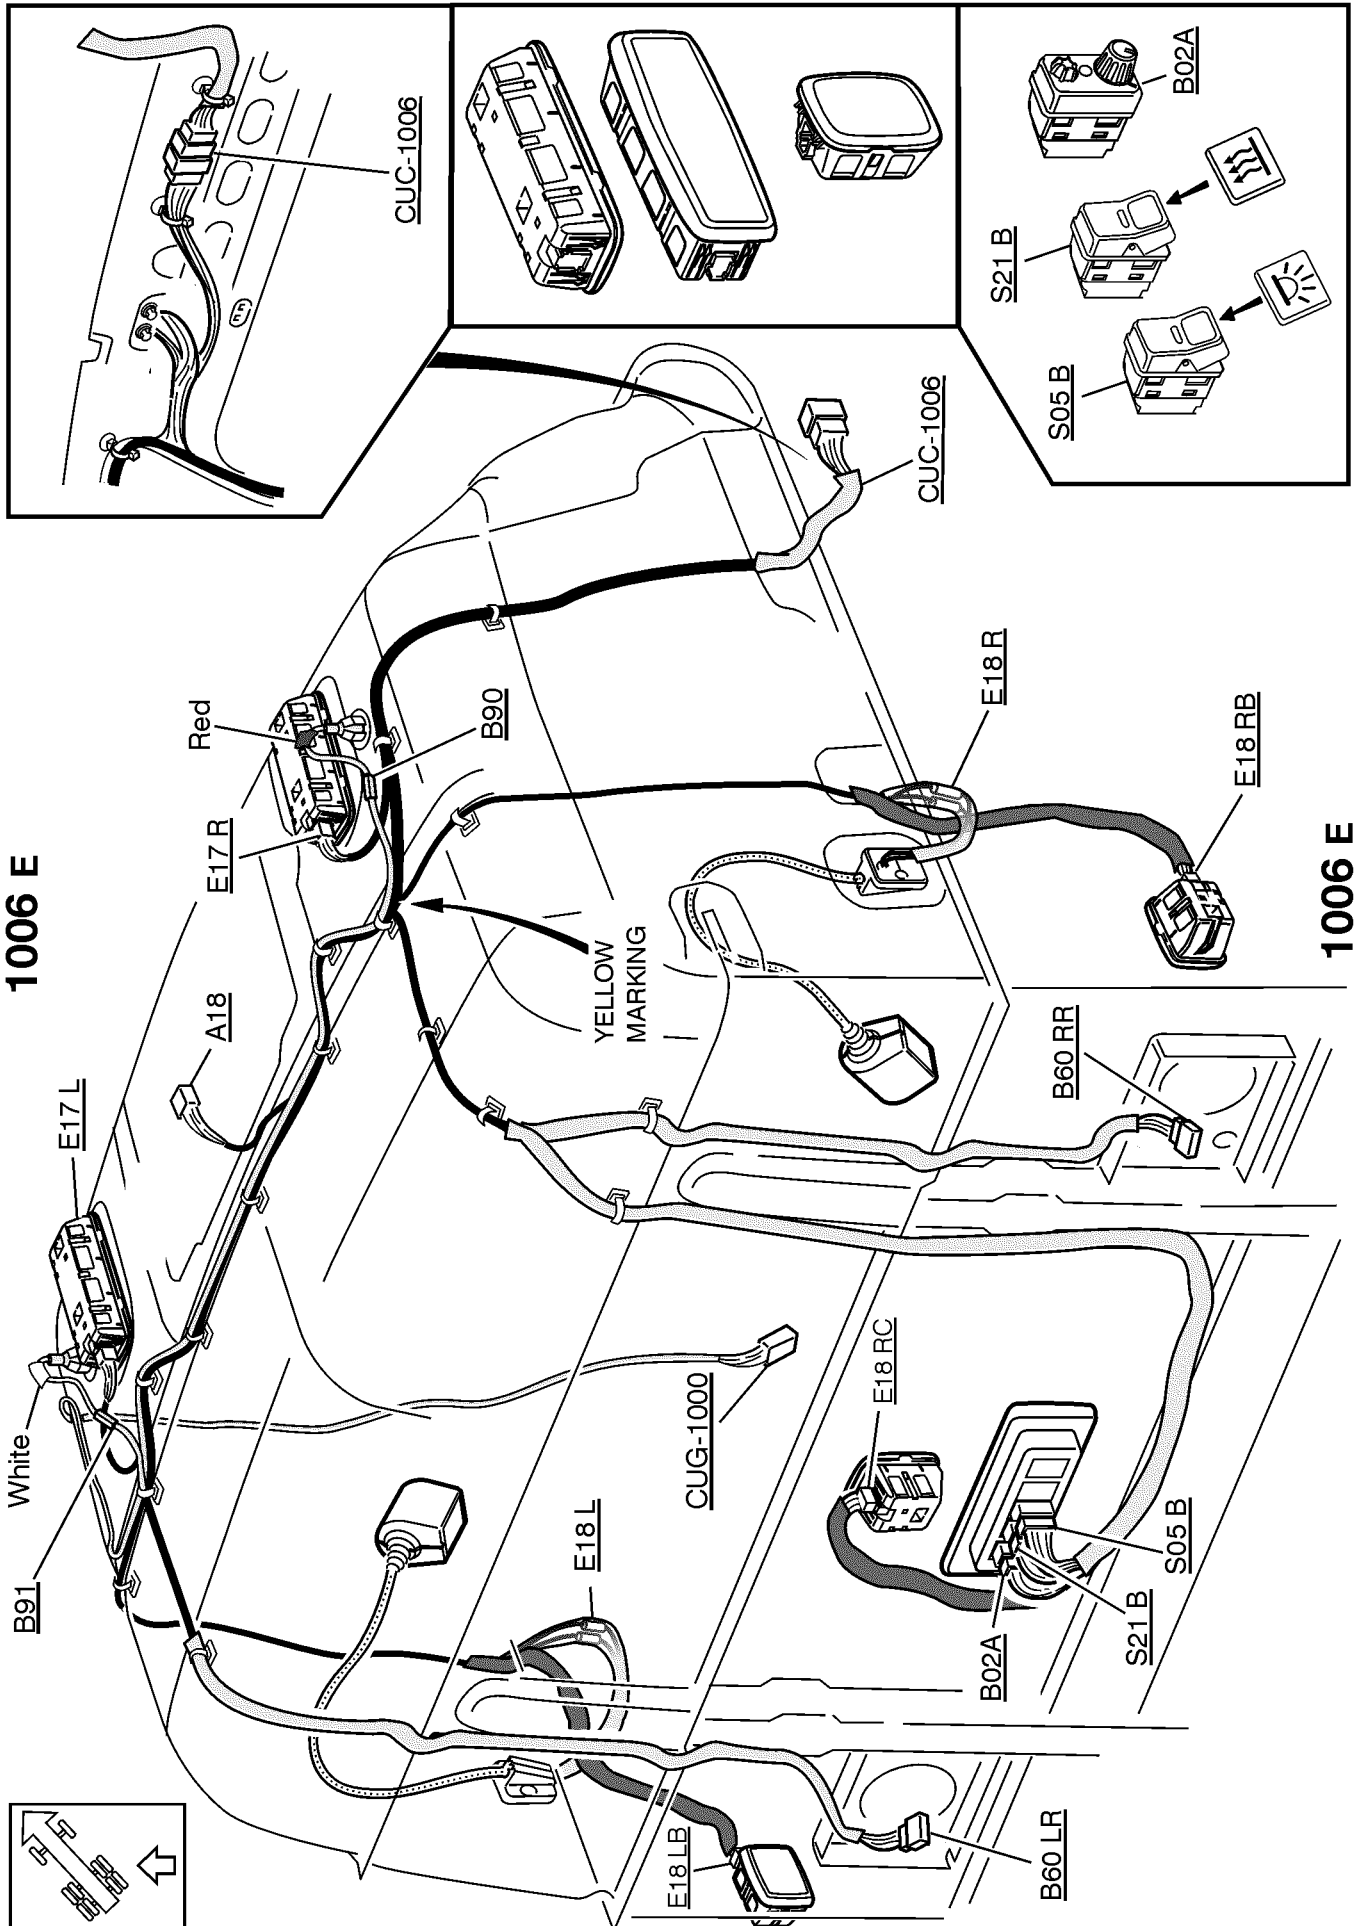

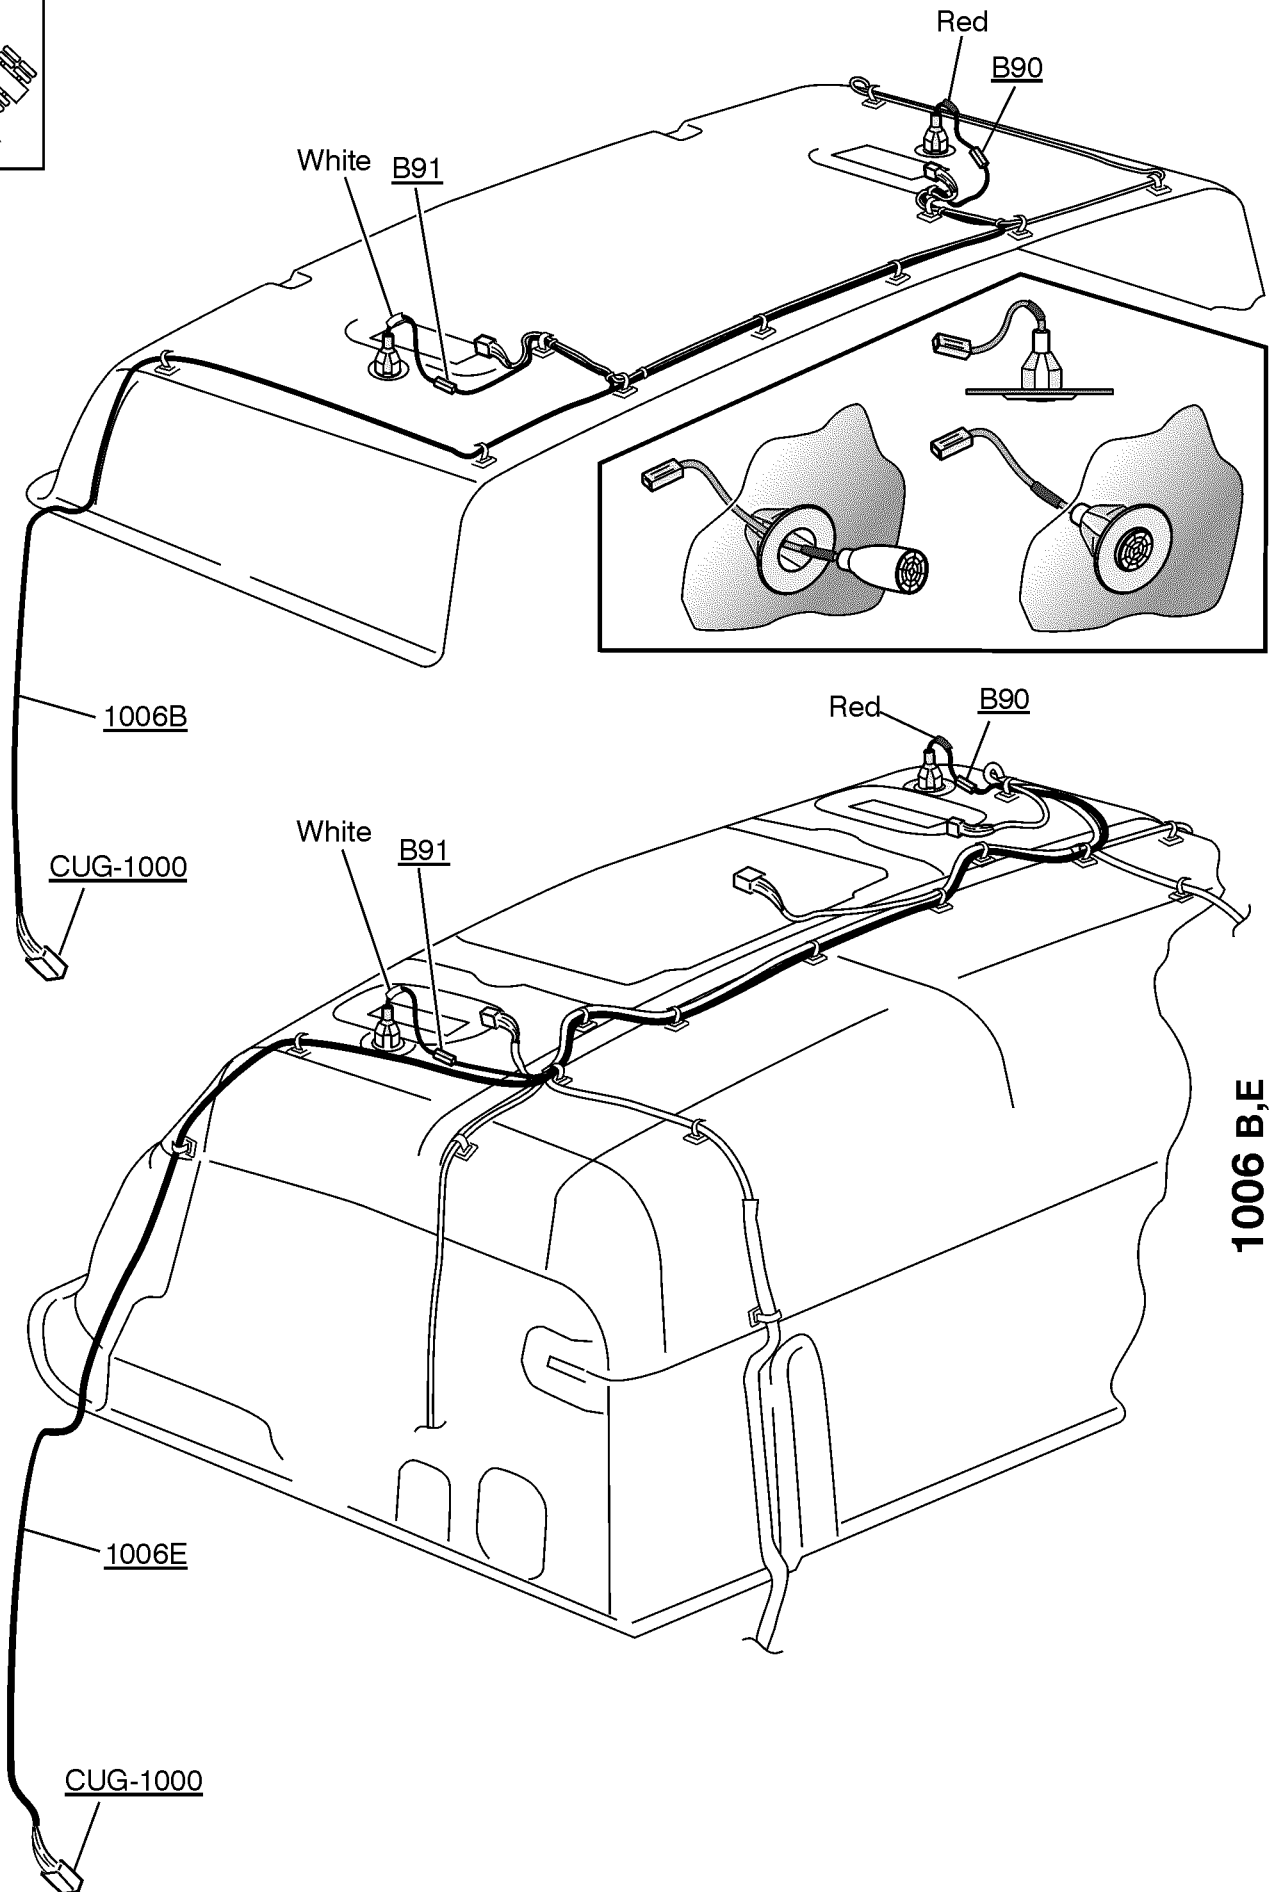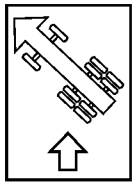

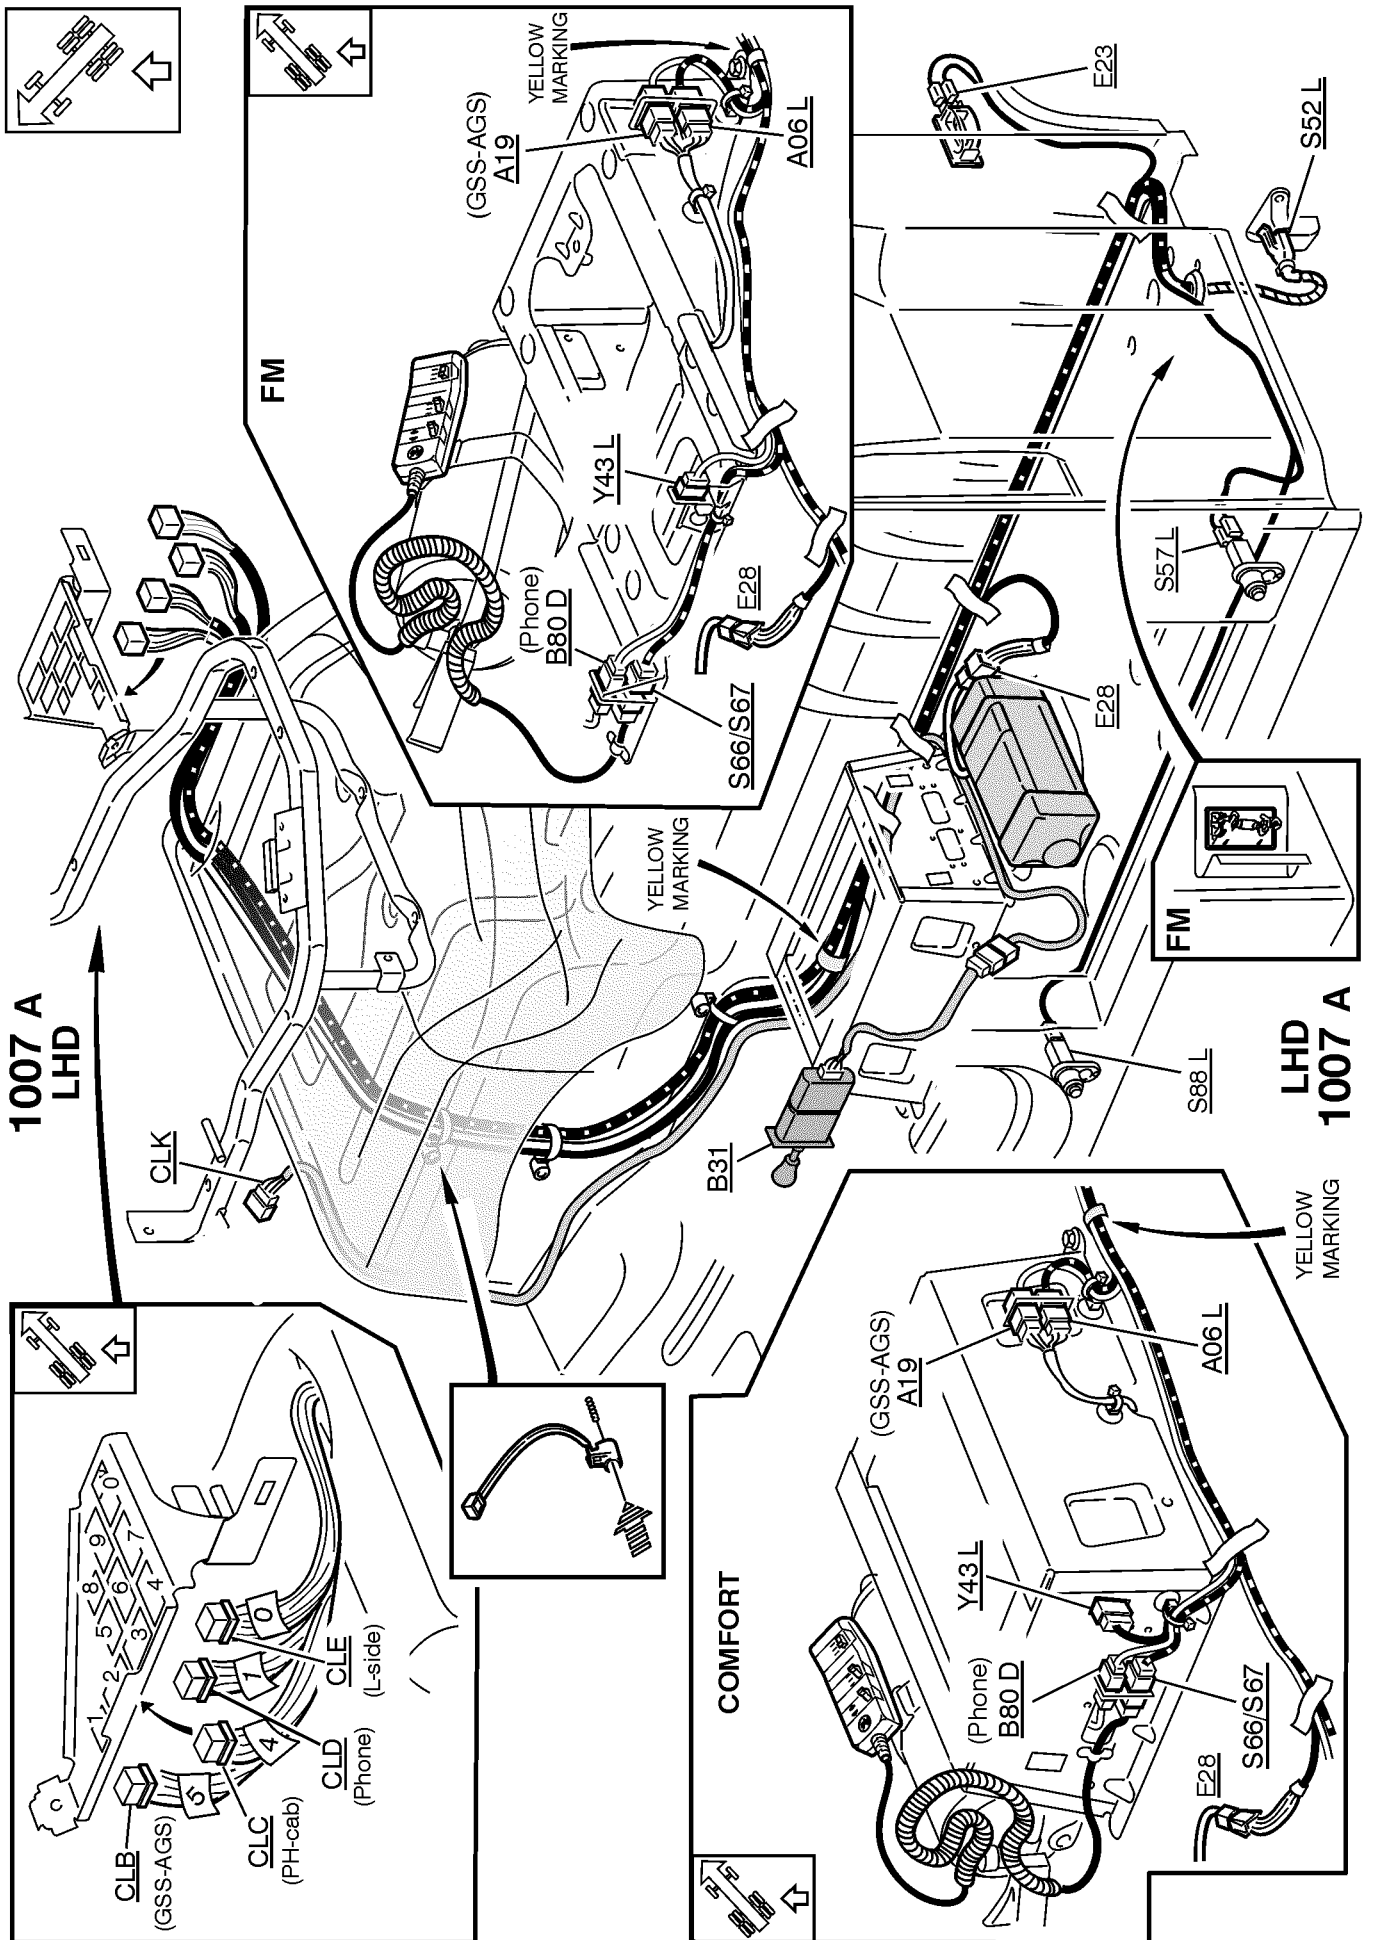


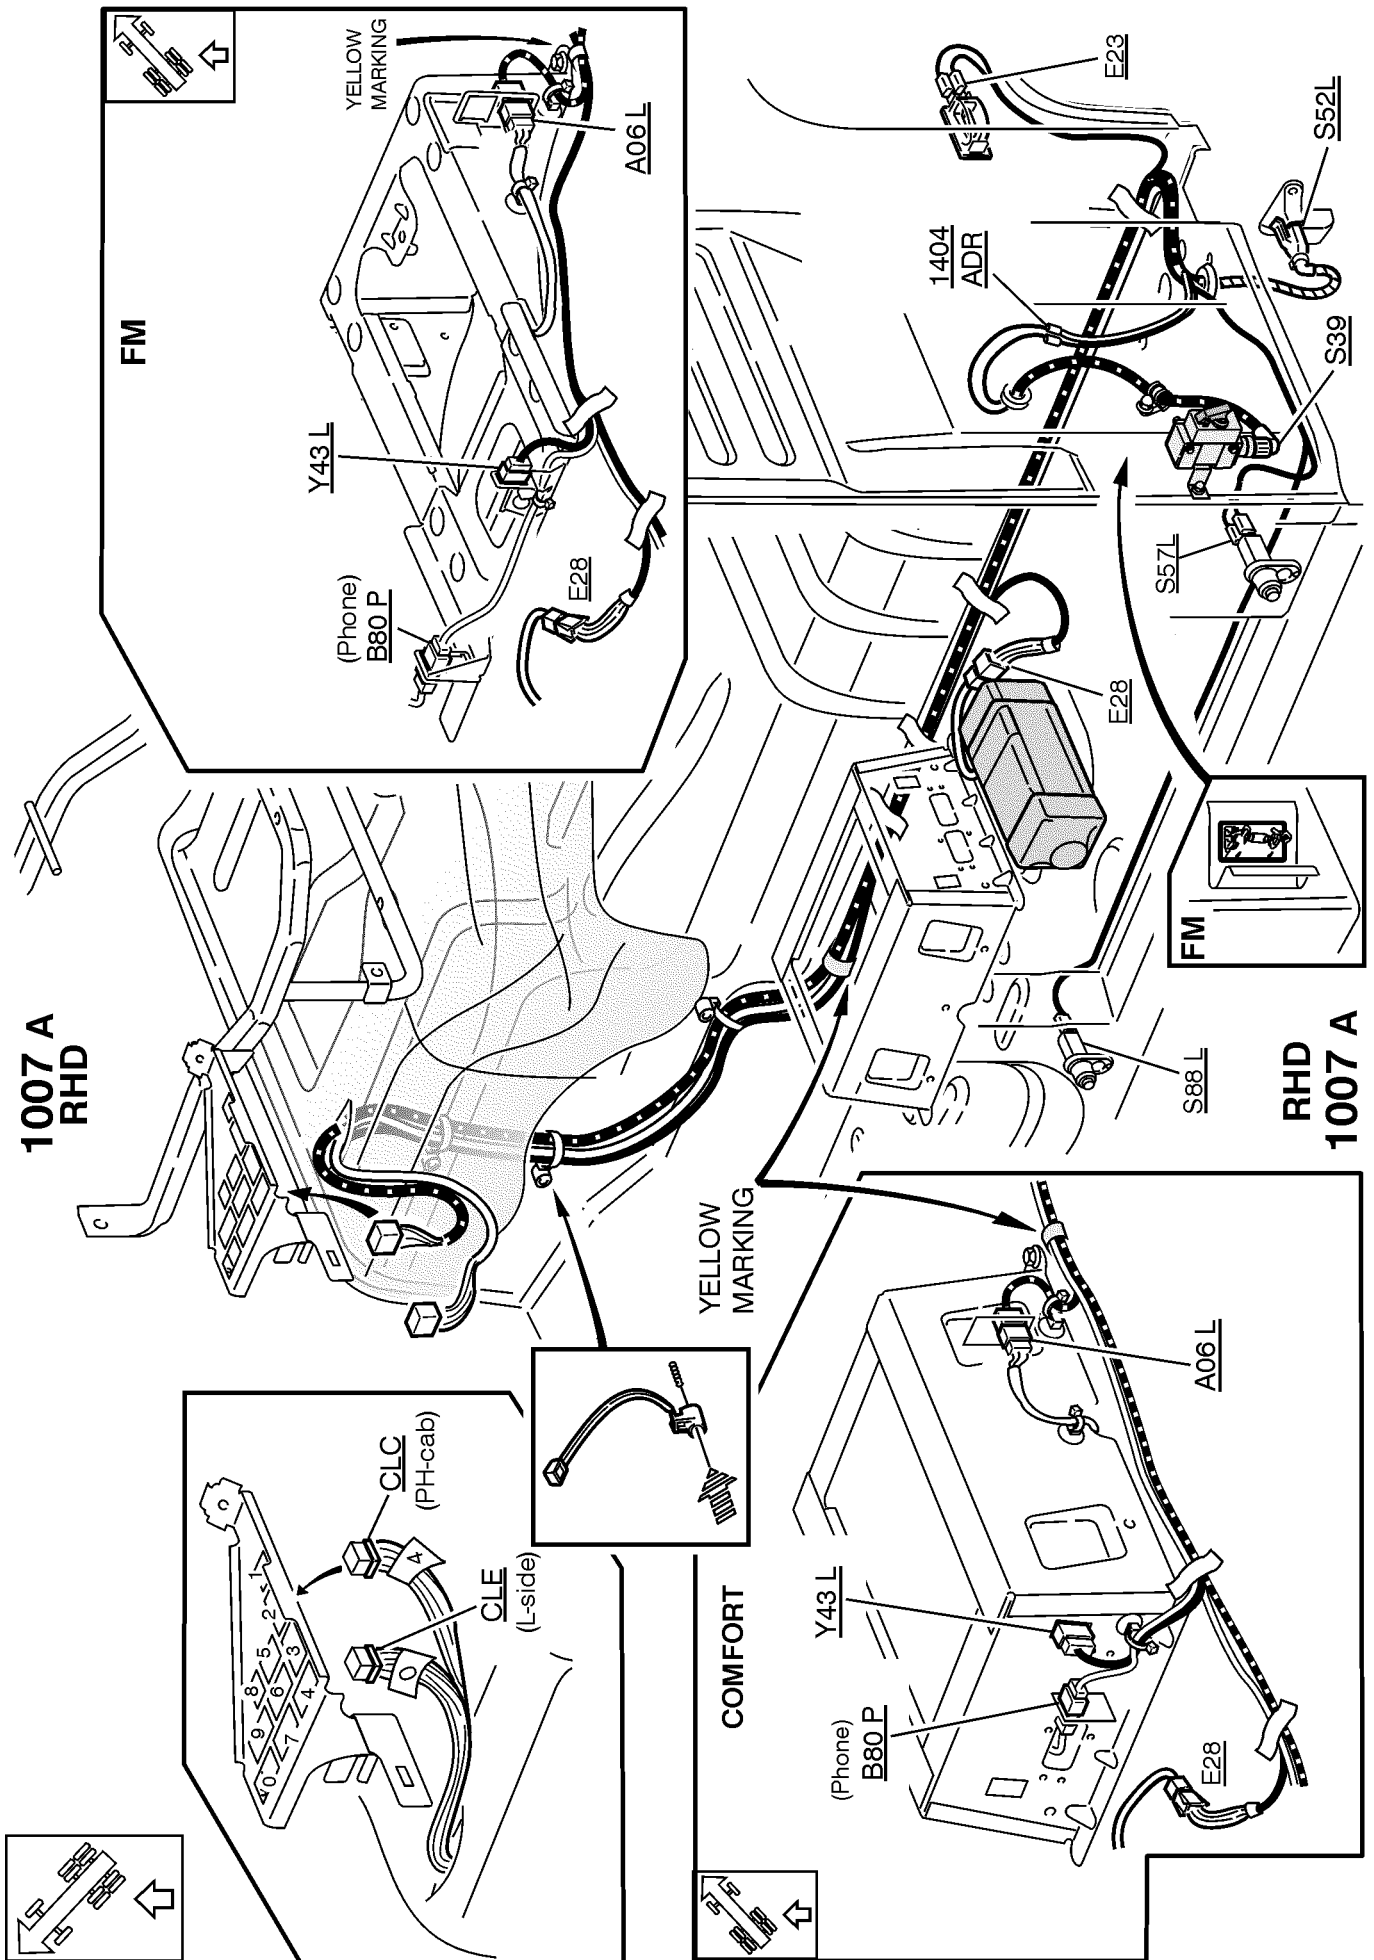

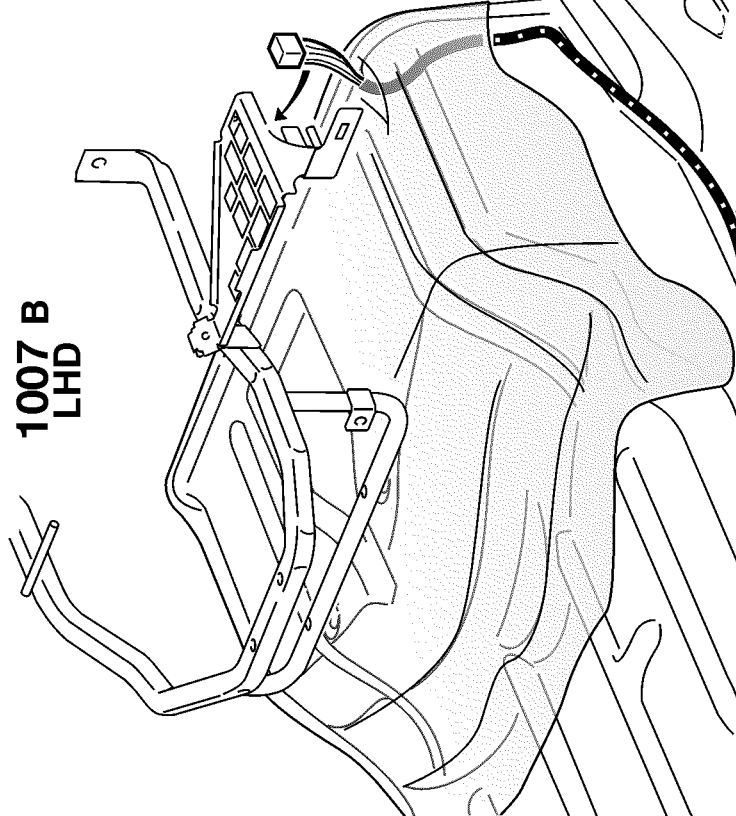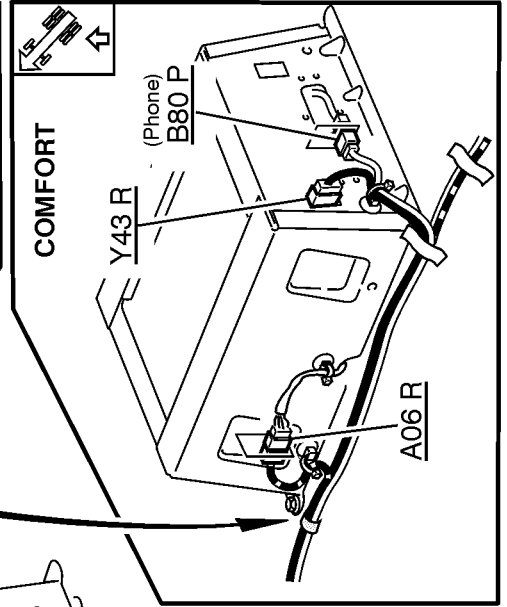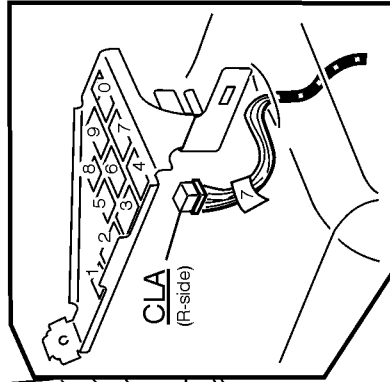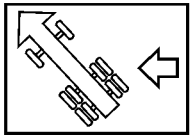



YELLOW MARKING


LHD 1007 B

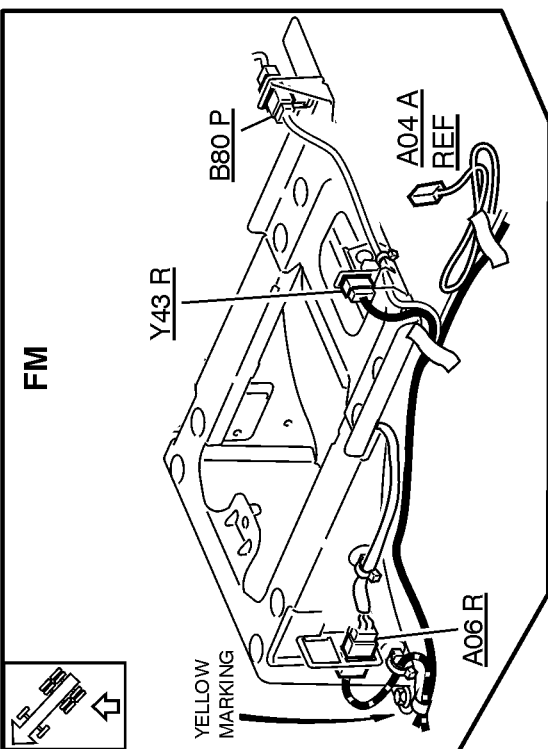


YELLOW MARKING


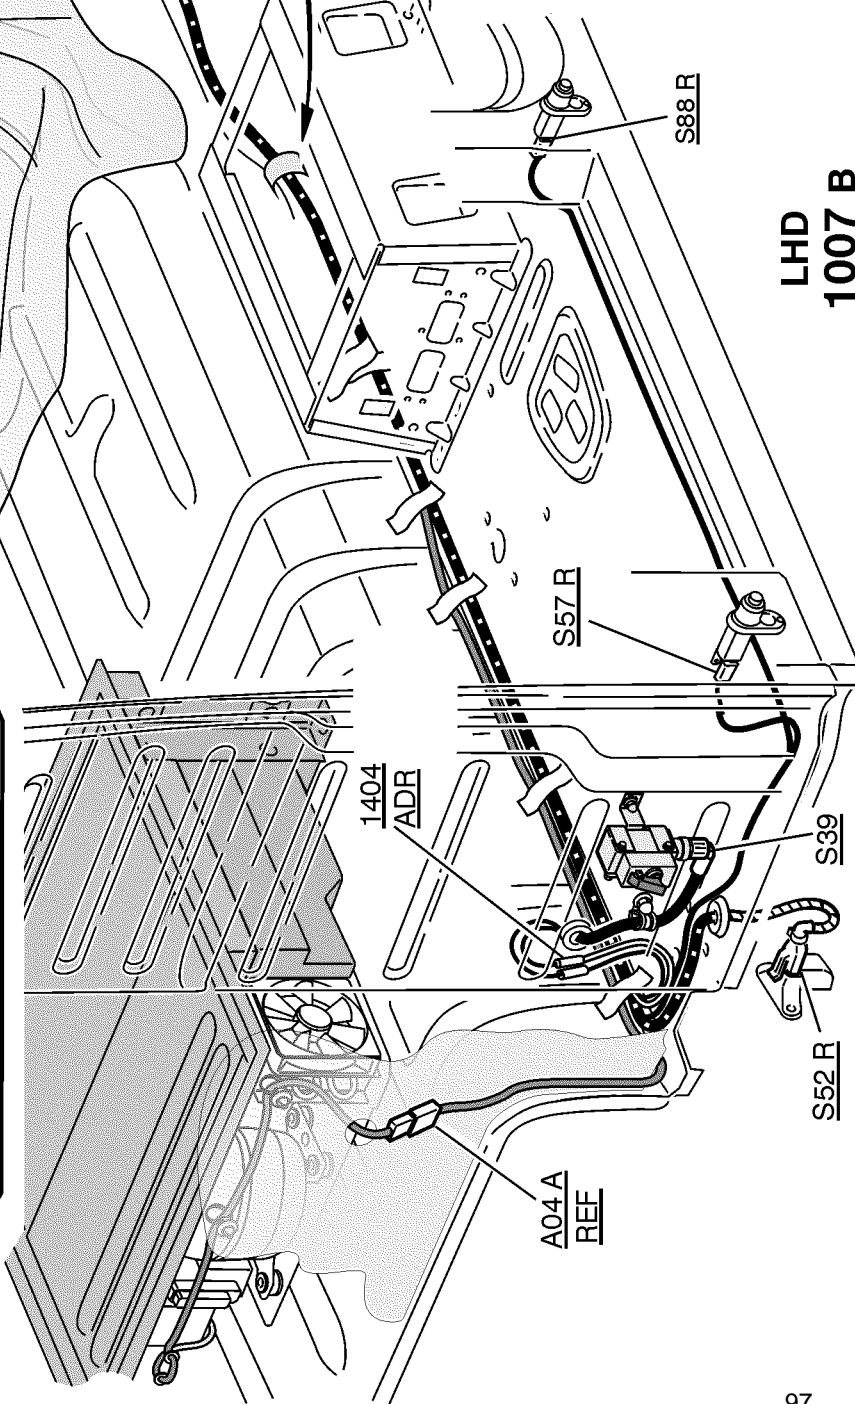


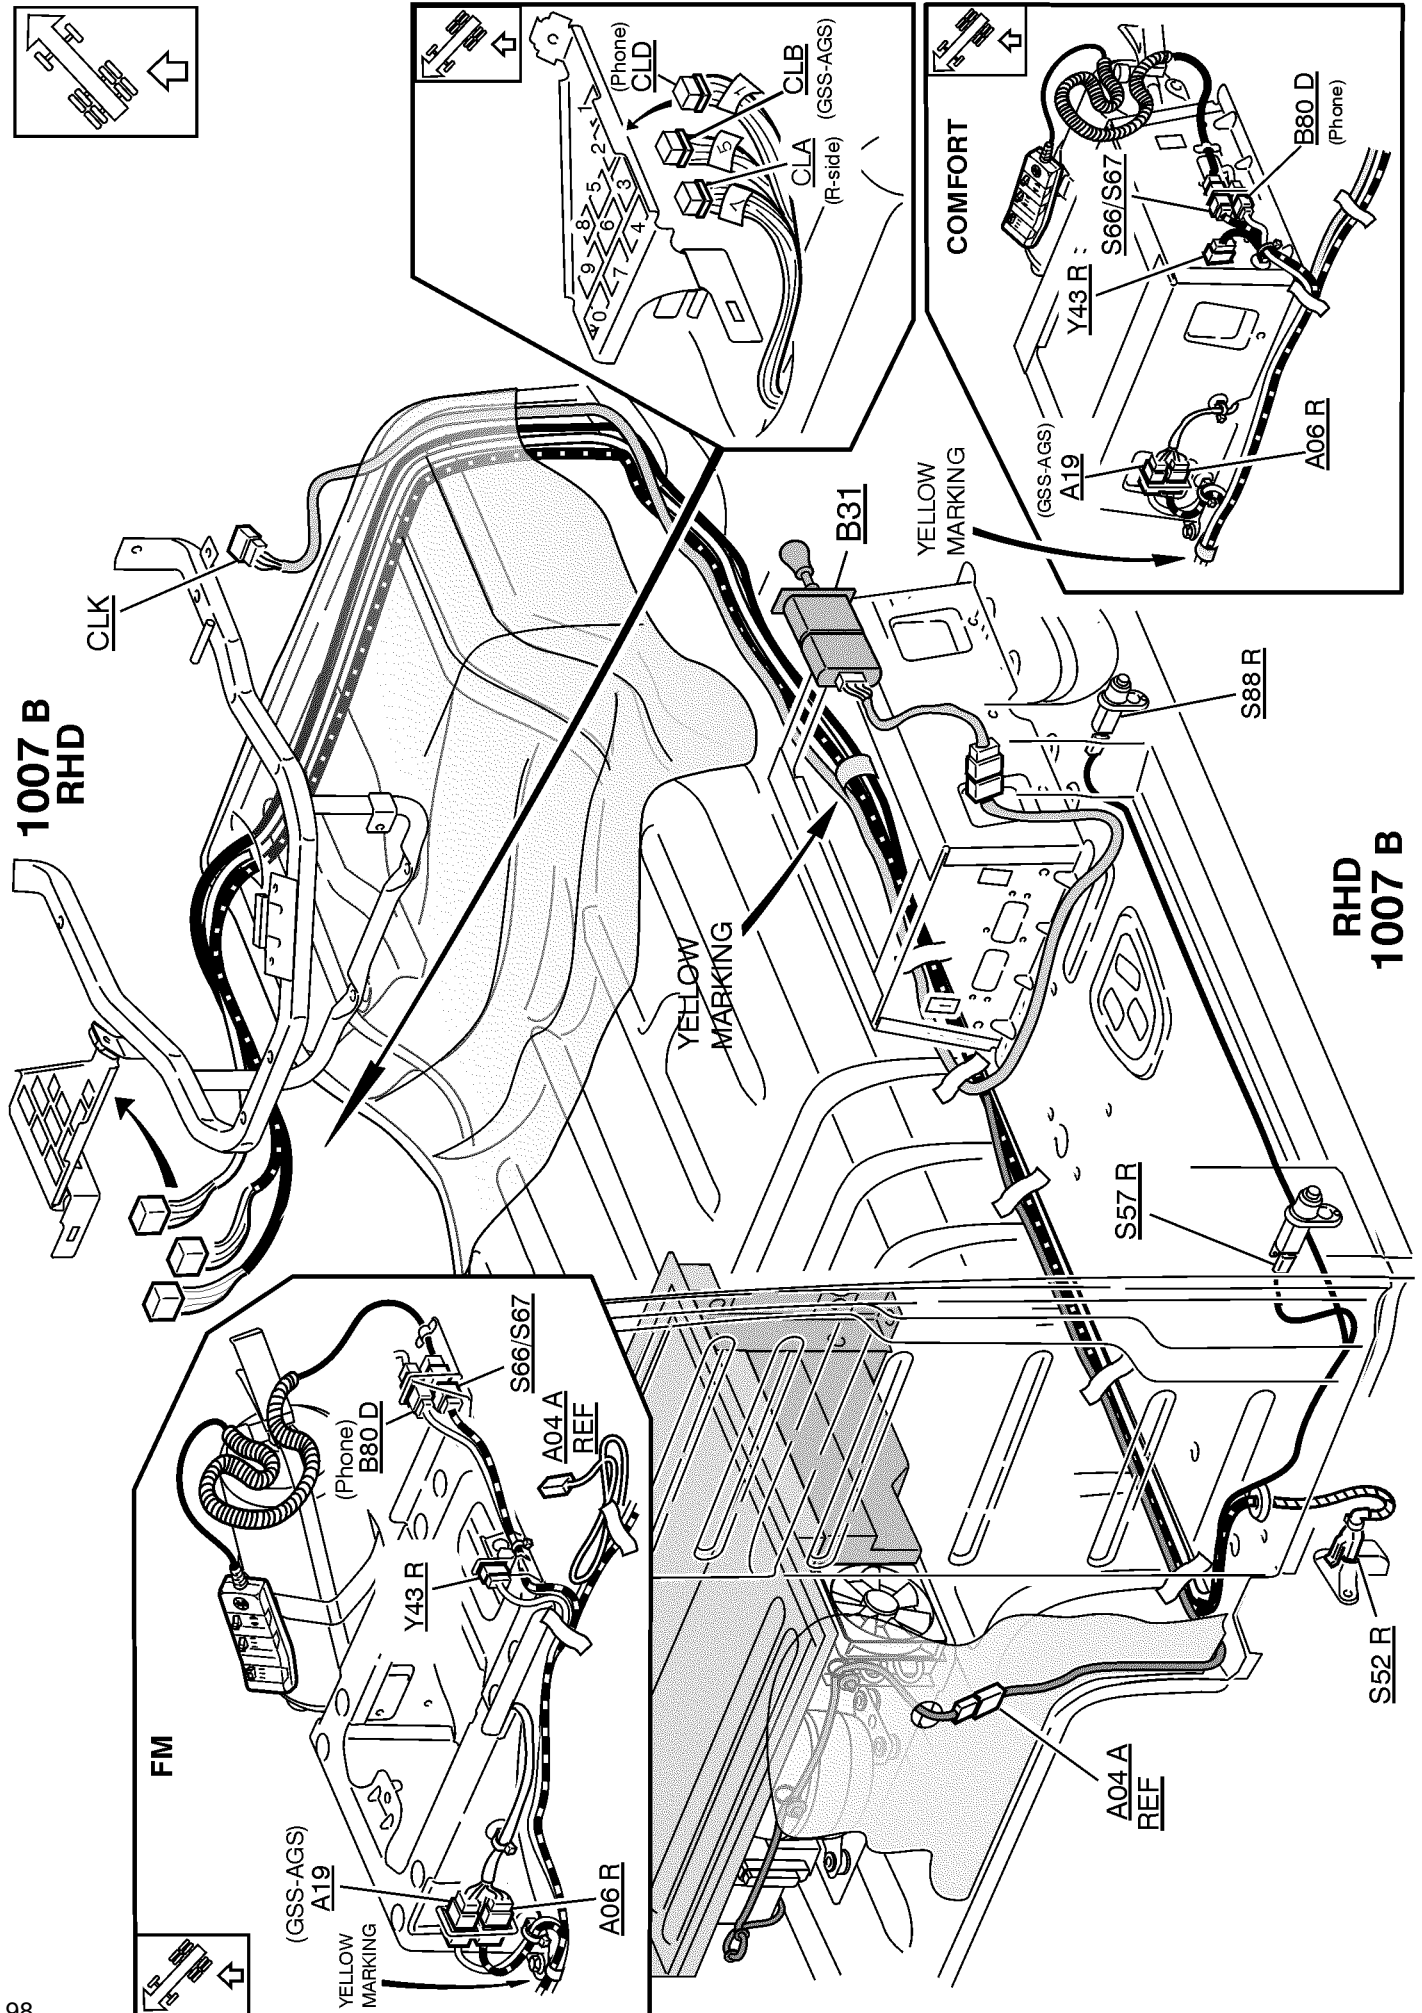

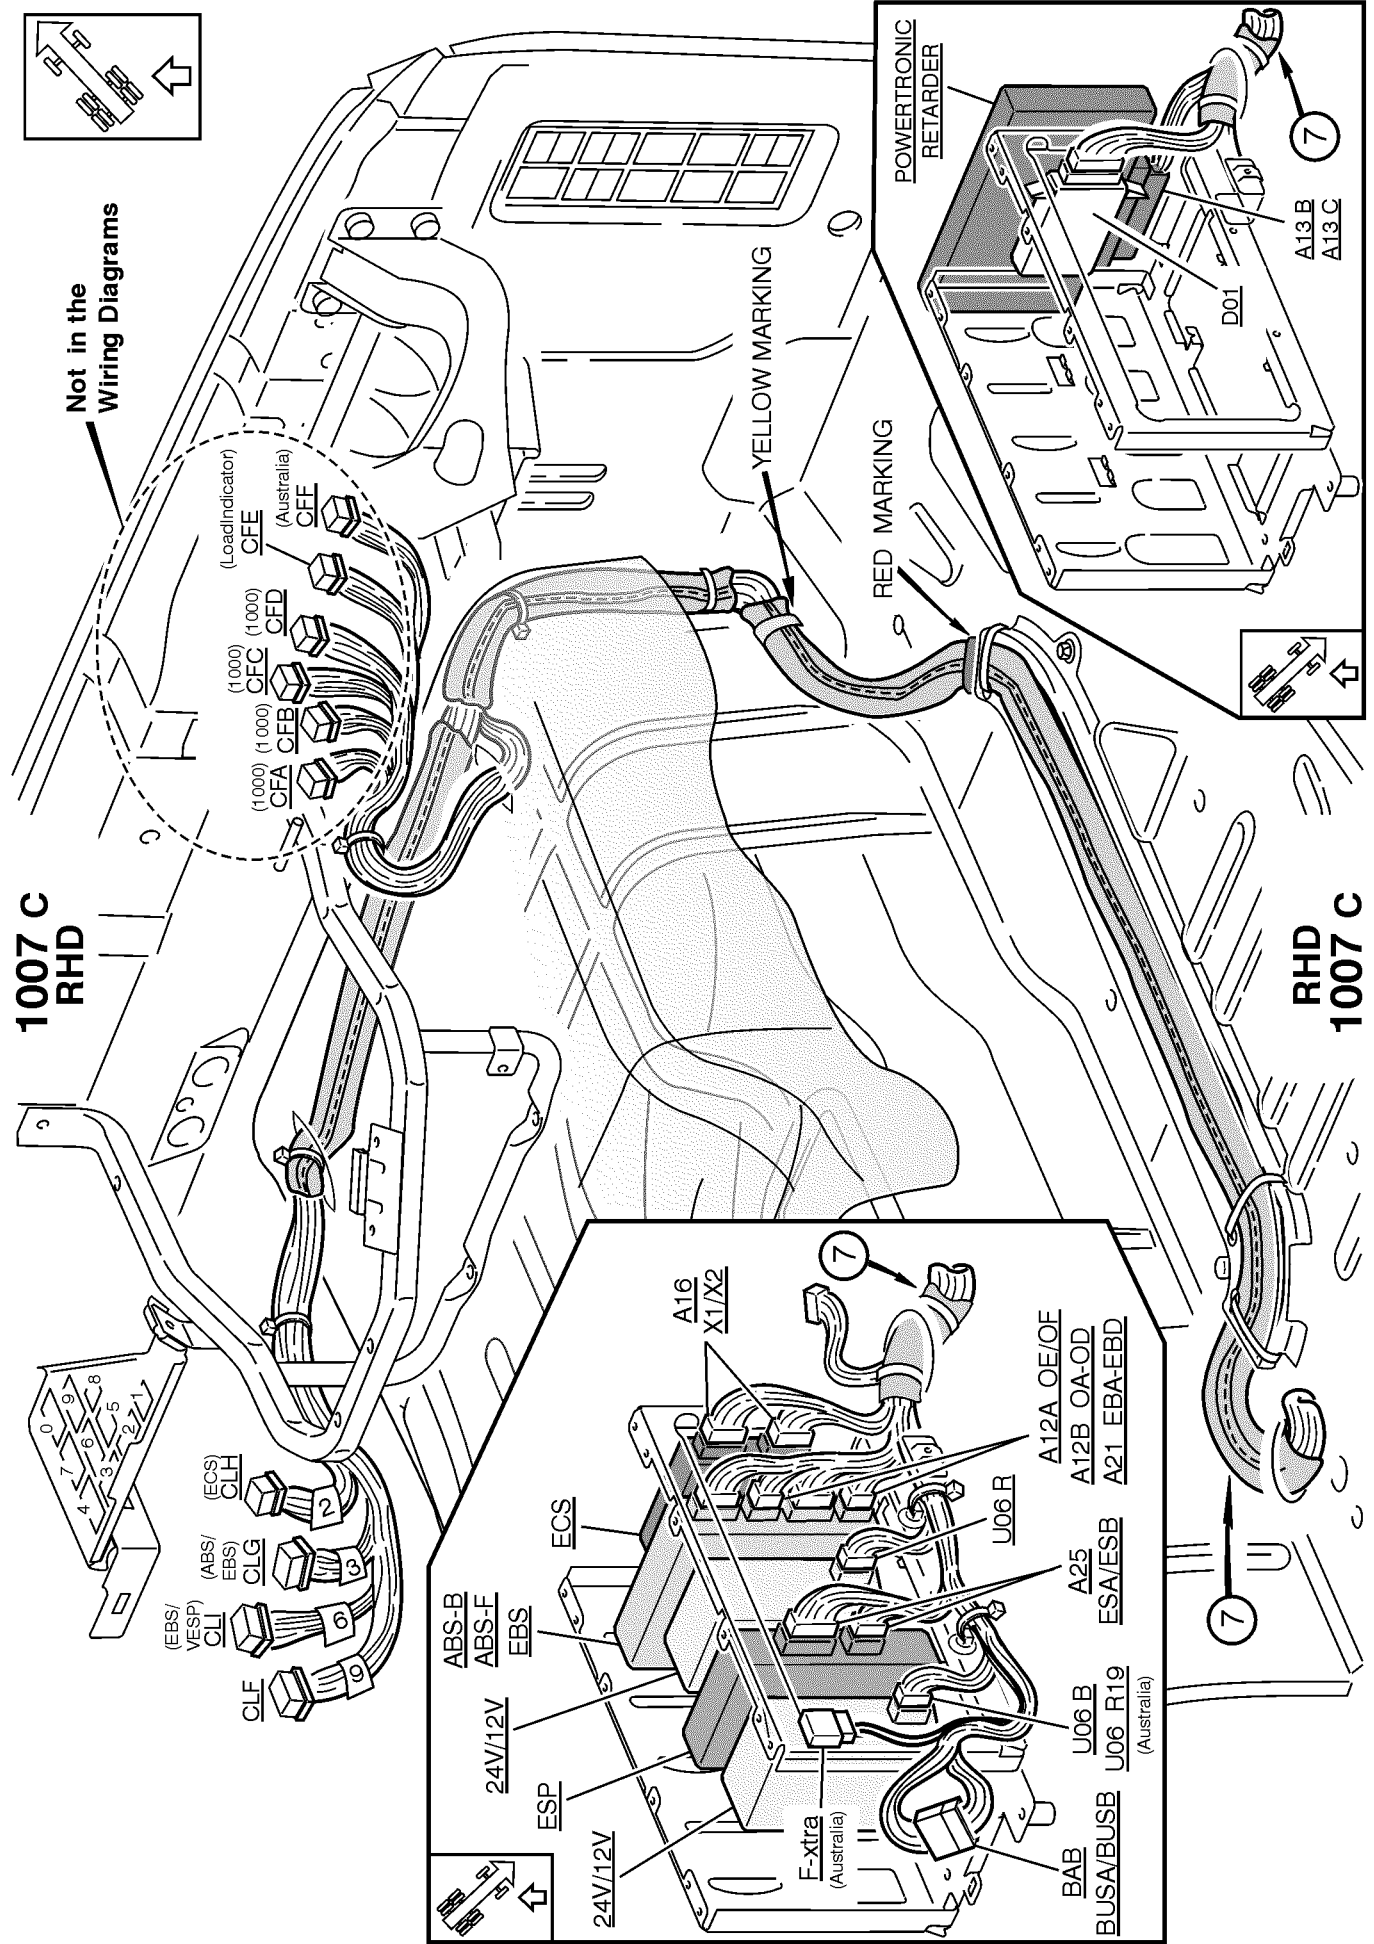


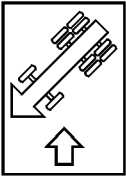

New Alternator

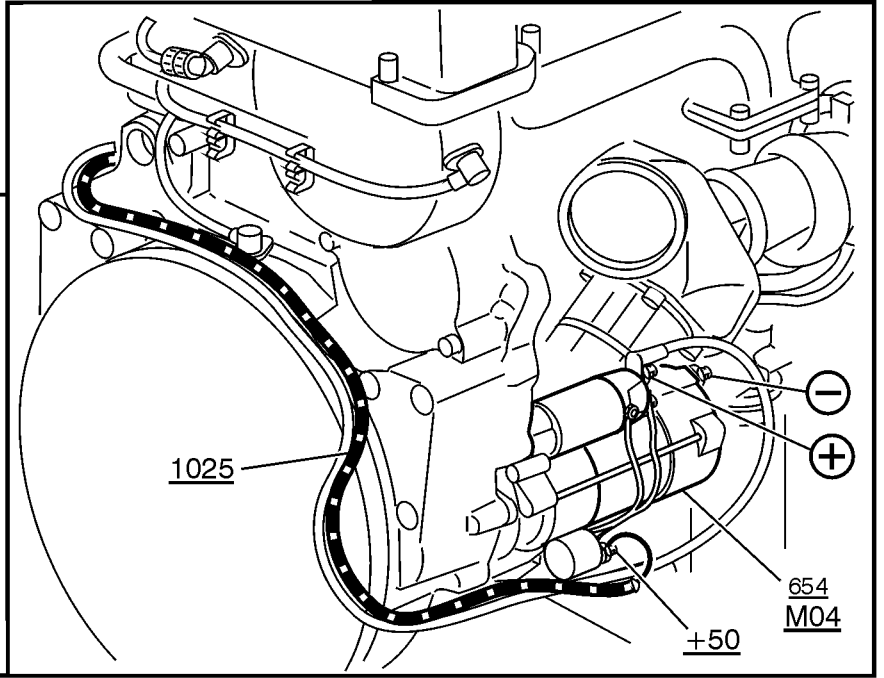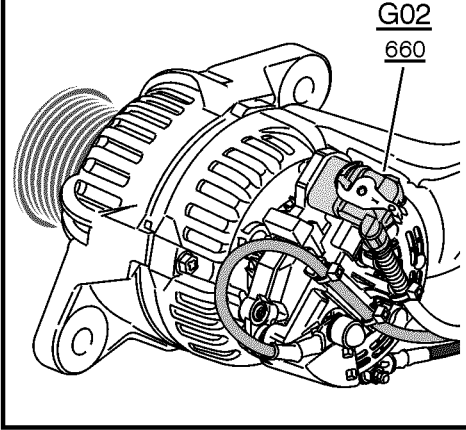



1025, 1476 ENG-VE9

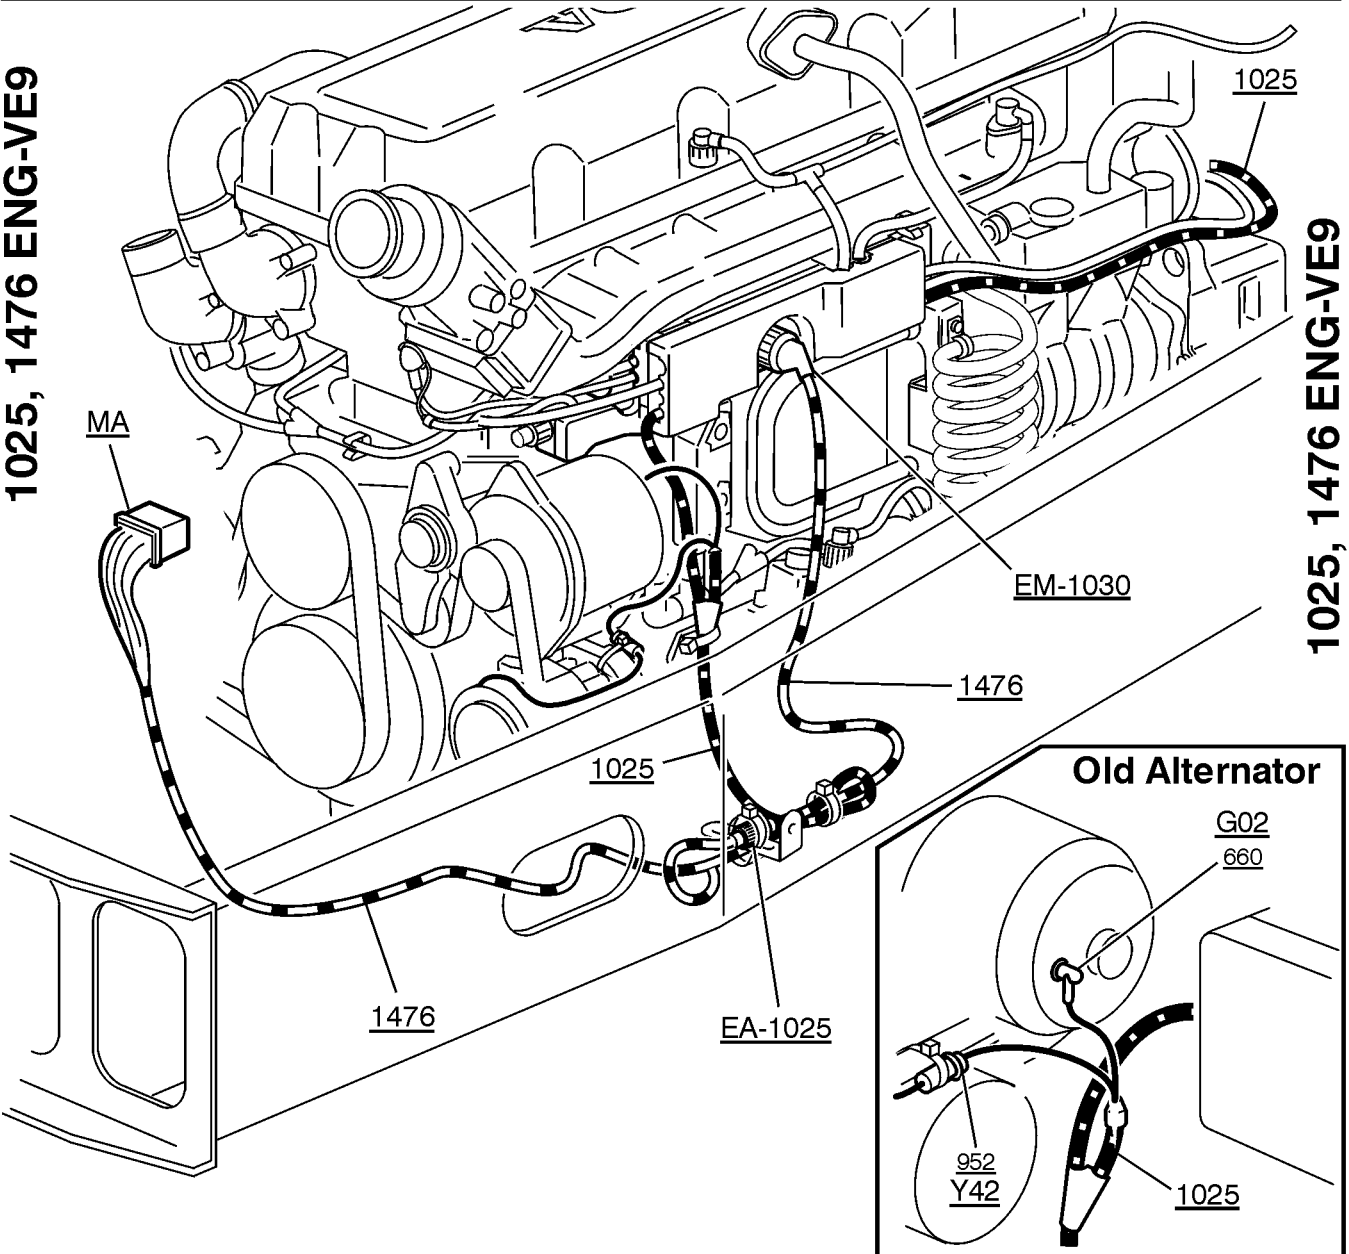



1025, 1476 ENG-VE9

Old Alternator

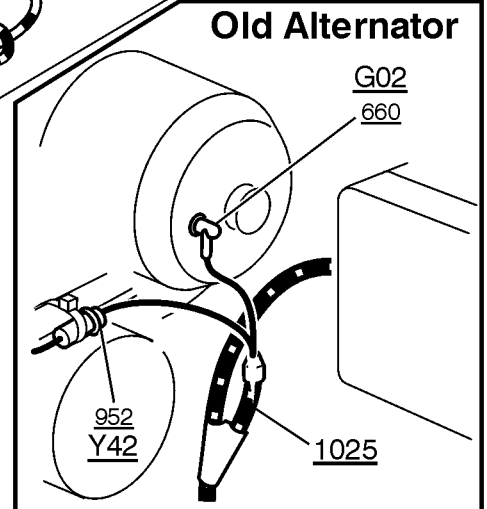


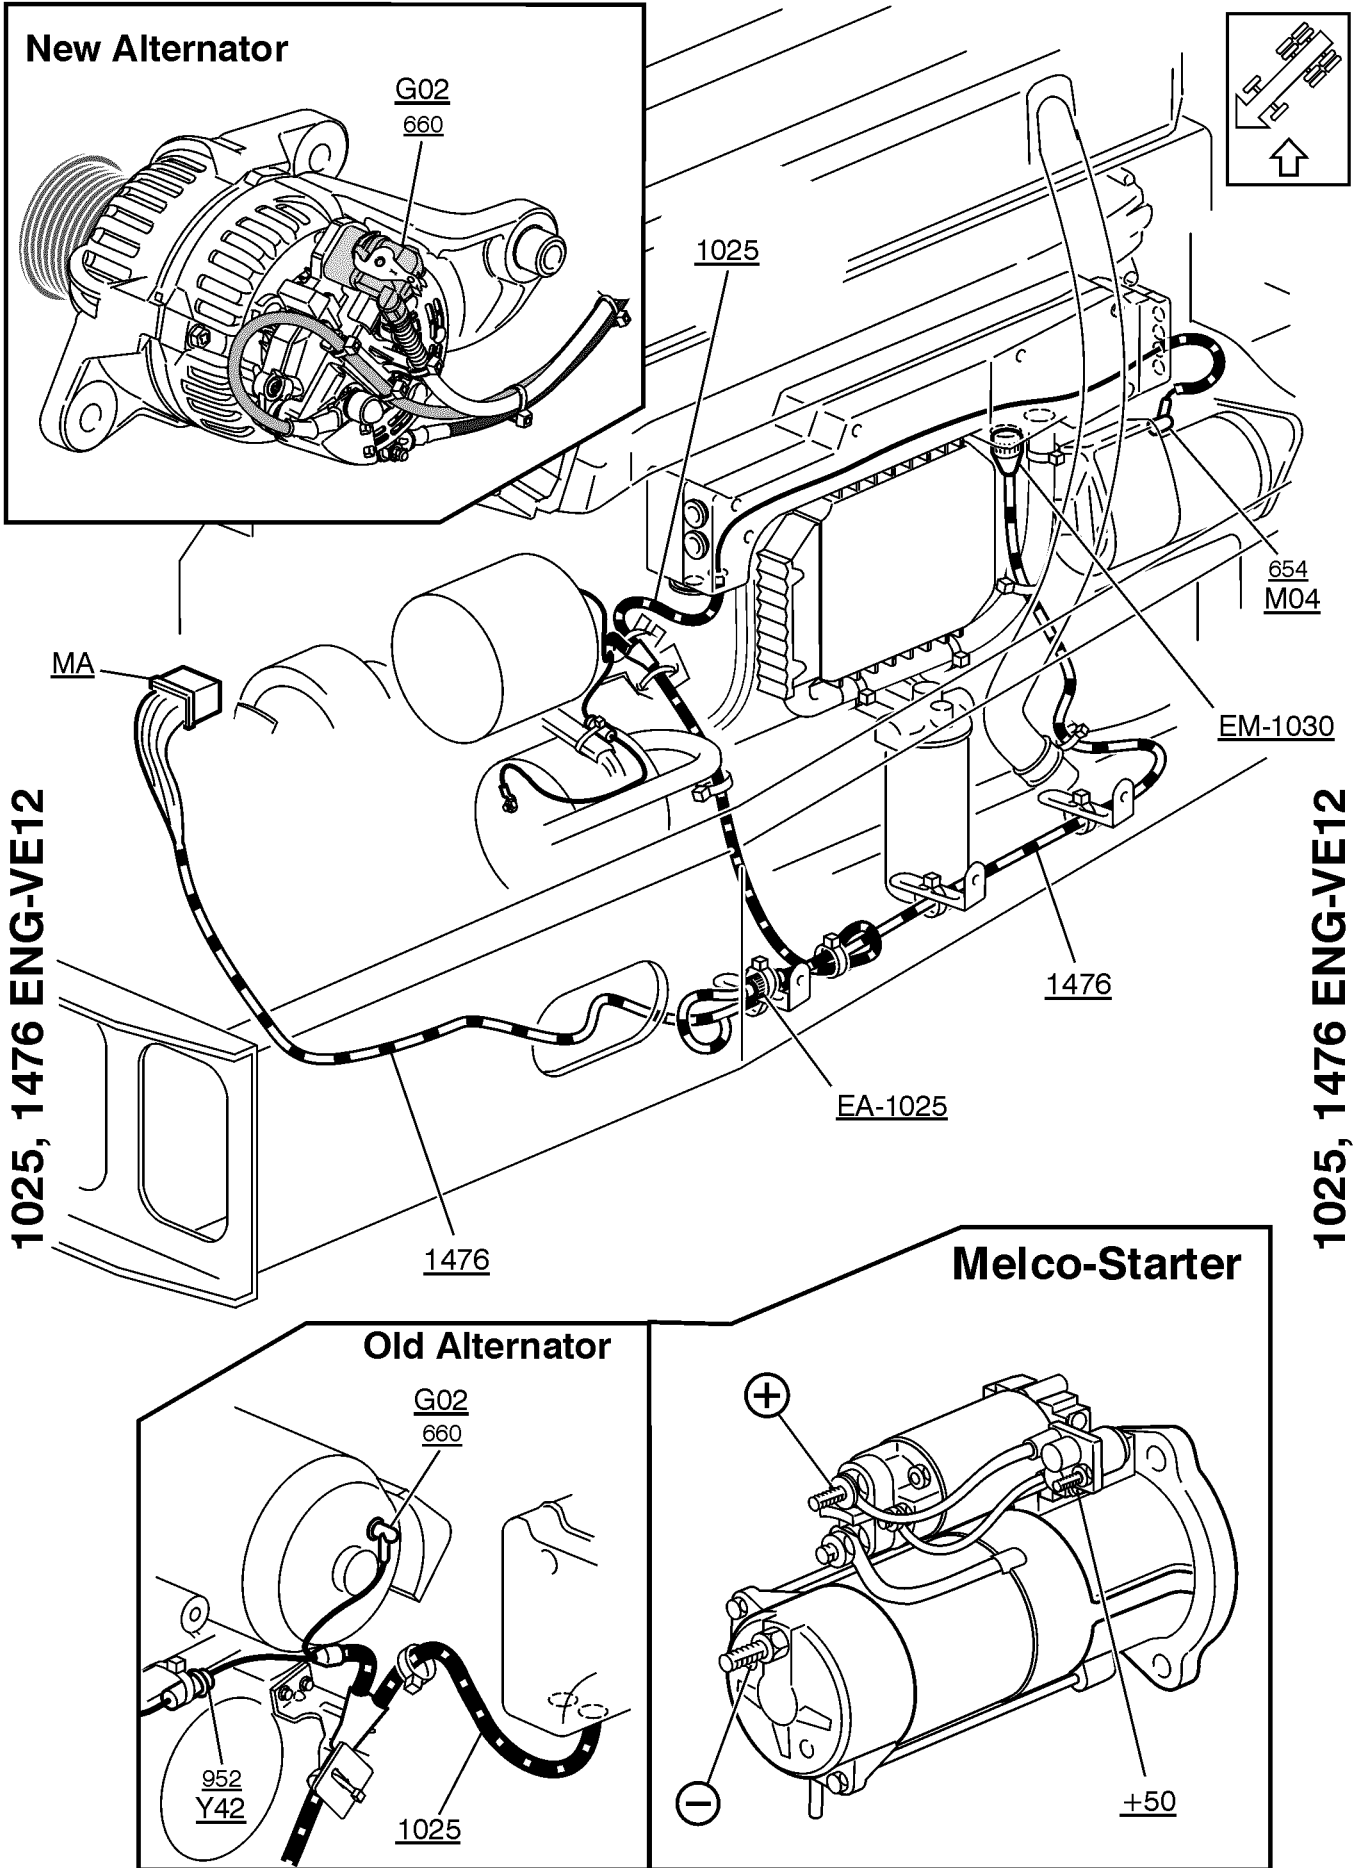


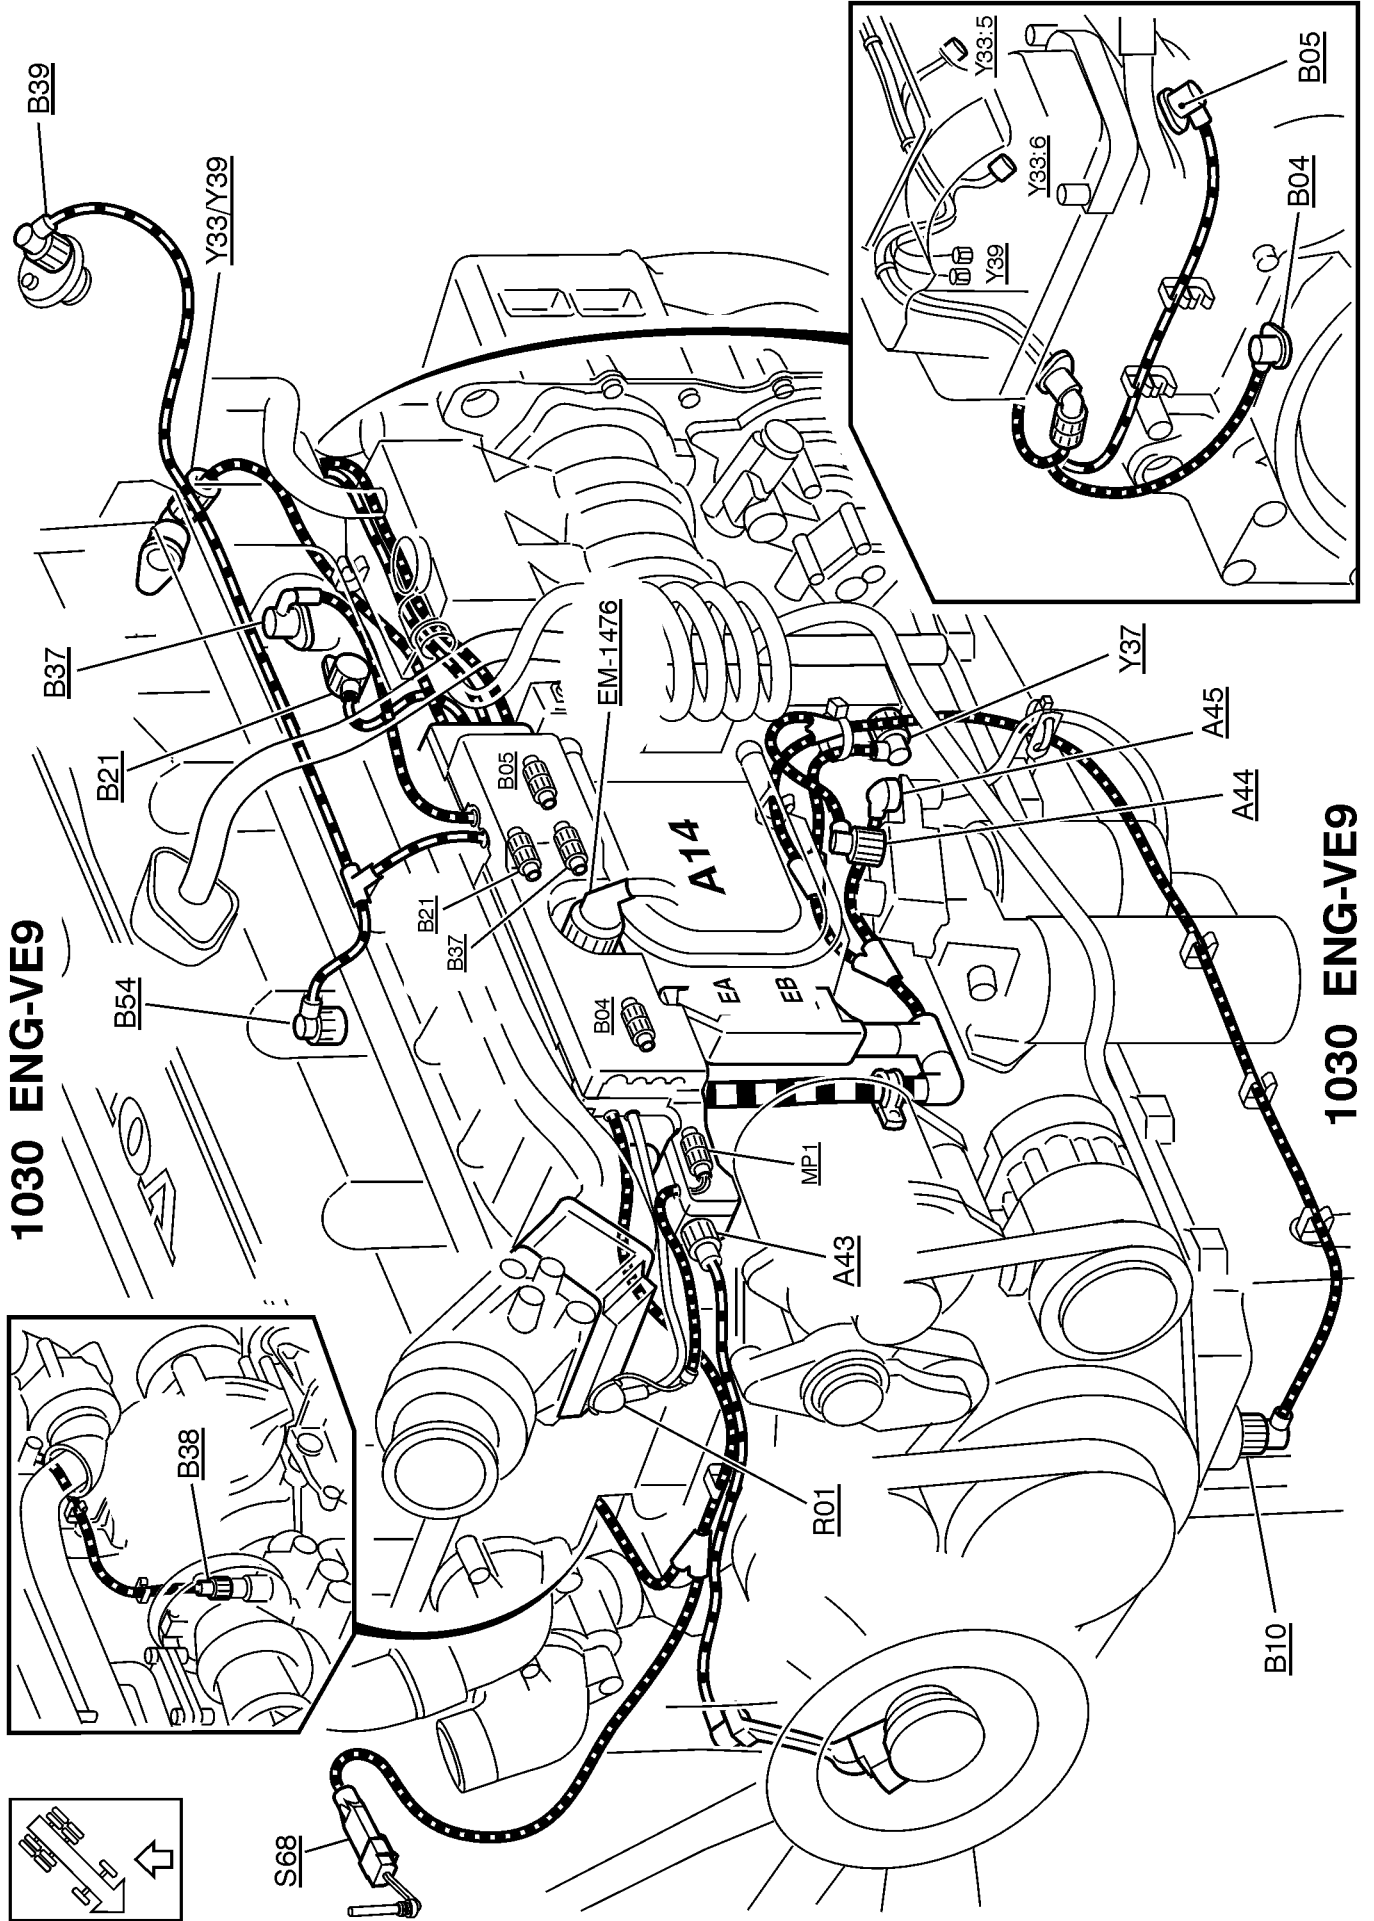


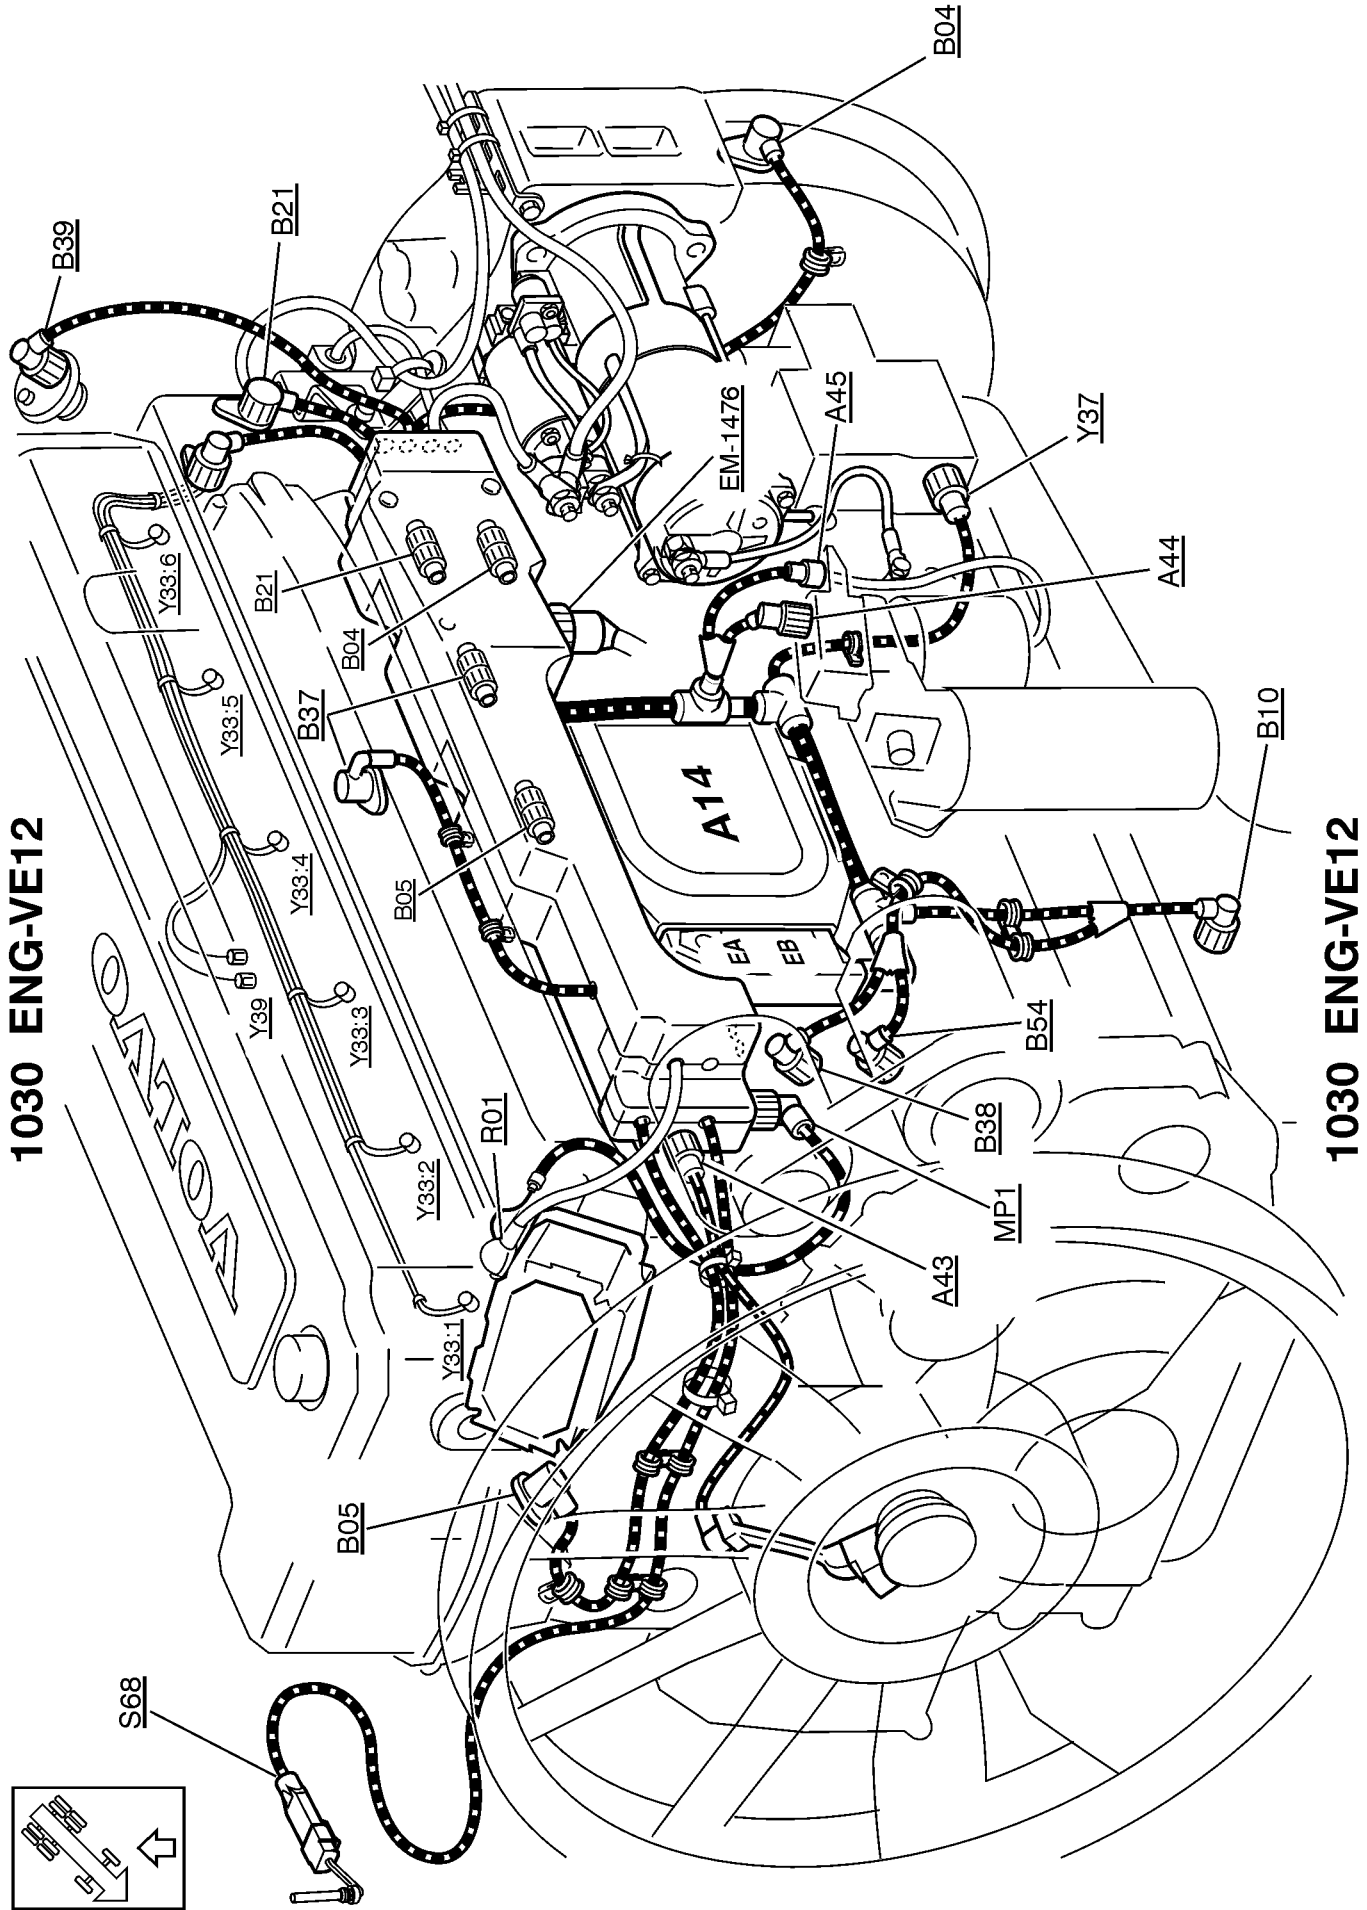


1030 ENG-VE12

1030 ENG-VE12

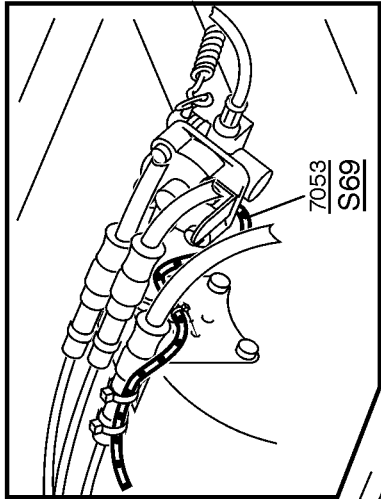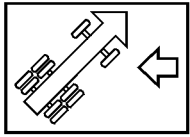





1037

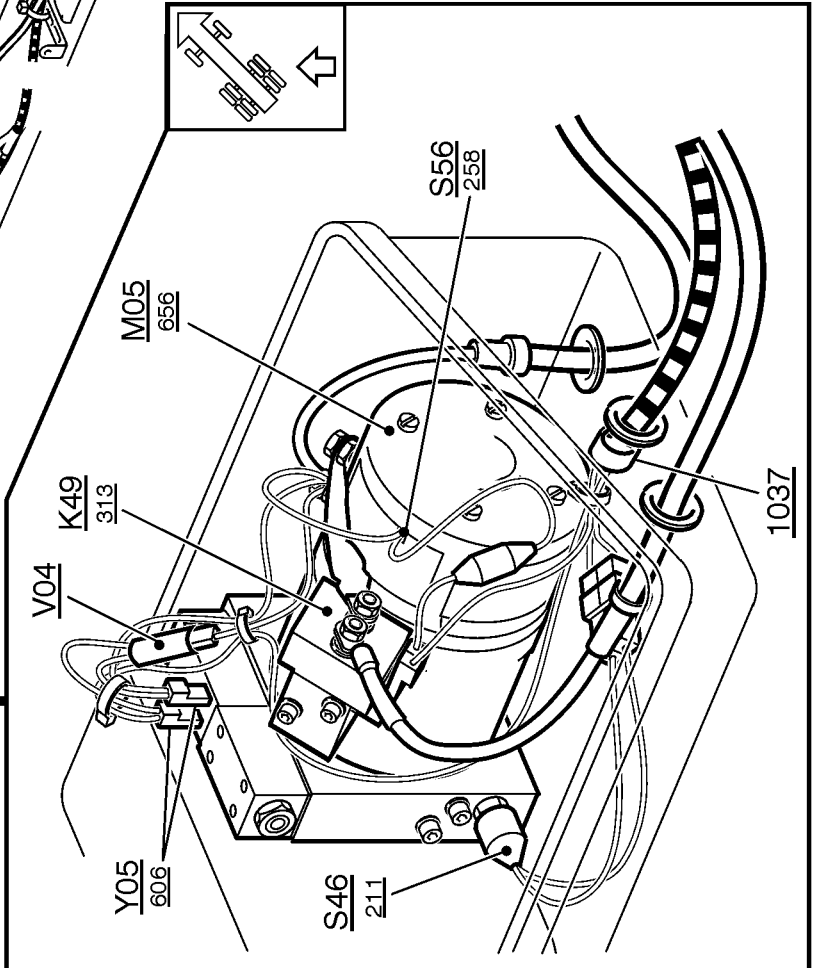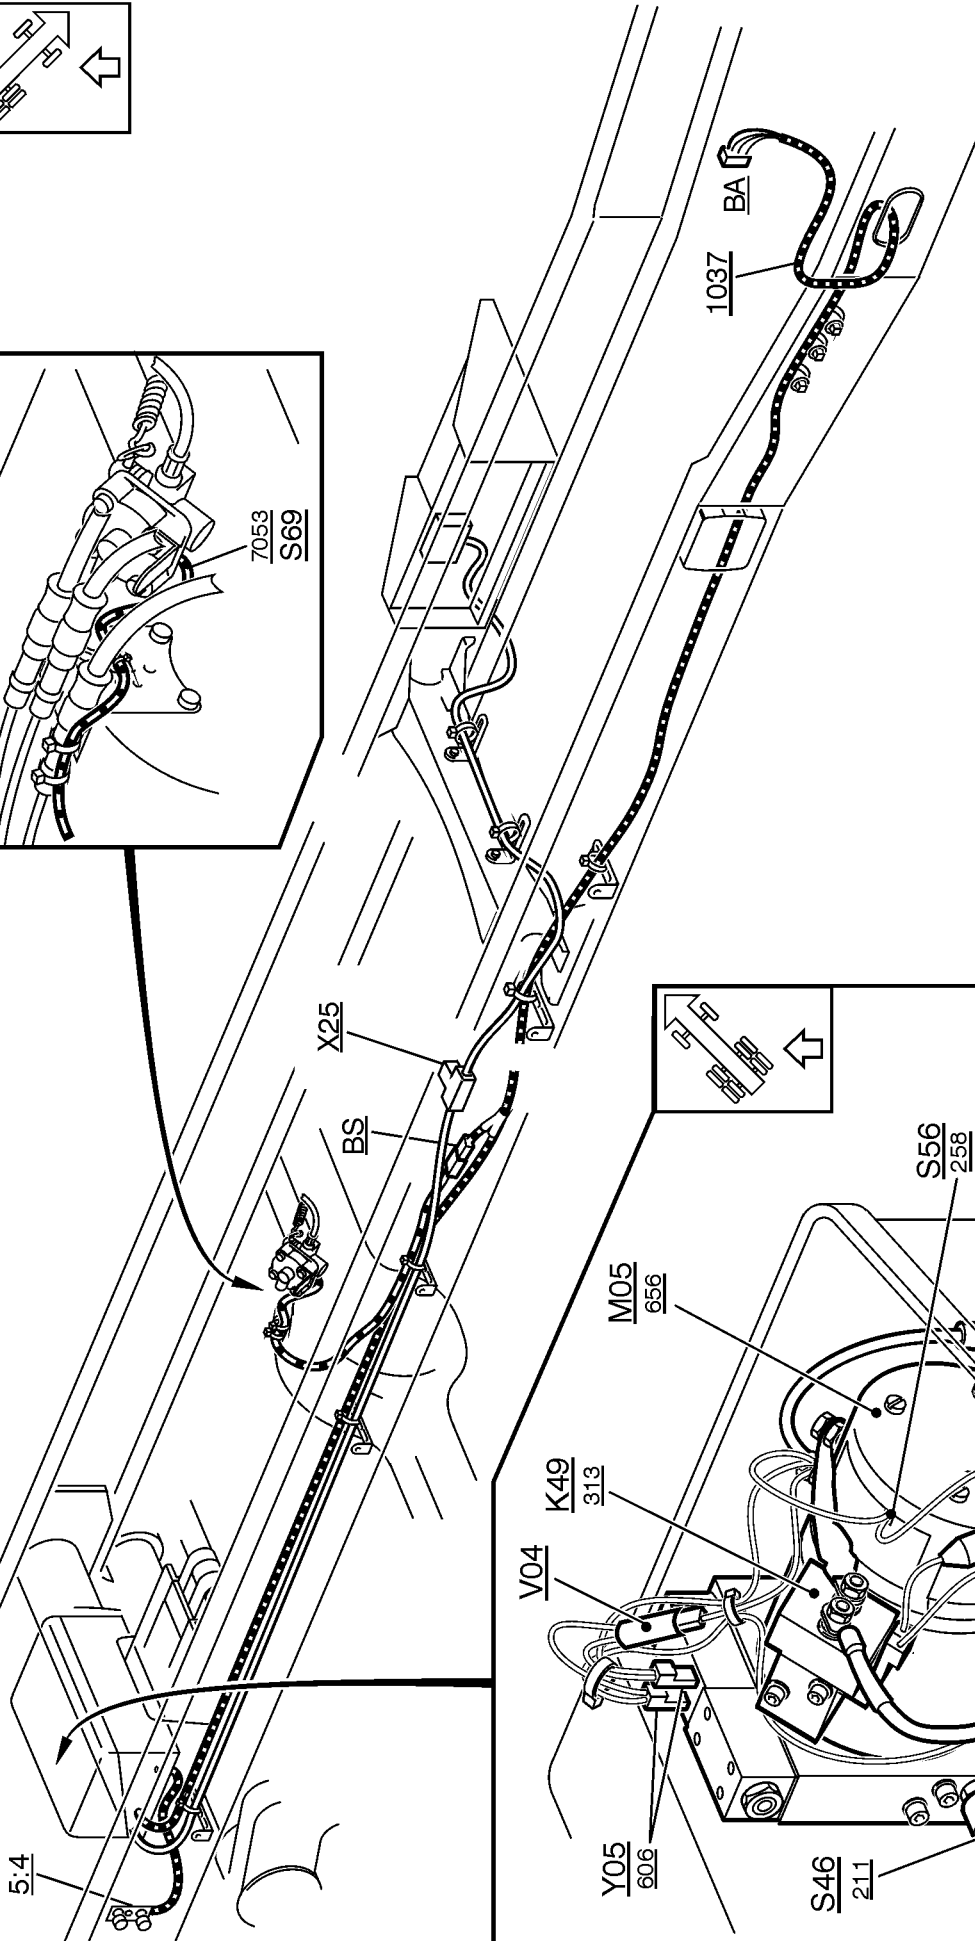



1037

1040

1040

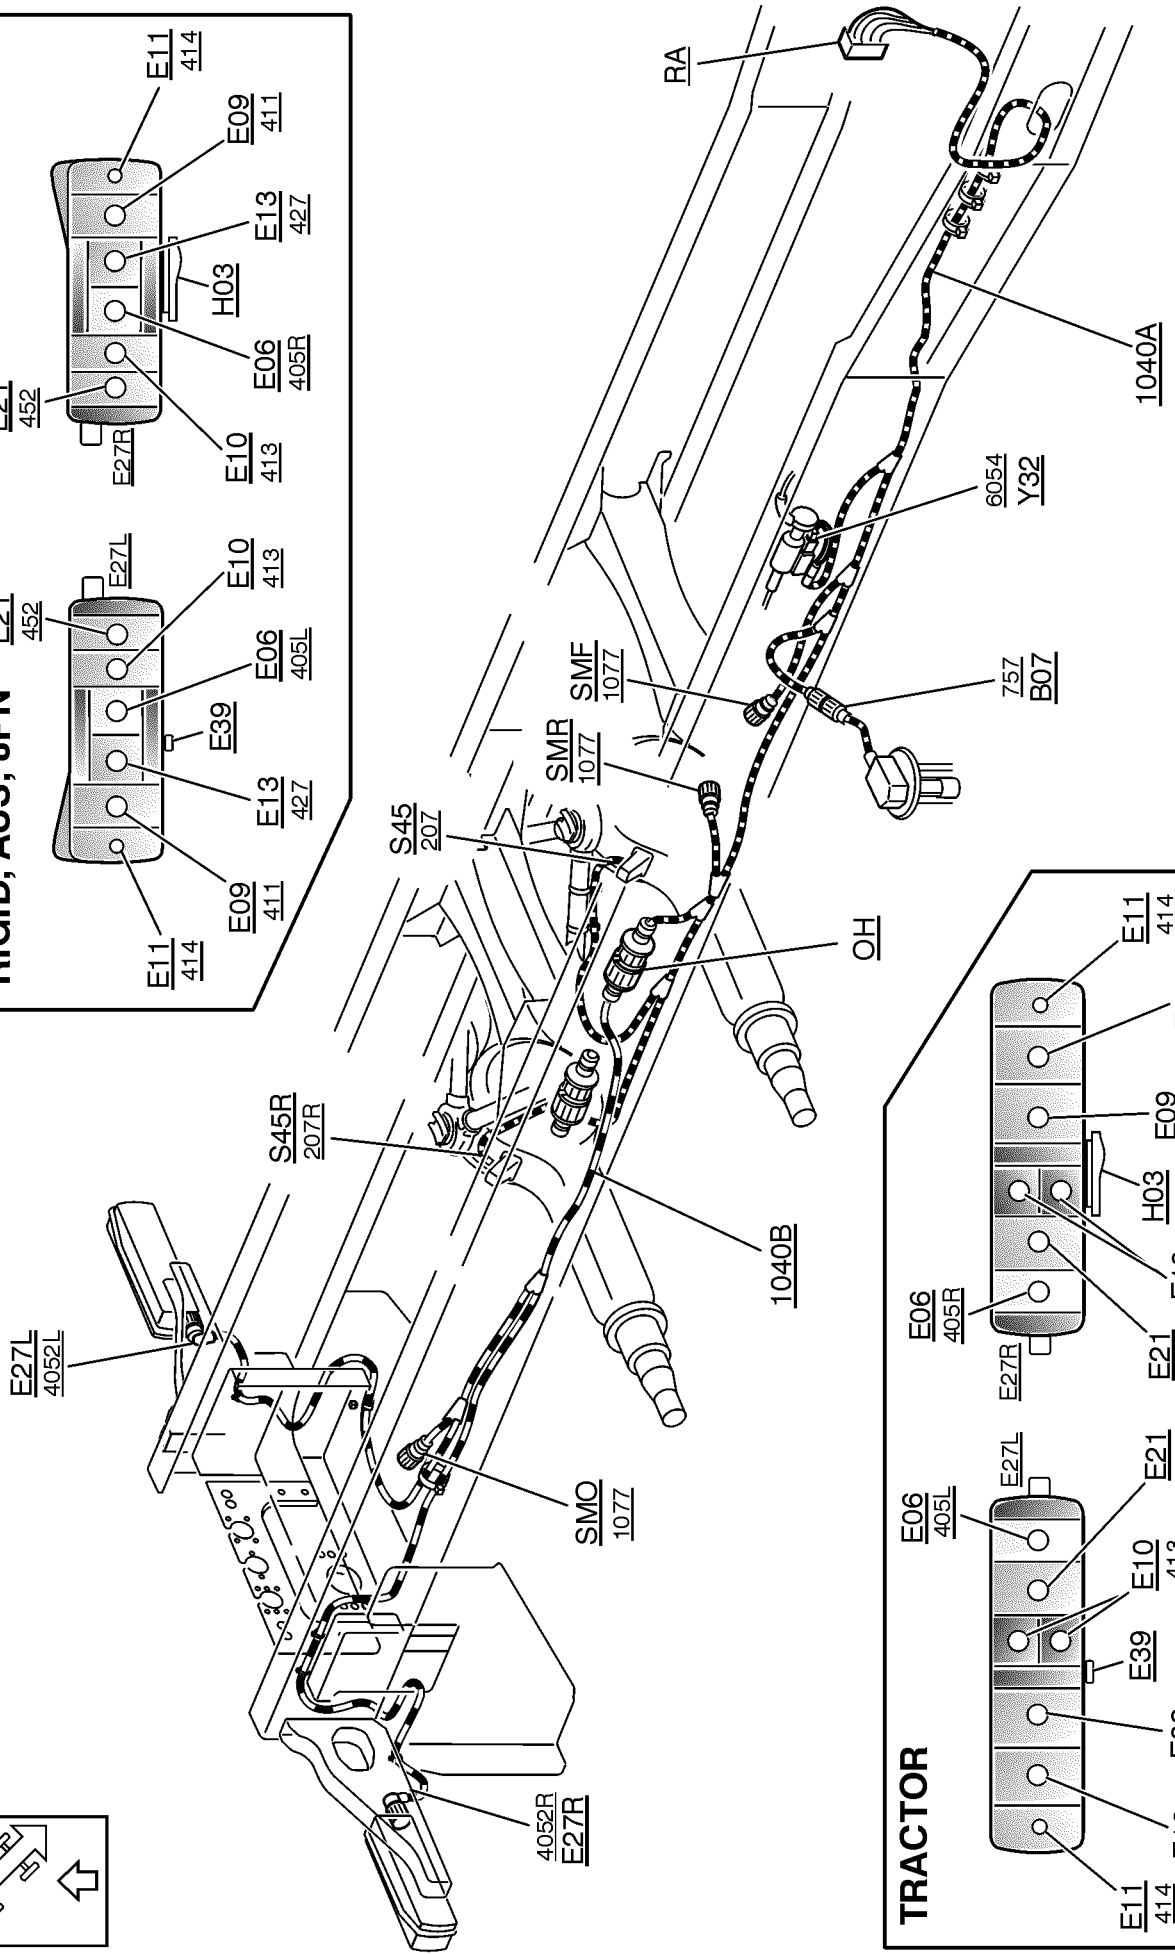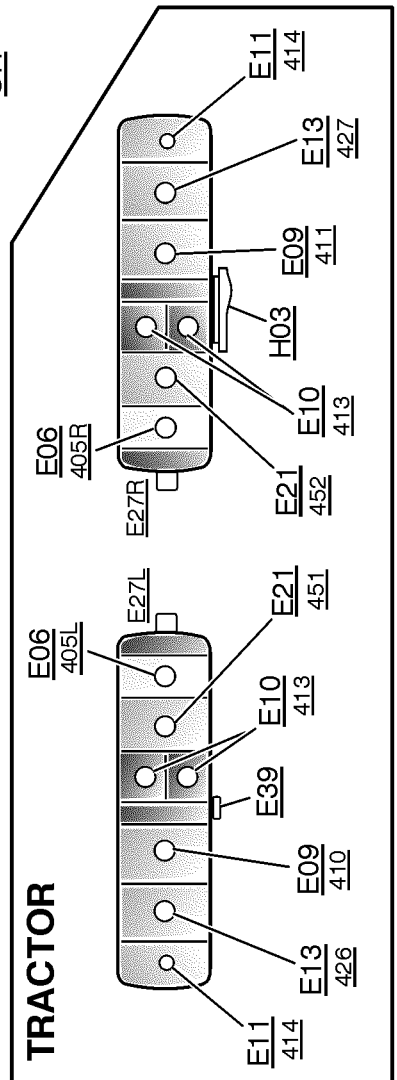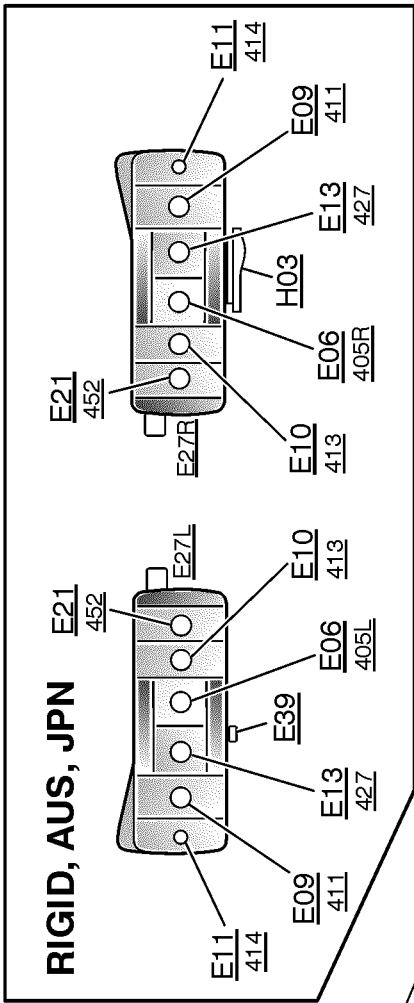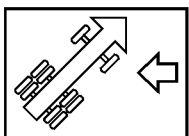


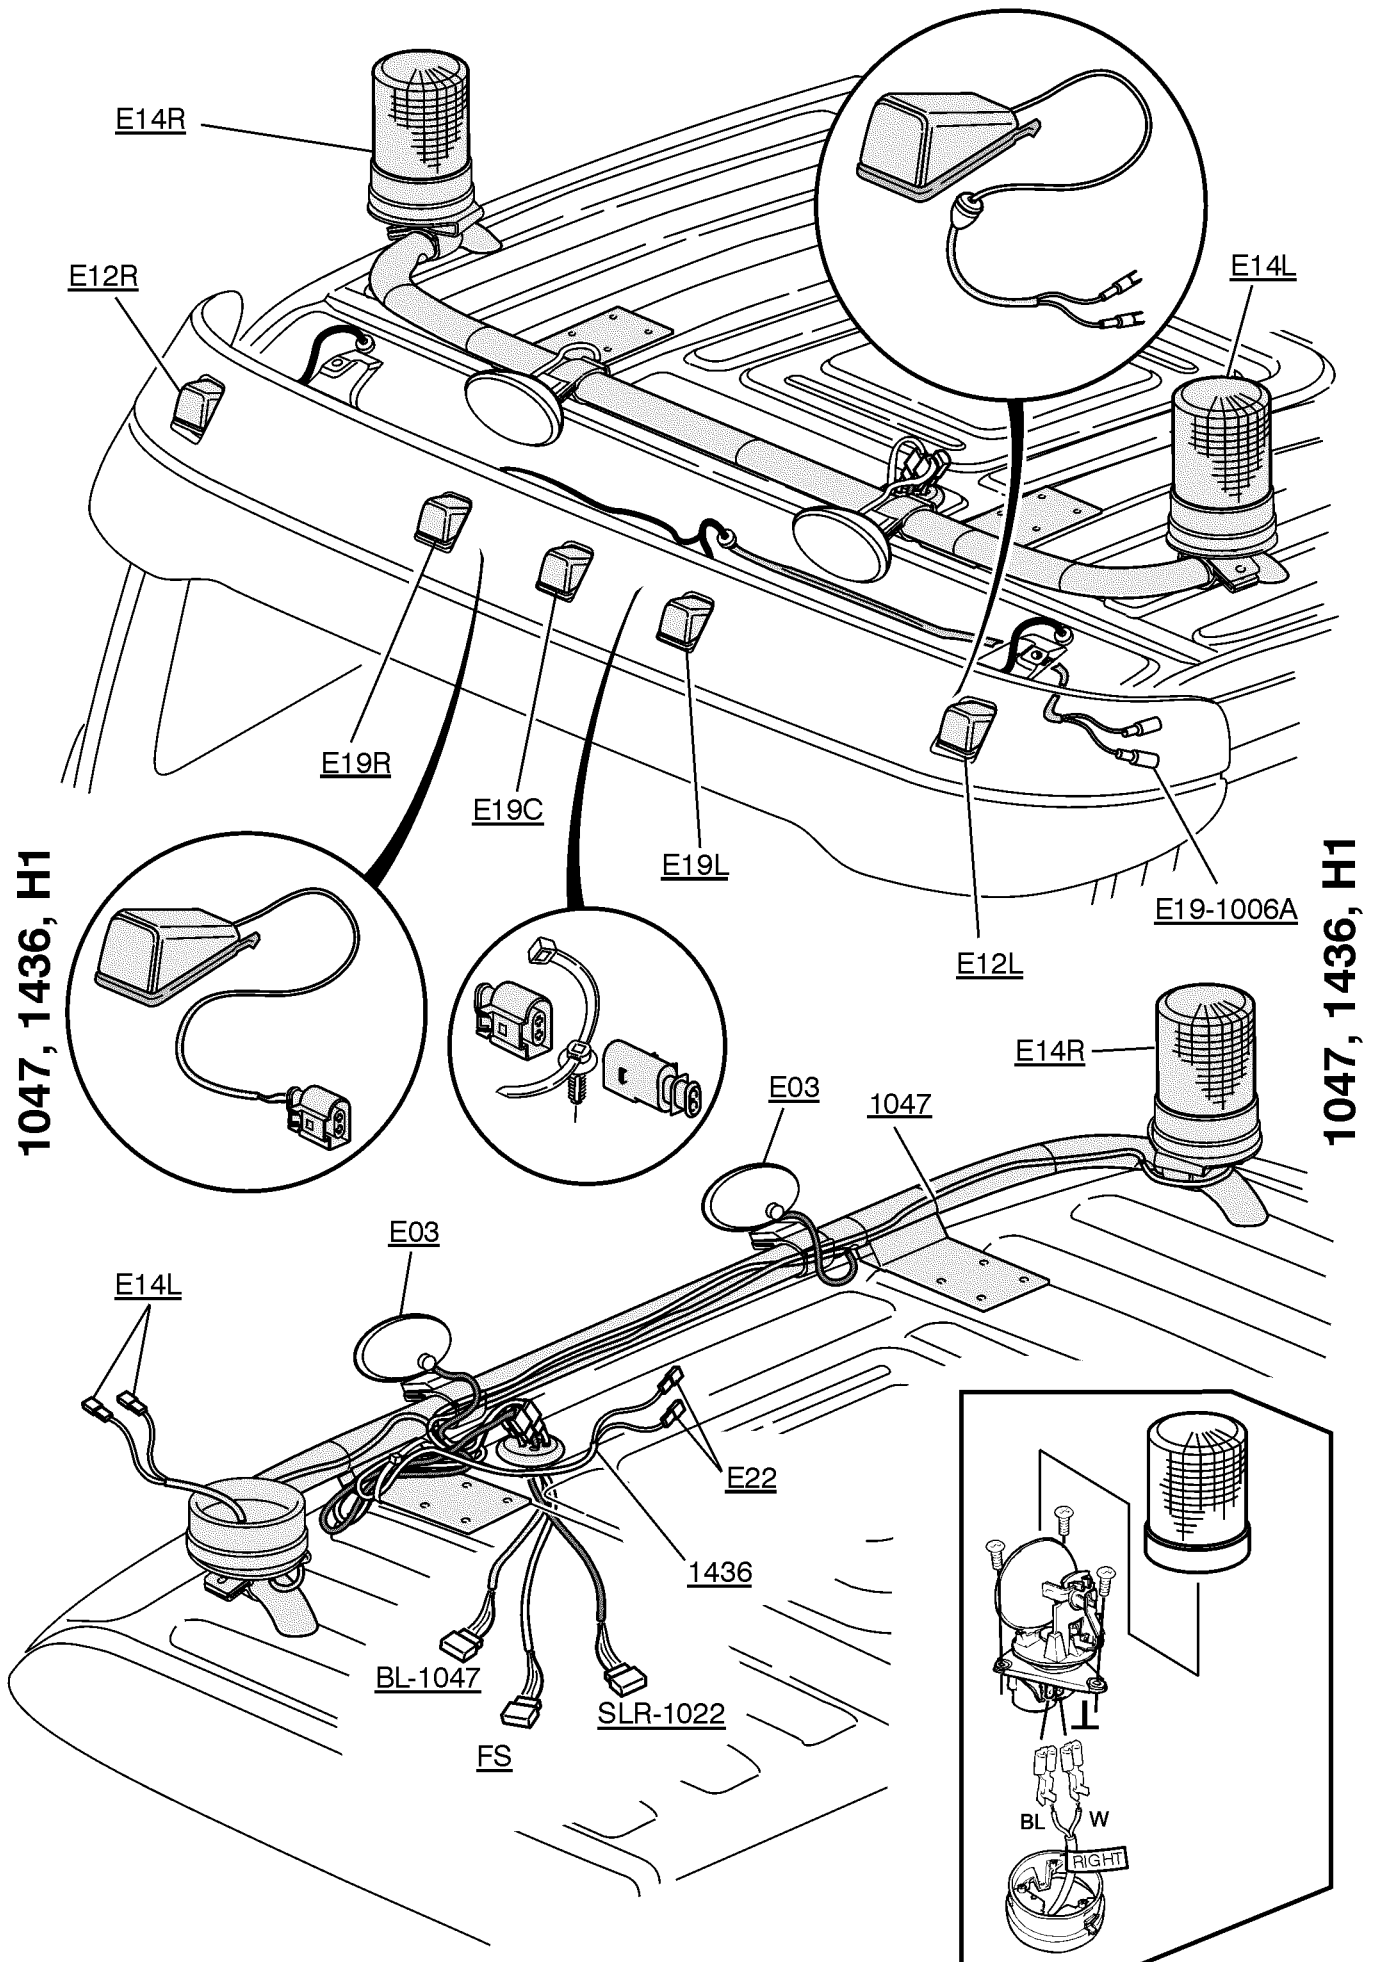

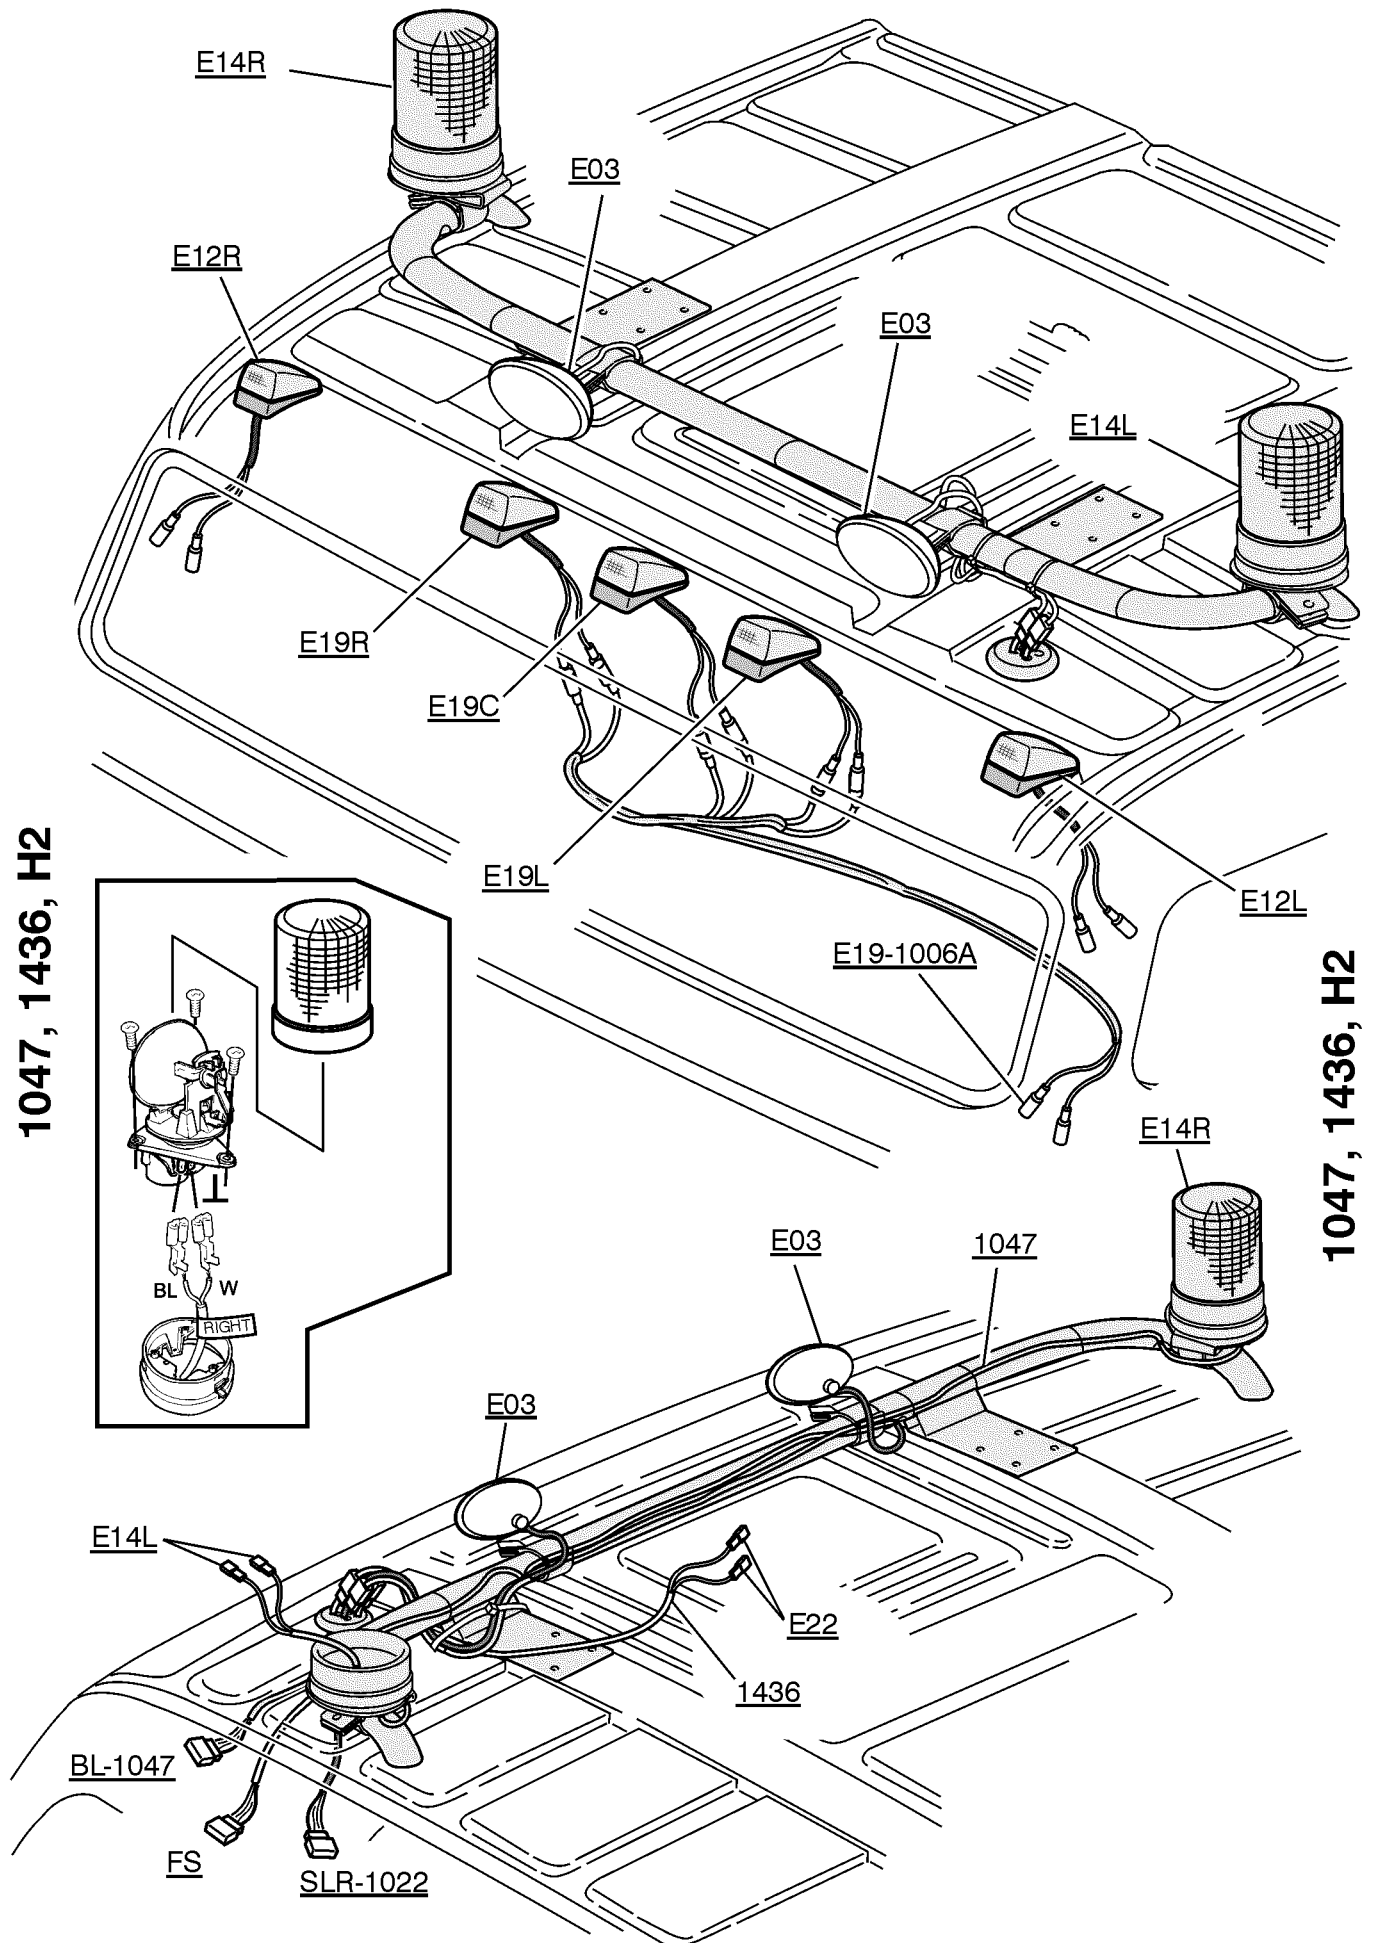

1047, 1436, H2


1047, 1436, H2

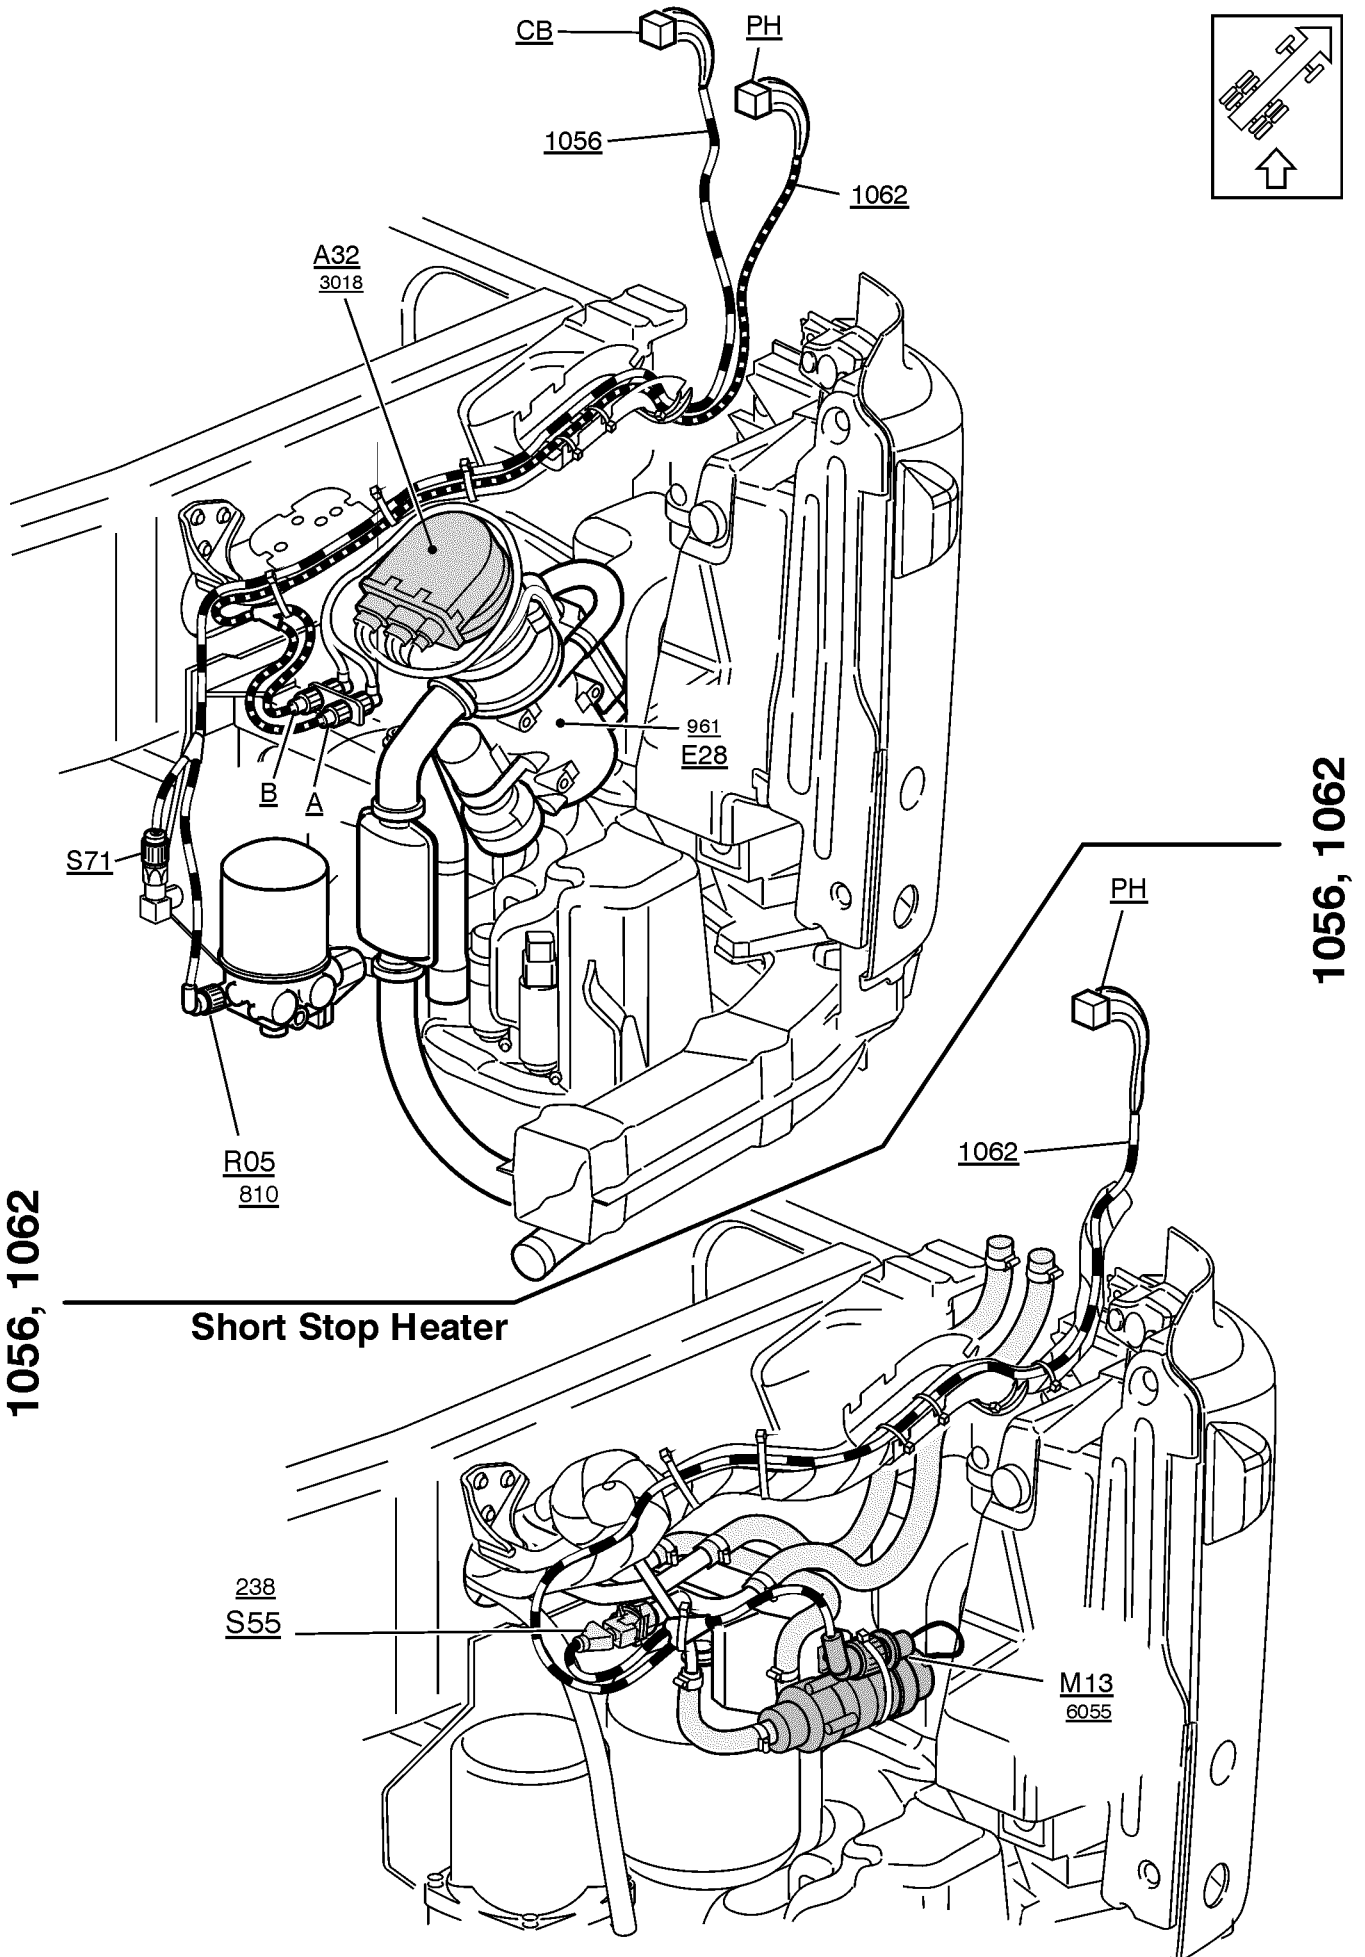

1056, 1062


Short Stop Heater


1056, 1062

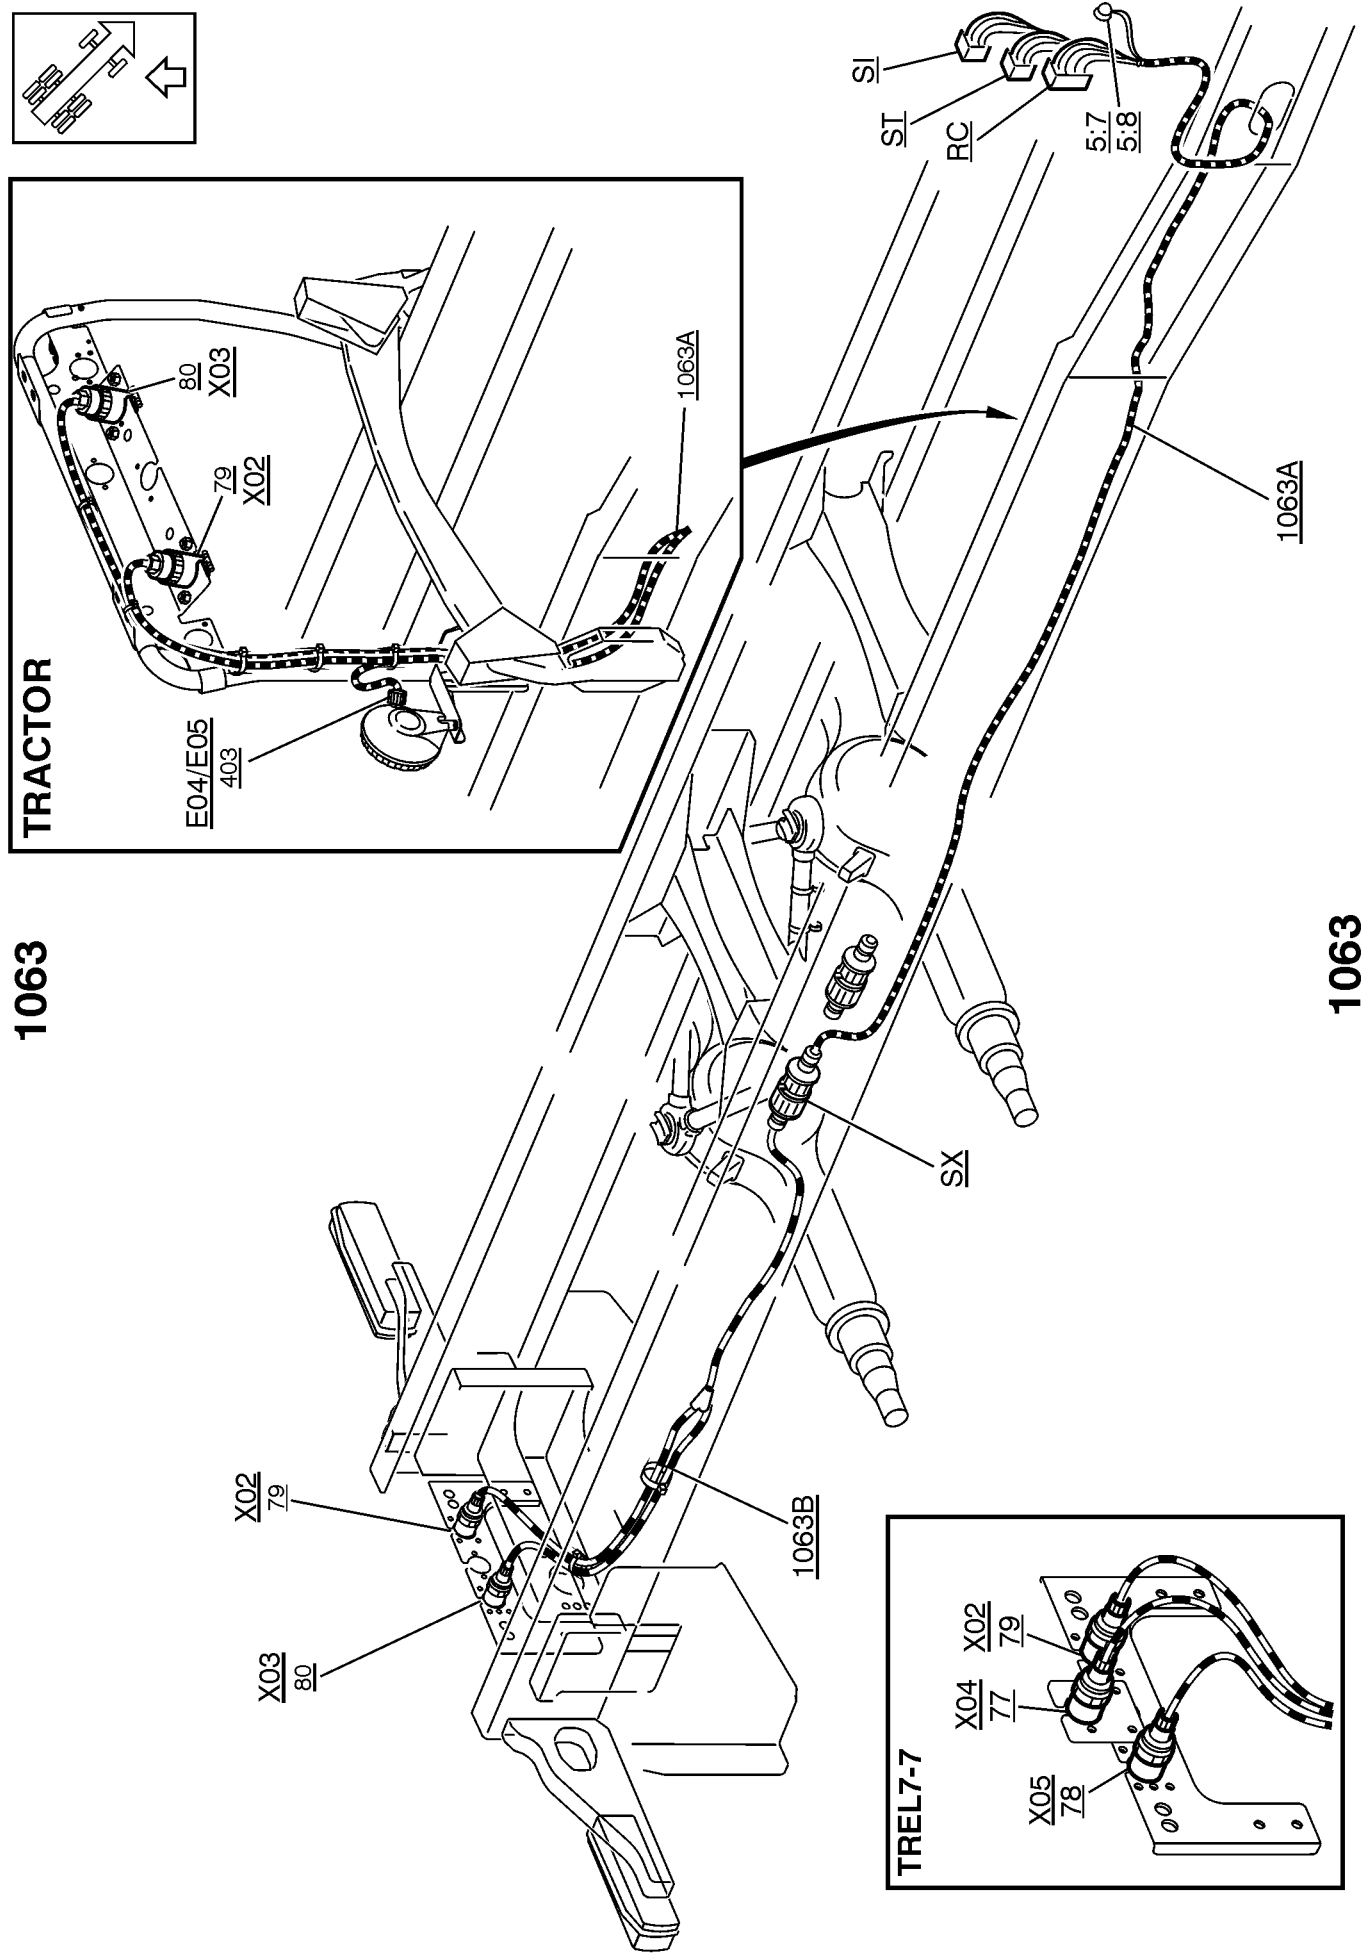


1063

1063

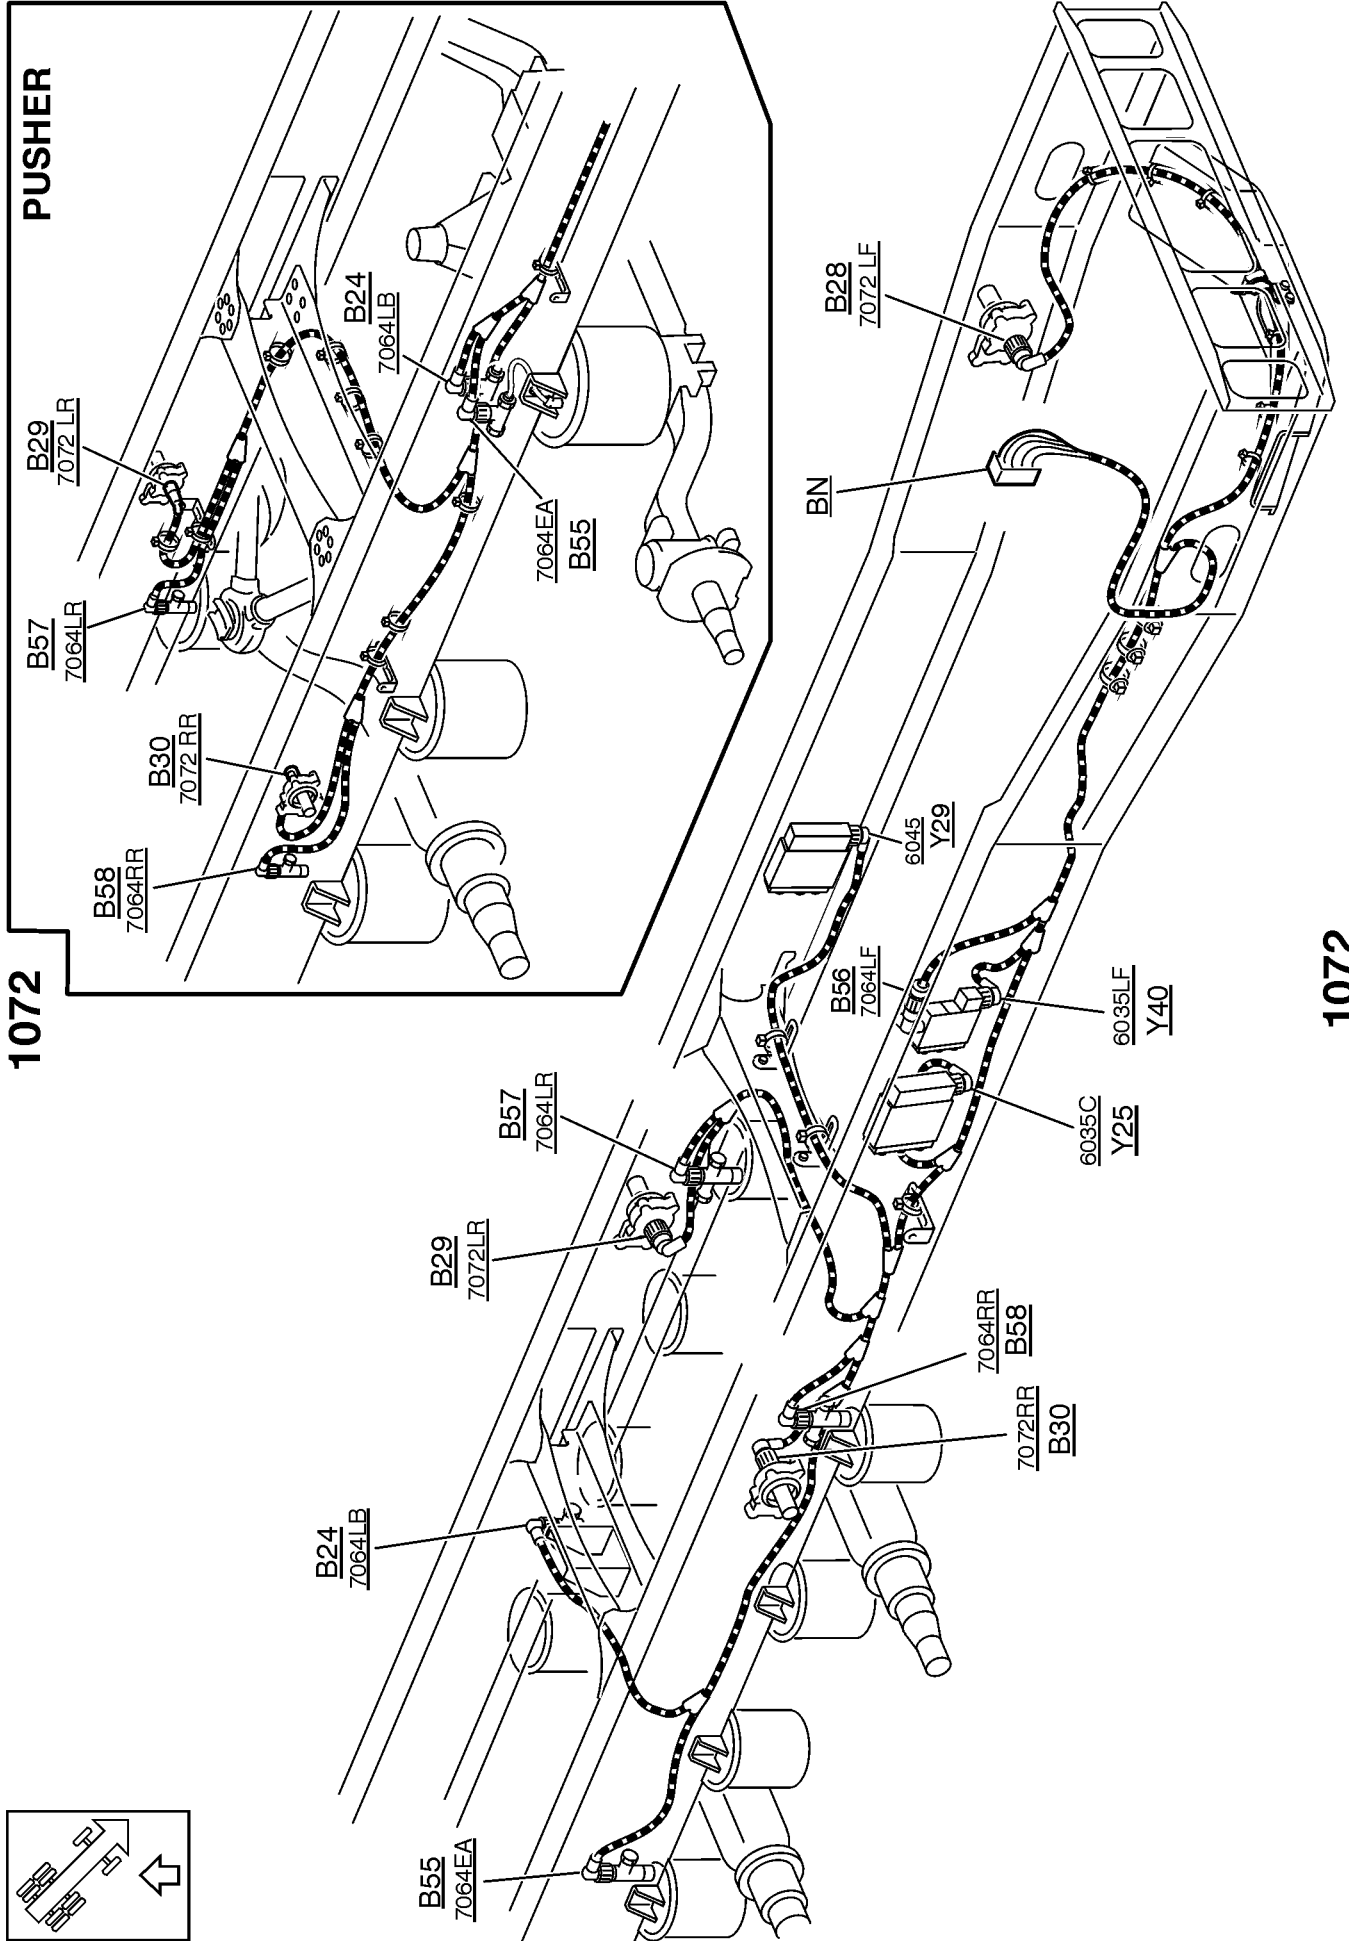

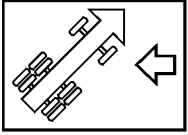


1077

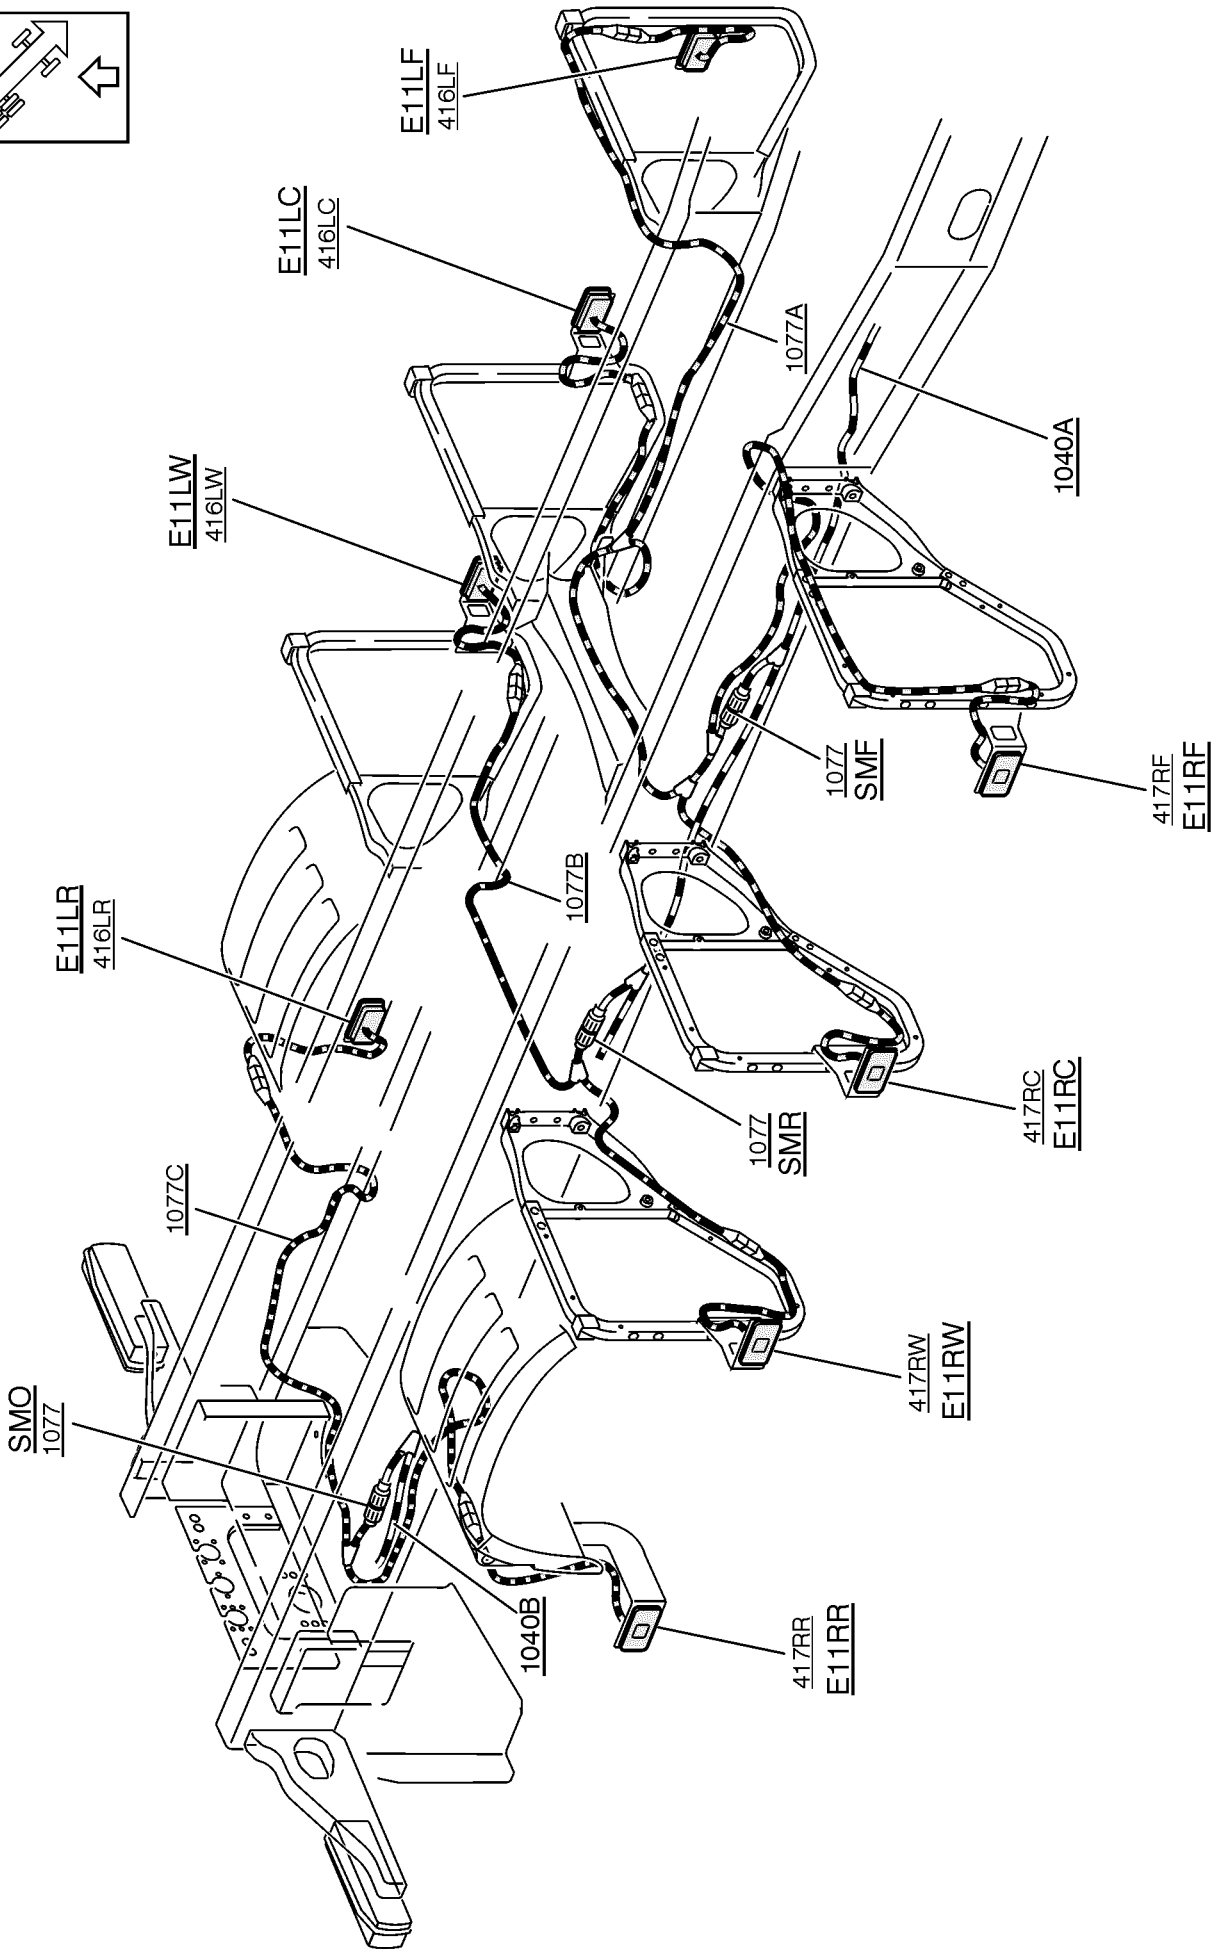



1077

STWPOS-L DRAWN
STWPOS-R MIRROR IMAGE MOUNTED


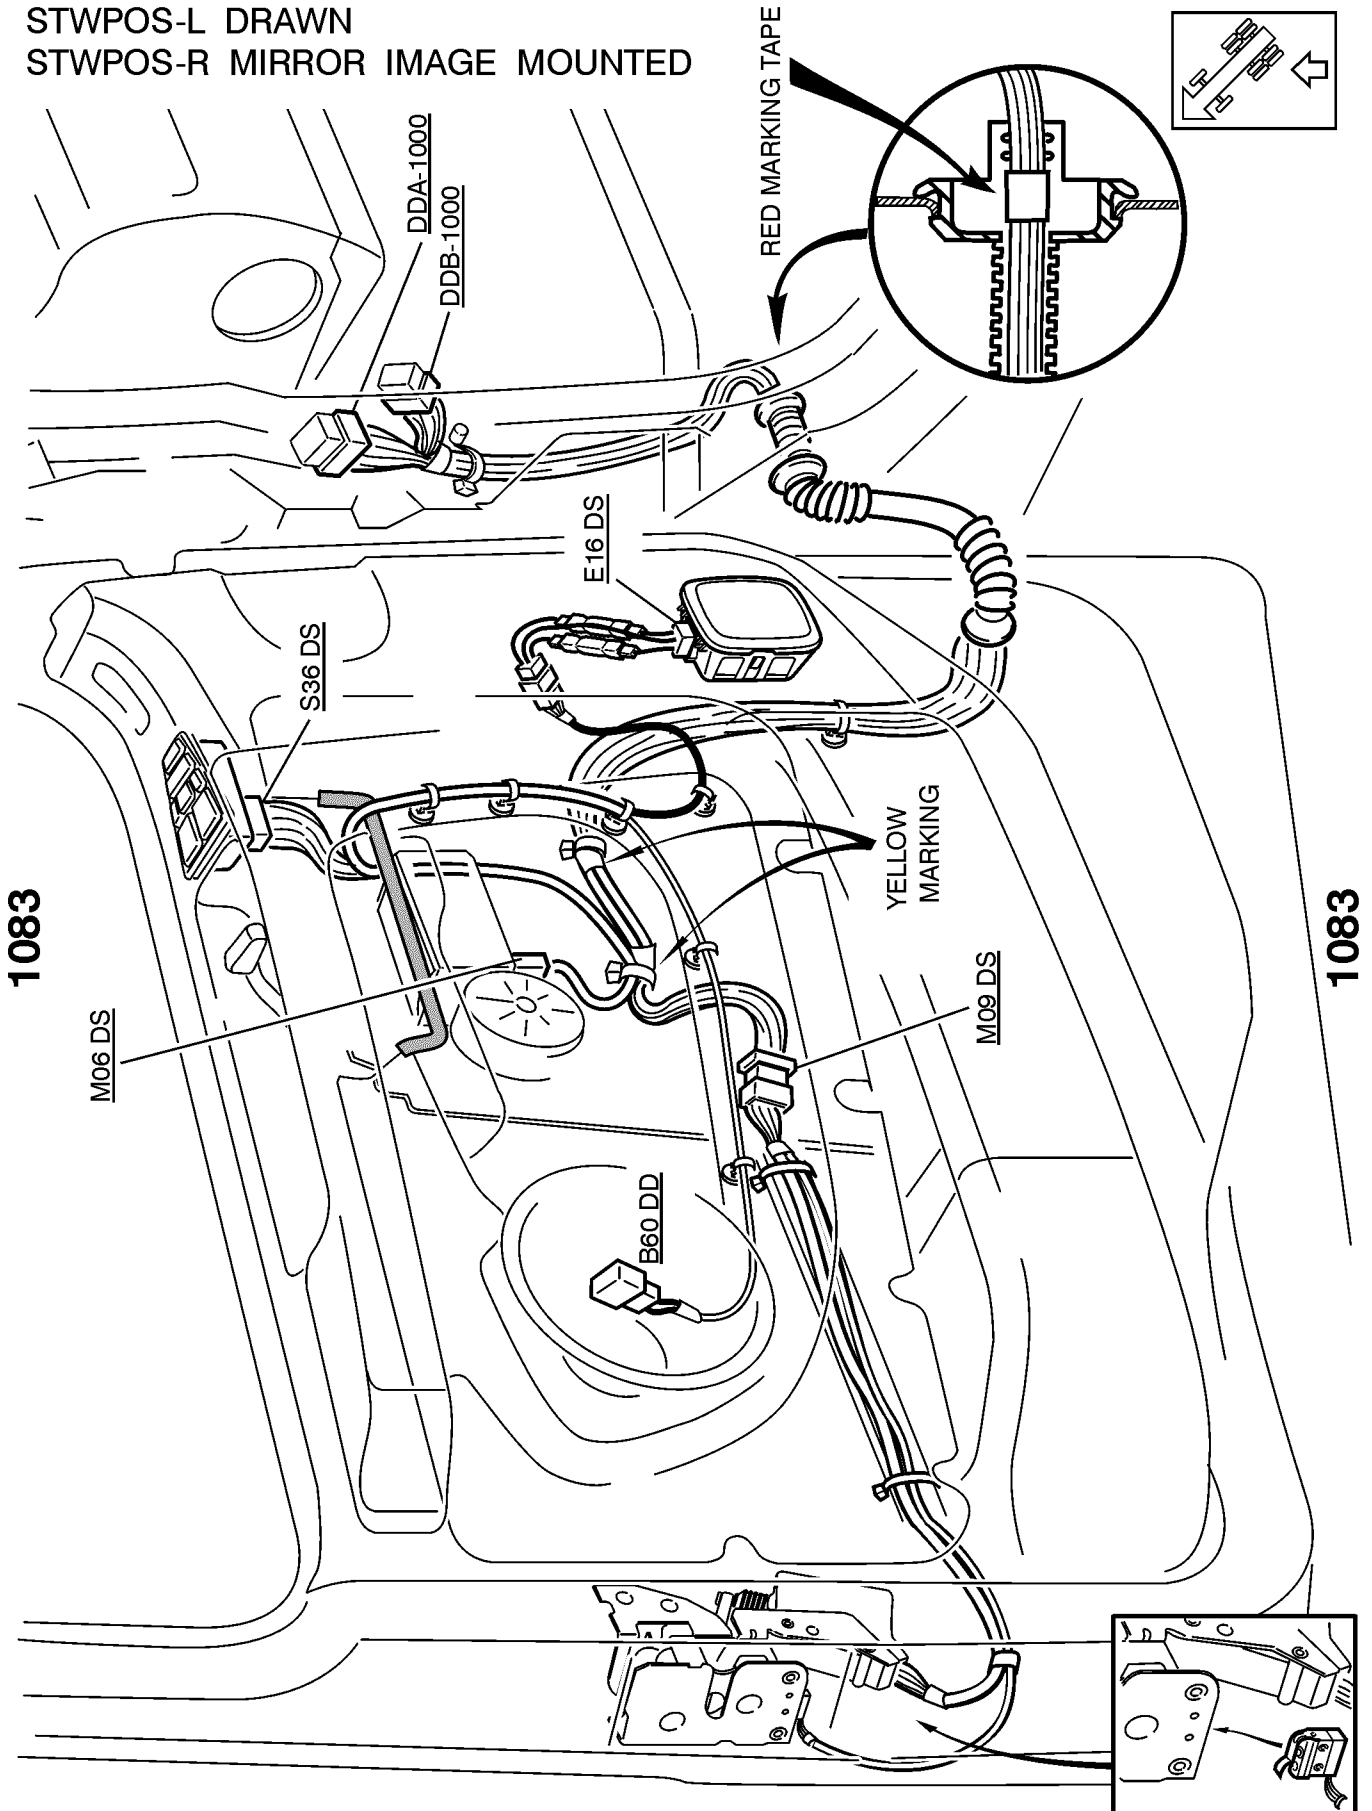


STWPOS-L DRAWN
STWPOS-R MIRROR IMAGE MOUNTED


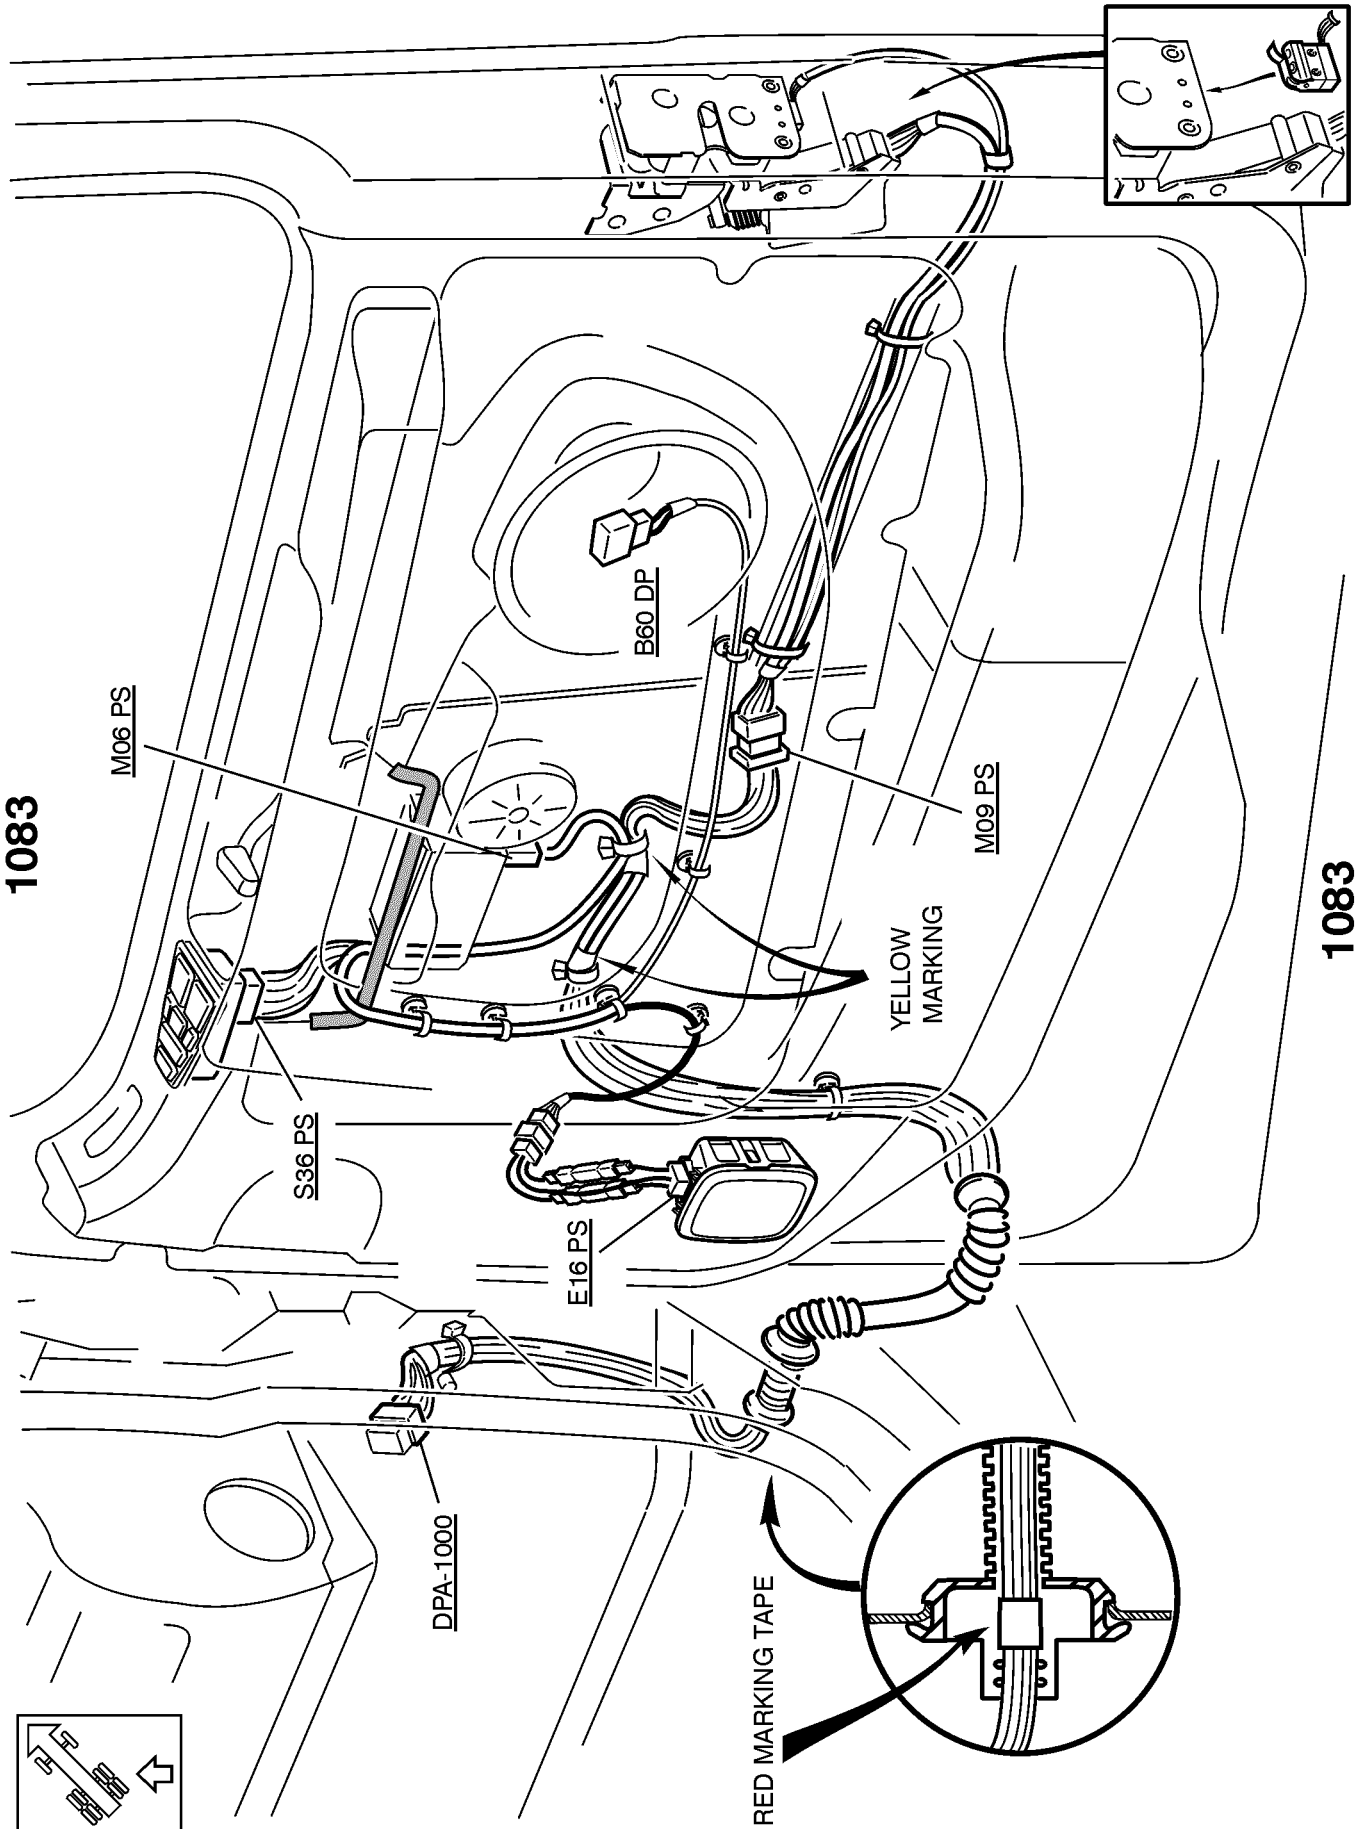


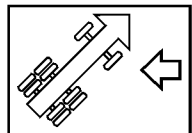


1086 ABS

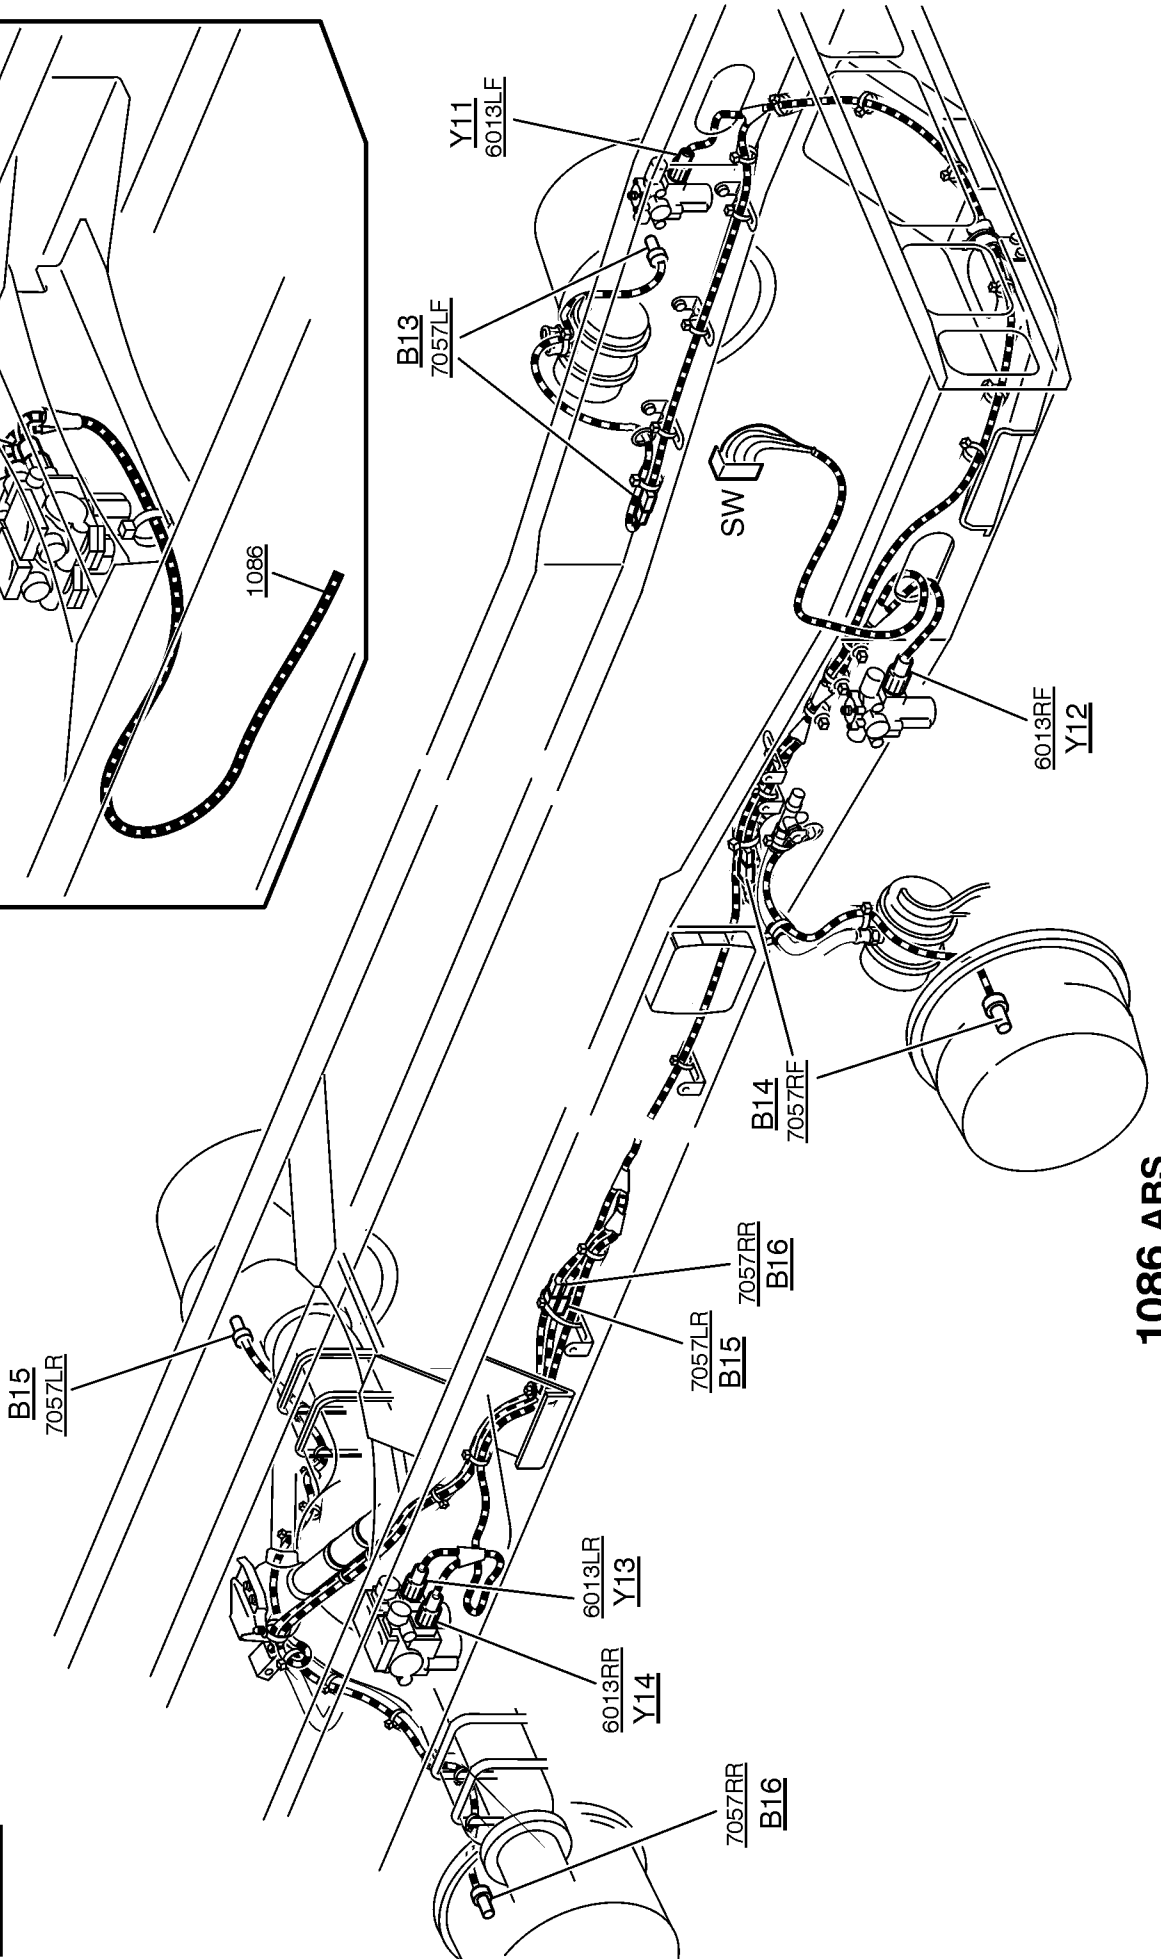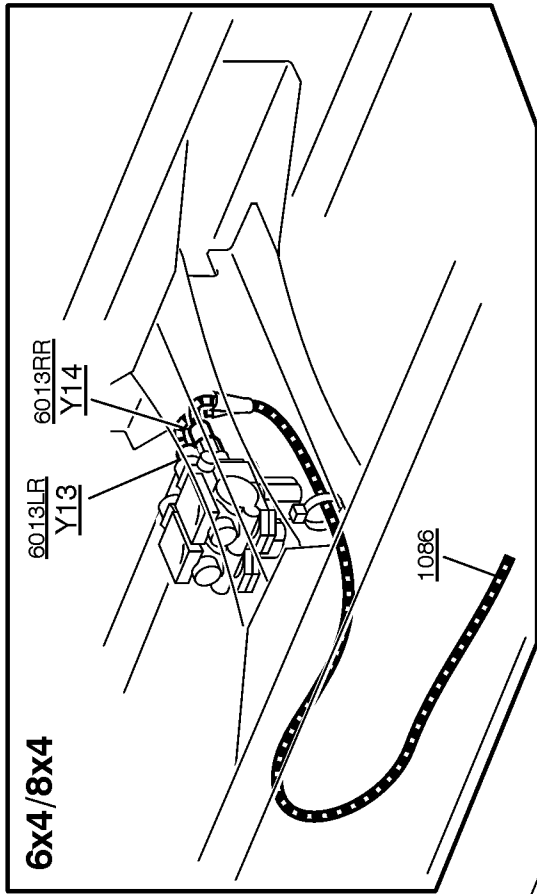


1086 ABS

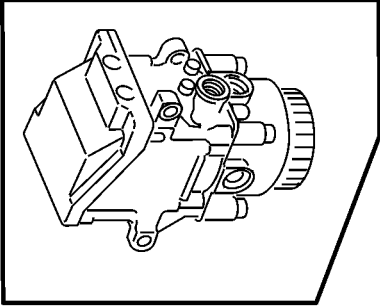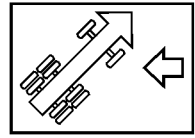


1086 EBS

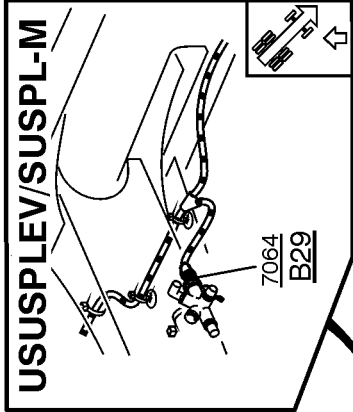



USUSPLEV/SUSPL-M

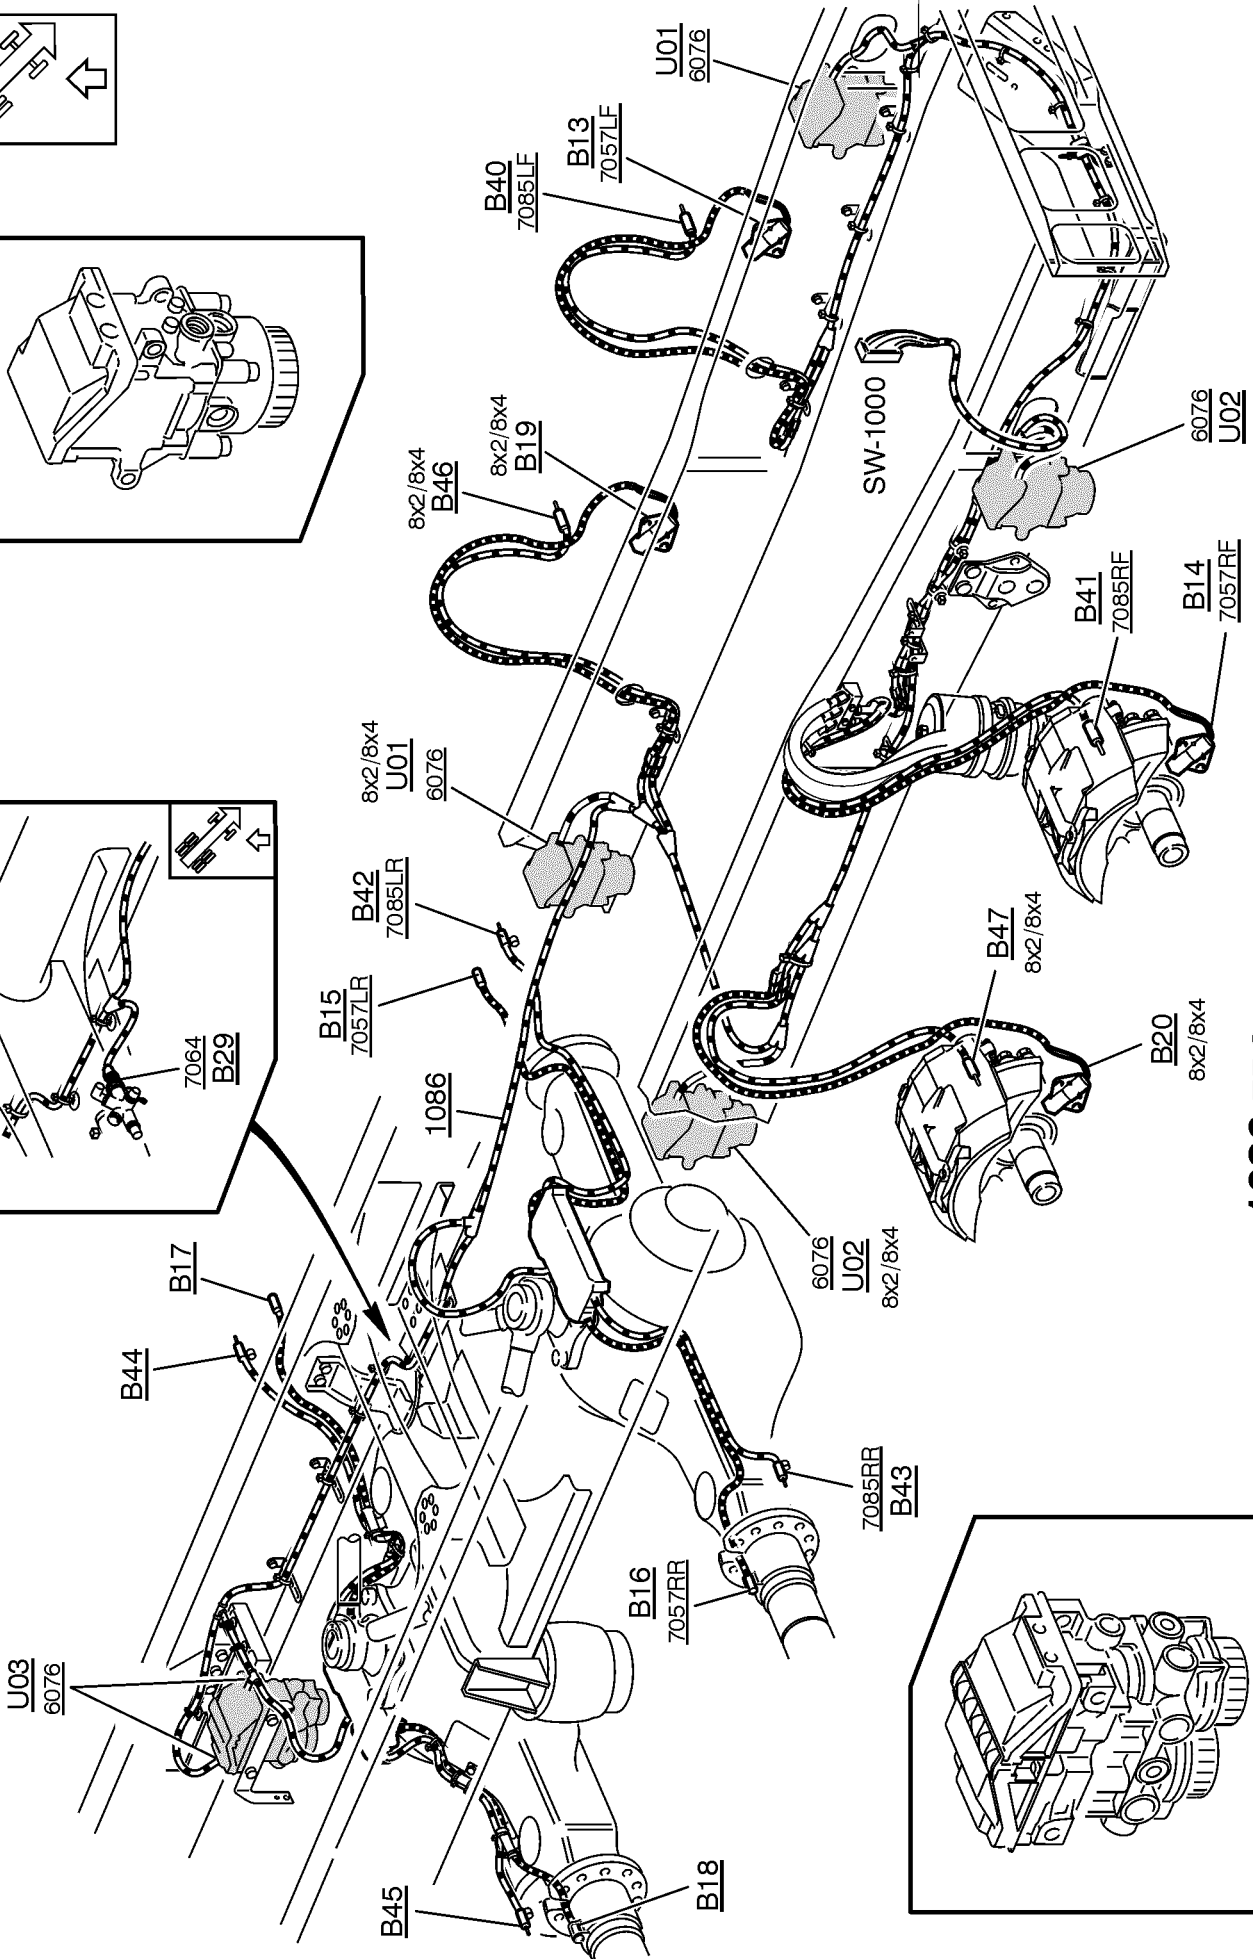

1086 EBS

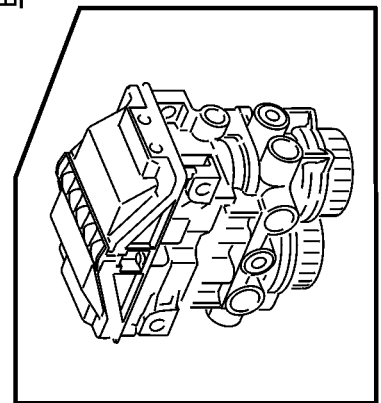


PUSHER

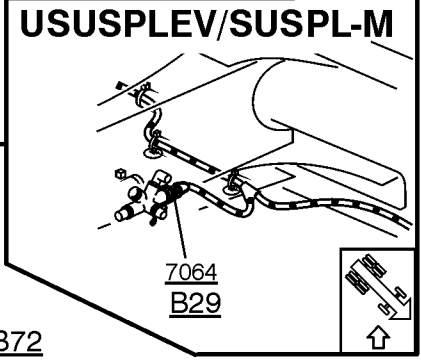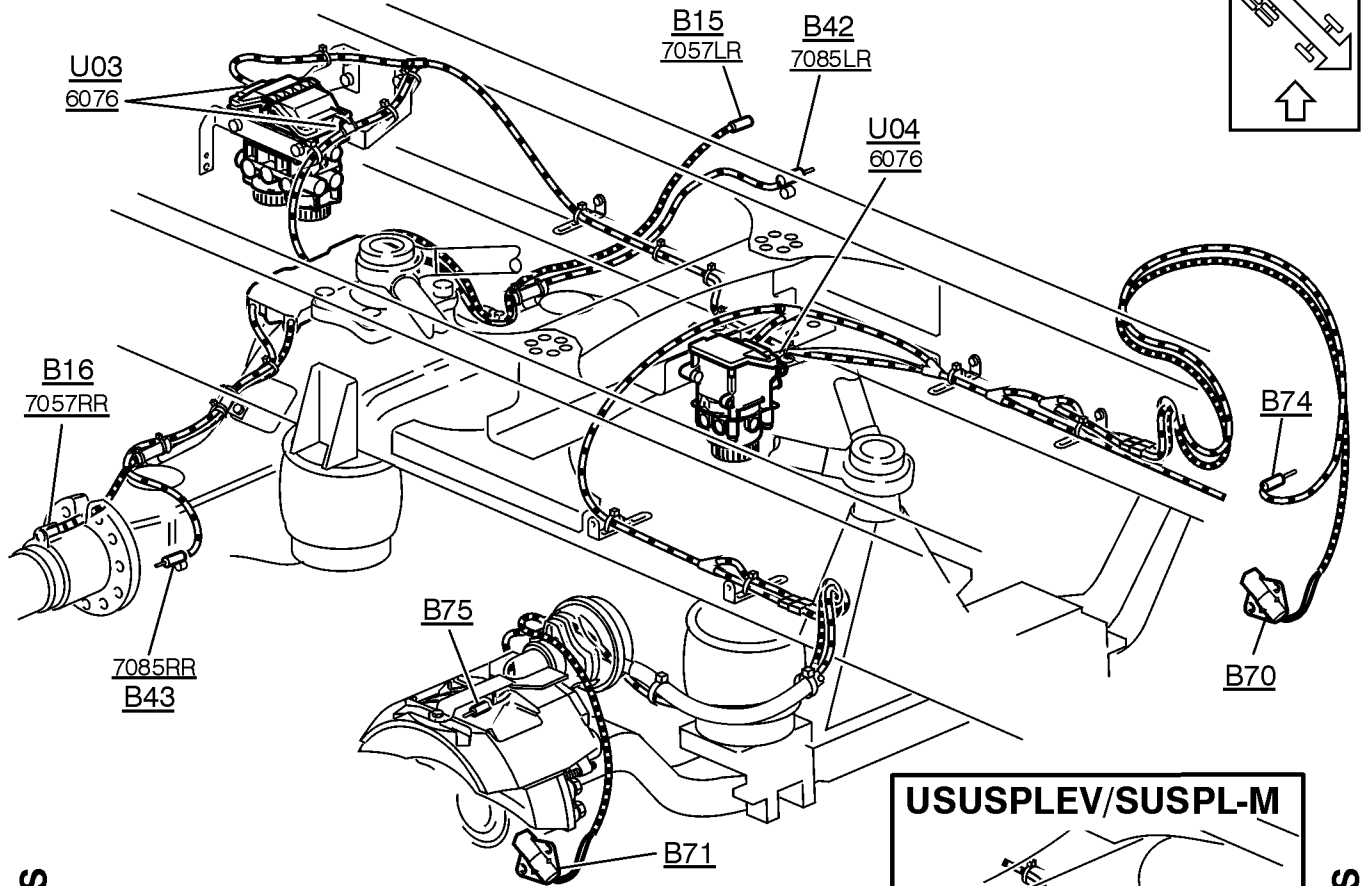


1086 EBS

1086 EBS


TAG


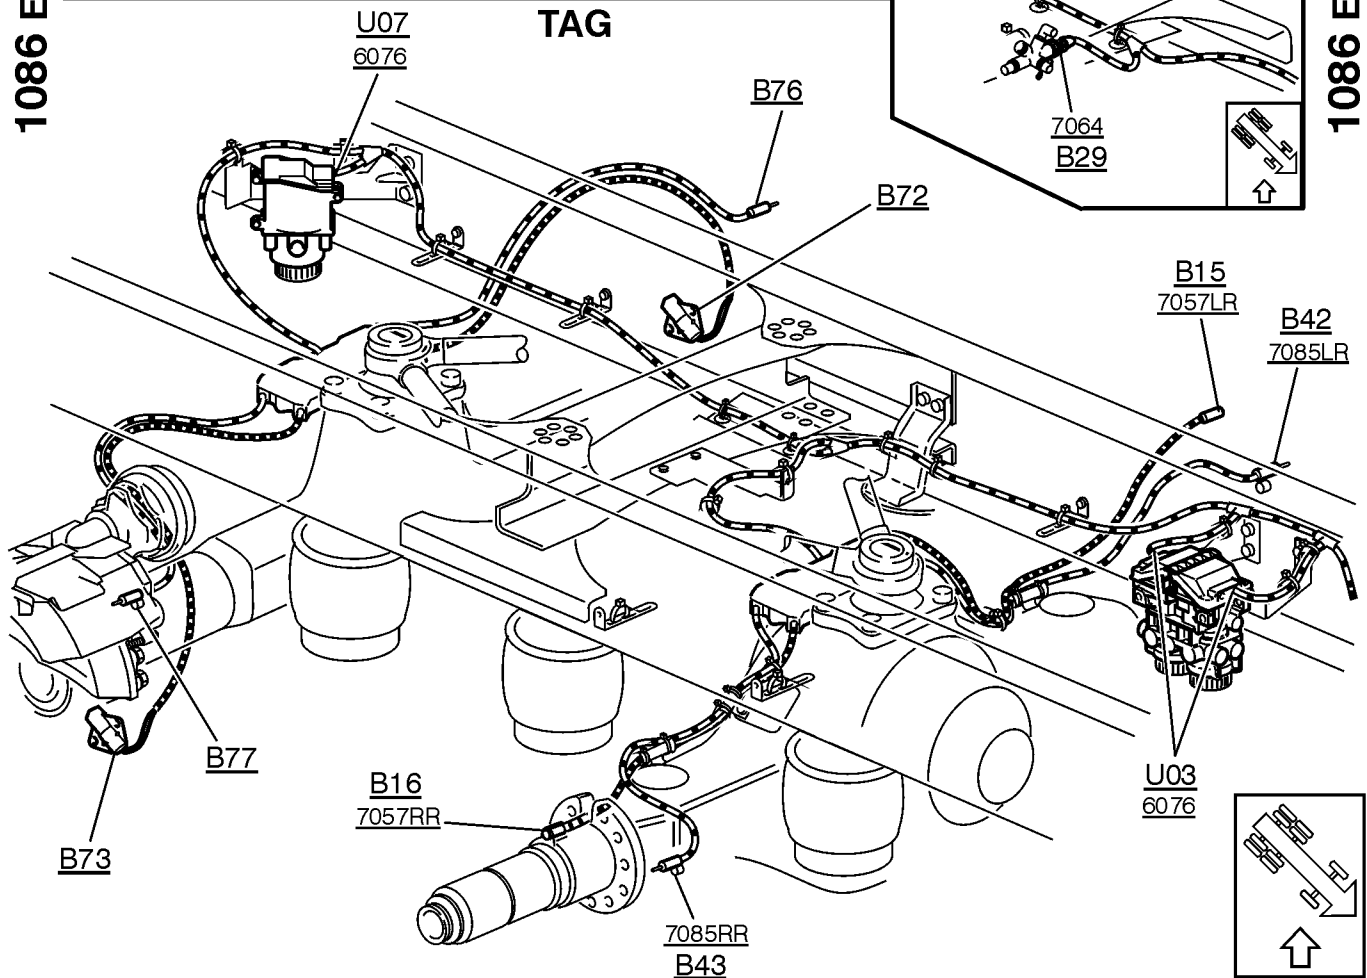


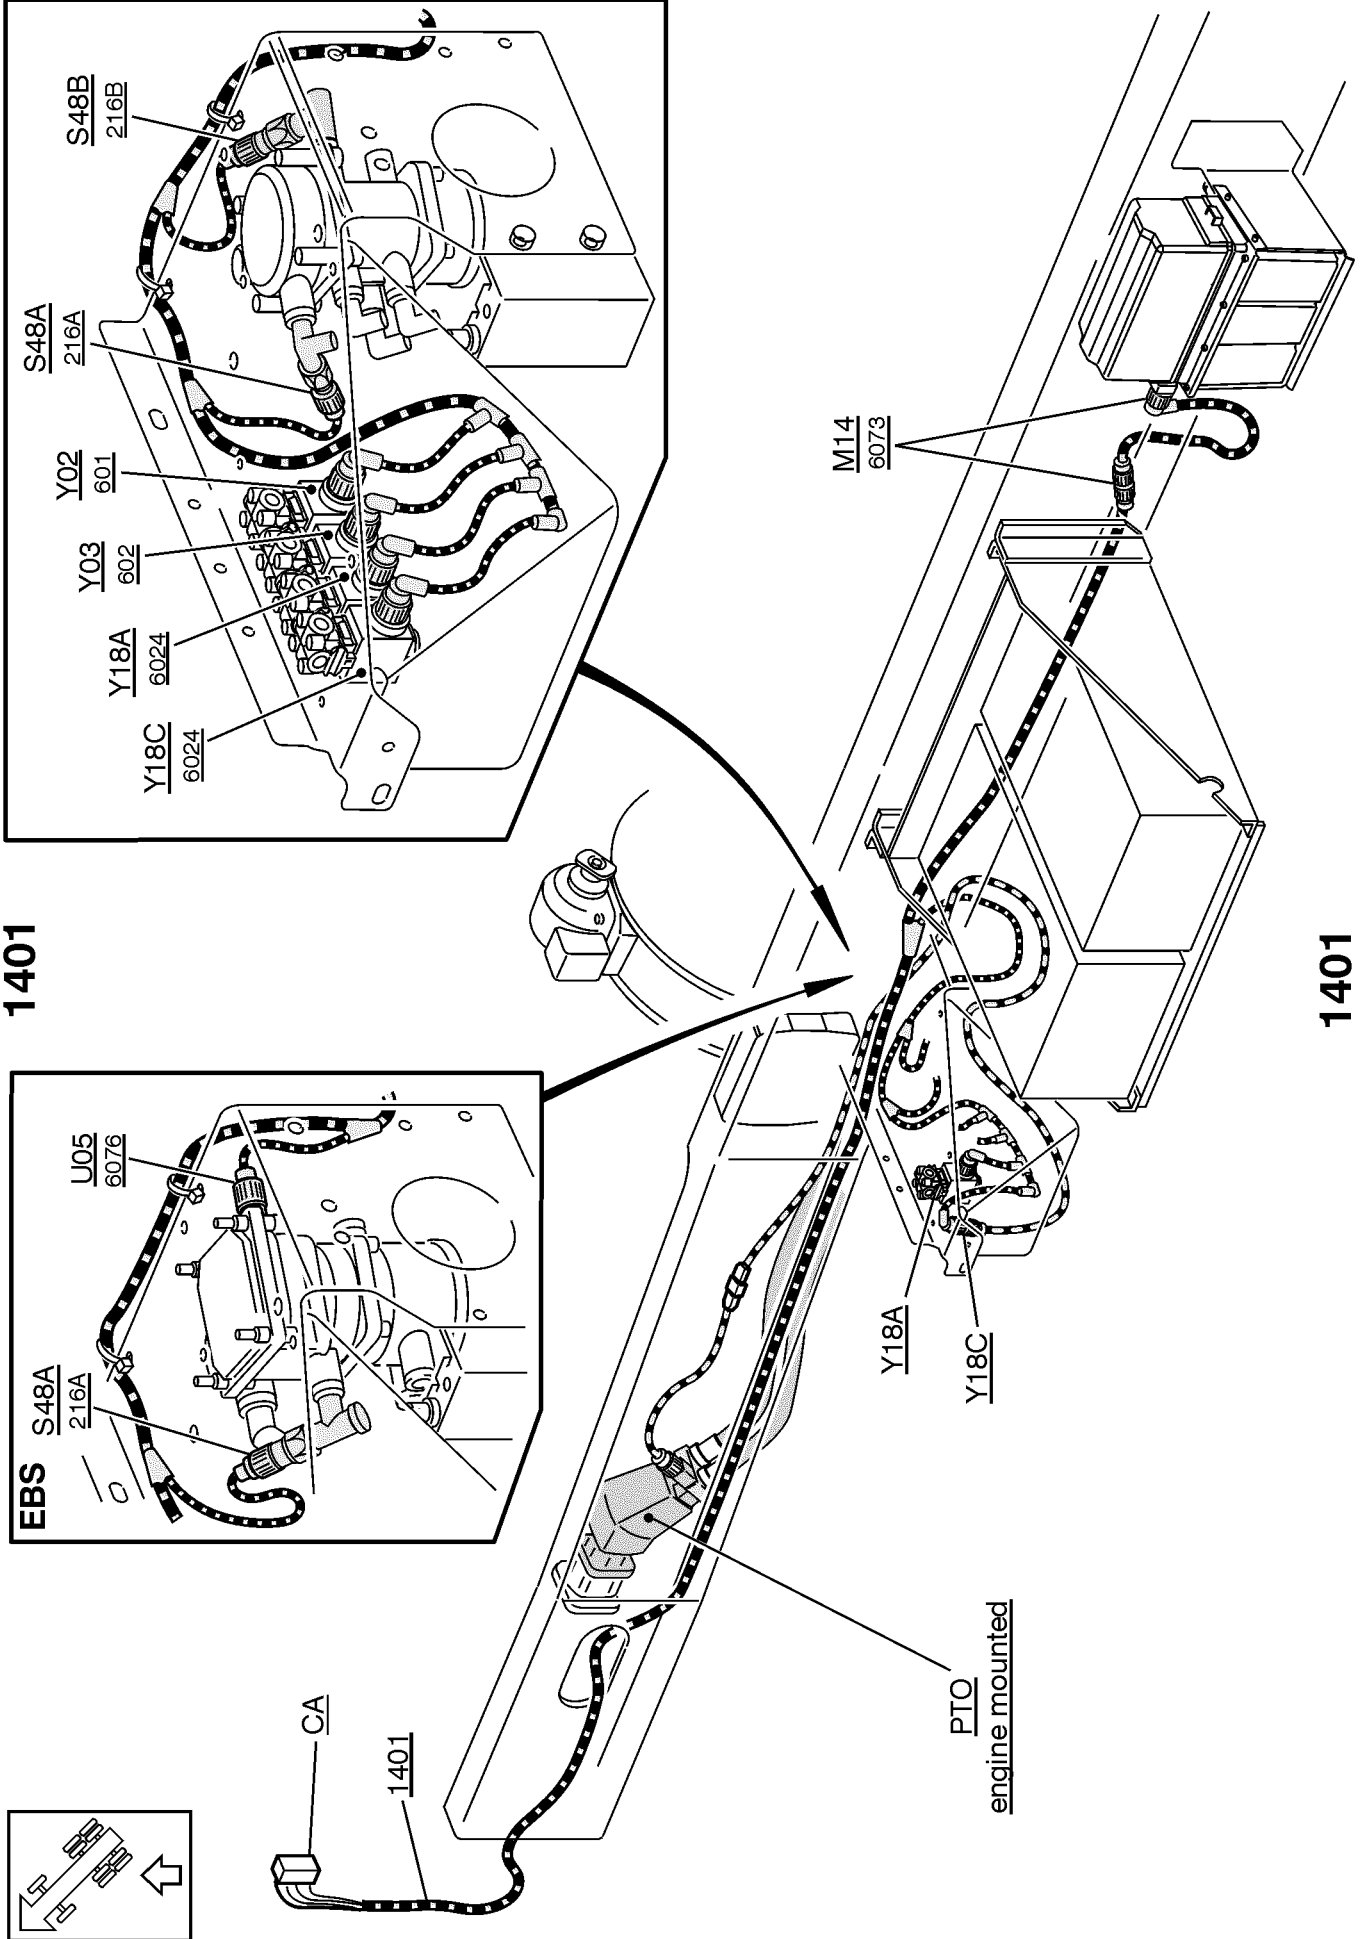

1401



1401

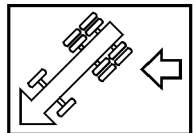


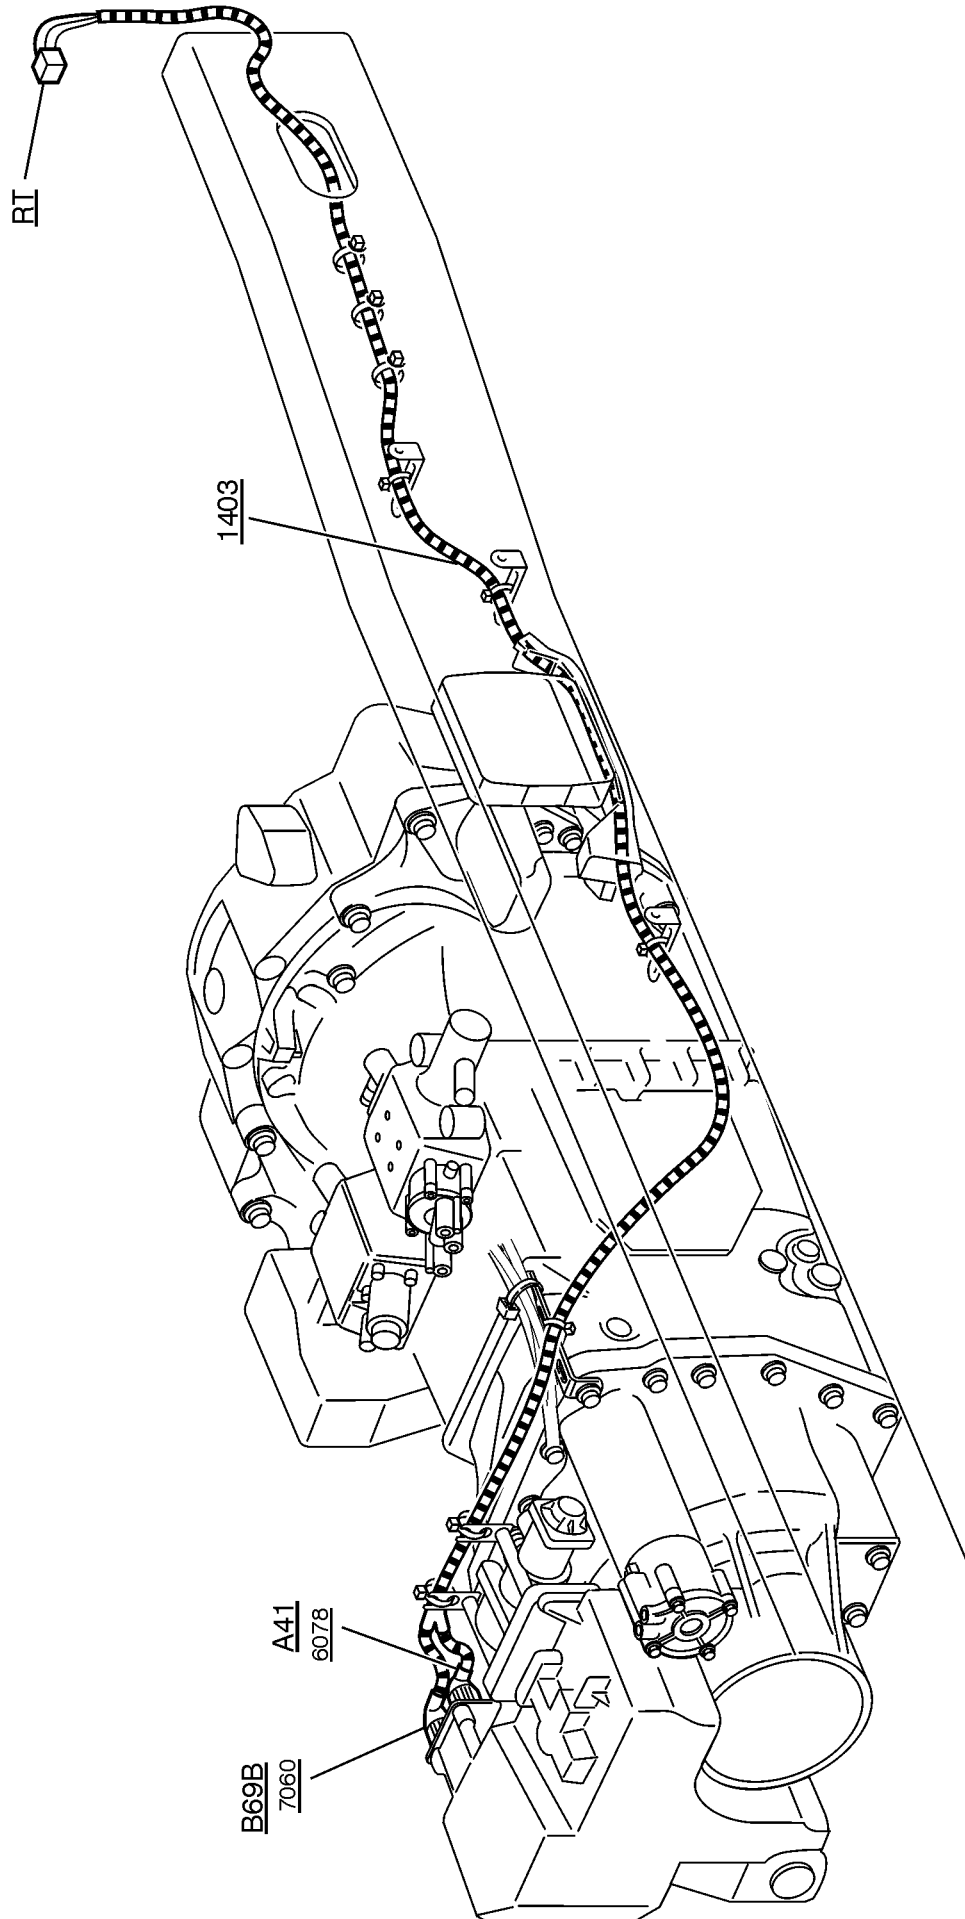
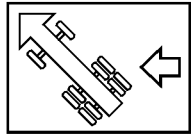


1403


1403

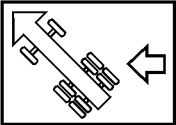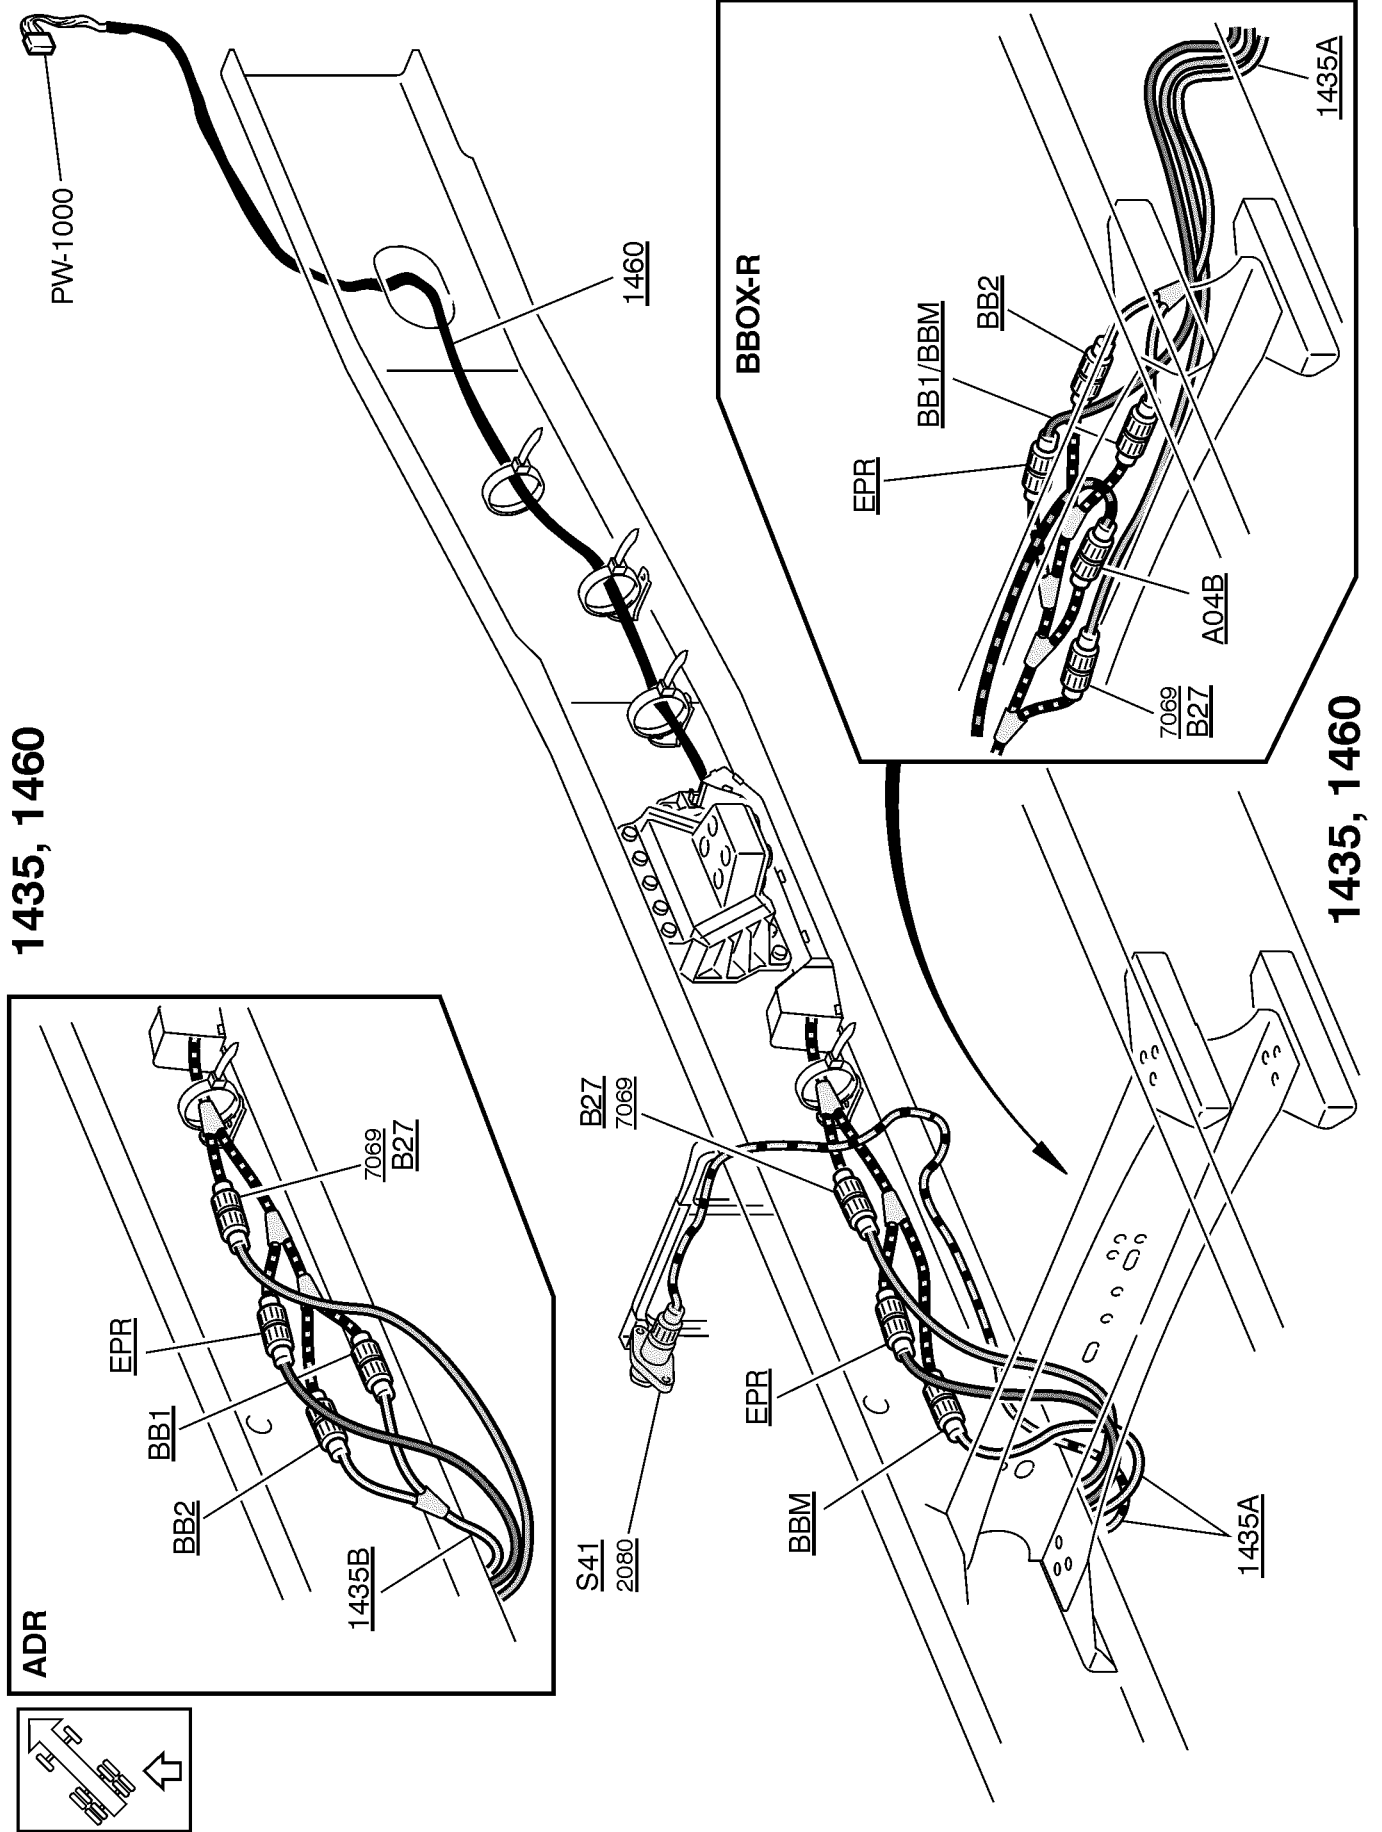

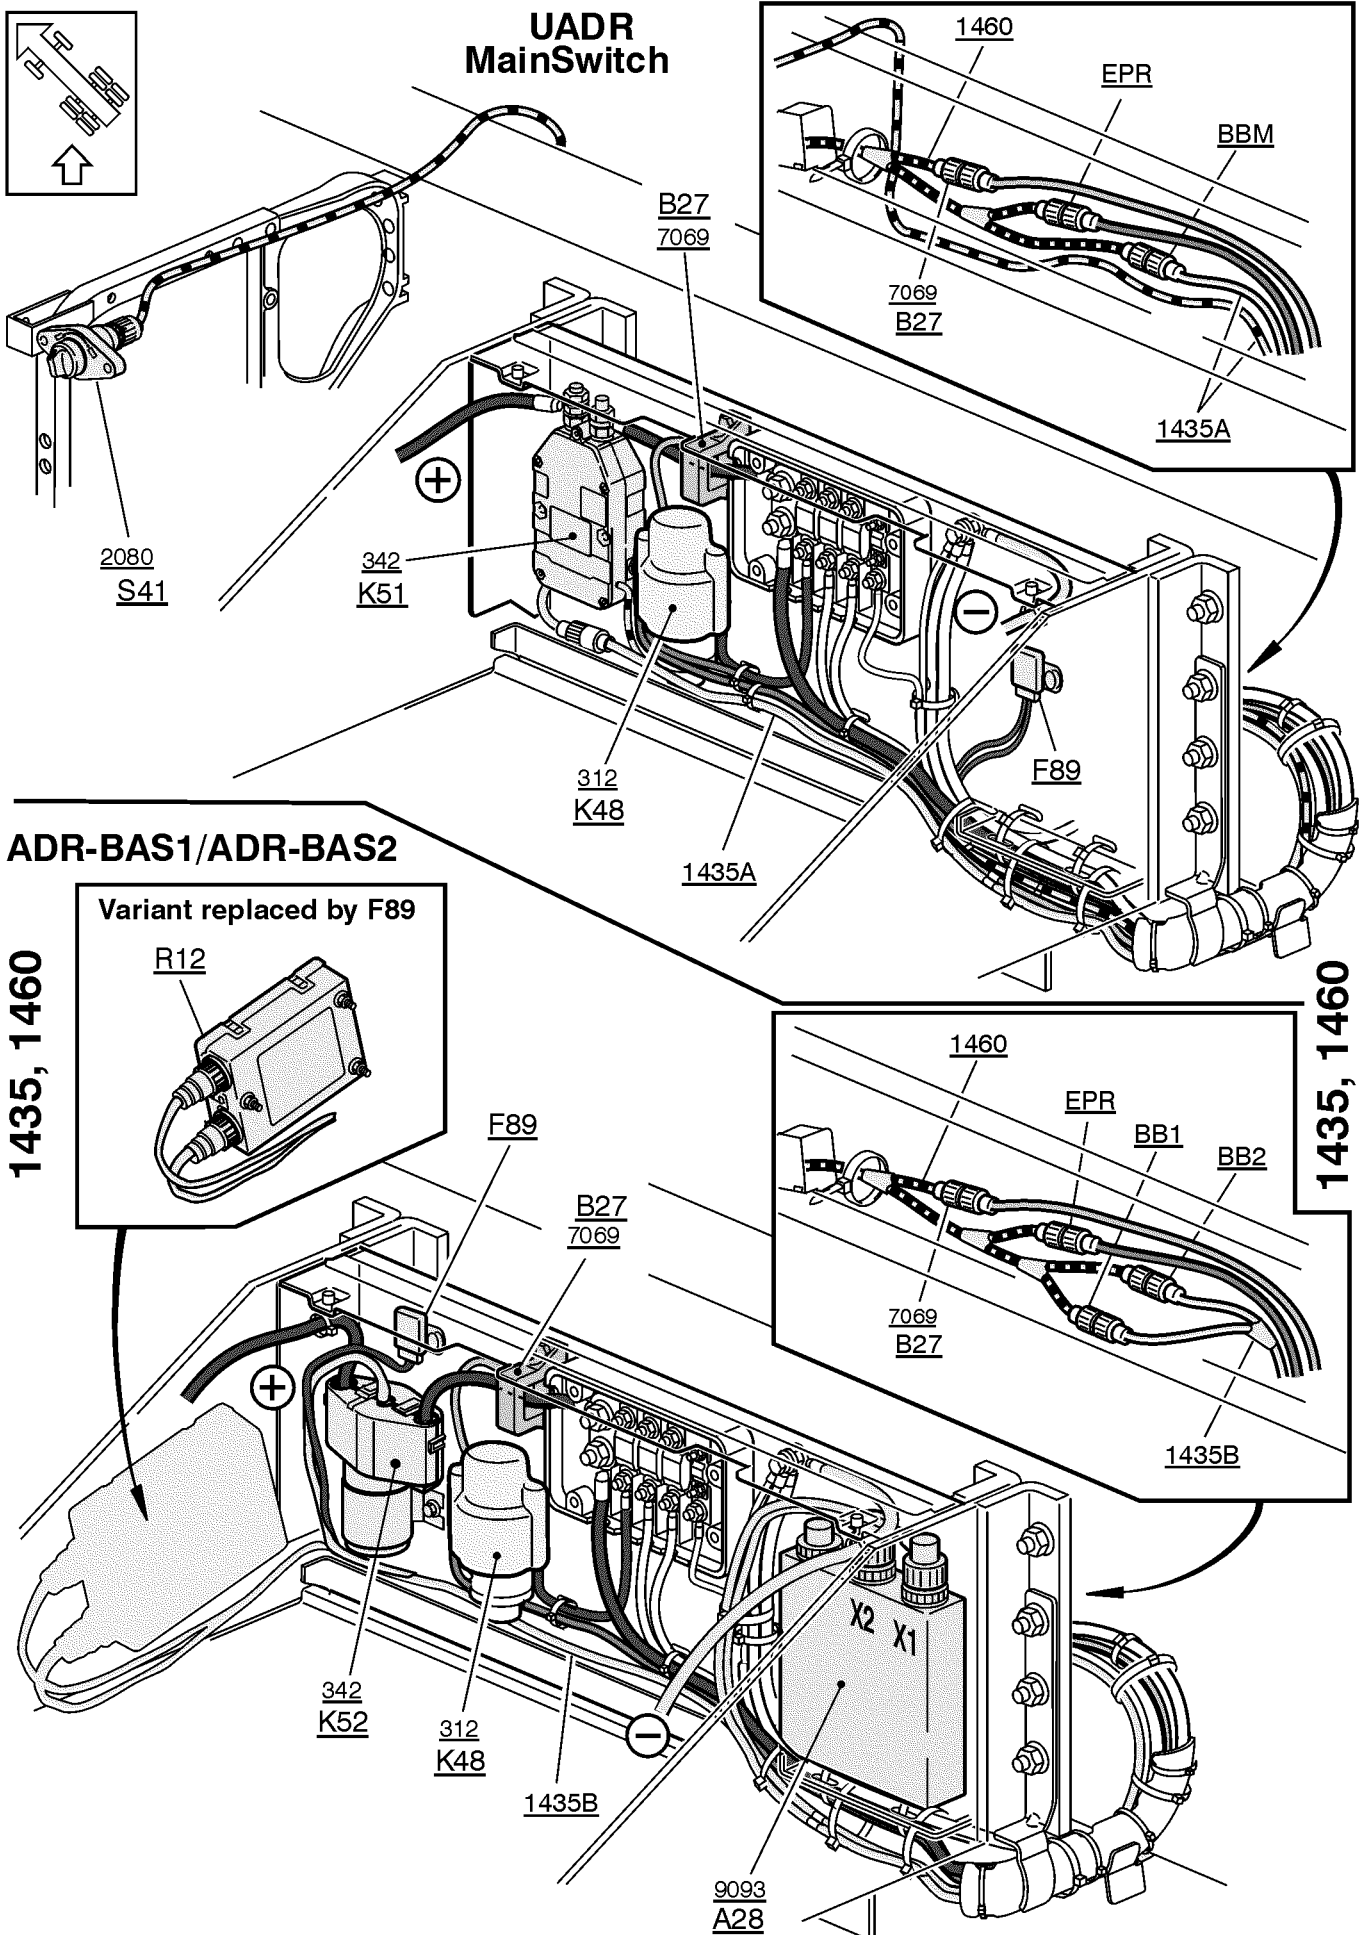


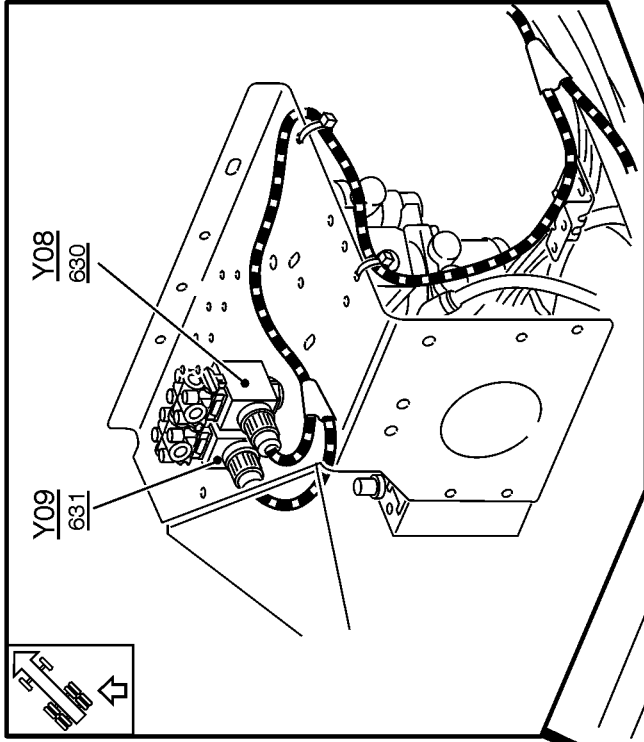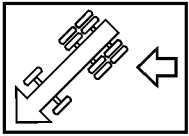

1458

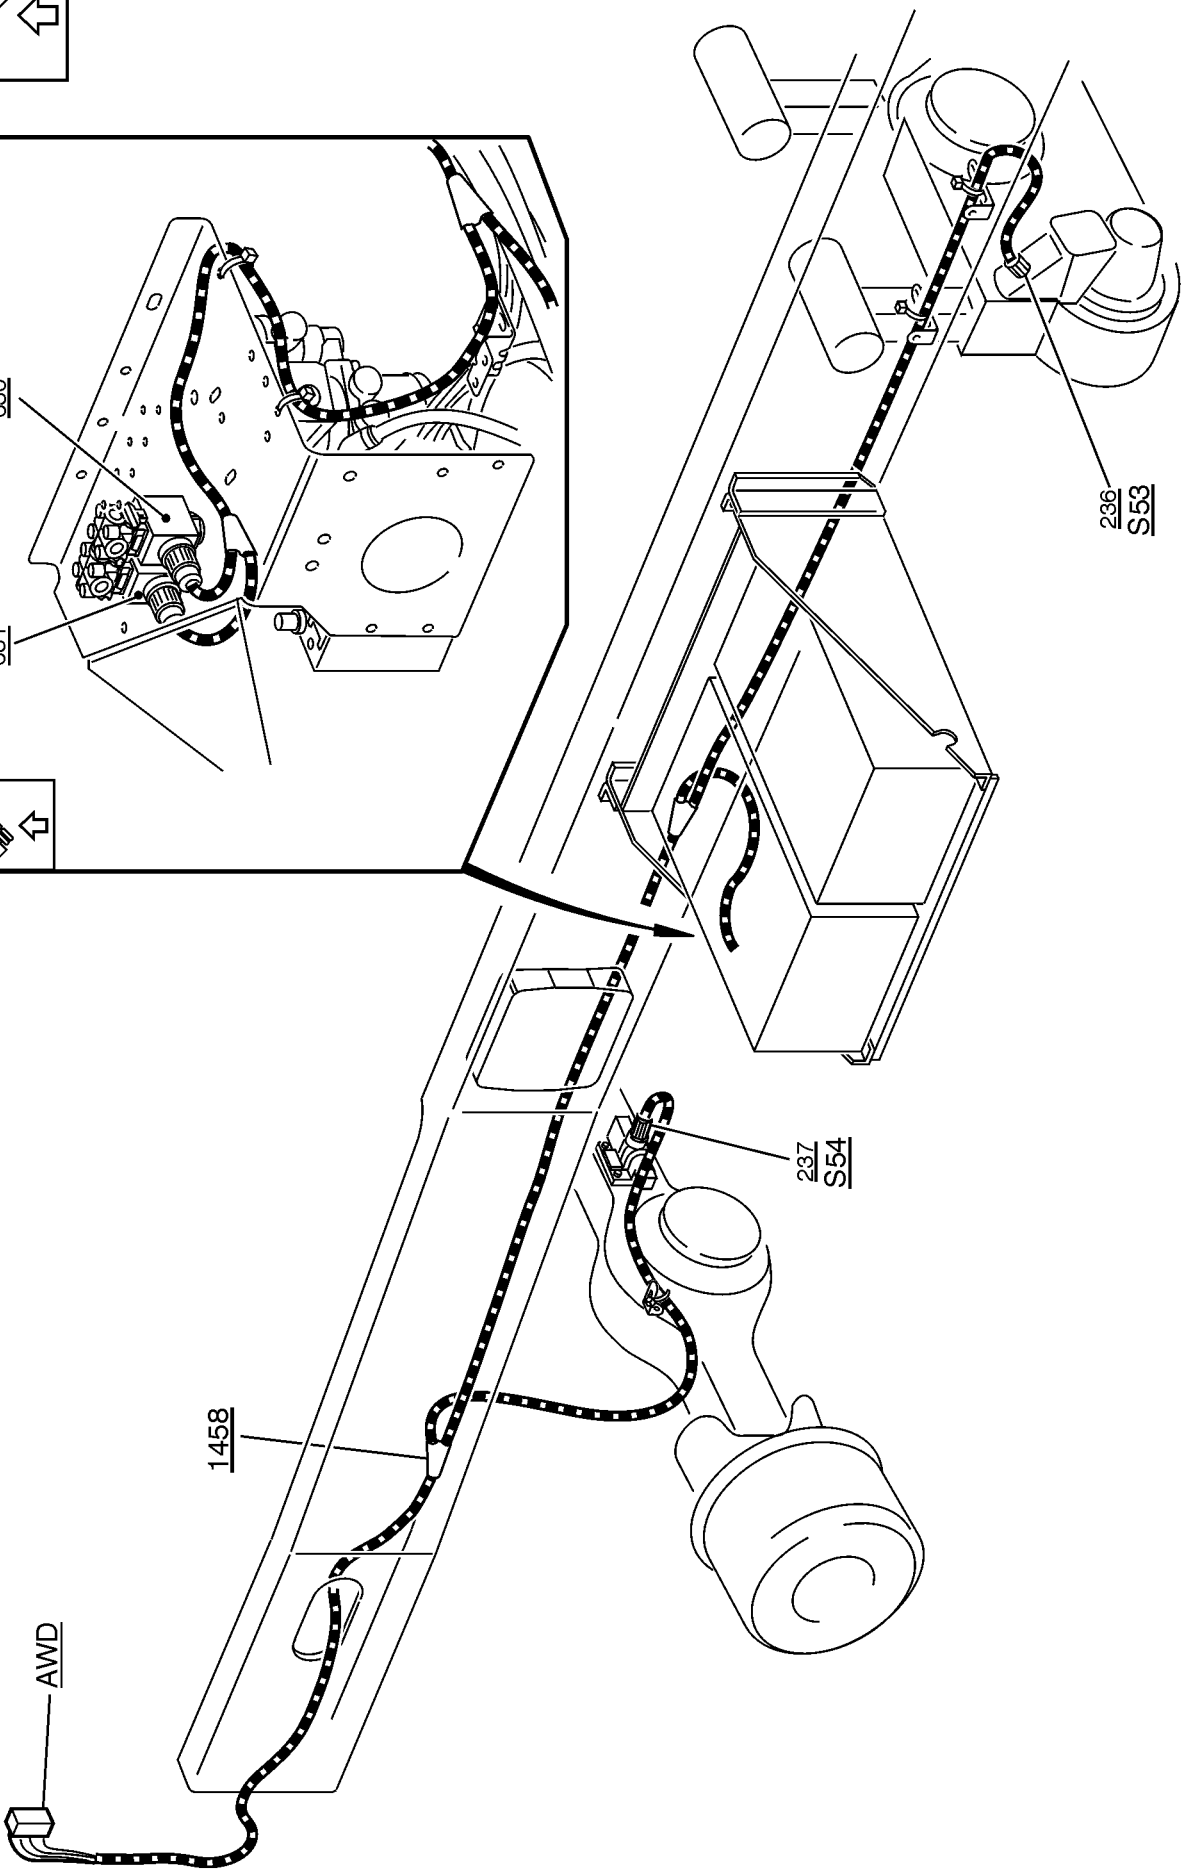

1458

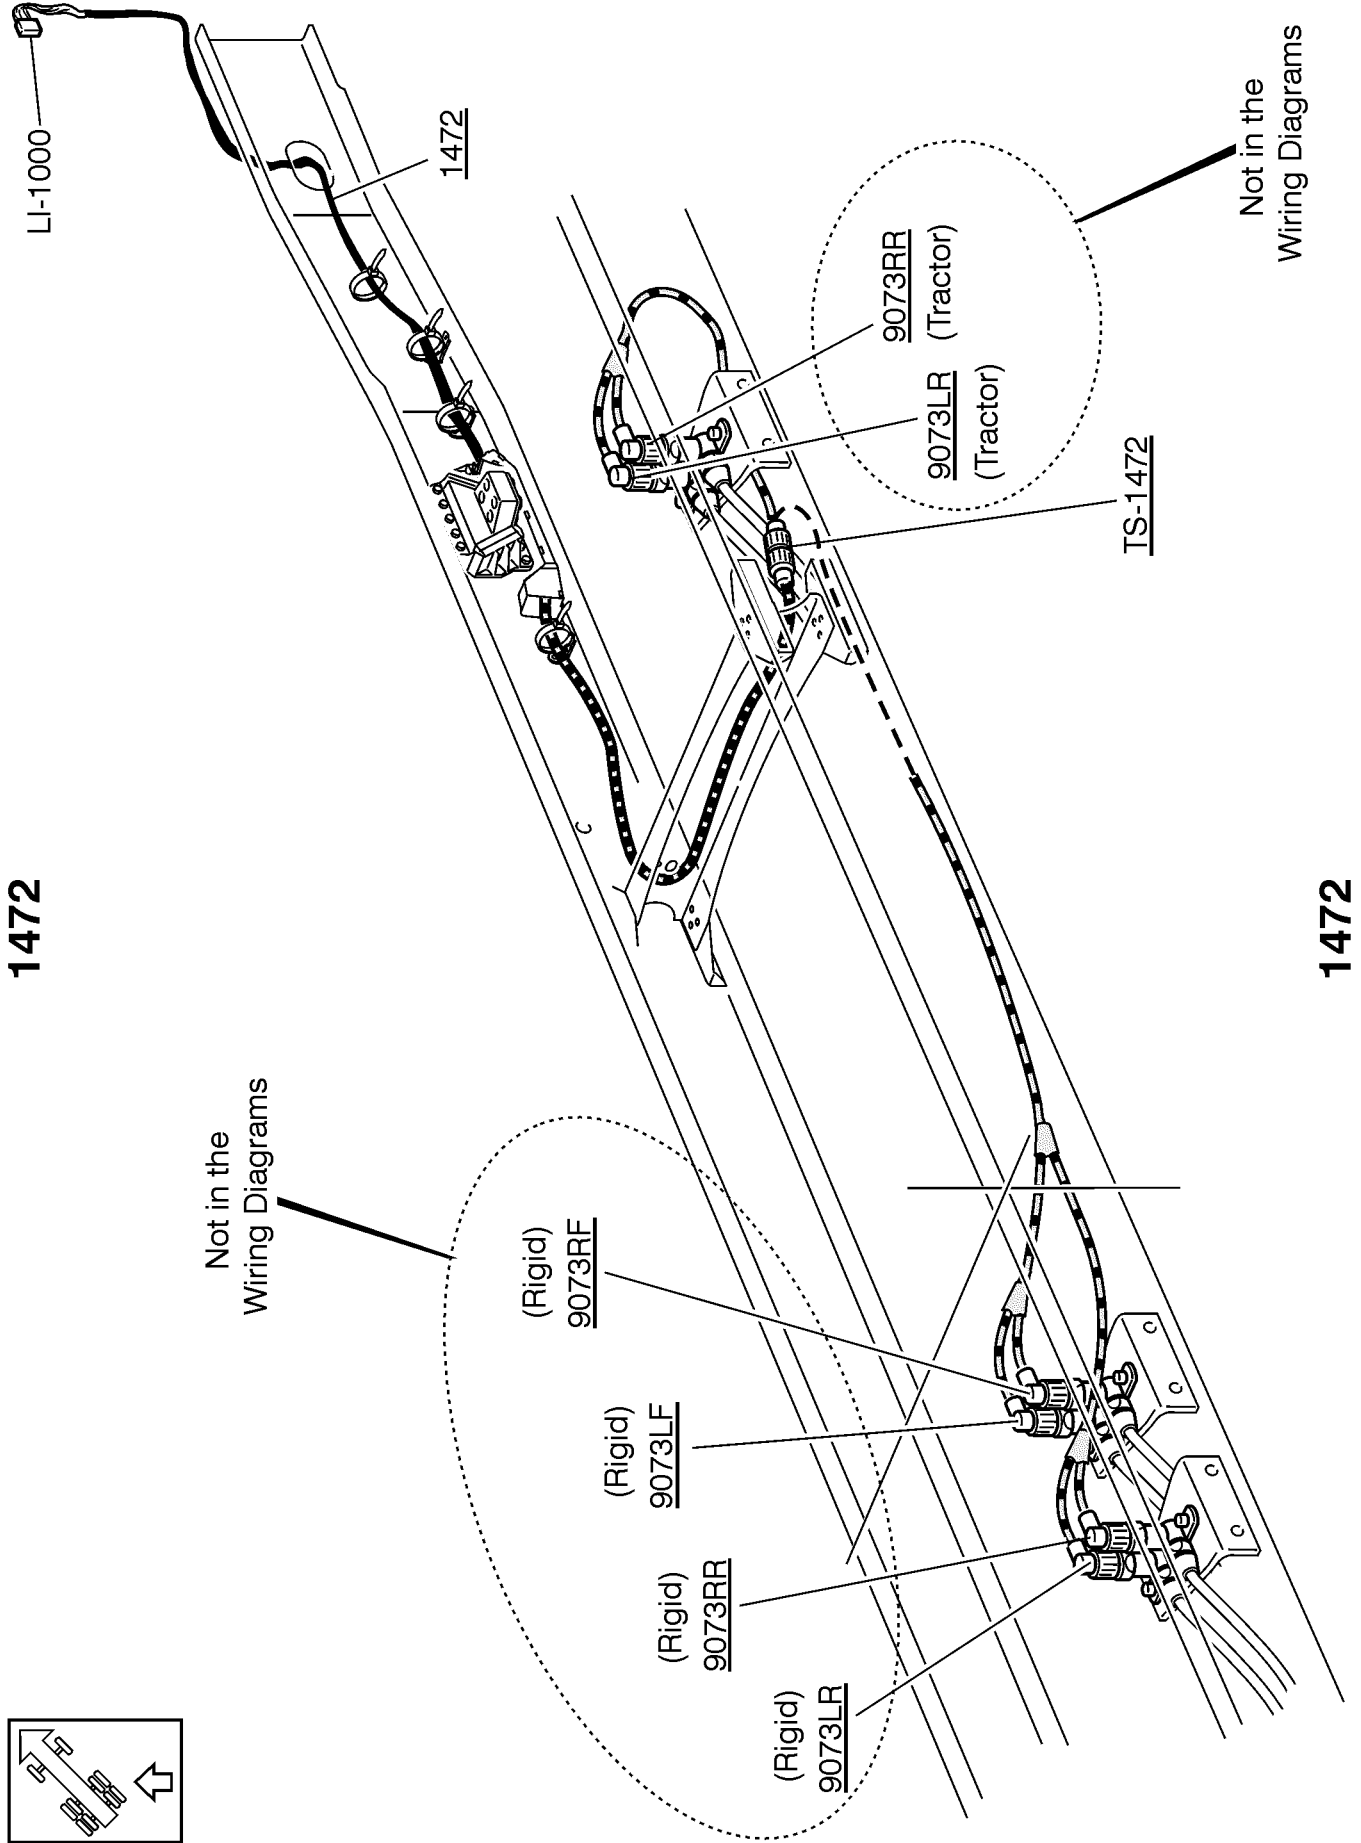



1472


1472

Not in the
Wiring Diagrams

Not in the
Wiring Diagrams

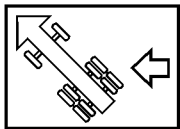


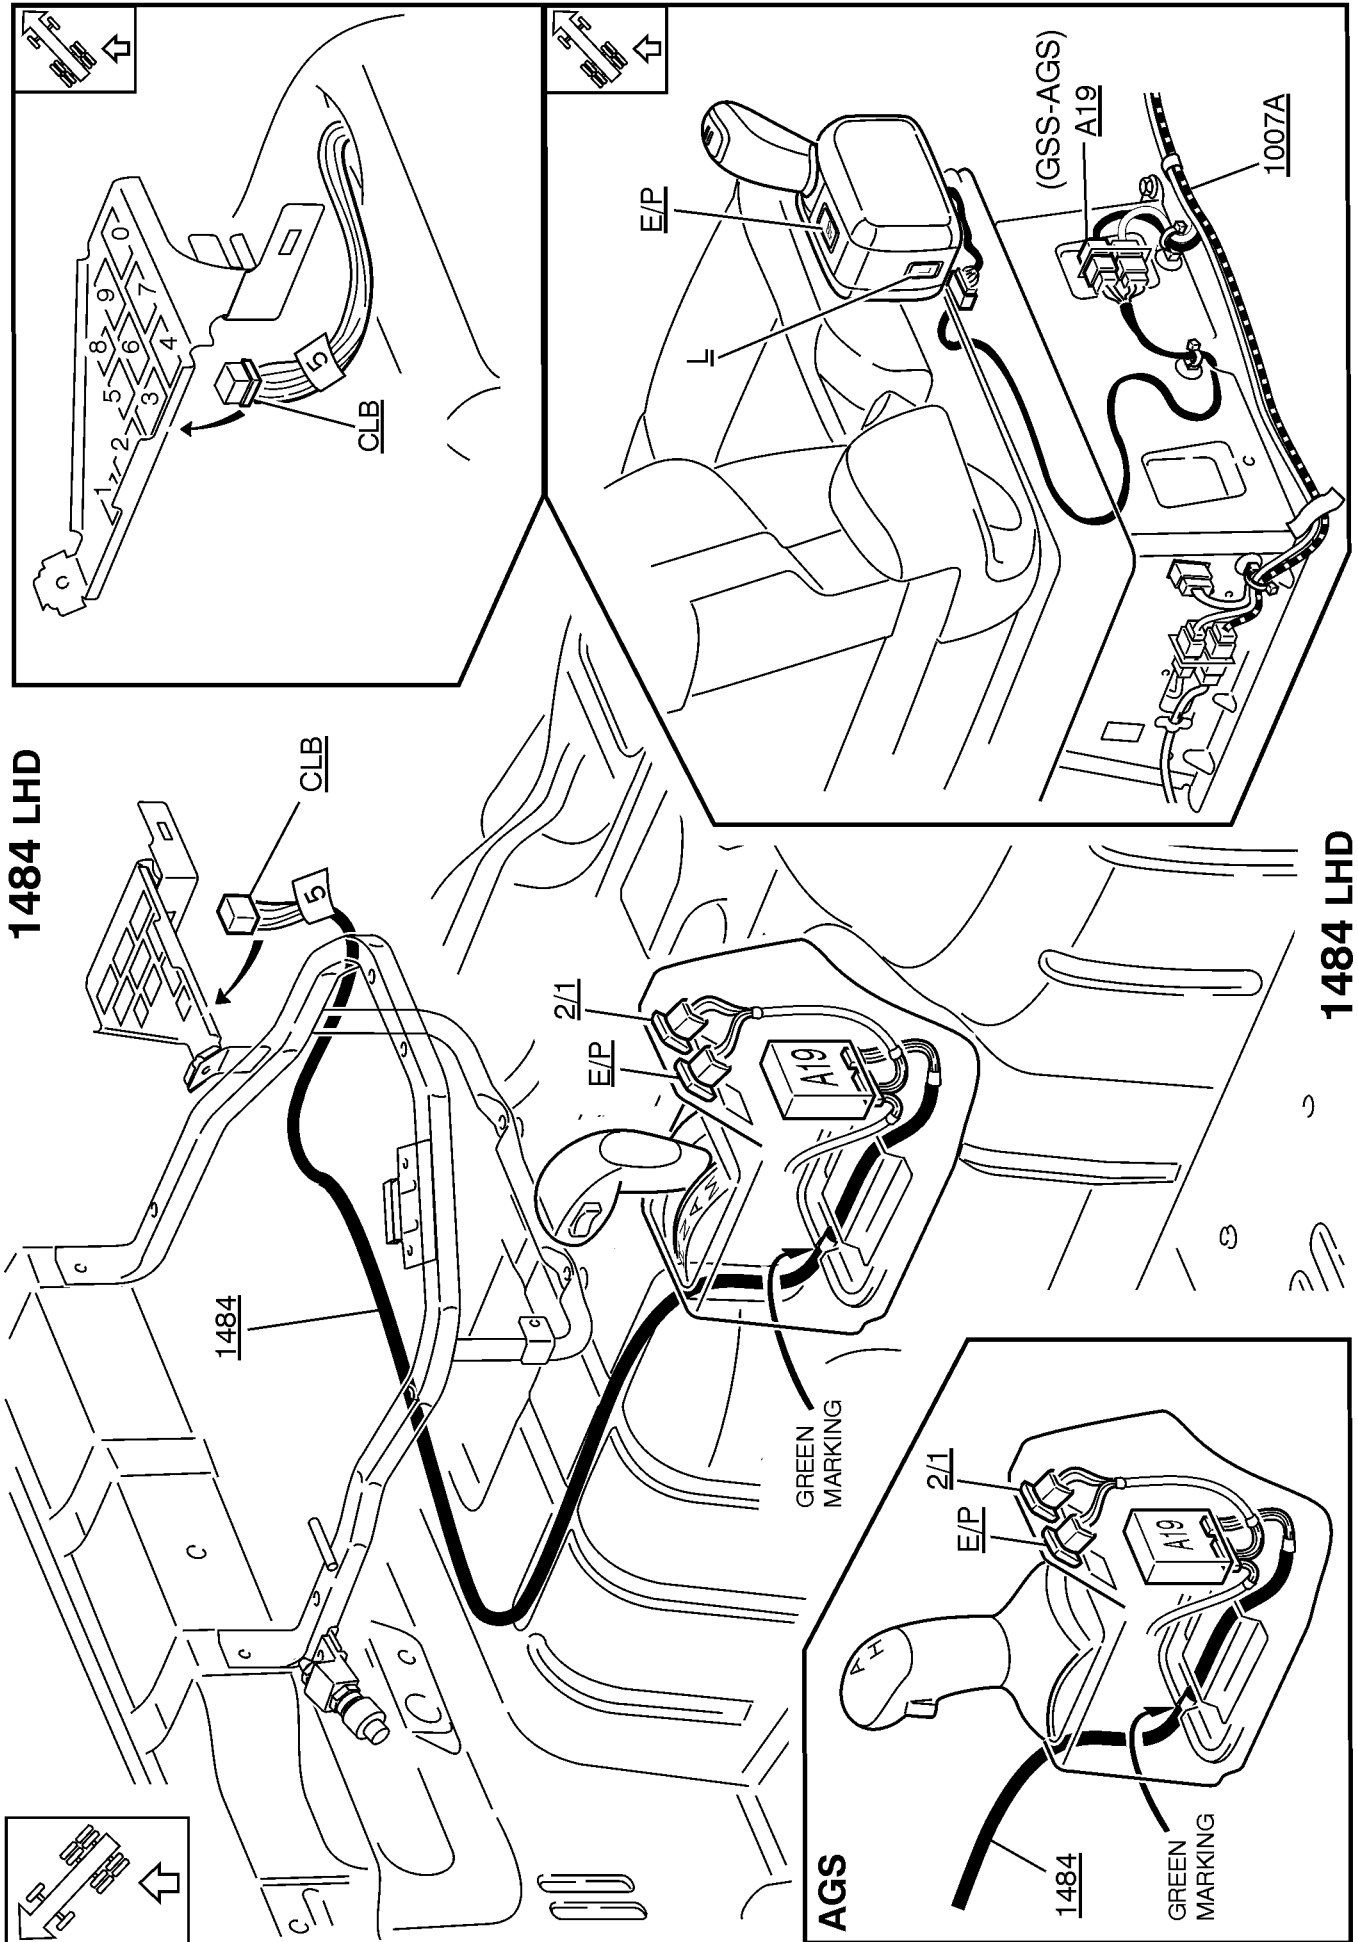

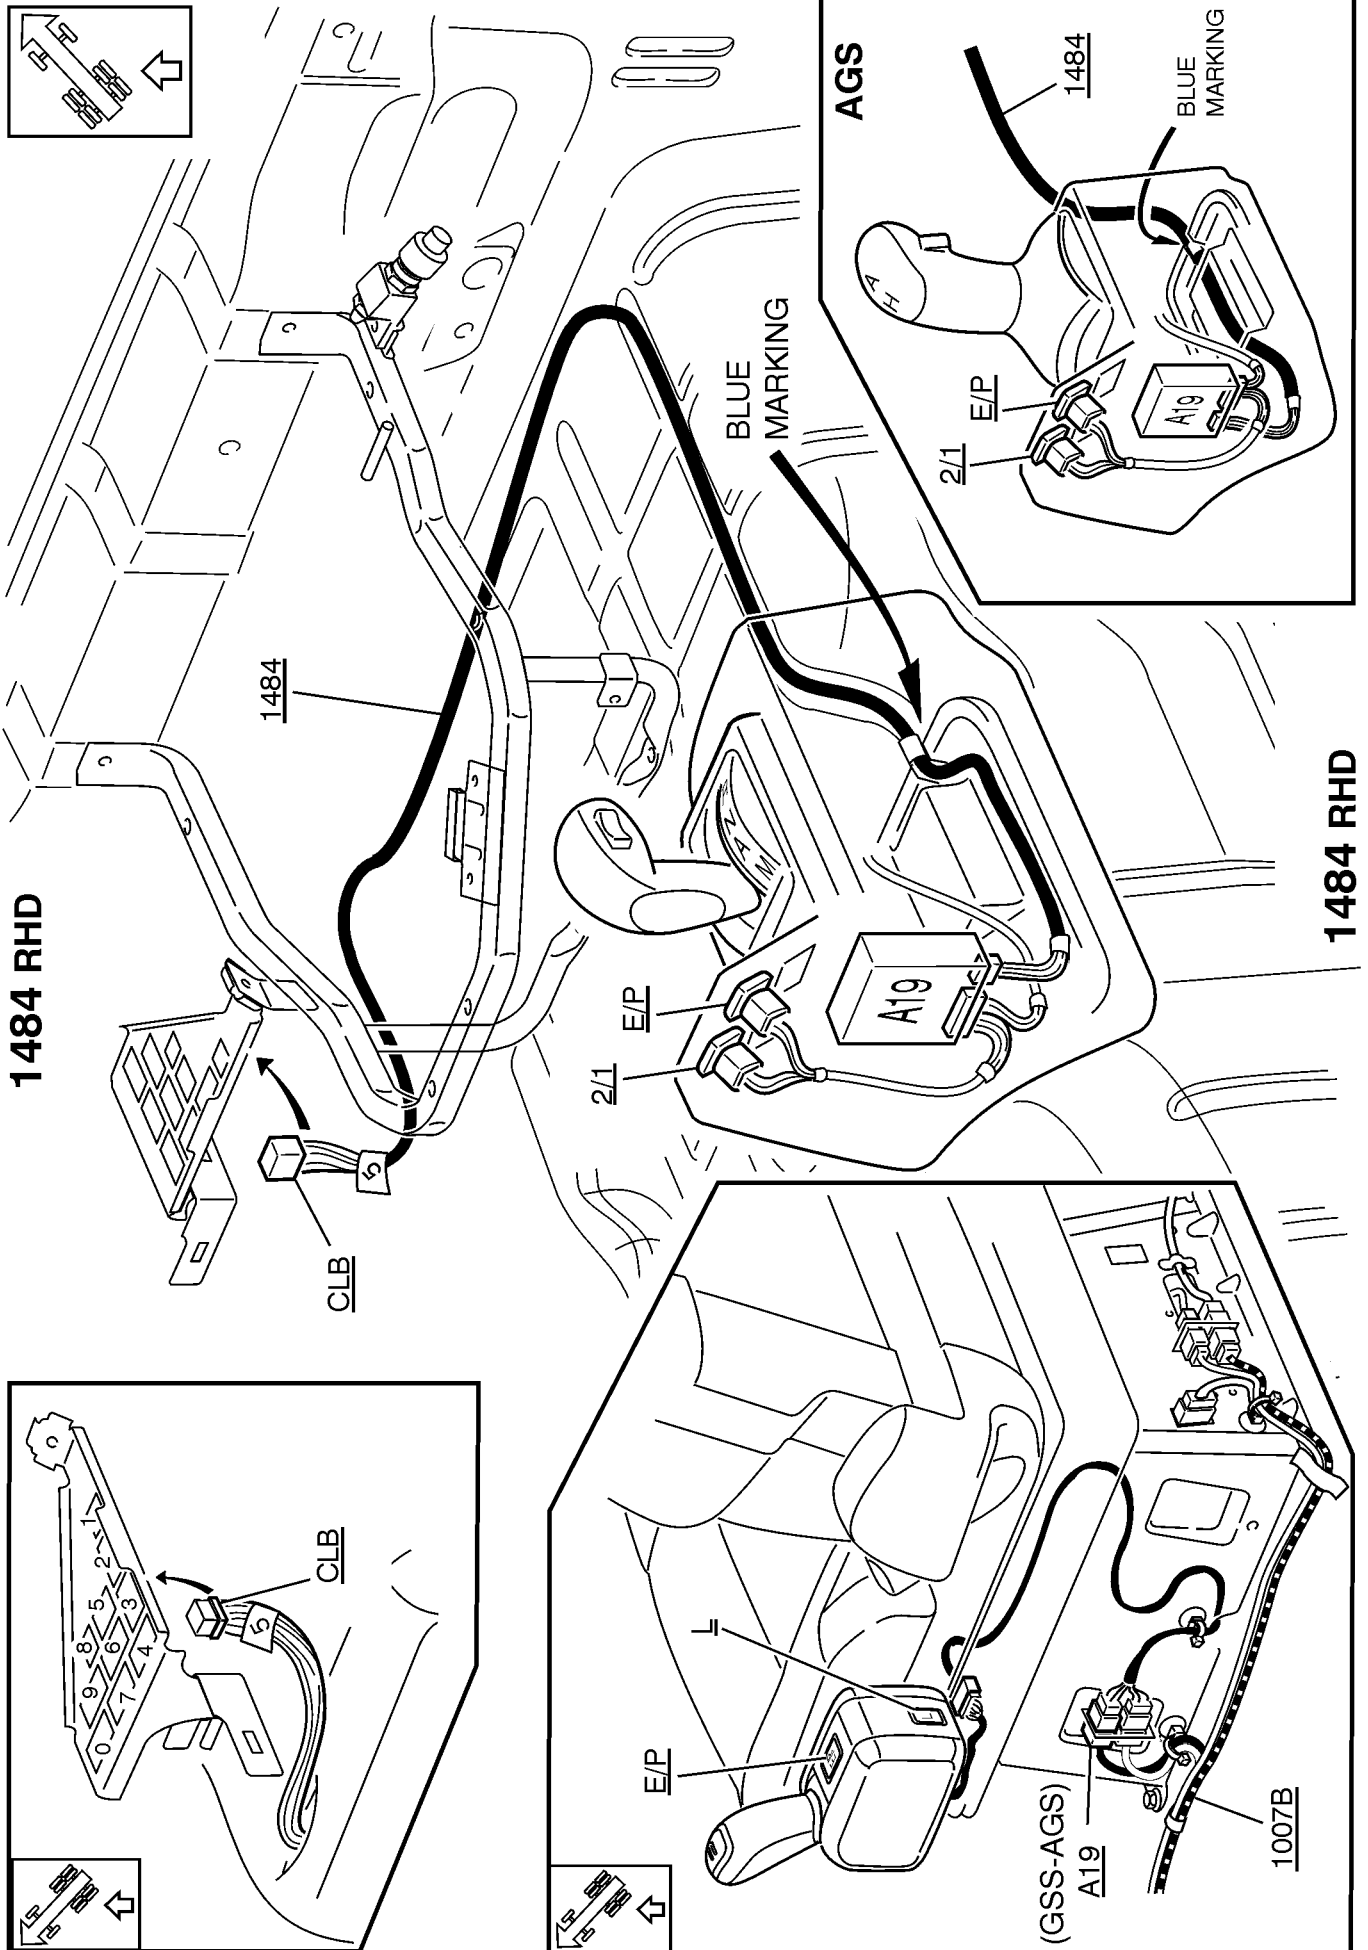


1484 RHD


1484 RHD

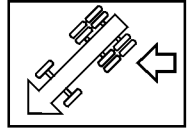

1493 LHD

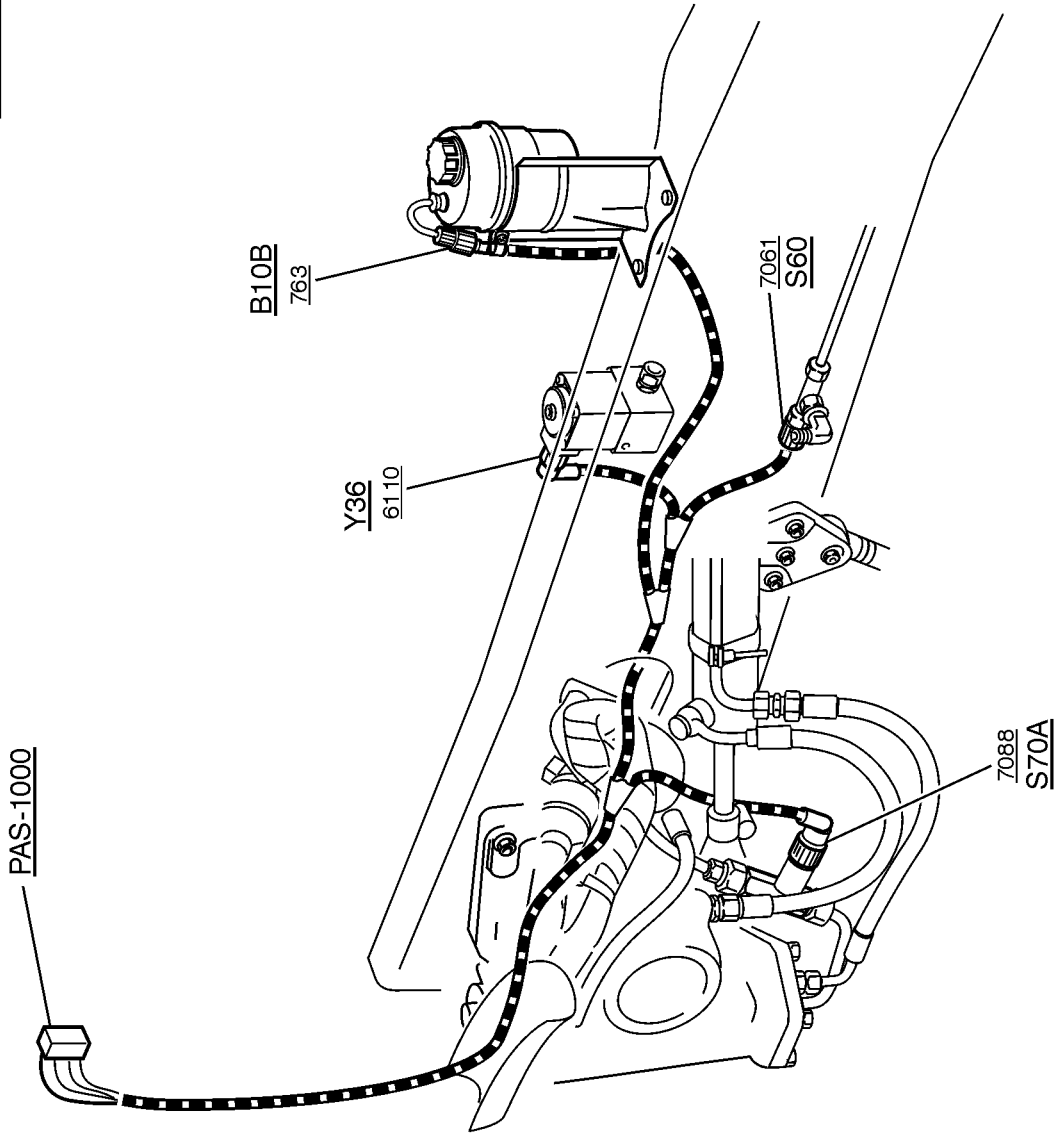


1493 LHD

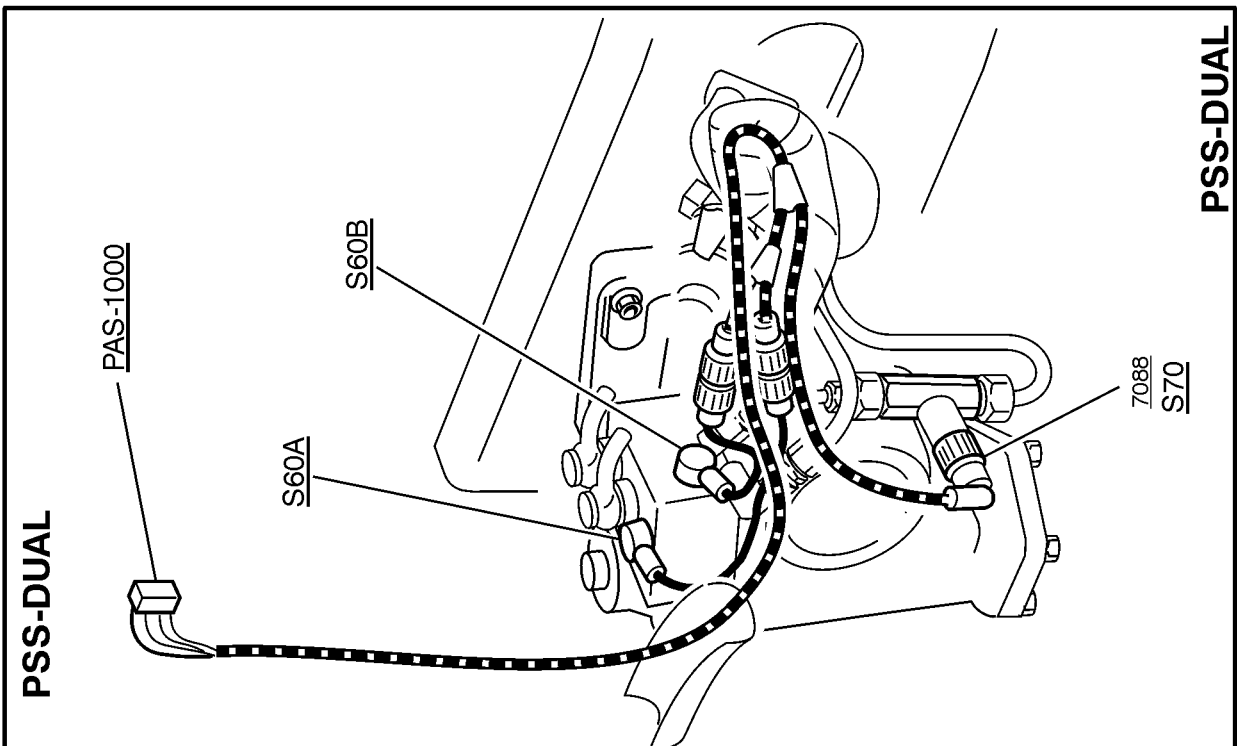

PSS-DUAL

PSS-DUAL


1494, 1499 MECHTRAN

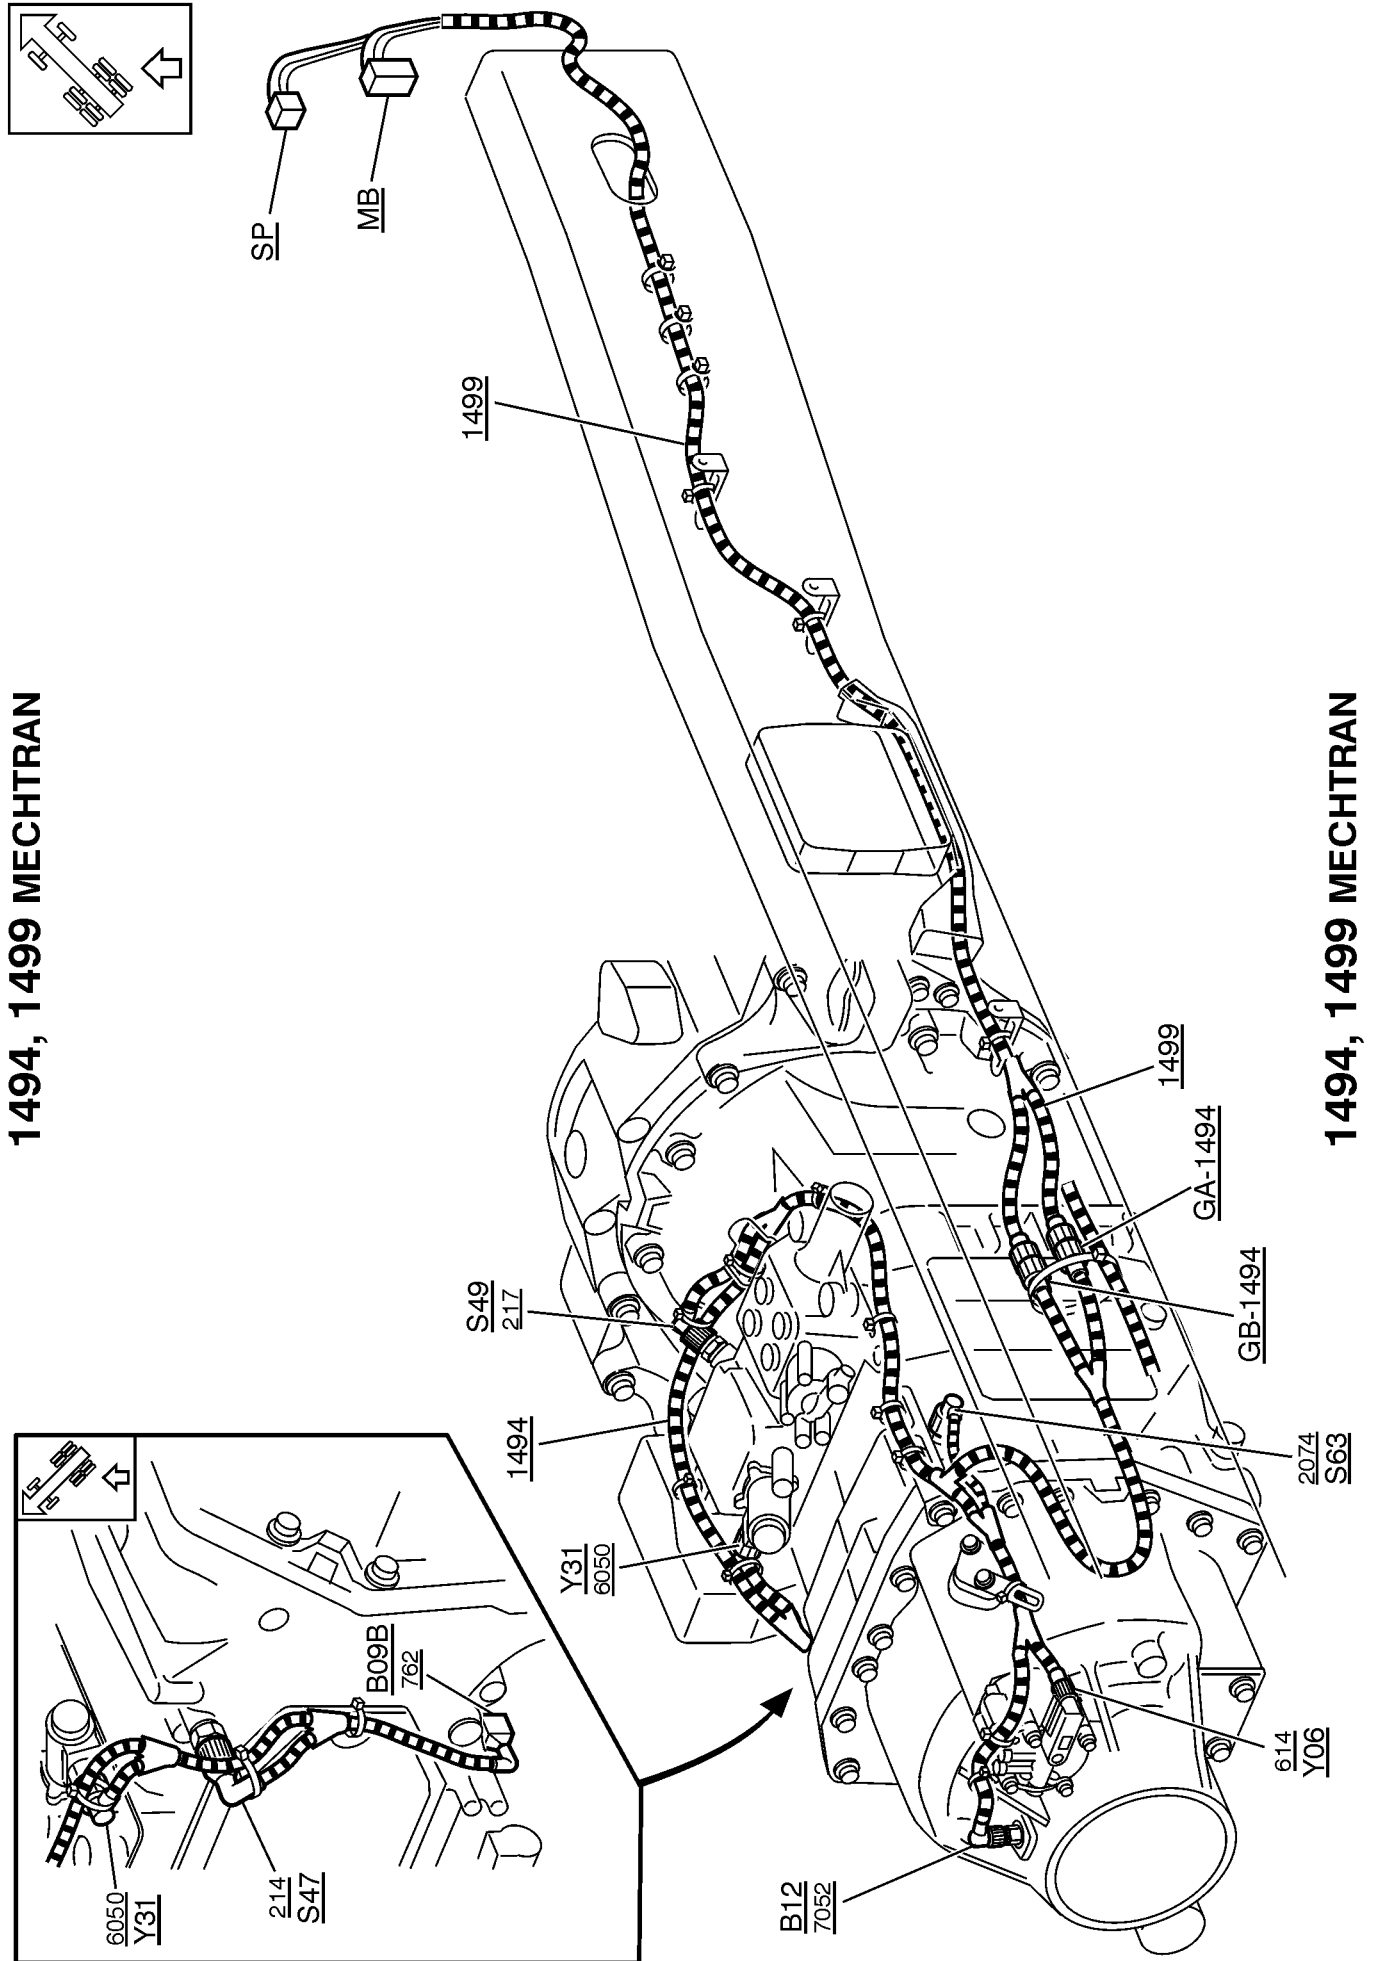


1494, 1499 MECHTRAN

1494 Powertronic


1494 Powertronic

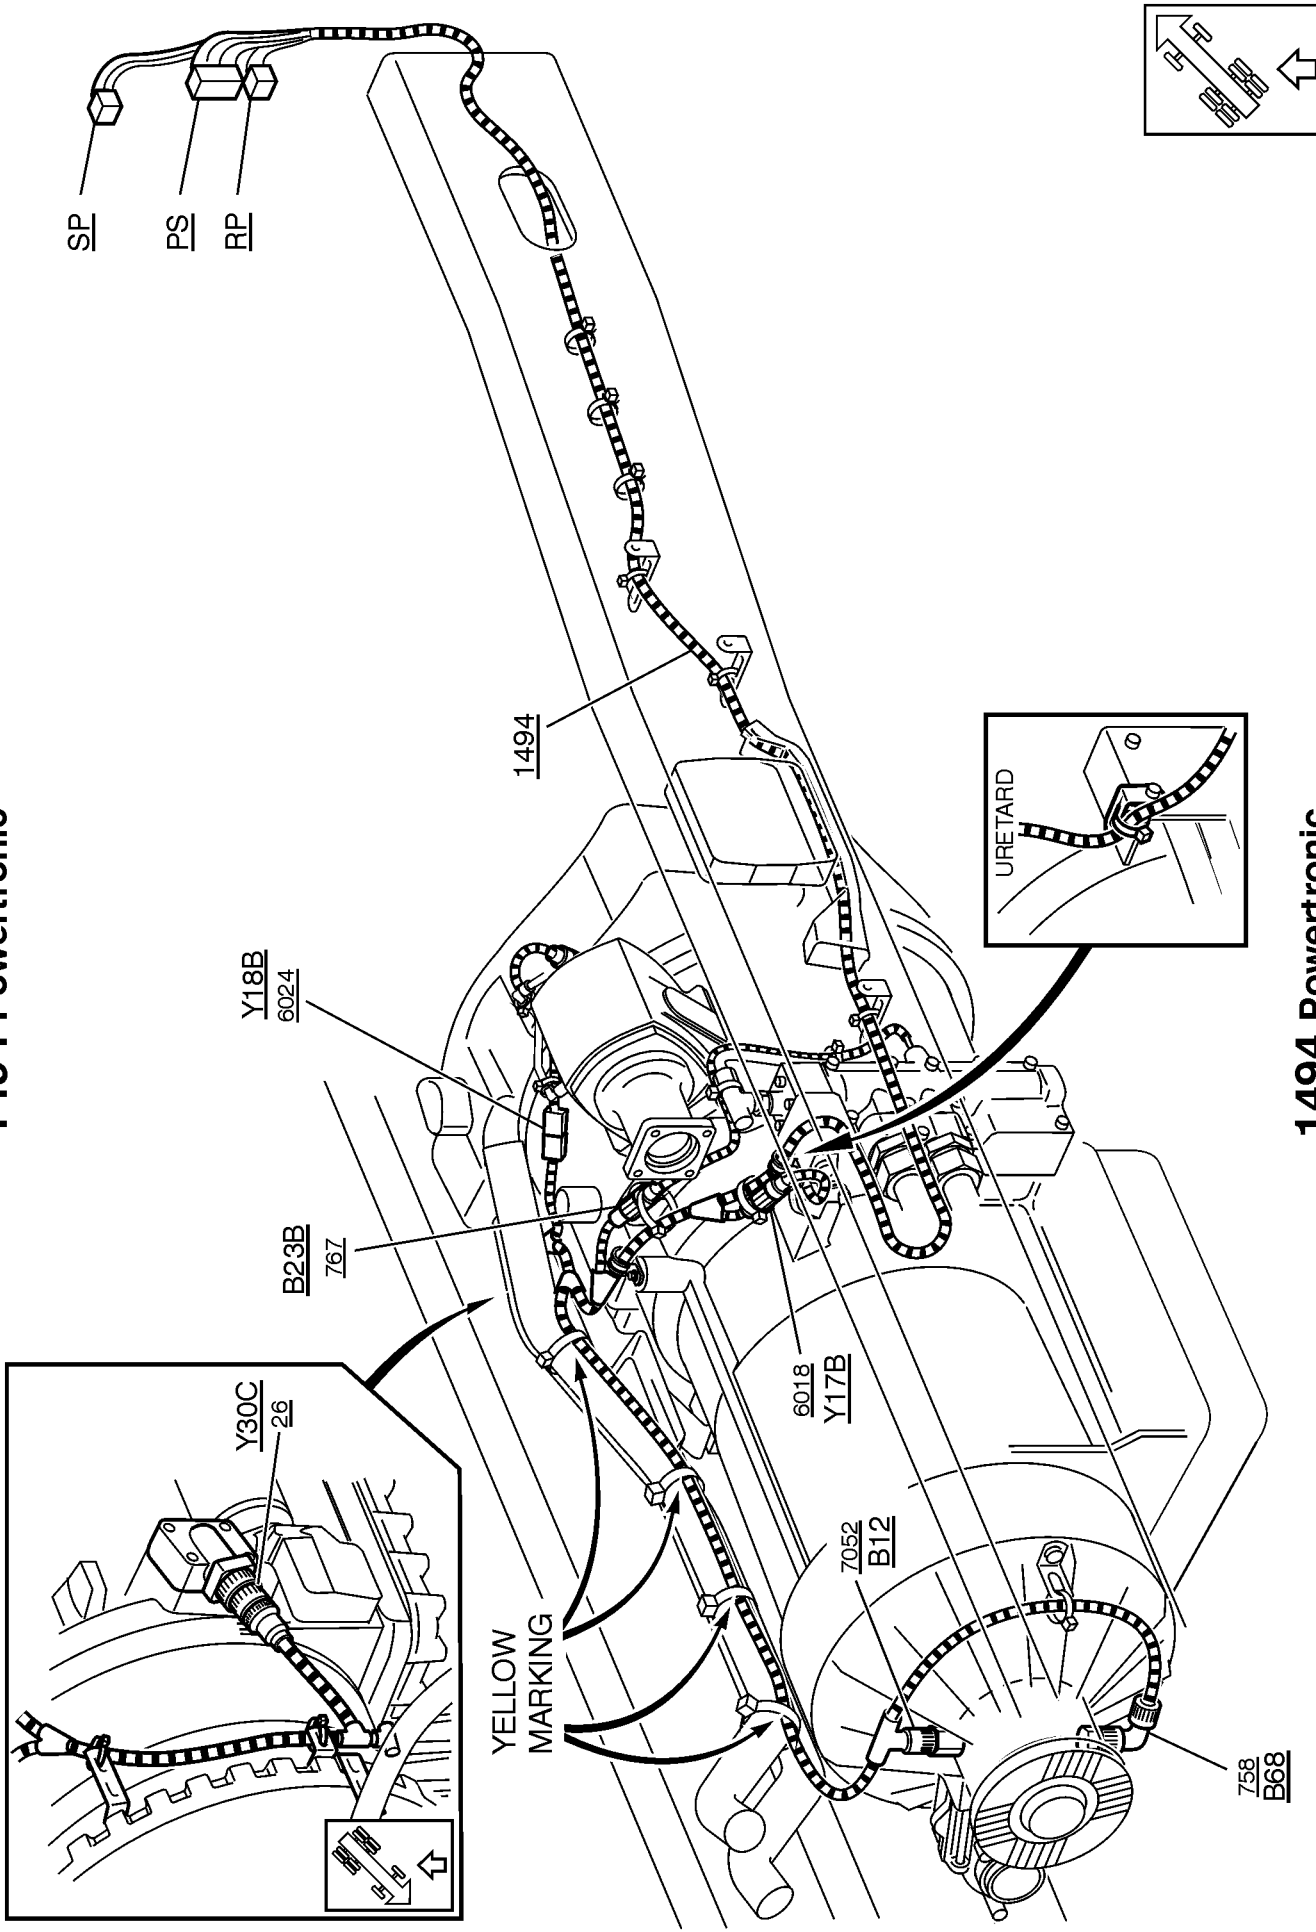

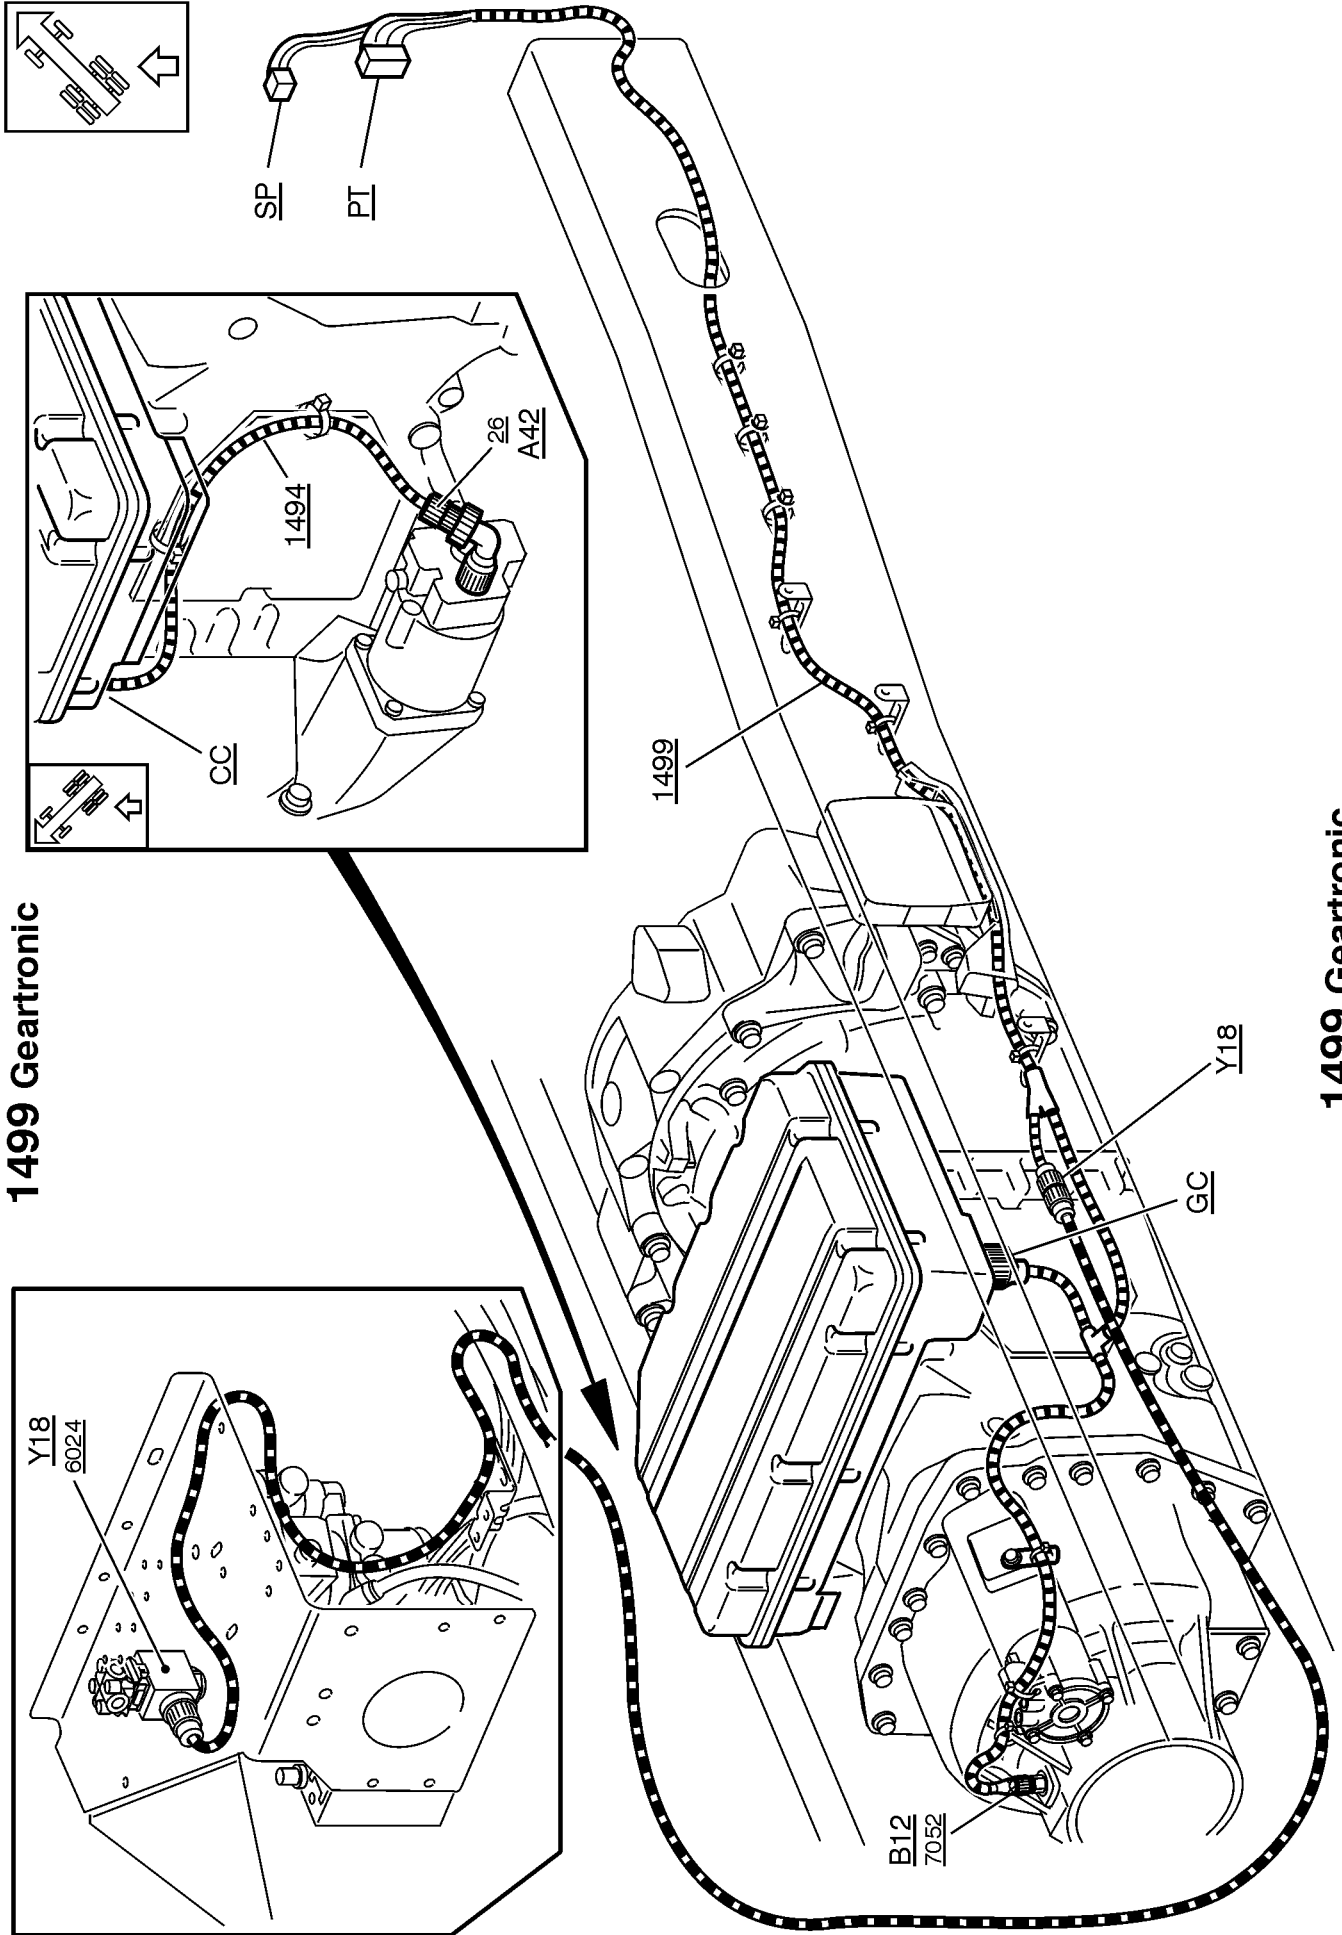


1499 Geartronic


1499 Geartronic

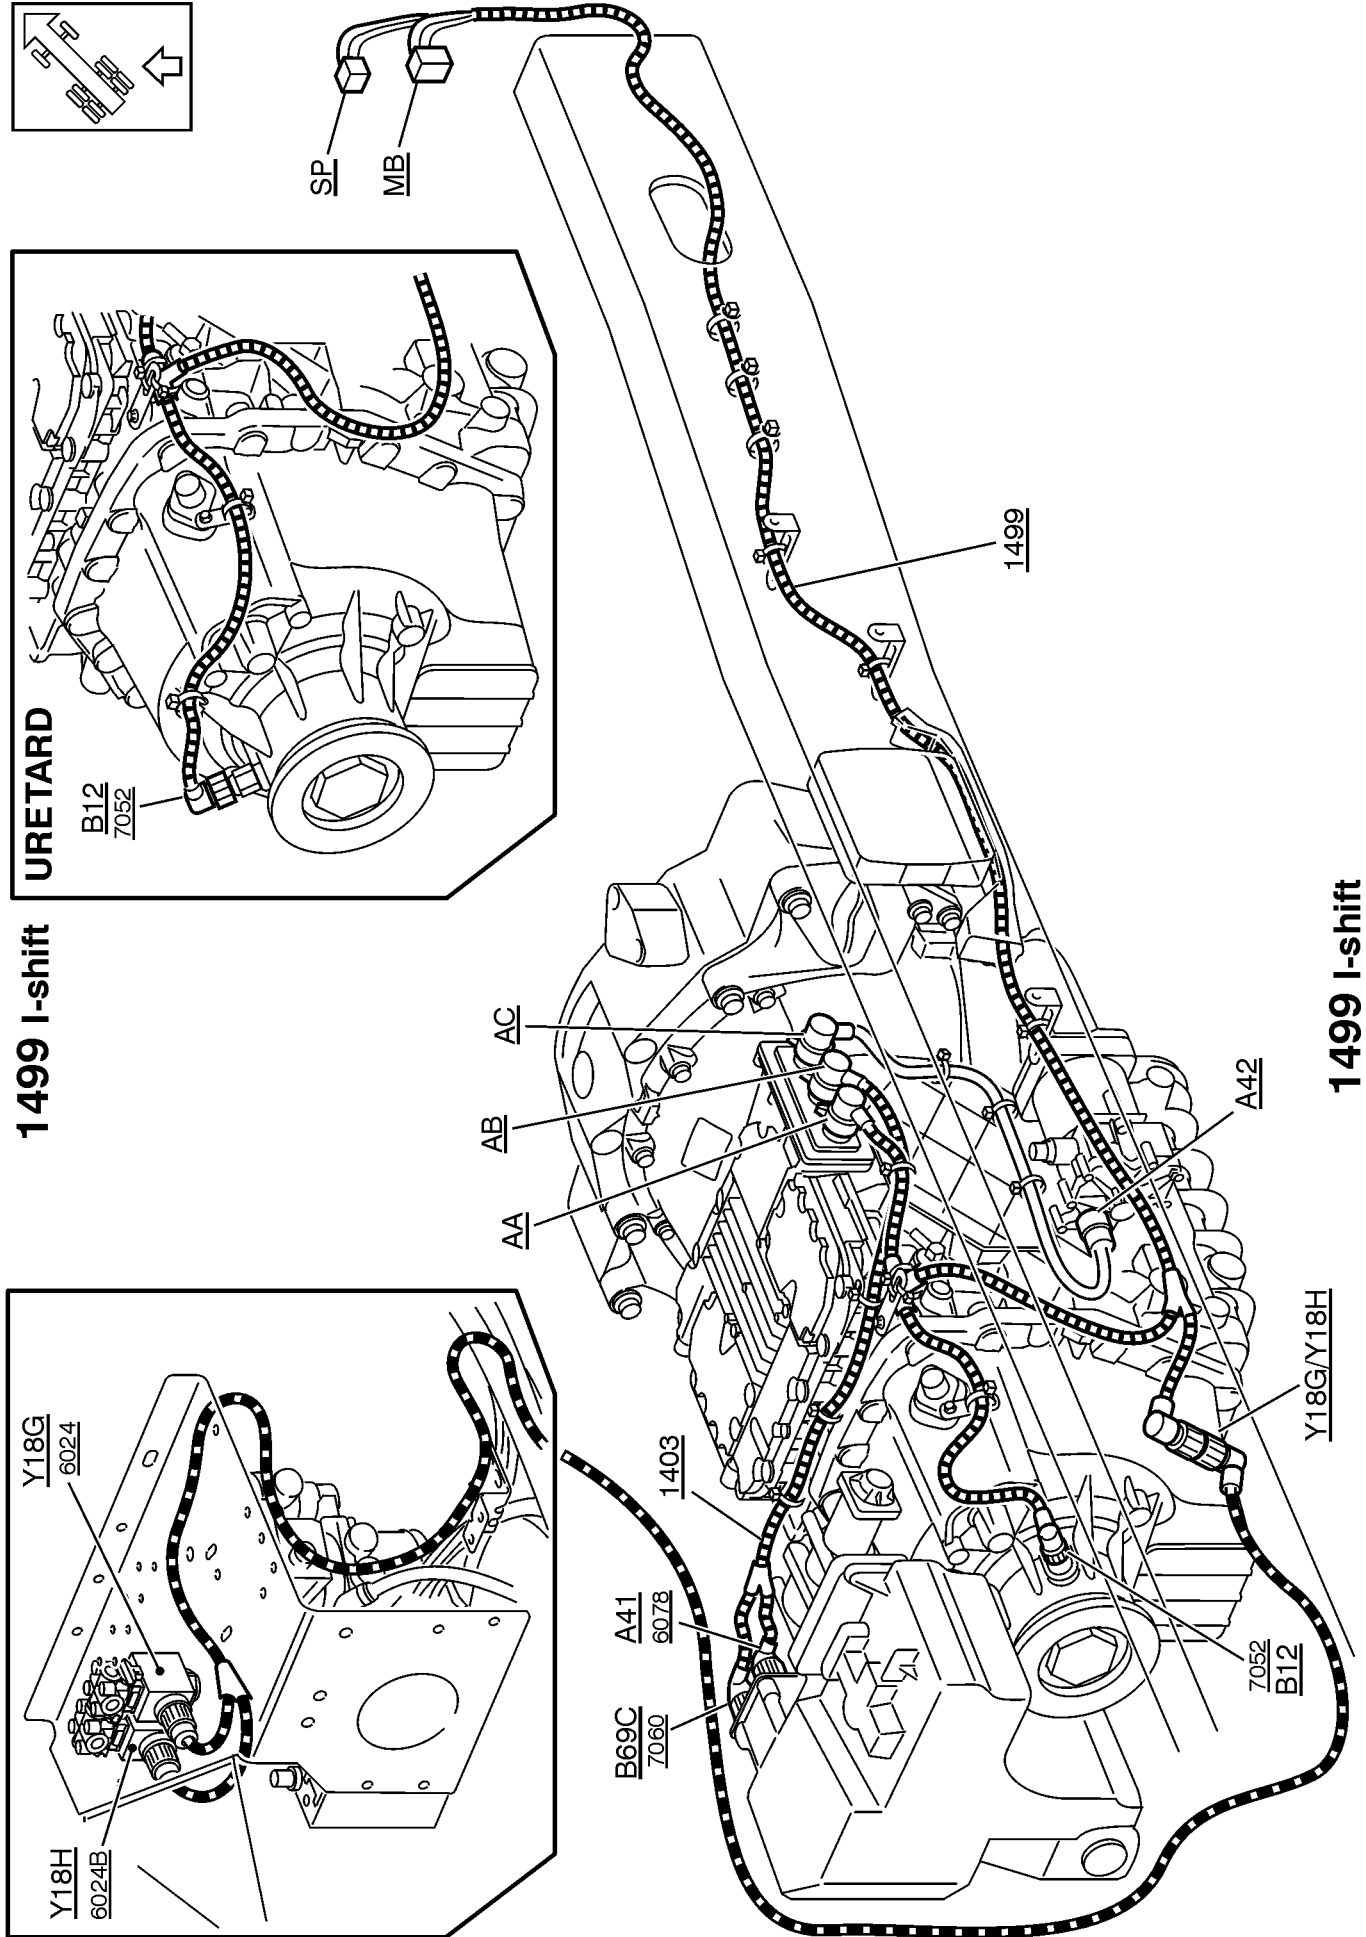



1499 I-shift

1499 I-shift

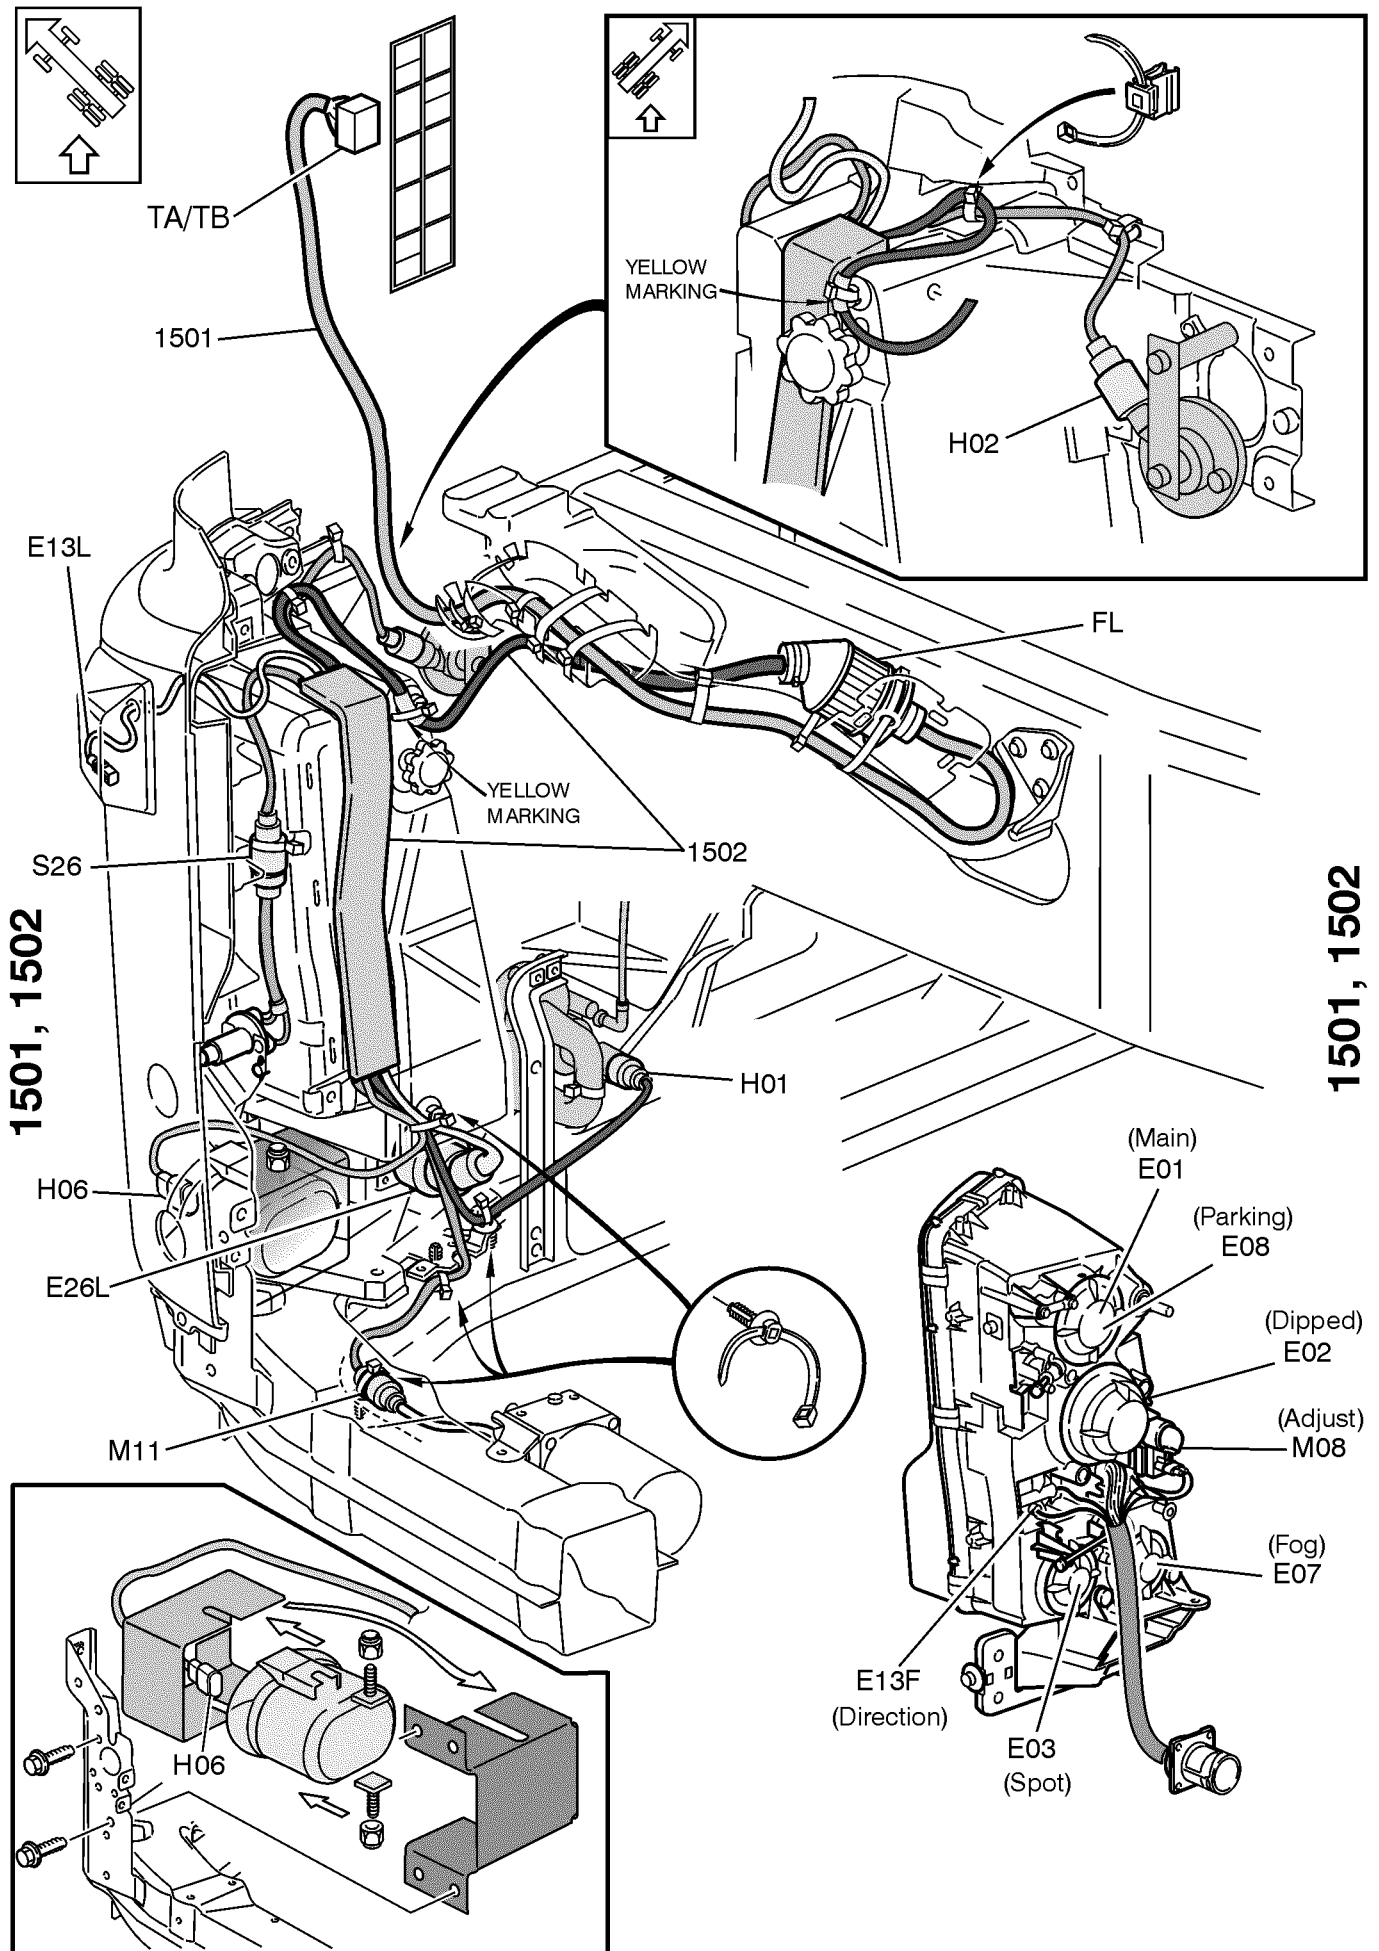

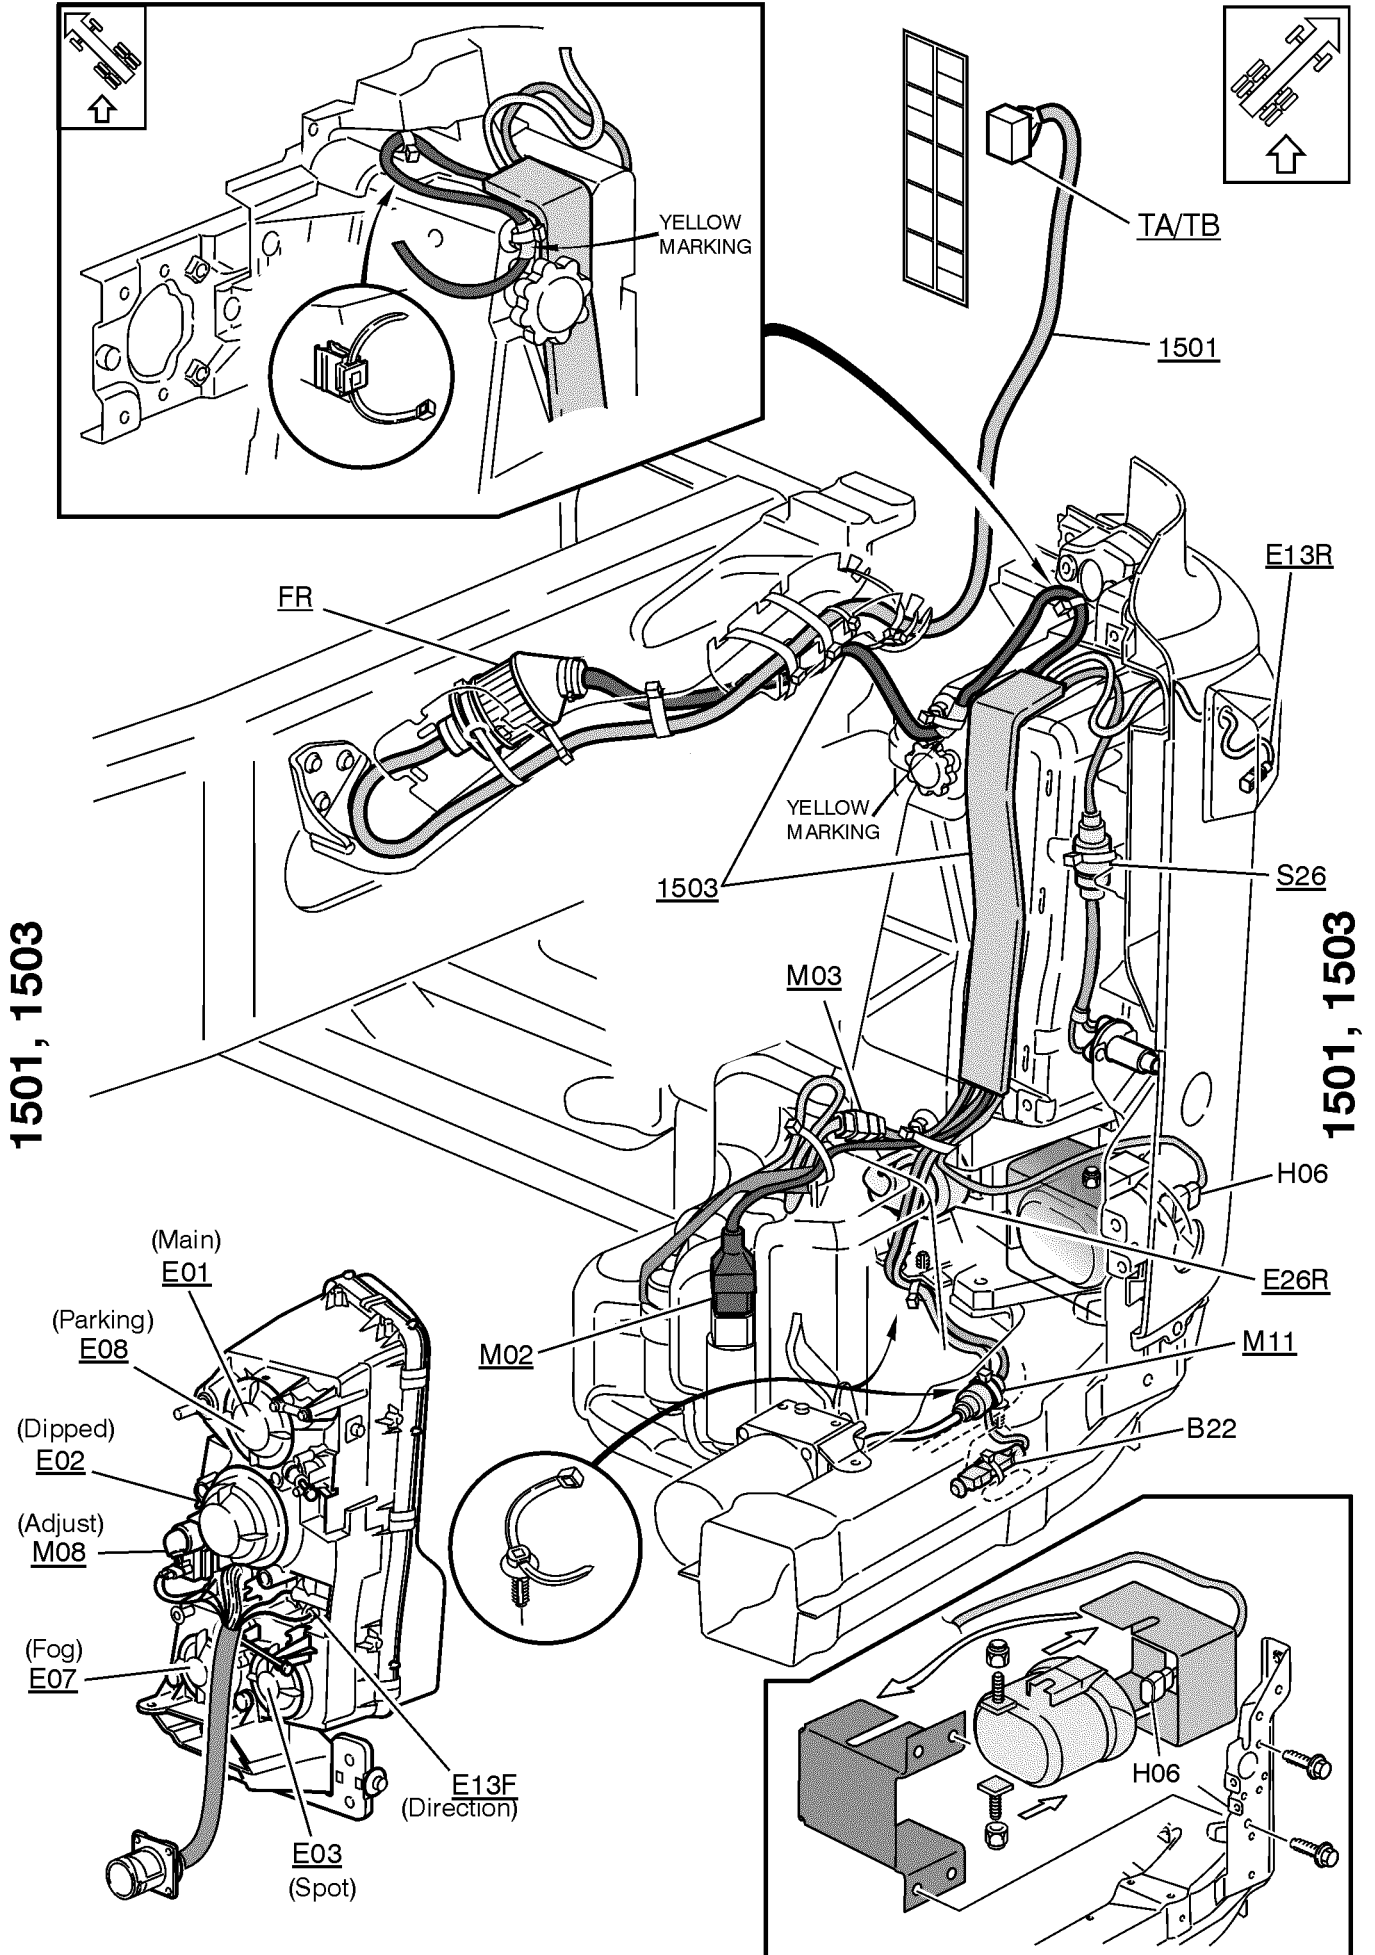


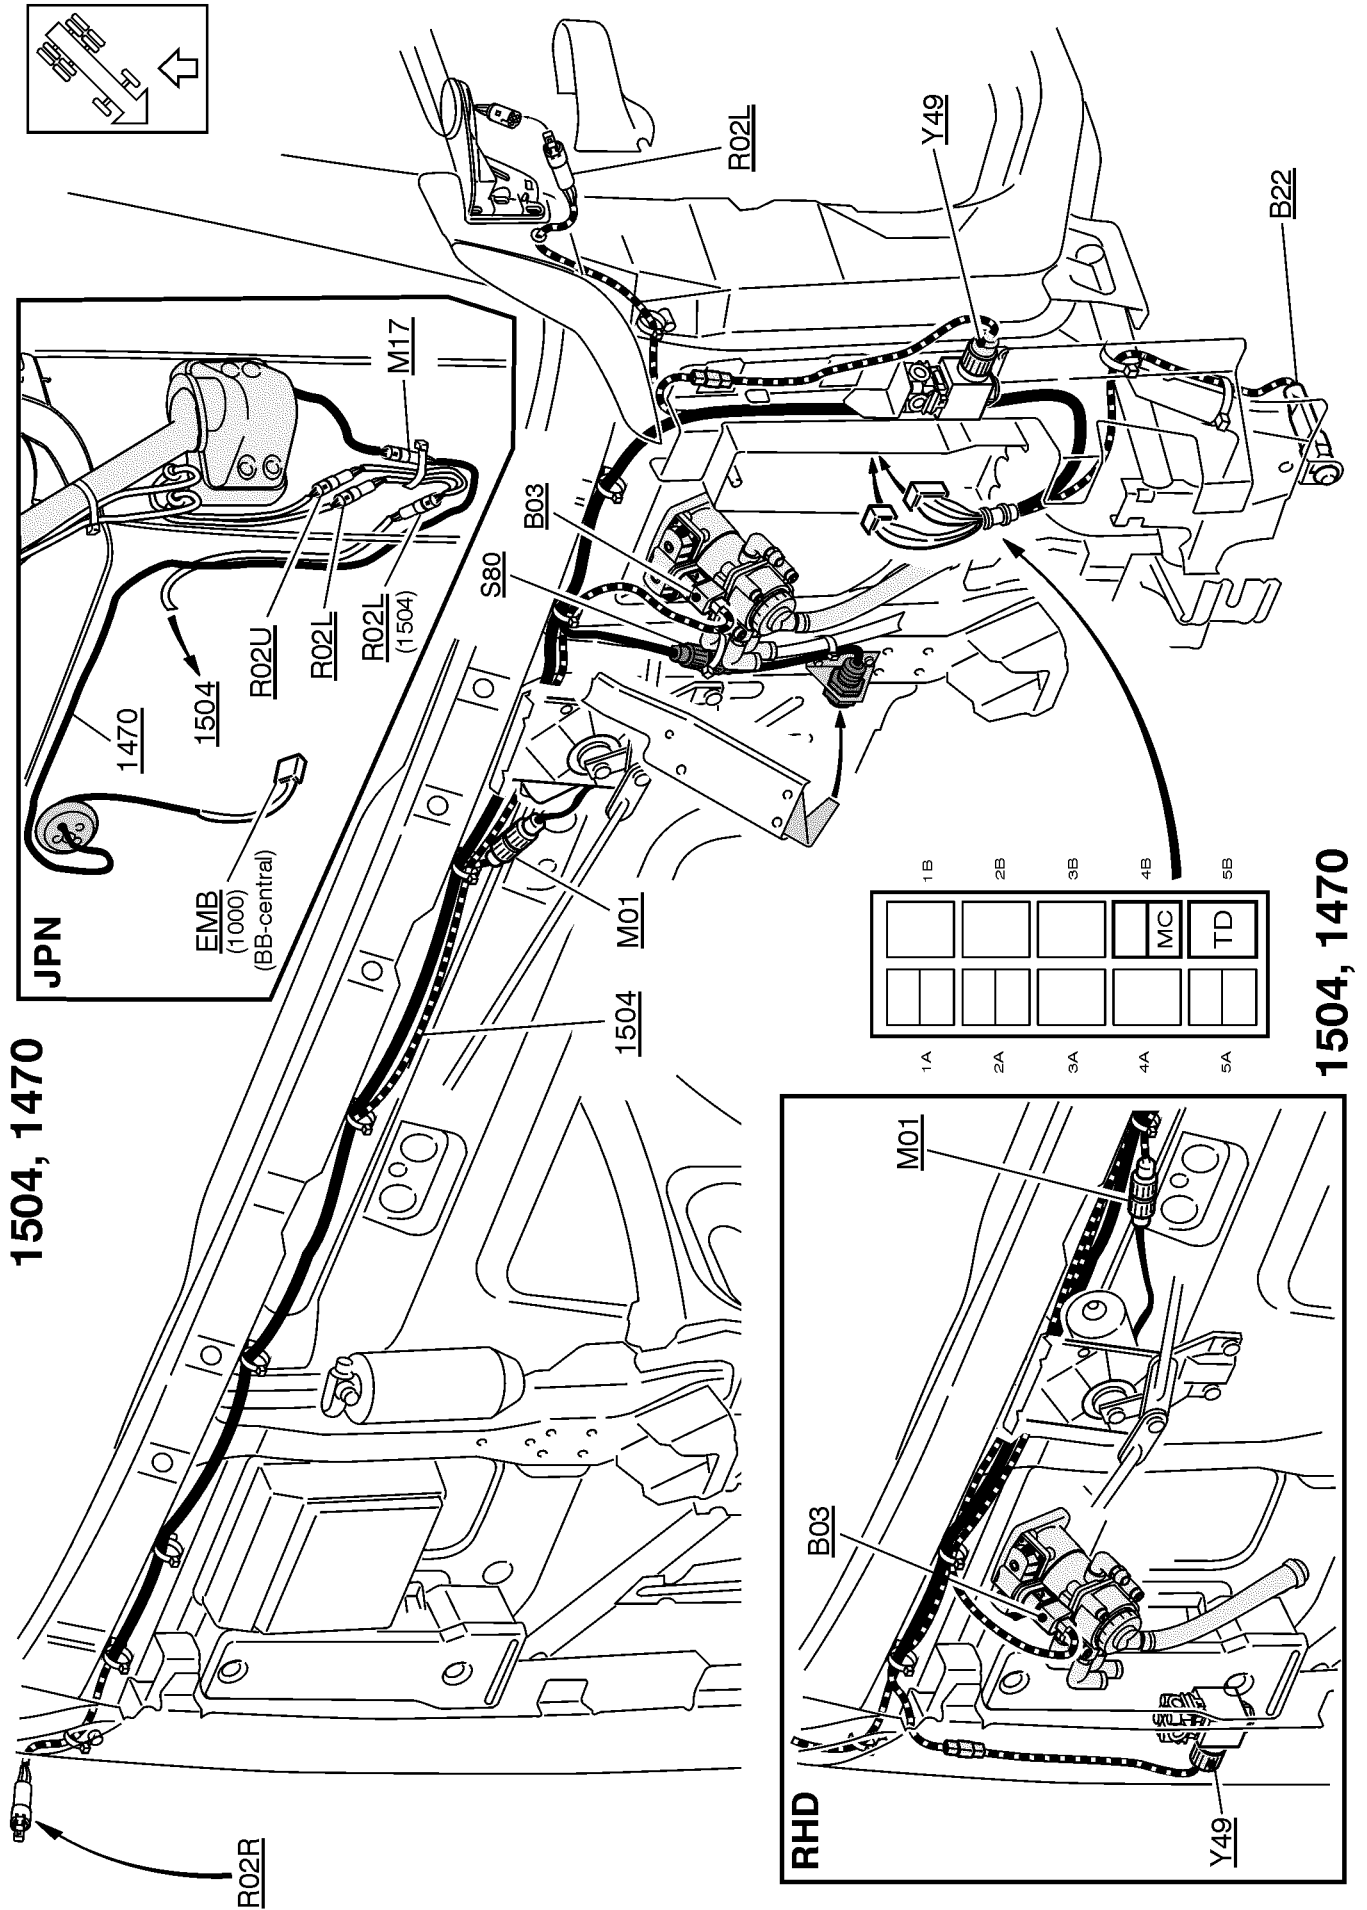


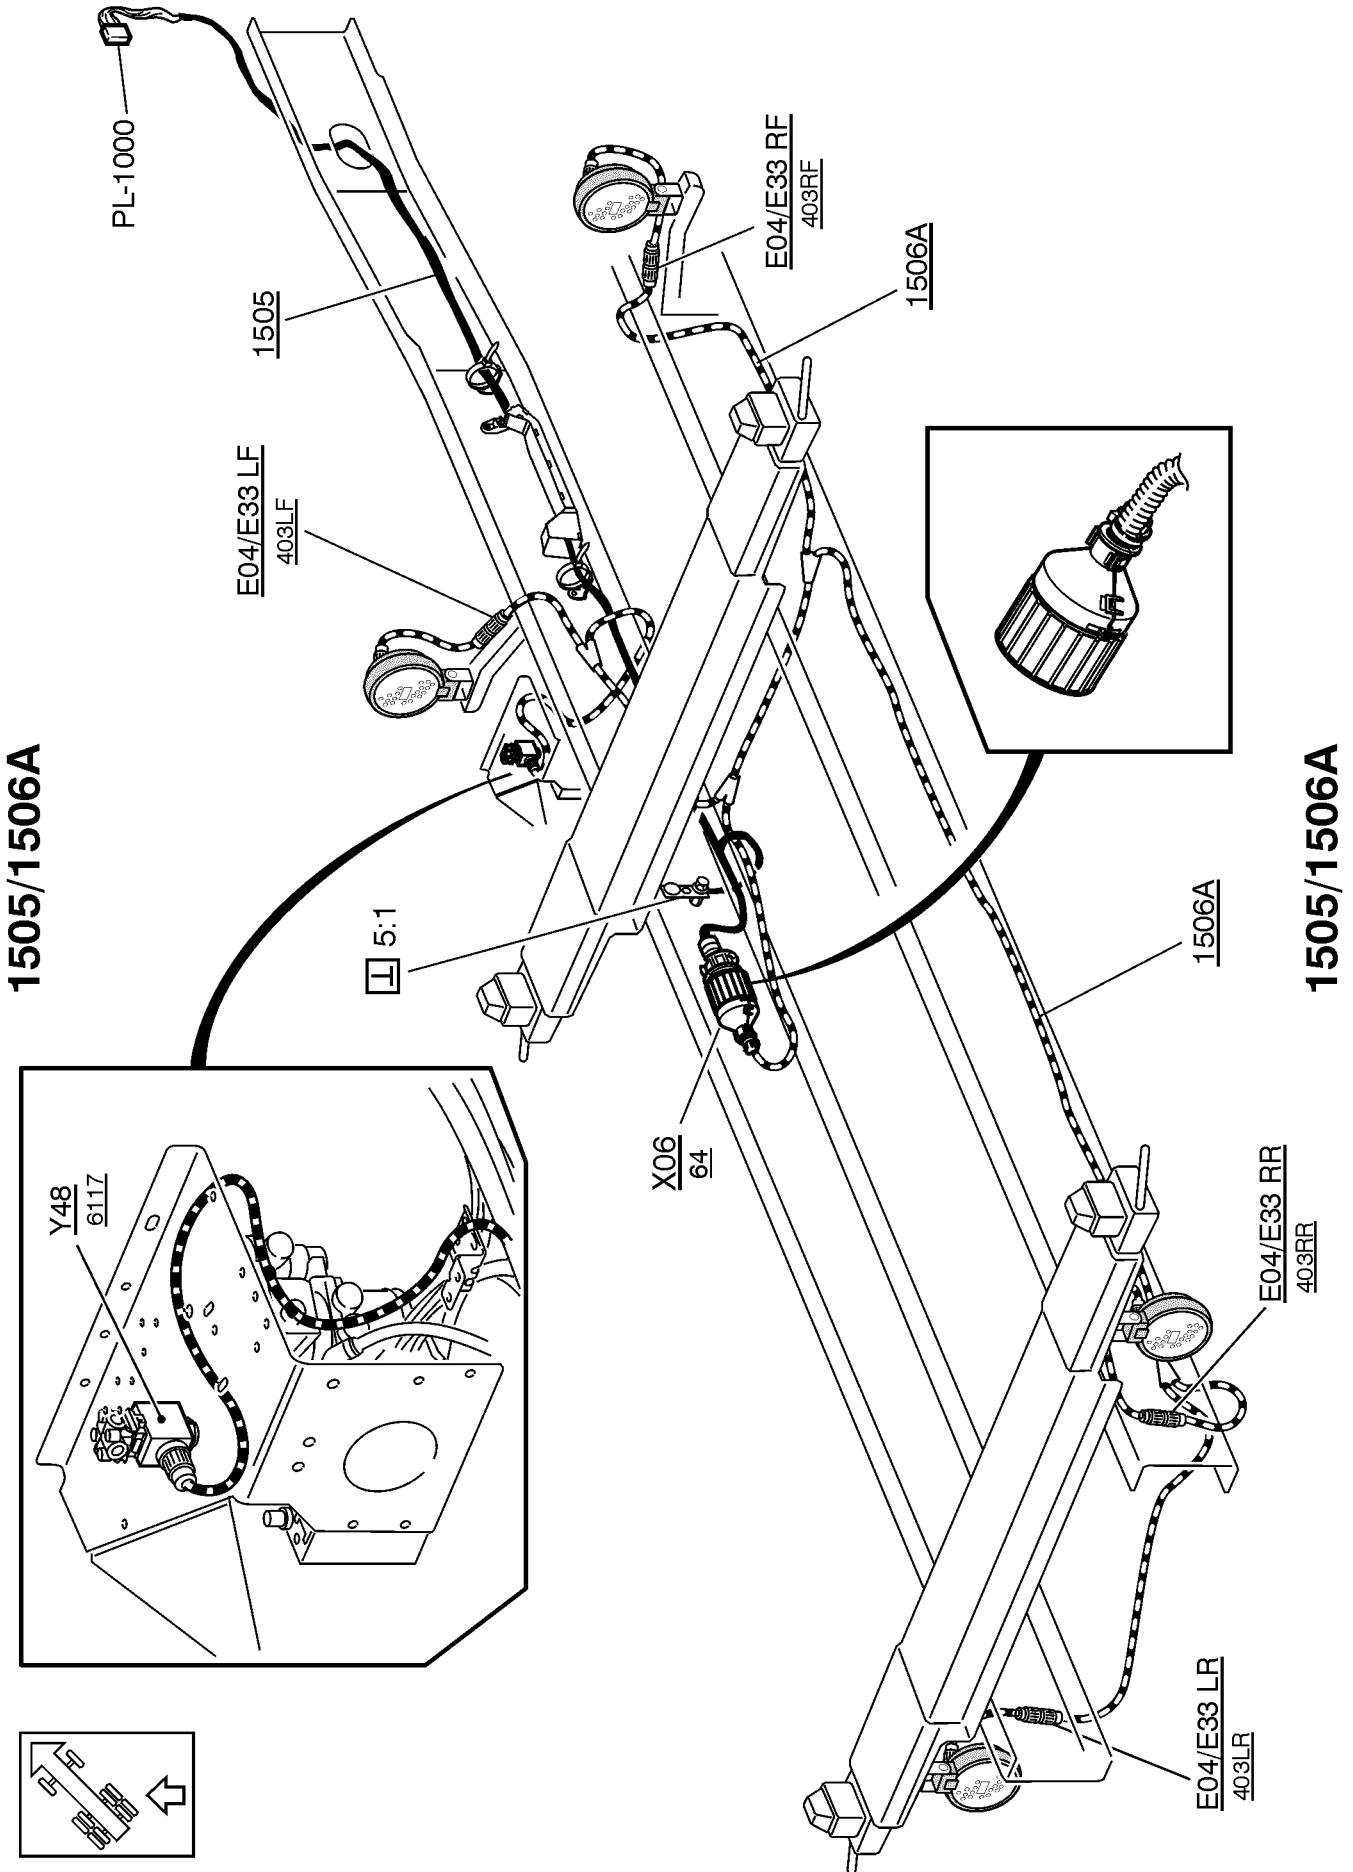

1505/1506B

1505/1506B

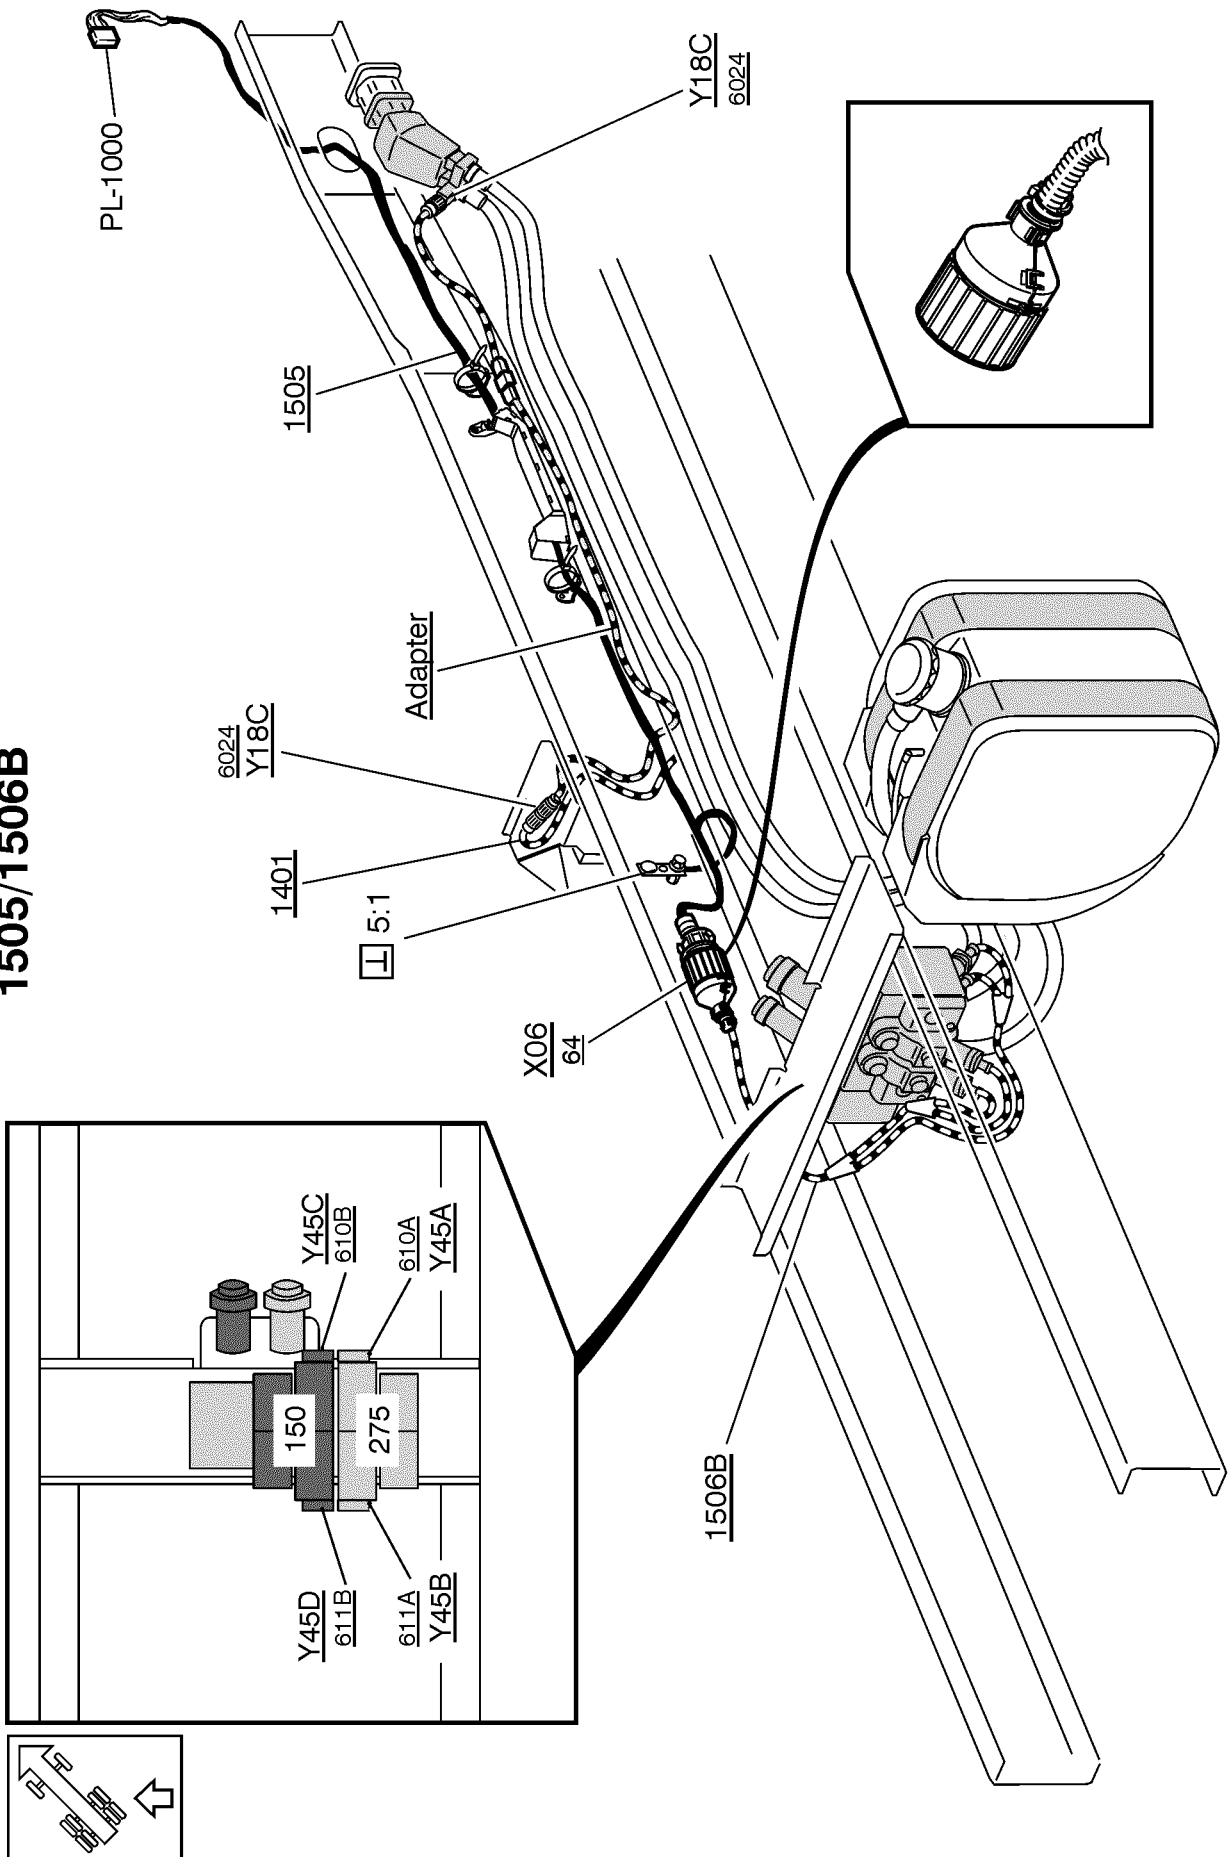

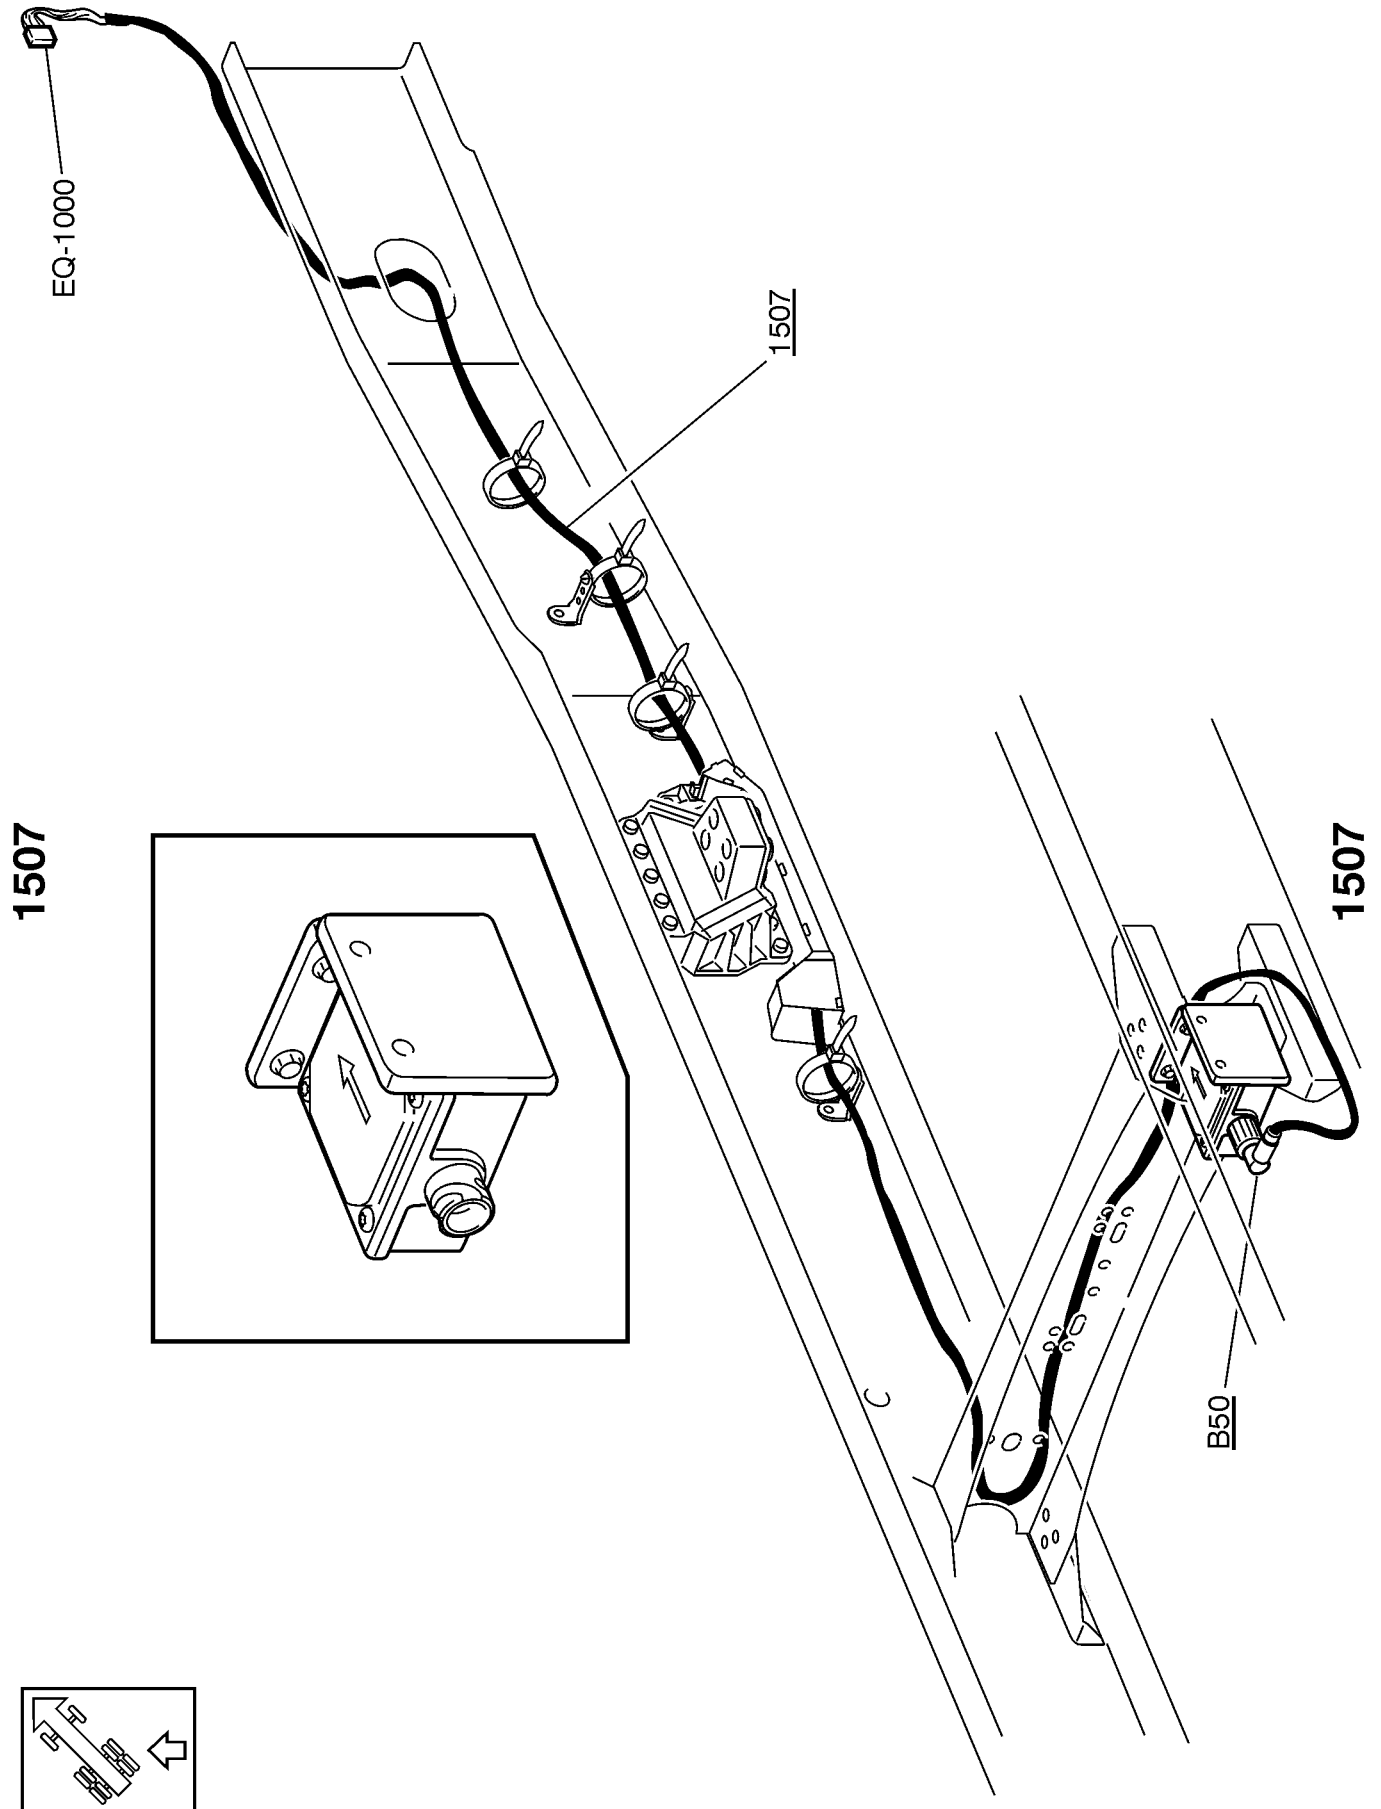



T3015902

Fuses

F2	Luggage compartment illumination	(IH:4 A)	F34	Free	(ME:1 A)
F3	Loadlight, 5:th wheel lamp ..	(KE:0 A)	F35	El. adjustable seat	(IA:2 A)
F4	Key switch, radiopos.	(AA:3 C)	F36	Free	(ME:4 B)
F5	Instrumentation, (kl.30)	(BI:3 A)	F37	Dynafleet	(AA:3 B)
F6	Free	(BA:1 B)	F38	Instep lamps	(AA:3 B)
F7	Vehicle ECU, immobiliser	(BA:1 B)	F39	El. adjustable rearview mirrors ...	(AA:3 B)
F8	Instrumentation, (kl.DR)	(BI:0 A)	F40	Engine ECU	(CM:1 A)
F9	Range-, area-inhibitors	(BA:0 A)	F41	Engine solenoid valves, el. fuel pump	(CM:3 A)
F10	Free	(HY:0 A)	F42	Engine preheating relay, cooling fan clutch	(CM:2 A)
F11	Gearselector ECU	(DB:1 B/ DM:0 B)	F43	BBM (body builder module)	(BA:1 A)
F12	Transmission ECU	(DB:1 B/ DM:1 B)	F44	Voltage converter for radio	(IR:0 A)
F13	Windscreen wiper	(GM:3 A)	F45	Supplementary voltage converter	(IR:1 A)
F14	Cigarette lighter, centre section storage lamp	(IQ:2 A)	F46	Beacon warning light	(KM:0 A)
F15	Water separator, heater and water drain	(CU:0 A)	F47	Free	(ME:0 A)
F16	Differential lock, power take off	(DQ:0 A/ DU:1 A)	F48	ABS/EBS, EBS switches	(EE:0 A/ EI:0 A/ EM:0 A)
F17	LCM control	(GA:0 A)	F49	Air suspension/A-ride/tag axle ...	(FA:3 A/ FK:1 A)
F19	Climate unit	(HG:0 A)	F50	Telephone	(IX:0 A)
F20	Central door lock	(IM:1 A)	F52	Control circuit engine preheating, radio position relay	(AA:1 A)
F21	Fan, climate unit	(HY:0 A)	F53	Light sign	(KI:1 A)
F22	Interior lamps	(IH:1 A)	F54	Dynafleet	(BU:0 A)
F23	Air suspension	(FA:4 A)	F55	SRS airbag, safety belt tensioner	(IS:0 A)
F24	El. heated airdryer, parking heater ADR/TRS	(FQ:0 A)	F57	Gear selector ECU	(DB:0 A/ DM:1 B)
F25	Supply ABS/EBS trailer	(EC:2 A/ CP:4 A)	F58	ADR/TRS, D+ short circuit relay	(AA:3 B/ AE:4 B)
F26	Bodybuilder fusebox	(ME:3 B)	F59	Rear view camera	(IZ:0 A)
F27	El. window winder lhs, el. heated mirrors	(AA:3 B)	F61	Foldable rearview mirror arm, Japan, burglar alarm	(IF:0 A)
F28	Supply ABS/EBS truck	(EE:0 A/ EI:0 A/ EM:1 A)	F62	Free	(ME:0 A)
F29	Coffee maker	(ME:1 A)	F63	Free/ISX-functions (AUS only) ...	(CP:1 A)
F30	El. window winder, rhs	(AA:3 B)	F64	Free/ISX-functions (AUS only) ...	(CP:2 A)
F31	Parking heater	(HI:0 A/ HM:0 A/ HP:0 A)	F65	Central lubrication system	(FU:0 A)
F32	ECC climate unit	(HG:0 A)	F66	Roof hatch	(IQ:0 A)
F33	El. cab tilt	(KA:0 A)	F67	Reading lamps, bedlamps	(IH:0 A)
			F68	Refrigerator	(IQ:3 A)
			F69	12-volt outlet	(IR:1 C)

F70	Trailer ABS/EBS, (kl. 15)	(EC:1 A/ CP:4 A)	F90	12V converter, ABS trailer/info- module	(CP:3 C)
F71	Extra equipment	(ME:1 A)	FM1	Fuse, main, preheating	(AA:0 B/ AE:2 B)
F72	Headlamp level regulation sys- tem	(GQ:1 A/ GU:0 A)	FM2	Fuse, main, bogie lift/extra equip- ment	(AA:0 B/ AE:1 B)
F73	Hydraulic steered axle	(FM:0 A/ FP:1 A)	FM3	Fuse, main, cab and chassis	(AA:0 B/ AE:2 B)
F74	Headlamp high-pressure washer	(GM:1 A)	FM4	Fuse, main, light, back-up	(AA:0 B/ AE:1 B)
F75	El. heated seat	(IA:0 A)			
F76	ADR/TRS, D+ short circuit relay	(AE:4 B)			
F89	Tachograph	(AA:0 B) (1435)			


Relays

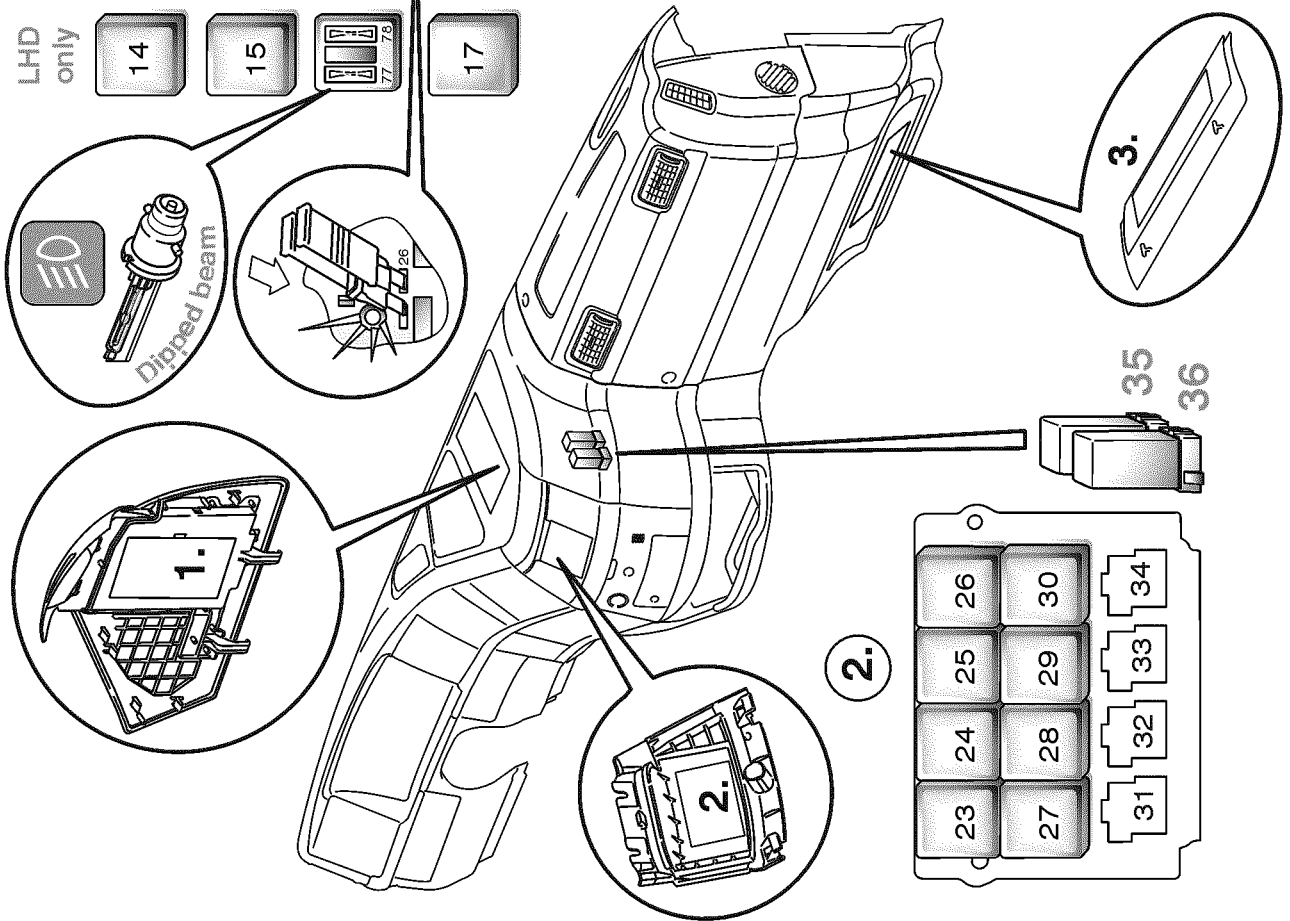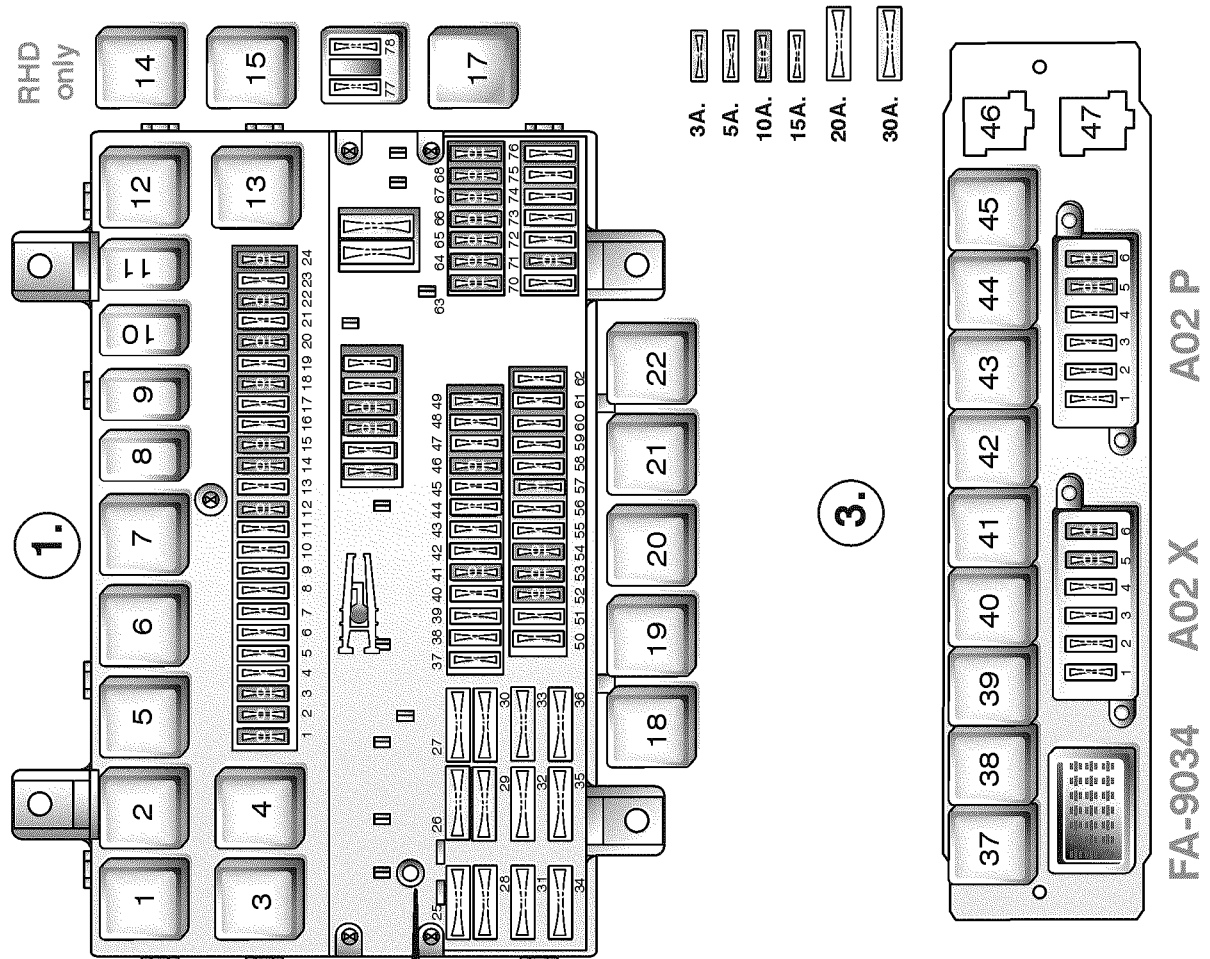


K1	Relay, starting switch, radio position	(AA:3 B)	K26B	Relay, foldable rearview mirror arm, Japan	(IF:1 C)
K2	Relay, EMS (Engine Management System)	(BA:1 A)	K27	Relay, gas discharge lamp, dipped beam, lhs	(GB:0 D)
K3	Relay, starter motor	(AA:1 C)	K28	Relay, gas discharge lamp, dipped beam, rhs	(GB:0 D)
K3B	Relay, starter motor, Cummins ...	(CS:1 C)	K30	Relay, beacon warning light	(KM:0 B)
K4	Relay, bodybuilder fuse box (kl.15)	(ME:2 A)	K35	Relay, headlamp high pressure wash	(GM:0 C)
K5	Relay, automatic transmission	(DB:1 A/ DM:0 A)	K37A	Relay, parking light	(NR:0 C)
K6	Relay, fan climate unit	(HY:0 B)	K37B	Relay, parking light	(NA:0 C)
K7	Relay, intermittent wiper	(GM:1 C)	K38	Relay, pressure selection, tipper trailer	(NA:1 C)
K8	Relay, gearbox area inhibitor	(BA:1 A)	K38A	Relay, pressure selection, tipper trailer	(NR:1 C)
K9	Relay, interior lamps	(IH:1 A)	K38B	Relay, pressure selection, tipper trailer	(NR:1 C)
K10	Relay, fifth wheel-, working-light	(KE:0 C)	K39A	Relay, prepared wirings for bodybuilder (auxsw-6) A	(NA:1 C)
K11	Relay, air suspension	(FA:4 B)	K39B	Relay, prepared wirings for bodybuilder (auxsw-6) A	(NA:1 C)
K12	Not used	(ME:4 B)	K40A	Relay, prepared wirings for bodybuilder (auxsw-6) B	(NR:3 C)
K13	Relay, alternator controled	(AA:4 C)	K40B	Relay, prepared wirings for bodybuilder (auxsw-6) B	(NA:2 C)
K14	Time delay relay, bogie lift, A-ride	(FK:1 C)	K41A	Relay, prepared wirings for bodybuilder (auxsw-6) C	(NR:3 C)
K15	Time delay relay, bogie lift, A-ride, with axle load limiter	(FK:2 C)	K41B	Relay, prepared wirings for bodybuilder (auxsw-6) C	(NA:3 C)
K16	Relay, bogie lift, A-ride, with axle load limiter	(FK:1 C)	K42	Relay, spotlights	(NI:1 B)
K17	Relay, 3:rd axle lock, self steered axle	(FM:0 C)	K43	Relay, external engine start	(NC:3 C)
K18	Relay, hydraulic steered axle	(FP:1 B)	K45	Relay, prepared wirings for bodybuilder	(NU:2 B)
K19	Relay, 3:rd axle lock, self steered axle	(FM:1 C)	K48	Power relay, engine preheating ..	(CM:2 B)
K20	Relay, D+ short-circuit, (ADR-trucks only)	(AE:4 D)	K51	Power relay, battery main switch	(AA:0 C/ CS:0 C)
K21	Relay, el. adjustable seat	(IA:2 B)	K52	Power relay, ADR battery main switch	(AE:0 B)
K22	Relay, climate fan, 1:st speed (by parking heater)	(HY:1 B)	K54	Relay, 12V ABS Trailer	(CP:2 D)
K23	Relay, cab tilt	(KA:0 C)			
K24	Relay, central lubrication	(FU:0 B)			
K25	Relay, light sign	(KI:1 C)			
K26A	Relay, foldable rearview mirror arm, Japan	(IF:0 C)			


Wiring harness illustration index


1000	Wiring harness, instruments	page 82
1006	Wiring harness, roof	page 91
1007	Wiring harness, floor	page 95
1025	Wiring harness, engine-chassi	page 101
1030	Wiring harness, engine	page 103
1037	Wiring harness, bogie lift	page 105
1040	Wiring harness, frame	page 106
1047	Wiring harness, roof beacon light	page 107
1056	Wiring harness, air dryer	page 109
1062	Wiring harness, parking heater, frame	page 109
1063	Wiring harness, trailer connections	page 110
1072	Wiring harness, air suspension chassi	page 111
1077	Wiring harness, side marking lamps	page 112
1083	Wiring harness, door	page 113
1086	Wiring harness, ABS chassi	page 115
1401	Wiring harness, solenoid valves	page 118
1403	Wiring harness, retarder	page 119
1435	Wiring harness, main switch	page 120
1436	Wiring harness, roof sign lighting	page 107
1458	Wiring harness, front wheel drive	page 122
1460	Wiring harness, cab-battery box	page 120
1470	Wiring harness, el.operated mirror arch	page 133
1472	Wiring harness, load indicator	page 123
1476	Wiring harness, cab-engine	page 101
1484	Wiring harness, floor gear shift selector	page 124
1493	Wiring harness, power steering	page 126
1494	Wiring harness, gearbox	page 127
1499	Wiring harness, cab-gearbox	page 127
1501	Wiring harness, upper front	page 131
1502	Wiring harness, lower front left	page 131
1503	Wiring harness, lower front right	page 132
1504	Wiring harness, firewall	page 133
1505	Wiring harness, body builder connections	page 134
1506	Wiring harness, demountable (swap-body)	page 134
1507	Wiring harness, ESP chassi	page 136

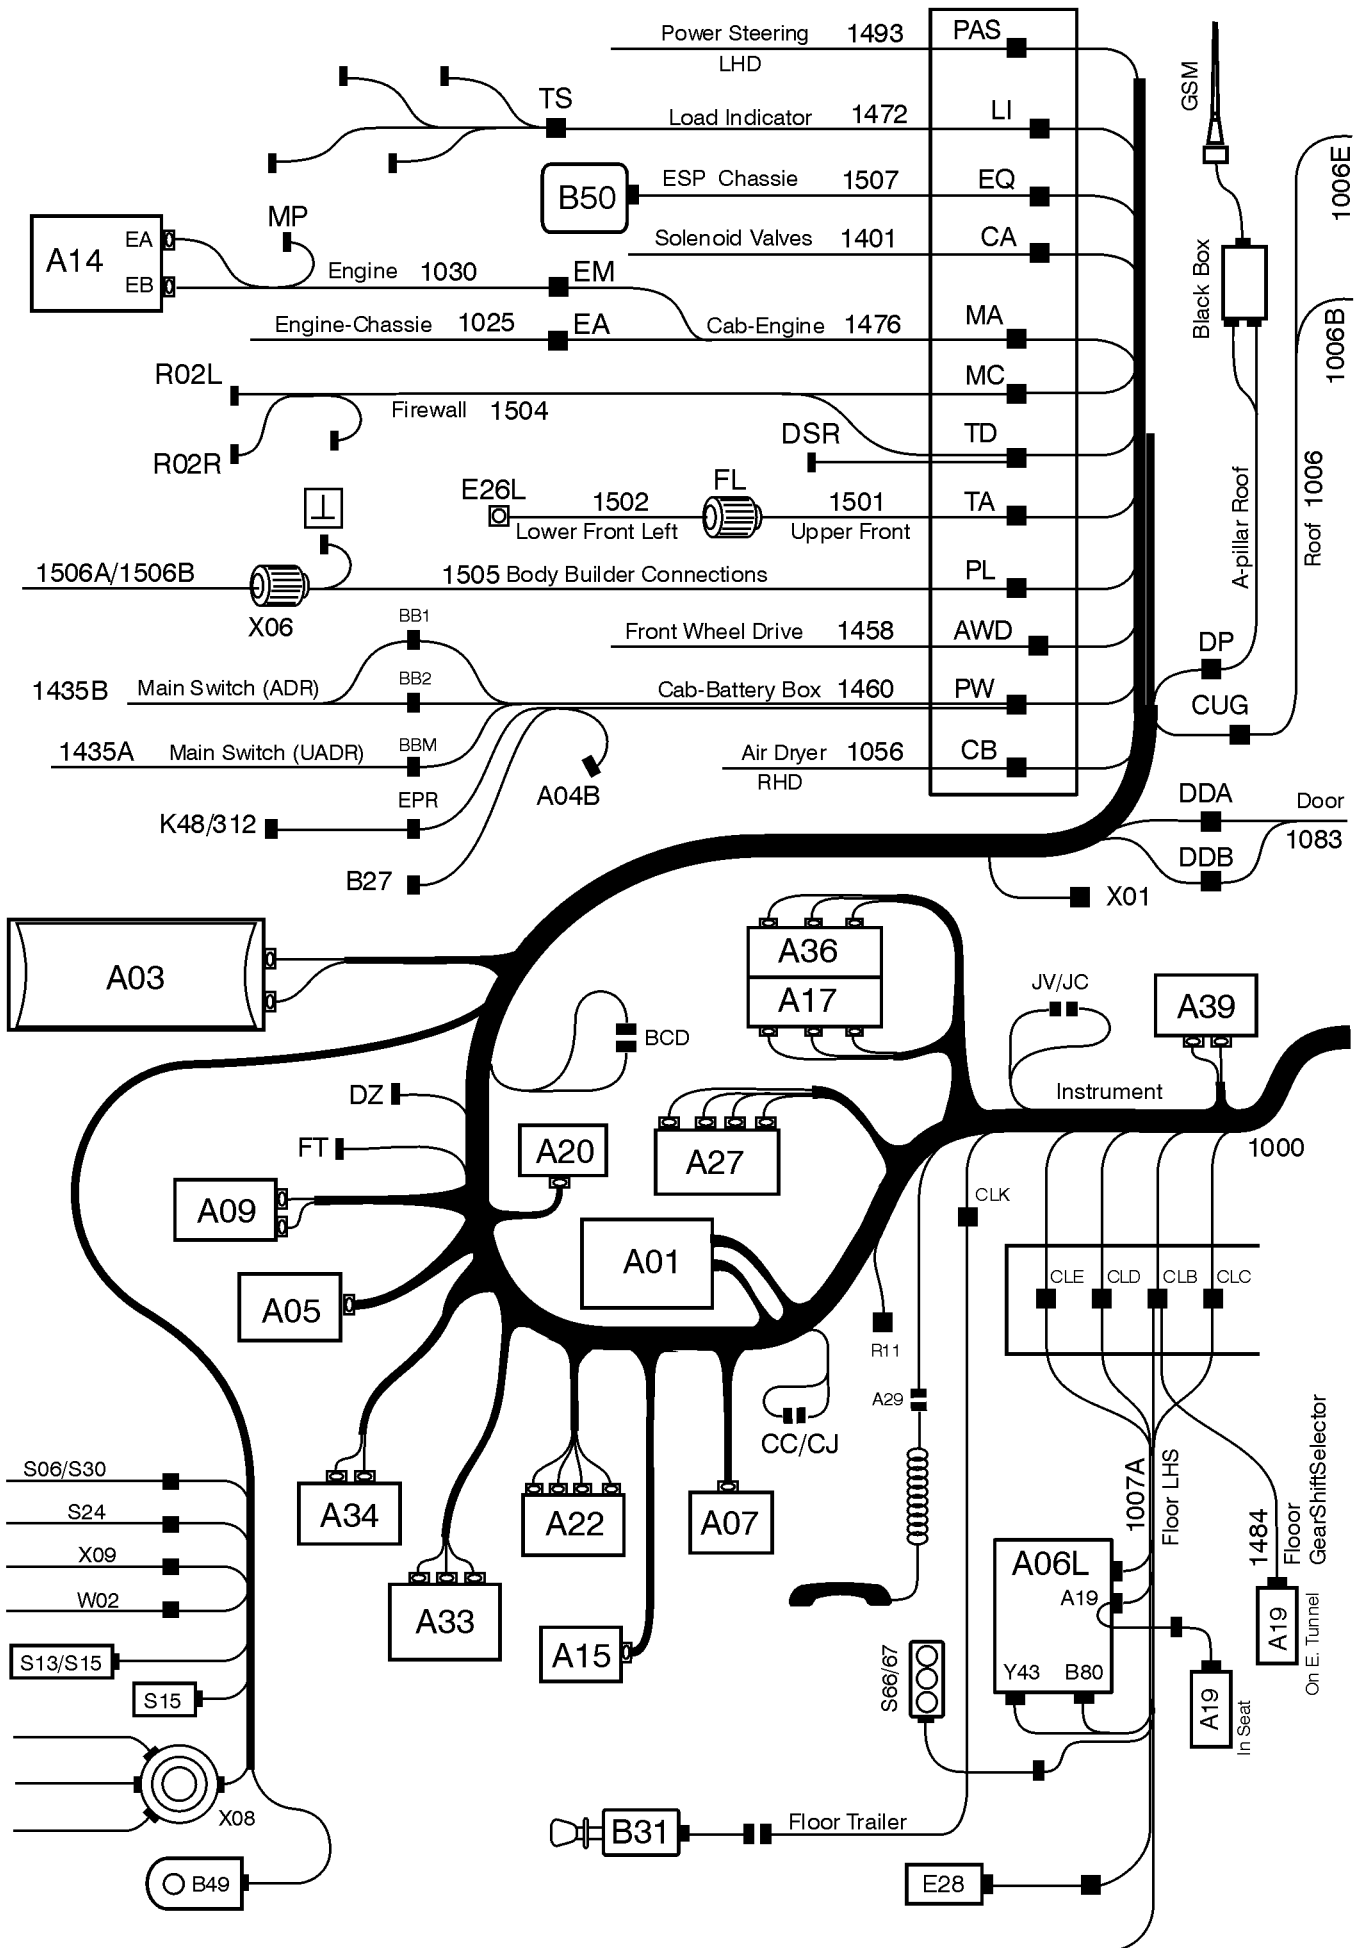

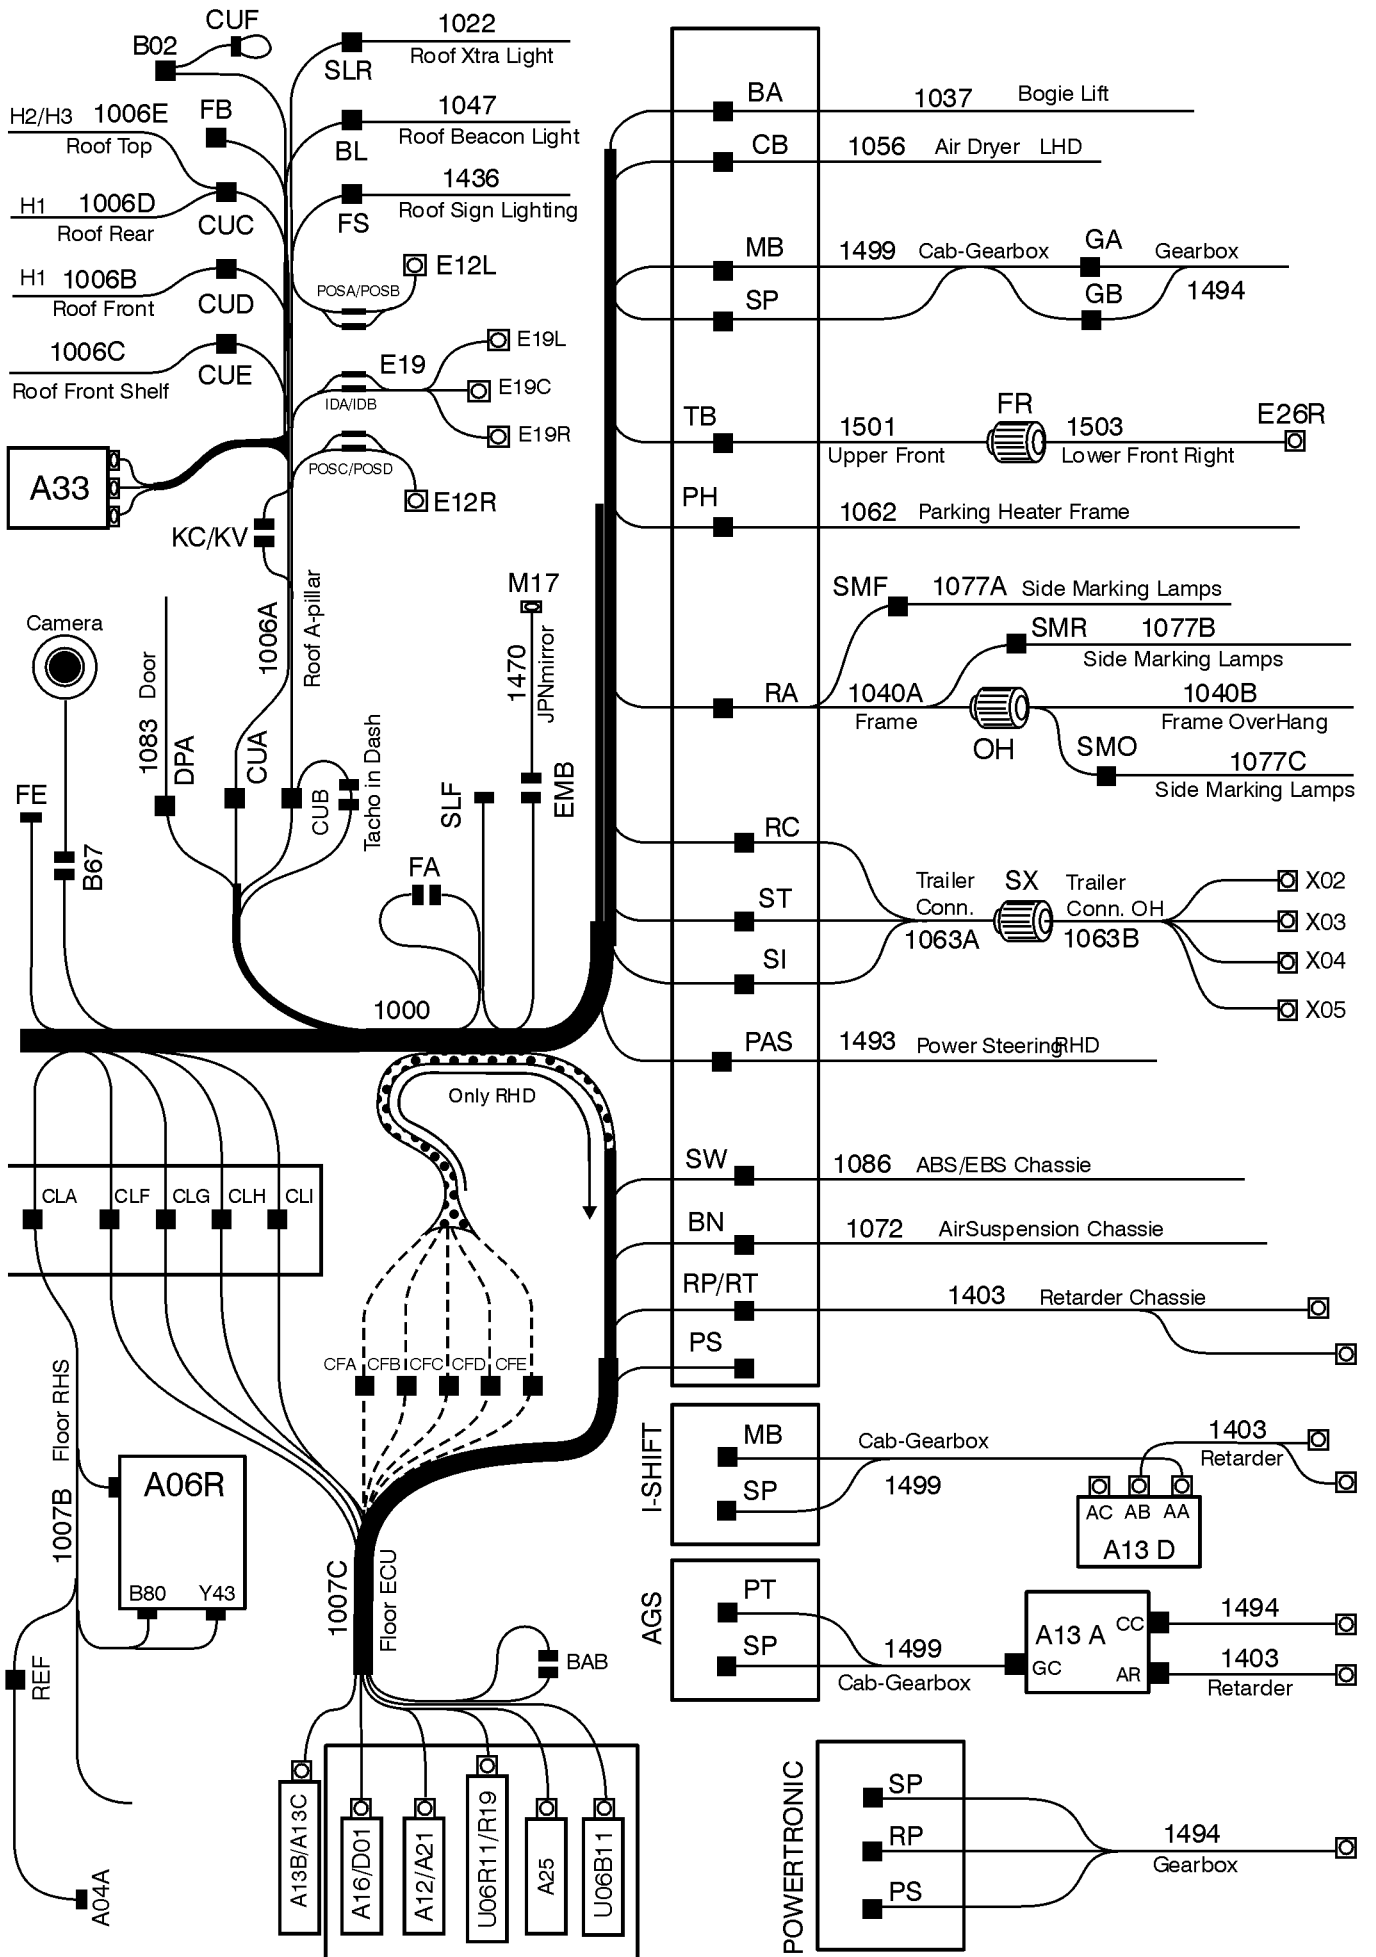

Earth connections

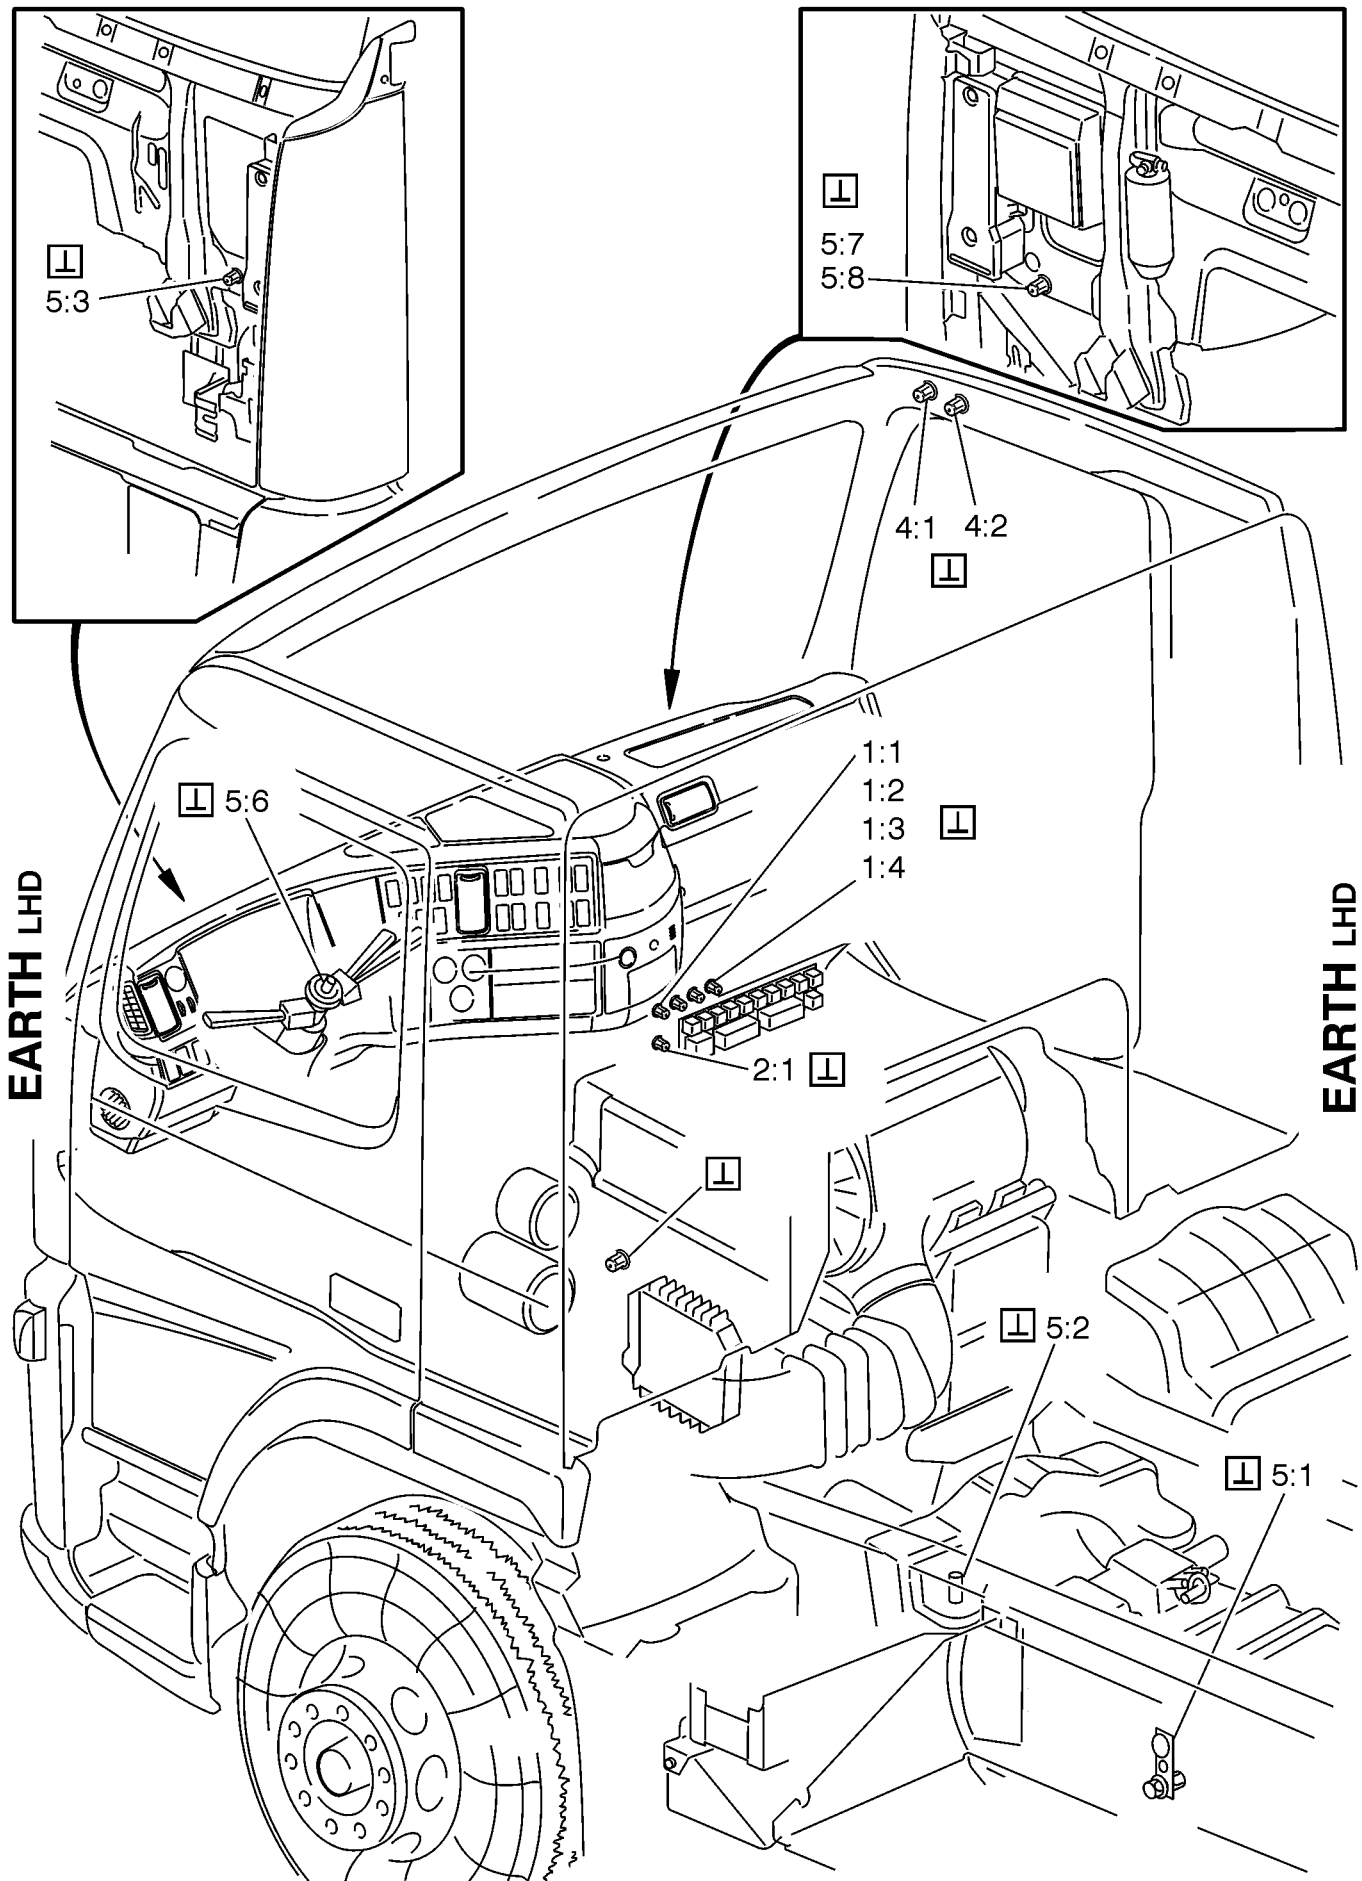

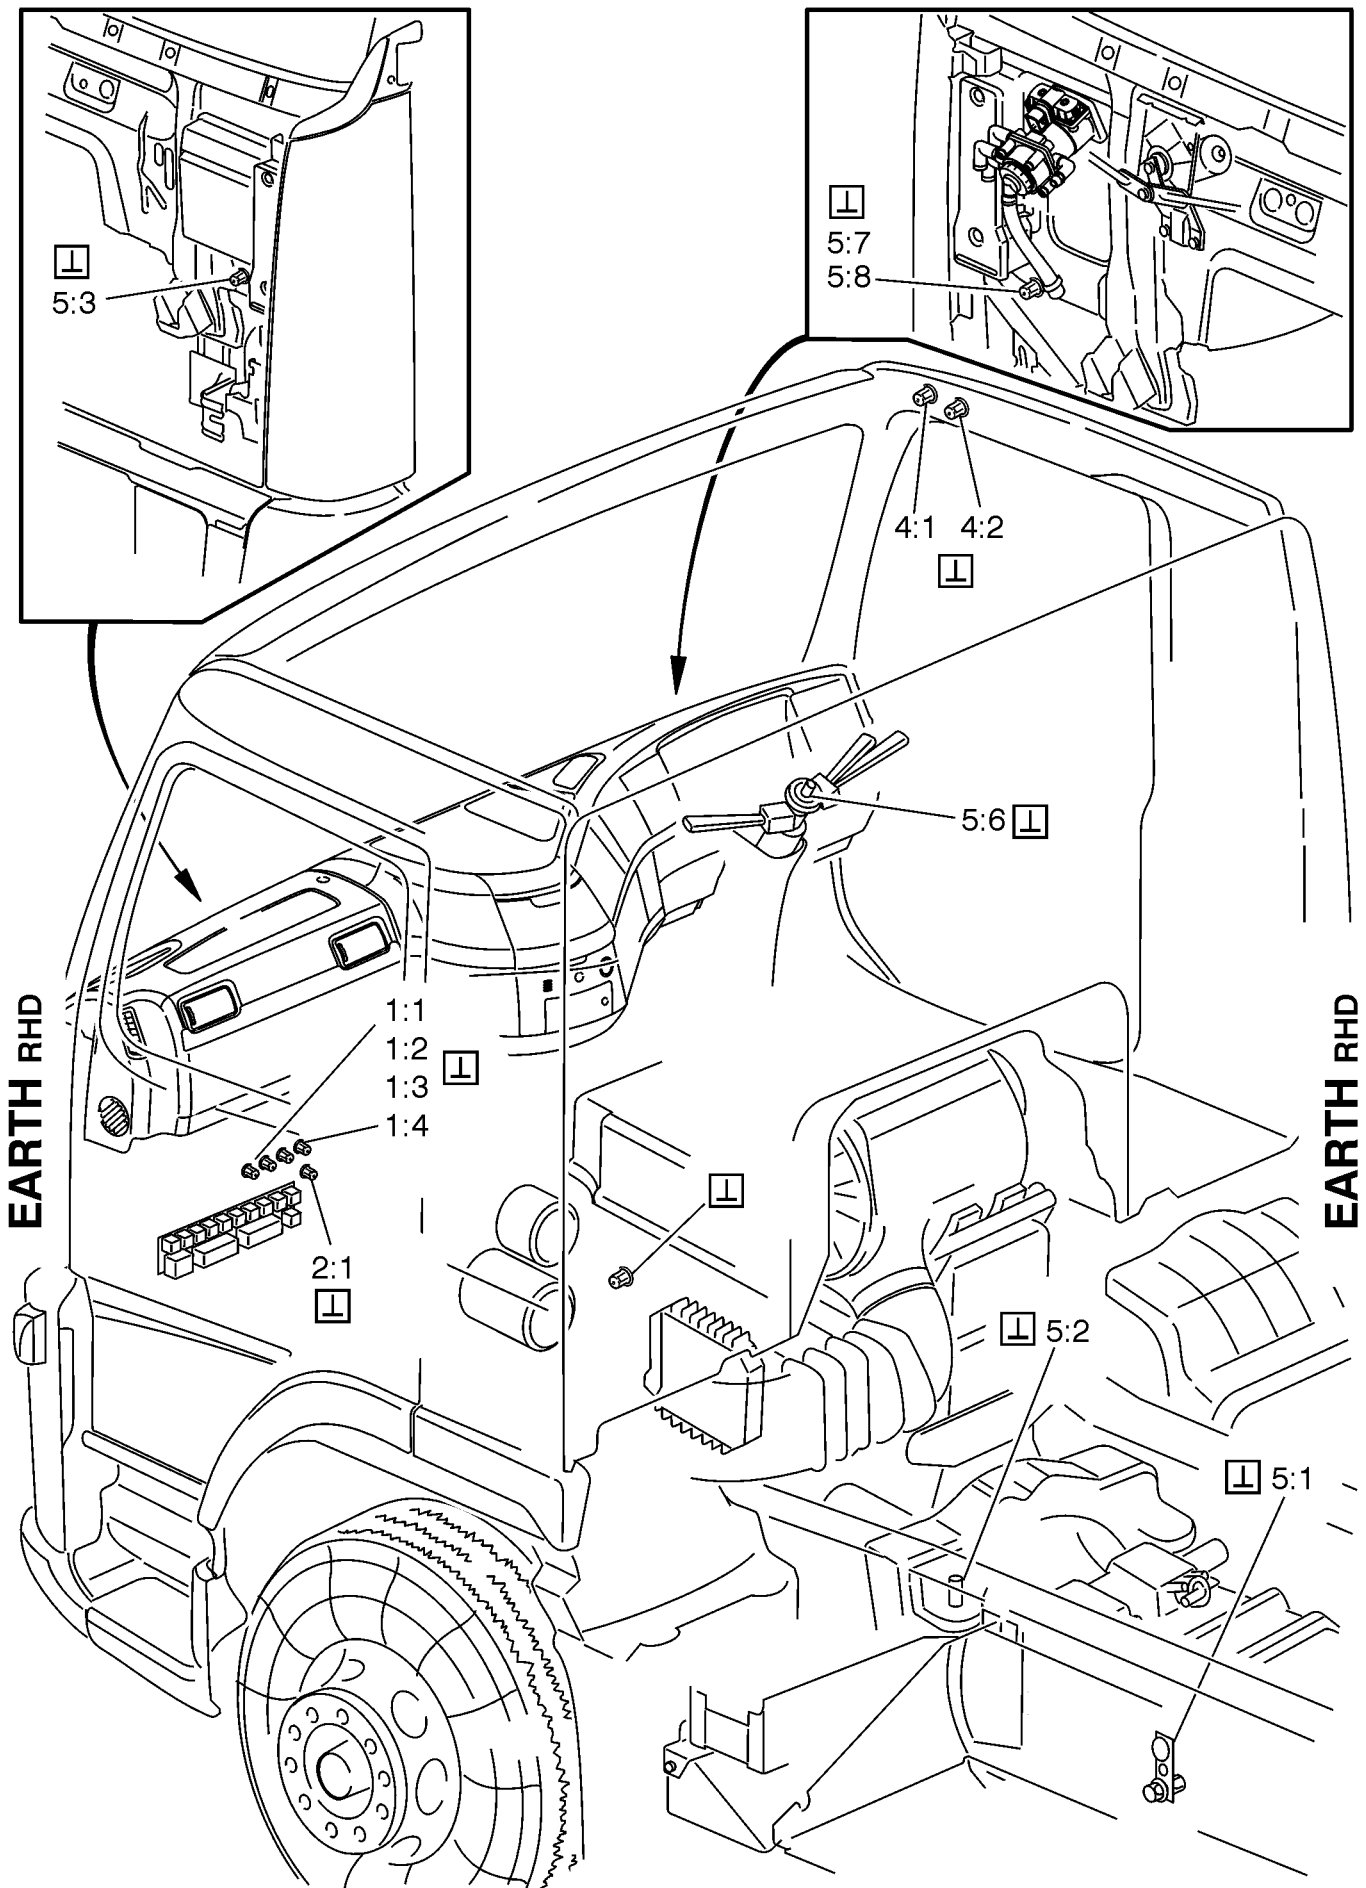

List of earth connections

1:2	(BA:2 E)	4:1:2	(GA:0 E)	5:2	(AA:2 E)
1:3	(AE:4 E)	4:1:2	(IH:0 E)	5:2	(AE:2 E)
1:4	(AA:2 E)	4:1:2	(KI:1 B)	5:2	(AE:3 E)
2:1	(CP:1 E)	4:2	(IQ:1 E)	5:3	(AA:2 D)
2:1	(ME:0 B)	4:2:2	(HI:0 B)	5:4	(FK:3 E)
2:1	(NA:2 C)	4:2:5	(KM:0 E)	5:6	(GQ:1 E)
2:1	(NR:2 C)	4:1F	(NI:1 E)	5:7	(GB:3 E)
2:1B	(GB:0 E)	5:1	(AA:0 E)	5:7	(GC:1 E)
2:1C	(NI:0 E)	5:1	(NA:4 D)	5:8	(EC:1 E)
4:1:1	(GA:1 E)	5:1	(NR:3 D)		
4:1:1	(GA:4 E)	5:2	(AA:0 E)		
4:1:2	(BN:0 C)				

List of connectors

ADR1:1	(AE:1 C)	BCD:10	(XA:3 B)	CFF:2	(CP:4 B)
ADR1:2	(AE:1 C)	BCD:11	(XA:4 B)	CFF:3	(CP:3 C)
ADR2:1	(AE:1 C)	BCD:12	(IS:2 D)	CFF:4	(CP:3 C)
ADR2:2	(AE:2 C)	BCD:13	(XA:2 B)	CFF:5	(CP:4 C)
ADR3:1	(AE:1 C)	BCD:14	(XA:4 B)	CLA:1	(IA:0 B)
ADR3:2	(AE:2 C)	BL:1	(KM:0 C)	CLA:2	(IA:1 B)
ADR4:1	(AE:2 C)	BL:2	(KM:0 D)	CLA:3	(BI:1 C)
ADR4:2	(AE:2 C)	BN:1	(FA:2 A)	CLA:4	(IA:0 D)
AR:1	(DE:1 D)	BN:2	(FA:1 D)	CLA:5	(IH:4 D)
AR:2	(DE:0 C)	BN:3	(FA:2 D)	CLA:6	(BI:3 D)
AR:3	(DE:0 C)	BN:4	(FA:2 D)	CLA:7	(NK:0 D)
AR:4	(DE:0 C)	BN:5	(FA:1 C)	CLA:8	(FA:4 D)
AR:5	(DE:1 C)	BN:6	(FA:1 C)	CLA:9	(AE:2 C)
AR:6	(DE:1 C)	BN:7	(FA:1 C)	CLA:9	(FA:4 D)
AR:7	(DE:1 C)	BN:8	(FA:2 D)	CLA:10	(AE:2 C)
AWD:3	(DU:2 C)	BN:9	(FA:0 C)	CLA:10	(FA:4 D)
AWD:4	(DU:2 C)	BN:10	(FA:1 D)	CLA:11	(AE:2 C)
AWD:5	(DU:4 C)	BN:11	(FA:2 C)	CLA:11	(FA:4 D)
AWD:6	(DU:4 C)	BN:12	(FA:1 C)	CLA:12	(AE:2 C)
AWD:8	(DU:2 D)	BN:13	(FA:2 C)	CLA:12	(FA:4 D)
BA:1	(FK:1 D)	BN:14	(FA:0 D)	CLA:13	(FA:4 D)
BA:2	(FK:3 D)	BN:15	(FA:1 D)	CLA:14	(FA:3 D)
BA:3	(FK:0 C)	BN:16	(FA:1 D)	CLA:15	(FA:3 D)
BA:5	(FK:1 D)	BN:16	(FG:1 C)	CLA:16	(IS:3 C)
BA:7	(FK:3 C)	BN:17	(FA:1 D)	CLA:17	(IS:3 C)
BA:8	(FK:1 D)	BN:18	(FA:1 D)	CLA:19	(IQ:3 C)
BAB:1	(XA:4 D)	BN:18	(FG:0 C)	CLA:20	(BI:3 D)
BAB:2	(XA:2 D)	BN:19	(FA:0 D)	CLA:21	(IQ:3 D)
BAB:3	(XA:3 D)	BN:20	(FA:0 D)	CLB:1	(DB:1 B)
BAB:4	(XA:2 D)	BN:21	(FM:0 D)	CLB:2	(DB:1 B)
BAB:5	(XA:3 D)	CA:1	(DQ:0 D)	CLB:3	(DB:0 B)
BAB:6	(XA:2 D)	CA:2	(GB:3 B)	CLB:4	(DB:0 B)
BAB:7	(XB:3 D)	CA:3	(DU:1 C)	CLB:5	(DB:0 B)
BAB:8	(XA:3 D)	CA:4	(DQ:0 C)	CLB:6	(DB:0 B)
BAB:9	(XA:3 D)	CA:5	(GB:3 B)	CLB:7	(DB:0 D)
BAB:10	(XB:3 D)	CA:9	(DU:1 C)	CLB:8	(DB:0 D)
BAB:11	(XB:2 D)	CA:11	(EM:2 B)	CLB:9	(DB:0 B)
BAB:12	(XB:2 D)	CA:12	(EM:2 B)	CLB:11	(DB:3 B)
BAB:13	(XB:3 D)	CA:13	(EM:2 B)	CLB:12	(DB:3 B)
BAB:14	(XB:2 D)	CA:14	(EM:2 B)	CLB:15	(DB:1 D)
BAB:15	(XB:1 D)	CA:16	(DU:1 D)	CLC:1	(HI:0 C)
BAB:16	(XB:3 D)	CA:17	(FU:0 C)	CLC:2	(HI:0 C)
BAB:17	(XB:3 D)	CA:18	(FU:0 D)	CLC:3	(HI:0 C)
BAB:18	(XB:1 D)	CA:19	(NC:0 C)	CLC:4	(HI:2 C)
BB1:1	(AA:0 B)	CA:19	(NU:0 C)	CLC:6	(HI:2 C)
BB1:2	(AE:1 D)	CA:20	(NC:1 C)	CLC:7	(HI:3 C)
BB1:3	(AE:1 D)	CA:20	(NU:1 C)	CLC:8	(HI:1 C)
BB1:4	(AE:1 D)	CB:1	(FQ:0 B)	CLC:9	(HI:1 C)
BB1:5	(AE:2 D)	CB:2	(FQ:0 C)	CLC:10	(HI:4 C)
BB1:6	(AE:2 D)	CB:3	(BA:0 D)	CLC:11	(HI:3 C)
BB2:1	(AE:1 A)	CB:4	(BA:0 D)	CLC:12	(HI:2 C)
BB2:2	(AE:1 D)	CC/CJ:1	(IZ:2 B)	CLD:1	(IX:0 C)
BB2:3	(AE:1 D)	CC/CJ:2	(IZ:2 B)	CLD:2	(IX:0 C)
BBM:1	(AA:0 B)	CC/CJ:3	(IZ:1 A)	CLD:3	(IX:1 C)
BBM:2	(AA:0 B)	CC/CJ:4	(IZ:1 B)	CLD:4	(IX:1 C)
BBM:3	(AA:1 C)	CC:1	(DE:3 D)	CLE:1	(IA:1 B)
BCD:1	(XA:2 B)	CC:3	(DE:3 C)	CLE:2	(IA:3 B)
BCD:2	(XA:3 B)	CC:4	(DE:2 C)	CLE:3	(BI:1 C)
BCD:3	(XB:0 C)	CC:5	(DE:3 C)	CLE:4	(IA:1 E)
BCD:4	(XA:2 B)	CC:6	(DE:2 C)	CLE:5	(IH:4 D)
BCD:5	(XA:2 B)	CC:9	(DE:2 C)	CLE:6	(BI:3 C)
BCD:6	(IS:2 D)	CC:10	(DE:2 C)	CLE:7	(NK:0 D)
BCD:7	(XA:3 B)	CC:11	(DE:2 C)	CLE:8	(IH:4 C)
BCD:8	(XA:3 B)	CC:12	(DE:2 D)	CLE:9	(AE:1 C)
BCD:9	(XB:0 C)	CFF:1	(CP:4 B)	CLE:9	(FA:2 D)

CLE:10	(AE:1 C)	CLH:1	(FK:2 B)	CUA:20	(HI:1 C)
CLE:10	(FA:2 D)	CLH:2	(FA:4 C)	CUA:20	(HM:4 C)
CLE:11	(AE:1 C)	CLH:2	(FK:2 B)	CUA:21	(GB:0 B)
CLE:11	(FA:3 D)	CLH:3	(FA:2 C)	CUB/TACH:1	(BM:1 B)
CLE:12	(AE:1 C)	CLH:3	(FK:2 B)	CUB/TACH:2	(BM:3 C)
CLE:12	(FA:3 D)	CLH:4	(FG:0 C)	CUB/TACH:3	(BM:1 B)
CLE:13	(FA:3 D)	CLH:4	(FK:2 B)	CUB/TACH:4	(BM:2 B)
CLE:14	(FA:3 D)	CLH:5	(FA:2 C)	CUB/TACH:5	(BM:3 B)
CLE:15	(FA:3 D)	CLH:5	(FK:2 B)	CUB/TACH:6	(BM:3 C)
CLE:16	(FA:3 D)	CLH:6	(FA:4 D)	CUB/TACH:7	(BM:2 C)
CLE:17	(IS:2 C)	CLH:6	(FA:2 D)	CUB/TACH:8	(BM:2 C)
CLE:18	(IS:2 C)	CLH:7	(FA:2 D)	CUB/TACH:9	(BM:2 C)
CLE:20	(BI:3 C)	CLH:7	(FA:4 D)	CUB/TACH:10	(BM:2 C)
CLF:1	(IR:1 B)	CLH:8	(FA:3 D)	CUB/TACH:11	(IU:0 B)
CLF:2	(IR:1 B)	CLH:8	(FA:4 D)	CUB/TACH:12	(KI:1 C)
CLF:3	(IR:1 C)	CLH:9	(FA:3 D)	CUB/TACH:13	(IM:0 B)
CLF:4	(IR:1 D)	CLH:9	(FA:4 D)	CUB/TACH:14	(HI:2 B)
CLF:5	(IR:0 B)	CLH:10	(FA:3 D)	CUB/TACH:14	(HM:2 B)
CLF:6	(IR:0 B)	CLH:10	(FA:4 D)	CUB/TACH:15	(HI:1 B)
CLF:7	(IR:0 C)	CLH:11	(FA:3 D)	CUB/TACH:15	(HM:2 B)
CLF:8	(IR:0 C)	CLH:11	(FA:4 D)	CUB/TACH:18	(IH:3 A)
CLF:9	(IR:0 D)	CLH:12	(FA:3 D)	CUB:1	(BN:1 A)
CLF:10	(DB:2 B)	CLH:13	(FM:0 C)	CUB:2	(BN:3 C)
CLF:10	(DM:1 C)	CLH:14	(FG:0 C)	CUB:3	(BN:1 A)
CLF:11	(DB:1 D)	CLH:15	(FG:0 C)	CUB:4	(BN:2 A)
CLF:11	(DM:0 D)	CLH:16	(FA:3 C)	CUB:5	(BN:3 A)
CLF:12	(DM:0 C)	CLH:17	(FA:3 C)	CUB:6	(BN:3 C)
CLF:13	(XA:3 D)	CLH:18	(FG:0 C)	CUB:7	(BN:2 C)
CLF:14	(XA:3 D)	CLH:19	(FG:1 C)	CUB:8	(BN:2 C)
CLF:15	(XB:3 D)	CLH:20	(FA:3 C)	CUB:9	(BN:2 C)
CLF:16	(XB:2 D)	CLH:21	(FA:3 D)	CUB:10	(BN:2 C)
CLF:17	(FG:1 C)	CLI:1	(EM:0 C)	CUB:11	(BN:3 C)
CLF:18	(XA:4 C)	CLI:2	(EM:0 C)	CUB:12	(KI:1 B)
CLF:19	(XA:2 C)	CLI:3	(EM:0 C)	CUB:13	(IM:0 B)
CLF:20	(XB:1 C)	CLI:4	(EM:0 C)	CUB:14	(HI:2 C)
CLF:21	(XB:3 C)	CLI:5	(EM:2 B)	CUB:14	(HM:2 B)
CLG:1	(EE:0 B)	CLI:6	(EM:2 B)	CUB:15	(HI:1 A)
CLG:1	(EI:0 B)	CLI:7	(EM:2 B)	CUB:15	(HM:2 B)
CLG:1	(EM:0 B)	CLI:8	(EM:2 B)	CUB:16	(GC:2 A)
CLG:2	(EE:0 B)	CLI:9	(EQ:1 C)	CUB:17	(GC:3 B)
CLG:2	(EI:0 B)	CLI:10	(EQ:1 C)	CUB:18	(IH:3 B)
CLG:2	(EM:0 B)	CLI:11	(EQ:1 C)	CUB2/CUB:11	(BN:3 C)
CLG:3	(EE:3 B)	CLI:12	(EQ:1 C)	CUB2/CUB:12	(KI:1 B)
CLG:3	(EI:2 B)	CLK:1	(NR:1 A)	CUB2/CUB:13	(IM:0 B)
CLG:3	(EM:3 B)	CLK:2	(NR:1 C)	CUB2/CUB:14	(HI:2 C)
CLG:4	(EM:1 B)	CLK:3	(NR:1 C)	CUB2/CUB:14	(HMI:2 C)
CLG:5	(EM:4 B)	CLK:4	(NR:1 B)	CUB2/CUB:15	(HI:1 A)
CLG:6	(EE:3 B)	CUA:1	(GA:1 C)	CUB2/CUB:15	(HM:2 A)
CLG:6	(EI:3 B)	CUA:2	(GA:4 C)	CUB2/CUB:18	(IH:3 B)
CLG:6	(EM:1 B)	CUA:3	(IH:1 B)	CUC:1	(IH:3 C)
CLG:7	(EM:4 B)	CUA:4	(IH:0 B)	CUC:2	(IH:3 C)
CLG:8	(EM:1 B)	CUA:5	(IH:3 B)	CUC:3	(IH:1 B)
CLG:9	(EM:0 B)	CUA:6	(IH:3 C)	CUC:4	(IH:0 B)
CLG:10	(EM:0 B)	CUA:7	(IQ:0 B)	CUC:5	(IH:3 B)
CLG:13	(EM:0 D)	CUA:8	(KM:0 C)	CUC:6	(IQ:1 C)
CLG:14	(EM:0 D)	CUA:9	(NI:1 B)	CUC:7	(IQ:0 C)
CLG:15	(EQ:0 D)	CUA:10	(NI:1 B)	CUC:8	(IQ:1 C)
CLG:16	(EQ:0 D)	CUA:11	(KI:1 C)	CUC:9	(IU:2 D)
CLG:17	(EQ:0 D)	CUA:12	(IH:3 C)	CUC:10	(IU:2 D)
CLG:18	(EQ:0 D)	CUA:13	(IU:2 D)	CUC:11	(IU:2 D)
CLG:19	(EQ:2 D)	CUA:14	(IU:2 D)	CUC:12	(IU:2 D)
CLG:20	(EE:4 D)	CUA:15	(IU:2 D)	CUC:13	(HI:1 B)
CLG:20	(EI:4 D)	CUA:16	(IU:2 D)	CUC:14	(HI:1 B)
CLG:20	(EM:2 B)	CUA:17	(HI:1 C)	CUC:14	(HM:3 B)
CLG:21	(EI:0 C)	CUA:18	(HI:1 B)	CUC:15	(HM:3 B)
CLG:21	(EM:0 B)	CUA:18	(HM:3 C)	CUC:16	(HI:1 B)
CLH:1	(FA:3 C)	CUA:19	(HM:3 C)	CUC:16	(HM:4 B)

CUC:17	(IH:3 B)	DSL:2	(NU:2 D)	FA:5	(NI:1 A)
CUC:18	(HI:0 D)	DSR:1	(NU:2 C)	FA:6	(BA:0 C)
CUC:19	(HI:3 B)	DSR:2	(NU:2 D)	FA:7	(BI:1 C)
CUC:19	(HMI:3 B)	DZ:1	(BU:0 B)	FA:8	(GA:4 C)
CUC:20	(HI:3 C)	DZ:2	(BU:0 B)	FA:8	(NA:0 A)
CUC:20	(HM:3 B)	DZ:3	(BU:1 B)	FA:8	(NR:0 A)
CUC:21	(HI:2 A)	E03L-:1	(NI:0 D)	FA:9	(GB:3 D)
CUC:21	(HM:3 B)	E03L+:1	(NI:0 C)	FA:9	(NA:0 A)
CUD:1	(IH:1 B)	E03R-:1	(NI:0 D)	FA:9	(NR:0 A)
CUD:2	(IH:1 B)	E03R+:1	(NI:0 C)	FA:10	(GC:2 B)
CUD:3	(IH:1 D)	EA:1	(AA:3 D)	FA:10	(NA:0 A)
CUE:1	(IH:0 B)	EA:1	(AE:3 D)	FA:10	(NR:0 A)
CUE:3	(IH:0 D)	EA:1	(CS:1 B)	FA:10	(NU:2 B)
CUF:1	(HM:3 C)	EA:2	(AA:3 D)	FA:11	(GB:0 A)
CUF:2	(HM:3 C)	EA:2	(AE:3 D)	FA:11	(NA:2 A)
CUG:1	(NK:2 C)	EA:2	(CS:1 B)	FA:11	(NR:1 A)
CUG:2	(NK:2 C)	EA:3	(CS:2 B)	FA:12	(BA:12 D)
CUG:4	(NK:3 C)	EA:3	(HG:0 D)	FA:13	(GQ:2 C)
CUG:5	(NK:3 C)	EA:3	(HY:2 D)	FA:14	(AA:1 B)
DDA:1	(IM:1 C)	EA:4	(AA:1 D)	FA:15	(GB:2 D)
DDA:2	(IE:0 B)	EA:4	(CS:1 B)	FA:16	(ME:0 C)
DDA:3	(IE:1 B)	EM:1	(CM:1 D)	FA:16	(NA:1 D)
DDA:4	(IE:2 B)	EM:1	(CO:1 B)	FA:16	(NR:2 D)
DDA:5	(IH:2 C)	EM:1	(CS:3 B)	FA:17	(ME:0 C)
DDA:6	(IE:3 B)	EM:2	(CM:2 D)	FA:17	(NA:2 D)
DDA:7	(IM:1 C)	EM:2	(CO:2 B)	FA:17	(NR:3 D)
DDA:8	(IM:1 C)	EM:2	(CS:3 B)	FA:18	(ME:0 C)
DDA:9	(IM:1 C)	EM:3	(CM:2 D)	FA:19	(ME:1 C)
DDA:10	(IU:1 D)	EM:3	(CO:2 B)	FA:19	(NA:3 D)
DDA:11	(IU:1 D)	EM:3	(CS:3 B)	FA:19	(NR:3 D)
DDA:12	(IH:2 C)	EM:4	(CM:1 D)	FA:20	(MA:1 C)
DDA:13	(IE:0 C)	EM:4	(CO:1 B)	FA:21	(MA:1 C)
DDA:14	(IE:1 C)	EM:4	(CS:3 B)	FB:1	(KI:1 A)
DDA:15	(IE:1 C)	EM:5	(CM:1 D)	FB:3	(IZ:2 A)
DDB:1	(IE:1 C)	EM:5	(CO:2 B)	FE:1	(IF:1 A)
DDB:2	(IE:2 C)	EM:5	(CS:3 B)	FE:1	(ME:1 B)
DDB:3	(IE:2 C)	EM:6	(CM:2 D)	FE:1	(NC:0 B)
DDB:4	(IE:0 C)	EM:6	(CO:3 B)	FE:1	(NU:0 A)
DDB:5	(IE:0 B)	EM:6	(CS:2 B)	FE:2	(IF:1 A)
DDB:6	(IE:0 B)	EM:7	(CM:3 D)	FE:2	(ME:1 B)
DDB:7	(IE:1 B)	EM:7	(CO:4 B)	FE:2	(NC:0 B)
DDB:8	(IE:2 B)	EM:8	(CS:2 B)	FE:2	(NU:0 A)
DDB:9	(IE:2 B)	EM:9	(CM:1 D)	FE:3	(IF:1 A)
DP:1	(BU:0 A)	EM:9	(CO:1 B)	FE:3	(ME:1 B)
DP:2	(BU:0 A)	EM:9	(CS:3 B)	FE:3	(NC:0 B)
DP:3	(BU:1 D)	EM:10	(CM:0 D)	FE:3	(NU:0 A)
DP:4	(BU:0 D)	EM:10	(CO:3 B)	FE2:1	(IF:2 A)
DP:5	(BU:0 D)	EM:10	(CS:3 D)	FE2:1	(NC:0 B)
DP:6	(BU:0 D)	EM:11	(CM:2 D)	FE2:1	(NU:0 B)
DP:7	(BU:1 D)	EM:11	(CO:0 B)	FE2:2	(IF:2 A)
DP:8	(BU:1 D)	EM:12	(CM:0 D)	FE2:2	(NC:0 B)
DP:9	(BU:1 D)	EM:12	(CO:4 B)	FE2:2	(NU:0 B)
DP:10	(BU:1 D)	EM:12	(CS:2 B)	FE2:3	(IF:1 A)
DP:11	(BU:1 D)	EMB:1	(IF:0 D)	FE2:3	(NC:0 B)
DP:12	(BU:1 D)	EMB:2	(IF:1 D)	FE2:3	(NU:0 B)
DPA:1	(IM:2 C)	EPR:1	(CM:2 B)	FL:1	(GA:2 D)
DPA:3	(IE:3 B)	EPR:3	(CM:3 B)	FL:2	(GA:2 C)
DPA:4	(IE:3 B)	EPR:4	(CM:2 C)	FL:3	(GA:2 C)
DPA:5	(IH:2 C)	EQ:1	(EQ:1 D)	FL:4	(NK:3 D)
DPA:6	(IE:3 B)	EQ:2	(EQ:1 D)	FL:5	(NK:3 D)
DPA:7	(IM:2 C)	EQ:3	(EQ:1 D)	FL:6	(GA:2 C)
DPA:8	(IM:2 C)	EQ:4	(EQ:1 D)	FL:7	(GA:2 C)
DPA:9	(IM:2 C)	FA:1	(BI:4 B)	FL:8	(GA:1 C)
DPA:10	(IU:1 D)	FA:2	(FA:2 B)	FL:9	(GA:3 C)
DPA:11	(IU:2 D)	FA:3	(FA:2 B)	FL:10	(GQ:1 C)
DPA:12	(IH:2 C)	FA:4	(GB:2 C)	FL:11	(GQ:1 B)
DSL:1	(NU:2 C)	FA:5	(GA:2 C)	FL:12	(GQ:1 B)

FL:13	(GU:0 D)	JV/JC:11	(BA:3 C)	MB:8	(BI:1 D)
FL:14	(GU:0 D)	JV/JC:12	(BA:3 D)	MB:8	(DN:0 B)
FL:15	(GU:0 D)	JV/JC:13	(IM:2 C)	MB:9	(BA:0 B)
FL:16	(GQ:1 C)	JV/JC:14	(BA:0 C)	MB:9	(DN:0 B)
FL:21	(KA:0 C)	JV/JC:15	(BU:0 B)	MB:14	(BI:1 C)
FL:25	(GA:2 D)	JV/JC:16	(IM:2 A)	MB:15	(GB:3 D)
FR:1	(GA:3 D)	JV/JC:17	(HP:0 D)	MB:16	(BA:0 C)
FR:2	(GA:3 C)	JV/JC:18	(KM:1 C)	MC:1	(EM:0 D)
FR:3	(GA:3 C)	JV/JC:19	(BI:2 D)	MC:2	(EM:0 D)
FR:4	(NK:3 D)	JV/JC:20	(BU:0 B)	MC:3	(EM:0 D)
FR:5	(NK:4 D)	JV/JC:21	(IX:2 B)	MC:4	(EM:0 D)
FR:6	(GA:2 C)	KV/KC:1	(GB:0 B)	MP:1	(CO:3 C)
FR:7	(GA:3 C)	KV/KC:2	(GB:0 B)	MT:1	(CS:1 C)
FR:8	(GA:4 C)	KV/KC:3	(GB:0 B)	MT:2	(CS:1 C)
FR:9	(GA:3 C)	LI:1	(FG:0 B)	MT:3	(CS:3 D)
FR:10	(GM:0 C)	LI:2	(FG:0 B)	MT:5	(CS:2 D)
FR:11	(GM:0 C)	LI:3	(FG:0 B)	MT:6	(CS:2 D)
FR:13	(GU:1 D)	LI:4	(FG:0 B)	MT:7	(CS:2 D)
FR:14	(GU:1 D)	LI:5	(FG:1 B)	MT:8	(CS:2 D)
FR:15	(GU:1 D)	LI:6	(FG:1 B)	MT:9	(CS:4 B)
FR:16	(GM:1 C)	MA:1	(CS:2 A)	MT:10	(CS:4 B)
FR:21	(KA:0 C)	MA:1	(HG:0 C)	OH:1	(GC:1 C)
FR:25	(GA:3 D)	MA:1	(HY:2 D)	OH:2	(GC:2 C)
FS:1	(KI:1 D)	MA:2	(AA:1 D)	OH:3	(GC:1 C)
FS:2	(KI:1 D)	MA:2	(CS:1 A)	OH:4	(GC:2 C)
FT:1	(IR:0 D)	MA:3	(CS:3 A)	OH:9	(GC:1 C)
FT:2	(IR:0 D)	MA:3	(XB:0 B)	OH:13	(GC:1 C)
FT:3	(IR:1 D)	MA:4	(CS:3 A)	OH:14	(GC:2 C)
GA:1	(GB:3 D)	MA:4	(XB:0 B)	OH:17	(GC:1 C)
GA:2	(BA:1 C)	MA:5	(CS:3 A)	OH:18	(GC:2 C)
GA:2	(BI:1 D)	MA:5	(XA:0 B)	OH:24	(GC:1 E)
GA:3	(BI:1 C)	MA:6	(CS:3 A)	PAS:1	(BI:1 C)
GA:4	(BA:1 B)	MA:6	(XA:1 B)	PAS:1	(FP:0 C)
GA:5	(BA:0 B)	MA:7	(CM:2 C)	PAS:2	(FP:1 C)
GA:6	(BA:0 C)	MA:7	(CS:2 A)	PAS:3	(FP:1 C)
GA:7	(BA:0 C)	MA:8	(CM:2 C)	PAS:6	(BI:1 D)
GB:1	(BI:2 C)	MA:9	(AA:3 D)	PH:1	(HM:0 B)
GB:2	(BI:2 D)	MA:9	(AE:3 D)	PH:1	(HP:0 B)
GB:3	(BM:2 D)	MA:11	(CM:1 C)	PH:2	(HM:0 B)
GB:4	(BM:2 D)	MA:11	(CS:3 A)	PH:2	(HP:0 C)
GB:5	(BM:2 D)	MA:12	(CM:0 C)	PH:3	(HM:2 B)
GB:6	(BM:2 D)	MA:12	(CS:4 A)	PH:3	(HP:0 D)
GC:1	(DE:0 B)	MA:13	(AA:3 D)	PH:4	(HM:1 B)
GC:2	(DE:0 B)	MA:13	(AE:4 C)	PH:5	(HM:2 B)
GC:3	(DE:0 B)	MA:13	(CS:1 A)	PH:6	(HM:3 C)
GC:4	(DE:0 B)	MA:14	(CM:3 C)	PH:7	(HM:2 D)
GC:7	(DE:2 B)	MA:15	(BA:0 D)	PH:8	(HM:0 D)
GC:8	(DE:2 B)	MA:15	(CP:2 B)	PH:9	(HM:0 D)
GC:10	(DE:3 E)	MA:15	(CS:3 A)	PH:10	(HM:3 D)
GC:11	(DE:0 B)	MA:16	(BI:0 D)	PL:1	(NC:3 C)
GC:12	(DE:0 C)	MA:16	(CS:1 A)	PL:2	(NA:1 C)
IDA:1	(GA:1 C)	MA:17	(CU:0 B)	PL:2	(NR:1 C)
IDB:1	(GA:0 D)	MA:19	(CP:2 B)	PL:3	(NA:1 C)
IS:1	(DE:3 B)	MA:19	(CS:2 B)	PL:3	(NR:1 C)
IS:2	(DE:3 B)	MA:20	(CP:2 B)	PL:4	(NA:1 C)
IS:3	(DE:2 C)	MA:20	(CS:2 A)	PL:4	(NR:2 C)
IS:4	(DE:2 C)	MB:1	(DN:0 B)	PL:5	(NA:1 C)
JV/JC:1	(GC:1 B)	MB:1	(BI:2 D)	PL:5	(NR:1 C)
JV/JC:2	(KA:1 D)	MB:2	(BA:0 C)	PL:6	(NA:2 C)
JV/JC:3	(DQ:1 B)	MB:2	(DN:1 B)	PL:6	(NR:3 C)
JV/JC:4	(AE:3 B)	MB:3	(DN:1 B)	PL:7	(NC:1 C)
JV/JC:5	(AE:3 B)	MB:4	(BA:1 B)	PL:7	(NU:1 C)
JV/JC:6	(AE:3 B)	MB:4	(DN:1 B)	PL:8	(NA:4 C)
JV/JC:7	(AE:3 D)	MB:5	(BI:2 C)	PL:8	(NR:1 C)
JV/JC:8	(HI:3 D)	MB:6	(DN:0 B)	PL:9	(NC:1 C)
JV/JC:9	(BA:0 C)	MB:7	(DN:0 B)	PL:9	(NU:1 C)
JV/JC:10	(FU:0 D)	MB:8	(BA:1 C)	PL:10	(NC:2 C)

PL:10	(NU:2 C)	PW:6	(AE:1 D)	RT:2	(DM:2 C)
PL:11	(NA:0 C)	PW:7	(AE:2 C)	RT:3	(DM:2 C)
PL:11	(NR:0 C)	PW:8	(AE:2 C)	RT:4	(DM:2 C)
PL:12	(NA:0 C)	PW:9	(BI:2 D)	RT:5	(DM:2 C)
PL:12	(NR:0 C)	PW:10	(BI:2 C)	RT:6	(DM:3 C)
PL:13	(NC:1 C)	PW:11	(BI:2 C)	RT:7	(DM:3 C)
PL:13	(NU:1 C)	PW:12	(AA:0 B)	SI:1	(CP:3 B)
PL:14	(NC:1 C)	PW:15	(CM:3 B)	SI:1	(EC:1 C)
PL:14	(NU:1 C)	PW:16	(CM:2 B)	SI:1	(GK:3 A)
PL:15	(NC:2 C)	PW:17	(CM:2 C)	SI:2	(EC:0 C)
PL:15	(NU:2 C)	PW:18	(AA:3 D)	SI:2	(GK:3 A)
PL:16	(NC:2 C)	PW:19	(IQ:3 C)	SI:4	(EM:0 D)
PL:16	(NU:2 C)	PW:20	(IQ:3 D)	SI:4	(GK:4 A)
PL:17	(NC:2 C)	RA:1	(GC:1 E)	SI:5	(EM:0 D)
PL:17	(NU:2 C)	RA:2	(GC:1 B)	SI:5	(GK:4 A)
PL:18	(NA:3 C)	RA:3	(GC:1 B)	SLF:1	(NI:0 C)
PL:18	(NR:3 C)	RA:4	(GC:1 B)	SLF:2	(NI:0 D)
PL:19	(NC:3 C)	RA:5	(GC:2 B)	SLR:1	(NI:1 C)
PL:20	(NC:2 C)	RA:6	(GC:2 B)	SLR:2	(NI:1 D)
PL:20	(NU:2 C)	RA:7	(GC:1 B)	SMF:1	(GC:3 C)
PL:21	(NC:3 C)	RA:8	(GC:1 B)	SMF:2	(GC:0 C)
PL:21	(NU:3 C)	RA:9	(GC:2 B)	SMF:4	(GC:3 E)
PS:1	(DI:0 C)	RA:10	(GC:2 B)	SMO:1	(GC:2 C)
PS:2	(DI:0 C)	RA:12	(BI:2 C)	SMO:2	(GC:1 C)
PS:3	(DI:0 C)	RA:13	(BI:2 D)	SMO:4	(GC:1 D)
PS:4	(DI:0 C)	RA:14	(DU:3 C)	SMR:1	(GC:3 C)
PS:5	(DI:0 C)	RA:15	(HI:0 C)	SMR:2	(GC:0 C)
PS:6	(DI:0 C)	RA:15	(HM:0 D)	SMR:4	(GC:3 E)
PS:7	(DI:1 C)	RA:16	(HI:0 C)	SP:1	(BM:2 D)
PS:8	(DI:1 C)	RA:16	(HM:0 D)	SP:2	(BM:2 D)
PS:9	(DI:1 C)	RA:17	(DU:3 C)	SP:3	(BM:2 D)
PS:14	(DI:1 C)	RC:2	(GB:1 D)	SP:4	(BM:2 C)
PS:15	(DI:1 C)	RC:2	(GK:0 A)	ST:1	(CP:3 B)
PS:16	(DI:1 C)	RC:3	(GB:2 D)	ST:1	(EC:2 C)
PS:17	(DI:1 C)	RC:3	(GK:1 A)	ST:1	(GK:3 A)
PS:18	(DI:1 C)	RC:4	(GB:1 D)	ST:2	(CP:3 B)
PS:19	(DI:1 C)	RC:4	(GK:1 A)	ST:3	(CP:3 B)
PS:20	(DI:1 C)	RC:5	(GB:2 D)	SW:1	(EE:0 C)
PS:21	(DI:1 C)	RC:5	(GK:1 A)	SW:1	(EI:0 C)
PS:1	(DI:0 C)	RC:6	(GB:2 D)	SW:1	(EM:1 C)
PS:2	(DI:0 C)	RC:6	(GK:1 A)	SW:2	(EE:0 C)
PS:3	(DI:0 C)	RC:7	(ME:0 C)	SW:2	(EI:0 C)
PS:4	(DI:0 C)	RC:9	(ME:0 C)	SW:2	(EM:1 C)
PS:5	(DI:0 C)	RC:10	(GB:2 D)	SW:3	(EE:0 D)
PS:6	(DI:0 C)	RC:10	(GK:1 A)	SW:3	(EI:1 C)
PS:7	(DI:1 C)	RC:11	(ME:0 C)	SW:3	(EM:1 C)
PS:8	(DI:1 C)	RC:12	(ME:1 C)	SW:4	(EE:1 C)
PS:9	(DI:1 C)	RC:14	(GC:4 B)	SW:4	(EI:1 C)
PS:14	(DI:1 C)	RC:17	(ME:1 C)	SW:4	(EM:1 C)
PS:15	(DI:1 C)	RC:18	(ME:1 C)	SW:5	(EE:1 C)
PS:16	(DI:1 C)	RC:19	(GK:1 A)	SW:5	(EI:1 C)
PS:17	(DI:1 C)	RC:19	(KE:0 C)	SW:5	(EM:1 C)
PS:18	(DI:1 C)	RC:20	(GK:1 A)	SW:6	(EE:1 D)
PS:19	(DI:1 C)	RC:20	(KE:0 D)	SW:6	(EI:1 C)
PS:20	(DI:1 C)	RC:21	(CP:3 B)	SW:6	(EM:1 C)
PS:21	(DI:1 C)	RC:21	(GK:1 A)	SW:7	(EE:2 C)
PT:1	(DE:0 B)	REF:1	(IQ:3 C)	SW:7	(EI:2 C)
PT:2	(DE:0 B)	REF:2	(IQ:3 D)	SW:7	(EM:2 C)
PT:3	(DE:0 B)	REV:1	(NU:2 C)	SW:8	(EE:2 C)
PT:4	(DE:0 B)	RP:1	(DI:2 C)	SW:8	(EI:2 C)
PT:6	(DE:0 B)	RP:2	(DI:2 C)	SW:8	(EM:2 C)
PT:7	(DE:0 C)	RP:3	(DI:2 C)	SW:9	(EE:2 D)
PW:1	(AA:0 B)	RP:4	(DI:2 C)	SW:9	(EI:2 C)
PW:2	(AE:2 D)	RP:5	(DI:2 C)	SW:9	(EM:3 C)
PW:3	(AE:1 C)	RP:6	(DI:2 C)	SW:10	(EE:3 C)
PW:4	(AE:1 C)	RP:7	(DI:2 C)	SW:10	(EI:3 C)
PW:5	(AE:1 D)	RT:1	(DM:3 C)	SW:10	(EM:4 C)

SW:11	(EE:3 C)	TA:15	(GU:0 C)	X03:5	(GB:1 E)
SW:11	(EI:3 C)	TA:16	(GQ:1 C)	X03:6	(GB:2 E)
SW:12	(EE:3 D)	TA:17	(NK:3 C)	X03:7	(GB:1 E)
SW:12	(EI:3 C)	TB:1	(GA:3 D)	X03:8	(GB:2 E)
SW:13	(EE:0 C)	TB:2	(GA:3 C)	X03:9	(ME:0 D)
SW:13	(EI:0 C)	TB:3	(GA:3 C)	X03:10	(ME:0 D)
SW:14	(EE:0 C)	TB:4	(KA:0 C)	X03:11	(ME:0 D)
SW:14	(EI:0 C)	TB:5	(NK:3 C)	X03:12	(ME:1 D)
SW:15	(EE:1 C)	TB:6	(GA:2 C)	X03:13	(GB:3 E)
SW:15	(EI:1 C)	TB:7	(GA:3 C)	X03:14	(ME:1 D)
SW:16	(EE:1 C)	TB:8	(GA:4 C)	X03:15	(ME:1 D)
SW:16	(EI:1 C)	TB:9	(GA:3 C)	X04:1	(EC:1 E)
SW:17	(EE:2 C)	TB:10	(GM:0 C)	X04:1	(GK:2 E)
SW:17	(EI:2 C)	TB:11	(GM:0 C)	X04:2	(GB:1 E)
SW:18	(EE:2 C)	TB:12	(GA:3 D)	X04:2	(GK:2 E)
SW:18	(EI:2 C)	TB:13	(GU:1 C)	X04:3	(GB:2 E)
SW:19	(EE:3 C)	TB:14	(GU:1 C)	X04:3	(GK:2 E)
SW:19	(EI:3 C)	TB:15	(GU:1 C)	X04:4	(GB:1 E)
SW:20	(EE:3 C)	TB:16	(GM:1 C)	X04:4	(GK:2 E)
SW:20	(EI:3 C)	TB:17	(NK:4 C)	X04:5	(GB:2 E)
SX:1	(GK:2 C)	TB:19	(GQ:2 B)	X04:5	(GK:2 E)
SX:1	(ME:0 D)	TB:20	(GQ:2 C)	X04:6	(GB:2 E)
SX:2	(ME:0 D)	TD:1	(IE:0 C)	X04:6	(GK:2 E)
SX:3	(EC:0 D)	TD:2	(IE:0 D)	X04:7	(GK:2 E)
SX:3	(GK:3 C)	TD:3	(IE:0 C)	X04:7	(ME:0 D)
SX:4	(GB:2 D)	TD:4	(IE:1 C)	X05:1	(EC:2 E)
SX:4	(GK:2 C)	TD:5	(IE:1 C)	X05:2	(ME:0 D)
SX:5	(GC:4 C)	TD:6	(BI:2 C)	X05:3	(GB:2 E)
SX:6	(GB:2 D)	TD:7	(BI:2 D)	X05:4	(ME:0 D)
SX:6	(GK:2 C)	TD:8	(GM:3 D)	X05:5	(ME:1 D)
SX:7	(EM:0 D)	TD:9	(GM:3 C)	X05:7	(GC:4 E)
SX:7	(GK:3 C)	TD:10	(GM:3 C)	X06:1	(NC:3 D)
SX:8	(EM:0 D)	TD:11	(GM:2 C)	X06:2	(NA:1 D)
SX:8	(GK:3 C)	TD:12	(GM:2 C)	X06:2	(NR:1 D)
SX:10	(GB:1 D)	TD:13	(GQ:0 B)	X06:3	(NA:1 D)
SX:10	(GK:2 C)	TD:13	(NU:2 C)	X06:3	(NR:1 D)
SX:11	(GB:2 D)	TD:14	(GQ:0 C)	X06:4	(NA:1 D)
SX:11	(GK:2 C)	TD:14	(NU:2 D)	X06:4	(NR:2 D)
SX:12	(GB:1 D)	TD:15	(IE:1 C)	X06:5	(NA:1 D)
SX:12	(GK:2 C)	TD:16	(IE:1 D)	X06:5	(NR:1 D)
SX:15	(EC:1 D)	TD:17	(IE:1 C)	X06:6	(NA:2 D)
SX:15	(GK:3 C)	TD:18	(IE:2 C)	X06:6	(NR:3 D)
SX:18	(GB:2 D)	TD:19	(IE:2 C)	X06:7	(NC:1 D)
SX:20	(ME:1 D)	TS:1	(FG:0 B)	X06:7	(NU:1 D)
SX:21	(ME:1 D)	TS:2	(FG:0 B)	X06:8	(NA:4 C)
SX:24	(GB:3 D)	TS:3	(FG:0 B)	X06:8	(NR:1 D)
SX:24	(GK:3 C)	TS:4	(FG:0 B)	X06:9	(NC:1 D)
SX:25	(ME:0 D)	TS:5	(FG:1 B)	X06:9	(NU:1 D)
SX:29	(ME:1 D)	TS:6	(FG:1 B)	X06:10	(NC:2 D)
SX:30	(EC:2 D)	X02:1	(EC:2 D)	X06:10	(NU:2 D)
SX:30	(GK:3 C)	X02:1	(GK:3 E)	X06:11	(NA:0 D)
SX:31	(EC:1 D)	X02:2	(EC:1 D)	X06:11	(NR:0 D)
SX:31	(GK:2 C)	X02:2	(GK:3 E)	X06:12	(NA:0 D)
TA:1	(GA:2 D)	X02:3	(EC:1 D)	X06:12	(NR:0 D)
TA:2	(GA:2 C)	X02:3	(GK:3 E)	X06:13	(NC:1 D)
TA:3	(GA:2 C)	X02:4	(EC:1 D)	X06:13	(NU:1 D)
TA:4	(KA:0 C)	X02:4	(GK:3 E)	X06:14	(NC:1 D)
TA:5	(NK:3 C)	X02:5	(EC:0 D)	X06:14	(NU:1 D)
TA:6	(GA:2 C)	X02:5	(GK:3 E)	X06:15	(NC:2 D)
TA:7	(GA:2 C)	X02:6	(EM:0 E)	X06:15	(NU:2 D)
TA:8	(GA:1 C)	X02:6	(GK:3 E)	X06:16	(NC:2 D)
TA:9	(GA:3 C)	X02:7	(EM:0 E)	X06:16	(NU:2 D)
TA:10	(GQ:1 C)	X02:7	(GK:3 E)	X06:17	(NC:2 D)
TA:11	(GQ:1 B)	X03:1	(GB:2 E)	X06:17	(NU:2 D)
TA:12	(GA:2 D)	X03:2	(GB:2 E)	X06:18	(NA:3 D)
TA:13	(GU:0 C)	X03:3	(GC:4 E)	X06:18	(NR:3 D)
TA:14	(GU:0 C)	X03:4	(GB:3 E)	X06:19	(NA:3 D)

X06:19	(NR:2 E)	XD:5	(EI:0 D)	XK:9	(DB:1 B)
X06:20	(NC:2 D)	XD:5	(EM:0 C)	XK:9	(DM:1 B)
X06:20	(NU:2 D)	XD:6	(FA:3 D)	XK:10	(HY:0 B)
X06:21	(NC:3 D)	XD:6	(FK:0 C)	XK:11	(DB:1 B)
X06:21	(NU:3 D)	XD:6	(FM:1 D)	XK:11	(DM:0 B)
X06:22	(NC:3 D)	XD:8	(IX:2 D)	XK:12	(DB:1 B)
X06:24	(NA:3 D)	XD:9	(BA:1 C)	XK:12	(DM:1 B)
X06:24	(NR:2 D)	XD:9	(BI:1 E)	XK:13	(HY:0 B)
X06:30	(NA:3 D)	XD:10	(IS:1 D)	XK:14	(IQ:1 B)
X06:31	(NA:4 D)	XD:11	(AA:1 D)	XK:15	(IQ:2 B)
X15:1	(GK:2 C)	XD:12	(NC:0 B)	XK:16	(HY:1 B)
X15:2	(GK:2 C)	XD:12	(NU:2 D)	XK:17	(CU:0 B)
X15:3	(GK:2 C)	XE:1	(AA:2 D)	XK:18	(CU:0 B)
X15:4	(GK:2 C)	XF:1	(FA:4 B)	XL:1	(BA:1 B)
X15:5	(GK:2 C)	XF:2	(FQ:1 B)	XL:2	(IH:4 B)
X15:6	(GK:2 C)	XF:3	(ME:3 B)	XL:3	(BA:1 B)
X15:7	(GK:2 C)	XF:4	(KE:0 C)	XL:5	(BA:1 B)
XA:1	(GB:1 B)	XF:5	(FQ:0 B)	XL:6	(BA:1 B)
XA:2	(GB:1 B)	XF:6	(FQ:1 B)	XL:7	(DB:0 B)
XA:3	(GB:1 B)	XF:7	(KE:0 C)	XL:7	(DM:0 B)
XA:4	(GB:1 B)	XF:8	(KE:0 C)	XL:8	(BI:0 B)
XA:5	(GB:1 B)	XF:9	(AA:3 C)	XL:9	(BI:0 B)
XA:6	(GB:2 B)	XF:9	(AE:3 D)	XL:10	(DB:1 B)
XA:7	(GB:2 B)	XF:10	(FA:4 B)	XL:10	(DM:0 B)
XA:8	(GB:2 B)	XF:12	(KE:0 B)	XL:11	(BI:0 B)
XA:9	(GB:2 B)	XF:13	(BA:0 B)	XL:12	(BA:1 B)
XA:10	(GB:1 B)	XF:15	(FA:4 B)	XL:13	(DQ:0 B)
XA:11	(GB:1 B)	XF:18	(ME:4 A)	XL:14	(DU:1 B)
XA:12	(GB:1 B)	XG:1	(AA:1 A)	XL:15	(BA:1 D)
XA:13	(GB:1 B)	XH:1	(AA:2 A)	XL:16	(BA:1 D)
XA:14	(GB:1 B)	XJ:1	(GM:2 C)	XL:17	(BA:1 D)
XA:15	(GB:2 B)	XJ:2	(GM:1 D)	XL:18	(BA:1 D)
XA:16	(GB:2 B)	XJ:3	(HG:0 B)	XM:1	(AA:1 C)
XA:17	(GB:2 B)	XJ:4	(GQ:1 A)	XM:2	(AA:1 C)
XA:18	(GB:2 B)	XJ:6	(HG:0 B)	XM:3	(AA:1 C)
XC:1	(BM:2 C)	XJ:7	(GQ:2 A)	XM:4	(AA:1 C)
XC:2	(IS:0 D)	XJ:8	(IM:1 B)	XM:5	(AA:2 C)
XC:3	(IH:2 C)	XJ:9	(IM:1 B)	XM:6	(AA:3 C)
XC:4	(HP:0 E)	XJ:10	(GA:0 B)	XM:7	(AA:3 C)
XC:5	(HG:0 D)	XJ:11	(IM:0 B)	XM:8	(AA:3 C)
XC:5	(HY:2 D)	XJ:12	(BA:1 B)	XM:9	(AA:3 C)
XC:6	(BU:2 C)	XJ:13	(GA:0 B)	XM:10	(AA:3 C)
XC:7	(BM:1 E)	XJ:14	(IH:1 B)	XM:11	(AA:2 B)
XC:8	(AE:2 C)	XJ:15	(BA:0 B)	XM:12	(BI:3 B)
XC:8	(NK:1 D)	XJ:16	(IH:2 B)	XM:13	(AA:2 B)
XC:9	(DB:1 E)	XJ:17	(IH:1 B)	XM:14	(AA:2 B)
XC:9	(DM:0 E)	XJ:18	(IH:2 B)	XM:15	(BI:3 B)
XC:10	(HP:1 E)	XK:1	(BA:0 B)	XM:16	(AA:2 B)
XC:11	(BU:0 B)	XK:2	(HY:0 B)	XM:17	(AA:2 B)
XC:12	(KI:1 C)	XK:3	(GM:3 B)	XM:18	(BI:3 B)
XD:1	(BU:0 B)	XK:4	(BA:0 B)	XO:1	(AA:1 A)
XD:2	(CU:1 D)	XK:5	(HY:0 B)	XS:1	(AA:2 A)
XD:4	(EE:4 D)	XK:6	(GM:1 D)	XT:1	(AA:1 A)
XD:4	(EI:4 D)	XK:7	(BA:0 A)		
XD:4	(EM:2 B)	XK:8	(BA:0 B)		
XD:5	(DU:2 E)				

List of components

A01	Fuse and Relay Centre (1000)	A33B	Tachograph (/BN:1 B) (1006)
A02P	Fuse holder, 6-fuses (ME:2 C) (1000)	A34B	Control unit, climate unit (HG:0 B) (1000)
A02x	Fuse holder, 6-fuses (ME:3 C) (1000)	A35	Control unit, remote receiver, door lock (IM:0 B) (1000)
A03	Instrument cluster (BI:0 B) (1000)		
A04A	Refrigerator (IQ:3 C) (1007B)	A36	Control unit, BBM (Body Builder Module) (NC:1 B/NU:1 B) (1000)
A04B	Refrigerator (IQ:3 C) (1460)		
A05	Display, FMS (Fleet Management System) (BU:2 D/IZ:0 D) (1000)	A39	Control unit, camera (IZ:0 C) (1000)
A06L	El. adjustable seat (IA:2 B) (1007A)	A40 HID	Fuse holder, 3-fuses (GB:0 D) (1000)
A06R	El. adjustable seat (IA:0 B) (1007B)	A41	Component group transmission. Contains B23, B06 and Y17 (DN:0 D/DE:0 C/DM:2 B) (1403/1499)
A07	Radio (IU:0 B) (1000)		
A08	Control unit, GPS receiver (Global Positioning System) (BU:2 D) (1000)	A42	Component group transmission. Contains B26, Y21, Y22, Y23 and Y26 (DN:2 D/DE:2 C) (1494/1499)
A09	Telephone (IX:0 C) (1000)		
A10	CD player (IU:3 B)	A43	Electric fan control (B32 fan speed sensor, Y35 visco clutch) (CO:1 D) (1030)
A11	Control unit, door lock (IM:1 B) (1000)		
A12A	Control unit, ABS (Anti-lock Brake System) (EI:0 B) (1007C)	A44	Fuel filter bracket (B51 fuel pressure sensor, M15 priming pump) (CO:2 D) (1030)
A12B	Control unit, ABS (Anti-lock Brake System) (EE:0 B) (1007C)	A45	Fuel pre filter (B52 water level sensor, R10 heater, Y38 water drain solenoid (CO:3 B) (1030)
A13A	Control unit, TECU (automatic transmission) (DE:0 C)	A54	Control unit, Coolant level (CS:2 D)
A13B	Control unit, TECU (automatic transmission) (DI:0 B) (1007C)	B02A	Thermostat, parking heater (HI:1 B) (1006A/1006E)
A13C	Control unit, TECU (automatic transmission) (DM:0 C) (1007C)	B02B	Thermostat, parking heater (HI:1 B) (1006A/1006E)
A13D	Control unit, TECU (automatic transmission) (DN:0 B)	B02C	Thermostat, parking heater (HM:3 B) (1006A/1006E)
A14	Control unit, EMS (Engine Management System) (CO:0 C/CS:2 C) (1030)	B02D	Thermostat, parking heater (HM:3 C) (1006A/1006E)
A15	Control unit, SRS (Supplementary Restrain System) (IS:0 B) (1000)	B03	Sensor, footbrake valve (EM:0 D) (1504)
A16	Control unit, ECS (Electronic Controlled air Suspension) (FA:0 C/FG:0 D) (1007C)	B04	Sensor, engine speed, crankshaft (CO:0 D) (1030)
A17	Control unit, VECU (Vehicle ECU) (BA:0 C) (1000)	B05	Sensor, engine speed, camshaft (CO:0 D) (1030)
A18	Control unit, roof hatch (IQ:0 C) (1006E)	B06	Sensor, air pressure, air tank (BA:2 D) (1000)
A19A	Control unit, GECU (gear selector ECU) (DB:1 C) (1007A/1007B/1484)	B06A	Sensor, air pressure, air tank (DE:0 D) (1000)
A19C	Control unit, GECU (gear selector ECU) (DB:2 C) (1007A/1007B/1484)	B07	Sensor, fuel level (BI:2 C) (1040)
A20	Control unit, Immobiliser (IM:3 D) (1000)	B08	Sensor, input shaft speed, gearbox (DE:3 B)
A21	Control unit, EBS (Electronic Brake System) (EM:0 C) (1007C)	B09A	Sensor, oil temperature, gearbox (DE:2 D)
A22	Control unit, FMS (Fleet Management System) (BU:0 C/IZ:3 B) (1000)	B09B	Sensor, oil temperature, gearbox (BI:2 C) (1494)
A23	Control unit, FMS, TMC (Traffic Message Channel) (BU:3 B) (1000)	B10	Sensor, oil level (CO:0 C) (1030)
A24	Control unit, information module trailer without ABS (CP:3 C) (1000)	B10B	Sensor, oil level (FP:0 C) (1493)
A25	Control unit, ESP (Electronic Stability Program) (EQ:0 C) (1007C)	B12	Sensor, tachograph/speedometer (BM:2 D) (1494)
A27	Control unit, LCM (Light Control Module) (GB:0 C/GC:0 A/GA:0 B) (1000)	B12B	Sensor, tachograph/speedometer (BM:2 D) (1494)
A28	Control unit, ADR/TRS battery main switch (AE:0 D) (1435B)	B13	Sensor, wheel speed, lhs. 1:st front axle (EI:0 D/EE:0 D/EN:0 D) (1086)
A29	Telephone handset, secrecy receiver (IX:1 B) (1000/1007A/1007B)	B14	Sensor, wheel speed, rhs. 1:st front axle (EI:1 D/EE:1 D/EN:1 D) (1086)
A30	Control unit, SWM (Steering Wheel Module) (IS:1 C) (1000)	B15	Sensor, wheel speed, lhs. 1:st driven rear axle (EI:2 D/EE:2 D/EN:2 D) (1086)
A31	Control unit, burglar alarm (NK:0 C) (1000)	B16	Sensor, wheel speed, rhs. 1:st driven rear axle (EI:3 D/EE:3 D/EN:2 D) (1086)
A32	Control unit, parking heater (HM:0 C) (1062)	B17	Sensor, wheel speed, lhs. 2:nd driven rear axle (EN:3 D) (1086)
A33	Tachograph (BM:1 B) (1000)	B18	Sensor, wheel speed, rhs. 2:nd driven rear axle (EN:3 D) (1086)
		B19	Sensor, wheel speed, lhs. 2:nd front axle (EN:0 D) (1086)
		B20	Sensor, wheel speed, rhs. 2:nd front axle (EN:1 D) (1086)
		B21	Sensor, coolant temperature, engine (CO:1 D) (1030)
		B22	Sensor, outdoor temperature (BI:2 C) (1504)
		B23A	Sensor, oil temperature, retarder (DE:1 D)
		B23B	Sensor, oil temperature, retarder (DI:0 D) (1494)

B24	Sensor, air pressure, bogie lift bellow (FA:0 D) (1072)	B69C	Sensor, coolant temperature, retarder (DN:0 D) (1403)
B25	Sensor, accelerator pedal (BA:4 D) (1000)	B70	Sensor, wheel speed, lhs., pusher axle (EN:2 C) (1086)
B25A	Sensor, accelerator pedal (BA:3 D) (1000)	B71	Sensor, wheel speed, rhs., pusher axle (EN:3 C) (1086)
B26A	Sensor, clutch position (DE:2 D)	B72	Sensor, wheel speed, lhs., tag axle (EN:3 C) 1086)
B27	Sensor, battery charging (BI:2 C) (1435A/1435B)	B73	Sensor, wheel speed, rhs., tag axle (EN:4 C) (1086)
B28	Sensor, chassis level, front axle (FA:1 D) (1072)	B74	Sensor, brake lining wear indicator, lhs., pusher axle (EN:2 C) (1086)
B29	Sensor, chassis level, lhs. rear axle (FA:1 D/EN:2 D) (1072)	B75	Sensor, brake lining wear indicator, rhs., pusher axle (EN:2 C) (1086)
B30	Sensor, chassis level, rhs. rear axle (FA:2 D) (1072)	B76	Sensor, brake lining wear indicator, lhs., tag axle (EN:3 C) (1086)
B31	Sensor, control lever unit, tipper (NR:1 B) (1007A/1007B)	B77	Sensor, brake lining wear indicator, rhs., tag axle (EN:3 C) (1086)
B34A	Sensor, gear position (DE:2 B)	B80	Handsfree, Loudspeaker, Microphone (IX:0 B)
B34B	Sensor, gear position (DE:3 B)	B90	Transmitter, movement sensor (NK:2 D) (1006B/1006E)
B35	Sensor, range gear position (DE:3 B)	B91	Receiver, movement sensor (NK:3 D) (1006B/1006E)
B36	Sensor, split gear position (DE:3 B)	D01	Time delay relay, bogie lift, axle load limiter (FK:3 B) (1007B)
B37	Sensor, boost pressure and boost temperature (CO:0 D) (1030)	E01	Lamp, full beams (GA:2 C/GA:3 C) (1502/1503)
B38	Sensor, oil pressure and oil temperature (CO:1 D) (1030)	E02	Lamp, dipped beams (GA:2 D/GA:3 D) (1502/1503)
B39	Sensor, air filter pressure and air filter temperature (CO:1 B/CS:1 D) (1030)	E03	Lamp, spot light (GA:1 C/GA:3 C) (1502/1503)
B40	Sensor, brake lining wear indicator, lhs. 1:st front axle (EN:0 D) (1086)	E04	Lamp, loading light (KE:0 D/GK:2 B) (1063)
B41	Sensor, brake lining wear indicator, rhs. 1:st front axle (EN:1 D) (1086)	E05	Lamp, 5:th wheel light (KE:0 D) (1063)
B42	Sensor, brake lining wear indicator, lhs. 1:st driven rear axle (EN:1 D) (1086)	E06	Lamp, reversing light (GC:1 D/GC:2 D) (1040)
B43	Sensor, brake lining wear indicator, rhs. 1:st driven rear axle (EN:2 D) (1086)	E07	Lamp, fog light (GA:1 C/GA:3 C) (1502/1503)
B44	Sensor, brake lining wear indicator, lhs. 2:nd driven rear axle (EN:1 D) (1086)	E08	Lamp, parking light, front (GA:1 D/GA:3 D) (1502/1503)
B45	Sensor, brake lining wear indicator, rhs. 2:nd driven rear axle (EN:2 D) (1086)	E09	Lamp, brake light (GC:1 D/GC:2 D) (1040)
B46	Sensor, brake lining wear indicator, lhs. 2:nd front axle (EN:0 D) (1086)	E10	Lamp, tail light (GC:1 D/GC:2 D) (1040)
B47	Sensor, brake lining wear indicator, rhs. 2:nd front axle (EN:0 D) (1086)	E11LC	Lamp, side marker light (GC:0 D) (1077)
B49	Sensor, steering angle (EQ:0 D) (1000)	E11LF	Lamp, side marker light (GC:0 D) (1077)
B50	Sensor, yaw-rate (EQ:1 D) (1507)	E11LR	Lamp, side marker light (GC:1 D) (1077)
B54	Sensor, crank case pressure (CO:0 B) (1030)	E11LW	Lamp, side marker light (GC:0 D) (1077)
B55	Sensor, air pressure, suspension bellows, 3:th axle (FA:0 D) (1072)	E11RC	Lamp, side marker light (GC:3 D) (1077)
B56	Sensor, air pressure, suspension bellows, front axle (FA:0 D) (1072)	E11RF	Lamp, side marker light (GC:3 D) (1077)
B57	Sensor, air pressure, suspension bellows, lhs. rear (FA:0 D) (1072)	E11RR	Lamp, side marker light (GC:2 D) (1077)
B58	Sensor, air pressure, suspension bellows, rhs. rear (FA:1 D) (1072)	E11RW	Lamp, side marker light (GC:3 D) (1077)
B59	Sensor, indoor temperature (HG:1 B) (1000)	E12L	Lamp, roof position light (GA:4 C) (1006A)
B59B	Sensor, indoor temperature (HY:2 D) (1000)	E12R	Lamp, roof position light (GA:1 C) (1006A)
B60DD	Loudspeaker (IU:1 D) (1083)	E13	Lamp, direction indicator (GC:1 D/GC:2 D) (1040)
B60DP	Loudspeaker (IU:1 D) (1083)	E13F	Lamp, direction indicator (GA:2 C/GA:3 C) (1502/1503)
B60LF	Loudspeaker (IU:0 D) (1000)	E13L	Lamp, direction indicator (GA:2 C) (1502)
B60LR	Loudspeaker (IU:2 D) (1006D/1006E)	E13R	Lamp, direction indicator (GA:3 C) (1503)
B60RF	Loudspeaker (IU:1 D) (1000)	E14L	Lamp, beacon warning lamp (KM:0 D) (1047)
B60RR	Loudspeaker (IU:2 D) (1006D/1006E)	E14R	Lamp, beacon warning lamp (KM:1 D) (1047)
B61L	Loudspeaker, treble (IU:0 D) (1000)	E15	Lamp, cigarette lighter illumination (IQ:2 C) (1000)
B61R	Loudspeaker, treble (IU:1 D) (1000)	E16DS	Lamp, instep light (IH:2 C) (1083)
B64	Sensor, air pressure, valve unit gearbox (DE:1 D)	E16PS	Lamp, instep light (IH:2 C) (1083)
B67	Rear view camera (IZ:2 D) (1000)	E17L	Lamp, interior light (IH:1 C) (1006B/1006E)
B68	Sensor, output shaft speed, gearbox (DI:2 D) (1494)	E17R	Lamp, interior light (IH:1 C) (1006B/1006E)
B69A	Sensor, coolant temperature, retarder (DE:1 D)	E18C	Lamp, reading light (IH:0 C) (1006D)
B69B	Sensor, coolant temperature, retarder (DM:3 B) (1403)	E18L	Lamp, reading light (IH:0 C) (1006D/1006E)
		E18LB	Lamp, reading light (IH:0 C) (1006D/1006E)
		E18LC	Lamp, reading light (IH:0 C) (1006C/1006E)
		E18R	Lamp, reading light (IH:1 C) (1006D/1006E)
		E18RB	Lamp, reading light (IH:1 C) (1006D/1006E)
		E18RC	Lamp, reading light (IH:0 C) (1006C)

E19C	Lamp, identification light, roof (GA:0 D) (1006A/1436)	K22	Relay, climate fan, 1:st speed (by parking heater) (HY:1 B) (1000)
E19L	Lamp, identification light, roof (GA:0 D) (1006A/1436)	K23	Relay, cab tilt (KA:0 C) (1000)
E19R	Lamp, identification light, roof (GA:0 C) (1006A/1436)	K24	Relay, central lubrication (FU:0 B) (1000)
E20	Lamp, ashtray illumination (IQ:2 C) (1000)	K25	Relay, light sign (KI:1 C) (1000)
E21	Lamp, rear fog light (GC:1 D/GC:2 D) (1040)	K26A	Relay, foldable rearview mirror arm, Japan (IF:0 C) (1000)
E22	Lamp, roof sign illumination (KI:0 D) (1436)	K26B	Relay, foldable rearview mirror arm, Japan (IF:1 C) (1000)
E23	Lamp, luggage compartment illumination (IH:4 C) (1007A)	K27	Relay, gas discharge lamp, dipped beam, lhs (GB:0 D) (1000)
E24	Lamp, storage tray illumination (IQ:1 D) (1000)	K28	Relay, gas discharge lamp, dipped beam, rhs (GB:0 D) (1000)
E26L	Headlight module (GA:1 C) (1502)	K30	Relay, beacon warning light (KM:0 B) (1000)
E26R	Headlight module (GA:3 C) (1503)	K35	Relay, headlamp high pressure wash (GM:0 C) (1000)
E27L	Tail lamp module (GC:1 D) (1040)	K37A	Relay, parking light (NR:0 C)
E27R	Tail lamp module (GC:2 D) (1040)	K37B	Relay, parking light (NA:0 C)
E28	Parking heater (HI:0 C/HM:0 D) (1007A/1062)	K38	Relay, pressure selection, tipper trailer (NA:1 C)
E32ATC	Climate unit (HY:2 C) (1000)	K38A	Relay, pressure selection, tipper trailer (NR:1 C) (1000)
E32ECC	Climate unit (HG:1 C) (1000)	K38B	Relay, pressure selection, tipper trailer (NR:1 C) (1000)
E33LC	Lamp, additional load lamps (revers lamps) (NA:0 D) (1506A)	K39A	Relay, prepared wirings for body-builder (auxsw-6) A (NR:2 C)
E33LR	Lamp, additional load lamps (revers lamps) (NA:0 D) (1506A)	K39B	Relay, prepared wirings for body-builder (auxsw-6) A (NA:1 C)
E33RC	Lamp, additional load lamps (revers lamps) (NA:1 D) (1506A)	K40A	Relay, prepared wirings for body-builder (auxsw-6) B (NR:3 C)
E33RR	Lamp, additional load lamps (revers lamps) (NA:1 D) (1506A)	K40B	Relay, prepared wirings for body-builder (auxsw-6) B (NA:2 C)
E34	Lamp, bodybuilder-centre light (IH:2 D) (1000)	K41A	Relay, prepared wirings for body-builder (auxsw-6) C (NR:3 C)
G01A	Battery (AA:0 C/AE:0 C/CS:0 C)	K41B	Relay, prepared wirings for body-builder (auxsw-6) C (NA:3 C)
G01B	Battery (AA:0 D/AE:0 D/CS:0 D)	K42	Relay, spotlights (NI:1 B) (1000)
G02	Alternator (AA:2 D/AE:3 D/CS:1 D) (1025)	K43	Relay, external engine start (NC:3 C) (1000)
H01	Horn, air-operated (GQ:0 B) (1502)	K45	Relay, prepared wirings for body-builder (NU:2 B) (1000)
H02	Horn (GQ:1 B) (1502)	K48	Power relay, engine preheating (CM:2 B) (1435A/1435B)
H03	Reverse warner, acoustic (GC:1 D/GC:2 D) (1040)	K49	Power relay, bogie lift motor (FK:3 D) (1037)
H06	Siren (NK:3 D) (1502/1503)	K51	Power relay, battery main switch (AA:0 C/CS:0 C) (1435A)
K1	Relay, starting switch, radio position (AA:3 B) (1000)	K52	Power relay, ADR battery main switch (AE:0 B) (1435B)
K2	Relay, EMS (Engine Management System) (BA:1 A) (1000)	K54	Relay, 12V ABS Trailer (CP:2 D) (1435B)
K3	Relay, starter motor (AA:1 C) (1000)	L01	Reactor, light sign illumination (KI:0 D)
K3B	Relay, starter motor, Cummins (CS:1 C)	L01L	Reactor, light sign illumination (KI:2 C)
K4	Relay, bodybuilder fuse box (kl.15) (ME:2 A) (1000)	L01R	Reactor, light sign illumination (KI:2 D)
K5	Relay, automatic transmission (DB:1 A/DM:0 A) (1000)	M01	Motor, windscreen wiper (GM:2 C) (1504)
K6	Relay, fan climate unit (HY:0 B) (1000)	M02	Motor, windscreen washer pump (GM:0 D) (1503)
K7	Relay, intermittent wiper (GM:1 C) (1000)	M03	Motor, headlamp high pressure washer pump (GM:1 D) (1503)
K8	Relay, gearbox area inhibitor (BA:1 A) (1000)	M04	Motor, starter motor (AA:0 D/AE:2 D/CS:0 C) (1025)
K9	Relay, interior lamps (IH:1 A) (1000)	M05	Motor, hydraulic bogie lift pump unit (FK:3 C) (1037)
K10	Relay, fifth wheel-, working-light (KE:0 C) (1000)	M06DS	Motor, window winder (IE:2 C) (1083)
K11	Relay, air suspension (FA:4 B) (1000)	M06PS	Motor, window winder (IE:3 C) (1083)
K12	Not used (ME:4 B) (1000)	M08	Motor, levelling control, headlights (GA:1 C/GA:3 C) (1502/1503)
K13	Relay, alternator controled (AA:4 C) (1000)	M09DS	Motor, door lock (IM:1 D) (1083)
K14	Time delay relay, bogie lift, A-ride (FK:1 C) (1000)	M09PS	Motor, door lock (IM:2 D) (1083)
K15	Time delay relay, bogie lift, A-ride, with axle load limiter (FK:2 C) (1000)		
K16	Relay, bogie lift, A-ride, with axle load limiter (FK:1 C) (1000)		
K17	Relay, 3:rd axle lock, self steered axle (FM:0 C) (1000)		
K18	Relay, hydraulic steered axle (FP:1 B) (1000)		
K19	Relay, 3:rd axle lock, self steered axle (FM:1 C) (1000)		
K20	Relay, D+ short-circuit, (ADR-trucks only) (AE:4 D) (1000)		
K21	Relay, el. adjustable seat (IA:2 B) (1000)		

M10	Motor, roof hatch (IQ:0 E)	S28	Switch, power take off (DQ:0 B) (1000)
M11	Motor, cab tilt pump (KA:0 D) (1502/1503)	S28A	Switch, power take off (NC:0 B/NU:0 B) (1000)
M13	Motor, coolant pump, parking heater (HP:0 C) (1062)	S30	Switch unit, multi-function display (BI:3 C) (1000)
M14	Motor, central lubrication pump (FU:0 C) (1401)	S31	Switch, TCS (Traction Control System) (EM:1 B) (1000)
M17	Motor, foldable rearview mirror arm, Japan (IF:0 D) (1470)	S33	Switch, trailer brake (EM:0 B) (1000)
R01	Heater, engine preheat (CO:3 B) (1030)	S34	Switch unit, steering wheel push buttons (IS:1 D) (1000)
R02L	Heater, rear-view mirror (IE:0 D) (1504)	S36DS	Switch unit, door functions (IE:0 B) (1083)
R02R	Heater, rear-view mirror (IE:1 D) (1504)	S36PS	Switch unit, door functions (IE:3 B) (1083)
R04	Cigarette lighter (IQ:2 C) (1000)	S37	Switch, rear view camera, camera activation (IZ:1 B) (1000)
R05	Heater, air dryer (FQ:0 C) (1056)	S38	Switch, ADR, emergency switch, cab (AE:1 B) (1000)
R08	Termination resistor, CAN-bus (XB:2 D/CS:3 B)	S39	Switch, ADR, emergency switch, exterior (AE:1 C) (1007A/1007B)
R11	Heater, coffee maker (ME:1 B) (1000)	S39B	Switch, ADR, emergency switch, exterior (AE:2 C)
R12	Current limiter, tachograph (AE:0 D) (1435B)	S40	Switch, rear view camera, camera selection (IZ:2 B)
R13	Resistor, LCP headlight adjust (GU:1 B) (1000)	S41	Switch, battery main switch control (AA:0 C) (1435A)
R14B	Termination resistor (DI:3 D)	S42	Switch, pressure selector, power take off (NR:1 B) (1000)
R17	Resistor (AA:3 C/AE:3 D) (1000)	S45	Position switch, differential gear lock indicator, rear wheels, NC. or NO. (DU:3 C) (1040)
S01	Switch, main lighting, selector type (GA:0 A/GU:1 B) (1000)	S45R	Position switch, differential gear lock indicator, rear wheels, NC. or NO. (DU:3 C) (1040)
S02	Stalk switch, full-/dipped beam, direction indicator (GA:2 B) (1000)	S46	Pressure switch, bogie lift indicator, NO. (FK:3 E) (1037)
S03	Switch, loading lamps/working lamps (KE:1 B) (1000)	S47	Position switch, low split indicator, NO. (BI:1 D) (1494)
S03B	Switch, loading lamps/working lamps (NR:0 B)	S48A	Pressure switch, brake light, NO. (GB:3 B) (1401)
S04	Switch unit, climate fan (HY:1 B) (1000)	S48B	Pressure switch, brake light, NO. (GB:3 B) (1401)
S05A	Switch, interior light, selector type (IH:3 B) (1000)	S48C	Pressure switch, brake light, NO. (GB:3 A) (1000)
S05B	Switch, interior light, selector type (IH:3 B) (1006D/1006E)	S49	Position switch, reverse lamps, NO (GB:3 D) (1494)
S06	Stalk switch, windscreen wiper, selector type (GM:3 B) (1000)	S50	Pressure switch, exhaust pressure governor, NC. (BA:1 D) (1000)
S07	Switch, engine brake, selector type (BA:3 B) (1000)	S52L	Proximity switch, cab lock, NO. (BI:3 C) (1007A)
S07A	Switch, engine brake, selector type (CP:0 B) (1000)	S52R	Proximity switch, cab lock, NO. (BI:3 D) (1007B)
S07B	Switch, engine brake, selector type (CP:1 B) (1000)	S53	Position switch, front-wheel drive indication, NO. (DU:4 C) (1458)
S08	Switch, differential gear lock, rear wheels (DU:0 B) (1000)	S54	Position switch, differential gear lock, front-wheels, NO. (DU:4 C) (1458)
S09	Switch, differential gear locks, inter axles and rear wheels, selector type (DU:1 B) (1000)	S55	Thermal switch (HP:0 C) (1062)
S10	Switch, sign light, roof (KI:1 B) (1006A)	S56	Thermal switch, bogie lift, NC (FK:3 D) (1037)
S11	Switch, bogie lift, selector type (FK:0 B) (1000)	S57L	Position switch, luggage compartment lighting, NC. (IH:4 D) (1007A)
S11A	Switch, bogie lift, selector type (FA:3 B) (1000)	S57R	Position switch, luggage compartment lighting, NC. (IH:3 D) (1007B)
S11B	Switch, bogie lift, selector type (NR:4 B) (1000)	S58	Position switch, clutch pedal, NO. (BA:3 D) (1000)
S14A	Switch, push button, horn (GQ:1 D)	S59	Position switch, brake pedal, NO. (BA:3 D) (1000)
S14B	Switch, push button, horn (GQ:1 D)	S60	Pressure switch, oil, power steering, NC. (FP:0 C) (1493)
S15	Switch, ignition, selector type (AA:2 B/AE:0 B) (1000)	S60A	Pressure switch, oil, power steering, NC. (BI:0 D) (1493)
S16	Switch, push button, air horn (GQ:21 D)	S60B	Pressure switch, oil, power steering, NC. (BI:1 D) (1493)
S17	Switch, front wheel drive (DU:2 B) (1000)	S63	Position switch, low range gear (BA:0 B) (1494)
S18	Switch, differential gear lock, front (DU:2 B) (1000)	S64	Pressure switch, air pressure, parking brake tank, NC. (EM:4 B) (1000)
S19	Switch, extra (NA:2 B)	S66L	Switch unit, ECS (electronic controlled susp.), full air suspension (FA:2 D) (1007A/1007B)
S19C	Switch, extra (NR:2 B) (1000)		
S20	Switch, 3:rd axle lock (FM:0 B) (1000)		
S20B	Switch, 3:rd axle lock (NR:3 B) (1000)		
S21A	Switch, parking heater (HI:2 B/HM:2 B) (1000)		
S21B	Switch, parking heater (HI:3 B/HM:3 B) (1006D/1006E)		
S23	Switch, roof hatch, selector type (IQ:0 B) (1006A)		
S24	Stalk switch, retarder, selector type (BA:3 B) (1000)		
S25	Switch unit, cruise control (BA:2 B) (1000)		
S26A	Switch, cab tilt pump (KA:0 B) (1000)		
S26B	Switch, cab tilt pump (KA:0 D) (1502/1503)		
S27	Switch, storage tray illumination (IQ:1 C) (1000)		

S66R	Switch unit, ECS (electronic controlled susp.), full air suspension (FA:4 D) (1007A/1007B)	X07B	Socket, 12V (IR:1 D) (1000)
S68	Sensor, coolant level (CO:1 C/CS:3 D) (1030)	X08	Contact reel, air bag (IS:0 C) (1000)
S69	Proximity switch, bogie lift position, NO. (FK:1 D) (1037)	X09	Slip contact, horn (GQ:1 C) (1000)
S70	Position switch, flow sensor, power-steering, NC. (BI:1 D) (1493)	X10	B+ pass through, cab (AA:0 A) (1000)
S70A	Position switch, flow sensor, power-steering, NC. (FP:1 C) (1493)	X11	Power connector, engine (AA:0 D/AE:2 C/CS:0 D)
S71	Pressure switch, compressor charging, NO. (BA:0 D) (1056)	X12	Power connector (CO:3 B/CM:3 C)
S72	Switch, water separator draining (CU:0 B) (1000)	X14	B+ connector, Engine ISX (CS:1 B)
S73	Switch, acoustic reverse warning (GC:3 A) (1006A)	X25	Power connector, bogie lift/extra equipment (AA:0 B)
S74	Switch, short stop cab heater (HP:0 B) (1000)	Y02	Solenoid valve, differential lock, rear wheels (DU:1 D) (1401)
S75	Switch, beacon warning light (KM:0 B) (1000)	Y03	Solenoid valve, differential lock, inter axles, rear (DU:1 D) (1401)
S76	Switch, spotlights (NA:4 B)	Y05	Solenoid valve, bogie lift (FK:0 D) (1037)
S76A	Switch, spotlights (NI:2 C) (1006A)	Y06	Solenoid valve, range inhibitor (BA:0 B) (1494)
S78	Switch unit, TIS (Traffic Information System) (BU:2 B) (1000)	Y08	Solenoid valve, front-wheel drive (DU:2 D) (1458)
S79A	Switch, additional work lamps (revers lamps), manual turn on (NA:1 B)	Y09	Solenoid valve, differential lock, front axle (DU:2 D) (1458)
S79B	Switch, additional work lamps (revers lamps), manual turn on (NA:1 B)	Y10	Solenoid valve, 3:rd axle lock (FM:0 D)
S79D	Switch, additional work lamps (revers lamps), manual turn on (NA:01 B)	Y11	Solenoid valve unit, ABS, lhs. front (EE:0 D/EI:0 D) (1086)
S80	Position switch, front hatch (NK:1 D) (1504)	Y12	Solenoid valve unit, ABS, rhs. front (EE:1 D/EI:1 D) (1086)
S83	Switch, container lock (NA:3 B)	Y13	Solenoid valve unit, ABS, lhs. rear (EE:2 D/EI:2 D) (1086)
S84	Switch, tachograph mode (BN:0 C) (1006)	Y14	Solenoid valve unit, ABS, rhs. rear (EE:3 D/EI:3 D) (1086)
S86	Switch, foldable rearview mirror arm, Japan (IF:1 B) (1000)	Y17A	Solenoid valve, retarder (DE:0 D)
S88L	Position switch, door, NC (NK:0 D) (1007A)	Y17B	Solenoid valve, retarder (DI:2 D) (1494)
S88R	Position switch, door, NC (NK:0 D) (1007B)	Y18	Solenoid valve, PTO (Power Take Off) (DE:2 B) (1499)
S95	Switch, Panic alarm (NK:2 A) (1000)	Y18A	Solenoid valve, PTO (Power Take Off) (DQ:0 D) (1401)
S96	Switch, Reduced set, Alarm (NK:2 B) (1000)	Y18B	Solenoid valve, PTO (Power Take Off) (DI:0 C) (1494)
U01	Modulator, EBS, left front (EN:0 C) (1086)	Y18C	Solenoid valve, PTO (Power Take Off) (NC:0 D/NU:0 D)
U02	Modulator, EBS, right front (EN:0 C) (1086)	Y18G	Solenoid valve, PTO (Power Take Off) (DN:2 B) (1499)
U03	Modulator, EBS, rear axle (EN:1 C) (1086)	Y18H	Solenoid valve, PTO (Power Take Off) (DN:2 B) (1499)
U04	Modulator, EBS, pusher axle (EN:2 B) (1086)	Y21	Solenoid valve, slow clutch disengage (DE:2 D)
U05	Modulator, EBS, trailer (EM:2 B) (1401)	Y22	Solenoid valve, fast clutch disengage (DE:3 D)
U06	Voltage converter (CS:0 C)	Y23	Solenoid valve, fast clutch engage (DE:3 D)
U06B11	Voltage converter (IR:1 B) (1007C)	Y25	Solenoid valve unit, level control, air suspension (FA:1 B) (1072)
U06R11	Voltage converter (IR:1 B) (1007C)	Y26	Solenoid valve, slow clutch control (DE:2 D)
U06R19	Voltage converter (IR:0 B) (1007C)	Y29	Solenoid valve unit, trailing axle (FA:2 B) (1072)
U07	Modulator, EBS, tag axle (EN:3 B) (1086)	Y30A	Solenoid valve unit, gearbox (DE:0 B)
U10	Voltage converter, 12V ABS Trailer (CP:4 B)	Y30B	Solenoid valve unit, gearbox (DE:1 B)
V02	Diode module (AE:2 B) (1000)	Y30C	Solenoid valve unit, gearbox (DI:0 D) (1494)
V03	Diode (EC:1 B)	Y31	Solenoid valve, area inhibitor (BA:1 B) (1494)
V04	Diode (FK:0 D) (1037)	Y32	Fuel dosing pump, parking heater (HI:0 B/HM:0 D) (1040)
V05	Diode (FK:2 D)	Y33	Solenoid valve, UI (Unit Injectors) (CO:2 D) (1030)
V06	Diode (FM:0 C)	Y36	Solenoid valve, steerable axle (FP:1 C) (1493)
V07	LED, indicator, Alarm (NK:2 C) (1000)	Y37	Solenoid valve unit, AVU (CO:2 B) (1030)
V08	Diode (NU:2 B) (1000)	Y39	Solenoid valve, VCB (CO:3 D) (1030)
V09	Diode (CP:4 B)	Y40	Solenoid valve unit, front axle, air suspension (FA:0 B) (1072)
V10	Diode (CP:3 C)	Y42	Clutch, magnetic, air conditioning compressor (HG:0 D/HY:2 D/CS:2 D) (1025)
V11	Diode (CP:3 C)	Y43L	Seat belt tensioner, pyrotechnical (IS:2 D) (1007A)
W02	Antenna, immobiliser (IM:3 C) (1000)	Y43R	Seat belt tensioner, pyrotechnical (IS:3 D) (1007B)
W03	Antenna, remote door lock (IM:0 B) (1000)	Y44	Air-bag, pyrotechnical (IS:0 D)
X01	Connector, vehicle diagnostics (XA:0 C) (1000)		
X01B	Connector, vehicle diagnostics (XA:0 C)		
X01C	Connector, vehicle diagnostics (XA:0 D)		
X02	Trailer connection, ABS/EBS (1063)		
X03	Trailer connection, 15-pole unit (1063)		
X04	Trailer connection, 7-pole unit, 24 N (1063)		
X05	Trailer connection, 7-pole unit, 24 S (1063)		
X06	Connector, 31-pole, in lhs. frame side, for body builder preparations (1505)		

Y45A	Solenoid valve unit, tipper body (NR:0 D) (1506B)	Y49	Solenoid valve, parking brake (GQ:0 B/NU:2 C) (1504)
Y45B	Solenoid valve unit, tipper body (NR:1 D) (1506B)		
Y45C	Solenoid valve unit, tipper body (NR:1 D) (1506B)	Y52	Clutch, magnetic, engine fan (CS:4 B)
Y45D	Solenoid valve unit, tipper body (NR:1 D) (1506B)		
Y48	Solenoid valve, container lock (NA:3 D) (1506A)		

Abbreviations

ABS	Antilock brake system	LHS	Left hand side
ACU	Alarm control unit	LR	Left rear
ADR-BAS1	ADR adaption, 1 switch	MECHTRAN	Mechanical transmission
ADR-BAS2	ADR adaption, 2 switches	PA-HYDRS	Hydraulic steered pusher axle
ATC	Automatic temperature control	PCB	Printed circuit board
AUS	Australia	PH-CAB	Cab parking heater
AUXSW-6	Wiring for six auxiliary switches for body building	PH-ENGCA	Engine and cab parking heater
AWD	All wheel drive	PSS-DUAL	Power steering system dual
BBM	Body builder module	PTO	Power take off
BBOX-R	Battery box right hand side	RADT-AR	6x2, leaf spring (A-ride)
CLU	Central locking unit	RCU	Remote control unit
CU-ACAUT	Air condition, automatic	RF	Right front
CU-ACMAN	Air condition, manual	RHD	Right hand drive
CU-BAS	Basic version with stepper motor without air condition	RHS	Right hand side
CU-ECC	Electronic controlled climate control air condition	RIGID	Plattform or tipper truck
CU-HEAT	Heater unit	RR	Right rear
CU-MCC	Manual controlled climate control air condition	SI-GRAF	Tachograph
EBS	Electronic brake system	SI-GRAFR	Tachograph
ECS	Electronic controlled air suspension	SI-SPEED	Speedometer
ELCE-CK	Electrical complete kit for body builder	SPEED-DU	Dual speed limiter
ENG-VE9	Volvo engine 9 liter	SRS	Supplementary restrain system
ENG-VE12	Volvo engine 12 liter	STWPOS-L	Steering wheel position left hand side
ESP	Electronic stability program	STWPOS-R	Steering wheel position right hand side
GECU	Gear selector electronic control unit	SUSPL-EC	Air suspension, electronic control system levelling device
GSS-AGS	Automatic gear shifting system	SUSPL-M	Air suspension, manual regulation levelling device
HL-BASIC	Basic headlamps	SWAPBODY	Swap body
HL-HID	High intensity discharged headlamps	SWM	Steering wheel module
HYDRKIT	Hydraulic kit	TA-HYDRS	Hydraulic steered tag axle
ISX	Engine variant (Australia only)	TECU	Transmission electronic control unit
LCM	Light control module	TMC	Traffic message channel
L1H1	Short cab	TRACTOR	Semi-trailer tractor
L2H1	Long cab	TREL7-7	Trailer connectors 2x7-unit
L2H2	Long high cab (Globetrotter)	UADR	Without ADR adaption
LF	Left front	URETARD	Without retarder
LHD	Left hand drive	USUSPLEV	Without air suspension levelling device
		VECU	Vehicle electronic control unit

Cable colour code

BL	Blue	SB	Black
BN	Brown	VO	Violet
GN	Green	W	White
GR	Grey	Y	Yellow
OR	Orange		
P	Pink		
R	Red		

Note: If a wire have two colours, this is written out like the following example: Y/R = Yellow/Red.

Feedback

One of our objectives is that workshop personnel should have access to correct and appropriate service manuals where it concerns fault tracing, repairs and maintenance of Volvo vehicles.
In order to maintain the high standards of our literature, your opinions and experience when using this manual would be greatly appreciated.
If you have any comments or suggestions, make a copy of this page, write down your comments and send them to us, either via telefax or mailing directly to the address listed below.

To
Volvo Parts Corporation
Dept. Market Support 31100
S-405 08 GÖTEBORG
SWEDEN

From
.....
.....
.....
.....
.....
.....
.....

Fax +46 31 661060
Fax +46 31 661055

Comments/proposals

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

Concerns Service Manual:

VOLVO

Volvo Truck Corporation

Göteborg, Sweden