

PREFACE

This manual covers the construction, function and servicing procedure of the Honda BF35A·45A outboard motors. Careful observance of these instructions will result in better, safer service work.

Illustrations in this manual are based primarily on the BF45A LRT.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

**HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE**

CONTENTS

SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
ENGINE COVER/THROTTLE/CHOKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
ENGINE REMOVAL/INSTALLATION	7
WATER JACKET COVER/THERMOSTAT/ THERMO SWITCH	8
CYLINDER HEAD/VALVE/OIL PUMP	9
CRANKCASE/CYLINDER BLOCK/ CRANKSHAFT/PISTON	10
PROPELLER/GEAR CASE/ EXTENSION CASE	11
OIL PAN/PRIMARY GEAR CASE/ SWIVEL CASE	12
GAS ASSIST/POWER TILT	13
STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE BRACKET/SHIFT LEVER/ HANDLEBAR (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17
BF35 - BF45 SUPPLEMENT	
BF40 - BF50 SUPPLEMENT	

SPECIFICATIONS

SPECIFICATIONS	1-2
DIMENSIONAL DRAWINGS	1-4
WIRING DIAGRAM	1-6

SPECIFICATIONS

DIMENSIONS AND WEIGHTS

Unit: mm (in)

Model	BF35A					BF45A			
	Description code					Description code			
	BSAG (Short type), BLAG (Long type)					BSAF (Short type), BLAF (Long type)			
Type	SH	LH	LR	LRT	SR	SR	LR	LRT	
Overall length	*1: 725 (28.5) *2: 1,059 (41.7)		685 (27.0)						
Overall width	370 (14.6)								
Overall height	1,255 (49.4)	1,360 (53.5)			1,255 (49.4)		1,360 (53.5)		
Dry weight	89 kg (196.2 lb)	91 kg (200.7 lb)	90 kg (198.5 lb)	92 kg (202.9 lb)	88 kg (194.0 lb)		90 kg (198.5 lb)	92 kg (202.9 lb)	
Operating weight (incl. oil)	91.5 kg (201.8 lb)	93.5 kg (206.1 lb)	92.5 kg (204.0 lb)	94.5 kg (208.4 lb)	90.5 kg (200.0 lb)		92.5 kg (204.0 lb)	94.5 kg (208.4 lb)	

*1: With handlebar raised

*2: With handlebar extended

FRAME

Model	BF35A					BF45A			
	Type	SH	LH	LR	LRT	SR	SR	LR	LRT
Transom height	416 mm (16.4 in)	521 mm (20.5 in)			416 mm (16.4 in)		521 mm (20.5 in)		
Transom angle	5 stage adjustment (11.5°, 15.5°, 19.5°, 23.5°, 27.5°)								
Tilting angle	73°								
Swivel angle	37.5° right and left								
Trim angle	—			0–20°		—		0–20°	

Model	BF35A					BF45A			
	Type	SH	LH	LR	LRT	SR	SR	LR	LRT
Shaft Length	S	L	L	L	S	S	L	L	
Tiller Handle	H	H							
Remote Control			R	R	R	R	R	R	
Gas Assisted Tilt	GAT	GAT	GAT		GAT	GAT	GAT		
Power Tilt/Trim				T				T	
Tachometer				*				*	
Trim meter				*				*	

*: Standard Equipment

• According to Shaft Length

S: Short Shaft

L: Long Shaft

• According to Control System

H: Tiller Handle Control

R: Remote Control

• According to tilt system

GAT: Gas-assisted Tilt (with gas damper assist function)

T: Power trim & tilt (with hydraulic assist function)

ENGINE

Model	BF35A	BF45A
Type	4-stroke, O.H.C, 3-cylinder	
Displacement	808 cm ³ (49.4 cu in)	
Bore x stroke	70 x 70 mm (2.8 x 2.8 in)	
Rated power * 1	35 HP (26.1 kw)/4,600—5,600 min ⁻¹ (r.p.m.)	45 HP (33.6 kw)/5,000—6,000 min ⁻¹ (r.p.m.)
Maximum torque	6.0 kg-m (43.4 ft-lb) 3,500 min ⁻¹ (r.p.m.)	6.05 kg-m (43.8 ft-lb) 4,500 min ⁻¹ (r.p.m.)
Compression ratio	9.2 : 1	
Fuel consumption ratio [g/PS·hr]	210	
Cooling system	Forced water circulation by impeller pump with thermostat	
Ignition system	CDI	
Ignition timing	5—32° B.T.D.C.	
Spark plug	DR7EA (NGK), X22ESR-U (NIPPONDENSO)	
Carburetor	Horizontal type, butterfly valve (3 carburetor)	
Lubrication system	Pressure lubrication by trochoid pump	
Lubrication capacity	2.4 ℓ (2.54 US qt, 2.11 Imp qt)	
Starter system	Electric starter	
Stopping system	Grounding of primary circuit	
Fuel	Regular automotive gasoline (86 pump octane; unleaded preferred)	
Fuel tank capacity	25 ℓ (6.6 US gal, 5.5 Imp gal)	
Fuel pump	Mechanical plunger type	
Exhaust system	Underwater type	
Recommended oil	SAE 10 W—30/40	

* 1: Full throttle r.p.m. range.


LOWER UNIT

Clutch	Dog clutch (Forward—Neutral—Reverse)
Gear ratio	0.48 (26/33 x 14/23)
Reduction	Spiral bevel
Gear case oil capacity	0.52 ℓ (0.550 US qt, 0.458 Imp qt)
Propeller No. of blades-Dia. x Pitch	3-286 x 330 mm (11-1/4 x 13.0 in)
Propeller rotating direction	Clockwise (viewed from rear)
Propeller driving system	Spline

DIMENSIONAL DRAWINGS


Unit: mm (in)

Remote control type
[]: Short shaft type

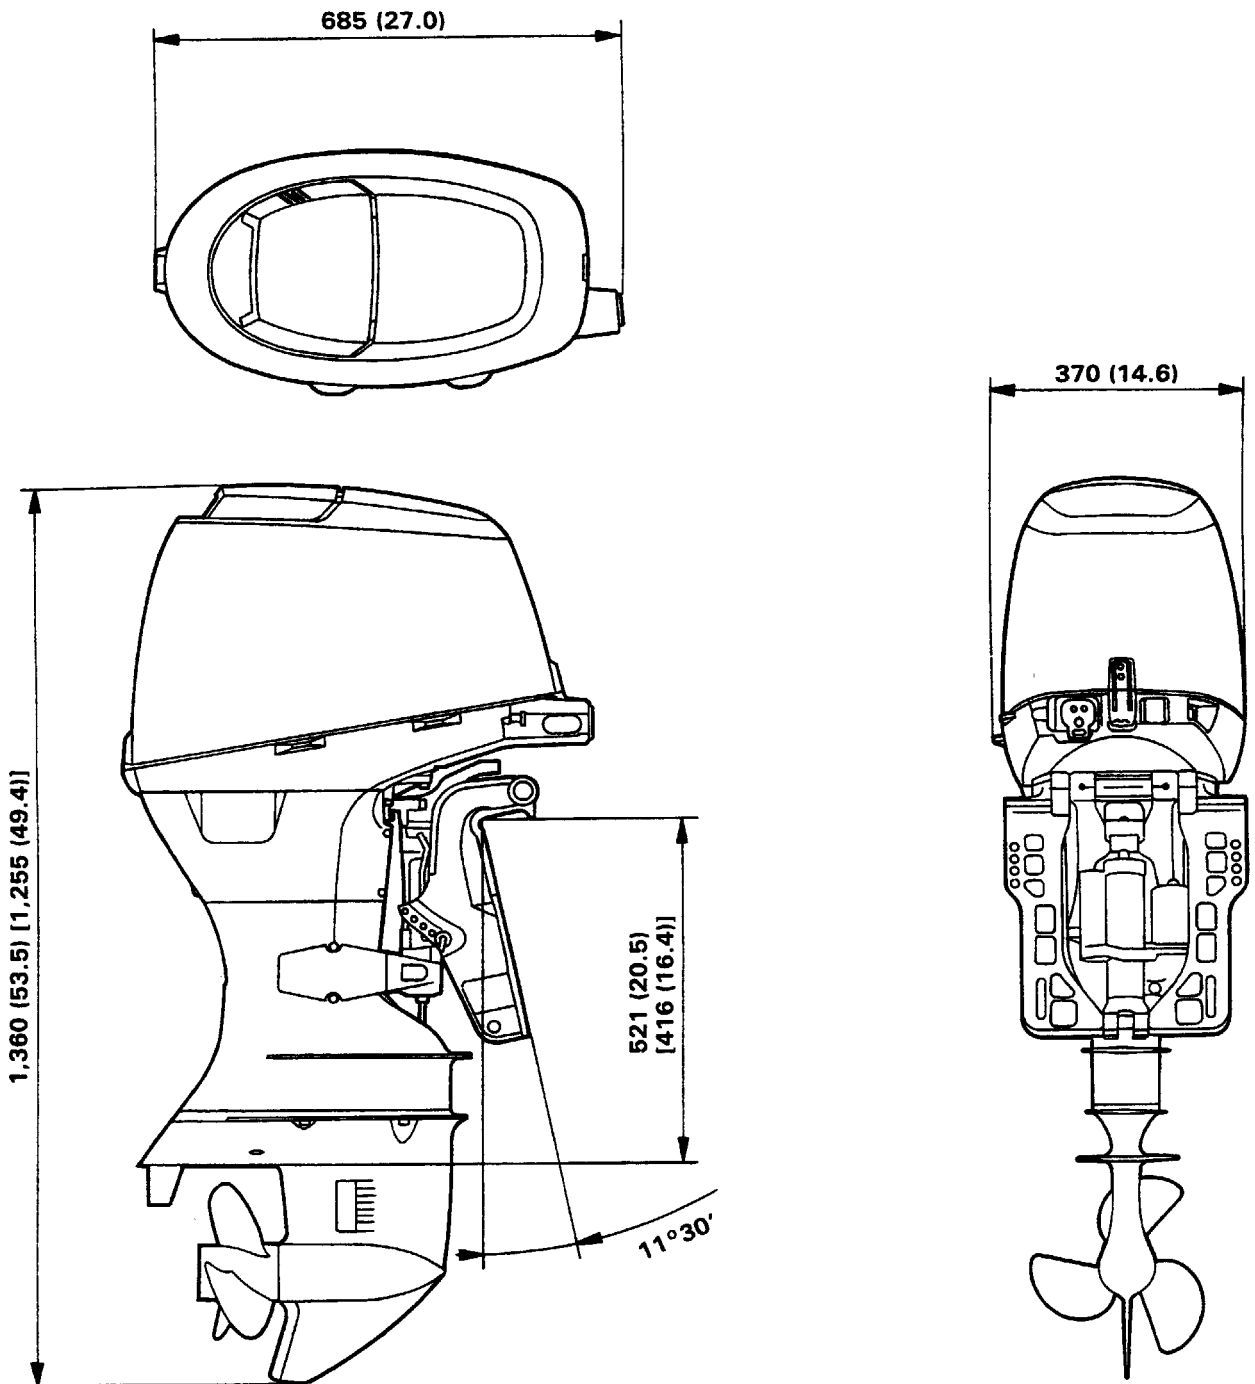


Tiller handle type
[]: Short shaft type

Unit: mm (in)

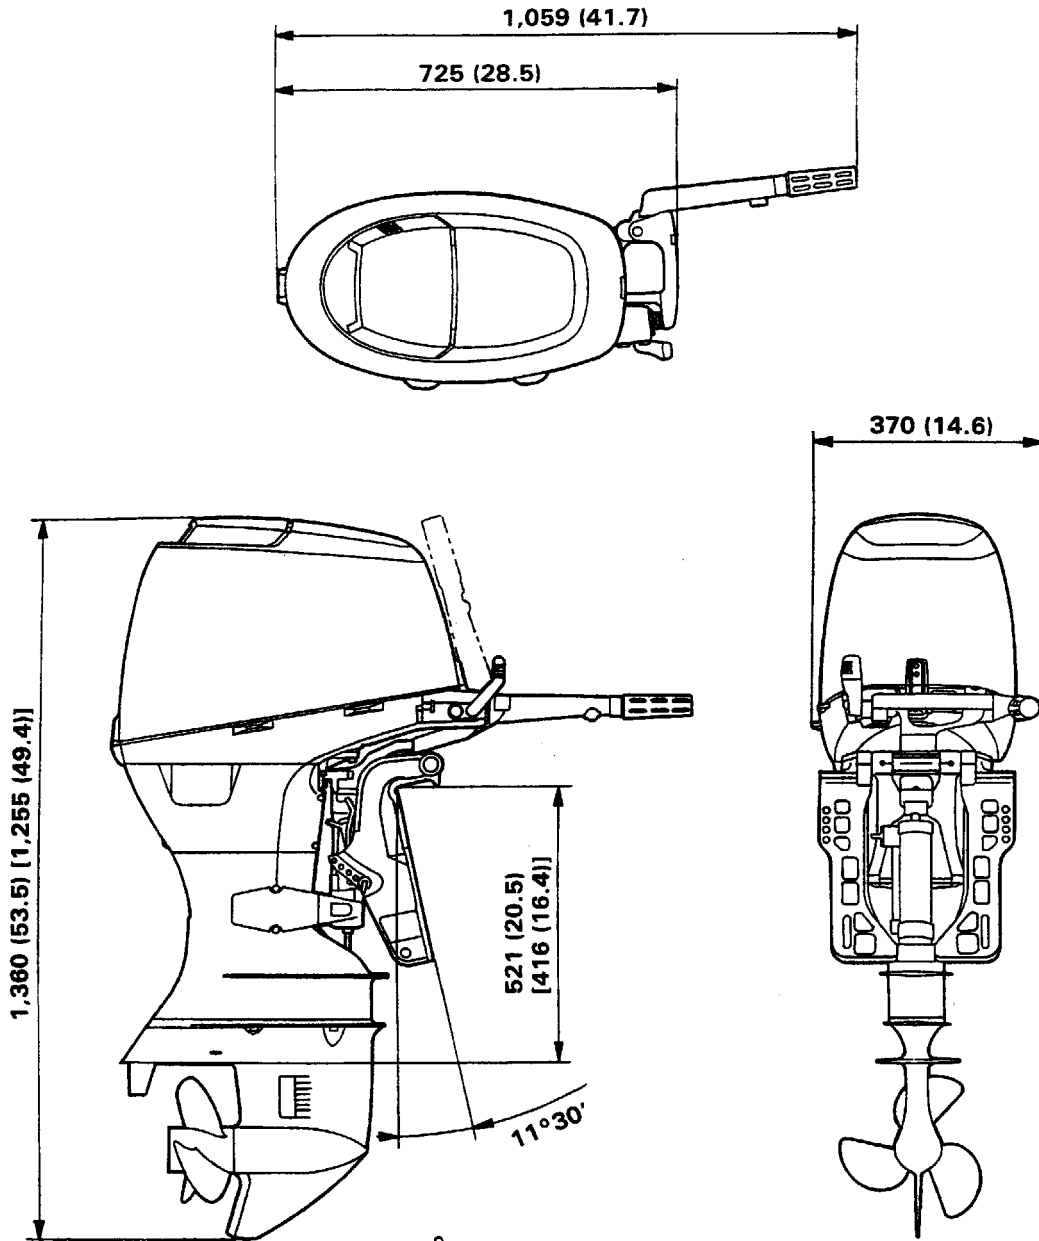









PROPELLER SHAFT

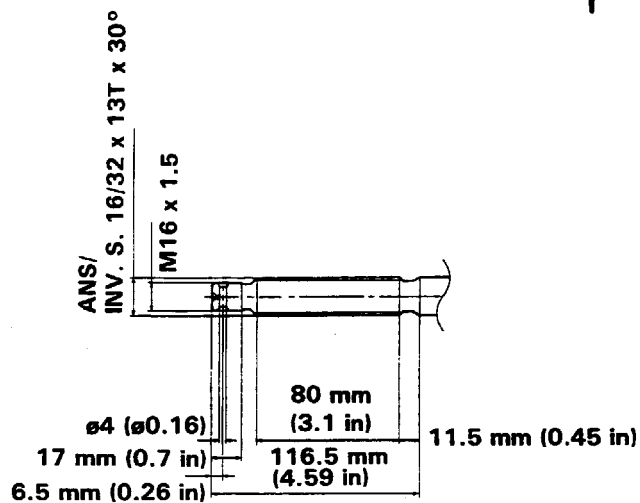

WIRING DIAGRAM Power trim & tilt/remote control type

HONDA

    
 
 
 

BF35A·45A

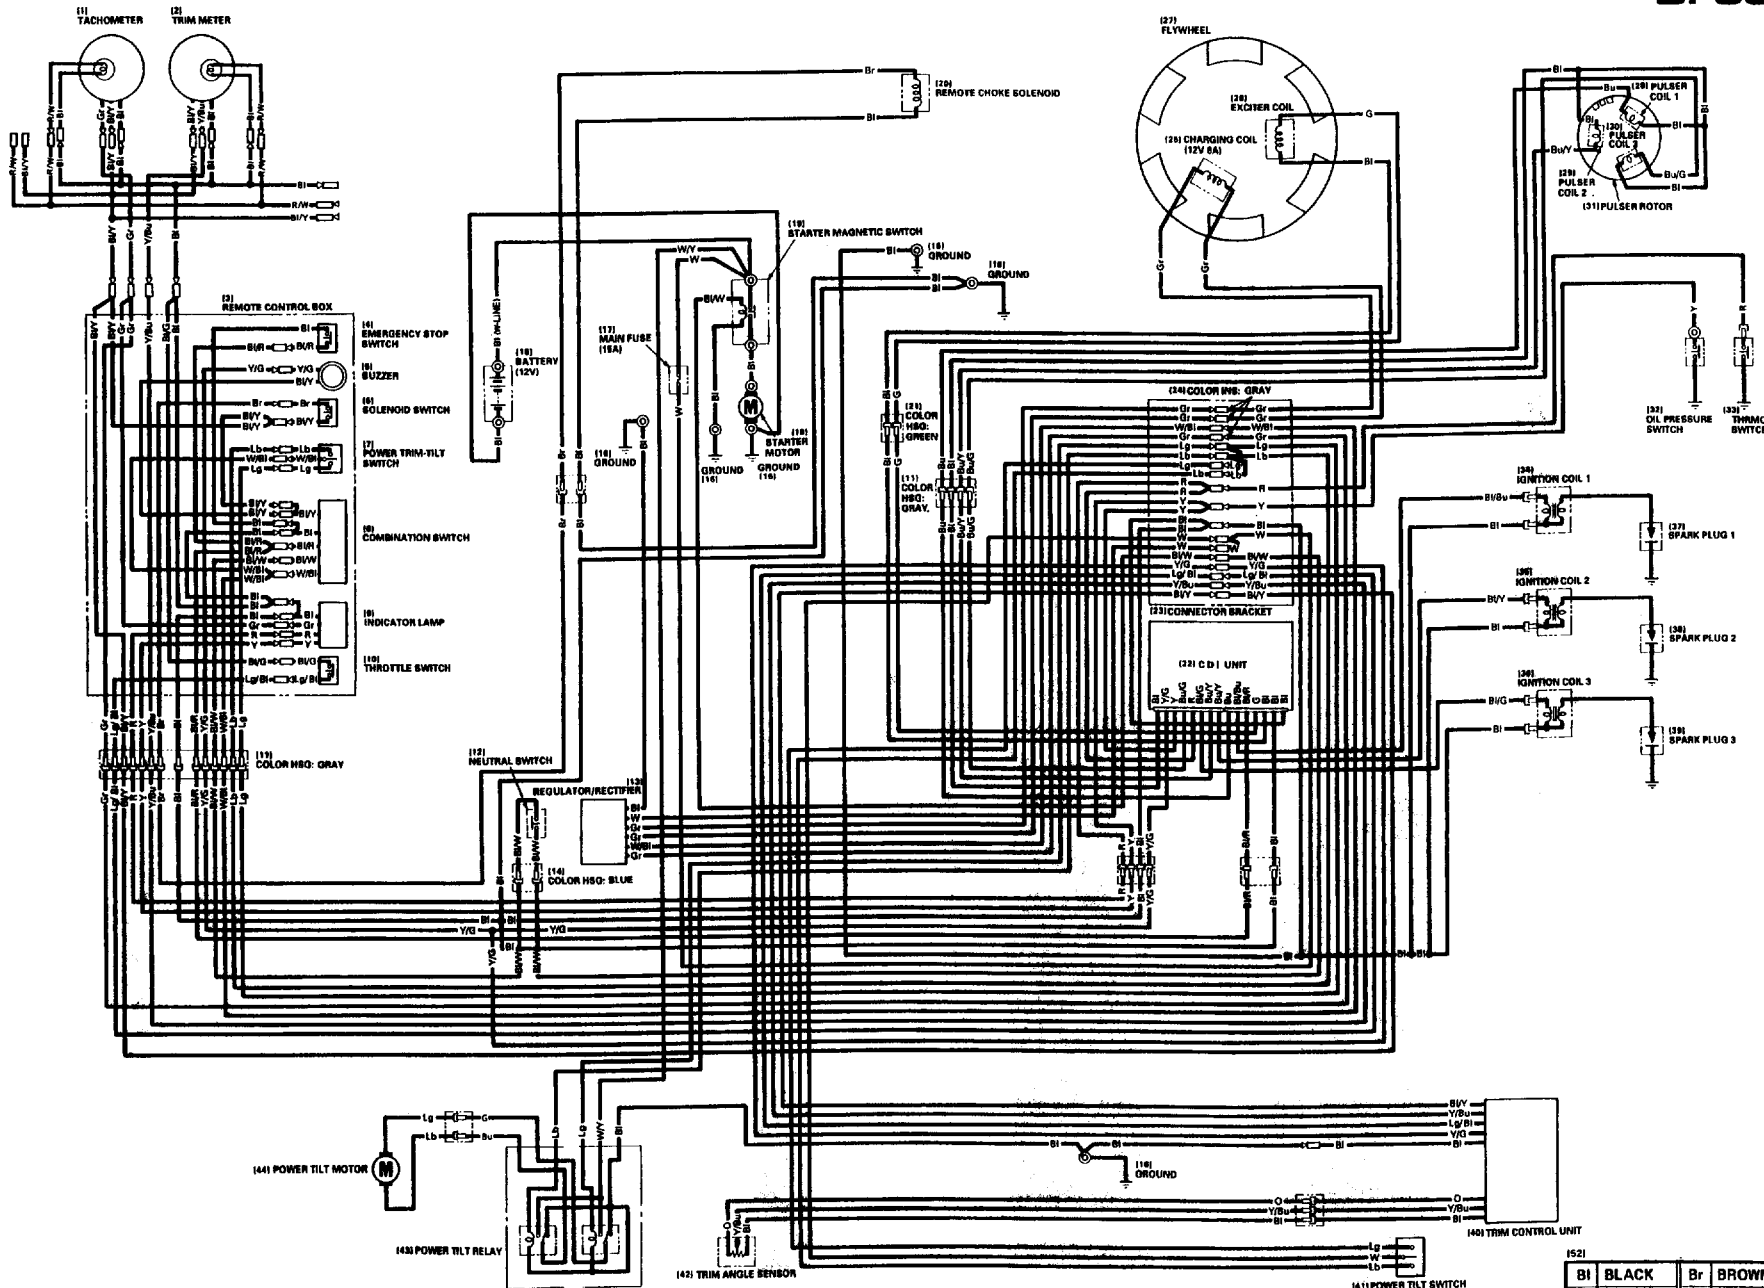

1521

BI	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

   
Remote control type

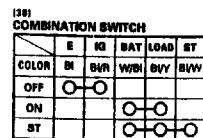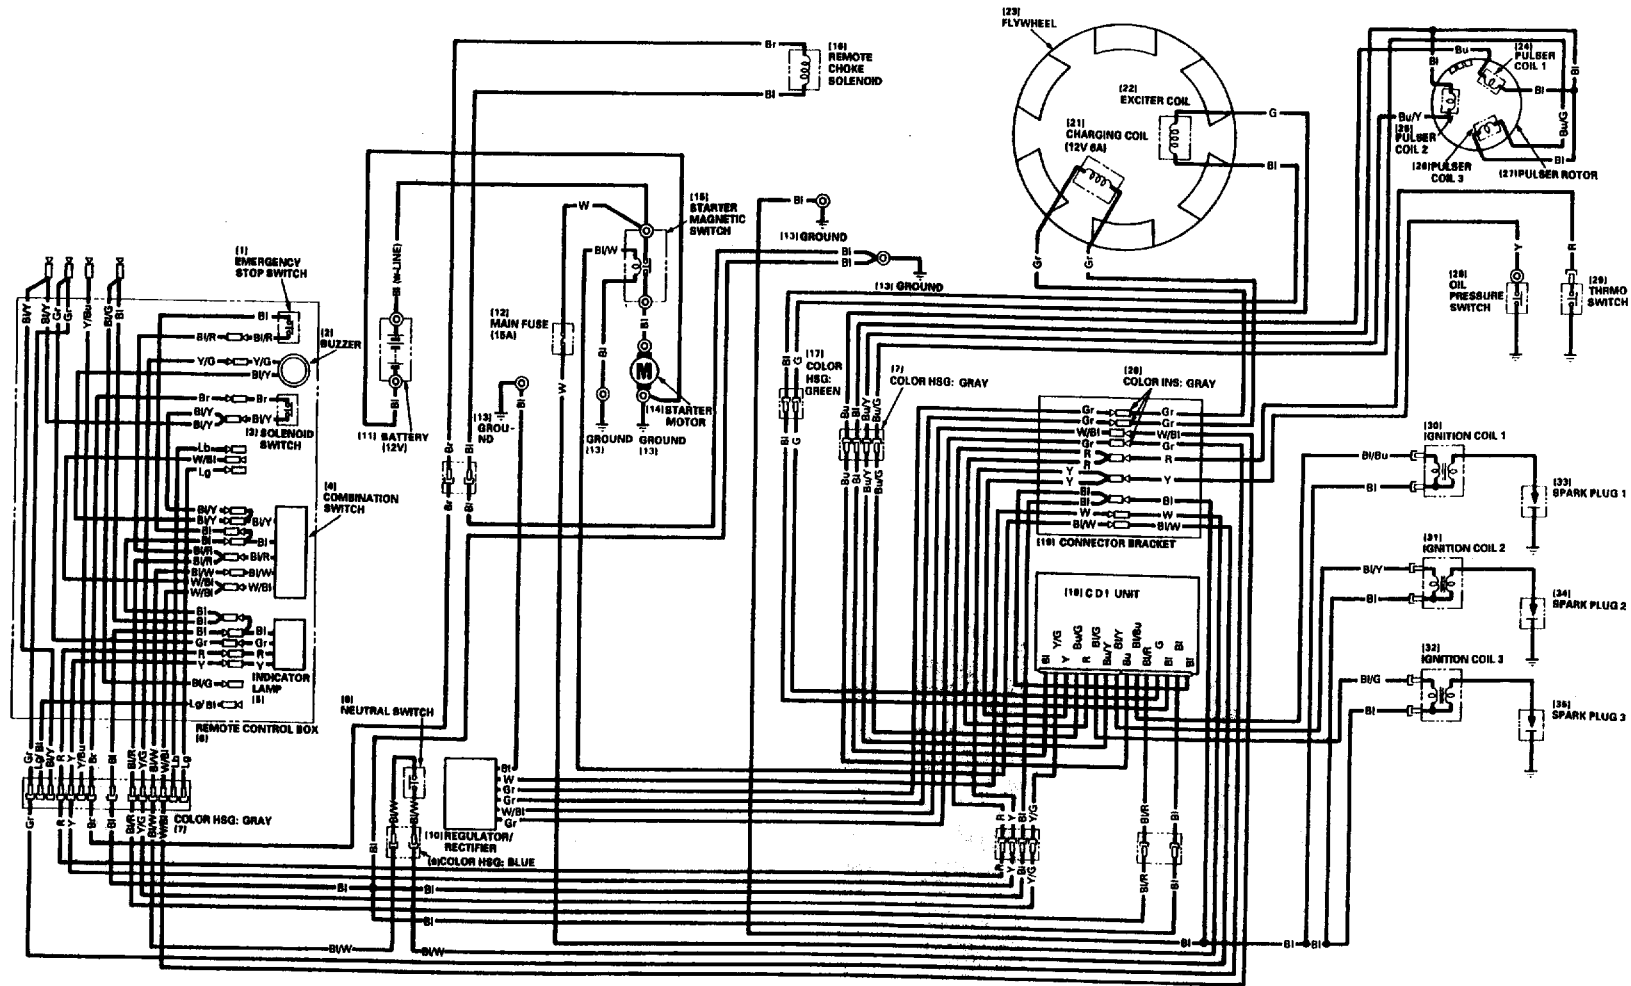

140

BI	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

Tiller handle type

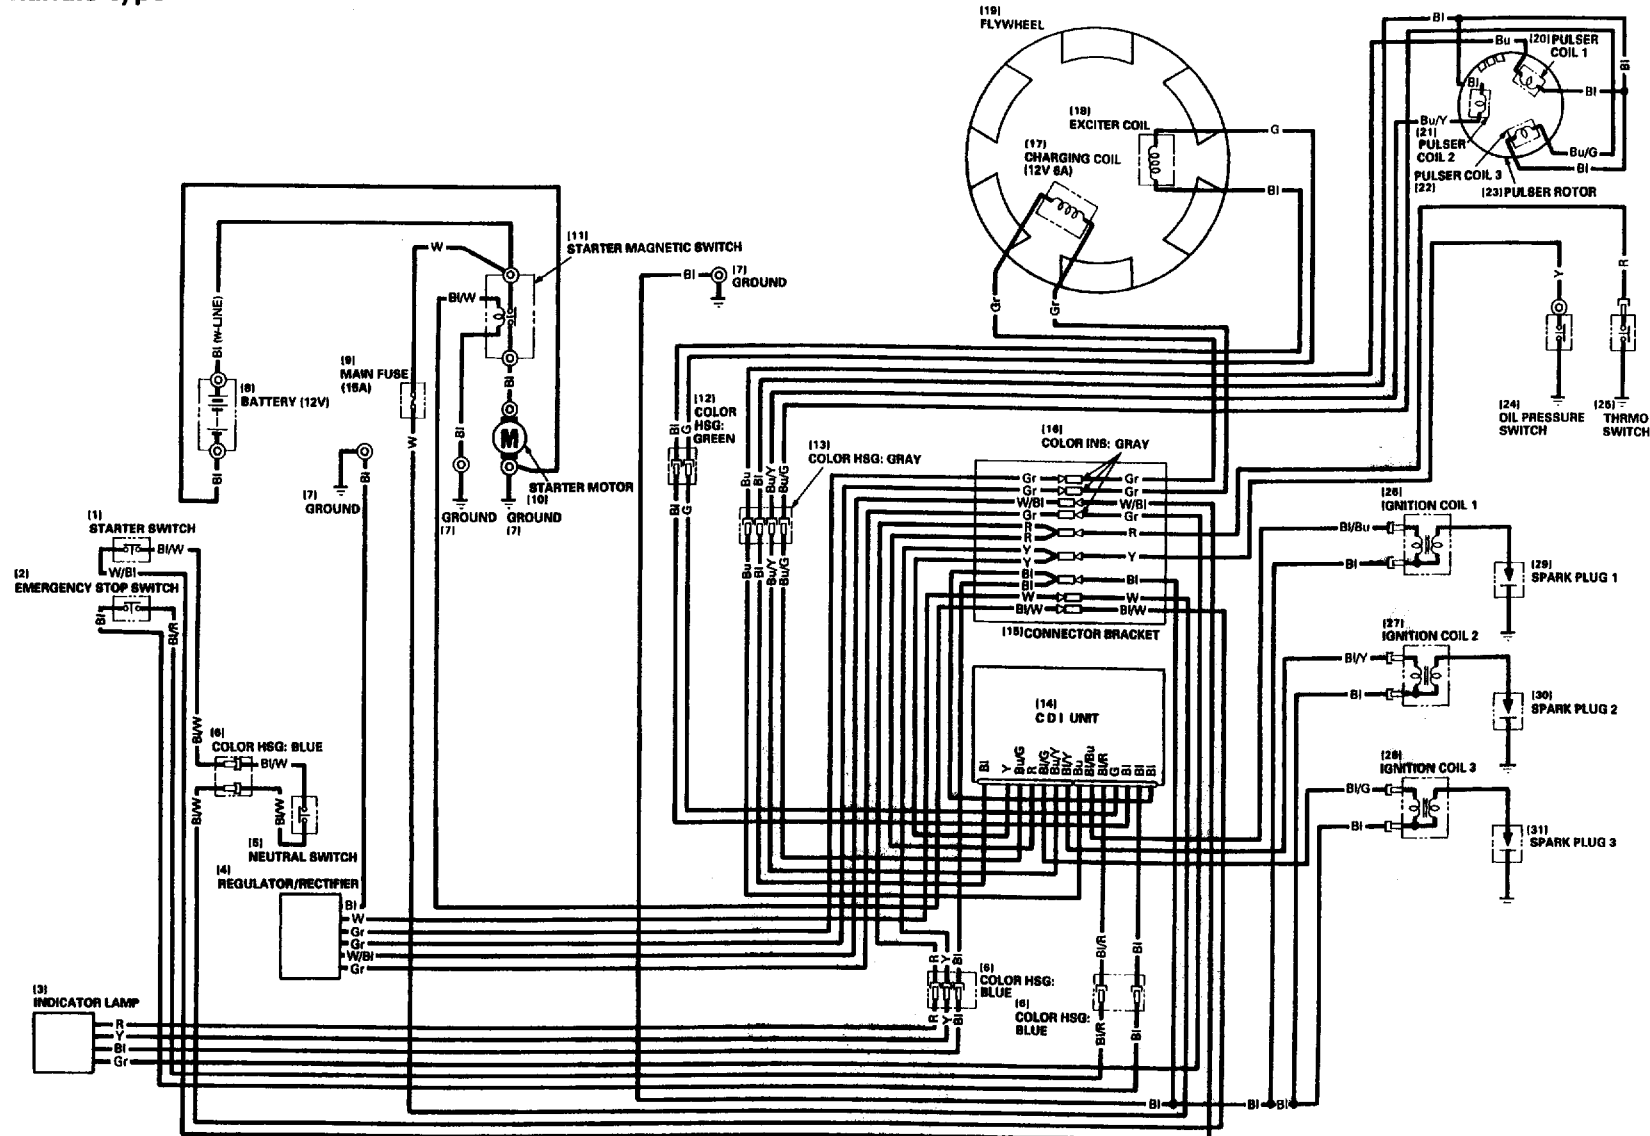

(32) STARTER SWITCH

	W/B1	B1/W
PUSH	○	○
NORMAL		

(33) EMERGENCY STOP SWITCH

	B1/R	B1
PUSH or LOCK PLATE OFF	○	○
NORMAL		

(34) NEUTRAL SWITCH

	B1/W	B1/W
ON	○	○
OFF		

(35)

B1	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

SERVICE INFORMATION

GENERAL SAFETY	2-2
SERVICE RULES	2-2
SERIAL NUMBER LOCATION	2-2
MAINTENANCE STANDARDS	2-3
TORQUE VALUES	2-9
SPECIAL TOOLS	2-11
TROUBLESHOOTING	2-13
CABLE/HARNESS ROUTING	2-22
TUBE ROUTING	2-32
LUBRICATION	2-33
MAINTENANCE SCHEDULE	2-36

GENERAL SAFETY

Pay attention to these symbols and their meanings:

- ▲ WARNING** Indicates a strong possibility of severe personal injury or death if instructions are not followed.
CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

▲ WARNING

- Stop the engine, and remove the spark plug caps and ignition key before servicing the outboard motor.
- If the motor must be running to do some work, make sure the area is well ventilated. Never run the engine in a closed area; the exhaust contains poisonous carbon monoxide gas.
- Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in your working area.

CAUTION

- Keep away from rotating or hot parts and high voltage wires when the engine is run with the engine cover off.

SERVICE RULES

1. Use genuine Honda or Honda-recommended parts and lubricants or their equivalents. Parts that do not meet Honda's design specifications may damage the unit.
2. Use the special tools designed for the product.
3. Install new gaskets, O-rings, etc. when reassembling.
4. When torquing bolts or nuts, begin with larger-diameter or inner bolts first and tighten to the specified torque diagonally, unless a particular sequence is specified.
5. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
6. After reassembly, check all parts for proper installation and operation.
7. Many screws used in this machine are self-tapping. Be aware that cross-threading or overtightening these screws will strip the female threads and ruin the hole.
8. Use only metric tools when servicing this unit. Metric bolt, nuts and screws are not interchangeable with nonmetric fasteners. The use of incorrect tools and fasteners will damage the unit.
9. Follow the instructions represented by these symbols when they are used:



OIL

: Apply oil

S. TOOL

: Use special tool



GREASE


: Apply grease

○ x ○ (○) : Indicates the type, length, and number of the flange bolt used.


: Indicates the reference page.

SERIAL NUMBER LOCATION

The engine serial number is stamped on the crankcase and the frame serial number is located on the R. stern bracket. Always specify these numbers when inquiring about the engine or when ordering parts in order to obtain the correct parts for outboard motor being serviced.

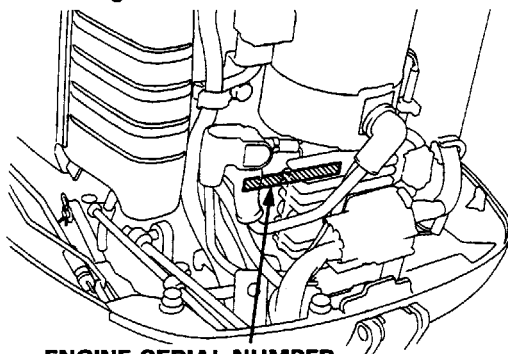

ENGINE SERIAL NUMBER

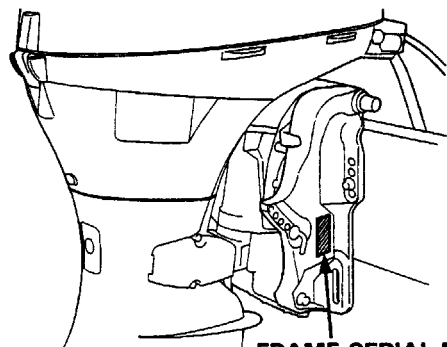

FRAME SERIAL NUMBER

MAINTENANCE STANDARDS
BF35A
ENGINE

Unit: mm (in)

Part	Item	Standard	Service limit	
Engine	Idle speed	950 ± 50 min ⁻¹ (rpm)	—	
	Cylinder compression	15 ± 1 kg/cm ² (212 ± 14 psi) at 500 min ⁻¹ (rpm)	—	
Carburetor	Main jet	#102	—	
	Pilot screw opening	2-1/8 turns out	—	
	Float height	14 (0.6)	—	
Spark plug	Gap	0.6–0.7 (0.024–0.028)	—	
Valves	Valve clearance	IN	0.13–0.17 (0.005–0.007)	—
		EX	0.21–0.25 (0.008–0.010)	—
	Stem O.D.	IN	5.480–5.490 (0.2157–0.2161)	5.45 (0.215)
		EX	5.460–5.470 (0.2150–0.2154)	5.42 (0.213)
	Guide I.D.	IN/EX	5.500–5.512 (0.2165–0.2170)	5.53 (0.218)
	Seat width	IN	1.25–1.55 (0.049–0.061)	2.0 (0.08)
		EX	1.25–1.55 (0.049–0.061)	2.0 (0.08)
	Spring free length	IN/EX	36.9 (1.45)	35.4 (1.39)
	Stem-to-guide clearance	IN	0.010–0.032 (0.0004–0.0013)	0.06 (0.0024)
EX		0.030–0.052 (0.0012–0.0020)	0.10 (0.004)	
Rocker arm	Rocker arm I.D.	14.010–14.028 (0.5516–0.5523)	14.05 (0.553)	
	Rocker arm shaft O.D.	13.976–13.994 (0.5502–0.5509)	13.95 (0.549)	
	Rocker arm shaft-to-rocker arm clearance	0.016–0.052 (0.0006–0.0020)	0.07 (0.003)	
Piston	Skirt O.D.	69.970–69.990 (2.7547–2.7555)	69.910 (2.7524)	
	Piston-to-cylinder clearance	0.010–0.045 (0.0004–0.0018)	0.09 (0.0035)	
	Pin hole I.D.	18.002–18.008 (0.7087–0.7090)	18.012 (0.709)	
	Pin O.D.	17.994–18.000 (0.7084–0.7086)	17.954 (0.7068)	
	Pin-to-pin hole clearance	0.002–0.014 (0.0001–0.0005)	0.04 (0.0016)	
Piston ring	Ring side clearance	Top	0.040–0.065 (0.0016–0.0026)	0.1 (0.004)
		Second	0.015–0.045 (0.00059–0.0018)	0.1 (0.004)
		Oil	0.055–0.140 (0.0022–0.0055)	0.15 (0.006)
	Ring end gap	Top	0.15–0.3 (0.006–0.012)	0.8 (0.03)
		Second	0.3–0.45 (0.012–0.018)	0.95 (0.037)
		Oil	0.2–0.7 (0.0079–0.028)	1.0 (0.04)
	Ring width	Top	0.990–1.025 (0.0390–0.0404)	0.96 (0.038)
Second		1.190–1.225 (0.0469–0.0482)	1.160 (0.0457)	
Cylinder/ cylinder head	Cylinder sleeve I.D.	70.0–70.015 (2.7559–2.7565)	70.06 (2.758)	
	Distortion of cylinder head	0.05 (0.0019)	0.1 (0.004)	
	I.D. of camshaft journal	23.0–23.021 (0.9055–0.9063)	23.05 (0.908)	

Unit: mm (in)

Part	Item		Standard	Service limit
Connecting rod	Small end I.D.		18.016–18.034 (0.7093–0.7100)	18.05 (0.711)
	Big end oil clearance		0.016–0.040 (0.0006–0.0016)	0.05 (0.0019)
	Big end axial clearance		0.05–0.2 (0.0019–0.0079)	0.3 (0.012)
	Connecting rod bearing oil clearance		0.020–0.038 (0.0008–0.0015)	0.08 (0.003)
Crankshaft	Journal O.D.	Main	39.982–40.006 (1.5741–1.5750)	39.95 (1.572)
		Pin	37.976–38.0 (1.4951–1.4961)	37.94 (1.494)
	Crankshaft main bearing oil clearance		0.020–0.038 (0.0008–0.0015)	0.05 (0.0019)
	Crankshaft side clearance		0.05–0.3 (0.0019–0.012)	0.45 (0.018)
Camshaft	Shaft axial clearance		0.03–0.11 (0.0012–0.0043)	0.3 (0.012)
	Shaft runout		0.03 (0.0012) Max.	0.05 (0.0019)
	Journal O.D.		22.959–22.980 (0.9039–0.9047)	22.93 (0.903)
	Cam height	IN	34.928–35.248 (1.3751–1.3877)	34.708 (1.3665)
		EX	34.973–35.293 (1.3769–1.3895)	34.753 (1.3682)
Shaft oil clearance		0.020–0.065 (0.0008–0.0026)	0.08 (0.003)	
Oil pump	Body I.D.		50.15–50.18 (1.974–1.975)	50.20 (1.976)
	Inner rotor-to-outer rotor clearance		0.15 (0.006) Max.	0.20 (0.0079)
	Outer rotor-to-body clearance		0.15–0.22 (0.006–0.009)	0.26 (0.0102)
	Outer rotor height		16.98–17.0 (0.6685–0.6693)	16.93 (0.667)
	Pump body depth		17.02–17.05 (0.670–0.671)	17.09 (0.673)
	Pump end clearance		0.02–0.07 (0.0008–0.0028)	0.1 (0.004)
Ignition coil	Resistance	Primary coil	0.19–0.23 Ω	—
		Secondary coil	2.8–3.4 k Ω	—
Charging coil	Resistance		0.20–0.26 Ω	—
Exciter coil	Resistance		168–227 Ω	—
Pulser coil	Resistance		288–352 Ω	—

FRAME

Part	Item	Standard	Service limit
Vertical shaft	Shaft O.D. (at needle bearing)	22.217–22.230 (0.8747–0.8752)	22.196 (0.8739)
Bevel gear	Gear I.D.	Forward	19.000–19.021 (0.7480–0.7489)
		Reverse	22.05–22.30 (0.868–0.878)
Propeller shaft	Shaft O.D.	Front	18.967–18.980 (0.7467–0.7472)
		Rear	20.9–21.2 (0.82–0.83)
	Shaft O.D. (at needle bearing)	22.007–22.020 (0.8664–0.8669)	21.99 (0.866)

HONDA

BF35A·45A

BF45A

ENGINE

Unit: mm (in)

Part	Item	Standard	Service limit	
Engine	Idle speed	950 ± 50 min ⁻¹ (rpm)	—	
	Cylinder compression	15 ± 1 kg/cm ² (212 ± 14 psi) at 500 min ⁻¹ (rpm)	—	
Carburetor	Main jet	#125	—	
	Pilot screw opening	2-1/8 turns out	—	
	Float height	14 (0.6)	—	
Spark plug	Gap	0.6–0.7 (0.024–0.028)	—	
Valves	Valve clearance	IN	0.13–0.17 (0.005–0.007)	—
		EX	0.21–0.25 (0.008–0.010)	—
	Stem O.D.	IN	5.480–5.490 (0.2157–0.2161)	5.45 (0.215)
		EX	5.460–5.470 (0.2150–0.2154)	5.42 (0.213)
	Guide I.D.	IN/EX	5.500–5.512 (0.2165–0.2170)	5.53 (0.218)
	Seat width	IN	1.25–1.55 (0.049–0.061)	2.0 (0.08)
		EX	1.25–1.55 (0.049–0.061)	2.0 (0.08)
	Spring free length	IN/EX	36.9 (1.45)	35.4 (1.39)
Stem-to-guide clearance	IN	0.010–0.032 (0.0004–0.0013)	0.06 (0.0024)	
	EX	0.030–0.052 (0.0012–0.0020)	0.10 (0.004)	
Rocker arm	Rocker arm I.D.	14.010–14.028 (0.5516–0.5523)	14.05 (0.553)	
	Rocker arm shaft O.D.	13.976–13.994 (0.5502–0.5509)	13.95 (0.549)	
	Rocker arm shaft-to-rocker arm clearance	0.016–0.052 (0.0006–0.0020)	0.07 (0.003)	
Piston	Skirt O.D.	69.970–69.990 (2.7547–2.7555)	69.910 (2.7524)	
	Piston-to-cylinder clearance	0.010–0.045 (0.0004–0.0018)	0.09 (0.0035)	
	Pin hole I.D.	18.002–18.008 (0.7087–0.7090)	18.012 (0.709)	
	Pin O.D.	17.994–18.000 (0.7084–0.7086)	17.954 (0.7068)	
	Pin-to-pin hole clearance	0.002–0.014 (0.0001–0.0005)	0.04 (0.0016)	
Piston ring	Ring side clearance	Top	0.040–0.065 (0.0016–0.0026)	0.1 (0.004)
		Second	0.015–0.045 (0.00059–0.0018)	0.1 (0.004)
		Oil	0.055–0.140 (0.0022–0.0055)	0.15 (0.006)
	Ring end gap	Top	0.15–0.3 (0.006–0.012)	0.8 (0.03)
		Second	0.3–0.45 (0.012–0.018)	0.95 (0.037)
		Oil	0.2–0.7 (0.0079–0.028)	1.0 (0.04)
	Ring width	Top	0.990–1.025 (0.0390–0.0404)	0.96 (0.038)
Second		1.190–1.225 (0.0469–0.0482)	1.160 (0.0457)	
Cylinder/ cylinder head	Cylinder sleeve I.D.	70.0–70.015 (2.7559–2.7565)	70.06 (2.758)	
	Distortion of cylinder head	0.05 (0.0019)	0.1 (0.004)	
	I.D. of camshaft journal	23.0–23.021 (0.9055–0.9063)	23.05 (0.908)	

Unit: mm (in)

Part	Item		Standard	Service limit
Connecting rod	Small end I.D.		18.016–18.034 (0.7093–0.7100)	18.05 (0.711)
	Big end oil clearance		0.016–0.040 (0.0006–0.0016)	0.05 (0.0019)
	Big end axial clearance		0.05–0.2 (0.0019–0.0079)	0.3 (0.012)
	Connecting rod bearing oil clearance		0.020–0.038 (0.0008–0.0015)	0.08 (0.003)
Crankshaft	Journal O.D.	Main	39.982–40.006 (1.5741–1.5750)	39.95 (1.572)
		Pin	37.976–38.0 (1.4951–1.4961)	37.94 (1.494)
	Crankshaft main bearing oil clearance		0.020–0.038 (0.0008–0.0015)	0.05 (0.0019)
	Crankshaft side clearance		0.05–0.3 (0.0019–0.012)	0.45 (0.018)
Camshaft	Shaft axial clearance		0.03–0.11 (0.0012–0.0043)	0.3 (0.012)
	Shaft runout		0.03 (0.0012) Max.	0.05 (0.0019)
	Journal O.D.		22.959–22.980 (0.9039–0.9047)	22.93 (0.903)
	Cam height	IN	34.928–35.248 (1.3751–1.3877)	34.708 (1.3665)
		EX	34.973–35.293 (1.3769–1.3895)	34.753 (1.3682)
	Shaft oil clearance		0.020–0.065 (0.0008–0.0026)	0.08 (0.003)
Oil pump	Body I.D.		50.15–50.18 (1.974–1.975)	50.20 (1.976)
	Inner rotor-to-outer rotor clearance		0.15 (0.006) Max.	0.20 (0.0079)
	Outer rotor-to-body clearance		0.15–0.22 (0.006–0.009)	0.26 (0.0102)
	Outer rotor height		16.98–17.0 (0.6685–0.6693)	16.93 (0.667)
	Pump body depth		17.02–17.05 (0.670–0.671)	17.09 (0.673)
	Pump end clearance		0.02–0.07 (0.0008–0.0028)	0.1 (0.004)
Ignition coil	Resistance	Primary coil	0.19–0.23 Ω	—
		Secondary coil	2.8–3.4 k Ω	—
Charging coil	Resistance		0.20–0.26 Ω	—
Exciter coil	Resistance		168–227 Ω	—
Pulser coil	Resistance		288–352 Ω	—

HONDA

BF35A·45A

FRAME

Unit: mm (in)

Part	Item	Standard	Service limit
Vertical shaft	Shaft O.D. (at needle bearing)	22.217—22.230 (0.8747—0.8752)	22.196 (0.8739)
Bevel gear	Gear I.D.	Forward	19.000—19.021 (0.7480—0.7489)
		Reverse	22.05—22.30 (0.868—0.878)
Propeller shaft	Shaft O.D.	Front	18.967—18.980 (0.7467—0.7472)
		Rear	20.9—21.2 (0.82—0.83)
	Shaft O.D. (at needle bearing)	22.007—22.020 (0.8664—0.8669)	21.99 (0.866)

TORQUE VALUES

Item	Thread Dia. (mm) and pitch (length)	Torque values		
		N·m	kg-m	ft-lb
• ENGINE				
Crankcase bolt * 1	M8 x 1.25	28	2.8	20.2
	M6 x 1.0	11	1.1	8.0
Oil filter cartridge	M20 x 1.5	8	0.8	5.6
Water jacket cover bolt	M6 x 1.0	12	1.2	8.7
Thermostat cover bolt	M6 x 1.0	12	1.2	8.7
Cylinder head bolt * 1	M10 x 1.25	38	3.8	27.5
	M8 x 1.25	27	2.7	19.5
Cylinder head cover bolt	M6 x 1.0	12	1.2	8.7
Fuel pump bolt	M6 x 1.0	10	1.0	7.2
Camshaft holder bolt	M6 x 1.0	14	1.4	10.1
	M6 x 1.0	12	1.2	8.7
Throttle cam	M6 x 1.0	12	1.2	8.7
Choke arm bolt	M6 x 1.0	12	1.2	8.7
Intake manifold bolt, nut	M6 x 1.0	12	1.2	8.7
Carburetor bolt	M6 x 1.0	10	1.0	7.2
Connecting rod nut	M8 x 0.75	28	2.8	20.2
Primary drive gear nut	M22 x 1.25	92	9.2	66.5
Valve adjusting nut	M7 x 0.75	23	2.3	16.6
Oil drain bolt	M12 x 1.5	23	2.3	16.6
Exhaust pipe bolt	M6 x 1.0	10	1.0	7.2
	M8 x 1.25	21	2.1	15.2
Oil pan bolt	M6 x 1.0	10	1.0	7.2
Oil pump bolt	M6 x 1.0	13	1.3	9.4
Fuel strainer retainer bolt	M6 x 1.0	13	1.3	9.4
Timing pulley bolt	M48 x 1.5	130	13.0	94.0
Timing belt tensioner bolt	M10 x 1.25	45	4.5	32.5
Timing belt adjusting spring bolt	M6 x 1.0	12	1.2	8.7
Flywheel bolt	M10 x 1.0	66	6.6	47.7
Pulser rotor bolt	M10 x 1.25	57	5.7	41.2
Oil pressure switch	PT 1/8	9	0.9	6.5
Thermo switch	M16 x 1.5	12	1.2	8.7
Starter magnetic switch (switch side)	M6 x 1.0	5	0.5	3.6
(starter motor side)	M8 x 1.25	7	0.7	5.1
CDI unit bolt	M6 x 1.0	5	0.5	3.6
Remote choke solenoid body stay bolt (Remote control type only)	M6 x 1.0	9	0.9	6.5

* 1: Tighten the crankcase bolts to 28 N·m (2.8 kg-m, 20.2 ft-lb) and the cylinder head bolts to 38 N·m (3.8 kg-m, 27.5 ft-lb) first, then tighten them 90°⁺³⁰ further.

HONDA

BF35A·45A

Item	Thread Dia. (mm) and pitch (length)	Torque values		
		N·m	kg-m	ft-lb
• GEAR CASE				
Pinion gear nut	M12 x 1.25	75	7.5	54.2
Gear case end nut	M80 x 1.5	70 ⁺³⁰ ₀	7.0 ^{+3.0} ₀	50.6 ^{+21.7} ₀
Gear case bolt	M10 x 1.25	35	3.5	25.3
	M8 x 1.25	22	2.2	15.9
Oil check bolt	M8 x 1.25	6.5	0.65	4.7
Drain plug bolt	M8 x 1.25	6.5	0.65	4.7
Flushing bolt	M8 x 1.25	6.5	0.65	4.7
Sensor nipple	M8 x 1.0	3	0.3	2.2
Impeller housing bolt	M6 x 1.0	11	1.1	8.0
• EXTENSION/MOUNT				
Extension case bolt	M8 x 1.25	22	2.2	15.9
Lower mount rubber nut	M12 x 1.25	55	5.5	40.0
Lower mount housing bolt	M8 x 1.25	22	2.2	15.9
Drain plug cover bolt	M6 x 1.0	6.5	0.65	4.7
Upper mount rubber nut	M10 x 1.25	45	4.5	32.5
• STERN BRACKET				
Stern bracket nut (L. side)	7/8—14 UNF	17.5	1.75	12.7
(R. side)	7/8—14 UNF	32.5	3.25	23.5
	M10 x 1.25	35	3.5	25.3
• FRAME/ELECTRICAL				
Emergency stop switch nut	M16 x 1.0	1.5	0.15	1.1
Starter switch nut (Tiller handle type only)	M16 x 1.0	1.5	0.15	1.1
Tilt handle nut (Tiller handle type only)	M6 x 1.0	6.5	0.65	4.7
Neutral switch nut	M20 x 1.0	2.5	0.25	1.8
Under cover screw	M5 x 0.8	3	0.3	2.2


STANDARD TORQUE VALUES

Item	Thread Dia.	Torque values		
		N·m	kg-m	ft-lb
Bolt and nut	5 mm	5	0.5	3.6
	6 mm	10	1.0	7.2
	8 mm	21	2.1	15.2
	10 mm	35	3.5	25.3
	12 mm	55	5.5	40.0
	Flange bolt and nut	6 mm (SH Flange bolt)	9	0.9
6 mm		12	1.2	8.7
8 mm		27	2.7	19.5
10 mm		35	3.5	25.3
12 mm		60	6.0	43.4
Screw		5 mm	4	0.4
	6 mm	9	0.9	6.5

SPECIAL TOOLS

Tool name	Tool number	Application
1. Float level gauge	07401-0010000	Inspection for carburetor float level
2. Vacuum 4ch tester set	07404-0030001	Carburetor vacuum pressure inspection
3. Oil pressure gauge	07506-3000000	Inspection for oil pressure
3-1 -attachment	07406-0030000	
4. Universal bearing puller	07631-0010000	Vertical shaft, gear case inner race removal
5. Torx bit handle	07703-0010300	Handle for 5-1, 5-2
5-1. -screw T20H	07703-0010400	Fuel pump disassembly/reassembly
5-2. -screw T30H	07703-0010600	Diaphragm adjustment
6. Valve guide driver, 5.5 mm	07742-0010100	Valve guide removal/installation
7. Pin driver, 2.5 mm	07744-0010100	2.5 x 12 mm, 2.5 x 18 mm, 2.5 x 20 mm spring pin removal/installation
8. Attachment, 32 x 35 mm	07746-0010100	22 x 35 x 7 mm water seal installation
9. Attachment, 37 x 40 mm	07746-0010200	Gear case inner race, 25 x 40 x 7 mm water seal installation
10. Attachment, 42 x 47 mm	07746-0010300	6005 bearing, vertical shaft outer race installation
11. Attachment, 52 x 55 mm	07746-0010400	6205 bearing installation
12. Attachment, 62 x 68 mm	07746-0010500	Gear case outer race installation
13. Attachment, 24 x 26 mm	07746-0010700	7/8 x 1-1/8 x 1 mm needle bearing removal/installation, 6007 bearing, 17 x 26 x 7 mm water seal installation
14. Inner driver, 35 mm	07746-0030400	6007 bearing, gear case inner race installation
15. Pilot, 25 mm	07746-0040600	6205, 6005 bearing installation
16. Pilot, 22 mm	07746-0041000	7/8 x 1-1/8 x 1 mm, 22 x 28 x 20 mm needle bearing removal/installation
17. Oil seal driver	07748-0010001	Oil seal, water seal removal
18. Handle A	07749-0010000	Driver for 8, 9, 10, 11, 13 and 33
19. Valve spring compressor	07757-0010000	Valve cotter removal/installation
20. Valve seat cutter, 45° φ29	07780-0010300	Valve seat reconditioning EX
21. Valve seat cutter, 45° φ33	07780-0010800	Valve seat reconditioning IN
22. Valve seat cutter, 32° φ30	07780-0012200	Valve seat reconditioning EX
23. Valve seat cutter, 32° φ33	07780-0012900	Valve seat reconditioning IN
24. Valve seat cutter, 60° φ30	07780-0014000	Valve seat reconditioning EX
25. Valve seat cutter, 60° φ37.5	07780-0014100	Valve seat reconditioning IN
26. Cutter holder, 5.5 mm	07781-0010101	Valve seat reconditioning
27. Valve guide reamer	07984-2000001	Valve guide reaming
28. Bearing remover, 35 mm	07936-3710400	6007 bearing removal
29. Bearing remover, 25 mm	07936-ZV10000	6205, 6005 bearing removal
30. Remover weight	07741-0010201	□ Constituents of Bearing remover, 35 mm and Bearing race puller (above item 28 and 46).
31. Remover handle	07936-3710100	
32. Pin driver, 4 mm	07944-9350200	4 x 20 mm, 4 x 25 mm Spring pin removal/installation (Tiller handle type only)
33. Attachment, 28 x 30 mm	07946-1870100	22 x 28 x 20 mm needle bearing removal/installation, 17 x 30 x 7 mm water seal installation
34. Stem race driver	07946-GC40000	Vertical shaft inner race installation
35. Bearing driver	07946-KM40701	22 x 28 x 20 mm needle bearing removal/installation
36. Handle	07946-MJ00100	Reverse gear removal
37. Base	07965-SD90100	Reverse gear removal/installation
38. Remover attachment, 22 mm	07GMD-KT70200	Reverse gear removal


Tool name	Tool number	Application
39. Handle	07949-3710001	7/8 x 1-1/8 x 1 mm needle bearing removal/installation, gear case outer race installation
40. Oil filter wrench	07HAA-PJ70100	Oil filter replacement
41. End nut wrench	07LPA-ZV30100	Gear case end nut removal/installation
42. 56 mm lock nut wrench	07LPA-ZV30200	Pulser rotor, 45 mm lock nut removal/installation
43. Ring gear holder	07LPB-ZV30100	Flywheel, 22 mm lock nut removal/installation
44. Vertical shaft holder	07LPB-ZV30200	Vertical shaft lock nut removal/installation
45. Propeller shaft holder	07LPC-ZV30300	Forward gear backlash inspection
46. Bearing race puller	07LPC-ZV30100	Vertical shaft, gear case outer race removal
47. Propeller shaft remover	07LPC-ZV30200	Propeller shaft holder assembly removal
48. Vertical shaft gauge	07LPJ-ZV30100	Vertical shaft shim adjustment
49. Bearing height gauge	07LPJ-ZV30200	Forward gear shim adjustment
50. Backlash inspection attachment	07LPJ-ZV30300	Forward gear backlash inspection
51. Test propeller	07LPZ-ZV30100 07LPZ-ZV50100	For test operation in water tank.

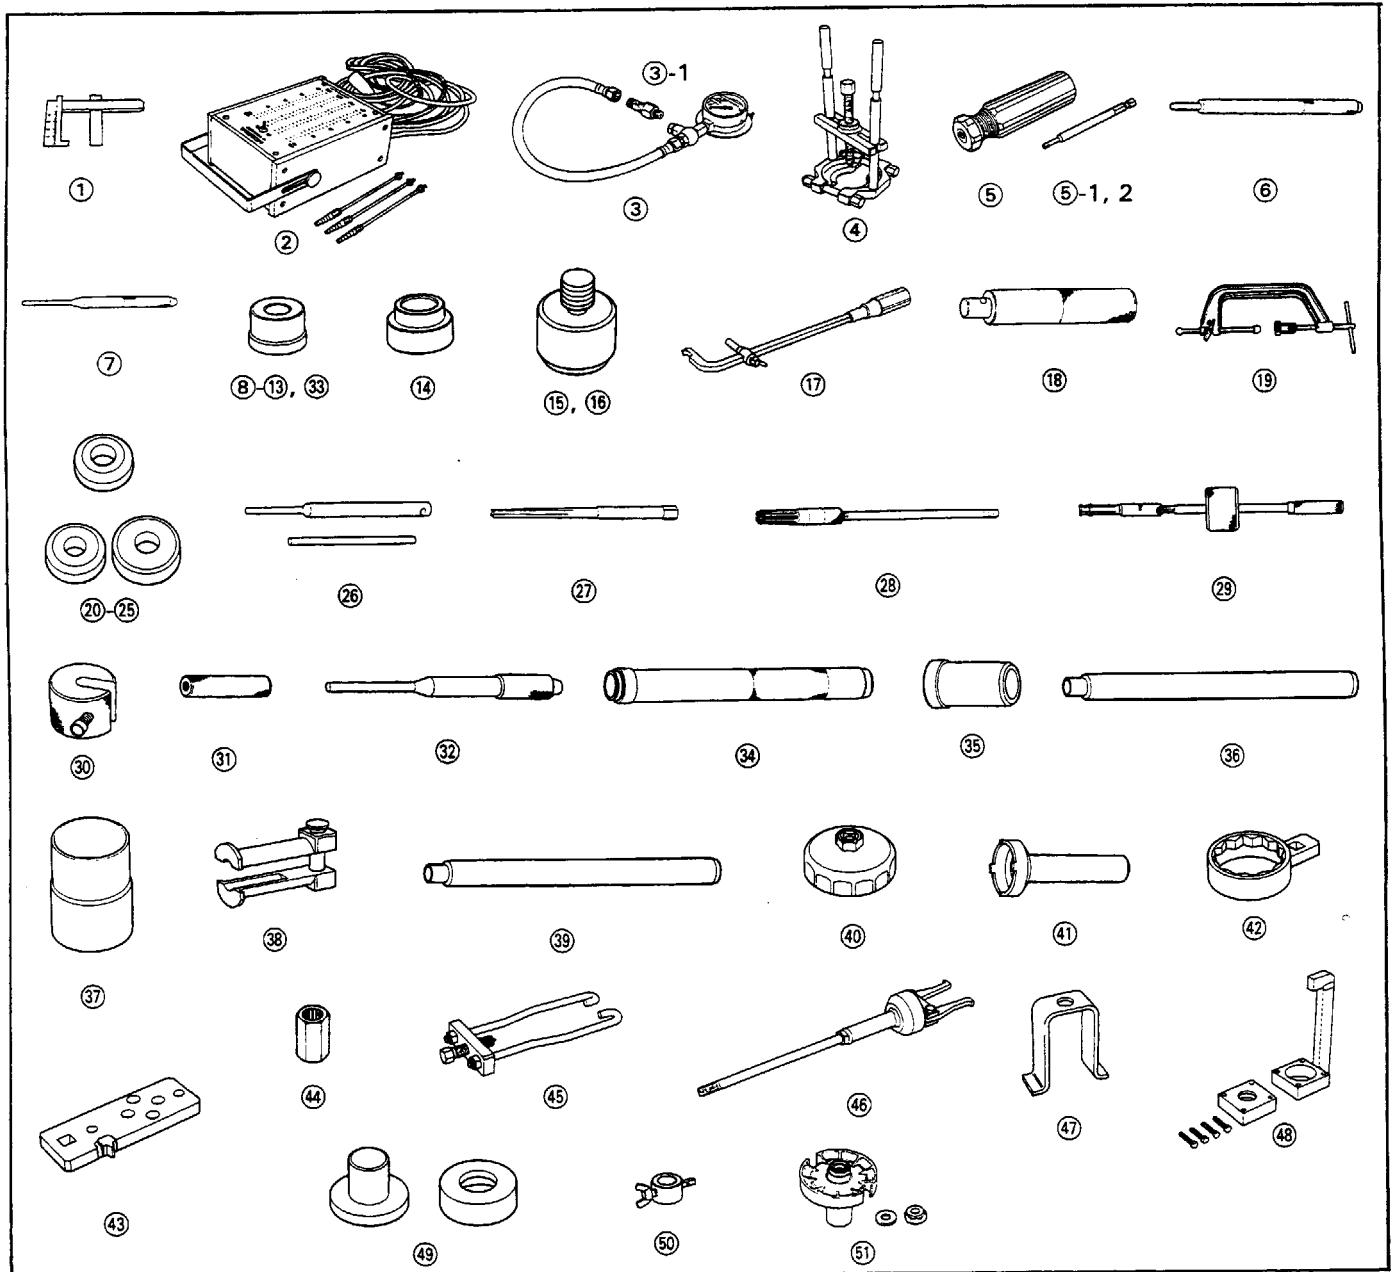

TROUBLESHOOTING

ENGINE

A. HARD STARTING

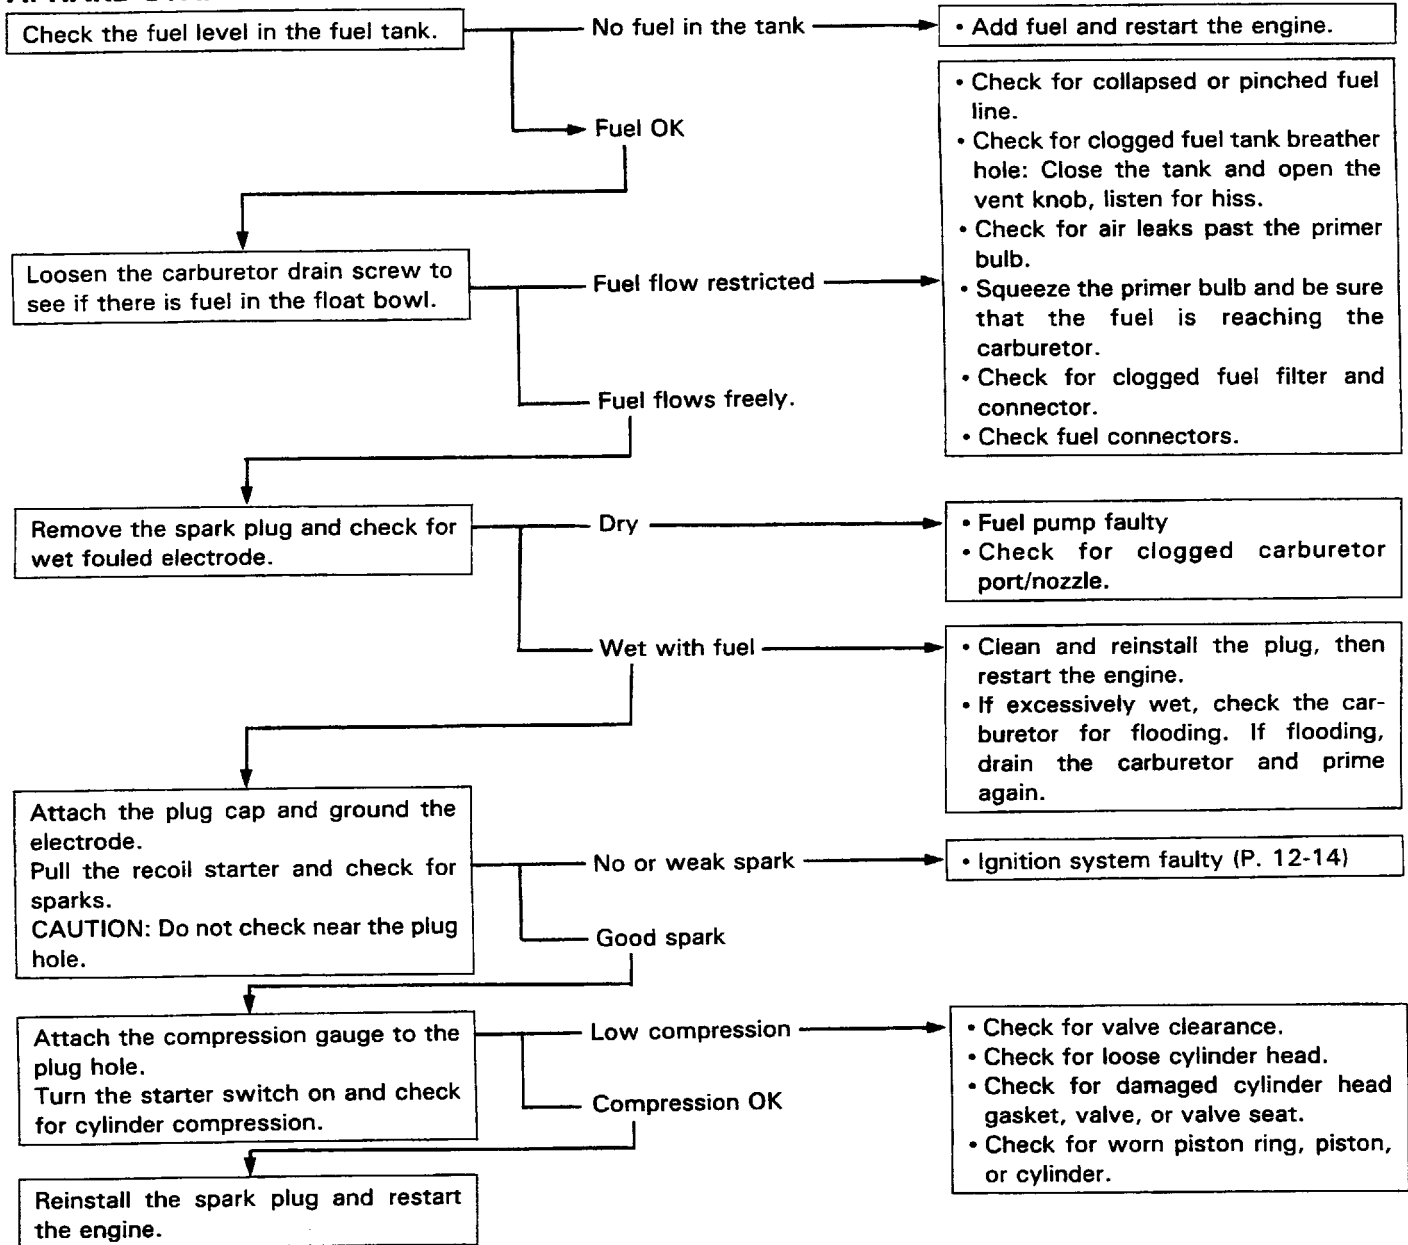


• CYLINDER COMPRESSION TEST


- 1) Remove the all spark plugs.
- 2) Shift into neutral gear and open the throttle fully.
- 3) Install a compression gauge in one of the spark plug holes.
- 4) Operate the starter motor until the highest reading is obtained.
- 5) Install the compression gauge in the other spark plug hole and repeat the step 3).

Cylinder compression	$15 \pm 1 \text{ kg/cm}^2$ ($212 \pm 14 \text{ psi}$) at 500 min^{-1} (r.p.m.)
----------------------	--

- 6) Check the compression on all cylinders.

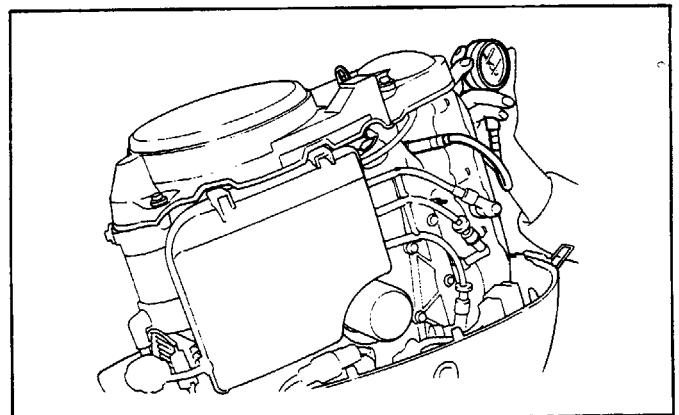

B. IGNITION SYSTEM

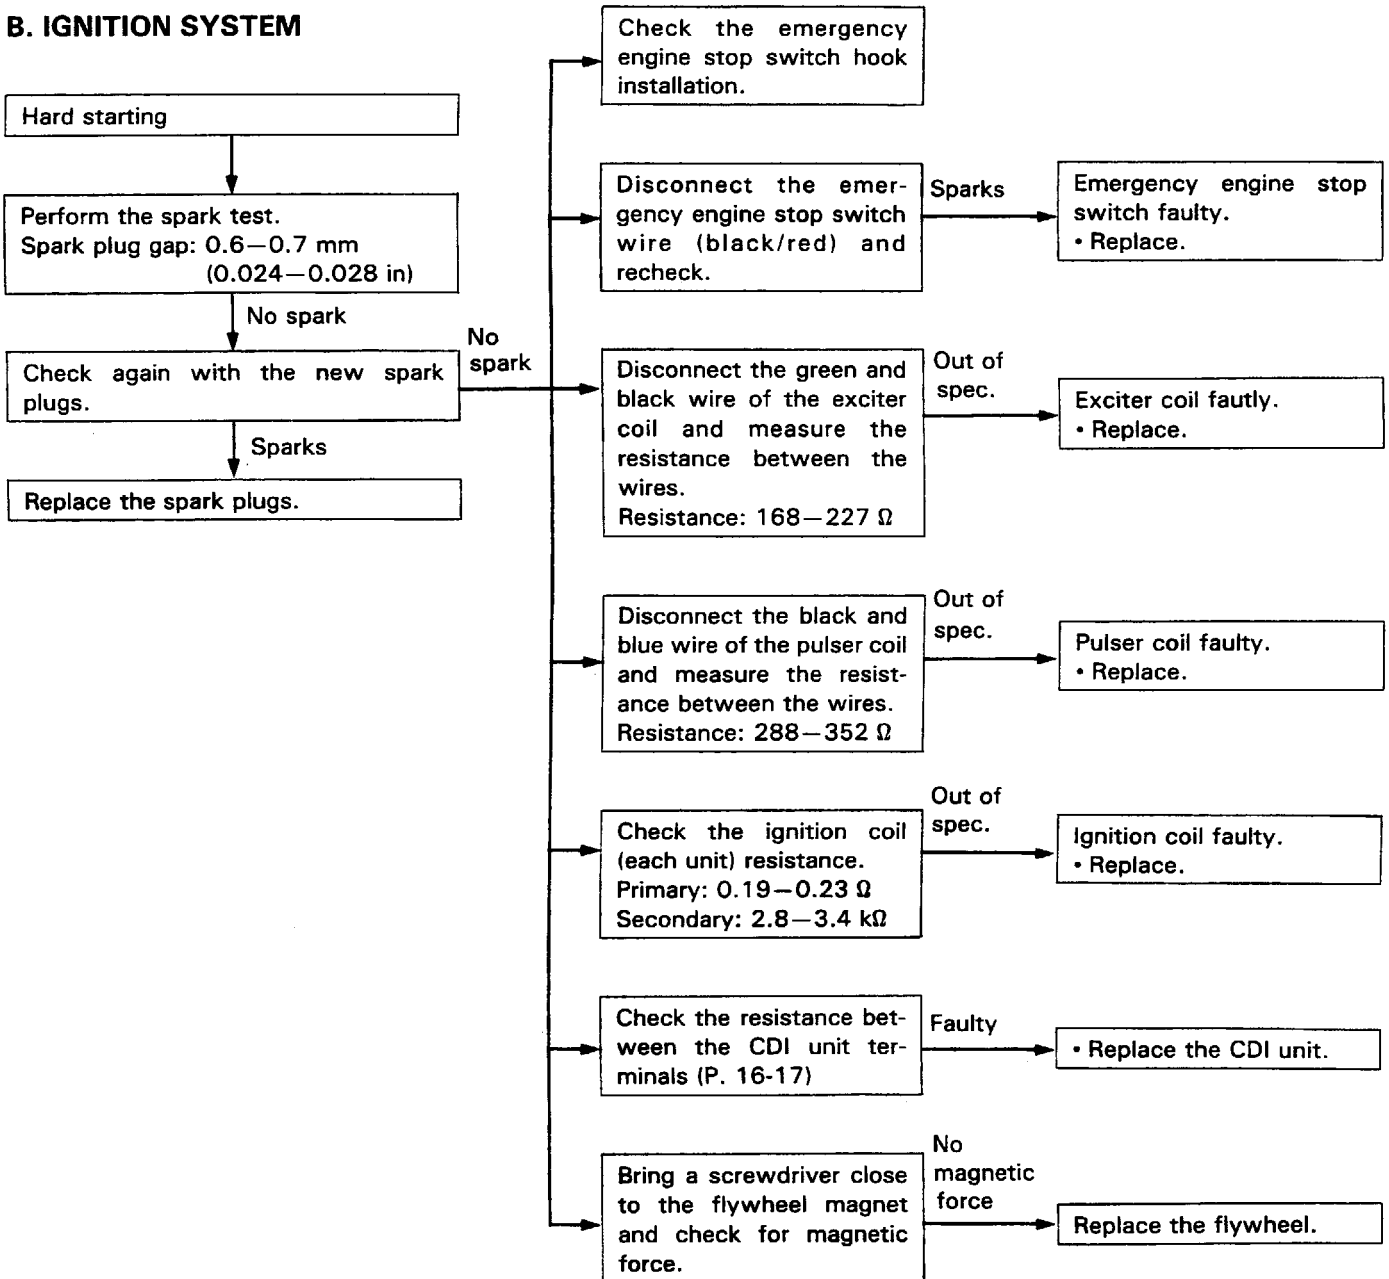


SPARK TEST


- 1) Remove the spark plug caps and spark plugs.
- 2) Attach the removed plug to the plug cap and ground the negative (-) terminal of the plug (threads) to the cylinder head cover bolt.
- 3) Turn the starter switch on and check to see if sparks jump across the electrodes.
- 4) Repeat steps 2) through 3) for another spark plug test.

⚠ WARNING

- Never hold the spark plug wire with wet hands while performing this test.
- Make sure that no fuel is spilled on the engine and that the plug is not wet with fuel.
- To avoid fire hazards, do not allow sparks near the plug hole.

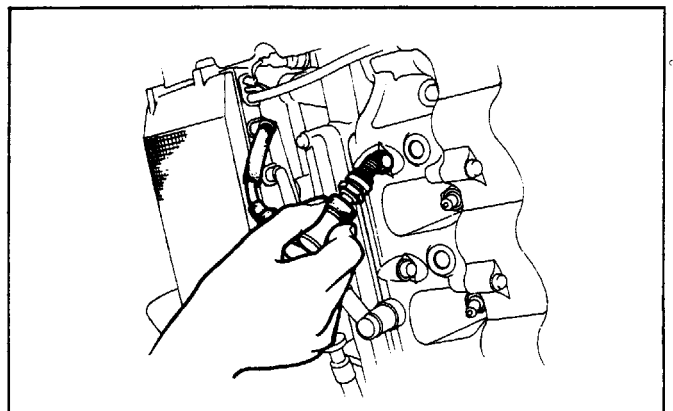

C. STARTER MOTOR

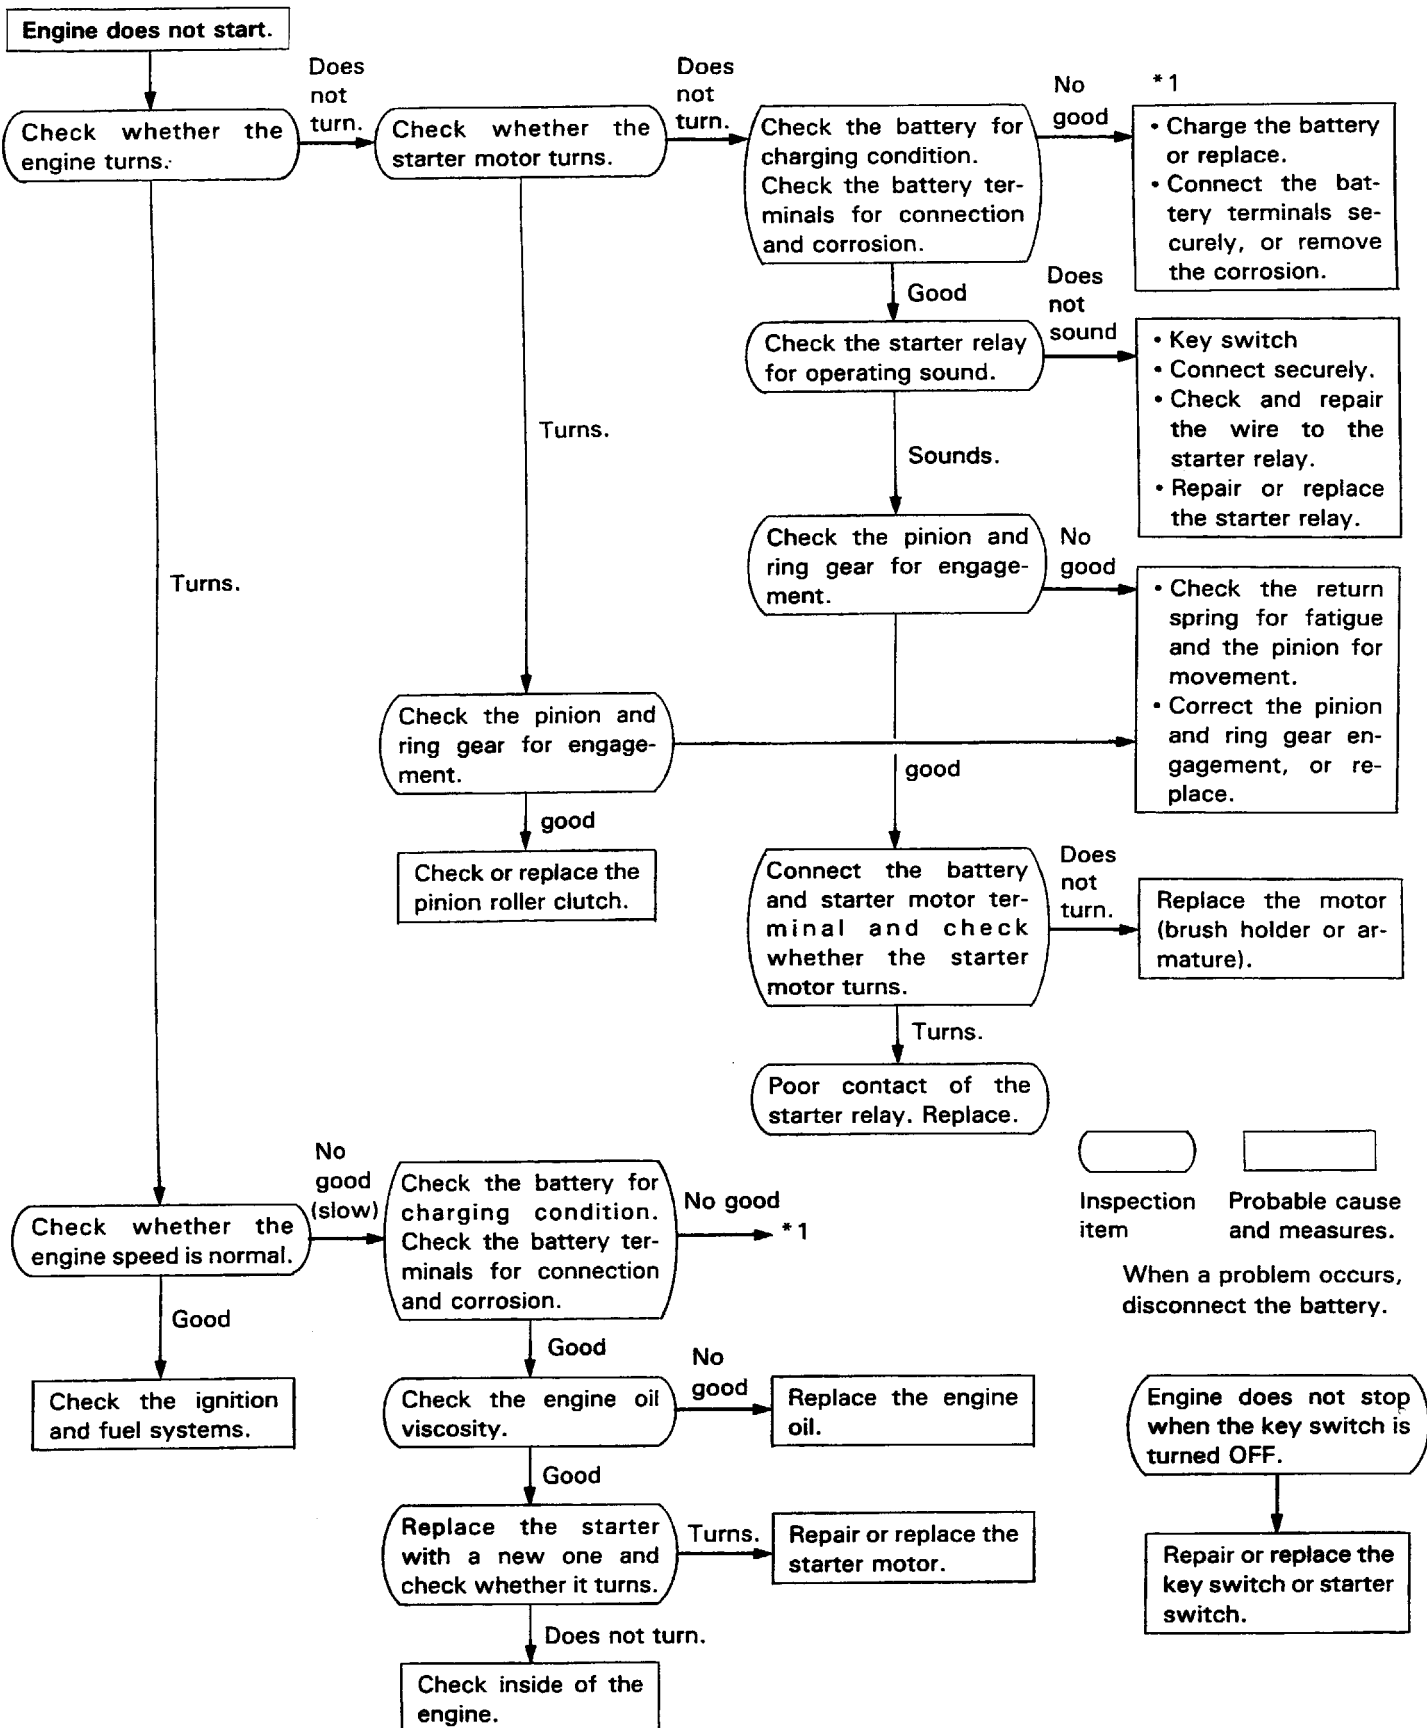

D. ENGINE DOES NOT RUN SMOOTHLY

Engine starts but stops soon. Poor idle performance.

- 1) Wet fouled spark plug caused from excessive choke application → Start the engine with the choke fully open and the throttle fully closed.
- 2) Faulty spark plug → Clean, adjust, or replace.
- 3) Carburetor synchronization misadjusted → Adjust properly.
- 4) Carburetor pilot screw/stop screw misadjusted → Adjust properly.
- 5) Carburetor slow circuit clogged with dirt → Overhaul.
- 6) Overflowed carburetor → Drain the carburetor and prime again. If still not good, overhaul the carburetor.
- 7) Secondary air sucked caused from damaged carburetor insulator gasket → Replace.

Engine speed does not increase.

- 1) Choke not returned properly → Return.
- 2) Throttle cable misadjusted → Adjust properly.
- 3) Propeller mismatched → Select correct propeller.
- 4) Engine overheats, engine oil pressure drops abnormally. (Warning system functions.)
- 5) Faulty spark plug → Clean, adjust, or replace.
- 6) Clogged fuel filter → Replace.
- 7) Water/dirt in carburetor → Drain the carburetor. Overhaul if it is still no good.
- 8) Incorrect valve timing → Reinstall the timing belt.

Engine speed does not decrease.


- 1) Acceleration/deceleration system misadjusted → Readjust properly.
- 2) Clogged dash pot check valve → Replace.
- 3) Throttle cable stuck with salt → Replace.
- 4) Carburetor throttle shaft not move smoothly. → Replace.

Excessive engine speed, engine speed fluctuates.


- 1) Mismatched propeller → Select correct propeller.
(Rev-limiter functions when over-revving.)
- 2) Propeller excessively worn → Replace.
- 3) Propeller damper rubber slippery → Replace.
- 4) Improperly installed outboard engine (incorrect transom height, tilt angle, etc.) → Adjust properly.

• OIL PRESSURE TEST

- 1) Check the engine oil level (P. 3-2).
- 2) Remove the 4 x 8 mm screw and oil pressure switch.

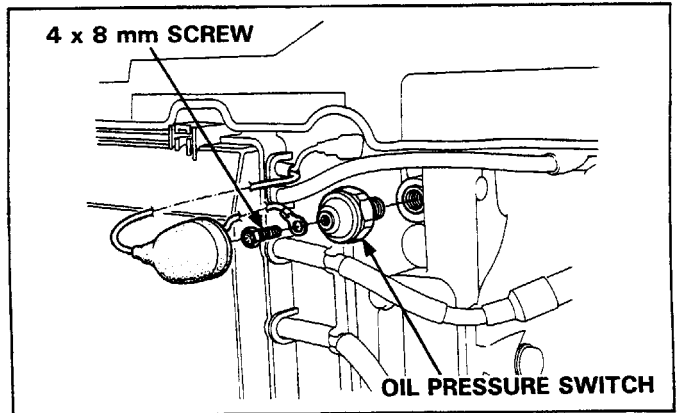

- 3) Install the pressure gauge attachment (special tool) on the oil pressure gauge that has a scale calibrated to a maximum of 7–10 kg/cm² (99.6–142.2 psi) scale and on the outboard motor.

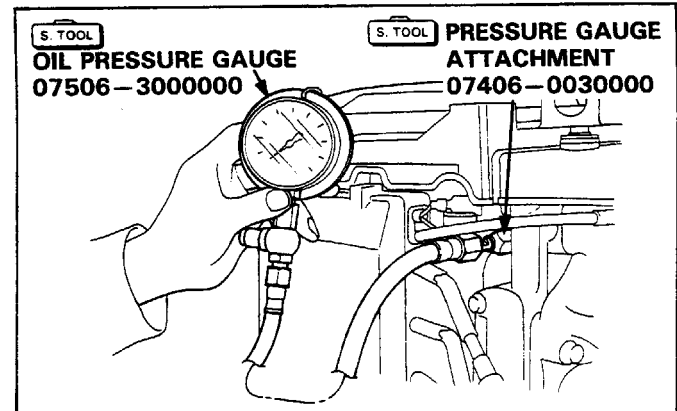

CAUTION


- Tighten the gauge attachment to 9 N·m (0.9 kg-m, 6.5 ft-lb).
- Overtightening will damage the threads.

- 4) Remove the propeller and set the outboard motor in a water tank or apply water to the outboard motor with the rinsing plug, and start the engine.
- 5) Measure the oil pressure when its temperature reaches 80°C (216.0°F)

Oil pressure [Engine speed 950 ± 50 min ⁻¹ (rpm) in neutral]	1.5 kg/cm ² (21.3 psi) min.
---	---

- 6) If the oil pressure is less than the specification, check the oil pump rotors and body for wear.
- 7) Clean the oil pressure switch threads and apply liquid sealant (THREE BOND 1215 or equivalent) to the threads. Tighten the oil pressure switch to the specified torque.


TORQUE: 9 N·m (0.9 kg-m, 6.5 ft-lb)

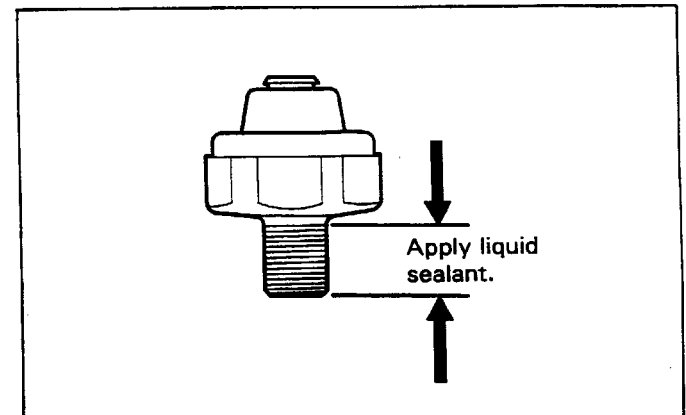


CAUTION

- Be sure to use a torque wrench to tighten the switch.
- Overtightening will damage the starter case.


E. ALERT SYSTEM

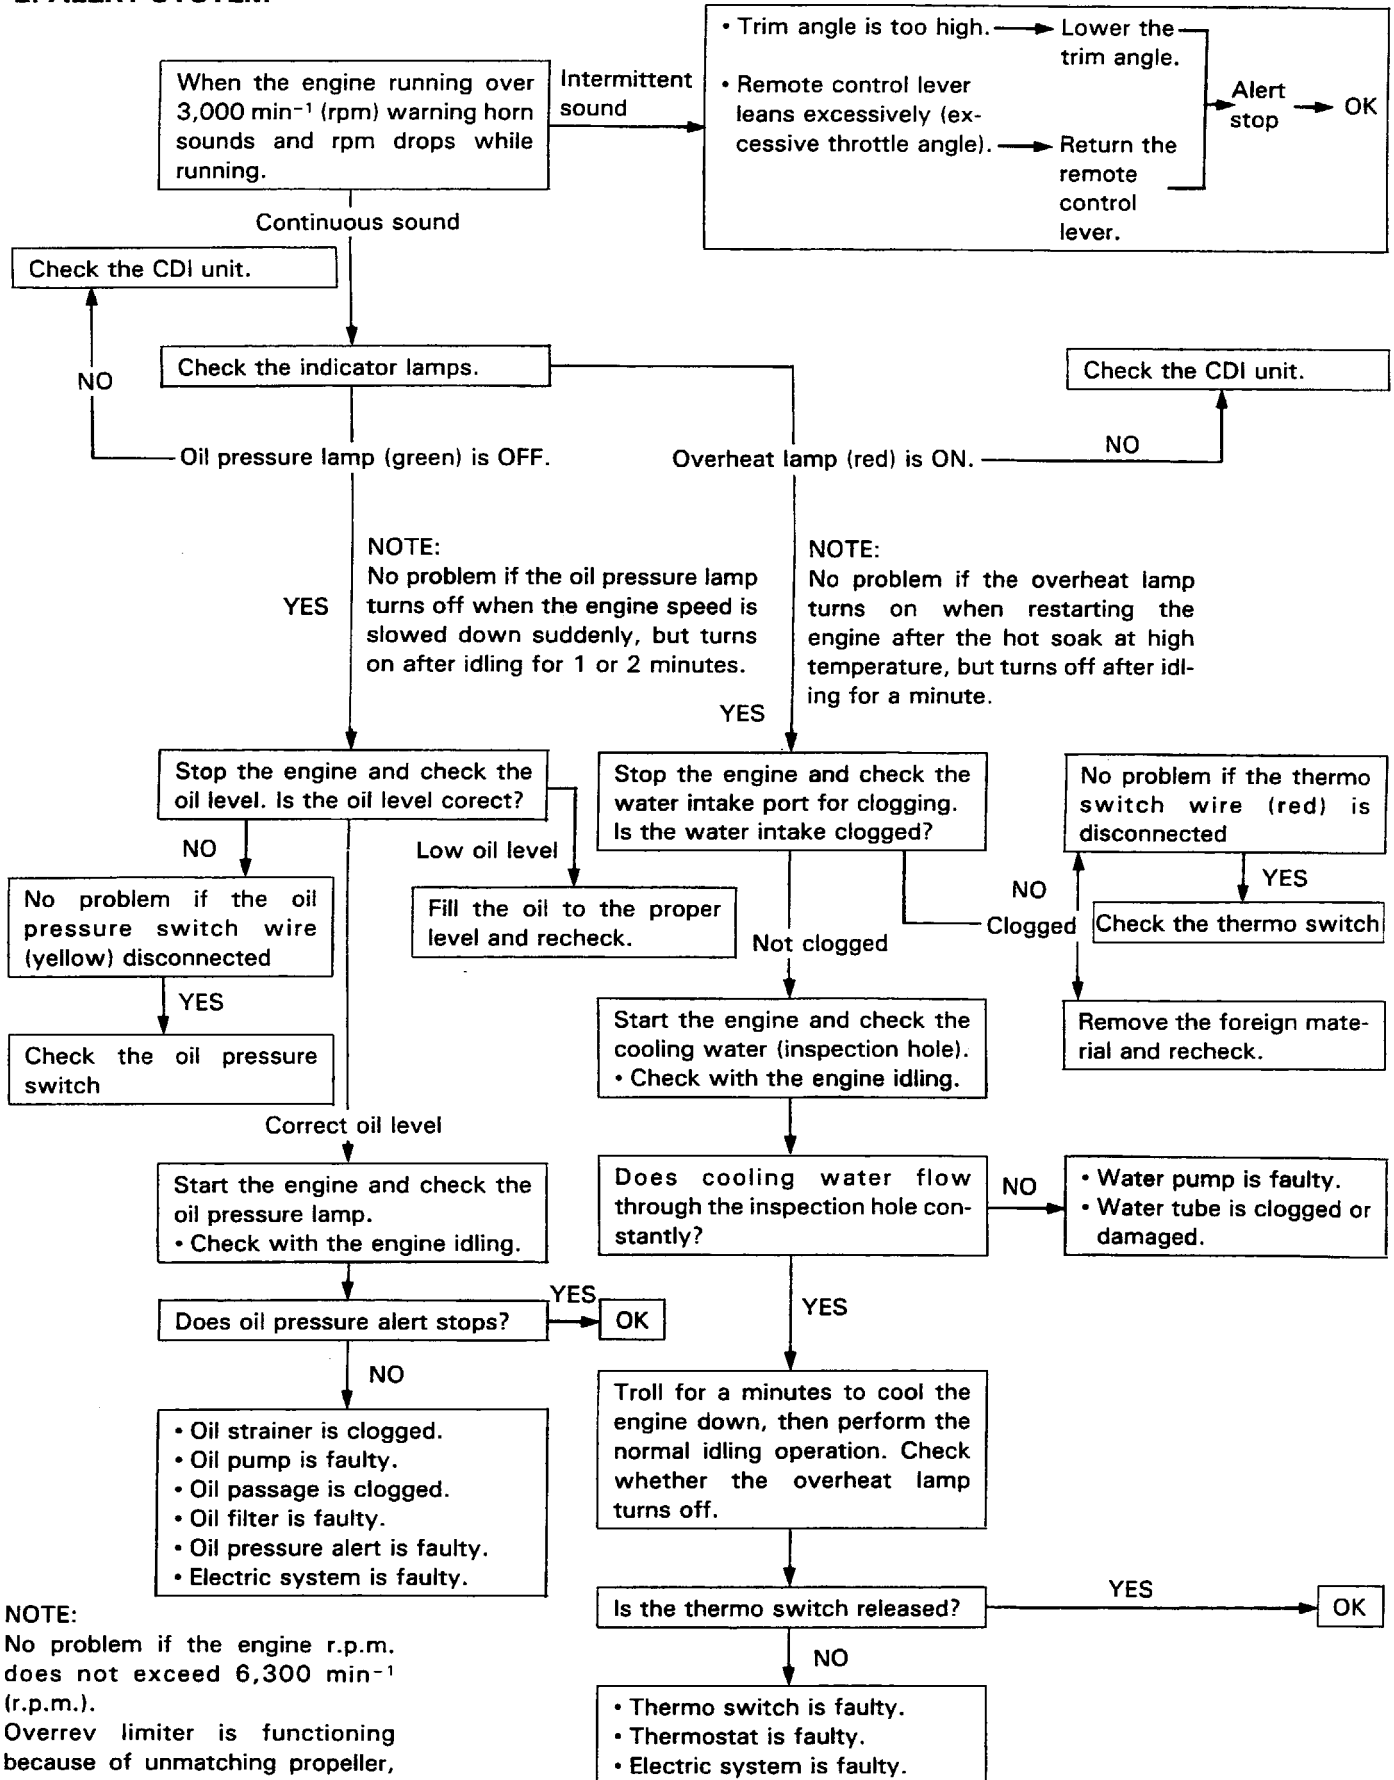


F. SHIFT LEVER

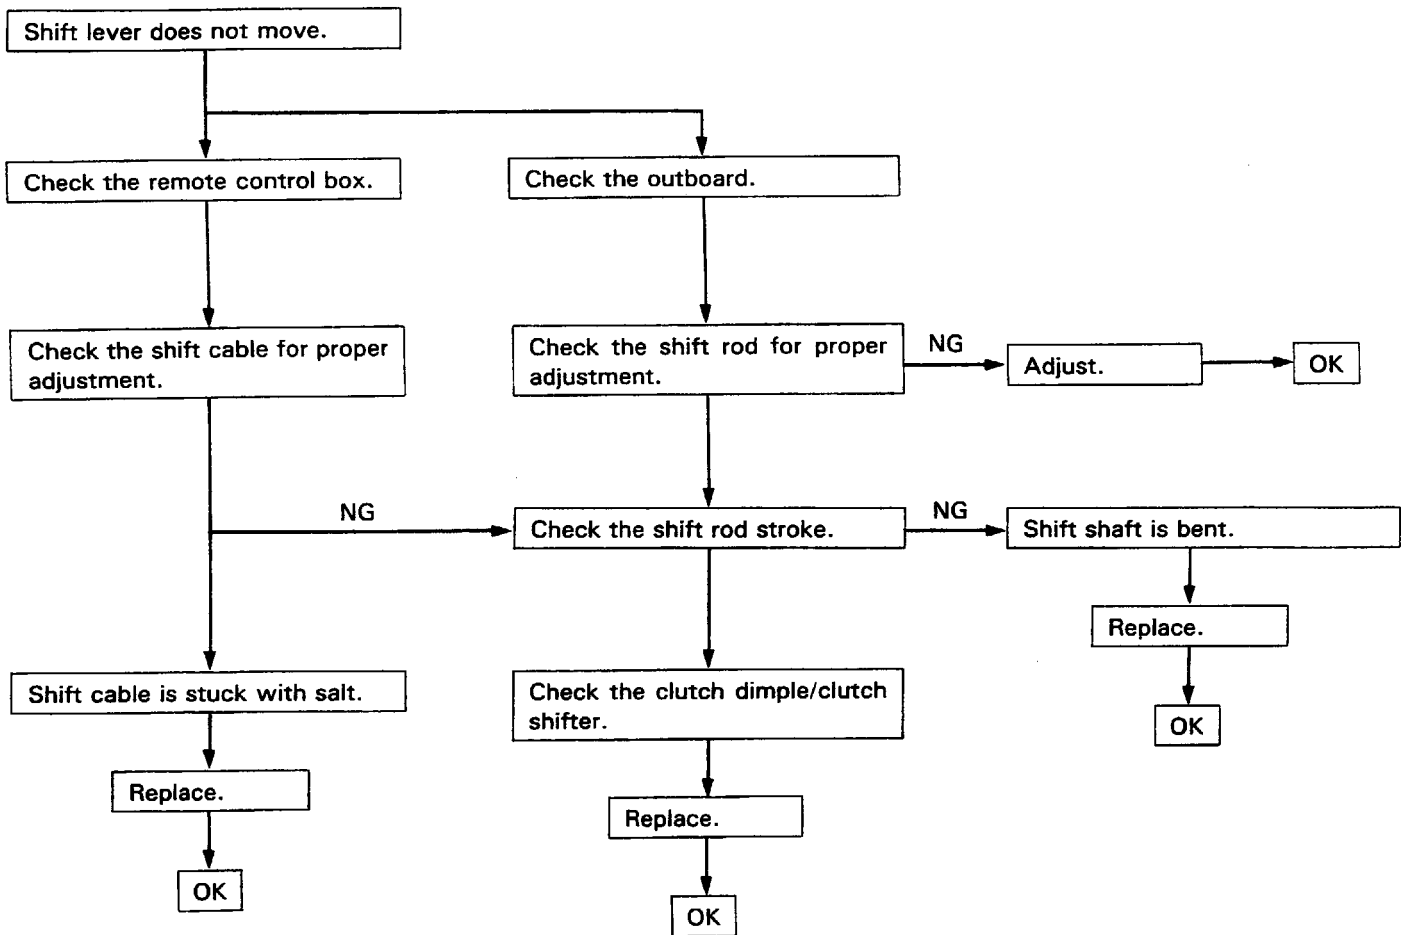


G. ASSIST TILT LOAD (Gas assisted type)

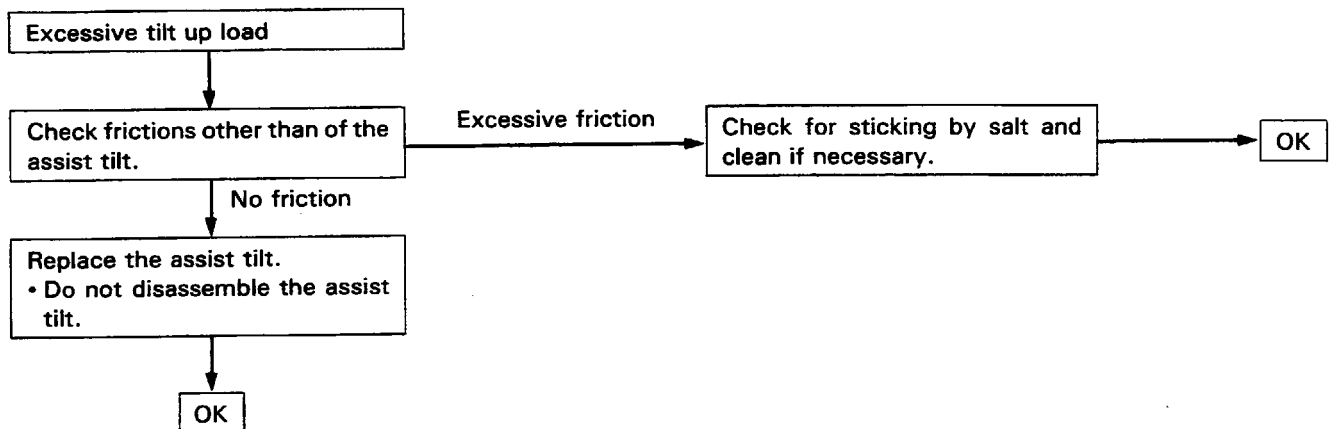


H. DOES NOT HOLD THE ASSIST TILT (Gas assisted type)

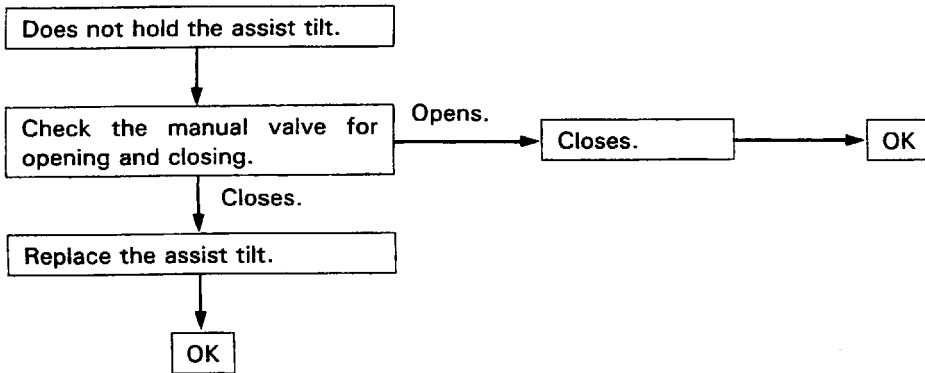

I. POWER TRIM & TILT DOES NOT MOVE (Power trim & tilt type)

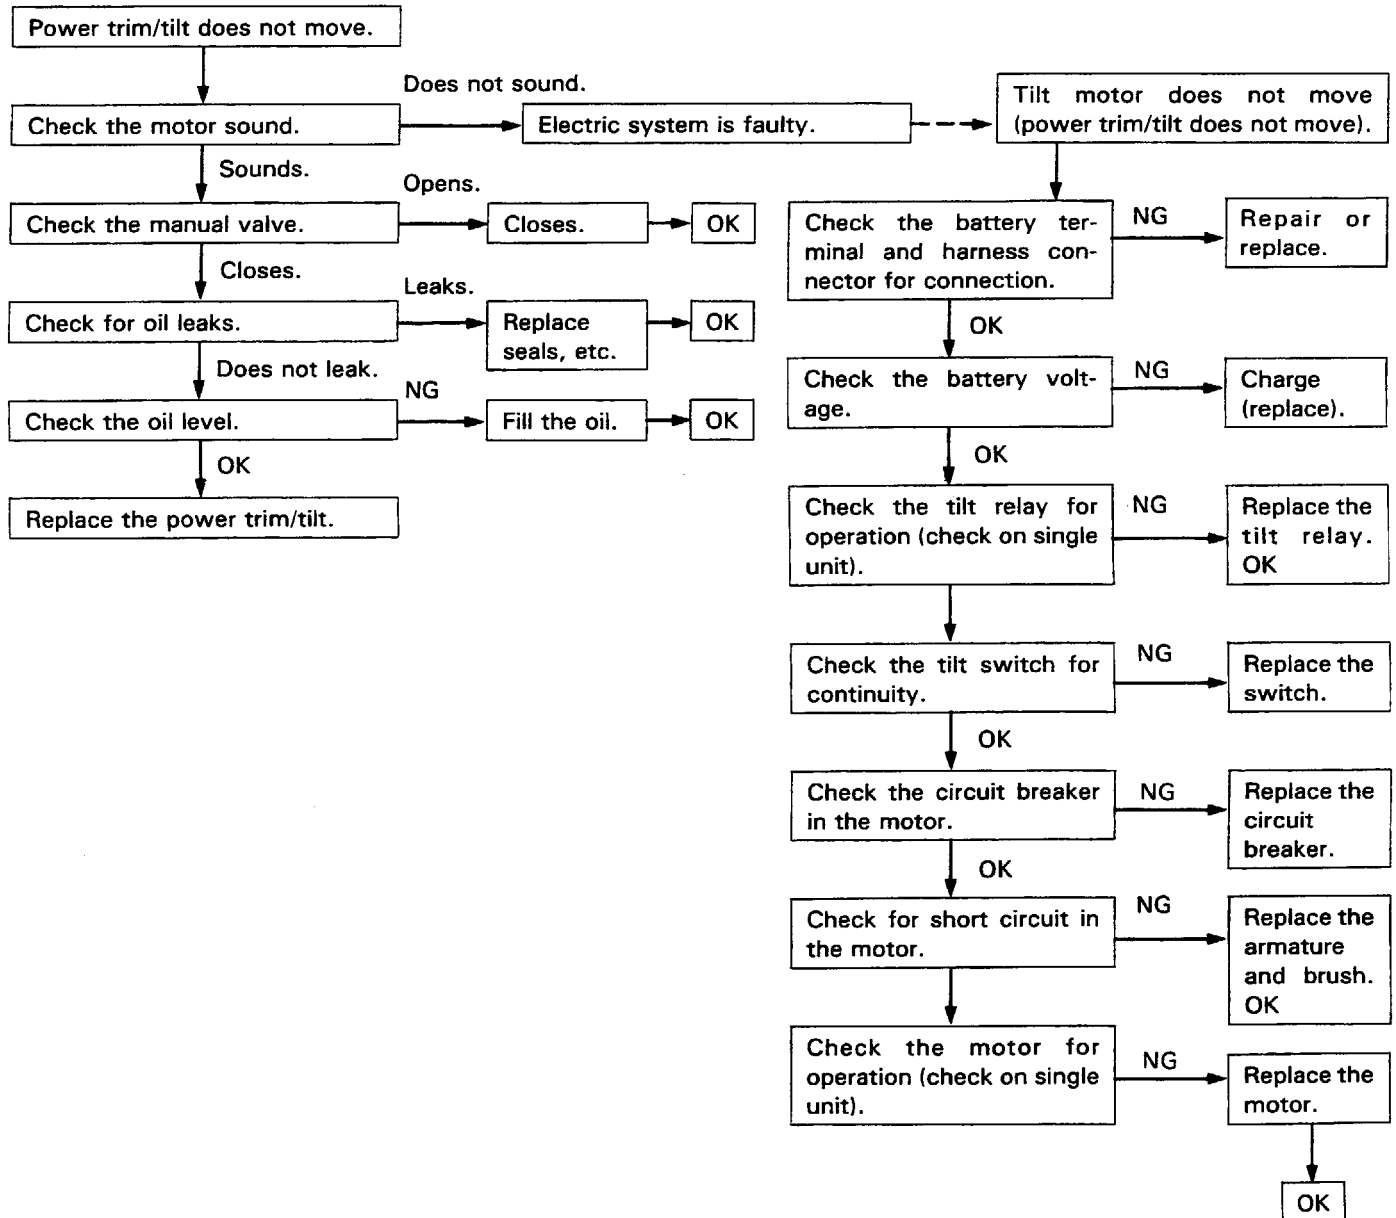


J. DOES NOT HOLD THE POWER TRIM & TILT (Power trim & tilt type)

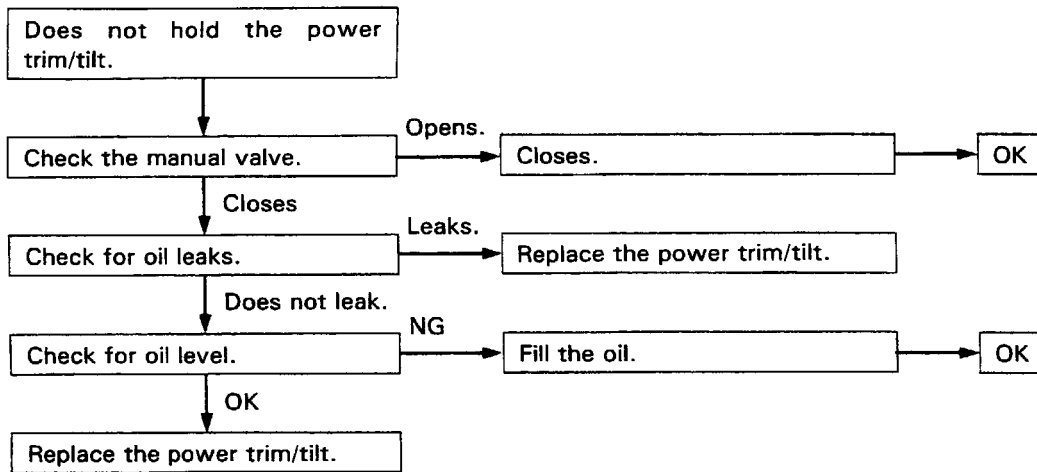


CABLE/HARNESS ROUTING



(Remote control/Power trim & till type)

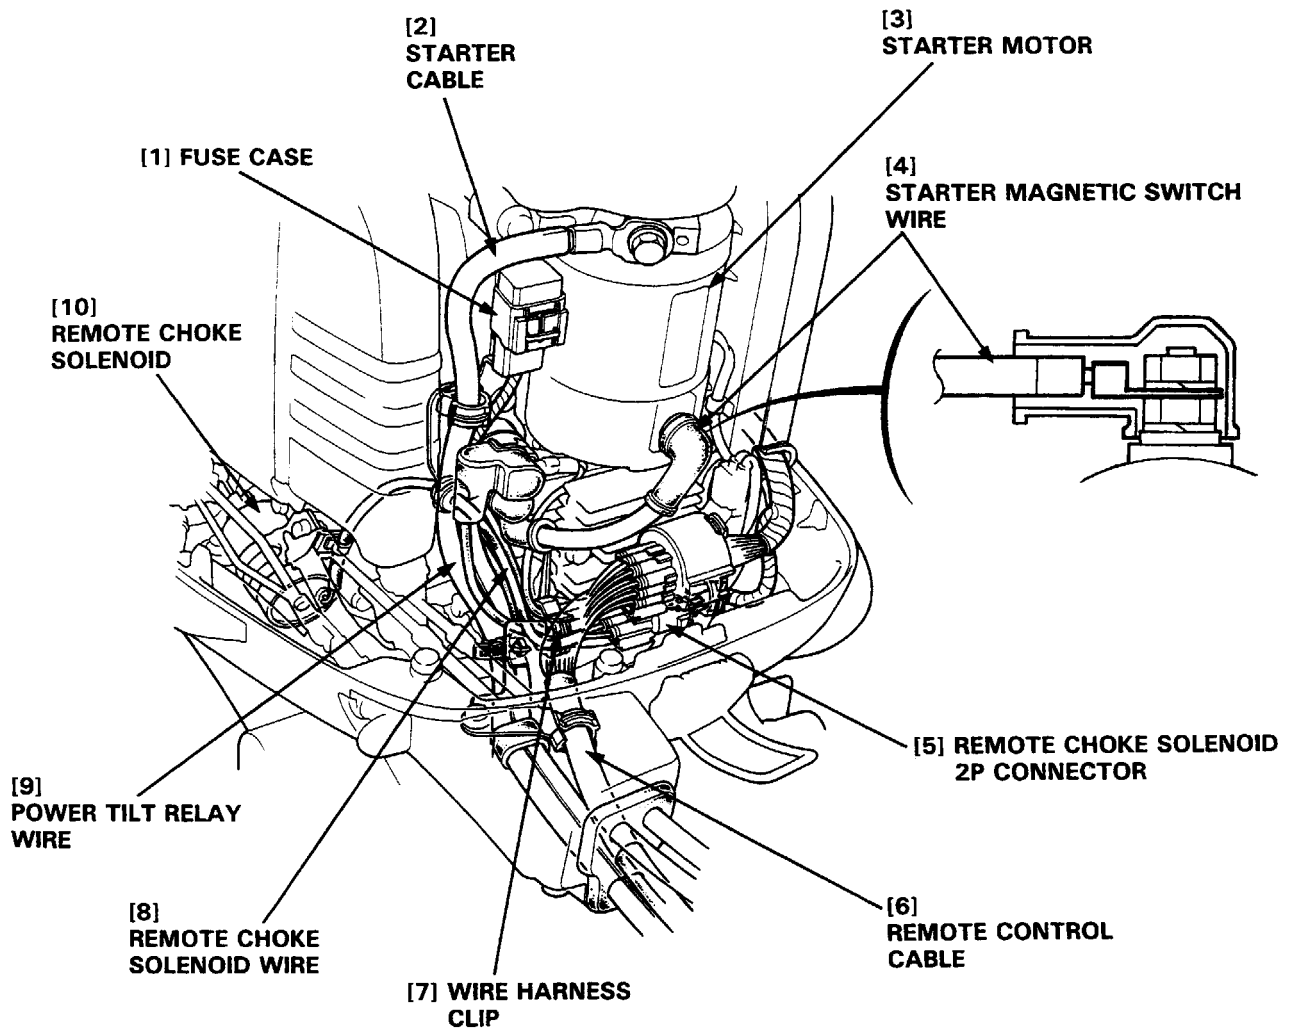



(Remote control/Power trim & tilt type)

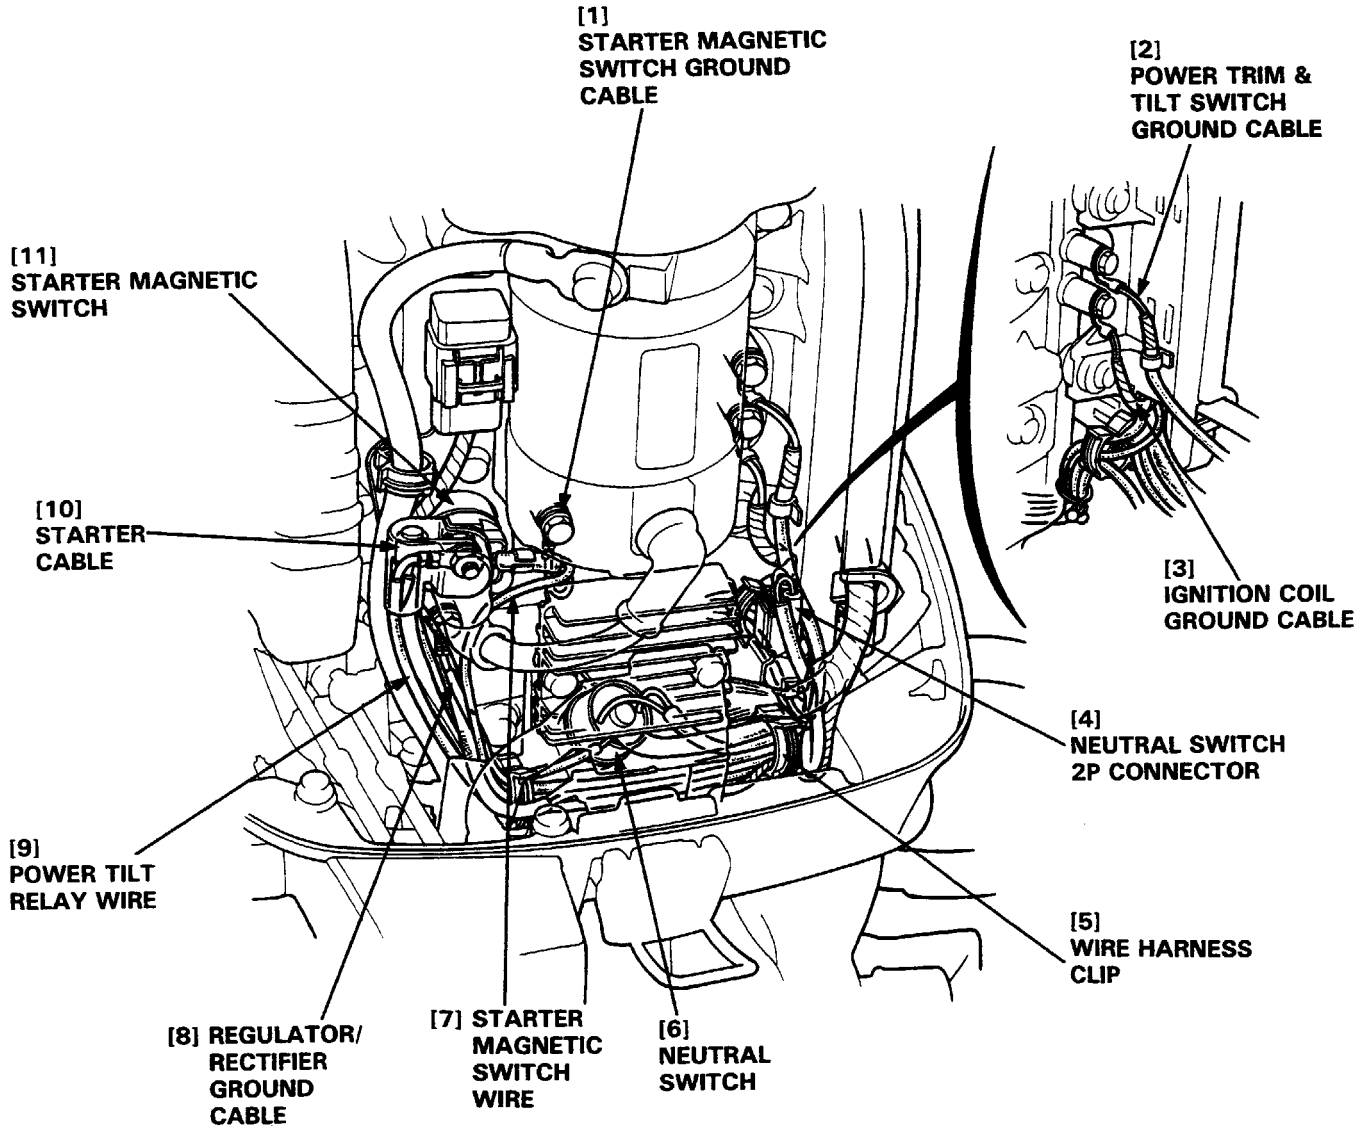


(Remote control/Power trim & tilt type)

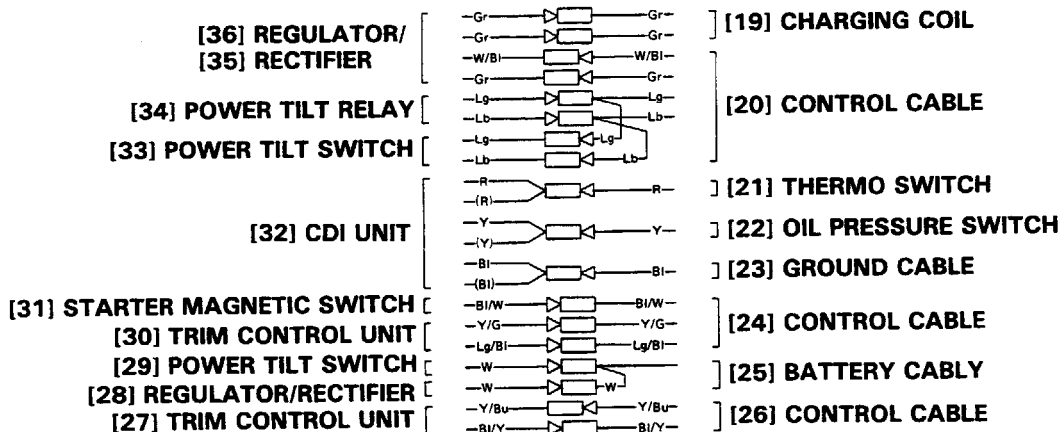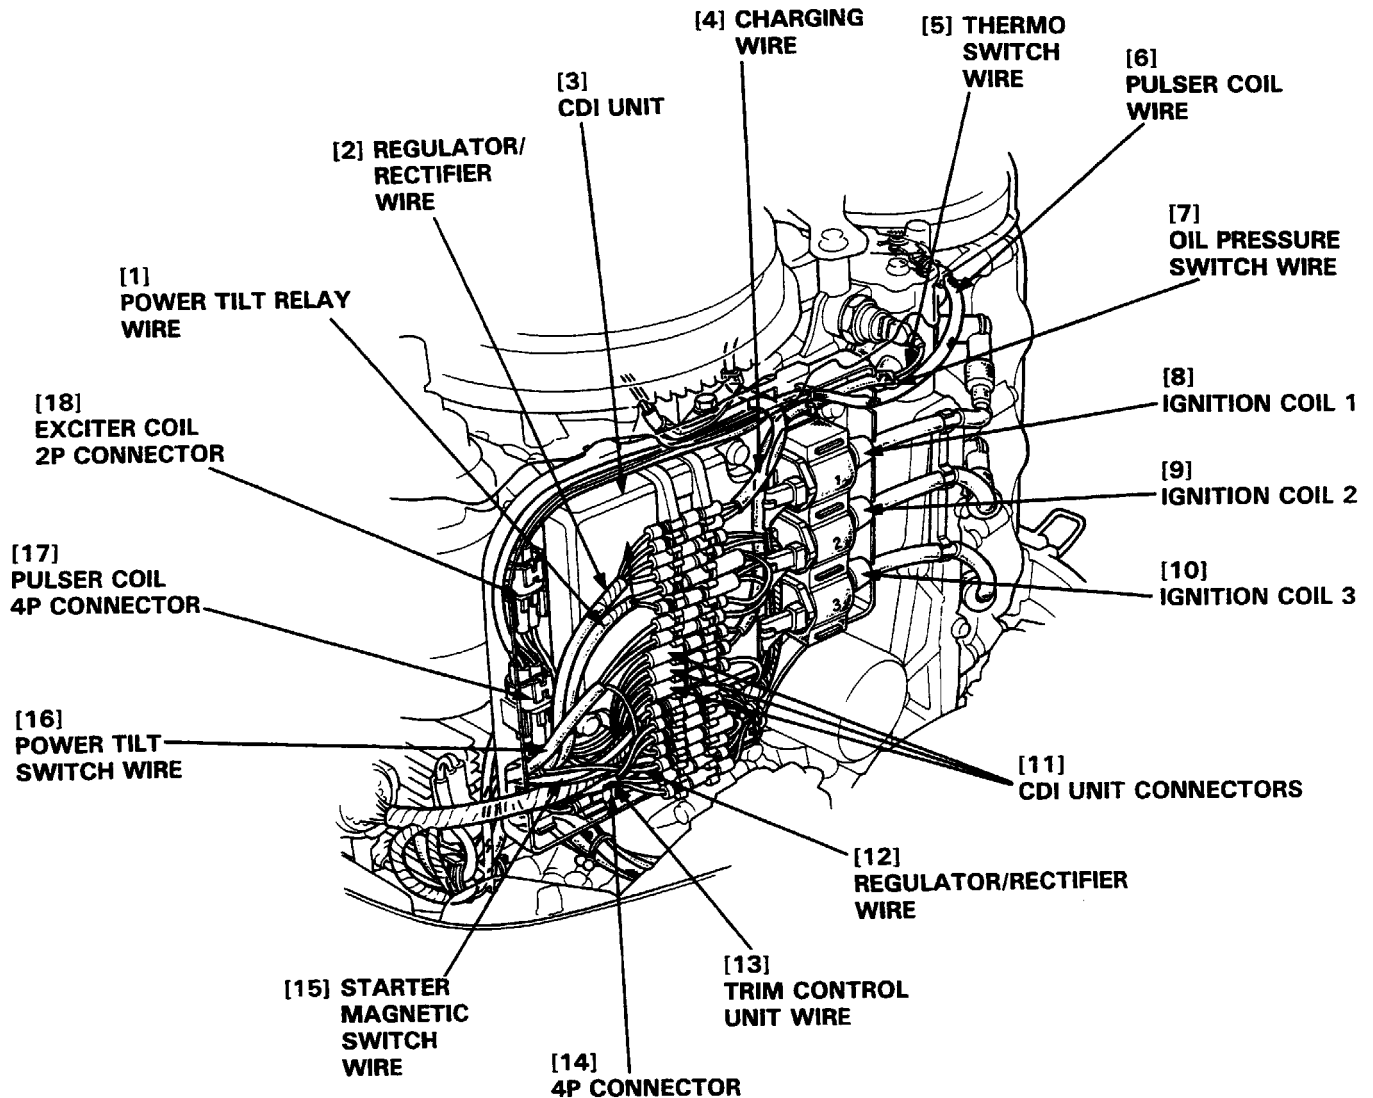


(Remote control/Power trim & tilt type)

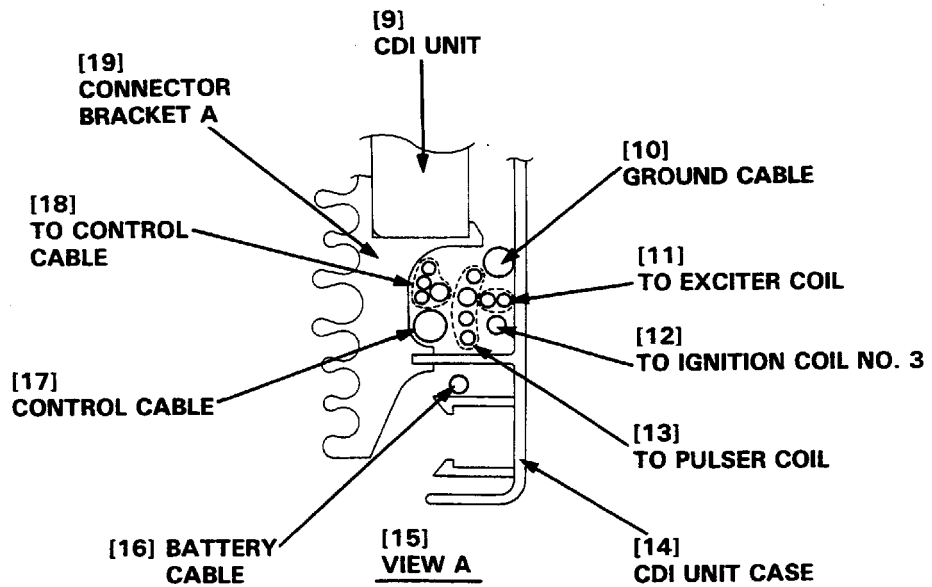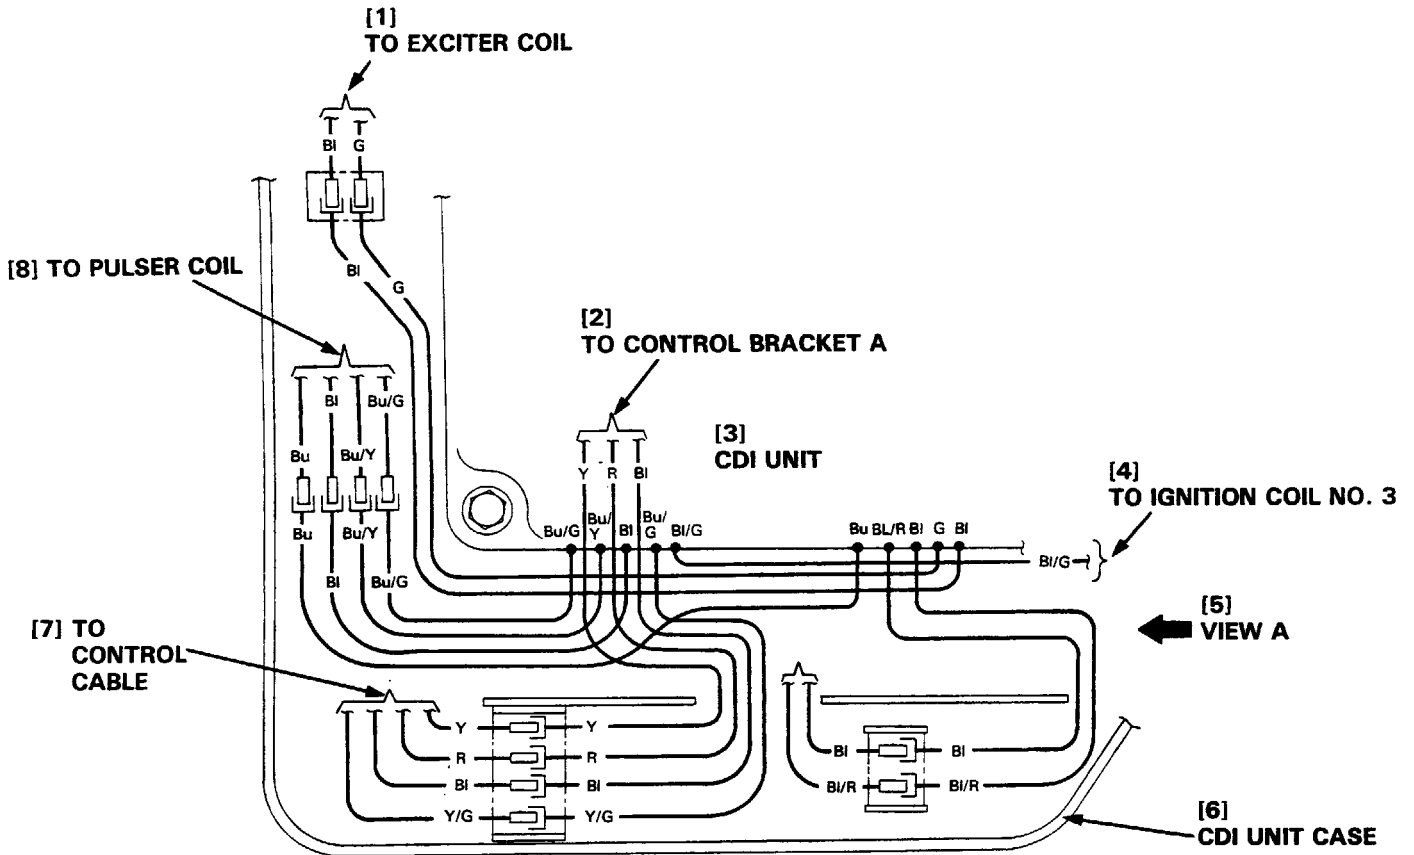


(Remote control/Gas assisted type)

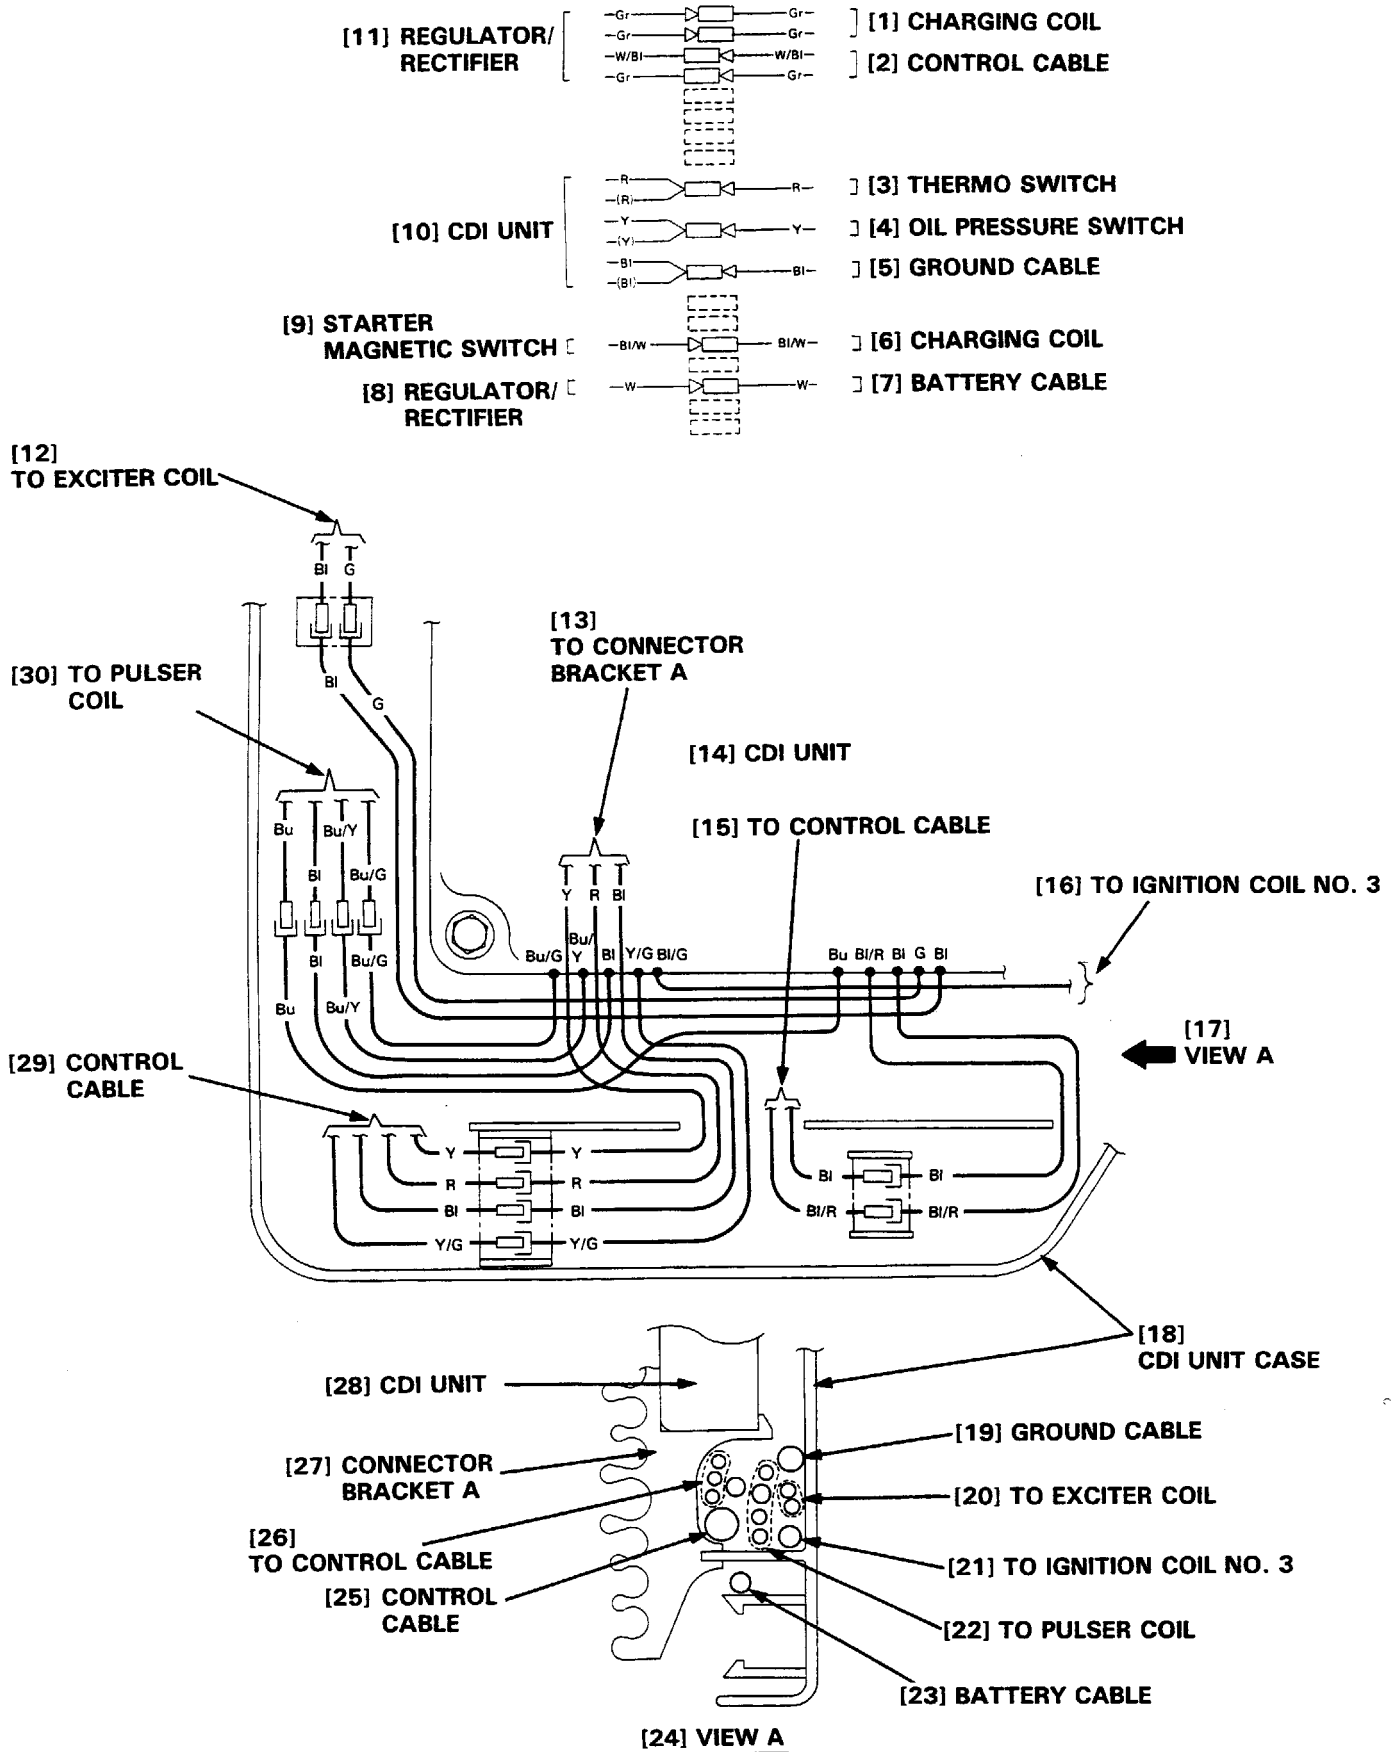



(Remote control/Power trim & tilt type)

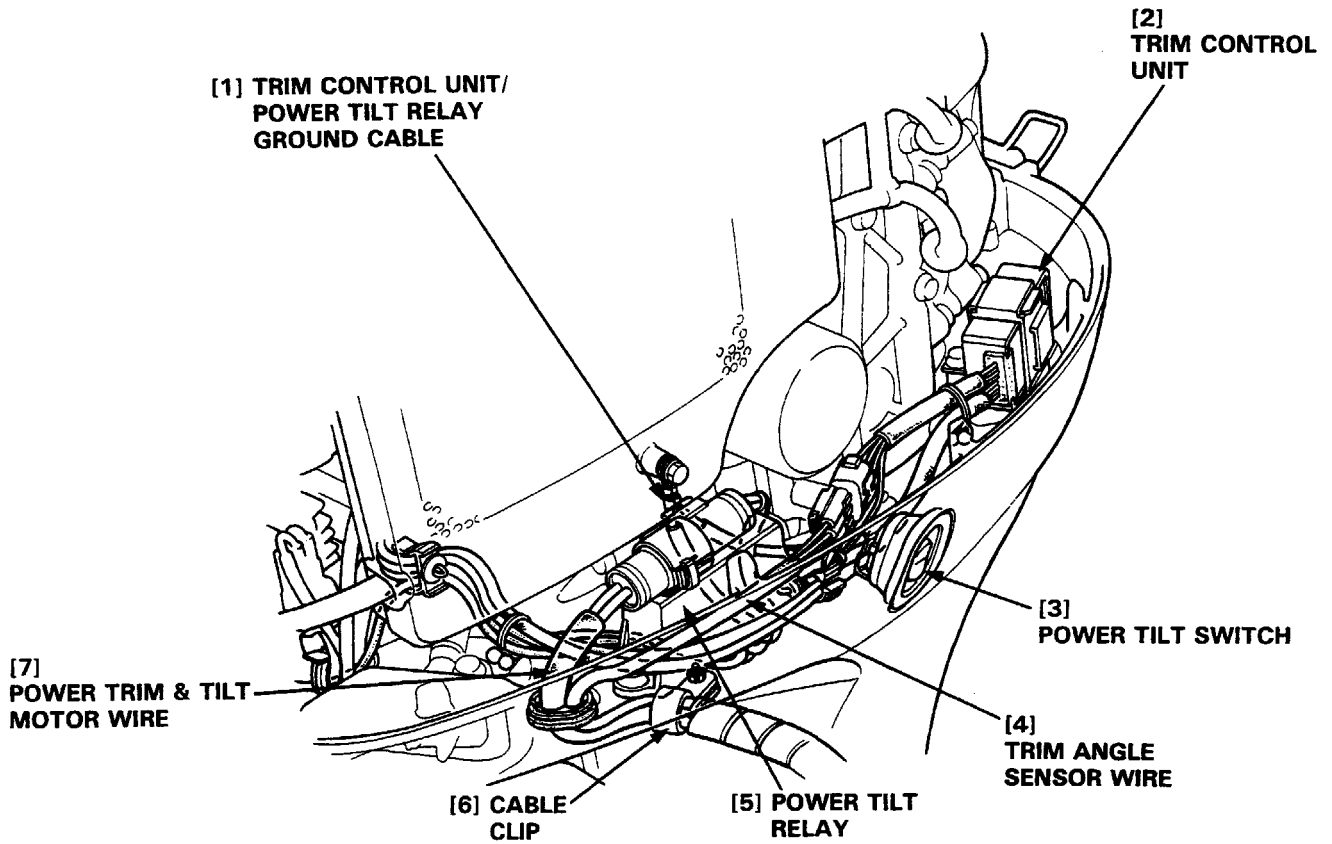



(Power trim & tilt type)

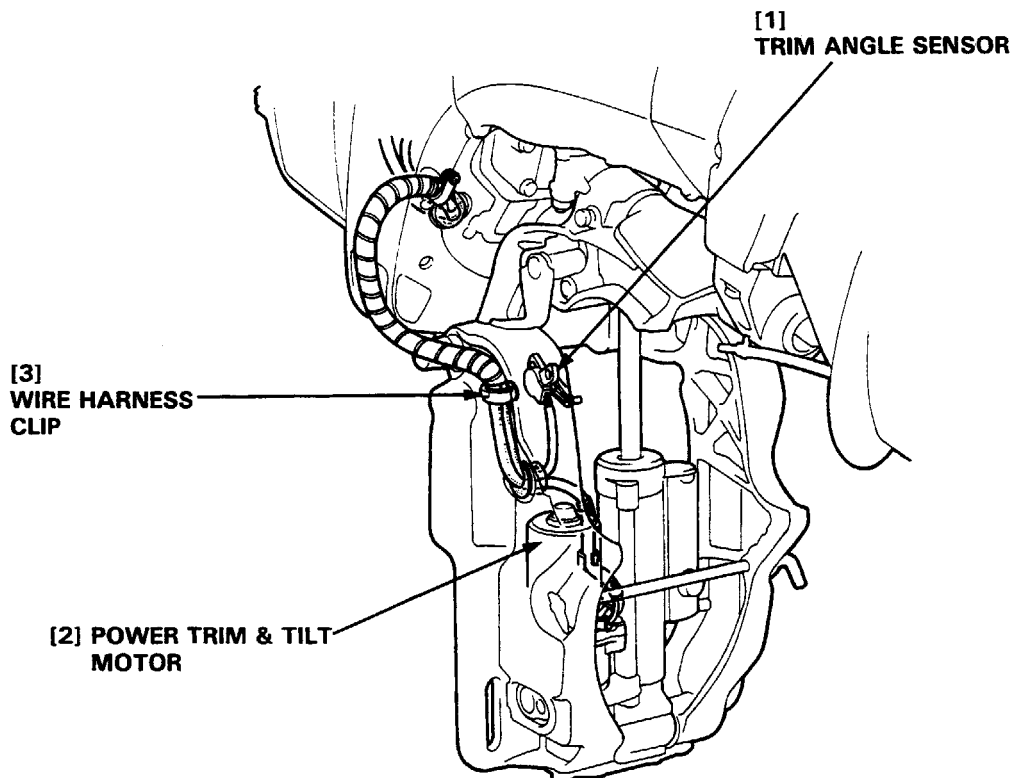


(Tiller handle type)

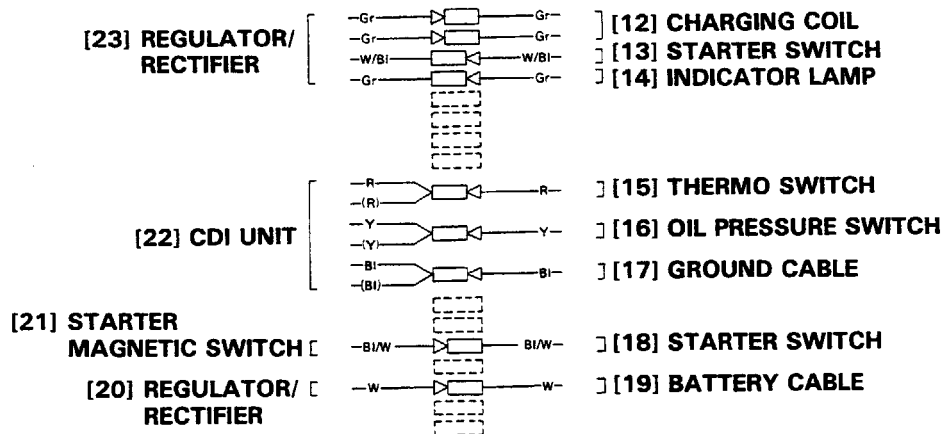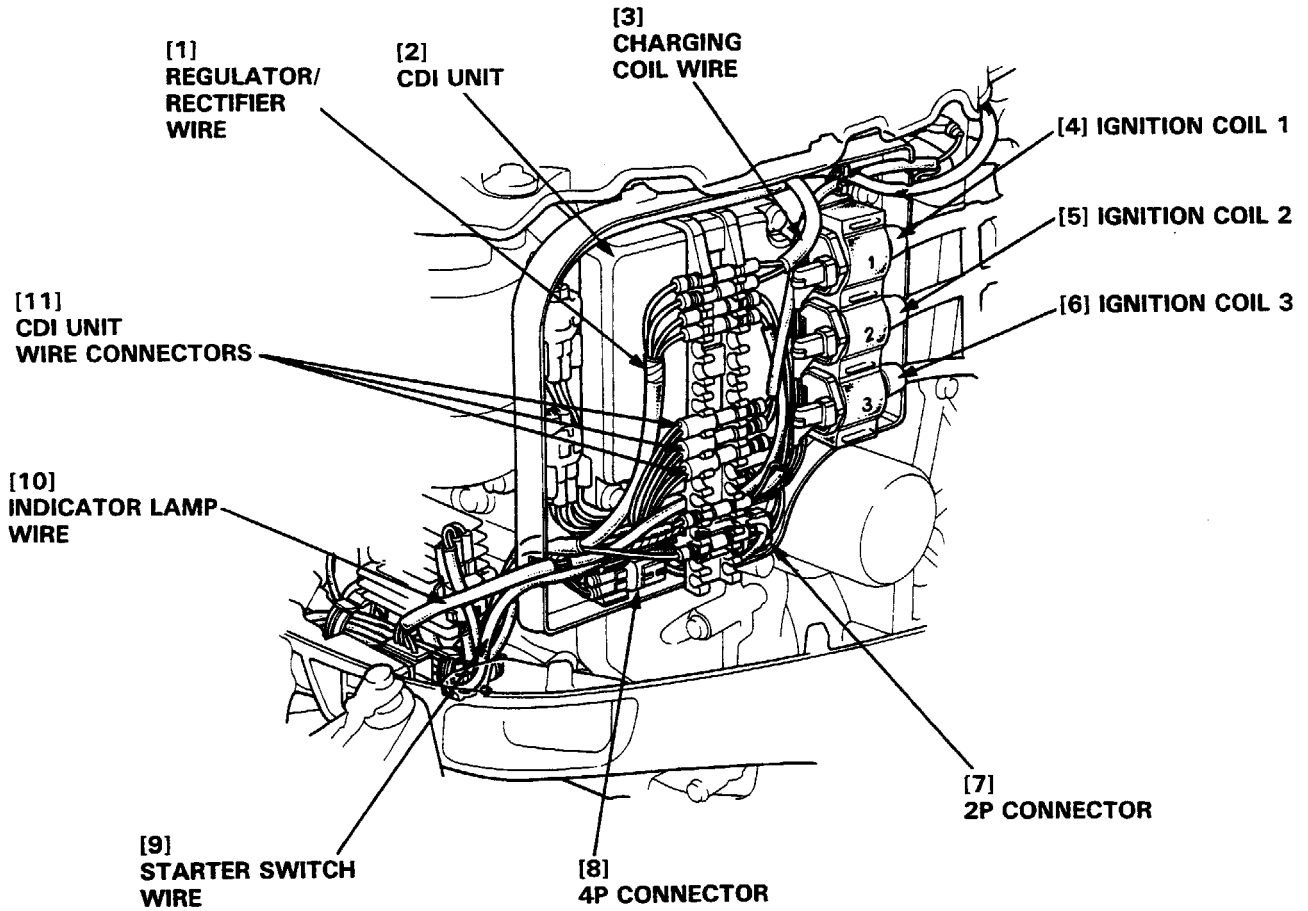


(Tiller handle type)

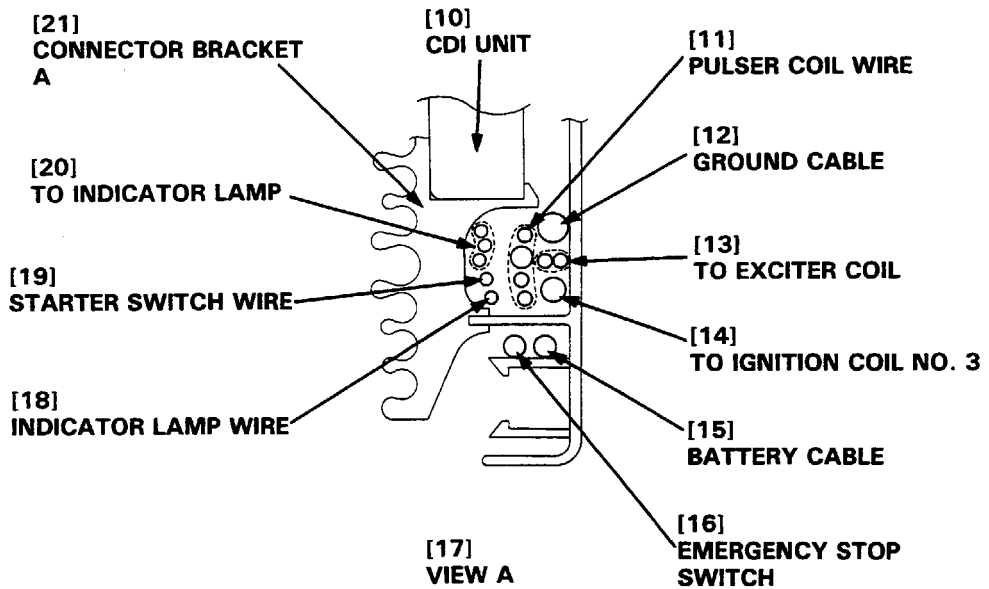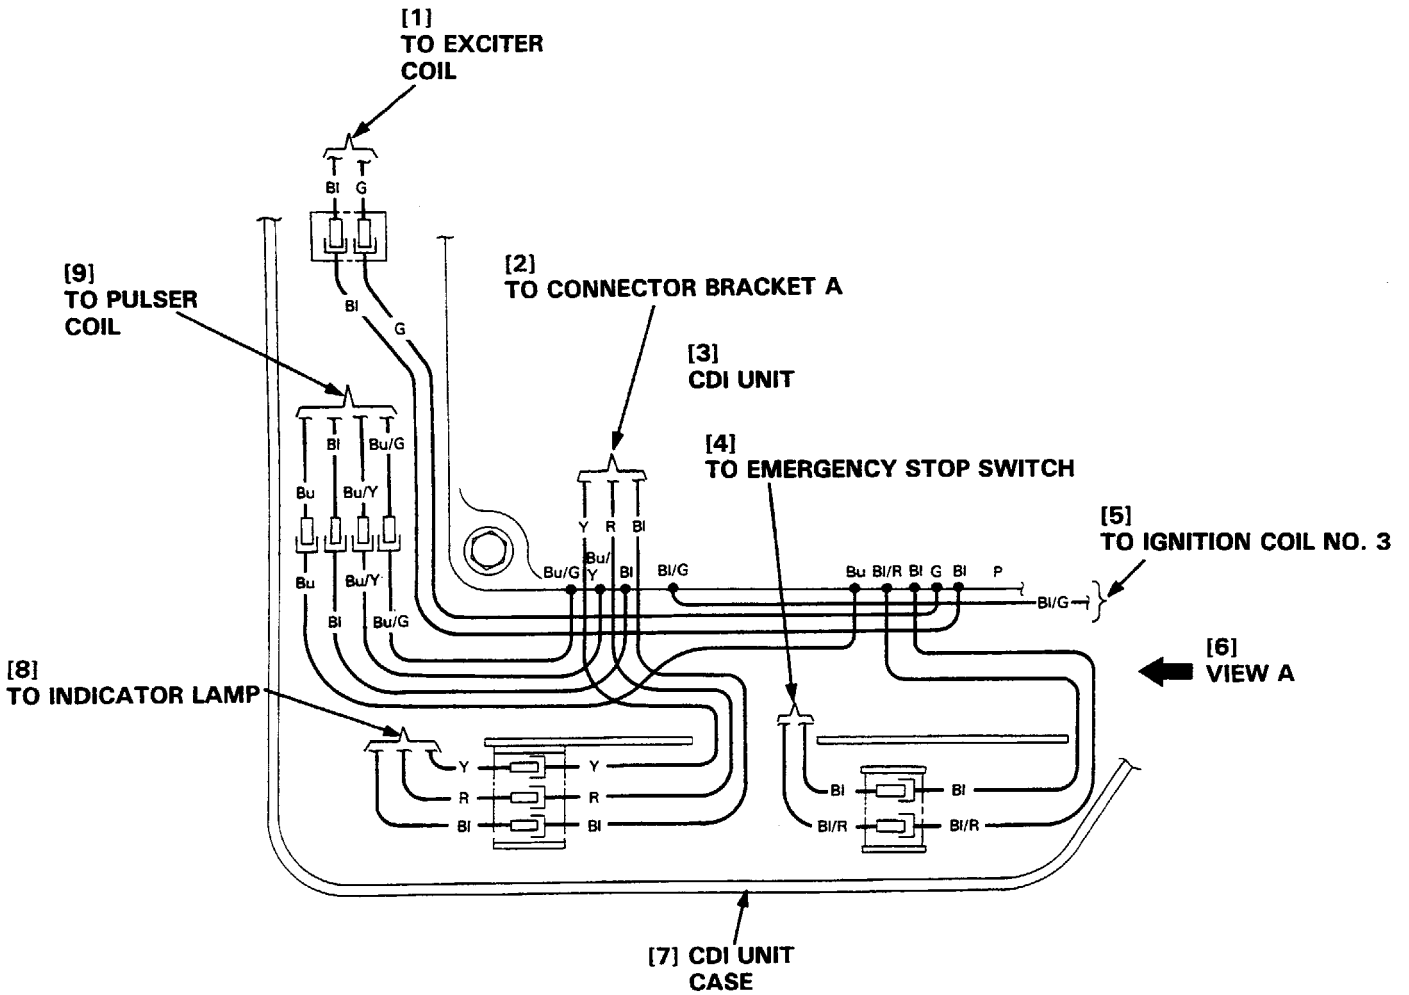

(Tiller handle type)

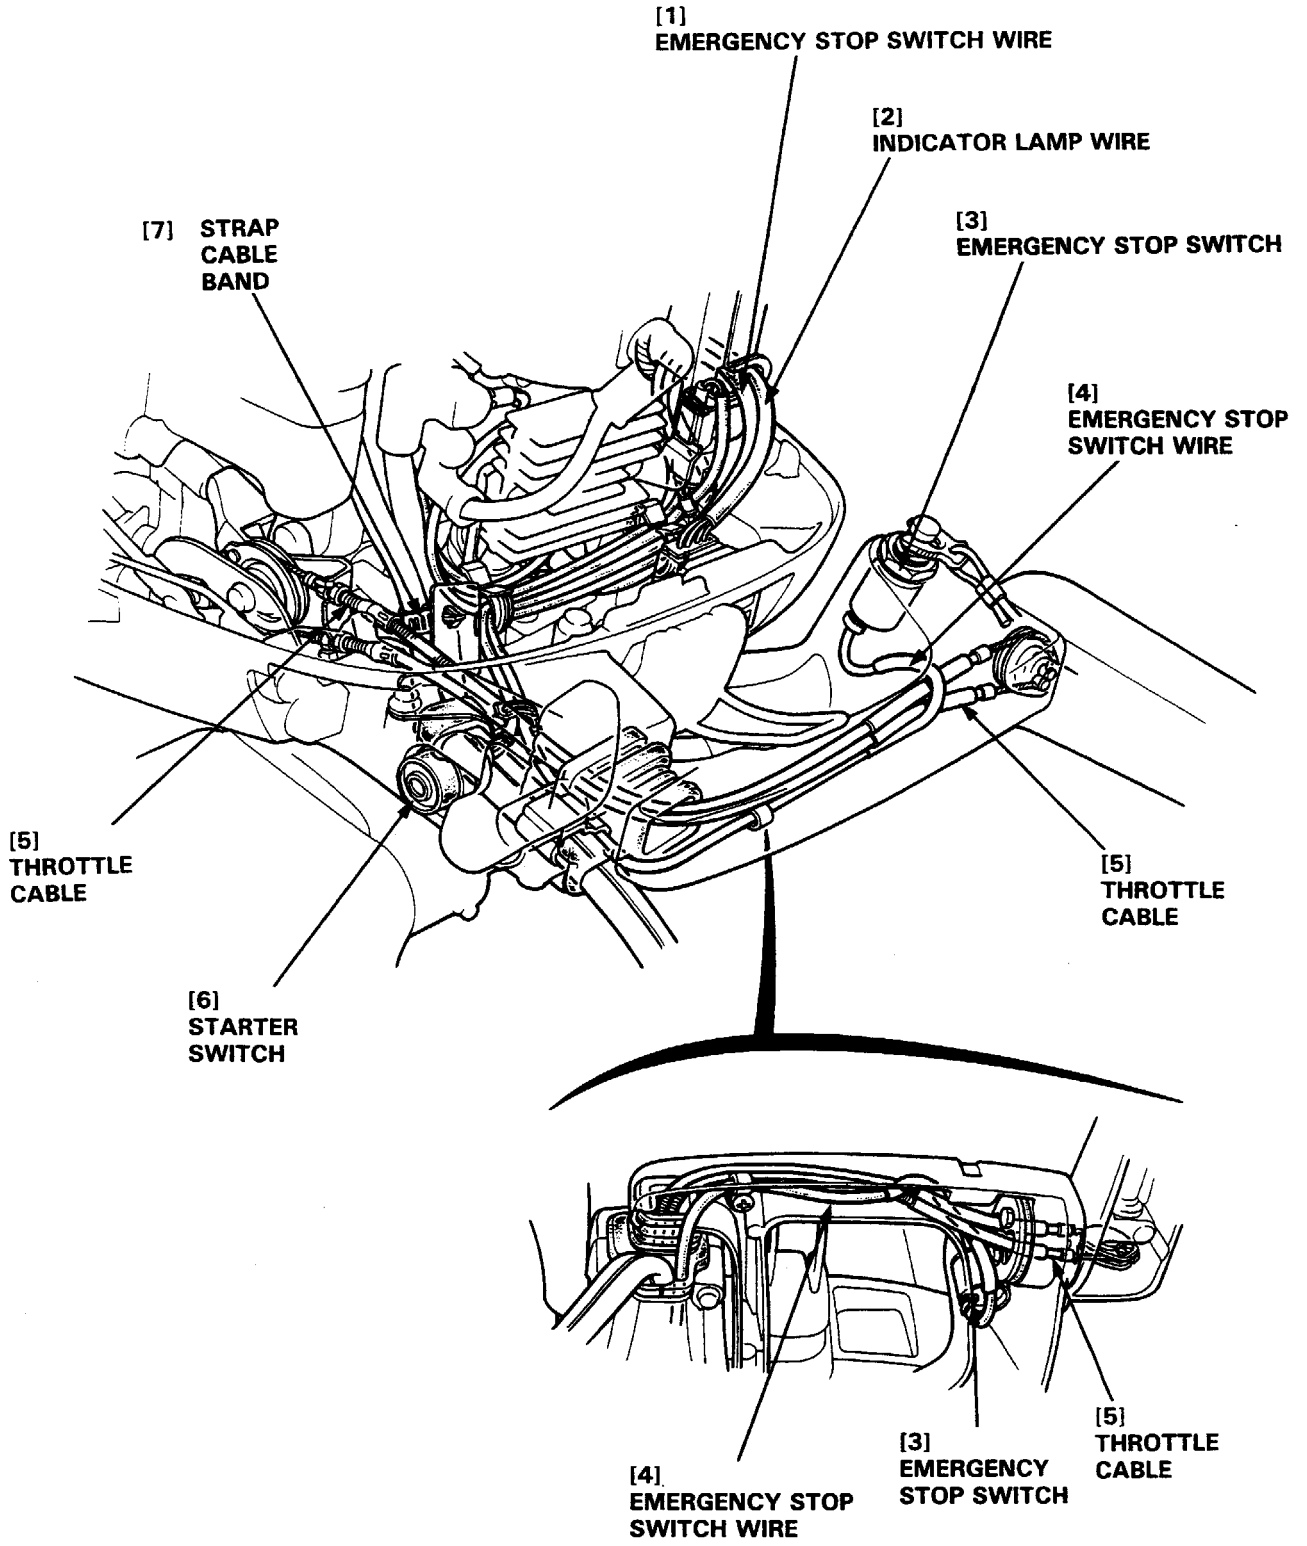


(Remote control type)

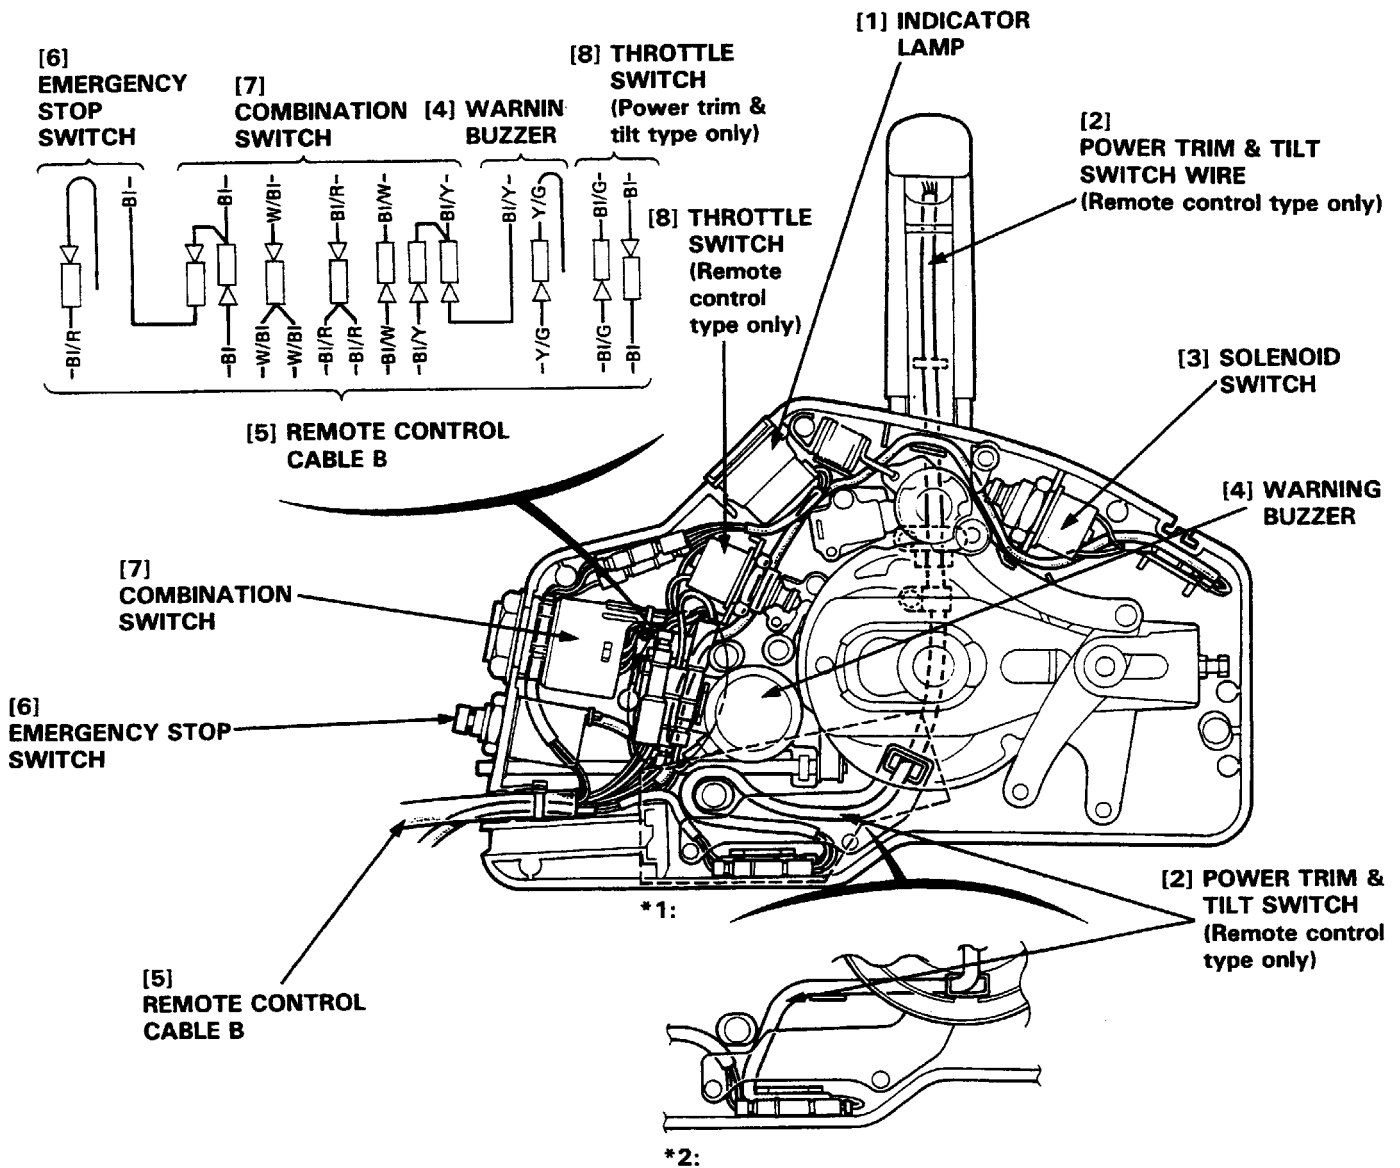

*1: Power trim/tilt switch wire routing with remote control lever set as shown by A.


*2: Power trim/tilt switch wire routing with remote control lever set as shown by B.

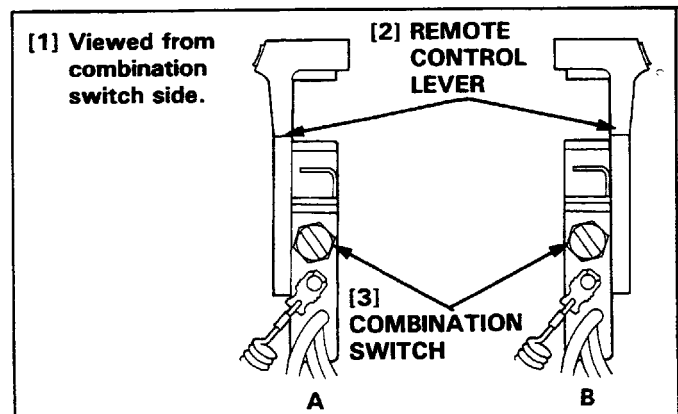

TUBE ROUTING

(BF35A)

[1] 3.5 x 70 mm TUBE

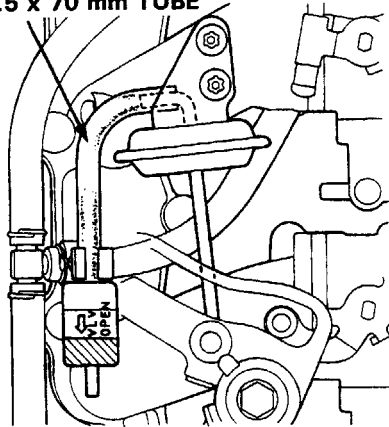

[4] 3.5 x 45 mm FUEL TUBE (3)
(BF45A only)

[3] INSTALL
PIPE
(BF45A only)

[5] BREATHER TUBE

[2] 5.3 x 110 mm FUEL
TUBE

[6] 5.3 x 170 mm FUEL
TUBE

[7] 3.5 x 60 mm FUEL TUBE
(BF45A only)

[8] FUEL CONNECTOR B

[20] FUEL TUBE D
(BF45A only)

[9] FUEL TUBE

[19] 5.3 x 65 mm
FUEL TUBE

[10] DASHPOT CHECK
VALVE

[18] FUEL TUBE C

[11] 4.5 x 125 mm TUBE

[17] FUEL PUMP

[12] FUEL FILTER

[16] OIL TUBE






[13] FUEL TUBE B


[15] 3.5 x 155 mm
TUBE

[14] 3.5 x 190 mm TUBE


LUBRICATION

Wipe the outside of the engine with a cloth dipped in oil.
Apply marine anticorrosion grease to the following parts:

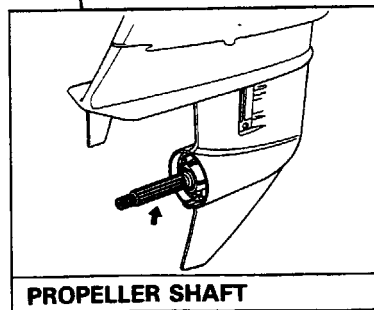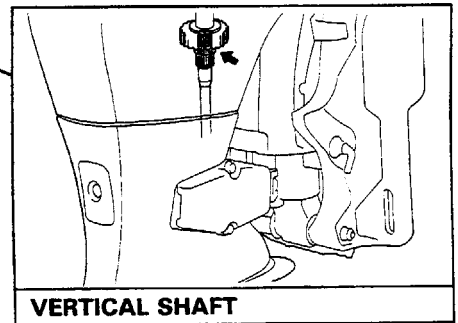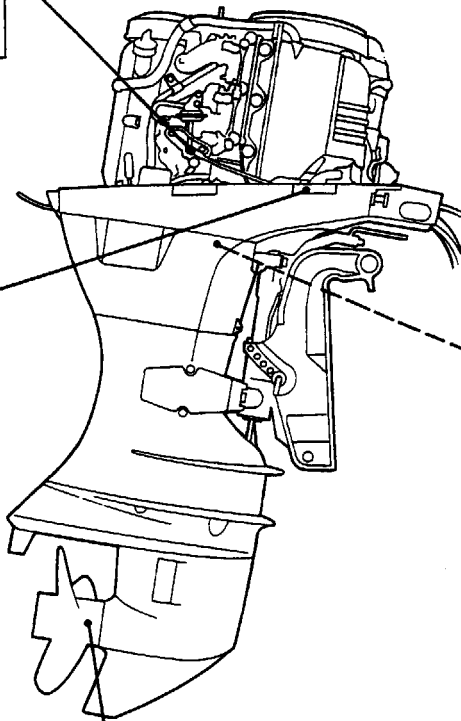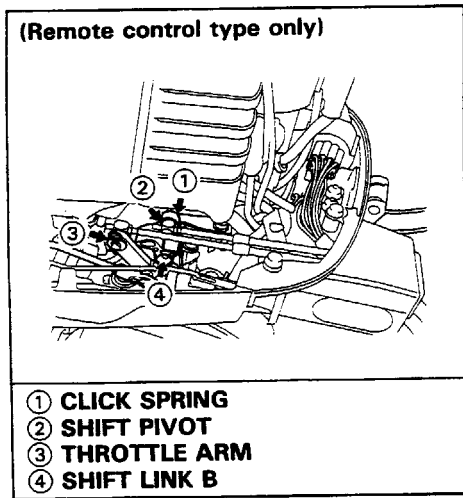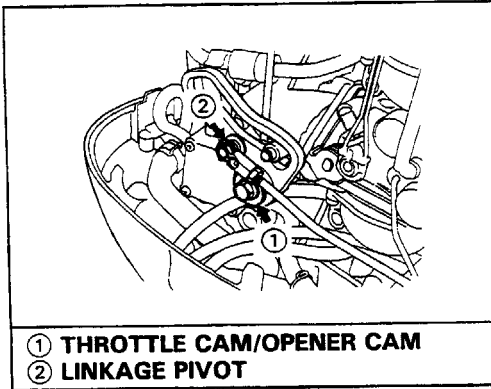


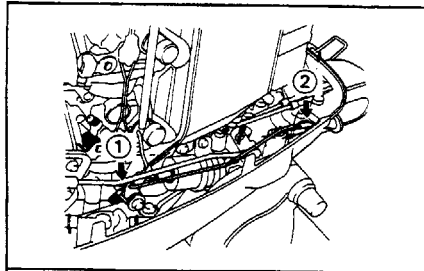

- ① CHOKE ARM A, B
- ② CHOKE KNOB

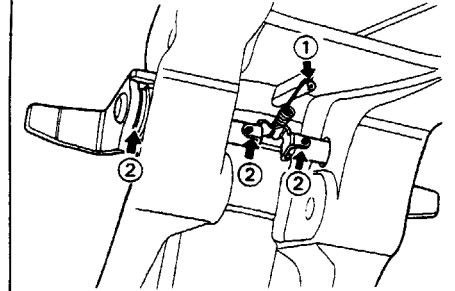


- ① TILT STOPPER SPRING
- ② TILT STOPPER

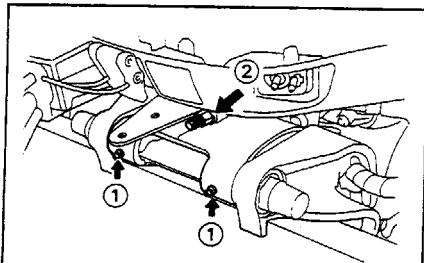


- ① TILTING SHAFT
- ② 10 mm SELF-LOCKING NUT
(Remote control type only)


(Power trim & tilt/Gas assisted type only)

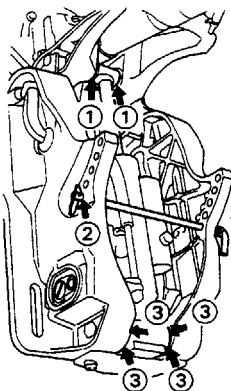







- ① CYLINDER UPPER PIN
- ② ADJUSTING ROD
- ③ LOWER CYLINDER BUSHING

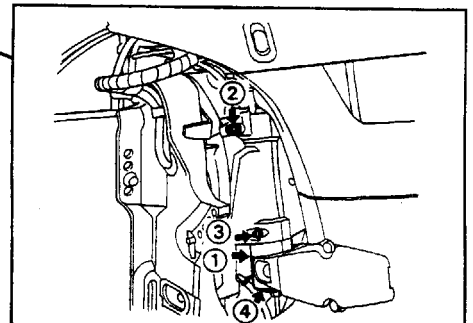

- ① MOUNT FRAME
- ② 8 x 20 mm SPECIAL BOLT
- ③ SWIVEL CASE INSIDE
- ④ LOWER MOUNT CENTER HOUSING

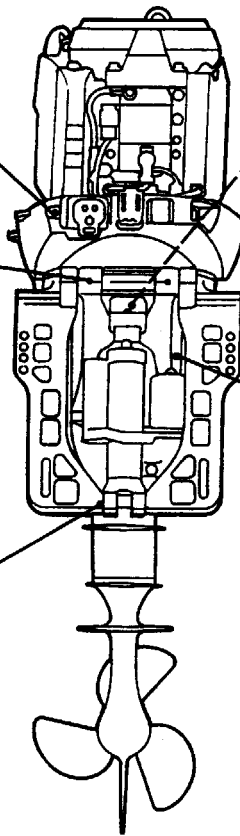

(Tiller handle type only)

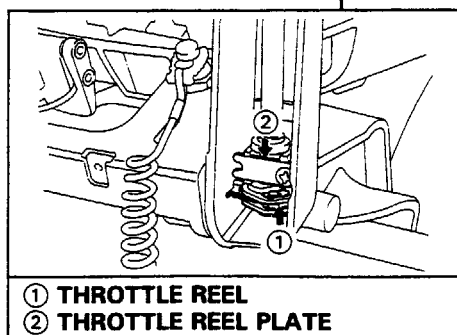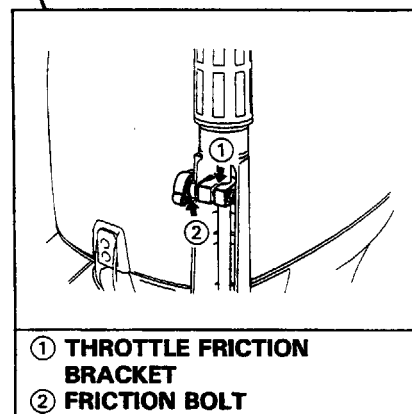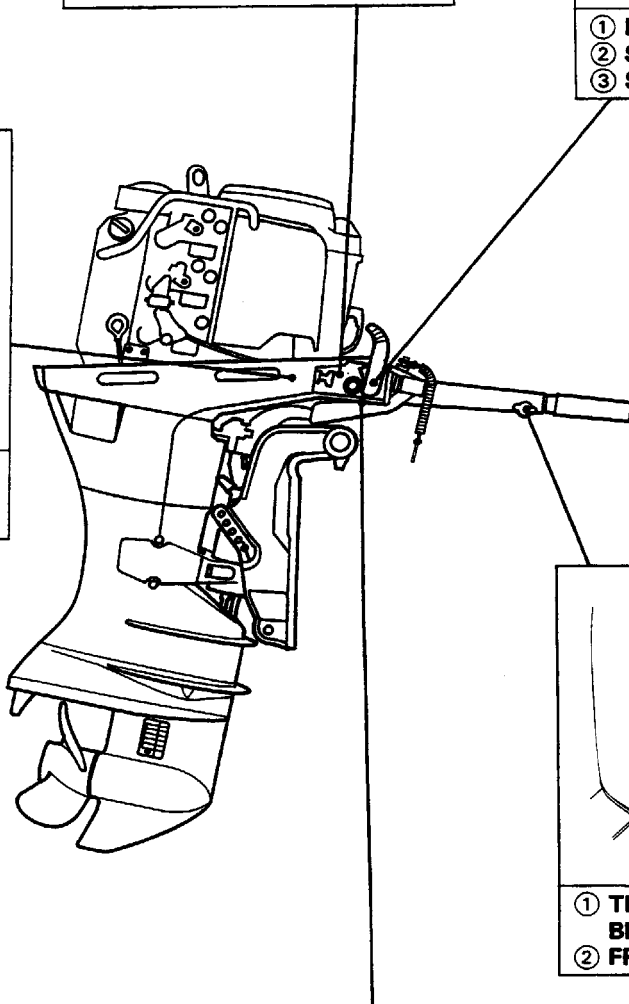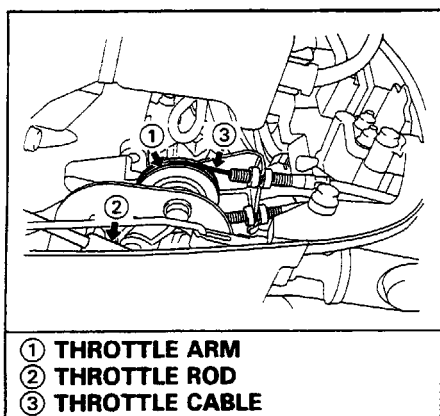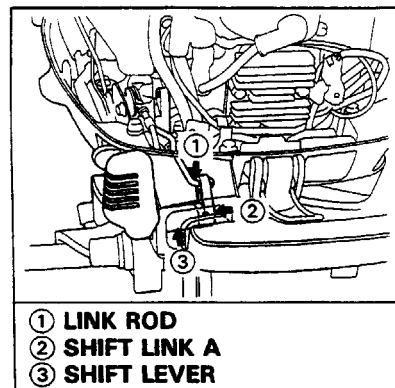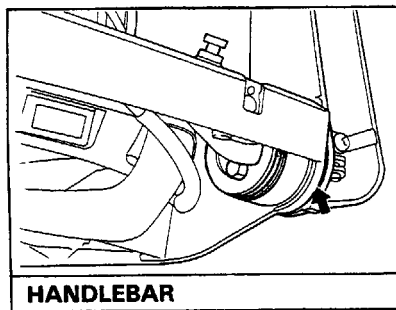

MAINTENANCE SCHEDULE

REGULAR SERVICE PERIOD (2) Perform at every indicated month or operating hour inter- val, whichever comes first.		EACH USE	FIRST MONTH OR 20 HRS	EVERY 6 MONTHS OR 100 HRS	EVERY YEAR OR 200 HRS	EVERY 2 YEARS OR 400 HRS	Refer to page
ITEM							
Engine oil	Check level	○					3-2
	Change		○		○		
Gear case oil	Check level and Check for water contamination			○			3-4
	Change		○		○		
Engine oil filter	Change					○	3-3
Timing belt	Check-Readjust				○		3-16
Carburetor linkage	Check		○	○			3-11
	Idling		○	○			3-8
Valve clearance	Check-Readjust		○		○		3-5
Spark plugs	Check-clean		○		○		3-4
Propeller and split pin	Check	○					11-2
	(Replace if necessary)			○			
Lubrication	Grease		○(1)	○(1)			2-33
Fuel tank and tank filter	Clean				○		3-7
Fuel strainer	Check			○			3-8
	Change					○	
Thermostat	Check				○		8-3
Fuel	Check	○					5-12
	(Replace if necessary)					○	
Battery fluid	Check-refilling	○					—
Cable con- nection	Check-tightness		○	○			—
Bolts and Nuts	Check-tightness		○	○			—

NOTE:

(1) Lubricate more frequency when used in salt water.

(2) For professional commercial use, log hours of operation to determine proper maintenance intervals.

MAINTENANCE

ENGINE OIL	3-2	THROTTLE ADJUSTMENT (REMOTE CONTROL TYPE)	3-11
OIL FILTER	3-3	THROTTLE ADJUSTMENT (TILLER HANDLE TYPE)	3-12
GEAR OIL	3-4	SHIFT ROD ADJUSTMENT	3-14
SPARK PLUGS	3-4	CHOKE KNOB ROD ADJUSTMENT	3-15
VALVE CLEARANCE	3-5	REMOTE CHOKE SOLENOID ADJUSTMENT (REMOTE CONTROL TYPE)	3-15
FUEL STRAINER	3-7	TIMING BELT	3-16
FUEL TANK STRAINER	3-8	POWER TILT OIL (POWER TRIM & TILT TYPE)	3-19
CARBURETOR	3-8		
CARBURETOR SYNCHRONIZATION	3-9		
ACCELERATION DEVICE/ DIAPHRAGM ADJUSTMENT	3-10		

ENGINE OIL

a. INSPECTION

⚠ WARNING

- Used motor oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

NOTE

- Draining can be performed rapidly and completely when the engine is still warm.
- Place the shop towel under the oil filter when removing the oil filter.

- 1) Remove the engine cover and oil level gauge.
- 2) Insert the oil level gauge into the oil filler neck.
- 3) Check the oil level shown on the oil level gauge; if near or below the lower level mark, fill to the upper level mark with the recommended oil.

Engine oil capacity	2.0 l (2.11 US qt, 1.76 Imp qt)
---------------------	---------------------------------

Recommended engine oil	SAE10W-30/40 engine oil or equivalent, API Service classification SG, SF/CC, CD
------------------------	---

NOTE

- When a new oil filter has been installed, recheck the engine oil level after running the engine for a few minutes.

b. OIL CHANGE





- 1) Remove the oil filler cap, drain plug cover and oil drain plug. Drain the oil into a suitable container.
- 2) Retighten the oil drain plug.

TORQUE: 23 N·m (2.3 kg·m, 16.6 ft·lb)

- 3) Refill to the upper level mark on the oil level gauge with the recommended oil. Tighten the oil filler cap securely.
- 4) Tighten the drain plug cover bolt.

TORQUE: 6.5 N·m (0.65 kg·m, 4.7 ft·lb)

- 5) Install the engine cover.

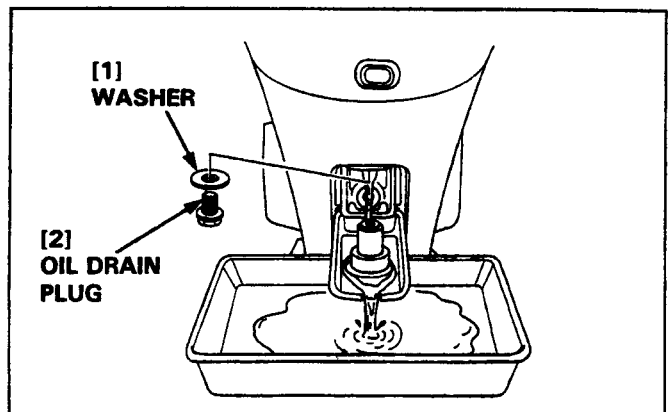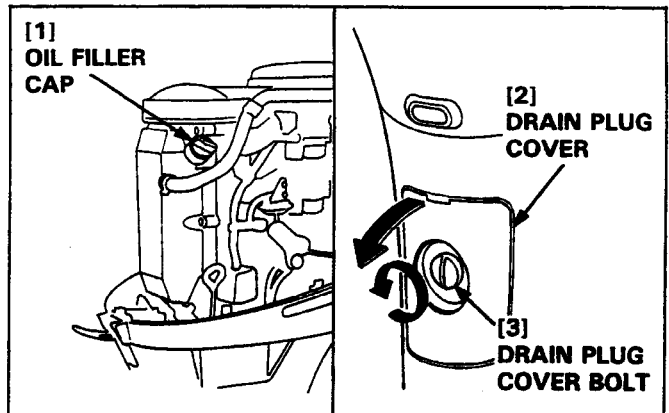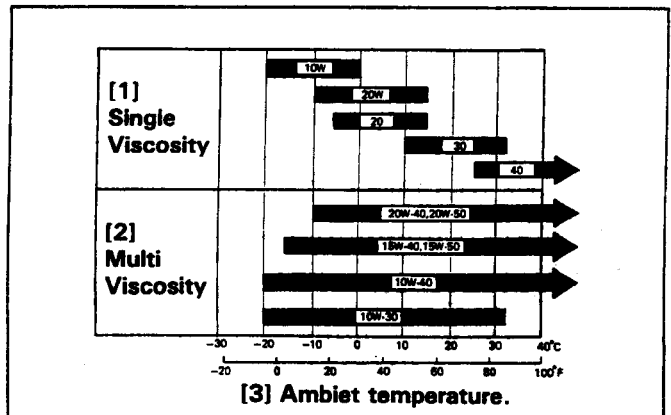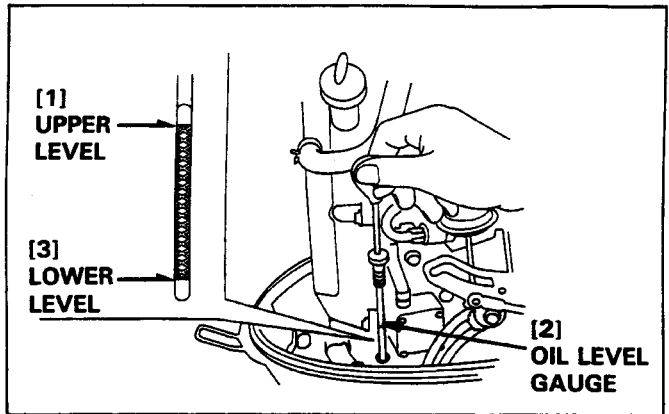


OIL FILTER

- 1) Remove the engine cover.
- 2) Drain the engine oil (P. 3-2).
- 3) Attach the oil filter wrench to the oil filter and remove the oil filter.

TOOL:

OIL FILTER WRENCH 07HAA-PJ70100

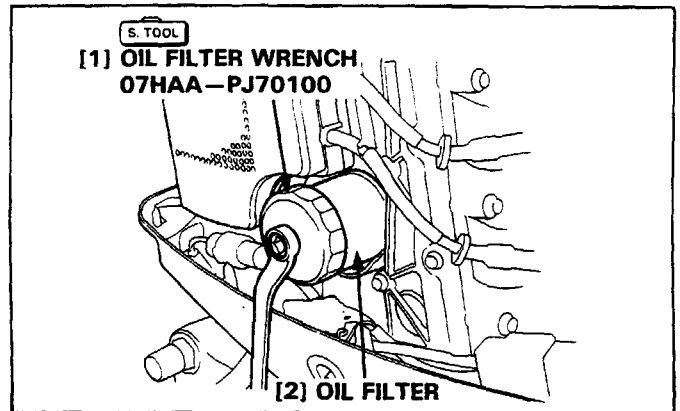

- 4) Clean the installation section of a new cartridge and apply a light coating of engine oil to the O-ring, screw on and tighten the cartridge by hand.
- 5) Use the oil filter wrench to tighten to the torque.

TORQUE: 8 N·m (0.8 kg-m, 5.6 ft-lb)



- 6) Fill with the specified capacity of engine oil and run the engine for a few minutes. At that time, check for oil leaks from the oil filter cartridge.

Oil capacity	2.0 ℓ (2.11 US qt, 1.76 Imp qt) with oil filter cartridge replacement: 2.2 ℓ (2.32 US qt, 1.93 Imp qt)
--------------	--

After stopping the engine, check the engine oil amount and fill with oil if necessary.

NOTE

- Before replacing the oil filter, place a wipe cloth under the filter to trap oil leakage.
- Replace the oil filter as an assembly cartridge.

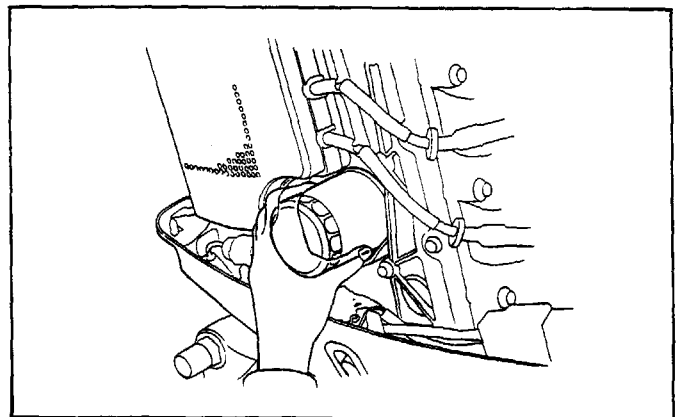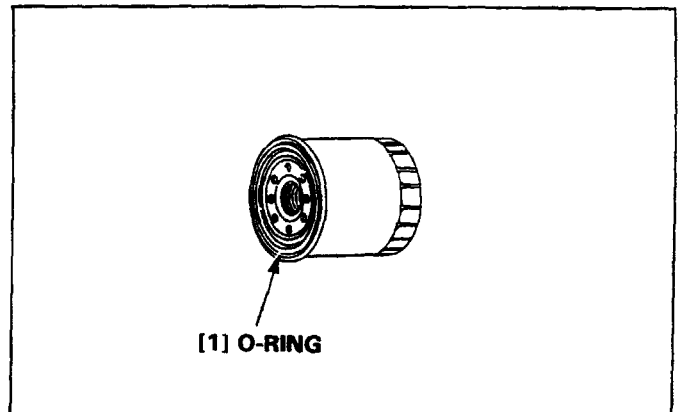

GEAR OIL

1) GEAR OIL LEVEL CHECK


Check the oil level when the engine is in the vertical position.

Remove the oil check bolt and see if oil flows out. If no oil comes out, fill through the drain plug bolt hole until the oil starts to flow out through the oil check bolt hole.

2) GEAR OIL REPLACEMENT

Remove the oil check bolt and drain plug bolt to drain the oil.

Inject oil through the drain plug bolt hole until it starts flowing out through the oil check bolt hole. Reinstall and tighten the oil check bolt and drain plug bolt securely.

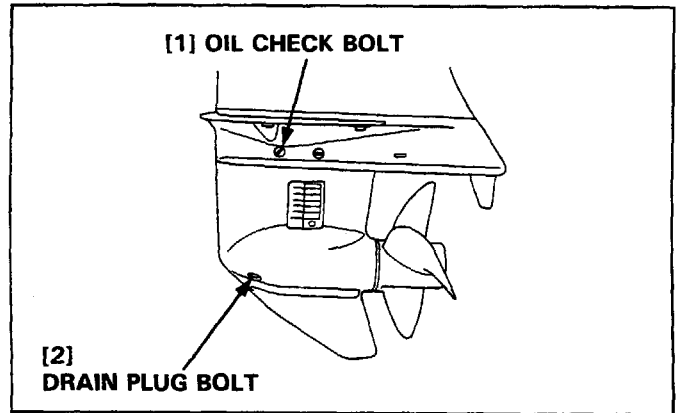


Gear oil capacity	0.52 ℓ (0.550 US qt, 0.458 Imp qt.)
-------------------	-------------------------------------

Recommended gear oil	SAE #90 Hypoid gear oil or equivalent, API Service Classification (GL-4 or GL-5)
----------------------	--

NOTE

- Be sure that the water is not mixed with the gear oil. If the water is mixed in the oil, check the gasket and water seal for damage and check the gear case for tightening.

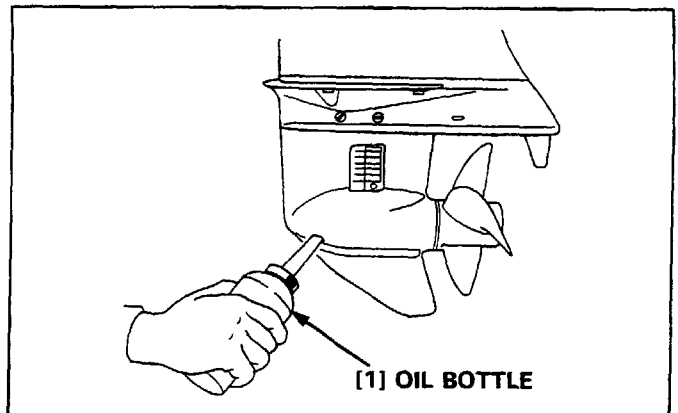

SPARK PLUGS

- 1) Remove the engine cover and spark plug caps.
- 2) Clean any dirt from around the spark plug bases.
- 3) Use a spark plug wrench to remove the spark plugs.
- 4) Visually inspect the spark plug. Discard the plugs if the insulators are cracked or chipped.
- 5) Remove carbon or other deposits with a stiff wire brush.
- 6) Measure the plug gap with a wire-type feeler gauge.

Spark plug gap	0.6–0.7 mm (0.024–0.028 in)
----------------	-----------------------------



Recommended spark plug	DR7EA (NGK) X22ESR-U (ND)
------------------------	------------------------------

If necessary, adjust the gap by bending the side electrode.

- 7) Make sure the sealing washer is in good condition.
- 8) Install the plug fingertight to seat the washer, then tighten with a plug wrench (an additional 1/2 turn if a new plug) to compress the sealing washer. If you are reusing a plug, tighten 1/8-1/4 turn after the plug seats.

CAUTION


- The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.
- Never use spark plug with an improper heat range.

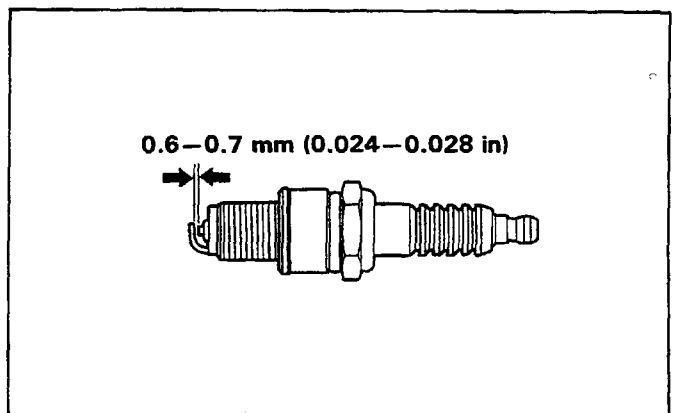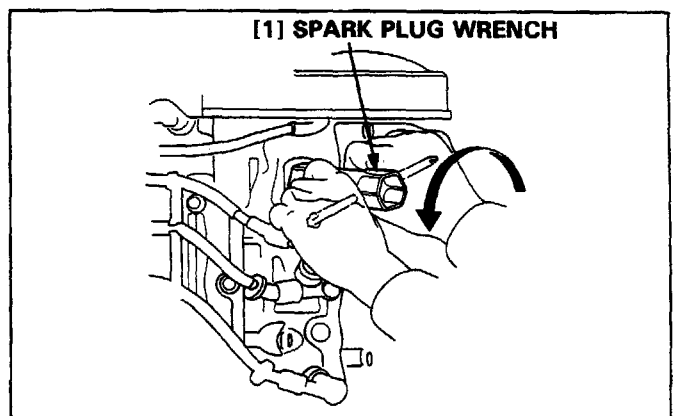


VALVE CLEARANCE

Valve clearance inspection and adjustment must be performed with the engine cold.


1) Remove the engine cover.

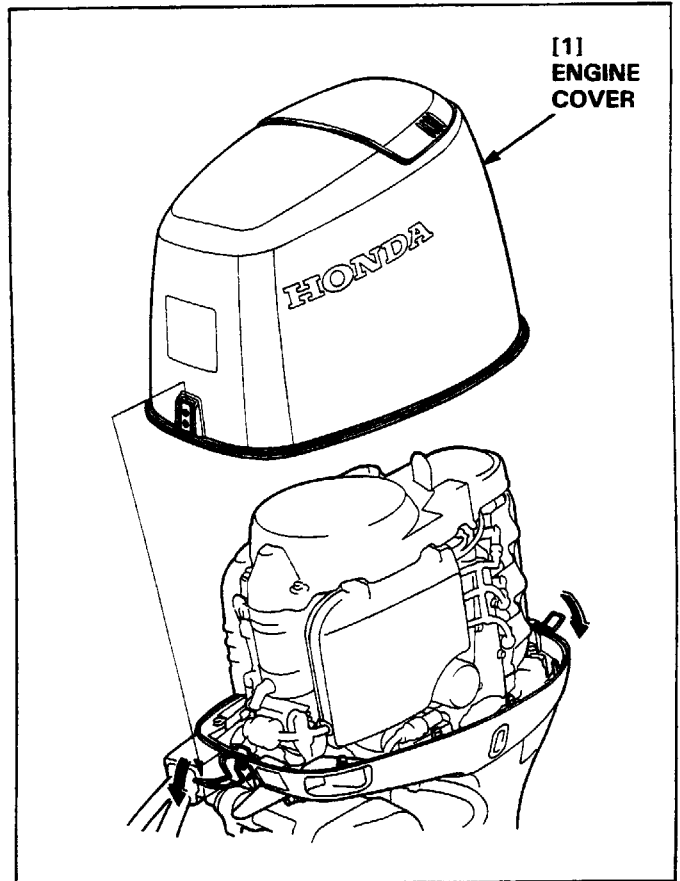

- 2) Move the shift lever to "N" position.
3) Remove the four 6 x 25 mm flange bolts and three 6 mm plain washers from the flywheel cover.
4) Remove the flywheel cover.

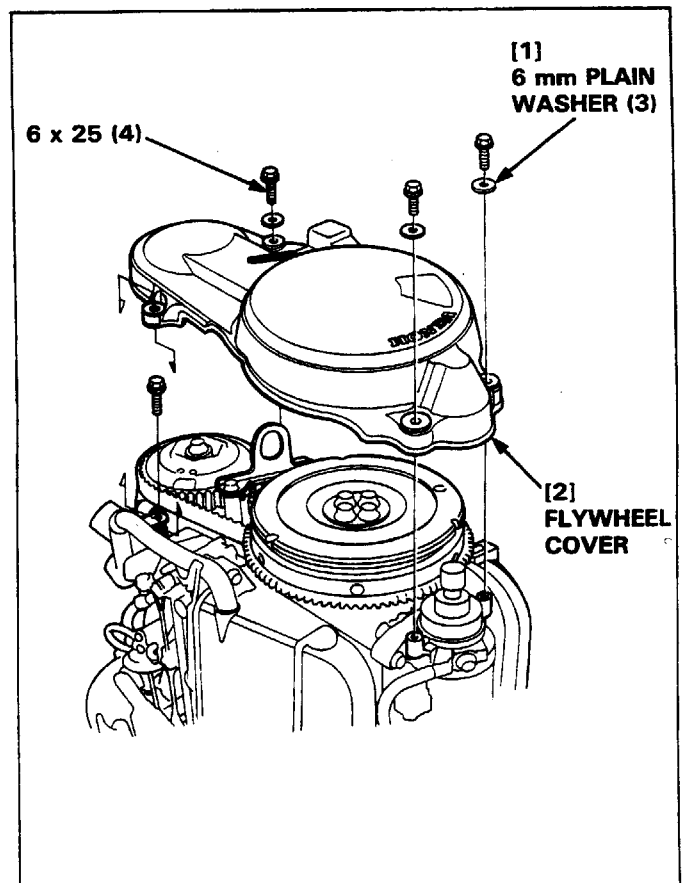

- 5) Remove the seven 6 x 35 mm flange bolts and cylinder head cover.


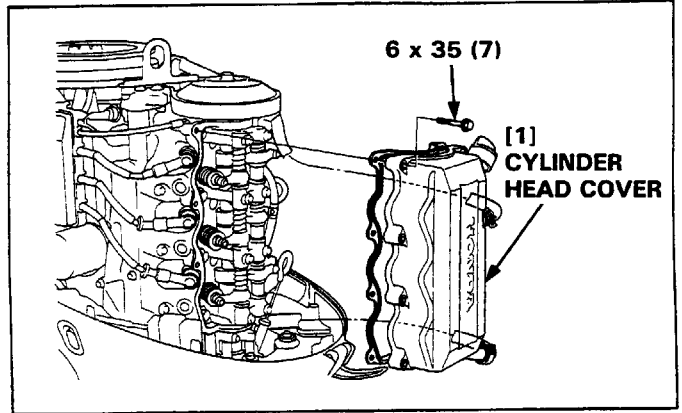


- 6) Attach the special tool to the pulser rotor as shown, and align the "T↓" mark on the pulser rotor with the "T↑" mark on the cylinder head. Be sure that the "T" mark on the flywheel aligns with the "I" mark on the engine hanger mounting boss this time (which indicates that the No. 1 piston is at the top dead center of its compression stroke). With the No. 1 piston at the top dead center of the compression stroke, measure the intake and exhaust valve clearances.

Valve clearance	IN	0.13–0.17 mm (0.005–0.007 in)
	EX	0.21–0.25 mm (0.008–0.010 in)


TOOL:

56 mm Lock nut wrench 07LPA–ZV30200

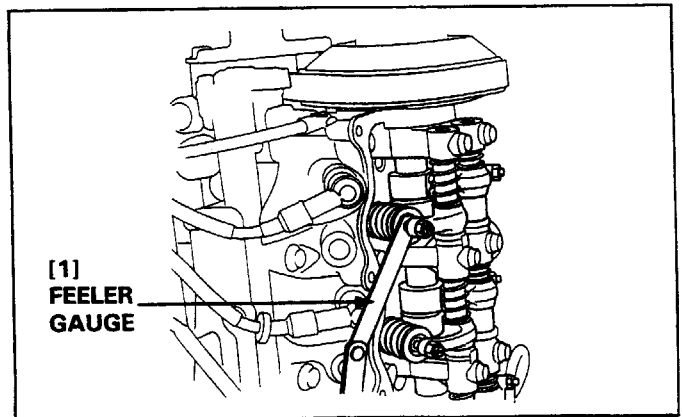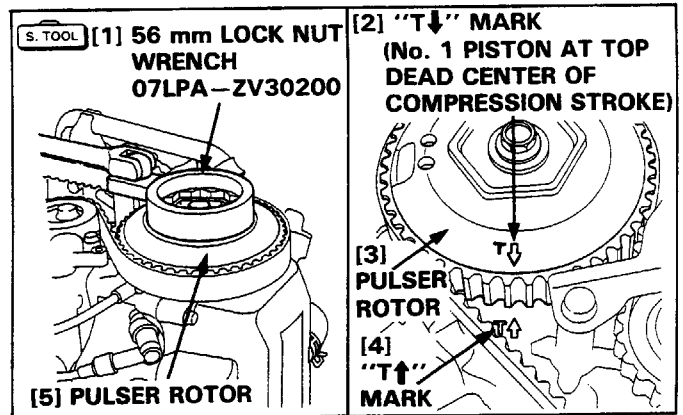


- 7) Loosen the valve adjusting screw lock nut and turn the adjusting screw to obtain the specified intake and exhaust valve clearance.
 8) Hold the adjusting screw, and tighten the lock nut.
 9) Recheck valve clearance after tightening the lock nut.

TORQUE: 23 N·m (2.3 kg·m, 16.6 ft·lb)

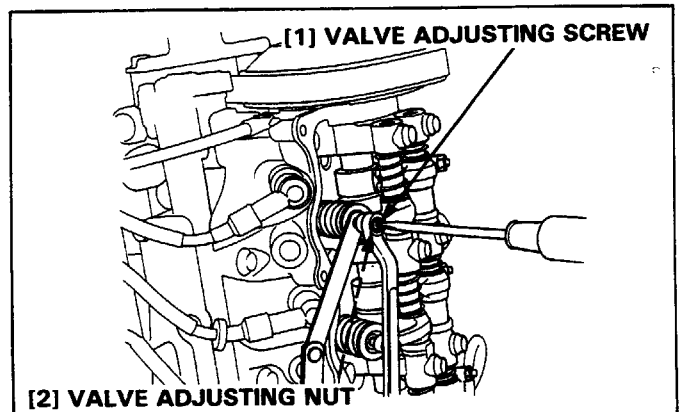

- 10) After adjusting the intake and exhaust valve clearances of the No. 1 cylinder, turn the pulser rotor 120° further and align the "2▲" mark with the "T↑" mark on the cylinder head (which indicates that the No. 2 piston is at the top dead center of its compression stroke), then adjust the intake and exhaust valve clearances.
- Finally, turn the pulser rotor 120° further and align the "3▲" mark with the "T↑" mark on the cylinder head (which indicates that the No. 3 piston is at the top dead center of compression stroke), then adjust the intake and exhaust valve clearances.

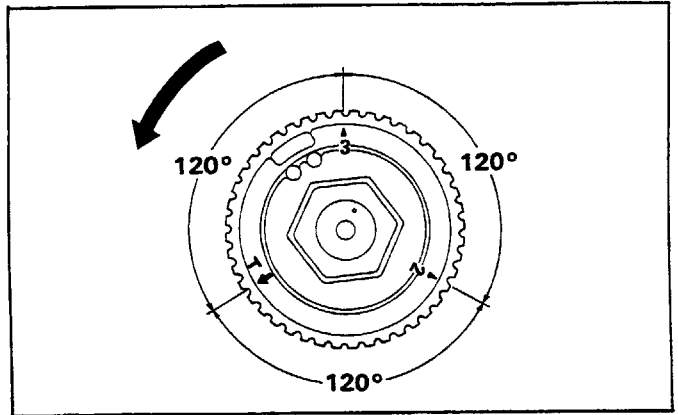

FUEL STRAINER

▲ WARNING

- Gasoline is extremely flammable and explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

• Inspection

- Turn the fuel knob at the fuel tank to the "OFF" position and remove the engine cover. Pull the choke knob.
- Pull the fuel strainer retainer toward you and remove the fuel strainer.
- Check the fuel strainer for cloggings with water and dirt.




• Replacement

- Remove the fuel strainer from the engine under case.
- Disconnect the fuel tube from the fuel strainer with care not to leak the gasoline, and replace with a new fuel strainer.

NOTE

- Before removing the fuel strainer, place clamps on the fuel tube on each side of the fuel strainer to prevent fuel leakage.

- Install the new fuel strainer, so that arrow mark "←" points the fuel pump side.
- Connect the fuel line to the fuel tank, pump the primer bulb, and check for leaks.

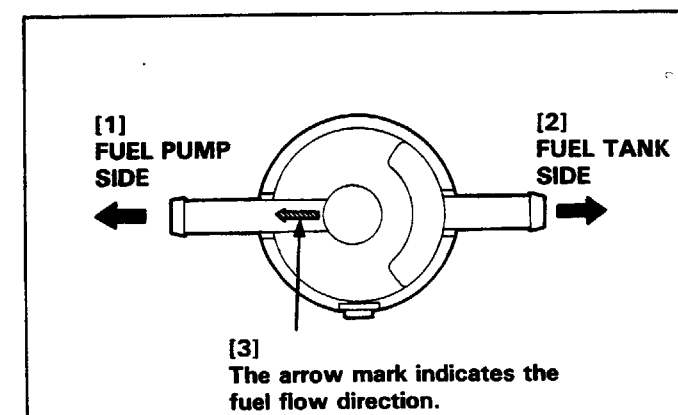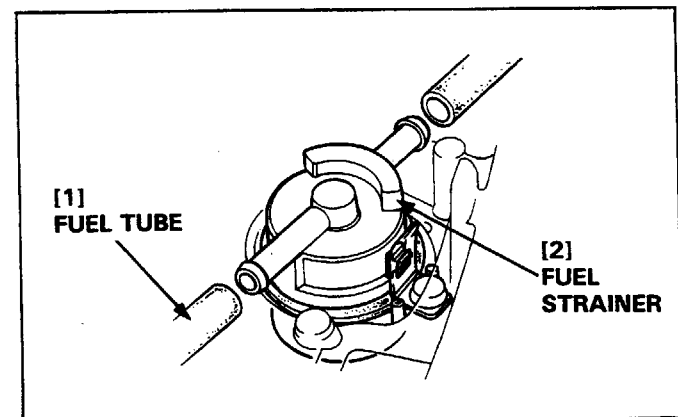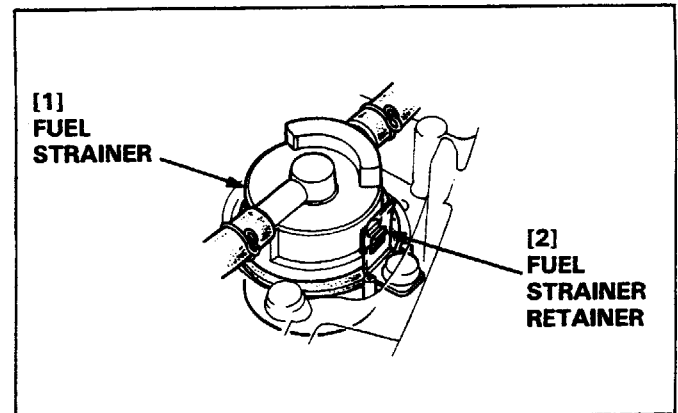


FUEL TANK STRAINER

⚠ WARNING

- Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the outboard motor while draining fuel.
- Always work in a well-ventilated area.
- Be sure that any fuel drained from the outboard motor is stored in a safe container.

- 1) Drain the fuel tank.
- 2) Remove the fuel joint and fuel tank strainer.
Remove dust and foreign matter from the fuel tank strainer, and check for tears.

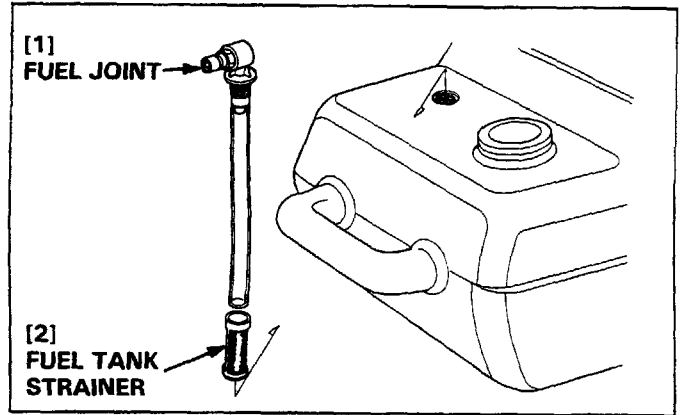

CARBURETOR

Idle Speed

With no load (Shift lever in neutral)

- 1) Remove the propeller, and place the outboard motor in a water tank with the water level at least 4 inches above the anti-cavitation plate.
A water tank is not required if a hose is connected from a water faucet to the outboard motor, using a hose joint (optional part).
Remove the engine cover.

CAUTION

- Running the engine without water can cause serious engine damage due to overheating. Be sure that water flows from the water check hole while the engine is running. If not, stop the engine and determine the cause of the problem.
- Keep clear of moving parts.

- 2) After the engine speed has stabilized, turn and adjust the throttle stop screw to achieve the specified idle speed.

Specified idle speed (Shift lever in neutral)	950 ± 50 min ⁻¹ (r.p.m.)
--	-------------------------------------

If the idle speed does not stabilize, perform the carburetor synchronization adjustment (page 3-9).



Pilot screws

If the pilot screws setting needs adjustment:

- 1) Tighten the pilot screw of each cylinder as full as they go, then back them off by 2-1/8 turns.

Standard pilot screw setting	2-1/8 turns out
------------------------------	-----------------


- 2) Turn the throttle stop screw to obtain the specified idle speed.
- 3) Turn the pilot screw of the No. 3 carburetor 1/8 turns per time until the highest idle speed can be obtained.
This is the standard carburetor.
Perform the same adjustment on the No. 1 and No. 2 carburetors.
- 4) Lightly snap the engine several times, and turn the throttle stop screw to adjust the idle speed to the specified speed.

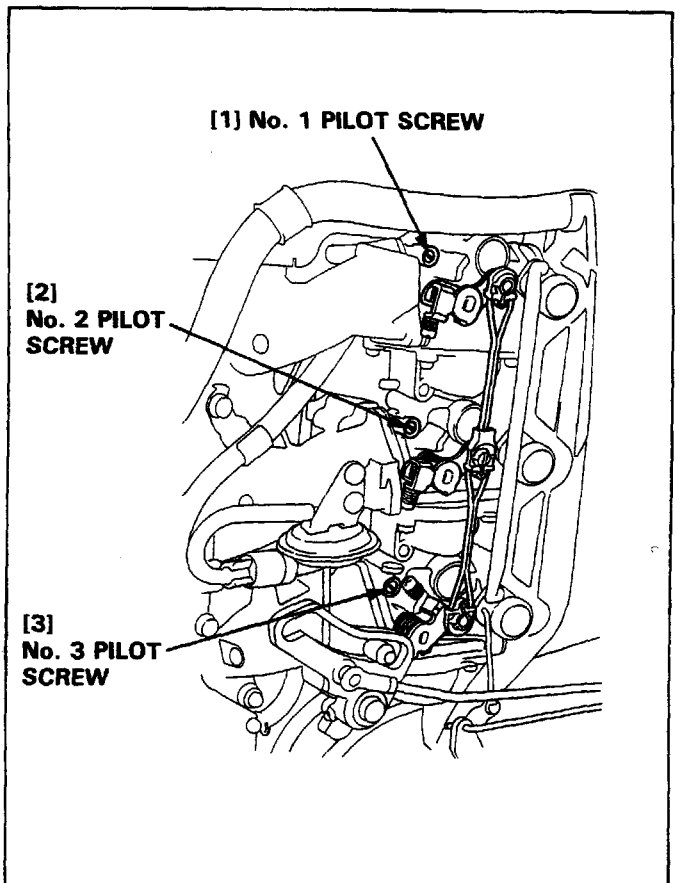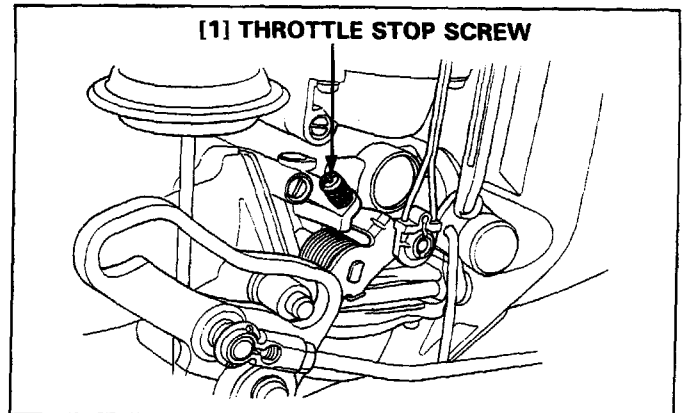

CARBURETOR SYNCHRONIZATION

Start the engine and allow it to warm up to normal operating temperature.

- 1) Place the outboard motor on a level surface and move the shift lever to "N" position.
- 2) Remove the three 5 x 10 mm plugs from the intake port of each cylinder.

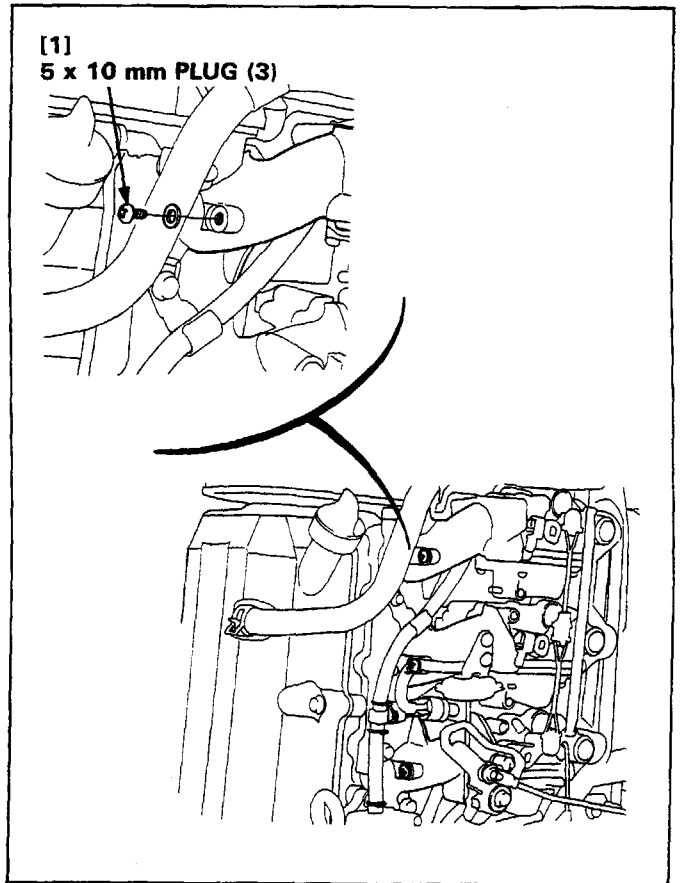

- 3) Attach the vacuum gauge adapters to each plug holes. Connect the vacuum gauge tubes to the adapters.

NOTE

- Connect the vacuum gauge No. 1 tube to the No. 1 carburetor adaptor, vacuum gauge No. 2 tube to the No. 2 carburetor adaptor, and the No. 3 tube to the No. 3 carburetor adaptor properly.


TOOL:

Vacuum gauge 07404-003001

- 4) Start the engine and check the standard idle speed (page 3-8).
- 5) Check that the vacuum gap between the cylinders is 20 mmHg or below.


Vacuum gap	20 mmHg less than
------------	-------------------

- 6) If the vacuum gap is more than 20 mmHg, adjust as follows.

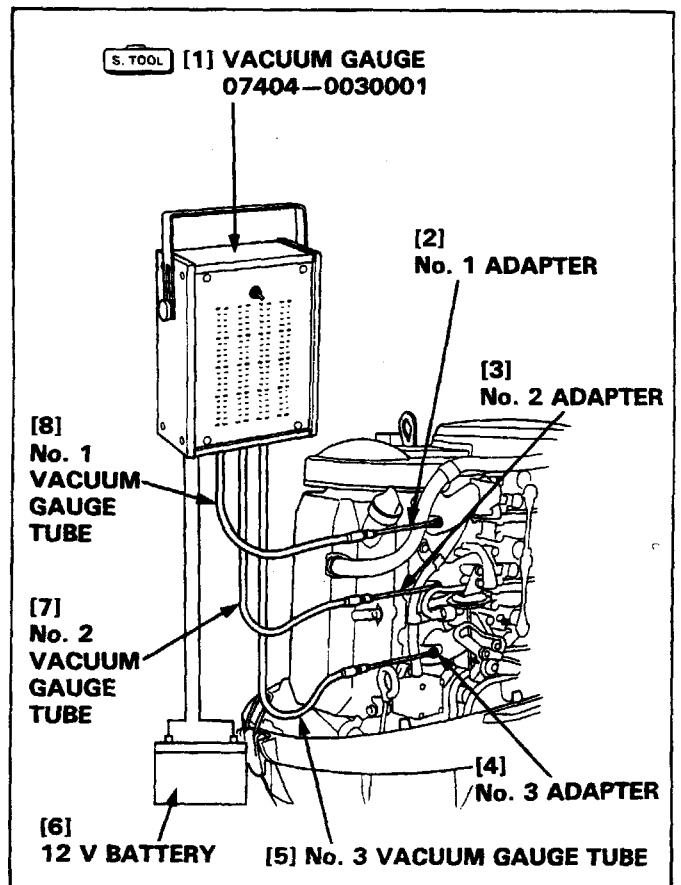

- 7) With the vacuum of the No. 3 carburetor being the standard, turn the No. 1 and No. 2 carburetor adjusting screws so that the vacuum gap between the No. 1 and No. 2 carburetors is 20 mmHg or below.


Snap the engine several times and be sure that the vacuum of the No. 1 and No. 2 carburetors is the same as that of the No. 3 carburetor.

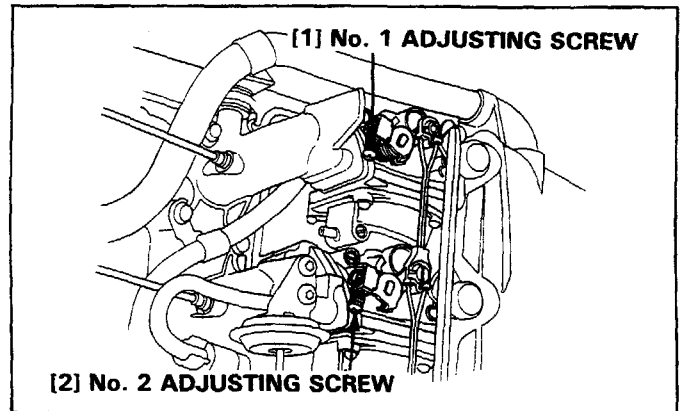

NOTE

- The less the vacuum gap is, the more the idle speed stabilizes.


- 8) Remove the special tool from the intake manifold and install the 5 x 10 mm plugs.
- 9) After adjustment, readjust the idling speed by turning the No. 3 carburetor throttle stop screw (page 3-8).

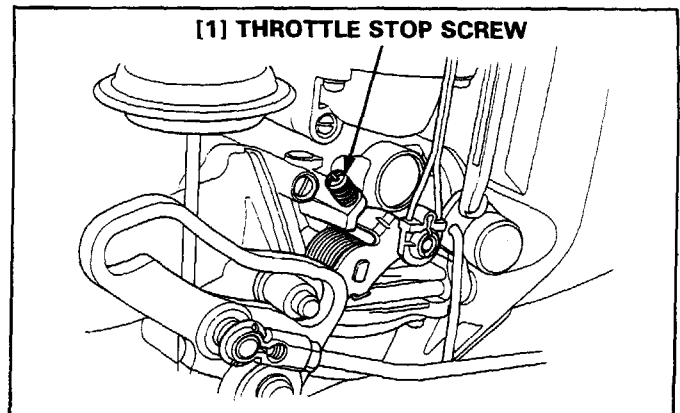

ACCELERATION DEVICE/DIAPHRAGM ADJUSTMENT

Adjust the acceleration device/diaphragm after adjusting the idling speed.


- 1) Loosen the 6 x 16 mm torx bolts using the special tools.

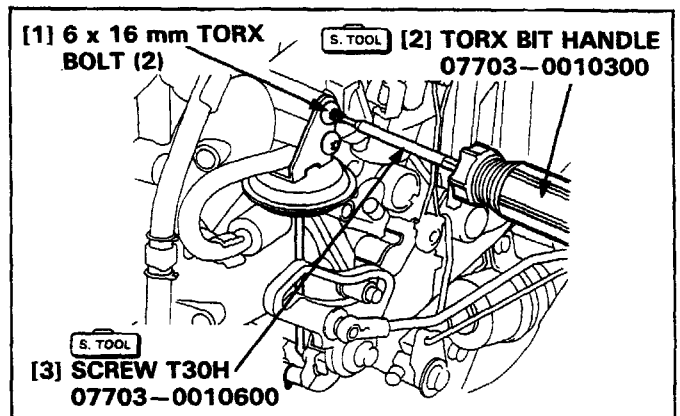


TOOLS:

- Torx bit handle 07703-0010300
Screw T30H 07703-0010600

- 2) Remove the throttle rod from the throttle cam.
- 3) Move the throttle cam in the direction pointed by arrow until it contacts the throttle arm roller.

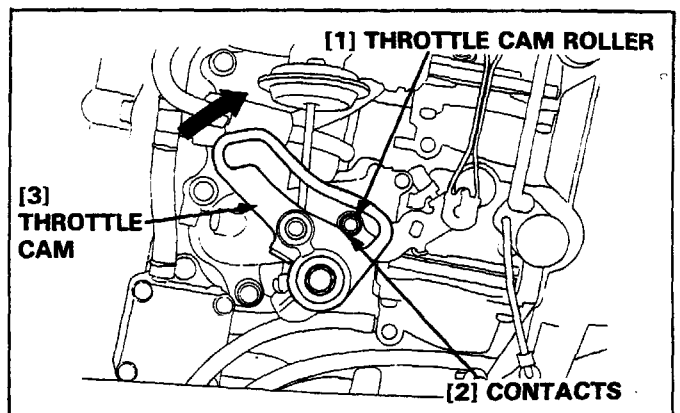


- 4) Move the diaphragm up and down slowly until the clearance between the assist plate and throttle opener cam is 4.2 mm (0.17 in). While holding the clearance, tighten the 6 x 16 mm torx bolts using the special tool. Attach the throttle rod to the throttle cam.

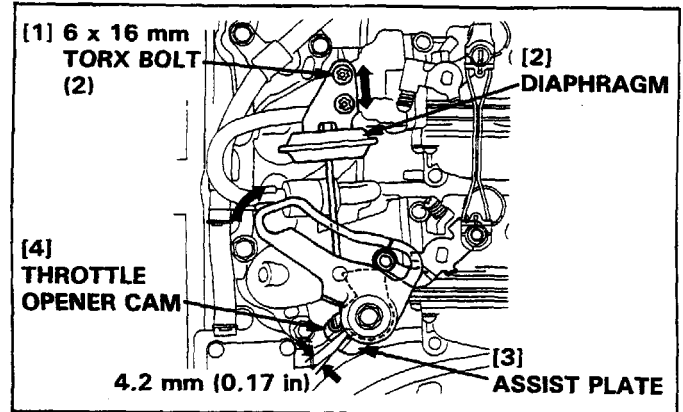


THROTTLE ADJUSTMENT (REMOTE CONTROL TYPE)

Throttle rod length adjustment:

- 1) Move the throttle arm to the fully open position and be sure that the arm contacts the full open position stopper.
- 2) Check that the throttle cam is at the full open position, too.
- 3) If either the throttle arm does not contact the stopper or the throttle cam is not at the full open position, adjust as follows.

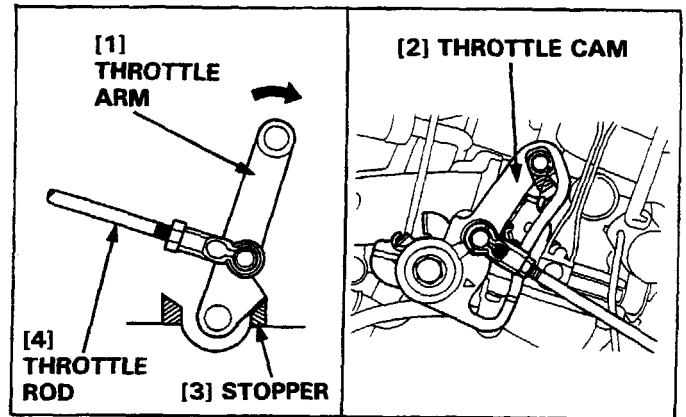


- 4) Loosen the linkage pivot lock nut, detach the linkage pivot from the throttle cam, and adjust by turning the pivot. Tighten the lock nut securely.
- 5) After adjustment, move the carburetor throttle lever to the fully open position and be sure that there is clearance of 1 mm (0.04 in) or less between the carburetor throttle lever and the fully open position stopper.
- 6) If the clearance is more than 1 mm (0.04 in), readjust by turning the linkage pivot.

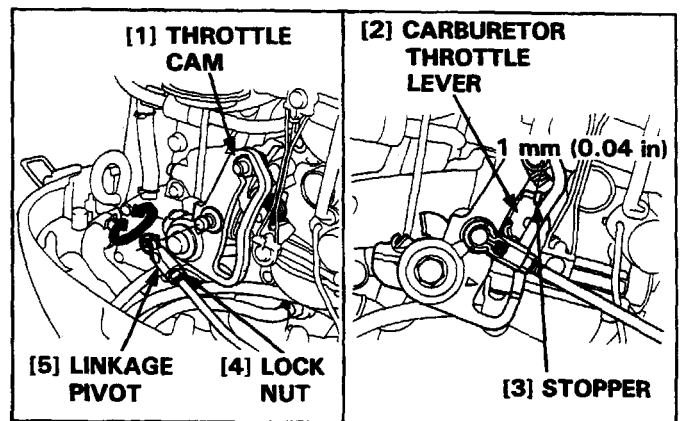


Remote control cable length adjustment:

Remote control cable length adjustment must be performed after adjusting the throttle rod.


- 1) Move the remote control shift lever to the "N" position.

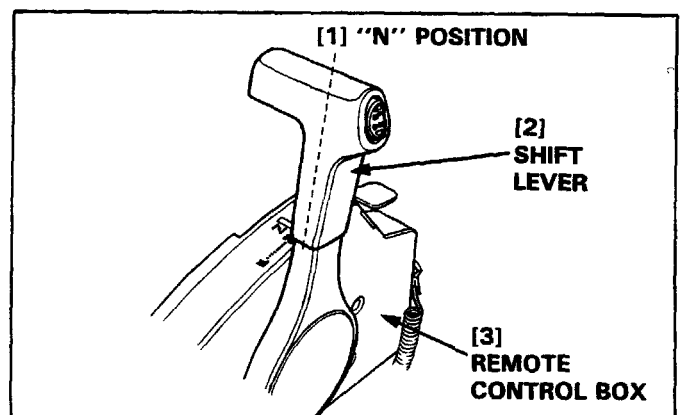


- 2) Check that the two reference marks on the throttle cam align with the center of the roller. If they do not align, adjust as follows.

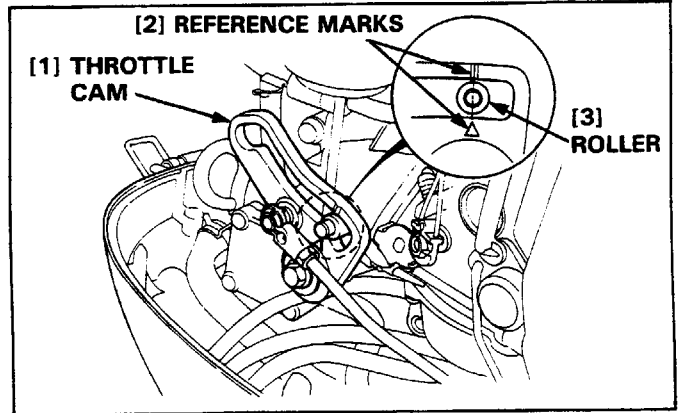

- 3) Remove the 6 mm lock pin and 6 mm plain washers from the shift pivot, and detach the shift pivot from the throttle arm.
 4) Loosen the shift pivot lock nut and adjust by turning the shift pivot. After adjustment, tighten the lock nut and attach the shift pivot to the throttle arm.

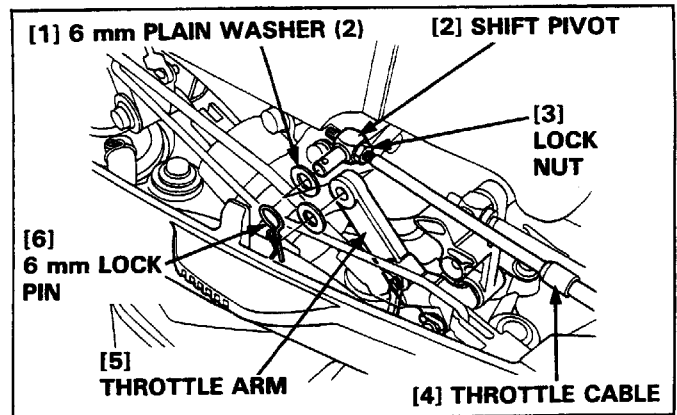


- 5) Remove the remote control housing B and C (P. 14-4).
 6) Move the remote control shift lever to the full open position and be sure that the link arm joint is in contact with the 5 x 16 mm hex. bolt. If it is not, tighten the 5 x 16 mm hex. bolt until it contacts the link arm joint.

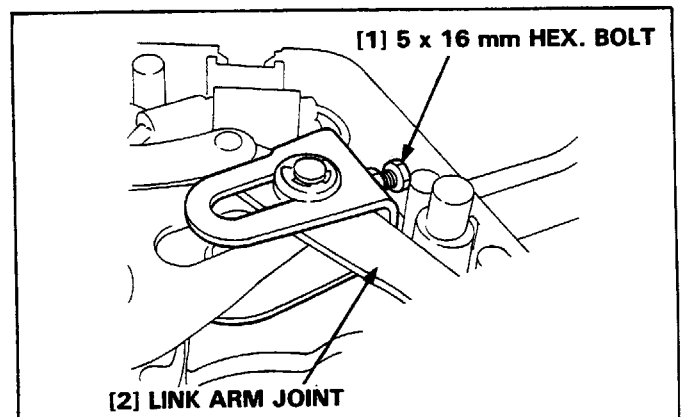

THROTTLE ADJUSTMENT (TILLER HANDLE TYPE)

Throttle cable adjustment:


- 1) Move the throttle grip to the full open position and be sure that the throttle arm contacts the stopper of the throttle cable bracket.
 2) If the throttle arm does not contact the stopper, loosen the cable lock nut and adjust by turning the adjusting nut.

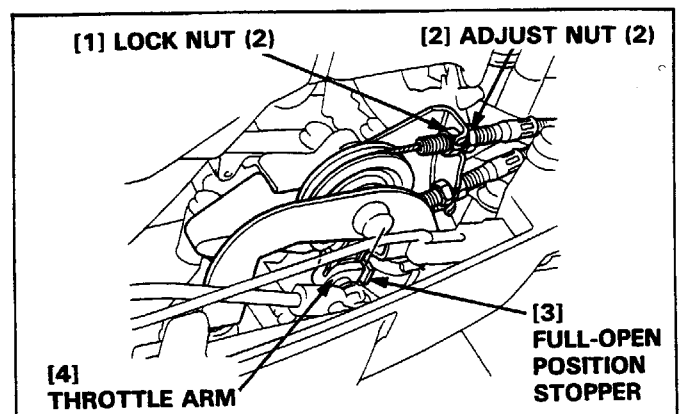


Throttle rod length adjustment:

The throttle rod length adjustment must be performed after adjusting the throttle cable.

- 1) Move the shift lever to the "F" position.
- 2) Turn the throttle grip to the full-open position, and confirm that the throttle arm contacts the full-open position stopper of the throttle cable bracket. (P. 3-12)

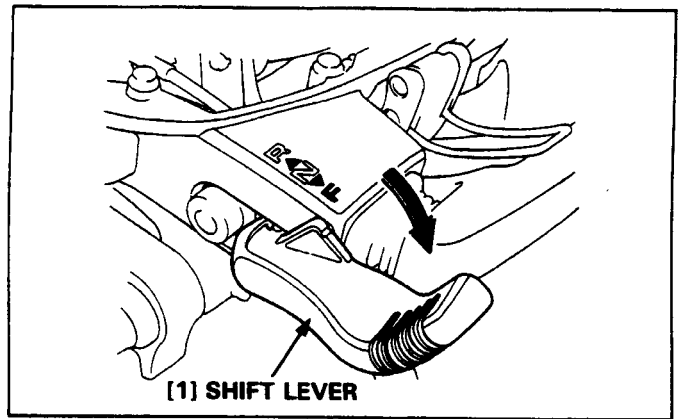


- 3) Be sure that the carburetor throttle lever contacts the full open position stopper on the carburetor side.
- 4) If the carburetor throttle lever does not contact the stopper, loosen the lock nut and adjust the throttle rod length by turning the linkage pivot. After adjustment, tighten the lock nut securely.

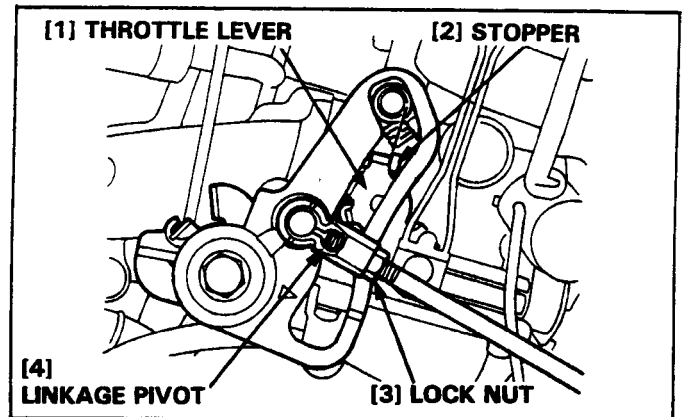

- 5) Check that the throttle lever moves the entire range from the fully open position to the fully closed position without binding.


Then, move the carburetor throttle lever to the fully open position and be sure that there is clearance of 1 mm (0.04 in) or less between the throttle lever and the full open position stopper.

- 6) If the clearance is more than 1 mm (0.04 in), readjust by turning the linkage pivot.

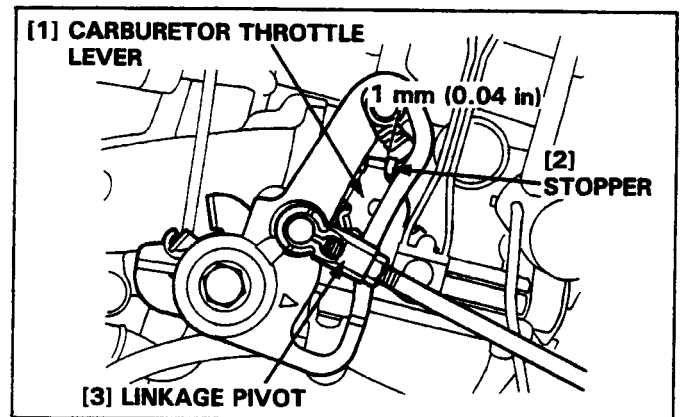


- 7) Turn the throttle grip to the fully closed position and align the "▼" mark on the steering handle with the throttle mark idle position. Be sure that the two reference marks on the throttle cam align with the center of the roller. If they do not align, loosen the lock nut on the closed position side and adjust by turning the adjusting nut.

- 8) After the adjustment turn the throttle grip and make sure that the carburetor throttle lever moves over the entire range, from the fully-closed to the fully-open position without binding.

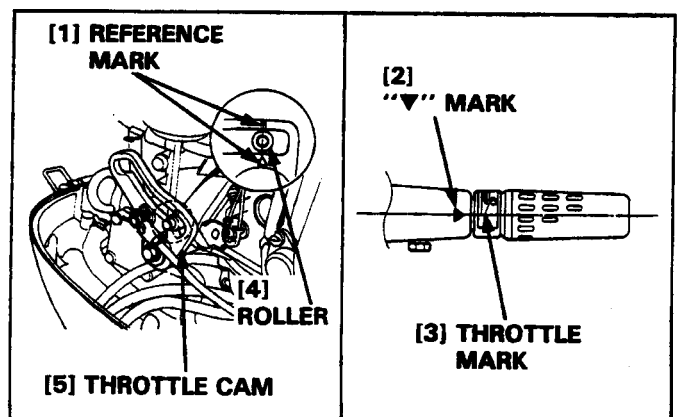


SHIFT ROD ADJUSTMENT

- 1) Move the shift lever to the "R" position and be sure that the shift link B is in the "R" position, too.
If either or both the shift link B or/and shift lever is/are not in the "R" position, adjust as follows.

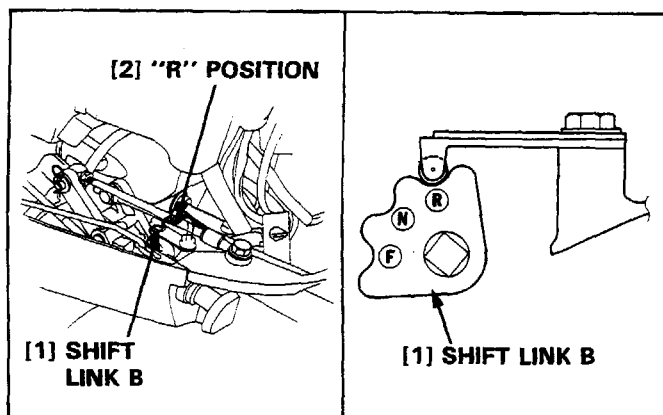


- 2) Move the shift lever to the "N" position.
- 3) Loosen the lock nut and adjusting nut interconnecting the shift rod A and B, and disconnect the shift rod A from the shift rod B. Move the shift lever to the "R" position.
- 4) With the shift rod B lowered to the lowermost position, turn the adjusting nut and insert the shift rod B into the adjusting nut until the length from the lock nut end to the tip of the shift rod B is 8 mm (0.3 in), then tighten the lock nut.
After adjustment, be sure that the shift lever moves to each position smoothly.

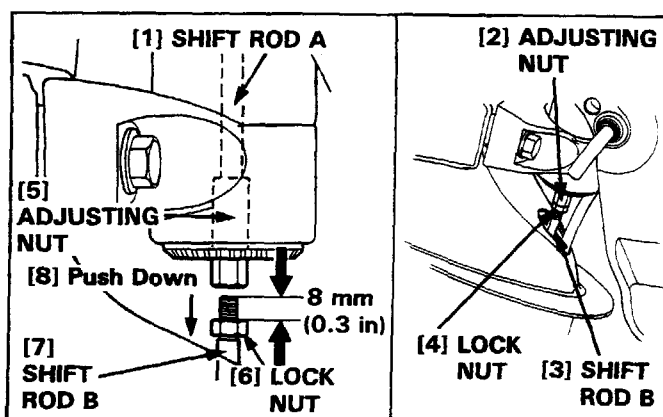


Remote control cable adjustment [Shift side]: (Remote control type only)

If the shift link B of the remote control type (LR/LRT types) does not operate properly after adjusting the shift rod, perform the following adjustment.

- 1) Disconnect the shift side remote control cable from the shift link B.
- 2) Move the shift lever to the "N" position. Be sure that the shift link B is in the "N" position, too.

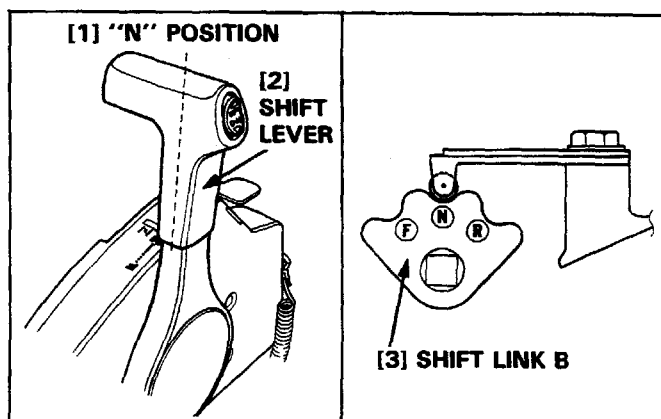


- 3) Loosen the shift pivot lock nut and turn the shift pivot so that it attaches to the shift link B smoothly. Tighten the lock nut after adjustment.
Install the shift pivot on the shift link B and move the shift lever. Be sure that the shift link B moves to each position smoothly.

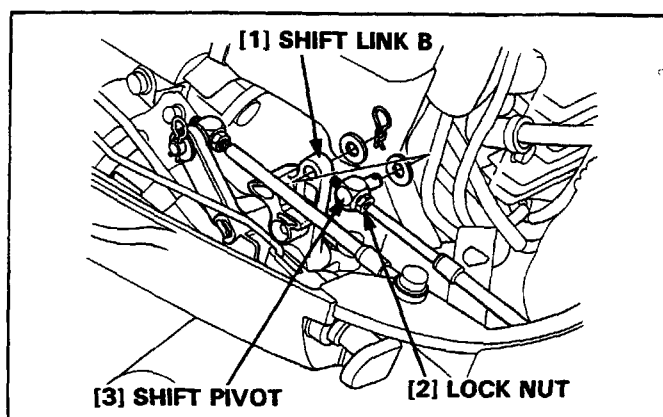


CHOKE KNOB ROD ADJUSTMENT


1) Pull the choke knob fully (i.e. to the fully closed position).

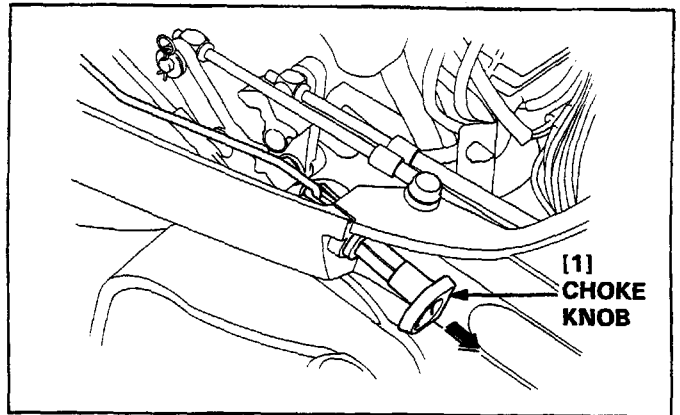

2) Check that the carburetor stopper is in contact with the fully closed position stopper of the carburetor choke lever. If they are not, turn the adjusting screw until they contact.

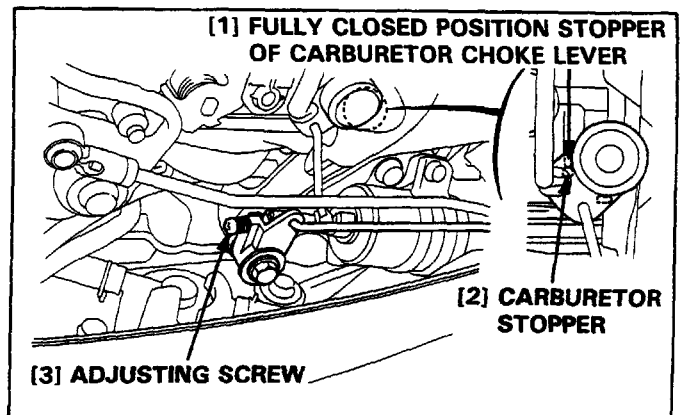

3) After adjustment, push the choke knob fully (i.e. to the full open position) and be sure that the carburetor stopper is in contact with the full open position stopper of the carburetor choke lever.

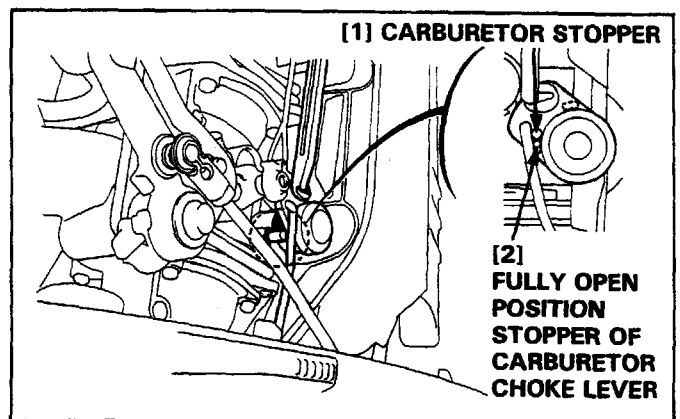


REMOTE CHOKE SOLENOID ADJUSTMENT (REMOTE CONTROL TYPE)

Perform the remote choke solenoid adjustment after adjusting the choke rod.

1) Turn the combination switch to the "ON" position.
2) Move the idle lever and check the remote choke solenoid for proper operation.


If it does not operate properly, adjust as follows.

3) Pull the choke knob fully (i.e. to the fully closed position).

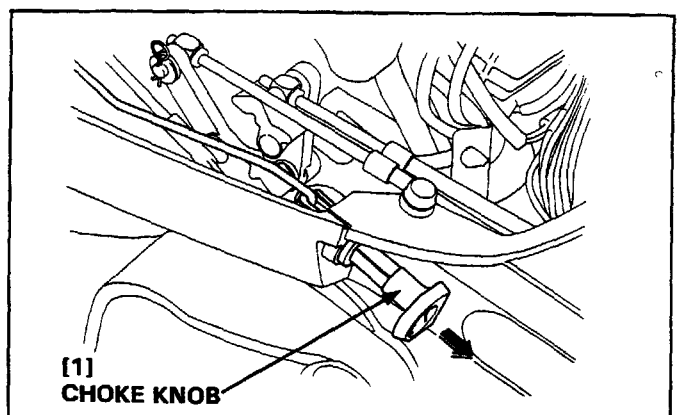

- 4) Loosen the 6 x 12 mm SH flange bolt on the solenoid body stay.
Check that the "↑" mark on the reverse side of the remote choke solenoid body is pointing up.
- 5) Push the plunger to the right and determine the position where it stops. Then, move the solenoid body until it contacts the plunger.
- 6) Tighten the 6 x 12 mm SH flange bolt to the specified torque.


TORQUE: 9 N·m (0.9 kg-m, 6.5 ft-lb)

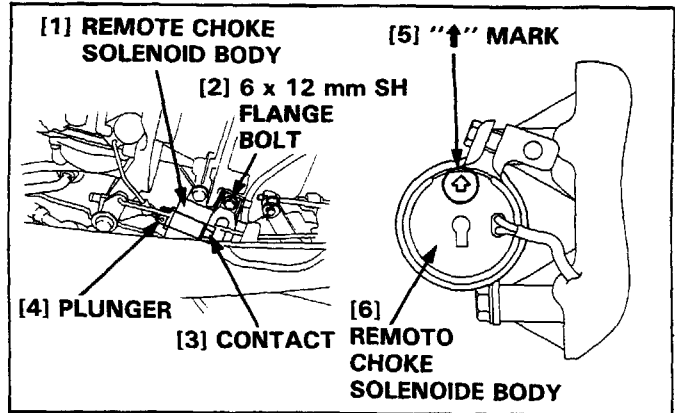

TIMING BELT


a. INSPECTION

- 1) Remove the engine cover and timing belt cover.
- 2) Check to see whether the "A" point of the timing belt is not damaged or worn, and replace the timing belt if necessary.

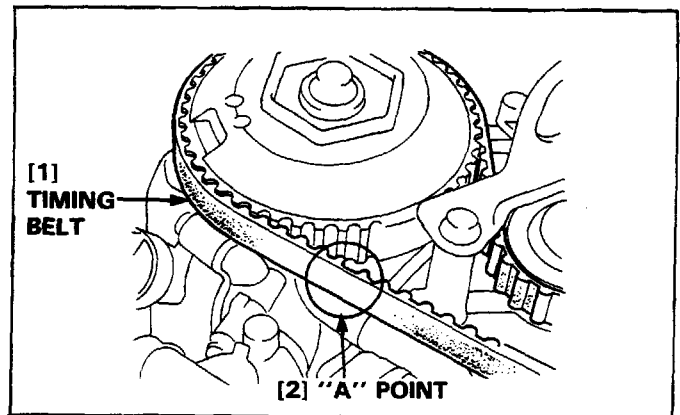

b. REPLACEMENT

- 1) Remove the 8 x 18 mm flange bolts and engine hanger.
- 2) Remove the timing belt tensioner cap.

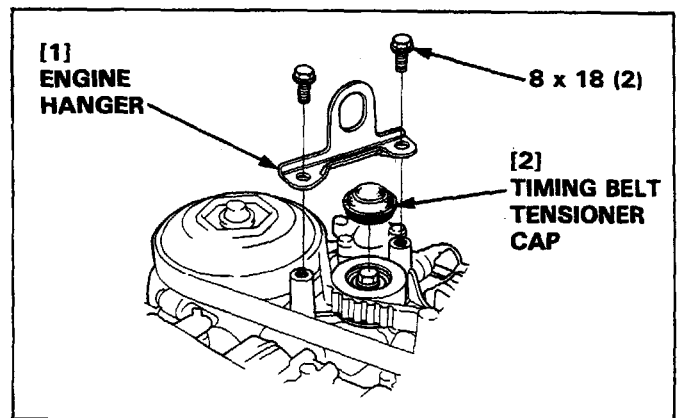


- 3) Attach the special tool to the engine hanger installation section and remove the four 10 x 25 mm flange bolts from the flywheel.


TOOL:

Ring gear holder


07LPB-ZV30100

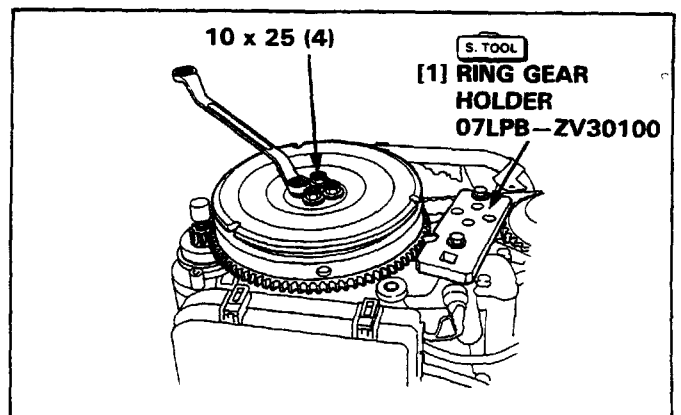

4) Remove the flywheel and 6 x 10 mm dowel pin.

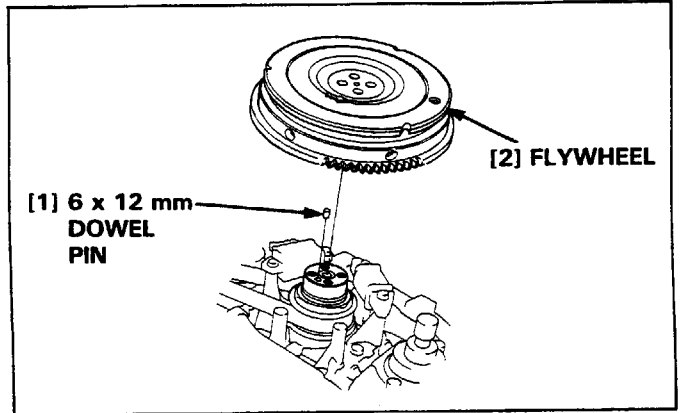

5) Disconnect the exciter coil and charging coil.

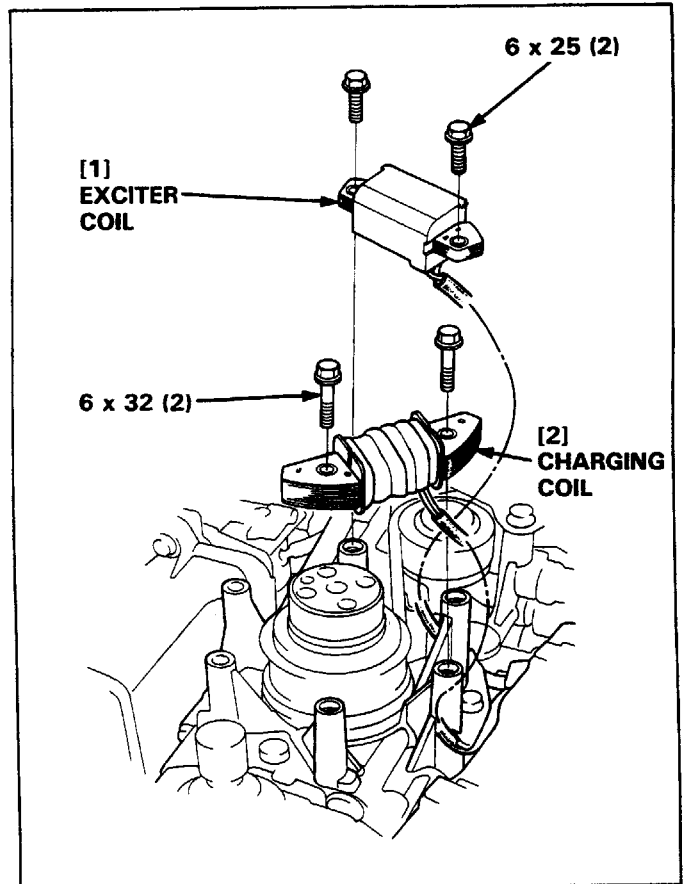

6) Loosen the 10 x 38 mm flange bolt which is tightening the timing belt tensioner, then retighten the 10 x 38 mm flange bolt while pushing the belt tensioner in the direction of the arrow.


CAUTION

- Do not remove the timing belt with force using a driver, etc.

7) Remove the timing belt from the pulser rotor first, then remove the timing belt from the timing pulley.

NOTE

- Take care not to contaminate the removed timing belt with oil or grease.
- Do not bend the timing belt. Keep the removed timing belt by hanging it on the wall.

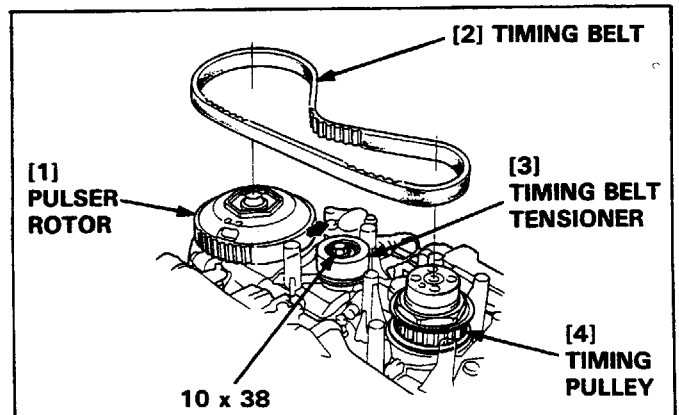

c. INSTALLATION


- 1) Set the special tool on the pulser rotor as shown, and turn the pulser rotor until the "T↓" mark on the pulser rotor aligns with the "T↑" mark on the cylinder head.

CAUTION

- Do not turn the pulser rotor clockwise.

TOOL:


56 mm lock nut wrench 07LPA-ZV30200

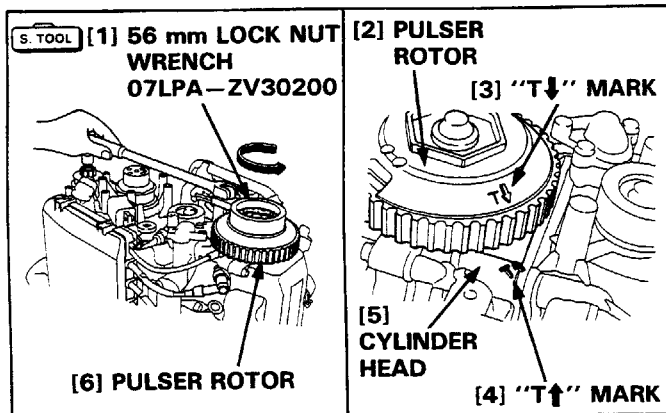

- 2) Set the 6 x 10 mm dowel pin and flywheel on the crankshaft and loosely tighten the four 10 x 25 mm flange bolts.
- 3) Turn the flywheel counterclockwise and align the "T" mark on the flywheel with the "I" mark on top of the engine hanger mounting boss.

CAUTION


- Be sure to turn the flywheel in the direction of the arrow. Do not turn it in the reverse direction.

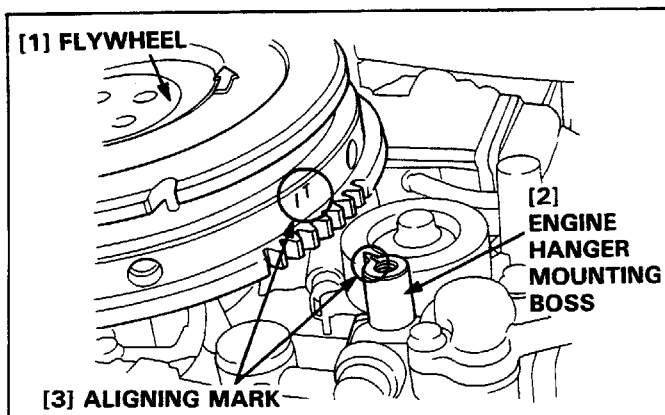

- 4) Remove the flywheel with care not to move the marks out of alignment.
- 5) Install the new timing belt in the reverse order of removal with care not to move the aligning marks out of position. After installation, adjust the timing belt tension.

d. ADJUSTMENT

- 1) Set the 6 x 10 mm dowel pin and flywheel on the crankshaft, and be sure that the mark on the pulser rotor is aligned with that on the cylinder head and the mark on the flywheel is aligned with that on the cylinder barrel. Remove the flywheel and 6 x 10 mm dowel pin. Loosen the 10 x 38 mm flange bolt.

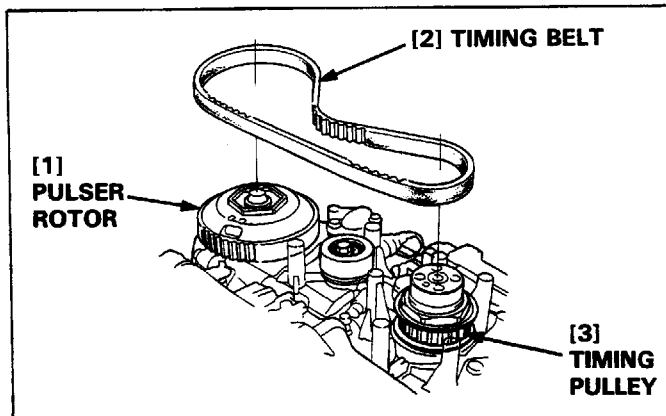


- 2) Using the 10 x 25 mm flange bolt (i.e. flywheel mounting bolt), install the special tool on the crankshaft and turn the crankshaft two turns counterclockwise from the alignment position with the pulser rotor.

CAUTION

- Do not turn the flywheel clockwise.

TOOL:

Ring gear holder: 07LPB-ZV30100

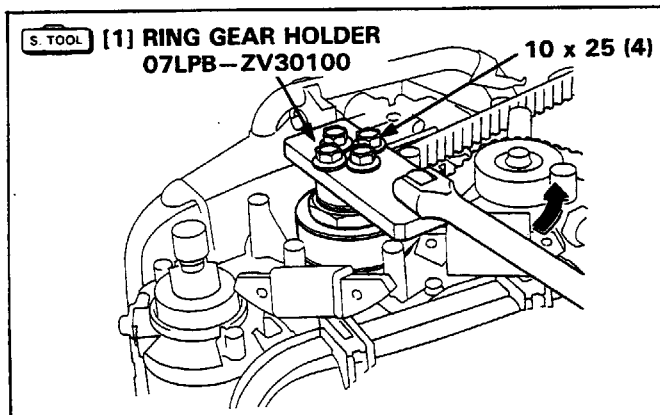

- 3) Then turn the crankshaft counterclockwise by 3 teeth of the pulse rotor.

NOTE



- The timing belt tensioner is automatically adjusted. Do not push the tensioner against the belt by hand.

- 4) Tighten the 10 x 38 mm flange bolt to the specified torque.

TORQUE: 45 N·m (4.5 kg·m, 32.5 ft·lb)


After adjustment, install the following parts.

- Exciter coil, charging coil, flywheel (page 6-2).
- Engine hanger, timing belt tensioner cap (page 6-3).
- Flywheel cover (page 6-2).
- Engine cover (page 4-2).

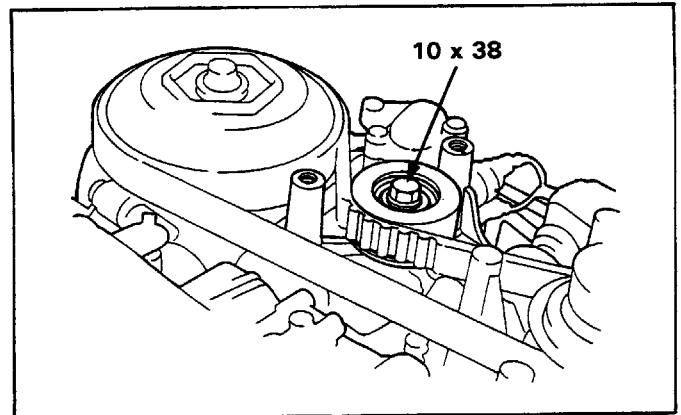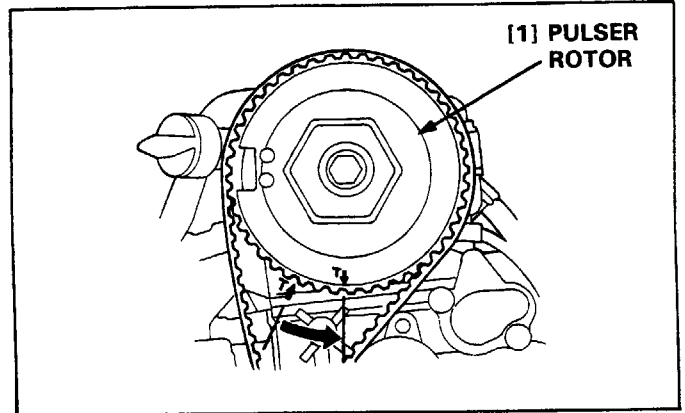

POWER TILT OIL (POWER TRIM & TILT TYPE)

- 1) Tilt up the outboard to the uppermost position and lock it with the tilt stopper.
- 2) Remove the oil plug from the power tilt assembly and be sure that the oil level is up to the oil filler port. If the oil level is low, add the oil up to the filler port.

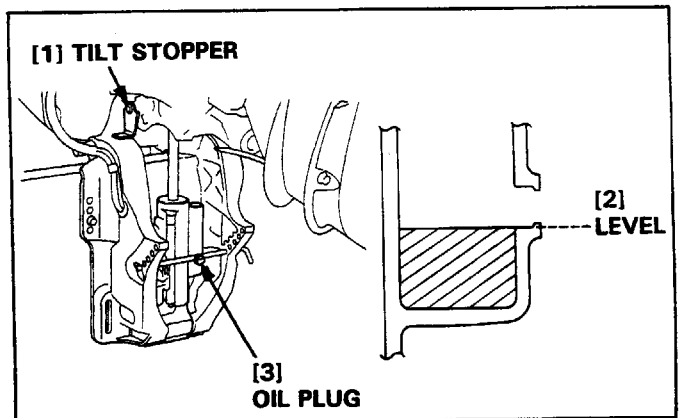


Recommended oil	ATF (Automatic Transmission Fluid)
-----------------	------------------------------------

ENGINE COVER/THROTTLE/ CHOKE

4

ENGINE COVER	4-2
THROTTLE CAM	4-3
CHOKE KNOB ROD	4-4


ENGINE COVER

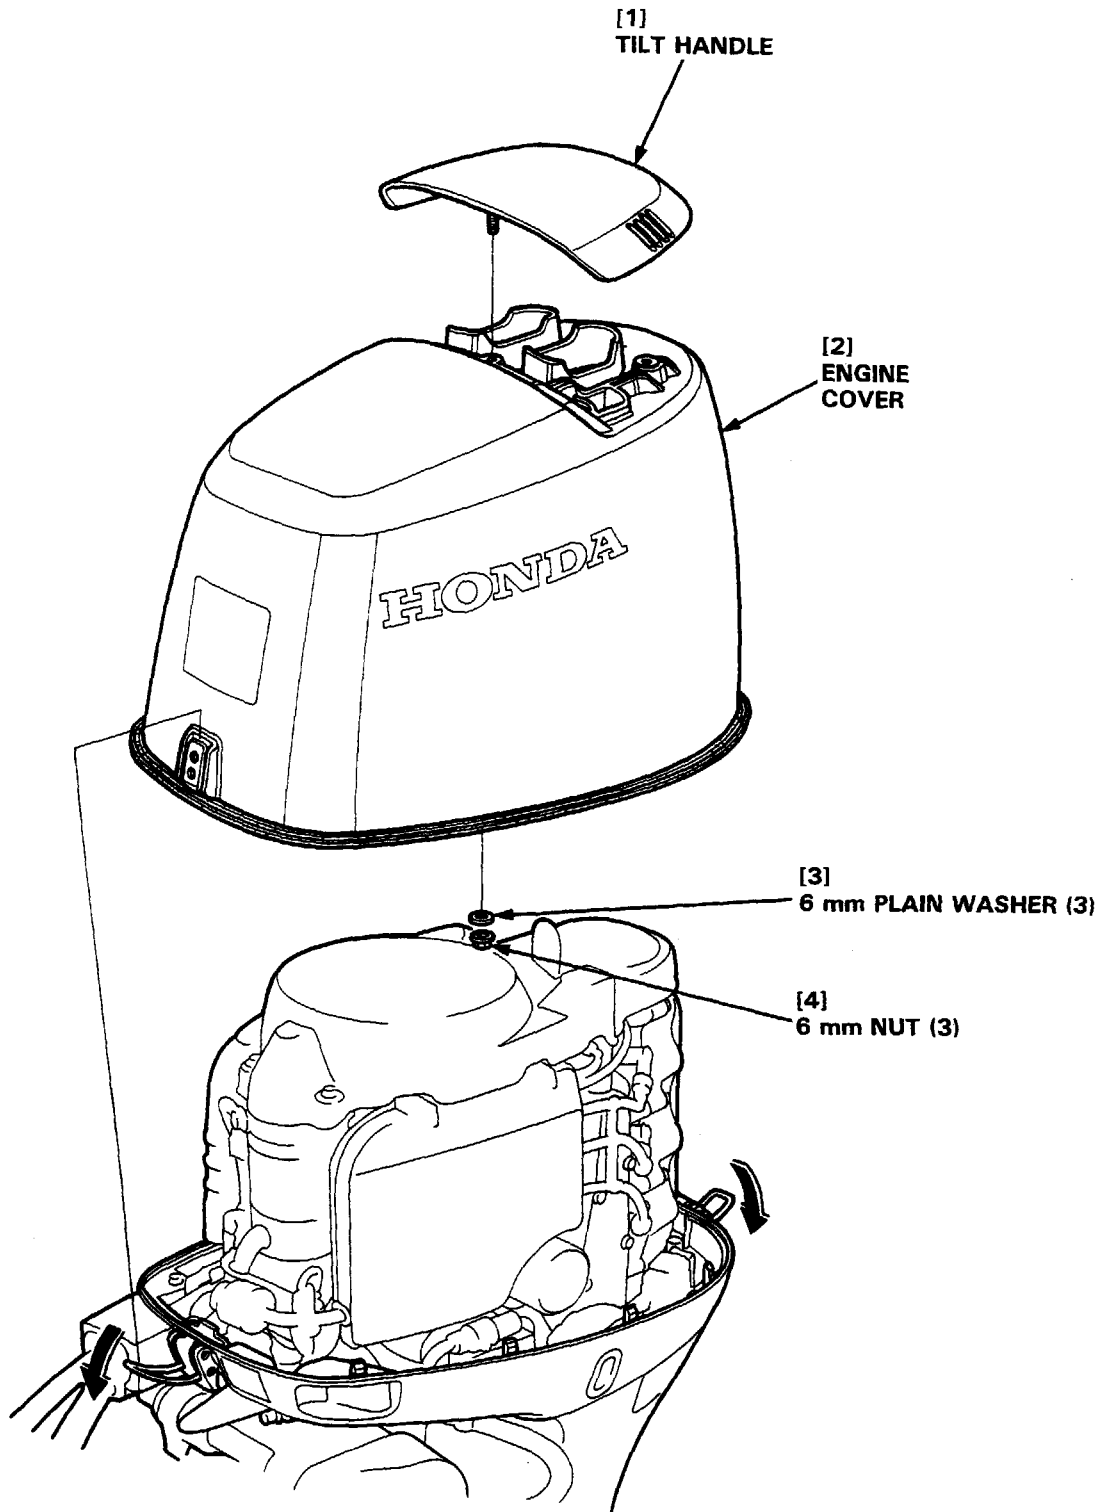

THROTTLE CAM

a. DISASSEMBLY/REASSEMBLY


1) Remove the engine cover (P. 4-2).

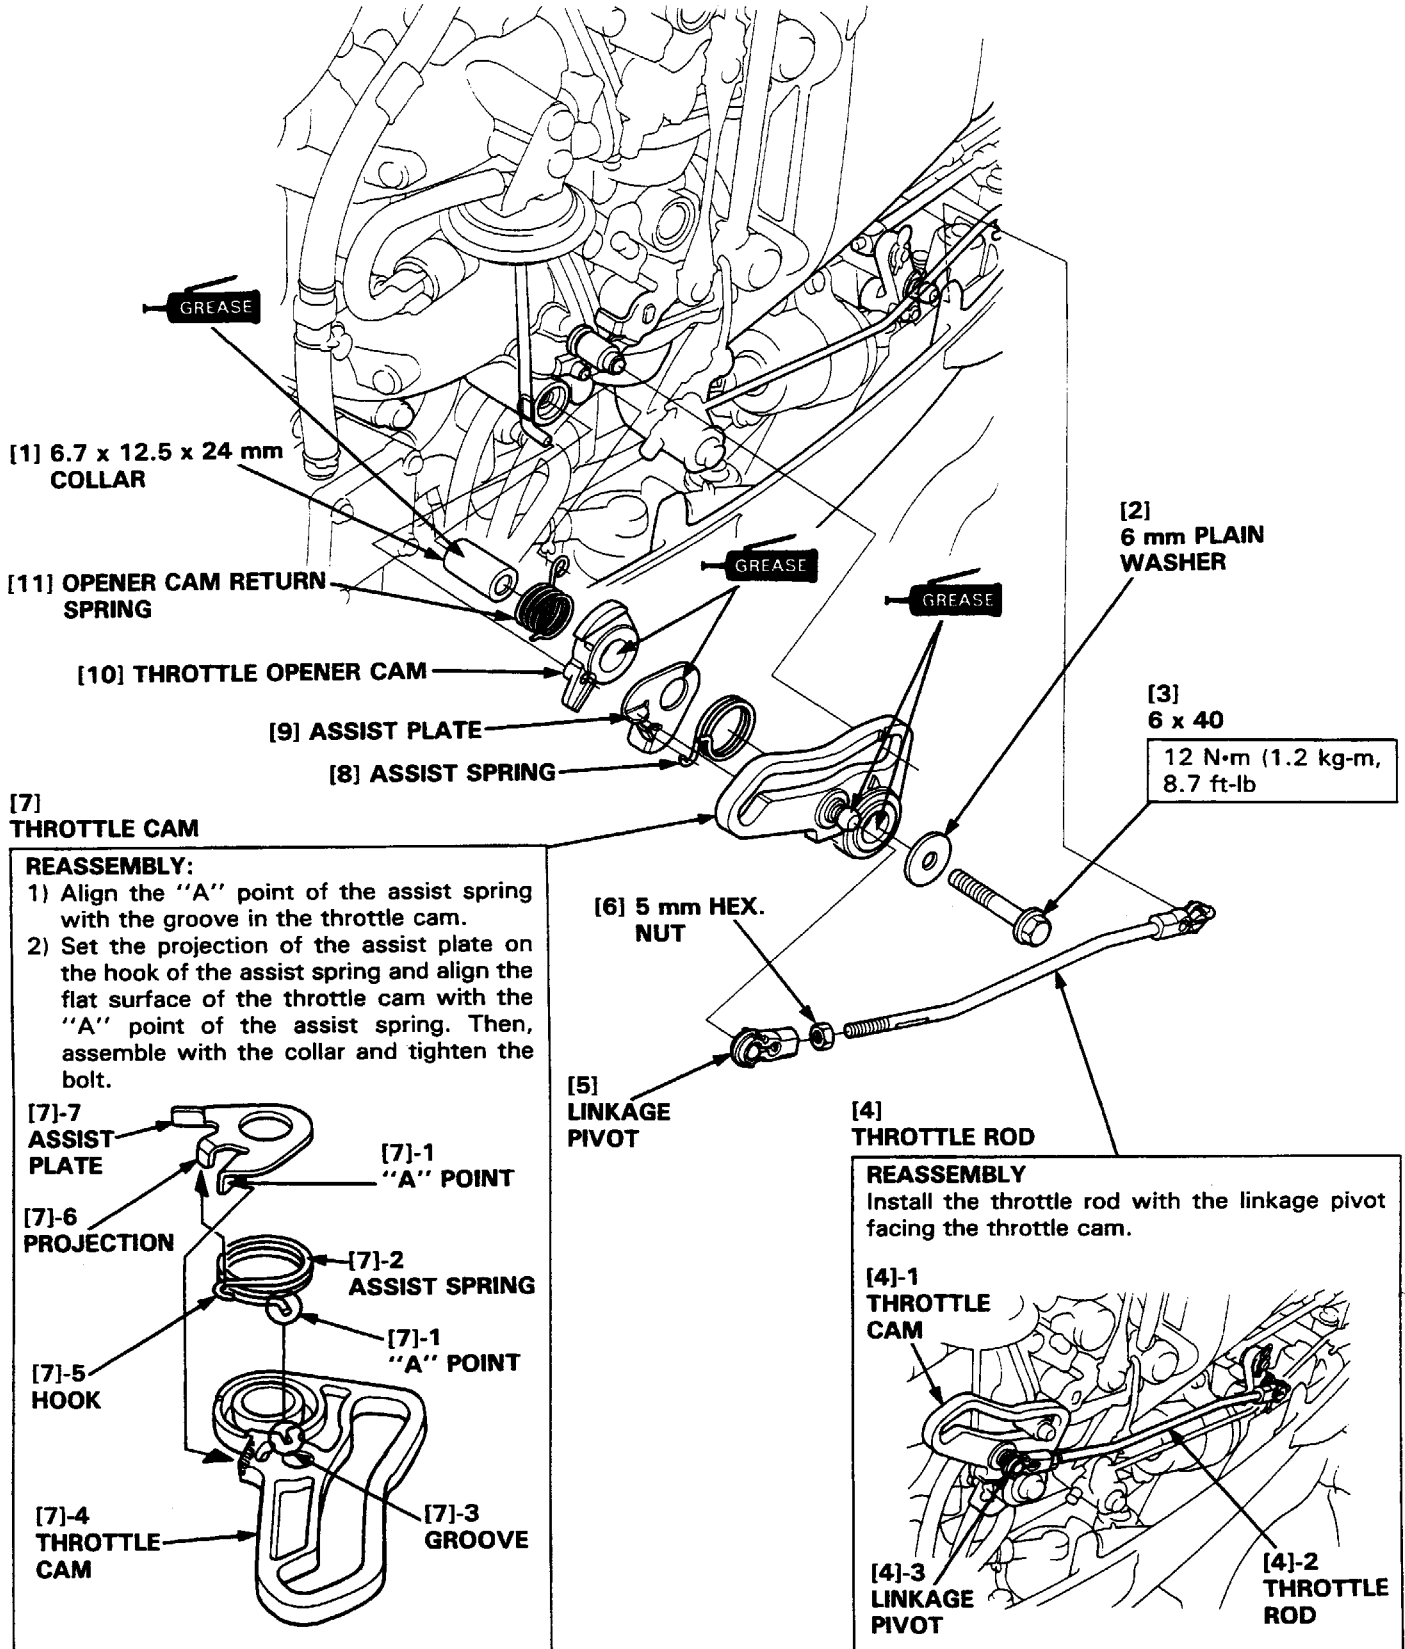

CHOKE KNOB ROD

a. DISASSEMBLY/REASSEMBLY


- 1) Remove the engine cover (P. 4-2) and silencer cover (P. 5-2).
- 2) Disconnect the throttle rod from throttle arm.
- 3) Disconnect the remote choke solenoid 2P connector (Remote control type only).

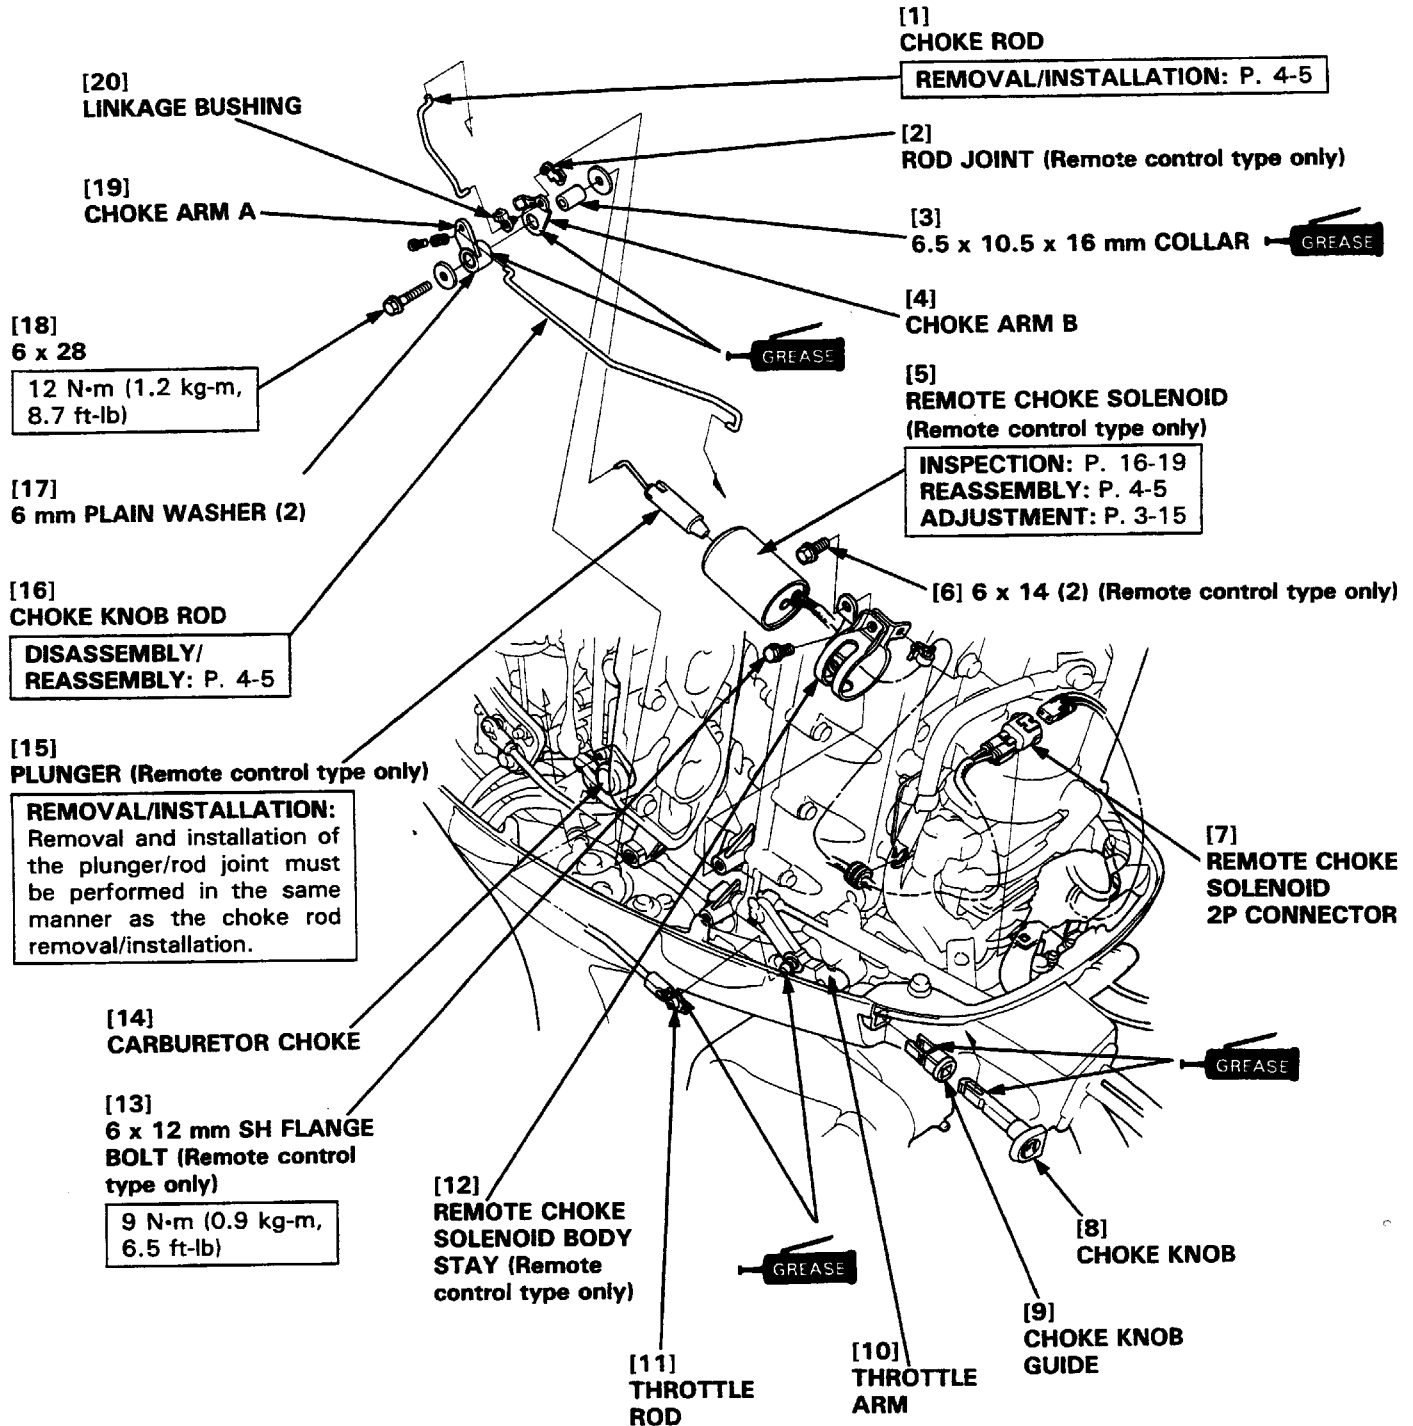

• CHOKE KNOB ROD

DISASSEMBLY/REASSEMBLY:


- 1) Pull the choke knob, then push it while holding the choke knob rod. Pull up the choke knob rod and disconnect it from the choke knob and choke arm A.
- 2) To reinstall the choke knob rod, set it on the choke arm A, push the choke knob, and connect the choke knob rod to the choke knob. Pull the choke knob as full as it goes.

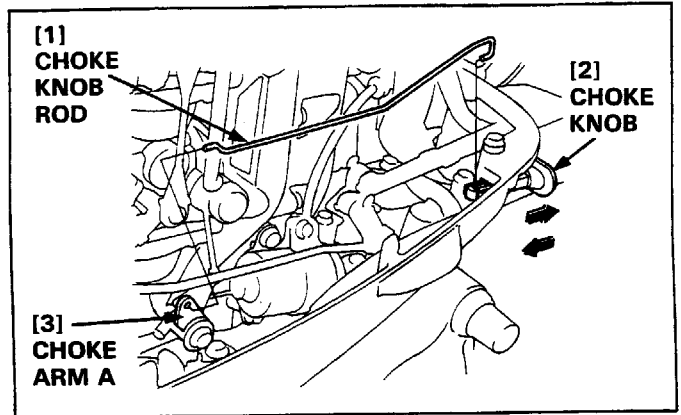

• CHOKE ROD


DISASSEMBLY:

Hold the choke rod and push down the linkage bushing to remove it from the rod.

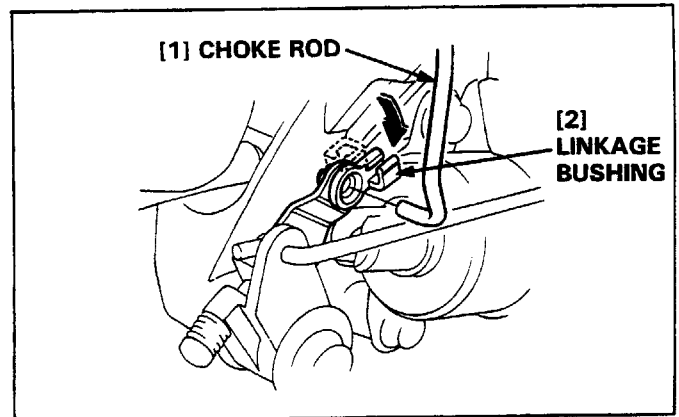

REASSEMBLY:


- 1) Connect the choke rod to the carburetor choke, then connect it to the choke arm. Be sure that the choke rod is connected as shown.
- 2) Push the linkage bushing up and set the linkage bushing on the choke rod.

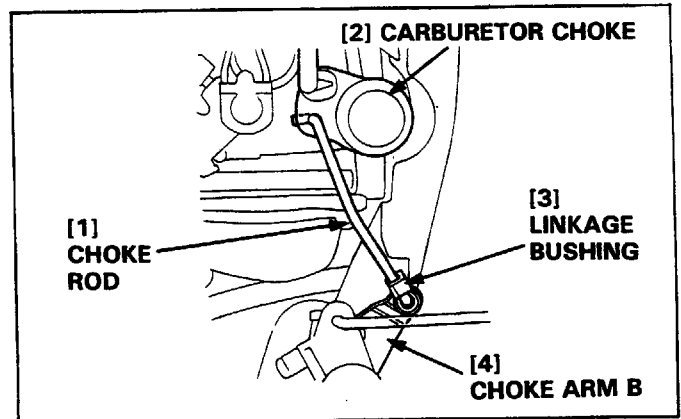

• REMOTE CHOKE SOLENOID (Remote control type only)

REASSEMBLY:

- 1) Set the solenoid body stay on the engine and tighten with the two 6 x 14 mm flange bolts.
- 2) Set the remote choke solenoid on the solenoid body stay with the "↑" mark on the reverse side of the remote choke solenoid pointing up, then loosely tighten it with the 6 x 12 mm SH flange bolt.
- 3) Connect the plunger rod to the choke arm B and clamp it with the rod joint.
- 4) Adjust the remote choke solenoid following the step 5 and the subsequent steps of the remote choke solenoid adjustment (P. 3-15).

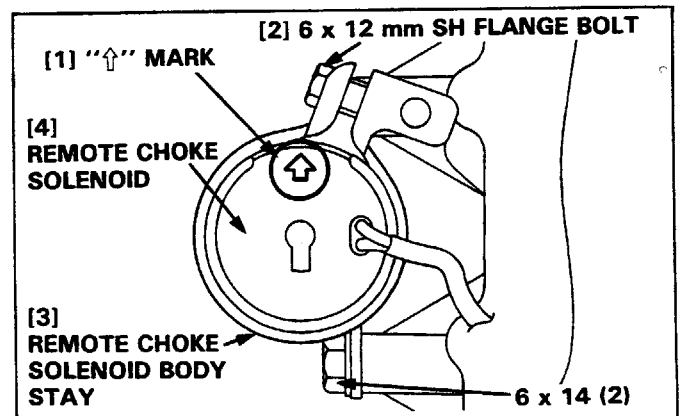


FUEL SYSTEM

SILENCER COVER	5-2
CARBURETOR	5-2
FUEL PUMP/FUEL STRAINER	5-10
FUEL TUBE	5-12
FUEL TANK (MODEL WITH FUEL TANK)	5-13

SILENCER COVER

a. DISASSEMBLY/REASSEMBLY

- 1) Remove the engine cover.

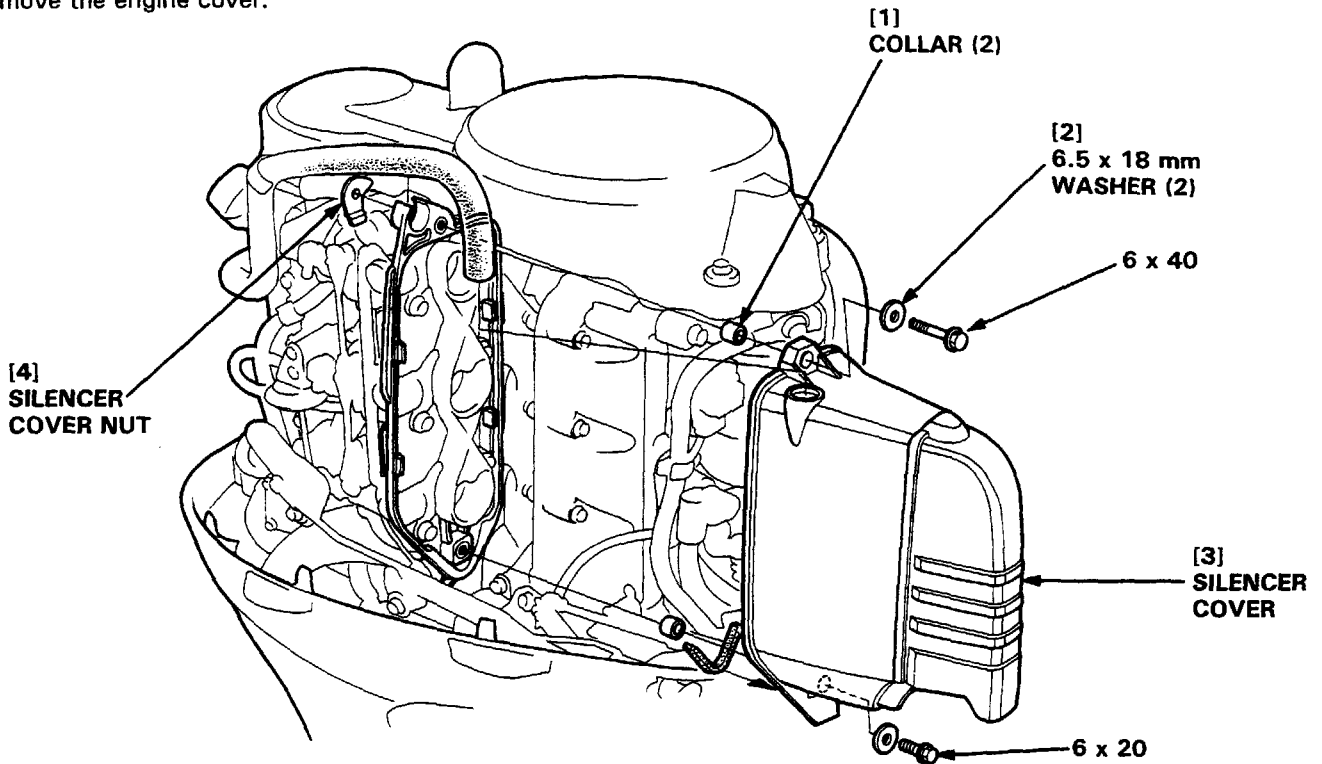



CARBURETOR

a. REMOVAL/INSTALLATION



⚠ WARNING

- Remove the drain screws and drain the carburetor before removing.
- Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

- 1) Remove the silencer cover (see above).
- 2) Pull the choke knob, then push it while holding the choke knob rod. Pull up the choke knob rod and disconnect it from the choke knob and choke arm A.
- 3) Remove the linkage pivot from the throttle cam.

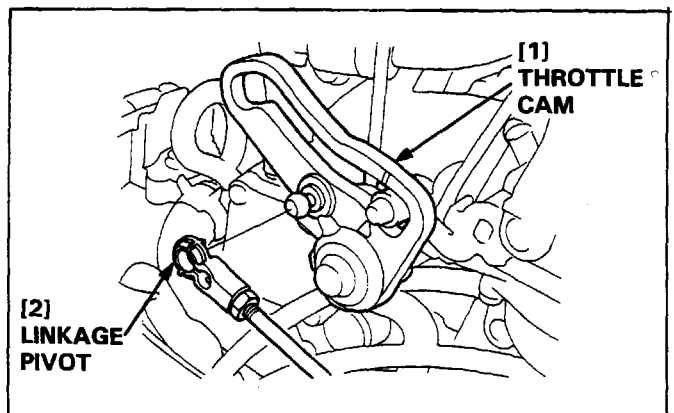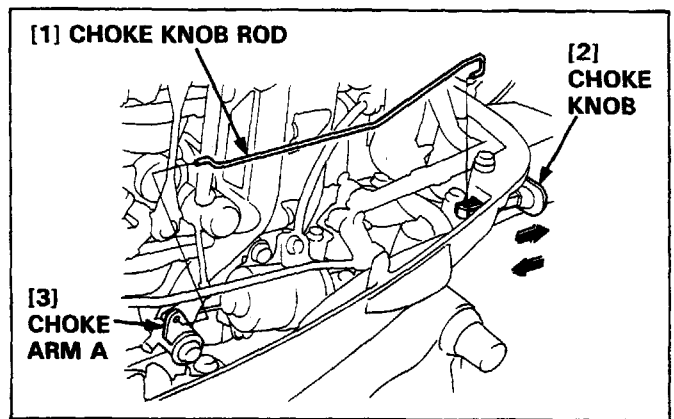

- 4) Loosen the 6 x 12 mm SH flange bolt (Remote control type only).
- 5) Slide the remote choke solenoid rearward, detach the rod joint from the plunger rod, and remove the rod from the choke arm B (Remote control type only).
- 6) Disconnect the breather tube. Disconnect the fuel tube C and 5.3 x 65 mm fuel tube. Remove the 6 x 25 mm flange bolt, five 6 x 32 mm flange bolts and the two 6 mm cap nuts. Remove the carburetor assembly from the engine.

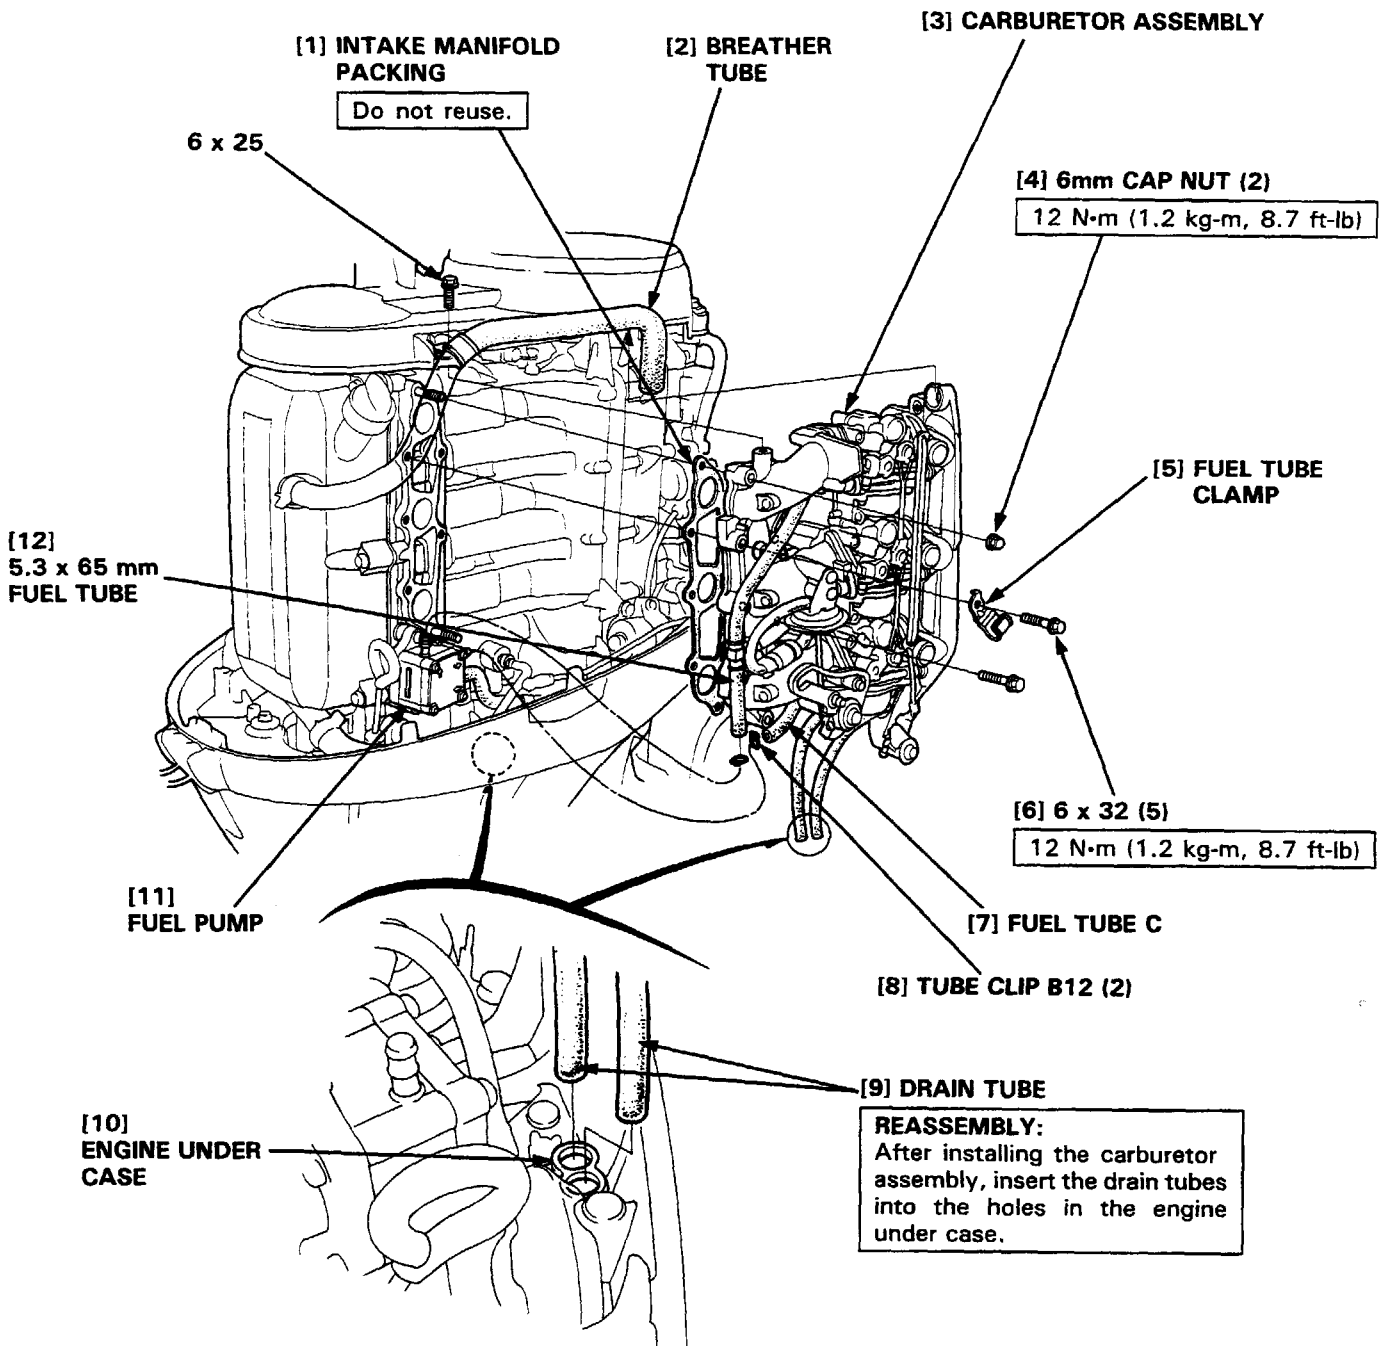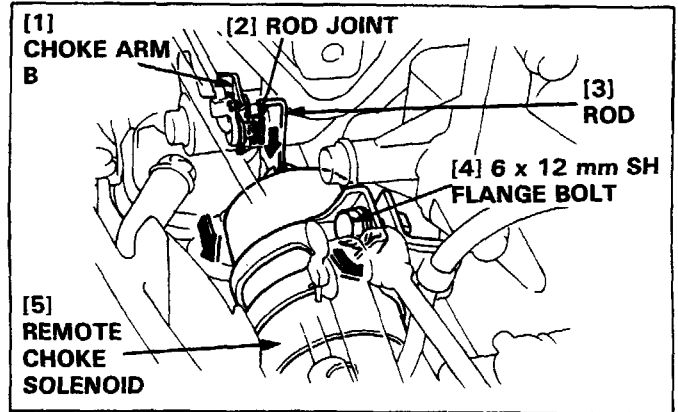

b. DISASSEMBLY/REASSEMBLY


• FUEL LINE

NOTE

- Before installing the fuel tubes, check for deterioration or damage. Replace if necessary.

1) Remove the carburetor assembly (p. 5-3).


Parts marked with “*1:” can be disassembled and reassembled with the carburetor mounted on the frame.

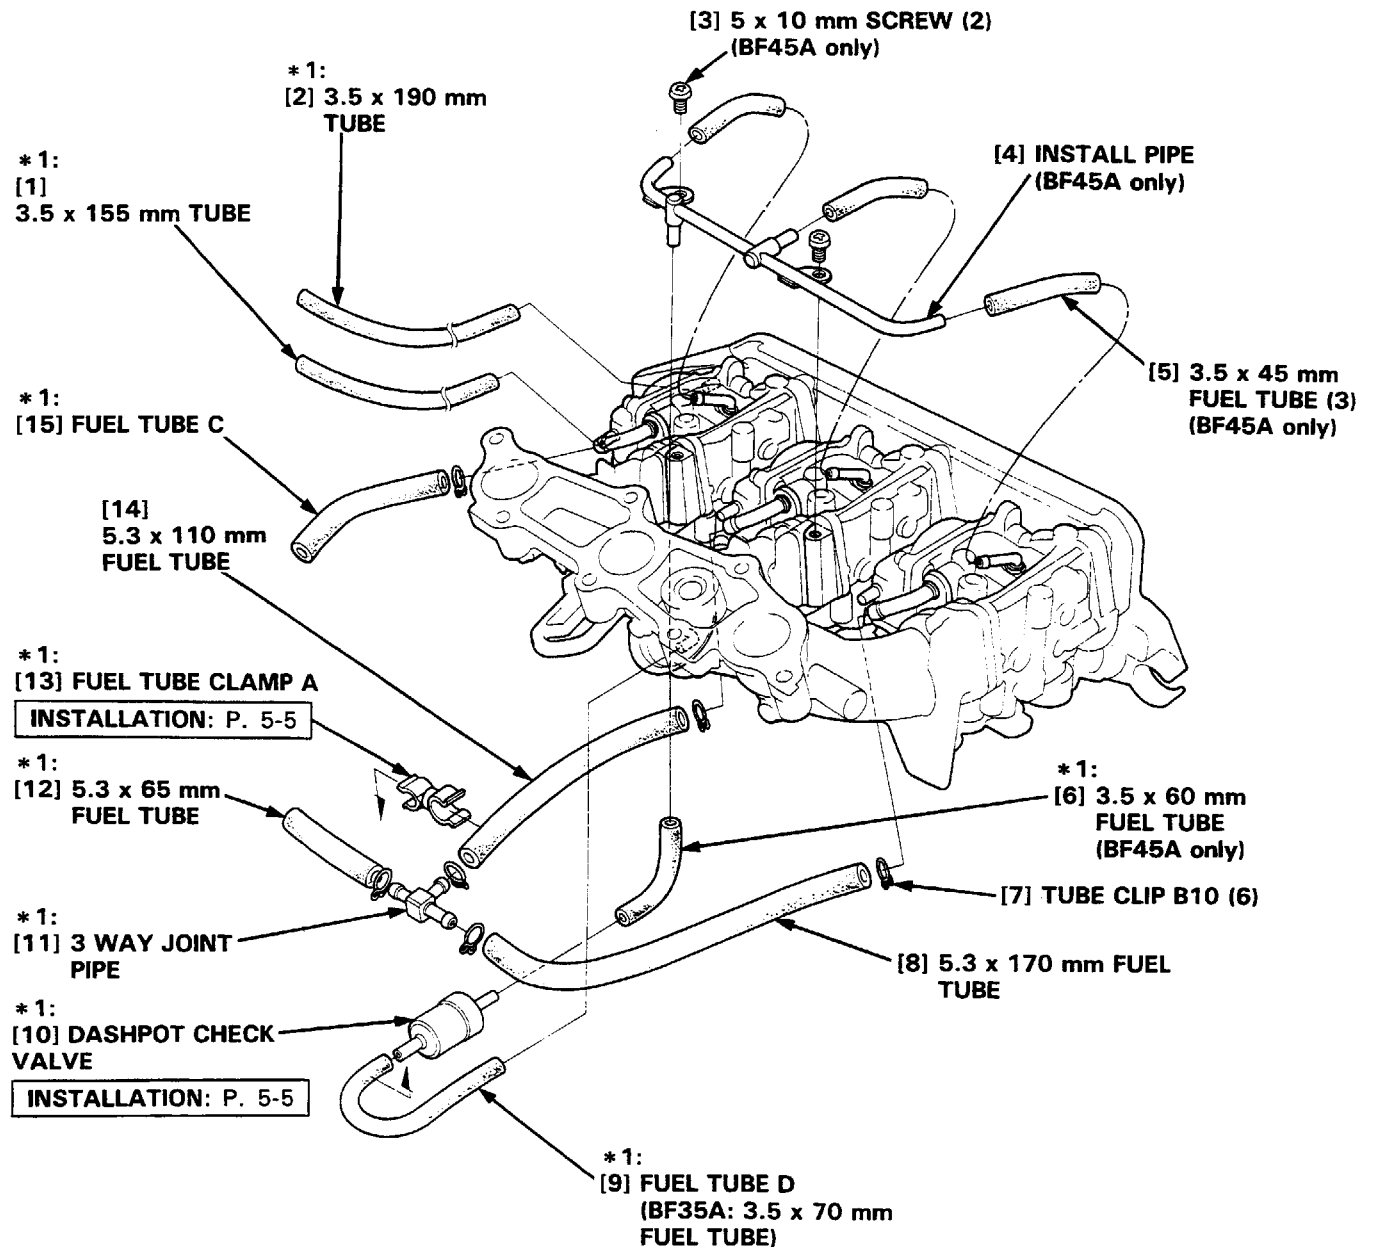

• **DASHPOT CHECK VALVE/FUEL TUBE CLAMP A INSTALLATION**


BF45A:

Install the dashpot check valve so that "⇒" mark is toward the carburetor side.
Clamp the fuel tubes with the fuel tube clamp A as shown.

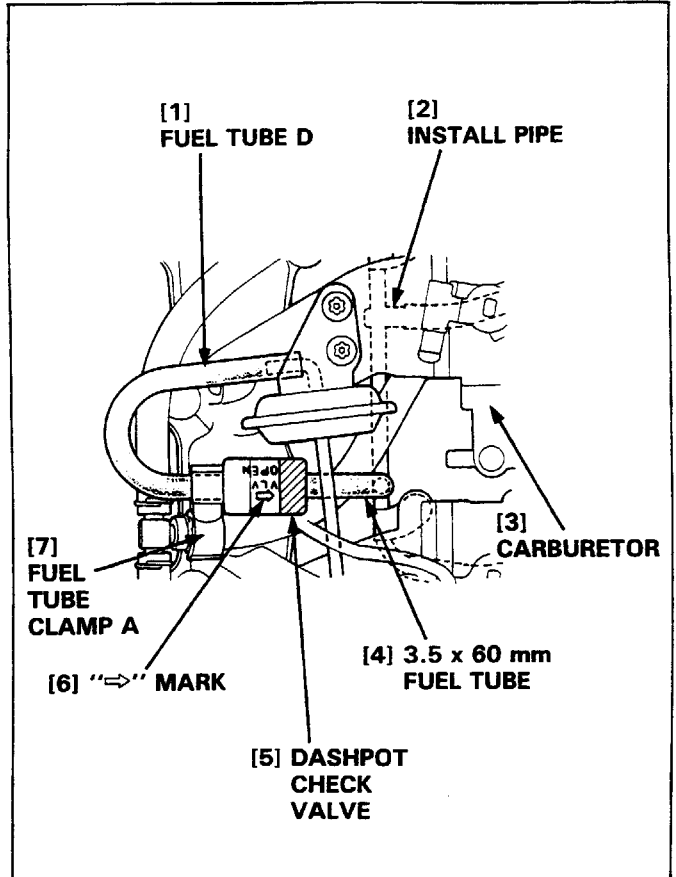

BF35A:


Install the dashpot check valve so that "⇒" mark is toward the engine under cover side.
Clamp the fuel tubes with the fuel tube clamp A as shown.

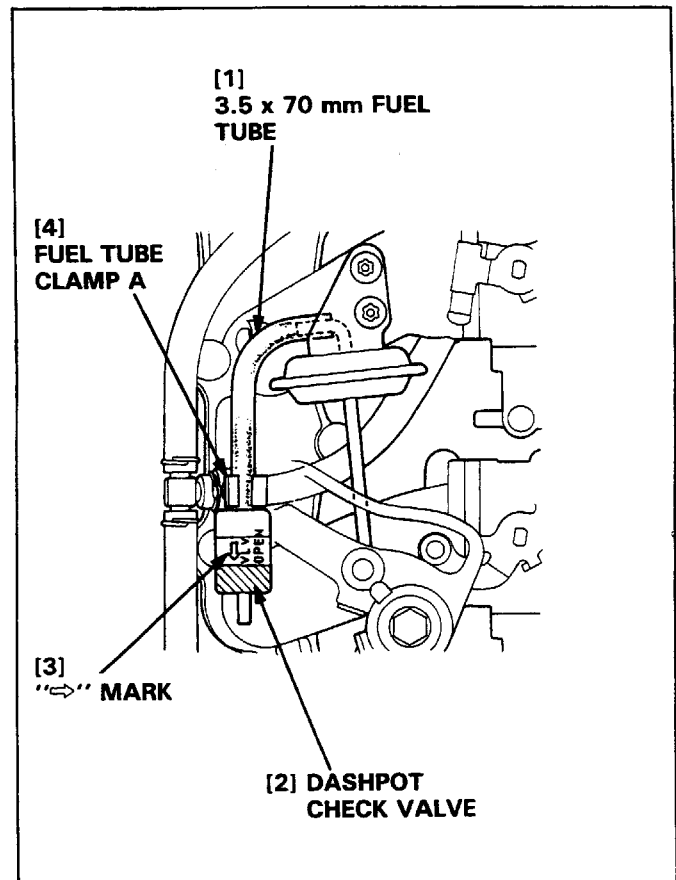

• THROTTLE CAM/CHOKE ARM

- The throttle cam/chock arm can be disassembled and reassembled with the carburetor mounted on the frame.


1) Remove the engine cover (P. 4-2).

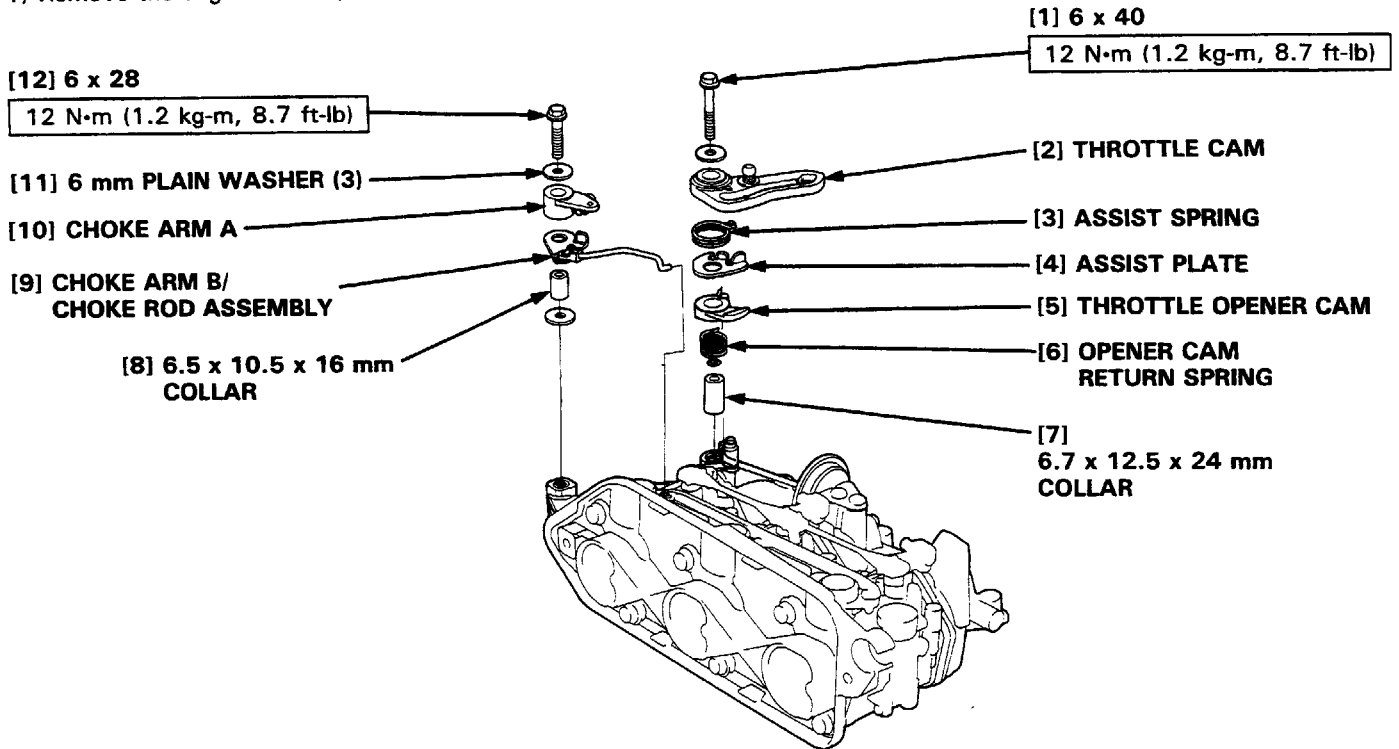

• THROTTLE CAM

REASSEMBLY:

- 1) Align the "A" point of the assist spring with the groove in the throttle cam.
- 2) Set the projection of the assist plate on the hook of the assist spring and align the flat surface of the throttle cam with the "B" point of the assist plate. Then, assemble with the collar and tighten the bolt.

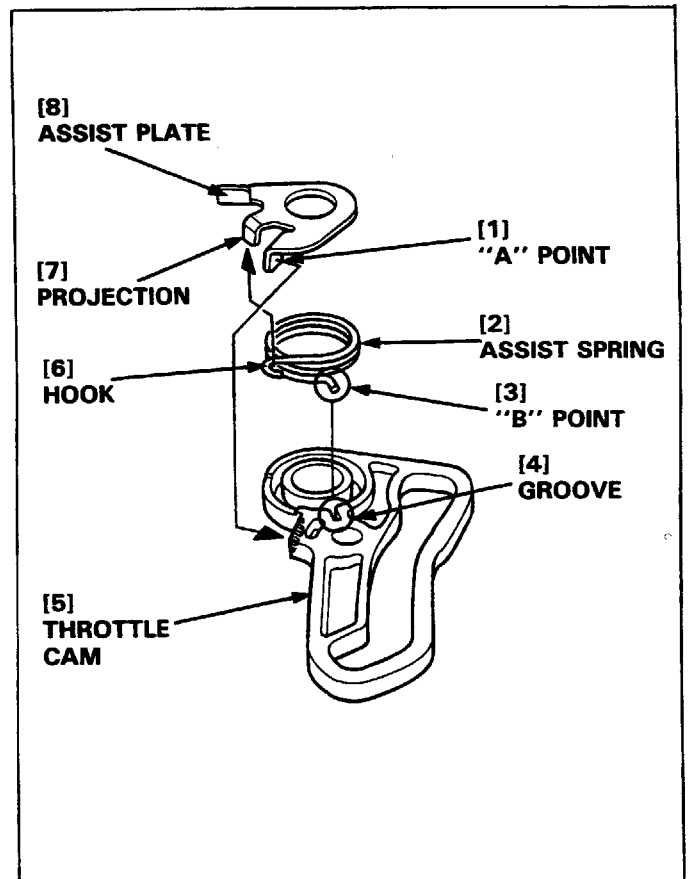


• MANIFOLD

1) Remove the carburetor assembly (P. 5-3).


[7] 6 x 14 mm TORX. BOLT (2)

REMOVAL/INSTALLATION:
Remove/install the 6 x 14 mm torx. bolts using the special tools.

[7]-1 6 x 16 mm TORX. BOLT (2)
[7]-2 ^{S. TOOL} TORX. BIT HANDLE
[7]-3 ^{S. TOOL} SCREW T30H

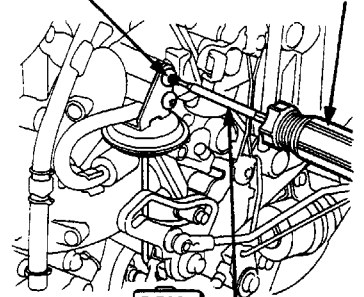


07703-0010300
07703-0010600

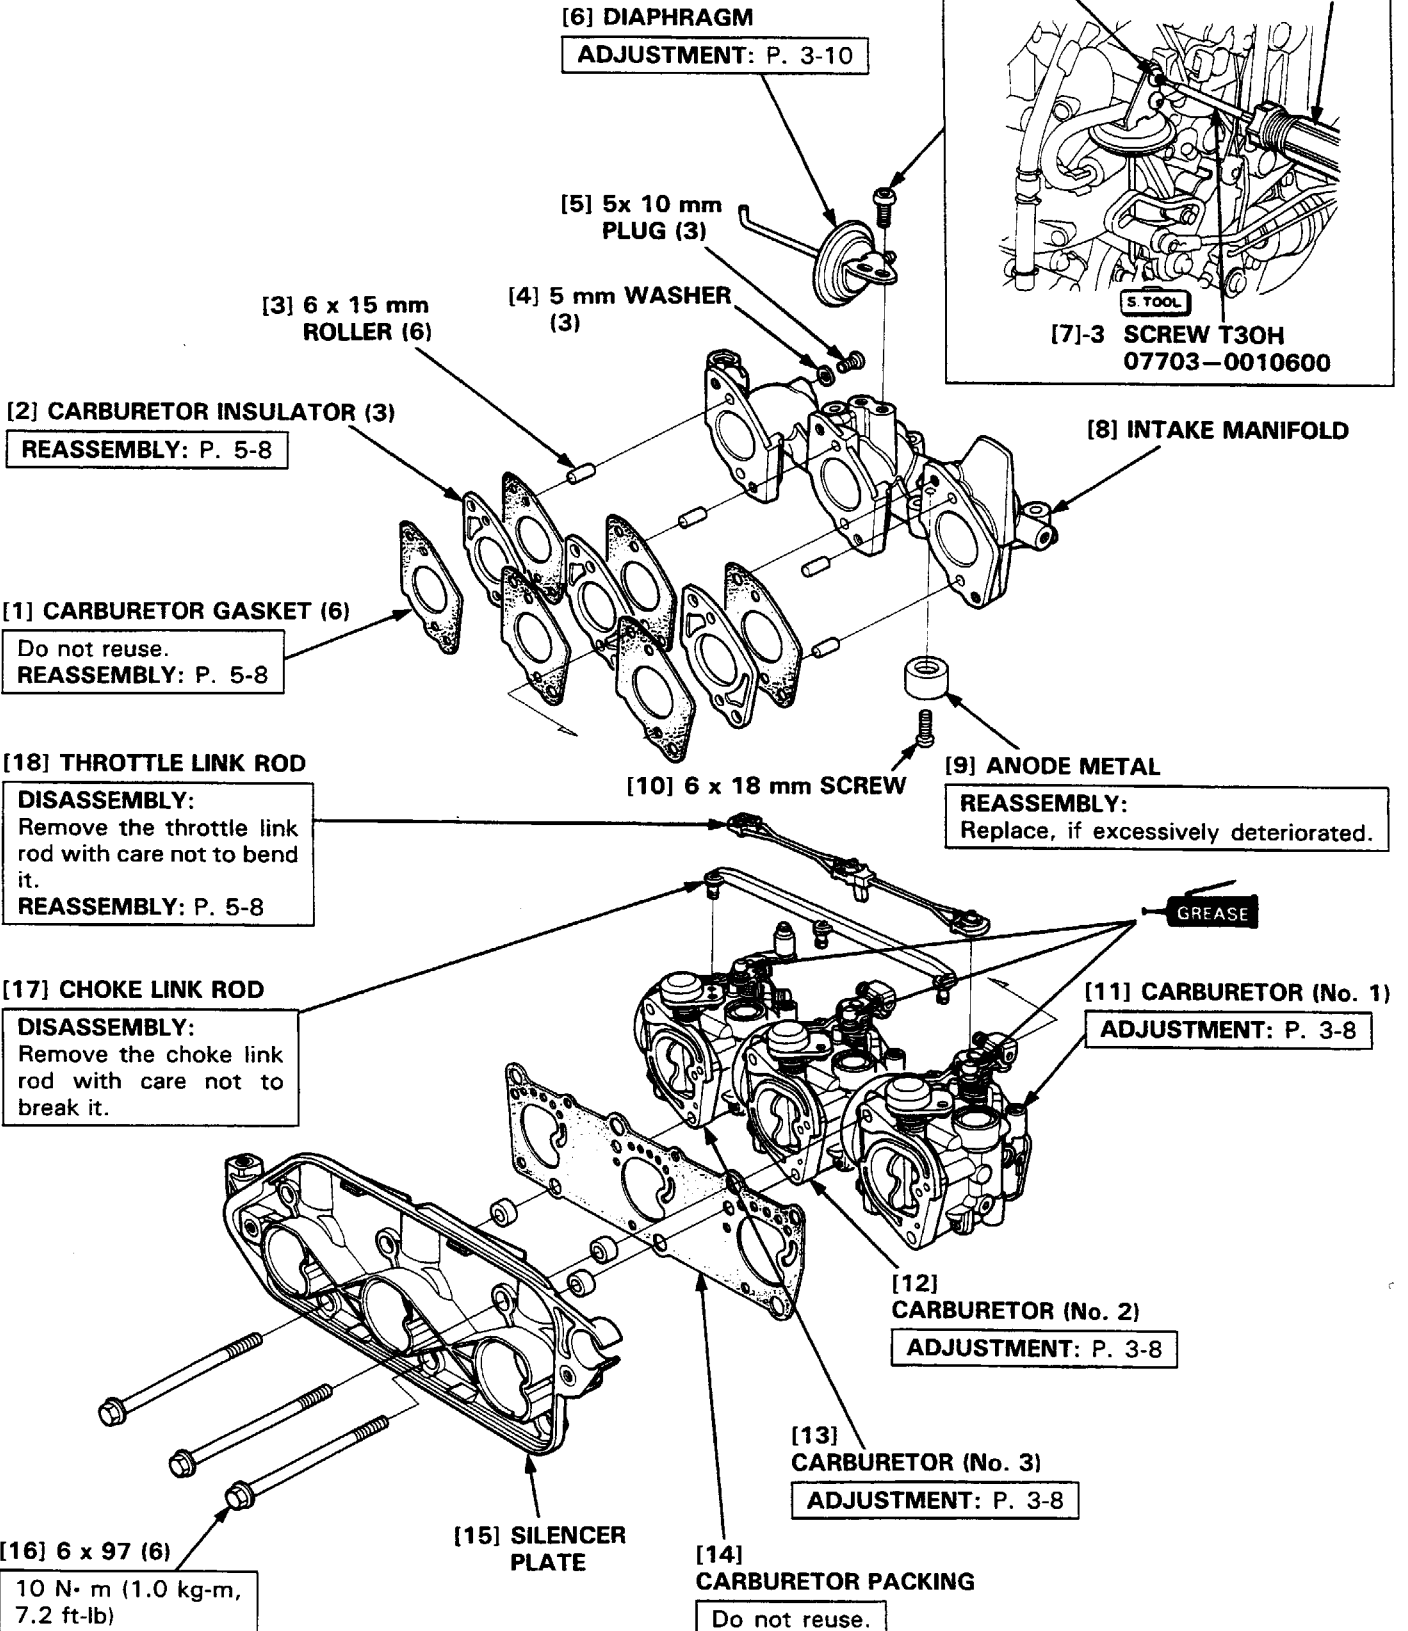

• **CARBURETOR GASKET/INSULATOR**

REASSEMBLY:


Note the installation direction.

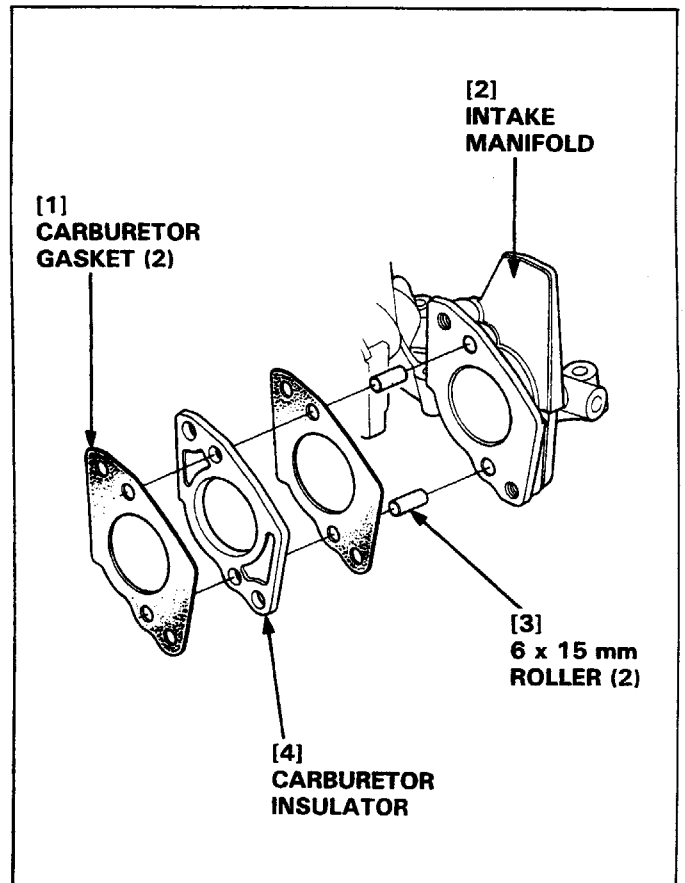

• **THROTTLE LINK ROD**

REASSEMBLY:

Install the throttle link rod with the "UP" mark at the center of the rod facing up.

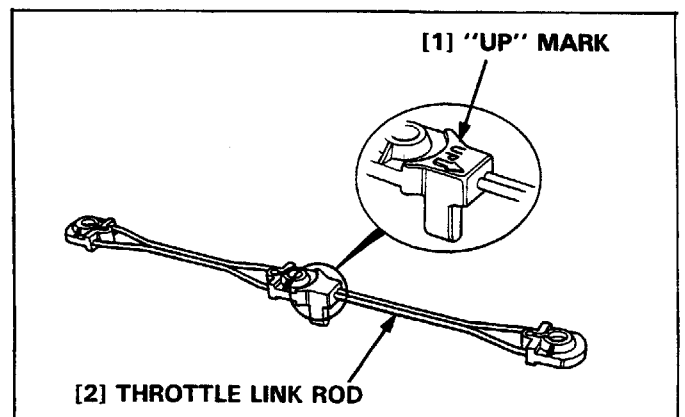

• CARBURETOR

▲ WARNING

- Remove the drain screw and drain the carburetor before disassembling.
- Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

1) Remove the manifold (P. 5-7).

[13] CARBURETOR BODY #1,2

[12] CARBURETOR BODY #3

[10] MAIN NOZZLE

REASSEMBLY:


Clean thoroughly with compressed air before installation.

[9] FLOAT VALVE

REASSEMBLY:

Check for worn valve or weak spring before installation.

[9]-1 FLOAT VALVE

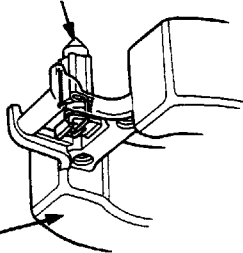

[9]-2 FLOAT

[8] FLOAT

REASSEMBLY:

Check for smooth movement after installation.

[11] FLOAT PIN

[1] THROTTLE STOP SCREW

ADJUSTMENT: P. 3-8

[2] PILOT SCREW

REASSEMBLY:

Inspect for wear or damage before installation.

ADJUSTMENT: P. 3-8

[3] THROTTLE STOP SCREW

ADJUSTMENT: P. 3-8

[4] MAIN JET (BF35A: #102, BF45A: #125)

REASSEMBLY:

Clean thoroughly with compressed air before installation.

[5] JET SET

REASSEMBLY:

Clean thoroughly with compressed air before installation

[6] DRAIN SCREW

[7] FLOAT CHAMBER

REASSEMBLY:

Install so that the drain screw faces to the pilot screw side.

c. INSPECTION

• FLOAT LEVEL HEIGHT

With the carburetor in an upright position, measure the distance between the float top and the carburetor body when the float just contacts the float valve.


Standard float height	14 mm (0.6 in)
-----------------------	----------------

If the height is out of specification, replace the float.

Check the float operation.

S. TOOL

[1] FLOAT LEVEL GAUGE
07401-0010000

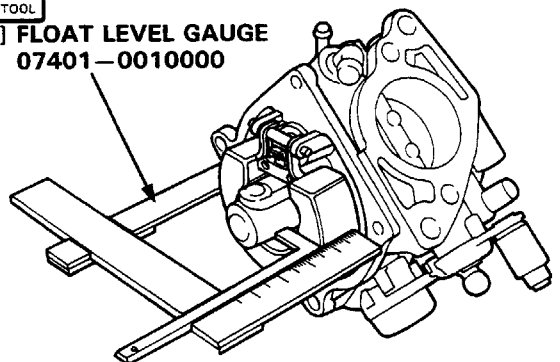


FUEL PUMP/FUEL STRAINER

a. DISASSEMBLY/REASSEMBLY

NOTE


- Before installing the fuel tubes, check for deterioration or damage. Replace if necessary.

1) Remove the engine cover.

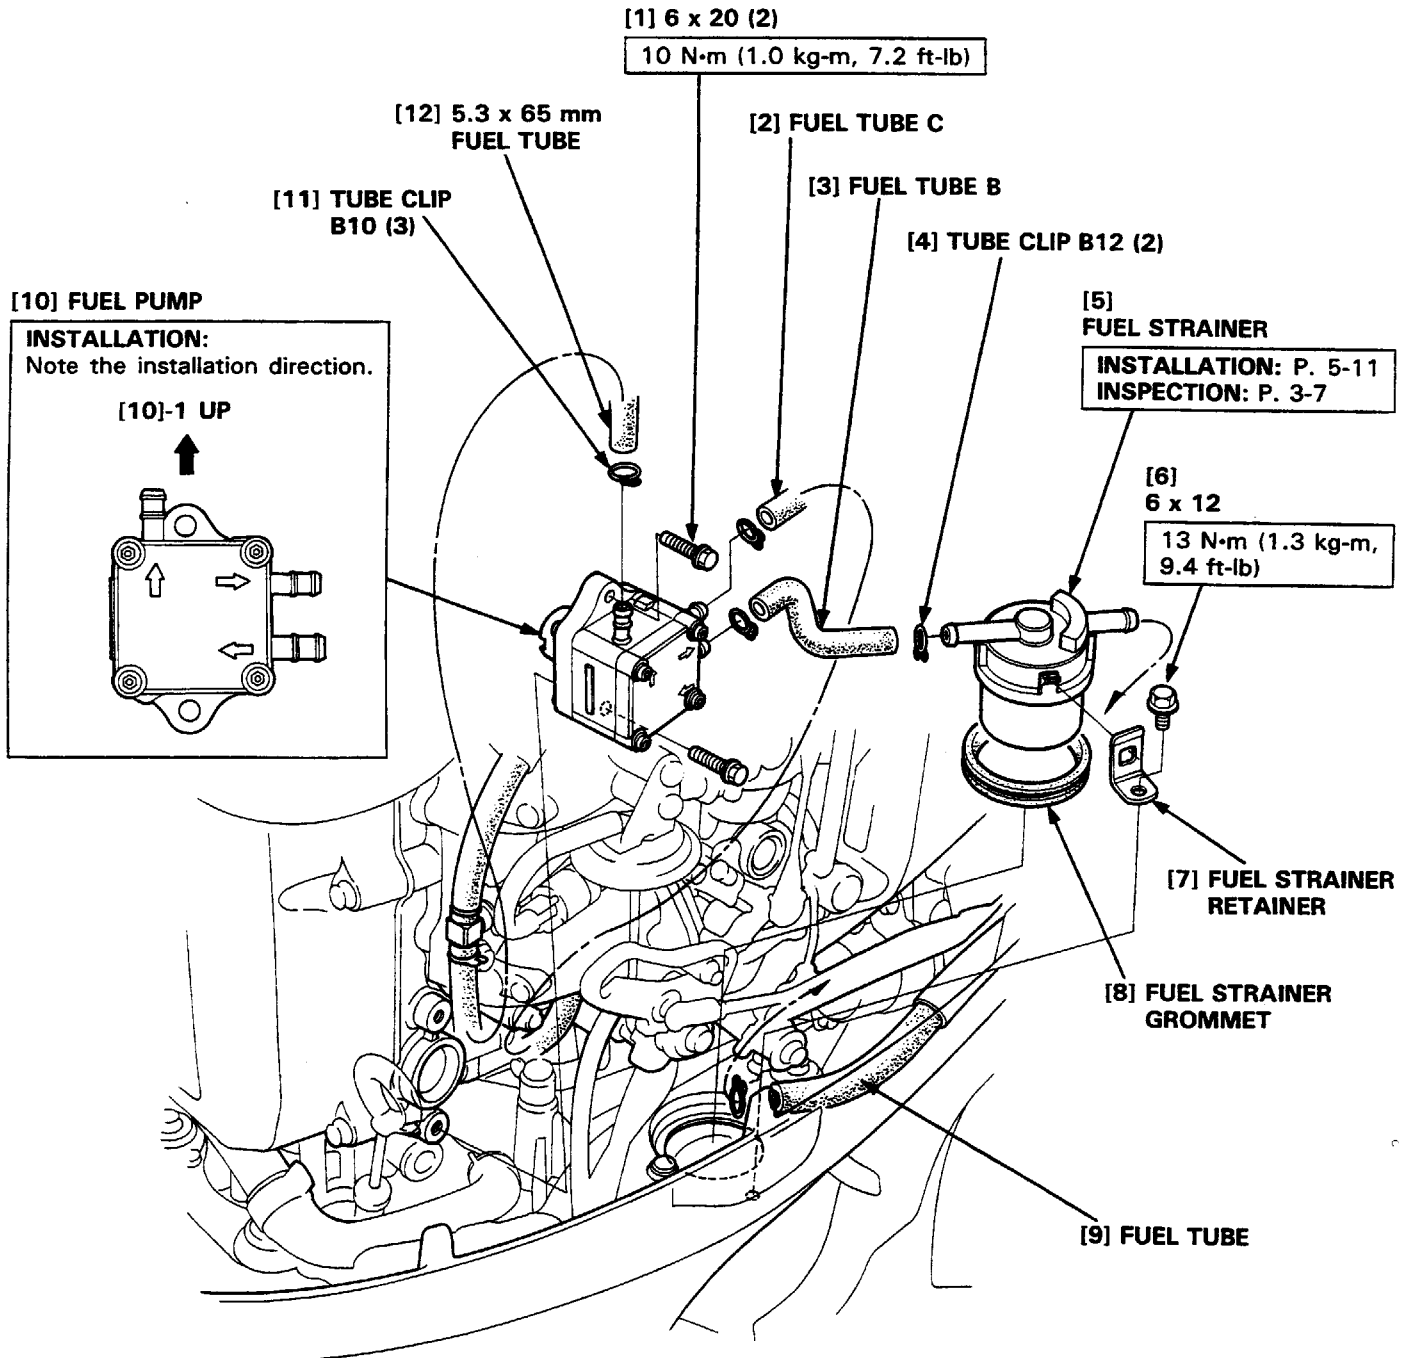

• FUEL STRAINER**INSTALLATION:**

Install the fuel strainer so that "←" mark is on the fuel pump side and align the projection on the fuel strainer with the hole in the retainer securely.

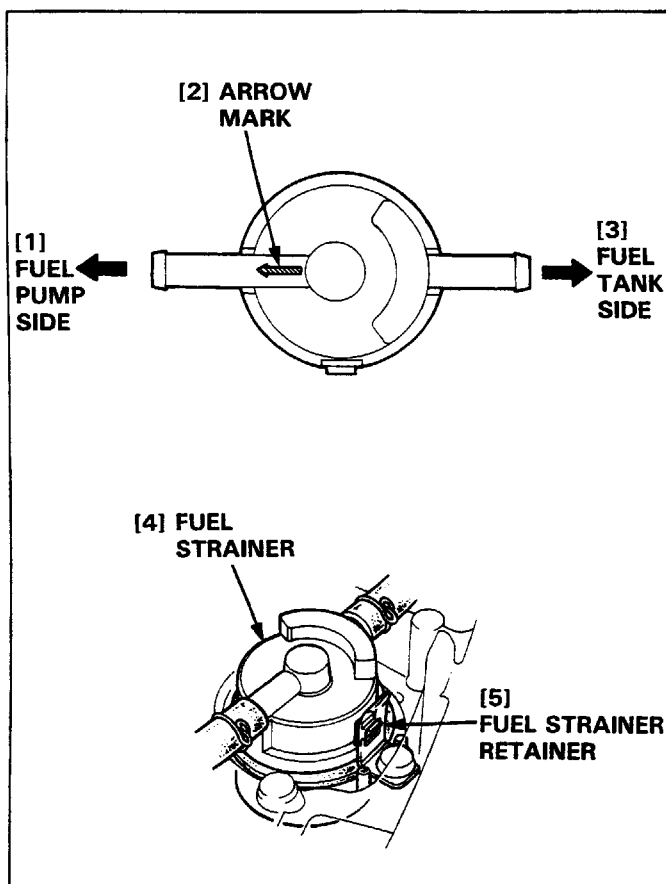


FUEL TUBE

a. DISASSEMBLY/REASSEMBLY

NOTE

- Before installing the fuel tubes, check for deterioration or damage. Replace if necessary.

- 1) Remove the starter motor (P. 16-7).
- 2) Remove the electric parts (P. 16-12).

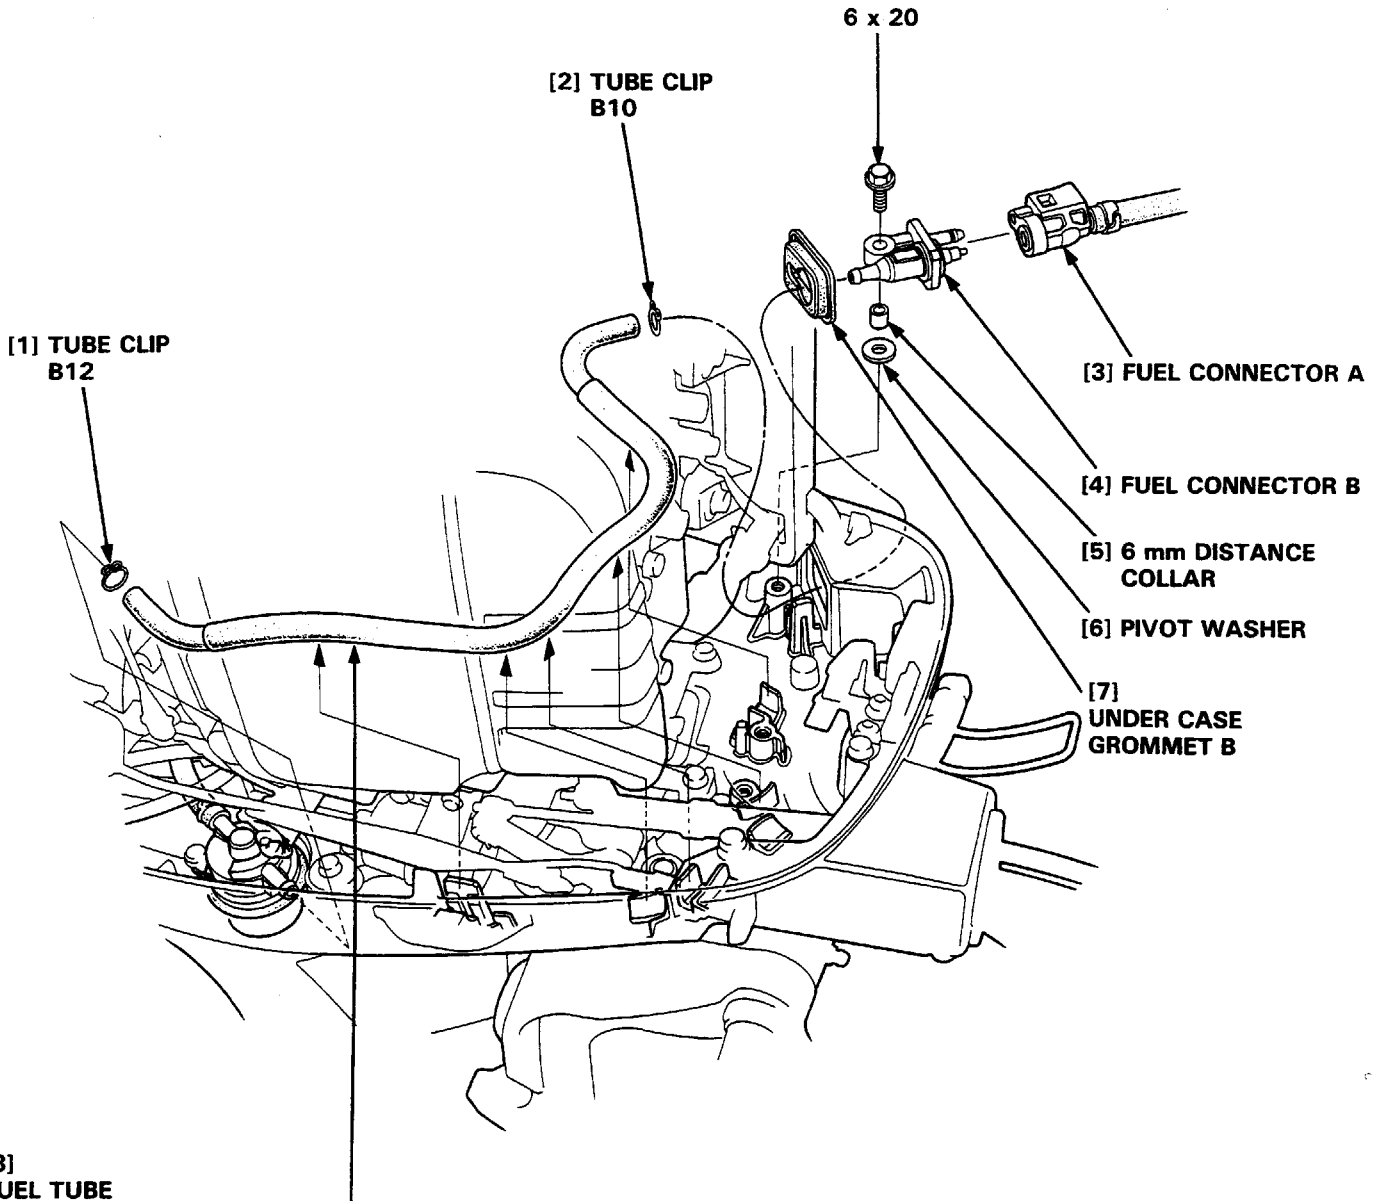


INSTALLATION:
Install the fuel tube to the groove of the engine under case securely.

FUEL TANK (MODEL WITH FUEL TANK)

a. DISASSEMBLY/REASSEMBLY

⚠ WARNING


- Before disassembly, drain the fuel tank and fuel line completely.
- Gasoline is extremely flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks in the area.

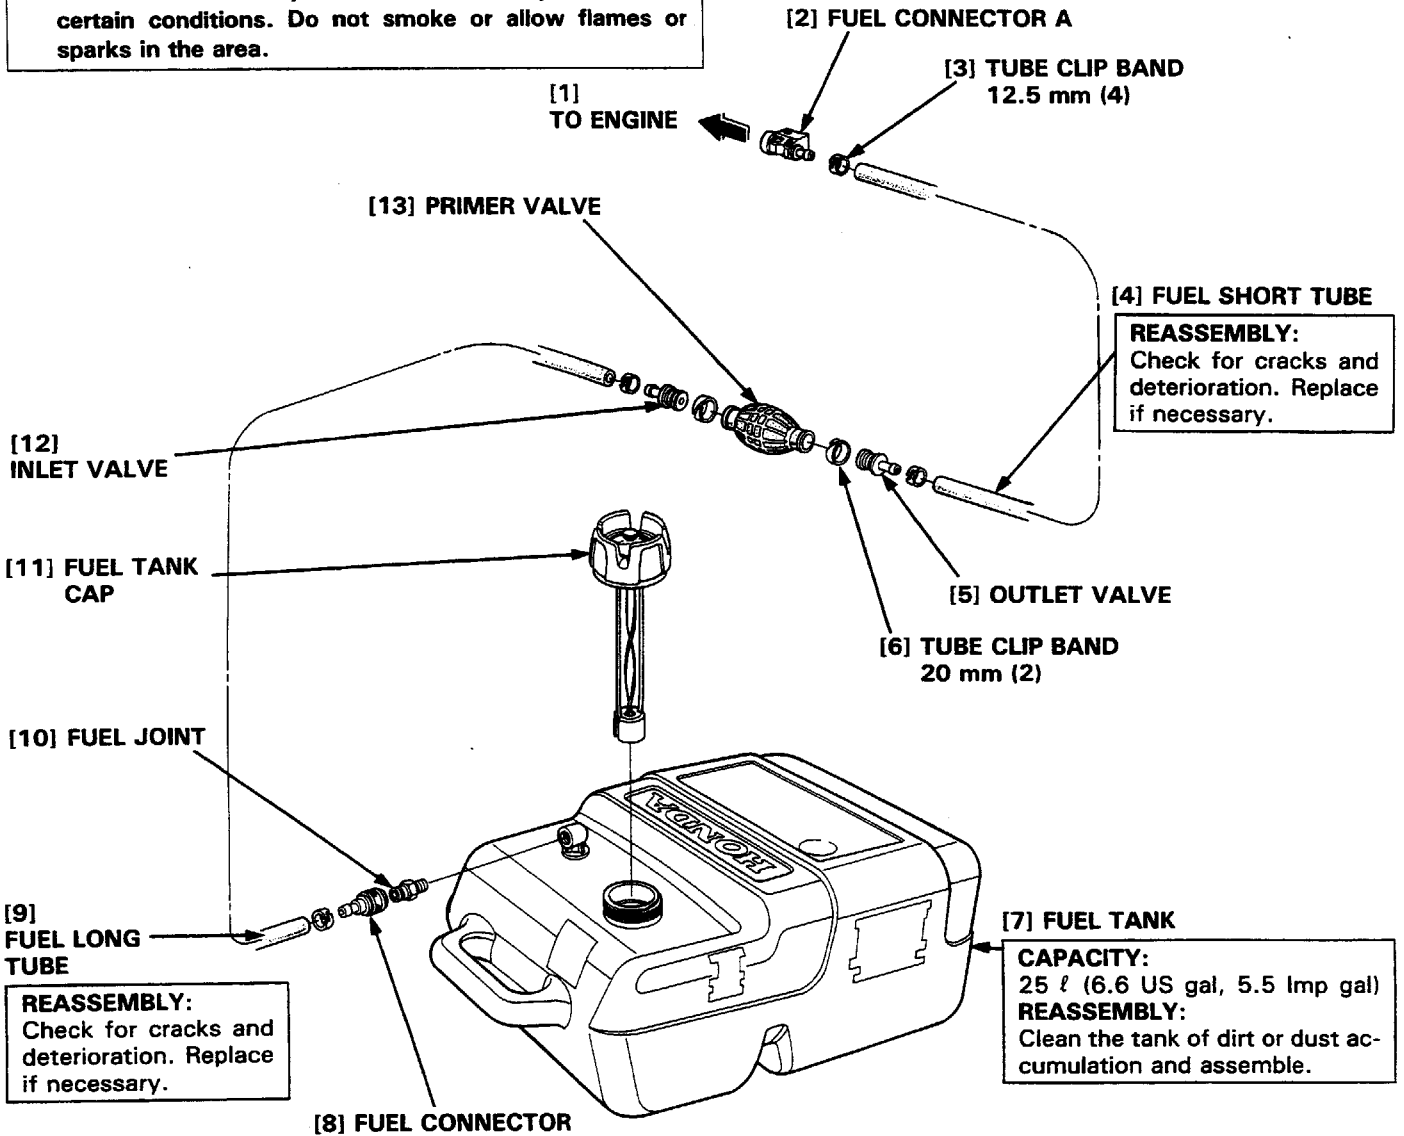

• INLET/OUTLET VALVE INSTALLATION

Install with care not to interchange the inlet valve with the outlet valve.

Install the primary valve so that "←" mark is on the engine side.

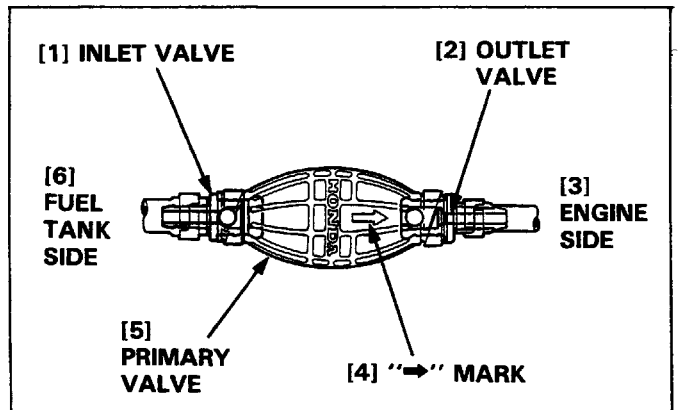

FLYWHEEL/TIMING BELT

FLYWHEEL 6-2


TIMING BELT 6-3



FLYWHEEL

a. DISASSEMBLY/REASSEMBLY

1) Remove the engine cover and the CDI unit cover, and disconnect the charging coil wires and the exciter coil connector.

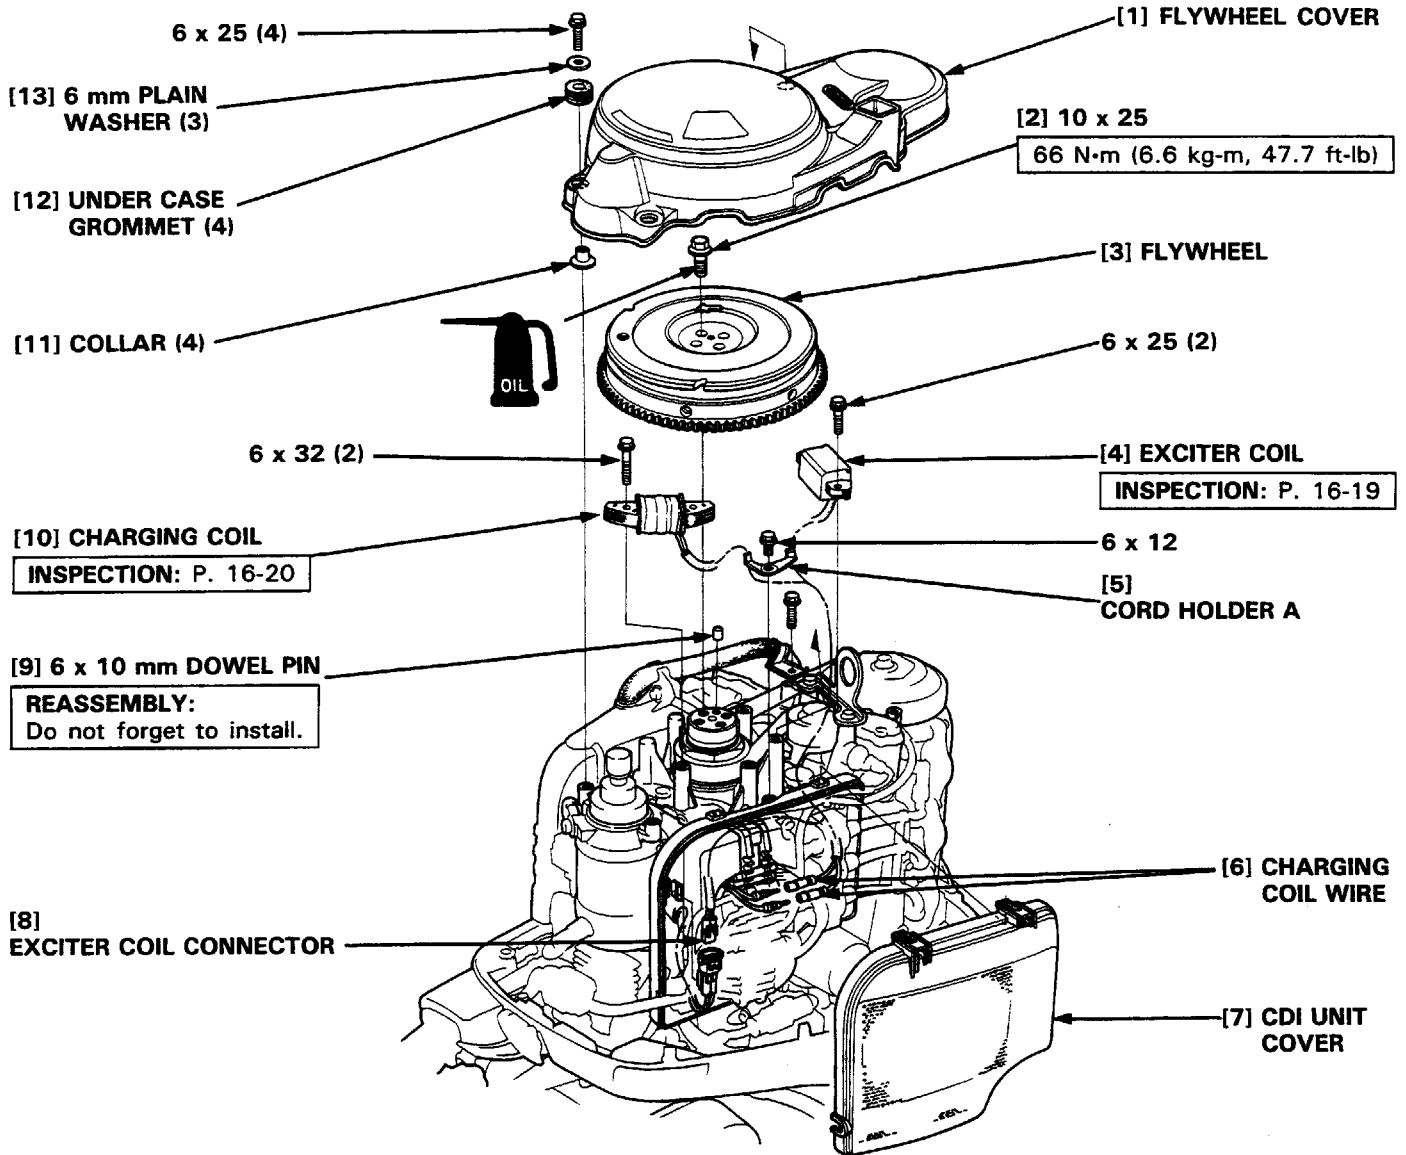


• FLYWHEEL REMOVAL/INSTALLATION

Do not hit the flywheel with a hammer.
Remove/install the flywheel using the special tool.

TOOL:

Ring gear holder


07LPB-ZV30100

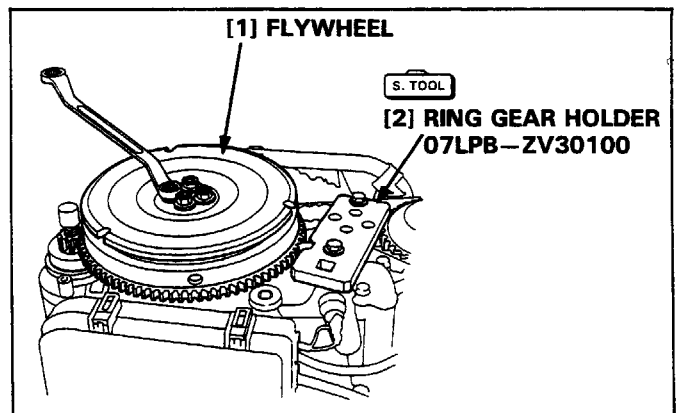

TIMING BELT/PULLEY

a. DISASSEMBLY/REASSEMBLY

1) Remove the flywheel (P. 6-2) and disconnect the pulser coil connector.

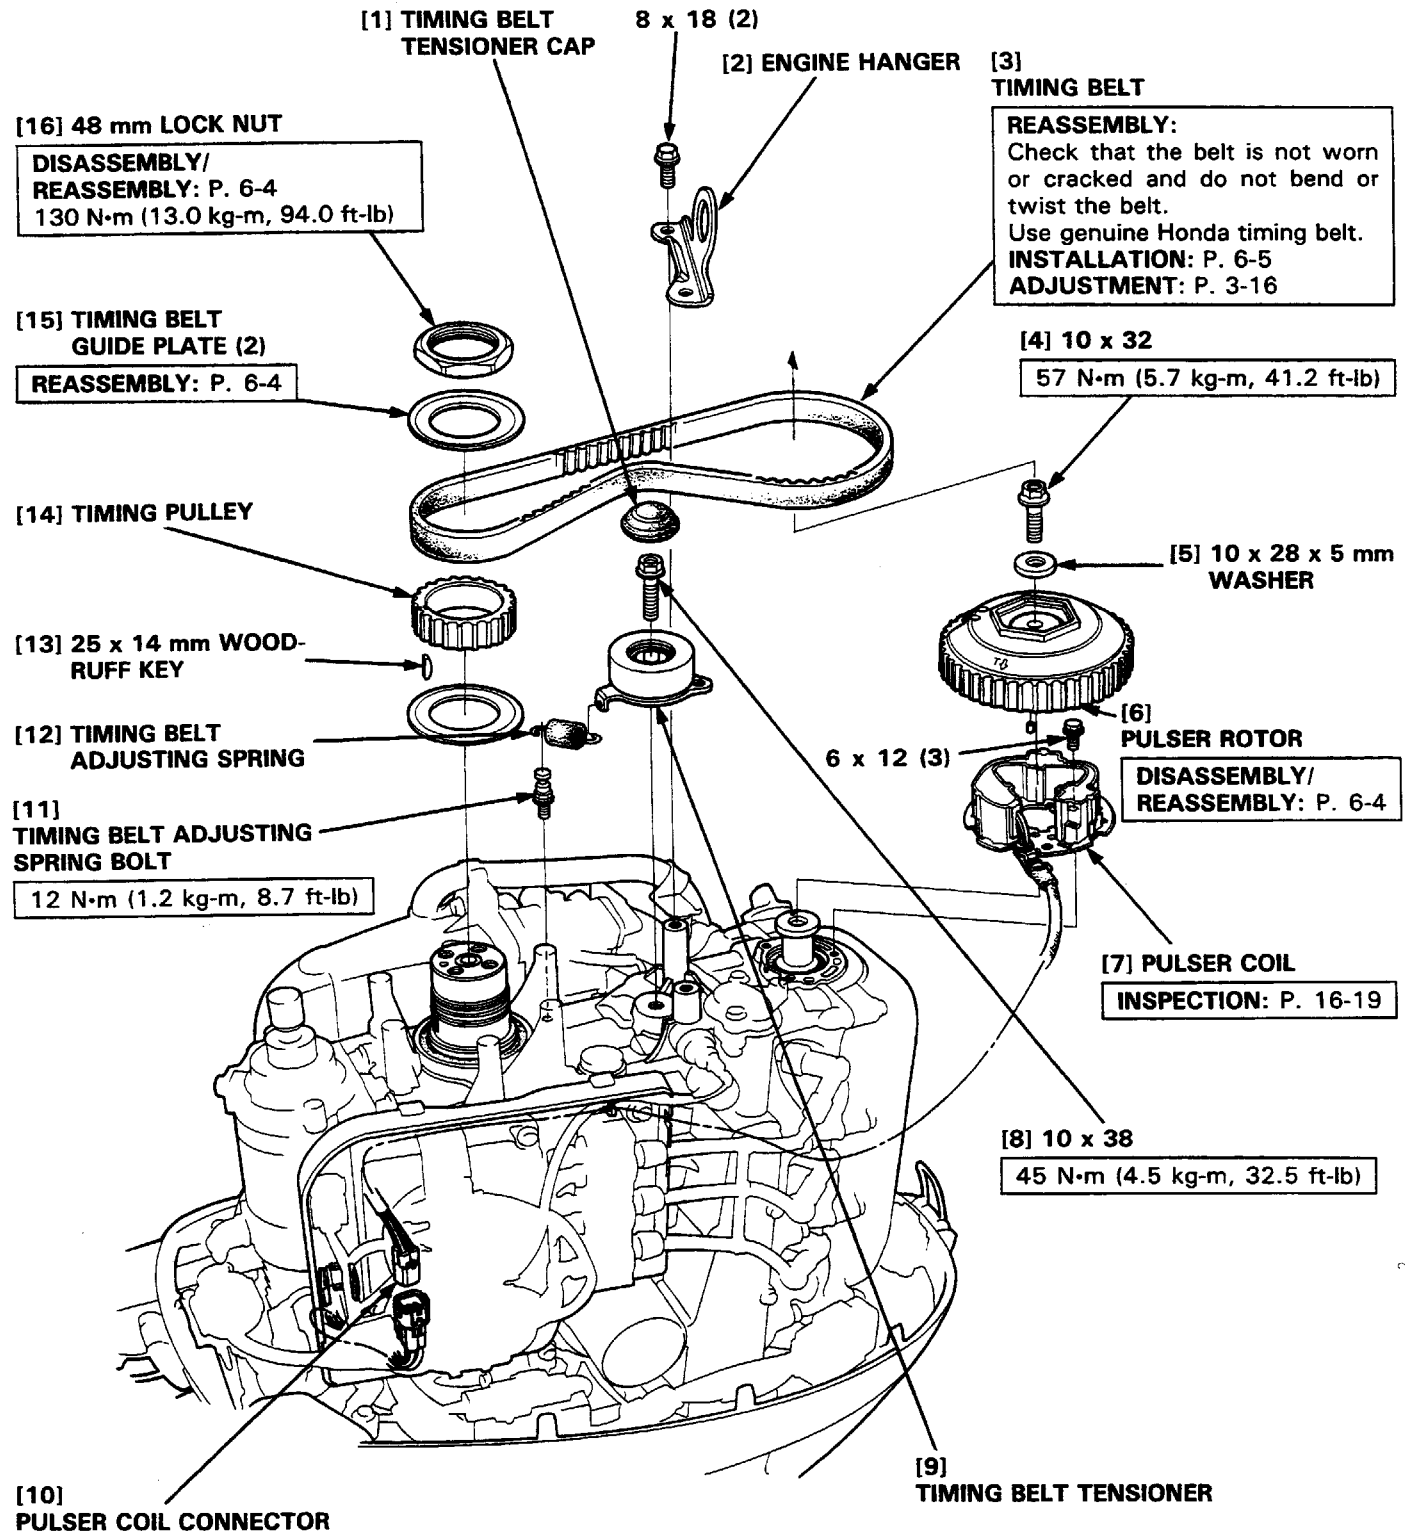


• **PULSER ROTOR**

Remove/install the pulser rotor using the special tool.

TOOL:
56 mm Lock nut wrench 07LPA—ZV30200

TORQUE: 57 N·m (5.7 kg-m, 41.2 ft-lb)

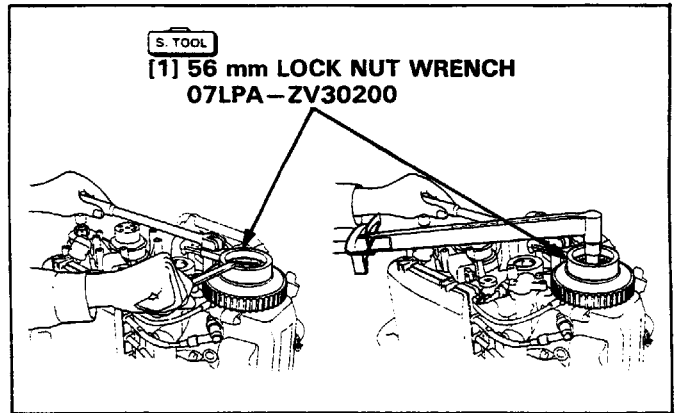


• **48 mm LOCK NUT**

Remove/install the 48 mm lock nut using the special tools.


TOOLS:
56 mm lock nut wrench 07LPA—ZV30200
Ring gear holder 07LPB—ZV30100

TORQUE: 130 N·m (13.0 kg-m, 94.0 ft-lb)

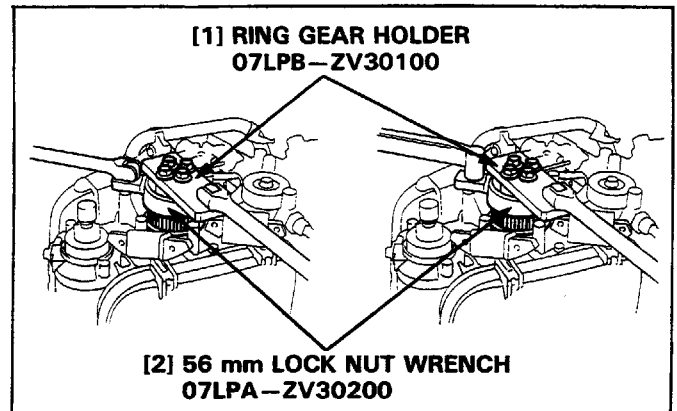

• **TIMING BELT GUIDE PLATE**

Install with the curved surfaces toward the timing pulley.

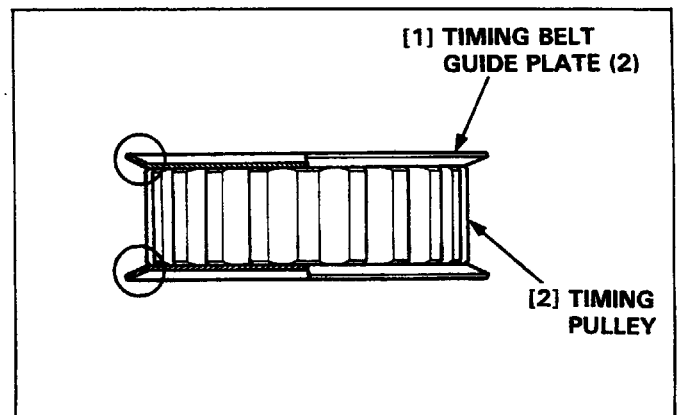

• TIMING BELT


INSTALLATION:

- 1) Set the pulser rotor over the camshaft and tighten the 10 x 32 mm flange bolt using the special tool as shown.

TORQUE: 57 N·m (5.7 kg-m, 41.2 ft-lb)

TOOL:

56 mm lock nut wrench 07LPA-ZV30200

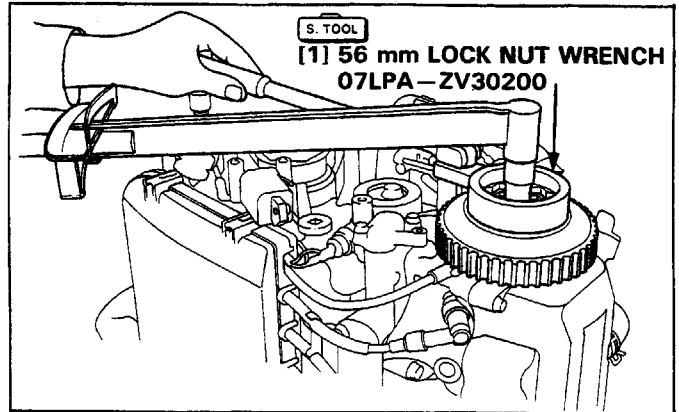

- 2) Install the timing belt guide plate, 25 x 14 mm woodruff key, and the timing pulley on the crankshaft (page 6-3).
- 3) Attach the special tool to the pulser rotor, and align the "T↓" mark on the pulser rotor with the "T↑" mark on the cylinder head by turning the pulser rotor counterclockwise (in the normal rotating direction of the camshaft).


CAUTION

- Do not rotate the pulser rotor clockwise.

- 4) Align the "●" mark on the timing pulley with the "I" mark on the cylinder block.
- 5) Move the timing belt tensioner to the position of slackening the belt and install the belt on the timing pulley side first, then install on the pulser rotor.

NOTE

- Install the timing belt with care not to move the marks out of alignment.

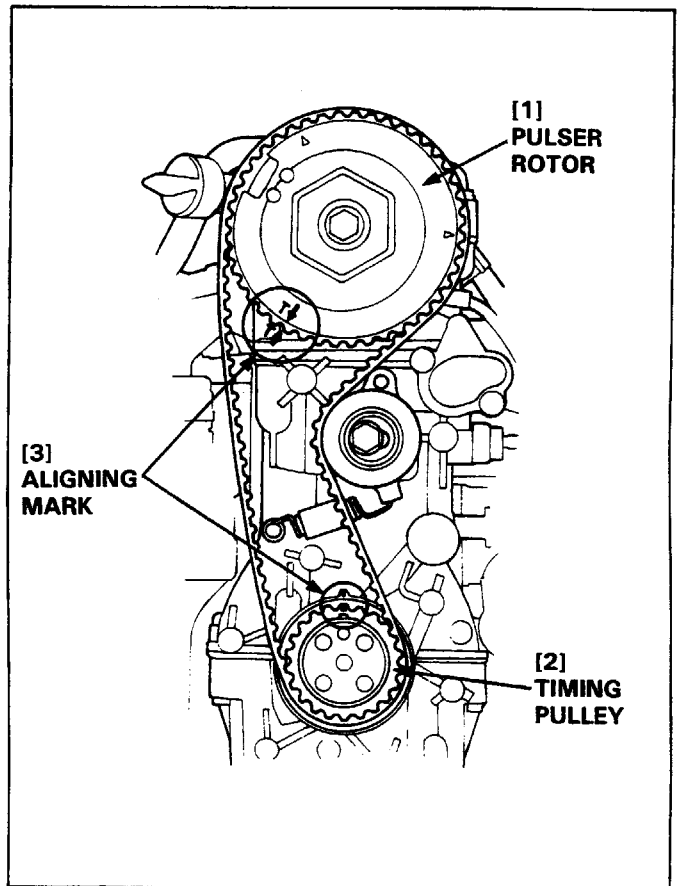

- 6) After installing the timing belt, check each mark for proper alignment.

Install the timing belt guide plate and 48 mm lock nut on the crankshaft. Note the installation direction of the timing belt guide plate.


- 7) Tighten the 48 mm lock nut using the special tool with care not to move the marks out of alignment.

TORQUE: 130 N·m (13.0 kg-m, 94.0 ft-lb)

TOOLS:

56 mm lock nut wrench 07LPA-ZV30200
Ring gear holder 07LPB-ZV30100

- 8) After tightening the lock nut, adjust the timing belt tension (page 3-16).

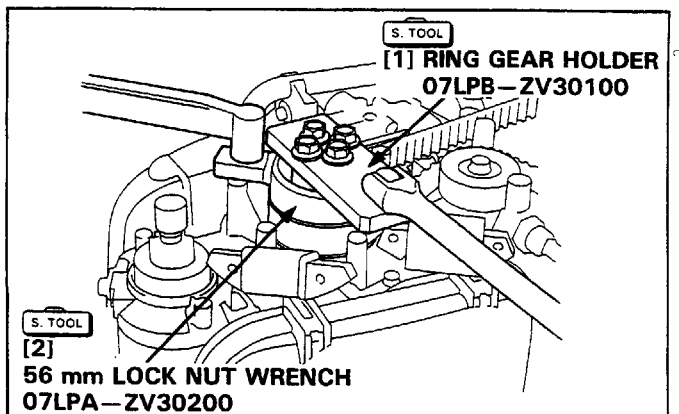


ENGINE REMOVAL/ INSTALLATION

REMOVAL 7-2


INSTALLATION 7-7

REMOVAL


- 1) Set the adjusting rod in the second hole from the rear of the stern bracket as shown.
- 2) Move the shift lever to the "N" position, loosen the lock nut and adjusting nut connecting the shift rod A and B, and disconnect the shift rods.
- 3) Remove the four 8 x 25 mm hex. bolts and the left/right lower mount housings, and disconnect the ground cable from the left side of the extension case assembly.
- 4) Remove the two 12 x 162 mm hex. bolts and the left/right lower mount rubbers
- 5) Remove the 5 x 30 mm/5 x 45 mm screws, six screw rivets and the under cover.
- 6) Remove the ten 8 x 35 mm hex. bolts and the extension case assembly.
- 7) Remove the oil pan (P. 12-2).

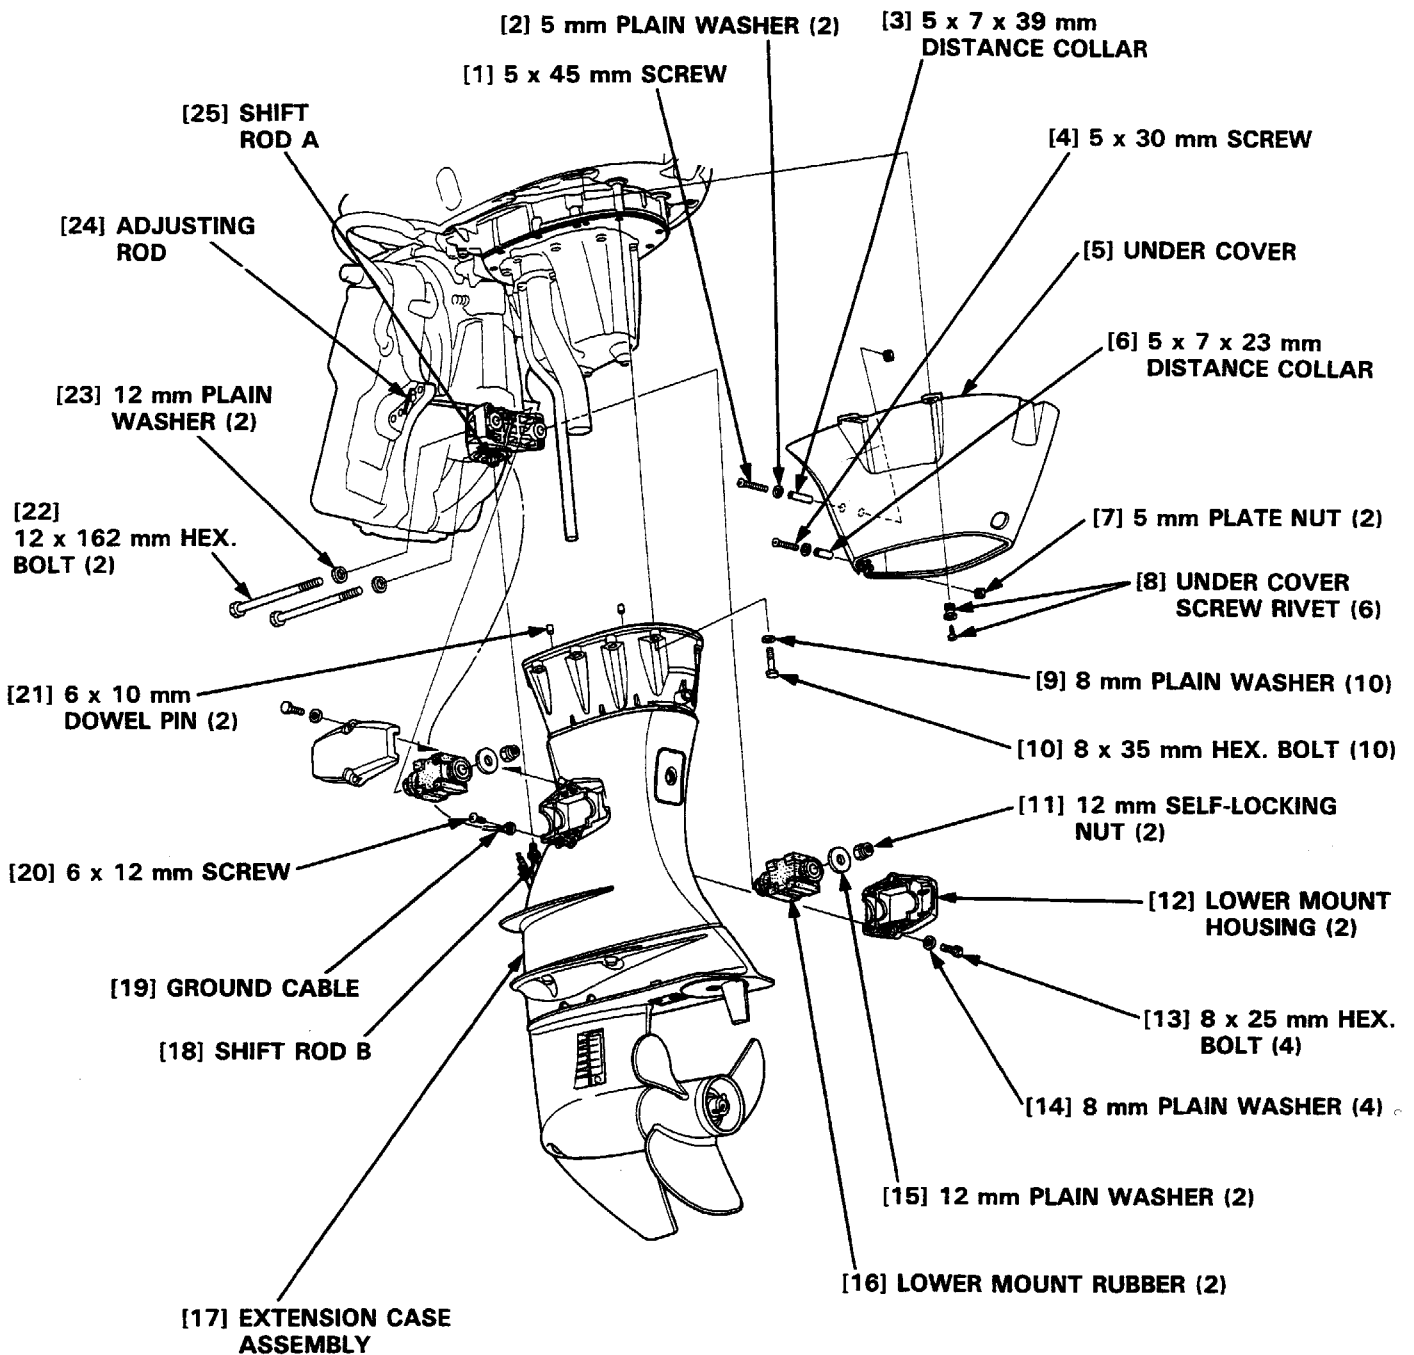


- 8) Remove the engine cover.
- 9) Pull the choke knob, then push it while holding the choke knob rod. Pull up the choke knob rod and disconnect it from the choke knob and choke arm A.

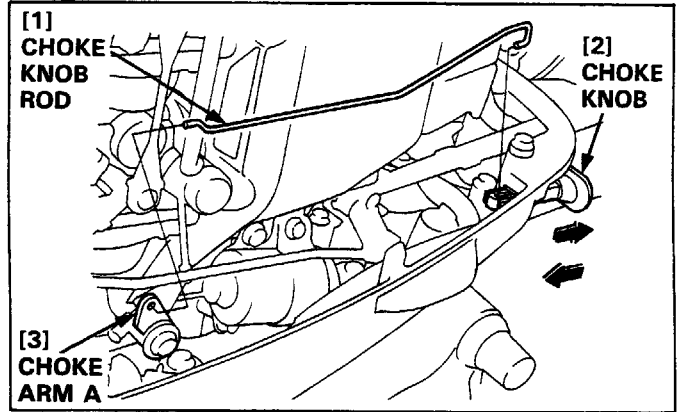


- 10) Remove the linkage pivot from the throttle cam.

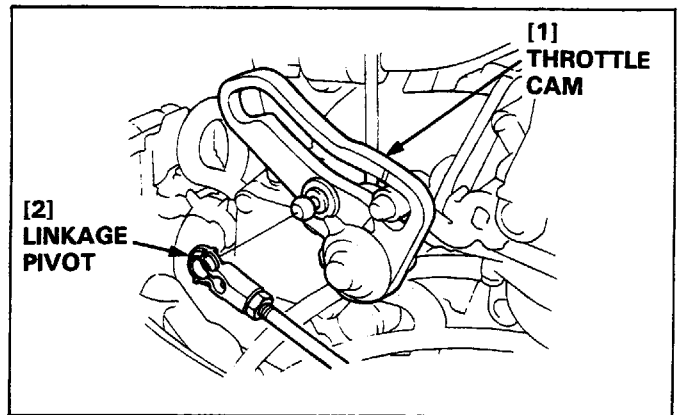


- 11) Disconnect the fuel tube B and the 4.5 x 125 mm tube from the fuel pump and the water hose joint.

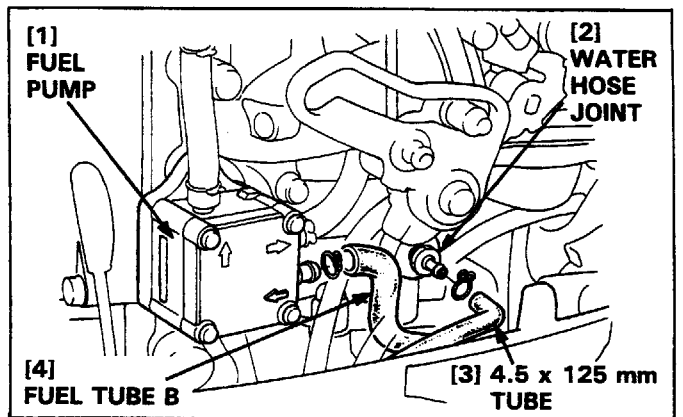


- 12) Disconnect the oil tube from the head cover.

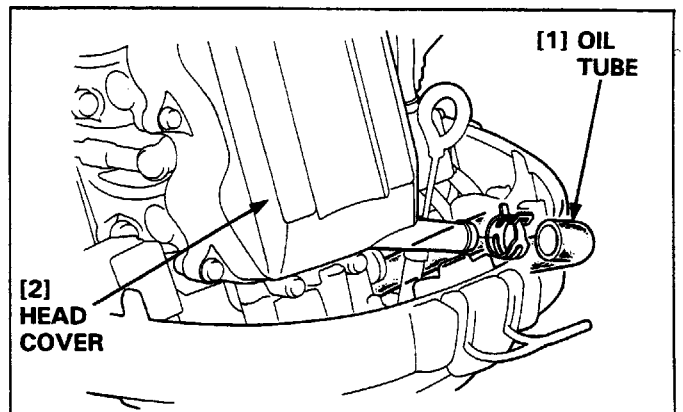


- 13) Remove the 6 x 12 mm flange bolt and disconnect the ground cable of the trim control unit and the power tilt relay from the cylinder block. (Remote control type only)

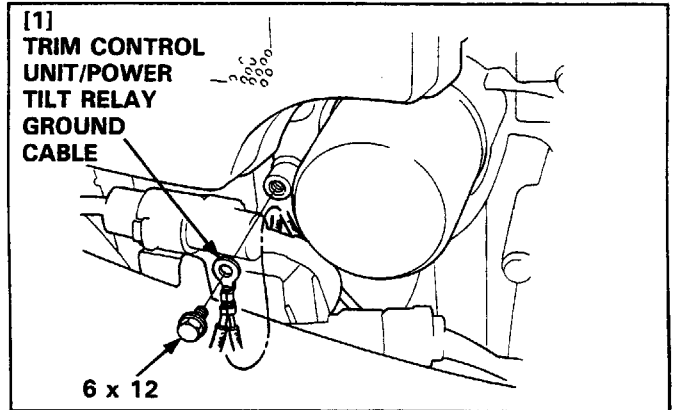


- 14) Remove the pressure switch screw and disconnect the oil pressure switch wire and the thermo switch wire.

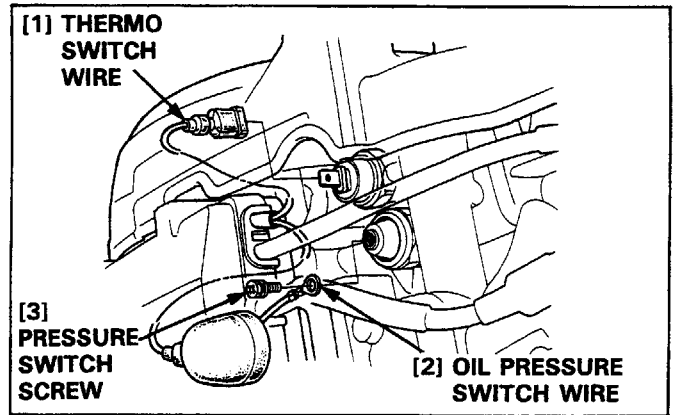


- 15) Remove the two 6 x 12 mm flange bolts and disconnect the ground cables of the ignition coil and the power trim & tilt switch. (Power trim & tilt type only)

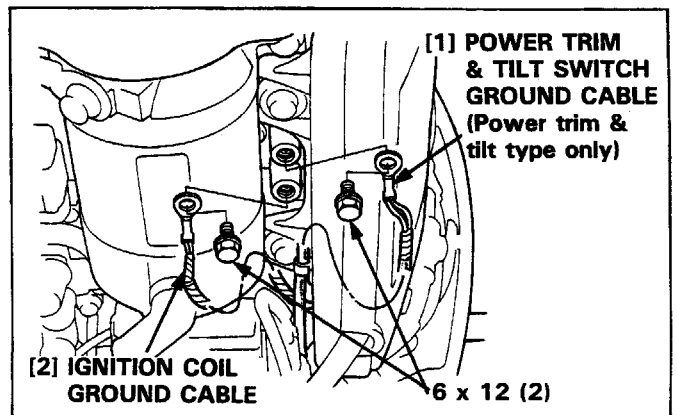


- 16) Remove the spark plug caps and the CDI unit cover.

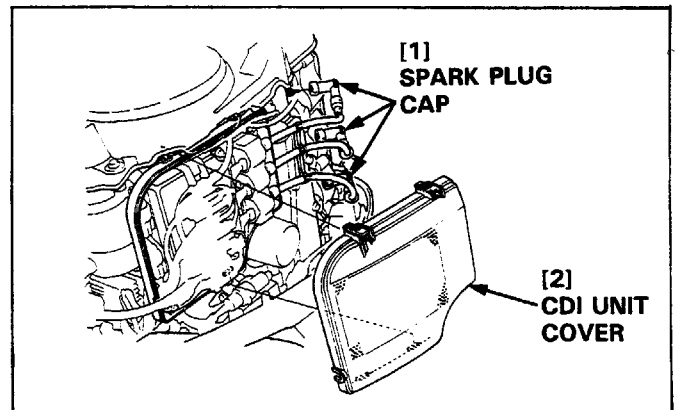


- 17) Disconnect the starter magnetic switch connector, exciter coil connector, charging coil connectors and the pulser coil connector.
- 18) Remove the four 6 x 25 mm flange bolts and the CDI unit assembly.

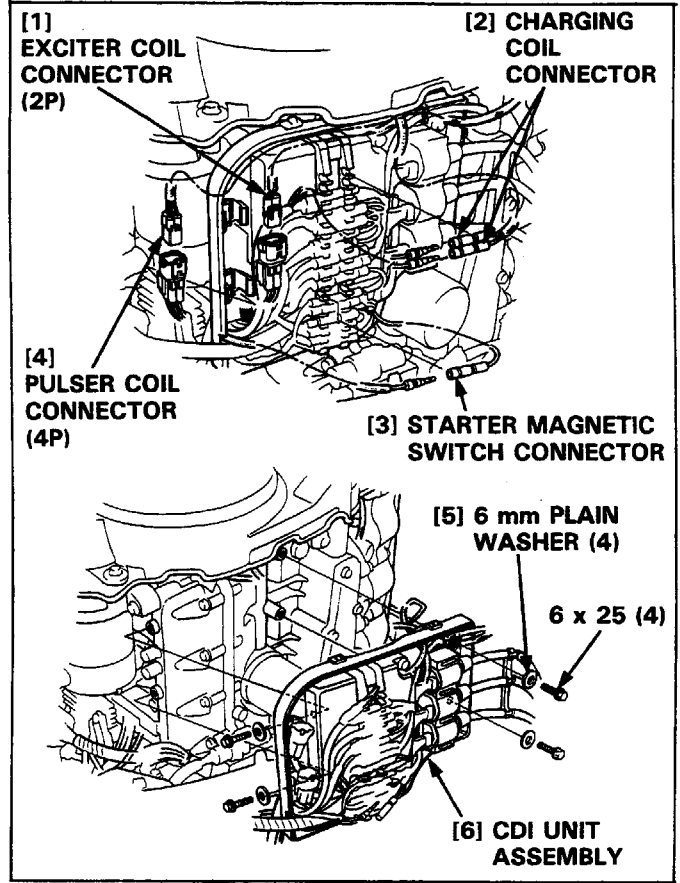


- 19) Remove the 8 x 12 mm flange bolt and the 6 mm hex. nut and disconnect the starter cable (upper side) and the power tilt relay wire/starter cable (lower side). Remove the fuse case.

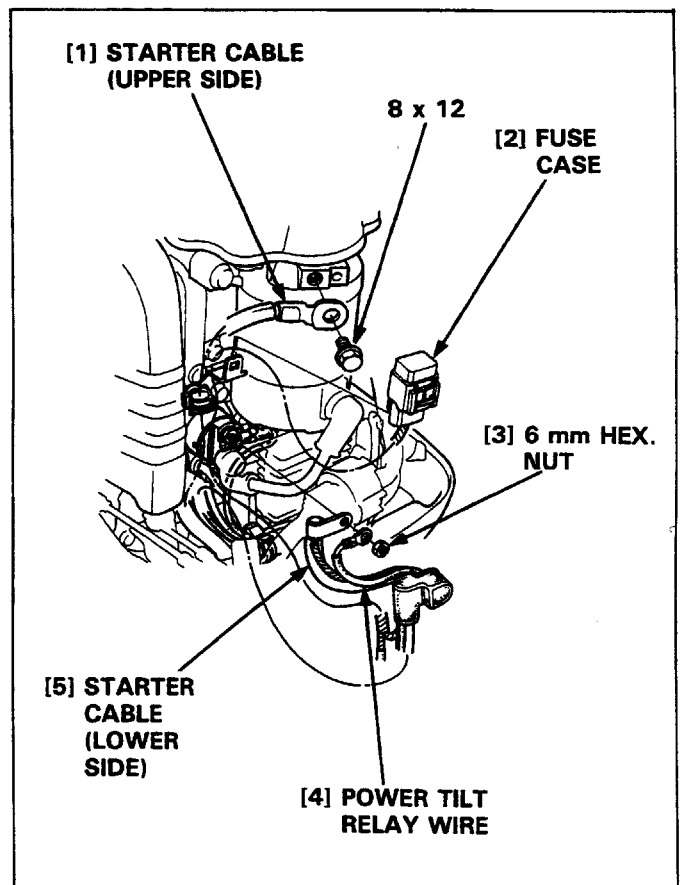


- 20) Disconnect the remote choke solenoid 2P connector. (Remote control type only)

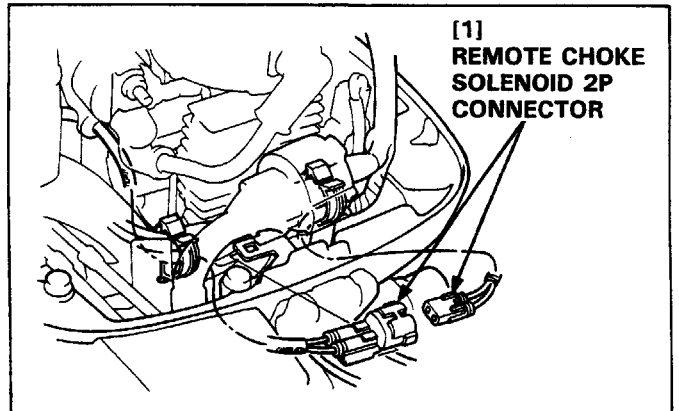


- 21) Remove the two 6 x 25 mm flange bolts and the regulator/rectifier. Remove the two 6 x 12 mm flange bolts and disconnect the ground cables of the starter magnetic switch and the regulator/rectifier.

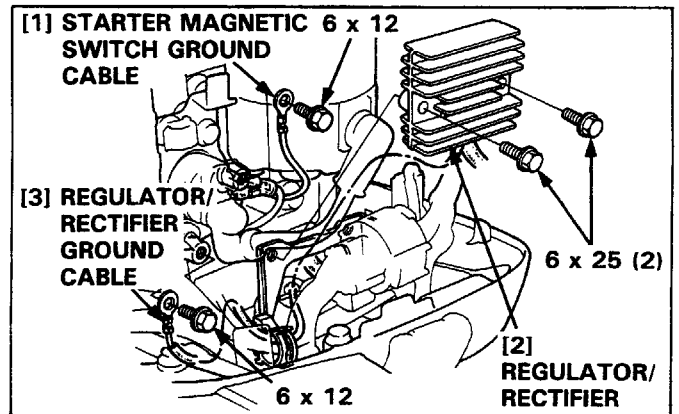

- 22) Set the chain to the engine hanger.

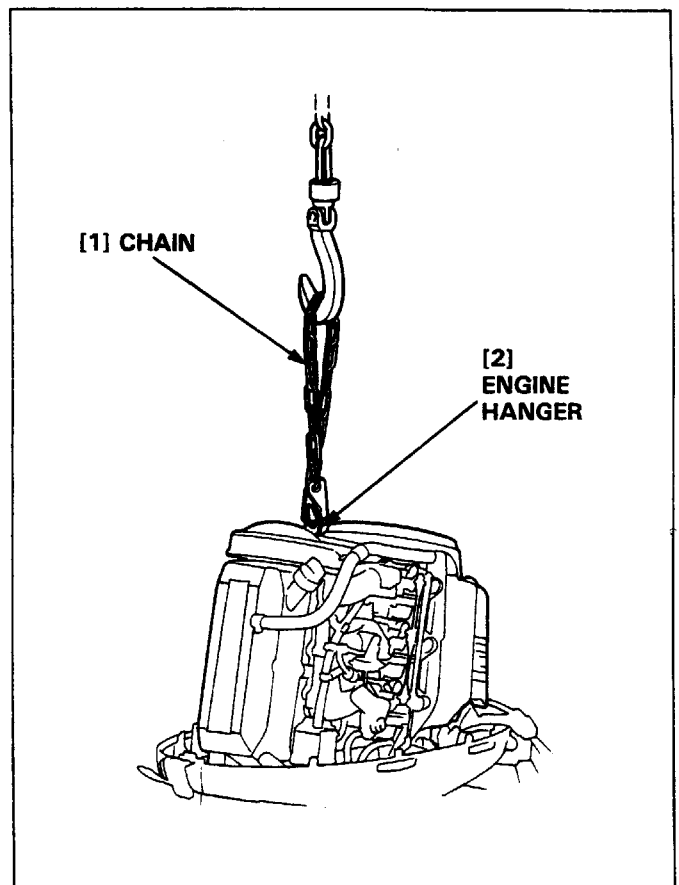


- 23) Remove the four 8 x 75 mm flange bolts, four 8 x 55 mm hex, bolts and two 8 x 35 mm hex. bolts, and remove the engine from the primary gear case.

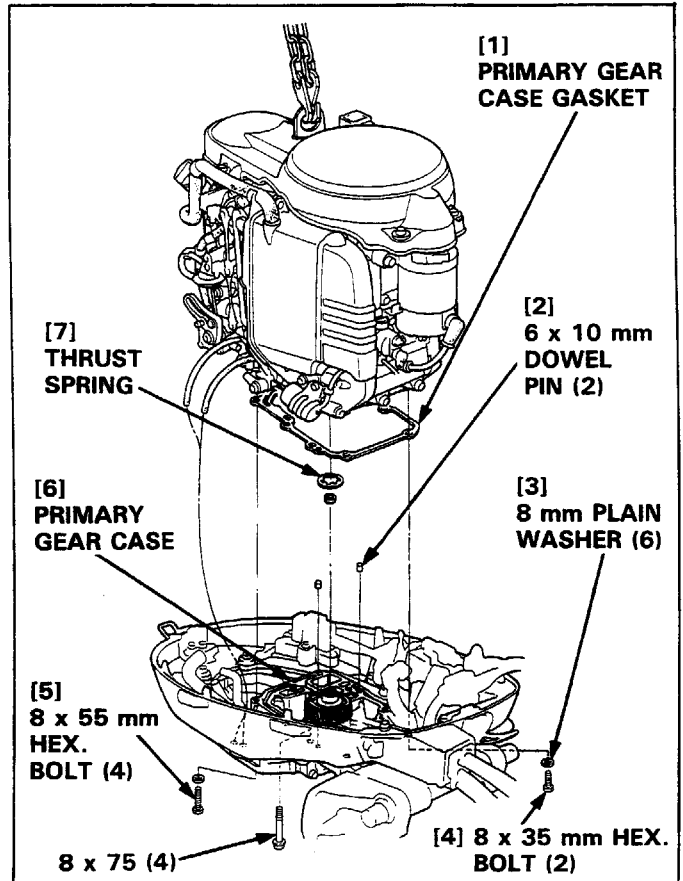


INSTALLATION

Installation procedures are the reverse of removal but care must be taken during the following.


- 1) Note the engine mounting bolts installation location and tighten the ten bolts in the numbered sequence shown in the drawing.

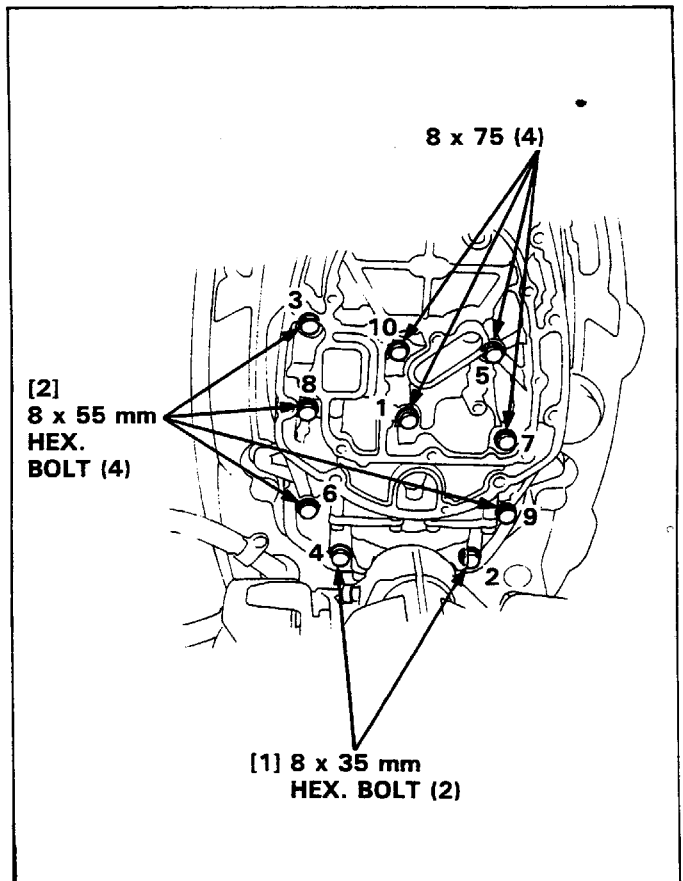

- 2) Connect the regulator/rectifier and the starter magnetic switch ground cables at the angle of 90° from the horizontal line as shown.

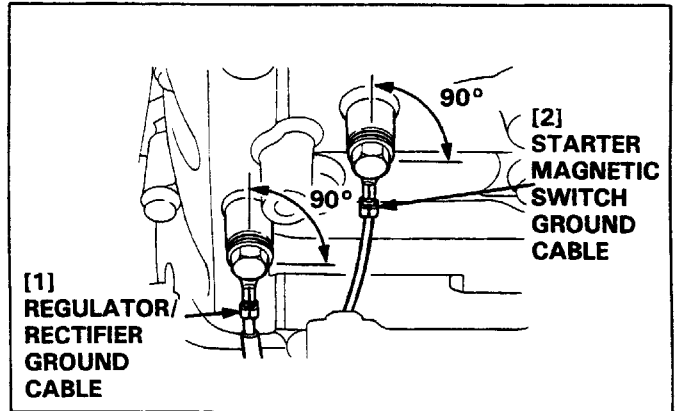


- 3) Connect the starter cable at the angle of 90° from the vertical line as shown.

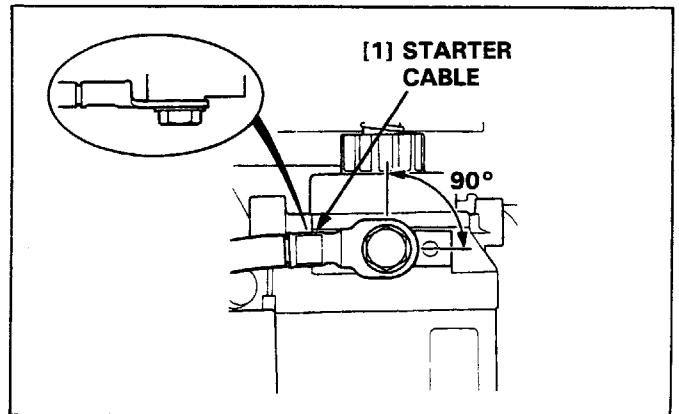


- 4) Connect the starter cable and the power tilt relay wire at the angle of 90° from the vertical line as shown.


TORQUE: 5 N·m (0.5 kg-m, 3.6 ft-lb)

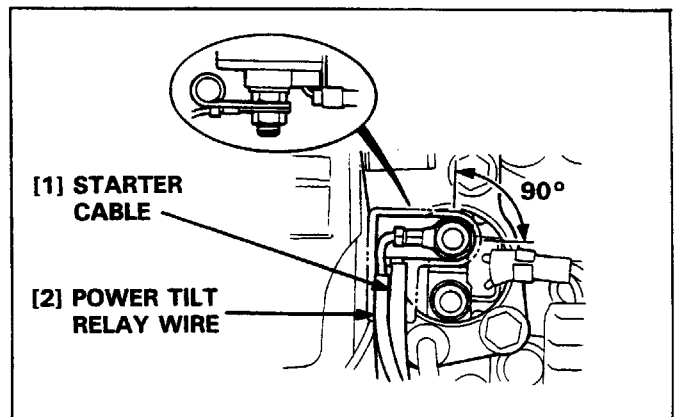


- 5) Connect the ignition coil ground cable and the power trim & tilt switch ground cable at the angle of 90° from the horizontal line as shown.

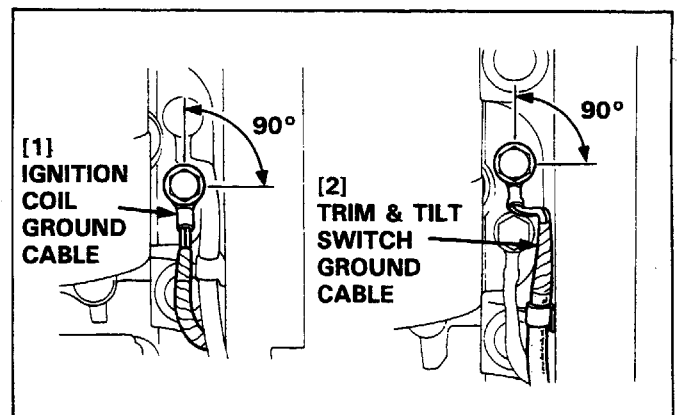

- 6) Connect the oil pressure switch wire at the angle of 90° from the vertical line as shown.

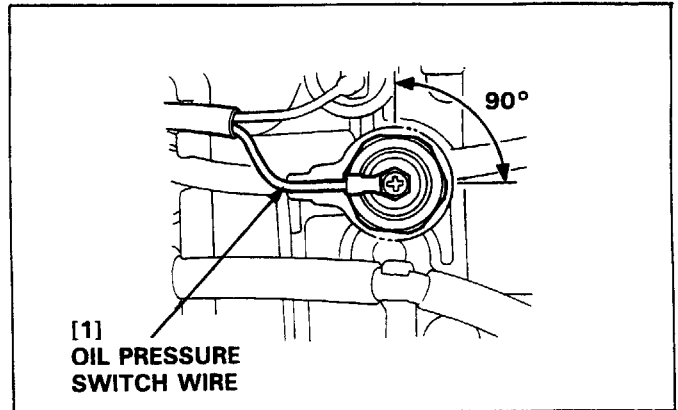


- 7) Connect the trim control unit/power tilt relay ground cable at the angle of 90° from the horizontal line as shown. (Remote control type only)

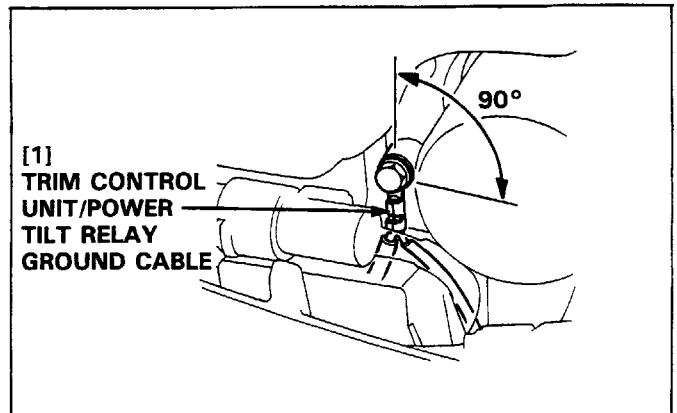

- 8) Align the cutouts on the lower mount rubber and the lower mount center housing for installation, and tighten the self lock nut securely.

TORQUE: 55 N·m (5.5 kg-m, 40.0 ft-lb)

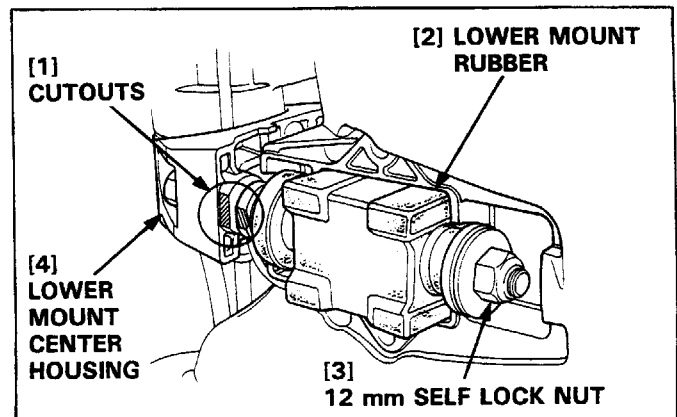

TORQUE: Oil pan bolt

10 N·m (1.0 kg-m, 7.2 ft-lb)

Extension case bolt

22 N·m (2.2 kg-m, 15.9 ft-lb)

Lower mount housing bolt

22 N·m (2.2 kg-m, 15.9 ft-lb)

After installation, adjust the followings:


- Shift rod (P. 3-14)

WATER JACKET COVER/
THERMOSTAT/THERMO SWITCH

WATER JACKET COVER/THERMOSTAT/THERMO SWITCH

a. DISASSEMBLY/REASSEMBLY

1) Remove the engine cover.

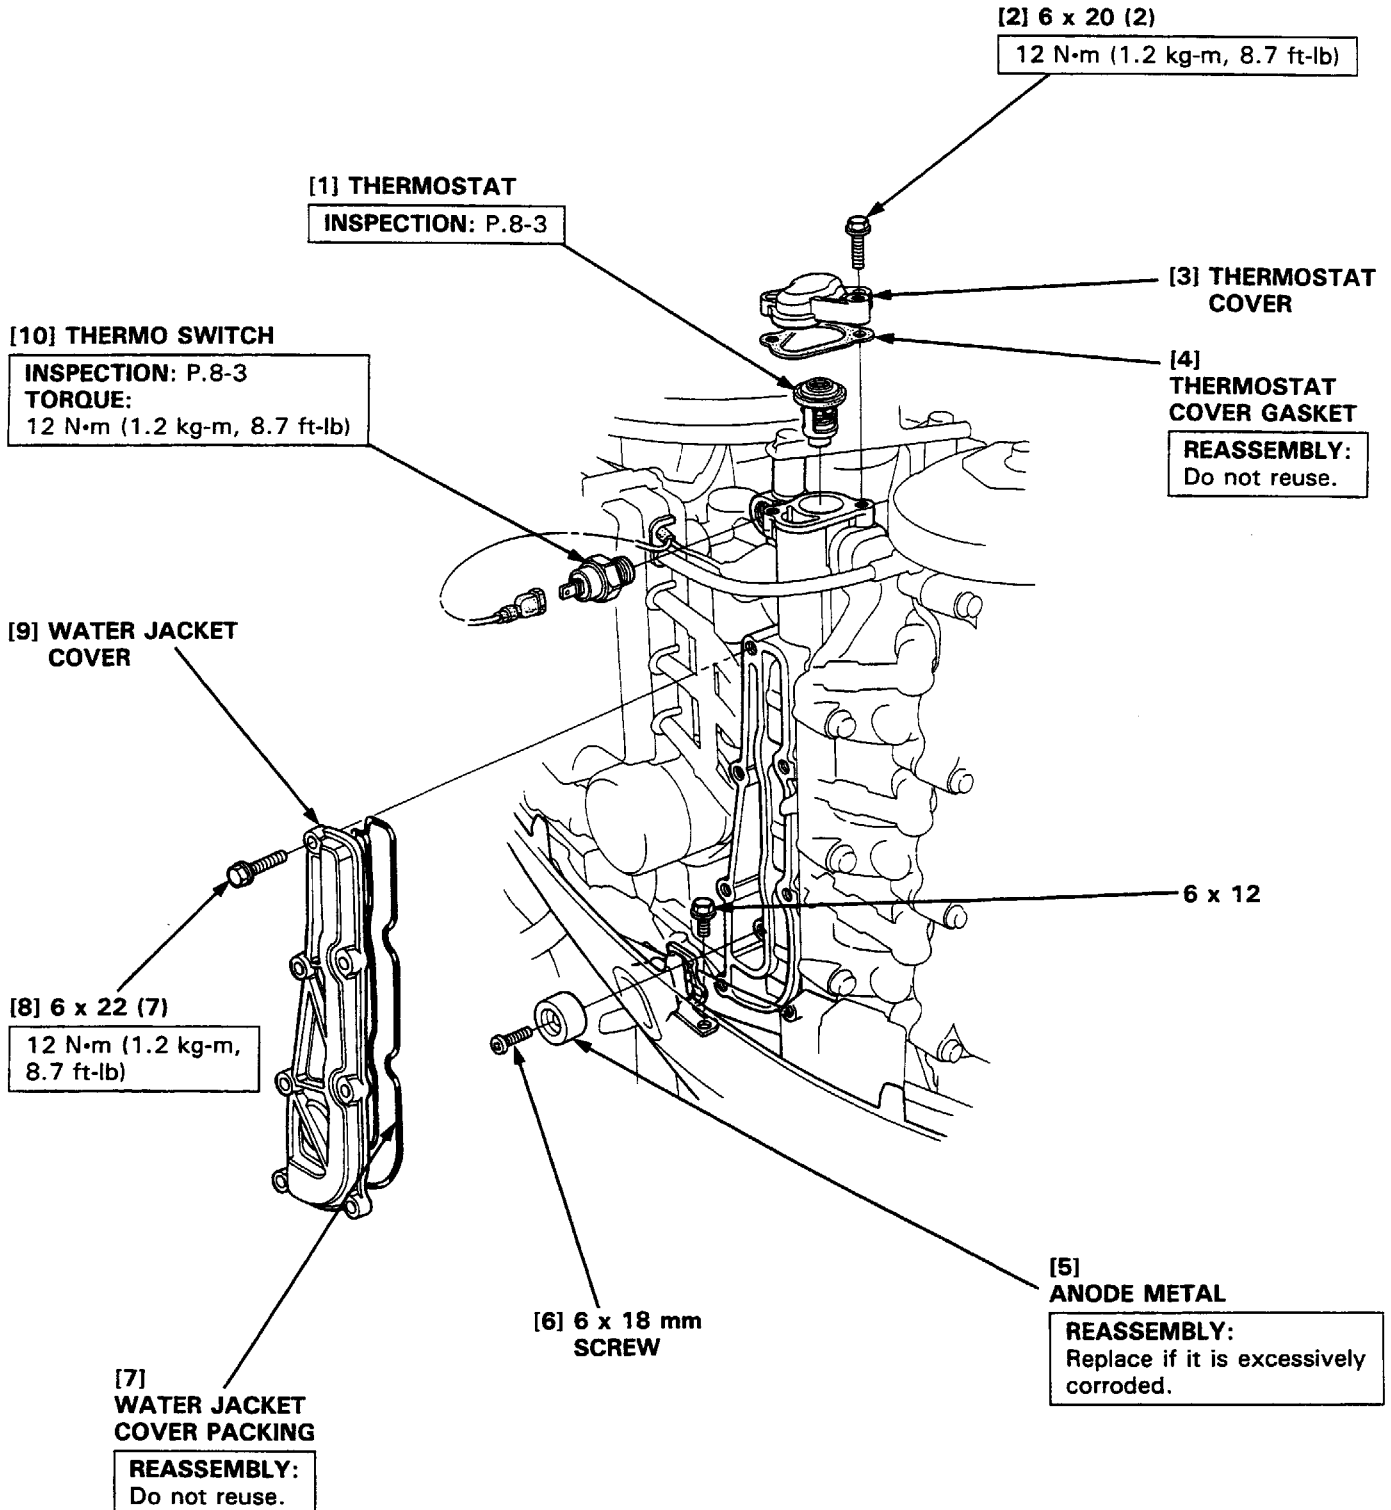

b. INSPECTION

● **THERMO SWITCH**

- 1) Suspend the thermo switch in a container of coolant or oil. Be sure the switch does not touch the container.
- 2) Heat the liquid and note its temperature when the thermo switch closes and there is continuity between the thermo switch lead and body.

NOTE

- Don't allow the thermometer to touch the container.

Continuity (ON)	90 ± 2°C min.
No continuity (OFF)	3–7°C below the temperature when continuity exists.

● **THERMOSTAT**

- 1) Immerse the thermostat in water.
- 2) Heat the water and observe the operation of the thermostat as the water temperature increases.
- 3) Measure the water temperature when the thermostat starts opening.



NOTE

- Don't let the thermometer or the thermostat touch the container; this may cause a false reading.

- 4) Measure lift height when fully open.

Start opening	52°C (126°F)
Fully open	62°C (144°F)

Lift height	More than 3.0 mm (0.12 in)
-------------	----------------------------

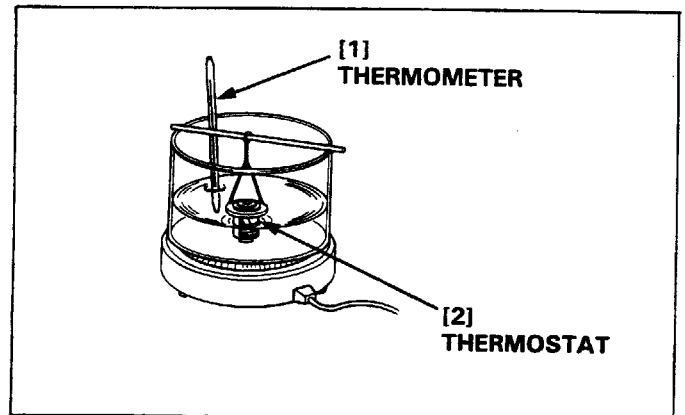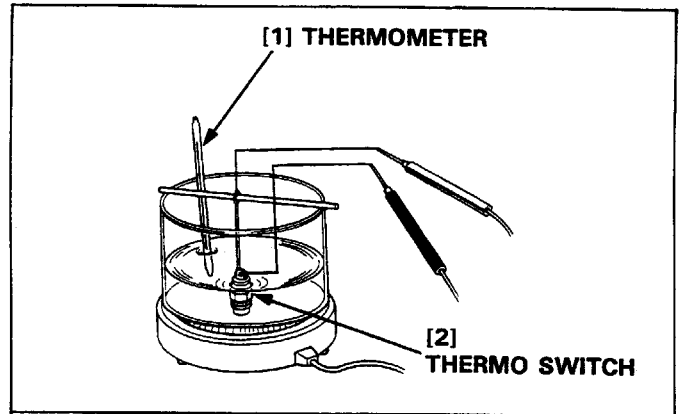

CYLINDER HEAD/VALVES/ OIL PUMP

REMOVAL/INSTALLATION	9-2
OIL PUMP	9-4
DISASSEMBLY/REASSEMBLY	9-5
INSPECTION	9-8
VALVE GUIDE REPLACEMENT	9-14
VALVE SEAT RECONDITIONING	9-15

REMOVAL/INSTALLATION

- 1) Remove the engine cover and the flywheel cover (P. 6-2).
- 2) Remove the pulser rotor and the pulser coil (P. 6-2).
- 3) Disconnect the breather tube from the silencer cover and the fuel tubes from the fuel pump (P. 7-2).
- 4) Remove the choke knob rod, linkage pivot and the carburetor assembly (P. 5-2 and 5-3).

[2] HEAD COVER PACKING

REASSEMBLY:

Apply Three Bond #1201 or #1215 or equivalent to the mating surface of the cylinder head cover and the cylinder head.

[1] 8 x 40 (3)

REASSEMBLY: P. 9-3

TORQUE:

27 N·m (2.7 kg-m, 19.5 ft-lb)

[19] CYLINDER HEAD GASKET

[18] CYLINDER HEAD ASSEMBLY

DISASSEMBLY/
REASSEMBLY: P. 9-5

[17] 10 x 85 mm BOLT WASHER (8)

REASSEMBLY: P. 9-3

Tighten to the specified torque first. Mark the alignment position on the bolts and cylinder head, then tighten the bolts additionally $90^{\circ+30}_0$.

TORQUE: 38 N·m (3.8 kg-m, 27.5 ft-lb), then additionally tighten $90^{\circ+30}_0$.

INSPECTION: P. 9-3

[16] TRIM CONTROL UNIT
(Power trim & tilt type only)

INSPECTION:
P. 16-16

6 x 12

[15] O-RING

REASSEMBLY:

Do not forget to install.

[14] OIL PATH ORIFICE

REASSEMBLY:

Note the installation direction.

[13] 8 x 14 mm
DOWEL PIN (8)

[4] 26 x 2.7 mm
O-RING

[3] HEAD COVER

[5] OIL CAP

[6] BREATHER TUBE

REASSEMBLY:

Before installing, check for cracks and deterioration.

[7] TUBE CLAMP
D17

[8]
6 x 35 (7)

12 N·m (1.2 kg-m,
8.7 ft-lb)

[9] OIL TUBE

REASSEMBLY:

Before installing, check for cracks and deterioration.

[10] TUBE CLAMP
D22

[11] HOSE CLAMP


[12] OIL LEVEL GAUGE

• **INSPECTION**

10 x 85 mm BOLT WASHER

Measure bolt length. If not within service limit, replace the bolt.

STANDARD	SERVICE LIMIT
84.5–85.5 mm (3.33–3.37 in)	86.9 mm (3.42 in)

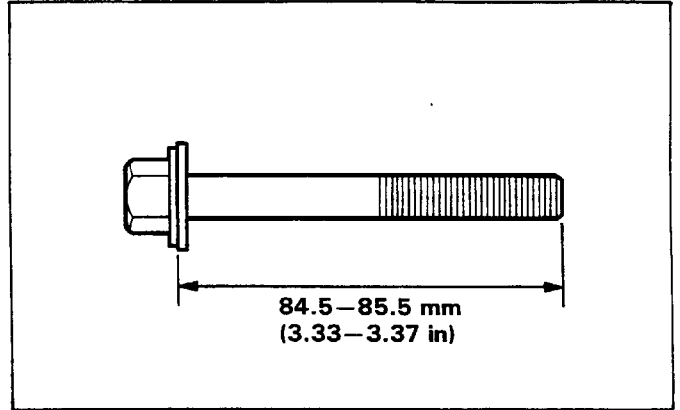

10 x 85 mm BOLT WASHER/8 x 40 mm FLANGE BOLT

REASSEMBLY:

Tighten the eight 10 x 85 mm bolt washers and the three 8 x 40 mm flange bolts to the specified torque in the numbered sequence shown in the drawing. After tightening the 10 x 85 mm bolt washers to the specified torque, mark the alignment position on the bolt washers and cylinder head, then tighten the bolt washers additionally $90^{\circ} + \frac{30}{0}$.


TORQUE:

10 x 85 mm bolt washer

38 N·m (3.8 kg-m, 27.5 ft-lb) then additionally tighten $90^{\circ} + \frac{30}{0}$.

8 x 40 mm flange bolt

27 N·m (2.7 kg-m, 19.5 ft-lb)

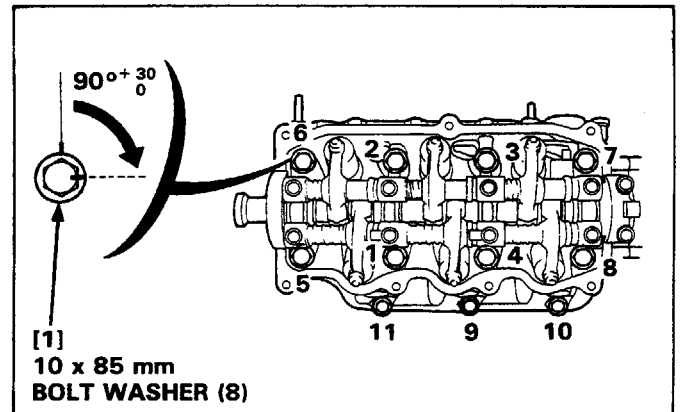


OIL PUMP

1) Remove the cylinder head assembly (P. 9-2).

NOTE

- After assembling the oil pump and before installing it on the cylinder head, pour approximately 5 cc (0.3 cu in) of oil into the oil pump body.

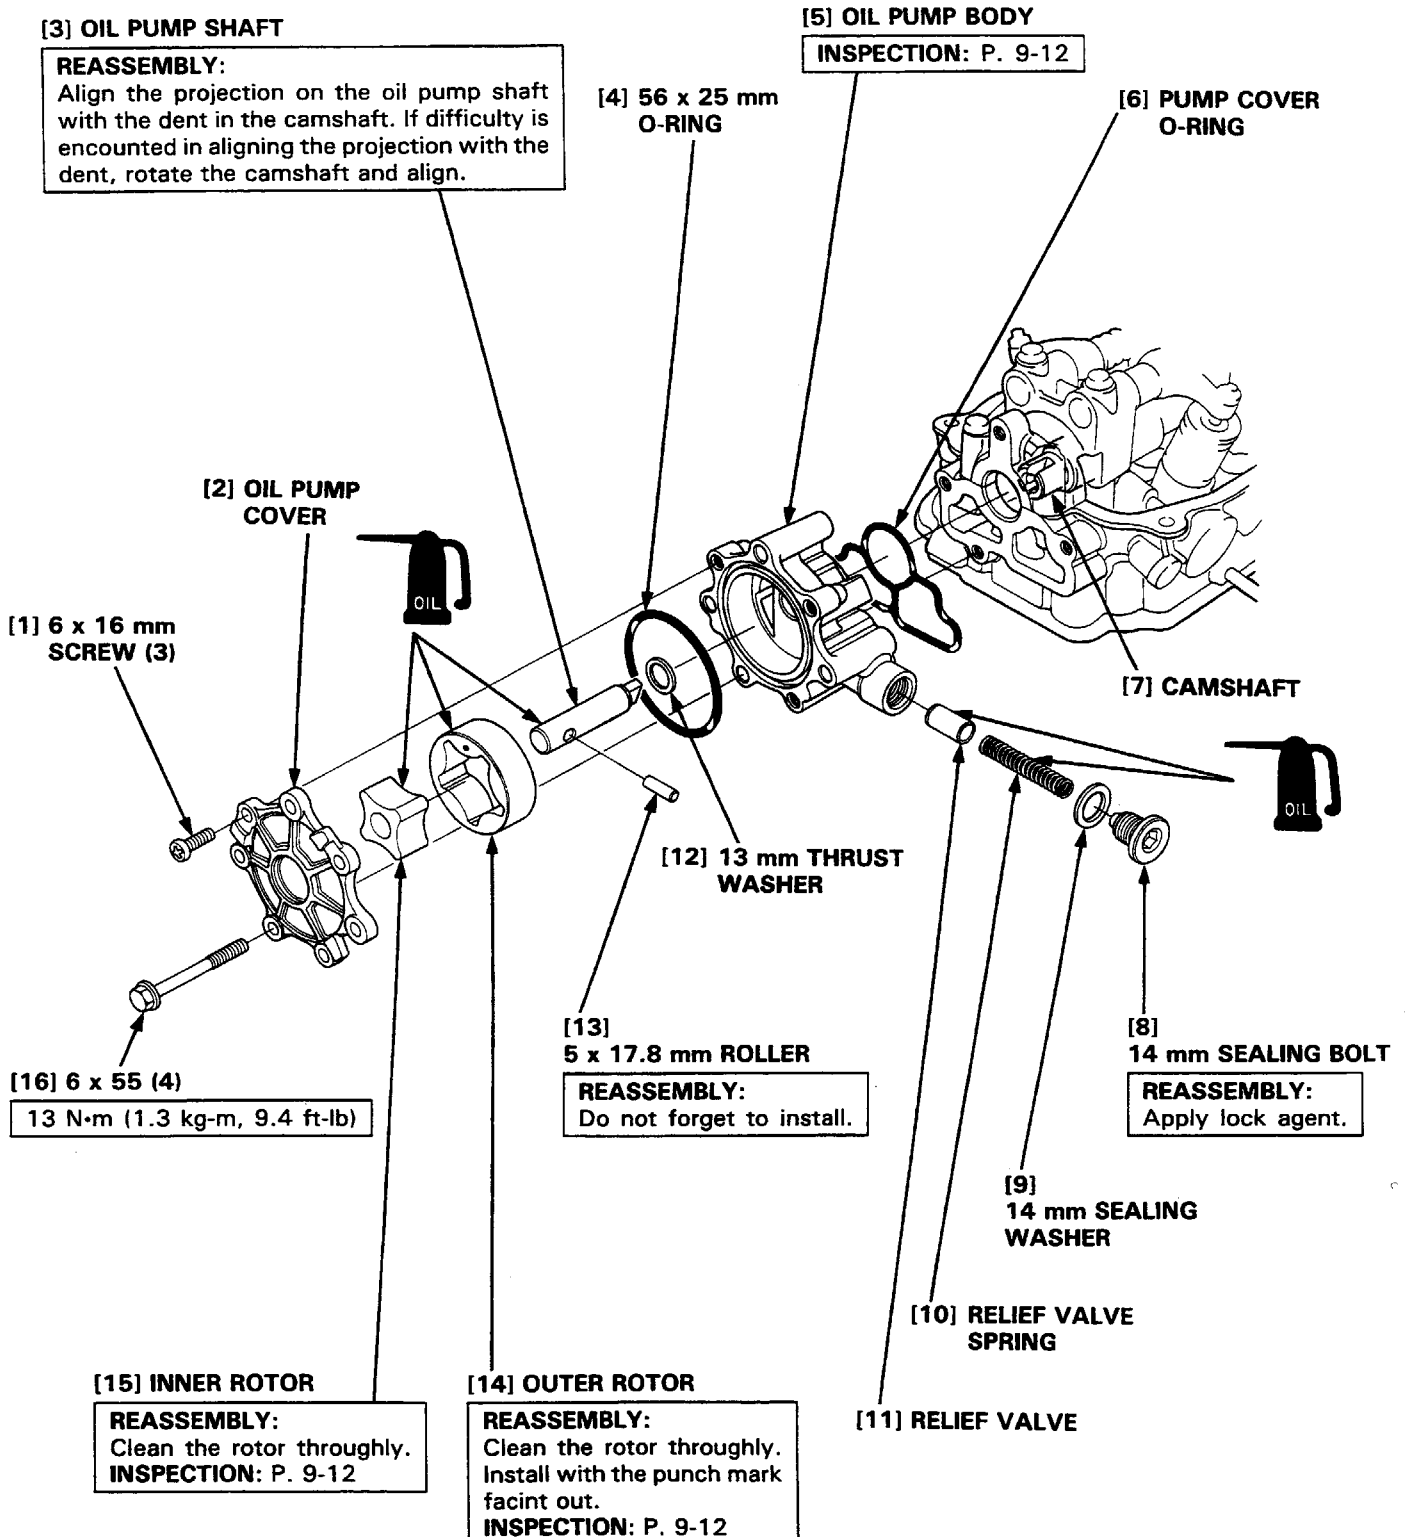


DISASSEMBLY/REASSEMBLY

1) Remove the cylinder head assembly (P.9-2).

NOTE

- Before installing the No. 1 and No. 4 cam holders, apply Three Bond #1141 or equivalent to the installation surfaces.

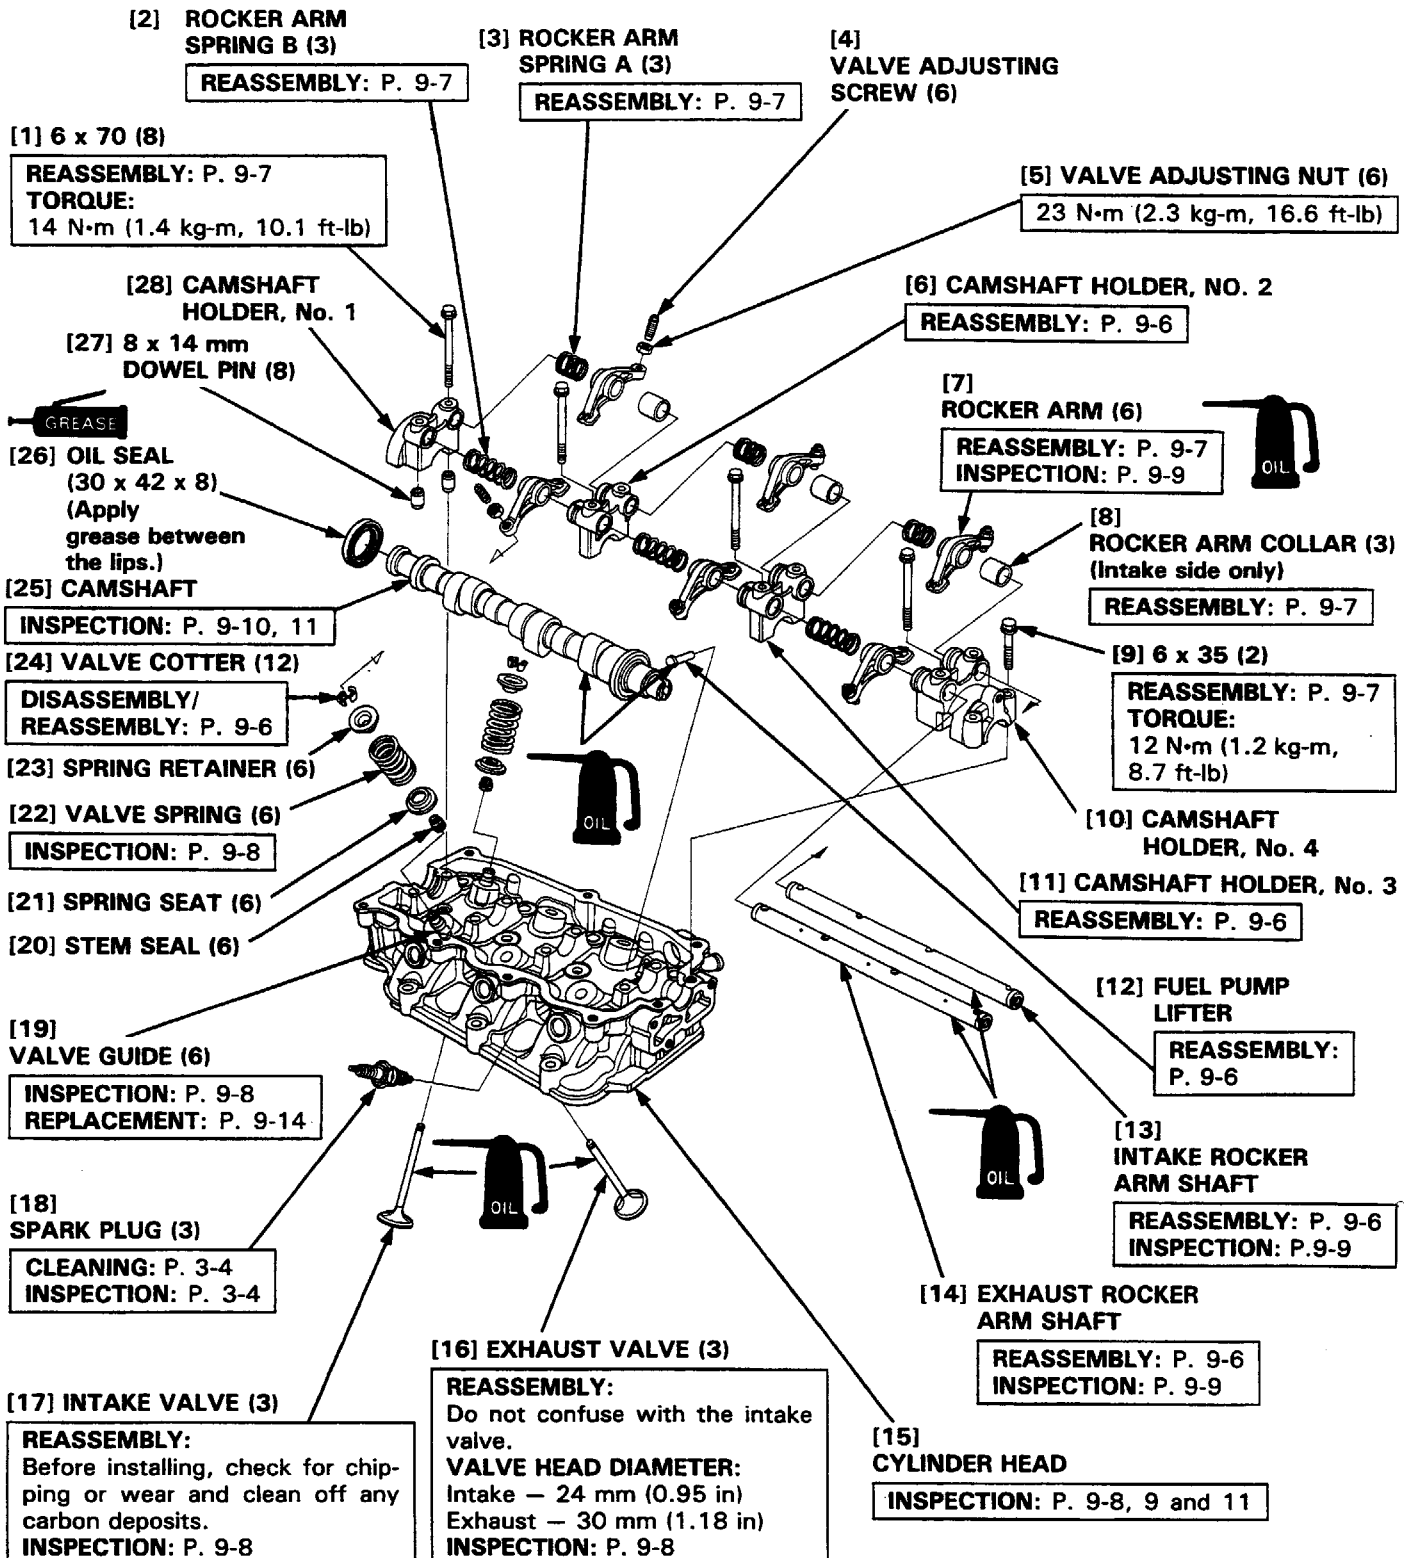

• VALVE COTTER


DISASSEMBLY/REASSEMBLY:

Use the special tool to compress the spring and install the cotters.

Make sure the cotters seat in the groove properly.

TOOL:


Valve spring compressor 07757-0010000

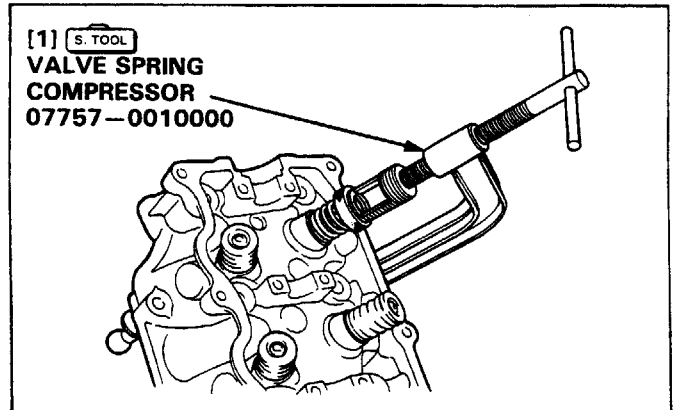

• FUEL PUMP LIFTER

REASSEMBLY:


Install the fuel pump lifter from inside of the cylinder head. Do not forget to install.

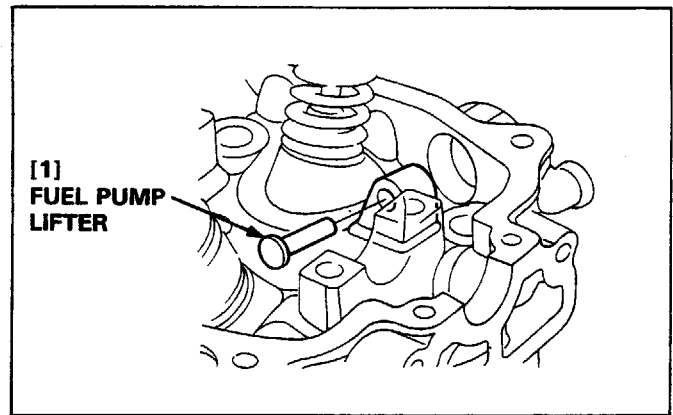

• ROCKER ARM SHAFT

REASSEMBLY:


Take care not to interchange the exhaust side rocker arm shaft with that of the intake side. Install the rocker arm shaft that has the hole in it on the exhaust side and the rocker arm shaft with the cutout in it on the intake side.

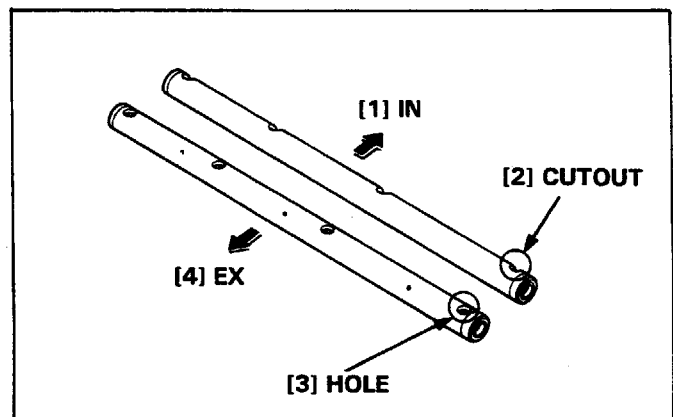

• CAM HOLDER, No. 2/No. 3

REASSEMBLY:


Install with the number of cam holder facing the pulser rotor side.

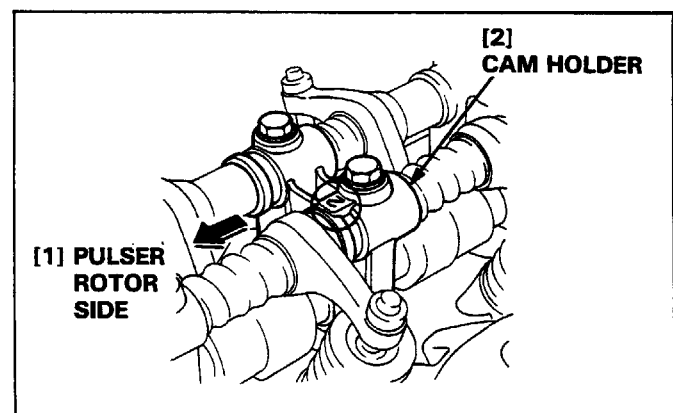

• ROCKER ARM/ROCKER ARM SPRING/ROCKER ARM COLLAR

REASSEMBLY:


Note the installation direction as shown.

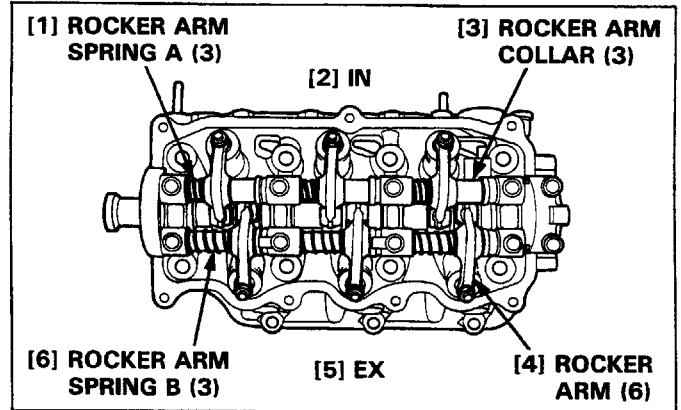

• 6 x 70 mm/6 x 35 mm FLANGE BOLT

REASSEMBLY:

Tighten the eight 6 x 70 mm/two 6 x 35 mm flange bolts to the specified torque in the numbered sequence shown in the drawing.

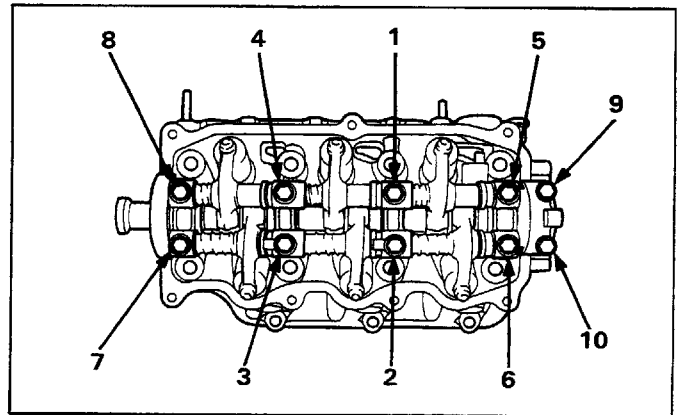

INSPECTION

• VALVE SPRING FREE LENGTH

Measure the free length of the valve springs.

	STANDARD	SERVICE LIMIT
IN/EX	36.9 mm (1.45 in)	35.4 mm (1.39 in)

Replace the springs if they are shorter than the service limit.

• VALVE STEM O.D.

Inspect each valve for face irregularities, bending or abnormal stem wear. Replace the valve if necessary.

Measure and record each valve stem O.D.

	STANDARD	SERVICE LIMIT
IN	5.480–5.490 mm (0.2157–0.2161 in)	5.45 mm (0.215 in)
EX	5.460–5.470 mm (0.2150–0.2154 in)	5.42 mm (0.213 in)

Replace the valves if their O.D. is smaller than the service limit.

• VALVE GUIDE I.D.

NOTE

- Ream the valve guides to remove any carbon deposits before measuring.

Measure and record each valve guide I.D.

	STANDARD	SERVICE LIMIT
IN/ EX	5.500–5.512 mm (0.2165–0.2170 in)	5.53 mm (0.218 in)

Replace the guides if they are over the service limit.

• GUIDE-TO-STEM CLEARANCE




Subtract each valve stem O.D. from the corresponding guide clearance.

	STANDARD	SERVICE LIMIT
IN	0.010–0.032 mm (0.0004–0.0013 in)	0.06 mm (0.0024 in)
EX	0.030–0.052 mm (0.0012–0.0020 in)	0.10 mm (0.004 in)

If the stem-to-guide clearance exceeds the service limit, determine if the new guide with standard dimensions would bring the clearance within tolerance. If so, replace any guide as necessary and ream to fit. If the stem-to-guide clearance exceeds the service limit with new guides, replace the valves as well.

NOTE

- Recondition the valve seats whenever the valve guides are replaced.

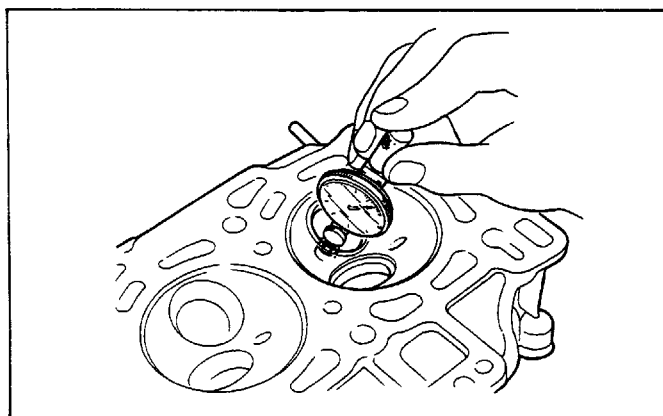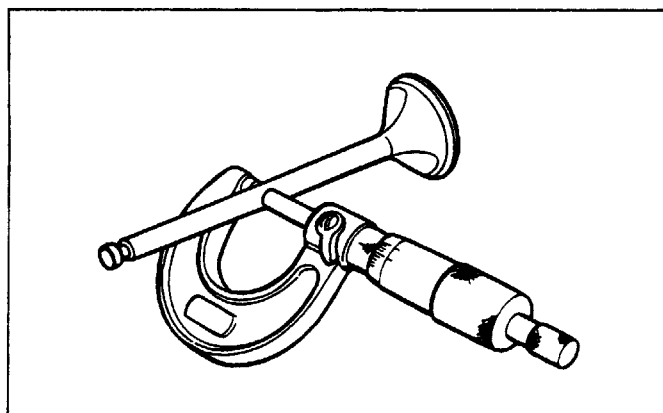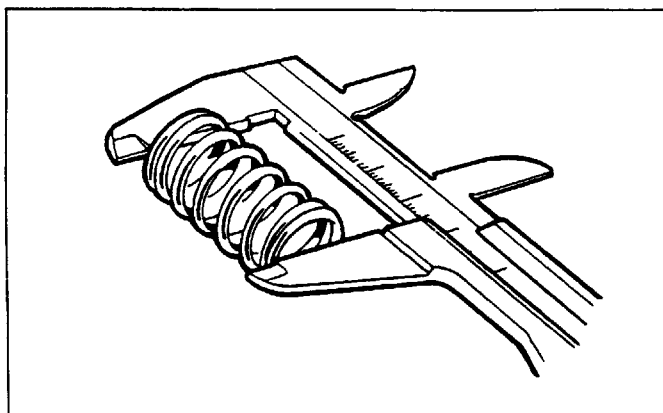


• **VALVE SEAT WIDTH**

Measure the valve seat width.

	STANDARD	SERVICE LIMIT
IN/ EX	1.25–1.55 mm (0.049–0.061 in)	2.0 mm (0.08 in)

If the valve seat width is under the standard, or over the service limit, recondition the valve seat. See page 9-15.

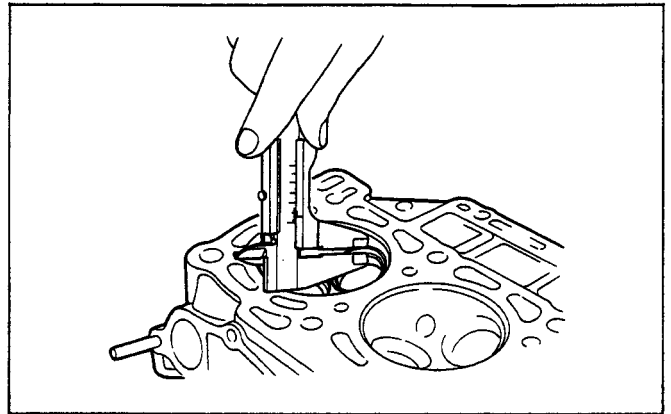


• **ROCKER ARM SHAFT O.D.**

Measure the O.D. of the rocker arm shaft.

STANDARD	SERVICE LIMIT
13.976–13.994 mm (0.5502–0.5509 in)	13.95 mm (0.549 in)

Replace the rocker arm shaft if its O.D. is smaller than the service limit.

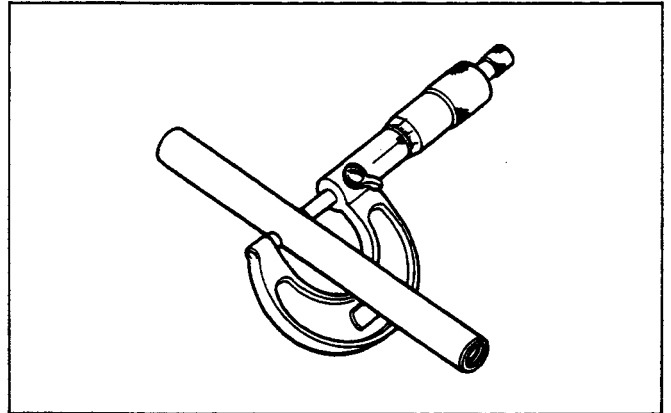


• **ROCKER ARM I.D.**

Measure the I.D. of the rocker arm.

STANDARD	SERVICE LIMIT
14.010–14.028 mm (0.5516–0.5523 in)	14.05 mm (0.553 in)

Replace the rocker arms if their I.D. is larger than the service limit.

Also check the rocker arm slipper surface for any wear or scratches.

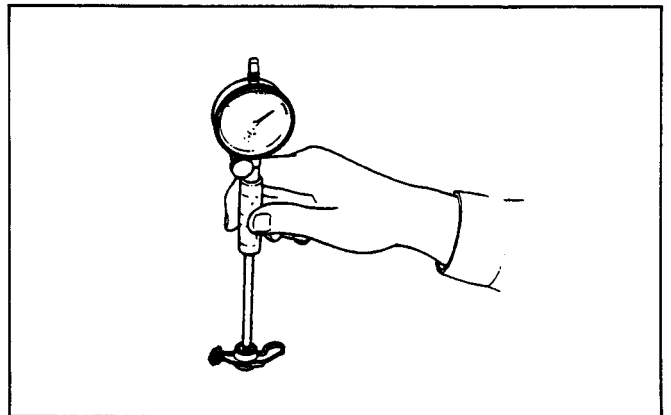

• **ROCKER ARM SHAFT-TO-ROCKER ARM CLEARANCE**


STANDARD	SERVICE LIMIT
0.016–0.052 mm (0.0006–0.0020 in)	0.07 mm (0.003 in)

• CAM HEIGHT

Measure the cam height.

	STANDARD	SERVICE LIMIT
IN	34.928—35.248 mm (1.3751—1.3877 in)	34.708 mm (1.3665 in)
EX	34.973—35.293 mm (1.3769—1.3895 in)	34.753 mm (1.3682 in)

Replace the camshaft if the cam height is lower than the service limit.

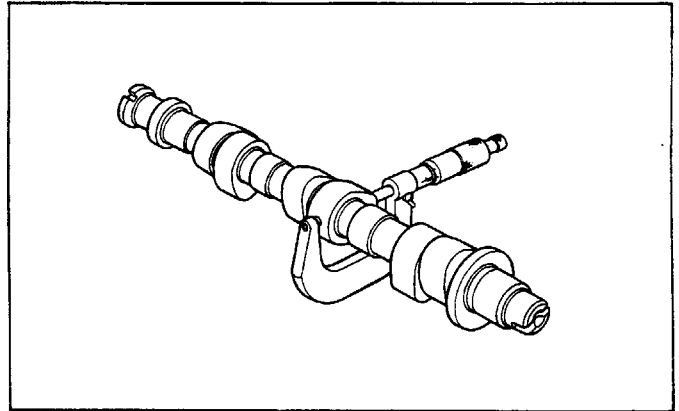


• CAMSHAFT JOURNAL O.D.

Measure the camshaft O.D.

STANDARD	SERVICE LIMIT
22.959—22.980 mm (0.9039—0.9047 in)	22.93 mm (0.903 in)


Replace the camshaft if its O.D. is smaller than the service limit.

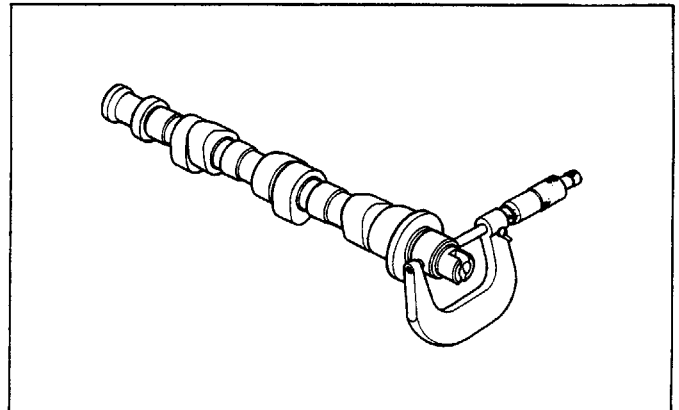

• CAMSHAFT RUNOUT

STANDARD	SERVICE LIMIT
0.03 mm (0.0012 in) Max.	0.05 mm (0.0019 in)

Camshaft runout is half of maximum gauge reading.

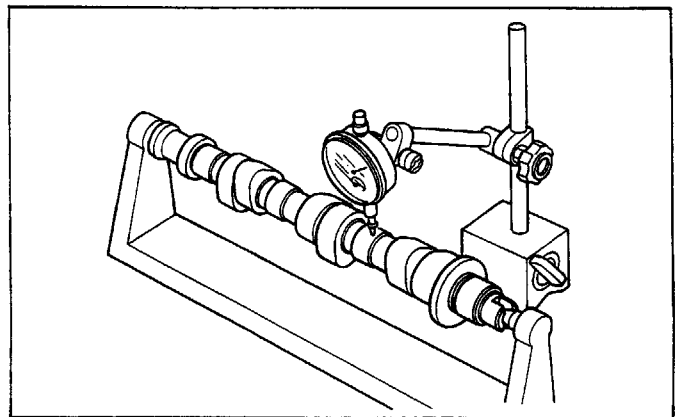


• CAMSHAFT AXIAL CLEARANCE

Measure the camshaft axial runout before removing the cylinder head from the cylinder block.

Loosen the valve adjusting lock nuts and back off the valve adjusting screws before inspection.


STANDARD	SERVICE LIMIT
0.03—0.11 mm (0.0012—0.0043 in)	0.3 mm (0.012 in)

Install the new camshaft and recheck the axial clearance. If it exceeds the service limit, replace the cylinder head.

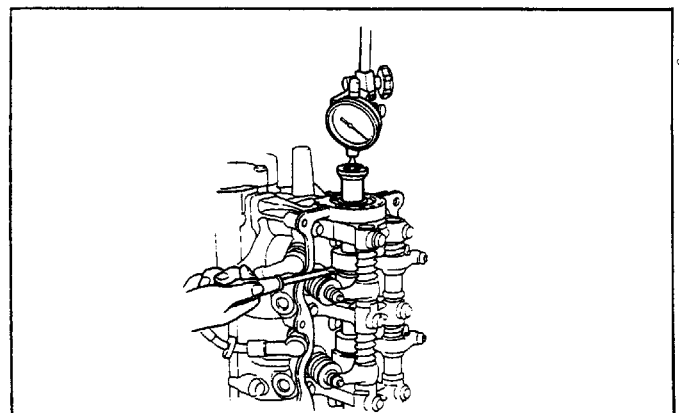

• CAMSHAFT OIL CLEARANCE

- 1) Set plastigauge axially on each camshaft journal.
- 2) Install the camshaft holders, No. 1, 2, 3 and 4, and each 8 x 14 mm dowel pins.

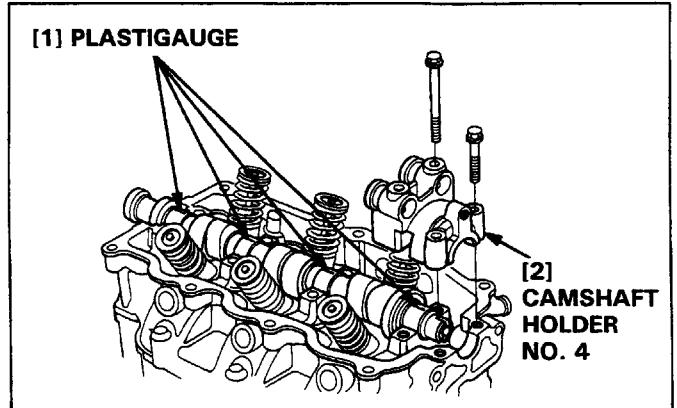


- 3) Tighten the 6 x 70 mm flange bolts and 6 x 35 mm flange bolts to the specified torque.

TORQUE:

- 6 x 70 mm flange bolts
14 N·m (1.4 kg-m, 10.1 ft-lb)
- 6 x 35 mm flange bolts
12 N·m (1.2 kg-m, 8.7 ft-lb)

CAUTION


- Do not rotate the shaft while tightening bolts. Tighten inner bolts first, then outer side with the same torque value.

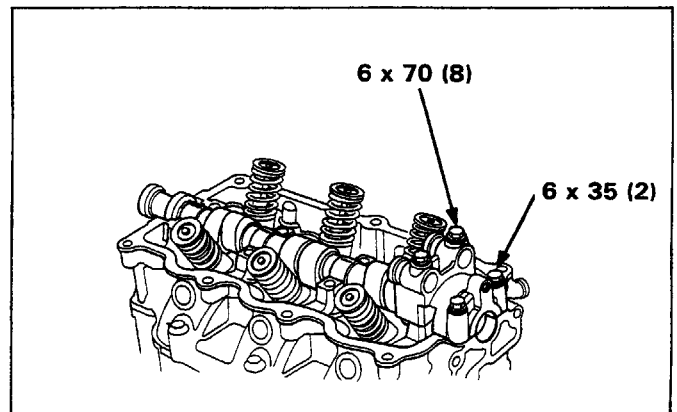

- 4) Remove the camshaft holder No. 1, 2, 3 and 4, and check the width of each plastigauge using a scale. Measure the width at its widest point.

STANDARD	SERVICE LIMIT
0.020—0.065 mm (0.0008—0.0026 in)	0.08 mm (0.003 in)


- 5) Replace the camshaft if the oil clearance exceeds the service limit.
- 6) Install a new camshaft and measure the oil clearance. if the oil clearance still exceeds the service limit, replace the cylinder head.

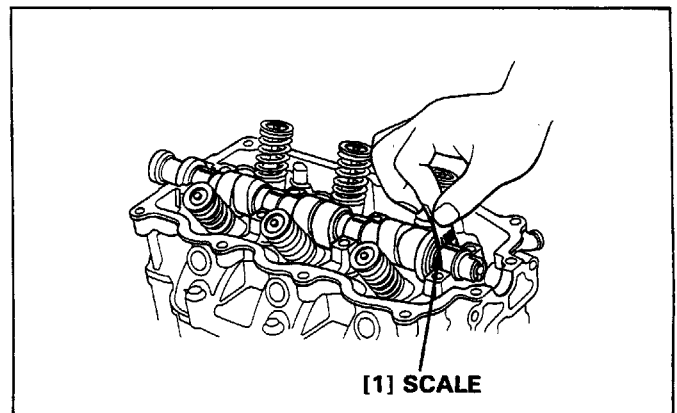

• CYLINDER HEAD


Remove carbon deposits from the combustion chamber. Clean off any gasket material from the cylinder head surface. Check the spark plug holes and valve areas for cracks. Check the cylinder head for warp with a straight edge and a feeler gauge.

Service limit	0.1 mm (0.004 in)
---------------	-------------------

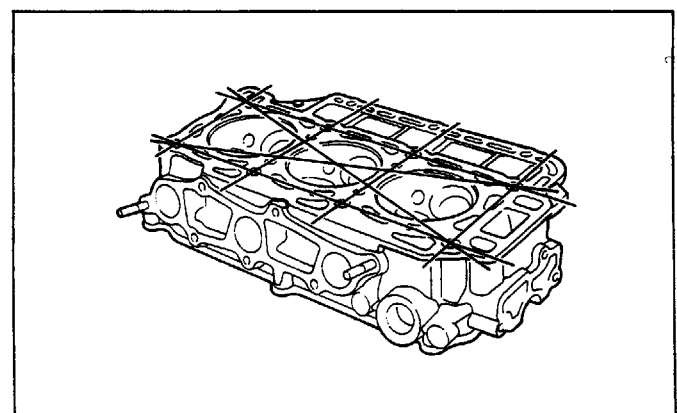


• PUMP BODY I.D.

STANDARD	SERVICE LIMIT
50.15–50.18 mm (1.974–1.975 in)	50.20 mm (1.976 in)

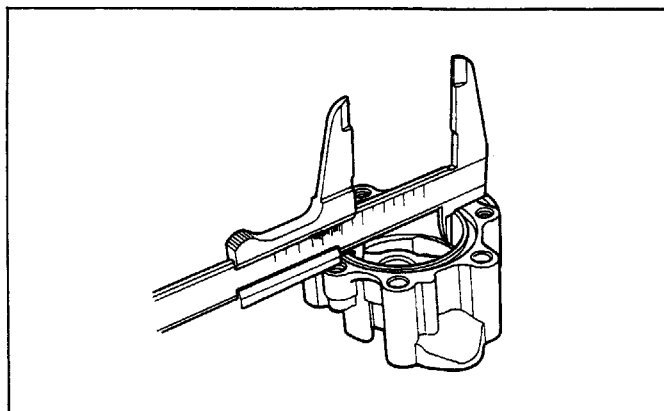

• INNER ROTOR-TO-OUTER ROTOR CLEARANCE

STANDARD	SERVICE LIMIT
0.15 mm (0.006 in) Max.	0.20 mm (0.0079 in)

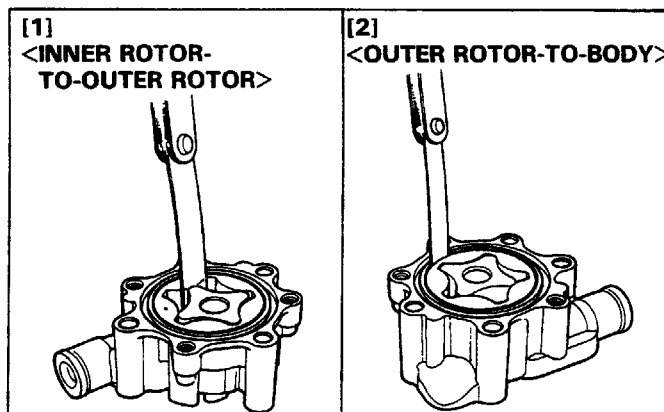


• OUTER ROTOR-TO-BODY CLEARANCE

STANDARD	SERVICE LIMIT
0.15–0.22 mm (0.006–0.009 in)	0.26 mm (0.0102 in)


• OUTER ROTOR HEIGHT

STANDARD	SERVICE LIMIT
16.98–17.0 mm (0.6685–0.6693 in)	16.93 mm (0.667 in)

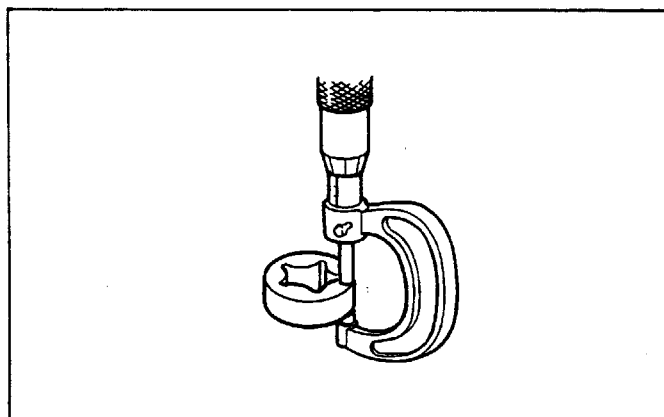


• PUMP BODY DEPTH

STANDARD	SERVICE LIMIT
17.02–17.05 mm (0.670–0.671 in)	17.09 mm (0.673 in)

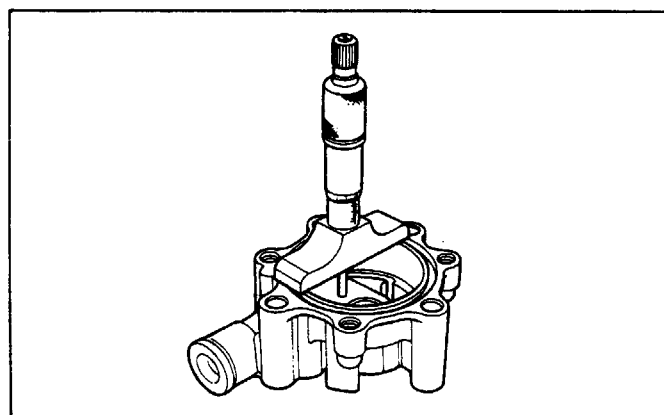

• PUMP END CLEARANCE

STANDARD	SERVICE LIMIT
0.02–0.07 mm (0.0008–0.0028 in)	0.1 mm (0.004 in)

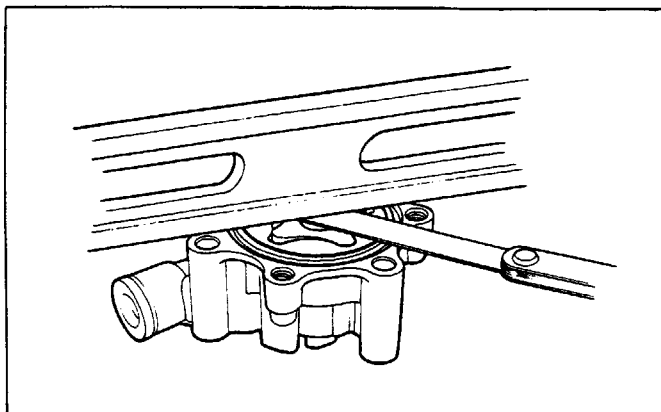


VALVE GUIDE REPLACEMENT


- 1) Chill the replacement valve guides in the freezer section of a refrigerator for about an hour.
- 2) Drive the valve guide out of the combustion chamber side using a valve guide driver (special tool).

CAUTION

- When driving the valve guides out, be careful not to damage the head.

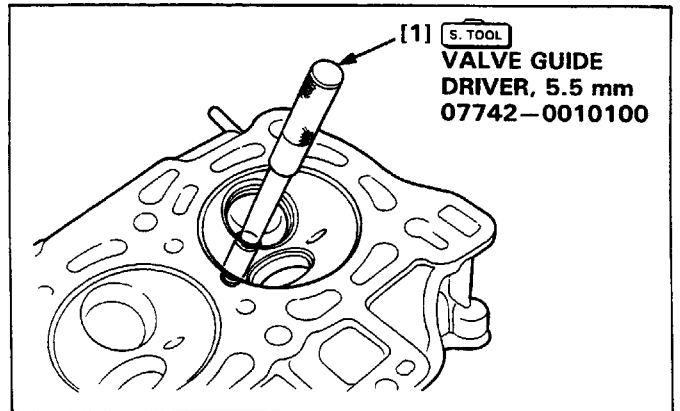

- 3) Remove the new valve guides from the refrigerator one at a time as needed.
- 4) Install the new valve guides from the valve spring side of the cylinder head. Drive each valve guide as shown.
- 5) After installation, inspect the valve guide for damage. Replace the guide if damaged.

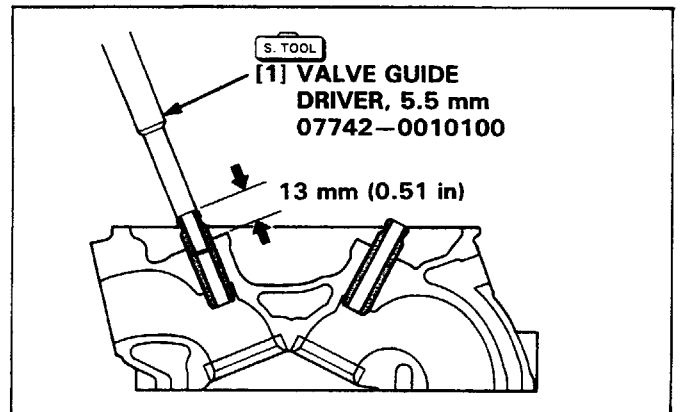


• VALVE GUIDE REAMING


NOTE

- For best results, be sure the cylinder head is at room temperature before reaming valve guides.

- 1) Coat the reamer and valve guide with cutting oil.
- 2) Rotate the reamer clockwise through the valve guide the full length of the reamer.
- 3) Continue to rotate the reamer clockwise while removing it from the valve guide.

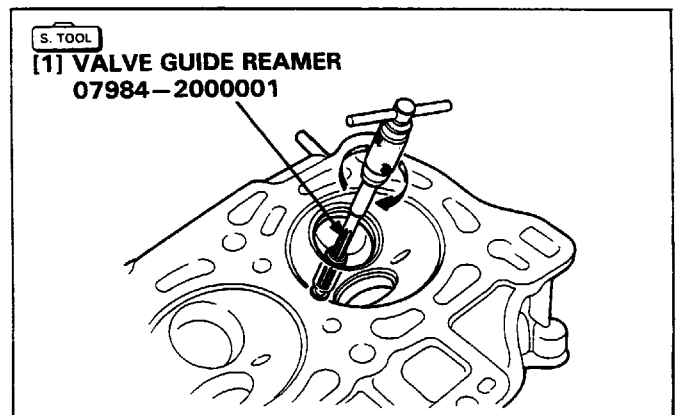

- 4) Thoroughly clean the cylinder head to remove any cutting residue.
- 5) Check the valve guide bore; it should be straight, round and centered in the valve guide, insert the valve and check operation. If the valve does not operate smoothly, the guide may have been bent during installation. Replace the valve guide if it is bent or damaged.
- 6) Check the Valve Guide-to-Stem Clearance. See page 9-8.

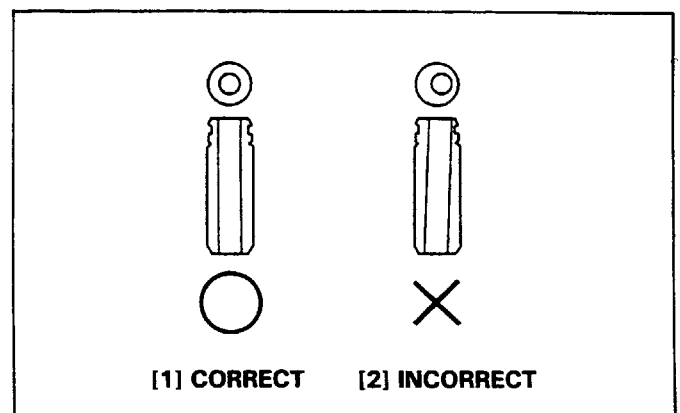


VALVE SEAT RECONDITIONING

- 1) Thoroughly clean the combustion chambers and valve seats to remove carbon deposits. Apply a light coat of Prussian Blue compound or erasable felt-tipped marker ink to the valve faces.
- 2) Insert the valves, and then lift them and snap them closed against their seats several times. Be sure the valve does not rotate on the seat. The transferred marking compound will show any area of the seat that is not concentric.



NOTE

- Follow Valve Seat Cutter Manufacturer's Instructions.

- 3) Using a 45° cutter, remove enough material to produce a smooth and concentric seat. Turn the cutter clockwise, never counterclockwise. Continue to turn the cutter as you lift it from the valve seat.

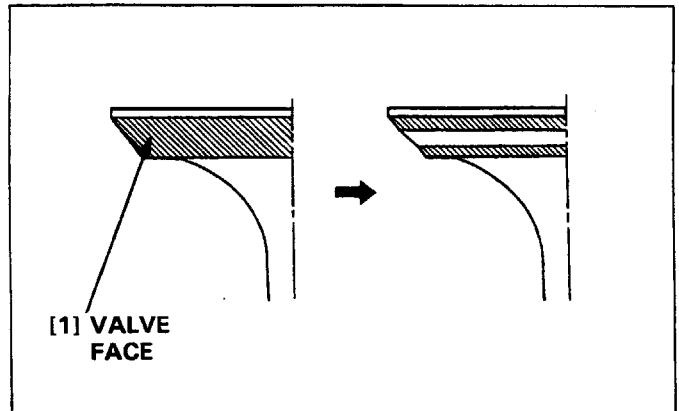

- 4) Use the 30°–32° and 60° cutters to narrow and adjust the valve seat so that it contacts the middle of the valve face. The 30°–32° cutter removes material from the top edge. The 60° cutter removes material from the bottom edge. Be sure that the width of the finished valve seat is within specification.

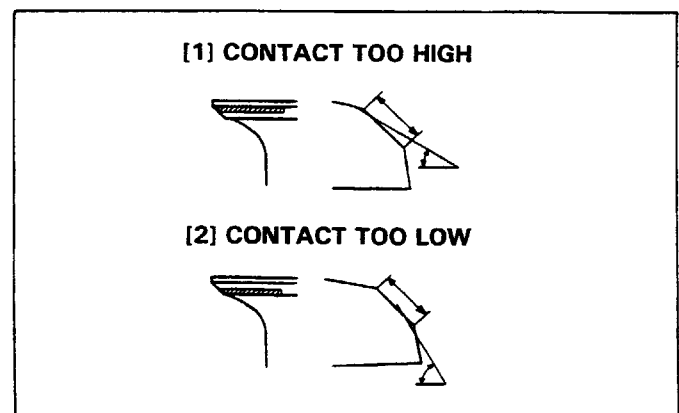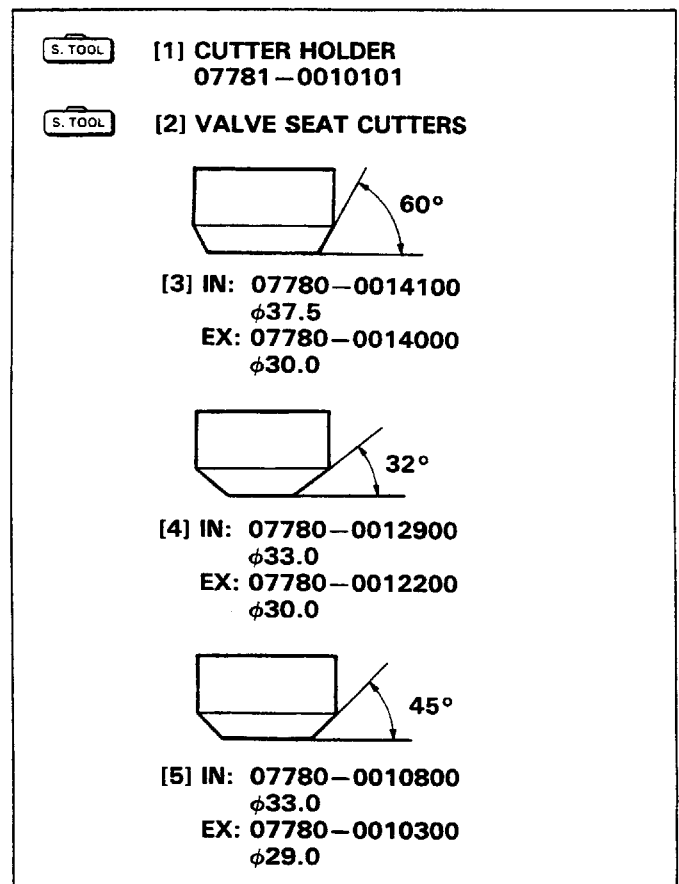

• VALVE SEAT WIDTH

STANDARD	SERVICE LIMIT
1.25–1.55 mm (0.049–0.061 in)	2.0 mm (0.08 in)



- 5) Make a light pass with 45° cutter to remove any possible burrs at the edges of the seat.
- 6) After resurfacing the seats, inspect for even valve seating. Apply Prussian Blue compound or erasable felt-tipped marker ink to the valve faces. Insert the valves, and then lift them and snap them closed against their seats several times. Be sure the valve does not rotate on the seat. The seating surface, as shown by the transferred marking compound, should have good contact all the way around.
- 7) Lap the valves into their seats, using a hand valve lapper and lapping compound (commercially available).

CAUTION

- To avoid severe engine damage, be sure to remove all lapping compound from the engine before reassembly.

NOTE

- Check valve clearance after reassembly.

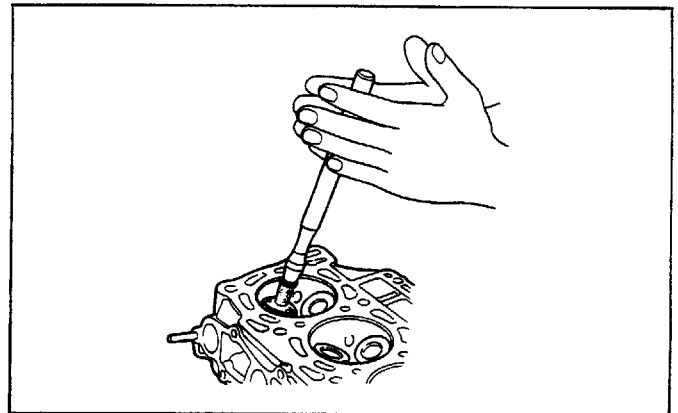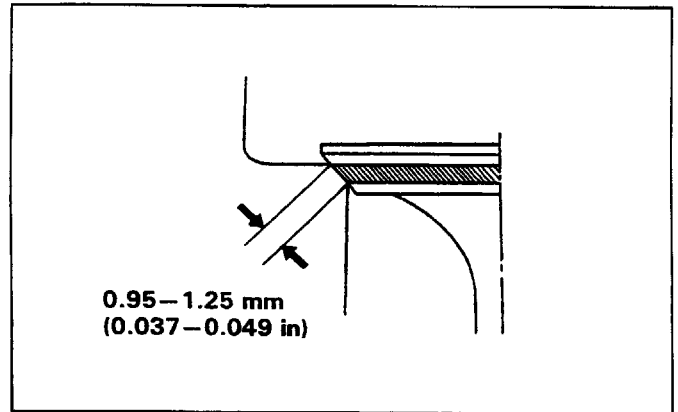

CRANKCASE/CYLINDER BLOCK/CRANKSHAFT/ PISTON

CRANKCASE	10-2
CYLINDER BLOCK/ CRANKSHAFT	10-6
PISTON	10-8
INSPECTION	10-9
BEARING SELECTION	10-13

1

CRANKCASE

a. DISASSEMBLY/REASSEMBLY

- 1) Remove the engine (P.7-2)
- 2) Remove the cylinder head (P.9-2)

[1]
6 x 40 (10)

REASSEMBLY: P. 10-4
TORQUE:
11 N·m (1.1 kg-m, 8.0 ft-lb)

[13]
CRANKCASE

REASSEMBLY: P. 10-3

[12]
Molybdenum
disulfide oil

Apply oil to the mating surface with the crankshaft. Do not apply oil to the mating surface with the crankcase.

[11]
WATER HOSE JOINT

REASSEMBLY:
Apply Three Bond #1215 or equivalent adhesive to the threads.

[10]
PRIMARY DRIVE GEAR

DISASSEMBLY: P. 10-5
SELECTION: P. 10-15

[8]
6005 RADIAL BALL BEARING

**DISASSEMBLY/
REASSEMBLY:** P. 10-3

[2]
8 x 95 (8)

REASSEMBLY: P. 10-4

Apply locking agent and tighten to the specified torque. Mark the alignment position on the bolts and crankcase, then additionally tighten $90^{\circ+30}_0$.
TORQUE: 28 N·m (2.8 kg-m, 20.2 ft-lb), then additionally tighten $90^{\circ+30}_0$.
INSPECTION: P.10-3

[3]
8 mm PLAIN WASHER (8)

[4]
MAIN BEARINGS

REASSEMBLY:

- Use care not to damage the bearings.
- Make sure the locking lug on each bearing fits in the notch in the crankcase.

SELECTION: P. 10-13


[5]
10 x 12 mm DOWEL PIN (8)

[6]
OIL FILTER

DISASSEMBLY/REASSEMBLY:

Remove/install the oil filter using the special tool. Before installation, coat the O-ring with the engine oil and the threaded portion of the cylinder block with Three Bond #1323B or equivalent.

[6]-1 OIL FILTER

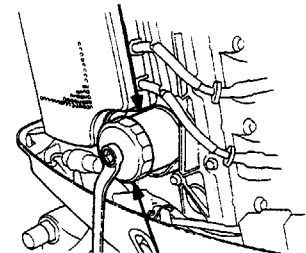

[6]-2
S. TOOL

OIL FILTER WRENCH
07HAA-PJ70100

REPLACEMENT: P. 3-3

TORQUE:
8 N·m (0.8 kg-m, 5.6 ft-lb)

[7] 22 mm LOCK NUT

DISASSEMBLY/REASSEMBLY: P. 10-4
TORQUE:
92 N·m (9.2 kg-m, 66.5 ft-lb)


[9]
22 mm WASHER

b. INSPECTION

• 8 x 95 mm FLANGE BOLT

Measure bolt length. If not within service limit, replace the bolt.

STANDARD	SERVICE LIMIT
93.5–94.5 mm (3.68–3.72 in)	95.4 mm (3.76 in)

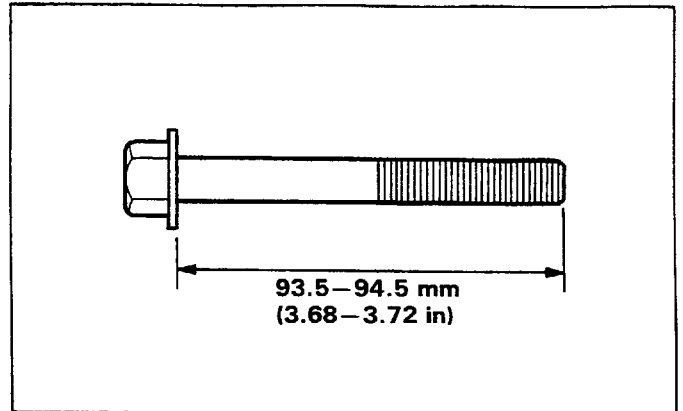


• 6005 RADIAL BALL BEARING

DISASSEMBLY:

Remove the 6005 radial ball bearing using the special tool.

TOOL:

Bearing remover, 25 mm 07936–ZV10000

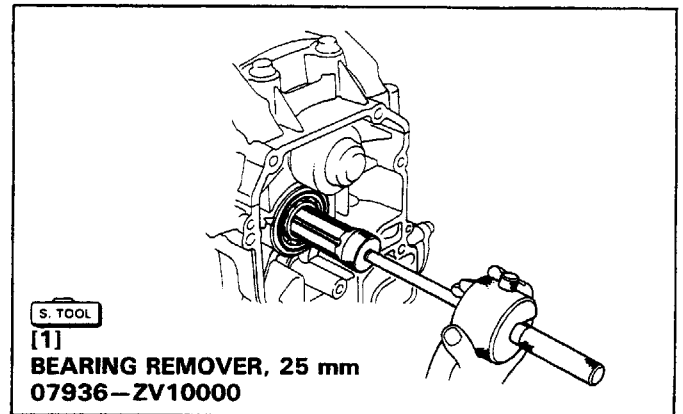


REASSEMBLY:

Install the 6005 radial ball bearing using the special tools.

TOOLS:

Handle A 07749–0010000
Attachment, 42 x 47 mm 07746–0010300
Pilot, 25 mm 07746–0040600

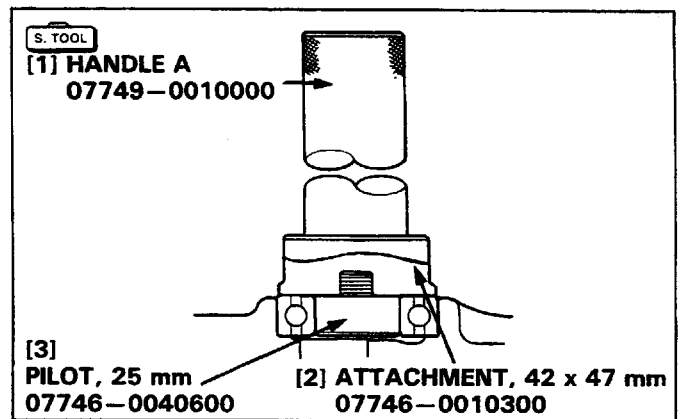


• CRANKCASE

REASSEMBLY:

Before installation, apply Three Bond #1141C or equivalent to the position shown in the drawing.

CAUTION

- Do not apply the liquid gasket to the crankshaft journal and the bolt hole.

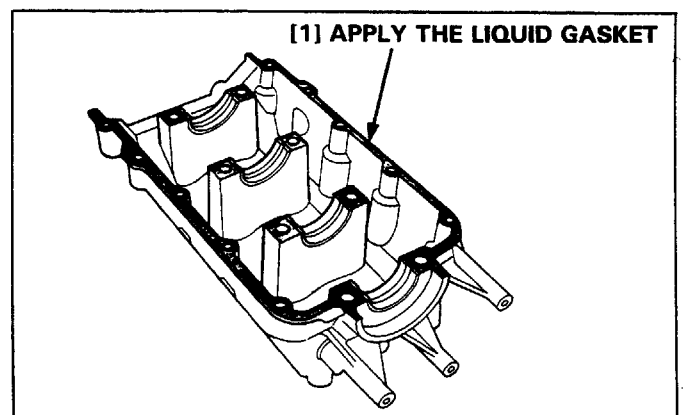


• 8 x 95 mm/6 x 40 mm FLANGE BOLT

REASSEMBLY:

Tighten the eight 8 x 95 mm flange bolts and the ten 6 x 40 mm flange bolts to the specified torque in the numbered sequence shown in the drawing. After tightening the 8 x 95 mm flange bolts to the specified torque, mark the alignment position on the bolts and crankcase, then tighten the bolts additionally $90^{\circ+30}_0$.

TORQUE: 8 x 95 mm flange bolt 28 N·m (2.8 kg-m, 20.2 ft-lb), then additionally tighten $90^{\circ+30}_0$.
6 x 40 mm flange bolt 11 N·m (1.1 kg-m, 8.0 ft-lb)

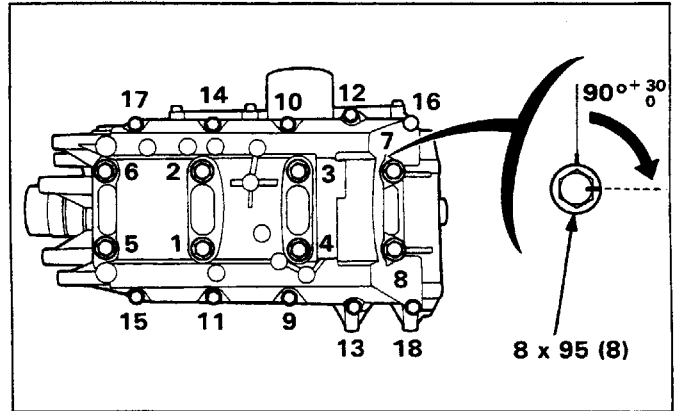

• 22 mm LOCK NUT


DISASSEMBLY/REASSEMBLY:

- 1) Hold the crankshaft using the special tool when removing/installing the 22 mm lock nut.
- 2) Remove the 22 mm lock nut by using the following special tools.

TOOLS:

Lock nut wrench
Ring gear holder

07916-750000
07LPB-ZV30100

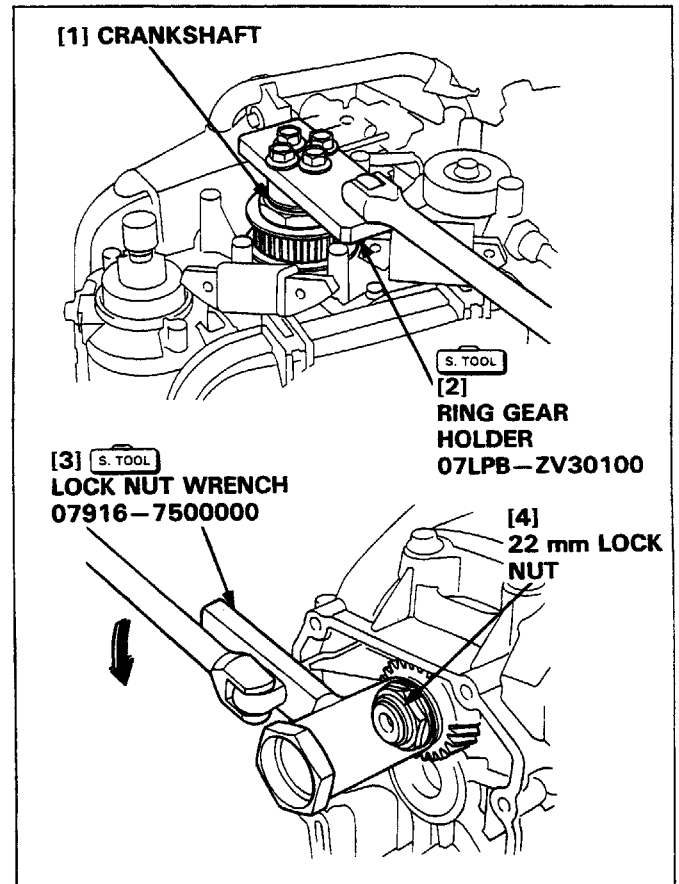


- 3) On installation, replace the lock nut with a new one. Install the 22 mm lock nut using the special tool.

TOOL:


Lock nut wrench

07916-750000

TORQUE: 92 N·m (9.2 kg-m, 66.5 ft-lb)

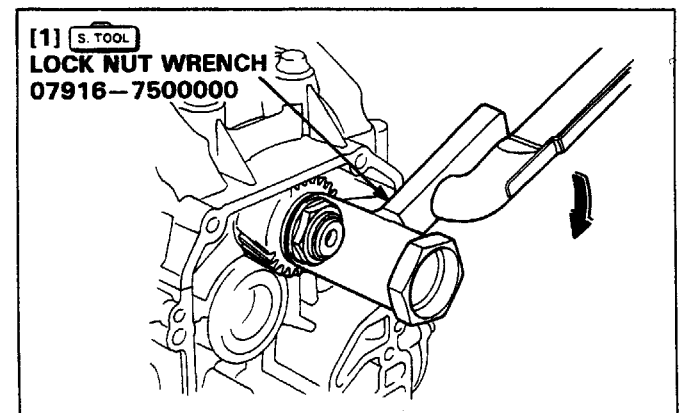


4) After installation, stake the lock nut by using the dent in the crankshaft.

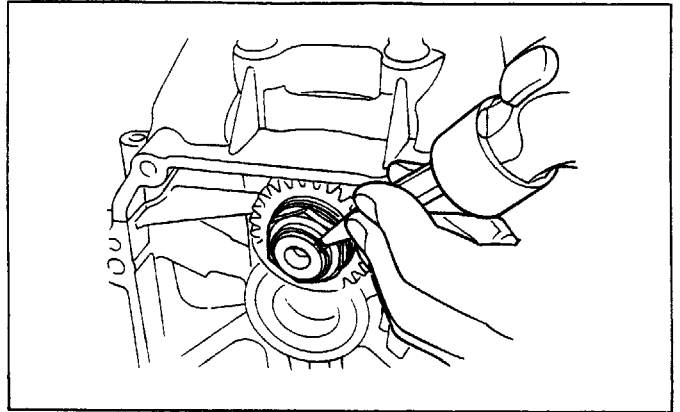

• **PRIMARY DRIVE GEAR**

DISASSEMBLY:


Remove the primary drive gear using the universal puller.

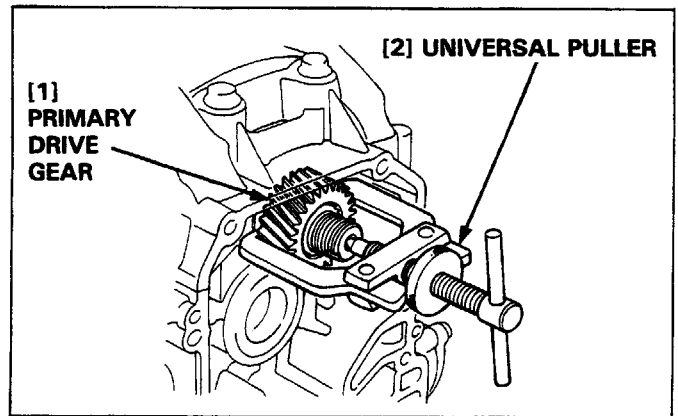

CYLINDER BLOCK/CRANKSHAFT

a. DISASSEMBLY/REASSEMBLY


1) Remove the crankcase (P. 10-2).

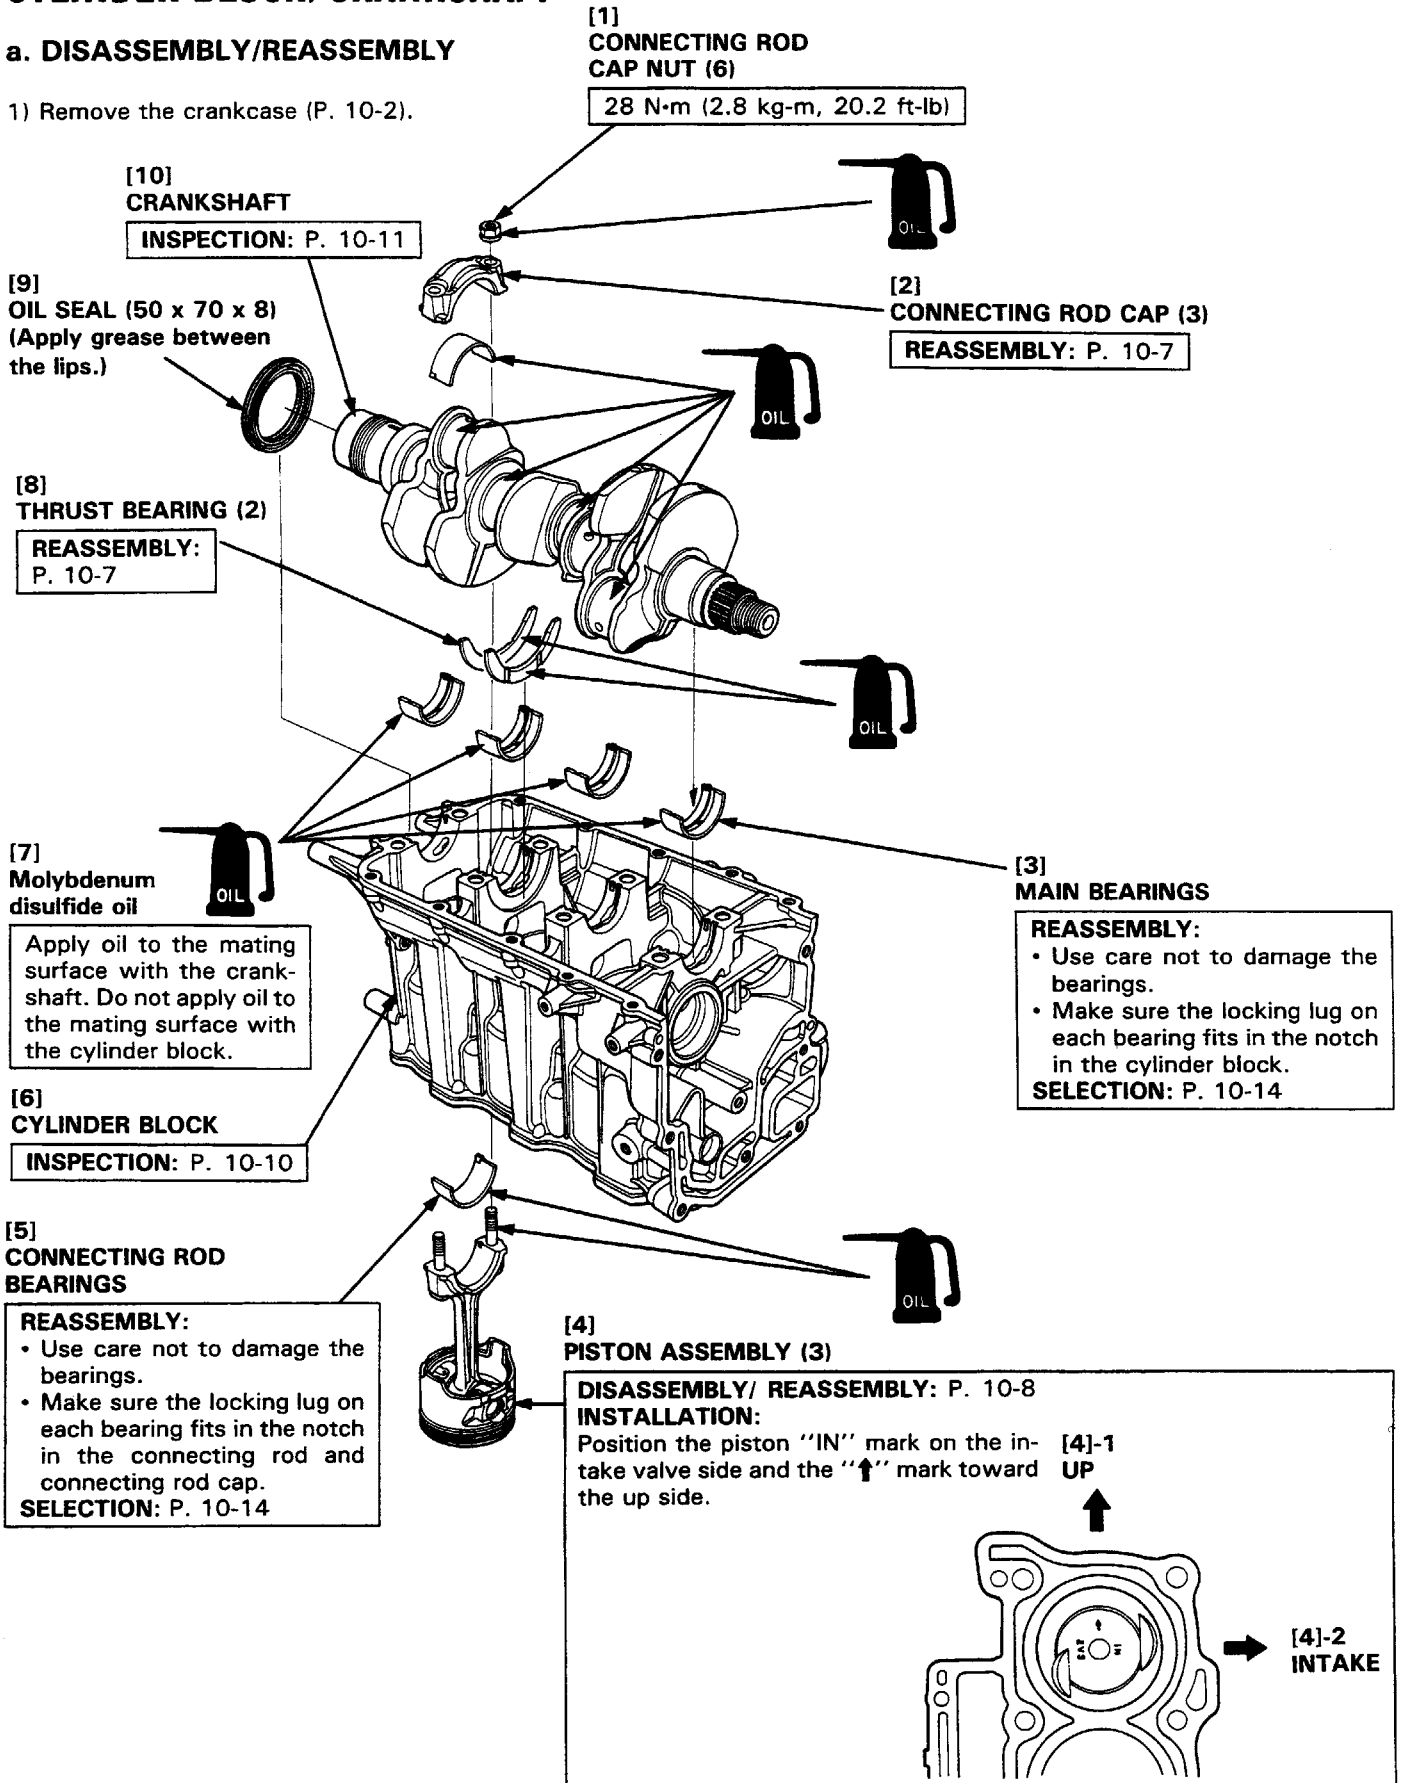

• **CONNECTING ROD CAP**

REASSEMBLY:


Install the connecting rod caps aligning the marks of the connecting rods and caps.

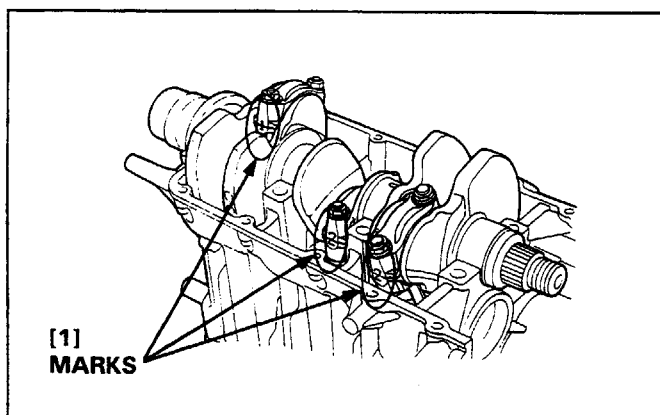

• **THRUST BEARING**

REASSEMBLY:


Install with the grooved side toward the crankshaft.

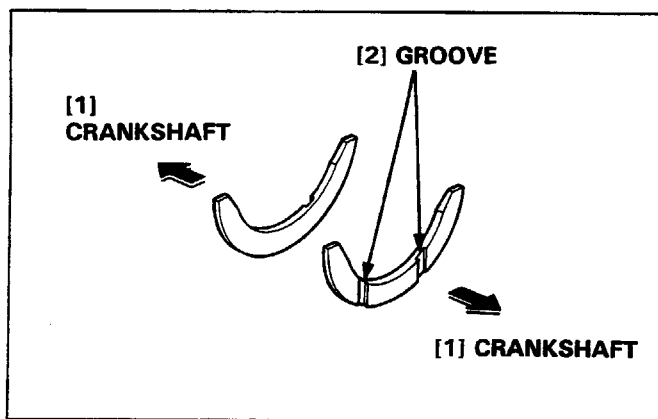

• **PISTON/CONNECTING ROD**

REASSEMBLY:

Assemble so that "↑" mark on the piston points in the same direction as "ZV5" mark on the connecting rod.

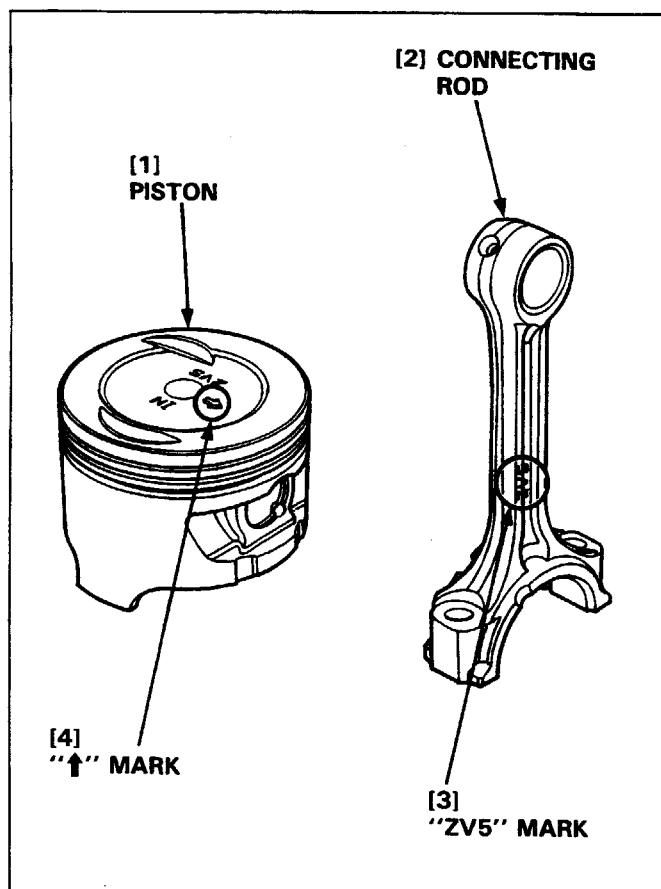


PISTON

a. DISASSEMBLY/REASSEMBLY

NOTE

- After installing pistons and connecting rods in the cylinder block, secure the rods to the crankshaft.

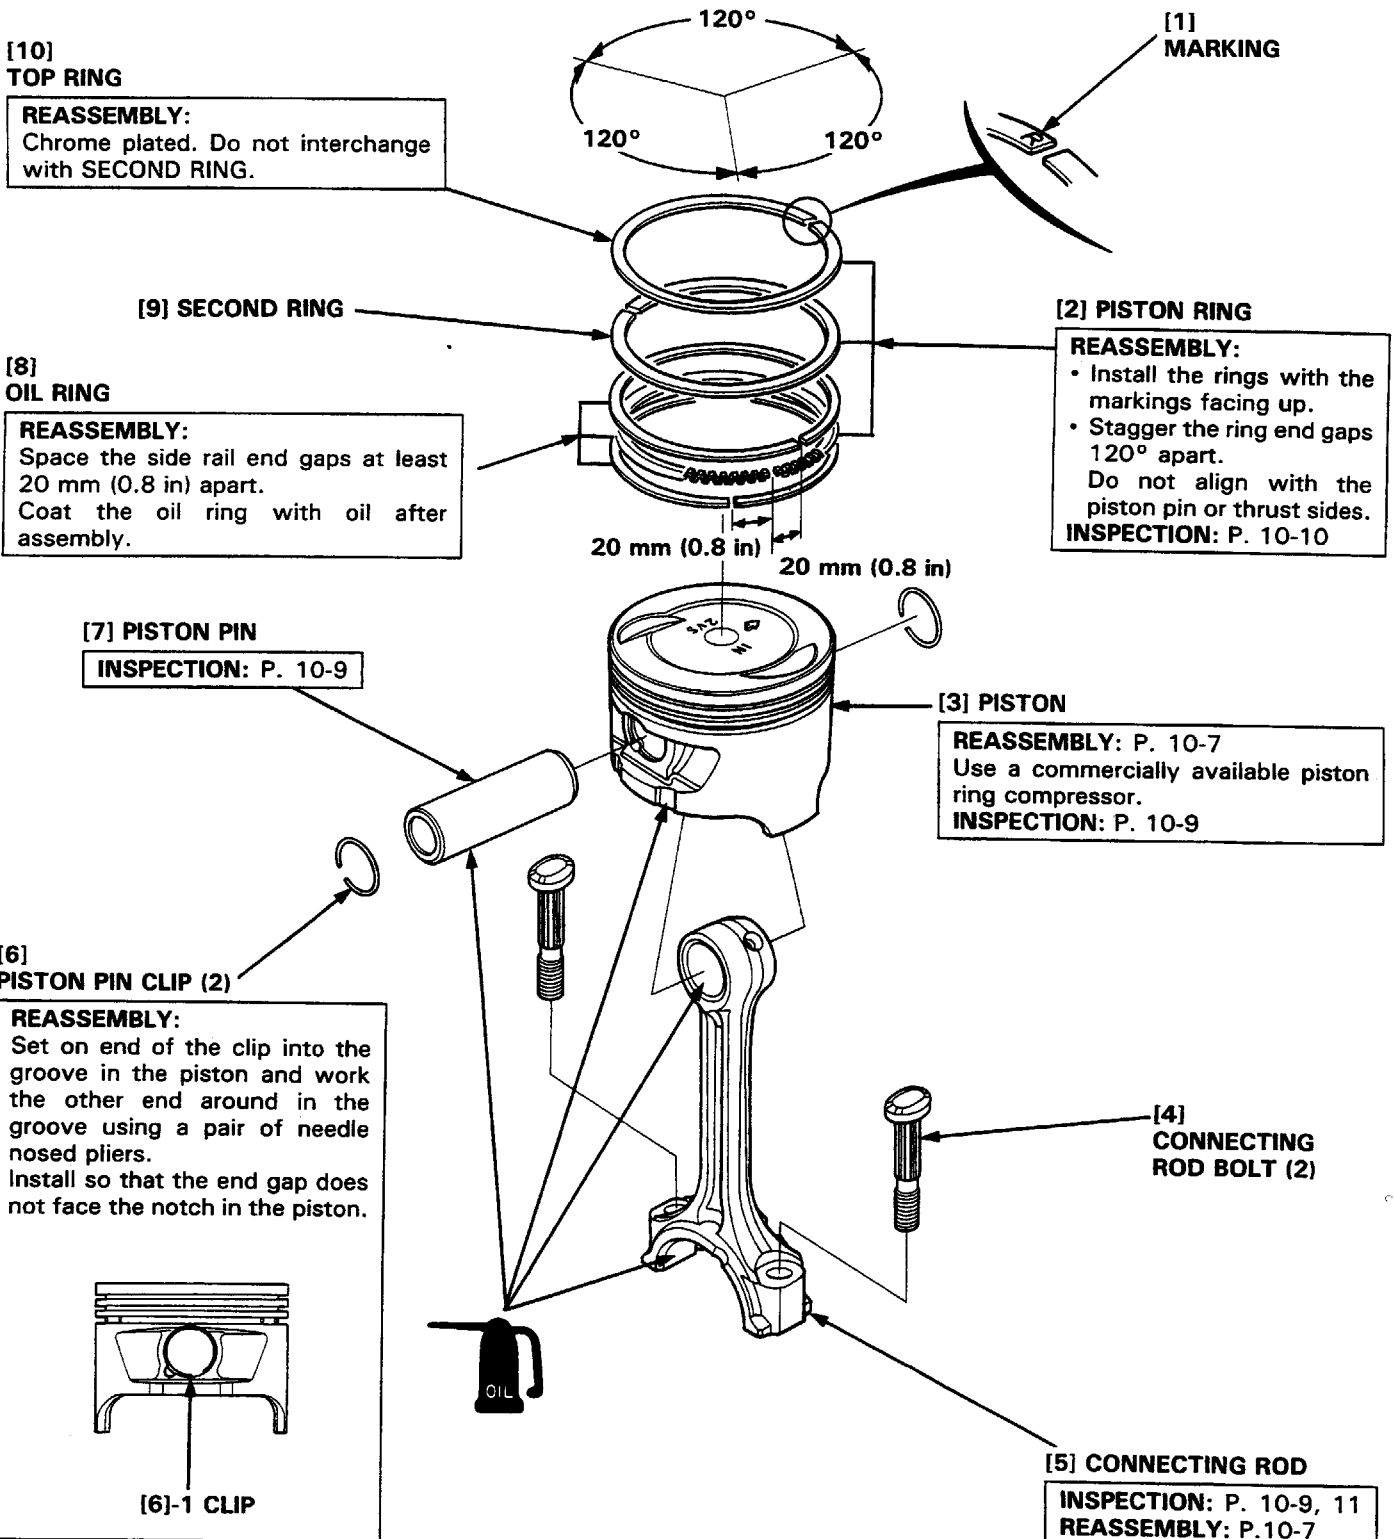


INSPECTION

For pistons, crankshaft, and cylinder inspection, measure the following. If needed, replace them.

• PISTON SKIRT O.D.


Measure and record the piston O.D. at a point 10 mm (0.4 in) from the bottom, and 90° to the piston pin bore.

STANDARD	SERVICE LIMIT
69.970–69.990 mm (2.7547–2.7555 in)	69.910 mm (2.7524 in)

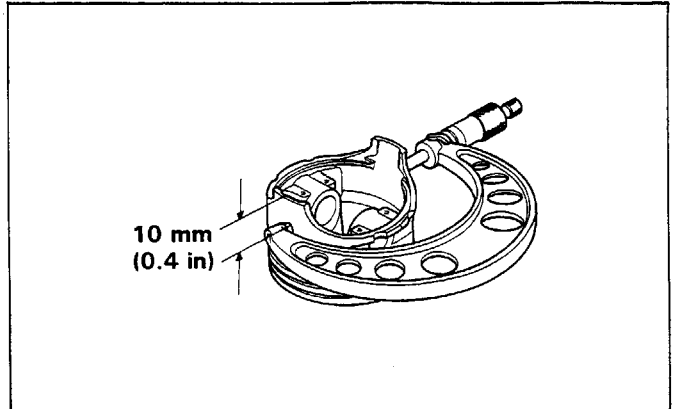


• PISTON PIN HOLE I.D.

STANDARD	SERVICE LIMIT
18.002–18.008 mm (0.7087–0.7090 in)	17.96 mm (0.707 in)

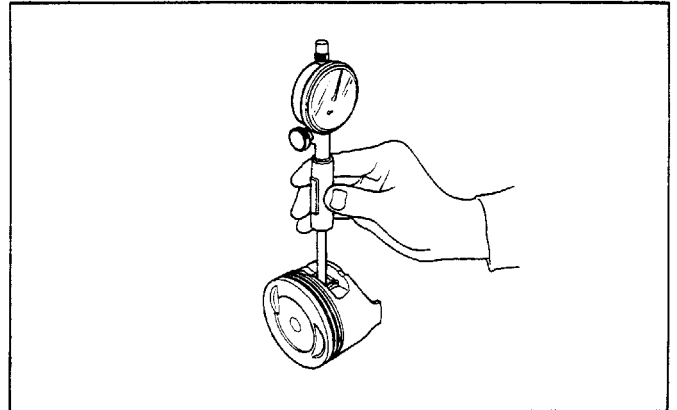


• PISTON PIN O.D.

STANDARD	SERVICE LIMIT
17.994–18.000 mm (0.7084–0.7086 in)	17.954 mm (0.7068 in)

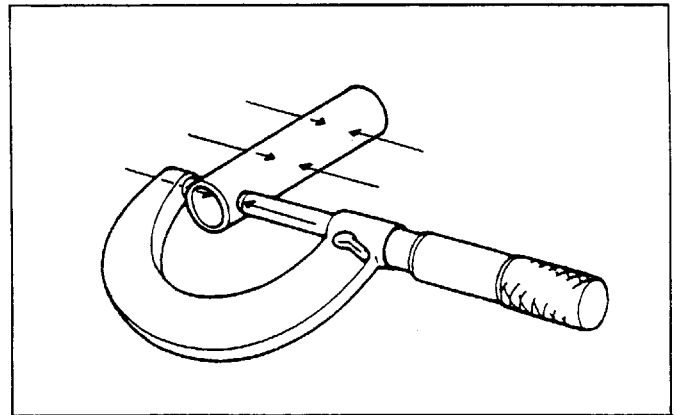


• CONNECTING ROD SMALL END I.D.

STANDARD	SERVICE LIMIT
18.016–18.034 mm (0.7093–0.7100 in)	18.05 mm (0.711 in)

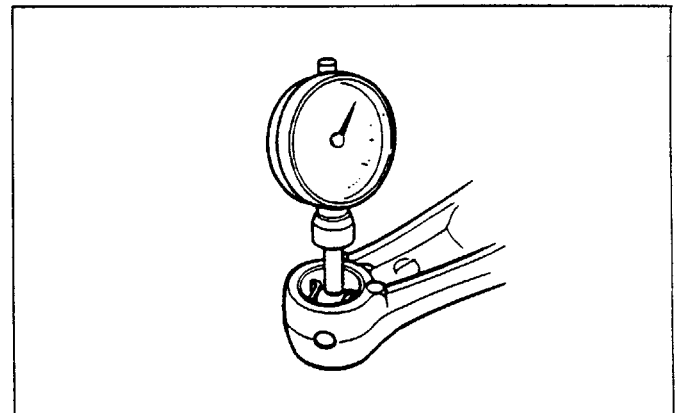


• PISTON RING WIDTH

	STANDARD	SERVICE LIMIT
TOP	0.990–1.025 mm (0.0390–0.0404 in)	0.96 mm (0.038 in)
SECOND	1.190–1.225 mm (0.0469–0.0482 in)	1.160 mm (0.0457 in)

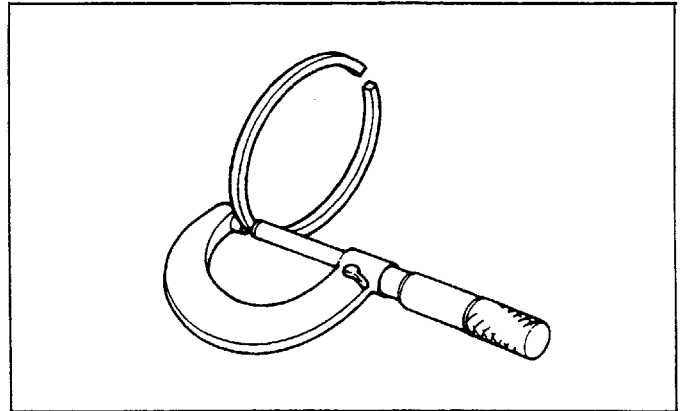

• PISTON RING SIDE CLEARANCE

	STANDARD	SERVICE LIMIT
TOP	0.040–0.065 mm (0.0016–0.0026 in)	0.1 mm (0.004 in)
SECOND	0.015–0.045 mm (0.00059–0.0018 in)	0.1 mm (0.004 in)
OIL	0.055–0.140 mm (0.0022–0.0055 in)	0.15 mm (0.006 in)

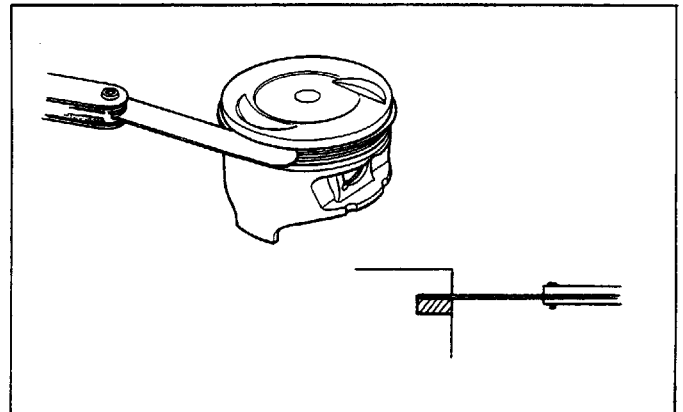


• CYLINDER I.D.

Measure and record the cylinder I.D. at three levels in both X and Y axis. Take the maximum reading to determine the cylinder wear.

STANDARD	SERVICE LIMIT
70.0–70.015 mm (2.7559–2.7565 in)	70.06 mm (2.758 in)


• PISTON-TO-CYLINDER CLEARANCE

STANDARD	SERVICE LIMIT
0.010–0.045 mm (0.0004–0.0018 in)	0.09 mm (0.0035 in)

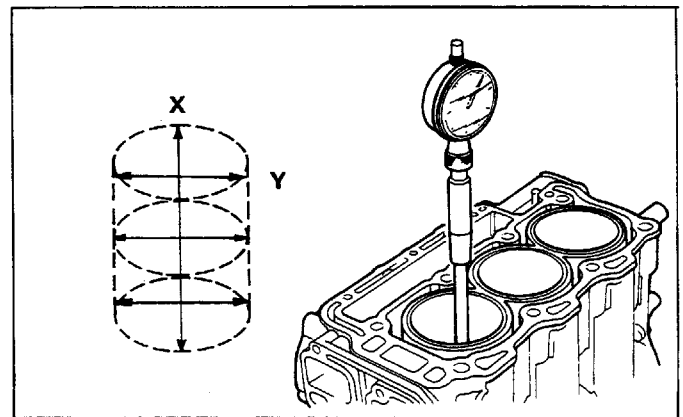


• PISTON RING END GAP

	STANDARD	SERVICE LIMIT
TOP	0.15–0.3 mm (0.006–0.012 in)	0.8 mm (0.03 in)
SECOND	0.3–0.45 mm (0.012–0.018 in)	0.95 mm (0.037 in)
OIL	0.2–0.7 mm (0.0079–0.028 in)	1.0 mm (0.04 in)

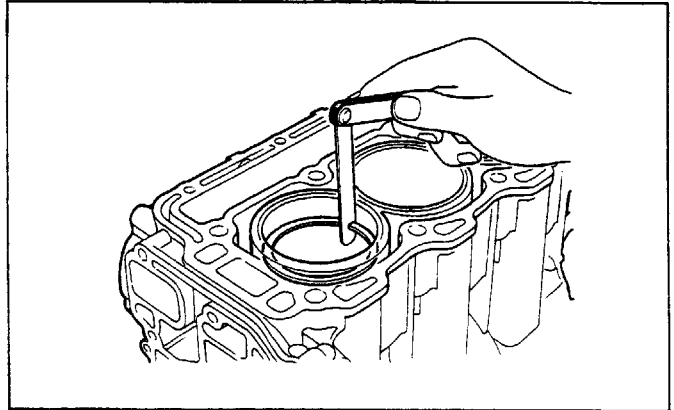


• CRANKSHAFT MAIN JOURNAL O.D.

STANDARD	SERVICE LIMIT
39.982–40.006 mm (1.5741–1.5750 in)	39.95 mm (1.572 in)

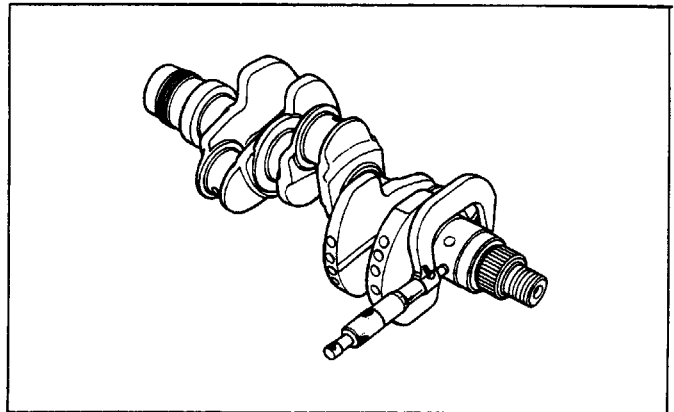

• CRANKPIN O.D.

STANDARD	SERVICE LIMIT
37.976–38.0 mm (1.4951–1.4961 in)	37.94 mm (1.494 in)

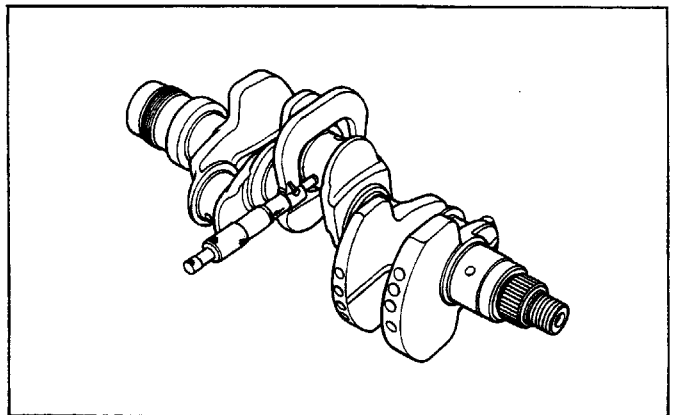


• CONNECTING ROD BIG END OIL CLEARANCE

- 1) Clean all oil from the crankpin and connecting rod bearing surfaces.
- 2) Place a piece of plastigauge on the crankpin, install the connecting rod and cap and tighten the nuts.

TORQUE: 28 N·m (2.8 kg·m, 20.2 ft·lb)


NOTE

- Do not rotate the crankshaft while the plastigauge is in place.

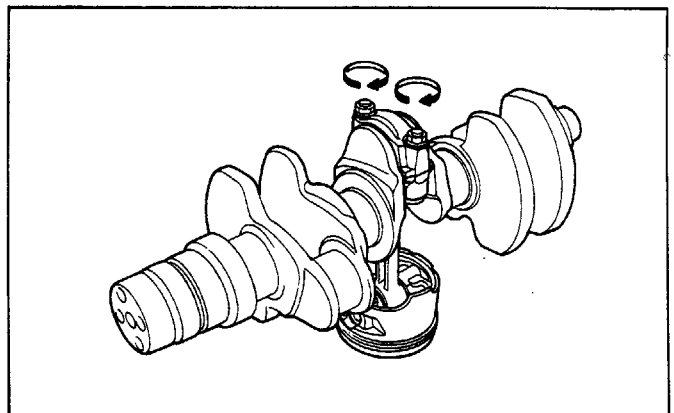

3) Remove the connecting rod and measure the plastigauge.


STANDARD	SERVICE LIMIT
0.020—0.038 mm (0.0008—0.0015 in)	0.08 mm (0.003 in)

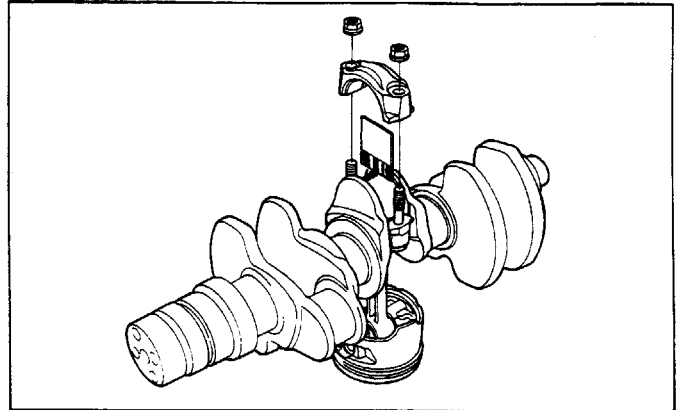

• CONNECTING ROD BIG END AXIAL CLEARANCE

Measure the clearances with a feeler gauge.


STANDARD	SERVICE LIMIT
0.05—0.2 mm (0.0019—0.0079 in)	0.3 mm (0.012 in)

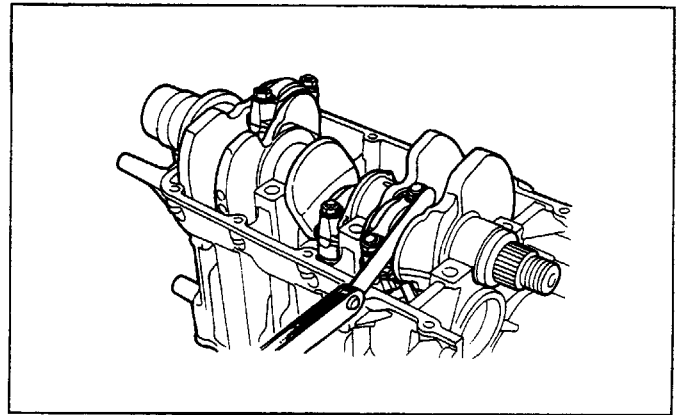

• CRANKSHAFT SIDE CLEARANCE

Measure the clearances with a feeler gauge.

STANDARD	SERVICE LIMIT
0.05—0.3 mm (0.0019—0.012 in)	0.45 mm (0.018 in)

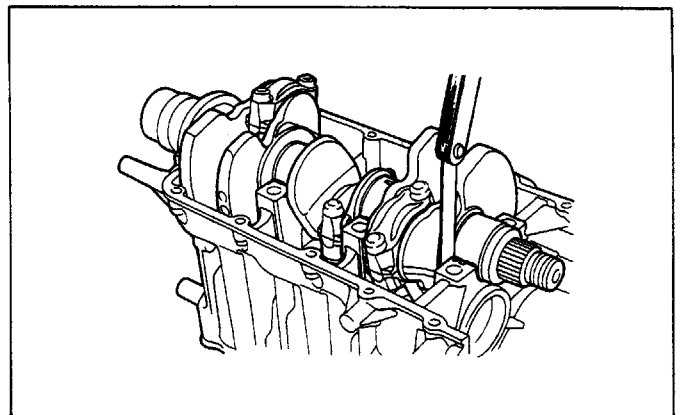

BEARING SELECTION

a. MAIN BEARING

1) Record the crankshaft main journal O.D. code numbers (or measure the main journal O.D.).


2) Record the crankcase I.D. code numbers.

NOTE


- Numbers on the crankcase are the codes for main journal I.D.s from front to rear.

3) Cross reference the case and journal codes to determine the replacement bearing color code.

[1]
MAIN JOURNAL O.D.
CODE NUMBERS

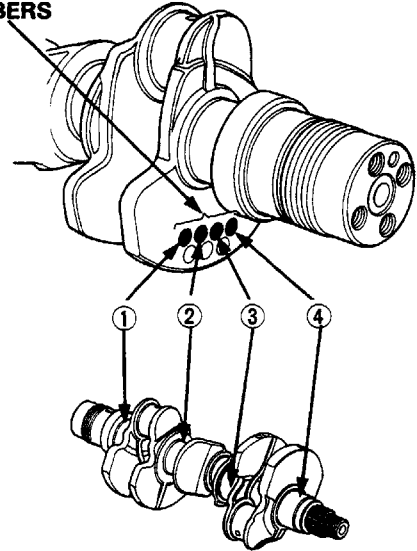

[1] CRANKCASE I.D.
CODE NUMBERS

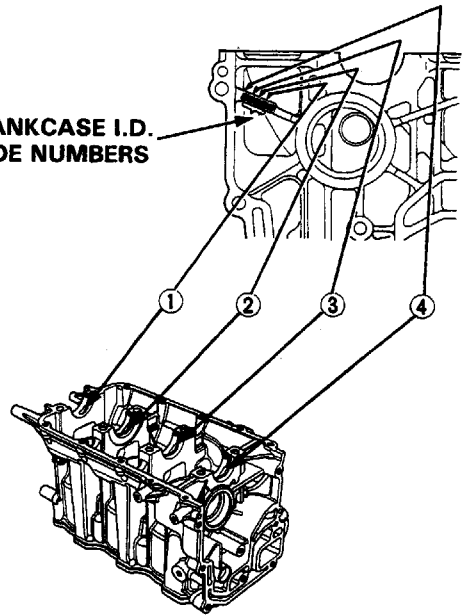

STANDARD OIL CLEARANCE

0.020—0.038 mm
(0.0008—0.0015 in)

Unit: mm (in)


Crankcase I.D. 44ø		Mark A	Mark B	Mark C	Mark D
Crankshaft O.D. 40ø		0—Less than 0.006(0.0002)	0.006(0.0002)— Less than 0.012(0.0005)	0.012(0.0005)— Less than 0.018(0.0007)	0.018(0.0007)— Less than 0.024(0.0009)
Mark 1	Less than 0.006(0.0002)—0	RED	PINK	YELLOW	GREEN
Mark 2	Less than 0— -0.006(-0.0002)	PINK	YELLOW	GREEN	BROWN
Mark 3	Less than -0.006(-0.0002)— -0.012(-0.0005)	YELLOW	GREEN	BROWN	BLACK
Mark 4	Less than -0.012(-0.0005)— -0.024(-0.0009)	GREEN	BROWN	BLACK	BLUE

REASSEMBLY:

Make sure the locking lug on each bearing fits in the notch in the bearing saddle.

Be careful not to damage the bearings.



[1] LOCKING LUG

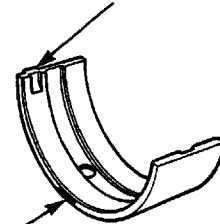


[2]
IDENTIFICATION
COLOR

b. CONNECTING ROD BEARING

1) Record the crankpin O.D. code letters (or measure the crankpin journal O.D.)

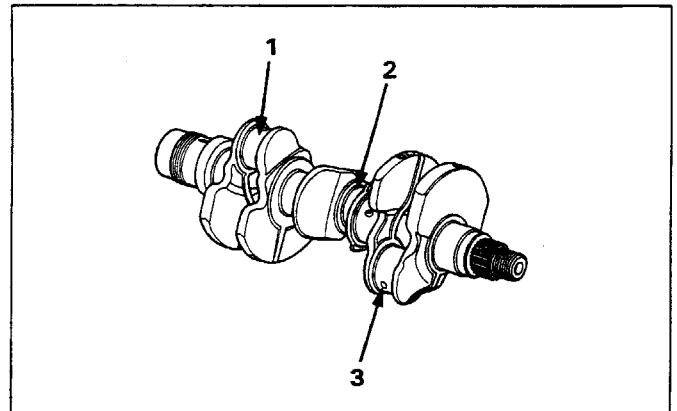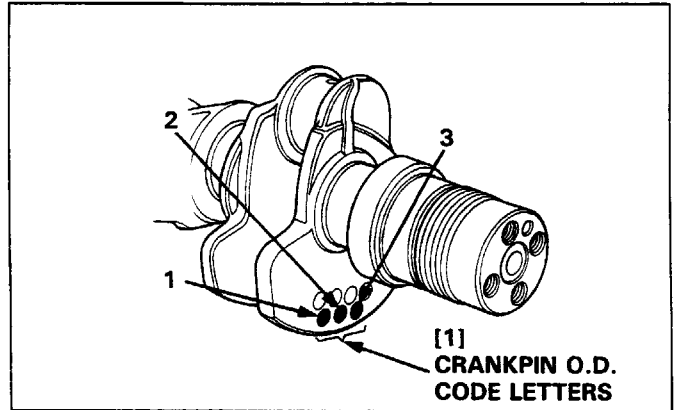

2) Record the connecting rod I.D. code letters or measure the I.D. with the bearing cap installed without bearing inserts.

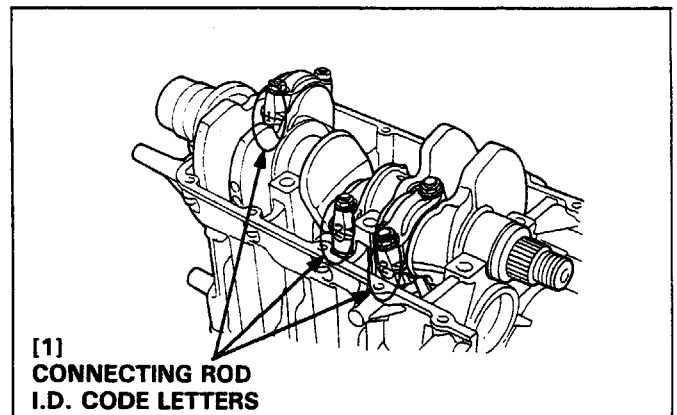

3) Cross-reference the crankpin and rod codes to determine the replacement bearing color.


Unit: mm (in)

Crank pin O.D. 38φ		Mark A	Mark B	Mark C	Mark D
Connecting rod I.D. 41φ		Less than 0— -0.006(-0.0002)	Less than -0.006(-0.0002)— -0.012(-0.0005)	Less than -0.012(-0.0005)— -0.018(-0.0007)	Less than -0.018(-0.0007)— -0.024(-0.0009)
Mark 1	0—Less than 0.006(0.0002)	RED	PINK	YELLOW	GREEN
Mark 2	0.006(0.0002)— Less than 0.012(0.0005)	PINK	YELLOW	GREEN	BROWN
Mark 3	0.012(0.0005) Less than 0.018(0.0007)	YELLOW	GREEN	BROWN	BLACK
Mark 4	0.018(0.0007)— Less than 0.024(0.0009)	GREEN	BROWN	BLACK	BLUE

REASSEMBLY:


Be careful not to damage the bearings.

Make sure the locking lug on each bearing fits into the notch in the connecting rod.

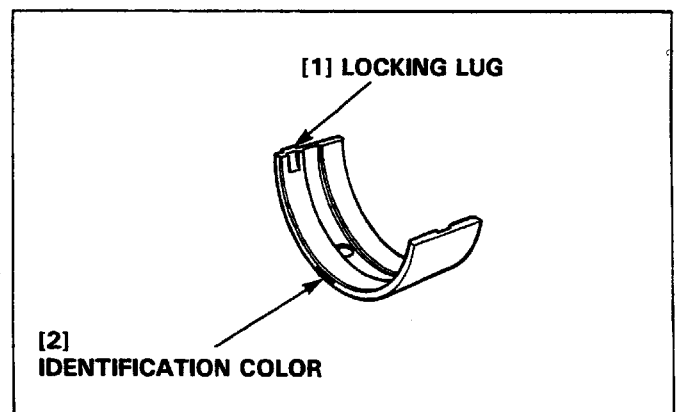


c. PRIMARY DRIVE GEAR

1) Record the right end number of the primary drive gear I.D. number.

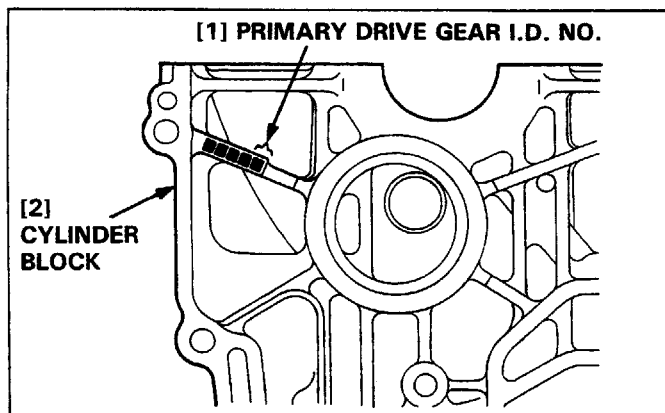

2) Determine the primary drive gear I.D. color and select the proper primary drive gear by referring to the primary drive gear I.D. number.

Primary drive gear I.D. No.	Primary drive gear I.D. color	Primary drive gear part No.	Parts name
1	YELLOW	23413-ZV5-000	Primary drive gear C
2	BLUE	23412-ZV5-000	Primary drive gear B
3	WHITE	23411-ZV5-000	Primary drive gear A

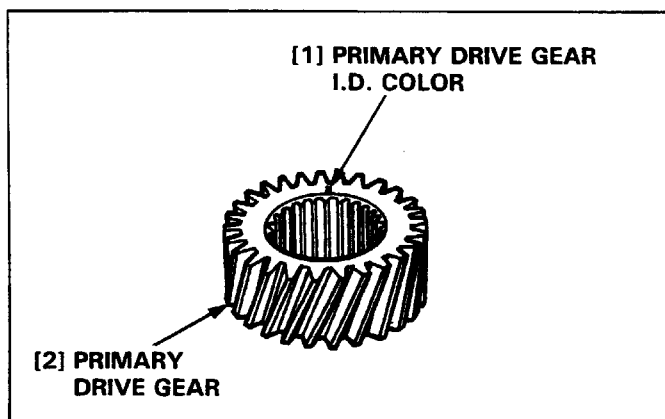


**PROPELLER/GEAR CASE/
EXTENSION CASE**

PROPELLER/PROPELLER SHAFT HOLDER ASSEMBLY	11-2
PROPELLER SHAFT/PROPELLER SHAFT HOLDER	11-5
GEAR CASE ASSEMBLY	11-9
WATER PUMP	11-10
VERTICAL SHAFT/BEVEL GEAR ...	11-12
WATER SCREEN	11-16
SHIM SELECTION	11-17
SHIM POSITION	11-21
EXTENSION CASE/ UNDER COVER	11-24


PROPELLER/PROPELLER SHAFT HOLDER ASSEMBLY

a. REMOVAL

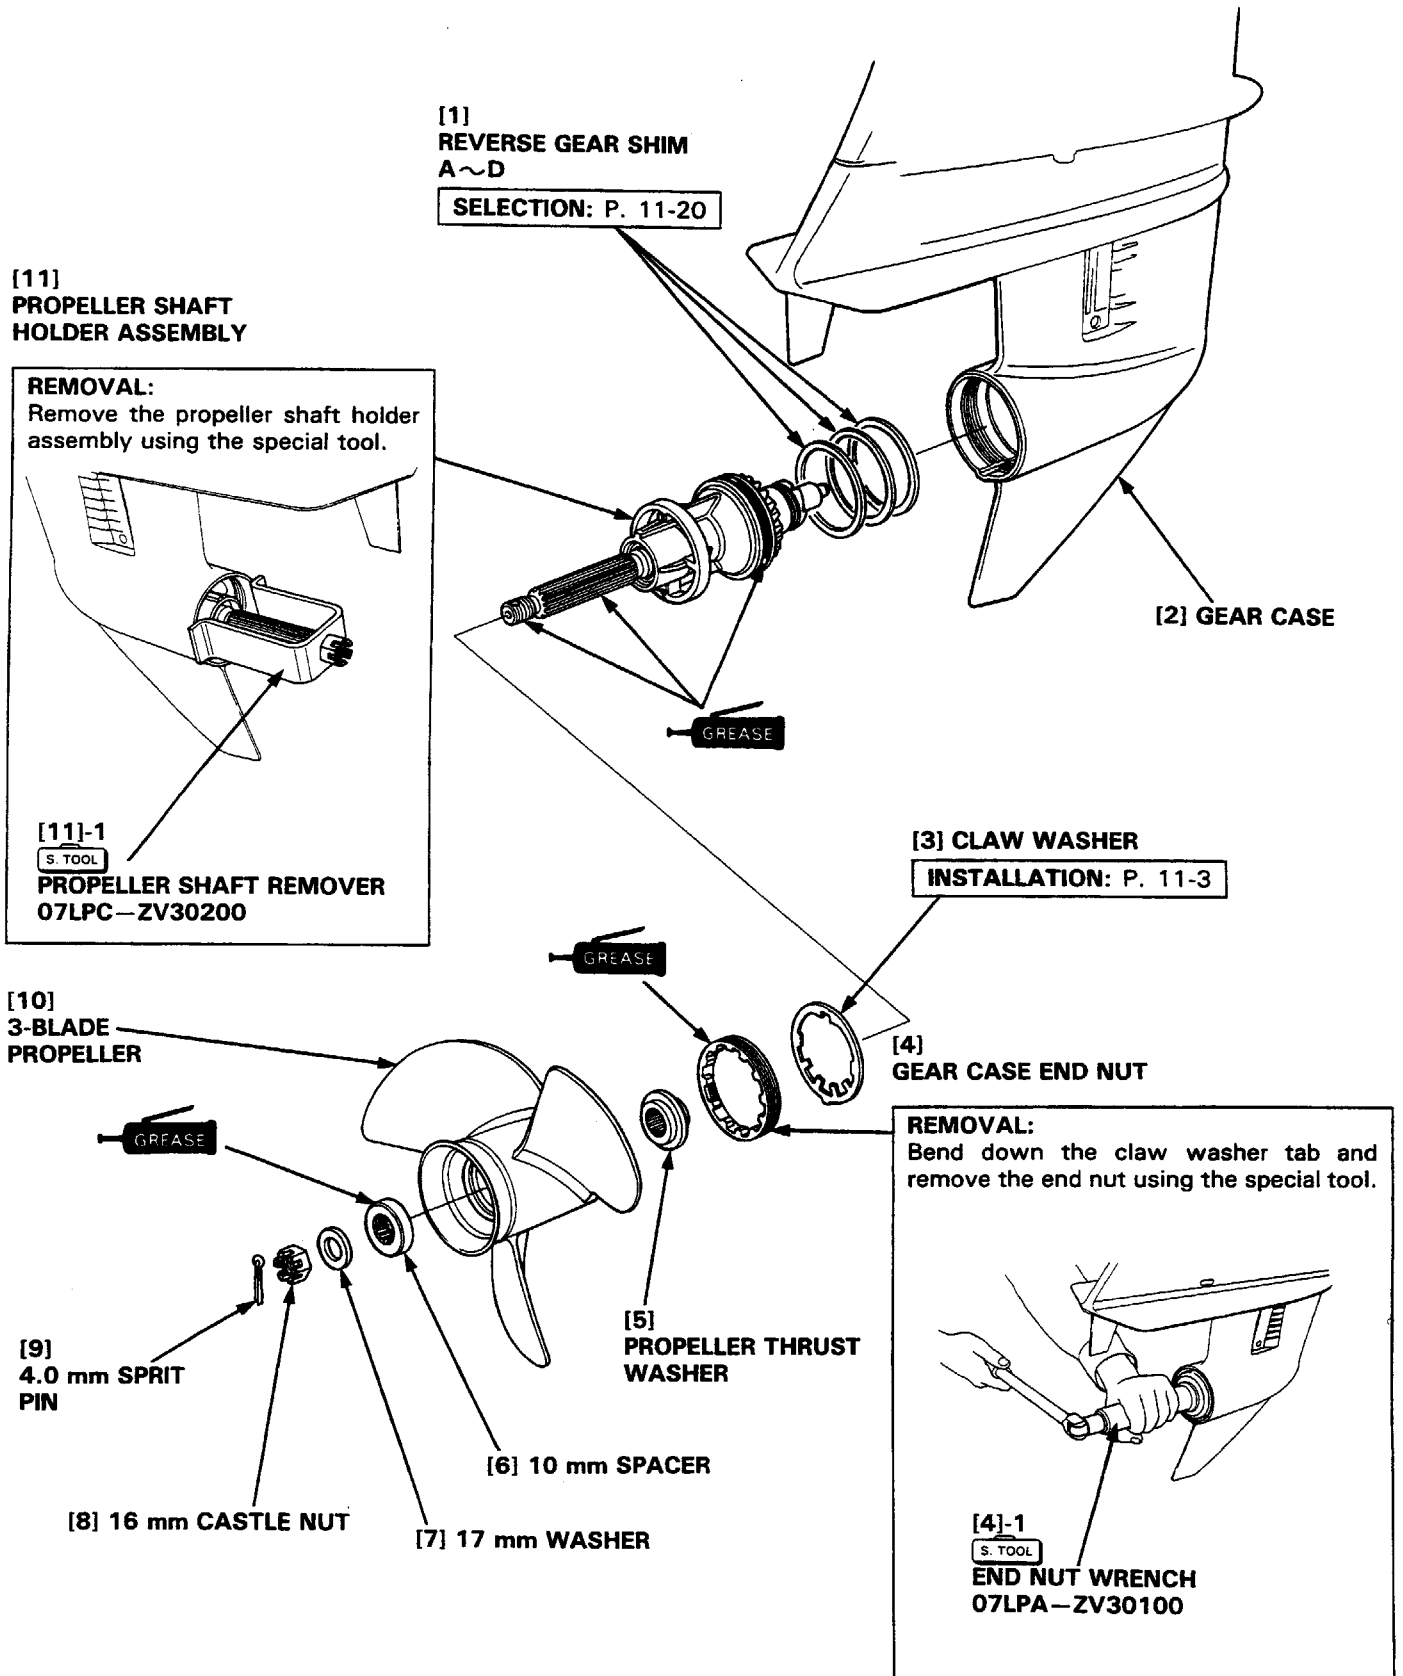


b. INSTALLATION

1) Install the propeller shaft holder assembly with the "UP" mark facing upward.

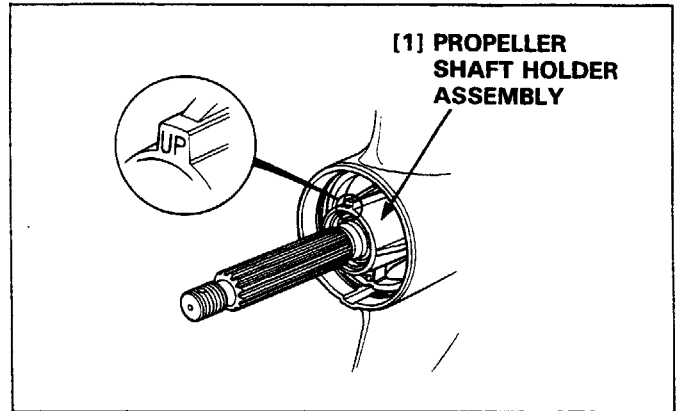

2) Install the claw washer and by aligning it cutout and the tab of with the projection and the groove of the gear case.

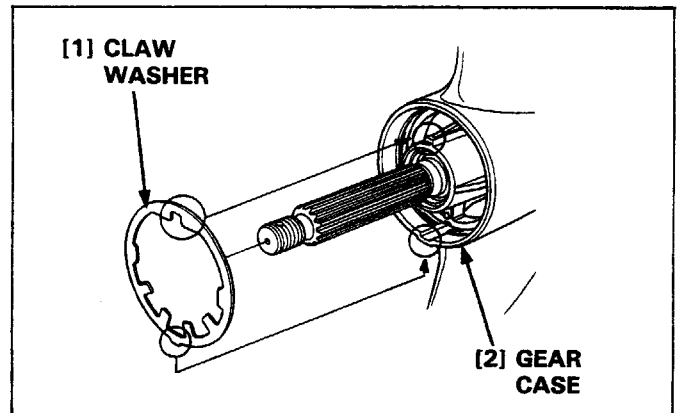

3) Apply grease to the end nut. Set the gear case end nut in the gear case with the "OFF" mark on the gear case end nut facing out.

Turn the end nut counterclockwise when the end nut contacts the threaded portion in the gear case, then tighten the nut by turning it clockwise by hand.

NOTE


- Tighten the end nut with care not to ruin the threads.

Tighten the nut as full as it goes by hand, then tighten it further to the specified torque of 70^{+30} N·m ($7,0^{+3,0}$ kg·m, $50.6^{+21.7}$ ft·lb) using the special tool.

TOOL:

End nut wrench

07LPA-ZV30100

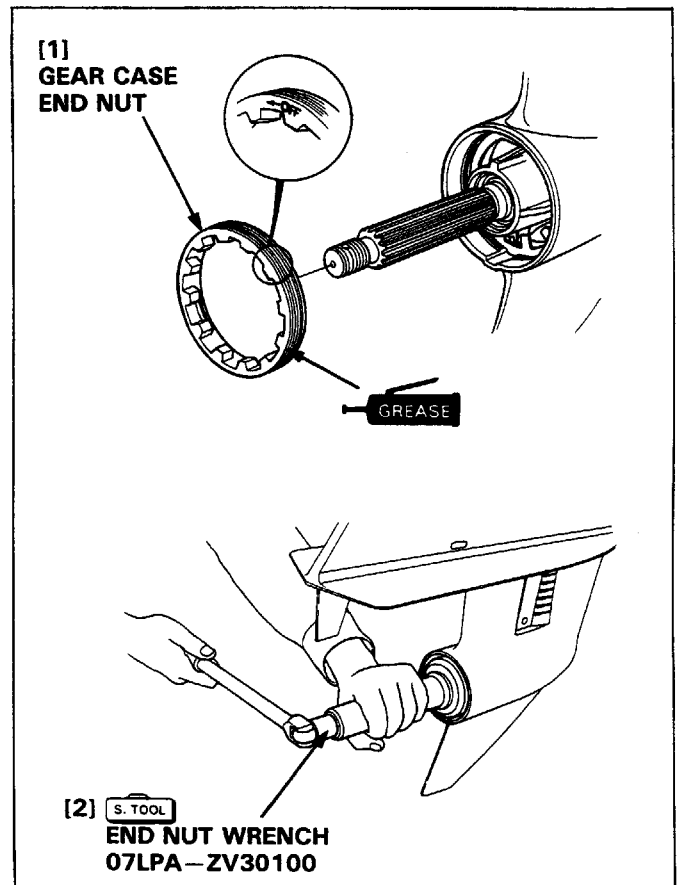


4) Check to see whether the claw washer tab and the end nut groove are aligned. If not, tighten the end nut until they are aligned. (Do not exceed the torque of 100 N·m (10.0 kg-m, 72.3 ft-lb) this time.)


5) With the claw washer tab and end nut groove aligned, bend the tab to stake.

NOTE

- Bend up the claw washer tab at one place except the "A" points.

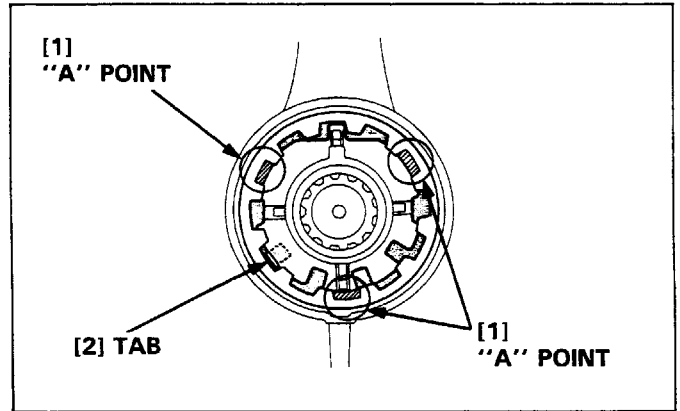


6) Install the propeller thrust washer as shown.

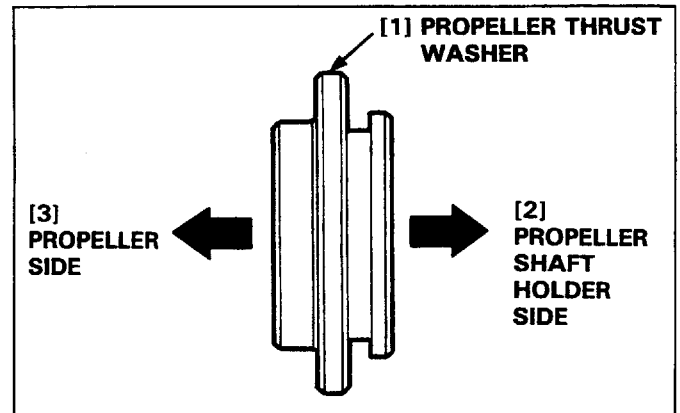


PROPELLER SHAFT/PROPELLER SHAFT HOLDER

a. DISASSEMBLY/REASSEMBLY

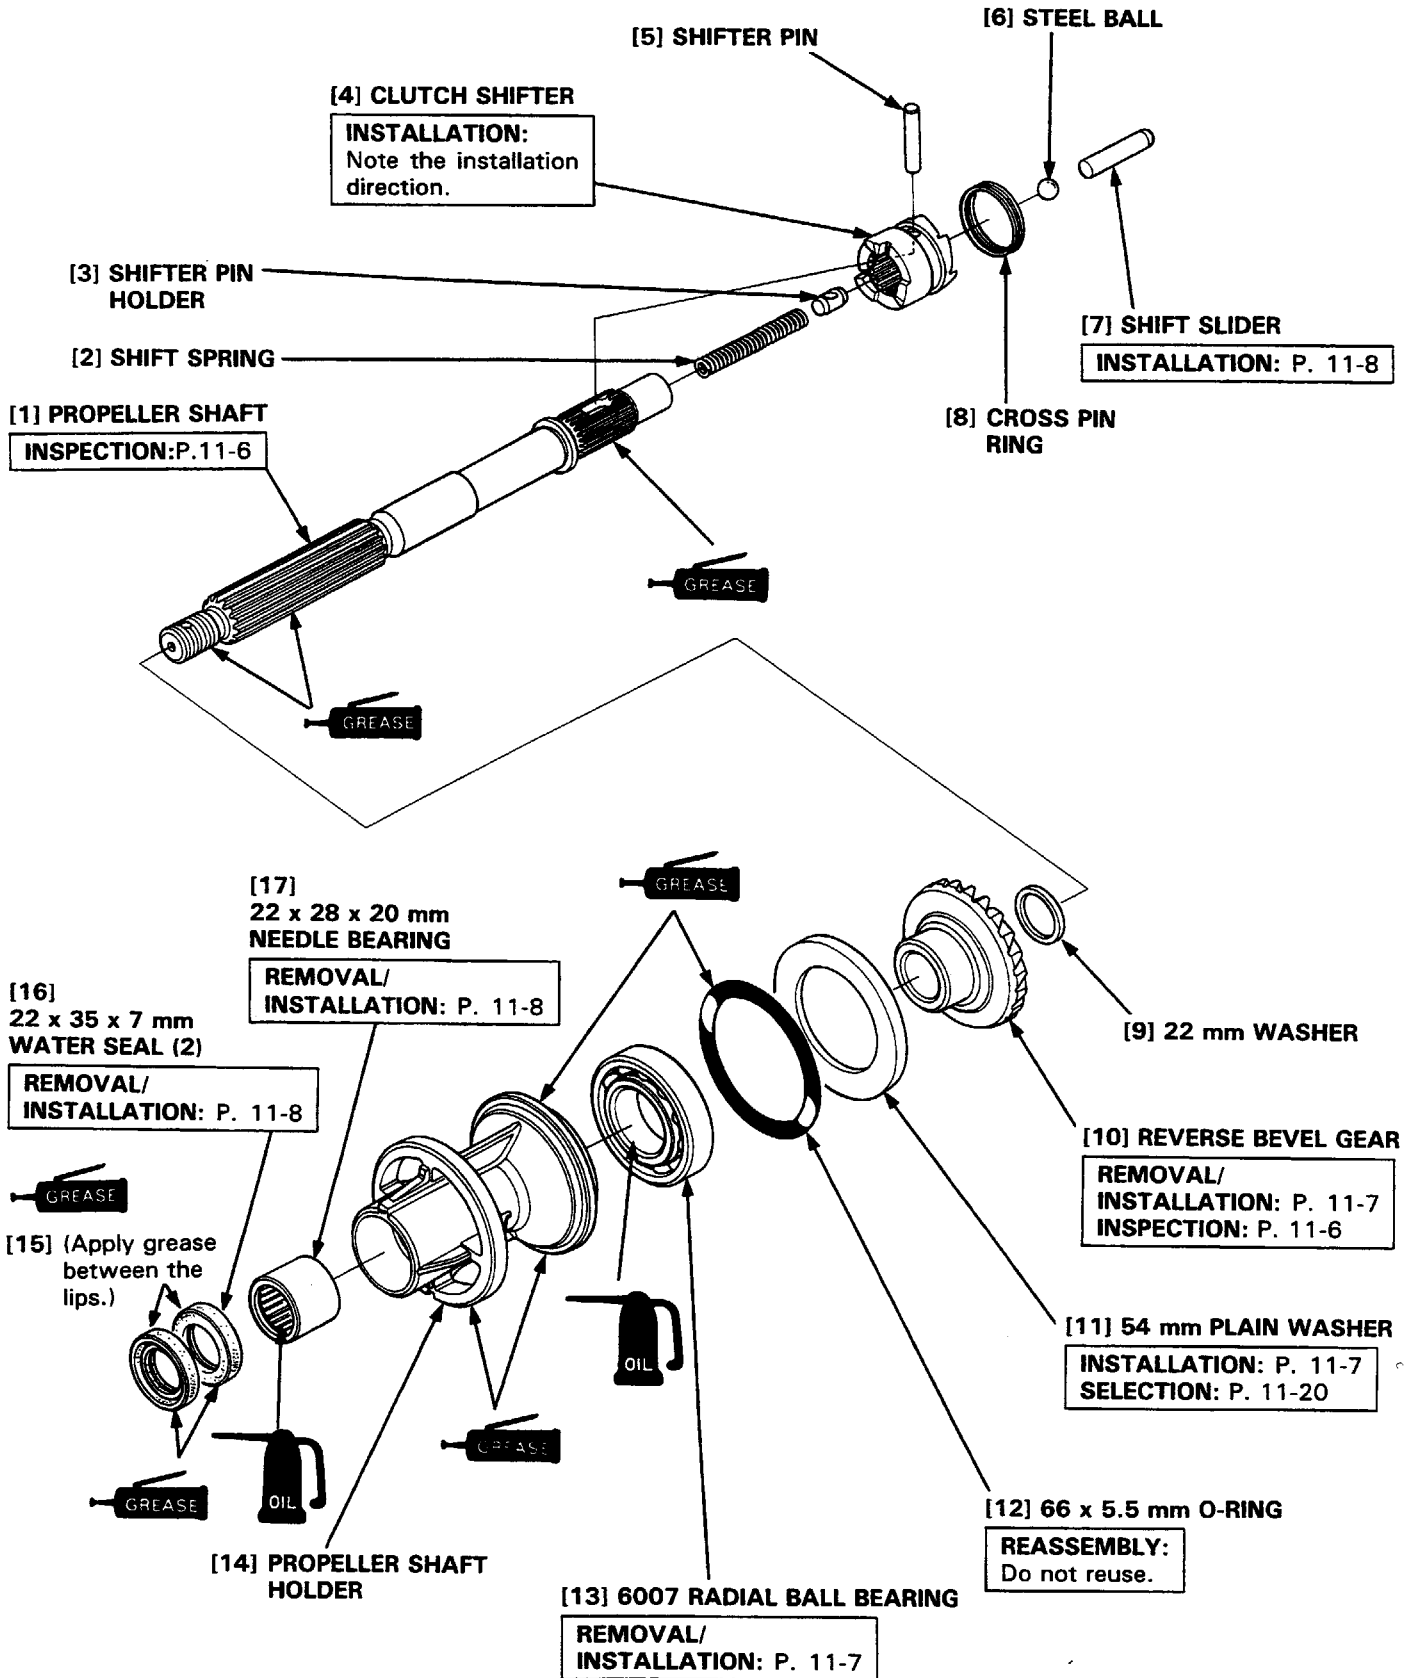


b. INSPECTION**• PROPELLER SHAFT O.D.**

	STANDARD	SERVICE LIMIT
Front	18.967–18.980 mm (0.7467–0.7472 in)	18.946 mm (0.7459 in)
Rear	20.9–21.2 mm (0.82–0.83 in)	20.85 mm (0.821 in)
At needle bearing	22.007–22.020 mm (0.8664–0.8669 in)	21.99 mm (0.866 in)

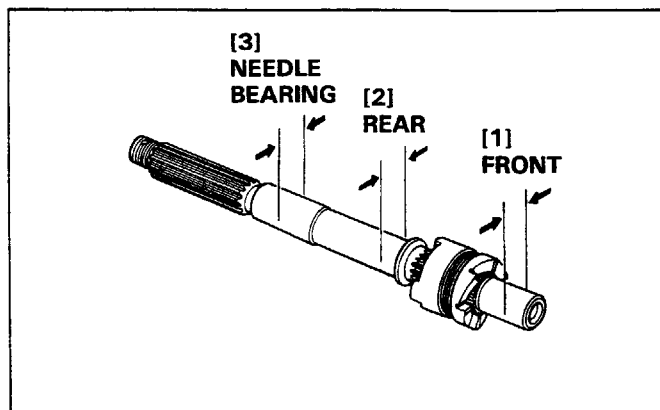**• REVERSE BEVEL GEAR I.D.**

STANDARD	SERVICE LIMIT
22.05–22.30 mm (0.868–0.878 in)	22.35 mm (0.880 in)

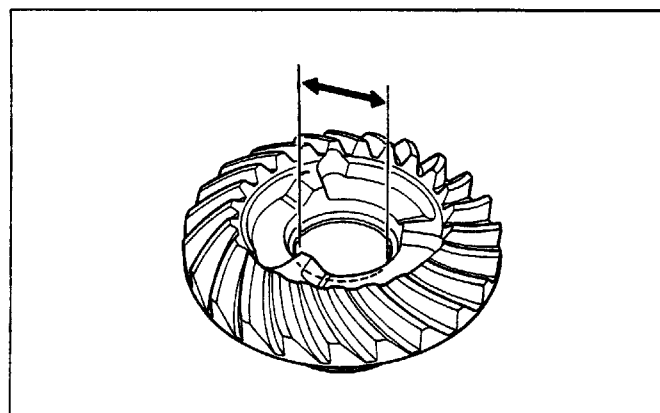

• REVERSE BEVEL GEAR/6007 RADIAL BALL BEARING

REMOVAL:


- 1) Remove the reverse bevel gear using a hydraulic press and the special tools.
- 2) Remove the bearing using the special tools.

CAUTION

- Remove the reverse bevel gear using the hydraulic press. Never remove it by striking with a hammer.

TOOLS:

Handle	07946-MJ00100
Remover attachment, 22 mm	07GMD-KT70200
Base	07965-SD90100
Bearing remover, 35 mm	07936-3710400
Remover weight	07741-0010201
Remover handle	07936-3710100

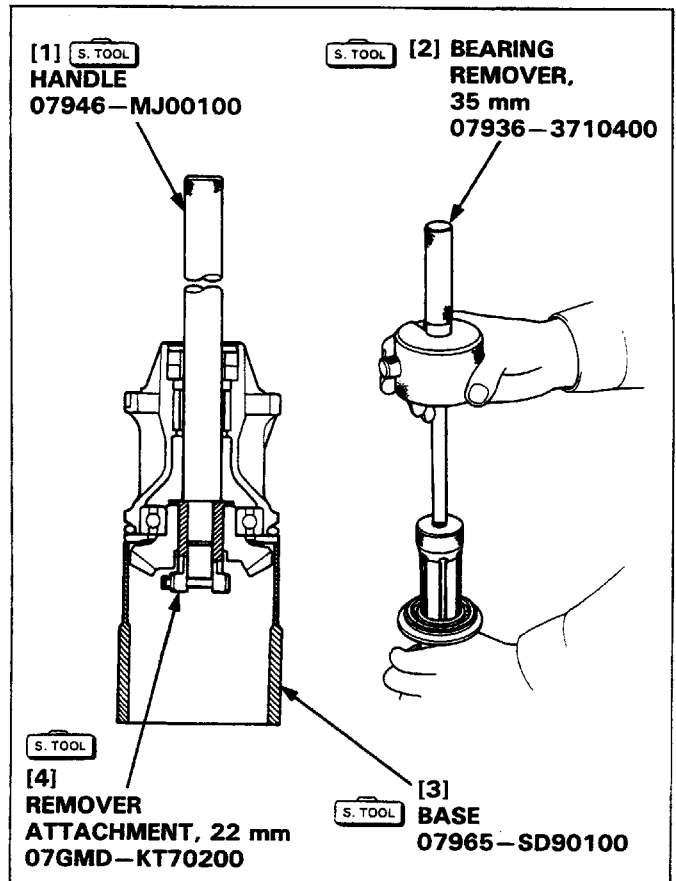

INSTALLATION:



- 1) Install the reverse bevel gear and plain washer on the bearing using the special tools. Note the installation direction of the plain washer.
- 2) Set the O-ring on the bearing/gear assembly of the above step 1, and install the bearing/gear assembly on the propeller shaft holder using the special tools and the hydraulic press.

CAUTION

- Install the bearing/gear assembly using the hydraulic press. Never install it by striking with a hammer. Take care not to damage the O-ring.

TOOLS:

Inner driver, 35 mm	07746-0030400
Attachment, 24 x 26 mm	07746-0010700
Base	07965-SD90100

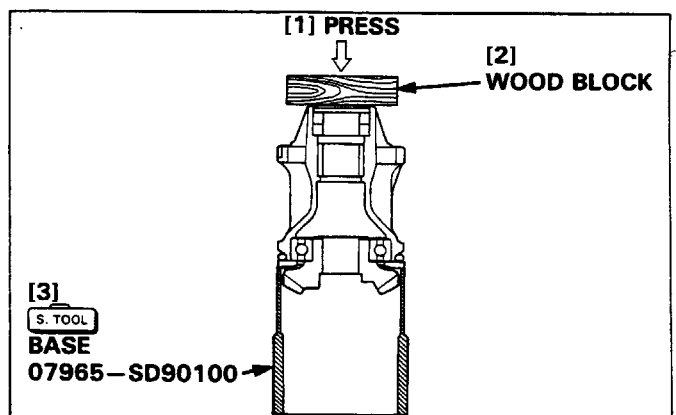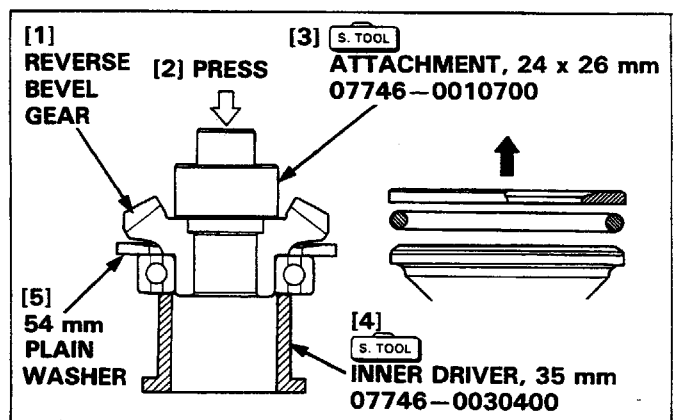


• 22 x 35 x 7 mm WATER SEAL

REMOVAL/INSTALLATION:

Remove/install the water seals using the special tools.


TOOLS:

Oil seal remover	07748-0010001
Handle A	07749-0010000
Attachment, 32 x 35 mm	07746-0010100

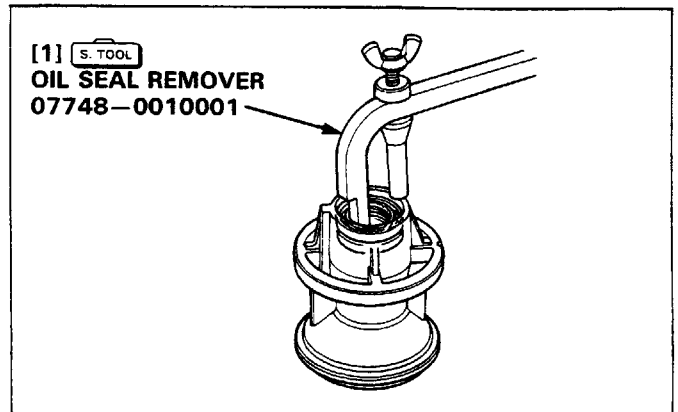

NOTE

- Install the water seals in the direction as shown.

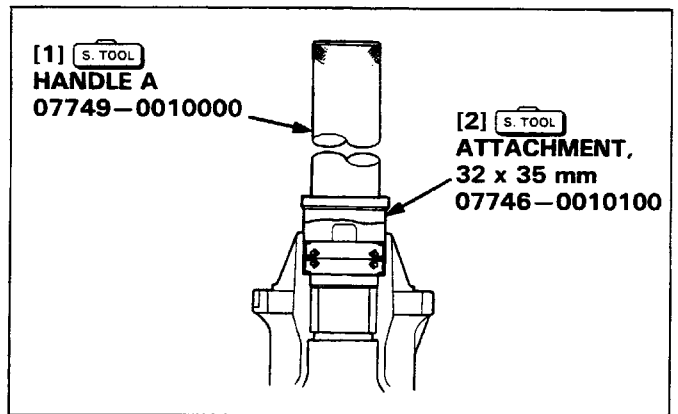

• 22 x 28 x 20 mm NEEDLE BEARING

REMOVAL:


Attach the special tools to the gear case side and drive out the needle bearing.

INSTALLATION:

Drive in the needle bearing from the propeller side using the special tools.

TOOLS:


Handle A	07749-0010000
Attachment, 28 x 30 mm	07946-1870100
Pilot, 22 mm	07746-0041000

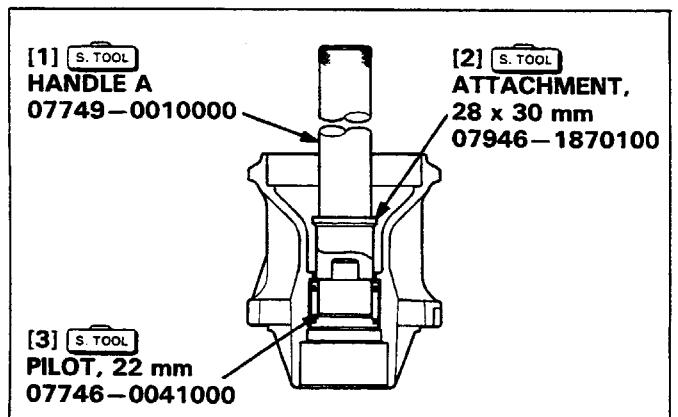

• SHIFT SLIDER

INSTALLATION:


Note the installation direction.

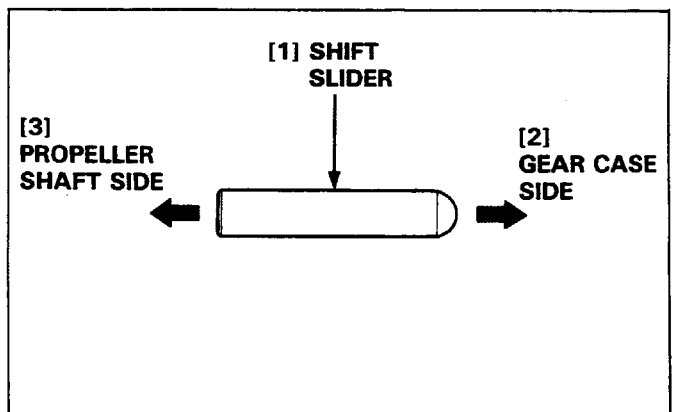

GEAR CASE ASSEMBLY

a. REMOVAL/INSTALLATION


- 1) Move the shift lever to the "N" position, loosen the lock nut and adjusting nut connecting the shift rod A and B, and disconnect the shift rods.

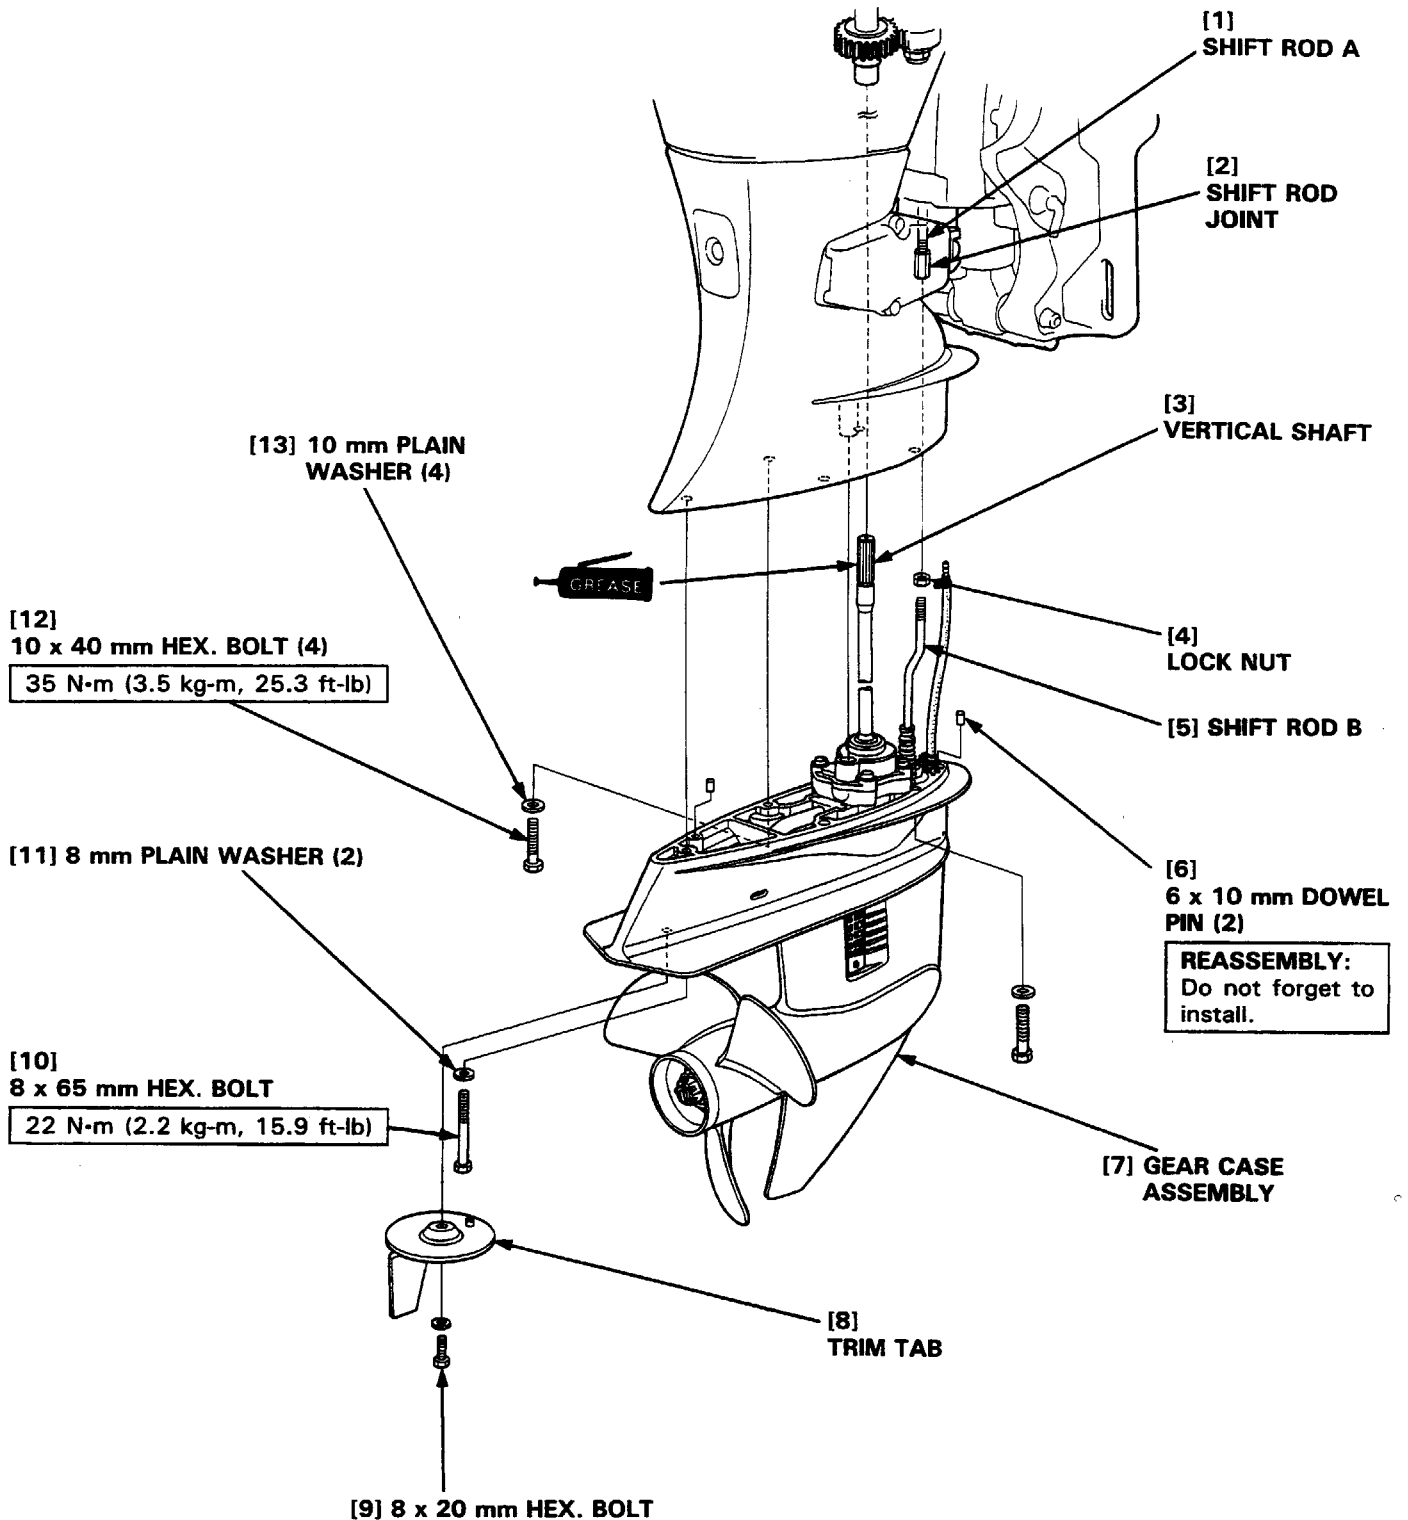

WATER PUMP

a. DISASSEMBLY/REASSEMBLY


1) Remove the gear case assembly (P. 11-9).

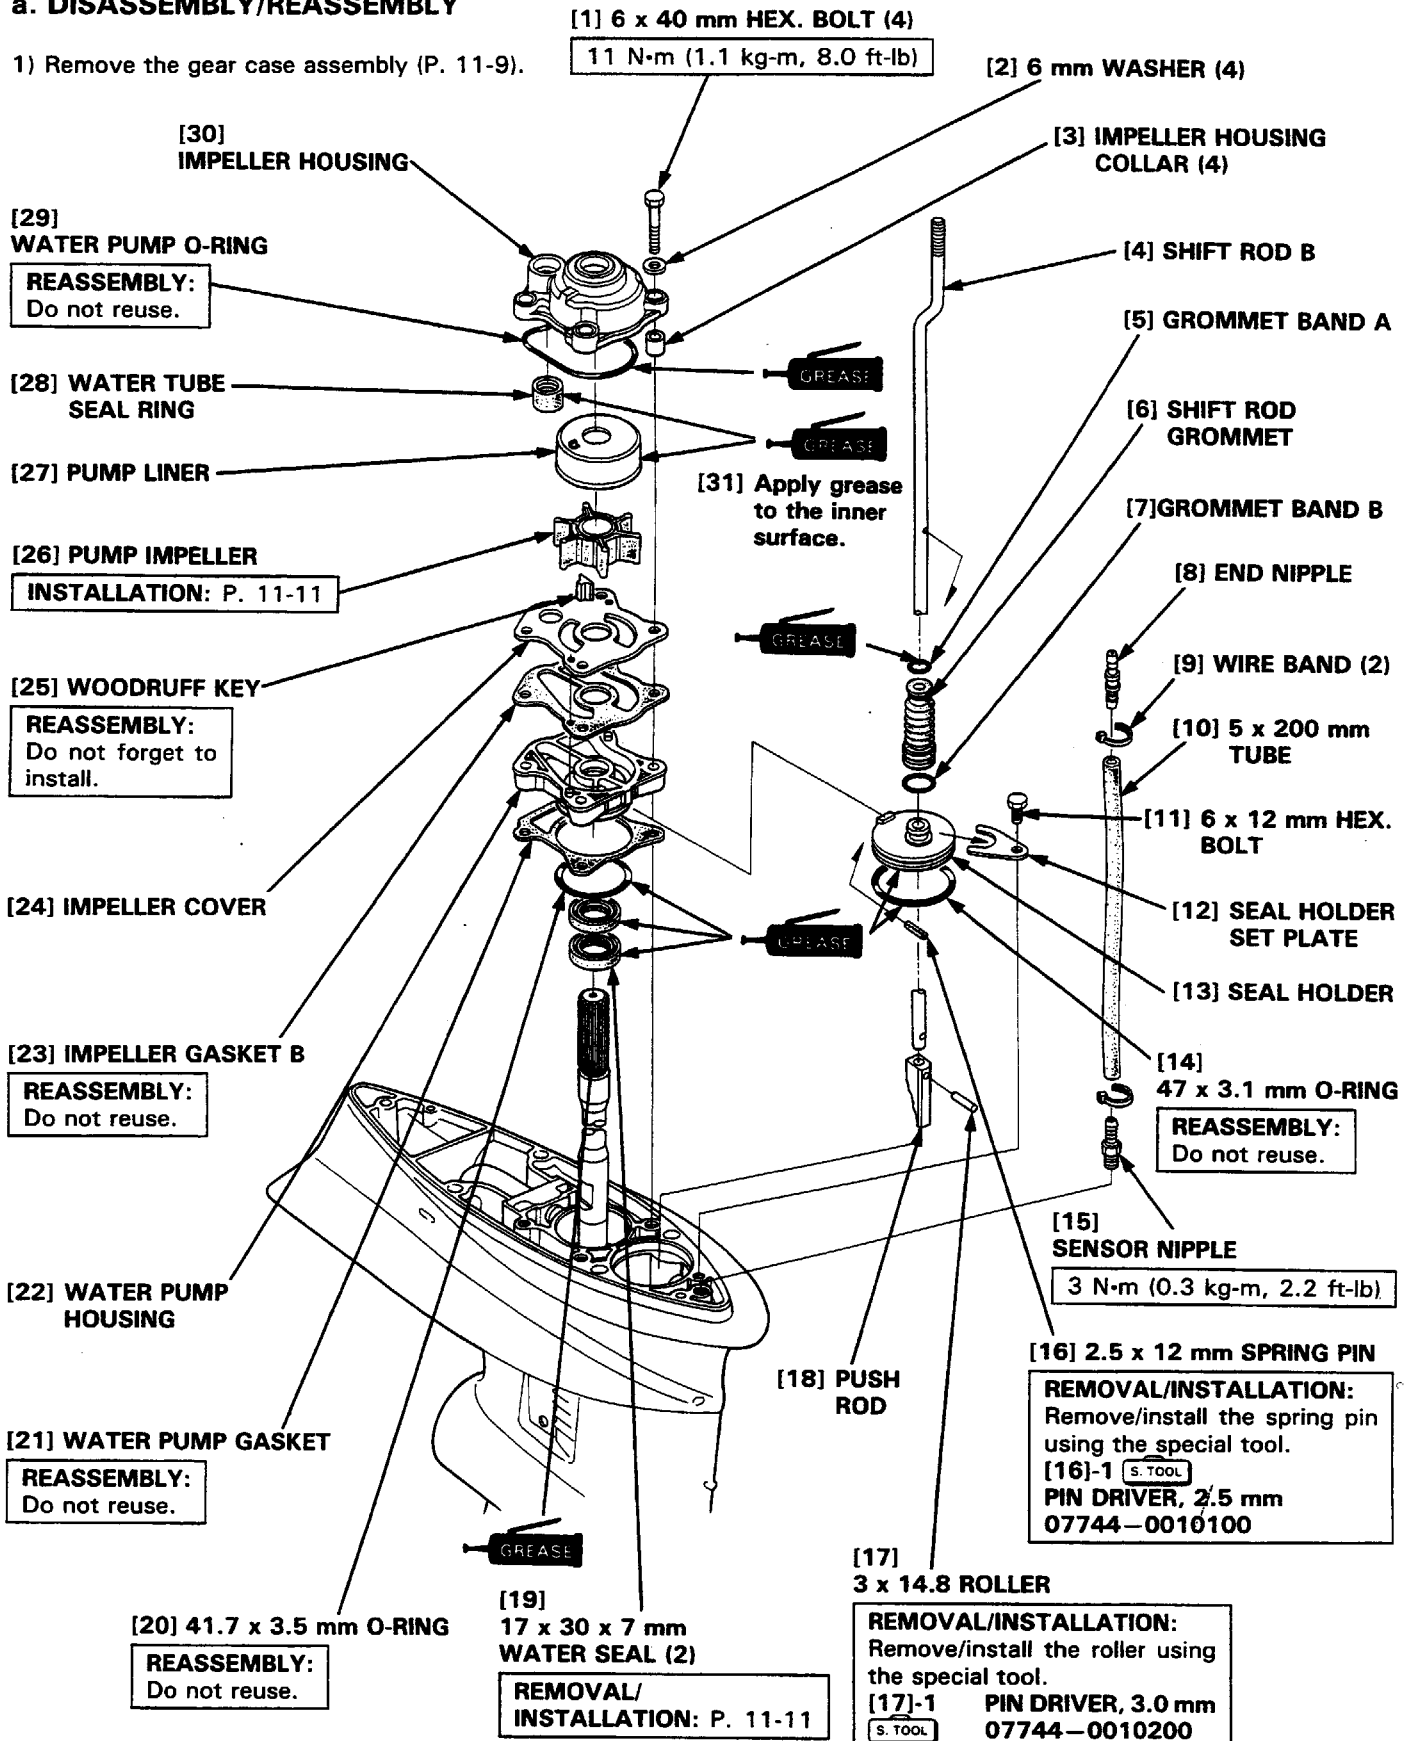

• **IMPELLER**

INSTALLATION:

Check the impeller for wear or cracks.
Install the impeller by turning it counterclockwise with the side where the groove reaches to the end toward up.

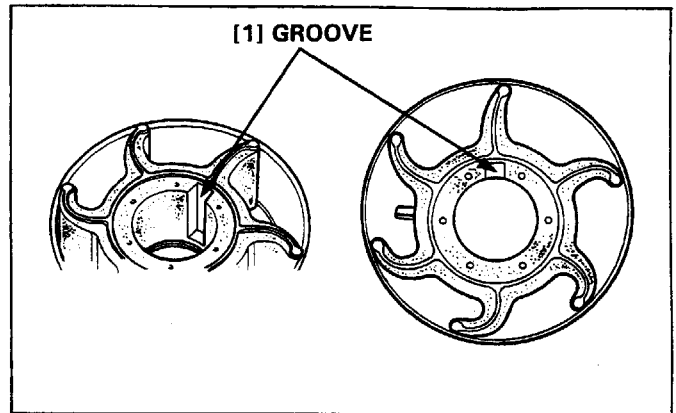

• **17 x 30 x 7 mm WATER SEAL**

REMOVAL/INSTALLATION:



Remove/install the water seals using the special tools.

TOOLS:

Oil seal remover	07748-0010001
Handle A	07749-0010000
Attachment, 28 x 30 mm	07946-1870100

NOTE


- Install the water seals in the direction as shown.

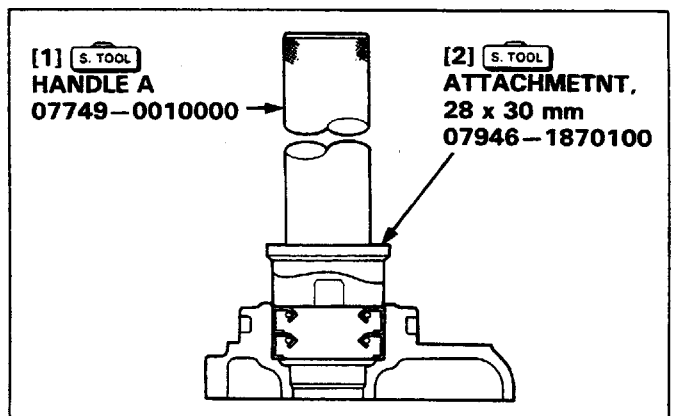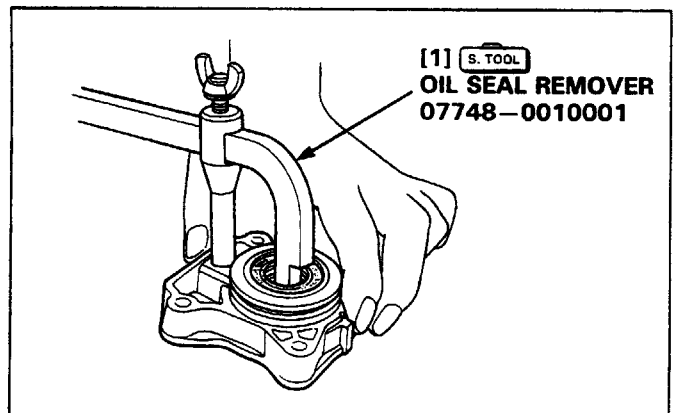

VERTICAL SHAFT/BEVEL GEAR

a. DISASSEMBLY/REASSEMBLY

1) Remove the gear case assembly (P. 11-9) and the propeller shaft holder assembly (P. 11-2).

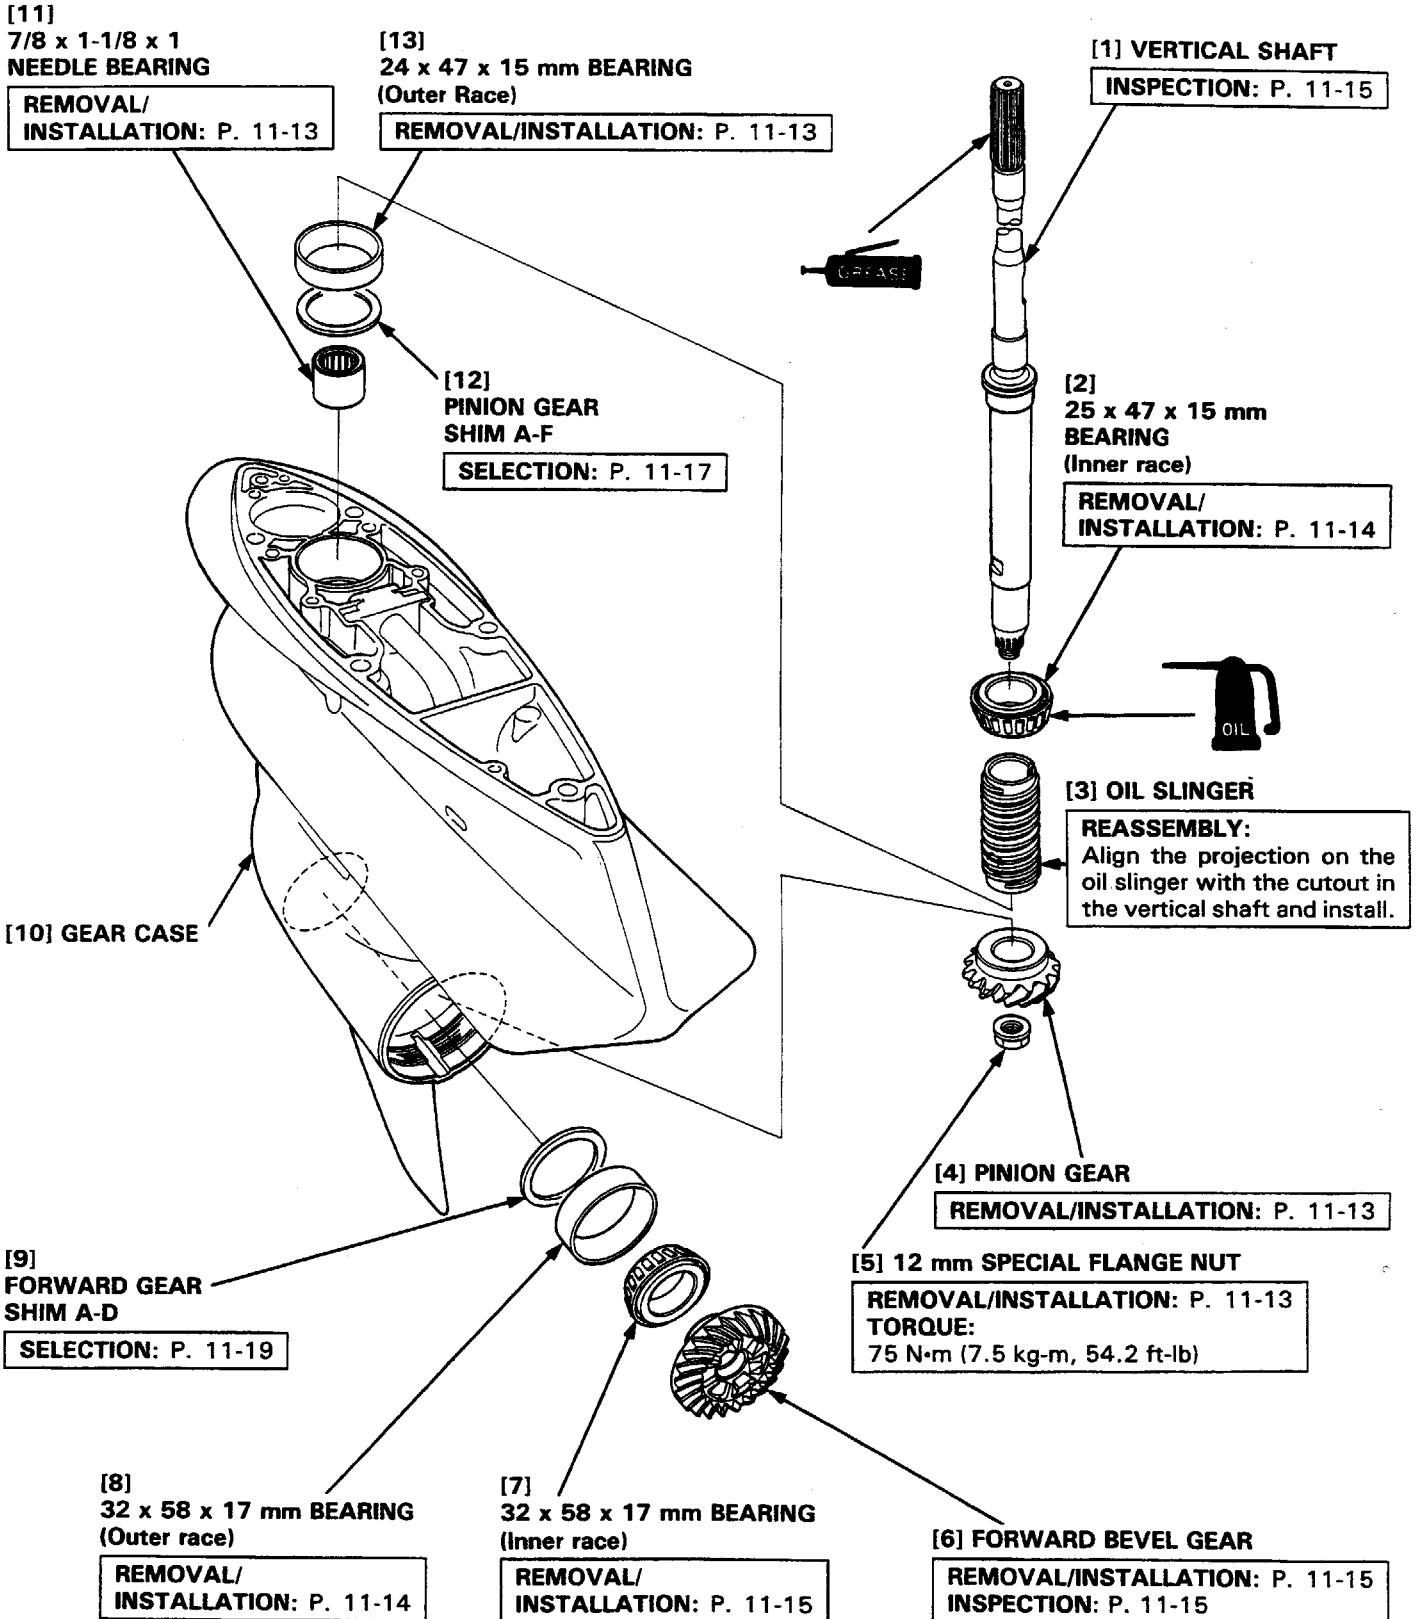


• 12 mm SPECIAL FLANGE NUT

REMOVAL/INSTALLATION:

Remove/install the 12 mm special flange nut by holding the vertical shaft with the special tool.

TOOL:

Vertical shaft holder 07LPB-ZV30200

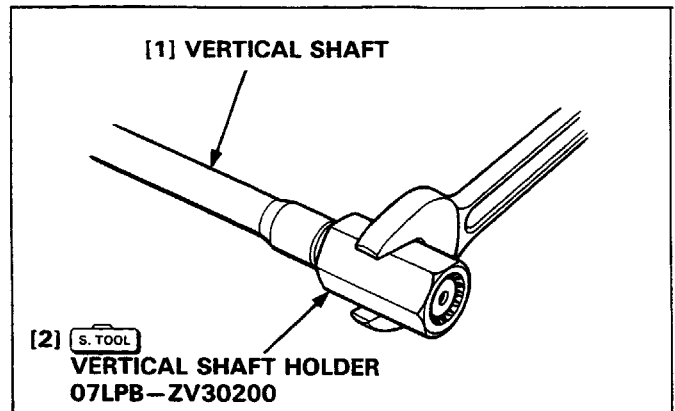


• 7/8 x 1-1/8 x 1 NEEDLE BEARING

REMOVAL/INSTALLATION:

Remove/install the needle bearing using the special tools.

NOTE

- Mark the gear case upper surface position on the handle (special tool) before removing the bearing. Drive in the bearing to the marked position and install the bearing so that the bottom surface of the bearing is flush with the bottom surface of the gear case.

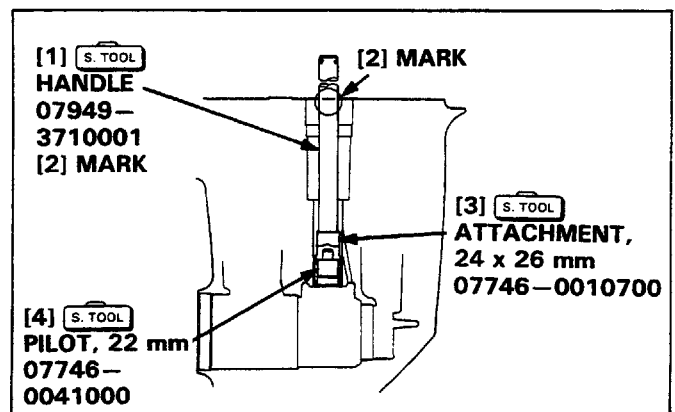

TOOLS:

Handle 07949-3710001
Attachment, 24 x 26 mm 07746-0010700
Pilot, 22 mm 07746-0041000

• 25 x 47 x 15 mm BEARING (Outer race)

REMOVAL/INSTALLATION:


Remove/install the bearing (outer race) using the special tools.

NOTE

- Drive in the bearing with the larger I.D. side toward out.

TOOLS:

Bearing race puller 07LPC-ZV30100
Remover weight 07741-0010201
Remover handle 07936-3710100
Handle A 07749-0010000
Attachment, 42 x 47 mm 07746-0010300

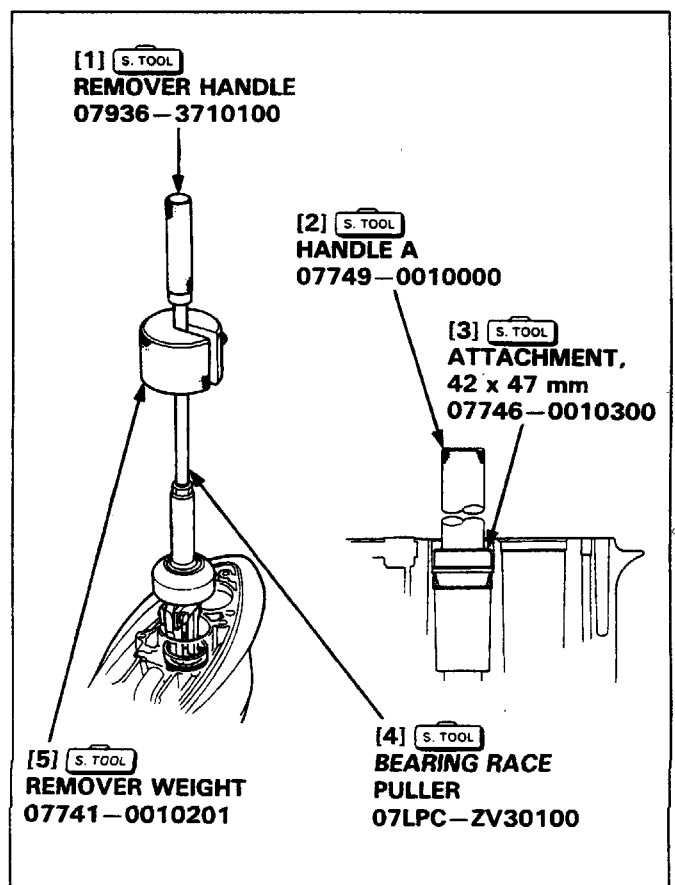

• 32 x 58 x 17 mm BEARING (Outer race)

REMOVAL/INSTALLATION:


Remove/install the bearing (outer race) using the special tools.

NOTE

- Drive in the bearing with the larger I.D. side toward out.

TOOLS:

Bearing race puller	07LPC-ZV30100
Remover weight	07741-0010201
Remover handle	07936-3710100
Handle	07949-3710001
Attachment, 62 x 68 mm	07746-0010500

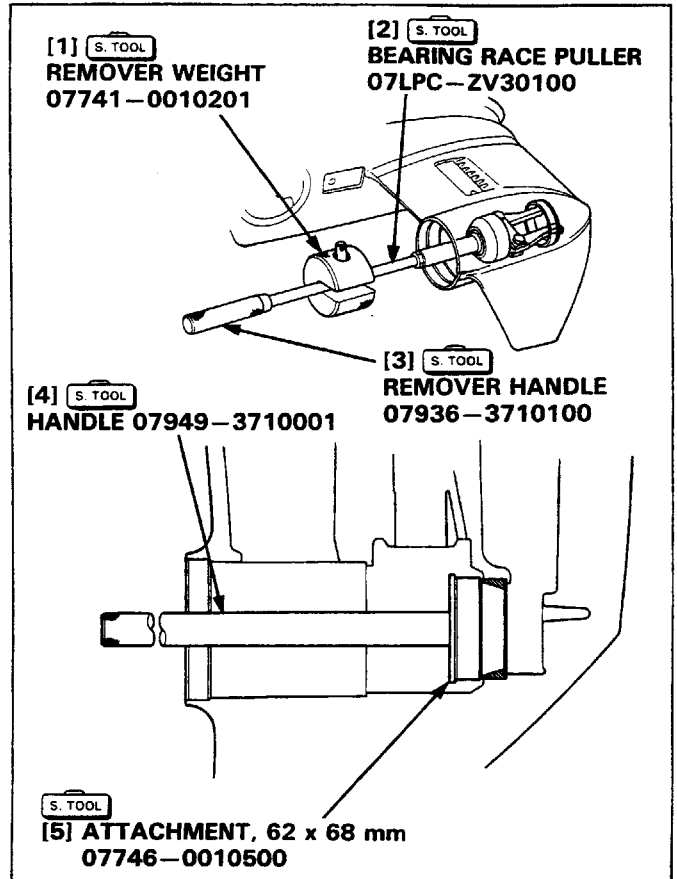

• 25 x 47 x 15 mm BEARING (Inner race)

REMOVAL:

Set the 12 mm special flange nut on the pinion gear installation section of the vertical shaft, set the special tool as shown, and remove the bearing (inner race) using the hydraulic press.

TOOL:


Universal bearing puller	07631-0010000
--------------------------	---------------

INSTALLATION:

Install the bearing (inner race) using the special tool.

TOOL:

Stem race driver	07946-GC40000
------------------	---------------

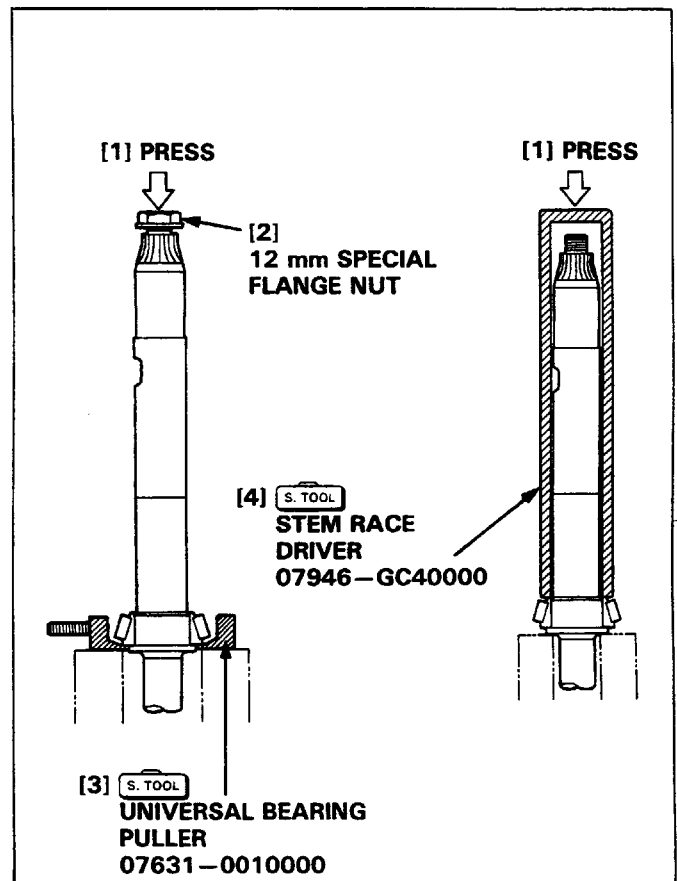


• **32 x 58 x 17 mm BEARING (Inner race)**

REMOVAL:

Set the special tool as shown and remove the 32 x 58 x 17 mm bearing using the hydraulic press.

TOOL:

Universal bearing puller 07631-0010000

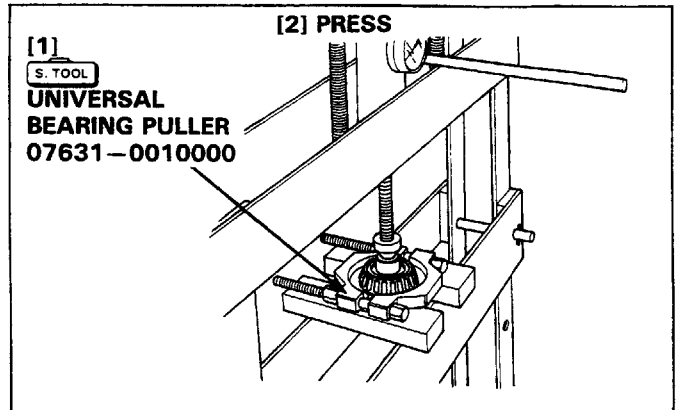


INSTALLATION:

Set the special tools as shown and install the 32 x 58 x 17 mm bearing using the hydraulic press.

TOOLS:


Inner driver, 35 mm 07746-0030400
Attachment, 37 x 40 mm 07746-0010200

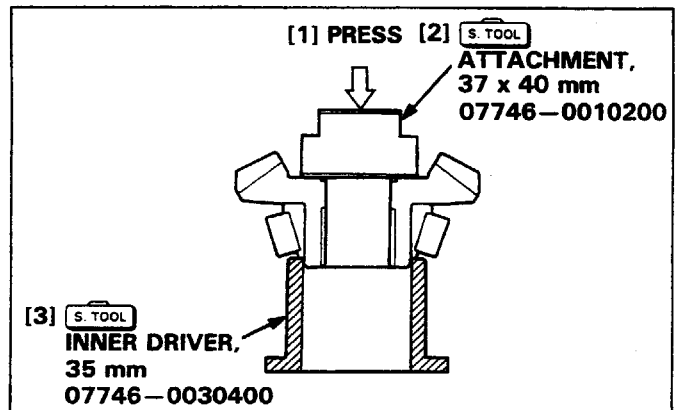

b. INSPECTION


• **VERTICAL SHAFT O.D. (at needle bearing)**

STANDARD	SERVICE LIMIT
22.217-22.230 mm (0.8747-0.8752 in)	22.196 mm (0.8739 in)

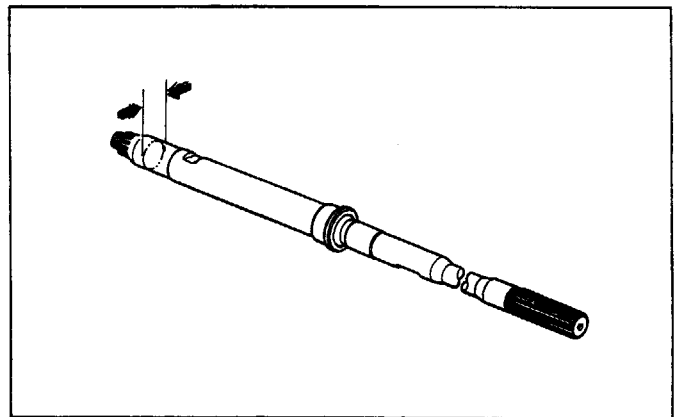


• **FORWARD BEVEL GEAR I.D.**

STANDARD	SERVICE LIMIT
19.000-19.021 mm (0.7480-0.7489 in)	19.04 mm (0.750 in)

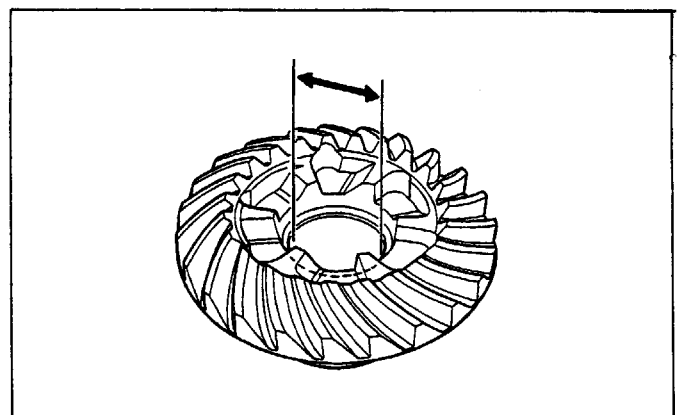

WATER SCREEN

a. DISASSEMBLY/REASSEMBLY

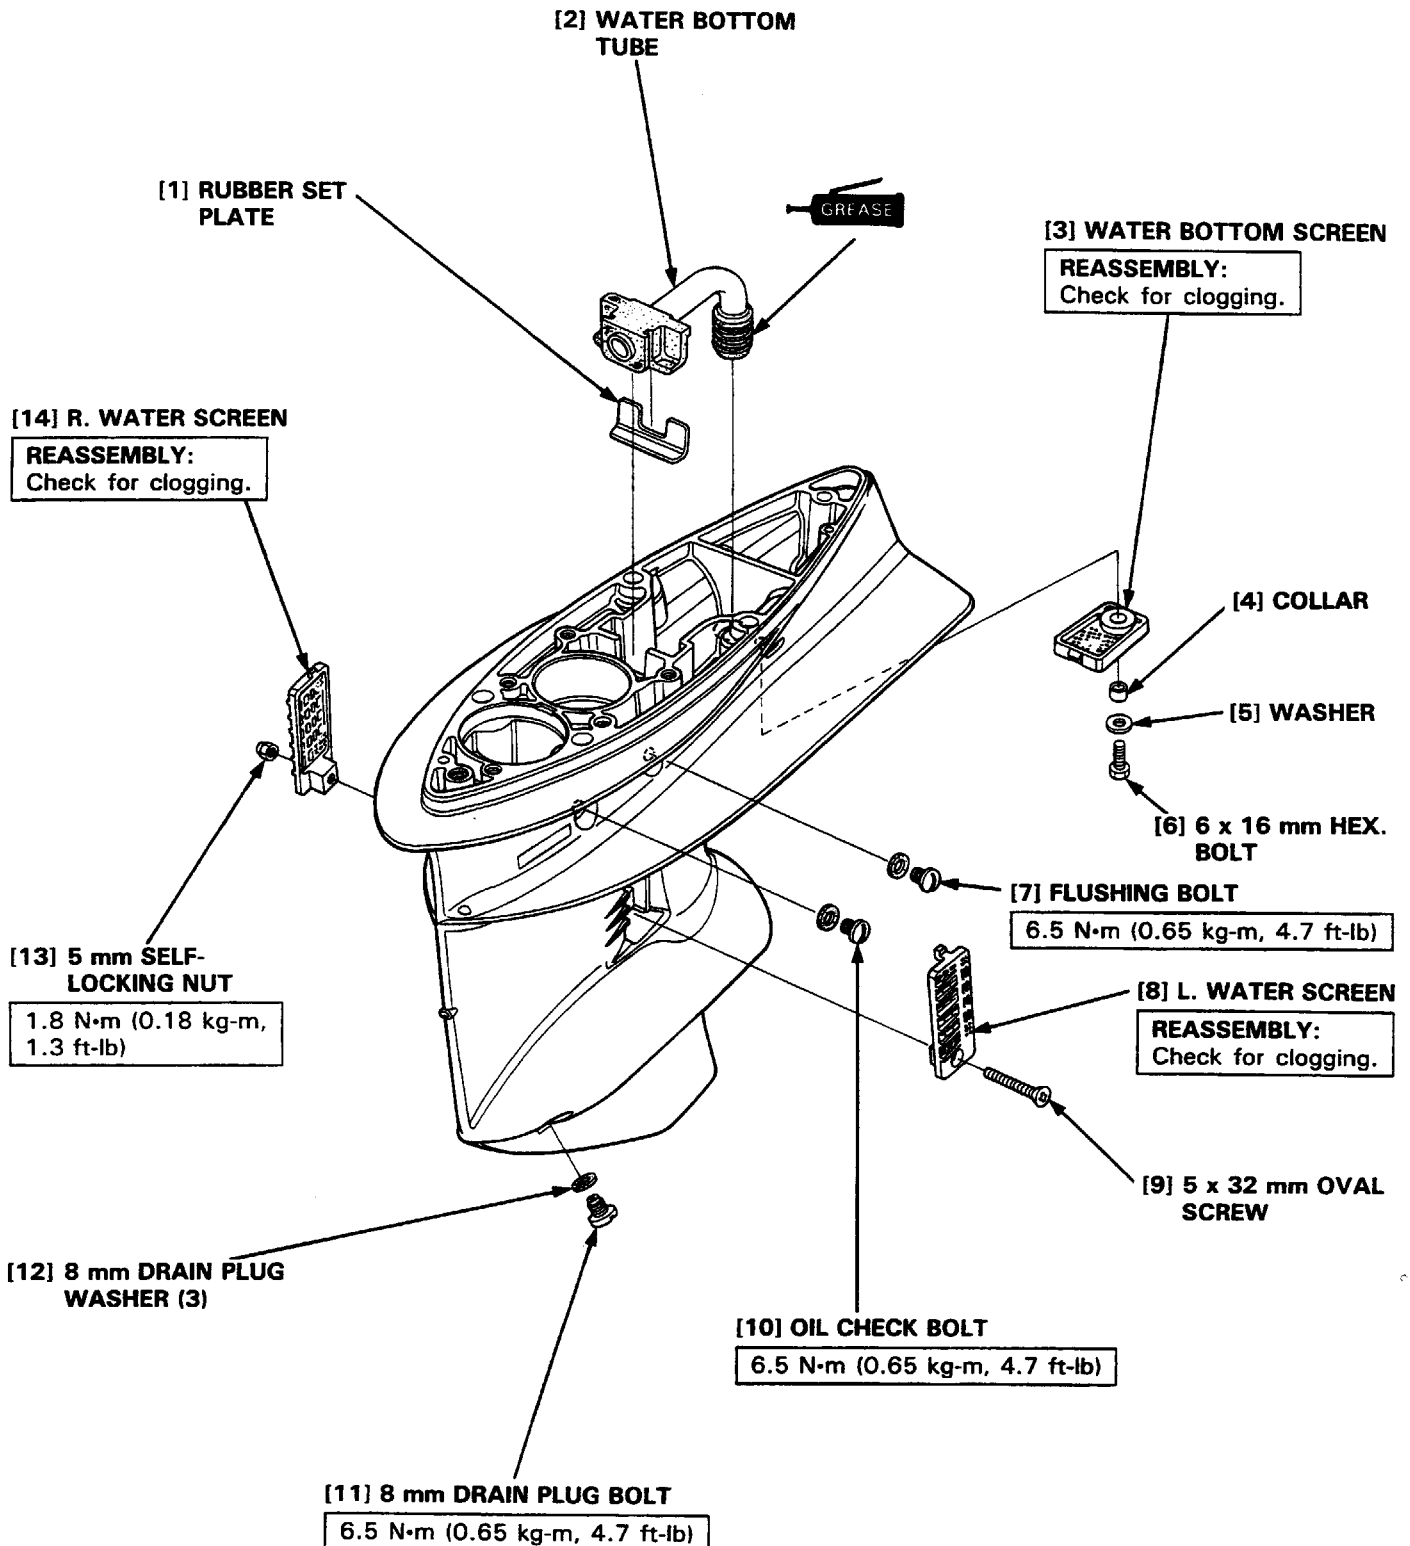

SHIM SELECTION

• PINION GEAR SHIM

- 1) Install the 25 x 47 x 15 mm bearing and pinion gear over the vertical shaft and tighten the 12 mm special flange nuts.


TORQUE: 75 N·m (7.5 kg-m, 54.2 ft-lb)

- 2) Attach the special tool to the vertical shaft as shown.

TOOL:

Vertical shaft gauge

07LPJ-ZV30100

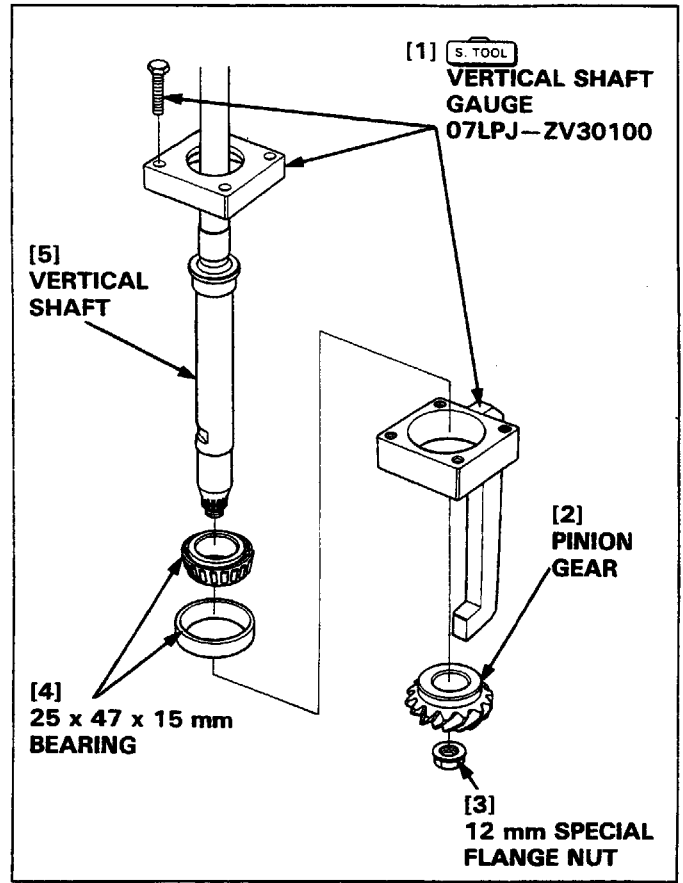

- 3) Measure the clearance between the pinion gear and vertical shaft gauge (clearance D) as shown, then obtain the calculation value in the following formula.

Formula:


Clearance D - 0.5 = calculation value

Example:

When the clearance D is 0.3;

$0.3 - 0.5 = -0.2$


Therefore, calculation value is -0.2 mm (-0.008 in).

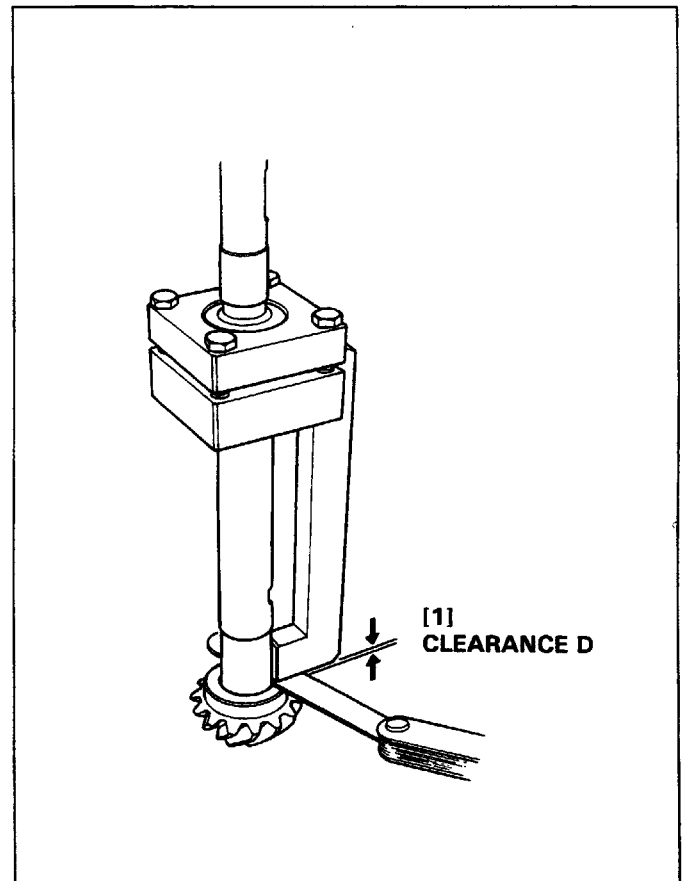

4) Cross reference the calculation value and engagement mark located on the trim tab installation section of the gear case, and select the shim of the appropriate thickness from the shim selection table.

• Shim type table

Parts name	Parts number	Thickness
Gear shim A	90518-ZV5-000	0.10 mm (0.0039 in)
Gear shim B	90519-ZV5-000	0.15 mm (0.0060 in)
Gear shim C	90520-ZV5-000	0.30 mm (0.0118 in)
Gear shim D	90521-ZV5-000	0.50 mm (0.0197 in)

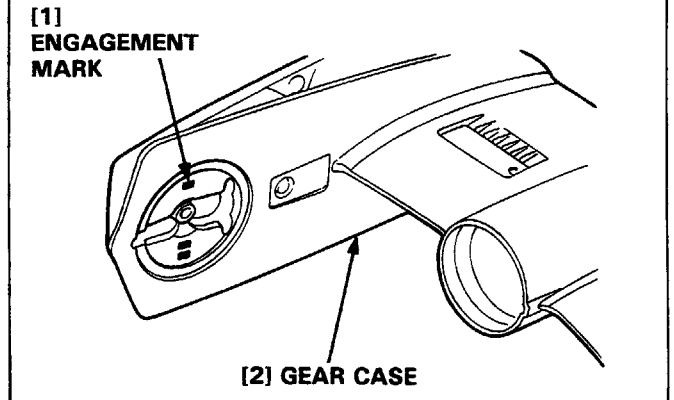

• Shim selection table

Unit: mm (in)

		[2] Calculation value								
		-0.45 (-0.018) - -0.40 (-0.016)	-0.40 (-0.016) - -0.35 (-0.014)	-0.35 (-0.014) - -0.30 (-0.012)	-0.30 (-0.012) - -0.25 (-0.010)	-0.25 (-0.010) - -0.20 (-0.008)	-0.20 (-0.008) - -0.15 (-0.006)	-0.15 (-0.006) - -0.10 (-0.004)	-0.10 (-0.004) - -0.05 (-0.002)	-0.05 (-0.002) - 0
[1] Engagement mark on gear case	A	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)
	B	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)
	C	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)
	D	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)
	E	0.15 (0.006)	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)
	F	0.10 (0.004)	0.15 (0.006)	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)

Unit: mm (in)

		[2] Calculation value								
		0 - 0.05 (0.002)	0.05 (0.002) - 0.10 (0.004)	0.10 (0.004) - 0.15 (0.006)	0.15 (0.006) - 0.20 (0.008)	0.20 (0.008) - 0.25 (0.010)	0.25 (0.010) - 0.30 (0.012)	0.30 (0.012) - 0.35 (0.014)	0.35 (0.014) - 0.40 (0.016)	0.40 (0.016) - 0.45 (0.018)
[1] Engagement mark on gear case	A	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)	1.00 (0.039)	1.05 (0.041)	1.10 (0.043)	1.15 (0.045)	1.20 (0.047)
	B	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)	1.00 (0.039)	1.05 (0.041)	1.10 (0.043)	1.15 (0.045)
	C	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)	1.00 (0.039)	1.05 (0.041)	1.10 (0.043)
	D	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)	1.00 (0.039)	1.05 (0.041)
	E	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)	1.00 (0.039)
	F	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)

• How to read shim selection table

When the engagement mark on the gear case is B and the calculation value is -0.2 mm (-0.008 in) or more, the shim thickness is 0.55 mm (0.022 in). (See Example 1 below.)

When the calculation value is less than -0.2 mm (-0.008 in), the shim thickness is 0.50 mm (0.020 in). (See Example 2 below.)

[1] Example 1:

Unit: mm (in)

		[2] Calculation value		
				[3] -0.20 mm (-0.008 in) or above to less than -0.15 mm (-0.006 in)
[1] Engagement mark on gear case	A			
	B			0.55 (0.022)

[4] Example 2:

Unit: mm (in)

		[2] Calculation value		
				[5] -0.25 mm (-0.010 in) or above to less than -0.20 mm (-0.008 in)
[1] Engagement mark on gear case	A			
	B			0.50 (0.020)


• Shim combination

To bring the total thickness of the shim to 0.55 mm (0.022 in), the correct combination of the gear shims should be four gear shims A and one gear shim B, or the combination of one gear shim A, B, and C respectively.

• FORWARD GEAR SHIM


- 1) Set the 32 x 58 x 17 mm bearing on the special tool as shown.

TOOL:
 Bearing height gauge 07LPJ-ZV30200

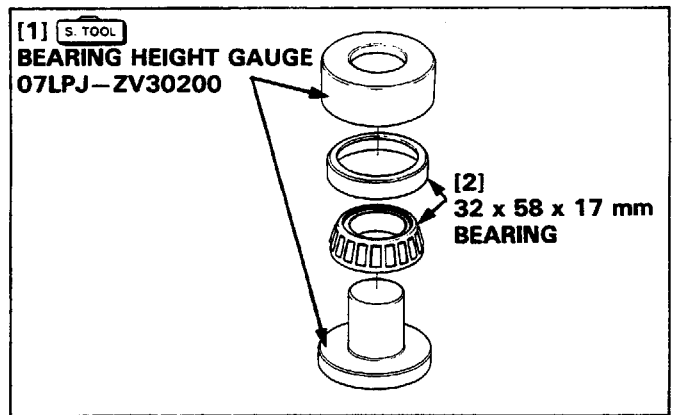

- 2) Measure the clearance between the upper and lower part of the special tool (clearance A) using a feeler gauge.
- 3) Obtain the calculation value by subtracting 0.5 mm (0.02 in) from the measured clearance A.


Example:
 When the clearance A is 0.3 mm (0.012 in);
 $0.3 - 0.5 = -0.2$
 Therefore, the calculation value is -0.2 mm (-0.008 in).

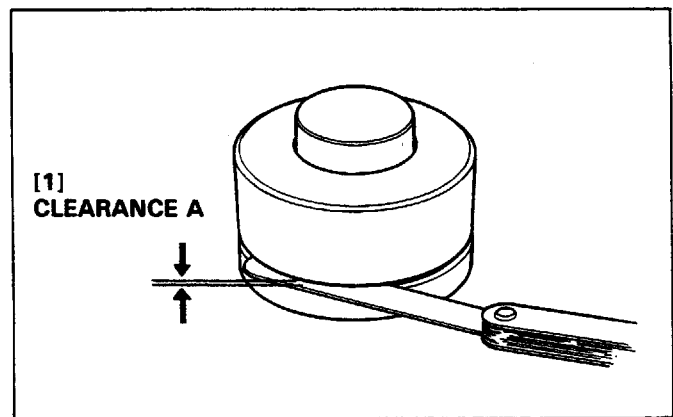

- 4) Cross reference the calculation value and engagement mark located on the trim tab installation section of the gear case, and select the shim of the appropriate thickness from the shim selection table.

• Shim type table

Parts name	Parts number	Thickness
Forward gear shim A	90528-ZV5-000	0.10 mm (0.0039 in)
Forward gear shim B	90529-ZV5-000	0.15 mm (0.0060 in)
Forward gear shim C	90530-ZV5-000	0.30 mm (0.0118 in)
Forward gear shim D	90531-ZV5-000	0.50 mm (0.0197 in)

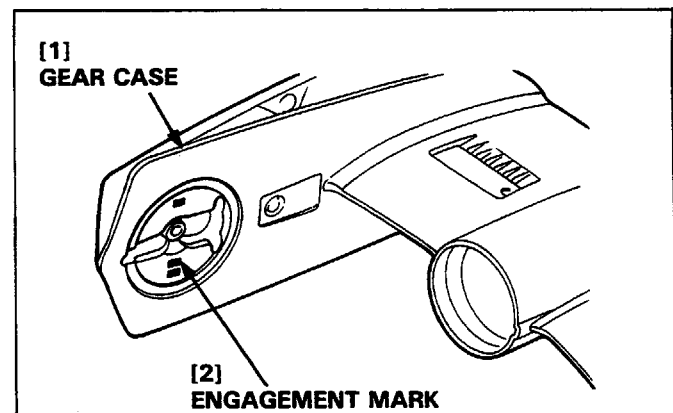

• Shim selection table

Unit: mm (in)

		[2] Calculation value							
		0.20 (0.008) – 0.15 (0.006)	0.15 (0.006) – 0.10 (0.004)	0.10 (0.004) – 0.05 (0.002)	0.05 (0.002) – 0	0 – –0.05 (–0.002)	–0.05 (–0.002) – –0.10 (–0.004)	–0.10 (–0.004) – –0.15 (–0.006)	–0.15 (–0.006) – –0.20 (–0.008)
[1] Engagement mark on gear case	1	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)
	2	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)
	3	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)
	4	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)
	5	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)
	6	0.15 (0.006)	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)

Refer to pages 11-18 and 19 for how to read shim selection table and shim combination.

• REVERSE GEAR SHIM

- 1) Measure the thickness of the 54 mm plain washer using a micro-meter.


The calculation value can be obtained by subtracting 4 mm (0.2 in) from the washer thickness.

Example:


When washer thickness is 3.8 mm (0.15 in);

$$3.8 - 4 = -0.2$$

Therefore, the calculation value is -0.2 mm (-0.008 in).

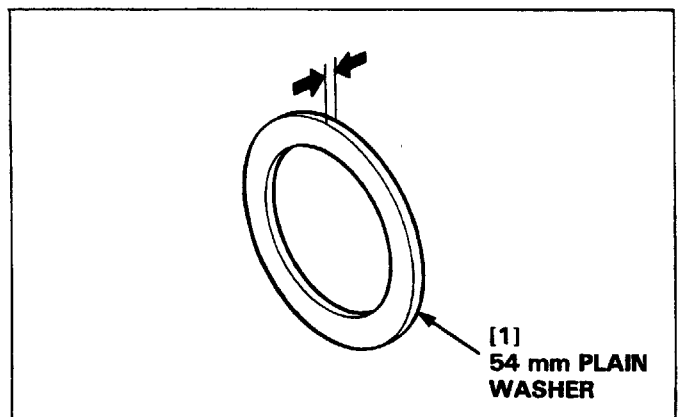

- 2) Cross reference the washer thickness and engagement mark located on the trim tab installation section of the gear case, and select the shim of the appropriate thickness from the shim selection table.

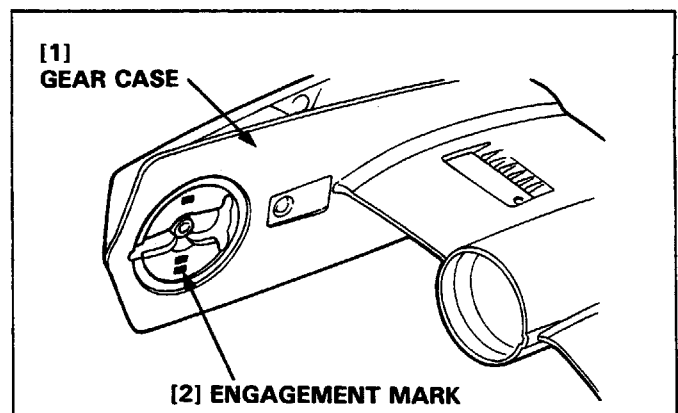

• Shim type table

Parts name	Parts number	Thickness
Reverse gear shim A	90538-ZV5-000	0.10 mm (0.0039 in)
Reverse gear shim B	90539-ZV5-000	0.15 mm (0.0060 in)
Reverse gear shim C	90540-ZV5-000	0.30 mm (0.0118 in)
Reverse gear shim D	90541-ZV5-000	0.50 mm (0.0197 in)


• Shim selection table

Unit: mm (in)

		[2] Calculation value											
		0.30 (0.012)– 0.25 (0.010)	0.25 (0.010)– 0.20 (0.008)	0.20 (0.008)– 0.15 (0.006)	0.15 (0.006)– 0.10 (0.004)	0.10 (0.004)– 0.05 (0.002)	0.05 (0.002)– 0	0– -0.05 (-0.002)	-0.05 (-0.002)– -0.10 (-0.004)	-0.10 (-0.004)– -0.15 (-0.006)	-0.15 (-0.006)– -0.20 (-0.008)	-0.20 (-0.008)– -0.25 (-0.010)	-0.25 (-0.010)– -0.30 (-0.012)
[1] Engagement mark on gear case	A	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)	0.95 (0.037)
	B	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)	0.90 (0.035)
	C	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)	0.85 (0.033)
	D	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)	0.80 (0.031)
	E	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)	0.75 (0.030)
	F	0.15 (0.006)	0.20 (0.008)	0.25 (0.010)	0.30 (0.012)	0.35 (0.014)	0.40 (0.016)	0.45 (0.018)	0.50 (0.020)	0.55 (0.022)	0.60 (0.024)	0.65 (0.026)	0.70 (0.028)

Refer to pages 11-18 and 19 for how to read shim selection table and shim combination.

SHIM POSITION

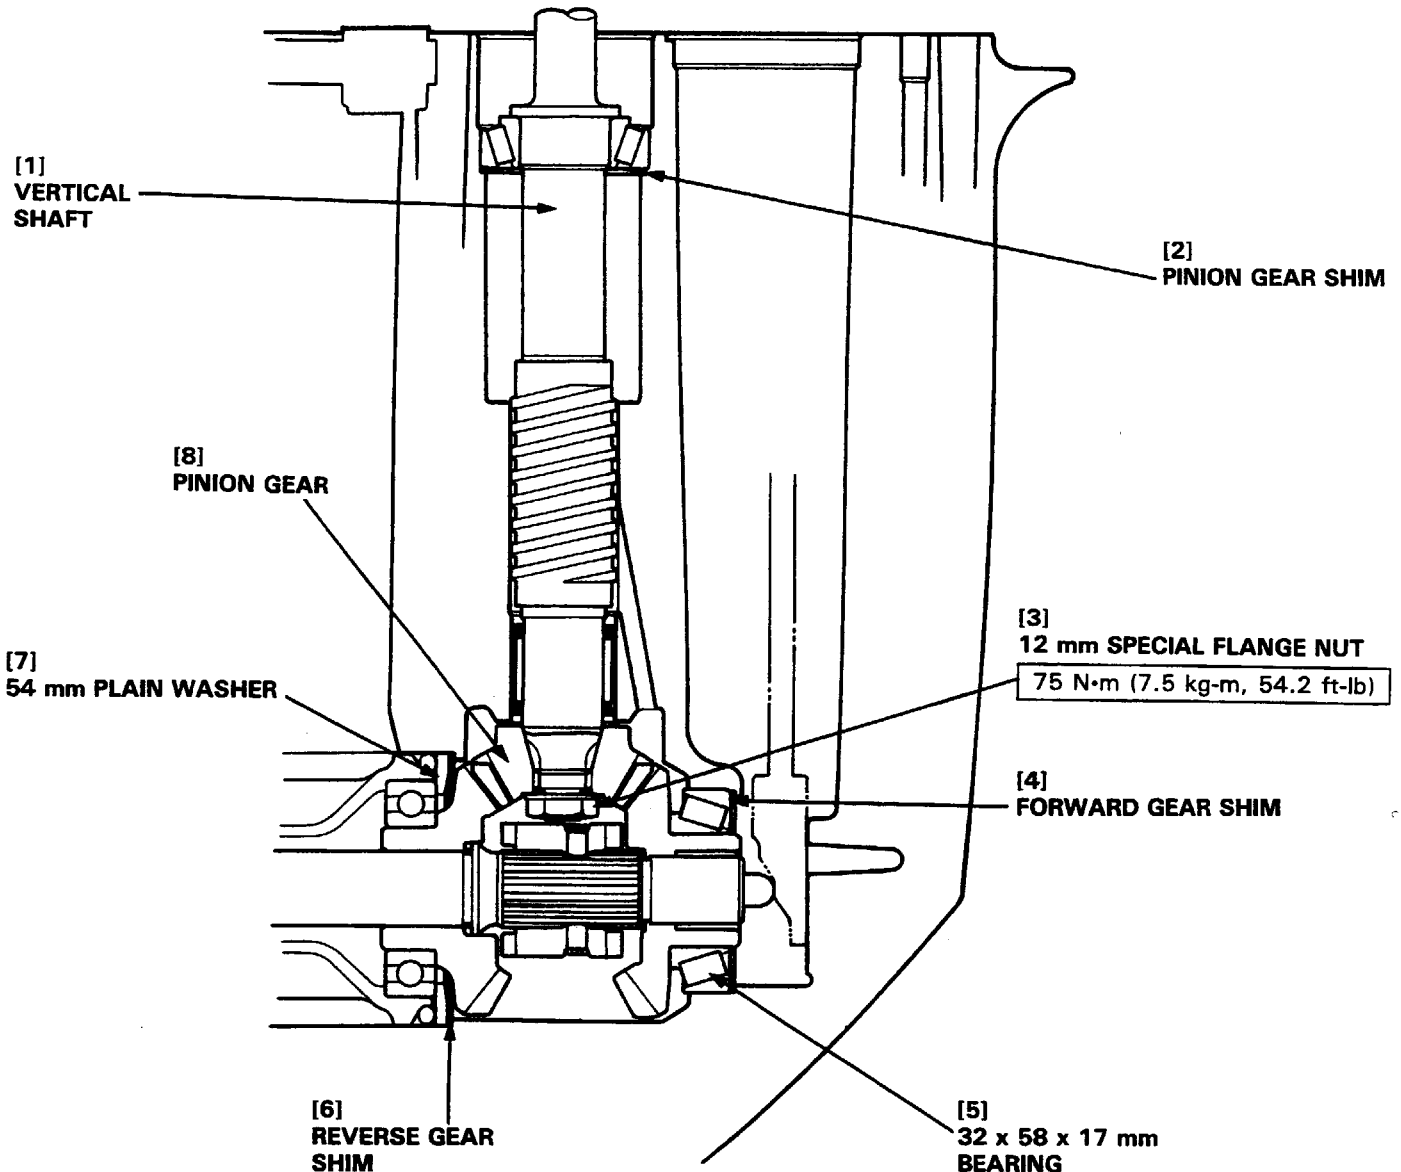


BACKLASH ADJUSTMENT

• FORWARD GEAR

After selecting the shim(s), remove the water pump and water screen (see page 11-10 and 16) and install the following parts on the gear case securely.

- Vertical shaft/bevel gear (page 11-12)
- Propeller shaft/propeller shaft holder (page 11-5)
- Propeller/propeller shaft holder assembly (page 11-2)

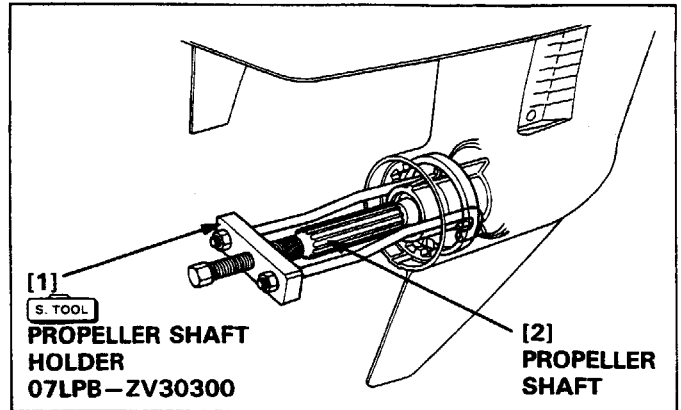

- 1) Hold the propeller shaft securely with the special tool as shown.

TOOL:


Propeller shaft holder **07LPB-ZV30300**

- 2) Set the special tool on the vertical shaft as shown and attach the tip of the dial gauge to the special tool.

TOOL:

Backlash inspection attachment **07LPJ-ZV30300**

- 3) Turn the vertical shaft right and left while pressing it down with approximately 5 kg (11.0 lb) of force and measure the backlash.

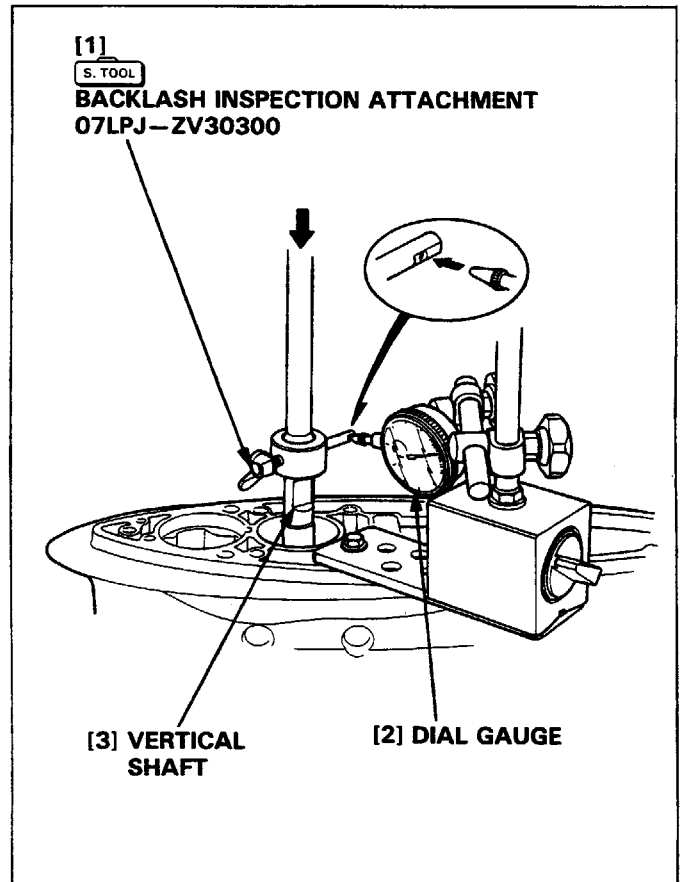

Standard	0.11—0.34 mm (0.0043—0.0134 in)
----------	---------------------------------


- 4) If the backlash is too large, increase the forward gear shim thickness and recheck the backlash.
If the backlash is too small, decrease the forward gear shim thickness and recheck the backlash.

• REVERSE GEAR

- 1) Hold the propeller shaft securely with the special tool and 16 mm castle nut as shown.

TOOL:

Propeller shaft remover: **07LPC-ZV30200**

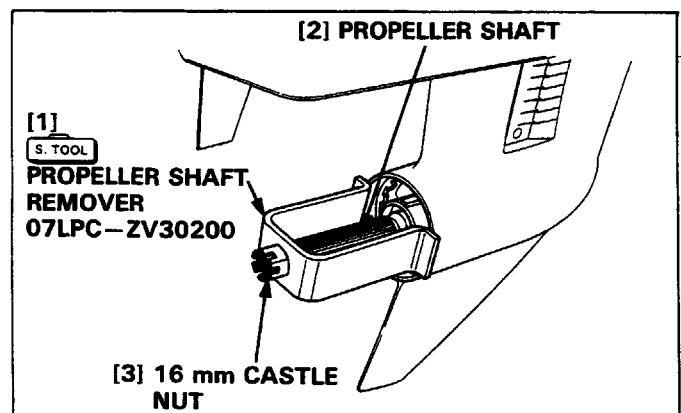

- 2) Set the special tool on the vertical shaft as shown and attach the tip of the dial gauge to the special tool.

TOOL:



Backlash inspection attachment

07LPJ-ZV30300

- 3) Turn the vertical shaft right and left while pressing it down with approximately 5 kg (11.0 lb) of force and measure the backlash.

Standard	0.11–0.34 mm (0.0043–0.0134 in)
----------	---------------------------------

- 4) If the backlash is too large, increase the reverse gear shim thickness and recheck the backlash.
If the backlash is too small, decrease the reverse gear shim thickness and recheck the backlash.

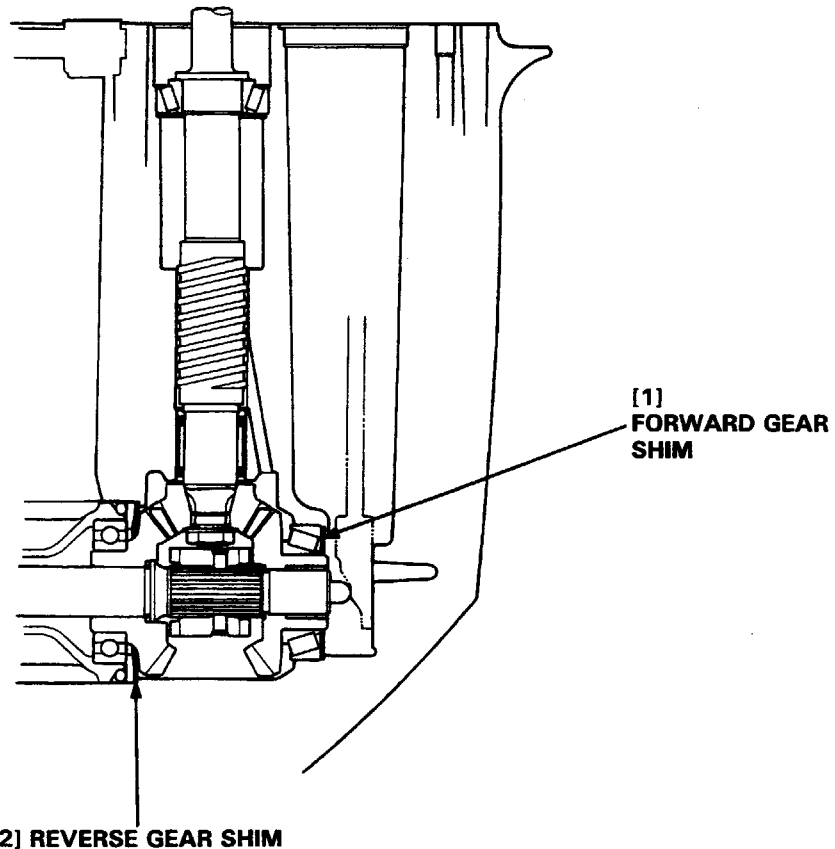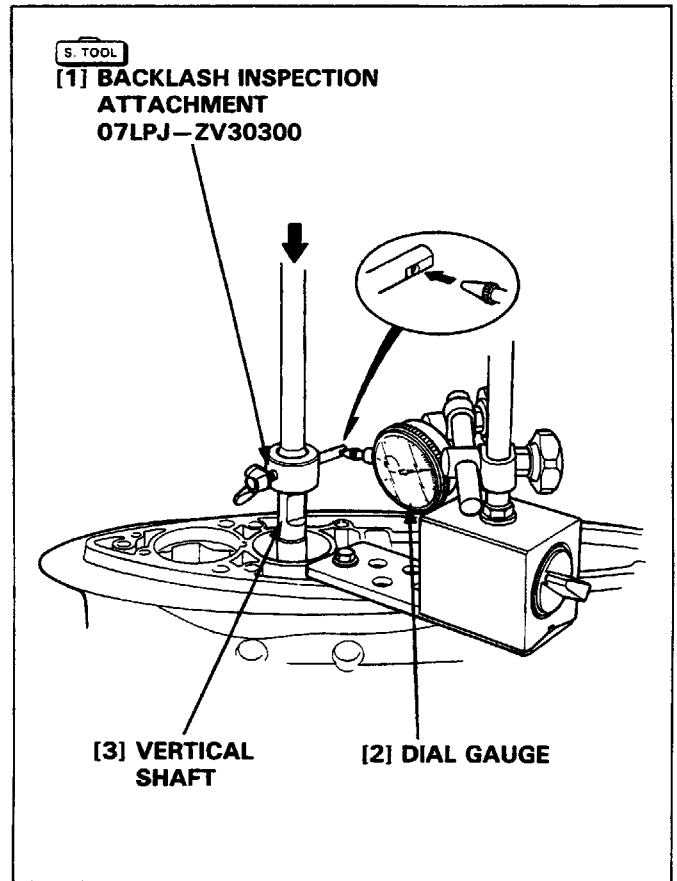


EXTENSION CASE/UNDER COVER

a. DISASSEMBLY/REASSEMBLY

• LOWER MOUNT RUBBER

- 1) Remove the gear case assembly (P. 11-9).
- 2) Set the adjusting rod in the second hole from the rear as shown.

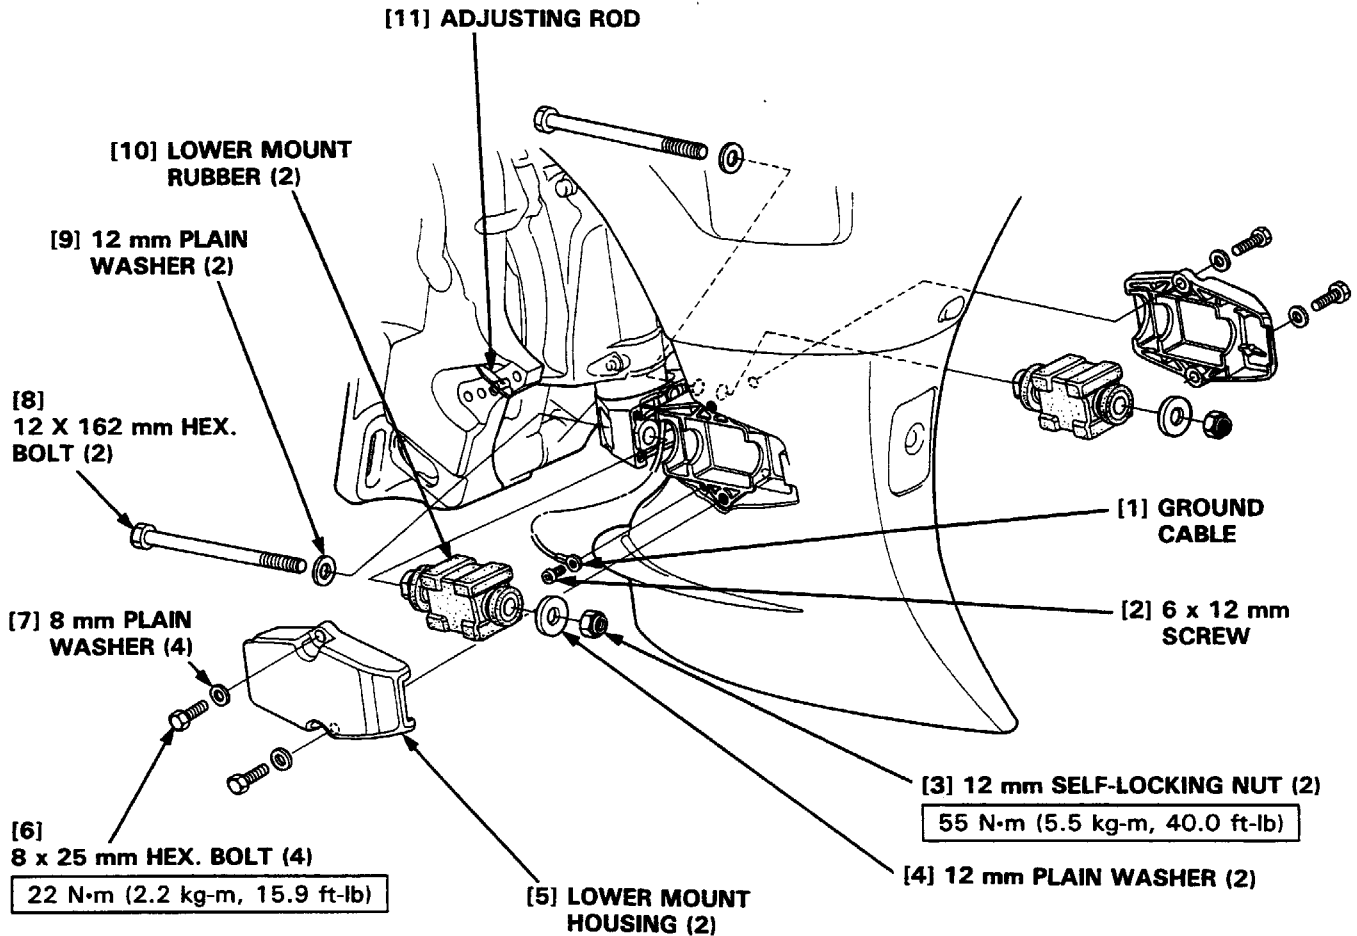


• LOWER MOUNT RUBBER


INSTALLATION:

Install the lower mount rubber by aligning its cutout with the cutout in the lower mount center housing, then tighten the self-locking nut securely.

TORQUE: 55 N·m (5.5 kg-m, 40.0 ft-lb)

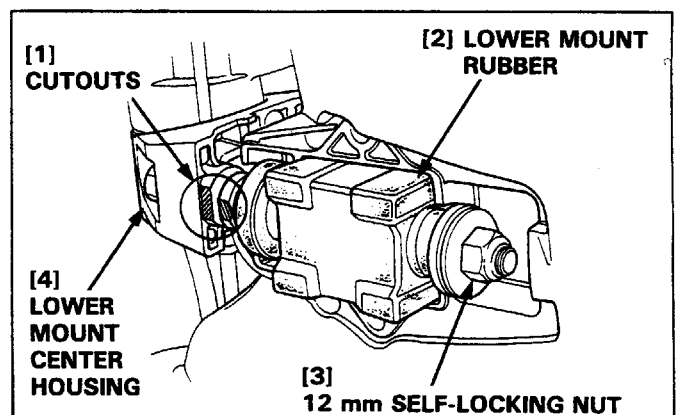

• EXTENSION COVER/UNDER COVER

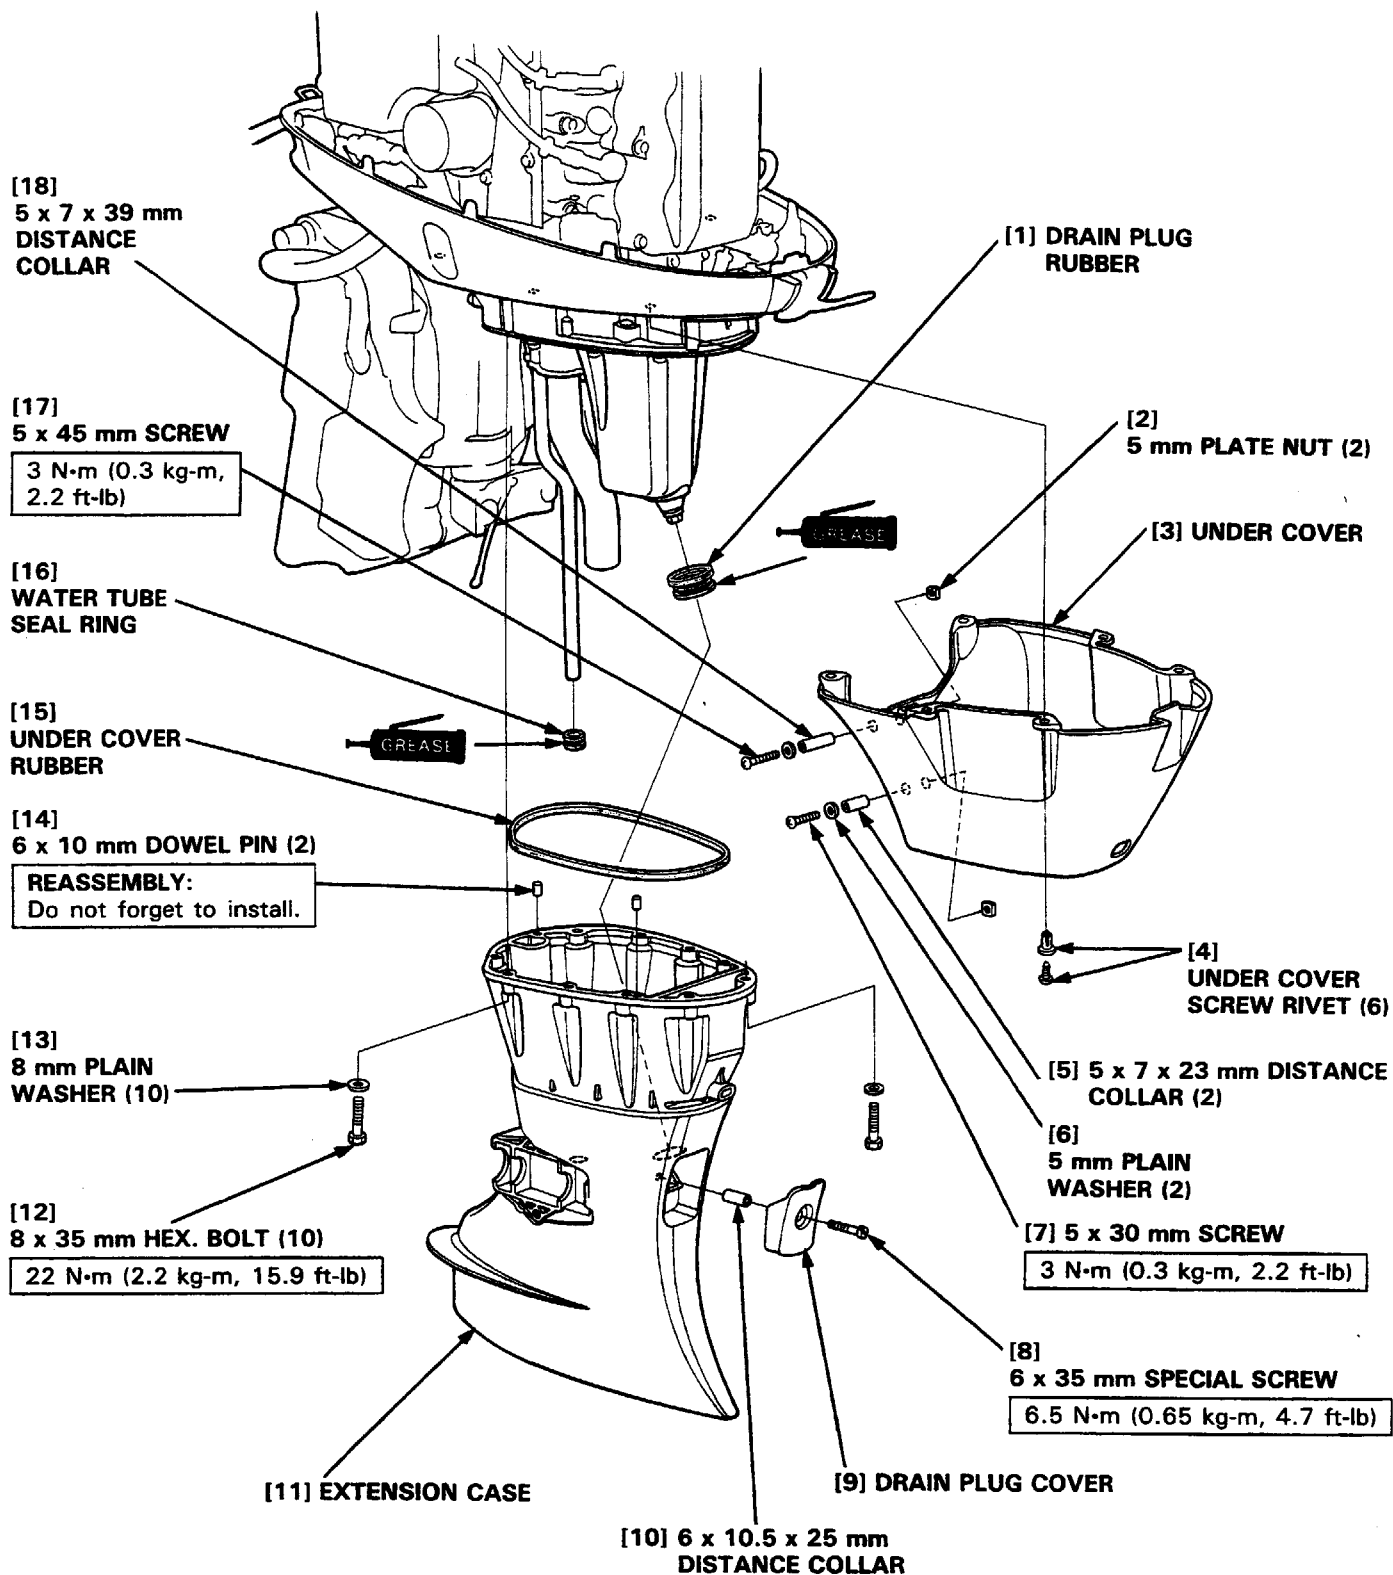


**OIL PAN/PRIMARY GEAR
CASE/SWIVEL CASE**

OIL PAN/MUFFLER	12-2
SHIFT RODS	12-3
ENGINE UNDER CASE	12-4
PRIMARY GEAR CASE	12-5
MOUNT FRAME	12-8
SWIVEL CASE/STERN BRACKET	12-10

OIL PAN/MUFFLER

a. DISASSEMBLY/REASSEMBLY


1) Remove the extension case assembly (P. 7-2).

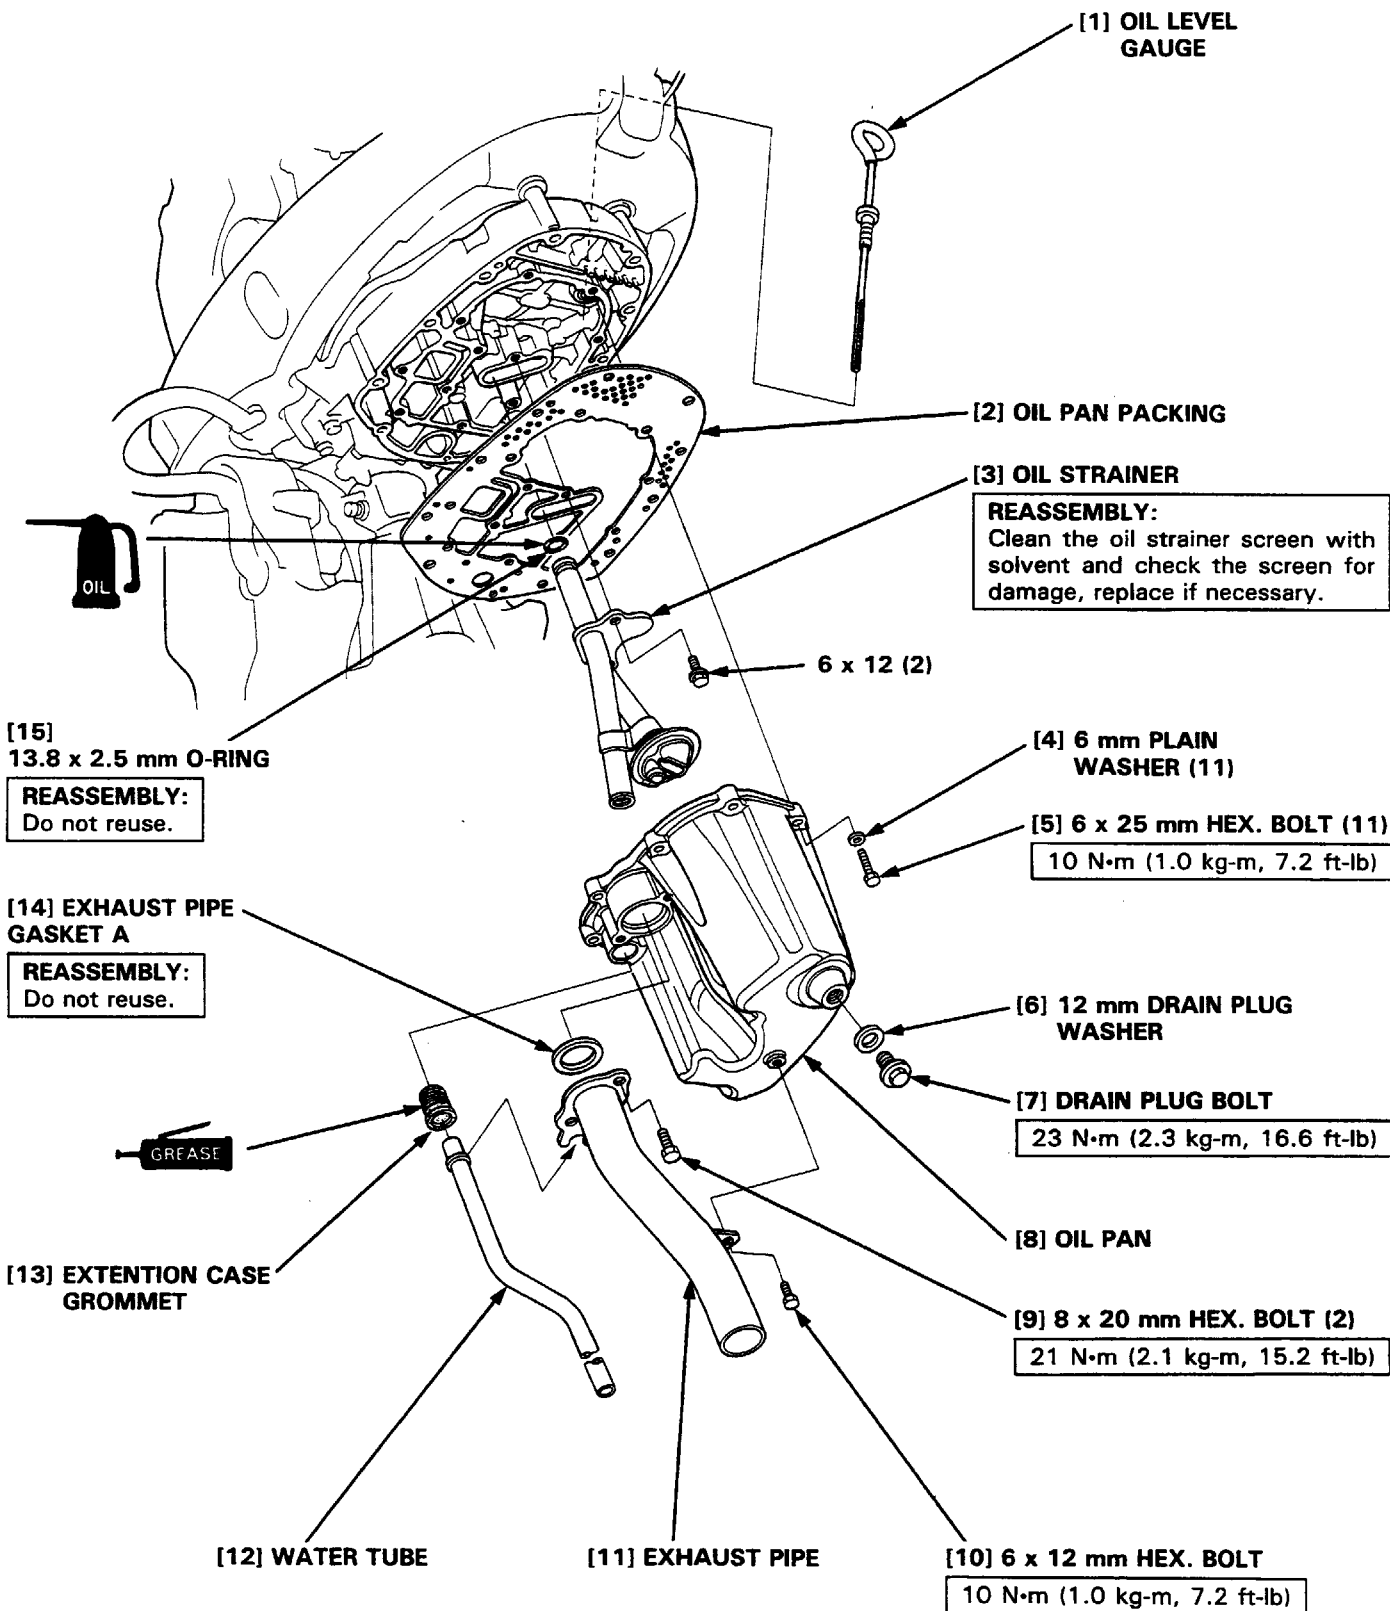

SHIFT RODS

a. DISASSEMBLY/REASSEMBLY


1) Remove the engine (P. 7-2).

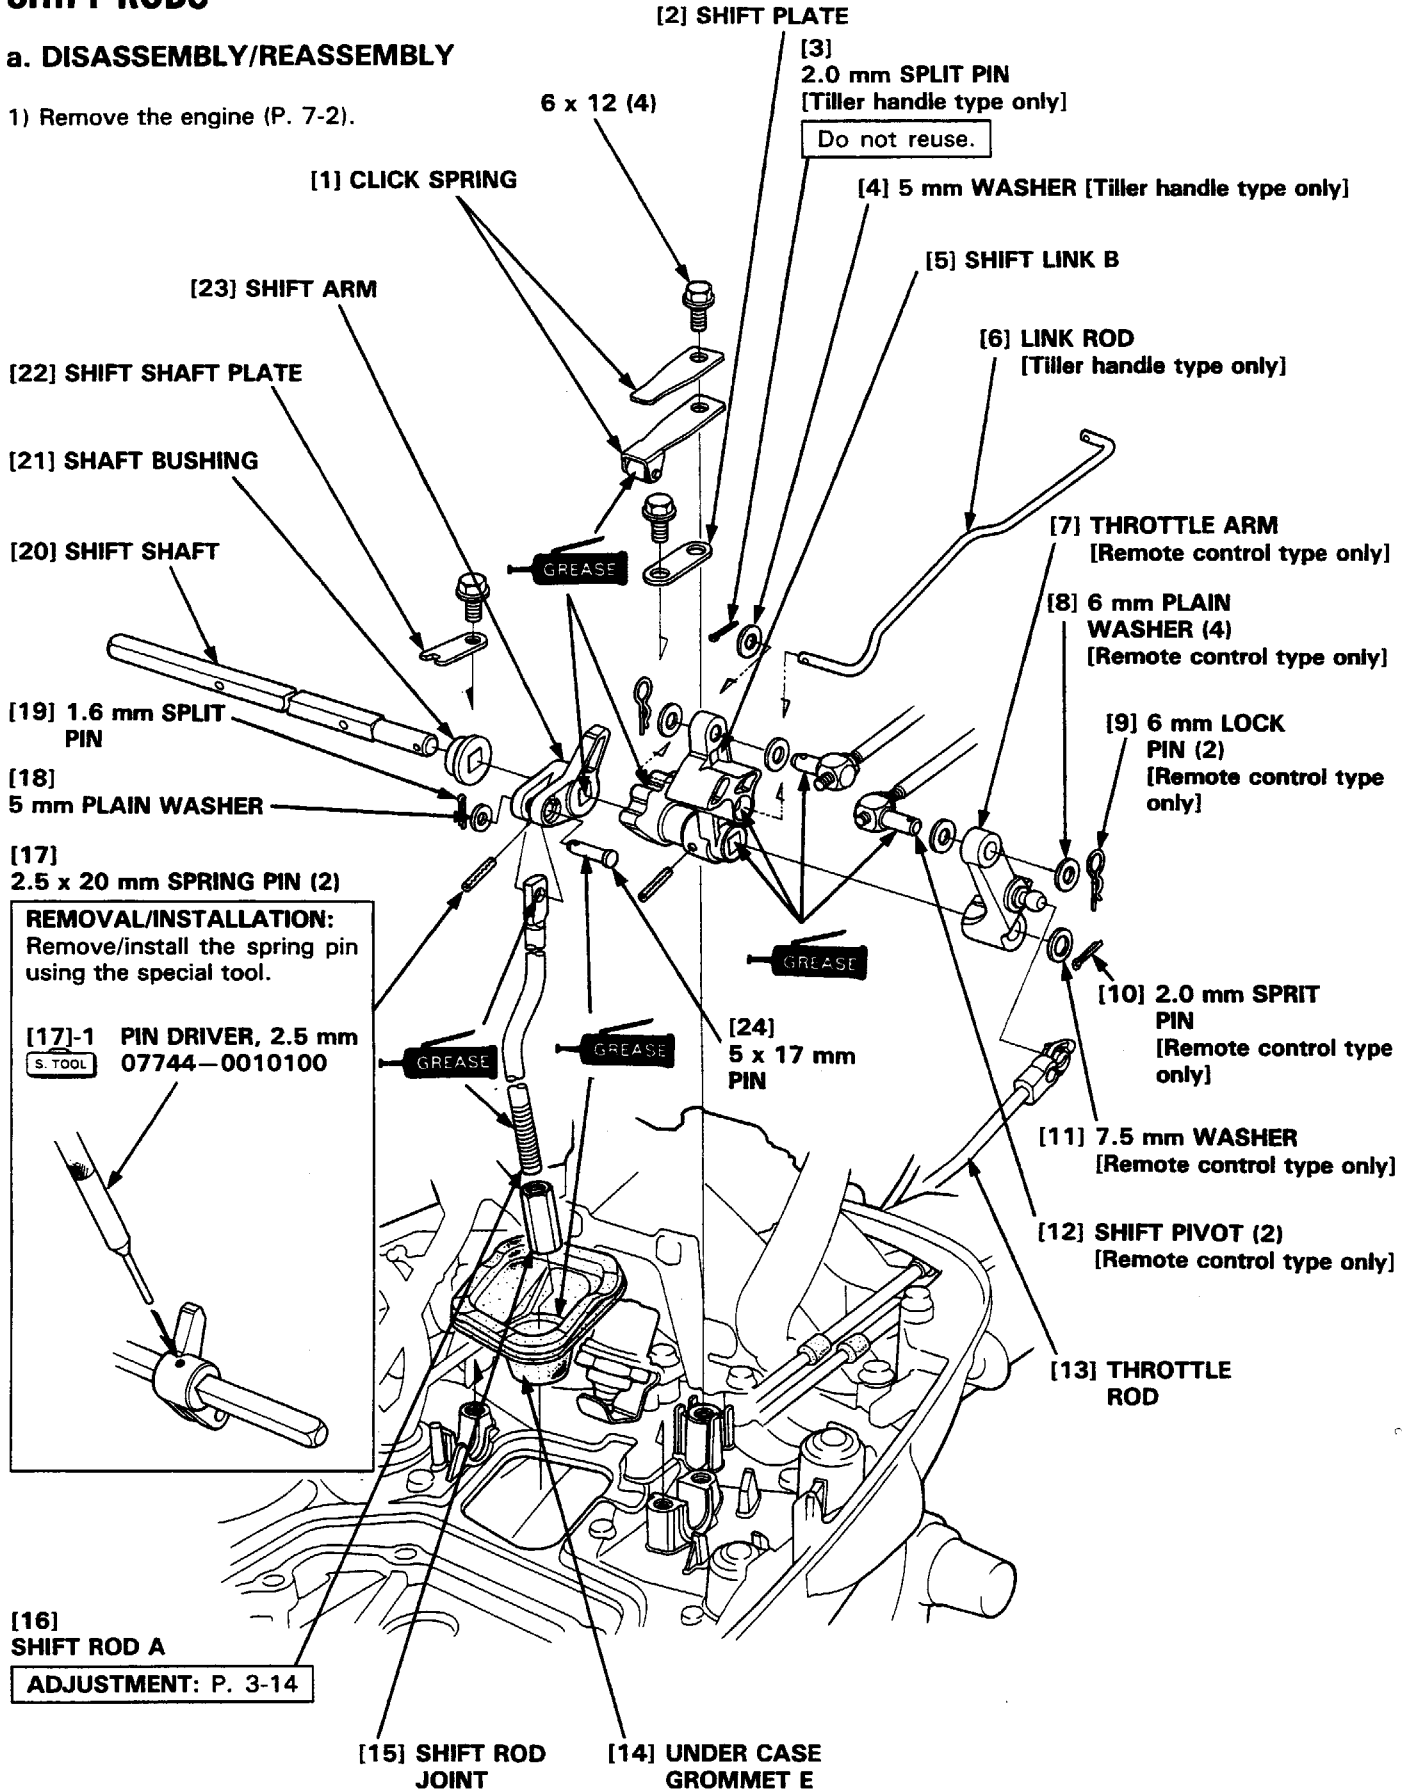

ENGINE UNDER CASE

a. DISASSEMBLY/REASSEMBLY

- 1) Remove the engine (P. 7-2).
- 2) Remove the handlebar (P. 15-5) [Tiller handle type only]
- 3) Remove the electric parts (P. 16-12).
- 4) Remove the shift rod/shift shaft (P. 12-3).

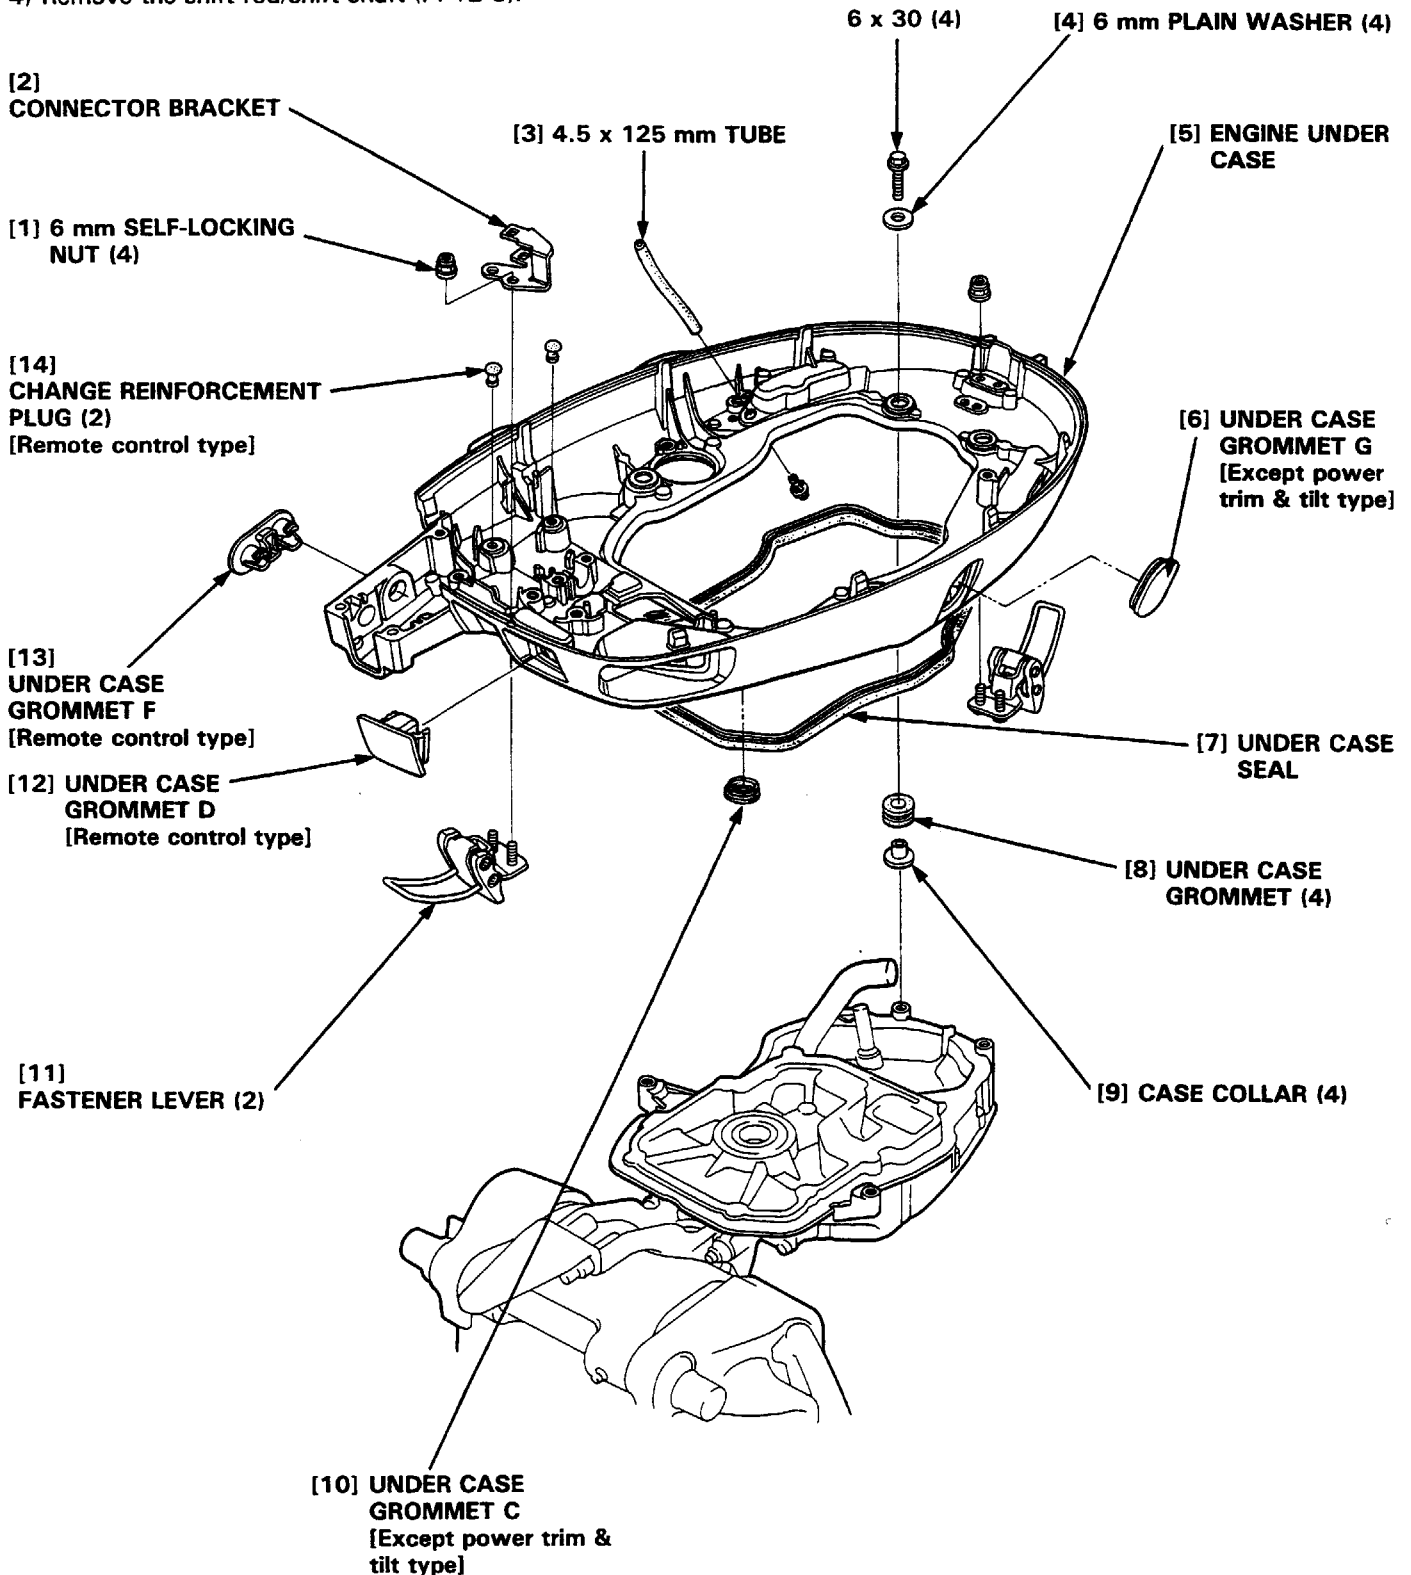

PRIMARY GEAR CASE

a. DISASSEMBLY/REASSEMBLY

1) Remove the engine under case (P. 12-4).

[1] OIL TUBE

REASSEMBLY:

Before installing, check for cracks and deterioration. Check that the oil tube and tube installation sections are not contaminated with oil, and install the oil tube and tube securely.

[2] HOSE CLAMP

[3] 6205 RADIAL BALL BEARING

REMOVAL/INSTALLATION: P. 12-6

[4] 25 x 40 x 7 mm OIL SEAL

REMOVAL/INSTALLATION: P. 12-6

[5] GREASE

(Apply grease between the lips.)

[6] 17 x 26 x 7 mm WATER SEAL

REMOVAL/INSTALLATION: P. 12-6

[7] UPPER MOUNT HOLDER (2)

[16] SEAL RUBBER

REASSEMBLY: P. 12-7

[15] PRIMARY GEAR CASE

[14] UPPER MOUNT RUBBER B (2)

[13] 10 x 130 mm SPECIAL BOLT (2)

INSTALLATION: P.12-7

GREASE

[11] UPPER MOUNT RUBBER (2)

[8] 6 mm PLAIN WASHER (8)

[9] 6 x 16 mm HEX. BOLT (8)

[12] SPECIAL WASHER (2)

INSTALLATION: P. 12-7

[10] 10 mm SELF-LOCKING NUT (2)

45 N·m (4.5 kg·m, 32.5 ft·lb)


• **25 x 40 x 7 mm OIL SEAL/17 x 26 x 7 mm WATER SEAL**

REMOVAL:

Remove the oil seal/water seal by using the special tool as shown.

TOOL:

Oil seal remover 07748-0010001

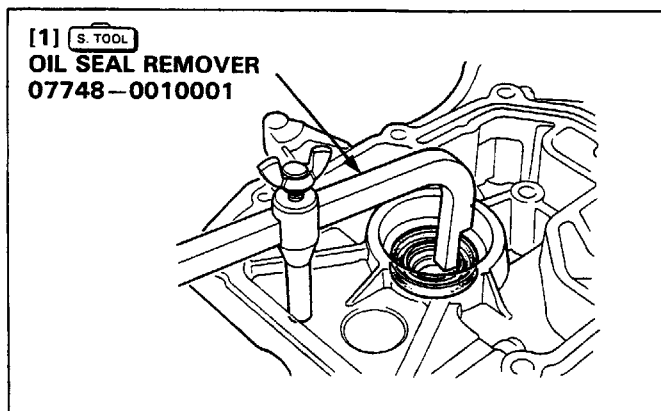

INSTALLATION:

Drive the oil seal/water seal into the primary gear case by using the special tools as shown.

TOOLS:

17 x 26 x 7 mm WATER SEAL


Handle A 07749-0010000

Attachment, 24 x 26 mm 07746-0010700

25 x 40 x 7 mm OIL SEAL

Handle A 07749-0010000

Attachment, 37 x 40 mm 07746-0010200

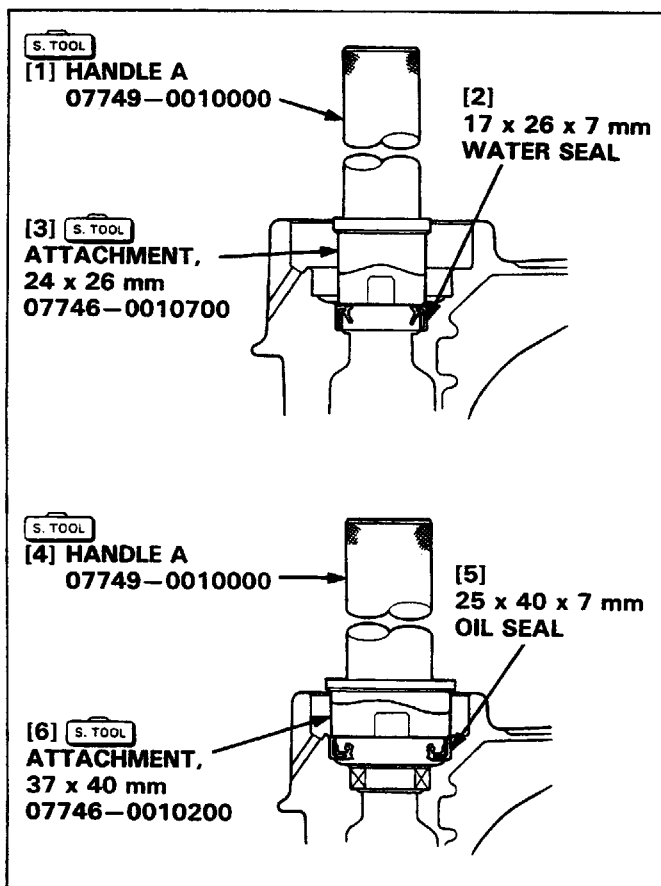

NOTE

- Install the oil seal and water seal in the direction as shown.


• **6205 RADIAL BALL BEARING**

REMOVAL:

Remove the bearing by using the special tool as shown.

TOOL:

Bearing remover, 25 mm 07936-ZV10000

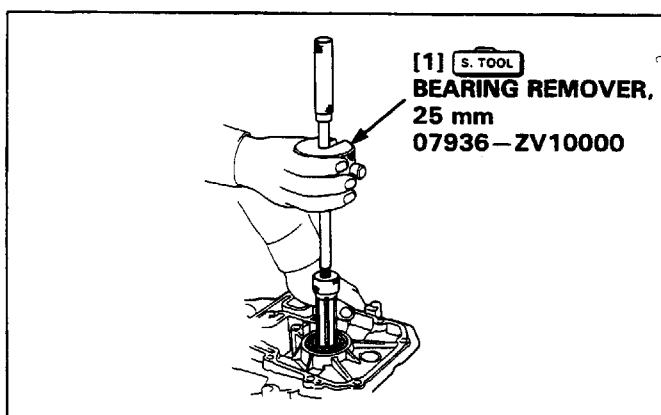


INSTALLATION:

Drive the bearing into the primary gear case using the special tools as shown.

TOOLS:

Handle A	07749-0010000
Attachment, 52 x 55 mm	07746-0010400
Pilot, 25 mm	07746-0040600

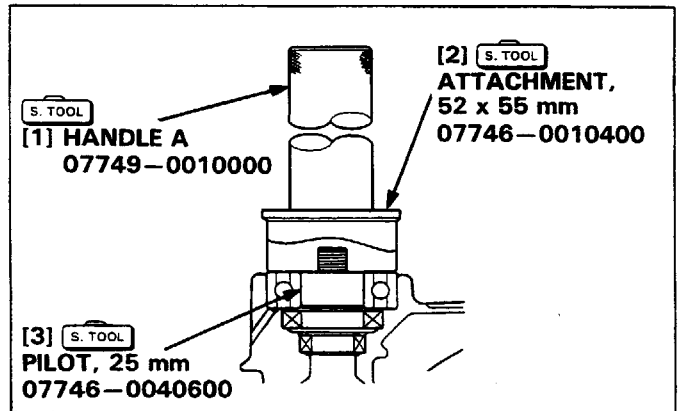


• 10 x 130 mm SPECIAL BOLT/SPECIAL WASHER

INSTALLATION:

Install the 10 x 130 mm special bolt/special washer with the cutout toward down and tighten the 10 mm self-locking nut.

TORQUE: 45 N·m (4.5 kg·m, 32.5 ft·lb)

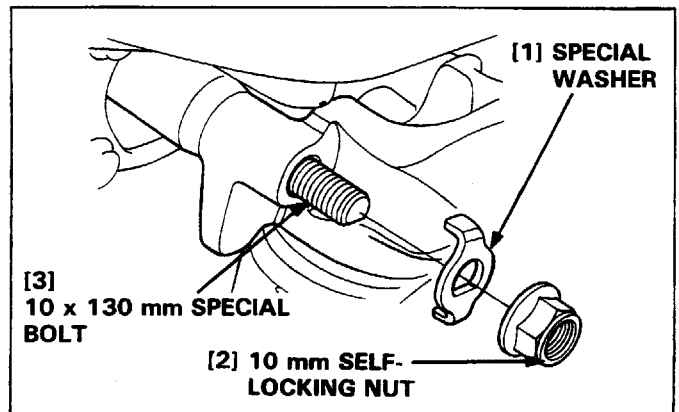


• SEAL RUBBER

REASSEMBLY:

Install the seal rubber in the primary gear case with the narrower side facing the front as shown.

NOTE


- Install the seal rubber with the narrower side facing the front, or the water can enter the primary gear case.

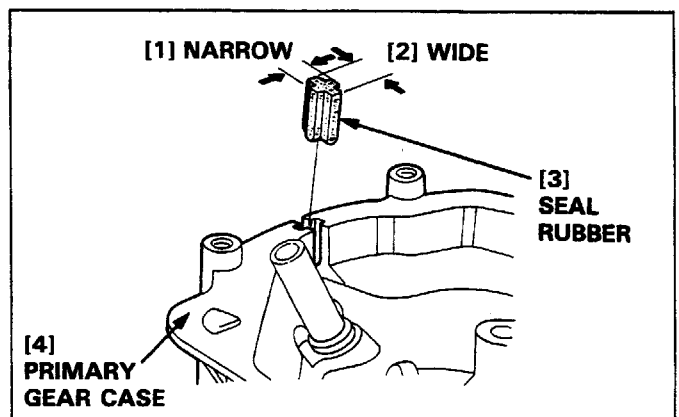

MOUNT FRAME

a. DISASSEMBLY/REASSEMBLY

1) Remove the primary gear case (P. 12-5).

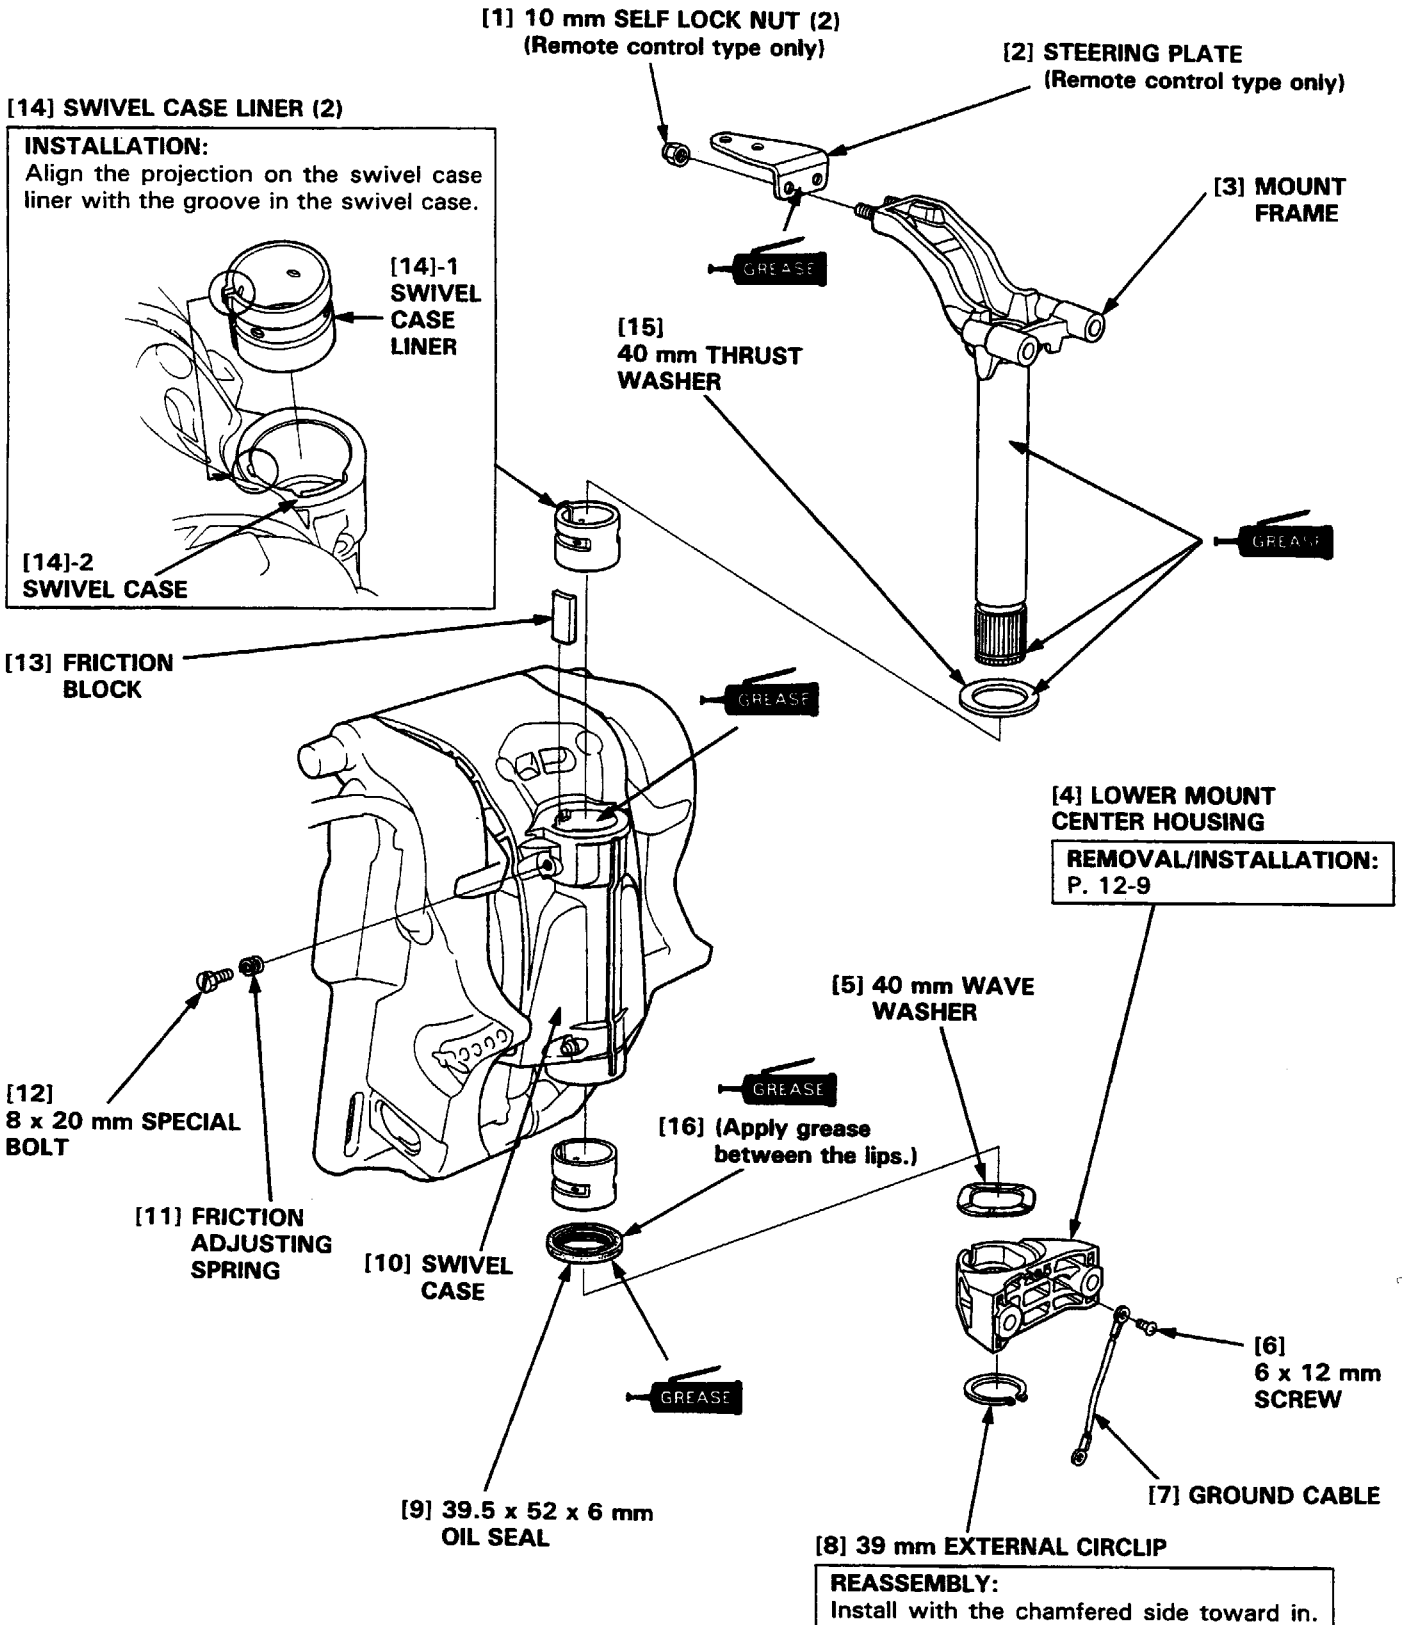


• **LOWER MOUNT CENTER HOUSING**

REMOVAL:

- 1) Remove the 39 mm external circlip.
- 2) Mark the mount frame so that it aligns with the "▲" mark on the lower mount center housing.
- 3) Drive the mount frame out of the lower mount center housing using the special tools.


TOOLS:

Handle A 07749-001000
Attachment, 37 x 40 mm 07746-0010200

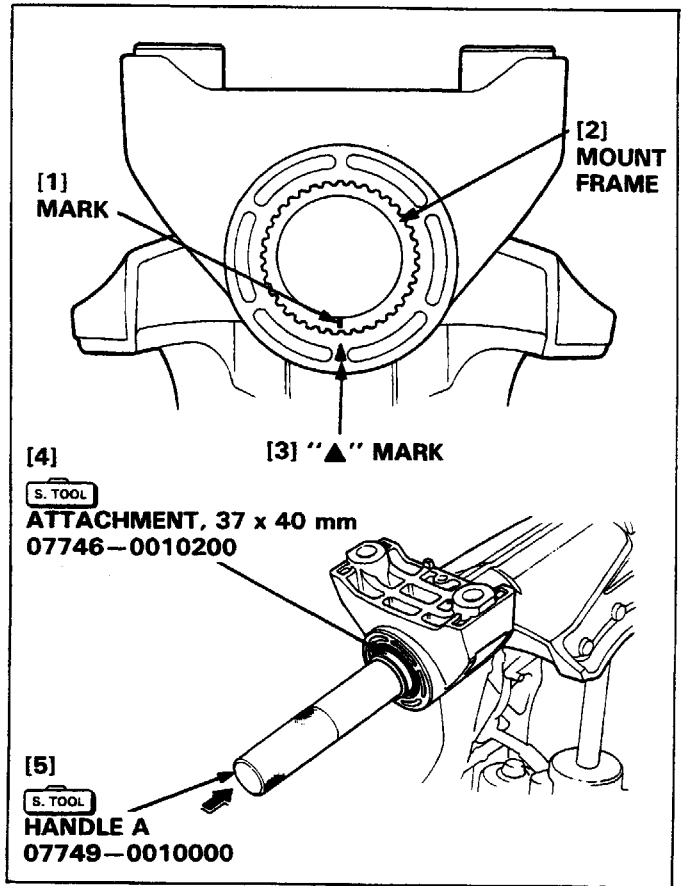

INSTALLATION:

- 1) Install the mount frame on the swivel case.
- 2) Align the mark on the mount frame, which was marked on disassembly, with the "▲" mark on the lower mount center housing, and assemble them.

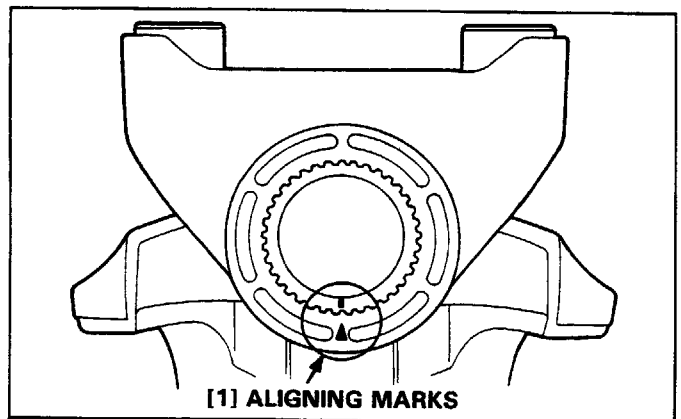


SWIVEL CASE/STERN BRACKET

a. DISASSEMBLY/REASSEMBLY

1) Remove the mount frame (P. 12-8).

*1: Power trim & tilt type only parts.

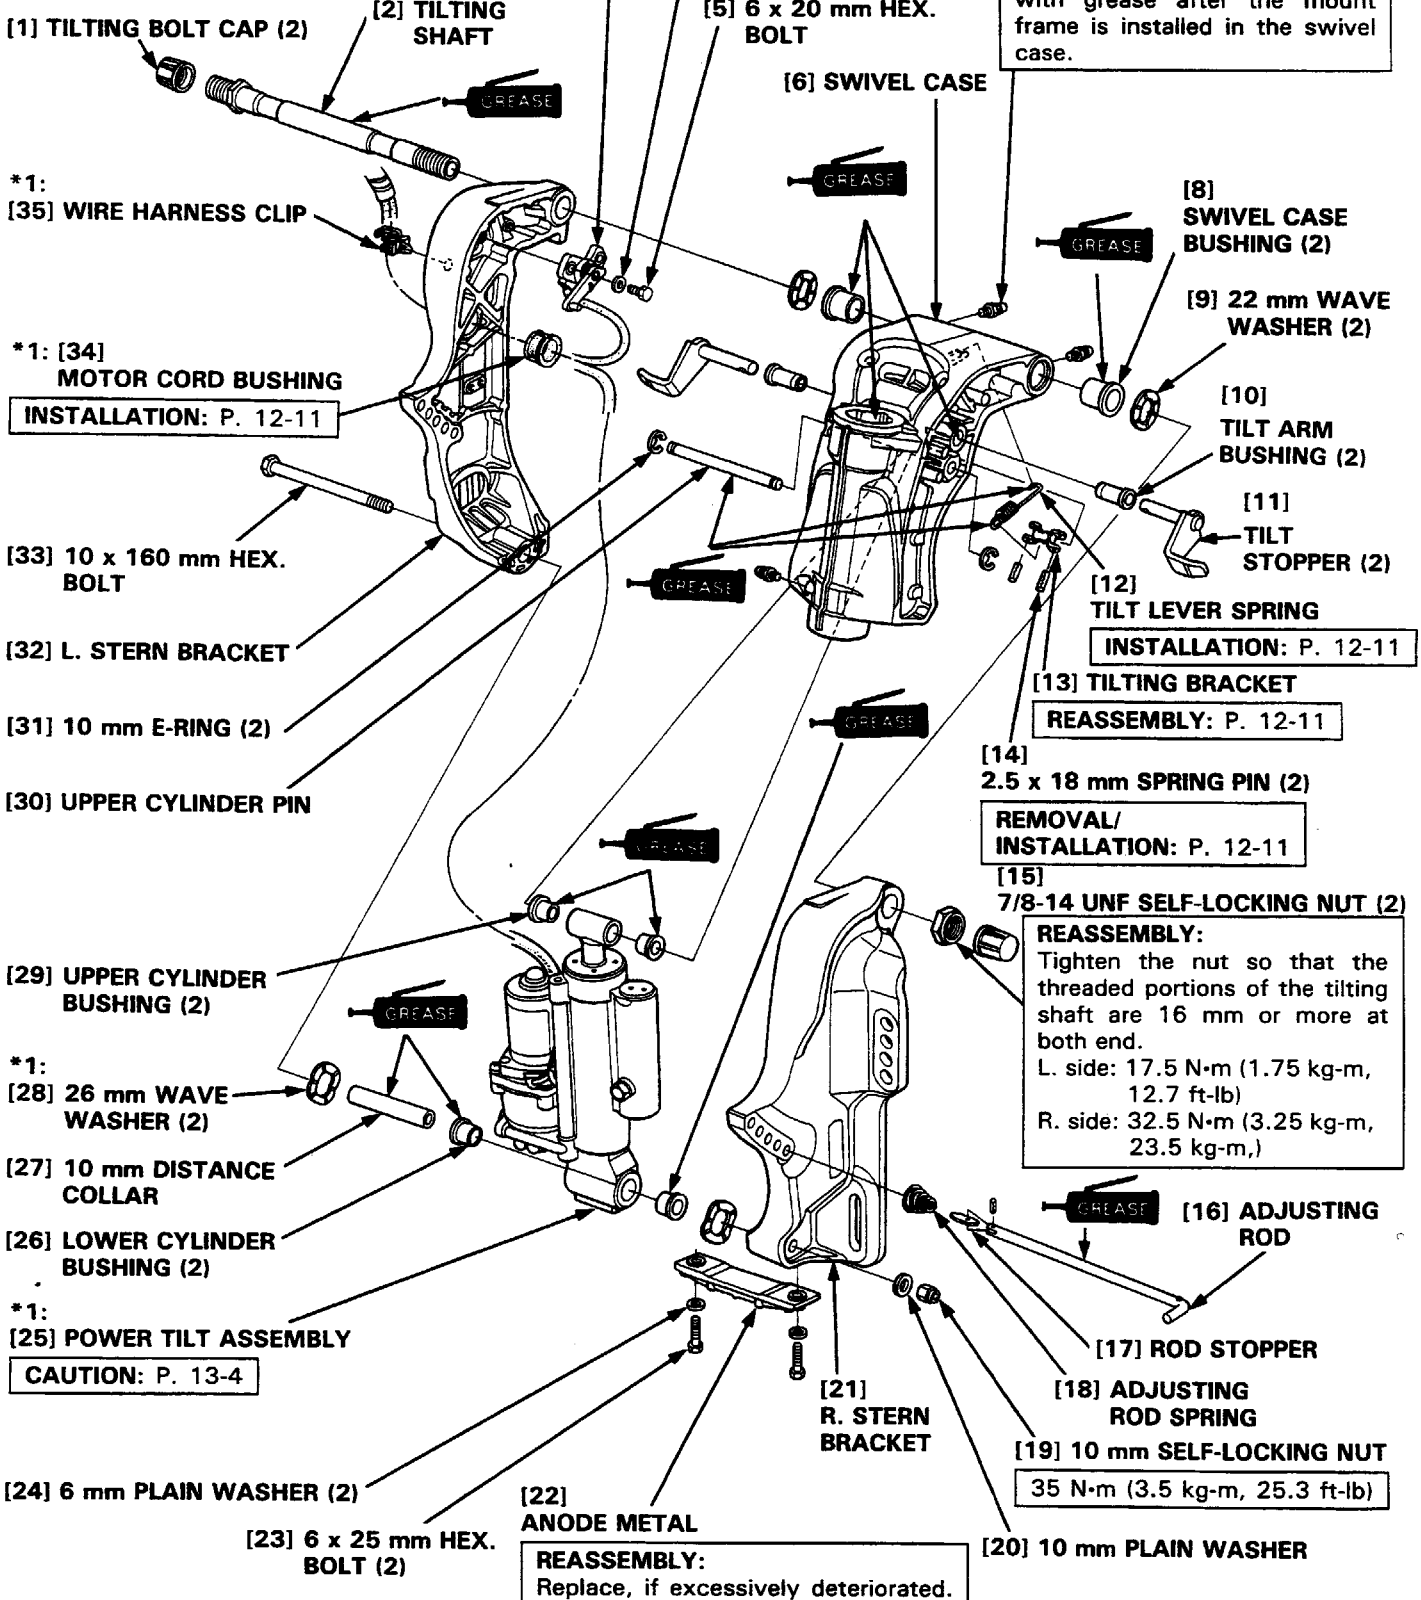

• **2.5 x 18 mm SPRING PIN**


REMOVAL/INSTALLATION:

Remove/install the 2.5 x 18 mm spring pin by using the special tool.

TOOL:

Pin driver, 2.5 mm


07744-0010100

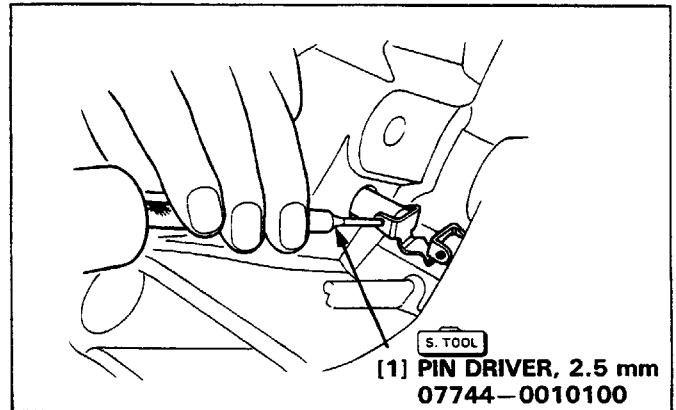

• **TILT LEVER SPRING**

INSTALLATION:


Install the shorter side of the hook so that it faces toward the tilting bracket.

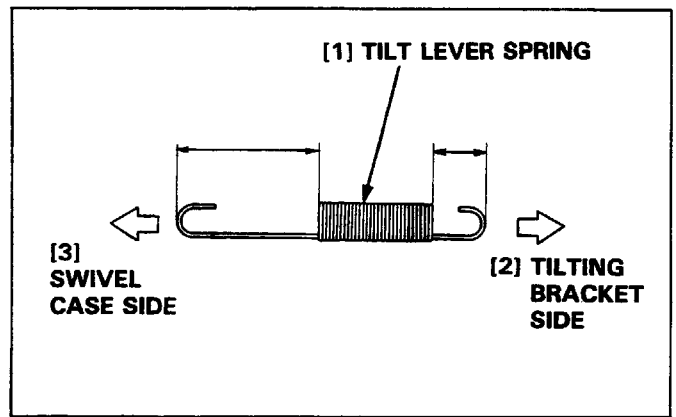

• **TILTING BRACKET/TILT STOPPER**

INSTALLATION:


Note the installation direction.

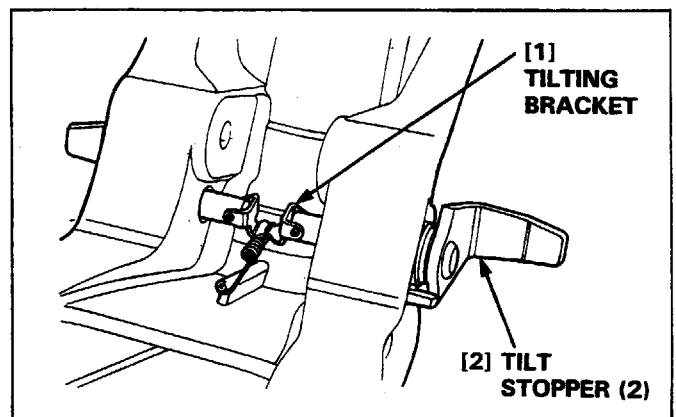

• **MOTOR CORD BUSHING**

INSTALLATION:

Align the projection on the motor cord bushing with the groove in the stern bracket.

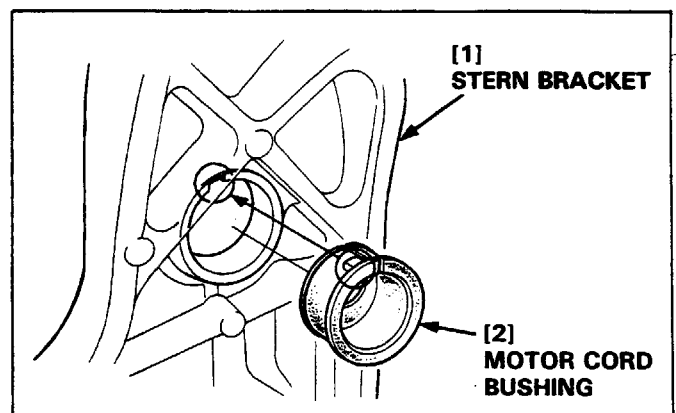

GAS ASSISTED/POWER TILT

**GAS ASSISTED ASSEMBLY
(GAS ASSISTED TYPE) 13-2**

**POWER TILT ASSEMBLY
(POWER TRIM & TILT TYPE) 13-3**

GAS ASSISTED ASSEMBLY (GAS ASSISTED TYPE)

a. DISASSEMBLY/REASSEMBLY


▲ WARNING

- Do not disassemble the gas assisted damper assembly as it is filled with the high pressure gas.

NOTE

- Disassembly/reassembly of the gas assisted assembly must be performed with the outboard motor laying on its right side. Raise the outboard motor to the uppermost position.

- 1) Remove the gas assisted damper assembly by removing the tilting bolt cap, loosening the self locking nut, and lifting the stern bracket.

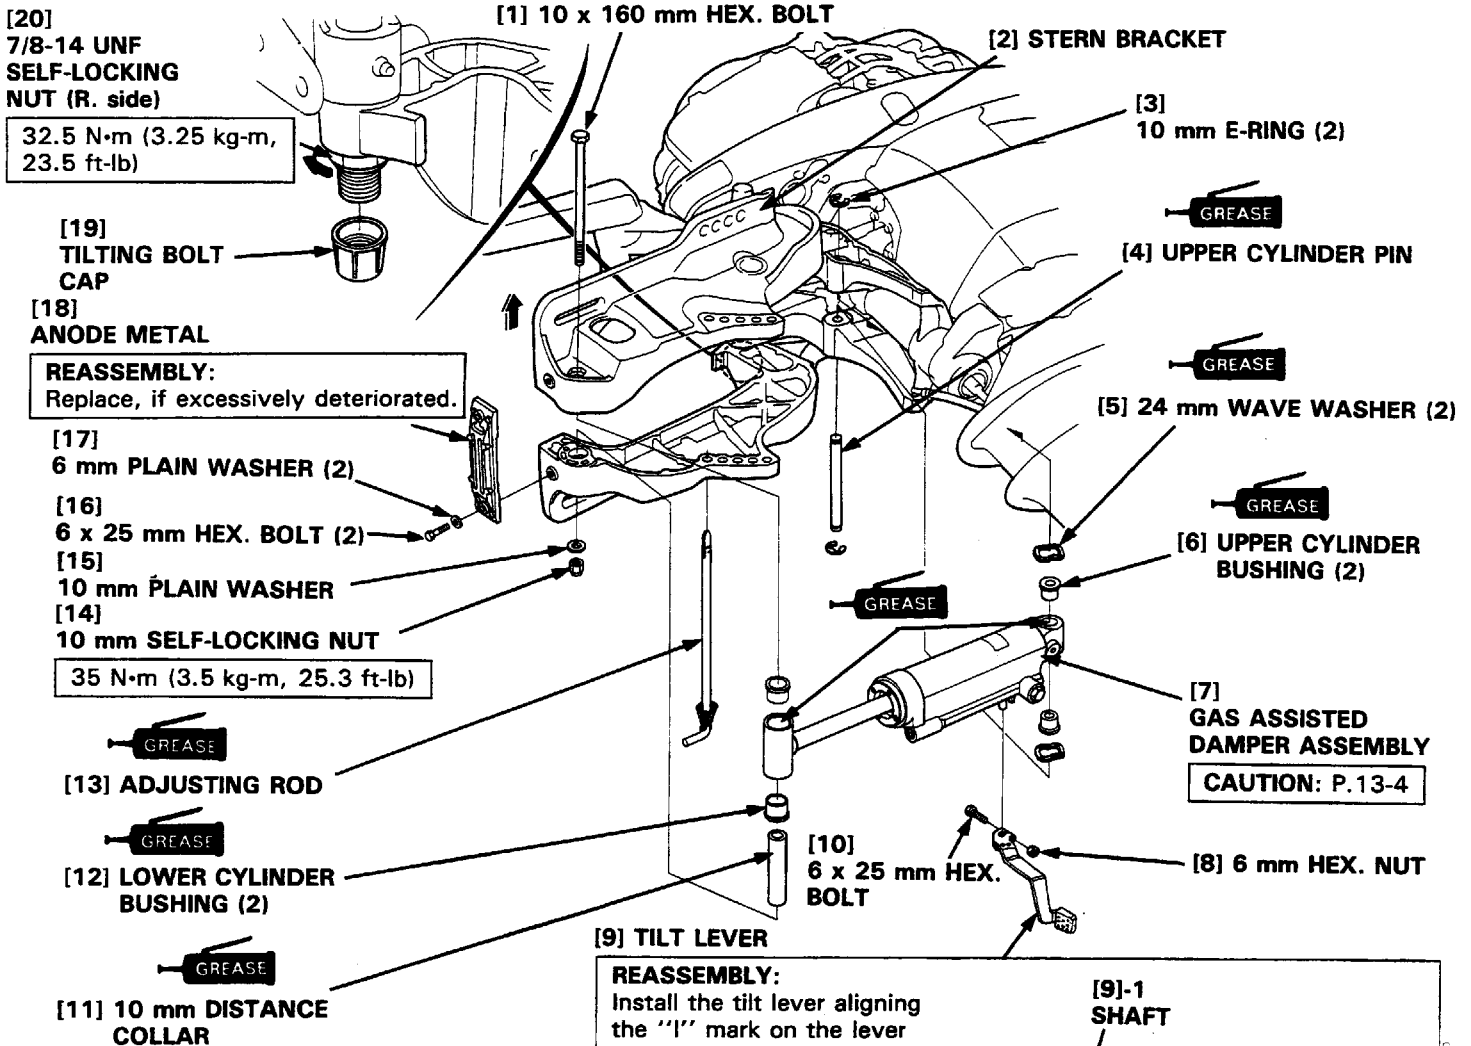


POWER TILT ASSEMBLY (POWER TRIM & TILT TYPE)

a. DISASSEMBLY/REASSEMBLY


NOTE

- Disassembly/reassembly of the power tilt assembly must be performed with the outboard motor laying on its right side. Raise the outboard motor to the uppermost position.

- 1) Disconnect the trim angle sensor connectors and the power tilt motor connectors.
- 2) Remove the power tilt assembly by removing the tilting bolt cap, loosening the self lock nut, and lifting the stern bracket.

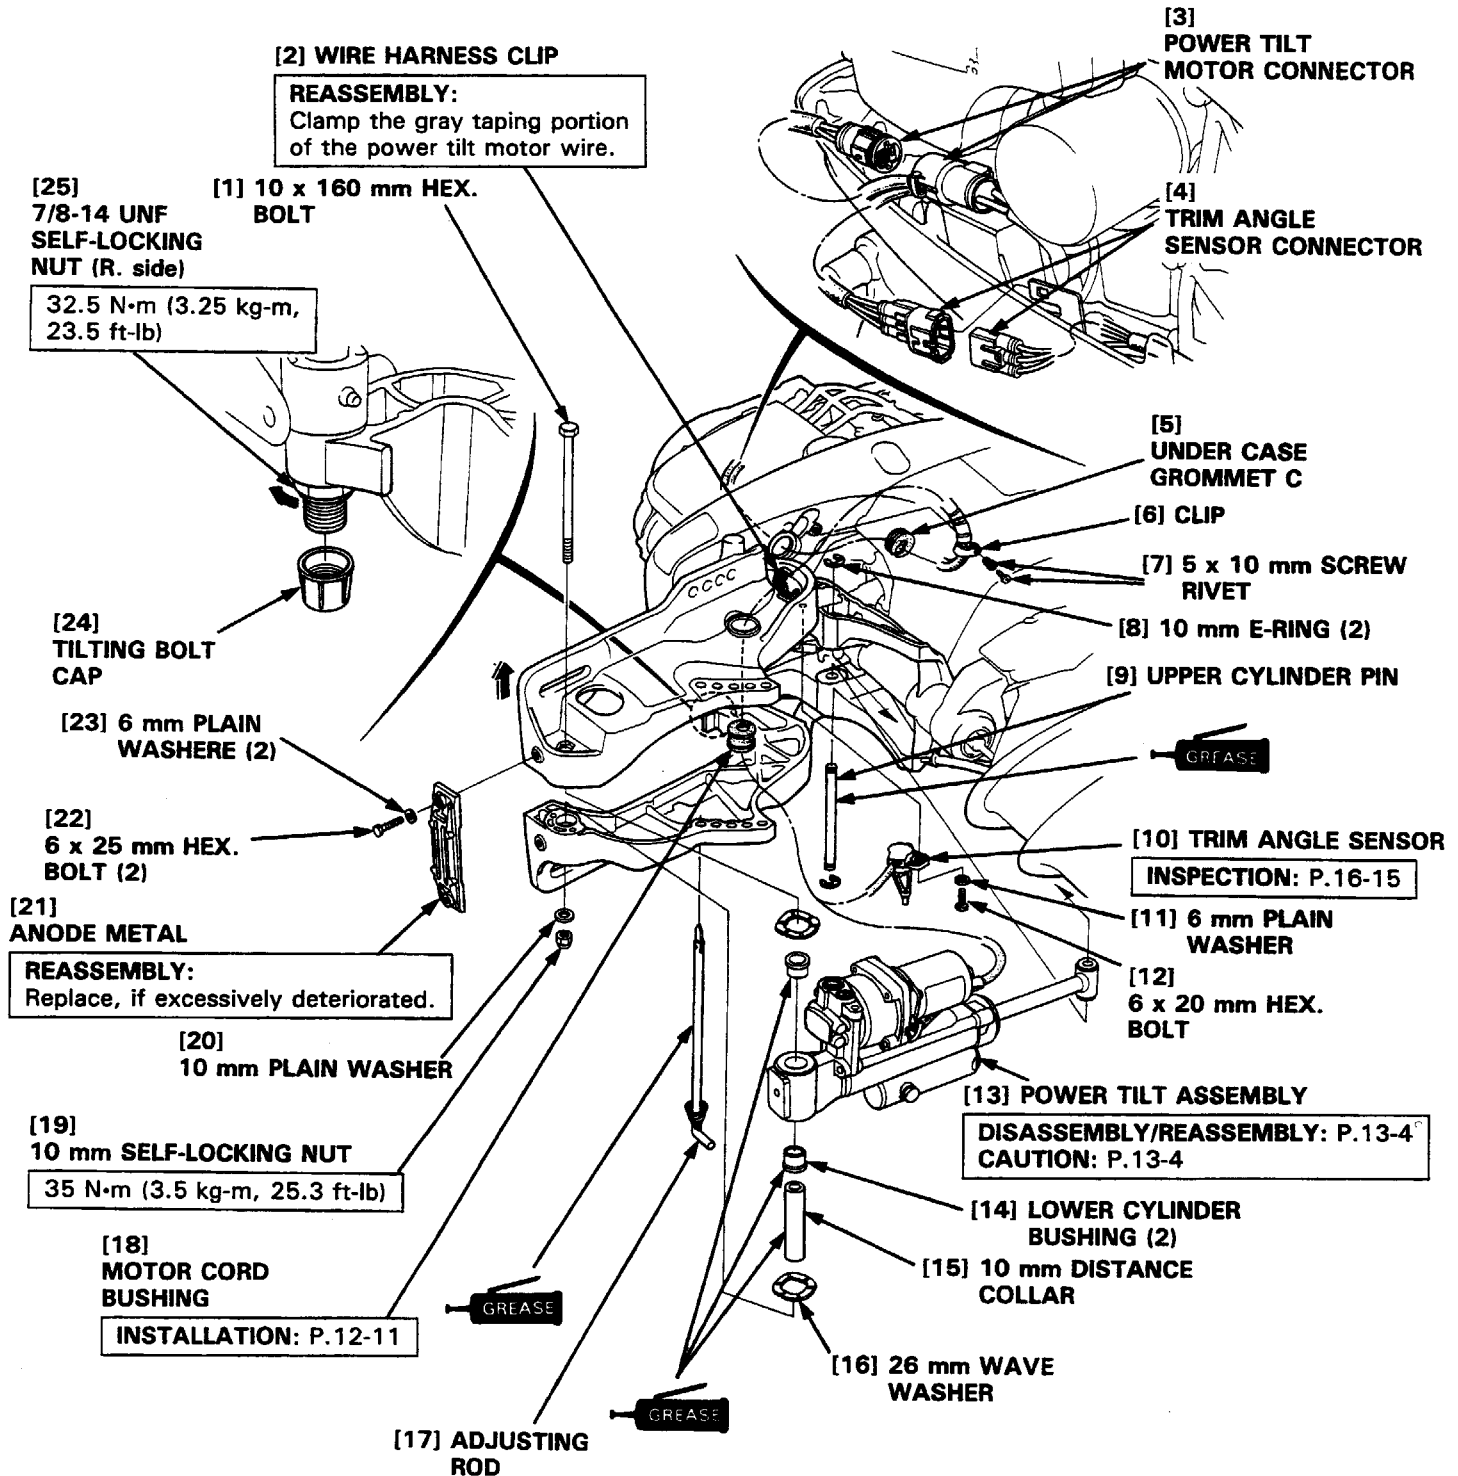


• POWER TILT ASSEMBLY

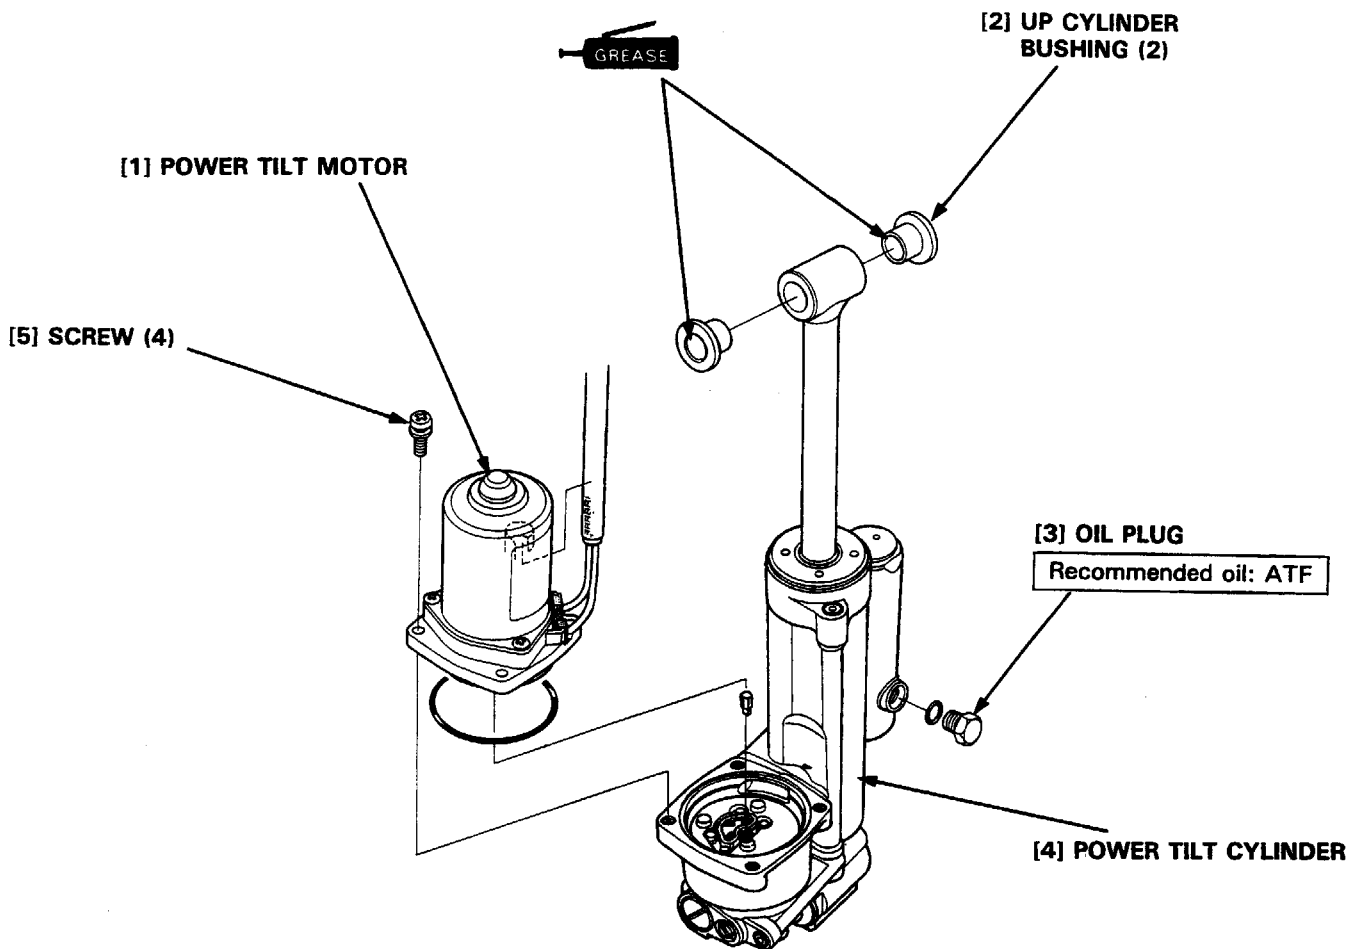

• GAS ASSISTED DAMPER/POWER TILT ASSEMBLY

CAUTION

- Store the gas assisted damper assembly vertically with the upper cylinder bushing installation section toward up, as shown. Never store it horizontally or with the 10 mm distance collar installation section toward up.
- Store the power tilt assembly vertically with the upper cylinder pin installation section toward up, as shown. Never store it horizontally or with the 10 mm distance collar installation section toward up.

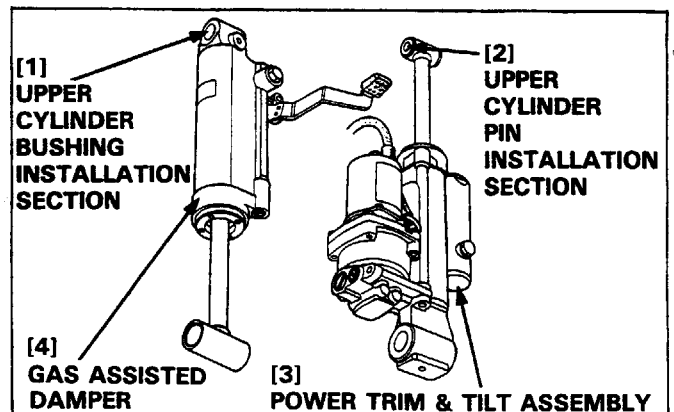


STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)

STEERING ROD	14-2
REMOTE CONTROL CABLE	14-3
REMOTE CONTROL BOX	14-4
REMOTE CONTROL CABLE INSTALLATION	14-9

STEERING ROD


a. DISASSEMBLY/REASSEMBLY

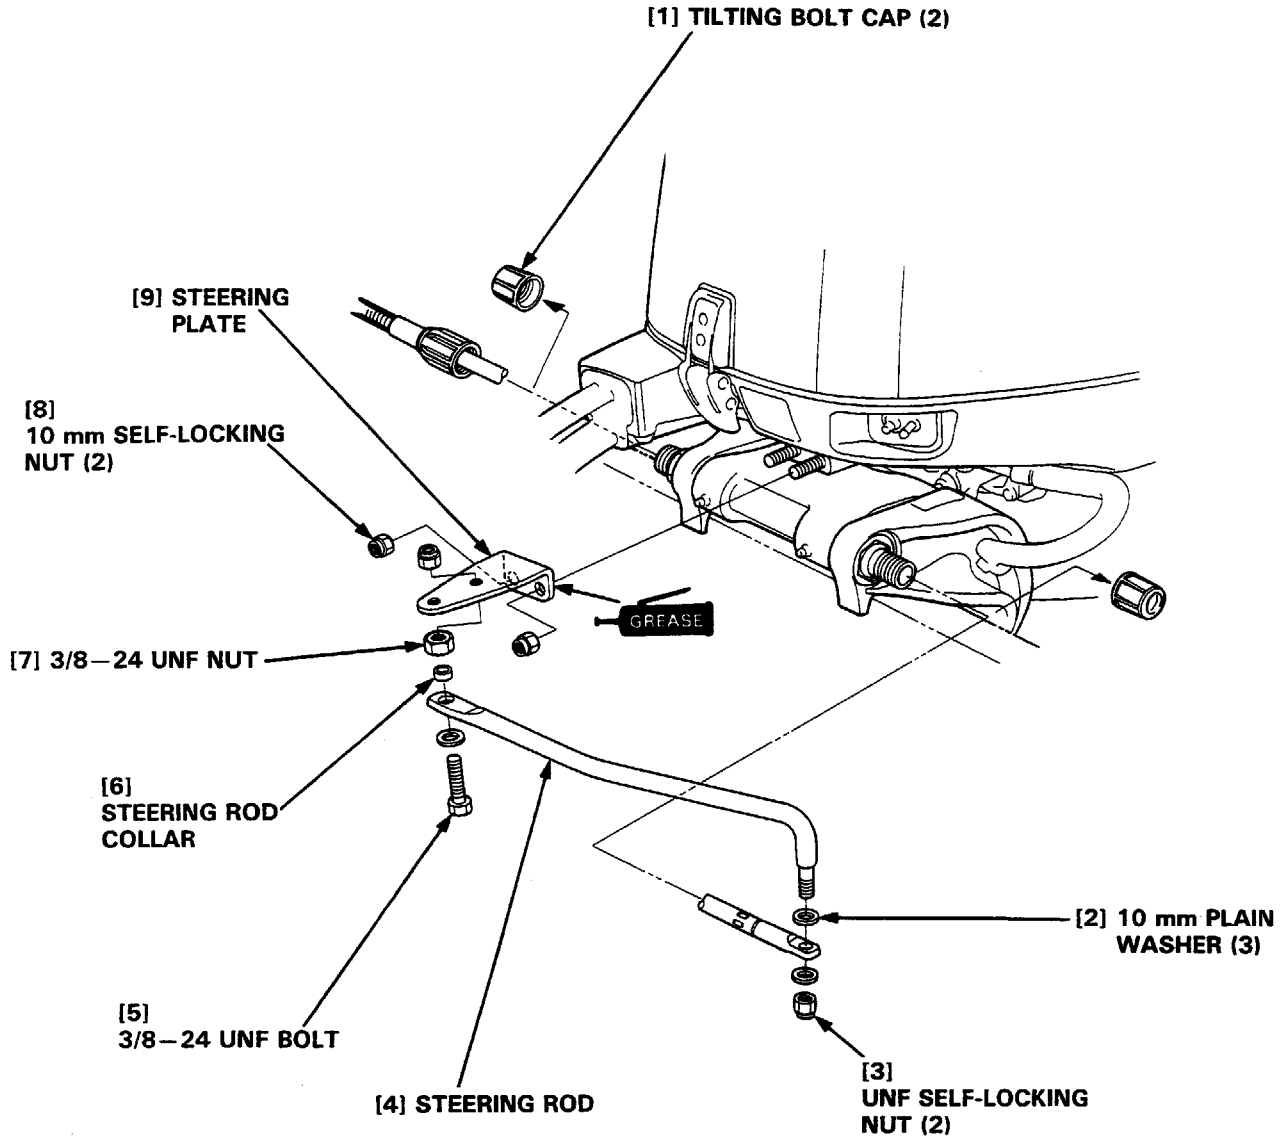

REMOTE CONTROL CABLE

a. DISASSEMBLY/REASSEMBLY


1) Remove the engine cover.

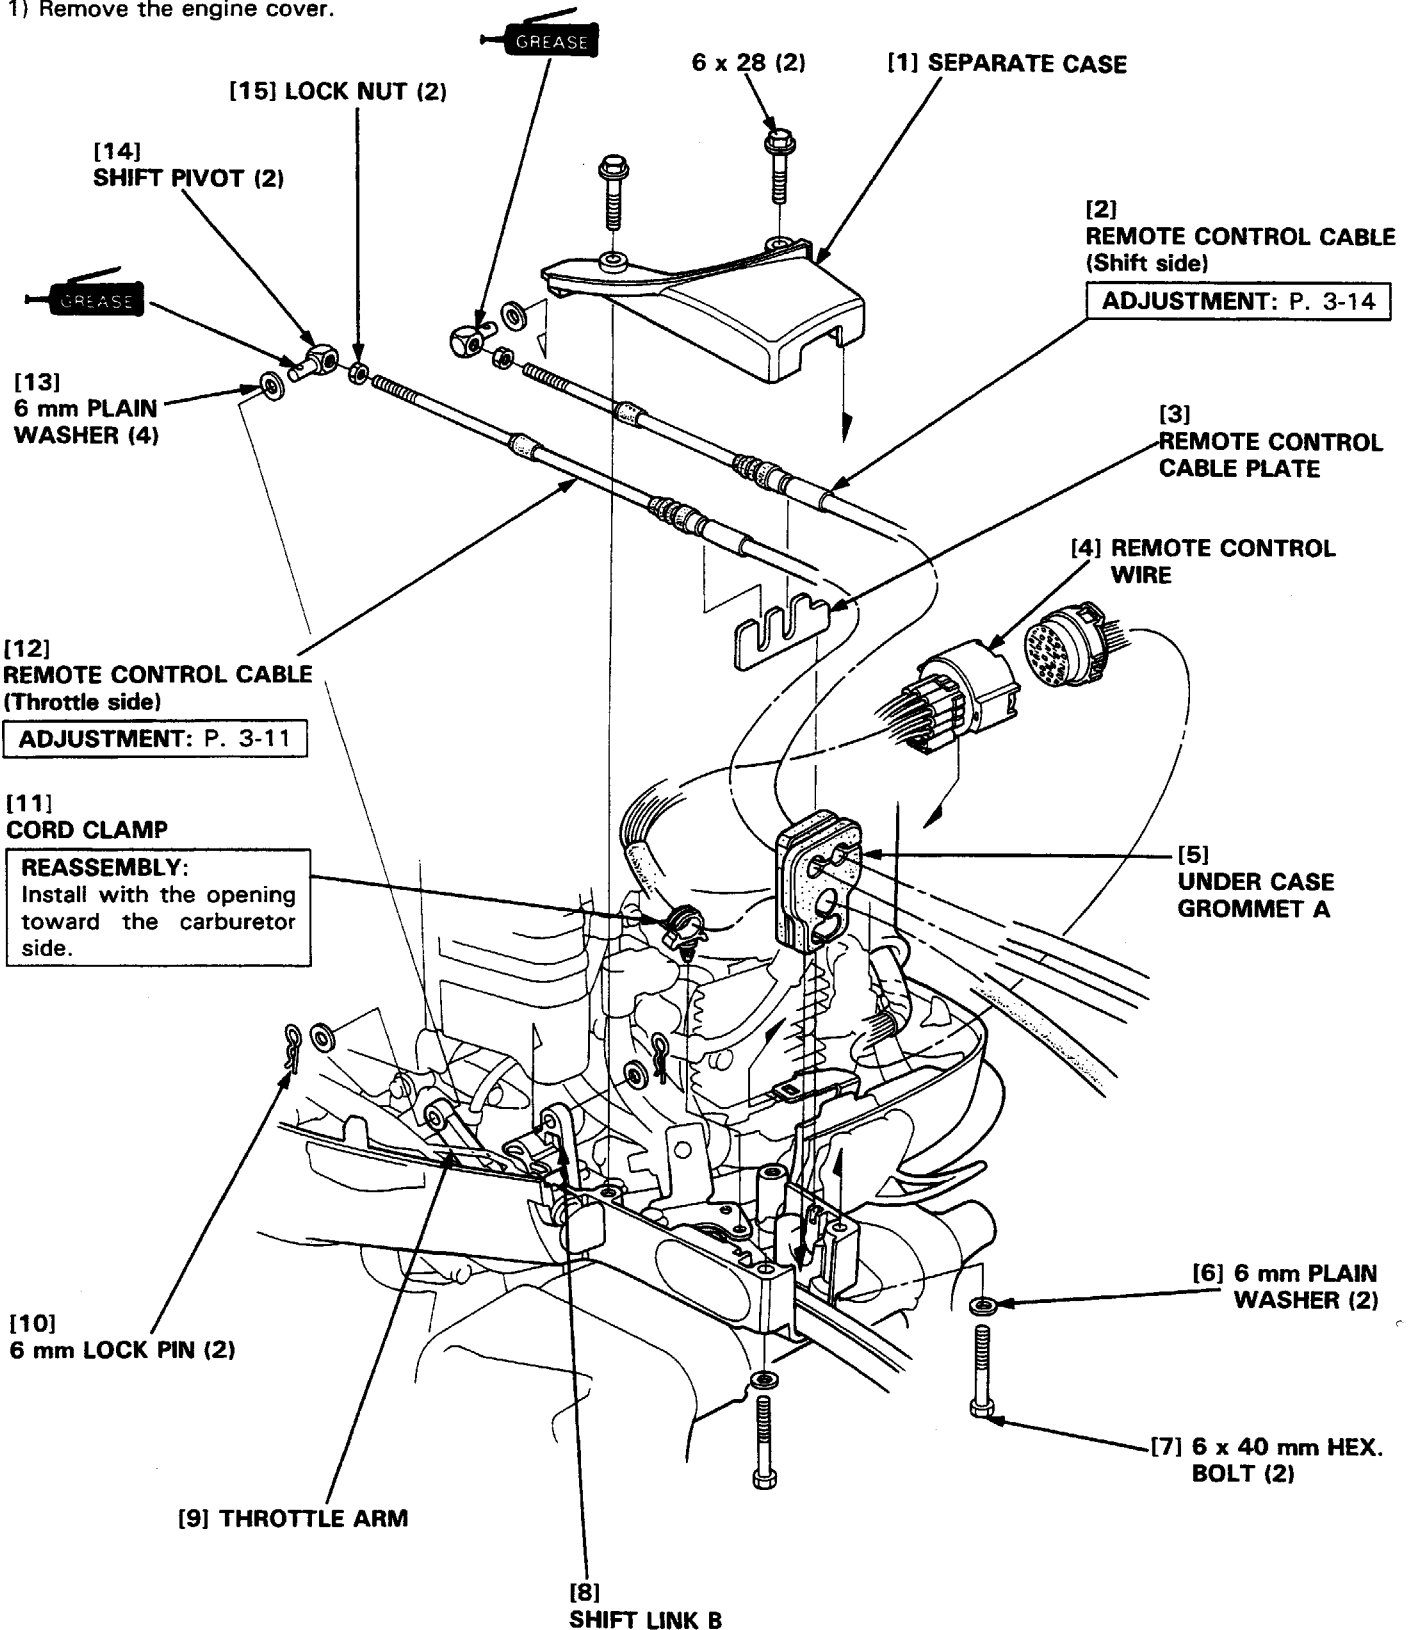


REMOTE CONTROL BOX

a. DISASSEMBLY/REASSEMBLY


• REMOTE CONTROL CABLE

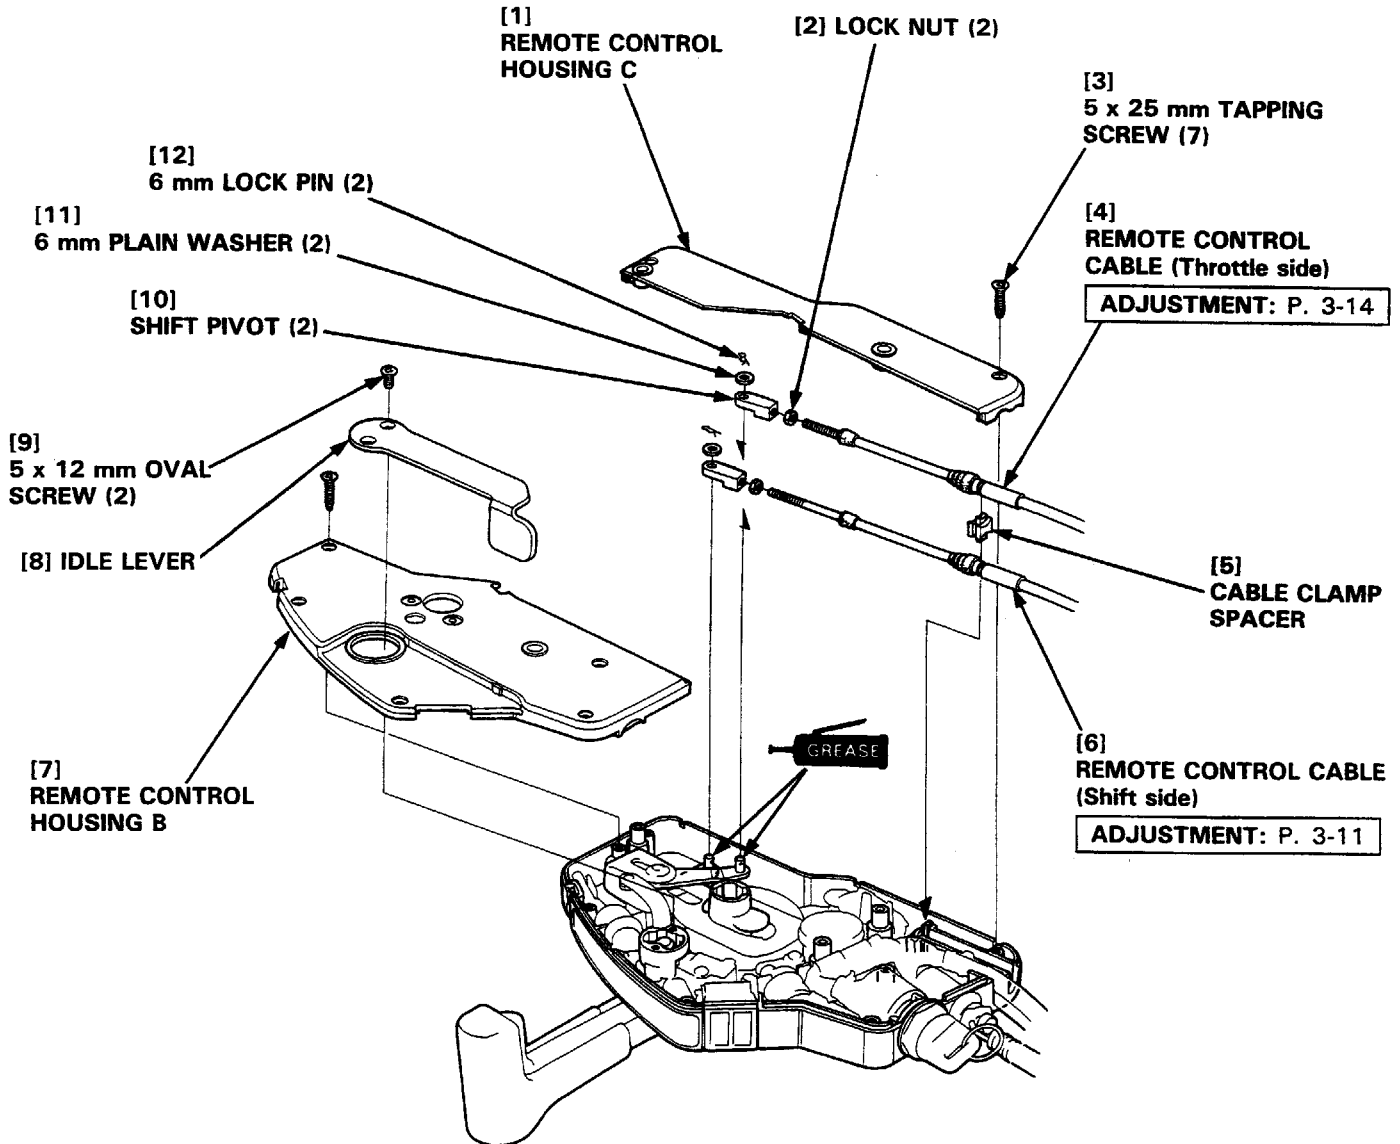

• ELECTRIC COMPONENTS

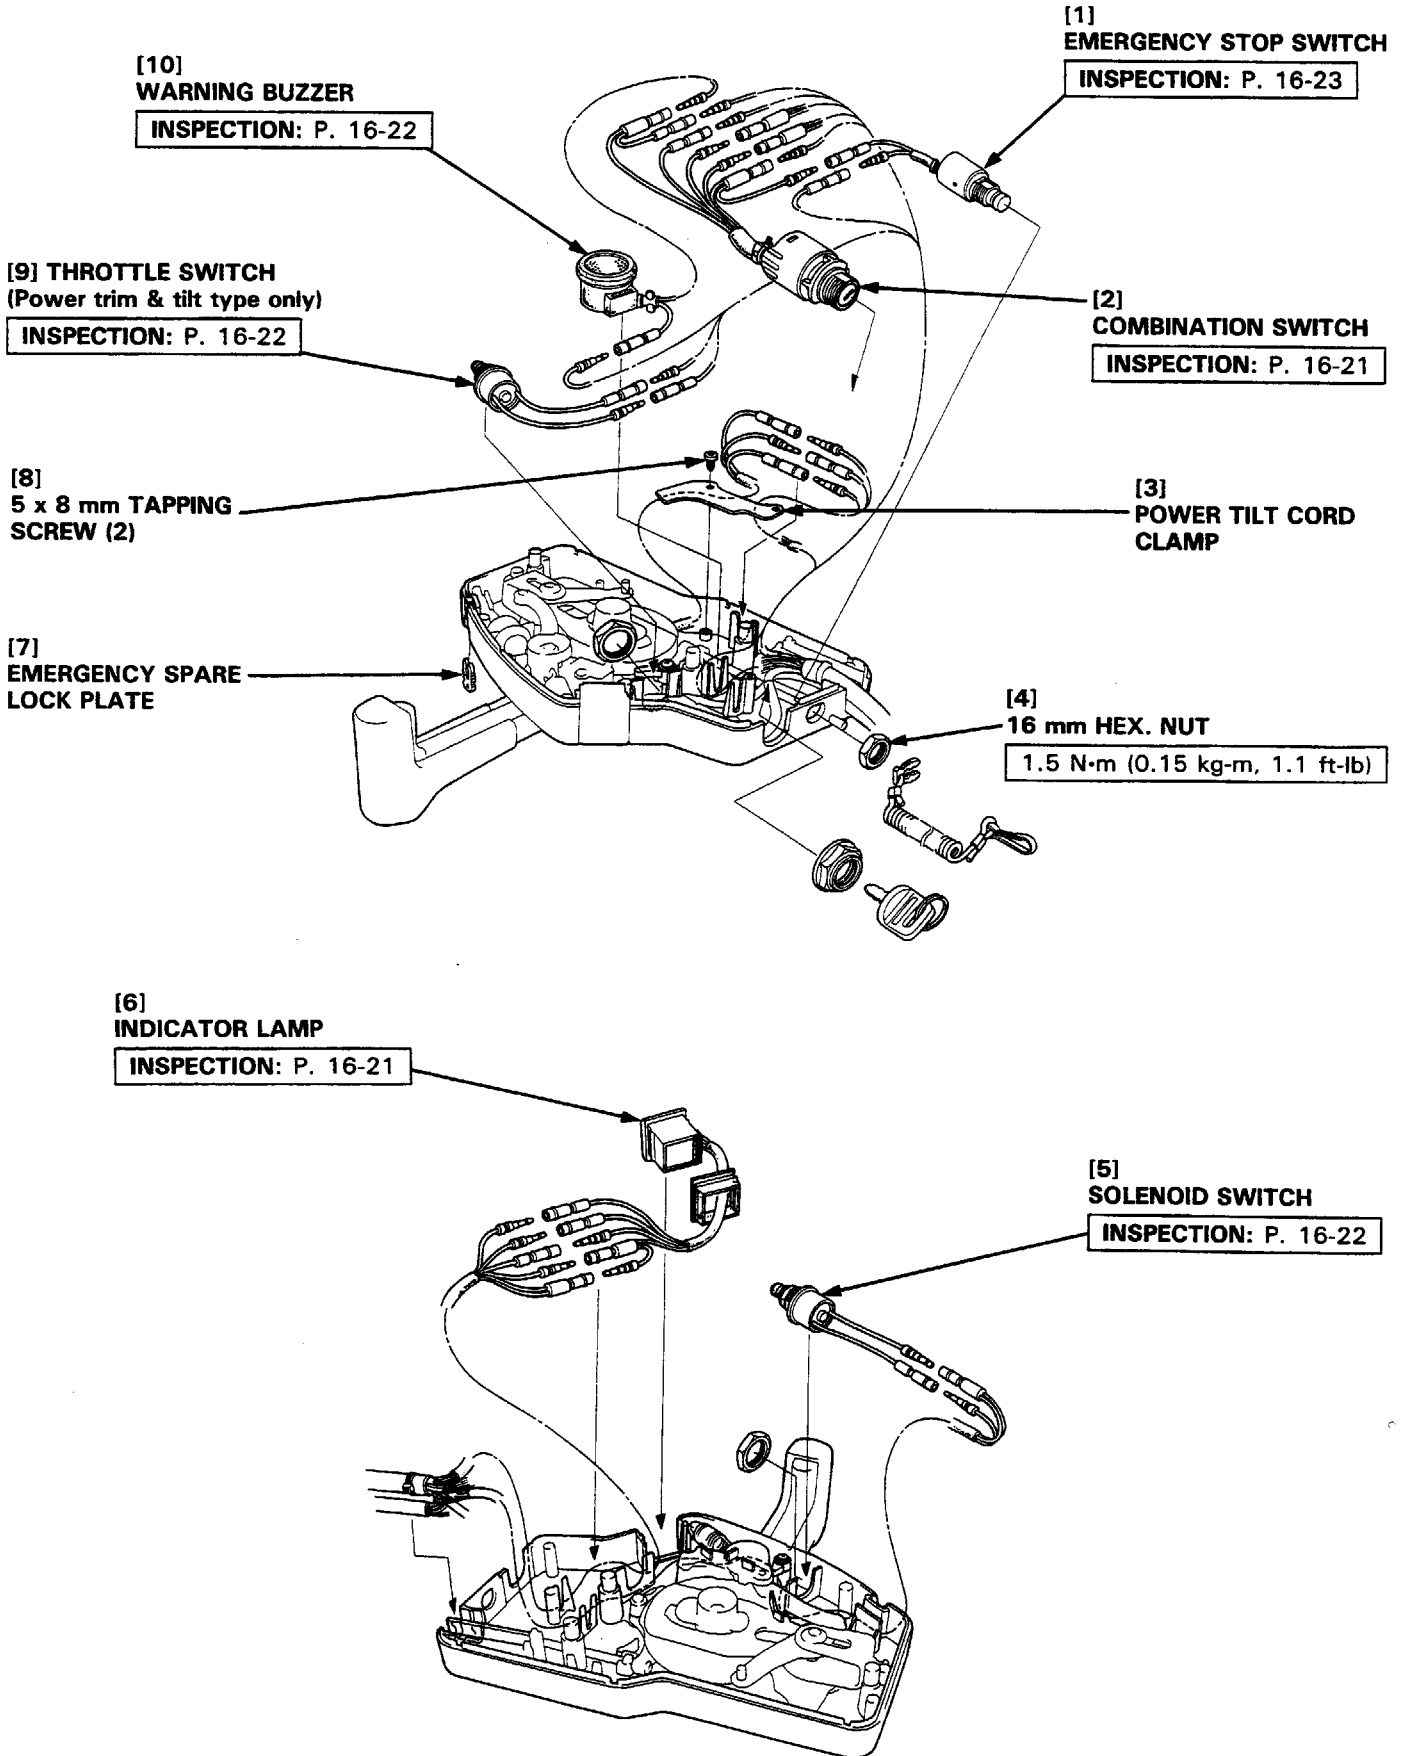


• SLIDING PLATE

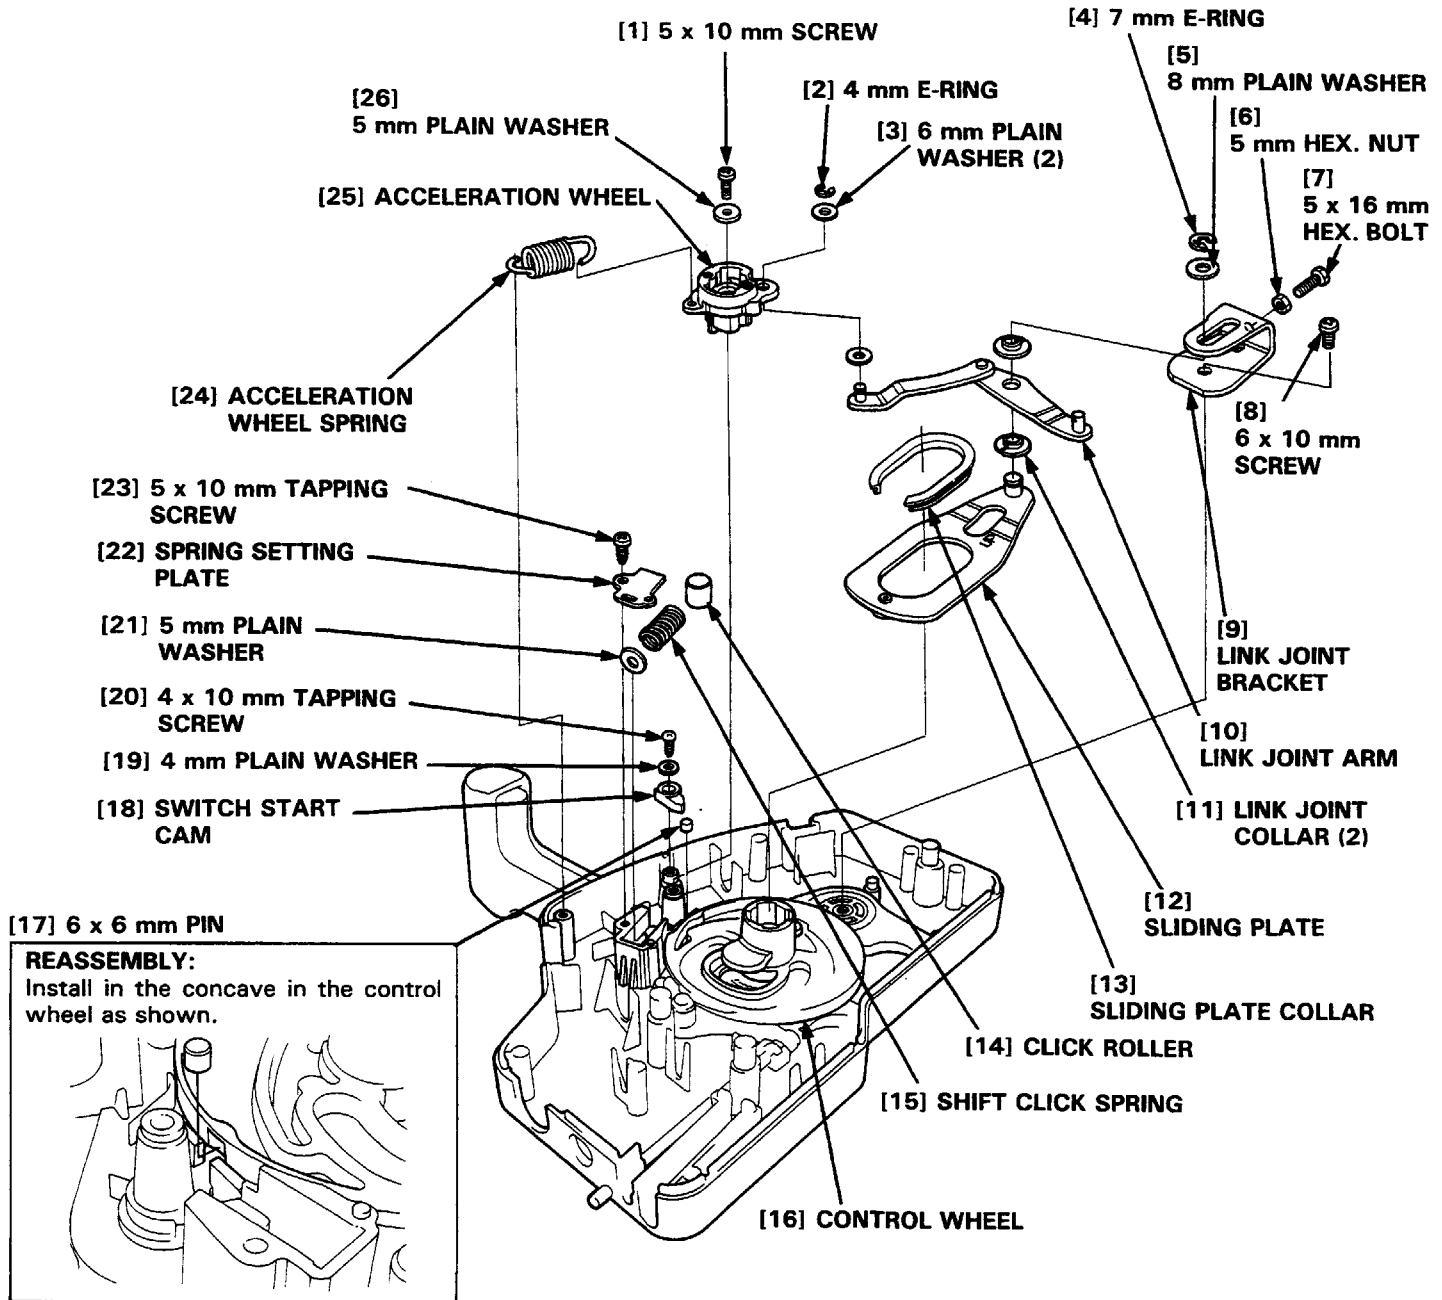


• SLIDING PLATE/COLLAR INSTALLATION


Install the sliding plate with the "UP" mark toward up. Attach the sliding plate collar to the sliding plate with its opening toward the opposite from the "UP" mark side of the sliding plate and the wide lip toward up.

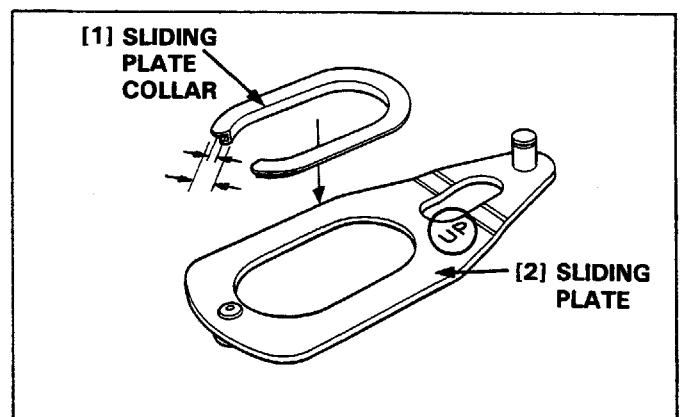

• REMOTE CONTROL HANDLE

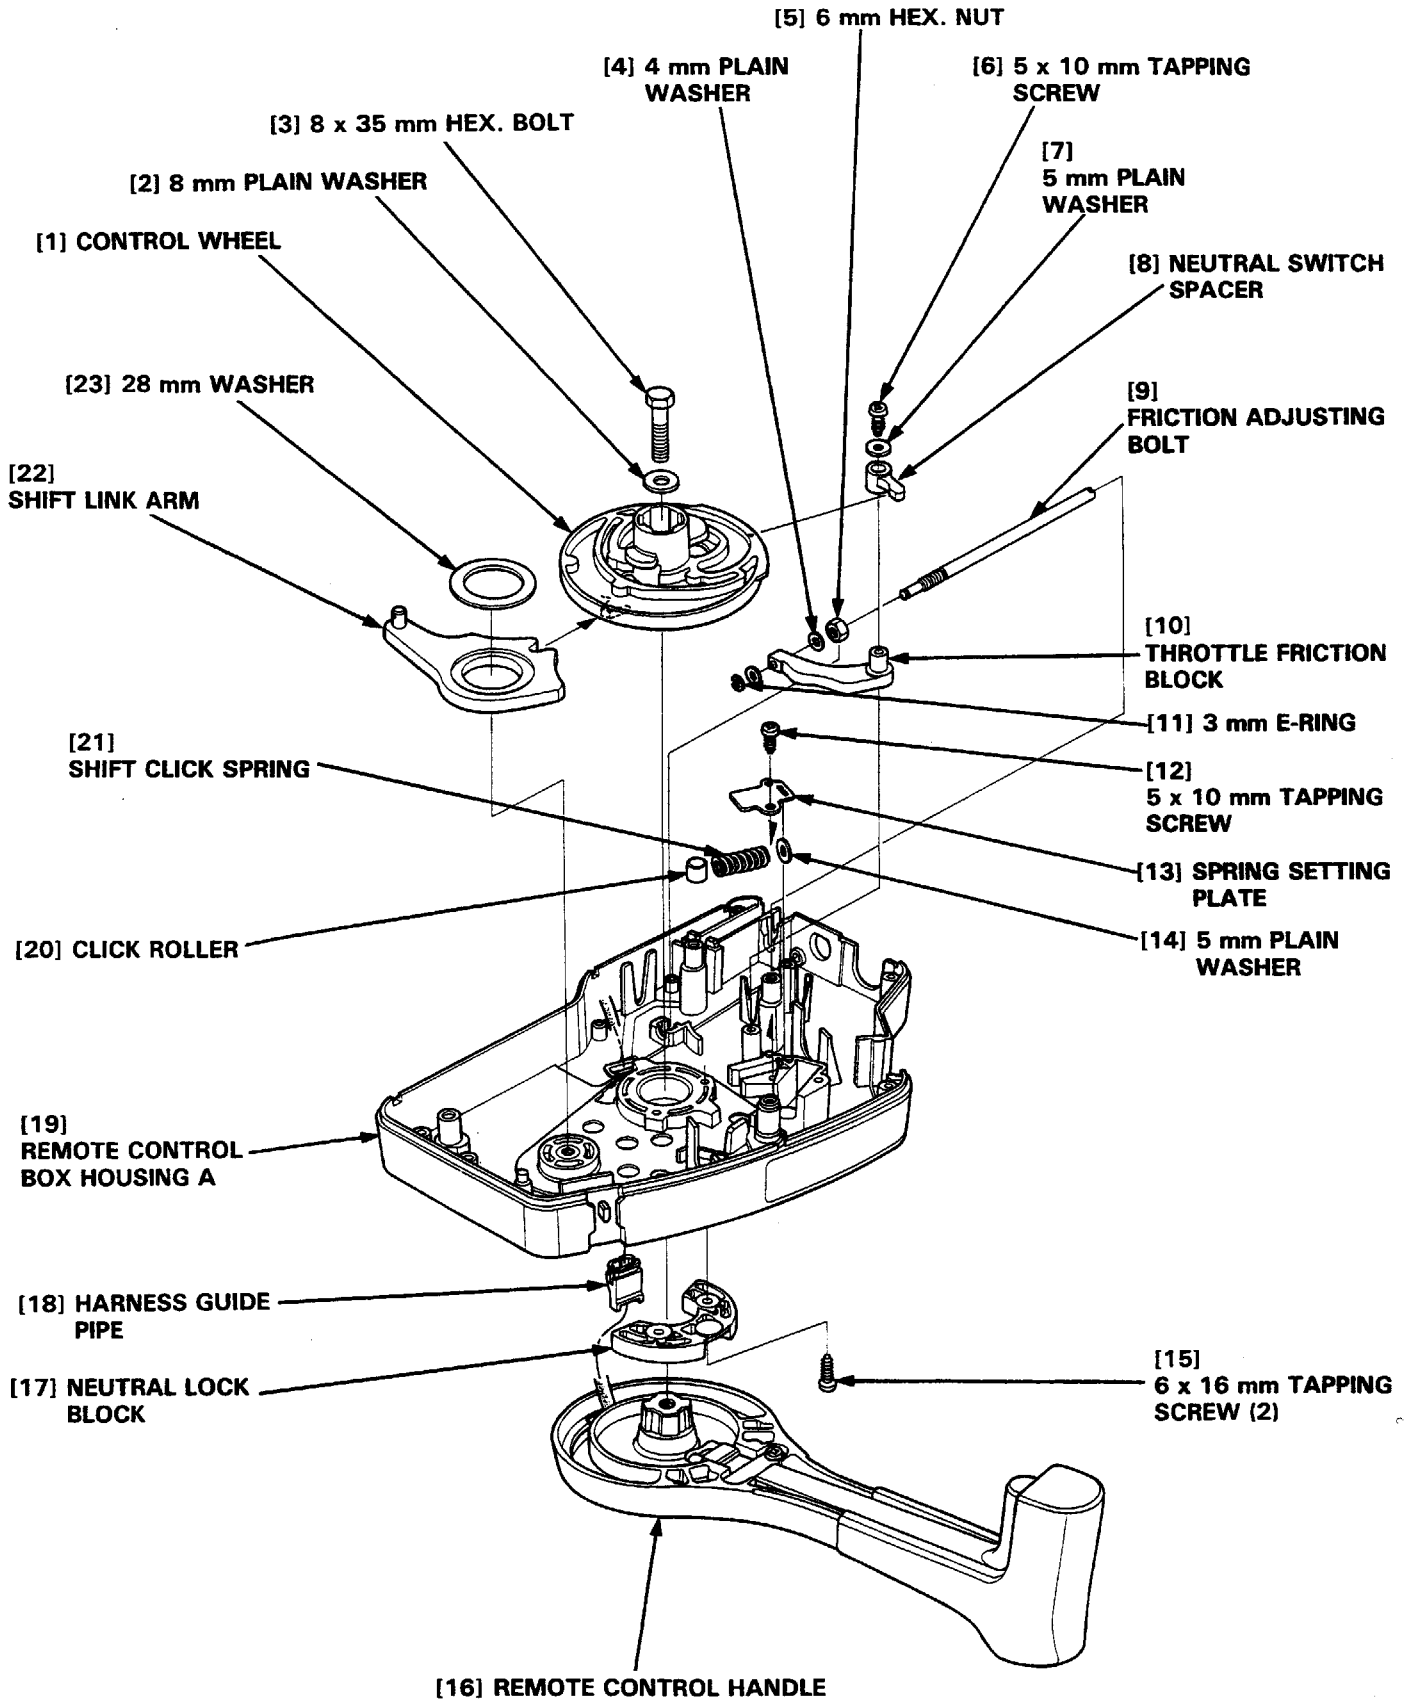


• REMOTE CONTROL HANDLE

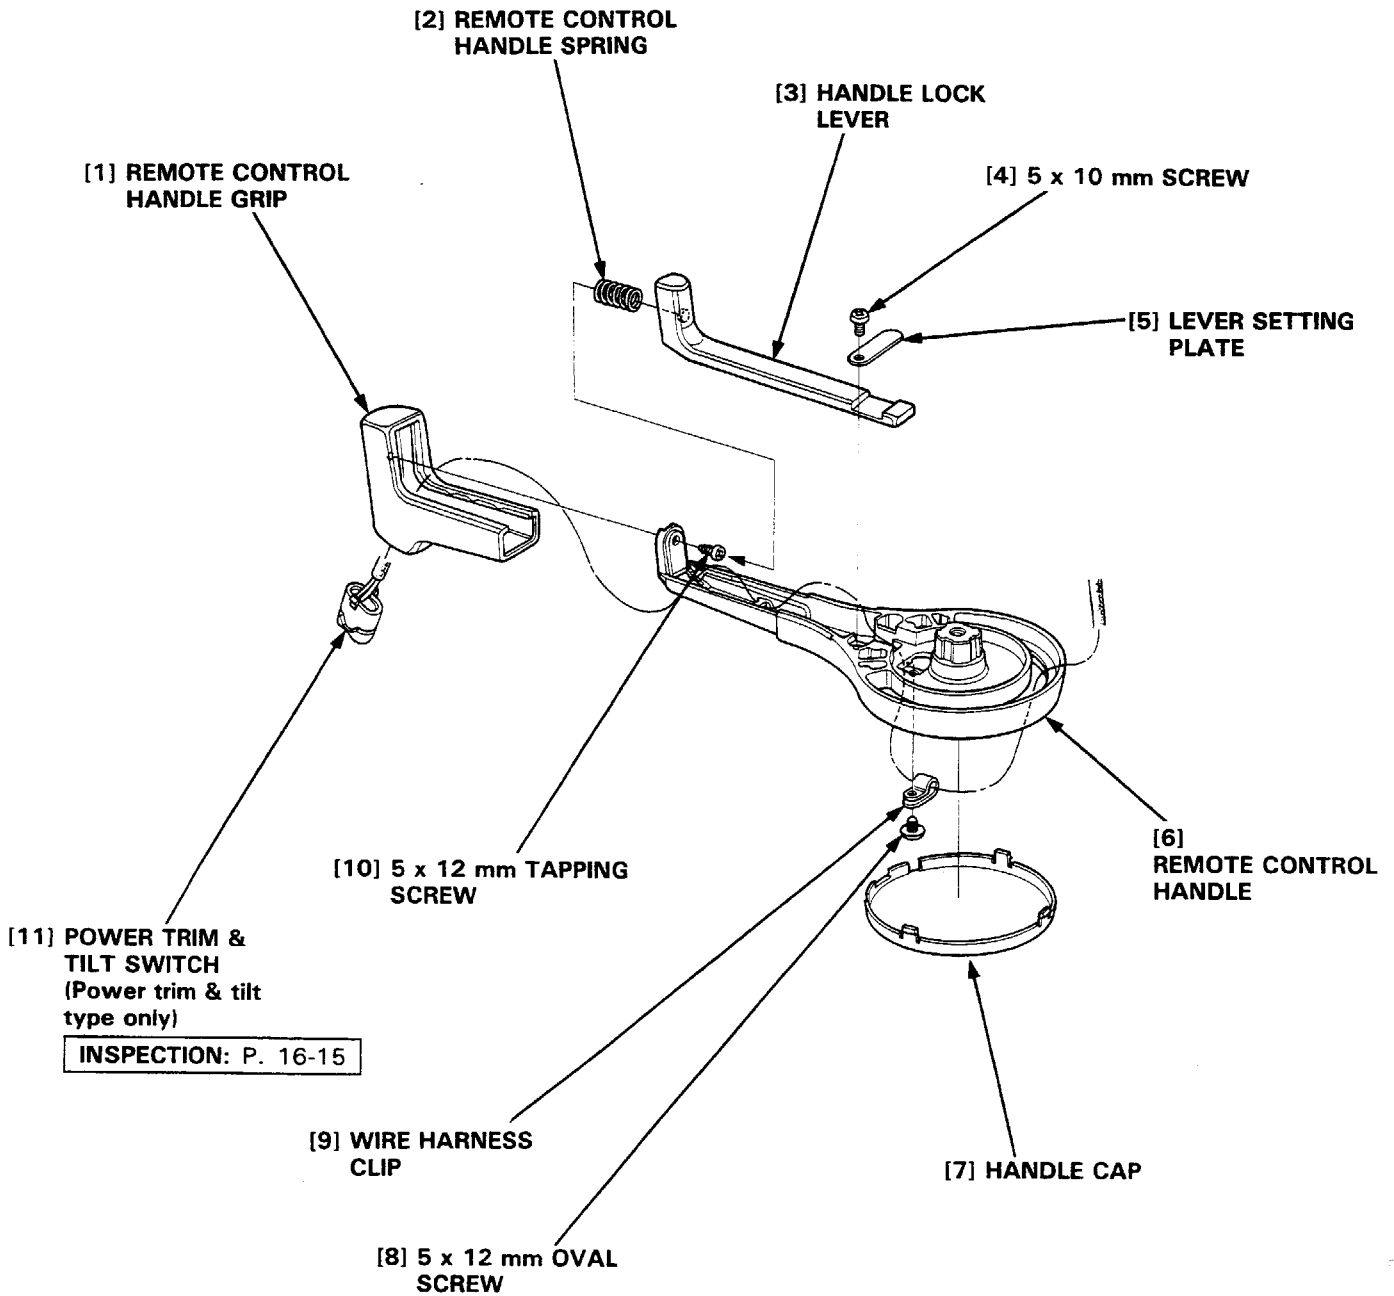


REMOTE CONTROL CABLE INSTALLATION

• REMOTE CONTROL BOX SIDE

1) Remove the two screws and housing C.

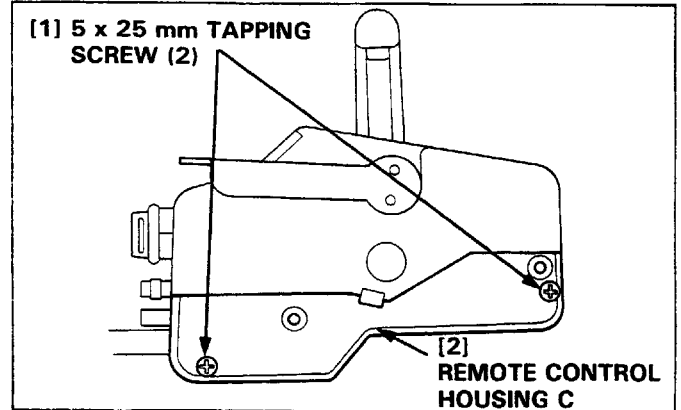

2) Screw the lock nuts and eye ends more than 8 mm (0.3 in) onto the thread of the remote control cable and tighten the lock nut securely to hold the pivot. Apply marine grease to the hole of the eye end.

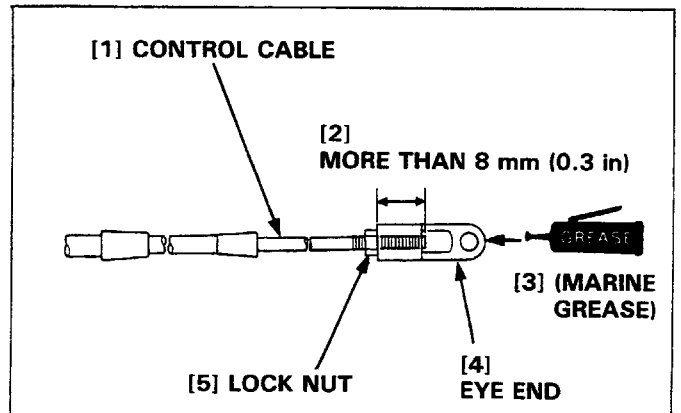

3) Install the shift control cable by aligning the groove of the control cable with the cable guide plate. Then connect the eye end to the shift arm pin using the two washers and 6 mm lock pin.


4) Install the cable clamp spacer and throttle control cable by aligning the groove with the cable guide plate. Then connect the eye end to the throttle arm pin using the two washers and 6 mm lock pin.

NOTE

- Make sure to insert the two washers and secure them with the 6 mm lock pins.

5) Reinstall the housing C and tighten the screws.

TORQUE: 2 N·m (0.2 kg·m, 1.4 ft·lb)

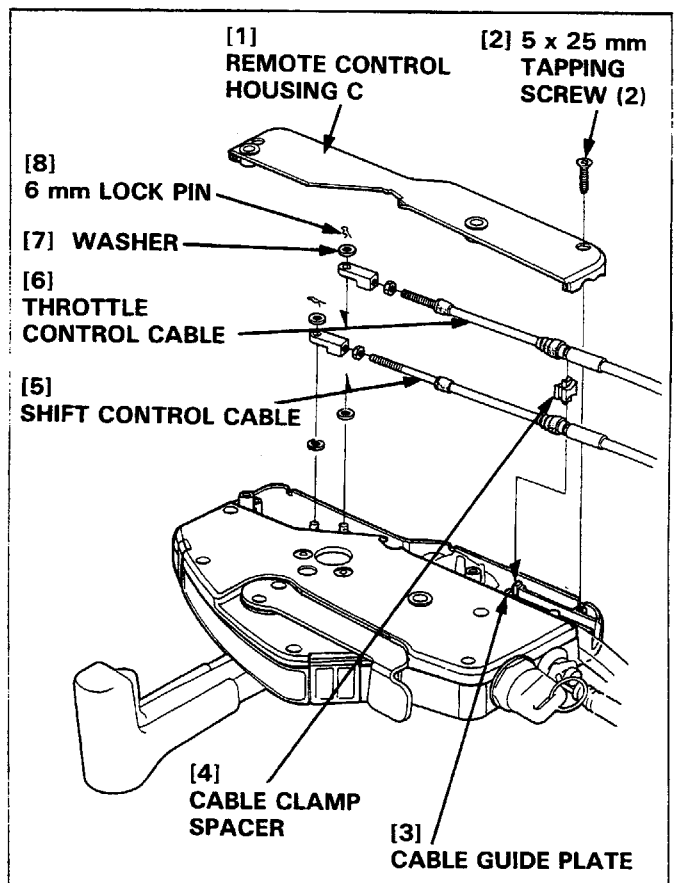


• OUTBOARD MOTOR SIDE


NOTE

- After installing the control cable to the remote control box, install the control cable to the outboard motor.
- Connect the control cable to the outboard motor with the remote control lever in "N" position and free acceleration lever in fully closed position (idle).

1) Remove the engine cover.

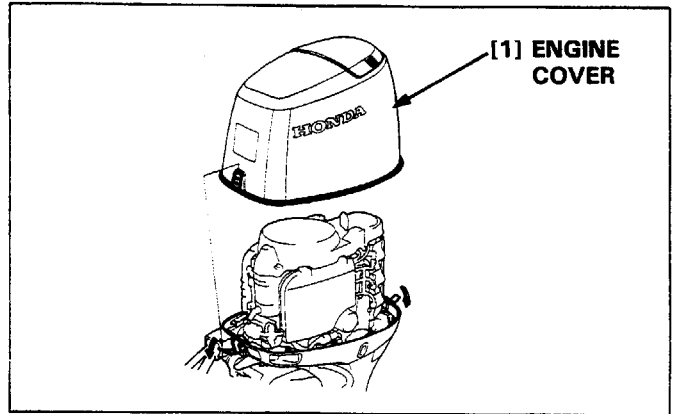


2) Remove the four bolts, two washers, and separate case.

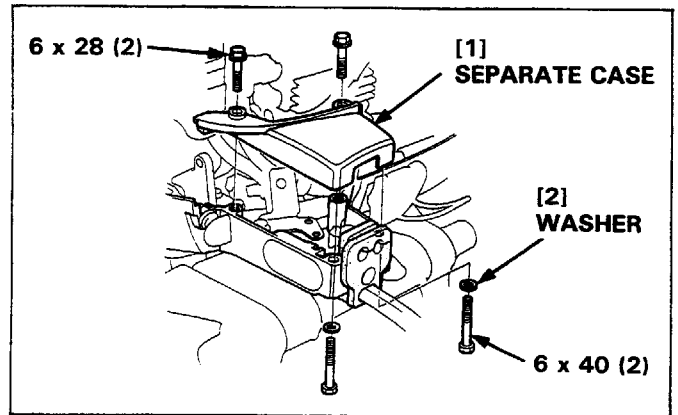


3) Pass the control box wire harness and control cables through the grommet as shown.

4) Attach the cable plate to the control cables by aligning the groove with the cable plate, and then install them to the case.

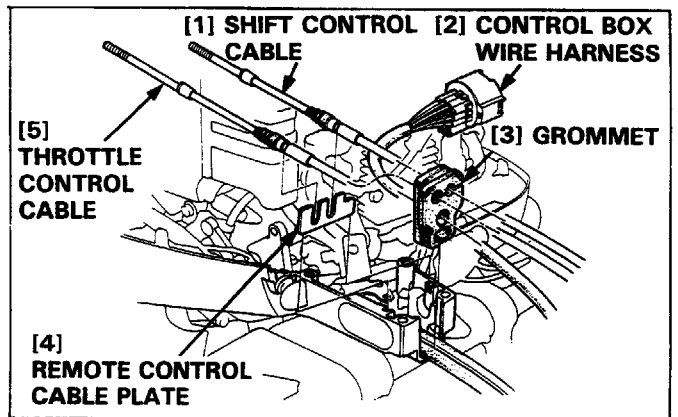

5) Screw the shift pivot onto the threaded portion of the throttle and shift cable as shown.

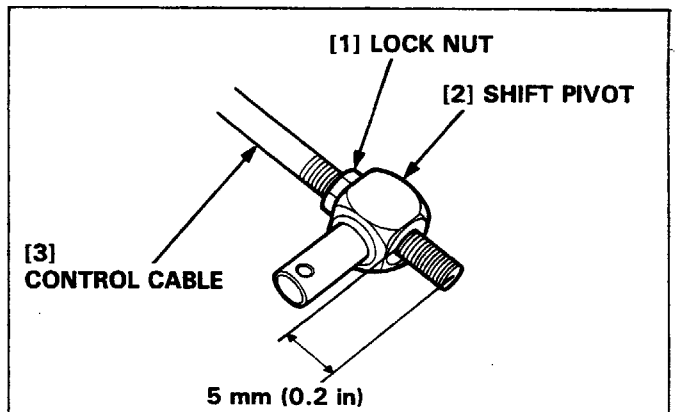


6) Make sure that the shift link on the outboard motor side is in the neutral position (N), and that the control lever at the remote control box side is in the neutral position (N).

7) Apply marine grease to the pins of the shift pivot.

8) Connect the control cables to the shift link and throttle arm using 6 mm washers and lock pins as shown. Tighten the lock nuts securely.

NOTE


- Use the 6 mm washers on both side of the arm as shown.
- If the holes in the shift link and the pivot pin do not align, adjust by turning the shift pivot in or out, as required.

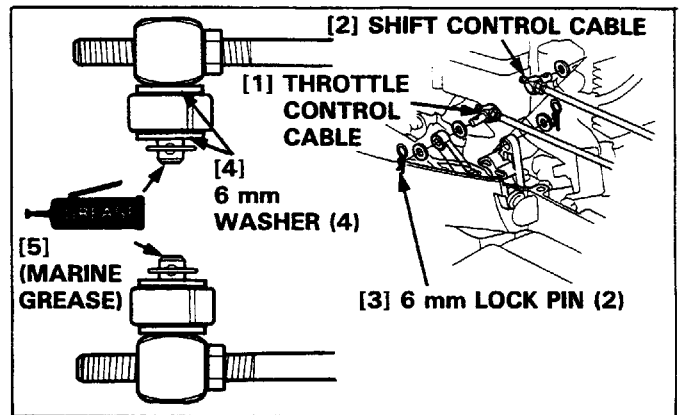

9) Connect the remote control wire harness to the outboard motor side wire harness and set the connector to the holder.

10) Secure the remote control wire harness with the harness clip.

11) Reinstall the separate case and tighten the bolts securely.

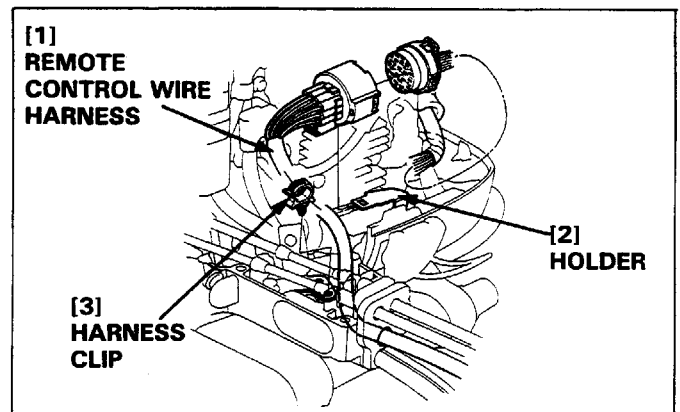

CONTROL CABLE LENGTH ADJUSTMENT

• THROTTLE CONTROL CABLE

1) Disconnect the throttle control cable from the throttle arm.

2) Move the throttle arm to the fully-open position until it touches the stopper and check that the carburetor throttle lever touches the stopper at the fully-open position.



3) If no, disconnect the throttle rod from the throttle cam, loosen the lock nut and adjust the rod length by turning the linkage pivot.

4) After adjustment tighten the lock nut securely and connect the throttle rod to the throttle cam.

5) Reconnect the throttle control cable to the throttle arm and set to remote control lever to the "N" position.

6) Check that the center of the pivot roller aligns with the index marks on the throttle cam.

7) If no, disconnect the throttle control cable, loosen the lock nut and turn the pivot shaft.

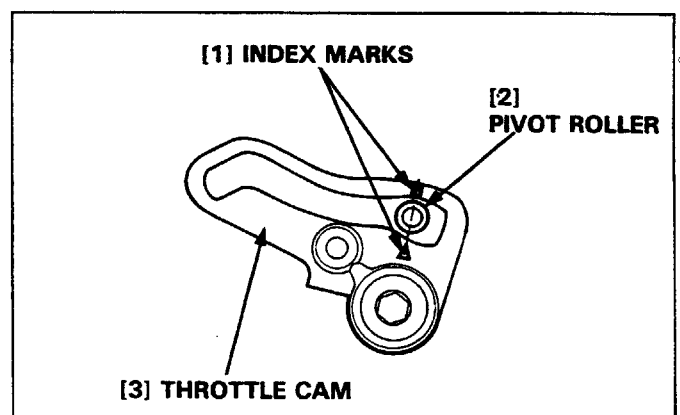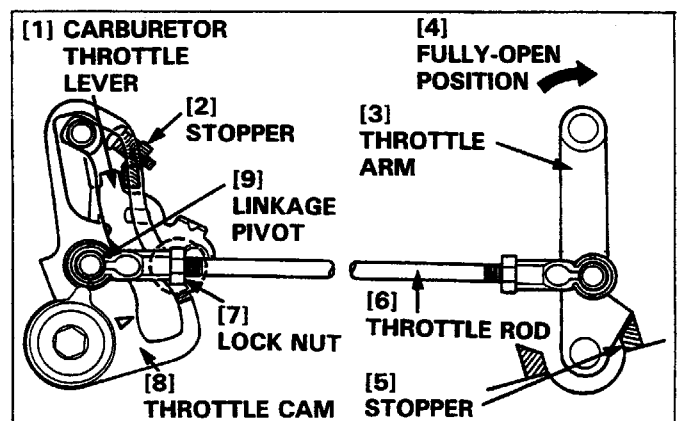


8) After adjustment tighten the lock nut securely and reconnect the throttle control cable.

9) Move the remote control lever and check that control lever moves smoothly and that the carburetor throttle lever moves smoothly without binding from the fully-open to the fully-closed position.

• SHIFT CONTROL CABLE


1) Disconnect the shift control cable from the shift arm. Set the shift in "R" and visually inspect that the click roller is in the center of the groove on the shift link B at the (R) mark.

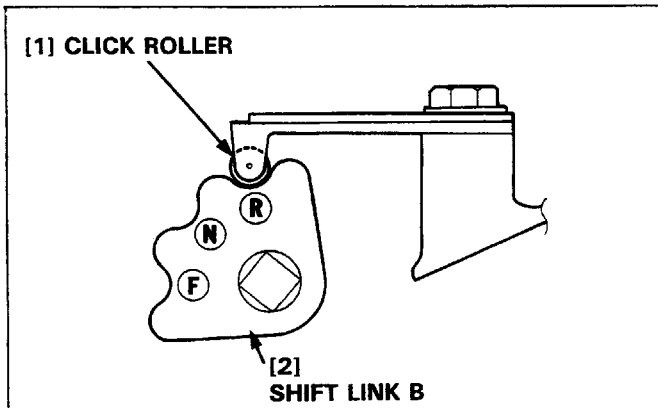

2) If no, loosen the lock nut and turn the adjusting nut, separate the shift rods A and B.

3) Push the shift rod B to its lowest position. Turn the lock nut until the distance from top of the shift rod B is 8 mm (0.3 in) and then turn the adjusting nut of shift rod B in as required.

4) Tighten the lock nut securely.

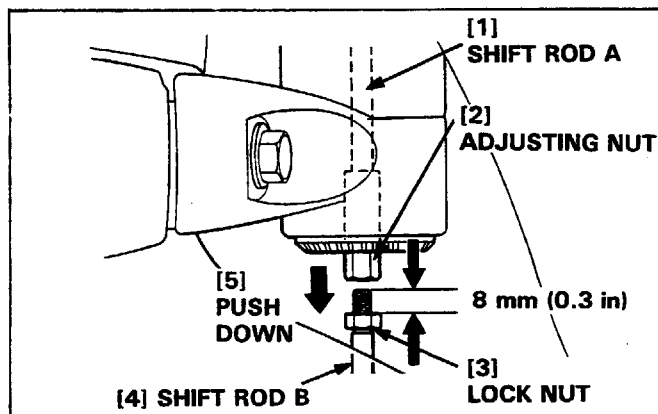


5) Reconnect the shift control cable and set the remote control lever to the neutral position (N).

6) Check that the click roller sits in the (N) groove of the shift link B.

7) If no, disconnect the shift pivot, loosen the lock nut, and turn the shift pivot as required.

8) Tighten the lock nut securely and reconnect the shift pivot.

9) After the adjustment ensure that the shift lever operates correctly.

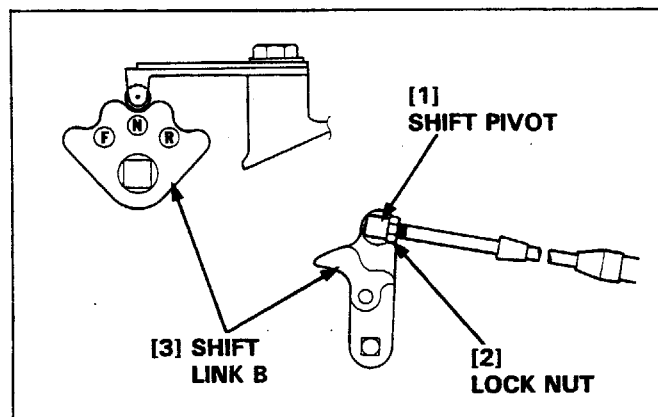

10) Reinstall the outboard motor cover.


THROTTLE BRACKET/SHIFT LEVER/HANDLEBAR (TILLER HANDLE TYPE ONLY)

THROTTLE BRACKET	15-2
SHIFT LEVER	15-4
HANDLEBAR	15-5

THROTTLE BRACKET

a. DISASSEMBLY/REASSEMBLY


1) Remove the engine cover (P. 4-2).

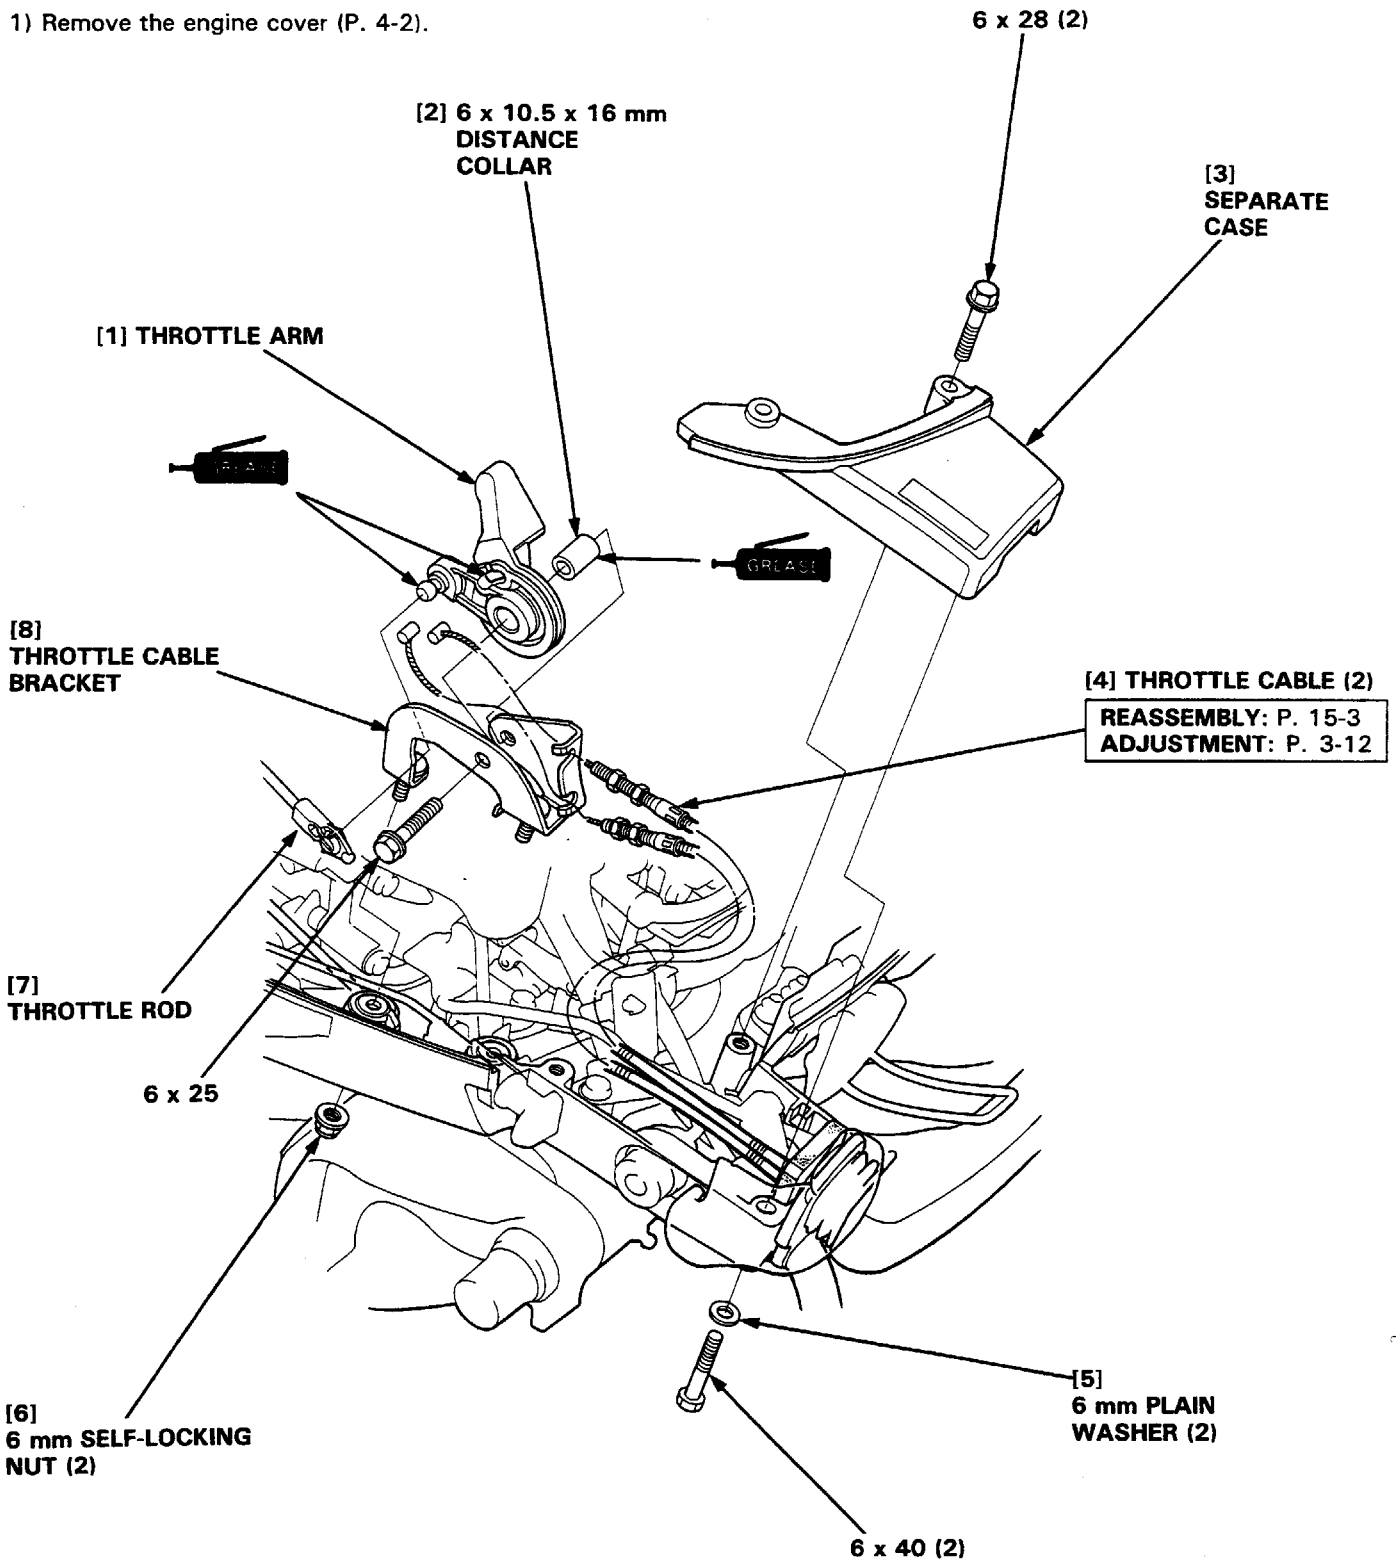

• THROTTLE CABLE

REASSEMBLY:


- 1) Turn the throttle grip to the full open position, then back it off 3 mm (0.1 in) from the fully open position and tighten the friction bolt.

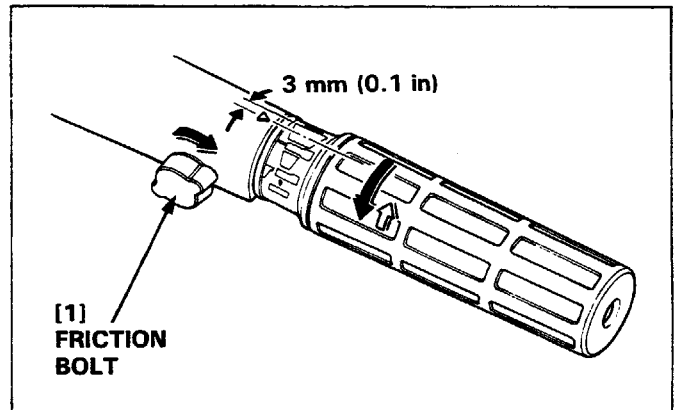

- 2) Adjust the closed side and open side of the throttle cables to the length shown in the drawing.

NOTE

- Before adjusting the throttle cable length, be sure that the throttle cables are connected to the outboard motor securely (page 15-6).

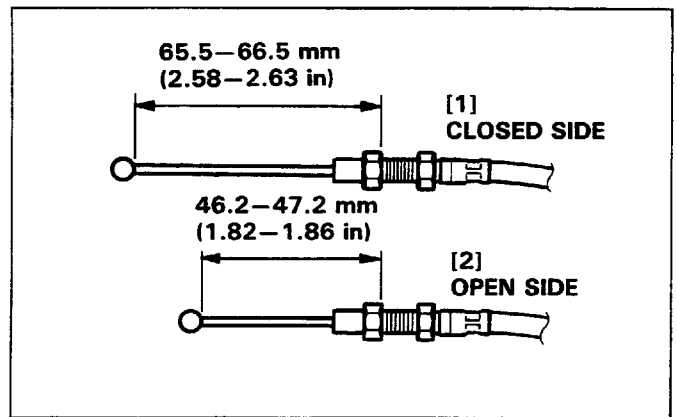


- 3) Connect the throttle cables to the throttle arm.
- 4) Connect the throttle cables to the throttle bracket.

NOTE

- Connect the throttle cables to the throttle bracket with care not to change the length of the cables.


- 5) Loosen the friction bolt and install the 6 x 10.5 x 16 mm distance collar on the throttle cam.
- 6) Install the throttle cam on the throttle bracket and tighten the 6 x 25 mm flange bolt.
- 7) Install the throttle bracket on the engine under case and tighten the 6 mm self-locking nuts. Install the throttle rod.
- 8) After installing the throttle bracket, adjust the throttle (P. 3-12).

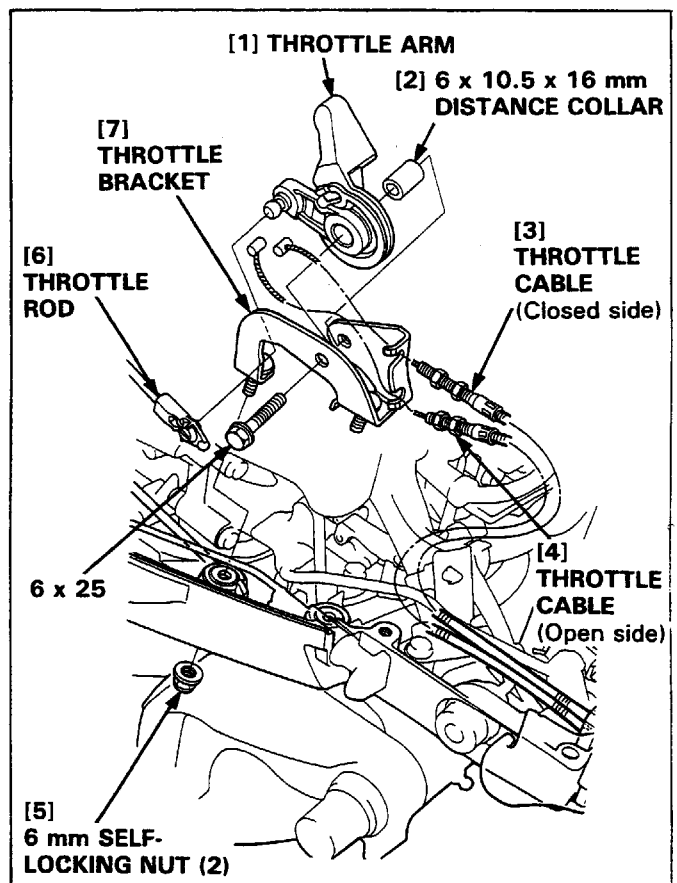

SHIFT LEVER

a. DISASSEMBLY/REASSEMBLY


- 1) Remove the engine cover and separate case (P. 15-2)
- 2) Remove the CDI unit cover and disconnect the starter switch wire connectors.
- 3) Remove the throttle cable bracket (P. 15-2)
- 4) Move the shift lever to the "R" position.

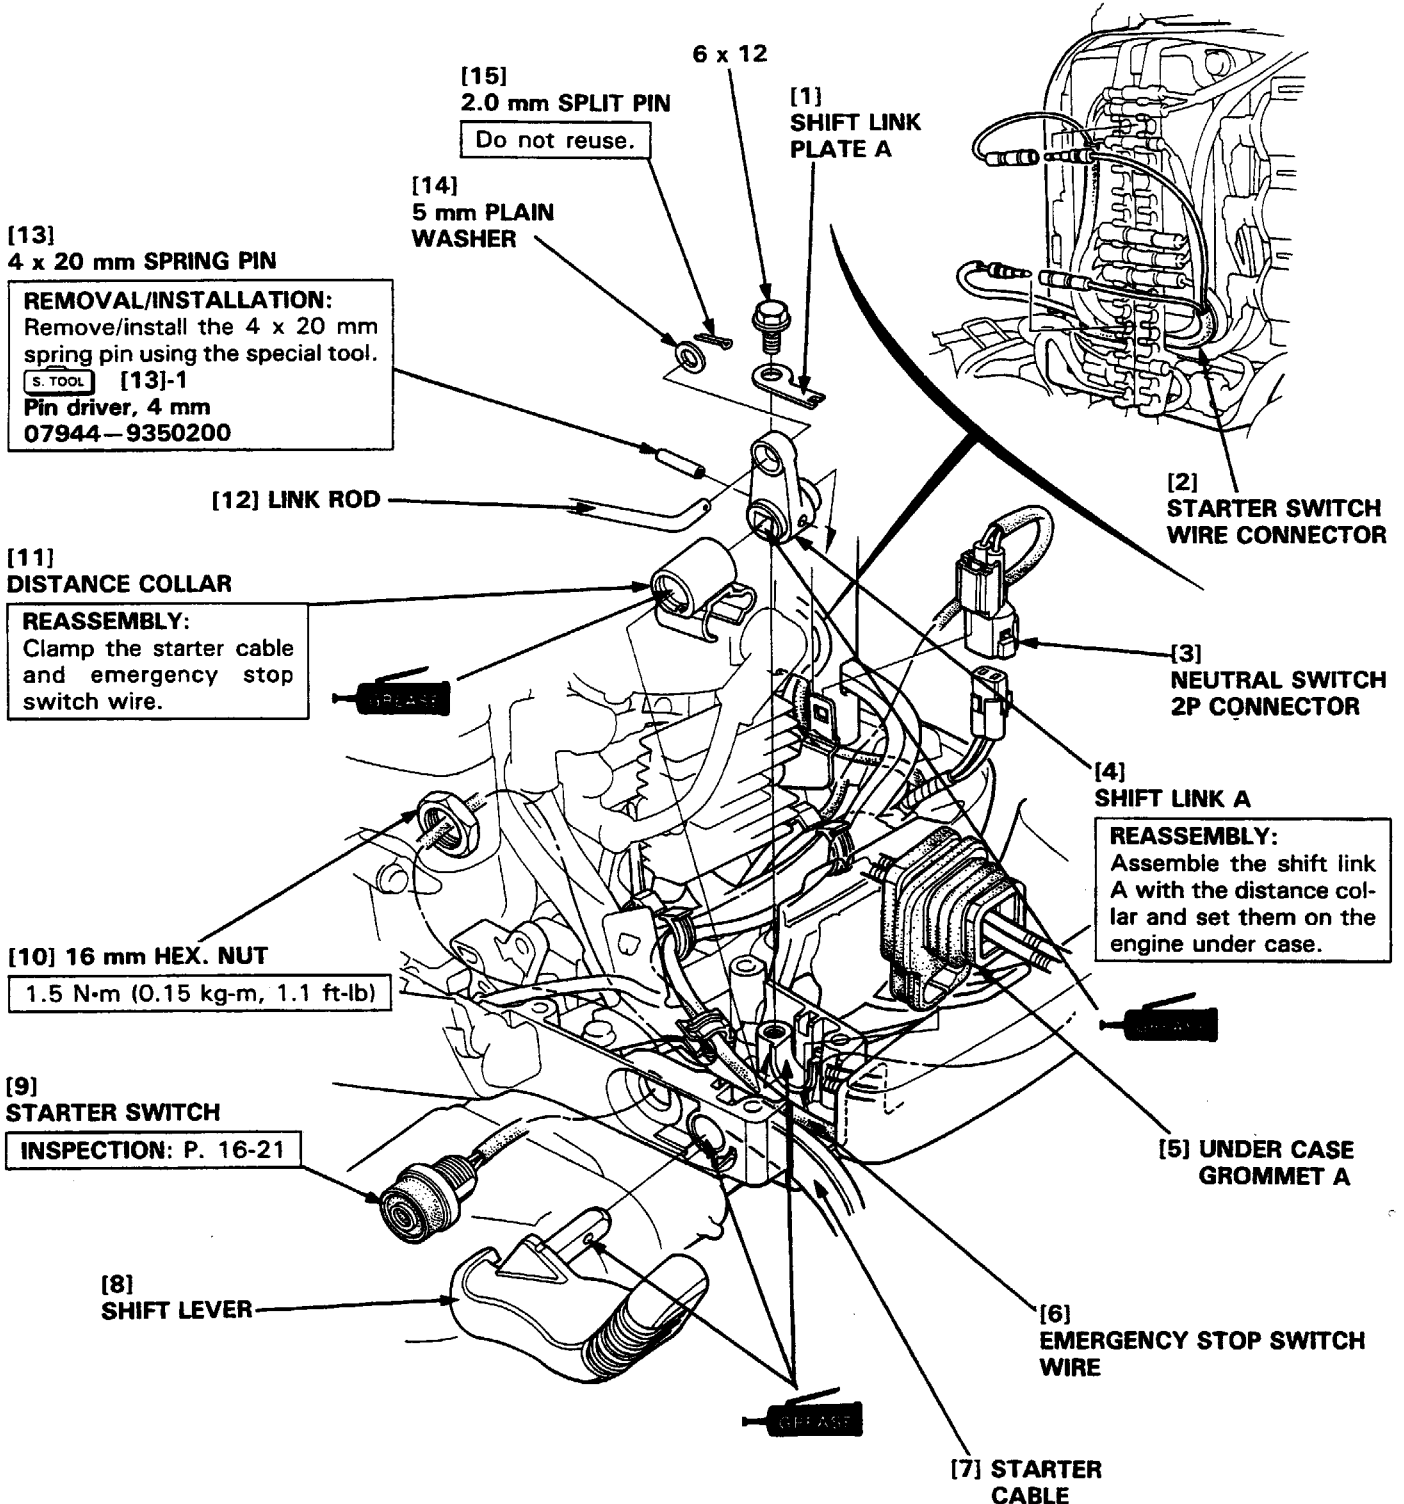

HANDLEBAR

a. DISASSEMBLY/REASSEMBLY

- 1) Remove the shift lever (P. 15-4)
- 2) Disconnect the indicator lamp 4P connector, wire connector and emergency stop switch 2P connector.

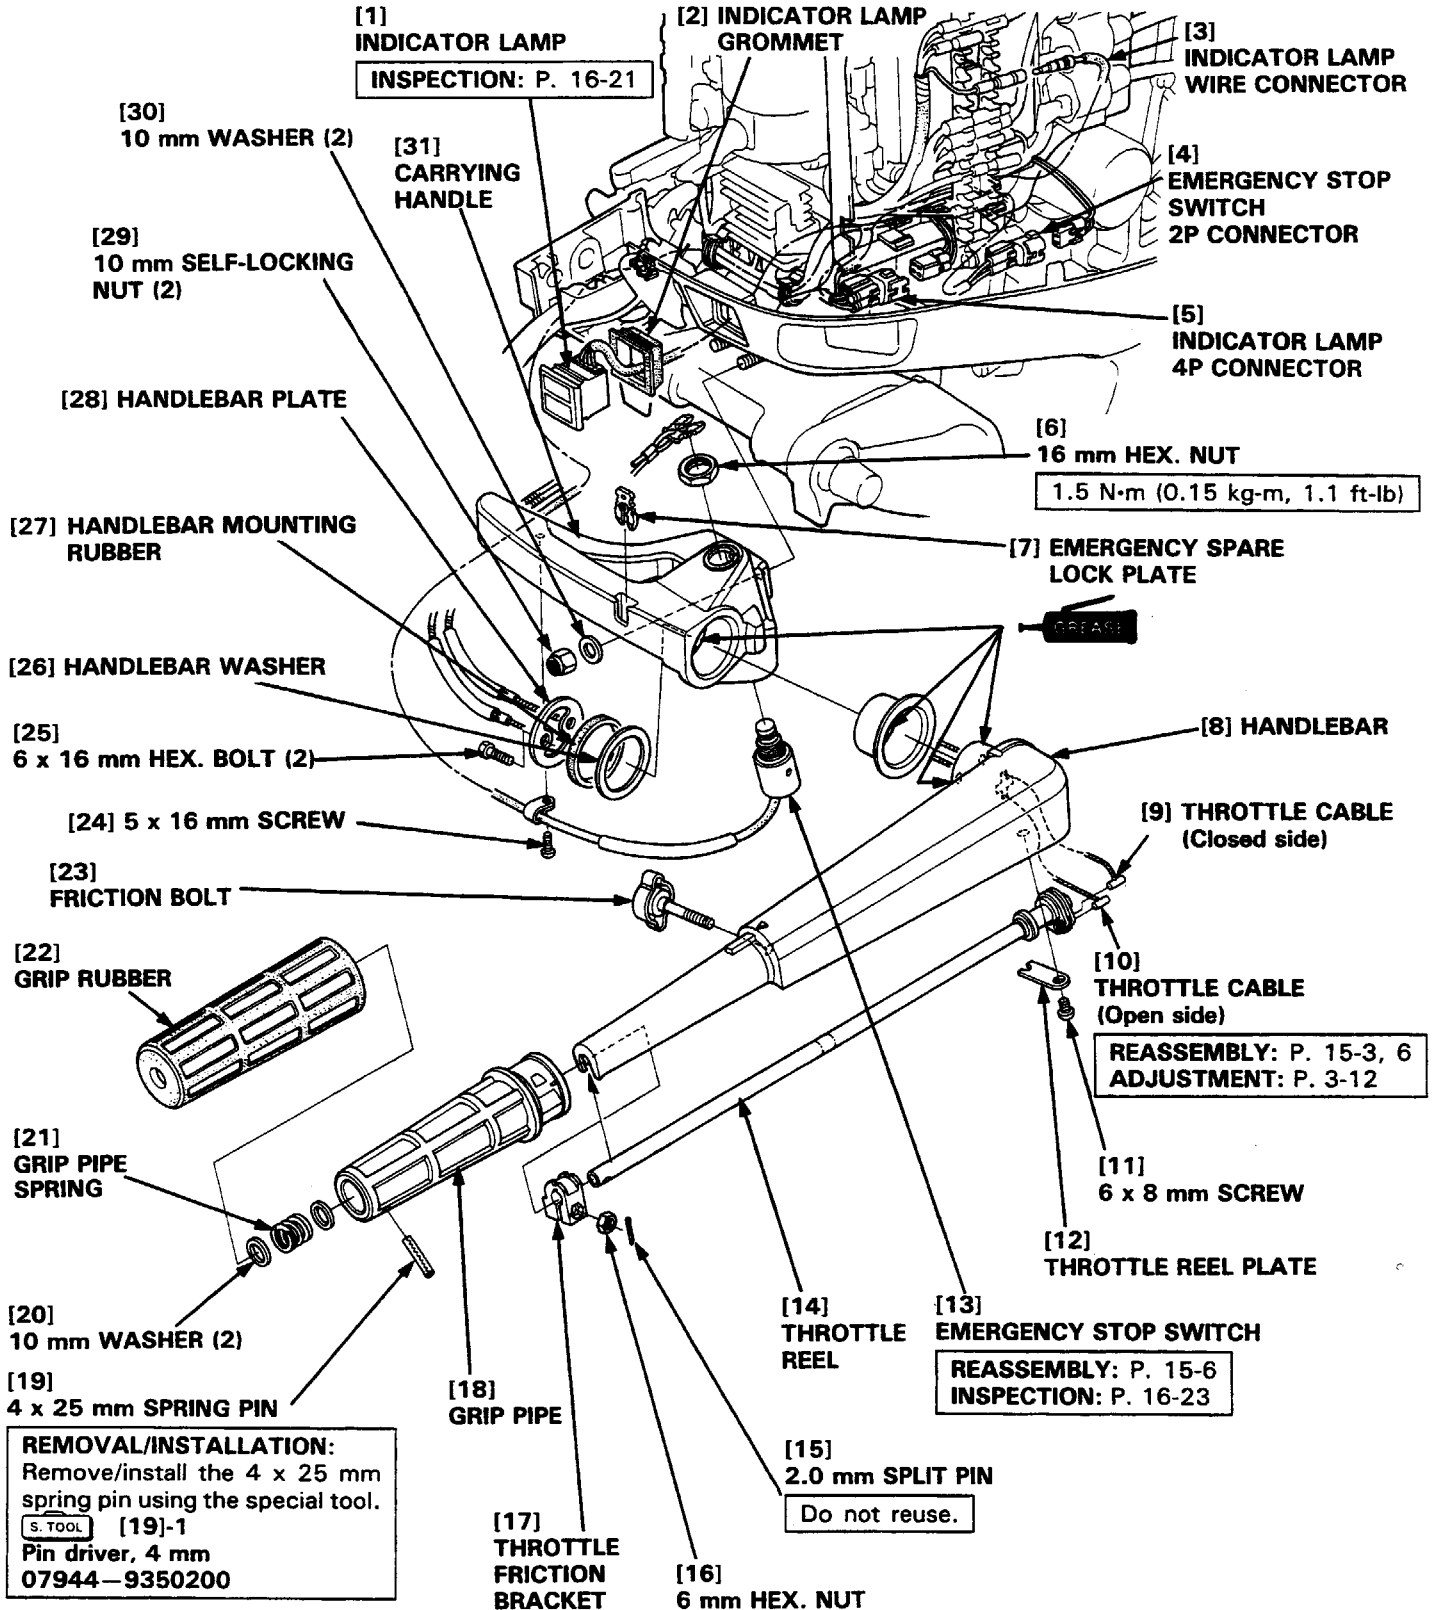

• **EMERGENCY STOP SWITCH/ THROTTLE CABLE**


REASSEMBLY:

Connect the open side and closed side of the throttle cables to the throttle reel as shown.

Route the emergency stop switch wire as shown.

NOTE


- Move the handlebar up and down and be sure that the clearance between the emergency stop switch wire and bolt (A in the drawing) is 1 mm or more.

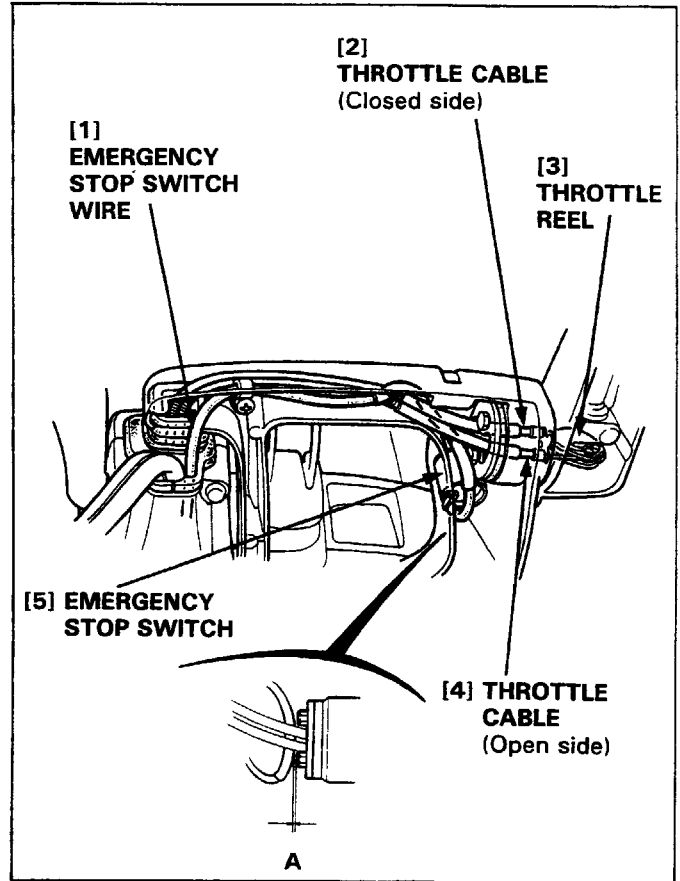


ELECTRICAL EQUIPMENT

COMPONENT LOCATION	16-2
CDI UNIT/IGNITION COIL	16-4
POWER TILT RELAY/TRIM CONTROL UNIT (POWER TRIM & TILT TYPE ONLY)	16-6
STARTER MOTOR	16-7
ELECTRIC PARTS	16-12
INSPECTION	16-13


COMPONENT LOCATION

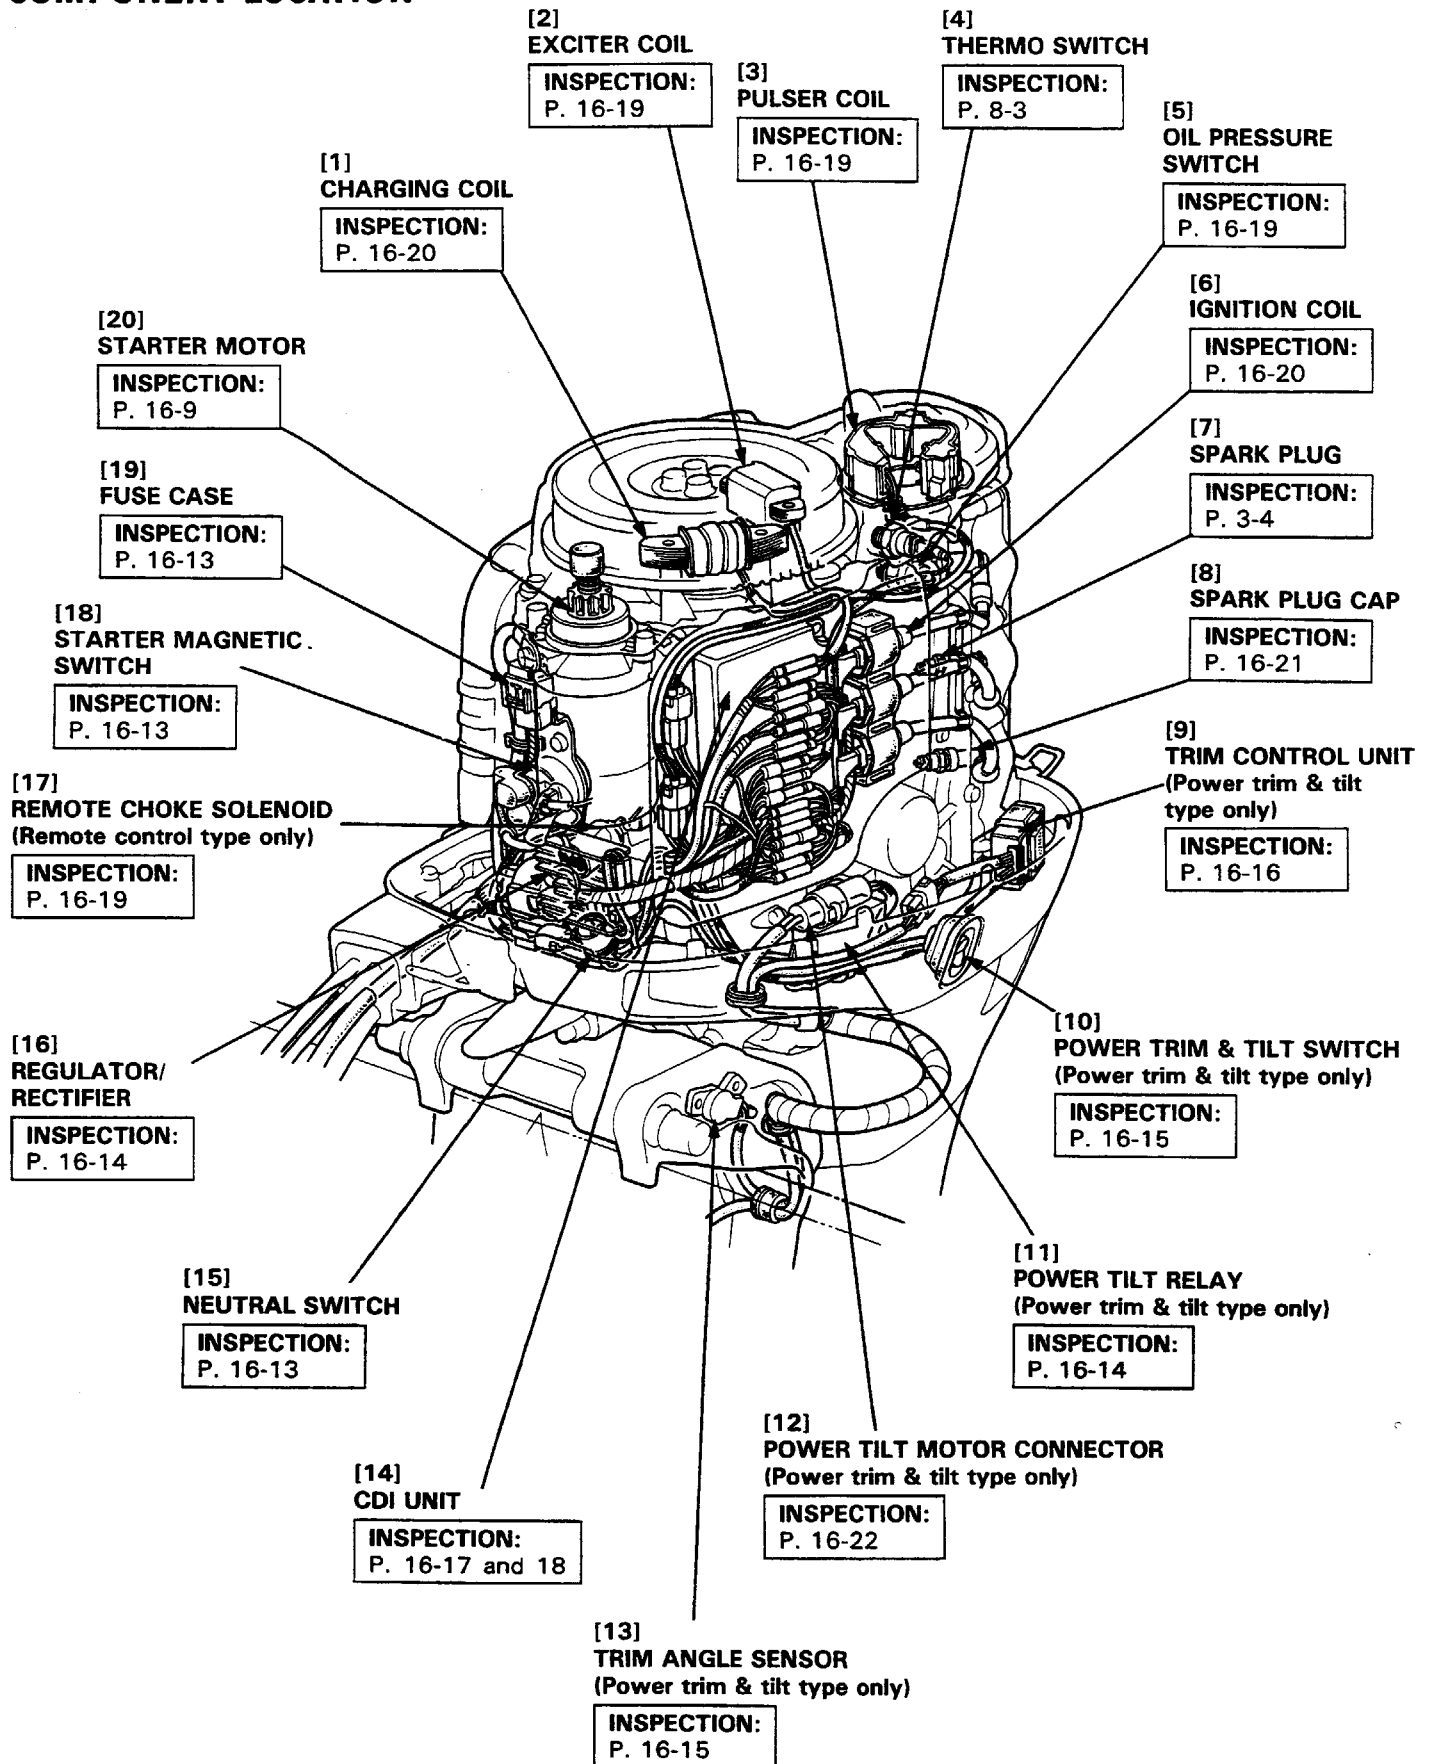

• **TILLER HANDLE TYPE**

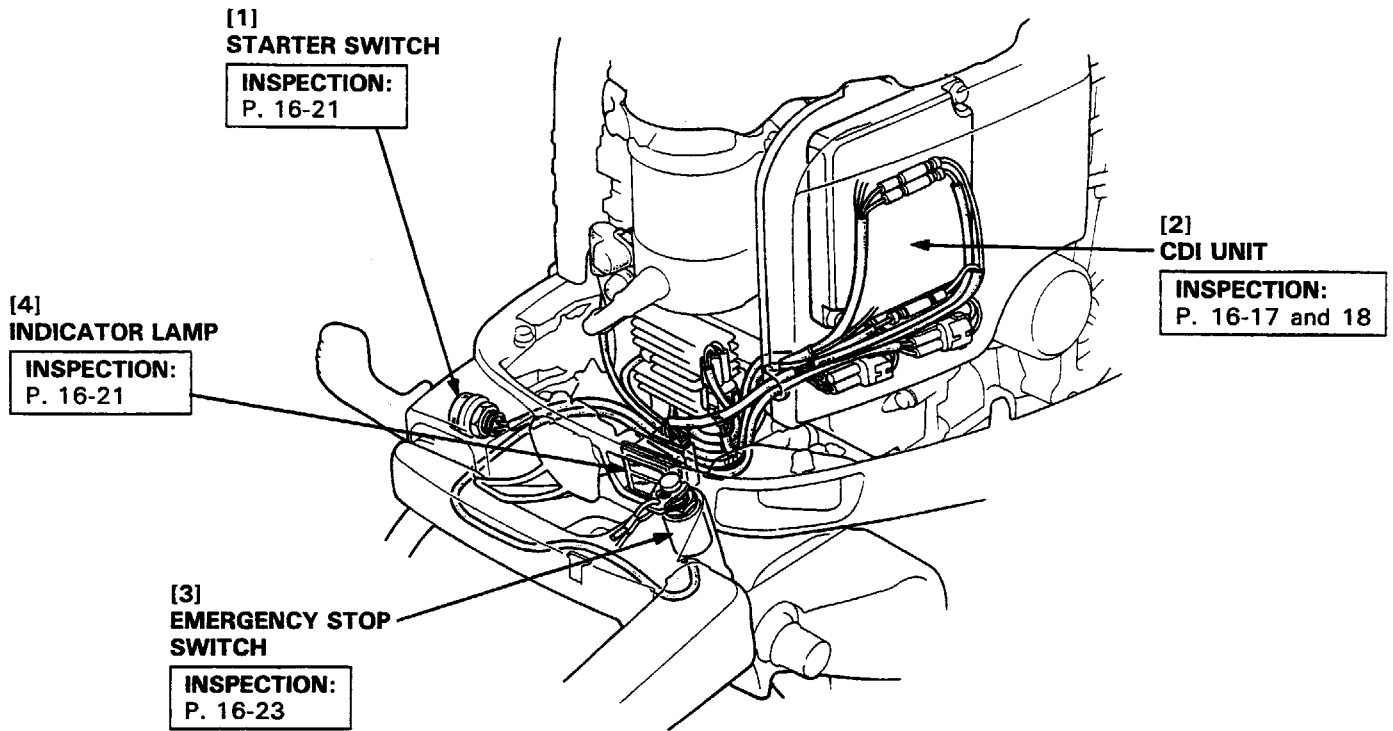


• **REMOTE CONTROL**

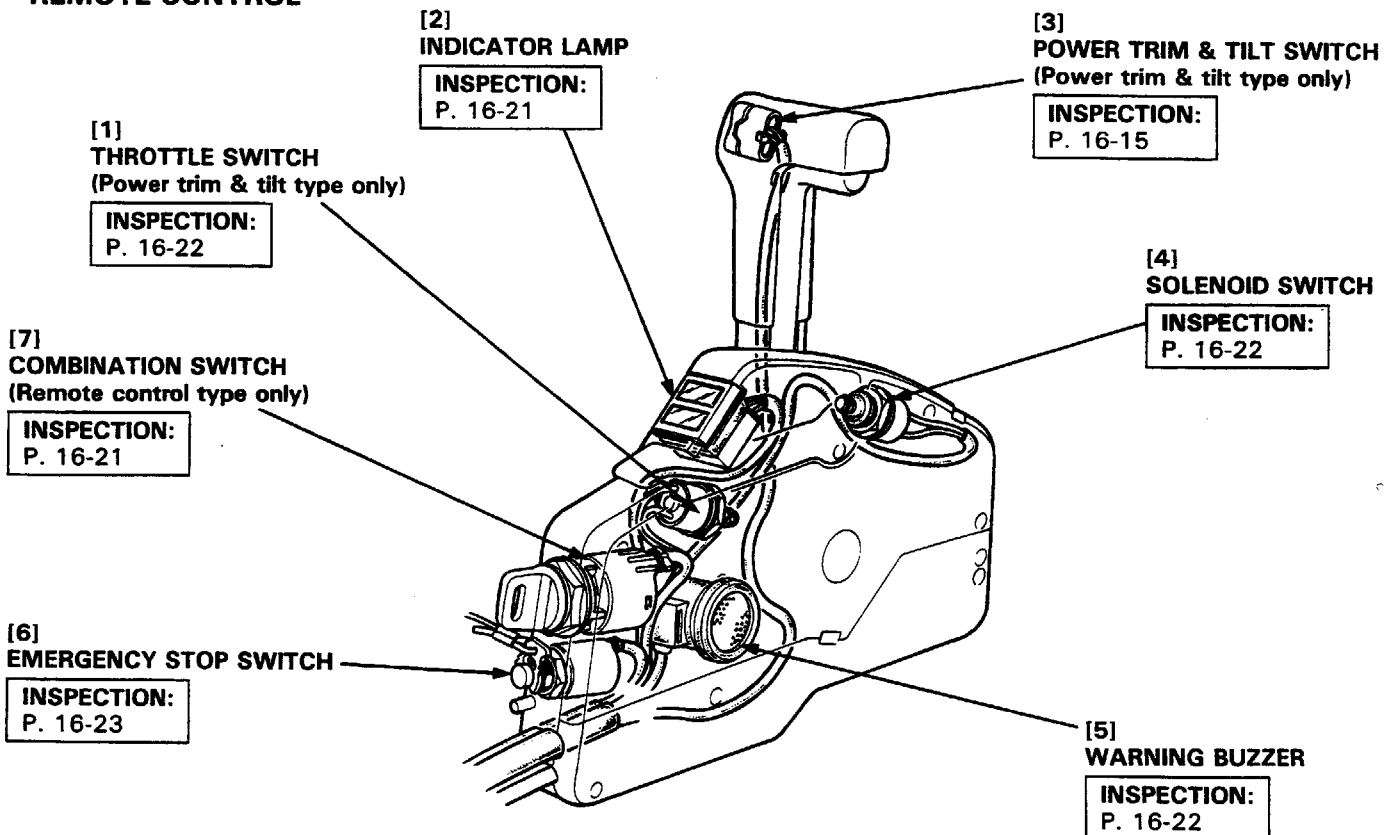

CDI UNIT/IGNITION COIL

a. DISASSEMBLY/REASSEMBLY


1) Remove the engine cover.
Refer to CABLE/HARNESS ROUTING (P. 2-22).

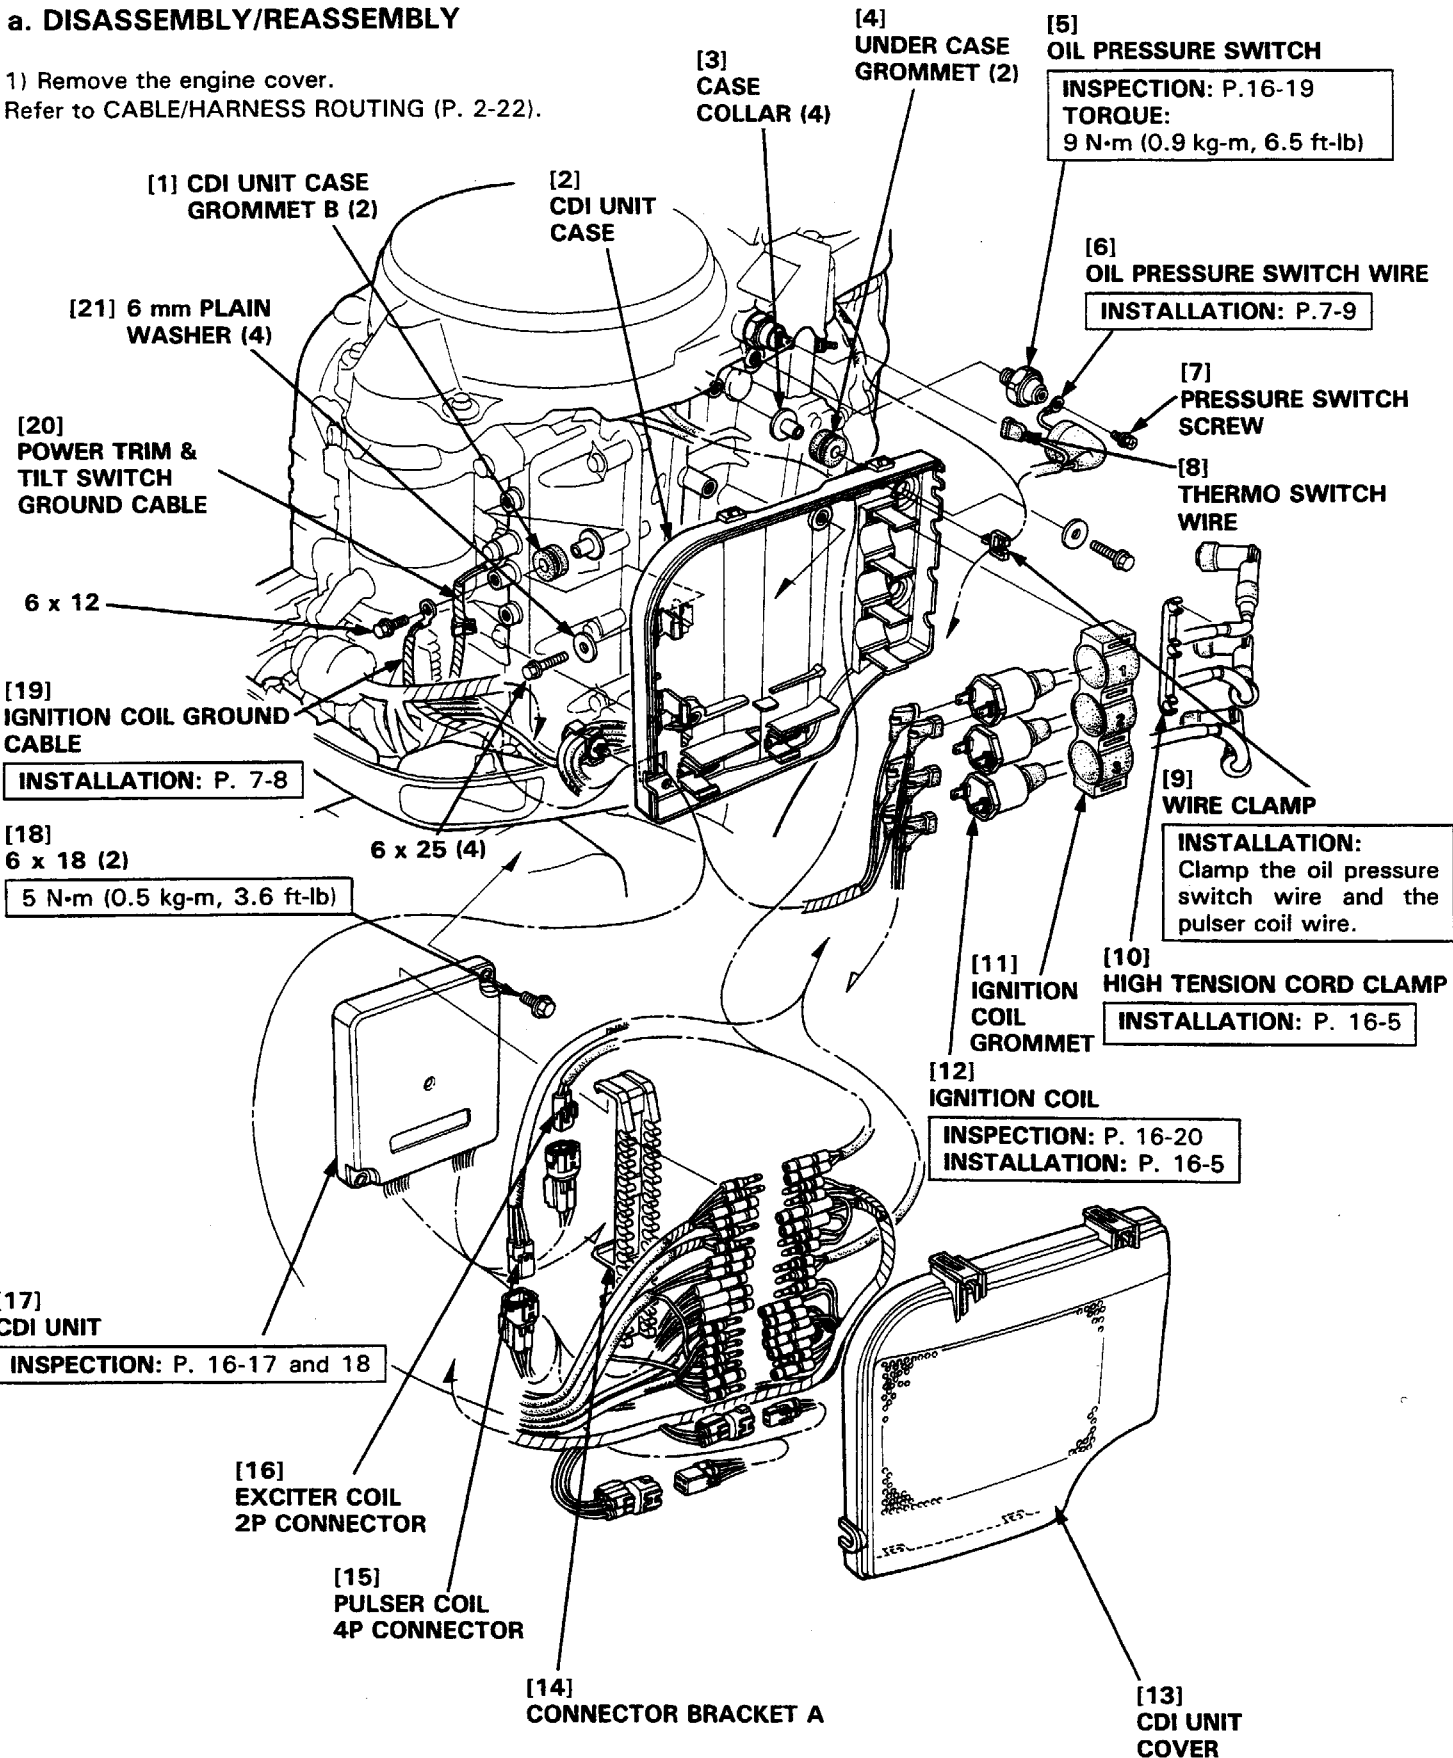


b. INSTALLATION

• IGNITION COIL


1) Cross-reference the number stamped on the high tension cord and the number on the ignition coil grommet, and pass the ignition coil through the grommet stamped with the same number.

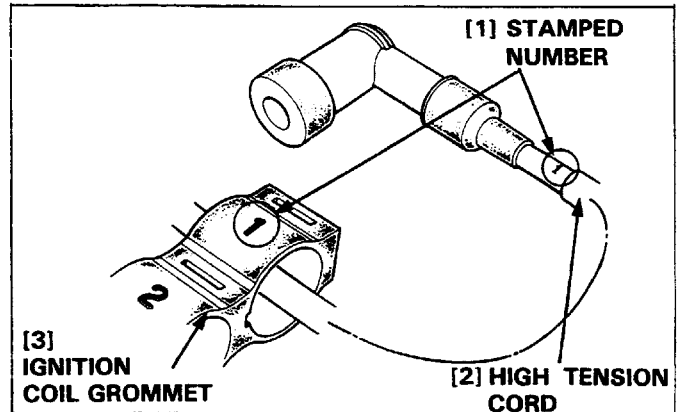

2) Align the concave in the ignition coil grommet with the convex of the ignition coil, and assemble the ignition coil with the ignition coil grommet securely.

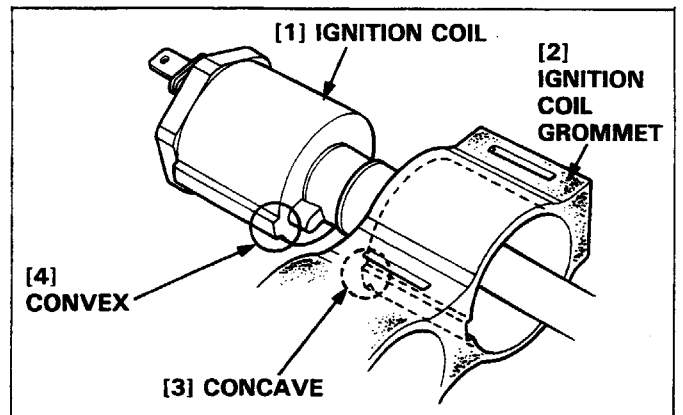


3) Connect the ignition coil wires to ignition coils as shown.

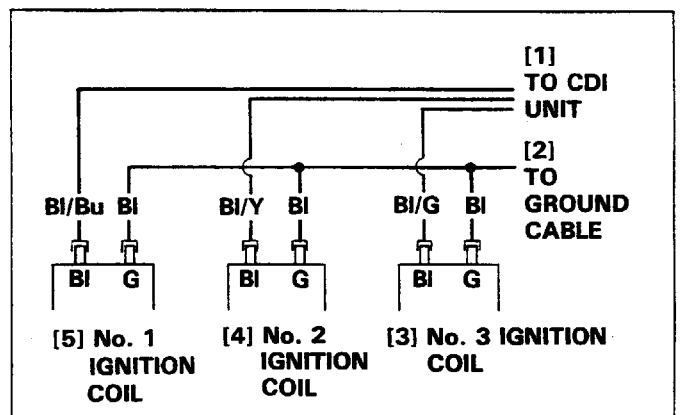

• HIGH TENSION CORD CLAMP

Set the high tension cord clamp with the narrow pitch side toward up and the flat side toward the engine as shown, and tighten the No. 1, No. 2 and No. 3 high tension cords in descending order securely.

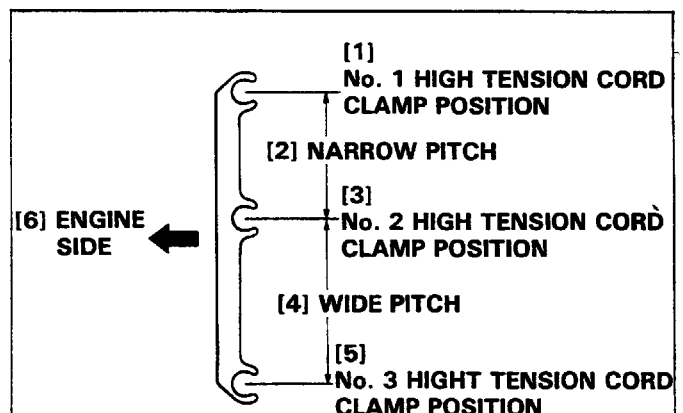


POWER TILT RELAY/TRIM CONTROL UNIT (POWER TRIM & TILT TYPE ONLY)

a. DISASSEMBLY/REASSEMBLY

• Disassembly/reassembly of the power tilt relay/trim control relay can be performed without removing the CDI unit cover. Just remove the following parts.


- 1) Remove the engine cover.
- 2) Remove the 6 mm hex. nut and disconnect the power tilt relay wire/starter cable (lower side) from the starter magnetic switch.

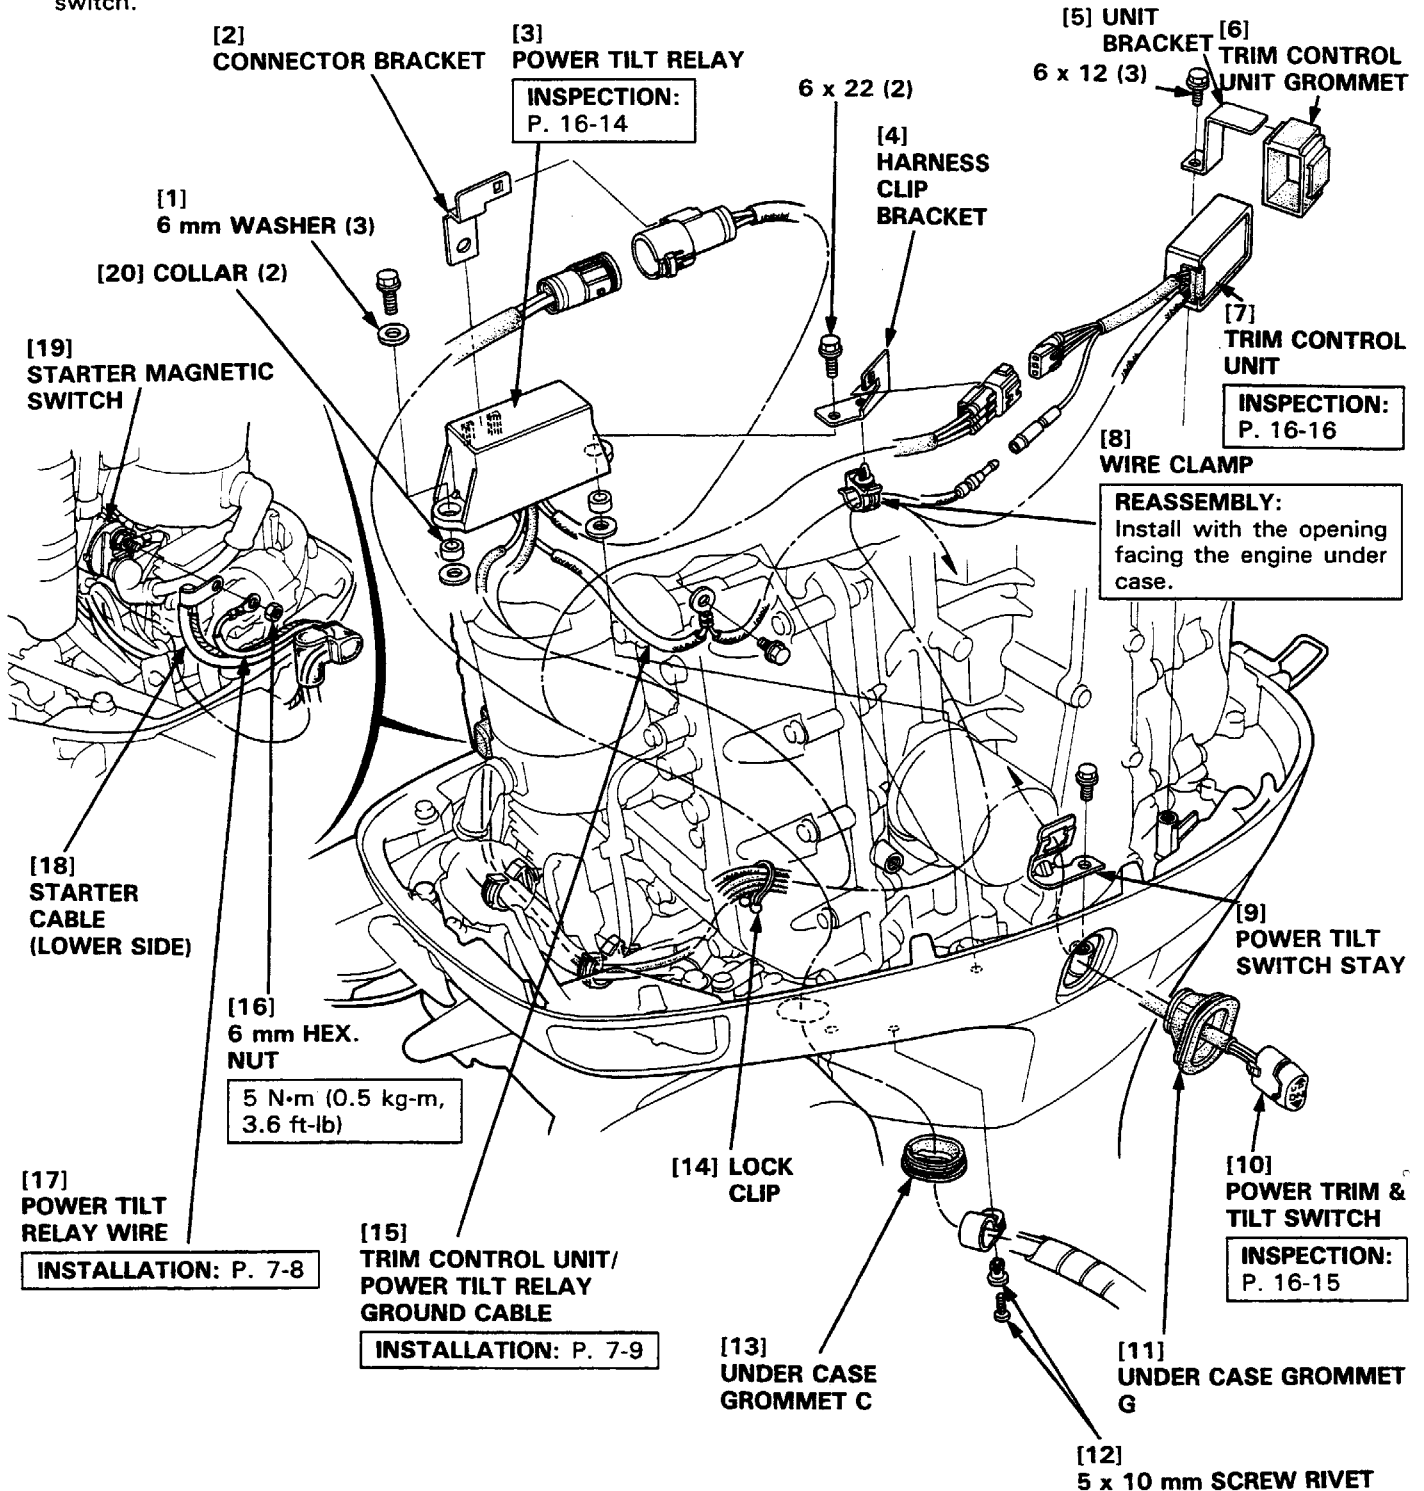

STARTER MOTOR

a. REMOVAL/INSTALLATION

1) Remove the engine cover and flywheel cover.

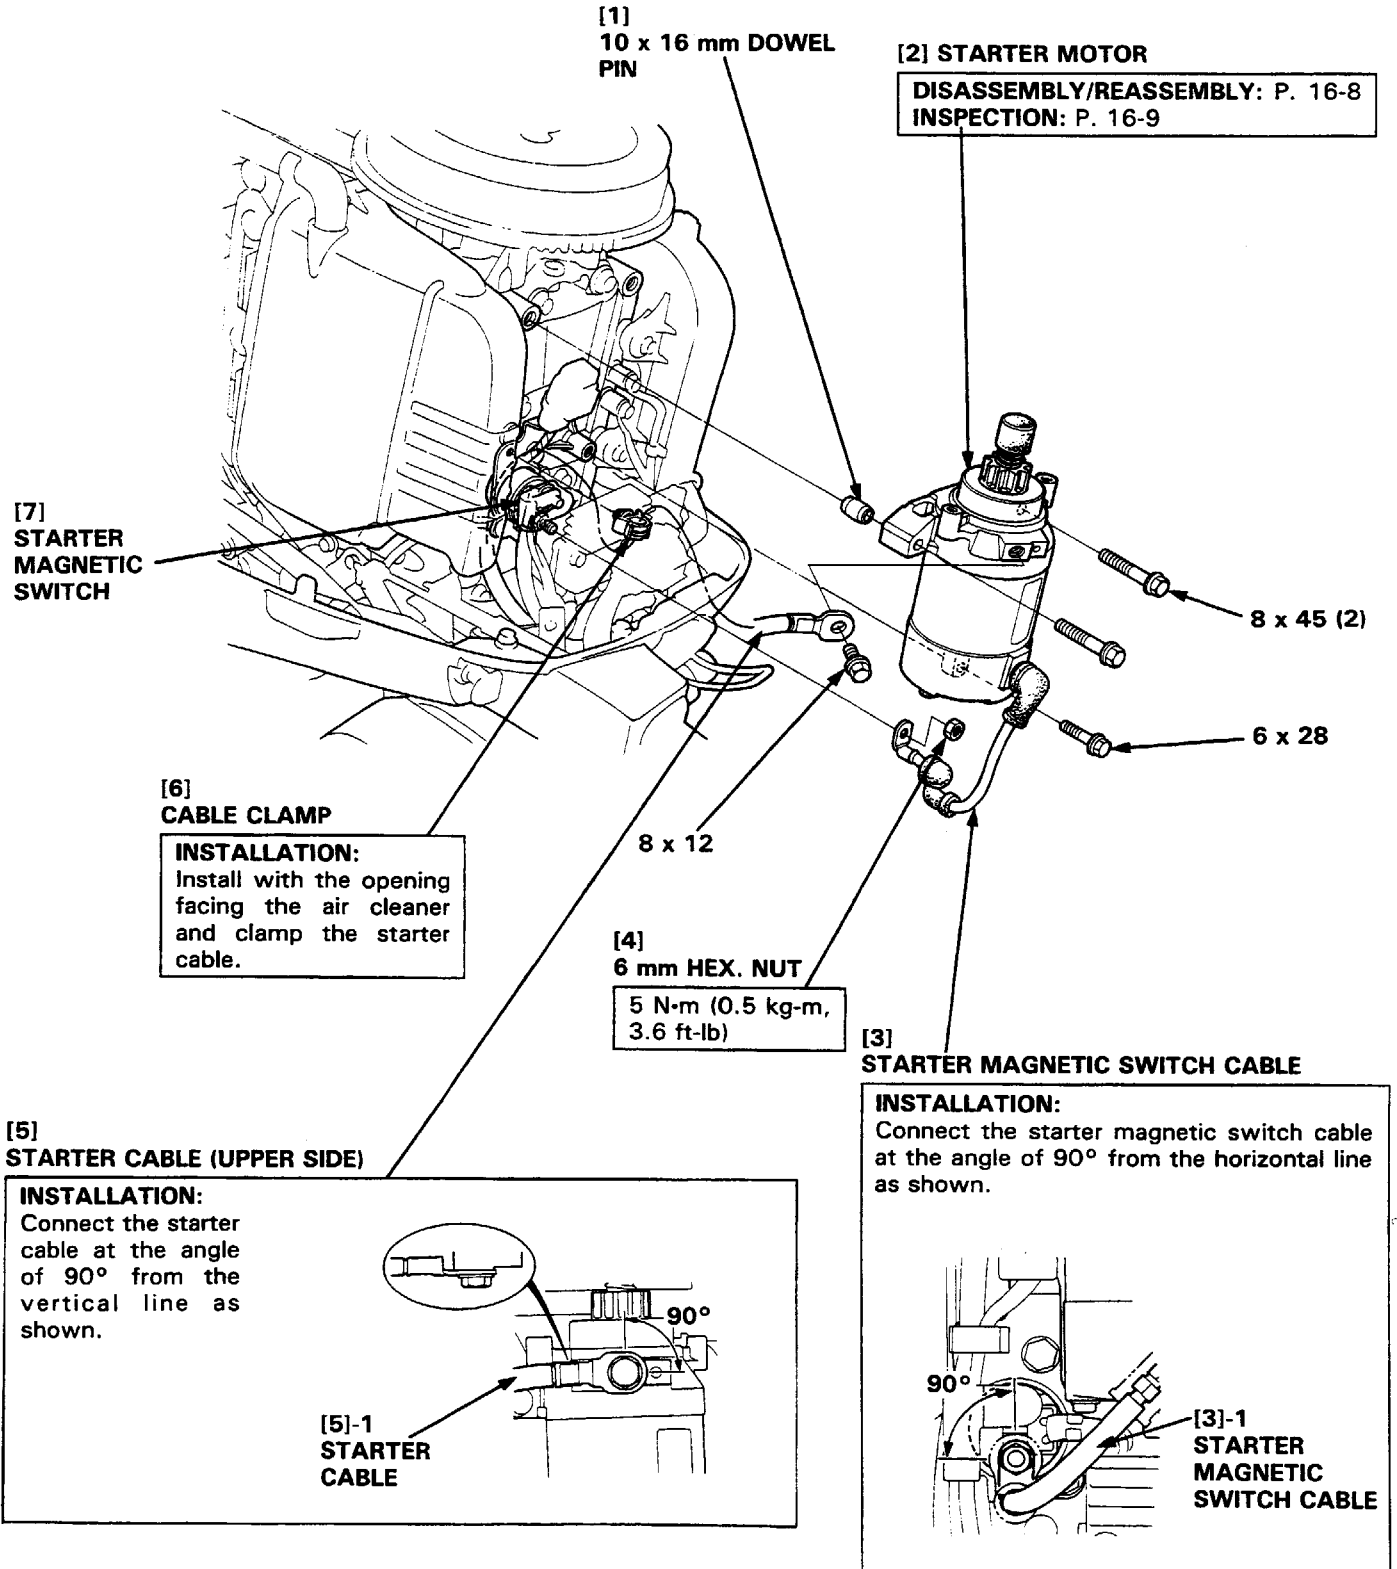


b. DISASSEMBLY/REASSEMBLY

[1] SNAP RING

DISASSEMBLY:

Hold the armature upright, place an off-set wrench over the stopper piece and push the stopper piece down exposing the snap ring. Remove the snap ring; then remove the stopper piece and clutch.

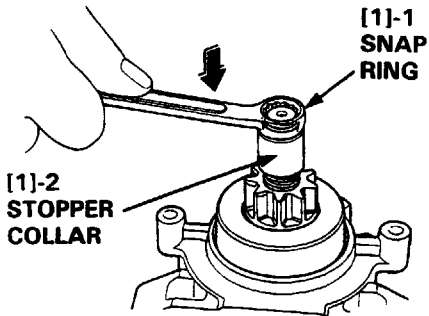

REASSEMBLY:

Check for smooth movement in axial direction by rotating the clutch. Check the gear teeth for wear or damage; replace if necessary.

Also, check the flywheel ring gear teeth if the pinion gear teeth are damaged.

[17] ARMATURE

INSPECTION: P. 16-9

REASSEMBLY:

Visually inspect the commutator surface for dust, rust or other damage. If necessary, wipe it with a clean lint-free cloth. If rusted or damaged, dress with a fine emery cloth.

[3] OVERRUNNING CLUTCH

INSPECTION: P. 16-10

[4] 6003 BALL BEARING

[5] FRONT COVER

 
INSTALLATION: P. 16-11

[6] WASHER (2)

[7] STARTER MAGNETIC SWITCH CABLE

REASSEMBLY:

Connect the starter magnetic switch cable at the angle of 45° from the vertical line as shown.



[7]-1 STARTER MAGNETIC SWITCH CABLE

[16] O-RING

Do not reuse

[15] YOKE

REASSEMBLY:

Make sure that there is no obstruction on the magnets.

[14] CARBON BRUSH SPRING (3)

[13] BRUSH HOLDER

INSPECTION: P. 16-9

[8] 8 mm FLANGE NUT (2)

7 N·m (0.7 kg-m.
5.1 ft-lb)

[9] BOLT SCREW (2)

[10] 4 mm SCREW (2)

[11] REAR COVER

INSTALLATION: P. 16-11

[12] M BUSHING

REASSEMBLY:


Apply an adhesive (Cemedain #575 or equivalent) to the mating surface with the rear cover.

c. INSPECTION**• BRUSH LENGTH**

Measure the brush length.


If brush length is less than standard, replace the brush holder.

STANDARD	SERVICE LIMIT
16 mm (0.6 in)	12 mm (0.5 in)

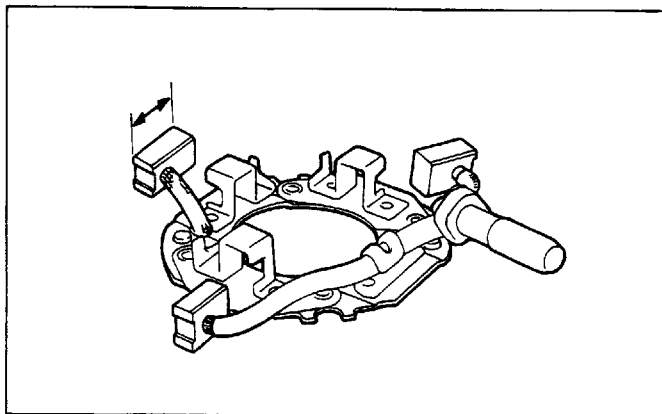**• BRUSH INSULATION**


Check for continuity between the brushes.

There should be no continuity.

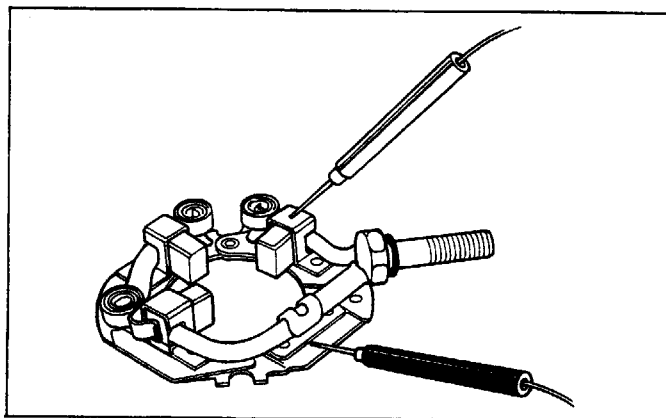
**• MICA DEPTH**

If the grooves are clogged or mica depth is less than the service limit, recut the grooves using a hacksaw blade or a small file.

SERVICE LIMIT	0.2 mm (0.01 in)
---------------	------------------

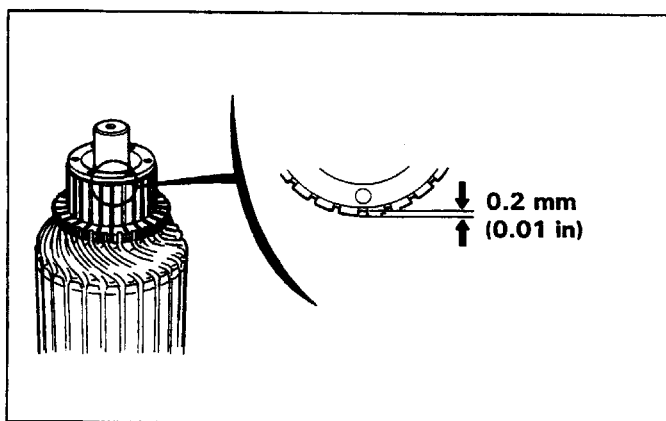**• ARMATURE****CONTINUITY CHECK—SEGMENTS**


Check for continuity between each segment. If an open circuit exists between any two segments, replace the armature.

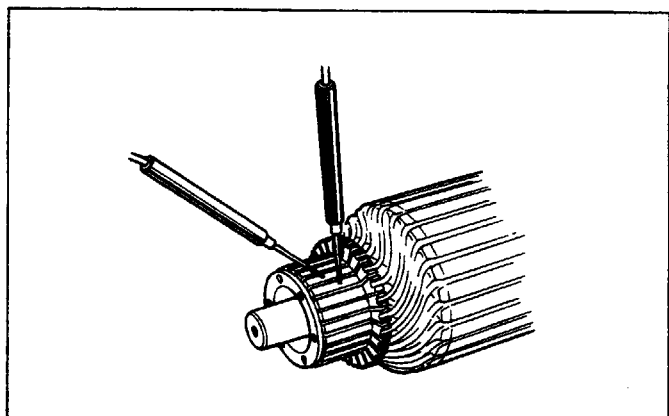

SHORT CIRCUIT TEST—CORE-TO-COMMUTATOR


Check for continuity between the commutator and armature coil core.

If continuity exists, replace the armature.

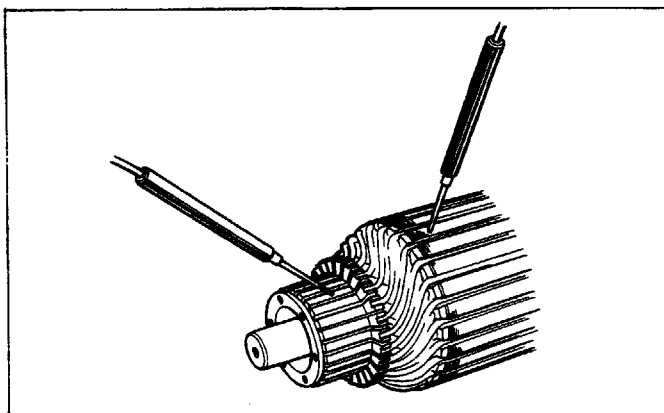**SHORT CIRCUIT TEST—SHAFT-TO-COMMUTATOR**


Check for continuity between the commutator and armature shaft.

If there is continuity, replace the armature.

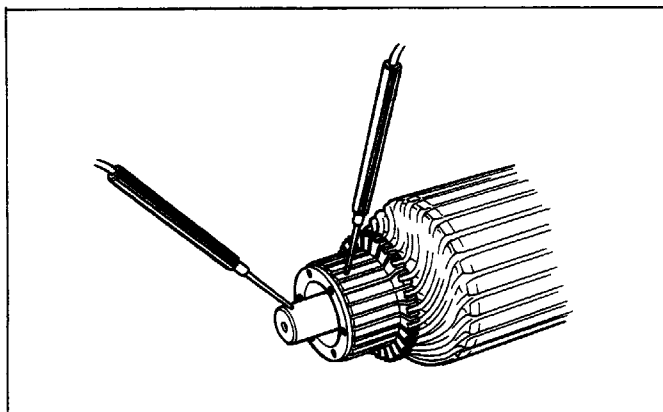
**SHORT CIRCUIT TEST—ARMATURE**

Place the armature in an armature tester (commercially available).

Hold a hacksaw blade close to the armature core. If the blade is attracted to the core or vibrates when the core is turned, the armature is shorted. Replace the armature.

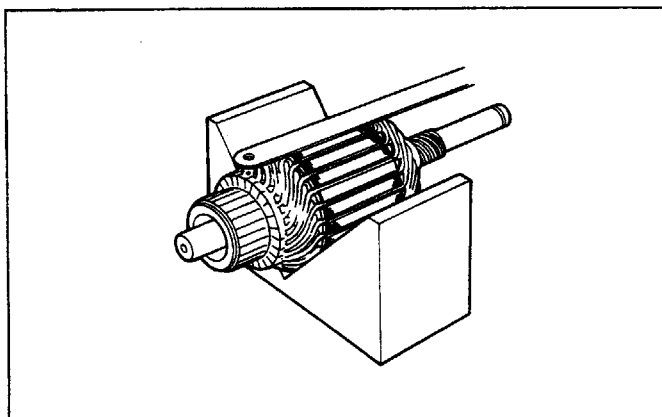**• OVERRUNNING CLUTCH**


- 1) Check the overrunning clutch for smooth axial movement. Apply oil or replace the overrunning clutch if necessary.

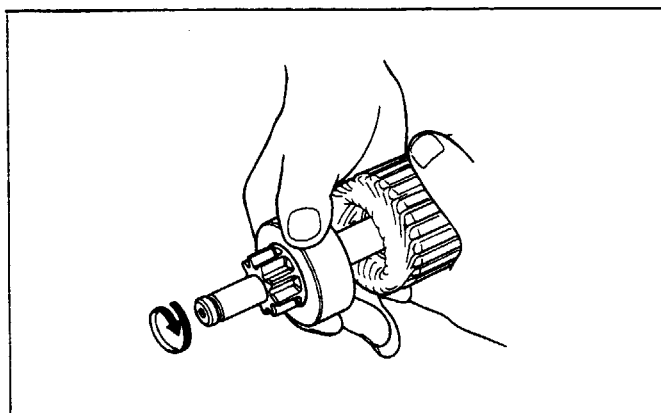

- 2) Check the clutch movement by holding the rotor and turning the clutch. The clutch should turn freely counter-clockwise and should not turn clockwise.
- 3) Check the pinion gear for wear or damage and replace if necessary.

NOTE


- If the pinion gear is worn or damaged, the flywheel ring gear must be inspected.

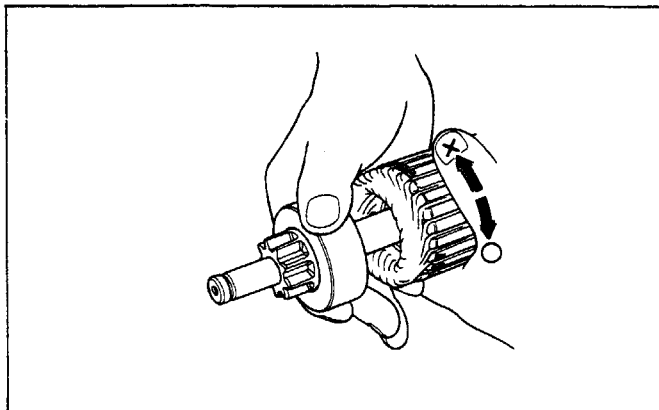

d. INSTALLATION

• FRONT COVER/YOKE/REAR COVER



- 1) Align the projections on the yoke with the dents in the rear cover, and assemble the yoke and rear cover with the "A" point on the yoke facing the starter magnetic switch cable.
- 2) Assemble the yoke and front cover by aligning the dents in the front cover with the projections on the yoke.

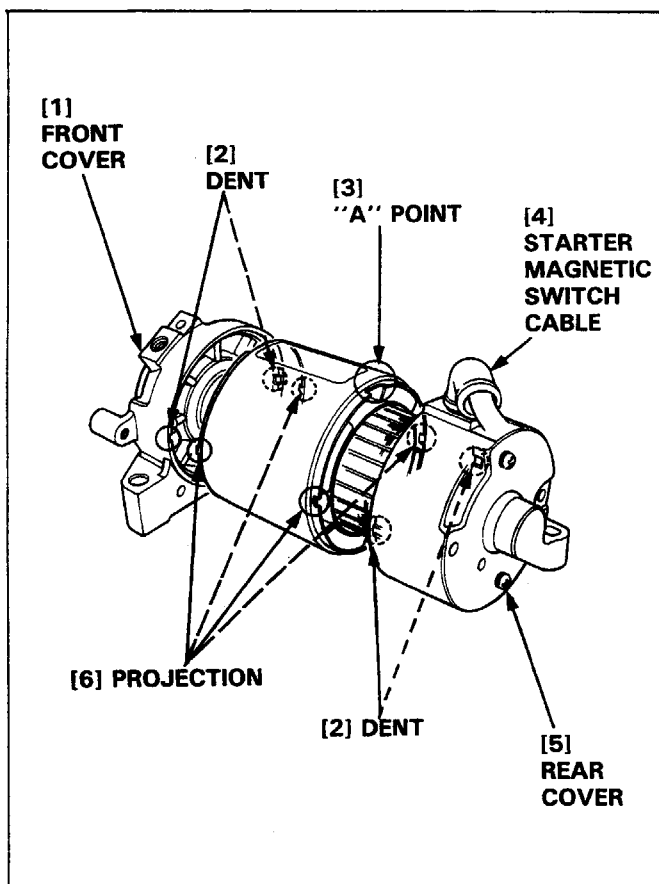

ELECTRIC PARTS

a. DISASSEMBLY/REASSEMBLY

- 1) Remove the engine cover.
- 2) Remove the starter motor (P. 16-7).
- 3) Remove the CDI unit cover and disconnect the starter magnetic switch wire connector, starter cable (lower side) connector and regulator/rectifier wire connectors.
- 4) Disconnect the 14P connector and remote choke solenoid 2P connector. (Remote control type only).

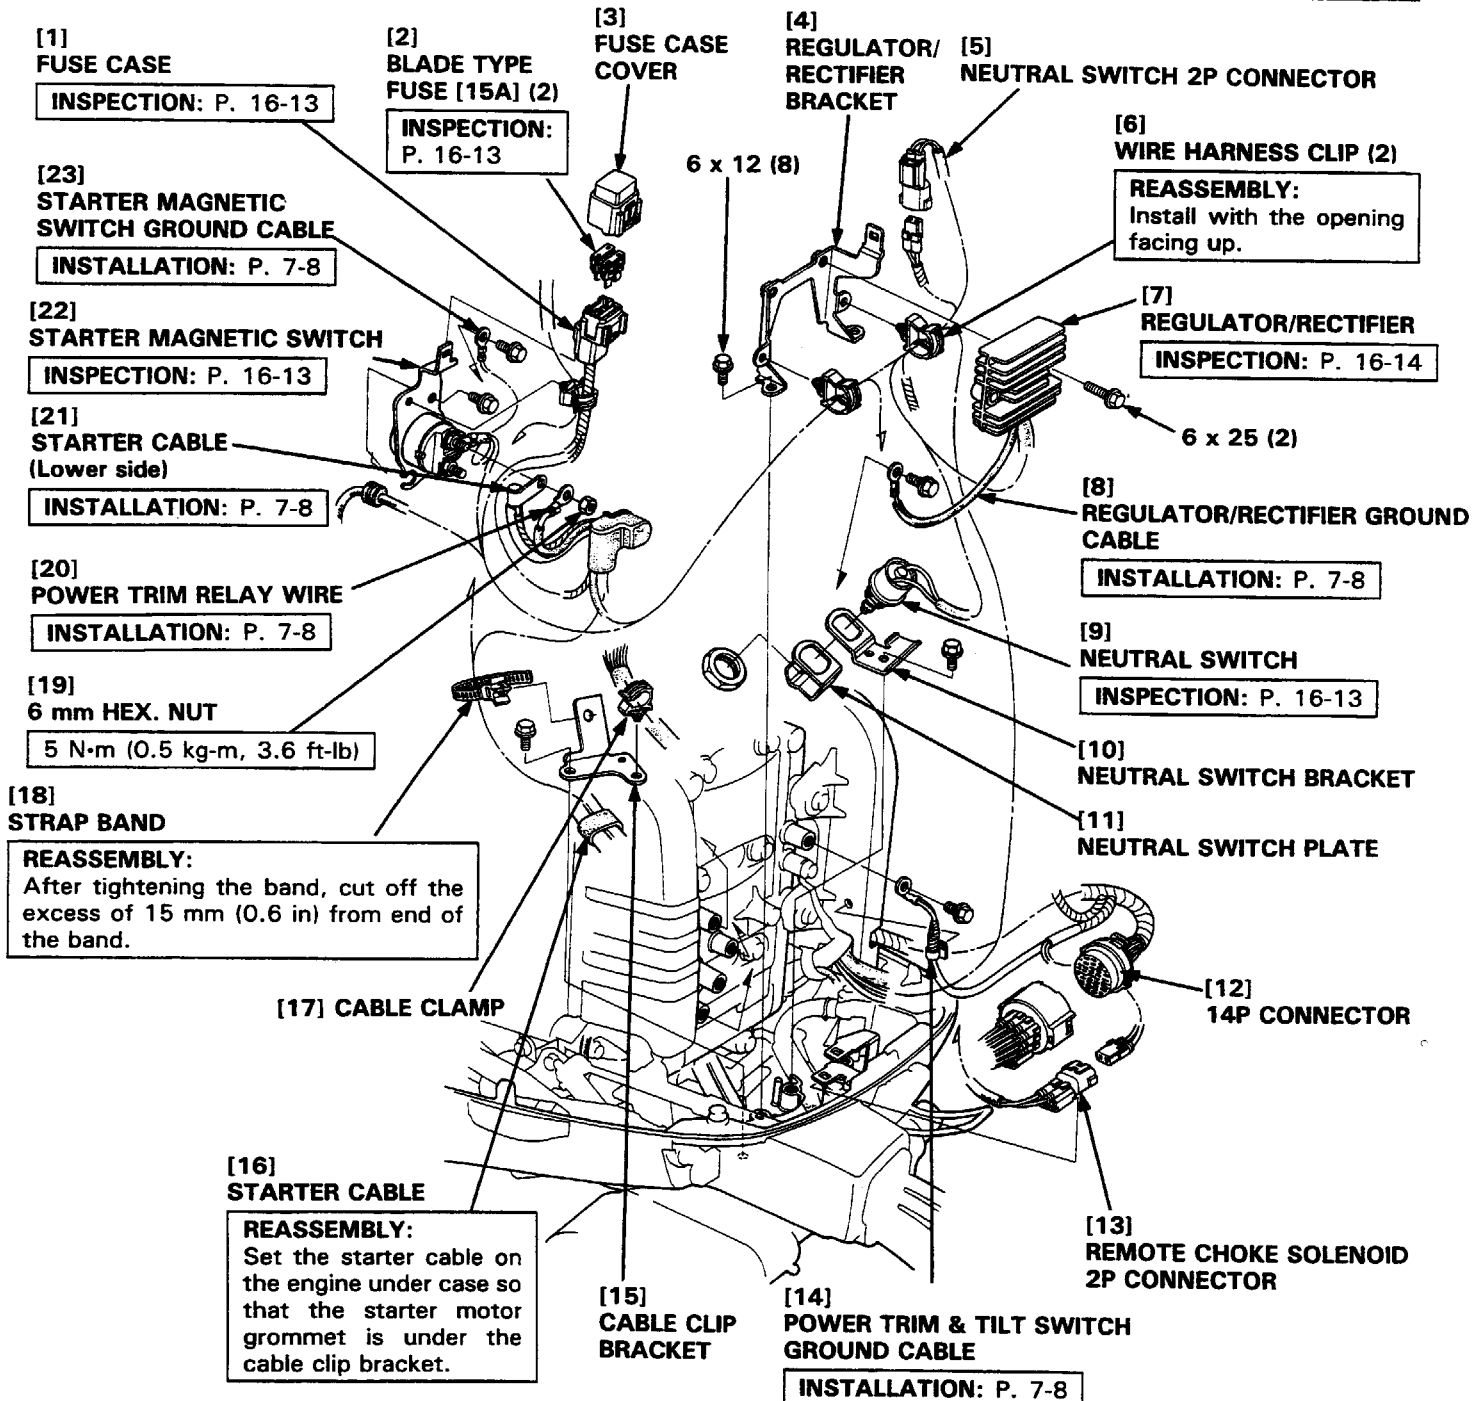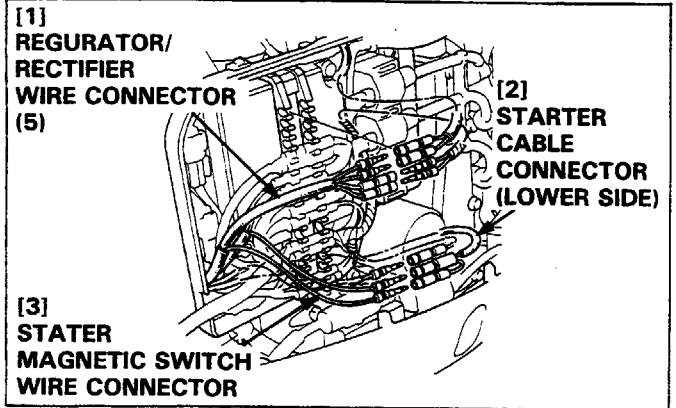

INSPECTION


• STARTER MAGNETIC SWITCH ASSEMBLY

NOTE

- Be sure the battery is in good condition before performing this test.

Connect the black/white wire of the starter switch to the positive (+) terminal of the battery and black wire to the negative (-) terminal and check for continuity. There should be continuity between the terminals.


And then there should be no continuity when disconnecting the battery.

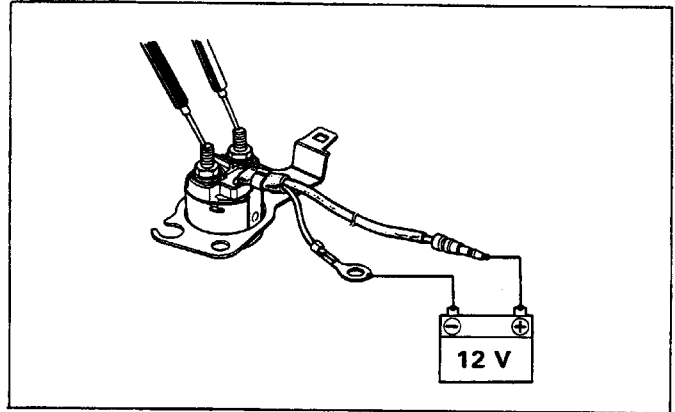

• FUSE/FUSE CASE

Check the fuse for continuity.


Connect the fuse to the fuse case and check the case for continuity.

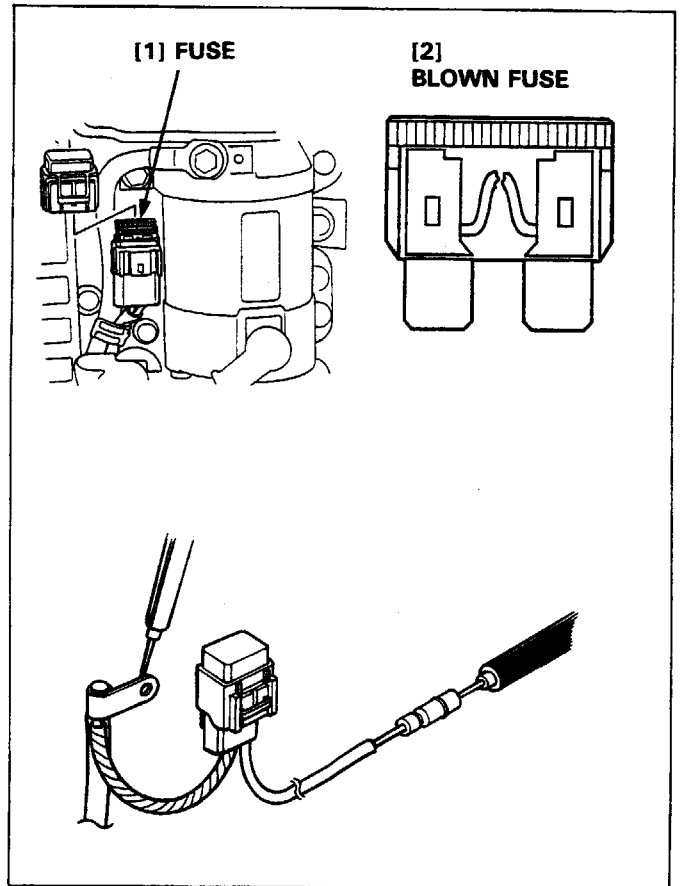

• NEUTRAL SWITCH

Attach the tester leads to the two terminals at the neutral switch and check for continuity. There should be continuity when the switch knob is pushed.

SWITCH PUSHED (Shift lever to "F" or "R")	CONTINUITY
SWITCH RELEASED (Shift lever to "N")	NO CONTINUITY

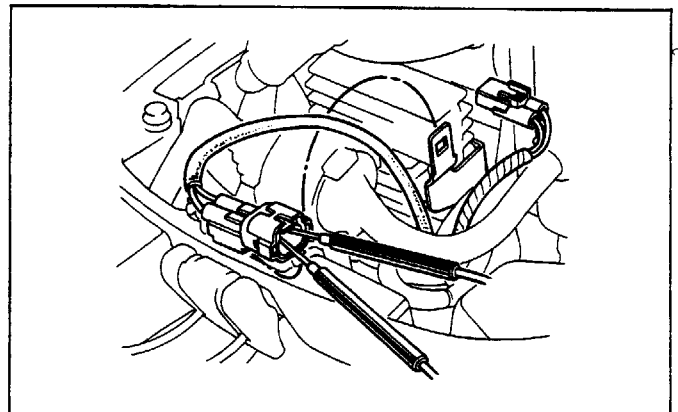

• REGULATOR/RECTIFIER

Measure the resistance between the connectors.
Replace the regulator if the measurement is out of the specified range shown in the table below.


(Ω)

TESTER (+)		Gr	Gr	W/BI, W	BI
TESTER (-)		A	B	D/E	F
Gr	A		∞	∞	∞
Gr	B	∞			∞
W/BI, W	D/E	1k-200k	1k-200k		500-100k
BI	F	500-50k	100-50k	∞	

Check the regulator/rectifier for continuity.
The regulator/rectifier is normal if there is continuity between C and A, or C and B.

NOTE


- RECOMMENDED MULTITESTERS:
TH-5H (KOWA Analogue type)
SP-10D (SANWA Analogue type)
- Select the following range.
Kowa: R x 100 Ω
Sanwa: kΩ

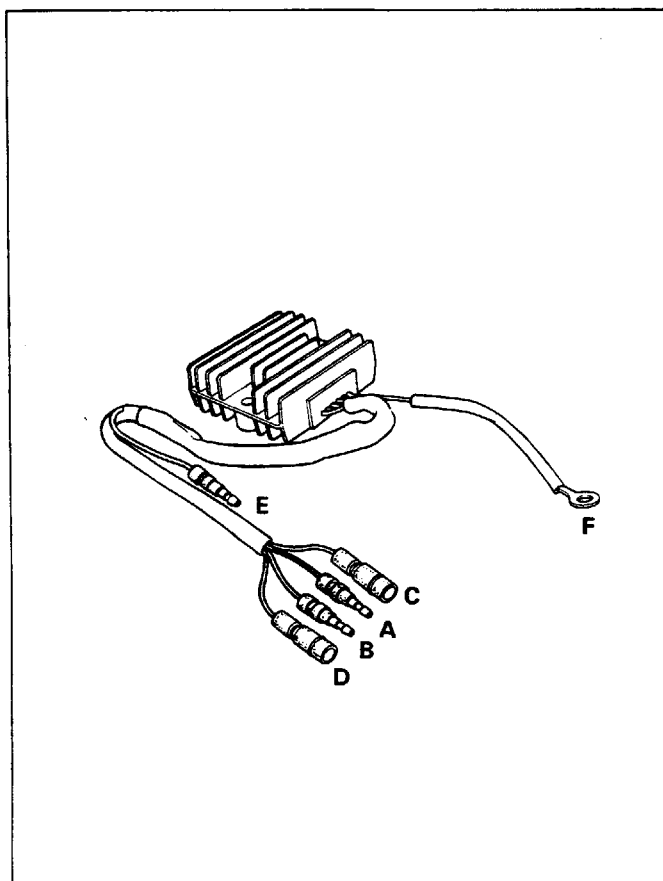

• POWER TILT RELAY (Power trim & tilt type only)

Check the continuity and resistance between the terminals shown in the table below.


Between G (motor output side) and BI	Continuity
Between Bu (motor output side) and BI	Continuity
Between Lg (switch input side) and BI	90-120 Ω
Between Lb (switch input side) and BI	90-120 Ω
Between W/Y and BI	No continuity

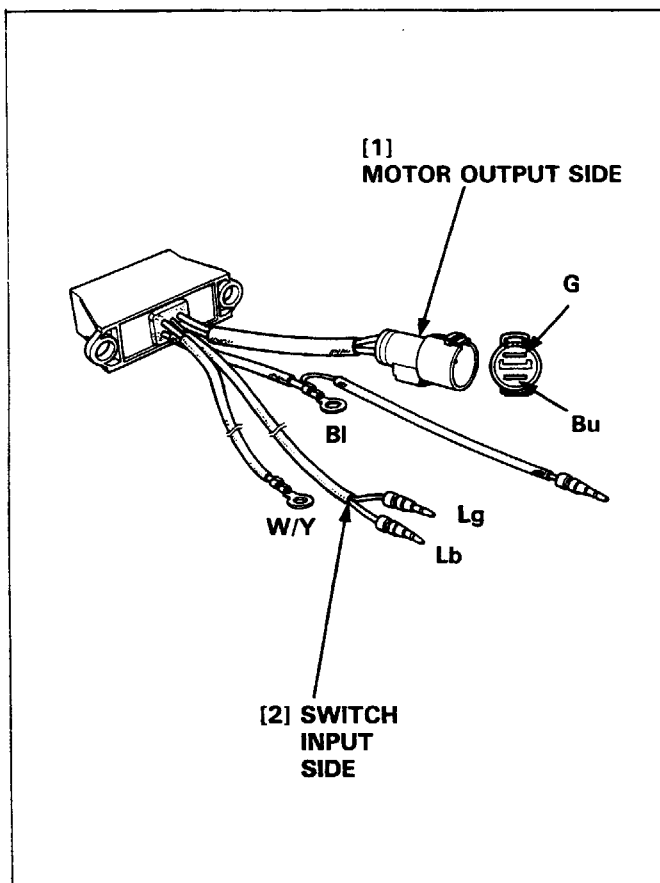

NOTE

- Be sure the battery is in good condition before performing this test.

Check that there is battery voltage between the ground cable BI and the motor output side G and Bu in the circuit shown to the right.

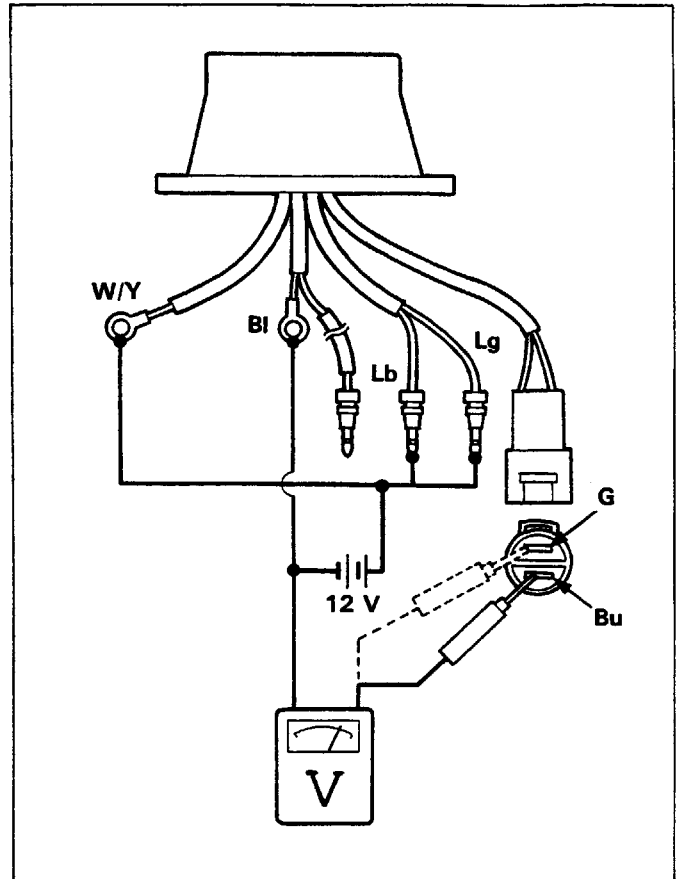

• POWER TRIM & TILT SWITCH (Power trim & tilt type only)



Attach the tester lead to each terminal and check for continuity. There should be continuity between the terminals marked with circle in the table below.

Remote control side connector color	Lg	W/BI	Lb
Engine under case side connector color	Lg	W	Lb
UP	○	○	
DOWN		○	○

• TRIM ANGLE SENSOR

Attach the tester leads to the trim angle sensor connector and measure the resistance.

Resistance between O and BI	4–6 kΩ
Resistance between Y/Bu and BI	2.7–4.3 kΩ

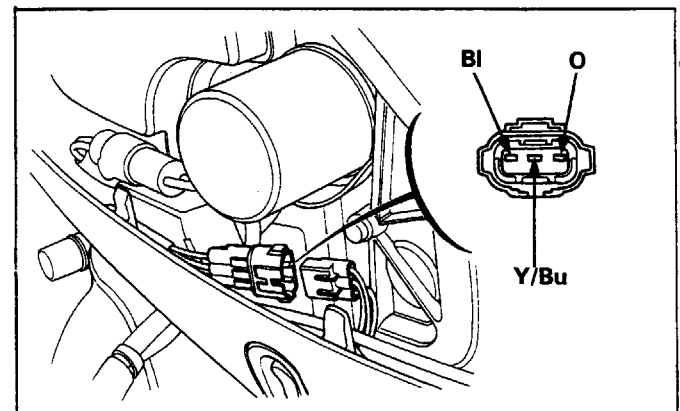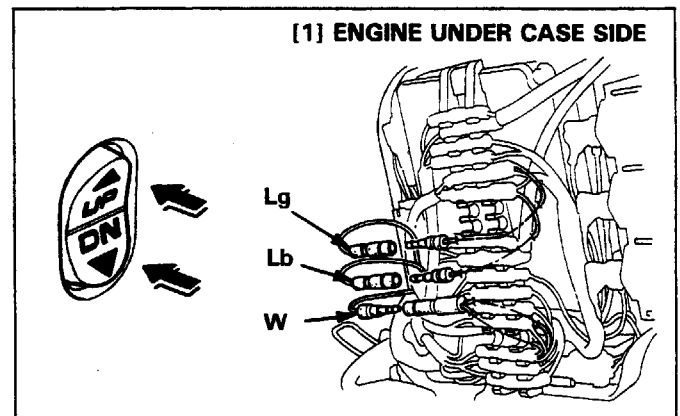


• **TRIM CONTROL UNIT (Power trim & tilt type only)**


NOTE

- Be sure the battery is in good condition before performing this test.

- 1) Check that there is 5 ± 0.1 V of voltage between the O and BI terminals in the circuit shown to the right.

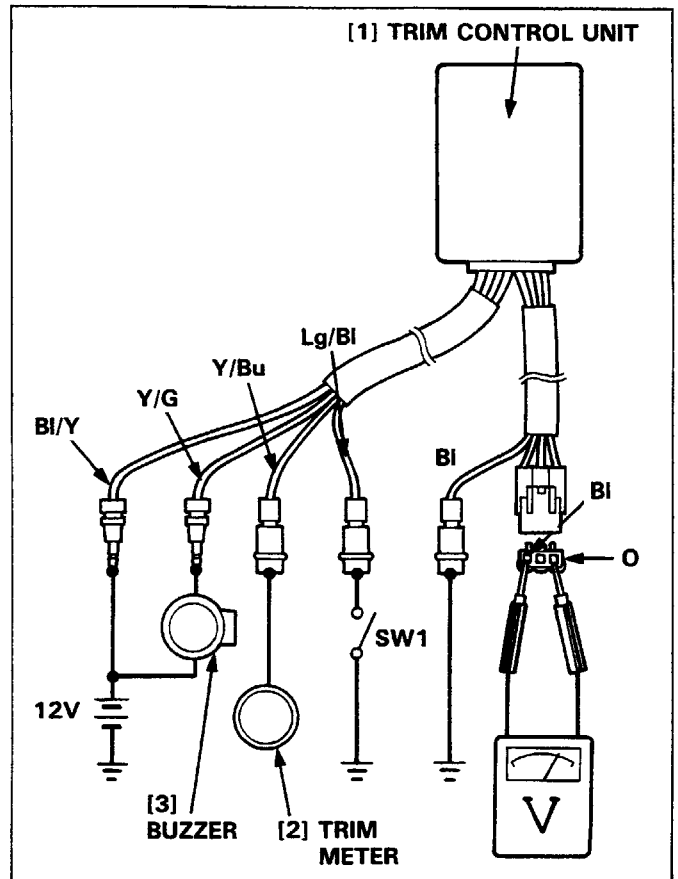


- 2) Turn the angle sensor until voltage between Y/Bu and BI is 3.05 volts. Be sure that the buzzer sounds intermittently when the switch 1 is turned OFF. Check also that the buzzer stops sounding when the switch 1 is ON.

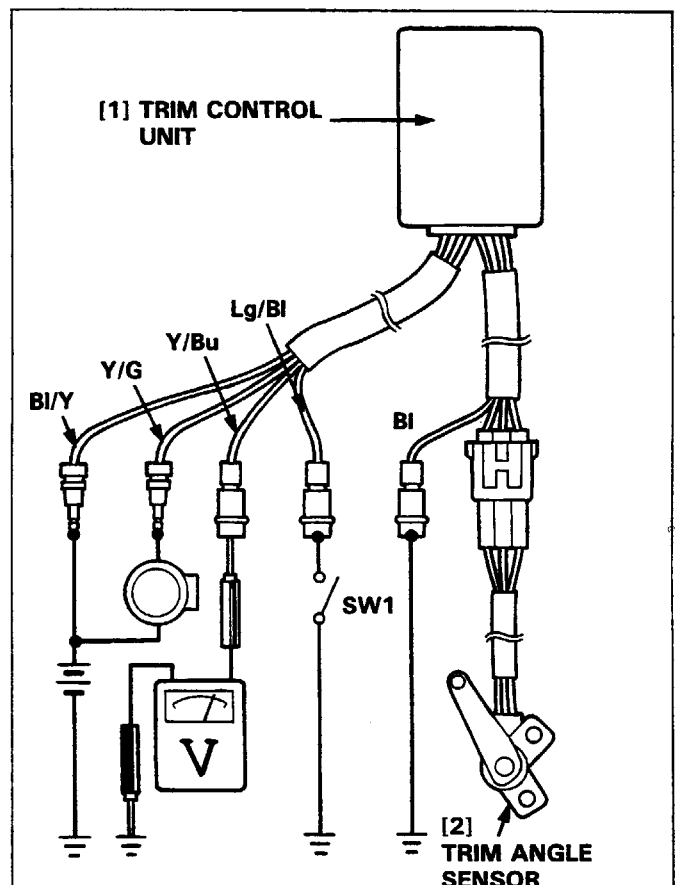

• CDI UNIT (Except tiller handle type)

Measure the resistance between the CDI unit terminals and be sure that measurements conform to the ranges shown in the table below.

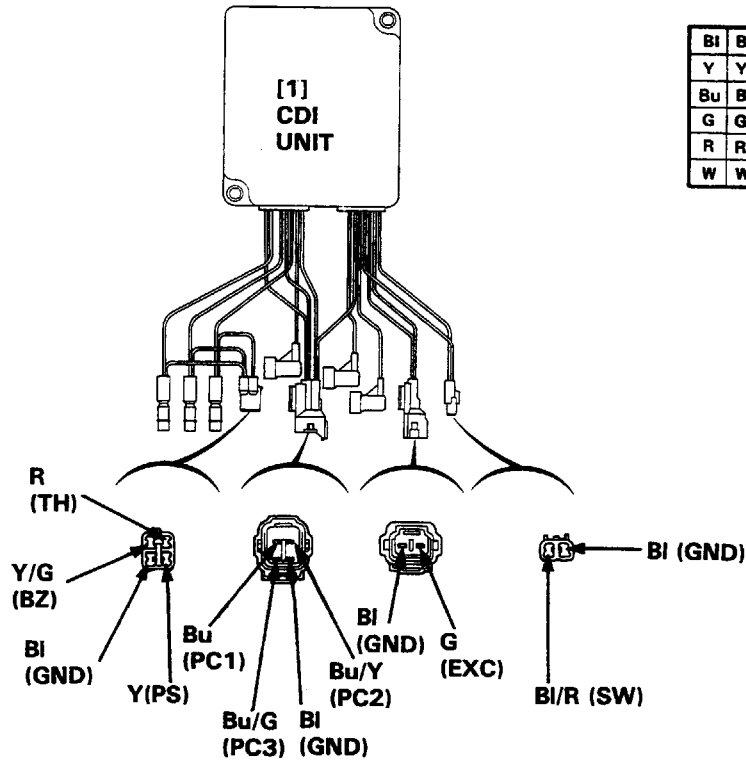

Bl	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

(KΩ)

COLOR	Tester(-) Tester(+)	PC1	PC2	PC3	EXC	SW	IG1	IG2	IG3	PS	TH	GND	BZ
Bu	PC1		10-500	10-500	10-500	∞	∞	∞	∞	∞	∞	3-300	∞
Bu/Y	PC2	10-500		10-500	10-500	∞	∞	∞	∞	∞	∞	3-300	∞
Bu/G	PC3	10-500	10-500		10-500	∞	∞	∞	∞	∞	∞	3-300	∞
G	EXC	10-500	10-500	10-500		∞	∞	∞	∞	∞	∞	0.5-50	∞
BI/R	SW	20-500	20-500	20-500	0.5-50		∞	∞	∞	∞	∞	0.5-50	∞
BI/L	IG1	∞	∞	∞	∞	∞		∞	∞	∞	∞	∞	∞
BI/Y	IG2	∞	∞	∞	∞	∞	∞		∞	∞	∞	∞	∞
BI/G	IG3	∞	∞	∞	∞	∞	∞	∞		∞	∞	∞	∞
Y	PS	10-500	10-500	10-500	10-500	∞	∞	∞	∞		∞	0.5-50	∞
R	TH	3-300	3-300	3-300	3-300	∞	∞	∞	∞	∞		0.5-50	∞
BI	GND	3-300	3-300	3-300	3-300	∞	∞	∞	∞	∞	∞		∞
Y/G	BZ	10-500	10-500	10-500	10-500	∞	∞	∞	∞	∞	∞	∞	0.5-500


TESTER (-) TESTER (+)	PC.E	EXC.E.	IND.E.	SW.E.
GND	Continuity	Continuity	Continuity	Continuity

NOTE

- RECOMMENDED MULTITESTERS:
TH-5H (KOWA Analogue type)
SP-10D (SANWA Analogue type)
- Select the following range.
Kowa: R x 100 Ω
Sanwa: kΩ

• **CDI UNIT (Tiller handle type only)**

Measure the resistance between the CDI unit terminals and be sure that measurements conform to the ranges shown in the table below.

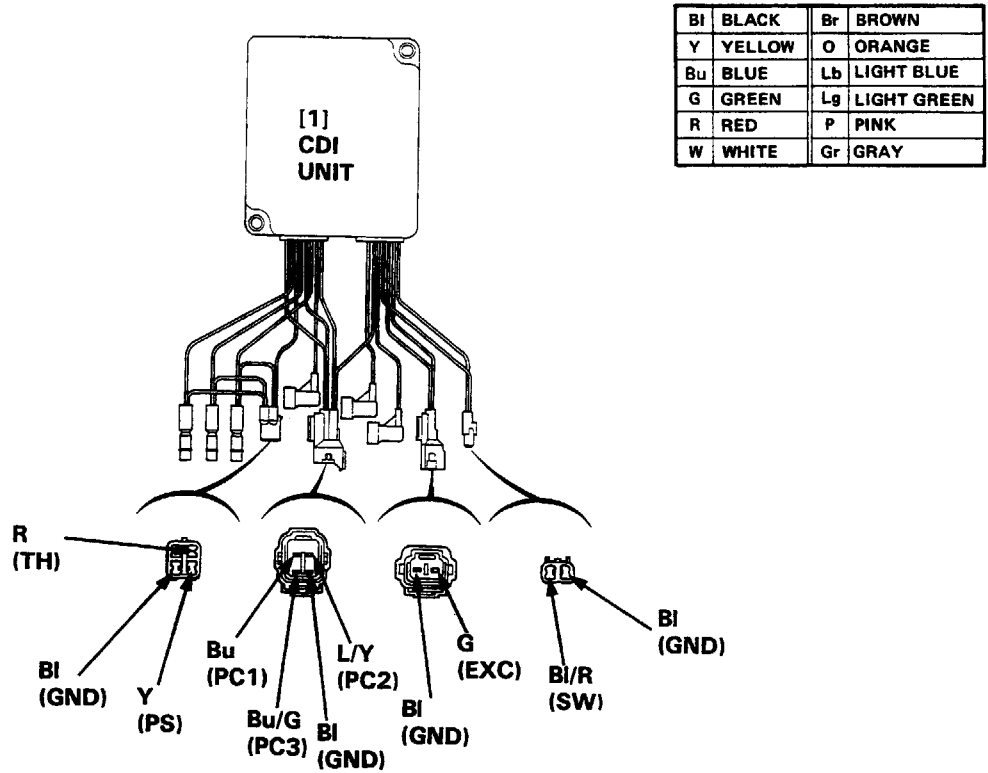

BI	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

(KΩ)

COLOR	Tester(-) Tester(+)	PC1	PC2	PC3	EXC	SW	IG1	IG2	IG3	PS	TH	GND
Bu	PC1		10-500	10-500	10-500	∞	∞	∞	∞	∞	∞	3-300
Bu/Y	PC2	10-500		10-500	10-500	∞	∞	∞	∞	∞	∞	3-300
Bu/G	PC3	10-500	10-500		10-500	∞	∞	∞	∞	∞	∞	3-300
G	EXC	10-500	10-500	10-500		∞	∞	∞	∞	∞	∞	0.5-50
BI/R	SW	20-500	20-500	20-500	0.5-50		∞	∞	∞	∞	∞	0.5-50
BI/L	IG1	∞	∞	∞	∞	∞		∞	∞	∞	∞	∞
BI/Y	IG2	∞	∞	∞	∞	∞	∞		∞	∞	∞	∞
BI/G	IG3	∞	∞	∞	∞	∞	∞	∞		∞	∞	∞
Y	PS	10-500	10-500	10-500	10-500	∞	∞	∞	∞		∞	0.5-50
R	TH	3-300	3-300	3-300	3-300	∞	∞	∞	∞	∞		0.5-50
BI	GND	3-300	3-300	3-300	3-300	∞	∞	∞	∞	∞	∞	

NOTE


TESTER (-) TESTER (+)	PC.E	EXC.E.	IND.E.	SW.E.
GND	Continuity	Continuity	Continuity	Continuity

- **RECOMMENDED MULTITESTERS:**
TH-5H (KOWA Analogue type)
SP-10D (SANWA Analogue type)
- Select the following range.
Kowa: R x 100 Ω
Sanwa: kΩ

• REMOTE CHOKE SOLENOID (Remote control type only)


Measure the resistance between the terminals.

Resistance	2.8 – 3.4 Ω
------------	--------------------

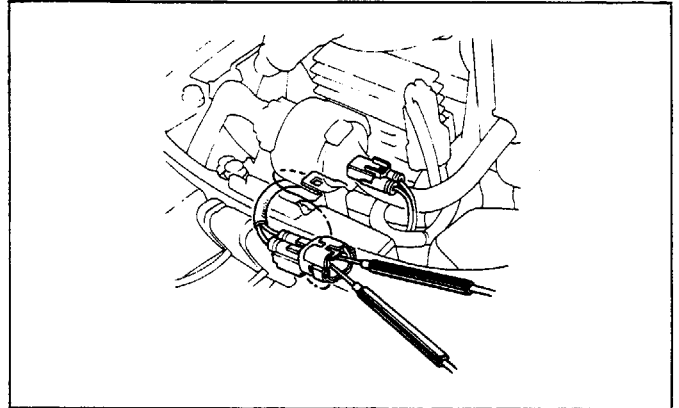

• OIL PRESSURE SWITCH

- 1) Remove the oil pressure switch wire.
- 2) Attach the tester leads to the terminal joint and switch body and check for continuity. There should be continuity.

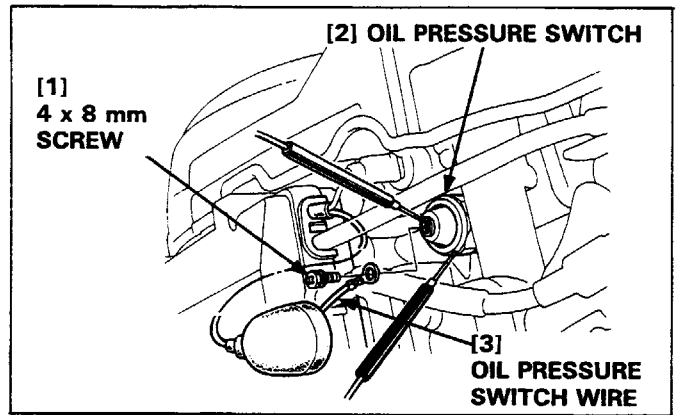


• PULSER COIL

NOTE

- It is not necessary to remove the coil: Remove the engine cover and disconnect the pulser coil connector from the right side of the engine (P. 6-3).

Attach the tester lead to each terminal and measure the resistance between the terminals.

	PC1 (Bu)	PC2 (Bu/Y)	PC3 (Bu/G)
GND (Bl)	288 – 352 Ω	288 – 352 Ω	288 – 352 Ω

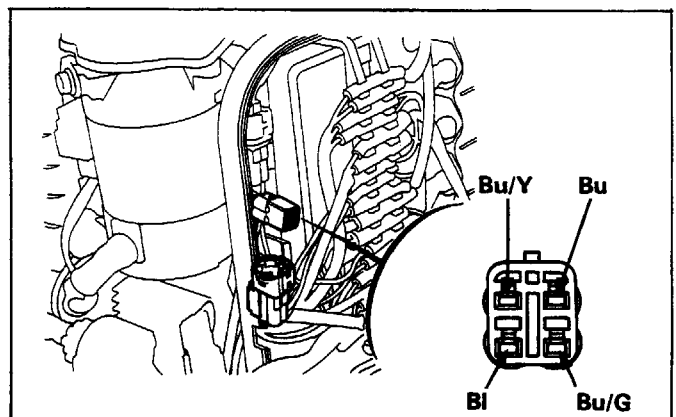


• EXCITER COIL

NOTE

- For exciter coil replacement, see page 6-2.

Measure the resistance between each terminal of the exciter coil with the tester.

Resistance	168 – 227 Ω
------------	--------------------

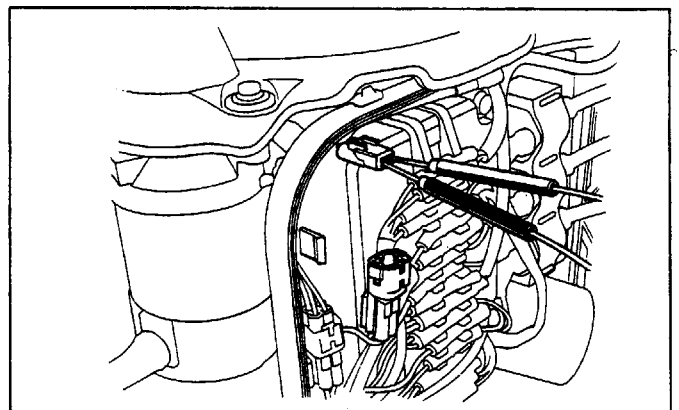


• CHARGING COIL 12V-6A

NOTE

- It is not necessary to remove the coil:
Remove the engine cover and disconnect the charging coil connector from the right side of the engine (P. 6-2).

Measure the resistance between each terminal of the charging coil with the tester.


Resistance	0.20–0.26 Ω
------------	--------------------

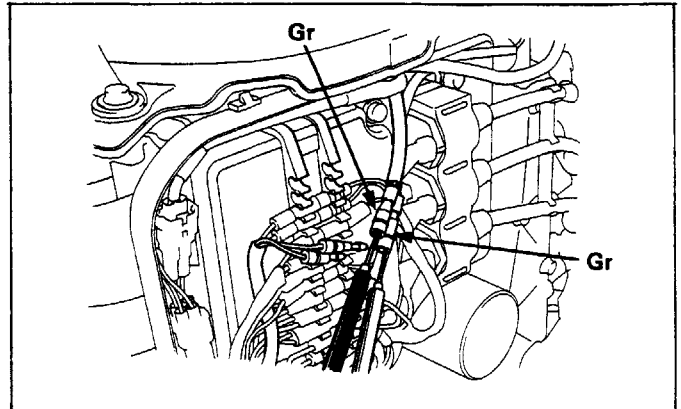

• CHARGING COIL 12V-10A (OPTIONAL)

Measure the resistance between each terminal of the charging coil kit with the tester.

Resistance	0.17–0.23 Ω
------------	--------------------

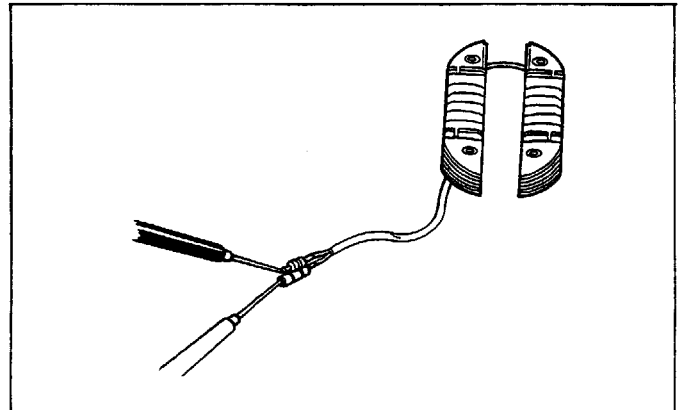

• IGNITION COIL

NOTE


- For ignition coil replacement, see page 16-4.

<Primary side resistance>

Measure the resistance of the primary coil between the two terminals at the ignition coil.

Resistance	0.19–0.23 Ω
------------	--------------------

[1] <PRIMARY SIDE>

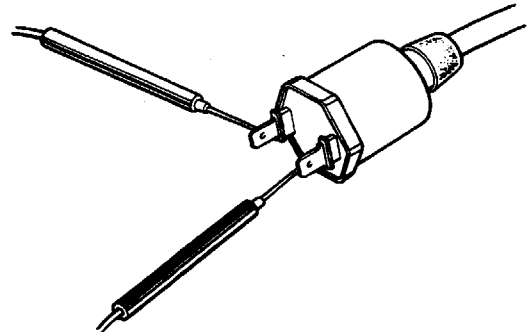

<Secondary side resistance>


Remove the spark plug cap and measure the resistance of the secondary coil between the plug wire and the green terminal.

Resistance	2.8–3.4 k Ω
------------	--------------------

NOTE

- A false reading will result if the spark plug cap is not removed.

[1] <SECONDARY SIDE>

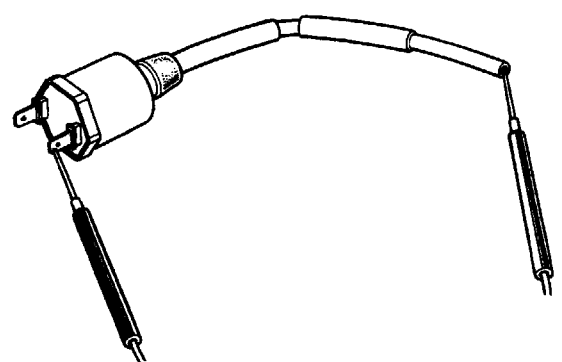


• SPARK PLUG CAP

Measure the resistance of the spark plug cap by touching one test lead at the wire end of the cap, and the other at the spark plug end.

Resistance	7.5–12.5 kΩ
------------	-------------


NOTE

- RECOMMENDED MULTITESTERS:
TH–5H (KOWA Analogue type)
SP–10D (SANWA Analogue type)

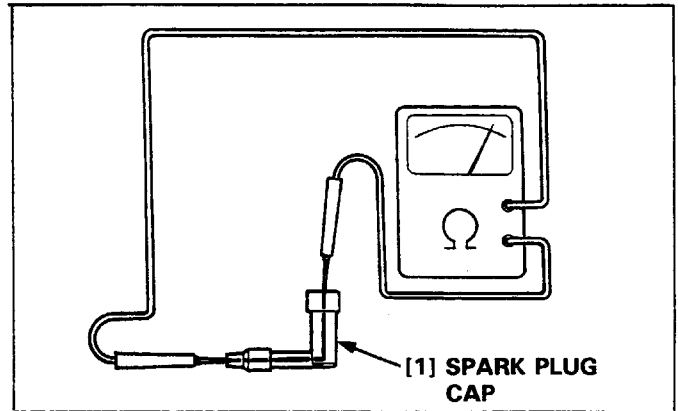

• STARTER SWITCH (Tiller handle type only)

Connect the starter switch 2P connector, attach the tester leads to the 2P connector terminal joints, and push the starter switch knob. The switch is normal if there is continuity when the knob is pushed.

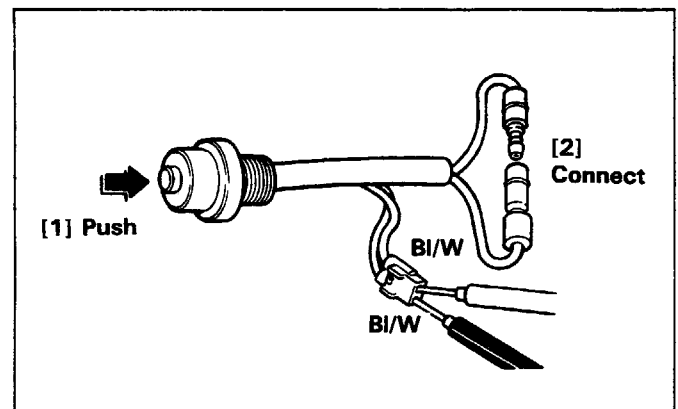


• COMBINATION SWITCH

Check for continuity between the terminals with the switch in each position.

Position \ Color	E (Bl)	IG (Bl/R)	BAT (W/Bl)	LO (Bl/Y)	ST (Bl/W)
OFF	○—○				
ON			○—○		
START			○—○	○—○	○—○

○—○: Continuity

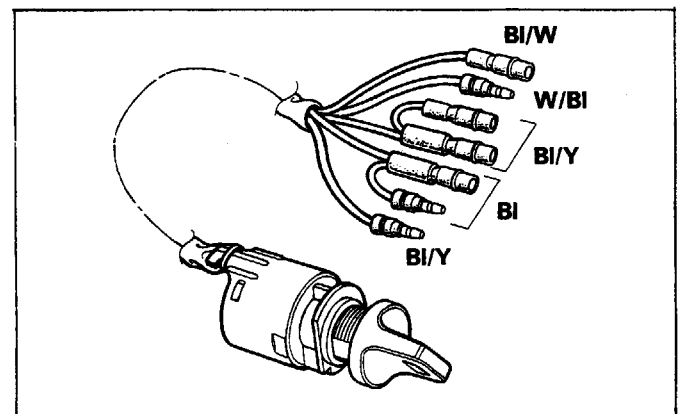

• INDICATOR LAMP

NOTE


- Be sure the battery is in good condition before performing this test.

Apply 12V of voltage to the Br terminal and connect the switches 1, 2, and 3 to the Bl, R, and Y terminals respectively.

When SW1 is ON: The green lamp should turn on.


When SW1 and SW3 are ON: The green lamp should go off.

When SW2 is ON: The red lamp should turn on.

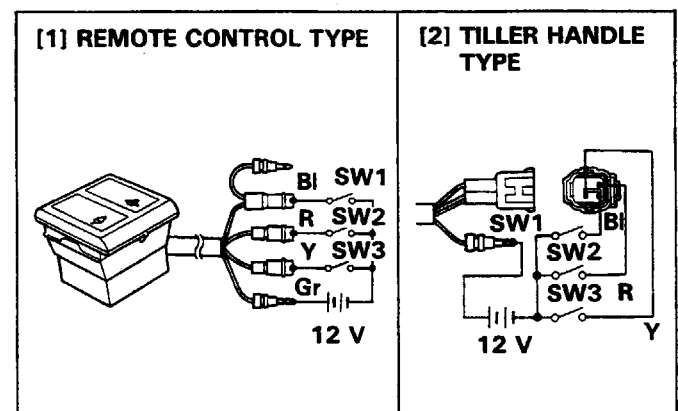


• **POWER TILT MOTOR (Power trim & tilt type only)**

Check for continuity between the terminals.

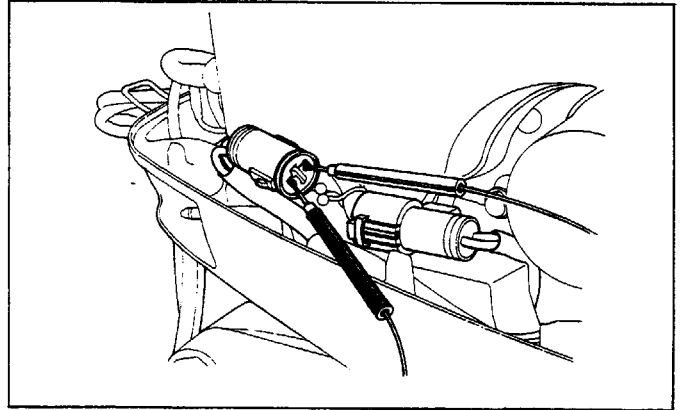


• **SOLENOID SWITCH (Remote control type only)**

Attach the tester leads to the two terminals at the solenoid switch and check for continuity. There should be continuity when the switch knob is pushed.

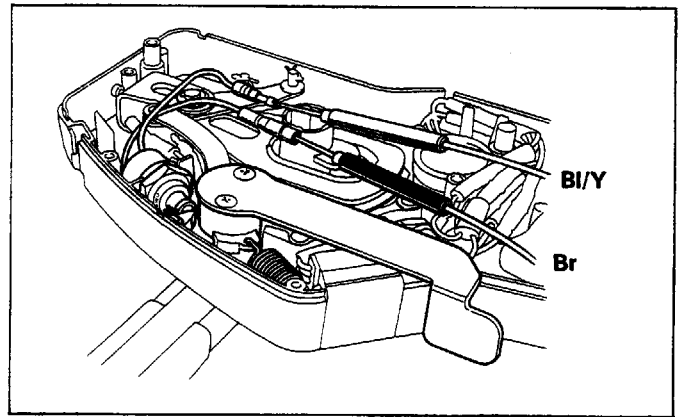

• **THROTTLE SWITCH (Power trim & tilt type only)**

Attach the tester leads to the two terminals at the throttle switch and check for continuity. There should be continuity when the switch knob is pushed.

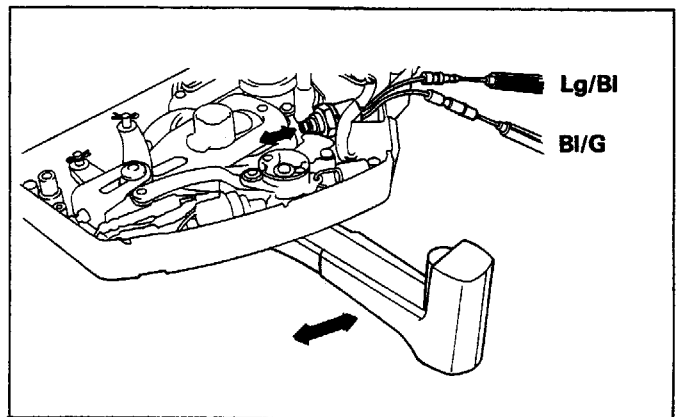


• **WARNING BUZZER (Remote control type only)**

NOTE

- Be sure the battery is in good condition before performing this test.

Connect the black/yellow terminal of the warning buzzer to the positive (+) terminal of the 12V battery and the yellow/green terminal to the negative (-) terminal of the battery. The warning buzzer should sound.

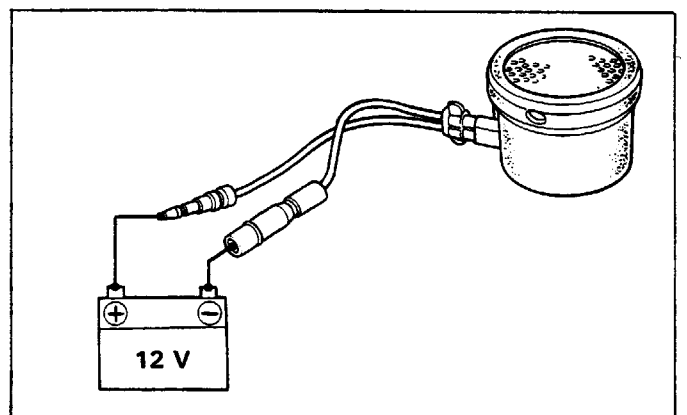


• EMERGENCY STOP SWITCH

Attach the tester leads to the two terminals of the emergency stop switch and check for continuity.


Switch clip	Continuity
Yes	No
No	Yes

In case that the switch clip is set, there should be continuity when the button is pushed.

[1] (Remote control type)

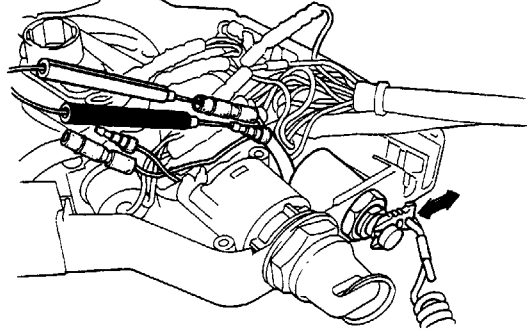

[2] (Tiller handle type)

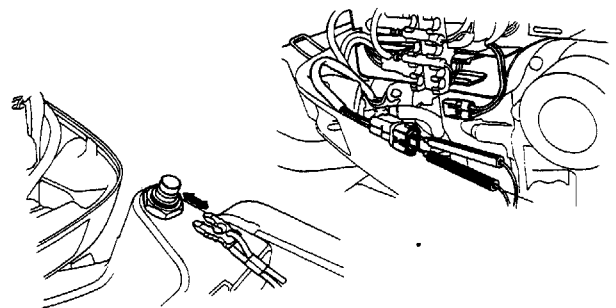

OPERATION


ELECTRICAL SYSTEM	17-2
POWER TRIM & TILT SYSTEM	17-10
POWER TRIM & TILT FUNCTION	17-12
GAS ASSISTED SYSTEM	17-19
CARBURETOR ACCELERATION/ DECELERATION SYSTEM	17-22

ELECTRICAL SYSTEM

~1. Electronic advance CDI system

The BF35A · 45A is equipped with the electronic advance maintenance free CDI system which is excellent in sparking performance and has no mechanical contact.

<Basic circuit diagram (for one cylinder)>

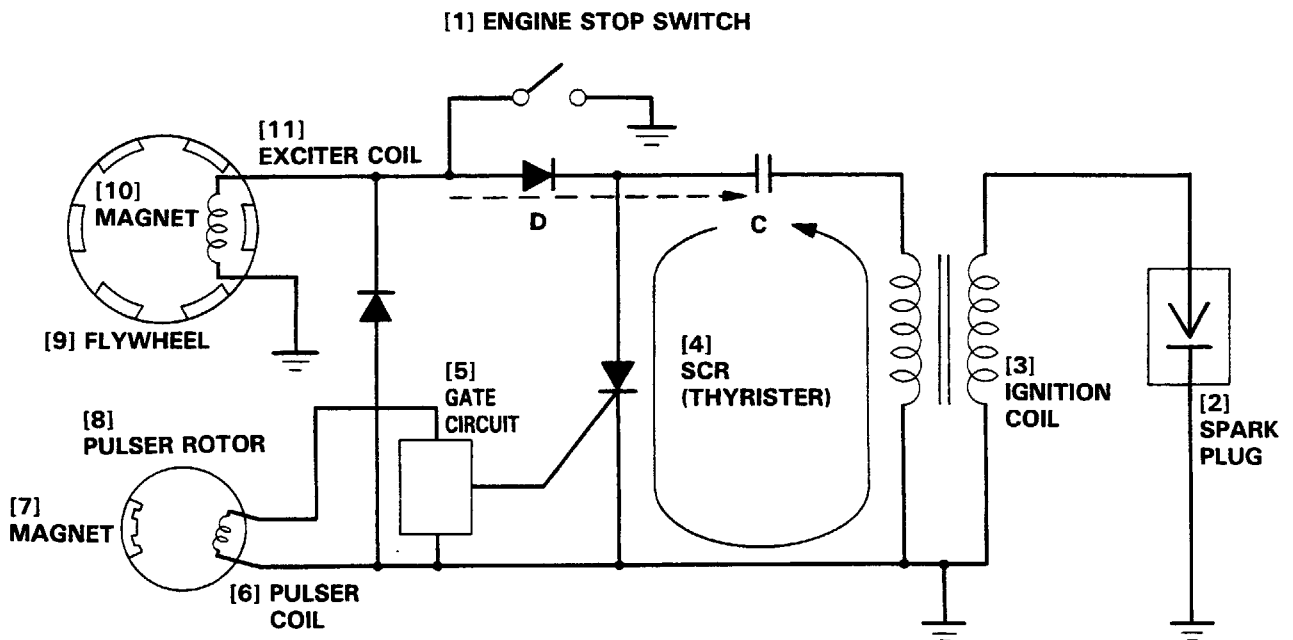


<Operation>

- 1) When the flywheel rotates, the electric power generated at the exciter coil is rectified by the diode (D) and charged into the ignition condenser (C) (shown by the broken line in the above diagram). The thyristor (SCR) is OFF this time.
- 2) When the magnet on the pulser rotor passes the pulser coil, the electric pulser coil signal is emitted by the magnetic force. This signal passes the gate circuit, turns ON the thyristor, and discharges the electric charge from the condenser. When the discharged current flows through the ignition coil primary circuit, high voltage is generated in the secondary circuit and the spark plug sparks (shown by the solid line in the above diagram).
- 3) Spark advance
The BF35A · 45A is equipped with the electronic advance spark system, which advances the ignition timing when the gate circuit turns ON the thyristor according to the engine speed to obtain the high speed power.

<3 cylinder ignition system>


This system is equipped with the three ignition condensers and an independent ignition system is provided for each cylinder.

- Basic circuit diagram

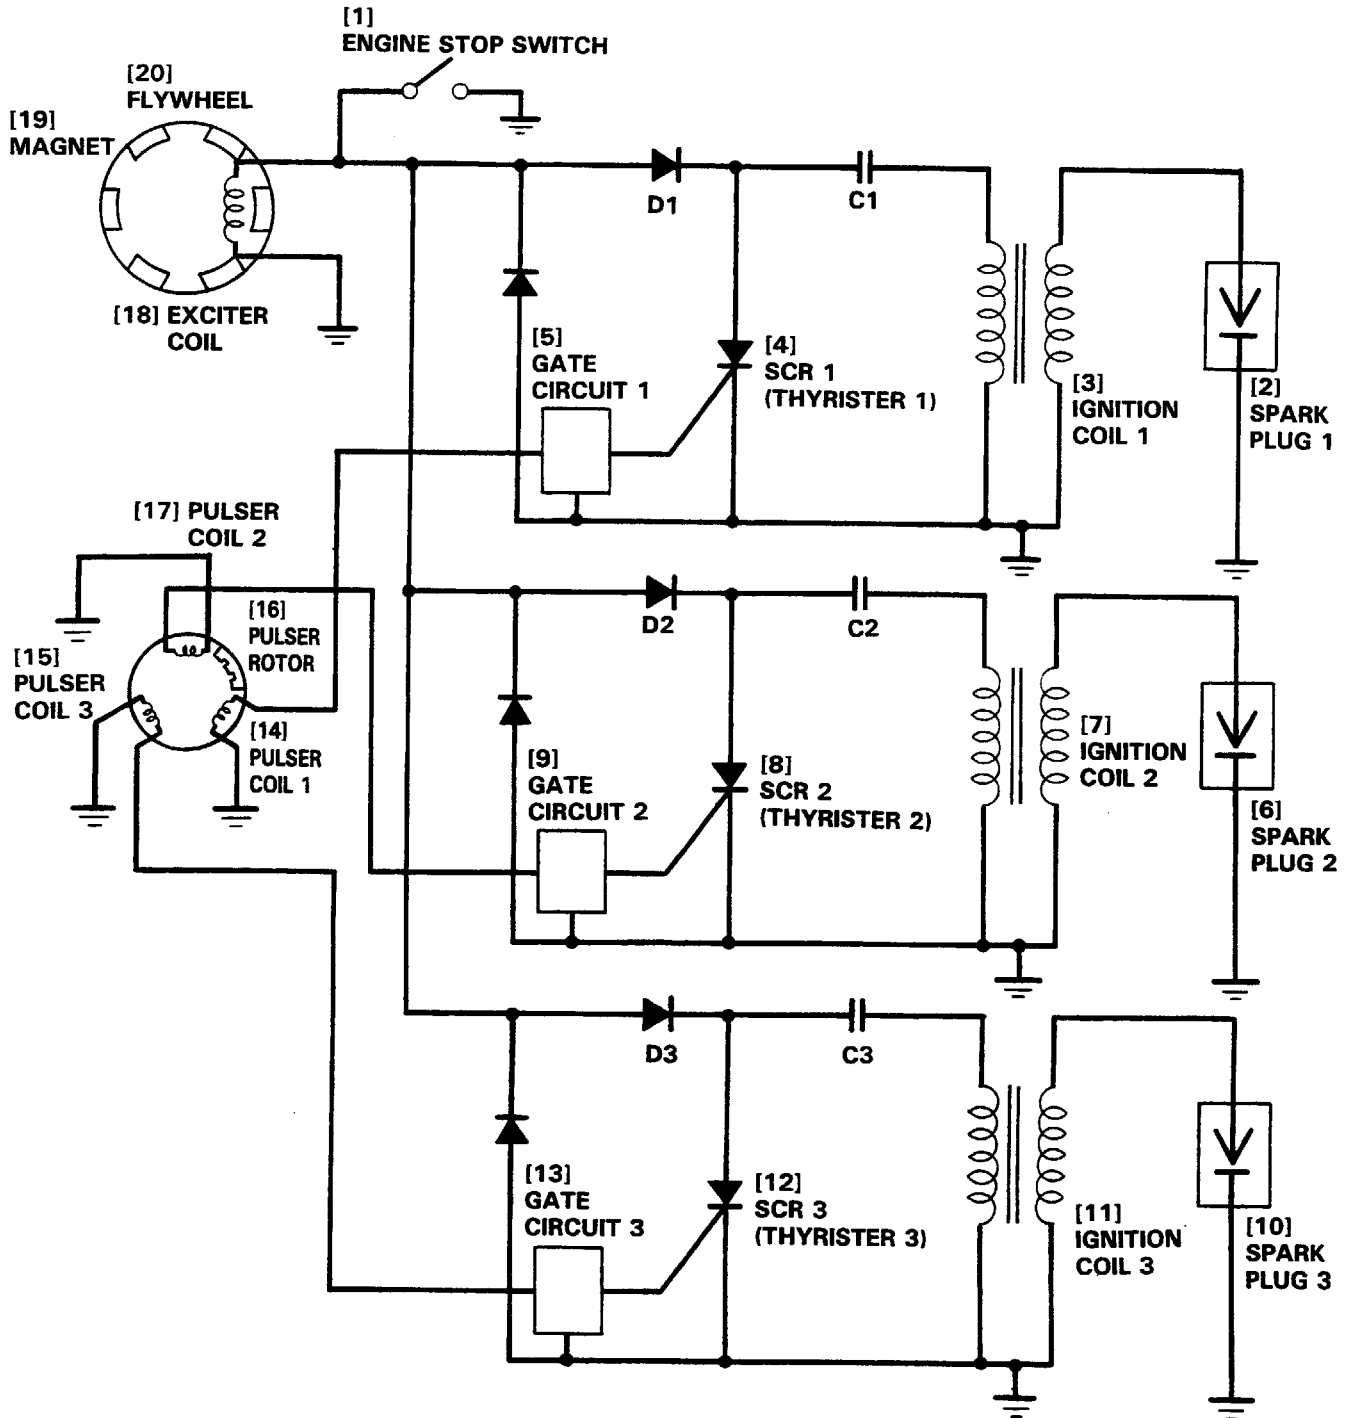


~2. Overrev limiter

The overrev limiter is provided in the CDI unit circuit to prevent the overrevving of the engine.
Set speed of overrev limiter: $6,600 \pm 200 \text{ min}^{-1}$ (r.p.m.).

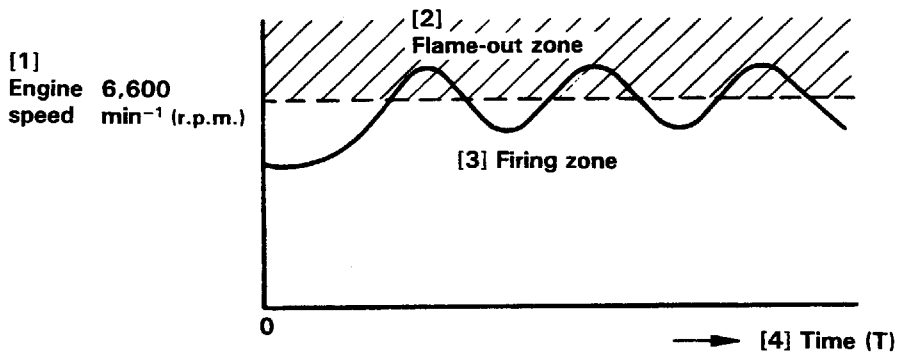

<Basic circuit diagram (for one cylinder)>

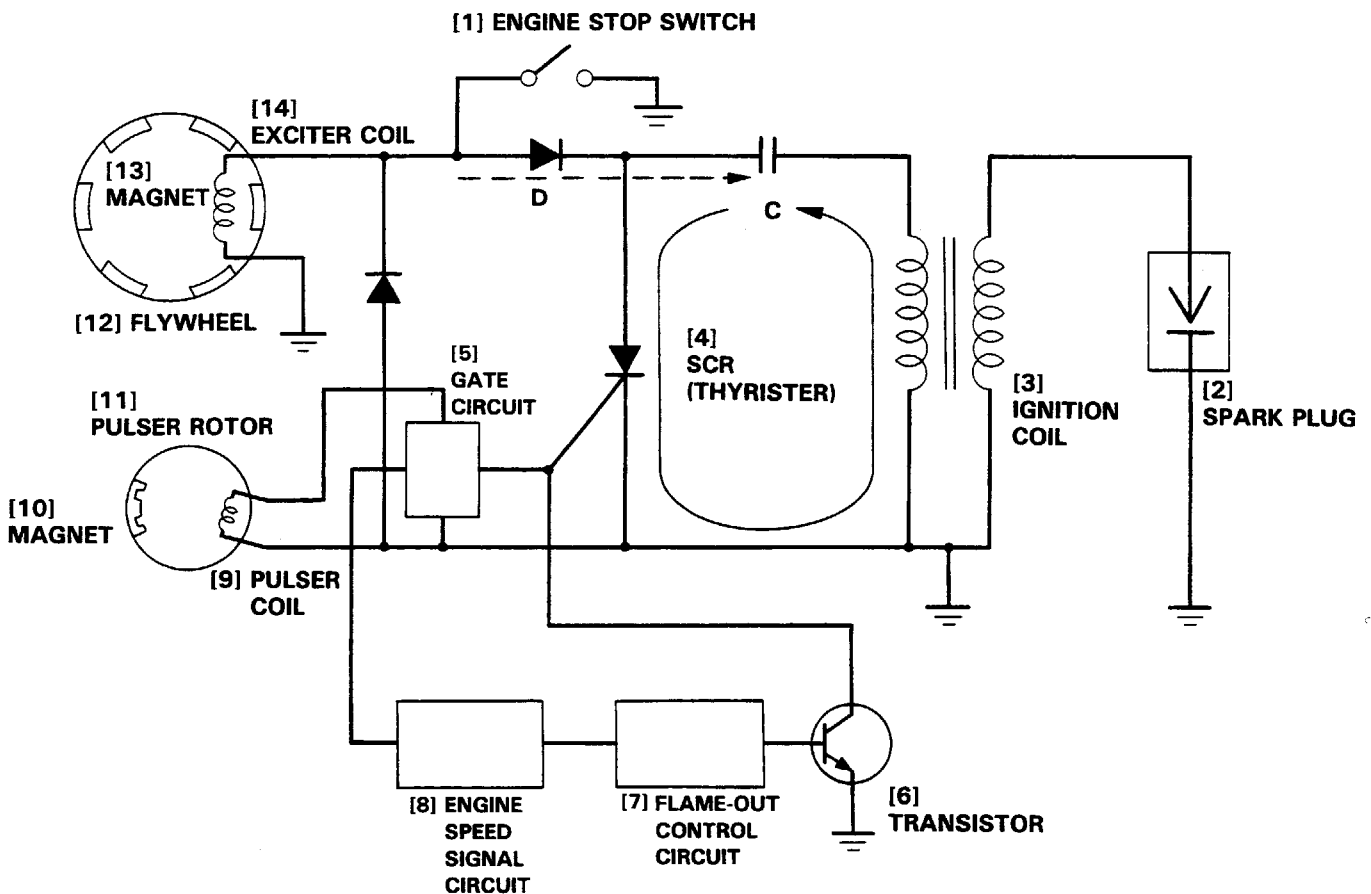

<Operation>

- 1) Getting the engine speed signal from the pulser coil gate circuit, the flame-out control circuit detects whether it is over or below the set speed.
- 2) When the speed is over the set speed, the transistor (TR) turns ON and short circuits the thyrister (SCR) trigger signal to the ground to flame out.

*The above procedures are performed to flame out the No. 2 and No. 3 cylinders.
Stable engine speed while under way is thereby obtained.


~3. Overheat/oil pressure alert system

The BF35A · 45A is equipped with the overheat/oil pressure alert system which protects the engine by controlling the engine speed in the CDI circuit when the engine is overheated or oil pressure drops.

<Principal operation>

When a trouble occurs, the system slows down the engine speed gradually, as a sharp drop of the engine speed is very dangerous for the operator as if the boat is braked suddenly. When the trouble is solved, it also increases the engine speed slowly and gradually. The system is provided with the indicator lamps and buzzer sound (remote control type) to indicate the cause of trouble to the operator.

1) Engine speed control

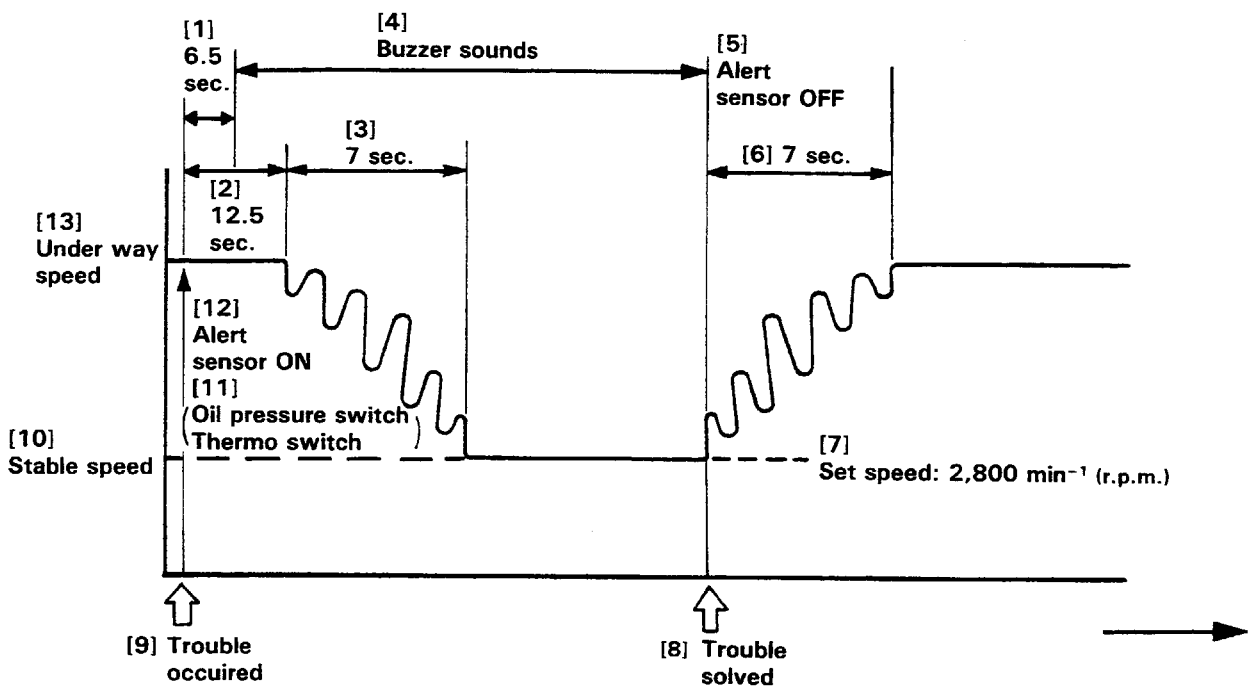

Engine speed down boat slows down

Firing and flaming out is repeated electrically to control the engine speed.

1. Engine speed: below the stable speed

When the engine speed is below the stable speed, it increases to the stable speed according to the throttle angle.

2. Engine speed: above stable speed

The engine speed slows down gradually from the under way speed and stabilizes at the stable speed (approximately 2,800 r.p.m.). Then the engine speed does not increase regardless of the throttle angle.

2) Warning system

The warning system sets the time of the timer before the engine speed control is started and notifies the operator of the oil pressure switch/thermo switch operation with the indicator lamps (LED).


Item	Color of the lamp	When faulty
Oil pressure switch	Green	OFF
Thermo switch	Red	ON

<Detection>
Thermo switch: ON when temperature is above the set temperature
Oil pressure switch: ON when oil pressure is below the set pressure

- If the product is the steering handle type, the indicator lamps are installed on the outboard.
- If the product is the remote control type, the operator does not notice the trouble easily before the engine speed control is started, as he must frequently turns back while driving if the indicator lamps are mounted on the outboard. Therefore, the indicator lamps are mounted on the remote control box and the buzzer in the remote control box sounds after the indicator lamps turn ON (OFF).


<Unit alert system operation (for one cylinder)>

1) Basic circuit diagram

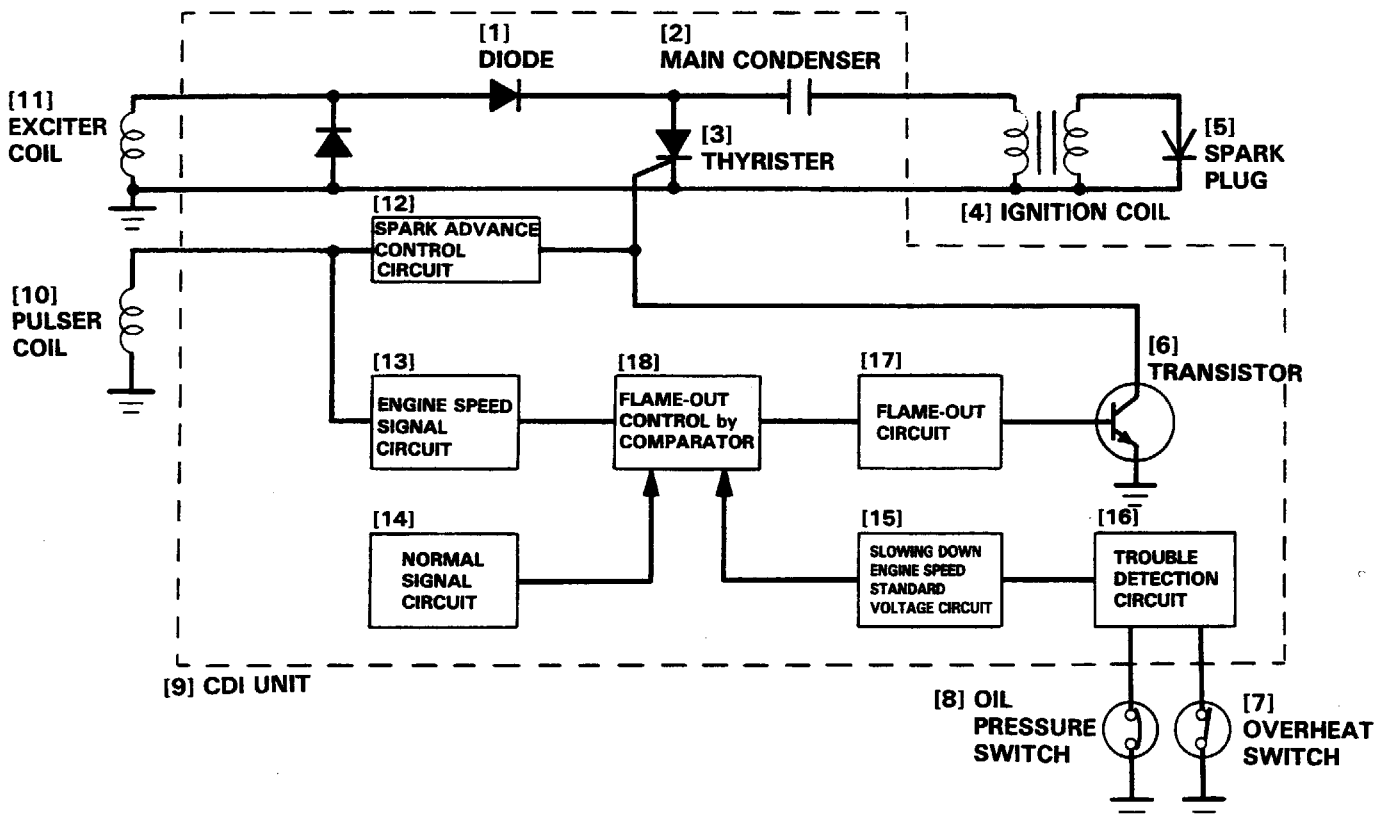


2) Operation

1. When the oil pressure switch or thermo switch detects the trouble signal, the comparator circuit compares the condenser discharged voltage curve of the slowing down engine speed standard voltage circuit with the engine speed voltage signal and detects whether the speed is above or below the specified speed.
2. Getting the signal from the comparator, the flame-out circuit turns ON/OFF the transistor (TR) and controls the thyrister gate.
3. The slowing down engine speed standard voltage stabilizes at the preset stable engine speed and flaming-out and firing are repeated at this stable engine speed.
4. After the trouble to the oil pressure switch or thermo switch is removed and trouble signal stops, the unit alert system repeats the above 1 and 2.

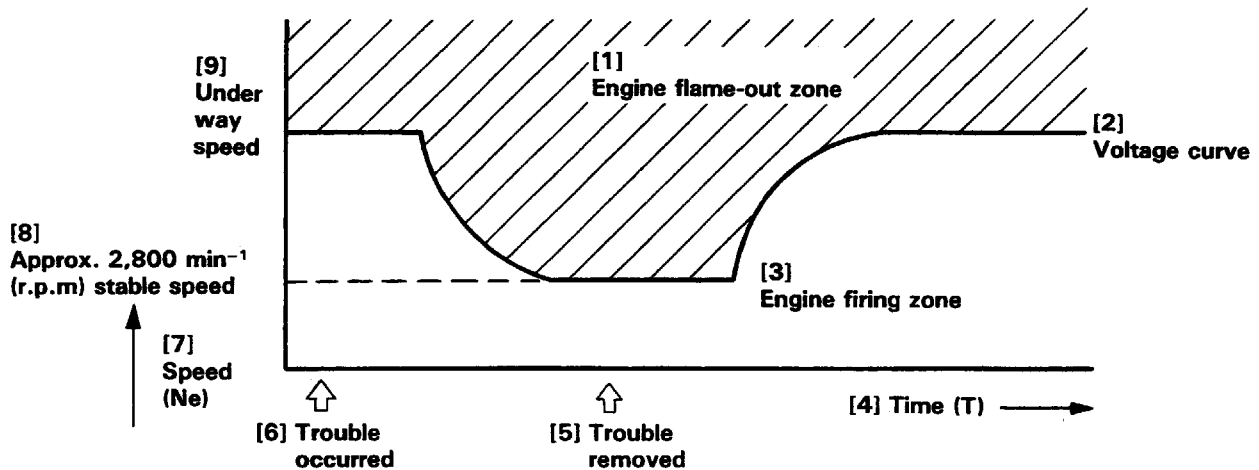

<Alert indicator lamp circuit>

1) Basic circuit diagram

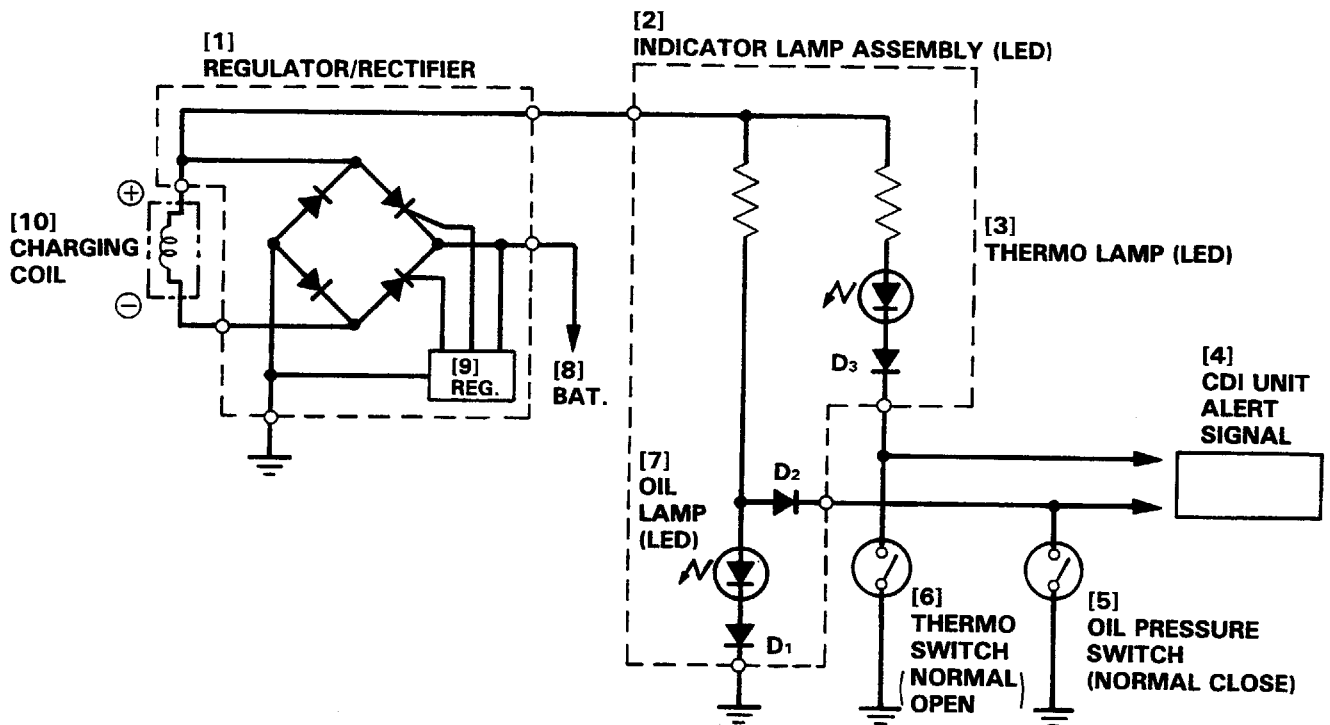

2) Operation

1. The direct current supplied from the charging coil and rectified to the half wave by the rectifier flows to the thermo lamp and oil lamp to light.
2. The thermo switch turns ON when the temperature is above the set temperature and the current flows through the lamp circuit to light. The alert ON signal is sent to the CDI unit when the thermo switch is ON.
3. The oil pressure switch turns OFF and the current flows to the oil lamp when the oil pressure is applied to the engine while running. When the oil pressure drops below the set pressure, the switch turns ON, the current flows through the diode D2 to the oil pressure switch, and the current to the oil lamp is shut off to turn the lamp OFF. The alert ON signal is sent to the CDI unit when the switch is ON.


POWER TRIM & TILT SYSTEM

The BF35A·45A has a type equipped with the power trim & tilt system which hydraulically raises/lowers the outboard by simply pressing on the switch.

~1. Power trim & tilt motor drive system

The power trim & tilt switch and power tilt switch are installed on the control knob of the remote control box and on the left side of the outboard under case. Press on the either one of these switches, and the relay activates and controls the rotating direction of the motor, and the outboard is raised/lowered by the hydraulic cylinder.

<Basic circuit diagram>

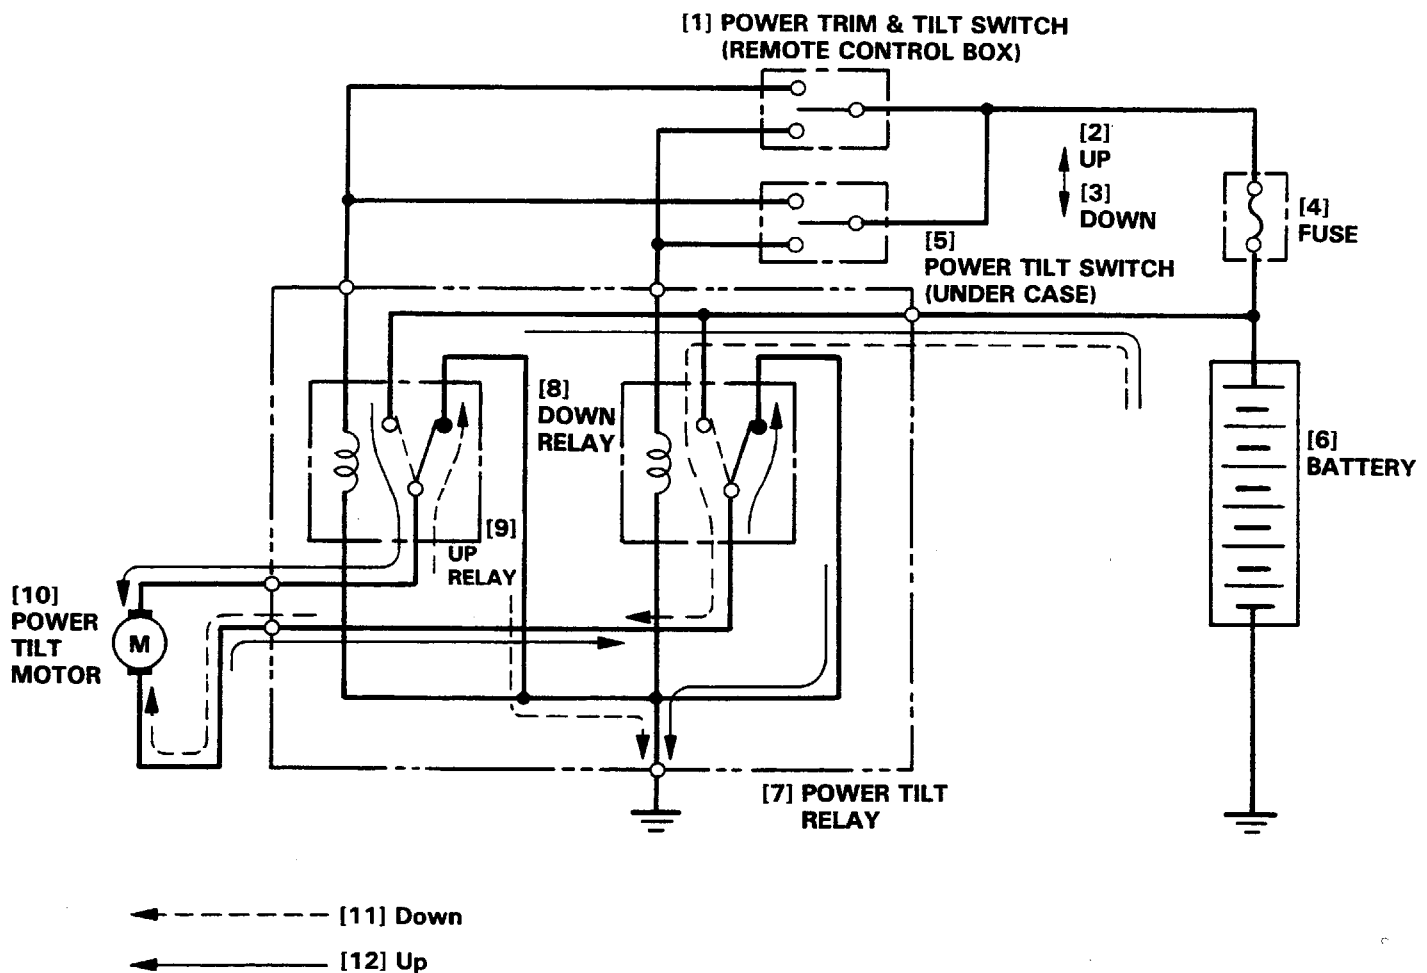


<Operation>

- 1) Turning the power trim & tilt switch or power tilt switch ON to the UP side, the UP relay in the power tilt relay activates, contact point moves in the direction shown by the solid line and arrow, electric current flows in the direction shown by the broken line and arrow, and the motor rotates in the normal direction.
- 2) Turning the switch ON to the DOWN side, the relay in the power tilt relay activates, contact point moves in the direction shown by the dot line and arrow, and the motor rotates in the reverse direction.

~2. Power trim warning system

The BF35A · 45A is equipped with the warning system which sounds when the trim angle exceeds 20° so that the power trim can be used at the safe cruising angle. However, as the power tilt is used for the maintenance and cruising in shallows, the warning buzzer does not sound when the throttle angle is below the set angle with the shift lever in neutral, reverse, or forward position.

<Basic circuit diagram>

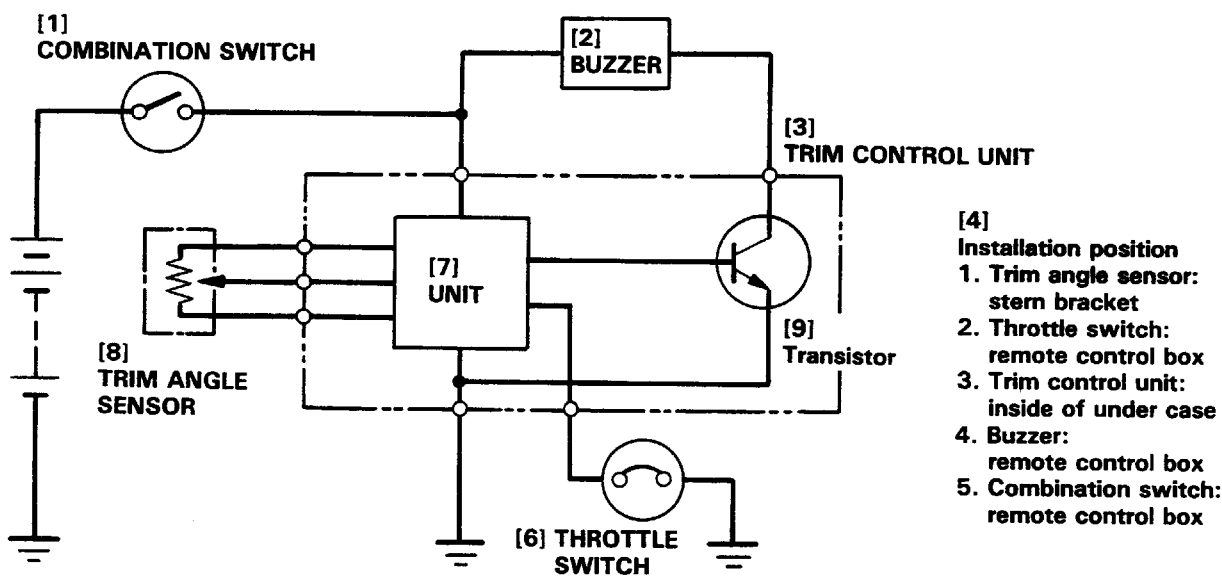


<Operation>

- 1) Trimming when the throttle switch is OFF (i.e. over the certain set throttle angle with the shift lever in forward position and/or reverse position). The unit detects the voltage when the trim angle sensor exceeds the certain set angle, turns the transistor ON and OFF at regular intervals, and sounds the buzzer intermittently.
 - 2) Tilting when the throttle switch is ON (i.e. under the certain set throttle angle with the shift lever in neutral, reverse, and/or forward position). The buzzer does not sound independently of the trim angle sensor.
- *The buzzer also functions for the oil pressure alert system. When the power trim warning system and the oil pressure alert system operate simultaneously, the buzzer sounds continuous beep for the alert of the oil pressure.

POWER TRIM & TILT FUNCTION

- 1) Power tilt (including cruising in shallows):
Hydraulically raises/lowers the outboard to the designated position by pressing the button.
A range where is not under the large thrust such as for cruising in shallows, mooring, etc. (range of 20° – 60° in the drawing.)
- 2) Power trim:
Adjusts the balance of the boat while acceleration or cruising, resulting in improved acceleration, maximum speed, operationability, and fuel consumption.
Requires large lifting power as the outboard is under the thrust while operation (range of 0° – 20° in the drawing.)
- 3) Reverse lock:
Maintains the reverse thrust. When collision with the obstacles in the water, it unlocks to absorb the impact.
- 4) Shock absorber:
Reduces the impact when the reverse lock is released.

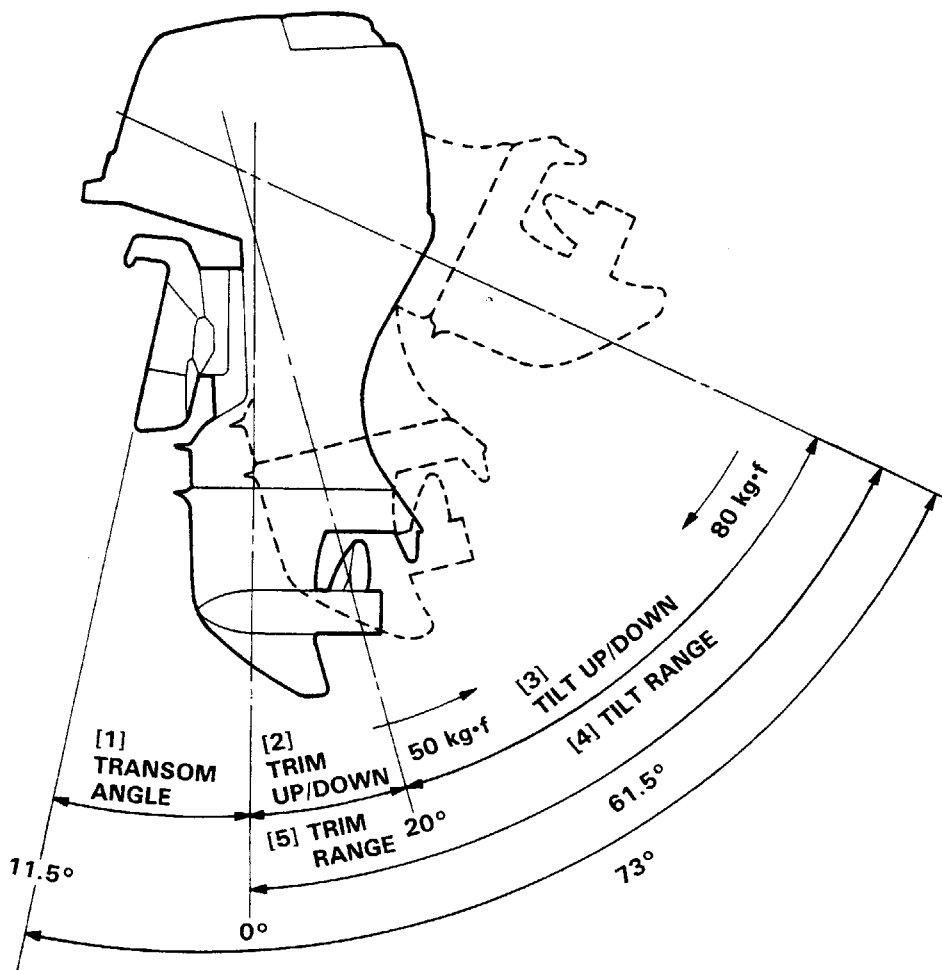

<Construction and operation>

• Power trim & tilt type

- [1]
• **UP/DOWN relief:**
Operates to protect the circuit and the outboard when it is caught with the obstacles during the full tilt up/down or during operation.
Left side: Down relief valve
Right side: Up relief valve

- [9]
• **Pump:**
Supplies oil to the UP side when rotating in normal direction, and to the DOWN side when rotating in reverse direction.


- [8]
• **Spool valve:**
Moves to right or left and switches the oil flow according to the rotating direction of the pump.

- [7]
• **Manual valve:**
Opens the circuit to allow the manual operation, when the motor or pump becomes faulty.

- [6]
• **Thermal valve:**
Operates to release the pressure, when the excessive thrust is applied or when the internal pressure rises excessively due to the change in temperature.

- [5]
• **Return valve:**
After the collision, oil released between the piston and free piston returns through the return valve to the upper chamber and the outboard tilts down.

- [3]
• **Shock valve:**
Operates to release the oil between the piston and free piston and absorbs the impact when the outboard collides with the obstacles in the water.

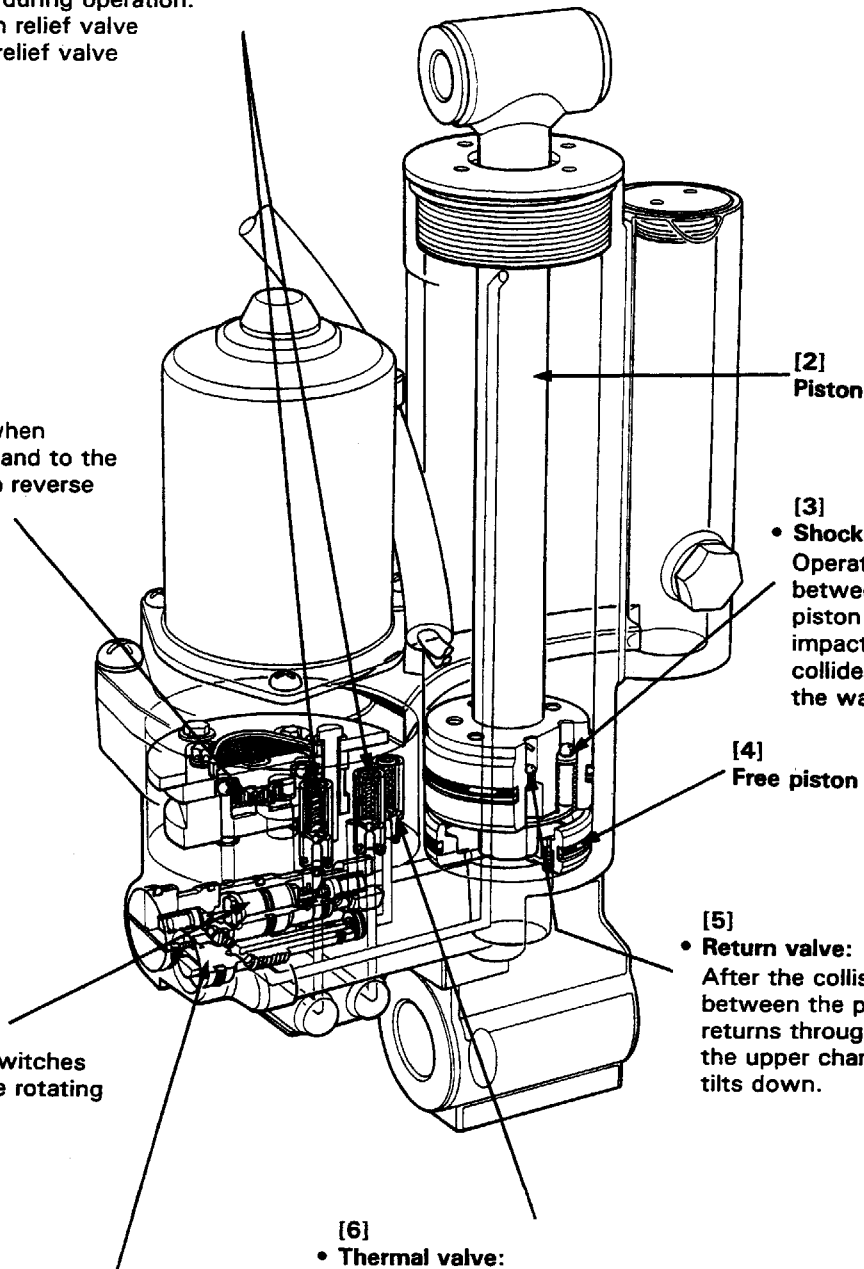


• Hydraulic circuit

<Tilt up operation>

The motor rotates clockwise when the "UP" side of the power trim & tilt switch is pressed, and the oil flows from the gear pump to the spool valve. As this oil moves the spool valve to the left and pushes the left side check valve open, the oil in the upper chamber of the cylinder returns to the gear pump, oil pressure in the oil passage A increases further, right side check valve opens, and the oil flows to the lower chamber of the cylinder and pushes the piston up to allow the outboard motor to tilt up.


The oil in the upper chamber of the cylinder passes through the left side check valve and returns to the gear pump. As oil pressure in the lower chamber of the cylinder increases when the outboard is in the full tilt up position, it is relieved by the up relief valve.

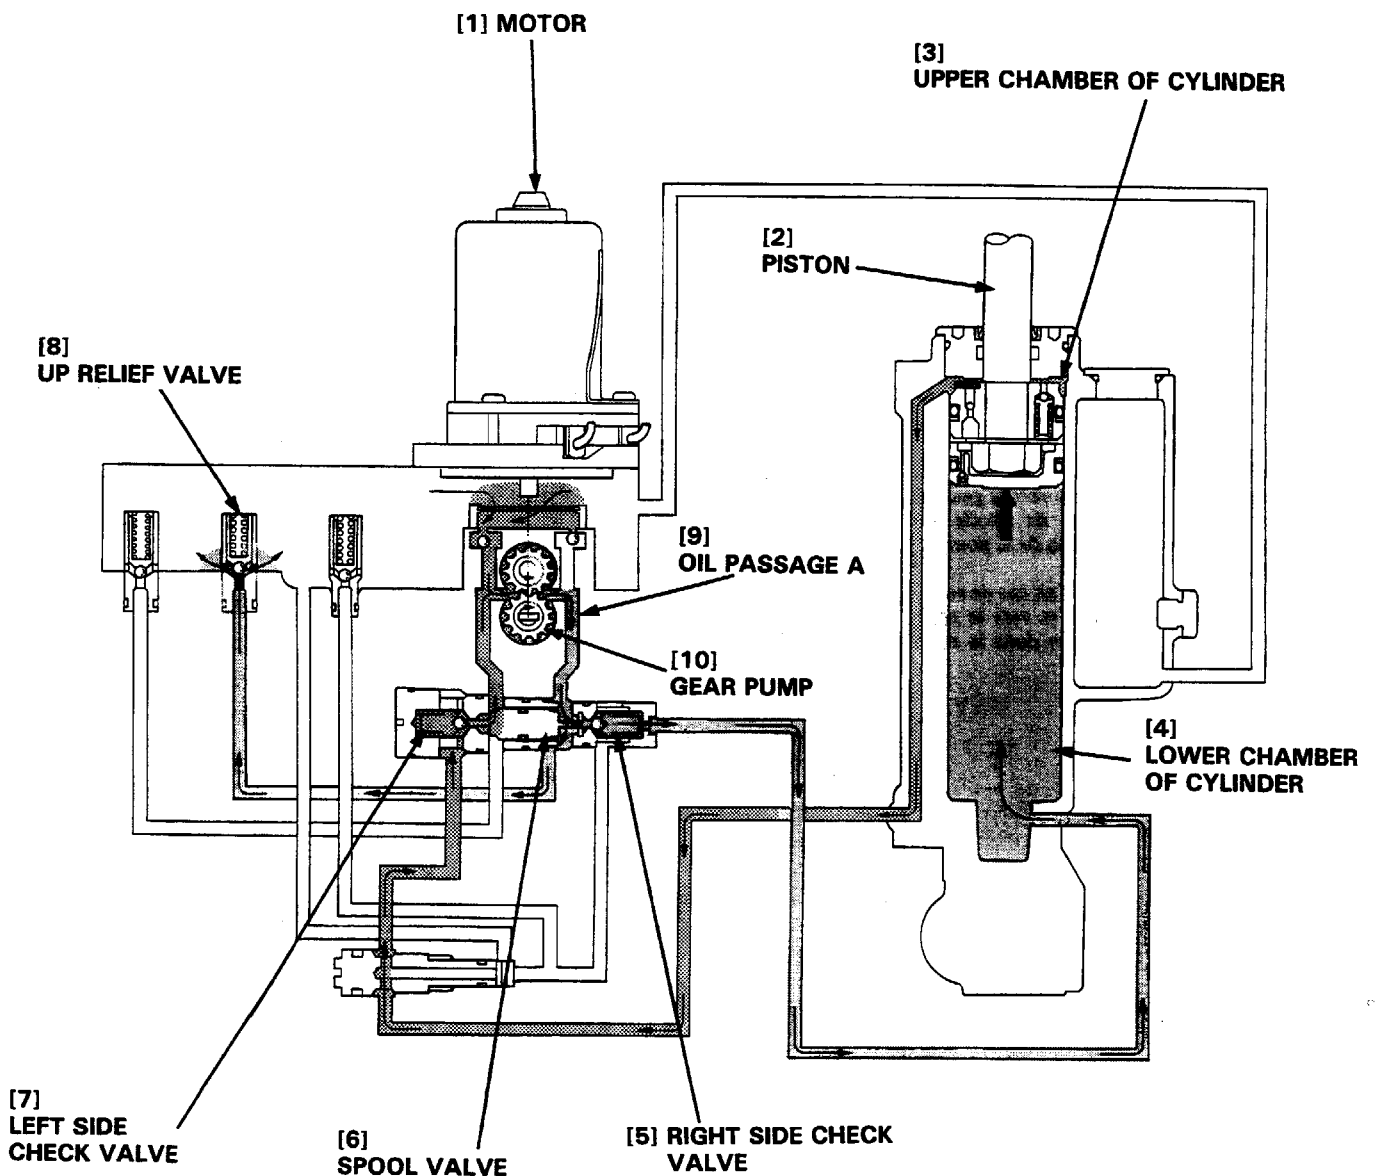

<Tilt down operation>

The motor rotates counterclockwise when the "DOWN" side of the power trim & tilt switch is pressed, and the oil flows from the gear pump to the spool valve. As this oil moves the spool valve to the right and pushes the right side check valve open, the oil in the lower chamber of the cylinder returns to the gear pump, oil pressure in the oil passage B increases further, left side check valve opens, and the oil flows to the upper chamber of the cylinder and pushes the piston down to allow the outboard motor to tilt down.


The oil in the lower chamber of the cylinder passes through the right side check valve and returns to the gear pump. As oil pressure in the upper chamber of the cylinder increases when the outboard is in the full tilt down position, it is relieved by the down relief valve.

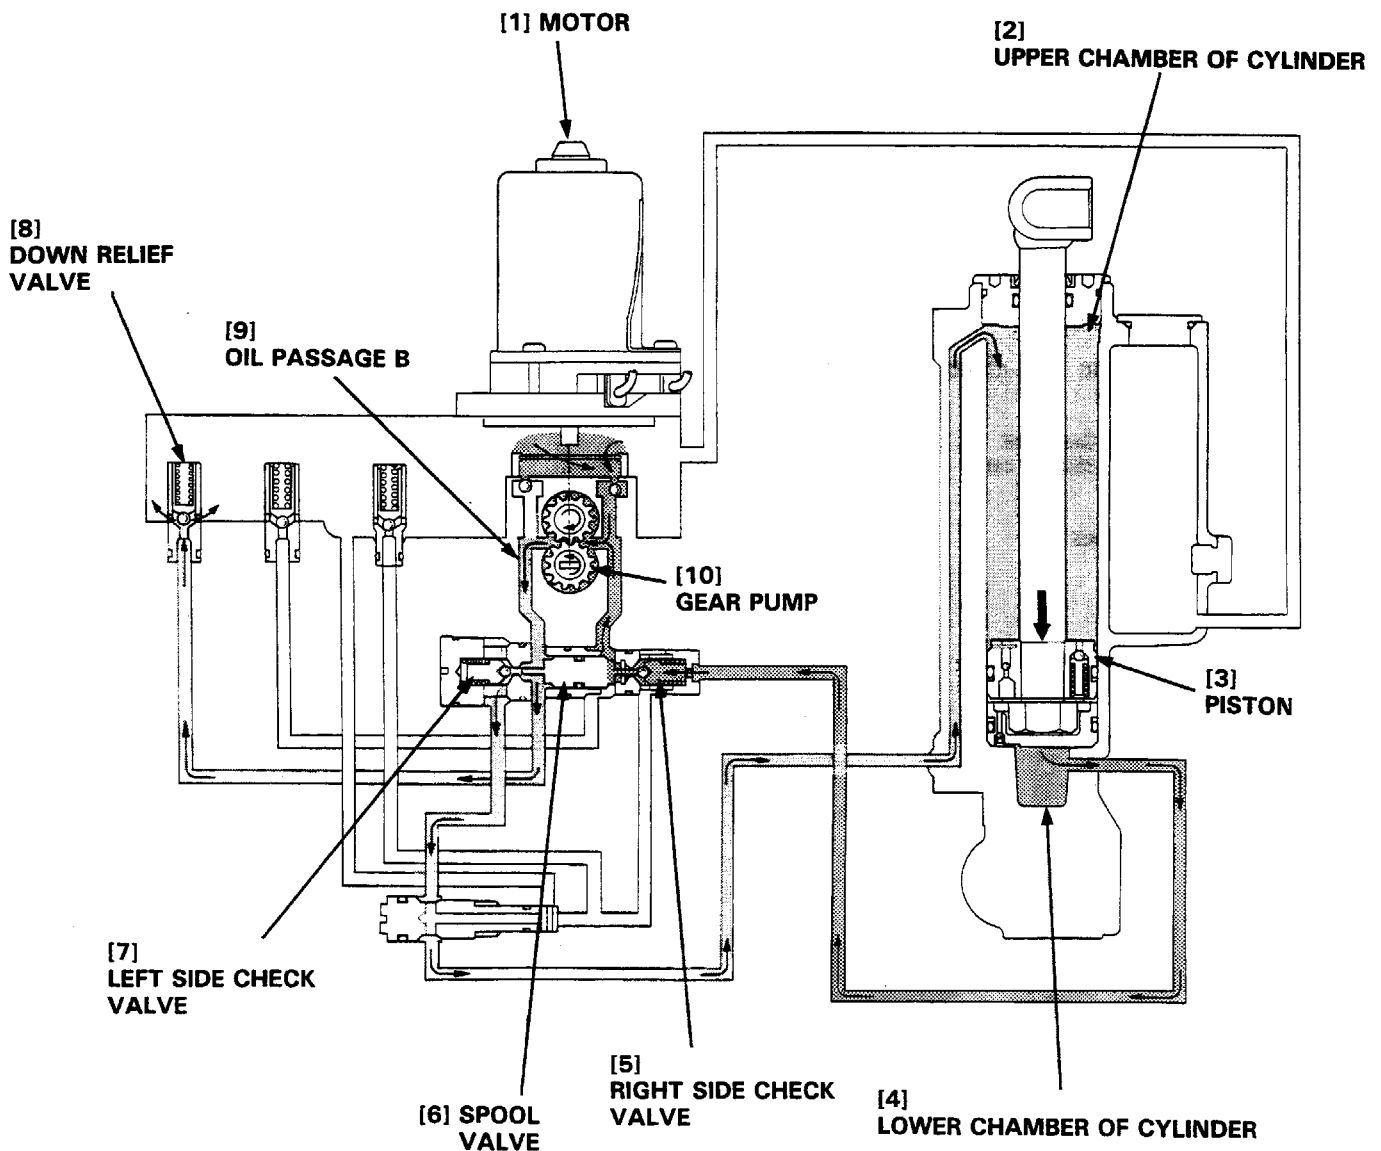

<Manual operation>

The manual valve opens when it is turned counterclockwise, forming the manual passage to allow an easy manual tilt up or tilt down of the outboard motor.


When the manual valve is tightened fully clockwise while tilting up/down the outboard motor, the manual passage closes and the outboard motor locks in the position.

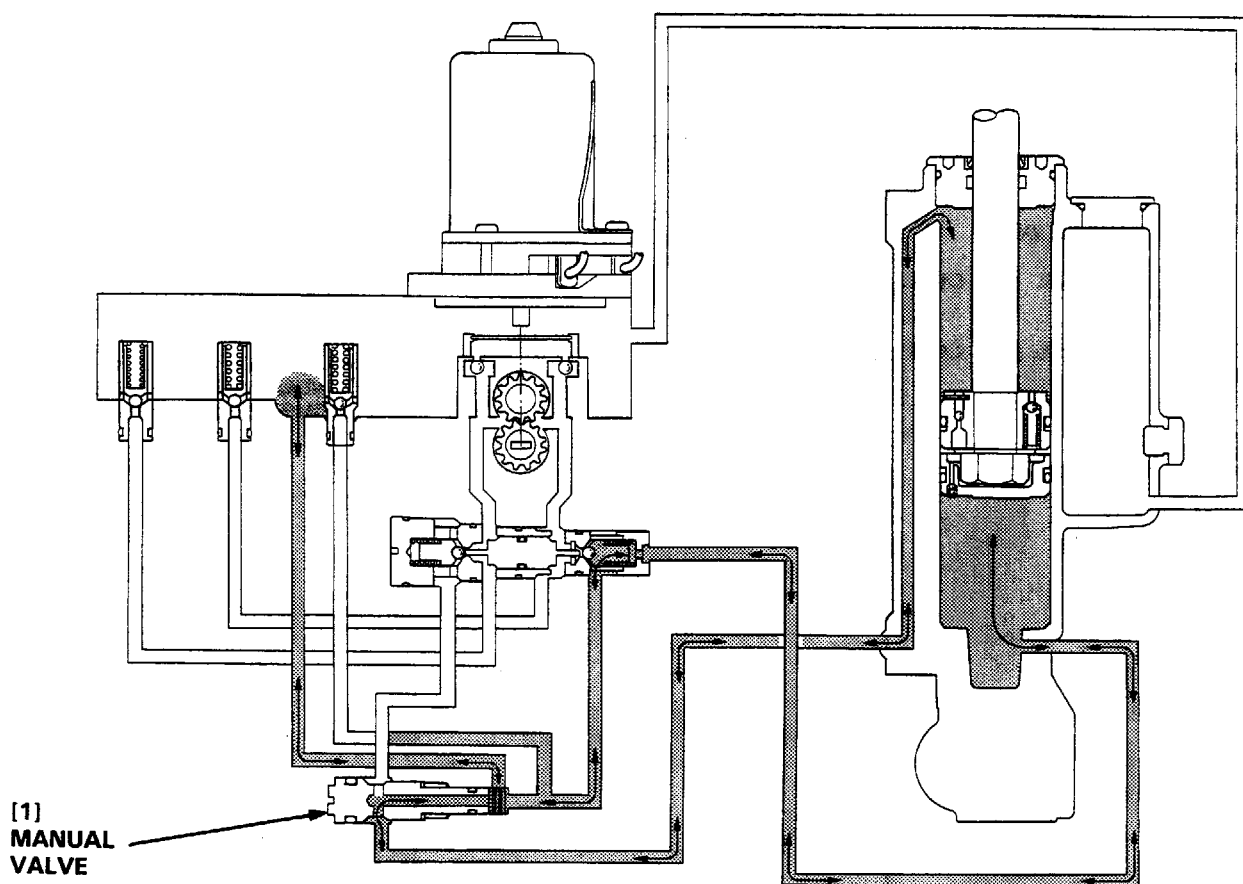

<Shock valve and return valve>


The outboard motor is equipped with the shock valve and return valve to protect it and allow it to cruise at a designated tilt angle.

Because the piston rises and the oil in the upper chamber of the cylinder is pressured when force is applied to the outboard motor from front while cruising at a designated tilt angle, the shock valve opens and the oil flows between the free piston, located under the piston, and the piston to absorb the impact and thereby to protect the outboard motor. When the outboard motor is away from the force, the piston lowers by the dead weight of the outboard motor and the thrust. The oil between the piston and free piston flows through the return valve in the piston and enters the upper chamber of the cylinder.

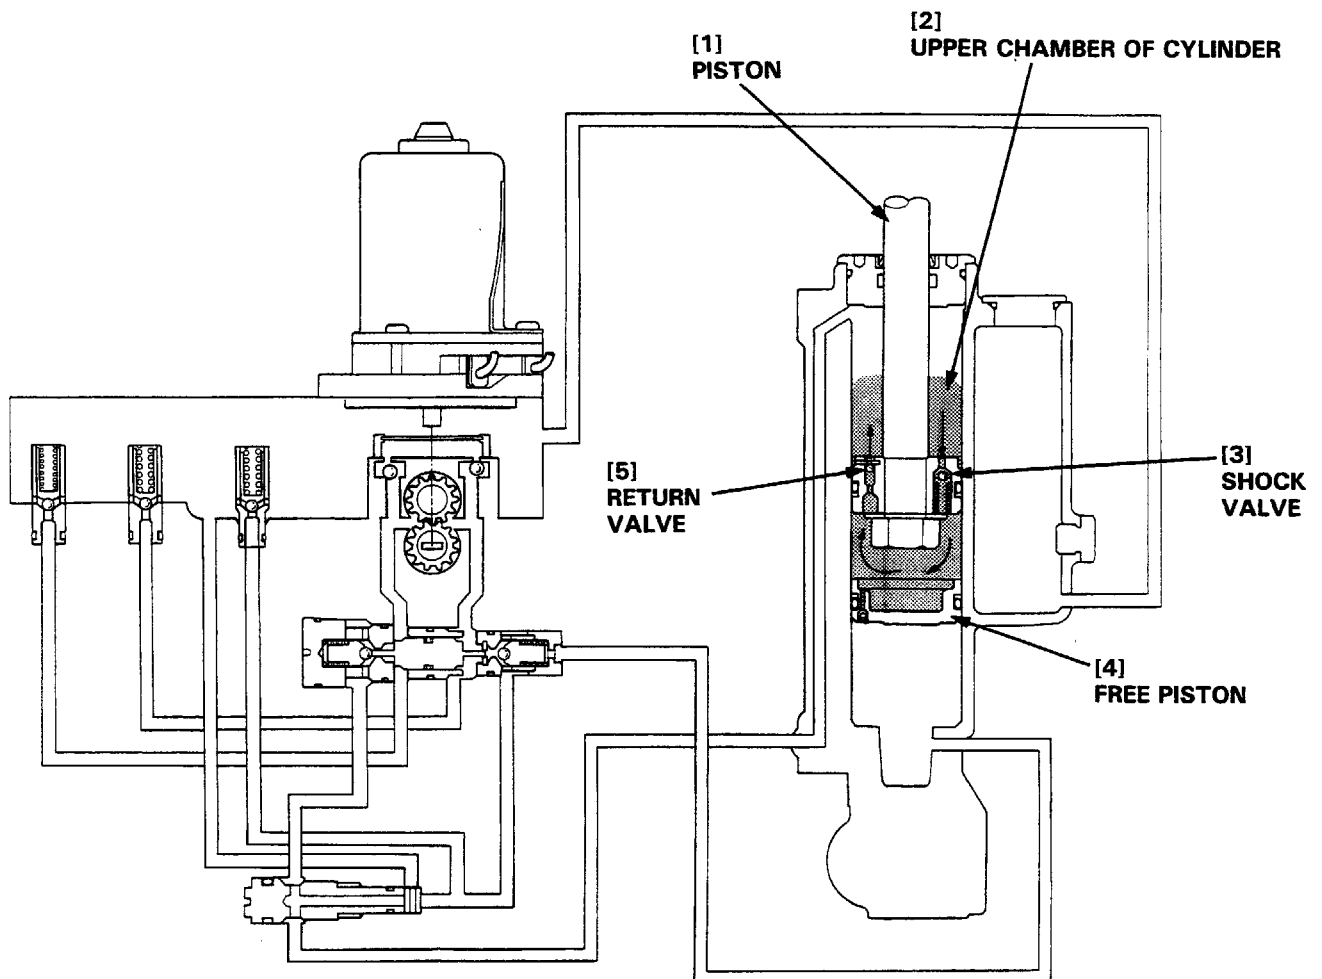

<Thermal valve>


The outboard motor is equipped with the thermal valve to protect it and allow it to cruise at a designated trim angle. Because the piston lowers and oil in the upper chamber of the cylinder is pressured when force is applied to the outboard motor from rear while cruising at a designated trim/tilt angle, the oil flows through the right side check valve and activates the thermal valve to release the oil pressure and thereby to protect the outboard motor.

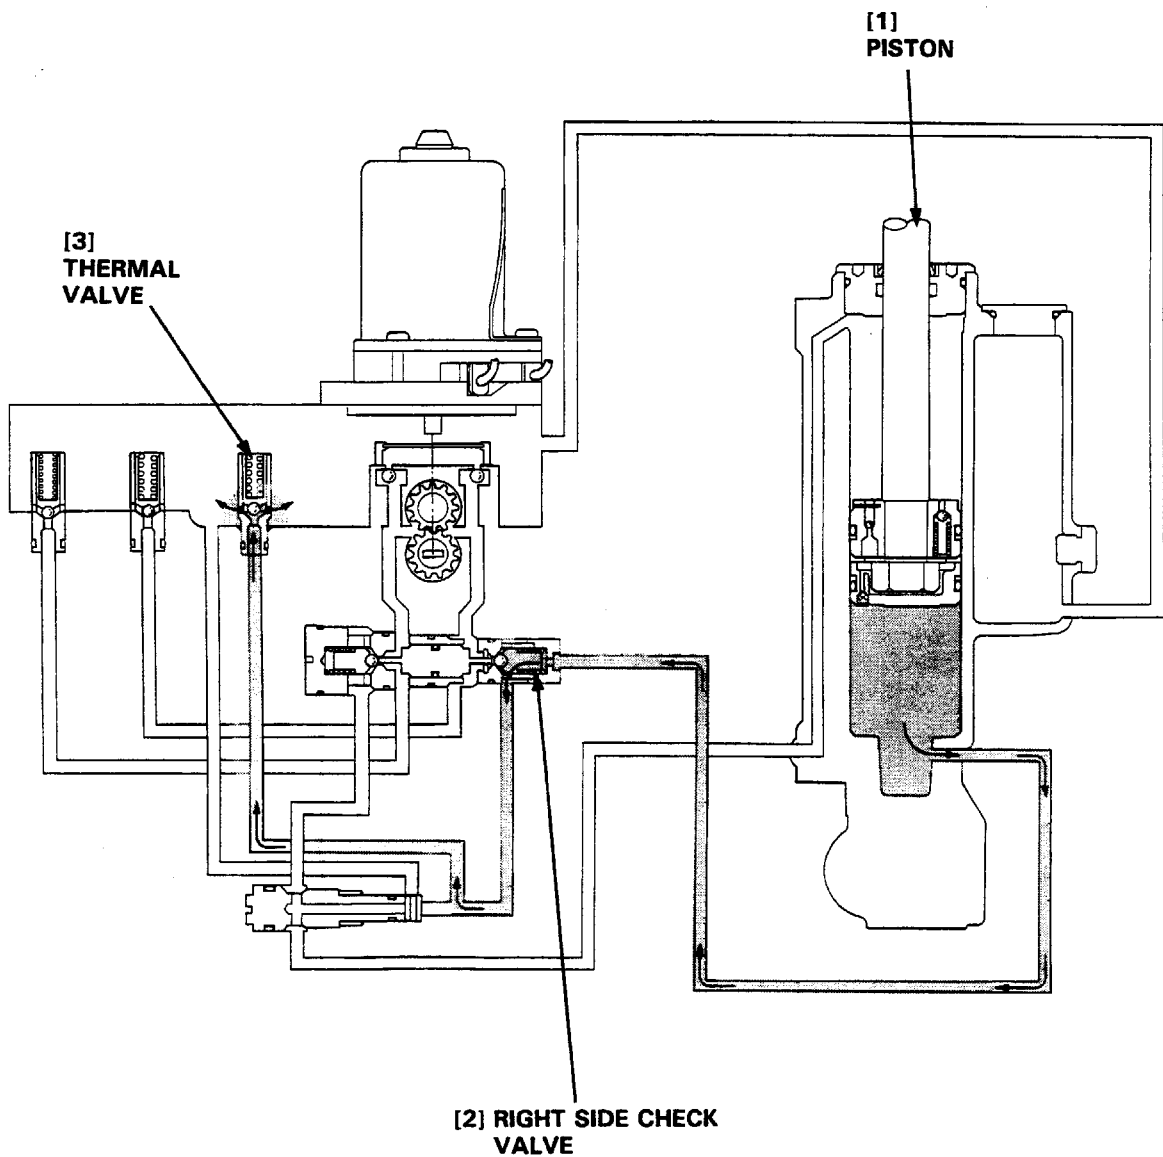

GAS ASSISTED SYSTEM


- Gas assisted tilt type

<Description of each part>

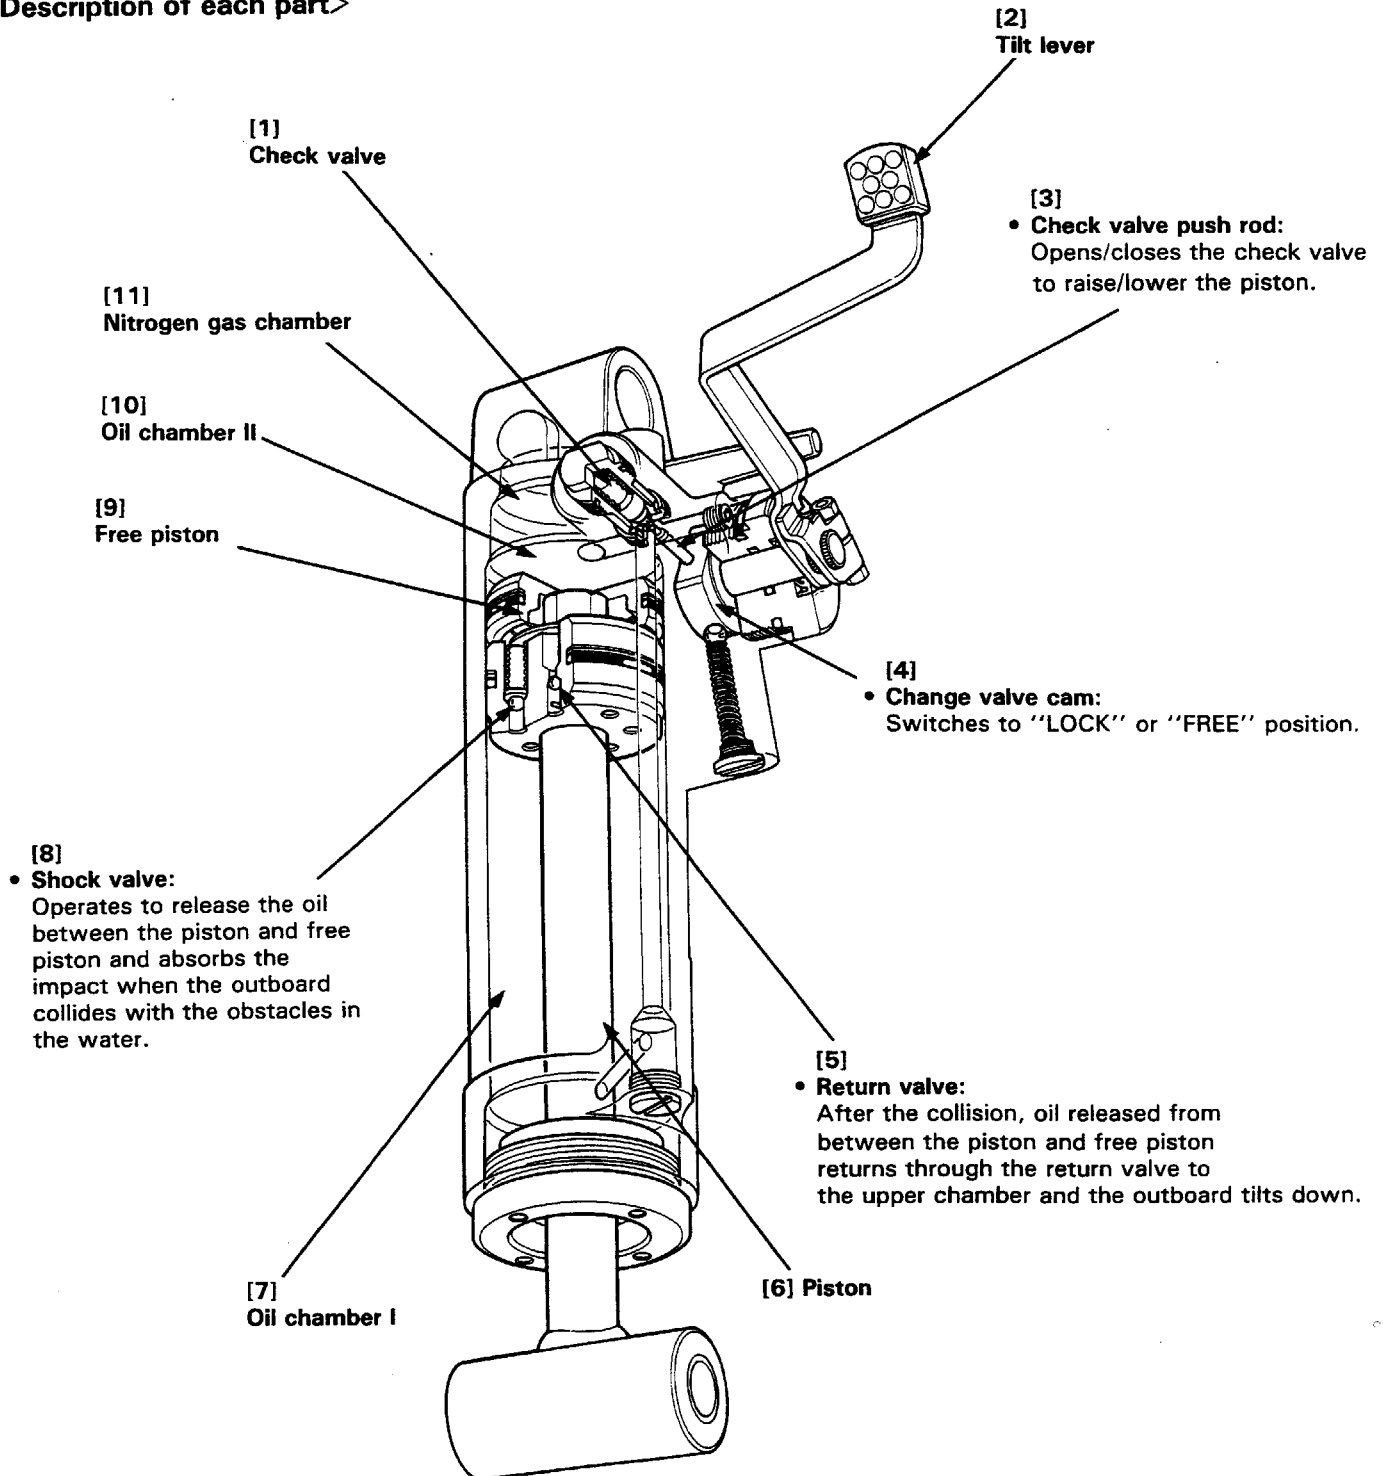


<At tilt lock>

When the tilt lever is in the "LOCK" position, the piston does not move as the change valve cam is also in the "LOCK" position and the oil passage closes.

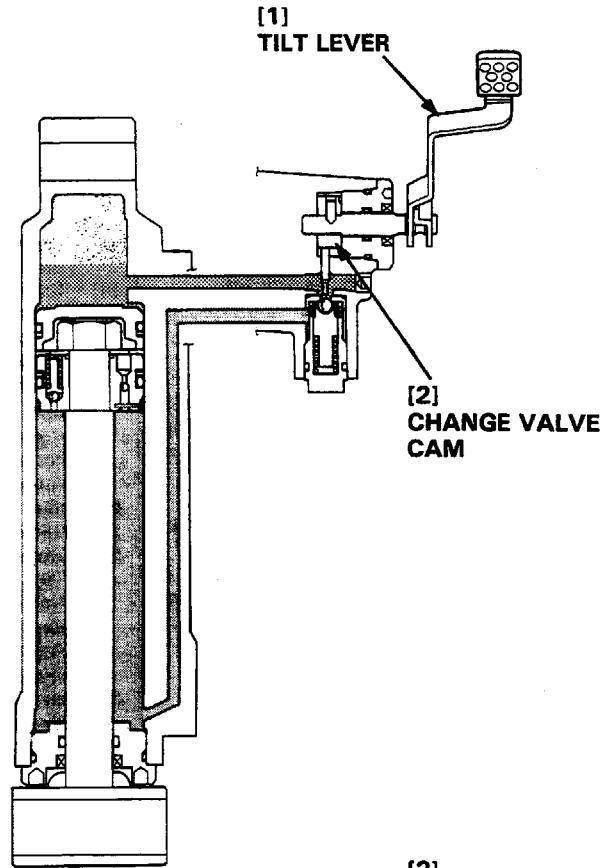

<At tilt up/down>

When the tilt lever is set in the "FREE" position, the change valve cam lifts the check valve push rod and opens the check valve, resulting in the oil flowing into the oil passage. When tilting up the outboard motor, the oil in the oil chamber I enters the oil chamber II and the outboard can be tilted up easily because of the nitrogen gas in the nitrogen gas chamber. When tilting down the outboard motor, the oil in the oil chamber II flows to the oil chamber I and the outboard motor lowers by its own weight.

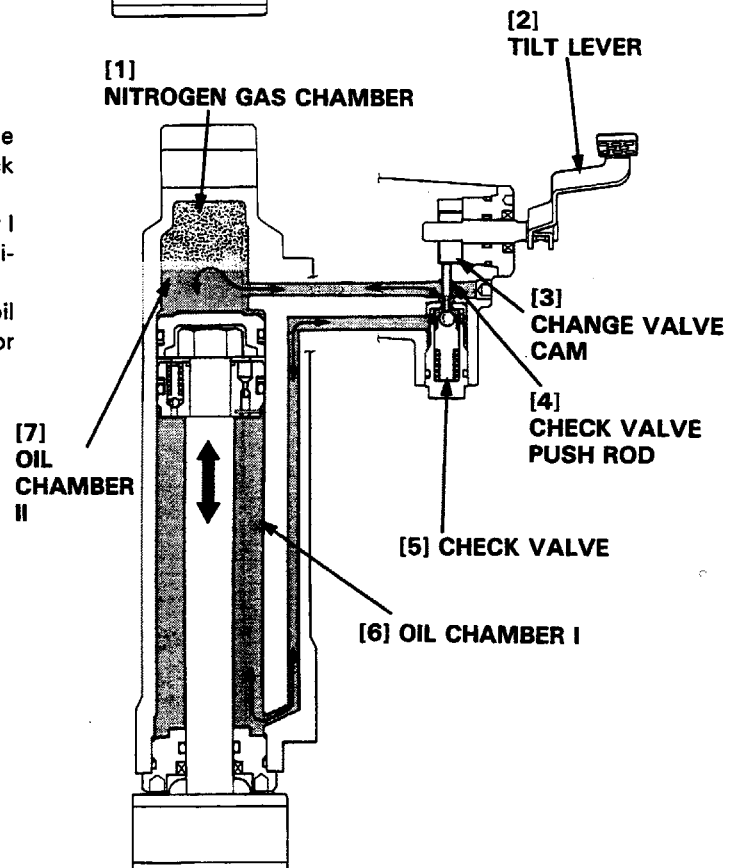



<At collision>

Because the piston lowers and pressures the oil in the oil chamber I when the outboard motor is struck with an obstacle while cruising, the shock valve opens and oil enters between the piston and free piston to absorb the collision impact.

When the outboard motor is away from the obstacle, the piston rises by the dead weight of the outboard motor and the thrust.

The oil between the piston and the free piston flows through the return valve in the piston to the oil chamber I.

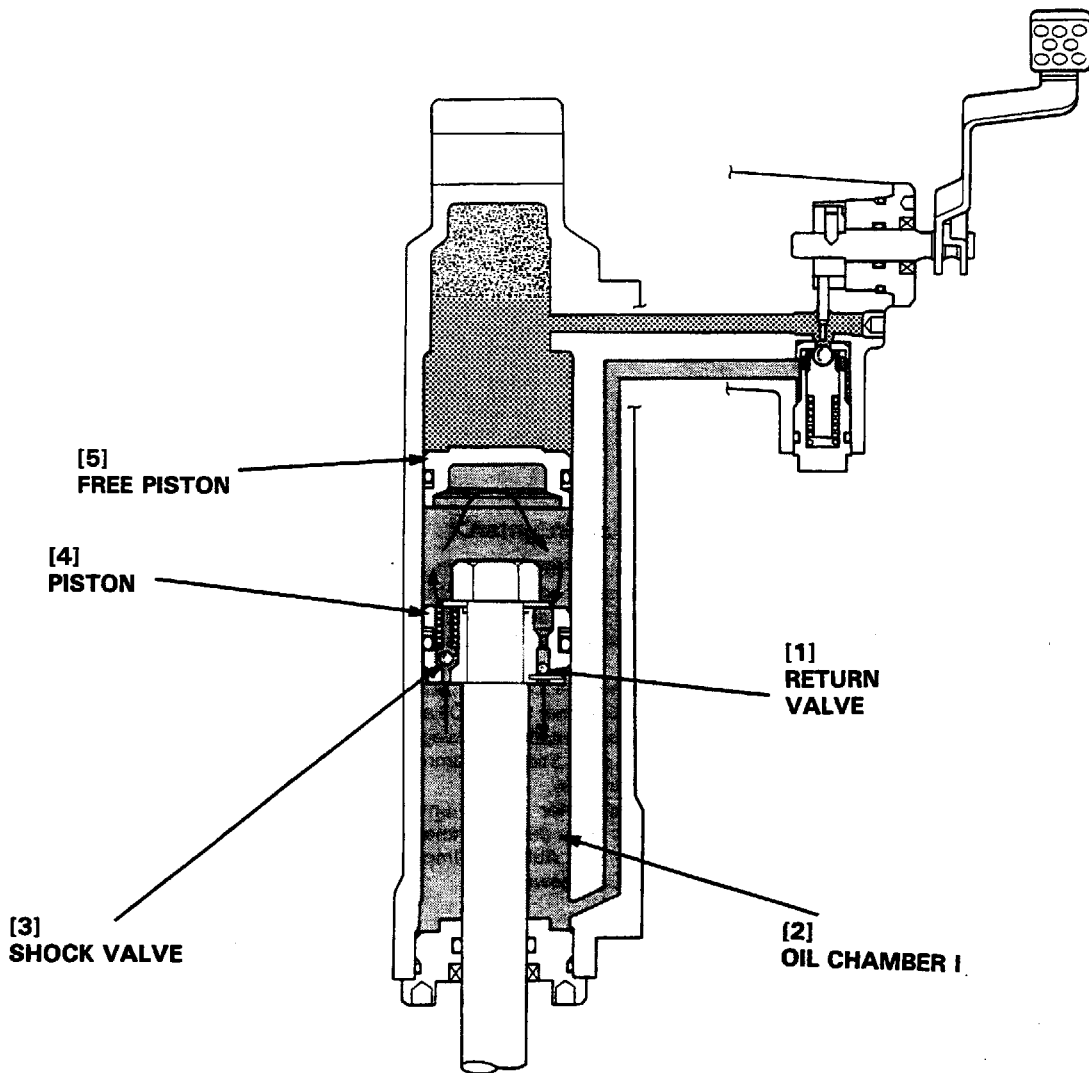


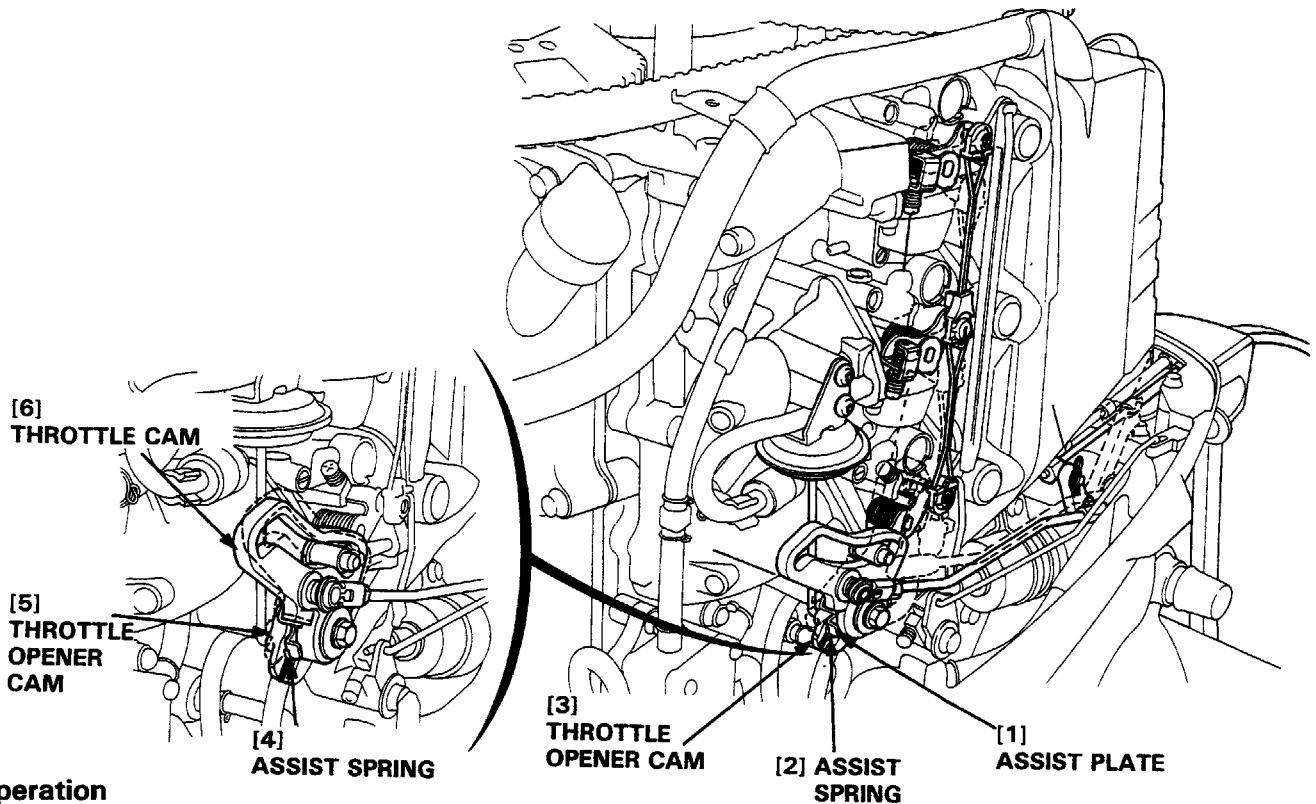CARBURETOR ACCELERATION/DECELERATION SYSTEM**Operation**

- **At acceleration**


When the throttle is opened quickly for sharp acceleration of the outboard motor from a constant speed, the diaphragm moves to the full stroke position at the set angle of the throttle cam, and the carburetor main well is pressured instantaneously and the fuel in the well is discharged through the main nozzle by the air pushed by the diaphragm.

When the throttle is opened slowly, the pressured air is bled through the air bleed and air jet not to discharge the fuel excessively.

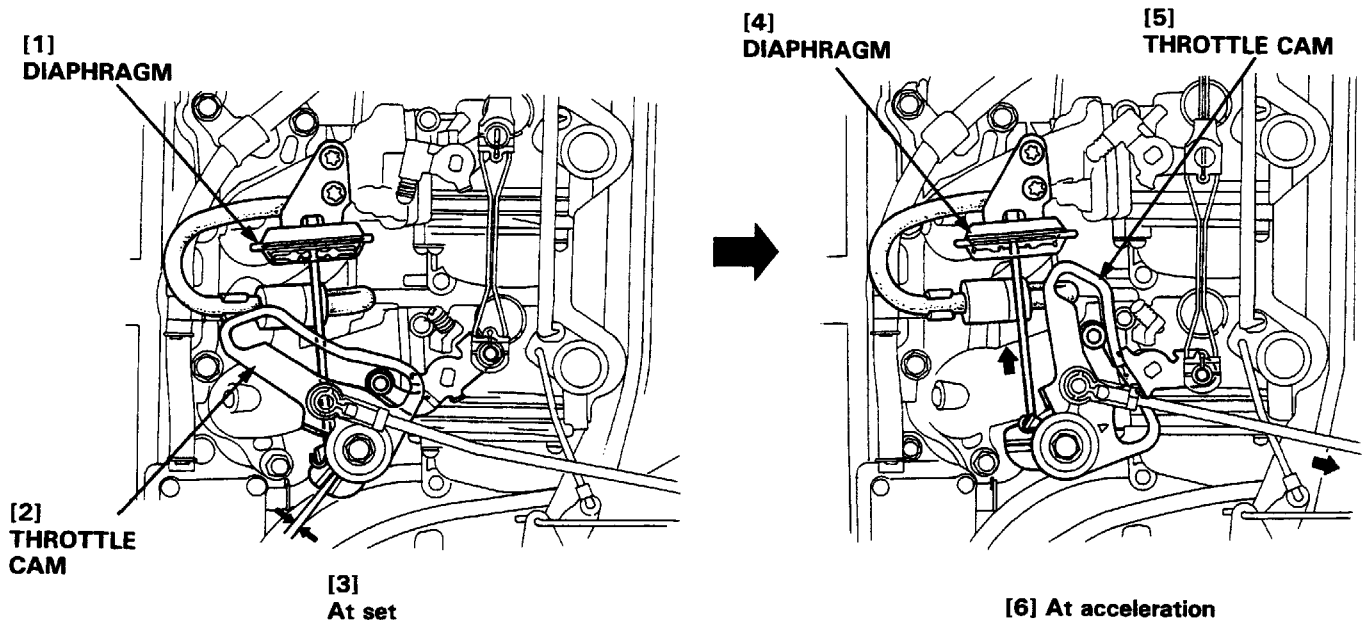


- **From the set angle to full open**

From the operation angle where the diaphragm is at the full stroke position to the fully open throttle, the throttle opener cam interconnected to the diaphragm via the assist spring operates, which is called the lost motion mechanism, and the diaphragm does not move further.

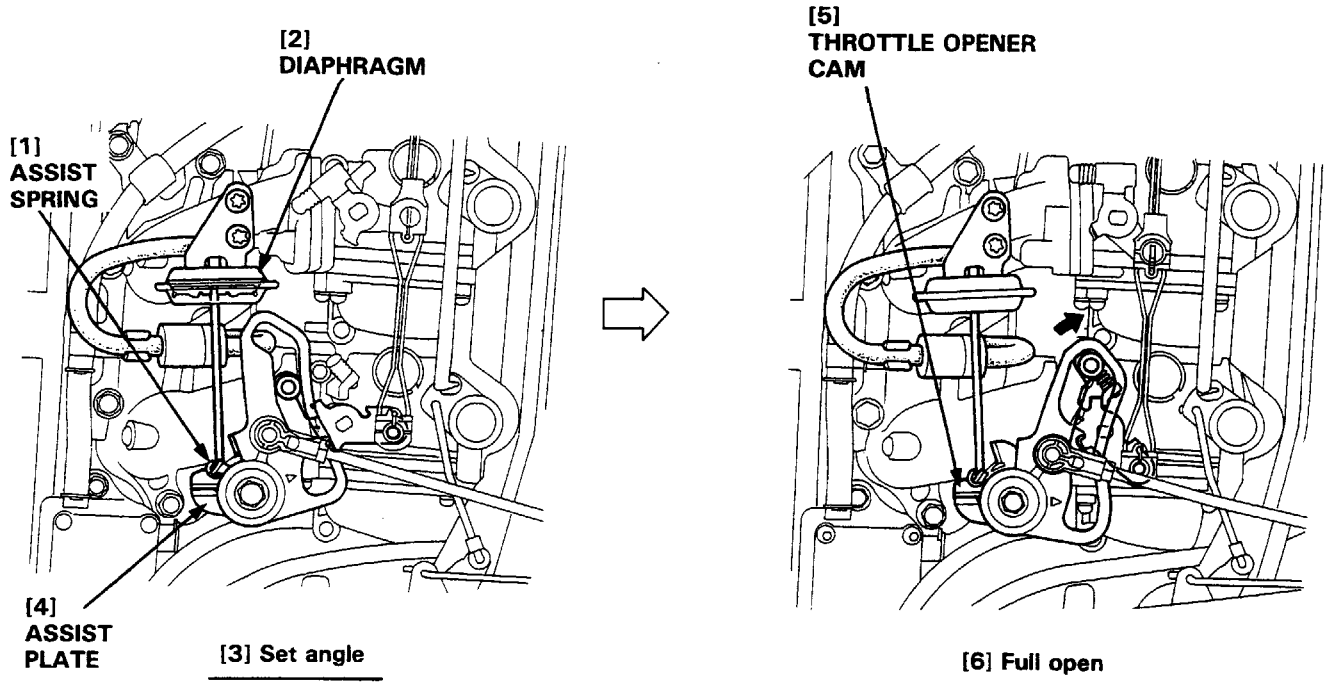

- **At quick close**

When the throttle is moved quickly to the fully closed position, the leak jet in the dashpot check valve restricts the air flowing into the diaphragm and the opener cam return spring absorbs the return force of the throttle cam to allow the throttle cam to close slowly and, thereby, to prevent incomplete combustion of the engine.

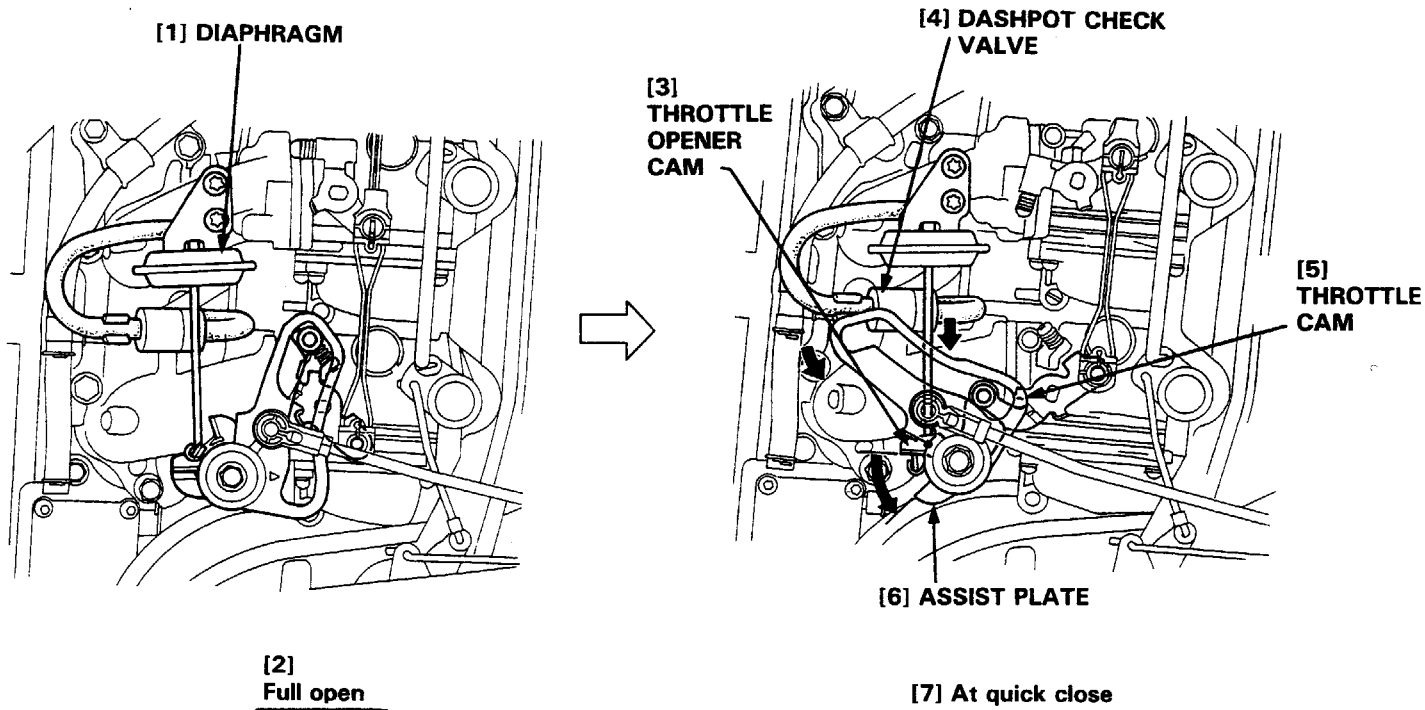

PREFACE


This supplement describes service procedures for the Honda BF35A and BF45A Outboard Motors.


For service information which is not covered in this supplement, please refer to the base manuals, part number 66ZV300.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE






CONTENTS



SPECIFICATIONS	1
SERVICE INFORMATION	2
 MAINTENANCE	3
ENGINE COVER/THROTTLE/CHOKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
ENGINE REMOVAL/INSTALLATION	7
WATER JACKET COVER/THERMOSTAT/ THERMO SWITCH	8
CYLINDER HEAD/VALVE/OIL PUMP	9
CRANKCASE/CYLINDER BLOCK/ CRANKSHAFT/PISTON	10
PROPELLER/GEAR CASE/ EXTENSION CASE	11
OIL PAN/PRIMARY GEAR CASE/ SWIVEL CASE	12
GAS ASSISTED/POWER TILT	13
STEERING LINK ARM/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE CABLE BRACKET/SWIFT LEVER/ TILLER HANDLE (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17

 The marked sections contain no changes. They are not covered in this manual.

OUTLINE OF CHANGES

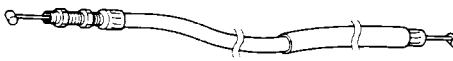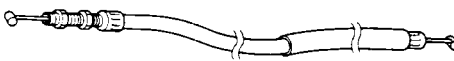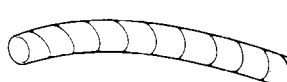•CHANGE LOCATIONS

Item	Model	Before change: Tiller handle type	After change: Tiller handle type
Throttle cable Spiral tube		 <p style="text-align: center;">THROTTLE CABLE (2)</p>	 <p style="text-align: center;">THROTTLE CABLE (2)</p>  <p style="text-align: center;">SPIRAL TUBE</p>
EXHAUST PIPE	<p>Frame serial number: BF35A; 1000001 – 1005441 BF45A; 1000001 – 1013155</p> 	<p>Frame serial number: BF35A; 1005442 and subsequent BF45A; 1013156 and subsequent</p> 	

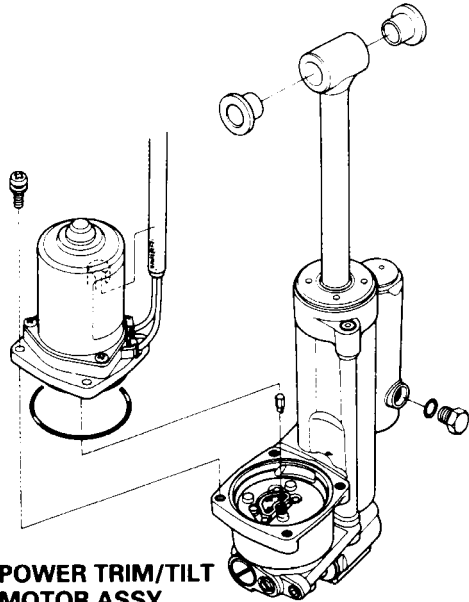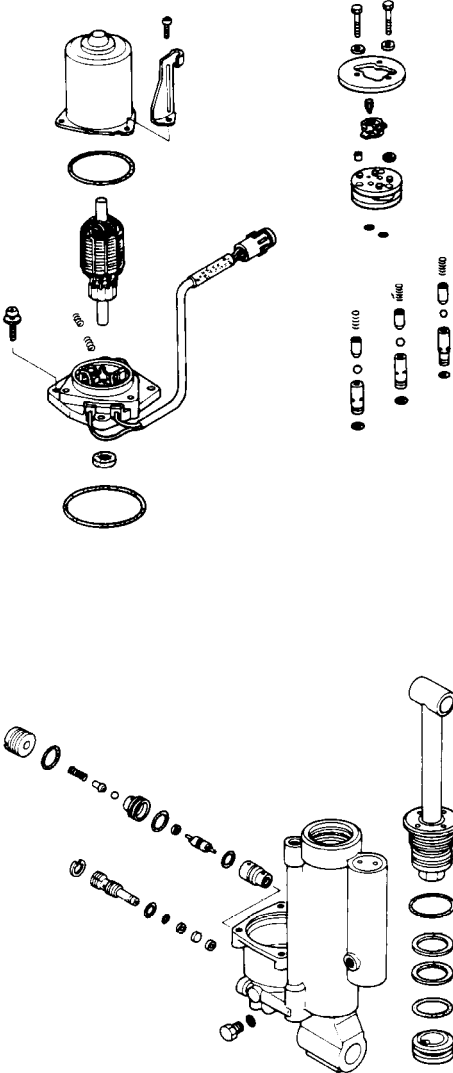Item	Model	Before change: POWER TRIM/TILT TYPE	After change: POWER TRIM/TILT TYPE
Power tilt assembly		<p data-bbox="364 437 825 466">POWER TRIM/TILT ASSY.</p>  <p data-bbox="359 1105 576 1156">POWER TRIM/TILT MOTOR ASSY.</p>	<p data-bbox="928 294 1230 322">POWER TRIM/TILT PARTS</p> 

1. TORQUE VALUES**2. TROUBLESHOOTING****A. THE POWER TRIM/TILT DOES NOT MOVE
UP OR DOWN****B. THE POWER TRIM/TILT DOES NOT HOLD****3. CABLE/HARNESS ROUTING****1. TORQUE VALUES**


Item	Thread Dia. (mm) and pitch (length)	Torque values		
		N·m	kg-m	ft-lb
• POWER TILT ASSEMBLY				
Motor mount screw	M5 x 0.8	6	0.6	4.3
Gear pump bolt	M5 x 0.8	5	0.5	3.6
Spool valve cap	M22 x 1.0	20	2.0	14.5
Oil cap bolt	M12 x 1.5	15	1.5	10.8
Cylinder cap	M48 x 1.5	45	4.5	32.5

2. TROUBLESHOOTING


A. THE POWER TRIM/TILT DOES NOT MOVE UP OR DOWN (Power trim & tilt type)

NOTE:

Be sure that the battery cables are connected. Battery voltage must be 12 V or above.

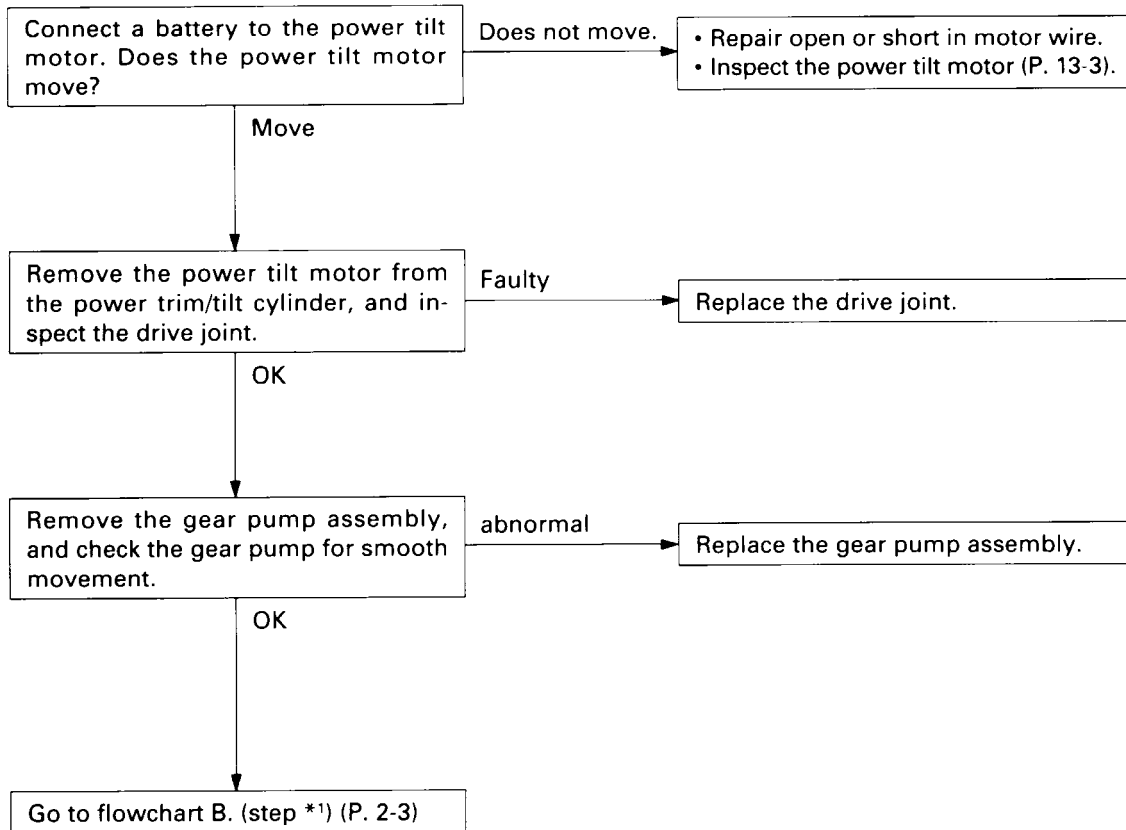


B. THE POWER TRIM/TILT DOES NOT HOLD (Power trim & tilt type)

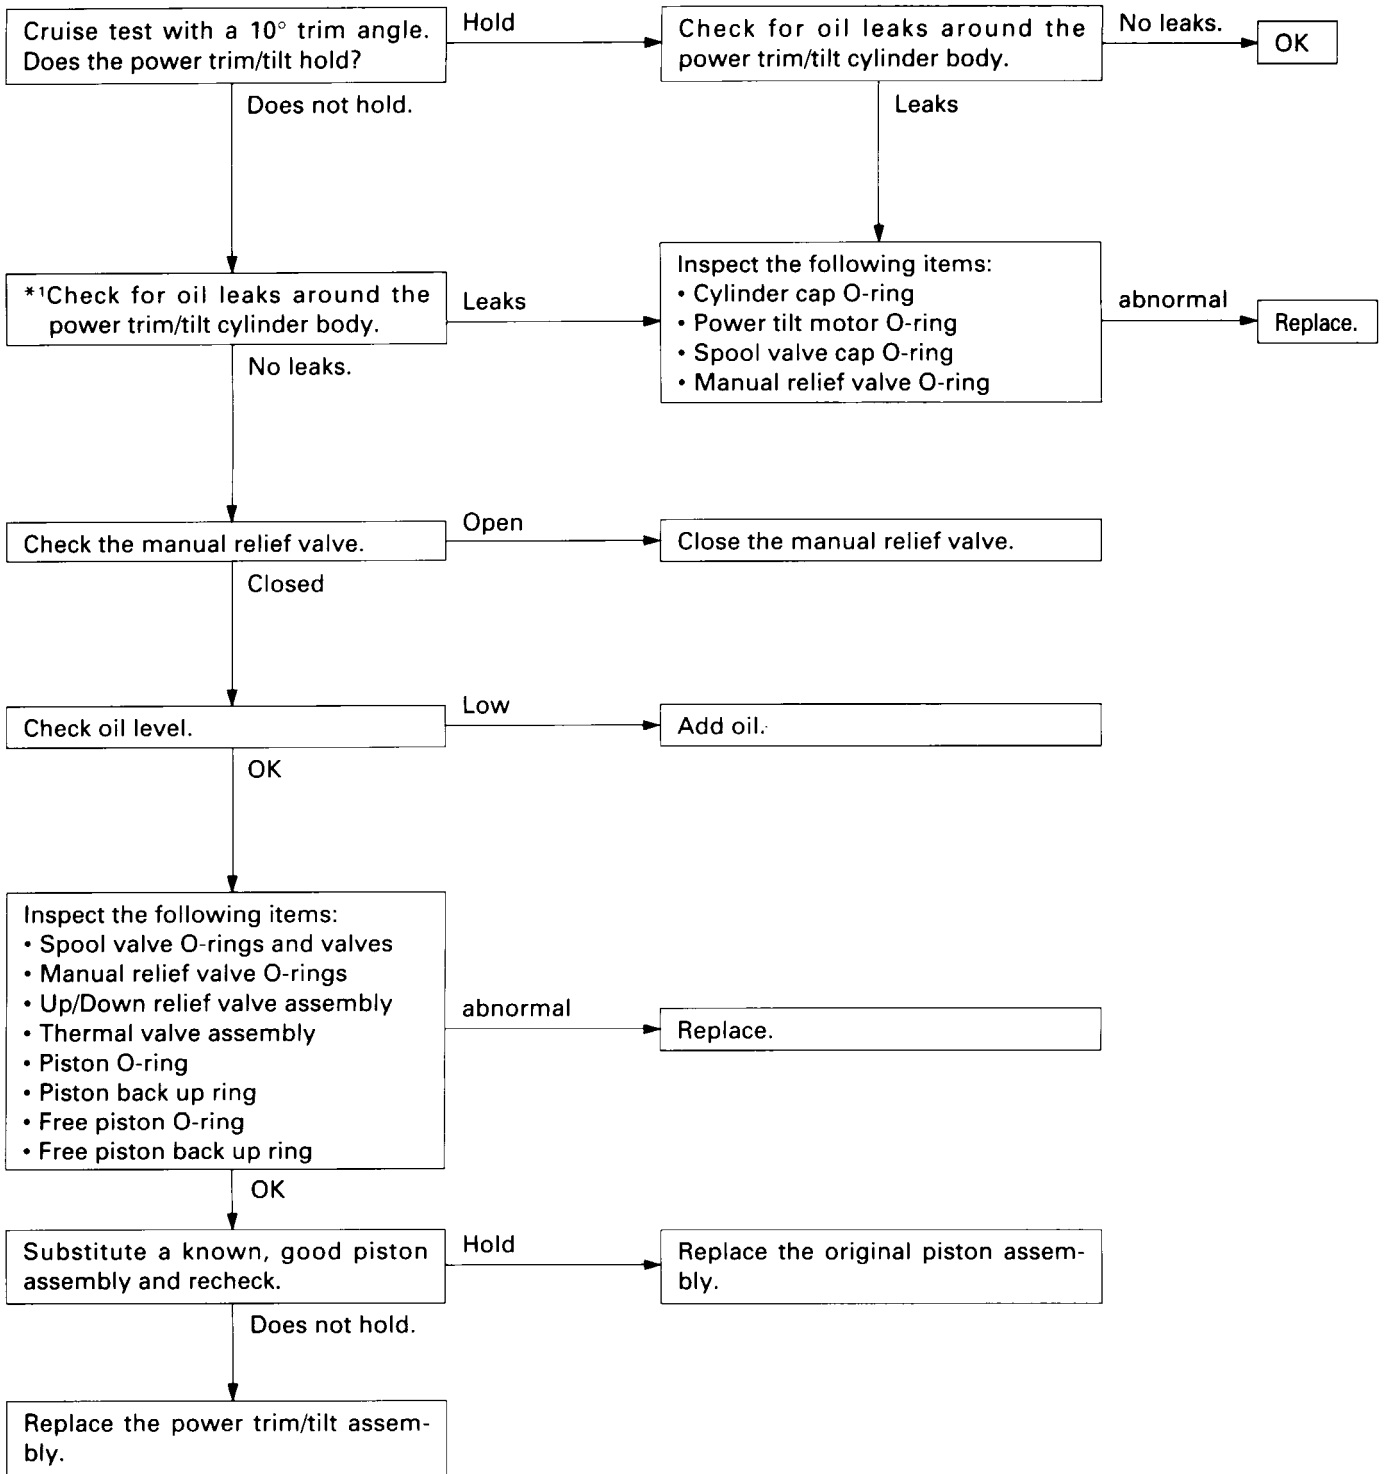

3. CABLE/HARNESS ROUTING

(Tiller handle type)

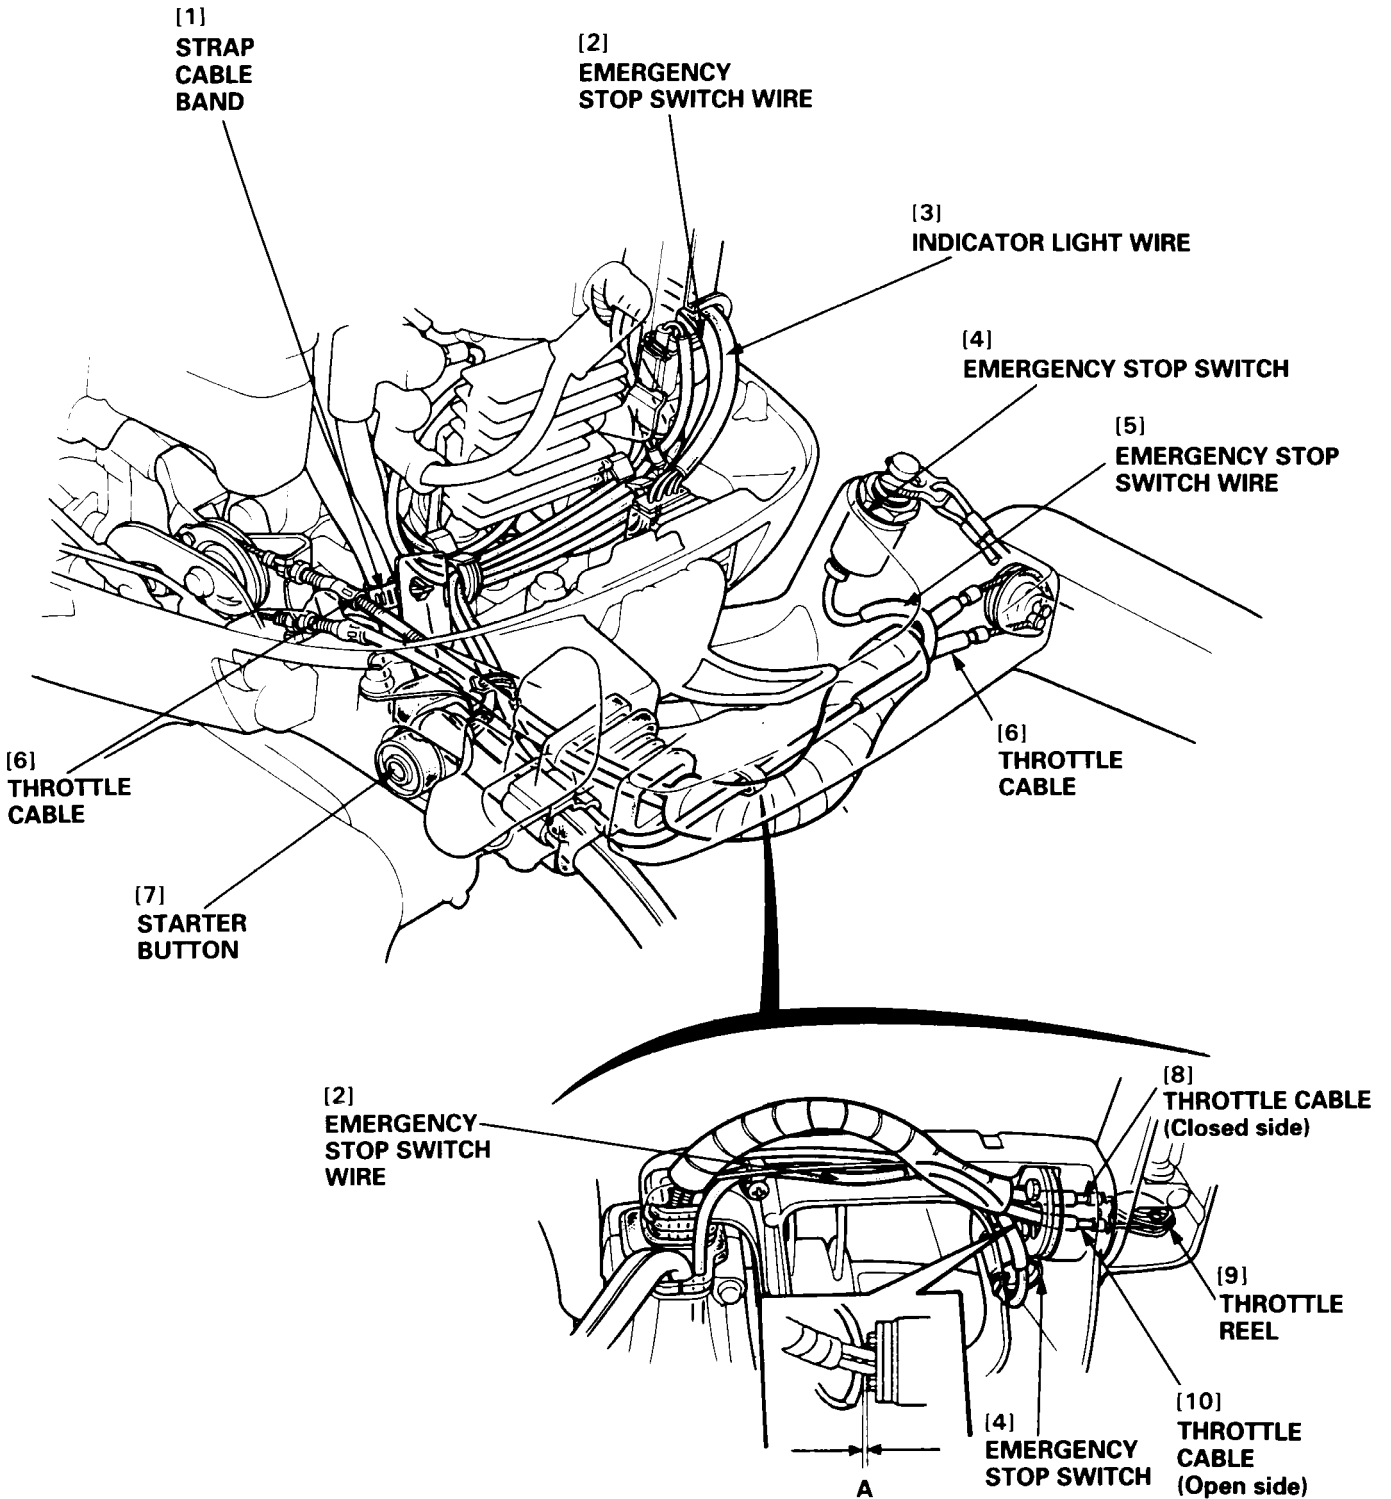

NOTE:

Move the handlebar up and down and be sure that the clearance between the emergency stop switch wire and bolt (A in the drawing) is 1 mm (0.04 in) or more.


12. OIL PAN/PRIMARY GEAR CASE/SWIVEL CASE **HONDA** BF35A·45A

1. OIL PAN/MUFFLER

1. OIL PAN/MUFFLER

DISASSEMBLY/ASSEMBLY


Remove the extension case assembly

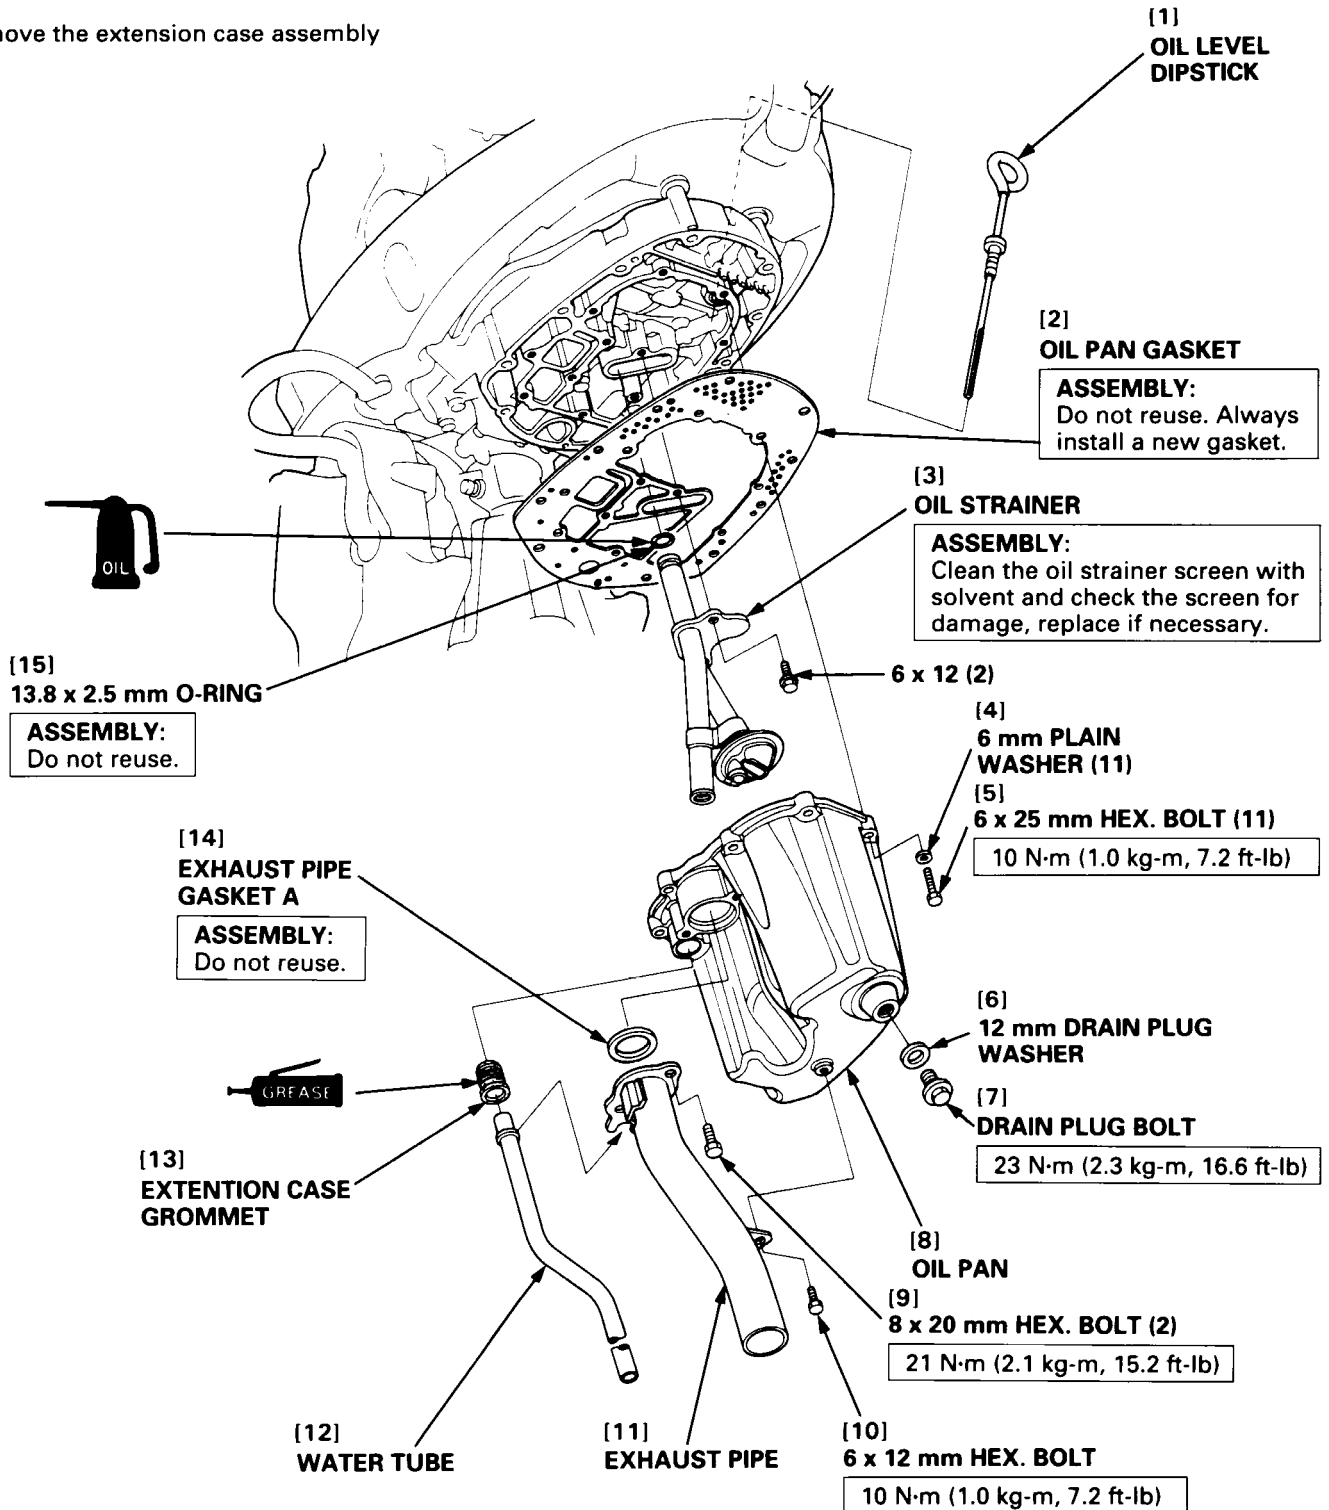


1. POWER TILT ASSEMBLY (POWER TRIM & TILT TYPE)

1. POWER TILT ASSEMBLY (POWER TRIM & TILT TYPE)

a. DISASSEMBLY/ASSEMBLY

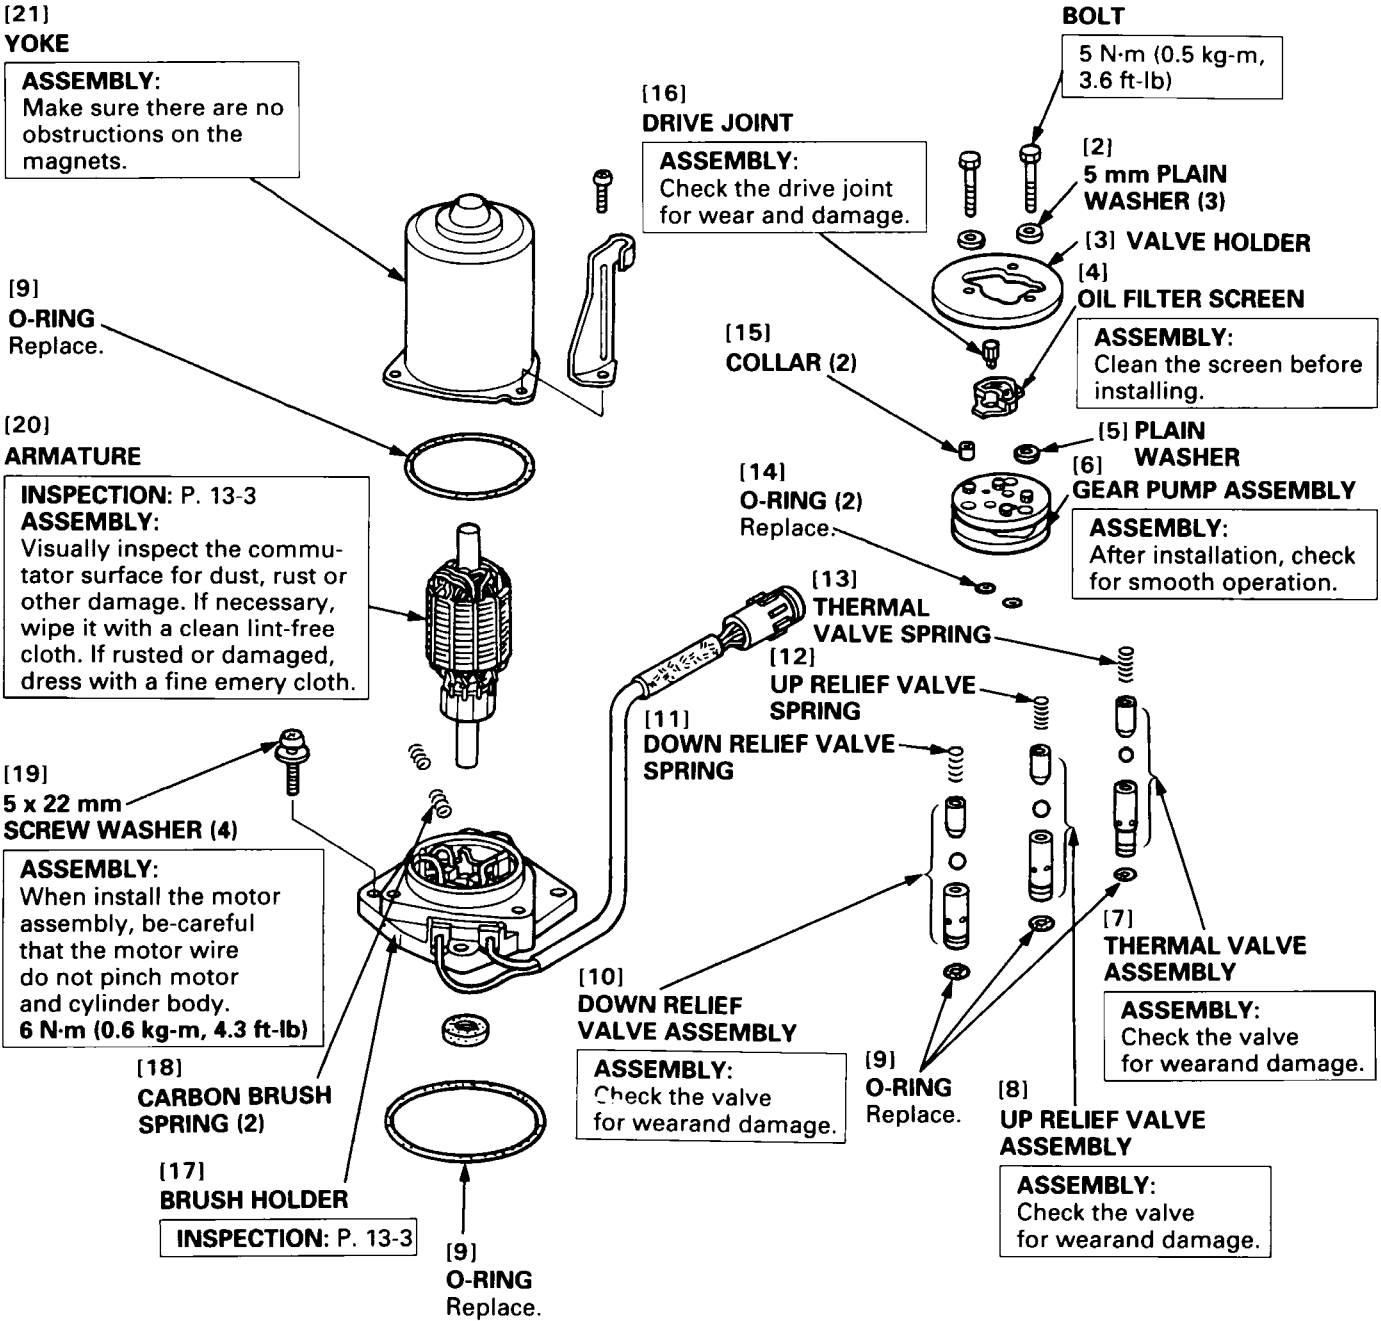

a. DISASSEMBLY/ASSEMBLY

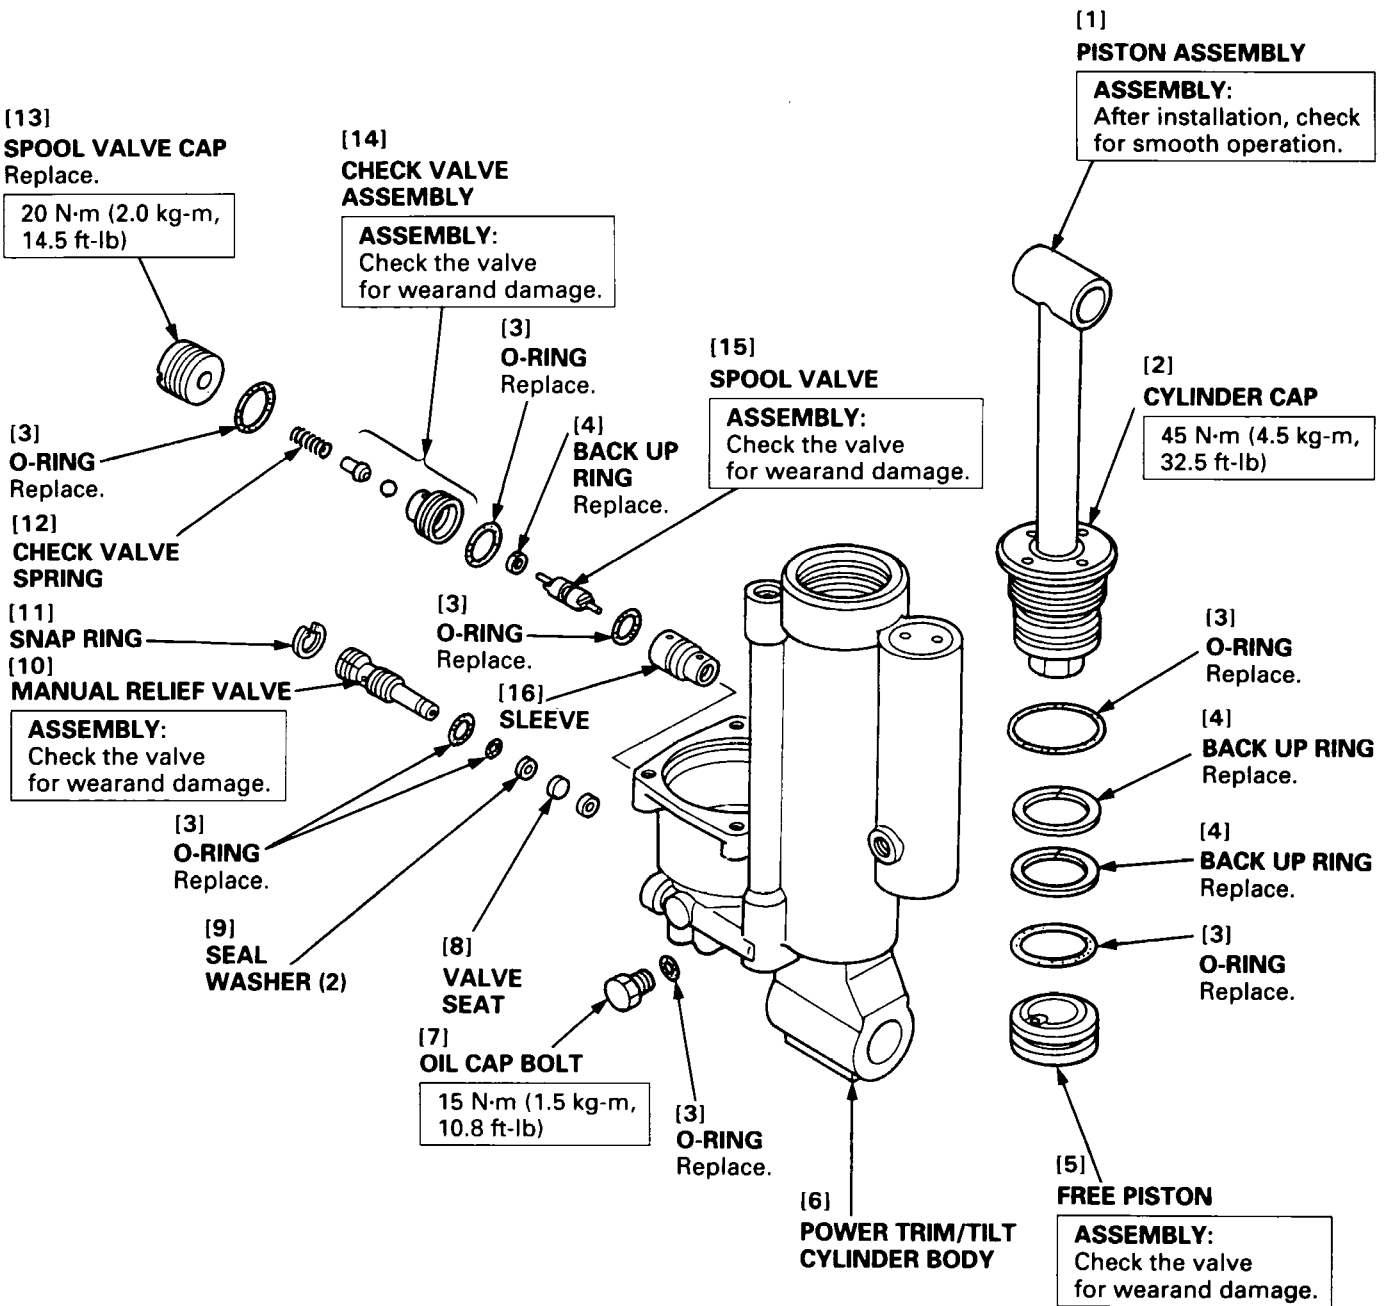


b. INSPECTION

• BRUSH LENGTH

Measure the brush length.

If brush length is less than standard, replace the brush holder.


STANDARD	SERVICE LIMIT
9.8 mm (0.39 in)	5 mm (0.2 in)

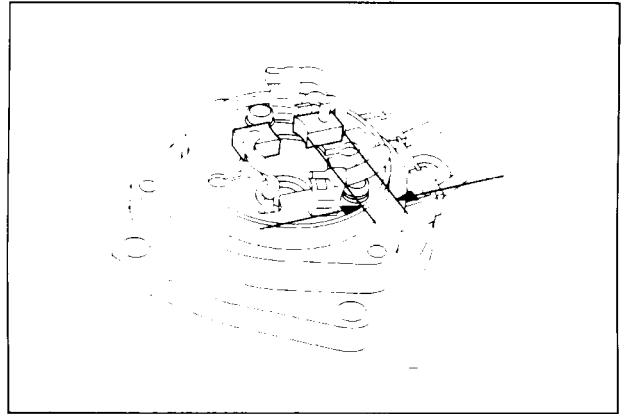

• BRUSH INSULATION

Check for continuity between the brushes.


There should be no continuity.

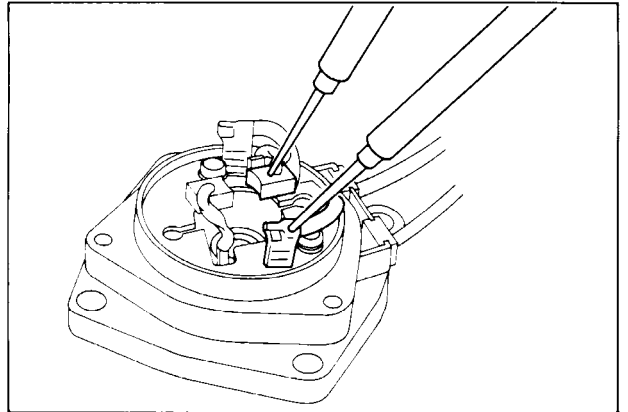

• MICA DEPTH

If the grooves are clogged or mica depth is less than the service limit, recut the grooves using a hacksaw blade or a small file.


SERVICE LIMIT	0.5 mm (0.02 in)
---------------	------------------

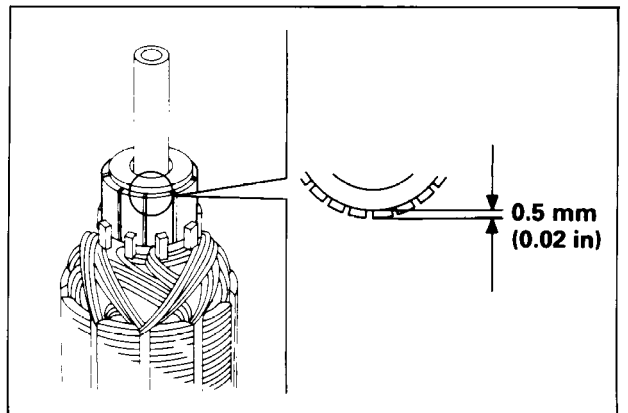

• ARMATURE

CONTINUITY CHECK—SEGMENTS


Check for continuity between each segment. If an open circuit exists between any two segments, replace the armature.

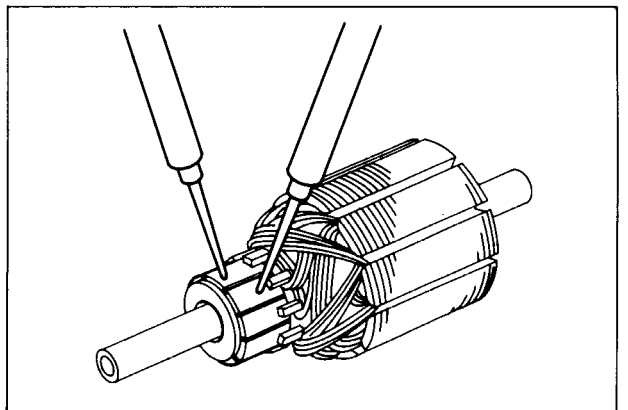

SHORT CIRCUIT TEST—CORE-TO-COMMUTATOR

Check for continuity between the commutator and armature coil core.


If continuity exists, replace the armature.

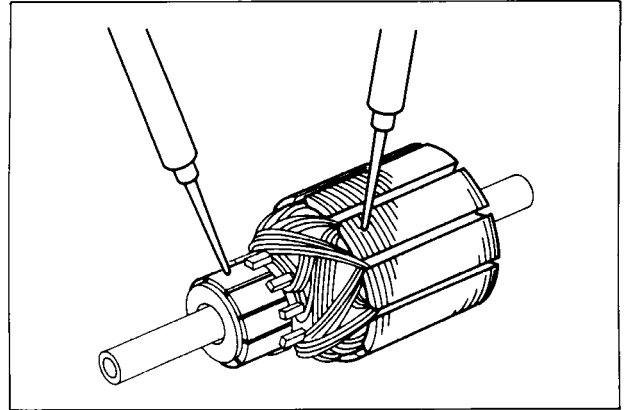

SHORT CIRCUIT TEST—SHAFT-TO-COMMUTATOR

Check for continuity between the commutator and armature shaft.


If there is continuity, replace the armature.

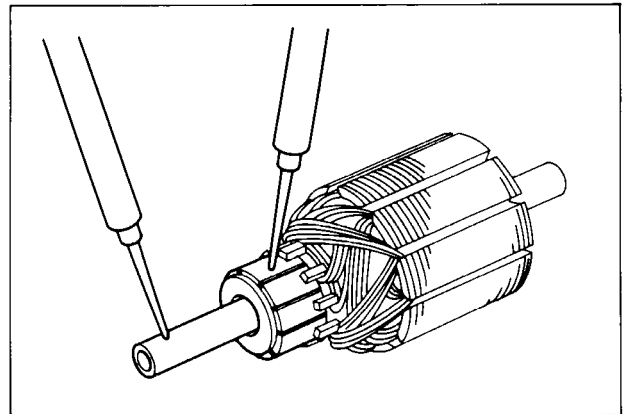

SHORT CIRCUIT TEST—ARMATURE

Place the armature in an armature tester (commercially available).

Hold a hacksaw blade close to the armature core. If the blade is attracted to the core or vibrates when the core is turned, the armature is shorted. Replace the armature.

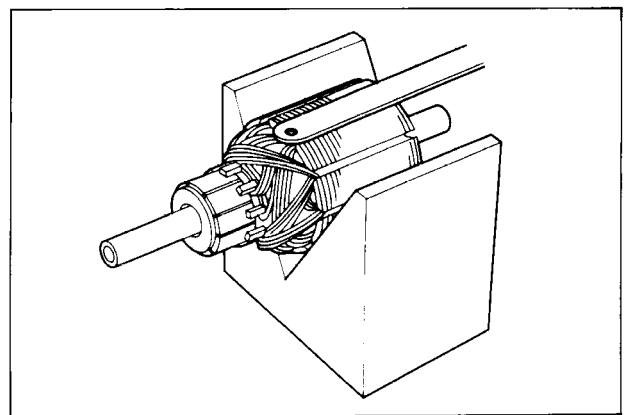

PREFACE


This supplement describes service procedures for the Honda BF40A•BF50A Outboard Motors.


For service information which is not covered in this supplement, please refer to the base manuals, part numbers 66ZV300, 66ZV300Z and 66ZV300Y.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASES ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATION OFFICE

CONTENTS








OUTLINE OF CHANGES	
SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
 ENGINE COVER/THROTTLE/CHOKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
ENGINE REMOVAL/INSTALLATION	7
WATER JACKET COVER/THERMOSTAT/THERMO SWITCH	8
CYLINDER HEAD/VALVE/OIL PUMP	9
CRANKCASE/CYLINDER BLOCK/CRANKSHAFT/PISTON	10
PROPELLER/GEAR CASE/EXTENSION CASE	11
OIL PAN/PRIMARY GEAR CASE/SWIVEL CASE	12
GAS ASSIST/POWER TILT	13
STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE BRACKET/SHIFT LEVER/HANDLEBAR (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17

 The marked sections contain no changes. They are not covered in this manual.

OUTLINE OF CHANGES	3
1. SPECIFICATIONS	4
1. SPECIFICATIONS	4
2. SERVICE INFORMATION	7
1. MAINTENANCE STANDARDS	7
3. MAINTENANCE	8
1. ENGINE OIL	8
2. ACCELERATION DEVICE/DIAPHRAGM ASSEMBLY	9

OUTLINE OF CHANGES

HONDA
BF40A•50A

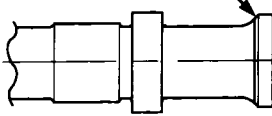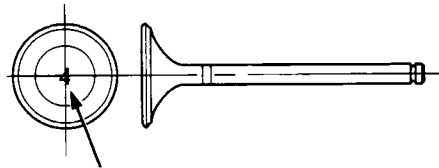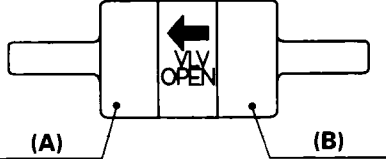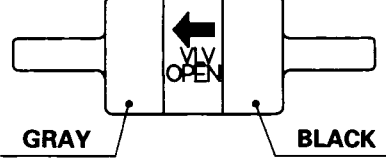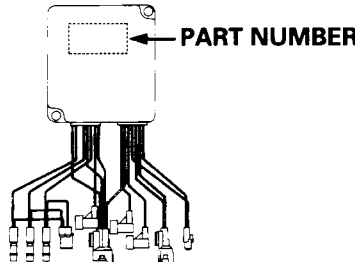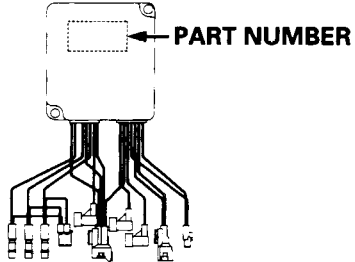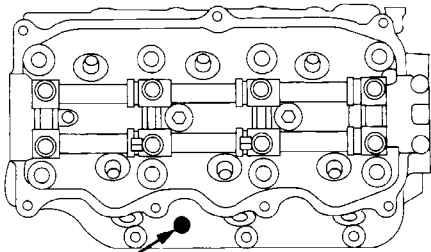Model	BF40A•BF50A	BF35A•BF45A•BF40B									
CAMSHAFT	<p style="text-align: center;">COUNTERSUNK</p>  <p>BF40A: No Countersunk BF50A: Countersunk</p>	/									
INTAKE VALVE	 <p style="text-align: center;">MARKING</p> <p>BF40A: No Mark BF50A: Mark "4"</p>	/									
DASHPOT CHECK VALVE	 <table border="1" data-bbox="405 991 687 1094"> <thead> <tr> <th></th> <th>A</th> <th>B</th> </tr> </thead> <tbody> <tr> <td>BF40A</td> <td>Black</td> <td>Black</td> </tr> <tr> <td>BF50A</td> <td>Gray</td> <td>Black</td> </tr> </tbody> </table>		A	B	BF40A	Black	Black	BF50A	Gray	Black	 <p style="text-align: center;">GRAY BLACK</p>
	A	B									
BF40A	Black	Black									
BF50A	Gray	Black									
CDI UNIT	 <p style="text-align: right;">PART NUMBER</p> <p>BF40A: Part number in Orange BF50A: Part number in White</p>	 <p style="text-align: right;">PART NUMBER</p> <p>BF35A•BF45A•BF45B: Part number in White</p>									
CYLINDER HEAD	 <p style="text-align: center;">MARKING</p> <p>BF40A: No Mark BF50A: Marking White</p>	/									

1. SPECIFICATIONS

HONDA
BF40A•50A

1. SPECIFICATIONS

1. SPECIFICATIONS

DIMENSIONS AND WEIGHTS

Model		BF40A				
Description code		BAYS	BAYL	BAYS	BAYL	
Item	Type	SH	LH	SR	LR	LRT
Overall length		*1: 725 mm (28.5 in) *2: 1,059 mm (41.7 in)		685 mm (27.0 in)		
Overall width		370 mm (14.6 in)				
Overall height		1,255 mm (49.4 in)	1,360 mm (53.5 in)	1,255 mm (49.4 in)	1,360 mm (53.5 in)	
Dry weight		89 kg (196.2 lb)	91 kg (200.7 lb)	88 kg (194.0 lb)	90 kg (198.5 lb)	92 kg (202.9 lb)
Operating weight (incl. oil)		91.5 kg (201.8 lb)	93.5 kg (206.1 lb)	90.5 kg (199.6 lb)	92.5 kg (204.0 lb)	94.5 kg (208.4 lb)

*1: With handlebar raised

*2: With handlebar extended

Model		BF50A				
Description code		BAZL	BAZS		BAZL	
Item	Type	LH	SR	SRT	LR	LRT
Overall length		*1: 725 mm (28.5 in) *2: 1,059 mm (41.7 in)	685 mm (27.0 in)			
Overall width		370 mm (14.6 in)				
Overall height		1,360 mm (53.5 in)	1,255 mm (49.4 in)		1,360 mm (53.5 in)	
Dry weight		91 kg (200.7 lb)	88 kg (194.0 lb)	90 kg (198.5 lb)		92 kg (202.9 lb)
Operating weight (incl. oil)		93.5 kg (206.1 lb)	90.5 kg (199.6 lb)	92.5 kg (204.0 lb)		94.5 kg (208.4 lb)

*1: With handlebar raised

*2: With handlebar extended

HONDA

BF40A•50A

FRAME

Item	Model	BF40A				
	Type	SH	LH	SR	LR	LRT
Transom height		416 mm (16.4 in)	521 mm (20.5 in)	416 mm (16.4 in)	521 mm (20.5 in)	521 mm (20.5 in)
Transom angle		5 stage adjustment (11.5°, 15.5°, 19.5°, 23.5°, 27.5°)				
Tilting angle		71.5°				
Swivel angle		37.5° right and left				
Trim angle		—				0 – 20°

Item	Model	BF50A				
	Type	LH	SR	SRT	LR	LRT
Transom height		521 mm (20.5 in)	416 mm (16.4 in)		521 mm (20.5 in)	
Transom angle		5 stage adjustment (11.5°, 15.5°, 19.5°, 23.5°, 27.5°)				
Tilting angle		71.5°				
Swivel angle		37.5° right and left				
Trim angle		—		0 – 20°	—	

TYPES OF HONDA BF40A/50A OUTBOARD MOTORS

It may be necessary to refer to this chart for reference purposes when reading this manual.

Model	Type	Shaft Length		Tiller Handle	Remote Control	Gas Assisted Tilt	Power Trim/Tilt	Tachometer	Trimmer
		S	L						
BF40A	SH	●		●		●			
	LH		●	●		●			
	SR	●			●	●			
	LR		●		●	●			
	LRT		●		●		●	●	●
BF50A	LH		●	●		●			
	SR	●			●	●			
	SRT	●			●		●	●	●
	LR		●		●	●			
	LRT		●		●		●	●	●

S: Short Shaft L: Long Shaft H: Tiller Handle R: Remote Control T: Power Trim/Tilt

The gas assisted tilt type motors use a gas damper to assist when manually tilting the motor.
The power trim/tilt type motors use an electric/hydraulic power cylinder to trim or tilt the motor.

ENGINE

Model	BF40A	BF50A
Type	4-stroke, O.H.C., 3-cylinder	
Displacement	808 cm ³ (49.4 cu in)	
Bore x stroke	70 x 70 mm (2.8 x 2.8 in)	
Rated power *1	40 PS (29.8 kW)/at 5,000 – 6,000 min ⁻¹ (rpm)	50 PS (36.8 kW)/at 5,500 – 6,000 min ⁻¹ (rpm)
Maximum torque	6.05 kg-m (43.8 ft-lb)/at 3,500 min ⁻¹ (rpm)	6.5 kg-m (47.1 ft-lb)/at 4,500 min ⁻¹ (rpm)
Compression ratio	9.2:1	
Fuel consumption ratio	276 g/kW-h (203 g/ps-h, 0.45 lb/hp-h)	265 g/kW-h (195 g/ps-h, 0.43 lb/hp-h)
Cooling system	Forced water circulation by impeller pump with thermostat	
Ignition system	CDI	
Ignition timing	5 – 28° B.T.D.C.	5 – 32° B.T.D.C.
Spark plug	DR7EA (NGK), X22ESR-U (NIPPONDENSO)	
Carburetor	Horizontal type, butterfly valve (3 carburetor)	
Lubrication system	Pressure lubrication by trochoid pump	
Lubrication capacity	2.4 ℓ (2.54 US qt, 2.11 Imp qt)	
Starter system	Electric starter	
Stopping system	Grounding of primary circuit	
Fuel	Regular automotive gasoline (86 pump octane; unleaded recommended)	
Fuel tank capacity	25 ℓ (6.6 US gal, 5.5 Imp gal)	
Fuel pump	Mechanical plunger type	
Exhaust system	Thru-hub type	
Recommended oil	SAE5W – 30 (API Classification Fuel Efficient SG, SH)	

*1: Full throttle range.

LOWER UNIT

Clutch	Dog clutch (Forward-Neutral-Reverse)
Gear ratio	0.48 (26/33 x 14/23)
Reduction	Spiral bevel
Gear case oil capacity	0.52 ℓ (0.550 US qt, 0.458 Imp qt)
Propeller No. of blades-Dia. x Pitch	3-286 x 330 mm (11-1/4 x 13.0 in)
Propeller rotating direction	Clockwise (viewed from rear)
Propeller driving system	Spline

2. SERVICE INFORMATION

HONDA
BF40A•50A

1. MAINTENANCE STANDARDS

1. MAINTENANCE STANDARDS

ENGINE

Unit: mm (in)

Part	Item		BF40A		BF50A	
			standard	service limit	standard	service limit
Carburetor	Main jet		#92	—	#130	—
	Jet set		#38	—	#42	—
	Pilot screw opening		2-1/4 turns out	—	1 turn out	—
	Float height		14 (0.6)	—	13 (0.5)	—
Valves	Spring free length	IN/EX	36.1 (1.42)	34.6 (1.36)	36.1 (1.42)	34.6 (1.36)
		IN	32 (1.26)	—	33 (1.30)	—
	Valve head diameter	EX	29 (1.14)	—	29 (1.14)	—
Camshaft		Cam height	IN	34.928 – 35.248 (1.3751 – 1.3877)	34.708 (1.3665)	35.306 – 35.546 (1.390 – 1.3994)
	EX		34.973 – 35.293 (1.3769 – 1.3895)	34.753 (1.3682)	35.351 – 35.591 (1.3918 – 1.4012)	35.091 (1.3815)

1. ENGINE OIL

2. ACCELERATION DEVICE/DIAPHRAGM ASSEMBLY


1. ENGINE OIL

INSPECTION

⚠ WARNING

- Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil. **KEEP OUT OF REACH OF CHILDREN.**

- 1) Place the outboard motor in the vertical position.
- 2) Remove the engine cover.
- 3) Remove the oil dipstick and wipe it clean.
- 4) Insert it all the way down the dipstick hole, then pull it out and read the oil level.
- 5) If the oil level is low, add the necessary recommended engine oil to bring the oil level to the upper mark on the dipstick. Do not overfill.

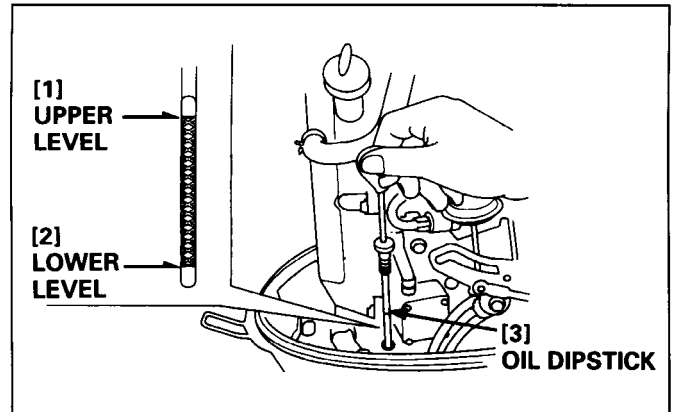

Engine oil capacity	2.0 ℓ (2.11 US qt, 1.76 Imp qt)
---------------------	---------------------------------

Recommended engine oil	SAE5W – 30 API Service classification Fuel Efficient SG, SH
------------------------	---

NOTE

- This oil is usually identified by words such as: “Energy Conserving II”, “Gas Saving,” “Fuel Saving,” etc.
- When a new oil filter has been installed, recheck the engine oil level after running the engine for a few minutes.
- Draining can be performed rapidly and completely when the engine is still warm.
- Place a shop towel under the oil filter when removing the oil filter.

CAUTION

- **Running the outboard motor without sufficient cooling water will damage the water pump and overheat the engine. Be sure that water flows from the cooling system indicator while the engine is running. If not, stop the engine and determine the cause of the problem.**
- **Keep clear of moving parts.**


2. ACCELERATION DEVICE/DIAPHRAGM ASSEMBLY

Adjust the acceleration device/diaphragm assembly after adjusting the idle speed (P. 3-8 of the base shop manual [66ZV300]).


- 1) Loosen the 6 x 16 mm torx bolts using the special tools.

TOOLS:

Torx bit handle	07703 - 0010300
Screw T30H	07703 - 0010600

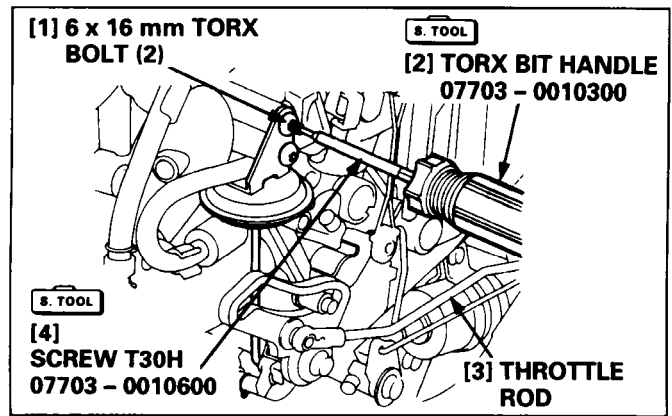

- 2) Remove the throttle rod from the throttle cam.
- 3) Move the throttle cam and hold it in a position where it does not contact the throttle cam roller.

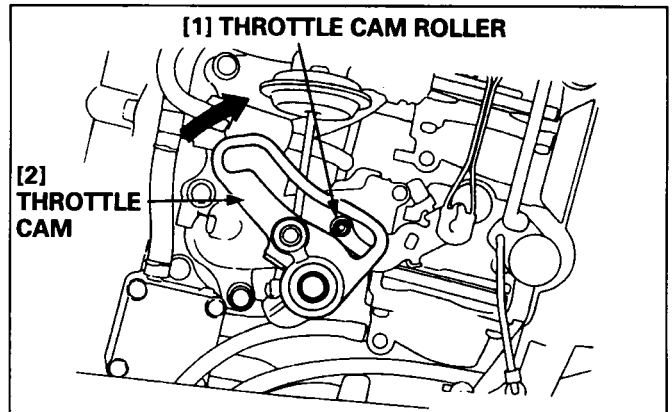


- 4) Move the diaphragm up or down slowly until the clearance between the throttle cam roller and throttle opener cam is 0.2 - 0.8 mm (0.008 - 0.031 in). While holding the clearance, tighten the 6 x 16 mm torx bolts using the special tools.

TOOLS:

Torx bit handle	07703 - 0010300
Screw T30H	07703 - 0010600

Attach the throttle rod to the throttle cam.

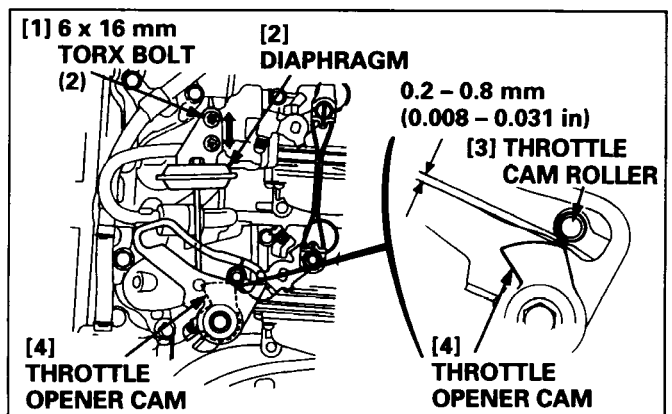

HONDA
OUTBOARD
MOTOR

Shop Manual News

Power Equipment

News No. P/P-087	Issue Date Nov. 2000
----------------------------	--------------------------------

SOME PARTS OF CHANGES

The method of installing the water seal which had been described to the undermentioned shop manual was changed.

Applicable Information	Publication No.	Applicable Pages	Size of Water Seal
BF2D	66ZW600	15-1, 15-2	11 x 21 x 8 mm
BF20A/25A	66ZV700	12-2, 12-5	22 x 35 x 7 mm
		12-8, 12-9	17 x 30 x 7 mm
		12-8	6 mm
		11-5, 11-8	22 x 35 x 7 mm
BF35A/45A	66ZV300	11-10, 11-11	17 x 30 x 7 mm
		11-4, 11-5	10 x 21 x 6 mm
BF75A/90A	66ZW000Z	11-8, 11-11	30 x 45 x 7 mm
		12-5, 12-6	10 x 21 x 6 mm
BF115A/130A	66ZW500	12-10, 12-15	30 x 45 x 7 mm

CHANGE LOCATIONS

The liquid applied to the circumference of water seals has been changed.



After Modification	Before Modification
INSTALLATION: <ul style="list-style-type: none"> Do not reuse. Apply grease to the mating surface and lips of the seals. Apply soapy water to the circumference of the seals. 	INSTALLATION: <ul style="list-style-type: none"> Do not reuse. Apply grease to the mating surface, circumference and lips of the seals.

SOME PARTS OF CHANGES

News No. P/P-093	Issue Date MAY., 01
---------------------	------------------------

Model	Publication No.	Applicable Pages
BF30A	66ZV700Z	2-1
BF40A/50A	66ZV300X	2-1

CHANGE LOCATIONS

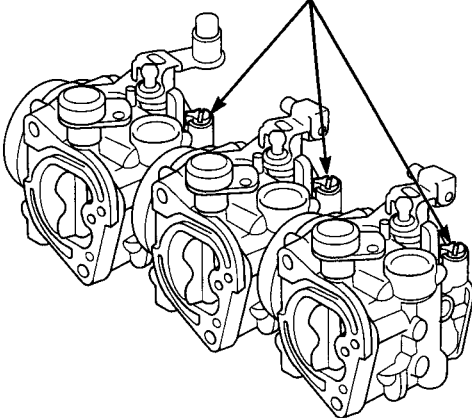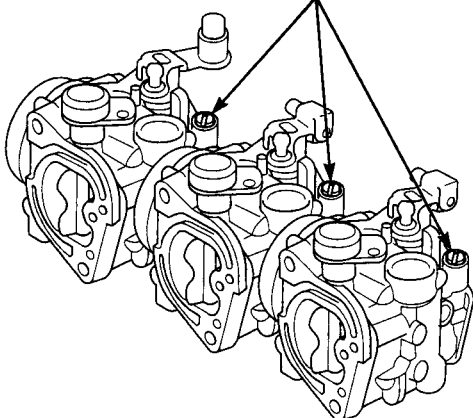Item	After Modification	Before Modification
Engine Serial No.	BF30A/BF30AX: BAWE-1011107 and subsequent	BF30A/BF30AX: Up to BAWE-1011106
	BF30A1: BAWE-2000001 and subsequent	—————
	BF40A/BF40AX: BAYE-1016440 and subsequent	BF40A/BF40AX: Up to BAYE-1016439
	BF40A1: BAYE-2007400 and subsequent	BF40A1: Up to BAYE-2007399
	BF50A/BF50AX: BAZE-1033504 and subsequent	BF50A/BF50AX: Up to BAZE-1033503
BF50A1: BAZE-2000001 and subsequent	—————	
Carburetor BF30A1/BF40A1/BF50A1 Canadian models only	PILOT SCREW WITH LIMITER CAP	PILOT SCREW
		
Pilot Screw Opening	BF30A/BF30AX, BF30A1: 2 turns out	BF30A, BF30AX: 3 turns out
	BF40A/BF40AX, BF40A1: 1-5/8 turns out	BF40A/BF40AX, BF40A1: 2-1/4 turns out
	BF50A/BF50AX, BF50A1: 2 turns out	BF50A, BF50AX: 1 turn out

PILOT SCREW REPLACEMENT


Leave the pilot screw and limiter cap in place during carburetor cleaning. Remove only if necessary for carburetor repair. Removal of the limiter cap requires breaking the pilot screw. A new pilot screw and limiter cap must be installed.

- 1) When the limiter cap has been broken off, remove the broken pilot screw.
- 2) Place a new O-ring on the replacement pilot screw, and install it on the carburetor.
- 3) Turn the pilot screw in until it is fully seated, then turn the screw out the required number of turns.

Pilot screw opening	BF30A1	2 turns out
	BF40A1 (BAYE 2000001~2007399)	2-1/4 turns out
	BF40A1 (BAYE 2007400~)	1-5/8 turns out
	BF50A1	2 turns out

- 4) Apply Loctite®638 to the inside of the limiter cap, then install the cap so its stop prevents the pilot screw from being turned counterclockwise.

Be careful to avoid turning the pilot screw while installing the limiter cap. The pilot screw must stay at its require setting.

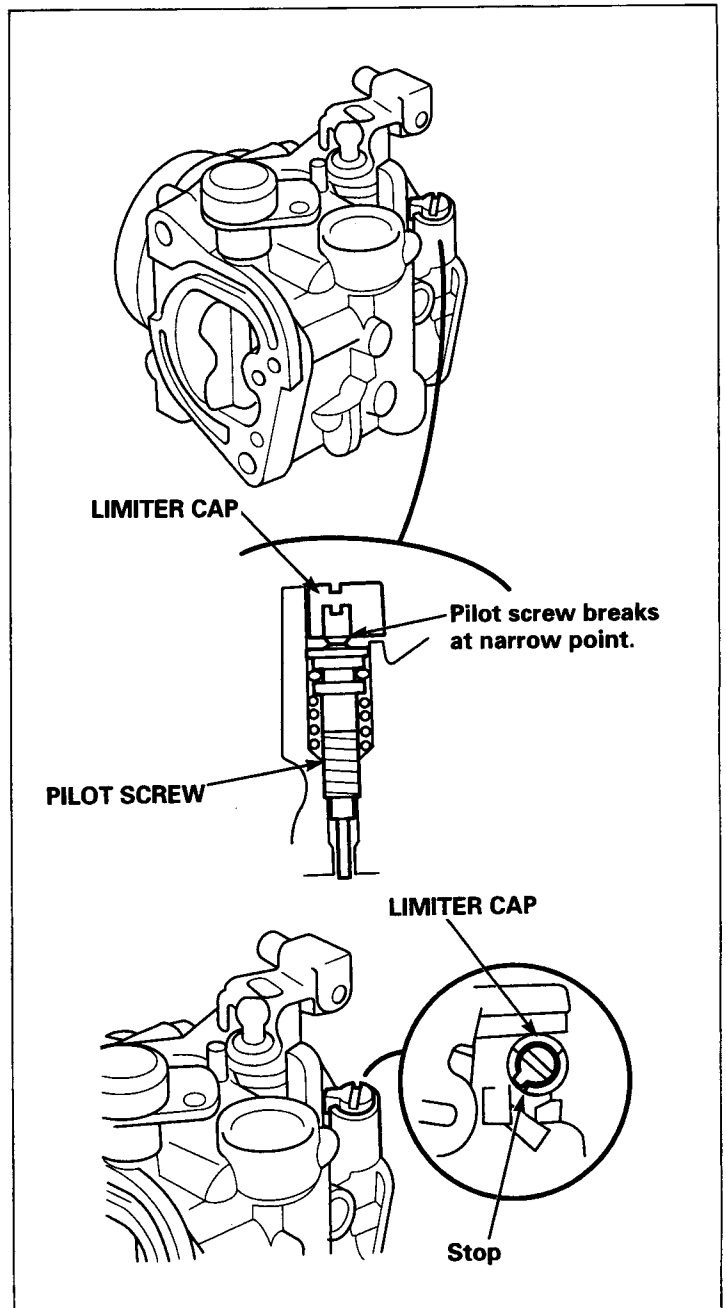

BF35A·BF45A·BF40A·BF50A

Power Equipment


News No.	Issue Date
P/P-161	Mar. 2003

SOME PARTS OF CHANGES

Applicable Information	Publication No.	Applicable Page
BF35A·BF45A·BF40A·BF50A	66ZV300	6-2

CHANGE LOCATIONS

- Before installing the flywheel, degrease the back side (the crankshaft side) of the flywheel and the end face of the crankshaft. Also, install 10 × 25 mm flange bolts into the flywheel after applying engine oil to the flanged part and threaded part of the bolts.

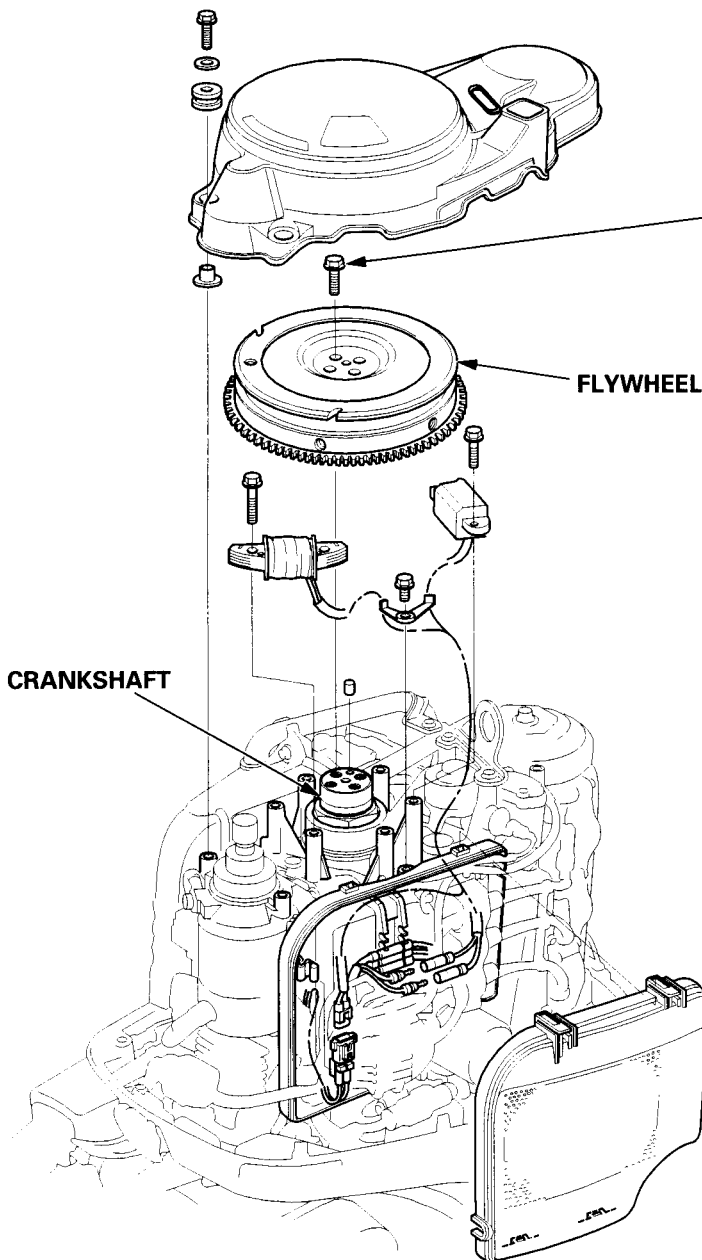


10 × 25 mm FLANGE BOLT (4)
65 N·m (6.6 kgf·m)

▲ : DEGREASING

Wipe the flywheel with a clean shop towel sprayed with degreasing agent.

● : APPLYING ENGINE OIL TO THE BOLTS

- Apply engine oil thinly to the flanged part and threaded part.
- Do not apply so much engine oil so that it drips from the bolts.

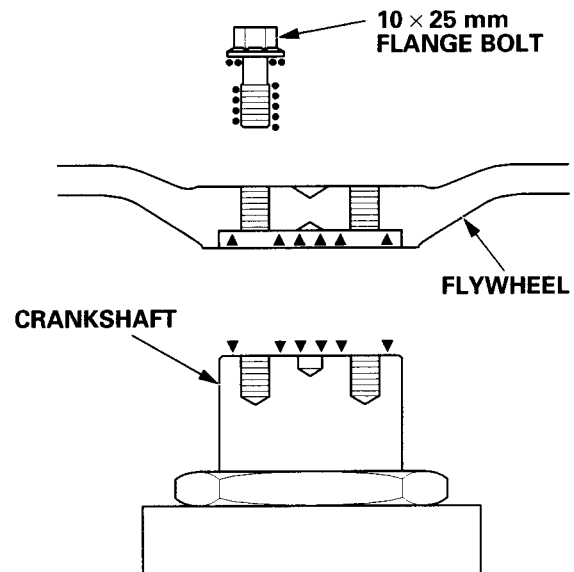


Model: BF50/30AY

Re: Carburetor assembly parts

Contents: We would like to inform you that the carburetor assembly parts have been changed from the following model numbers on.

Old	New	Compatibility	
		Old to new	New to old
CARBURETOR ASSY. (#1 #2)	CARBURETOR ASSY. (#1 #2)	No	No
CARBURETOR ASSY. (#)	CARBURETOR ASSY. (#)	No	No
CARBURETOR ASSY.	CARBURETOR ASSY.	No	Yes
CARBURETOR ASSY. (#1 #2)	CARBURETOR ASSY. (#1 #2)	No	No
CARBURETOR ASSY. (#)	CARBURETOR ASSY. (#)	No	No
CARBURETOR ASSY.	CARBURETOR ASSY.	No	Yes

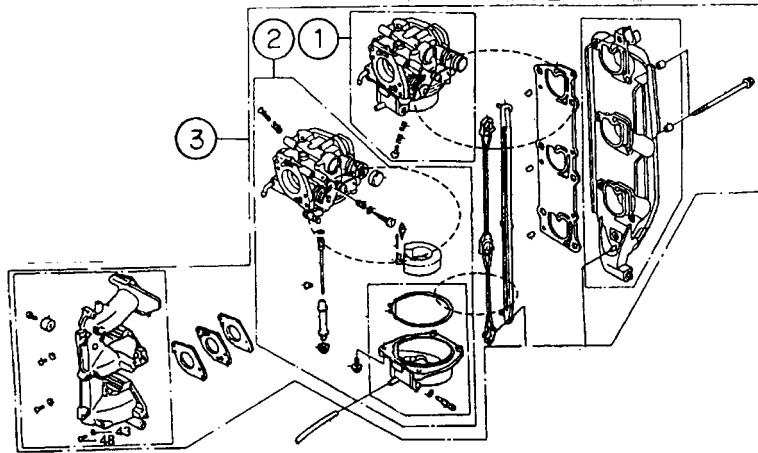


Change

Stabilization of the idle speed by change of the passage to the pilot screw part of the carburetor body

Applicable model numbers

[Redacted] (From the production of June 2000 on.)
 [Redacted] (From the production of June 2000 on.)



In case of problems with the idle speed stability for old models, please take the following measures.

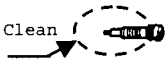Confirmation of the phenomenon Idle speed not stable, engine stalls occur. Procedure {1} Wipe the tip of the pilot screw removed from the carburetor with a rag and wash it with kerosene or similar. {2} Return the pilot screw for the standard number of turns according to the service manual. {3} Follow the service manual to perform tuning adjustment and adjustment to the specified idle speed again. {4} If the problem occurs again with the passage of time after the above steps {1} to {3} have been performed, replace the old carburetor assembly by the countermeasure carburetor assembly.	Clean 
---	---

Model: BF40/50AY

Re: Change of the wiring method for the power trim tilt motor

Contents: We would like to inform you that the wiring method for the power trim tilt motor assembly cord has been changed from the following model numbers on.

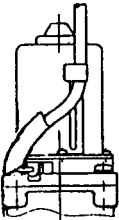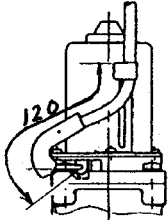Old	New
MOTOR ASSY., POWER TILT	MOTOR ASSY., POWER TILT (no change in part number/specifications)
 <p>Motor cord fixed by clamping at any position</p>	 <p>Motor cord fixed by clamping at the 120 mm position</p>

Change purpose

Depending on the scatter for the motor cord fixing position, the motor cord tended to be pulled, causing deform grommet at the motor cord outlet, reducing the seal performance, and causing entry of water into the motor. Maintaining of the seal performance by standardization of the clamping position.

Change contents

Old	New
Motor cord fixed by clamping at any position	Motor cord fixed by clamping at the 120 mm position

Applicable model numbers

.....	(From the production of October 1999 on.)
.....	(From the production of October 1999 on.)

In case of trouble with the operation of the power trim tilt assembly with old model numbers, please take the following measures.

<p>Trouble confirmation The motor of the power trim tilt assembly does not operate.</p> <p>Procedure</p> <p>{1} Disassembly the motor according to the service manual, inspect all parts, and confirm that there is no internal rust or sticking of the brush to the holder.</p> <p>{2} In case of abnormalities, exchange the required parts or the motor assembly according to the service manual</p> <p>{3} Fix the cord by clamping it at the position 120 mm from the root.</p>
--

PREFACE

This supplement describes the major features and repair procedures of the Honda BF40A and BF50A out-board motors.

For service information which is not covered in this supplement, please refer to the BF35A·45A base shop manual (part number 66ZV300, 66ZV300Z, 66ZV300Y, 66ZV300X and 66ZV300W).

Careful observance of these instructions will result in better, safer service work.

Pay attention to these symbols and their meaning:


▲ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.


CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

ALL INFORMATIONS, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

**Honda Motor Co., Ltd.
Service Publications Office**

CONTENTS







OUTLINE OF CHANGES	
SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
 ENGINE COVER/THROTTLE/CHUKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
ENGINE REMOVAL/INSTALLATION	7
WATER JACKET COVER/THERMOSTAT/THERMO SWITCH	8
CYLINDER HEAD/VALVE/OIL PUMP	9
CRANKCASE /CYLINDER BLOCK/CRANKSHAFT/PISTON	10
PROPELLER/GEAR CASE/EXTENSION CASE	11
OIL PAN/PRIMARY GEAR CASE/SWIVEL CASE	12
GAS ASSIST/POWER TILT	13
STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE BRACKET/SHIFT LEVER/HANDLEBAR (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17





 The marked sections contain no changes. They are not covered in this manual.

OUTLINE OF CHANGES	1
1. SPECIFICATIONS	1-1
1. WIRING DIAGRAM.....	1-1
2. SERVICE INFORMATION	2-1
1. TROUBLESHOOTING	2-1
3. MAINTENANCE	3-1
1. MAINTENANCE SCHEDULE.....	3-1

OUTLINE OF CHANGES

BF40A•50A

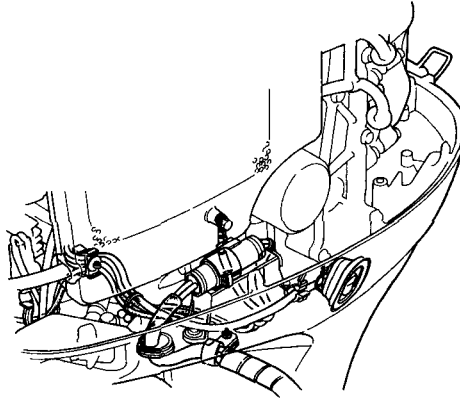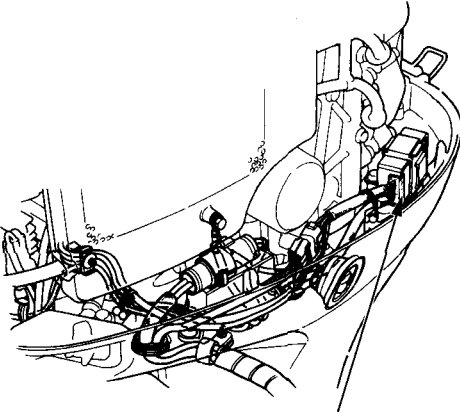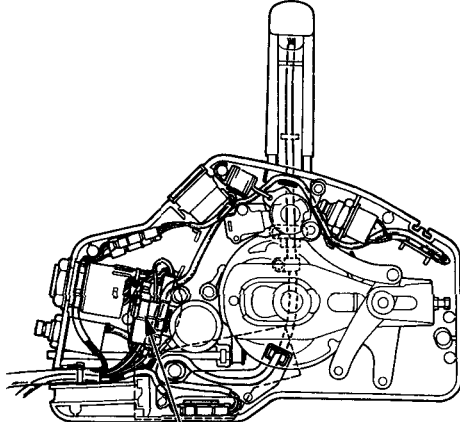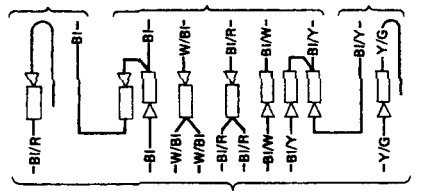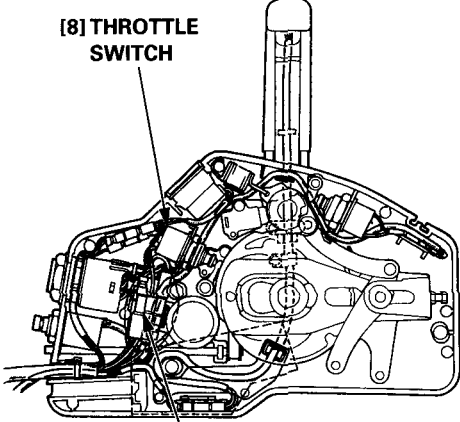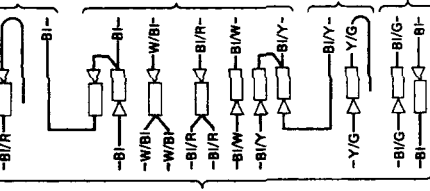
<p>[2] Frame serial number</p> <p>[1] Item</p>	<p>[3] BF40A: BAYS-3221532 and subsequent : BAYL-3100445 and subsequent BF50A: BAZS-3222752 and subsequent : BAZL-3100576 and subsequent : BAZU-3100088 and subsequent</p>	<p>[4] BF40A: Up to BAYS-3221531 : Up to BAYL-3100444 BF50A: Up to BAZS-3222751 : Up to BAZL-3100575 : Up to BAZU-3100087</p>
<p>[5] TRIM CONTROL UNIT</p> <p>The trim control unit for power trim warning is no longer installed.</p>		 <p>[6] TRIM CONTROL UNIT</p>
<p>[7] REMOTE CONTROL BOX</p> <p>The throttle switch is no longer installed in the control box.</p>	 <div data-bbox="393 1428 882 1732"> <p>[9] EMERGENCY STOP SWITCH [10] IGNITION SWITCH [11] WARNING BUZZER</p>  <p>[12] REMOTE CONTROL CABLE B</p> </div>	 <p>[8] THROTTLE SWITCH</p> <div data-bbox="912 1428 1402 1732"> <p>[9] EMERGENCY STOP SWITCH [10] IGNITION SWITCH [11] WARNING BUZZER [8] THROTTLE SWITCH</p>  <p>[12] REMOTE CONTROL CABLE B</p> </div>
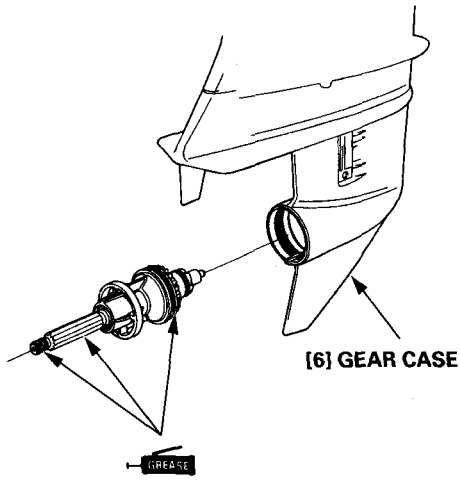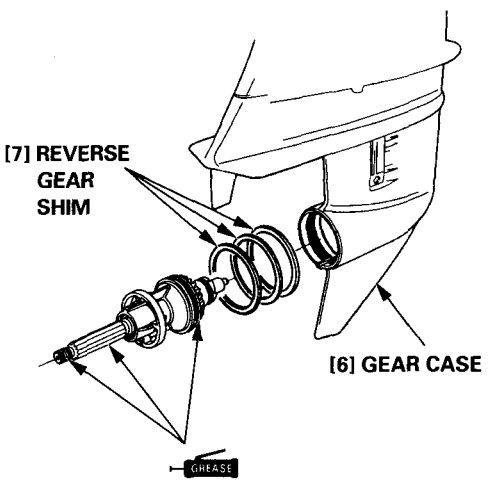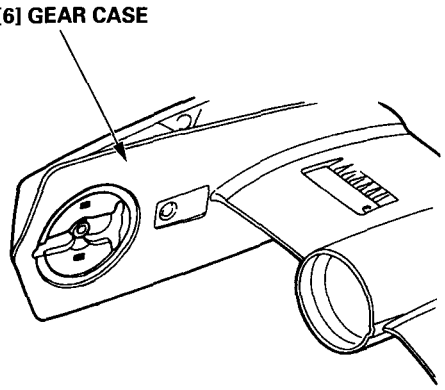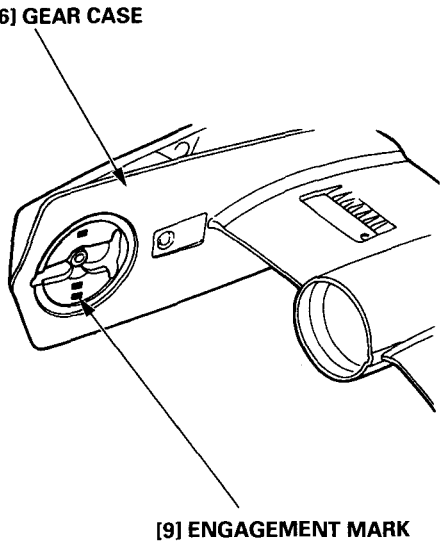
<p>[2] Frame serial number</p> <p>[1] Item</p>	<p>[3] BF40A: BAYS-3221482 and subsequent : BAYL-3100298 and subsequent BF50A: BAZS-3222623 and subsequent : BAZL-3100412 and subsequent : BAZU-3100079 and subsequent</p>	<p>[4] BF40A: Up to BAYS-3221481 : Up to BAYL-3100297 BF50A: Up to BAZS-3222622 : Up to BAZL-3100411 : Up to BAZU-3100078</p>
<p>[5] GEAR CASE</p> <p>The reverse gear shims are not used.</p>	 <p>[6] GEAR CASE</p> <p>GREASE</p>	 <p>[7] REVERSE GEAR SHIM</p> <p>[6] GEAR CASE</p> <p>GREASE</p>
<p>[8] GEAR CASE</p> <p>The engagement mark for the reverse gear shims are not used.</p>	 <p>[6] GEAR CASE</p>	 <p>[6] GEAR CASE</p> <p>[9] ENGAGEMENT MARK</p>
<p>[10] REVERSE GEAR SHIM SELECTION TABLE</p>	<p>[11] Not applied</p>	<p>[12] Applied</p>

1. WIRING DIAGRAM

1. WIRING DIAGRAM

Power trim & tilt/remote control type

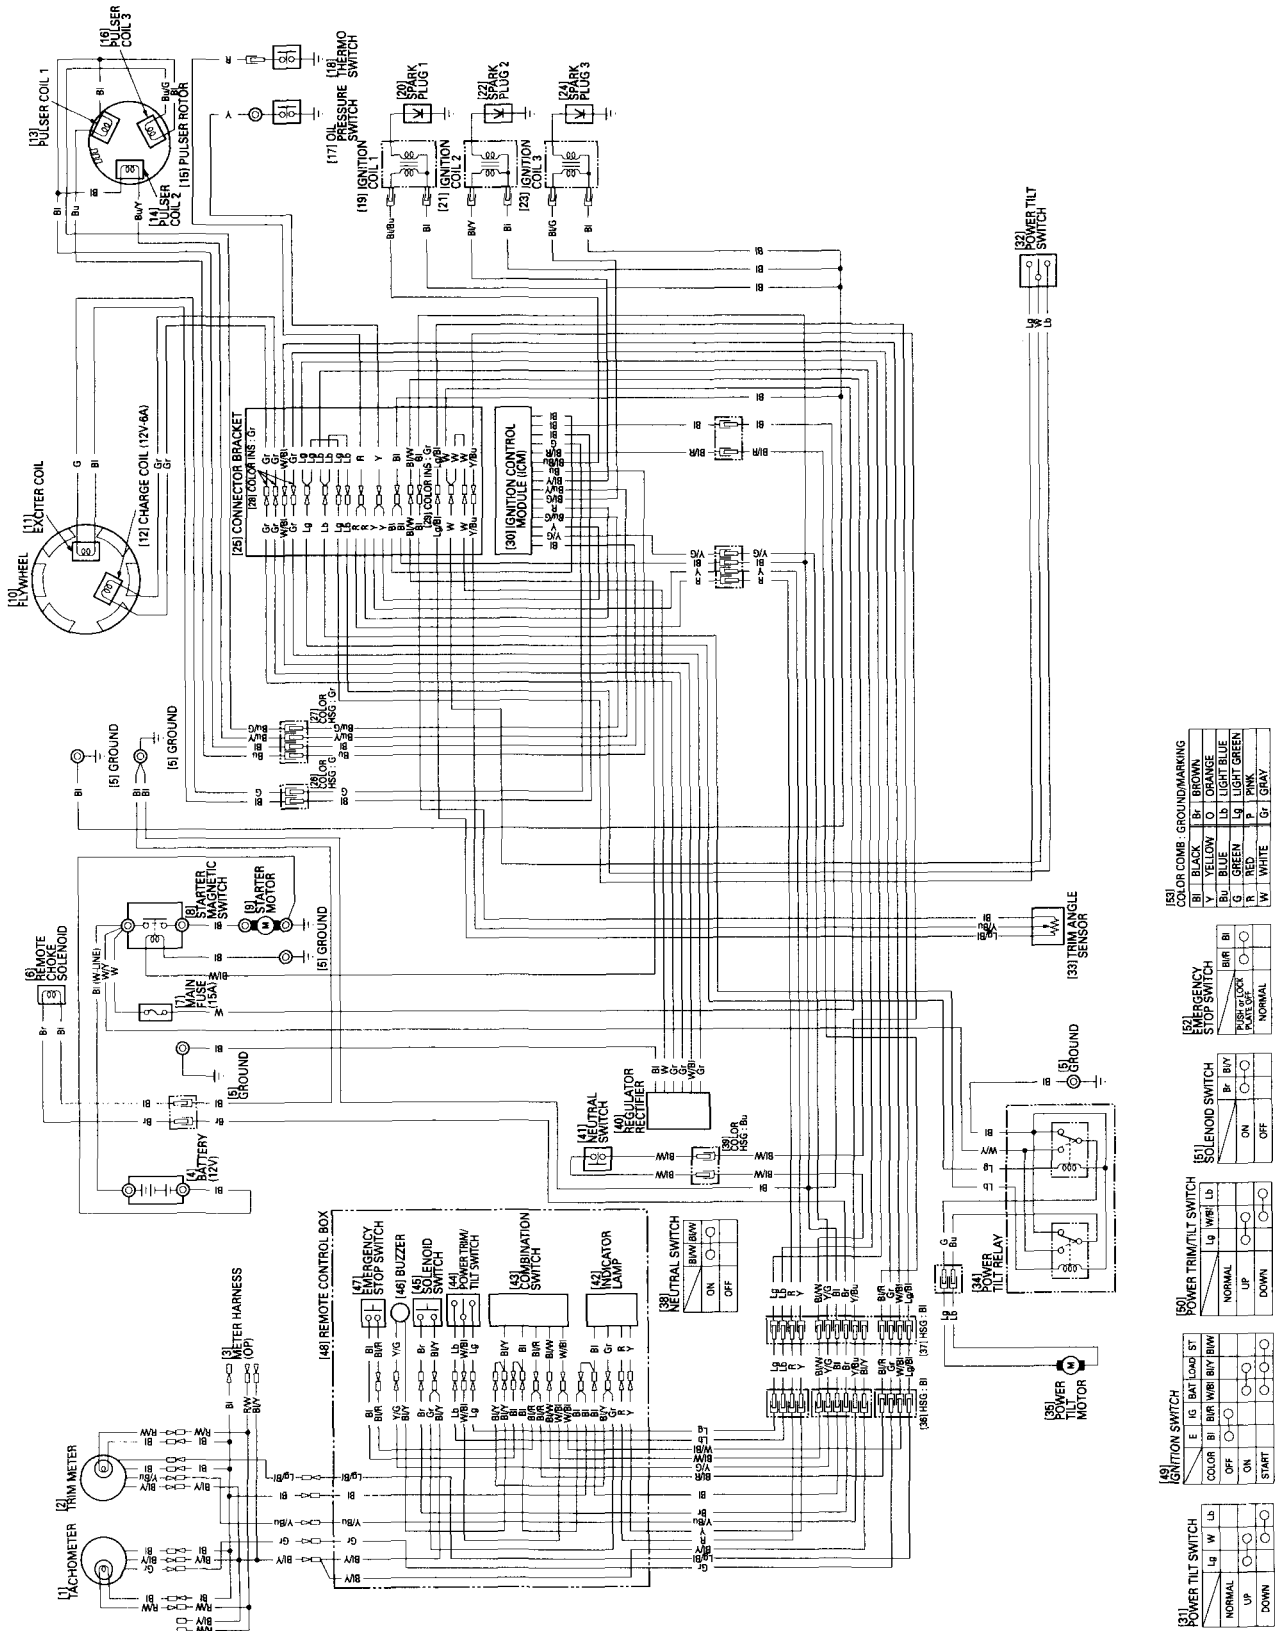

[31] POWER TILT SWITCH	
NORMAL	UP
DOWN	DOWN

[48] IGNITION SWITCH	
E	IG BATT LOAD ST
BI	BI SW
OFF	OFF
ON	ON
START	START

[50] POWER TRIM/TILT SWITCH	
NORMAL	UP
DOWN	DOWN


[51] SOLENOID SWITCH	
ON	ON
OFF	OFF

[52] EMERGENCY STOP SWITCH	
BI SW	NORMAL
PERI/COIL	PERI/COIL

[53] COLOR CODE - GROUND MARKING	
BI	BROWN
BL	BLACK
Y	YELLOW
BU	BLUE
G	GREEN
R	RED
W	WHITE
L	LIGHT BLUE
LG	LIGHT GREEN
P	PINK
Gr	GRAY

1. TROUBLESHOOTING

E. ALERT SYSTEM (Remote control type)

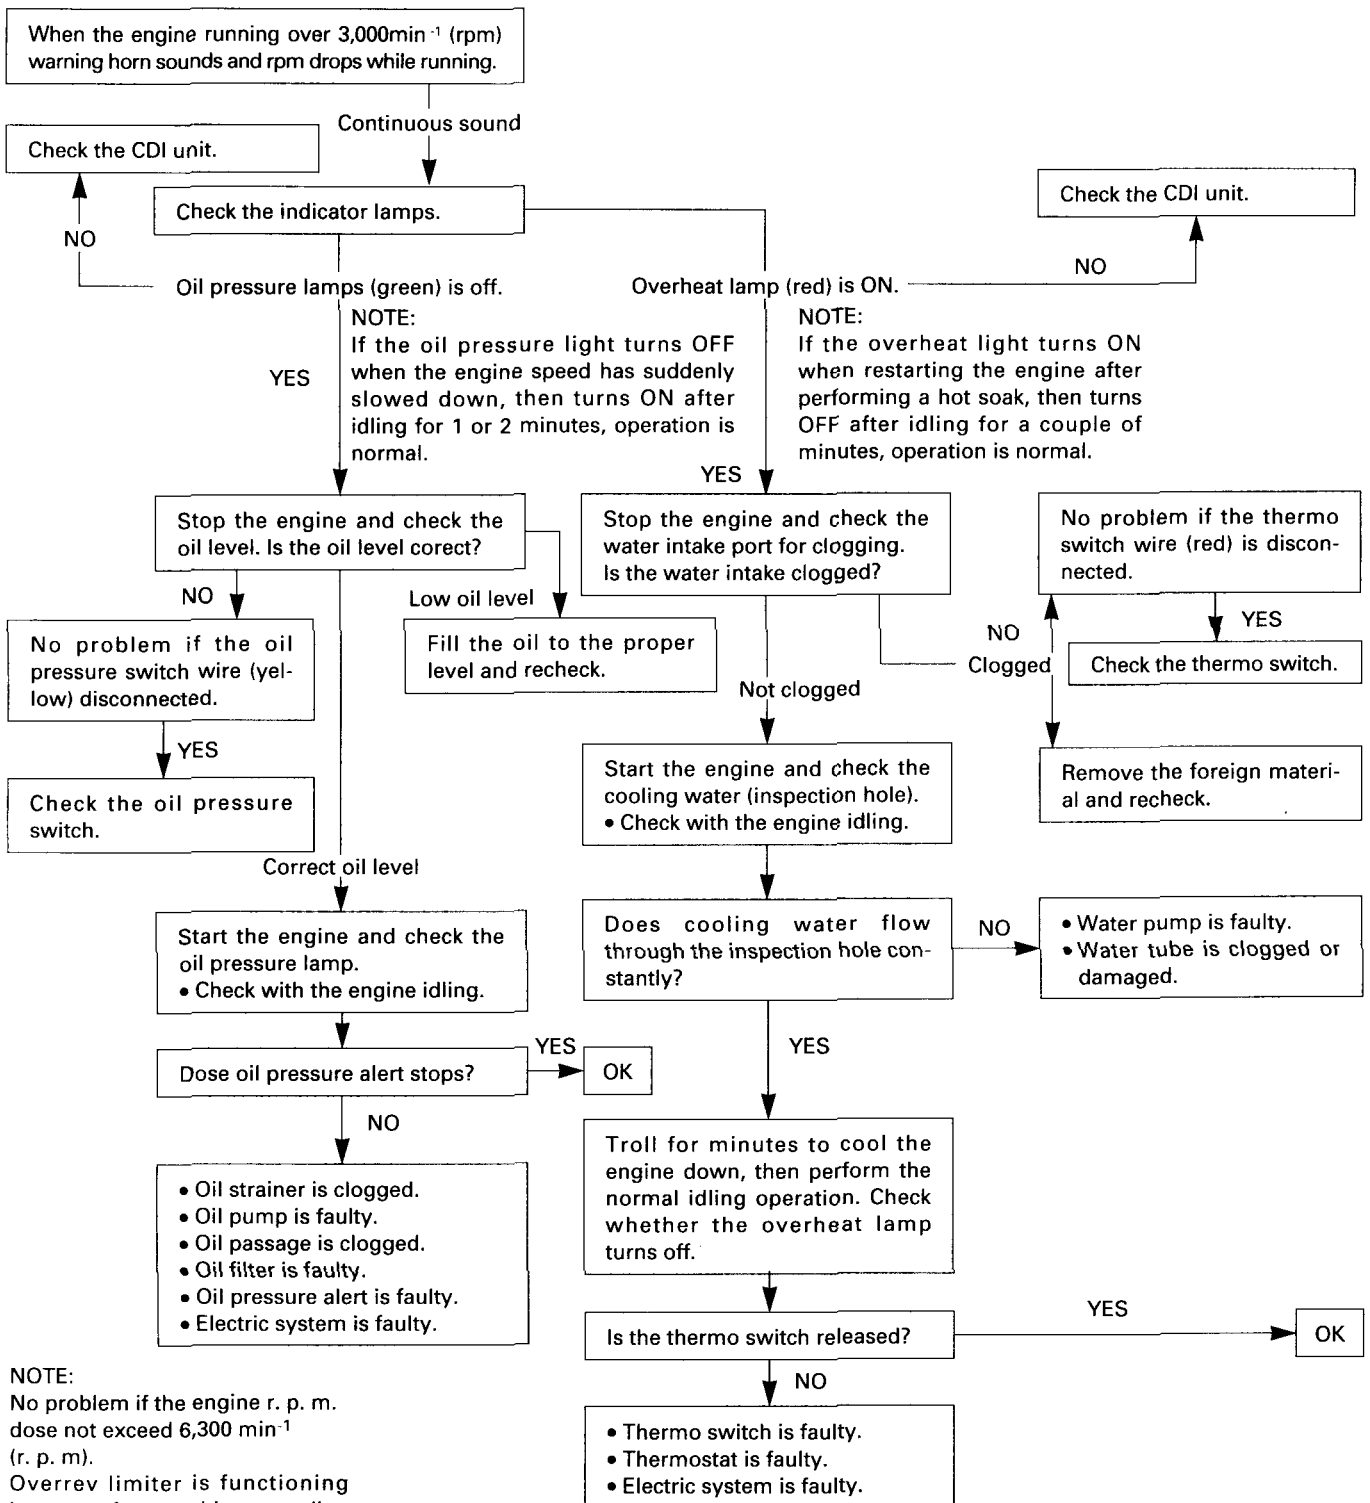

1. MAINTENANCE SCHEDULE

1. MAINTENANCE SCHEDULE

REGULAR SERVICE PERIOD(3)		Each use	After use	First month or 20 hrs.	Every 6 months or 100 hrs.	Every year or 200 hrs.	Every 2 years or 400 hrs.	Ref. base shop manual page
Item	Perform at every indicated month or operating hour interval, whichever comes first.							
* Engine oil	Check level	○						3-2
	Change			○	○			3-2
Engine oil filter	Replace					○		3-3
Gear case oil	Change			○	○			3-4
Timing belt	Check-adjust					○		3-16
* Carburetor linkage	Check-adjust			○	○			3-11
* Valve clearance	Check-adjust			○		○		3-5
* Spark plug	Check-adjust				○			3-4
	Replace					○		3-4
Propeller and Cotter pin	Check	○						11-2
Anode	Check	○						—
Idling speed	Check-adjust			○	○			3-8
Lubrication	Grease			○(1)	○(1)			2-33
* Fuel tank and tank filter	Clean					○		3-8
* Fuel filter	Check				○			3-7
	Replace						○	3-7
Thermostat	Check					○		8-3
* Fuel line	Check	○						5-4, 12
	Replace			Every 2 years (If necessary)				5-4, 12
Battery and cable connection	Check level-tightness	○						—
Bolts and Nuts	Check-tightness			○	○			—
* Crankcase breather tube	Check					○		5-3
Cooling water passages	Clean		○(2)					—

* Emission item for Borden sea model.

Note: (1) Lubricate more frequently when used in salt water.

(2) When operating in salt water, turbid or muddy water, the engine should be flushed with clean water after each use.

(3) For professional commercial use, log hours of operation to determine proper maintenance intervals.

PREFACE

This manual covers the construction, function and servicing procedures of the Honda BF40A•BF50A Outboard motors.

For service information which is not covered in this supplement, please refer to the base shop manual (66ZV300, 66ZV300Z, 66ZV300Y, 66ZV300X, 66ZV300W, 66ZV300V).


All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

© Honda Motor Co., Ltd.
Service Publication Office



CONTENTS







OUTLINE OF CHANGES	
SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
ENGINE COVER/THROTTLE/CHOKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
ENGINE REMOVAL/INSTALLATION	7
WATER JACKET COVER/THERMOSTAT/ THERMO SWITCH	8
CYLINDER HEAD/VALVE/OIL PUMP	9
CRANKCASE/CYLINDER BLOCK/ CRANKSHAFT/PISTON	10
PROPELLER/GEAR CASE/EXTENSION CASE	11
OIL PAN/PRIMARY GEAR CASE/SWIVEL CASE	12
GAS ASSISTED/POWER TILT	13
STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE BRACKET/SHIFT LEVER/ HANDLEBAR (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17
WIRING DIAGRAM	18







 The marked sections contain no changes.
They are not covered in this manual.







OUTLINE OF CHANGES.....	1	15. THROTTLE BRACKET/SHIFT LEVER/ HANDLEBAR (TILER HANDLE TYPE ONLY).....	15-1
1. SPECIFICATIONS.....	1-1	1. LONG TILLER HANDLE.....	15-1
1. SPECIFICATIONS.....	1-1		
2. DIMENSIONAL DRAWINGS.....	1-4	16. ELECTRICAL EQUIPMENT.....	16-1
2. SERVICE INFORMATION.....	2-1	1. CDI UNIT.....	16-1
1. MAINTENANCE STANDARDS.....	2-1	2. POWER COIL.....	16-3
2. TORQUE VALUES.....	2-1	3. ECT (Engine Coolant Temperature) SENSOR.....	16-3
3. SPECIAL TOOLS.....	2-3	4. INDICATOR.....	16-4
4. APPLYING LIQUID SEALANT.....	2-3		
5. TROUBLE SHOOTING.....	2-4		
6. CABLE & HARNESS ROUTING.....	2-17		
7. TUBE ROUTING.....	2-28		
3. MAINTENANCE.....	3-1		
1. MAINTENANCE SCHEDULE.....	3-1		
2. CARBURETOR SYNCHRONIZATION.....	3-2		
3. DASHPOT DIAPHRAGM.....	3-4		
4. THROTTLE LINKAGE ADJUSTMENT.....	3-5		
5. SHIFT CABLE ADJUSTMENT (Long Tiller Handle Type).....	3-8		
6. STEERING FRICTION ADJUSTMENT (Long Tiller Handle Type).....	3-8		
5. FUEL SYSTEM.....	5-1		
1. SILENCER COVER.....	5-1		
2. CARBURETOR/MANIFOLD REMOVAL.....	5-2		
3. CARBURETOR.....	5-5		
4. CARBURETOR/MANIFOLD INSTALLATION.....	5-22		
6. FLYWHEEL/TIMING BELT.....	6-1		
1. FLYWHEEL.....	6-1		
12. OIL PAN/PRIMARY GEAR CASE/SWIVEL CASE 12-1			
1. STEERING FRICTION LEVER (Long Tiller Handle Type).....	12-1		
13. GAS ASSISTED DAMPER.....	13-1		
1. GAS ASSISTED DAMPER.....	13-1		
2. POWER TRIM/TILT ASSEMBLY.....	13-5		






OUTLINE OF CHANGES





BF40A•BF50A

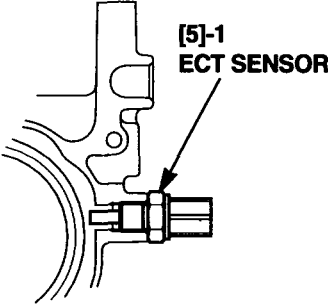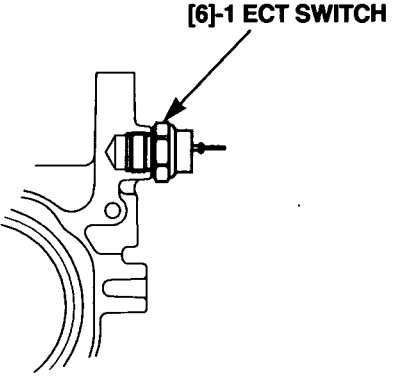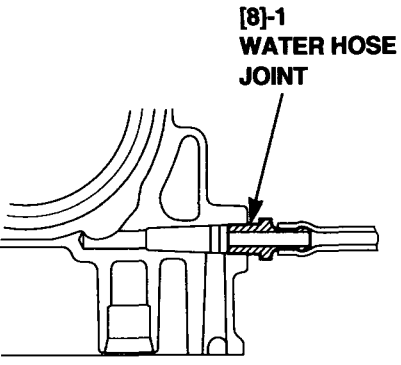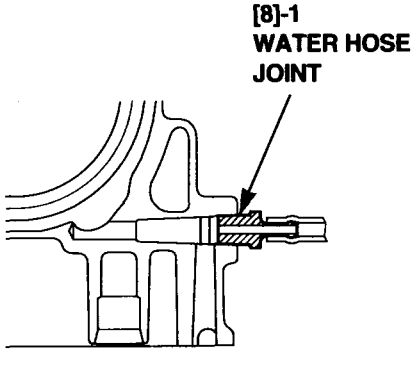
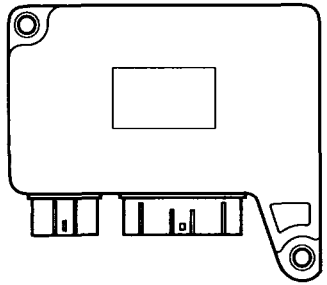
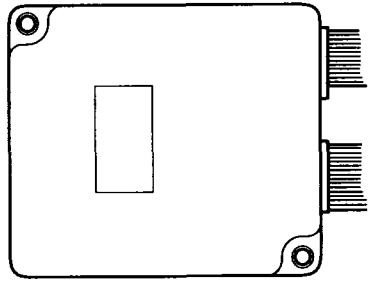
[1] Item	[2] After change	[3] Before change
[4] ECT switch, ECT sensor	[5] ECT sensor Installation position changed. 	[6] ECT switch 
[7] Water hose joint	[8] Inner diameter (I.D.) changed 	[8]-1 WATER HOSE JOINT 
[9] CDI unit	[10] Change to digital CDI unit 	[11] Analogue CDI unit 

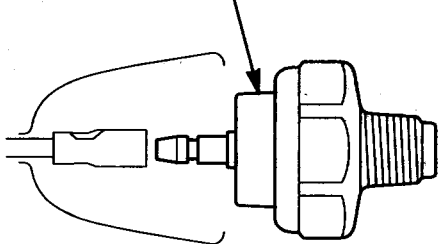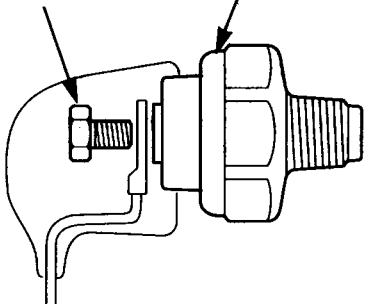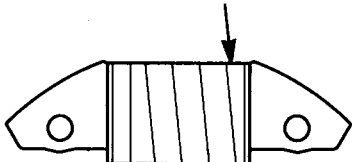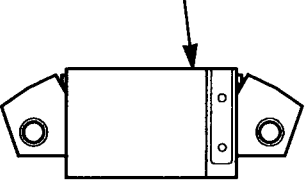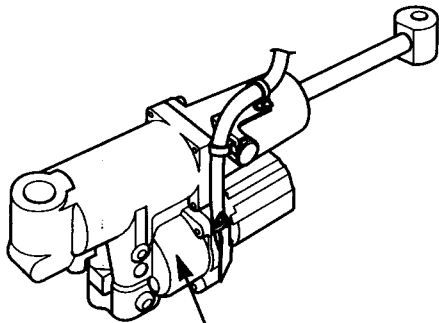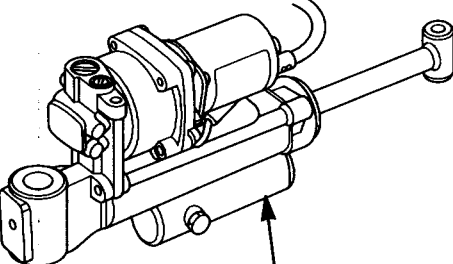[1] Item	[2] After change	[3] Before change
[4] Oil pressure switch	<p>[5] Connecting terminal, connection method changed.</p> <p>[5]-1 OIL PRESSURE SWITCH</p>  <p>[5]-4 MALE CONNECTOR</p>	<p>[5]-2 4 x 8 mm TERMINAL SCREW</p> <p>[5]-3 OIL PRESSURE SWITCH</p> 
[6] Power coil	<p>[7] Change to power coil from exciter coil.</p> <p>[7]-1 POWER COIL</p> 	<p>[7]-2 EXCITER COIL</p> 
[8] Power trim/tilt assembly	 <p>[8]-1 POWER TRIM/TILT ASSEMBLY</p>	 <p>[8]-1 POWER TRIM/TILT ASSEMBLY</p>

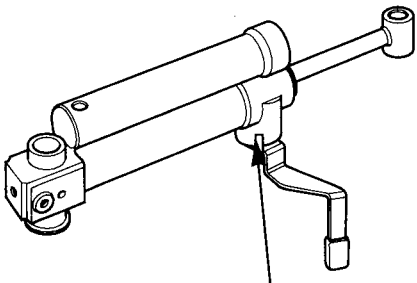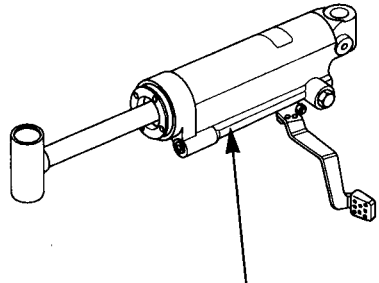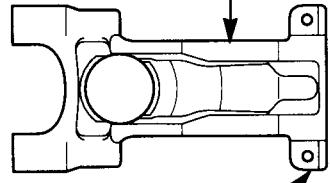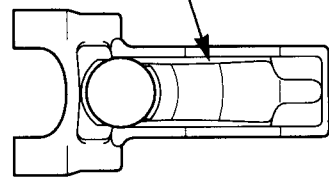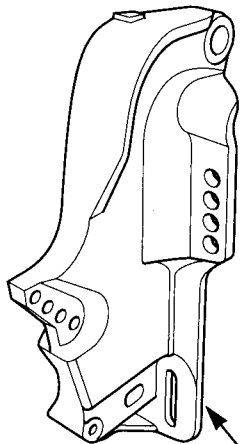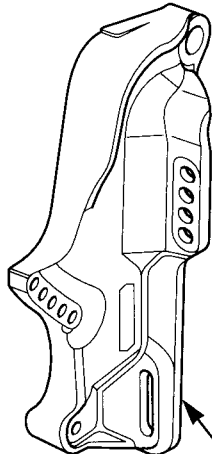[1] Item	[2] After change	[3] Before change
[4] Gas assisted damper	<p>[5] Erected type</p>  <p>[5]-1 GAS ASSISTED DAMPER</p>	<p>[6] Inverted type</p>  <p>[6]-1 GAS ASSISTED DAMPER</p>
[7] Mount frame	<p>[7]-1 MOUNT FRAME</p>  <p>[7]-2 FRICTION PLATE MOUNTING SECTION</p>	<p>[7]-1 MOUNT FRAME</p> 
[8] Stern bracket	 <p>[8]-1 STERN BRACKET</p>	 <p>[8]-1 STERN BRACKET</p>

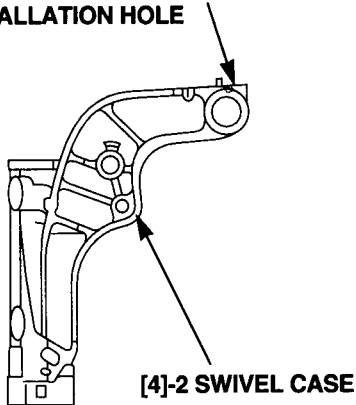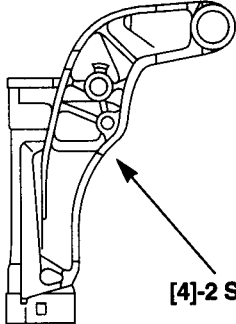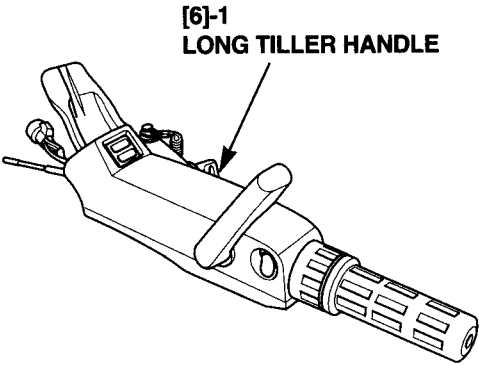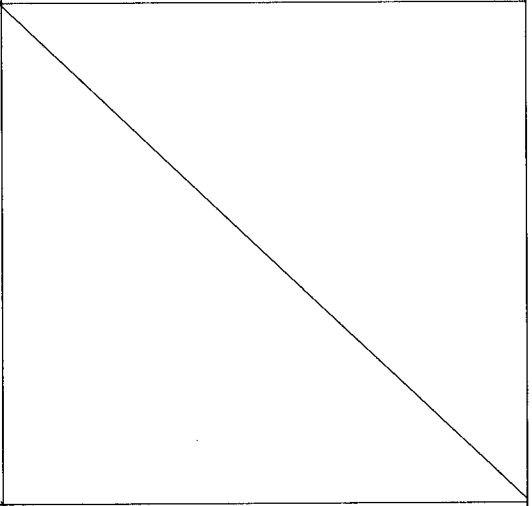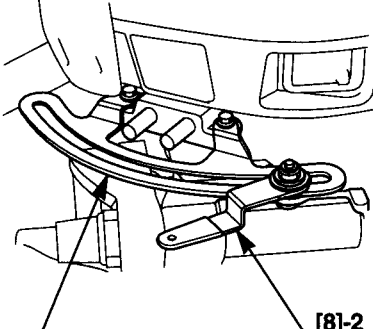[1] Item	[2] After change	[3] Before change
[4] Swivel case	<p>[4]-1 STEERING FRINCTION STUD INSTALLATION HOLE</p>  <p>[4]-2 SWIVEL CASE</p>	 <p>[4]-2 SWIVEL CASE</p>
[5] Tiller handle	<p>[6] Long tiller handle type added</p>  <p>[6]-1 LONG TILLER HANDLE</p>	
[7] Friction adjusting lever	<p>[8] Tiller handle friction lever being added in connection with addition of the long tiller handle type</p>  <p>[8]-1 FRICTION PLATE</p> <p>[8]-2 FRICTION ADJUSTING LEVER</p>	

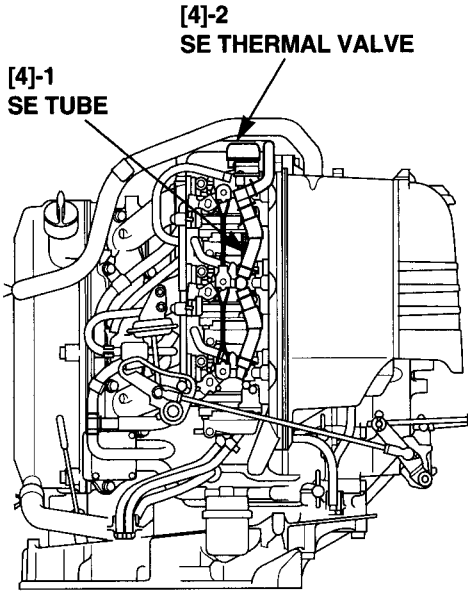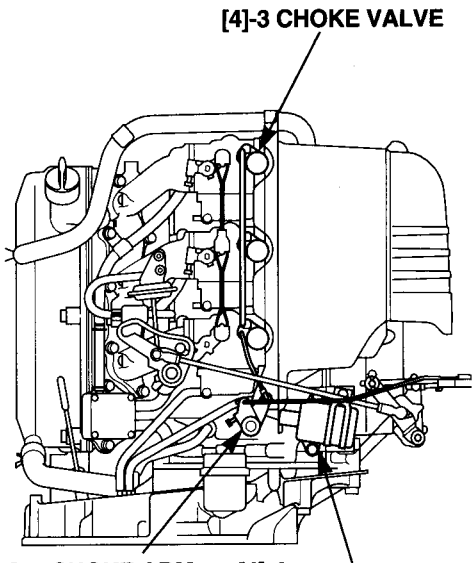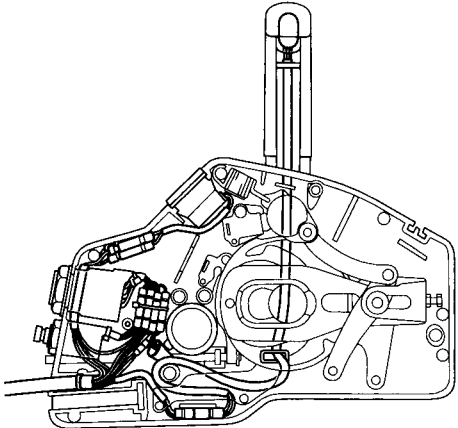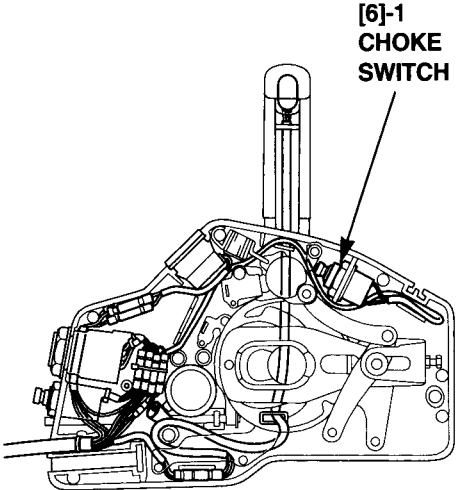[1] Item	[2] After change	[3] Before change
[4] Carburetor	 <p>[4]-1 SE TUBE</p> <p>[4]-2 SE THERMAL VALVE</p> <p>[4]-5 CHOKE ARM</p> <p>[4]-4 CHOKE SOLENOID (REMOTE CONTROL TYPE)</p>	 <p>[4]-3 CHOKE VALVE</p> <p>[4]-5 CHOKE ARM</p> <p>[4]-4 CHOKE SOLENOID (REMOTE CONTROL TYPE)</p>
[5] Remote control box	<p>[6] Choke switch is no longer installed.</p> 	 <p>[6]-1 CHOKE SWITCH</p>

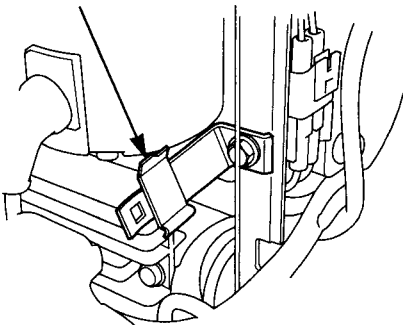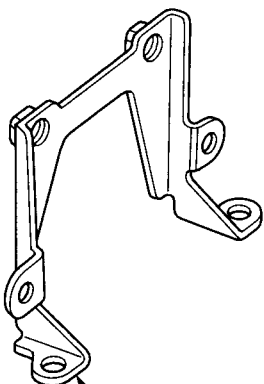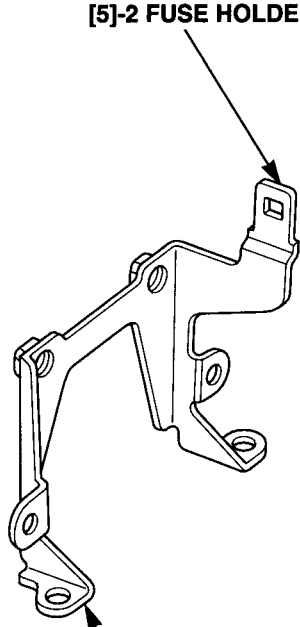[1] Item	[2] After change	[3] Before change
[4] Fuse holder bracket	<p>[5] Newly provided.</p> <p>[5]-1 FUSE HOLDER BRACKET</p>   <p>[5]-3 REGULATOR/RECTIFIER BRACKET</p>	 <p>[5]-2 FUSE HOLDER</p> <p>[5]-3 REGULATOR/RECTIFIER BRACKET</p>

1. SPECIFICATIONS
2. DIMENSIONAL DRAWING

1. SPECIFICATIONS

DIMENSIONS AND WEIGHTS

Model	BF40A						
Description code	BAYS						
Type	SH	LH	LHT	SR	SRT	LR	LRT
Overall length	770 mm (30.3 in)			685 mm (27.0 in)			
Overall width	370 mm (14.6 in)						
Overall height	1,260 mm (49.6 in)	1,365 mm (53.7 in)		1,260 mm (49.6 in)		1,365 mm (53.7 in)	
Dry weight (With propeller mounted)	93.5 kg (309 lb)	95.5 kg (316 lb)	97.5 kg (322 lb)	89 kg (294 lb)	91 kg (301 lb)	91 kg (301 lb)	93 kg (307 lb)
Operating weight	96 kg (317 lb)	98 kg (324 lb)	100 kg (322 lb)	91.5 kg (302 lb)	93.5 kg (309 lb)	93.5 kg (309 lb)	95.5 kg (316 lb)
Transom height	416 mm (16.4 in)	521 mm (20.5 in)		416 mm (16.4 in)		521 mm (20.5 in)	
Transom angle	5 stage adjustment (8°, 12°, 16°, 20°, 24°)						
Tilting angle	-4° ~ 63°						
Trimming angle	—	-4° ~ 12°		—	-4° ~ 12°		-4° ~ 12°
Swivel angle	37.5° right and left						

Types of Honda BF40A Outboard Motors

It may be necessary to refer to this chart for reference purposes when reading this manual.

Model	Type	Shaft length	Long tiller handle	Remote control	Electric starter	Power trim/tilt	Gas-assisted tilt	Starting enrichment system
BF40A	SH	S	●		●		●	●
	LH	L	●		●		●	●
	LHT	L	●		●	●		●
	SR	S		●	●		●	●
	SRT	S		●	●	●		●
	LR	L		●	●		●	●
	LRT	L		●	●	●		●

S: Short shaft, L: Long shaft

BF40A•BF50A

Model	BF50A			
Description code	BAZS			
Type	LH	YH	XH	YHT
Overall length	770 mm (30.3 in)			
Overall width	370 mm (14.6 in)			
Overall height	1,365 mm (53.7 in)	1,400 mm (55.1 in)	1,470 mm (57.9 in)	1,400 mm (55.1 in)
Dry weight (With propeller mounted)	95.5 kg (211 lb)	96.5 kg (213 lb)	99.5 kg (219 lb)	98.5 kg (217 in)
Operating weight	98 kg (216 lb)	99 kg (218 lb)	102 kg (225 lb)	101 kg (223 lb)
Transom height	521 mm (20.5 in)	556 mm (21.9 in)	622 mm (24.5 in)	556 mm (21.9 in)
Transom angle	5 stage adjustment (8°, 12°, 16°, 20°, 24°)			
Tilting angle	-4° ~ 63°			
Trimming angle	—			-4° ~ 12°
Swivel angle	37.5° right and left			

Model	BF50A				
Description code	BAZS				
Type	SRT	LR	LRT	YRT	XRT
Overall length	685 mm (27.0 in)				
Overall width	370 mm (14.6 in)				
Overall height	1,260 mm (49.6 in)	1,365 mm (53.7 in)		1,400 mm (55.1 in)	1,470 mm (57.9 in)
Dry weight (With propeller mounted)	91 kg (201 lb)	91 kg (201 lb)	93 kg (205 lb)	94 kg (207 lb)	97 kg (214 lb)
Operating weight	93.5 kg (206 lb)	93.5 kg (206 lb)	95.5 kg (211 lb)	96.5 kg (213 lb)	99.5 kg (219 lb)
Transom height	416 mm (16.4 in)	521 mm (20.5 in)		556 mm (21.9 in)	622 mm (24.5 in)
Transom angle	5 stage adjustment (8°, 12°, 16°, 20°, 24°)				
Tilting angle	-4° ~ 63°				
Trimming angle	—		-4° ~ 12°		
Swivel angle	37.5° right and left				

Types of Honda BF50A Outboard Motors

It may be necessary to refer to this chart for reference purposes when reading this manual.

Model	Type	Shaft length	Long tiller handle	Remote control	Electric starter	Power trim/tilt	Gas-assisted tilt	Starting enrichment system
BF50A	LH	L	●		●		●	●
	YH	LL	●		●		●	●
	XH	UL	●		●		●	●
	YHT	LL	●		●	●		●
	SRT	S		●	●	●		●
	LR	L		●	●		●	●
	LRT	L		●	●	●		●
	YRT	LL		●	●	●		●
	XRT	UL		●	●	●		●

S: Short shaft, L: Long shaft, LL: Semi-long shaft, UL: Extra long shaft

ENGINE

Model	BF40A	BF50A
Description code	BAYE	BAZE
Type	Water cooled 4-stroke, overhead valve, vertical 3 cylinders	
Displacement	808 cm ³ (21.5 cu. in)	
Bore x stroke	70 x 70 mm (2.8 x 2.8 in)	
Rated horsepower	29.4 kW (40 PS) at 5,500 min ⁻¹ (rpm)	36.8 kW (50 PS) at 6,000 min ⁻¹ (rpm)
Maximum torque	62.3 N·m (6.36 kgf·m, 46.0 lbf·ft) at 3,500 min ⁻¹ (rpm)	65.2 N·m (6.65 kgf·m, 48.1 lbf·ft) at 4,500 min ⁻¹ (rpm)
Compression ratio	9.2: 1	
Fuel consumption	329 g (11.6 oz.)/kWh	335 g (11.9 oz.)/kWh
Cooling system	Forced water circulation by impeller pump with thermostat	
Ignition system	CDI	
Ignition timing	5° - 26° B.T.D.C.	
Spark plug	DR7EA (NGK), X22ESR-U (DENSO)	
Carburetor	Horizontal butterfly valve type, vertical 3 carburetors	
Lubricating system	Forced lubrication by trochoid pump	
Oil capacity	2.4 ℓ (2.54 US qt, 2.11 Imp qt) 2.0 ℓ (2.12 US qt, 1.76 Imp qt) at oil change	
Recommended oil	SAE 5W-30, API Service classification SG/SH/SJ	
Starting system	Electric starter	
Stopping system	Ignition primary circuit ground	
Fuel used	Automotive unleaded gasoline (minimum 86 pump octane)	
Fuel tank capacity	25 ℓ (6.6 US gal, 5.5 Imp gal)	
Fuel pump	Mechanical plunger type	
Exhaust system	Under water type	
Recommended battery	12V 65Ah (65D23R)	

LOWER UNIT




Model	BF40A, BF50A
Clutch	Dog clutch (Forward-neutral-reverse)
Gear ratio	0.48 (26/33 x 14/23)
Reduction type	Spiral bevel gear
Gear case oil capacity	0.41 ℓ (0.43 US qt, 0.36 Imp qt)
Propeller Rotating direction	Clockwise (viewed from rear)

2. DIMENSIONAL DRAWING

Tiller Handle Type

Unit: mm (in)




	H	T	S
S Type	1,260 (49.6)	416 (16.4)	805 (31.7)
L Type	1,365 (53.7)	521 (20.5)	900 (35.4)
LL Type	1,400 (57.9)	556 (21.9)	930 (36.6)
UL Type	1,470 (57.9)	622 (24.5)	990 (39.0)

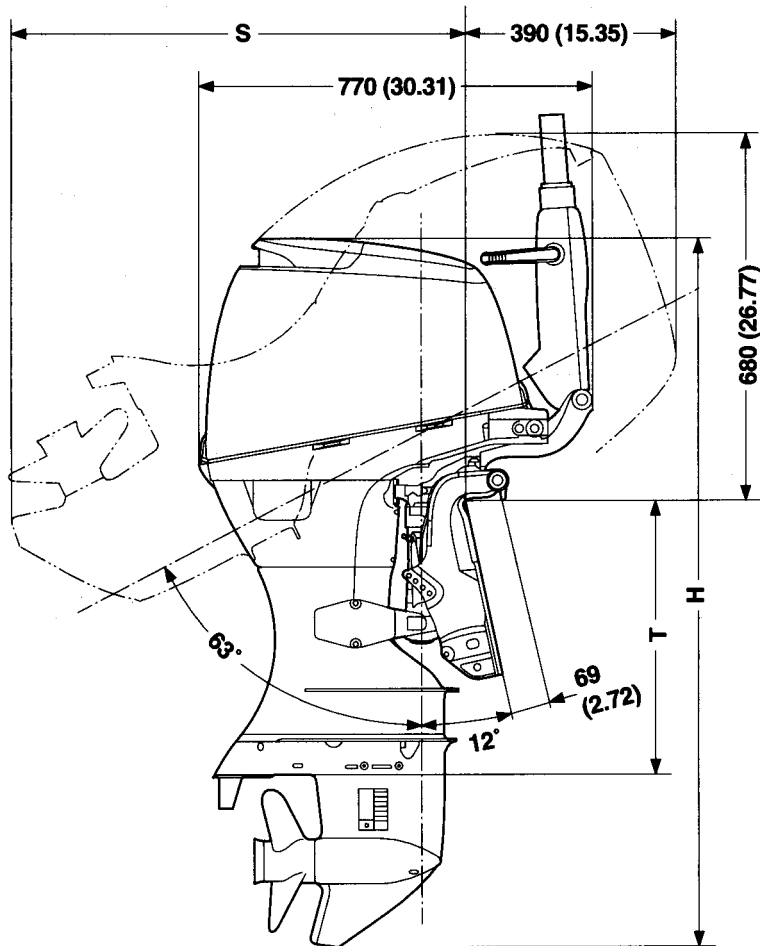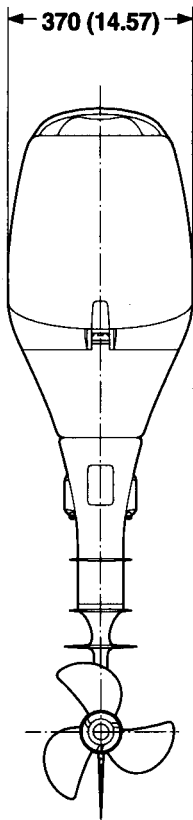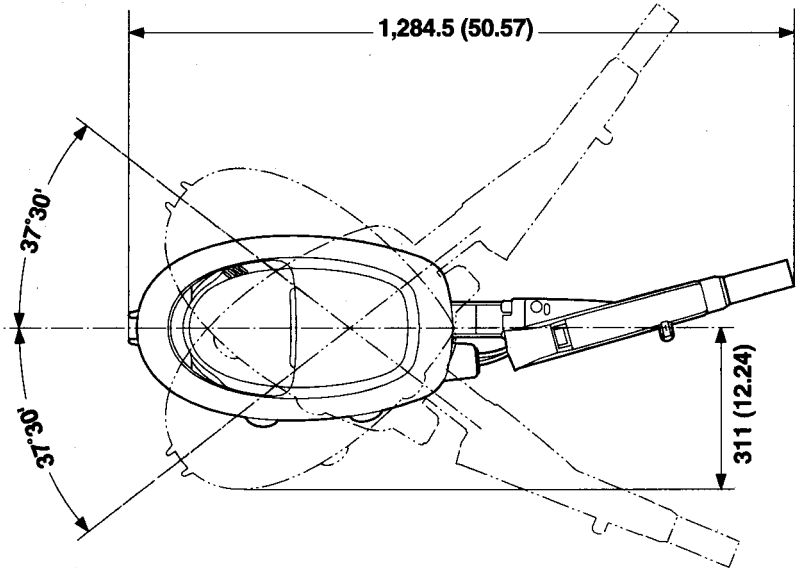

Remote Control Type

Unit: mm (in)

	H	T	S
S Type	1,260 (49.6)	416 (16.4)	805 (31.7)
L Type	1,365 (53.7)	521 (20.5)	900 (35.4)
LL Type	1,400 (57.9)	556 (21.9)	930 (36.6)
UL Type	1,470 (57.9)	622 (24.5)	990 (39.0)

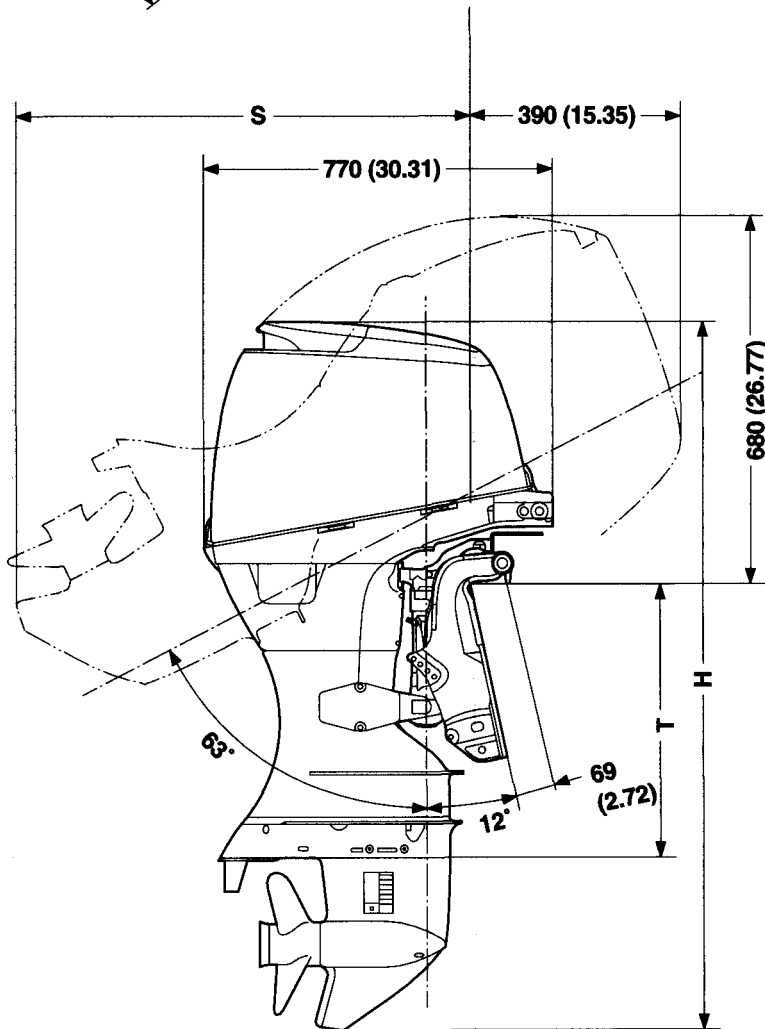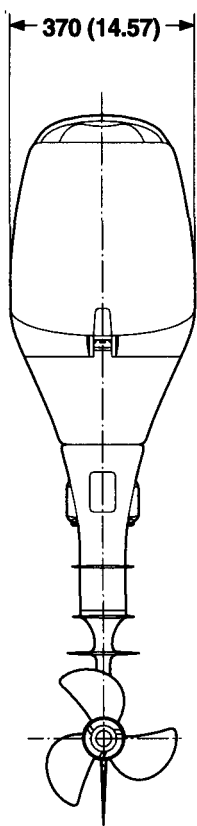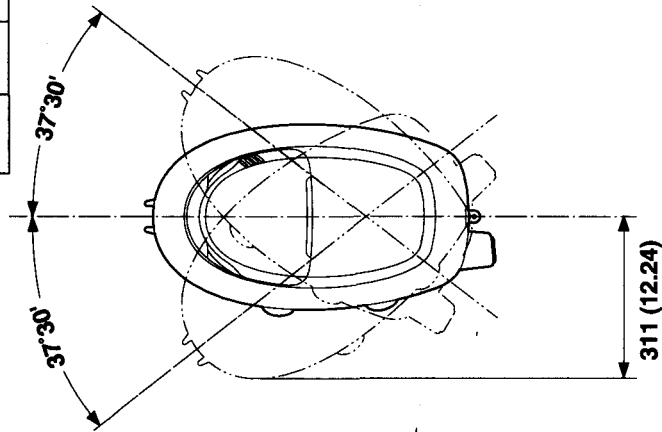

2. SERVICE INFORMATION

BF40A•BF50A

1. MAINTENANCE STANDARDS
2. TORQUE VALUES
3. SPECIAL TOOLS
4. APPLYING LIQUID SEALANT

5. TROUBLESHOOTING
6. CABLE & HARNESS ROUTING
7. TUBE ROUTING

1. MAINTENANCE STANDARDS

ENGINE

Part	Item		Standard	Service limit	
Carburetor	Main jet	BF40A	Bondensee type	#100	—
			Except Bondensee type	#105	—
		BF50A		#135	—
	Pilot screw opening	BF40A	Bondensee type	3-3/8 turns out	—
			Except Bondensee type	3-1/2 turns out	—
		BF50A		2-1/8 turns out	—
	Float height	BF40A		14.0 mm (0.55 in)	—
BF50A			13.0 mm (0.51 in)	—	
	SE valve heater resistance		15.8 - 24.2 Ω	—	
Exhaust emission Bondensee type only	CO ₂		10% min.	—	
	NOX		546 ppm max.	—	
	CO		7.0% max.	—	
	Measuring idle speed		950 - 1,150 min ⁻¹ (rpm)	—	
Power coil	Resistance		7.02 - 8.58 Ω	—	

2. TORQUE VALUES

Item	Thread dia. x pitch	Torque			Note
		N•m	kgf•m	lbf•ft	
• Engine					
Crankcase cover bolt	M8 x 1.25	27	2.8	20	(1)
	M6 x 1.0	12	1.2	9	
Cylinder head bolt	M10 x 1.25	39	4.0	29	(2)
	M8 x 1.25	26	2.7	20	
Oil strainer bolt	M6 x 1.0	13	1.3	9	
Water tube joint	PT1/8	9	0.9	6.5	
Flywheel bolt	M10 x 1.0	65	6.6	48	(3)
• Gear case					
Propeller castle nut	M16 x 1.0	1	0.1	0.7	(4)
Gear case end nut	M80 x 1.5	69	7.0	51	(5)
Gear case nut (UL type)	M10 x 1.25	34	3.5	25	
	M8 x 1.25	22	2.2	16	
Gear case stud (UL type)	M10 x 1.25	1.5	0.15	1.1	
	M8 x 1.25	1.3	0.13	0.9	
Water screen screw	M5 x 0.8	1	0.1	0.7	

BF40A•BF50A



Item	Thread dia. x pitch	Torque			Note
		N•m	kgf•m	lbf•ft	
• Extension/Mount Steering friction lever nut (Long tiller handle type) Lower motor mount housing bolt	M8 x 0.75 M8 x 1.25	9.5 22	0.95 2.2	6.9 16	(6)
• Stern bracket Stern bracket left side nut Stern bracket right side nut	7/8-14UNF M10 x 1.25	39 34	4.0 3.5	29 25	
• Tiller handle Steering bracket pivot lock nut Steering bracket pivot nut Steering bracket nut Throttle arm holder bolt Throttle grip bolt Under cover screw Cable holder bolt Emergency stop switch nut Connector bracket bolt Throttle cable pivot lock nut Switch bracket bolt	M12 x 1.25 M12 x 1.25 M10 x 1.25 M5 x 0.8 M6 x 1.0 M5 x 0.8 M5 x 1.0 M16 x 1.0 M6 x 1.0 M6 x 1.0 M5 x 0.8	54 29 34 4.5 7 2.2 7 1.3 7 1.3 4.5	5.5 3.0 3.5 0.45 0.7 0.22 0.7 0.13 0.7 0.13 0.45	40 22 25 3.3 5.1 1.6 5.1 0.9 5.1 0.9 3.3	
• Gas assisted damper Tilt lever nut	M6 x 1.0	6.5	0.65	4.7	

NOTE:

- (1): Apply oil to the thread and seating surface.
- (2): Tighten to the specified torque first, then tighten an additional 90° - 120°.
- (3): Clean off oil or grease from the crankshaft and flywheel mating surfaces (see page 6-1). Apply oil to the thread and seating surface of the flywheel bolt, then tighten them to the specified torque.
- (4): If the split pin cannot be set by tightening the castle nut to the specified torque, tighten the castle nut additionally until the split pin can be set. Do not exceed the maximum torque of 34 N•m (3.5 kgf•m, 25 lbf•ft).
- (5): If the tab of the washer does not align with the groove of the gear case end nut by tightening it to the specified torque, tighten the castle nut additionally until the groove aligns with the tab. Do not exceed the maximum torque of 98 N•m (10.0 kgf•m, 72 lbf•ft).
- (6): Turn the friction lever to the right side fully, and hold it in this position and tighten the friction lever nut to the specified torque.
- (7): Tighten the stern bracket nut to the specified torque, then turn it back to 180 - 210°.

3. SPECIAL TOOLS

No.	Tool name	Tool number	Application
1	Vacuum gauge attachment 5 x 08 x 120L	07510-3000100 or 07510-3000200	} Carburetor synchronization
2	Vacuum gauge attachment 5 x 08 x 50L		

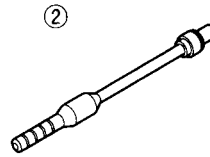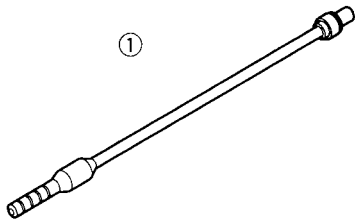

4. APPLYING LIQUID SEALANT

Apply liquid sealant to the primary gear case gasket and oil pan gasket as follows:



- Assemble the crankcase side cover and oil pan within the specified time after application of a sealing agent.
 - Example:
 - Within 90 minutes when using Three Bond #1211.
 - Within 30 minutes when using Three Bond #1216.
- Apply about 1 - 5 mm (0.04 - 0.20 in) width.
- Wait for 15 minutes after assembly. Do not add oil during this period.

• PRIMARY GEAR CASE GASKET

- 1) Clean the engine and primary gear case mating surfaces with a degreasing cleaning agent or a clean shop towel (see base shop manual).
- 2) Apply liquid sealant to the position shown on both side of a new primary gear case gasket.

• OIL PAN GASKET


- 1) Clean the engine and oil pan mating surfaces with a degreasing cleaning agent or a clean shop towel (see base shop manual).
- 2) Apply liquid sealant to the position shown on both side of a new primary gear case gasket.

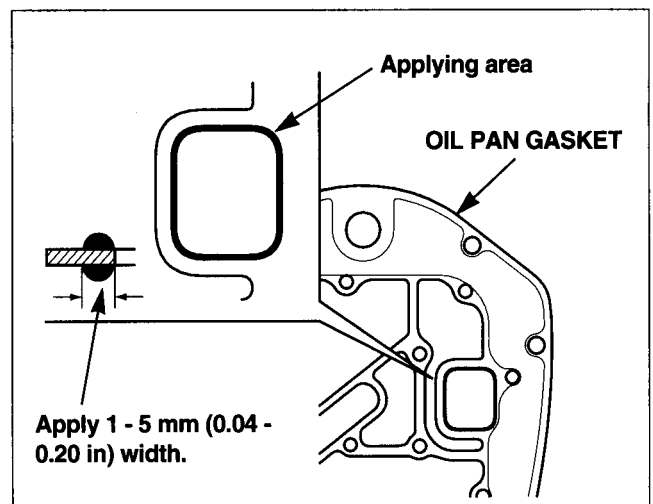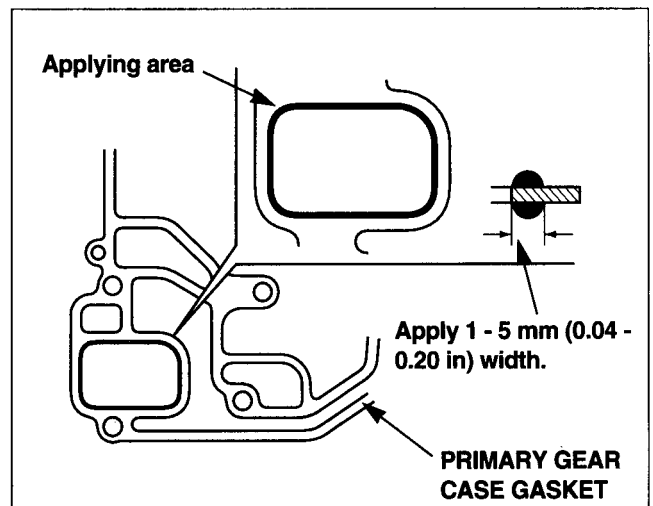


5. TROUBLESHOOTING

a. ENGINE

• Hard Starting

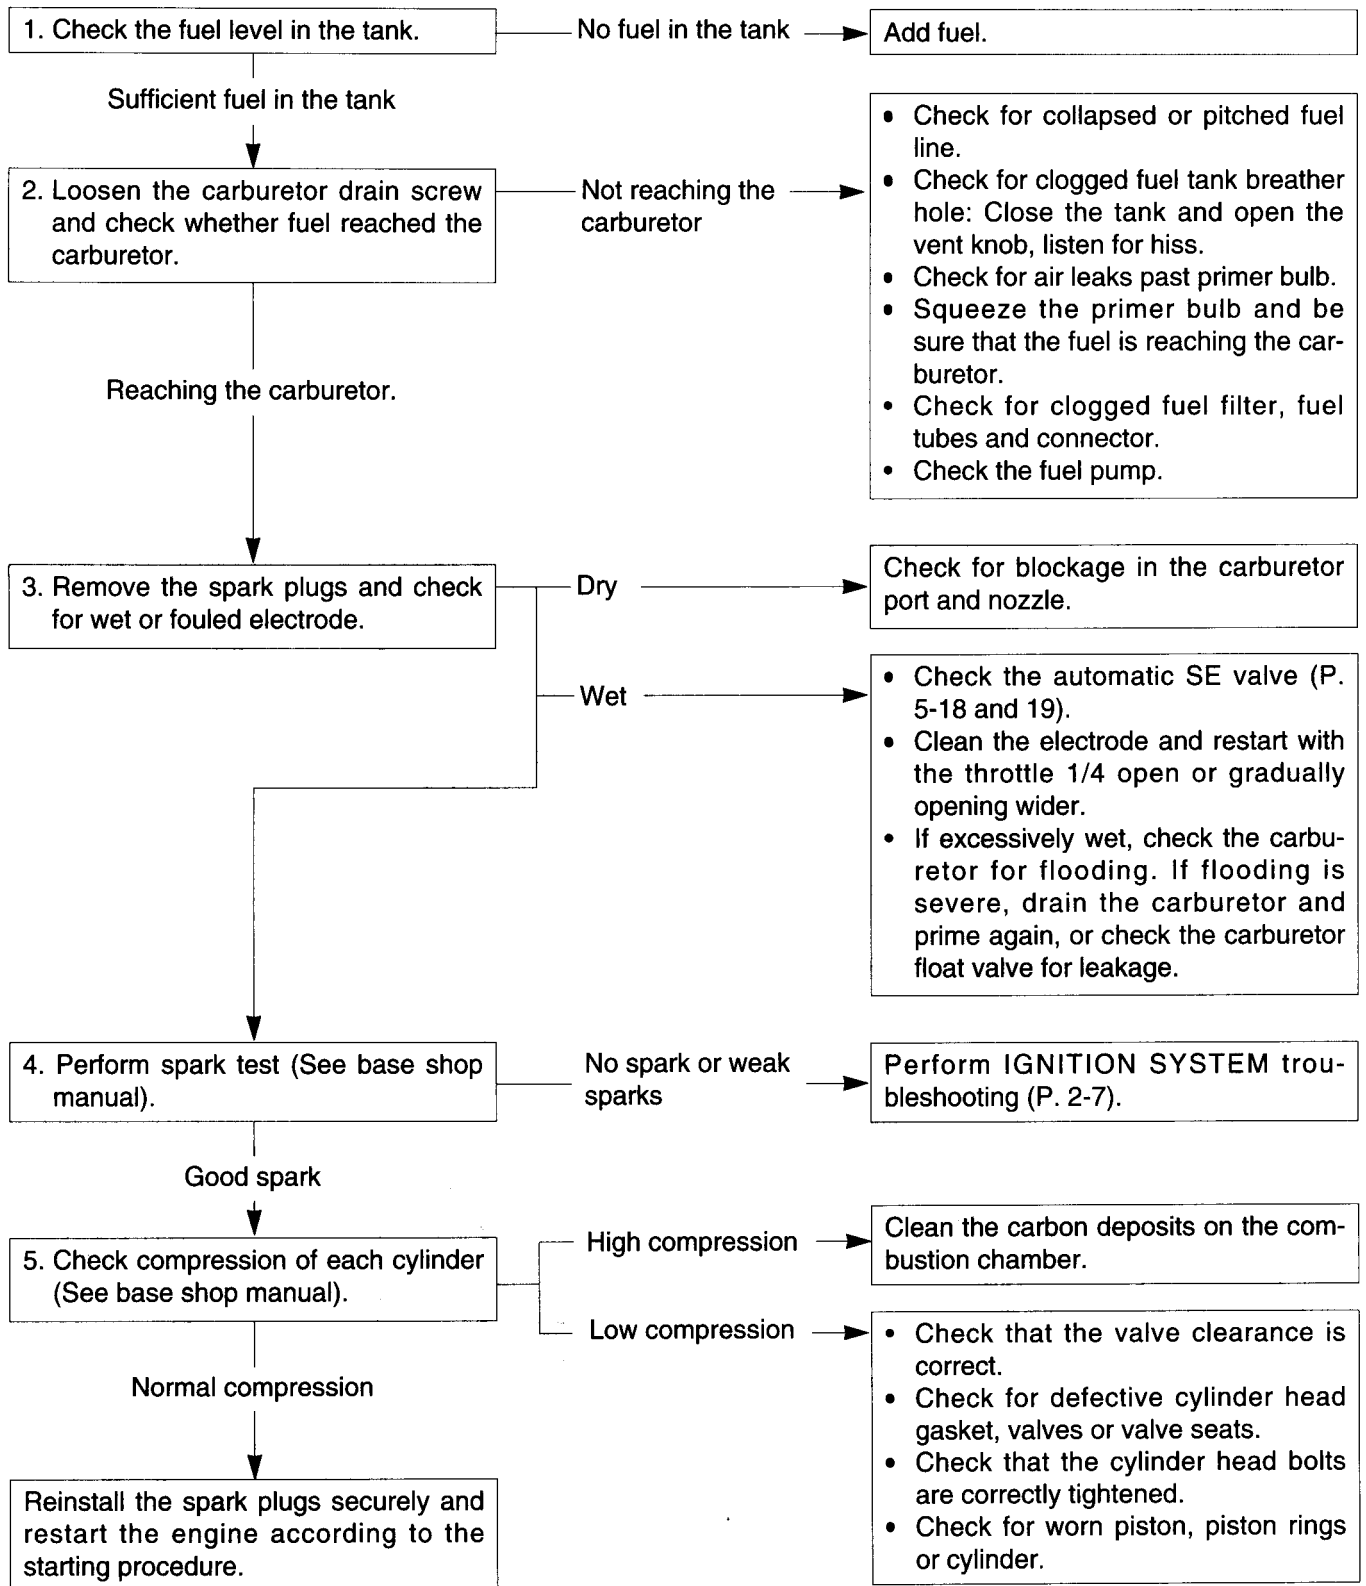

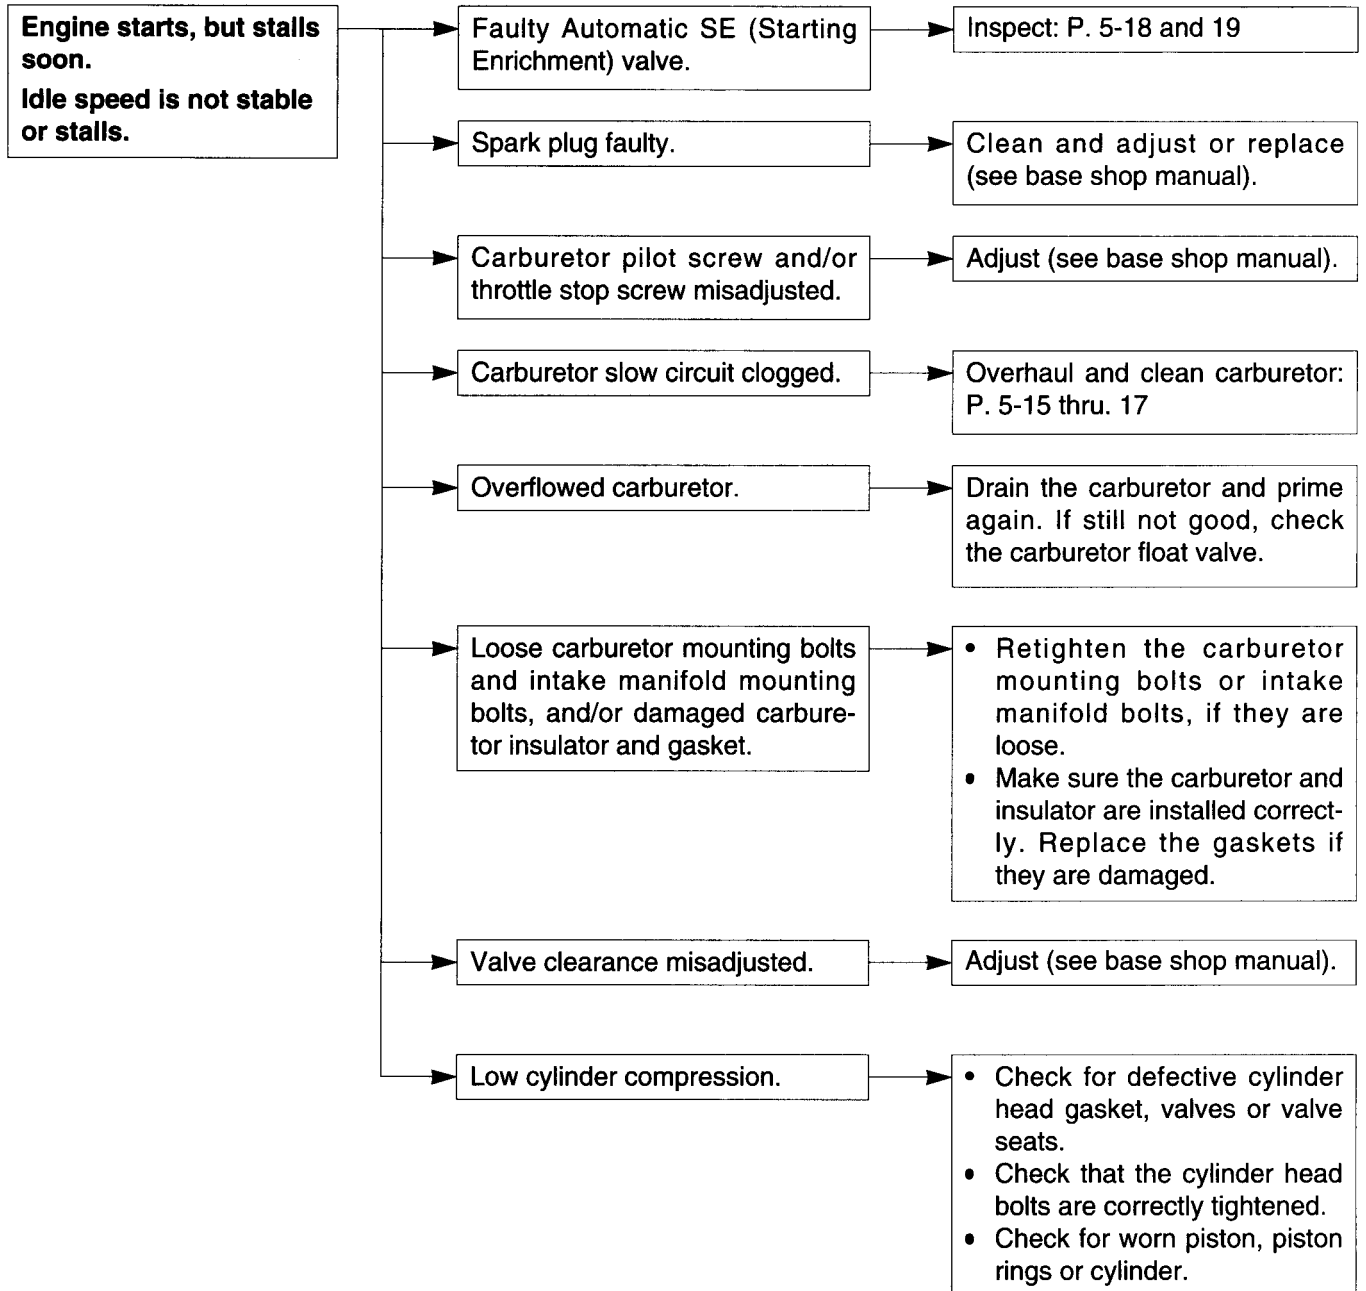• Engine Does Not Run Smoothly

Engine speed does not increase.

Faulty Automatic SE valve.

Replace: P. 5-15 and 21

Throttle cable misadjusted.

Readjust (see base shop manual).

Propeller mismatched.

Replace with the correct propeller.

Spark plug faulty.

Clean and adjust or replace (See base shop manual).

Clogged fuel filter.

Replace (see base shop manual).

Water or deposits in carburetor.

Drain the carburetor. If it is still no good, overhaul the carburetor: P. 5-15 thru. 5-24.

Valve timing incorrect.

Reinstall the timing belt (see base shop manual).

Alert system function.


Troubleshooting: P. 2-9.

Ignition control module faulty.

Inspect: P. 16-1.

b. IGNITION SYSTEM

These outboard motors are equipped with an engine overrev limiter which is provided in the ignition control module. The overrev limiter is activated when the engine speed exceeds 6,300 rpm. When activated the sparks are emitted to the No. 1, No. 2 and No. 3 cylinders. The overrev limiter may be activated under such conditions as; light propeller load or propeller ventilation.

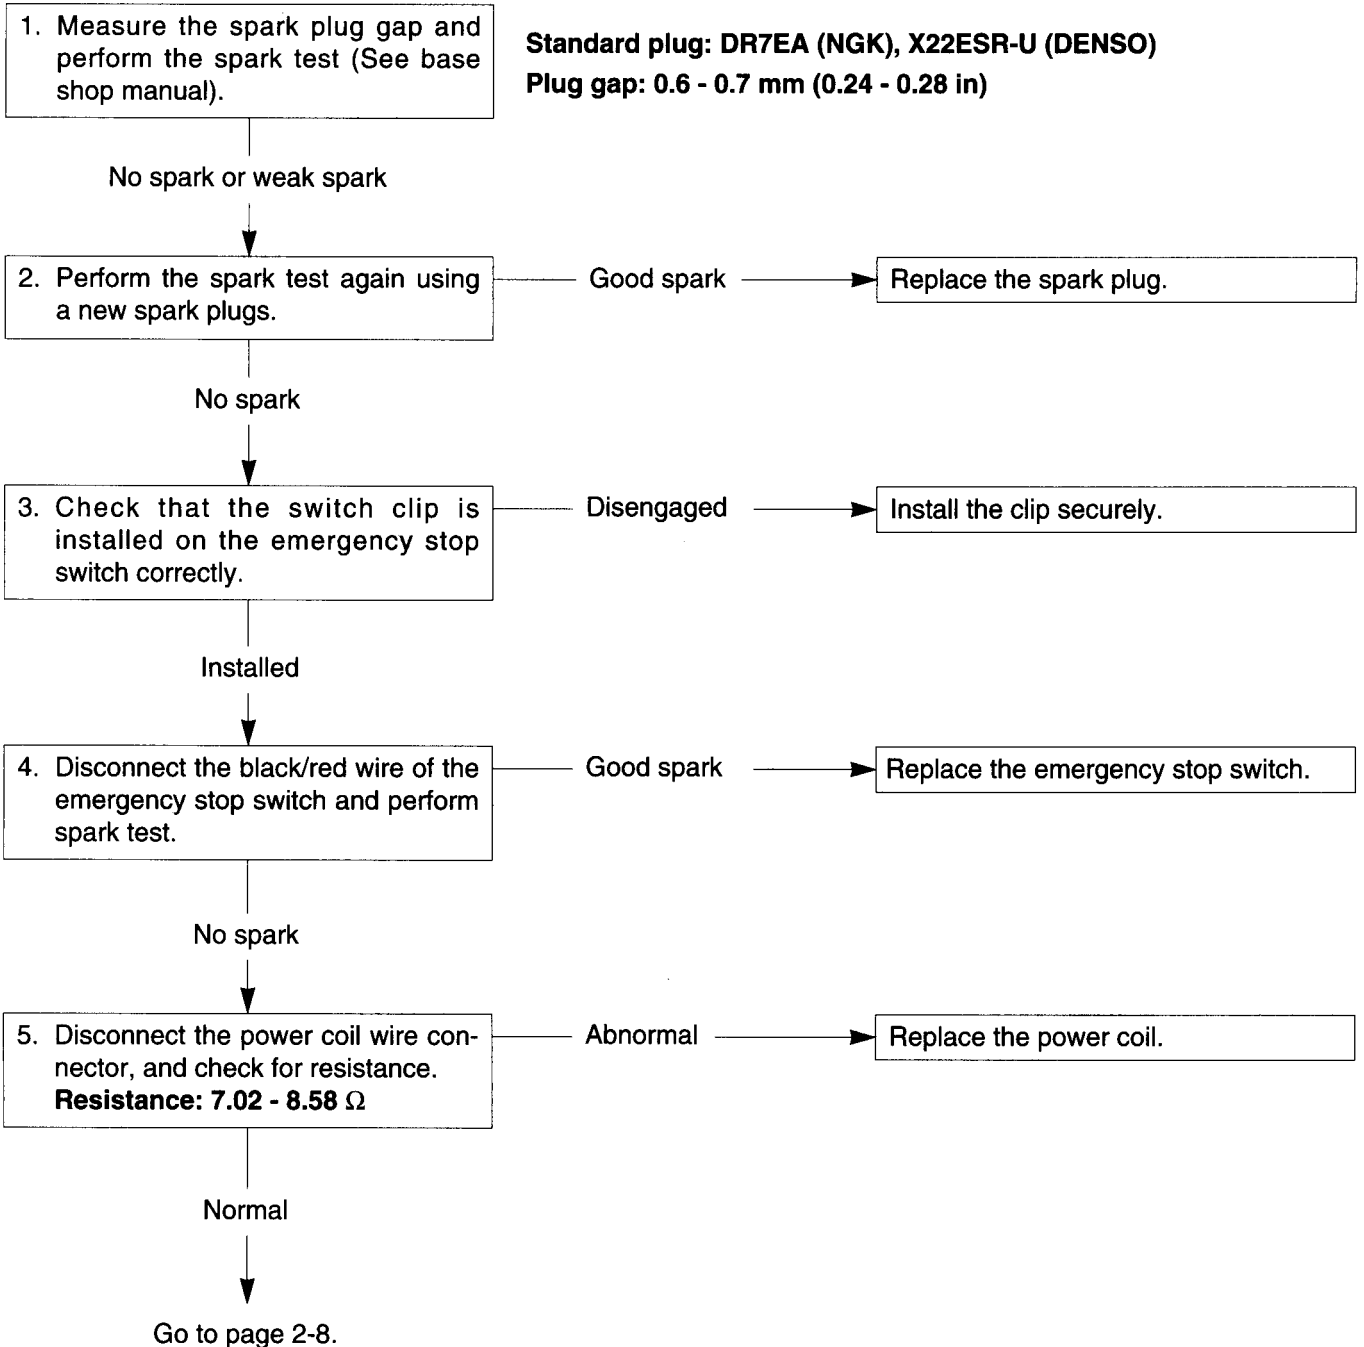• Hard Starting

From page 2-7.

6. Disconnect the pulse generator coil wire connector, and check for resistance.
Resistance: 288 - 352 Ω

Abnormal

Replace the pulse generator coil.

Normal

7. Check for voltage leakage caused by damaged high tension wire insulation. Check the ignition coil resistances (see base shop manual).
Resistance:
Primary: 0.19 - 0.23 Ω
Secondary: 2.8 - 3.4 kΩ

Abnormal

Replace the ignition coil.

Normal

8. Remove the CDI unit and check for resistance between the terminals (P. 16-1).

Abnormal

Replace the CDI unit.

Normal

9. Bring a screwdriver or equivalent tool close to the magnetic section of the flywheel and cam pulley and check the magnetic force.

Abnormal


Replace the flywheel or cam pulley.

Normal

Check the wire harness for short or open circuit. Replace or repair the wire harness.

c. ALERT SYSTEM

Long Tiller Handle Type:

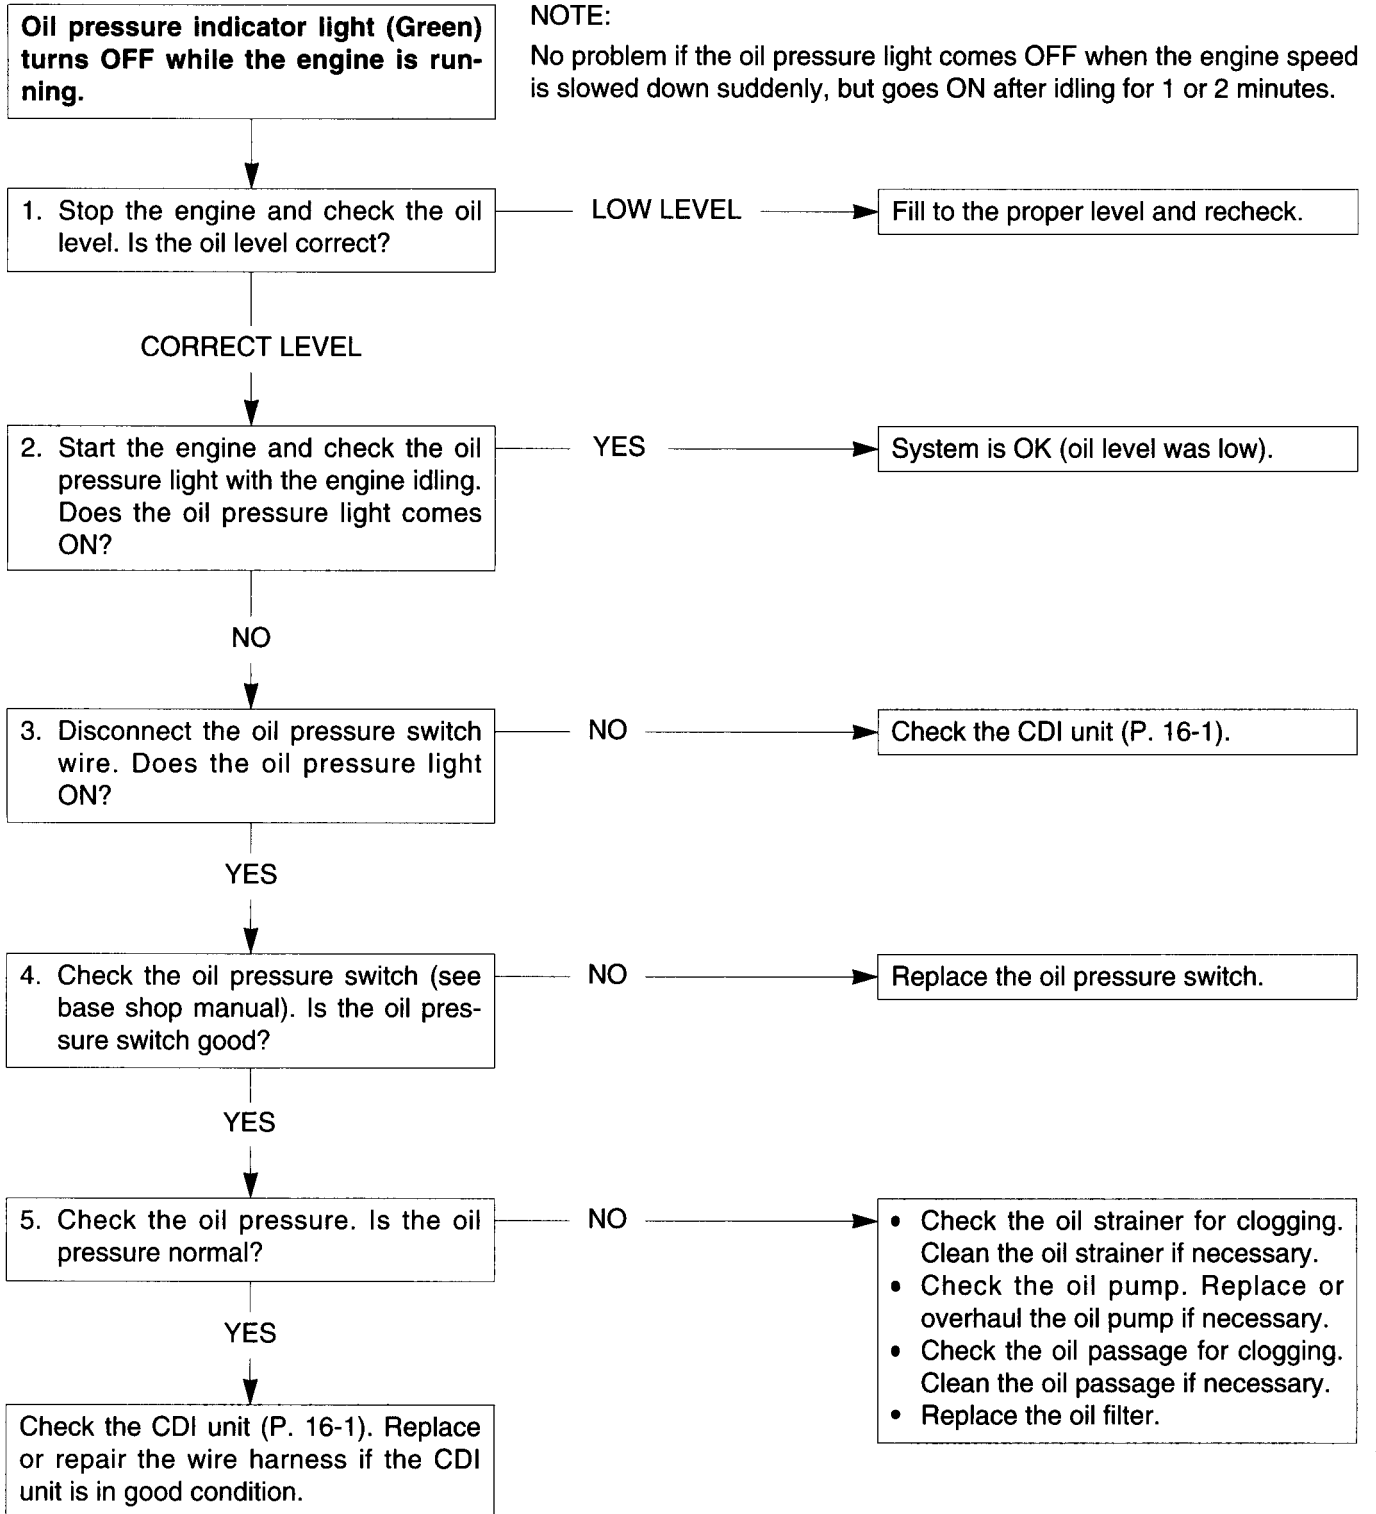

Overheat indicator light (Red) turns ON while the engine is running

NOTE:

No problem if the overheat indicator light comes ON when restarting the engine after hot soak at high temperature, but comes OFF after idling for a few minutes

1. Stop the engine and check the water intake screen for clogging. Is the water intake screen clogged?

YES

Remove the foreign material and recheck.

NO

2. Start the engine and check the cooling system indicator with the engine idling. Does cooling water constantly flow through the cooling system indicator?

NO

- Check the discharge port for clogging, clean the discharge port if necessary.
- Check the water pump for wear or damage. Replace or repair the water pump.
- Check the water tube for clogging or damage. Clean or replace the water tube if necessary.

YES

3. Idle in gear for a few minutes to cool down the engine. Check the overheat indicator light. Does the overheat indicator light go OFF?

YES

System is OK (engine temperature was high).

NO

4. Check the thermostat. Is the thermostat good?

NO

Replace the thermostat.

YES

5. Disconnect the ECT (Engine coolant temperature) sensor 2P connector. Check the overheat indicator light. Does the overheat indicator light go OFF?

NO

Check the CDI unit (P. 16-1).

YES

6. Check the ECT sensor (P. 16-3). Is the ECT sensor in good condition.


NO


Replace the ECT sensor.

YES

Replace or repair the wire harness.


Remote Control Type:

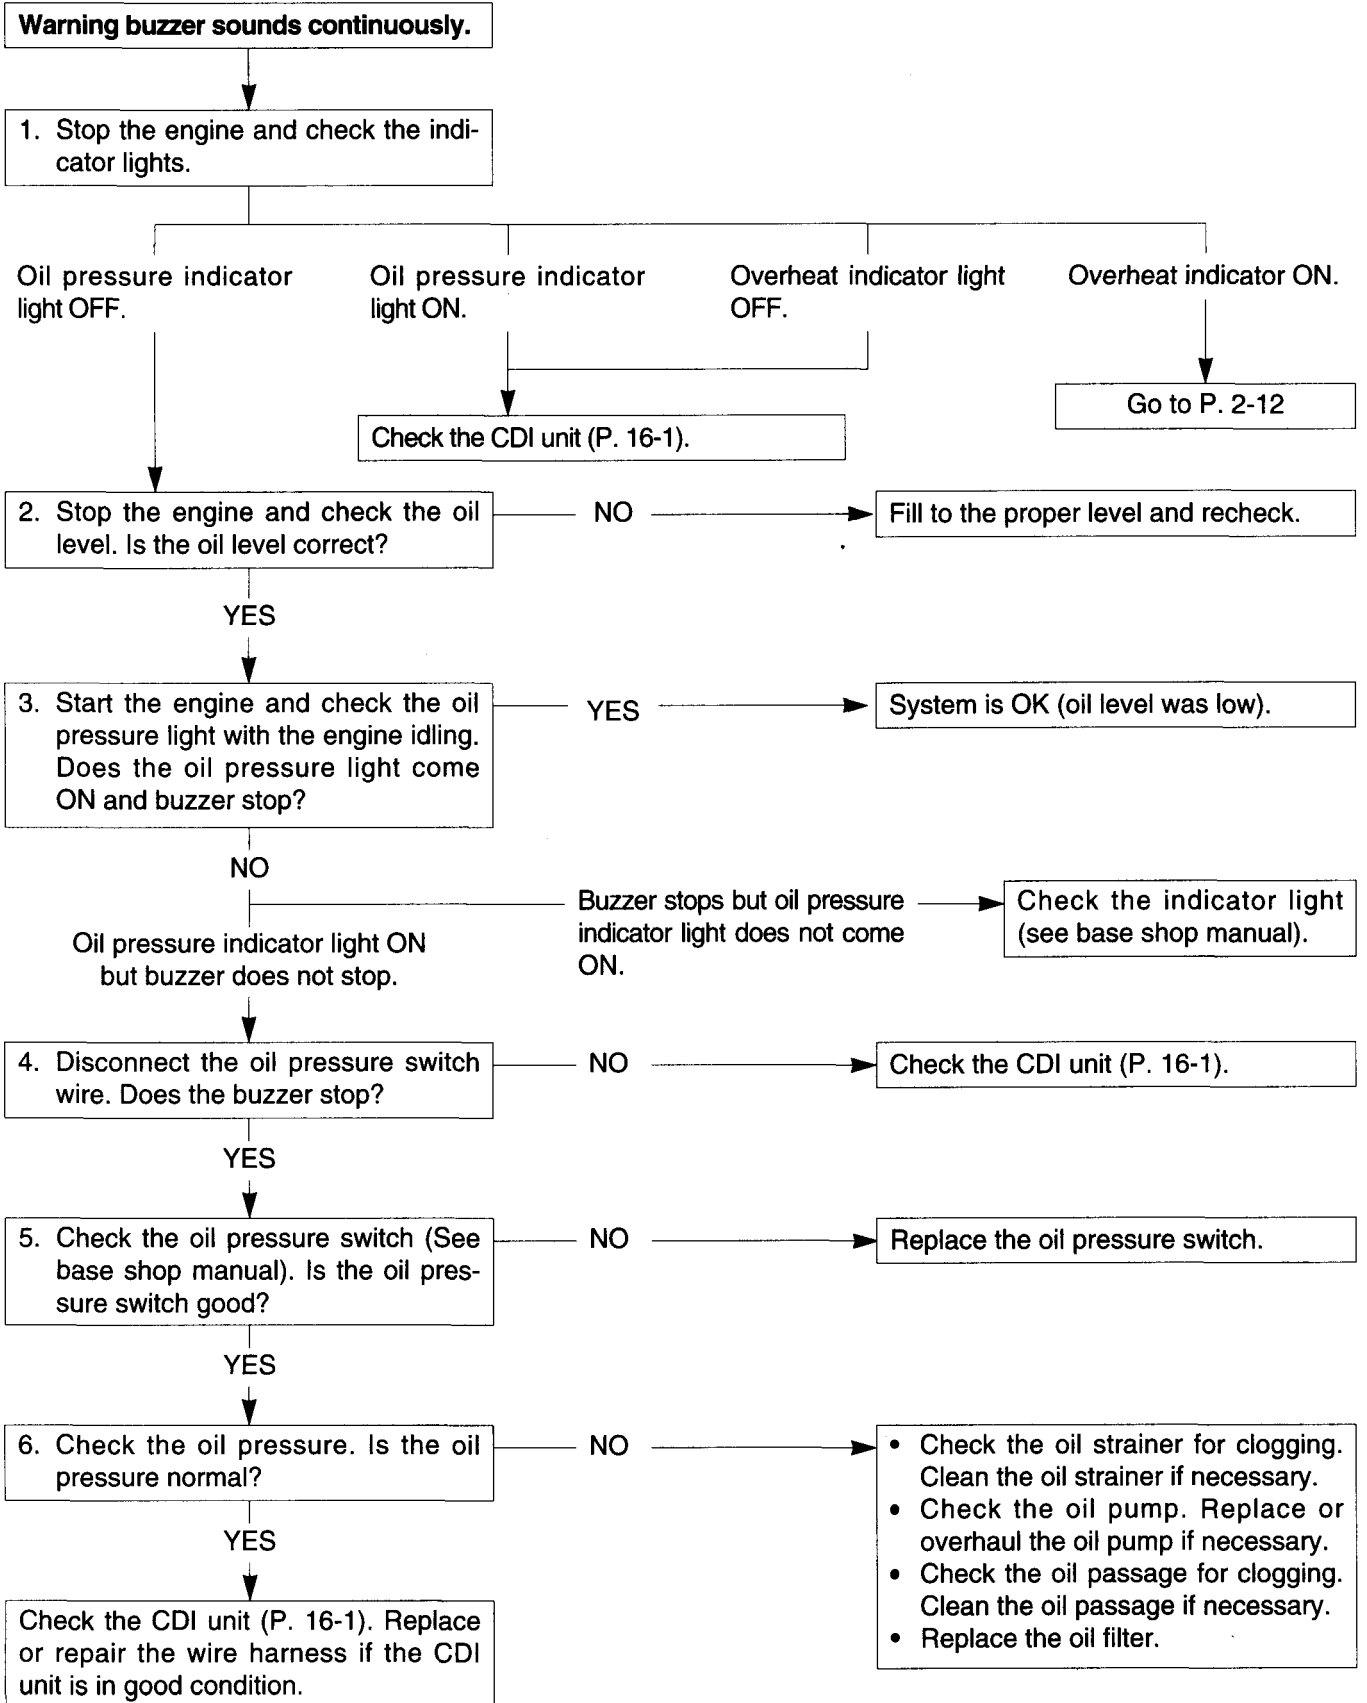


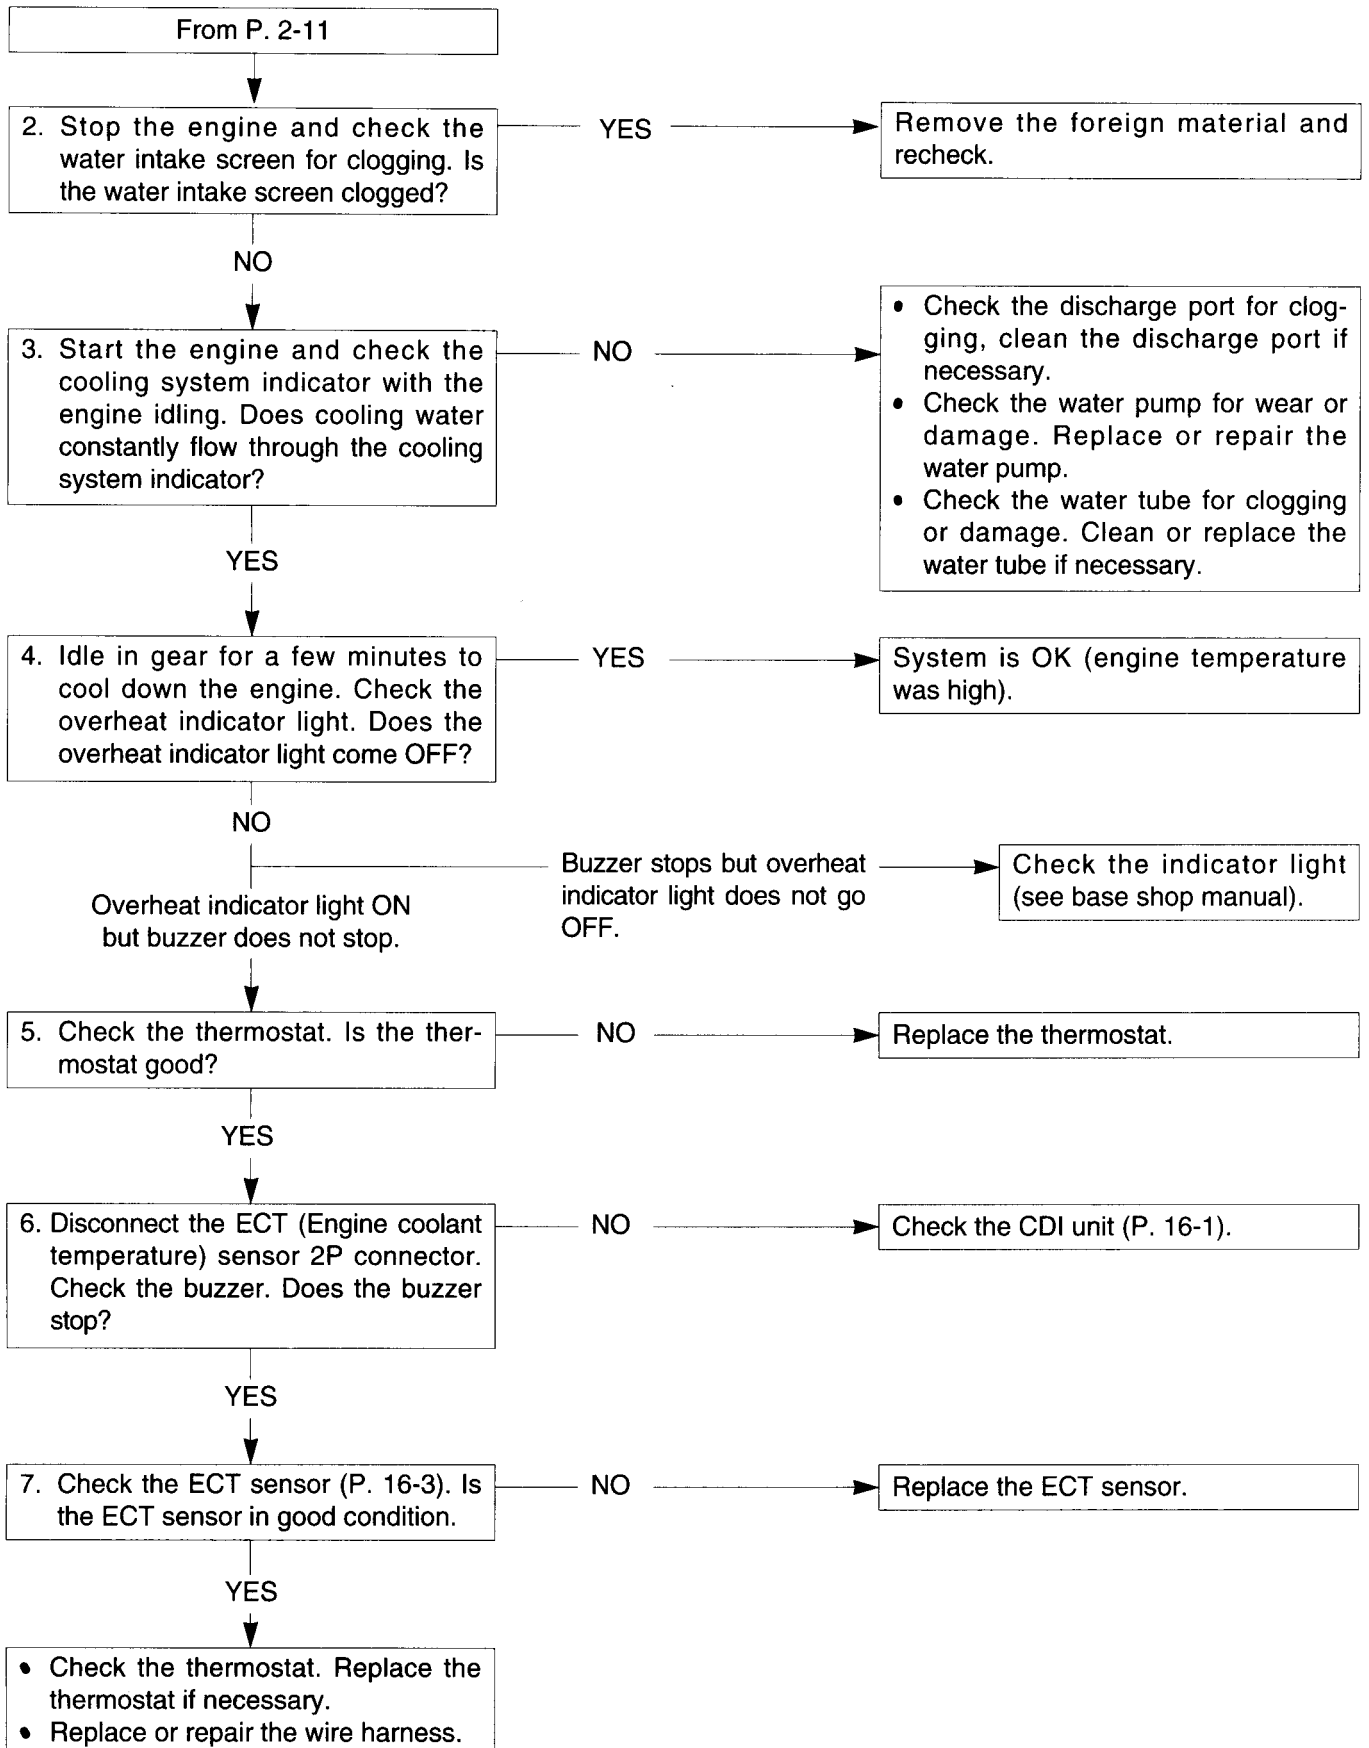


d. SHIFT LEVER

Long Tiller Handle Type:

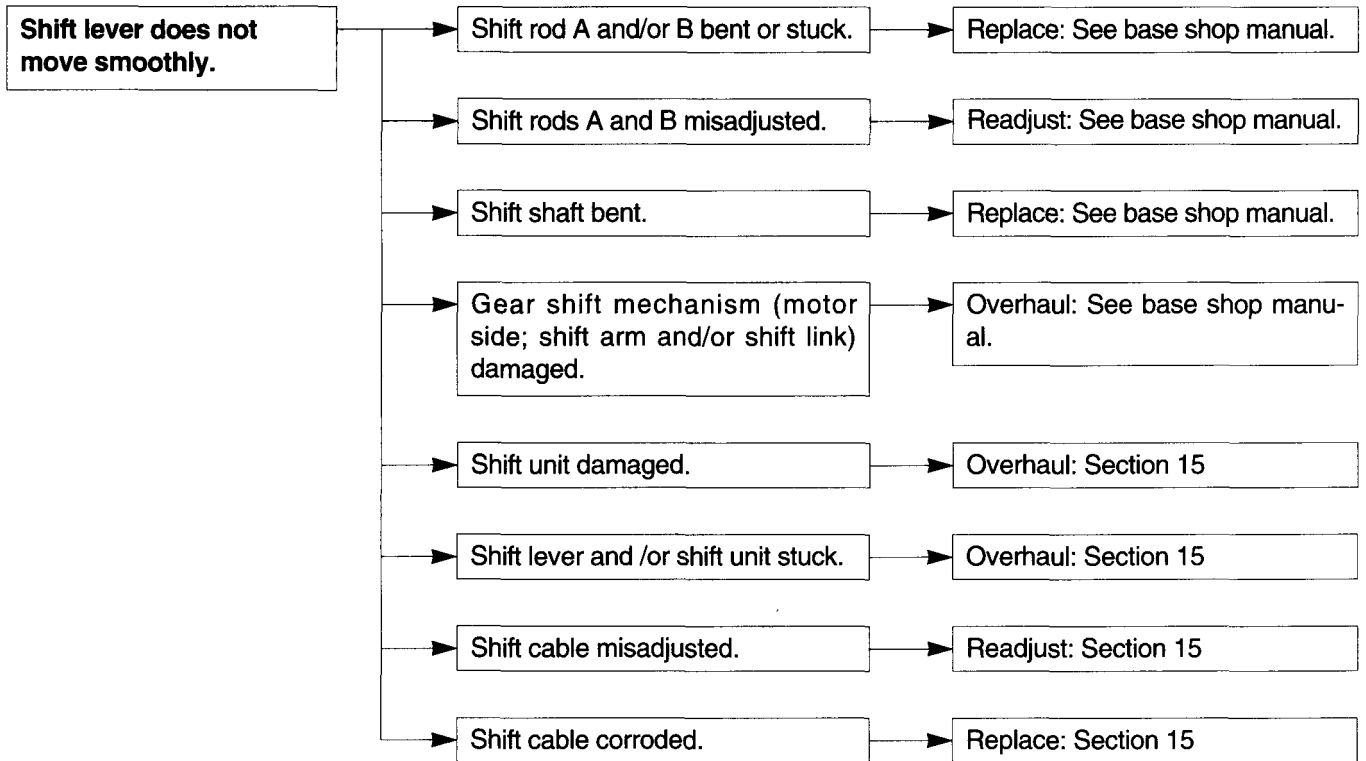

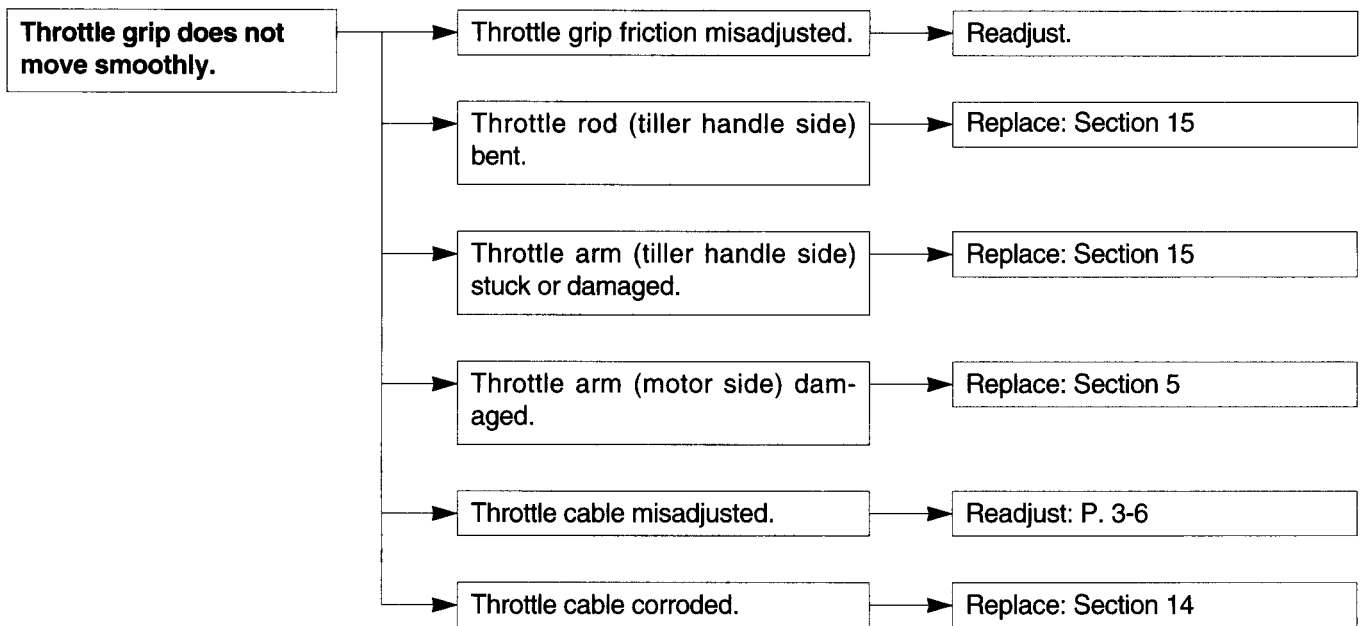
e. THROTTLE GRIP**Long Tiller Handle Type:**

f. GAS ASSISTED TILT

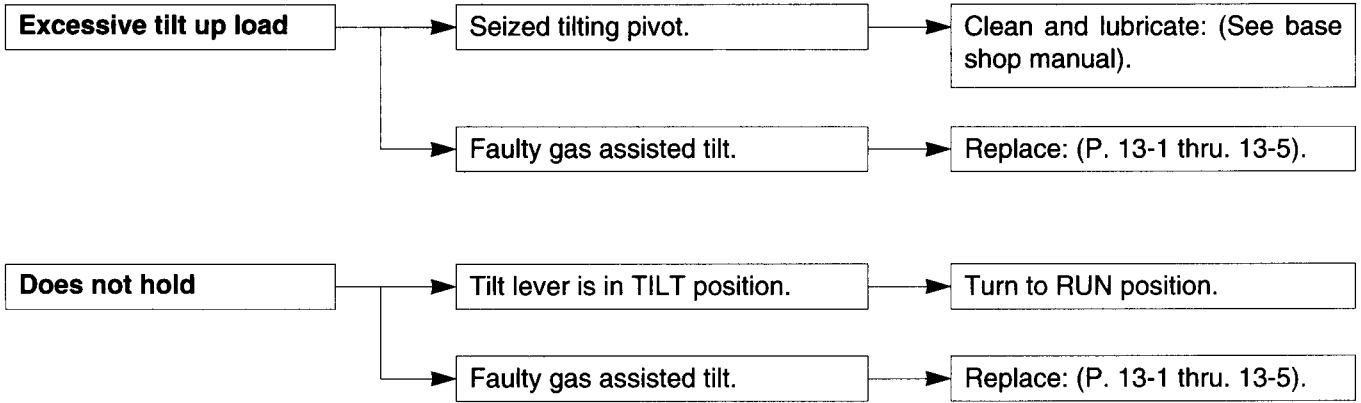


g. POWER TRIM/TILT


• Power Trim/Tilt Does Not Move

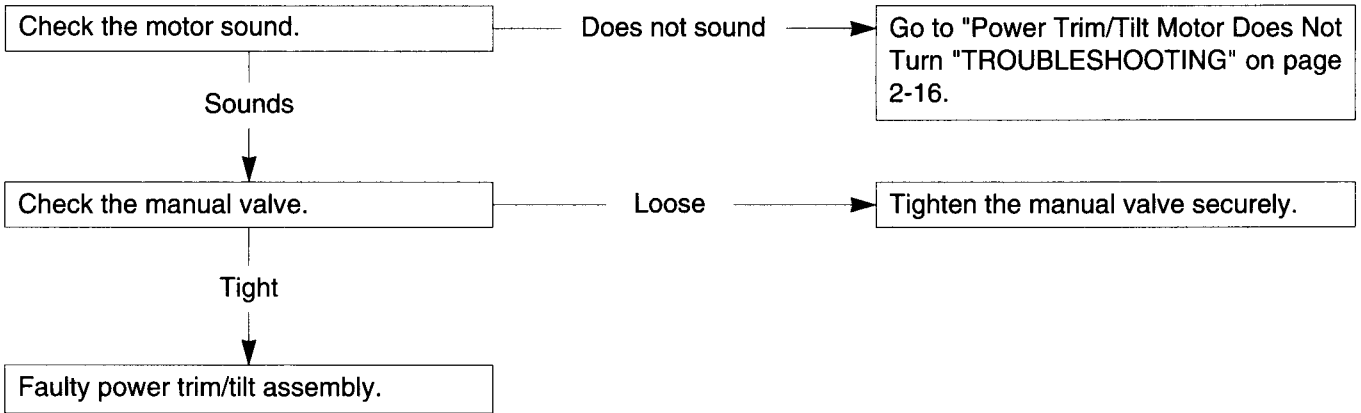



• Power Trim/Tilt Does Not Hold

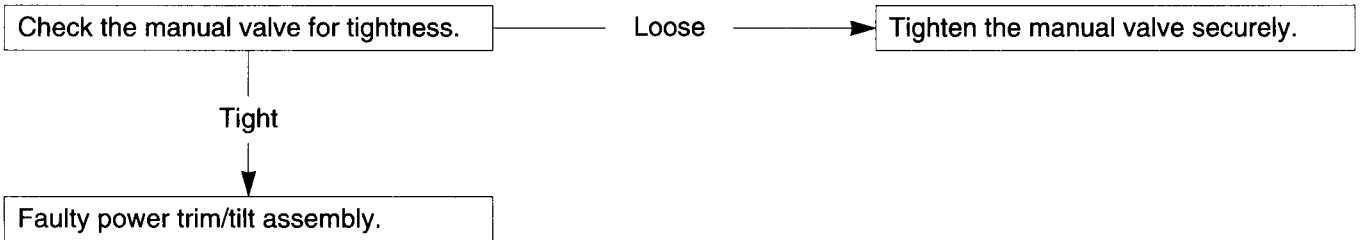

• Power Trim/Tilt Motor Does Not Turn

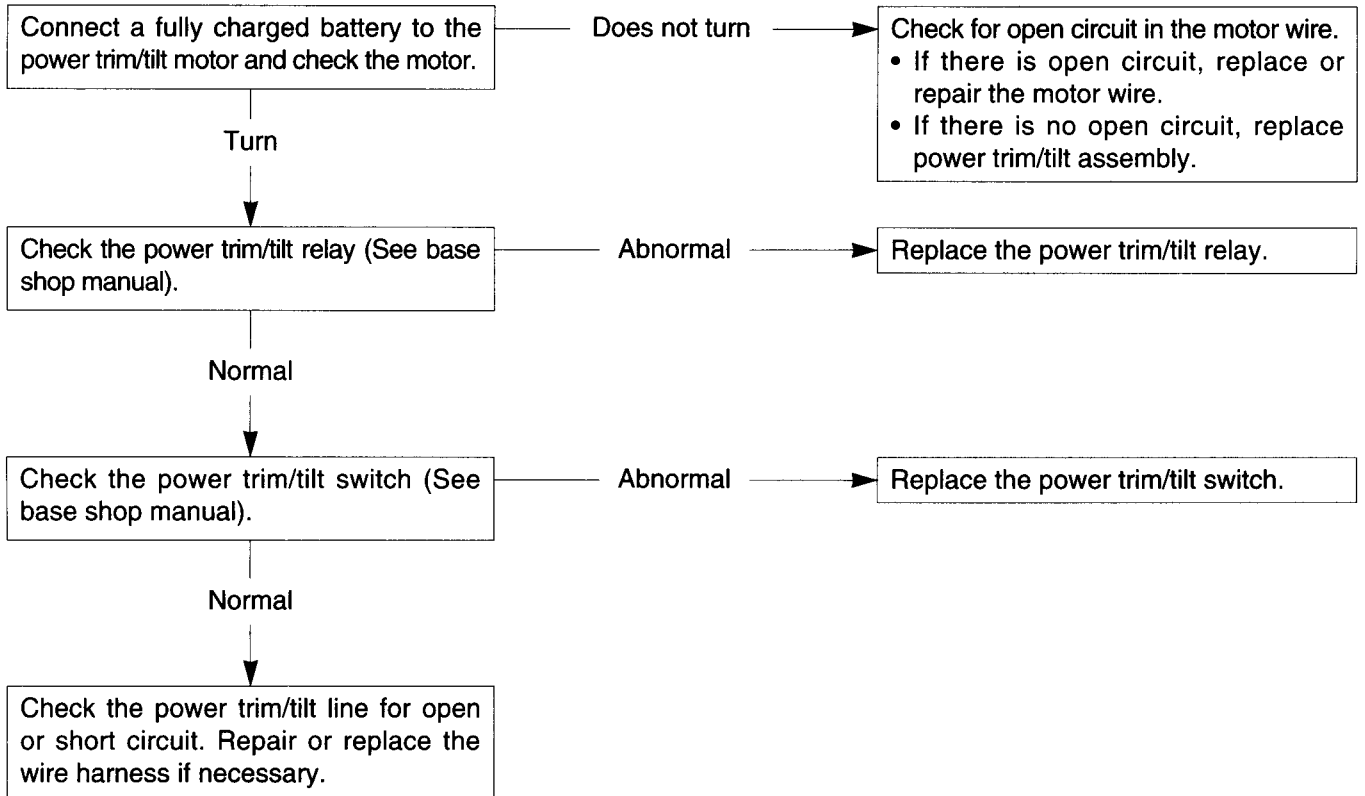


6. CABLE & HARNESS ROUTING

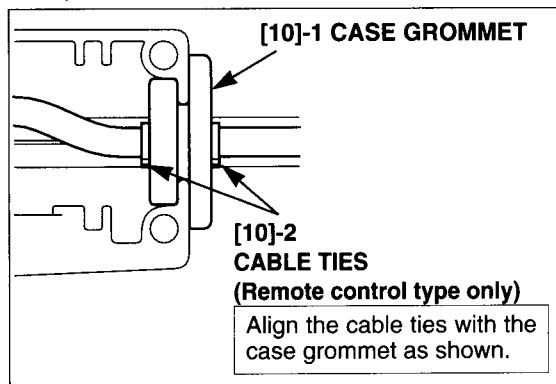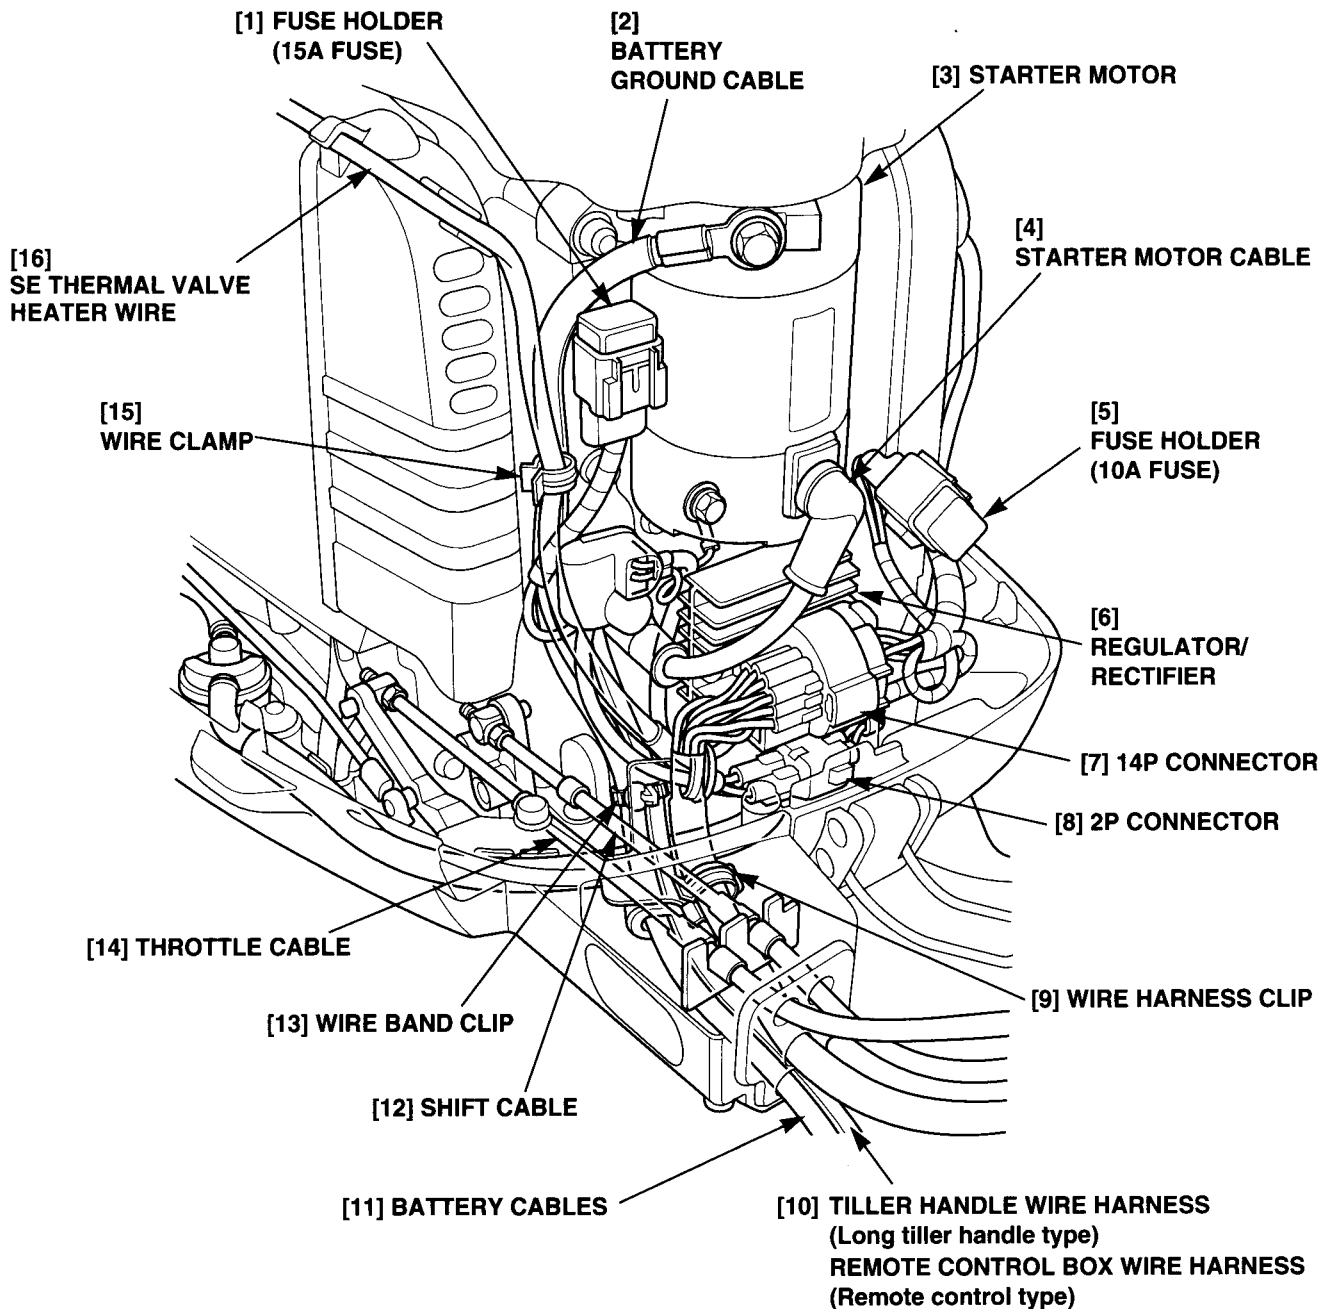


[1] STARTER MAGNETIC SWITCH GROUND TERMINAL

Install the ground terminal to the engine as shown.

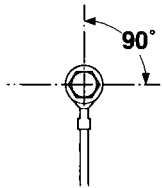


[2] BATTERY GROUND TERMINAL

Install the battery ground terminal to the starter motor as shown.

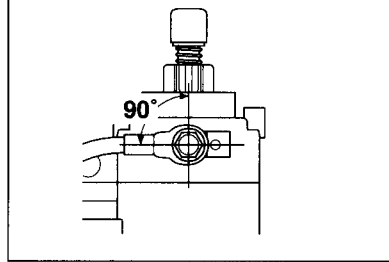

[3] MAIN WIRE HARNESS GROUND TERMINAL

Install the ground terminal to the engine as shown.

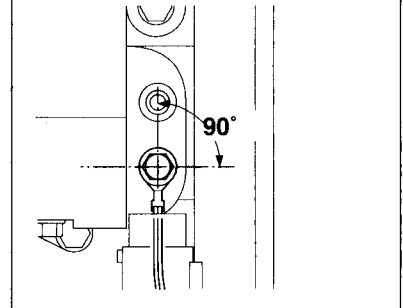


[9] WIRE HARNESS CLIP

Clamp the wires (SE thermal valve heater wire and battery ground cable) with the open end facing to the left as shown.

[8] REGULATOR/RECTIFIER GROUND TERMINAL

Install the ground terminal to the engine as shown.

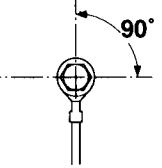


[7] BATTERY POSITIVE CABLE and STARTER MOTOR CABLE

Install the battery positive cable and power trim/tilt relay wire (power trim/tilt type only), and starter motor cable as shown.

[7]-1 BATTERY POSITIVE CABLE

[7]-2 STARTER MOTOR CABLE

[7]-3 POWER TRIM/TILT POWER SUPPLY WIRE (Power trim/tilt type only)

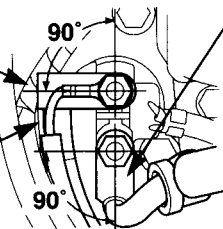

[4] WIRE HARNESS CLIP


Clamp the wires (power trim/tilt switch wire, power trim/tilt relay wires, and trim angle sensor wire) with the open end facing up as shown.

[5] WIRE HARNESS CLIP

Clamp the wires (main wire harness, power trim/tilt relay wire, regulator/rectifier wire, neutral switch wire, and starter magnetic switch wire) with the open end facing up as shown.




[6] WIRE HARNESS CLIP

Clamp the wires (SE thermal valve heater wire, power trim/tilt relay wire, regulator/rectifier ground wire, and starter magnetic switch wire) with the open end facing up as shown.

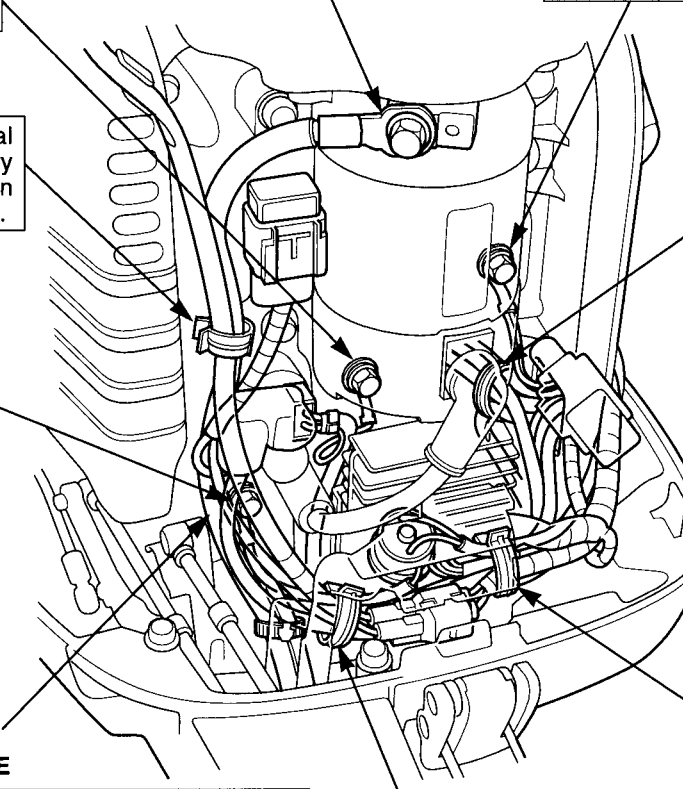



• Power Trim/Tilt Type

Frame serial number:
 BF40A: Up to BAYS-3400529
 BF50A: Up to BAZS-3400006

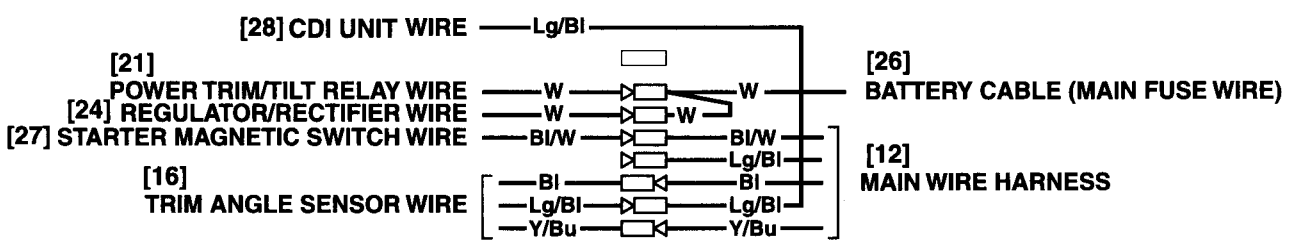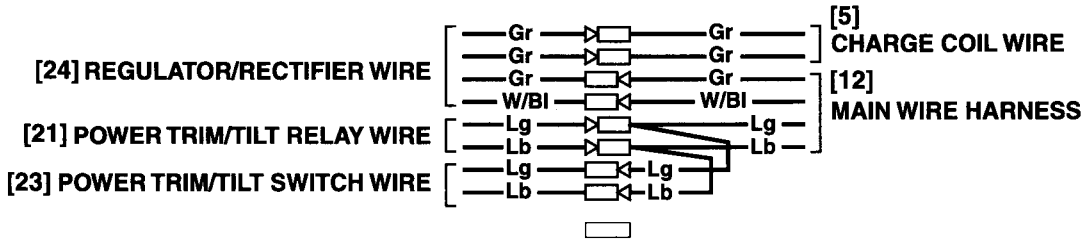
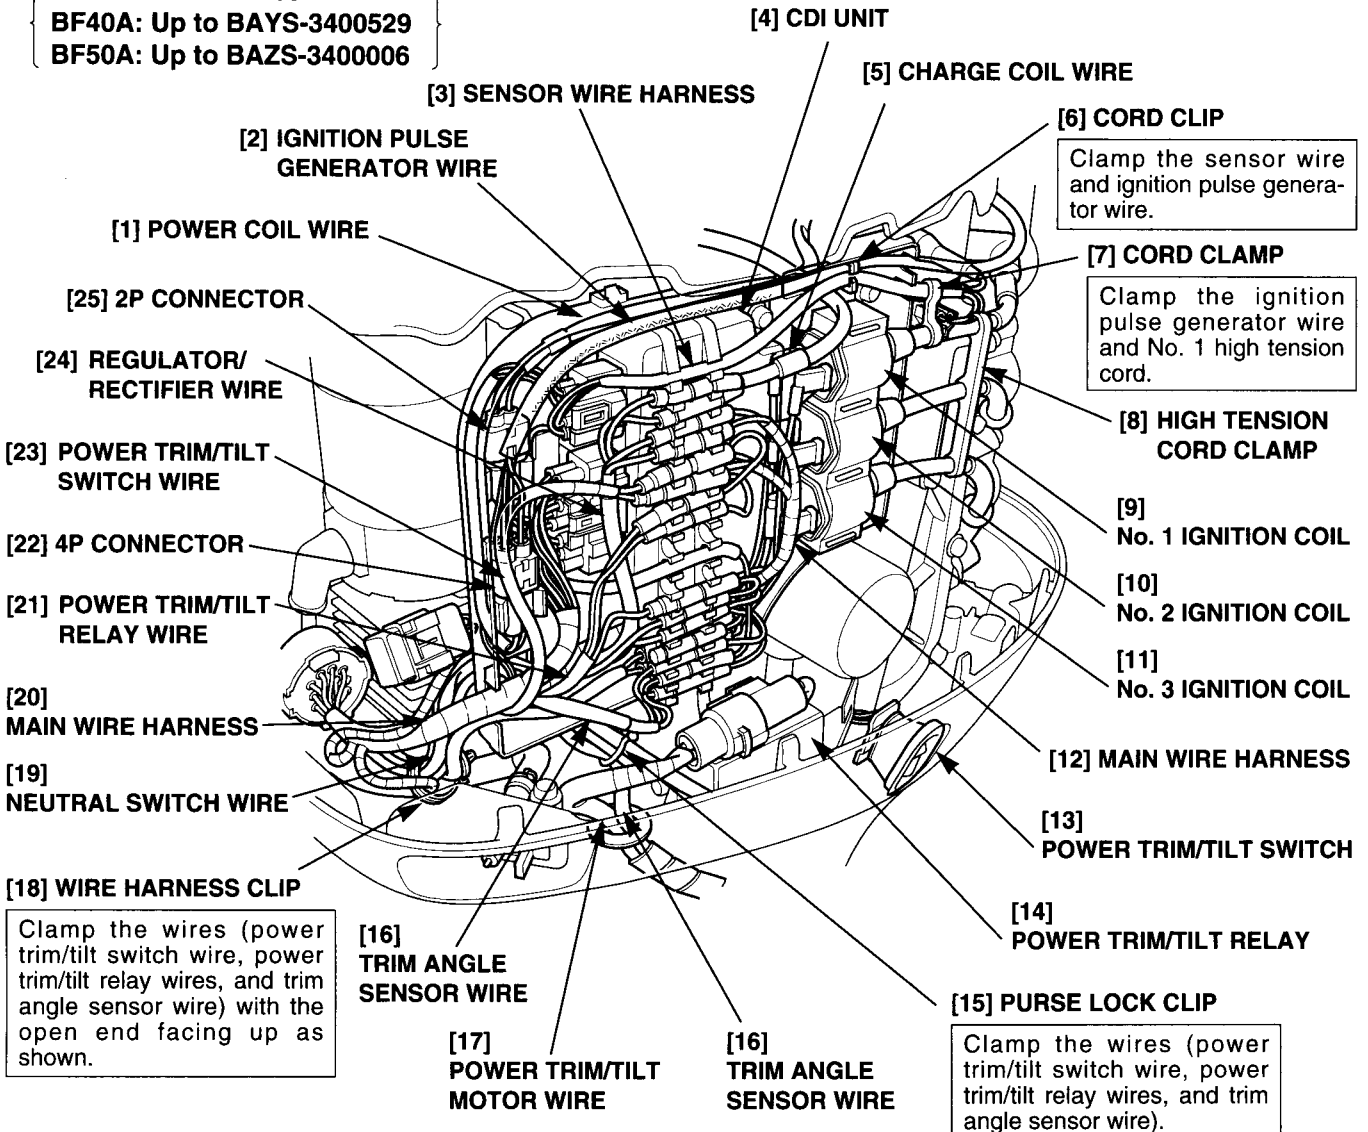



• Power Trim/Tilt Type

Frame serial number:
 BF40A: After BAYS-3400530
 BF50A: After BAZS-3400007

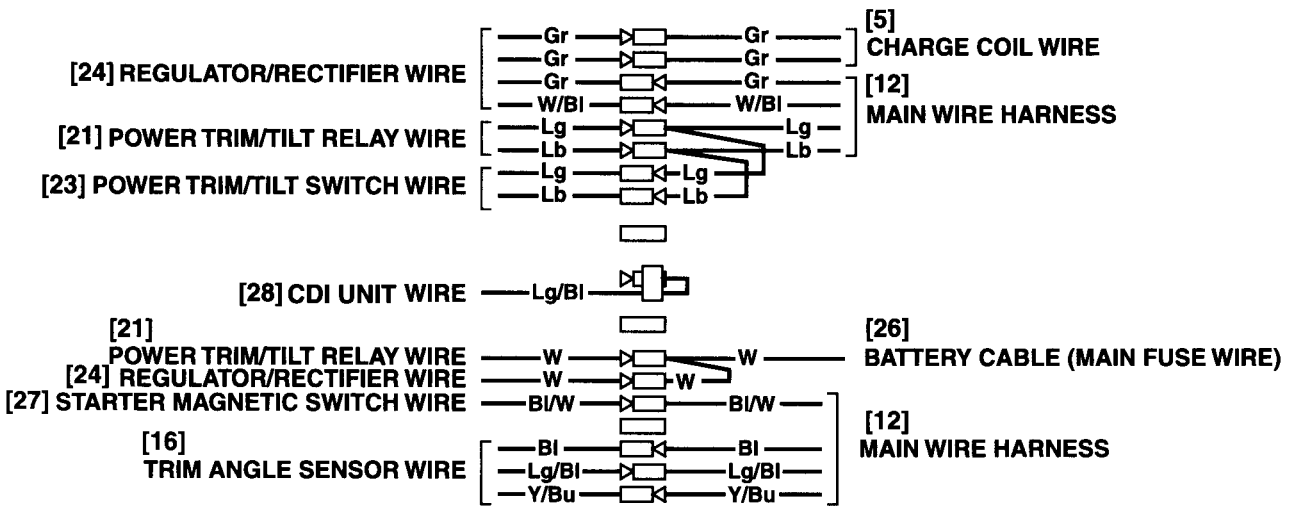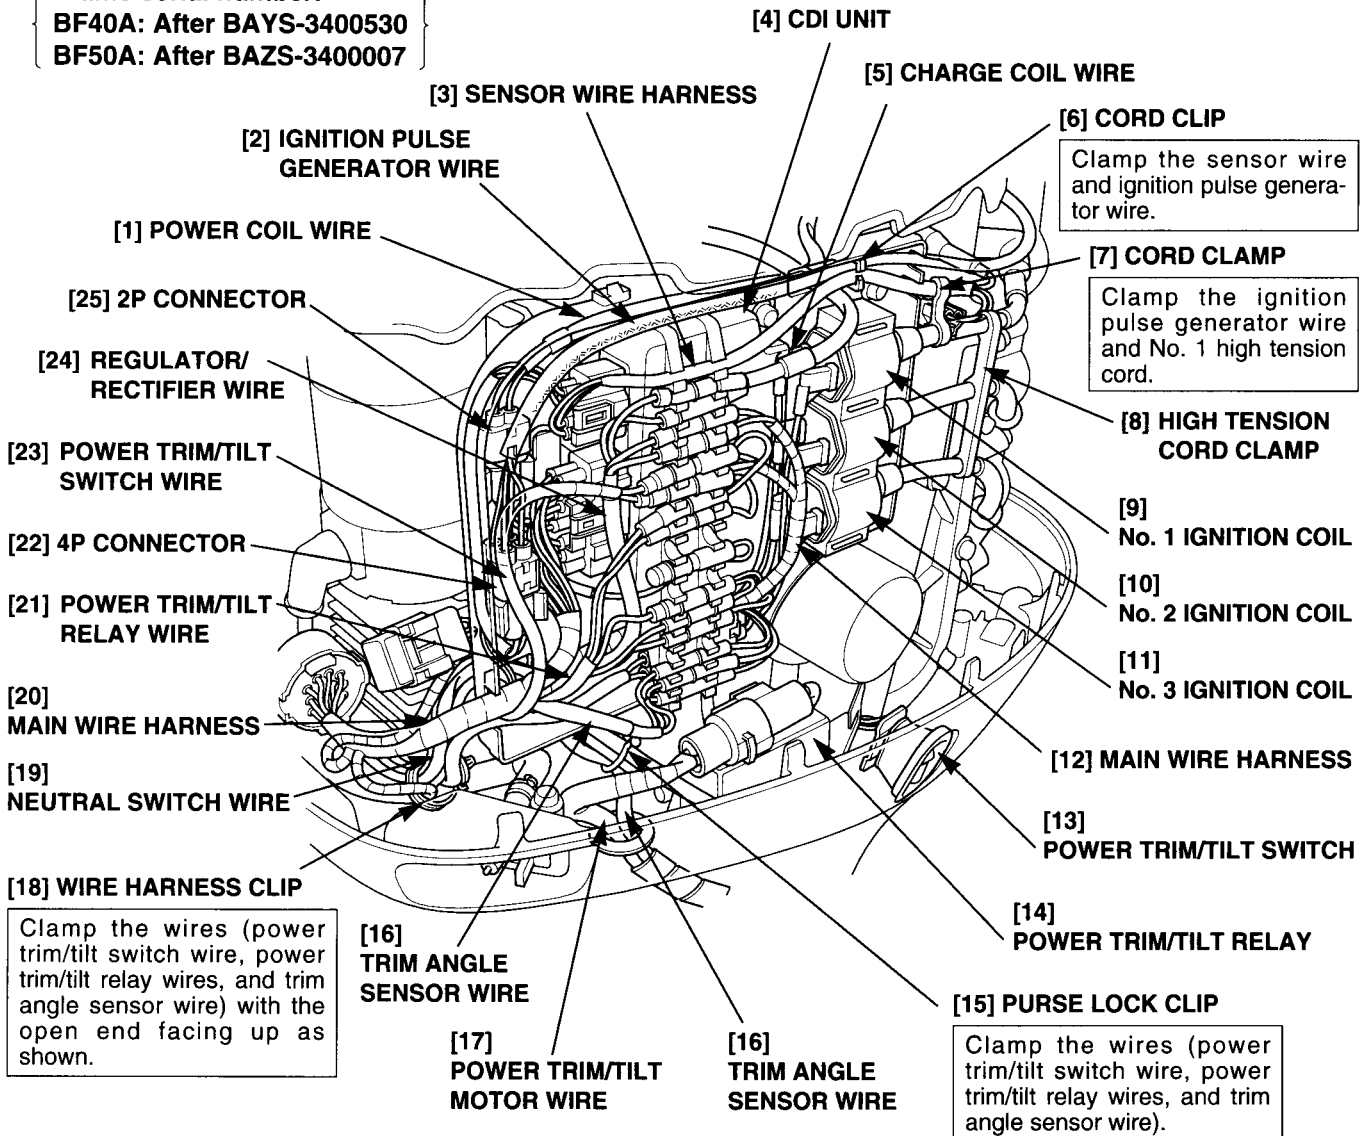


• Gas-Assisted Tilt Type:

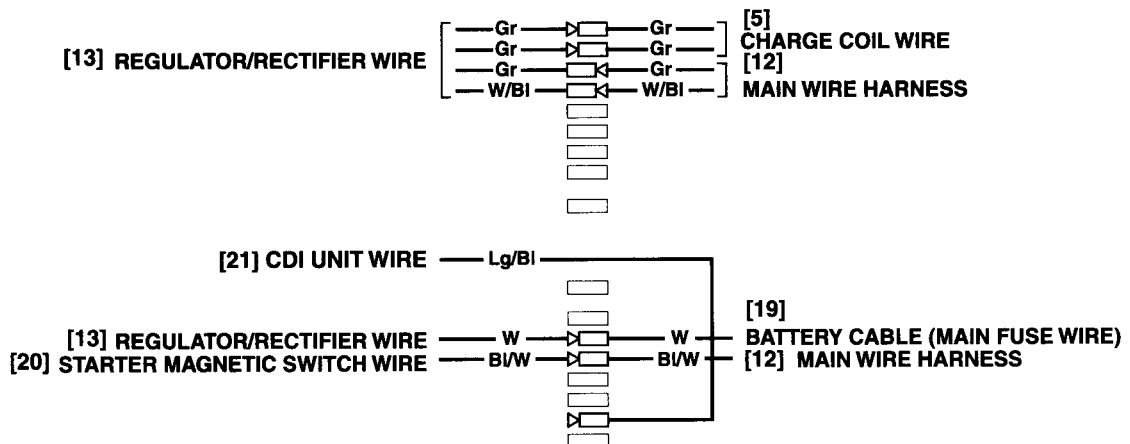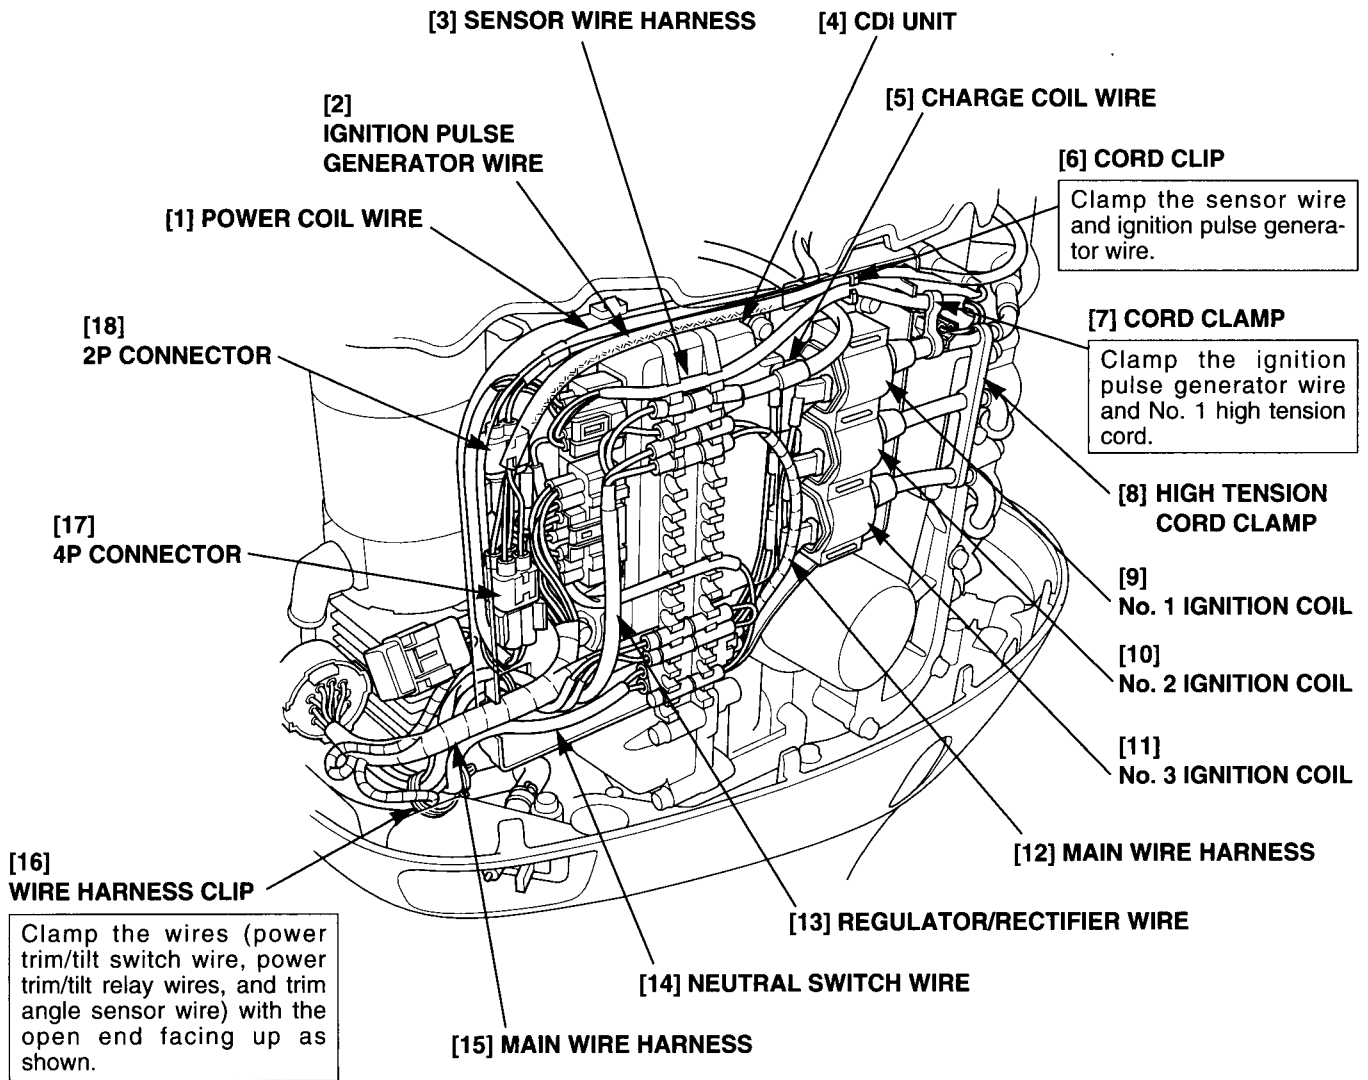


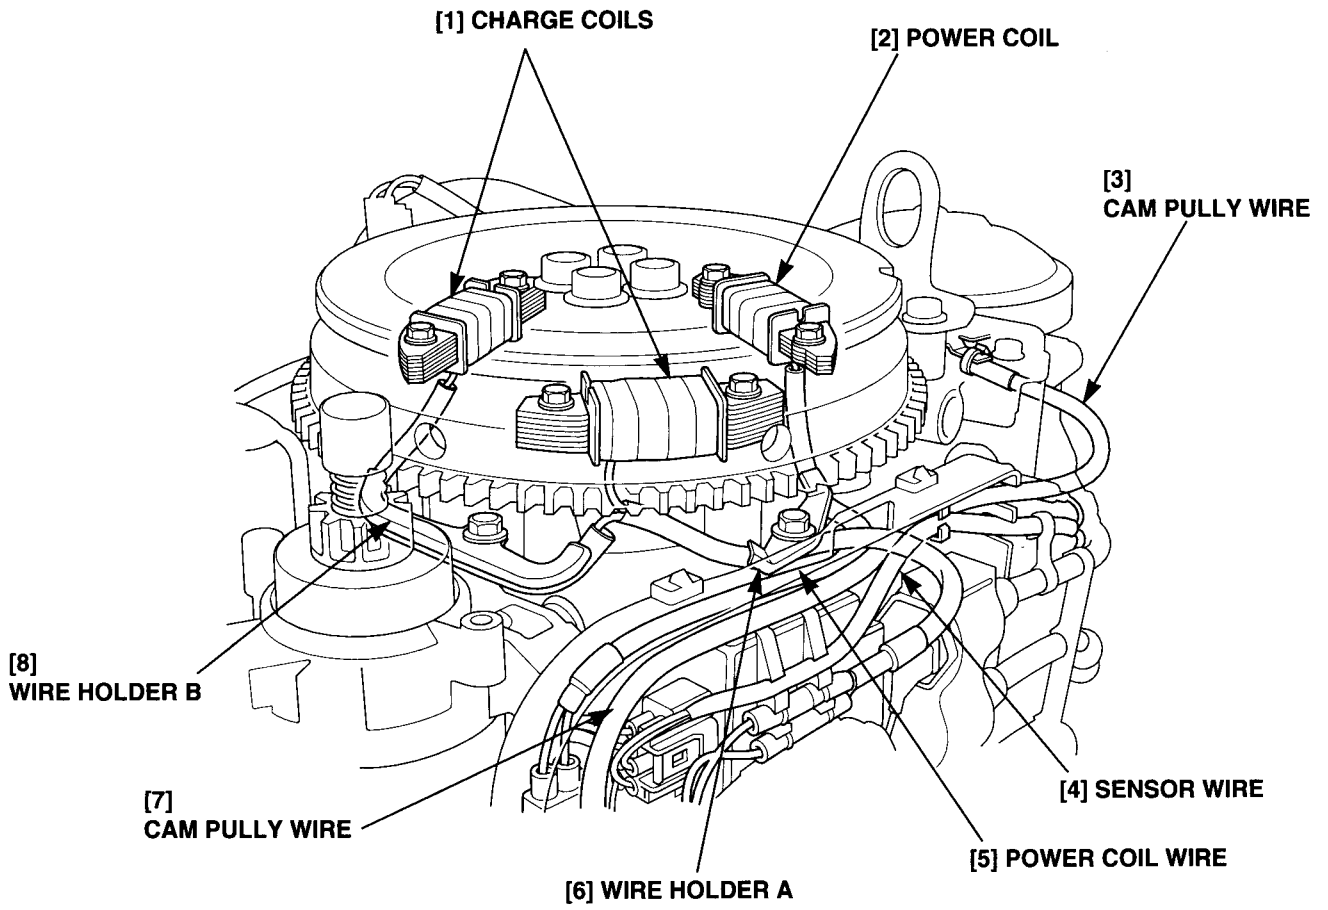


• Power Trim/Tilt Type:

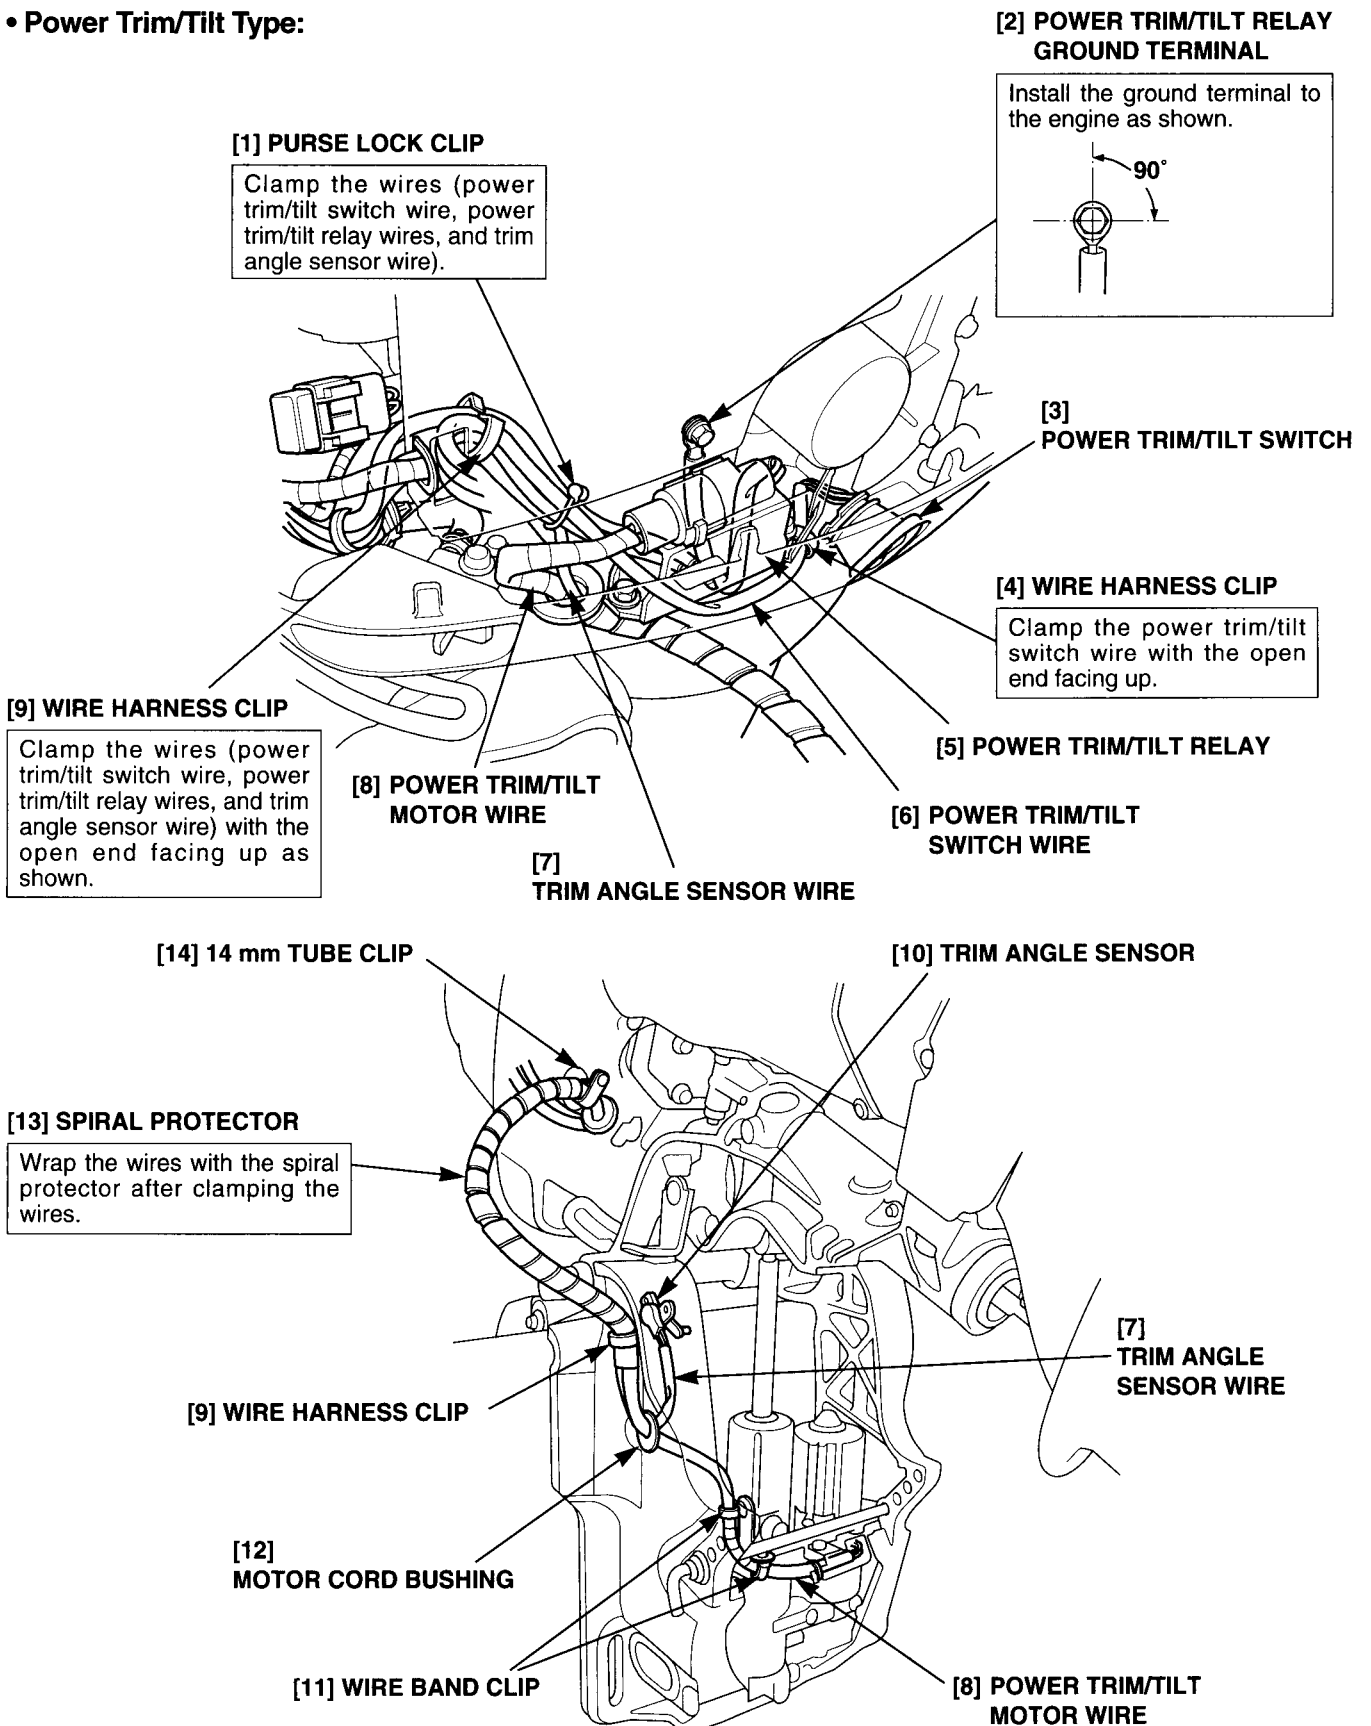

• Remote Control Type With Power Trim/Tilt:



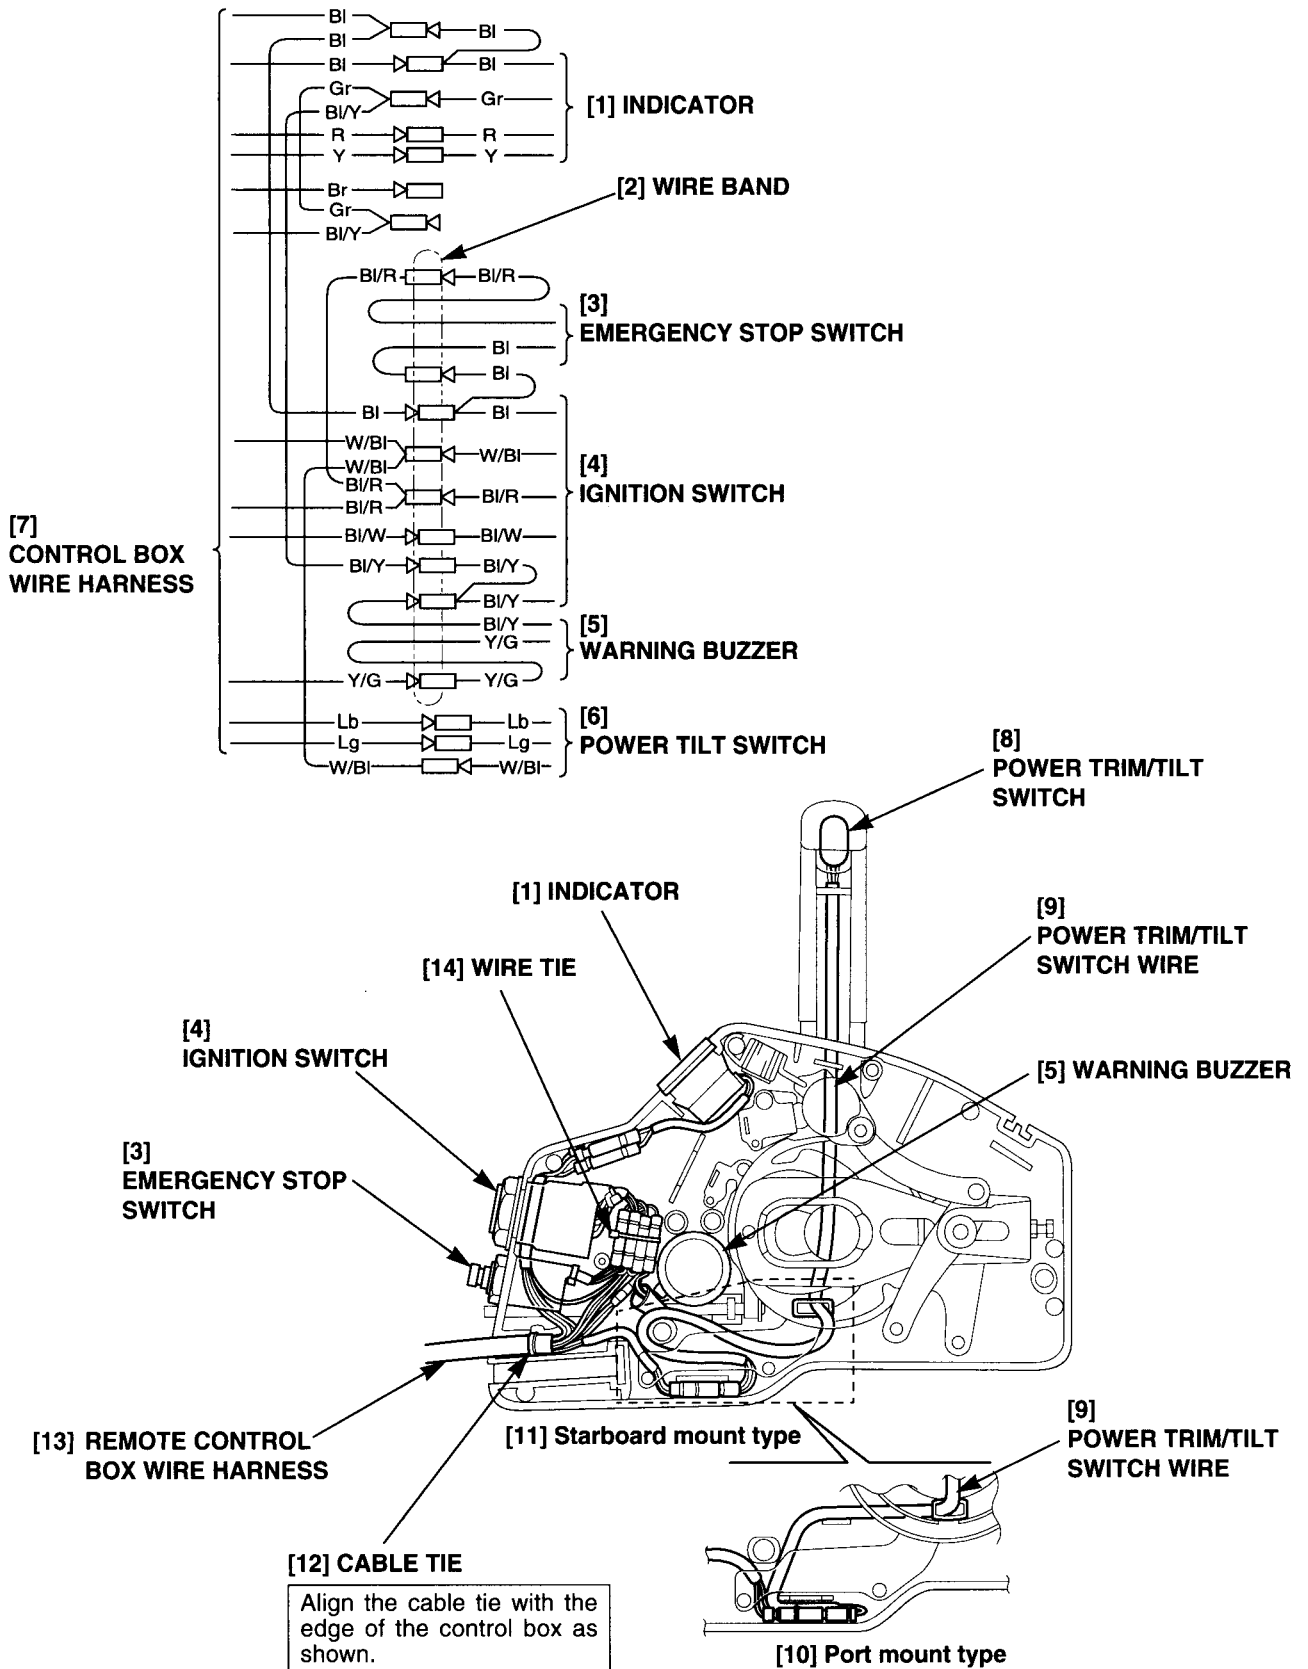


• Long Tiller Handle Type:

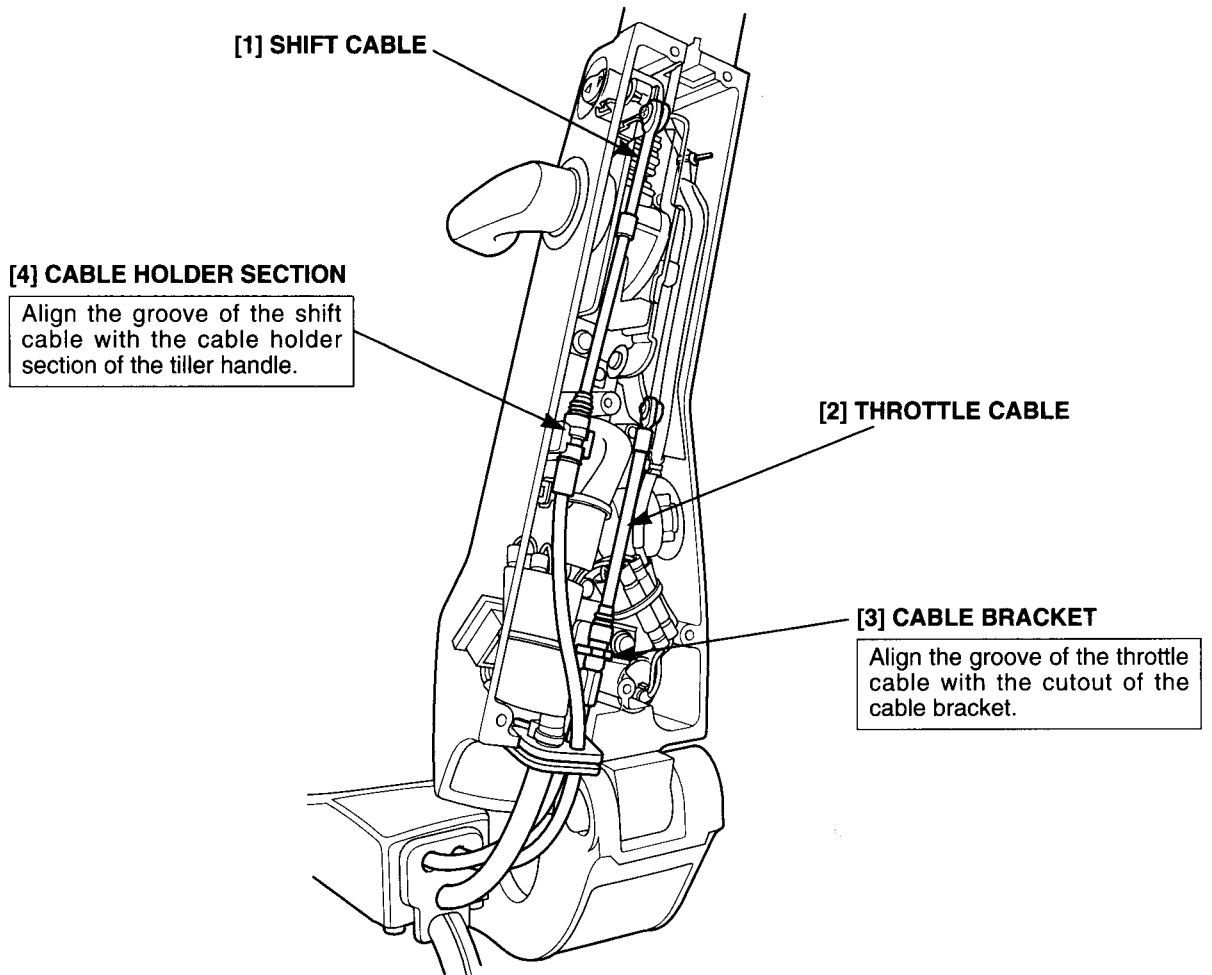


• Long Tiller Handle Type:

*: With power trim/tilt type only
See next page for wire connection.

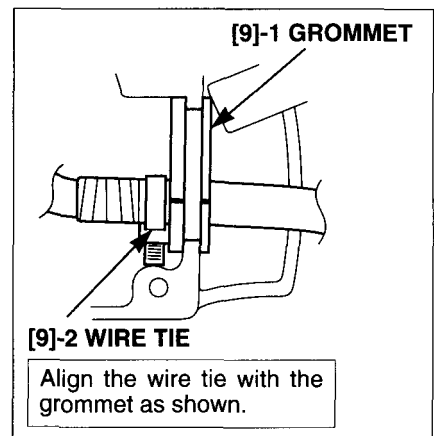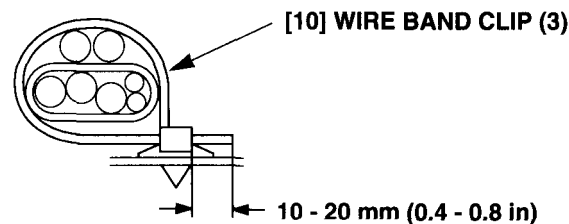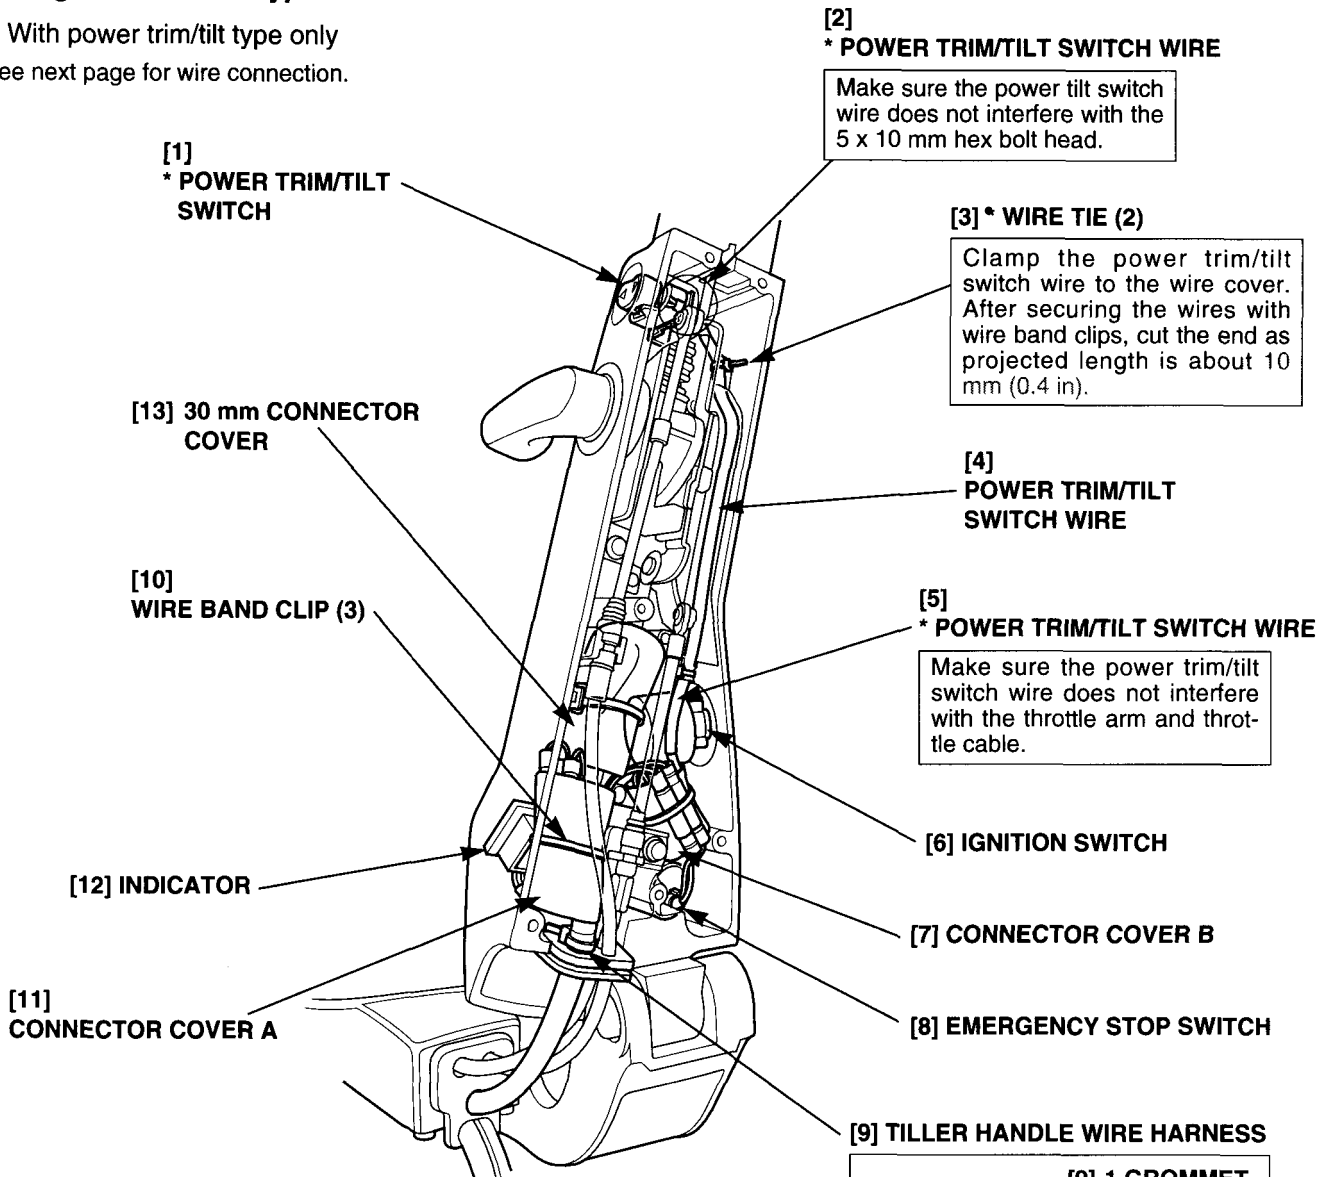



[10]-1
After securing the wires with wire band clips, cut the end as projected length is 10 - 20 mm (0.4 - 0.8 in), provided that the length is not specified in the corresponding drawings.

• Wire Connection in the Long Tiller Handle:

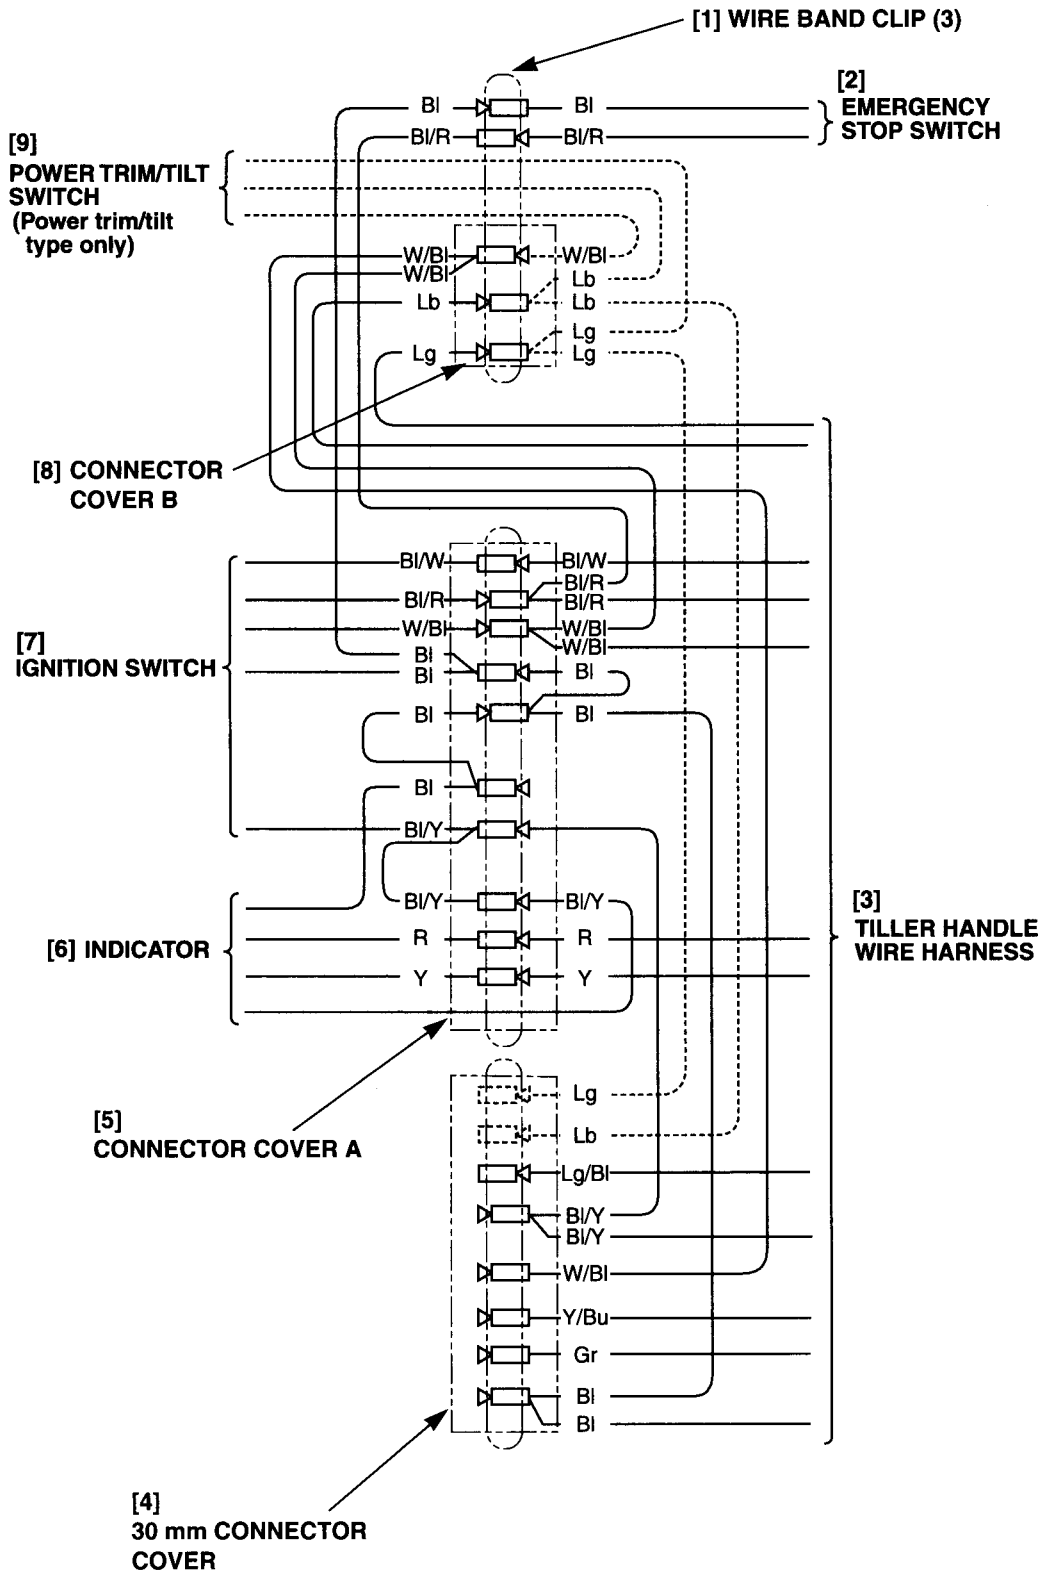

7. TUBE ROUTING

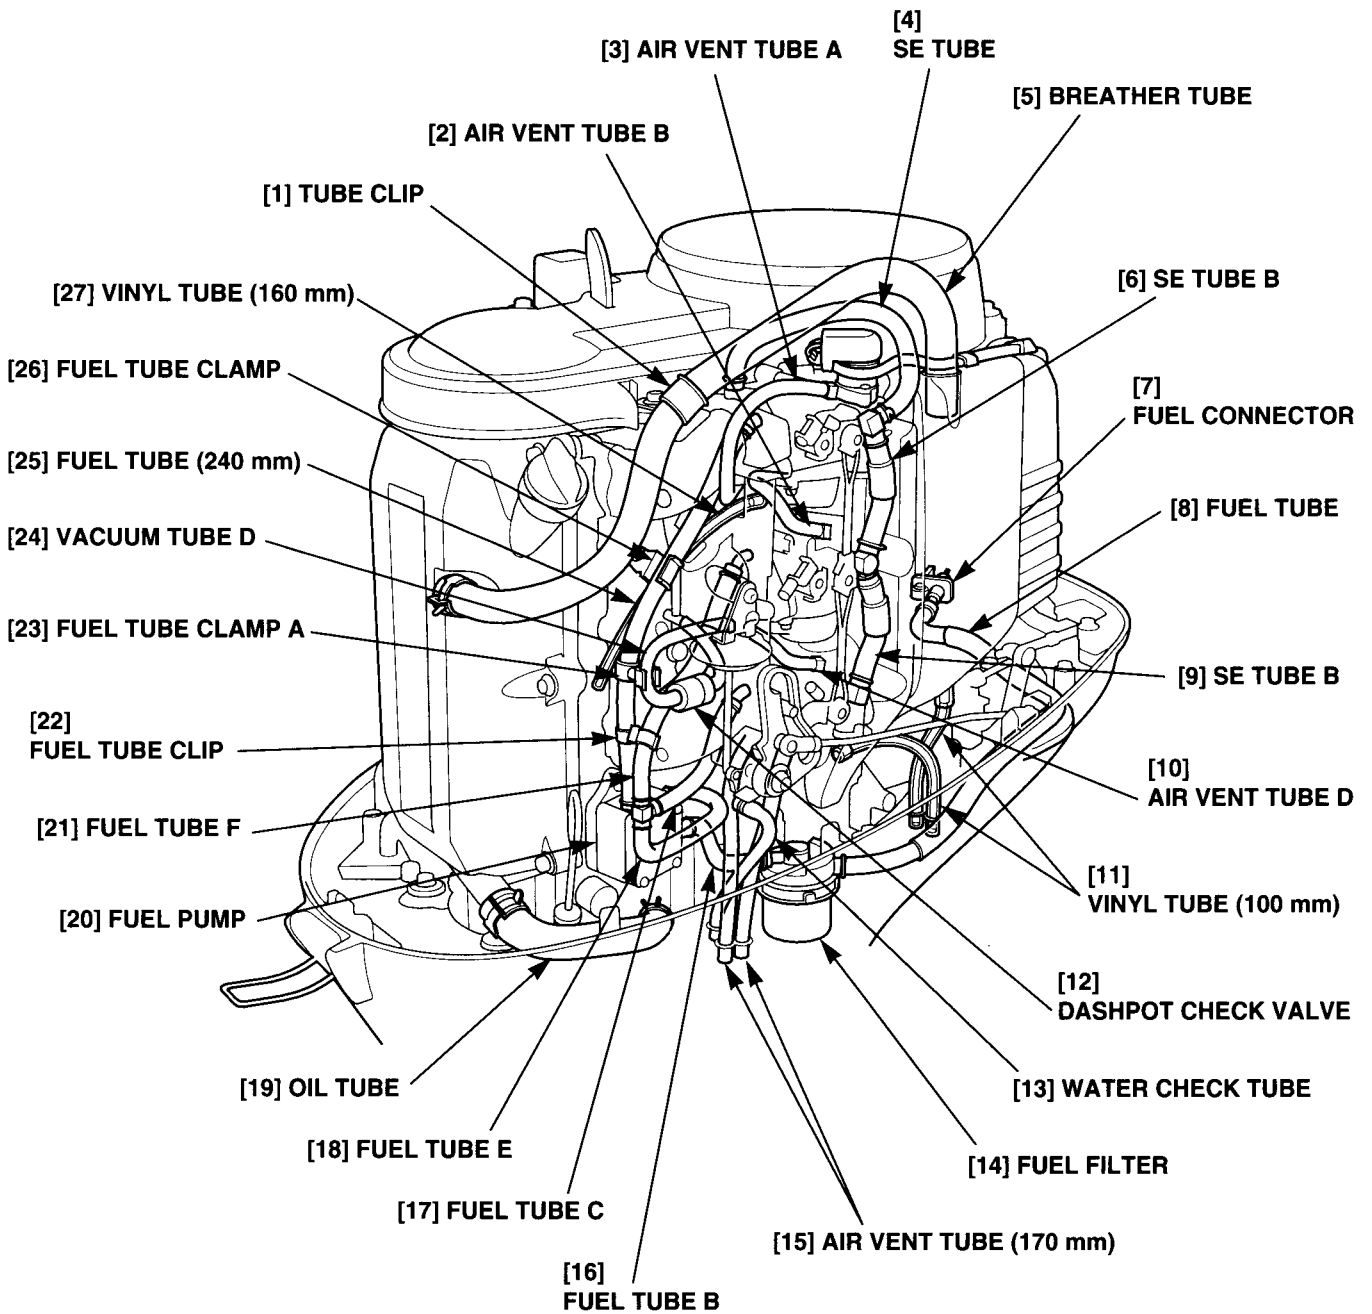

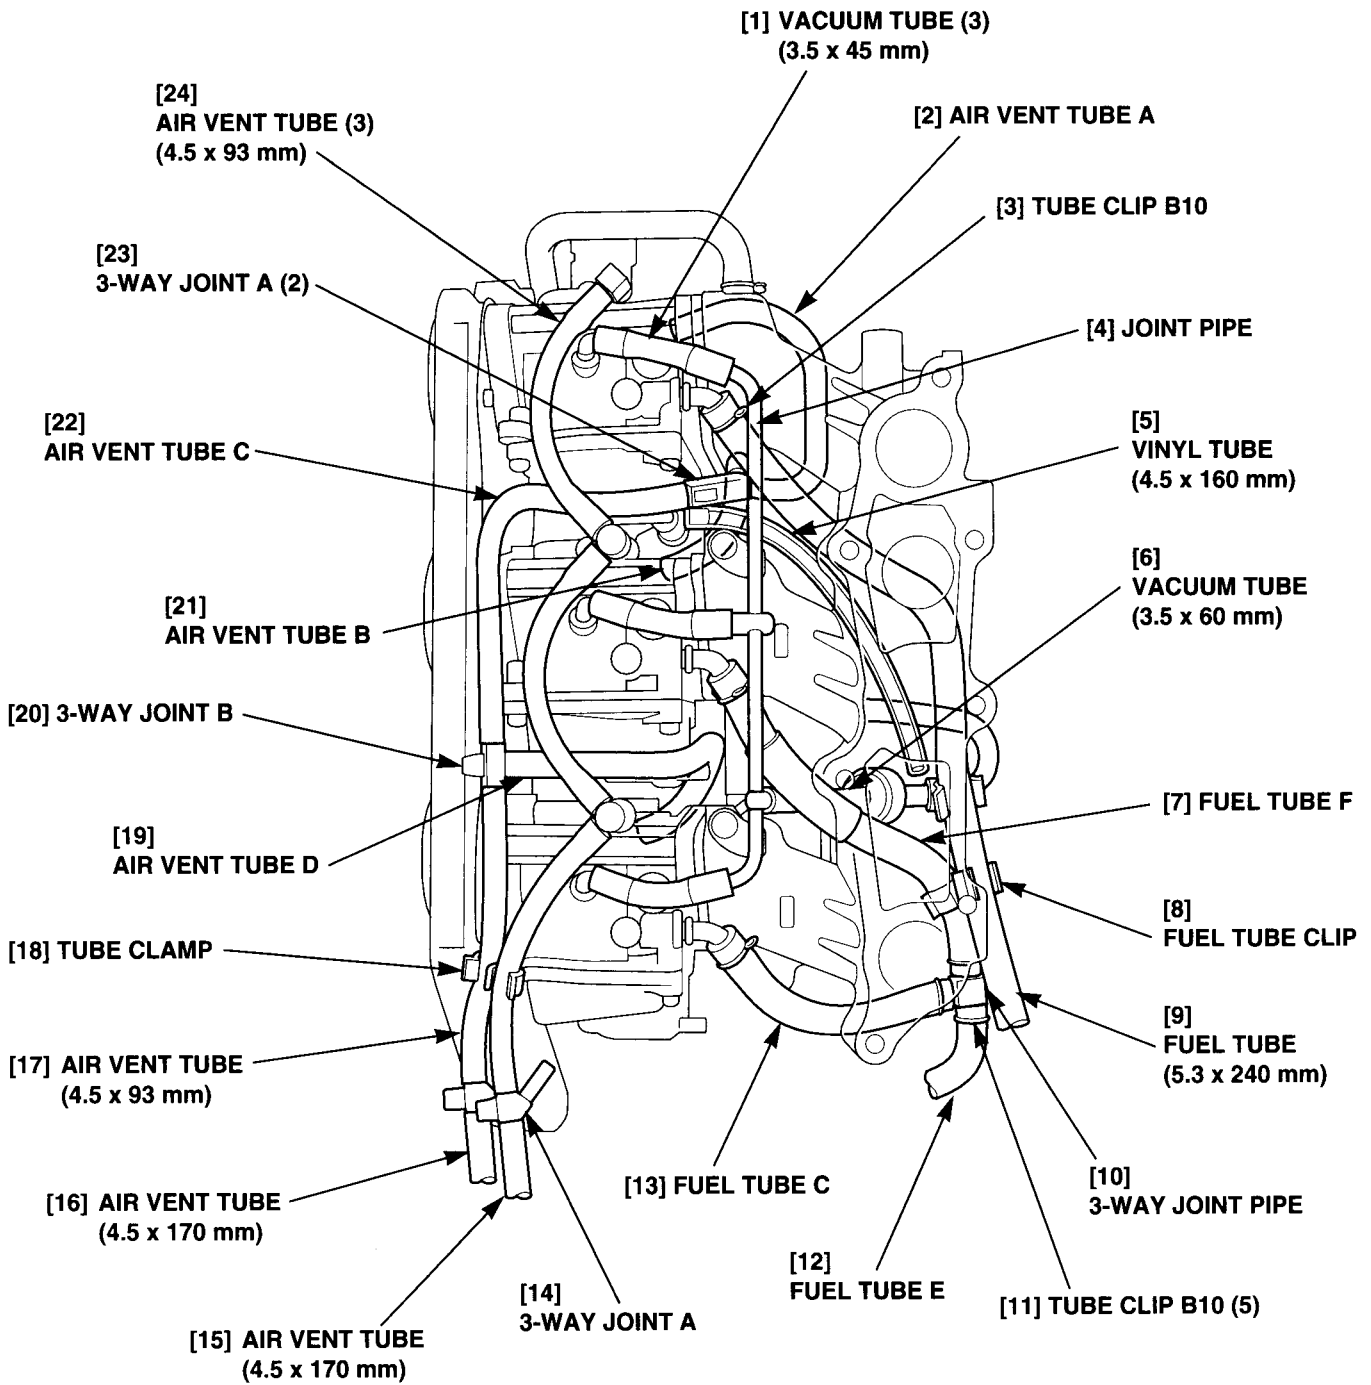

- 1. MAINTENANCE SCHEDULE
- 2. CARBURETOR SYNCHRONIZATION
- 3. DASHPOT DIAPHRAGM
- 4. THROTTLE LINKAGE ADJUSTMENT

- 5. SHIFT CABLE ADJUSTMENT
(Long Tiller Handle Type)
- 6. STEERING FRICTION ADJUSTMENT
(Long Tiller Handle Type)

1. MAINTENANCE SCHEDULE

ITEM	REGULAR SERVICE PERIOD (2) Perform at every indicated month or operating hour interval, whichever comes first.	Each use	After use	First month or 20 Hrs	Every 6 months or 100 Hrs	Every year or 200 Hrs	Every 2 years or 400 Hrs	Refer to page
• Engine oil	Check level	○						*3-2
	Change			○	○			
Gear case oil	Change			○	○			*3-4
• Engine oil filter	Replace					○		*3-3
Timing belt	Check-adjust					○		*3-16
Carburetor linkage	Check-adjust			○	○			3-5
• Idling speed	Check-adjust			○	○			*3-8
• Valve clearance	Check-adjust			○		○		*3-5
• Spark plugs	Check-adjust				○			*3-4
	Replace					○		
Propeller and cotter pin	Check	○						*11-2
Anode	Check	○						—
Lubrication	Grease			○ (1)	○ (1)			*2-35
• Fuel tank and tank filter	Clean					○		*3-8
Thermostat	Check					○		*8-3
• Fuel filter	Check				○			*3-7
	Replace						○	
• Fuel line	Check	○						*5-4
	Replace		Every 2 years (if necessary)					
Battery and cable connection	Check level-tighten	○						—
Bolts and nuts	Check-tighten			○	○			—
• Crankcase breather tube	Check					○		*5-3
Cooling water passage	Clean		○ (3)					—

*: Refer to the base shop manual.

- Emission related items (Bodensee type and Canadian type)

(1) Lubricate more frequently when used in salt water.

(2) For professional commercial use, log hours of operation to determine proper maintenance interval.

(3) When operating in salt water, turbid or muddy water, the engine should be flushed with clean water after each use.

2. CARBURETOR SYNCHRONIZATION

CAUTION

Running the outboard motor without sufficient cooling water will damage the water pump and overheat the engine. Be sure that water flows from the cooling system indicator while the engine is running. If not, stop the engine and determine the cause of the problem.



- 1) Remove the engine cover.
- 2) Remove the 5 x 10 mm plugs and sealing washers from the intake manifold of each cylinder.
- 3) Attach the vacuum gauge adapters to each intake manifold plug hole and connect the vacuum gauge hoses to the adapters.
 - Connect:
 - The No. 1 vacuum gauge hose to the No. 1 vacuum gauge adapter.
 - The No. 2 vacuum gauge hose to the No. 2 vacuum gauge adapter.
 - The No. 3 vacuum gauge hose to the No. 3 vacuum gauge adapter.
- 4) Attach an engine tachometer and restart the engine.
 - Follow the tachometer manufacturer's instructions.
- 5) Run the outboard motor in an outboard test tank with the water at least 4 inches above the antivibration plate. Allow the engine to warm up to normal operating temperature (Approx. 10 minutes).

⚠ WARNING


Engine exhaust contains poisonous carbon monoxide gas that can cause unconsciousness and death.

- If the engine must be running, make sure the area is well ventilated.

- 6) Check the idle speed (See base shop manual).

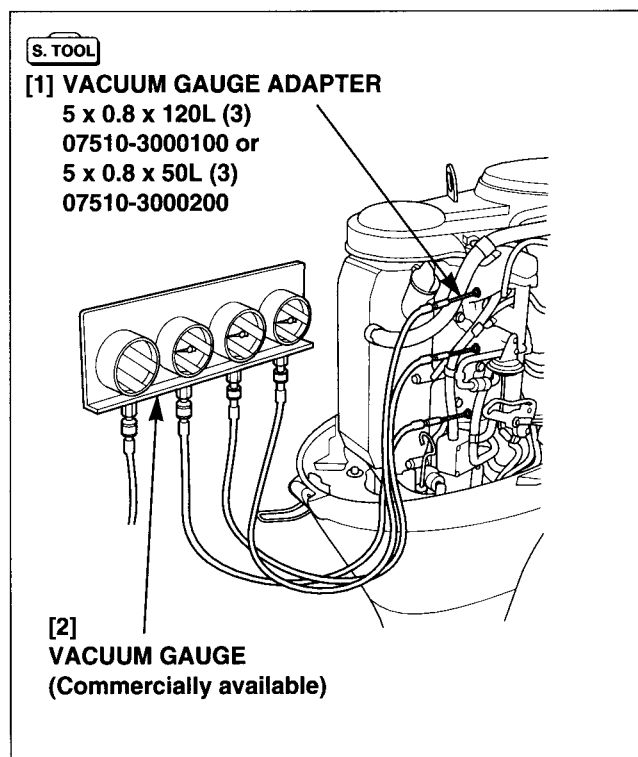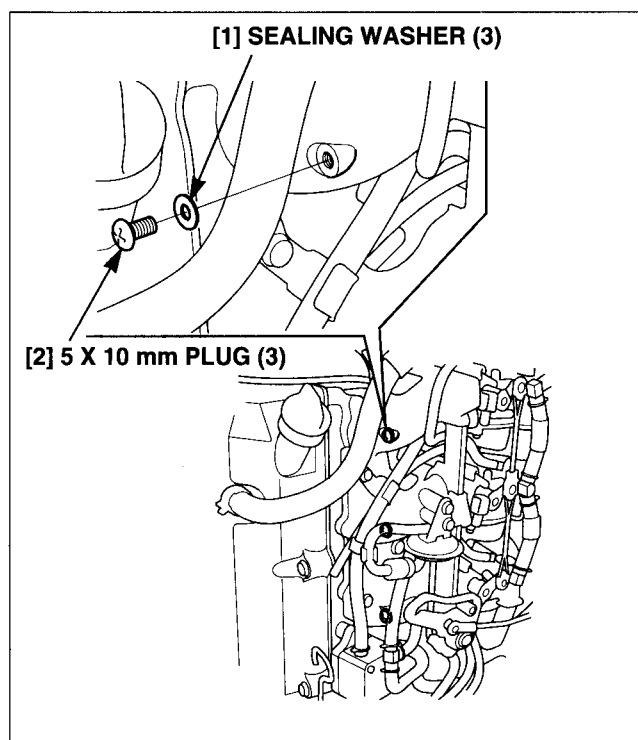


- 7) Pinch the SE tubes using commercially available tube clips keeping away from tube protector as shown.
- 8) Check the intake manifold vacuum difference between cylinders. Take maximum vacuum difference between each cylinder. It should be **20 mmHg (0.75 inHg)** or less.
- 9) If the vacuum difference between the cylinders is not 20 mmHg (0.75 inHg) or less, adjust as follows.

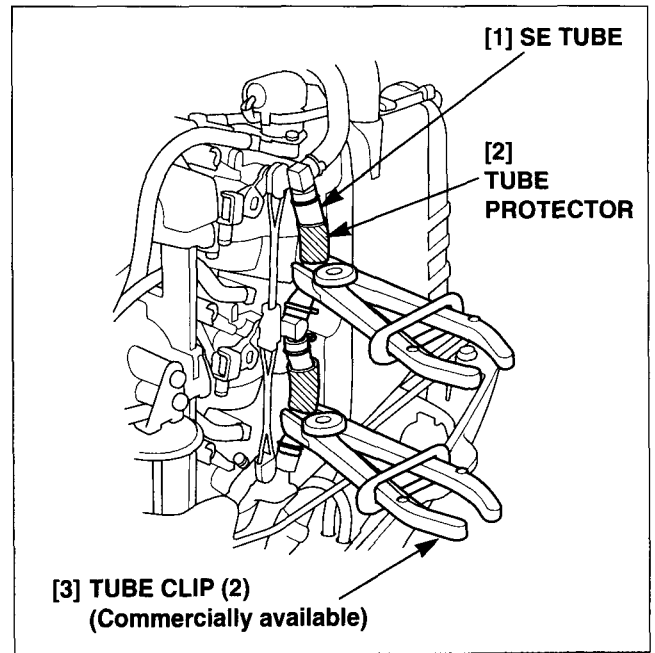

Adjustment:

- The No. 3 carburetor is the synchronization base carburetor. This carburetor will not have a synchronization adjusting screw.
- Adjust the carburetor to get the least amount of vacuum difference between the cylinders. As the manifold vacuum difference decreases, the idle speed will become more stable.

- 1) Turn the No. 1 and No. 2 adjusting screws so that the vacuum difference between each cylinder is 20 mmHg (0.75 inHg) or less.
- 2) After adjustment, check the idle speed and adjust if necessary by turning the No. 3 carburetor throttle stop screw.
- 3) Snap the throttle several times and allow the engine to return to idle. Check to be sure that the vacuum difference between each cylinder stays within 20 mmHg (0.75 inHg) or less. Readjust if necessary.
- 4) Stop the engine, remove the vacuum gauge, adapters and tube clips.
- 5) Install the 5 x 10 mm plugs and sealing washers.

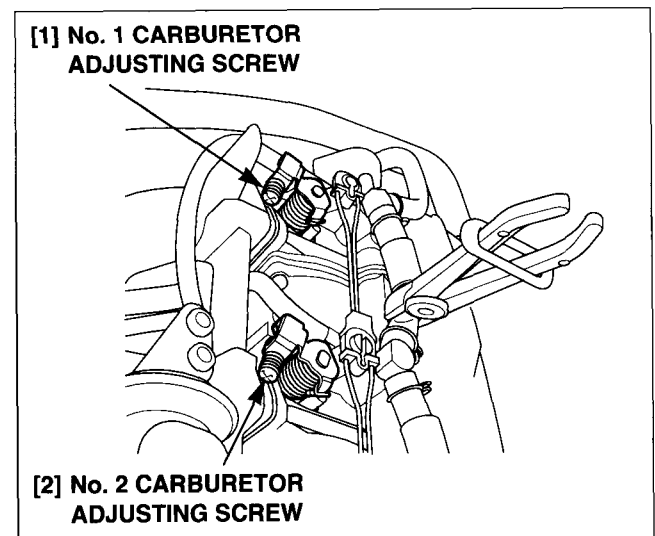


3. DASHPOT DIAPHRAGM


Adjust the dashpot diaphragm after adjusting the idle speed (see base shop manual).

- 1) Remove the engine cover.
- 2) Remove the throttle rod from the throttle cam.



- 3) Loosen the 6 x 16 mm torx bolts using a commercially available torx bit (T30H).

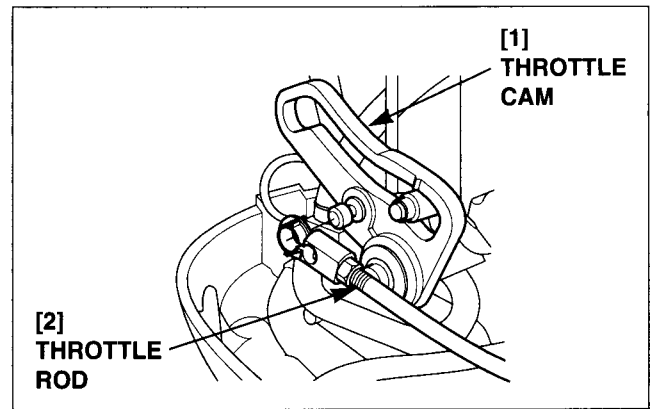

- 4) Disconnect the vacuum tube from the dashpot check valve.

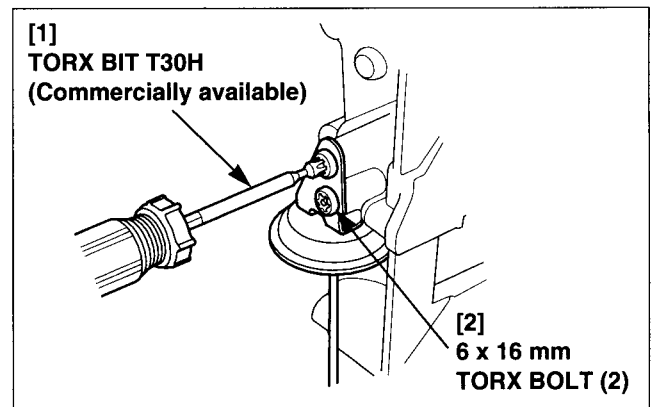


- 5) Move the throttle cam in the direction pointed by arrow until the throttle cam roller is set free from the throttle cam and hold the throttle cam.

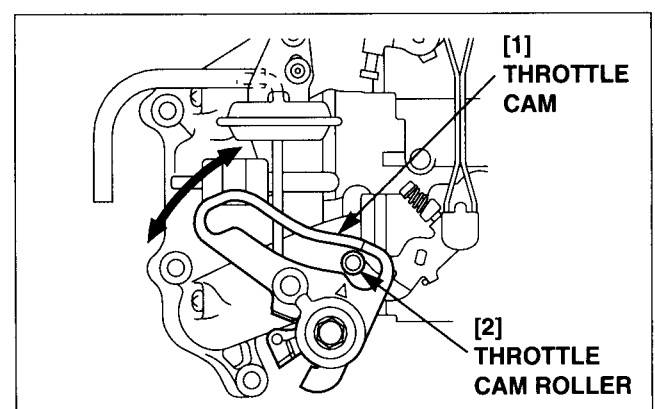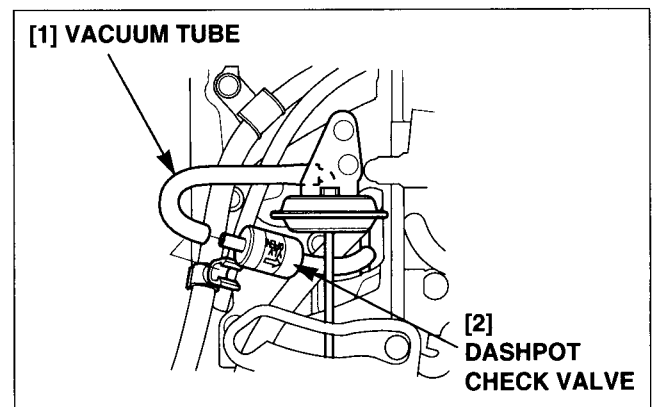

- 6) Move the diaphragm up or down slowly until the clearance between the throttle cam roller and throttle opener cam is 0.2 - 0.8 mm (0.008 - 0.031 in). While holding the clearance, tighten the 6 x 16 mm torx bolts to the specified torque.

TORQUE: 9 N•m (0.9 kgf•m, 6.5 lbf•ft)


- 7) Connect the vacuum tube to the dashpot check valve and attach the throttle rod to the throttle cam.

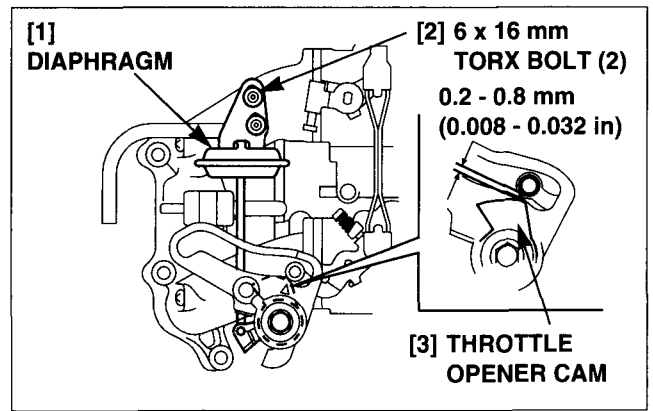

4. THROTTLE LINKAGE ADJUSTMENT


• Throttle Rod Length Adjustment

- 1) Remove the lock pin and washer, and disconnect the throttle cable from the throttle arm.

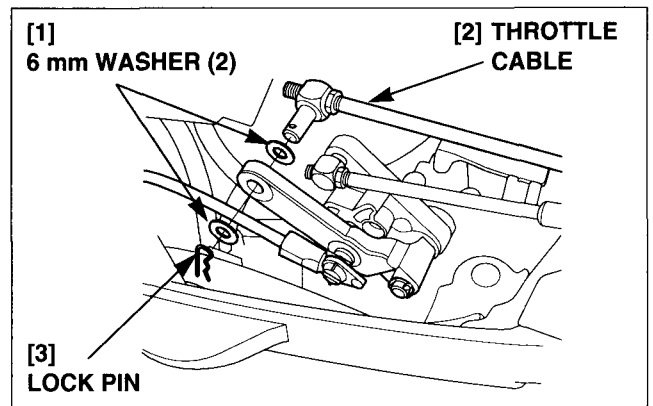

- 2) Move the throttle arm to the fully open position and be sure that the throttle arm contacts the fully open stopper.


- 3) Check that the throttle cam is also at the fully open position and that there is clearance of 1 mm (0.04 in) or less between the carburetor throttle lever and stopper on the No. 3 carburetor.

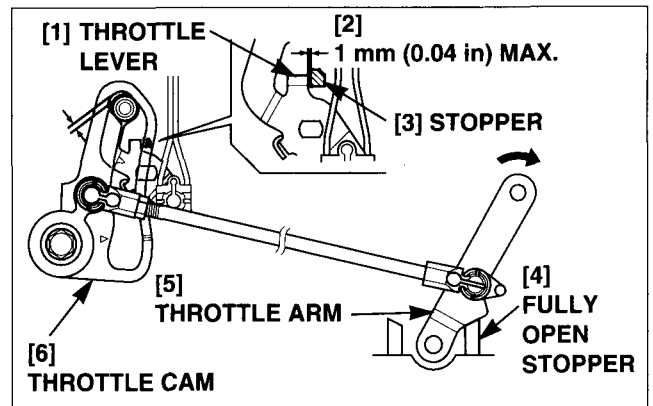


- 4) If either the throttle arm or throttle cam is not at the fully open position, adjust as follows.

- 5) Loosen the throttle rod pivot lock nut, detach the throttle rod pivot from the throttle cam, and adjust by turning the throttle rod pivot.

- 6) Attach the throttle rod pivot to the throttle cam and tighten the throttle rod pivot lock nut securely.

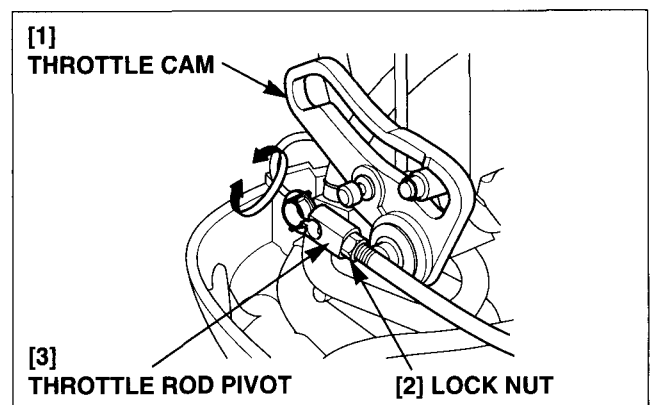


- 7) After adjustment, move the throttle cam to the fully open position and be sure that there is clearance of **1 mm (0.04 in) or less** between the carburetor throttle lever and stopper on the No. 3 carburetor.
- 8) If the clearance is more than 1 mm (0.04 in), readjust by turning the throttle rod pivot.
- 9) Adjust the throttle cable, then connect the throttle cable to the throttle arm.

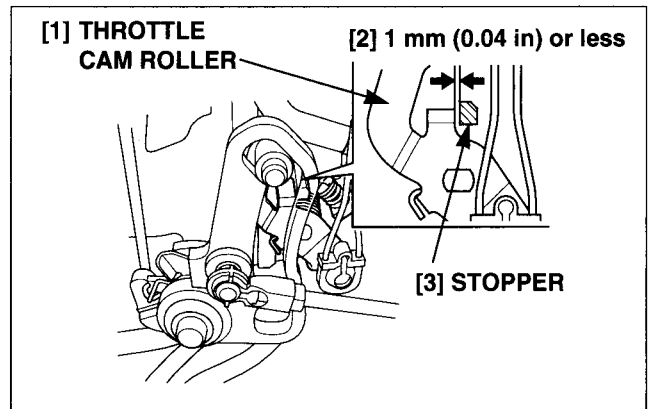


• Throttle Cable Length Adjustment

Adjust the throttle cable length after adjusting the throttle rod length.


- 1) Turn the throttle grip to the fully open position and check that the throttle arm contacts the fully open stopper.

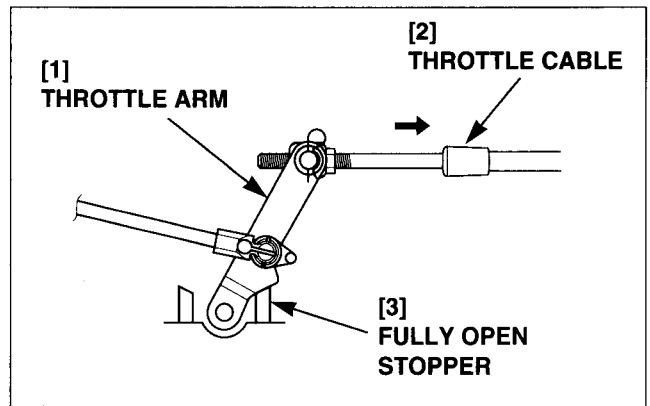


- 2) Return the throttle grip to the fully close position.
- 3) Pushing the throttle arm lightly (i.e. by the amount of throttle link play) in the direction of arrow, check whether the center of throttle cam roller is at the right side (i.e. advancing direction) to the reference marks.

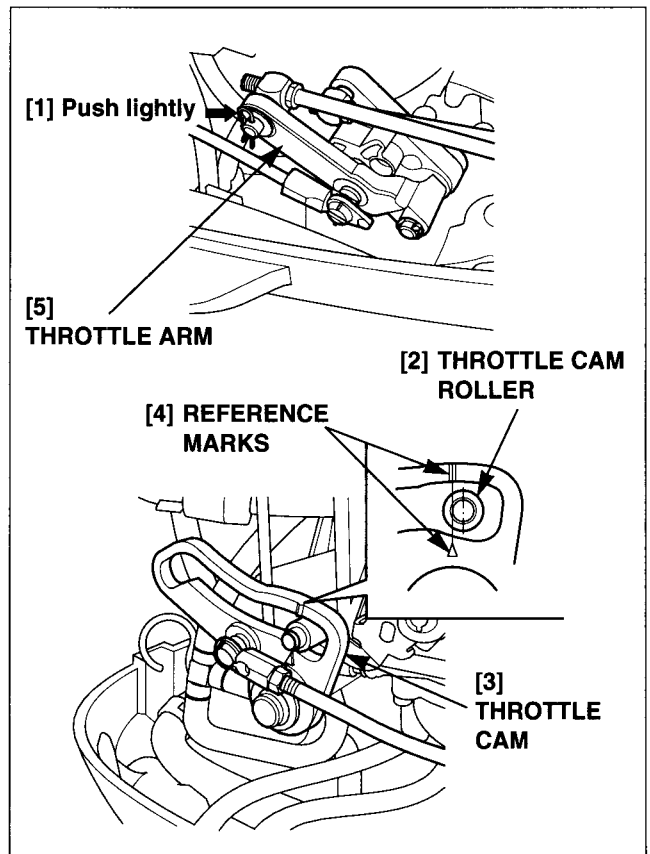


- 4) Adjust as follows, if necessary.
- 5) Loosen the shift pivot lock nut, remove the 6 mm lock pin and 6 mm washer, and disconnect the throttle cable.
- 6) Turn the throttle grip to the fully open position and hold it in the position using the friction grip.
- 7) Remove the throttle rod pivot from the throttle cam.

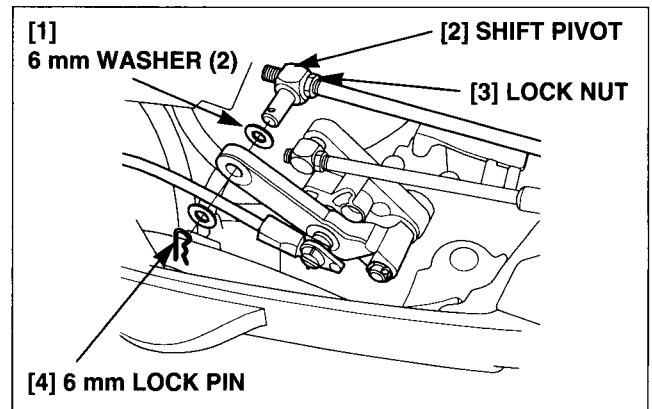

- 8) Pulling the throttle cable's shift pivot lightly, turn the shift pivot so that the throttle cable can be connected smoothly to the throttle arm that is set in the fully open position (i.e. throttle arm is lightly in contact with the fully open stopper).
- 9) Connect the throttle cable to the throttle arm and tighten the shift pivot lock nut securely.

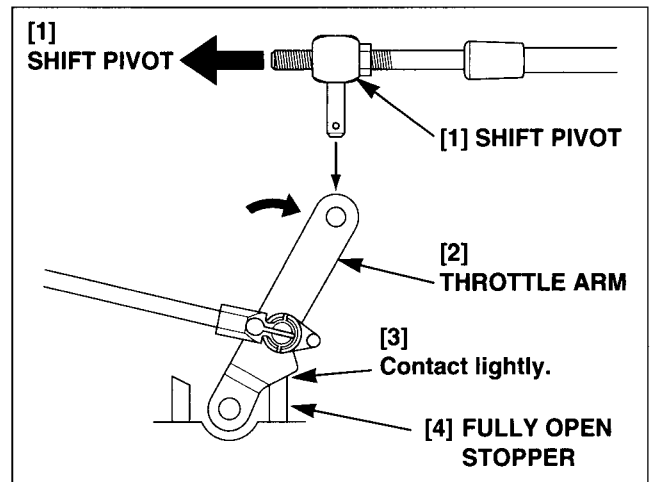

- 10) Install the throttle rod pivot on the throttle cam.
- 11) Turn the throttle grip to the fully closed position. Pushing the throttle arm lightly in the direction of arrow, check whether the center of throttle cam roller is at the right side (advancing side) to the reference marks.

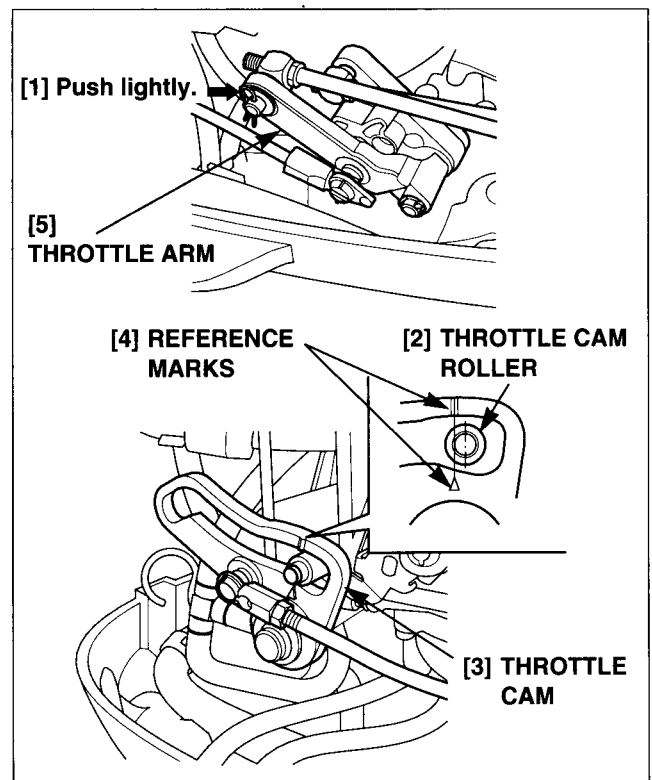


5. SHIFT CABLE ADJUSTMENT (Long Tiller Handle Type)

• Shift Cable Length Adjustment

Adjust the shift cable length after adjusting the shift rod adjustment (see base shop manual).

- 1) Loosen the shift link pivot lock nut, and remove the 6 mm lock pin and 6 mm washer.
- 2) Disconnect the shift cable from the shift link B and remove the 6 mm washer.
- 3) Set the shift link B in the "N" (neutral) position.
- 4) Set the shift lever in the neutral position.
- 5) Rotate the shift pivot by the necessary amount until it will easily insert into the shift link B.
- 6) Install the 6 mm washer over the pin of the shift pivot and connect to the shift link B using the 6 mm washer and 6 mm lock pin.
- 7) Tighten the shift pivot lock nut securely.
- 8) After adjustment, be sure that the shift lever moves smoothly into all positions.

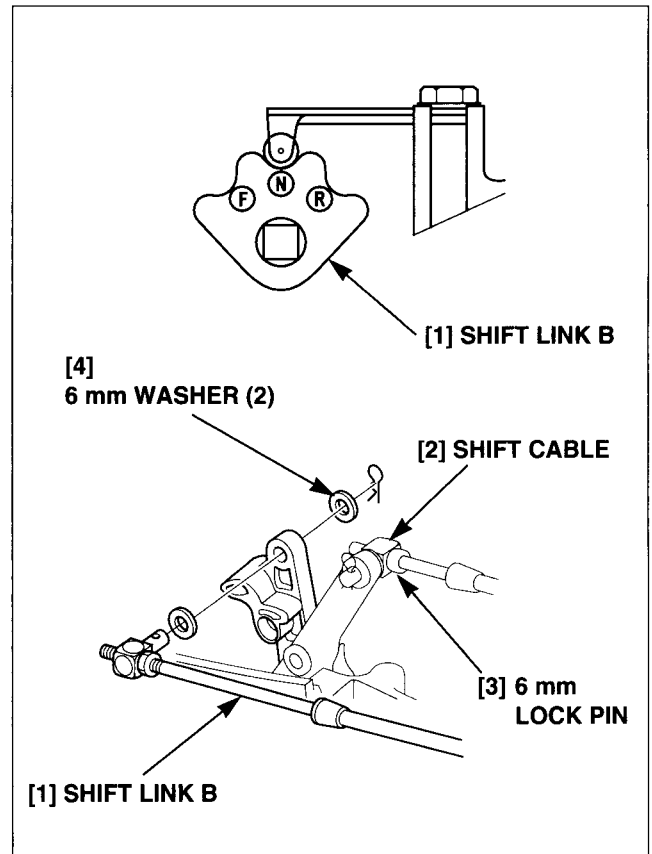

6. STEERING FRICTION ADJUSTMENT (Long Tiller Handle Type)


- 1) Move the friction adjusting lever to the left side fully until the friction lever contacts to the stopper as shown.
- 2) Check the starting torque by measuring the starting force using a spring scale at the center of the throttle grip as shown.

The motor should start to move with 100 N (10.0 kgf, 22.0 lbf).

- 3) If it does not, loosen the lock nut once. Then, retighten the self-locking nut to the specified torque by turning the adjusting lever to the left side fully.
 - Tighten the friction adjusting lever and tighten the lock nut to the specified torque.

TORQUE: 9.5 N•m (0.95 kgf•m, 6.9 lbf•ft)

- 4) Recheck the starting force. If the starting forces is less than 100 N (10.0 kgf, 22.0 lbf), check the friction discs for contaminated with grease (P. 12-1).

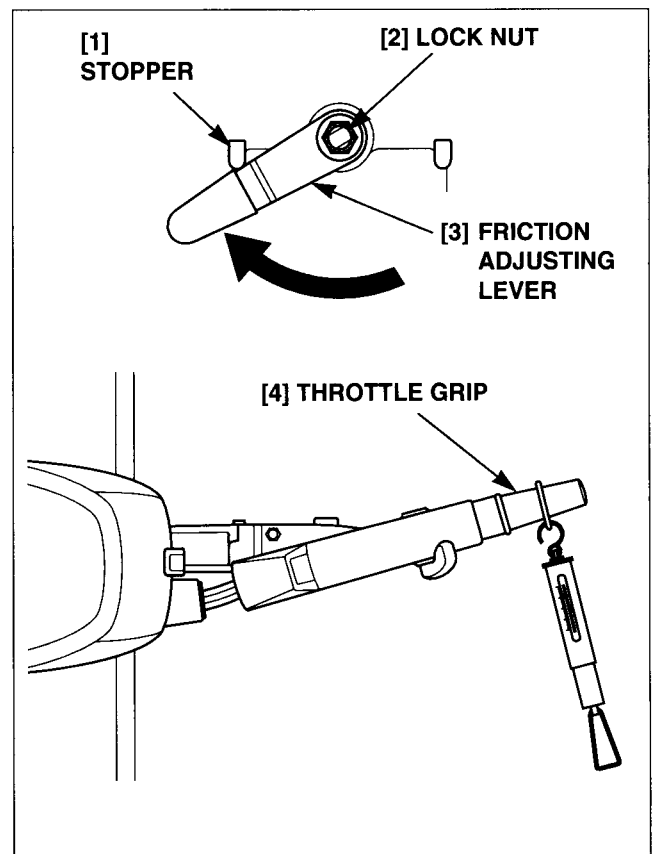

1. SILENCER COVER

2. CARBURETOR/MANIFOLD REMOVAL

3. CARBURETOR

4. CARBURETOR/MANIFOLD INSTALLATION

1. SILENCER COVER



a. REMOVAL/INSTALLATION

- 1) Remove the engine cover.
- 2) Pull off the breather tube from the silencer cover.
- 3) Unfasten the SE thermal valve heater wire from the clamp on the silencer cover.
- 4) Pull off the vinyl tubes from the engine under case.
- 5) Remove the 6 mm flange bolts, washers and cover nut, then remove the silencer cover from the silencer plate.
- 6) Install the removed parts in the reverse order of removal.

[2] BREATHER TUBE


ASSEMBLY:

Insert until the white line aligns with the hole edge as shown.

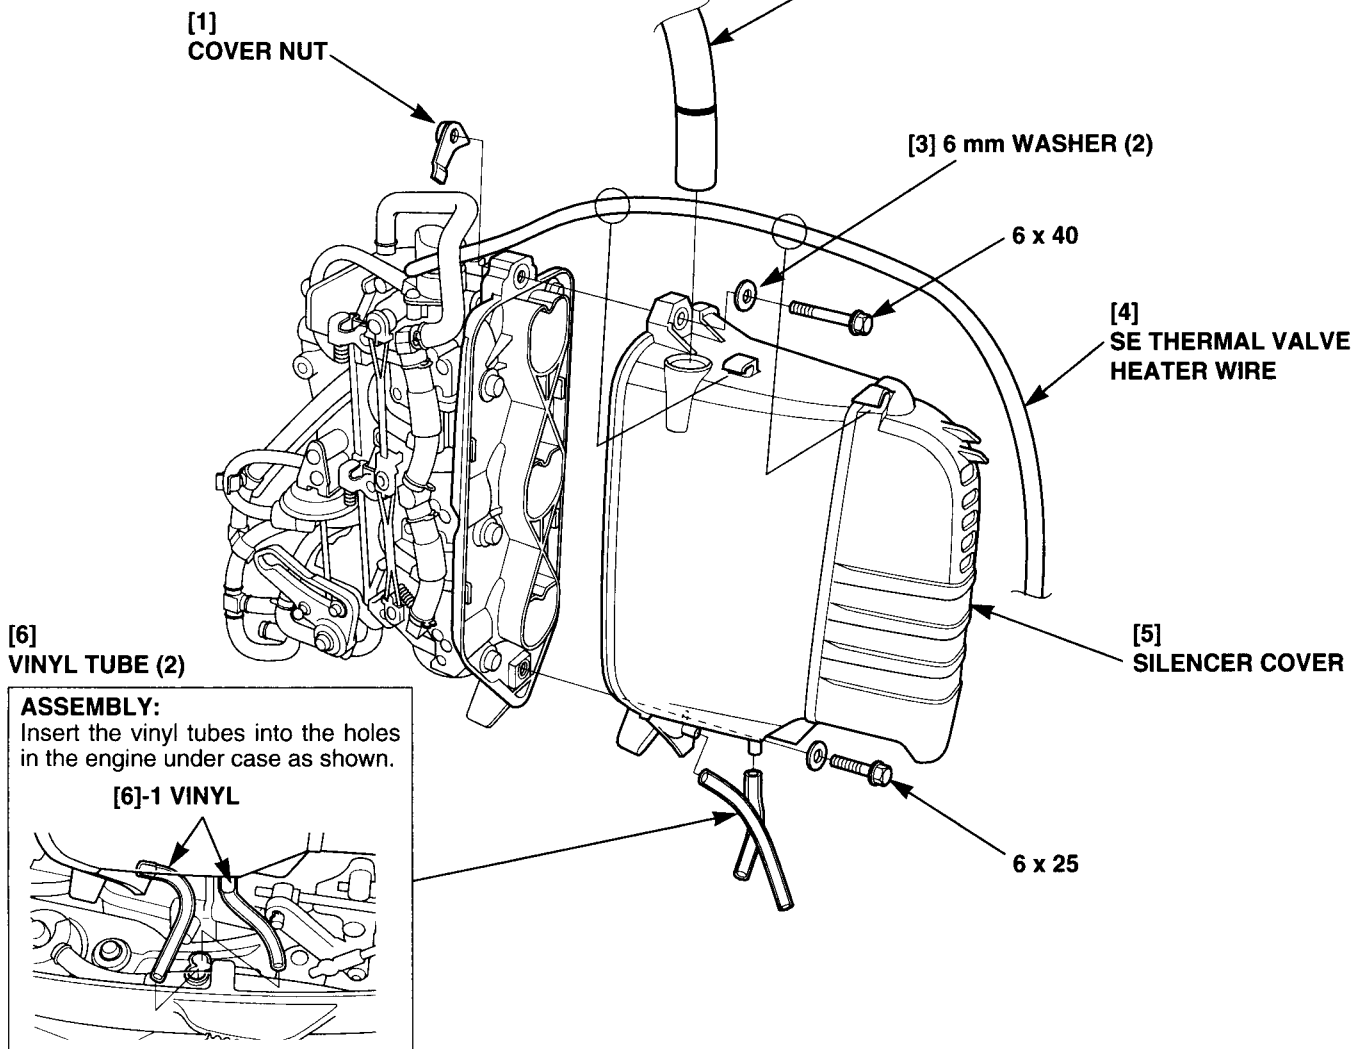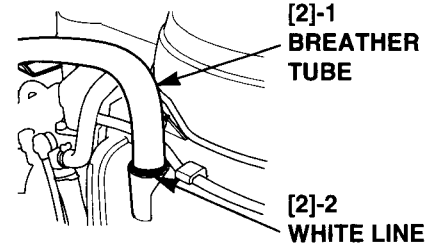

ASSEMBLY:
Insert the vinyl tubes into the holes in the engine under case as shown.

[6]-1 VINYL

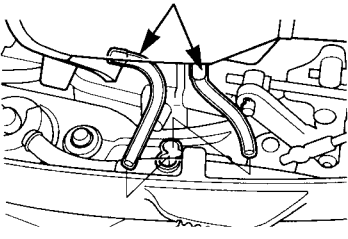

2. CARBURETOR/MANIFOLD REMOVAL

⚠ WARNING


Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.


- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

- 1) Remove the engine cover.
- 2) Remove the flywheel cover (P. 6-1).
- 3) Drain the carburetor by loosening the drain screws.
- 4) Pull off the breather tube from the silencer cover.


[1] BREATHER TUBE

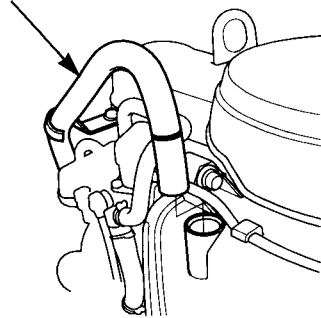


- 5) Remove the 14P connector (remote control box wire harness or tiller handle main wire harness) and 2P connector (SE thermal valve heater wire) from the connector holders, and disconnect the 2P connector.

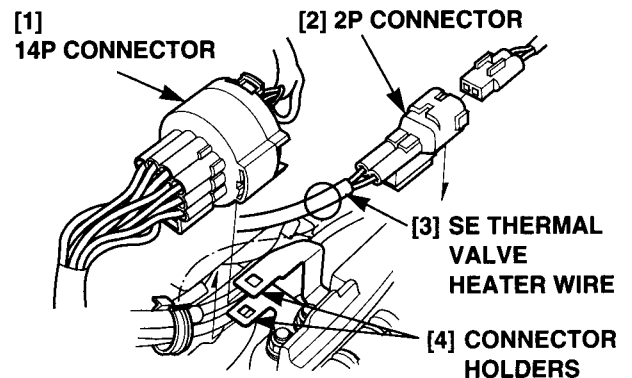


- 6) Disconnect the throttle rod from the throttle cam.

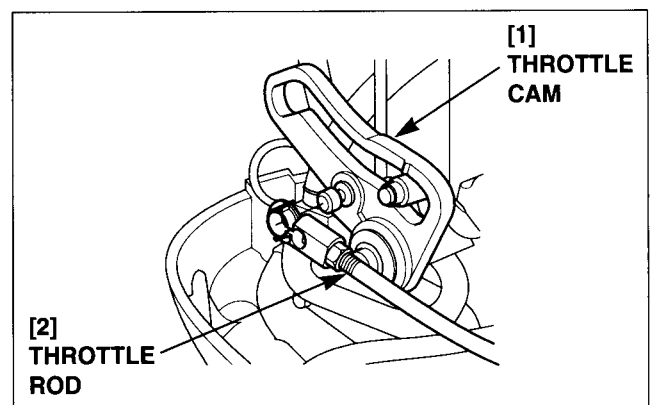


- 7) Pinch the fuel tube with a commercially available tube clip and disconnect the fuel tube (No. 1 carburetor supply line) from the fuel pump.

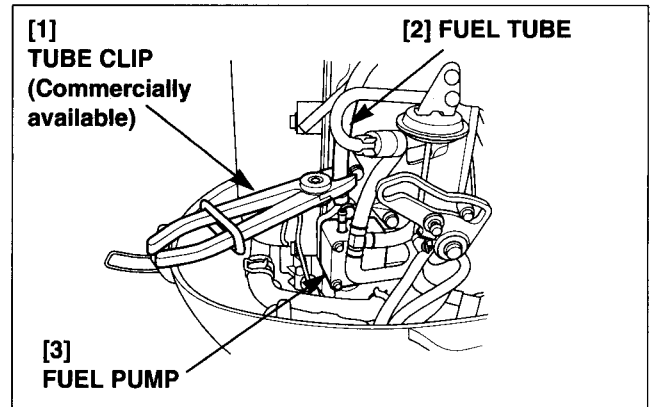


- 8) Pinch the fuel tube with a commercially available tube clip and disconnect the fuel tube E (No. 2 and 3 carburetor supply line) from the fuel pump.

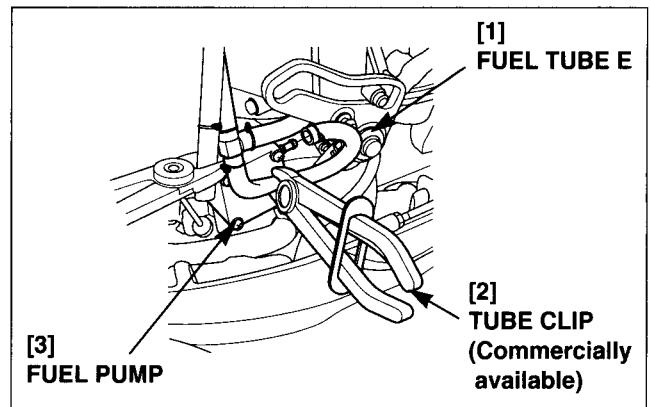


- 9) Pull off the vinyl tubes from the engine under case.

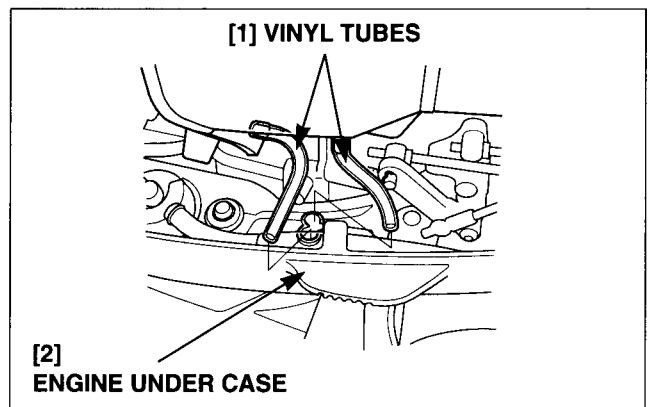

- 10) Pull off the air vent tubes from the engine under case.

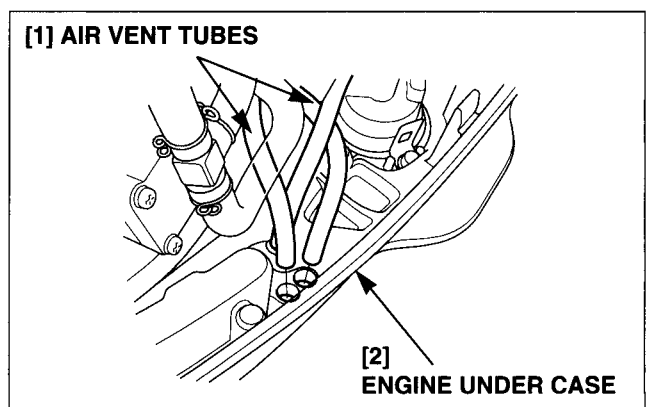

- 11) Remove the two 6 mm cap nuts and five 6 x 32 mm flange bolts, then remove the carburetor and manifold assembly from the crankcase.

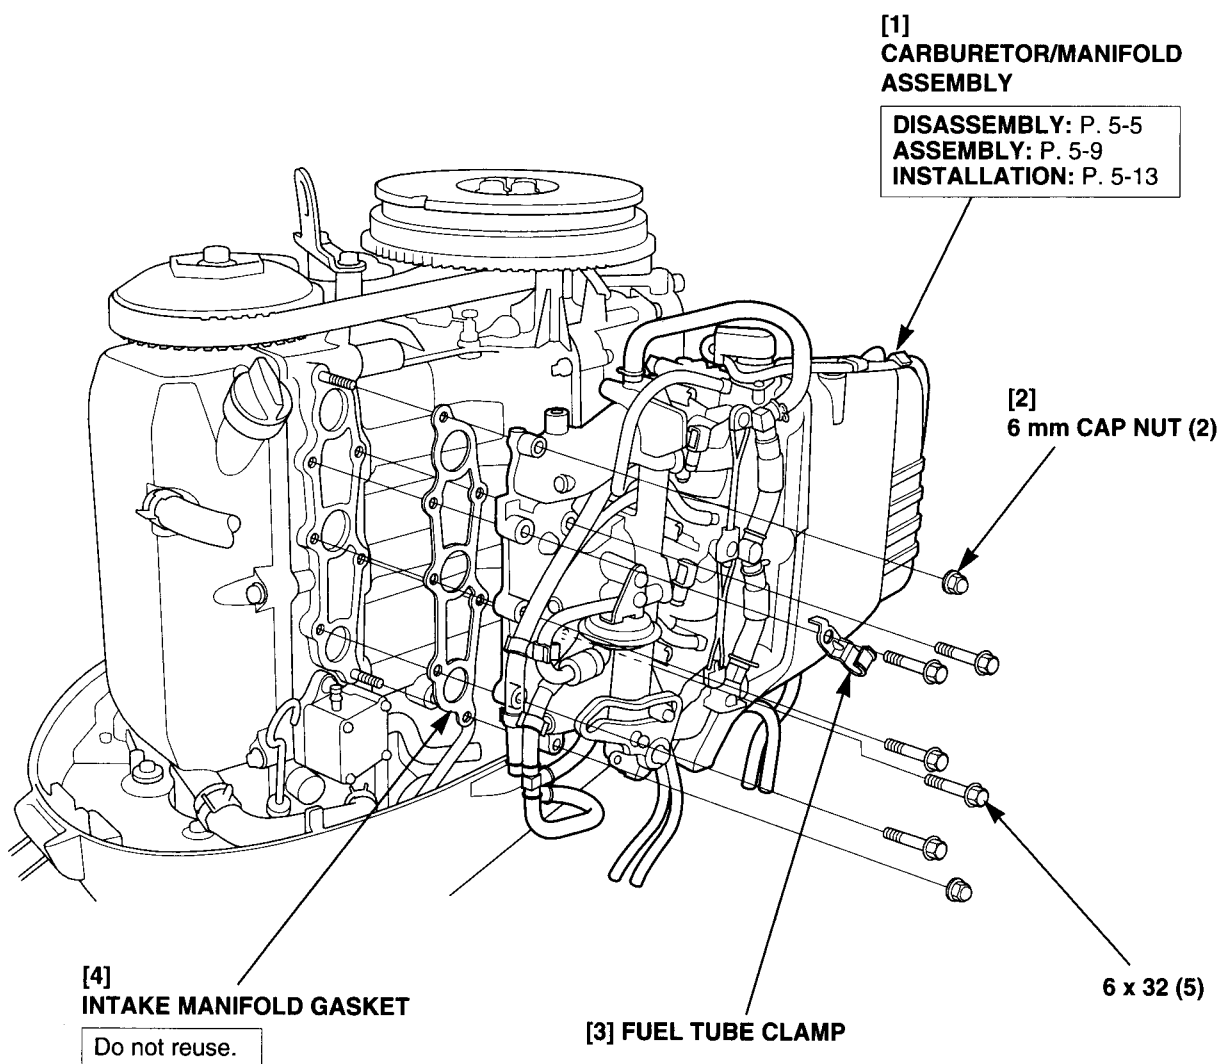

3. CARBURETOR

a. SEPARATION

⚠ WARNING


Gasoline is highly flammable and explosive.
You can be burned or seriously injured when handling fuel.

- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


- Before disassembly, drain the fuel from the carburetor and fuel lines completely.

• TUBES

- 1) Remove the silencer cover (P. 5-1).
- 2) Disconnect the tubes:
 - air vent tubes from the carburetor.
 - vacuum tube from the dashpot diaphragm.
- 3) Remove the SE tubes.

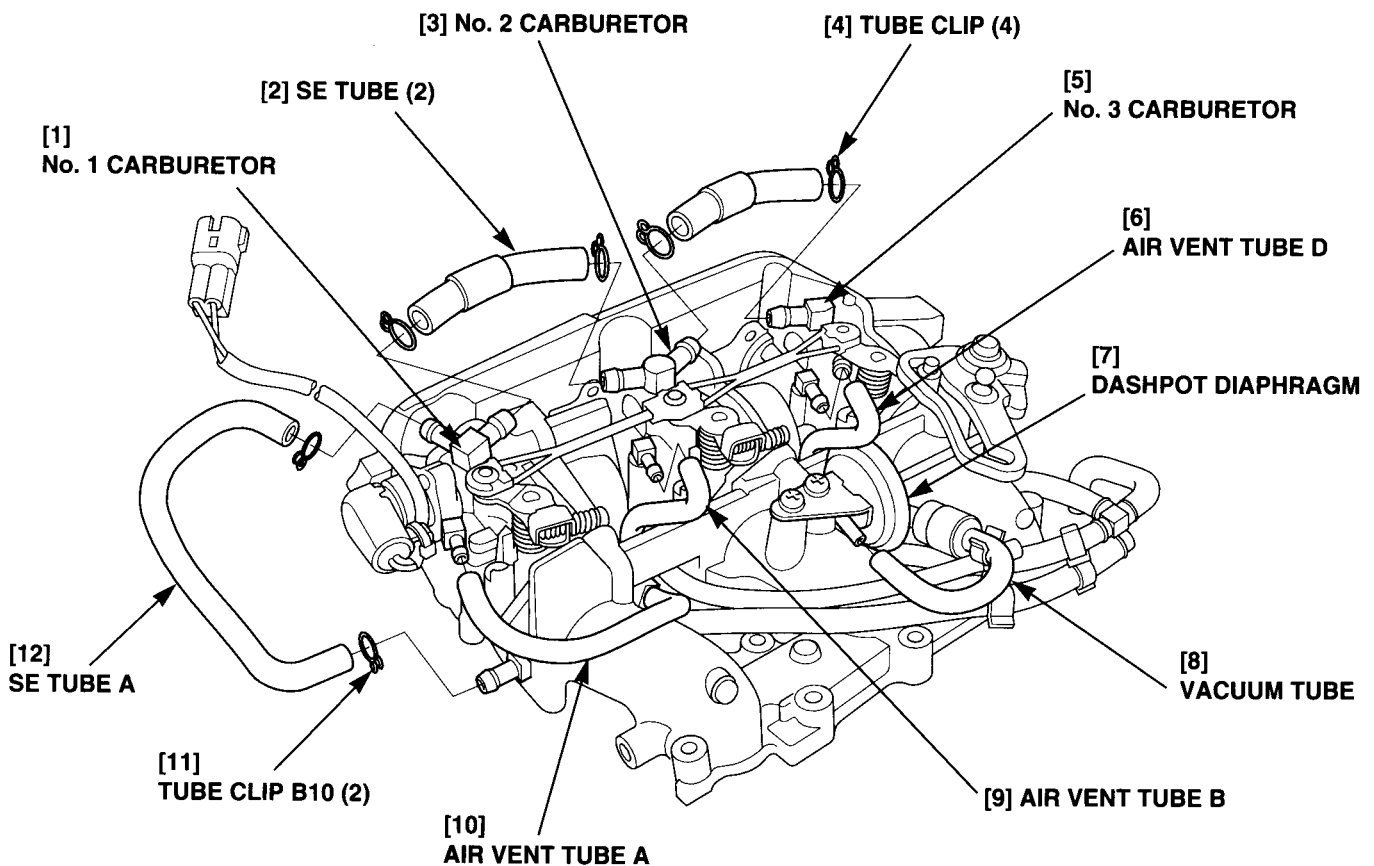


- 4) Remove the following:
- fuel tubes.
 - air vent tubes and tube joints.
 - overflow tubes, tube joint and joint pipe.
 - dashpot tubes and dashpot check valve.
 - tube clips.
 - vinyl tube.
- See pages 5-20 and 5-21 for tube routing and connection.

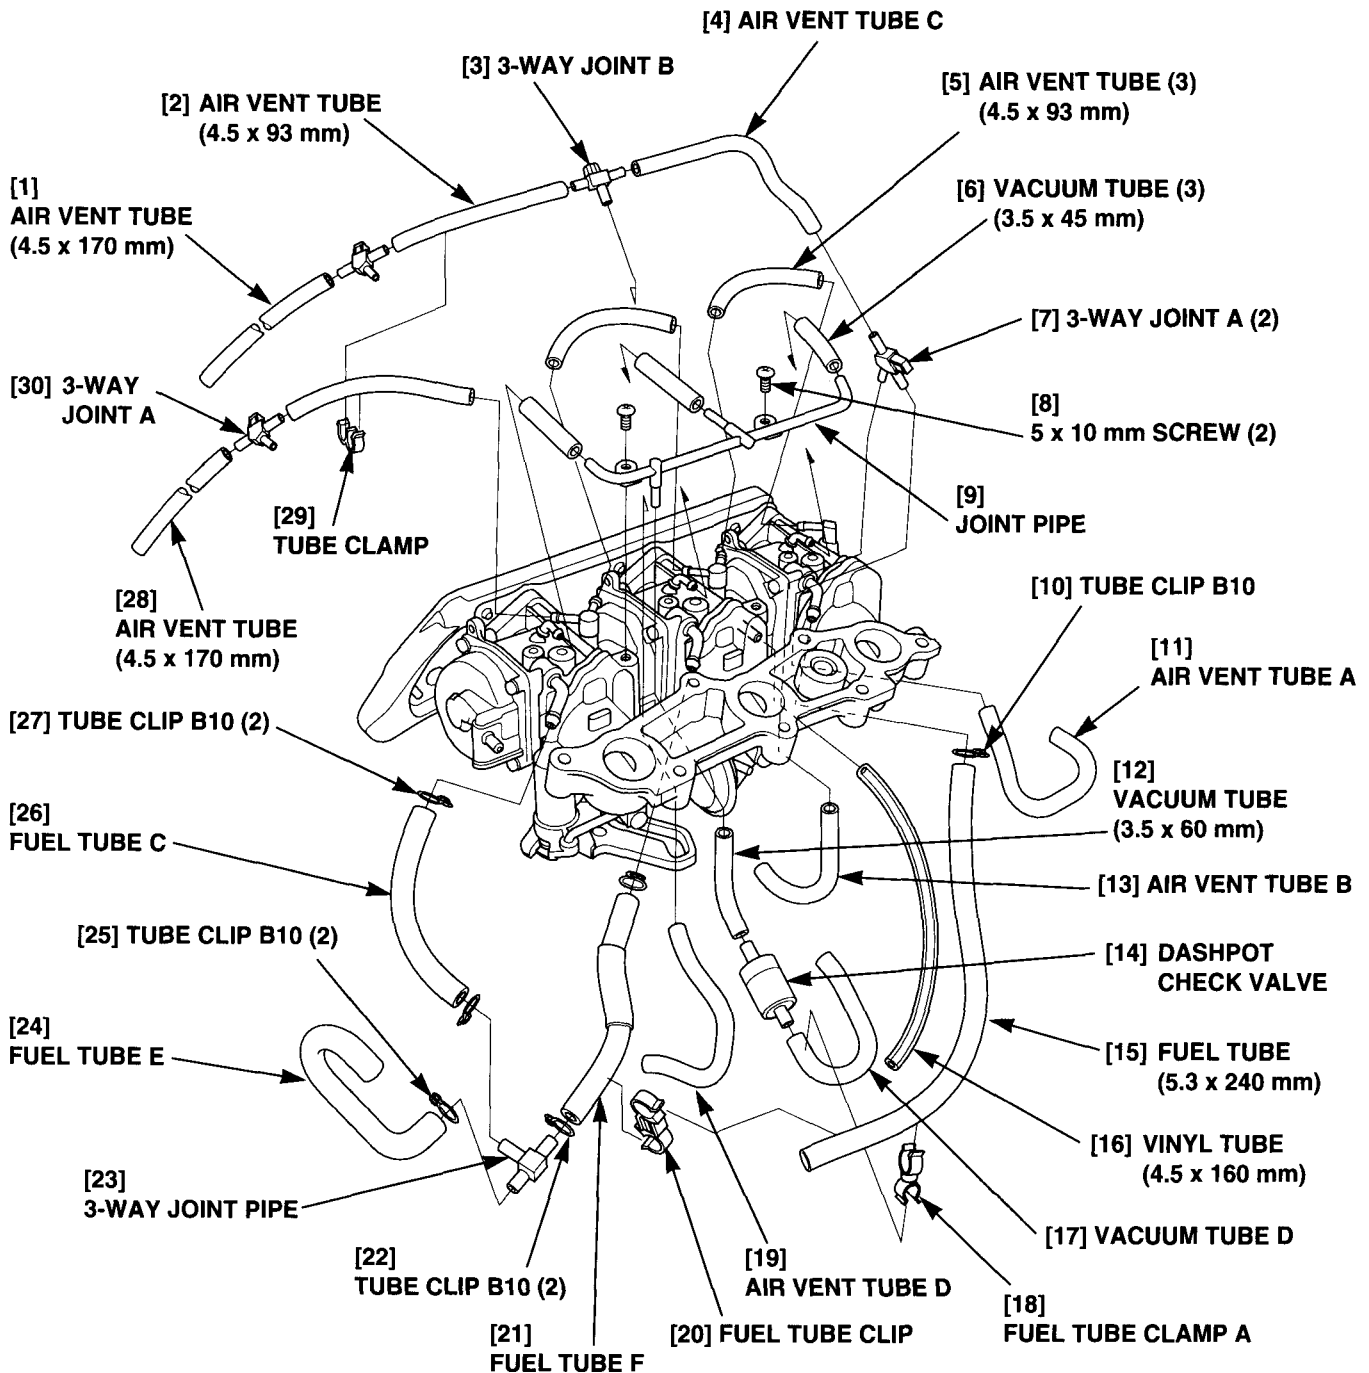


• **THROTTLE CAM/DASHPOT DIAPHRAGM**

• The throttle cam and dashpot diaphragm servicing can be made with the engine installed.

- 1) Disconnect the throttle rod pivot (P. 5-2).
- 2) Remove the 6 x 40 mm flange bolt and 6 mm washer.
- 3) Remove the following:
 - throttle cam.
 - assist spring.
 - assist plate.
 - throttle opener cam.
 - opener cam return spring.
 - 6.7 x 12.5 x 24 mm collar.

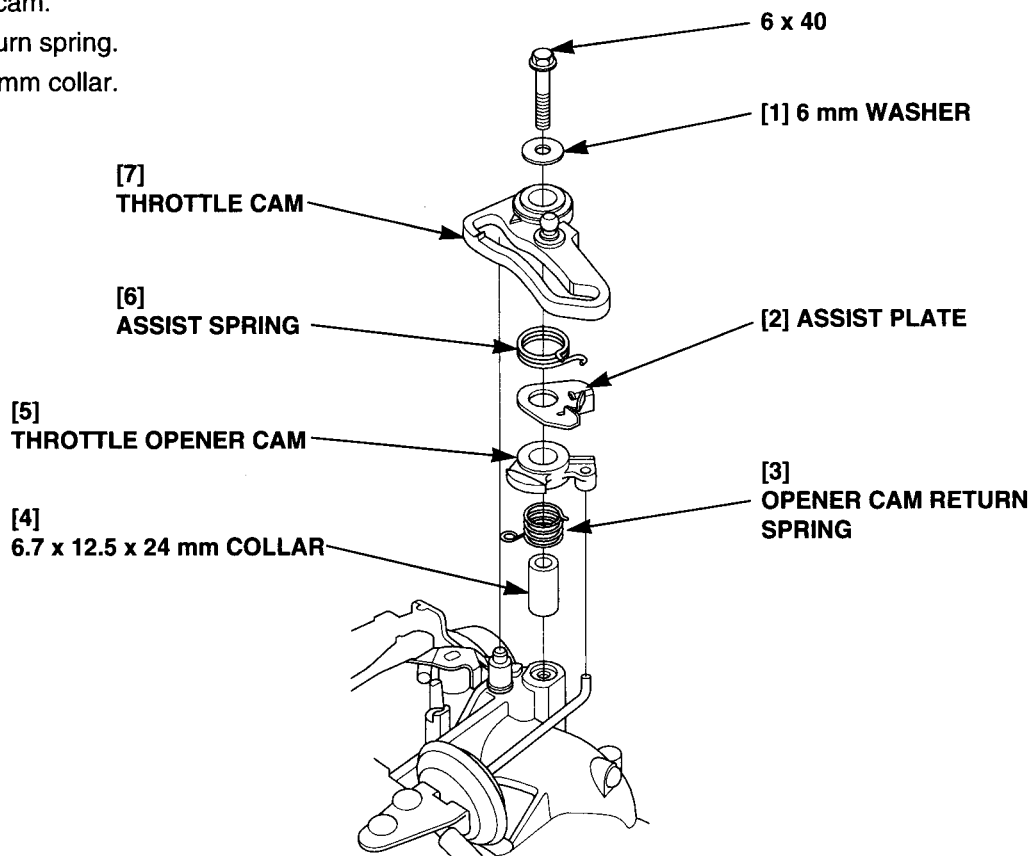


- 4) Remove the 6 x 16 mm torx bolts using a commercially available torx bit (T30H) and remove the dashpot diaphragm.

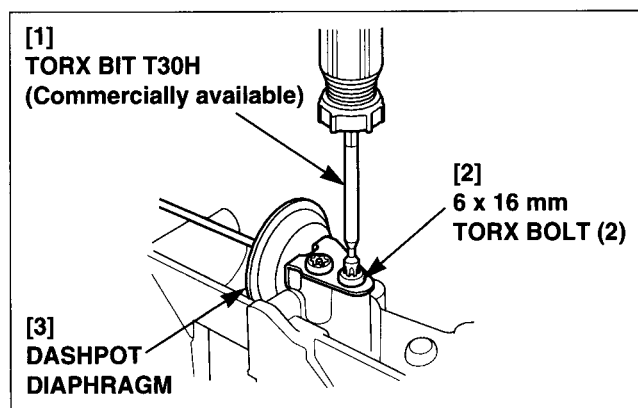

•INTAKE MANIFOLD

- 1) Remove the throttle link rod taking care not to bend it.
- 2) Remove the six 6 x 97 mm flange bolts.
- 3) Separate the intake manifold and carburetor as shown.

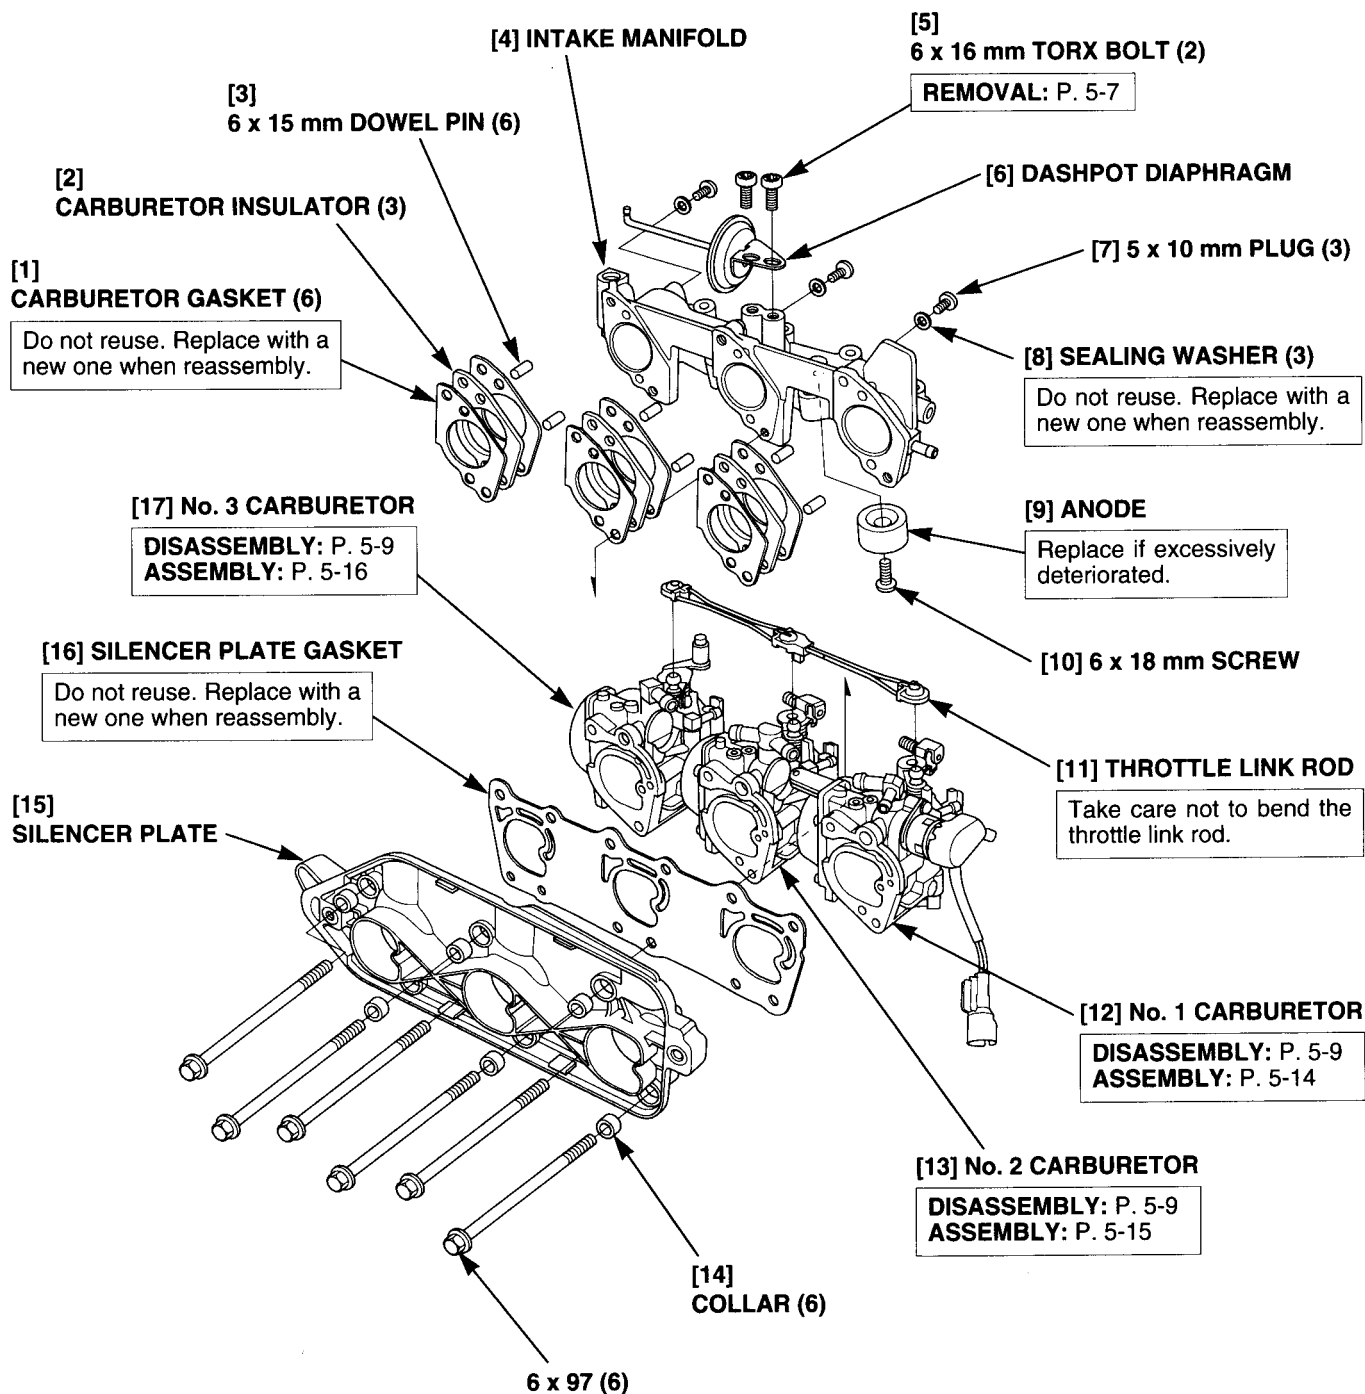

b. DISASSEMBLY


- Before disassembly, completely drain the carburetor by loosening the drain screw. Clean the outside of the carburetor before disassembly.

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


- 1) No. 1 carburetor only:
Remove the screw and set plate, then remove the SE thermal valve and O-ring with care not to damage the needle.

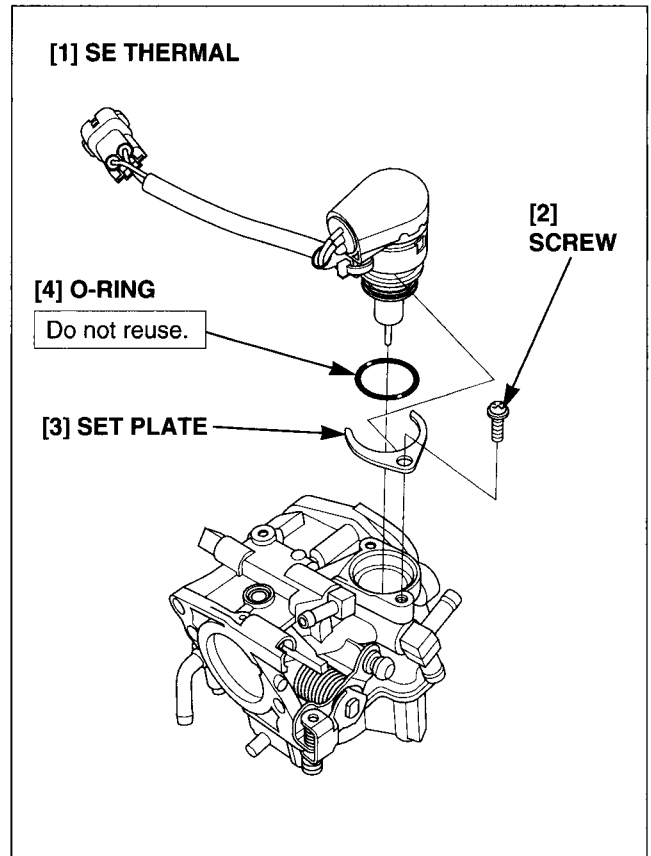


- 2) Remove the four washer screws, and remove the float chamber and bowl gasket.
- 3) Remove the drain screw and O-ring from the float chamber if necessary.

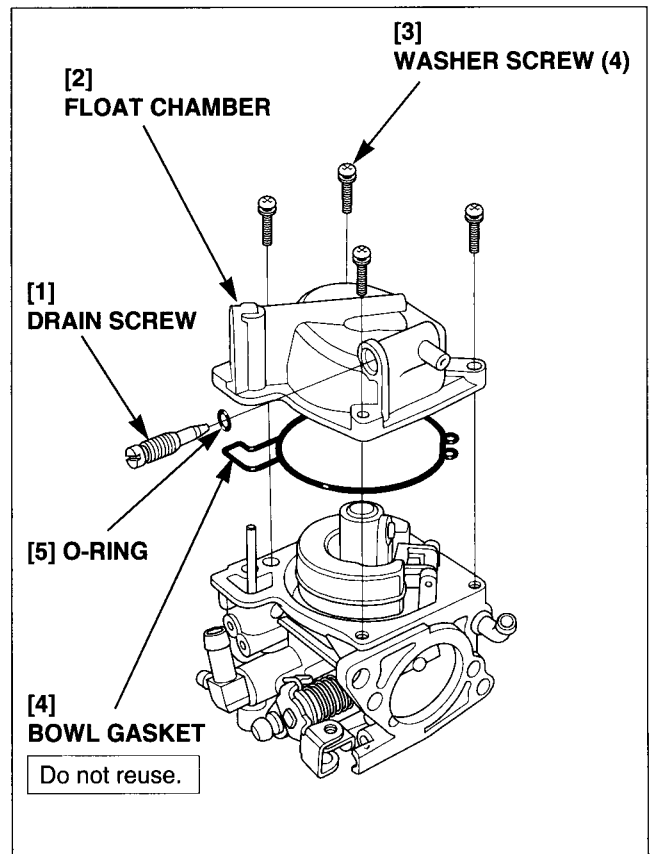

- 4) Remove the float pin by using a commercially available 2.0 mm pin driver.
 - Drive out the float pin by lightly tapping the pin driver from the opposite side of the knurled section of the float pin.
- 5) Remove the float and float valve.

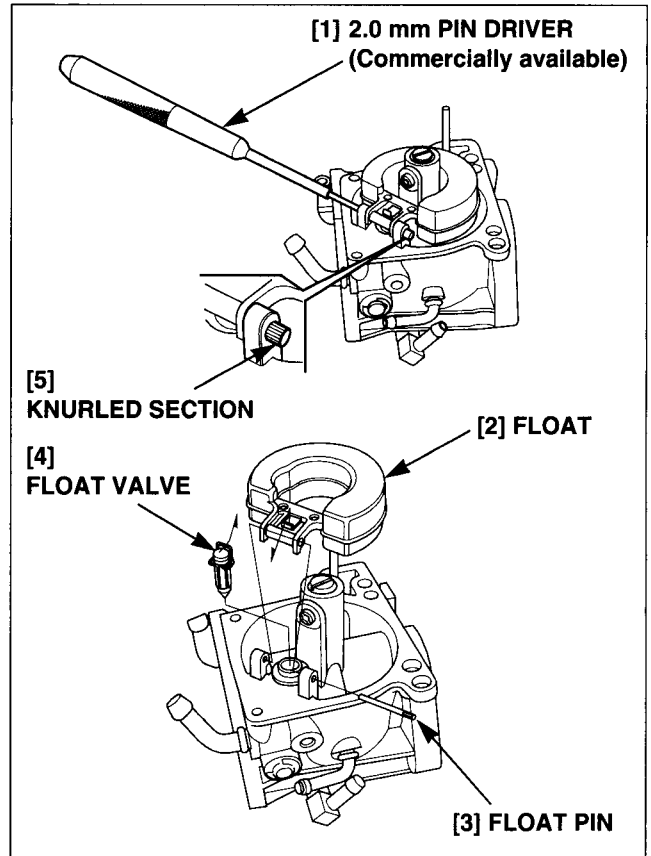


- 6) Remove the main jet taking care not to damage the main jet.
- 7) Remove the plug screw, main nozzle and jet nozzle taking care not to damage them.

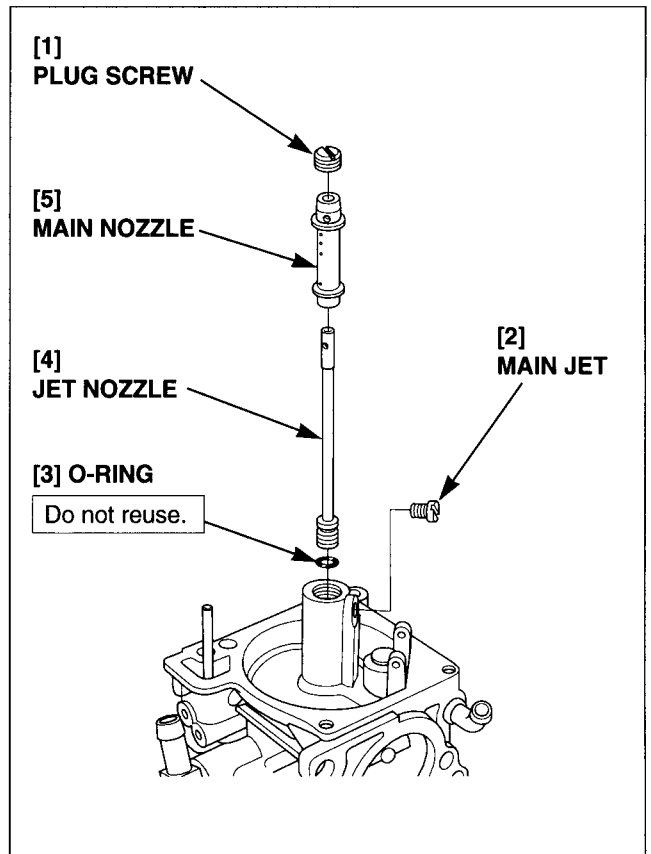

c. CLEANING

CAUTION

- Some commercially available chemical cleaners are caustic. These cleaners may damage plastic parts such as O-rings, float and float valve. Check the container for instructions. If you are in doubt, do not use these products to clean carburetor.
- High air pressure may damage the carburetor. Use low pressure setting when cleaning the passages and parts.

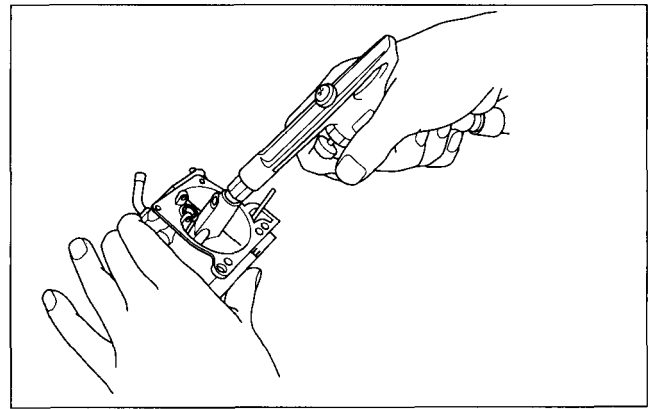

- 1) Clean the carburetor body, removed parts and float chamber with cleaning solvent.
- 2) Use low air pressure and blow off the removed jets, nozzles and passages of the carburetor body and float chamber.


d. INSPECTION

• Float Level Height

Place the carburetor as shown and measure the distance between the float top and carburetor body when the float just contacts the seat without compressing the valve spring.


Standard float height	BF40A: 14 mm (0.55in)
	BF50A: 13 mm (0.51 in)

If the height is out of specification, adjust the float height by bending the float mounting tab carefully.

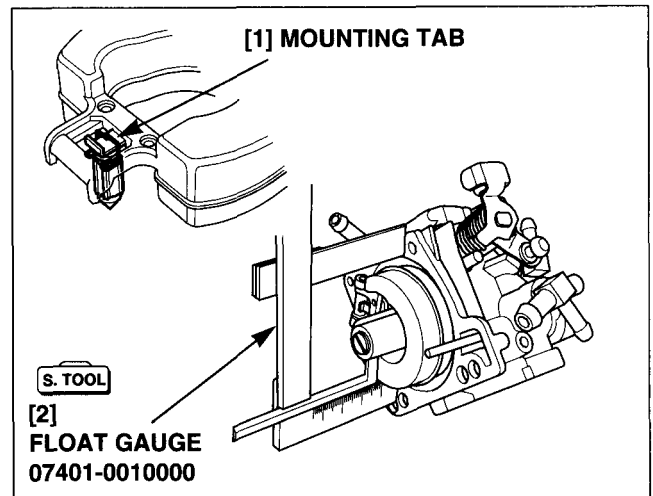


• Float/Float Valve/Float Valve Seat

- 1) Check the float for crack or damage. Replace if necessary.
- 2) Check the float valve for wear or damage. Replace if necessary.

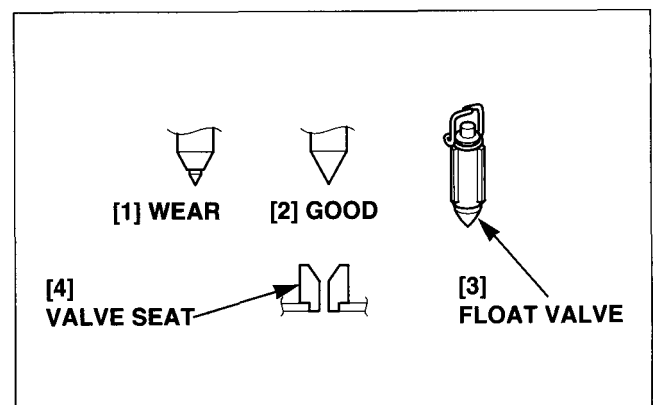


• **Nozzles/Jets**

Check the main jet, main nozzle and jet nozzle for debris or damage. Replace if necessary.

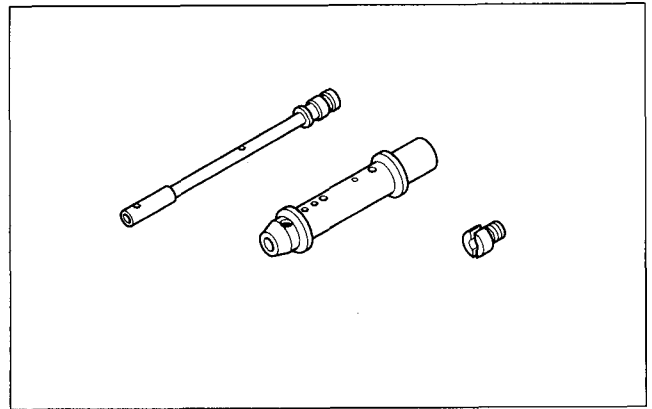


• **SE (Starter Enrichment) THERMAL VALVE**

1) Check the valve piston and needle for wear or scratches. Replace as assembly, if necessary.

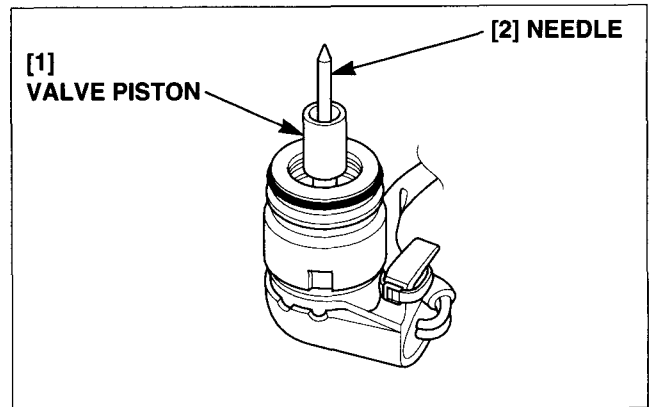


2) Measure the resistance between the terminals
 • This test can be done with the carburetor installed on the motor.


Resistance	15.8 - 24.2 Ω
------------	---------------

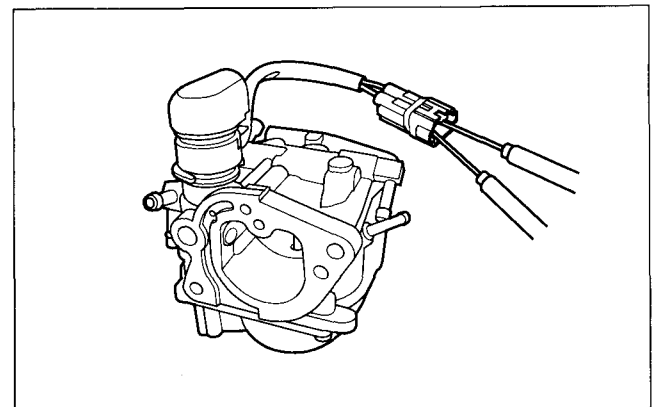

3) Install a vinyl tube as shown.
 4) At room temperature, gently blow into the tube and verify air passes through the passage.

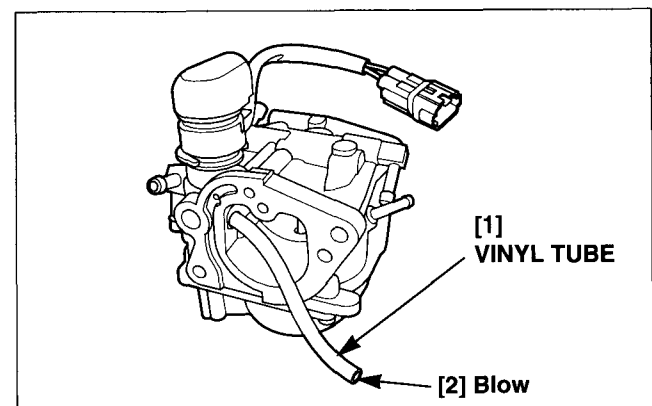


- 5) Connect the 12V battery positive terminal to the Brown/white terminal and negative to the Black/green terminal for about five minutes. A gentle puff of air should not pass through.
- Note that inspection with the battery connected must be made quickly.
 - The SE thermal valve heater becomes very hot when the battery is connected. Take care not to touch it.

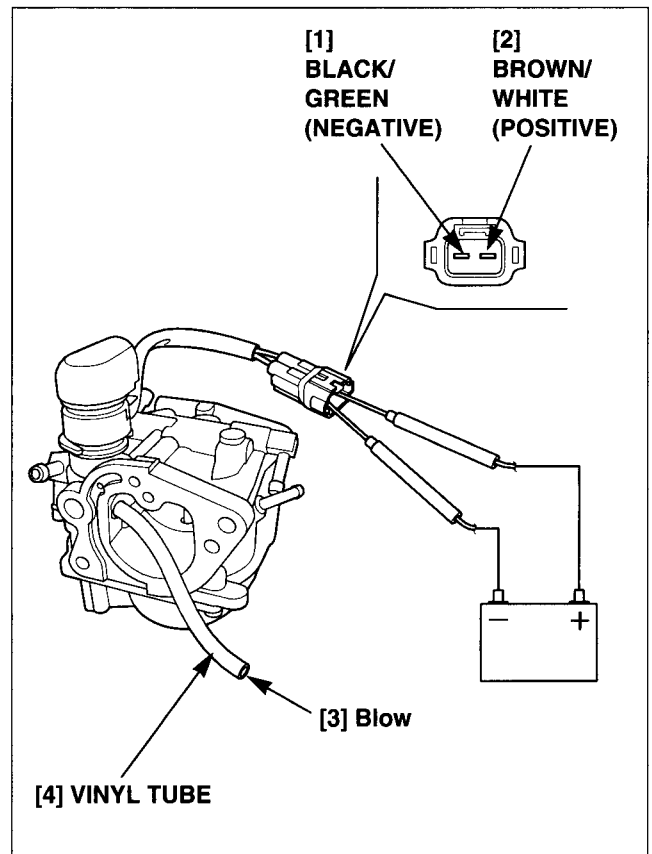


e. ASSEMBLY

Assembly is the reverse order of disassembly.


• No. 1 CARBURETOR

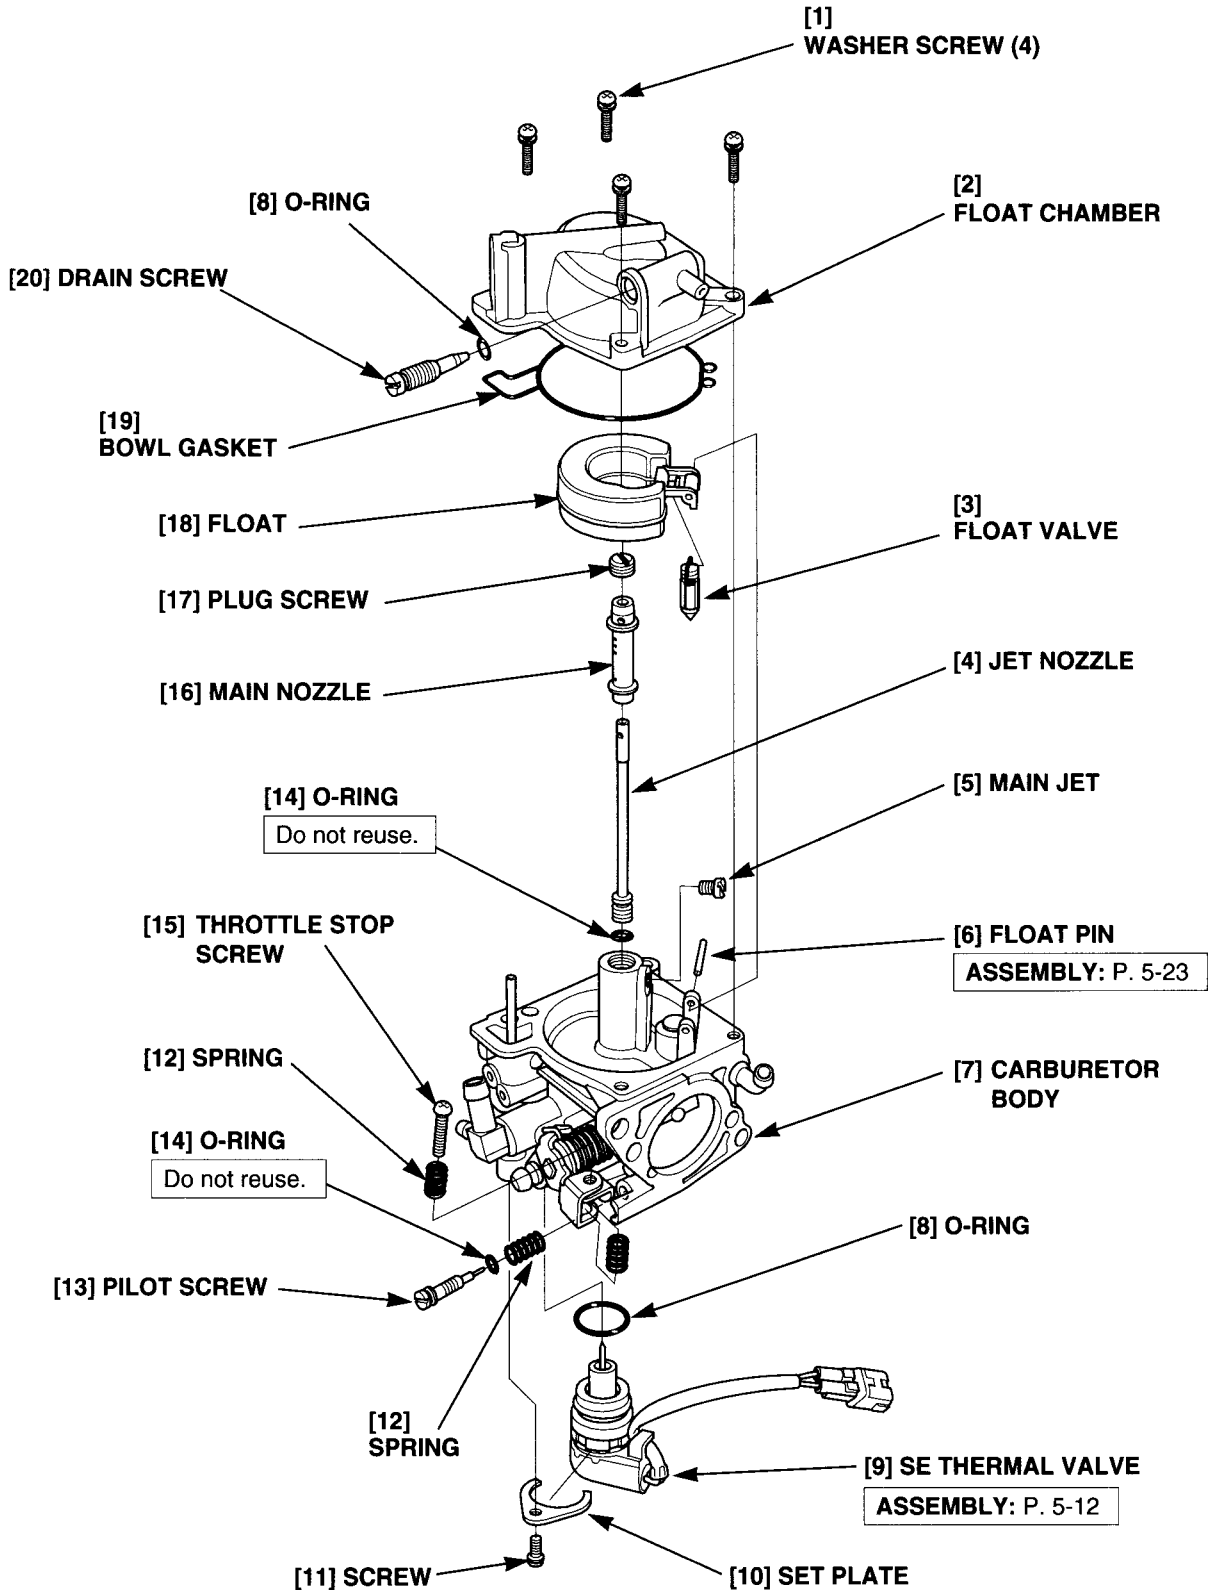

• No. 2 CARBURETOR

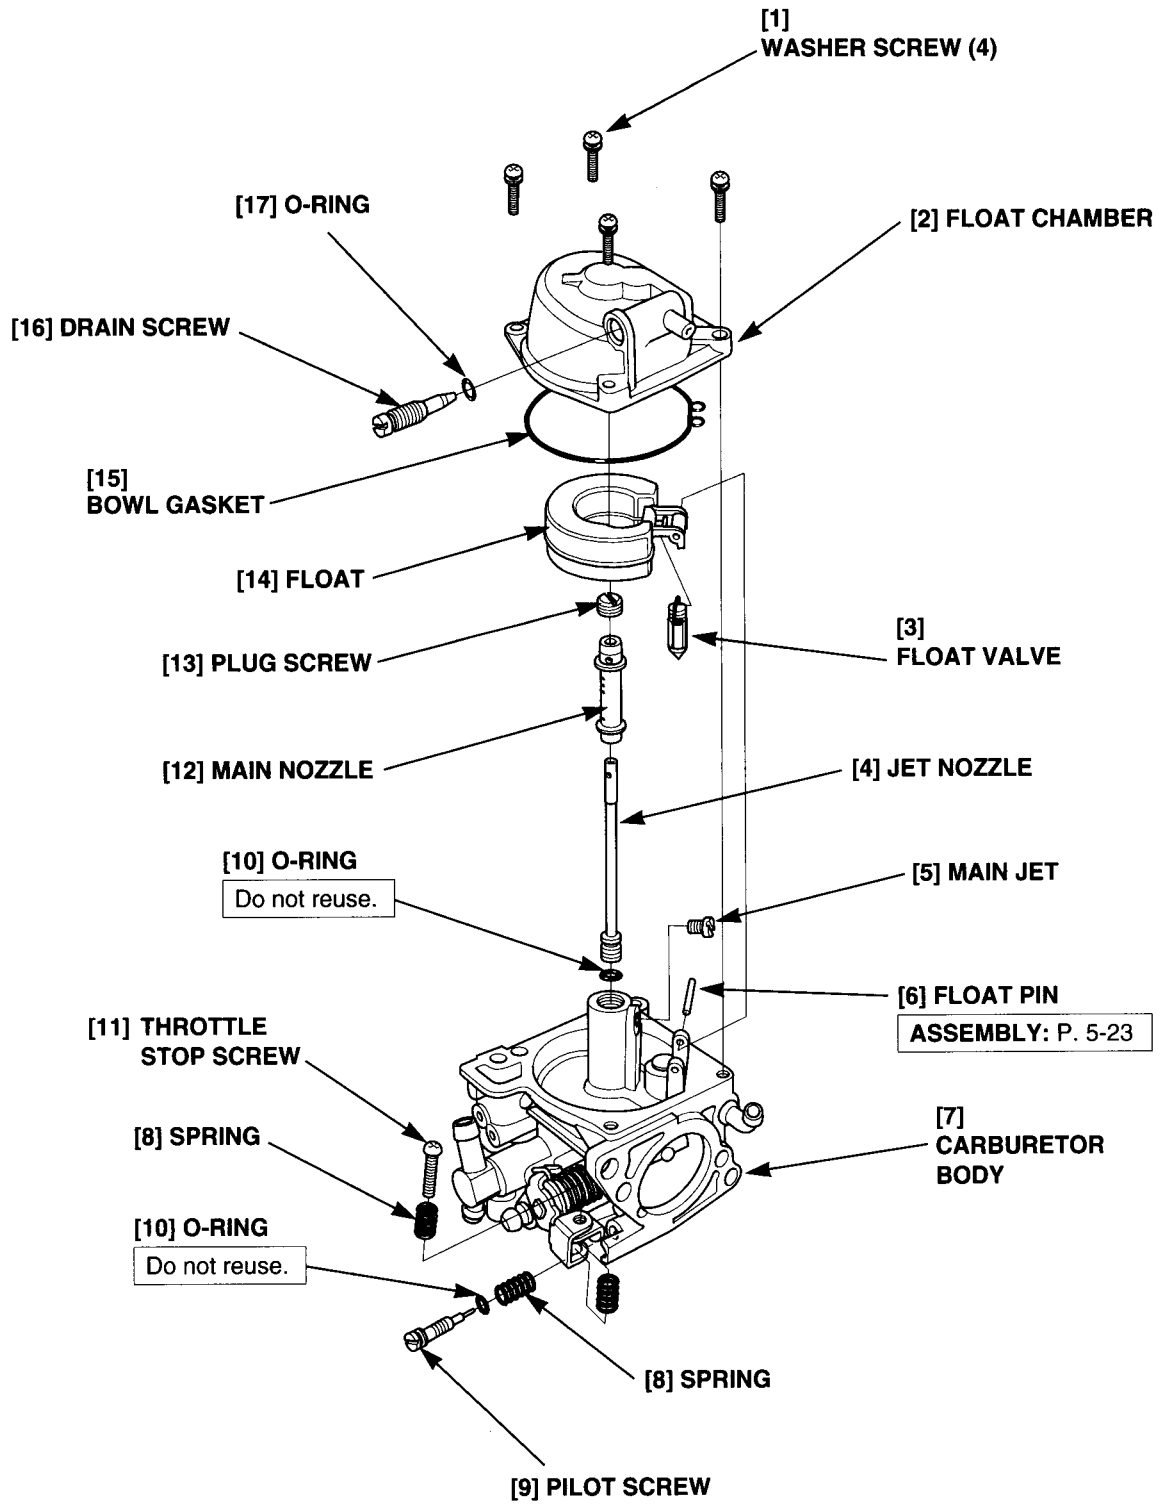


• No. 3 CARBURETOR

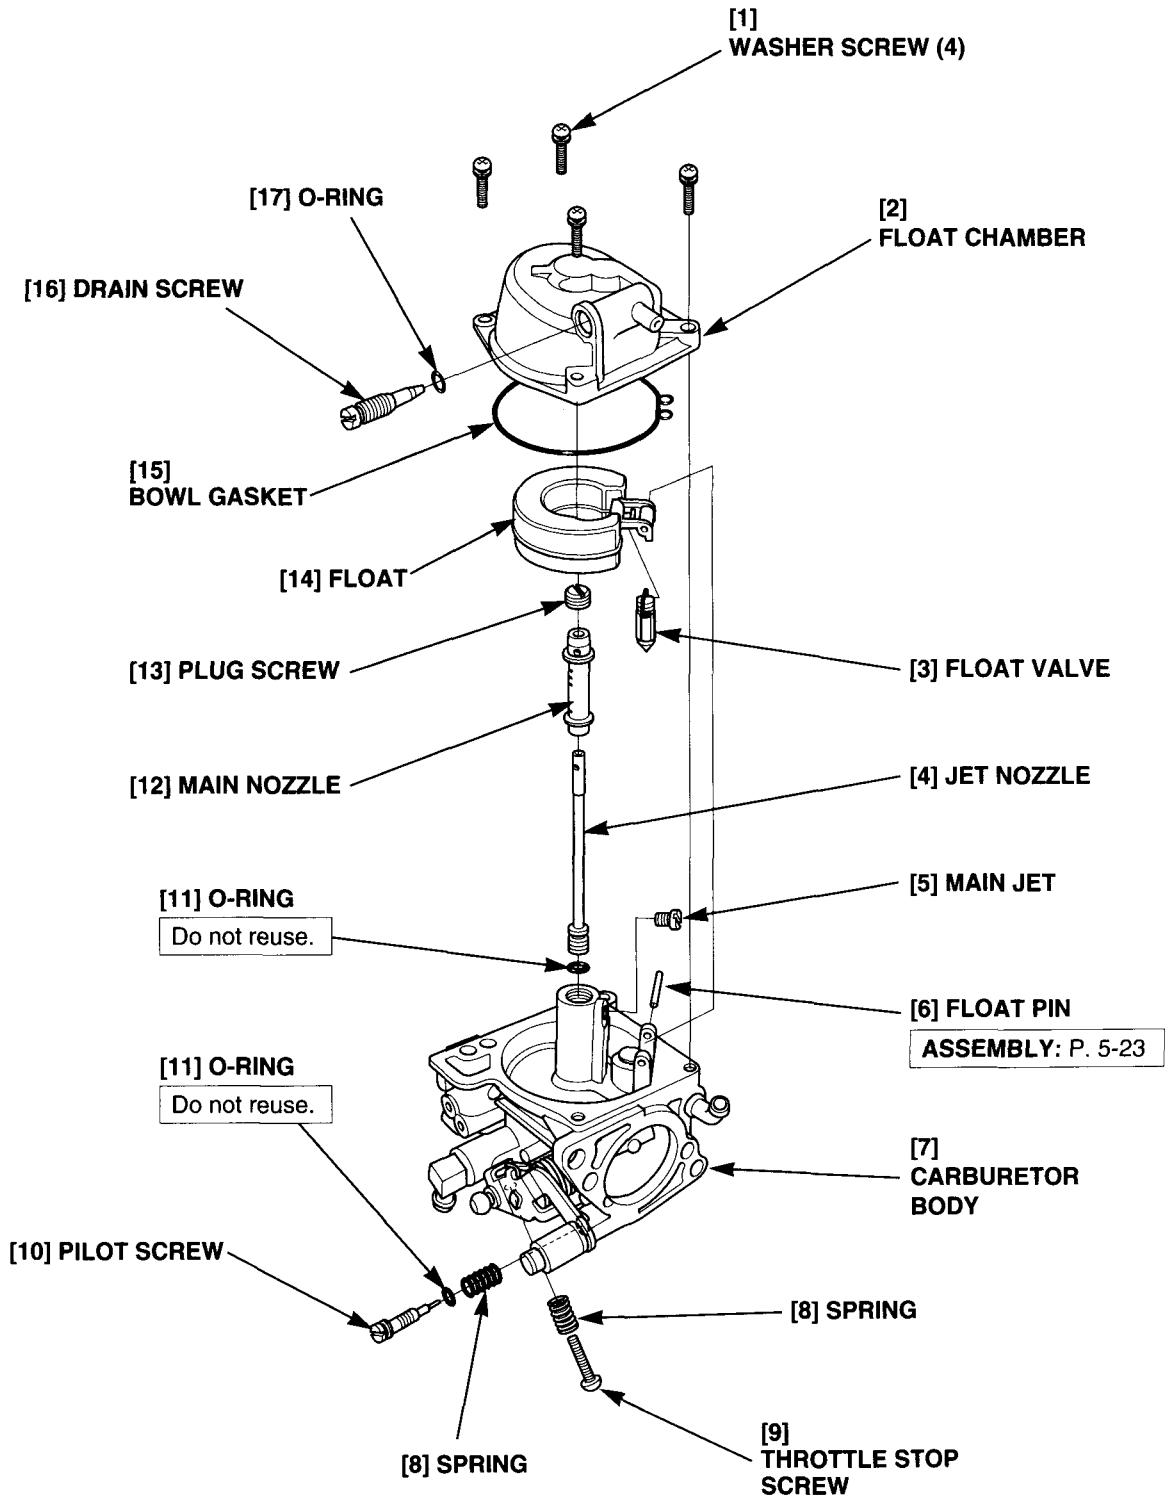


• FLOAT PIN INSTALLATION

- 1) Set the float onto the float tab, then set them on the carburetor body.
- 2) Install the float pin using the 2.0 mm commercially available pin driver.
 - Install the float pin by lightly tapping the pin at the knurled section side of the float pin.

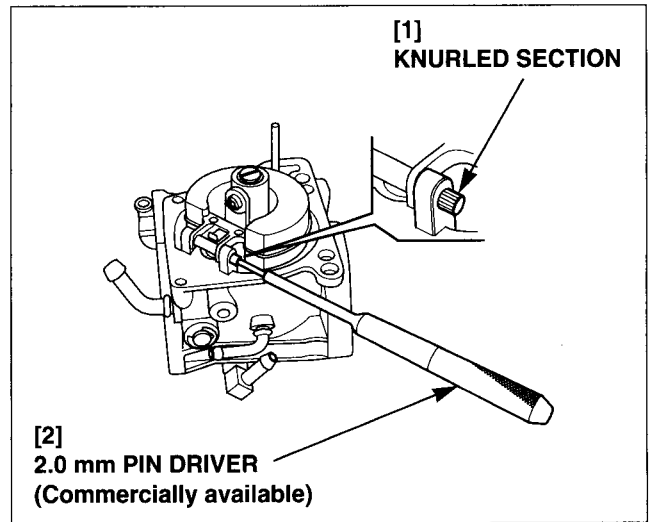

• SE THERMAL VALVE INSTALLATION

- 1) Install a new O-ring to the SE thermal valve.
- 2) Install the SE thermal valve with the set plate and loosely install the screw.
- 3) Set the SE thermal valve as shown noting the direction and tighten the screw securely.

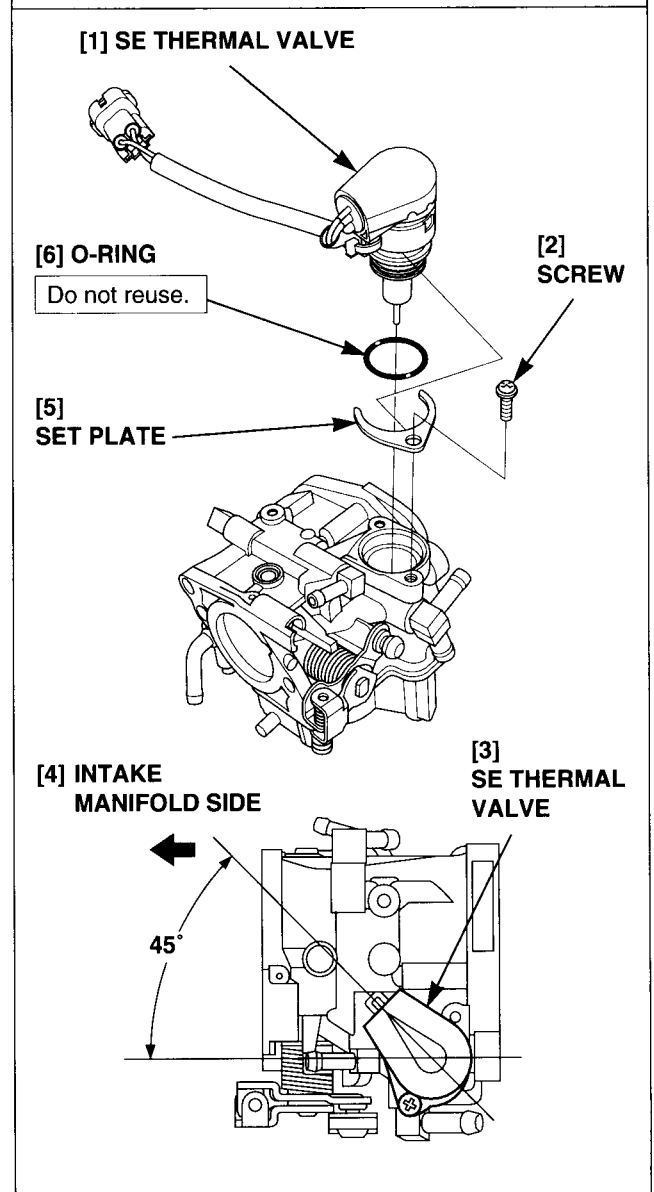


• CARBURETOR/INTAKE MANIFOLD

Assembly is the reverse order of disassembly.

[1] CARBURETOR INSULATOR (3)

Note the installation direction.

[1]-1
CARBURETOR
INSULATOR

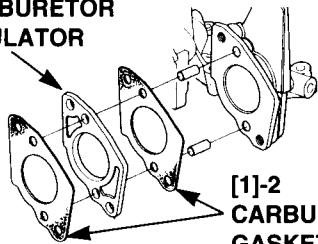

[1]-2
CARBURETOR
GASKET

[2]
CARBURETOR GASKET (6)

Do not reuse.

[3] 6 x 15 mm DOWEL PIN (6)

[4] INTAKE MANIFOLD

 
[5] ANODE

Replace if excessively
deteriorated.

[13] THROTTLE LINK ROD

Install the throttle link rod with the "UP"
mark facing toward the No. 1 carburetor.
Take care not to bend the throttle
link rod.

[13]-1
"UP" MARK



[13]-2
No. 1
CARBURETOR
SIDE

[12] No. 3 CARBURETOR

GREASE

[6]
6 x 18 mm SCREW

[11]
SILENCER PLATE GASKET

Do not reuse.

[7] No. 1 CARBURETOR

[8] No. 2 CARBURETOR

[9] SILENCER PLATE



[10] COLLAR (6)

6 x 97 (6)

10 N•m (1.0 kgf•m, 7 lbf•ft)


• **THROTTLE CAM/DASHPOT DIAPHRAGM**

- 1) Place the dashpot diaphragm on the intake manifold, and loosely install the 6 x 16 mm torx bolts.
- 2) Apply grease to the sliding surface of the 6.7 x 12.5 x 24 mm collar and install it.
- 3) Install the opener cam return spring by aligning the hook with the boss of the intake manifold.
- 4) Install the throttle opener cam by aligning the hole with the dashpot diaphragm rod end and the groove with the opener cam return spring end.
- 5) Align the point "A" of the assist spring with the groove in the throttle cam.
- 6) Set the projection of the assist plate in the hook of the assist spring and align the flat surface of the throttle cam with the tab of the assist plate.
- 7) Install the throttle cam, assist spring and assist plate on to the collar as an assembly.
- 8) Install the 6 mm washer and tighten the 6 x 40 mm flange bolt to the specified torque.
- 9) After assembly, adjust the dashpot diaphragm (P. 3-4).

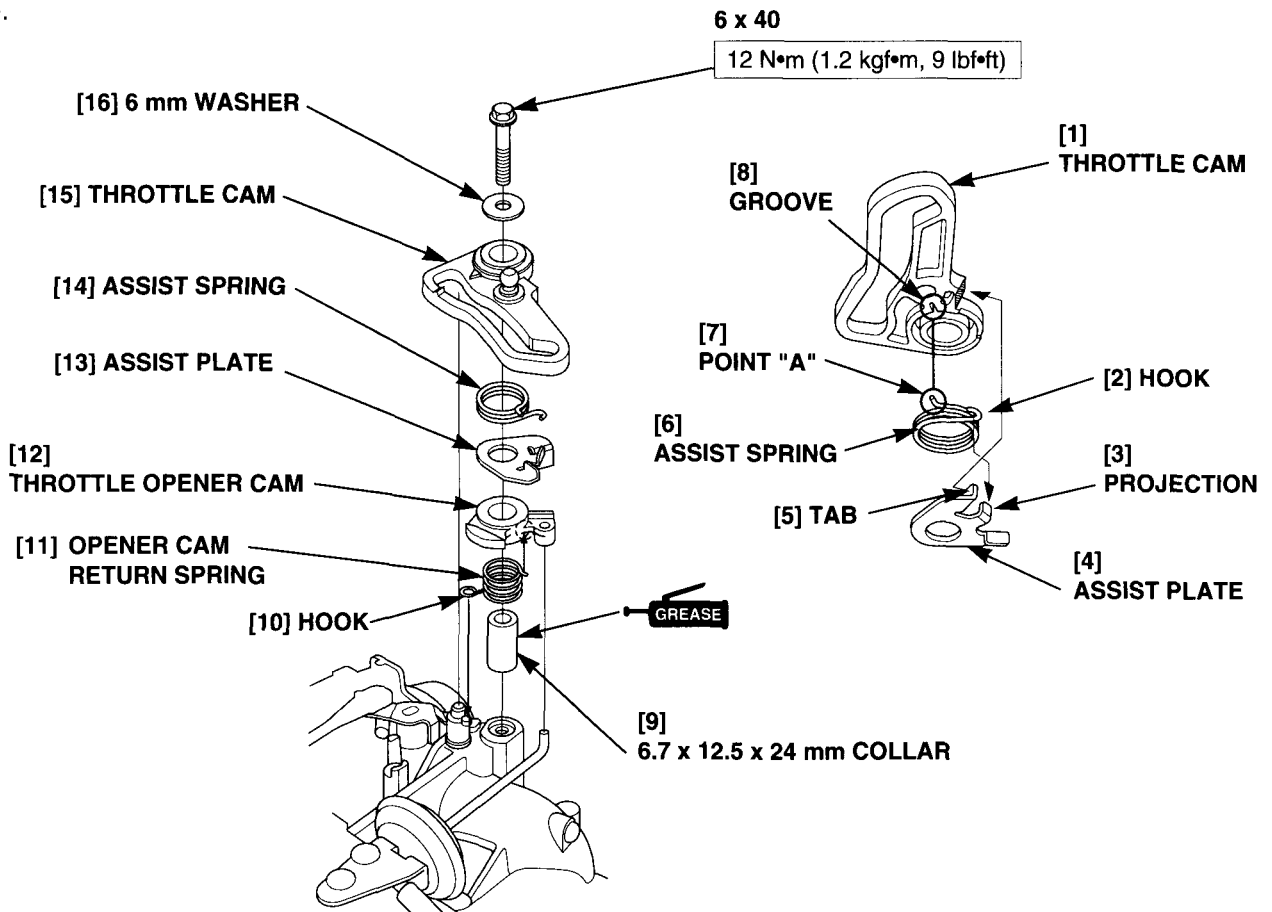
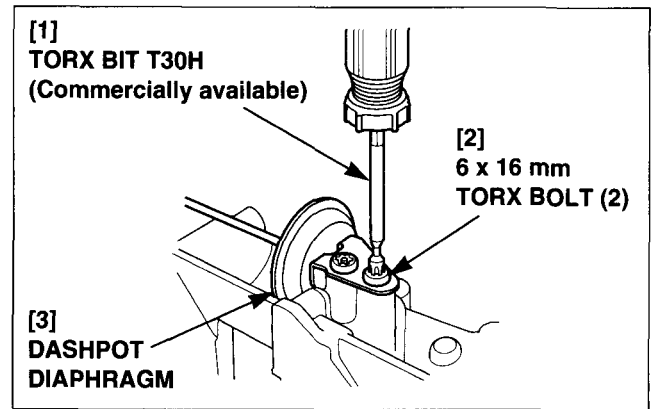


• TUBES

- 1) Install the following:
 - fuel tubes.
 - air vent tubes, joint pipe and tube joints.
 - vacuum tube.
 - tube clips.
 - vinyl tube.

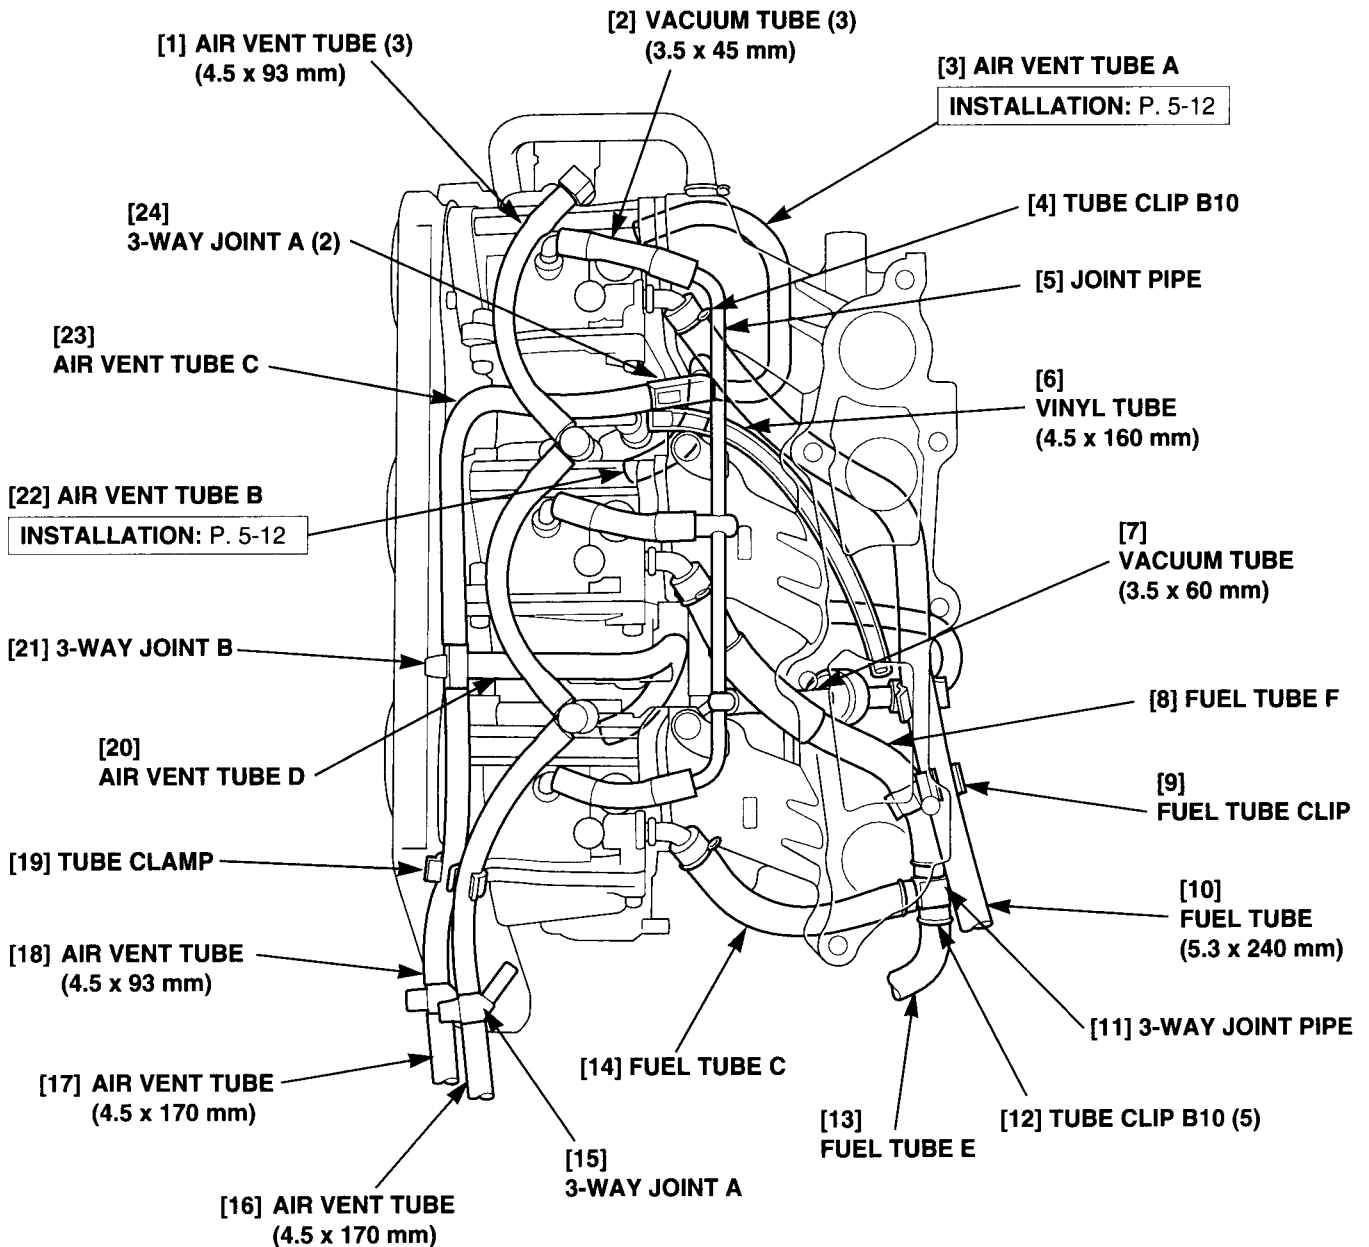


- 2) Install the following:
- vacuum tube D and dashpot check valve.
 - fuel tube clamp A.
 - air vent tubes.
 - SE tube B and tube clips.
 - SE tube A and tube clip B10.

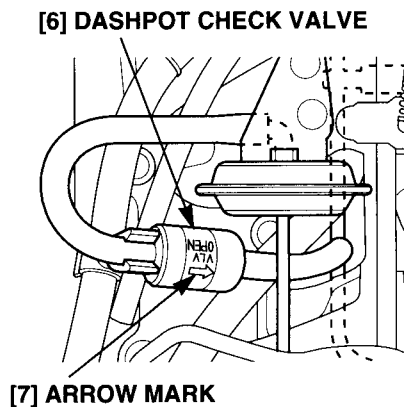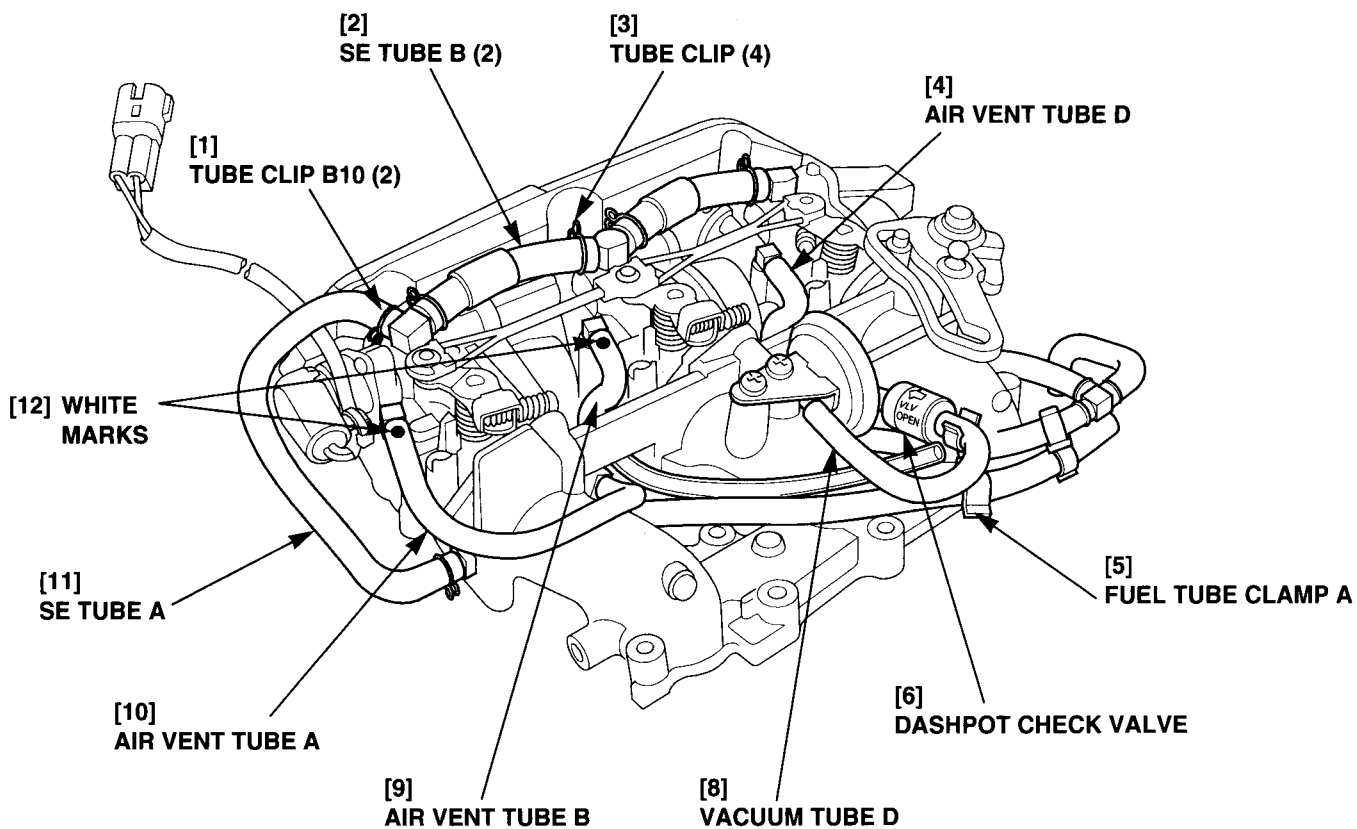


4. CARBURETOR/INTAKE MANIFOLD INSTALLATION

- 1) Install a new intake manifold gasket onto the cylinder head.
- 2) Install the carburetor and manifold assembly and loosely install the 6 mm cap nuts, fuel tube clamp and 6 x 32 mm flange bolts.

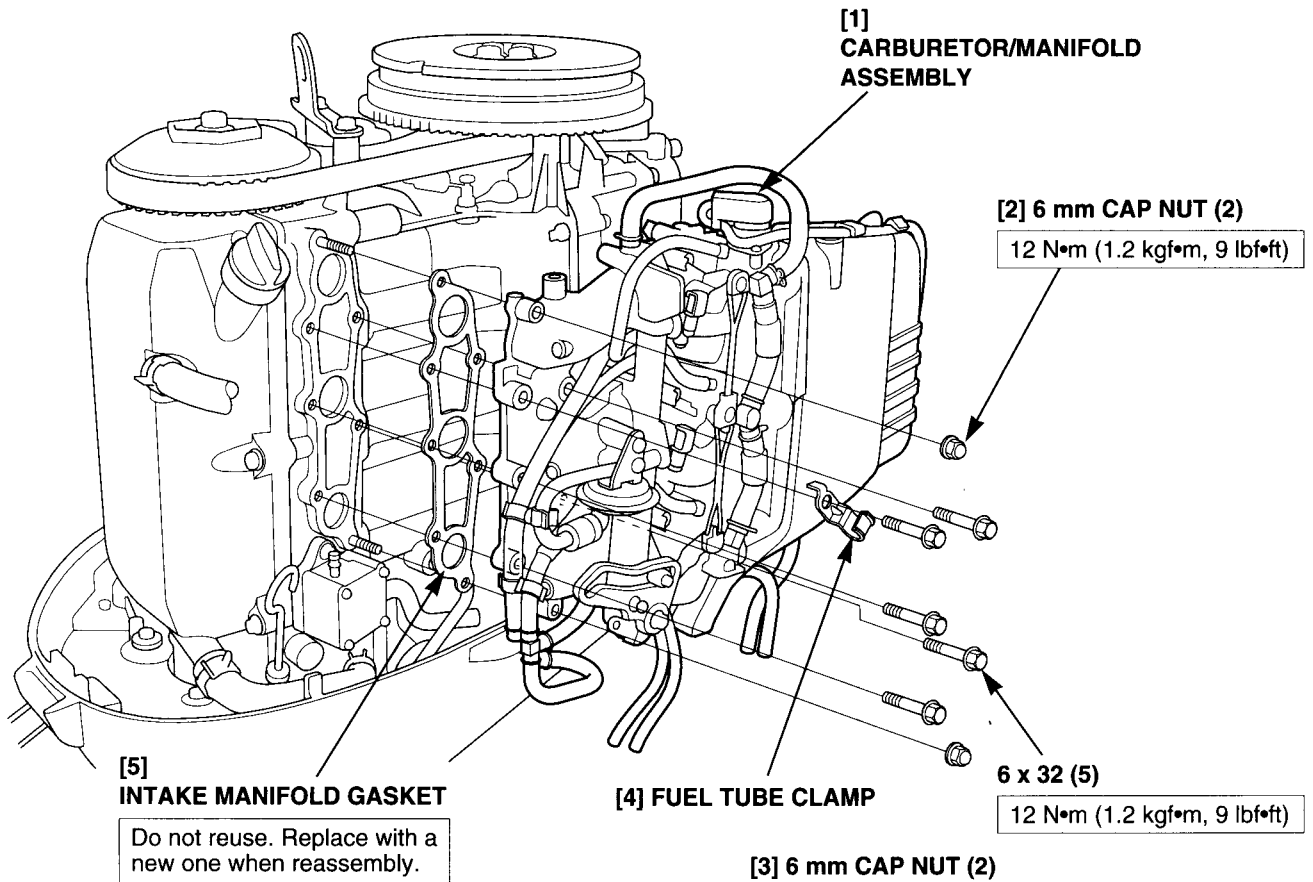


- 3) Tighten the 6 x 32 mm flange bolts and 6 mm cap nuts to the specified torque in the numbered sequence shown in 2 - 3 steps.


TORQUE: 26 N•m (2.7 kgf•m, 20 lbf•ft)

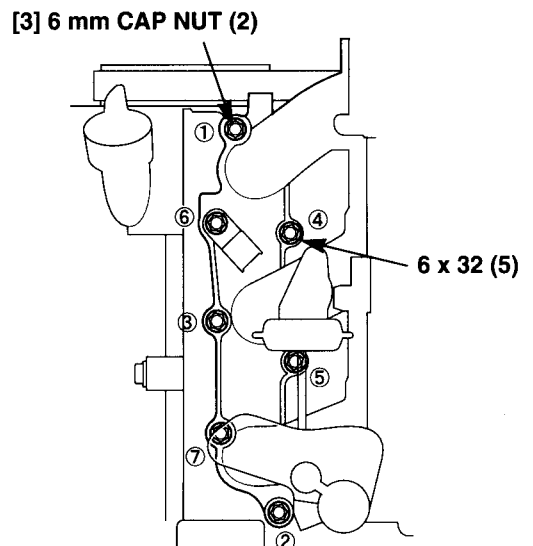


- 4) Insert the air vent tubes into the holes of the engine under case as shown.

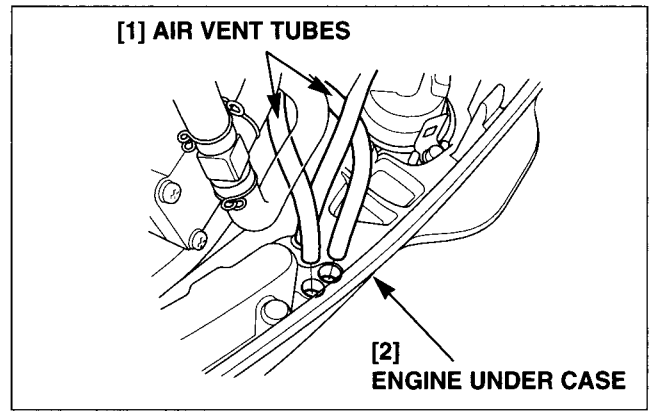


- 5) Connect the fuel tubes to the fuel pump and secure them with the tube clip B10.
- Connect the fuel tube E (No. 2 and 3 carburetor supply line) to the "⇒" marked fitting.
 - Connect the 240 mm fuel tube (No. 1 carburetor supply line) to the "↑" marked fitting.

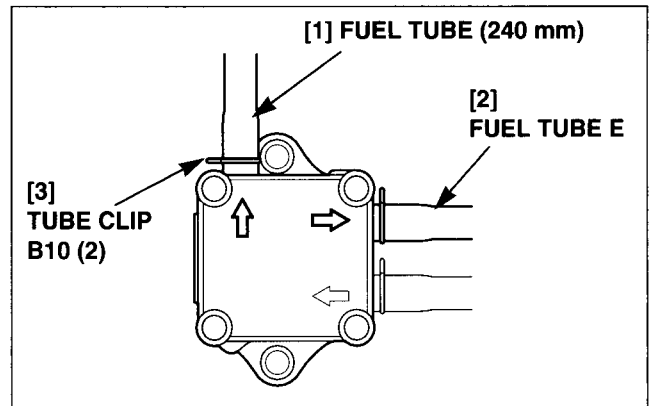


- 6) Connect the SE thermal valve heater wire 2P connector and set the 2P connector to the lower connector holder, then set the 14P connector to the upper connector holder.

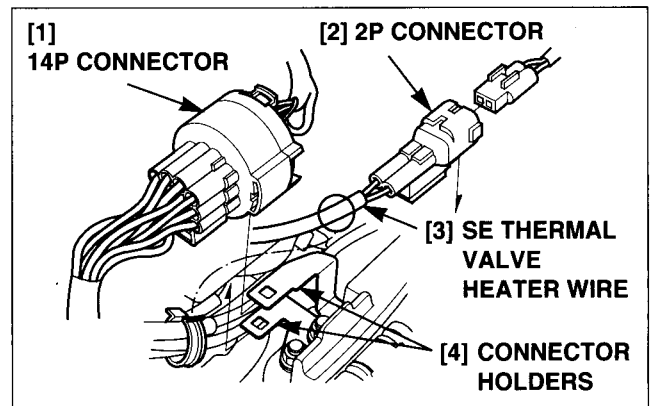


- 7) Insert the breather tube in the silencer cover until the white mark aligns with the hole edge as shown.

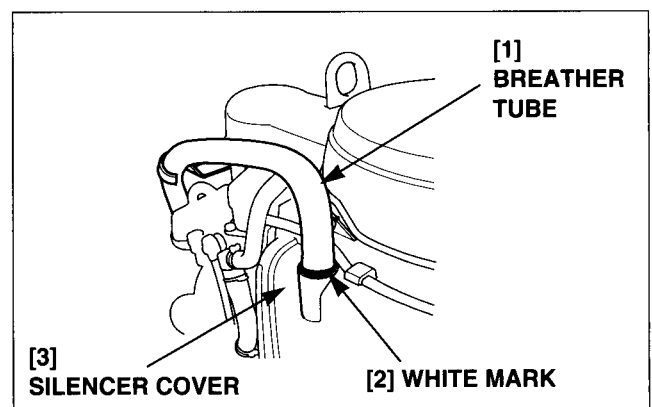

- 8) Insert the vinyl tube ends into the holes of the engine under case.

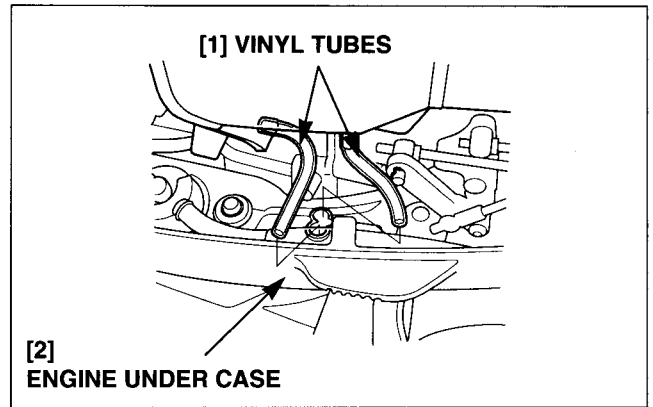

- 9) Connect the throttle rod to the throttle cam.
- 10) After installation, adjust the throttle linkage (P. 3-5).
- 11) Install the removed parts in the reverse order of removal.

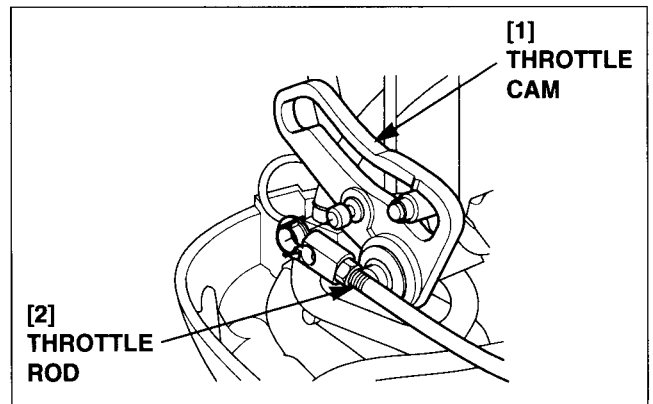

1. FLYWHEEL

1. FLYWHEEL

a. DISASSEMBLY/ASSEMBLY

[1] 10 x 25 (4)

ASSEMBLY:


- Apply thin coat of engine oil to the flanged part and threaded part.
- Do not apply too much engine oil so that it drips from the thread of the bolt.
- Tighten the bolts to the specified torque in crisscross pattern in 2 - 3 steps.
Torque: 65 N•m (6.6 kgf•m, 48 lbf•ft)

[2] FLYWHEEL

ASSEMBLY:

Wipe the flywheel and crankshaft mounting surfaces with a clean shop towel sprayed with degreasing agent.

- : Apply engine oil
- ▲: Degrease

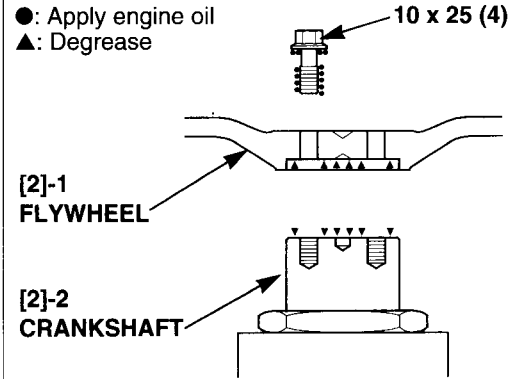

[9] CHARGE COIL

INSPECTION: P. 16-20
of the base shop manual

[8] CORD HOLDER B

[7] 6 x 10 mm DOWEL PIN


[3] POWER COIL

INSPECTION: P. 16-3

[4] CORD HOLDER A

[5] CRANKSHAFT

[6] CDI UNIT COVER

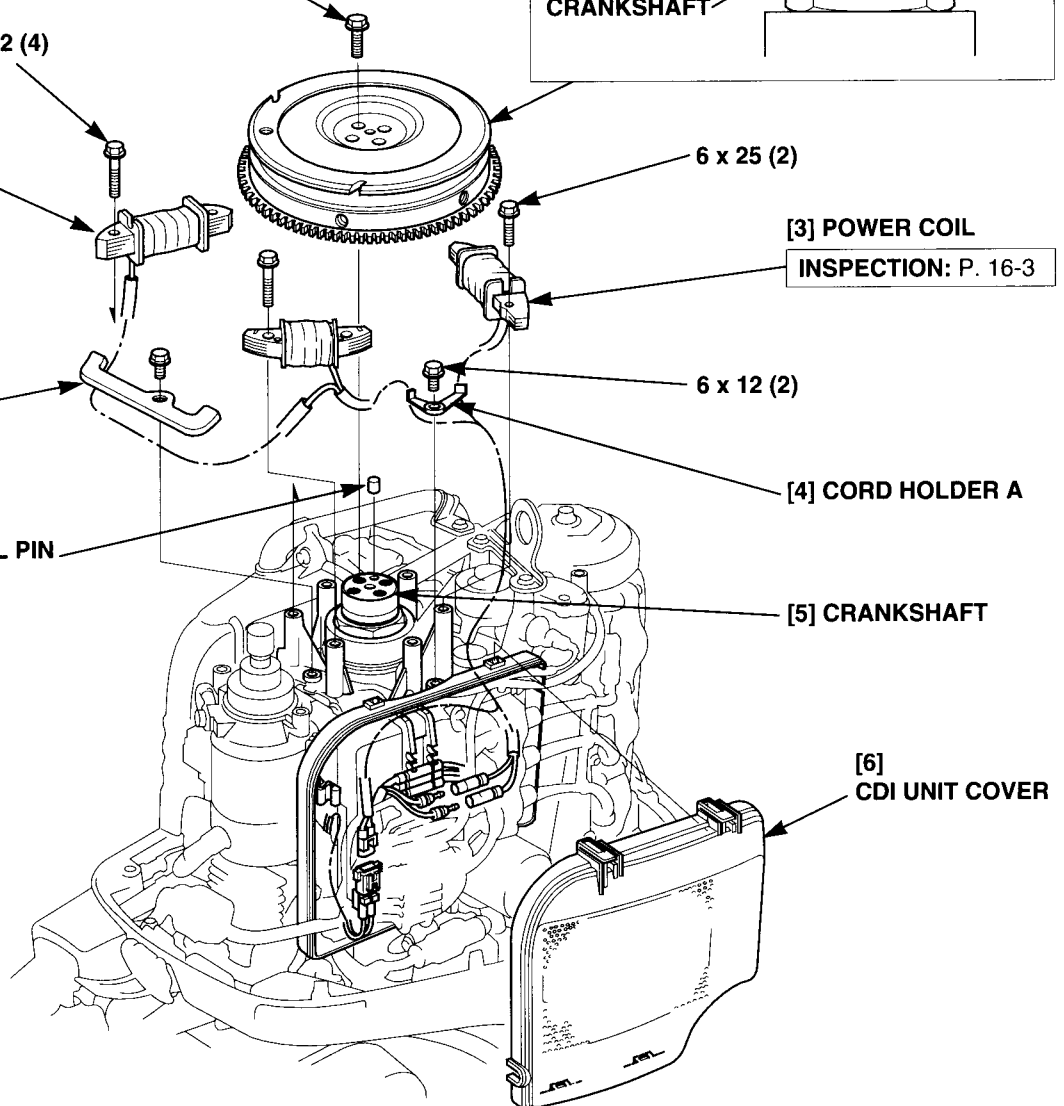


1. STEERING FRICTION LEVER (Long Tiller Handle Type)

1. STEERING FRICTION LEVER (Long Tiller Handle Type)


a. DISASSEMBLY

- 1) Remove the engine cover and tiller handle (P. 15-1).
- 2) Remove the 8 mm self locking nut.
- 3) Remove the 8 mm washer, friction adjusting lever, 8 mm nylon washer and friction disc.
- 4) Remove the two 6 x 12 mm flange bolts and friction plate.
- 5) Remove the friction disc.

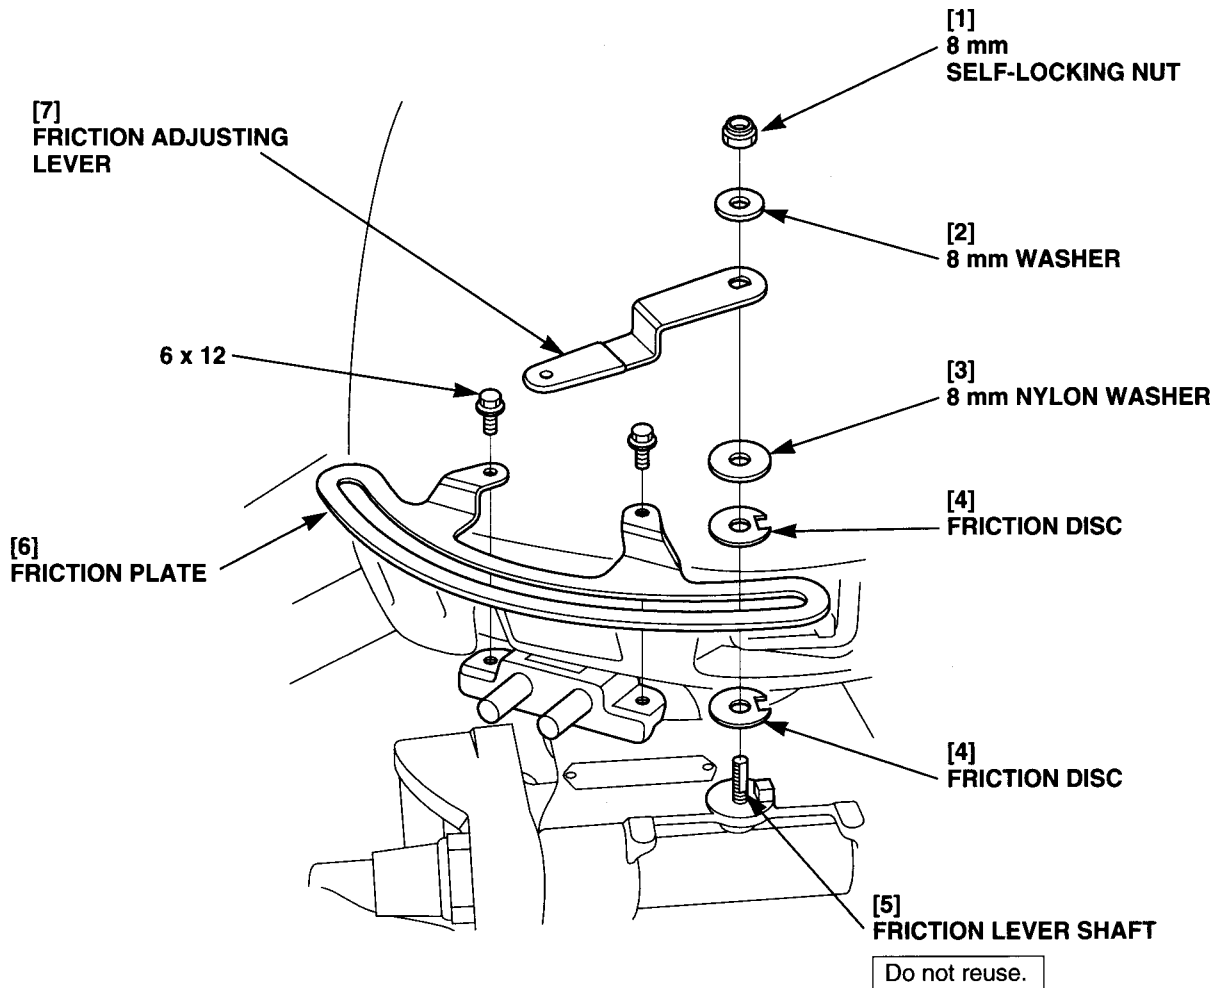


b. ASSEMBLY


- 1) Install a new friction lever shaft. Turn the friction lever shaft until it stops.
- 2) Adjust the friction lever shaft direction as shown by turning back the friction lever shaft 1/4 - 3/4 turn.

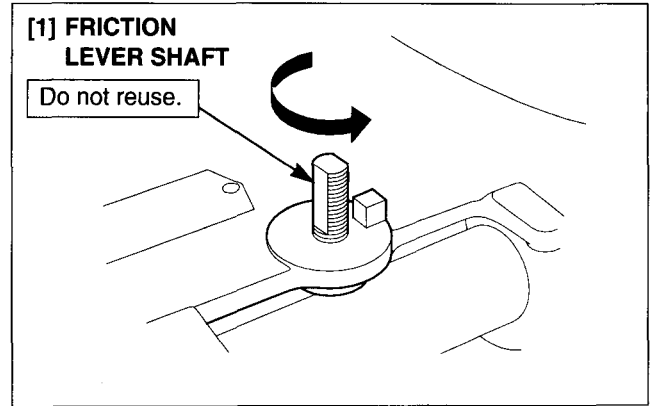


- 3) Before installation, check the disc surface of the friction discs for wear. Replace if necessary.
- 4) Clean off grease or oil from the disc surfaces of the friction discs and friction plate. Install one of the friction disc onto the friction lever shaft by aligning the cutout with the boss on the swivel case and facing the disc surface toward the friction plate as shown.

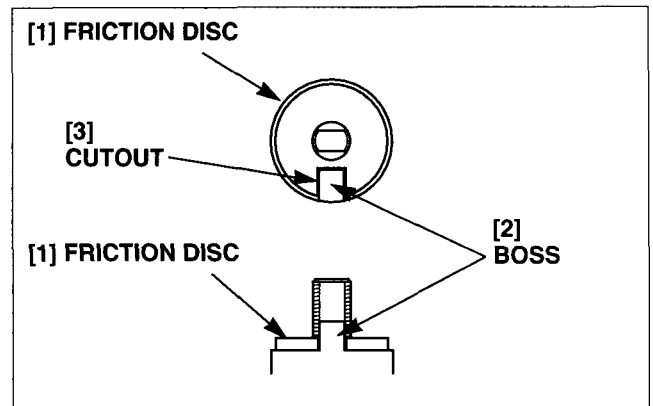

- 5) Install the friction plate to the mount frame by aligning the groove with the friction lever shaft and loosely install the two 6 x 12 mm flange bolts.
- 6) Push the friction plate toward the mount frame in the direction shown by arrow and tighten the 6 x 12 mm flange bolts securely.

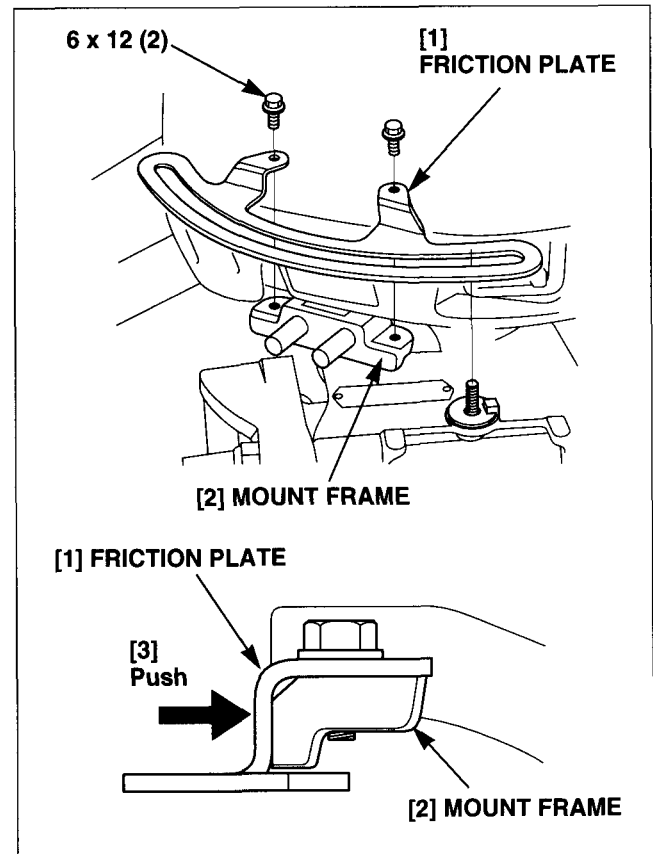


- 7) Install the other friction disc onto the friction lever shaft by aligning the cutout with the boss on the swivel case and facing the disc surface toward the friction plate.

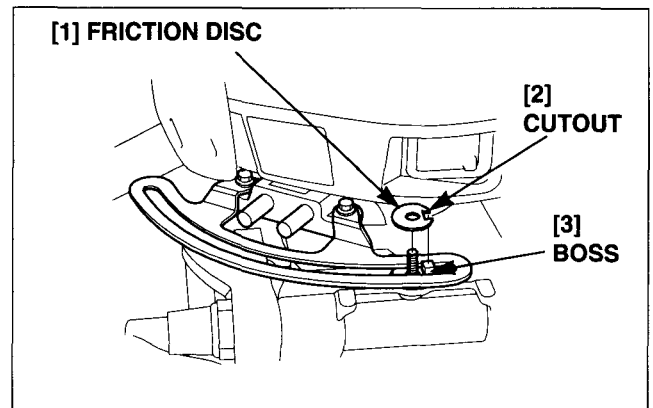

- 8) Install the 8 mm nylon washer, friction adjusting lever and 8 mm washer.
- 9) Turn the adjusting lever to the left side fully, and hold it in this position and tighten the 8 mm self-locking nut to the specified torque.

TORQUE: 9.5 N•m (0.95 kgf•m, 6.9 lbf•ft)

- 10) Check the starting torque by measuring the starting force using a spring scale at the center of the throttle grip (P. 3-8).

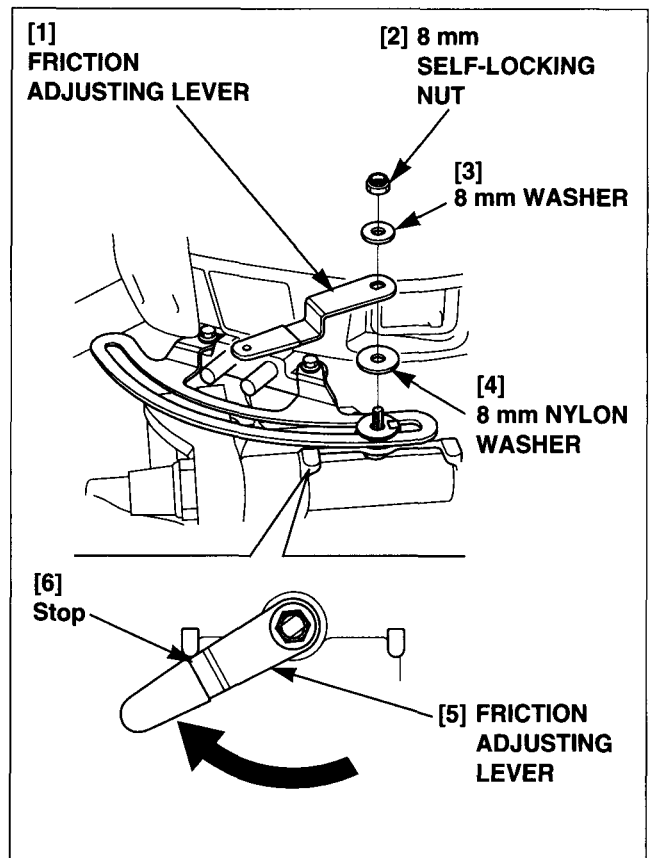

1. GAS ASSISTED DAMPER

2. POWER TRIM/TILT ASSEMBLY

1. GAS ASSISTED DAMPER

a. REMOVAL



- 1) Drain the carburetor by loosening the drain screws.

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


- 2) Lay the outboard motor on its right side (carburetor side).
- 3) Raise the outboard motor to the uppermost position and set the tilt stopper to the RUN position.
- 4) Remove the 10 mm E-ring from the upper cylinder pin, and then remove the upper cylinder pin.
- 5) Remove the upper mount of the gas-assisted damper from the swivel case.
- 6) Remove the upper cylinder bushings if necessary.
 - Replace with new ones when the upper cylinder bushings are removed.
- 7) Remove the transom angle adjusting rod.
- 8) Remove the 6 x 25 mm hex. bolts, 6 mm plain washers and anode metal.
- 9) Remove the 10 mm self-locking nut and remove the 10 mm plain washer and 10 x 158 mm hex. bolt.

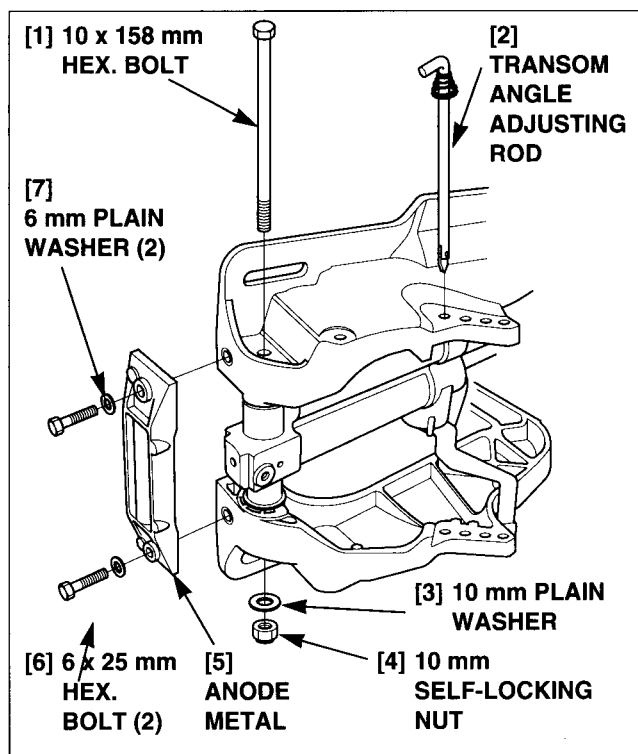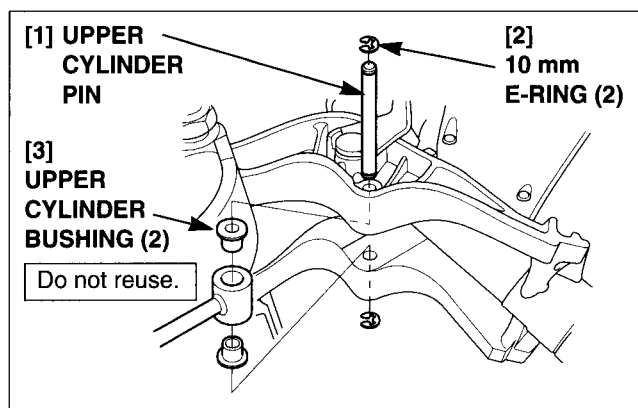

- 10) Loosen the 7/8-14 UNF self locking nut.

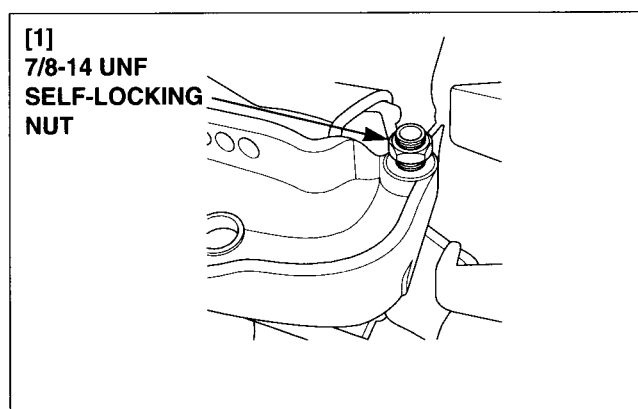


- 11) Lift the left stern bracket and remove the gas assisted damper.
 - Make sure that the tilt lever is in "RUN" position before removal.
 - Store the gas assisted damper with fully extended position
- 12) Remove the 26 mm wave washer and 10 mm distance collar.
- 13) Remove the lower cylinder bushings if necessary.
 - Replace with new ones when the lower cylinder busing is removed.

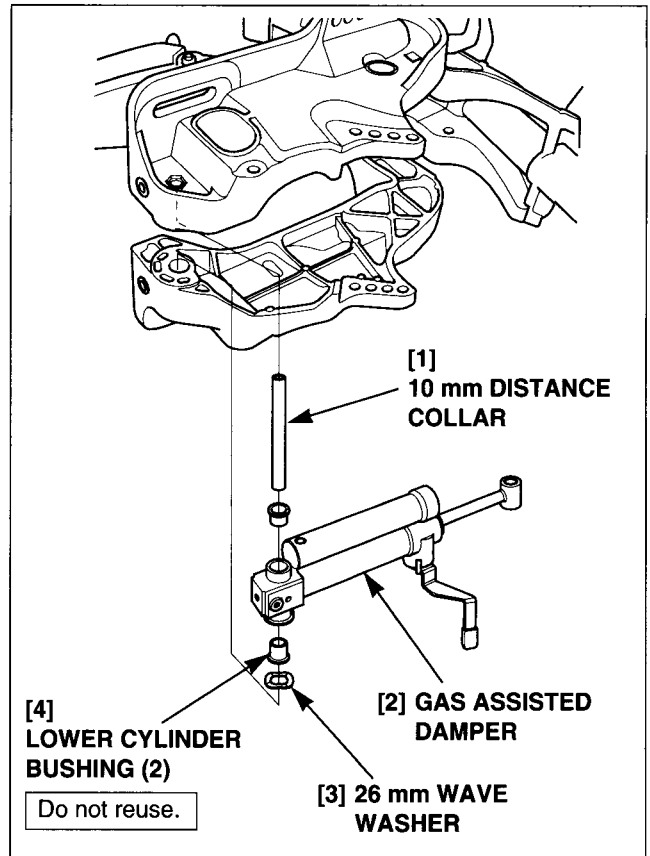

• TILT LEVER REPLACEMENT

- Before removing the tilt lever, set the tilt lever in the "RUN" position
- Install the tilt lever by aligning the mounting hole of the lever with the tilt lever shaft and noting the installation direction as shown.

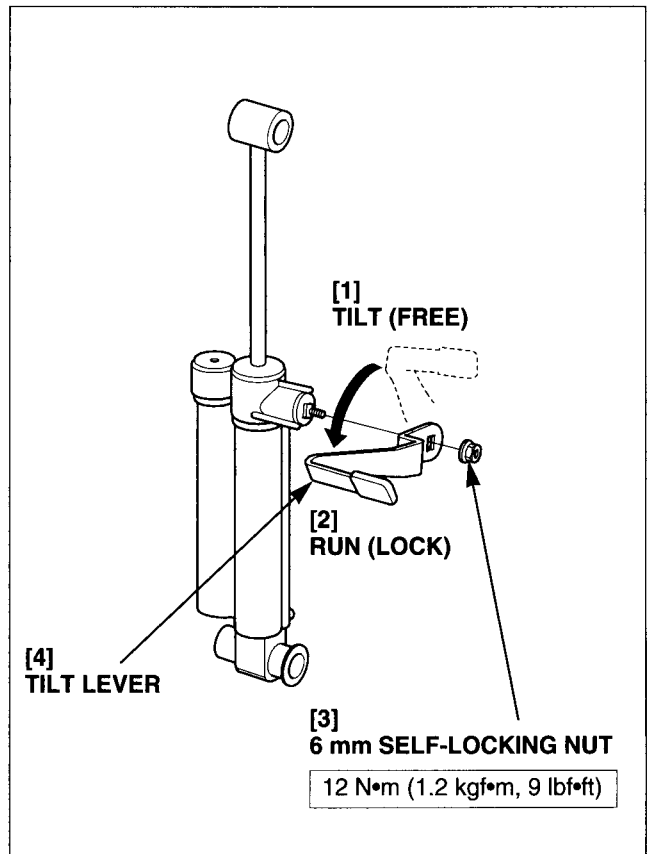


b. DISPOSAL

- 1) Set the tilt lever in the "TILT" position with the piston rod fully extended, then remove the tilt lever.
- 2) Wrap the damper inside a plastic bag and support the damper in a vice as shown.
- 3) Through the open end of the plastic bag, insert a drill motor with a sharp 2 - 3 mm (5/64 - 1/8 in) drill bit.

CAUTION


- The gas assisted damper contains nitrogen gas and oil under high pressure. Do not drill past the reservoir top, or you may drill into the oil chamber; oil escaping under high pressure may cause serious personal injury.
- Do not use a dull drill bit which could cause a build-up of excessive heat and pressure inside the damper, leading to explosion and severe personal injury.
- Always wear eye protection to avoid getting metal shaving in your eyes when the gas pressure is released. The plastic bag is only intended to shield you from the escaping gas.

- 4) Hold the bag around the drill motor and briefly run the drill motor inside the bag; this will inflate the bag with air from the drill motor and keep the bag from getting caught in the bit when you start.
- 5) Drill the plug bolt on the reservoir top.

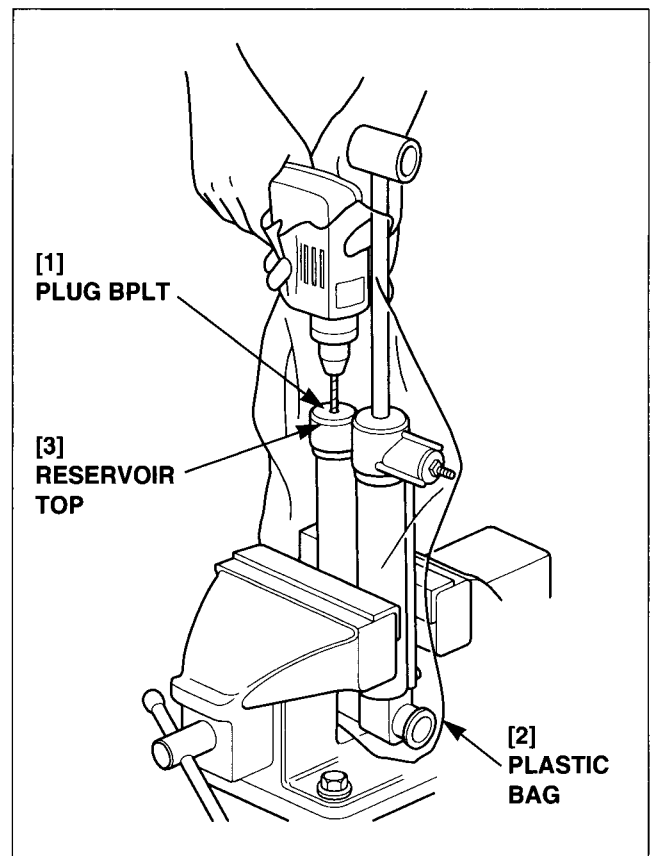


c. INSTALLATION

Install the gas-assisted damper in the reverse order removal.

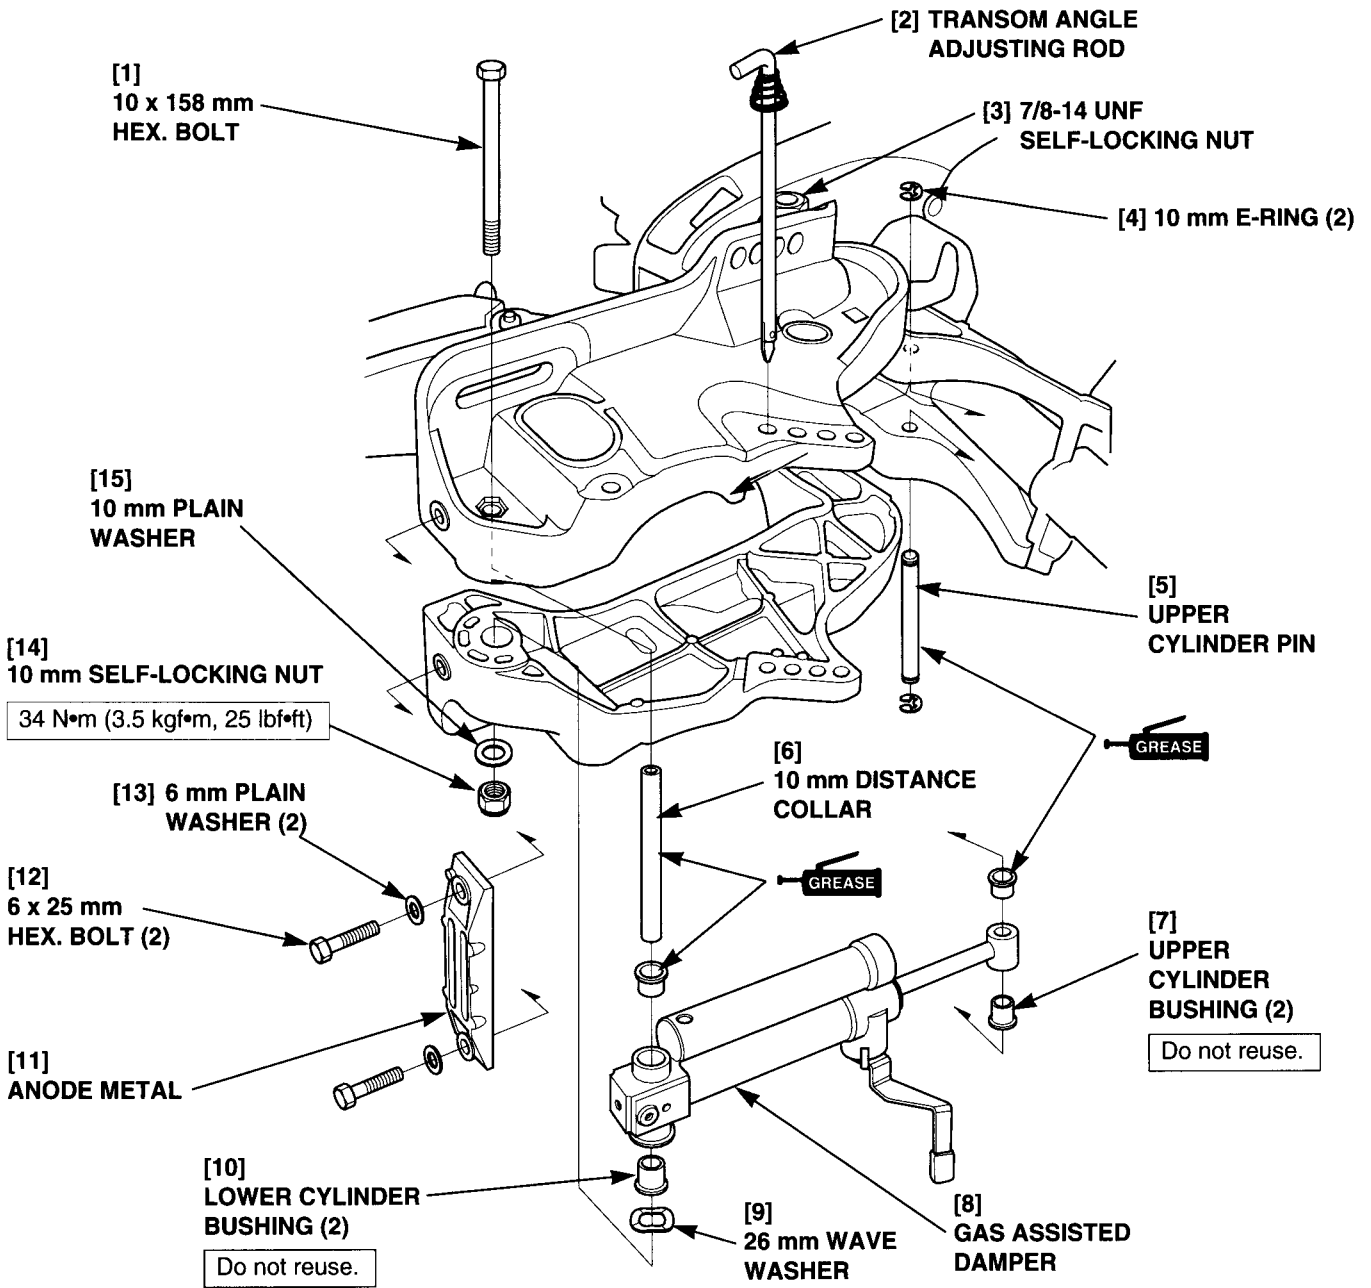

- After installing the gas assisted damper, tighten the 7/8-14 UNF self-locking nut to the specified torque. Then turn it back 1/2 - 3/4 turns.
TORQUE: 39 N•m (4.0 kgf•m, 29 lbf•ft)

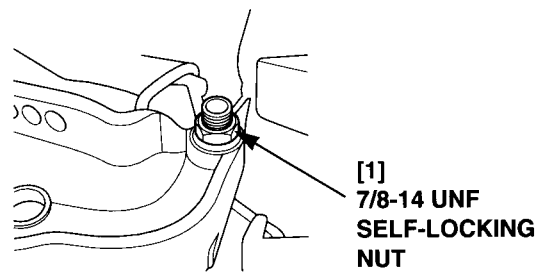

2. POWER TRIM/TILT ASSEMBLY

a. REMOVAL

- 1) Drain the carburetor by loosening the drain screws and remove the motor from the engine.


⚠ WARNING

Gasoline is highly flammable and explosive.


You can be burned or seriously injured when handling fuel.

- Keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


- 2) Lay the outboard motor on its right side (carburetor side).
- 3) Raise the outboard motor to the uppermost position and set the tilt stopper in the TILT position.
- 4) Remove the engine cover and CDI unit cover (see base shop manual).
- 5) Pull the fuse holder from the fuse holder bracket.
- 6) Remove the 6 x 12 mm flange bolt and main wire harness ground terminal.

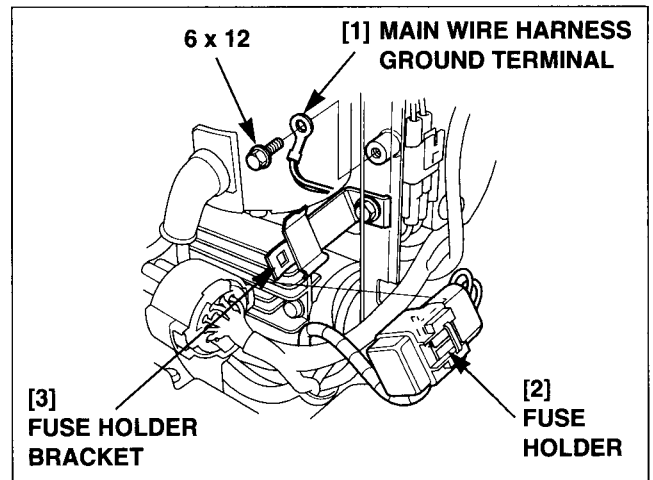


- 7) Remove the 6 x 25 mm flange bolt, 6 mm plain washer and fuse holder bracket.
- 8) Remove the CDI unit case mounting three 6 x 25 mm flange bolts and 6 mm plain washers, then pull out the CDI unit case slightly from the engine.

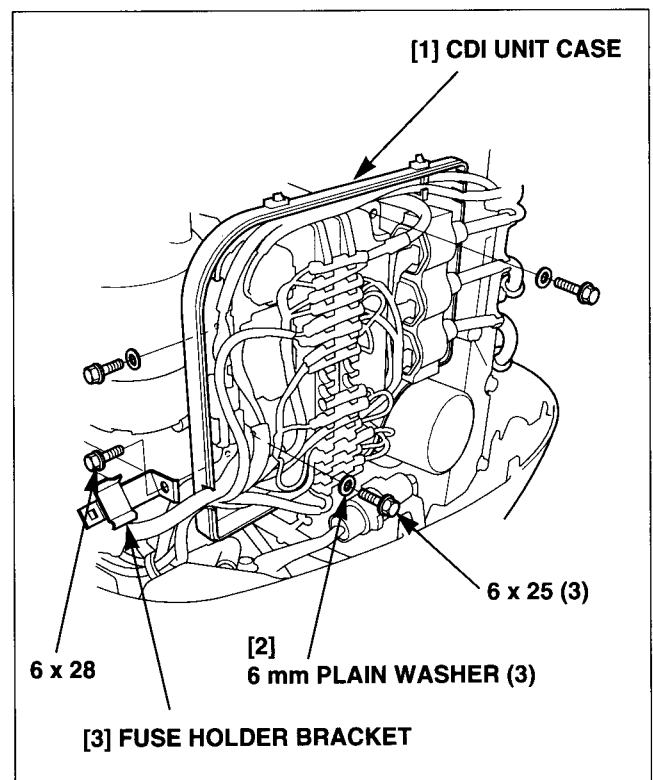


- 9) Disconnect the power trim/tilt motor wire 2P connector.

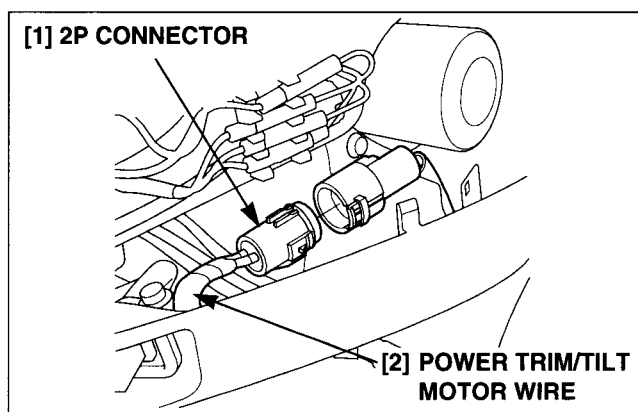


- 10) Pull off the trim angle sensor's three connectors from the connector holder and disconnect them.

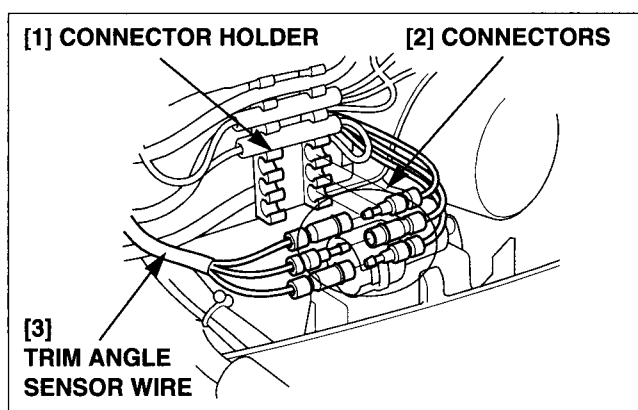


- 11) Unfasten the purse lock clip and pull out the trim angle sensor wire through the hole of the CDI unit case.

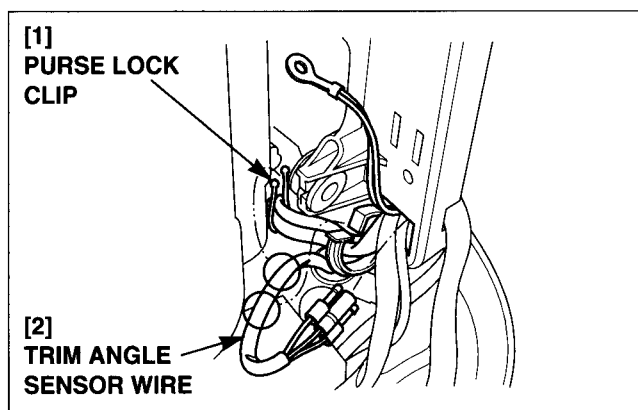


- 12) Loosen the rivet screw and remove the 14 mm clip.
- 13) Remove the upper case grommet C from the engine under case and pull the power trim/tilt motor and trim angle sensor wires from the engine under case.

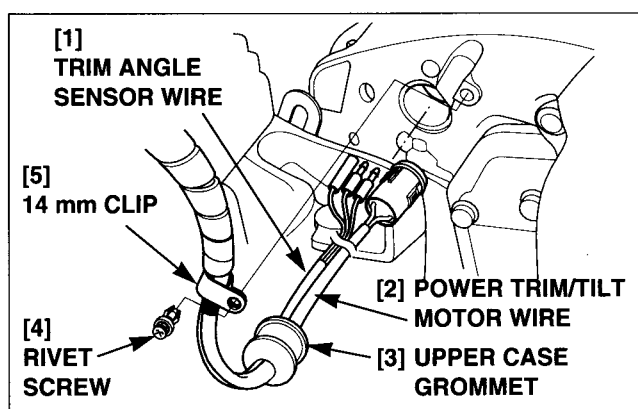


- 14) Remove the spiral protector, and open the wire harness clip and unfasten the power trim/tilt motor wire and trim angle sensor wire.
- 15) Remove the motor cord bushing from left stern bracket.

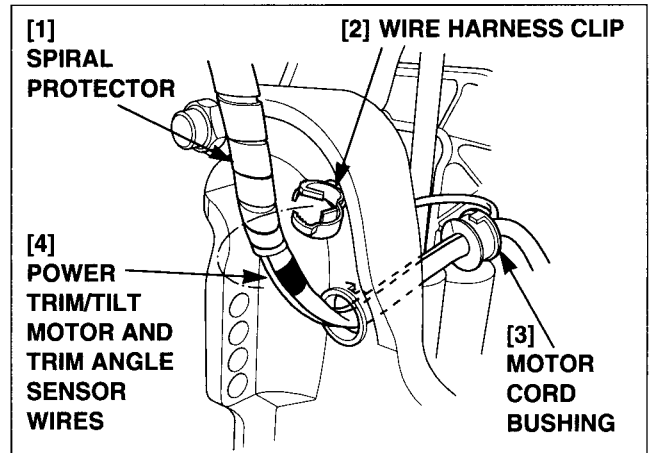

- 16) Remove the transom angle adjusting rod.
- 17) Remove the 6 X 25 mm hex. bolts, 6 mm plain washers and anode metal.

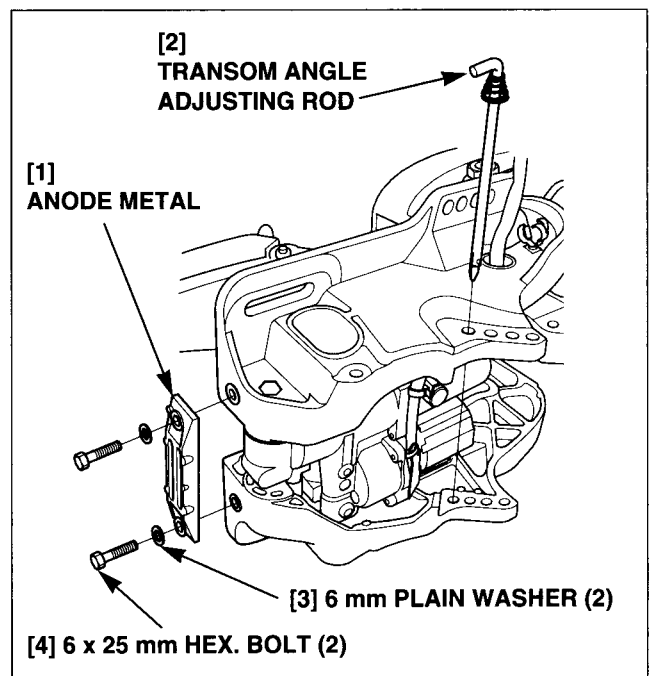


- 18) Remove the 10 mm E-ring from the upper cylinder pin, and then remove the upper cylinder pin.
- 19) Remove the upper mount of the power trim/tilt from the swivel case.
- 20) Remove the upper cylinder bushings if necessary.
 - Replace with new ones when the upper cylinder busing is removed.

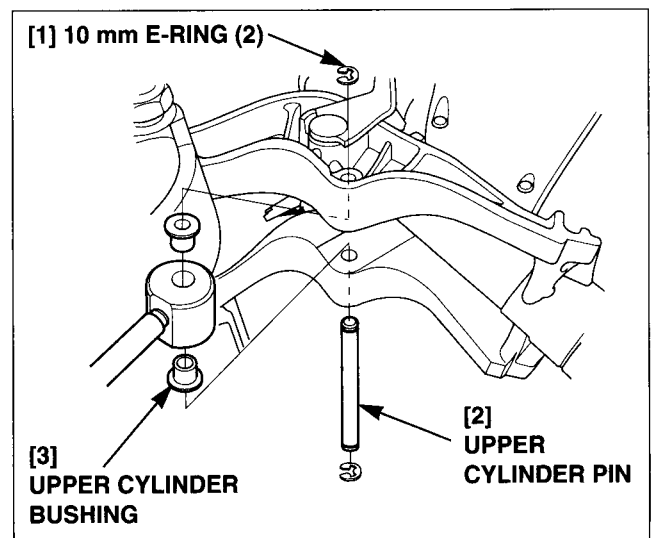

- 21) Remove the two 6 x 20 mm hex bolts and 6 mm plain washers and remove the trim angle sensor if necessary.
- 22) Remove the 10 mm self-locking nut and remove the 10 mm plain washer and 10 x 158 mm hex. bolt.
- 23) Loosen the 7/8-14 UNF self locking nut.
- 24) Lift the left stern bracket and remove the power trim/tilt assembly.
- 25) Remove the 28 mm wave washer, 19.4 x 6 mm thrust washer and distance collar.
- 26) Remove the lower cylinder bushings if necessary.
 - Replace with new ones when the lower cylinder bushings are removed.

[1]
7/8 - 14 UNF SELF-LOCKING NUT

[1]-1
7/8-14 UNF
SELF-LOCKING NUT
(Loosen.)

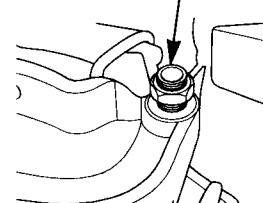

[2] TRIM ANGLE SENSOR

INSPECTION: See base shop manual.

[12]
10 x 158 mm
HEX. BOLT

[3]
6 mm PLAIN
WASHER (2)

[4] 6 x 20 mm HEX.
BOLT (2)

[11] 10 mm PLAIN
WASHER

[10]
10 mm SELF-LOCKING
NUT


[9]
28 mm WAVE
WASHER

[5]
POWER TRIM/TILT
ASSEMBLY

[8] LOWER CYLINDER
BUSHING (2)

[6] DISTANCE COLLAR

[7]
19.4 x 6 mm
THRUST WASHER

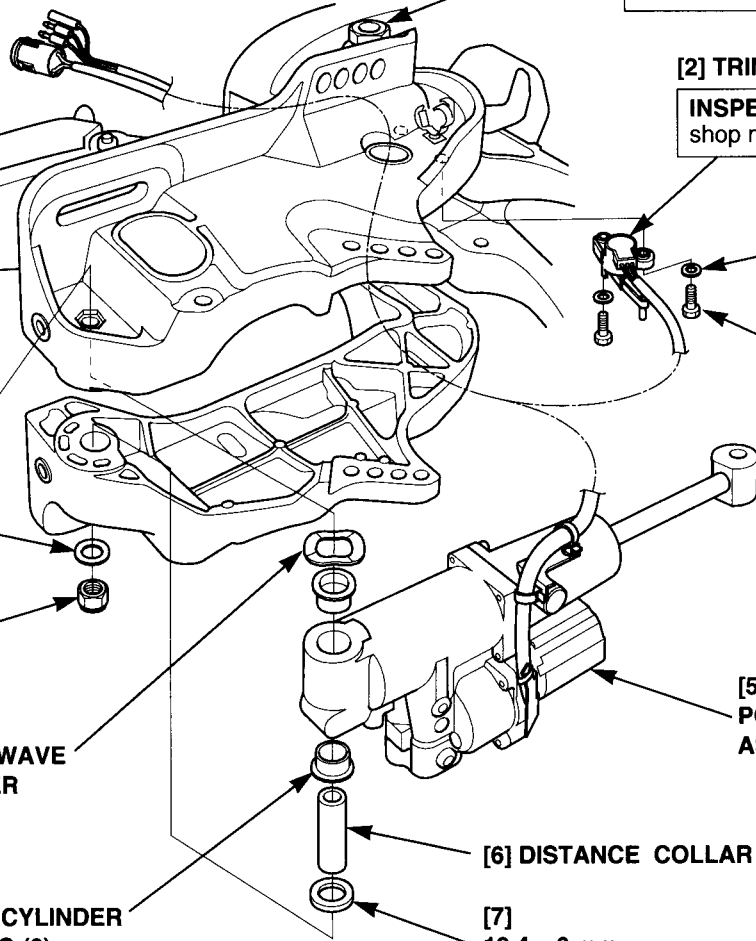



b. INSTALLATION

- 1) Install the power trim/tilt motor in the reverse order of removal.
 - Apply grease to the following:
 - upper cylinder bushings and upper cylinder pin.
 - lower cylinder bushings, 28 mm wave washer, distance collar and 19.4 x 6 mm thrust washer.
 - If the upper cylinder bushing and lower cylinder bushing have been removed, replace with new ones.

[1] MOTOR WIRE BUSHING

ASSEMBLY:


Pass the motor wire through the left stern bracket and set the motor wire bushing by aligning the boss of the bushing with groove on the left stern bracket as shown.

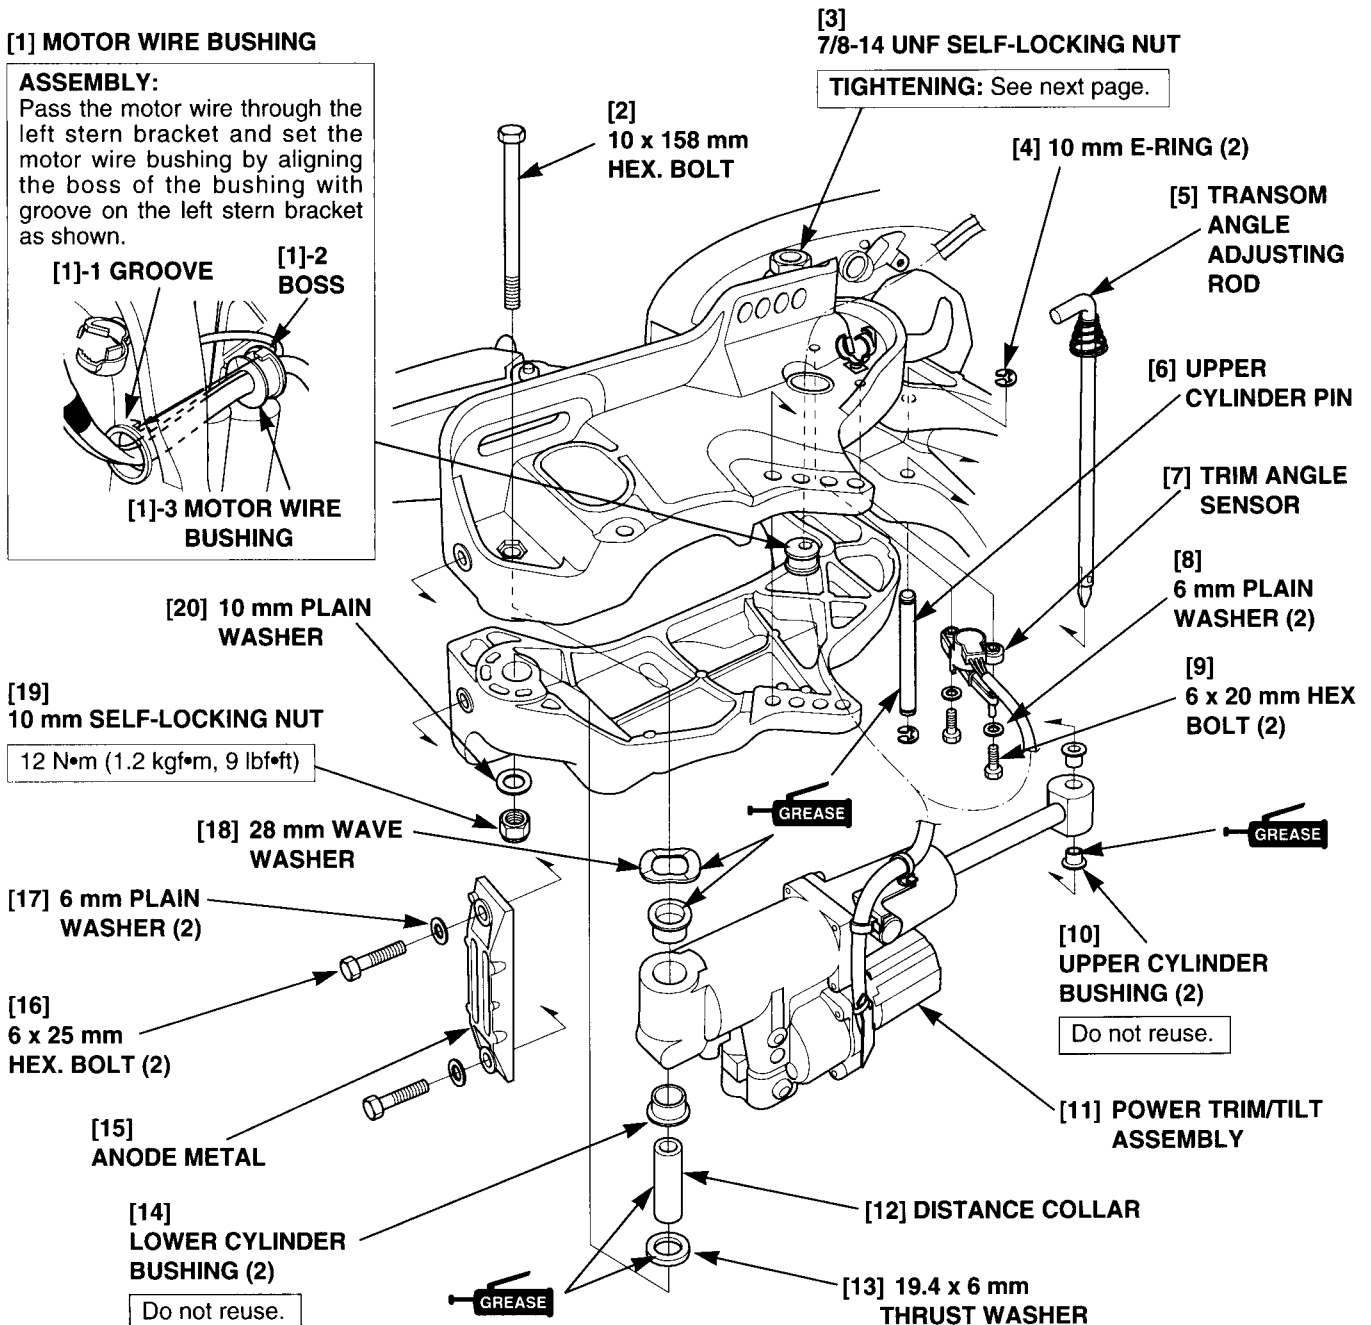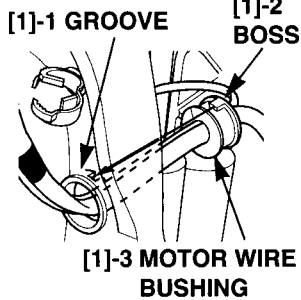

- 2) After installing the power trim/tilt assembly, tighten the 7/8-14 UNF self-locking nut to the specified torque. Then turn it back 1/2 - 3/4 turns.

TORQUE: 39 N•m (4.0 kgf•m, 29 lbf•ft)

- 3) Route the power trim/tilt motor and trim angle sensor wires and secure them with the clips.

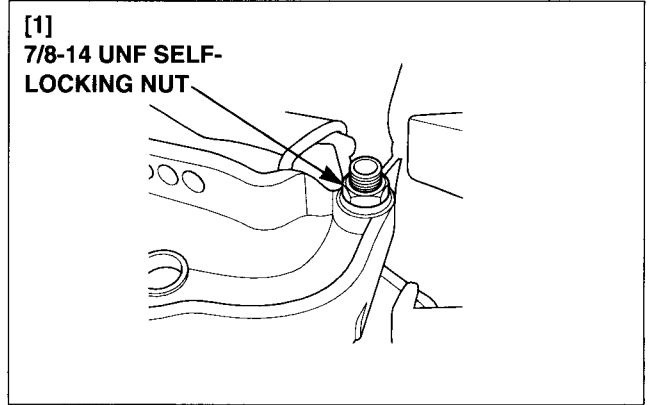


[1] WIRE HARNESS CLIP

Clamp the trim angle sensor wire together with the power trim/tilt switch wire and power trim/tilt relay wires as shown.

[2] PURSE LOCK CLIP

Clamp the wires (power trim/tilt switch wire, power trim/tilt relay wires, and trim angle sensor wire).

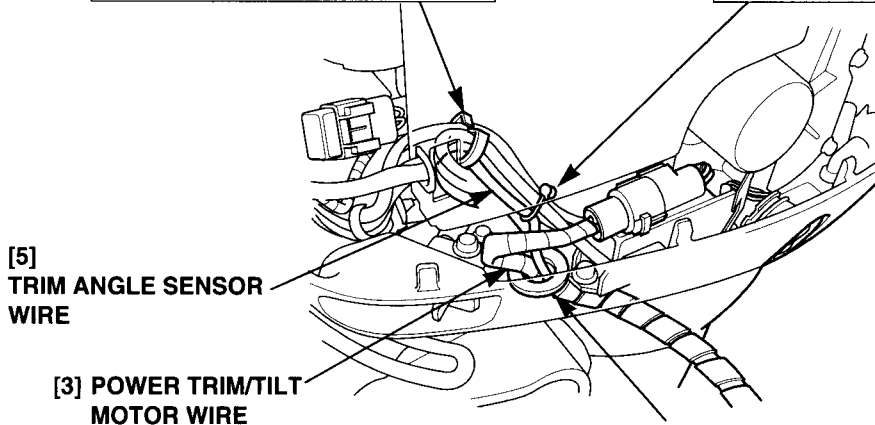

[3] POWER TRIM/TILT MOTOR WIRE

[9] 14 mm TUBE CLIP


Clamp the center of the gray tape position of the power trim/tilt motor wire with the wire harness clip.

[8] SPIRAL PROTECTOR

After routing and clamping the power trim/tilt motor and trim angle sensor wires, wrap the wires between the 14 mm tube clip and wire harness with the spiral protector as shown.


[7] WIRE HARNESS CLIP

Clamp the center of the gray tape position of the power trim/tilt motor wire with the wire harness clip.

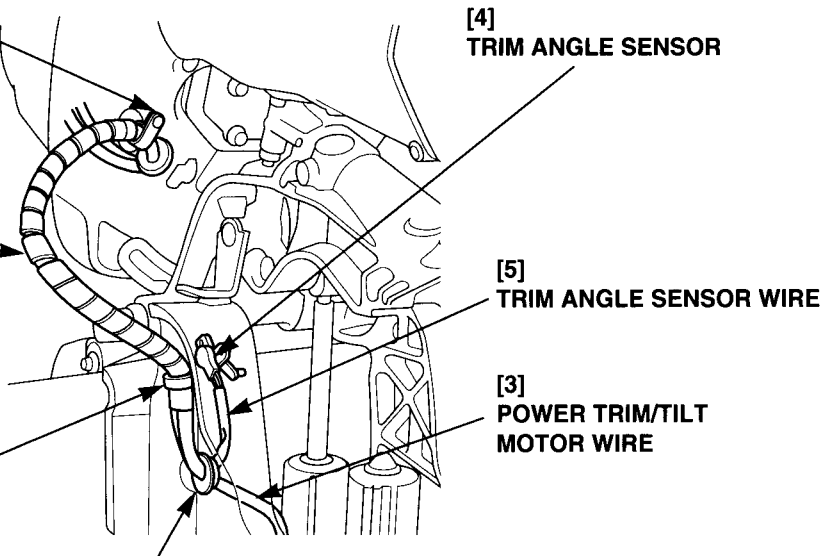


[6] MOTOR CORD BUSHING

- 4) Set the trim angle sensor wire connectors on the connector holder.
- 5) Set the CDI unit case in the place and install the 6 mm plain washers and 6 x 25 mm flange bolts, and tighten the bolts securely.
- 6) Install the fuse holder bracket with the 6 x 28 mm flange bolt, then install the fuse holder.

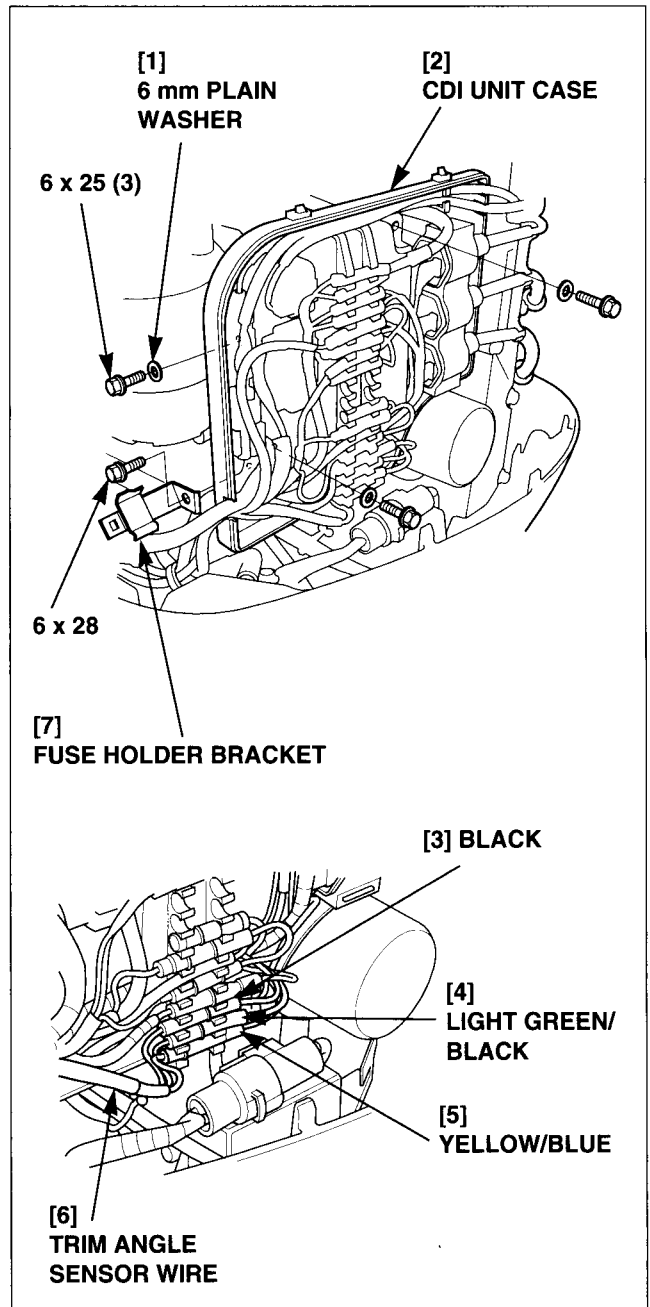

- 7) Set the ground terminal as shown and tighten the 6 x 12 mm flange bolt securely noting the terminal direction.

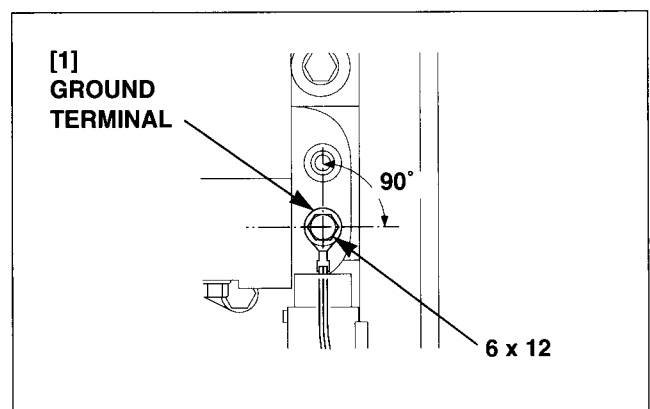

THROTTLE BRACKET/SHIFT LEVER/ 15. HANDLEBAR (TILLER HANDLE TYPE ONLY)


BF40A•BF50A

1. LONG TILLER HANDLE


1. LONG TILLER HANDLE

a. REMOVAL


- 1) Remove the engine cover and set the shift lever in the neutral position.
- 2) Remove the two 6 x 28 mm flange bolts, two 6 x 40 mm flange bolts and four 6 mm plain washers, and remove the separator cover.

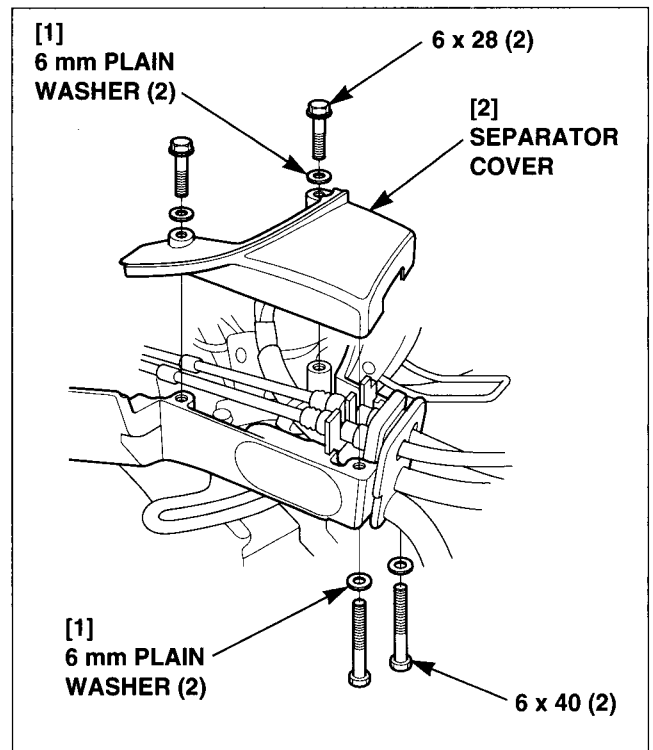


- 3) Remove the 14P connector from the connector holder and disconnect the 14P connector.

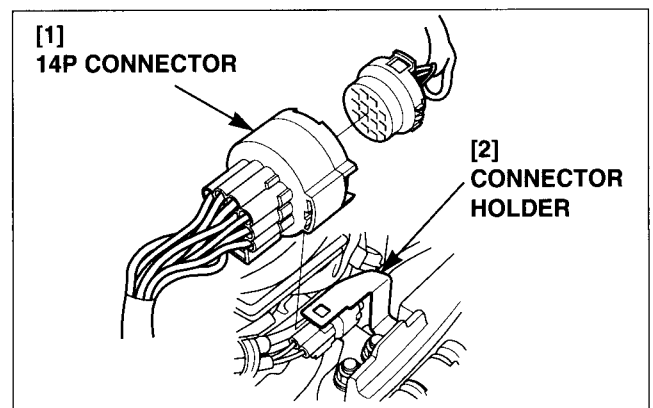


- 4) Remove the 6 mm lock pins and 6 mm washers, the disconnect the throttle and shift cables.

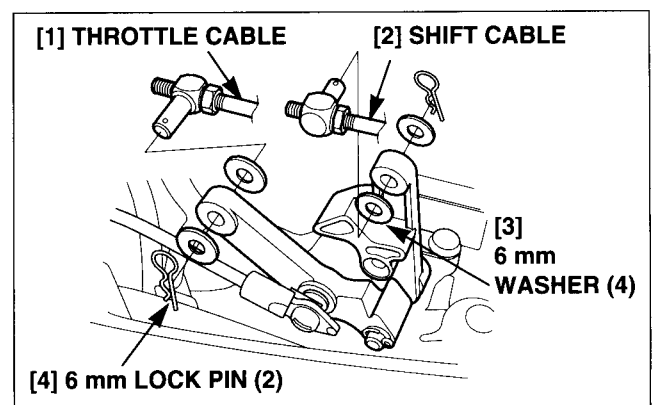

- 5) Pull up the control cable from the control cable set plate.
- 6) Remove the under case grommet.

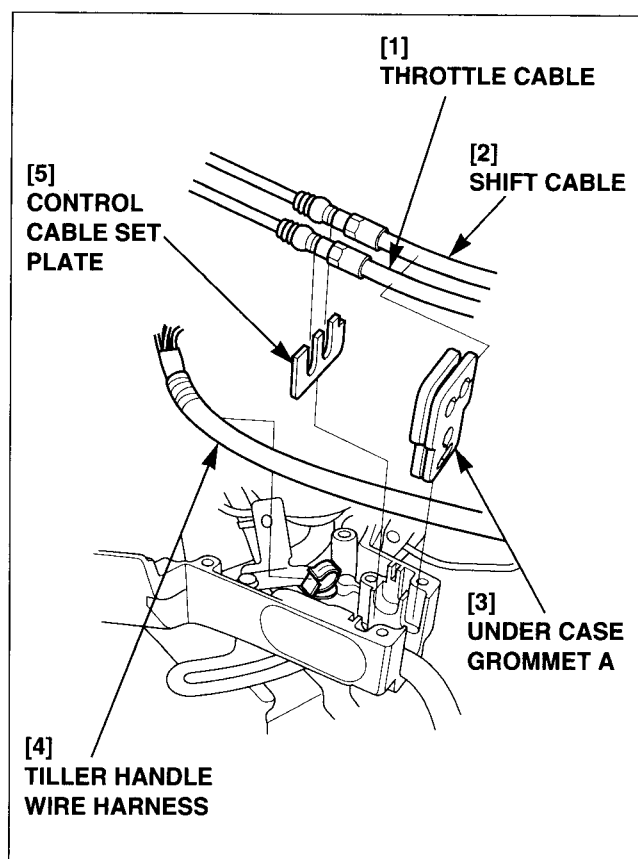


- 7) Remove the two 10 mm self-locking nuts and two 10 mm washers, then remove the long tiller handle assembly.

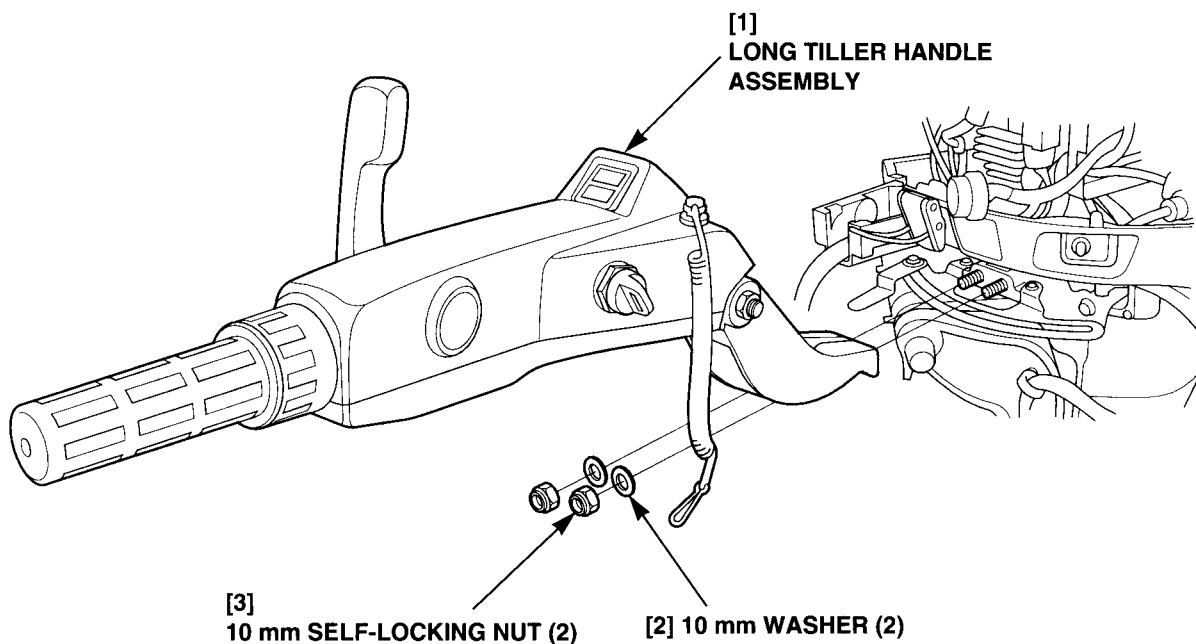


b. DISASSEMBLY


- 1) Remove the six screws and under cover.

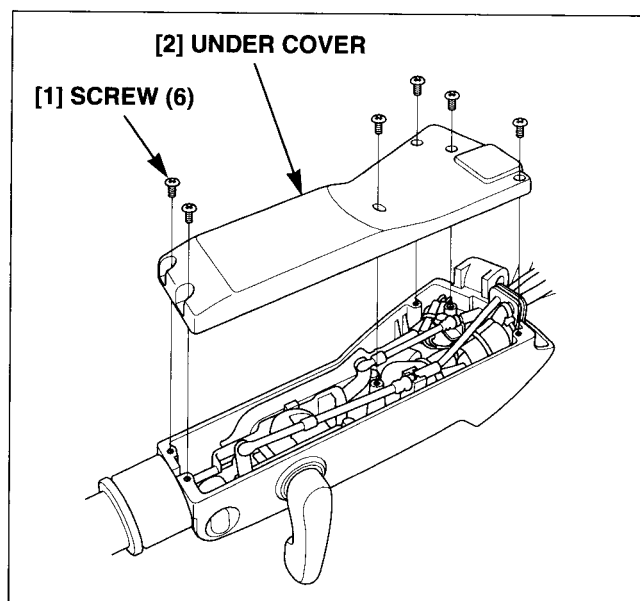


- 2) Remove the 4 mm E-clips and disconnect the control cables from the throttle arm and shift arm.
- 3) Remove the control cables and grommet.
- 4) Remove the 6 x 12 mm bolt washer and cable holder.

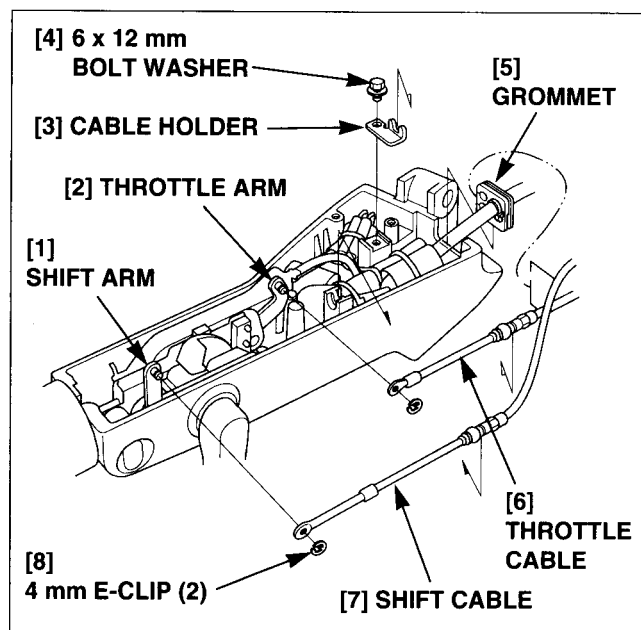

- 5) Release the wire band clip and disconnect the emergency stop switch wire connectors.

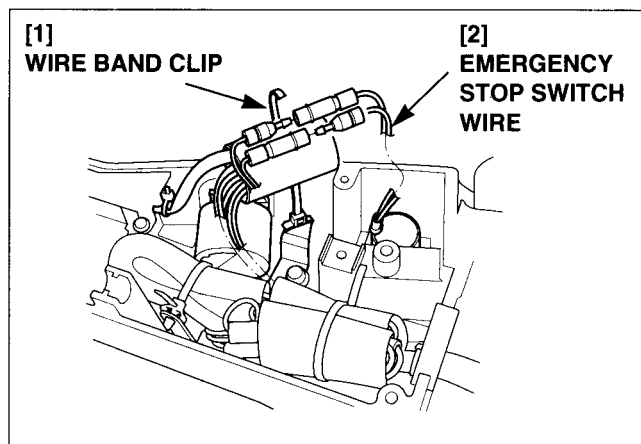


- 6) Remove the connector cover B and disconnect the power trim/tilt switch wire connectors (power trim/tilt type only).
- 7) Release the wire band clips and disconnect the connectors.
- 8) Remove the 30 mm connector cover.
- 9) Slide the connector cover A and disconnect the connectors, and then remove the tiller handle wire harness.
- 10) Remove the 6 x 12 mm bolt washer and connector bracket.

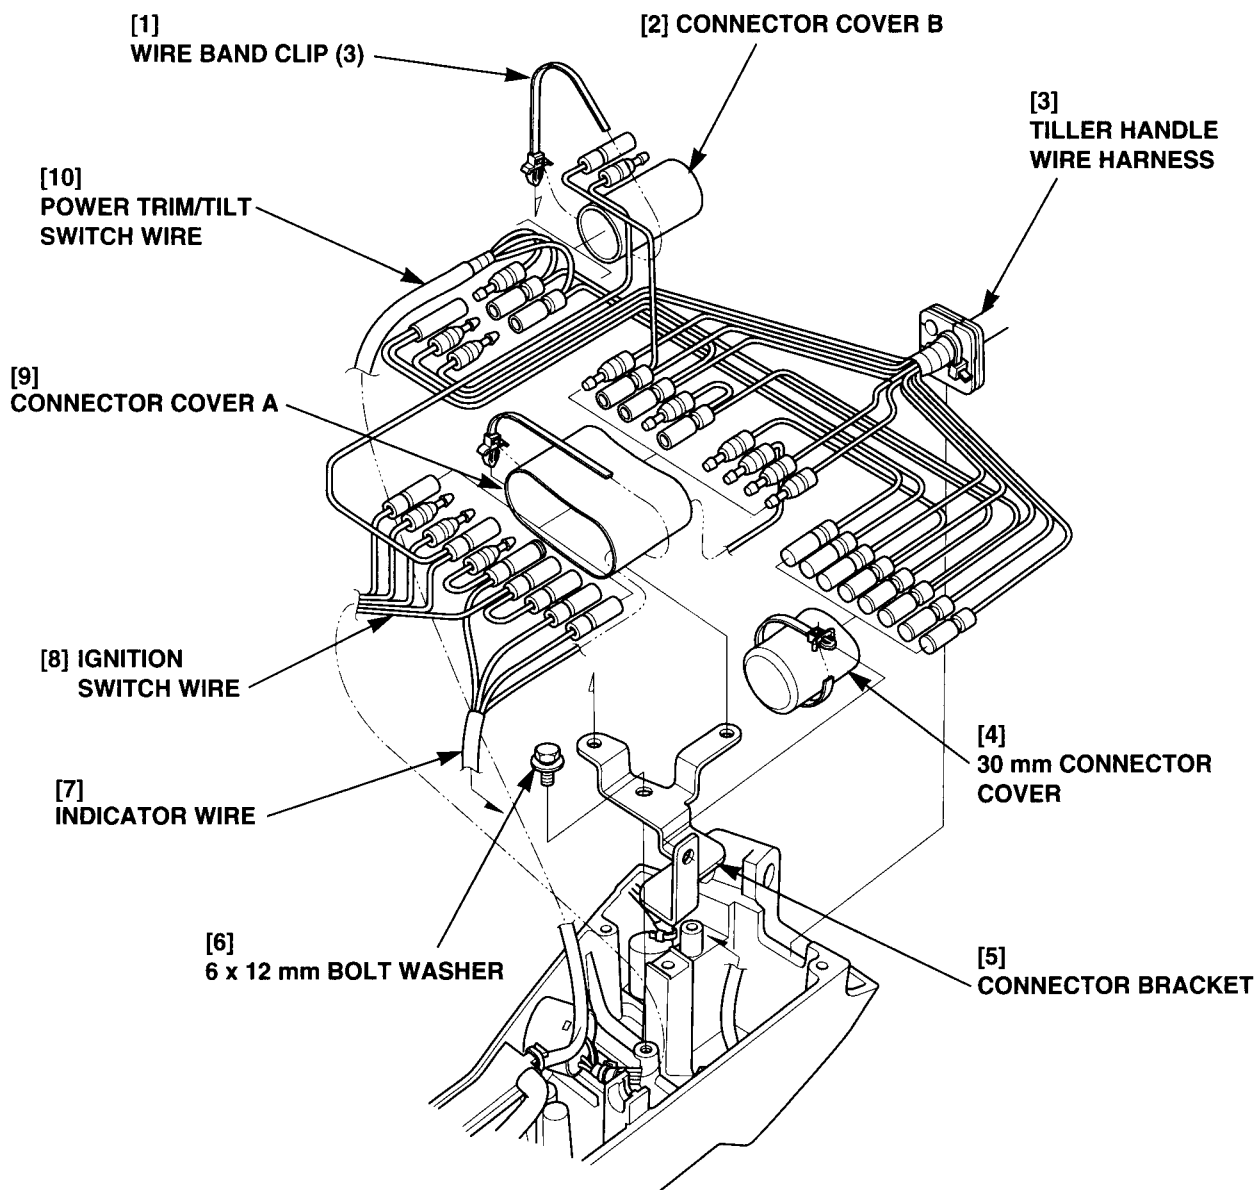


• THROTTLE GRIP, THROTTLE ROD


- 1) Remove the grip rubber, then remove the 6 x 12 mm flange bolt.

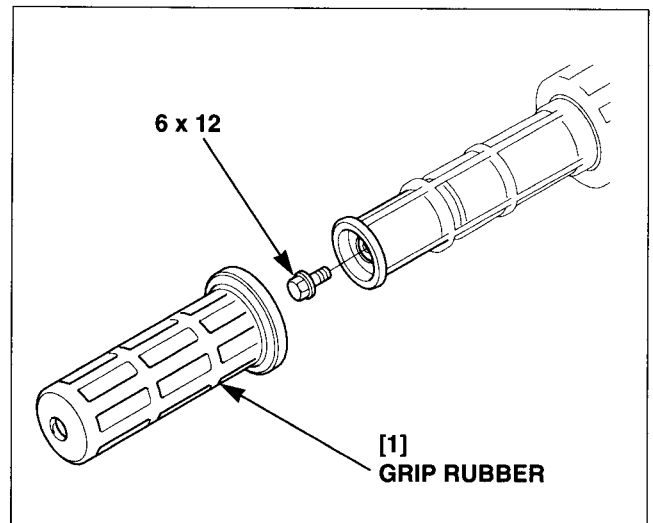

- 2) Remove the throttle friction grip and throttle friction pad.
- 3) Remove the throttle grip pipe by turning clockwise viewed from the grip end, and remove the throttle friction disc.

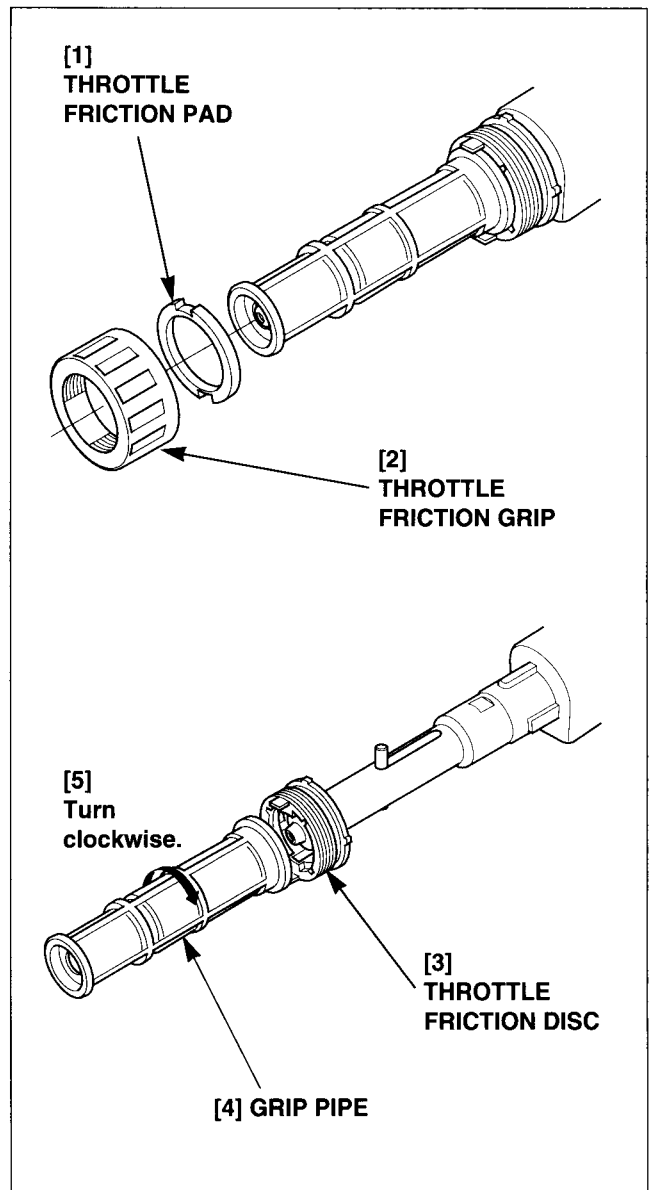

- 4) Remove the 9 mm E-clip and 10 mm washer.
- 5) Disconnect the throttle rod from the throttle arm and remove the 10 mm washer.
- 6) Remove the throttle cable pin from the cable pivot.
- 7) Loosen the lock nut and remove the throttle cable pivot.

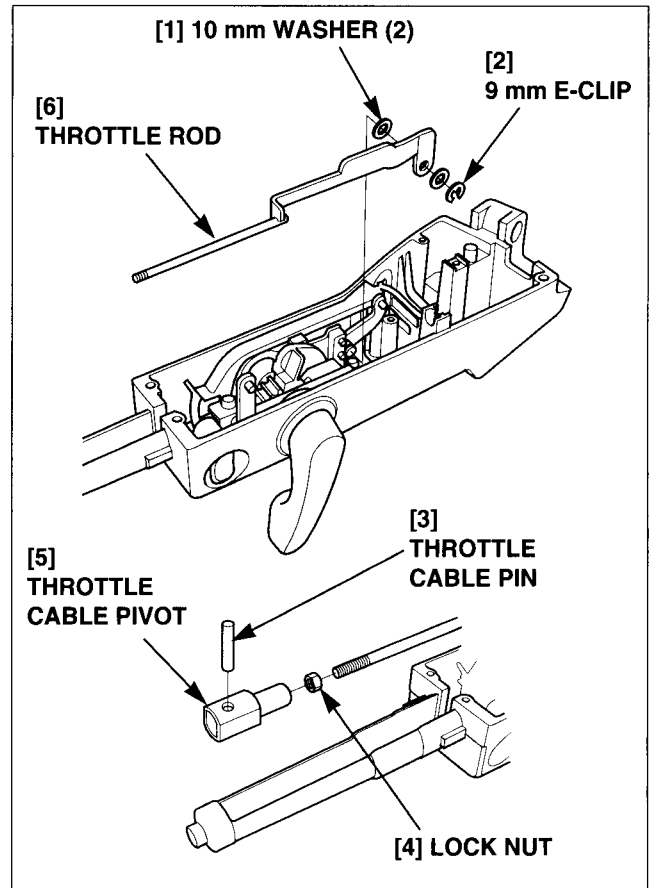


• **POWER TRIM/TILT SWITCH**

Power Trim/Tilt Type:

- 1) Release the wire bands, remove the 5 x 10 mm screws and remove the wire cover.
- 2) Remove the 5 x 8 mm hex. bolt and 5 mm washer and remove the power trim/tilt switch and switch grommet.


Gas Assisted Tilt Type:

- 1) Remove the 5 x 8 mm hex. bolt and 5 mm washer and remove the switch bracket and switch hole grommet.

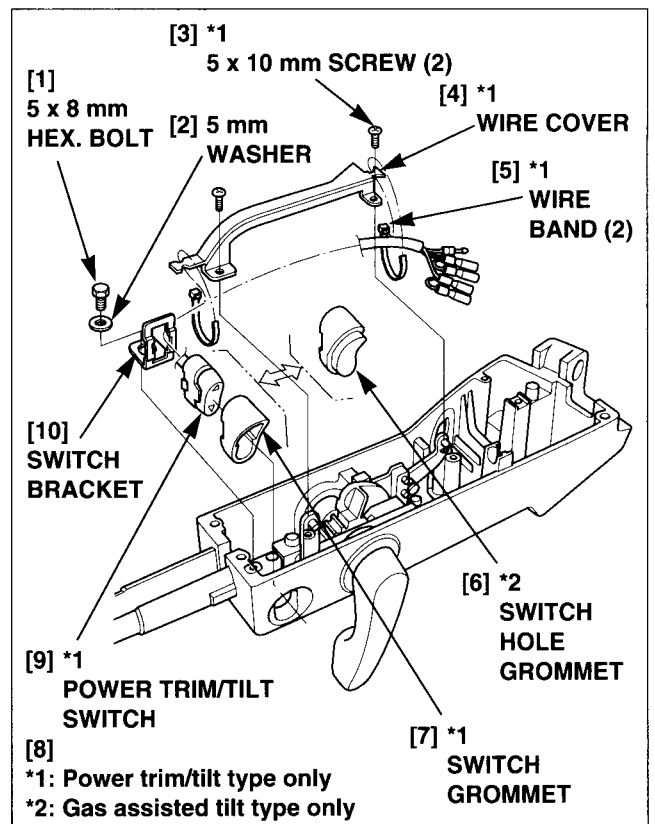


• **SHIFT LEVER, SHIFT UNIT, THROTTLE ARM**

- 1) Remove the hole cap and remove the 8 x 50 mm socket bolt.
- 2) Remove the shift lever stopper and shift lever.

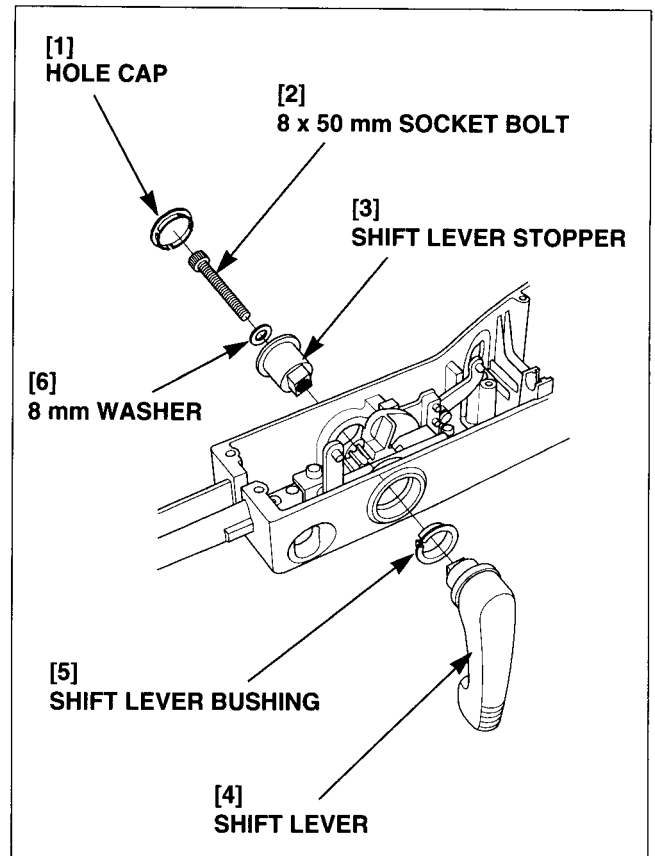


- 3) Remove the three 5 x 12 mm hex bolts and three 5 mm washers.
- 4) Remove the guide plate and throttle arm.
- 5) Remove the two 6 x 12 mm bolt washers and remove the shift unit.

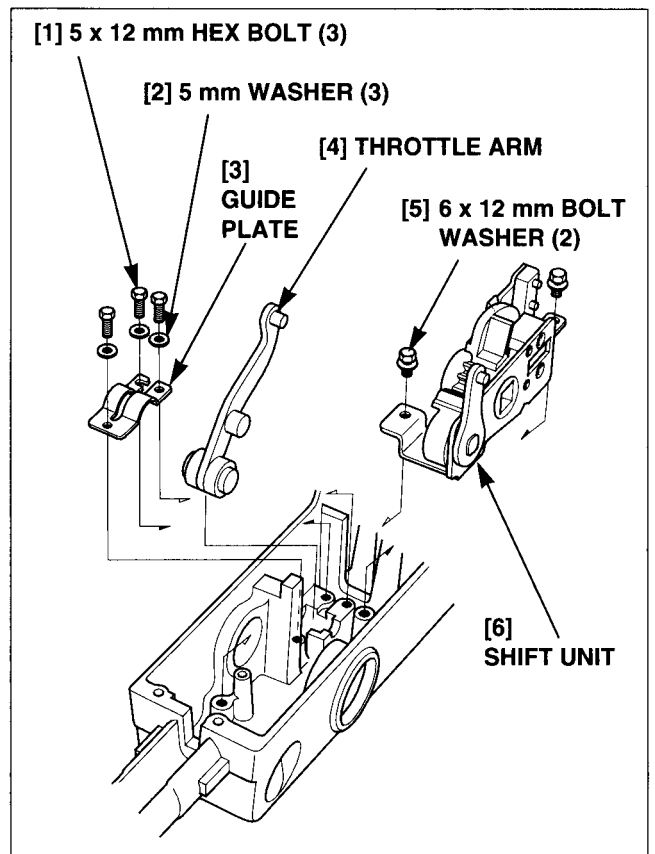


• **SHIFT UNIT DISASSEMBLY**

- 1) Remove the two screws and remove the lock plate.
- 2) Remove the two screws and remove the spring guide, spring, shift arm pin and roller.
- 3) Remove the shift gear and bushing from the shift plate.

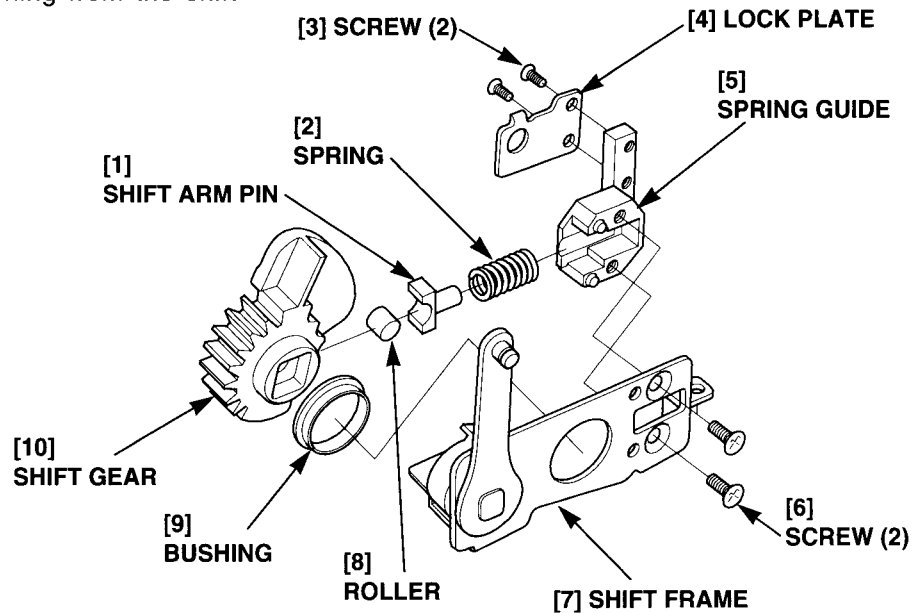


• **STEERING BRACKET**

- 1) Remove the 12 mm lock nut, 12 mm hex. nut, 14 mm wave washer and distance collar.
- 2) Remove the 12 x 80 mm hex bolt and 12 mm washer.
- 3) Remove the steering bracket.
- 4) Remove the 12 mm thrust washer.
- 5) Remove the steering handle bushings if necessary.
 - Replace with new ones when the steering handle bushings are removed.

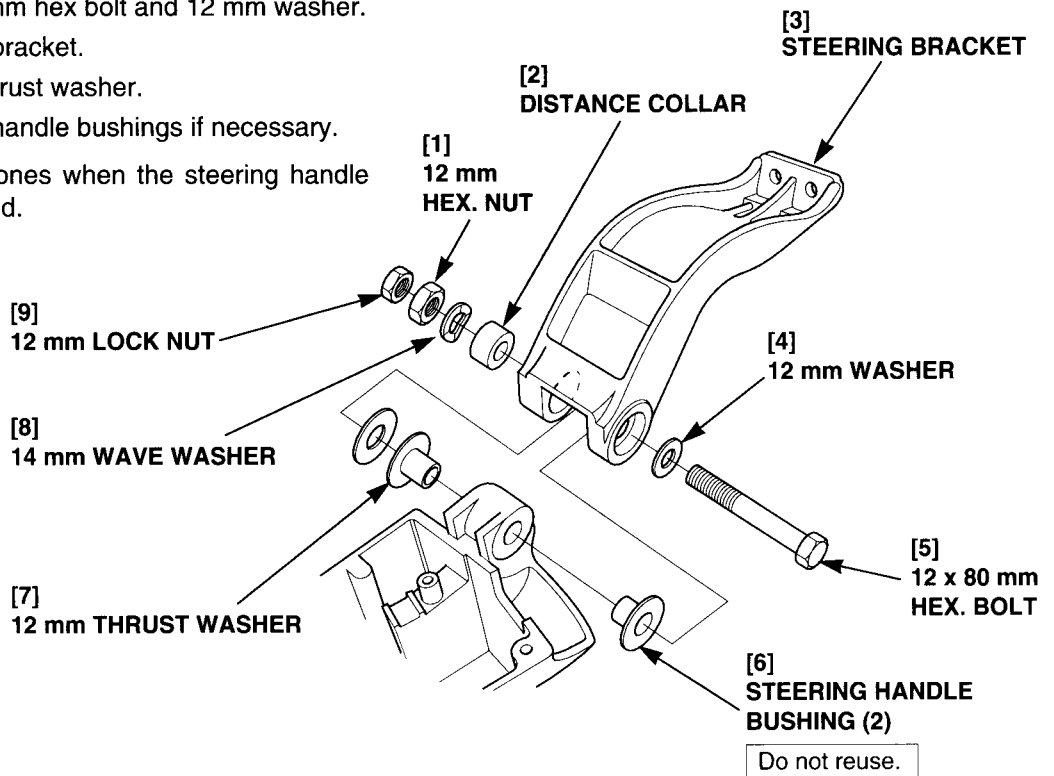

• **IGNITION SWITCH, EMERGENCY STOP SWITCH, INDICATOR**

- 1) Remove the emergency stop switch clip and 16 mm lock nut, and remove the emergency stop switch.
- 2) Remove the lock nut and remove the ignition switch.
- 3) Remove the indicator.

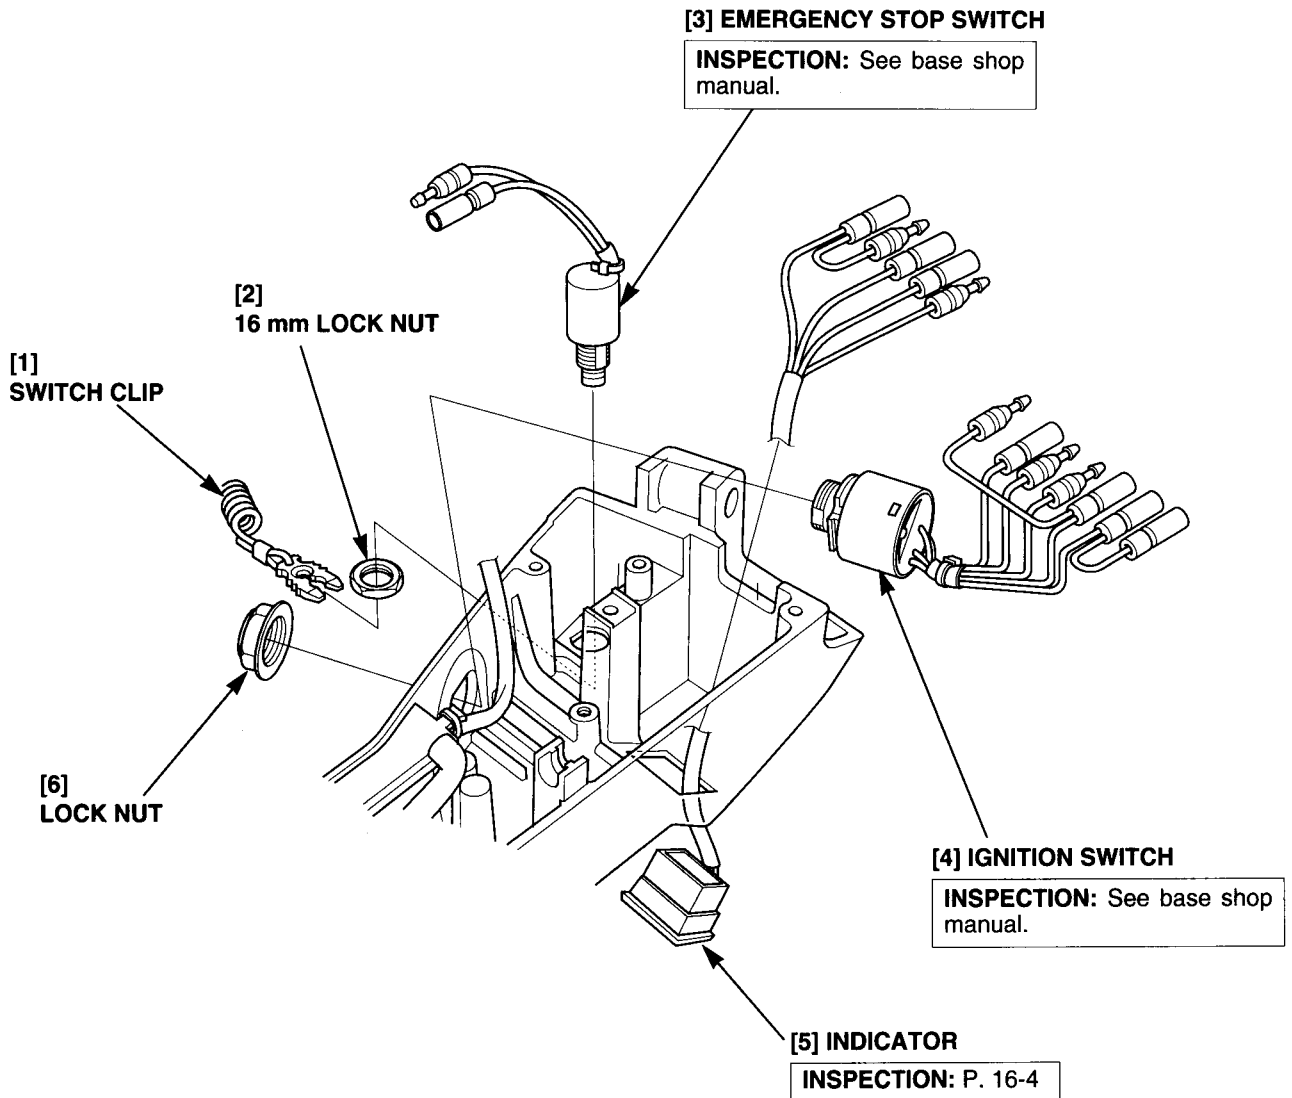


c. ASSEMBLY

Assembly is the reverse order of disassembly.

• INDICATOR

Install the indicator noting the direction.

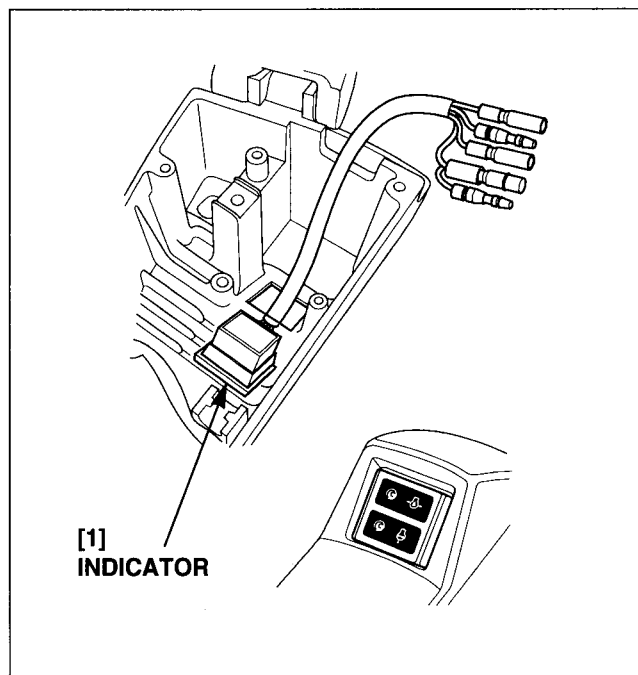


• IGNITION SWITCH, EMERGENCY STOP SWITCH

- Install the switch by aligning the cutout of the switch with the flat section of the installation hole as shown.
- Tighten the lock nut to the specified torque.


Torque:

Ignition switch lock nut: 7 N•m (0.7 kgf•m, 5.1 lbf•ft)


16 mm lock nut: 1.5 N•m (0.15 kgf•m, 1.1 lbf•ft)

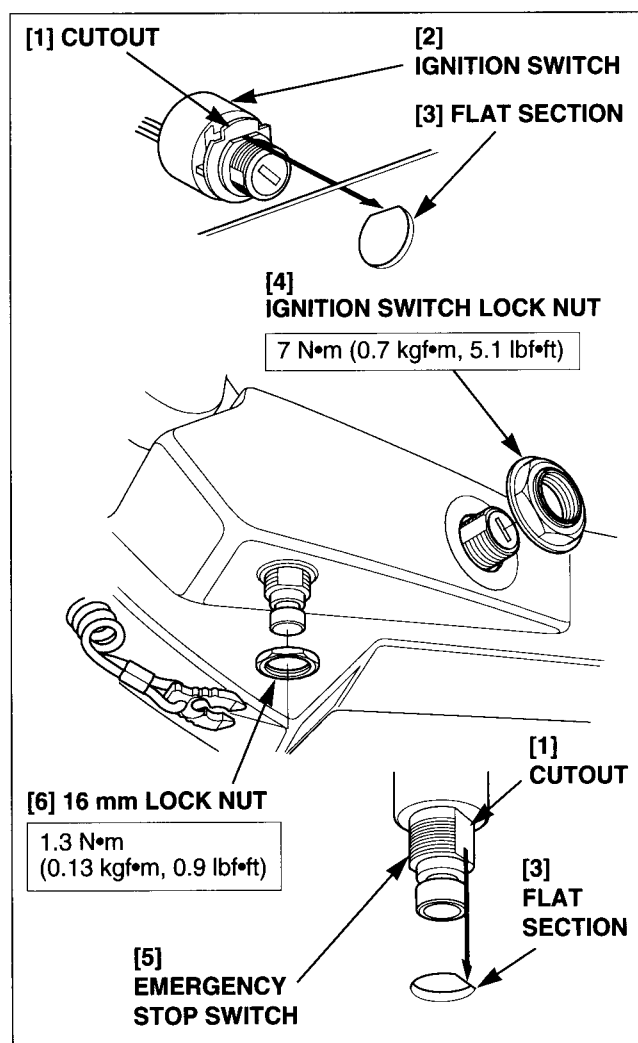


• SHIFT LEVER, SHIFT UNIT, THROTTLE ARM

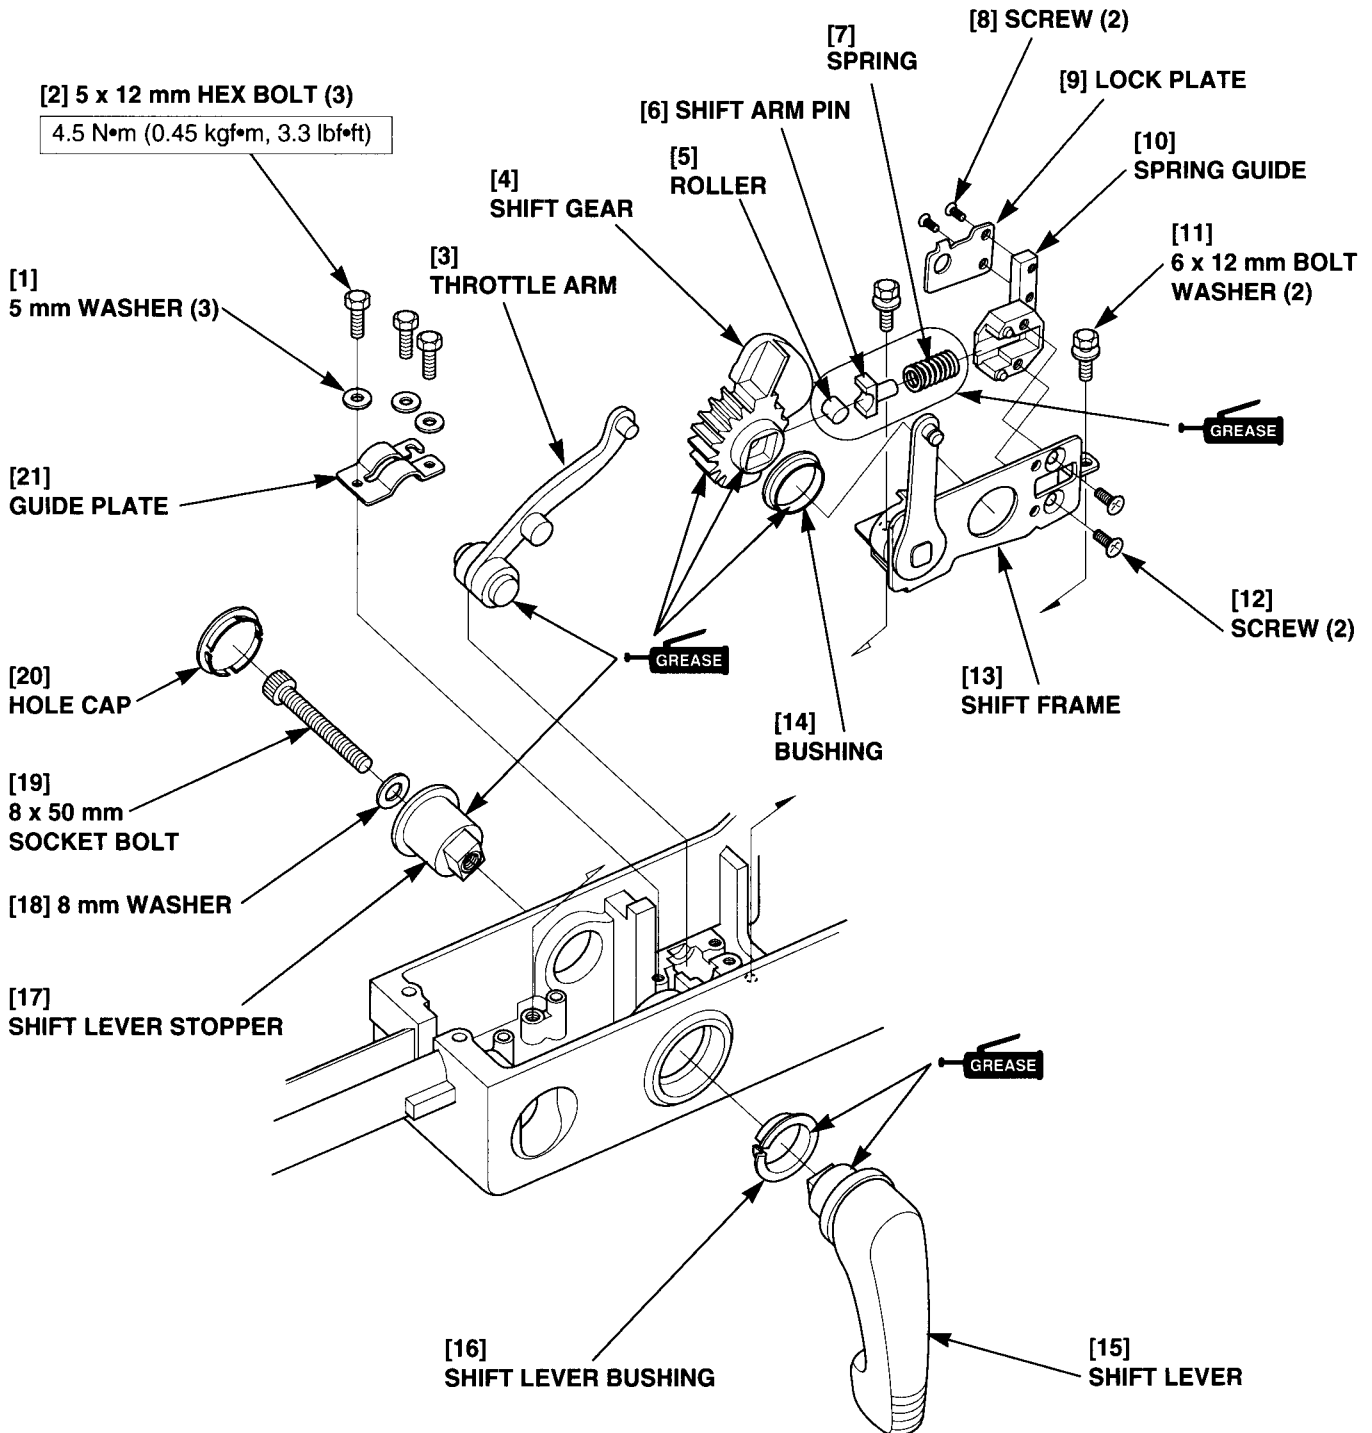


- Apply grease to the:
 - roller, shift arm pin and spring.
 - gear and roller sliding section of the shift gear.
 - bushing.
 - gear of the shift arm.
- Note the installation direction of the shift arm pin.
- Set the roller and shift gear in the neutral position as shown.
- Install the shift gear and spring guide assembly with the shift arm set in vertical position as shown.

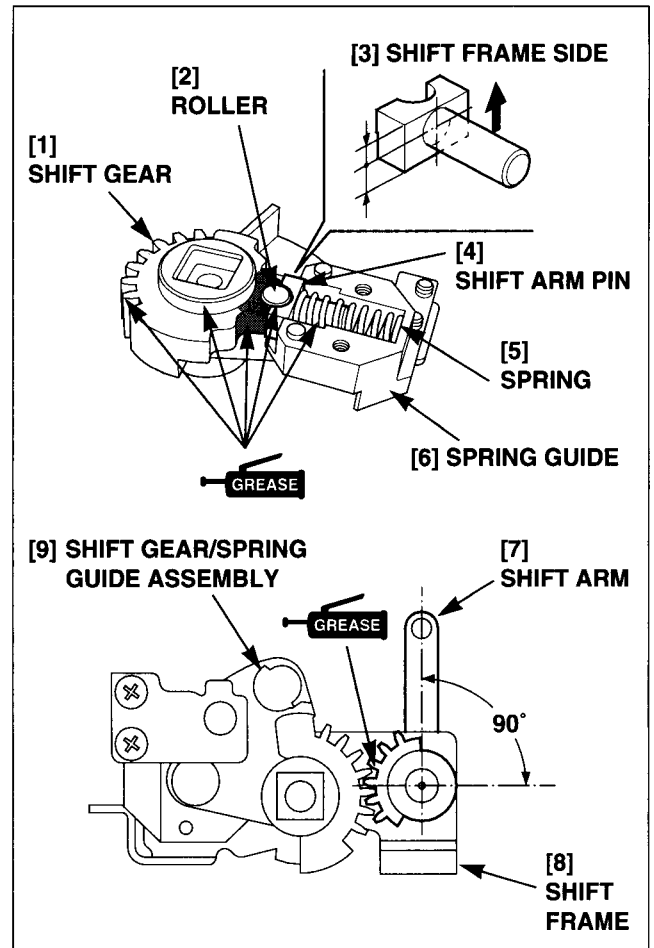

- Apply grease to the pivot point of the throttle arm.
 - Tighten the 5 x 12 mm hex bolt to the specified torque.
- TORQUE: 4.5 N•m (0.45 kgf•m, 3.3 lbf•ft)**

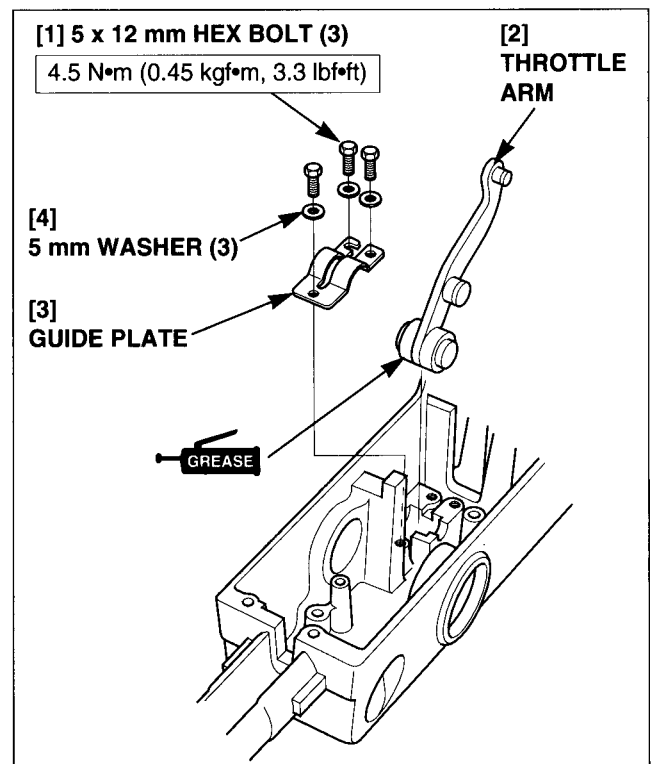


- Apply grease to the:
 - sliding surface of the lever stopper.
 - sliding surface of the shift lever.
 - busing.
- Position the shift arm in a vertical position to align the shift unit square and shift gear. Install the shift lever.
- Install the shift lever by aligning the square of the lever stopper and that of the shift gear.

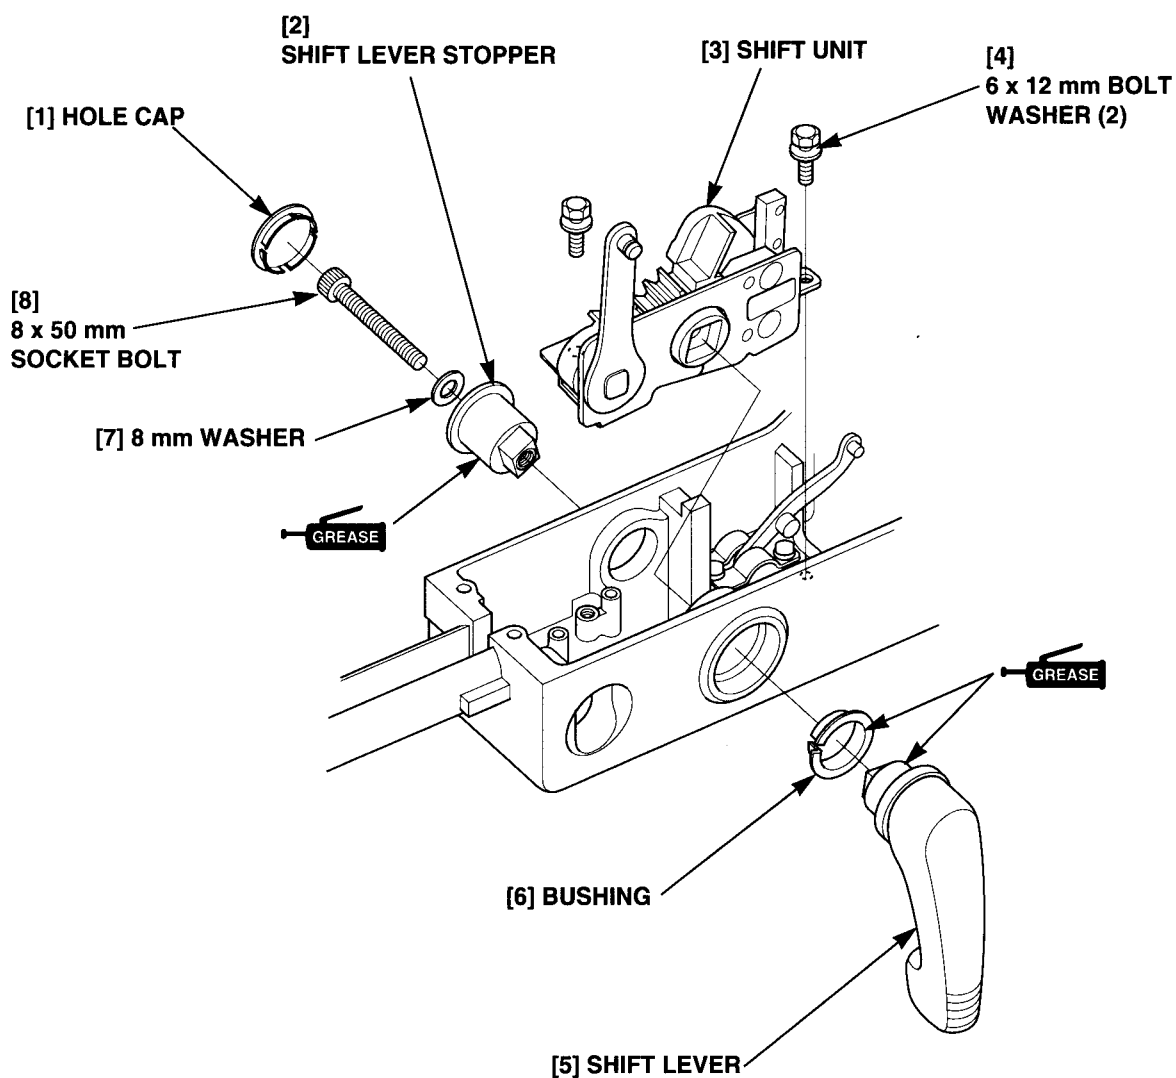


• **POWER TRIM/TILT SWITCH**

- Power trim/tilt type only: Install the power tilt switch so that the "UP" mark is at the bracket bolt installation hole side (lower side) as shown, and install the switch grommet noting the direction.
- Power trim/tilt type only: Replace the wire band with a new one, if it has been cut. After securing the wires with a new wire band, cut the end of the wire band so the projected end length is 10 - 20 mm (0.4 - 0.8 in).
- Tighten the 5 x 10 mm hex. bolt to the specified torque.

Torque: 4.5 N•m (0.45 kg•m, 3.3 lbf•ft)

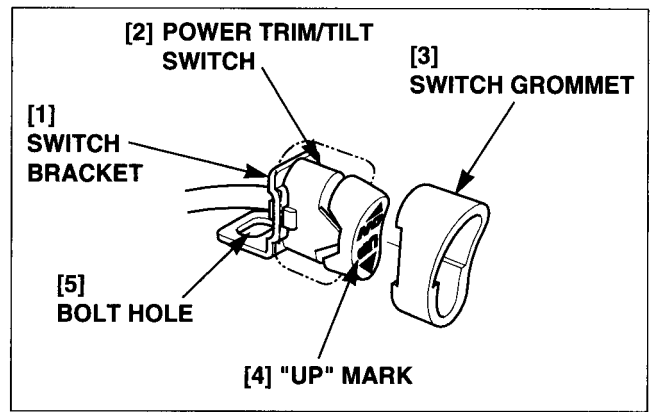


- Power trim/tilt type only: Check whether the power tilt switch wire does not interfere with the 5 x 8 mm hex bolt head.

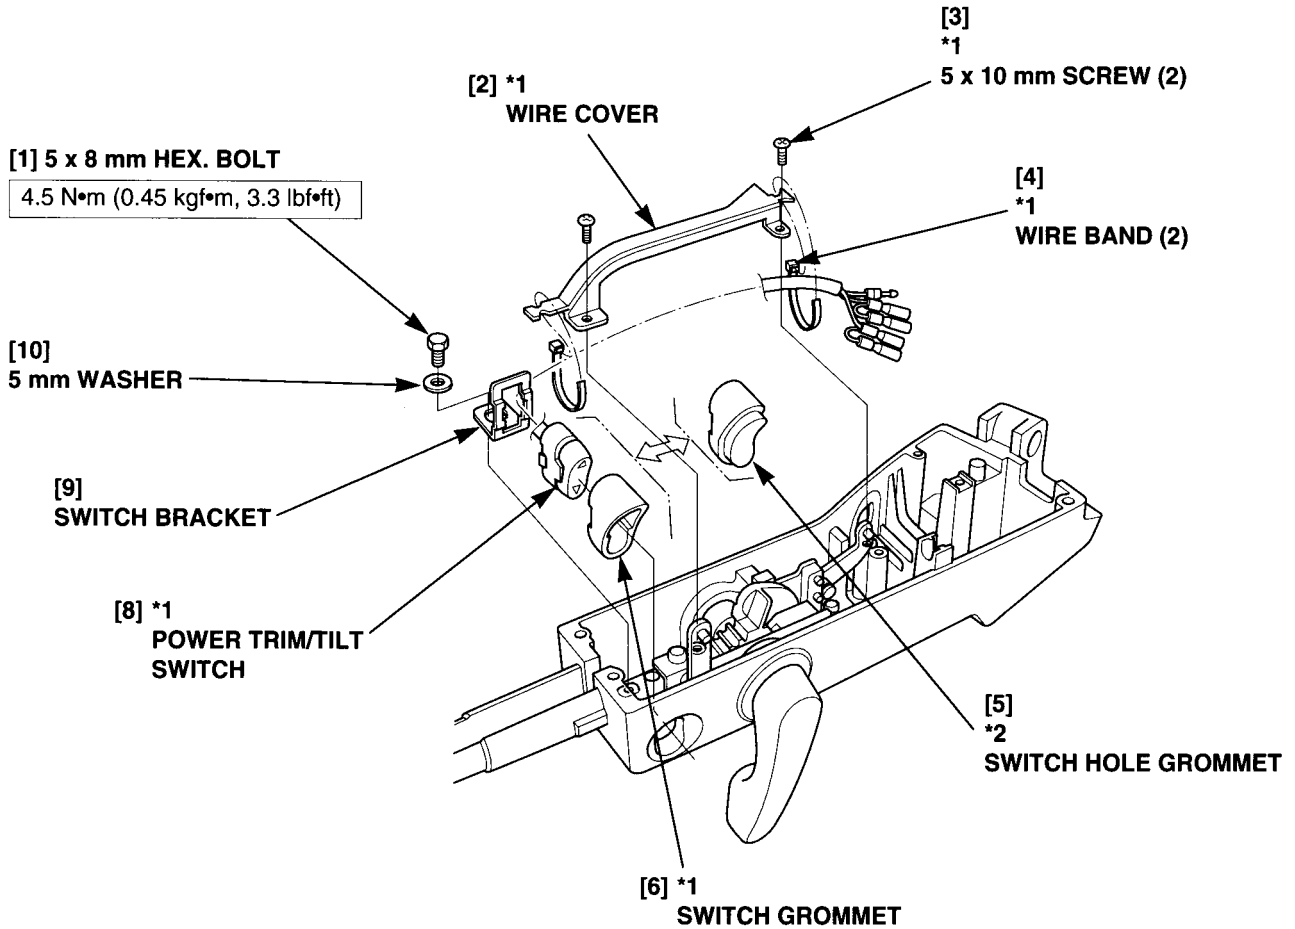

[7]
 *1: Power Trim/Tilt Type
 *2: Gas assisted Tilt Type


• THROTTLE ROD, THROTTLE GRIP

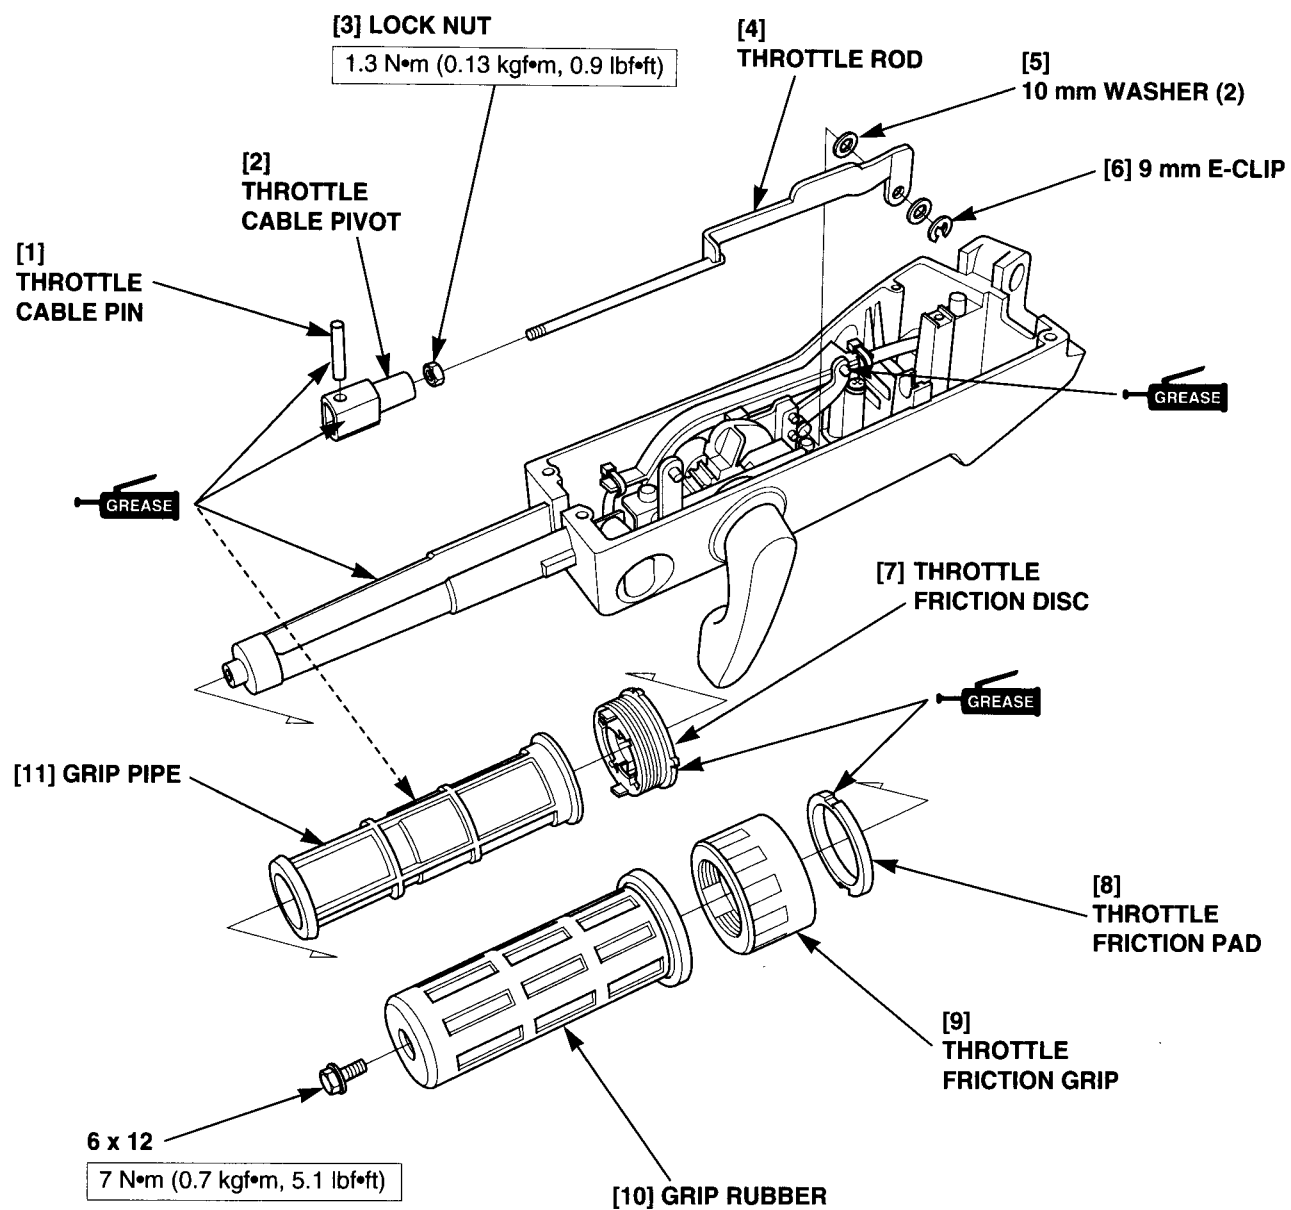


- Loosen the lock nut fully and screw the cable pivot as shown. Tighten the lock nut to the specified torque.

TORQUE: 1.3 N•m (0.13 kgf•m, 0.9 lbf•ft)


- Apply grease to the sliding surfaces of the cable pivot.
- Apply grease to the pivot point of the throttle arm, then install the throttle rod with the two 10 mm washers and 9 mm w-clip.
- Power trim/tilt type only: Check whether the power tilt switch wire does not interfere with throttle rod.

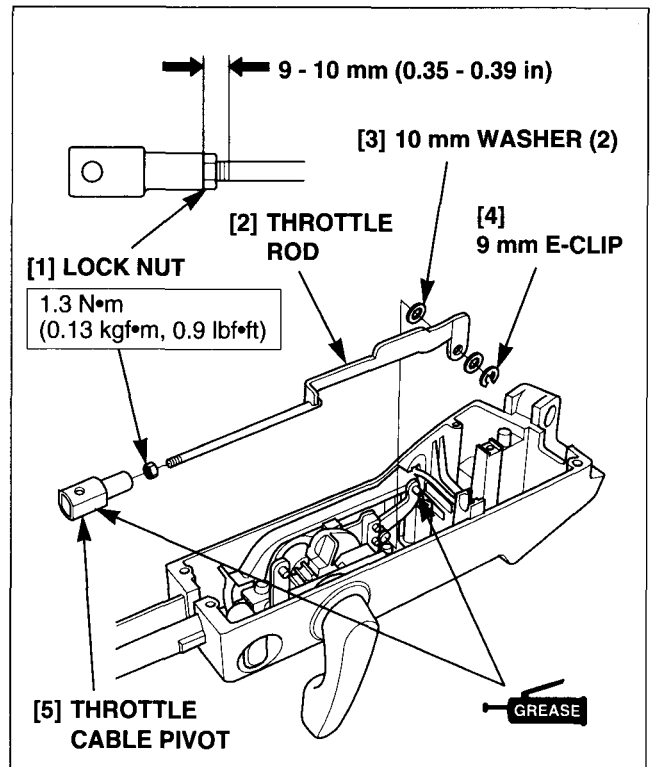


- Apply grease to the throttle grip installation surface of the tiller handle and friction disc. Install the friction disc by aligning the grooves of the throttle friction disc with the bosses of the tiller handle as shown.

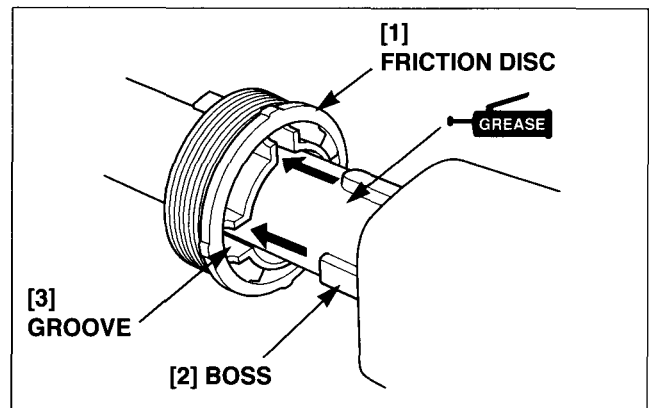


- Install the throttle cable pin on the cable pivot with the projected length at both ends of the pin equal as shown.

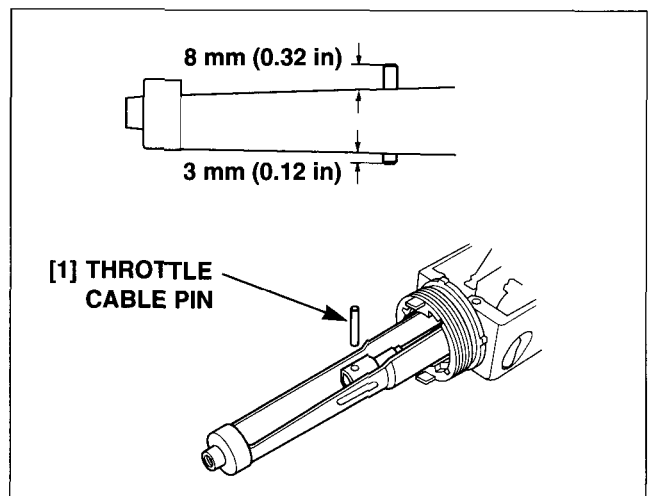

- Apply grease to the inside of the throttle grip pipe, inside of the friction grip, both ends of the throttle cable pin, handle pipe and both sides of the friction pad. Set the throttle friction pad on the grip pipe.
- Install the grip pipe on the tiller handle by slowly turning it clockwise.

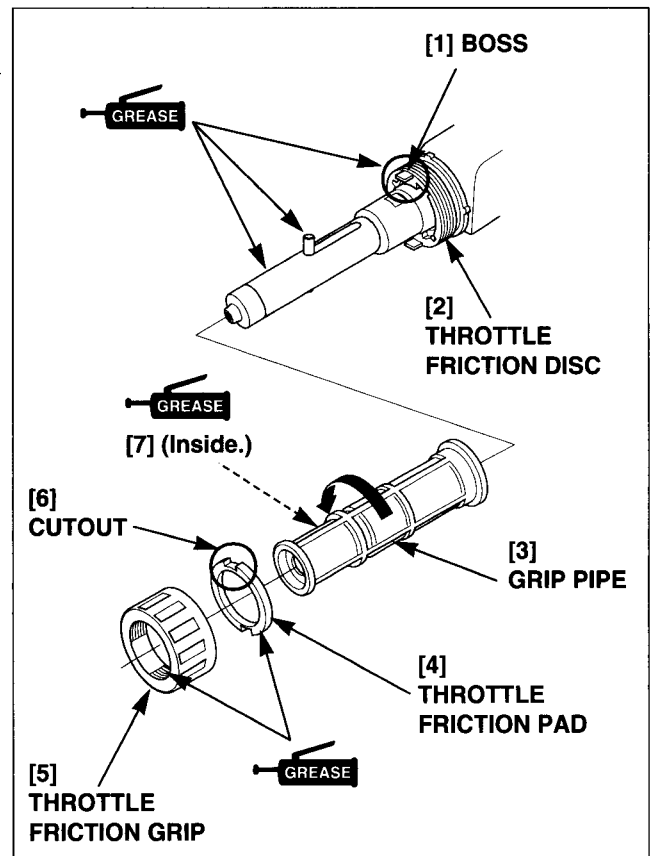

- Tighten the throttle friction grip against the throttle friction disc by aligning the cutout of the friction pad with the boss of the friction disc. Tighten the 6 x 12 mm flange bolt securely.
- Turn the grip pipe to the fully close position and install the grip rubber by aligning the "▲" mark with fully close mark.

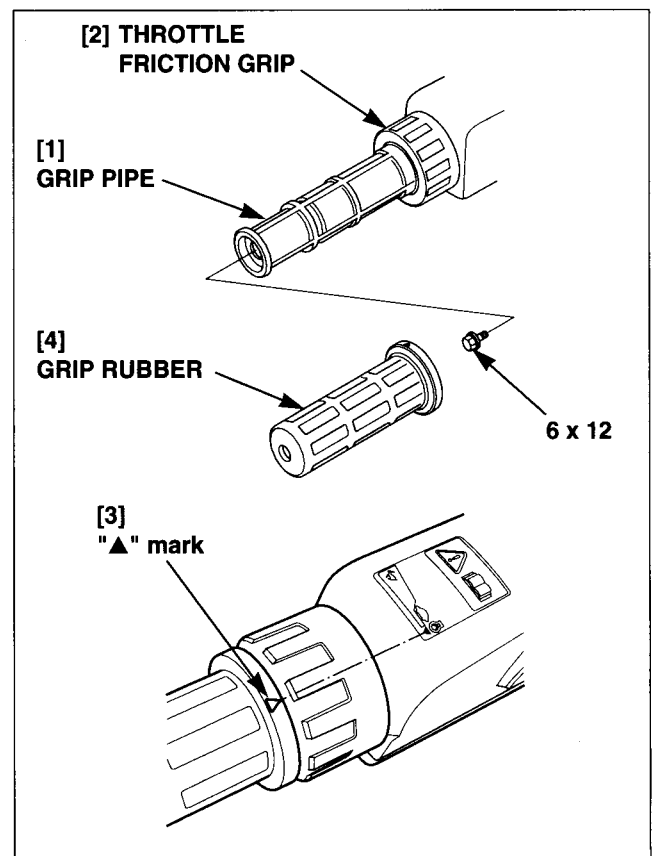


• **STEERING BRACKET**

- Install a new steering handle busing when it has been removed.
- Apply grease to the inside of the steering handle bushings, both ends of the 12 mm thrust washer, inside of the distance collar and both ends of the wave washer.
- Clean off grease on the threads of the 12 x 80 mm hex. bolt, then tighten the 12 mm hex. nut to the specified torque.

TORQUE: 29 N•m (3.0 kgf•m, 22 lbf•ft)

- Hold the 12 mm hex. nut and tighten the 12 mm lock nut to the specified torque.




TORQUE: 54 N•m (5.5 kgf•m, 40 lbf•ft)

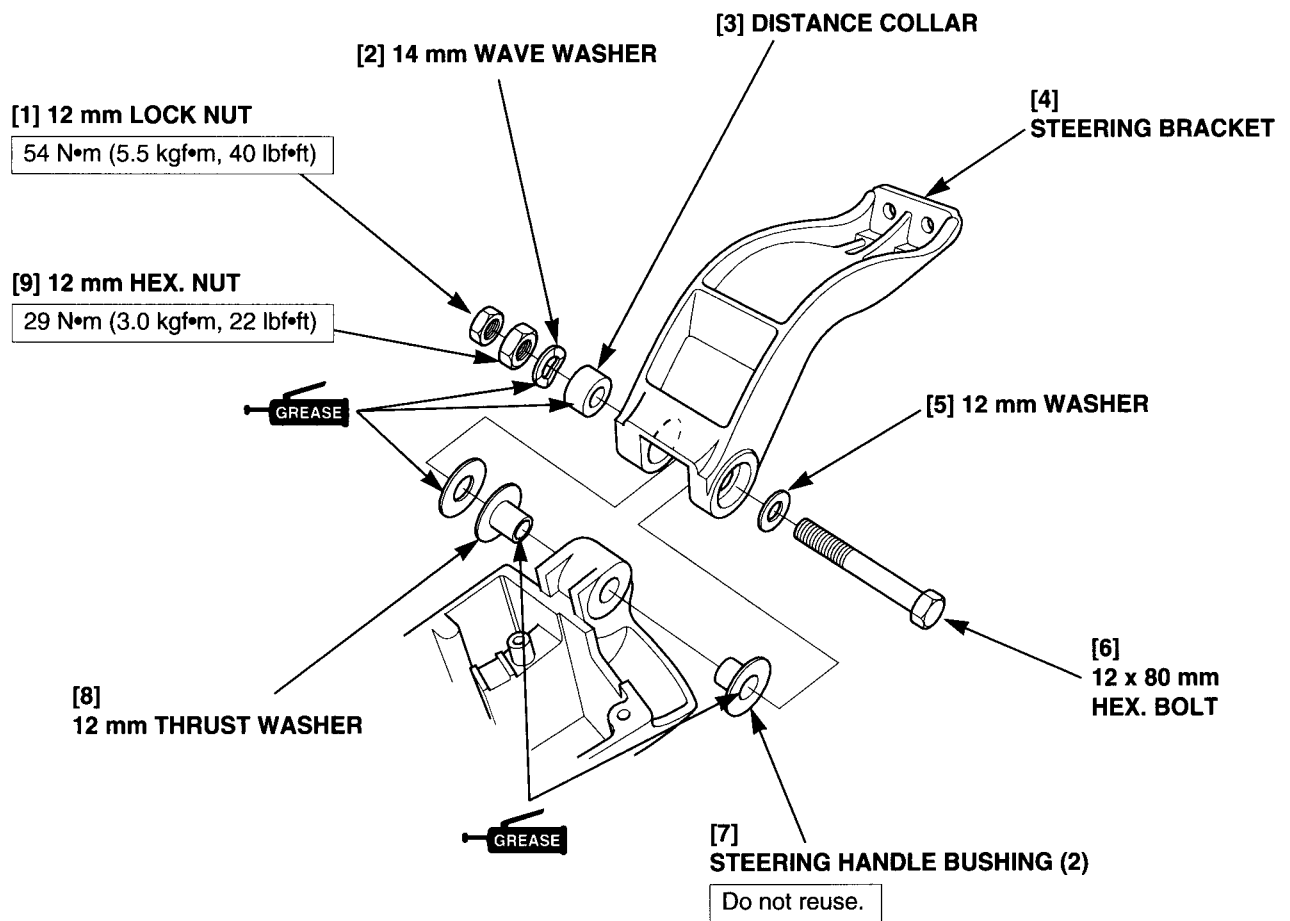


• TILLER HANDLE WIRE HARNESS

- Connect connectors to the wire connectors of the same color, cover the connectors with the connector covers and secure them with the harness band clip.
- Replace the wire band with a new one, if it has been cut. After securing the connectors and wires with a new wire band, cut the end of the wire band so the projected end length is 10 - 20 mm (0.4 - 0.8 in).
- Install the tiller handle wire harness by aligning the wire tie with the grommet as shown

Power Trim/Tilt Type:

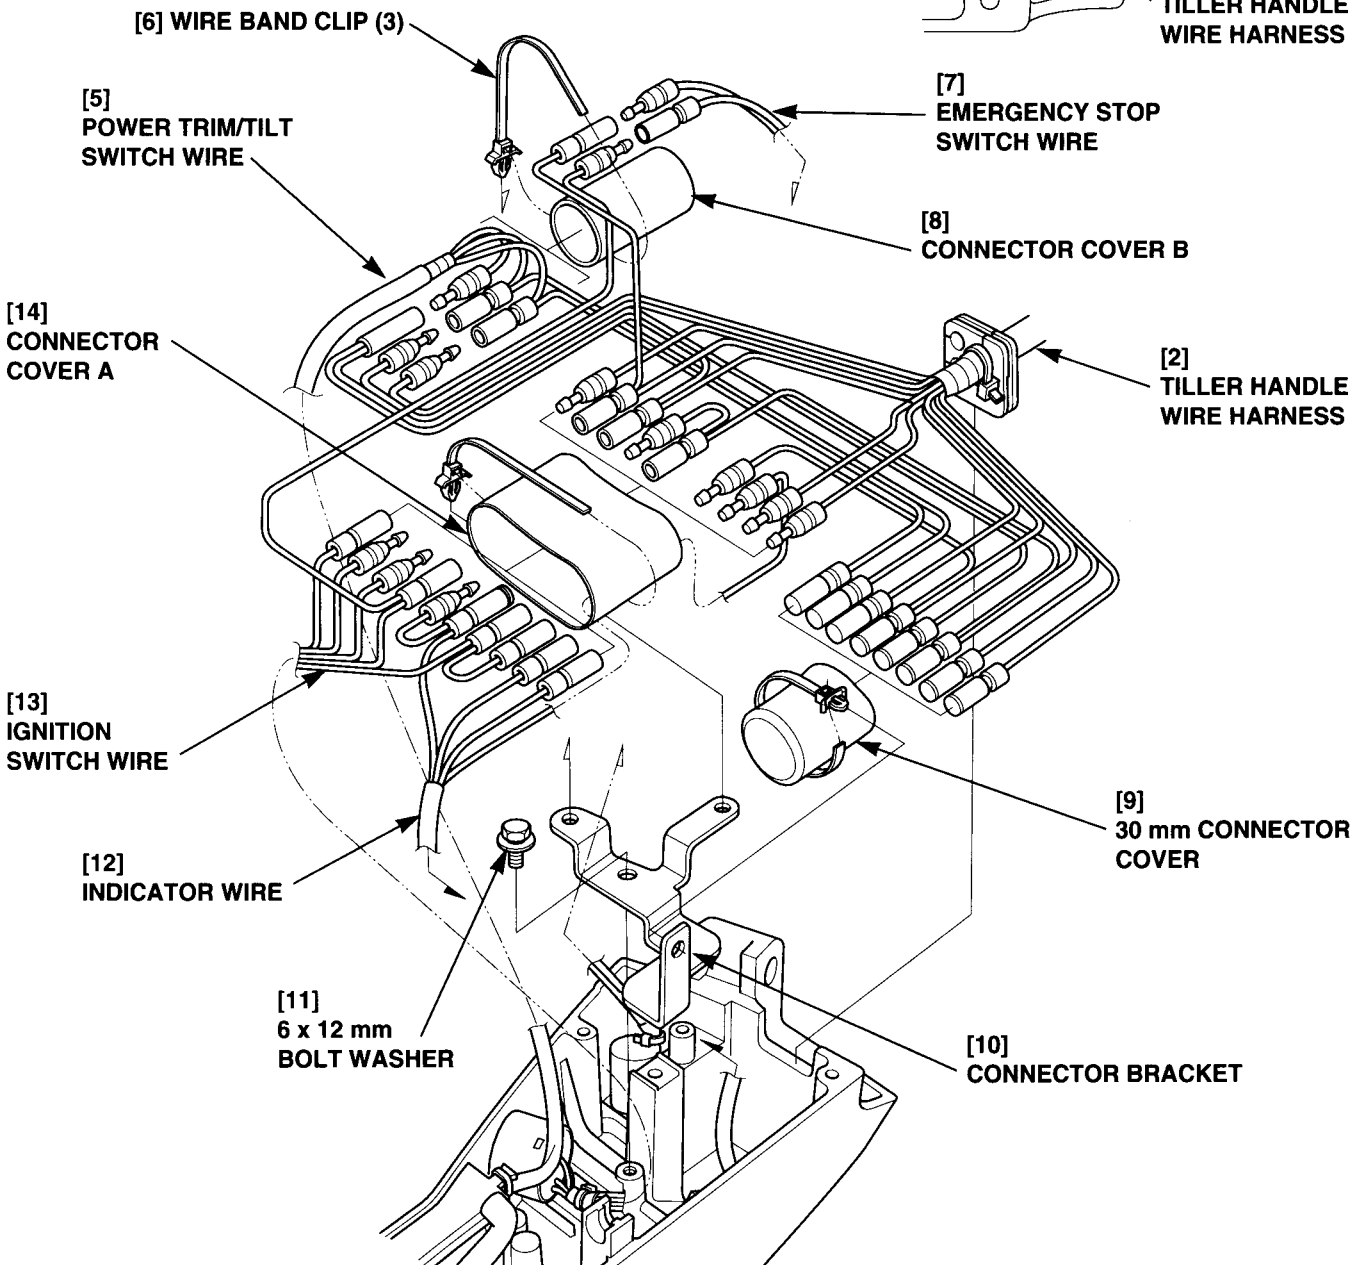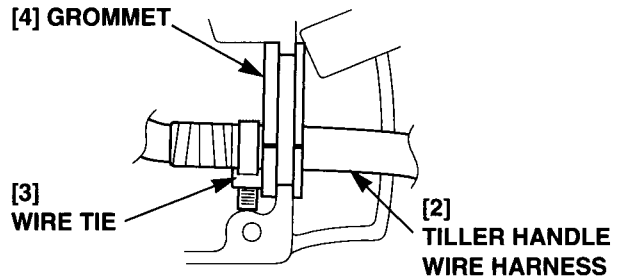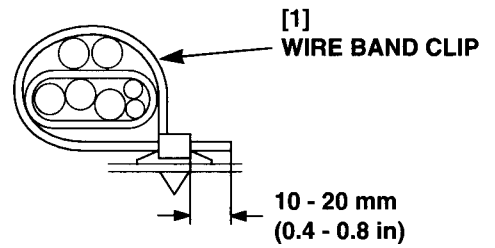

Gas Assisted Tilt Type:

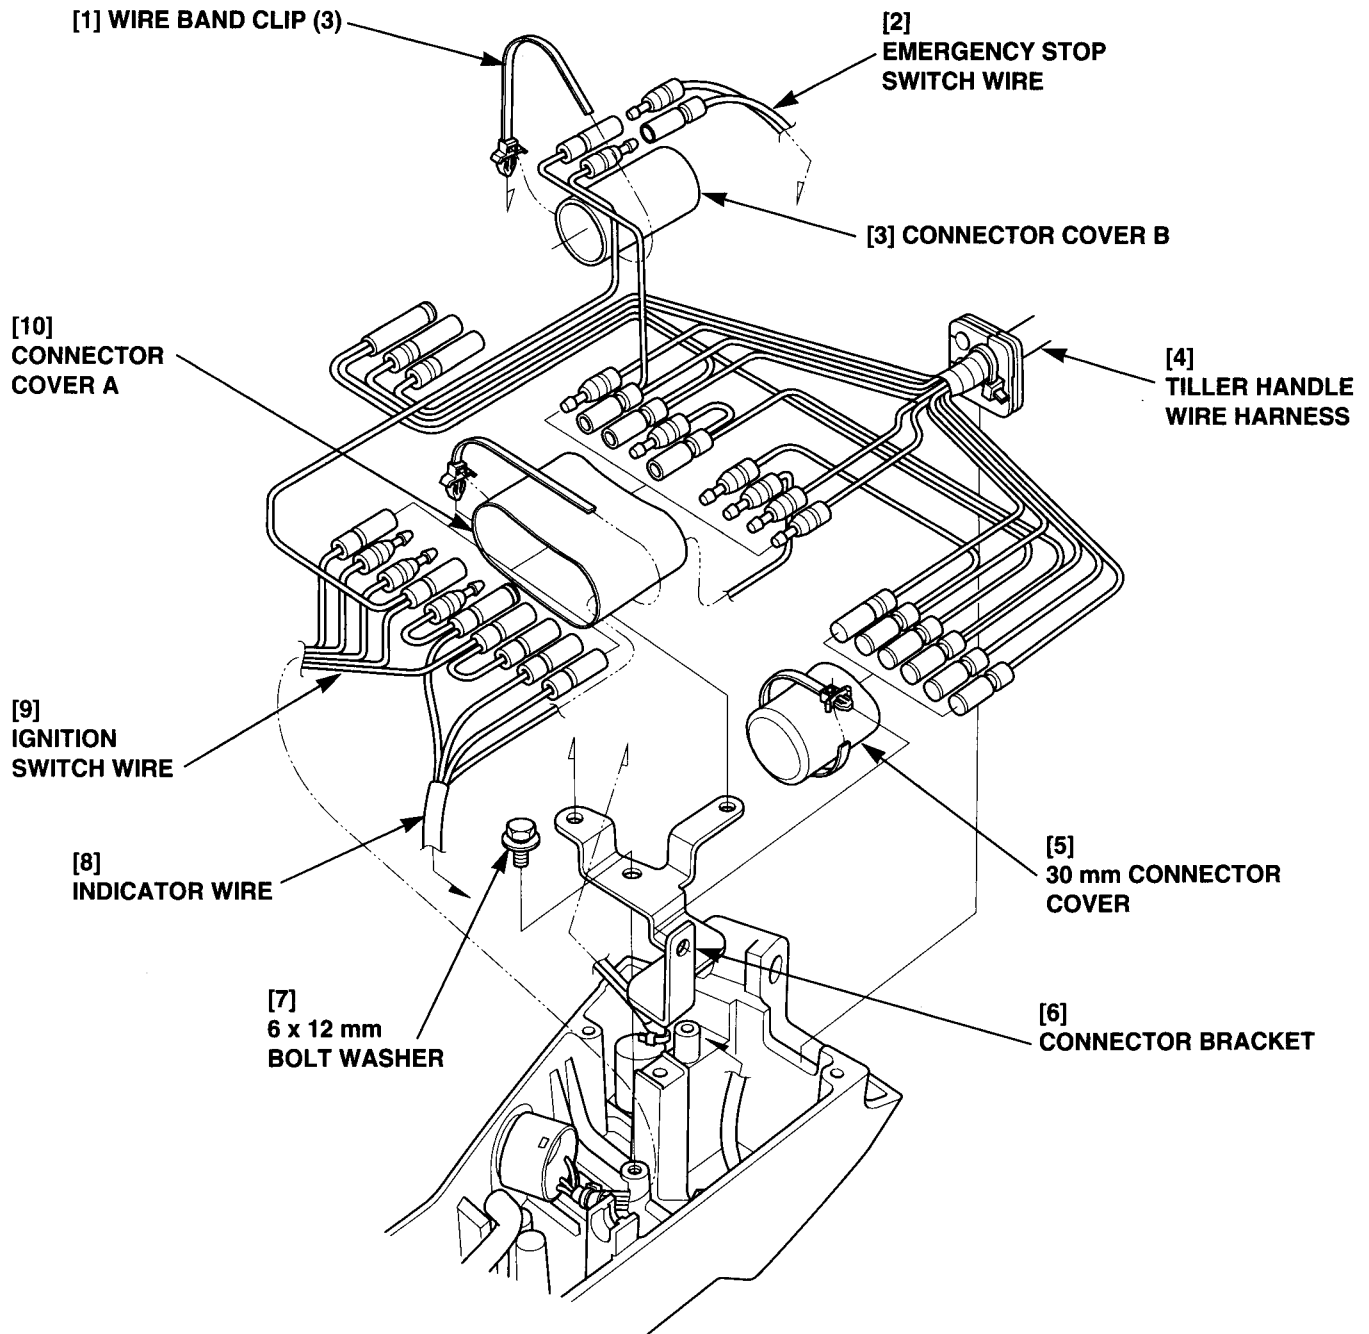


• **CONTROL CABLES, UNDER COVER**

- Install the cable holder as shown noting the installation direction and tighten the 6 x 12 mm bolt washer to the specified torque.

TORQUE: 0.7 N•m (0.7 kgf•m, 5.1 lbf•ft)

- Apply grease to the link pins of the throttle arm and shift arm, then connect the throttle cable and shift cable.
- Set the shift cable by aligning the groove of the cable with the cutout of the mounting point.
- Set the throttle cable by aligning the groove with the cutout of the cable holder.
- Route the throttle and shift cable through the grommet (upper hole: shift cable, lower hole: throttle cable) holes and set the grommet in the case correctly.
- Power trim/tilt type only: Check whether the power tilt switch wire does not interfere with the throttle cable.
- Tighten the cover screw to the specified torque.


TORQUE: 2.2 N•m (0.22 kgf•m, 1.6 lbf•ft)

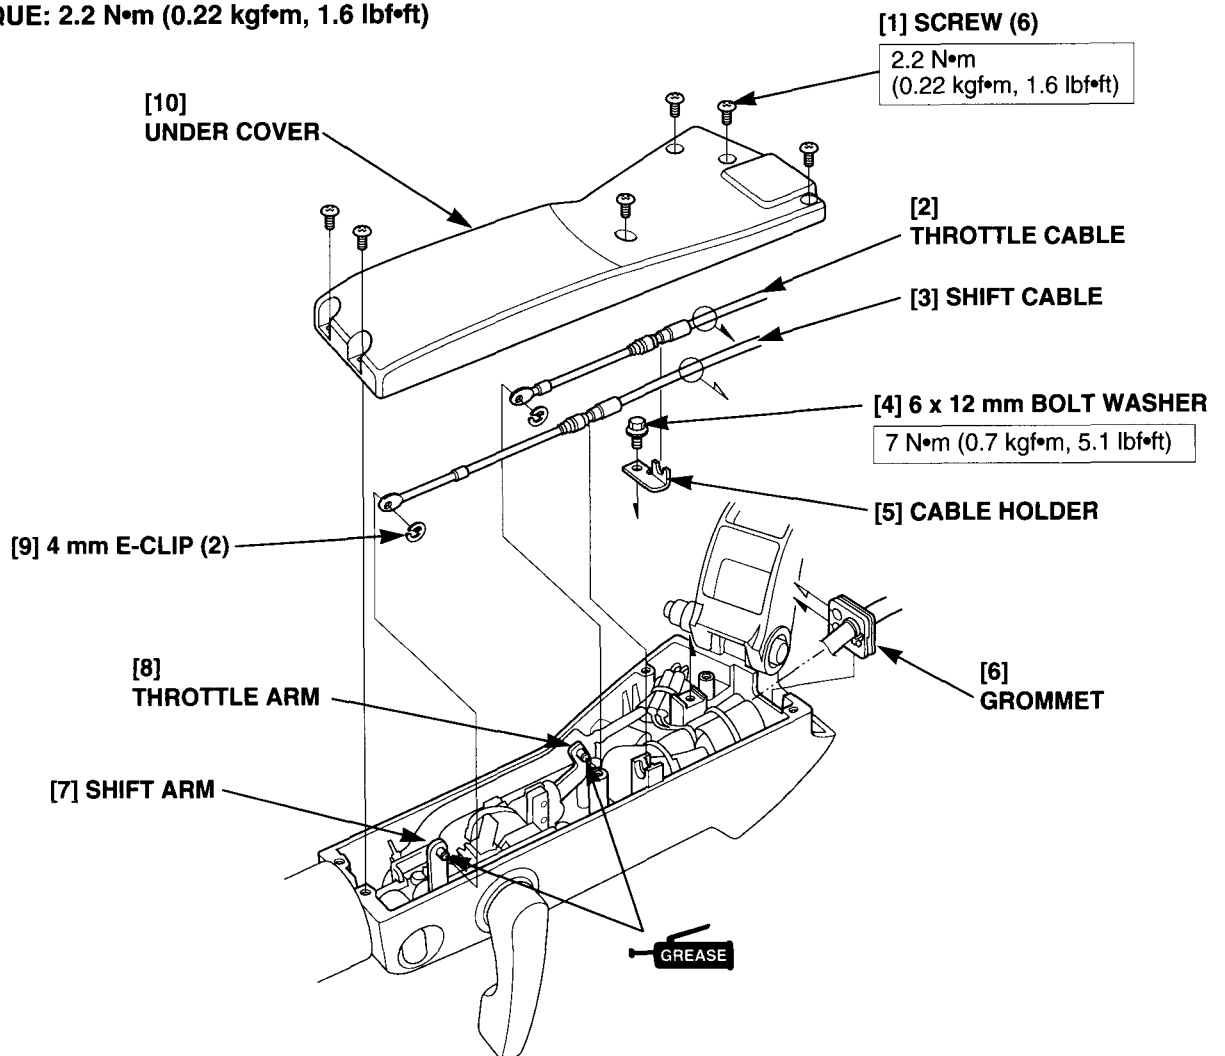


d. INSTALLATION

- 1) Install the long tiller handle assembly to the motor.
- 2) Install the 10 mm washers and tighten the 10 mm self-locking nuts to the specified torque.


TORQUE: 34 N•m (3.5 kgf•m, 25 lbf•ft)

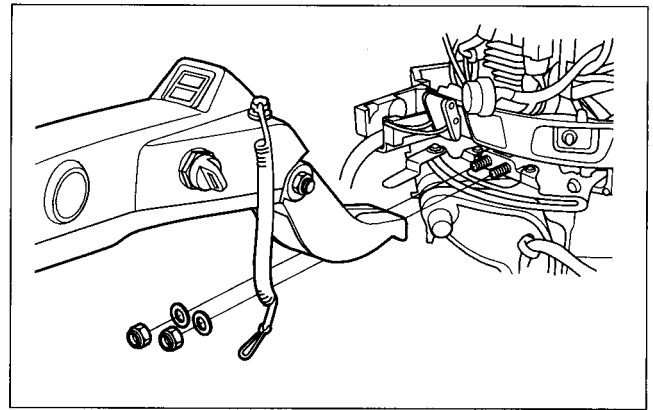


- 3) Pass the long tiller handle wire harness through the under case grommet, and secure it with the wire harness clamp.
- 4) Set the control cable setting plate into the groove of the under case.
- 5) Pass the control cables through the under case grommet and set the control cables by aligning the groove of the control cable with the cutout of the control cable setting plate.
- 6) Adjust the control cables (throttle control cable length: P. 3-6, shift control cable length: P. 3-8).
- 7) Connect the control cables to the shift arm and throttle arm with the 6 mm plain washers and 6 mm lock pins

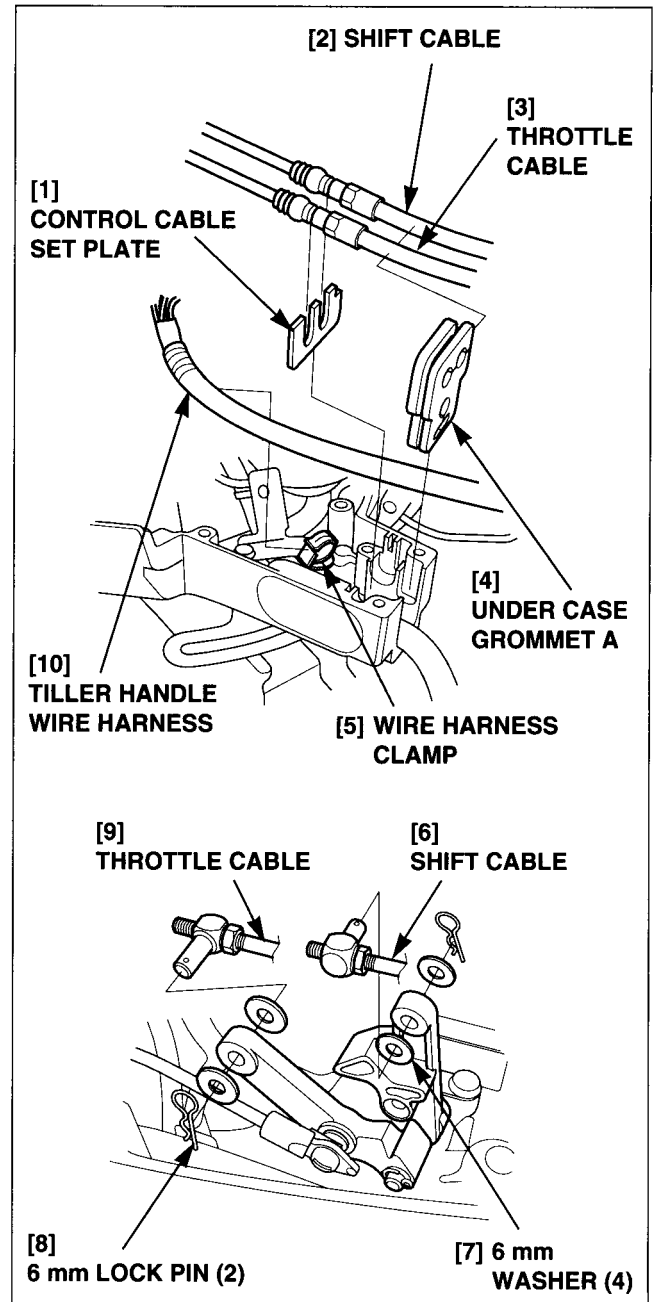

- 8) Install the separator cover with the two 6 x 28 mm flange bolts and two 6 mm washers and 6 x 40 mm hex. bolts.
- 9) Tighten the two 6 x 28 mm flange bolts and two 6 x 40 mm hex. bolts securely.

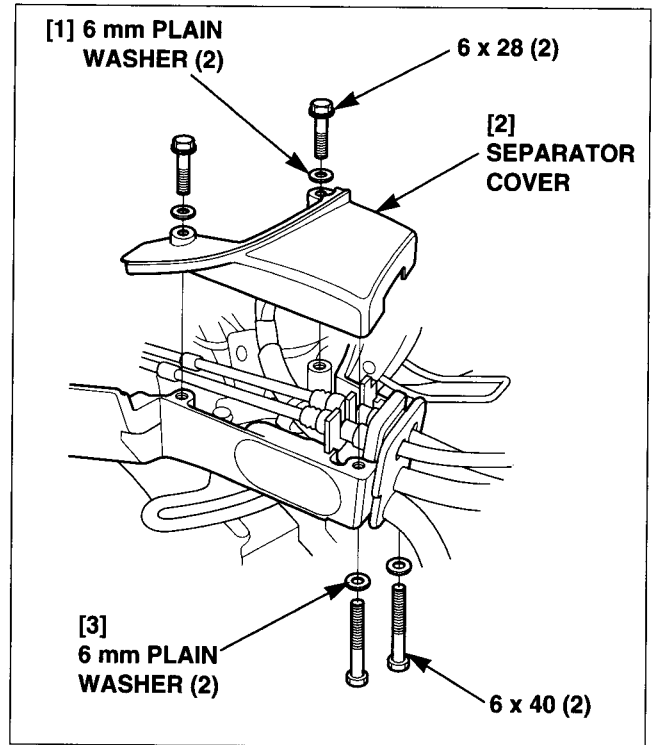

- 10) Connect the 14P connector of the long tiller handle wire harness to the main wire harness and set the 14P connector to the connector holder.
- 11) After installation check the throttle operation and gear shift operation.

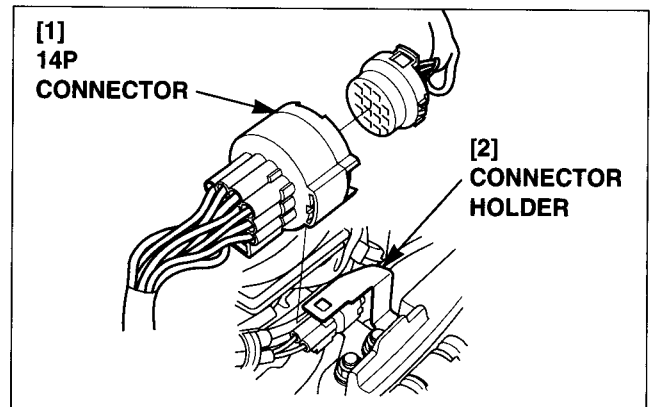

- 1. CDI UNIT
- 2. POWER COIL


- 3. ECT (Engine Coolant Temperature) SENSOR
- 4. INDICATOR

1. CDI UNIT

a. INSPECTION


Measure the resistance between the terminals and be sure that the measurements conform to the ranges shown in the table below.

- Use a tester that is equivalent to or higher than the performance specified;
Internal resistance: 20 k Ω /VDC, 9 k Ω /VAC
- Be careful not to touch the metallic part of the tester probe with your body, otherwise correct resistance value cannot be obtained.
- Read the tester manufacturer's operation instructions carefully before operation with a tester. Be sure the tester's battery is fully charged and check the meter before using the tester.
- Use a R x 1 scale of an commercially available multi-meter, and meter shows current flowing from negative (-) to positive (+).

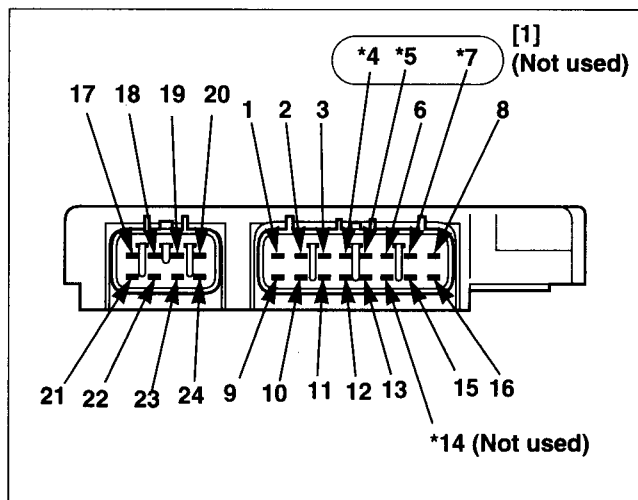

[2] unit: k Ω

		[3] Tester probe (+)											
		1	2	3	*4	*5	6	*7	8	9	10	11	12
[4] Tester probe (-)	1		∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
	2	∞		∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
	3	500 ~ ∞	500 ~ ∞		500 ~ ∞	∞	∞	∞	500 ~ ∞	500 ~ ∞	∞	500 ~ ∞	500 ~ ∞
	*4	60 ~ 300	100 ~ 400	11 ~ 45		∞	19 ~ 80	∞	13 ~ 60	6.5 ~ 28	∞	6 ~ 26	7 ~ 30
	*5	∞	∞	100 ~ 400	34 ~ 150		100 ~ 500	∞	100 ~ 400	60 ~ 300	∞	60 ~ 300	70 ~ 300
	6	∞	∞	∞	∞		∞	∞	∞	∞	∞	∞	∞
	*7	∞	∞	∞	∞	∞		∞	∞	∞	∞	∞	∞
	8	60 ~ 300	90 ~ 400	15 ~ 60	60 ~ 300	∞	22 ~ 60	∞		9.5 ~ 40	∞	9 ~ 36	18 ~ 80
	9	17 ~ 70	16 ~ 70	2 ~ 8.5	12 ~ 50	∞	5 ~ 20	∞	2.6 ~ 11		∞	0.4 ~ 1.8	0.8 ~ 3.6
	10	36 ~ 150	70 ~ 300	14 ~ 60	50 ~ 200	∞	20 ~ 90	∞	16 ~ 70	8.5 ~ 34		8.5 ~ 34	10 ~ 40
	11	17 ~ 70	15 ~ 60	1.4 ~ 6	11 ~ 50	∞	4.6 ~ 19	∞	2 ~ 8.5	0.4 ~ 1.8	∞		0.8 ~ 3.4
	12	18 ~ 80	30 ~ 150	5.5 ~ 24	24 ~ 100	∞	4 ~ 16	∞	7 ~ 28	3 ~ 13	∞	2.4 ~ 10	
	13	16 ~ 70	30 ~ 150	5.5 ~ 24	24 ~ 100	∞	3.6 ~ 15	∞	7 ~ 28	3 ~ 13	∞	2.4 ~ 10	7 ~ 28
	*14	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
	15	60 ~ 300	90 ~ 400	15 ~ 60	60 ~ 300	∞	22 ~ 100	∞	17 ~ 70	9.5 ~ 38	∞	9 ~ 36	14 ~ 60
	16	60 ~ 300	90 ~ 400	15 ~ 60	60 ~ 300	∞	22 ~ 100	∞	17 ~ 70	9.5 ~ 38	∞	9 ~ 36	14 ~ 60
17	20 ~ 150	30 ~ 150	7 ~ 28	22 ~ 90	∞	11 ~ 45	∞	8 ~ 32	4.8 ~ 20	∞	4.4 ~ 17	5 ~ 20	
18	24 ~ 150	26 ~ 150	7 ~ 28	22 ~ 90	∞	11 ~ 45	∞	8 ~ 32	4.8 ~ 20	∞	4.4 ~ 17	5 ~ 20	
19	20 ~ 90	19 ~ 80	3.8 ~ 16	16 ~ 70	∞	7 ~ 28	∞	4.6 ~ 18	2.2 ~ 9.5	∞	1.8 ~ 8	2.4 ~ 10	
20	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	
21	24 ~ 150	26 ~ 150	7 ~ 28	22 ~ 100	∞	11 ~ 45	∞	8 ~ 32	4.8 ~ 20	∞	4.4 ~ 18	5 ~ 20	
22	16 ~ 70	15 ~ 60	1.4 ~ 6	11 ~ 50	∞	4.2 ~ 17	∞	2 ~ 8.5	0.4 ~ 1.8	∞	0	0.4 ~ 1.6	
23	16 ~ 70	15 ~ 60	1.4 ~ 6	11 ~ 50	∞	4.2 ~ 17	∞	2 ~ 8.5	0.4 ~ 1.8	∞	0	0.4 ~ 1.6	
24	22 ~ 90	22 ~ 90	5 ~ 20	18 ~ 60	∞	8.5 ~ 34	∞	6 ~ 24	2.8 ~ 12	∞	2.6 ~ 11	3.2 ~ 13	

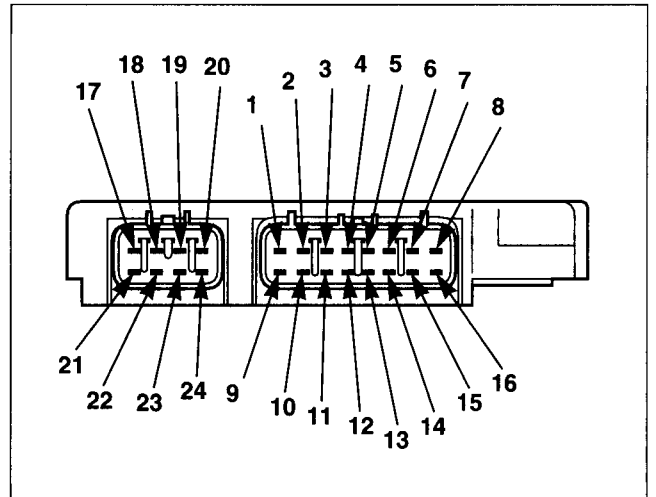

[1] unit: kΩ


		[2] Tester probe (+)											
		13	*14	15	16	17	18	19	20	21	22	23	24
[3] Tester probe (-)	1	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
	2	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
	3	500 ~ ∞	∞	500 ~ ∞	500 ~ ∞	500 ~ ∞	∞	500 ~ ∞	500 ~ ∞	500 ~ ∞	500 ~ ∞	500 ~ ∞	500 ~ ∞
	*4	7 ~ 30	∞	13 ~ 60	13 ~ 60	12 ~ 50	12 ~ 50	9 ~ 36	24 ~ 100	12 ~ 60	6 ~ 24	6 ~ 24	10 ~ 45
	*5	60 ~ 300	∞	100 ~ 400	90 ~ 100	70 ~ 300	70 ~ 300	60 ~ 300	300 ~ ∞	70 ~ 300	60 ~ 300	60 ~ 300	60 ~ 300
	6	∞	∞	∞	∞	∞		∞	∞	∞	∞	∞	∞
	*7	∞	∞	∞	∞	∞	∞		∞	∞	∞	∞	∞
	8	11 ~ 15	∞	17 ~ 70	17 ~ 70	15 ~ 60	15 ~ 60	12 ~ 50	100 ~ 500	15 ~ 50	9 ~ 36	9 ~ 38	13 ~ 60
	9	0.8 ~ 3.6	∞	2.6 ~ 11	2.6 ~ 11	4.2 ~ 18	4.2 ~ 18	2.2 ~ 9	8 ~ 32	4.2 ~ 18	0.4 ~ 2	0.4 ~ 2	3 ~ 14
	10	10 ~ 40	∞	15 ~ 70	15 ~ 70	14 ~ 60	14 ~ 60	11 ~ 45	22 ~ 90	14 ~ 60	8.5 ~ 36	8.5 ~ 36	12 ~ 50
	11	0.4 ~ 1.6	∞	2 ~ 8	2 ~ 8	3.0 ~ 15	3.8 ~ 16	1.8 ~ 7	5 ~ 34	3.6 ~ 15	0	0	2.4 ~ 10
	12	3.2 ~ 13	∞	8 ~ 34	7 ~ 28	7.5 ~ 32	7.5 ~ 32	5 ~ 20	6 ~ 32	7.5 ~ 32	2.6 ~ 11	2.6 ~ 11	6.5 ~ 26
	13		∞	10 ~ 40	6.5 ~ 28	7.5 ~ 32	7.5 ~ 32	5 ~ 22	8 ~ 32	7.5 ~ 32	2.6 ~ 11	2.6 ~ 11	6.5 ~ 26
	*14	∞		∞	∞	∞	∞	∞	∞	∞	∞	∞	∞
	15	10 ~ 45	∞		12 ~ 50	15 ~ 60	15 ~ 60	12 ~ 50	28 ~ 150	15 ~ 60	9 ~ 38	9 ~ 38	13 ~ 60
	16	10 ~ 45	∞	17 ~ 70		15 ~ 60	15 ~ 60	12 ~ 50	28 ~ 150	15 ~ 60	9 ~ 38	9 ~ 38	13 ~ 60
	17	5.5 ~ 22	∞	7.5 ~ 32	8 ~ 32		3.5 ~ 34	6 ~ 26	10 ~ 45	8.5 ~ 34	4.4 ~ 18	4.4 ~ 18	7 ~ 30
	18	5.5 ~ 22	∞	7.5 ~ 32	8 ~ 32	8 ~ 34		6 ~ 26	10 ~ 45	8.5 ~ 34	4.4 ~ 18	4.4 ~ 18	7 ~ 30
	19	2.4 ~ 10	∞	4.4 ~ 18	4.4 ~ 18	5.5 ~ 24	5.5 ~ 24		6.5 ~ 28	5.5 ~ 24	1.8 ~ 8	1.8 ~ 8	4.6 ~ 19
	20	∞	∞	∞	∞	∞	∞	∞		∞	∞	∞	∞
	21	5 ~ 20	∞	7.5 ~ 32	8 ~ 32	8 ~ 34	8.6 ~ 34	6 ~ 28	10 ~ 45		4.4 ~ 18	4.4 ~ 18	7 ~ 20
	22	0.4 ~ 1.6	∞	2 ~ 8	2 ~ 8	3.6 ~ 15	3.8 ~ 16	1.6 ~ 7	4 ~ 16	3.8 ~ 16		0	2.4 ~ 10
	23	0.4 ~ 1.6	∞	2 ~ 8	2 ~ 8	3.6 ~ 15	3.8 ~ 18	1.6 ~ 7	4 ~ 16	3.8 ~ 16	0		2.4 ~ 10
	24	3.2 ~ 13	∞	5.5 ~ 24	6 ~ 24	6.5 ~ 23	7 ~ 28	4.6 ~ 19	8 ~ 34	7 ~ 30	2.6 ~ 11	2.6 ~ 11	

2. POWER COIL

Disconnect the 2P power coil connector, and measure the resistance between the terminals.

Standard resistance	7.02 - 8.58 Ω
---------------------	----------------------

- See page 6-1 for the power coil replacement.

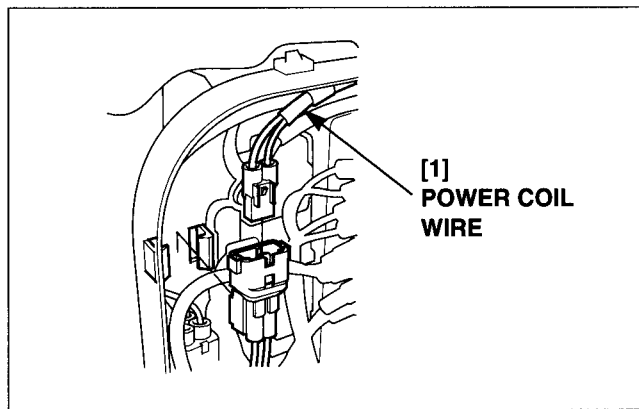

3. ECT (Engine Coolant Temperature) SENSOR

- The sensor resistance decreases as the coolant temperature increases as shown on the right table.

- 1) Disconnect the 2P connector from the thermo sensor and measure the resistance between the sensor terminals at the room temperature.



Standard resistance: 1 - 5 k Ω

- 2) Connect the 2P connector and start the engine and warm up the engine to normal operating temperature.

- 3) Stop the engine, and disconnect the 2P connector and measure the resistance.

Standard resistance: 200 - 400 Ω

- ECT sensor installation/removal is almost the same as installation/removal of the sermo switch. (See page 8-2 of the Base Manual.)

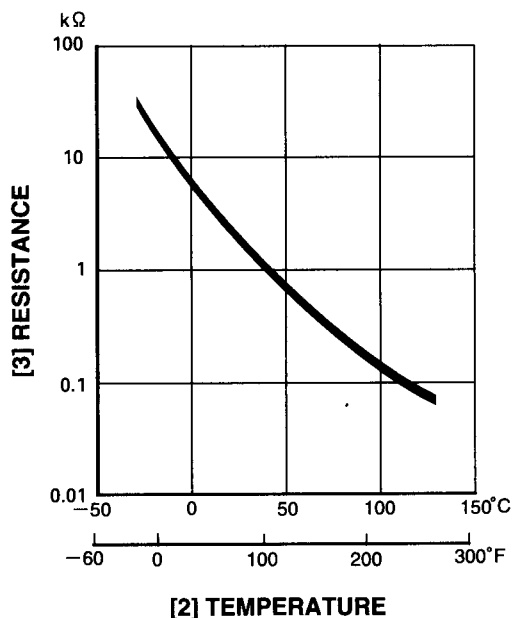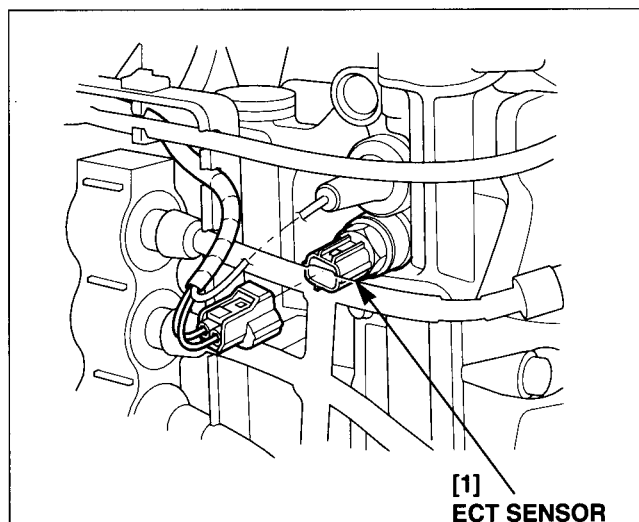


4. INDICATOR

a. INSPECTION

The green indicator should turn on when connecting a 12V battery (+) terminal to the Black/yellow terminal and (-) to the Orange terminal.


The red indicator should turn on when connecting a 12V battery (+) terminal to the Black/yellow terminal and (-) to the Red terminal.

- Be sure the battery is in good condition before performing the test.

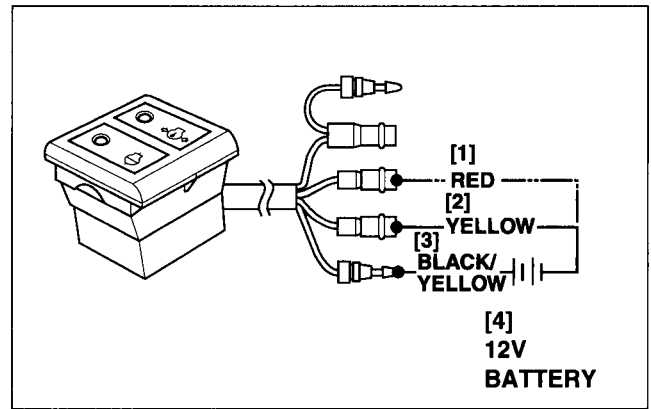


Remote control type with power trim/tilt

Frame serial number:
 BF40A: Up to BAYS-3400529
 BF50A: Up to BAZS-3400006

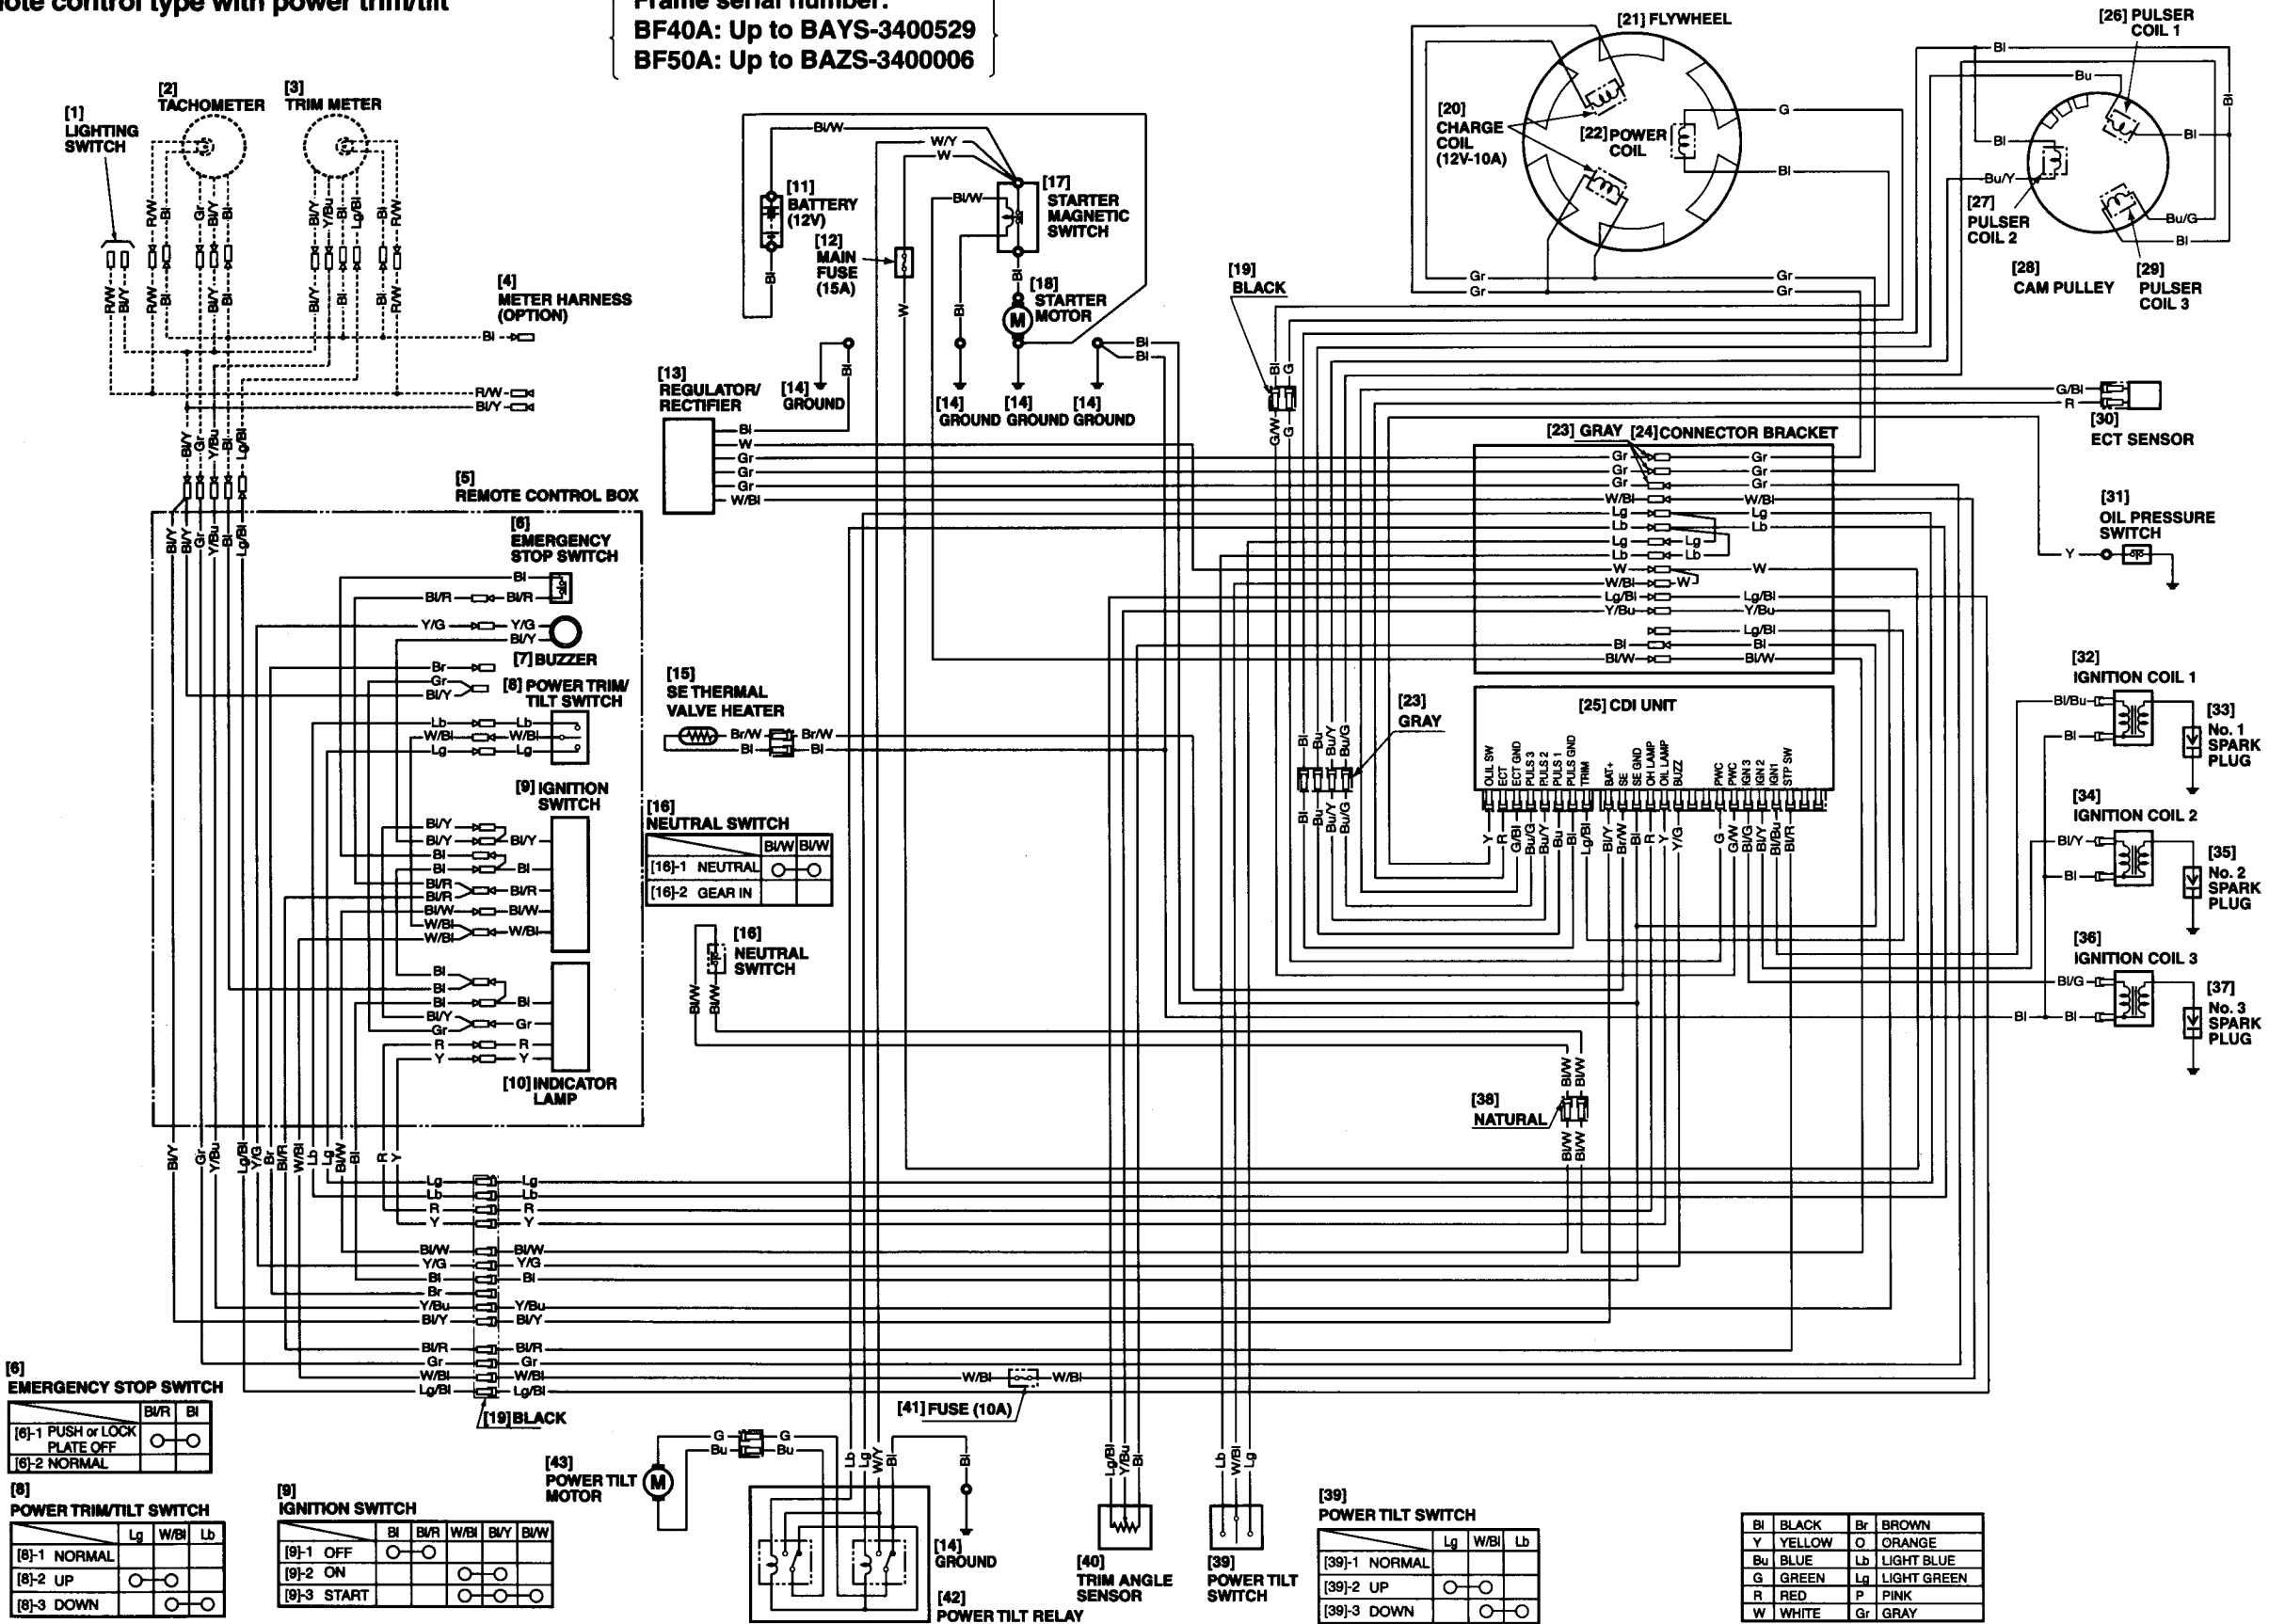

Remote control type with power trim/tilt

Frame serial number:
 BF40A: After BAYS-3400530
 BF50A: After BAZS-3400007

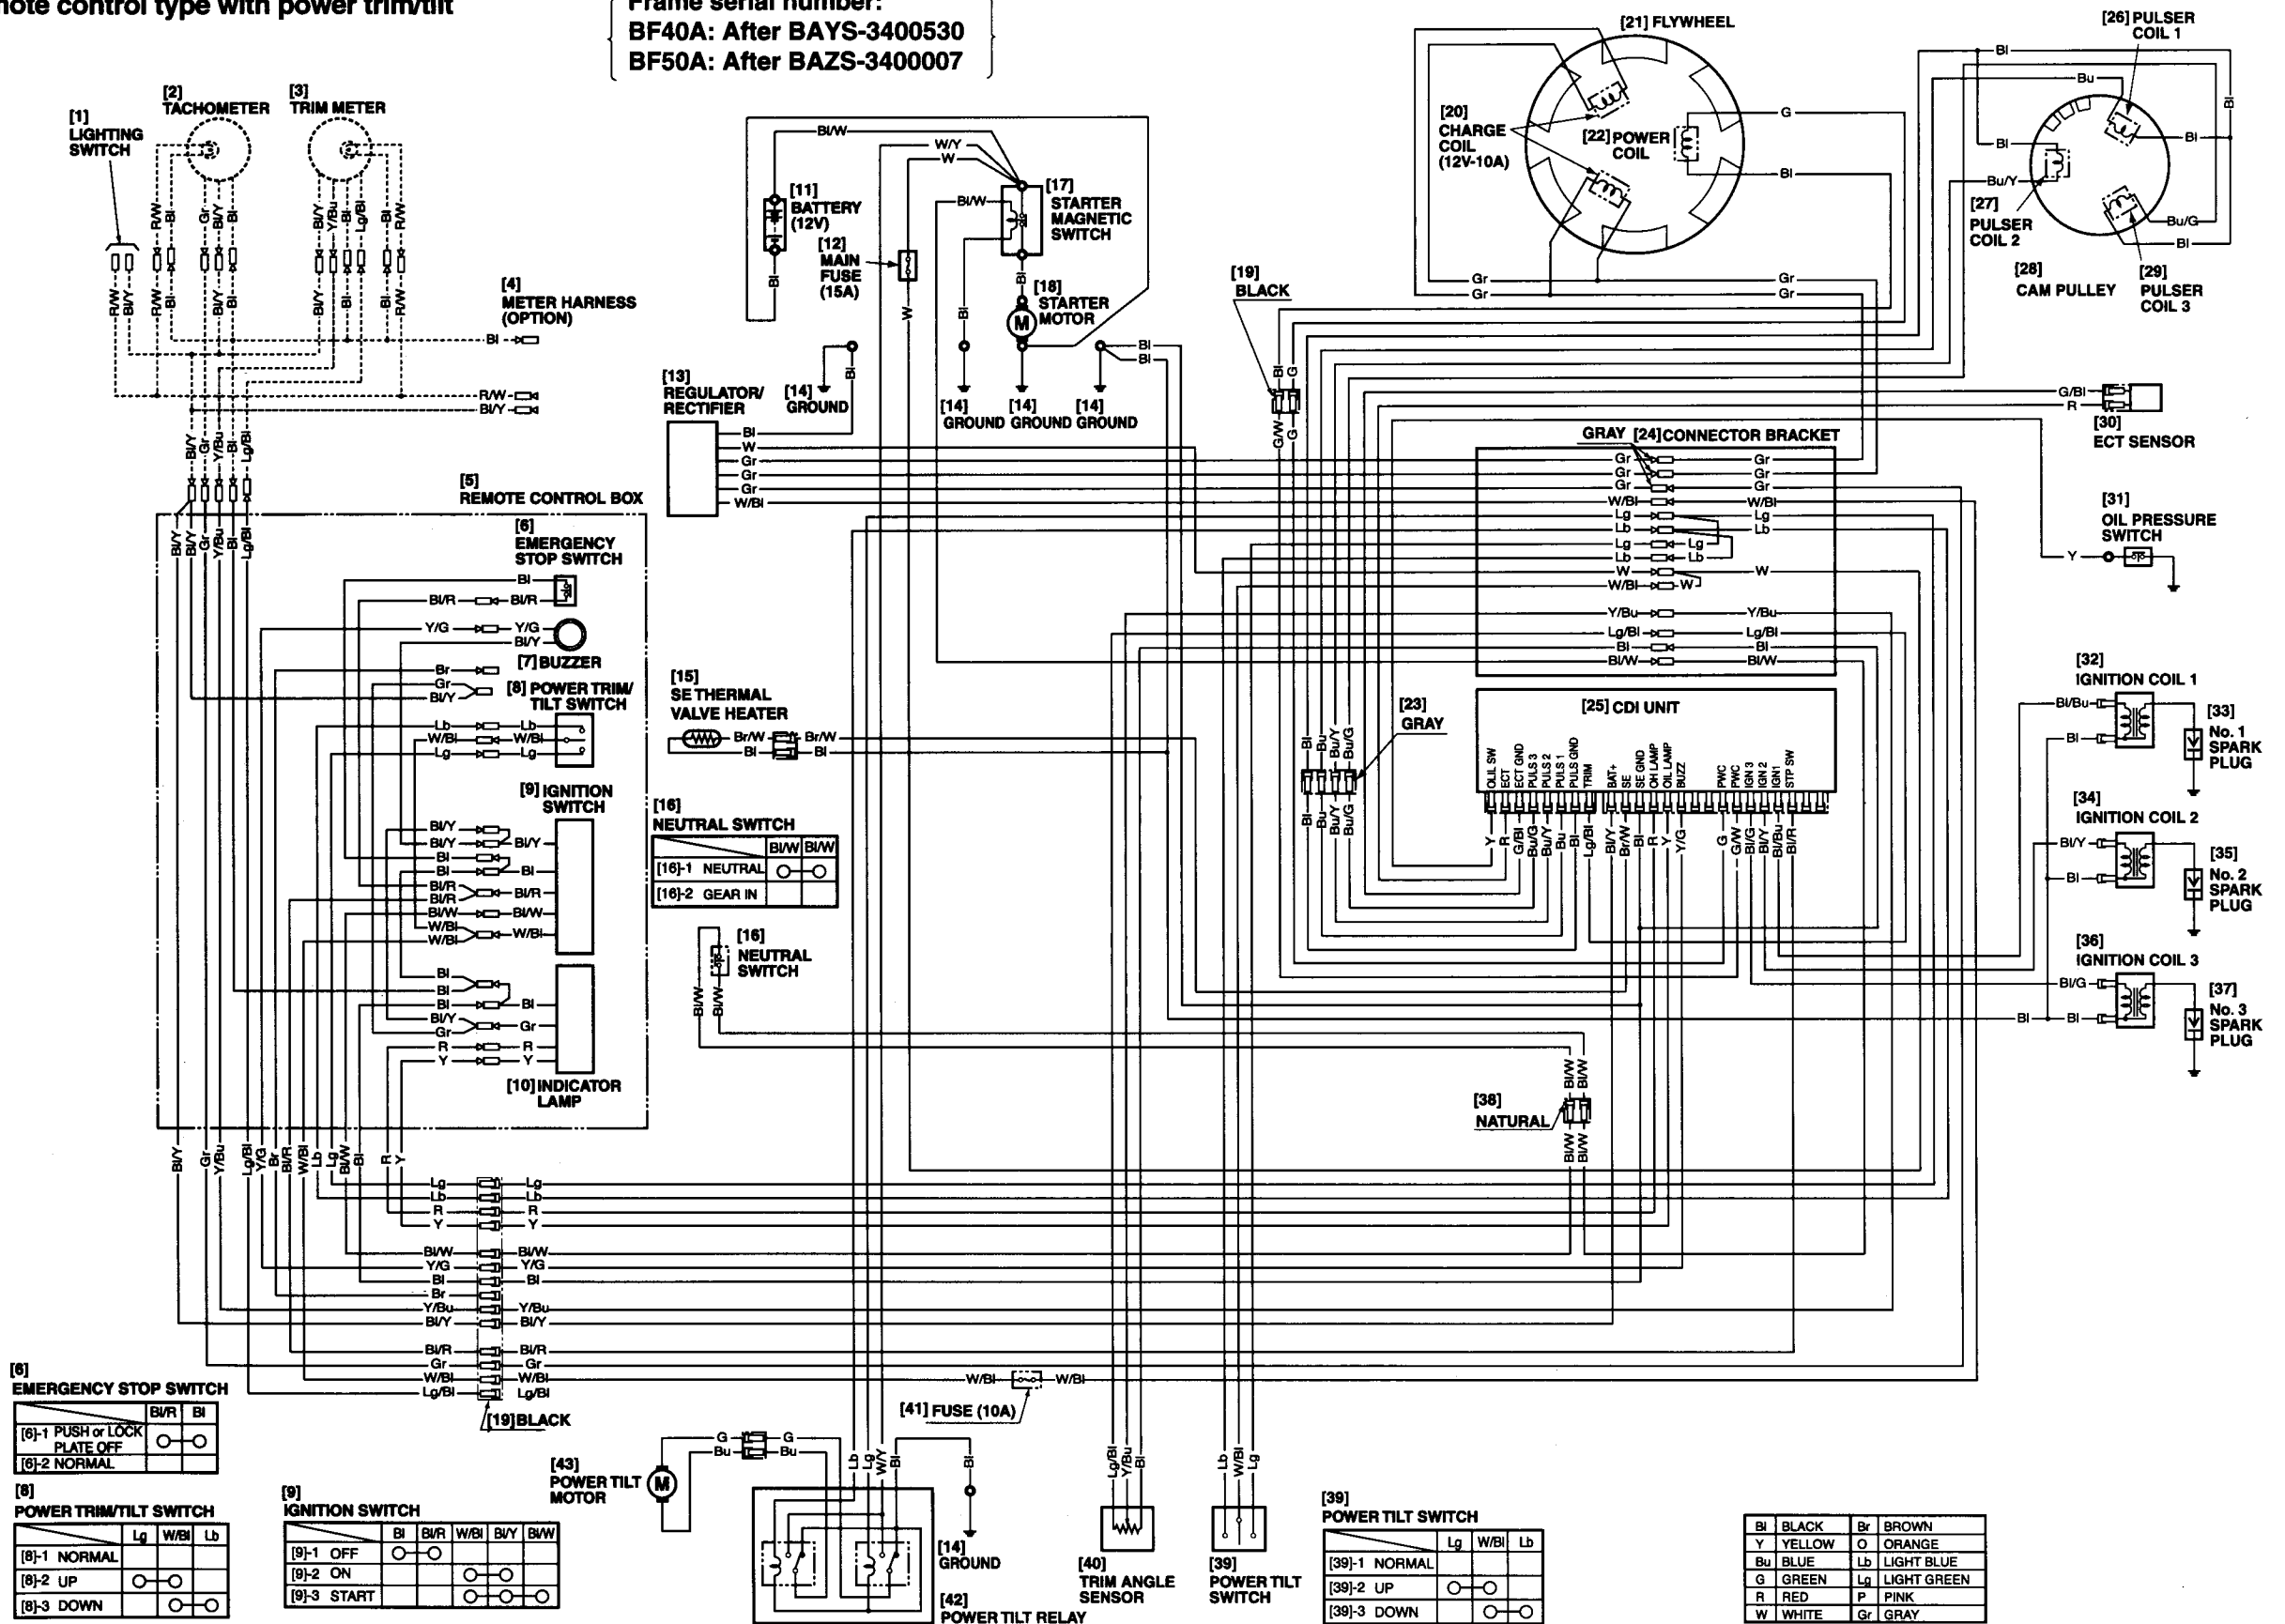

[6] EMERGENCY STOP SWITCH

	B/R	Bl
[6]-1 PUSH or LOCK PLATE OFF	○	○
[6]-2 NORMAL	○	○

[8] POWER TRIM/TILT SWITCH

	Lg	W/Bl	Lb
[8]-1 NORMAL	○	○	○
[8]-2 UP	○	○	○
[8]-3 DOWN	○	○	○

[9] IGNITION SWITCH

	Bl	B/R	W/Bl	B/Y	B/W
[9]-1 OFF	○	○	○	○	○
[9]-2 ON	○	○	○	○	○
[9]-3 START	○	○	○	○	○


[39] POWER TILT SWITCH

	Lg	W/Bl	Lb
[39]-1 NORMAL	○	○	○
[39]-2 UP	○	○	○
[39]-3 DOWN	○	○	○

Bl	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY


Long tiller handle type with power trim/tilt

Frame serial number:
 BF40A: Up to BAYS-3400529
 BF50A: Up to BAZS-3400006

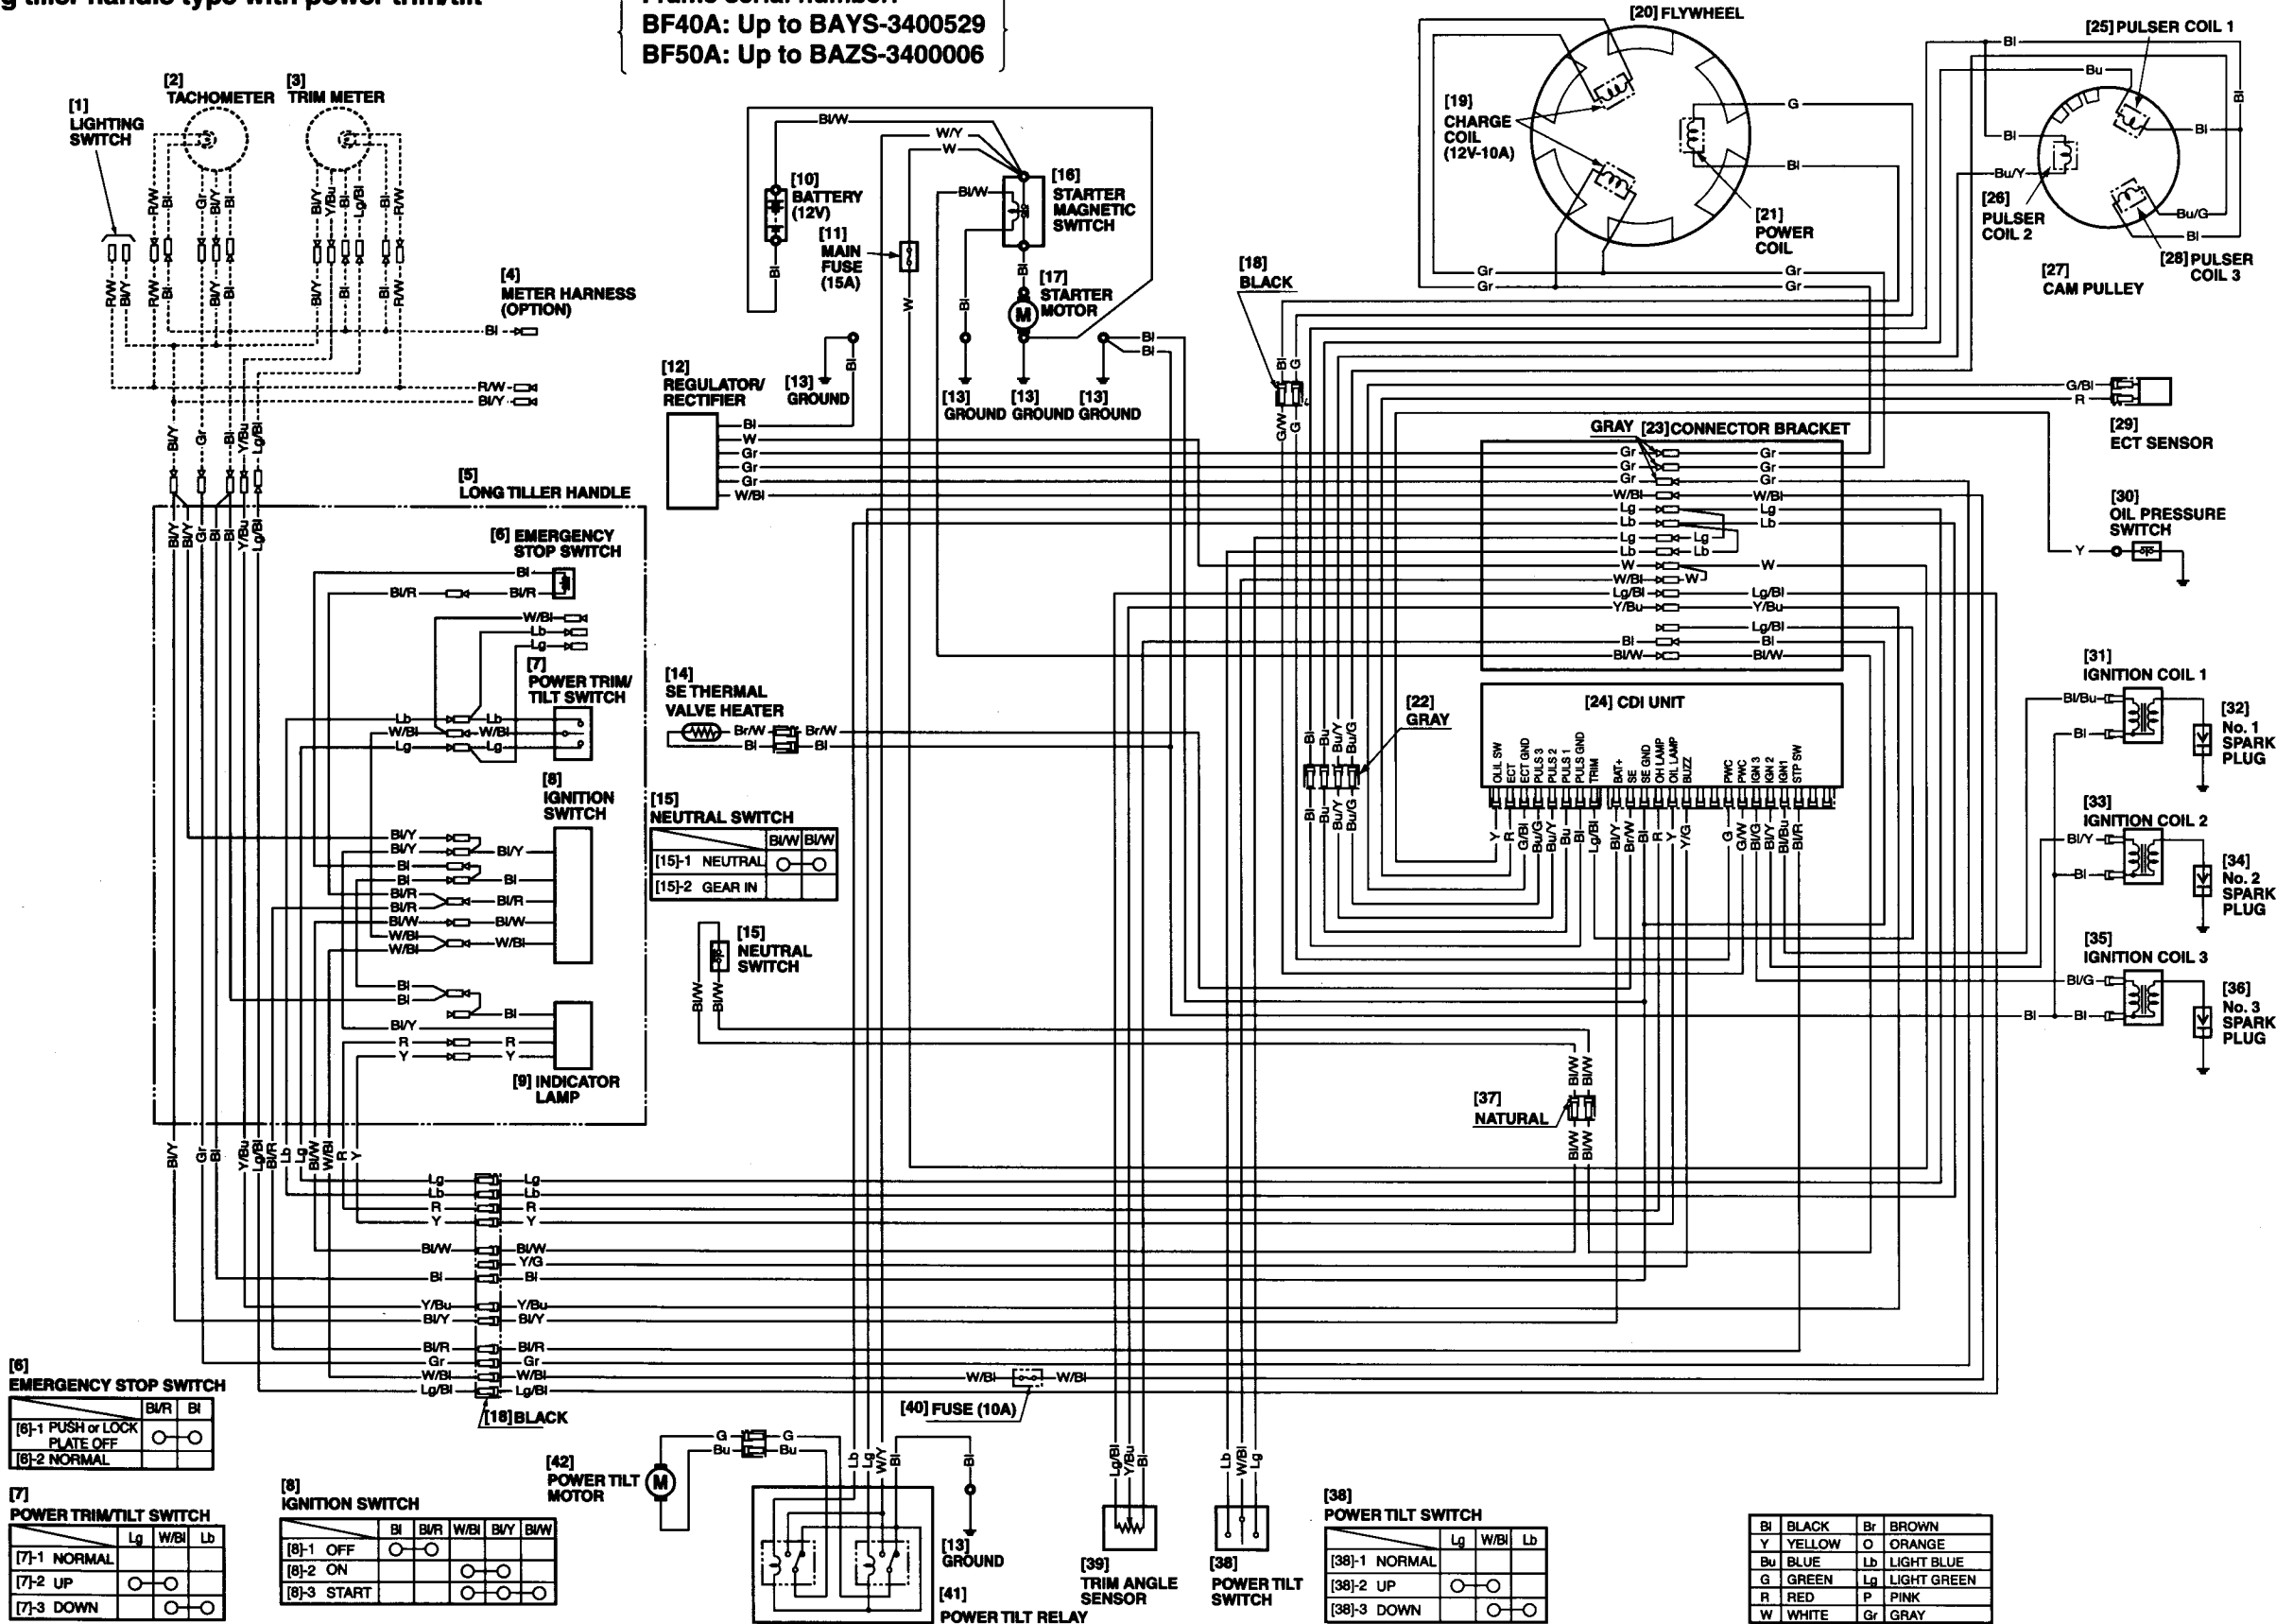

Long tiller handle type with power trim/tilt

Frame serial number:
 BF40A: After BAYS-3400530
 BF50A: After BAZS-3400007

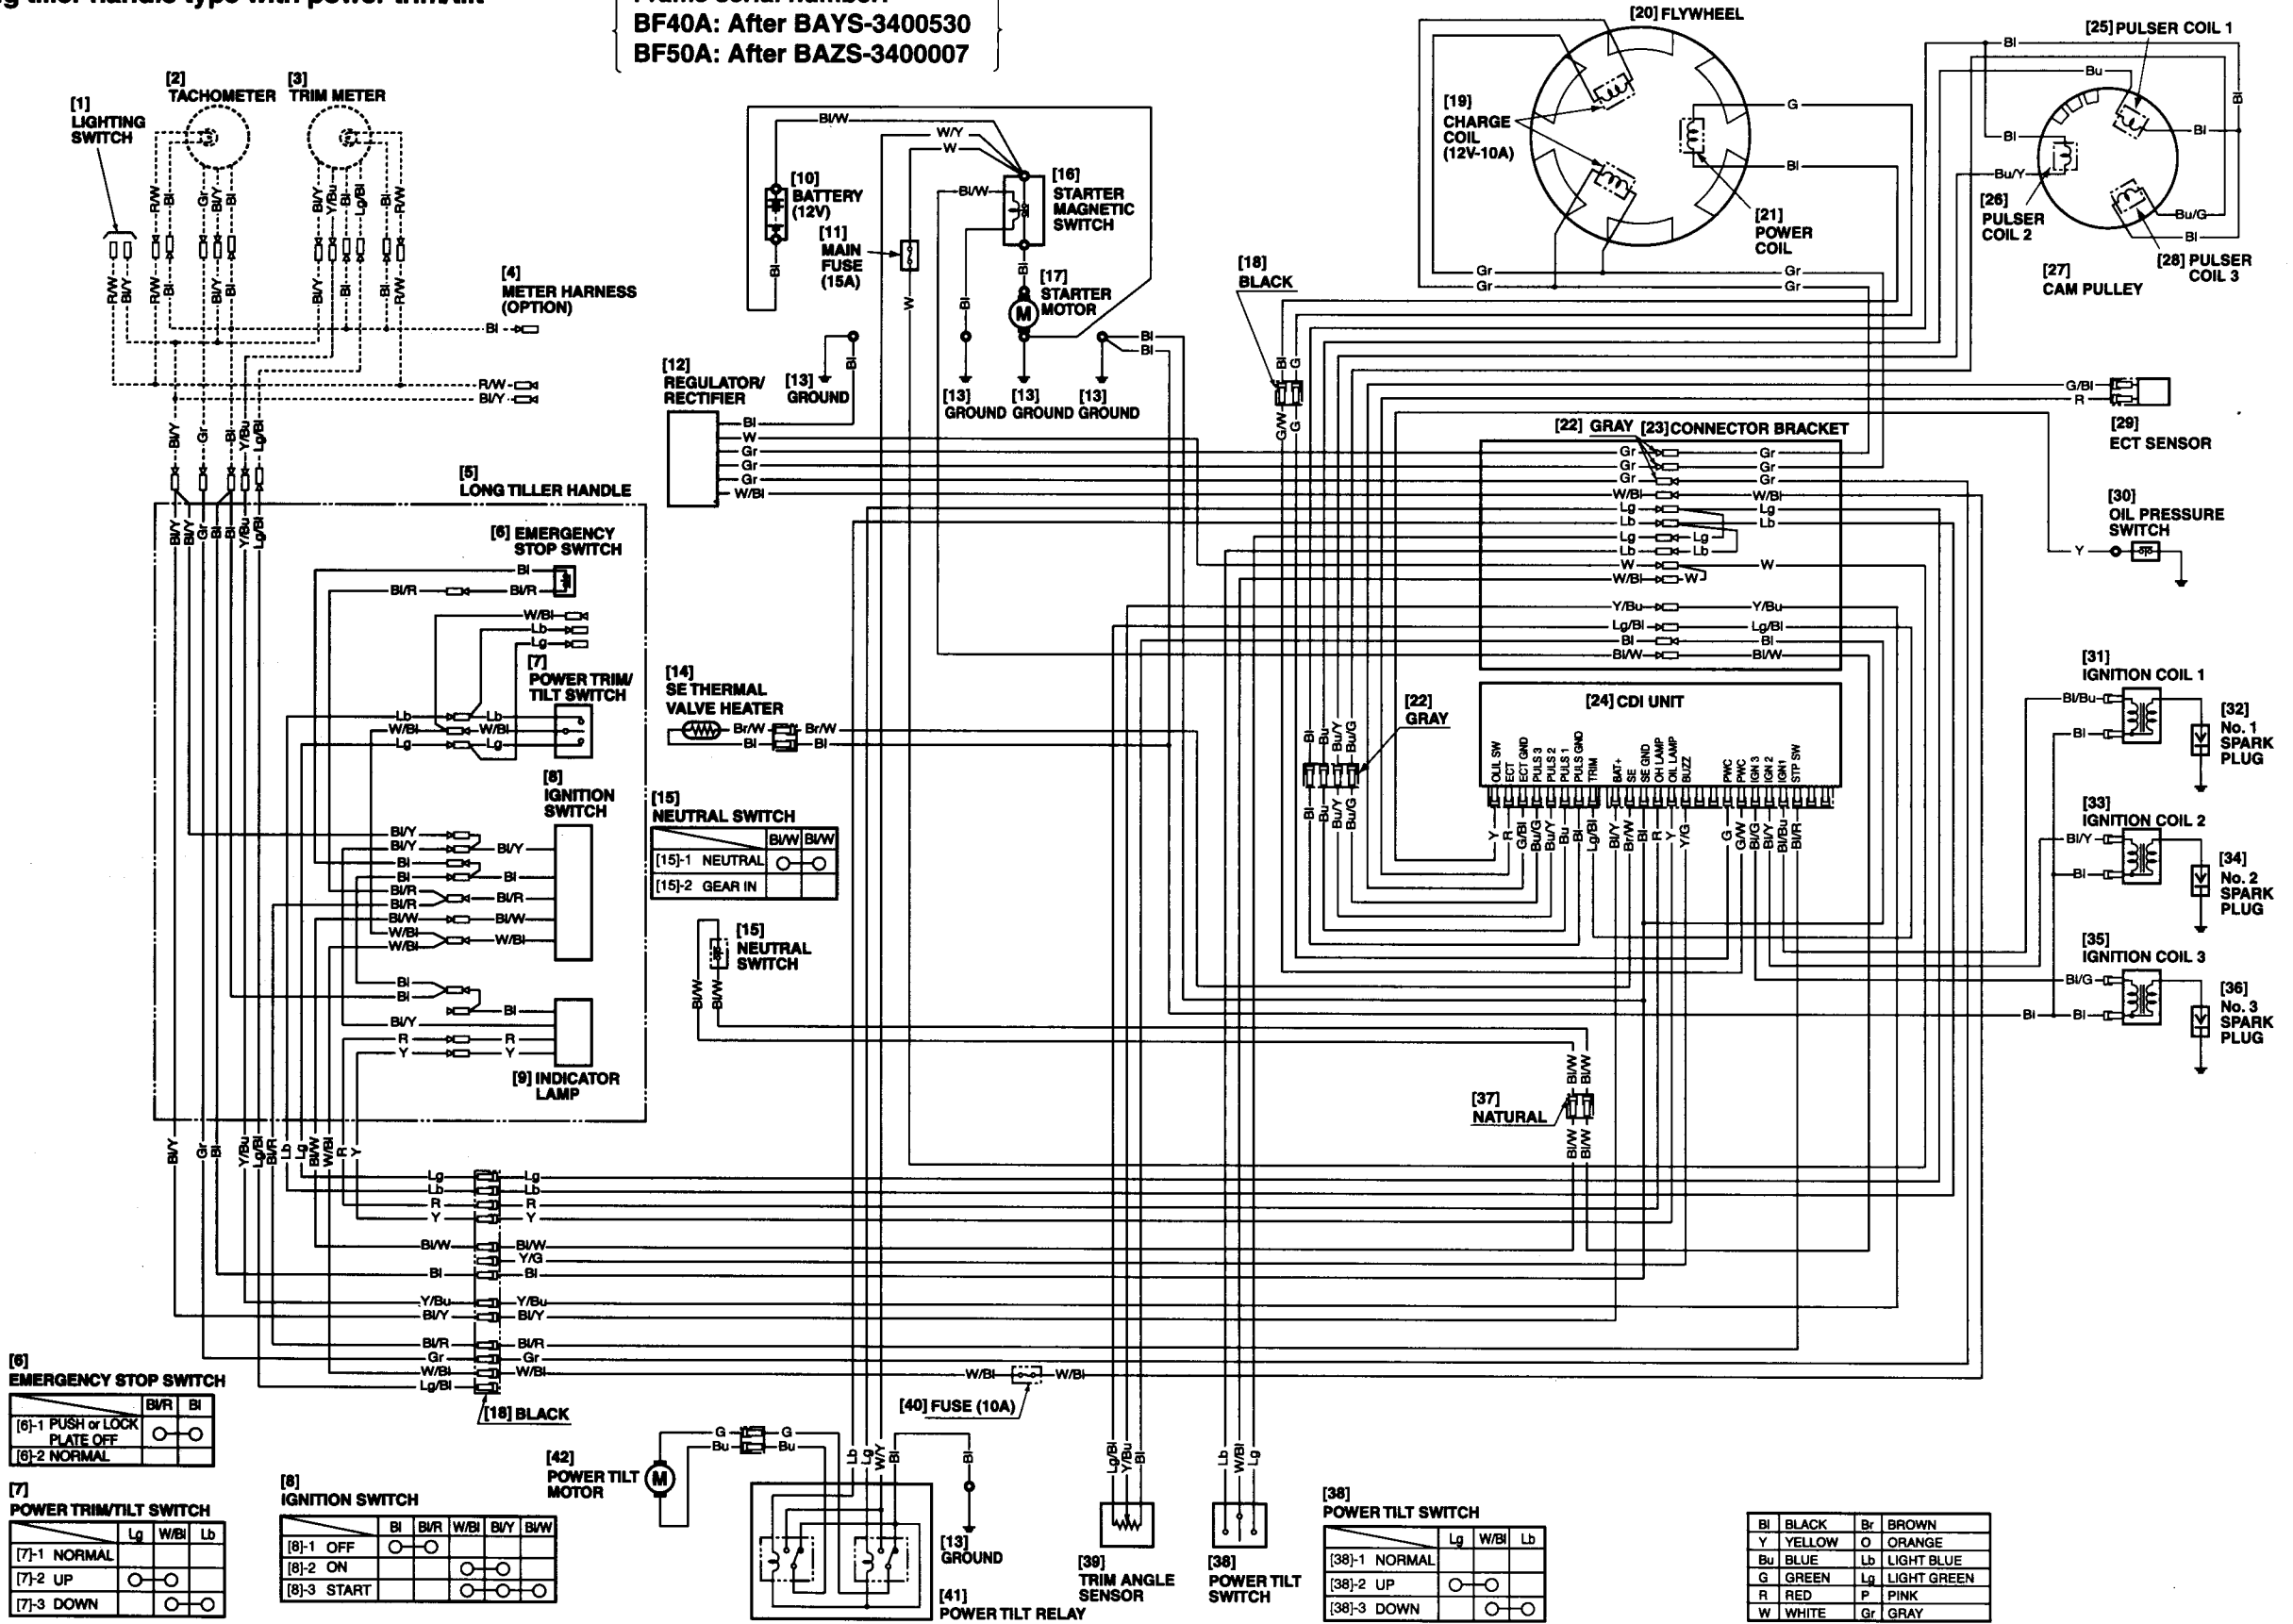

[6] EMERGENCY STOP SWITCH

	B/R	BI
[6]-1 PUSH or LOCK PLATE OFF	○	○
[6]-2 NORMAL		

[7] POWER TRIM/TILT SWITCH

	Lg	W/BI	Lb
[7]-1 NORMAL			
[7]-2 UP	○	○	
[7]-3 DOWN			○

[8] IGNITION SWITCH

	BI	B/R	W/BI	BI/Y	BI/W
[8]-1 OFF	○	○			
[8]-2 ON			○	○	
[8]-3 START					○

[42] POWER TILT MOTOR

	G	Bu	Bu

[41] POWER TILT RELAY

	W/BI	W/BI


[38] POWER TILT SWITCH

	Lg	W/BI	Lb
[38]-1 NORMAL			
[38]-2 UP	○	○	
[38]-3 DOWN			○


Color Key

BI	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

Remote control type with gas assisted tilt

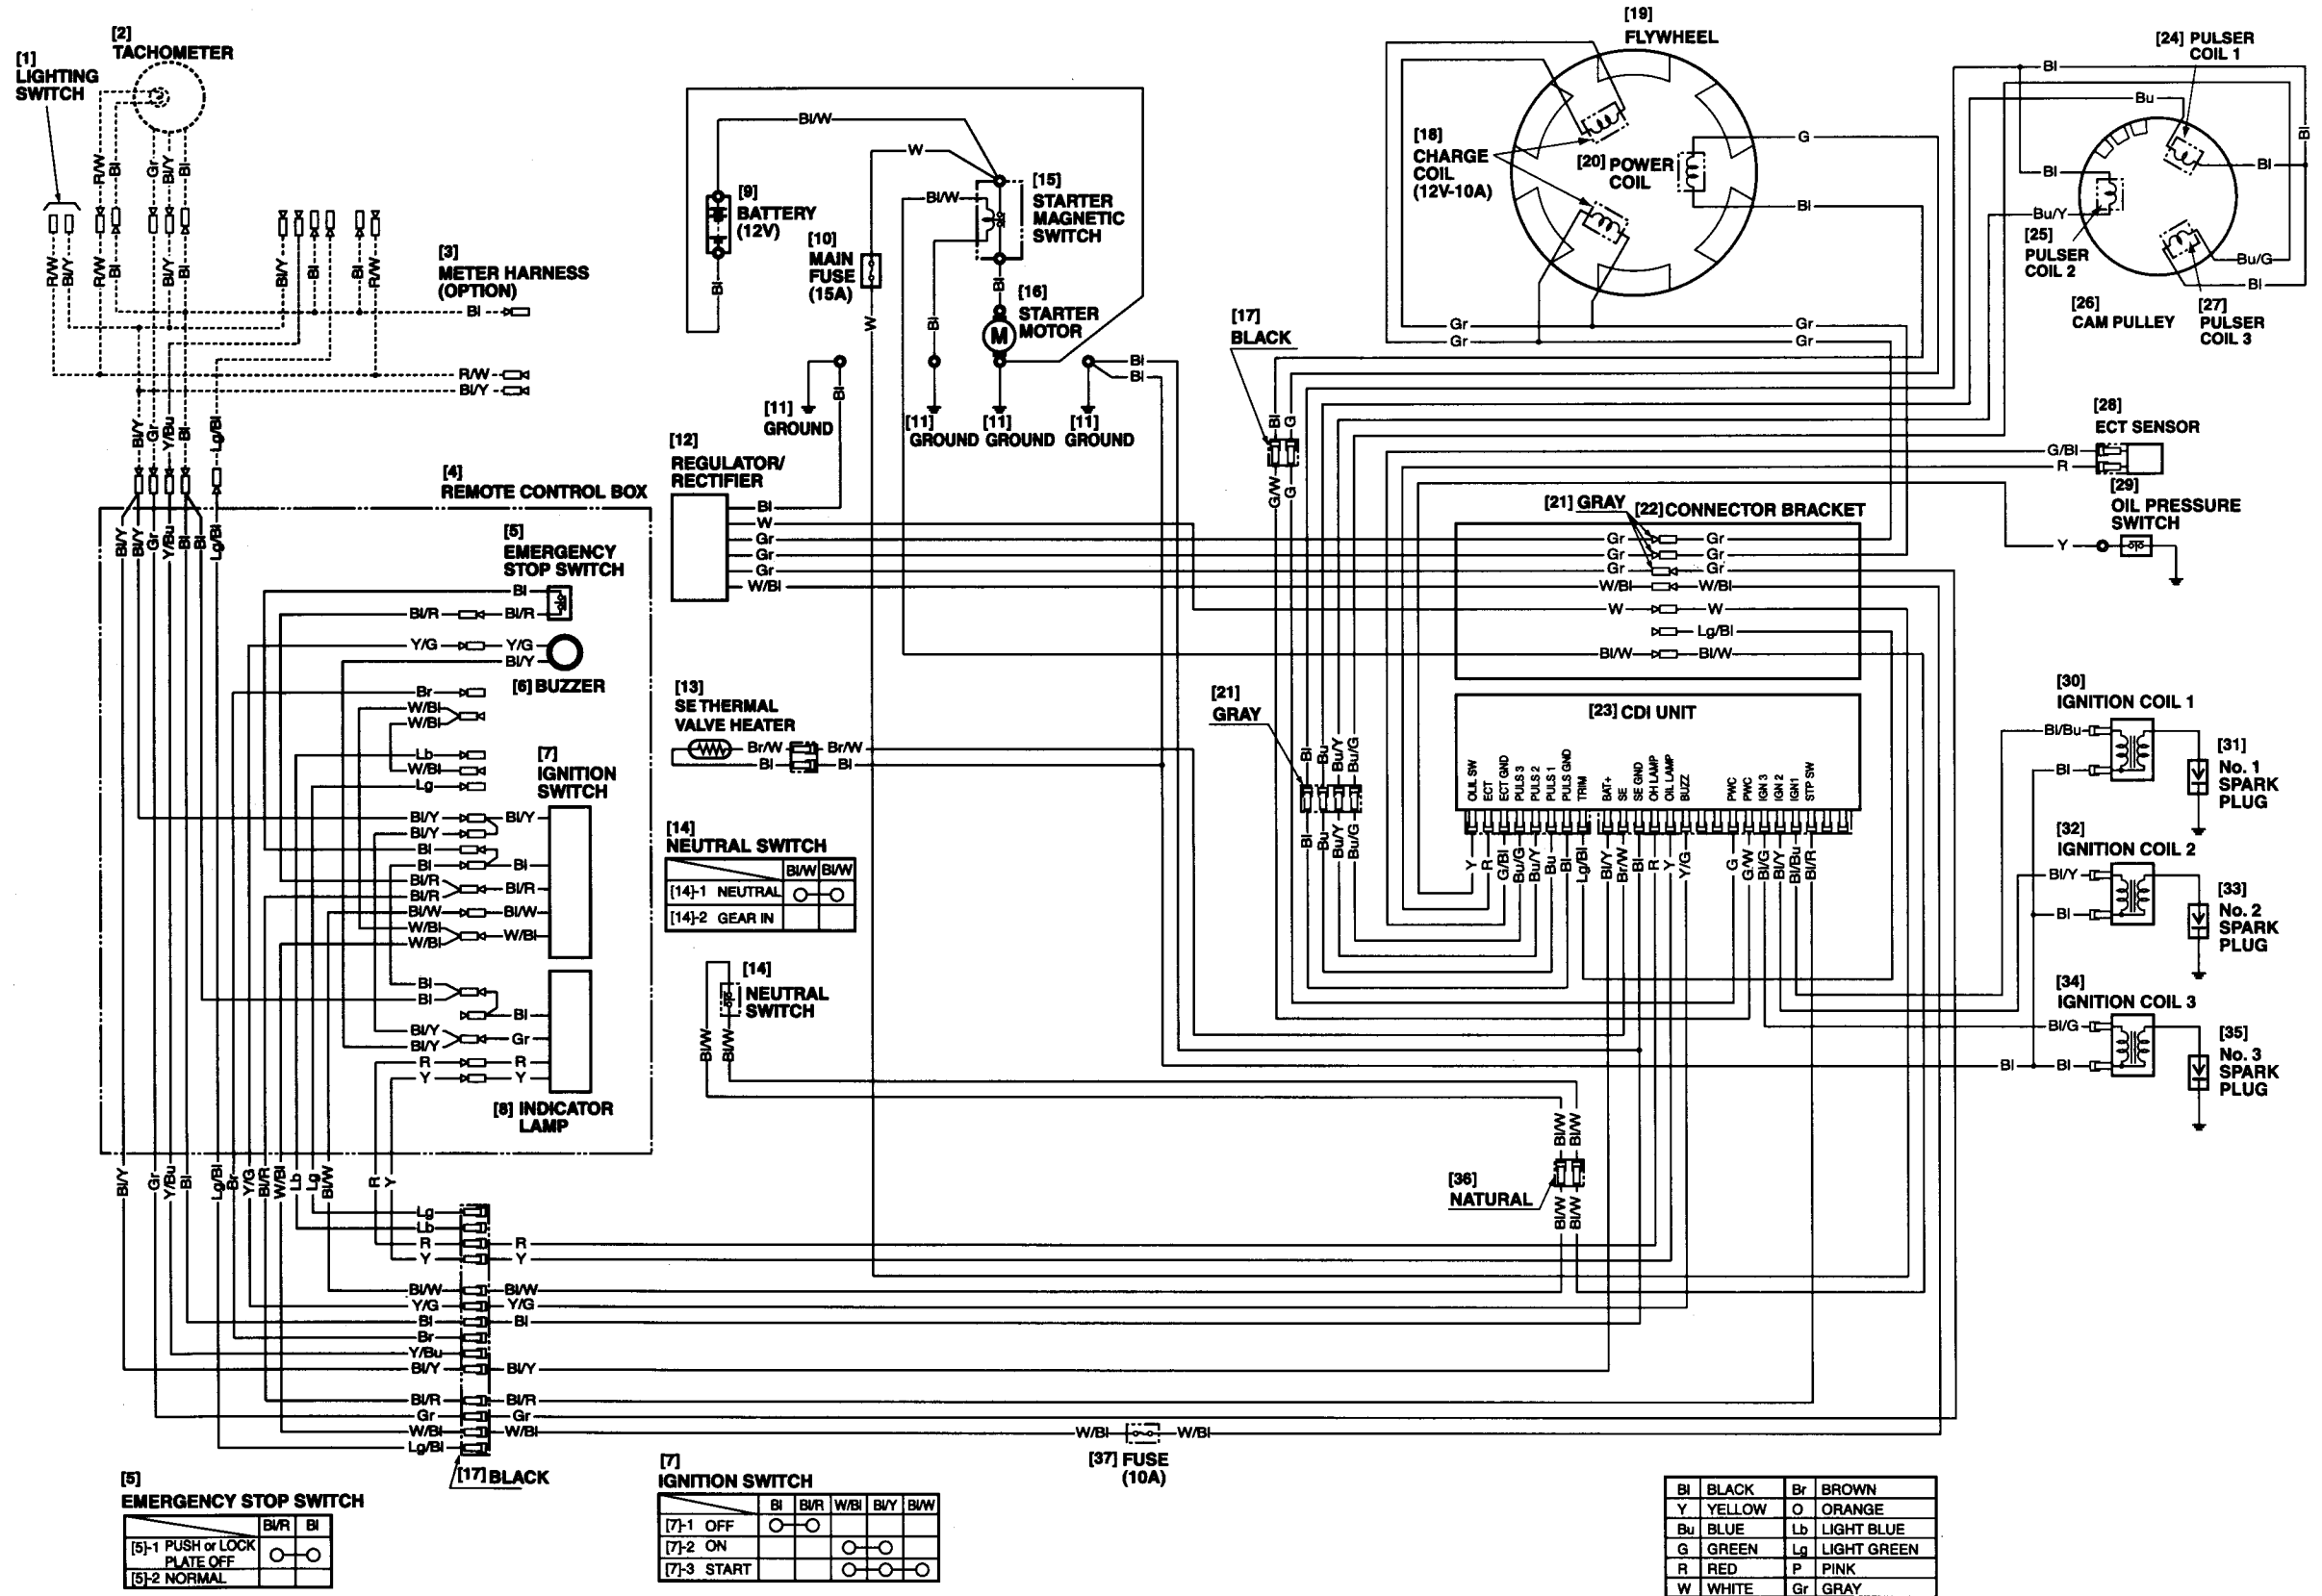

Long tiller handle type with gas assisted tilt

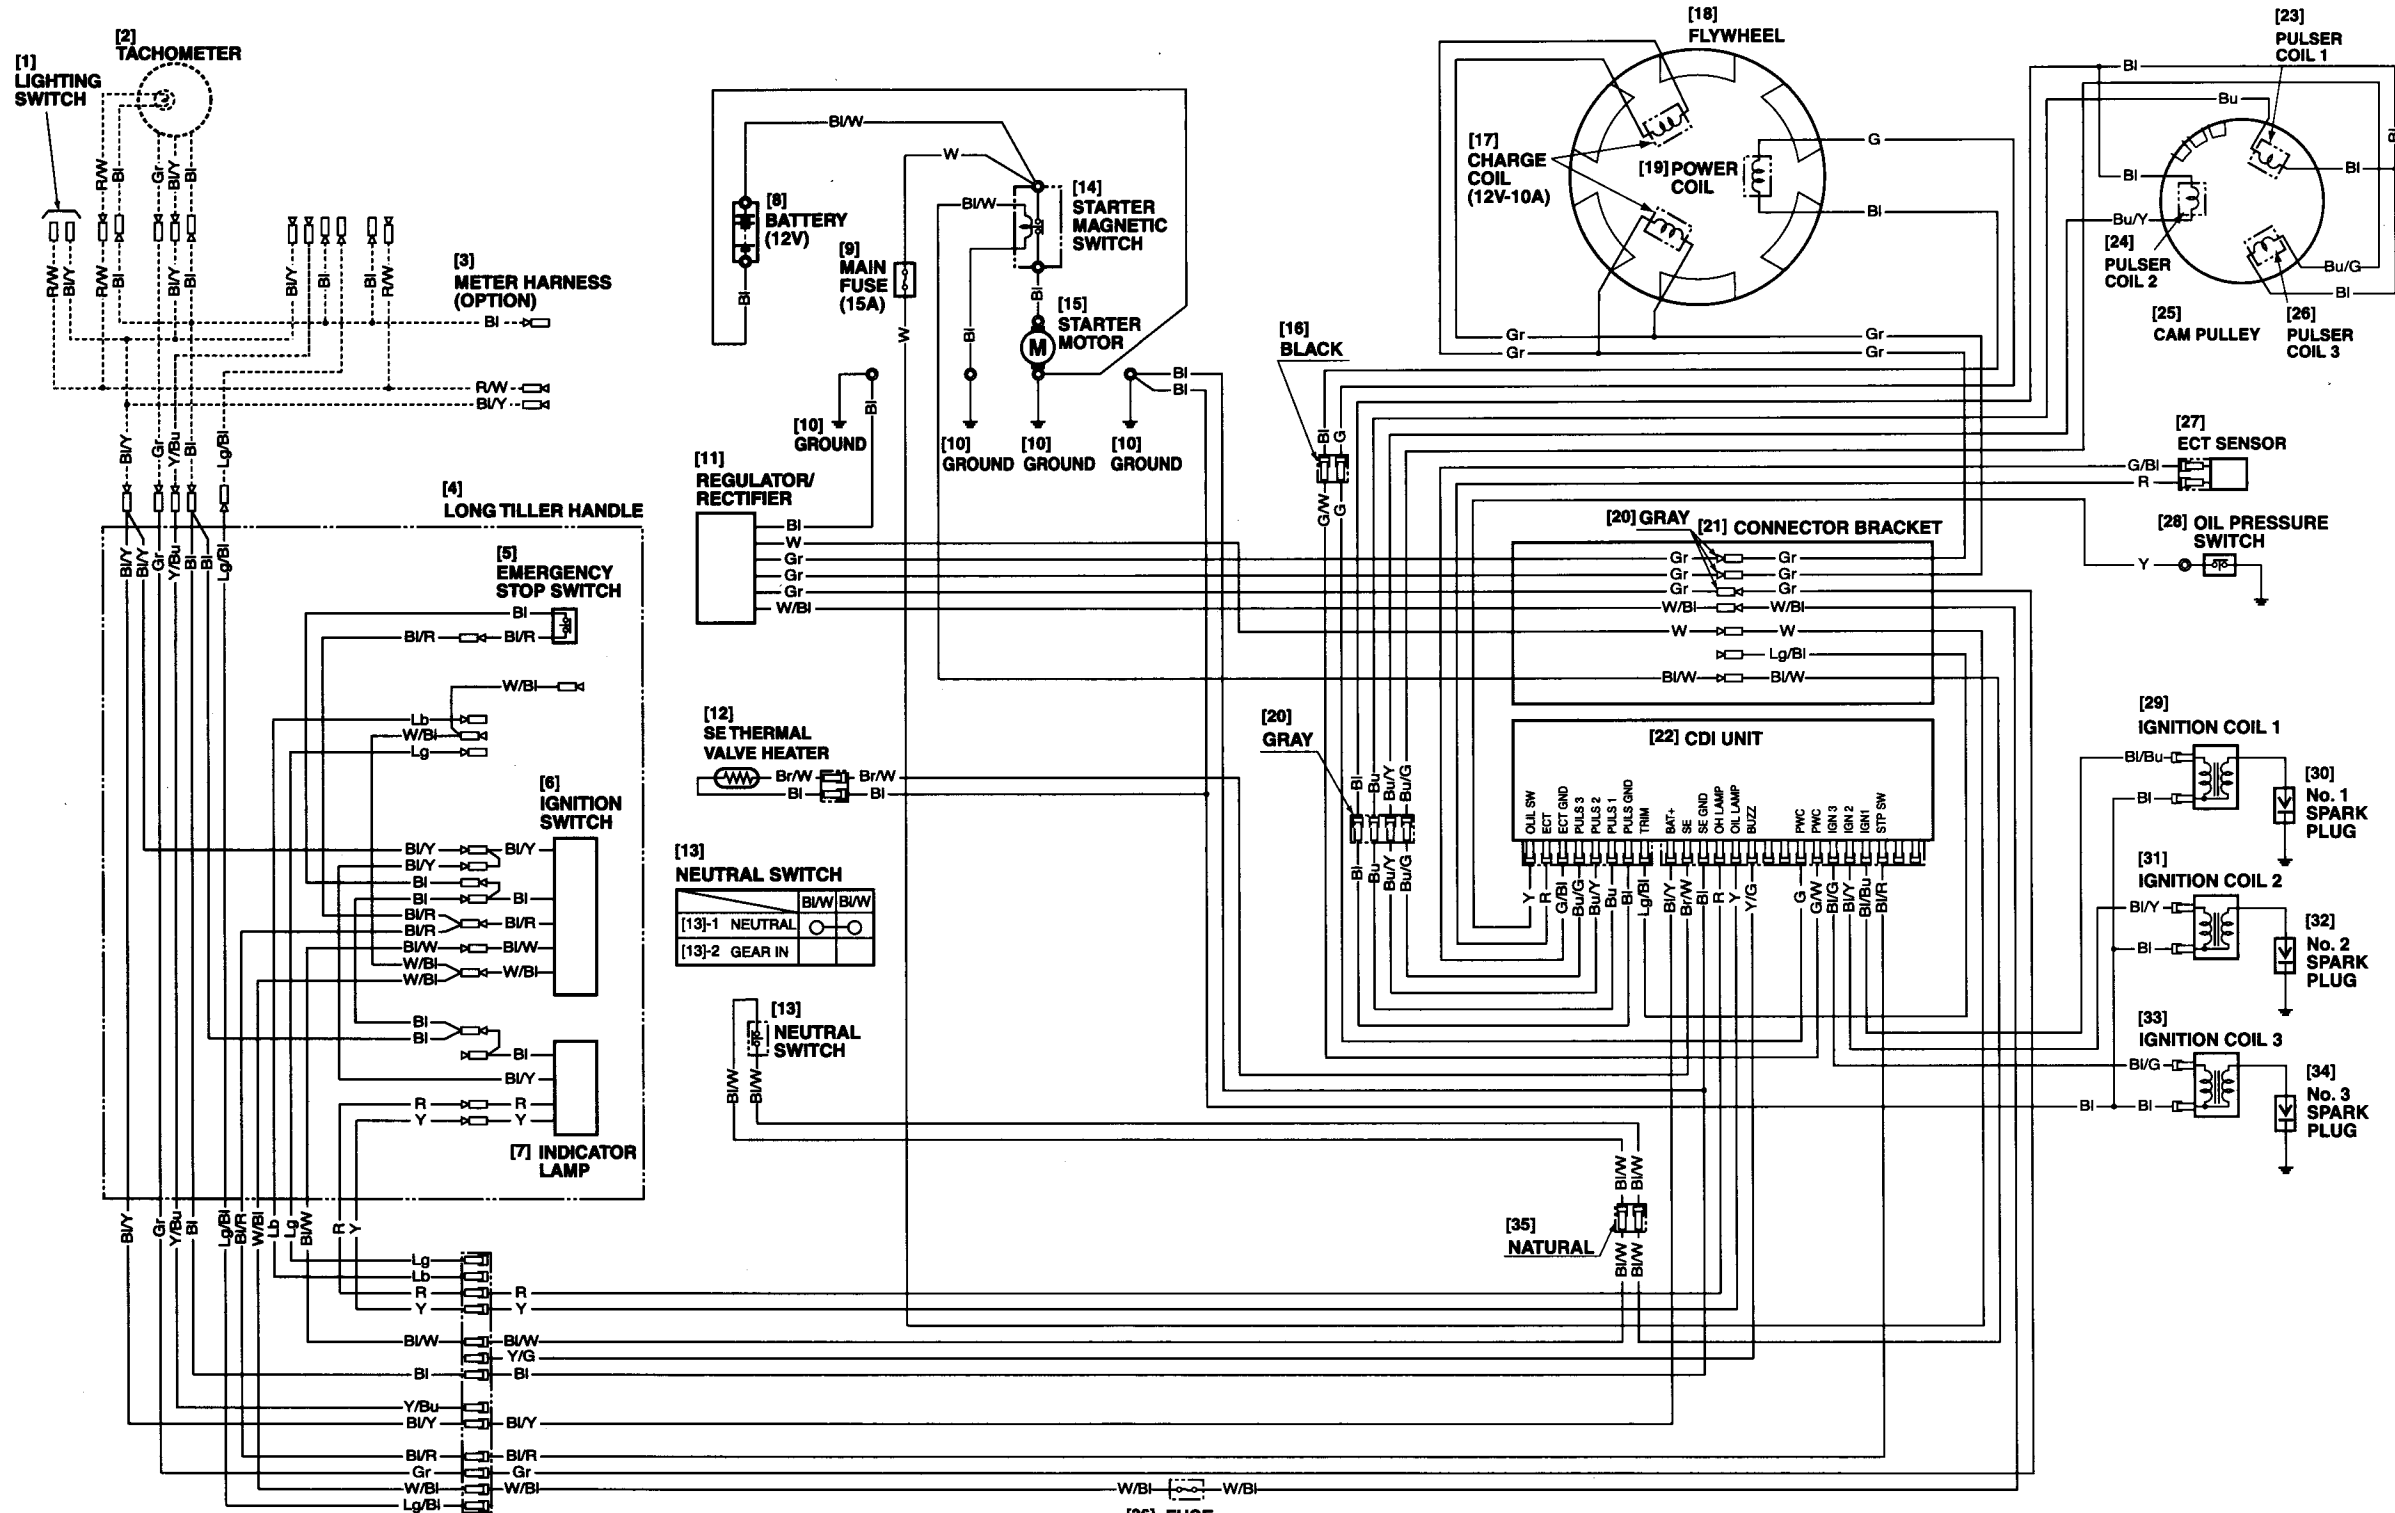

[5] EMERGENCY STOP SWITCH

	B/R	BI
[5]-1 PUSH or LOCK PLATE OFF	○	○
[5]-2 NORMAL		

[6] IGNITION SWITCH

	BI	B/R	W/BI	BI/Y	BI/W
[6]-1 OFF	○	○			
[6]-2 ON			○	○	
[6]-3 START			○	○	○

[36] FUSE (10A)

BI	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	P	PINK
W	WHITE	Gr	GRAY

PREFACE

This manual covers the construction, function and servicing procedures of the Power Trim/Tilt Assembly for Honda BF40A•BF50A Outboard motors.

For service information which is not covered in this supplement, please refer to the base shop manual (Parts number 66ZV300U).

Careful observance of these instructions will result in better, safe service work.

Pay attention to these symbols and their meaning:

⚠ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

All information, illustrations, directions and specifications include in this publication are based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make changes without incurring any obligation whatever. No part of this publication may reproduced without written permission.

Honda Motor Co., Ltd
Service Publication Office



CONTENTS

SPECIFICATIONS	1
SERVICE INFORMATION	2
MAINTENANCE	3
ENGINE COVER/THROTTLE/CHOKE	4
FUEL SYSTEM	5
FLYWHEEL/TIMING BELT	6
ENGINE REMOVAL/INSTALLATION	7
WATER JACKET COVER/THERMOSTAT/ THERMO SWITCH	8
CYLINDER HEAD/VALVE/OIL PUMP	9
CRANKCASE/CYLINDER BLOCK/ CRANKSHAFT/PISTON	10
PROPELLER/GEAR CASE/EXTENSION CASE	11
OIL PAN/PRIMARY GEAR CASE/SWIVEL CASE	12
GAS ASSISTED/POWER TILT	13
STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)	14
THROTTLE BRACKET/SHIFT LEVER/ HANDLEBAR (TILLER HANDLE TYPE ONLY)	15
ELECTRICAL EQUIPMENT	16
OPERATION	17
WIRING DIAGRAM	18

■ The marked sections contain no changes.
 They are not covered in this manual.

2. SERVICE INFORMATION	2-1
1. MAINTENANCE STANDARDS	2-1
2. TORQUE VALUES	2-1
3. SPECIAL TOOLS	2-2
4. TROUBLESHOOTING.....	2-3
13. GAS ASSISTED/POWER TILT.....	13-1
1. POWER TRIM/TILT ASSEMBLY.....	13-1

1. MAINTENANCE STANDARDS

2. TORQUE VALUES

3. SPECIAL TOOLS

4. TROUBLESHOOTING

1. MAINTENANCE STANDARDS

POWER TRIM/TILT

Part	Item	Standard	Service limit
Power trim/tilt	Lower chamber blow pressure	19.3 - 23.0 MPa (197 - 235 kgf/cm ² , 2,802 - 3,342 psi)	—
	Upper chamber blow pressure	27.9 - 34.8 MPa (285 - 355 kgf/cm ² , 4,054 - 5,049 psi)	—
Power trim/tilt motor	Brush length	9.75 mm (0.384 in)	5.5 mm (0.22 in)
	Mica depth	1.8 mm (0.07 in)	1.3 mm (0.05 in)

2. TORQUE VALUES

Item	Thread dia. x pitch	Torque			Note
		N•m	kgf•m	lbf•ft	
• Power trim/tilt					
Upper joint metal	M14 x 1.5	44	4.5	33	(1)
Oil hole cap bolt	3/8-16UNC	1.1	0.11	0.80	
Oil tank socket bolt	M5 x 0.8	4.7	0.48	3.5	
Outer tube	M41 x 1.5	64	6.5	47	(2)
Outer tube guide	M52 x 1.5	88	9.0	65	
Gear pump socket bolt	M5 x 0.8	5.1	0.52	3.8	
Spool valve cap	M22 x 1.0	22	2.2	16	
Manual valve	M12 x 1.75	1.7	0.17	1.2	
2- Way valve	M12 x 1.0	7	0.7	6.1	
Motor screw	1/4-20 UNC	6.4	0.65	4.7	
Yoke screw	M5 x 0.8	2.2	0.22	1.6	





NOTE:

(1): Apply LOCTITE® #271 to the thread (See page 13-28).

(2): Apply LOCTITE® #241 to the thread (See page 13-21).

3. SPECIAL TOOLS


No.	Tool name	Tool number	Application
①	Gauge joint A	070PJ-V150100	} Blow pressure inspection
②	Gauge joint B	070PJ-V150200	
③	Lock nut wrench	0709A-ZW40100	Outer tube guide removal/installation
④	Lock nut wrench 30 x 40	07916-9690000	Outer tube removal/installation

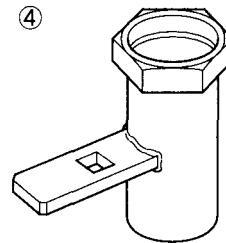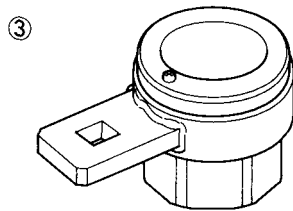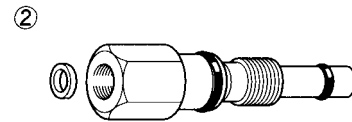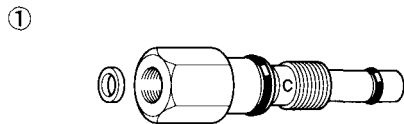


4. TROUBLESHOOTING

a. POWER TRIM/TILT


• Power Trim/Tilt Does Not Move

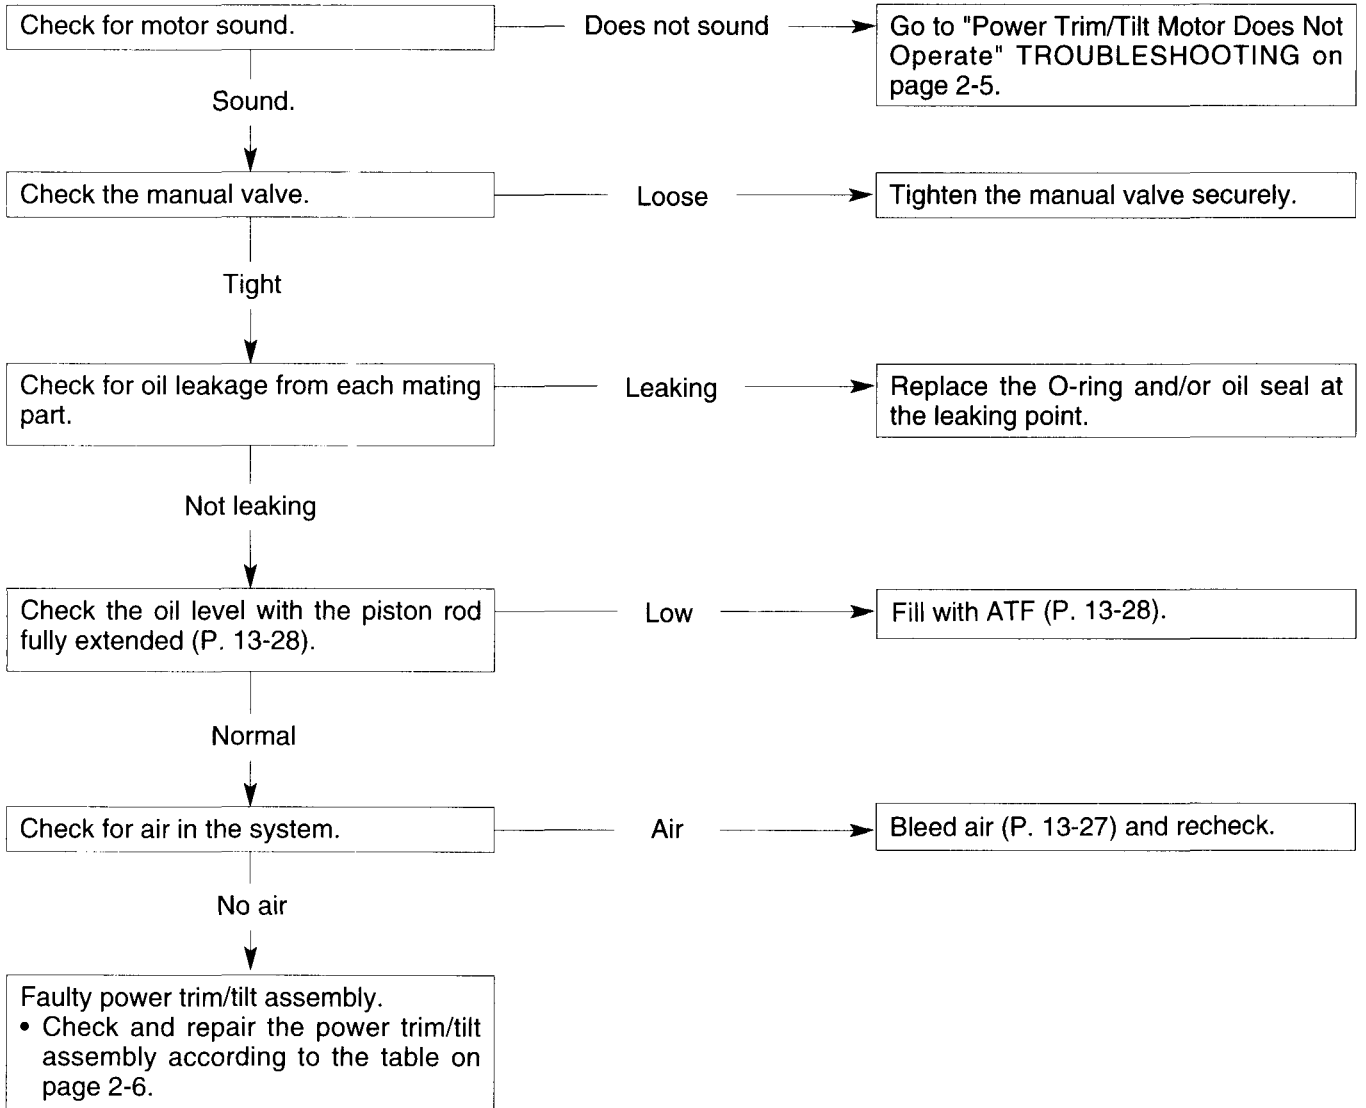

• Power Trim/Tilt Does Not Hold

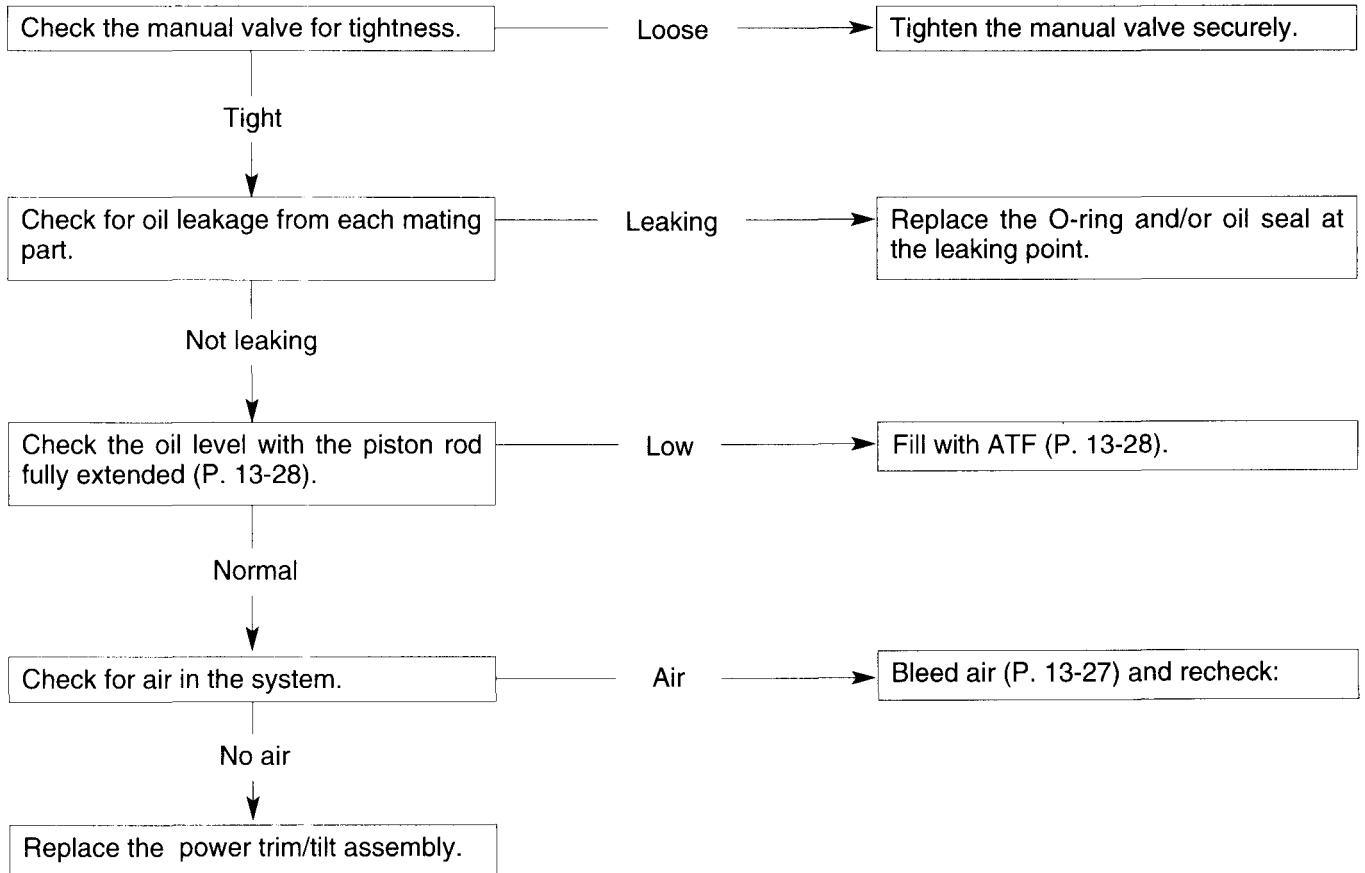


• Power Trim/Tilt Motor Does Not Operate

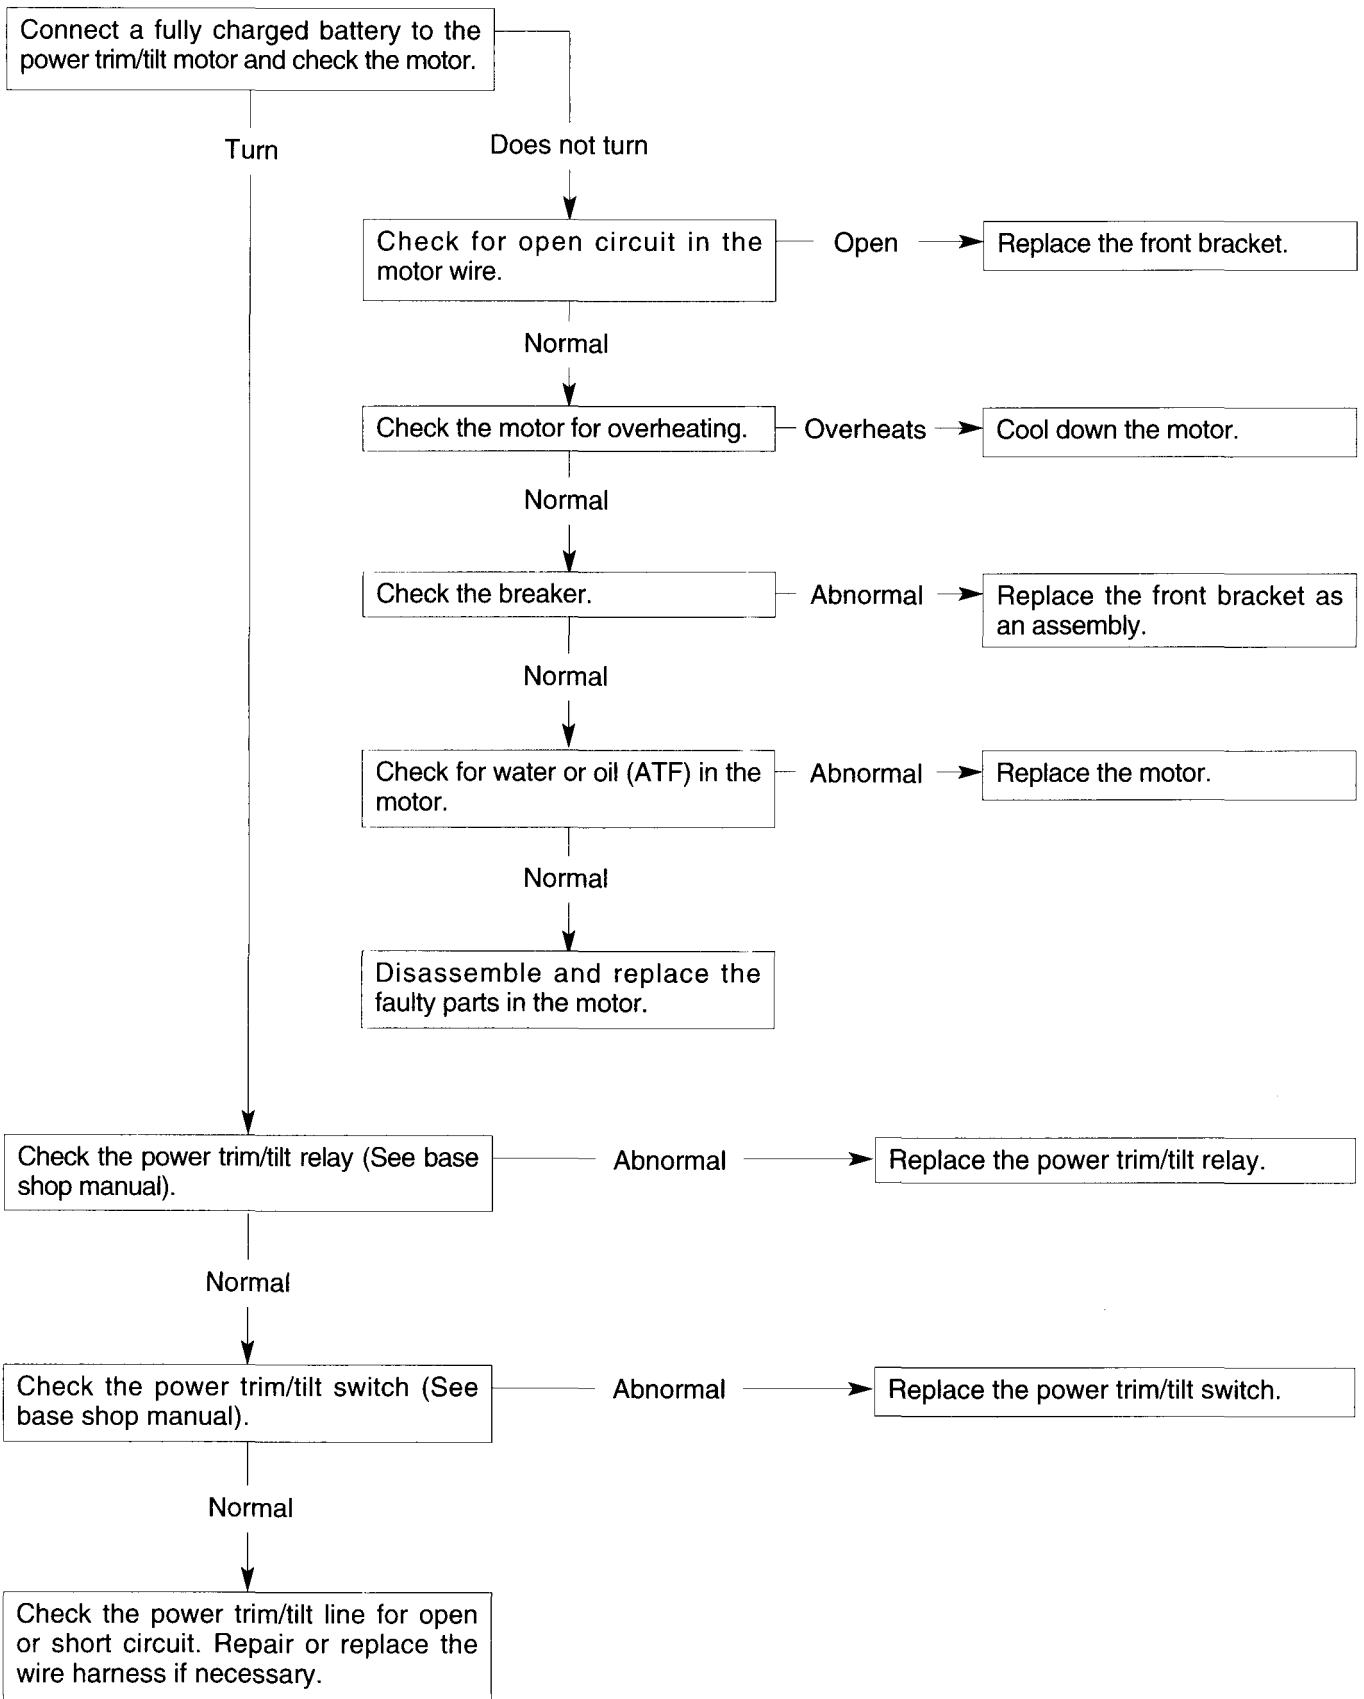

• Faulty Power Trim/Tilt Assembly Quick Reference Chart

Symptom				Pressure		Check point See page 2-7	Check/repair method
Does not tilt up	Does not tilt down.	Does not hold		Lower chamber blow pressure low or drops	Upper chamber blow pressure low or drops		
		Contracted side	Extended side				
○	○	—	—	○	○	① Motor	Check the motor.
○	○	○	○	○	○	② Manual valve	Check the manual valve for tightening, damage or foreign material. Check the O-ring for damage, replace if necessary. Replace the manual valve if necessary.
○	—	○	—	○	—	③ Free piton, O-ring	Check the O-ring for damage, replace if necessary.
—	○	—	○	—	○	④ Piston rod, O-ring, oil seal	Check the O-ring, oil seal for damage, replace if necessary. Replace the piston rod assembly if necessary.
○	○	—	—	○	○	⑤ Oil (ATF)	Check the oil level and add if necessary.
○	○	—	○	—	○	⑥ Upper chamber check valve	Check the check valve for damage, wear or foreign material. Clean and reassemble the upper chamber check valve properly.
○	○	○	○	○	○	⑦ Spool valve (with built-in upper relief valve)	Check the valve for damage, wear or foreign material. Clean and reassemble the spool valve properly. Do not disassemble the spool valve, either as the upper relief valve is built in the spool valve.
○	○	○	—	○	—	⑧ Lower chamber check valve	Check the check valve for damage, wear or foreign material. Clean and reassemble the lower chamber check valve properly.
○	○	—	—	○	○	⑨ Gear pump	Replace the gear pump assembly.
—	○	—	○	—	○	⑩ Down relief valve	Check the valve for damage, wear or foreign material. Clean and reassemble the down relief valve properly.
○	—	○	—	○	—	⑪ Thermal valve (in the manual valve)	Check the check valve for damage, wear or foreign material. Clean and reassemble the manual valve properly.
—	○	—	○	—	○	⑫ Shock relief valve (in the piston)	Check the relief valve for damage, wear or foreign material. Replace the piston assembly if necessary. Clean and reassemble the piston properly.
○	—	○	—	○	—	⑬ Lower chamber safety valve (with built-in the valve body)	Check the lower chamber safety valve for damage, wear or foreign material. Replace the valve body assembly, if necessary. Clean the valve body and reassemble properly.
—	○	—	—	—	○	⑭ Upper chamber safety valve	Check the upper chamber safety valve for damage, wear or foreign material. Replace the upper chamber safety valve if necessary. Clean and reassemble the upper chamber safety valve properly.
○	○	—	—	—	—	⑮ 2-way valve	Check the 2-way valve for damage, wear or foreign material. Replace the 2-way valve if necessary. Clean and reassemble the 2-way valve properly.

• Check Points

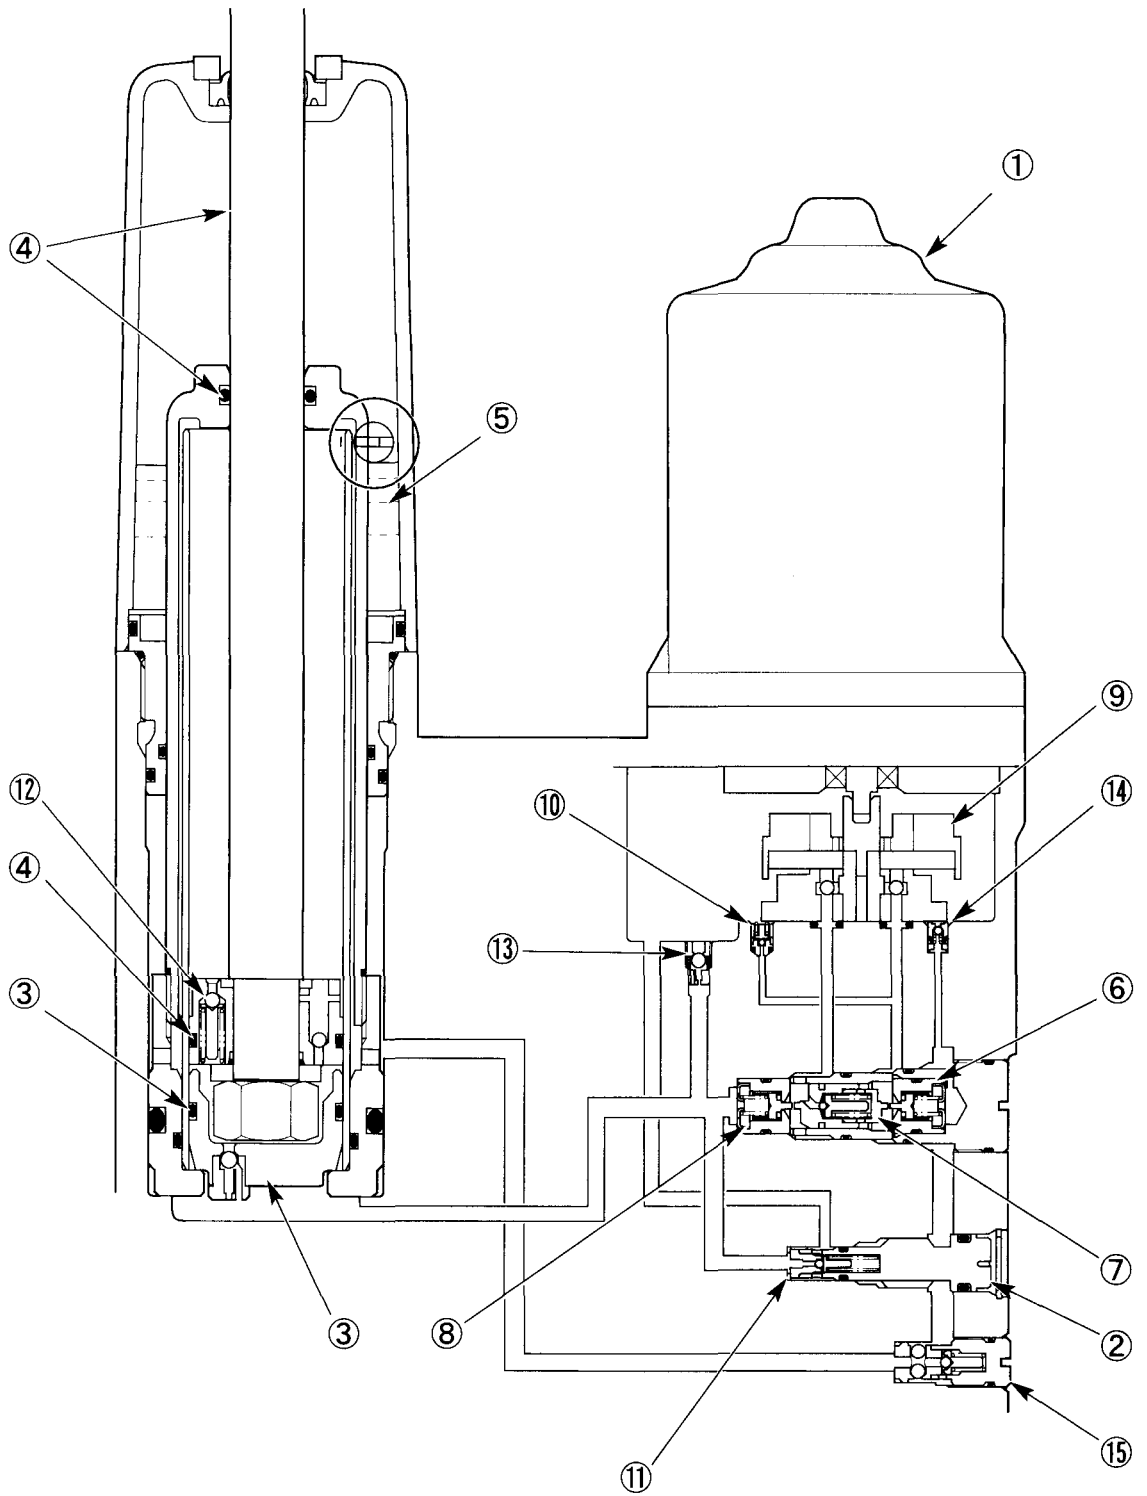

1. POWER TRIM/TILT ASSEMBLY

1. POWER TRIM/TILT ASSEMBLY



b. DISASSEMBLY

CAUTION:


- Do not disassemble the gear pump assembly. If it is faulty, replace it as an assembly.
- Do not use a shop towel, cloth, gloves, etc.
- Do not reuse the drained automatic transmission fluid (ATF).
- Do not hold at the outer tube when holding the power trim/tilt assembly in a vise during operation.
- Clean the removed parts in fresh automatic transmission fluid (ATF), and blow each port of the parts with compressed air. Set the parts neatly in a suitable container with care not to contaminate them with dust and dirt.
- Do not reuse the O-rings oil seals.
- Remove each valve and sleeve with care not to damage the sliding surface of the parts.

• POWER TRIM/TILT MOTOR

- 1) Connect the power trim/tilt motor 2P connector and operate the power trim/tilt motor assembly until the piston rod extends fully.
- 2) Loosen the manual valve fully.
- 3) Remove the oil hole cap and drain ATF in a suitable container through the bolt hole.
- 4) Remove the O-ring from the oil hole cap bolt and discard it. Replace the O-ring with a new one during reassembly.
 - Do not drain ATF by pushing in the piston rod.
- 5) Open the two wire band clips and one wire band, and free the motor wire.
- 6) Remove the four screw washers, and remove wire protector and power trim/tilt motor assembly.
- 7) Drain ATF from the valve body.
- 8) Remove the O-ring from the power trim/tilt motor assembly and discard it.
 - Replace the O-ring with a new one during reassembly.
- 9) Remove the drive joint from the gear pump assembly.

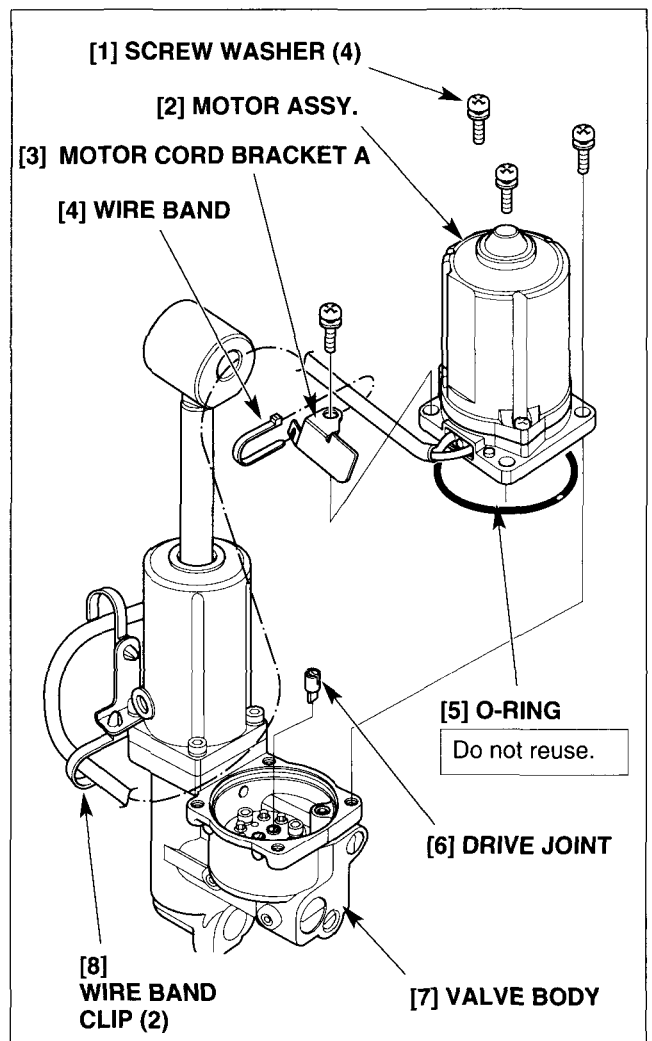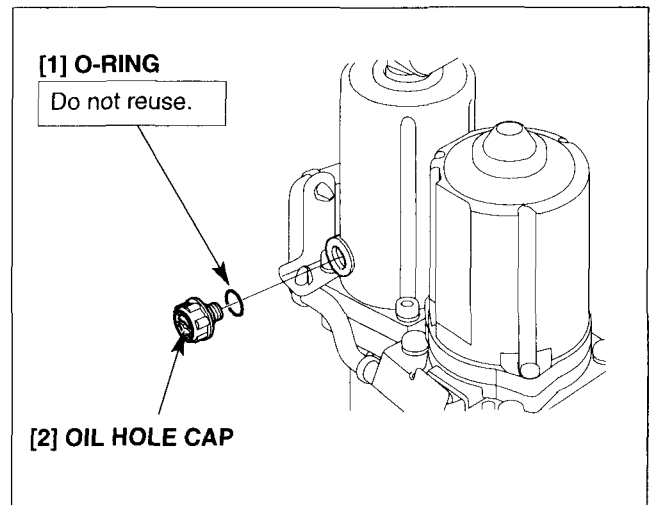


10) Remove the three 5 x 20 mm screws, yoke and O-ring. Discard the O-ring. Replace the O-ring with a new one during reassembly.

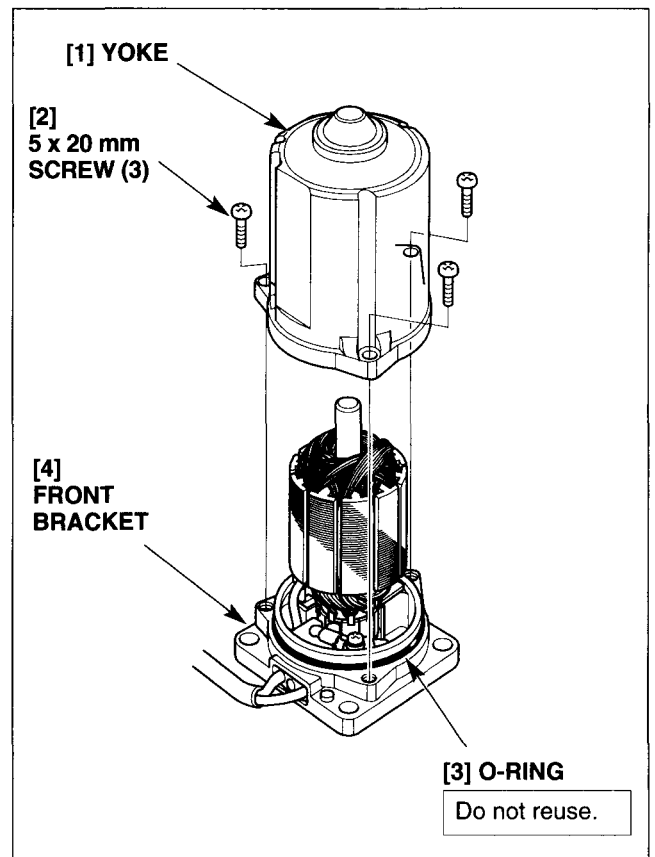

11) Remove the armature and brush springs.

- See page 13-18 for brush inspection and brush replacement.

12) Remove the oil seal if necessary. Discard the oil seal and replace the oil seal with a new one during reassembly.

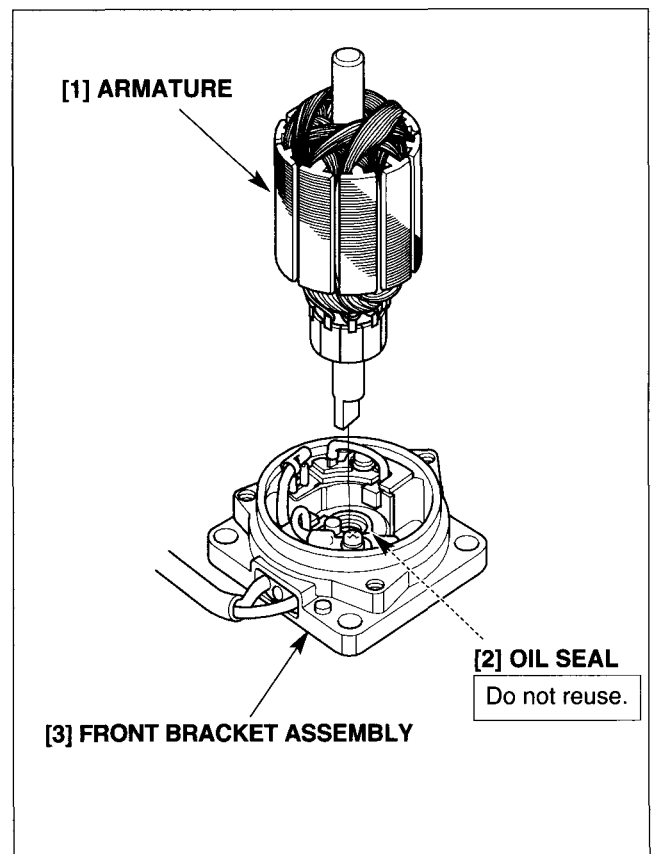


• CYLINDER, PISTON ROD


- 1) Hold the valve body in a vise with shop towel or soft jaws as shown.

CAUTION:


Take care not to tighten the vise too tight as it damages the valve body.

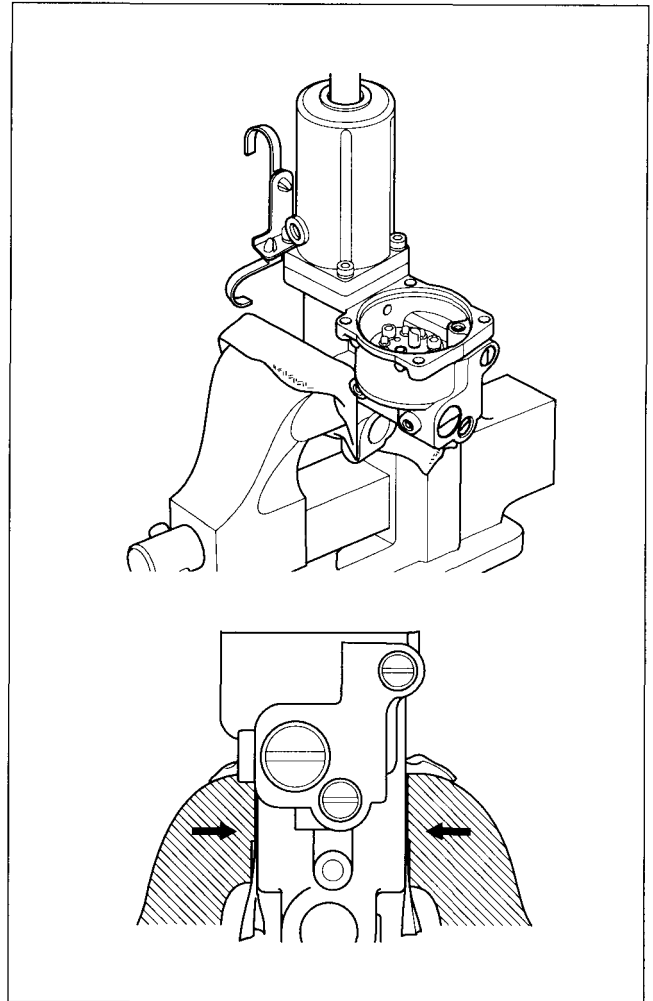

- 2) Hold the piston rod and remove the upper joint metal.
 - Clean of locking agent from the threaded points of the piston rod.

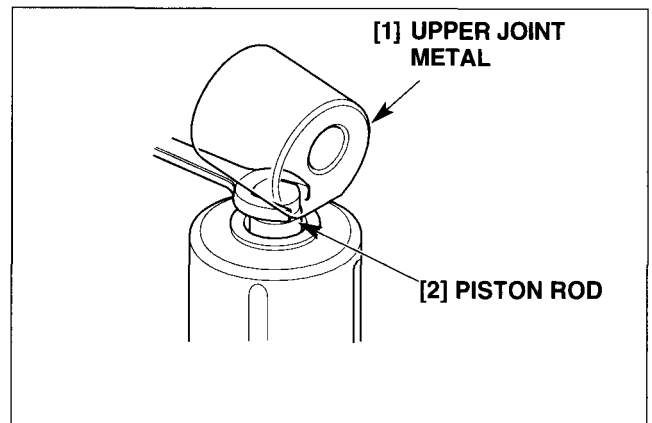

- 3) Remove the four 5 mm socket bolts and remove the oil tank and motor cord bracket B.
- 4) Remove the O-ring from the cylinder Comp.
Discard the O-ring. Replace it with new one during reassembly.

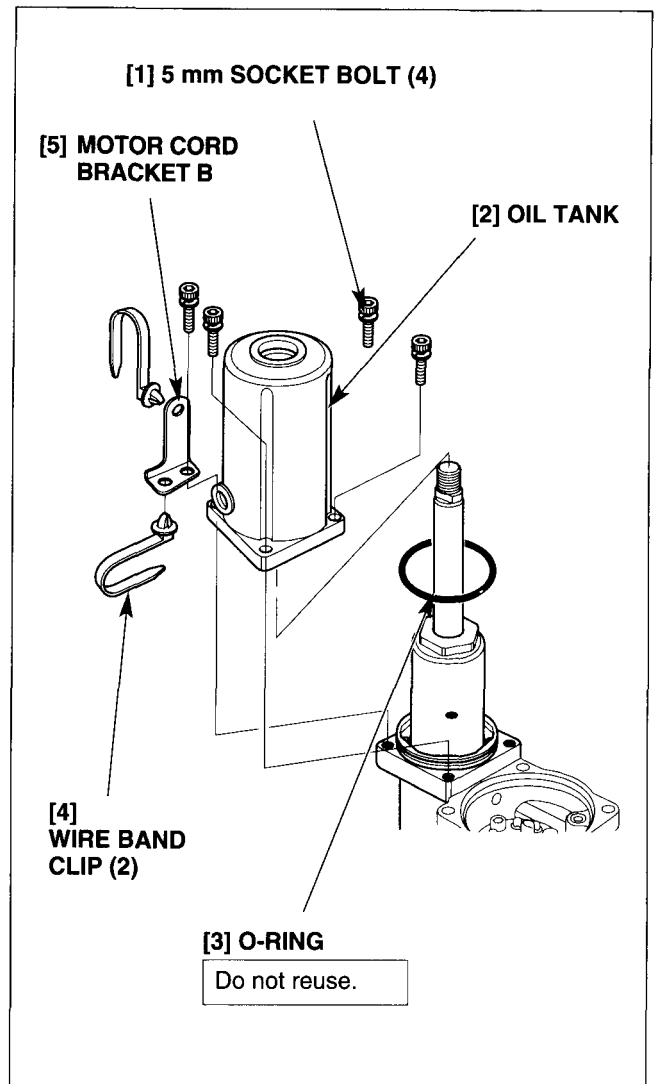


- 5) Remove the oil seal using small screw driver as shown.

Discard the oil seal. Replace it with new one during reassembly.


CAUTION:

Take care not to damage the oil seal installation section when removing the oil seal.

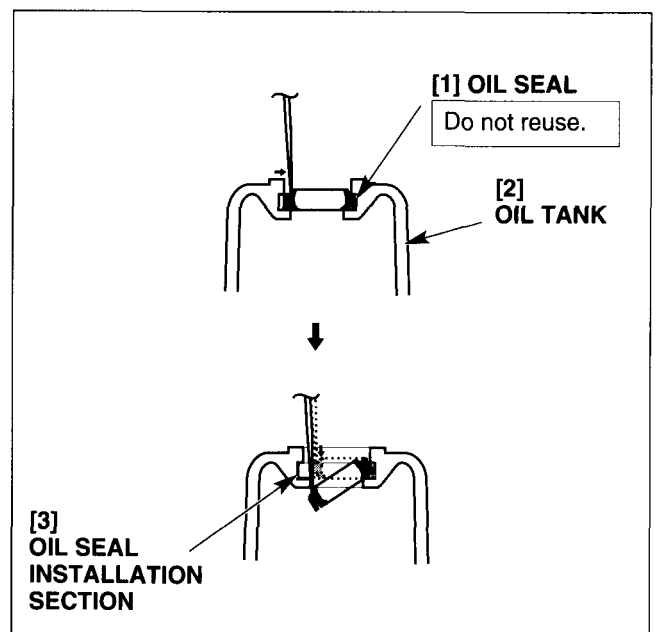

- 6) Remove the outer tube guide using the lock nut wrench.


Remove the O-rings from the outer tube guide and discard them. Replace the O-rings with new ones during reassembly.

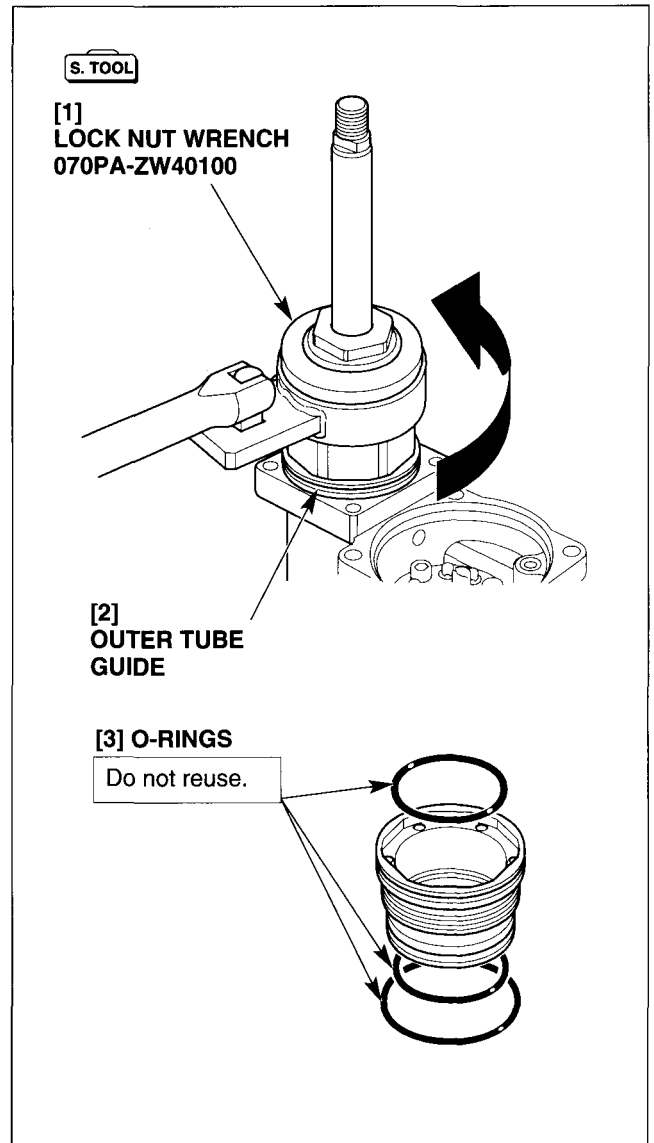

- 7) Remove the valve body and cylinder assembly from the vise.

- 8) Remove the cylinder/piston assembly from the valve body, and drain ATF from the cylinder assembly and valve body.


- 9) Remove the O-ring from the bottom piece and discard it. Replace the O-ring with new one during reassembly.

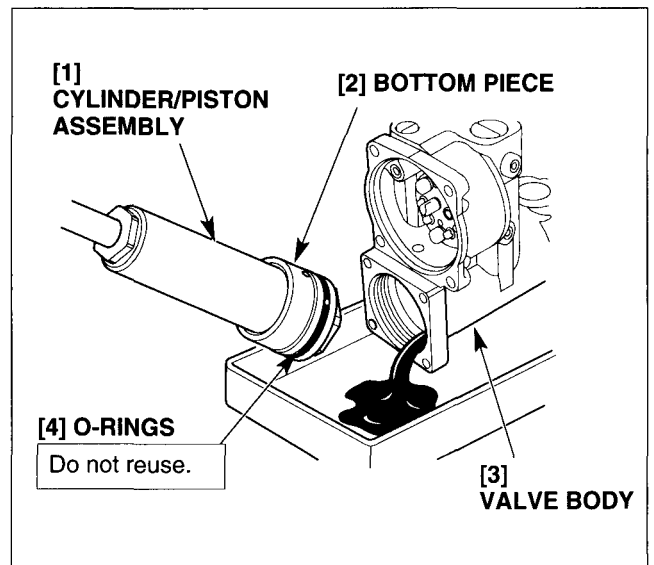

10) Hold the bottom piece in a vise with shop towel or soft jaws as shown and loosen the outer tube using the lock nut wrench, then remove the cylinder/piston assembly from the vise.

CAUTION:


Take care not to tighten the vise too tight as it damages the bottom piece.

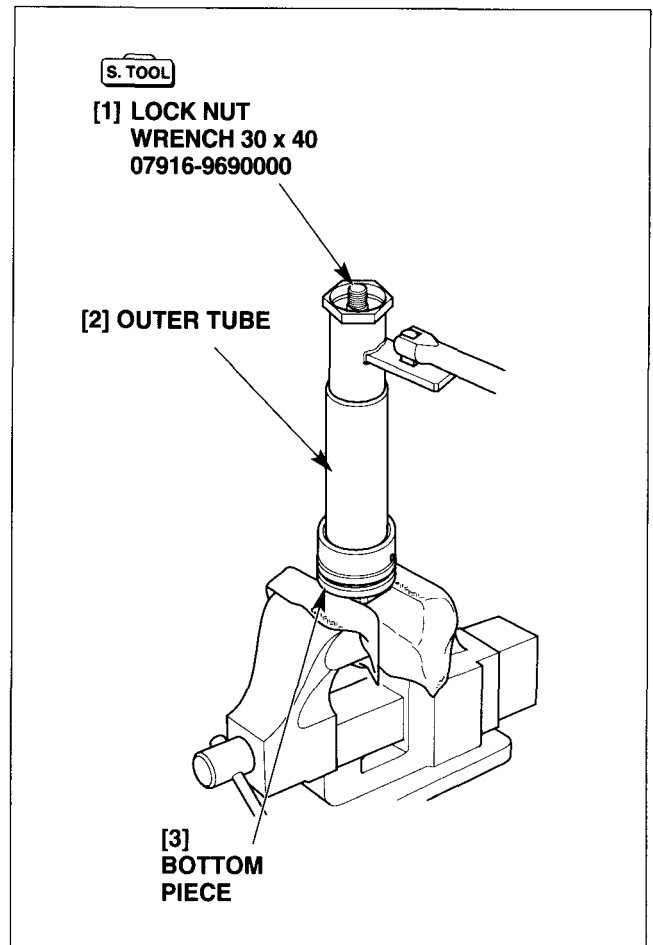

11) Remove the outer tube by loosening the outer tube slowly, and drain the residual ATF from the outer tube and cylinder.


Remove the O-ring from the outer tube using a small screw driver taking care not damage the O-ring installation section, and discard the O-ring. Replace the O-ring with new one during reassembly.

Clean the threads of the outer tube.

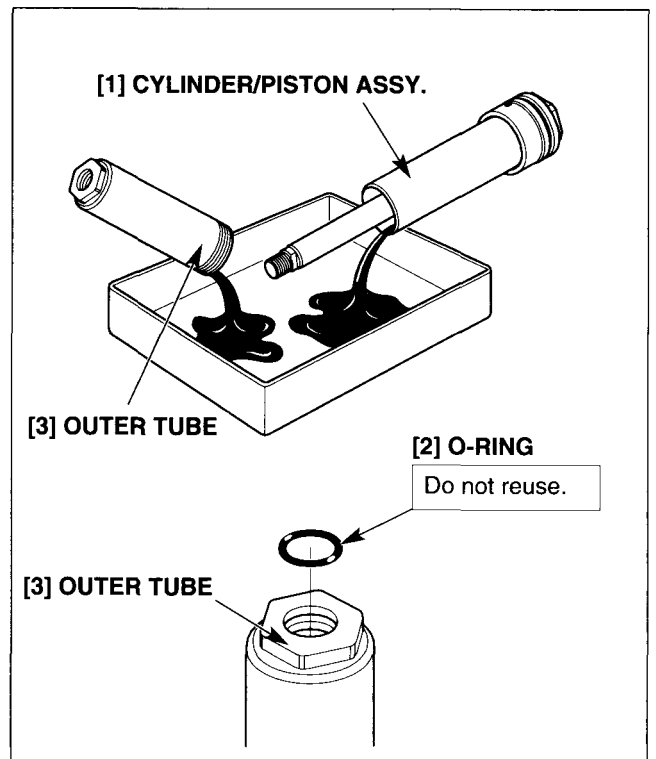


- 12) Remove the bottom piece from the cylinder.
 Remove and discard the O-ring. Replace the O-ring with a new one during reassembly.
 Clean the threads of the bottom piece.

- 14) Remove the piston and free piston from the cylinder.
 Remove and discard the O-rings and discard them.
 Replace the O-rings with new ones during reassembly.

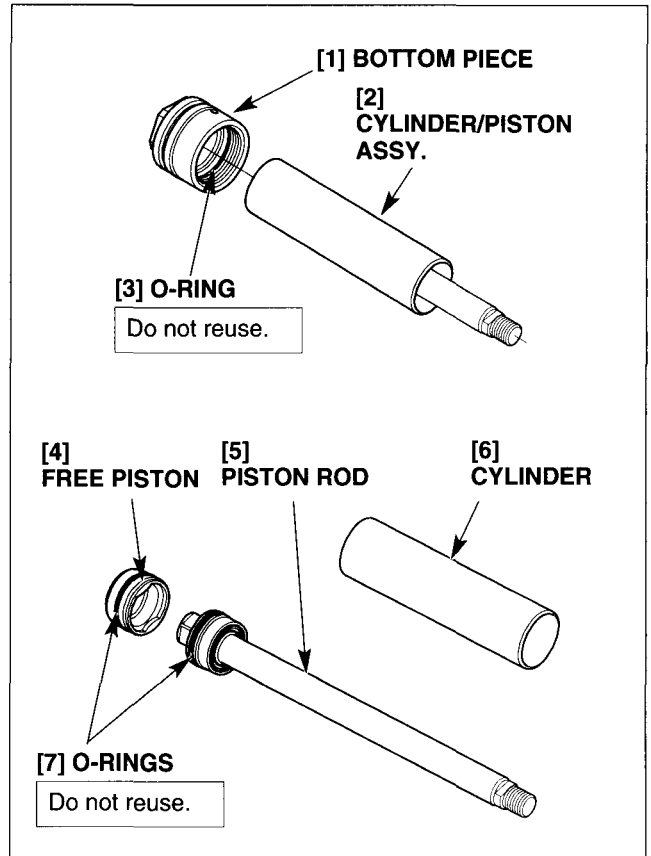

• VALVE BODY


- 1) Remove the socket bolts and gear pump assembly.
 • Do not disassemble the gear pump assembly. If it is faulty, replace it as an assembly.
- 2) Remove the two O-rings from the valve body and discard them. Replace the O-rings with new ones during reassembly.

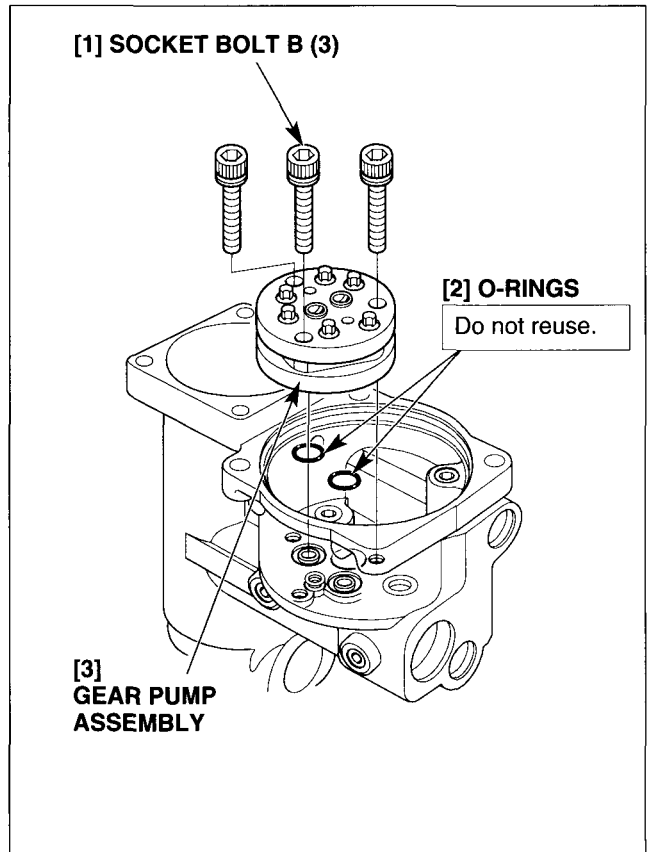


- 3) Remove the down relief valve:
 - valve spring
 - spring guide.
 - steel ball.
 - down relief valve seat.
 - O-ring.

Replace the O-ring with new one during reassembly.


- 4) Remove the upper chamber safety valve.
 Remove O-ring from the upper chamber safety valve and discard it. Replace the O-ring with new one during reassembly.

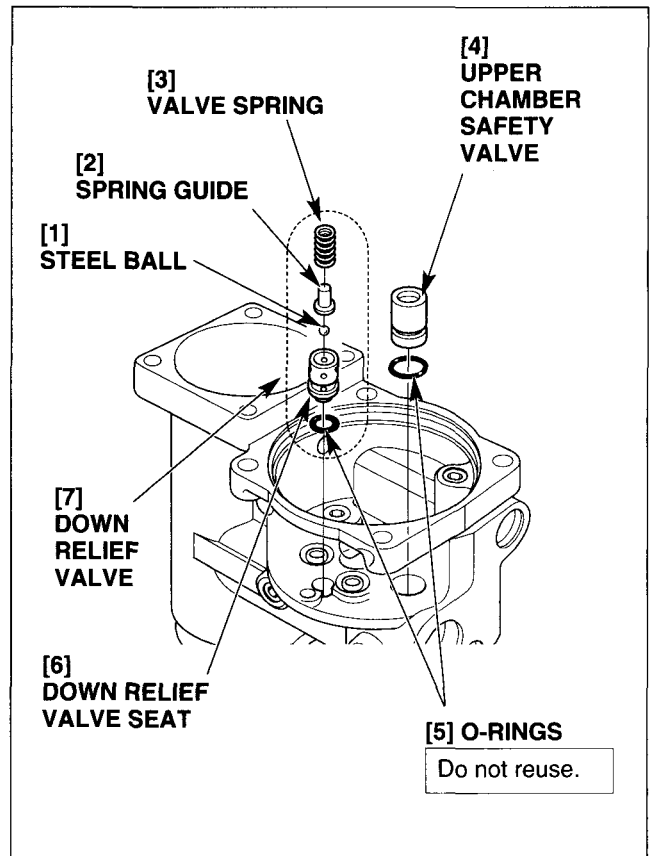

- 5) Remove the internal circlip, and remove the manual valve and seal washer.
 Remove the D-ring and O-ring, and discard them. Replace with new ones during reassembly.
 Check the sealing washer for damage and wear. Replace it if necessary.

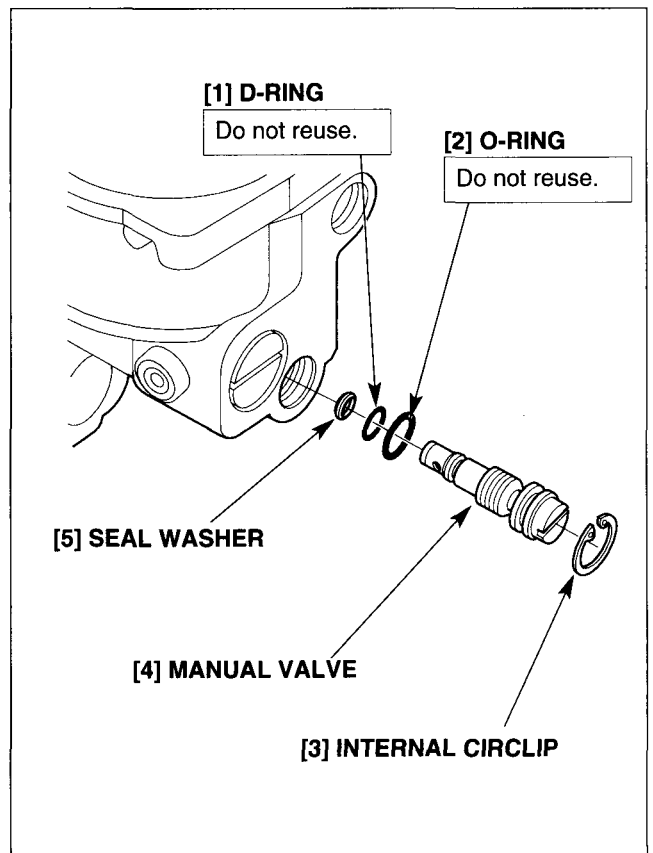


- 6) Remove the spool valve cap using a commercially available 2.8 mm driver bit.

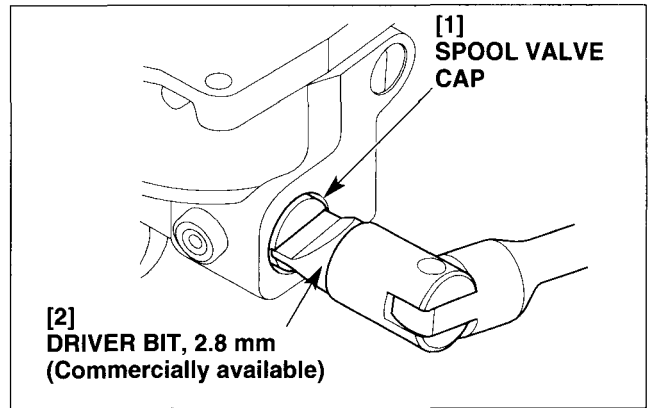


- 7) Apply small squirt of air pressure to the oil hole in the spool valve cap to remove the valve B. Remove the valve B from the spool valve cap.

Remove the O-rings from the spool valve cap and valve B and discard them. Replace the O-rings with the new ones during reassembly.

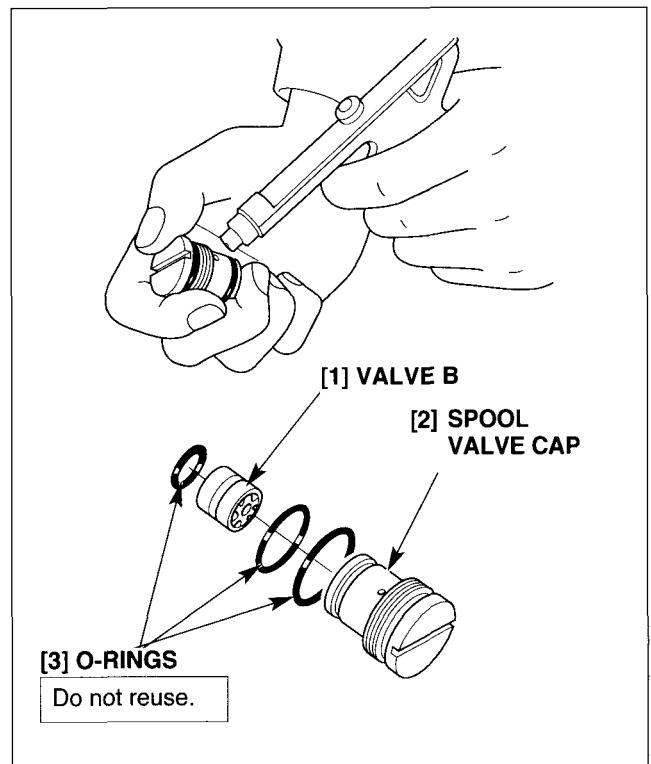


- 8) Remove the spool valve from the valve body.
Check the backup ring on the spool valve for damage and scratches. Replace the backup ring if it is damaged or scratched.

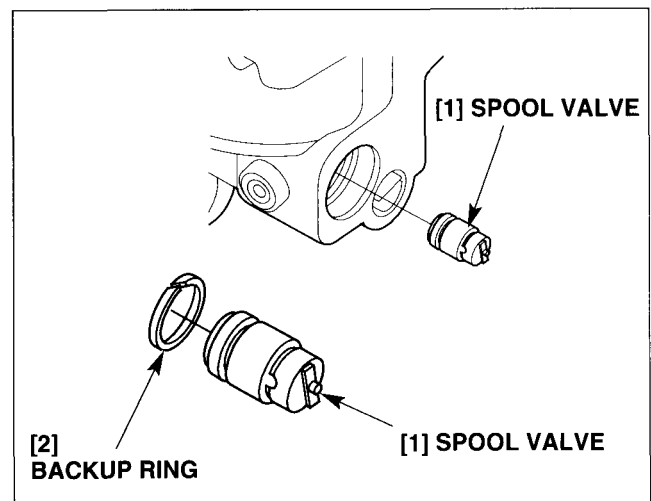


- 9) Prepare a piece of piano wire of 1.5 mm in diameter as shown.
- 7) Set the prepared wire in the holes in both sides of the sleeve as shown, and secure the wire by inserting the 10 mm bolt into the sleeve. Remove the sleeve from the valve body by pulling the wire with care not to damage the valve body.

Remove the O-ring from the sleeve and discard it. Replace the O-ring with a new one during reassembly.

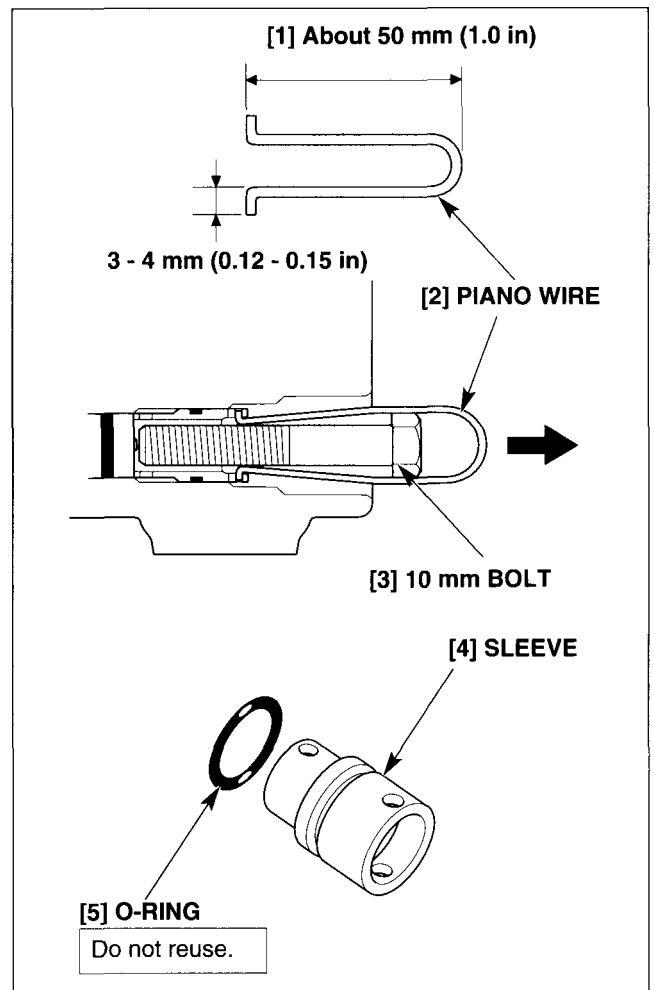


- 8) Set the valve body as shown. Apply small squirt of air pressure to the manual valve installation hole to remove the valve B. Remove the valve B from the valve body.

Remove the O-ring from the valve B. Replace the O-ring with a new one during reassembly.

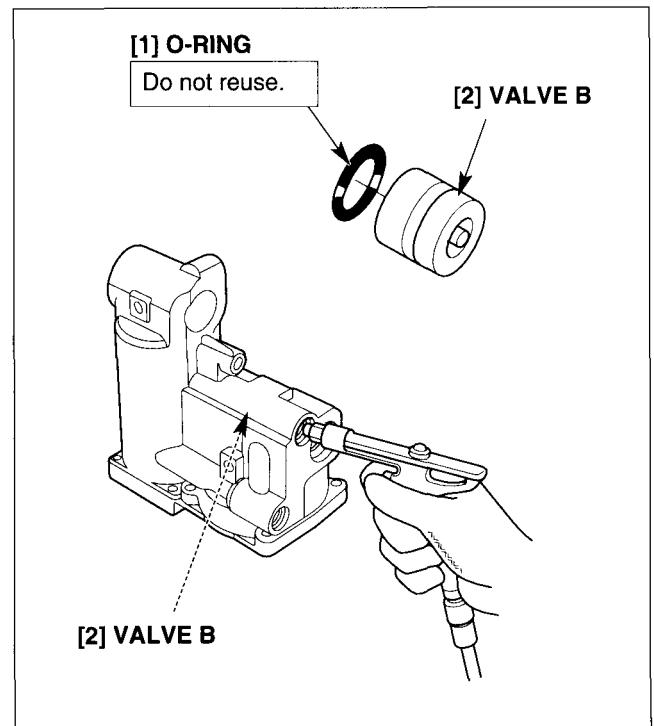

10) Remove the 2-way valve.

Remove the O-ring from the 2-way valve and discard it. Replace the O-ring with a new one during reassembly.

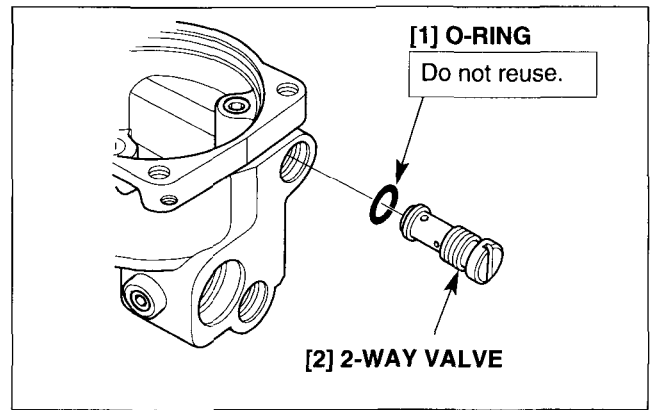


b. INSPECTION

• DOWN RELIEF VALVE

Check the down relief valve seat, spring guide, steel ball and spring for wear and damage. Replace the down relief valve seat, spring guide or spring if damaged or worn.

• UPPER CHAMBER SAFETY VALVE

Check the upper chamber safety valve for wear and damage. Replace the upper chamber safety valve if damaged or worn.

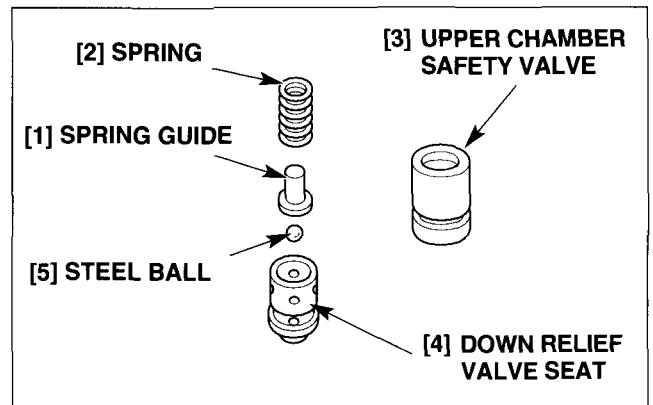


• CYLINDER

Make sure the piston rod is straight and has no damage. Replace the piston rod assembly with a new one if necessary.

• PISTON, FREE PISTON


Check the inner and outer surfaces of the cylinder for damage and scratches. Replace the cylinder with a new one if it is damaged or scratched.

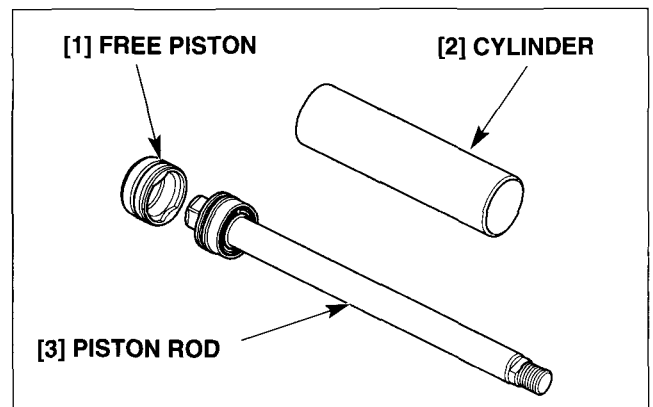

• MANUAL VALVE


Check the manual valve for damage and scratches. Replace if it is damaged or scratched.

Check the seal washer for damage and deterioration. Replace if it is damaged or deteriorated.

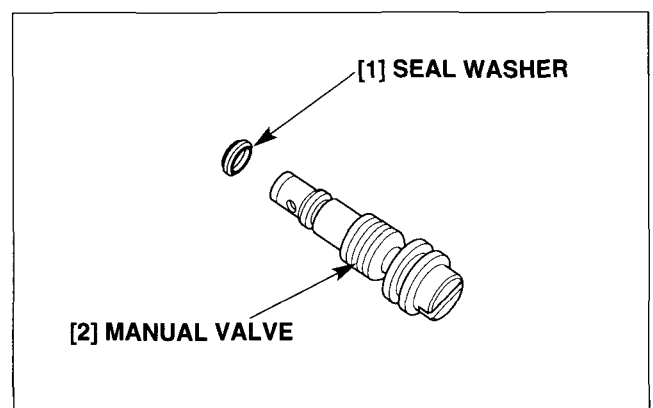


• **SPOOL VALVE, SLEEVE, VALVE B**

Check the sliding surface of the valve B, spool valve, sleeve for damage, scratches and wear. Replace if necessary.

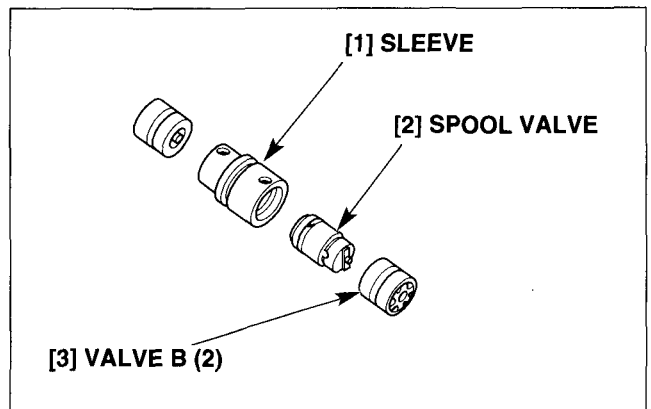


• **2-WAY VALVE**

Check the 2-way valve for damage, scratches and wear. Replace if necessary.

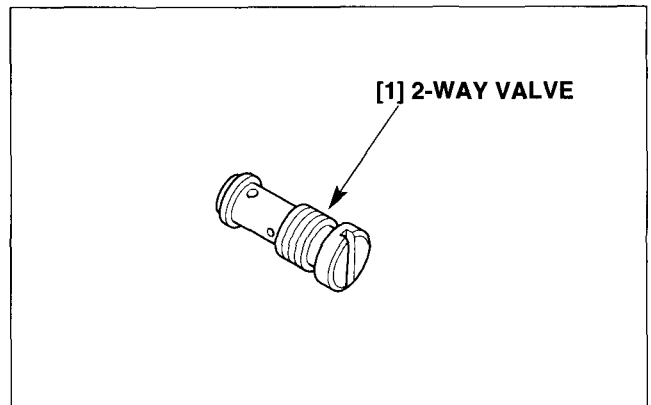

• **OIL TANK**

Visually inspect the oil seal installation section of the oil tank. Replace the oil tank if scratched or damaged.

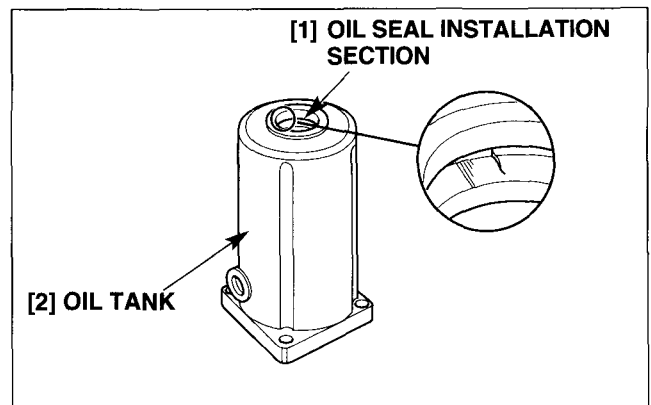


• **POWER TRIM/TILT MOTOR**

• **Brush**

Measure the brush length.

Standard	Service limit
10 mm (0.4 in)	6 mm (0.2 in)


If the brush length is less than the service limit, replace the front bracket assembly.

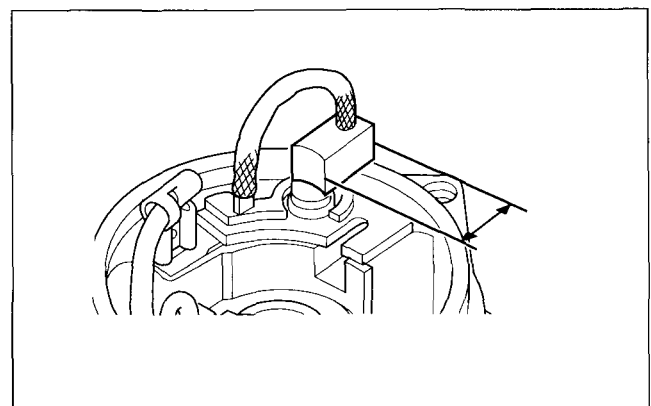


• Armature

- 1) Check the armature for wear and damage. Replace if necessary.
- 2) Visually inspect the commutator surface for dust, rust and other damage. If necessary, wipe it with a clean lint-free cloth or dress with a fine emery cloth.
- 3) Measure the mica depth. If the grooves are clogged, clean the grooves and measure the depth again. If the measurement is less than the service limit, replace the armature.

Service limit	1.3 mm (0.05 in)
---------------	------------------

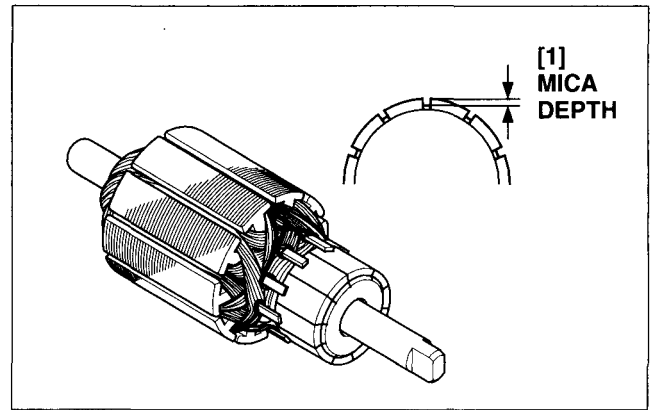


- 4) Check for continuity between each segment. If an open circuit exists between any two segments, replace the armature.

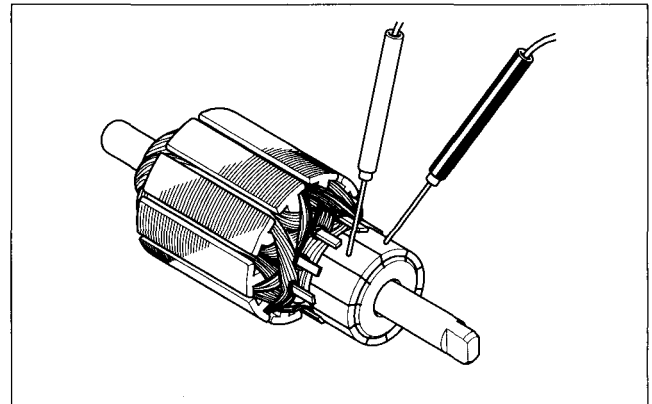

- 5) Check for continuity between the commutator and armature coil core. If continuity exists, replace the armature.

- 6) Check for continuity between the commutator and armature shaft. If there is continuity, replace the armature.

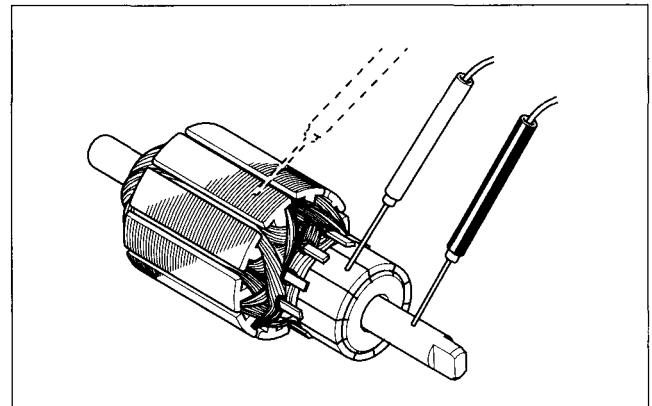


c. ASSEMBLY

• VALVE BODY ASSEMBLY


CAUTION:

- Do not reuse the O-ring.
- Do not use a shop towel, cloth, gloves, etc. when reassembly.
- Assemble the parts with care not to let the foreign particles and dirt enter the valve body and gear pump assembly.

1) Clean the parts in the fresh ATF, and blow each port of the parts with compressed air. Check that the parts are free from contamination with dust and dirt before reassembly.

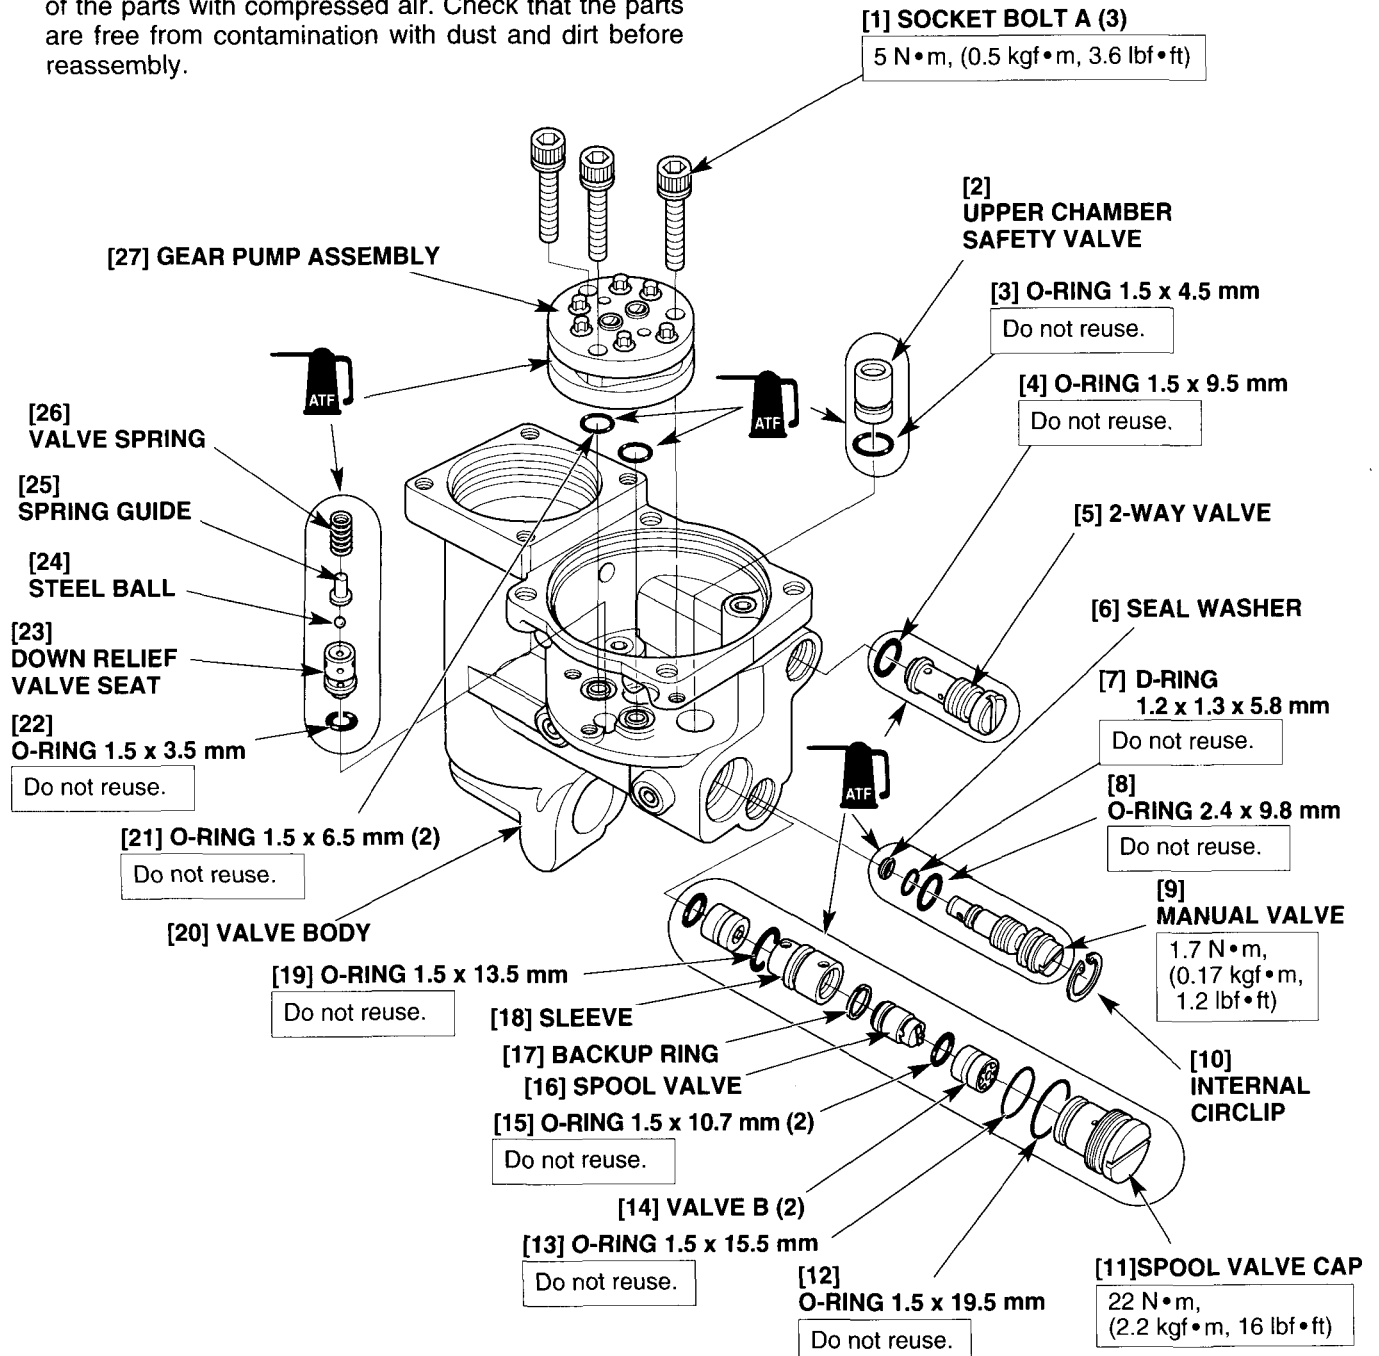


- 2) Apply ATF to a new O-ring, and install it on the valve B.
- 3) Apply ATF to the valve B and install the valve B in the valve body noting the installation direction.
- 4) Apply ATF to a new O-ring, and install it on the sleeve.
- 5) Set the new backup ring on the spool valve and apply ATF to the outer surface of the spool valve.
- 6) Install the spool valve in the sleeve noting the installation direction.
- 7) Apply ATF to the sleeve, and install the sleeve in the valve body noting the installation direction.

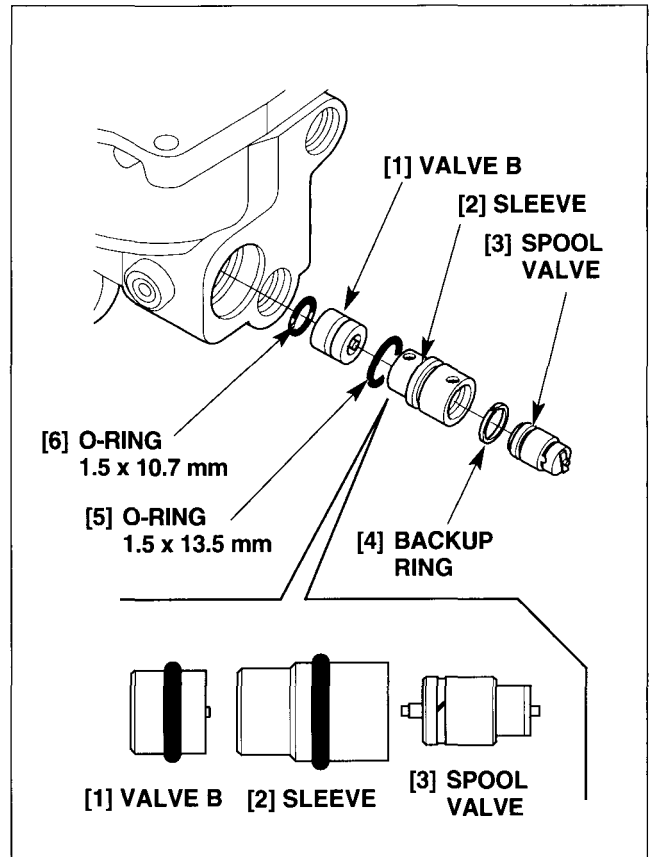


- 8) Apply ATF to a new O-ring, and install it on the valve B.
- 9) Apply ATF to the valve B and install it in the spool valve cap noting the installation direction.
- 10) Apply ATF to the new O-rings, and install the O-rings on the spool valve cap.
- 11) Tighten the spool valve cap to the specified torque using a commercially available 2.8 mm driver bit.

TORQUE: 22 N•m (2.2 kgf•m, 16 lbf•ft)

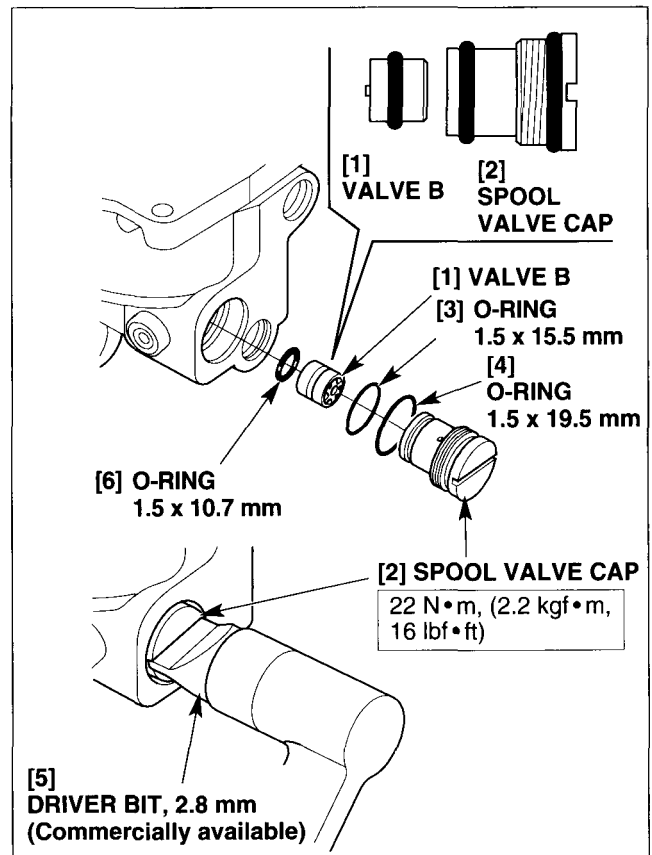


- 12) Apply ATF to the sealing washer, and set it in the valve body at right angles. Be careful not to set it at an inclined angle, which can lead to the collapsed sealing washer.
- 13) Apply ATF to a new D-ring and a new O-ring, and install them on the manual valve.
- 14) Tighten the manual valve to the specified torque, and set the internal circlip in the groove in the valve body securely.

TORQUE: 1.7 N•m (0.17 kgf•m, 1.2 lbf•ft)

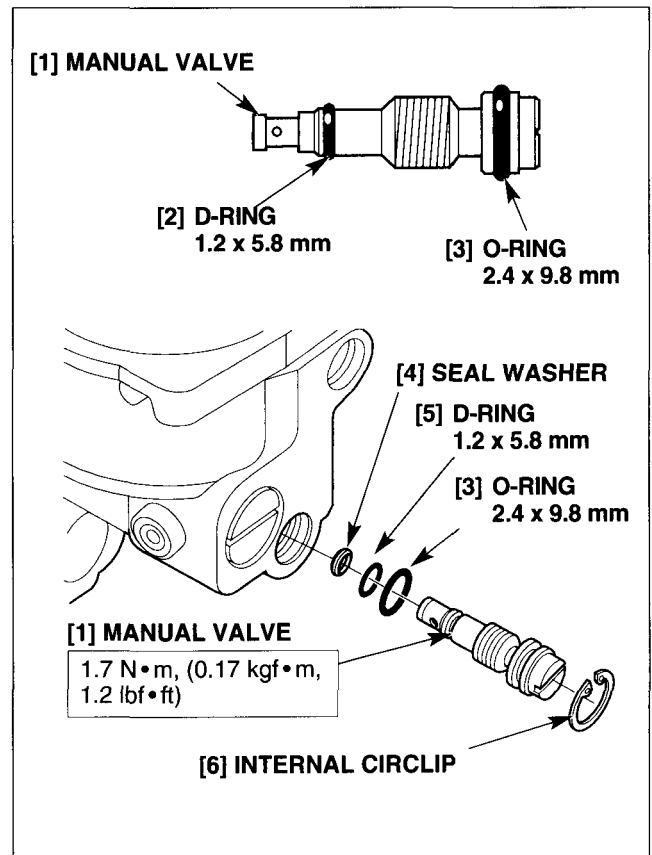


- 15) Apply ATF to new O-ring, and install it on the 2-way valve.
- 16) Install the 2-way valve to the valve body and tighten the 2-way valve to the specified torque.

TORQUE: 7 N•m (0.7 kgf•m, 5.1 lbf•ft)

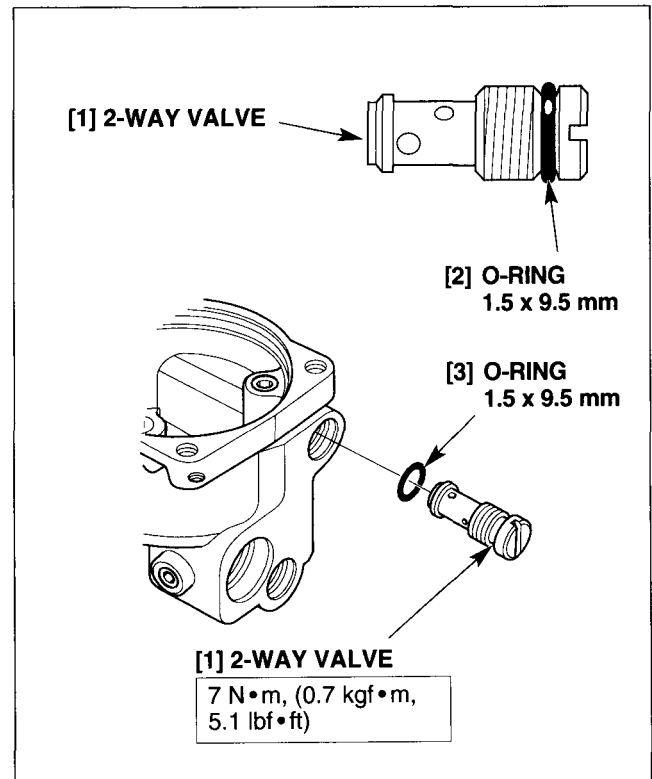

- 17) Apply ATF to a new O-ring, and install it on the down relief valve seat.
- 18) Apply ATF to the down relief valve seat and install it in the valve body as shown noting the direction.
- 19) Install the steel ball, spring guide and the valve spring in the down relief valve seat.
- 20) Apply ATF to a new O-ring, and install it on the upper chamber safety valve.
- 21) Apply ATF to the upper chamber safety valve and install it in the valve body noting the direction shown.

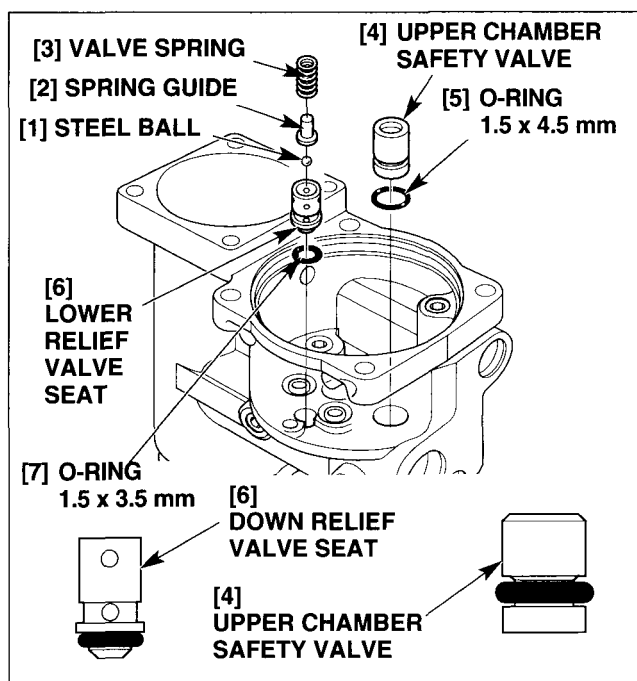


- 22) Apply ATF to the two new O-rings and install the O-rings in the valve body in the positions shown.

- 23) Install the gear pump assembly in the valve body by aligning the projection at the bottom of the gear pump assembly with the positioning hole in the valve body.
 - Take care not to let the O-rings come out of position in the valve body.

- 24) Tighten the socket bolts to the specified torque.

TORQUE: 5 N•m (0.5 kgf•m, 1.3 lbf•ft)

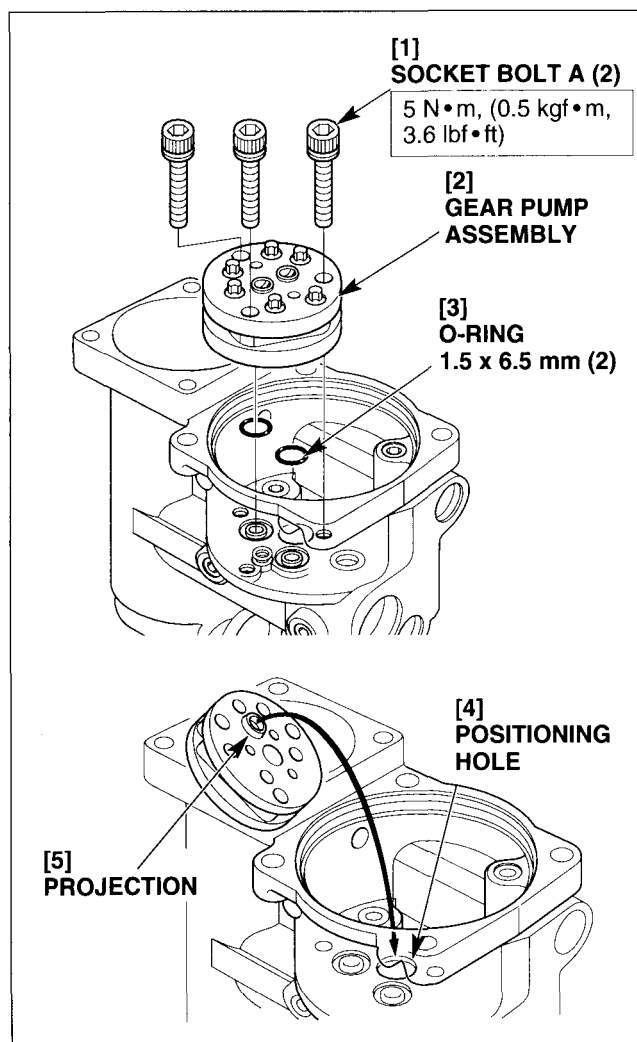


• CYLINDER, PISTON, OIL TANK


CAUTION:

- Do not reuse the O-ring.
- Do not use a shop towel, cloth, gloves, etc. when reassembly.
- Assemble the parts with care not to let the foreign particles and dirt enter the valve body and gear pump assembly.


1) Clean the parts in the fresh ATF. Check that the parts are free from contamination with dust and dirt before reassembly.

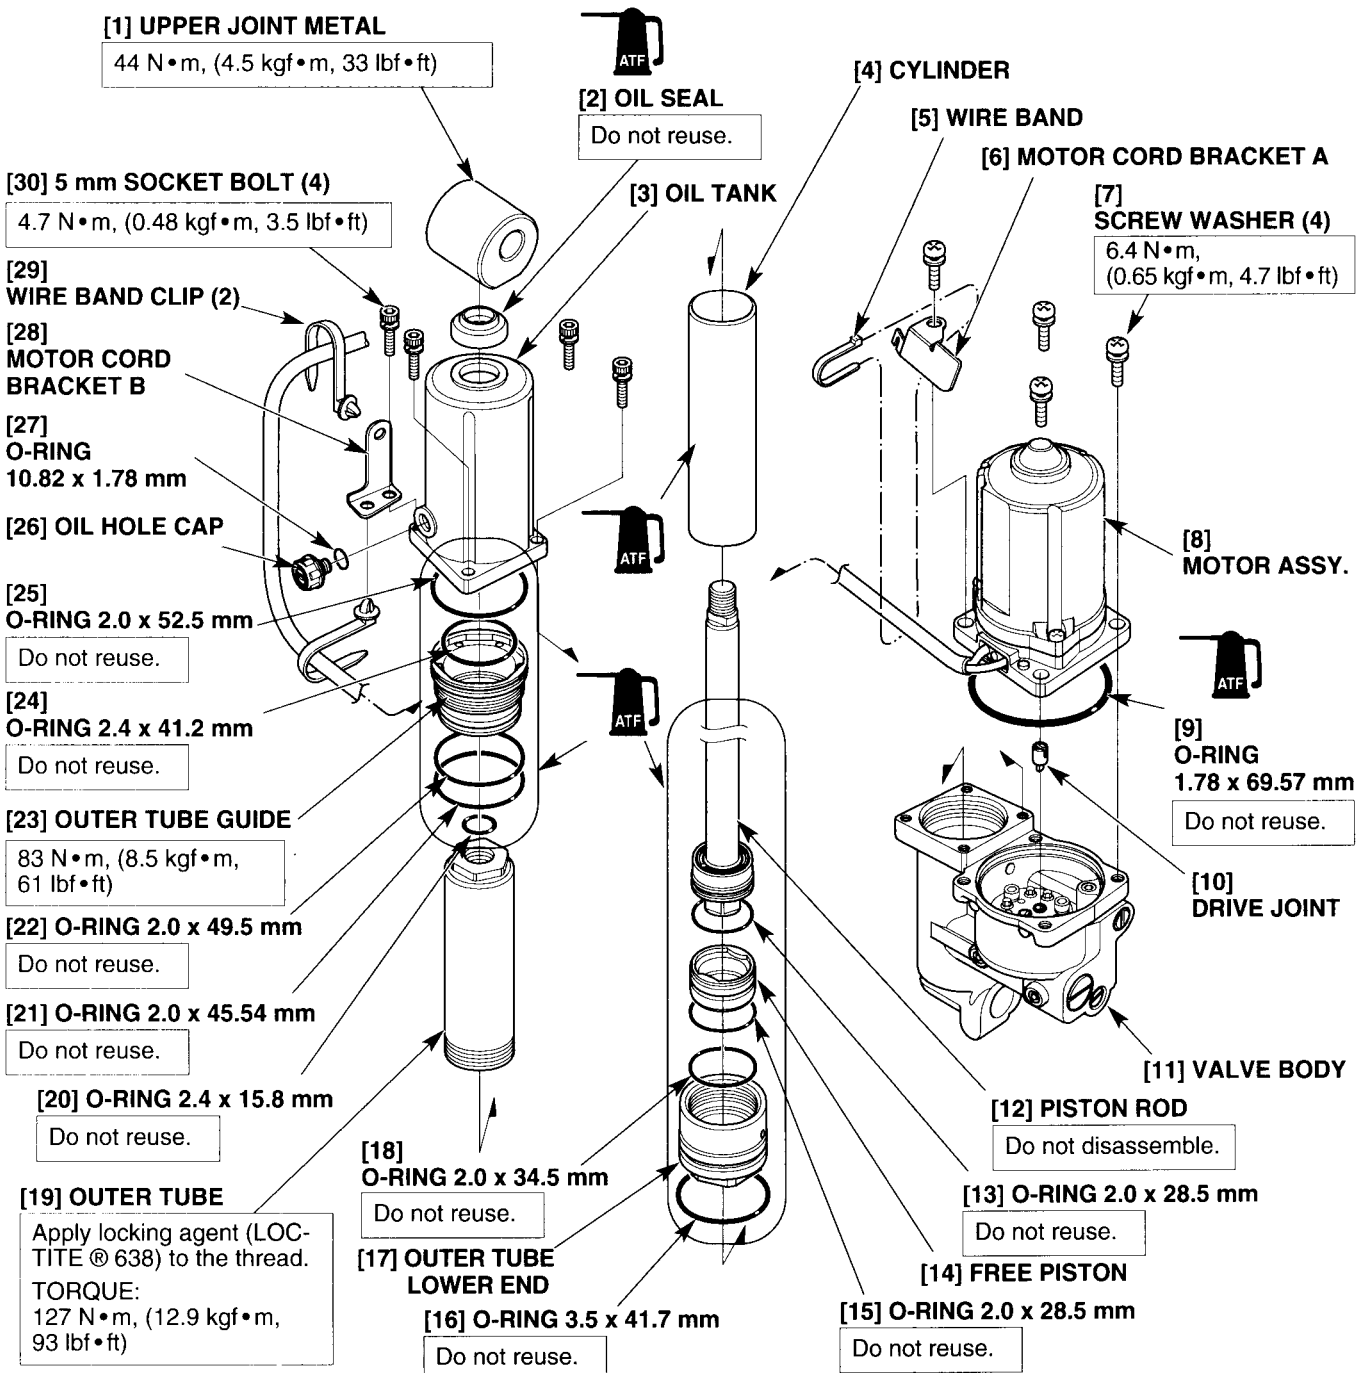


- 2) Apply ATF to a new O-ring, and install it on the free piston.

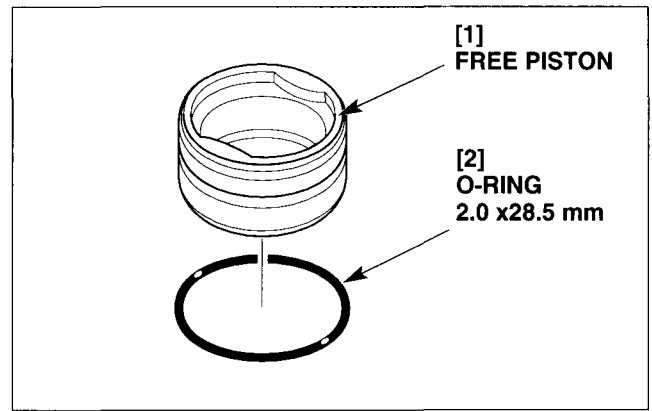


- 3) Apply ATF to a new O-ring and install it on the piston rod.
- 4) Apply ATF to the inner wall of the cylinder.
- 5) Install the free piston in the cylinder taking care not to damage the O-ring, and pour the fresh ATF on the free piston.
- 6) Install the piston rod in the cylinder taking care not to damage the O-ring.
- 7) Push in the piston rod until the free piston end aligns with the bottom end as shown.

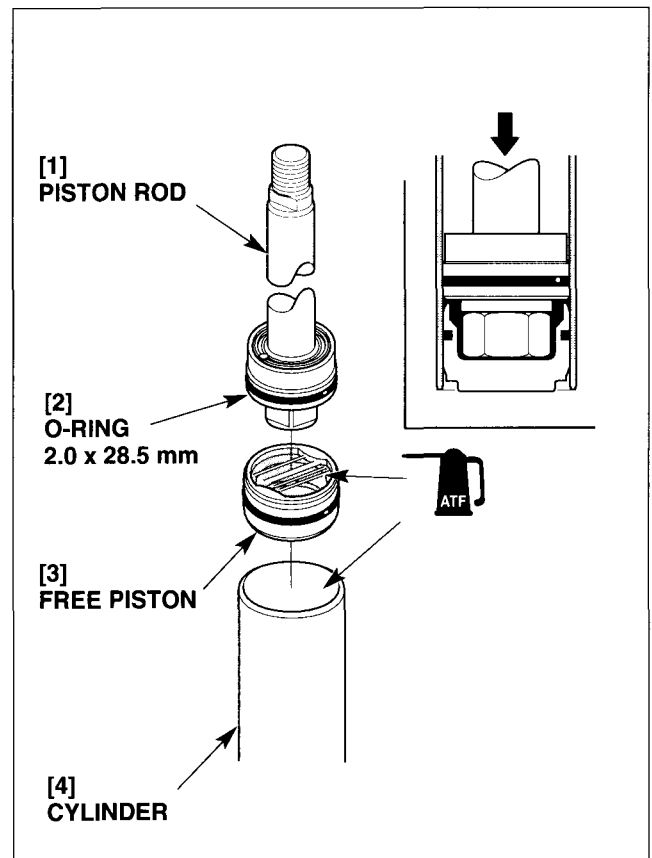

- 8) Apply ATF to a new O-ring, and install it in the bottom piece.

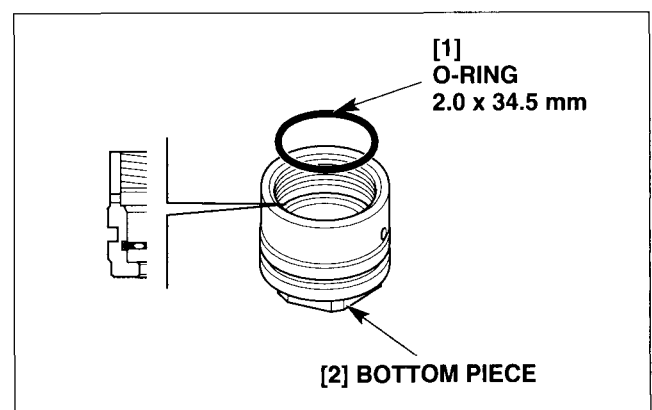

- 9) Apply ATF to the lower end of the cylinder and install the cylinder to the bottom piece.

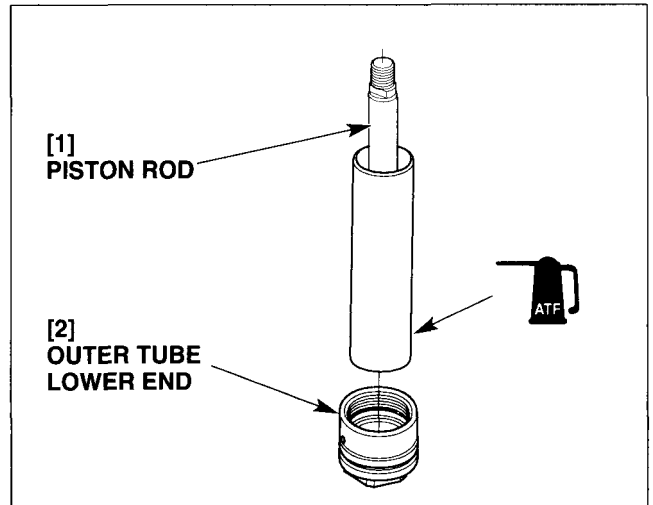


- 10) Set the cylinder/piston assembly vertically on the vise by holding the bottom piece.


CAUTION:

Take care not to tighten the vise too tight as it damages the bottom piece.


- 11) Pour the fresh ATF into the cylinder up to the top edge of the cylinder.

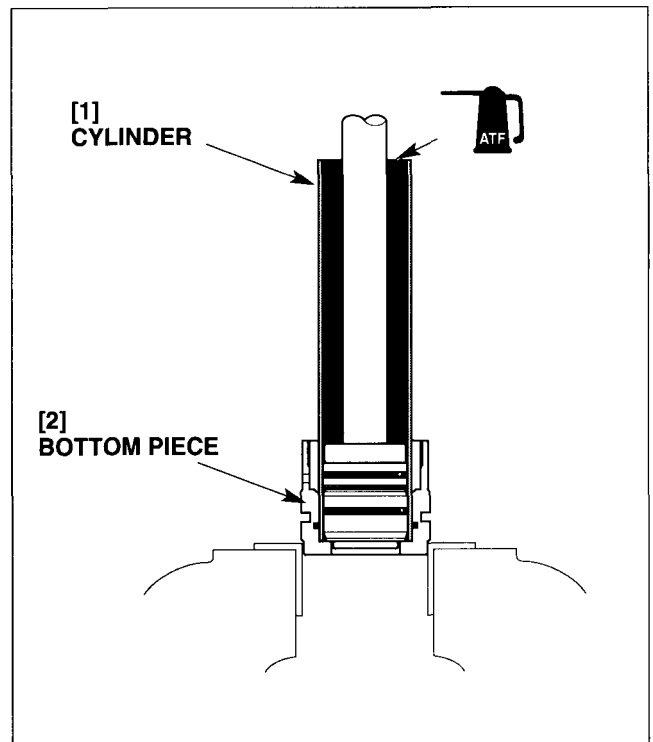

- 12) Apply ATF to a new O-ring, and install it in the groove in the outer tube taking care not to damage the O-ring.

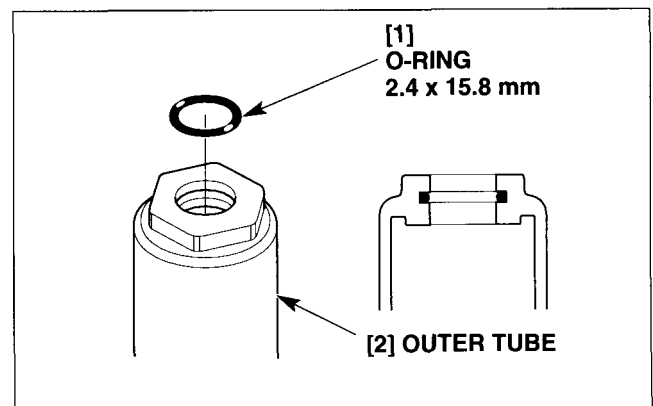


- 13) Attach a thin sealing tape around the threads at the end of the piston rod.
- 14) Apply ATF to the top of the piston rod and O-ring of the outer tube install the outer tub to the piston rod.
 - To install turn the outer tube by hand taking care not to damage the O-ring in the outer tube.

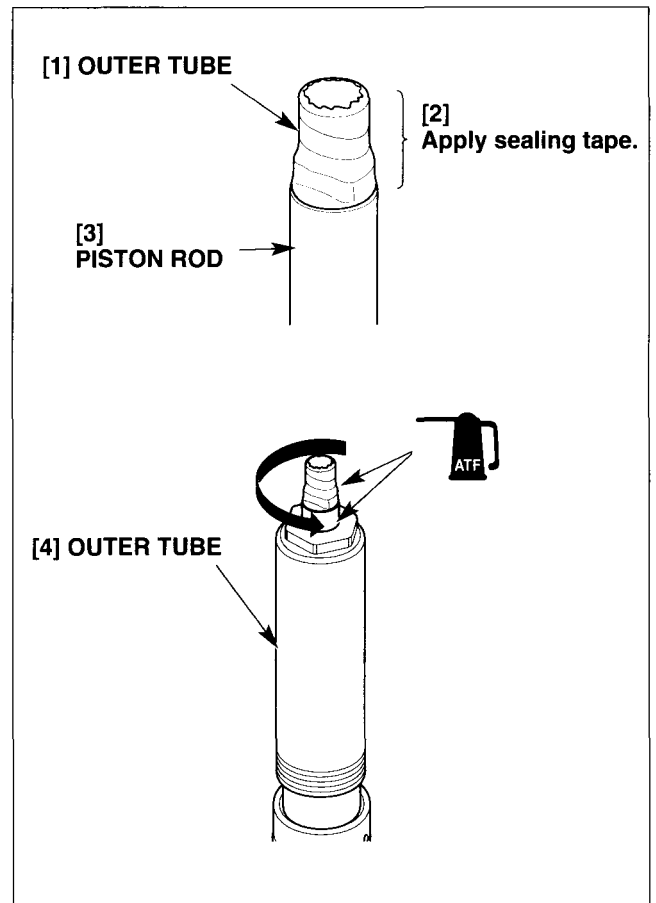

- 15) Tighten the outer tube 2 or 3 turns, then apply LOCTITE® 241 or equivalent to the thread of the outer tube as shown.
- 16) Tighten the outer tube to the specified torque using the 30 mm lock nut wrench.

TORQUE: 64 N•m (6.5 kgf•m, 47 lbf•ft)
- 17) Remove the piston/cylinder assembly from the vise and clean off the residual LOCTITE® from the outer tube.

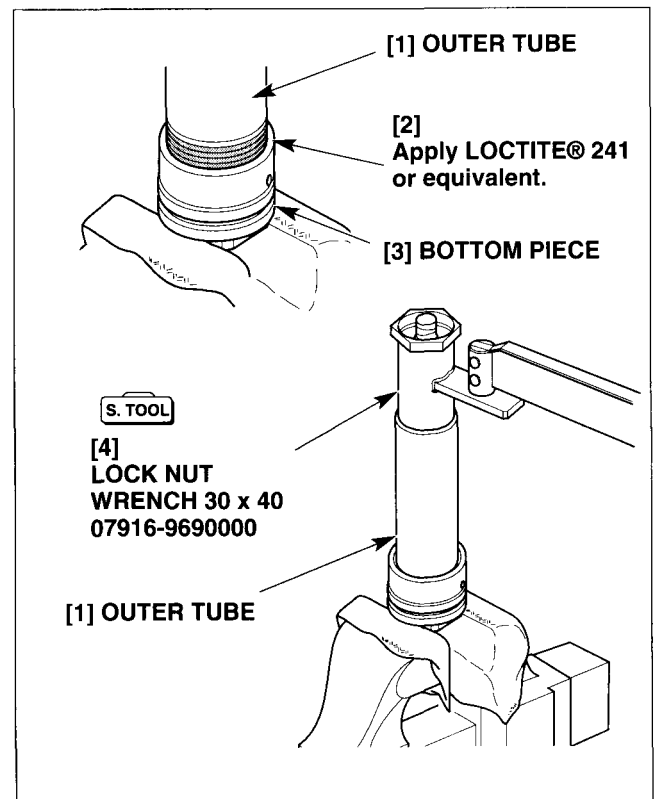

18) Apply ATF to a new O-ring, and install it on the bottom piece.


19) Hold the valve body in a vise with shop towel or soft jaws as shown

CAUTION:

Take care not to tighten the vise too tight as it damages the valve body.

20) Loosen the manual valve 3 turns or more and pour the fresh ATF into the cylinder chamber up to the top edge of the valve body.


21) Install the cylinder piston assembly to the valve body.

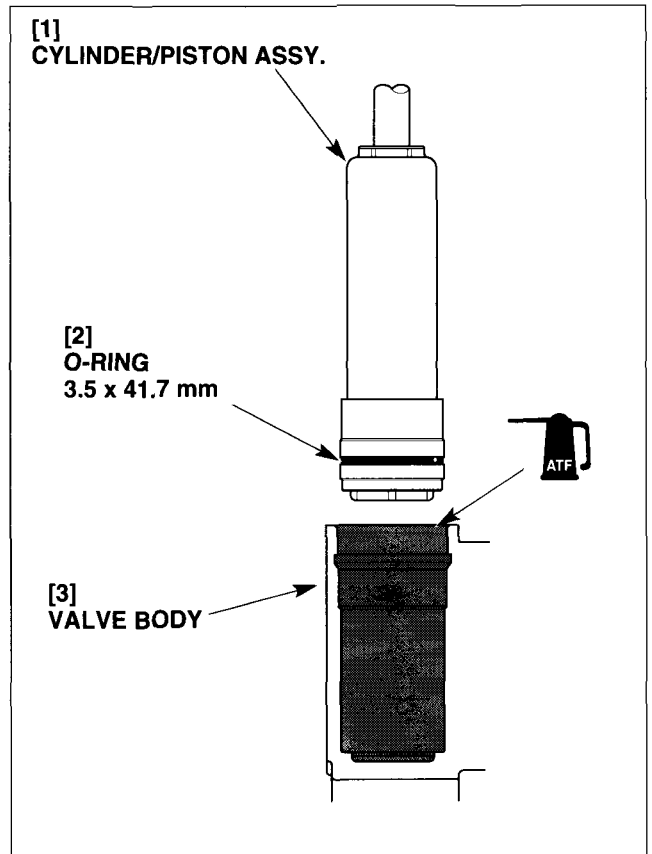

22) Apply ATF to new O-rings and install them on the outer tube guide.

23) Pour the fresh ATF into the cylinder chamber of the valve body up to the top edge of the valve body.


24) Install the outer tube guide loosely.

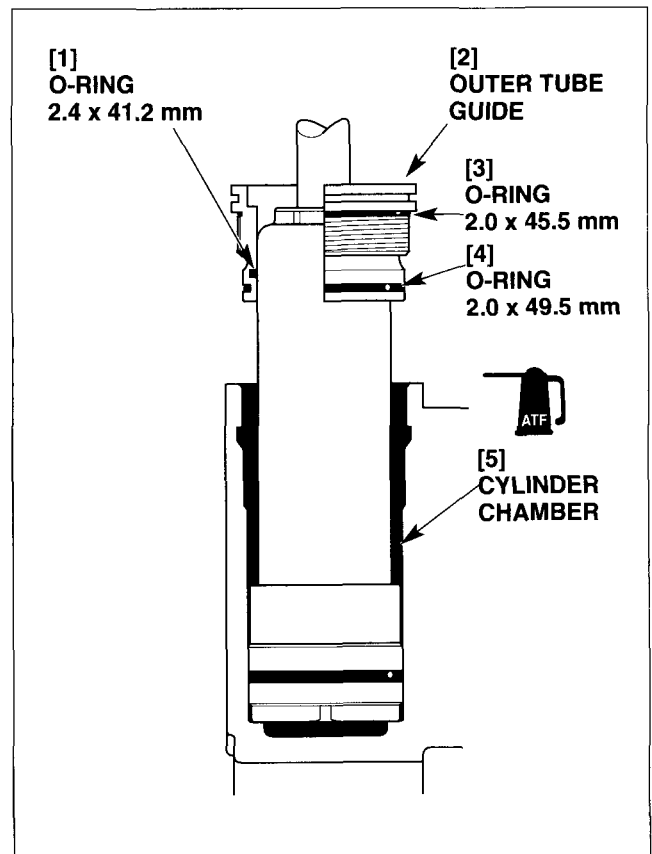

25) Tighten the outer tube guide to the specified torque using the lock nut wrench.

TORQUE: 88 N•m (9.0 kgf•m, 65 lbf•ft)

26) Tighten the manual valve securely.

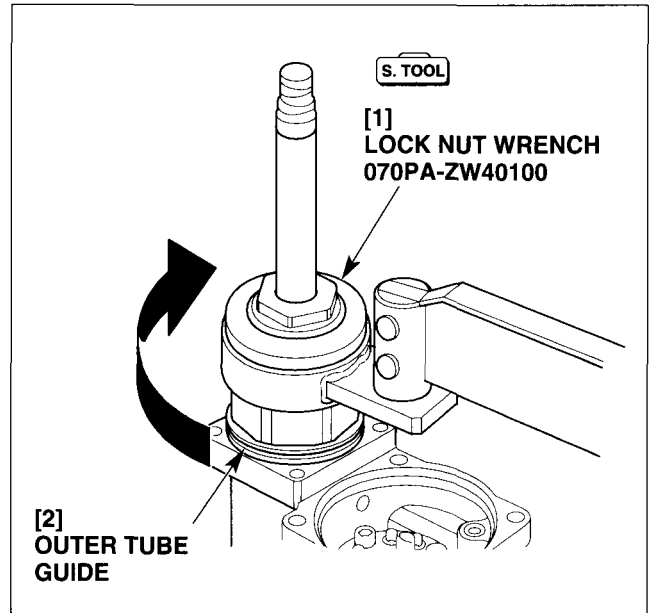

27) Apply rubber grease or ATF to a new oil seal. Holding the oil seal with your fingers so that it shapes "U" and install it in the groove in the outer tube taking care not to damage the oil seal.


28) Apply ATF to new O-ring and install it on the outer tube guide.

29) Apply ATF to the piston rod and install the oil tank by turning it taking care not to damage the oil seal in the oil tank.

30) Set the oil tank as shown and tighten the four 5 mm socket bolts to the specified torque.

TORQUE: 4.7 N•m (0.48 kgf•m, 3.5 lbf•ft)

31) Remove the sealing tape from the top end of the piston rod.

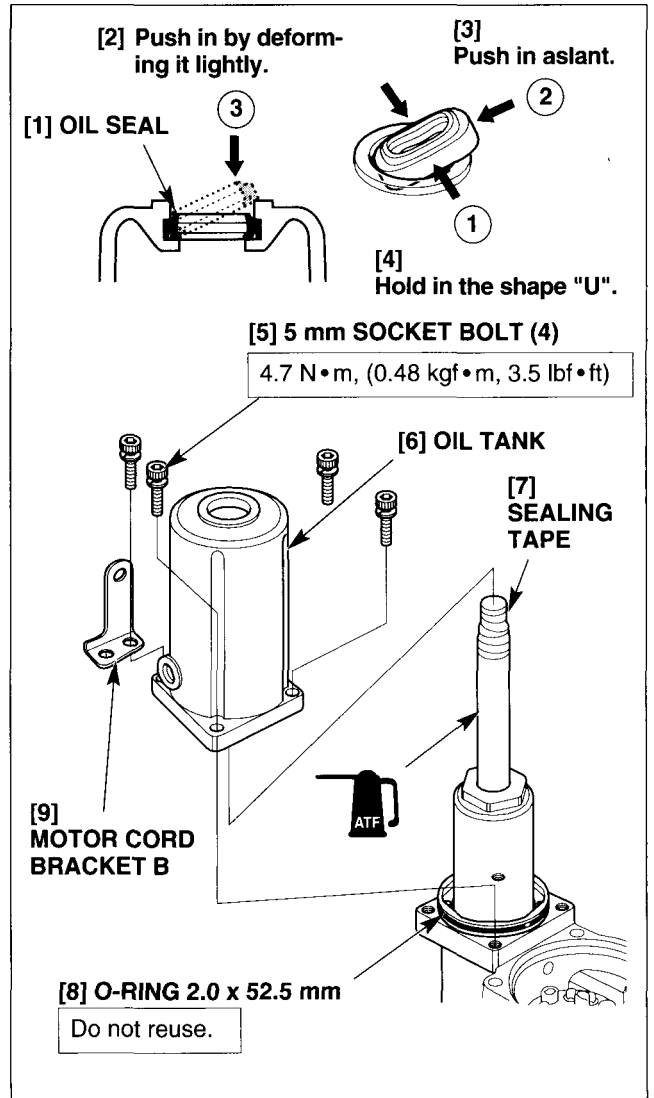

• POWER TRIM/TILT MOTOR

[1] YOKE

- Make sure there is no metallic part (e.g. washer, etc.) on the magnets before installation.
- After installing the yoke, lightly tap on the outer surface of the yoke with a plastic hammer (for snug fitting of the armature bearing).

[2] 5 mm SCREW (3)

2.2 N•m, (0.22 kgf•m,
1.6 lbf•ft)

[6] ARMATURE

- Remove the burrs at the armature shaft with a fine emery paper before assembly.
- Take care not to damage the oil seal during assembly.

GREASE

[3] O-RING


Do not reuse. Replace with a new one.

GREASE


[5] FRONT BRACKET ASSEMBLY

GREASE

[4] OIL SEAL LIP

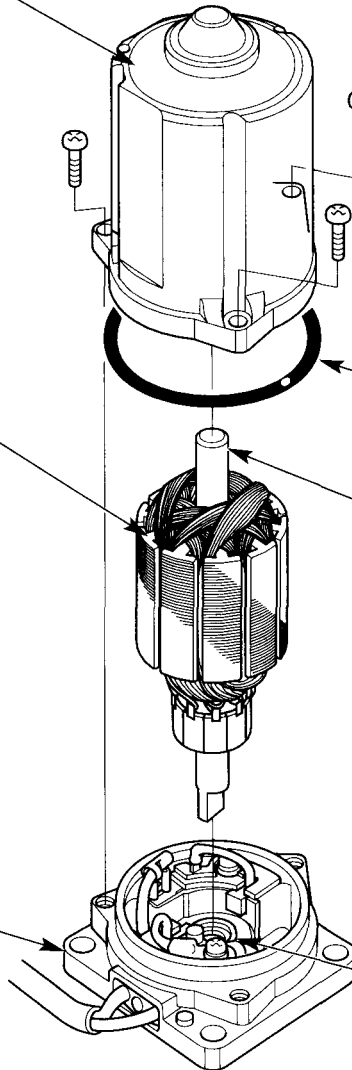


- 1) Apply grease to the oil seal lip.
 - Check the oil seal lip. If the oil seal lip is damaged, replace the front bracket as assembly.
- 2) Expand the brushes and install the armature taking care not to damage the oil seal.
 - Remove the burrs at the armature shaft with a fine emery paper before assembly.
 - Make sure that the brush springs are in place

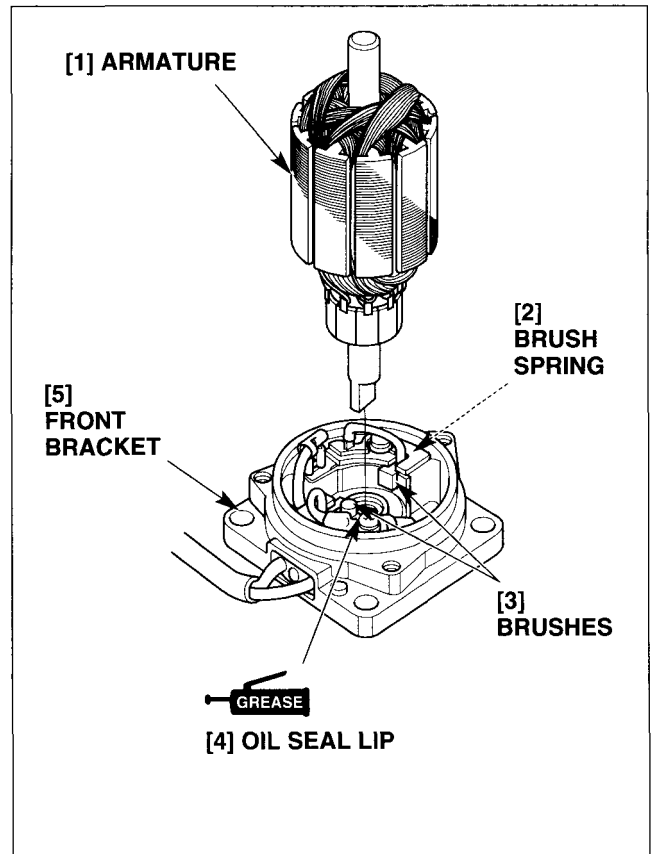


- 3) Apply grease to a new motor O-ring and install it on the front bracket.
- 4) Make sure there is no metallic part (e.g. washer, etc.) on the magnets before installation.
- 5) Apply grease to the yoke side end of the armature shaft. Hold the armature shaft and install the yoke.
- 6) Tighten the three 5 x 20 mm screws to the specified torque.

TORQUE: 2.2 N•m (0.22 kgf•m, 1.6 lbf•ft)
- 7) After assembly, lightly tap on the outer surface of the yoke with a plastic hammer (for snug fitting of the armature bearing).

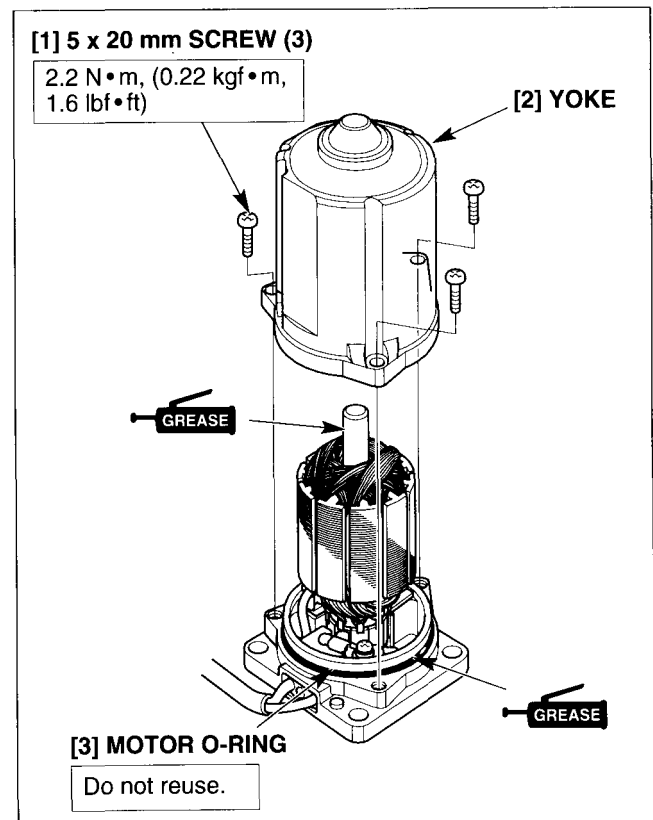

• **MOTOR INSTALLATION**

1) Install the drive joint in the position of the gear pump assembly as shown.

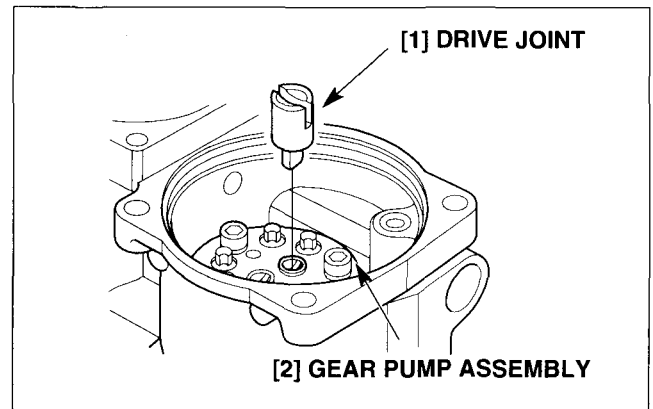


2) Apply ATF to a new O-ring, and install it on the power trim/tilt motor assembly.

3) Fill the gear pump chamber with the fresh ATF up to the upper edge of the chamber. If ATF in the valve body contains air bubbles, remove the air bubbles using an oil bottle or equivalent tool.


- Do not pour ATF into the valve body gear pump chamber quickly. Pour the fluid slowly.
- Trapped air in the system causes faulty operation. Remove the air bubbles in the fluid completely.

4) Install the power trim/tilt motor assembly on the valve body so that the motor wires is at the oil filler port on the oil tank and align the motor shaft with the groove of the drive joint as shown.

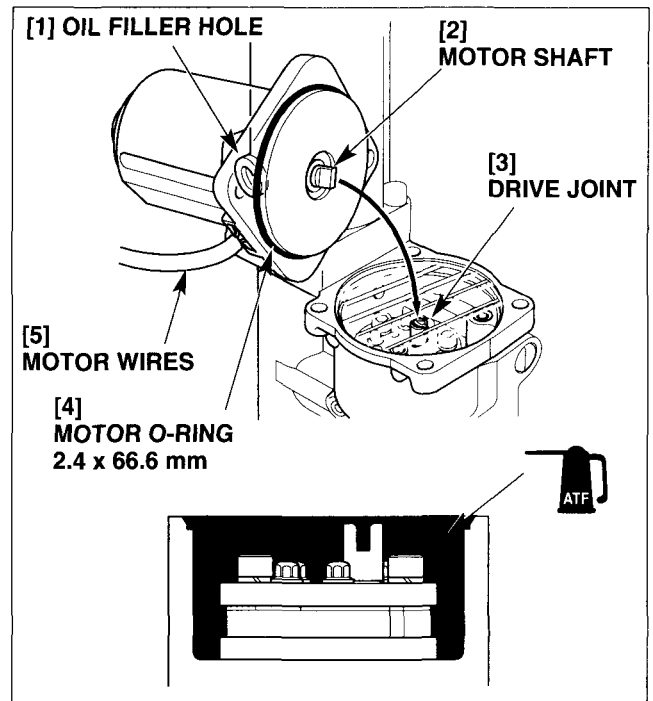


5) Set the motor cord bracket A as shown and tighten the four screw washers to the specified torque.

TORQUE: 6.4 N•m (0.65 kgf•m, 4.7 lbf•ft)

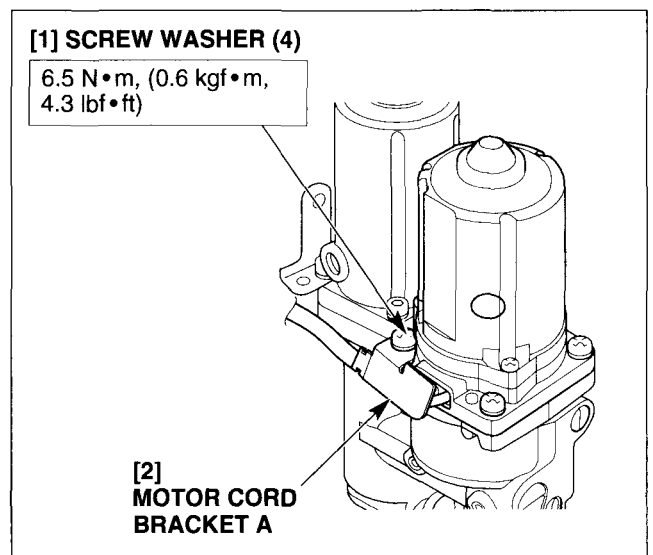


- 6) Clamp the motor wire to the motor cord bracket A with the wire band.
 - After securing the wires with a new wire band, cut the end so projected end length is 3 - 5 mm (0.1 - 0.2 in).
- 7) Set the wire band clips on the clip bracket B, and secure the motor wire with them.
 - After securing the wires with new wire band clip, cut the end so projected end length is 3 - 5 mm (0.1 - 0.2 in).

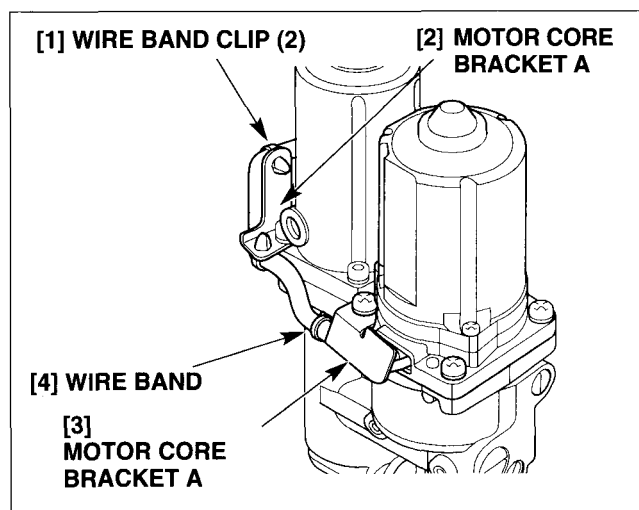


d. AIR BLEEDING

- 1) Lay the power trim/tilt assembly on its side with the oil filler port facing up.
- 2) Connect the battery, power trim/tilt relay and the power trim/tilt switch so that the power trim/tilt assembly functions while it is dismantled from the outboard motor.
- 3) Check that the manual valve is loose. Using a syringe or equivalent tool, pour ATF in the oil tank slowly to fill it up.
- 4) After filling the oil tank, tighten the manual valve securely.
 - Check that the oil hole cap bolt is not installed.
- 5) Push the “UP” side of the power trim/tilt switch to extend the piston rod fully.
 - While extending the piston rod, pour ATF into the oil tank to keep the oil level in the oil tank at full level.
- 6) Push the “DW” side of the power trim/tilt switch to compress the piston rod fully.
 - Do not tighten the oil hole cap bolt this time. Let ATF flow out of the oil filler port.
- 7) Repeat the above steps 5 and 6 three to five times.
 - Repeat this procedure until the piston rod moves smoothly.
- 8) After the piston rod moves smoothly, push the “UP” side of the power trim/tilt switch again to extend the piston rod fully.
 - While extending the piston rod, pour ATF into the oil tank to keep the oil level in the oil tank at full level.

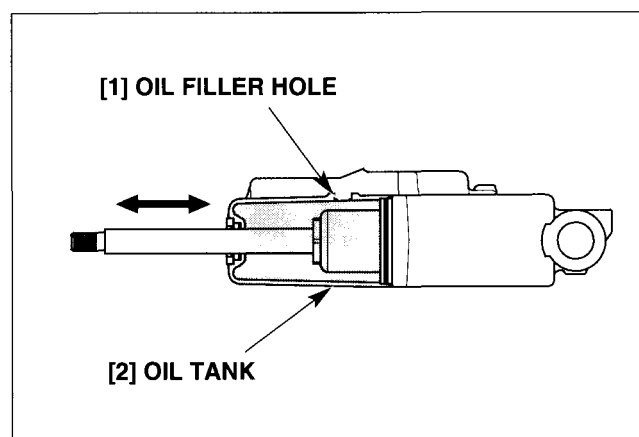


- 9) Hold the power trim/tilt assembly upright and bring the oil level to the lower edge of the oil filler port. Loosely tighten the oil hole cap.
 - 10) Move the piston rod from the fully compressed position to the fully extended position two or three times by operating the power trim/tilt switch.
 - 11) Push the "UP" side of the power trim/tilt switch again to extend the piston rod fully.
 - 12) Remove the oil cap bolt and check the oil level. If the level is low, add ATF with a syringe or equivalent tool until ATF flows out of the oil filler port.
 - 13) Install the new O-ring on the oil cap and tighten the oil cap to the specified torque.
- TORQUE: 0.8 N•m (0.08 kgf•m, 0.58 lbf•ft)**
- 14) Wipe up ATF spilled from the cylinder comp. thoroughly. Operate the power trim/tilt switch and check that the piston rod moves smoothly.
 - 15) Check the blow pressure (P. 13-29).

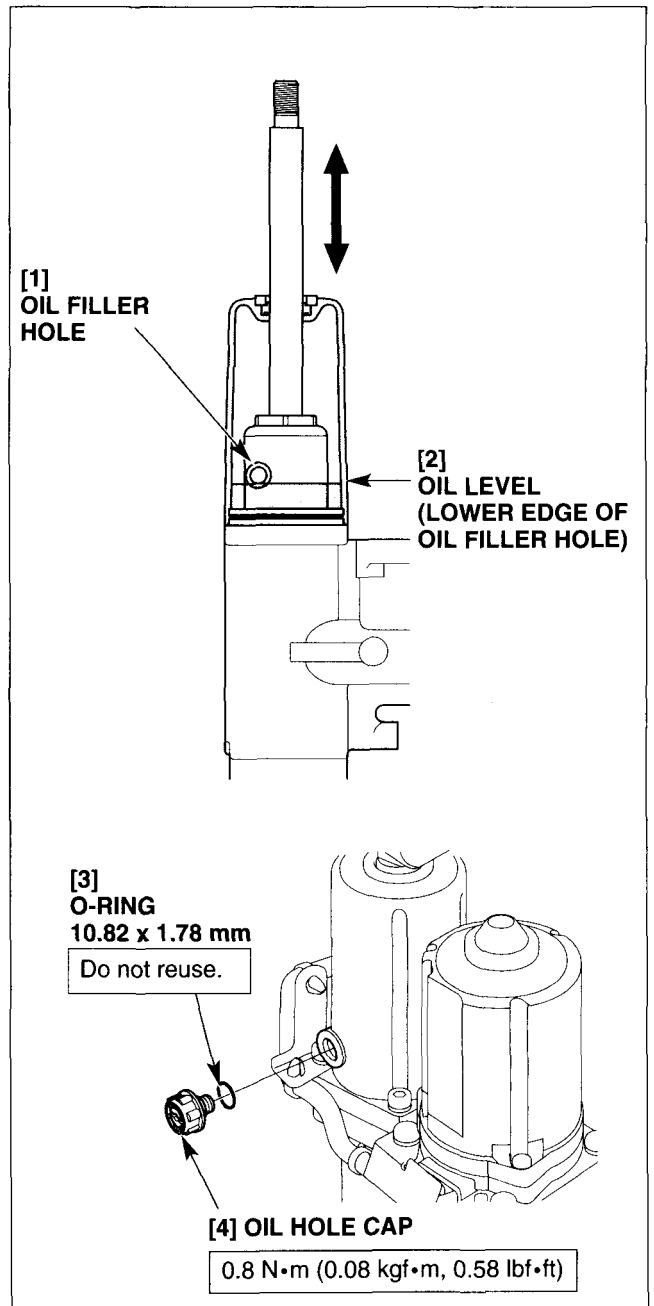

e. UPPER JOINT METAL INSTALLATION


- 1) Apply LOCTITE® 271 or equivalent to the thread of the piston rod.
- 2) Install the upper joint metal against the piston rod.
- 3) Holding the piston rod and tighten the upper joint metal to the specified torque.

TORQUE: 44 N•m (4.5 kgf•m, 33 lbf•ft)

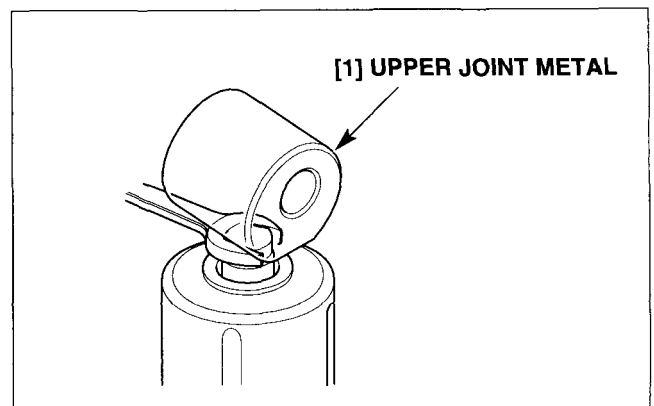

f. BLOW PRESSURE INSPECTION

- After reassembling the power trim/tilt assembly, perform the blow pressure inspection. Install the power trim/tilt assembly after the blow pressure inspection.
- Remove the power trim/tilt assembly if it is mounted.
- Before blow pressure inspection, perform the following:
 - Connect each engine side wire and motor 2P connector so that the power trim/tilt assembly can operate while it is isolated from the outboard motor.
 - Extend the piston rod of the power trim/tilt assembly fully after operating (moving up and down) the piston rod several times.
 - Check ATF level in the power trim/tilt assembly oil tank. It must be at the specified level (P. 13-28).
 - Perform the cylinder upper chamber side and lower chamber side blow pressure inspection using the special tools and commercially available pressure gauge.
 - Use the pressure gauge which measures 40 MPa (400 kgf/cm², 5,600 psi) or above with P/F 1/4 thread.

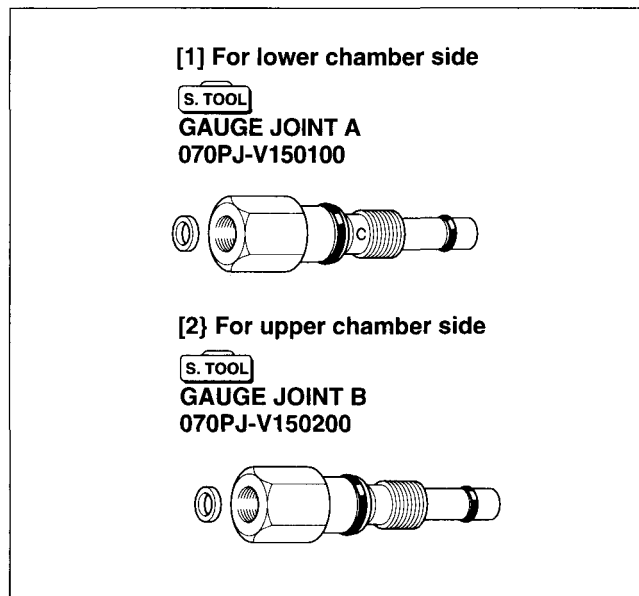


• LOWER CHAMBER SIDE BLOW PRESSURE

- 1) Remove the internal circlip, manual valve and sealing washer from the valve body. Install the special tool (gauge joint body B) and the sealing washer, and tighten the special tool to the specified torque.

TORQUE: 1.7 N•m (0.17 kgf•m, 1.2 lbf•ft)


- Be sure to remove the manual valve with the piston rod fully extended, or ATF spurts out.
 - A small amount of ATF flows out after removing the valve. Install the special tool quickly.
 - Install the sealing washer securely not to let it collapse in the valve body.
- 2) Attach a commercially available pressure gauge to the special tool that is set in the valve body.
 - 3) Be sure that ATF level in the oil tank is at the specified level (P. 13-28).

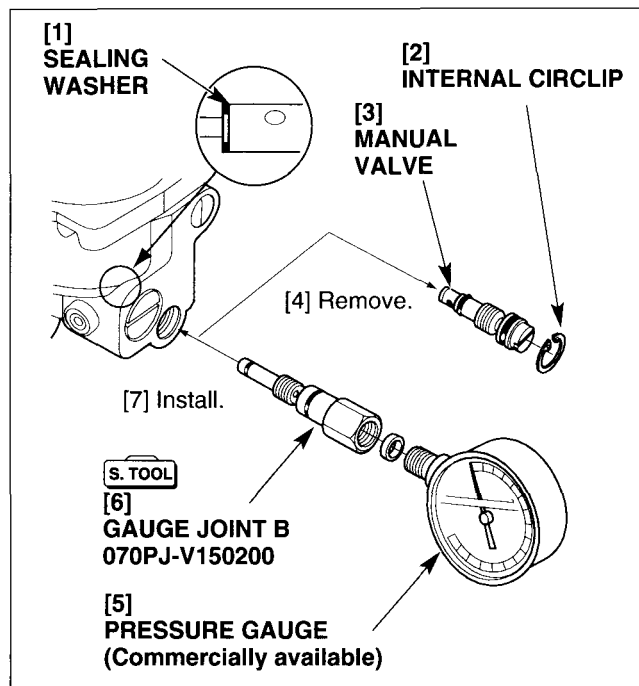

- 3) Push the "DN" side of the power trim/tilt switch and compress the piston rod fully.
- 4) Push the "UP" side of the power trim/tilt switch again. With the piston rod extended fully, measure the lower chamber blow pressure by reading the pressure gauge.

BLOW PRESSURE (Lower chamber side)	19.3 - 23.0 MPa (197 -235 kgf/cm ² , 2,802 - 3,342 psi)
---------------------------------------	--

- If the blow pressure is out of the specified range, check each part of the power trim/tilt assembly for oil leakage.
- If there is no oil leakage but the blow pressure drops below the specified pressure quickly, the power trim/tilt motor assembly can be faulty. Replace the motor assembly with a new one and measure the blow pressure again.
- After measuring the lower chamber blow pressure, measure the upper chamber blow pressure.

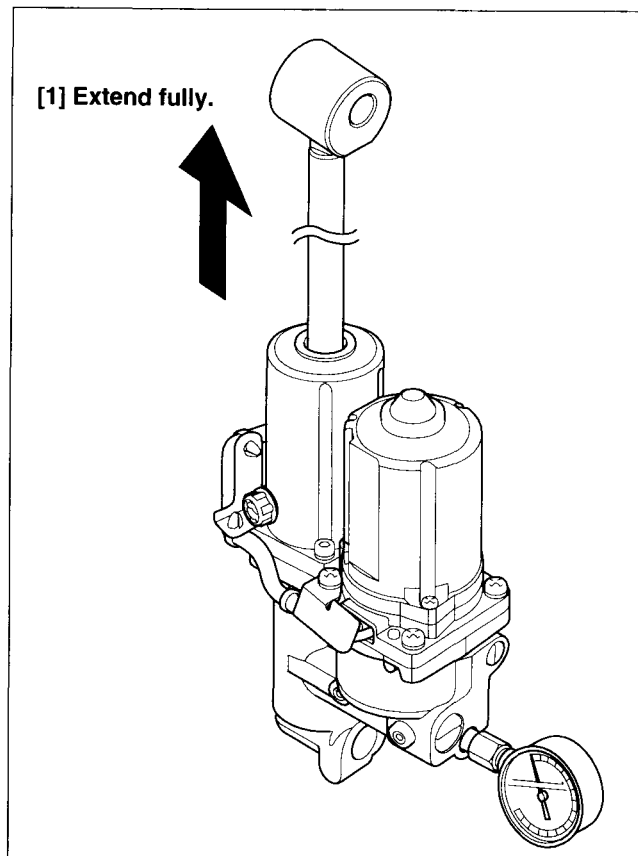


• UPPER CHAMBER BLOW PRESSURE

- 1) Remove the special tool (gauge joint body B) that is for measurement of the lower chamber blow pressure from the valve body. Install the special tool (gauge joint body A) that is for measurement of the upper chamber blow pressure in the valve body. Tighten the special tool to the specified torque.

TORQUE: 1.7 N•m (0.17 kgf•m, 1.2 lbf•ft)


- Be sure to remove the special tool with the piston rod fully extended, or the automatic transmission fluid spurts out.
 - A small amount of ATF flows out after removing the special tool (gauge joint body B). Install the special tool (gauge joint body A) quickly.
 - Install the sealing washer securely not to let it collapse in the valve body.
- 2) Attach a commercially available pressure gauge to the special tool that is set in the valve body.
 - Be sure that ATF level in the oil tank is at the specified level (P. 13-28).

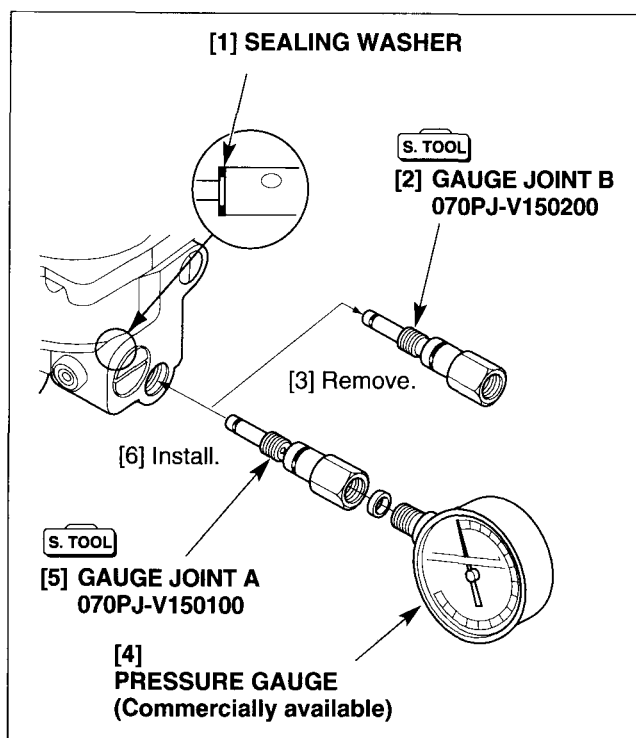

- 3) Push the "DN" side of the power trim/tilt switch and compress the piston rod fully. With the piston rod compressed fully, measure the upper chamber blow pressure by reading the pressure gauge.

BLOW PRESSURE (Upper chamber side)	27.9 - 34.8 MPa (285 - 355 kgf/cm ² , 4,504 - 5,049 psi)
---------------------------------------	---

- If the blow pressure is out of the specified range, check each part of the power trim/tilt assembly for oil leakage.
- If there is no oil leakage but the blow pressure drops below the specified pressure quickly, the power trim/tilt motor assembly can be faulty. Replace the motor assembly with a new one and measure the blow pressure again.

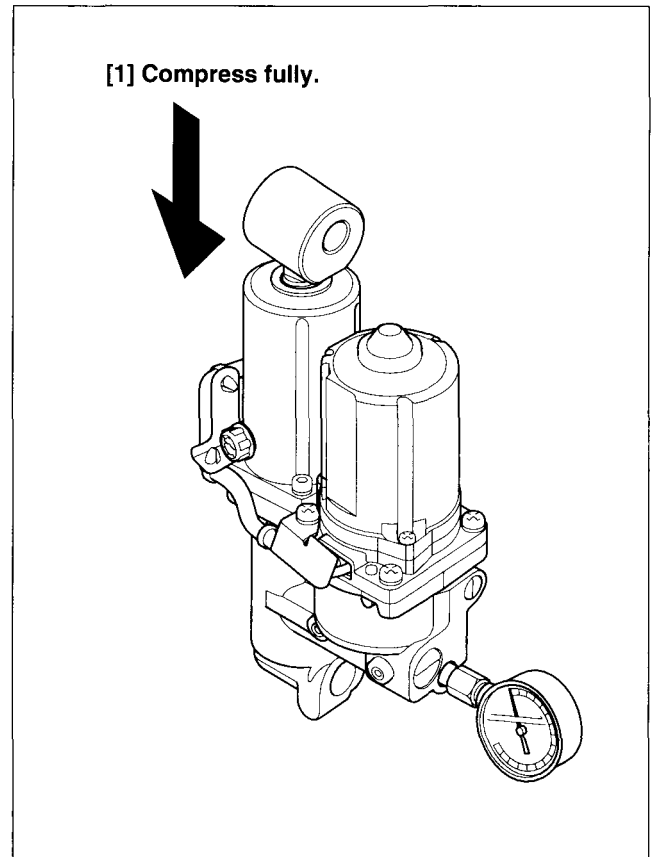

- 4) Push the "UP" side of the power trim/tilt switch and extend the piston rod fully.


- 5) Remove the special tool and pressure gauge from the valve body. Install the sealing washer, manual valve and the internal circlip in the valve body.

- Be sure to remove the special tool with the piston rod fully extended, or ATF spurts out.
- A small amount of ATF flows out after removing the tool. Install the manual valve quickly.
- Install the sealing washer securely not to let it collapse in the valve body.

- 6) Tighten the manual valve to the specified torque.

TORQUE: 1.7 N•m (0.17 kgf•m, 1.2 lbf•ft)

- 7) With the piston rod fully extended, check whether ATF level is at the edge of the filler port of the oil tank (P. 13-28). If the oil level is low, add ATF up to the edge of the filler port.

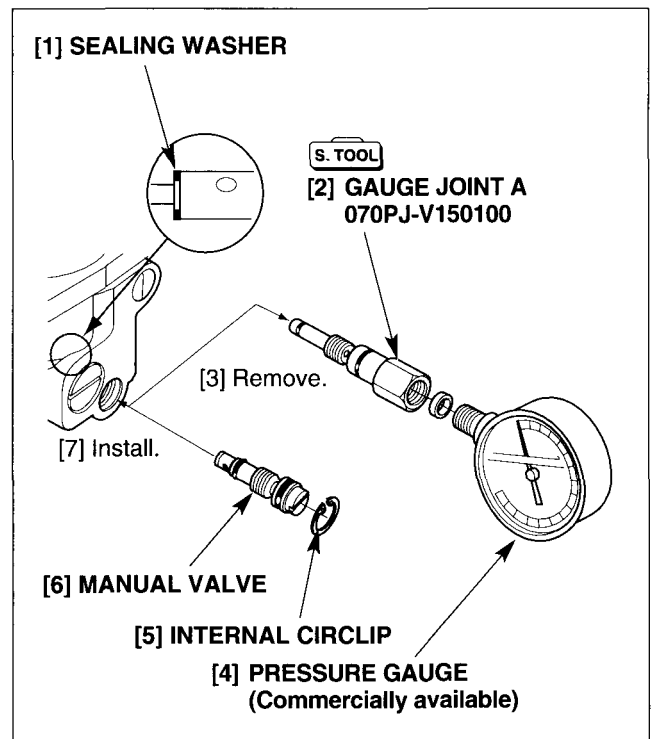

1.	Specifications	2 - 9
2.	Service Information	10 - 45
3.	Maintenance	46 - 64
4.	Engine cover/Throttle/Choke	65 - 69
5.	Fuel system	70 - 82
6.	Flywheel/Timing belt	83 - 87
7.	Engine removal/Installation	88 - 96
8.	Water jacket cover/Thermostat/ Thermo switch	97 - 99
9.	Cylinder head/Valves/Oil pump	100 - 115
10.	Crankcase/Cylinder block/ Crankshaft/Piston	116 - 130
11.	Propeller/Gear case/ Extension case	131 - 155
12.	Oil pan/Primary gear case/Swivel case	156 - 166
13.	Gas assist/Power tilt	167 - 170
14.	Steering rod/Remote Control box (Remote Control type only)	171 - 182
15.	Throttle bracket/ Shift lever/ Handlebar (Tiller handle type only)	183 - 188
16.	Electrical equipment	189 - 211
17.	Operation	212 - 234
	BF35a – 45a Y Supplement	235 - 246
	BF40a – 50a X Supplement '95	247 - 255
	BF40a – 50a V Supplement '02	262 - 268
	BF40a – 50a U Supplement '03	269 - 390
	BF40a – 50a T Supplement '03	391 - 430