

Indication	Wrench lamp	Spanner	Detection ECU	Error mode	Phenomenon on vehicle	Described on page
EC-1	EC-1	Blinking	SAS/OPS	Unload solenoid open circuit or load short abnormality	Travelling and material handling enabled even after leaving the seat.	19-131
F1-1	–	Blinking	Meter	SAS/OPS data reception error	Display only	19-133
F2-1	–	Blinking				
F4-1 ~ 8	F4-1 ~ 8	Blinking	Display	CPU error	Display not stable	19-134
H1-1	H1-1	Blinking	SAS/OPS	Lift lever potentiometer open abnormality	Lift stop	19-135
H1-2	H1-2	Blinking	SAS/OPS	Lift lever potentiometer VCC short abnormality		
H1-3	H1-3	Blinking	SAS/OPS	Lift lever potentiometer assembly error		
H1-4	H1-4	Blinking	SAS/OPS	Lift lever potentiometer neutral abnormality	Material handling disabled	
H1-5	H1-5	Blinking	SAS/OPS	Lift lever potentiometer matching value abnormality	Lift stop	
H2-1	H2-1	Blinking	SAS/OPS	Tilt lever potentiometer open abnormality	Tilt stop	19-138
H2-2	H2-2	Blinking	SAS/OPS	Tilt lever potentiometer VCC short abnormality		
H2-3	H2-3	Blinking	SAS/OPS	Tilt lever potentiometer assembly error		
H2-4	H2-4	Blinking	SAS/OPS	Tilt lever potentiometer neutral error abnormality	Material handling disabled	
H2-5	H2-5	Blinking	SAS/OPS	Tilt lever potentiometer matching error	Tilt stop	
H3-1	H3-1	Blinking	SAS/OPS	Attachment 1 lever potentiometer open abnormality	Attachment 1 stop	19-141
H3-2	H3-2	Blinking	SAS/OPS	Attachment 1 lever potentiometer VCC short abnormality		
H3-3	H3-3	Blinking	SAS/OPS	Attachment 1 lever potentiometer combination error		
H3-4	H3-4	Blinking	SAS/OPS	Attachment 1 lever potentiometer neutral abnormality	Material handling disabled	
H3-5	H3-5	Blinking	SAS/OPS	Attachment 1 lever potentiometer matching value abnormality	Attachment 1 stop	
H4-1	H4-1	Blinking	SAS/OPS	Attachment 2 lever potentiometer open abnormality	Lever 2 stop	19-144
H4-2	H4-2	Blinking	SAS/OPS	Attachment 2 lever potentiometer VCC short abnormality		
H4-3	H4-3	Blinking	SAS/OPS	Attachment 2 lever potentiometer combination error		
H4-4	H4-4	Blinking	SAS/OPS	Attachment 2 lever potentiometer neutral abnormality	Material handling disabled	
H4-5	H4-5	Blinking	SAS/OPS	Attachment 2 lever potentiometer matching value abnormality	Lever 2 stop	
H5-1	H5-1	Blinking	SAS/OPS	Lift PUSH solenoid open abnormality	Lift may stop	19-147
H5-2	H5-2	Blinking	SAS/OPS	Lift PULL solenoid open abnormality		
H6-1	H6-1	Blinking	SAS/OPS	Tilt PUSH solenoid open abnormality	Tilt may stop	19-149
H6-2	H6-2	Blinking	SAS/OPS	Tilt PULL solenoid open abnormality		
H7-1	H7-1	Blinking	SAS/OPS	Attachment 1 PUSH solenoid open abnormality	Attachment 1 may stop	19-151
H7-2	H7-2	Blinking	SAS/OPS	Attachment 1 PULL solenoid open abnormality		