

Indication	Wrench lamp	Spanner	Detection ECU	Error mode	Phenomenon on vehicle	Described on page
73-1	73-1	Blinking	SAS/OPS	Knob position compensation solenoid open circuit or load short abnormality	Knob offest compensation stops	19-108
74-1	74-1	Blinking	SAS/OPS	Outside matching value range for tire angle error	Knob offest compensation stops	19-110
A5-1	A5-1	Blinking	SAS/OPS	Seat switch GND short abnormality	Traveling and material handling possible even after leaving the seat. Parking brake reminder and release reminder alarm partially disabled.	19-111
A7-1	A7-1	Blinking	SAS/OPS	Brake switch GND short abnormality	Partial limitation of the drive control function	19-113
AD-1	AD-1	Blinking	SAS/OPS	CAN communication 4Y-ECS or ASC data reception error	Partial limitation of the drive control function	19-115
AD-2	AD-2	Blinking	4Y-ECS	CAN communication SAS/OPS data reception error	Partial limitation of the drive control function	
AD-7	AD-7	Blinking	SAS/OPS	CAN communication display data reception error	Limitation of the drive control function Function of automatic idle speed increase during lifting limited Display warning function operation failure	
AD-8	AD-8	–	Display	CAN communication SAS/OPS data reception error	Display not stable	
AF-1 ~ 3	AF-1 ~ 3	On	SAS/OPS	CPU error	Various control operations not stable	19-119
AF-4 ~ 8	AF-4 ~ 8	Blinking	SAS/OPS			
C4-1	C4-1	Blinking	4Y-ECS ASC	Accelerator sensor 1 open	Limiting speed of traveling and materials handling due to limited engine power output	19-123
C4-2	C4-2	Blinking	4Y-ECS ASC	Accelerator sensor 1 short		
C4-3	C4-3	Blinking	4Y-ECS ASC	Accelerator sensor 2 open		
C4-4	C4-4	Blinking	4Y-ECS ASC	Accelerator sensor 2 short		
C4-5	C4-5	Blinking	4Y-ECS ASC	Accelerator sensor offset abnormality		
C4-6	C4-6	Blinking	4Y-ECS	Accelerator sensor out of range error		
C7-1	C7-1	Blinking	SAS/OPS	Shift lever forward and reverse travel switch open abnormality	Travel return to neutral operation disabled Partial limitation of the drive control function.	19-126
C7-2	C7-2	Blinking	SAS/OPS	Shift lever forward and reverse travel switches simultaneously ON error	Travelling may stop Partial limitation of the drive control function.	
CA-1	CA-1	Blinking	SAS/OPS	Forward and reverse travel T/C relay open circuit or load short abnormality	Travelling and material handling enabled even after leaving the seat.	19-129