

# Ditch Witch®

## JT100/JT100 All Terrain

ISSUE NO. 04PL-05/11

For Replacement Copy Order P/N 053-1232

This manual contains information concerning the following models:  
**JT100, JT100 All Terrain**

**This product is covered by one or more of the following patents:**

**US** B1 4,858,704; 4,953,638; 5,148,880; 5,242,026; 5,341,887; 5,490,569; 5,684,466;  
5,713,423, 5,794,719; 5,880,680; 5,941,322; 6,085,852; 6,109,371; 6,179,065; 6,216,803;  
6,250,403; 6,250,404; 6,290,606; 6,311,790; 6,411,094; 6,543,551; 6,550,547; 6,672,409;  
6,739,413; 6,776,246; 6,808,210; 6,827,158; RE37,450; RE37,923; RE37,975; RE38,418  
**AU** 689,533; 706,544; 718,034, 755,862

**CA** 2,156,398

**FR** 674,093

**DE** 694 17 019; 695 29 634; 297 01 406;

**EP** 0683845; 0674093; 0817901; 0846841

**GB** 2,209,239; 2,312,006; EP674,093; EP846,841

**JP** 3,458,247

**Other U.S. and foreign patents pending**

Copyright 2009, 2010, 2011 by The Charles Machine Works, Inc.

 **Ditch Witch**, Ditch Witch, CMW, AutoCrowd, Jet Trac, Roto Witch, Subsite, Fluid Miser, Power Pipe, Super Witch, Pierce Arrow, Zahn, The Underground, and The Underground Authority Worldwide are registered trademarks of The Charles Machine Works, Inc.



# FOREWORD

---

This manual contains illustrated parts lists to help you select quality ProTech® Replacement parts for your Ditch Witch® equipment. Using other replacement parts will lessen the productivity of your equipment.

- ◆ Part numbers enclosed in a box are no longer available from The Charles Machine Works, Inc. Your local Ditch Witch dealer may be able to locate the part for you.
- ◆ Footnotes provide more information to help you identify parts shown in the manual.
- ◆ Assembly instructions and Tech Bits articles referenced in footnotes are available through your local Ditch Witch dealer.
- ◆ Description and specifications in this book were current at publication. However, The Charles Machine Works, Inc. reserves the right to improve equipment, so this manual might not reflect the most current improvements.
- ◆ Instructions on recommended equipment use and maintenance are in the Operator's Manual that was shipped with your equipment.

**Keep the following in mind when ordering ProTech replacement parts:**

- ◆ Specify parts you need by part number and description, not by illustration reference numbers.
- ◆ Have equipment model and serial number on hand to help ensure you get the right parts for your machine whether it's old or new.

**Thank you for buying and using Ditch Witch equipment and ProTech replacement parts.**

# **WARRANTY**

---

DW WARRANTY Policy  
July, 2005

## **POLICY 1: DITCH WITCH® EQUIPMENT AND REPLACEMENT PARTS LIMITED WARRANTY POLICY**

Subject to the limitation and exclusions herein, free replacement parts will be provided at any authorized Ditch Witch dealership for any Ditch Witch equipment or parts manufactured by The Charles Machine Works, Inc. (CMW) that fail due to a defect in material or workmanship within one (1) year of first commercial use (Exception: 2 years for all SK500 Attachments). Free labor will be provided at any authorized Ditch Witch dealership for installation of parts under this warranty during the first year following "initial commercial" use of the serial numbered Ditch Witch equipment on which it is installed. The customer is responsible for transporting their equipment to an authorized Ditch Witch dealership for all warranty work.

### **EXCLUSIONS FROM PRODUCT WARRANTY**

- All incidental or consequential damages.
- All defects, damages, or injuries caused by misuse, abuse, improper installation, alteration, neglect, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All engines and engine accessories (these are covered by original manufacturer's warranty).
- Tires, belts, and other parts which are subject to another manufacturer's warranty. (Such warranty will be available to purchaser.)
- ALL IMPLIED WARRANTIES NOT EXPRESSLY STATED HEREIN, INCLUDING ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY.

IF THE PRODUCTS ARE PURCHASED FOR COMMERCIAL PURPOSES, AS DEFINED BY THE UNIFORM COMMERCIAL CODE, THEN THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF AND THERE ARE NO IMPLIED WARRANTIES OF ANY KIND WHICH EXTEND TO A COMMERCIAL BUYER. ALL OTHER PROVISIONS OF THIS LIMITED WARRANTY APPLY INCLUDING THE DUTIES IMPOSED.

Ditch Witch products have been tested to deliver acceptable performance in most conditions. This does not imply they will deliver acceptable performance in all conditions. Therefore, to assure suitability, products should be operated under anticipated working conditions prior to purchase.

Defects will be determined by an inspection within thirty (30) days of the date of failure of the product or part by CMW or its authorized dealer. CMW will provide the location of its inspection facilities or its nearest authorized dealer upon inquiry. CMW reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate.

Extended warranties are available upon request from your local Ditch Witch dealer or CMW.

Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. Further, some states do not allow exclusion of or limitation of how long an implied warranty lasts, so the above limitation may not apply. This limited warranty gives product owner specific legal rights and the product owner may also have other rights which vary from state to state.

For information regarding this limited warranty, contact CMW's Product Support Department, P.O. Box 66, Perry, OK 73077-0066, or contact your local Ditch Witch dealer.

# CONTENTS

---

## Decals

Decal Location - AT/JT100.....8

## Engine Components

Air Filter Assembly .....	20
Battery & Power Cables .....	34
Charge Air Cooler .....	24
Engine Mount .....	18
Engine Service .....	16
Exhaust .....	22
Expansion Tank .....	32
Fan Drive.....	26
Radiator Mounting.....	28
Radiator Plumbing .....	30

## Frame Components

Assisted Makeup .....	38
Auxiliary Stabilizer Begins w/ .....	110
Battery Box.....	98
Cab Arm & ROPS .....	112
Cab Covers .....	120
Cab Door/Windows .....	114
Cab Heat/Air.....	142
Cab Lock.....	140
Carriage .....	52
Carriage Sight Tube/Oil Pump .....	54
Covers .....	92
Cylinder Locks.....	42
Drill Frame .....	40
Drive Gearbox - Rotation .....	58
Engine Covers Begins w/ .....	80
Front Covers .....	86
Front Wrenches .....	46
Fuel Tank Begins w/.....	96
Fuel Tank Ends w/.....	94
Grille.....	78
Ground Drive Planetary Gearbox.....	106
Heat/Air Component Mount .....	146
Heat/Air Diagram .....	144
Hose Track.....	48
Hose Track Repair Section .....	50
Inner Drive Gearbox (AT) .....	66
Left Console (AT) .....	132
Left Console (JT).....	130
Left Console Switches .....	134
Pipe Guide .....	44
Pivot .....	100
Planetary Gearbox - Rotation.....	60
Rack & Bumpers .....	72
Rear View Mirror, Left Side .....	122
Rear View Mirror, Right Side.....	124
Right Console.....	138
Rotation Gearbox (AT) .....	62
Saver Sub (JT) .....	74
Seat Mount w/ heat/air .....	118
Seat Mount w/o heat/air.....	116
Sound Insulation .....	90

Spindle Brake .....	56
Spindle Drive Assembly (AT) .....	76
Stabilizers .....	108
Thrust Drive .....	68
Thrust Drive Gearbox .....	70
Thrust Planetary Gearbox.....	84
Top Lining/Panel.....	128
Track Group (Rubber) Begins w/.....	102
Track Group (Steel) Begins w/ .....	104
Windshield Wipers/Washer .....	126

## Hydraulics

Auxiliary Valve .....	214
Auxiliary Valve Hydraulics.....	212
Cab Swing Hydraulics.....	244
Case Drain (Ground Drive) .....	240
Case Drain Hyd Rotation & Thrust Pumps .....	200
Case Drain Hyd Rotation Motor Begins w/ .....	196
Case Drain Hyd Rotation Motor Ends w/ .....	194
Charge Filter Hydraulics (AT).....	160
Charge Filter Hydraulics (JT) .....	158
Charge Manifold .....	210
Cooler Outlet Hydraulics (AT) .....	206
Cooler Outlet Hydraulics (JT) Begins w/ .....	204
Fluid Pump Control .....	156
Hydraulic Cylinder (2.0 X 1.25 X 14.25).....	248
Hydraulic Cylinder (3.0" X 1.75").....	250
Hydraulic Cylinder (3.5" X 2.0") .....	252
Hydraulic Cylinder (4.0" X 2.25").....	254
Hydraulic Cylinder (6" X 4" X 3") .....	246
Hydraulic Control Valve .....	216
Hydraulic Reservoir (AT).....	164
Hydraulic Reservoir (JT) .....	162
Hydrostatic Gauge Hyd (AT) .....	172
Hydrostatic Gauge Hyd (JT) Begins w/ .....	170
Hydrostatic Gauge Hyd (JT) Ends w/ .....	168
Inner Rotation Plumbing .....	198
Left Ground Drive Hydraulics Begins w/ .....	236
Left Stabilizer Hydraulics .....	232
Load Sense Valve (AT) .....	226
Oil Cooler Hydraulics .....	202
Park Brake Hydraulics .....	242
Pilot Valve Hydraulics .....	208
Pivot Front Lift Hydraulics .....	228
Pivot Rear Lift Hydraulics .....	230
Pump Hydraulics.....	166
Pump Mounting.....	150
Right Ground Drive Hydraulics .....	238
Right Stabilizer Hydraulics .....	234
Rotating Clamp Hydraulics Begins w/.....	220
Rotating Clamp Hydraulics Ends w/ .....	218
Rotation Motor Hydraulics .....	176
Rotation Pump Control .....	152
Rotation Pump Hydraulics .....	174
Stationary Clamp Hydraulics Begins w/ .....	224

**Continued on next page**

# CONTENTS

---

Stationary Clamp Hyd Ends w/ .....	222
Thrust Drive Hyd 6 Way Selector .....	182
Thrust Drive Hyd Carriage Man Begins w/ .....	192
Thrust Drive Hyd Carriage Man Ends w/ .....	190
Thrust Drive Hyd Motor & Brake.....	186
Thrust Drive Hyd Return Manifold.....	188
Thrust Drive Hyd Valve Series Parallel .....	184
Thrust Motor Hydraulics .....	180
Thrust Pump Control.....	154
Thrust Pump Hydraulics.....	178

## Electrical

See Technical Supplement

## Anchor Components

Anchor Driver Hydraulics .....	262
Anchor Shaft .....	266
Anchoring Plates .....	264
Auger Drive .....	260

## Fluid System

Antifreeze Tank .....	274
Fluid Motor Plumbing (AT) .....	280
Fluid Pump (Fluid End) .....	304
Fluid Pump (Power End).....	306
Fluid Pump - FMC (JT).....	302
Fluid Pump Hyd (JT) Begins w/ .....	278
Fluid Pump Hyd (JT) Hydrostat & Fluid Begins w/...	276
Fluid Pump Mounting (JT) Begins w/ .....	270
Fluid Pump Plumb (JT) Discharge Side.....	272
Fluid Pump Plumb (JT) Discharge Side Begins w/ .	296
Fluid Pump Plumb (JT) Suction Side Begins w/ ..	290
Fluid Pump Plumbing (AT) Discharge Side.....	298
Fluid Pump Plumbing (AT) Suction Side .....	294
Fluid Supply .....	288
Fluid Supply Swivel .....	282
Fluid Supply Water Swivel (JT) .....	284
Inlet Gauge Plumb (JT) Suction Side Begins w/ ..	292
Liner Wash Plumbing (JT) .....	300
Wash Wand .....	308
Water Swivel (AT) .....	286

## Pipe Loader System

Air Compressor .....	348
Auto Greaser Ends w/ .....	350
Auto Greaser Nozzles .....	358
Auto Greaser Nozzles Begins w/.....	360
Auto Greaser Nozzles Ends w/.....	362
Auto-Luber Assembly.....	354
Control Valve - Pipe Loader .....	332
Diverter Valve Hydraulics .....	344
Grease Pump .....	356
Guard Rail .....	314
Hydraulic Cylinder (2x1x3).....	364
Hydraulic Cylinder (3.5x1.75x16).....	366
Hydraulic Motor .....	346
Lubricator Hydraulics Begins w/.....	352

Pipe Grip Hydraulics Begins w/ .....	340
Pipe Grip Hydraulics Ends w/ .....	338
Pipe Lift & Shuttle Hydraulics.....	342
Pipe Loader Grippers Begins w/ .....	330
Pipe Loader Lift Arms Begins w/ .....	318
Pipe Loader Lift Arms Ends w/ .....	316
Pipe Loader Mount .....	312
Pipe Loader Shuttle Drive .....	326
Pipe Loader Shuttle Mount .....	320
Pipe Loader Shuttle Stop .....	328
Pipe Loader Shuttles Begins w/ .....	324
Pipe Loader Shuttles Ends w/ .....	322
Pipe Loader Valve Hydraulics .....	334
Pipe Loader Valve Hydraulics Begins w/ .....	336

## Hoist System

Control Valve .....	392
Control Valve Charge Hydraulics .....	396
Decal Location Crane .....	370
Electrical Components.....	414
Extension Boom.....	378
Extension Cylinder .....	390
Extension Cylinder Hydraulics .....	406
Hoist Hydraulics w/o hoist .....	400
Inner Boom .....	374
Lift Cylinder .....	384
Lift Cylinder Hydraulics .....	404
Limit Switch.....	412
Outer Boom .....	376
Outer Boom Cylinder .....	388
Outer Boom Hydraulics.....	408
Overload .....	386
Overload Alert .....	416
Pedestal .....	372
Pendant .....	410
Proportional Valve .....	398
Swing Drive .....	380
Swing Drive .....	382
Swing Drive Hydraulics .....	402

## Accessories

Mud Mixing Accessories .....	420
Pipe Box (AT).....	428
Pipe Box (JT) .....	426
Wireline Kit (JT) .....	422
Work Lights Begins w/ .....	424


## Miscellaneous

Bolt/Nut Torque Chart.....	432
Filters .....	436
Optional Kits .....	436
Parts Manual Change Request .....	437
Related Publications .....	436
Replacement O-Ring Chart.....	435
Warranty Registration .....	439


# DECALS

ID0135069




## DECAL LOCATION AT/JT100 MACH 1

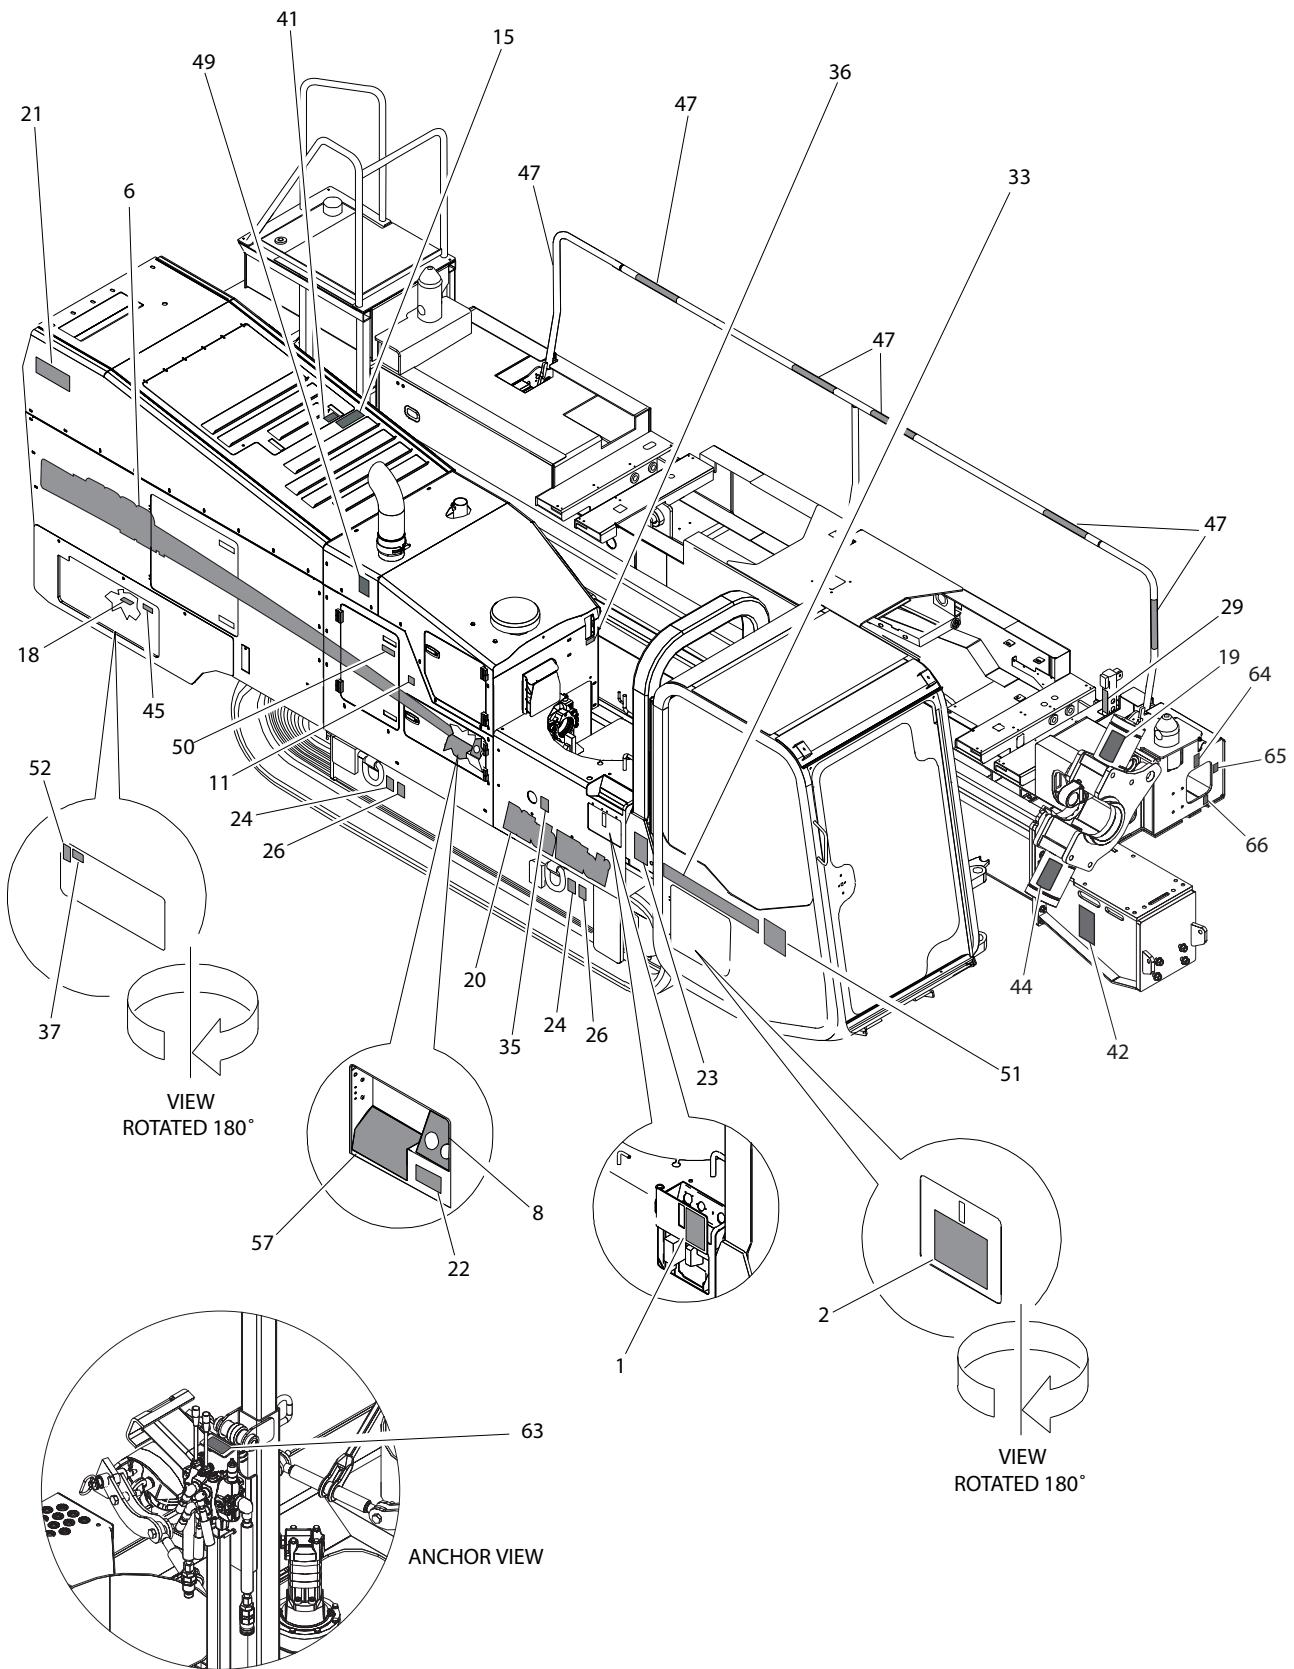


## DECAL LOCATION AT/JT100 MACH 1

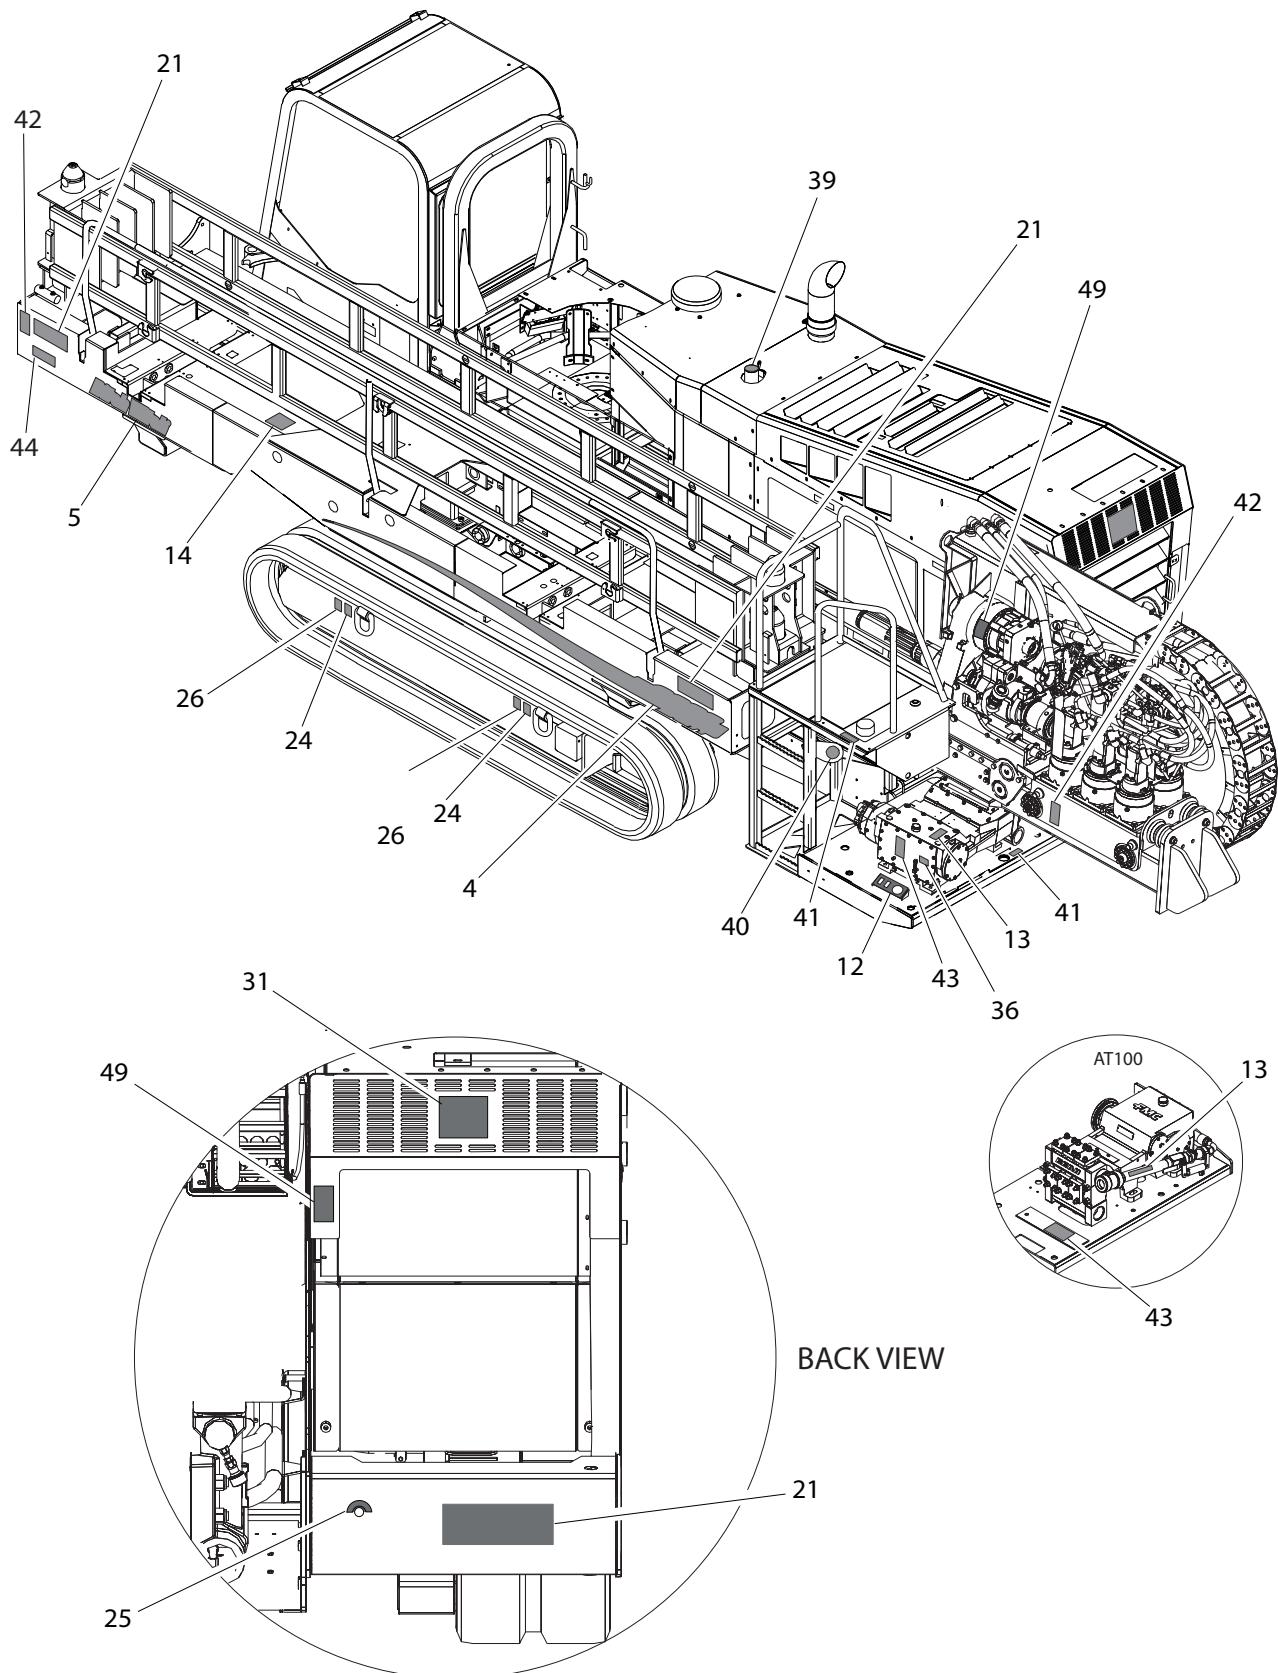

## DECAL LOCATION AT/JT100 MACH 1

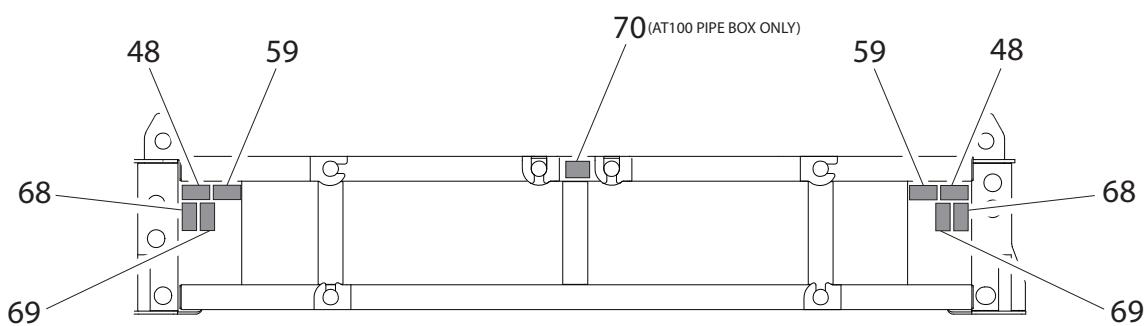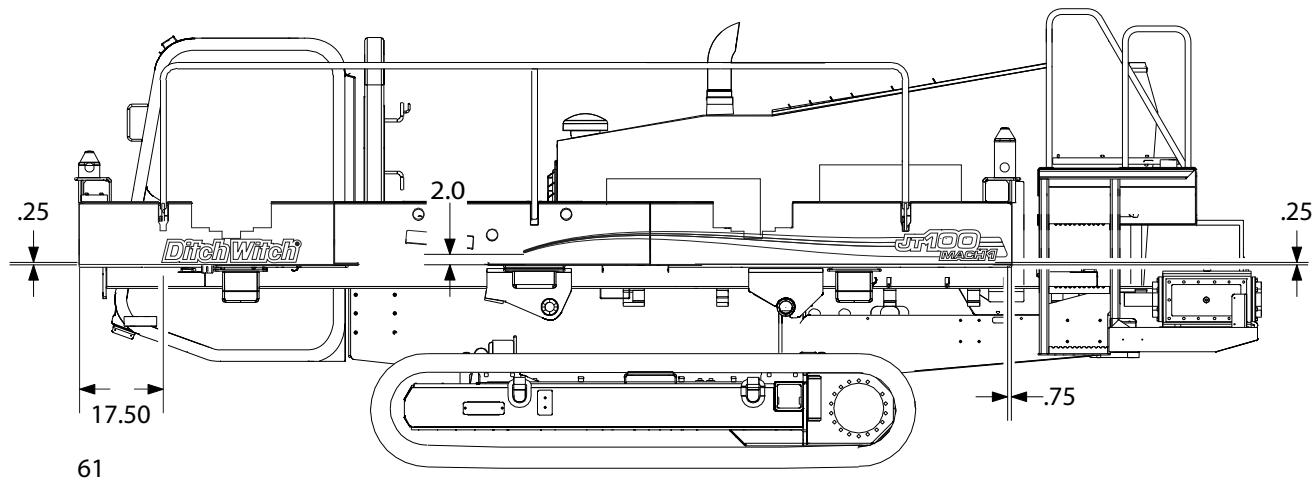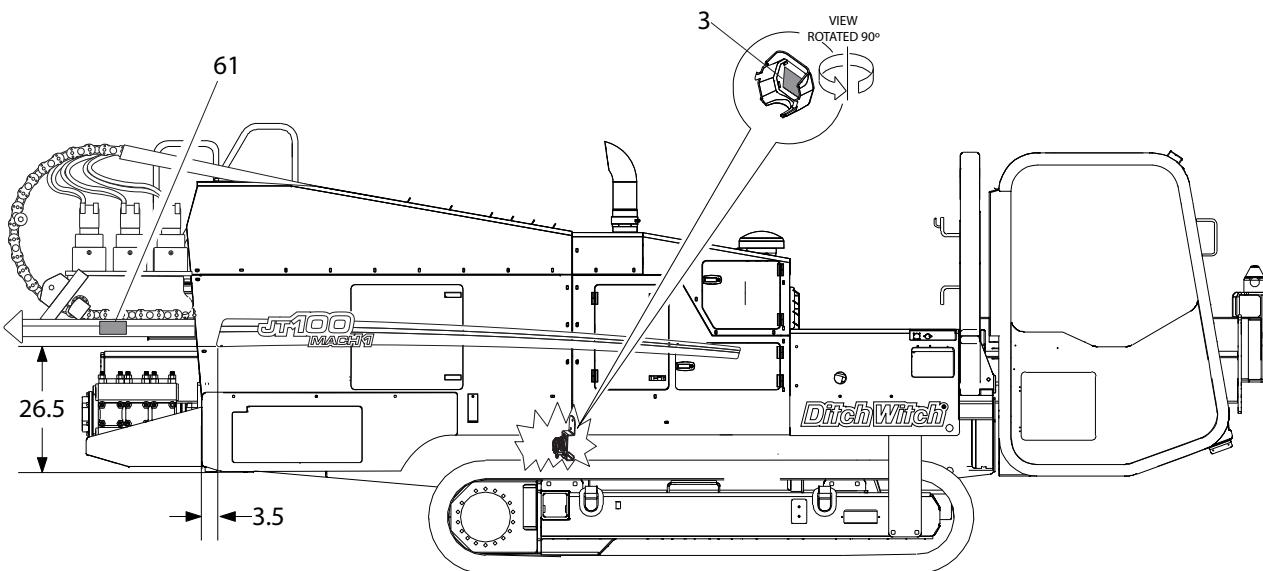

## DECAL LOCATION AT/JT100 MACH 1

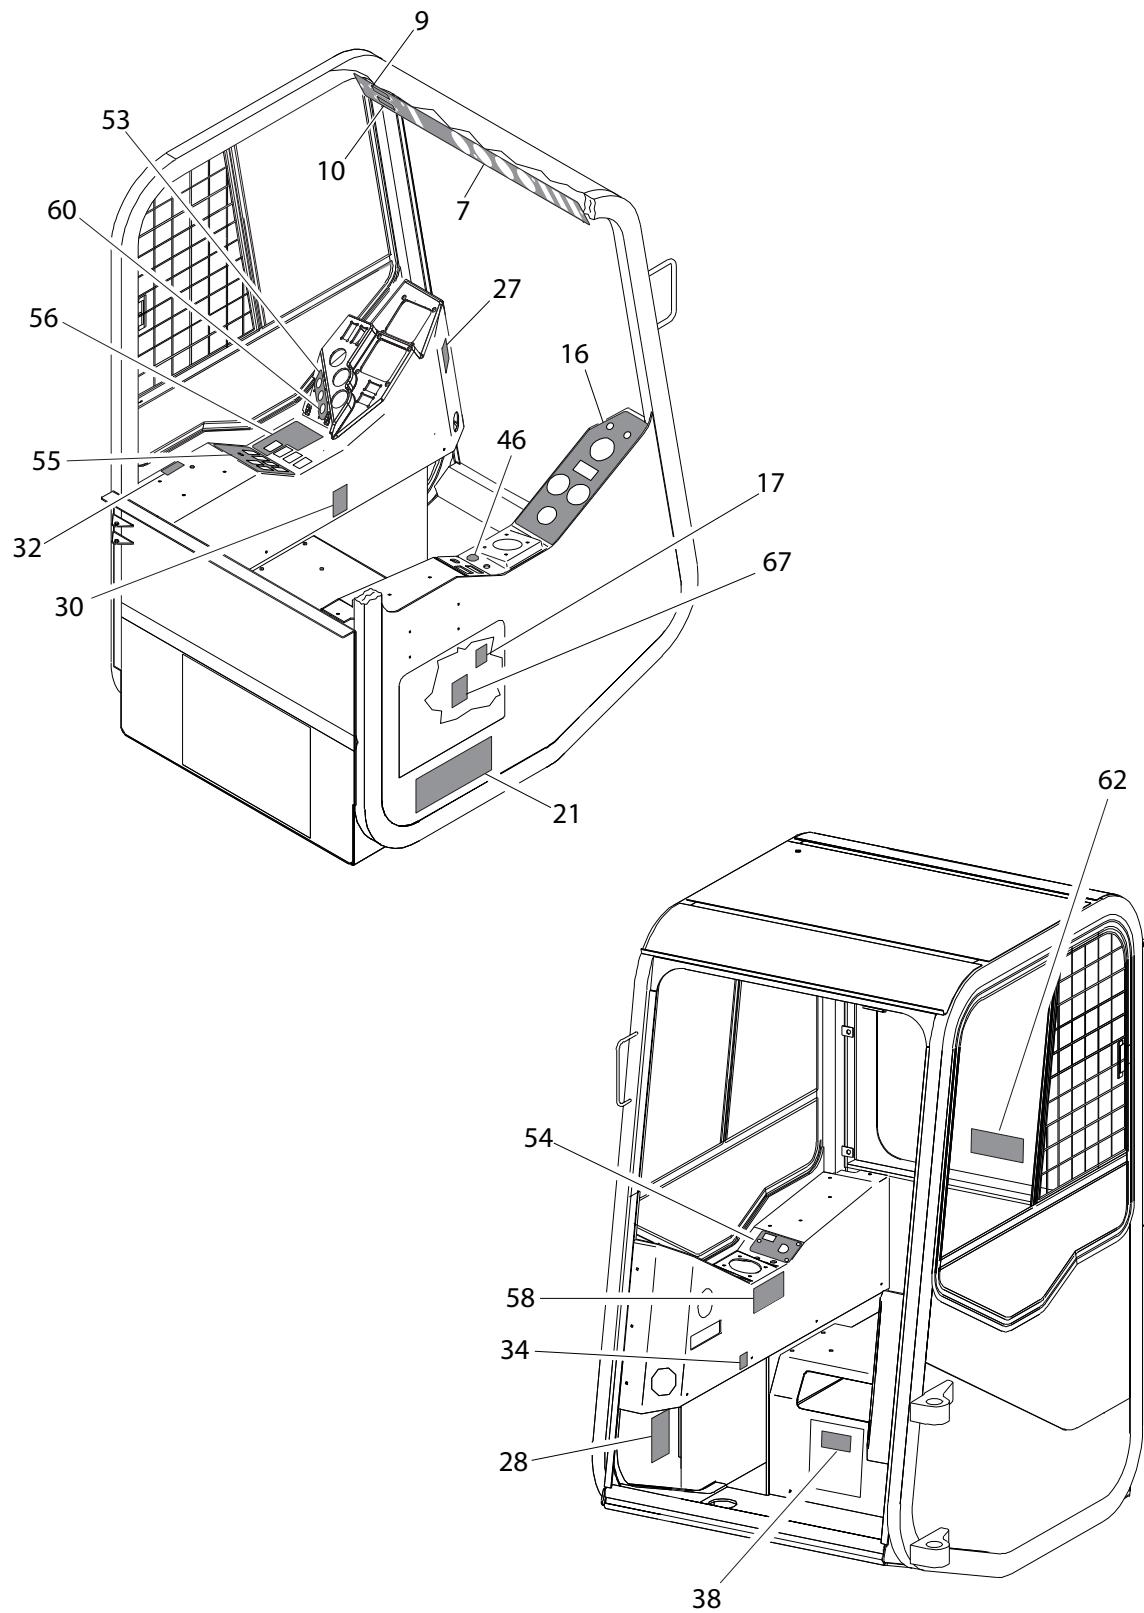

# DECAL LOCATION

## AT/JT100 MACH 1

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	270-4552		DECAL KIT - JT100	
	270-4515		DECAL KIT - AT100	
I	270-II35	I	FUSE PANEL DECAL	
2	270-II36	I	ELECTRICAL PANEL	
3	270-II37	I	FUSE BLOCK	
4	270-4551	I	JT100 MODEL ID PIPE BOX	
	270-4614	I	AT100 MODEL ID PIPE BOX	
5	270-II39	I	DW LOGOTYPE PIPE BOX	
6	270-4550	I	JT100 MODEL ID	
	270-4615	I	AT100 MODEL ID	
7	270-II41	I	TOP CONTROL PANEL	
8	270-II42	I	GAUGE PANEL	
9	270-II44	I	LED DISPLAY A	
10	270-II45	I	LED DISPLAY B	
II	273-016	I	SOUND POWER II	SEE FOOTNOTE 1
I2	273-I17	I	WORKLIGHTS / WASH WAND	
I3	273-I28	I	NO STEP	
I4	270-4653	I	SOLENOID VALVE DECAL	
I5	273-I38	I	NOTICE COOLANT	
I6	270-4505	I	RIGHT INSTRUMENT PANEL	
I7	273-I98	I	TRACKER CONTROL	
I8	273-267	I	DITCH WITCH BATTERY	SEE FOOTNOTE 2
I9	273-278	I	DANGER WRENCH	
I20	274-967	I	DITCH WITCH LOGOTYPE	
I21	274-049	5	DANGER ELECTROCUTION	
I22	274-050	I	WARNING JOBSITE HAZARD	
I23	274-204	I	CRUSHING FORCE HAZARD ALERT	
I24	274-318	4	TIE DOWN LOCATION	
I25	274-375	I	MASTER DISCONNECT SWITCH	
I26	274-442	4	LIFT LOCATION	
I27	274-724	I	ONE CALL NOTIFICATION	
I28	274-780	I	JET TRAC PATENT(S)	
I29	274-831	I	PIPE ROW INDICATOR	
I30	274-852	I	CLIMATE CONTROL	
I31	274-854	I	LOGO PLACARD	
I32	274-857	I	CAB SWING LOCK / UNLOCK	
I33	274-874	I	GRAPHIC STRIPE (SOLD PER INCH)	USE 80" SEE FOOTNOTE 3
I34	274-923	I	POWER POINT	
I35	274-933	I	LUBRICATION	
I36	275-023	2	OIL LEVEL	
I37	275-033	I	NOTICE ELECTRICAL SYSTEM	
I38	275-048	I	IMPORTANT SAFETY RULES	
I39	700-063	I	RESEVOIR (THF)	
I40	700-062	I	DIESEL FUEL CAP	
I41	275-149	3	COOLANT	
I42	275-184	4	WARNING MOVING PARTS	
I43	275-185	I	WARNING SINGLE OPERATOR	
I44	275-197	2	DANGER ROTATING SHAFT	
I45	275-203	I	BATTERY	
I46	275-222	I	ENGINE STOP	
I47	275-230	6	DANGER STRIPE 1.75" X 18"	
I48	275-326	4	WARNING CRUSHING WEIGHT	
I49	275-355	3	CAUTION HOT PARTS	
I50	275-400	I	NOTICE OIL LEVEL	

## FOOTNOTES

1. NOT PART OF KIT. FOR EU UNITS ONLY.
2. LOCATE DECAL ON BATTERY SO THAT DECAL IS VISIBLE WHEN VIEWING BATTERY.
3. APPLY AROUND BACK SIDE OF OPERATOR STATION.

# DECAL LOCATION

## AT/JT100 MACH 1

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
51	274-853	1	DITCH WITCH LOGO	
52	275-419	1	WARNING NO FLAME	
53	270-4508	1	LEFT INSTRUMENT PANEL	
54	270-II50	1	IGNITION-COLD START	
55	700-025	1	PIPE - HORN - THROTTLE	
56	700-026	1	LEFT SWITCH PANEL	USED ON JT100
	270-4616	1	LEFT SWITCH PANEL	USED ON AT100
57	700-027	1	THROTTLE - LIGHTS - STABILIZER	
58	700-028	1	JOYSTICK CONTROL	
59	701-326	4	WARNING CRUSHING WEIGHT (ISO)	
60	274-940	2	INDICATOR	
61	274-965	1	WARNING MOVING PARTS	
62	270-4612	1	EMERGENCY EXIT	APPLY TO REAR WINDOW INSIDE OF CAB
63	270-4702	1	STAKE DRIVER	USED ON AT100
64	270-4708	1	PIPE LOADER/ ANCHOR	USED ON AT100
65	270-4710	1	FLUID RETURN ICON	USED ON AT100
66	270-4711	1	FLUID SUPPLY ICON	USED ON AT100
67	273-275	1	AT/JT INNER SPINDLE	USED ON AT100
68	275-184	4	WARNING MOVING PARTS	
69	701-184	4	WARNING MOVING PARTS ISO	
70	270-4889	2	PIPE BOX LIFT	USED ON AT100


FOOTNOTES

**NOTES:**

# **ENGINE COMPONENTS**

**ID0134845**

## ENGINE SERVICE

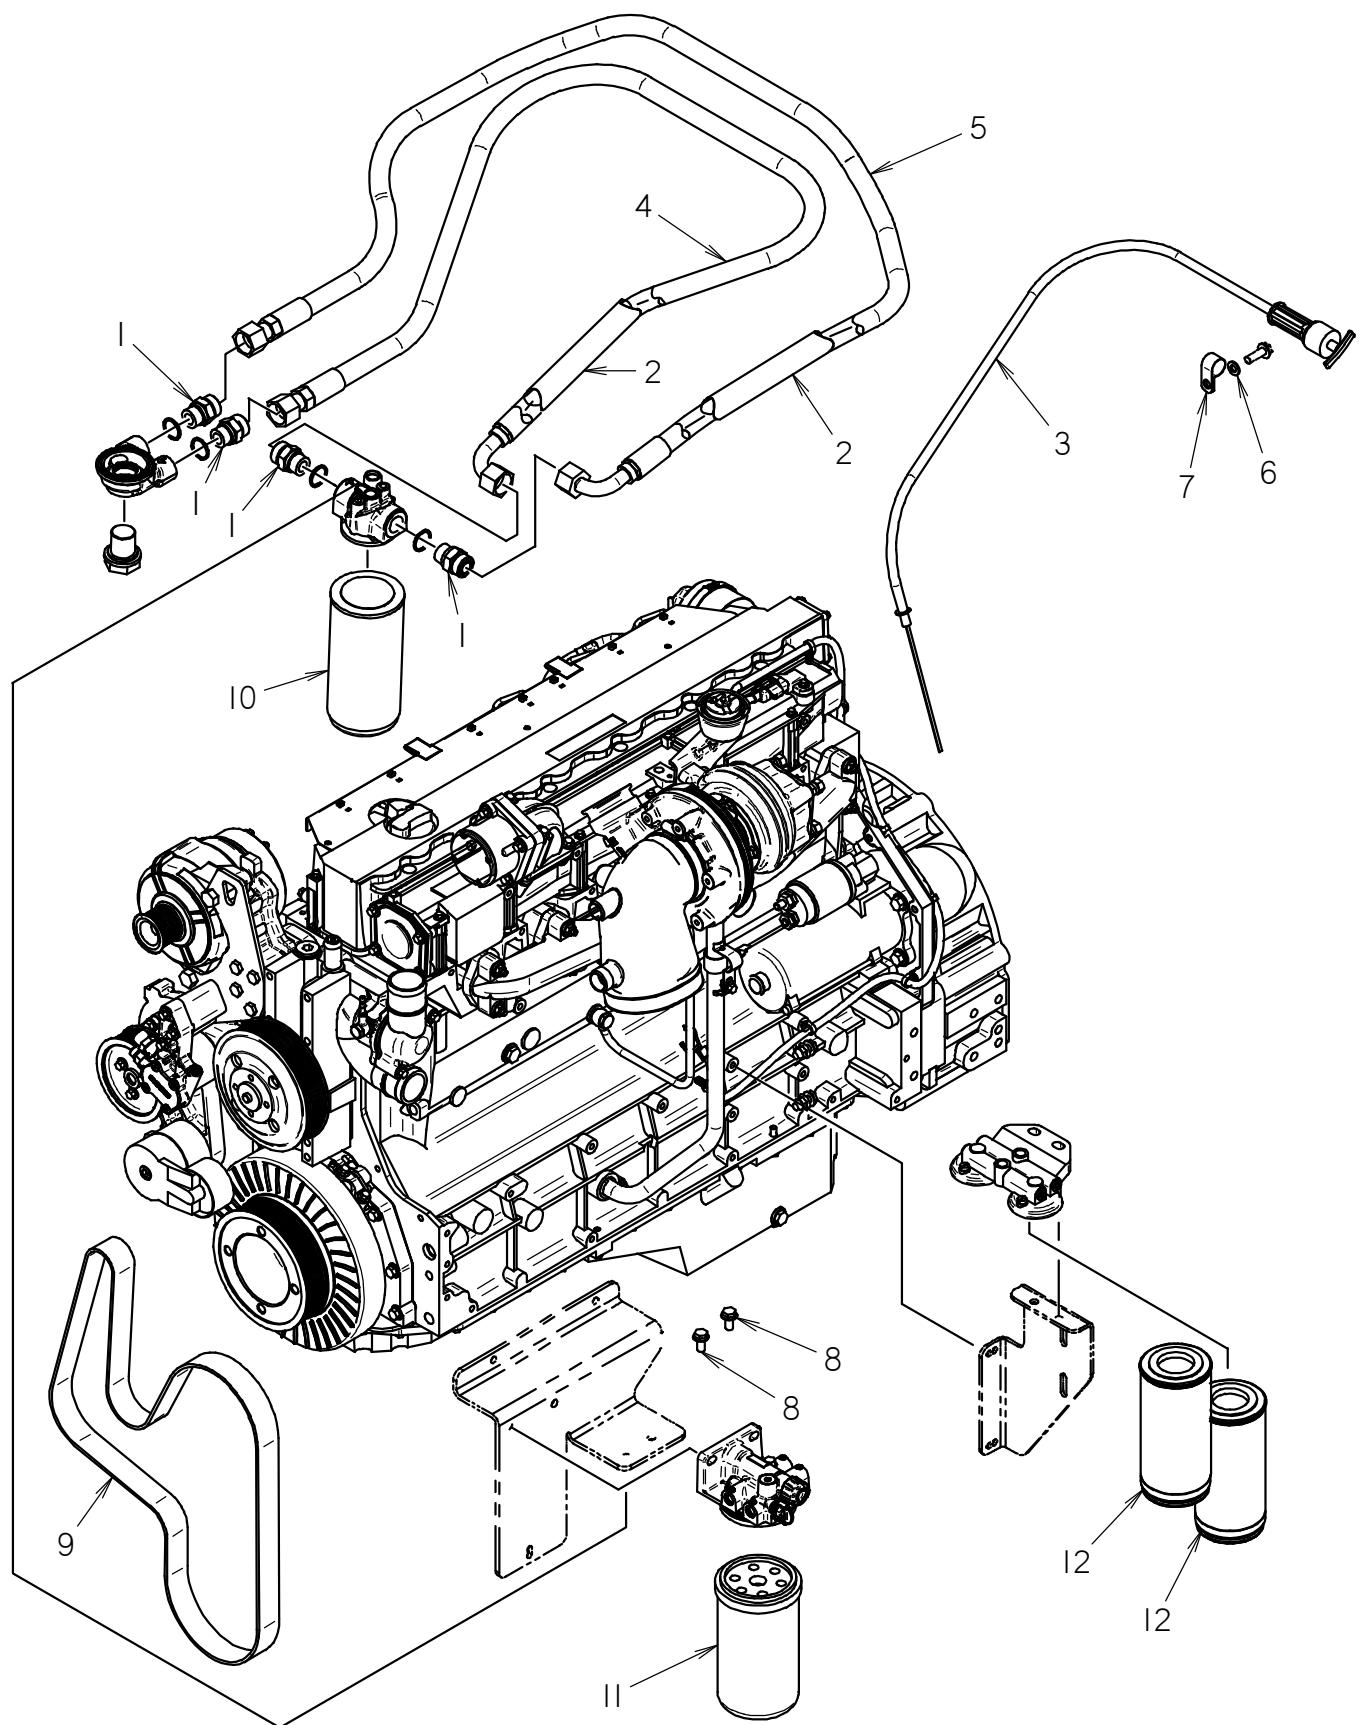

# ENGINE SERVICE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I50-I211	4	CONNECTOR, M26-1.5 X -I20RS STRAIGHT	
2	I15-924	2	ABRASION SLEEVE (1.25" X 88")	
3	I94-792	1	FLUID LEVEL INDICATOR	
4	I50-I240	1	HOSE (I20FX90S-91"-300)	
5	I50-I240	1	HOSE (I20FX90S-91"-300)	
6	I06-390	1	WASHER (M10)	
7	I10-333	1	BOLT-ON CLAMP (1")	
8	I06-382	2	FLG LK SCREW (M10-1.50 X 20MM)	
9	500-I085	1	BELT, SERPENTINE DRIVE	
10	500-I082	1	ELEMENT, ENGINE OIL FILTER	
II	500-2110	1	DEUTZ FUEL FILTER	
I2	500-I084	2	ELEMENT, SECONDARY FUEL FILTER	

NOT SHOWN:


I94-833	STARTER, ENGINE	
I95-1384	BULK HOSE, 1/4" SILICONE	USE 1 PIECE AT 18"
I95-1438	2 HOSE CLAMP	

FOOTNOTES:

BULK HOSE, 1/4" SILICONE

NOTE:

## ENGINE MOUNT

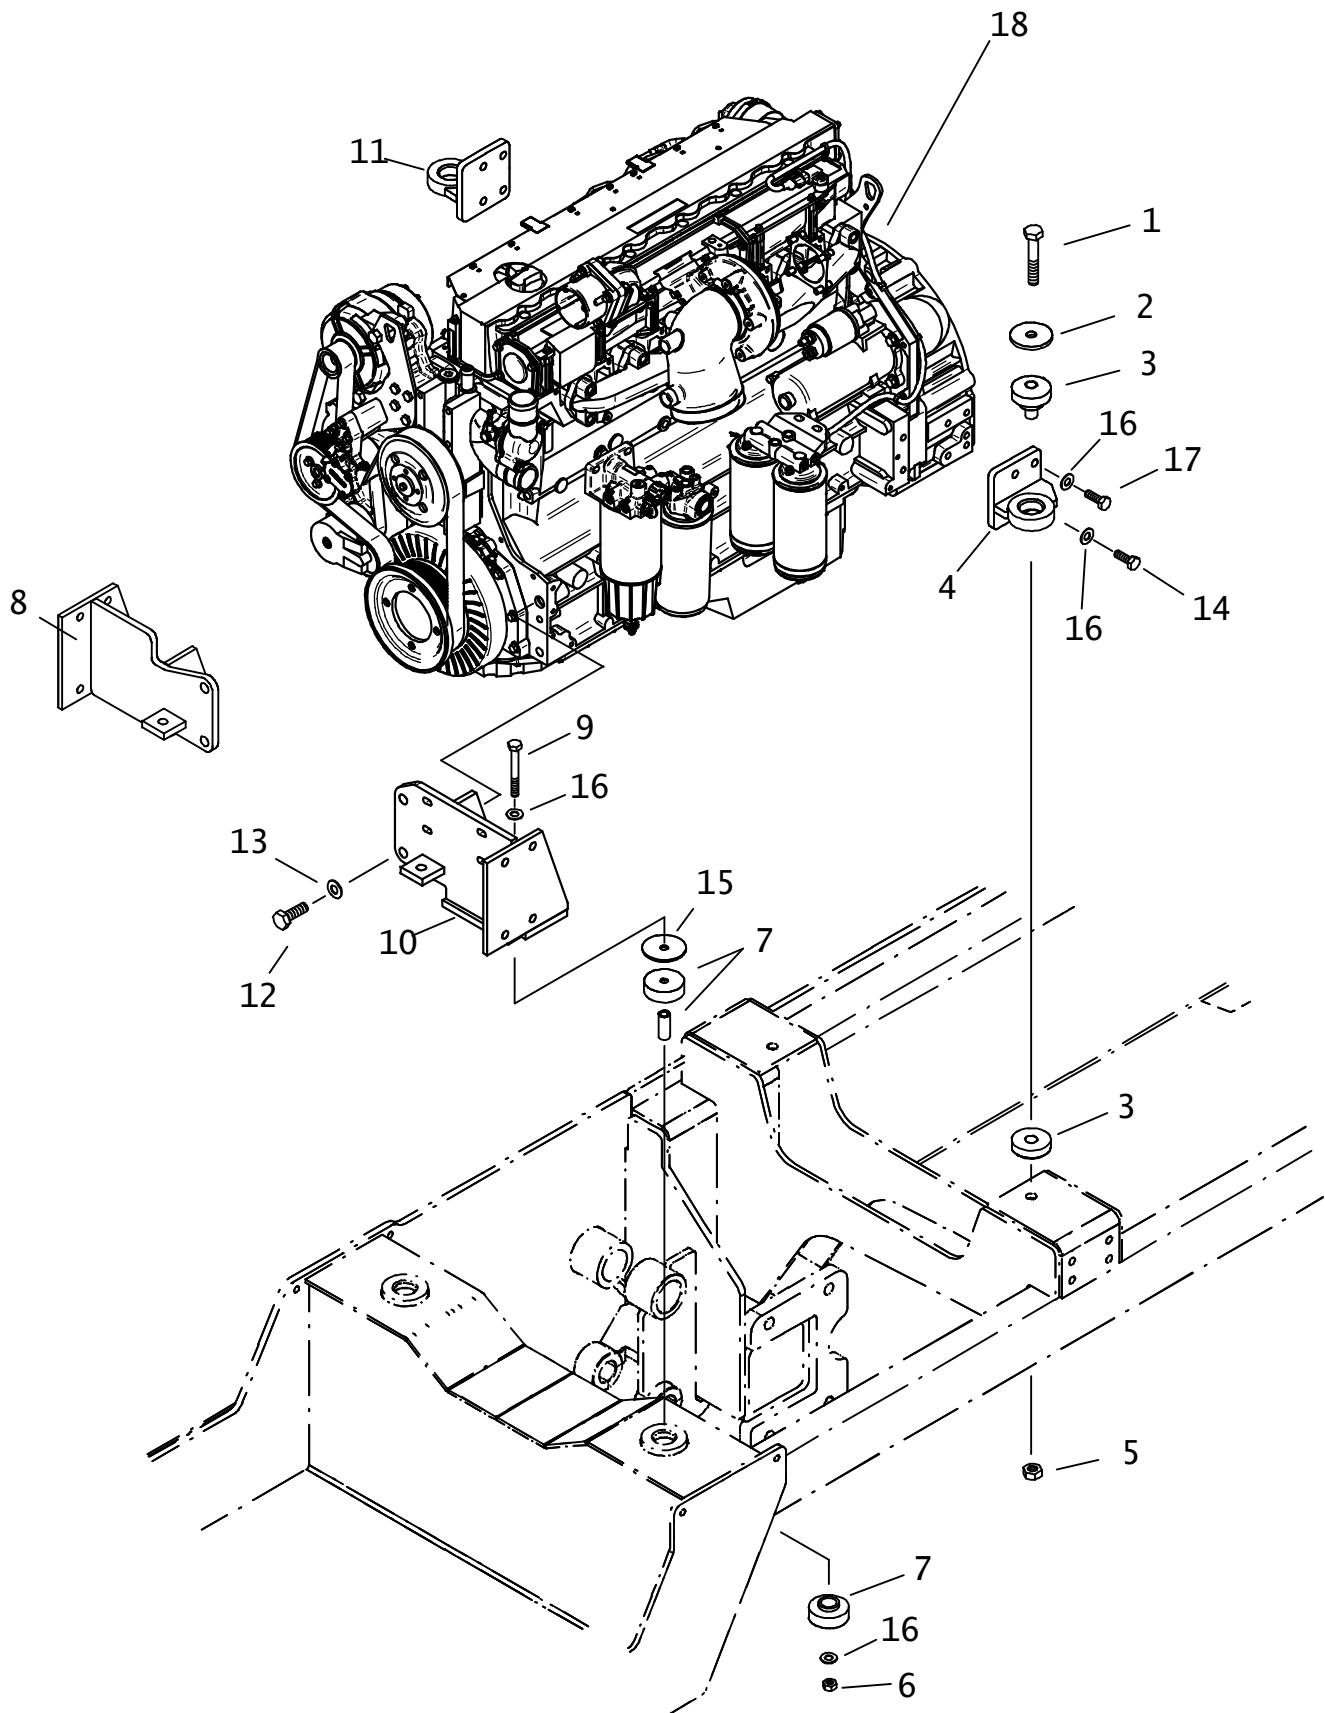

## ENGINE MOUNT


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	107-144	2	SCREW (M16-2.00 X 100mm)	
2.	105-964	2	WASHER (.656")	
3.	116-691	2	SHOCK MOUNT (REAR)	
4.	349-078	1	LEFT REAR ENGINE MOUNT	
5.	106-545	2	LOCKNUT (M16-2.0, PRV TRQ, 10.9)	
6.	106-685	2	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
7.	116-690	2	SHOCK MOUNT (FRONT)	
8.	308-694	1	FRONT ENGINE MOUNT (RT)	
9.	106-336	2	SCREW (M12-1.75 X 90mm)	
10.	300-1789	1	WELDMENT, FRONT ENGINE MOUNT (LEFT)	
11.	349-077	1	RIGHT REAR ENGINE MOUNT	TORQUE TO 140 FT LBS; USE LOCTITE 242 OR EQUIVALENT
12.	105-998	4	SCREW (M16-2.00 X 40mm)	
13.	106-398	4	WASHER (M16, HARDENED)	
14.	105-273	4	SCREW (M12-1.75 X 30mm)	TORQUE TO 60 FT LBS; USE LOCTITE 242 OR EQUIVALENT
15.	178-072	2	WASHER	
16.	106-397	12	WASHER (M12, HARDENED)	
17.	106-333	4	SCREW (M12-1.75 X 40MM, 8.8)	TORQUE TO 60 FT LBS; USE LOCTITE 242 OR EQUIVALENT
18.	194-892	1	ENGINE, DEUTZ TCD2013L062V	OBSOLETE

NOT SHOWN:

FOOTNOTES:

NOTE:

## AIR FILTER ASSEMBLY

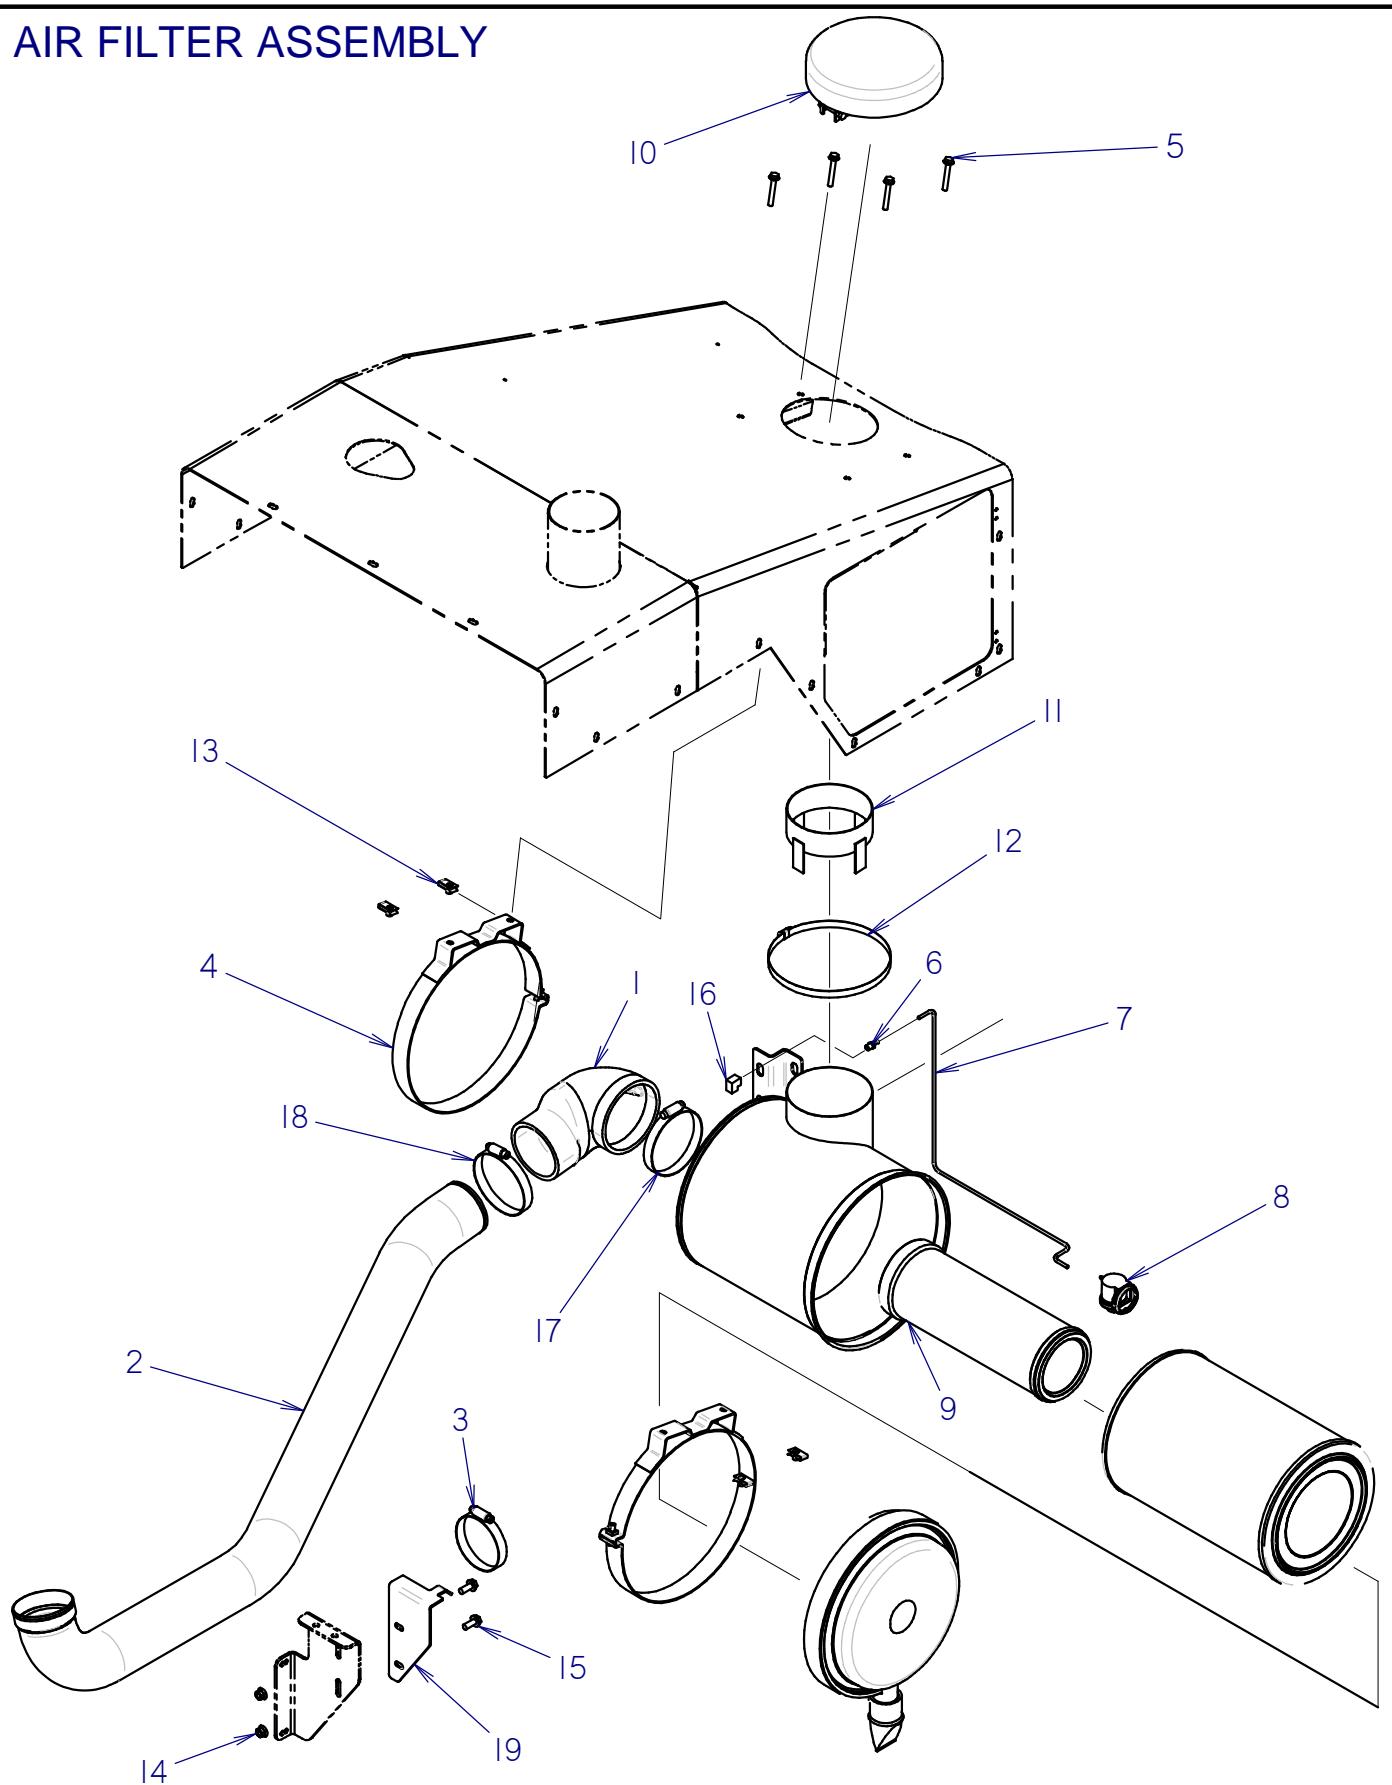

## AIR FILTER ASSEMBLY


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I18-50I	1	INLET HOSE (COBRA HEAD 4"-5")	
2	I95-102I	1	TUBE, AIR FILTER	
3	I10-367	1	WORM CLAMP (3-1/4" TO 4-1/8")	
4	I94-673	2	MOUNTING BAND (13")	
5	I05-665	4	FLG SCREW (M8-1.25 X 55MM)	
6	I55-I50	1	S/O COUPLER (O2N-02H)	
7	I16-192	1	BULK HOSE (7/64", SOLD PER 1")	USE 18"
8	I215-I50	1	RESTRICTION INDICATOR(20"H20)	
9	I94-672	1	AIR FILTER ASSEMBLY (13")	INCLUDES 500-1086-PRIMARY & 500-1087-SAFETY ELEMENT
I0	I95-1055	1	AIR INLET HOOD (6")	
I1	I300-2605	1	WELDMENT, INTAKE TUBE SPACER	
I2	I10-656	1	WORM CLAMP (2-1/2" TO 8-1/2")	
I3	I07-I35	4	CLIP NUT (M8-1.25)	
I4	I06-387	2	FLG LOCKNUT (M10-1.50)	
I5	I06-724	2	FLG SCREW (M10-1.50 X 25MM)	
I6	I56-228	1	ELBOW (O2NF-02NF90)	
I7	I10-39I	1	WORM CLAMP (4-3/4" TO 5-5/8")	
I8	I10-170	1	WORM CLAMP (4-1/8" TO 5")	
I9	I300-I95I	1	SHEET, INTAKE SUPPORT	

NOT SHOWN:

FOOTNOTES:

NOTE:

## EXHAUST

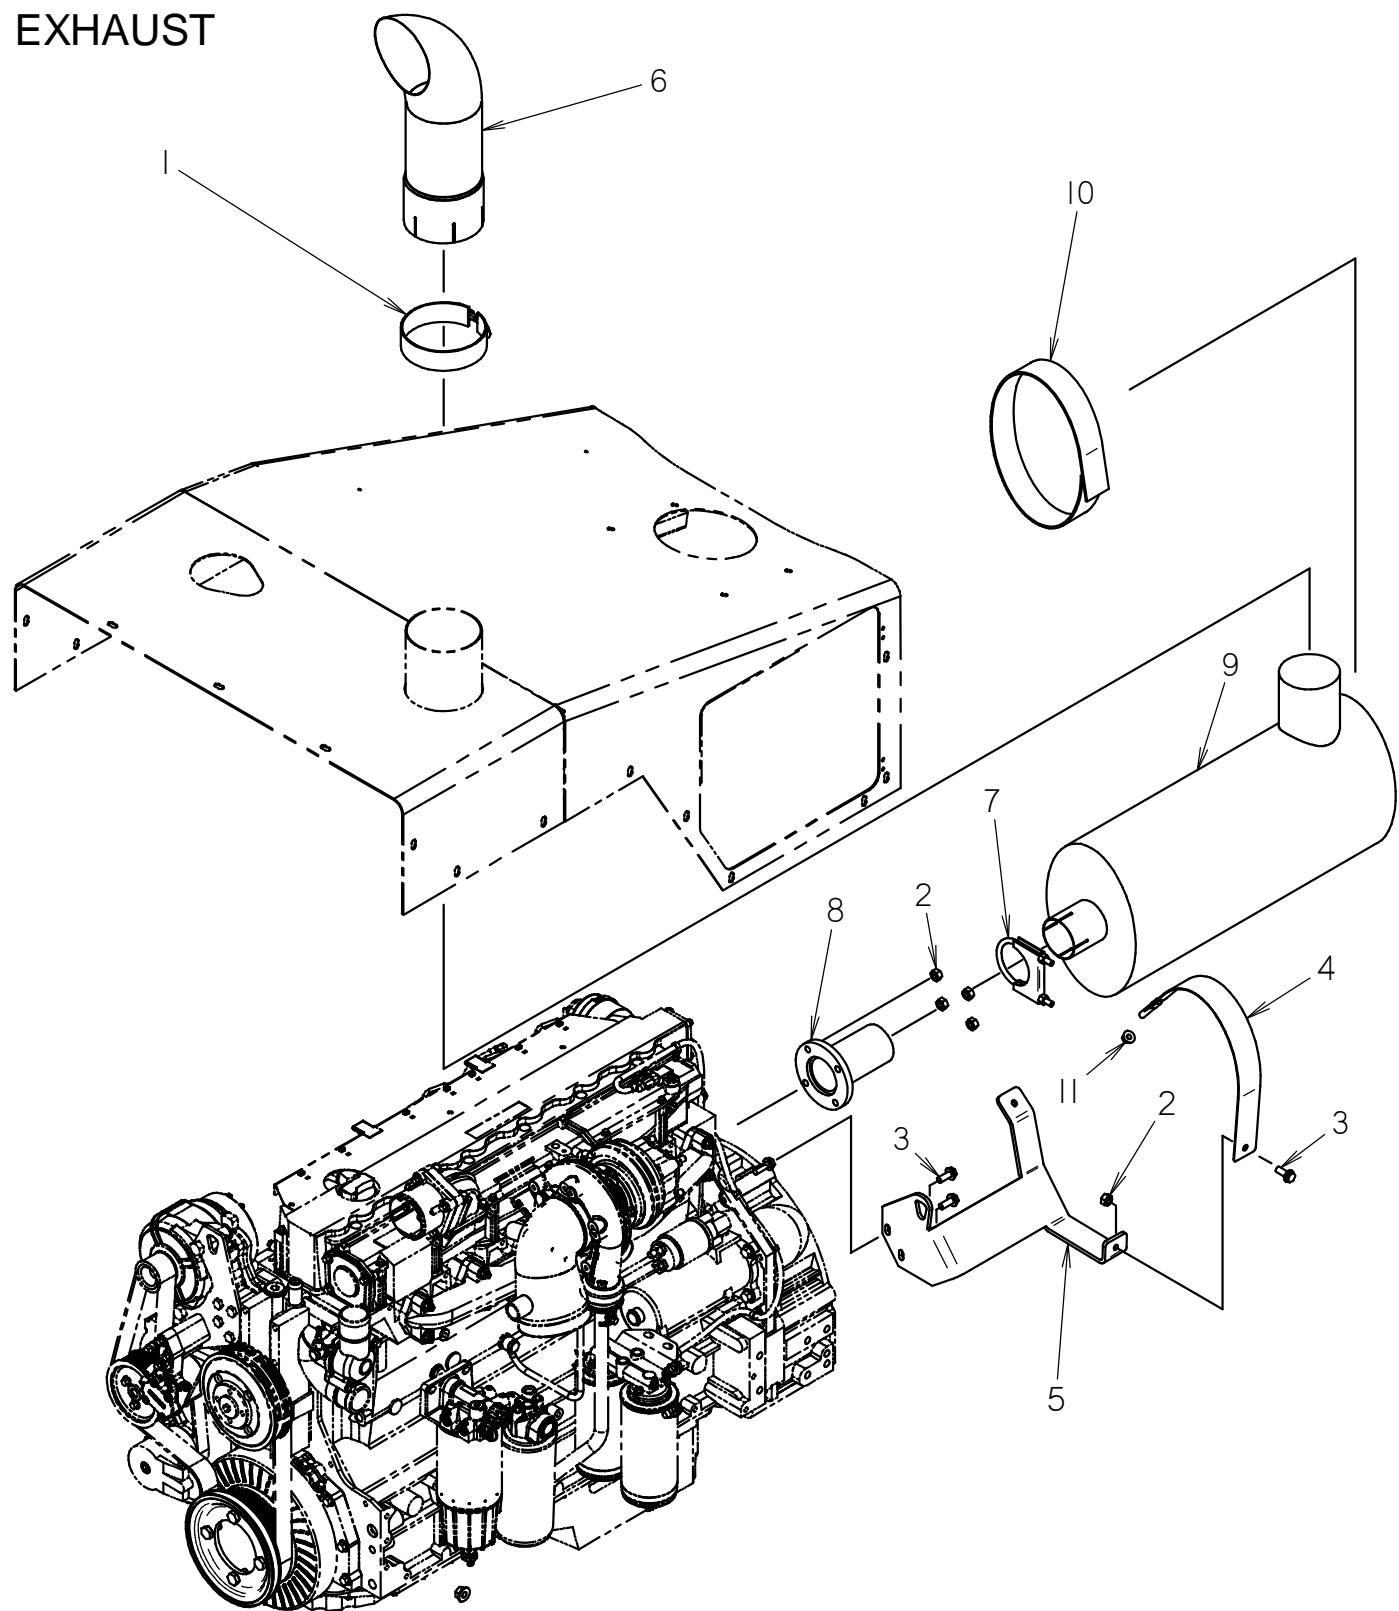

# EXHAUST


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I94-202	1	EXHAUST CLAMP (5-1/2")	
2	I05-894	2	LOCKNUT(M10-1.50,PRV TRQ,10.9)	
3	I05-799	2	FLG LK SCREW (M10-1.50 X 25MM)	
4	300-I941	1	WELDMENT, MUFFLER STRAP	
5	300-1938	1	WELDMENT, MUFFLER SUPPORT	
6	I94-152	1	EXHAUST	
7	I96-341	1	MUFFLER CLAMP (2-3/4")	
8	300-1720	1	WELDMENT, EXHAUST MOUNT TUBE	
9	I94-016	1	EXHAUST SILENCER	
I0	I15-834	AR	EXHAUST WRAP (2", SOLD PER FT)	USE 1 @ 36"
II	I06-387	1	FLG LOCKNUT (M10-1.50)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## CHARGE AIR COOLER

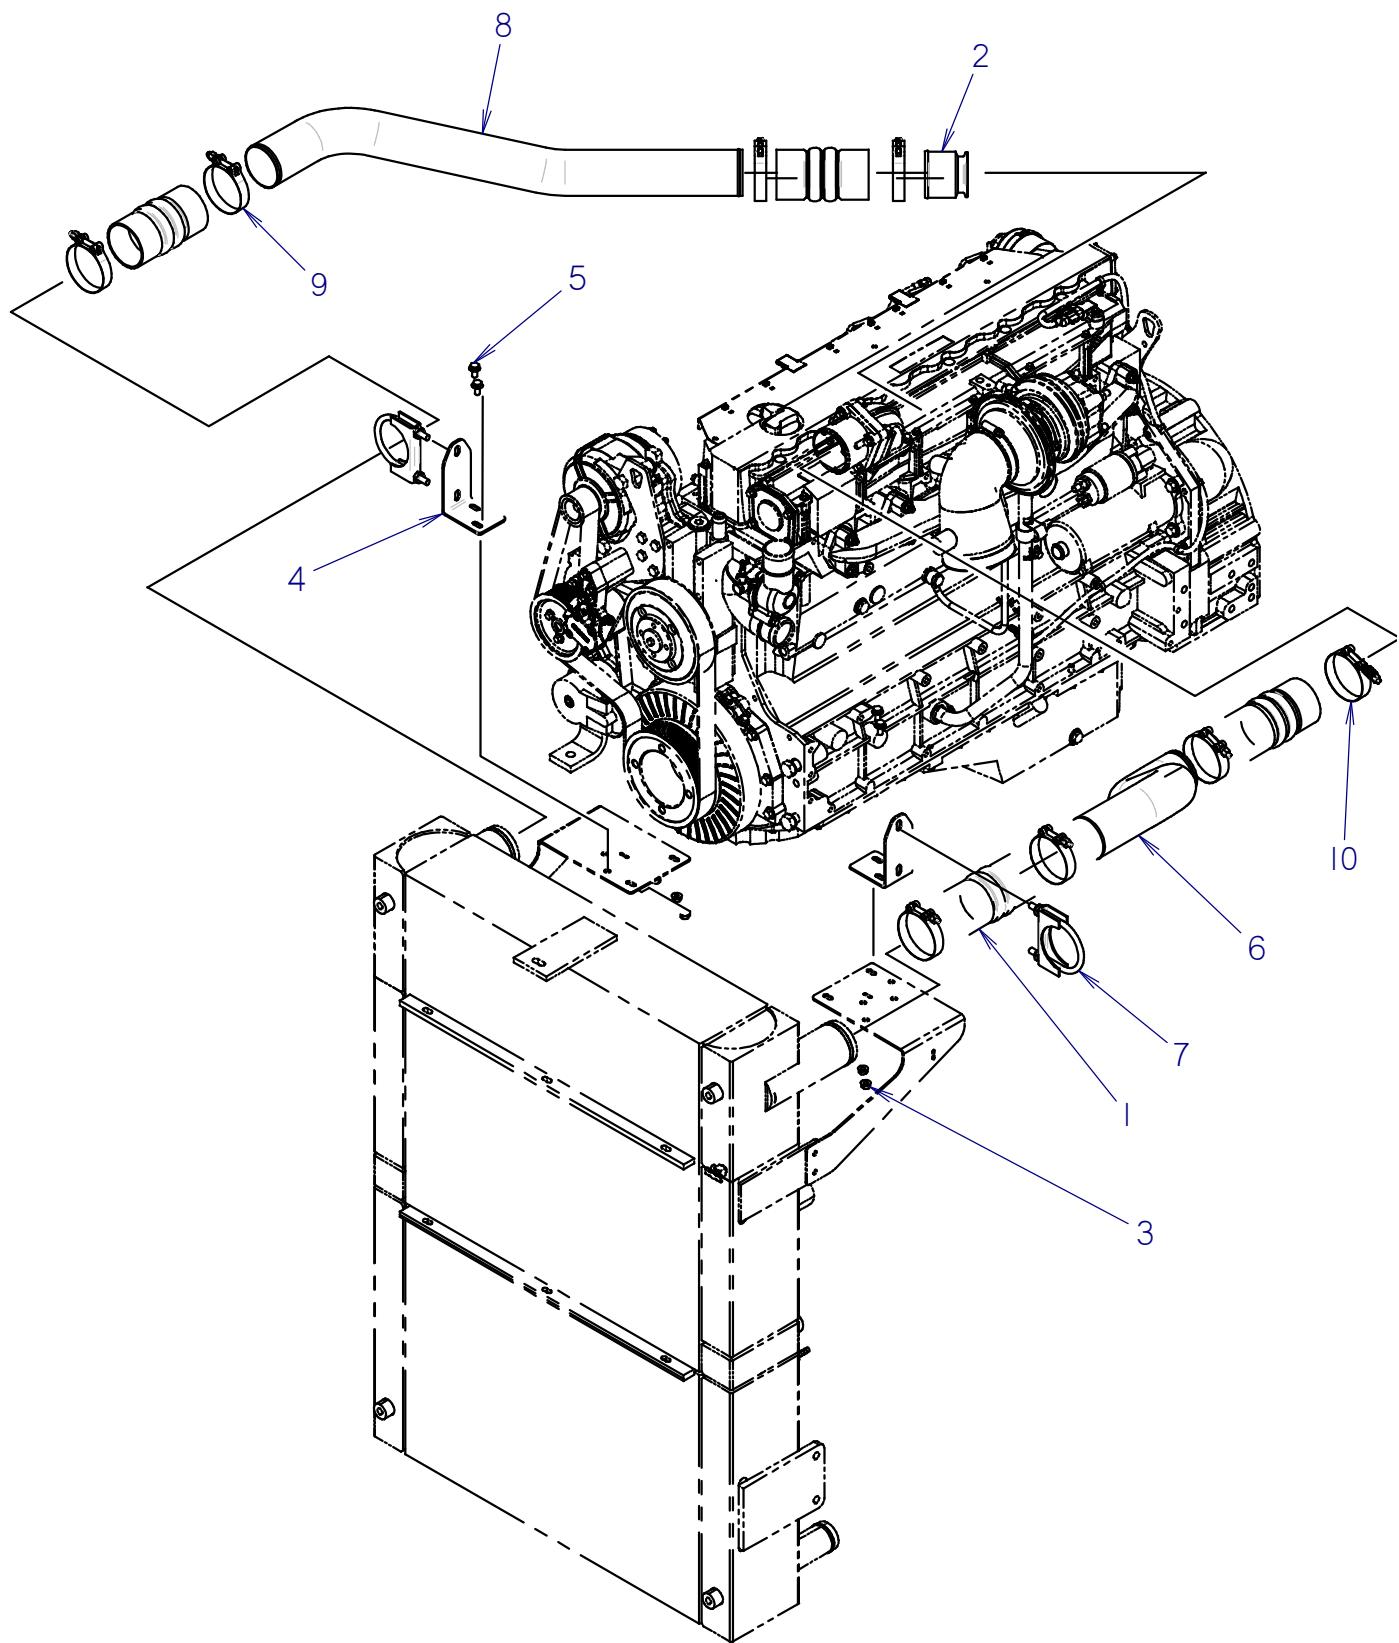

# CHARGE AIR COOLER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	116-703	4	CHARGE AIR COOLER HOSE	
2	300-1722	1	TUBE, DEUTZ COMPRESSOR OUTLET	
3	106-386	4	FLG LOCKNUT (M8-1.25)	
4	323-230	2	BRACKET	
5	106-380	4	FLG LK SCREW (M8-1.25 X 16MM)	
6	195-1019	1	TUBE, CAC OUTLET	
7	196-010	2	U-BOLT CLAMP (3")	
8	195-1033	1	TUBE, CAC INLET	
9	110-959	7	T-BOLT CLAMP (3")	
10	118-421	1	T-BOLT CLAMP (3.31" - 3.55")	

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0155977

## FAN DRIVE

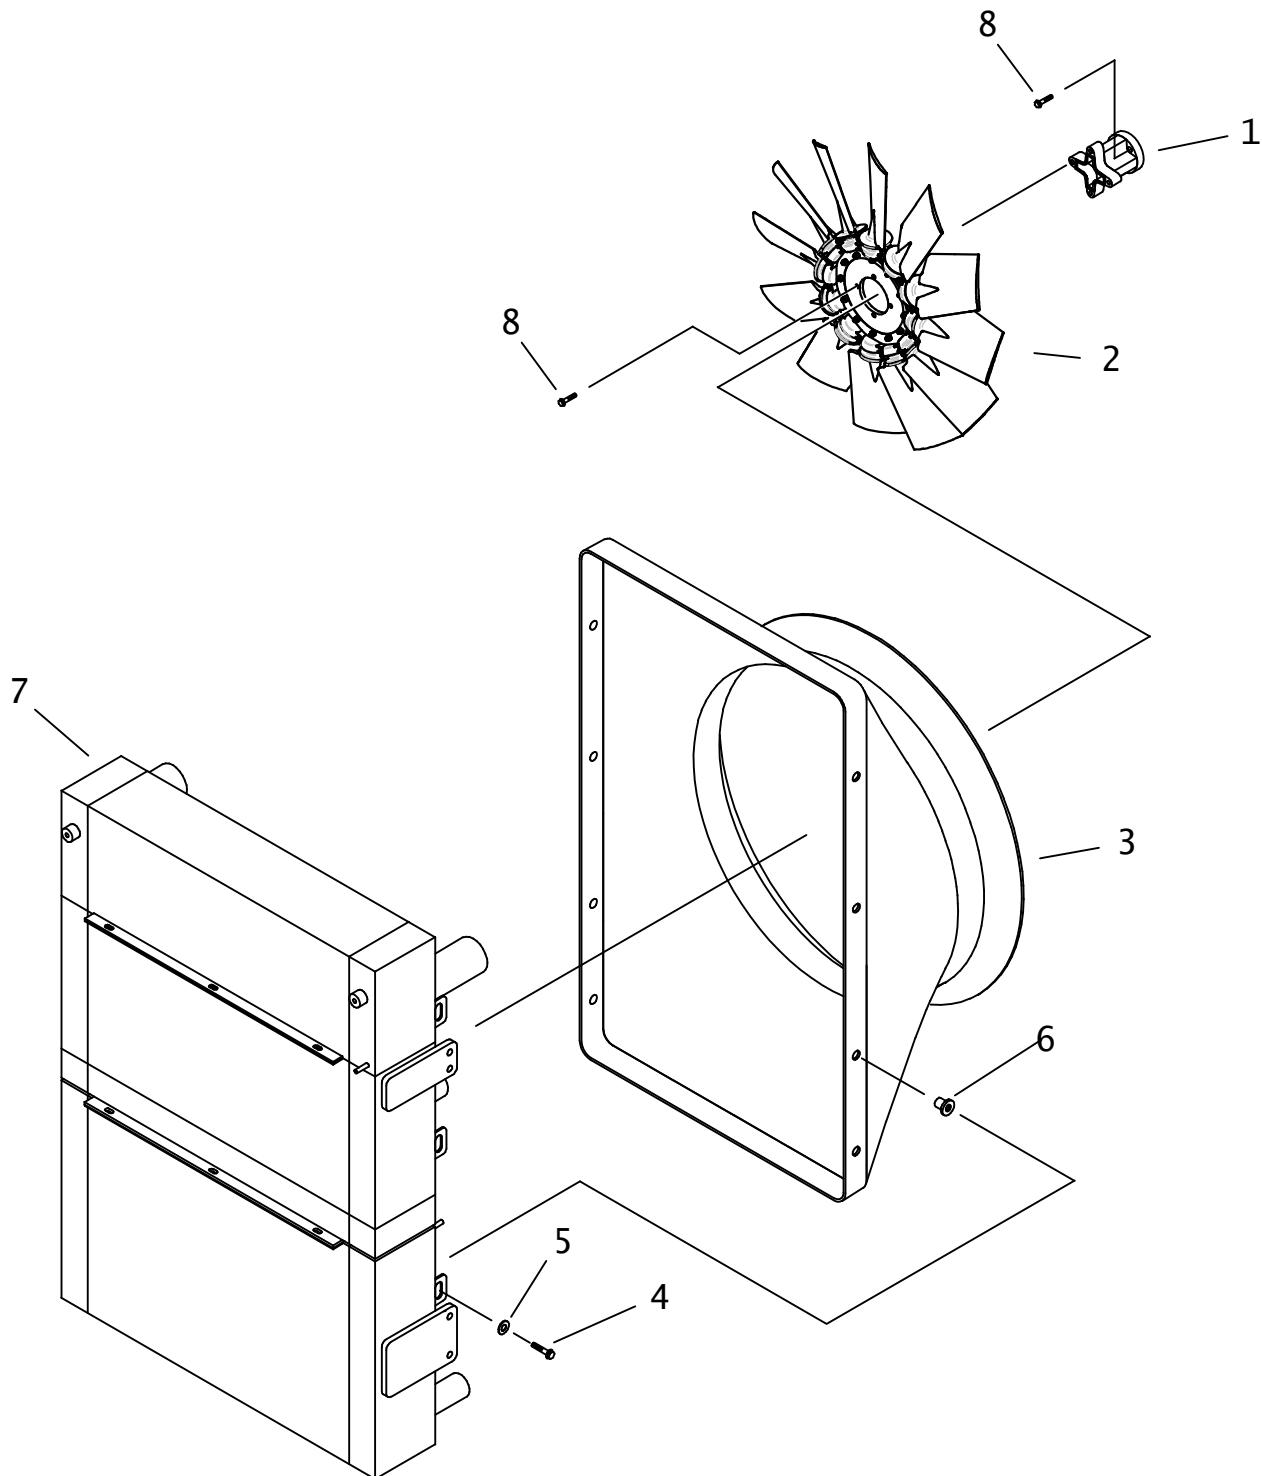

## FAN DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	194-193	1	FAN ADAPTER	
2.	195-1030	1	FAN, 26.62 DIA 12 BL SUCKER	
3.	362-962	1	FAN SHROUD	
4.	105-874	8	FLG LK BOLT (3/8-NC X 1-1/2")	
5.	105-118	8	WASHER (3/8")	
6.	107-493	8	WELLNUT (3/8"-16)	
7.	195-1015	1	COOLER, JT8020 TIER 3	
8.	106-163	8	FLG SCREW (M8-1.25 X 30MM)	USE 242 LOCTITE OR EQUIVALANT, TORQUE TO 16 FT LBS

NOT SHOWN:


FOOTNOTES:

NOTE:

OI

ID0155972

## RADIATOR MOUNTING

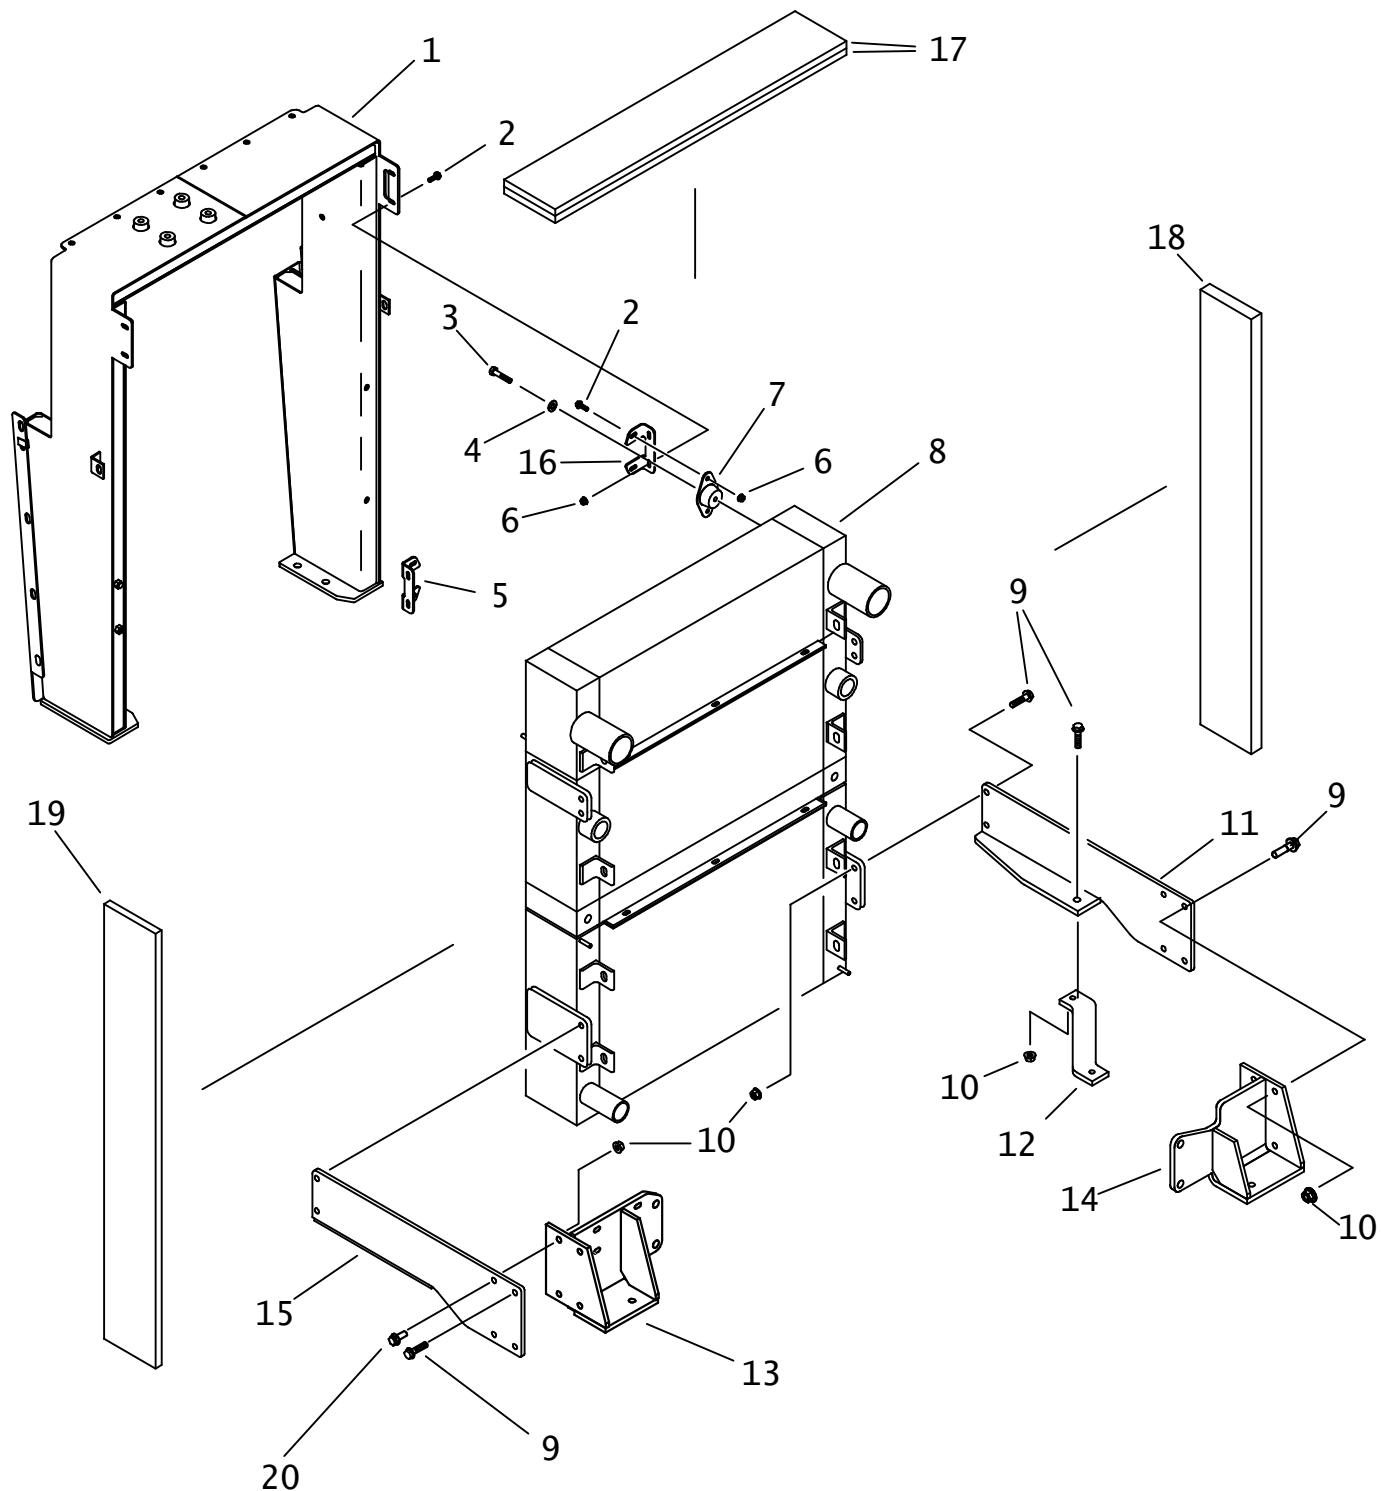

## RADIATOR MOUNTING


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	308-440	-	GRILLE	
2.	106-162	8	FLG SCREW (M8-1.25 X 20mm)	
3.	105-996	2	SCREW (M10-1.50 X 45mm)	
4.	105-118	2	WASHER (3/8")	
5.	308-632	1	MOUNTING BRACKET	
6.	106-386	8	FLG LOCKNUT (M8-1.25)	
7.	116-683	2	SHOCK MOUNT	
8.	195-1015	-	COOLER, JT8020 TIER 3	
9.	107-004	14	FLG LK SCREW (M12-1.75 X 45mm)	
10.	106-709	12	FLG LOCKNUT (M12-1.75)	
11.	308-947	1	RADIATOR MOUNT	
12.	308-701	2	MOUNT ARM	
13.	300-1789	-	WELDMENT, FRONT ENGINE MOUNT (LEFT)	
14.	308-694	-	RIGHT FRONT ENGINE MOUNT	
15.	308-692	1	RADIATOR MOUNT	
16.	309-500	1	MOUNTING BRACKET	
17.	117-309	2	INSULATION	
18.	117-310	1	INSULATION	
19.	117-311	1	INSULATION	
20.	106-469	2	FLG SCREW (M12-1.75 X 30MM)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## RADIATOR PLUMBING

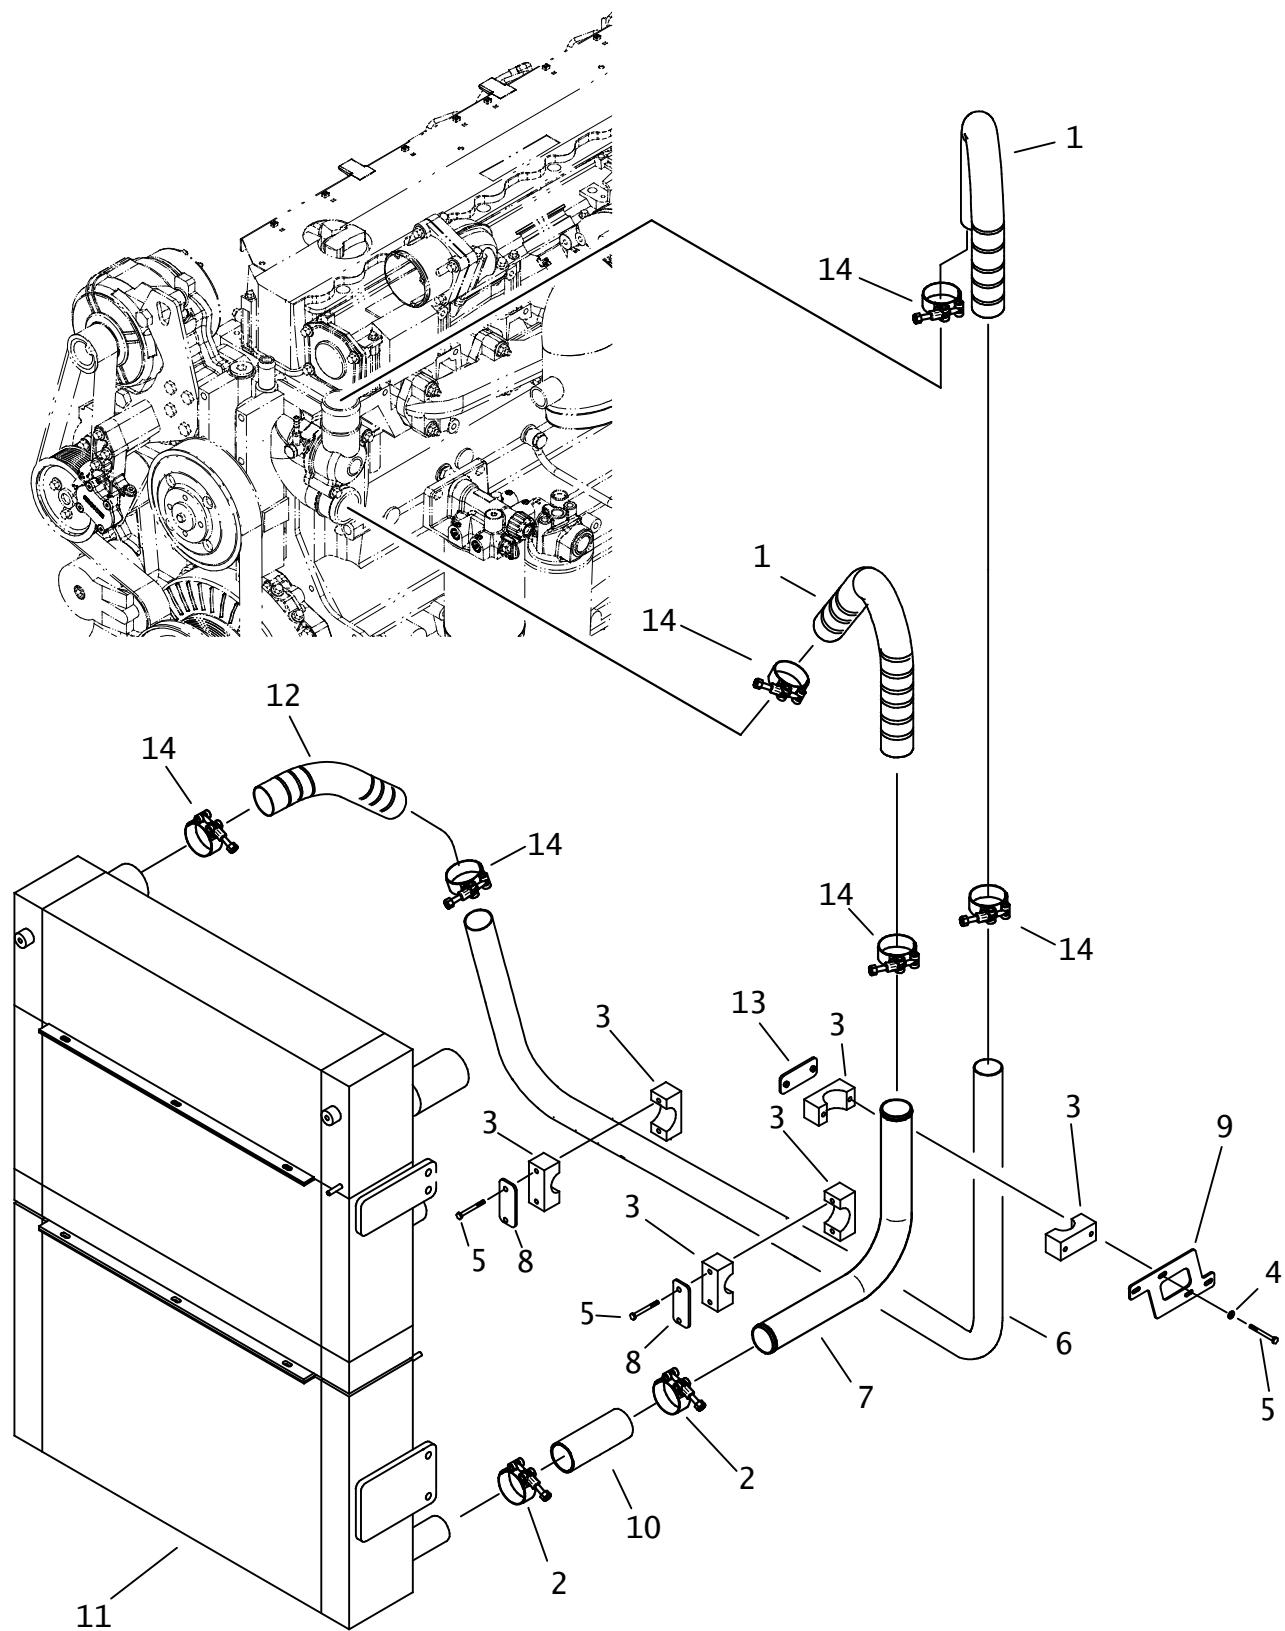

## RADIATOR PLUMBING


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	116-755	2	COOLANT HOSE	
2.	110-815	2	T-BOLT CLAMP(2.25" TO 2.56")	
3.	110-970	3	CLAMP (2.00") PAIR	
4.	105-095	2	WASHER (1/4")	
5.	106-967	6	BOLT (1/4-NC X 2-3/4", SIL BRZ)	
6.	194-155	1	UPPER RADIATOR TUBE (-32)	
7.	150-1216	1	TUBE, LOWER RADIATOR (-32)	
8.	110-973	2	COVER PLATE	
9.	308-702	1	CLAMP MOUNT	
10.	116-827	1	COOLANT HOSE	
11.	195-1015	-	COOLER, JT8020 TIER 3	
12.	116-754	1	COOLANT HOSE	
13.	110-972	1	WELD PLATE	
14.	105-1486	6	T-BOLT CLAMP (2.12" TO 2.44")	

NOT SHOWN:

FOOTNOTES:

NOTE:

## EXPANSION TANK

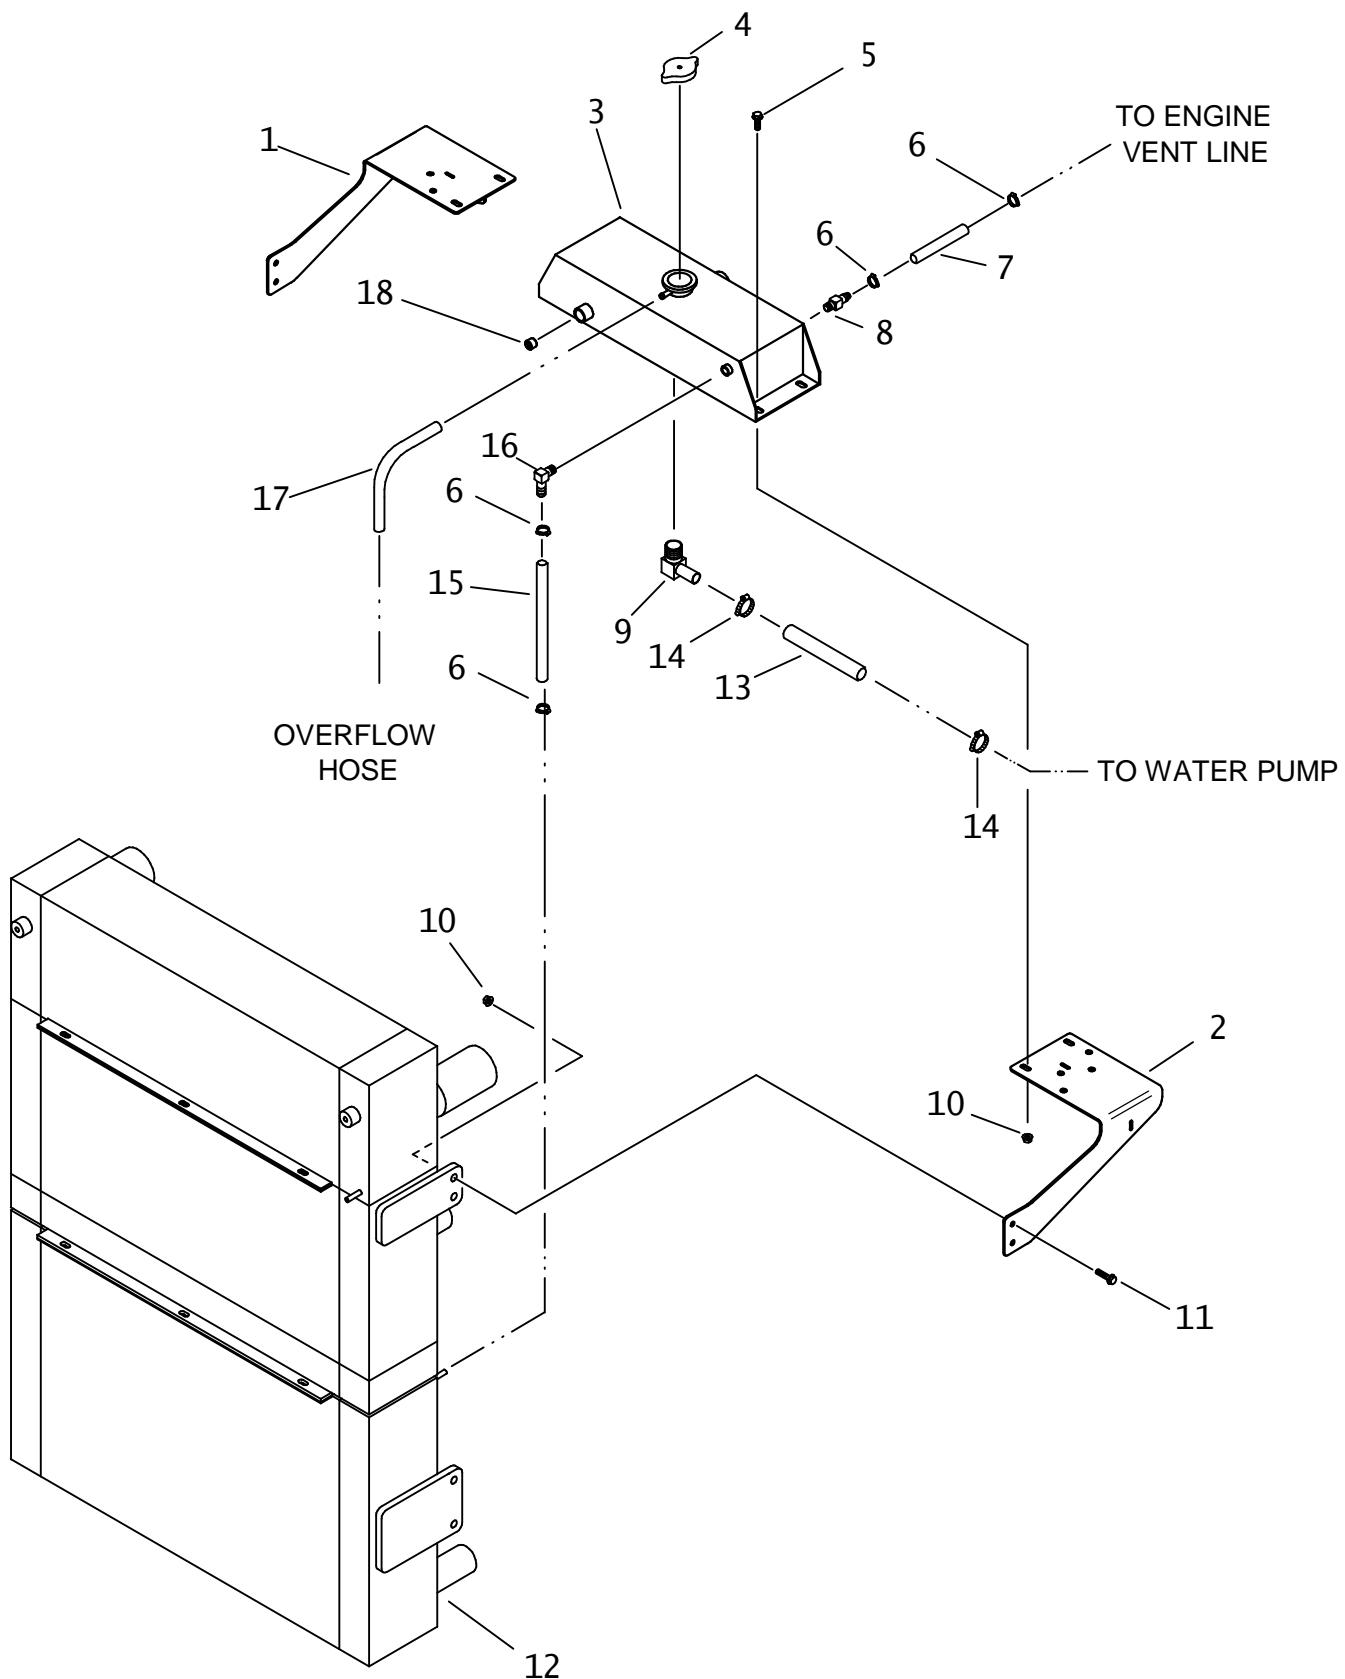

# EXPANSION TANK


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	308-710	1	TANK MOUNT (RIGHT)	
2.	308-709	1	TANK MOUNT (LEFT)	
3.	364-530	1	EXPANSION TANK	
4.	110-898	-	RADIATOR CAP (14 PSI)	
5.	106-162	4	FLG SCREW (M8-1.25 X 20mm)	
6.	110-249	4	WORM CLAMP (1/4" TO 5/8 ")	
7.	115-381 AR		BULK HOSE (1/4", SOLD PER 1")	USE 1 @ 20"
8.	155-093	1	S/O COUPLER (04N-04H)	
9.	153-151	1	S/O COUPLER (12N-12H90)	
10.	106-386	8	FLG LOCKNUT (M8-1.25)	
11.	106-163	4	FLG SCREW (M8-1.25 X 30mm)	
12.	195-1015	-	COOLER, JT8020 TIER 3	
13.	116-751 AR		BULK HOSE (3/4", SOLD PER 1')	USE 1 @ 20"
14.	110-026	2	WORM CLAMP (1/2" TO 1-1/4")	
15.	116-108 AR		BULK HOSE (5/16", SOLD PER 1")	USE 1 @ 33"
16.	155-164	1	S/O COUPLER (04N-05H90)	
17.	116-108 AR		BULK HOSE (5/16", SOLD PER 1")	USE 1 @ 67"
18.	115-165	1	PLUG (08N, SOC)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## BATTERY & POWER CABLES

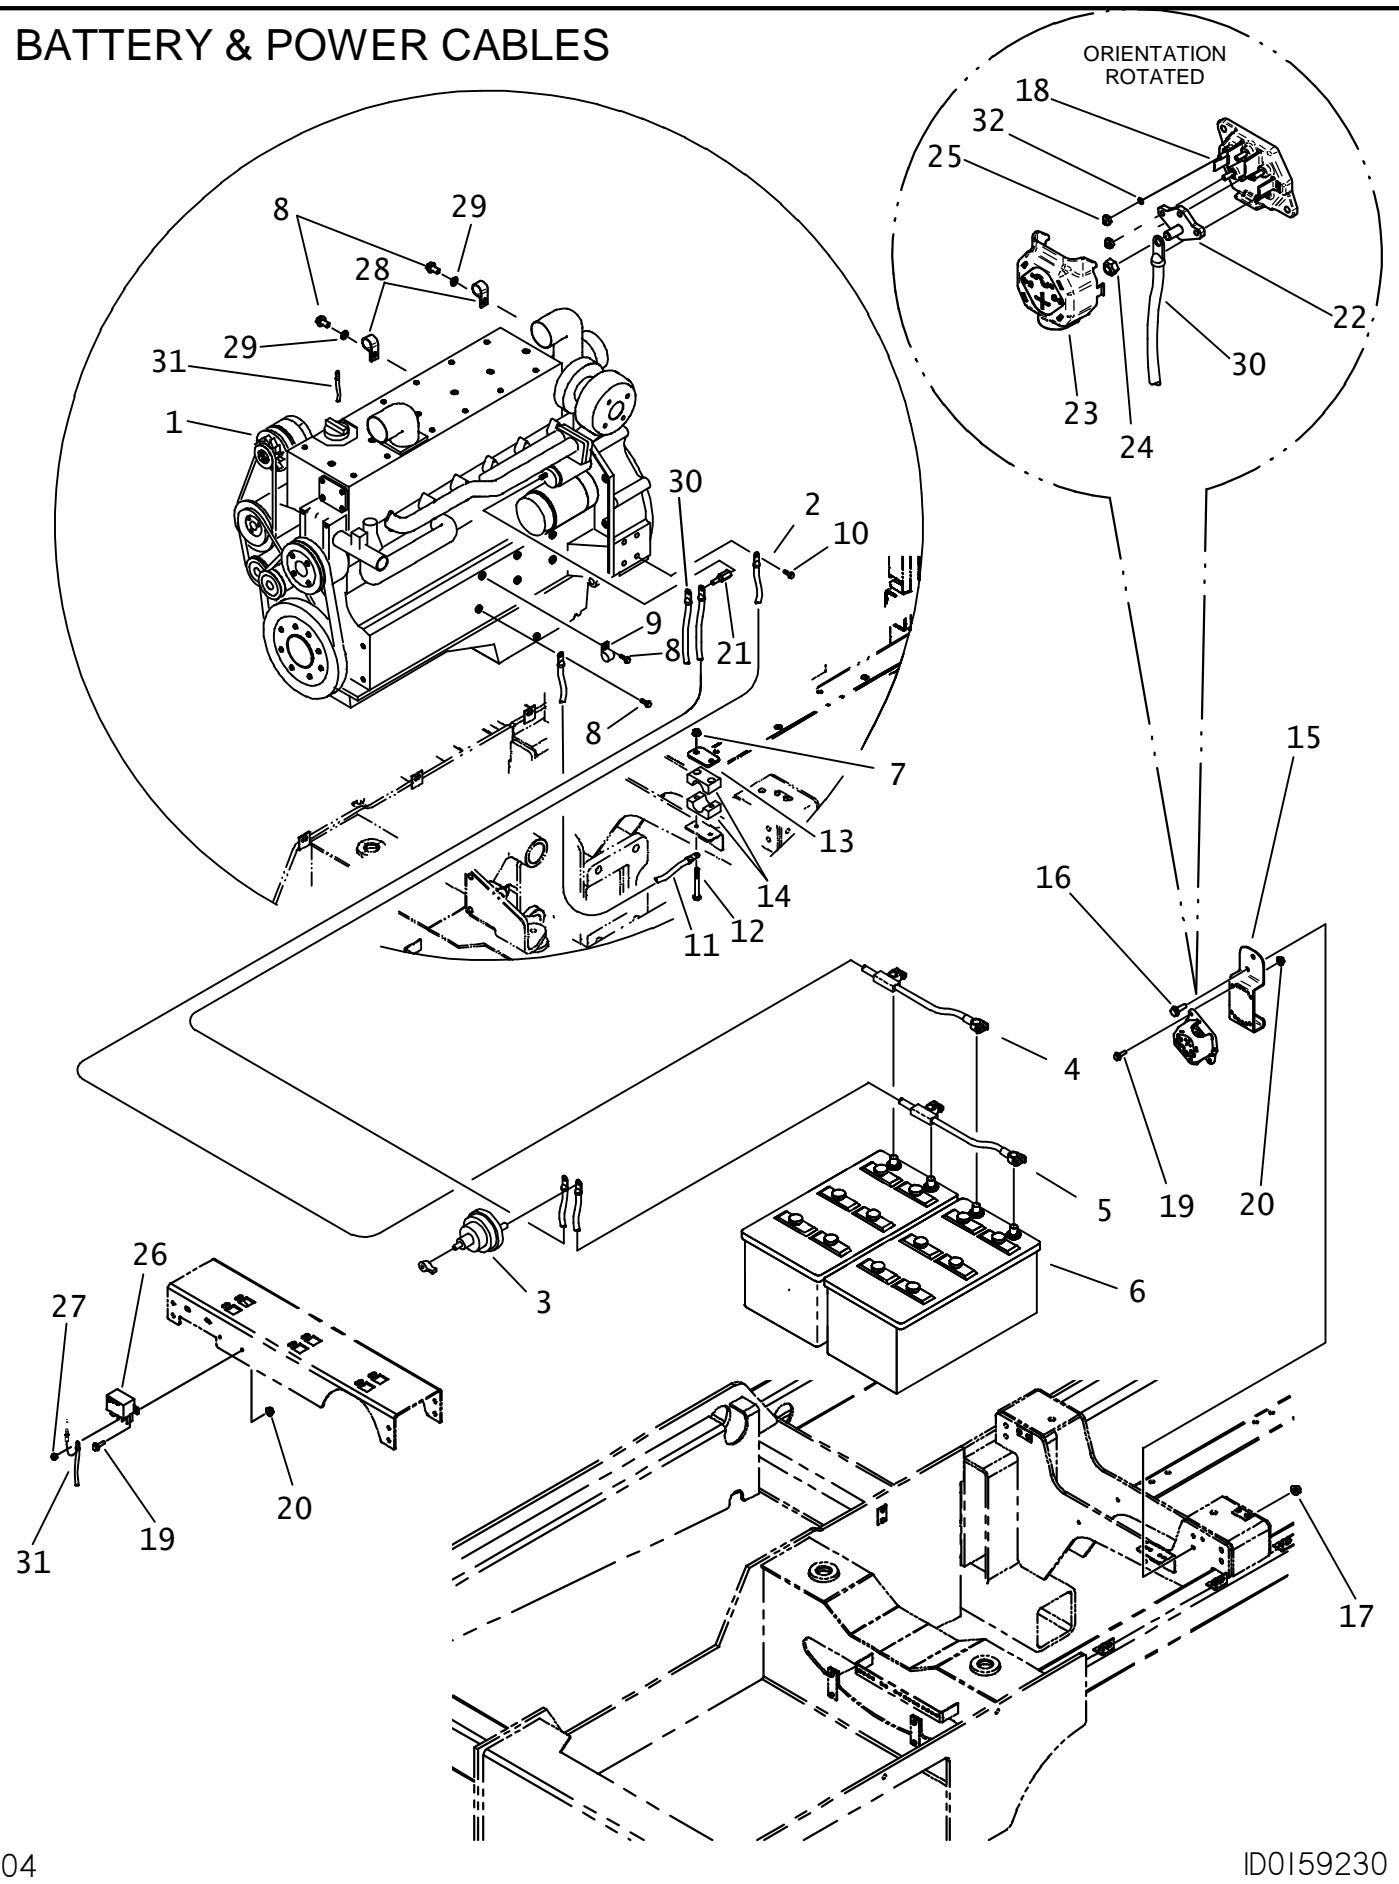

## BATTERY & POWER CABLES

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	194-892	1	- ENGINE-DEUTZ 2013 DIESEL T3	OBSOLETE
2.	215-234	1	BATTERY CABLE (4/0 X 127", BLK)	
3.	217-819	1	- BATTERY DISCONNECT SWITCH	
4.	215-236	1	BAT CBL (4GA, 157.8", RED, DUAL)	
5.	214-752	1	NEGATIVE BATTERY CABLE	
6.	215-282	1	- BATTERY	
7.	105-832	1	- FLG LOCKNUT (1/4-NC)	
8.	106-380	4	FLG LK SCREW (M8-1.25 X 16MM)	
9.	110-333	1	BOLT-ON CLAMP (1")	
10.	106-806	1	FLG LK SCREW (M12-1.75 X 25MM)	
11.	215-304	1	BAT CABLE (4 GA X 13", BLK)	USED ON JT8020 T3
	215-1105	1	BRAIDED GROUND STRAP	USED ON JT/AT100
12.	107-196	1	- BOLT (1/4-NC X 3")	
13.	322-362	1	- BACKUP SPACER	
14.	110-852	1	- BLT-ON CLP (1.2", SOLD PER SET)	
15.	300-2456	1	SHEET, FUSE MOUNT	
16.	106-381	2	FLG LK SCREW (M8-1.25 X 25MM)	
17.	106-386	2	FLG LOCKNUT (M8-1.25)	
18.	215-1009	1	MAIN FUSE HOLDER BASE	
19.	106-161	4	FLG SCREW (M6-1.00 X 20MM)	
20.	106-385	4	FLG LOCKNUT (M6-1.00)	
21.	159-448	1	METRIC ADAPTER STUD	
22.	215-1011	1	BUSSBAR (MAIN FUSE HOLDER)	
23.	215-1010	1	MAIN FUSE HOLDER COVER	
24.	105-047	1	LOCKNUT (3/8-NC)	
25.	105-186	6	LOCKNUT (#10-24)	
26.	500-1149	1	- RELAY, DEUTZ PREHEAT	SUPPLIED WITH 194-892
27.	106-237	2	LOCKNUT (M6-1.00, PRV TRQ, NLK)	
28.	110-373	2	BOLT-ON CLAMP (13/16")	
29.	106-389	2	WASHER (M8)	
30.	215-1167	1	PRIMARY CABLE	USED ON JT8020 T3
	215-1653	1	PRIMARY CABLE	USED ON JT/AT100
31.	215-1168	1	GLOW PLUG CABLE	
32.	106-056	6	EXT STAR WASHER (#10)	

NOT SHOWN:

FOOTNOTES:


NOTE:

## **NOTES:**

# FRAME COMPONENTS

ID0135068

## ASSISTED MAKEUP

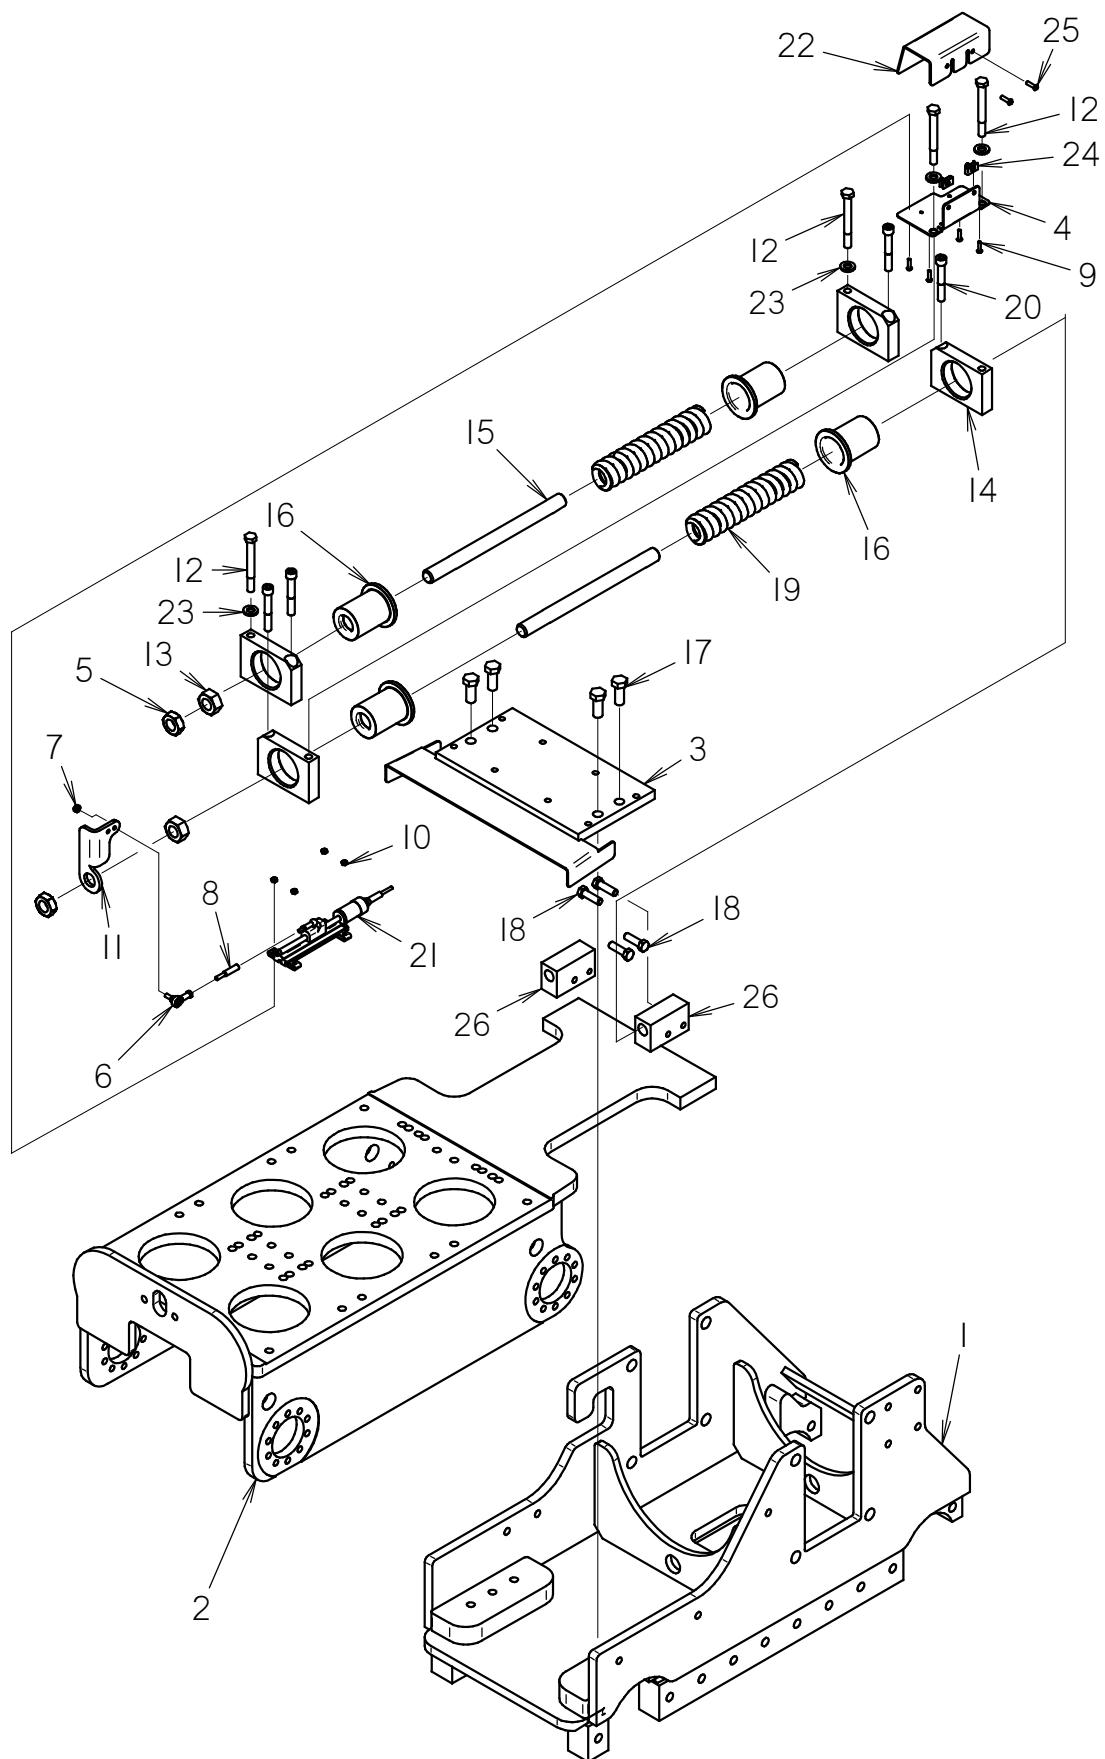

# ASSISTED MAKEUP

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-5430	1	CARRIAGE	
2	300-6134	1	THRUST DRIVE CARRIAGE	
3	300-6132	1	SPRING MOUNT	
4	300-8553	1	MOUNTING BRACKET	
5	I06-033	2	JAM NUT (I-NCI)	
6	I10-774	1	BALL JOINT (I/4-NF)	
7	I06-678	1	LOCKNUT (I/4-NF)	
8	300-3956	1	LINKAGE ROD	
9	I06-049	4	BOLT (#10-24 X 3/4", PLPS)	
I0	I06-048	4	LOCKNUT (#10-24)	
I1	300-8552	1	BRACKET	
I2	I06-645	4	SCREW (M12-1.75 X 110MM, I0.9)	USE LOCTITE 277 OR EQUIVALENT
I3	I05-375	2	NUT (I-NCI)	
I4	300-8554	4	GUIDE PLATE	
I5	300-8555	2	MOUNTING ROD	
I6	300-8556	4	BUSHING	
I7	I05-998	4	SCREW (M16-2.00 X 40MM)	USE LOCTITE 277 OR EQUIVALENT TORQUE TO 250 FT LBS
I8	I06-547	4	SCREW (M12-1.75 X 40MM, I0.9)	USE LOCTITE 277 OR EQUIVALENT
I9	I17-047	2	COMPRESSION SPRING	
I20	I06-I17	4	SCREW (M12-1.75 X 80MM, SOCI)	USE LOCTITE 277 OR EQUIVALENT
I21	2I5-I002	1	POSITION SENSOR	USE LOCTITE 242 OR EQUIVALENT - REFER TO NOT SHOWN SECTION
I22	300-8560	1	SENSOR GUARD	
I23	I06-397	4	WASHER (M12, HARDENED)	
I24	I06-574	2	CLIP NUT (M6-I.00)	
I25	I06-640	2	SCREW (M6-I.00 X 20MM,BUT SOCI)	
I26	300-8557	2	MOUNTING BLOCK	

## NOT SHOWN:


2I5-I6I7    1    MAGNETIC SLIDE

SERVICE PART FOR REF. #2I, 2I5-I002

## FOOTNOTES:

## NOTE:

## DRILL FRAME

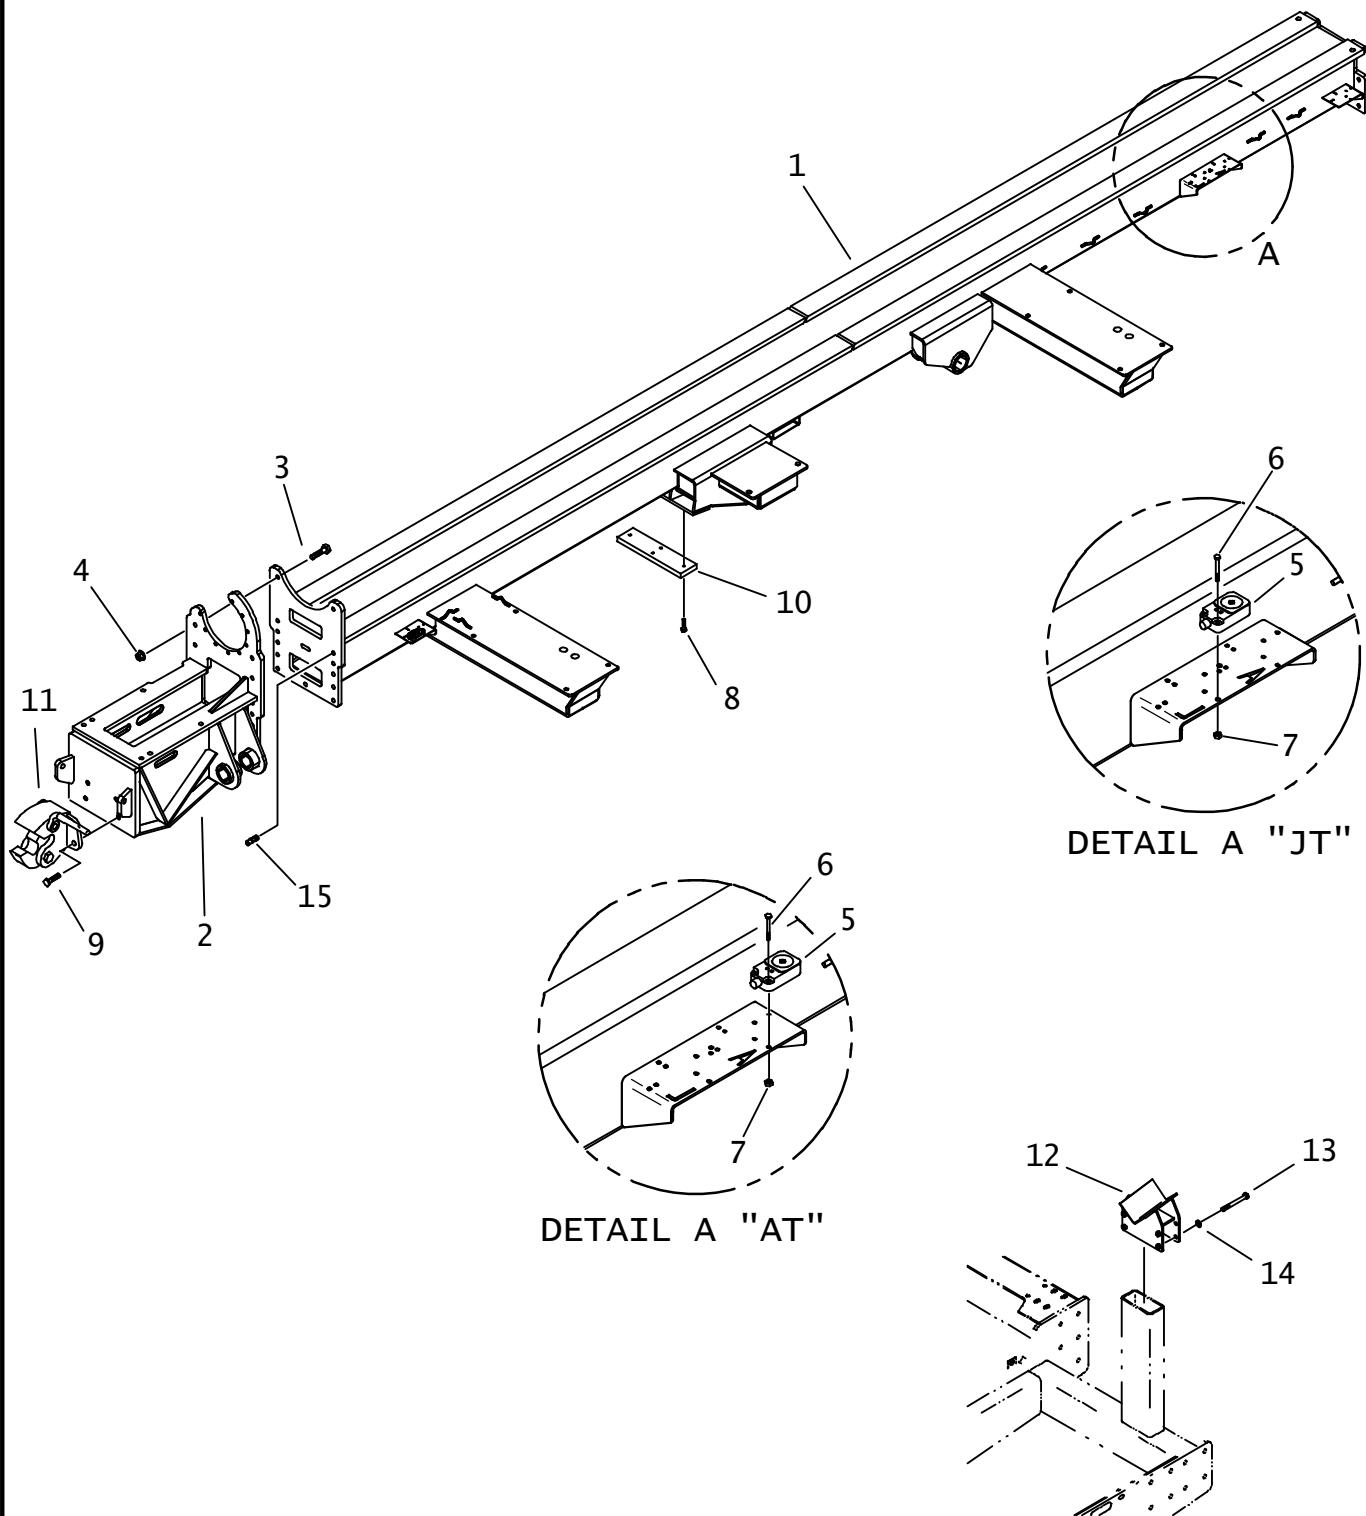

## DRILL FRAME


REF	PART		REMARKS
NO.	NUMBER	QTY	DESCRIPTION
1.	305-714	1	DRILL FRAME
	300-5349	1	DRILL FRAME
2.	349-675	1	FRONT FRAME
	314-557	1	FRONT FRAME
	300-5342	1	FRONT FRAME
3.	106-074	13	SCREW (M16-2.0 X 60MM)
4.	106-442	15	FLG LOCKNUT (M16-2.00, PRV TRQ)
5.	215-1175	3	PROXIMITY SWITCH
6.	106-427	6	SCREW (M5-0.80 X 22MM, SOC)
7.	106-850	6	LOCKNUT (M5-0.80)
8.	105-271	4	SCREW (M10-1.5 X 40MM)
9.	106-098	4	FLG BOLT (3/4-NC X 2", GD8)
10.	370-364	1	STOP PAD
11.	206-076	1	COUPLING
12.	320-442	1	STOW MOUNT
13.	106-564	4	SCREW (M10-1.50 X 100MM)
14.	106-396	4	WASHER (M10, HARDENED)
15.	106-520	2	STUD BOLT (M16-2.00 X 55MM)
			BEGINS WITH CMW S/N: CMWJT100L90000002

NOT SHOWN:

FOOTNOTES:

NOTE:

## CYLINDER LOCKS

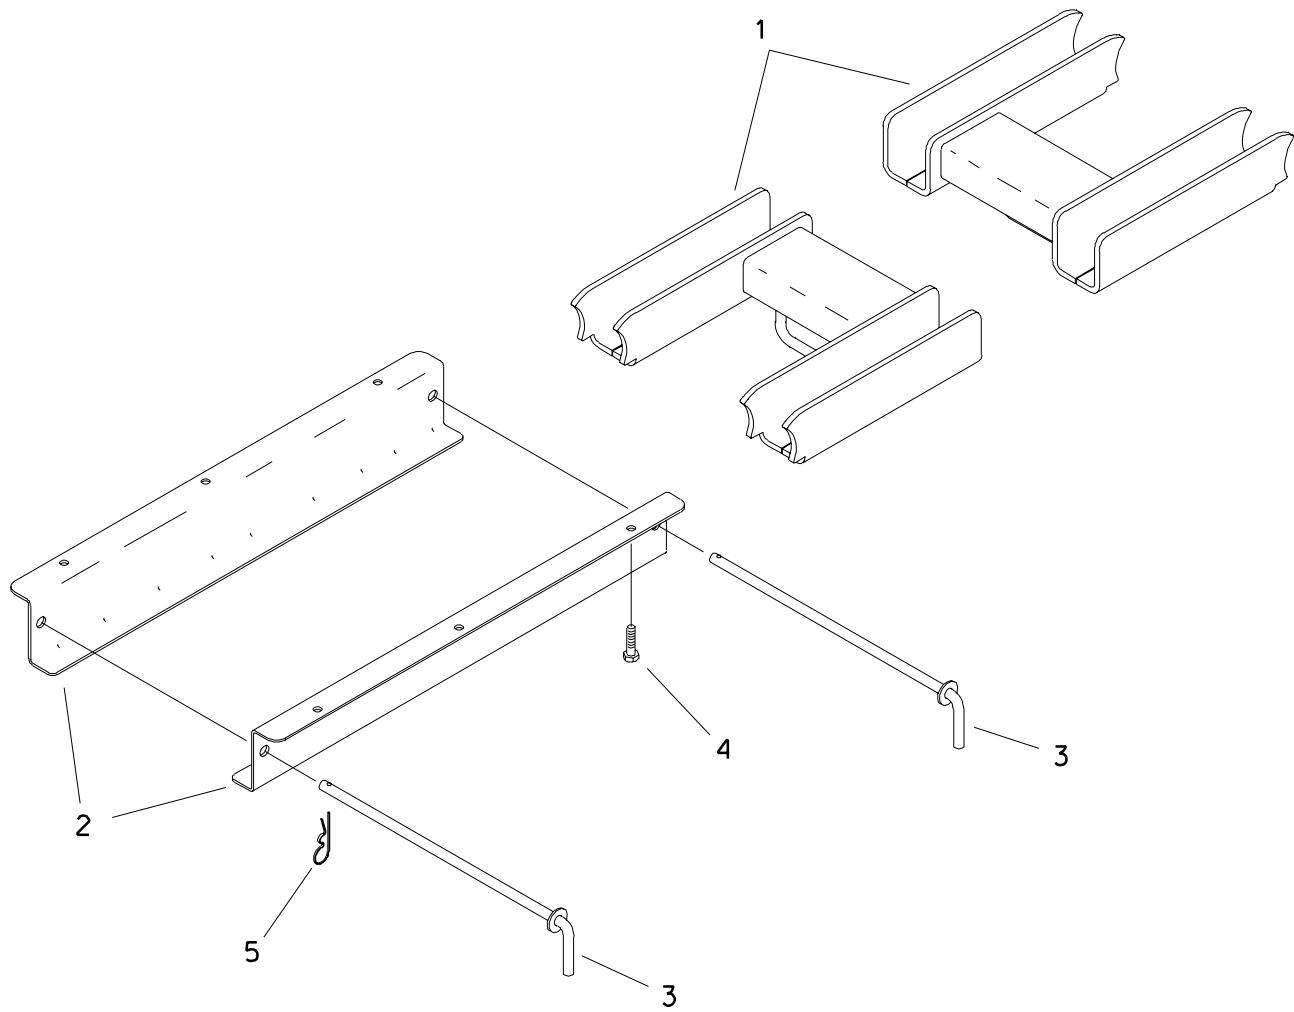


## CYLINDER LOCKS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	370-376	2	CYLINDER LOCK	
2.	370-408	2	FORMED PLATE	
3.	370-410	2	PIN	
4.	106-383	6	FLG LK SCREW (M10-1.5 X 30MM)	
5.	110-033	2	HAIR CLIP PIN (1/8" X 1/2")	

FOOTNOTES

## PIPE GUIDE

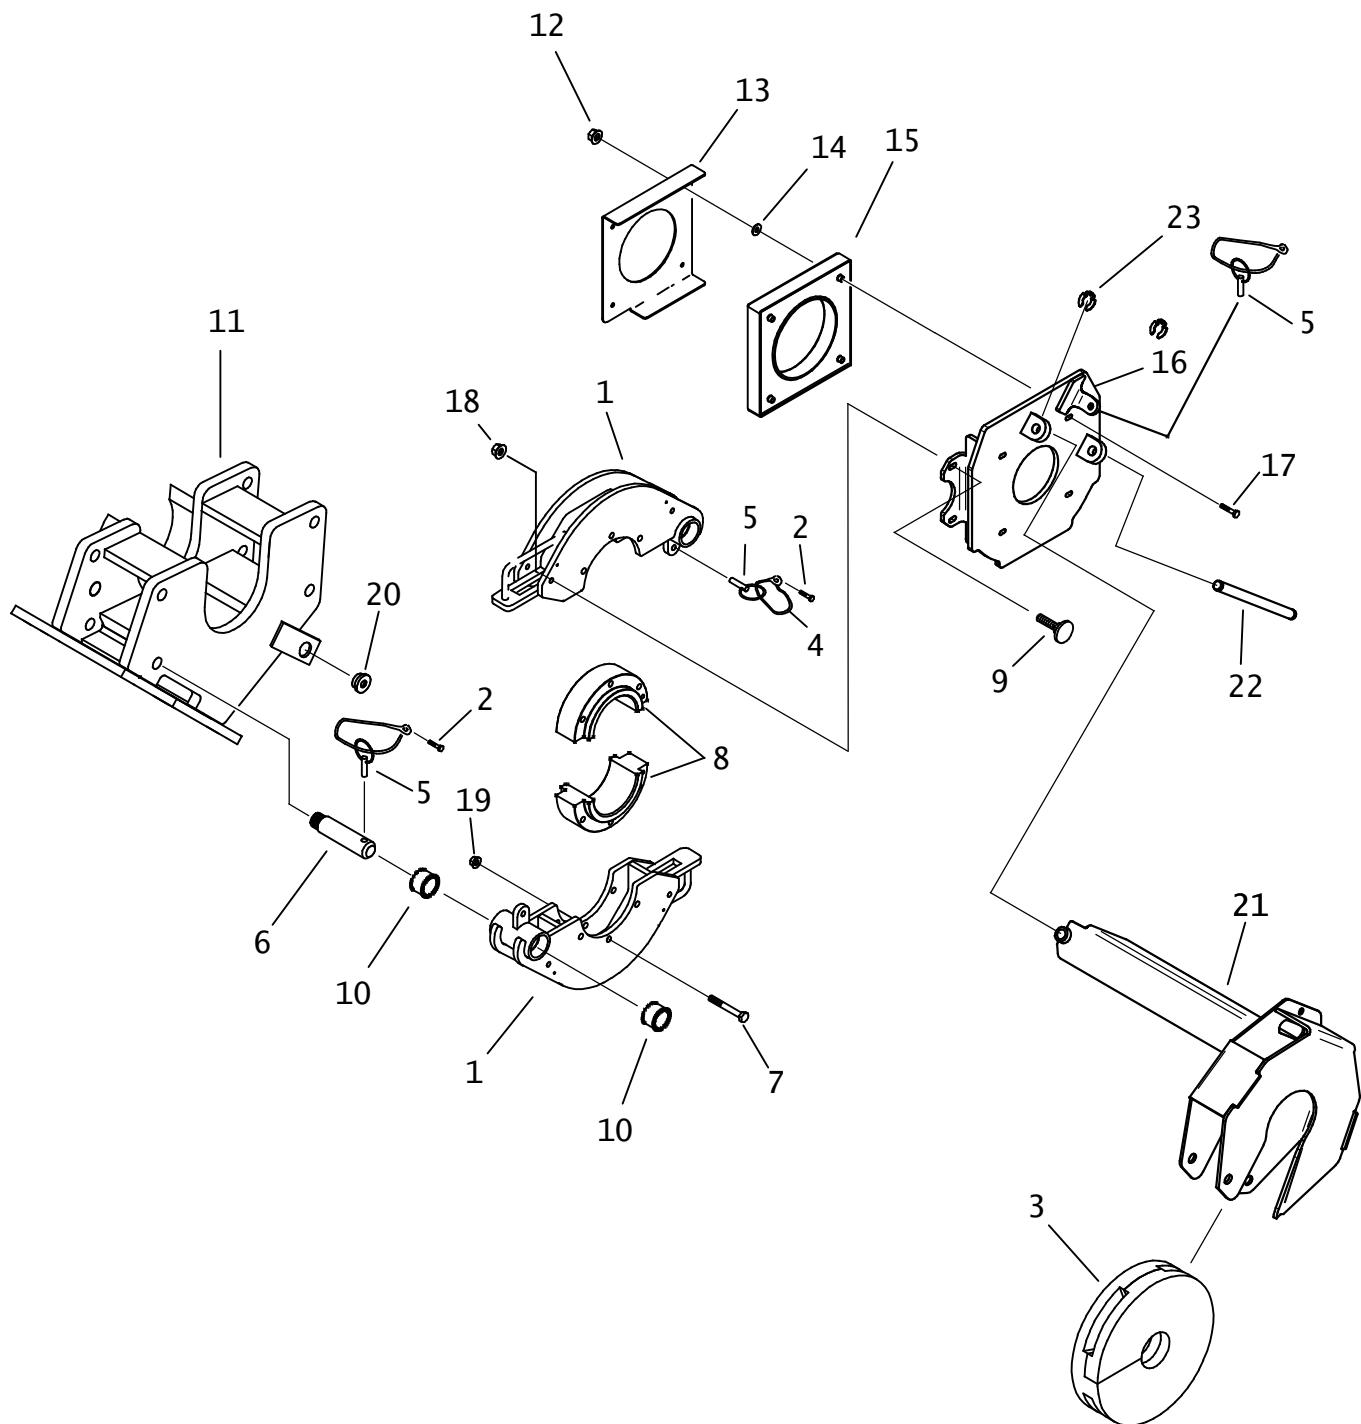

# PIPE GUIDE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	370-061	2	TOP GUIDE HALF	
2.	105-184	4	SCREW (#10-24 X .75", SELF-TAP)	
3.	157-196	1	ROD WIPER	
4.	110-710	4	LANYARD (3/64" X 6")	
5.	110-228	5	LYNCH PIN (7/16" X 2")	
6.	370-075	2	GUIDE PIN	
7.	106-584	6	SCREW (M12-1.75 X 100MM)	
8.	370-440	1	SPLIT GUIDE	
9.	107-566	4	CARRIAGE BOLT (3/8-NC X 1.50")	
10.	125-760	4	COMPOSITION BUSHING (1.5")	
11.	370-276	-	STATIONARY CLAMP	
12.	105-003	4	FLG LOCKNUT (5/16-NC)	
13.	306-995	1	BACK COVER PLATE	
14.	116-283	4	WASHER (.531", RUBBER)	
15.	211-084	1	CURRENT TRANSFORMER	
16.	300-9812	-	STRIKE BOX MOUNT	
17.	107-311	4	CARRIAGE BOLT (5/16-NC X 3")	
18.	105-834	4	FLG LOCKNUT (3/8-NC)	
19.	106-354	6	FLANGE NUT (M12-1.75)	
20.	116-203	1	GROMMET (9/16")	
21.	314-732	1	WIPER MOUNT	
22.	178-863	1	PIVOT PIN	
23.	115-503	2	KLIP RING	

NOT SHOWN:


211-042 VOLTAGE LIMITER CABLE  
214-542 CURRENT COIL CABLE

FOOTNOTES:

NOTE:

**FRONT WRENCHES**

BEGINS WITH S/N CMWJT100LB0000037, CMWAT100LA0000005

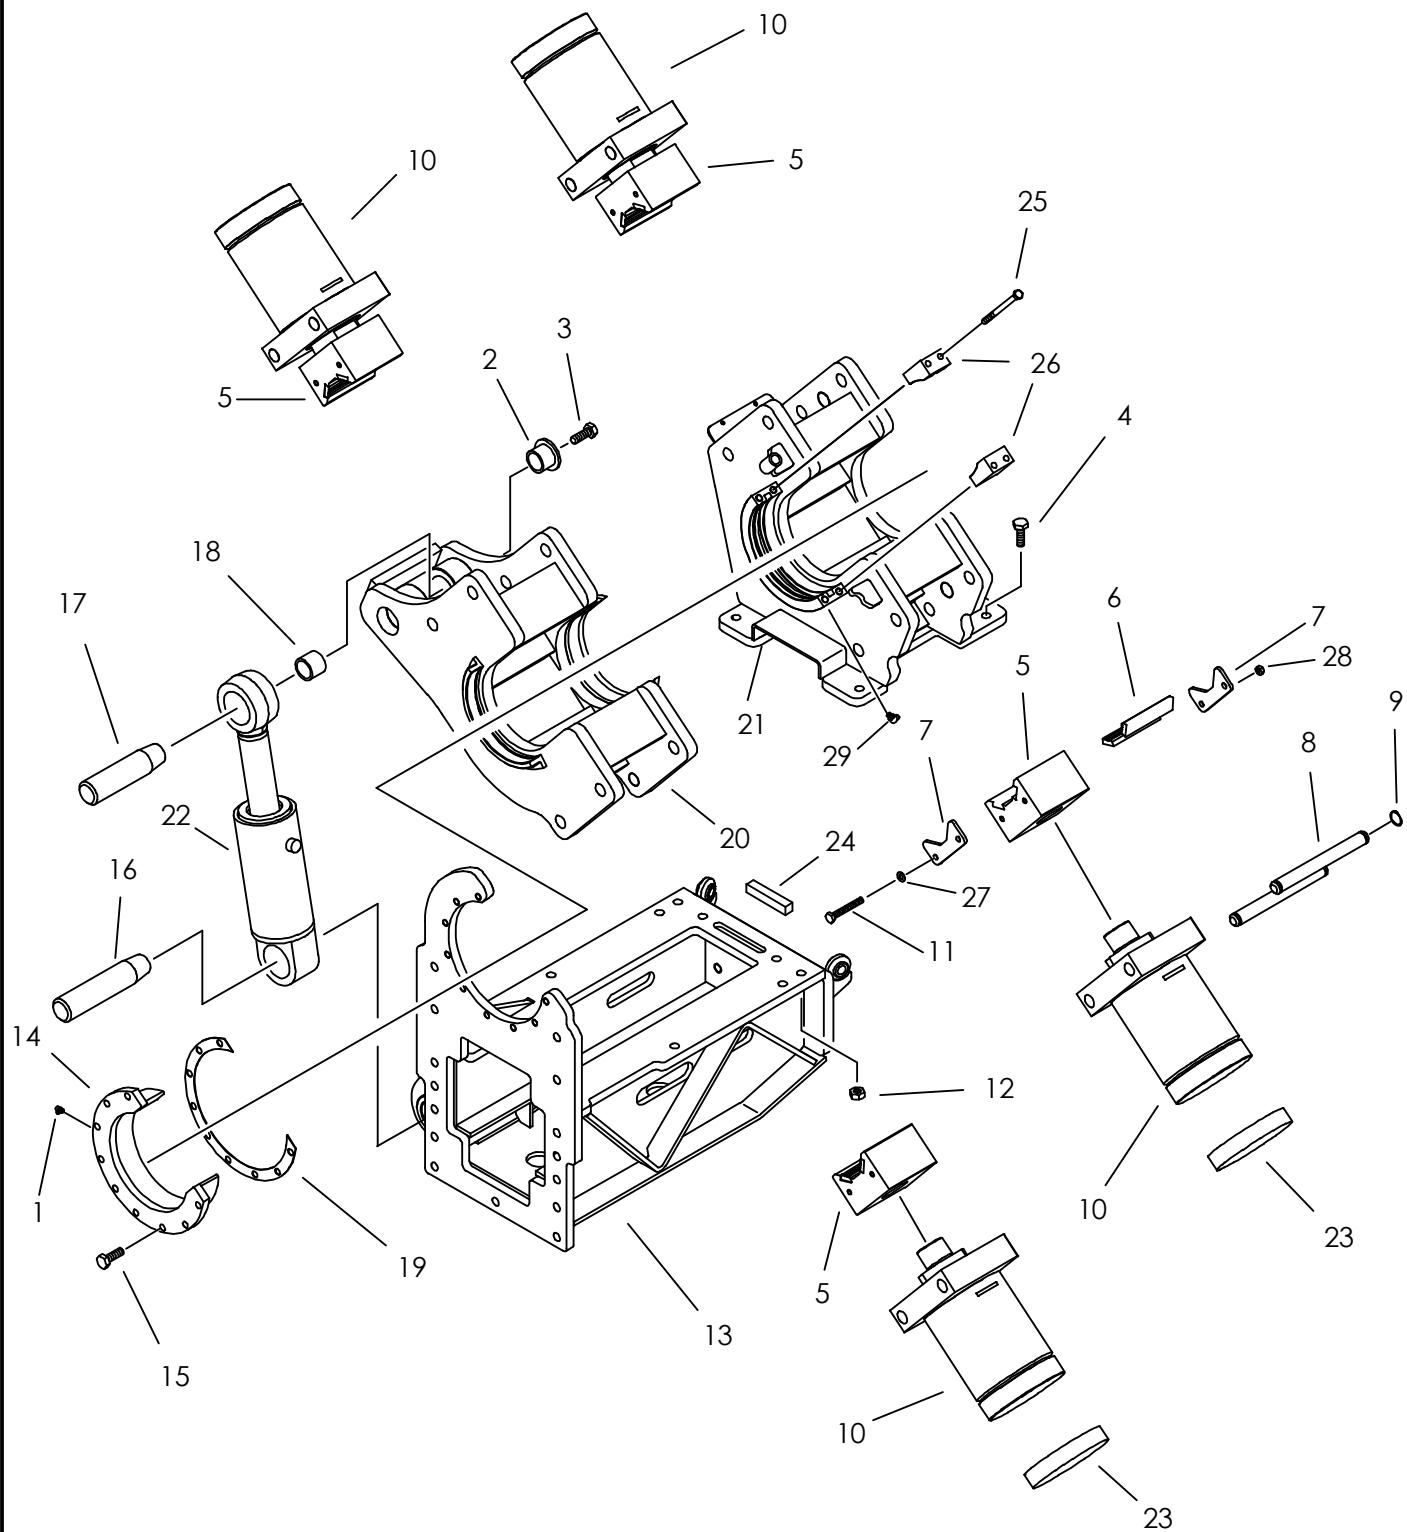

# FRONT WRENCHES

BEGINS WITH S/N CMWJT100LB0000037, CMWAT100LA0000005

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	115-003	1	ZERK (1/4-NF, STR)	
2.	184-031	2	TAPERED INSERT (2.25")	
3.	106-345	2	SCREW (M20-2.50 X 50MM)	
4.	106-666	8	SCREW (M16-2.0 X 65MM, 10.9)	USE LOCTITE 680, TORQUE TO 200 FT-LBS
5.	349-958	-	JAW BLOCK	SEE FOOTNOTE 1
	319-910	4	JAW BLOCK	SEE FOOTNOTE 1
6.	349-884	8	GRIPPER INSERT	SEE FOOTNOTE 1
	319-856	8	GRIPPER INSERT	JT100, SEE FOOTNOTE 1
	375-0002	8	GRIPPER INSERT	AT100
7.	370-028	8	INSERT RETAINER	JT100
	301-1166	8	INSERT RETAINER (AT)	AT100
8.	349-190	8	PIN	
9.	115-499	16	KLIP RING (1.000")	
10.	151-176	4	CYL (6.00" X 4.00" X 3.00")	
11.	106-639	8	SCREW (M10-1.50 X 160MM)	SEE FOOTNOTE 2
12.	106-442	6	FLG LOCKNUT (M16-2.0 PRV TRQ)	
13.	349-675	-	FRONT FRAME	
	314-557	-	FRONT FRAME	
	300-5342	-	FRONT FRAME	
14.	370-135	1	RETAINING RING	
15.	106-333	9	SCREW (M12-1.75 X 40MM, 8.8)	
16.	179-183	1	TAPERED PIN (57.15MM X 195MM)	
17.	179-016	1	TAPERED PIN (57.15MM X 215MM)	
18.	125-781	2	COMPOSITION BUSHING (2.259")	
19.	349-192	AR	SHIM (5.03 ID, 12.12 OD)	
20.	370-275	1	ROTATION CLAMP	
21.	370-276	1	STATIONARY CLAMP	
22.	151-158	1	CYL (4" X 2.25" X 6")	
23.	116-879	2	RUBBER CUSHION	
24.	166-815	1	KEY (3/4" X 4")	
25.	106-645	4	SCREW (M12-1.75 X 110MM, 10.9)	TORQUE TO 80 FT-LBS
26.	370-281	2	CAP	
27.	106-415	8	WASHER (.406")	
28.	106-758	8	LOCKNUT (M10-1.5)	
29.	115-005	1	ZERK (1/4-NF, 90)	


NOT SHOWN:

FOOTNOTES:


1. 319-856 IS INTERCHANGABLE WITH 349-958 & 319-910 JAW BLOCKS.  
349-884 MAY BE USED WITH 319-910 BY ADDING CHAMFERS TO CLEAR DOVETAIL  
RADIUS IN JAWBLOCK.
2. 349-958 REQUIRES REF. 11 106-079 QTY. 4 PER JAW BLOCK.

NOTE:

## HOSE TRACK

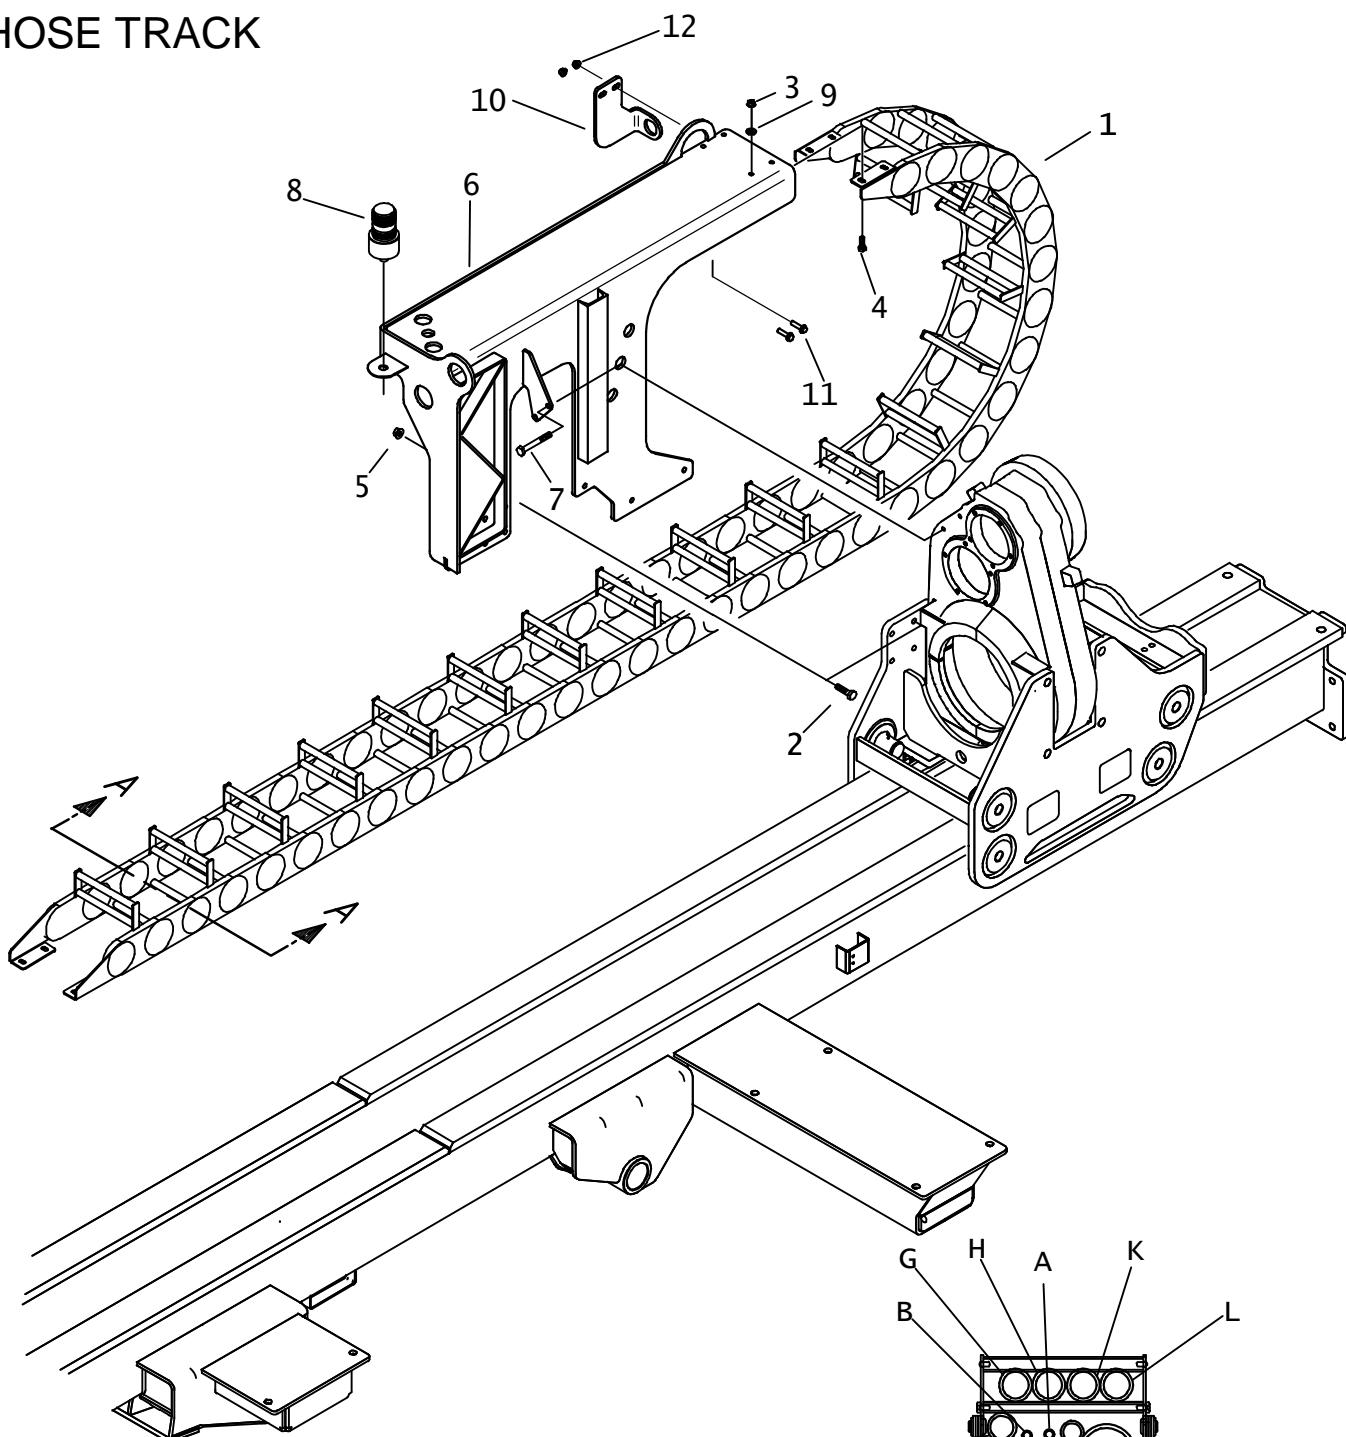

- A - CARRIAGE MANIFOLD "P"
- B - CARRIAGE MANIFOLD "T"
- C - ROTATION CASE DRAIN
- D - DRILL FLUID HOSE
- E - ROTATION
- F - ROTATION
- G - INNER ROTATION
- H - INNER ROTATION
- J - WIRE HARNESS
- K - THRUST
- L - THRUST

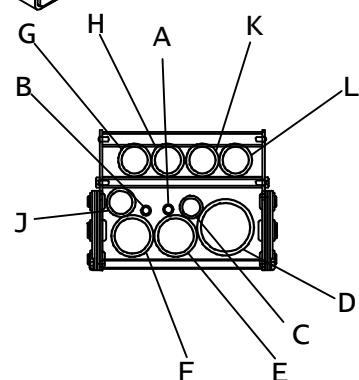

VIEW A-A

# HOSE TRACK

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	300-5385	1	HOSE CARRIER	SEE NOT SHOWN FOR SERVICE PARTS
2.	106-477	7	SCREW (M12-1.75 X 45MM, 10.9)	
3.	105-047	7	FLG LOCKNUT (3/8-NC)	
4.	105-249	4	CARRIAGE BOLT (3/8-NC X 1-1/4")	
5.	106-709	7	FLG LK NUT (M12-1.75)	
6.	300-5454	1	CABLE TRAY BRACKET	
7.	106-336	-	SCREW (M12-1.75 X 90MM)	
8.	214-697	1	STROBE LIGHT (12V, DC, GREEN)	OBSOLETE
	217-297	1	STROBE LIGHT GREEN MED PROFILE	
	217-303	-	REPLACEMENT LENS (GREEN)	
	214-991	-	REPLACEMENT FLASH TUBE	
	217-301	-	BRUSH GUARD	
	214-104	2	PACKARD MALE TERMINAL	
	157-645	2	WEATHER-PAC SEAL (2.80MM)	
	214-103	1	2-WAY MALE CONNECTOR	
9.	105-118	7	WASHER (3/8)	
10.	300-9431	1	BRACKET	AT UNITS ONLY
11.	106-383	2	FLG LK SCREW (M10-1.50 X 40MM)	AT UNITS ONLY
12.	106-387	2	FLG LOCKNUT (M10-1.50)	AT UNITS ONLY

## NOT SHOWN:

190-1677


MOUNTING BRACKET KIT

SERVICE PART KIT FOR 300-5385 HOSE CARRIER

## FOOTNOTES:

## NOTE:

## HOSE TRACK REPAIR SECTION

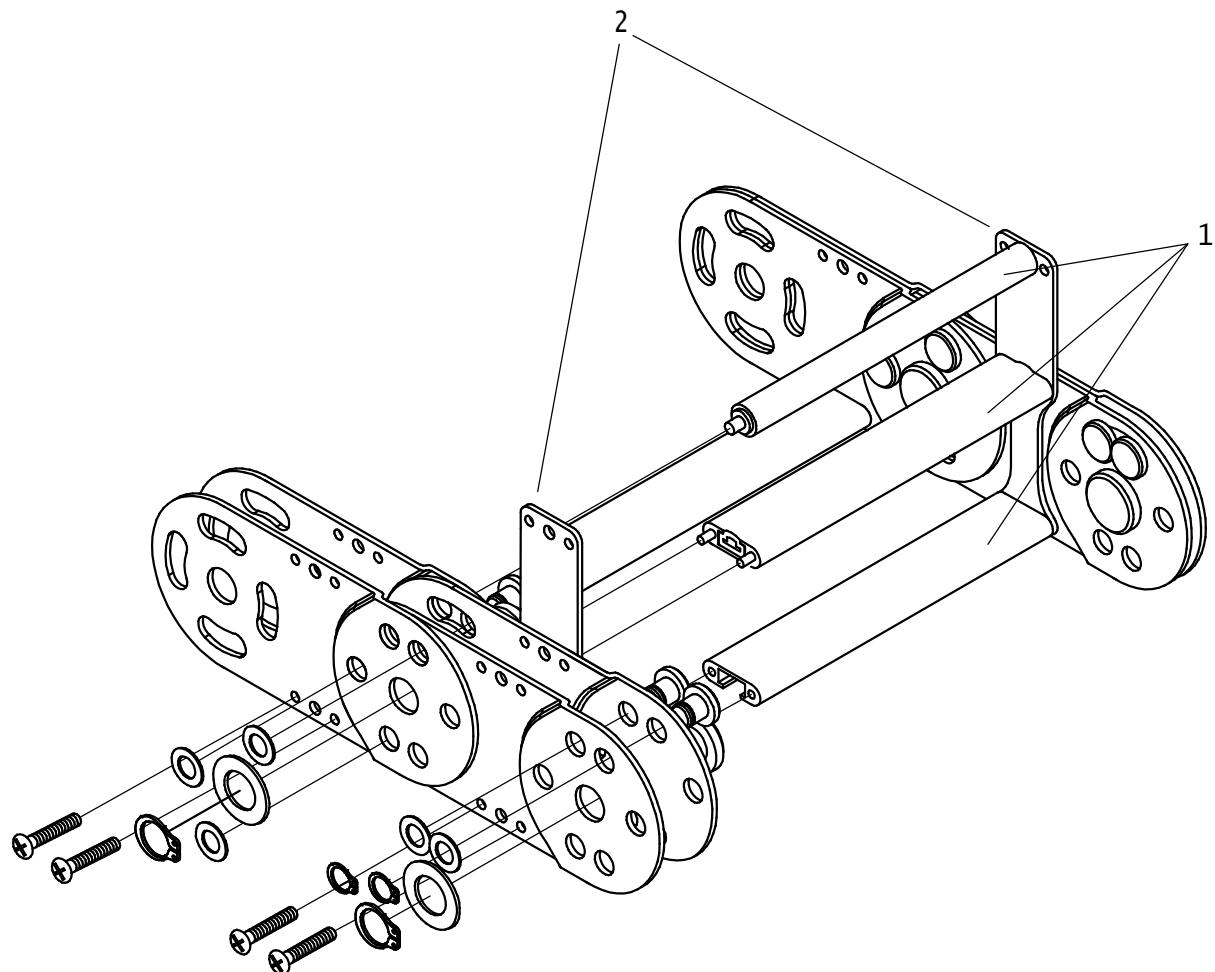

## HOSE TRACK REPAIR SECTION

REF	PART			REMARKS
	117-1023	1	4 LINK REPAIR SECTION	
1.	191-204	-	BAR KIT	SCREWS INCLUDED
2.	191-205	-	WINDOW EXTENDER KIT	SCREWS INCLUDED

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0227645

# CARRIAGE

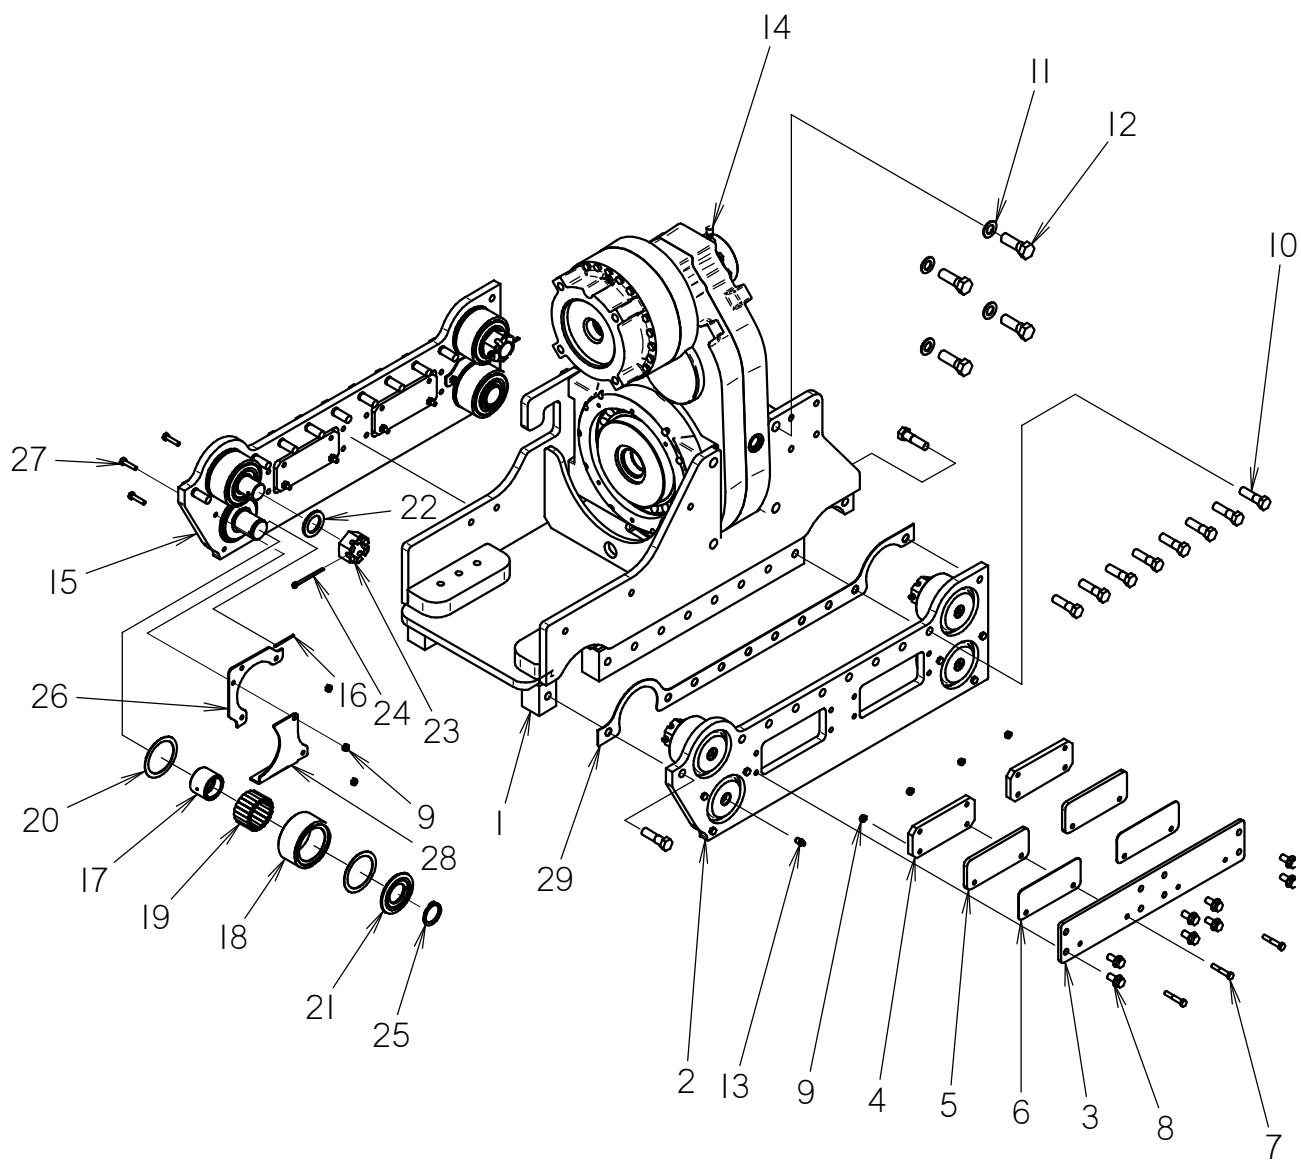

# CARRIAGE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-5430	1	CARRIAGE	
2	300-5448	1	RIGHT SIDE	
3	300-5449	2	MOUNT PLATE	
4	300-5455	4	CENTERING PAD	
5	300-5456	4	PLATE	
6	300-5457	4	SHIM	
7	I06-329	7	SCREW (M8-1.25 X 50MM)	
8	I06-806	16	FLG LK SCREW (M12-1.75 X 25MM)	
9	I07-096	20	LOCKNUT (M8-1.25, NLK)	
I0	I06-074	20	SCREW (M16-2.00 X 60MM)	TORQUE TO 140 FT LBS USE LOCTITE 242 OR EQUIVALENT
I1	I06-949	8	WASHER (3/4", HARDENED)	
I2	I06-075	8	SCREW (M20-2.50 X 60MM, I0.9)	TORQUE TO 400 FT LBS USE LOCTITE 277 OR EQUIVALENT
I3	I15-001	8	ZERK (02N)	
I4	I60-I171	1	JT ROTATIONAL GEARBOX	
I5	300-6133	1	LEFT SIDE	
I6	I05-1329	8	DOWEL PIN (4 mm x 55 mm)	
I7	I25-246	6	NEEDLE RACE (I.750")	USE LOCTITE 680 OR EQUIVALENT
I8	349-551	8	ROLLER SHELL	
I9	I26-155	8	NEEDLE BEARING	
I20	I10-926	16	THRUST WASHER	
I21	349-552	8	RETAINER	
I22	I06-422	4	WASHER	
I23	I06-067	4	CASTLE NUT (I-I/2-NF)	
I24	I05-514	4	COTTER PIN (I.250 X 3.000)	
I25	I15-060	4	EXTERNAL SNAP RING (I.750")	
I26	362-1367	4	WARE PAD	
I27	I06-267	12	SCREW (M8-1.25 X 35MM)	
I28	300-9159	1	AT SWITCH BRACKET	AT UNITS ONLY
I29	300-5807	1	SHIM	AS REQUIRED


NOT SHOWN:

FOOTNOTES:

NOTE:

# CARRIAGE SIGHT TUBE/ OIL PUMP

BEGINS WITH S/N CMWJT100VA0000034/ CMWAT100LA0000005

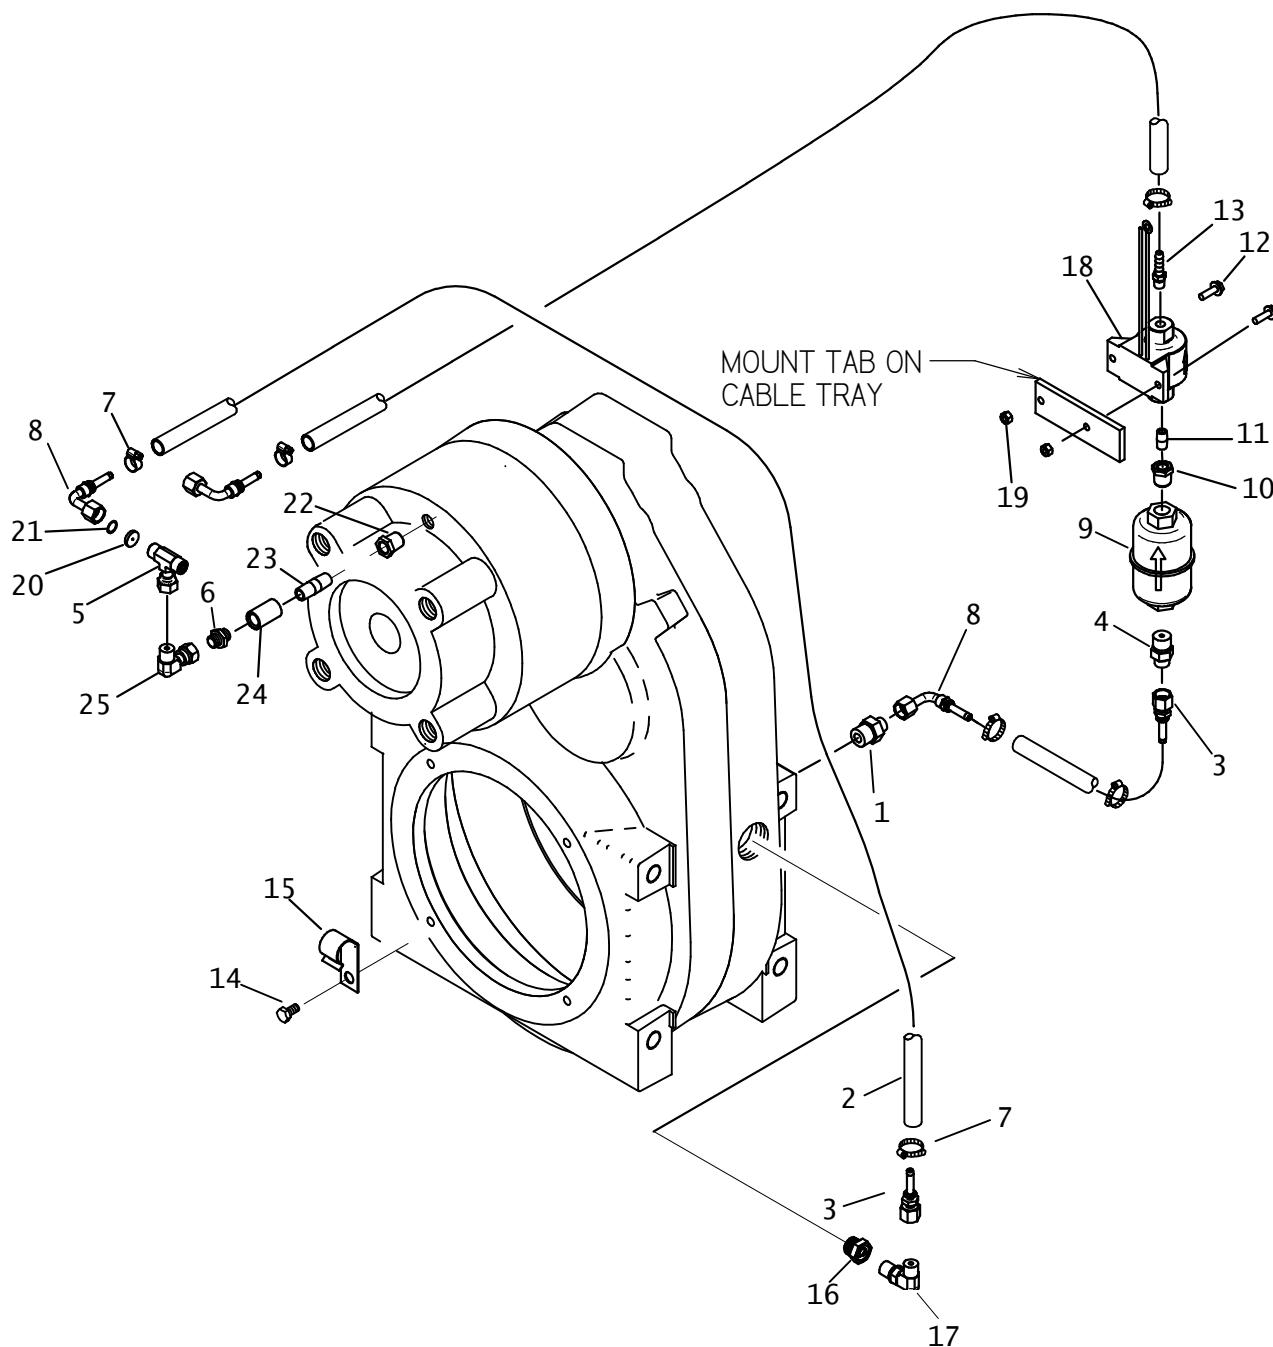

# CARRIAGE SIGHT TUBE/ OIL PUMP

BEGINS WITH S/N CMWJT100VA0000034/ CMWAT100LA0000005

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-261	1	CONNECTOR (040-08S)	
2.	117-902	AR	BULK TUBING (1/4, SOLD PER 1')	USE 1 @ 31", 1 @ 24", 1 @ 12"
3.	514-427	2	S/O COUPLER (040F-04H)	
4.	514-005	1	CONNECTOR (040-06N)	
5.	154-379	1	UN BR TEE (040FX-040-040)	
6.	154-339	1	CONNECTOR (04N-040)	
7.	110-249	6	WORM CLAMP (1/4" TO 5/8")	
8.	152-113	4	S/O COUPLER (040F-04H90M)	
9.	194-429	1	IN-LINE STRAINER	
10.	115-251	1	REDUCER (06N-02NF)	
11.	115-180	1	ALL THREAD (1/8-NPT)	
12.	106-161	2	FLG SCREW (M6-1.00 X 20MM)	
13.	155-107	1	COUPLER (1/8NPTX1/4OD,STR)	
14.	107-519	8	SCREW (M8-1.25 X 12MM)	USE LOCTITE 277 OR EQUIVALENT; JT ONLY
15.	110-492	1	J-CLIP (.343)	JT ONLY
16.	155-129	1	REDUCER (12S-06SF)	
17.	154-226	1	CONNECTOR (040-06S90)	
18.	195-1596	1	PUMP (ELECTRIC)	
19.	106-538	2	LOCKNUT (M6-1.00, PRV TRQ, 10.9)	
20.	150-3203	1	ORIFICE PLATE (040 X .046")	
21.	157-037	1	O-RING (011 D90)	
22.	115-106	1	REDUCER (08N-04NF)	
23.	115-166	1	NIPPLE (04N-1.5")	
24.	115-170	1	COLLAR (04NF)	
25.	154-255	1	UNION (040-040FX90)	

## NOT SHOWN:


IX 214-I03 (2 WAY MALE CONNECTOR), 2X 157-654 EXCLUDER SEAL (2.20"), 2X 214-I04 PACKARD MALE TERMINAL

## FOOTNOTES:

## NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## SPINDLE BRAKE

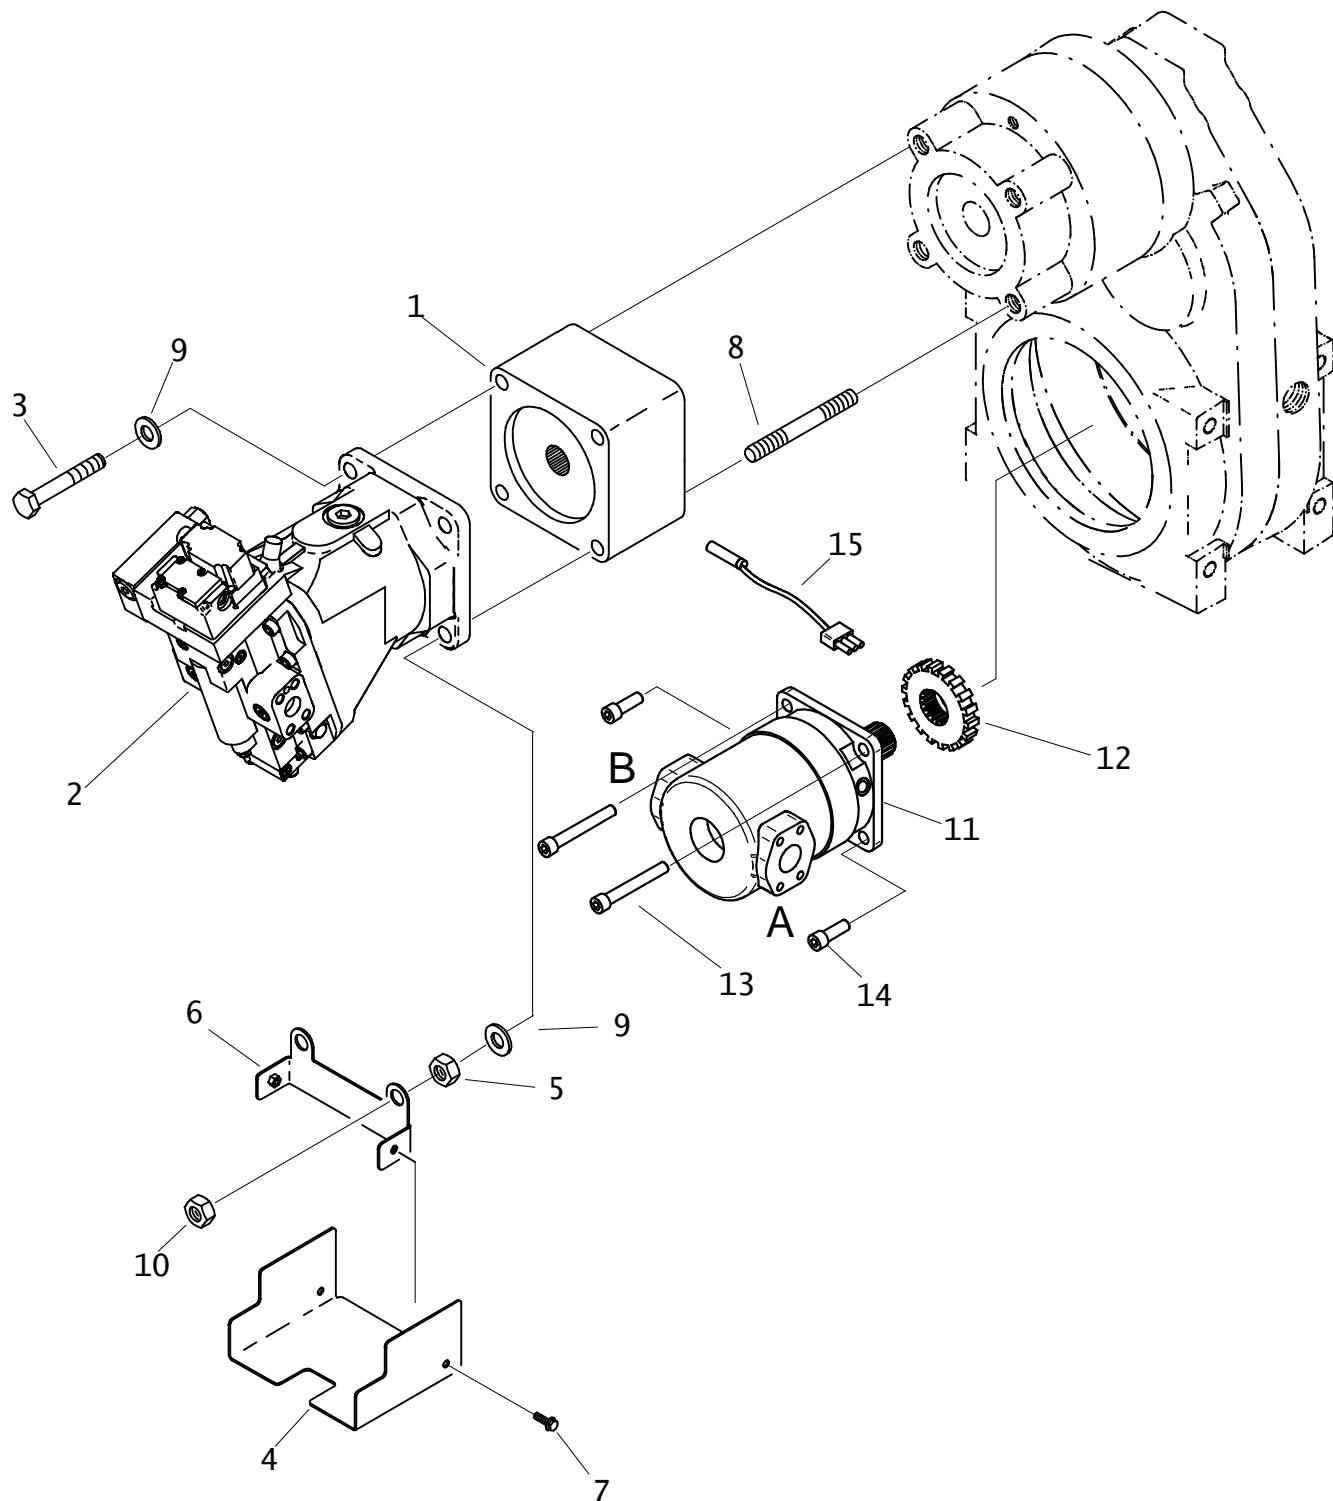

## SPINDLE BRAKE

REF	PART		REMARKS	
NO.	NUMBER	QTY	DESCRIPTION	
1.	160-458	1	MODULAR BRAKE	
	191-123		O-RING KIT	
	500-1578		LIP SEAL	
	191-124		STACK SERVICE KIT	
	191-125		GASKET KIT	
2.	149-397	-	HYD MOTOR (PISTON)	
3.	105-464	2	BOLT (3/4-NC X 7", GD8)	USE LOCTITE 277 OR EQUIVALENT
4.	307-832	1	FORMED PLATE	
5.	105-953	2	LOCKNUT (3/4-NC)	
6.	307-833	1	BRACKET	
7.	106-162	2	FLG SCREW (M8-1.25 X 20MM)	
8.	107-458	2	TIE BOLT	USE LOCTITE 277 OR EQUIVALENT
9.	106-949	4	WASHER (3/4", HARDENED)	
10.	105-310	2	JAM NUT (3/4-NC)	
11.	153-612	1	HYDRAULIC MOTOR	AT ONLY
12.	160-432	1	SPEED SENSOR RING	AT ONLY
13.	105-1351	2	SCREW (M12-1.75 X 120 SOC 12.9 ZP)	AT ONLY
14.	106-797	2	SCREW (M12-1.75 X 35mm, SOC	AT ONLY
15.	215-1472	1	PROXIMITY SWITCH 12MM WP	AT ONLY - REFER TO F/N 1


NOT SHOWN:

FOOTNOTES:

1. PROXIMITY SWITCH 215-1472 SUPERCEDES PROXIMITY SWITCH 214-913.

NOTE:

## DRIVE GEARBOX - ROTATION

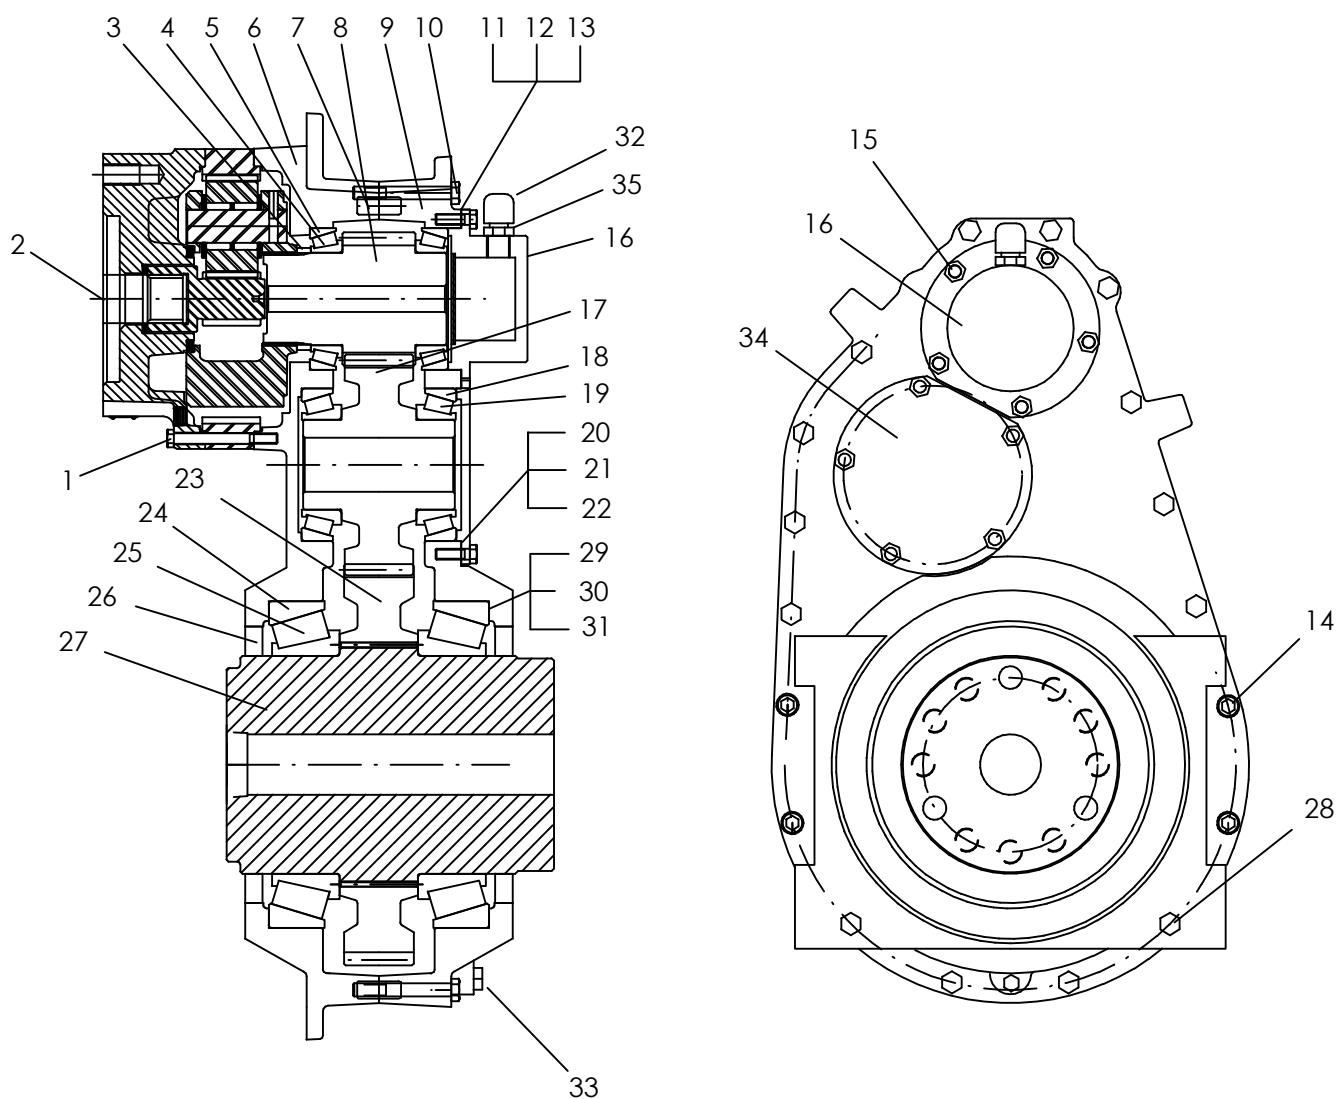

# DRIVE GEARBOX - ROTATION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	160-1171		DRIVE GEARBOX - ROTATION	
1.	105-258	20	BOLT (3/8-NC X 3-3/4")	
2.	166-141	1	PLANETARY GEARBOX - ROTATION	
3.	349-396	1	SPACER	
4.	126-075	2	TAPERED BEARING (3.346")	
5.	126-076	2	TAPERED RACE (5.118")	
6.	349-408	1	HOUSING	
7.	500-818	5	DOWEL PIN (16mm X 40mm)	
8.	168-033	1	INPUT PINION	
9.	349-409	1	COVER	
10.	106-336	13	SCREW (M12-1.75 X 90mm)	
11.	165-859	AR	SHIM (.050mm, RED)	
12.	165-860	AR	SHIM (.076mm, GREEN)	
13.	165-861	AR	SHIM (.191mm, TRANSPARENT WHT)	
14.	106-117	4	SCREW (M12-1.75 X 80mm)	
15.	105-245	10	BOLT (M10-1.50 X 25mm)	
16.	350-392	1	UPPER CAP	
17.	168-032	1	INTERMEDIATE GEAR	
18.	126-157	2	TAPERED RACE (130MM)	
19.	126-156	2	TAPERED BEARING (80MM")	
20.	165-862	AR	SHIM (.050mm)	
21.	165-863	AR	SHIM (.076mm)	
22.	165-864	AR	SHIM (.191mm)	
23.	168-031	1	OUTPUT GEAR	
24.	126-159	2	BEARING RACE (300MM)	
25.	126-158	2	BEARING (200MM)	
26.	157-706	2	SEAL (7.875")	
27.	160-1165	1	OUTPUT SHAFT	
28.	106-855	2	SCREW (M12-1.75 X 140mm)	
29.	165-865	AR	SHIM (.051mm)	
30.	165-866	AR	SHIM (.178mm)	
31.	165-867	AR	SHIM (.508mm)	
32.	159-003	1	AIR VENT (02N)	
33.	155-074	1	PLUG (08S, SOC, FM)	
34.	349-411	1	LOWER CAP	
35.	115-133	1	REDUCER (12N-02NF)	


NOT SHOWN:

514-123 1 PICKUP TUBE (02N-02NF90-2")

FOOTNOTES:

NOTE:

## PLANETARY GEARBOX - ROTATION

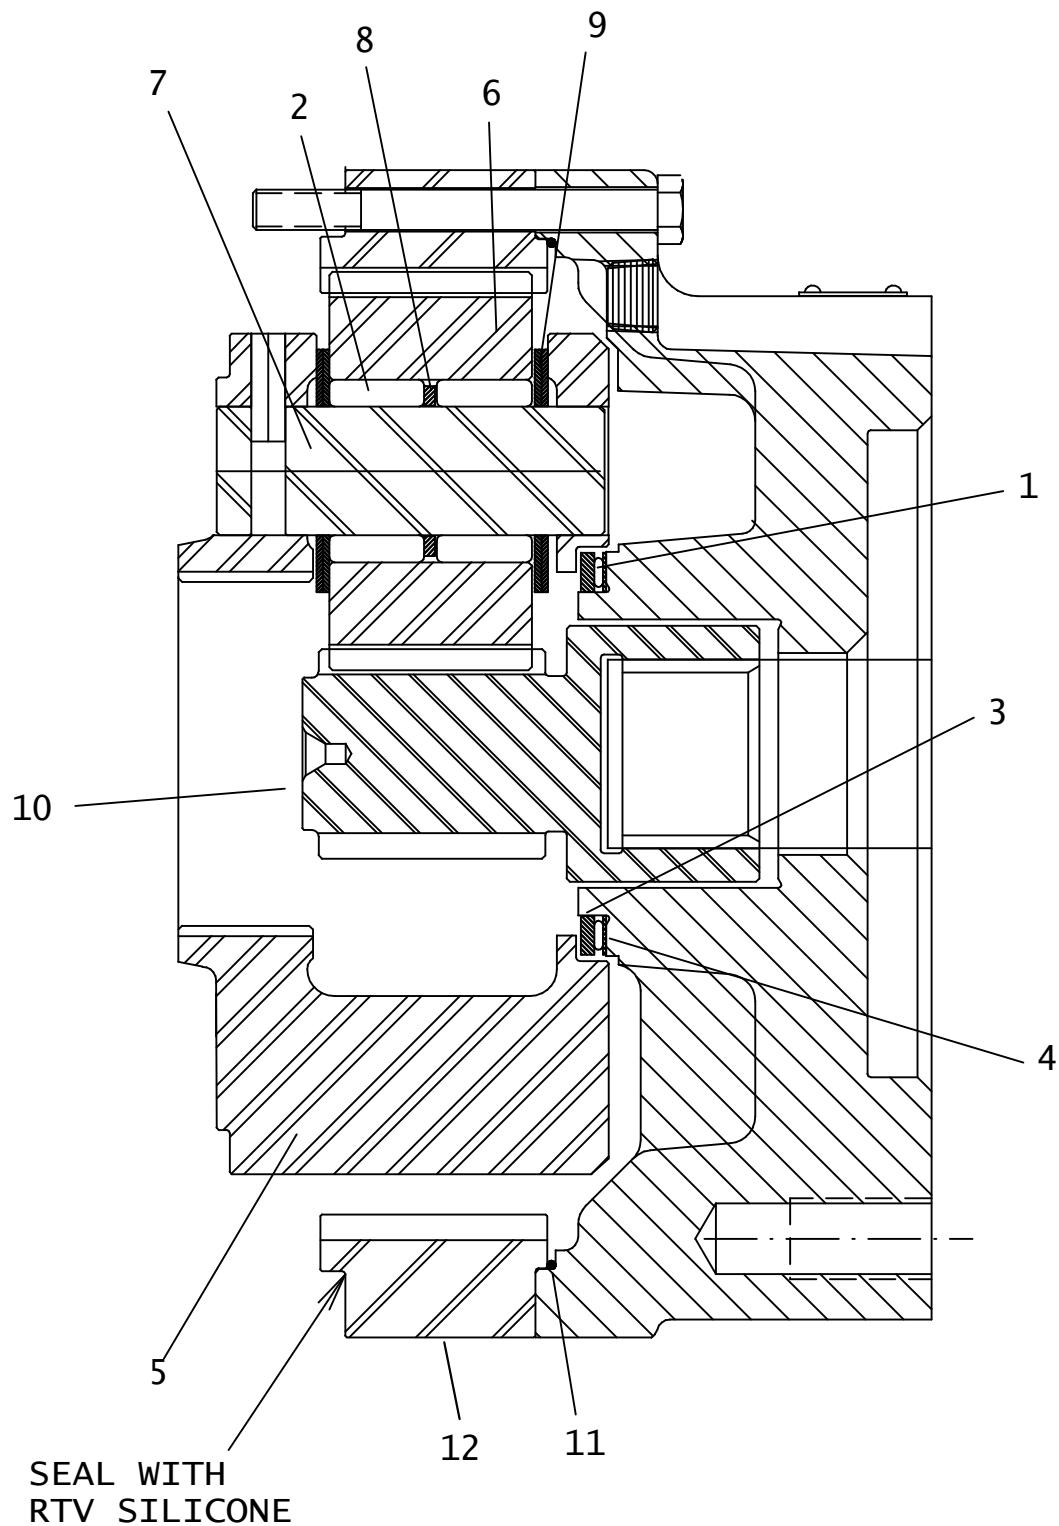

## PLANETARY GEARBOX - ROTATION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	166-141		PLANETARY GEARBOX - ROTATION	
1.	126-182	1	THRUST BEARING	
2.	126-183	108	NEEDLE BEARING	
3.	501-845	1	THRUST WASHER	
4.	501-846	1	THRUST WASHER	
5.	501-847	1	CARRIER	
6.	501-848	3	PLANET GEAR	
7.	501-850	3	PLANET SHAFT	
8.	501-851	3	THRUST WASHER	
9.	501-852	12	THRUST WASHER	
10.	501-853	1	SUN GEAR	
11.	157-203	2	O-RING	
12.	501-849	1	RING GEAR	


NOT SHOWN:

FOOTNOTES:

DRIVE ROLL PIN INTO PLANET SHAFT, THEN PRESS OUT SHAFT TO REMOVE.. REMOVE ROLL PIN FROM SHAFT ONCE THE SHAFT IS OUT.

NOTE:

## ROTATION GEARBOX (AT)

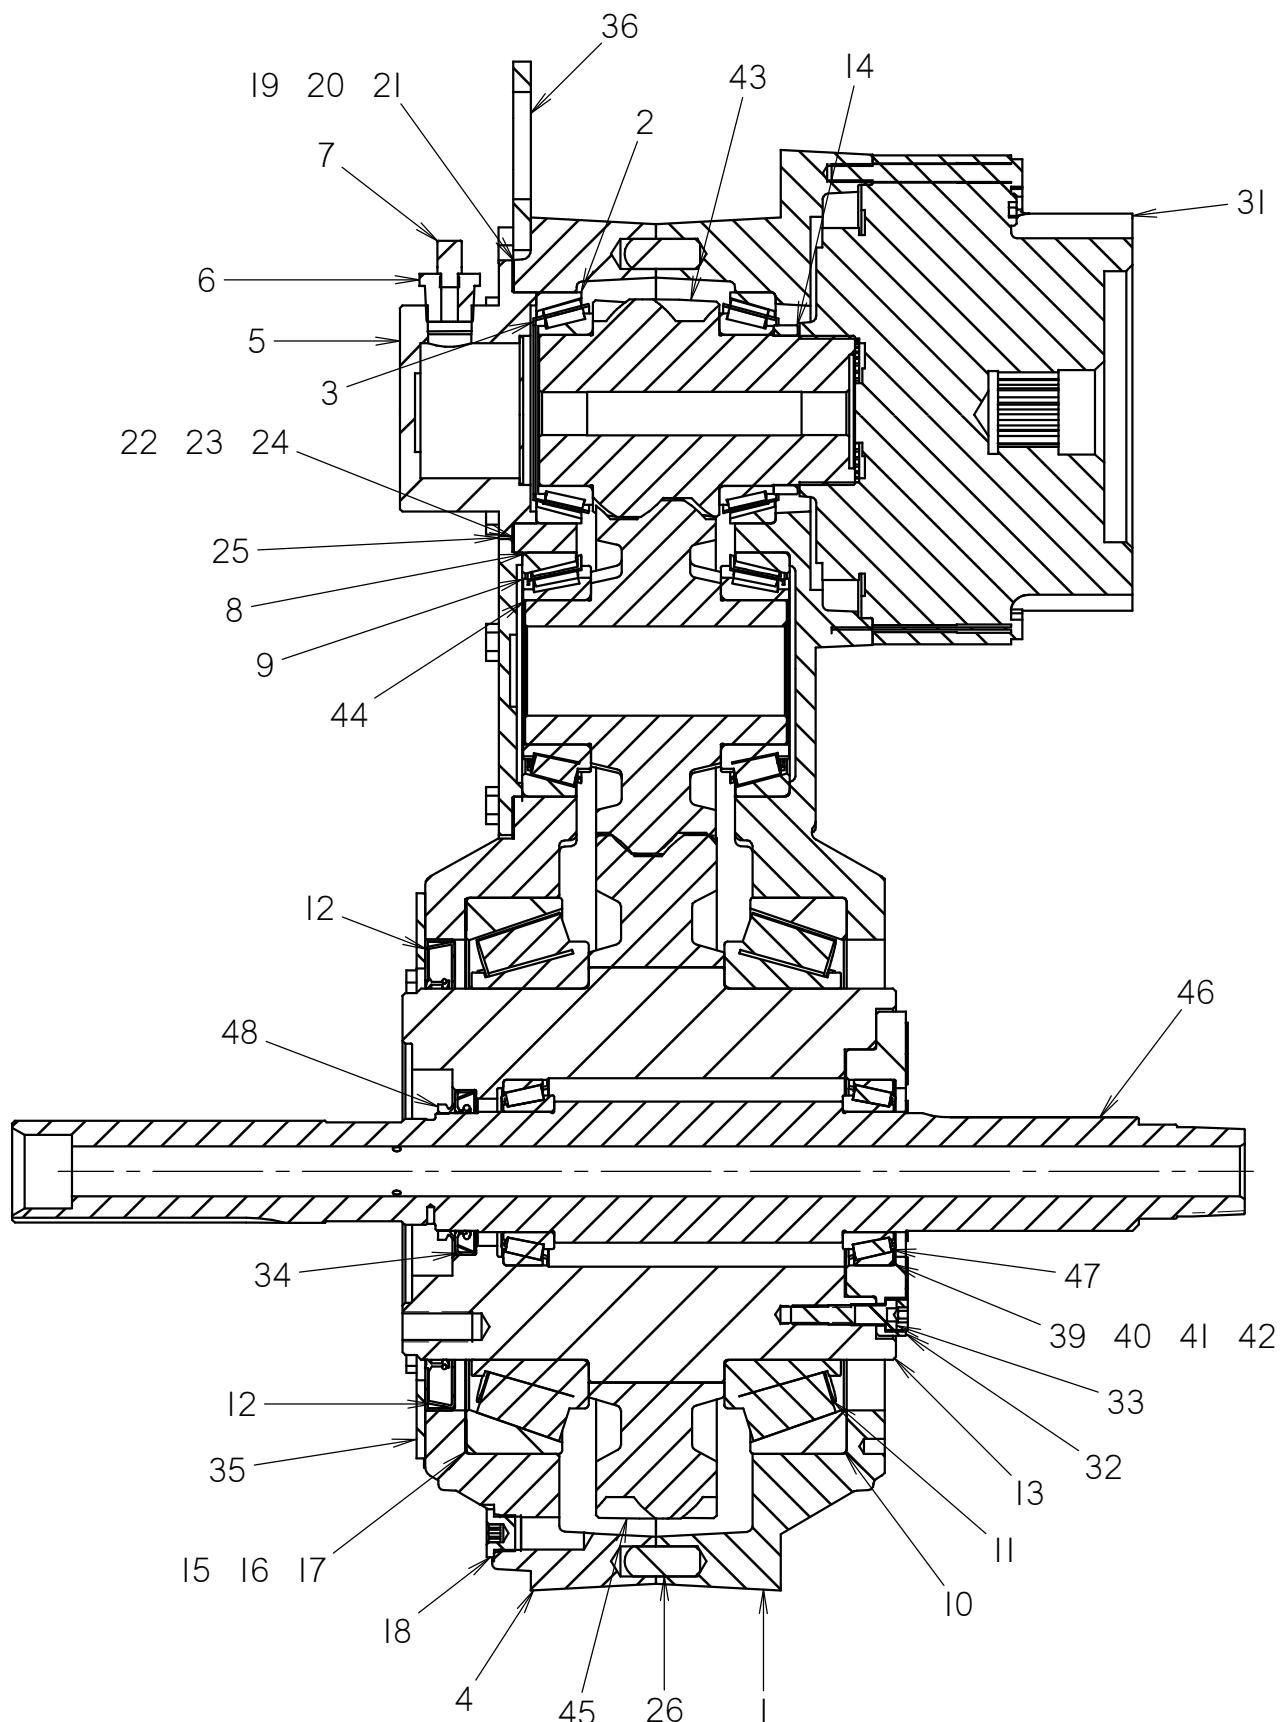

# ROTATION GEARBOX (AT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	349-408	1	MACHINED GEARBOX	
2	I26-076	2	TAPERED RACE (5.118")	
3	I26-075	2	TAPERED BEARING (3.346")	
4	349-409	1	MACHINED COVER HOUSING	
5	350-392	1	UPPER CAP ASSEMBLY	
6	I15-133	1	REDUCER (I2N-02NF)	
7	I59-003	1	AIR VENT (O2NI)	
8	I26-157	2	TAPERED RACE	
9	I26-156	2	BEARING CONE	
10	I26-159	2	TAPERED RACE (_____")	
11	I26-158	2	TAPERED BEARING (_____")	
12	I57-706	1	EXTERNAL SEAL (7.875")	
13	I60-1047	1	OUTPUT SHAFT AT	
14	349-396	1	SPACER	
15	I65-865	1	SHIM (.051MM)	
16	I65-866	1	SHIM (.178MM)	
17	I65-867	1	SHIM	
18	I55-074	1	PLUG (O8S, SOC, FM)	
19	I65-859	1	SHIM (.050mm, RED)	
20	I65-860	1	SHIM (.076mm, GREEN)	
21	I65-861	1	SHIM (.191MM, TRANSPARTEN WHT)	
22	I65-862	1	SHIM (.050mm)	
23	I65-863	1	SHIM (.076mm)	
24	I65-864	1	SHIM (.191mm)	
25	349-411	1	LOWER CAP	
26	500-818	5	DOWEL PIN (16MM X 40MM)	
27	I06-336	10	SCREW (M12-I.75 X 90MM)	
28	I06-855	2	SCREW (M12-I.75 X 140MM)	
29	I06-I17	4	SCREW (M12-I.75 X 80MM, SOC)	
30	I05-245	10	SCREW (M10-I.50 X 25MM)	
31	I66-141	1	PLNTRY GEAR BOX - ROTATION	
32	300-6165	1	BEARING CAP	
33	I06-863	1	SCREW (M10-I.5 X 16MM, SOC)	TORQUE TO 37 FT-LBS (50 N-M)
34	I55-890	1	INTERNAL SEAL	
35	310-418	1	RETAINING PLATE	
36	300-8316	1	LIFT BRACKET	
37	I07-519	4	SCREW (M8-I.25 X 12MM)	
38	I06-584	3	SCREW (M12-I.75 X 100MM)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## ROTATION GEARBOX (AT)

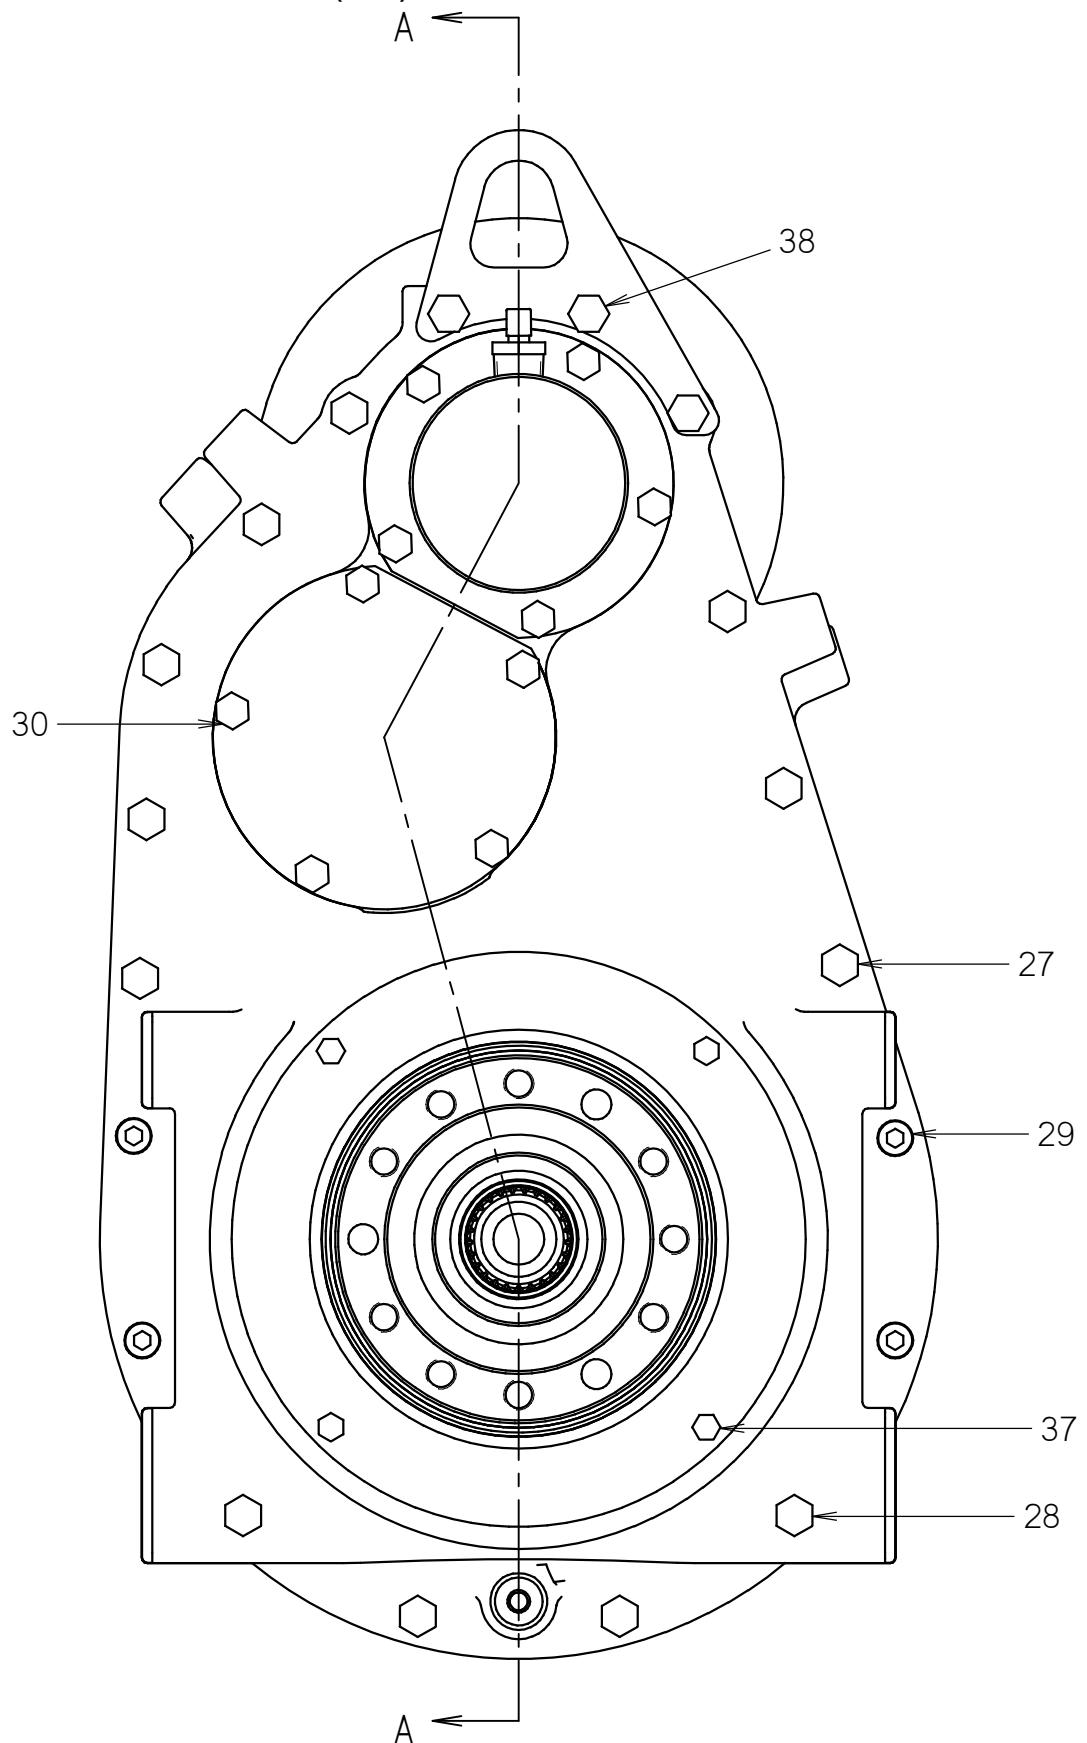

## ROTATION GEARBOX (AT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
39	I05-1359	1	SHIM (3.906" X 3.531" X .020")	
40	I05-1360	1	SHIM (3.906" X 3.531" X .007")	
41	I05-1361	1	SHIM (3.750" X 3.500" X .003")	
42	I05-1362	1	SHIM (3.906" X 3.531" X .002")	
43	I68-033	1	INPUT PINION	
44	I68-032	1	INTERMEDIATE GEAR	
45	I68-031	1	OUTPUT GEAR	
46	I60-1049	1	INNER SHAFT	
47	I25-1021	2	TAPERED BEARING (65MM)	
48	I53-614	1	SEAL, V-RING	

NOT SHOWN:

FOOTNOTES:

NOTE:

## AT INNER DRIVE GEARBOX

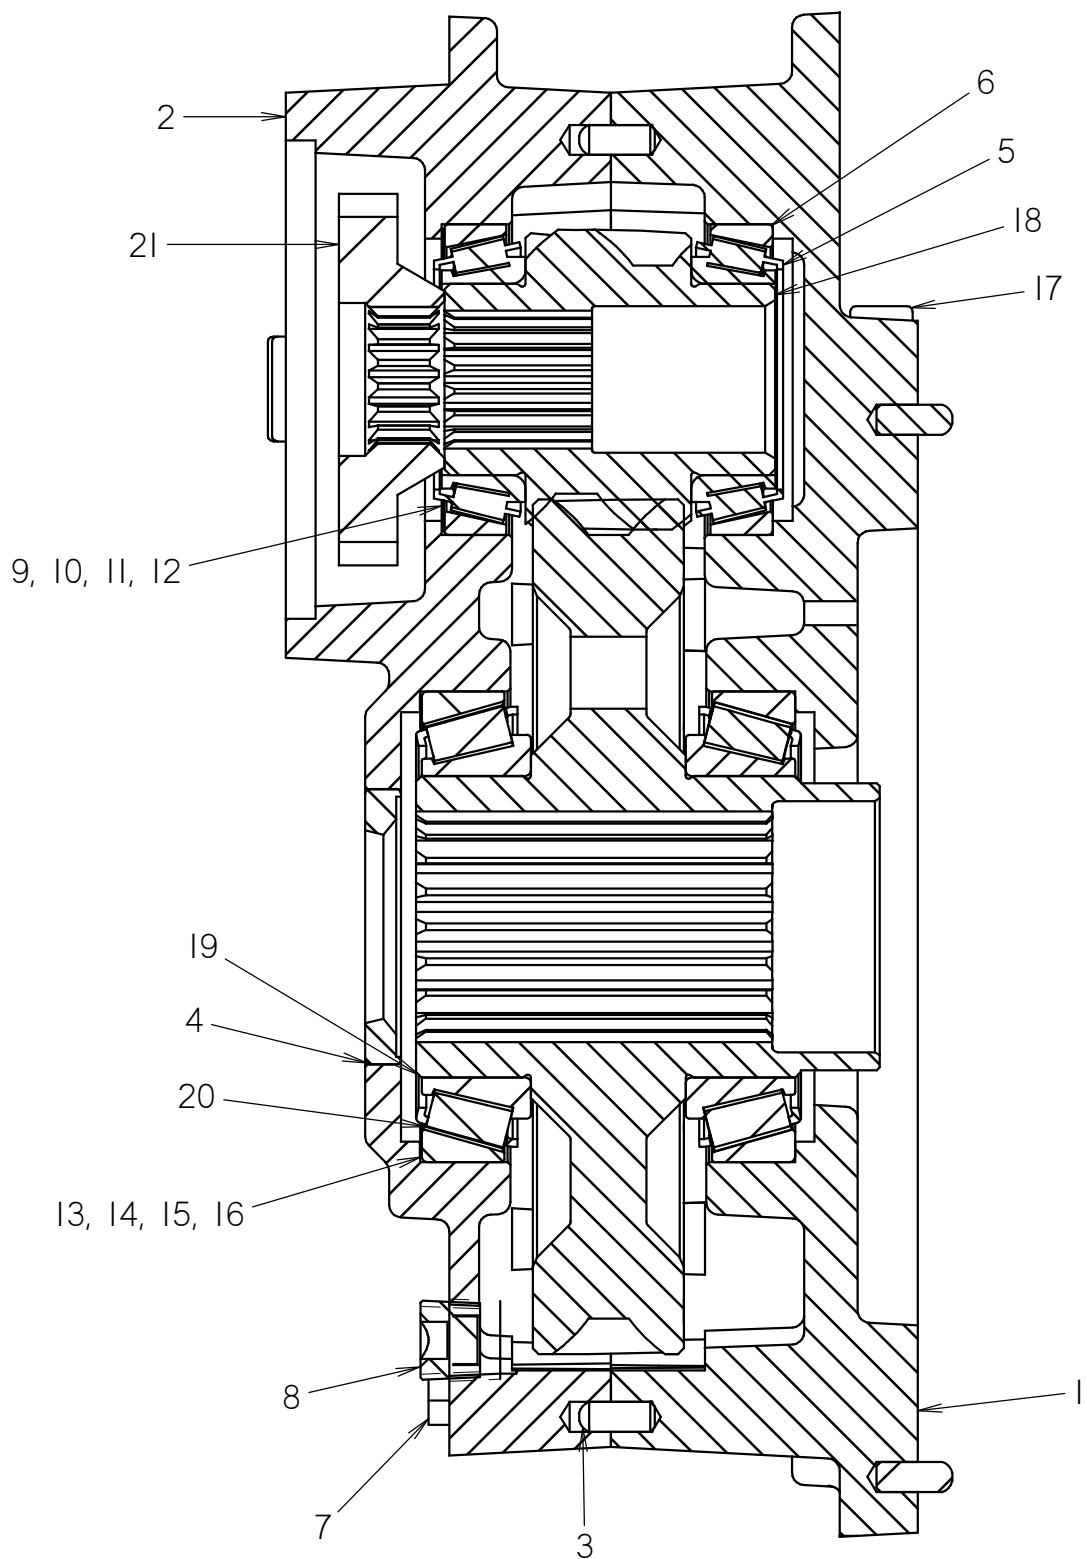

# AT INNER DRIVE GEARBOX


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-6175	1	MACHINED BASE	
2	300-6176	1	MACHINED COVER	
3	I05-618	4	DOWEL PIN (8MM X 20MM)	
4	I57-501	1	INTERNAL SEAL	
5	I26-100	2	BEARING CONE	
6	I26-099	2	TAPERED RACE (3.25")	
7	I06-570	10	SCREW (M8-1.25 X 60MM)	TORQUE TO 17 FT-LBS. (27 N-M)
8	I15-025	2	PLUG (08N, SQ FM, MAG)	
9	I65-800	1	SHIM (.002")	
10	I65-801	1	SHIM (.003")	
11	I65-802	1	SHIM (.007")	
12	I07-575	1	SHIM (.020")	
13	I05-I363	1	SHIM (4.812" X 4.531" X .020")	
14	I05-I364	1	SHIM (4.812" X 4.531" X .007")	
15	I05-I365	1	SHIM (4.812" X 4.531" X .003")	
16	I05-I366	1	SHIM (4.812" X 4.531" X .002")	
17	I95-366	1	AIR VENT (02N90)	
18	I66-402	1	INPUT PINION	
19	I60-1048	1	GEAR	
20	I25-I024	2	TAPERED BEARING (80MM)	
21	I66-432	1	(SPEED SENSOR RING)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## THRUST DRIVE

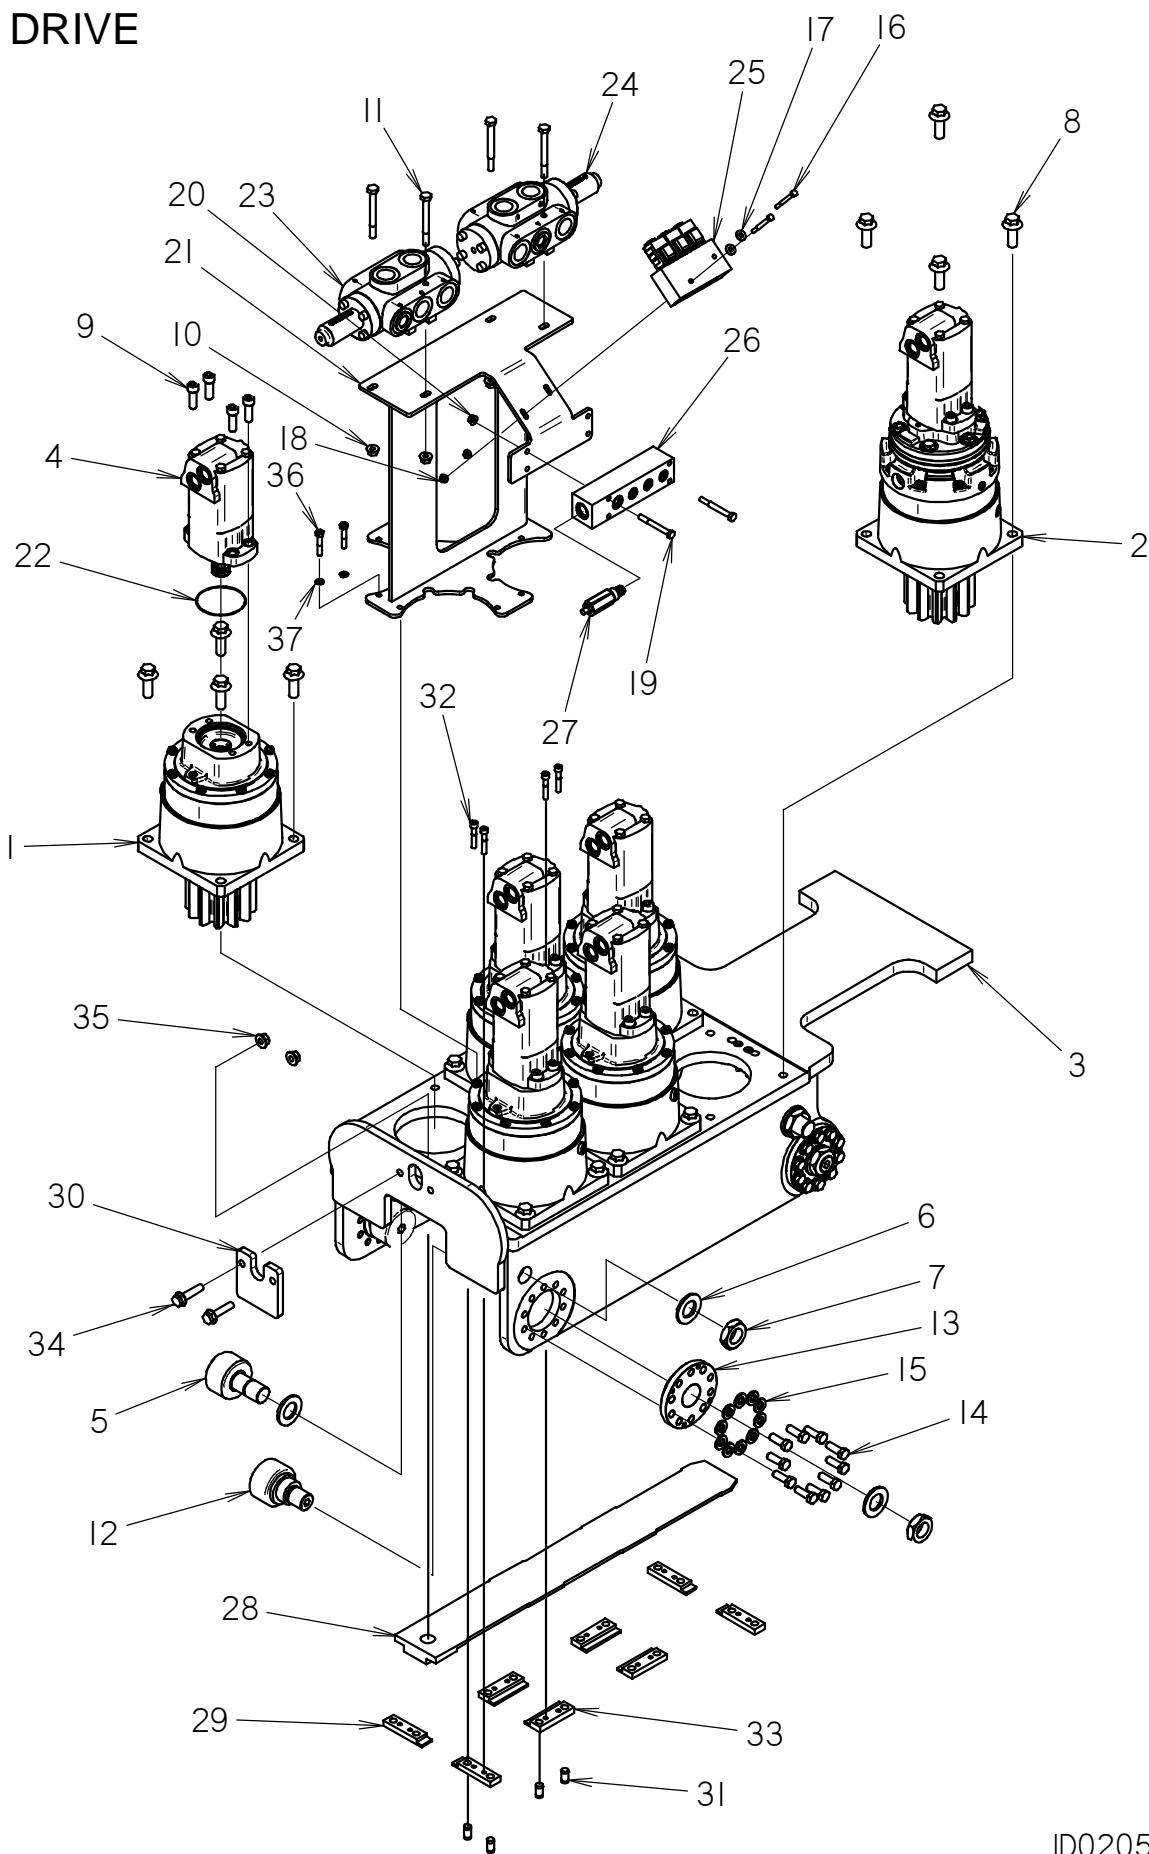

# THRUST DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I60-I030	5	THRUST DRIVE GEARBOX	
2	I60-I074	1	THRUST DRIVE GEARBOX W/BRAKE	
3	300-6134	1	THRUST DRIVE CARRIAGE	
4	I58-270	6	HYDRAULIC MOTOR	
5	I40-I092	4	CAM ROLLER	
6	I05-444	12	WASHER (1-1/4")	
7	I05-313	8	FLG NUT	TORQUE TO 165 FT/LB
8	I07-336	24	FLG SCREW M16-2.00X45MM,10.9I	TORQUE TO 250 FT/LB ; USE LOC-TITE 242
9	I06-204	24	BOLT (1/2 - NC X 1.50", SOC)	TORQUE TO 100 FT/LB ; USE LOC-TITE 242
10	I07-661	4	FLG LKNUT (M10-1.50, PRV TRQ)	
11	I06-564	4	SCREW (M10-1.50 X 100MM)	
12	I40-I093	4	CAM ROLLER	
13	300-6125	4	HUB	
14	I07-206	40	HHCS M12-1.75 X 35MM,10.9 ZP	
15	I06-397	40	WASHER (M12, HARDENED)	
16	I06-972	2	SCREW (M6-1.00 X 65MM)	
17	I05-095	2	WASHER (1/4")	
18	I06-353	2	FLG NUT (M6-1.00)	
19	I05-292	2	SCREW (M8-1.25 X 75MM)	
20	I06-386	2	FLG LOCKNUT (M8-1.25)	
21	300-7801	1	VALVE SUPPORT	
22	I57-099	6	O-RING (O42 D70)	USE RED RTV SEALANT
23	I50-I408	1	6-WAY SELECTOR	
24	I50-2076	1	VALVE SERIES PARALLEL	
25	I59-554	1	MANIFOLD (3-SPI)	SEE FOOTNOTE 2
26	I50-2667	1	RETURN MANIFOLD	
27	I50-2252	1	RELIEF VALVE	
28	362-I389	1	GUIDE BAR	
29	300-8549	4	MOUNTING BRACKET	
30	300-8559	1	MOUNTING PLATE	
31	I06-549	16	DOWEL PIN (1/2" X 1",HARDENED)	SEE FOOTNOTE 1
32	I07-894	16	SCREW (M8-1.25 X 45MM, SOC)	USE LOCTITE 680 OR EQUIVALENT
33	300-8551	4	SPACER	
34	I07-008	2	FLG LK SCREW (M12-1.75 X 50MM)	
35	I06-354	2	FLANGE NUT (M12-1.75)	
36	I06-045	8	BOLT (5/16-NC X 1-3/4")	
37	I05-091	8	LOCK WASHER (5/16")	

NOT SHOWN:

500-I269      SEAL KIT


USE WITH REF NO. 4

FOOTNOTES:

1. TAPER DOWN INTO PLATE-THEN DRIVE PLATE INTO THRUST
2. USES COIL, 214-491, AS A SERVICE PART AT QTY=3

NOTE:

## THRUST DRIVE GEARBOX

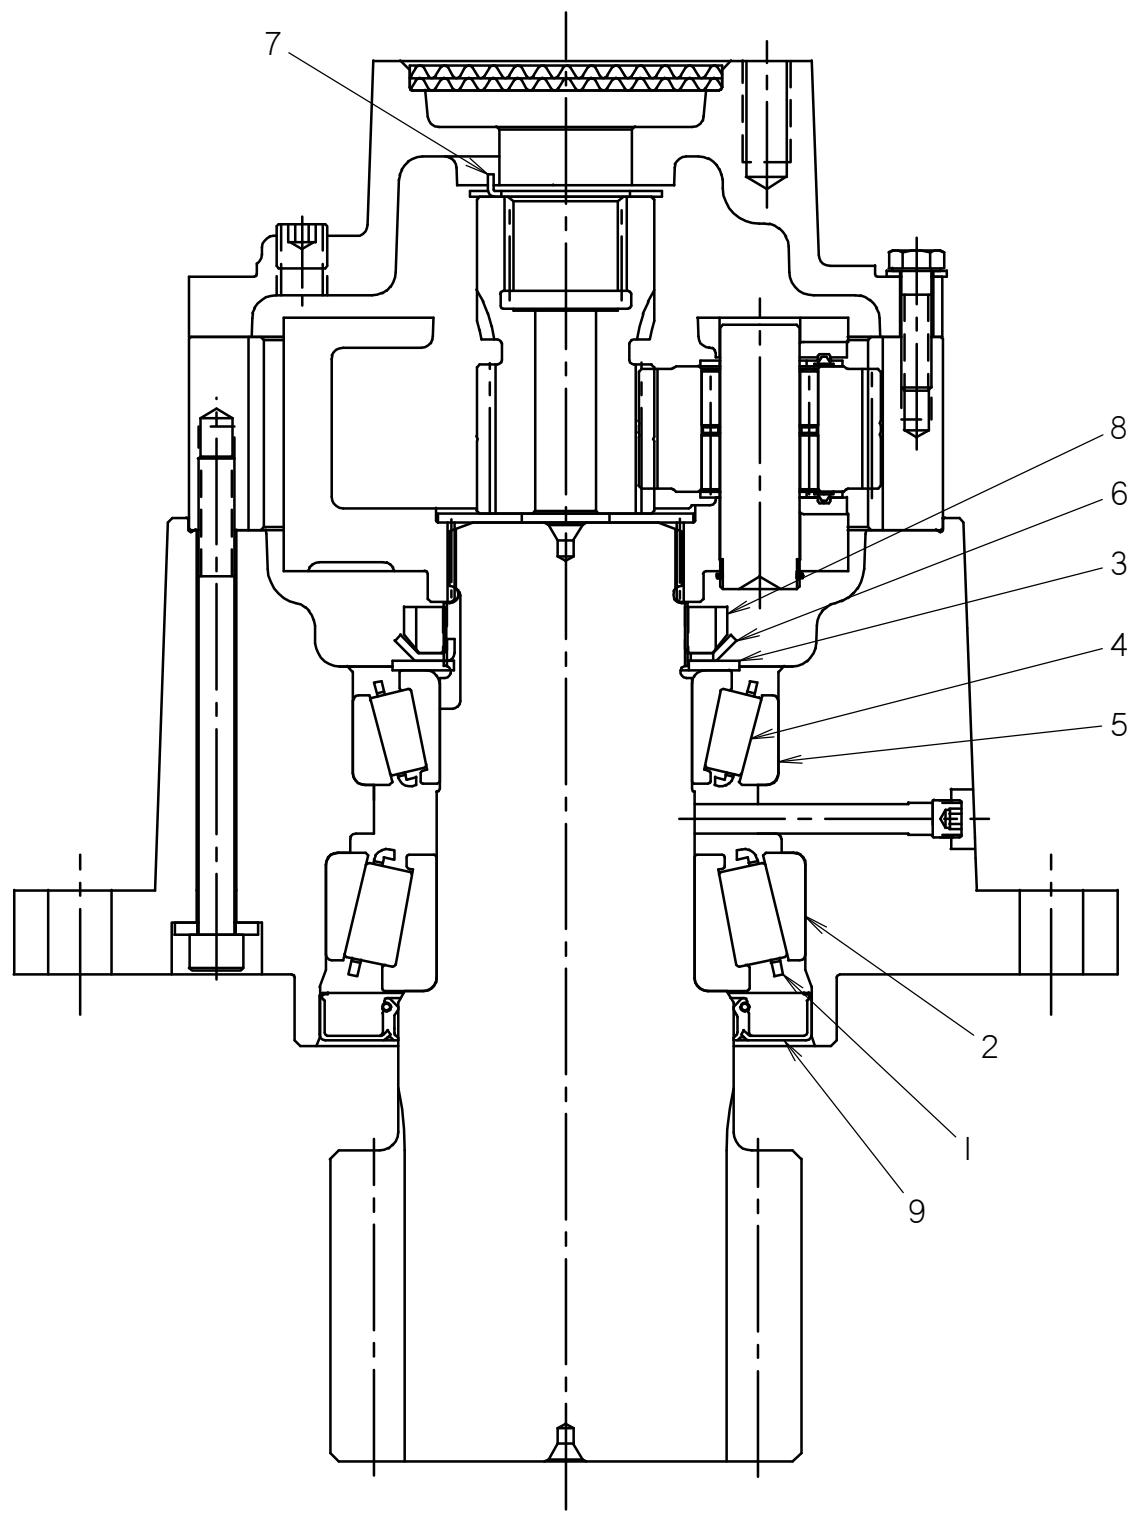

# THRUST DRIVE GEARBOX

REF	PART		DESCRIPTION	REMARKS
NO.	NUMBER	QTY		
1.	500-1662	1	BEARING-CONE-6B	
2.	500-1661	1	BEARING-CUP-6B	
3.	500-1666	1	THRUST WASHER-7"	
4.	500-1660	1	BEARING-CONE-7"	
5.	500-1659	1	BEARING-CUP-7"	
6.	500-1657	1	LOCK WASHER-7"	
7.	499-893	1	THRUST WASHER	
8.	500-1663	1	LOCK NUT-7"	
9.	157-521	1	OIL SEAL	SEE FOOTNOTE 1
	500-1674	1	OIL SEAL	SEE FOOTNOTE 2

NOT SHOWN:


500-1696	1	ASSY BRAKE-A2 SERIES; AUSCO
500-1690	1	SPINDLE/SHAFT DRIVE TOOL
500-1690	1	BEARING CONE DRIVER
500-1692	1	BEARINGLOCKNUT TOOL
500-2009	1	O-RING/GASKET KIT
500-2115	1	DISC KIT-2 ROTOR

FOOTNOTES:

1. USED ON 160-1035
2. USED ON 160-1030 & 160-1074

NOTE:

## RACK AND BUMPERS

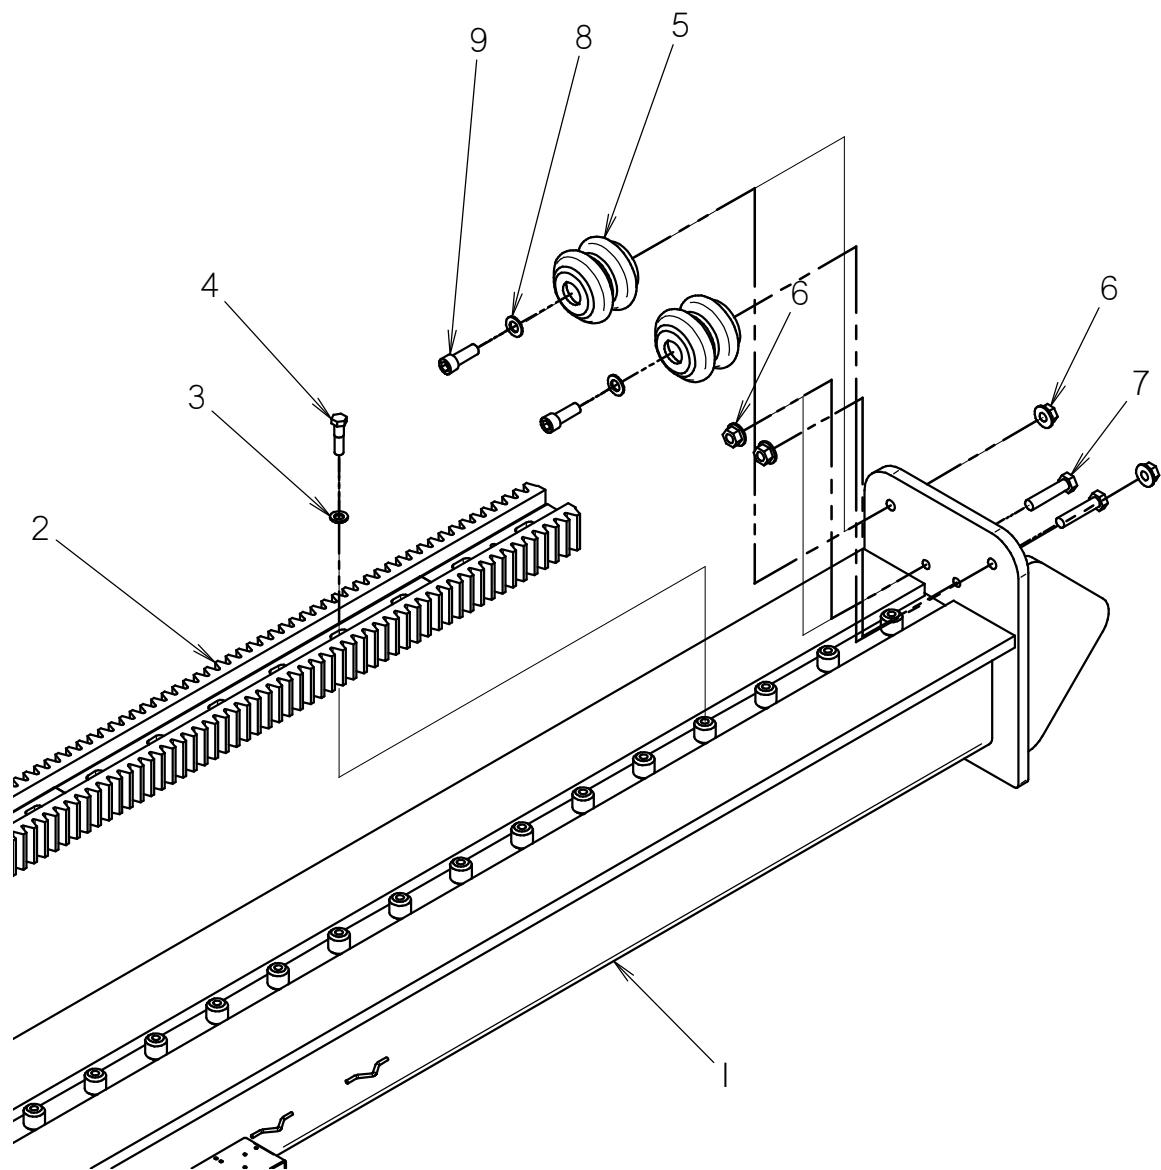

# RACK AND BUMPERS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-5349	1	DRILL FRAME	
2	300-5352	1	RACK ASSEMBLY	
3	I06-398	40	WASHER M16, HARDENED	
4	I05-1479	40	M16-2.0 X 65MM I2.9 HEX CAP SCREW,	LUBRICATE WITH WD40 & TORQUE TO 220 FT/LB
5	I16-769	2	BUMPER	
6	I06-356	4	FLG NUT (M20-2.50, I0.9)	
7	I05-1423	2	SCREW (M20-2.50 X 90MM)	USE 277 LOCTITE
8	I06-393	2	WASHER (M20)	
9	I07-275	2	SCREW (M20-2.50 X 55MM, SOC)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## SAVER SUB (JT)

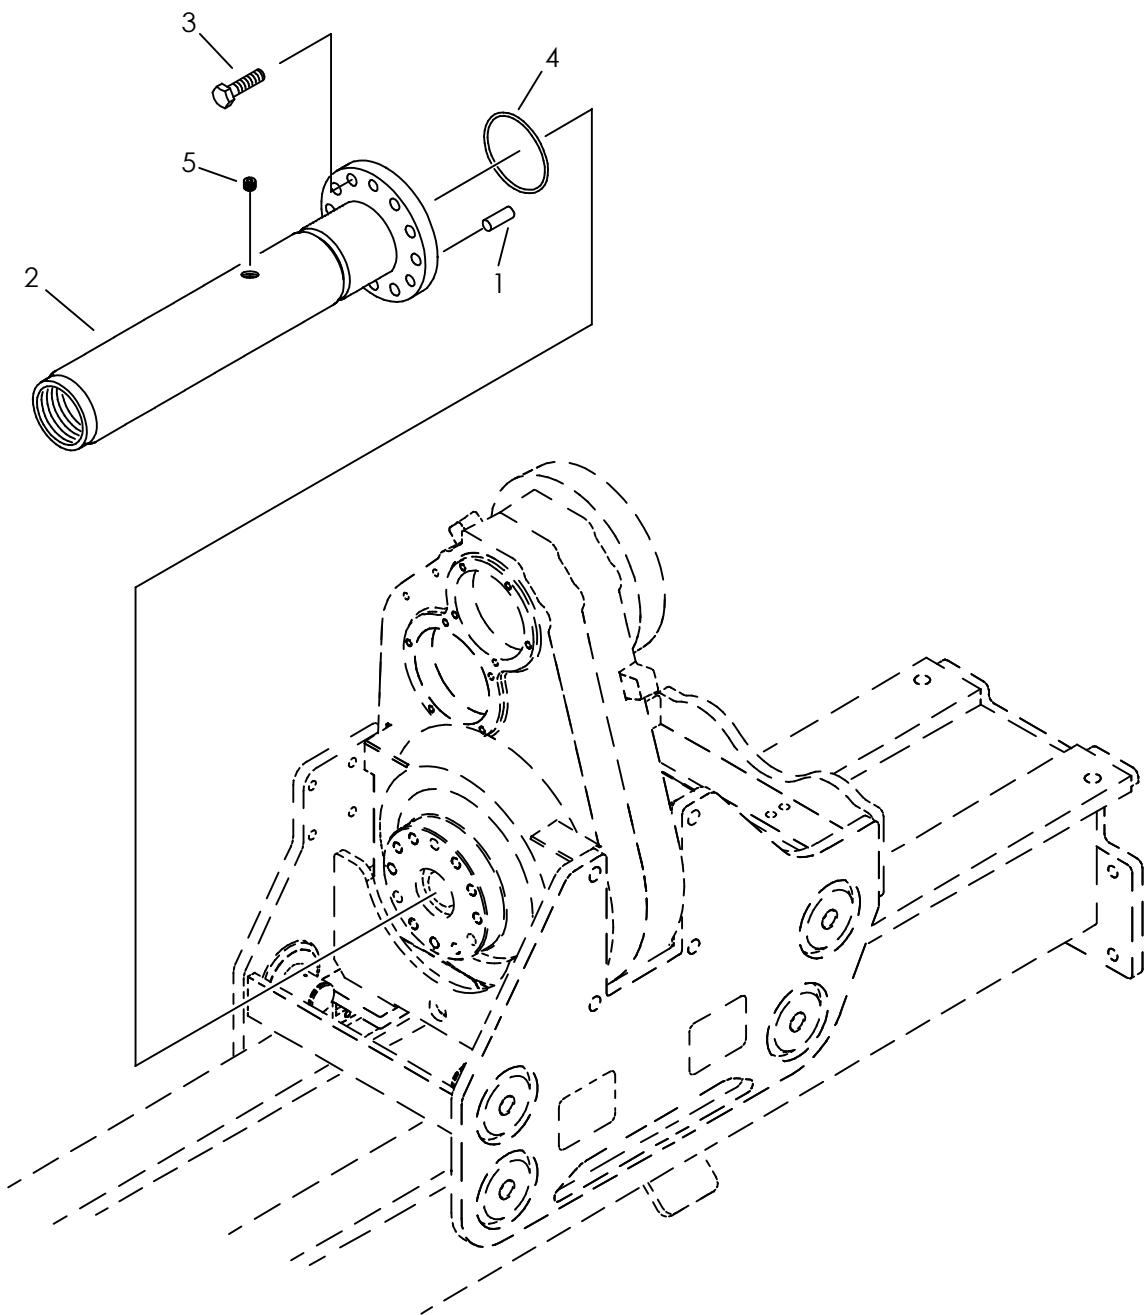

## SAVER SUB (JT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	500-818	3	DOWEL PIN (16mm X 40mm)	
2.	400-1132	1	SAVER SUB 10,000T	SUPERSEDES 370-179
3.	106-244	9	SCREW (M16-2 X 60mm)	USE LOCTITE 242 OR EQUIVALENT
4.	155-701	1	O-RING (345 D70)	
5.	115-158	1	PLUG (06N, SQ)	


NOT SHOWN:

368-164      THREAD PROTECT PLUG 3.27-4

FOOTNOTES:

NOTE:

## SPINDLE DRIVE ASSEMBLY (AT)

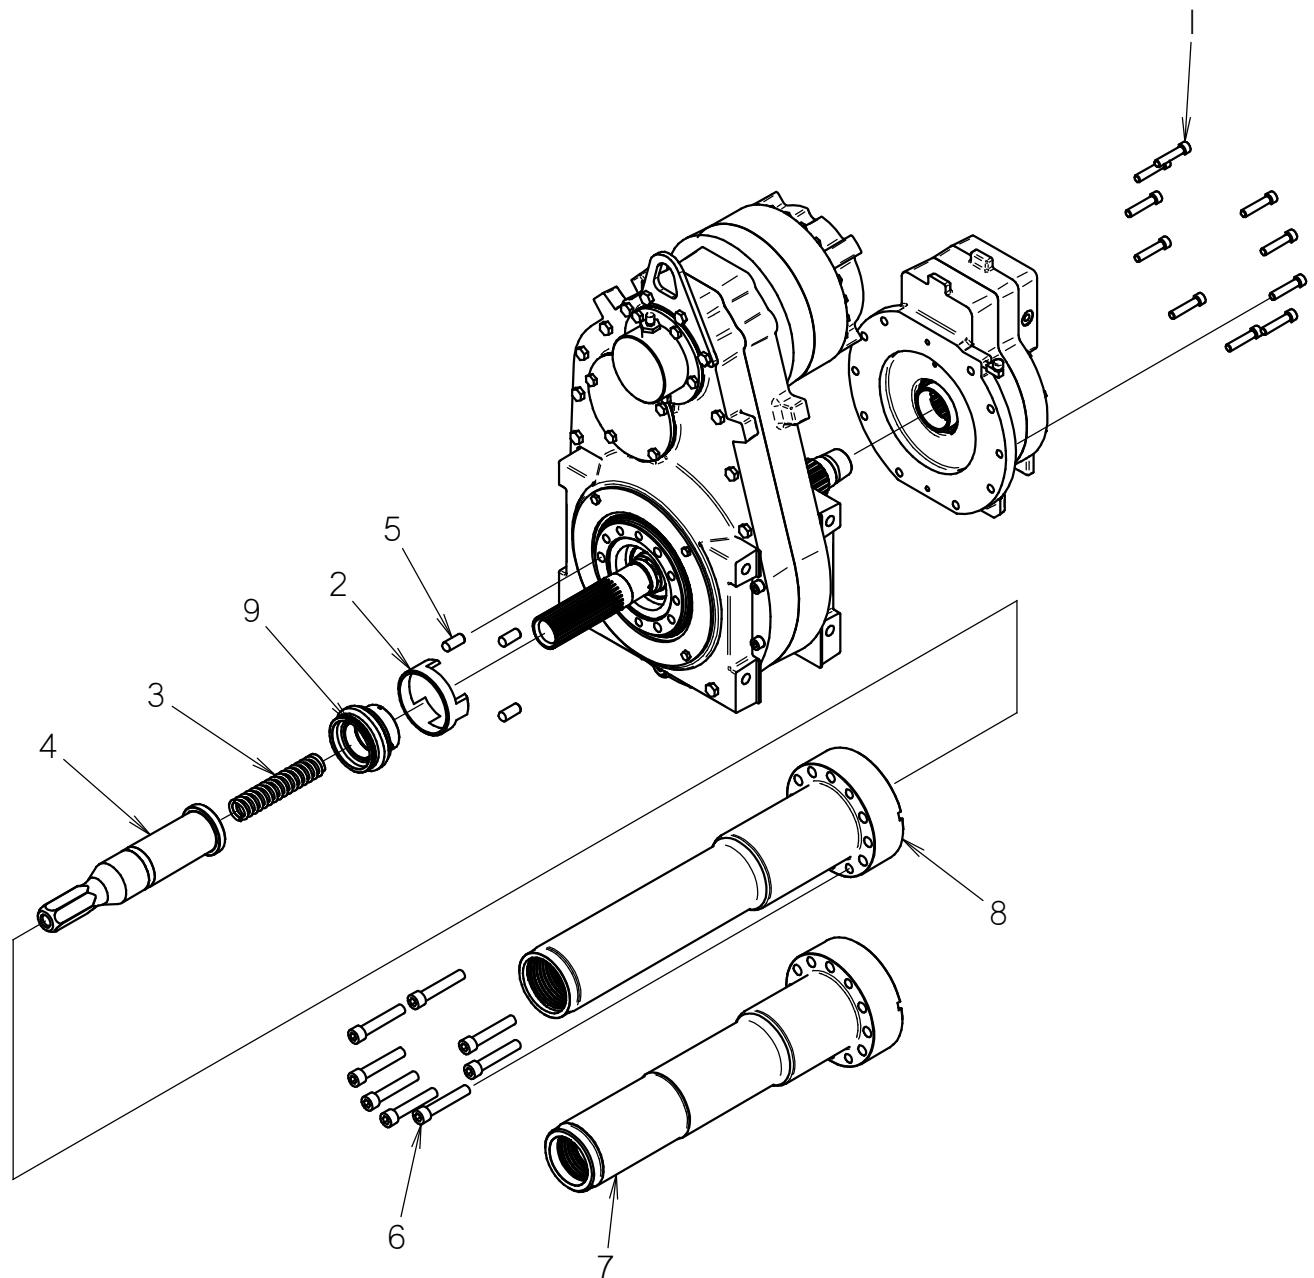

# SPINDLE DRIVE ASSEMBLY (AT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	107-602	10	SCREW (M12-1.75 X 55MM, SOC)	TORQUE TO 107 FT LBS (145 N-M)
2	105-1321	1	SEAL SPACER	
3	117-541	1	SPRING	
4	316-841	1	HEX	
5	500-818	3	DOWEL PIN (16MM X 40MM)	
6	107-694	8	SOCKET HEAD METRIC SCREW	
7	300-5735	1	SAVER SUB SS 3.25-4F	JT PIPE
8	400-1375	1	SAVER SUB SS AT100	AT PIPE
9	190-1163	1	SEAL KIT	SEE FOOTNOTE I


NOT SHOWN:

FOOTNOTES:

- I. SEAL KIT 190-1163 INCLUDES SEAL 191-295 & PIN 105-1191

NOTE:

## GRILLE

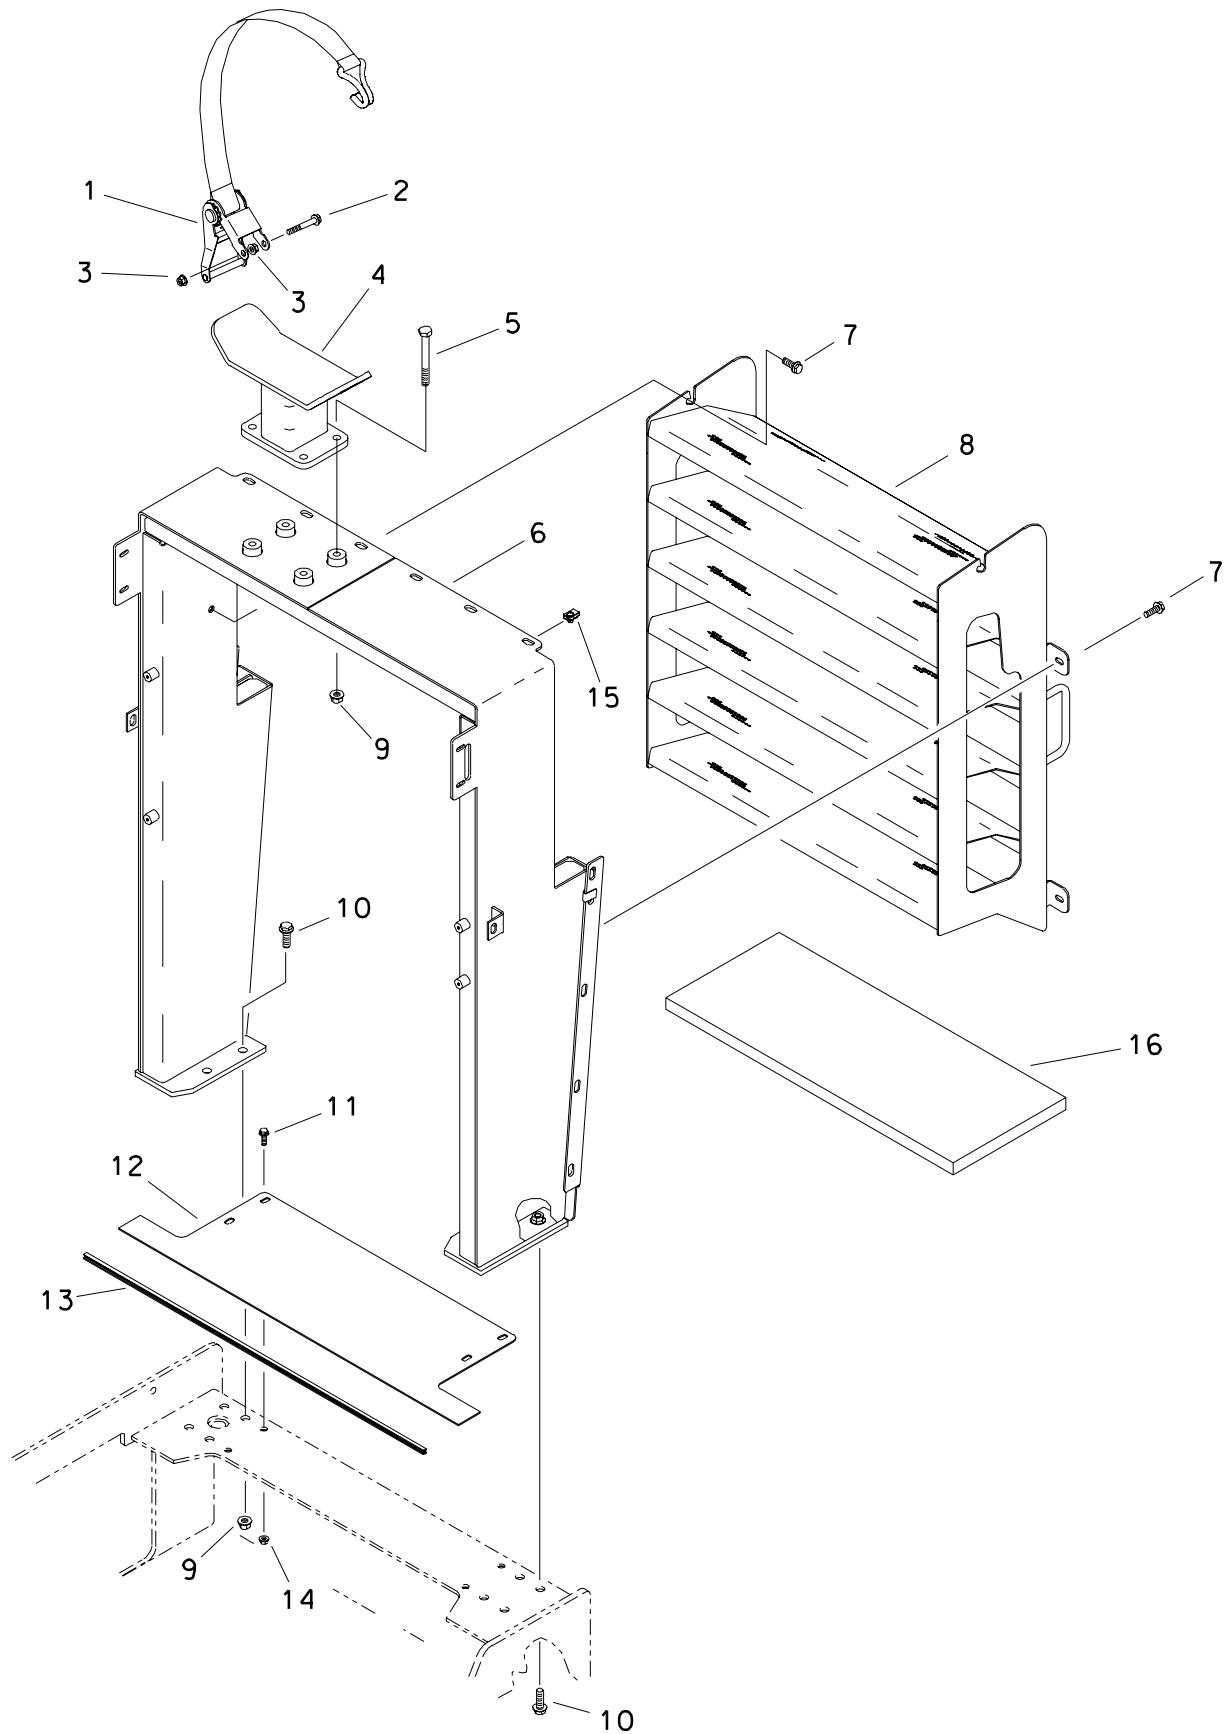


## GRILLE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	111-015	1	LOAD BINDER	
2.	106-700	1	SCREW (M12-1.75 X 80MM)	
3.	106-685	2	LOCKNUT(M12-1.75,PRV TRQ,10.9)	
4.	308-618	1	CRANE REST	
5.	106-337	4	SCREW (M12-1.75 X 110mm)	
6.	308-440	1	GRILLE	
7.	106-724	6	FLG SCREW (M10-1.50 X 25mm)	
8.	306-642	1	GRILLE INSERT	
9.	106-709	8	FLG LK NUT (M12-1.75)	
10.	107-004	8	FLG LK SCREW (M12-1.75 X 45mm)	
11.	106-991	4	FLG LK SCREW (M8-1.25 X 20mm)	ENDS WITH S/N: 2V2567
	106-724	4	FLG SCREW (M10-1.50 X 25MM)	BEGINS WITH S/N: 2W0856
12.	309-222	1	COVER PLATE	
13.	116-421	AR	BULK EDGE (1/8", SOLD PER 1')	USE 1 @ 33"
14.	106-386	4	FLG LK NUT (M8-1.25)	ENDS WITH S/N: 2V2567
15.	106-558	6	CLIP NUT (M10-1.50)	
16.	116-948	6	NOISE BARRIER	

FOOTNOTES

**ENGINE COVERS**  
BEGINS WITH  
CMWJ8020T3P70000006

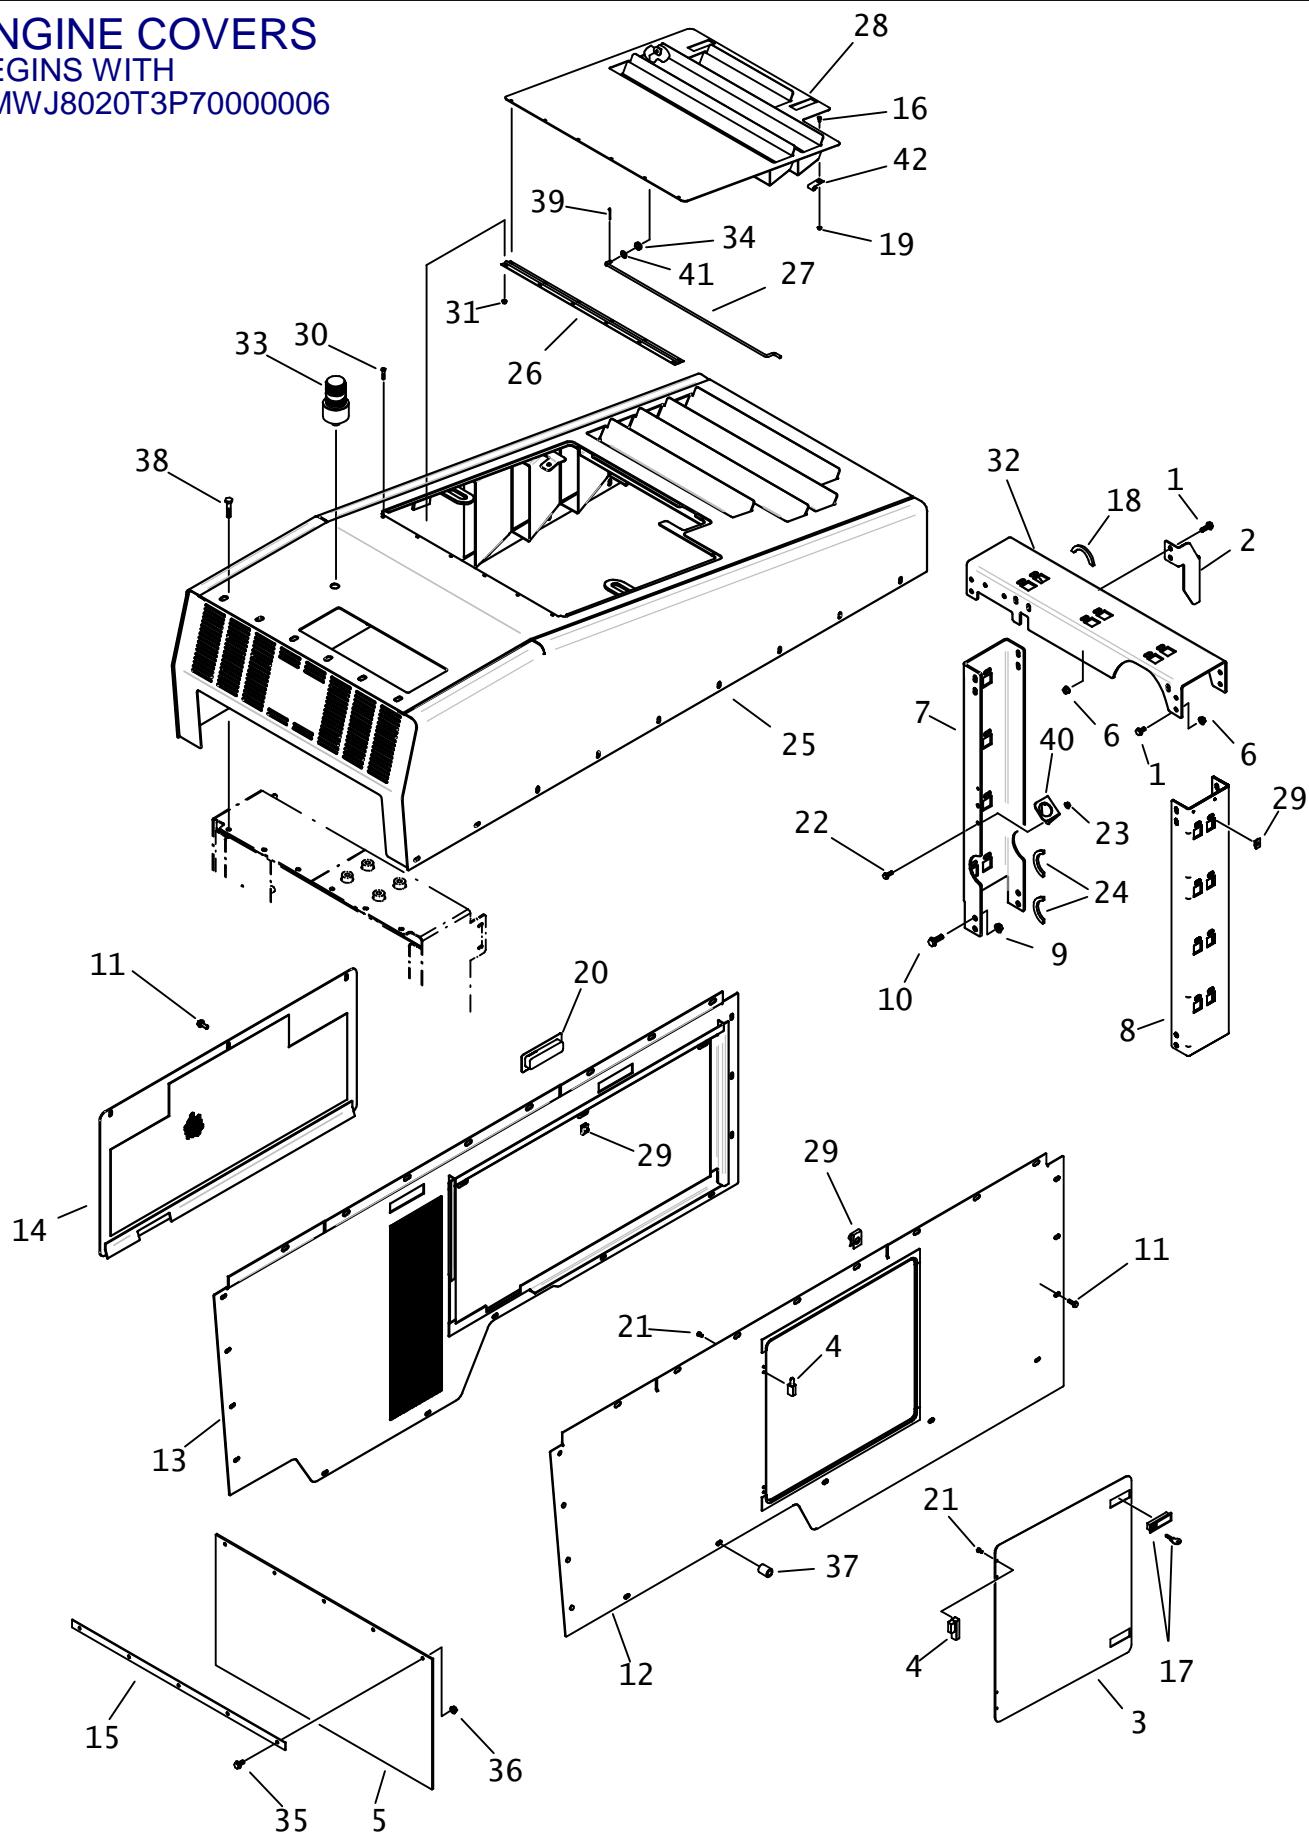

**ENGINE COVERS**  
**BEGINS WITH**  
**CMWJ8020T3P70000006**

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	106-382	14			FLG LK SCREW (M10-1.5 X 20MM)	
2.	349-693	1			REAR TANK BRACKET	
3.	308-715	1			DOOR	
4.	111-002	2			LIFT-OFF HINGE (OFF-SET)	
5.	117-544	1			DEFLECTOR FLAP	
6.	106-387	14			FLG LOCKNUT (M10-1.50)	
7.	349-690	1			FORMED COLUMN	
8.	349-691	1			FORMED COLUMN	
9.	106-709	8			FLG LK NUT (M12-1.75)	
10.	106-469	8			FLG SCREW (M12-1.75 X 30MM)	
11.	106-991	48			FLG LK SCREW (M8-1.25 X 20MM)	
12.	316-814	1			RIGHT SIDE COVER	
13.	300-4805	1			WELDMENT, LEFT SIDE COVER	
14.	300-4803	1			WELDMENT, INSIDE PANEL	
15.	370-108	1			CLAMP BAR	
16.	107-519	1			SCREW (M8-1.25 X 12MM)	
17.	117-558	4			ADJUST LEVER LATCH (LOCKING)	INCL KEY
	214-961				KEY, PAIR (BASE CODE)	
	217-309				LOCK PLUG 4/LATCH (BASE CODE)	
18.	115-686	AR			BULK EDGE (5/32", SOLD PER 1")	USE 1 @ 6"
19.	106-561	1			LOCKNUT (M8-1.25, PRV TRQ, 10.9)	
20.	110-699	2			PULL (1.210" X 5.190", BLACK)	
21.	106-228	8			SCREW (M5-0.80 X 10MM)	
22.	106-162	2			FLG SCREW (M8-1.25 X 20MM)	
23.	106-386	2			FLG LOCK NUT (M8-1.25)	
24.	115-686	AR			BULK EDGE (5/32", SOLD PER 1")	USE 2 @ 6"
25.	300-1684	1			HOOD	
26.	107-552	1			HINGE	
27.	309-157	1			PROP ROD	
28.	309-156	1			TOP DOOR	
29.	106-551	48			CLIP NUT (M8-1.25)	
30.	106-234	12			SCREW (M6-1.00 X 12MM)	
31.	106-385	12			FLG LOCKNUT (M6-1.00)	
32.	300-1716	1			FORMED CROSMEMBER	

NOT SHOWN:

FOOTNOTES:

NOTE:

# ENGINE COVERS

BEGINS WITH

**CMWJ8020T3P70000006**

REF	PART	QTY	DESCRIPTION	REMARKS
NO.	NUMBER			
33.	217-296	1	STROBE LIGHT AMBER MED PROFILE	
	214-991	-	REPLACEMENT FLASH TUBE	
	217-302	-	REPLACEMENT LENS (AMBER)	
	217-301	-	BRUSH GUARD	
	157-645	2	WEATHER-PAC SEAL (2.80MM)	
	214-104	2	PACKARD MALE TERMINAL	
	214-103	1	2-WAY MALE CONNECTOR	
34.	106-076	1	WASHER (1/4")	
35.	106-162	5	FLG SCREW (M8-1.25 X 20MM)	
36.	106-386	5	FLG LOCKNUT (M8-1.25)	
37.	106-565	3	NUTSERT (M8-1.25)	
38.	107-001	6	FLG LK SCREW (M10-1.50 X 25MM)	
39.	105-523	1	COTTER PIN (.125" X .750")	
40.	300-4685	1	SHEET, BULKHEAD ANGLE MOUNT BRACKET	
41.	117-456	1	GROMMET	
42.	110-492	1	J-CLIP (.343")	


NOT SHOWN:

FOOTNOTES:

NOTE:



## THRUST PLANETARY GEARBOX

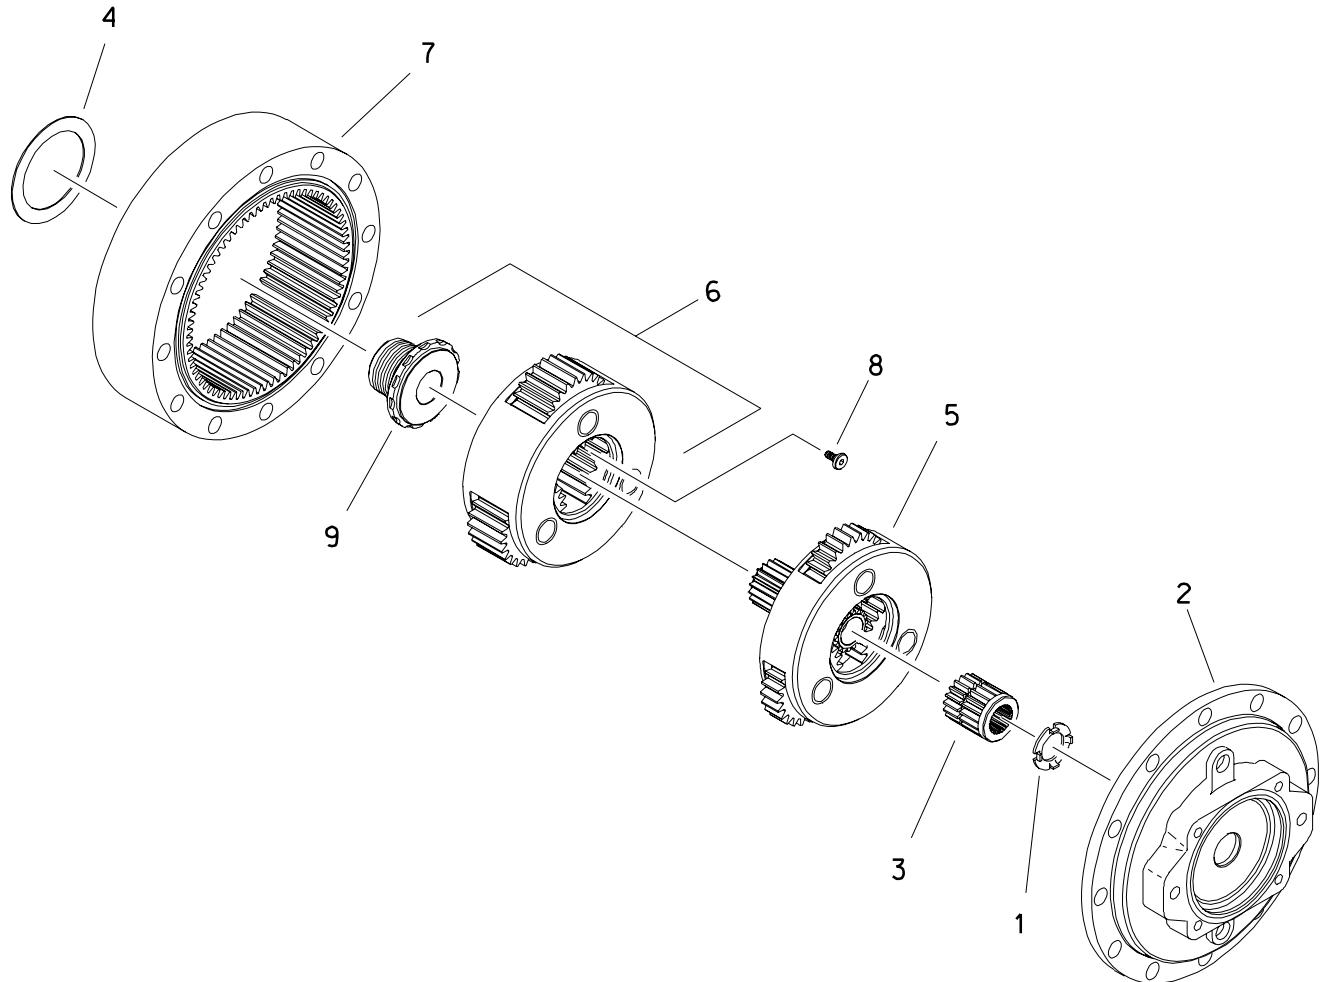


## THRUST PLANETARY GEARBOX

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	166-178	1	THRUST PLANETARY GEARBOX	
1.	499-893	1	THRUST WASHER (.1.031")	
2.	165-589	1	PLANETARY GEARBOX COVER	
3.	165-590	1	PRIMARY SUN GEAR	
4.	499-174	1	SHIM (.3.55")	
5.	165-592	1	PRIMARY CARRIER	
6.	165-593	1	SECONDARY CARRIER	
7.	165-594	1	RING GEAR	
8.	107-362	1	LOCK SCREW (.312" X .500")	
9.	121-026	1	NUT LOCK	USE SERVICE TOOL #301-575 ON NUT

FOOTNOTES

## FRONT COVERS

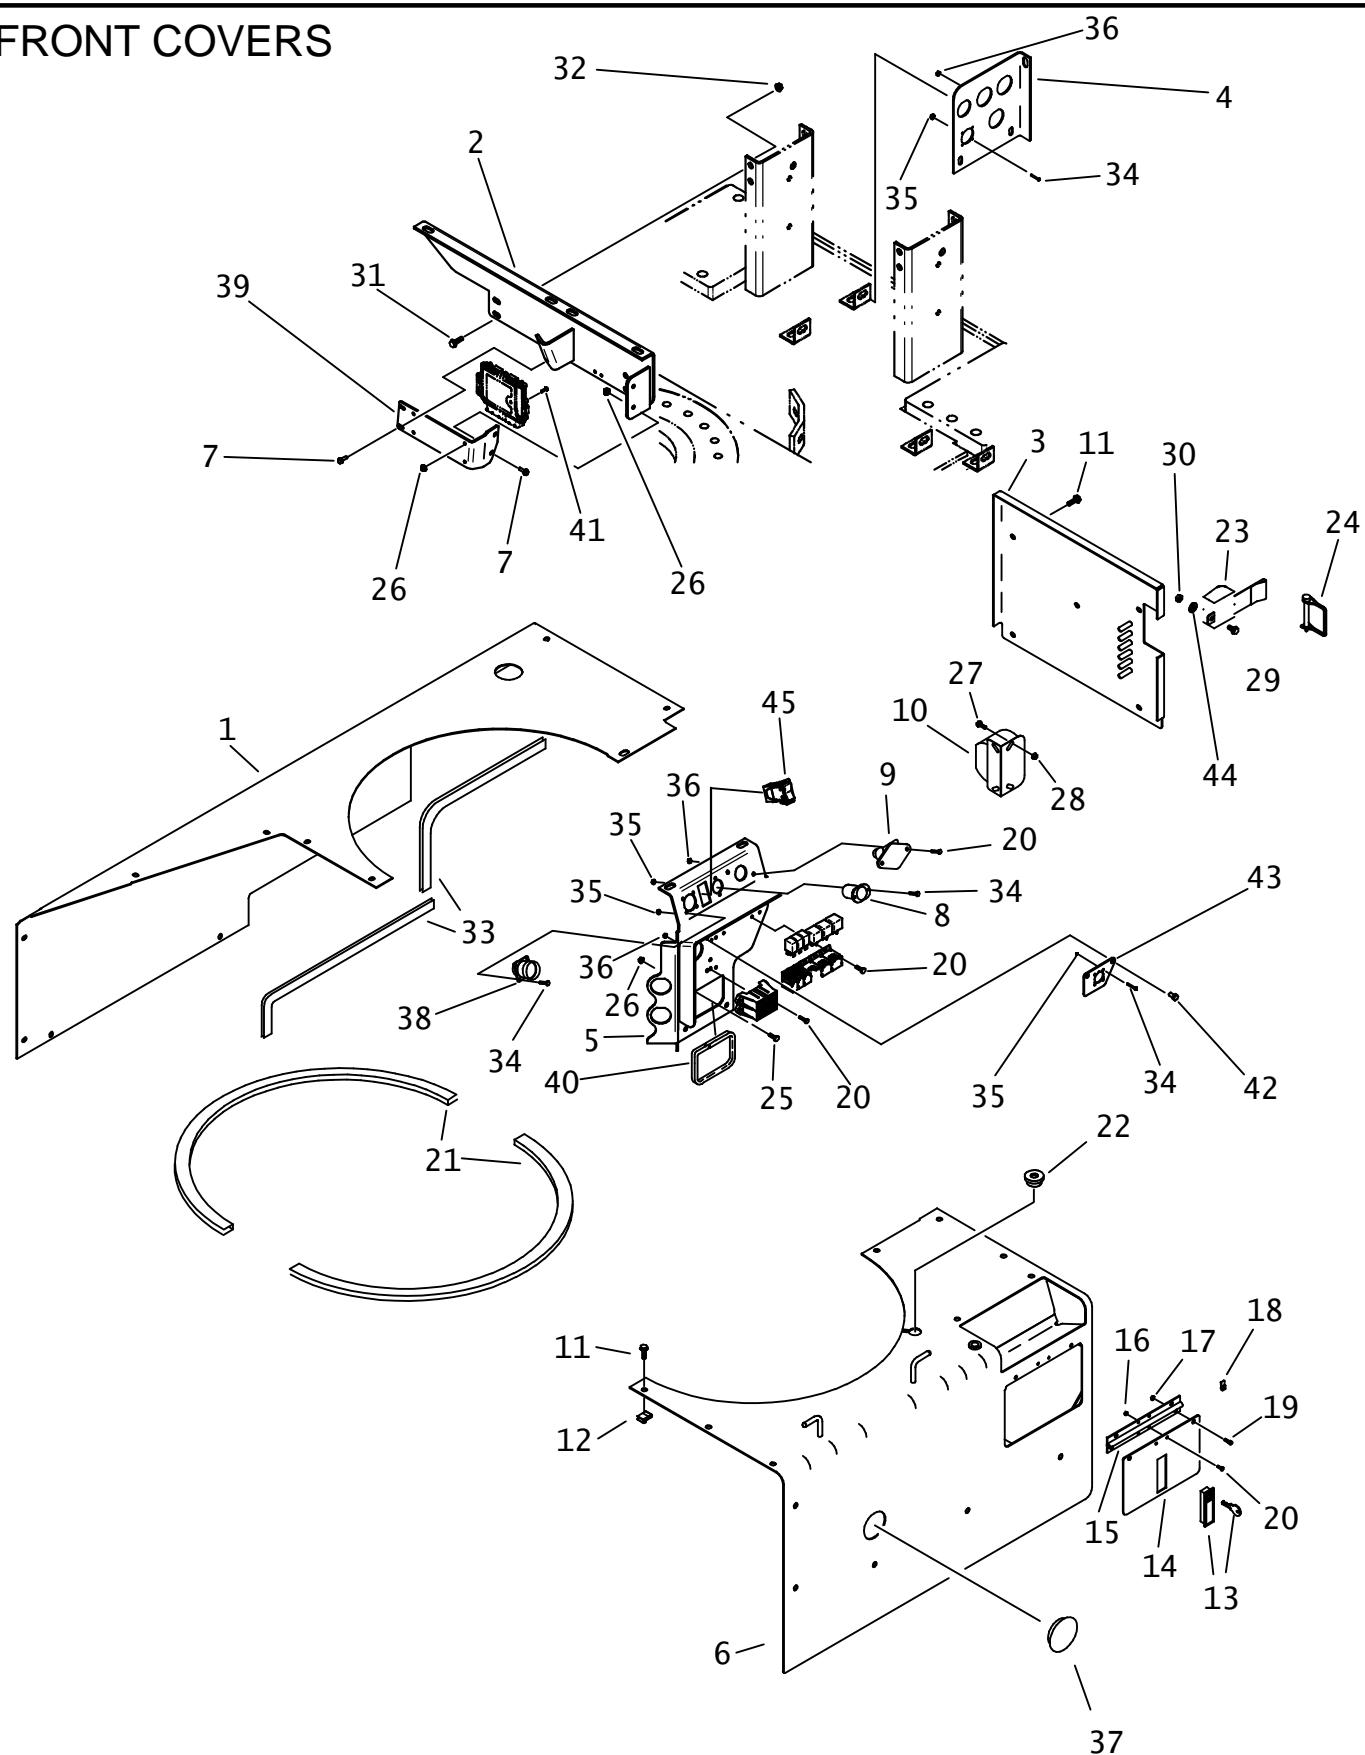

## FRONT COVERS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-798	1	LEFT COVER	USE WITH HOIST OPTION
	370-458	1	LEFT COVER	USE W/OUT HOIST OPTION
2.	300-1776	1	WELDMENT, ECU MOUNT	
3.	349-828	1	COVER PLATE	
4.	300-8180	1	SHEET, BULKHEAD MOUNT	
5.	301-745	1	CONNECTOR/FUSE PANEL	
6.	316-815	1	RIGHT COVER	USE WITH HOIST OPTION
	320-699	1	RIGHT COVER	USE W/OUT HOIST OPTION
7.	106-379	4	FLG LK SCREW (M6-1.00 x 20MM)	
8.	214-301	1	ACCESSORY SOCKET	
9.	217-017	1	CONNECTOR (4-WAY, FM)	
10.	306-602	1	ALARM	
11.	106-991	33	FLG LK SCREW (M8-1.25 x 20MM)	
12.	106-551	33	CLIP NUT (M8-1.25)	
13.	117-558	1	ADJUST LEVER LATCH (LOCKING)	
	214-961		KEY, PAIR (BASE CODE)	
	217-309		LOCK PLUG 4/LATCH (BASE CODE)	
14.	348-299	1	ACCESS PANEL	
15.	111-047	1	HINGE (214MM)	
16.	106-138	4	NUT (M5-0.80)	
17.	106-385	4	LOCKNUT (M6-1.00)	
18.	110-524	1	SPRING RETAINER	
19.	106-640	4	SCREW (M6-1.00 x 20MM, BUT SOC)	
20.	106-542	8	SCREW (M5-0.80 x 16MM, PAN PLPS)	
21.	115-686	AR	BULK EDGE (5/32", SOLD PER 1")	USE 2 @ 40", USED ONLY WITH HOIST OPTION
22.	116-768	1	GROMMET (1/4")	
23.	171-008	1	RETRACTABLE BELT (ORANGE)	
24.	110-032	1	SNAPPER PIN (5/16" x 2-1/2")	
25.	106-234	4	SCREW (M6-1.00 x 12MM)	
26.	106-385	12	FLG LOCKNUT (M6-1.00)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## FRONT COVERS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
27.	106-162	2	FLG SCREW (M8-1.25 X 20MM)	
28.	106-386	2	FLG LOCKNUT (M8-1.25)	
29.	106-469	1	FLG SCREW (M12-1.75 X 30MM)	
30.	106-685	1	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
31.	106-382	4	FLG LK SCREW (M10-1.50 X 20MM)	
32.	106-387	4	FLG LOCKNUT (M10-1.50)	
33.	115-686 AR		BULK EDGE (5/32", SOLD PER 1")	USE 1 @ 44"
34.	105-189	14	SCREW (#6-32 X 1/2")	
35.	105-215	14	NUT (#6-32)	
36.	106-850	6	LOCKNUT (M5-0.80)	
37.	110-982	1	DOME PLUG (2.5")	
38.	214-468	-	RECEPTACLE (19 PIN)	
39.	300-1908	1	SHEET, ECU MOUNT	
40.	115-686 AR		BULK EDGE (5/32", SOLD/ 1")	USE 1 @ 18"
41.	107-312	4	SCREW (M6-1.00 X 25MM, BUT SOC)	
42.	106-234	2	SCREW (M6-1.00 X 12MM)	
43.	300-3153	1	SHEET, DIAGNOSTIC CONNECTOR MOUNT	
44.	106-743	1	WASHER (.531", HARDENED)	
45.	217-918	1	ROCKER SW {DPDT) ON-ON	
	217-136	1	ICON (WHT) ON-START	
	217-137	1	ICON (WHT) OFF-STOP	
	217-156	1	DIFFUSION LENS (GREEN)	
	217-158	1	DIFFUSION LENS (WHITE)	
	217-925	1	ROCKER SWITCH (ACTUATOR)	


NOT SHOWN:

FOOTNOTES:

NOTE:



## SOUND INSULATION ENGINE COVERS

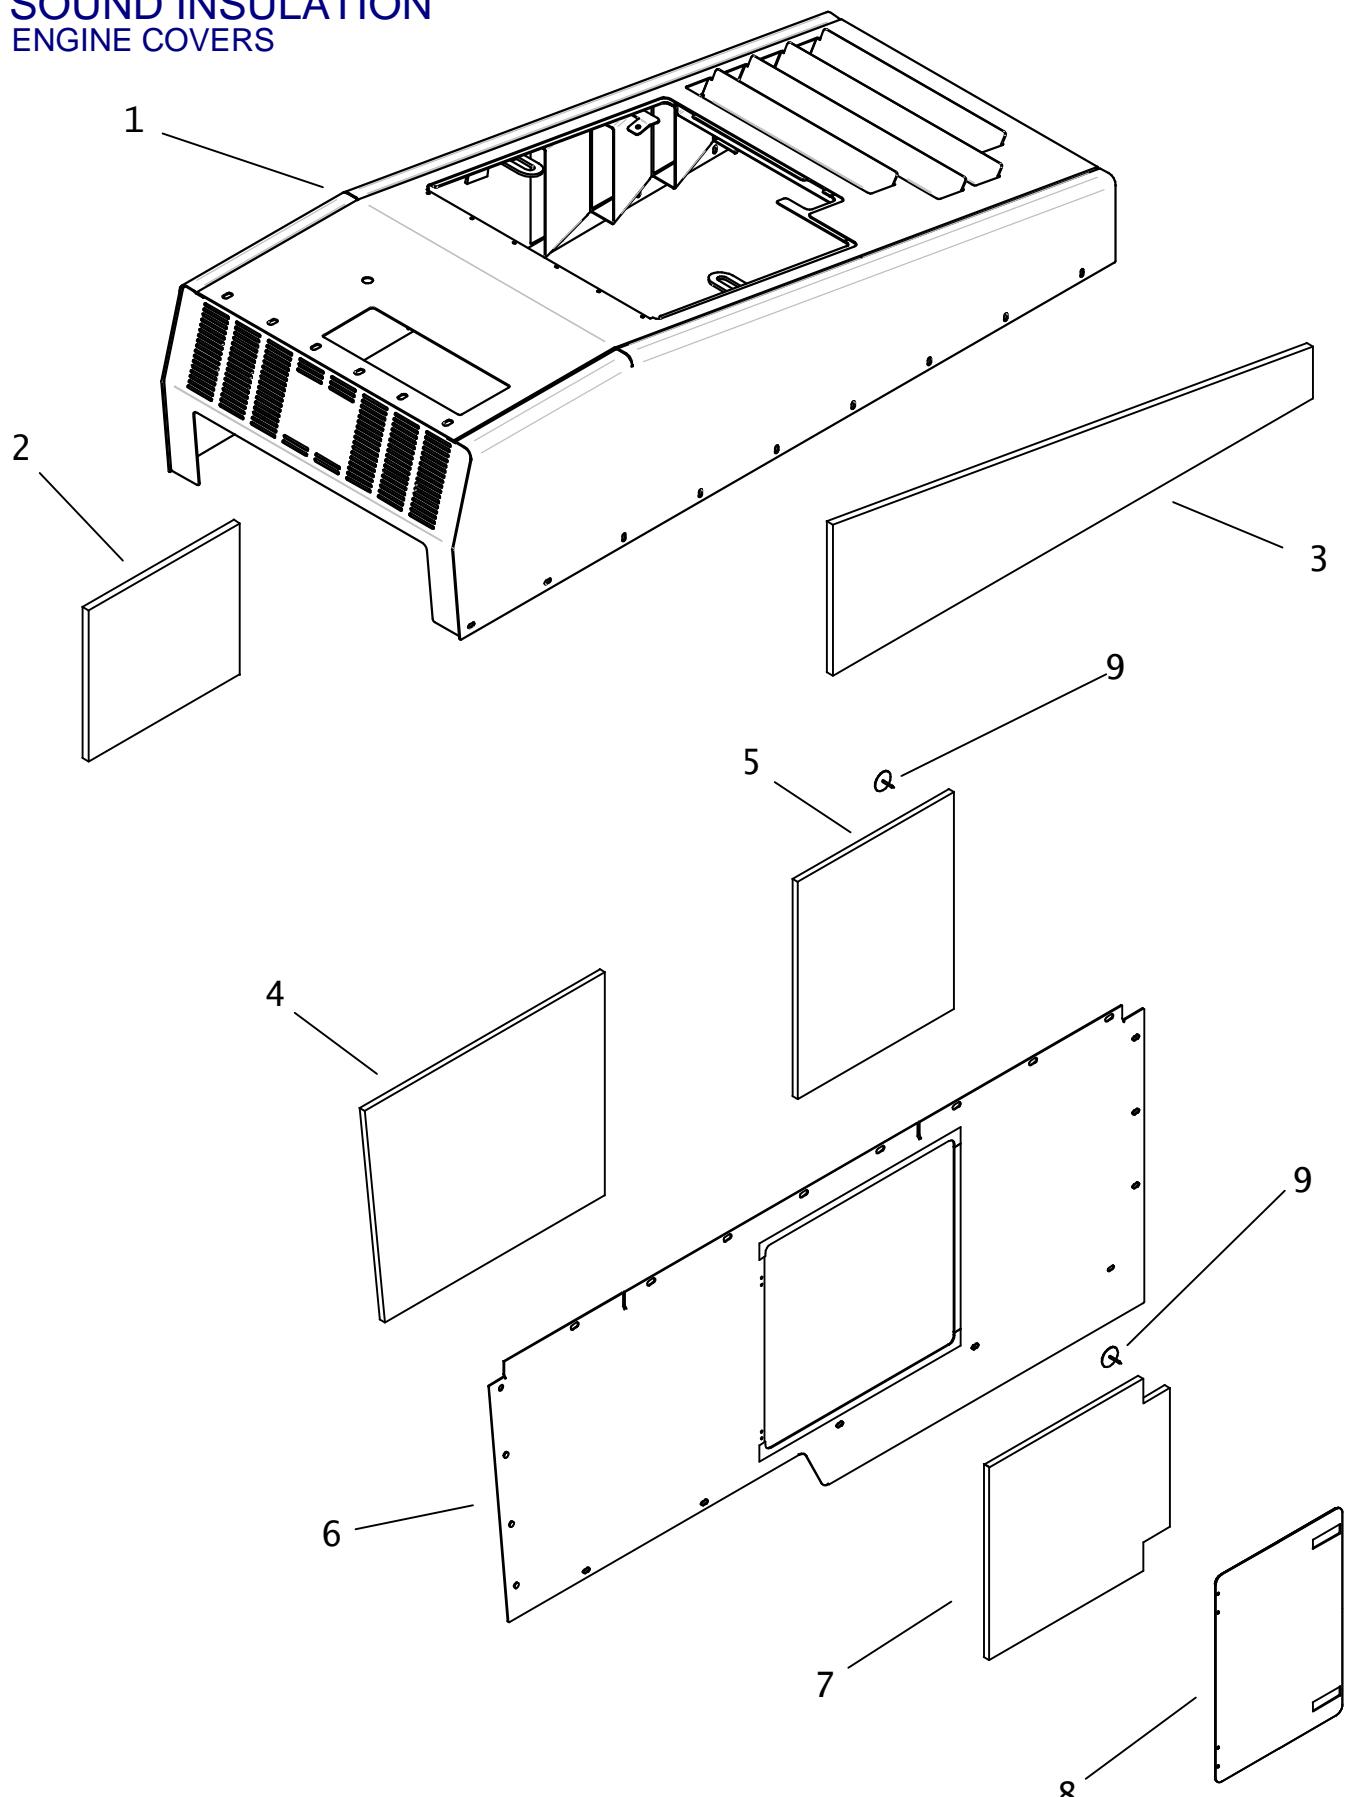

## SOUND INSULATION ENGINE COVERS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	300-1684	-	REAR HOOD	
2.	117-366	1	SOUND INSULATION	
3.	117-362	1	SOUND INSULATION	
4.	117-363	1	SOUND INSULATION	
5.	117-365	1	SOUND INSULATION	
6.	316-814	-	RIGHT SIDE COVER	
7.	117-364	-	SOUND INSULATION	
8.	308-715	-	DOOR	
9.	107-950	11	INSULATION STUD	

NOT SHOWN:


FOOTNOTES:

NOTE:

OI

ID0159428

## COVERS

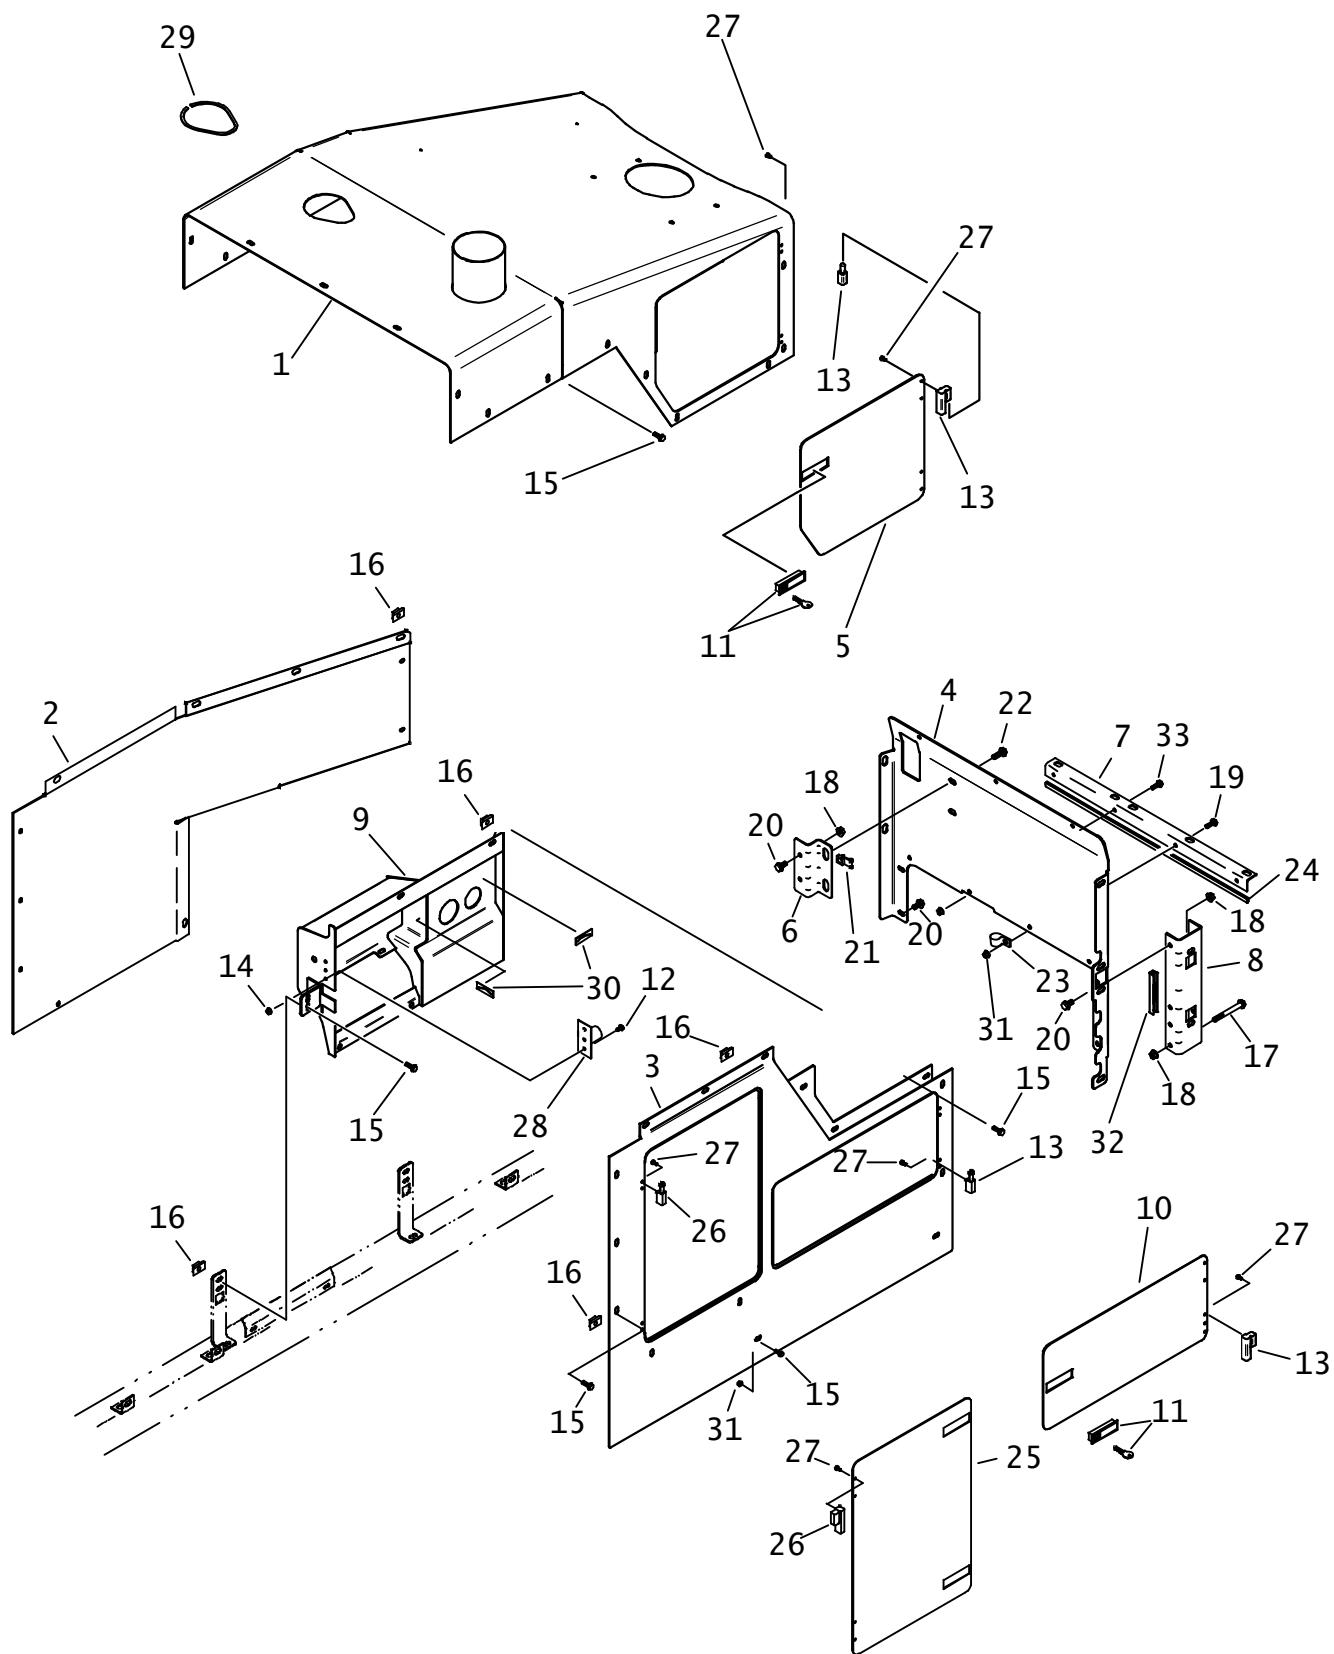

# COVERS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	300-1687	1	WELDMENT, FRONT HOOD	
2.	349-794	1	FRONT LEFT SIDE PLATE	
3.	300-1689	1	WELDMENT, FRONT RIGHT SIDE PANEL	
4.	300-1713	1	SHEET, FRONT END PLATE	
5.	300-1704	1	SHEET, AIR FILTER DOOR	
6.	300-3149	1	FRONT TANK BRACKET	
7.	349-806	1	BRACKET	
8.	349-796	1	CHANNEL	
9.	300-1683	1	WELDMENT, VALVE COVER	
10.	300-1705	1	SHEET, SETUP DOOR	
11.	117-558	4	ADJUST LEVER LATCH (LOCKING)	
	214-961		KEY, PAIR (BASE CODE)	
	217-309		LOCK PLUG 4/LATCH (BASE CODE)	
12.	106-378	2	FLG LK SCREW (M6-1.00 X 12MM)	
13.	105-617	4	LIFT-OFF HINGE (OFF-SET)	
14.	106-385	2	FLG LOCKNUT (M6-1.00)	
15.	106-991	40	FLG LK SCREW (M8-1.25 X 20MM)	
16.	106-551	38	CLIP NUT (M8-1.25)	
17.	106-206	2	SCREW (M10-1.50 X 90MM)	
18.	106-387	6	FLG LOCKNUT (M10-1.50)	
19.	106-381	1	FLG. LK. SCREW (M8-1.25 X 25MM)	
20.	106-382	6	FLG LK SCREW (M10-1.50 X 20MM)	
21.	106-558	2	CLIP NUT (M10-1.50)	
22.	106-383	2	FLG LK SCREW (M10-1.50 X 30MM)	
23.	110-333	1	BOLT ON CLAMP (1")	
24.	116-259	AR	BULK EDGE (1/4", SOLD PER 1")	USE 1 @ 8"
25.	349-398	1	DOOR	
26.	111-002	2	LIFT-OFF HINGE (OFF-SET)	
27.	106-228	16	SCREW (M5-0.80 X 10MM)	
28.	215-412	1	LICENSE PLATE LAMP	
29.	115-686	AR	BULK EDGE (5/32", SOLD PER 1")	USE 1 @ 15"
30.	110-208	2	LEVEL INDICATOR	
31.	106-386	4	FLG LOCKNUT (M8-1.25)	
32.	115-686	AR	BULK EDGE (5/32", SOLD PER 1")	USE 1 @ 4"
33.	106-162	3	FLG SCREW (M8-1.25 X 20MM, GD8)	


NOT SHOWN:

FOOTNOTES:

NOTE:

## FUEL TANK

ENDS WITH CMW S/N: CMWJT100H90000003

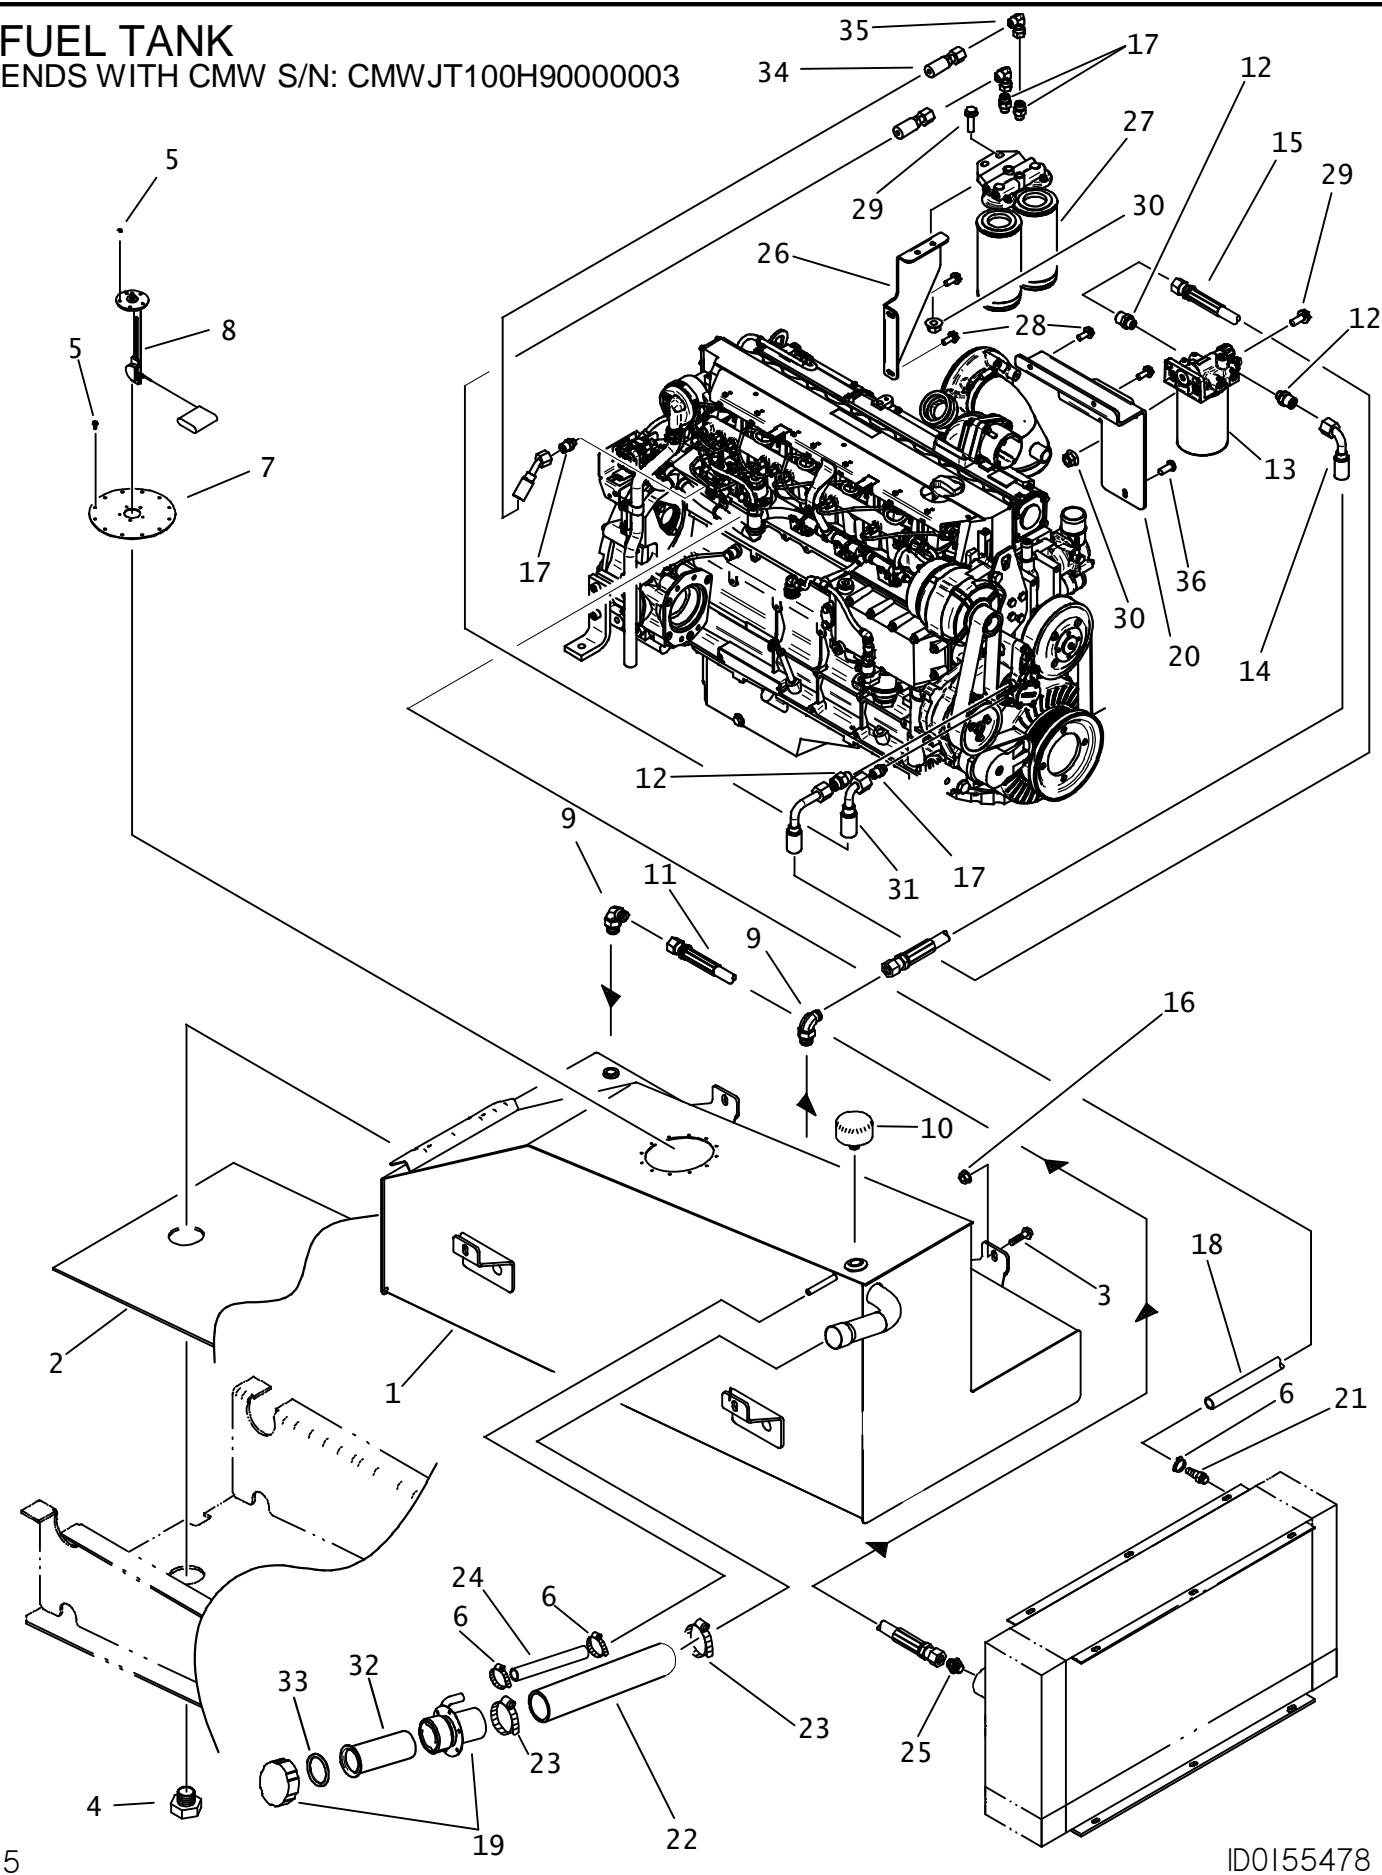

# FUEL TANK

ENDS WITH CMW S/N: CMWJT100H90000003

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	315-402	1	FUEL TANK	
2.	309-160	1	TANK PAD	
3.	106-632	4	FLG LK SCREW (M12-1.75 X 35MM, SER)	
4.	115-152	1	PLUG (12N, SQ FM)	
5.	105-214	16	FLG SCREW (#10-24 X 1/2")	
6.	110-217	4	WORM CLAMP (7/16" TO 1")	
7.	349-887	1	COVER PLATE	SEE FOOTNOTE 1
8.	214-871	1	FUEL SENDER	
9.	154-352	2	CONNECTOR (08N-08090)	
10.	159-446	1	BREATHER VENT	
11.	153-303	1	HOSE (080FX-65"-3000)	
12.	159-754	3	CONNECTOR (M16-1.5-080)	
13.	500-2110	-	DEUTZ FUEL FILTER	
14.	154-971	1	HOSE (080FX90-78"-3000)	
15.	154-877	1	HOSE (080FX90-90"-3000)	
16.	106-709	4	FLG NUT (M12-1.75)	
17.	150-1214	4	CONNECTOR (M14X1.5-060)	
18.	116-322 AR	BULK HOSE (1/2", SOLD PER 1')	USE 1 @ 94"	
19.	364-661	1	FILLER NECK	
	153-760	1	CAP	
20.	300-1768	1	PLATE, FILTER MOUNT	
21.	149-989	1	S/O COUPLER (08S-08H)	
22.	116-952	-	FUEL HOSE (2" X 32")	USE 1 @ 24"
23.	110-134	2	WORM CLAMP (2.06"-2.75")	
24.	116-322 AR	BULK HOSE (1/2", SOLD PER 1')	USE 1 @ 35"	
25.	154-233	1	CONNECTOR (08S-080)	
26.	300-1769	1	SHEET, SECONDARY FUEL FILTER MOUNT	
27.	500-1084	-	ELEMENT, SECONDARY FUEL FILTER	
28.	106-162	4	FLG SCREW (M8-1.25 X 20MM)	USE 242 LOCTITE
29.	107-111	4	FLG SCREW (M10-1.50 X 35MM)	
30.	106-387	4	FLG LOCKNUT (M10-1.50)	
31.	154-954	1	HOSE (060FX90S-70"-3000)	
32.	364-663	1	FILLER NECK SCREEN	
33.	155-708	1	O-RING (218 D70)	
34.	150-1136	1	HOSE (060FX45-74"-3000)	
35.	154-228	2	UNION (060-060FX90)	
36.	107-032	1	SCREW (M8-1.25 X 20MM, BUT SOC)	USE 242 LOCTITE

NOT SHOWN:

FOOTNOTES:

1. USE LOCTITE AVIATION SEALANT OR EQUIVALENT

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS

# FUEL TANK

BEGINS WITH CMW S/N: CMWJT100H90000004

REF	PART		REMARKS
NO.	NUMBER	QTY	DESCRIPTION
1.	300-5743	1	FUEL TANK
2.	309-160	1	TANK PAD
3.	106-632	4	FLG LK SCREW (M12-1.75 X 35MM, SER)
4.	115-152	1	PLUG (12N, SQ FM)
5.	105-214	16	FLG SCREW (#10-24 X 1/2")
6.	349-887	1	COVER PLATE
7.	214-871	1	FUEL SENDER
8.	154-352	2	CONNECTOR (08N-08090)
9.	159-446	1	BREATHER VENT
10.	153-303	1	HOSE (080FX-65"-3000)
11.	159-754	3	CONNECTOR (M16-1.5-080)
12.	500-2110	-	DEUTZ FUEL FILTER
13.	154-971	1	HOSE (080FX90-78"-3000)
14.	154-877	1	HOSE (080FX90-90"-3000)
15.	106-709	4	FLG NUT (M12-1.75)
16.	150-1214	4	CONNECTOR (M14X1.5-060)
17.	116-322	AR	BULK HOSE (1/2", SOLD PER 1')
18.	300-5781	1	FILLER NECK
	111-065	1	CAP
19.	300-1768	1	PLATE, FILTER MOUNT
20.	149-989	1	S/O COUPLER (08S-08H)
21.	150-2368	-	HOSE (2-5/8" ID)
22.	110-311	2	WORM CLAMP (1-5/16" TO 3-1/4")
23.	154-233	1	CONNECTOR (08S-080)
24.	300-1769	1	SHHEET, SECONDARY FUEL FILTER MOUNT
25.	500-1084	-	ELEMENT, SECONDARY FUEL FILTER
26.	106-162	4	FLG SCREW (M8-1.25 X 20MM)
27.	107-111	4	FLG SCREW (M10-1.50 X 35MM)
28.	106-387	4	FLG LOCKNUT (M10-1.50)
29.	154-954	1	HOSE (060FX90S-70"-3000)
30.	157-076	1	O-RING (218 D70)
31.	150-1136	1	HOSE (060FX45-74"-3000)
32.	154-228	2	UNION (060-060FX90)
33.	107-032	1	SCREW (M8-1.25 X 20MM, BUT SOC)
34.	110-217	2	WORM CLAMP (7/16"TO 1")

NOT SHOWN:

FOOTNOTES:


1. USE LOCTITE AVIATION SEALANT OR EQUIVALENT

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS



## BATTERY BOX

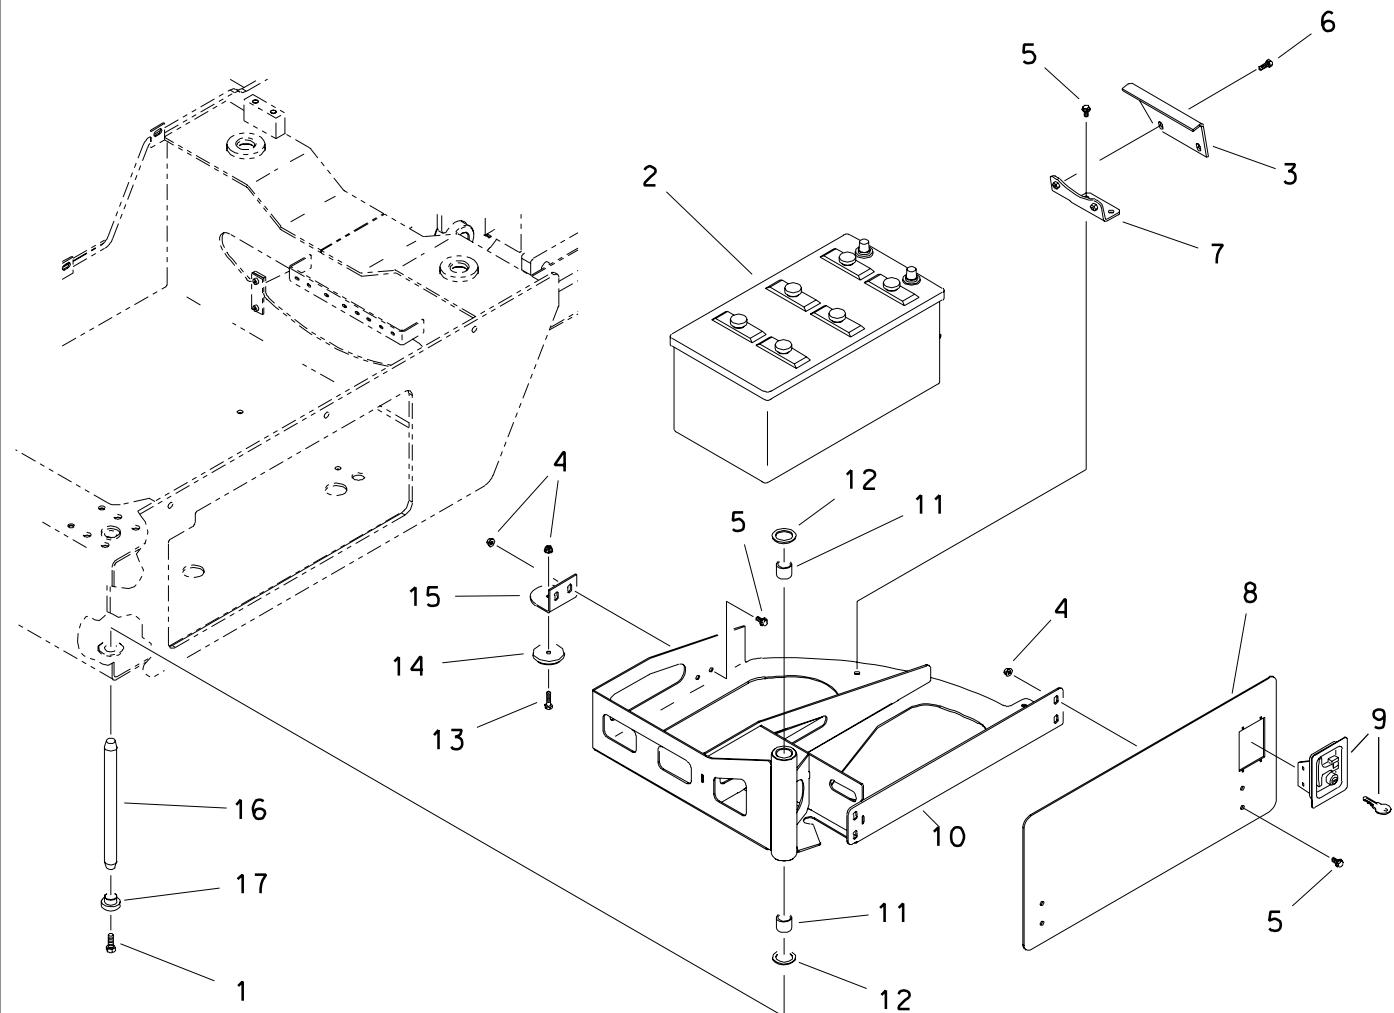


# BATTERY BOX

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	105-245	1	SCREW (M10-1.50 X 25MM)	
2.	215-282	2	BATTERY	
3.	308-761	2	HOLD DOWN	
4.	106-386	7	FLG LOCKNUT (M8-1.25)	
5.	106-380	8	FLG LK SCREW (M8-1.25 X 16MM)	
6.	106-162	4	FLG SCREW (M8-1.25 X 20MM)	
7.	308-753	2	BRACKET	
8.	308-763	1	DOOR	
9.	110-514	1	LOCKING LATCH (ADJUSTABLE)	INCL. KEY
	110-596	-	KEY (PAIR)	
10.	308-752	1	BATTERY SWING BOX	
11.	125-770	2	COMPOSITION BUSHING (1")	
12.	110-084 AR		BRASS BUSHING (1-5/32")	
13.	107-187	1	SCREW (M8-1.25 X 35MM)	
14.	308-764	1	SLIDE RING	
15.	308-769	1	SLIDE BRACKET	
16.	178-533	1	TAPERED PIN (25.4MM X 312MM)	
17.	181-981	1	TAPERED INSERT (1")	

FOOTNOTES

100

## PIVOT

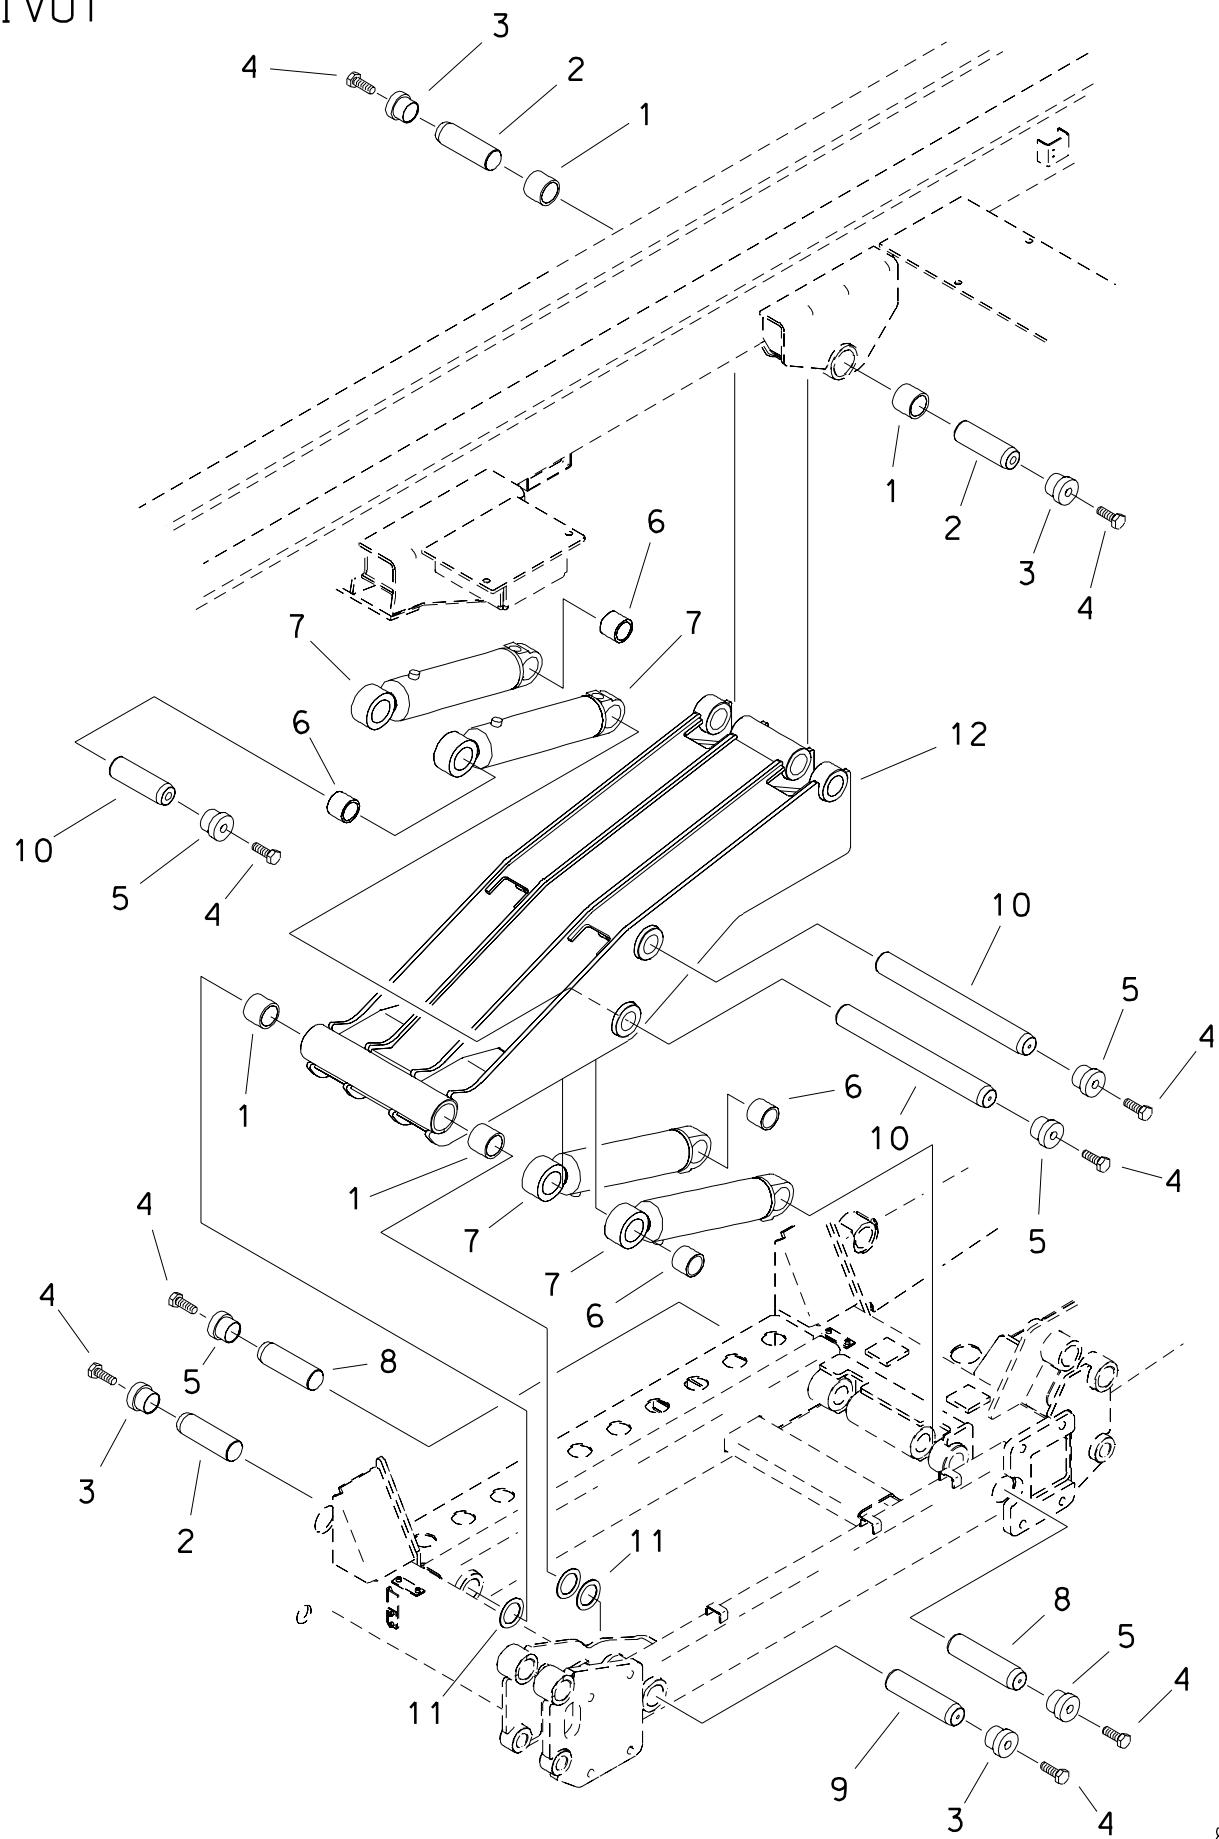

D


804-987

## PIVOT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	125-781	4	COMPOSITION BUSHING (2.259")	
2.	183-837	3	TAPERED PIN (57.15mm X 180mm)	
3.	184-031	4	TAPERED INSERT (2.25")	
4.	106-345	9	SCREW (M20-2.50 X 50mm)	USE LOCTITE WITH 242 OR EQUIVALENT
5.	184-064	5	TAPERED INSERT (2")	
6.	125-754	8	COMPOSITION BUSHING (2")	
7.	151-047	4	CYL (3.5" X 2.0" X 12.0")	
8.	183-919	2	TAPERED PIN (50.8mm X 190mm)	
9.	183-838	1	TAPERED PIN (57.1mm X 250mm)	
10.	179-177	3	TAPERED PIN (50.8mm X 460mm)	
11.	110-211	AR	MACHINERY BUSHING (2.25")	
12.	349-350	1	PIVOT	

FOOTNOTES

**TRACK GROUP**  
BEGINS WITH S/N: 2W0856

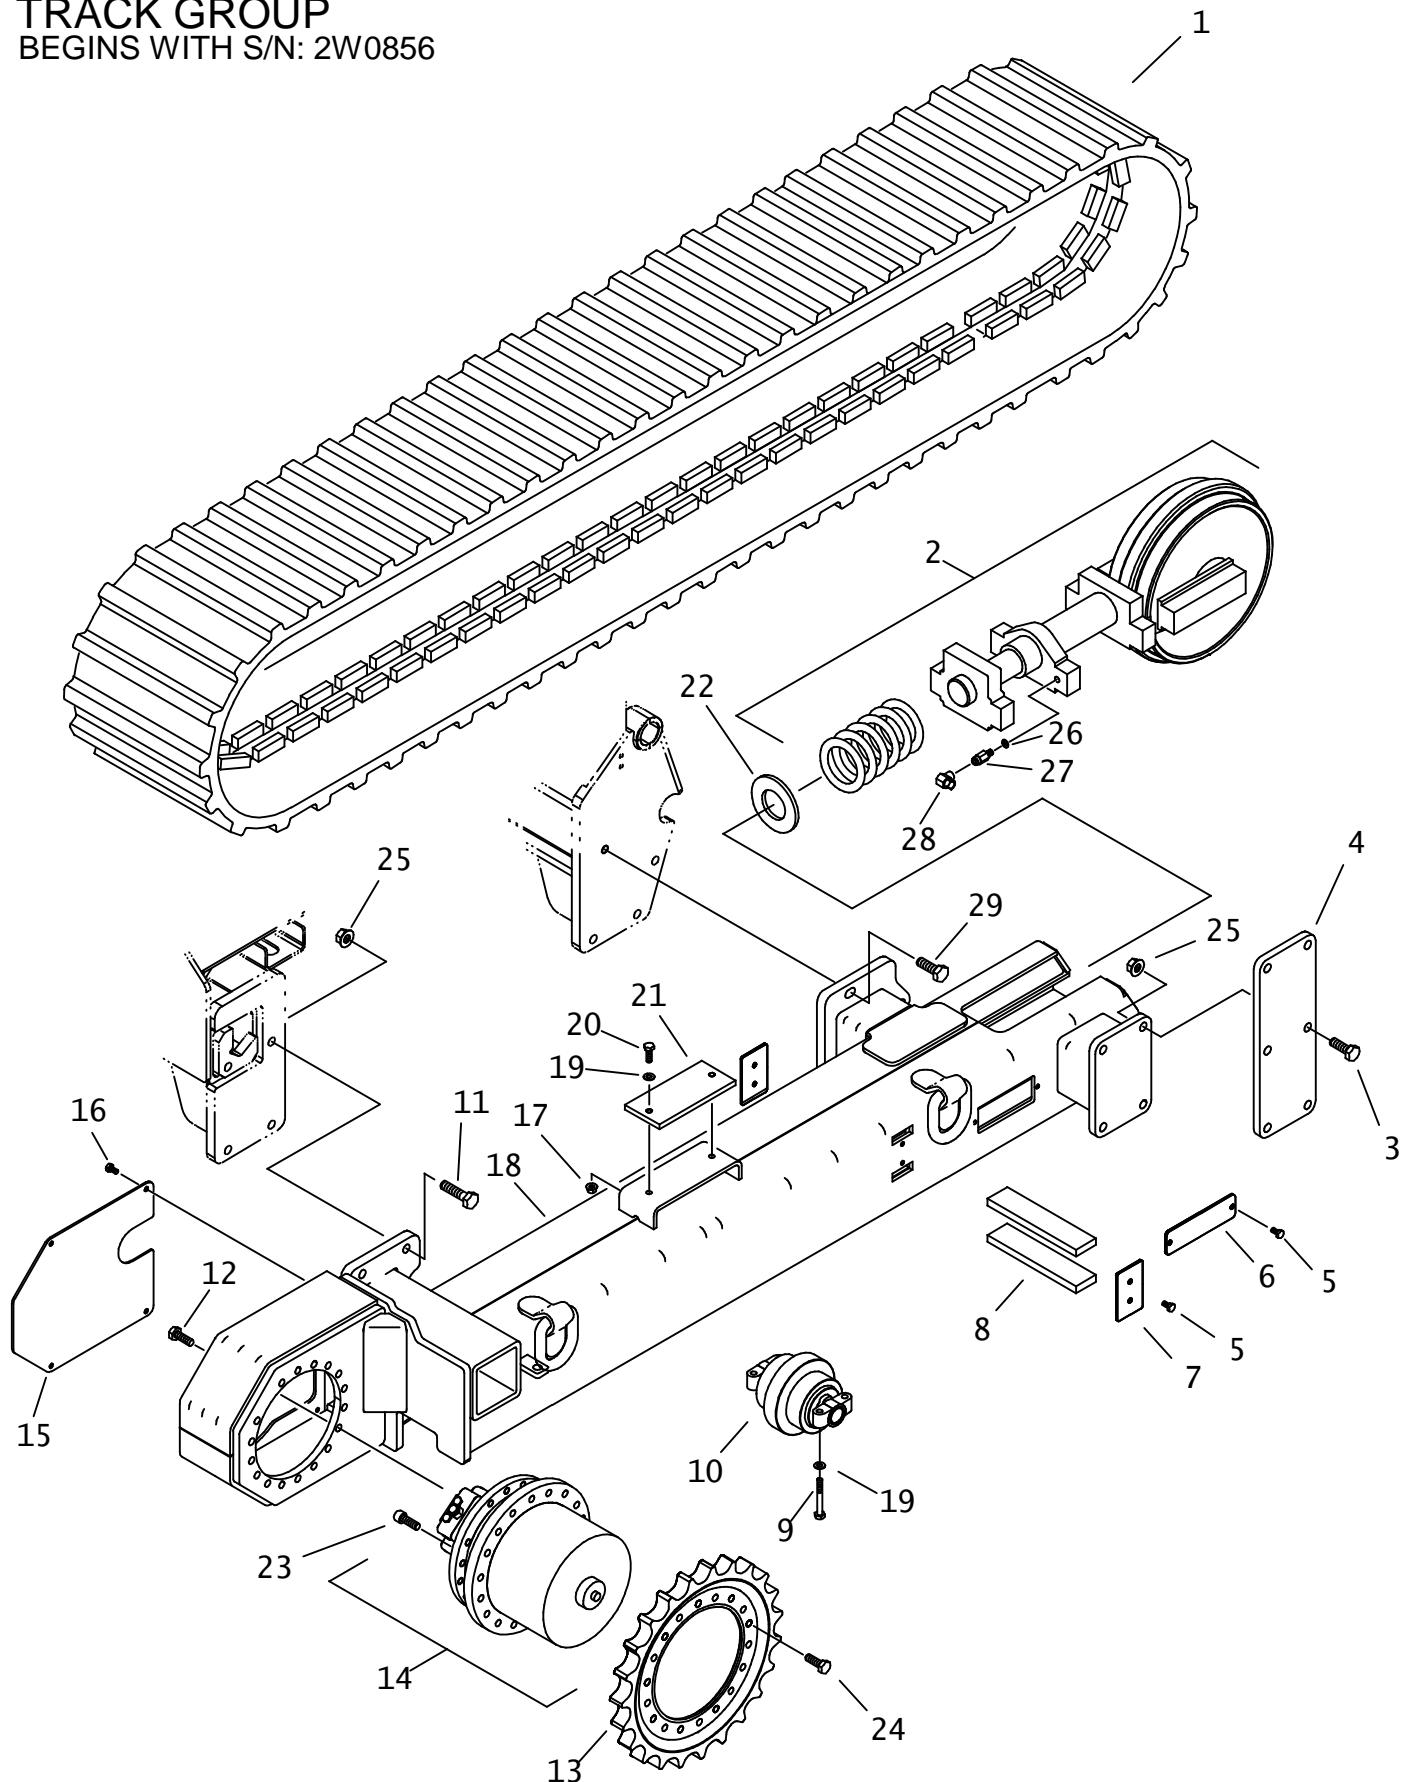

# TRACK GROUP

BEGINS WITH S/N: 2W0856

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-004	2	RUBBER TRACK (450MM, 88P, 71MM)	
2.	349-006	2	IDLER	
3.	106-075	6	SCREW (M20-2.50 X 60MM, 10.9)	
4.	315-984	1	SUPPORT PLATE	
5.	106-382	12	FLG LK SCREW (M10-1.5 X 20MM)	
6.	349-330	2	COVER	
7.	349-324	4	COVER	
8.	349-325	4	RECOIL STOP BAR	
9.	106-335	56	SCREW (M12-1.75 X 70MM)	USE LOCTITE 242 OR EQUIVALENT
10.	129-004	14	TRACK ROLLER	
11.	107-127	13	SCREW (M20-2.50 X 80MM, 10.9)	USE LOCTITE 242 OR EQUIVALENT
12.	105-998	34	SCREW (M16-2.00 X 40MM)	USE LOCTITE 242 OR EQUIVALENT
13.	175-736	2	SPROCKET (5.303" A23)	GROUND DRIVE
14.	166-162	2	GEARBOX & DRIVE PLANETARY	OBSOLETE, ENDS WITH S/N:CMWJT100HA0000023
	160-1173	2	GEARBOX & DRIVE PLANETARY	BEGINS WITH S/N:CMWJT100EA0000024
	166-139	1	GROUND DRIVE PLANETARY	OBSOLETE, ENDS WITH S/N:CMWJT100HA0000023
	160-1172	1	GROUND DRIVE PLANETARY	BEGINS WITH S/N:CMWJT100EA0000024
	159-910	1	HYDRAULIC MOTOR	
15.	349-336	2	COVER	
16.	106-654	8	FLG LK SCREW (M10-1.50 X 16MM)	
17.	106-685	4	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
18.	315-883	1	RIGHT ROLLER FRAME	
	315-882	1	LEFT ROLLER FRAME	
19.	106-397	60	WASHER (M12, HARDENED)	
20.	106-333	4	SCREW (M12-1.75 X 40MM, 8.8)	
21.	349-314	2	SLIDE PAD	
22.	370-382	2	SPACER RING	SEE FOOTNOTE 1
23.	107-116	4	SCREW (M16-2.00 X 35MM)	TORQUE TO 240 FT LBS; USE LOCTITE 242 OR EQUIVALENT.
24.	106-340	36	SCREW (M16-2.00 X 50MM)	TORQUE TO 240 FT LBS; USE LOCTITE 242 OR EQUIVALENT.
25.	106-356	19	FLG NUT (M20-2.50 10.9)	
26.	115-023	2	SEAL WASHER (M17)	
27.	115-022	2	VALVE ZERK (M16-1.50)	
28.	115-258	1	COUPLER (02NF, BUT)	
29.	106-607	3	SCREW (M20-2.50 X 50MM, 10.9)	USE LOCTITE 277 OR EQUIVALENT


NOT SHOWN:

FOOTNOTES:

- DO NOT INSTALL SPACER RINGS WITH IDLER UNITS HAVING .375" SPACER BARS.

NOTE:

**TRACK GROUP (STEEL)**  
BEGINS WITH S/N: 2W0856

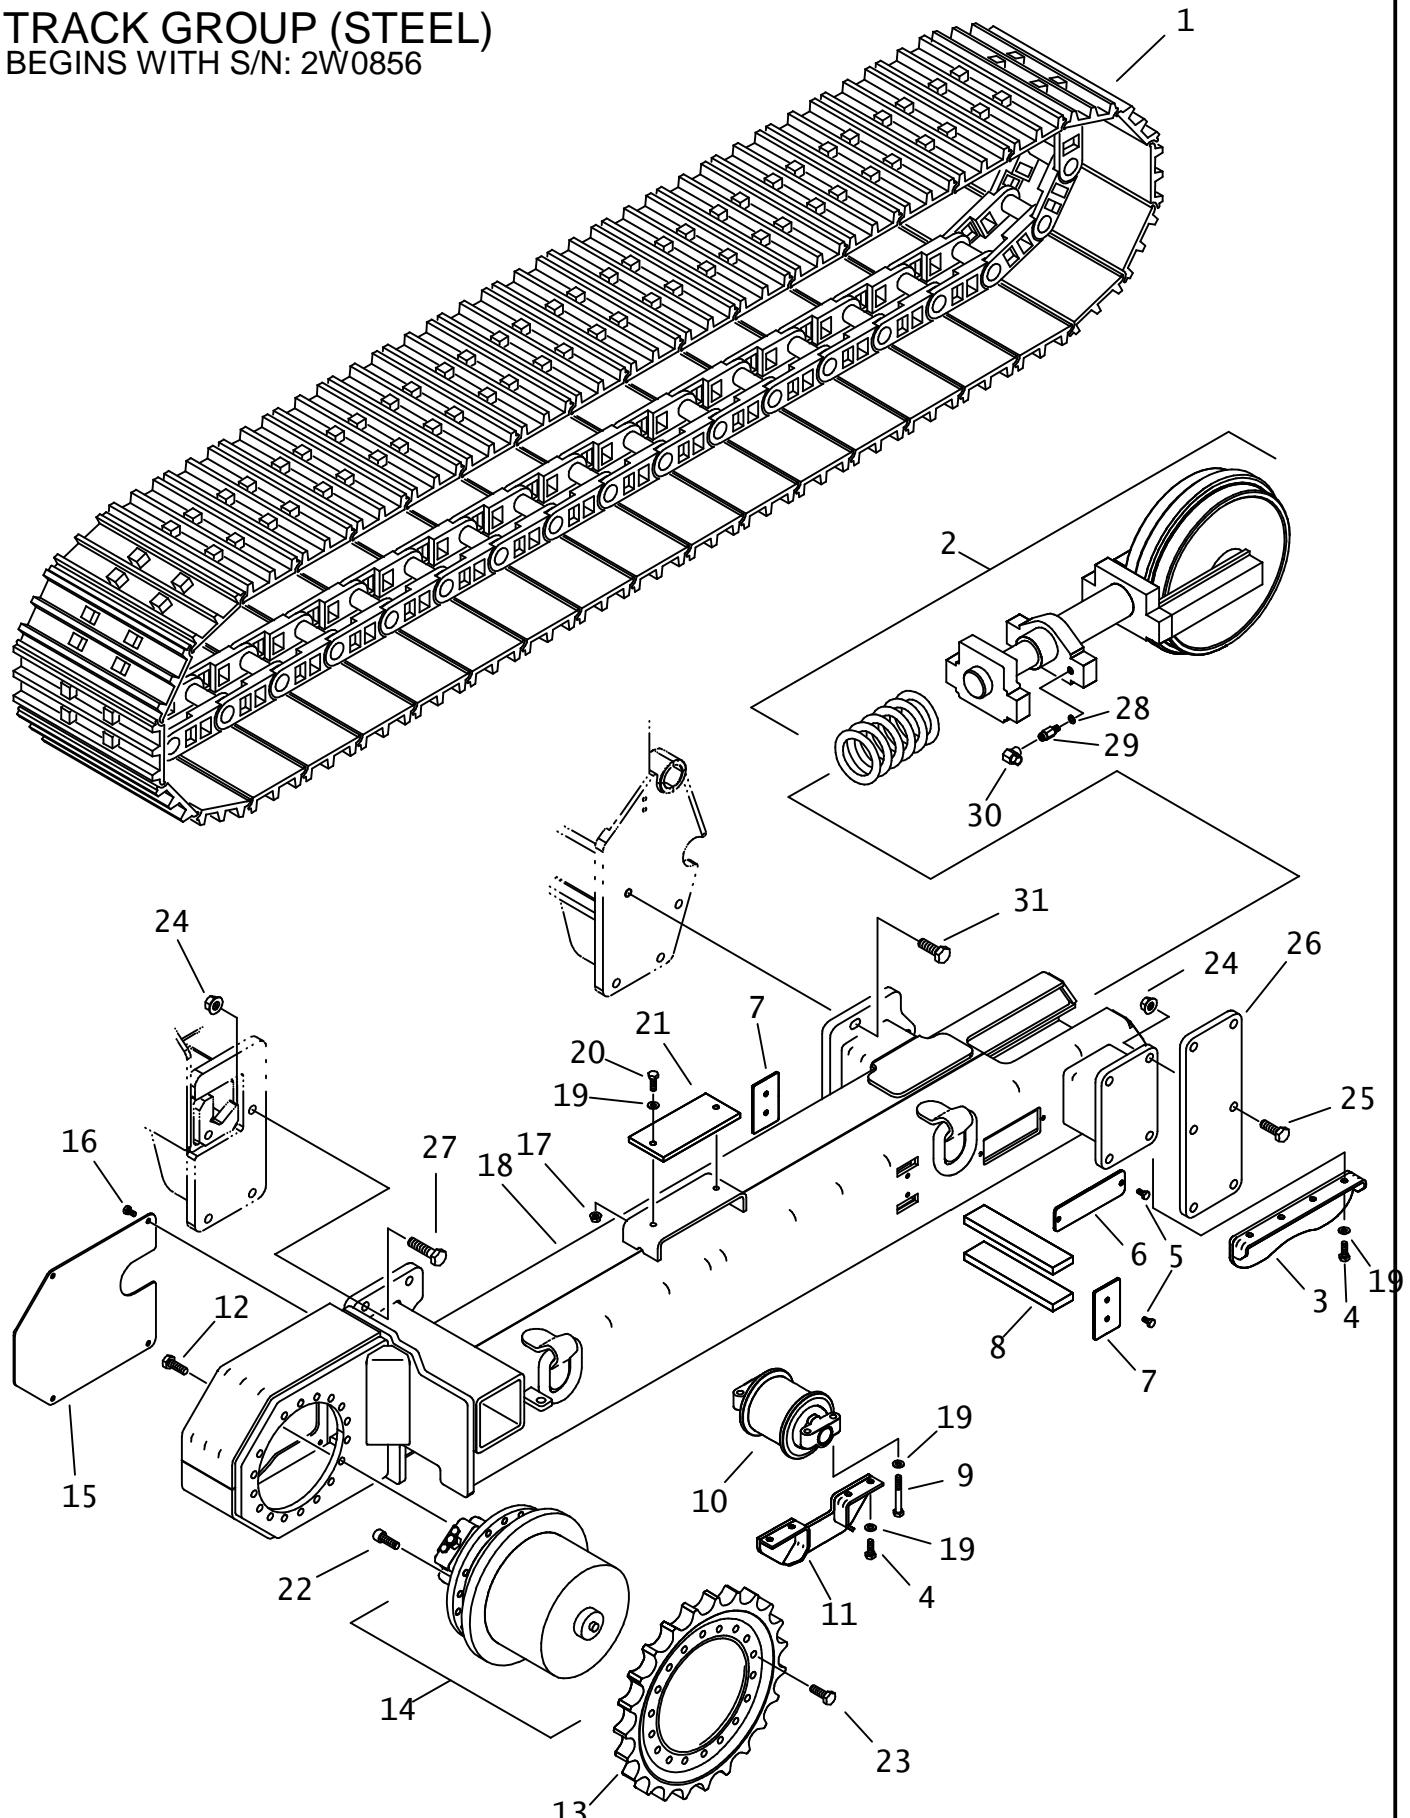

# TRACK GROUP (STEEL)

BEGINS WITH S/N: 2W0856


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-003	2	STEEL TRACK (450MM, 88P, 71MM)	
	370-501	44	TRACK LINK (RH)	
	370-502	44	TRACK LINK (LH)	
	370-503	86	TRACK BUSHING	
	370-504	2	TRACK MASTER BUSHING	
	370-505	86	TRACK PIN	
	370-506	2	TRACK MASTER PIN	
	370-507	176	TRACK SPACER	
2.	349-006	2	IDLER	
3.	349-341	4	FRONT GUARD	
4.	105-273	32	SCREW (M12-1.75 X 30MM)	
5.	106-382	12	FLG LK SCREW (M10-1.5 X 20MM)	
6.	349-330	2	COVER	
7.	349-324	4	COVER	
8.	349-333	4	RECOIL STOP BAR	
9.	106-335	56	SCREW (M12-1.75 X 70MM)	USE LOCTITE 242 OR EQUIVALENT
10.	349-002	14	TRACK ROLLER	
11.	349-337	4	MIDDLE GUARD	
12.	105-998	34	SCREW (M16-2.00 X 40MM)	USE LOCTITE 242 OR EQUIVALENT
13.	142-083	2	SPROCKET (5.515" A21)	
14.	[166-162]	2	GEARBOX & DRIVE PLANETARY	ENDS WITH S/N:CMWJT100HA0000023
	160-1173	2	GEARBOX & DRIVE PLANETARY	BEGINS WITH S/N:CMWJT100EA0000024
	[166-139]	1	GROUND DRIVE PLANETARY	ENDS WITH S/N:CMWJT100HA0000023
	160-1172	1	GROUND DRIVE PLANETARY	BEGINS WITH S/N:CMWJT100EA0000024
	159-910	1	HYDRAULIC MOTOR	
15.	349-336	2	COVER	
16.	106-654	8	FLG LK SCREW (M10-1.50 X 16MM)	
17.	106-685	4	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
18.	315-883	1	RIGHT ROLLER FRAME	
	315-882	1	LEFT ROLLER FRAME	
19.	106-397	92	WASHER (M12, HARDENED)	
20.	106-333	4	SCREW (M12-1.75 X 40MM, 8.8)	USE LOCTITE 242 OR EQUIVALENT
21.	349-314	2	SLIDE PAD	
22.	106-478	4	SCREW (M16-2.00 X 40MM, 10.9)	TORQUE TO 240 FT LBS; USE LOCTITE 242 OR EQUIVALENT
23.	106-340	36	SCREW (M16-2.00 X 50MM)	TORQUE TO 240 FT LBS; USE LOCTITE 242 OR EQUIVALENT
24.	106-356	19	FLG NUT (M20-2.50, 10.9)	
25.	106-075	6	SCREW (M20-2.50 X 60MM, 10.9)	
26.	315-984	1	SUPPORT PLATE	
27.	107-127	13	SCREW (M20-2.50 X 80MM, 10.9)	USE LOCTITE 277 OR EQUIVALENT
28.	115-023	1	SEAL WASHER (M17)	
29.	115-022	1	VALVE ZERK (M16-1.50)	
30.	115-258	1	COUPLER (O2NF, BUT)	
31.	106-607	3	SCREW (M20-2.50 X 50MM, 10.9)	USE LOCTITE 277 OR EQUIVALENT
NOT SHOWN:				

FOOTNOTES:

NOTE:

# GROUND DRIVE PLANETARY GEARBOX

ENDS WITH S/N:CMWJT100HA0000023

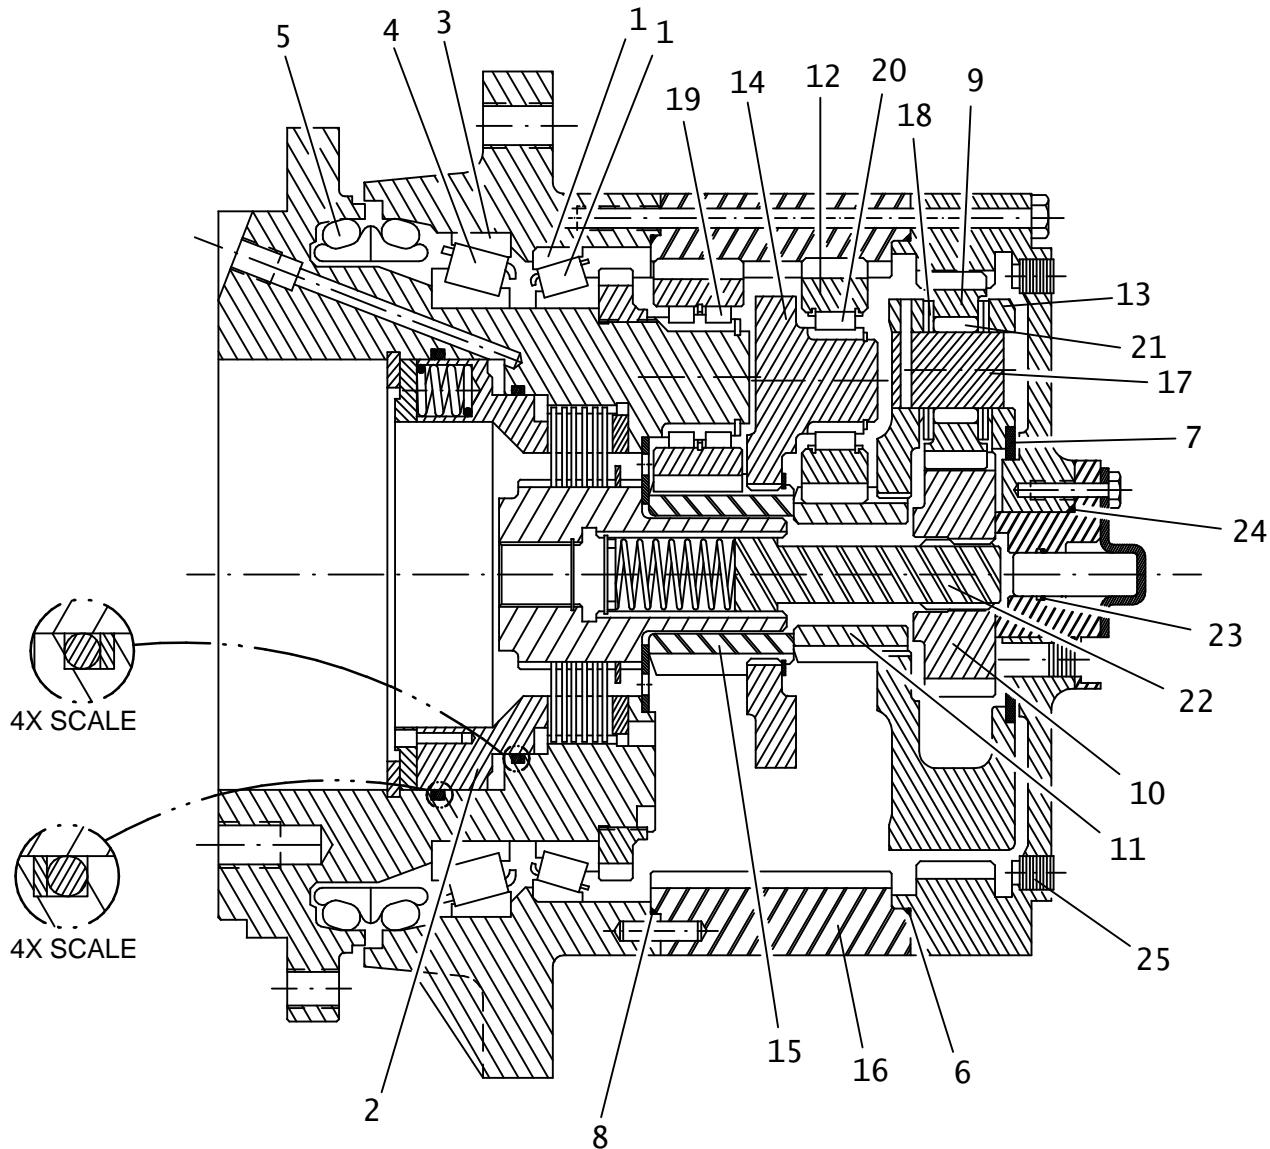

# GROUND DRIVE PLANETARY GEARBOX

ENDS WITH S/N:CMWJT100HA0000023


REF	PART		REMARKS
NO.	NUMBER	QTY	DESCRIPTION
1.	500-1571	1	BEARING
2.	160-508	1	BRAKE, INPUT (PLANETARY CT-26)
3.	125-192	1	TAPERED RACE
4.	125-187	1	TAPERED BEARING
5.	149-403	1	FACE SEAL
6.	157-203	1	O-RING
7.	105-771	1	THRUST WASHER
8.	149-405	1	O-RING (-178)
9.	230-006	3	PLANET GEAR
10.	230-007	1	SUN GEAR
11.	230-008	1	SUN GEAR (63,69,95, 110:1)
12.	230-009	3	PLANET GEAR (2ND STG. 110:1)
13.	166-215	1	CARRIER ( 1ST STG 63:1 )
14.	166-216	1	CARRIER (CT18 63,69,95,110:1)
15.	230-010	1	SUN GEAR
16.	230-011	1	RING GEAR
17.	166-213	3	PLANET SHAFT
18.	105-772	12	THRUST WASHER
19.	125-188	5	CYL ROLLER BEARING
20.	125-189	3	CYL ROLLER BEARING
21.	125-190	57	NEEDLE BEARING
22.	166-214	1	INPUT SHAFT
23.	149-406	1	O-RING (-112)
24.	149-407	1	O-RING(-131)
25.	115-153	3	PLUG (04N, SQ)

NOT SHOWN:

FOOTNOTES:

NOTE:

## STABILIZERS

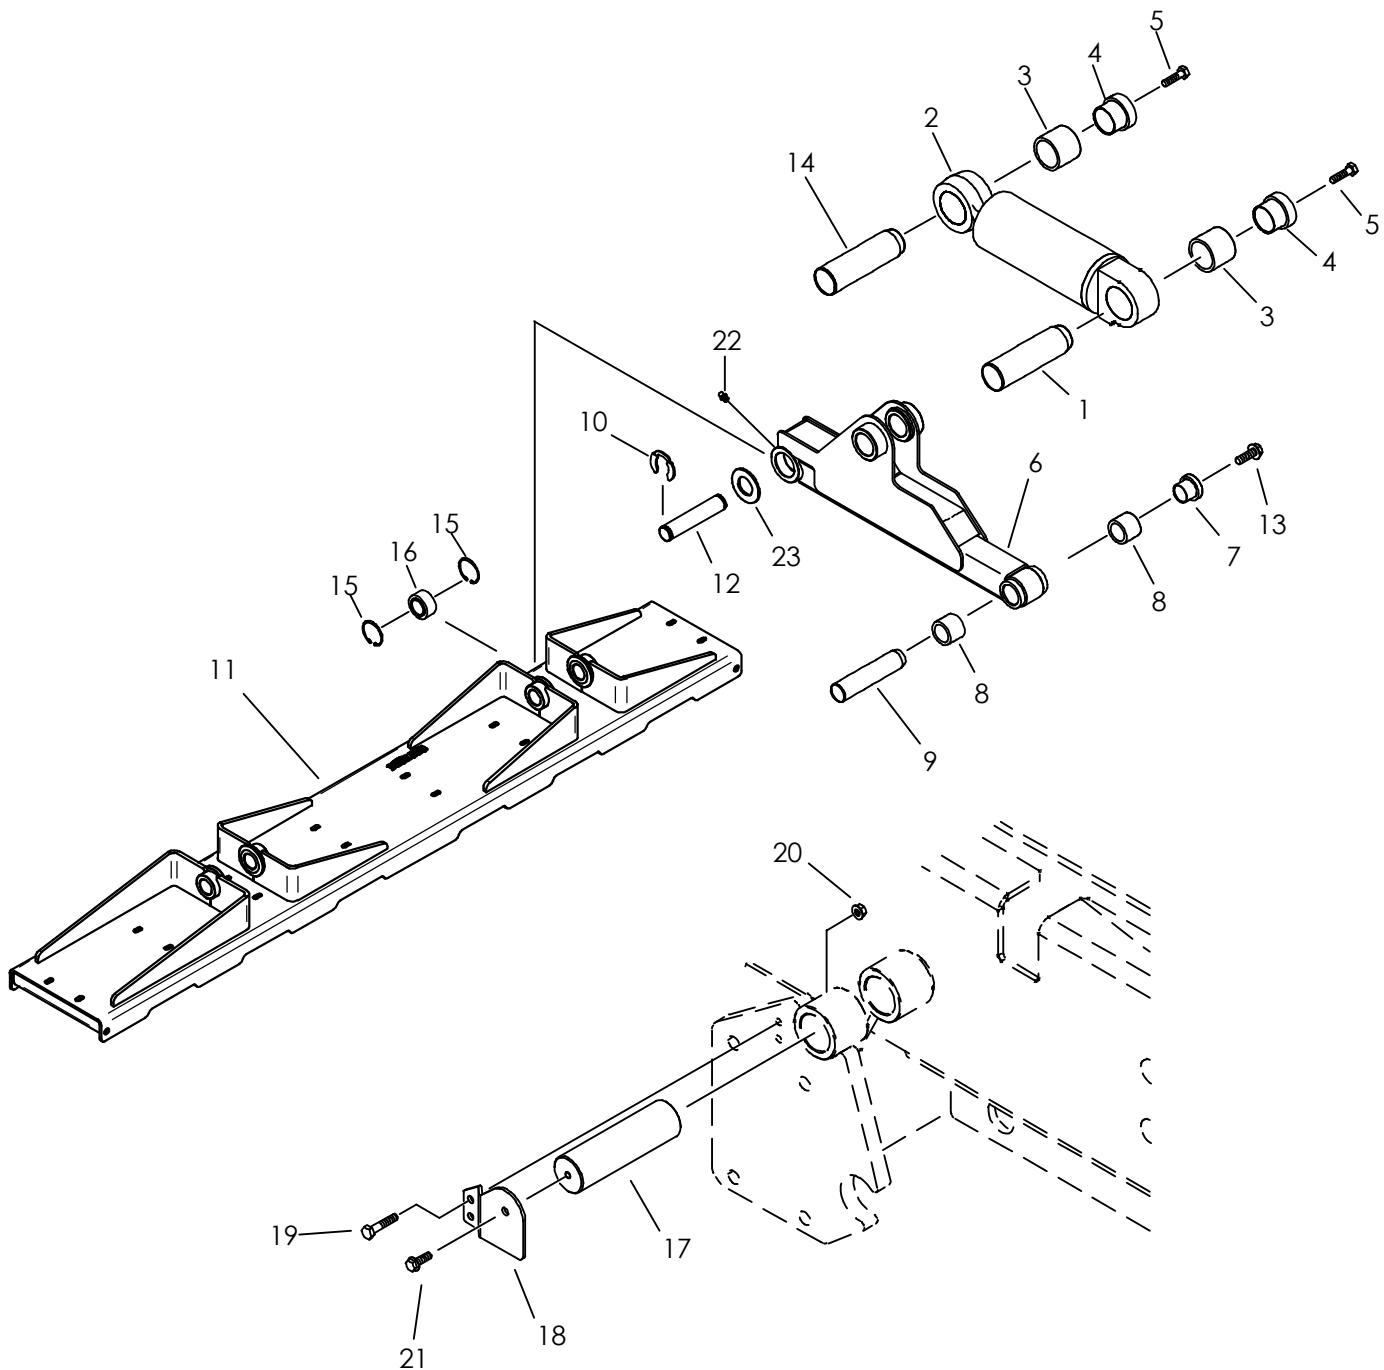

# STABILIZERS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	179-183	3	TAPERED PIN (57.1mm X 195mm)	
2.	151-095	4	CYL (4" X 2.25" X 8")	SEE FOOTNOTE 1
3.	125-781	8	COMPOSITION BUSHING (2.259")	
4.	184-031	7	TAPERED INSERT (2.25")	
5.	106-345	7	SCREW (M20-2.5 X 50mm)	
6.	349-511	3	STABILIZER	
	349-516	1	FRONT RIGHT STABILIZER	
7.	181-974	4	TAPERED INSERT (1.5")	
8.	125-772	8	COMPOSITION BUSHING (1.5")	
9.	179-241	4	TAPERED PIN (1.500" X 7.20")	
10.	115-511	8	KLIP RING (1-1/2")	
11.	309-307	1	FRONT STABILIZER PAD	SUPERCEDED BY 301-5015, SEE FOOTNOTE 2
	301-5015	1	FRONT STABILIZER PAD	SEE FOOTNOTE 2
	309-308	1	BACK STABILIZER PAD	
12.	349-956	2	PAD PIN	USED WITH BACK STABILIZER PAD AND FRONT STABILIZER PAD, 309-307
	301-2336	2	LONG PAD PIN	USE WITH FRONT STABILIZER PAD 301-5015, SEE FOOTNOTE 2
13.	105-970	4	FLG BOLT (5/8-NC X 1-3/4, GD8)	
14.	179-101	4	TAPERED PIN (57.1mm X 155mm)	
15.	115-509	8	INTERNAL SNAP RING (2.440")	
16.	125-131	4	SPHERICAL BEARING (1.500" ID)	
17.	370-040	1	PIN	
18.	370-039	1	RETAINER PLATE	
19.	106-995	2	FLG LK SCREW (M10-1.50 X 45mm)	
20.	106-387	2	FLG LOCKNUT (M10-1.50)	
21.	107-001	1	FLG LK SCREW (M10-1.50 X 25mm)	
22.	115-001	4	ZERK (02N)	
23.	106-509	2	WASHER (1-1/2", HARDENED)	USE WITH FRONT STABILIZER PAD 301-5015, SEE FOOTNOTE 2


NOT SHOWN:

FOOTNOTES:

- I. PORTS GO UP ON REAR CYLINDERS, DOWN ON FRONT CYLINDERS.
2. BEGINS WITH S/N CMWJT100-----

NOTE:

**AUXILIARY STABILIZER**  
BEGINS WITH S/N: 2W0856

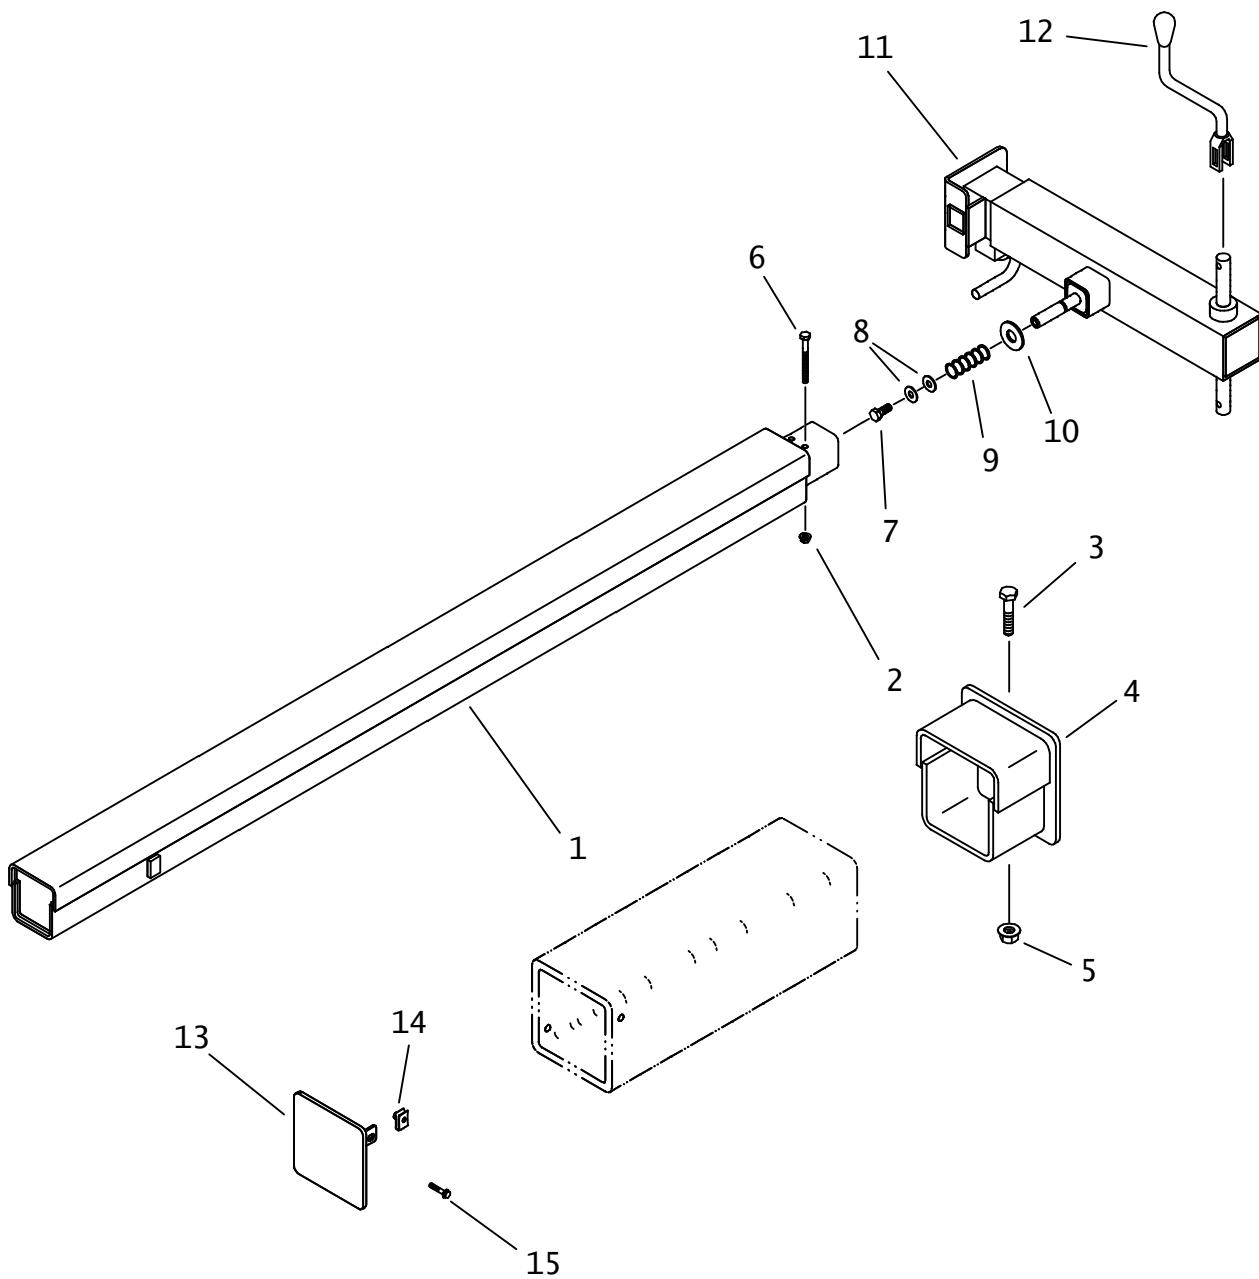

## AUXILIARY STABILIZER


BEGINS WITH S/N: 2W0856

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	315-940	1	STABILIZER ARM	
2.	105-047	2	LOCKNUT (3/8-NC)	
3.	106-098	1	FLG BOLT (3/4-NC X 2", GD8)	
4.	310-723	1	PLUG	
5.	105-340	1	FLG LOCKNUT (3/4-NC)	
6.	105-022	2	BOLT (3/8-NC X 4")	
7.	105-045	1	LK BOLT (1/2-NC X 1-1/4", NLK)	
8.	105-059	3	WASHER (7/16")	
9.	115-591	1	COMPRESSION SPRING	
10.	105-439	1	WASHER (7/8")	
11.	349-520	1	JACK	
12.	206-351	1	JACK CRANK	INCL MOUNTING HARDWARE
13.	349-878	1	CAP	
14.	106-551	2	CLIP NUT (M8-1.25)	
15.	106-989	2	FLG LK SCREW (M8-1.25 X 35MM)	

FOOTNOTES

NOTE:

## CAB ARM &amp; ROPS

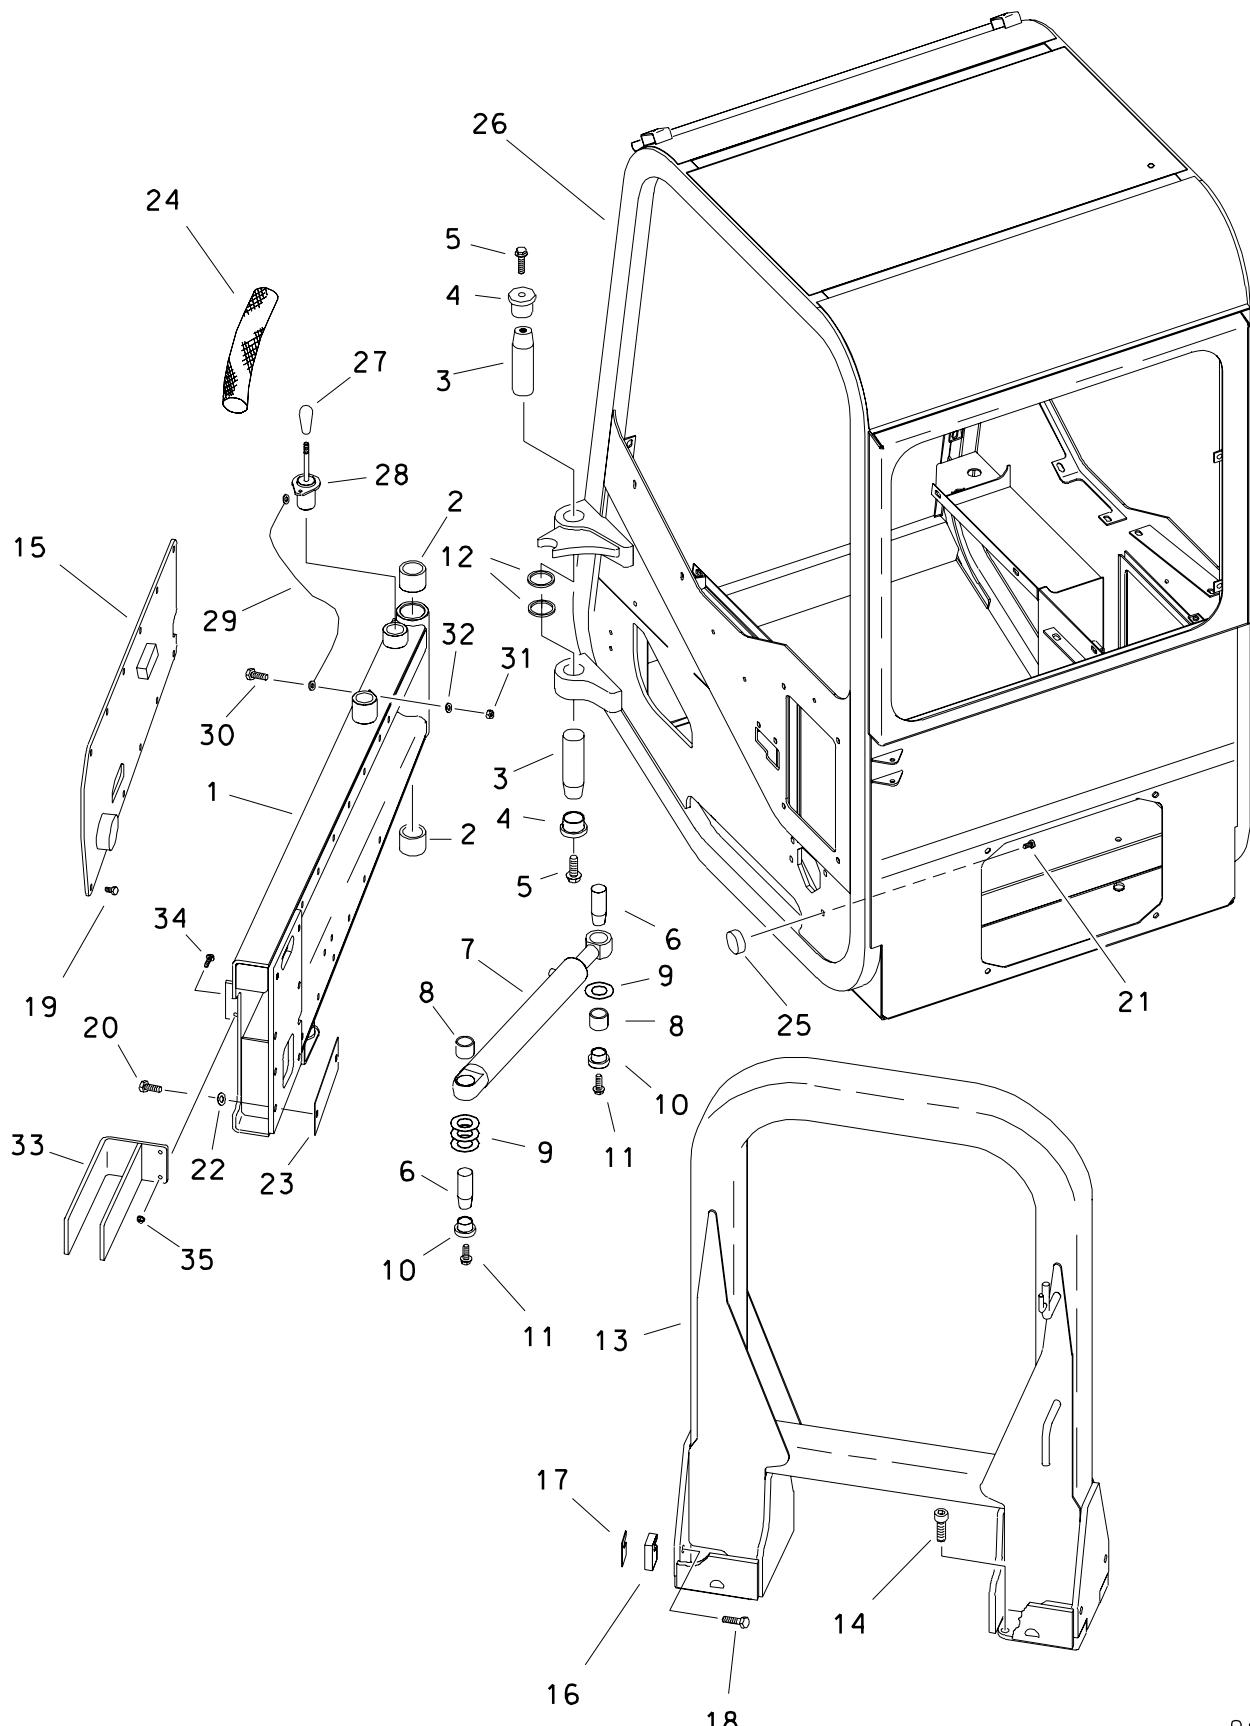


## CAB ARM &amp; ROPS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-172	1	CAB SUPPORT ARM	
2.	125-773	2	COMPOSITION BUSHING (1.75")	
3.	183-957	2	TAPERED PIN (1.75 X 4.33")	
4.	181-975	2	TAPERED INSERT (1.75")	
5.	106-470	2	FLG SCREW (M16-2.0 X 40MM)	
6.	183-765	2	TAPERED PIN (31.7MM X 110MM)	
7.	151-182	1	CYL (2" X 1.25" X 14.25")	
8.	125-771	2	COMPOSITION BUSHING (1.25")	
9.	180-118	4	BRASS BUSHING (1.25")	
10.	181-982	2	TAPERED INSERT (1.25")	
11.	106-469	2	FLG SCREW (M12-1.75 X 30MM)	
12.	501-125	2	MACHINERY BUSHING (1.784")	
13.	349-022	1	ROPS	
14.	107-275	12	SCREW (M20-2.5 X 55MM, SOC)	USE 277 LOCTITE OR EQUIVALENT: TORQUE TO 310 FT LBS
15.	349-487	1	COVER PLATE	ENDS WITH S/N: 2V2567
	320-293	1	COVER	BEGINS WITH S/N: 2W0856
16.	349-485	2	SPACER	
17.	349-486 AR		SHIM	
18.	106-341	2	SCREW (M16-2.0 X 70MM)	USE 277 LOCTITE OR EQUIVALENT
19.	106-559	13	SCREW (M12-1.75 X 25MM)	
20.	106-340	6	SCREW (M16-2.0 X 50MM)	
21.	106-654	1	FLG LK SCREW (M10-1.5 X 16MM)	
22.	106-398	6	WASHER (M16, HARDENED)	
23.	349-397	3	SHIM	SEE FOOTNOTE 1
24.	117-789	1	HOSE BAG (4" X 36")	
25.	116-788	1	BUFFER	
26.	307-683	1	CAB FRAME	
	599-296	-	CAB SPACER KIT	SEE FOOTNOTE 2
27.	110-375	1	KNOB (1/2-NC, YELLOW)	
28.	370-392	1	LOCKOUT PIN	
29.	110-239	1	LANYARD CABLE (13.5")	
30.	106-542	2	SCREW (M5-0.80 X 16MM, PAN PLPS)	
31.	106-850	2	LOCKNUT (M5-0.80)	
32.	106-388	2	WASHER (M6)	
33.	310-383	1	FORK BRACKET	
34.	106-163	2	FLG SCREW (M8-1.25 X 30MM)	
35.	106-386	2	FLG LOCKNUT (M8-1.25)	

## FOOTNOTES

1. USE 2 SHIMS IN TOP HOLES; 1 SHIM IN MIDDLE HOLES
2. THIS KIT IS REQUIRED WHEN INSTALLING CAB FRAME ON UNITS PRIOR TO S/N 2W0856

## CAB DOOR/WINDOWS

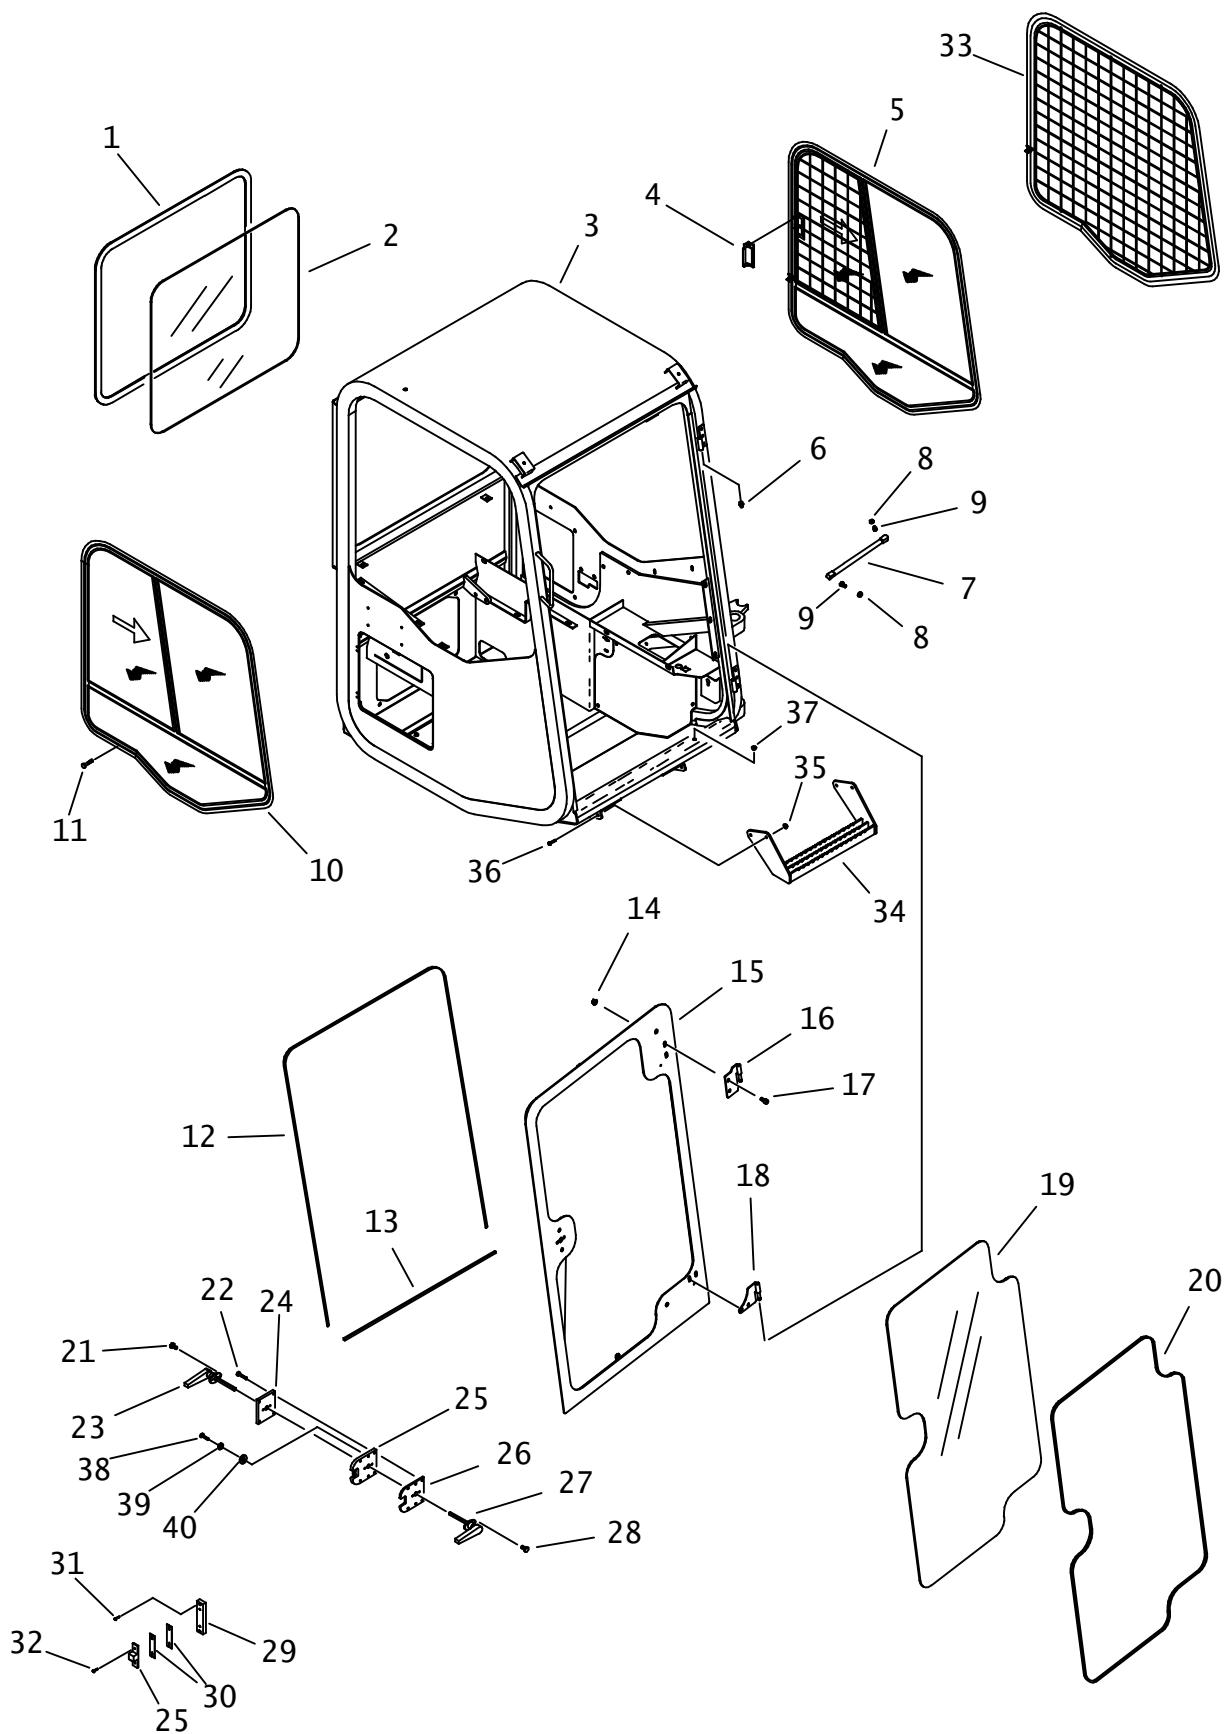

# CAB DOOR/WINDOWS

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	LOCKING GASKET (SOLD PER 1')	116-722	AR	1		USE 1 @ 115"
2.	REAR WINDOW	349-421		1		
3.	CAB FRAME	307-683		-		
4.	LATCH	370-420		1		
5.	LEFT WINDOW	349-419		1		
6.	ZERK (02N)	115-001		2		
7.	STRUT	111-016		2		
8.	FLG LOCKNUT (5/16-NC)	105-003		3		
9.	BALL SCREW (5/16-NC X 1/2")	110-655		4		
10.	RIGHT WINDOW	349-418		1		
11.	SCREW (M6-1.00 X 20MM, BUT SOC)	106-640		18		
12.	RUBBER SEAL	117-306		1		USE 1 @ 141"
13.	BULK EDGE (SOLD BY INCH)	116-848	AR			USE 1 @ 33"
14.	FLG LOCKNUT (M10-1.50MM)	106-387		4		
15.	DOOR FRAME	308-975		1		
16.	HINGE	308-823		1		
17.	BOLT (M10-1.50 X 20MM, BUT SOC)	107-537		4		
18.	HINGE	308-822		1		
19.	FRONT WINDSHIELD	370-418		1		
20.	LOCKING GASKET (SOLD PER 1')	116-722	AR			USE 1 @ 161"
21.	SCREW (#10-24 X 1/2", CSK PHLPS)	107-327		2		
22.	BOLT (1/4-NC X 1-1/2", BUT SOC)	106-925		6		
23.	HANDLE	111-062		1		
24.	LOCK PLATE	370-434		1		
25.	LATCH	111-061		1		
26.	LOCK PLATE	370-435		1		
27.	LEVER HANDLE	149-133		1		
28.	BOLT (#10-24 X 1-1/4", SOC, GD8)	106-408		2		
29.	SPACER BAR	370-429		1		
30.	SHIM	370-438	AR			
31.	FLG SCREW (M6-1.00 X 25MM)	106-848		2		
32.	FLG SCREW (M6-1.00 X 20MM)	106-161		2		
33.	WINDOW	349-420		1		
34.	STEP	315-557		1		BEGINS WITH S/N: 2W0856
35.	FLG LOCKNUT (M8-1.25)	106-386		4		
36.	FLG SCREW (M8-1.25 X 30MM)	106-163		4		
37.	NUTINSERT (5/16-NC)	106-038		1		
38.	BOLT (1/4-NC X 1-3/4", SOC)	107-296		2		
39.	WASHER (3/16")	105-284		2		
40.	WASHER (1/4" ID X 1" OD)	107-936		2		

NOT SHOWN:


FOOTNOTES:

KEY IS SHORTENED ON ITEM #23 TO 20mm

KEY IS SHORTENED ON ITEM #27 TO 40mm

NOTE:

## SEAT MOUNT WITHOUT HEAT/AIR

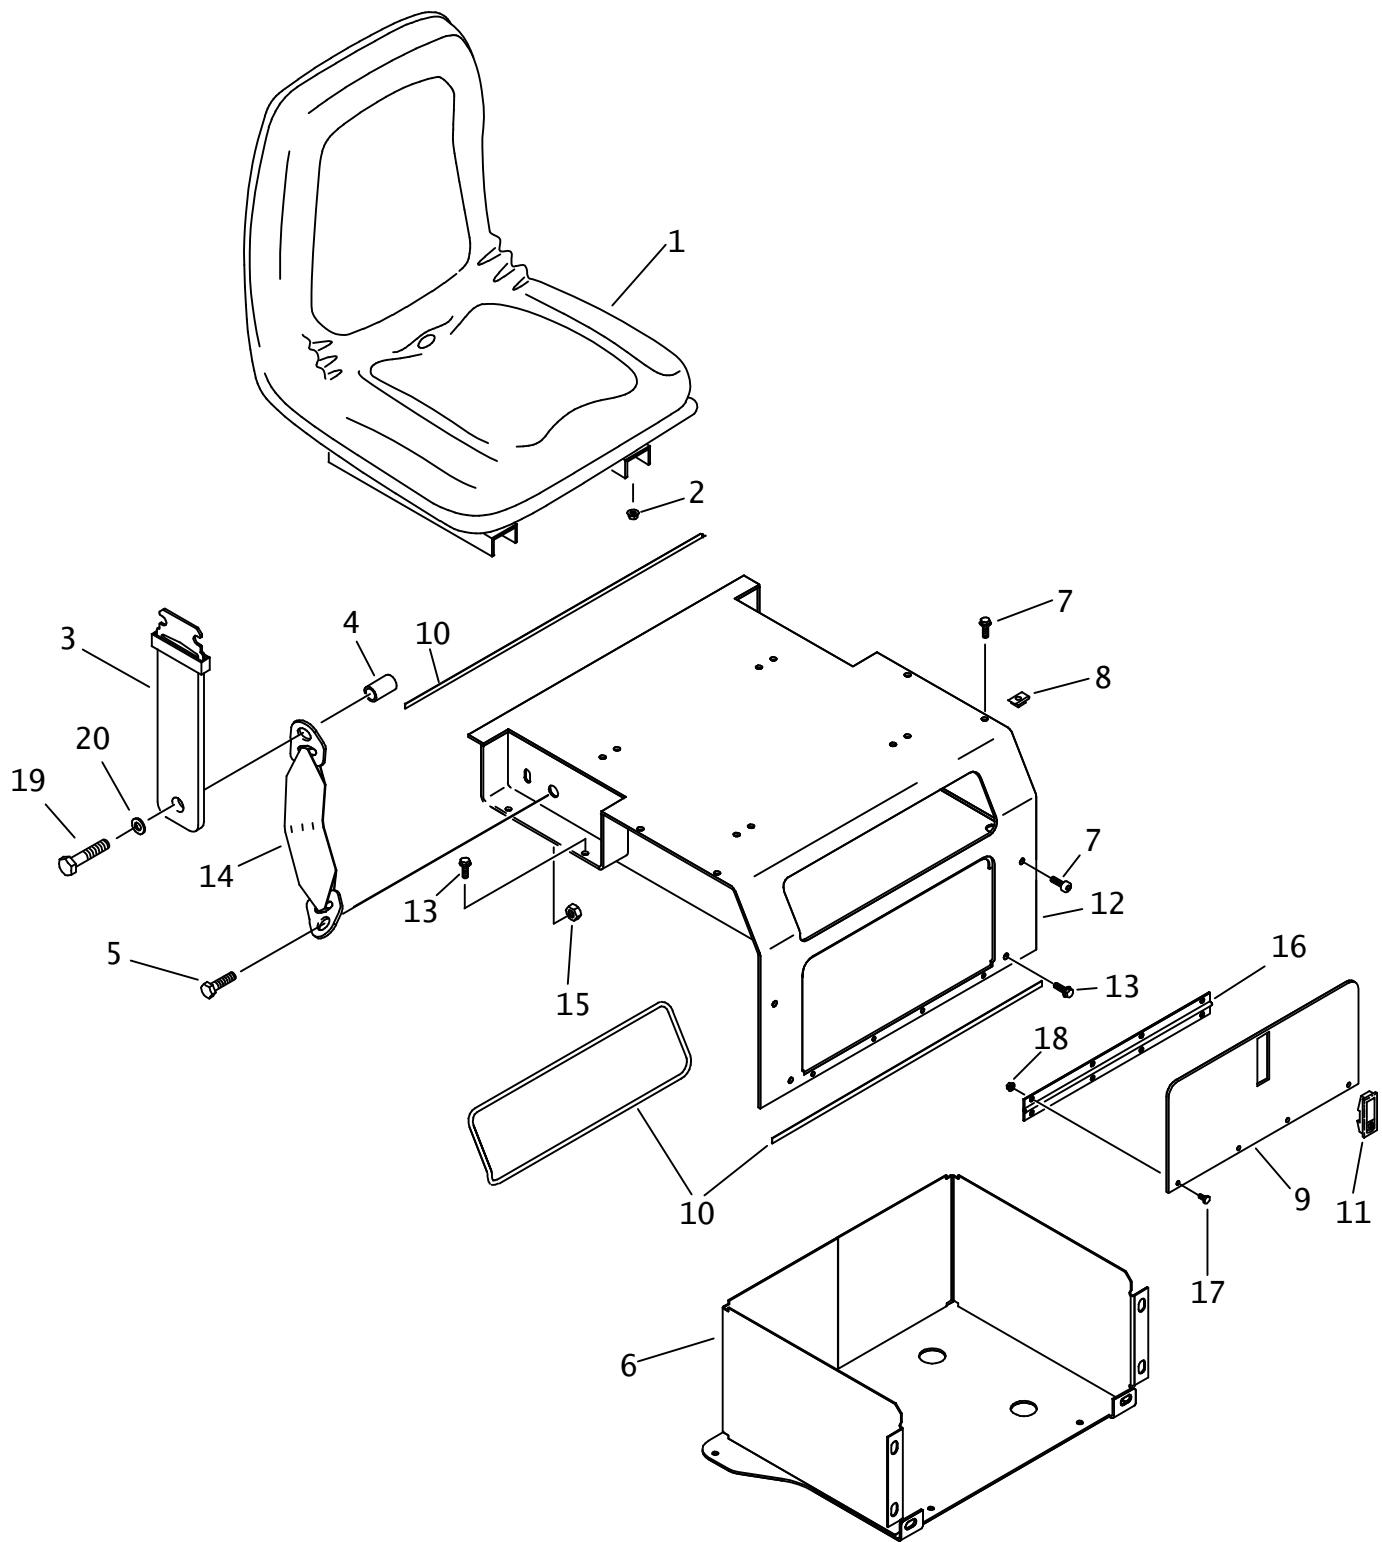


# SEAT MOUNT

## WITHOUT HEAT/AIR

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	[117-100]	1	SEAT	
	117-631	1	SEAT ASSY	ENDS WITH S/N 2Z0237 BEGINS WITH S/N 2Z0658
2.	105-003	4	FLG LOCKNUT (5/16-NC)	
3.	[171-011]	1	SEAT BELT SET	ENDS WITH S/N 2Z0237 BEGINS WITH S/N 2Z0658
	118-271	1	SEAT BELT	
4.	184-252	2	BUSHING (.562" x 1" x .590")	
5.	105-247	2	SCREW (M12-1.75 x 35MM)	
6.	370-128	1	LOWER COMPARTMENT	
7.	106-381	8	FLG LK SCREW (M8-1.25 x 25MM)	
8.	106-551	12	CLIP NUT (M8-1.25)	USE 2 @ 23"; 1 @ 40"
9.	370-130	1	COMPARTMENT DOOR	
10.	116-723 AR	BULK EDGE (3/32", SOLD PER 1')		
	256-665 AR	ADHESIVE		
11.	117-558	1	ADJUST LEVER LATCH (LOCKING)	
	[214-961]		KEY, PAIR (BASE CODE)	INCL KEY
	217-309		LOCK PLUG 4/ LATCH (BASE CODE)	
	110-757	1	LEVER LATCH (ADJUST, LOCKING)	
	110-596		KEY (PAIR)	
12.	370-126	1	SEAT MOUNT	
13.	106-162	6	FLG SCREW (M8-1.25 x 20mm)	
14.	115-430	2	SEAT BELT TETHER	
15.	106-685	2	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
16.	110-430	1	HINGE (14-5/8")	
17.	106-234	8	SCREW (M6-1.0 x 12mm)	
18.	106-385	8	FLG LOCKNUT (M6-1.00)	
19.	106-477	2	SCREW (M12-1.75 x 45MM, 10.9)	
20.	106-397	2	WASHER (M12, HARDENED)	

FOOTNOTES

NOTE:

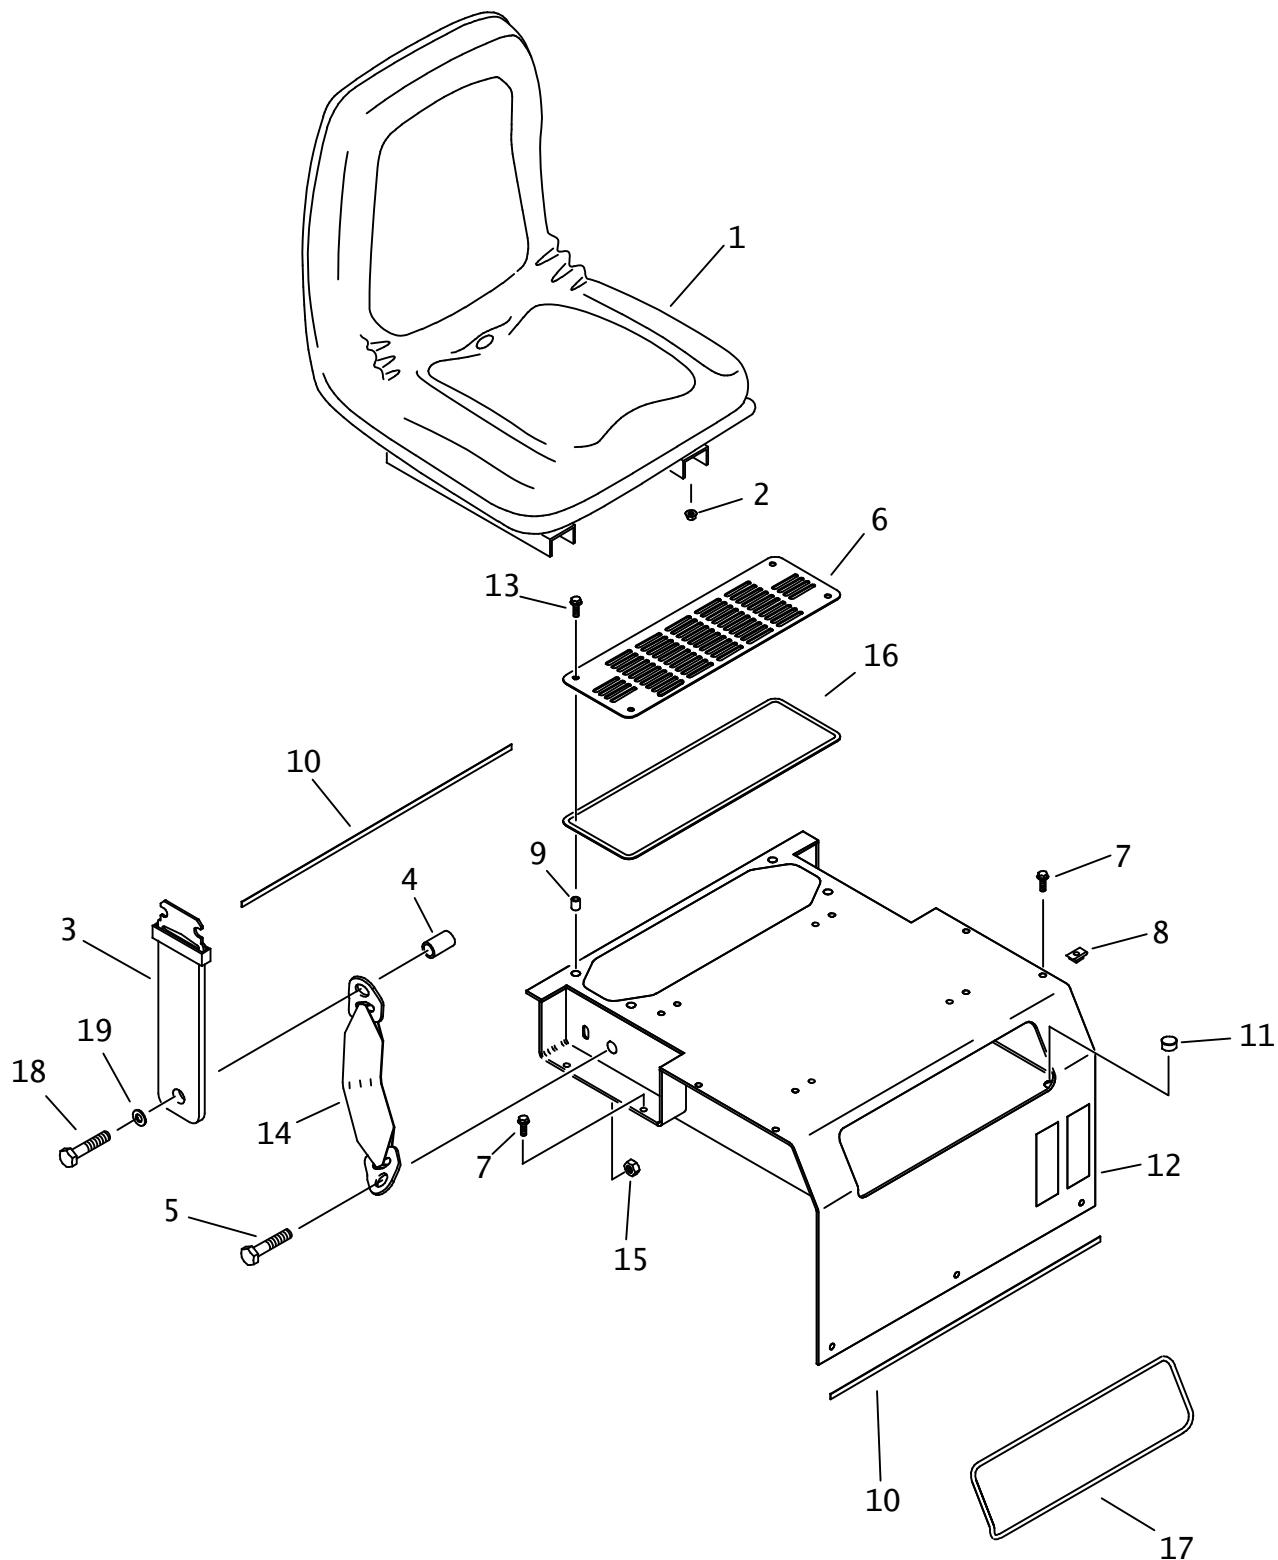**SEAT MOUNT  
WITH HEAT/AIR**

# SEAT MOUNT WITH HEAT/AIR


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	[117-100]	1	SEAT	ENDS WITH S/N 2Z0237
	117-631	1	SEAT ASSY	BEGINS WITH S/N 2Z0658
2.	105-003	4	FLG LOCKNUT (5/16-NC)	
3.	[171-011]	1	SEAT BELT SET	ENDS WITH S/N 2Z0237
	118-271	1	SEAT BELT	BEGINS WITH S/N 2Z0658
4.	184-252	2	BUSHING (.562" X 1" X .590")	
5.	105-247	2	SCREW (M12-1.75 X 35MM)	
6.	349-746	1	VENT PLATE	
7.	106-334	8	SCREW (M8-1.25 X 25MM, BUT SOC)	
8.	106-551	10	CLIP NUT (M8-1.25)	
9.	105-633	4	NUTINSERT (M8X1.25) 3.8-7.9" THK	
10.	116-723 AR	BULK EDGE (3/32", SOLD PER 1')	USE 2 @ 23"	
	256-665 AR	ADHESIVE		
11.	110-653	2	PLUG (3/4")	
12.	349-464	1	SEAT MOUNT	
13.	106-162	4	FLG SCREW (M8-1.25 X 20mm)	
14.	115-430	2	SEAT BELT TETHER	
15.	106-685	2	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
16.	116-724 AR	BULK SEAL (3/32", SOLD PER 1')	USE 1 @ 44"	
17.	116-723 AR	BULK EDGE (3/32", SOLD PER 1')	USE 1 @ 40"	
18.	106-477	2	SCREW (M12-1.75 X 45MM, 10.9)	
19.	106-397	2	WASHER (M12, HARDENED)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## CAB COVERS

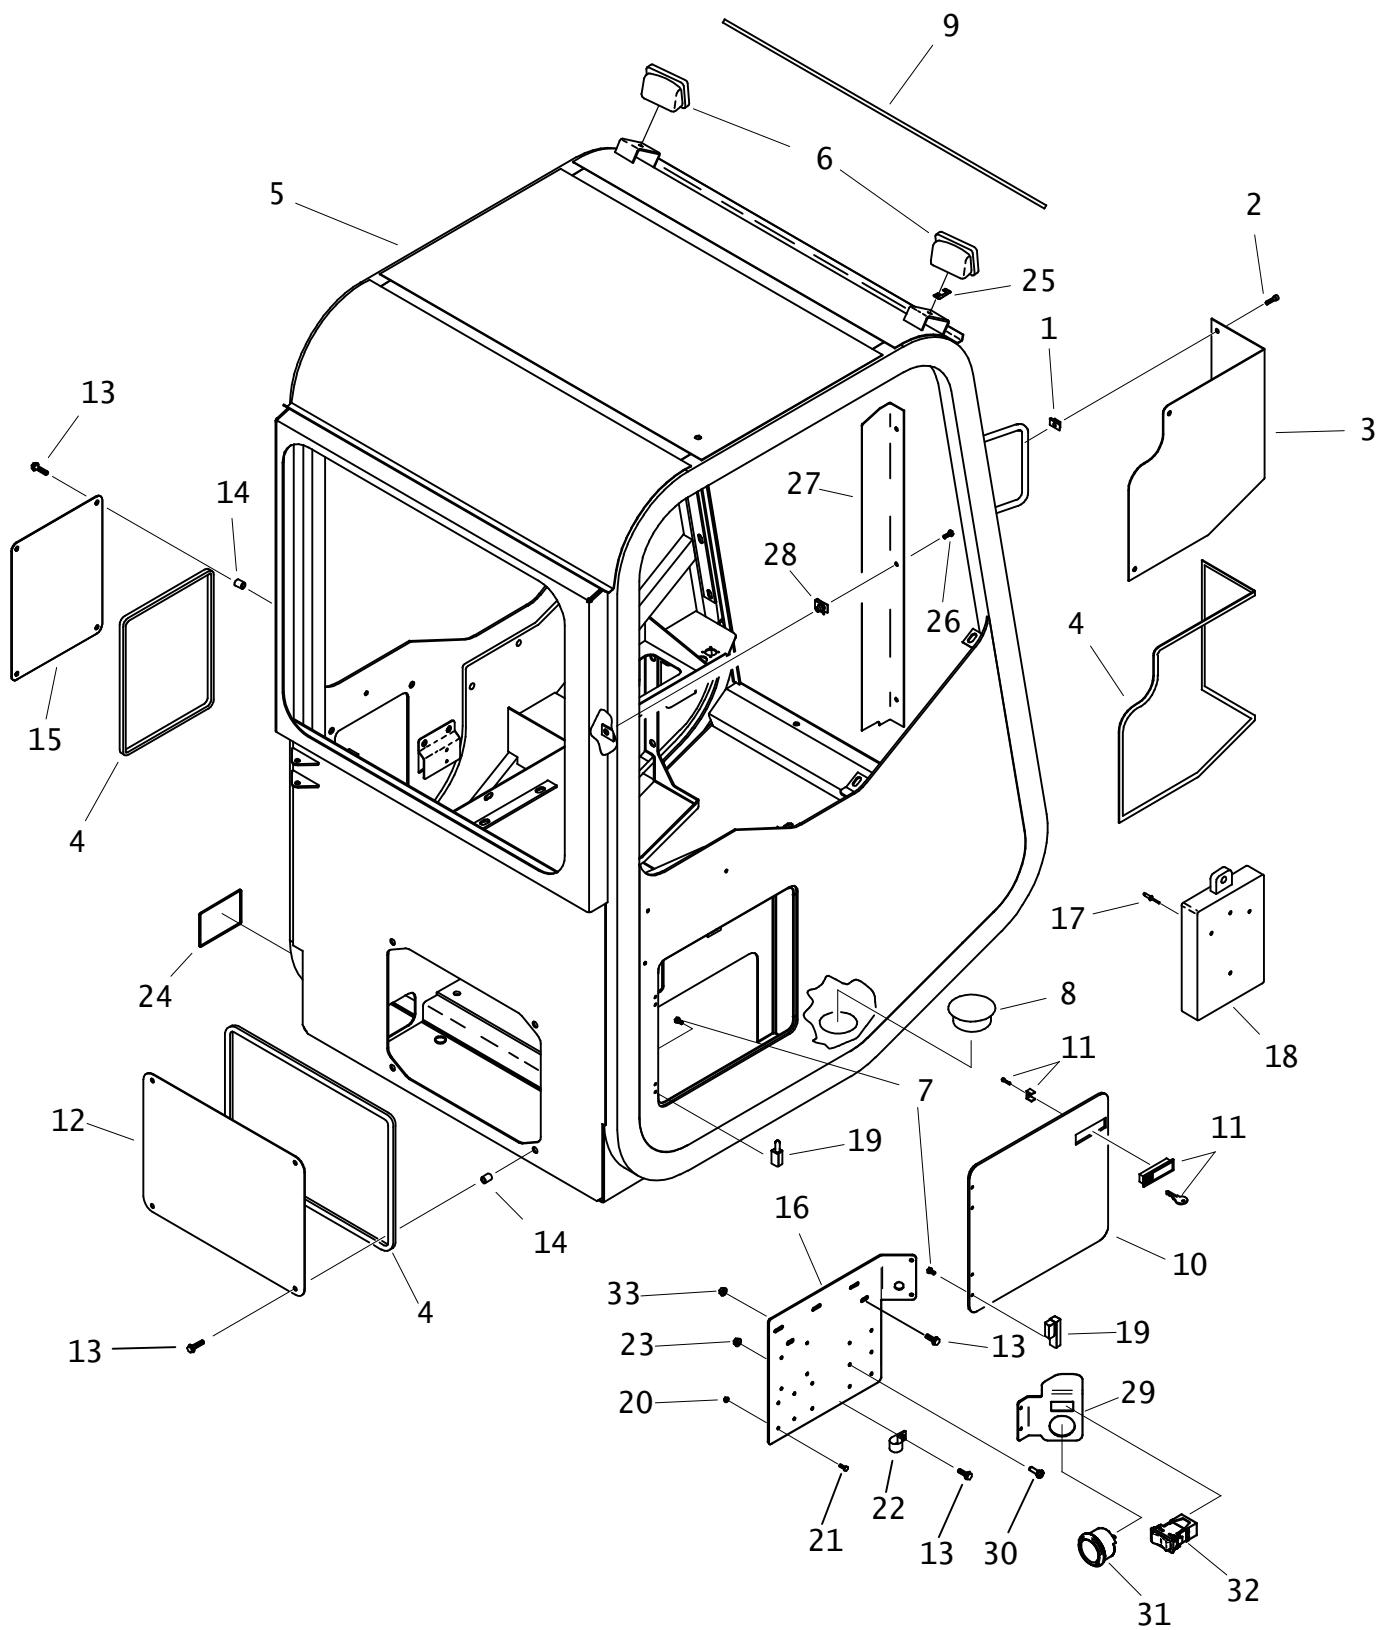

# CAB COVERS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	106-551	4	CLIP NUT (M8-1.25)	
2.	107-334	4	SCREW (M8-1.25 X 25MM, BUT SOC)	
3.	349-479	1	LOWER COVER	
4.	116-724	2	BULK SEAL (3/32", SOLD PER 1')	2      3"
5.	307-683	-	CAB FRAME	1      1/2"
6.	217-057	2	WORKING LIGHT - CLEAR	
7.	106-228	2	SCREW (M5-0.80 X 10MM)	
8.	110-947	1	DOME PLUG (3")	
9.	115-686	1	BULK EDGE (5/32", SOLD PER 1")	1      3 "
10.	349-477	1	ACCESS DOOR	
11.	117-558	1	ADJUST LEVER LATCH (LOCKING)	
	214-961		KEY, PAIR (BASE CODE)	
	217-309		LOCK PLUG 4/LATCH (BASE CODE)	
12.	349-745	1	ACCESS COVER	
13.	106-162	11	FLG SCREW (M8-1.25 X 20MM)	
14.	105-633	4	NUTSERT (M8-1.25) 3.8-7.9" THK	
15.	349-475	1	ACCESS COVER	
16.	307-540	1	RELAY PANEL	
17.	110-560	3	POP RIVET (3/16" X 1/2", ALUM)	
18.	250-622	1	MANUAL COMPARTMENT	
19.	111-002	2	LIFT-OFF HINGE (OFF-SET)	
20.	106-850	29	LOCKNUT (M5-0.80)	
21.	106-542	29	SCREW (M5-0.80 X 16MM, PAN PLPS)	
22.	110-332	1	BOLT-ON CLAMP (1-5/8")	
23.	10 - 38	1	L LOC N T (M8-1.25)	
2 .	115- 8	1	B L (5/32" OL P 1")	1    1    1/2"
25.	211-0 1	2	CONN CTO CL P	
2 .	10 - 0	3	C (M -1.00 20MM B T OC)	
2 .	3 - 8	1	CABL CO	
28.	10 - 5	3	CL P N T (M -1.00)	
2 .	300-82	1	B AC T	AT   N T   ONL
30.	10 - 5 2	2	C (M5-0.80 1 mm PAN PLP )	AT   N T   ONL
31.	215-128	1	O M T	AT   N T   ONL
32.	21 - 12	1	OC TC	AT   N T   ONL
33.	10 - 850	2	LOC N T (M5-0.80)	AT   N T   ONL

## NOT SHOWN:

116-737 1 FLOOR MAT  
 115-318 AR BULK NON-SKID (6", SOLD PER 1') USE 1 @ 30"  
 215- 3 A CABL 1 ga 2                          2    1 1/2  
 21 -103 2 A MAL CONN CTO  
 21 -0 2 2 A AT PAC MAL CONN CTO  
 21 -0 8 PAC A P T M NAL MAL  
 21 -10 8 PAC A MAL T M NAL  
 15 - 5 12 AT PAC AL (2.80MM)

## FOOTNOTES:


## NOTE:

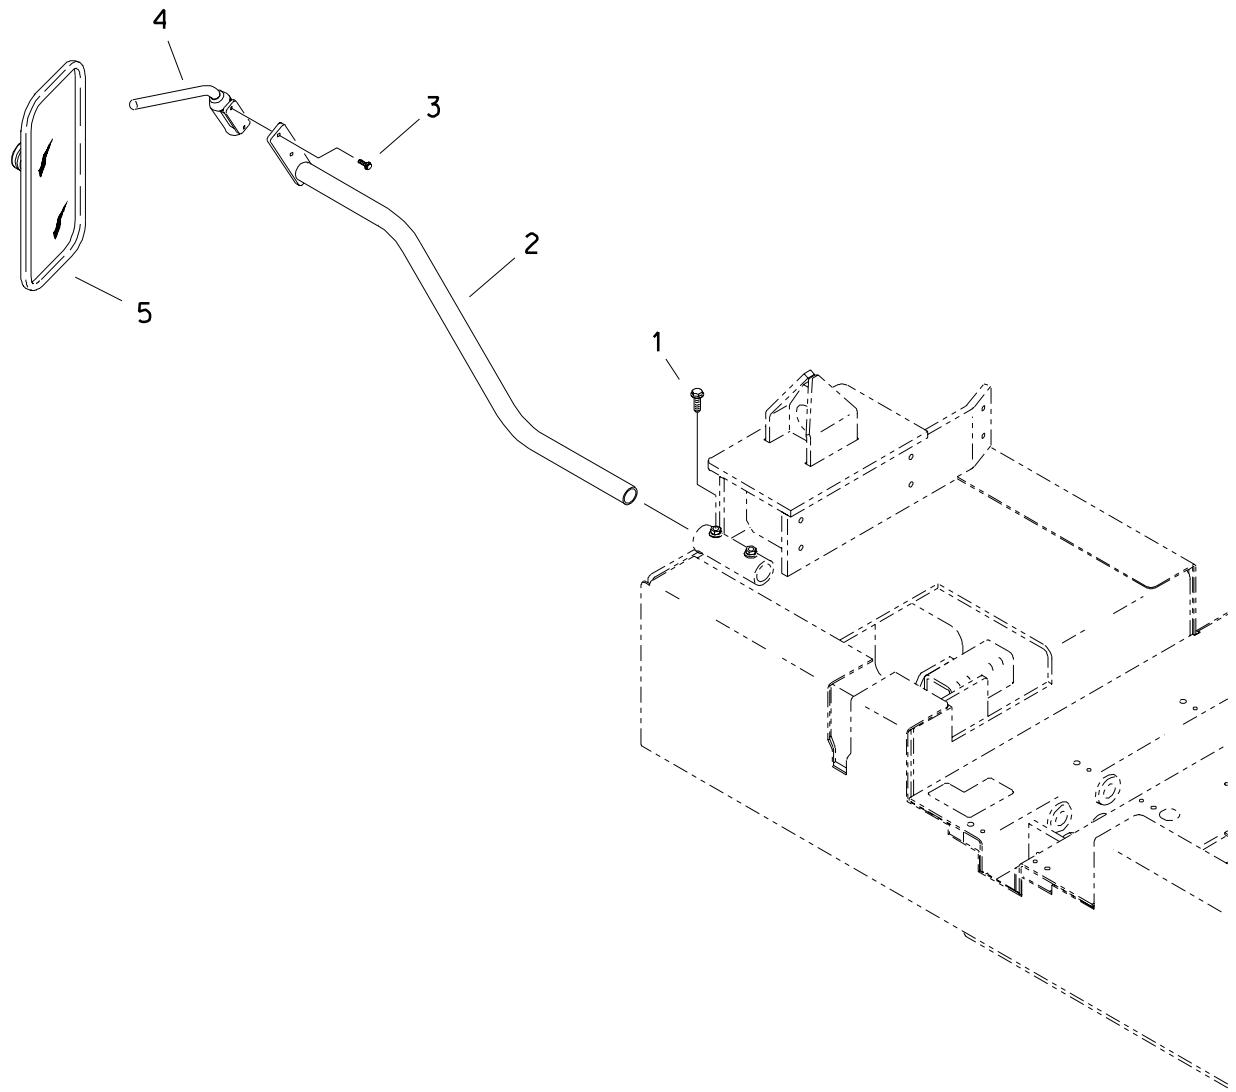REAR VIEW MIRROR  
LEFT SIDE

# REAR VIEW MIRROR LEFT SIDE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	105-245	2	SCREW (M10-1.50 X 25MM)	
2.	370-399	1	ADJUSTMENT ARM	
3.	106-161	2	FLG SCREW (M6-1.00 X 20MM)	
4.	116-851	1	MIRROR ARM	
5.	214-426	1	CONVEX MIRROR	

FOOTNOTES

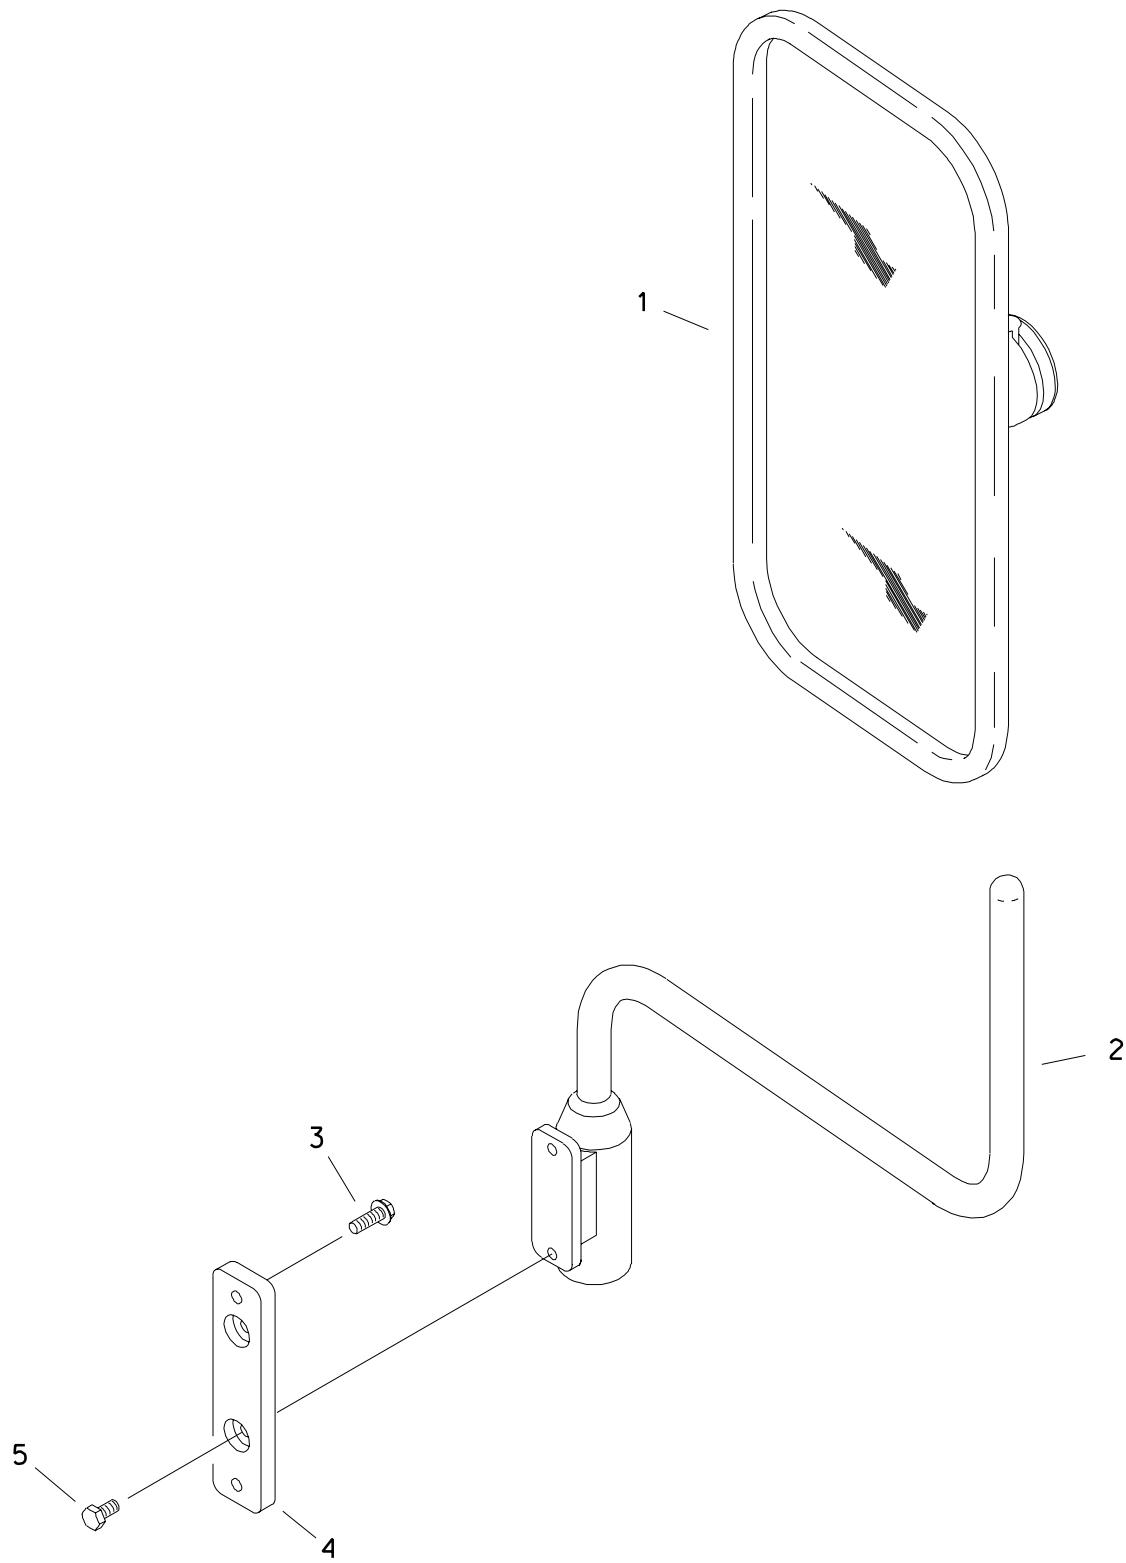REAR VIEW MIRROR  
RIGHT SIDE


# REAR VIEW MIRROR

## RIGHT SIDE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	214-426	1	CONVEX MIRROR	
2.	116-874	1	MIRROR ARM	
3.	106-541	2	FLG SCREW (M6-1.00 X 20MM)	
4.	370-445	1	MOUNT PLATE	
5.	106-378	2	FLG LK SCREW (M6-1.00 X 12MM)	

FOOTNOTES

## WINDSHIELD WIPERS/WASHER

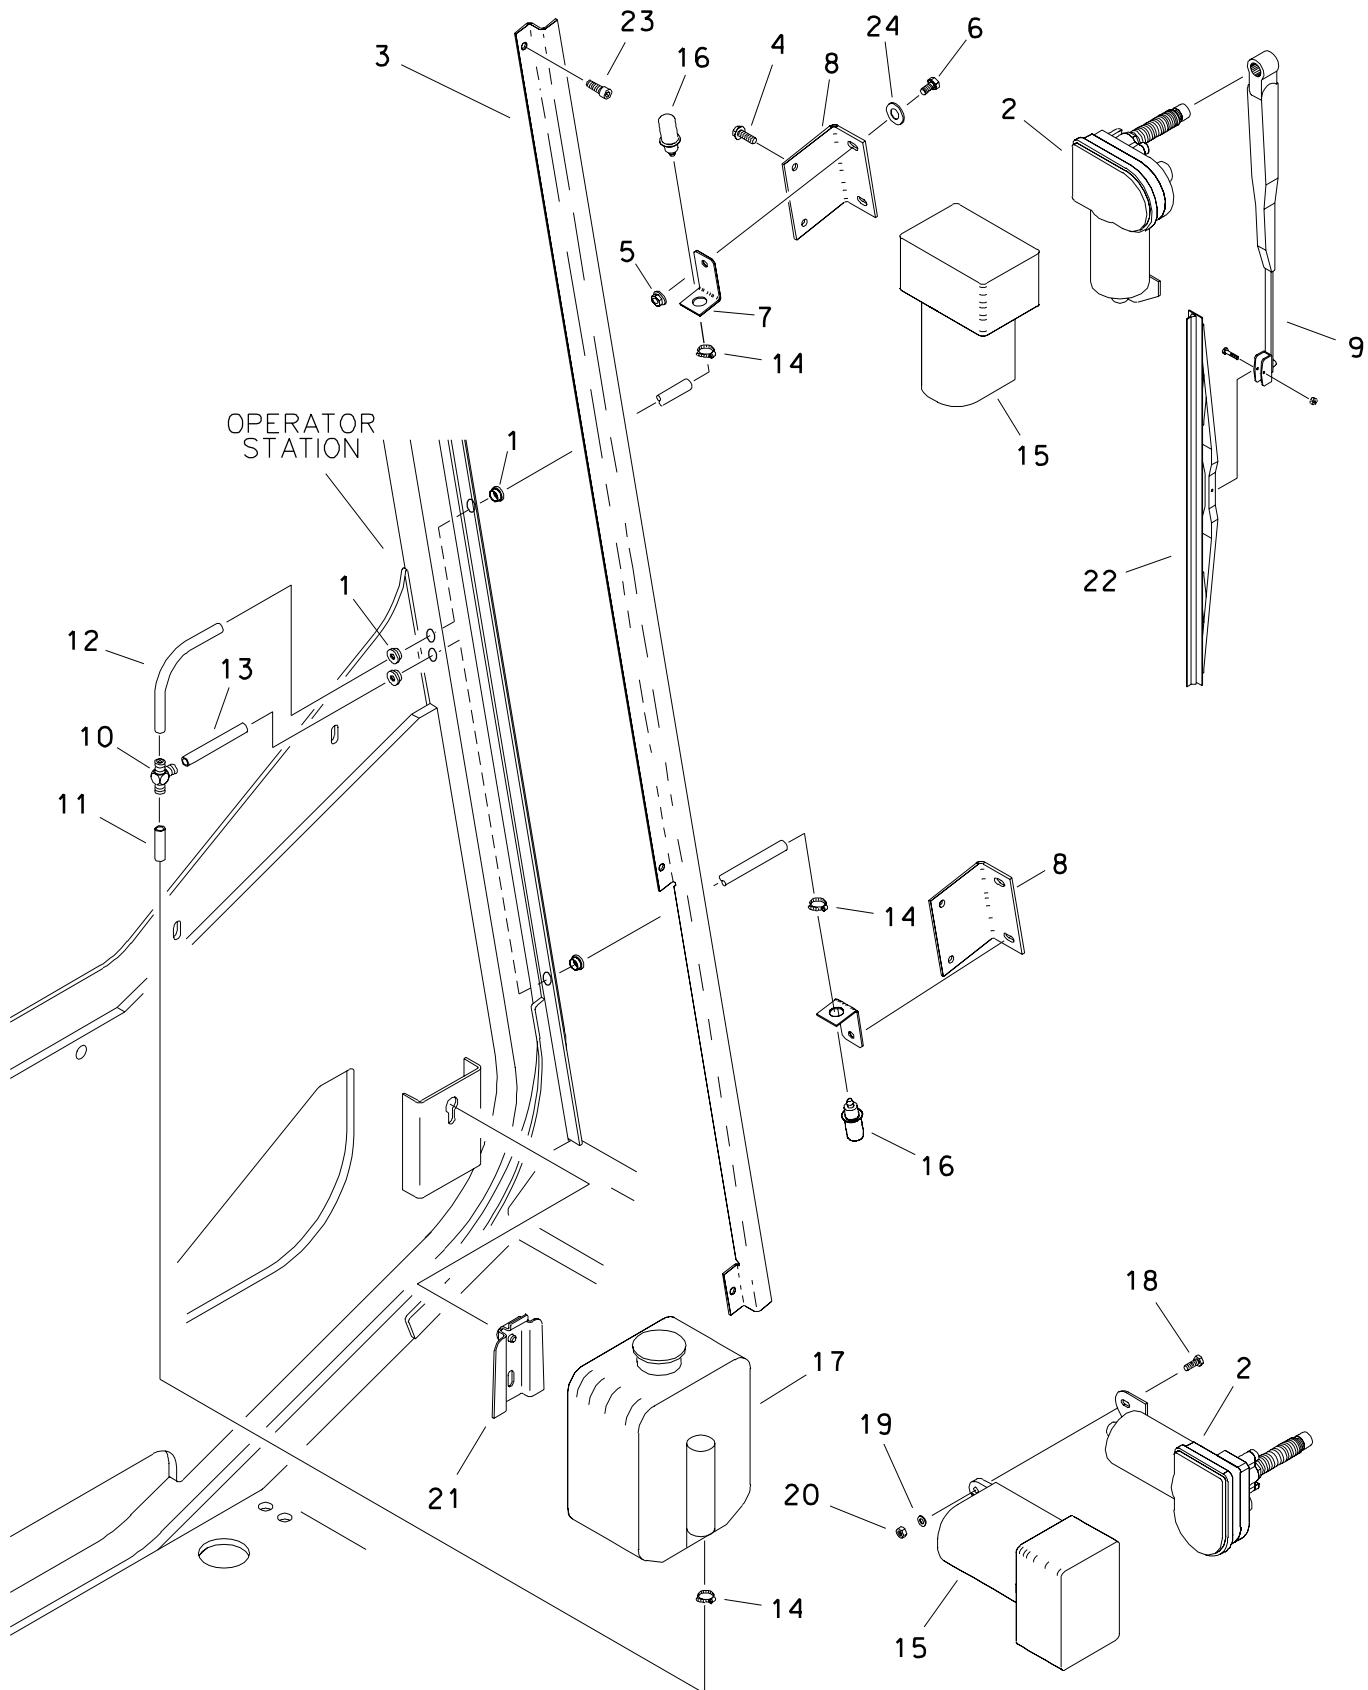


# WINDSHIELD WIPERS/WASHER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	115-349	4	GROMMET (1/2")	
2.	502-063	2	WIPER MOTOR (100 DEG)	
3.	349-957	1	CABLE COVER	
4.	106-541	4	FLG SCREW (M6-1.00 X 20mm)	
5.	106-385	2	FLG LOCKNUT (M6-1.00)	
6.	106-234	2	SCREW (M6-1 X 12mm)	
7.	349-959	2	NOZZLE BRACKET	
8.	349-960	2	COVER PLATE	
9.	111-058	2	WIPER ARM	
10.	514-380	1	S/D TEE (04H-04H-04H)	
11.	116-770 AR		BULK HOSE (3/32", SOLD PER 1")	USE 1 @ 29"
12.	116-770 AR		BULK HOSE (3/32", SOLD PER 1")	USE 1 @ 25"
13.	116-770 AR		BULK HOSE (3/32", SOLD PER 1")	USE 1 @ 15"
14.	110-249	3	WORM CLAMP (1/4" TO 5/8")	
15.	116-862	2	COVER	
16.	149-122	2	WASHER NOZZLE	
17.	344-115	1	WINDSHIELD WASHER TANK	SEE FOOTNOTE 1
	190-053		POLY-PATCH TANK REPAIR KIT	
18.	106-542	2	SCREW (M5-0.80 X 16mm, PAN PLPS)	
19.	105-284	2	WASHER (3/16")	
20.	106-850	2	LOCKNUT (M5-0.80)	
21.	370-430	1	TANK BRACKET	
22.	111-059	2	WIPER BLADE	
23.	106-640	3	SCREW (M6-1.00 X 20mm, BUT SOC)	
24.	106-389	2	WASHER (M8)	

## FOOTNOTES

1. CAP CANNOT BE PURCHASED SEPARATELY.

## TOP LINING/PANEL

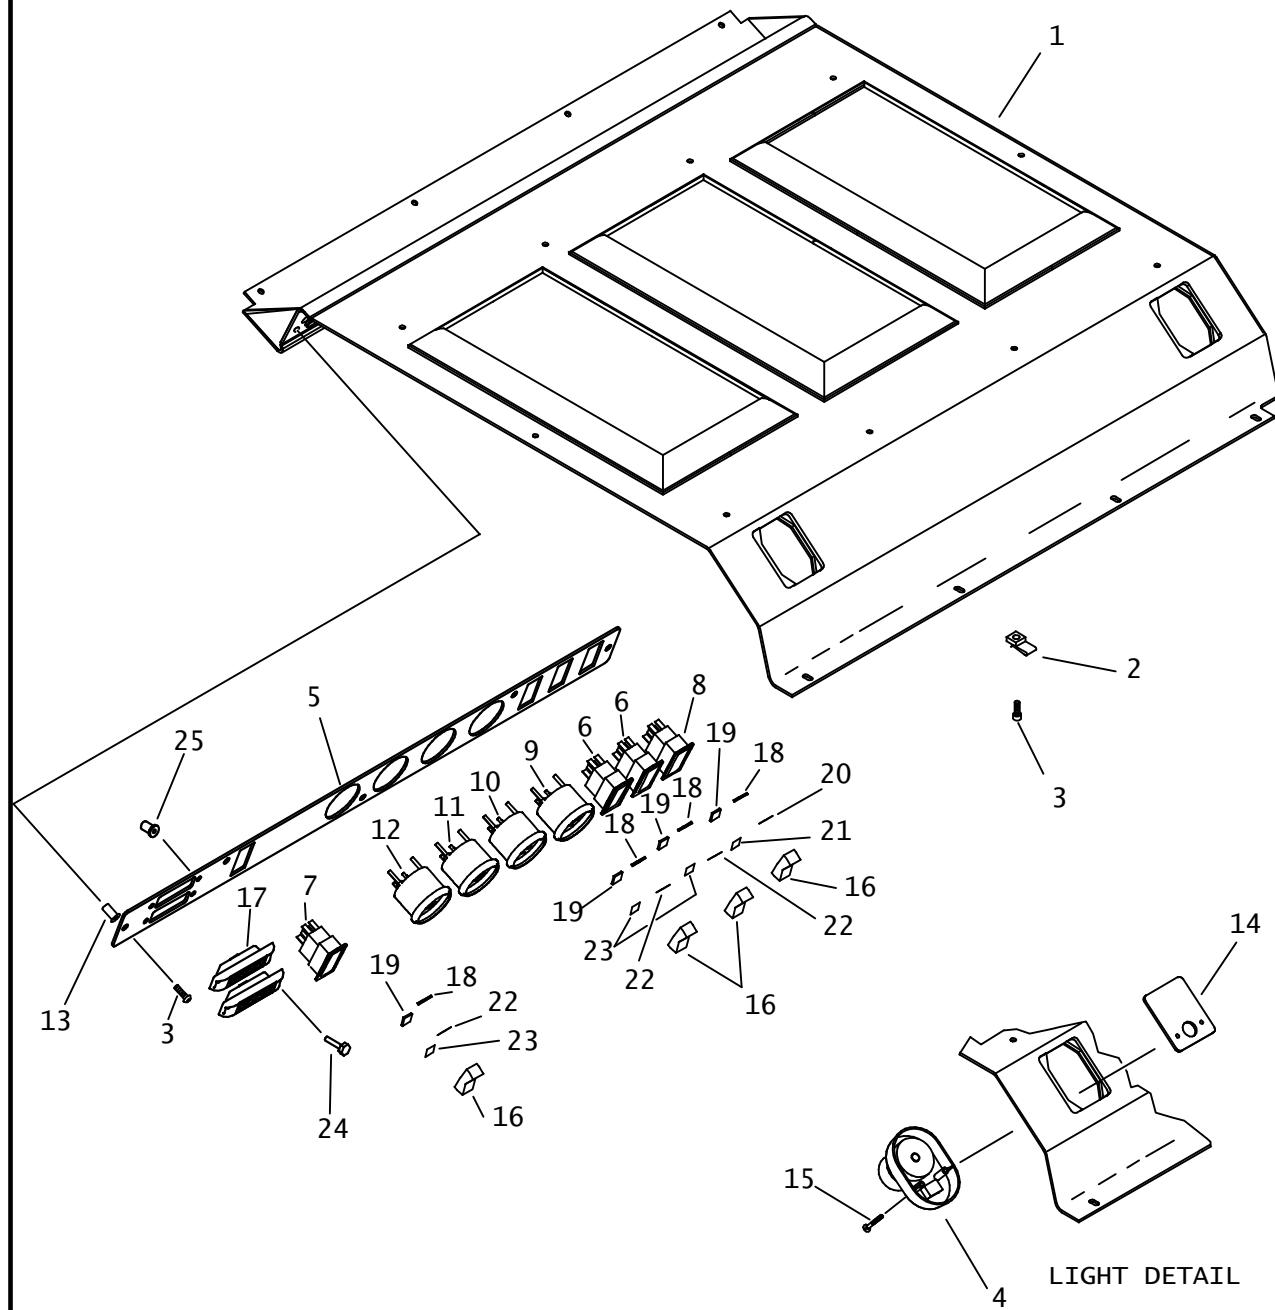

## TOP LINING/PANEL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-412	1	TOP LINING	
2.	106-574	18	CLIP NUT (M6-1.00)	
3.	107-312	23	SCREW (M6-1.00 X 25MM, BUT SOC)	
4.	213-214	2	DIRECTIONAL LIGHT	
5.	300-2023	1	SHEET, TOP INSTRUMENT PANEL	
6.	217-919	2	ROCKER SW (DPDT) ON-ON-(ON)	WINDSHIELD WIPER/WASHER
7.	217-918	1	ROCKER SW {DPDT} ON-ON	WORK LIGHTS
8.	217-228	1	ROCKER SWITCH (DPDT){ON}-OFF-{ON}	CAB SWING
9.	211-328	1	FUEL GAUGE	
10.	211-329	1	VOLT METER	
11.	215-1268	1	2.06" CAN ENG OIL PRESS GAUGE	
12.	215-1267	1	2.06" CAN COOLANT TEMP GAUGE	
13.	105-643	5	WELLNUT (M6-1.00 X 16MM LG)	
14.	323-892	2	ADAPTER PLATE	
15.	107-863	4	SCREW (M4-0.7 X 60mm PAN)	
16.	217-925	4	ROCKER SWITCH (ACTUATOR)	
17.	220-664	2	INDICATOR LIGHT	
18.	217-156	4	DIFFUSION LENS (GREEN)	
19.	217-158	4	DIFFUSION LENS (WHITE)	
20.	217-149	1	ICON (WHT) OPERATOR SEAT- IN	
21.	217-148	1	ICON (WHT) OPERATOR SEAT- OUT	
22.	217-136	3	ICON (WHT) ON-START	
23.	217-137	3	ICON (WHT) OFF-STOP	
24.	107-393	4	SCREW (M4-0.70 X 16MM, BX)	
25.	107-358	4	WELLNUT (M4-0.7 X 12.67MM LG)	

NOT SHOWN:

FOOTNOTES:

NOTE:


## LEFT CONSOLE (JT)

## — SWITCH LEGEND —

- A - HEAT/AIR FAN SPEED
  - B - HEAT/AIR ON/OFF
  - C - MOBILE BORE
  - D - LUBRICATOR
  - E - FRONT DRILL FRAME TILT
  - F - REAR DRILL FRAME TILT
  - G - FRONT WRENCH CLAMP {STATIONARY}
  - H - REAR WRENCH CLAMP {ROTATING}
  - J - REAR WRENCH ROTATE
  - K - PIPE SHUTTLE
  - L - PIPE GRIP
  - M - PIPE LIFT
  - N - SPINDLE BRAKE
  - P - ENGINE THROTTLE
  - R - SHUTTLE STOP
  - S - ADD PIPE/REMOVE PIPE
  - T - SET/RESUME

19



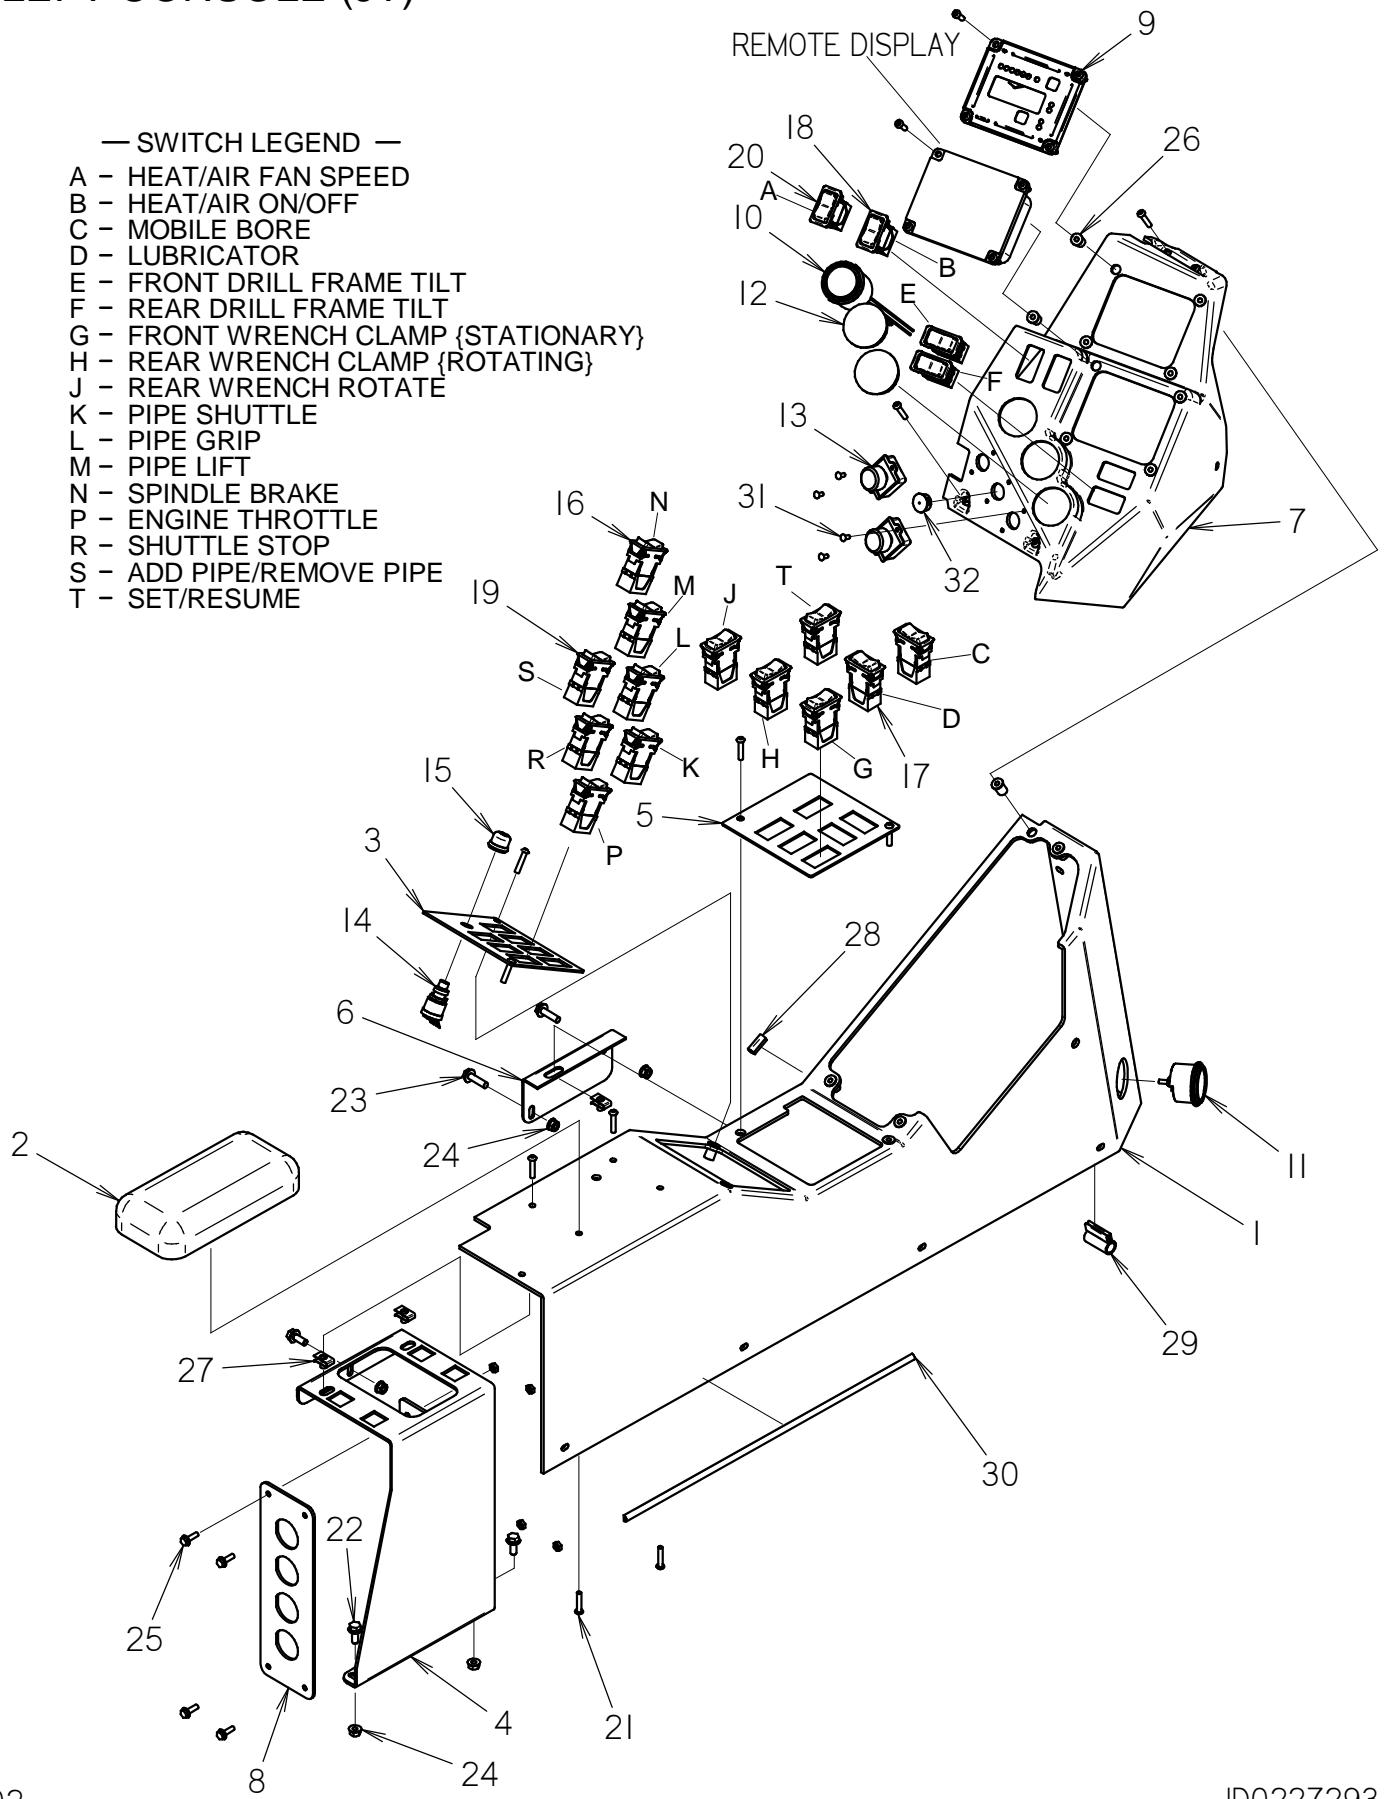

# LEFT CONSOLE (JT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	362-1351	1	LEFT CONSOLE	
2	349-406	1	ARM REST PAD	
3	303-931	1	LEFT REAR PANEL	
4	370-412	1	LEFT REAR MOUNT	
5	303-930	1	LEFT CENTER PANEL	
6	349-404	1	LEFT CONSOLE CENTER MOUNT	
7	362-1352	1	A/T CONSOLE	
8	300-2584	1	SHEET, CONNECTOR PANEL	
9	220-1024	1	ESID MODULE	
10	211-099	1	INNER ROTATION TACHOMETER	
11	215-128	1	HOUR METER	
12	III-067	2	EXPANSION PLUG (2.125")	
13	214-566	2	POTENTIOMETER	
14	306-607	1	HORN BUTTON	
15	306-608	1	BUTTON COVER	
16	217-918	1	ROCKER SWITCH (SPDT) ON-ON	
17	217-924	1	ROCKER SWITCH (DPDT) OFF-ON	
18	217-922	1	ROCKER SWITCH (SPDT) (ON)-ON-(ON)	
19	217-228	12	ROCKER SWITCH (DPDT) (ON)-OFF-(ON)	
20	217-923	2	ROCKER SWITCH (DPDT) (ON)-OFF-(ON)	
21	108-184	20	SCREW (M6-1.00 X 30MM, BUT SOC)	
22	106-162	3	FLG SCREW (M8-1.25 X 20MM, GD8)	
23	106-163	2	FLG SCREW (M8-1.25 X 30MM)	
24	106-386	5	FLG LOCKNUT (M8-1.25)	
25	106-379	4	FLG LK SCREW (M6-1.00 X 20MM)	
26	107-871	15	WELLNUT (M6-1.00 X 20.35MM LG)	
27	106-574	3	CLIP NUT (M6-1.00)	
28	II6-723	1	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 1" - USE 256-665 ADHESIVE 3M 1300 AS REQ'D
29	II6-421	1	BULK EDGE (1/8", SOLD PER 1')	USE 1 @ 1.6"
30	II6-724	1	BULK SEAL (3/32", SOLD PER FT)	USE 1 @ 21"
31	110-560	4	POP RIVET (3/16" X 1/2", ALUM)	
32	362-1421	1	HOLE PLUG	

NOT SHOWN:


FOOTNOTES:

NOTE:

# LEFT CONSOLE (AT)

## — SWITCH LEGEND —

- A - HEAT/AIR FAN SPEED
- B - HEAT/AIR ON/OFF
- C - MOBILE BORE
- D - LUBRICATOR
- E - FRONT DRILL FRAME TILT
- F - REAR DRILL FRAME TILT
- G - FRONT WRENCH CLAMP {STATIONARY}
- H - REAR WRENCH CLAMP {ROTATING}
- J - REAR WRENCH ROTATE
- K - PIPE SHUTTLE
- L - PIPE GRIP
- M - PIPE LIFT
- N - SPINDLE BRAKE
- P - ENGINE THROTTLE
- R - SHUTTLE STOP
- S - ADD PIPE/REMOVE PIPE
- T - SET/RESUME
- U - INNER ROTATION
- V - INNER ROTATION SPEED

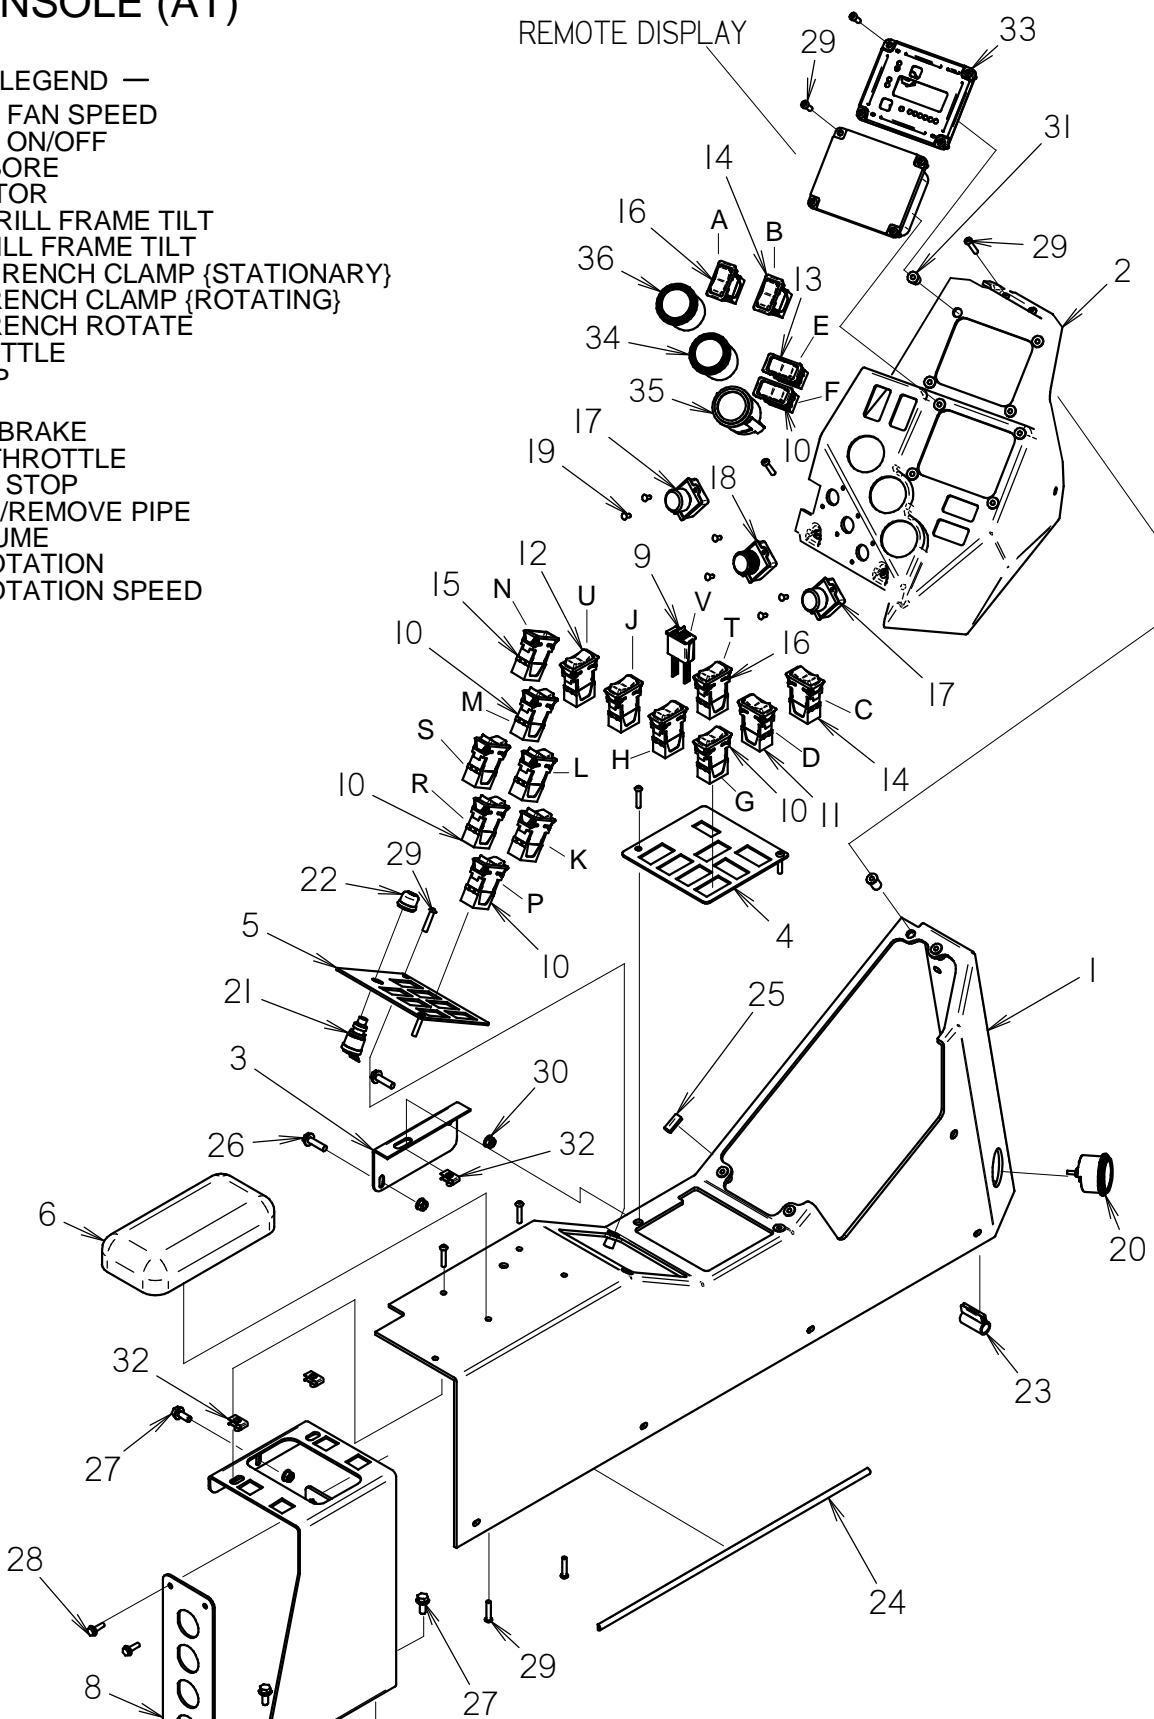

# LEFT CONSOLE (AT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	362-1351	1	LEFT CONSOLE	
2	362-1352	1	A/T CONSOLE	
3	349-404	1	LEFT CONSOLE CENTER MOUNT	
4	300-8210	1	A/T FUNCTION PANEL	
5	303-931	1	LEFT REAR PANEL	
6	349-406	1	ARM REST PAD	
7	370-412	1	LEFT REAR MOUNT	
8	300-2584	1	SHEET, CONNECTOR PANEL	
9	215-1016	1	ROTATION DITHER SWITCH	
10	217-228	10	ROCKER SWITCH (DPDT) (ON)-OFF-(ON)	
11	217-924	1	ROCKER SWITCH (DPDT) OFF-(ON)	
12	217-912	1	ROCKER SWITCH (DPDT) ON-ON-ON	
13	217-921	1	ROCKER SWITCH (SPDT) (ON)-OFF-(ON)	
14	217-923	2	ROCKER SWITCH (DPDT) (ON)-OFF-(ON)	
15	217-918	1	ROCKER SWITCH (SPDT) ON-ON	
16	217-922	2	ROCKER SWITCH (SPDT) (ON)-ON-(ON)	
17	214-566	2	POTENTIOMETER	
18	211-089	1	4.5V-12.0V POTENTIOMETER	
19	110-560	6	POP RIVET (3/16" X 1/2", ALUM)	
20	215-128	1	HOUR METER	
21	306-607	1	HORN BUTTON	
22	306-608	1	BUTTON COVER	
23	116-421	1	BULK EDGE (1/8", SOLD PER FT)	USE 1 @ 1.6"
24	116-724	1	BULK SEAL (3/32", SOLD PER FT)	USE 1 @ 21"
25	116-723	1	BULK EDGE (3/16", SOLD PER FT)	USE 1 @ 1" - USE 256-665 ADHESIVE 3M 1300 AS REQ'D
26	106-163	2	FLG SCREW (M8-1.25 X 30MM)	
27	106-162	3	FLG SCREW (M8-1.25 X 20MM, GD8)	
28	106-379	4	FLG LK SCREW (M6-1.00 X 20MM)	
29	108-184	20	SCREW (M6-1.00 X 30MM, BUT SOC)	
30	106-386	5	FLG LOCKNUT (M8-1.25)	
31	107-871	15	WELLNUT (M6-1.00 X 20.35MM LG)	
32	106-574	3	CLIP NUT (M6-1.00)	
33	220-1024	1	ESID MODULE	
34	215-1561	1	SPINDLE TACHOMETER (300 RPM)	
35	217-570	1	PRESSURE GAUGE 6000 PSI	
36	211-053	1	SPINDLE TACHOMETER (250RPM)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## LEFT CONSOLE SWITCHES

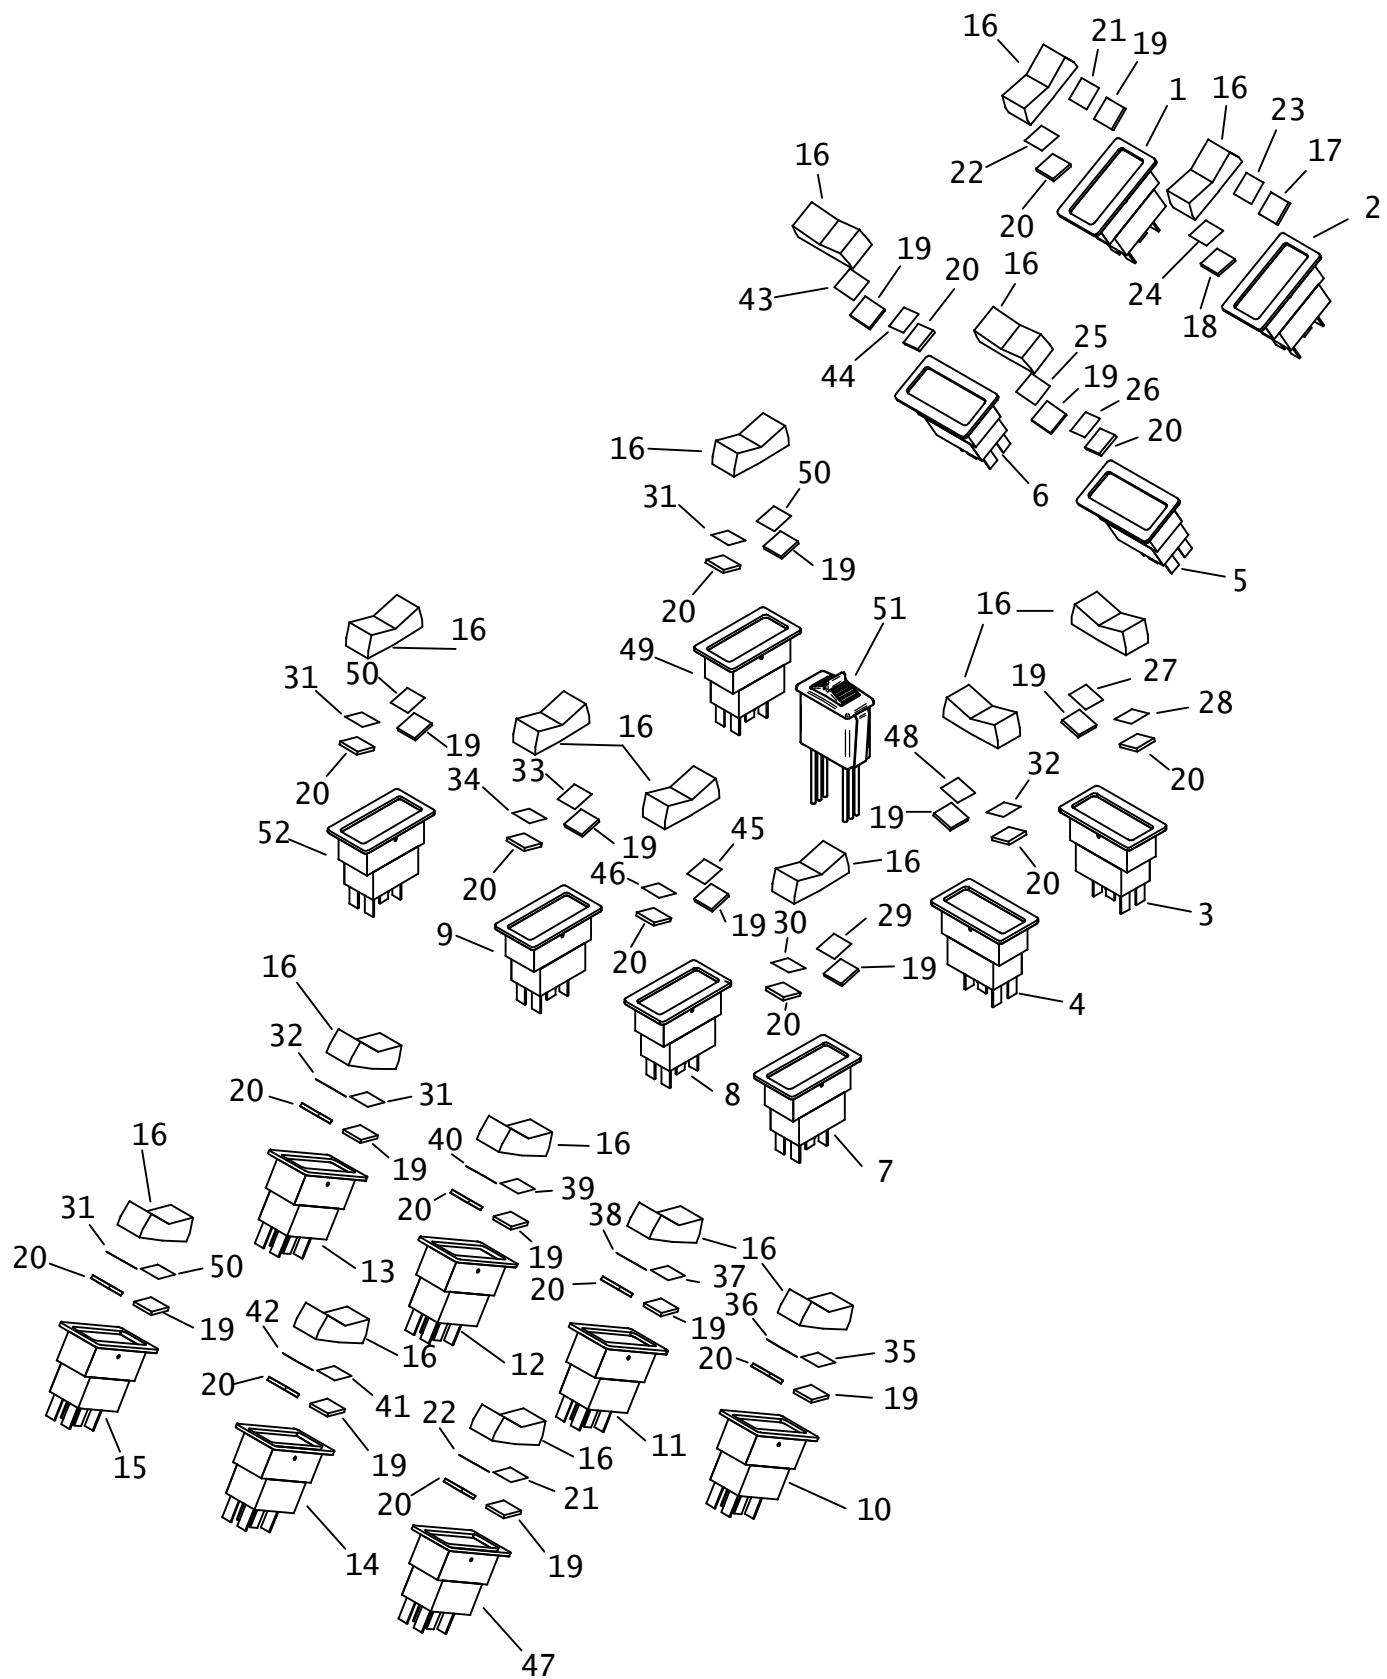

## LEFT CONSOLE SWITCHES

REF	PART	QTY	DESCRIPTION	REMARKS
NO.	NUMBER			
1.	217-922	1	ROCKER SW (SPDT) ON-ON-ON	HEAT/AIR FAN SPEED
2.	217-923	1	ROCKER SW (DPDT) ON-OFF-ON	HEAT/AIR ON/OFF
3.	217-923	1	ROCKER SW (DPDT) ON-OFF-ON	MOBILE BORE
4.	217-924	1	ROCKER SW (DPDT) OFF-{ON}	LUBRICATOR
5.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	FRONT DRILL FRAME TILT
	[217-921]	1	ROCKER SW (SPDT) (ON)-OFF-(ON)	REAR DRILL FRAME TILT
6.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	FRONT WRENCH CLAMP
	[217-921]	1	ROCKER SW (SPDT) (ON)-OFF-(ON)	REAR WRENCH CLAMP
7.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	REAR WRENCH ROTATE
8.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	PIPE SHUTTLE
9.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	PIPE GRIP
10.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	PIPE LIFT
11.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	SPINDLE BRAKE
12.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	SHUTTLE STOP
13.	217-918	1	ROCKER SW {DPDT} ON-ON	ADD PIPE/REMOVE PIPE
14.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	
	[217-921]	1	ROCKER SW (SPDT) (ON)-OFF-(ON)	
15.	217-922	1	ROCKER SW (SPDT) ON-ON-ON	
16.	217-925	17	ROCKER SWITCH (ACTUATOR)	
17.	217-157	1	DIFFUSION LENS (RED)	
18.	217-155	1	DIFFUSION LENS (BLUE)	
19.	217-156	16	DIFFUSION LENS (GREEN)	
20.	217-158	15	DIFFUSION LENS (WHITE)	
21.	217-138	2	ICON (WHT) FAST	
22.	217-139	2	ICON (WHT) SLOW	
23.	217-144	1	ICON (WHT) INTERIOR HEAT	
24.	217-145	1	ICON (WHT) AIR CONDITION	
25.	217-167	1	ICON (WHT) FRAME EXTEND-FRONT	
26.	217-168	1	ICON (WHT) FRAME RETRACT-FRONT	
27.	217-147	1	ICON (WHT) DRILL HEAD	
28.	217-146	1	ICON (WHT) BORING - GND DRIVE	
29.	217-171	1	ICON (WHT) FRONT CLAMP - OPEN	
30.	217-172	1	ICON (WHT) FRONT CLAMP - CLOSE	
31.	217-136	5	ICON (WHT) ON-START	
32.	217-137	3	ICON (WHT) OFF-STOP	
33.	217-176	1	ICON (WHT) REAR CLAMP-ROTATE CCW	
34.	217-175	1	ICON (WHT) REAR CLAMP-ROTATE CW	
35.	217-179	1	ICON (WHT) SHUTTLE-RETRACT	

FOOTNOTES:

NOTE:

## LEFT CONSOLE SWITCHES


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
36.	217-153	1	ICON (WHT) LOADER-SHUTTLE	
37.	217-178	1	ICON (WHT) PIPE GRIP - CLOSE	
38.	217-177	1	ICON (WHT) PIPE GRIP - OPEN	
39.	217-181	1	ICON (WHT) PIPE LIFT-LOWER	
40.	217-180	1	ICON (WHT) PIPE LIFT-RAISE	
41.	217-150	1	ICON (WHT) LOADER-ROW-OUT	
42.	217-151	1	ICON (WHT) LOADER-ROW-IN	
43.	217-170	1	ICON (WHT) FRAME-RETRACT REAR	
44.	217-169	1	ICON (WHT) FRAME-EXTEND REAR	
45.	217-173	1	ICON (WHT) REAR CLAMP-OPEN	
46.	217-174	1	ICON (WHT) REAR CLAMP-CLOSE	
47.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	THROTTLE
48.	217-192	1	ICON (WHT) AUTO LUBRICATION	
49.	217-922	1	ROCKER SW (DPDT) (ON-ON)	SET/RESUME
	<u>217-921</u>	1	ROCKER SW (SPDT) (ON)-OFF-(ON)	
50.	700-035	3	ICON, INCREASE/POSTIVE	
51.	215-1016	1	ROTATION DITHER SW	AT ONLY
52.	217-922	1	ROCKER SW (SPDT) ON-ON	AT ONLY

FOOTNOTES:

NOTE:



## RIGHT CONSOLE

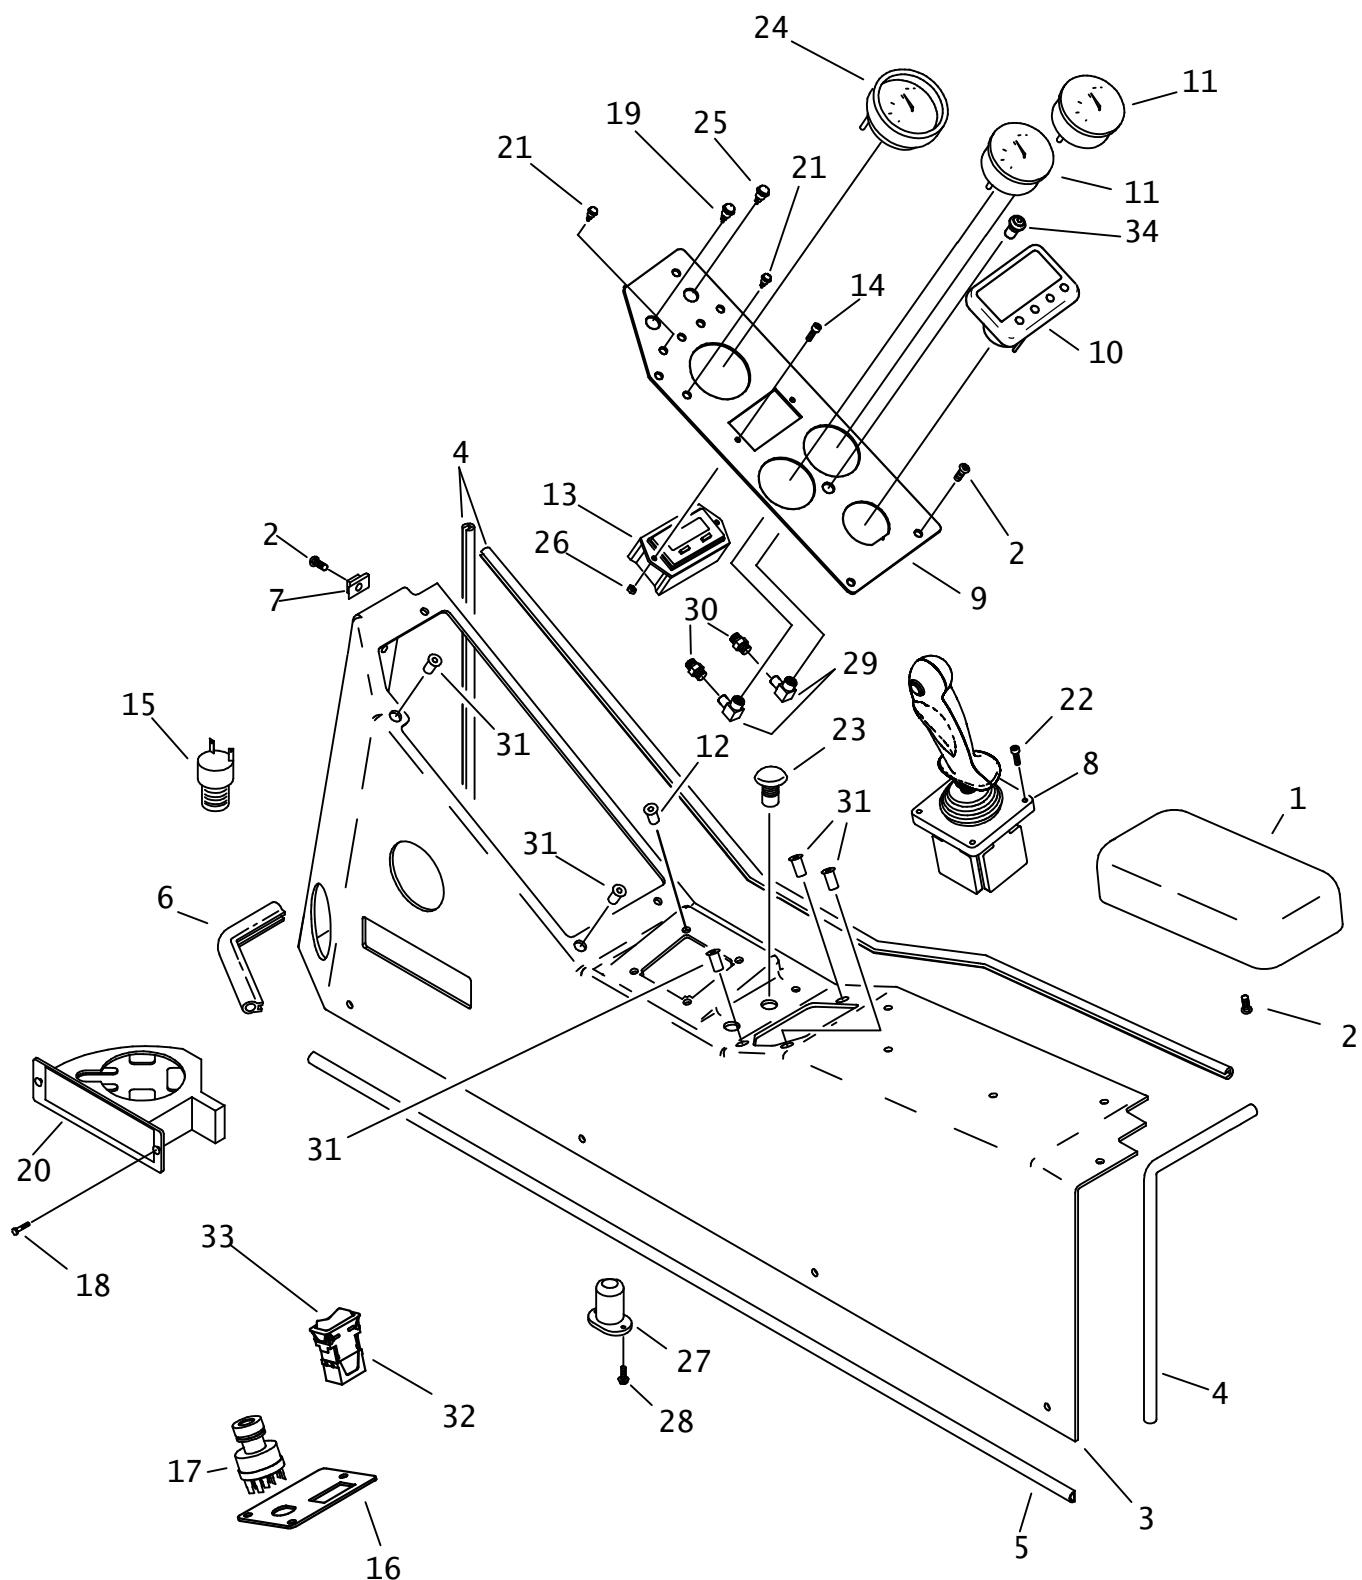

## RIGHT CONSOLE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-406	1	ARM REST PAD	
2.	107-312	20	SCREW (M6-1.00X25MM, BUT SOC)	
3.	306-914	1	RIGHT CONSOLE	
4.	116-723 AR		BULK EDGE (3/32", SOLD PER 1')	USE 1 @ 79"
5.	116-724 AR		BULK SEAL (3/32", SOLD PER 1')	USE 1 @ 42"
6.	116-421 AR		BULK EDGE (1/8", SOLD PER 1')	USE 1 @ 8"
7.	106-574	13	CLIP NUT (M6-1.00)	
8.	215-1224	1	DUAL AXIS HALL EFFECT JOYSTICK	
9.	300-9004	1	SHEET, RIGHT INSTRUMENT PANEL	
10.	215-1429	1	POWerview DIAGNOSTIC GUAGE	
11.	217-079	2	PRESSURE GAUGE (10000 PSI)	
12.	107-358	4	WELLNUT (M4-0.7)	
13.	217-221	1	FLOW METER DISPLAY	
14.	105-649	2	BOLT (#10-32 X .75", BUT)	
15.	306-603	1	AUDIO ALARM	
16.	303-934	1	RIGHT REAR PANEL	
17.	214-852	1	IGNITION SWITCH	
	214-961		KEY, PAIT (BASE CODE)	
	214-962		SWITCH MOUNTING NUT	
	214-963		LOCK PLUG W/1 KEY (BASE CODE)	
18.	107-327	2	SCREW (#10-24X1/2", CSK PLPS)	
19.	214-563	1	RED LED (12V)	
20.	349-416	1	CUP HOLDER	
21.	214-701	5	STATUS LIGHT	ENGINE STOP
22.	107-414	4	SCREW (M4-0.70 X 30MM BUT SOC)	
23.	217-206	1	BUTTON SWITCH (SPST)	
24.	150-1444	1	PRESSURE GAUGE(2000 PSI)	
25.	214-840	1	GREEN LED (12V DC)	
26.	106-850	2	LOCKNUT (M5-0.80)	
27.	214-301	1	ACCESSORY SOCKET	
28.	106-058	2	BOLT (#6-32 X 1-1/8", RD SLT)	
29.	514-355	2	CONNECTOR (04NF-04NF90)	
30.	154-020	2	CONNECTOR (04N-04J)	
31.	107-871	5	WELLNUT (M6-1.00 X 20.35MM LG)	
32.	217-924	1	ROCKER SWITCH (DPDT) OFF-{ON}	
33.	217-925	1	ROCKER SWITCH (ACTUATOR)	
34.	215-1015	1	MOMENTARY PUSHBUTTON SWITCH	


NOT SHOWN:

217-291 2 TERMINAL SOCKET

FOOTNOTES:

NOTE:

## CAB LOCK

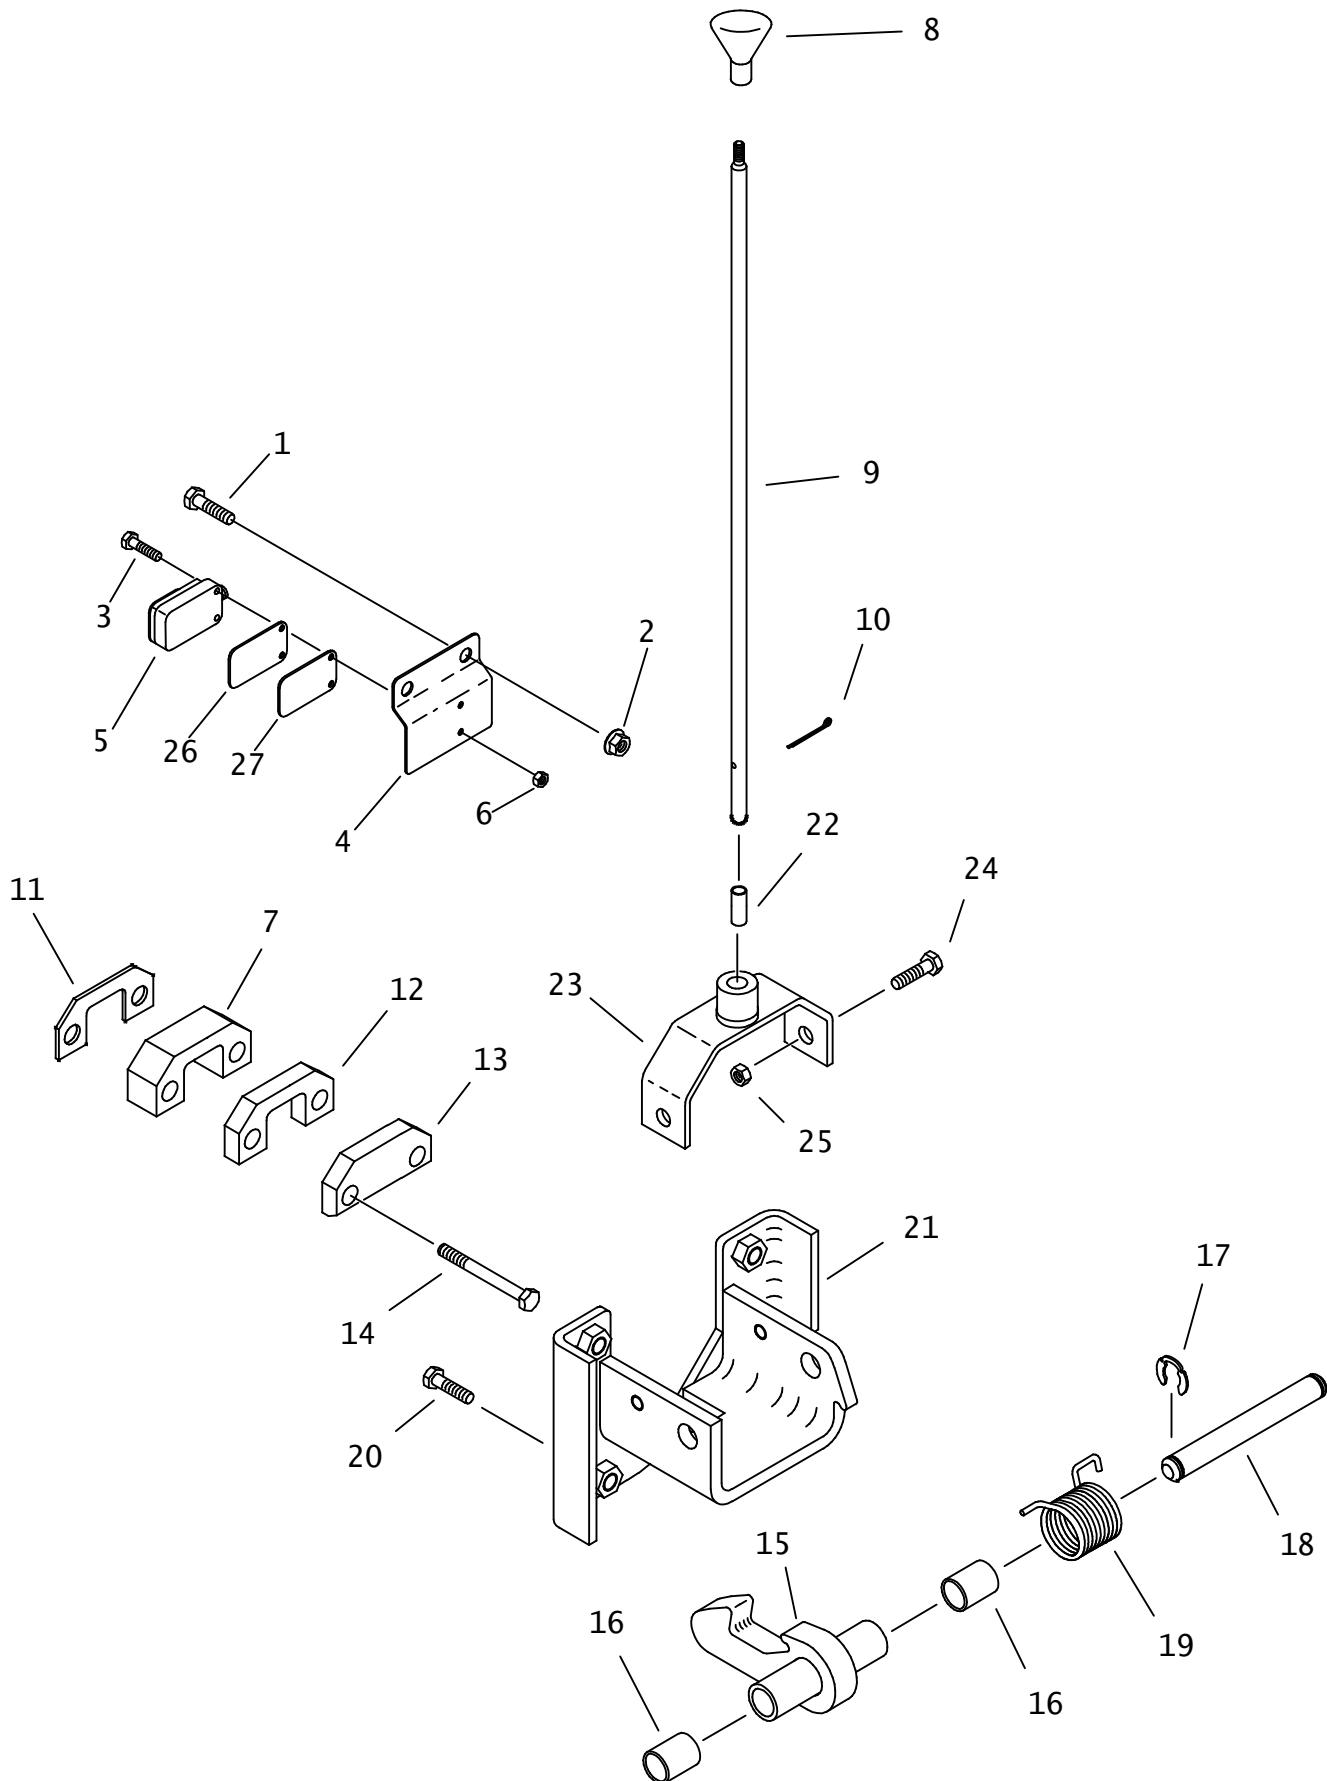

# CAB LOCK

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	106-162	2	FLG SCREW (M8-1.25 X 20MM)	
2.	106-386	2	FLG LOCKNUT (M8-1.25)	
3.	106-427	2	SCREW (M5-0.80 X 22MM, SOC)	
4.	307-724	1	BRACKET	
5.	215-1175	1	PROXIMITY SWITCH	
6.	106-850	2	LOCKNUT (M5-0.80)	
7.	179-445	1	LATCH SPACER	BEGINS WITH S/N: 2W0856
8.	110-071	1	KNOB (1/4-NC, BLACK)	
9.	349-900	1	ROD	
10.	105-523	1	COTTER PIN (.125" X .750")	
11.	349-955	AR	SHIM	
12.	349-954	AR	SPACER	
13.	349-953	1	LATCH PLATE	
14.	106-700	2	SCREW (M12-1.75 X 80MM)	ENDS WITH S/N: 2V2567
	106-337	2	SCREW (M12-1.75 X 110MM)	BEGINS WITH S/N: 2W0856
15.	349-945	1	LATCH	
16.	125-403	2	BRONZE BUSHING (.625")	
17.	115-780	2	KLIP RING (.625")	
18.	349-948	1	PIN	
19.	117-054	1	TORSION SPRING	
20.	105-273	4	SCREW (M12-1.75 X 30MM)	
21.	349-942	1	LATCH MOUNT	
22.	125-436	1	BRONZE BUSHING (.376")	
23.	349-951	1	ROD GUIDE	
24.	105-245	2	SCREW (M10-1.50 X 25MM)	
25.	105-894	2	LOCKNUT (M10-1.50, PRV TRQ,10.9)	
26.	107-450	AR	SHIM (.075")	SEE FOOTNOTE 1
27.	107-451	AR	SHIM (.135")	SEE FOOTNOTE 1


NOT SHOWN:

FOOTNOTES:

1. SHIMS ARE OPTIONAL

NOTE:

## CAB HEAT/AIR

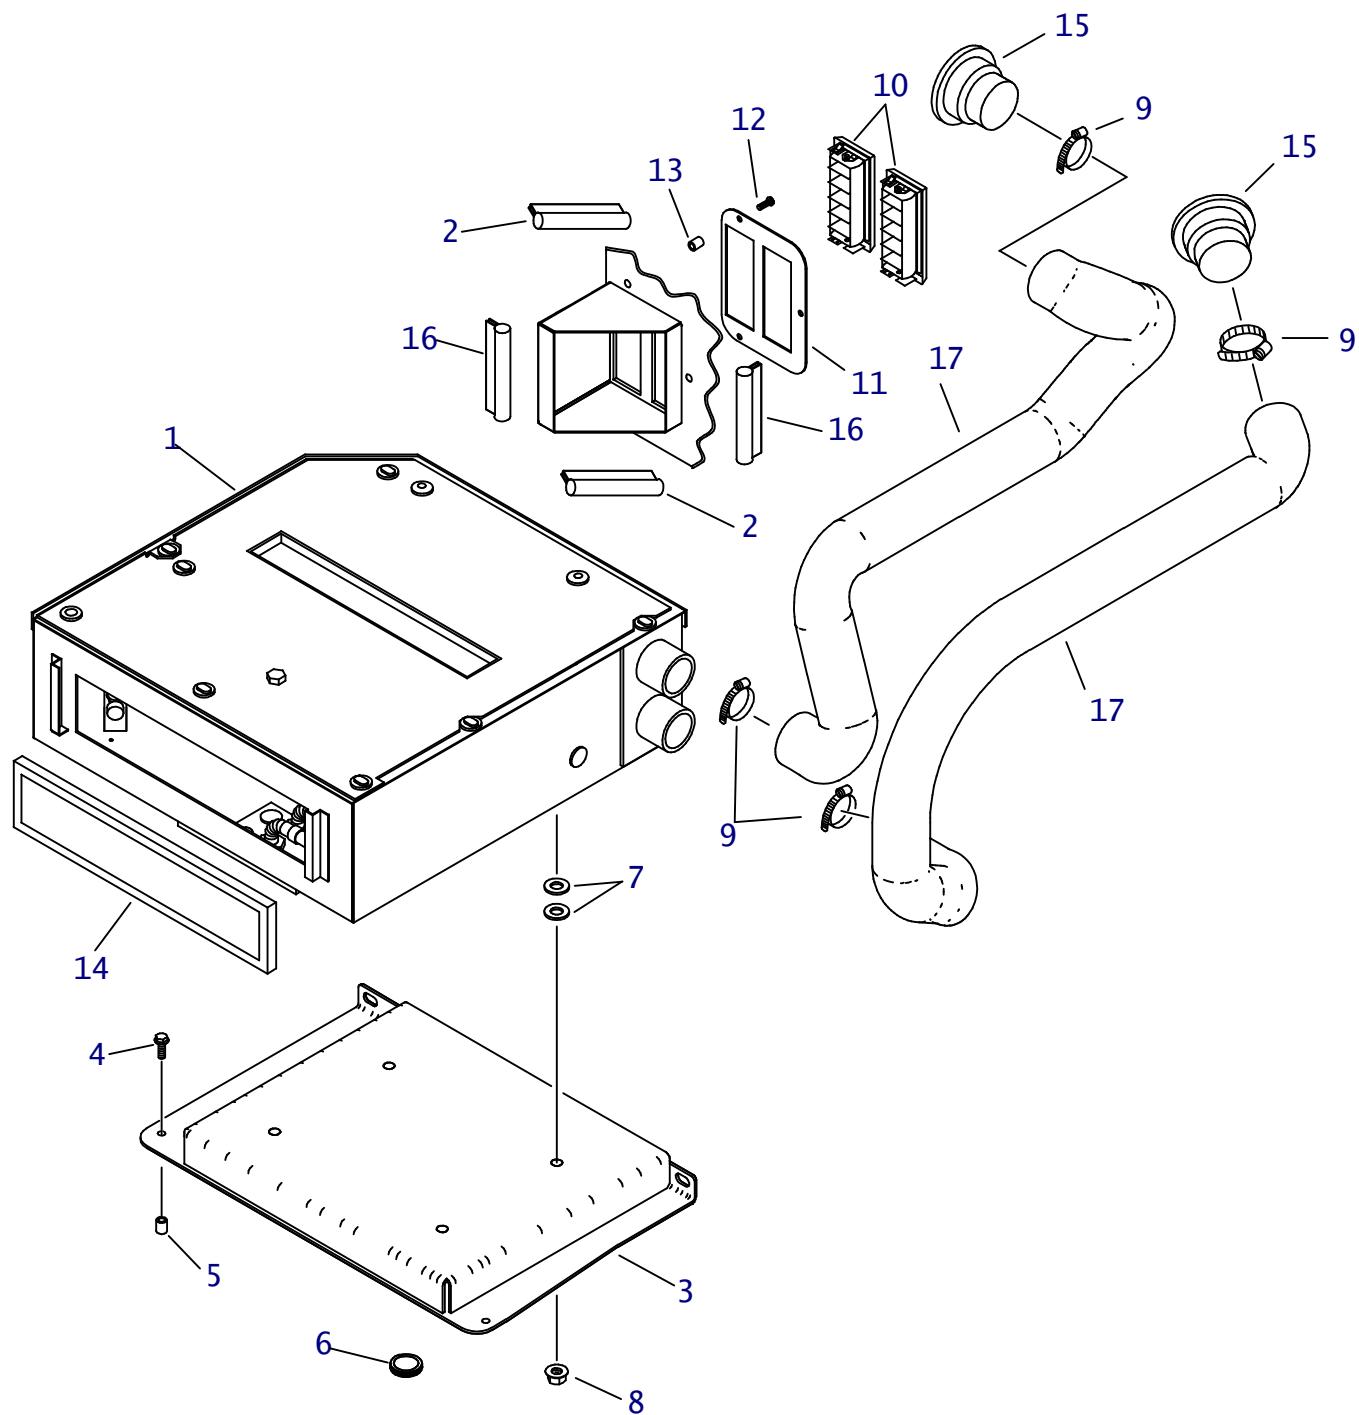

## CAB HEAT/AIR

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	500-1385	1	HEAT/AIR SYSTEM	
2.	116-421	AR	BULK EDGE (1/8", SOLD PER 1')	USE 2 @ 5"
3.	349-471	1	HEAT/AIR MOUNT	
4.	106-162	4	FLG SCREW (M8-1.25 X 20mm)	
5.	105-633	4	NUTSERT (M8X1.25) 3.8-7.9" THK	
6.	116-689	2	GROMMET	
7.	106-397	8	WASHER (M12, HARDENED)	
8.	105-833	4	FLG LOCKNUT (1/2-NC)	
9.	110-134	4	WORM CLAMP (2.062" TO 2.75")	
10.	502-064	2	RECTANGULAR LOUVER	
11.	349-894	1	LOUVER PLATE	
12.	106-640	3	SCREW (M6-1.0 X 20mm, BUT SOC)	
13.	105-631	3	NUTSERT (M6X1.0) 4.20-6.60THK	
14.	502-066	1	FOAM FILTER (1/2" X 4" X 17")	
15.	502-065	2	ROUND LOUVER	
	502-067	2	HOSE ADAPTER	
16.	116-421	AR	BULK EDGE (1/8", SOLD PER 1')	USE 2 @ 5.50"
17.	500-1383	1	HOSE KIT	


NOT SHOWN:

499-210 1 EXPANSION VALVE  
 499-205 1 DRIER  
 499-211 1 COMPRESSOR  
 500-1382 1 CONDENSER  
 500-1286 1 HOSE, AC

FOOTNOTES:

NOTE:

## HEAT/AIR DIAGRAM

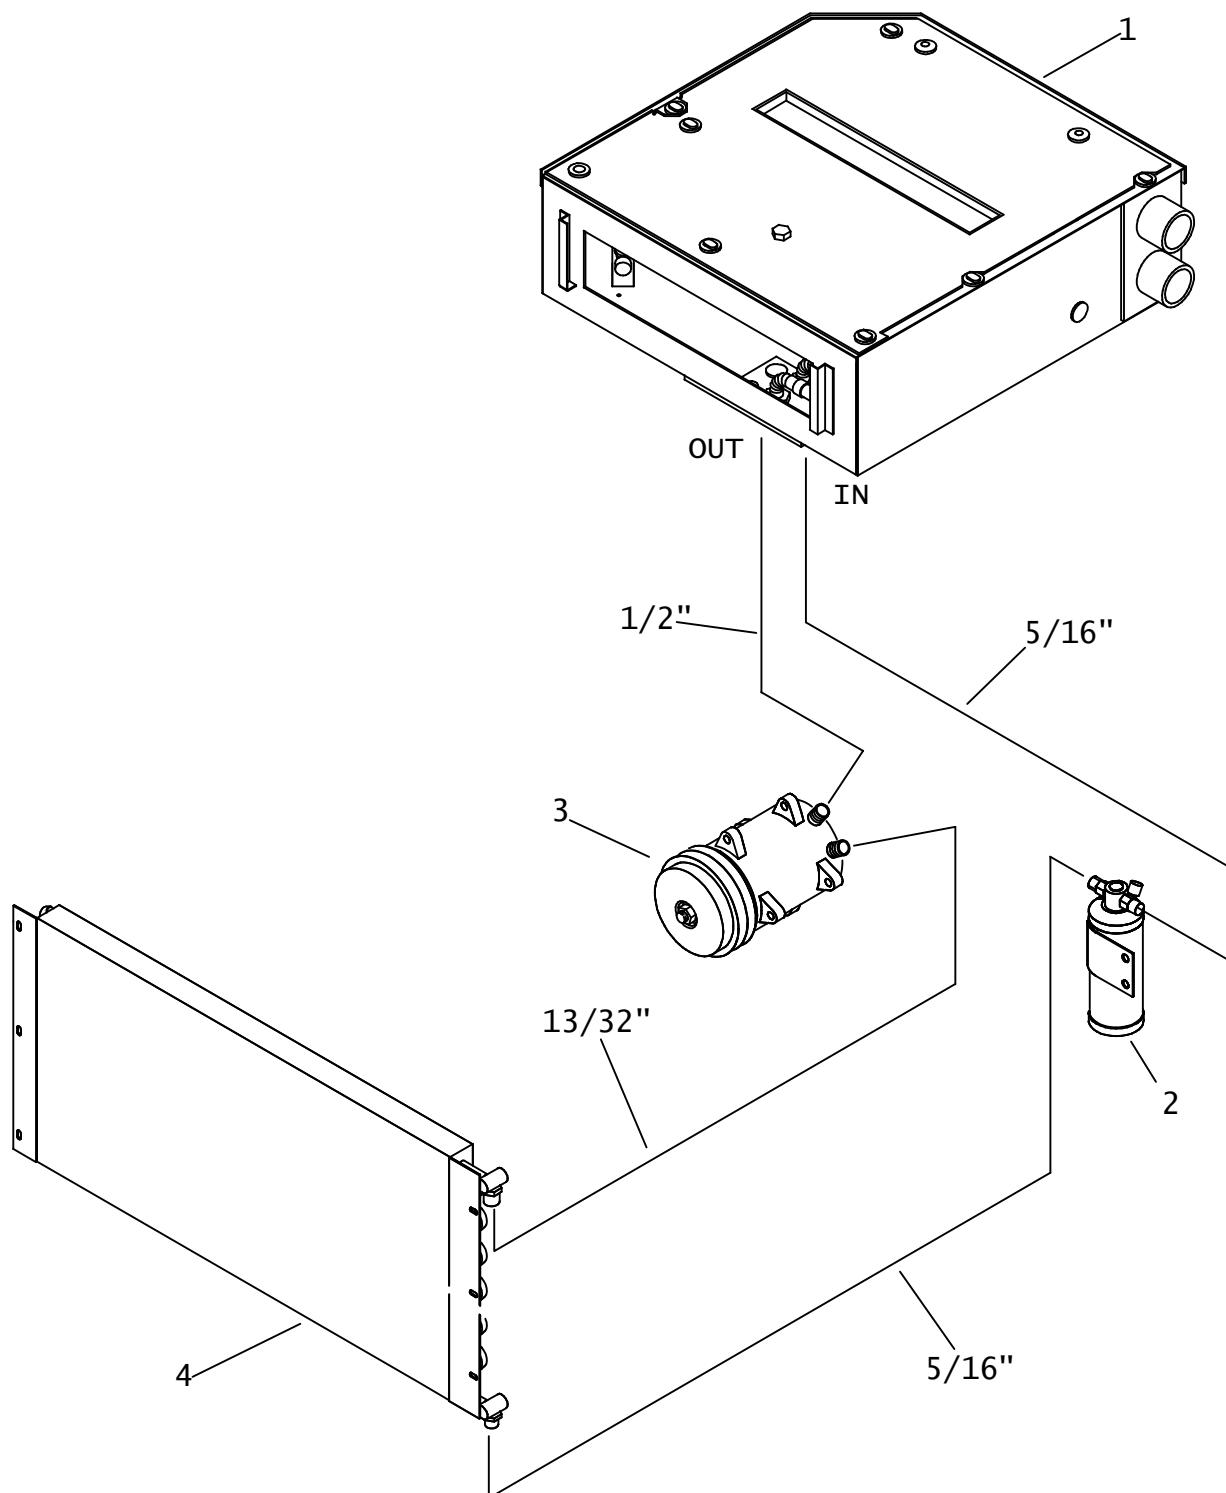

## HEAT/AIR DIAGRAM


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	500-1385	-	HEAT/AIR SYSTEM	
	499-210	-	EXPANSION VALVE	
2.	499-205	-	DRYER	
3.	499-211	-	COMPRESSOR	
4.	500-1382	-	CONDENSER COIL	

NOT SHOWN:

FOOTNOTES:

NOTE:  
TORQUE FITTINGS TO THE FOLLOWING SPECIFICATIONS  
-6 HOSES: 11-13 FT-LBS  
-8 HOSES: 15-20 FT-LBS  
-10 HOSES: 21-27 FT-LBS

## HEAT/AIR COMPONENT MOUNT

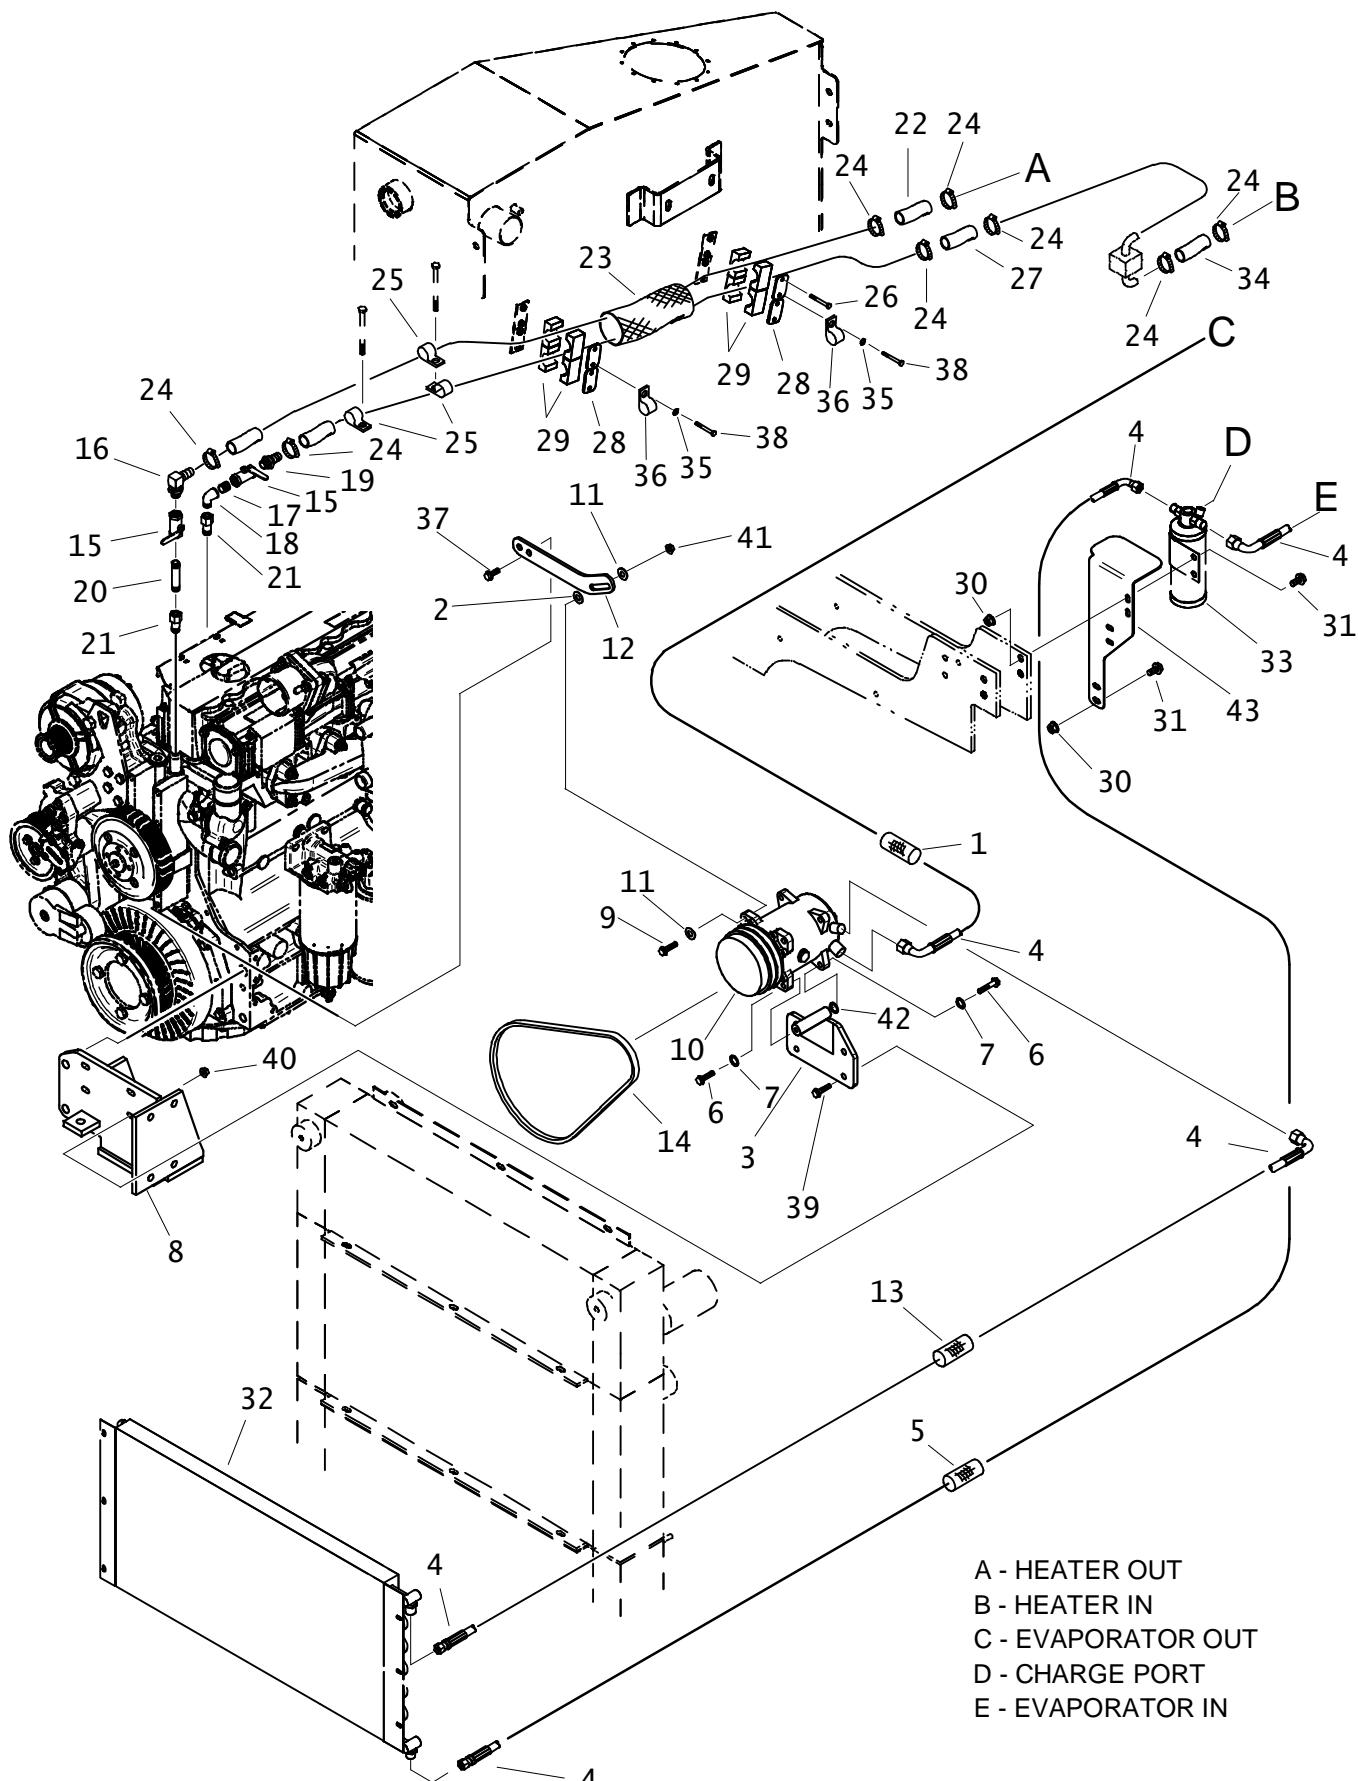

## HEAT/AIR COMPONENT MOUNT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	117-719	1	ABRASION SLEEVE (1.75" X 36")	
2.	105-264	4	WASHER (3/8")	
3.	300-1774	1	WELDMENT, COMPRESSOR MOUNT	
4.	499-558	-	A/C HOSE KIT (R134)	
5.	117-718	1	ABRASION SLEEVE (1" X 36")	
6.	106-755	2	SCREW (M10-1.50 X 30MM, SOC)	
7.	106-390	2	WASHER (M10)	
8.	300-1789	-	WELDMENT, FRONT ENGINE MOUNT (LEFT)	
9.	105-286	1	BOLT (3/8-NC X 1-3/4")	
10.	499-211	-	A/C COMPRESSOR	
11.	105-117	2	WASHER (5/16")	
12.	300-4683	1	SHEET, A/C COMPRESSOR TENSIONER	
13.	117-392	1	ABRASION SLEEVE (1.25" X 60")	
14.	171-007	1	COMPRESSOR BELT	
15.	158-579	2	SHUT-OFF (08NF-08NF)	
16.	514-285	1	S/O COUPLER (08N-10H90)	
17.	115-122	1	NIPPLE (08N-1-1/2")	
18.	115-115	1	STREET ELBOW (08N-08NF90)	
19.	514-140	1	S/O COUPLER (08N-10H)	
20.	115-162	1	NIPPLE (08N-4")	
21.	514-335	2	REDUCER (M26-1.50-08NF)	SEE FOOTNOTE 1
22.	116-750 AR		BULK HOSE (5/8", SOLD PER 1')	USE 1 @ 250"
23.	117-610	1	ABRASION SLEEVE (1.75" X 138")	
24.	110-026	8	WORM CLAMP (1/2" TO 1-1/4")	
25.	110-226	3	BOLT-ON CLAMP (1")	
26.	105-818	6	BOLT (1/4-NC X 1-1/2")	
27.	116-750 AR		BULK HOSE (5/8", SOLD PER 1')	USE 1 @ 205"
28.	322-289	4	BACKUP (BOLT-ON)	
29.	111-007	4	BOLT-ON CLAMP (7/8", SET)	
30.	106-386	4	FLG LOCKNUT (3/8-NC)	
31.	106-162	7	FLG SCREW (M8-1.25 X 20MM)	
32.	499-213	-	CONDENSER COIL	
33.	499-205	-	RECEIVER DRIER	
34.	116-750 AR		BULK HOSE (5/8", SOLD PER 1')	USE 1 @ 42"
35.	105-095	2	WASHER (1/4")	
36.	110-333	2	BOLT-ON CLAMP (1")	
37.	106-382	1	FLG LK SCREW (M10-1.50 X 20MM)	
38.	105-198	2	BOLT (1/4-NC X 1-3/4")	
39.	107-111	4	FLG SCREW (M10-1.50 X 35MM)	
40.	106-387	4	FLG LOCKNUT (M10-1.50)	
41.	105-834	2	FLG LOCKNUT (3/8-NC)	
42.	106-711 AR		WASHER	USE AS SHIM
43.	301-1346	1	BRACKET	

NOT SHOWN:

FOOTNOTES:

1. REMOVE 2 PLUGS FROM ENGINE. REINSTALL WASHERS FROM THE PLUGS BEFORE INSTALLING REDUCERS.


NOTE:

**NOTES:**

# HYDRAULICS

ID0135071

## PUMP MOUNTING

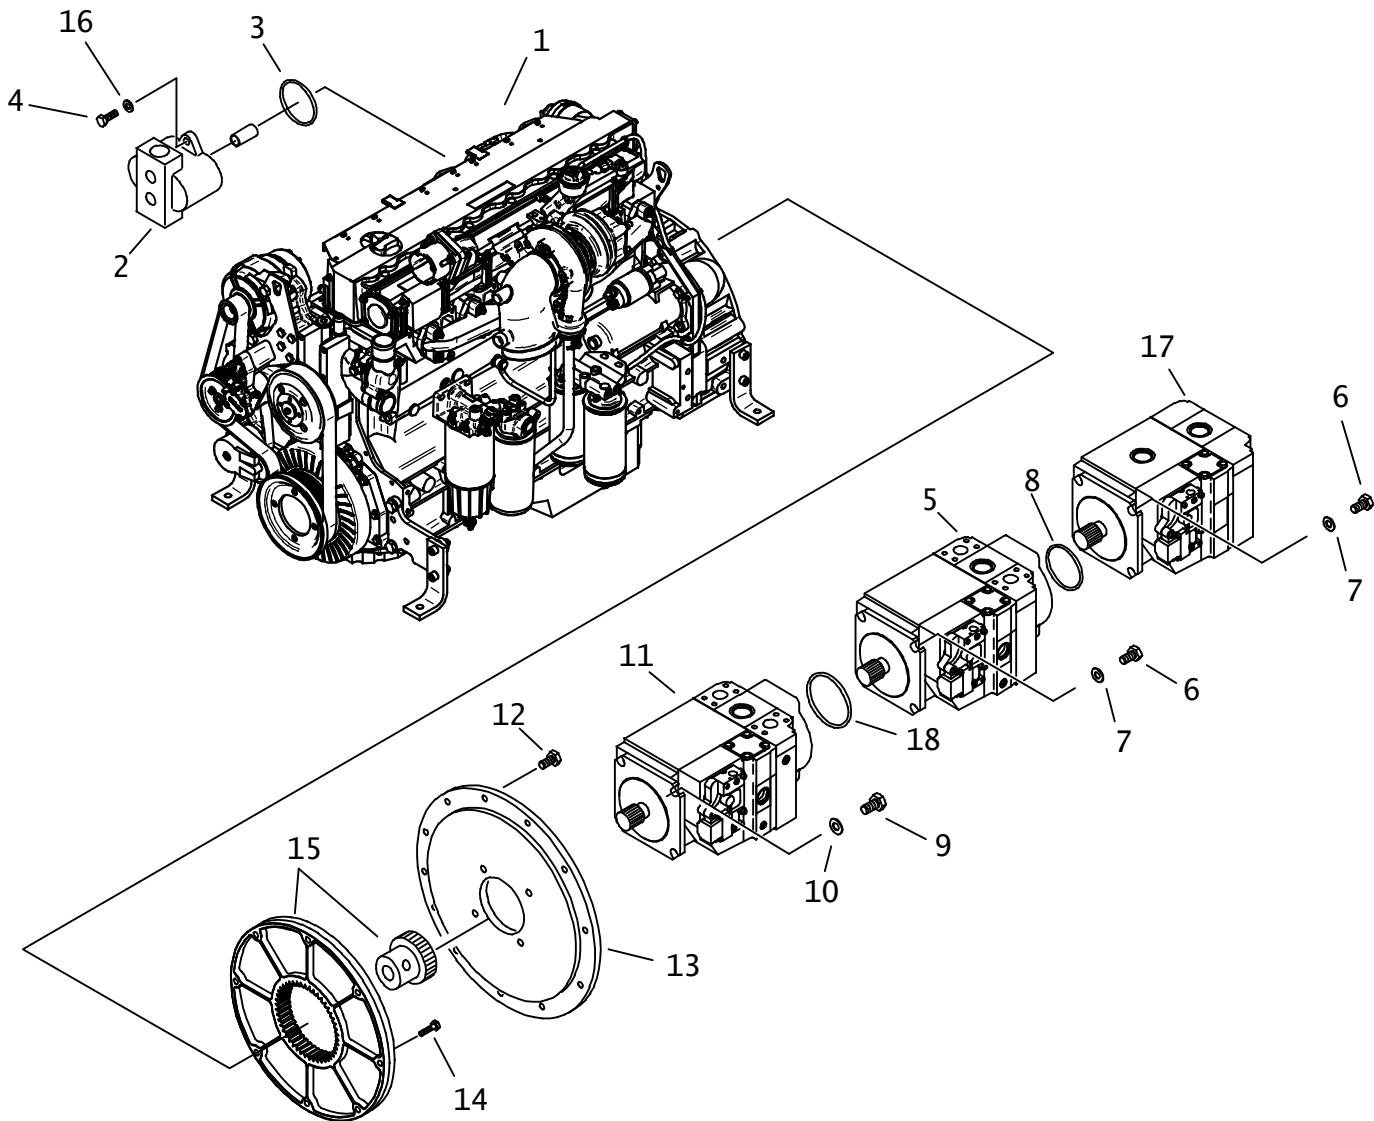

## PUMP MOUNTING

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	194-892	1	ENGINE- DEUTZ 2013 DIESEL T3	OBSOLETE, INCL REF NO. 3
2.	158-490	1	HYDRAULIC PUMP	AUX PUMP MOUNTING
3.	499-955	1	O-RING (ID 3.95, OD 4.25)	USE LOCTITE 242 OR EQUIVALENT
4.	106-333	2	SCREW (M12-1.75 X 40MM, 8.8)	
5.	149-902	1	HYDRAULIC PUMP (100 CC) 190-764 SEAL REPAIR KIT	
6.	105-858	8	BOLT (1/2-NC X 1-1/4")	USE LOCTITE 242 OR EQUIVALENT
7.	106-743	8	WASHER (.531, HARDENED)	
8.	157-1001	1	O-RING (2-158 D75)	
9.	105-319	4	BOLT (3/4-NC X 1-1/2")	USE LOCTITE 242 OR EQUIVALENT
10.	106-949	4	WASHER (3/4", HARDENED)	
11.	149-901	1	HYDRAULIC PUMP (130 CC) 190-763 SEAL REPAIR KIT	
12.	106-383	12	FLG LK SCREW (M10-1.50 X 30MM)	USE LOCTITE 242 OR EQUIVALENT
13.	349-001	1	FLYWHEEL HOUSING COVER	
14.	105-876	8	SCREW (M10-1.50 X 35MM)	USE LOCTITE 242 OR EQUIVALENT; TORQUE TO 32 FT LBS
15.	194-777	1	FLYWHEEL COUPLING	USE LOCTITE 242 OR EQUIVALENT, SEE FOOTNOTE 1
16.	106-397	2	WASHER (M12, HARDENED)	
17.	149-903	1	HYDRAULIC PUMP (75 CC) JT	
18.	157-1001	1	O-RING (2-158 D75)	USE AFTER SN CMWJT100J90000009
	157-183	1	O-RING (048 D70)	USE BEFORE SN CMW JT100K9000008, SEE FOOTNOTE 2

NOT SHOWN:


FOOTNOTES:

1. FLAT SIDE OF COUPLING GOES TOWARD FLYWHEEL. TORQUE TO 70 FT LBS.
2. USE O-RING 157-1001 ON ALL UNITS EXCEPT CMWAT100A90000001. USE 157-183 ON CMWAT100A90000001.

NOTE:

HUB FACE SHOULD MEASURE 9.07MM FROM END OF PUMP SHAFT

## ROTATION PUMP CONTROL

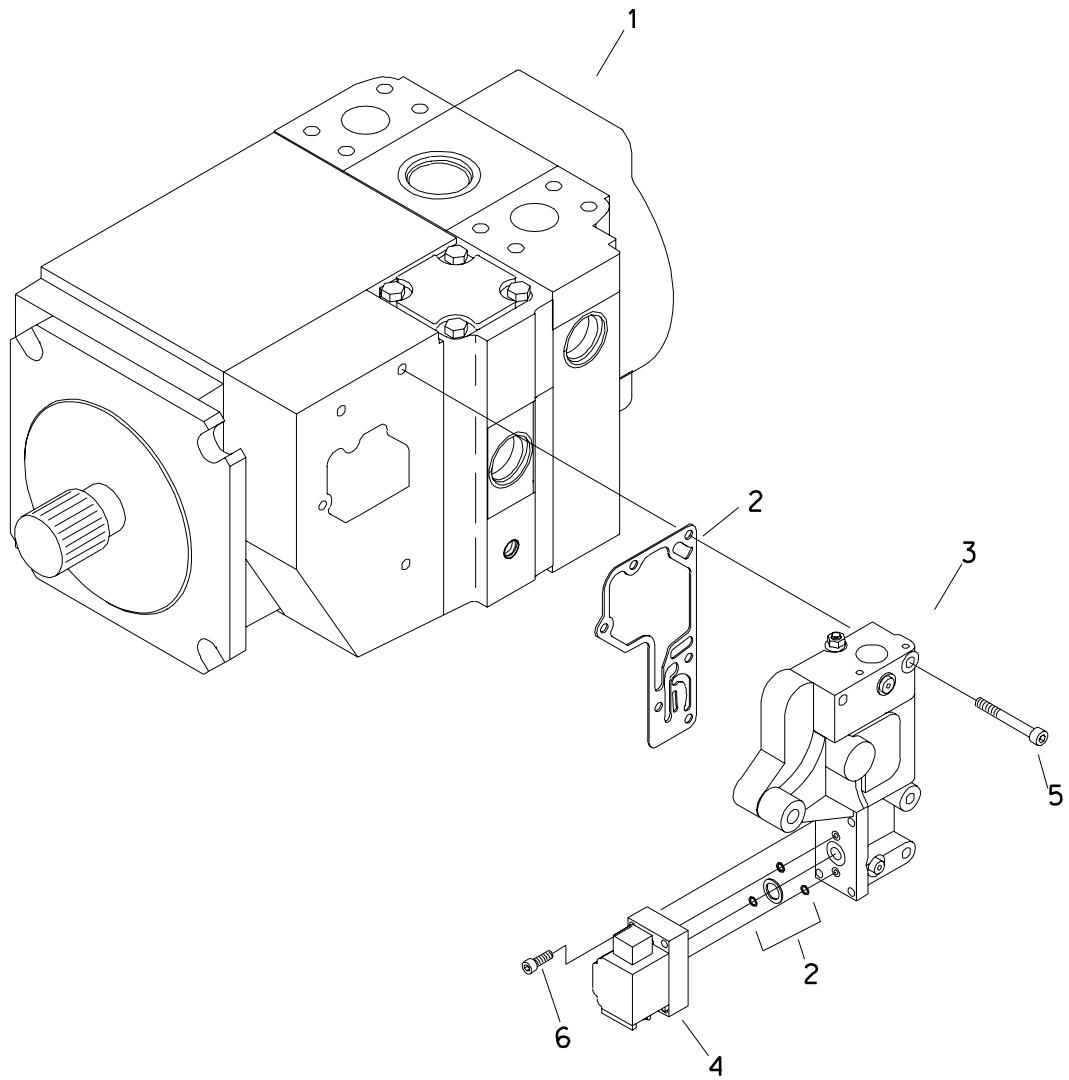


## ROTATION PUMP CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	149-901	-	HYDRAULIC PUMP (130 CC)	
	499-175	-	MULTIFUNCTION VALVE	
2.	190-981	1	EDC KIT 75/100/130CC	
3.	149-545	1	EDC CONTROLLER F/130CC	
4.	149-546	1	PILOT VALVE	
5.	107-402	4	SCREW (M6-1.00 X 50MM, SOC)	
6.	106-428	4	SCREW (M5-0.80X14MM,SOC)	

FOOTNOTES

## THRUST PUMP CONTROL

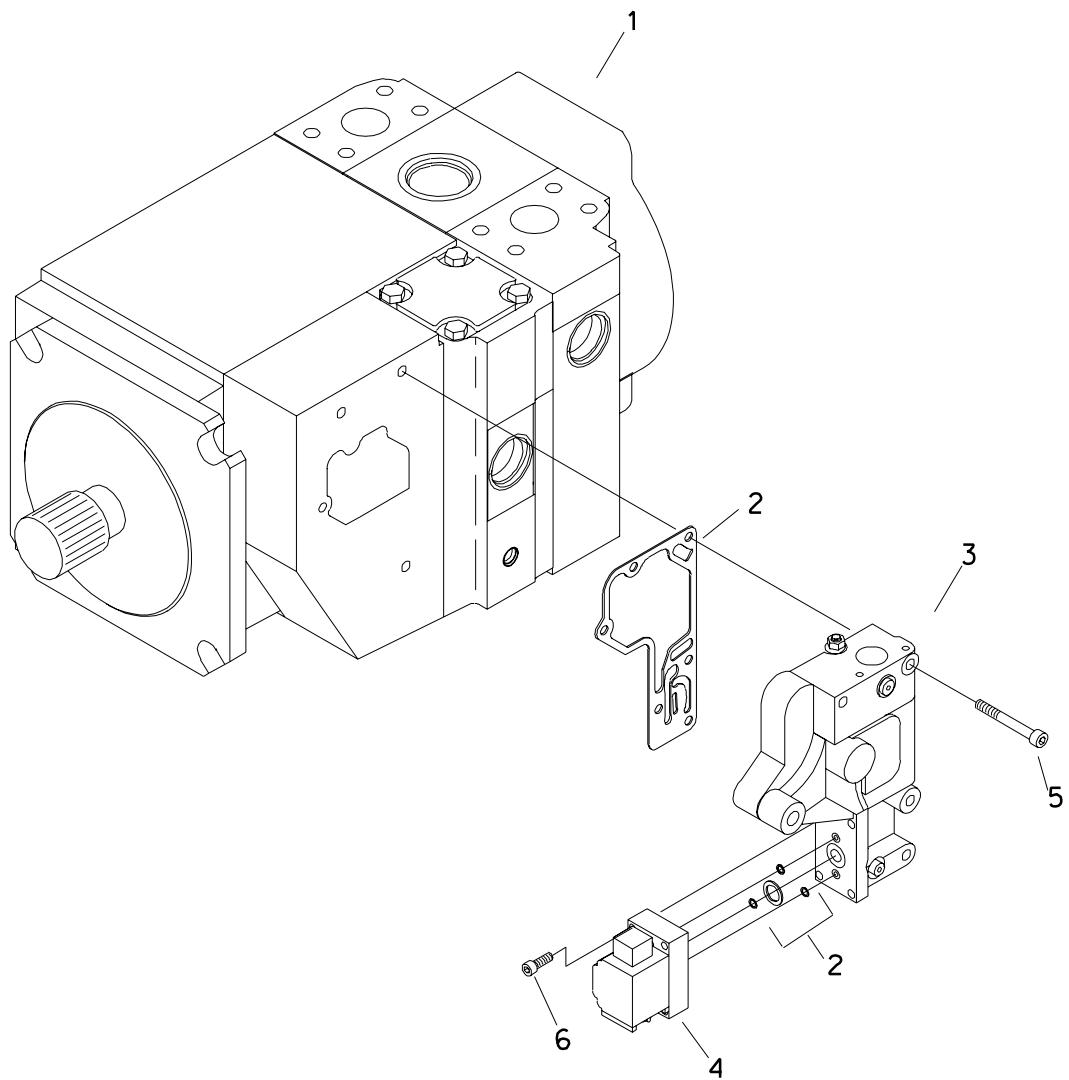


## THRUST PUMP CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	149-902	-	HYDRAULIC PUMP (100 CC)	
	500-764	-	MULTIFUNCTION VALVE	
2.	190-981	1	EDC KIT 75/100/130CC	
3.	149-544	1	EDC CONTROLLER F/100CC	
4.	149-546	1	PILOT VALVE	
5.	107-402	4	SCREW (M6-1.00 X 50MM, SOC)	
6.	106-428	4	SCREW (M5-0.80X14MM,SOC)	

FOOTNOTES

## FLUID PUMP CONTROL

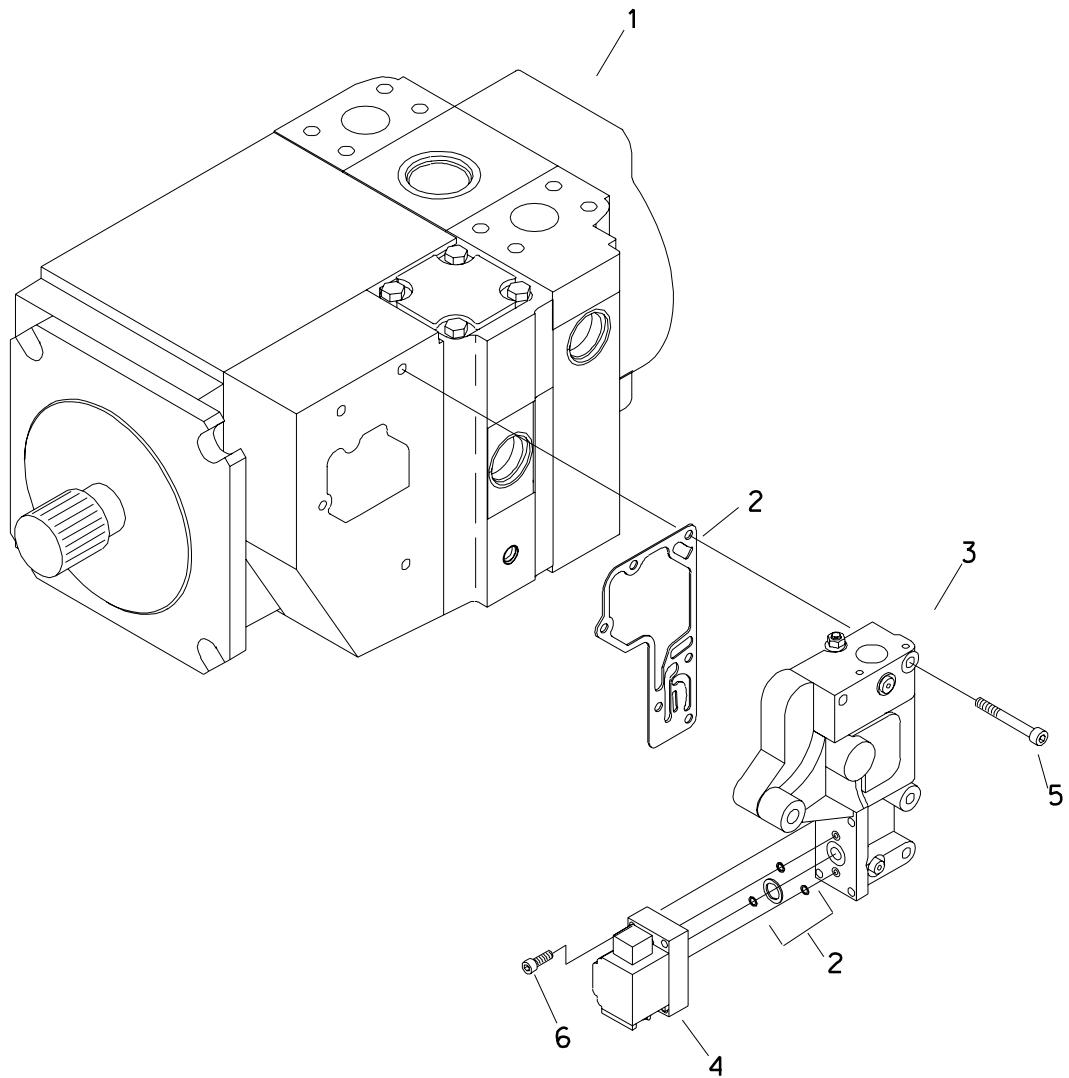


## FLUID PUMP CONTROL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	149-903	-	HYDRAULIC PUMP (75 CC)	
	500-764	-	MULTIFUNCTION VALVE	
	190-806	-	SEAL KIT	
2.	190-981	1	EDC KIT 75/100/130CC	
3.	159-533	1	EDC CONTROLLER F/75CC	
4.	149-546	1	PILOT VALVE	
5.	107-402	4	SCREW (M6-1.00 X 50MM, SOC)	
6.	106-428	4	SCREW (M5-0.80X14MM,SOC)	

FOOTNOTES

## CHARGE FILTER HYDRAULICS (JT)

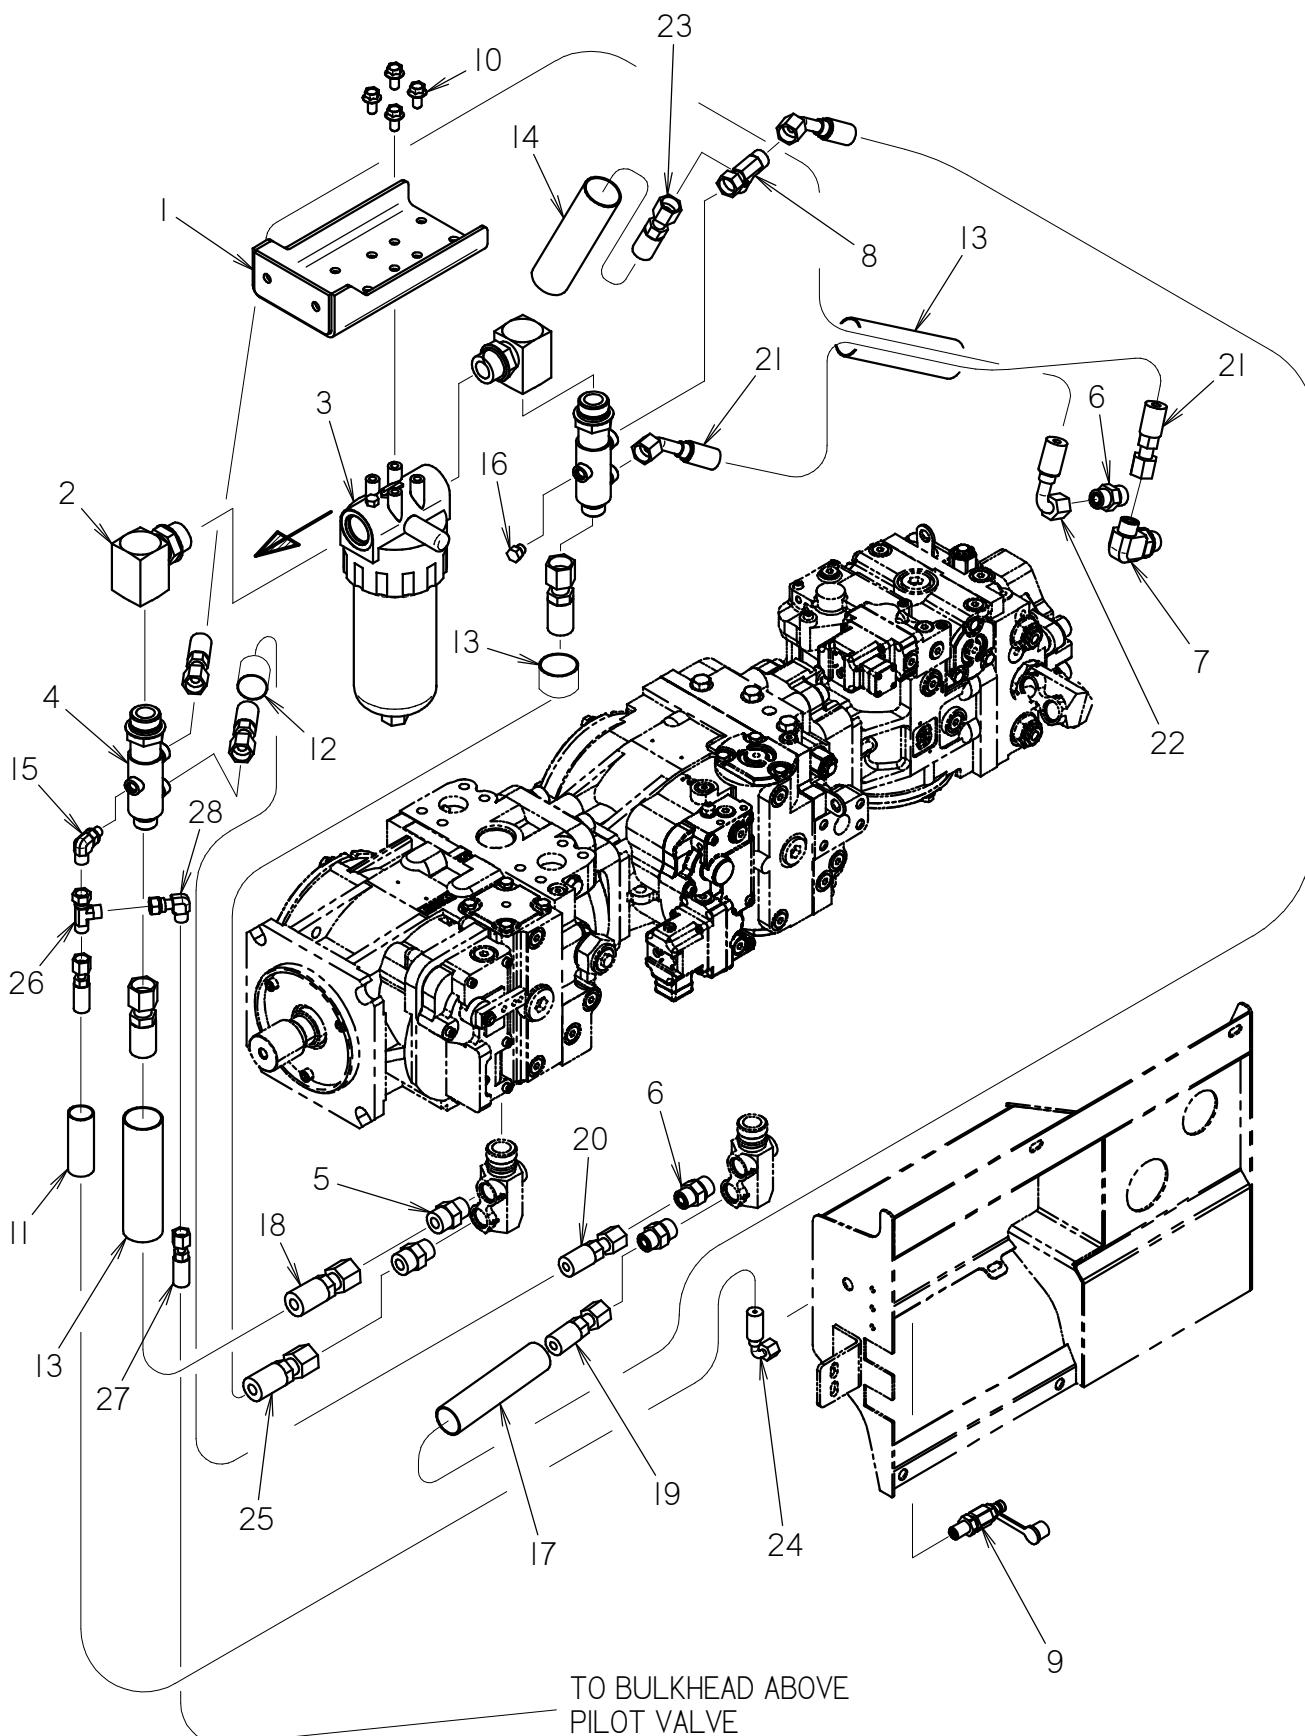

# CHARGE FILTER HYDRAULICS (JT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	349-734	1	FILTER BRACKET	
2	I49-837	2	CONNECTOR (I6S-I6SF90)	
3	I49-353	1	REMOTE FILTER	SEE FOOTNOTE 1
4	I49-367	2	CONNECTOR I6S-100-080-080-04SF	
5	I54-301	2	CONNECTOR (I0S-I0O)	
6	I54-279	3	CONNECTOR (O8O-O8S)	
7	I54-322	1	CONNECTOR (O8O-I0S90)	
8	I54-266	1	UNION RUN TEE (O8OFX-080-080)	SEE FOOTNOTE 2
9	I55-260	1	QDC ADAPTER (O2-040BK)	
10	I05-825	4	FLG LK BOLT (3/8-NC X 3/4)	
11	I17-718	1	ABRASION SLEEVE (1" X 36")	
12	I17-324	1	ABRASION SLEEVE (1.25" X 48")	
13	I17-655	3	ABRASION SLEEVE (1.59" X 38")	
14	I17-674	1	ABRASION SLEEVE (1.59" X 122")	SEE FOOTNOTE 2
15	I54-252	1	CONNECTOR (O4S-04090)	
16	I55-I25	1	PLUG (O4S)	
17	I17-388	1	ABRASION SLEEVE (1.25" X 42")	
18	I54-699	1	HOSE (I00FX-36"-2750)	
19	515-380	1	HOSE (O8OFX45-46"-3000)	
20	I54-745	1	HOSE (O8OFX-50"-3000)	
21	515-380	1	HOSE (O8OFX45-46"-3000)	
22	I54-884	1	HOSE (O8OFX90-60"-3000)	
23	515-701	1	HOSE (O8OFX90-I22"-3000)	SEE FOOTNOTE 2
24	I53-365	1	HOSE (O40FX90S-34"-3000)	
25	I54-699	1	HOSE (I00FX-36"-2750)	
26	I54-265	1	UNION RUN TEE (O40FX-040-040)	
27	I50-1663	1	HOSE (O40FX45-I05"-3000)	
28	I54-255	1	UNION (O40-040FX90)	


NOT SHOWN:

FOOTNOTES:

1. I53-375 IS SERVICE ELEMENT FOR I49-353
2. USED WITH AIR GREASER

NOTE:

## CHARGE FILTER HYDRAULICS (AT)

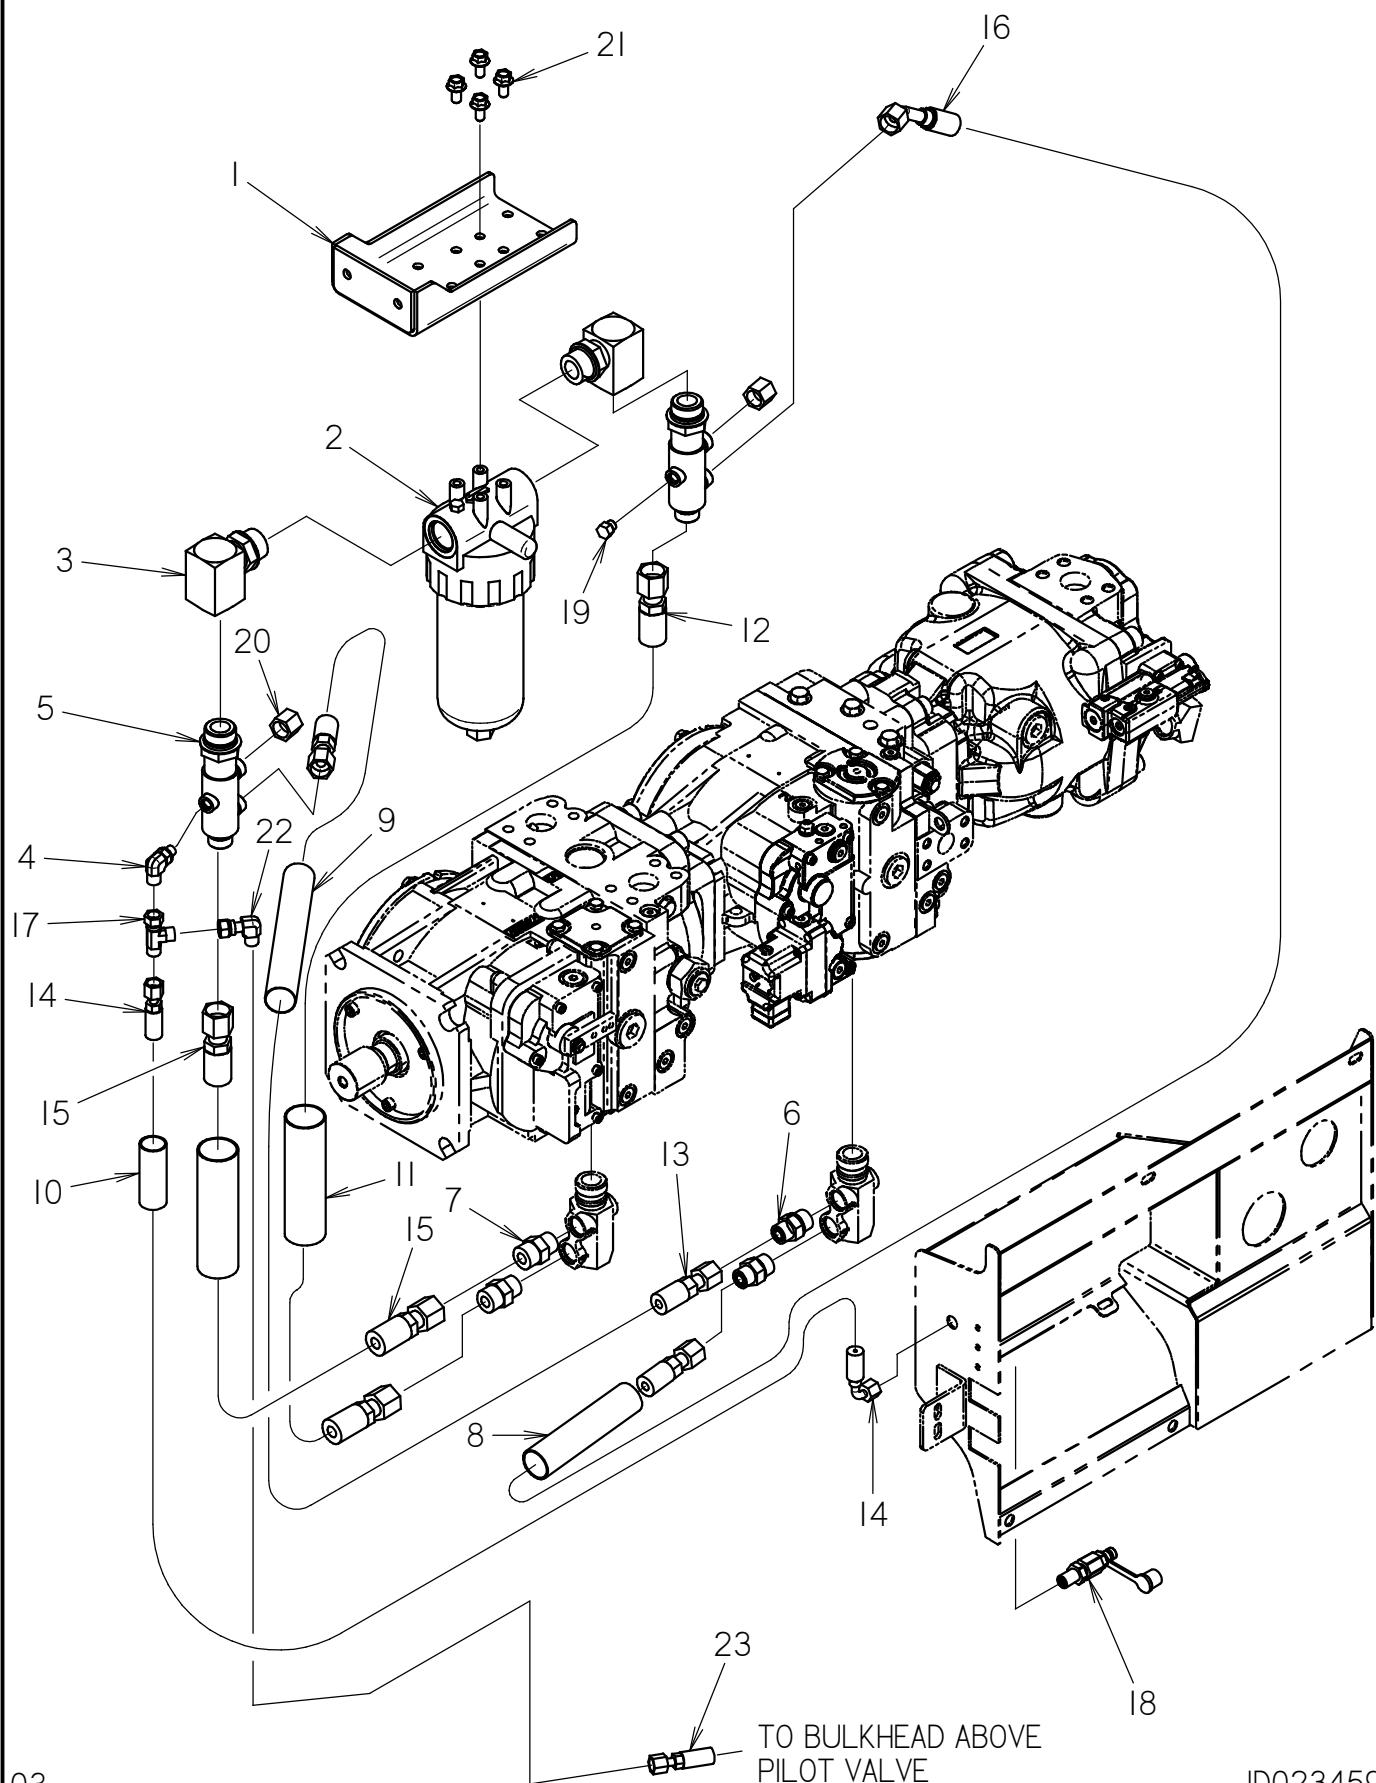

# CHARGE FILTER HYDRAULICS (AT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I49-734	1	FILTER BRACKET	
2	I49-353	1	REMOTE FILTER	SEE FOOTNOTE I
3	I49-837	2	CONNECTOR (I6S-I6SF90)	
4	I54-252	1	CONNECTOR (04S-04090)	
5	I49-367	2	CONNECTOR I6S-100-080-080-04SF	
6	I54-279	2	CONNECTOR (080-10S)	
7	I54-301	2	CONNECTOR (I0S-I00)	
8	I17-388	1	ABRASION SLEEVE (1.25" X 42")	
9	I17-324	1	ABRASION SLEEVE (1.25" X 48")	
10	I17-718	1	ABRASION SLEEVE (1" X 36")	
11	I17-655	2	ABRASION SLEEVE (1.59" X 38")	
12	I54-699	1	HOSE (I00FX-36"-2750)	
13	I54-745	1	HOSE (080FX-50"-3000)	
14	I53-365	1	HOSE (040FX90S-34"-3000)	
15	I54-699	1	HOSE (I00FX-36"-2750)	
16	515-380	1	HOSE (080FX45-46"-3000)	
17	I54-265	1	UNION RUN TEE (040FX-040-040)	
18	I55-260	1	QDC ADAPTER (02-040BK)	
19	I55-125	1	PLUG (04S)	
20	I54-327	2	CAP (080F)	
21	I05-825	4	FLG LK BOLT (3/8-NC X 3/4)	
22	I54-255	1	UNION (040-040FX90)	
23	I50-I663	1	HOSE (040FX45-105"-3000)	


NOT SHOWN:

FOOTNOTES:

- I. 153-575 IS SERVICE ELEMENT FOR I49-353

NOTE:

## HYDRAULIC RESERVOIR

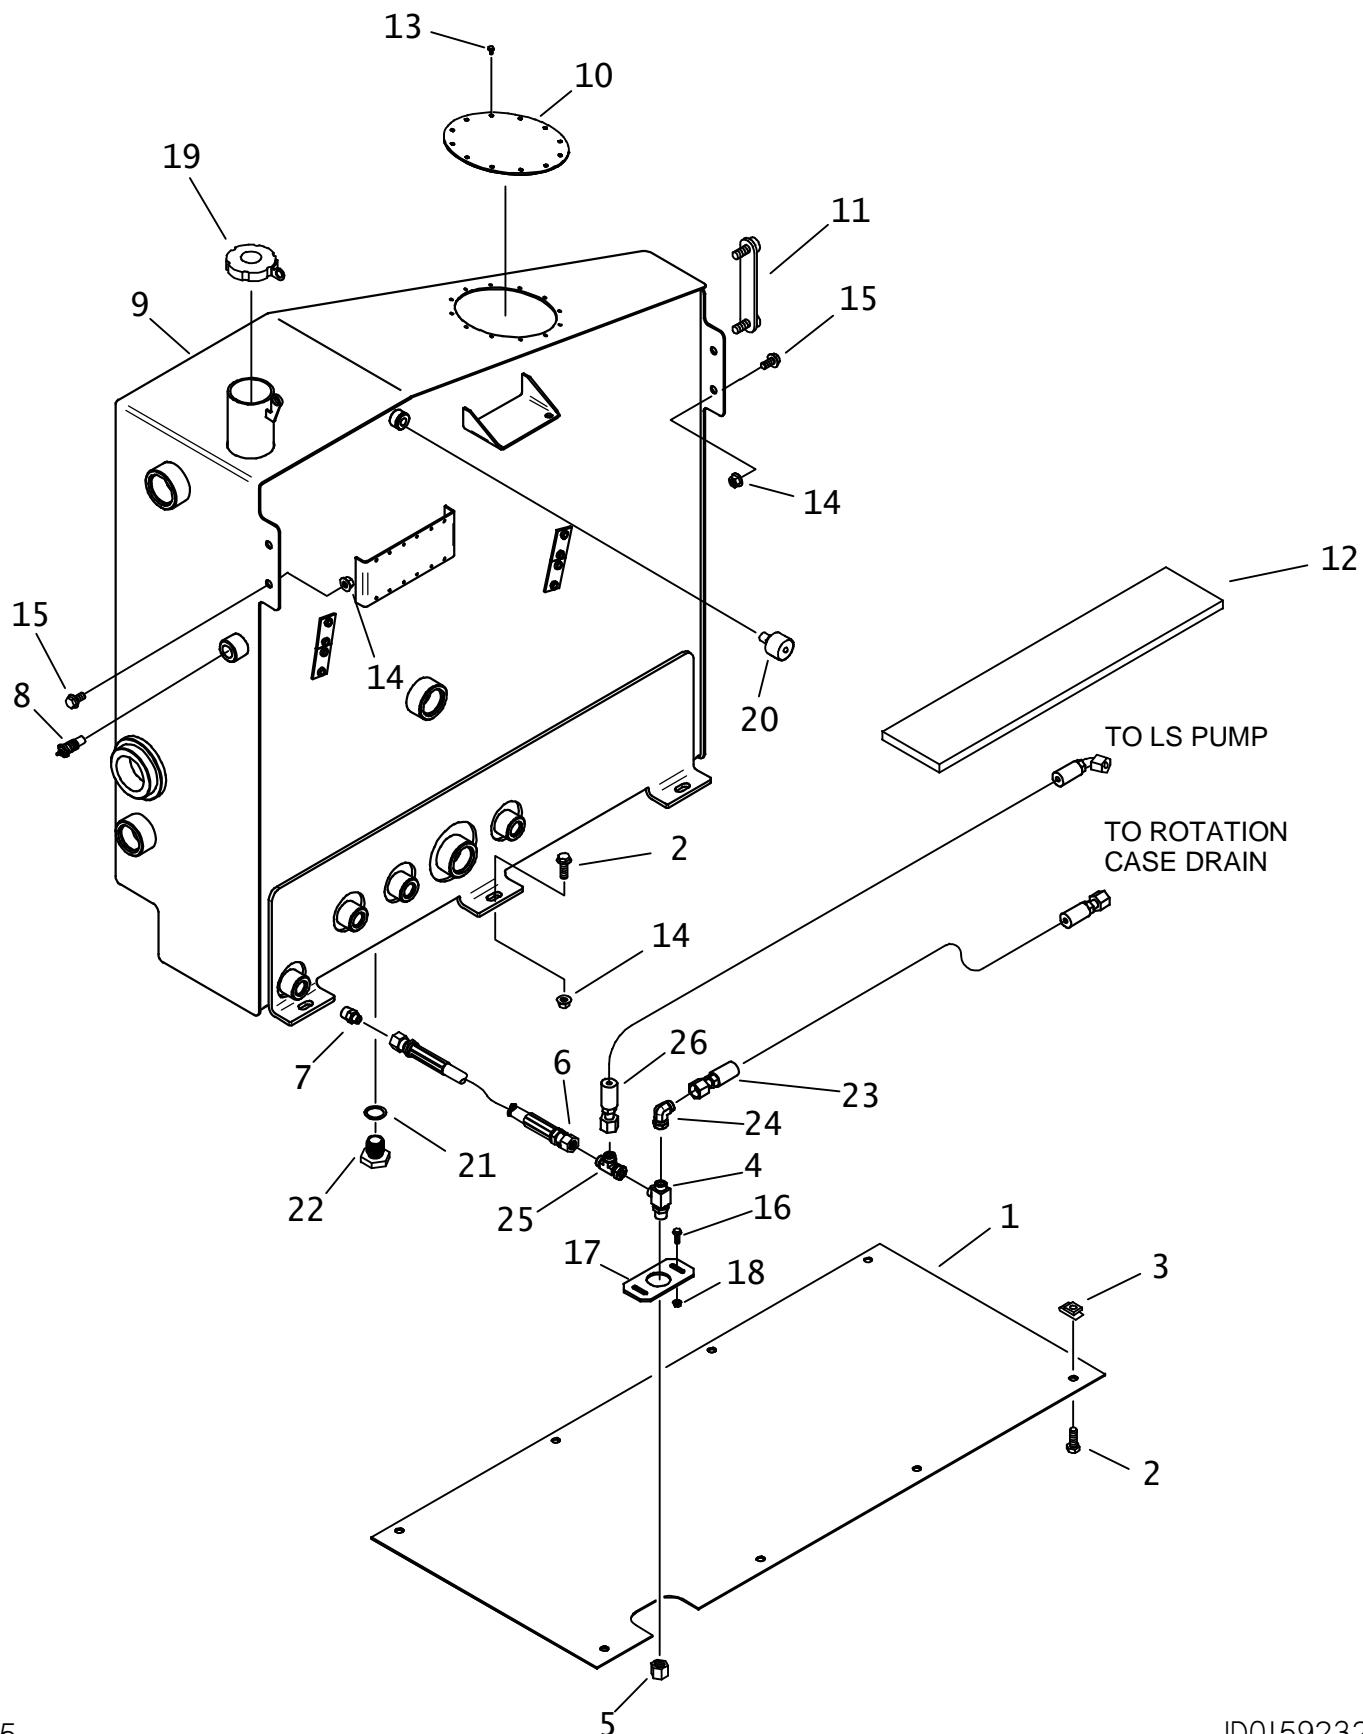

# HYDRAULIC RESERVOIR

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	370-314	1	BOTTOM COVER	
2.	106-724	7	FLG SCREW (M10-1.5 X 25MM)	
3.	106-558	4	CLIP NUT (M10-1.5)	
4.	514-002	1	BK RUN TEE (120)	
5.	154-328	1	CAP (120F)	
6.	150-2364	1	HOSE (120FX-15.5"-3000)	JT ONLY
	150-1830	1	HOSE (120FX-12.3"-3000)	AT ONLY
7.	154-247	1	CONNECTOR (10S-120)	
8.	214-819	1	TEMPERATURE SWITCH	
9.	300-2394	1	WELDMENT, HYDRAULIC TANK	USE ON "JT" OPTION
10.	349-090	1	LID	USE LOCTITE AVIATION SEALANT OR EQUIVALENT
11.	364-171	1	SIGHT GAUGE	
12.	349-098	1	HYD TANK PAD	SEE FOOTNOTE 1
13.	105-214	12	FLG SCREW (#10-24 X .5")	
14.	106-387	7	FLG LOCKNUT (M10-1.50)	
15.	106-382	4	FLG LK SCREW (M10-1.50 X 20MM)	
16.	106-379	2	FLG LK SCREW (M6-1.00 X 20MM)	
17.	300-9494	1	MOUNT BAR	
18.	106-385	2	FLG LOCKNUT (M6-1.00)	
19.	111-046	1	LOCKING CAP (NON-VENTED)	
20.	111-021	1	BREATHER CAP (TANK)	
21.	149-829	1	1" SEAL WASHER	
22.	149-398	1	DRAIN PLUG (1-UNF, .375 ORF)	
23.	150-2704	1	HOSE (120FX-424"-3000)	
24.	154-457	1	UNION (120-120FX90)	
25.	154-368	1	UN RUN TEE (120FX-120-120)	AT ONLY
26.	150-3088	1	HOSE (120FX45-34"-4000)	AT ONLY

NOT SHOWN:

SERVICE PARTS:


150-1876	RELIEF VALVE
500-1415	SEAL REPAIR KIT
500-1575	2-POS, 2-WAY BLOCKING VALVE
500-1311	SOLENOID COIL, 12VDC W/ZENER DIODE
500-1414	SEAL REPAIR KIT

FOOTNOTES:

1. APPLY ADHESIVE (P/N 256-665) TO BOTTOM OF PAD BEFORE INSTALLING ON MAIN FRAME.

NOTE:

## HYDRAULIC RESERVIOR (AT)

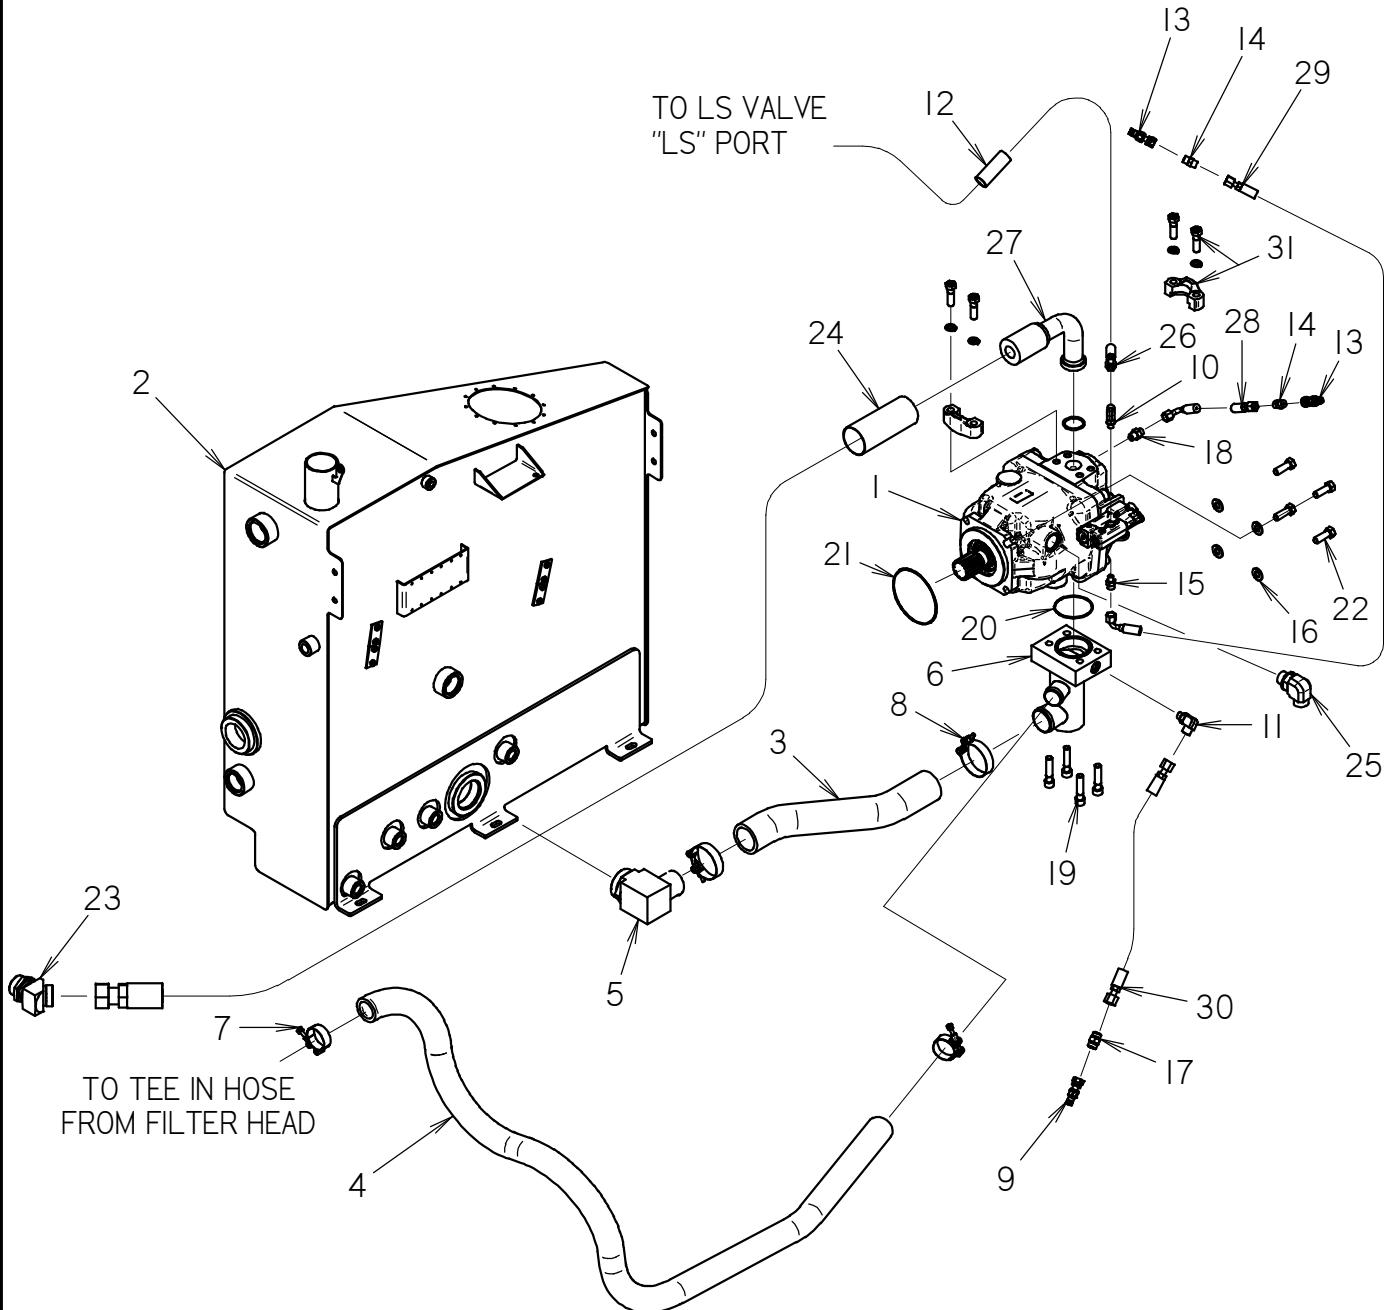

# HYDRAULIC RESERVIOR (AT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-2208	1	HYDRAULIC PUMP	
2	300-828I	1	WELDMENT, HYDRAULIC TANK	
3	I16-817	1	AR BULK HOSE 2"	USE 19"
4	I16-588	1	BULK HOSE 1.5"	USE 37"
5	150-2317	1	S/O COUPLER (32S-32H90)	
6	150-2316	1	S/O COUPLER (40F-32H-24H-06SF)	
7	III-028	2	T-BOLT CLAMP (1.75"-2.00")	
8	I10-815	2	T-BOLT CLAMP (2.5")	
9	I59-157	1	QDC ADAPTER (02-060F)	
10	I54-401	1	CONNECTOR (04S-04090, ORF)	
11	I54-342	1	CONNECTOR (06S-06090)	
12	I17-I70	1	ABRASION SLEEVE (1.00" X 197")	
13	I59-156	2	QDC ADAPTER (02-040F)	
14	I54-335	2	CONNECTOR (040-040)	
15	I54-278	1	CONNECTOR (04S-040)	
16	I06-743	4	WASHER (.531", HARDENED)	
17	I54-413	1	CONNECTOR (060-060)	
18	I54-220	1	CONNECTOR (040-06S)	
19	I05-938	4	BOLT (1/2-NC X 2-1/4", SOC)	
20	I57-015	1	O-RING (232 D70)	
21	I57-1001	1	O-RING (2-158 D75)	
22	I05-1200	4	BOLT (1/2-NC X 1-1/2", GD 8)	USE LOCTITE 242
23	I53-395	1	BK CONNECTOR (200-20045)	
24	I16-641	1	ABRASION SLEEVE (2.54" X 132")	
25	I54-270	1	CONNECTOR (12S-12090)	
26	I50-2829	1	HOSE (040FX90S-189"-4000)	
27	I50-2849	1	HOSE (200FX-20FLH 90(I20) -I24"-4000)	
28	I50-2348	1	HOSE (040FXM-24 - 4000)	
29	515-305	1	HOSE (040FX90S-21"-5000)	
30	I57-936	1	HOSE (06DFX-22" -3000)	
31	I59-436	1	SPLIT FLANGE (20SFL, SET)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## PUMP HYDRAULICS

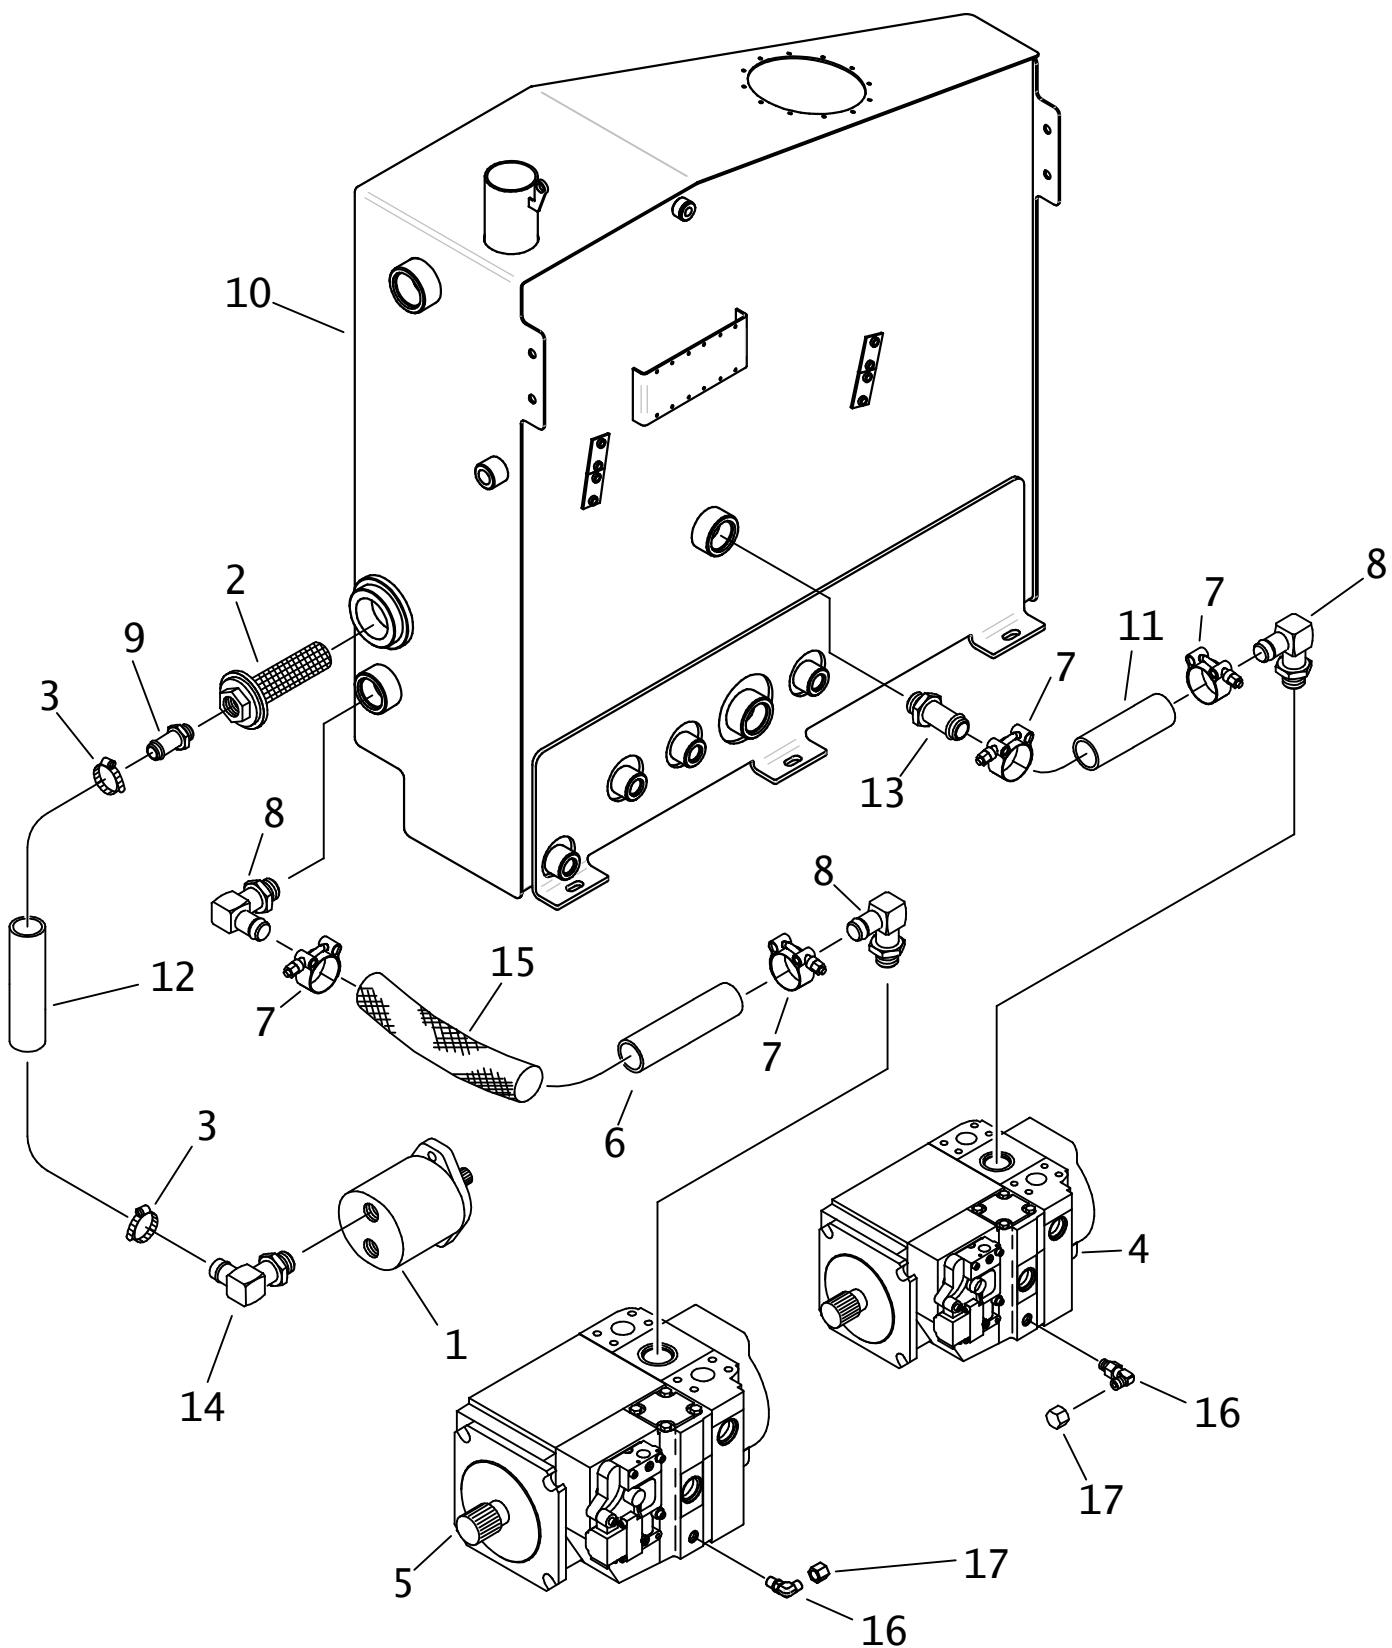

## PUMP HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	158-490	-	HYDRAULIC PUMP	
	500-747		SEAL REPAIR KIT	
2.	159-432	1	TANK FILTER SCREEN	
3.	110-353	2	WORM CLAMP (3/4" TO 1-1/2")	
4.	149-902	-	HYDRAULIC PUMP (100 CC)	
	190-764		SEAL REPAIR KIT	
5.	149-901	-	HYDRAULIC PUMP (130 CC)	
	190-763		SEAL REPAIR KIT	
6.	116-588 AR	BULK HOSE (1-1/2", SOLD PER 1')		USE 1 @ 23.5"
7.	111-028	4	T-BOLT CLAMP (1-3/4" TO 2")	
8.	514-136	3	S/O COUPLER (20S-24H90)	
9.	154-476	1	S/O COUPLER (20S-16H)	
10.	300-2394	-	WELDMENT, HYDRAULIC TANK	
11.	116-588 AR	BULK HOSE (1-1/2", SOLD PER 1')		USE 1 @ 13"
12.	116-460 AR	BULK HOSE (1", SOLD PER 1')		USE 1 @ 23"
13.	155-148	1	S/O COUPLER (20S-24H)	
14.	155-195	1	S/O COUPLER (20S-16H90)	
15.	115-680	1	ABRASION SLEEVE (2.07" X 21")	
16.	154-226	2	CONNECTOR (040-06S90)	
17.	154-296	2	CAP (040F)	

NOT SHOWN:


FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# HYDROSTATIC GAUGE HYDRAULICS (JT)

ENDS WITH S/N: CMWJT100PA0000013

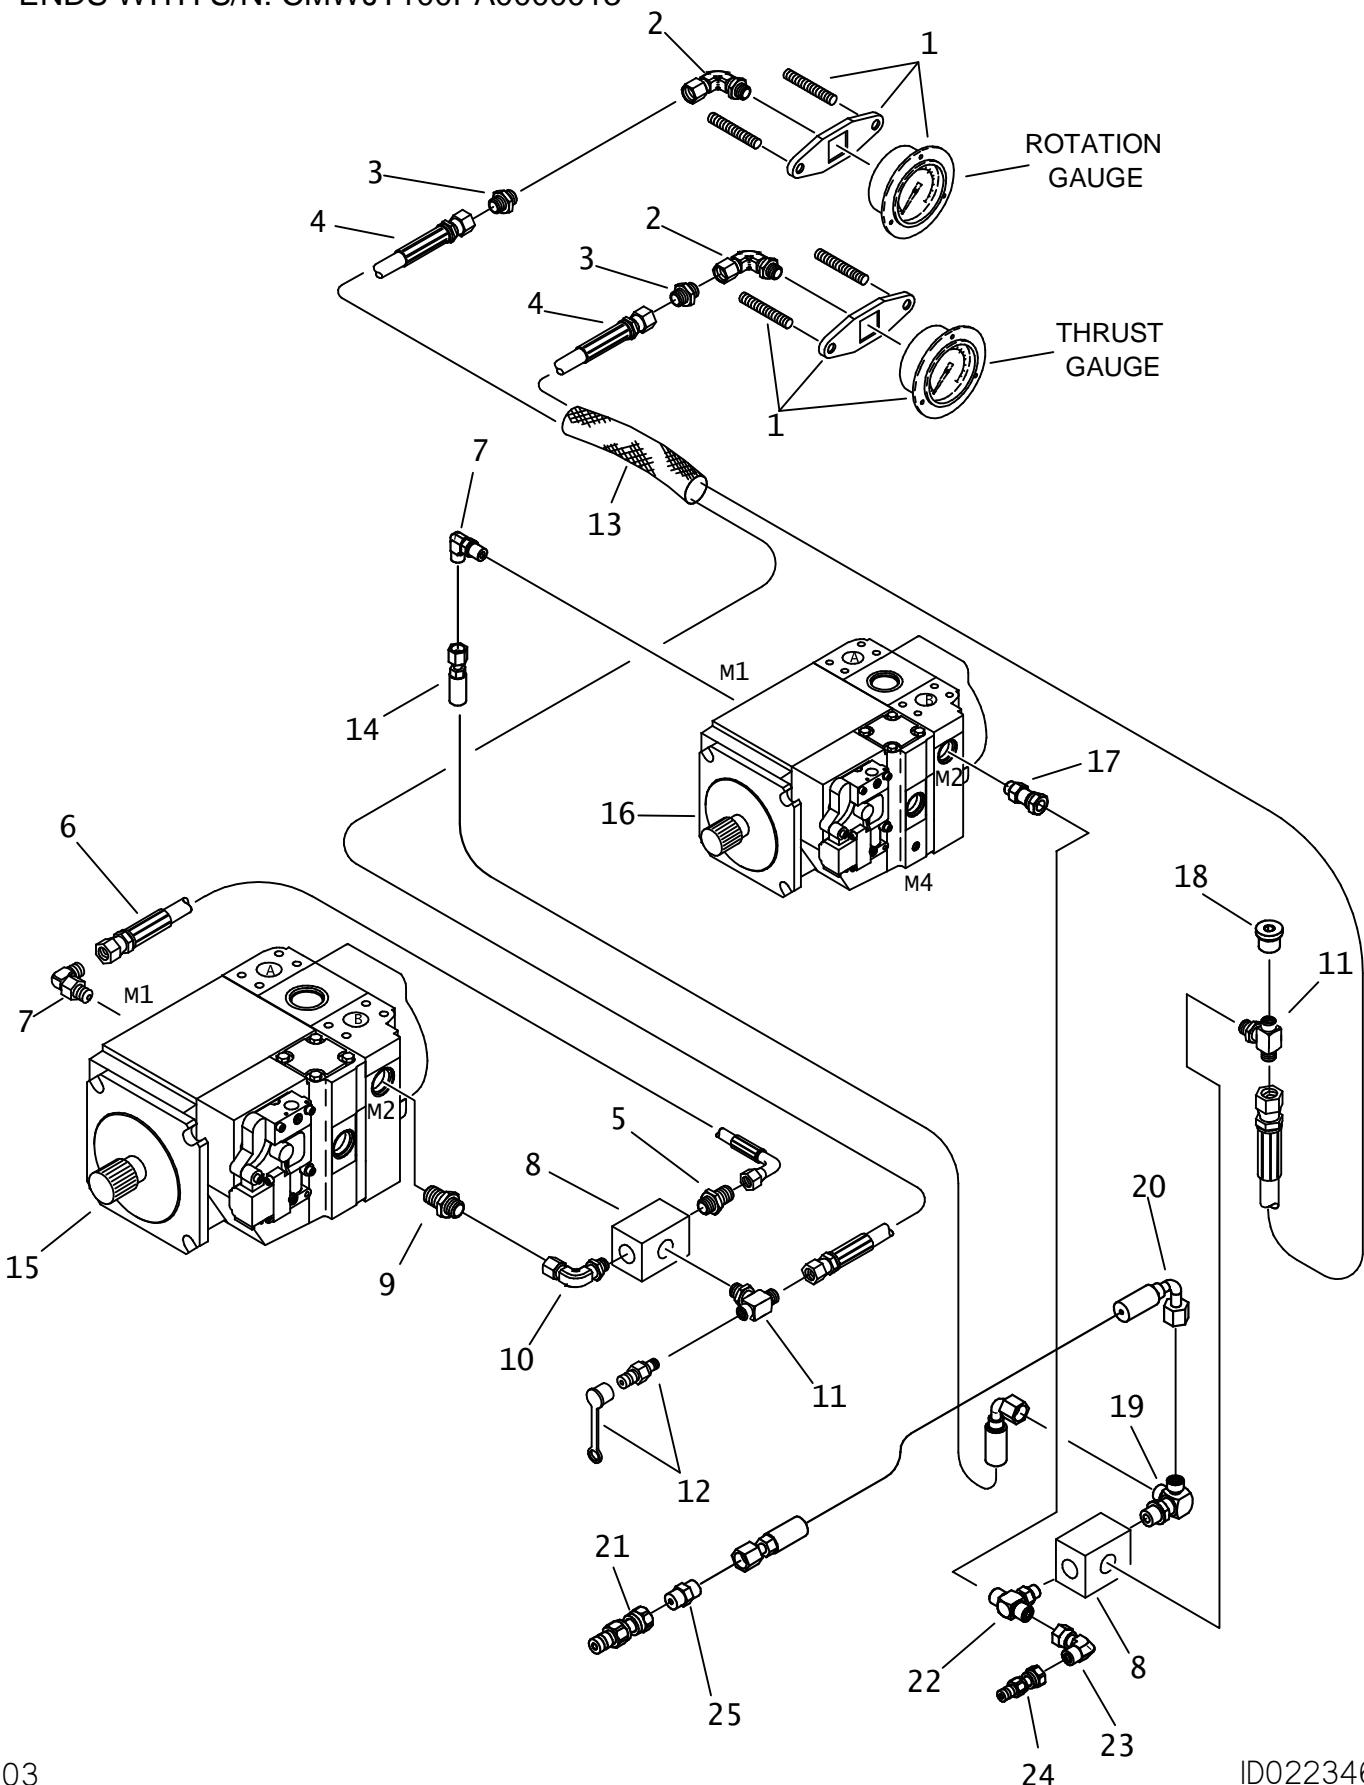

# HYDROSTATIC GAUGE HYDRAULICS (JT)

ENDS WITH S/N: CMWJT100PA0000013

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	217-079	2	PRESSURE GAUGE (10,000PSI)	
	499-202		GAUGE CLAMP & STUDS	
2.	514-355	2	CONNECTOR (04NF-04NF90)	
3.	154-020	2	CONNECTOR (04N-04J)	
4.	155-490	2	HOSE (04JFX-306"-6000)	
5.	154-220	1	CONNECTOR (040-06S)	
6.	515-304	1	HOSE (040FX90S-15"-5000)	
7.	154-226	2	CONNECTOR (040-06S90)	
8.	159-475	2	SHUTTLE VALVE	
9.	154-221	1	CONNECTOR (06S-060)	
10.	154-343	1	UNION (06S-060FX90)	
11.	149-043	2	BK BR TEE (06S-04J-04SF)	
12.	159-154	1	QDC ADAPTER (02-04S)	
13.	116-840	1	ABRASION SLEEVE (1.00" x 306")	
14.	515-305	1	HOSE (040FX90-21"-5000)	
15.	149-901	-	HYDRAULIC PUMP (130 CC)	
16.	149-902	-	HYDRAULIC PUMP (100 CC)	
17.	150-2787	1	CONNECTOR (06S-060FX)	
18.	154-383	1	PLUG (04S)	
19.	154-230	1	BRANCH TEE (06S-040-040)	
20.	153-911	1	HOSE (040FX90M-10"-5000-AR)	
21.	159-156	1	QDC ADAPTER (02-040F)	
22.	154-346	1	BRANCH TEE (06S-060-060)	
23.	154-228	1	UNION (060-060FX90)	
24.	159-157	1	QDC ADAPTER (02-060F)	
25.	154-335	1	CONNECTOR (040-040)	

NOT SHOWN:

FOOTNOTES:


NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

NOTE:

# HYDROSTATIC GAUGE HYDRAULICS

BEGINS WITH S/N: CMWJT100KA0000014

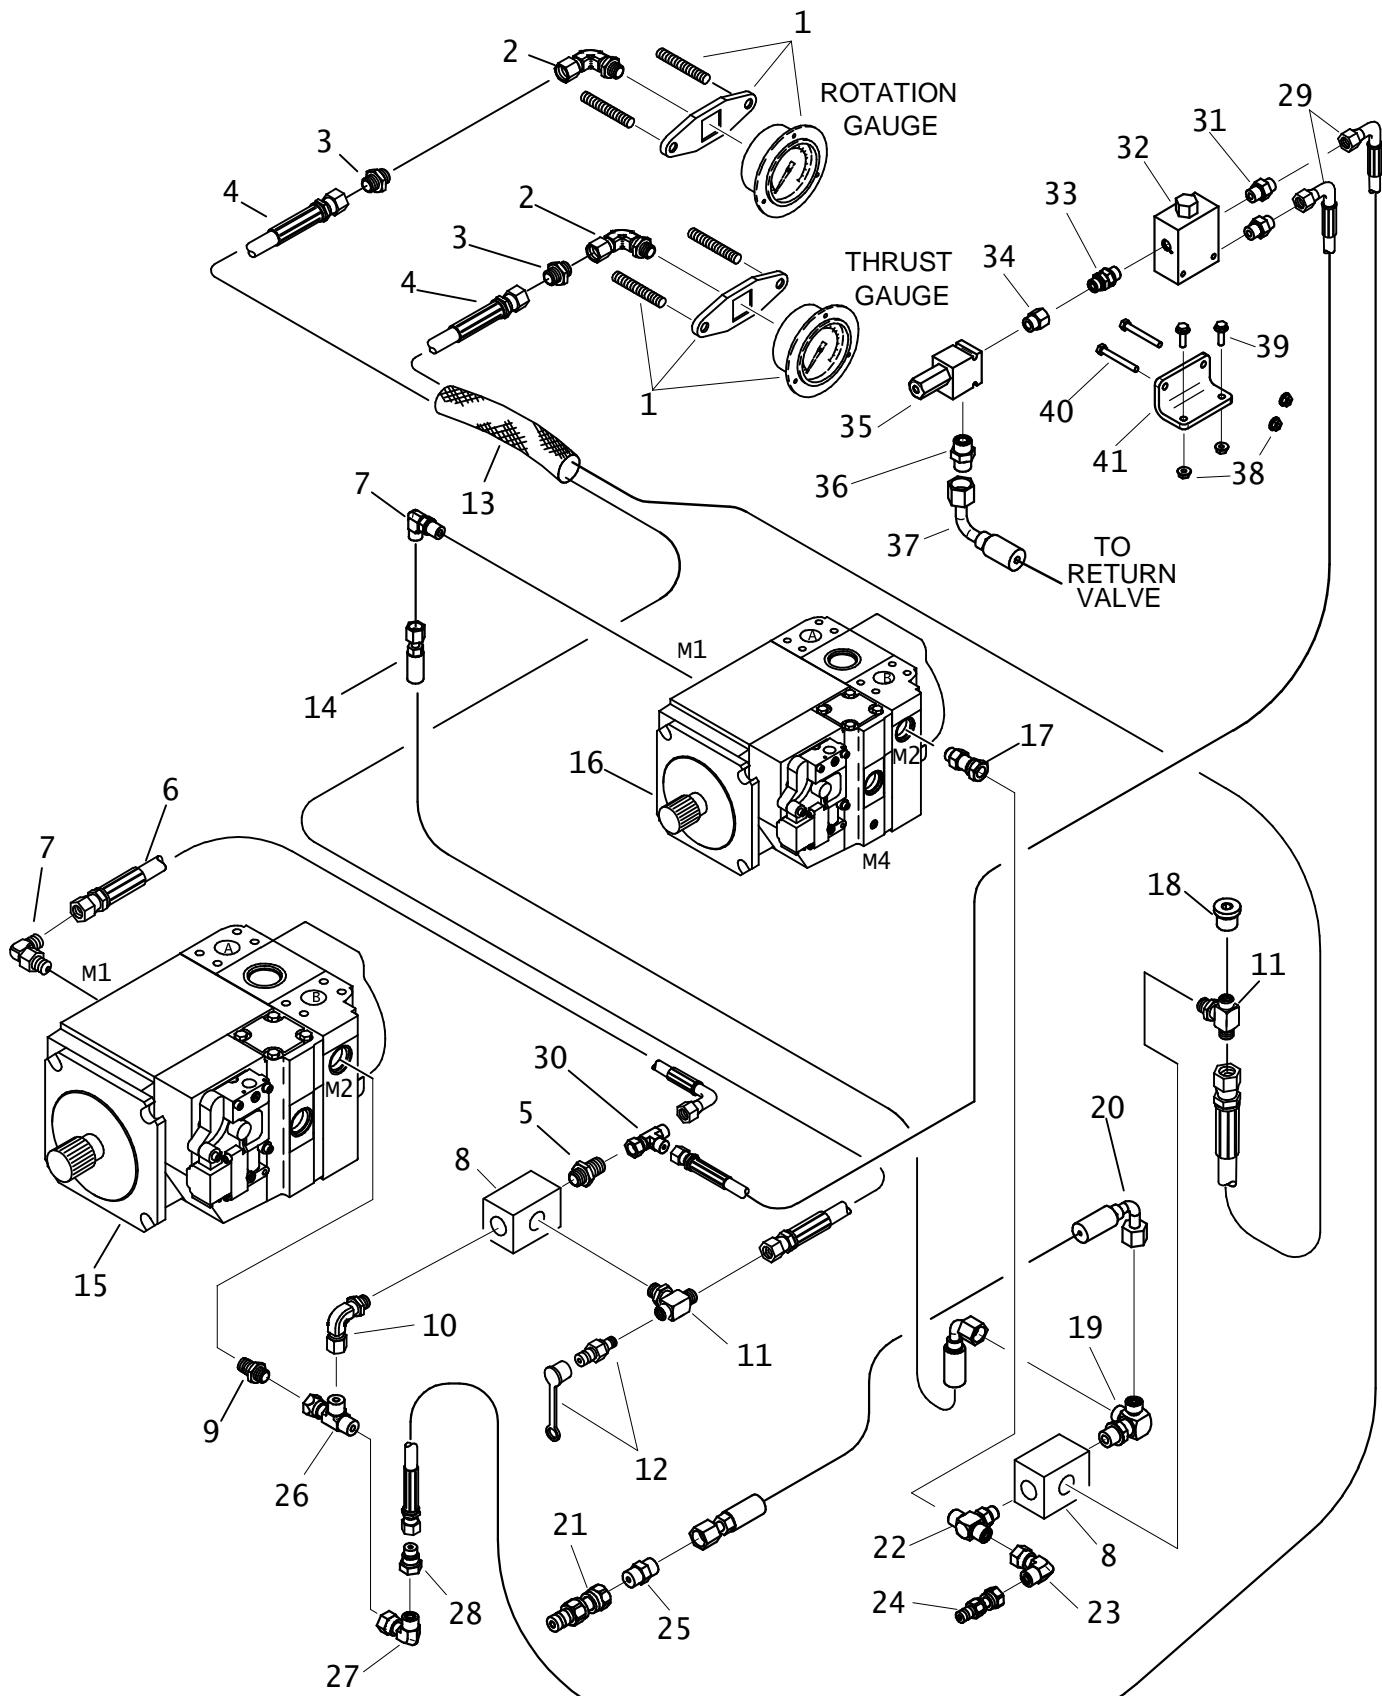

# HYDROSTATIC GAUGE HYDRAULICS

BEGINS WITH S/N: CMWJT100KA0000014

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	217-079	2	PRESSURE GAUGE (10,000PSI)	
	499-202		GAUGE CLAMP & STUDS	
2.	514-355	2	CONNECTOR (04NF-04NF90)	
3.	154-020	2	CONNECTOR (04N-04J)	
4.	155-490	2	HOSE (04JFX-306"-6000)	
5.	154-220	1	CONNECTOR (040-06S)	
6.	515-304	1	HOSE (040FX90S-15"-5000)	
7.	154-226	2	CONNECTOR (040-06S90)	
8.	159-475	2	SHUTTLE VALVE	
9.	154-221	1	CONNECTOR (06S-060)	
10.	154-343	1	UNION (06S-060FX90)	
11.	149-043	2	BK BR TEE (06S-04J-04SF)	
12.	159-154	1	QDC ADAPTER (02-04S)	
13.	116-840	1	ABRASION SLEEVE (1.00" x 306")	
14.	515-305	1	HOSE (040FX90-21"-5000)	
15.	149-901	-	HYDRAULIC PUMP (130 CC)	
16.	149-902	-	HYDRAULIC PUMP (100 CC)	
17.	150-2787	1	CONNECTOR (06S-060FX)	
18.	154-383	1	PLUG (04S)	
19.	154-230	1	BRANCH TEE (06S-040-040)	
20.	153-911	1	HOSE (040FX90M-10"-5000-AR)	
21.	159-156	1	QDC ADAPTER (02-040F)	
22.	154-346	1	BRANCH TEE (06S-060-060)	
23.	154-228	1	UNION (060-060FX90)	
24.	159-157	1	QDC ADAPTER (02-060F)	
25.	154-335	1	CONNECTOR (040-040)	
26.	154-344	1	UN RUN TEE (006FX-060-060)	
27.	154-228	1	UNION (060-060FX90)	
28.	154-373	1	REDUCER (040-06F)	
29.	150-1872	2	HOSE (040FX90-26"-6000)	
30.	154-265	1	UNION RUN TEE (040FX-040-040)	
31.	154-220	2	CONNECTOR (040-06S)	
32.	150-1158	1	FLUSHING VALVE	
33.	155-153	1	CONNECTOR (06S-06S)	
34.	155-163	1	REDUCER (08S-06SF)	
35.	150-2026	1	RELIEF VALVE	
36.	154-222	1	CONNECTOR (060-08S)	
37.	150-3054	1	HOSE (060FX-14"-3000)	
38.	106-385	4	FLG LOCKNUT (M6-1.00)	
39.	106-161	2	FLG SCREW (M6-1.00 x 20mm)	
40.	107-025	2	SCREW (M6-1.00x 50mm)	
41.	300-5804	1	FORMED PLATE	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# HYDROSTATIC GAUGE HYDRAULICS (AT)

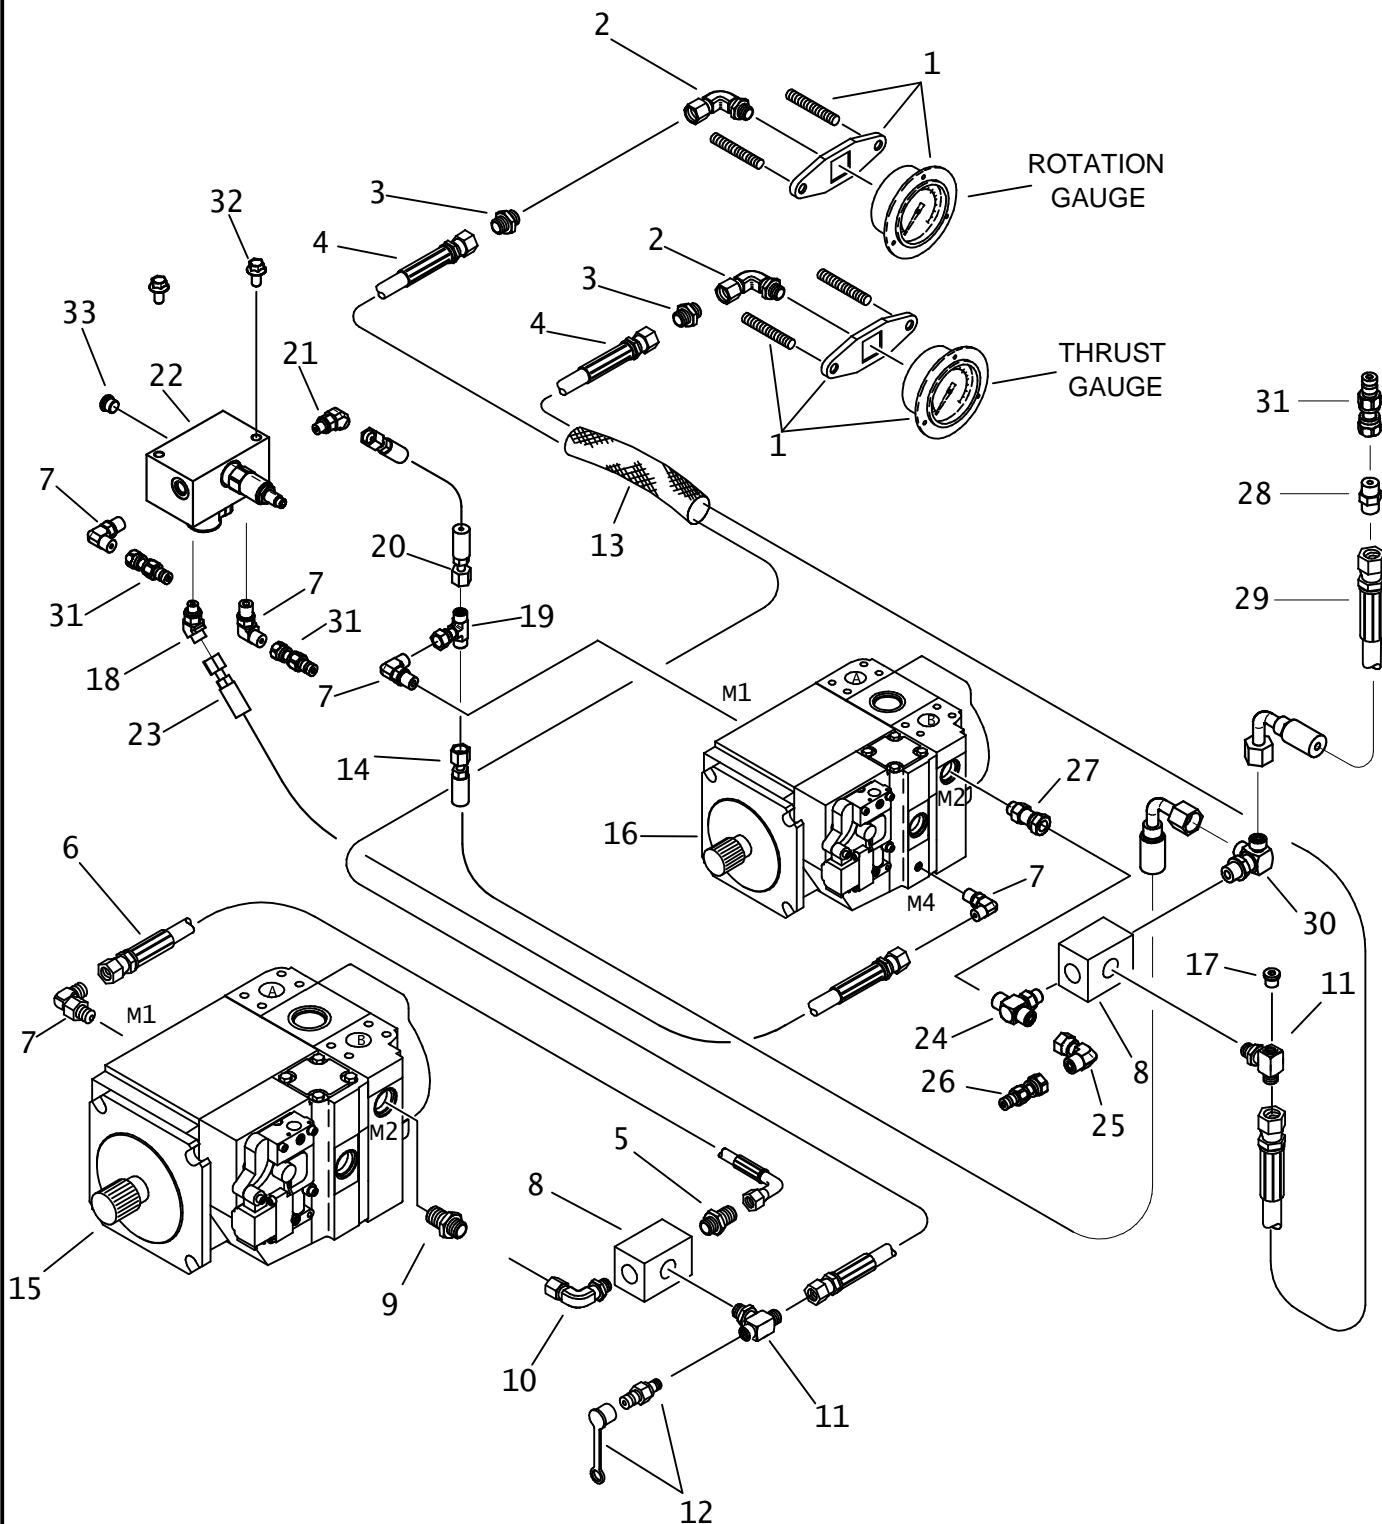

## HYDROSTATIC GAUGE HYDRAULICS (AT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	217-079	2	PRESSURE GAUGE (10,000PSI)	
	499-202		GAUGE CLAMP & STUDS	
2.	514-355	2	CONNECTOR (04NF-04NF90)	
3.	154-020	2	CONNECTOR (04N-04J)	
4.	155-490	2	HOSE (04JFX-306"-6000)	
5.	154-220	1	CONNECTOR (040-06S)	
6.	515-304	1	HOSE (040FX90S-15"-5000)	
7.	154-226	5	CONNECTOR (040-06S90)	
8.	159-475	2	SHUTTLE VALVE	
9.	154-221	1	CONNECTOR (06S-060)	
10.	154-343	1	UNION (06S-060FX90)	
11.	149-043	2	BK BR TEE (06S-04J-04SF)	
12.	159-154	1	QDC ADAPTER (02-04S)	
13.	116-840	1	ABRASION SLEEVE (1.00" x 306")	
14.	515-305	1	HOSE (040FX90-21"-5000)	
15.	149-901	-	HYDRAULIC PUMP (130 CC)	
16.	149-902	-	HYDRAULIC PUMP (100 CC)	
17.	154-383	1	PLUG (04S)	
18.	154-250	1	CONNECTOR (040-06S45)	
19.	154-379	1	UN BR TEE (040FX-040-040)	
20.	515-309	1	HOSE (040FX-18"-5000)	
21.	154-263	1	CONNECTOR (04S-04045)	
22.	150-3006	1	POR MANIFOLD	
23.	154-653	1	HOSE (040FX-40"-3000)	
24.	154-346	1	BRANCH TEE (06S-060-060)	
25.	154-228	1	UNION (060-060FX90)	
26.	159-157	1	QDC ADAPTER (02-060F)	
27.	150-2787	1	CONNECTOR (06S-060FX)	
28.	154-335	1	CONNECTOR (040-040)	
29.	153-911	1	HOSE (040FX90-10"-5000)	
30.	154-230	1	BRANCH TEE (06S-040-040)	
31.	159-156	1	QDC ADAPTER (020-040F)	
32.	105-825	2	FLG LK BOLT (3/8-NC X 3/4)	
33.	154-384	1	PLUG (06S)	

NOT SHOWN:

FOOTNOTES:


NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

NOTE:

- I. FOR SERVICE PARTS REFER TO PAGE ID0159232.

## ROTATION PUMP HYDRAULICS

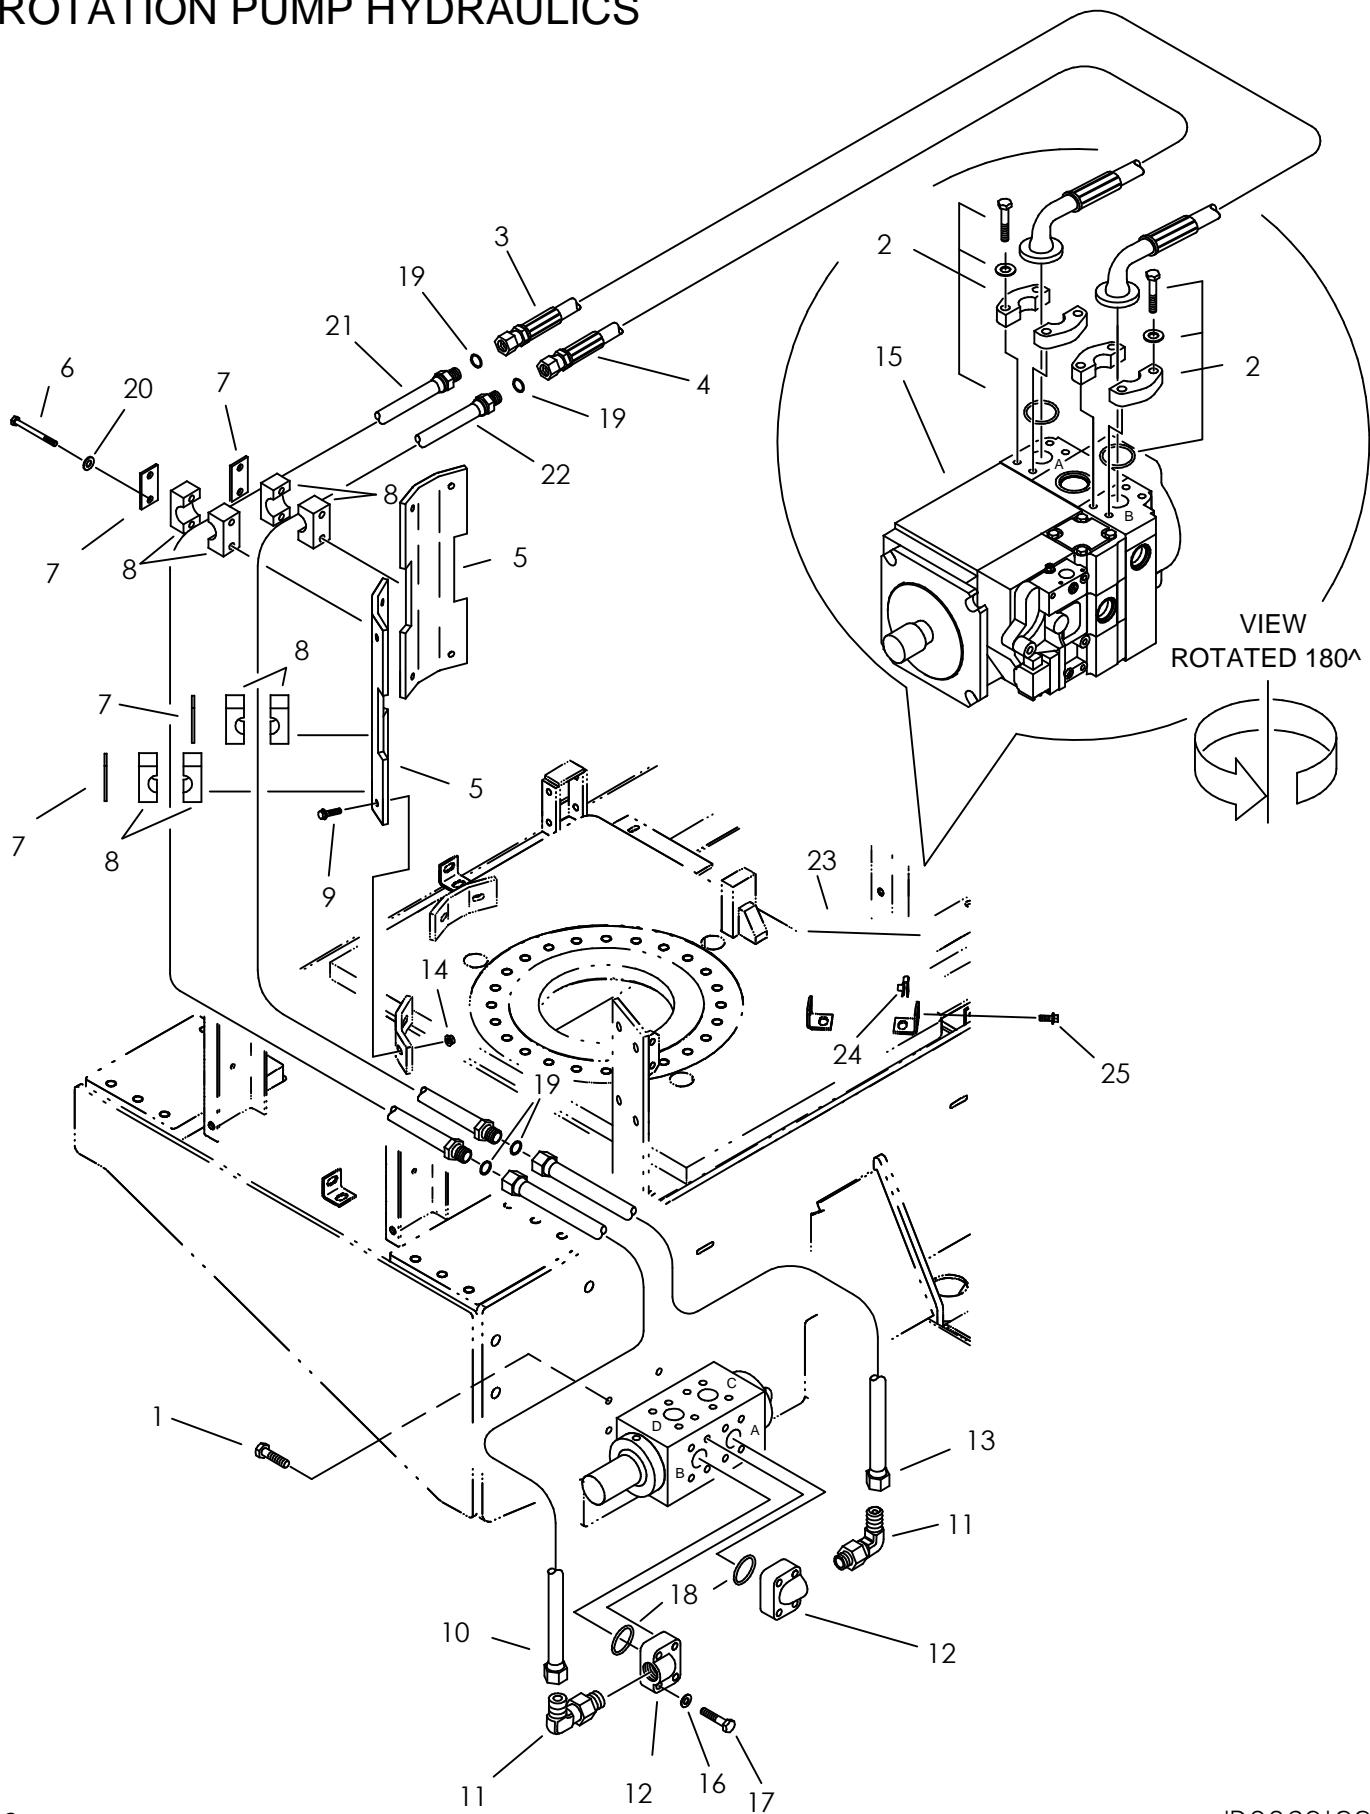

# ROTATION PUMP HYDRAULICS

REF PART	NO. NUMBER	QTY	DESCRIPTION	REMARKS
1. 105-829	4	FLG LK BOLT (1/2-NC X 1")		
2. 159-436	2	SPLIT FLANGE (20SF, SET)		
105-066	4	BOLT (1/2-NC X 1-3/4")		TORQUE TO 45 FT/LBS
105-070	4	LOCK WASHER (1/2")		
157-078	1	O-RING (222 D90)		
3. 515-565	1	HOSE (20OFX-20FLH90-43"-6000)		
4. 515-566	1	HOSE (20OFX-20FLH90-45"-6000)		
5. 349-851	2	MOUNT CLAMP		
6. 105-224	8	BOLT (1/4-NC X 2-1/2")		
7. 322-362	4	BACKUP SPACER		
8. 110-852	4	BLT-ON CLP (1.25", SOLD PER SET)		
9. 106-724	4	FLG SCREW (M10-1.50 X 25MM)		
10. 156-137	-	HYD LINE (-20)		ENDS WITH S/N: 2V2567 BEGINS WITH S/N: 2W0856
153-569	1	HYD LINE (-20)		
11. 514-095	2	CONNECTOR (20S-20O90)		
12. 514-333	2	HEAD FLANGE (20FL-16SF)		
13. 156-136	-	HYD LINE (-20)		ENDS WITH S/N: 2V2567 BEGINS WITH S/N: 2W0856
153-571	1	HYD LINE (-20)		
14. 106-387	4	FLG LOCKNUT (M10-1.50)		
15. 149-901	-	HYDRAULIC PUMP (130CC)		
16. 105-070	8	LOCK WASHER (1/2")		
17. 105-067	8	BOLT (1/2-NC X 2-3/4")		TORQUE TO 45 FT/LBS
18. 157-078	2	O-RING (222 D90)		
19. 157-129	4	O-RING (025 D90)		
20. 106-388	8	WASHER (M6)		
21. 156-137	-	HYD LINE (-20)		ENDS WITH S/N: 2V2567 BEGINS WITH S/N: 2W0856
153-568	1	HYD LINE (-20)		
22. 156-136	-	HYD LINE (-20)		ENDS WITH S/N: 2V2567 BEGINS WITH S/N: 2W0856
153-570	1	HYD LINE (-20)		
23. 349-853	1	RETAINER BAR		
24. 106-551	2	CLIP NUT(M8-1.25)		
25. 106-991	2	FLG LK SCREW (M8-1.25 X 20MM)		


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## ROTATION MOTOR HYDRAULICS

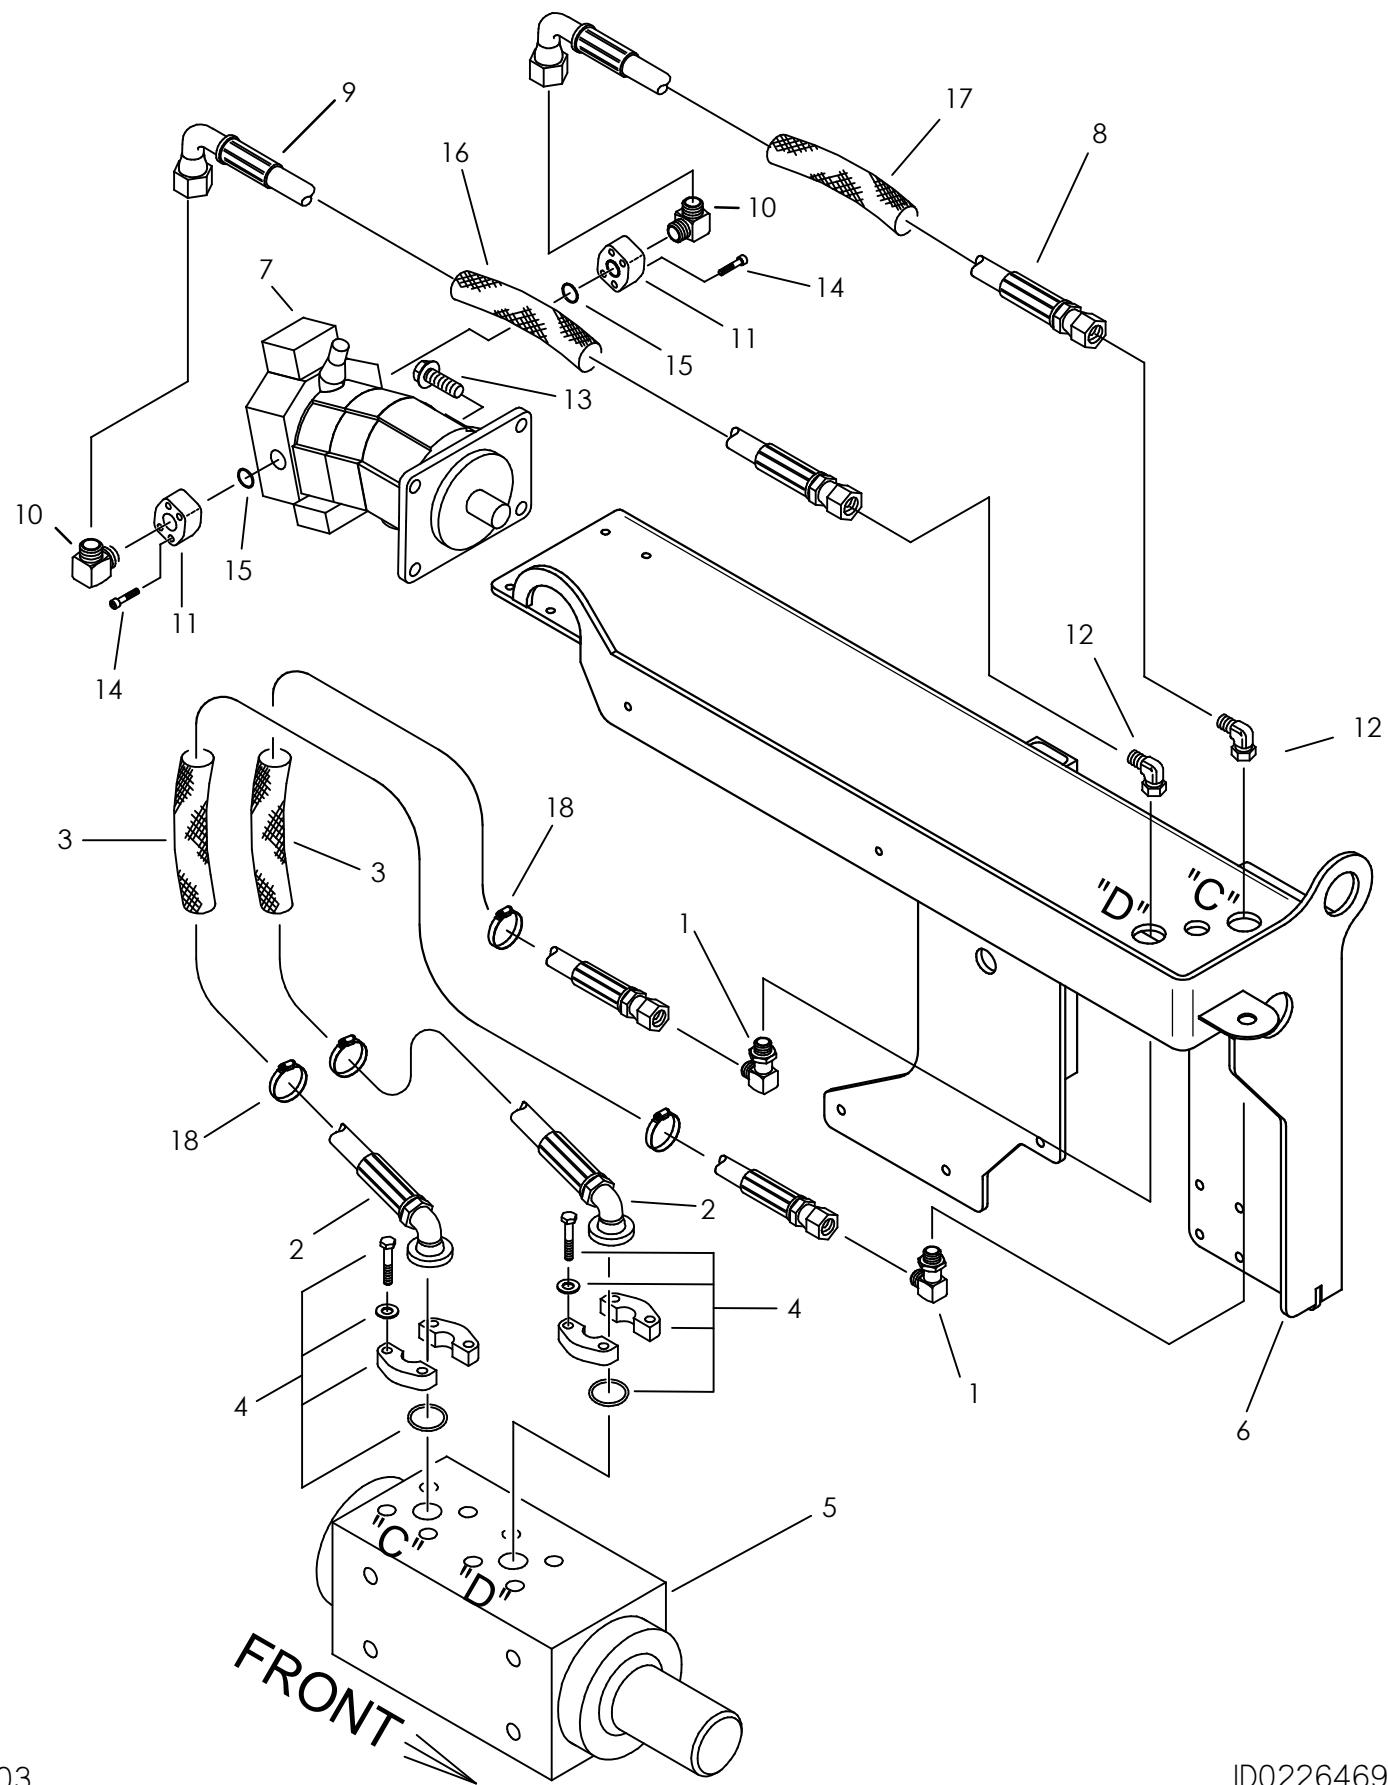

# ROTATION MOTOR HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-178	2	BK CONNECTOR (200-20090BK)	
2.	150-2708	2	HOSE (200FX-20FL45-333"-6000)	
3.	104-1340	2	ABRASION SLEEVE (2.54" X 333")	
4.	159-436	2	SPLIT FLANGE (20SF, SOLD PER SET)	
	105-066	8	BOLT (1/2-NC X 1-3/4")	TORQUE TO 45 FT/LBS
	157-078	2	O-RING (222 D90)	
	105-070	8	LOCK WASHER (.500")	
5.	516-033	-	SELECTOR VALVE DIVERTER	
6.	300-5454	-	CABLE TRAY BRACKET	
7.	149-397	-	HYD MOTOR (PISTON)	
	191-212	-	SEAL REPAIR KIT	
	217-745	-	CONTROL SOLENOID	
8.	149-479	1	HOSE (200FX90S-45"-6000)	
9.	150-2909	1	HOSE (200FX90S-42"-6000)	
10.	514-244	2	CONNECTOR (16S-20090)	
11.	149-995	2	HEAD FLANGE (20HFL-16SF)	
12.	514-422	2	CONNECTOR (200-200FX90)	
13.	106-098	2	FLG BOLT (3/4-NC X 2", GD8)	
14.	106-204	8	BOLT (1/2-NC X 1-1/2", SOC)	
15.	157-078	2	O-RING (222 D90)	
16.	117-668	1	ABRASION SLEEVE (2.38" X 42")	
17.	117-651	1	ABRASION SLEEVE (2.38" X 45")	
18.	110-134	4	WORM CLAMP (2.062" TO 2.750")	

## NOT SHOWN:


214-630	1	SPINDLE HARNESS	MACH 1 UNITS
117-327	1	ABRASION SLEEVE (1.59" X 231")	MACH 1 UNITS

## FOOTNOTES:

## NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## THRUST PUMP HYDRAULICS

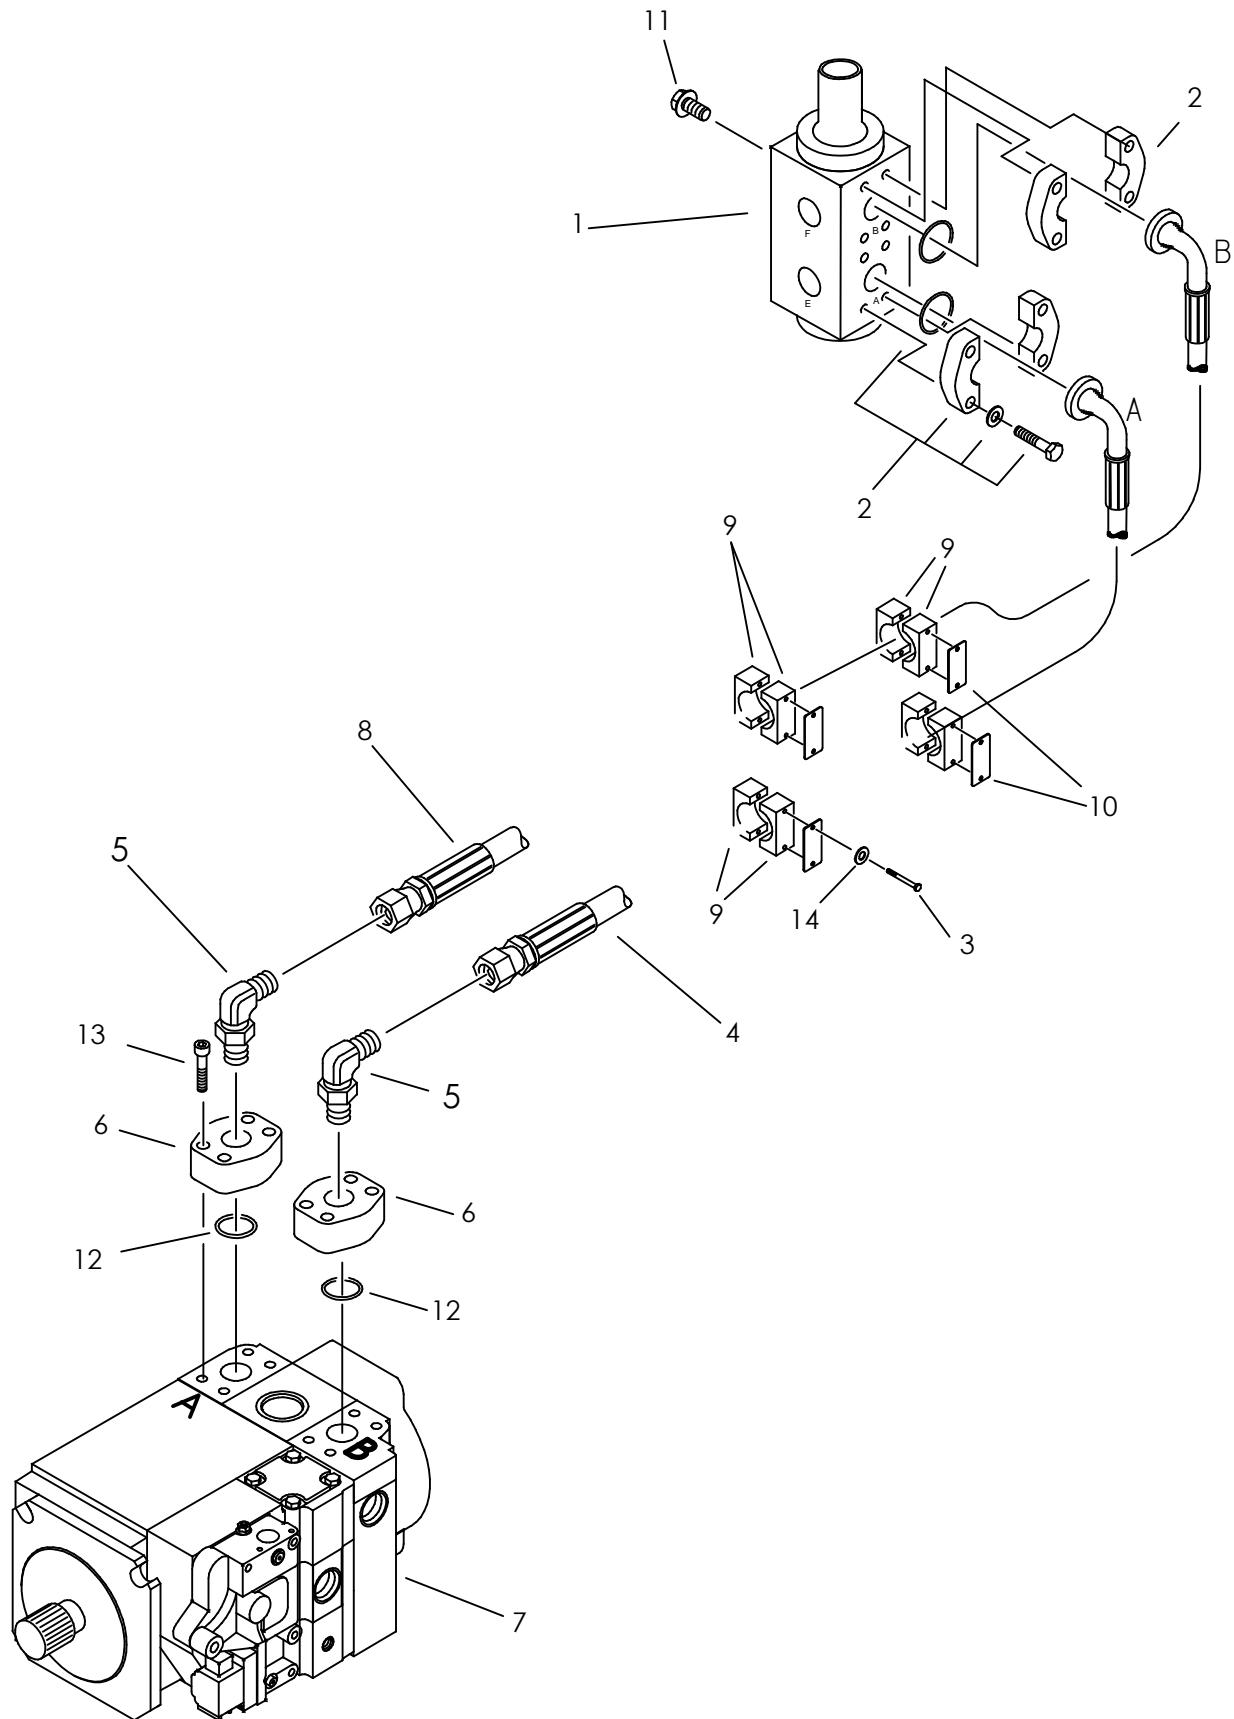

# THRUST PUMP HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	516-033	1	SELECTOR VALVE DIVERTER	
2.	159-436	2	SPLIT FLANGE (20SF, SET)	
	105-066	4	BOLT (1/2-NC X 1-3/4")	TORQUE TO 45 FT. LB.
	105-070	4	LOCK WASHER (1/2")	
	157-078	1	O-RING (222 D90)	
3.	105-224	8	BOLT (1/4-NC X 2-1/2")	
4.	157-998	1	HOSE (16OFX-20FLS90-68"-6000)	
5.	154-287	2	CONNECTOR (16S-16O90)	
6.	514-245	2	HEAD FLANGE (16HFL-16SF)	
7.	149-902	-	HYDRAULIC PUMP (100CC)	
8.	159-926	1	HOSE (16OFX-20FLS90-71"-6000)	
9.	111-008	4	BOLT-ON CLAMP (1.5", SOLD PER SET)	
10.	322-362	4	BACKUP SPACER	
11.	105-829	4	FLG LK BOLT (1/2-NC X 1")	
12.	157-029	2	O-RING (219 D90)	
13.	105-918	8	BOLT (7/16-NC X 1-1/2", SOC)	
14.	106-388	8	WASHER (M6)	



NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## THRUST MOTOR HYDRAULICS

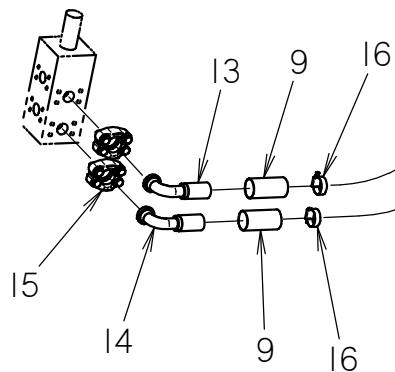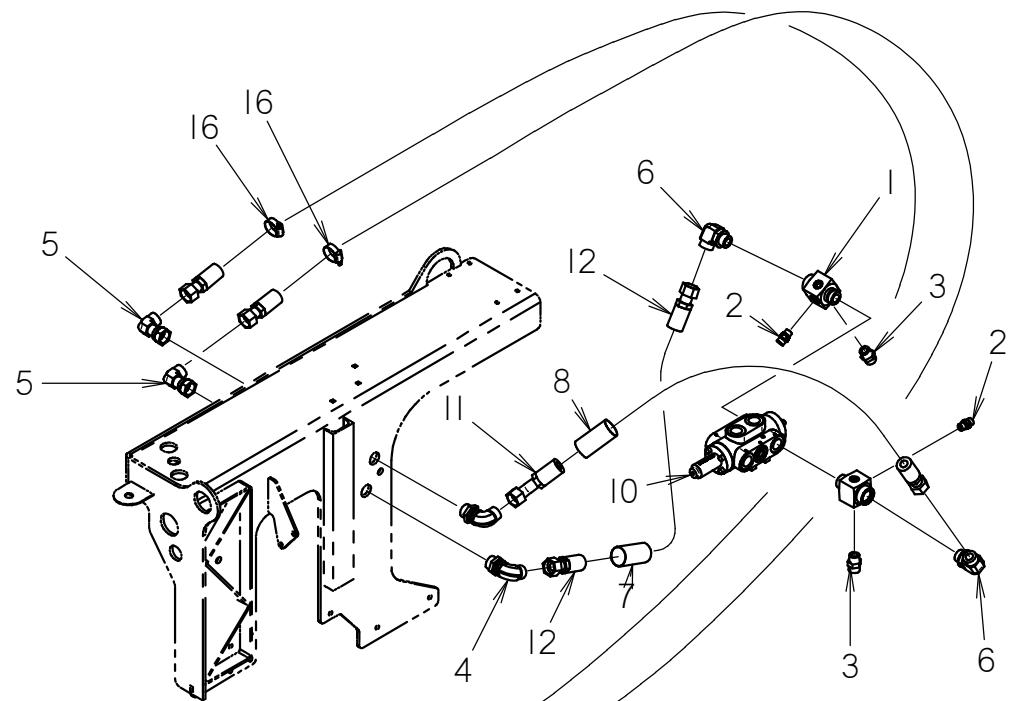

# THRUST MOTOR HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-2129	2	SPECIAL CROSS I-16S-16SF-12SF-08SF-06SF	
2	150-1447	2	CHECK VALVE I-08M, 40 PSI	
3	154-269	2	CONNECTOR I(2S-I20)	
4	154-419	2	BK CONNECTOR I(60-I6090BK)	
5	154-290	2	UNION I(60-I60FX90)	
6	154-287	2	CONNECTOR I(6S-I6090)	
7	105-1338	1	ABRASION SLEEVE (2.07" x 39")	
8	117-454	1	ABRASION SLEEVE (2.07" X 50")	
9	105-1336	2	ABRASION SLEEVE (2.07" X 302")	
I0	150-2076	1	VALVE SERIES PARALLEL	
I1	515-363	1	HOSE I(60FX45-45"-6000)	
I2	150-2844	1	HOSE I(60FX-36"-5000)	
I3	150-2797	1	HOSE I(60FX-20FLH100 302"-5000)	
I4	150-2797	1	HOSE I(60FX-20FLH100 302"-5000)	
I5	159-436	2	SPLIT FLANGE I(20SFL, SET)	TORQUE TO 45 FT/LBS
I6	III-011	4	WORM CLAMP (1" TO 1-3/4")	

NOT SHOWN:

FOOTNOTES:

NOTE:

## THRUST DRIVE HYDRAULICS (6 WAY SELECTOR)

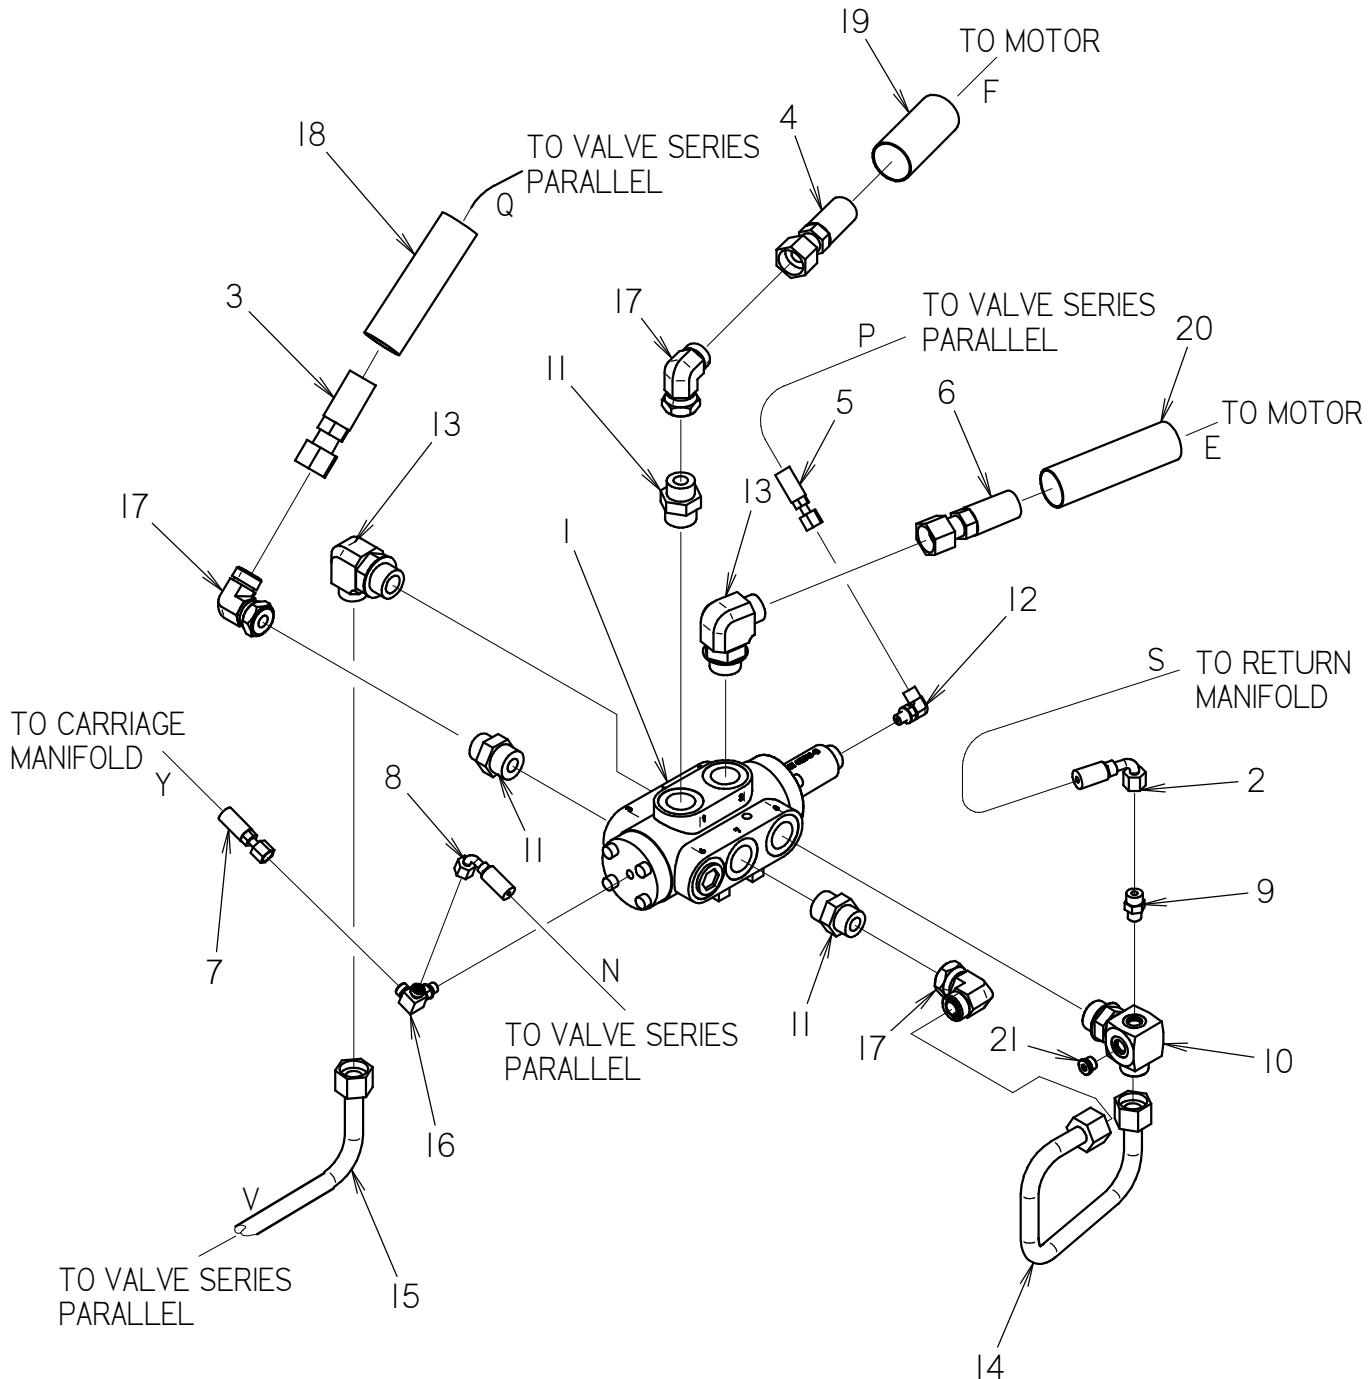

# THRUST DRIVE HYDRAULICS

## (6 WAY SELECTOR)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-1408	1	6-WAY SELECTOR	SEE FOOTNOTE I FOR SEAL KIT & SPRING
2	II6-811	1	HOSE (060FX90-40"-3000)	
3	150-2688	1	HOSE (I20FX90M-53"-5000)	
4	150-2684	1	HOSE (I20FX45-42"-5000)	
5	153-365	1	HOSE (060FX90-40"-3000)	
6	150-2683	1	HOSE (I20FX90S-38"-5000)	
7	515-148	1	HOSE (040FX90-10"-3000)	
8	515-179	1	HOSE (040FX90-11"-3000)	
9	154-221	1	CONNECTOR (06S-060)	
10	514-295	1	CONNECTOR (I20-I6S9006SF06SF)	
II	154-367	3	CONNECTOR (I20-I6S)	
I2	154-252	1	CONNECTOR (04S-04090)	
I3	154-286	2	CONNECTOR (I20-I6S90)	
I4	150-2168	1	HYDRAULIC LINE (I-12)	
I5	150-2173	1	HYDRAULIC LINE (I-12)	
I6	149-814	1	BRANCH TEE (04S-040-040)	
I7	154-457	3	UNION (I20-I20FX90)	
I8	II7-707	1	ABRASION SLEEVE (I.59" X 56")	
I9	II7-686	1	ABRASION SLEEVE (I.75" X 43")	
I20	II7-655	1	ABRASION SLEEVE (I.59" X 38")	
I21	154-384	1	PLUG (06S)	


NOT SHOWN:

FOOTNOTES:

I. 500-1412 - SEAL KIT, 500-1413 - SPRING

NOTE:

## THRUST DRIVE HYDRAULICS (VALVE SERIES PARALLEL)

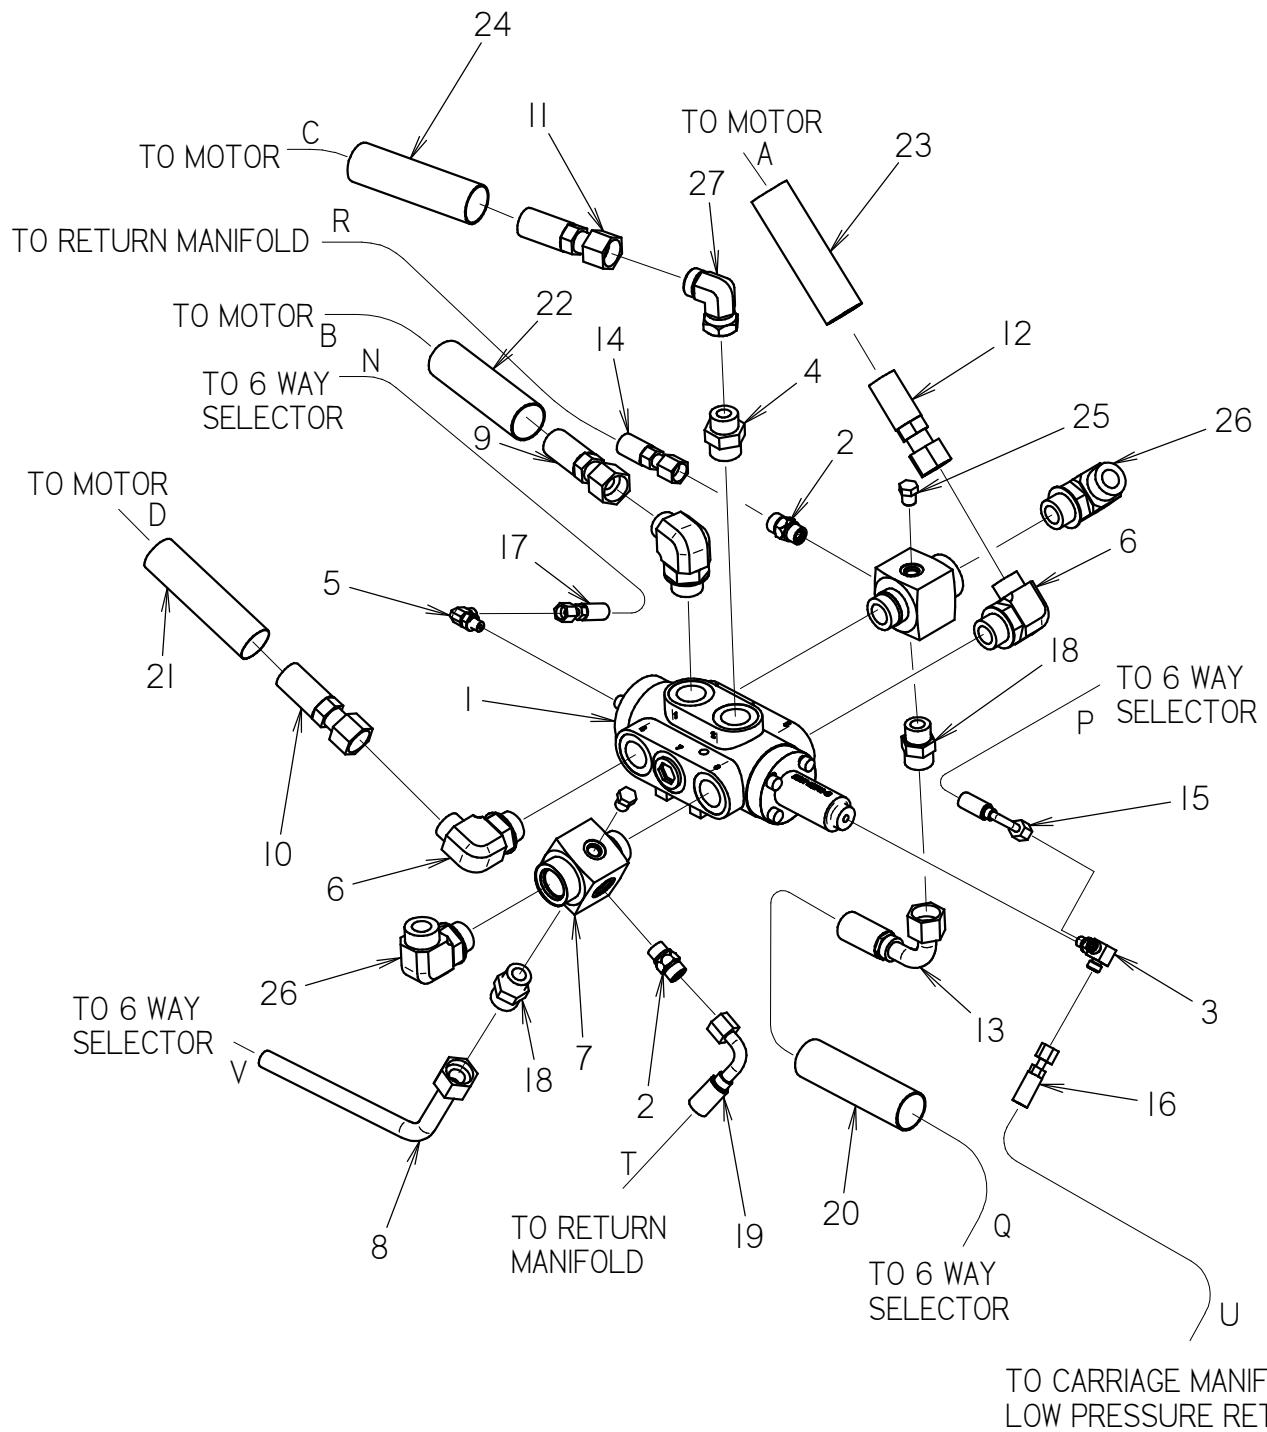

TO CARRIAGE MANIFOLD  
LOW PRESSURE RETURN

# THRUST DRIVE HYDRAULICS

## (VALVE SERIES PARALLEL)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-2076	1	VALVE SERIES PARALLEL	SEE FOOTNOTE I FOR SEAL KIT & SPRING
2	150-1447	2	CHECK VALVE I-08M, 40 PSI	
3	149-814	1	BRANCH TEE (04S-040-040)	
4	154-367	1	CONNECTOR (I20-I6S)	
5	154-252	1	CONNECTOR (04S-04090)	
6	154-286	3	CONNECTOR (I20-I6S90)	
7	150-2129	2	SPECIAL CROSS (I-16S-I6SF-I2SF-08SF-06SF)	
8	150-2173	1	HYDRAULIC LINE (I-12)	
9	150-2685	1	HOSE (I20FX45-38"-5000)	
10	150-2686	1	HOSE (I20FX45-51"-5000)	
II	150-2689	1	HOSE (I20FX90L-61"-5000)	
I2	150-2687	1	HOSE (I20FX90L-66"-5000)	
I3	150-2688	1	HOSE (I20FX90M-53"-5000)	
I4	154-943	1	HOSE (080FX45-30"-3000)	
I5	153-365	1	HOSE (060FX90-40"-3000)	
I6	515-175	1	HOSE (040FX90-16"-3000)	
I7	515-179	1	HOSE (040FX90-11"-3000)	
I8	154-269	2	CONNECTOR (I2S-I20)	
I9	150-2690	1	HOSE (080FX90M-28"-4000)	
I0	I17-707	1	ABRASION SLEEVE (I.59" X 56")	
I1	I15-903	1	ABRASION SLEEVE (I.59" X 50")	
I2	I17-655	1	ABRASION SLEEVE (I.59" X 38")	
I3	I15-938	1	ABRASION SLEEVE (I.59" X 66")	
I4	I17-603	1	ABRASION SLEEVE (I.59" X 62")	
I5	I55-130	2	PLUG (06S)	
I6	154-287	2	CONNECTOR (I6S-I6090)	
I7	154-457	1	UNION (I20-I20FX90)	


NOT SHOWN:

## FOOTNOTES:

- I. 500-1412 - SEAL KIT, 500-1413 - SPRING

NOTE:

# THRUST DRIVE HYDRAULICS (MOTOR & BRAKE)

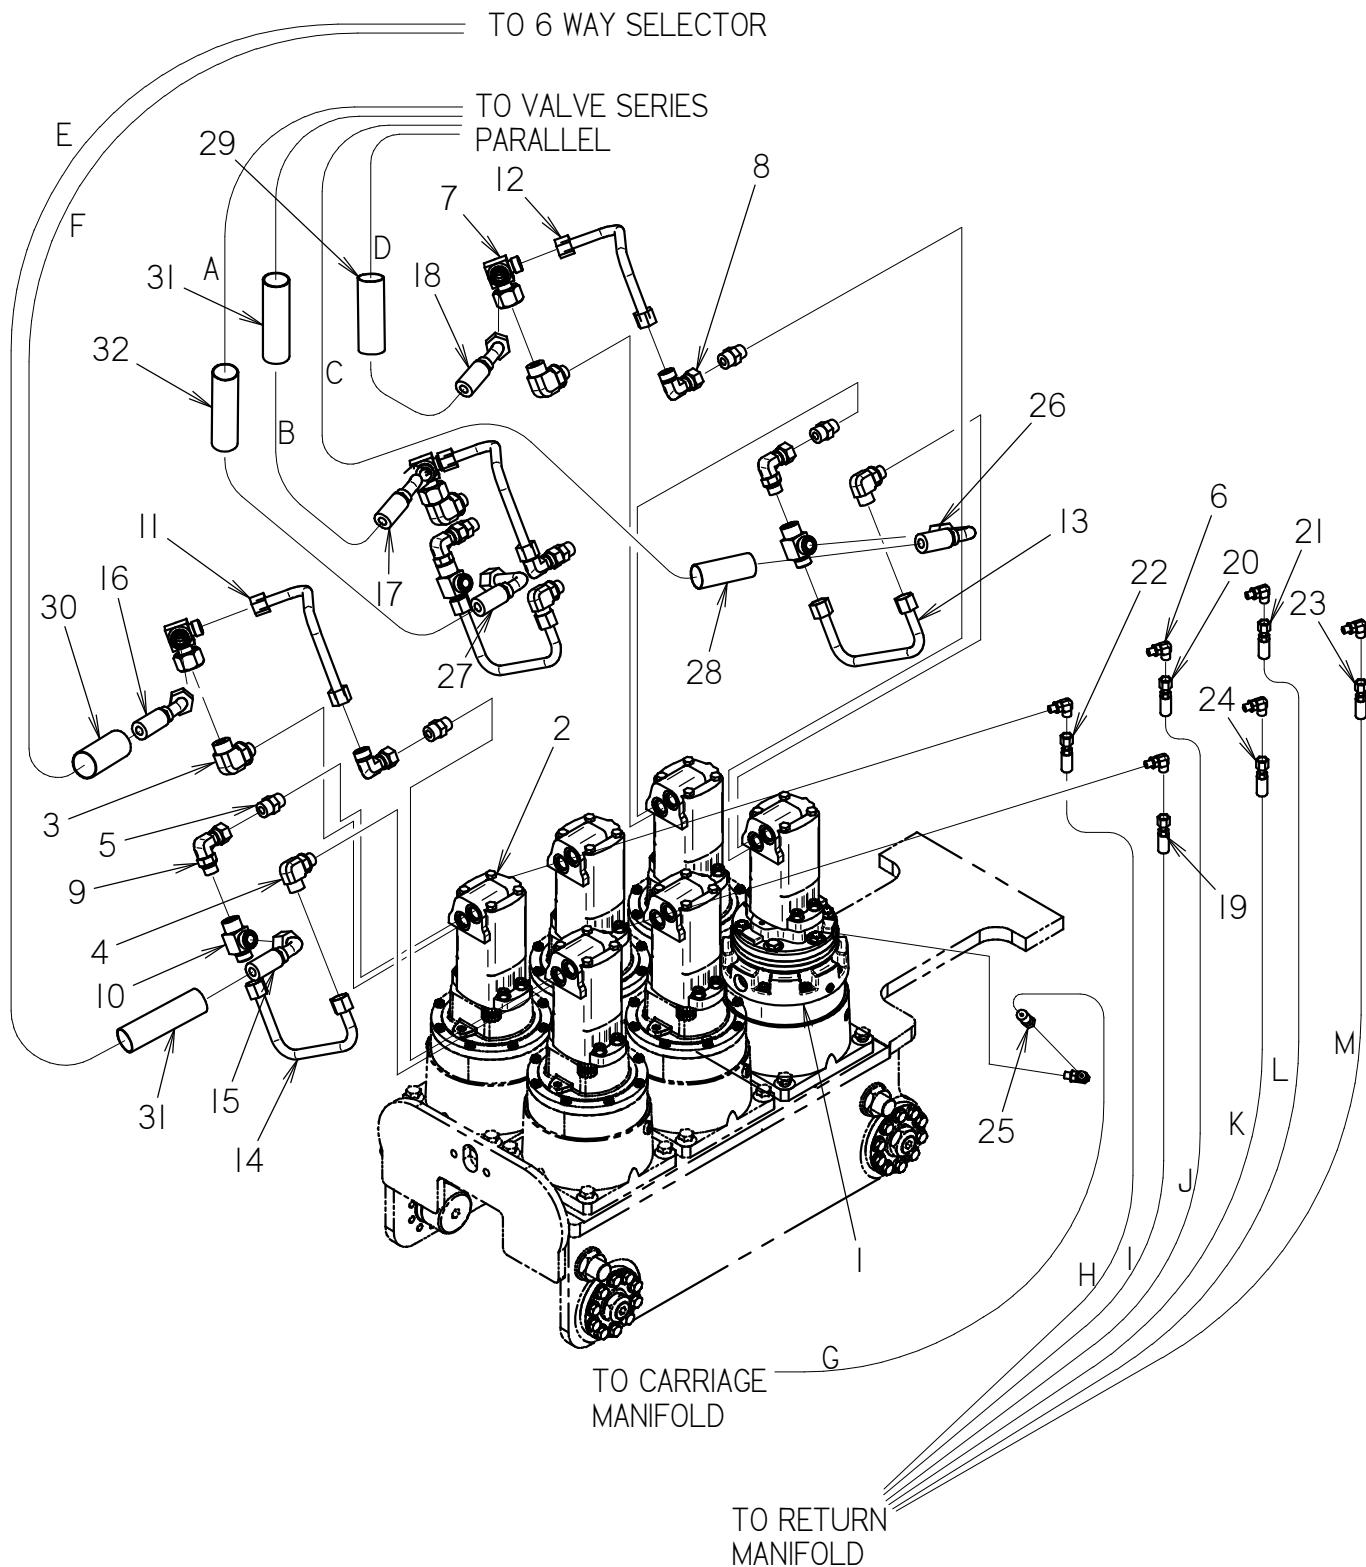

# THRUST DRIVE HYDRAULICS

## (MOTOR & BRAKE)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I60-1074	1	THRUST DRIVE GEARBOX W/BRAKE	
2	I58-270	6	HYDRAULIC MOTOR	SEE FOOTNOTE I FOR SEAL KIT
3	I54-273	3	CONNECTOR (I0S-I2090)	
4	I54-298	3	CONNECTOR (I0S-I0090)	
5	I54-301	6	CONNECTOR (I0S-I00)	
6	I54-252	7	CONNECTOR (I04S-04090)	
7	I50-2244	3	CONNECTOR (I20F-I20-I00 SPECIAL)	
8	I54-315	3	UNION (I00-I00FX90)	
9	I54-372	3	UNION (I0S-I00FX90)	
10	I50-2246	3	TEE (I0FS-I00-I20)	
11	I50-2165	2	HYDRAULIC LINE (I-10)	
12	I50-2153	1	HYDRAULIC LINE (I-10)	
13	I50-2154	1	HYDRAULIC LINE (I-10)	
14	I50-2167	2	HYDRAULIC LINE (I-10)	
15	I50-2683	1	HOSE (I20FX90S-38"-5000)	
16	I50-2684	1	HOSE (I20FX45-42"-5000)	
17	I50-2685	1	HOSE (I20FX45-38"-5000)	
18	I50-2686	1	HOSE (I20FX45-51"-5000)	
19	I54-783	1	HOSE (040FX-24"-3000)	
20	I54-783	1	HOSE (040FX-24"-3000)	
21	I54-783	1	HOSE (040FX-24"-3000)	
22	I54-783	1	HOSE (040FX-24"-3000)	
23	I54-783	1	HOSE (040FX-24"-3000)	
24	I54-783	1	HOSE (040FX-24"-3000)	
25	I50-2691	1	HOSE (040FX90L-20"-3000)	
26	I50-2689	1	HOSE (I20FX90L-61"-5000)	
27	I50-2687	1	HOSE (I20FX90L-66"-5000)	
28	I17-603	1	ABRASION SLEEVE (1.59" X 62")	
29	I15-903	1	ABRASION SLEEVE (1.59" X 50")	
30	I17-686	1	ABRASION SLEEVE (1.75" X 43")	
31	I17-655	2	ABRASION SLEEVE (1.59" X 38")	
32	I15-938	1	ABRASION SLEEVE (1.59" X 66")	


NOT SHOWN:

FOOTNOTES:

- I. 500-I269 - SEAL KIT

NOTE:

## THRUST DRIVE HYDRAULICS (RETURN MANIFOLD)

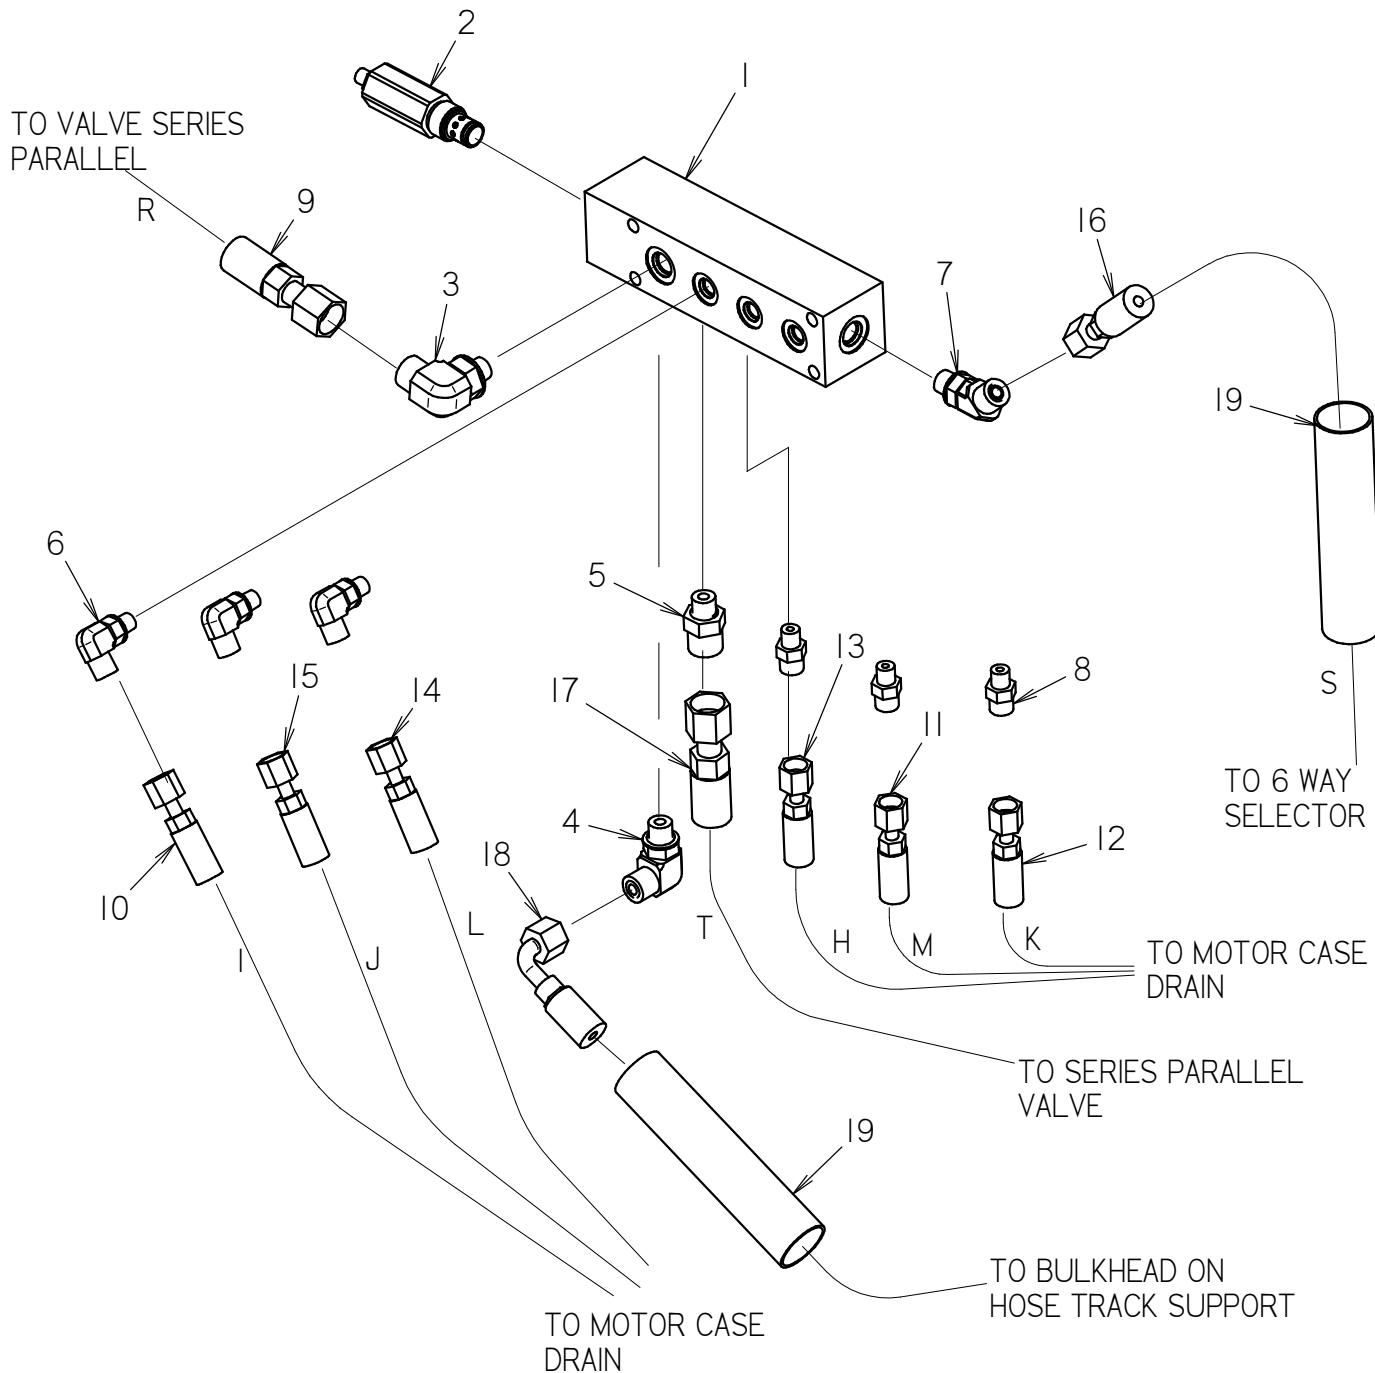

# THRUST DRIVE HYDRAULICS

## (RETURN MANIFOLD)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-2667	1	RETURN MANIFOLD	
2	150-2252	1	RELIEF VALVE	
3	154-253	1	CONNECTOR (06S-08090)	
4	154-342	1	CONNECTOR (06S-06090)	
5	154-246	1	CONNECTOR (06S-080)	
6	154-252	3	CONNECTOR (04S-04090)	
7	154-224	1	CONNECTOR (06S-06045)	
8	154-278	3	CONNECTOR (04S-040)	
9	154-943	1	HOSE (080FX45-30"-3000)	
10	154-783	1	HOSE (040FX-24"-3000)	
II	154-783	1	HOSE (040FX-24"-3000)	
I2	154-783	1	HOSE (040FX-24"-3000)	
I3	154-783	1	HOSE (040FX-24"-3000)	
I4	154-783	1	HOSE (040FX-24"-3000)	
I5	154-783	1	HOSE (040FX-24"-3000)	
I6	116-811	1	HOSE (060FX90-40"-3000)	
I7	150-2690	1	HOSE (080FX90M-28"-4000)	
I8	150-2367	1	HOSE (060FX90M-40"-3000)	
I9	117-189	2	ABRASION SLEEVE (1.25" X 44")	

NOT SHOWN:

FOOTNOTES:

NOTE:

**THRUST DRIVE HYDRAULICS**  
**(CARRIAGE MANIFOLD)**  
 ENDS WITH S/N: CMWJT100PA0000013

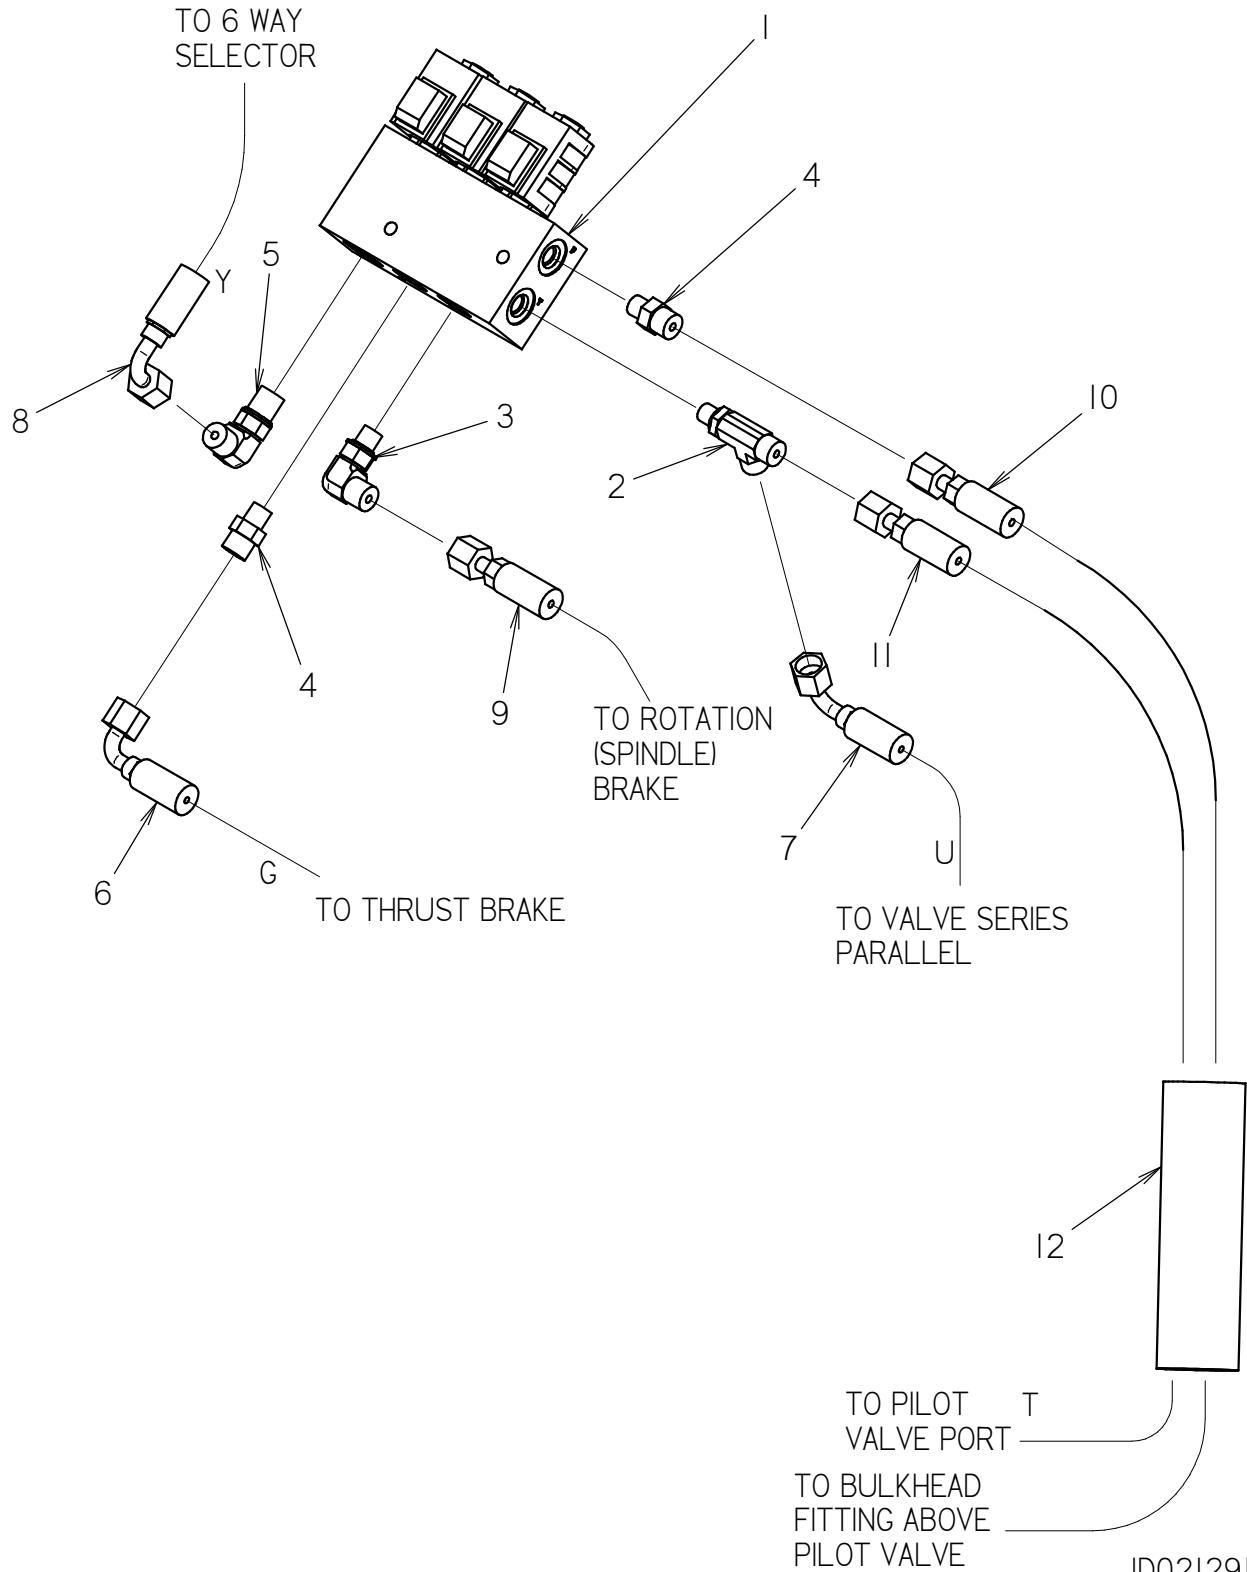

**THRUST DRIVE HYDRAULICS  
(CARRIAGE MANIFOLD)**  
**ENDS WITH S/N: CMWJT100PA0000013**

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I59-554	1	MANIFOLD (3-SP)	SEE FOOTNOTE I FOR SERVICE PARTS
2	I54-316	1	RUN TEE (04S-040-040)	
3	I54-252	1	CONNECTOR (04S-04090)	
4	I54-278	2	CONNECTOR (04S-040)	
5	I54-226	1	CONNECTOR (040-06S90)	
6	515-041	1	HOSE (040FX90S-20"-3000)	
7	515-175	1	HOSE (040FX90-16"-3000)	
8	515-148	1	HOSE (040FX90-10"-3000)	
9	I53-365	1	HOSE (040FX90S-34"-3000)	
10	I50-2703	1	HOSE (040FX90L-328"-3000)	
II	I50-2702	1	HOSE (040FX90S-321"-3000)	
I2	I17-331	1	ABRASION SLEEVE (1.75" X 314")	


NOT SHOWN:

FOOTNOTES:

- I. 499-466 - CARTRIDGE VALVE
- 214-491 - COIL

NOTE:

**THRUST DRIVE HYDRAULICS**  
**CARRIAGE MANIFOLD**  
**BEGINS WITH S/N: CMWJT100KA0000014**

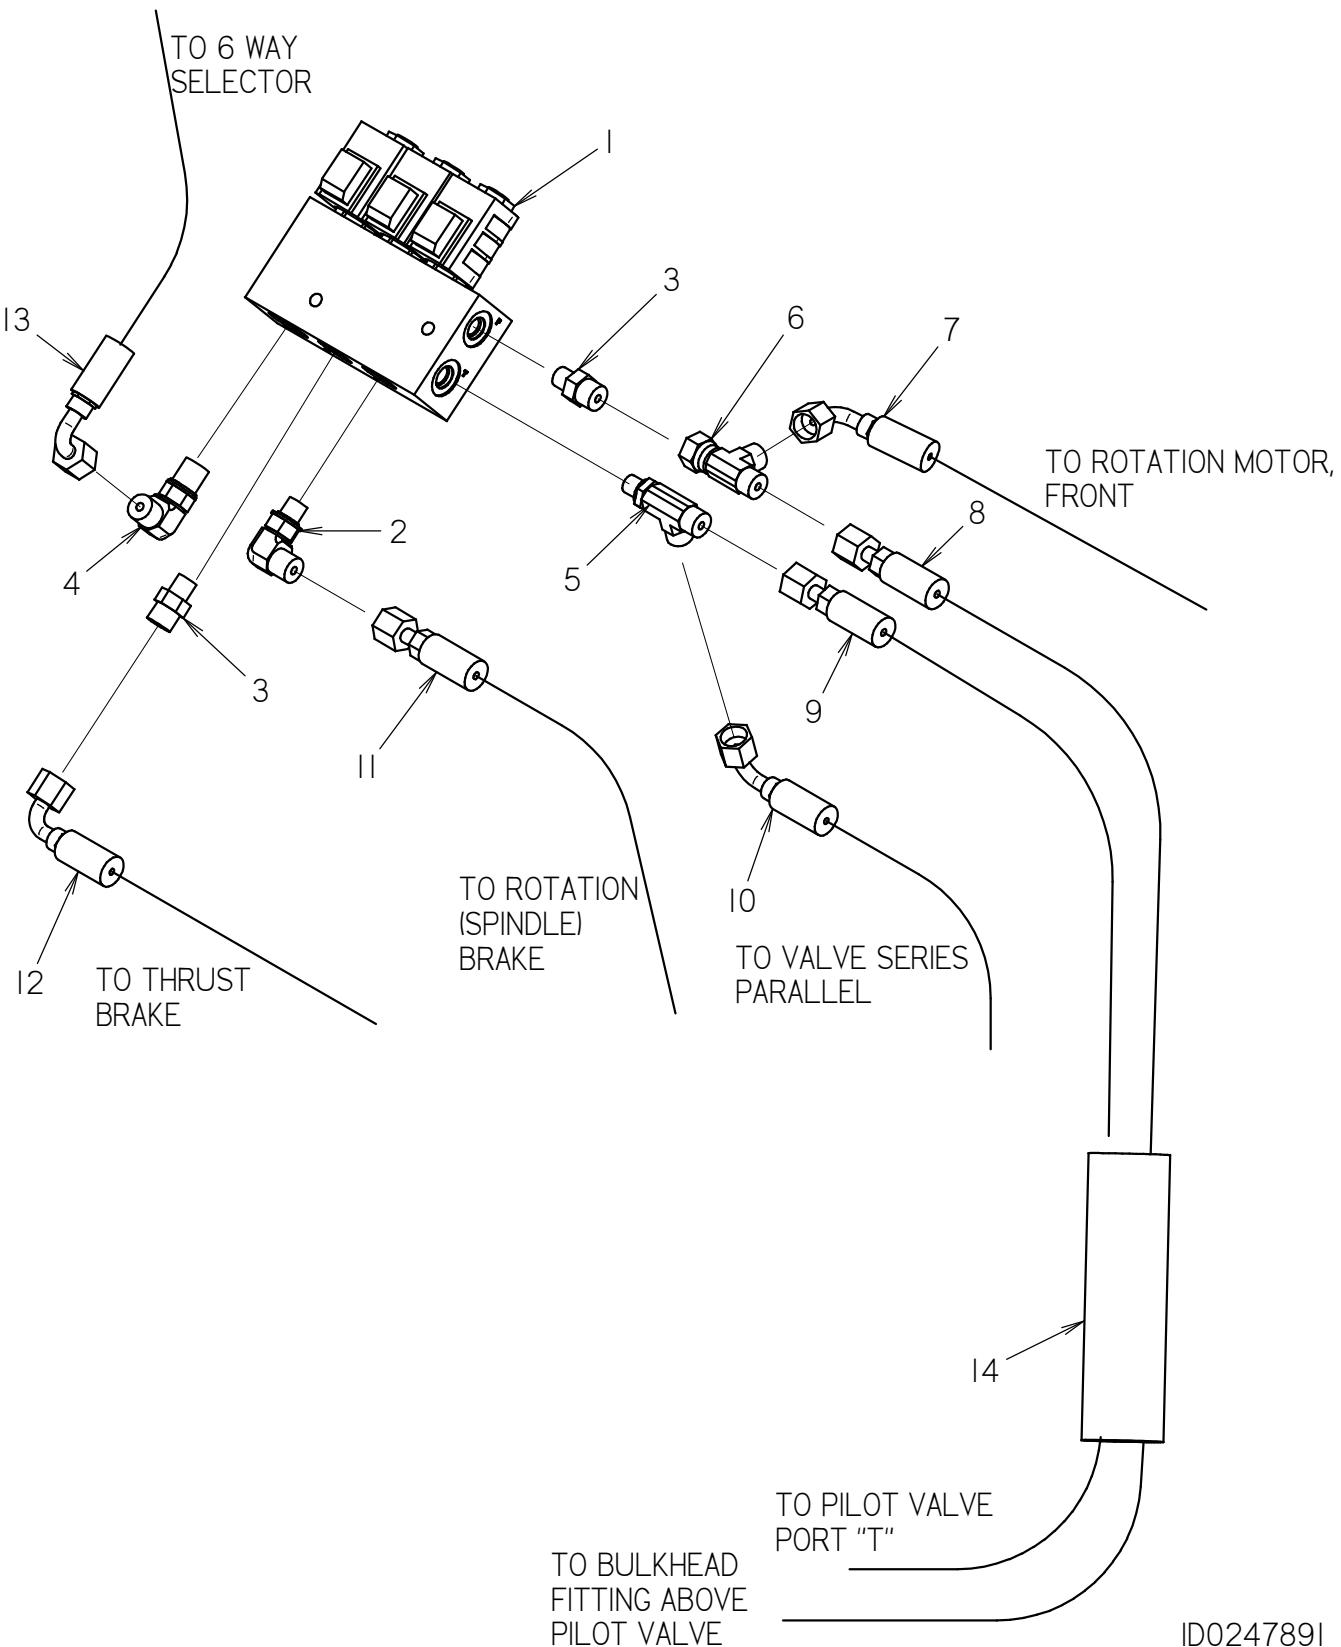

**THRUST DRIVE HYDRAULICS**  
**CARRIAGE MANIFOLD**  
**BEGINS WITH S/N: CMWJT100KA0000014**

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I59-554	1	MANIFOLD (3-SP)	SERVICE PARTS: REFER NOT SHOWN SECTION
2	I54-252	1	CONNECTOR (04S-04090)	
3	I54-278	2	CONNECTOR (04S-040)	
4	I54-226	1	CONNECTOR (040-06S90)	
5	I54-316	1	RUN TEE (04S-040-040)	
6	I54-265	1	UNION RUN TEE (040FX-040-040)	
7	I54-802	1	HOSE (040FX90S-26"-3000)	
8	I50-2703	1	HOSE (040FX90L-328"-3000)	
9	I50-2702	1	HOSE (040FX90S-321"-3000)	
10	515-175	1	HOSE (040FX90-16"-3000)	
11	I53-365	1	HOSE (040FX90S-34"-3000)	
12	515-041	1	HOSE (040FX90S-20"-3000)	
13	515-148	1	HOSE (040FX90-10"-3000)	
14	I17-331	1	ABRASION SLEEVE (1.75" X 314")	


## NOT SHOWN:

499-466 - CARTRIDGE VALVE  
 214-491 - COIL

## FOOTNOTES:

## NOTE:

**CASE DRAIN HYDRAULICS**  
**ROTATION MOTOR**  
**ENDS WITH S/N: CMWJT100PA0000013**

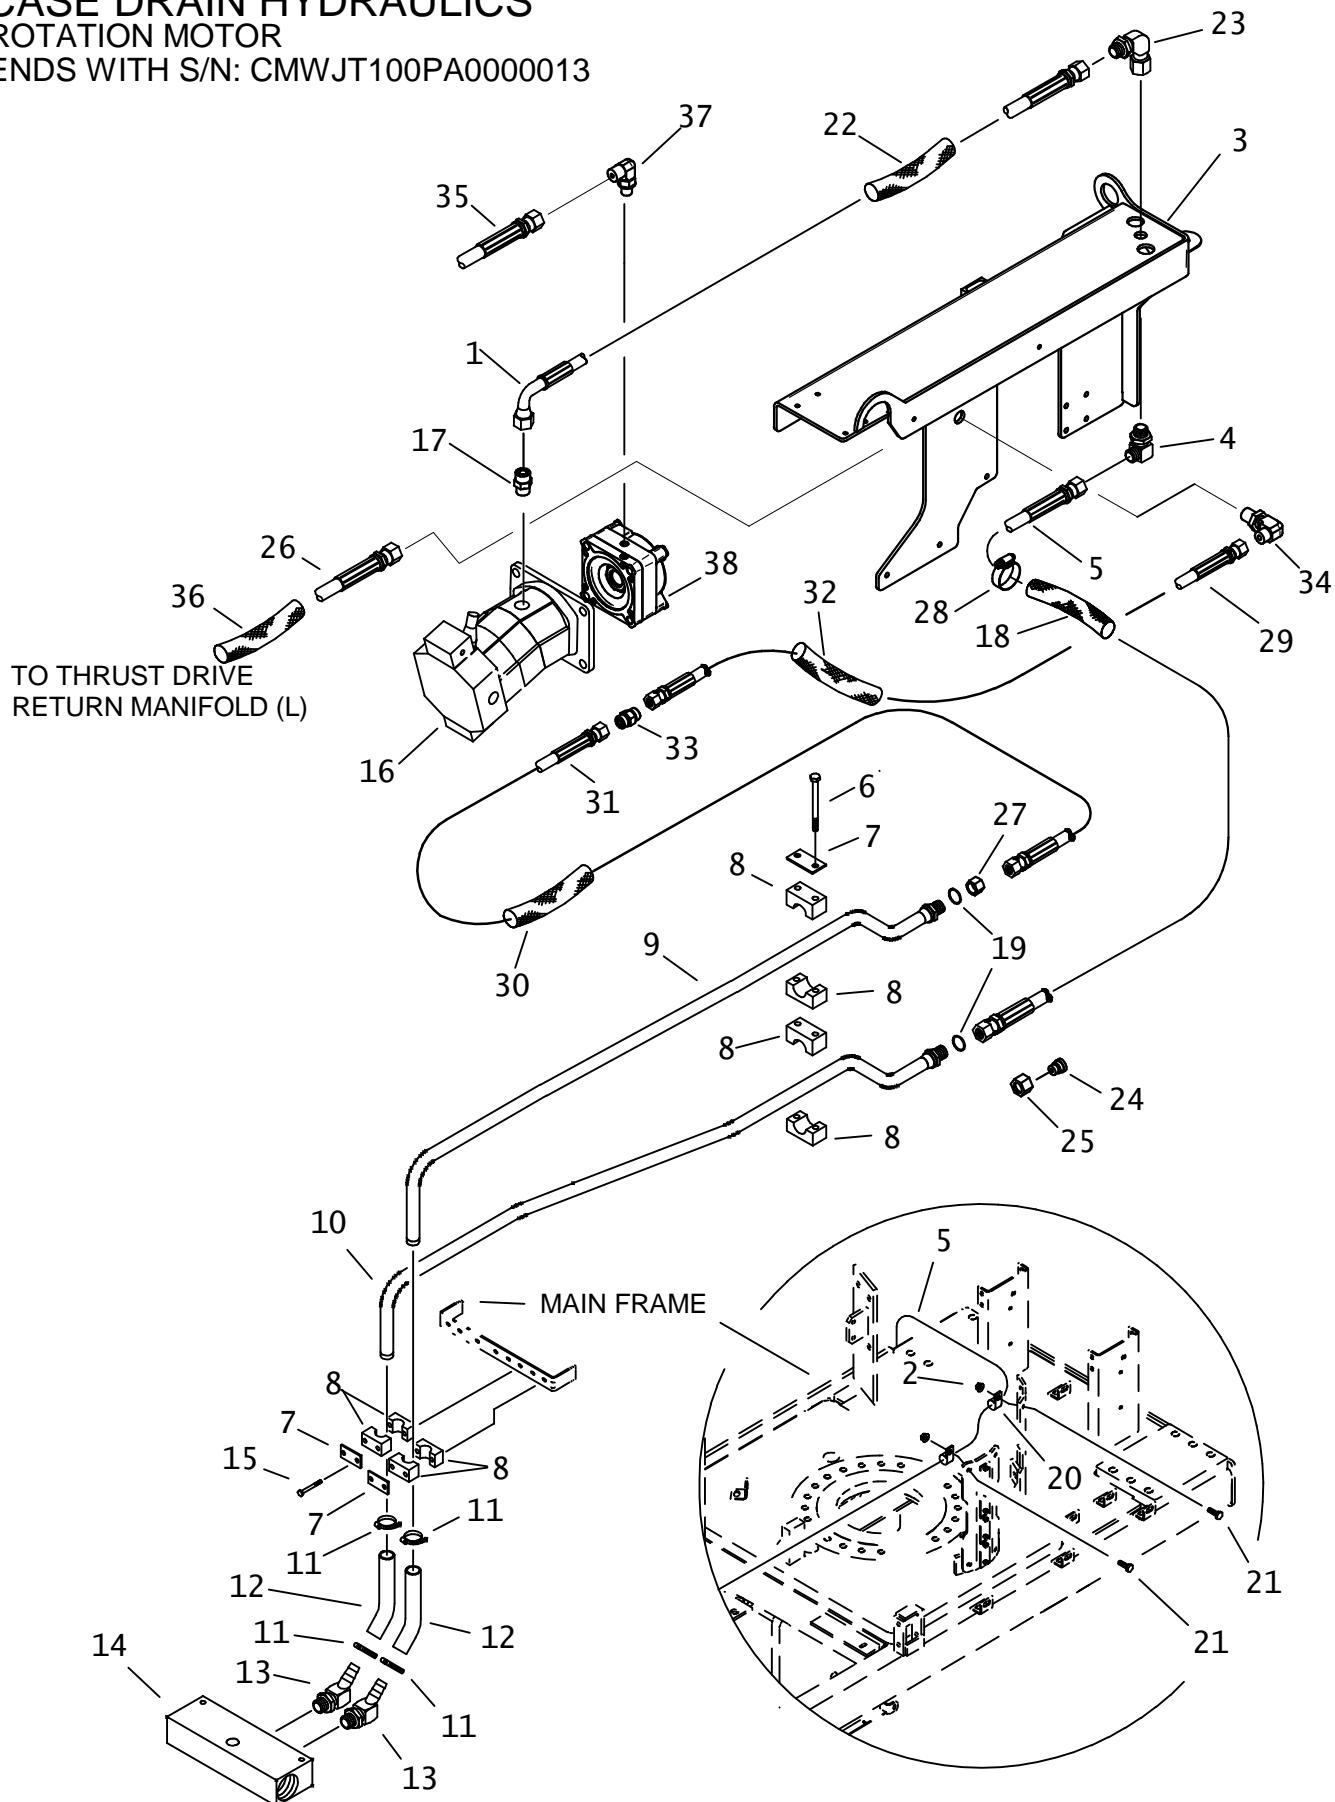

**CASE DRAIN HYDRAULICS  
ROTATION MOTOR  
ENDS WITH S/N: CMWJT100PA0000013**

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	HOSE (120FX90-36"-2250)	150-2928	1			
2.	FLG LOCKNUT (M10-1.50)	106-387	2			
3.	CABLE TRAY BRACKET	300-5454	-			
4.	BK CONNECTOR (120-12090BK)	156-482	1			
5.	HOSE (120FX-424"-3000)	150-2704	1			
6.	BOLT (1/4-NC X 3")	107-196	2			
7.	BACKUP (BOLT-ON)	322-289	3			
8.	BOLT-ON CLAMP (1", SOLD PER SET)	110-573	4			
9.	HYD LINE (-16)	156-134	1			
10.	HYD LINE (-16)	156-135	1			
11.	WORM CLAMP (1" TO 1-3/4")	111-011	4			
12.	BULK HOSE (1", SOLD PER 1")	116-094	AR			USE 2 @ 9.5"
13.	S/O COUPLER (16S-16H45)	155-230	2			
14.	CASE DRAIN MANIFOLD	159-414	-			
15.	BOLT (1/4-NC X 2")	105-106	4			
16.	HYD MOTOR (PISTON)	149-397	-			
191-212	SEAL REPAIR KIT					
217-745	CONTROL SOLENOID					
502-172	SPEED SENSOR					
17.	CONNECTOR (12S-120)	154-269	1			
18.	ABRASION SLEEVE (1.75" X 425")	105-1337	1			
19.	O-RING (018 D90)	157-017	2			
20.	BOLT-ON CLAMP (1-5/8")	110-332	2			
21.	FLG LK SCREW (M10-1.50 x 25mm)	107-001	2			
22.	ABRASION SLEEVE (1.59" X 38")	117-655	1			
23.	UNION (120-120FX90)	154-457	1			
24.	REDUCER STEM (060)	154-459	1			
25.	REDUCER NUT (120F)	154-271	1			
26.	HOSE (060FX90M-40"-3000)	150-2367	1			
27.	CAP (120F)	154-328	1			
28.	WORM CLAMP (3/4" TO 1-1/2")	110-353	1			
29.	HOSE (060FX90S-268"-3000)	150-2366	1			
30.	ABRASION SLEEVE (1.25" X 270")	105-1425	1			
31.	HOSE (060FX-122"-3000)	150-2365	1			
32.	ABRASION SLEEVE (1.25" X 124")	105-1426	1			
33.	CONNECTOR (060-060)	154-413	1			
34.	BK CONNECTOR (060-06090BK)	154-229	1			
35.	HOSE (040FX90S-34"-3000)	153-365	1			
36.	ABRASION SLEEVE (1.25" X 44")	117-189	1			
37.	CONNECTOR (04S-04090)	154-252	1			
38.	MODULAR BREAK	160-458	1			


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# CASE DRAIN HYDRAULICS ROTATION MOTOR BEGINS WITH S/N: CMWJT100KA0000014

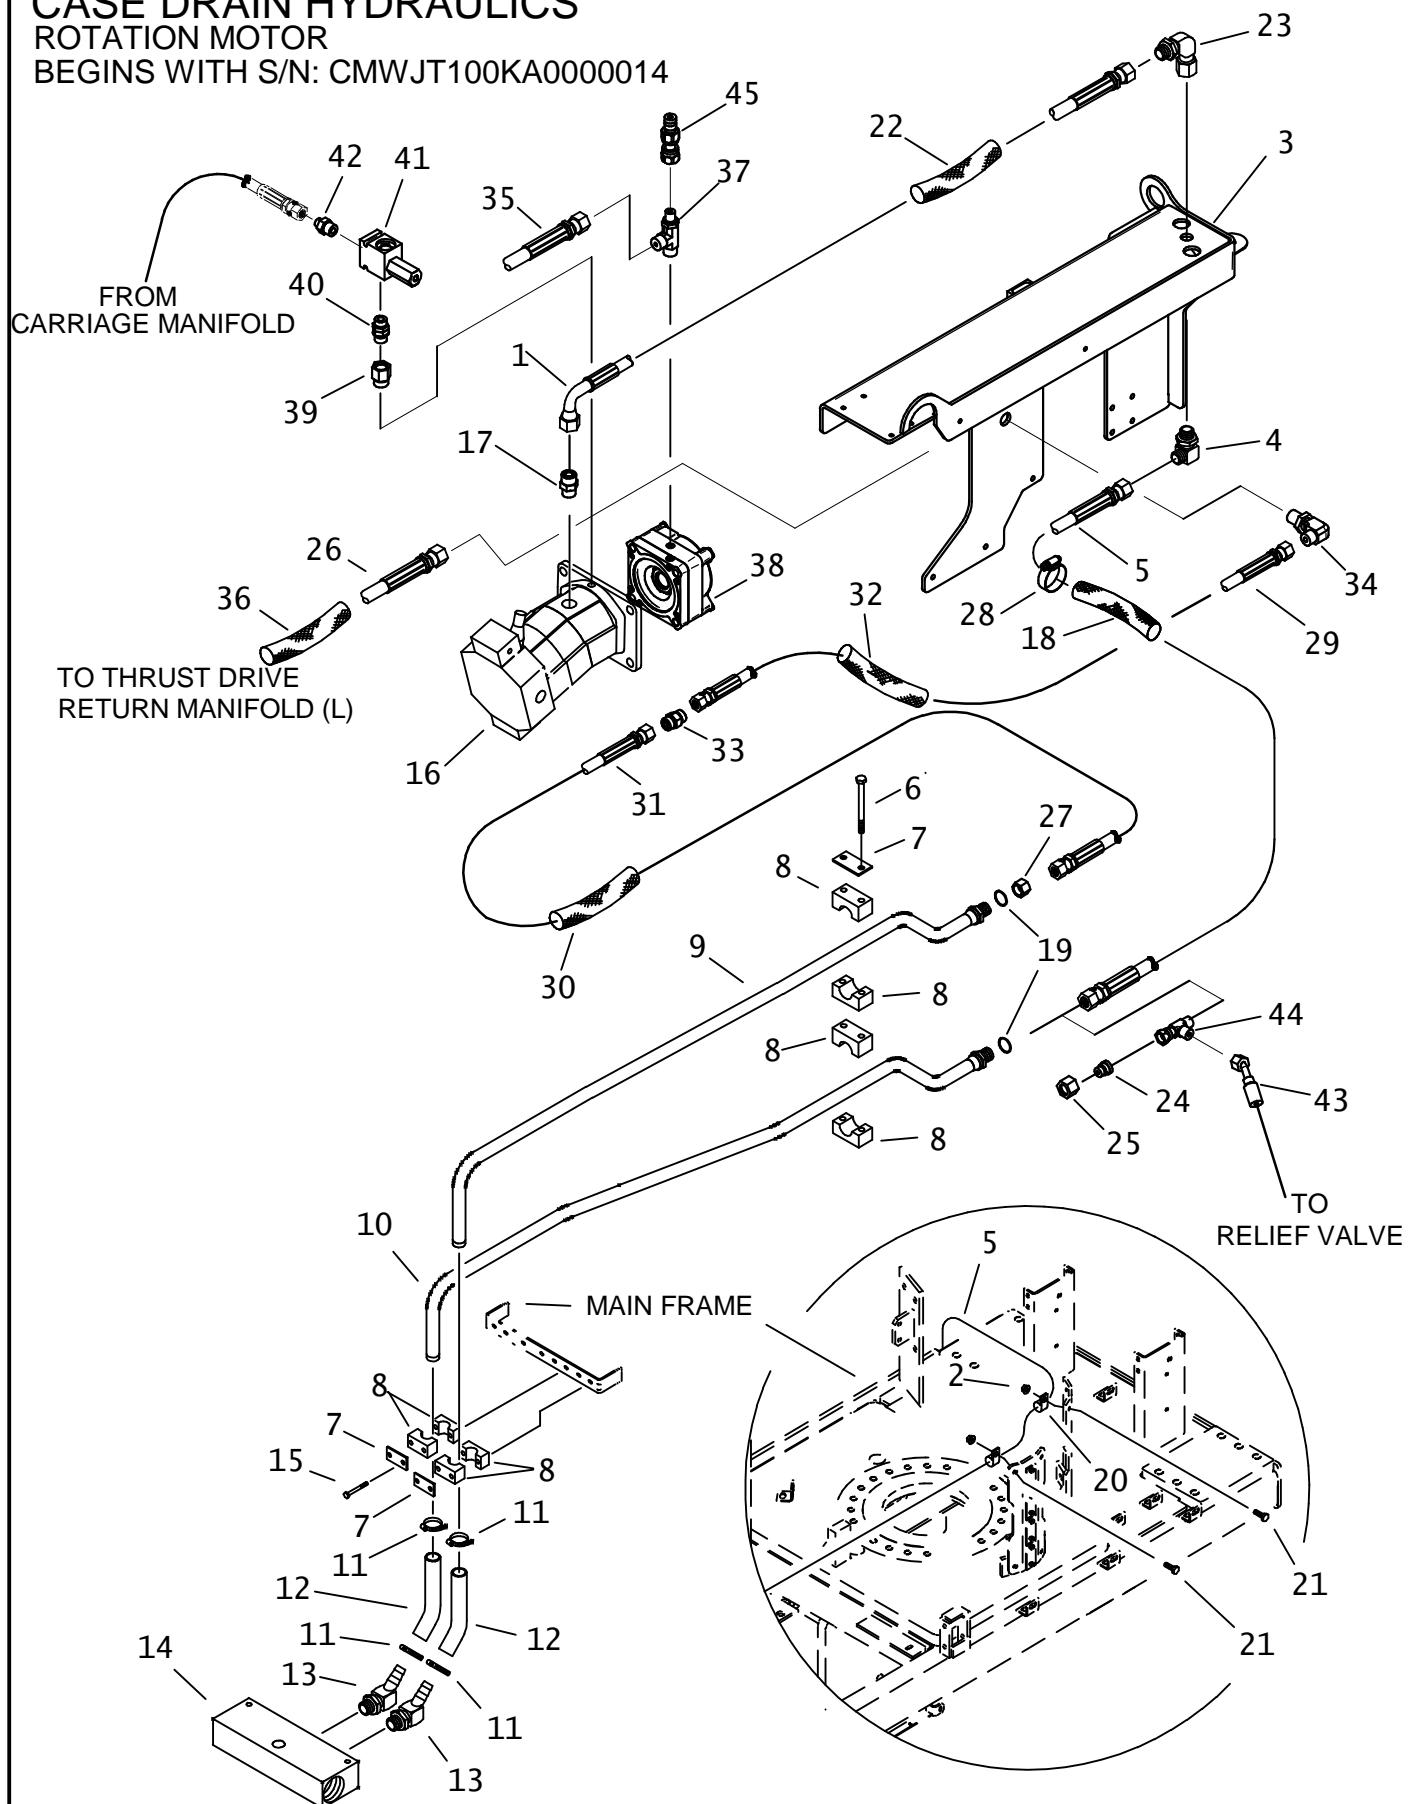

# CASE DRAIN HYDRAULICS

## ROTATION MOTOR

BEGINS WITH S/N: CMWJT100KA0000014

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	HOSE (120FX90-36"-2250)	150-2928	1			
2.	FLG LOCKNUT (M10-1.50)	106-387	2			
3.	CABLE TRAY BRACKET	300-5454	-			
4.	BK CONNECTOR (120-12090BK)	156-482	1			
5.	HOSE (120FX-424"-3000)	150-2704	1			
6.	BOLT (1/4-NC X 3")	107-196	2			
7.	BACKUP (BOLT-ON)	322-289	3			
8.	BOLT-ON CLAMP (1", SOLD PER SET)	110-573	4			
9.	HYD LINE (-16)	150-2800	1			
10.	HYD LINE (-16)	156-135	1			
11.	WORM CLAMP (1" TO 1-3/4")	111-011	4			
12.	BULK HOSE (1", SOLD PER 1")	116-094	AR			USE 2 @ 9.5"
13.	S/O COUPLER (16S-16H45)	155-230	2			
14.	CASE DRAIN MANIFOLD	159-414	-			
15.	BOLT (1/4-NC X 2")	105-106	4			
16.	HYD MOTOR (PISTON)		-			
	SEAL REPAIR KIT	191-212	-			
	CONTROL SOLENOID	217-745	-			
	SPEED SENSOR	502-172	-			
17.	CONNECTOR (12S-120)	154-269	1			
18.	ABRASION SLEEVE (1.75" X 425")	105-1337	1			
19.	O-RING (018 D90)	157-017	2			
20.	BOLT-ON CLAMP (1-5/8")	110-332	2			
21.	FLG LK SCREW (M10-1.50 x 25mm)	107-001	2			
22.	ABRASION SLEEVE (1.59" X 38")	117-655	1			
23.	UNION (120-120FX90)	154-457	1			
24.	REDUCER STEM (060)	154-459	1			
25.	REDUCER NUT (120F)	154-271	1			
26.	HOSE (060FX90M-40"-3000)	150-2367	1			
27.	CAP (120F)	154-334	1			
28.	WORM CLAMP (3/4" TO 1-1/2")	110-353	1			
29.	HOSE (060FX90S-268"-3000)	150-2366	1			
30.	ABRASION SLEEVE (1.25" X 270")	105-1425	1			
31.	HOSE (060FX-122"-3000)	150-2365	1			
32.	ABRASION SLEEVE (1.25" X 124")	105-1426	1			
33.	CONNECTOR (060-060)	154-413	1			
34.	BK CONNECTOR (060-06090BK)	154-229	1			
35.	HOSE (040FX90S-34"-3000)	153-365	1			
36.	ABRASION SLEEVE (1.25" X 44")	117-189	1			
37.	RUN TEE (04S-040-040)	154-316	1			
38.	MODULAR BREAK	160-458	1			
39.	REDUCER (10S-08SF)	155-193	1			
40.	CONNECTOR (08S-08S)	154-466	1			
41.	RELIEF VALVE	150-2026	1			
42.	CONNECTOR (040-08S)	154-261	1			
43.	HOSE (060FX45-14"-3000)	150-3054	1			
44.	UN RUN TEE (060FX-060-060)	154-344	1			
45.	QDC ADAPTER (02-040F)	159-156	1			


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## INNER ROTATION PLUMBING

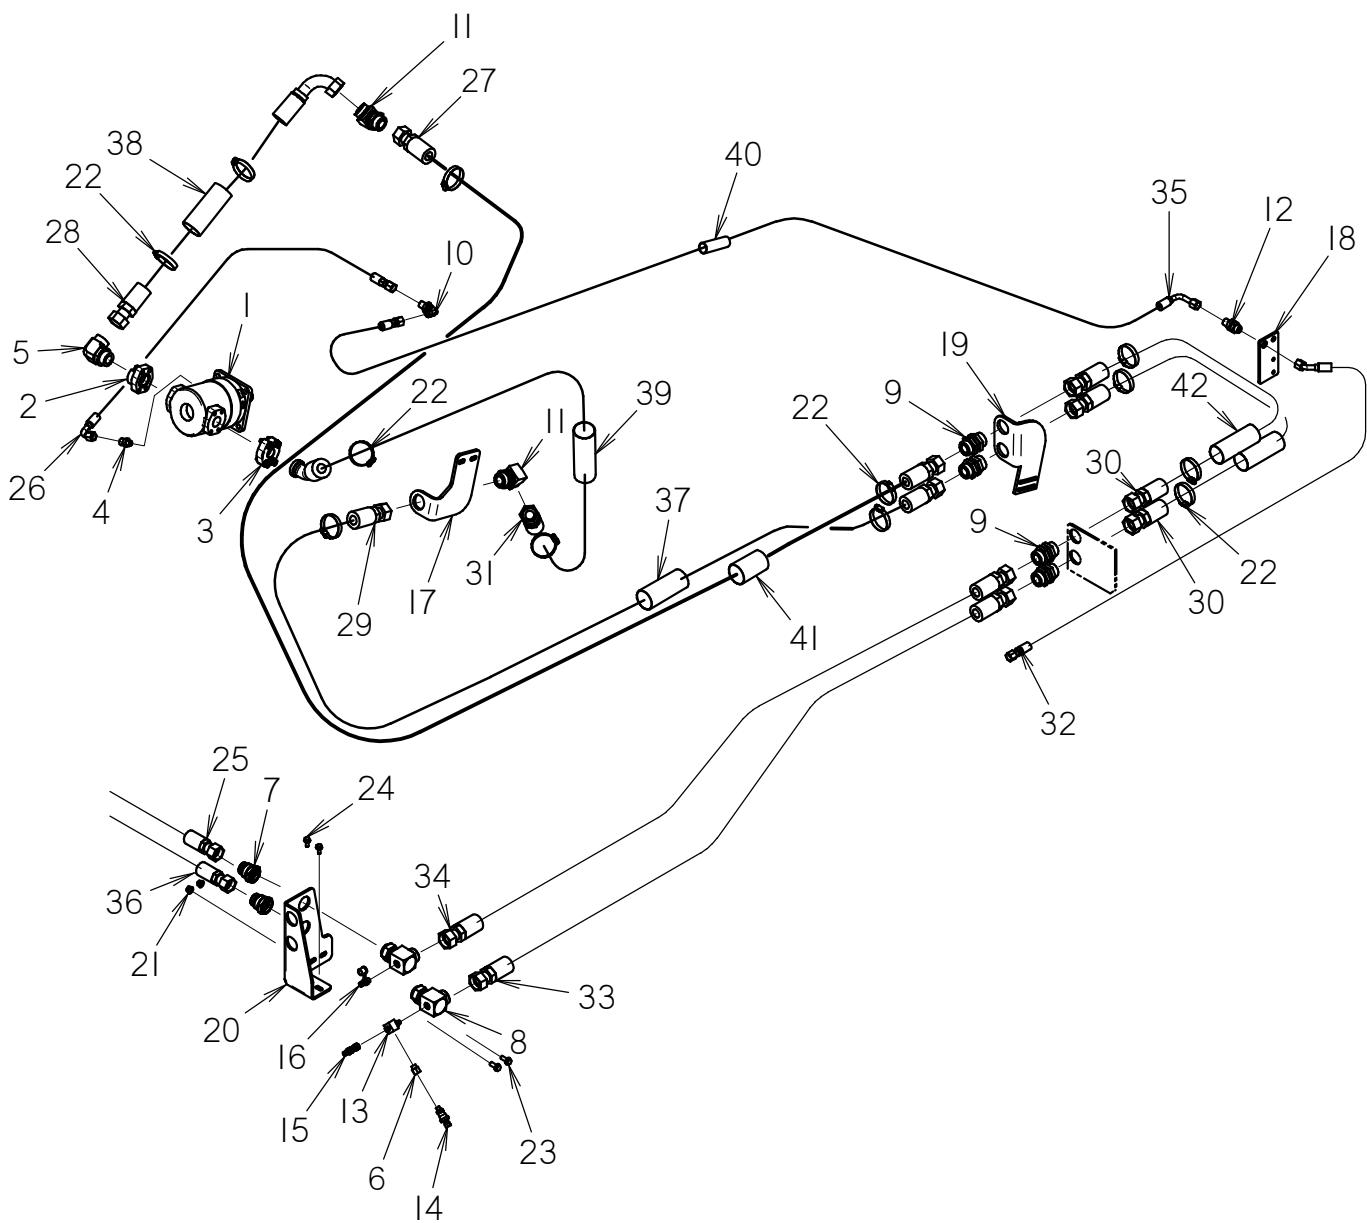

# INNER ROTATION PLUMBING

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I53-612	1	HYDRAULIC MOTOR	SEE FOOTNOTE I
2	I50-2819	1	ANCHOR FLANGE 20HF-20SF	
3	I59-036	1	SPLIT FLANGE (20SF, SET)	
4	I54-246	1	CONNECTOR (06S-080)	
5	I54-095	1	CONNECTOR (20S-20090)	
6	I55-254	1	REDUCER (06S-04SF)	
7	I54-144	2	REDUCER (I60-200F)	
8	I50-2815	2	BK CONNECTOR (200-20090BK-04SF)	
9	I54-096	4	BK CONNECTOR (200-200BK)	
10	I54-396	1	BK CONNECTOR (080-08090BK)	
11	I53-395	2	BK CONNECTOR (200-20045)	
12	I54-390	1	BK CONNECTOR (080)	
13	I50-1005	1	RUN TEE (04S-040-06SF)	
14	I24-569	1	PRESSURE TRANSDUCER (6000 PSI)	
15	I59-156	1	QDC ADAPTER (02-040F)	
16	I59-154	1	QDC ADAPTER (02-04S)	
17	300-9431	1	BRACKET	
18	300-9811	1	BULKHEAD BRACKET	
19	300-9610	1	BULKHEAD BRACKET	
20	300-8716	1	BULKHEAD BRACKET	
21	I06-387	2	FLG LOCKNUT (M10-1.50)	
22	I10-I34	12	WORM CLAMP (2.062" TO 2.750")	
23	I06-724	2	FLG SCREW (M10-1.50 X 25MM)	
24	I06-162	2	FLG SCREW (M8-1.25 X 20MM, GD8)	
25	I50-2828	1	HOSE (I60FX90S-42"-4000)	
26	I50-2825	1	HOSE (080FX90S-35"-3000)	
27	I50-2823	1	HOSE (200FX-271"-4000)	
28	I50-2850	1	HOSE (200FX90M-49"-4000)	
29	I50-2839	1	HOSE (200FX-200FX 227"-4000)	
30	I50-2369	2	HOSE (200FX 200FX 66" 4000)	
31	I50-2371	1	HOSE (200FX20FLH-21.5"-4000)	
32	I50-2826	1	HOSE (080FX45-92"-3000)	
33	I50-2822	1	HOSE (200FX-125"-4000)	
34	I50-2822	1	HOSE (200FX-125"-4000)	
35	I50-2824	1	HOSE (040FX90M-312"-4000)	
36	I50-2827	1	HOSE (I60FX-38"-4000)	
37	I15-448	1	ABRASION SLEEVE (2.38" X 252")	
38	I17-696	1	ABRASION SLEEVE (2.38" X 48")	
39	I15-932	1	ABRASION SLEEVE (2.38" X 24")	
40	I05-1335	1	ABRASION SLEEVE (1.25" X 315")	
41	I17-1024	1	ABRASION SLEEVE (2.54" x 275")	
42	I17-568	2	ABRASION SLEEVE (2.38" X 66")	

NOT SHOWN:


FOOTNOTES:

I USE I9I-263 SEAL KIT

NOTE:

200

# CASE DRAIN HYDRAULICS ROTATION AND THRUST PUMPS

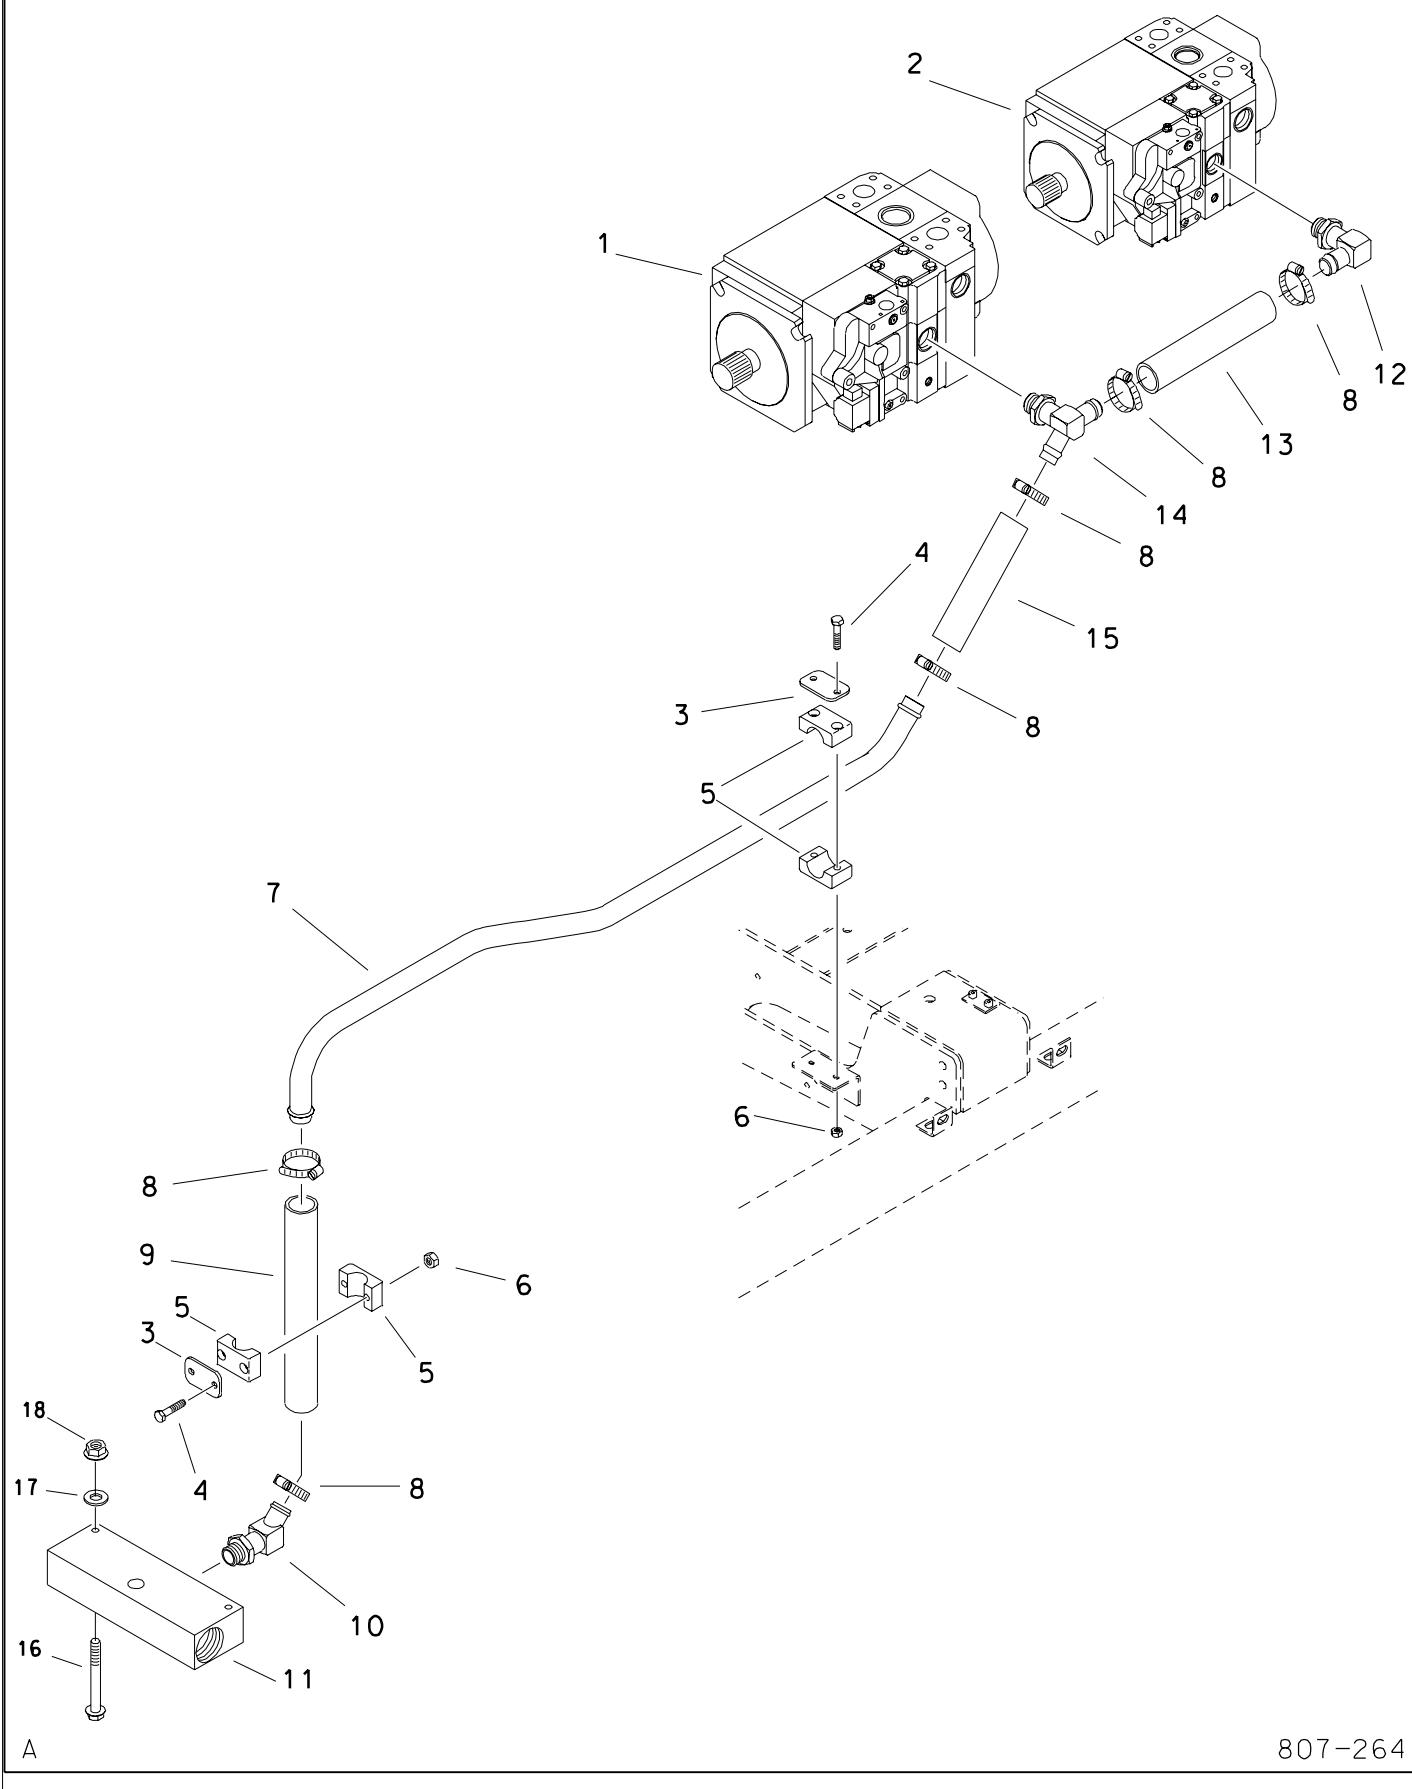

# CASE DRAIN HYDRAULICS


## ROTATION AND THRUST PUMPS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	149-901	1	HYDRAULIC PUMP (130 CC)	
	190-763		SEAL REPAIR KIT	
2.	149-902	1	HYDRAULIC PUMP (100 CC)	
	190-764		SEAL REPAIR KIT	
3.	322-362	2	BACKUP SPACER	
4.	107-196	4	BOLT (1/4-NC X 3")	
5.	110-852	2	BLT-ON CLP (1.2", SOLD PER SET)	
6.	105-832	4	FLG LOCKNUT (1/4-NC)	
7.	156-133	1	HYD LINE (-20)	
8.	111-011	6	WORM CLAMP (1" TO 1-3/4")	
9.	115-373 AR		BULK HOSE (1-1/4", SOLD PER 1") USE 1 @ 9.5"	
10.	115-281	1	S/D COUPLER (16S-20H45)	
11.	159-414	-	CASE DRAIN MANIFOLD	
12.	514-027	1	S/D COUPLER (12S-20H90)	
13.	115-373 AR		BULK HOSE (1-1/4", SOLD PER 1") USE 1 @ 15"	
14.	514-360	1	S/D BR TEE (16S-20H-20H)	
15.	115-373 AR		BULK HOSE (1-1/4", SOLD PER 1") USE 1 @ 8"	
16.	106-206	2	SCREW (M10-1.50 X 90MM)	
17.	106-390	2	WASHER (M10)	
18.	105-894	2	LOCKNUT(M10-1.50,PRV TRQ,10.9)	

### FOOTNOTES

NOTE  
REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## OIL COOLER HYDRAULICS

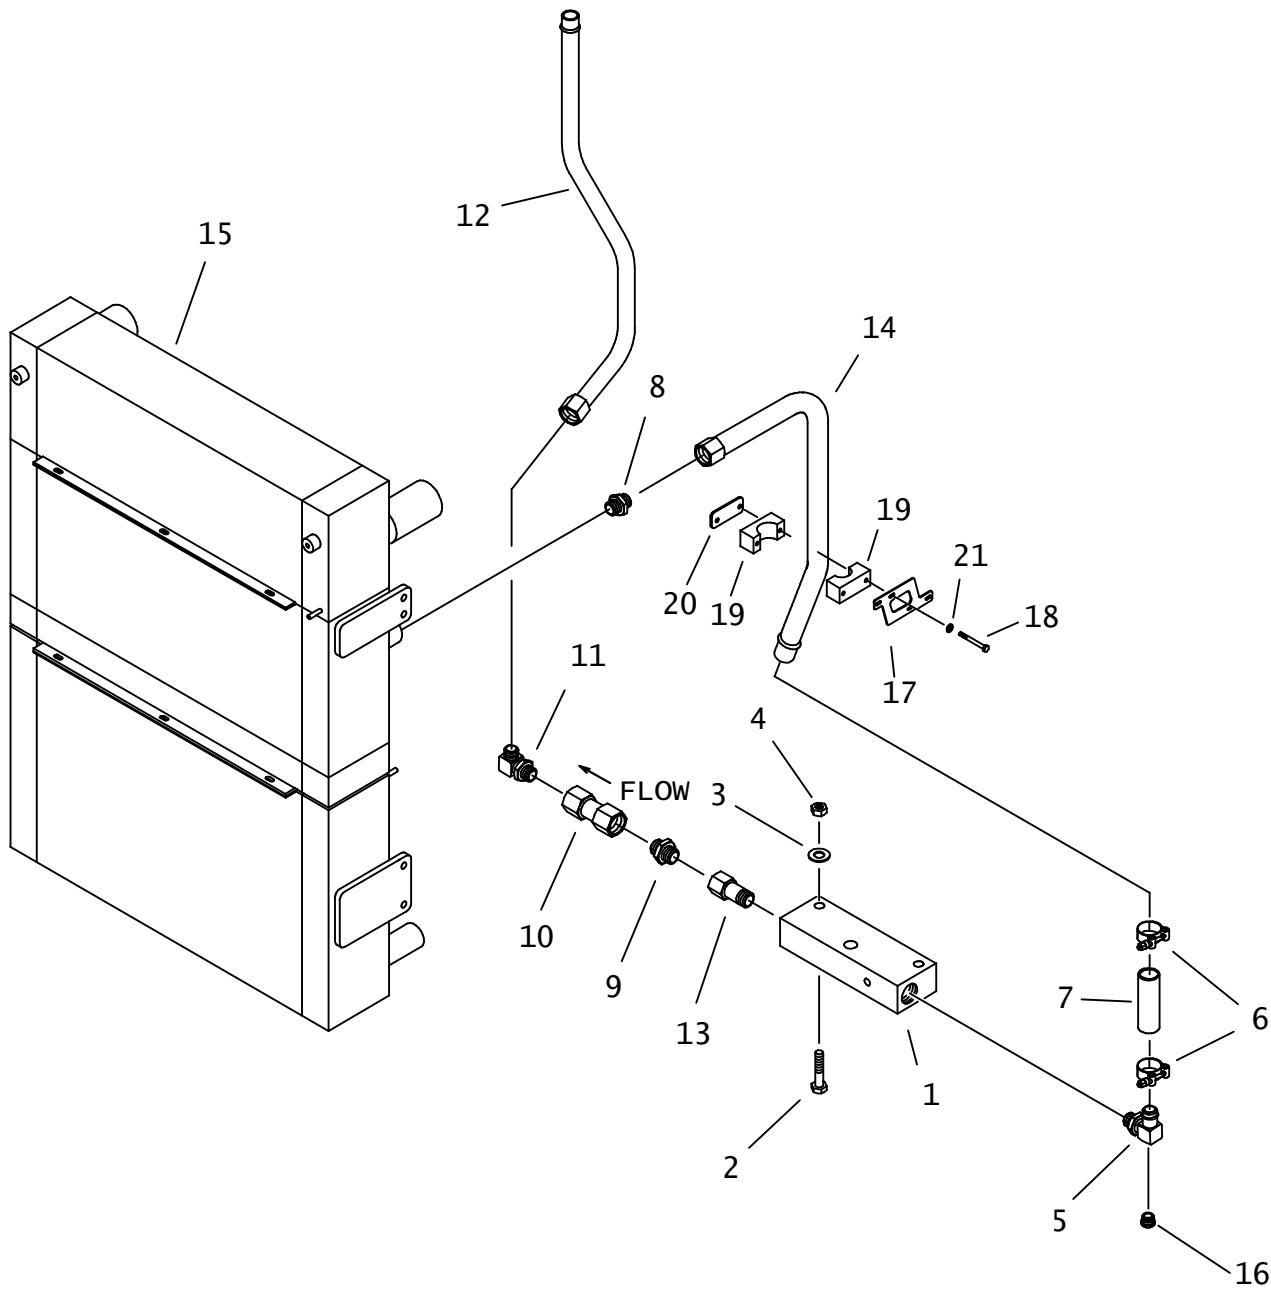

## OIL COOLER HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	159-414	1	CASE DRAIN MANIFOLD	
2.	106-206	2	SCREW (M10-1.50 X 90MM)	
3.	106-390	2	WASHER (M10)	
4.	105-894	2	LOCKNUT (M10-1.50, PRV TRQ, 10.9)	
5.	514-429	1	S/O COUPLER (20S-24H90-04S)	
6.	111-028	2	T-BOLT CLAMP (1-3/4" TO 2")	
7.	116-588	AR	BULK HOSE (1-1/2", SOLD PER 1')	USE 1 @ 20"
8.	514-354	1	CONNECTOR (20S-240)	
9.	514-131	1	CONNECTOR (16S-16S)	
10.	158-693	1	FLOW CHECK (16SF-16SF)	
11.	156-895	1	CONNECTOR (16S-20090)	
12.	156-131	-	HYD LINE (-20)	
13.	514-353	1	REDUCER (20S-16SF)	
14.	149-942	1	HYD LINE (-24)	
15.	195-1015	-	COOLER, JT8020 TIER 3	
16.	154-383	1	PLUG (04S)	
17.	308-702	-	CLAMP MOUNT	
18.	105-224	2	BOLT (1/4-NC X 2-1/2")	
19.	111-008	1	BLT-ON CLAMP (1.5", SOLD PER SET)	
20.	322-363	1	WELD PLATE	
21.	105-095	2	WASHER (1/4")	

NOT SHOWN:

FOOTNOTES:


NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## COOLER OUTLET HYDRAULICS

BEGINS WITH

S/N CMWJ8020T3P70000006

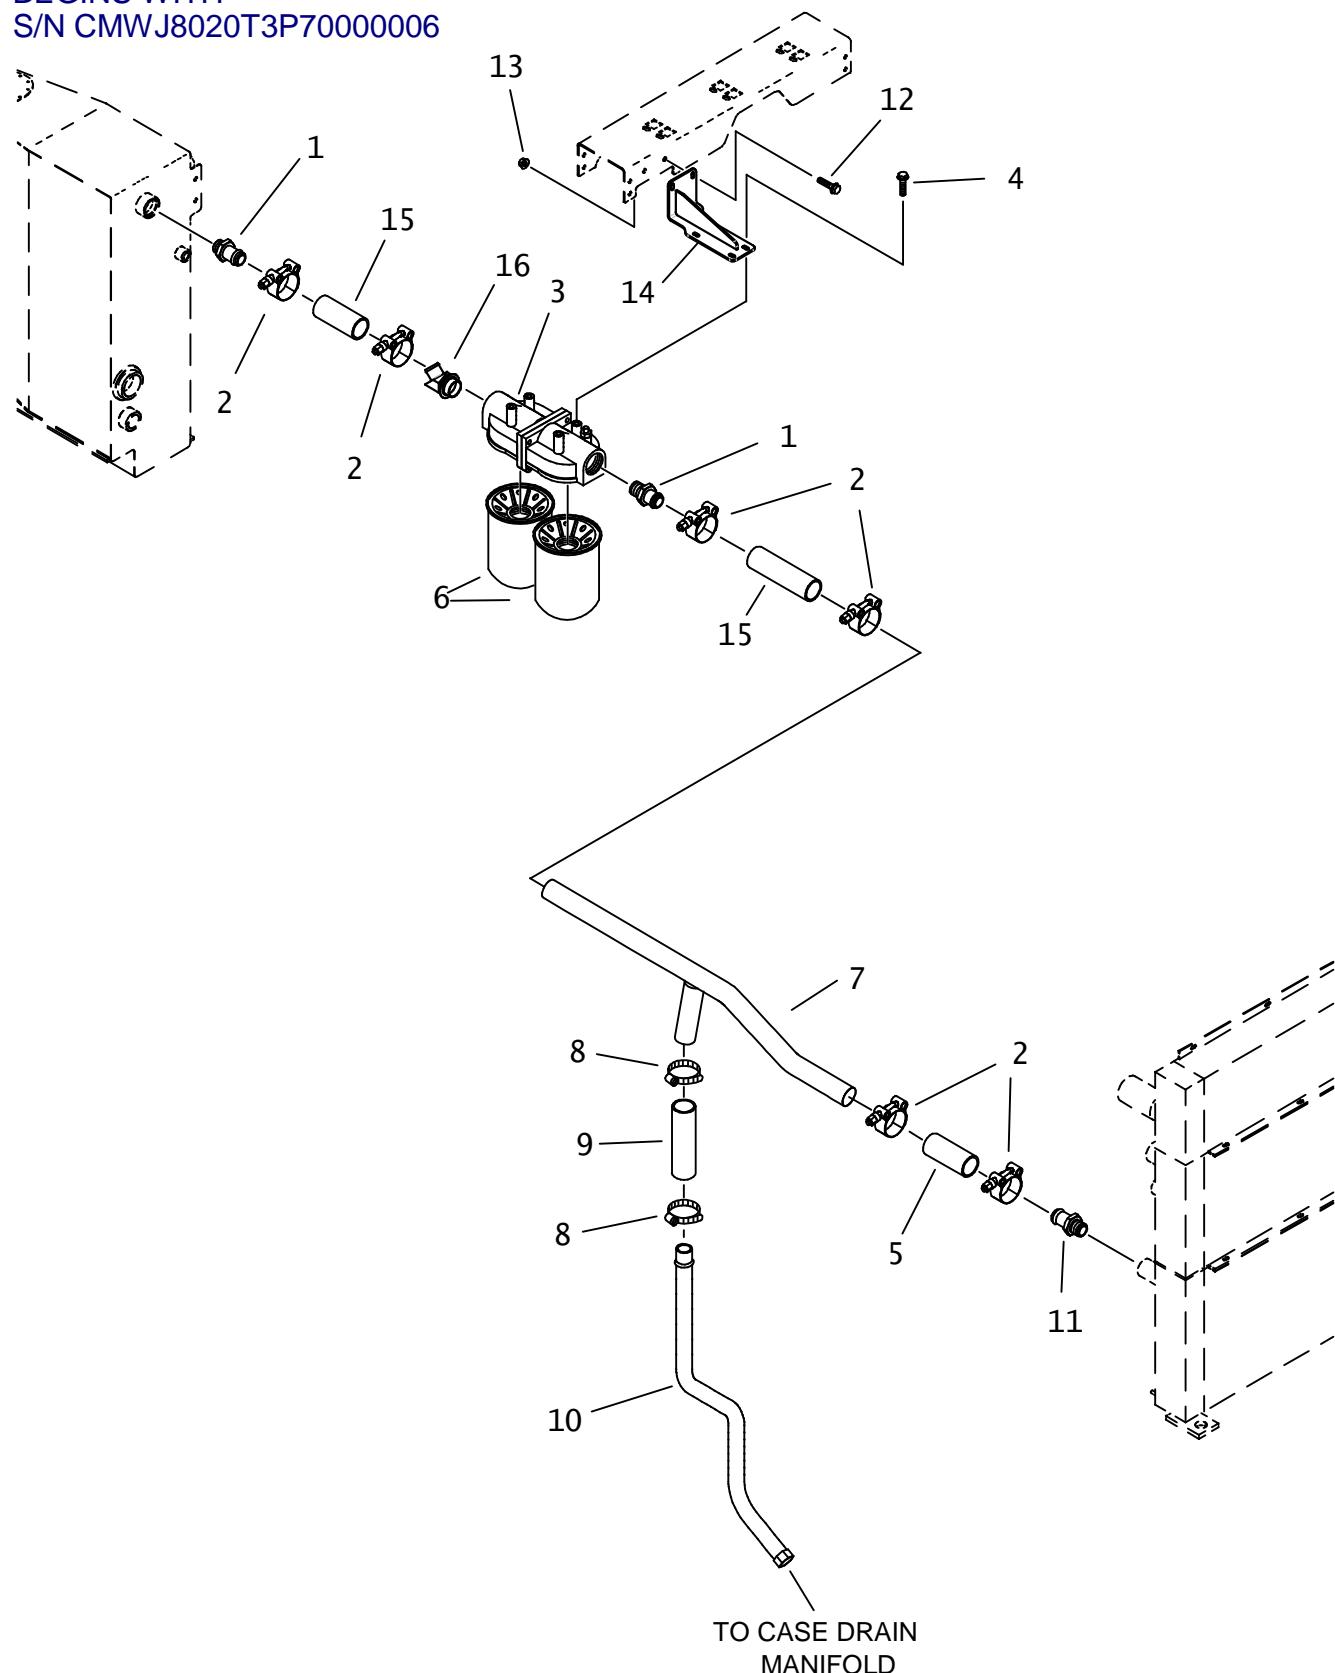

**COOLER OUTLET HYDRAULICS**  
**BEGINS WITH**  
**S/N CMWJ8020T3P70000006**

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-138	2	S/O COUPLER (24S-24H)	
2.	111-028	6	T-BOLT CLAMP (1-3/4" TO 2")	
3.	159-411	1	FILTER HEAD (20SF-20SF)	
	168-616	1	FILTER HEAD GASKET	
4.	105-825	4	FLG LK BOLT (3/8-NC X .75")	
5.	116-588 AR		BULK HOSE (1-1/2", SOLD PER 1')	USE 1 @ 6"
6.	153-792	2	FILTER ELEMENT (1-1/2-UNF)	
	153-791	2	FILTER ELEMENT (1-1/2-UNF)	SEE FOOTNOTE 1
7.	149-954	1	HYD LINE (24H)	
8.	111-011	2	WORM CLAMP (1" - 1-3/4")	
9.	116-587 AR		BULK HOSE (1-1/4", SOLD PER 1')	USE 1 @ 12.5"
10.	156-131	1	HYD LINE (-20)	
11.	155-148	1	S/O COUPLER (20S-24H)	
12.	106-724	2	FLG SCREW (M10-1.50 X 25MM)	
13.	106-387	2	FLG NUT (M10-1.50)	
14.	300-4530	1	WELDMENT, HYD OIL FILTER BRACKET	
15.	116-588 AR		BULK HOSE (1-1/2", SOLD PER 1')	USE 2 @ 9.5"
16.	153-370	1	S/O COUPLER (24S-24H45)	

NOT SHOWN:


FOOTNOTES:

1. USE 153-792 ELEMENT FOR NORMAL MAINTENENCE. USE 153-791 ELEMENT AFTER HOSE OR COMPONENT REPLACEMENT.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## COOLER OUTLET HYDRAULICS (AT)

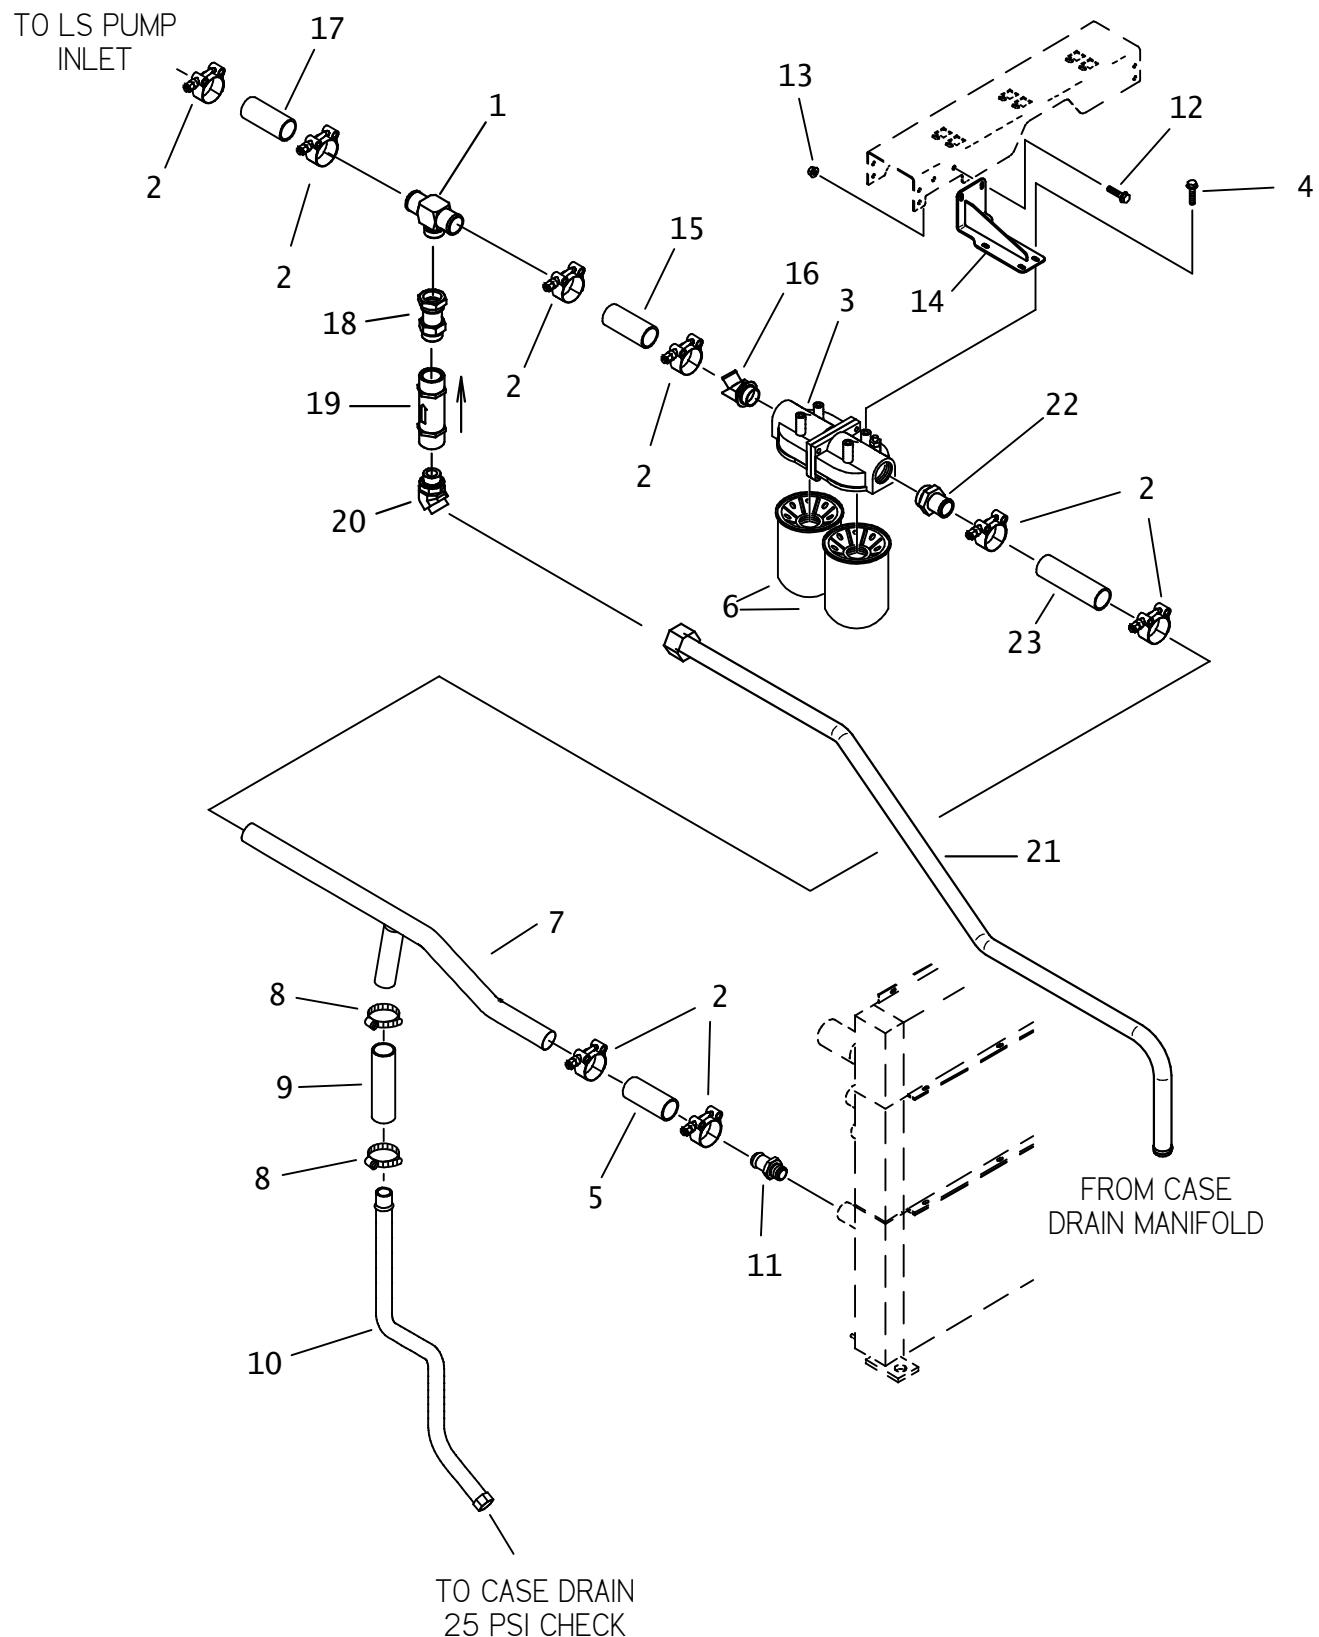

## COOLER OUTLET HYDRAULICS (AT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-441	1	S/O BR TEE (160-24H-24H)	
2.	111-028	8	T-BOLT CLAMP (1-3/4" TO 2")	
3.	159-411	1	FILTER HEAD (20SF-20SF)	
	168-616	1	FILTER HEAD GASKET	
4.	105-825	4	FLG LK BOLT (3/8-NC X .75")	
5.	116-588 AR		BULK HOSE (1-1/2", SOLD PER 1')	USE 1 @ 6"
6.	153-792	2	FILTER ELEMENT (1-1/2-UNF)	
	153-791	2	FILTER ELEMENT (1-1/2-UNF)	SEE FOOTNOTE 1
7.	149-954	1	HYD LINE (24H)	
8.	111-011	2	WORM CLAMP (1" - 1-3/4")	
9.	116-587 AR		BULK HOSE (1-1/4", SOLD PER 1')	USE 1 @ 12.5"
10.	156-131	1	HYD LINE (-20)	
11.	155-148	1	S/O COUPLER (20S-24H)	
12.	106-724	2	FLG SCREW (M10-1.50 X 25MM)	
13.	106-387	2	FLG NUT (M10-1.50)	
14.	300-4530	1	WELDMENT, HYD OIL FILTER BRACKET	
15.	116-588 AR		BULK HOSE (1-1/2", SOLD PER 1')	USE 1 @ 32"
16.	153-370	1	S/O COUPLER (24S-24H45)	
17.	116-588 AR		BULK HOSE (1-1/2", SOLD PER 1')	USE 1 @ 37"
18.	150-2818	1	CONNECTOR (16S-160FX)	
19.	153-436	1	FLOW CHECK (-16SF-16SF)	
20.	154-388	1	CONNECTOR (16S-16045)	
21.	150-2800	1	HYD LINE (-16)	
22.	514-138	1	SLIP-ON COUPLER (24S-24H)	
23.	116-588 AR		BULK HOSE (1-1/2", SOLD PER 1')	USE 1 @ 9"

NOT SHOWN:


FOOTNOTES:

1. USE 153-792 ELEMENT FOR NORMAL MAINTENANCE. USE 153-791 ELEMENT AFTER HOSE OR COMPONENT REPLACEMENT.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## PILOT VALVE HYDRAULICS

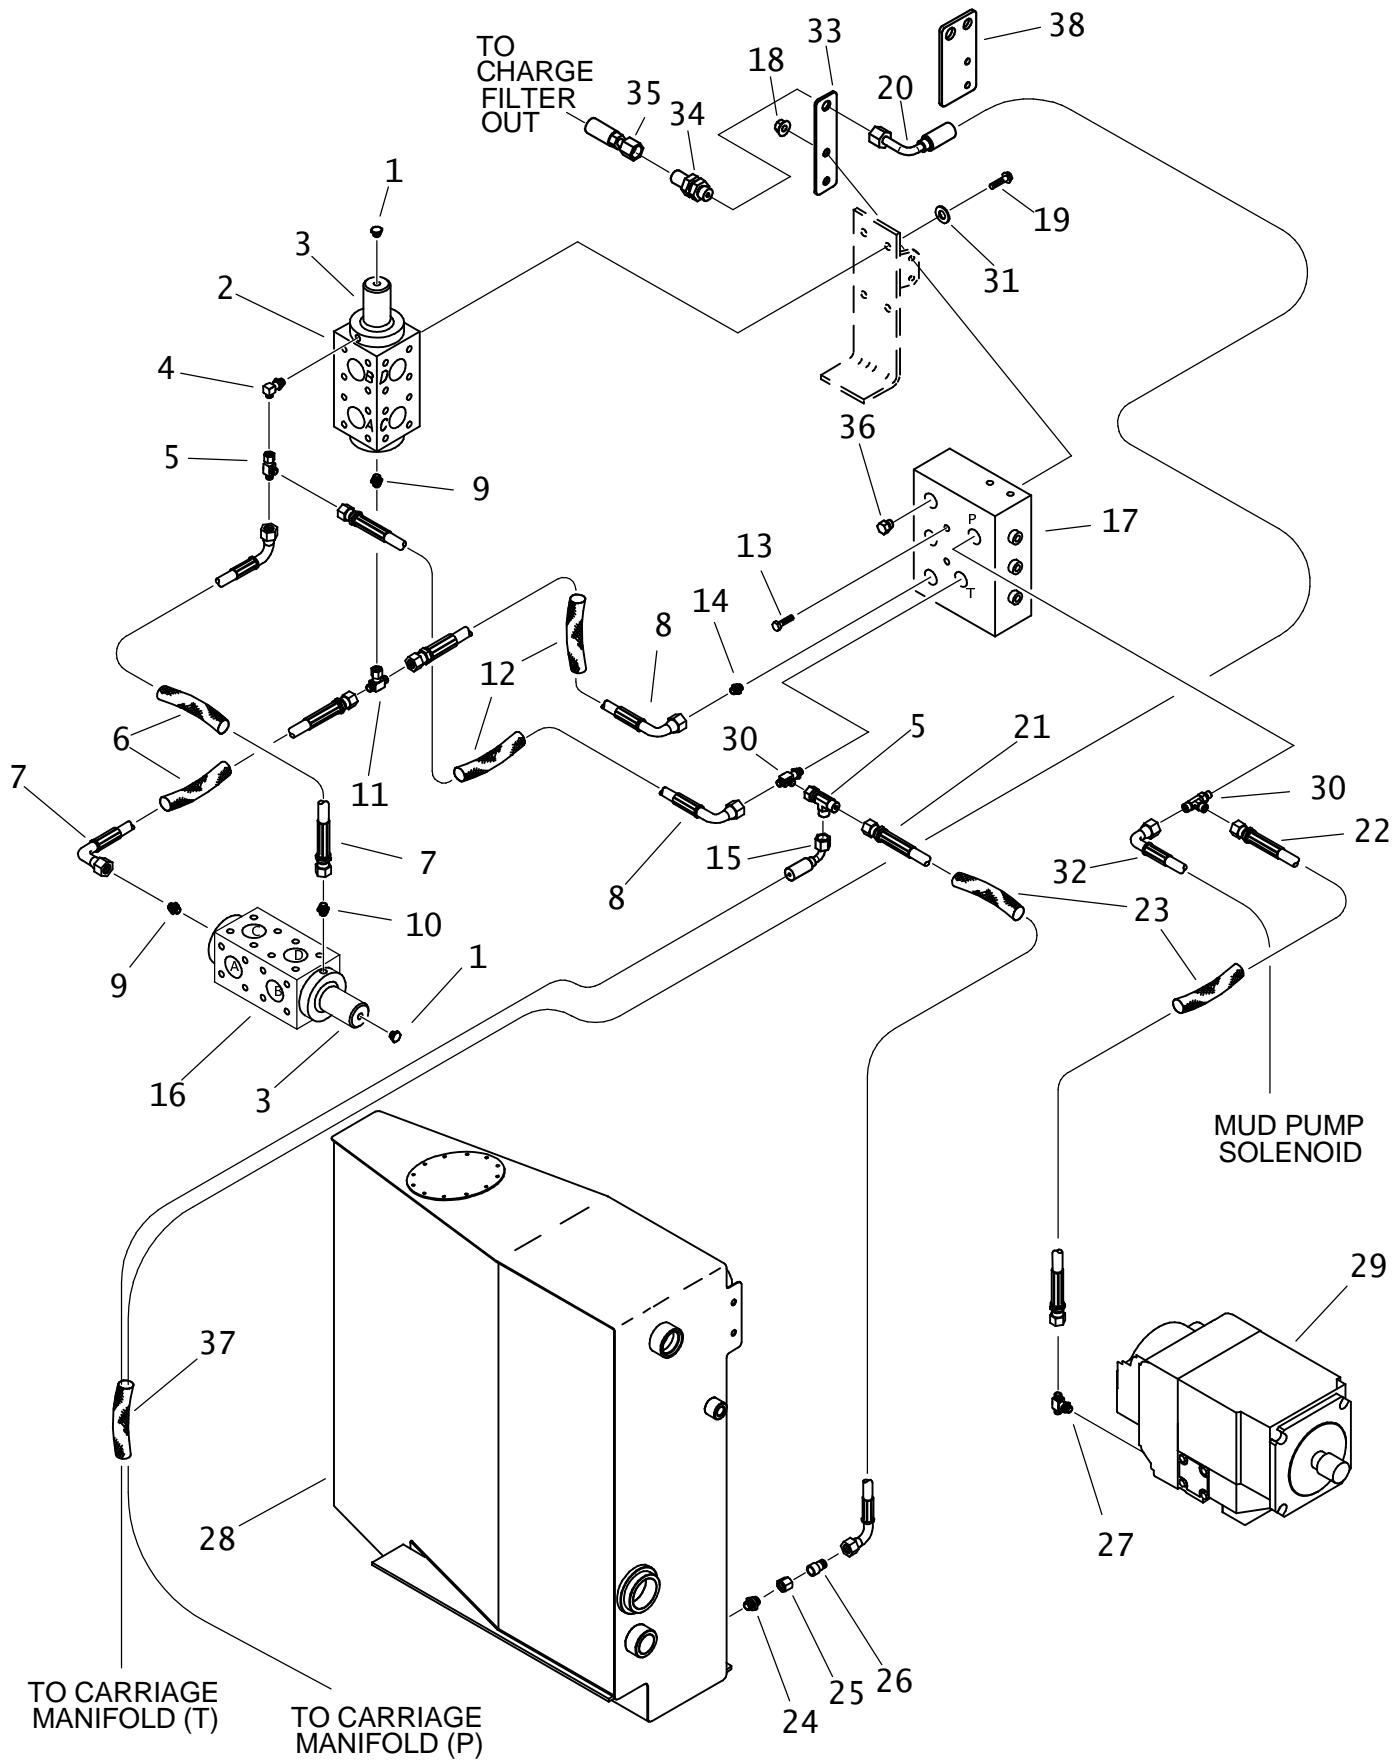

# PILOT VALVE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	115-153	2	PLUG (04N, SQ)	
2.	516-033	1	SELECTOR VALVE DIVERTER	
3.	159-426	-	SPRING OFFSET KIT	
4.	154-482	1	CONNECTOR (04N-04090)	
5.	154-265	2	UNION RUN TEE (040FX-040-040)	
6.	117-676	2	ABRASION SLEEVE (1" X 30")	
7.	154-727	2	HYD HOSE (040FX90-30"-3000)	
8.	515-041	2	HYD HOSE (040FX90-20"-3000)	
9.	514-005	2	CONNECTOR (040-06N)	
10.	154-339	1	CONNECTOR (04N-040)	
11.	154-379	1	UN BR TEE (040FX-040-040)	
12.	117-672	2	ABRASION SLEEVE (1" X 20")	
13.	106-332	2	SCREW (M10-1.50 X 70MM)	
14.	154-278	1	CONNECTOR (04S-040)	
15.	150-2702	1	HOSE (040FX90S-321"-3000)	
16.	516-033	1	SELECTOR VALVE DIVERTER	SEE FOOTNOTE #1
17.	159-194	1	CHARGE MANIFOLD	
18.	106-387	2	FLG LOCKNUT (M10-1.50)	
19.	105-829	8	FLG LK BOLT (1/2-NC X 1")	
20.	150-2703	1	HOSE (040FX90L-328"-3000)	
21.	154-964	1	HYD HOSE (040FX90-70"-3000)	
22.	154-670	1	HYD HOSE (040FX-70"-3000)	
23.	117-702	2	ABRASION SLEEVE (1" X 68")	
24.	154-279	1	CONNECTOR (080-10S)	
25.	154-272	1	REDUCER NUT (080F)	
26.	154-248	1	REDUCER STEM (040)	
27.	154-230	1	BRANCH TEE (06S-040-040)	
28.	300-2394	-	WELDMENT, HYDRAULIC TANK, JT	
29.	149-901	-	HYDRAULIC PUMP (130 CC)	
30.	154-316	2	RUN TEE (04S-040-040)	
31.	106-397	4	WASHER (M12, HARDENED)	
32.	149-482	-	HOSE (040FX90S-217"-3000)	
33.	300-8145	1	BULKHEAD BRACKET	FOR "JT" USE
34.	154-275	1	BK CONNECTOR (040-040BK)	
35.	150-1663	1	HOSE (040FX45-105"-3000)	
36.	155-125	1	PLUG (04S)	
37.	117-331	1	ABRASION SLEEVE (1.75" X 314")	
38.	300-9811	1	BULKHEAD BRACKET	FOR "AT" USE

NOT SHOWN:


FOOTNOTES:

- ROTATE "D" TO BE IN LINE WITH FITTING

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## CHARGE MANIFOLD

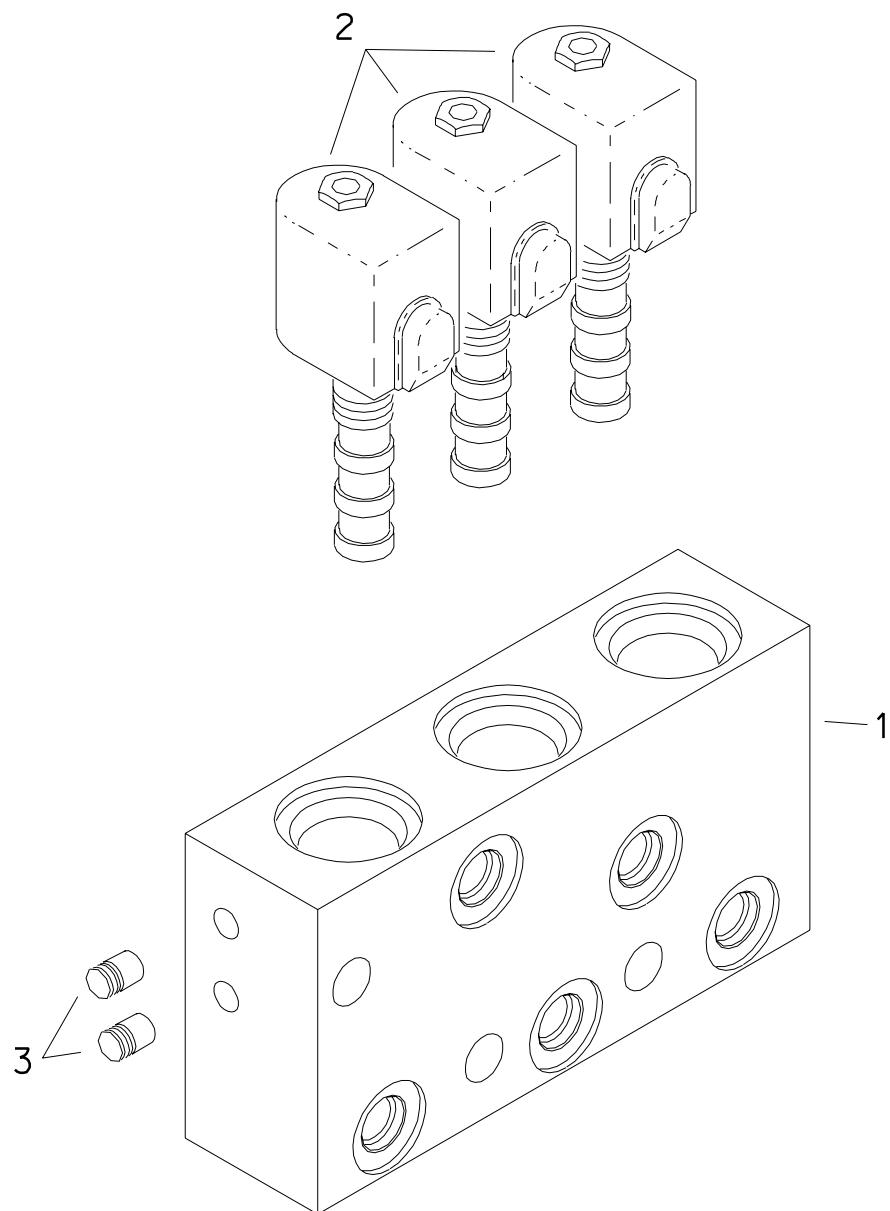


## CHARGE MANIFOLD

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	159-194	1	CHARGE MANIFOLD	
1.	159-149	1	MANIFOLD BLOCK	INCL REF NO.'S 1 THRU 3
2.	158-636	3	SOLENOID VALVE CARTRIDGE	TORQUE TO 30 FT LBS
	500-756		SEAL REPAIR KIT	
	217-770		SOLENOID COIL	
3.	110-264	4	EXPANDER PLUG (.275")	

FOOTNOTES

## AUXILIARY VALVE HYDRAULICS

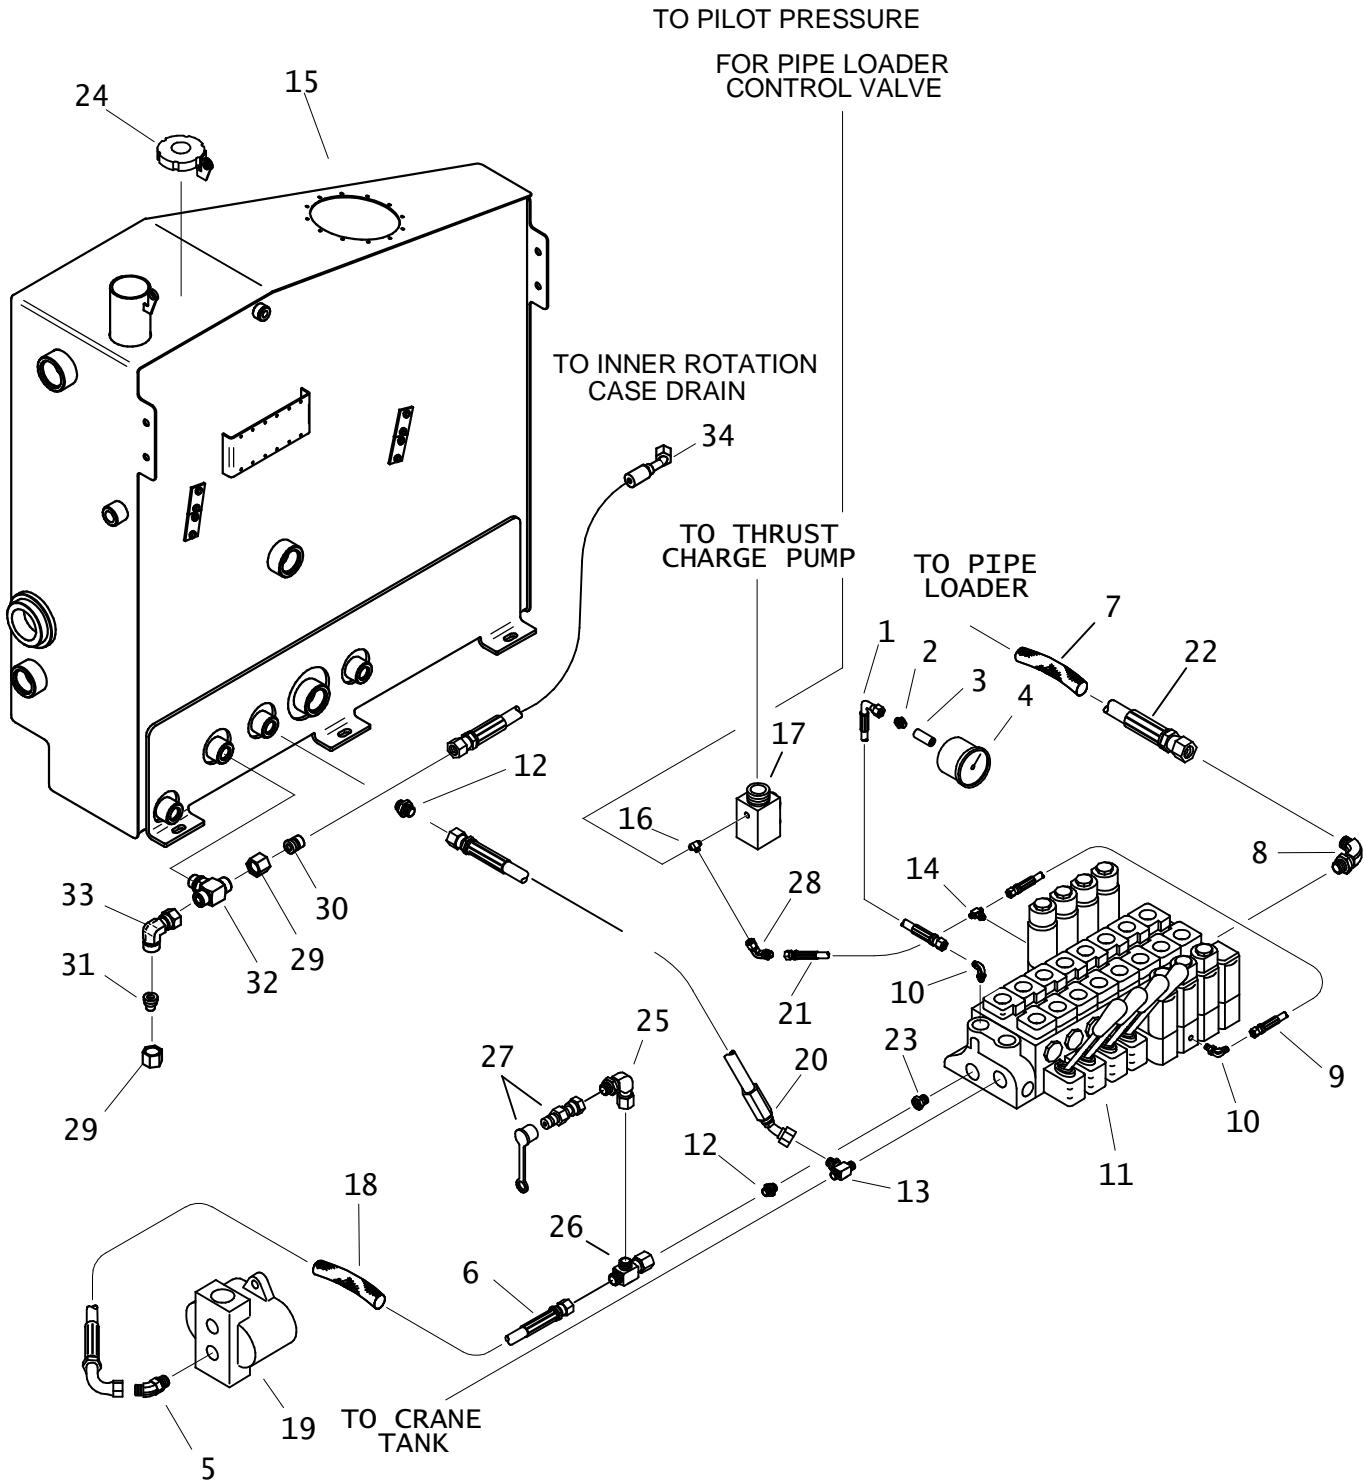

## AUXILIARY VALVE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	515-304	1	HOSE (040FX90S-15"-5000)	
2.	154-339	1	CONNECTOR (04N-040)	
3.	115-170	1	COLLAR (04NF)	
4.	217-552	1	PRESSURE GAUGE (6000 PSI)	
5.	154-470	1	CONNECTOR (100-12S45)	
6.	515-368	1	HOSE (100FX90-68"-3000)	
7.	117-312	1	ABRASION SLEEVE (1.59" X 80")	
8.	154-298	1	CONNECTOR (10S-10090)	JT
	154-399	1	CONNECTOR (10S-10045)	AT
9.	515-735	1	HOSE (040FX-22"-3000)	
10.	154-252	2	CONNECTOR (04S-04090)	
11.	153-215	-	HYDRAULIC VALVE	BEFORE SN. CMWJT100JA0000015
	150-2730	-	HYDRAULIC VALVE	AFTER SN. CMWJT100CA0000016
12.	154-301	2	CONNECTOR (10S-100)	JT
13.	154-370	1	RUN TEE (12S-100-100)	
14.	154-293	1	BRANCH TEE (04S-040-040)	
15.	300-2394	1	WELDMENT, HYDRAULIC TANK JT	
	300-8281	1	WELDMENT, HYDRAULIC TANK AT	
16.	154-230	1	BRANCH TEE (06S-040-040)	
17.	149-845	-	REMOTE FILTRATION KIT (75/100)	
18.	115-938	1	ABRASION SLEEVE (1.59" X 66")	
19.	158-490	-	HYD PUMP	
20.	515-604	1	HOSE (100FX45-20"-3000)	
21.	155-484	1	HOSE (040FX-16"-3000)	
22.	154-986	1	HOSE (100FX90-80"-3000)	
23.	510-017	1	REDUCER (12S-10SF)	
24.	111-046	-	LOCKING CAP (NON-VENTED)	
25.	154-315	1	CONNECTOR (100-100FX90)	
26.	154-488	1	UN RUN TEE (100FX-100-100)	
27.	159-159	1	QDC ADAPTER (02-100FX)	
28.	154-255	1	UNION (040-040FX90)	
29.	154-310	2	REDUCER NUT (100F)	AT
30.	154-312	1	REDUCER STEM (080)	AT
31.	154-311	1	REDUCER STEM (040)	AT
32.	154-318	1	BRANCH TEE (10S-100-100)	AT & REFER TO FOOTNOTE 1
33.	154-315	1	UNION (080-080FX90)	AT
34.	150-2826	1	HOSE (080FX45-92"-3000)	AT

NOT SHOWN:


FOOTNOTES:

- I. FOR "AT" PURPOSES REPLACE REF. #12 (154-301) WITH REF. #32 (154-318).

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## AUXILIARY VALVE

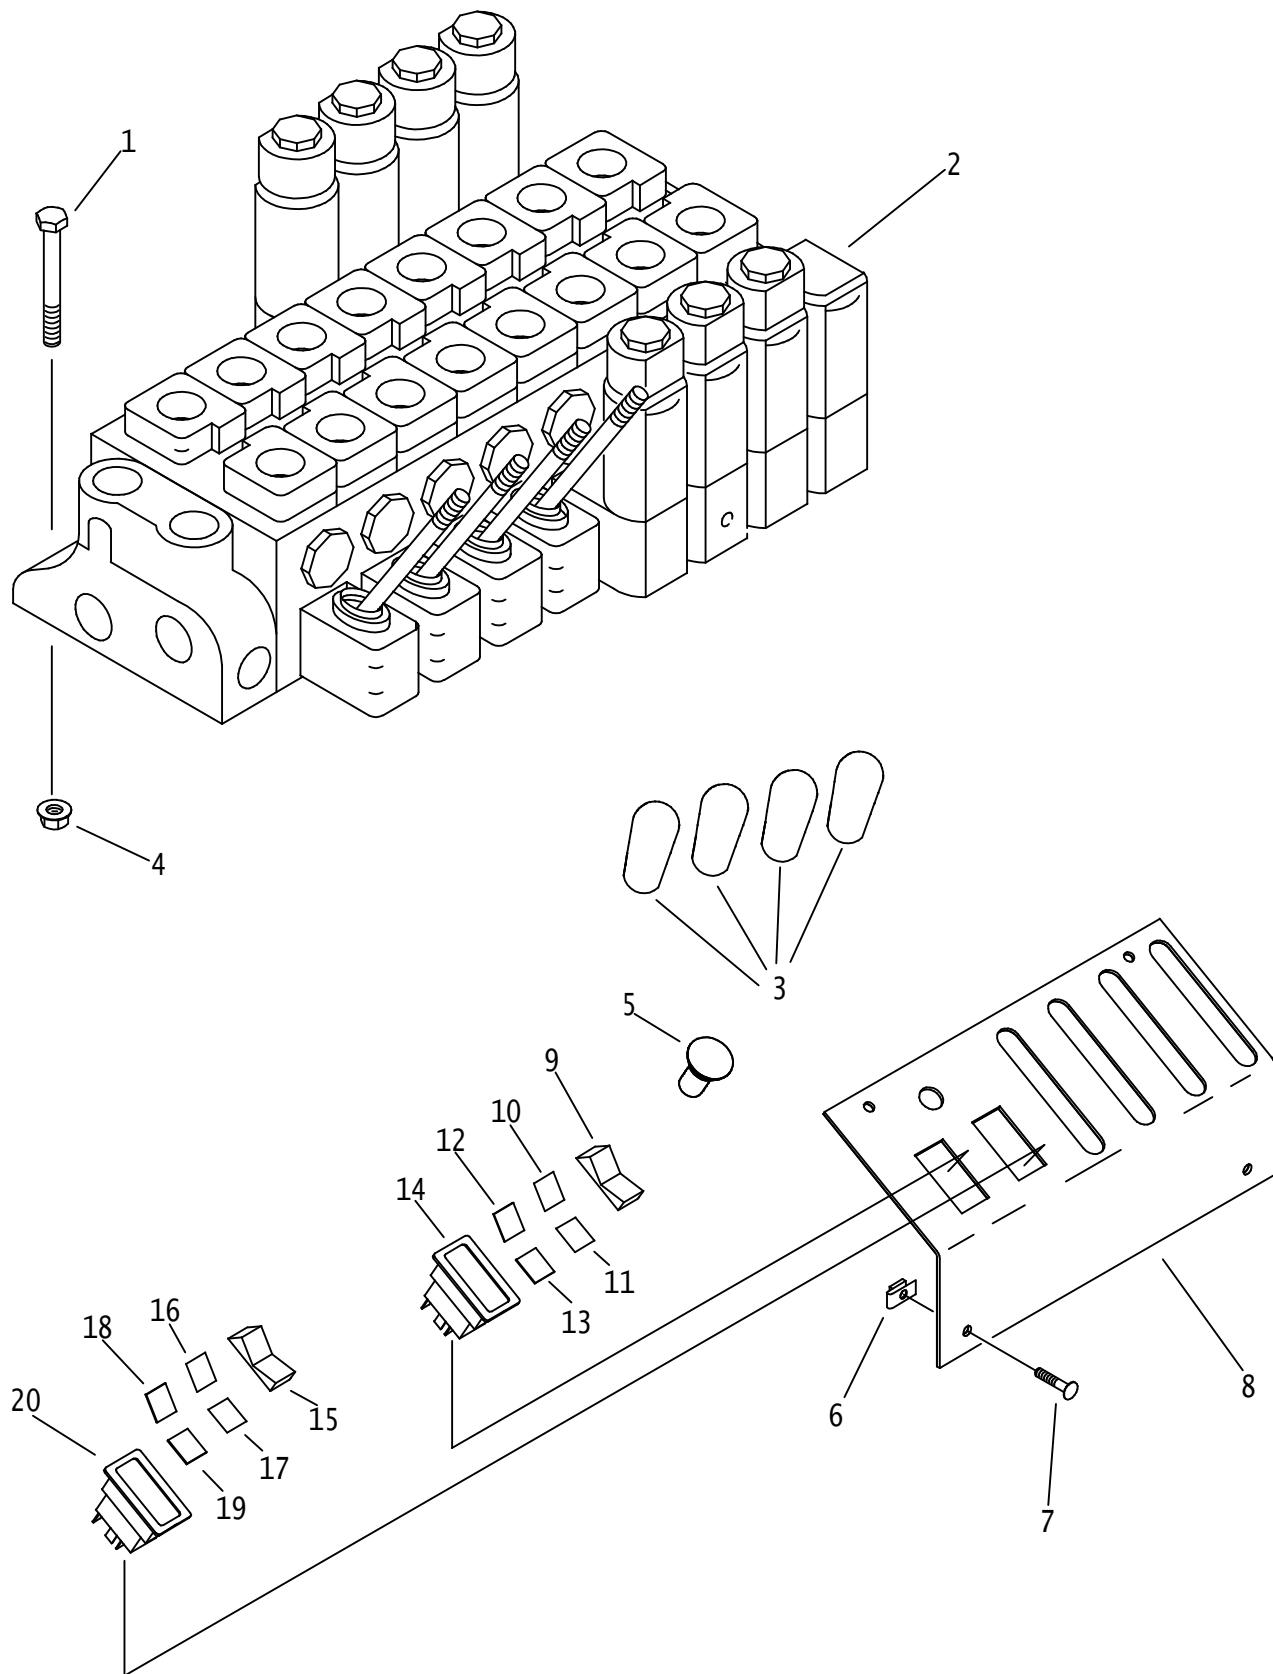

## AUXILIARY VALVE




REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	106-330	2	SCREW (M8-1.25 X 70MM)	
2.	153-215	1	HYDRAULIC VALVE	BEFORE SN. CMWJT100JA0000015
	150-2730	1	HYDRAULIC VALVE	AFTER SN. CMWJT100CA0000016
3.	110-283	4	KNOB (3/8-NC, BLACK)	
4.	106-386	3	FLG LOCKNUT (M8-1.25)	
5.	217-206	1	BUTTON SWITCH (SPST)	
6.	106-574	4	CLIP NUT (M6-1.00)	
7.	106-640	4	SCREW (M6-1.00 X 20MM, BUT SOC)	
8.	349-752	1	VALVE COVER	
9.	217-925	1	ROCKER SWITCH (ACTUATOR)	
10.	217-138	1	ICON (WHT) FAST	
11.	217-139	1	ICON (WHT) SLOW	
12.	217-156	1	DIFFUSION LENS (GREEN)	
13.	217-158	1	DIFFUSION LENS (WHITE)	
14.	217-228	1	ROCKER SW (DPDT) {ON}-OFF-{ON}	THROTTLE
15.	217-925	1	ROCKER SWITCH (ACTUATOR)	
16.	217-136	1	ICON (WHT) ON-START	
17.	217-137	1	ICON (WHT) OFF-STOP	
18.	217-156	1	DIFFUSION LENS (GREEN)	
19.	217-158	1	DIFFUSION LENS (WHITE)	
20.	217-918	1	ROCKER SW (DPDT) ON-ON	WORK LIGHTS

NOT SHOWN:

FOOTNOTES:

NOTE:

# HYDRAULIC CONTROL VALVE AUXILIARY

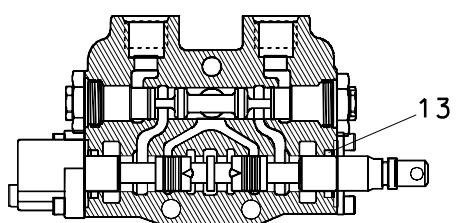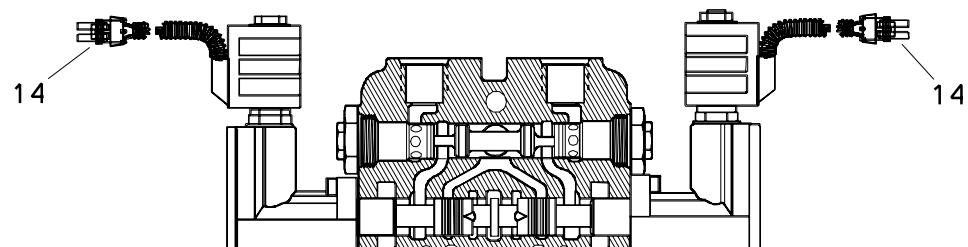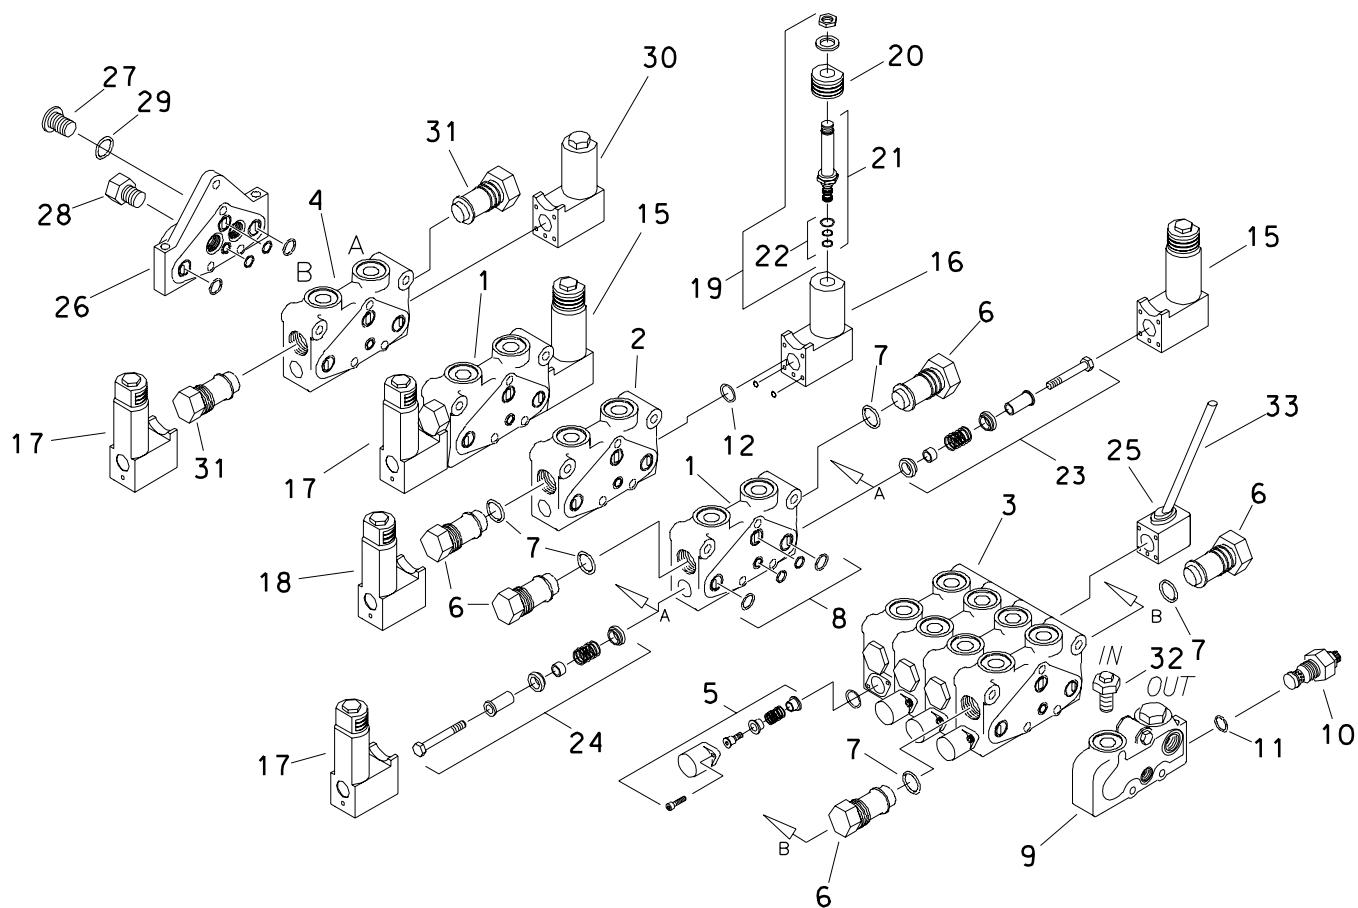

# HYDRAULIC CONTROL VALVE


## AUXILIARY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	153-215		HYD CONTROL VALVE 8 SPOOL	
1.	499-145	2	VALVE SECTION	- - - - -
2.	499-146	1	VALVE SECTION	- - - - -
3.	499-291	4	VALVE SECTION	- - - - -
4.	499-296	1	VALVE SECTION	- - - - -
5.	500-592	4	STANDARD SPOOL POSITIONER KIT	- - - - -
6.	499-029	14	LOCK OUT CARTRIDGE	- - - - -
7.	499-030	-	LOCK OUT CARTRIDGE SEAL KIT	- - - - -
8.	500-588	8	SECTIONAL O-RING REPAIR KIT	- - - - -
9.	500-296	1	INLET COVER	- - - - -
10.	500-956	1	WH RELIEF CARTRIDGE (3000 PSI)	- - - - -
11.	500-581	-	SEAL REPAIR KIT	- - - - -
12.	499-150	-	BONNET SEAL KIT	- - - - -
13.	500-587	-	SPOOL SEAL REPAIR KIT	- - - - -
14.	499-151	-	COIL CONNECTOR KIT	- - - - -
15.	499-156	2	SOLENOID ACTUATOR	- - - - -
16.	499-157	1	SOLENOID ACTUATOR	- - - - -
17.	499-158	2	SOLENOID ACTUATOR	- - - - -
18.	499-159	1	SOLENOID ACTUATOR	- - - - -
19.	217-949	-	SOLENOID CARTRIDGE KIT	- - - - -
20.	217-950	-	SOLENOID COIL KIT (W/CONN)	- - - - -
21.	499-152	-	CARTRIDGE TUBE KIT	- - - - -
22.	499-153	-	CARTRIDGE SEAL KIT	- - - - -
23.	499-154	3	SPRING	- - - - -
24.	499-155	3	SPRING	- - - - -
25.	159-319	-	RUBBER DUST BOOT	- - - - -
26.	499-293	1	OUTLET COVER	- - - - -
27.	500-302	1	PLUG (12S, SOC)	- - - - -
28.	499-160	-	POWER BEYOND SLEEVE KIT	- - - - -
29.	499-055	-	SLEEVE SEAL KIT	- - - - -
30.	499-294	1	SOLENOID ACTUATOR	- - - - -
31.	500-587	2	SPOOL SEAL REPAIR KIT	- - - - -
32.	499-295	1	PLUG	- - - - -
33.	499-292	4	ENCLOSED HANDLE	- - - - -

FOOTNOTES

# ROTATING CLAMP HYDRAULICS

ENDS WITH S/N: CMWJT100L90000001

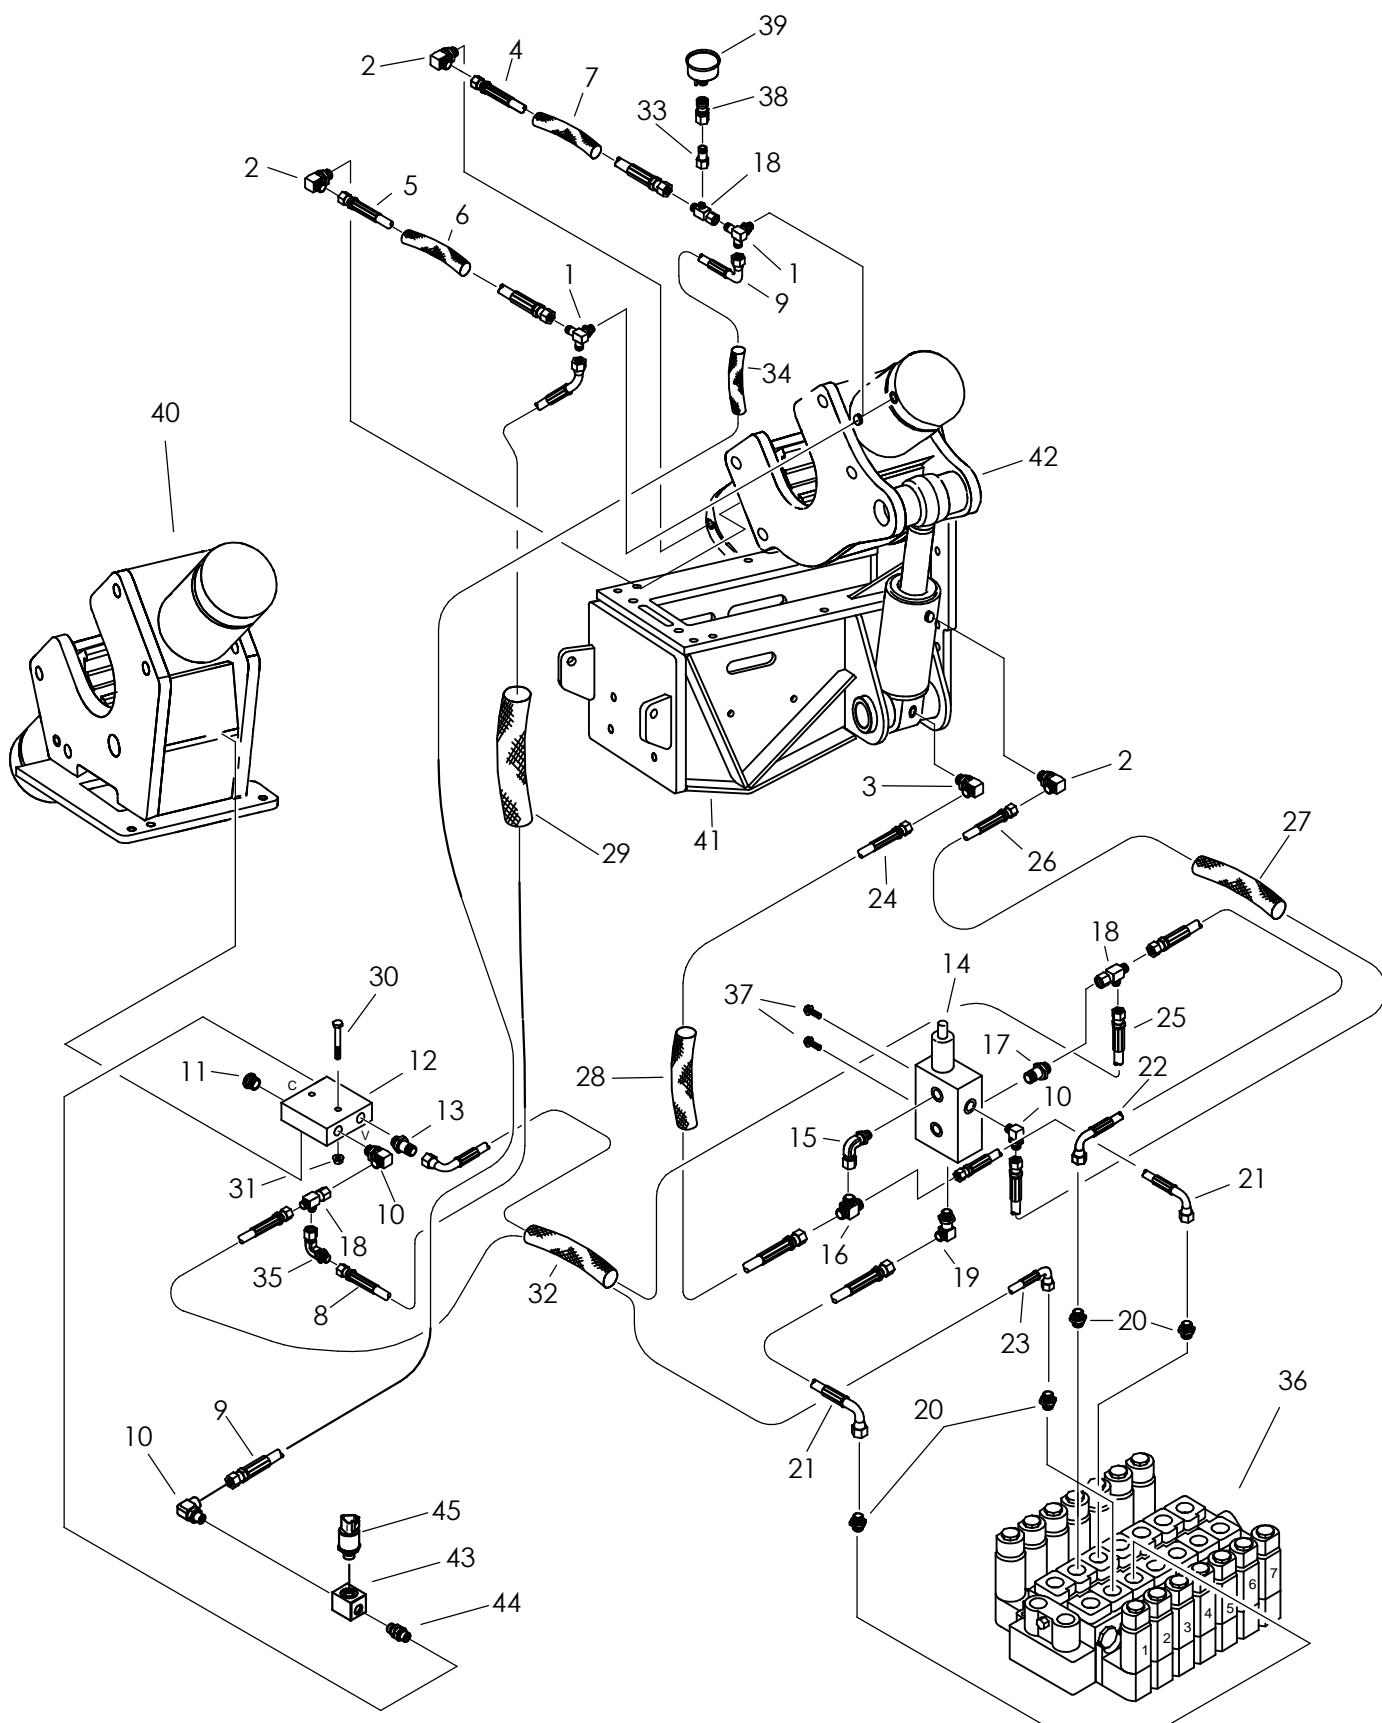

# ROTATING CLAMP HYDRAULICS

ENDS WITH S/N: CMWJT100L90000001

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-051	2	BRANCH TEE (08S-06O-06O)	
2.	154-227	3	CONNECTOR (06O-08S90)	
3.	154-225	1	CONNECTOR (06O-08S45)	
4.	515-637	1	HOSE (06O FX-38"-4000)	
5.	515-638	1	HOSE (06O FX-26"-4000)	
6.	117-684	1	ABRASION SLEEVE (1" X 26")	
7.	117-718	1	ABRASION SLEEVE (1" X 36")	
8.	515-635	1	HOSE (06O FX45-22"-4000)	
9.	515-636	1	HOSE (06O FX90S-28"-4000)	
10.	154-342	3	CONNECTOR (06S-06O90)	
11.	155-130	1	PLUG (06S)	
12.	155-623	1	DOUBLE LOCKOUT VALVE	
13.	154-221	1	CONNECTOR (06S-06O)	
14.	159-279	1	SEQUENCE VALVE	
15.	154-460	1	CONNECTOR (06S-06SF90)	
16.	154-346	1	BRANCH TEE (06S-06O-06O)	
17.	158-813	1	FLOW CHECK VALVE (06S-06O)	
18.	154-344	3	UN RUN TEE (06O FX-06O-06O)	
19.	149-039	1	CONNECTOR (04N-06O90)	
20.	154-369	4	CONNECTOR (06O-10S)	
21.	515-632	2	HOSE (06O FX90-40"-4000)	
22.	515-630	1	HOSE (06O FX90-33"-4000)	
23.	515-629	1	HOSE (06O FX90-75"-4000)	
24.	515-634	1	HOSE (06O FX-20"-4000)	
25.	515-631	1	HOSE (06O FX90-47"-4000)	
26.	515-627	1	HOSE (06O FX-13"-4000)	
27.	117-671	1	ABRASION SLEEVE (1" X 12")	
28.	117-672	1	ABRASION SLEEVE (1.00" X 20")	
29.	117-611	1	ABRASION SLEEVE (1.75" X 24")	
30.	502-651	2	SCREW (M6-1.00 X 35MM)	
31.	106-385	2	FLG LOCKNUT (M6-1.00)	
32.	115-737	1	ABRASION SLEEVE (1.59" X 40")	
33.	159-157	1	QDC ADAPTER (02-06OF)	
34.	117-409	1	ABRASION SLEEVE (1.00" X 10")	
35.	154-228	1	UNION (06O-06O FX90)	
36.	153-252	-	HYD CONTROL VALVE (7-SPOOL)	
37.	105-826	2	FLG LOCK BOLT (3/8-NC X 1")	
38.	159-146	1	QDC BODY (02-04NF)	
39.	215-116	1	PRESSURE GAUGE (5000 PSI)	
40.	370-276	-	STATIONARY CLAMP	
41.	300-5342	-	FRONT FRAME	
42.	370-275	-	ROTATION CLAMP	
43.	150-1206	1	TEE (06SF-06SF-06SF)	
44.	155-153	1	CONNECTOR (06S-06S)	
45.	215-1489	1	PRESSURE SWITCH (2850 PSI)	

NOT SHOWN:


FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# ROTATING CLAMP HYDRAULICS

BEGINS WITH S/N: CMWJT100L90000002

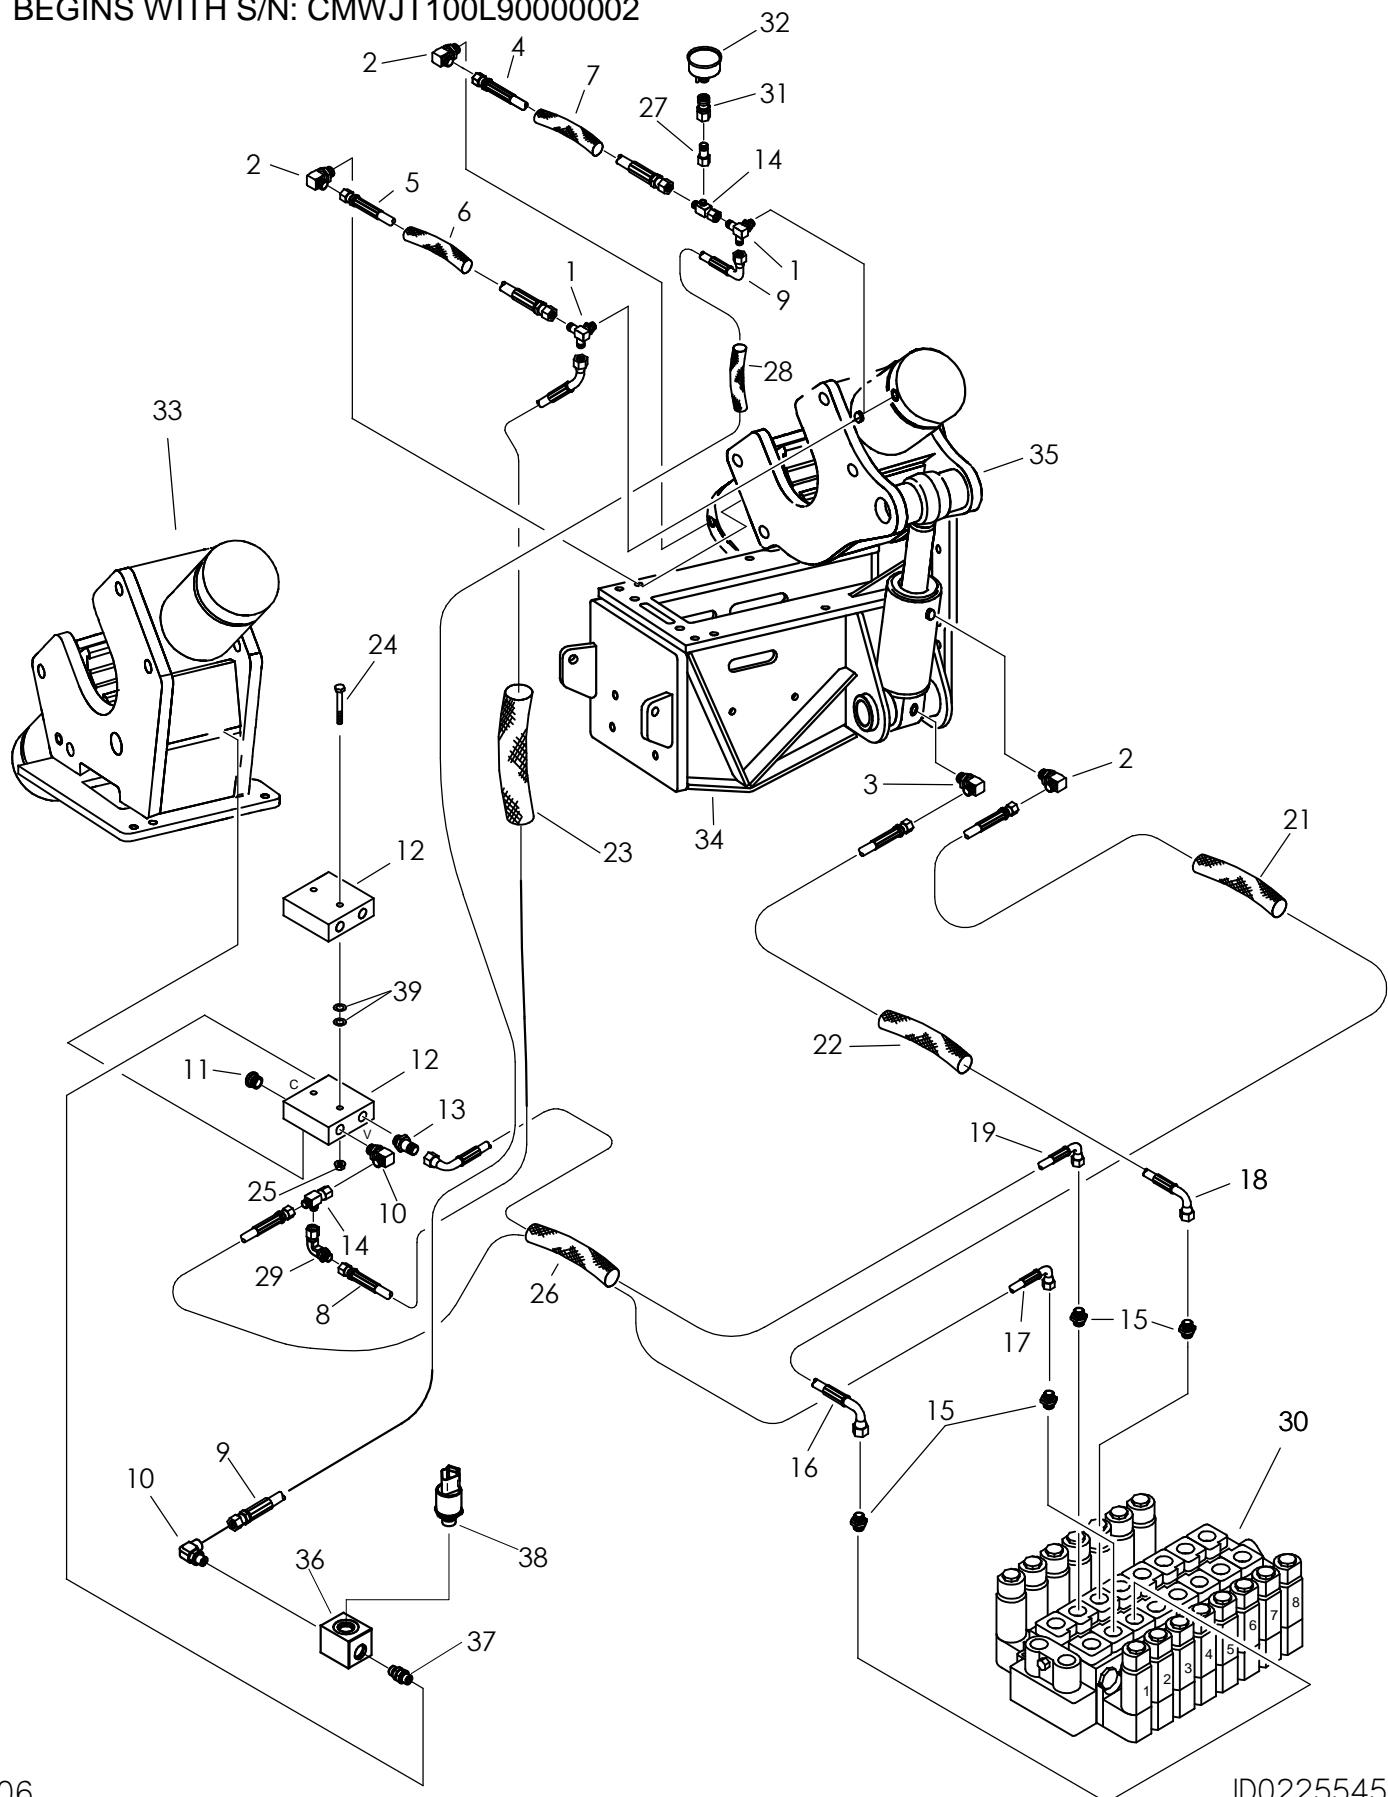

# ROTATING CLAMP HYDRAULICS

BEGINS WITH S/N: CMWJT100L90000002

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-051	2	BRANCH TEE (08S-06O-06O)	
2.	154-227	3	CONNECTOR (06O-08S90)	
3.	154-225	1	CONNECTOR (06O-08S45)	
4.	515-637	1	HOSE (06OFX-38"-4000)	
5.	515-638	1	HOSE (06OFX-26"-4000)	
6.	117-684	1	ABRASION SLEEVE (1" X 26")	
7.	117-718	1	ABRASION SLEEVE (1" X 36")	
8.	515-635	1	HOSE (06OFX45-22"-4000)	
9.	515-636	1	HOSE (06OFX90S-28"-4000)	
10.	154-342	3	CONNECTOR (06S-06O90)	
11.	155-130	1	PLUG (06S)	
12.	155-623	2	DOUBLE LOCKOUT VALVE	
13.	154-221	1	CONNECTOR (06S-06O)	
14.	154-344	2	UN RUN TEE (06OFX-06O-06O)	
15.	154-369	4	CONNECTOR (06O-10S)	
16.	150-2820	1	HOSE (06OFX90M-56"-4000)	
17.	515-629	1	HOSE (06OFX90-75"-4000)	
18.	150-2832	1	HOSE (06OFXM-62"-4000)	
19.	150-2833	1	HOSE (06OFX90M-72"-4000)	
20.	515-627	1	HOSE (06OFX-13"-4000)	
21.	117-695	1	ABRASION SLEEVE (1" X 56")	
22.	118-062	1	ABRASION SLEEVE (1.00" X 62")	
23.	117-611	1	ABRASION SLEEVE (1.75" X 24")	
24.	107-743	2	SCREW (1/4 NC X 2.75", GD5)	
25.	105-832	2	FLG LOCKNUT (1/4 - NC)	
26.	117-761	1	ABRASION SLEEVE (1.59" X 70")	
27.	159-157	1	QDC ADAPTER (02-06OF)	
28.	117-409	1	ABRASION SLEEVE (1.00" X 10")	
29.	154-228	1	UNION (06O-06OFX90)	
30.	150-2731	-	HYD CONTROL VALVE (8-SPOOL)	
31.	159-146	1	QDC BODY (02-04NF)	
32.	215-116	1	PRESSURE GAUGE (5000 PSI)	
33.	370-276	-	STATIONARY CLAMP	
34.	300-5342	-	FRONT FRAME	
35.	370-275	-	ROTATION CLAMP	
36.	150-1206	1	TEE (06SF-06SF-06SF)	
37.	155-153	1	CONNECTOR (06S-06S)	
38.	215-1489	1	PRESSURE SWITCH	
39.	105-095	4	WASHER (1/4")	

NOT SHOWN:


FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# STATIONARY CLAMP HYDRAULICS

ENDS WITH CMW S/N: CMWJT100L90000001

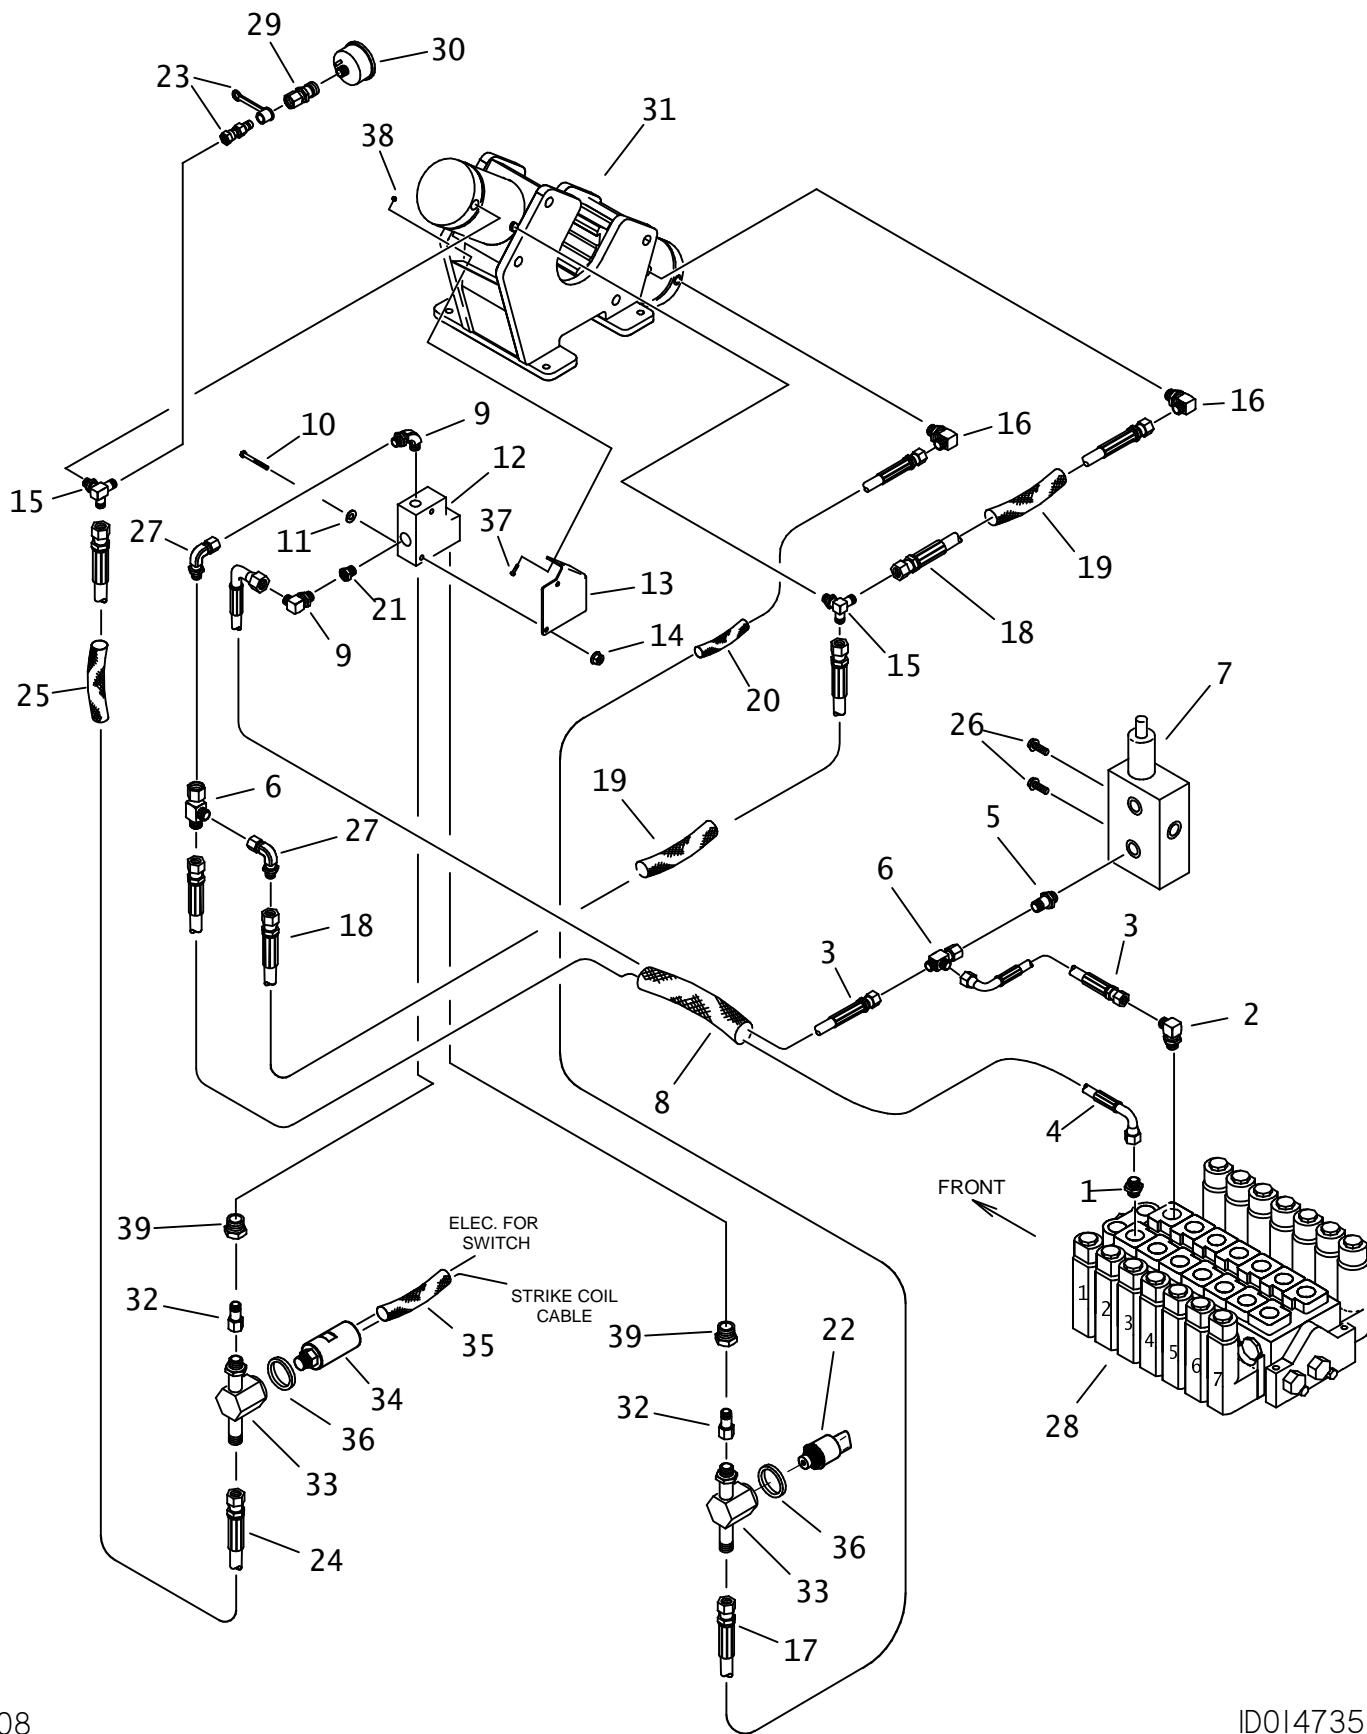

# STATIONARY CLAMP HYDRAULICS

ENDS WITH CMW S/N: CMWJT100L90000001

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-369	1	CONNECTOR (060-10S)	
2.	154-421	1	CONNECTOR (060-10S90)	
3.	515-633	2	HOSE (060FX90-38"-4000)	
4.	515-629	1	HOSE (060FX90-75"-4000)	
5.	158-813	1	FLOW CHECK VALVE (06S-060)	
6.	154-344	2	UN RUN TEE (060FX-060-060)	
7.	159-279	-	SEQUENCE VALVE	
8.	115-737	1	ABRASION SLEEVE (1.59" x 40")	
9.	154-342	2	CONNECTOR (06S-06090)	
10.	106-332	2	SCREW (M10-1.50 x 70MM)	
11.	106-390	2	WASHER (M10)	
12.	149-791	1	HYDRAULIC CONTROL VALVE	USE SERVICE PARTS: 500-2041 SEAL KIT & 500-2042 SEAL
13.	313-946	1	MOUNT BRACKET	
14.	105-894	2	LOCKNUT (M10-1.50, PRV TRQ, 10.9)	
15.	514-051	2	BRANCH TEE (08S-060-060)	
16.	154-227	2	CONNECTOR (060-08S90)	
17.	515-637	1	HOSE (060FX-38"-4000)	
18.	515-638	2	HOSE (060FX-26"-4000)	
19.	117-684	2	ABRASION SLEEVE (1" x 26")	
20.	117-718	1	ABRASION SLEEVE (1" x 36")	
21.	155-171	1	REDUCER (10S-06SF)	
22.	215-1489	1	PRESSURE SWITCH (2850PSI)	
23.	159-157	1	QDC ADAPTER (02-060F)	
	159-148		DUST CAP (1/8")	
24.	154-755	1	HOSE (060FX-34"-3000)	
25.	117-412	1	ABRASION SLEEVE (1.00" x 34")	
26.	105-826	2	FLG LOCK BOLT (3/8-NC x 1")	
27.	154-228	2	UNION (060-060FX90)	
28.	150-2731	1	HYD CONTROL VALVE (8-SECTION)	BEGINS WITH S/N
	153-252	1	HYD CONTROL VALVE (7-SPOOL)	ENDS WITH S/N
29.	159-146	1	QDC BODY (02-04NF)	
30.	215-116	1	PRESSURE GAUGE (5000PSI)	
31.	370-276	-	STATIONARY CLAMP	
32.	155-254	2	REDUCER (06S-04SF)	
33.	149-843	2	TEE (04S-06SF-060)	
34.	215-1204	1	PRESSURE SWITCH (1850PSI)	
35.	117-679	1	ABRASION SLEEVE (1.59" x 32")	
36.	155-705	1	O-RING (906 D90)	
37.	106-231	2	SCREW (M6-1.00 x 16MM)	
38.	106-385	2	FLG LOCKNUT (M6-1.00)	
39.	155-163	2	REDUCER (08S-06SF)	

NOT SHOWN:


FOOTNOTES:

## NOTE:

REFER TO O-RING CHART (800-30II) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# STATIONARY CLAMP HYDRAULICS

BEGINS WITH CMW S/N: CMWJT100L90000002

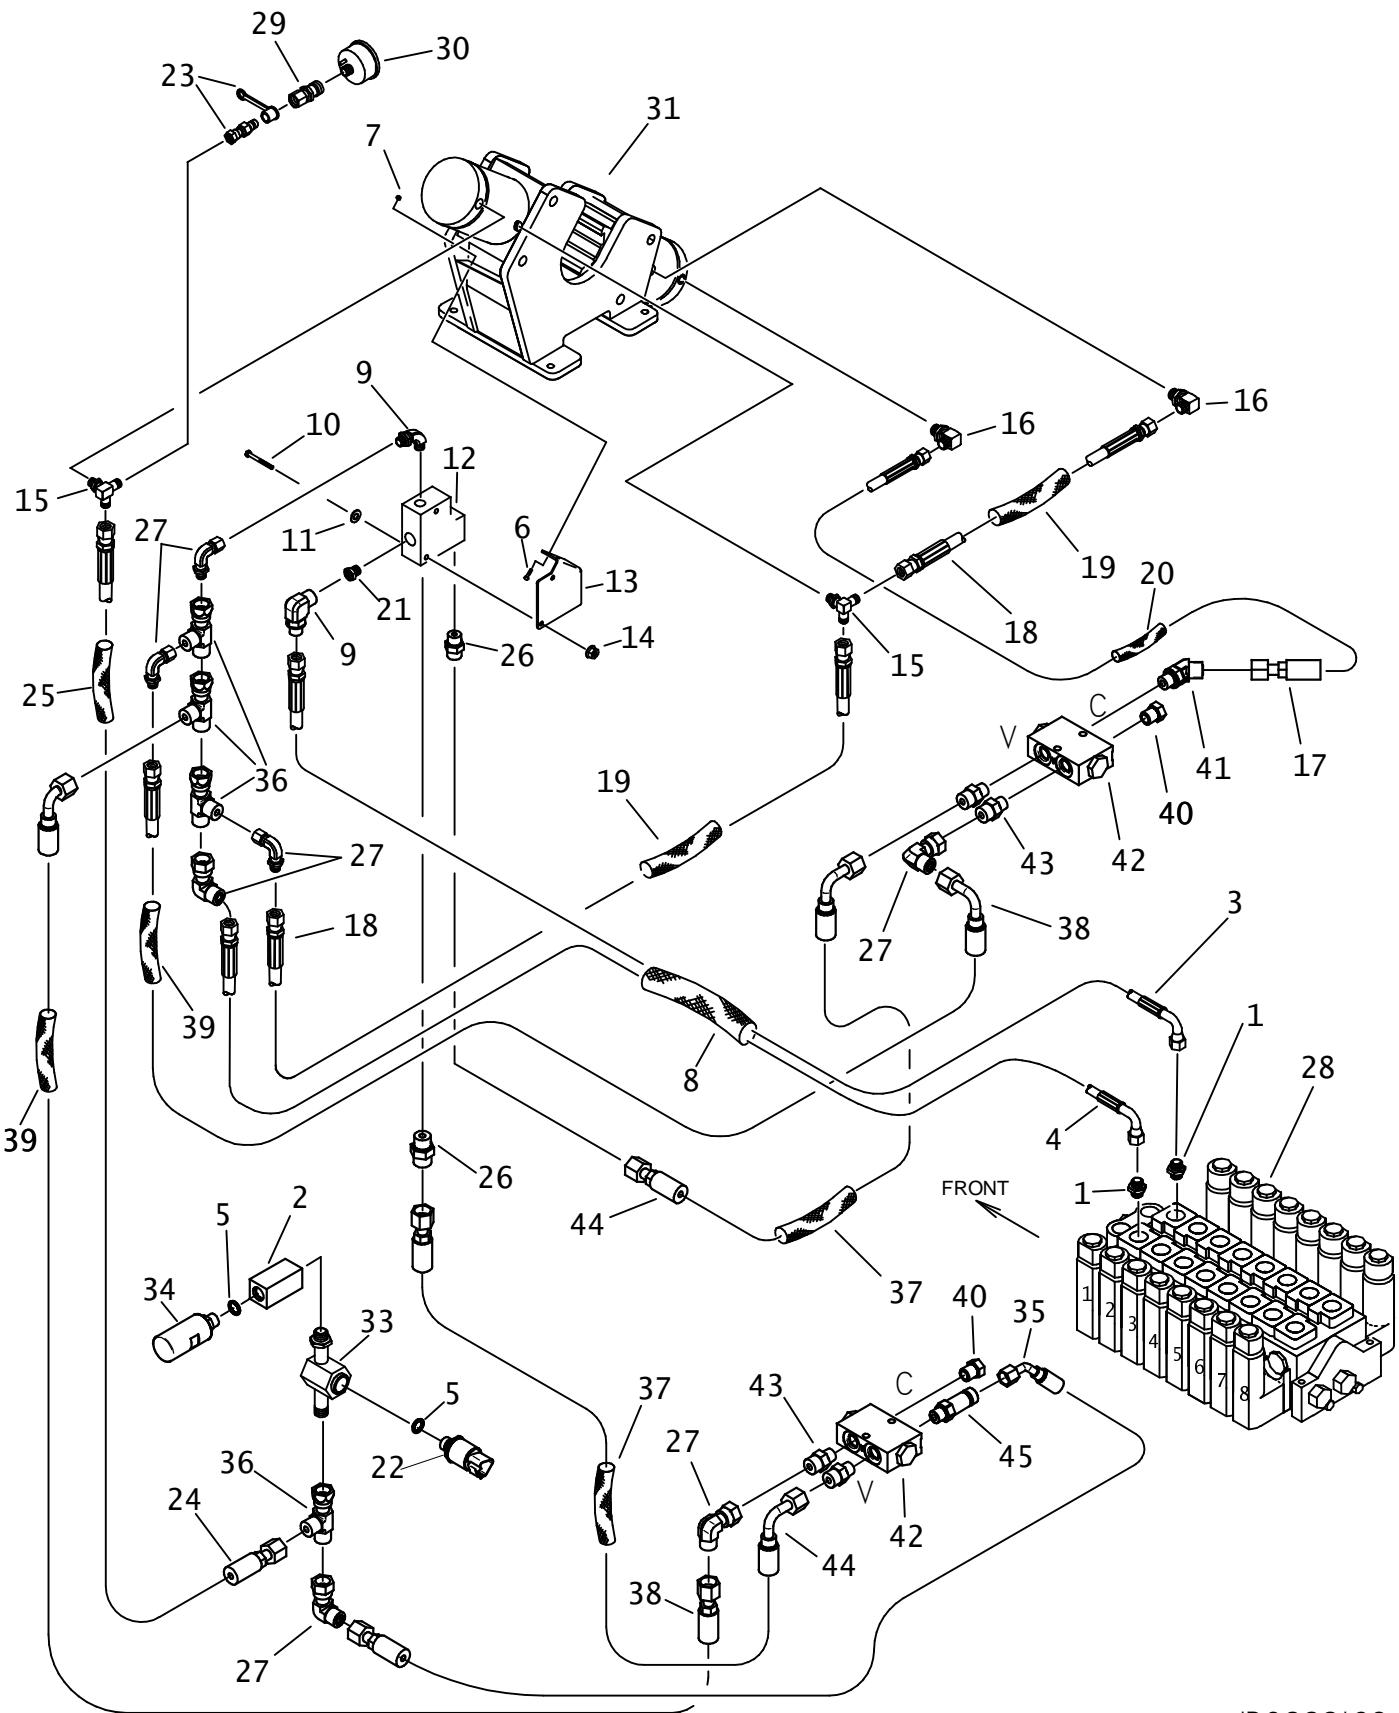

# STATIONARY CLAMP HYDRAULICS

BEGINS WITH CMW S/N: CMWJT100L90000002


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-369	2	CONNECTOR (060-10S)	
2.	150-960	1	HYDRAULIC FITTING	
3.	149-161	1	HOSE (060FX90-69"-4000)	
4.	515-629	1	HOSE (060FX90-75"-4000)	
5.	155-705	1	O-RING (906 D90)	
6.	106-093	2	SCREW (M6-1.00 X 45MM)	
7.	106-385	2	FLG LOCKNUT (M6-1.00)	
8.	116-634	1	ABRASION SLEEVE (1.59" x 65")	
9.	154-342	2	CONNECTOR (06S-06090)	
10.	106-332	2	SCREW (M10-1.50 X 70MM)	
11.	106-390	2	WASHER (M10)	
12.	149-791	1	HYDRAULIC CONTROL VALVE	
13.	313-946	1	MOUNT BRACKET	
14.	105-894	2	LOCKNUT (M10-1.50, PRV TRQ, 10.9)	
15.	514-051	2	BRANCH TEE (08S-060-060)	
16.	154-227	2	CONNECTOR (060-08S90)	
17.	515-637	1	HOSE (060FX-38"-4000)	
18.	515-638	2	HOSE (060FX-26"-4000)	
19.	117-684	2	ABRASION SLEEVE (1" x 26")	
20.	117-718	1	ABRASION SLEEVE (1" x 36")	
21.	159-947	1	REDUCER (10S-06SF)	
22.	215-1489	1	PRESSURE SWITCH	
23.	159-157	1	QDC ADAPTER (02-060F)	
	159-148	1	DUST CAP (1/8")	
24.	154-755	1	HOSE (060FX-34"-3000)	
25.	117-412	1	ABRASION SLEEVE (1.00" x 34")	
26.	154-222	2	CONNECTOR (060-08S)	
27.	154-228	4	UNION (060-060FX90)	
28.	153-252	-	HYD CONTROL VALVE (7-SPOOL)	
29.	159-146	1	QDC BODY (02-04NF)	
30.	215-116	1	PRESSURE GAUGE (5000PSI)	
31.	370-276	-	STATIONARY CLAMP	
32.	155-254	1	REDUCER (06S-04SF)	
33.	149-843	1	TEE (04S-06SF-060)	
34.	215-1204	1	PRESSURE SWITCH (1850PSI)	
35.	150-3054	1	HOSE (060FX45-14"-3000)	
36.	154-344	4	UN RUN TEE (060FX060-060)	
37.	117-280	2	ABRASION SLEEVE (1.00" x 25")	
38.	153-768	2	HOSE (060FX90S-18"-3000)	
39.	117-672	2	ABRASION SLEEVE (1.00" x 20")	
40.	155-130	2	PLUG (06S)	
41.	154-224	1	CONNECTOR (06S-06045)	
42.	155-623	2	DOUBLE LOCKOUT VALVE	
43.	154-221	4	CONNECTOR (06S-060)	
44.	157-950	2	HOSE (060FX90M-23"-3000)	
45.	156-174	1	CONNECTOR (06S-060 LG)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## LOAD SENSE VALVE (AT)

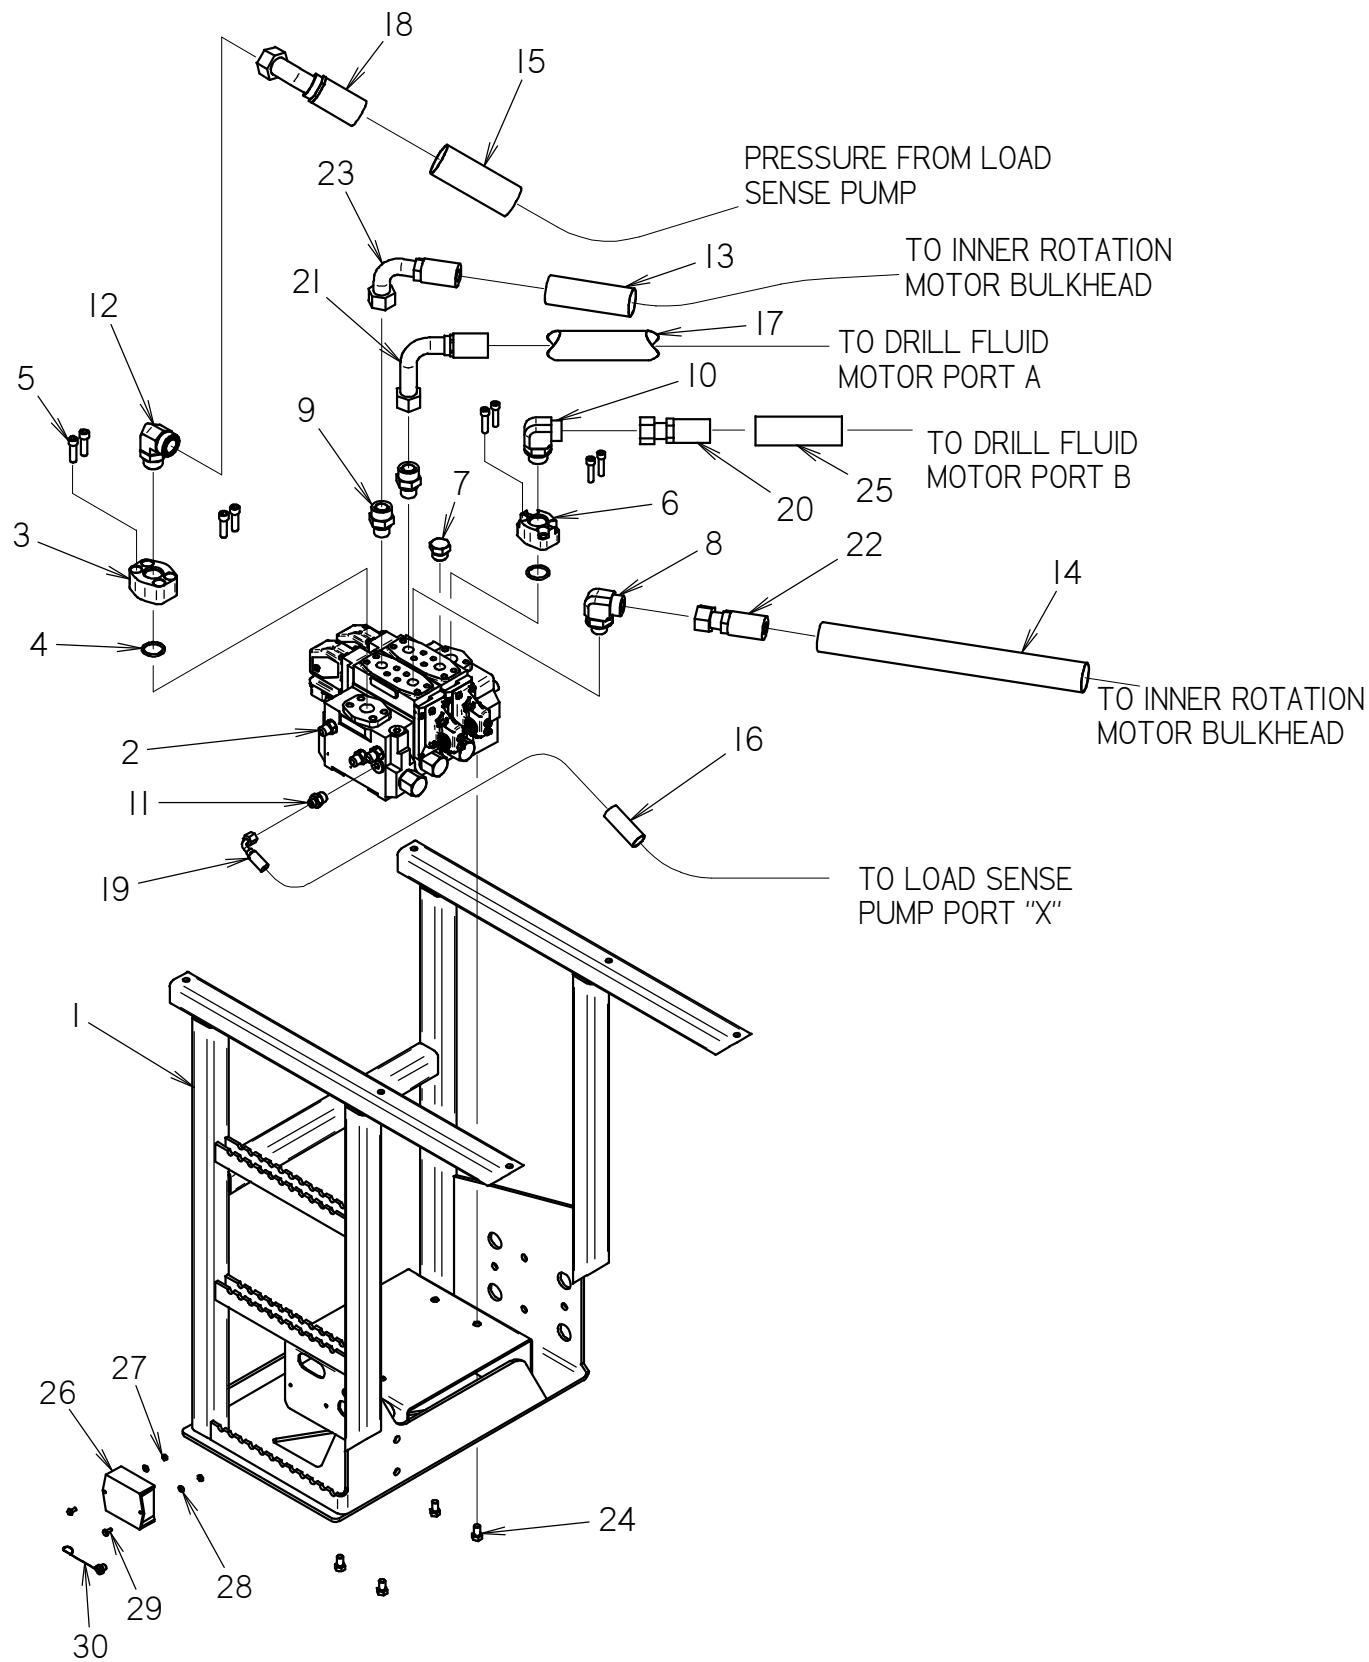

# LOAD SENSE VALVE (AT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	314-779	1	PLATFORM FRAME	
2	150-2209	1	HYDRAULIC VALVE	SEAL KIT 500-I799
3	514-245	1	HEAD FLANGE (I6HFL-I6SF)	
4	I57-029	1	O-RING (219 D90)	
5	I05-918	4	BOLT (7/16-NC X 1-1/2", SOC)	
6	150-2786	1	ANCHOR FLANGE (I6HF-I6SF)	
7	500-302	1	PLUG (I-12 S)	
8	I54-377	1	CONNECTOR (I2S-I6090)	
9	I54-306	2	CONNECTOR (I2S-I60)	
10	I54-287	1	CONNECTOR (I6S-I6090)	
11	I54-375	1	CONNECTOR (O40-08S, ORF)	
12	I56-895	1	CONNECTOR (I6S-20090)	
13	I15-715	1	ABRASION SLEEVE (2.07" X 42")	
14	I17-455	1	ABRASION SLEEVE (2.07" X 38")	
15	I17-568	1	ABRASION SLEEVE (2.38" X 66")	
16	I17-I70	1	ABRASION SLEEVE (1.00" X 197")	
17	I15-680	1	ABRASION SLEEVE (2.07" X 21")	
18	150-2813	1	HOSE (200FX45-200FX45 63"-4000)	
19	150-2829	1	HOSE (O40FX90S-I89"-4000)	
20	150-2831	1	HOSE (I60FX-I7"-3000)	
21	150-2830	1	HOSE (I60FX-I6FLH90L-20"-4000)	
22	150-2827	1	HOSE (I60FX-38"-4000)	
23	150-2828	1	HOSE (I60FX90S-42"-4000)	
24	I05-896	4	BOLT (7/16-NC X 3/4")	
25	I05-1447	1	ABRASION SLEEVE (2.07" X 16")	
26	220-II58	1	I2-PIN CONTROLLER	
27	I06-048	2	LOCKNUT (#10-24)	
28	I06-388	2	WASHER (M6)	
29	I05-214	2	FLG SCREW (#10-24 X .5")	
30	2II-078	1	CONNECTOR CAP (TURCK RS-CC)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## PIVOT FRONT LIFT HYDRAULICS

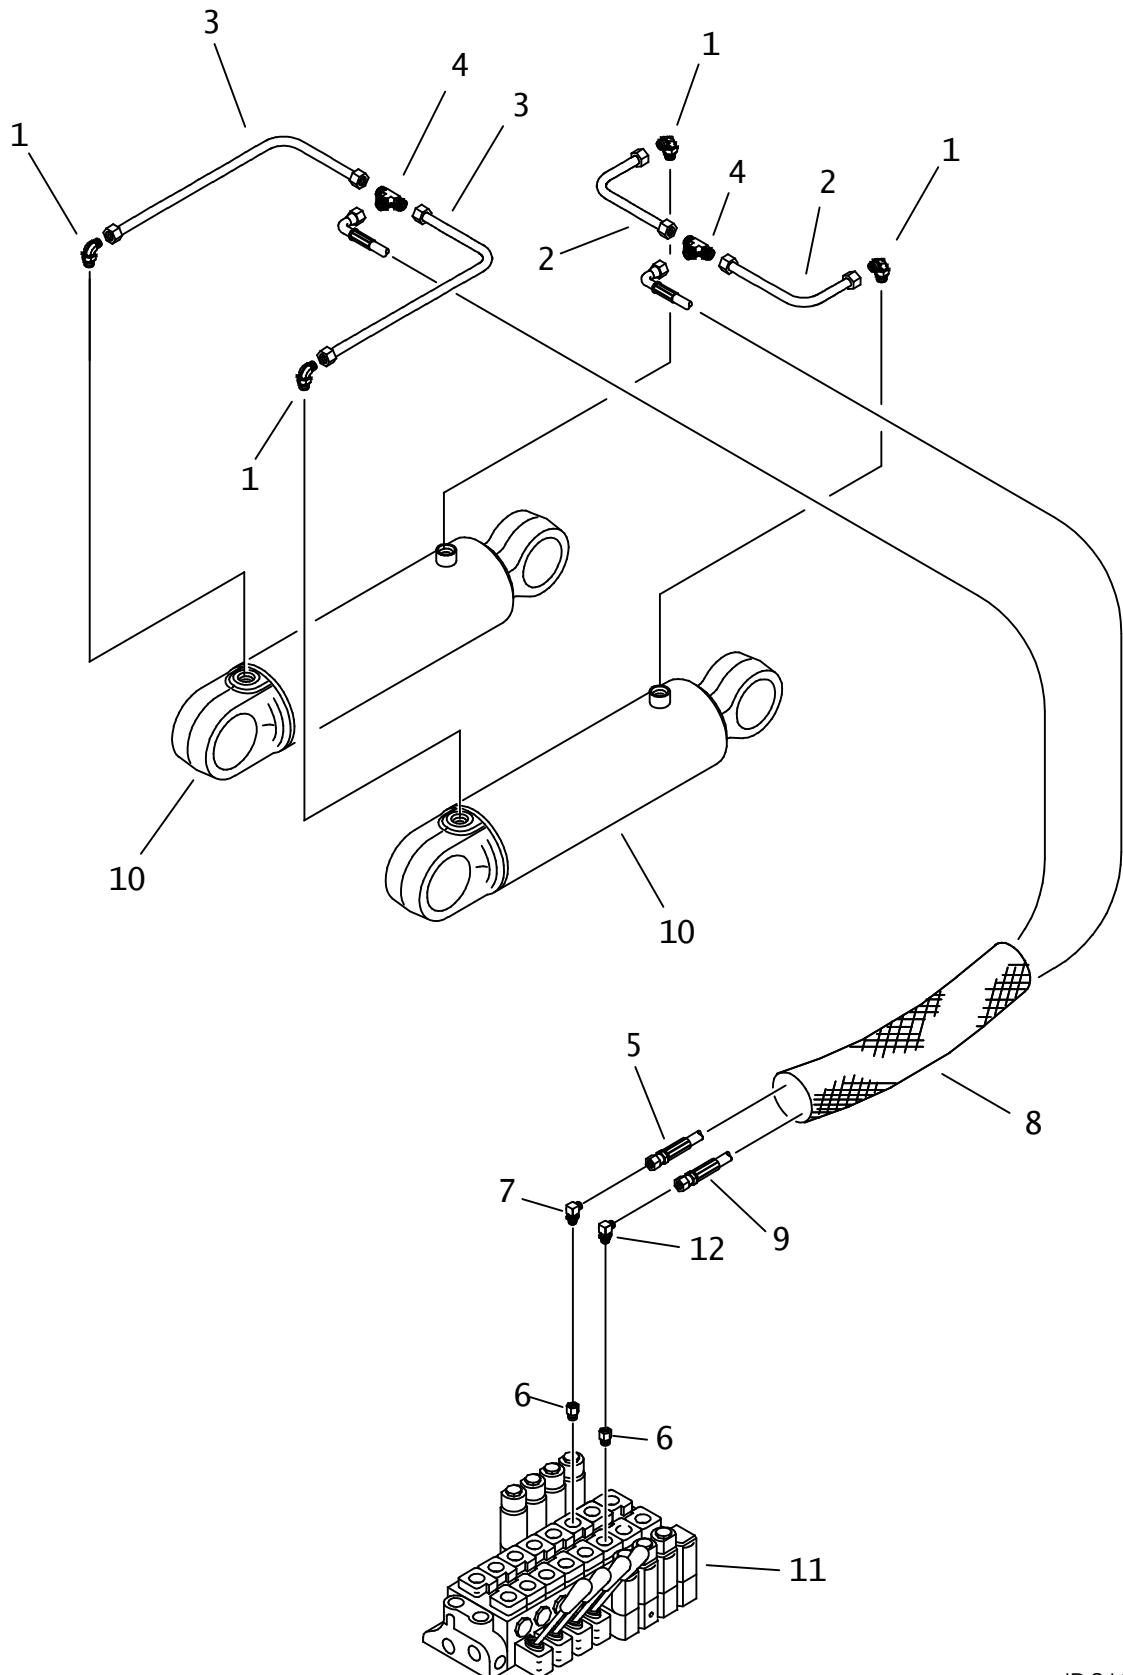

## PIVOT FRONT LINE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-227	4	CONNECTOR (060-08S90)	
2.	156-156	2	HYD LINE (-06)	
3.	156-157	2	HYD LINE (-06)	
4.	154-437	2	TEE (060-060-060)	
5.	153-121	1	HOSE (060FX90S-74"-3000)	
6.	155-171	2	REDUCER (10S-06SF)	
7.	514-436	1	CONNECTOR (06S-06090, ORF)	FOR "AT" APPLICATION, QUANTITY IS 2
8.	117-761	1	ABRASION SLEEVE (1.59" X 70")	
9.	153-122	1	HOSE (060FX90S-77"-3000)	
10.	151-047	-	CYL (3.5" X 2" X 12")	
11.	153-215	-	HYDRAULIC VALVE	BEFORE SN. CMWJT100JA0000015
	150-2730	-	HYDRAULIC VALVE	AFTER SN. CMWJT100CA0000016
12.	514-437	1	CONNECTOR (06S-06045, ORF)	JT ONLY, USE REF #7 FOR "AT"


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## PIVOT REAR LIFT HYDRAULICS (RACK &amp; PINION)

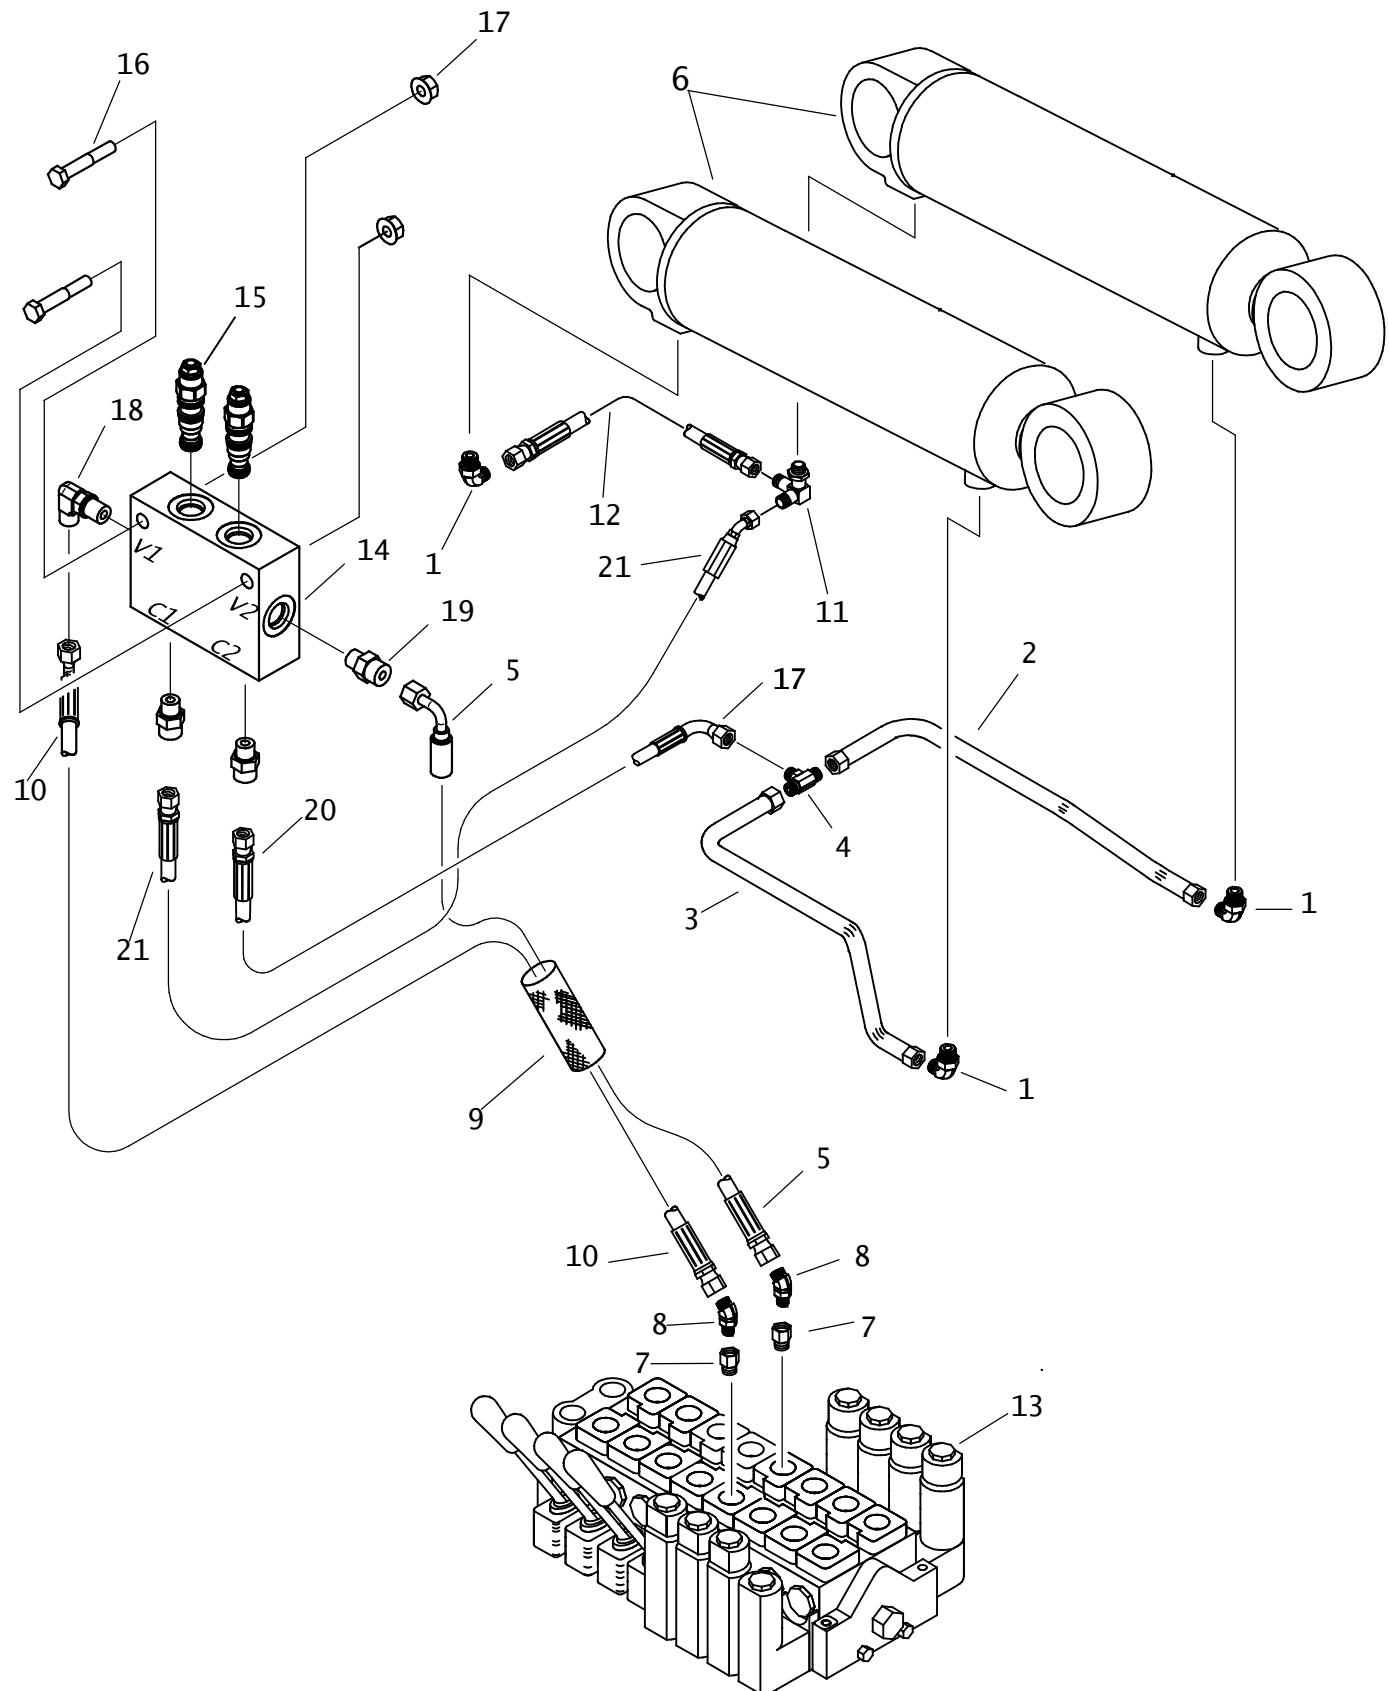

# PIVOT REAR LIFT HYDRAULICS (RACK & PINION)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-227	3	CONNECTOR (060-08590)	
2.	156-158	1	HYD LINE (060FX)	
3.	156-159	1	HYD LINE (-06)	
4.	154-437	1	TEE (060-060-060)	
5.	515-411	1	HOSE (060FX90-118"-3000)	
6.	151-047	-	CYL (3.5" X 2" X 12")	
7.	155-171	2	REDUCER (10S-06SF)	
8.	514-437	2	CONNECTOR (06S-06045,0RF)	
9.	117-674	1	ABRASION SLEEVE (1.59" X 122")	
10.	515-351	1	HOSE (060FX455-114"-3000)	
11.	514-051	1	BRANCH TEE (08S-060-060)	
12.	515-354	1	HOSE (060FX-10.5"-3000)	
13.	153-215	1	HYDRAULIC VALVE	BEFORE SN. CMWJT100JA0000015
	150-2730	1	HYDRAULIC VALVE	AFTER SN. CMWJT100CA0000016
14.	150-2722	1	COUNTER BALANCE VALVE	
15.	500-478	2	COUNTER BALANCE CARTRIDGE	
16.	106-329	2	SCREW (M8-1.25 X 50MM)	
17.	106-386	2	FLG LOCKNUT (M8-1.25)	
18.	154-342	1	CONNECTOR (06S-06090)	
19.	154-221	3	CONNECTOR (06S-060)	
20.	154-929	1	HOSE (060FX90-19"-3000)	
21.	515-538	1	HOSE (060FX90S-15"-3000)	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## LEFT STABILIZER HYDRAULICS

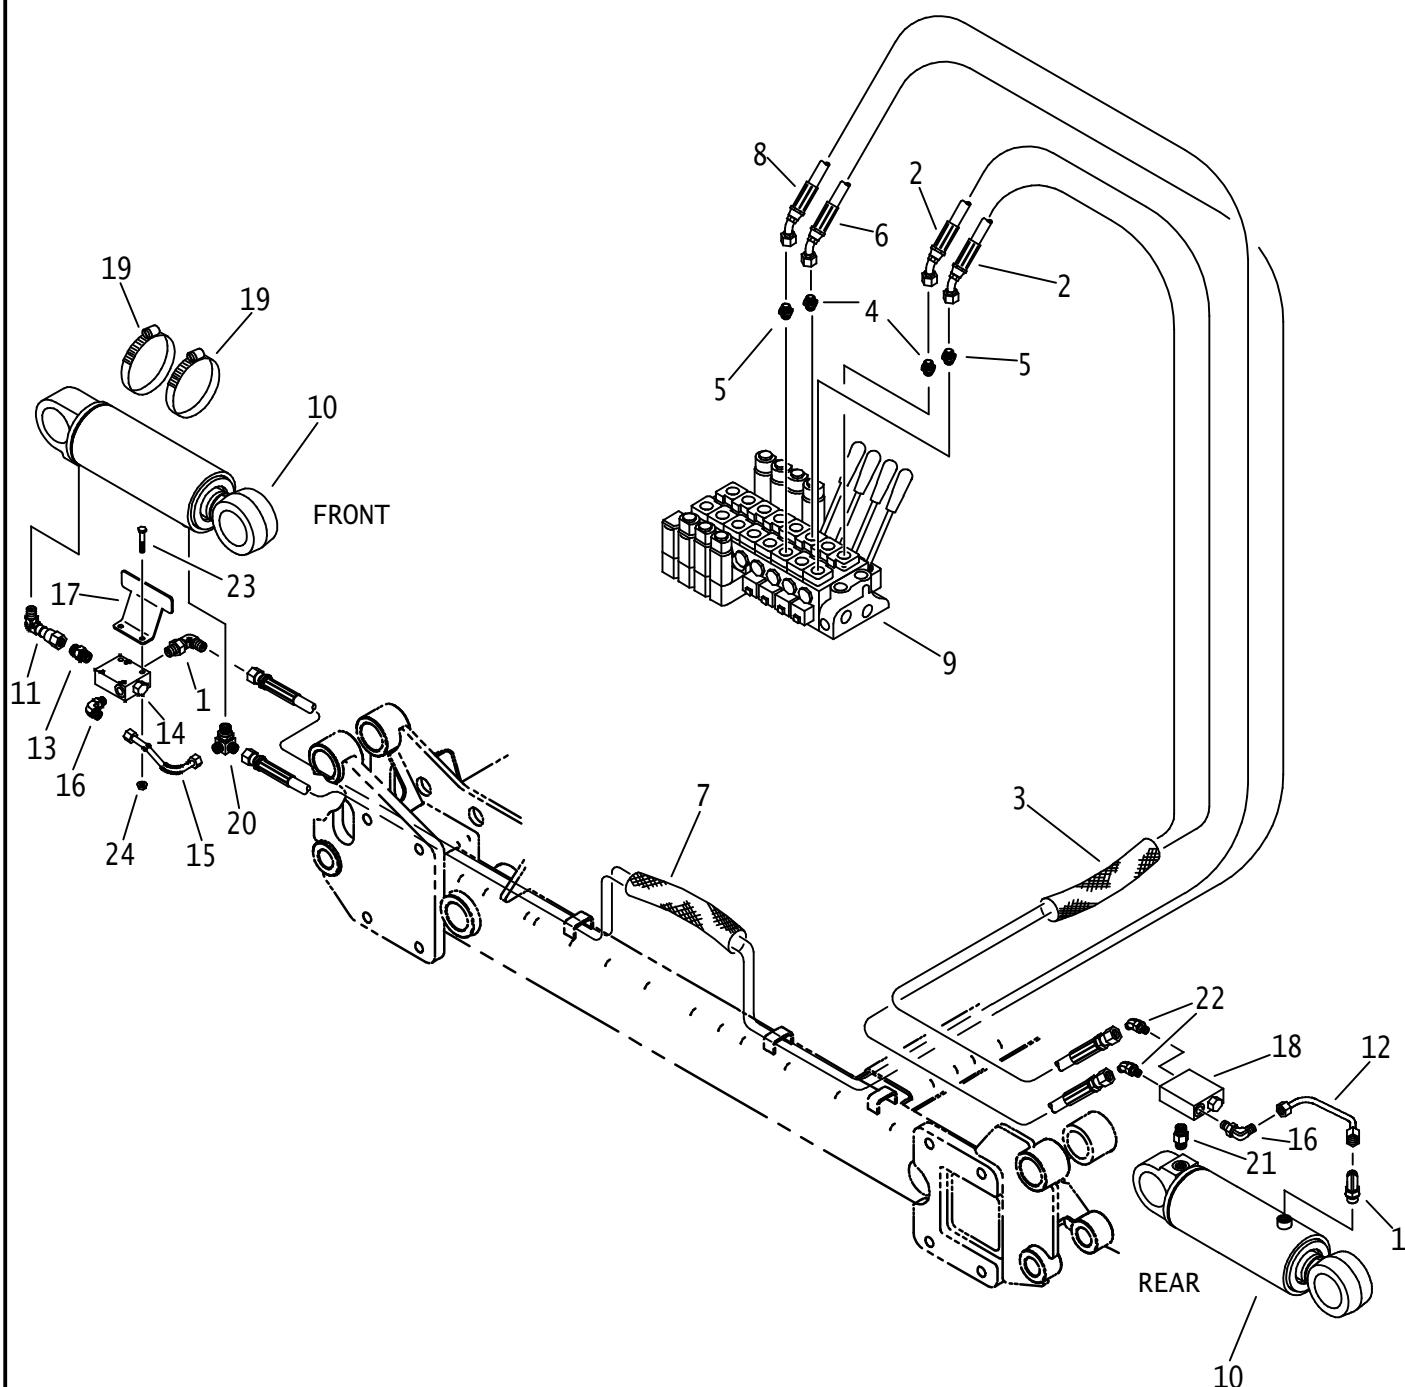

## LEFT STABILIZER HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-227	2	CONNECTOR (060-08S90)	
2.	515-410	2	HOSE (060FX45-118"-3000)	
3.	117-674	1	ABRASION SLEEVE (1.59" X 122")	
4.	154-369	2	CONNECTOR (060-10S)	
5.	514-352	2	CONNECTOR (060-10S, ORF)	
6.	515-559	1	HOSE (060FX45-153"-3000)	
7.	117-771	1	ABRASION SLEEVE (1.59" X 155")	
8.	515-558	1	HOSE (060FX45-165"-3000)	
9.	153-215	1	HYD CONTROL VALVE 8 SPOOL	BEFORE SN. CMWJT100JA0000015
	150-2730	1	HYD CONTROL VALVE 8 SPOOL	AFTER SN. CMWJT100CA0000016
10.	151-095	1	CYL (4" X 2.25" X 8")	
11.	154-418	1	UNION (08S-080FX90)	
12.	149-090	1	HYD LINE (-06)	
13.	154-233	1	CONNECTOR (08S-080)	
14.	159-487	1	CHECK VALVE	
15.	149-091	1	HYD LINE (-06)	
16.	154-342	2	CONNECTOR (06S-06090)	
17.	370-363	1	CLAMP BRACKET	
18.	159-482	1	CHECK VALVE	
19.	110-391	2	WORM CLAMP (4-3/4" TO 5-5/8")	
20.	514-051	1	BRANCH TEE (08S-060-060)	
21.	154-466	1	CONNECTOR (08S-08S)	
22.	154-224	2	CONNECTOR (06S-06045)	
23.	106-932	2	SCREW (M8-1.25 X 45MM)	
24.	106-386	2	FLG LOCKNUT (M8-1.25)	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## RIGHT STABILIZER HYDRAULICS

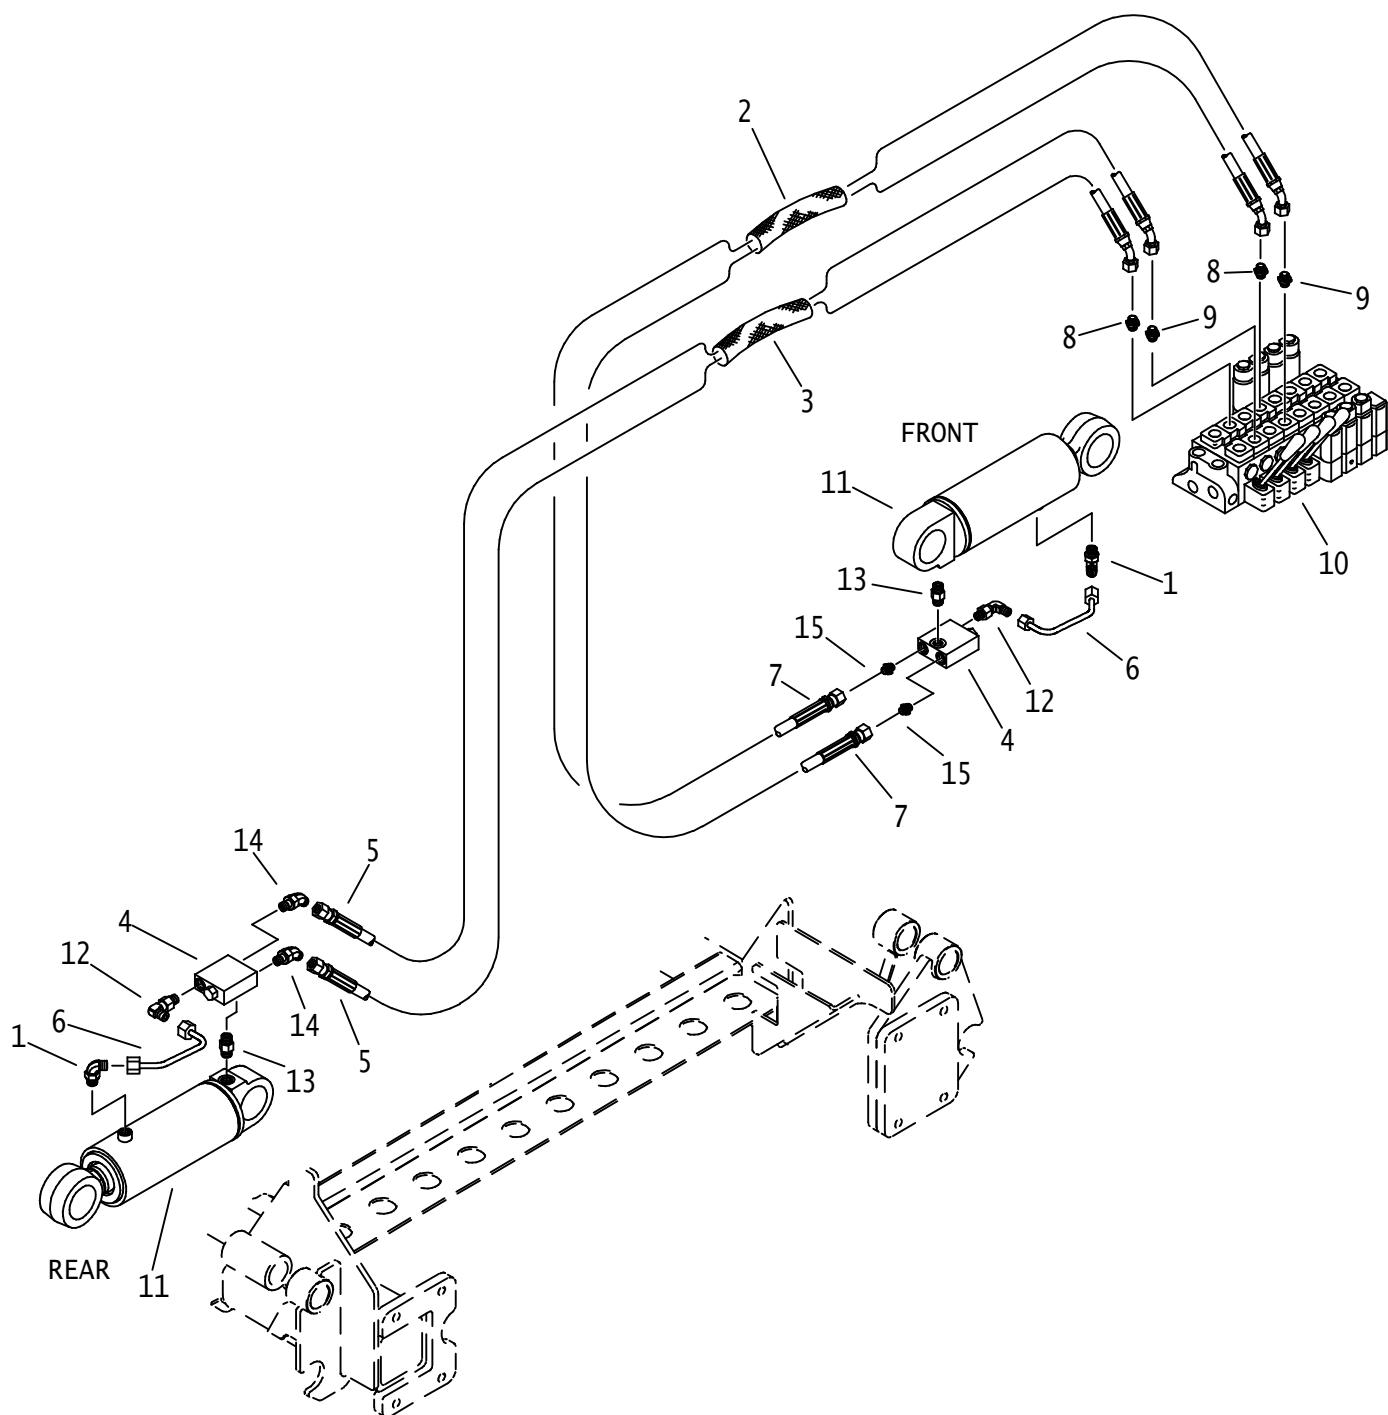

## RIGHT STABILIZER HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-227	2	CONNECTOR (060-08S90)	
2.	116-633	1	ABRASION SLEEVE (1.59" X 115")	
3.	115-938	1	ABRASION SLEEVE (1.59" X 66")	
4.	159-482	2	CHECK VALVE	
5.	154-969	2	HOSE (060FX45-58"-3000)	
6.	149-090	2	HYD LINE (-06)	
7.	515-560	2	HOSE (060FX45-106"-3000)	
8.	514-352	2	CONNECTOR (060-10S ORF)	
9.	154-369	2	CONNECTOR (060-10S)	
10.	153-215	1	HYD CONTROL VALVE 8 SPOOL	JT
	150-2730	1	HYD CONTROL VALVE 8 SPOOL	AT
11.	151-095	1	CYL (4" X 2.25 X 8")	
12.	154-342	2	CONNECTOR (06S-06090)	
13.	154-466	2	CONNECTOR (08S-08S)	
14.	154-224	2	CONNECTOR (06S-06045)	
15.	154-221	1	CONNECTOR (06S-060)	

NOT SHOWN:


FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# LEFT GROUND DRIVE HYDRAULICS

BEGINS WITH S/N 2W0856

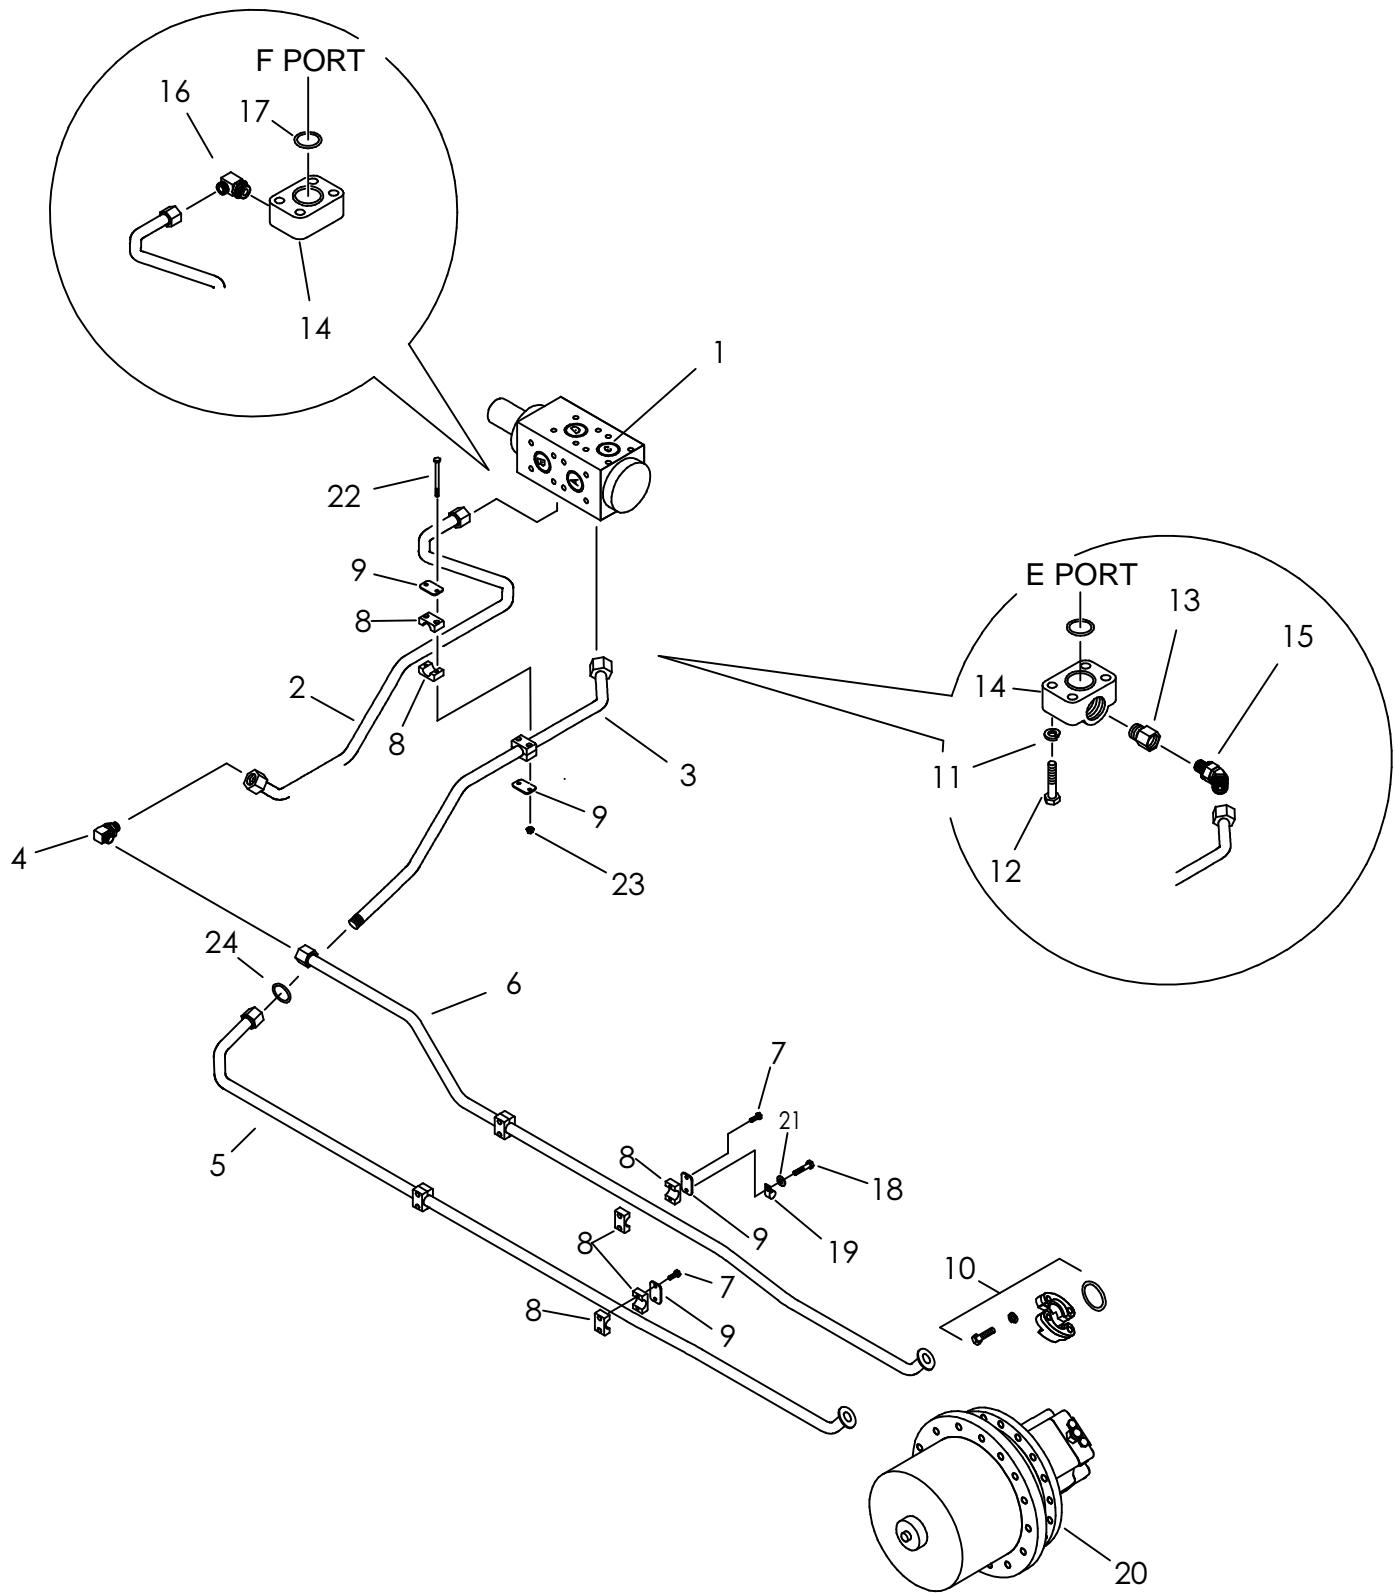

# LEFT GROUND DRIVE HYDRAULICS

BEGINS WITH S/N 2W0856

REF PART NO. NUMBER	QTY DESCRIPTION	REMARKS
1. 516-033	- SELECTOR VALVE DIVERTER	
2. 153-819	1 HYD LINE (-16)	
3. 153-817	1 HYD LINE (16O-16OFX)	
4. 514-009	1 CONNECTOR (16O-16O90)	
5. 153-818	1 HYD LINE (16OFX-16FL)	
6. 156-155	1 HYD LINE (16OFX-16FL)	
7. 105-818	4 BOLT (1/4-NC X 1-1/2")	
8. 110-573	6 BOLT-ON CLAMP (1", SOLD PER SET)	
9. 322-289	6 BACKUP (BOLT-ON)	
10. 159-077	2 SPLIT FLANGE (16SFL)	
157-029	2 O-RING (219 D90)	
105-156	8 BOLT (3/8-NC X 1-1/2")	TORQUE TO 45 FT/LBS
105-072	8 LOCK WASHER (3/8")	
11. 105-070	8 LOCK WASHER (1/2")	
12. 105-067	8 BOLT (1/2-NC X 2-3/4")	TORQUE TO 45 FT/LBS
13. 514-353	1 REDUCER (20S-16SF)	
14. 514-333	2 HEAD FLANGE (20FL-16SF)	
15. 154-388	1 CONNECTOR (16S-16O45)	
16. 514-196	1 CONNECTOR (16O-20S90)	
17. 157-078	2 O-RING (222 D90)	
18. 105-198	2 BOLT (1/4-NC X 1-3/4")	
19. 110-373	2 BOLT-ON CLAMP (13/16")	
20. 166-162	1 GEARBOX & GROUND DRIVE PLANETARY	
21. 105-095	2 WASHER (1/4")	
22. 105-870	2 BOLT (1/4-NC X 3-1/2")	
23. 105-832	2 FLG LOCKNUT (1/4-NC)	
24. 155-714	1 O-RING (021-D90)	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## RIGHT GROUND DRIVE HYDRAULICS

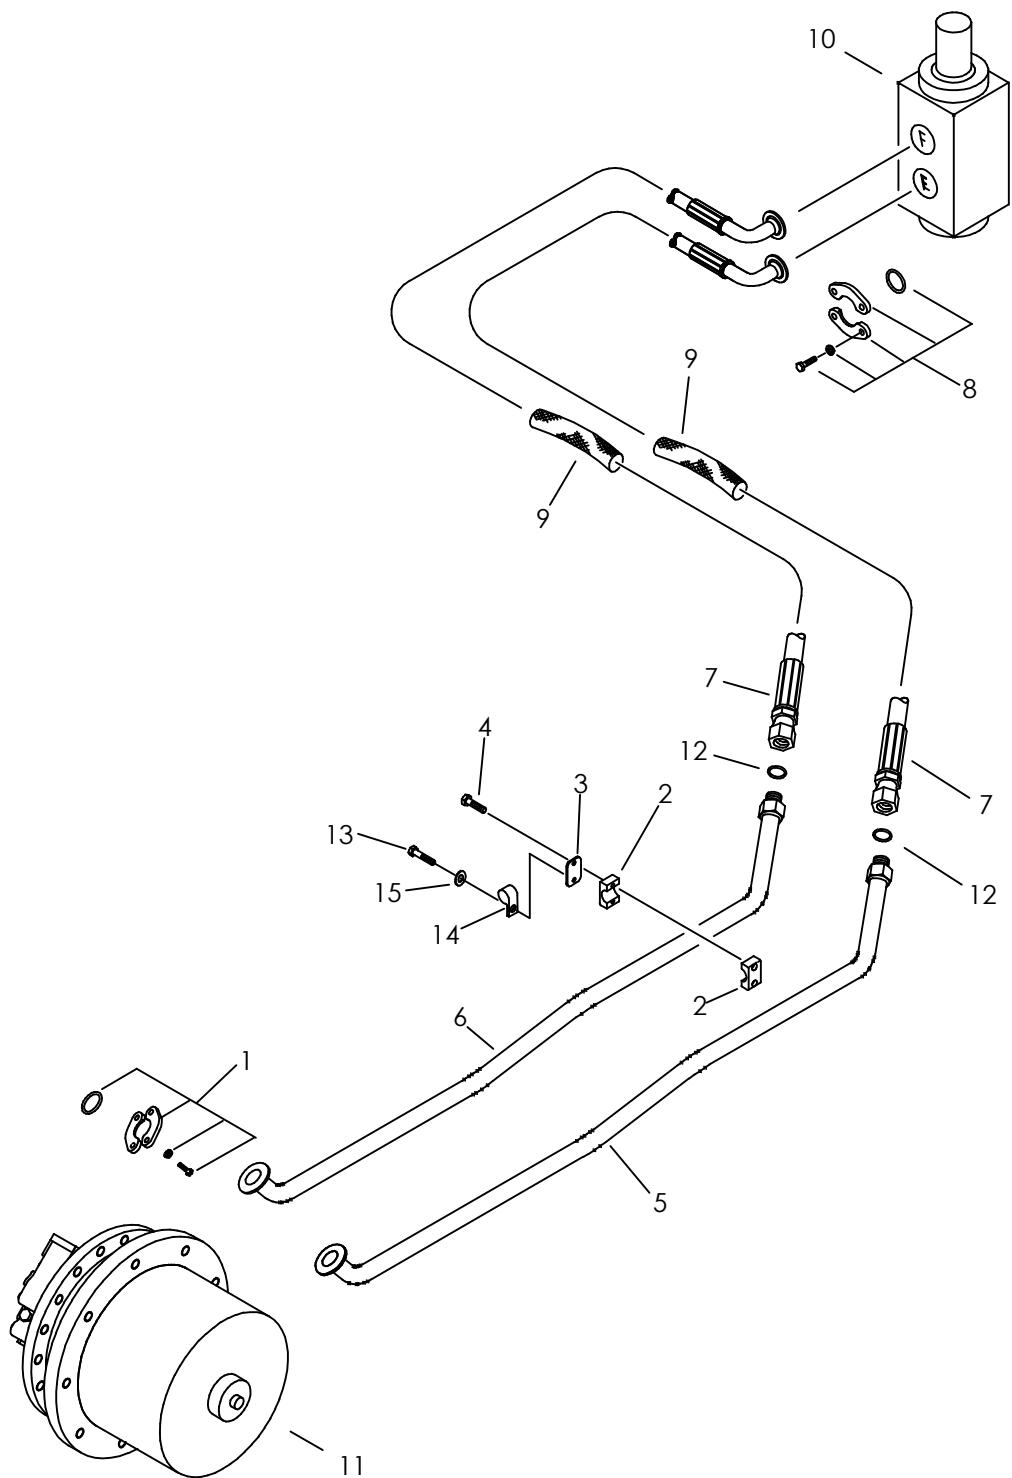

# RIGHT GROUND DRIVE HYDRAULICS

REF	PART		REMARKS
NO.	NUMBER	QTY	DESCRIPTION
1.	159-077	2	SPLIT FLANGE (16SFL)
	157-029	2	O-RING (219 D90)
	105-156	8	BOLT (3/8-NC X 1-1/2")
	105-072	8	LOCK WASHER (3/8")
2.	110-573	2	BOLT-ON CLAMP (1", SOLD PER SET)
3.	322-289	2	BACKUP (BOLT-ON)
4.	105-818	3	BOLT (1/4-NC X 1-1/2")
5.	156-152	1	HYD LINE (-16)
6.	156-153	1	HYD LINE (-16)
7.	515-575	2	HOSE (160FX-20FL90-62"-6000)
	157-998	2	HOSE (160FX-20FL90-68"-6000)
8.	159-436	2	SPLIT FLANGE (20SF, SET)
	157-078	1	O-RING (222 D90)
	105-070	4	LOCK WASHER (1/2")
	105-066	4	BOLT (1/2-NC X 1-3/4")
9.	117-179	2	ABRASION SLEEVE (2.07" X 62")
	117-292	2	ABRASION SLEEVE (2.07" X 70")
10.	516-033	-	SELECTOR VALVE DIVERTER
11.	166-162	-	GEARBOX AND GRND DRIVE PLANETARY
12.	155-714	2	O-RING (021 D90)
13.	105-198	1	BOLT (1/4-NC X 1-3/4")
14.	110-373	1	BOLT-ON CLAMP (13/16")
15.	105-095	1	WASHER (1/4")


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## CASE DRAIN (GROUND DRIVE)

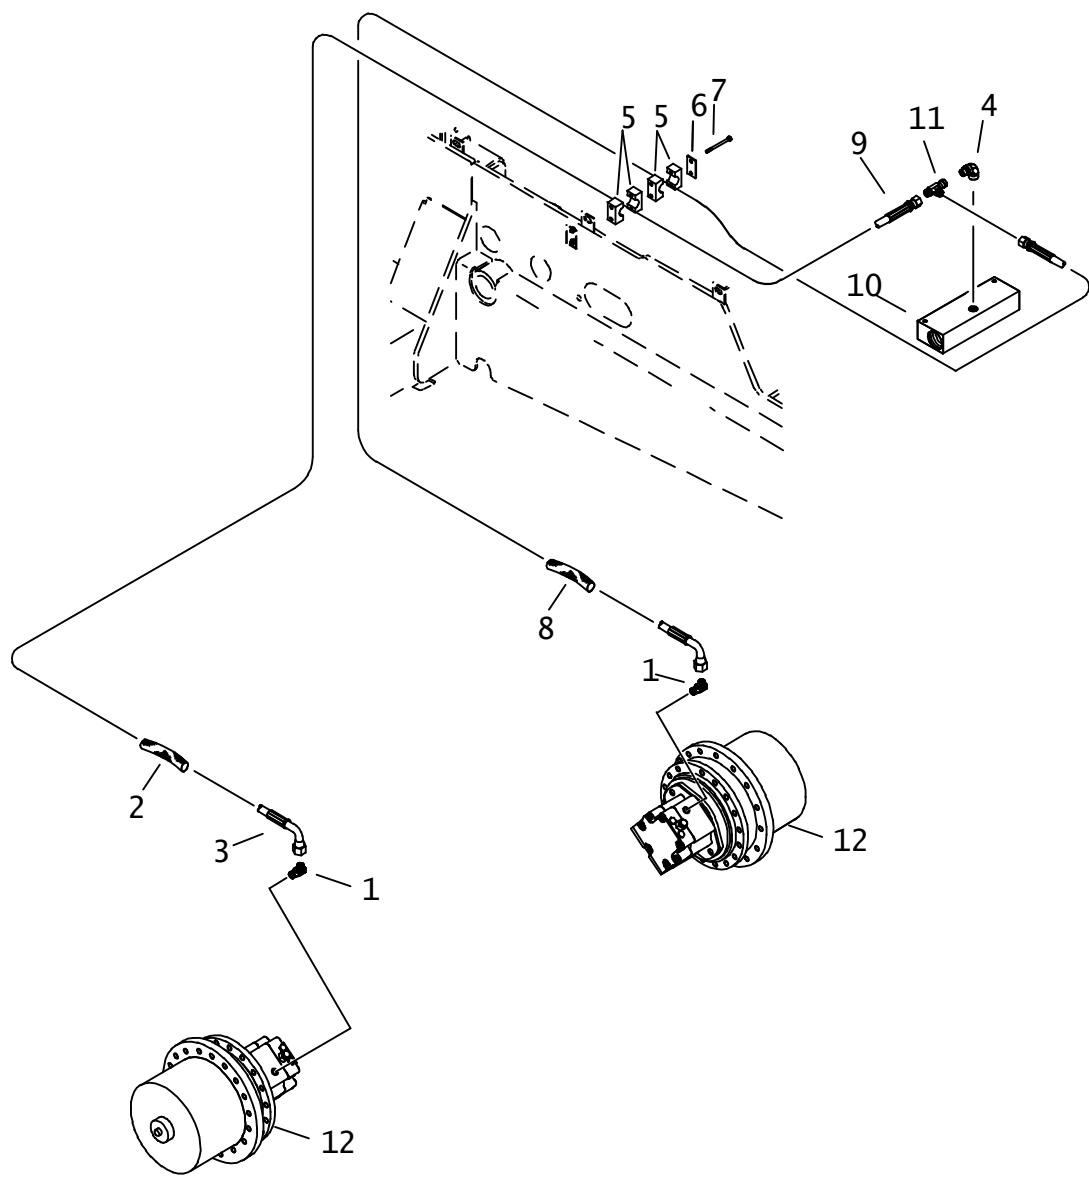

## CASE DRAIN (GROUND DRIVE)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-264	2	CONNECTOR (080-10S45)	
2.	117-619	1	ABRASION SLEEVE (1.59" X 135")	
3.	153-116	1	HOSE (080FX90S-188"-3000)	
4.	154-253	1	CONNECTOR (06S-08090)	
5.	111-007	2	BOLT-ON CLAMP (7/8", SOLD PER SET)	
6.	322-289	1	BACKUP (BOLT-ON)	
7.	106-967	2	BOLT (1/4-NC X 2-3/4" SIL BRZ)	
8.	117-764	1	ABRASION SLEEVE (1.59" X 90")	
9.	515-572	1	HOSE (080FX90S-134"-3000)	
10.	159-414	-	CASE DRAIN MANIFOLD	
11.	154-266	1	UNION RUN TEE (080FX-080-080)	
12.	166-162	-	GEARBOX AND DRIVE PLANETARY	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## PARK BRAKE HYDRAULICS

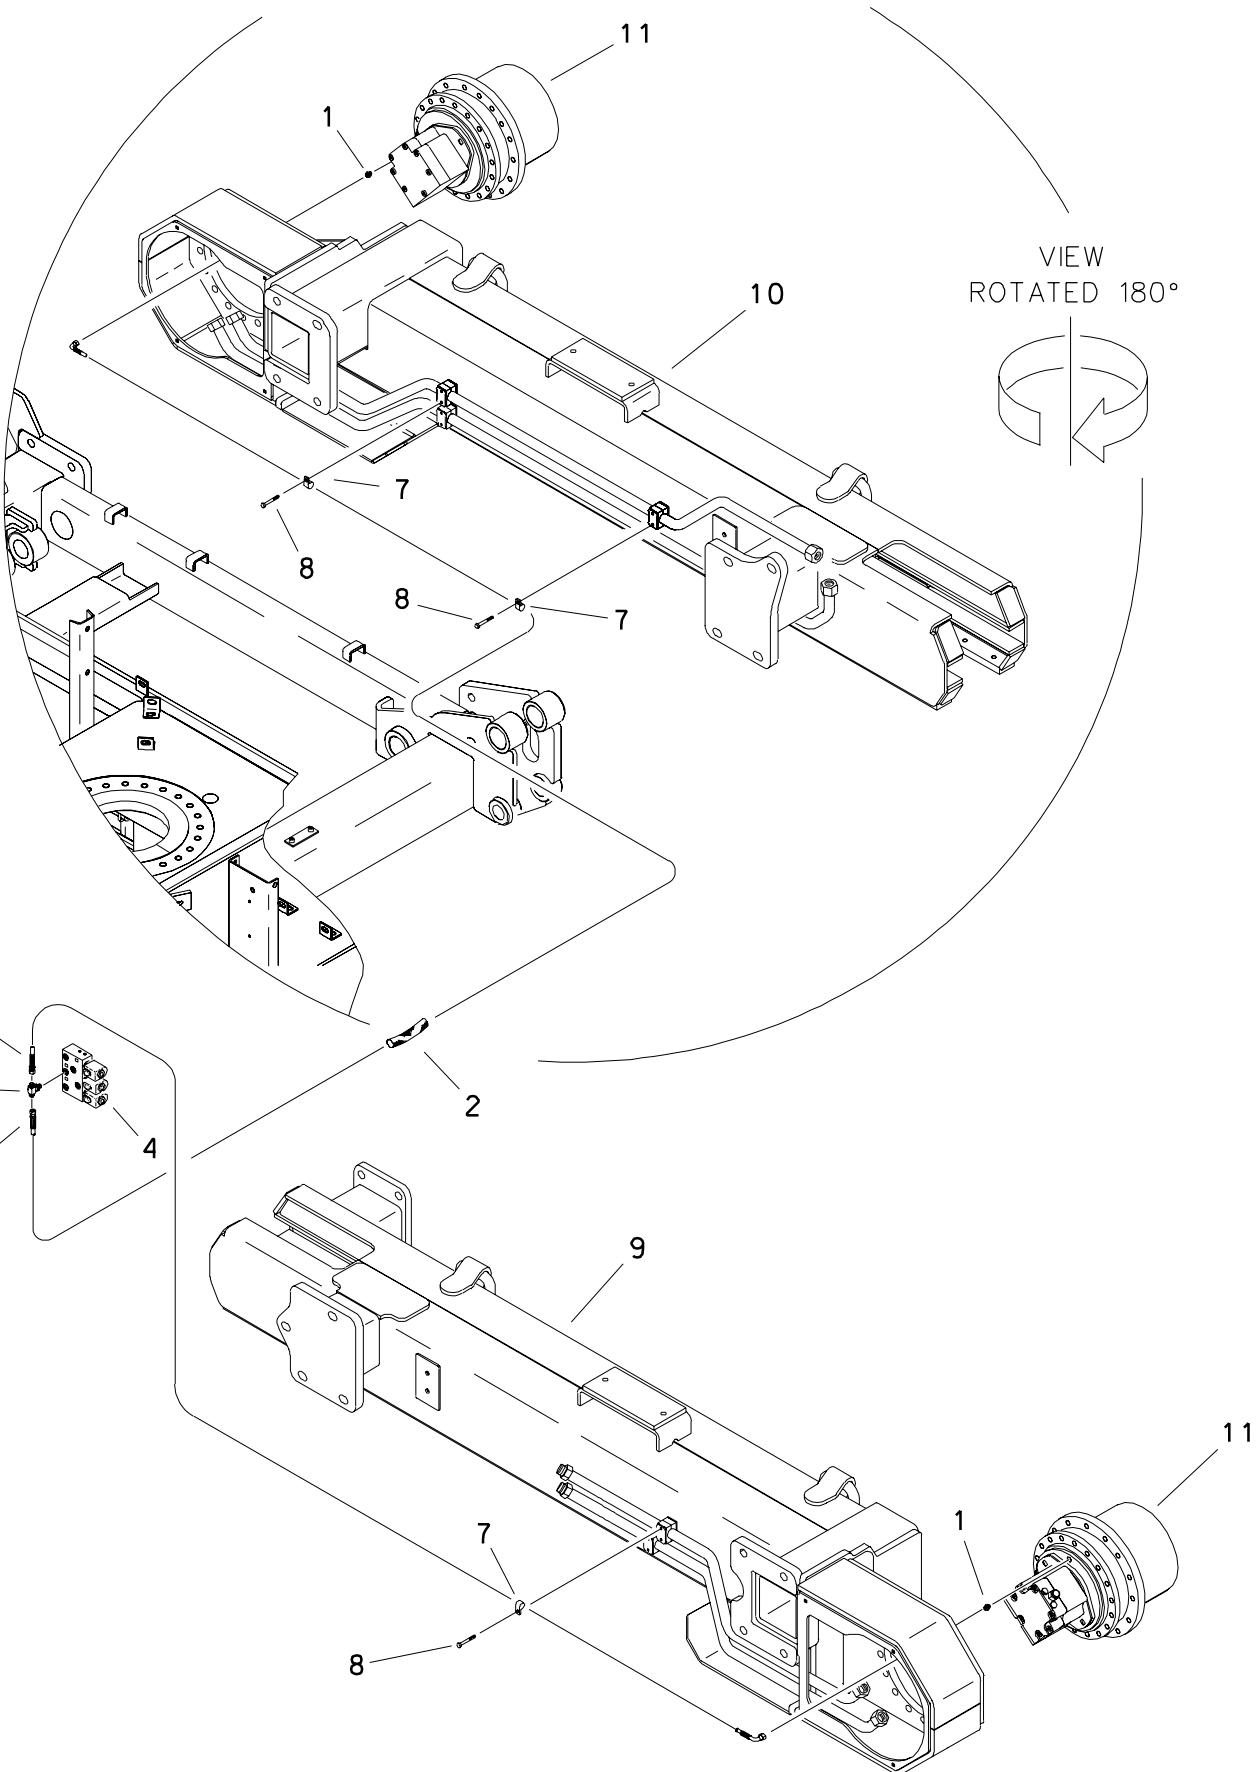

# PARK BRAKE HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	514-301	2	CONNECTOR (040-M12-1.50)	
2.	117-673	1	ABRASION SLEEVE (1" X 150")	
3.	515-571	1	HOSE (040FX90S-170"-3000")	
4.	159-194	-	CHARGE MANIFOLD	
5.	154-293	1	BRANCH TEE (04S-040-040)	
6.	515-277	1	HOSE (040FX90S-128"-3000")	
7.	110-373	3	BOLT-ON CLAMP (13/16")	
8.	105-106	3	BOLT (1/4-NC X 2")	
9.	349-300	-	RIGHT ROLLER FRAME	ENDS WITH S/N: 2V2567
	315-883	-	RIGHT ROLLER FRAME	BEGINS WITH S/N: 2W0856
10.	349-301	-	LEFT ROLLER FRAME	ENDS WITH S/N: 2V2567
	315-882	-	LEFT ROLLER FRAME	BEGINS WITH S/N: 2W0856
11.	166-162	-	GEARBOX AND GRND DRIVE PLANETARY	

## FOOTNOTES

### NOTE

REFER TO O-RING CHART (800-301) IN BACK OF BOOK FOR REPLACEMENT OF O-RINGS.

## CAB SWING HYDRAULICS

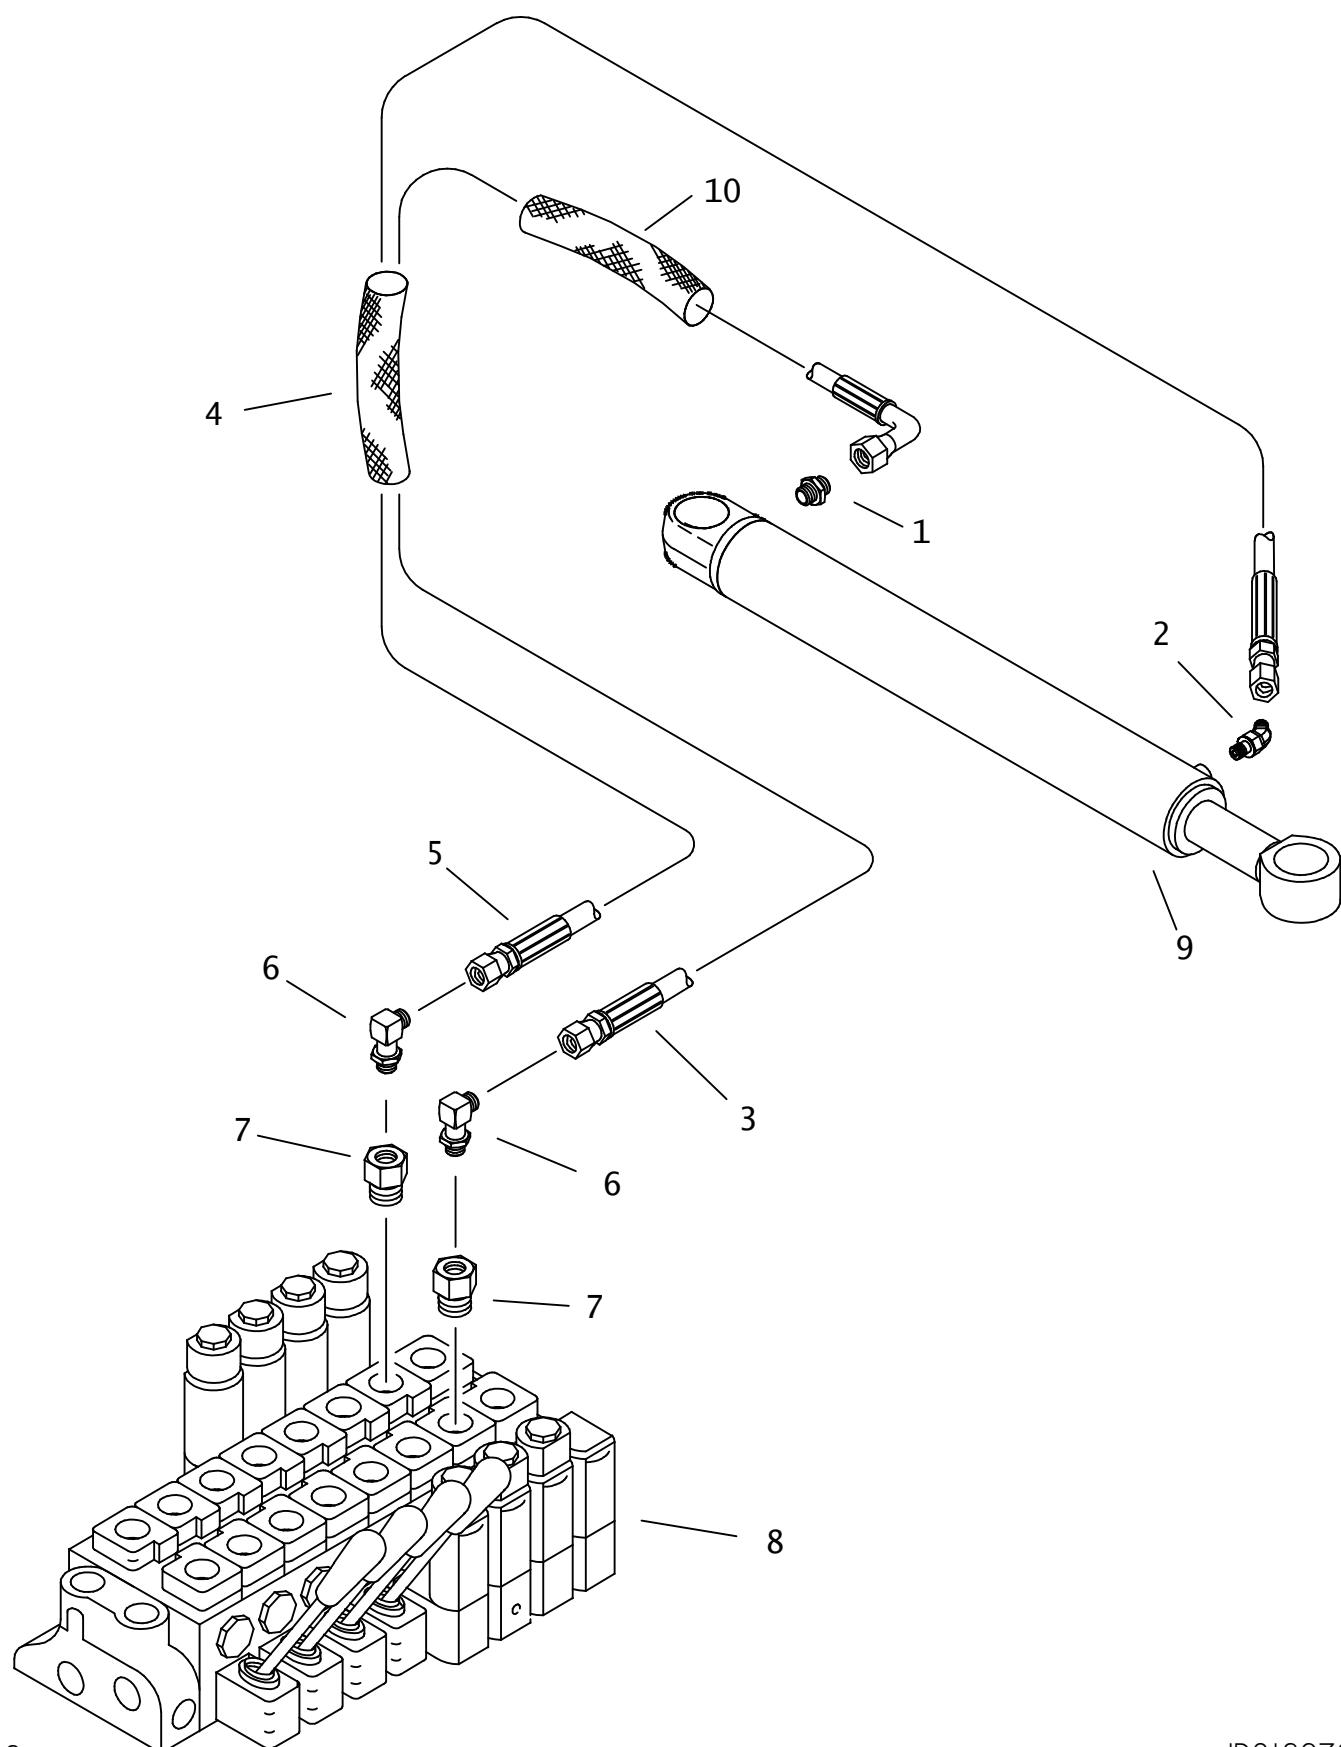

## CAB SWING HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-278	1	CONNECTOR 04S-040)	
2.	154-263	1	CONNECTOR (04S-04045)	
3.	515-277	1	HOSE (040FX90-128"-3000)	
4.	116-633	1	ABRASION SLEEVE (1.59" X 115")	
5.	515-098	1	HOSE (040FX-110"-3000)	
6.	154-364	2	CONNECTOR (040-06S90, ORF)	
7.	155-171	2	REDUCER (10S-06SF)	
8.	153-215	-	HYDRAULIC VALVE	BEFORE SN. CMWJT100JA0000015
	150-2730	-	HYDRAULIC VALVE	AFTER SN. CMWJT100CA0000016
9.	151-182	-	CYL (2.0" X 1.25" X 14.250")	
10.	117-611	1	ABRASION SLEEVE (1.00" X 22")	

NOT SHOWN:


FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# HYDRAULIC CYLINDER

6" X 4" X 3"

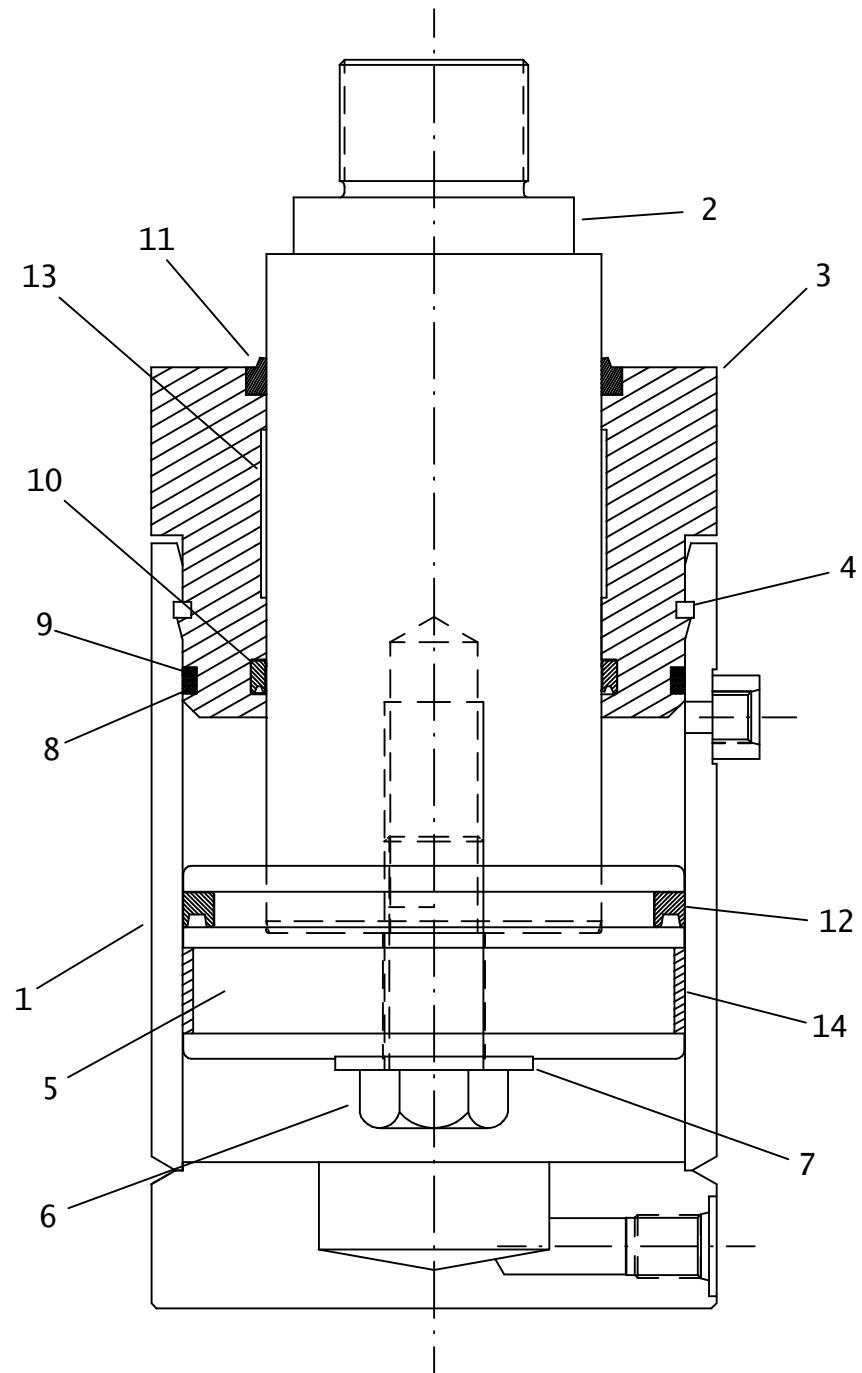

# HYDRAULIC CYLINDER

6" X 4" X 3"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-176	1	CYL (6.00" X 4.00" X 3.00")	INCL REF NO.'S 1 - 14
	190-774	1	SEAL REPAIR KIT	INCL REF NO.'S 6, 8 - 14,
1.	152-615	1	BARREL	
2.	150-681	1	CYLINDER ROD	
3.	151-175	1	CYL GLAND	
4.	150-707	1	LOCK RING	
5.	149-319	1	PISTON (6")	
6.	105-1074	1	SCREW (M30-1.50 X 90MM,10.9)	SEE FOOTNOTE # 1
7.	106-780	1	WASHER (M30)	
8.	157-082	1	O-RING (358 D90)	
9.	157-083	1	BACKUP RING (358 D90)	
10.	157-729	1	U-SEAL	
11.	157-648	1	PISTON SEAL (4")	
12.	157-186	1	PISTON SEAL 6.00"	
13.	125-851	1	WEAR RING	
14.	125-850	1	WEAR RING	


NOT SHOWN:

FOOTNOTES:

- I. CLEAN AND DRY THREADS. APPLY RED LOCTITE (RC 271 OR 277). TORQUE TO 1300 FT/LBS.

NOTE:

## HYDRAULIC CYLINDER (2.0 X 1.25 X 14.25) 2" X 1.25" X 14.25"

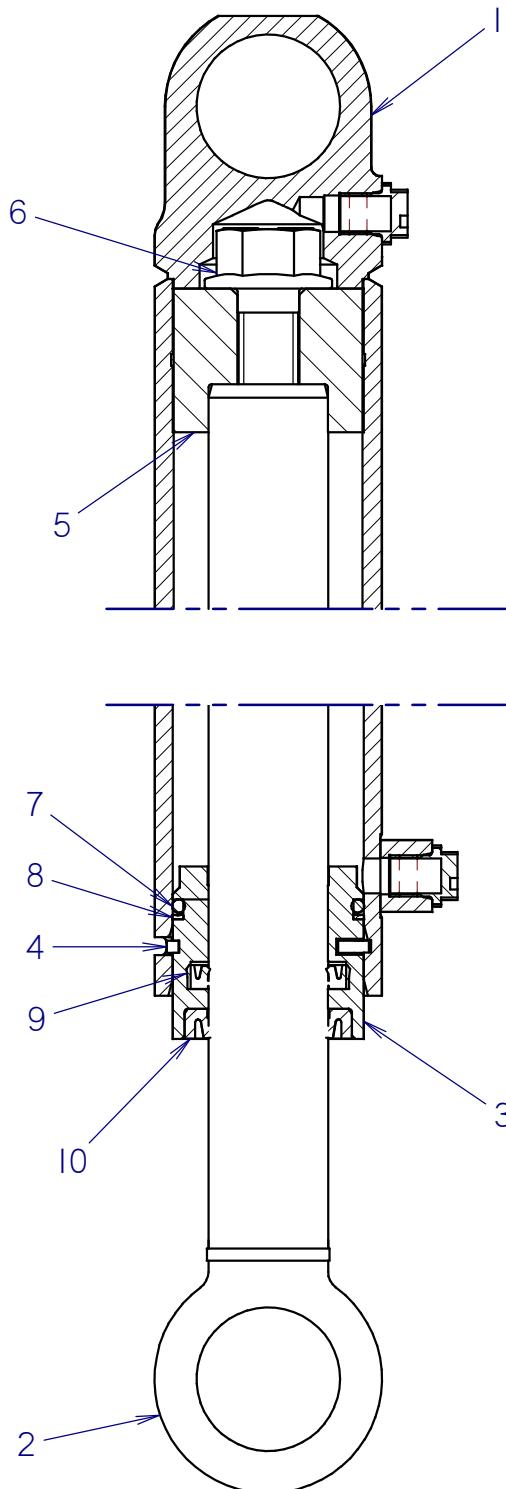

## HYDRAULIC CYLINDER (2.0 X 1.25 X 14.25) 2" X 1.25" X 14.25"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-182	-	CYL (2.0 X 1.25 X 14.25)	INCL REF NO'S 1 THRU 10, SEE FOOTNOTE 1
1	152-069	1	CYLINDER BARREL (2.0 X	
2	150-448	1	CYLINDER ROD (1.25 X 16.0)	
3	150-770	1	CYLINDER HEAD (2.0 X 1.25)	
4	150-778	1	LOCK RING (2.0)	
5	150-771	1	CYLINDER PISTON (2.0 X 1.25)	INCL MOLDED-ON WEAR RING
6	106-097	1	FLG BOLT (5/8-NC X 1-3/4",GD8)	SEE FOOTNOTE 2
7	157-022	1	O-RING (224 D90)	
8	155-732	1	BACKUP RING (224 D90)	
9	157-541	1	U-SEAL (1.250")	
10	157-538	1	WIPER SEAL (1.250")	

NOT SHOWN:


FOOTNOTES:

1. SEAL KIT P/N: 190-169
2. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 180-200 FT-LBS

NOTE:

- |         |                             |
|---------|-----------------------------|
| 259-100 | U-SEAL INSTALLER (1"-4.99") |
| 259-236 | WIPER INSTALLER (1.25")     |
| 259-239 | WIPER/SEAL INSTALLER (2")   |
| 259-241 | PISTON INSTALLER (2")       |
| 259-188 | CYL HEAD SPANNER - TWO PIN  |

## HYDRAULIC CYLINDERS (3.0" X 1.75")

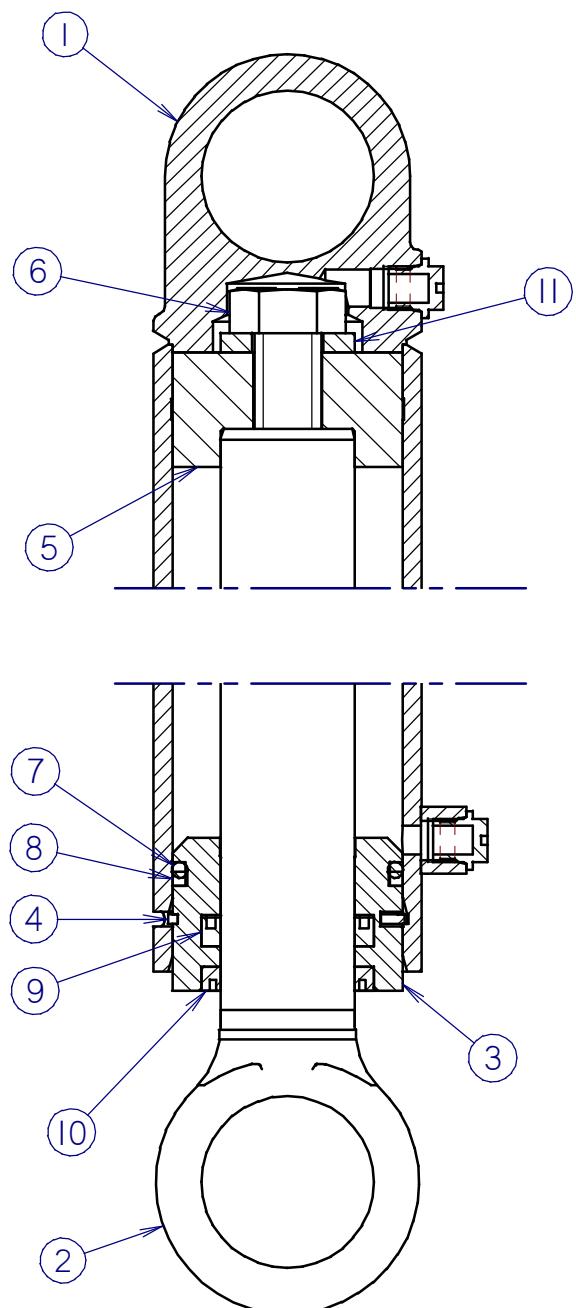

## HYDRAULIC CYLINDERS (3.0" X 1.75")

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I49-683	-	CYL (3.0 X 1.75 X 3.0)	SEE FOOTNOTES 1 & 2
1	I50-299	1	CYLINDER BARREL (3.0 X 3.0)	
2	I50-446	1	CYLINDER ROD (1.75 X 3.0)	
	I49-684	-	CYL (3.0 X 1.75 X 4.0)	SEE FOOTNOTES 1 & 2
1	I52-004	1	CYLINDER BARREL (3.0 X 4.0)	
2	I53-015	1	CYLINDER ROD (1.75 X 4.0)	
	I49-685	-	CYL (3.0 X 1.75 X 5.0)	SEE FOOTNOTES 1 & 2
1	I52-068	1	CYLINDER BARREL (3.0 X 5.0)	
2	I50-432	1	CYLINDER ROD (1.75 X 5.0)	
	I51-058	-	CYL (3.0 X 1.75 X 6.0)	SEE FOOTNOTES 1 & 2
1	I52-008	1	CYLINDER BARREL (3.0 X 6.0)	
2	I50-428	1	CYLINDER ROD (1.75 X 6.0)	
	I51-070	-	CYL (3.0 X 1.75 X 8.0)	SEE FOOTNOTES 1 & 2
1	I52-014	1	CYLINDER BARREL (3.0 X 8.0)	
2	I50-436	1	CYLINDER ROD (1.75 X 8.0)	
	I49-686	-	CYL (3.0 X 1.75 X 10.0)	SEE FOOTNOTES 1 & 2
1	I50-284	1	CYLINDER BARREL (3.0 X 10.0)	
2	I49-732	1	CYLINDER ROD (1.75 X 10.0)	
	I51-042	-	CYL (3.0 X 1.75 X 12.0)	SEE FOOTNOTES 1 & 2
1	I50-293	1	CYLINDER BARREL (3.0 X 12.0)	
2	I50-425	1	CYLINDER ROD (1.75 X 12.0)	
	I51-083	-	CYL (3.0 X 1.75 X 16.0)	SEE FOOTNOTES 1 & 2
1	I50-288	1	CYLINDER BARREL (3.0 X 16.0)	
2	I53-004	1	CYLINDER ROD (1.75 X 16.0)	
	I51-122	-	CYL (3.0 X 1.75 X 20.0)	SEE FOOTNOTES 1 & 2
1	I50-667	1	CYLINDER BARREL (3.0 X 20.0)	
2	I53-020	1	CYLINDER ROD (1.75 X 20.0)	
	I49-687	-	CYL (3.0 X 1.75 X 24.0)	SEE FOOTNOTES 1 & 2
1	I49-763	1	CYLINDER BARREL (3.0 X 24.0)	
2	I49-733	1	CYLINDER ROD (1.75 X 24.0)	
	I49-688	-	CYL (3.0 X 1.75 X 30.0)	SEE FOOTNOTES 1 & 2
1	I49-764	1	CYLINDER BARREL (3.0 X 30.0)	
2	I49-734	1	CYLINDER ROD (1.75 X 30.0)	
			.	
3	I50-763	1	CYLINDER HEAD (3.0 X 1.75)	
4	I50-911	1	LOCK RING (3.0)	
5	I50-765	1	CYLINDER PISTON (3.0 X 1.75)	INCL. MOLDED-ON WEAR RING
6	I06-I22	1	BOLT (7/8-NC X 2-1/4", GD8)	SEE FOOTNOTE 3
7	I55-734	1	O-RING (334 D90)	
8	I55-733	1	BACKUP RING (334 D90)	
9	I57-550	1	U-SEAL (1.750")	
10	I57-549	1	WIPER SEAL (1.750")	
11	I05-363	1	WASHER (7/8")	


### FOOTNOTES

1. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #11 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS.
2. SEAL REPAIR KIT P/N: I90-I72
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 410-460 FT-LBS

### NOT SHOWN:

- 259-040 U-SEAL INSTALLER (1.5" - UP)
- 259-238 WIPER INSTALLER (1.75")
- 259-244 PISTON SEAL INSTALLER (3.5")
- 259-245 PISTON INSTALLER (3.5")
- 259-188 CYL HEAD SPANNER - TWO PIN

## HYDRAULIC CYLINDERS (3.5" X 2.0")

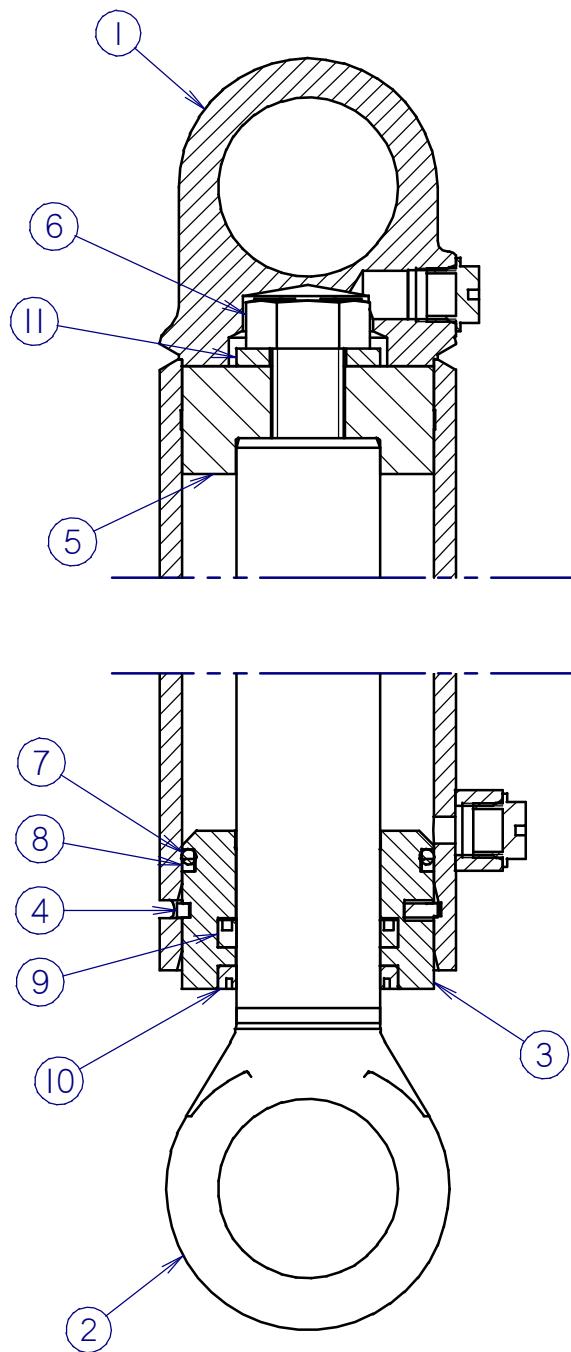

## HYDRAULIC CYLINDERS (3.5" X 2.0")

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I51-123	-	CYL (3.5 X 2.0 X 4.0)	SEE FOOTNOTES 1 & 2
1	I52-037	1	CYLINDER BARREL (3.5 X 4.0)	
2	I53-021	1	CYLINDER ROD (2.00 X 4.0)	
	I51-I78	-	CYL (3.5 X 2.0 X 5.0)	SEE FOOTNOTES 1 & 2
1	I50-300	1	CYLINDER BARREL (3.5 X 5.0)	
2	I50-440	1	CYLINDER ROD (2.00 X 5.0)	
	I49-692	-	CYL (3.5 X 2.0 X 5.0)	SEE FOOTNOTES 1 & 2
1	I50-296	1	CYLINDER BARREL (3.5 X 6.0)	
2	I49-735	1	CYLINDER ROD (2.00 X 6.0)	
	I49-693	-	CYL (3.5 X 2.0 X 8.0)	SEE FOOTNOTES 1 & 2
1	I52-006	1	CYLINDER BARREL (3.5 X 8.0)	
2	I49-736	1	CYLINDER ROD (2.00 X 8.0)	
	I51-I16	-	CYL (3.5 X 2.0 X 10.0)	SEE FOOTNOTES 1 & 2
1	I52-040	1	CYLINDER BARREL (3.5 X 10.0)	
2	I53-016	1	CYLINDER ROD (2.00 X 10.0)	
	I51-047	-	CYL (3.5 X 2.0 X 12.0)	SEE FOOTNOTES 1 & 2
1	I50-297	1	CYLINDER BARREL (3.5 X 12.0)	
2	I50-429	1	CYLINDER ROD (2.00 X 12.0)	
	I49-694	-	CYL (3.5 X 2.0 X 16.0)	SEE FOOTNOTE 1 & 2
1	I49-737	1	CYLINDER ROD (2.00 X 16.0)	
2	I49-805	1	CYLINDER BARREL (3.5 X 16.0)	
	I49-695	-	CYL (3.5 X 2.0 X 20.0)	SEE FOOTNOTES 1 & 2
1	I49-765	1	CYLINDER BARREL (3.5 X 20.0)	
2	I49-738	1	CYLINDER ROD (2.00 X 20.0)	
	I49-696	-	CYL (3.5 X 2.0 X 24.0)	SEE FOOTNOTES 1 & 2
1	I49-766	1	CYLINDER BARREL (3.5 X 24.0)	
2	I49-739	1	CYLINDER ROD (2.00 X 24.0)	
	I49-697	-	CYL (3.5 X 2.0 X 30.0)	SEE FOOTNOTES 1 & 2
1	I49-767	1	CYLINDER BARREL (3.5 X 30.0)	
2	I49-740	1	CYLINDER ROD (2.00 X 30.0)	
			.	
3	I50-759	1	CYLINDER HEAD (3.5 x 2.00)	
4	I49-302	1	LOCK RING (3.5)	
5	I50-992	1	CYLINDER PISTON (3.5 X 2.00)	INCL. MOLDED-ON WEAR RING
6	I06-145	1	BOLT (I-NC X 2-I/4", GD8)	SEE FOOTNOTE 3
7	I57-030	1	O-RING (338 D90)	
8	I57-032	1	BACKUP RING (338 D90)	
9	I57-559	1	U-SEAL (2.000")	
10	I57-558	1	WIPER SEAL (2.000")	
11	I06-144	1	WASHER (1")	



### FOOTNOTES

1. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #11 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS.
2. SEAL REPAIR KIT P/N: I90-175
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 630-700 FT-LBS

### NOT SHOWN:

- 259-040 U-SEAL INSTALLER (1.5" - UP)
- 259-239 WIPER/SEAL INSTALLER (2")
- 259-244 PISTON SEAL INSTALLER (3.5")
- 259-245 PISTON INSTALLER (3.5")
- 259-188 CYL HEAD SPANNER - TWO PIN

## HYDRAULIC CYLINDERS (4.0" X 2.25")

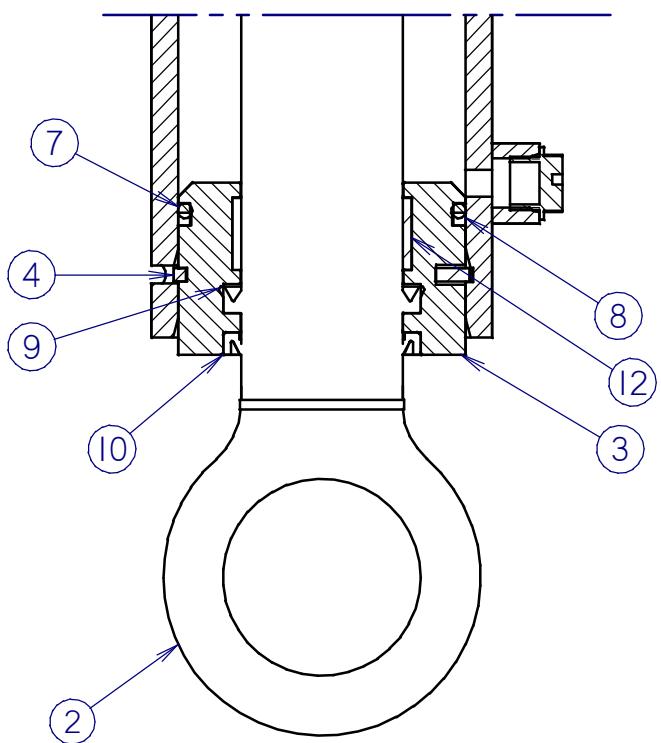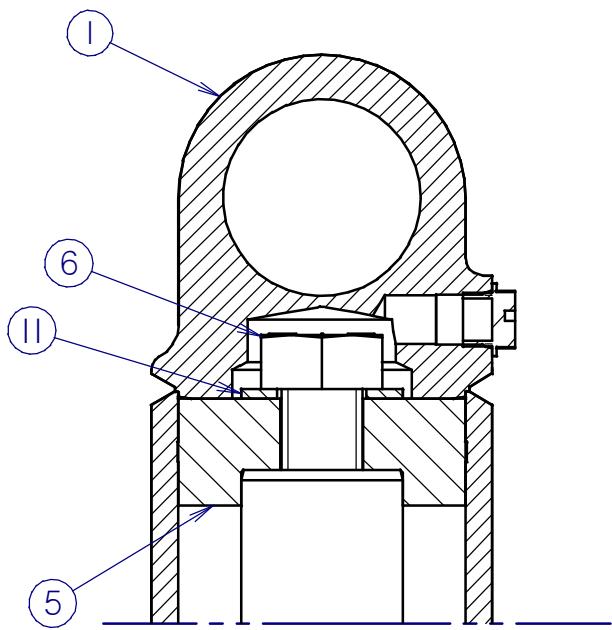

## HYDRAULIC CYLINDERS (4.0" X 2.25")

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I49-705	-	CYL (4.0 X 2.25 X 4.0)	SEE FOOTNOTES 1 & 2
1	I49-768	1	CYLINDER BARREL (4.0 X 4.0)	
2	I49-741	1	CYLINDER ROD (2.25 X 4.0)	
	I51-132	-	CYL (4.0 X 2.25 X 5.0)	SEE FOOTNOTES 1 & 2
1	I52-012	1	CYLINDER BARREL (4.0 X 5.0)	
2	I53-023	1	CYLINDER ROD (2.25 X 5.0)	
	I51-158	-	CYL (4.0 X 2.25 X 6.0)	SEE FOOTNOTES 1 & 2
1	I52-062	1	CYLINDER BARREL (4.0 X 6.0)	
2	I53-036	1	CYLINDER ROD (2.25 X 6.0)	
	I51-095	-	CYL (4.0 X 2.25 X 8.0)	SEE FOOTNOTES 1 & 2
1	I52-030	1	CYLINDER BARREL (4.0 X 8.0)	
2	I53-008	1	CYLINDER ROD (2.25 X 8.0)	
	I49-706	-	CYL (4.0 X 2.25 X 10.0)	SEE FOOTNOTES 1 & 2
1	I49-769	1	CYLINDER BARREL (4.0 X 10.0)	
2	I49-742	1	CYLINDER ROD (2.25 X 10.0)	
	I51-048	-	CYL (4.0 X 2.25 X 12.0)	SEE FOOTNOTES 1 & 2
1	I50-298	1	CYLINDER BARREL (4.0 X 12.0)	
2	I50-430	1	CYLINDER ROD (2.25 X 12.0)	
	I51-059	-	CYL (4.0 X 2.25 X 16.0)	SEE FOOTNOTES 1 & 2
1	I52-007	1	CYLINDER BARREL (4.0 X 16.0)	
2	I50-470	1	CYLINDER ROD (2.25 X 16.0)	
	I49-707	-	CYL (4.0 X 2.25 X 20.0)	SEE FOOTNOTES 1 & 2
1	I49-770	1	CYLINDER BARREL (4.0 X 20.0)	
2	I49-801	1	CYLINDER ROD (2.25 X 20.0)	
	I51-162	-	CYL (4.0 X 2.25 X 24.0)	SEE FOOTNOTES 1 & 2
1	I52-063	1	CYLINDER BARREL (4.0 X 24.0)	
2	I53-037	1	CYLINDER ROD (2.25 X 24.0)	
	I49-708	-	CYL (4.0 X 2.25 X 30.0)	SEE FOOTNOTES 1 & 2
1	I49-771	1	CYLINDER BARREL (4.0 X 30.0)	
2	I49-743	1	CYLINDER ROD (2.25 X 30.0)	
	I49-709	-	CYL (4.0 X 2.25 X 30.0)	SEE FOOTNOTES 1 & 2
1	I49-772	1	CYLINDER BARREL (4.0 X 36.0)	
2	I49-744	1	CYLINDER ROD (2.25 X 36.0)	
			.	
3	I50-757	1	CYLINDER HEAD (4.0 X 2.25)	
4	I49-303	1	LOCK RING (4.0)	
5	I50-993	1	CYLINDER PISTON (4.0 X 2.25)	
6	I06-146	1	BOLT (I-I/8-NC X 2-I/2", GD8)	SEE FOOTNOTE 3
7	I57-035	1	O-RING (342 D90)	
8	I57-036	1	BACKUP RING (342 D90)	
9	I57-526	1	U-SEAL (2.250")	
10	I57-527	1	WIPER SEAL (2.250")	
11	I06-147	1	WASHER (I-I/8")	
12	I49-318	1	WEAR RING	

### FOOTNOTES

1. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #12 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS.
2. SEAL REPAIR KIT P/N: I90-177
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 770-850 FT-LBS

### NOT SHOWN:

- 259-040 U-SEAL INSTALLER (I.5" - UP)
- 259-240 WIPER/SEAL INSTALLER (2.25")
- 259-246 PISTON SEAL INSTALLER (4")
- 259-247 PISTON INSTALLER (4")
- 259-188 CYL HEAD SPANNER - TWO PIN

## **NOTES:**

# **ELECTRICAL**


**SEE TECHNICAL SUPPLEMENT FOR FURTHER  
ELECTRICAL INFORMATION**

**NOTES:**

# **ANCHOR COMPONENTS**

**ID0040800**

## AUGER DRIVE

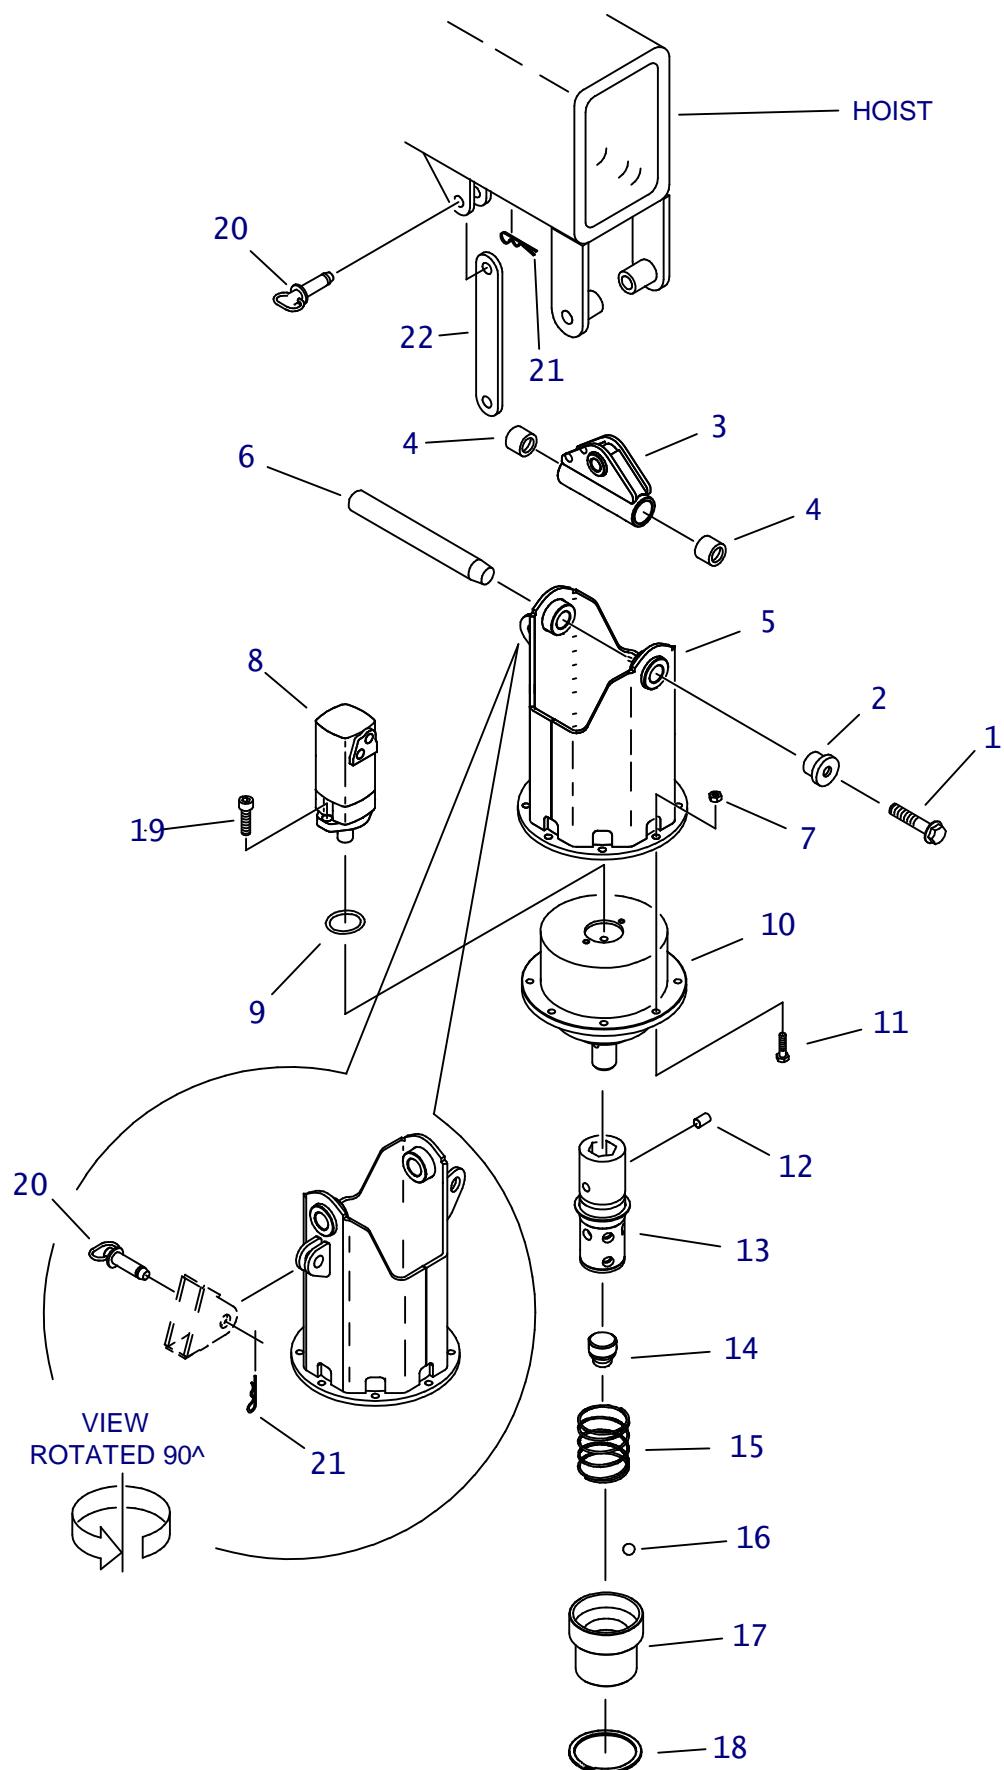

## AUGER DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	370-072		ANCHOR DRIVER PARTS	
1.	106-470	1	FLG SCREW (M16-2.00 X 40mm)	
2.	181-974	1	TAPERED INSERT (1.5")	
3.	349-840	1	COUPLING	
4.	125-772	2	COMPOSITION BUSHING (1.5")	
5.	349-839	1	AUGER DRIVER	
6.	179-209	1	TAPERED PIN (38.1mm X 320mm)	
7.	106-526	8	NUT (M14- 2.0, 10.9)	
8.	158-753	1	THRUST DRIVE MOTOR	
	500-658		SEAL REPAIR KIT	
9.	157-099	1	O-RING (042 D70)	
10.	166-161	1	AUGER DRIVE GEARBOX	
11.	106-527	8	SCREW (M14-2.00 X 50mm)	
12.	105-585	2	ROLL PIN (.750" X 1.250")	
13.	309-977	1	ANCHOR DRIVER	USES SIX BALLS (REF 16) TO RETAIN STOP (REF 14) FOOT NOTE 2
	303-643	1	ANCHOR DRIVER	USED THREE BALLS (REF 16) TO RETAIN STOP (REF 14)
14.	370-054	1	WEIGHT/STOP	
15.	117-160	1	COMPRESSION SPRING	
16.	125-150	9	DETENT BALL (.875")	
17.	178-591	1	LOCK COLLAR	
18.	116-761	1	SPIRAL RETAINING RING	FOOT NOTE 1
19.	106-204	2	BOLT (1/2-NC X 1-1/2", SOC)	USE 242 LOCTITE OR EQUIVALENT
20.	183-328	2	PULL PIN (1.000" X 2.750")	
21.	110-128	2	SPRING CLIP PIN (5/32" X 1")	
22.	307-671	1	STOW BAR	


NOT SHOWN:

FOOTNOTES:

1. USE WHEN INSTALLING UPDATED 309-977
2. UPDATED VERSION NECKED-DOWN FOR THICKER 116-761

NOTE:

## ANCHOR DRIVER HYDRAULICS

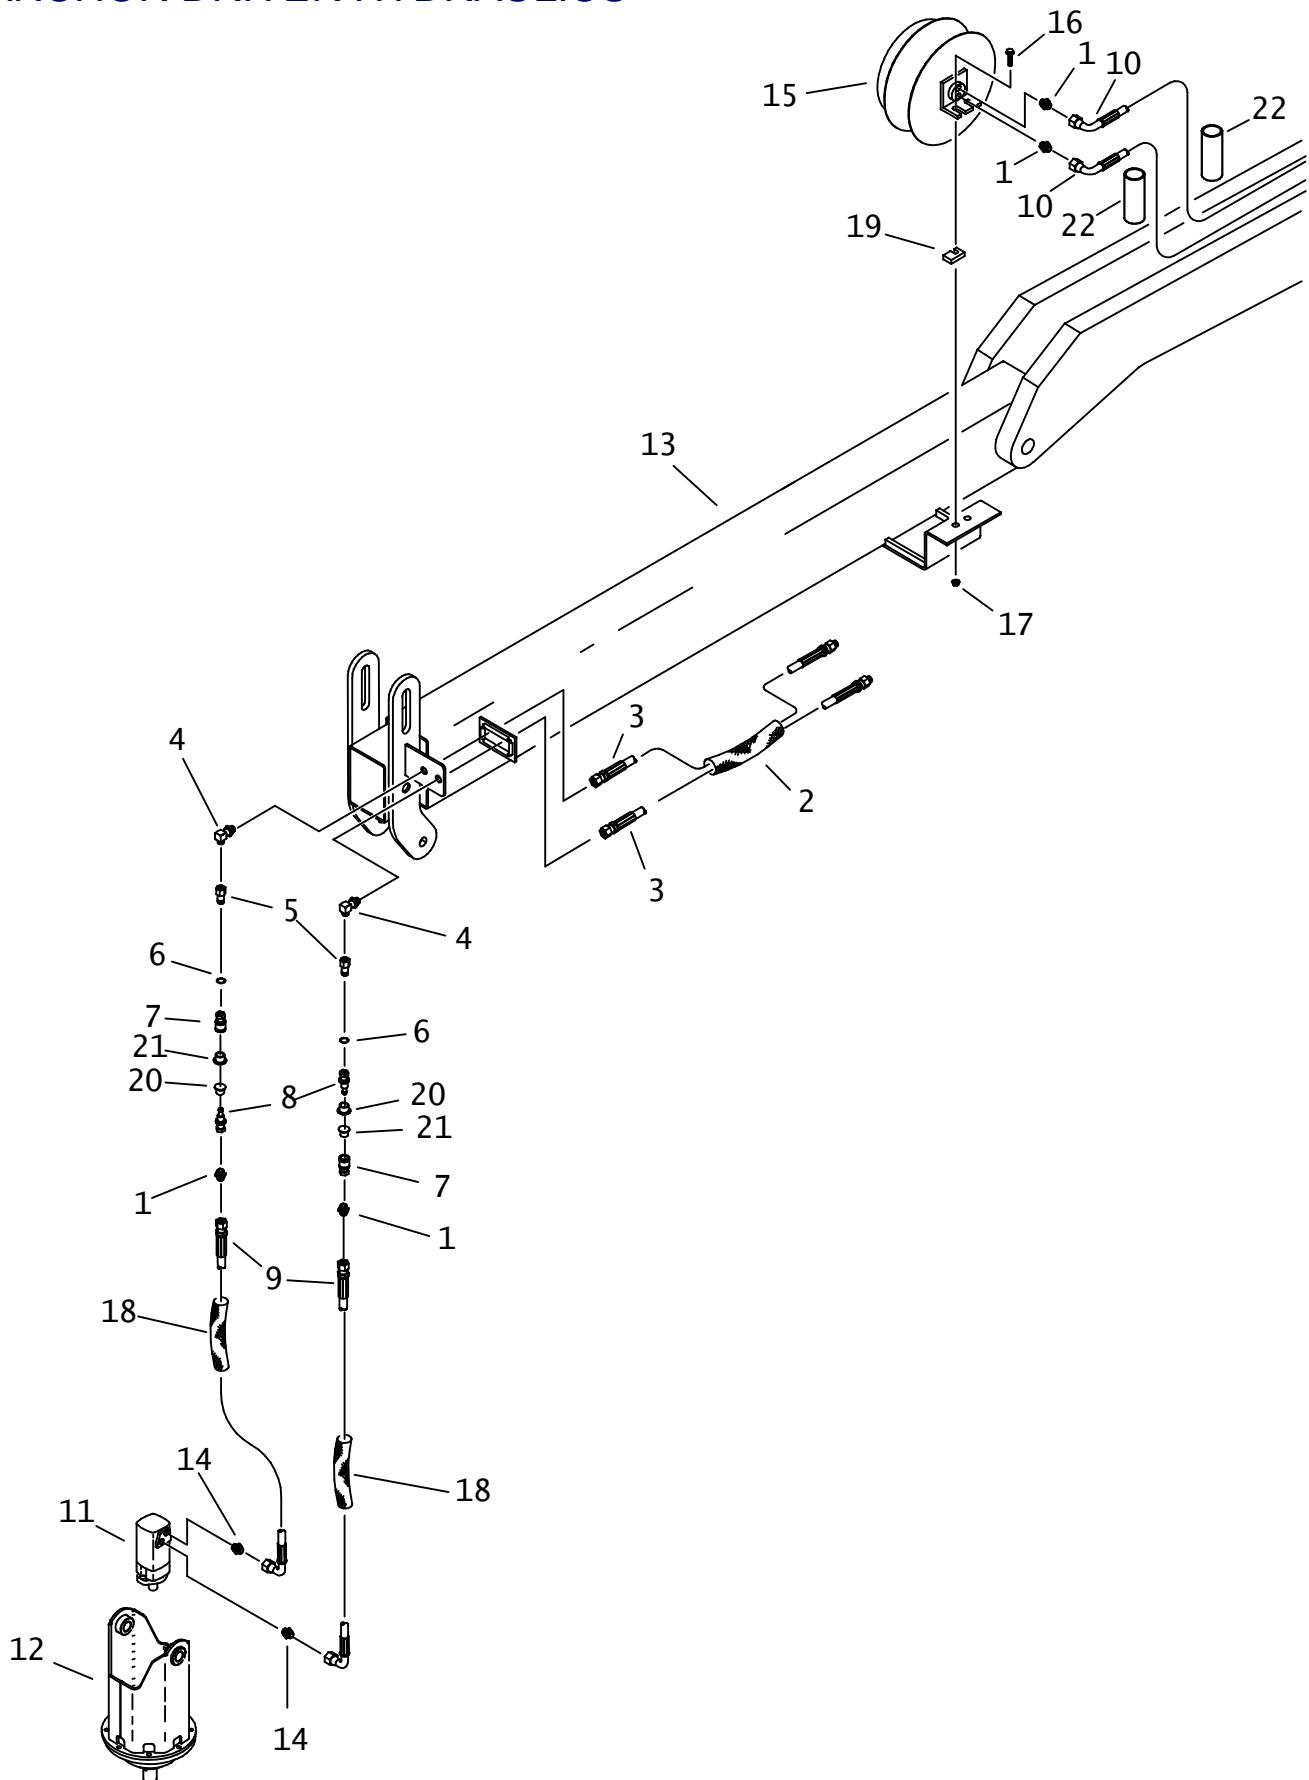

## ANCHOR DRIVER HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-233	4	CONNECTOR (08S-080)	
2.	117-741	1	ABRASION SLEEVE (1.59" x 145")	
3.	515-754	2	HOSE (080FX-080 -170"-3000)	
4.	154-396	2	BK CONNECTOR (080-08090BK)	
5.	156-732	2	CONNECTOR (08J-080)	
6.	155-706	2	O-RING (908 D90)	
7.	155-989	2	QDC BODY (08-08SF)	
8.	155-990	2	QDC ADAPTER (08-08SF)	
9.	154-830	2	HOSE (080FX90-18"- 3000)	
10.	515-642	2	HOSE (080FX90-176"-3000)	
11.	158-753	-	THRUST DRIVE MOTOR	
12.	349-839	-	AUGER DRIVER	
13.	306-936	-	HOIST/CRAANE	
14.	154-279	2	CONNECTOR (080-10S)	
15.	159-419	1	DUAL HOSE REEL	
16.	105-885	2	FLG LK BOLT (1/2-NC x 2")	
17.	105-833	2	FLG LOCKNUT (1/2-NC)	
18.	117-622	1	ABRASION SLEEVE (1.25" x 20")	
19.	349-485	2	SPACER	
20.	155-935	2	DUST CAP (1/2" - 3/4")	
21.	155-936	2	DUST PLUG (1/2" - 3/4")	
22.	117-721	2	ABRASION SLEEVE (1.59" x 172")	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## ANCHORING PLATES

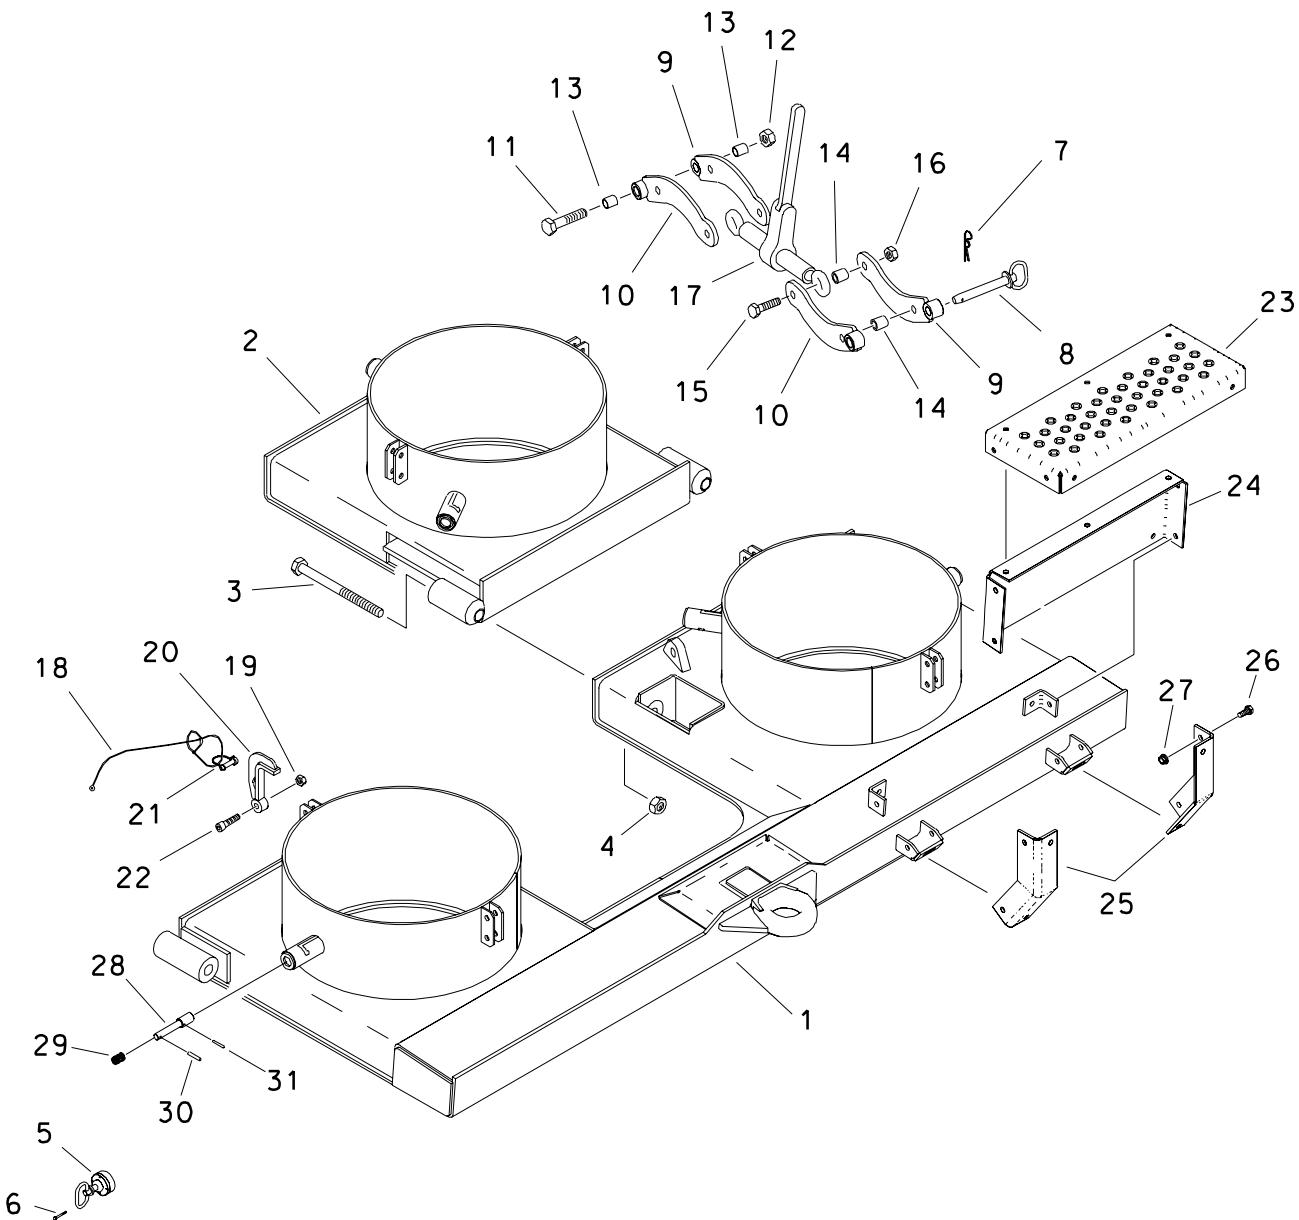


# ANCHORING PLATES

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	370-080	1	ANCHOR PLATE	
	370-522	1	ANCHOR PLATE	
2.	370-520	2	SINGLE ANCHOR	OPTIONAL
3.	105-934	4	BOLT (7/8-NC X 1 1/2")	
4.	105-985	4	FLG NUT (7/8-NC)	
5.	347-888	6	SPRING LOADED PIN	
6.	106-796	12	SCREW (M4-.70 X 30mm)	
7.	110-128	2	SPRING CLIP PIN (5/32" X 1")	
8.	183-110	2	PULL PIN (3/4" X 4-1/2")	
9.	370-219	4	RIGHT ARM BAR	
10.	370-203	4	LEFT ARM BAR	
11.	105-365	2	BOLT (3/4-NC X 4")	
12.	105-372	2	LOCKNUT (3/4-NC)	
13.	125-424	4	BRONZE BUSHING (.759")	
14.	370-189	8	SPACER	
15.	107-197	8	SCREW (M16-2.00 X 80mm, 10.9)	
16.	106-545	8	LOCKNUT (M16-2.00)	
17.	111-017	2	LOAD BINDER	
18.	110-710	4	LANYARD (6")	
19.	106-685	4	LOCKNUT (M12-1.75, PRV TRQ)	
20.	370-230	4	CAP RETAINER	
21.	110-368	4	SNAPPER PIN (3/8" X 1-1/2")	
22.	106-707	4	SCREW (M12-1.75 X 45mm, ALN)	
23.	370-267	1	STEP PLATE	
24.	370-269	1	FRONT PLATE	
25.	370-268	2	STEP LEG	
26.	105-245	17	SCREW (M10-1.50 X 25mm)	
27.	106-387	17	FLG LOCKNUT (M10-1.50)	
28.	184-535	4	LOCK PIN	
29.	115-560	4	COMPRESSION SPRING	
30.	105-561	4	ROLL PIN (3/8" X 2-3/4")	
31.	105-503	4	ROLL PIN (1/4" X 2")	

FOOTNOTES

# ANCHOR SHAFT

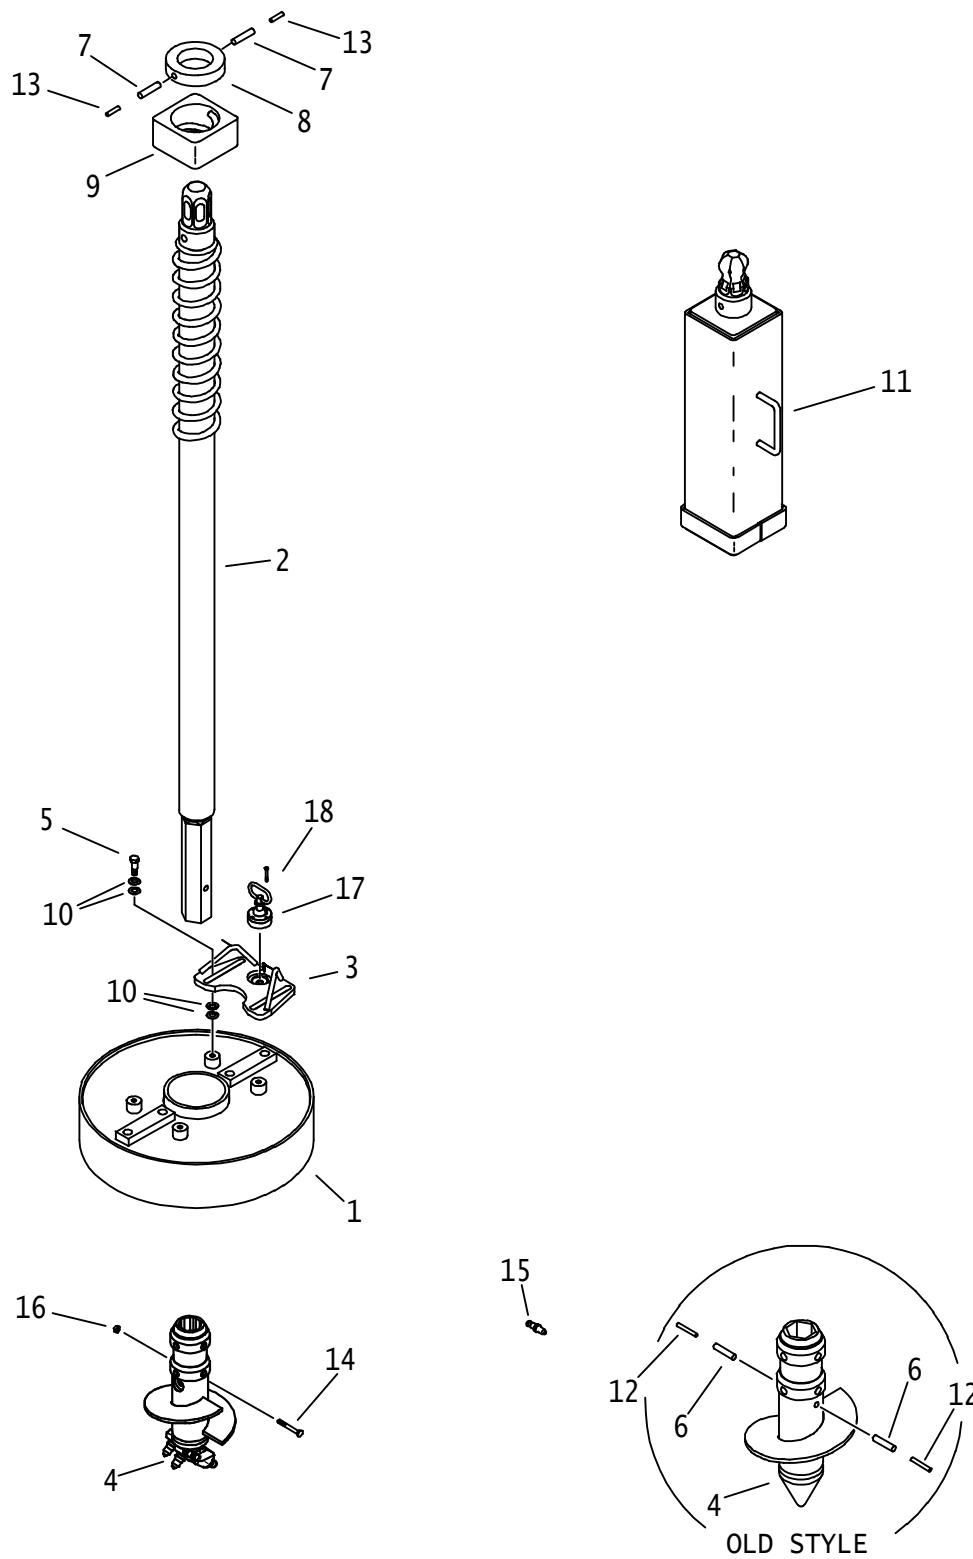

# ANCHOR SHAFT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	370-190	2	AUGER CAP	
2.	166-200	2	SHAFT	
3.	370-196	4	LATCH	
	370-111	AR	AUGER (240MM)	
	370-110	-	AUGER (380MM)	
	370-112	-	AUGER (480MM)	
4.	301-0249	AR	ROCK ANCHOR (9.5")	SEE FOOTNOTE 6
	301-0250	AR	ROCK ANCHOR (7.5")	SEE FOOTNOTE 6
	300-9589	AR	ROCK ANCHOR	
5.	106-739	8	SHLD BLT (M12 X 20MM, M10-1.50)	
6.	105-575	-	ROLL PIN (1/2" X 1-1/4")	
7.	105-548	4	ROLL PIN (1/2" X 2-1/4")	USE 277 LOCTITE OR EQUIVALENT
	105-609	4	ROLL PIN (5/8" X 2-1/4")	
8.	370-106	2	LOCK COLLAR (3.031")	SEE FOOTNOTE 1
	370-320	2	LOCK COLLAR	SEE FOOTNOTE 2
9.	370-244	2	ANCHOR NUT (CAST)	SEE FOOTNOTE 1
10.	105-058	AR	BELLVILLE WASHER (1/2")	SEE FOOTNOTE 2
11.	370-120	1	NUT DRIVER	
12.	105-547	-	ROLL PIN (5/16" X 1-1/4")	
13.	105-529	4	ROLL PIN (5/16" X 1-1/2")	SEE FOOTNOTE 1
	105-520	2	ROLL PIN (3/8" X 1-1/4")	SEE FOOTNOTE 2
14.	106-342	2	SCREW (M16-2.00 X 90MM)	SEE FOOTNOTE 1 & 2
15.	136-101	AR	INSERT BIT	SEE FOOTNOTE 4
	131-259	AR	INSERT BIT	
16.	106-545	2	LOCKNUT (M16-2.0, PRV TRQ, 10.9)	SEE FOOTNOTE 2 & 3
17.	347-888	2	SPRING LOADED PIN	
18.	106-796	4	SCREW (M4-.70 X 30MM)	

NOT SHOWN:

FOOTNOTES:

1. USE WITH 370-102 AUGER SHAFT
2. USE WITH 166-200 AUGER SHAFT
3. USE REF. NO. 27 WITH M12 BOLT
4. USE WITH 370-443 ROCK ANCHOR & 370-453 ROCK ANCHOR.
5. USE WITH 300-9589 ROCK ANCHOR
6. INCLUDES BIT 136-102. BITS 136-100 & 136-101 ALSO FIT.

NOTE:


## **NOTES:**

# **FLUID SYSTEMS**

**ID0135021**

## FLUID PUMP MOUNTING (JT)

BEGINS WITH S/N: 2W0856

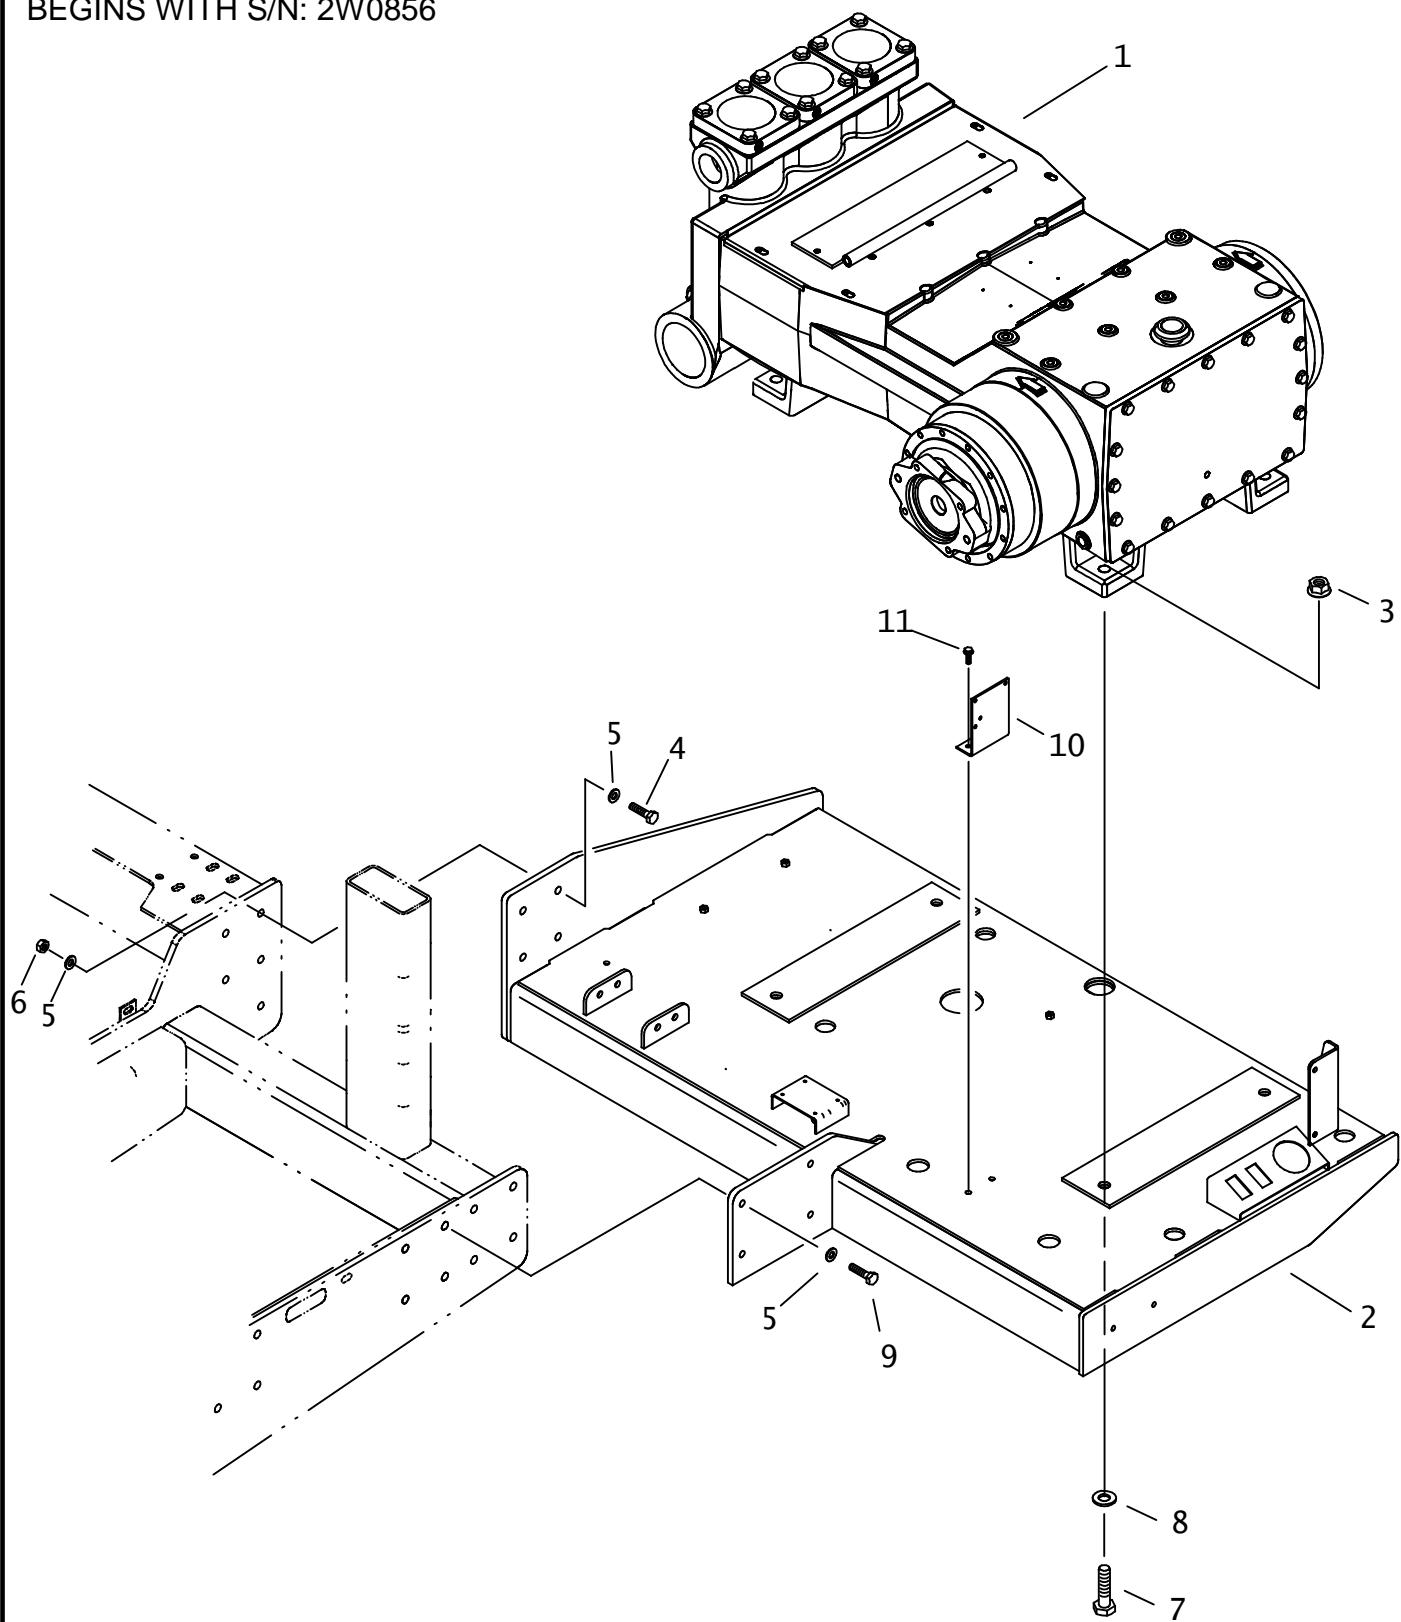

# FLUID PUMP MOUNTING (JT)

BEGINS WITH S/N: 2W0856


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	153-776	1	FLUID PUMP	
2.	310-997	1	FLUID PUMP MOUNT	
3.	106-356	4	FLG NUT (M20-2.5, 10.9)	
4.	106-477	6	SCREW (M12-1.75 X 45MM, 10.9)	USE 277 LOCTITE OR EQUIVANT
5.	106-397	6	WASHER (M12, HARDENED)	
6.	106-685	6	LOCKNUT(M12-1.75,PRV TRQ,10.9)	
7.	107-127	4	SCREW (M20-2.50 X 80MM, 10.9)	USE 277 LOCTITE OR EQUIVANT
8.	106-399	4	WASHER (M20, HARDENED)	
9.	107-748	4	SCREW (M12-1.75 X 50MM, 10.9)	USE 277 LOCTITE OR EQUIVANT
10.	313-219	1	MOUNT BRACKET	
11.	106-162	2	FLG SCREW (M8-1.25 X 20MM)	

NOT SHOWN:

FOOTNOTES:

NOTE:

# FLUID PUMP PLUMBING DISCHARGE SIDE

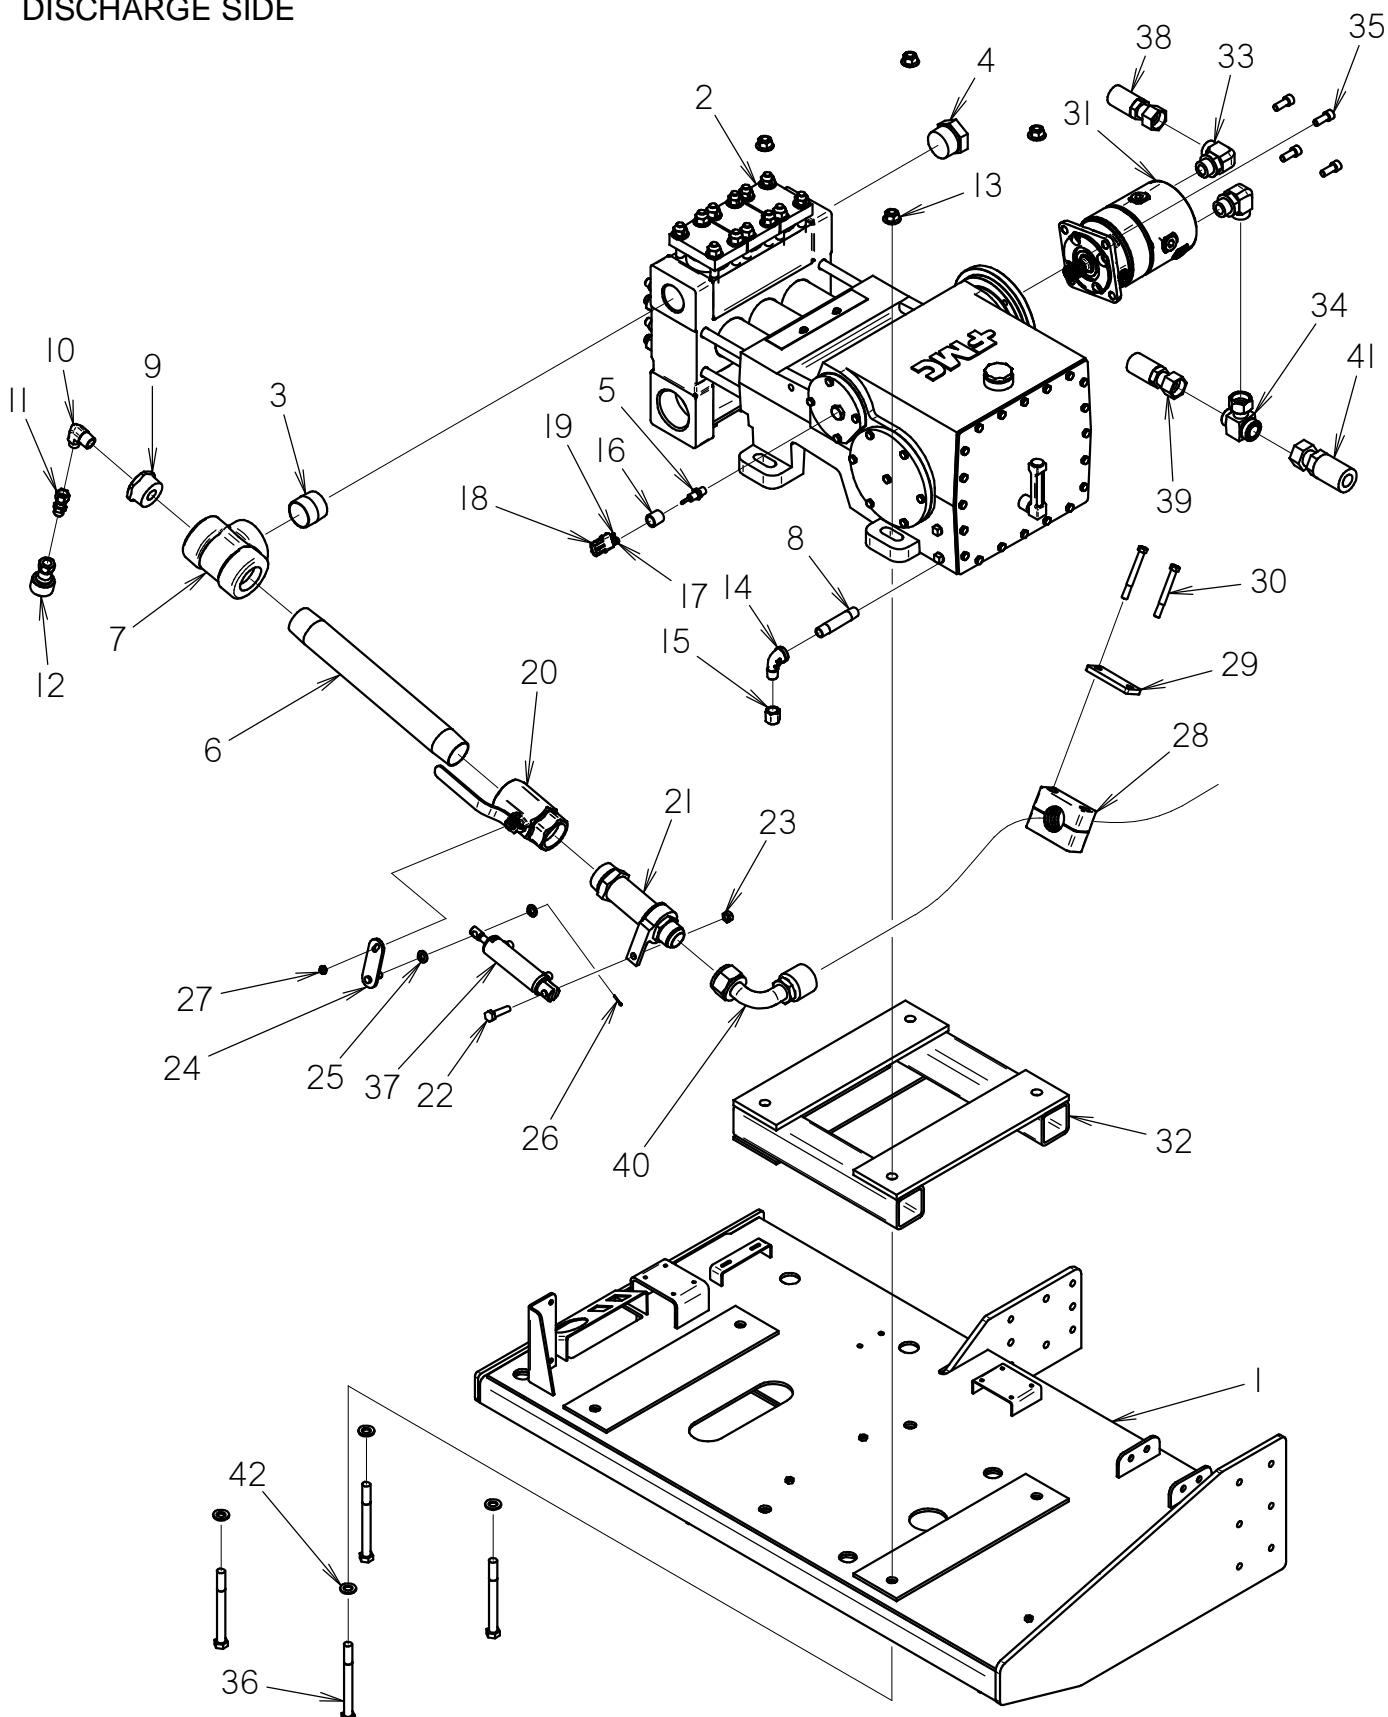

# FLUID PUMP PLUMBING

## DISCHARGE SIDE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	310-997	1	FLUID PUMP MOUNT	
2	149-396	1	MUD PUMP	
3	515-680	1	NIPPLE (32N-2")	
4	156-938	1	PLUG (32N)	
5	216-047	1	SPEED PICK-UP	
6	115-1013	1	NIPPLE (32N-18")	
7	153-344	1	TEE (32NF-32NF-32NF)	
8	115-162	1	NIPPLE (08N-4")	
9	115-064	1	REDUCER (32N-12NF)	
10	154-490	1	CONNECTOR (I2N-08090)	
11	156-732	1	CONNECTOR (08J-080)	
12	159-088	1	QDC BODY (08-08SF)	
13	106-442	4	FLG LKNUT (M16-2.0, PRVTRQ, I0.9)	
14	115-115	1	STREET ELBOW (08N-08NF90)	
15	514-106	1	CAP (08 NF)	
16	211-261	1	HEAT SHRINK TUBING .75" ID	
17	216-026	1	FLEX-GUARD (.25")	
18	215-224	1	3-WAY WP MALE CONNECTOR	
19	214-104	2	PACKARD MALE TERMINAL	
20	149-1001	1	SHUT OFF (32NF-32NF)	
21	149-646	1	CYLINDER MOUNT (32N-24J)	
22	106-334	1	SCREW (M12-I.75 X 50MM)	
23	106-685	1	LOCKNUT (M12-I.75, PRV TRQ, I0.9)	
24	306-388	1	VALVE ARM	
25	106-391	2	WASHER (M12)	
26	105-512	1	COTTER PIN (.094 X .750)	
27	106-018	1	JAM NUT (3/8-NF)	
28	307-524	1	BOLT-ON CLAMP (2"PAIR)	
29	307-532	1	COVER PLATE	
30	107-443	2	BOLT (7/16-NC X 4.0", GD 8)	
31	150-2253	1	HYDRAULIC MOTOR	
32	300-8302	1	PUMP SUPPORT	
33	154-287	2	CONNECTOR (I16S-16090)	
34	153-391	1	SWIVEL BRANCH TEE	
35	105-282	4	BOLT (1/2 - NC X 1.25", SOC)	
36	106-613	4	SCREW (M16-2.00 X 170MM, I0.9)	
37	151-211	1	CYL (1.25" X .50" X 4.00")	
38	150-2830	1	HOSE (I60FX-16FLH90L-20"-4000)	
39	150-2831	1	HOSE (I60FX-I7"-3000)	
40	150-2798	1	HOSE (24JFX-24JFX90 160"-I250)	
41	150-3068	1	HOSE (200FX90M-74"-I2250)	
42	106-398	4	WASHER (M16, HARDENED)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## ANTIFREEZE TANK

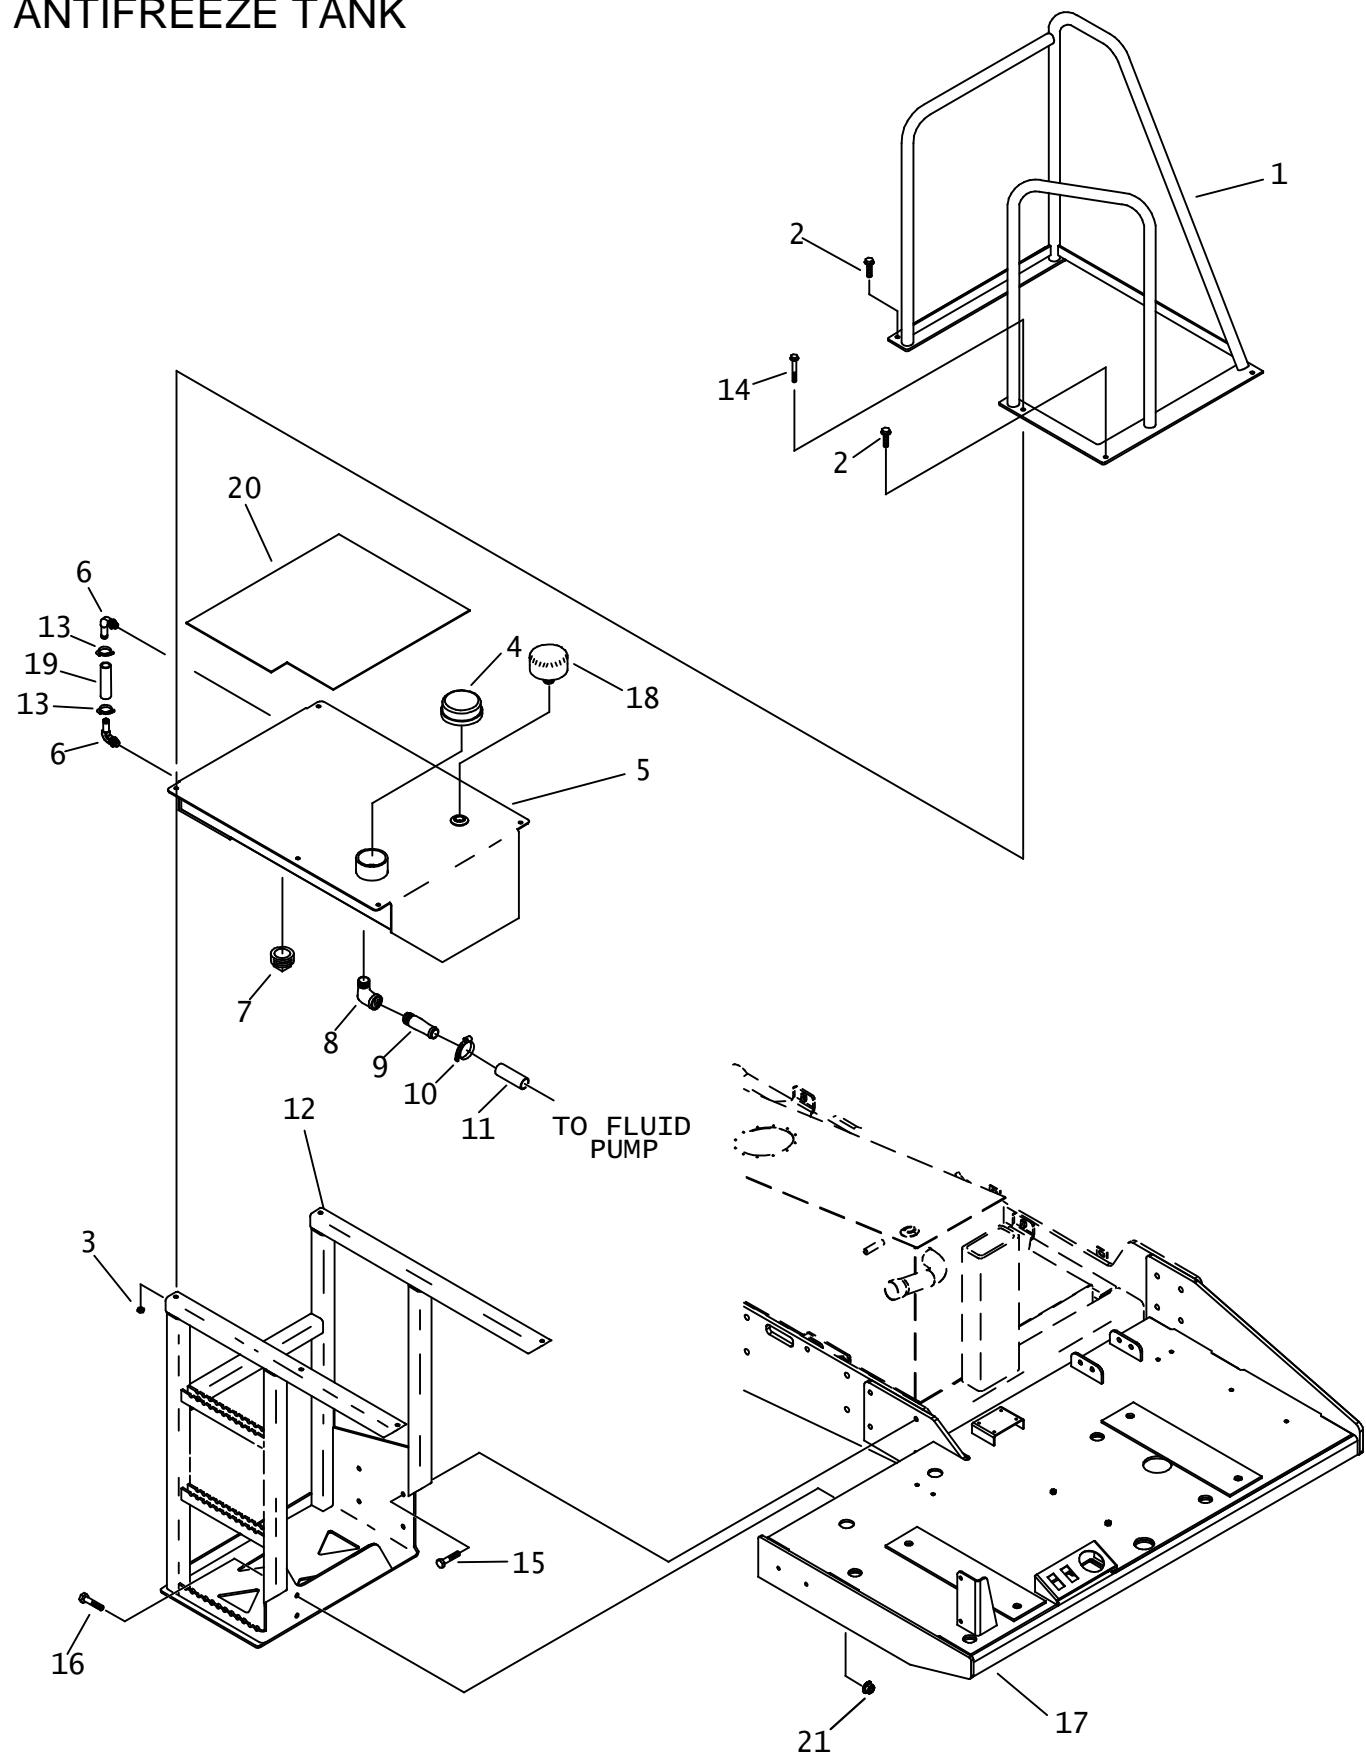

# ANTIFREEZE TANK

REF	PART NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1.	314-777	1	1	HANDRAIL FRAME	
2.	106-383	4	4	FLG BOLT (M10-1.50 X 30mm)	
3.	107-661	5	5	FLG NUT (M10-1.50, PRV TRQ)	
4.	153-763	1	1	PIPE CAP (-48NF)	
5.	314-778	1	1	ANTIFREEZE TANK	
6.	156-108	2	2	S/O COUPLER (08N-08H90)	
7.	114-008	1	1	PLUG (32N, SQ, GALV)	
8.	115-132	1	1	STREET ELBOW (20N-20NF90)	JT
	159-575	1	1	STREET ELBOW (20N-20NF45)	AT
9.	156-940	1	1	S/O COUPLER (20N-20H)	
10.	111-011	1	1	WORM CLAMP (1" TO 1-3/4")	
11.	116-587	-	1	BULK HOSE (1-1/4", SOLD PER 1')	JT, USE 1 @ 24"
	116-587	-	1	BULK HOSE (1-1/4", SOLD PER 1')	AT, USE 1 @ 11"
12.	314-779	1	1	PLATFORM FRAME	
13.	110-217	2	2	WORM CLAMP (2.06"-2.75")	
14.	106-617	1	1	SCREW (M10-1.50 X 80MM)	
15.	107-748	4	4	SCREW (M12-1.75 X 50MM, 10.9)	USE LOCTITE 277 OR EQUIVALENT
16.	106-496	2	2	FLG BOLT (M12-1.75 X 35MM)	
17.	310-997	1	1	FLUID PUMP MOUNT	
18.	159-446	1	1	BREATHER VENT	
19.	118-432	1	1	BULK HOSE (1/2", SOLD PER 1")	USE 1 @ 9"
20.	325-147	1	1	TANK PAD	
21.	106-709	2	2	FLG LK NUT (M12-1.75)	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR  
REPLACEMENT OF O-RINGS

# **FLUID PUMP HYDRAULICS (JT) HYDROSTAT AND FLUID CONTROL VALVE BEGINS WITH S/N: 2W0856**

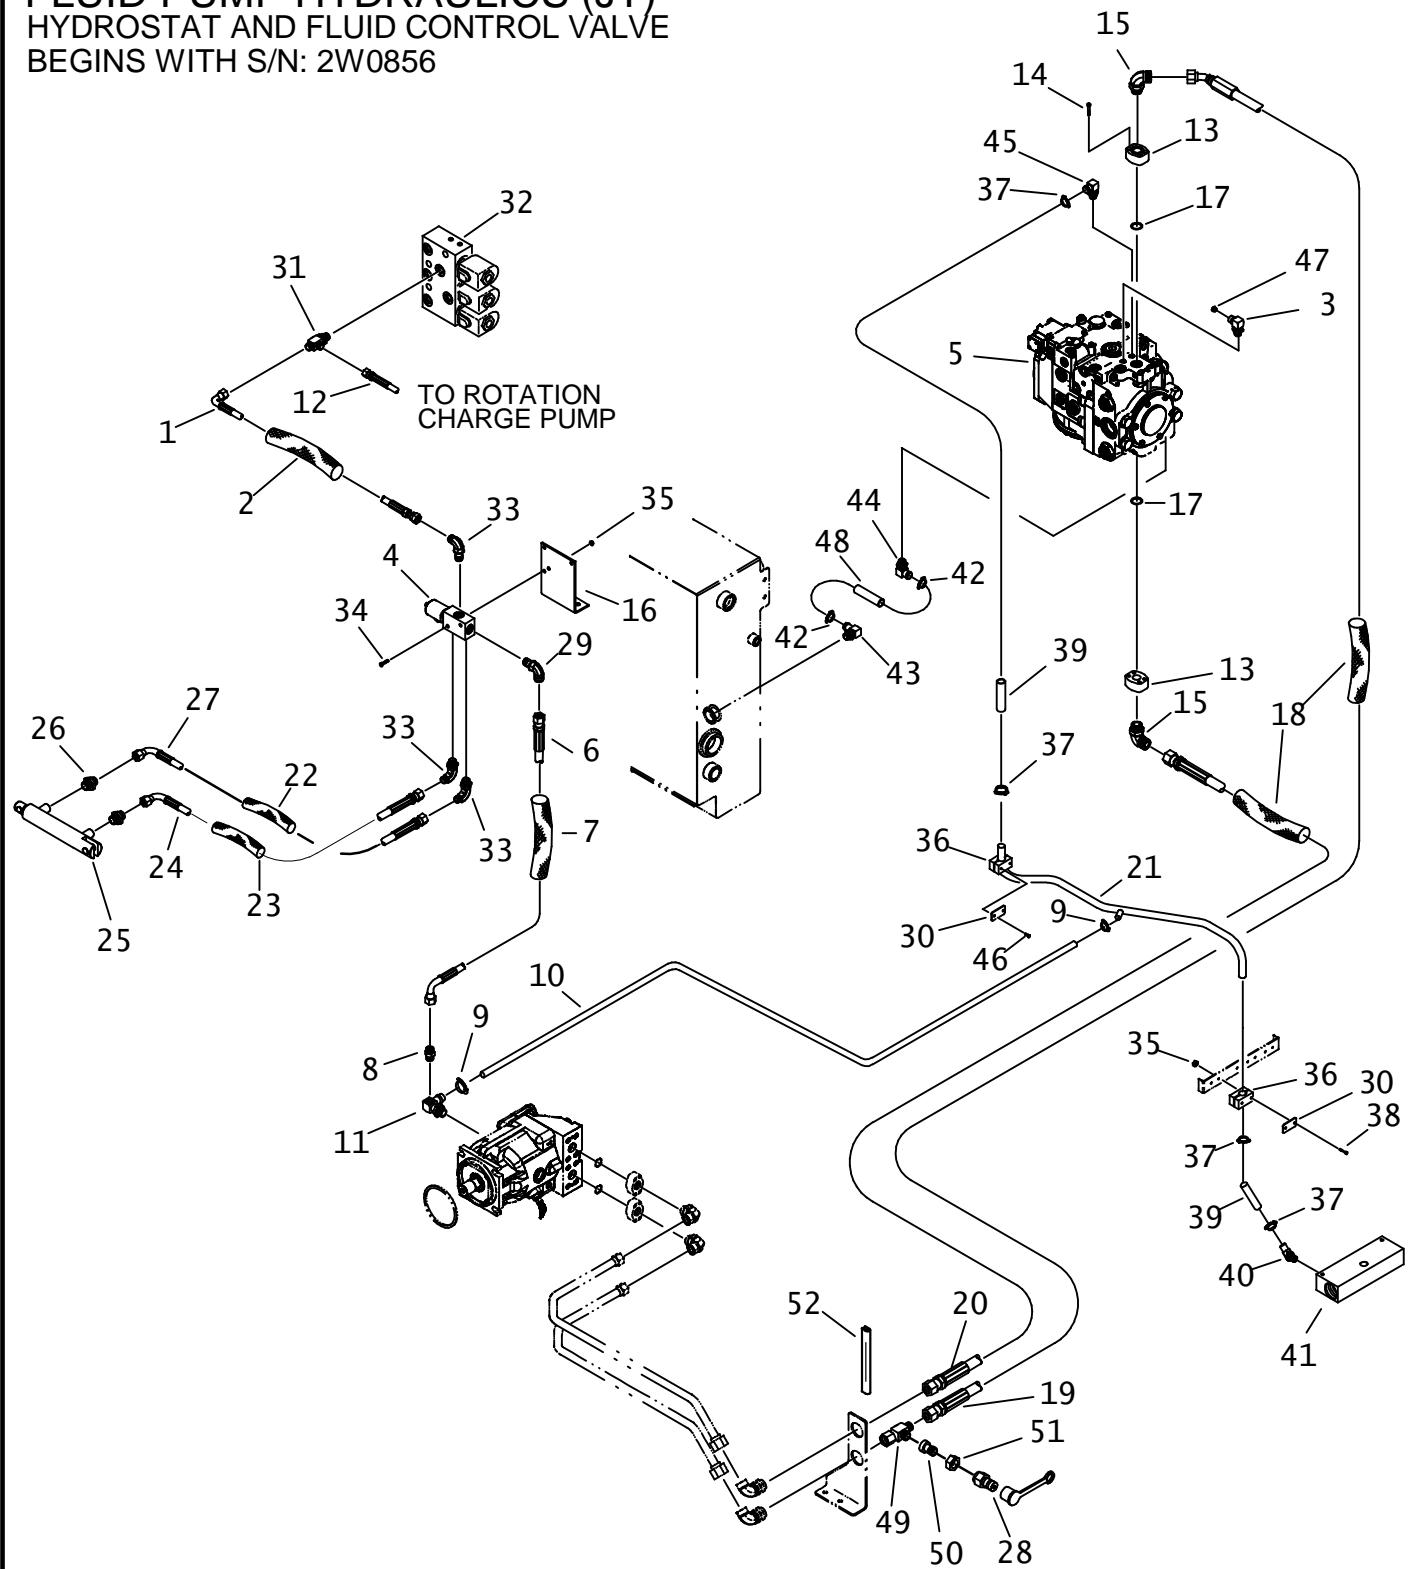

**FLUID PUMP HYDRAULICS (JT)**  
**HYDROSTAT AND FLUID CONTROL VALVE**  
**BEGINS WITH S/N: 2W0856**

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	149-482	1	HOSE (040FX90S-217"-3000)	
2.	117-988	1	ABRASION SLEEVE (1.00" X 216")	
3.	154-226	2	CONNECTOR (040-06S90)	
4.	158-805	1	HYD CONTROL VALVE (4-WAY,2POS)	SEE FOOTNOTE 1
5.	149-903	-	HYDRAULIC PUMP (75 CC)	
6.	515-188	1	HOSE (060FX90S-23"-3000)	
7.	117-611	1	ABRASION SLEEVE (1.00" X 22")	
8.	154-221	1	CONNECTOR (06S-060)	
9.	110-026	2	WORM CLAMP (1/2" TO 1-1/4")	
10.	116-636	AR	BULK HOSE (3/4", SOLD PER 1')	USE 1 @ 120"
11.	155-198	1	S/O COUPLER (12S-12H90-06SF)	
12.	154-670	-	HOSE (040FX-70"-3000)	
13.	514-245	2	HEAD FLANGE (16HFL-16SF)	
14.	105-918	8	BOLT (7/16-NC X 1-1/2", SOC)	
15.	154-287	4	CONNECTOR (16S-16090)	
16.	313-219	-	MOUNT BRACKET	
17.	157-029	2	O-RING (219 D90)	
18.	118-077	2	ABRASION SLEEVE (2.38" X 155")	
19.	157-421	1	HOSE (160FX45-155"-6000)	
20.	153-916	1	HOSE (160FX-155"-6000)	
21.	156-132	1	HYD LINE (-16)	
22.	117-613	1	ABRASION SLEEVE (1.00" X 64")	
23.	117-693	1	ABRASION SLEEVE (1.00" X 60")	
24.	154-705	1	HOSE (040FX90-60"-3000)	
25.	151-211	-	CYL (1.25" X .50" X 4.00")	
26.	154-278	2	CONNECTOR (04S-040)	
27.	515-030	1	HOSE (040FX90S-64"-3000)	
28.	159-159	1	QDC ADAPTER (02-100FX)	
29.	154-342	1	CONNECTOR (06S-06090)	
30.	322-289	2	BACKUP (BOLT -ON)	
31.	154-316	-	RUN TEE (04S-040-040)	
32.	159-194	-	CHARGE MANIFOLD	
33.	154-226	3	CONNECTOR (040-06S90)	
34.	105-106	2	BOLT (1/4-NC X 2")	
35.	105-832	4	FLG LOCKNUT (1/4-NC)	
36.	110-573	4	BOLT-ON CLAMP (1", SOLD PER SET)	
37.	111-011	4	WORM CLAMP (1" TO 1-3/4")	
38.	105-106	2	BOLT (1/4-NC X 2")	
39.	116-094	AR	BULK HOSE (1", SOLD PER 1")	USE 1 @ 57", 1 @ 9.5"
40.	155-230	1	S/O COUPLER (16S-16H45)	
41.	159-414	1	CASE DRAIN MANIFOLD	
42.	110-133	2	WORM CLMP (1-1/16" TO 1-15/16")	
43.	155-168	1	S/O COUPLER (20S-20H90)	
44.	155-149	1	S/O COUPLER (16S-20H90)	
45.	155-146	1	S/O COUPLER (12S-16H90)	
46.	105-818	1	BOLT (1/4-NC X 1-1/2")	
47.	154-296	1	CAP (040F)	
48.	116-587	AR	BULK HOSE (1-1/4", SOLD PER 1')	USE 1 @ 22"
49.	154-409	1	UNION RUN TEE (160FX-160-160)	
50.	154-442	1	REDUCER STEM (100)	
51.	154-340	1	REDUCER NUT (160F)	
52.	115-686	AR	BULK EDGING (5/32", SOLD PER 1")	USE 1 @ 8"


NOTES:

## FOOTNOTES:

1. PORT 1 BARREL, PORT 2 INLET, PORT 3 ROD, PORT 4 RETURN  
REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# FLUID PUMP HYDRAULICS (JT)

BEGINS WITH S/N: 2W0856

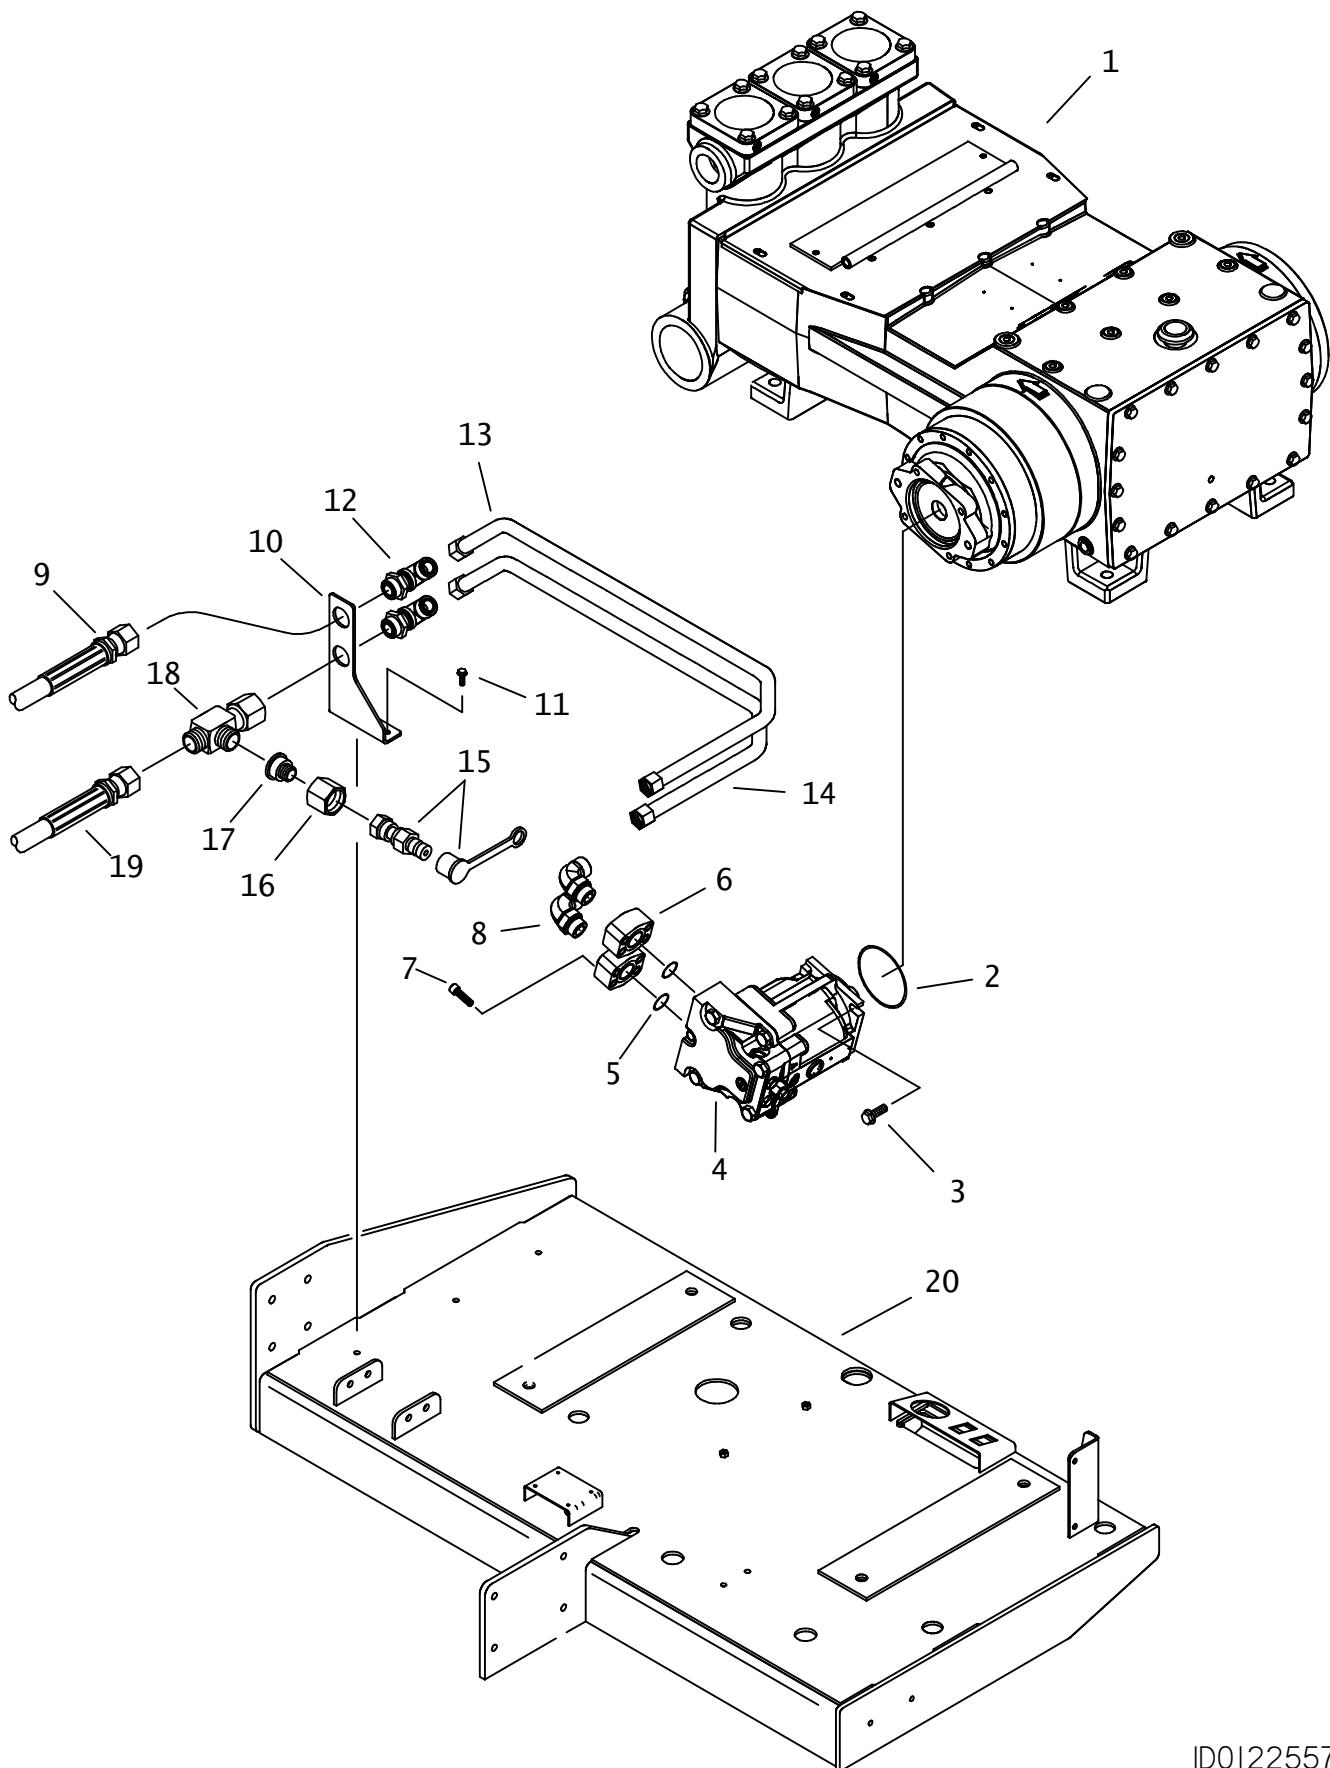

# FLUID PUMP HYDRAULICS (JT)

BEGINS WITH S/N: 2W0856


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	153-776	-	FLUID PUMP	
2.	157-201	1	O-RING (049 D70)	
3.	106-499	4	FLG BOLT (1/2-NC X 1-1/2", GD8)	
4.	149-822	1	HYDRAULIC MOTOR	
5.	157-029	2	O-RING (219 D90)	
6.	514-245	2	HEAD FLANGE (16HFL-16SF)	
7.	105-918	8	BOLT (7/16-NC X 1-1/2", SOC)	
8.	154-287	2	CONNECTOR (16S-16090)	
9.	153-916	-	HOSE (160FX-155"-6000)	
10.	315-770	1	BULKHEAD PLATE	
11.	106-162	2	FLG SCREW (M8-1.25 X 20MM, GD 8)	
12.	154-419	2	BK CONNECTOR (160-16090BK)	
13.	153-824	1	HYD LINE (-16) M1432	
14.	153-825	1	HYD LINE (-16) M1432	
15.	159-159	1	QDC ADAPTER (02-100FX)	
16.	154-340	1	REDUCER NUT (160F)	
17.	154-442	1	REDUCER STEM (100)	
18.	154-409	1	UNION RUN TEE (160FX-160-160)	
19.	157-421	-	HOSE (160FX45-155"-6000)	
20.	310-997	-	FLUID PUMP MOUNT	

NOT SHOWN:

FOOTNOTES:

NOTE:

## FLUID MOTOR PLUMBING (AT)

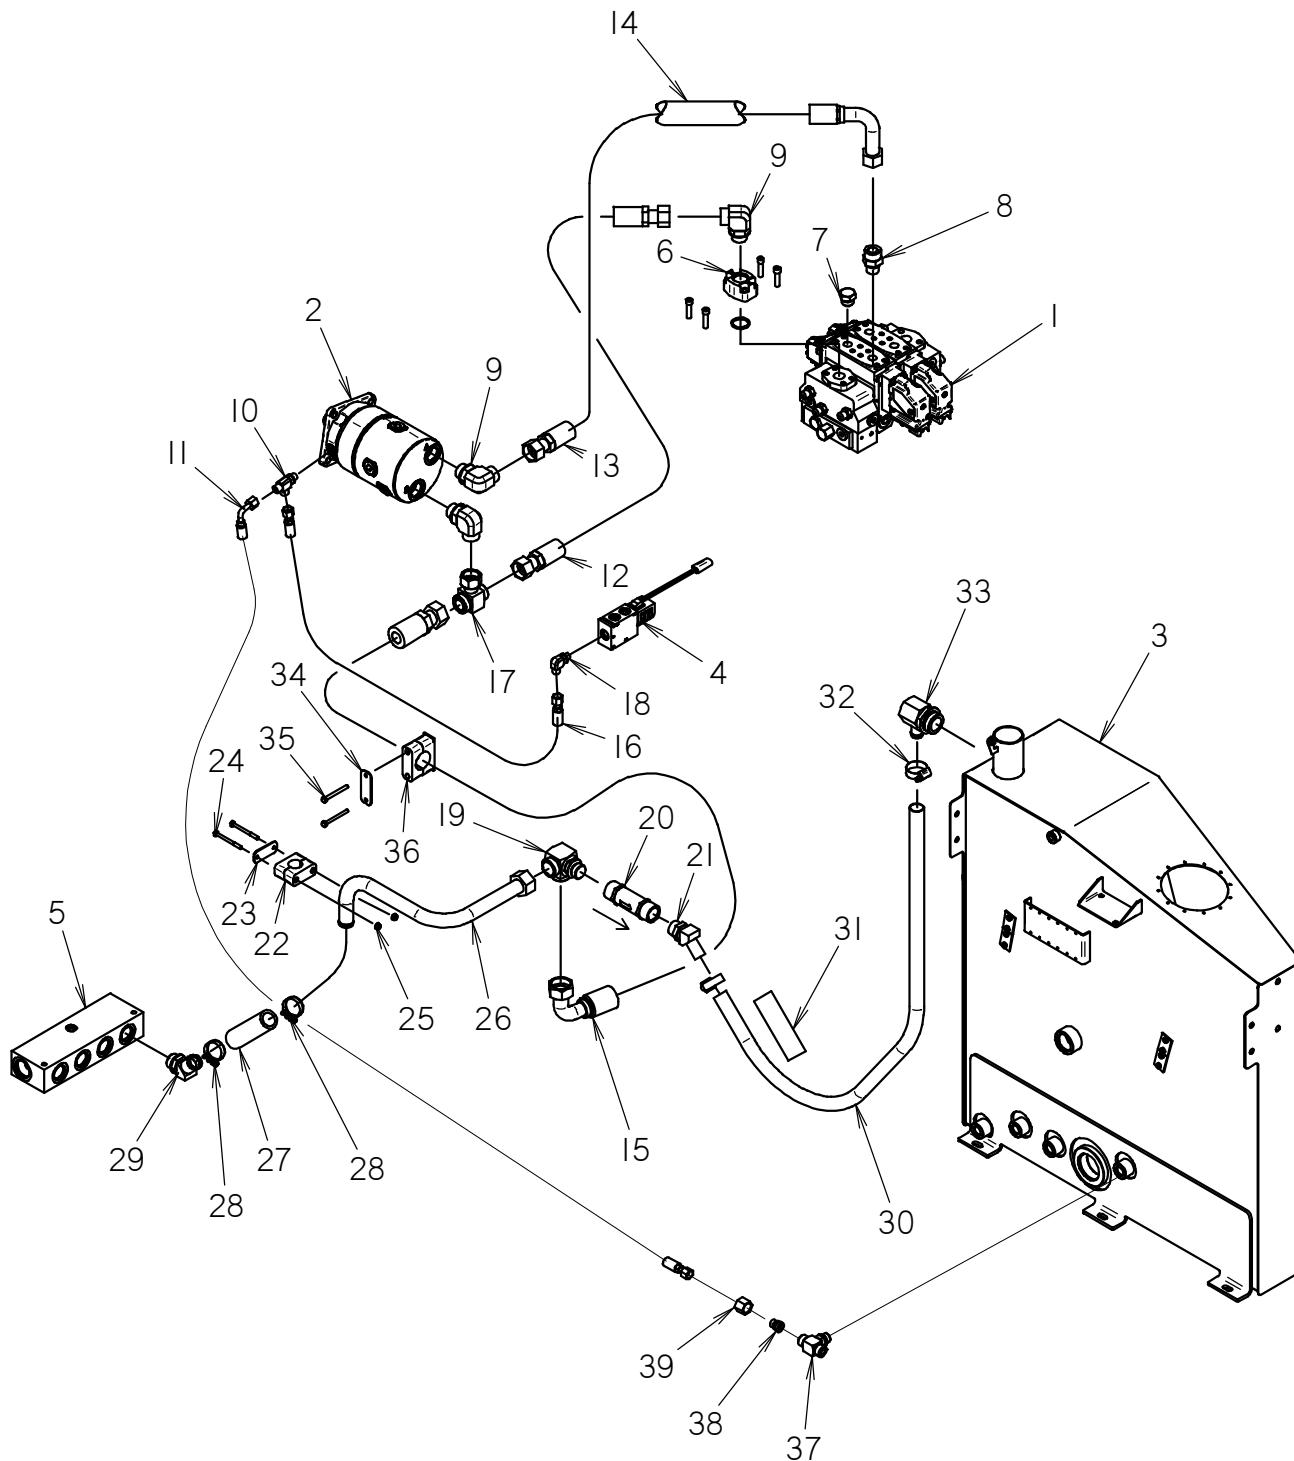

# FLUID MOTOR PLUMBING (AT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-2209	1	HYDRAULIC VALVE	SEAL KIT 511-1799
2	150-2253	1	HYDRAULIC MOTOR	SEAL KIT 500-1805
3	300-828I	1	WELDMENT, HYDRAULIC TANK	
4	158-805	1	HYD CONTROL VALVE (4-WAY,2POS)	
5	159-414	1	CASE DRAIN MANIFOLD	
6	150-2786	1	ANCHOR FLANGE (16HF-16SF)	REFER TO FOOTNOTE I
7	500-302	1	PLUG (I-12 S)	
8	154-306	1	CONNECTOR (I2S-160)	
9	154-287	3	CONNECTOR (I6S-16090)	
10	154-345	1	RUN TEE (06S-060-060)	
11	150-282I	1	HOSE (060FX90S-138"-3000)	
12	150-283I	1	HOSE (I60FX-17"-3000)	
13	150-2830	1	HOSE (I60FX-16FLH90L-20"-4000)	
14	I15-680	1	ABRASION SLEEVE (2.07" X 21")	
15	150-3068	1	HOSE (200FX90M-74"-2250)	
16	150-2834	1	HOSE (060FX-18"-3000)	
17	153-391	1	SWIVEL BRANCH TEE	
18	154-342	1	CONNECTOR (06S-06090)	
19	157-261	1	SPECIAL TEE (I6S-200-200)	
20	153-436	1	FLOW CHECK (I6SF-16SF)	FLOW TOWARDS HYDRAULIC TANK
21	155-230	1	S/O COUPLER (I6S-16H45)	
22	I10-852	1	BLT-ON CLP(I.25", SOLD PER SET)	
23	322-362	1	BACKUP SPACER	
24	I07-196	2	BOLT (I/4-NC X 3.0, GD5)	
25	I05-832	2	FLG LOCKNUT (I/4-NC)	
26	150-3009	1	HYDRAULIC LINE (I-20)	
27	I16-587	10	BULK HOSE (I 1/4", SOLD PER FT)	
28	I49-342	2	T-BOLT CLAMP (I.687")	
29	I15-28I	1	S/O COUPLER (I6S-20H45)	
30	I16-460	1	I" Hose (45")	
31	I17-265	1	ABRASION SLEEVE (I.75" X 50.0")	
32	III-011	2	WORM CLAMP (I" TO I-3/4")	
33	150-3008	1	S/O COUPLER (24S-16HSB90)	
34	I10-973	1	COVER PLATE	
35	I06-967	2	BOLT (I/4-NC X 2-3/4", SIL BRZ)	
36	III-010	1	BOLT-ON CLAMP (I.75" HALF)	
37	154-318	1	BRANCH TEE (I0S-100-100)	
38	154-45I	1	REDUCER STEM (060)	
39	154-310	1	REDUCER NUT (I00F)	

NOT SHOWN:


FOOTNOTES:

- I. ANCHOR FLANGE (REF #6) INCLUDES BOLTS (4X) I05-238 & O-RING I57-029

NOTE:

REFER TO O-RING CHART (800-30I) IN BACK OF BOOK FOR REPLACEMENT OF O-RINGS.

## FLUID SUPPLY (SWIVEL)

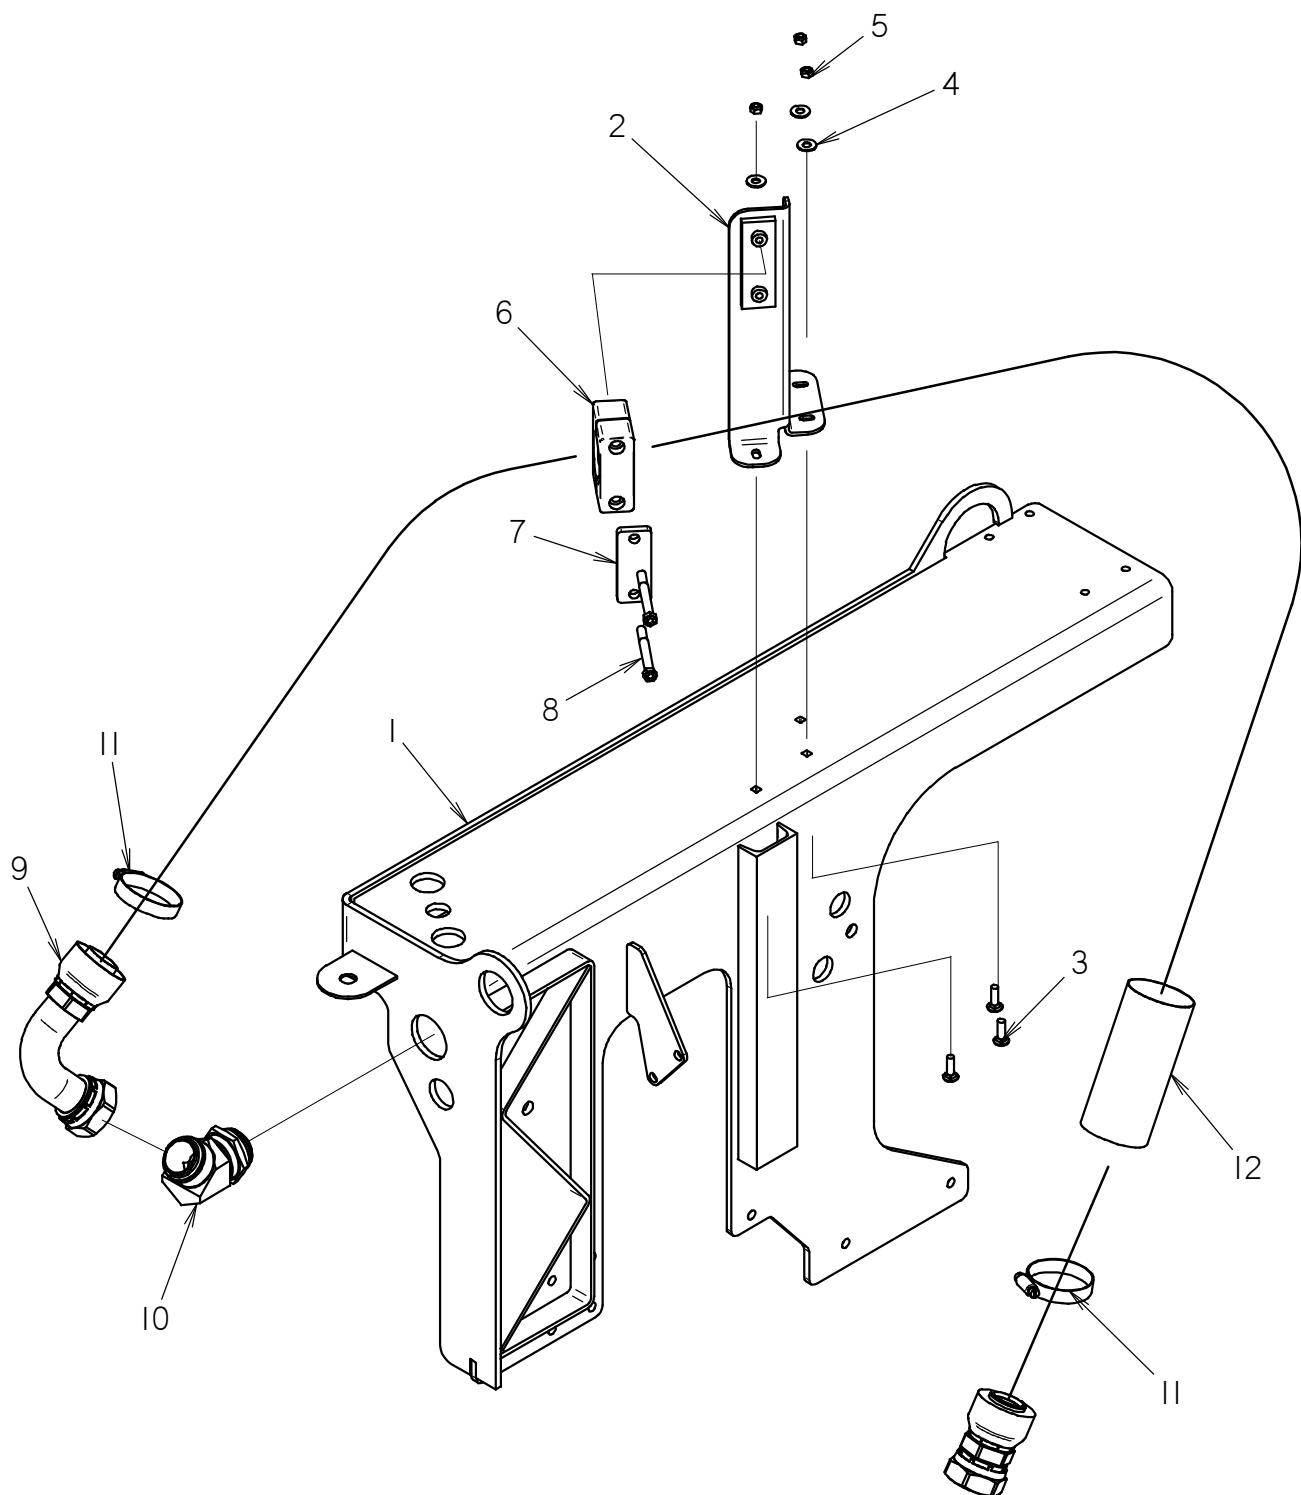

TO WATER SWIVEL

# FLUID SUPPLY (SWIVEL)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-5454	1	CABLE TRAY BRACKET	
2	300-9605	1	HOSE MOUNT	
3	I05-249	3	CARRIAGE BOLT(3/8-NC X 1-1/4")	
4	I05-I18	3	WASHER (3/8")	
5	I05-047	3	LOCKNUT (3/8-NC)	
6	310-994	1	CLAMP HALVES (2 PER SET)	
7	307-532	1	COVER PLATE	
8	I07-443	2	BOLT (7/16-NC X 4.0", GD 8)	
9	I50-2175	1	HOSE (32JFX90S-77"-1300)	
I0	I50-2727	1	BK CONNECTOR (32J45)	O-RING I05-1434
I1	I10-311	2	WORM CLAMP (1-5/16" TO 3-1/4")	
I2	I17-376	1	ABRASION SLEEVE (3.66" X 77")	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## FLUID SUPPLY (JT) WATER SWIVEL

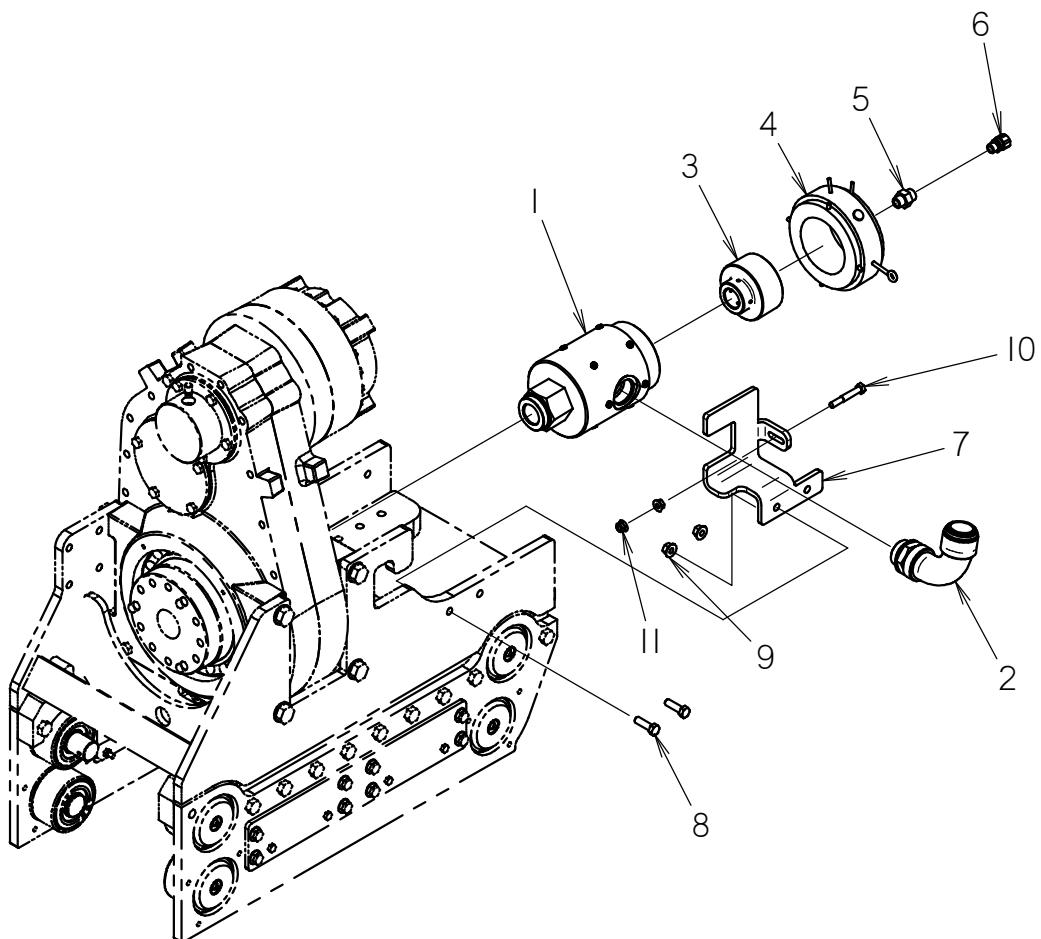

# FLUID SUPPLY (JT)

## WATER SWIVEL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-2670	1	WATER SWIVEL	USE LOCTITE 242 OR EQUIVALENT, USE SWIVEL SEAL KIT 500-2033
2	150-2732	1	CONNECTOR (24S-32J90 SPECIAL)	O-RING I05-I434
3	300-8709	1	COIL MOUNT	SEE FOOTNOTE I
4	214-548	1	COLLECTOR RING	SEE FOOTNOTE I
5	I15-I56	1	REDUCER (08N-06NF)	SEE FOOTNOTE I
6	358-855	1	PACF-OFF FITTING	SEE FOOTNOTE I
7	300-5431	1	SWIVEL TORQUE BRACKET	
8	I06-547	2	SCREW (M12-1.75 X 40MM,I0.9)	
9	I06-709	2	FLG LK NUT (M12-1.75)	
I0	I06-332	1	SCREW (M10-1.50 X 70MM)	SEE FOOTNOTE I
I1	I06-387	2	FLG LOCKNUT (M10-1.50)	SEE FOOTNOTE I

NOT SHOWN:


FOOTNOTES:

- I. FOR USE WITH WIRE LINE KIT ONLY.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## WATER SWIVEL (AT)

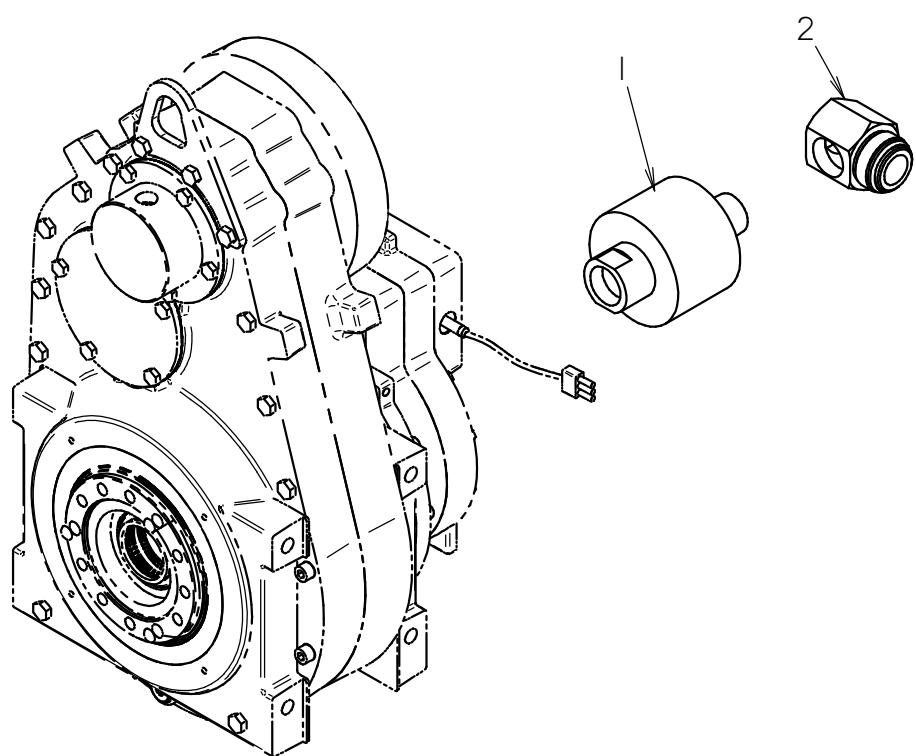

# WATER SWIVEL (AT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	153-208	1	WATER SWIVEL (24N-24NF)	
2	150-2837	1	ELBOW (24NF-32J)	

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0242161

## FLUID SUPPLY

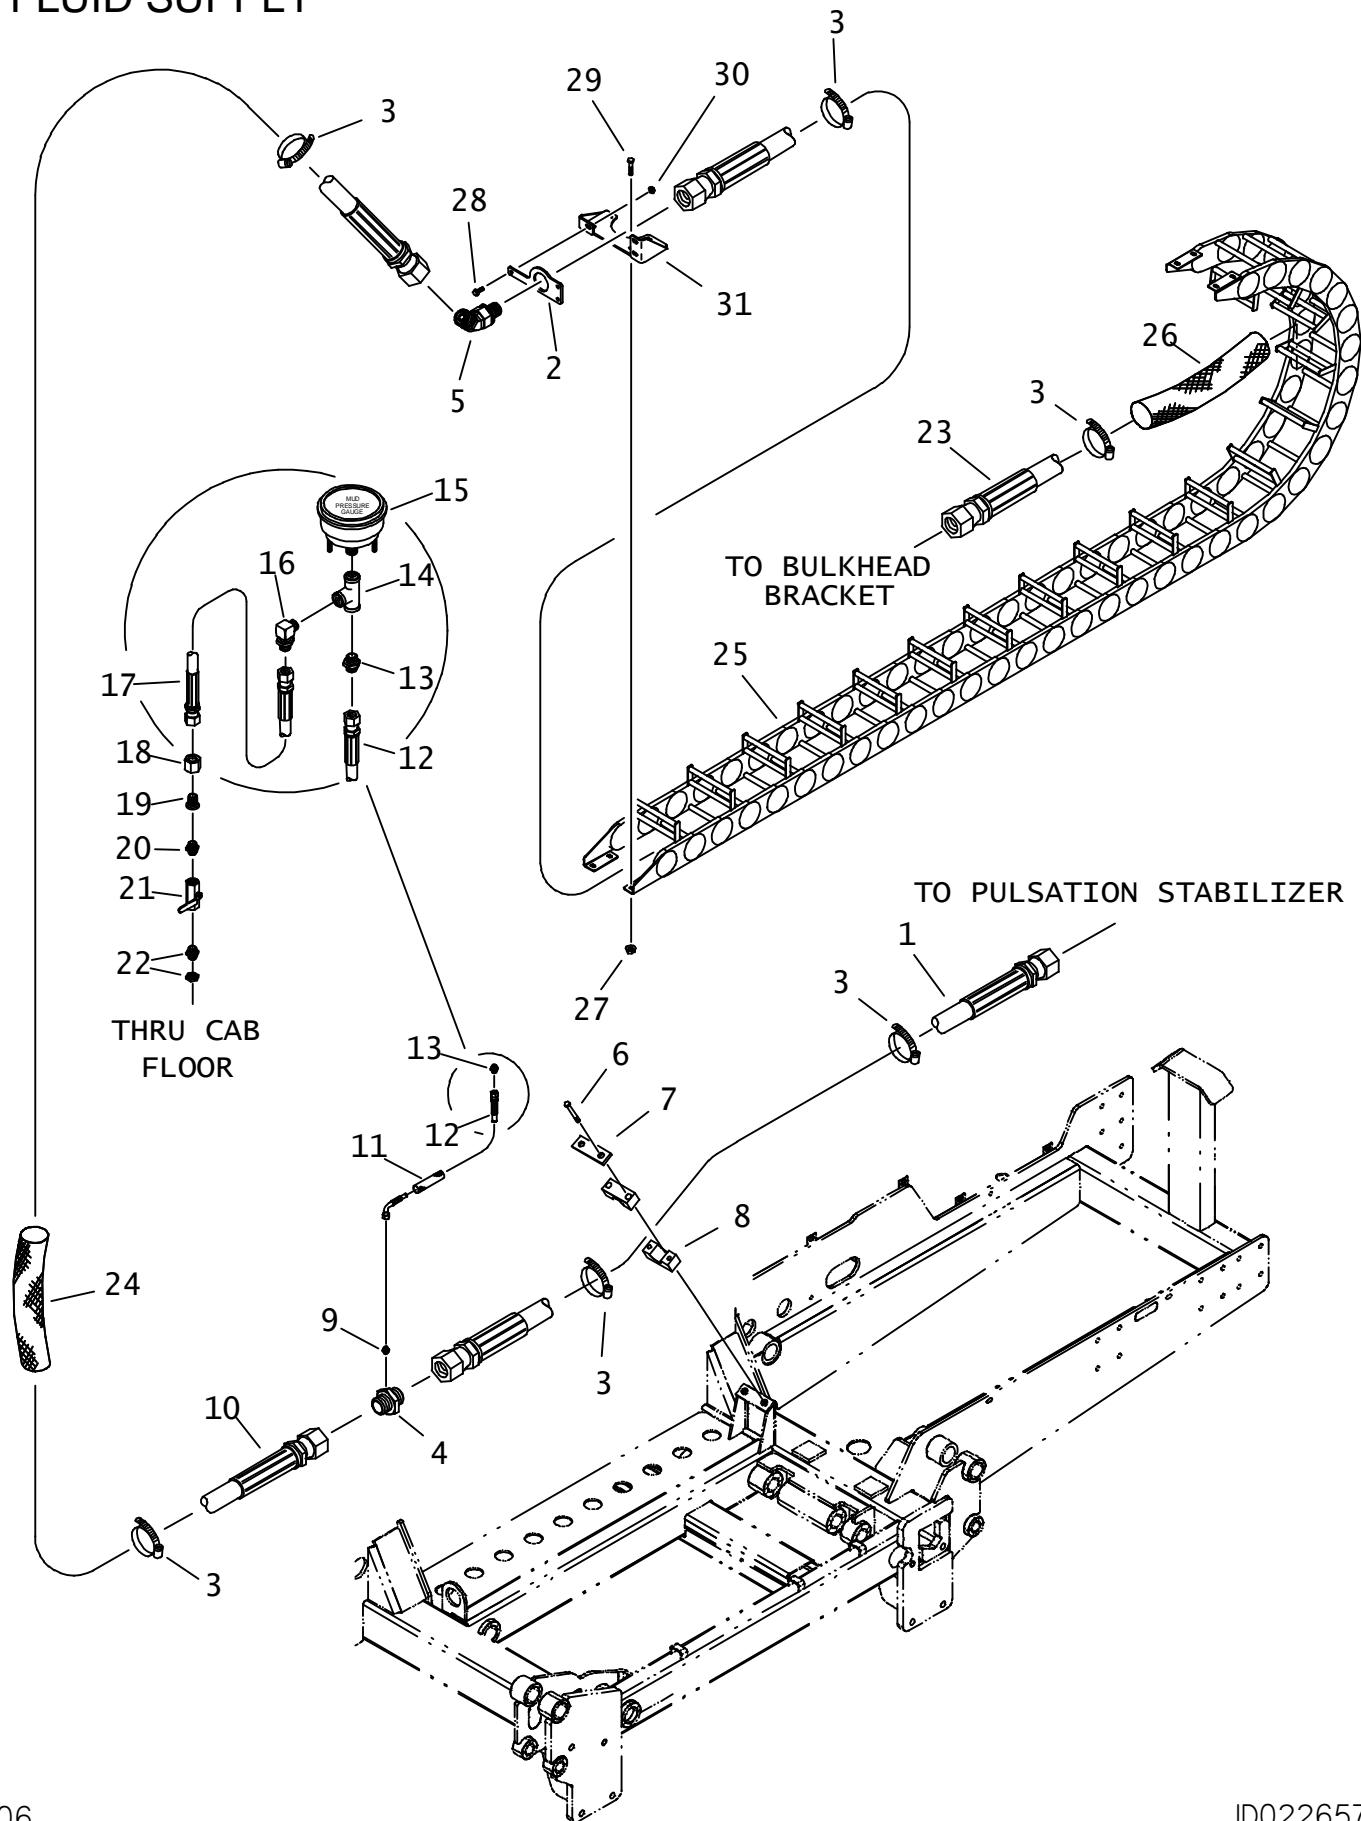

## FLUID SUPPLY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	153-610	1	HOSE (32JFX-84.75"-1300)	JT
	150-2798	1	HOSE (24JFX-24JFX90 157"-1250)	AT
2.	310-263	1	BULKHEAD PLATE	JT
3.	110-311	6	WORM CLAMP (1-5/16" TO 3-1/4")	
4.	150-2711	1	BK CONNECTOR (24S-32J)	JT
	150-2734	1	BK CONNECTOR (24J-32JBK)	AT USE O-RINGS 105-1433 & 105-1434
5.	150-2727	1	BULKHEAD FITTING	USE O-RING 105-1434
6.	107-443	2	SCREW (7/16-NC X 4")	USE LOCTITE 242 OR EQUIVALENT
7.	307-532	1	COVER PLATE	
8.	310-994	1	CLAMP HALVES (2 PER SET)	
9.	154-339	1	CONNECTOR (04N-040)	
10.	153-348	1	HOSE (32JFX-77.75"-1300)	
11.	117-170	1	ABRASION SLEEVE (1" X 197")	
12.	153-297	1	HOSE (040FX90M-198"-3000)	
13.	154-339	1	CONNECTOR (04N-040)	
14.	115-130	1	TEE (04NF-04NF-04NF)	
15.	150-1444	-	PRESSURE GAUGE (2000PSI)	
16.	154-482	1	CONNECTOR (04N-04090)	
17.	515-249	1	HOSE (040FX-26"-3000)	
18.	154-272	1	REDUCER NUT (080F)	
19.	154-248	1	REDUCER STEM (040)	
20.	154-349	1	CONNECTOR (08N-080)	
21.	158-579	1	SHUT-OFF (08NF-08NF)	
22.	149-364	1	BK CONN (08N-080)	
23.	150-2176	1	HOSE (32JFX-288"-1300)	
24.	117-376	1	ABRASION SLEEVE (3.66" X 77")	
25.	300-5385	-	HOSE CARRIER	SEE NOT SHOWN FOR SERVICE PARTS
26.	105-1341	1	ABRASION SLEEVE (3.66" X 286")	
27.	105-834	4	FLG LOCKNUT (3/8-NC)	
28.	106-383	3	FLG LK SCREW (M10-1.50 X 30MM)	
29.	107-566	4	CARRIAGE BOLT (3/8-NC X 1.50")	
30.	106-387	3	FLG LOCKNUT (M10-1.50)	
31.	310-268	1	BULKHEAD	

## NOT SHOWN:

190-1677

MOUNTING BRACKET KIT

SERVICE PART KIT FOR 300-5385 HOSE CARRIER


## FOOTNOTES:

## NOTE:

REFER TO THE O-RING CHART (800-301) IN THE BACK OF THE BOOK FOR REPLACEMENT O-RINGS

# FLUID PUMP PLUMBING (JT)

SUCTION SIDE  
BEGINS WITH S/N: 2W0856

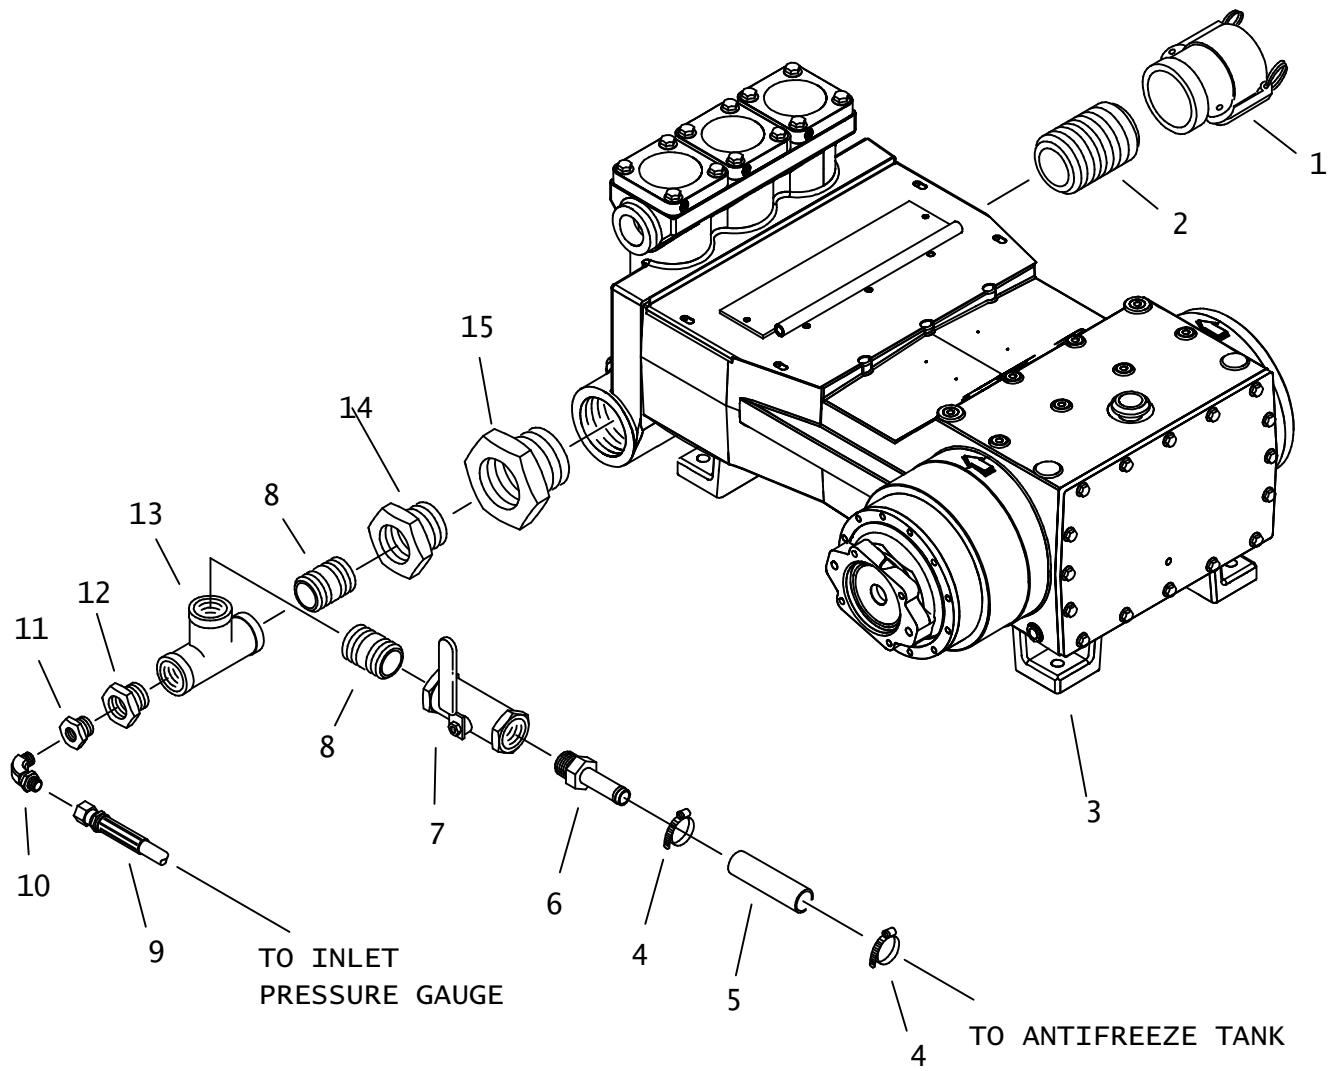

# FLUID PUMP PLUMBING (JT)

## SUCTION SIDE

BEGINS WITH S/N: 2W0856

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	153-914	1	FHC BODY (4-1/2 FHC F X 4" NPTF)	
2.	153-953	1	CLOSE NIPPLE (64N)	
3.	153-776	1	FLUID PUMP	
4.	111-011	2	WORM CLAMP (1" TO 1-3/4")	
5.	116-587	AR	BULK HOSE (1-1/4", SOLD PER 1')	
6.	156-940	1	S/O COUPLER (20N-20H)	
7.	149-786	1	SHUT-OFF (20NF)	
8.	115-207	2	NIPPLE (20N-2")	
9.	154-805	-	HOSE (060FX90S-54"-3000)	
10.	154-420	1	CONNECTOR (08N-06090)	
11.	115-276	1	REDUCER (16N-08NF)	
12.	115-236	1	REDUCER (20N-16NF)	
13.	115-264	1	PIPE TEE (20NF)	
14.	178-407	1	REDUCER (48N-20NF)	
15.	115-252	1	REDUCER (64N-48NF)	


NOT SHOWN:

153-915      FHC PLUG (-64)  
 153-954      REDUCER 4" FHCM-3" FHC

FOOTNOTES:

NOTE:

**INLET GAUGE PLUMBING (JT)**  
SUCTION SIDE  
BEGINS WITH S/N: 2W0856

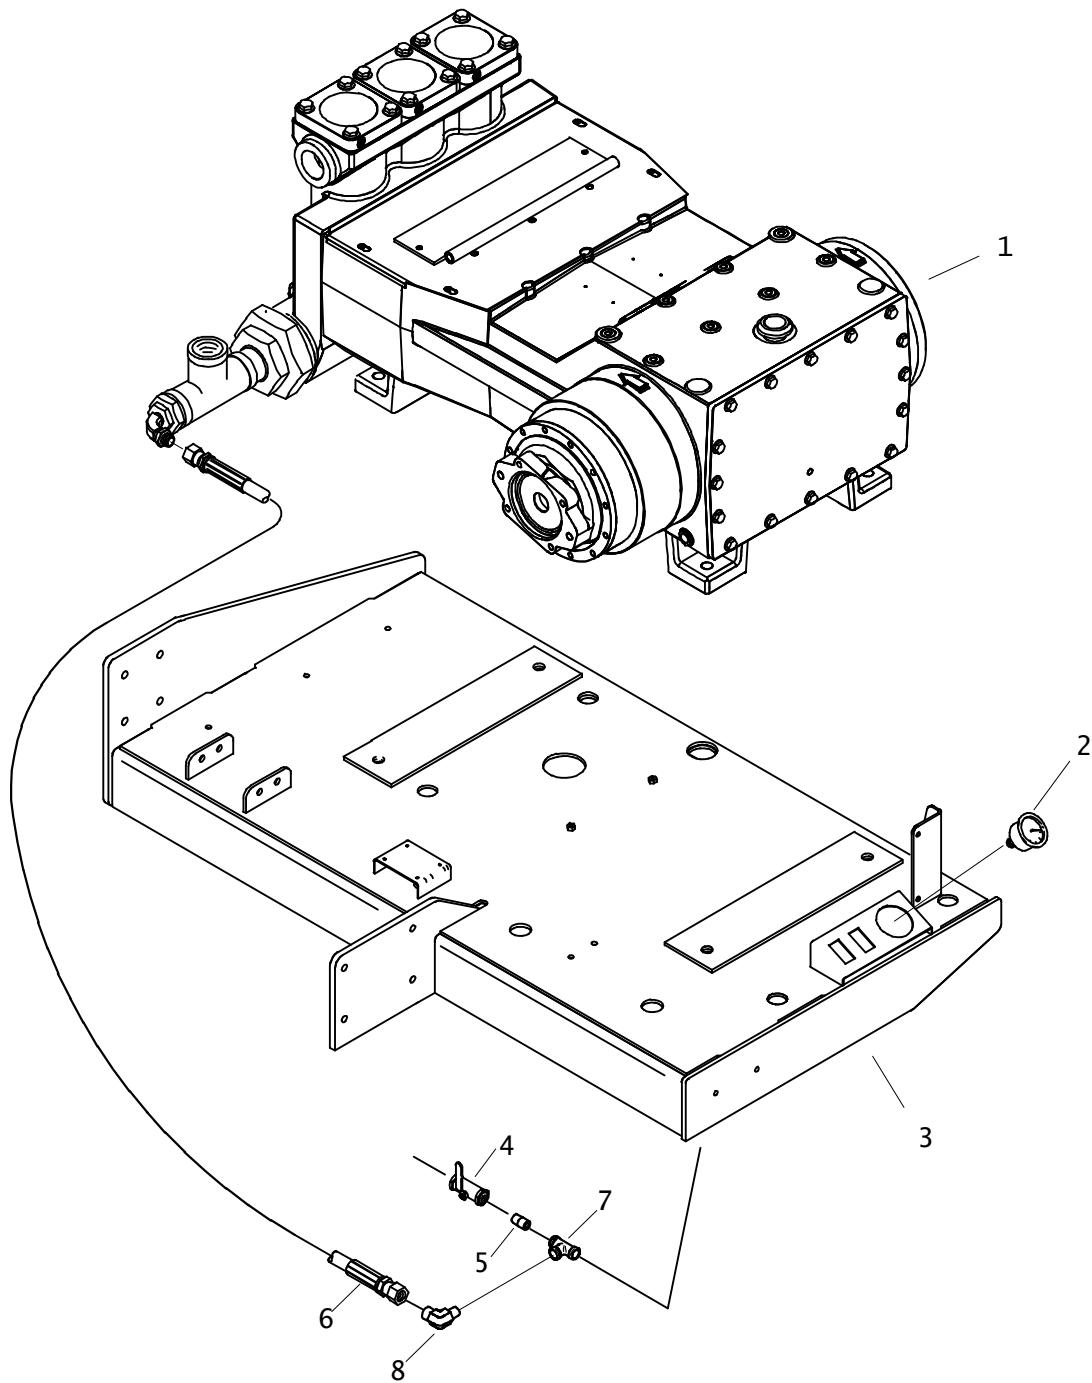

# INLET GAUGE PLUMBING (JT)

SUCTION SIDE

BEGINS WITH S/N: 2W0856


REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
1	FLUID PUMP	153-776	-	1	PRESSURE GAUGE (0-160 PSI)	
2.	PRESSURE GAUGE (0-160 PSI)	258-048	1		FLUID PUMP MOUNT	
3.	FLUID PUMP MOUNT	310-997	-		SHUT-OFF (04NF-04NF, NONVENTED)	
4.	SHUT-OFF (04NF-04NF, NONVENTED)	120-090	1		ALL THREAD (04N) SCH 80	
5.	ALL THREAD (04N) SCH 80	115-129	1		HOSE (060FX90S-54"-3000)	ENDS WITH S/N: 2Z1021
6.	HOSE (060FX90S-54"-3000)	154-805	1		HOSE (060FX90-69"-3000-AR)	BEGINS WITH S/N: 2Z1022
7.	HOSE (060FX90-69"-3000-AR)	149-193	1		TEE (04NF-04NF-04NF)	
8.	TEE (04NF-04NF-04NF)	115-130	1		CONNECTOR (04N-06090)	
		149-039	1			

NOT SHOWN:

FOOTNOTES:

NOTE:

## FLUID PUMP PLUMBING (AT) SUCTION

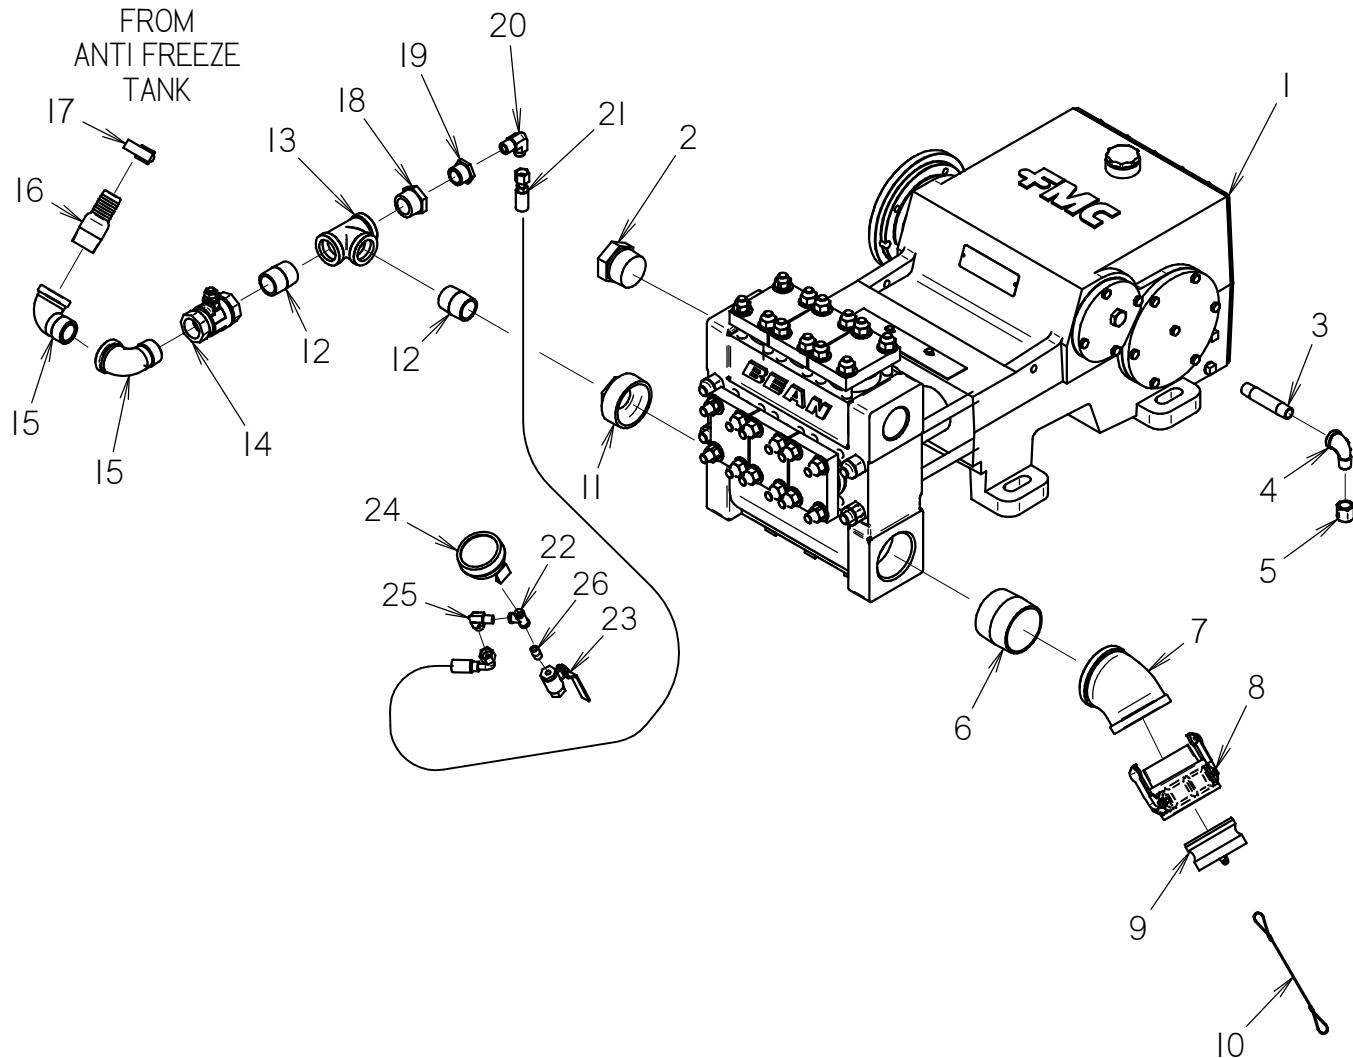

# FLUID PUMP PLUMBING (AT)

## SUCTION


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I49-396	1	MUD PUMP	
2	I56-938	1	PLUG (32N)	
3	I15-162	1	NIPPLE (08N-4")	
4	I15-I15	1	STREET ELBOW (08N-08NF90)	
5	5I4-106	1	CAP (08 NF)	
6	I15-299	1	NIPPLE (48N-3")	
7	I54-486	1	ELBOW (48NF-48NF45)	
8	5I4-386	1	FHC BODY (3 1/2" FHC X 3" NPT)	
9	I53-255	1	FHC PLUG I-56	
10	3I3-759	1	LANYARD	
11	I78-407	1	REDUCER (48N-20NF)	
12	I15-207	2	NIPPLE (20N-2")	
13	I15-264	1	PIPE TEE (20NPT-F)	
14	I49-786	1	SHUT-OFF (20NF)	
15	I15-I32	2	STREET ELBOW (20N-20NF90)	
16	I56-940	1	SO COUPLER (20N-20H)	
17	III-011	1	WORM CLAMP (1" TO 1-3/4")	
18	I15-236	1	REDUCER (20N-16NF)	
19	I15-276	1	REDUCER (16N-08NF)	
20	I54-420	1	CONNECTOR (08N-06090)	
21	5I5-I76	1	HOSE (060FX90-38"-3000)	
22	I15-I30	1	TEE (04NF-04NF-04NF)	
23	I20-090	1	SHUT-OFF VALVE	
24	258-048	1	Gauge	
25	I49-039	1	CONNECTOR (04N-06090)	
26	I15-I29	1	ALL THREAD (04N) SCH 80	

NOT SHOWN:

FOOTNOTES:

NOTE:

**FLUID PUMP PLUMBING (JT)**  
DISCHARGE SIDE / WASH WAND CONNECTION  
BEGINS WITH S/N: 2W0856

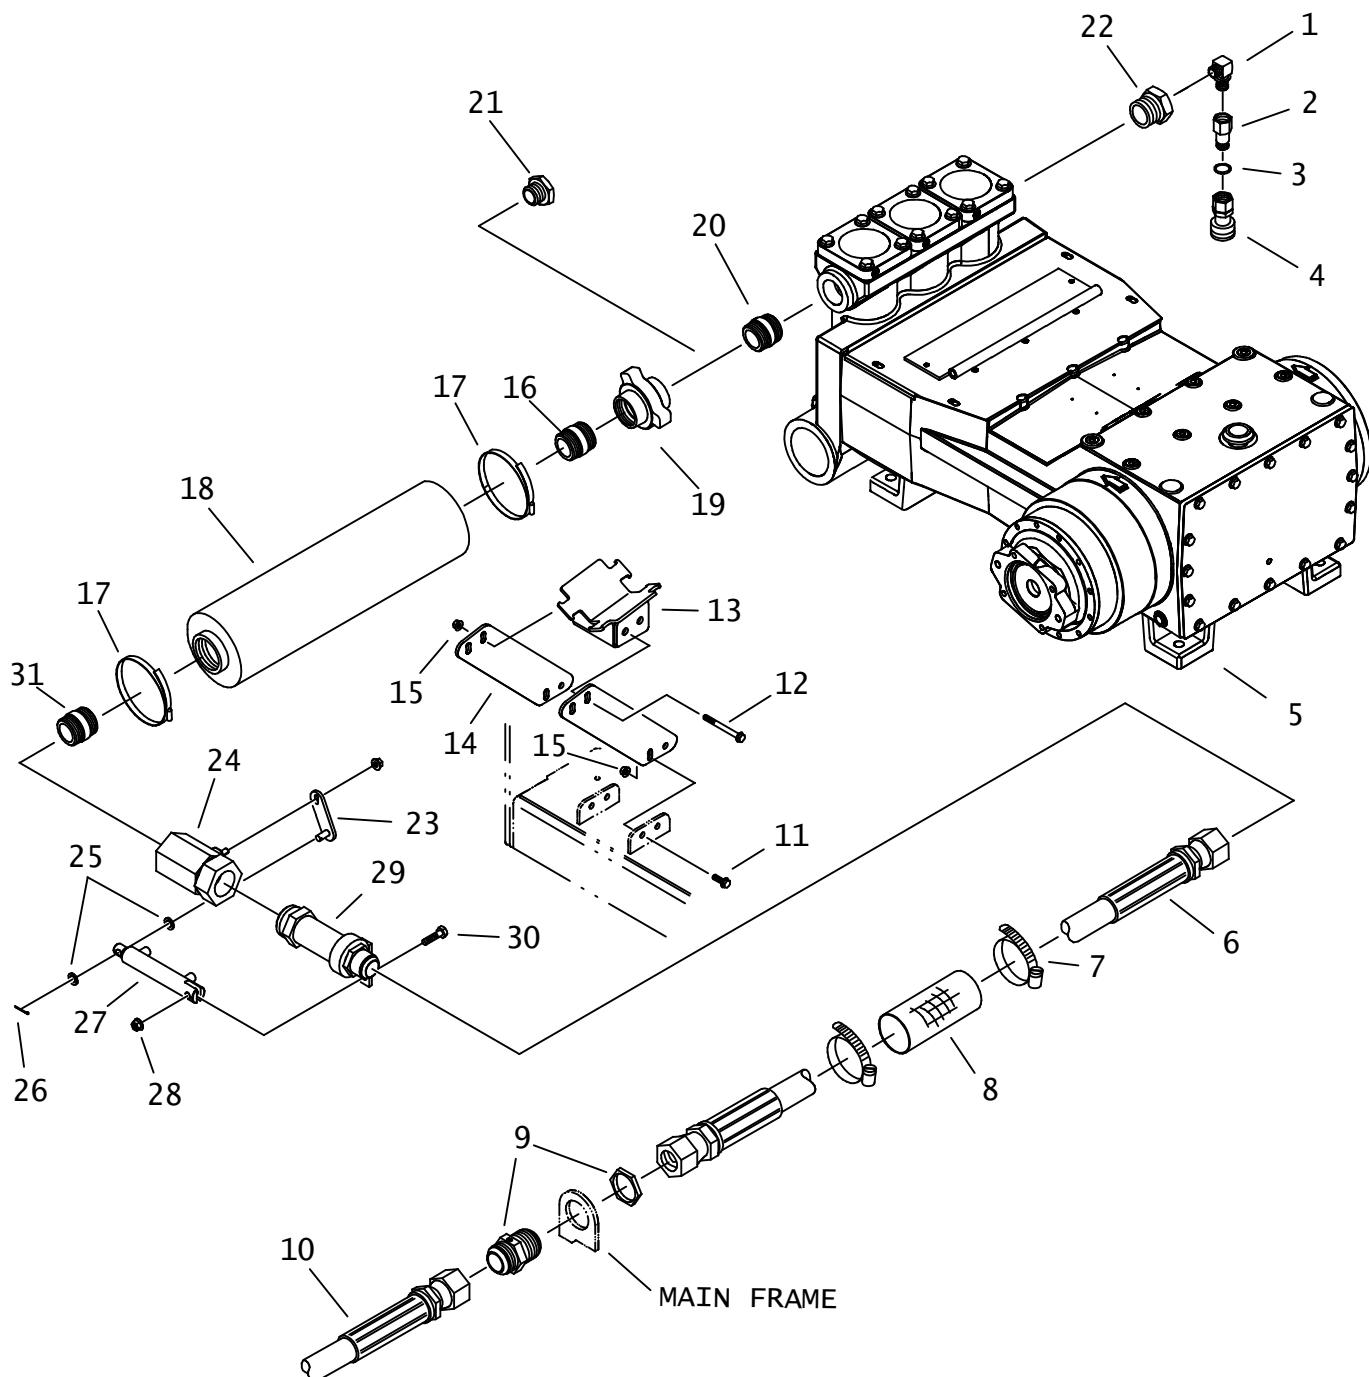

**FLUID PUMP PLUMBING (JT)**  
**DISCHARGE SIDE / WASH WAND CONNECTION**  
**BEGINS WITH S/N: 2W0856**

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-490	1	CONNECTOR (12N-08090)	
2.	156-732	1	CONNECTOR (08J-080)	
3.	155-706	1	O-RING (908 D90)	
4.	159-088	1	QDC BODY (08-08SF)	
5.	153-776	-	FLUID PUMP	
6.	153-610	-	FLUID HOSE (32JFX-84.75"-1300)	
7.	110-311	2	WORM CLAMP (1-5/16" TO 3-1/4")	
8.	117-637	-	ABRASION SLEEVE (3.66" X 90")	
9.	150-2711	-	BK CONNECTOR (32J-32JBK)	USE O-RING 105-1434
10.	153-348	-	HOSE (32JFX-77.75"-1300)	
11.	106-164	4	FLG LK SCREW (M10-1.50 X 30MM)	
12.	106-639	2	SCREW (M10-1.50 X 160MM)	
13.	315-146	1	DAMPENER MOUNT	
14.	316-594	2	MOUNT PLATE	
15.	106-387	6	FLG LOCKNUT (M10-1.50)	
16.	515-680	1	NIPPLE (32N-2")	
17.	110-656	2	WORM CLAMP (2-1/2" TO 8-1/2")	
18.	313-485	1	PULSATION DAMPNER (DISCHARGE)	SEE FOOTNOTE 1
19.	149-785	1	HEX HD UNION (32NF)	
20.	153-595	1	CONNECTOR (32N-32N8)	
21.	114-008	1	PLUG (32N, SQ, GALV)	NON ON-BOARD FLUID ONLY
22.	115-064	1	REDUCER (32N-12NF)	
23.	306-388	1	VALVE ARM	
24.	149-1001	1	SHUT-OFF (32NF-32NF)	
	191-069	-	BALL VALVE REPAIR KIT	
25.	106-391	2	WASHER (M12)	
26.	105-512	1	COTTER PIN (3/32" X 3/4")	
27.	151-211	1	CYL (1.25" X .50" X 4.00")	
28.	106-685	1	LOCKNUT(M12-1.75, PRV TRQ, 10.9)	USE O-RING 105-1434
29.	150-2733	1	CYLINDER MOUNT (32N-32JBK SPECIAL)	
30.	106-334	1	SCREW (M12-1.75 X 50MM)	
31.	153-952	1	NIPPLE (32N-5") EX HEAVY	


NOT SHOWN:

FOOTNOTES:

1. FOR MAXIMUM PERFORMANCE STABILIZER IS FACTORY INSTALLED WITH NITROGEN (250 PSI). IF SERVICING IN FIELD, COMPRESSED AIR IS ACCEPTABLE.

NOTE:

## FLUID PUMP PLUMBING (AT) DISCHARGE SIDE/WASH WAND CONNECTION

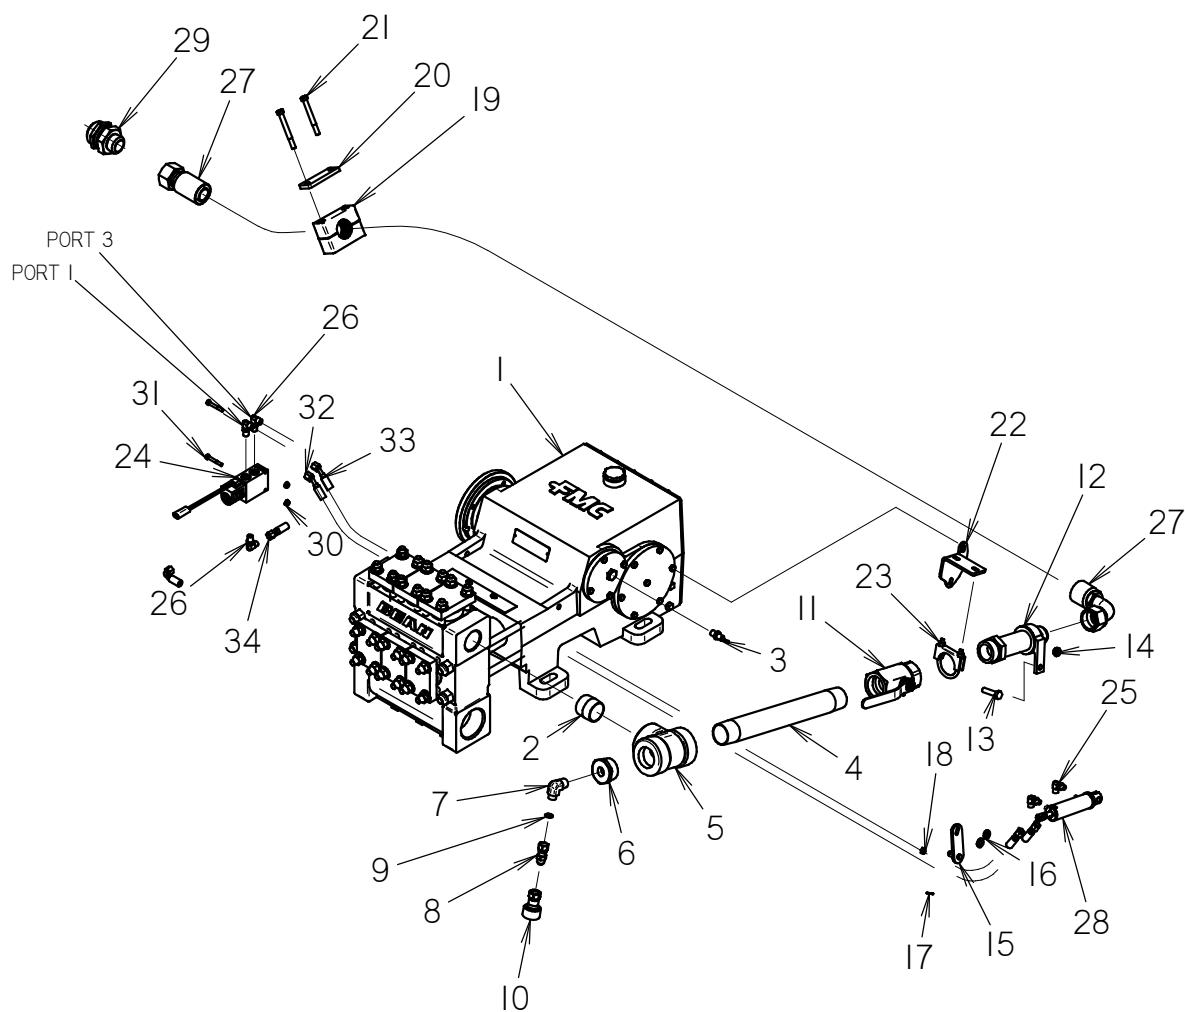

# FLUID PUMP PLUMBING (AT)

## DISCHARGE SIDE/WASH WAND CONNECTION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I49-396	1	MUD PUMP	
2	515-680	1	NIPPLE (32N-2")	
3	216-047	1	SPEED PICK-UP	
4	I15-1013	1	NIPPLE (32N-18")	
5	I53-344	1	TEE (32NF-32NF-32NF)	
6	I15-064	1	REDUCER (32N-12NF)	
7	I54-490	1	CONNECTOR (I2N-08090)	
8	I56-732	1	CONNECTOR (08J-080)	
9	I55-706	1	O-RING (908 D90)	
10	I59-088	1	QDC BODY (08-08SF)	
11	I49-1001	1	SHUT OFF (32NF-32NF)	
12	I49-646	1	CYLINDER MOUNT (32N-24J)	
13	I06-334	1	SCREW (M12-I.75 X 50MM)	
14	I06-685	1	LOCKNUT(M12-I.75,PRV TRQ,10.9)	
15	306-388	1	VALVE ARM	
16	I06-391	2	WASHER (M12)	
17	I05-512	1	COTTER PIN (.094 X .750)	
18	I06-018	1	JAM NUT (3/8-NF)	
19	307-524	1	BOLT-ON CLAMP (2"PAIR)	
20	307-532	1	COVER PLATE	
21	I07-443	2	BOLT (7/16-NC X 4.0", GD 8)	
22	300-8703	1	BRACKET	
23	318-485	1	MUFFLER CLAMP	
24	I58-805	1	HYD CONTROL VALVE (4-WAY,2POS)	REFER TO FOOTNOTE 1 & 2
25	I54-252	2	CONNECTOR (04S-04090)	
26	I54-226	3	CONNECTOR (040-06S90)	
27	I50-2798	1	HOSE (24JFX-24JFX90 160"-I250)	
28	I51-211	1	CYL (I.25" X .50"" X 4.00"")	REFER TO FOOTNOTE 1 & 2
29	I50-2734	1	BK CONNECTOR (24J-32JBK)	O-RINGS I05-1433 & I05-1434
30	I05-832	2	FLG LOCKNUT (I/4-NC)	
31	I05-106	2	BOLT (I/4-NC X 2")	
32	I50-2836	1	HOSE (040FX45-39"-3000)	
33	I50-2836	1	HOSE (040FX45-39"-3000)	
34	I49-482	1	HOSE (040FX90s-217"-3000)	

NOT SHOWN:


## FOOTNOTES:

1. BARREL TO PORT 1.
2. ROD TO PORT 3

## NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## LINER WASH PLUMBING (JT)

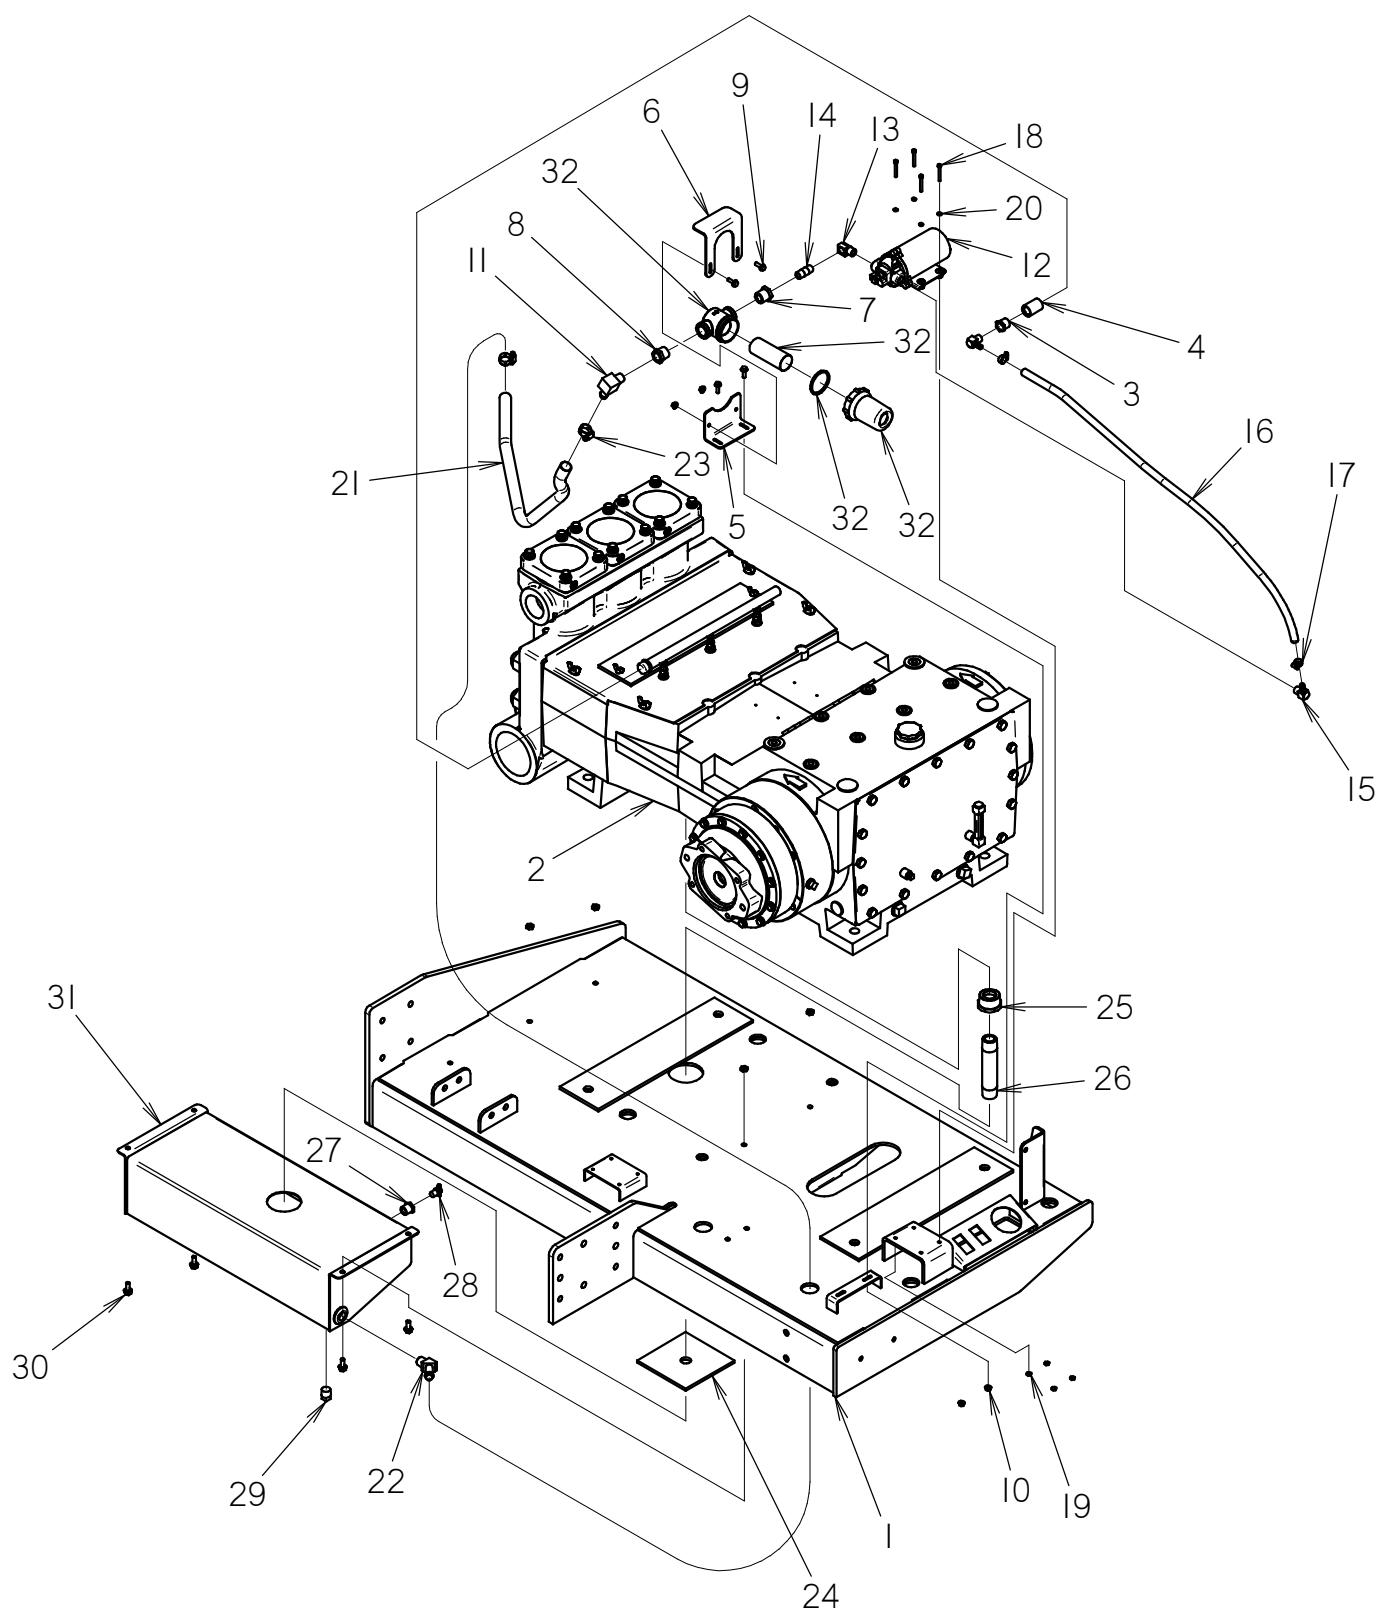

# LINER WASH PLUMBING (JT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	310-997	1	FLUID PUMP MOUNT	
2	153-776	1	FLUID PUMP	
3	115-156	1	REDUCER (08N-06NF)	
4	115-155	1	COLLAR (08NF)	
5	300-8600	1	FILTER BRACKET MIDDLE	
6	300-8601	1	UPPER FILTER BRACKET	
7	115-219	1	REDUCER (12N-06NF)	
8	115-126	1	REDUCER (12N-08NF)	
9	106-161	4	FLG SCREW (M6-1.00 X 20MM)	
10	106-385	4	FLG LOCKNUT (M6-1.00)	
11	514-285	1	S/O COUPLER (08N-10H90)	
12	153-738	1	LINER WASH PUMP	
13	156-260	1	STREET ELBOW (06N-06NF90)	
14	115-103	1	NIPPLE (06N-1.50")	
15	153-871	2	S/O COUPLER (06N-06H90, BRS)	
16	116-881	1	BULK HOSE (375", SOLD PER 1")	@ 40"
17	110-249	2	WORM CLAMP (1/4" TO 5/8")	
18	107-667	4	BOLT (#10-24 X 1-1/2", SOC, GD5)	
19	106-048	4	LOCKNUT (#10-24)	
20	106-205	4	WASHER (.191")	
21	116-855	1	BULK HOSE (625", SOLD PER 1")	@ 30"
22	149-487	1	S/O COUPLER (08N-10H)	
23	110-217	2	WORM CLAMP (7/16" TO 1")	
24	153-223	1	TANK SEAL	
25	514-314	1	REDUCER (24N-16NF)	
26	115-273	1	NIPPLE (16N-6")	
27	115-135	1	REDUCER (08N-04NF)	
28	110-141	1	DRAIN VALVE (04N)	
29	115-112	1	PLUG (08N, SQ)	
30	106-162	4	FLG SCREW (M8-1.25 X 20MM, GD8)	
31	313-773	1	LINER WASH TANK	
32	153-133	1	STRAINER	

NOT SHOWN:

FOOTNOTES:

NOTE:

**FLUID PUMP - FMC (JT)**  
**FLUID END**  
**BEGINS WITH S/N: 2W0856**

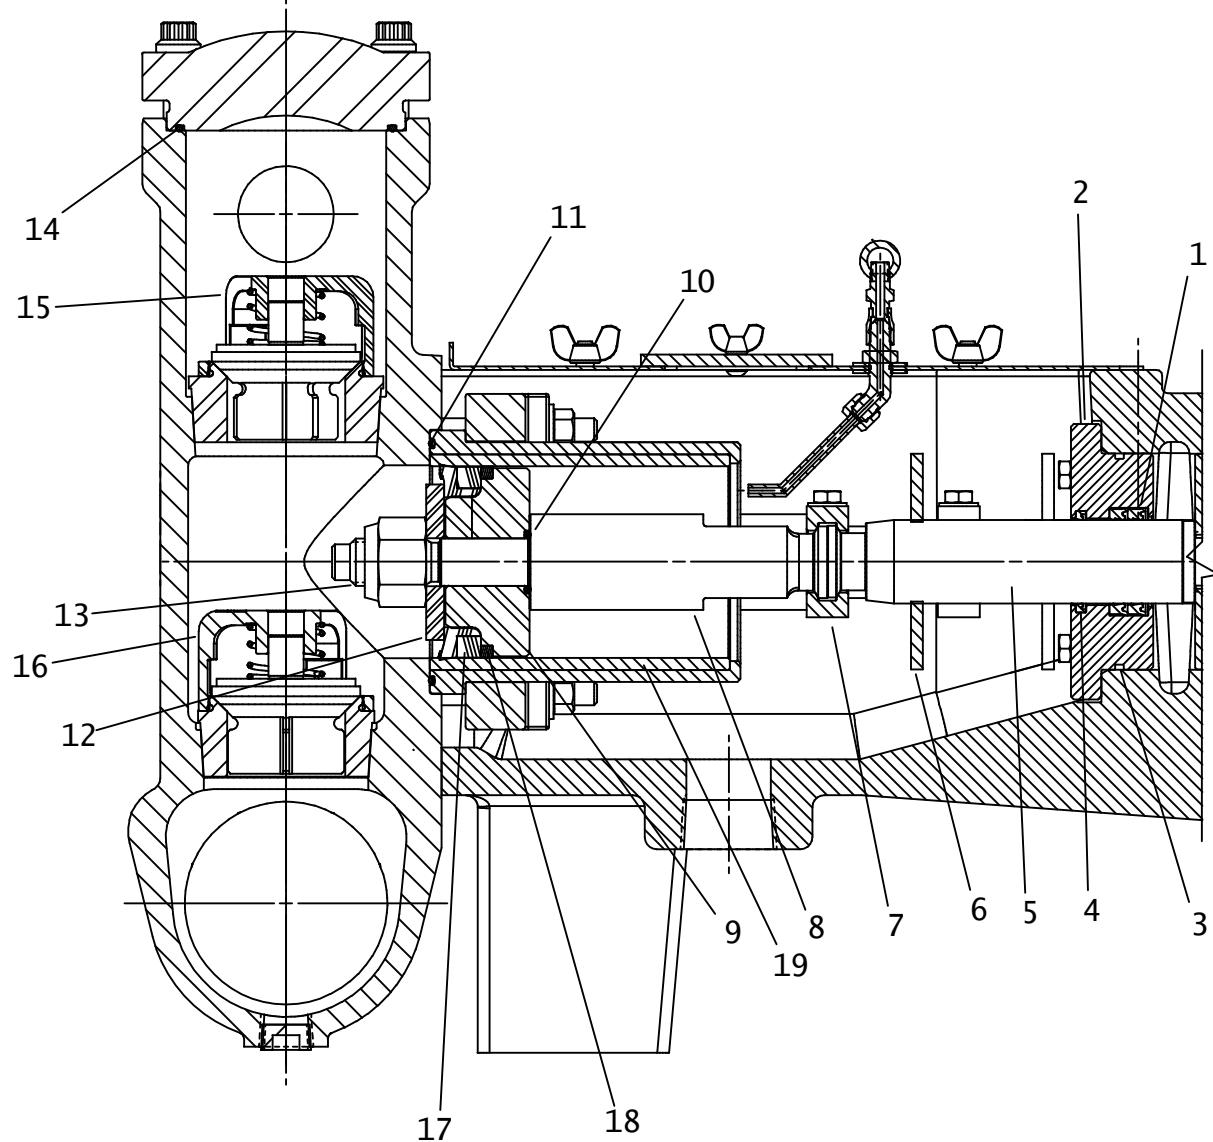

# FLUID PUMP - FMC (JT)

FLUID END

BEGINS WITH S/N: 2W0856

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	499-450	1	VALVE KIT (M14)	INCLUDES REF NO. 14, 15 AND 16
	191-214	1	PISTON / CYL. REPLACEMENT KIT	INCLUDES REF NO. 10, 11, 13, 17, 18 AND 19
	191-215	1	PISTON REPLACEMENT KIT	INCLUDES REF NO. 10, 11, 17 AND 18
1.	157-275	3	PLUNGER ROD SEAL (U-CUP)	
2.	499-457	3	PLUNGER ROD SEAL HOUSING	
3.	157-302	3	O-RING (2-244)	
4.	157-274	3	PLUNGER ROD SEAL (SCRAPER)	
5.	499-456	3	CROSSHEAD	
6.	499-458	3	DEFLECTOR SHIELD	
7.	499-455	3	PLUNGER CLAMP	
8.	499-454	3	PISTON ROD	
9.	499-452	3	PISTON HOLDER	
10.	157-069	3	O-RING (215 D90)	
11.	157-269	3	O-RING (-249 D90)	
12.	499-453	3	PISTON RETAINER	
13.	107-794	3	LOCKNUT (1" NC)	REPLACE WITH NEW WHEN REMOVED. TORQUE TO 250 FT LBS.
14.	N/A	1	O-RING (-245 D70)	
15.	N/A	1	DISCHARGE VALVE	
16.	N/A	1	SUCTION VALVE	
17.	N/A	1	PISTON	
18.	N/A	1	WEAR RING	
19.	500-1421	1	CYLINDER SLEEVE	

NOT SHOWN:


157-272 2 OIL SEAL  
 157-271 1 O-RING (-373 D70)  
 157-268 1 BACK COVER GASKET  
 499-451 AR VALVE PULLER (M14)  
 499-394 1 SIGHT GAGE

FOOTNOTES:

NOTE:

# FLUID PUMP (FLUID END)

120 GPM

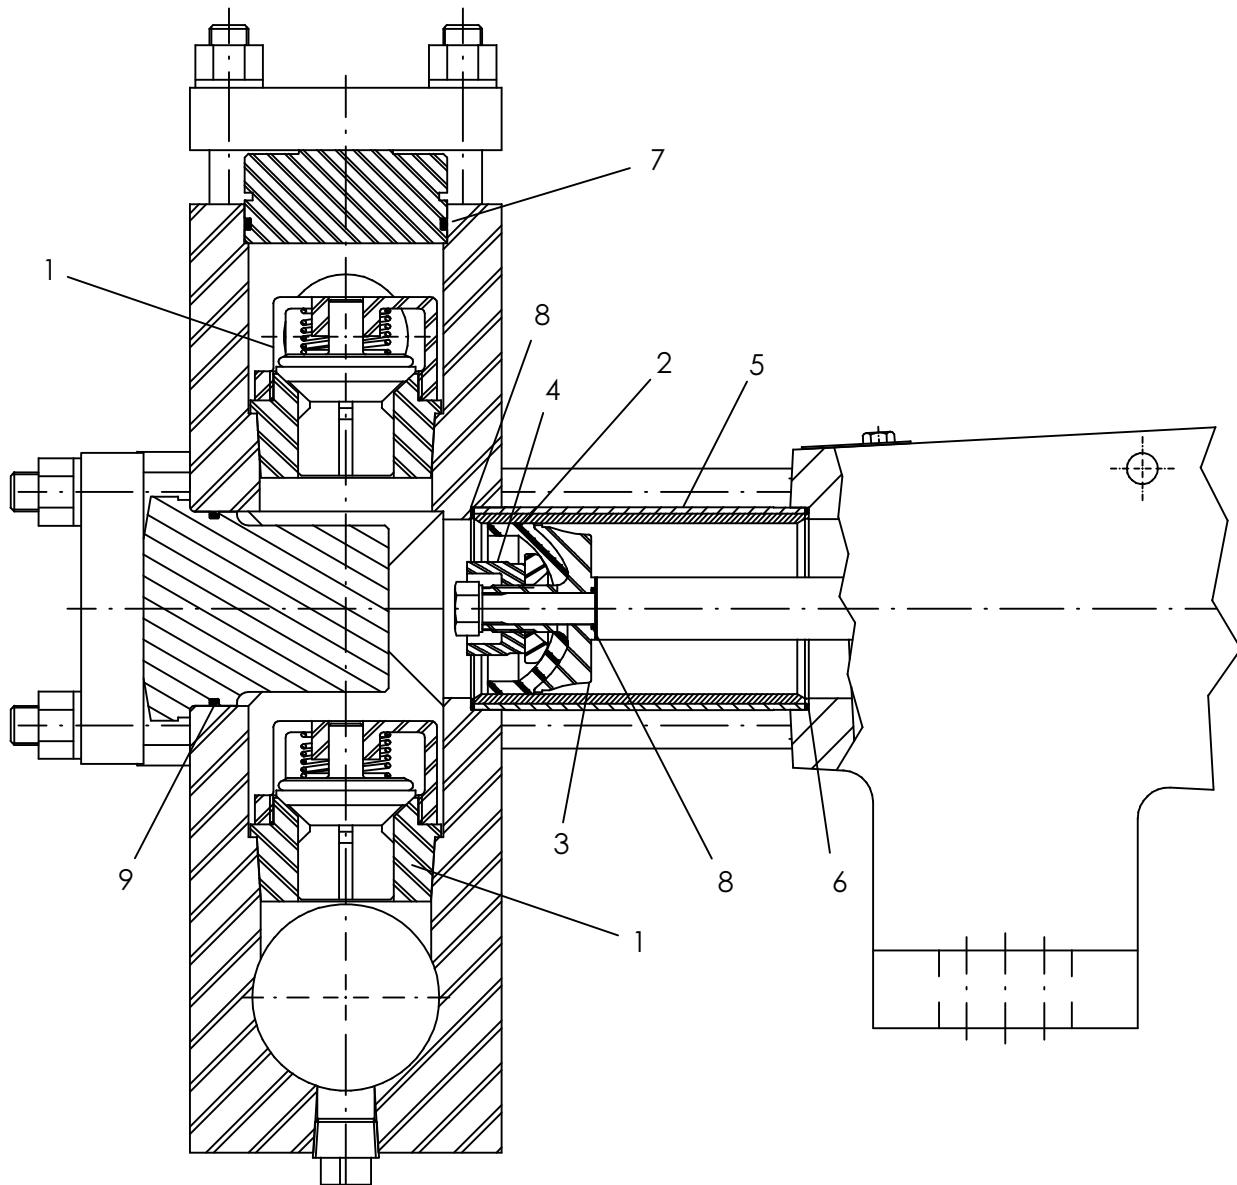

# FLUID PUMP (FLUID END)

## 120 GPM

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	191-054	1	VALVE REPAIR KIT	INCLUDES PARTS FOR ALL VALVES IN PUMP.
2.	191-1008	1	PACKING REPAIR KIT	SEE FOOTNOTE 1.
3.	499-041	3	CUP HOLDER	
4.	499-039	3	PLUNGER NUT	
5.	499-089	3	CYL (2.750")	
6.	499-042	3	CYLINDER GASKET	
7.	157-191	3	O-RING (233 D90)	
8.	157-202	3	O-RING (042 D70)	
9.	157-031	3	O-RING (234 D90)	

NOT SHOWN:



FOOTNOTES:

KIT INCLUDES ALL PARTS, O-RINGS, GASKETS AND PLUNGER NUTS TO REBUILD ALL CYLINDERS.

NOTE:

# FLUID PUMP (POWER END)

L1122, L1622

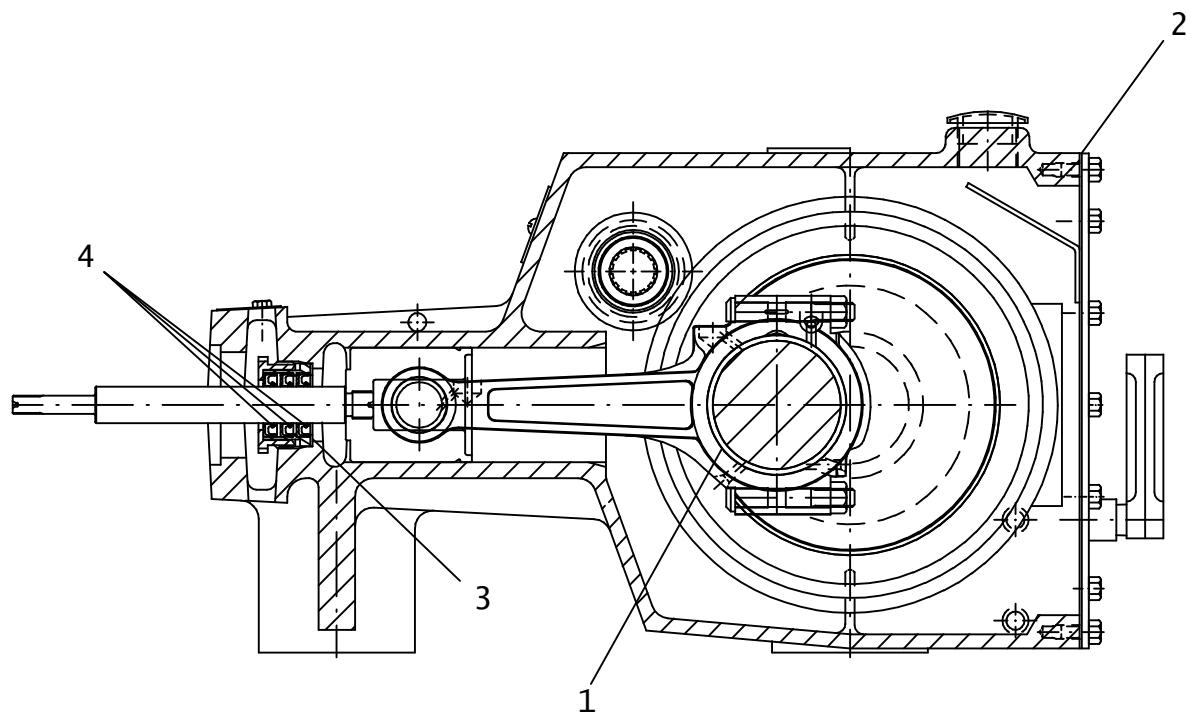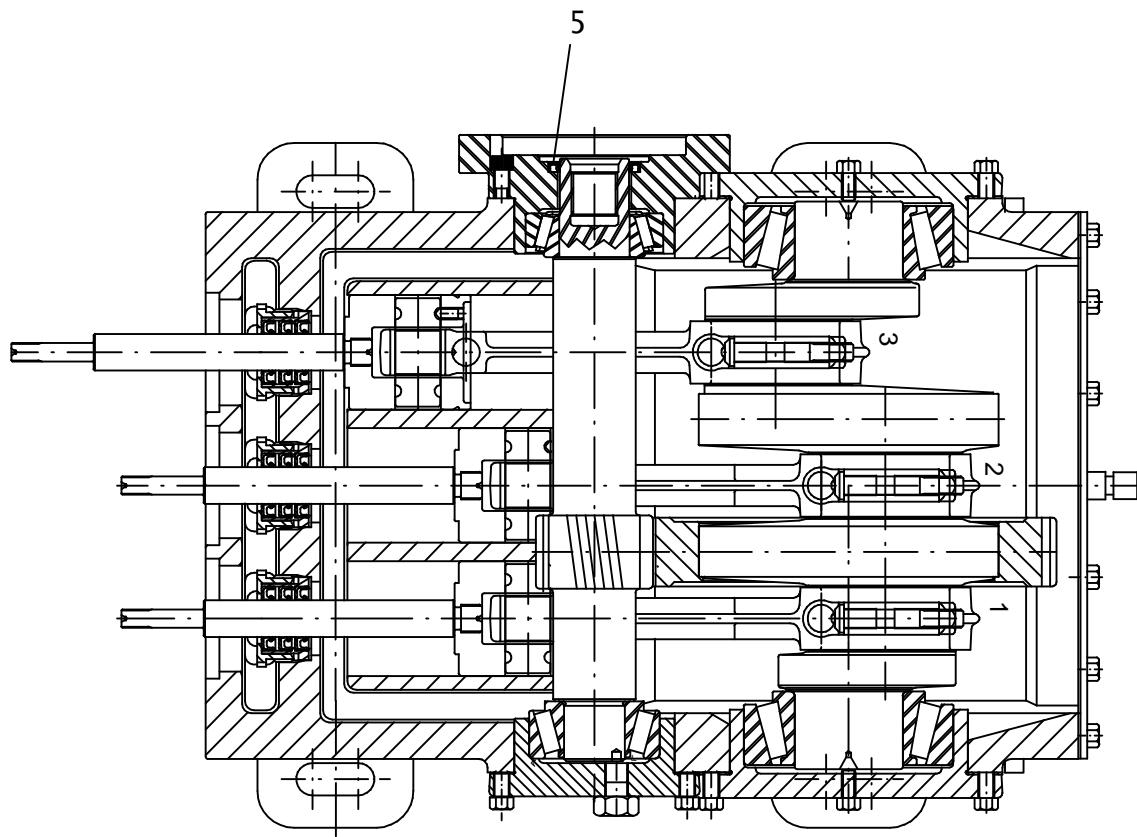

# FLUID PUMP (POWER END)

L1122, L1622


REF	PART NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	126-194	3	3	ROD BEARING (PAIR)	CONNECTING ROD USE 3 PAIR PER PUMP
2.	165-896	1	1	BACK COVER GASKET	
3.	165-888	3	3	SEAL HOLDER GASKET	
4.	157-739	9	9	INTERNAL SEAL	PLUNGER ROD
5.	157-742	1	1	INTERNAL SEAL	ADAPTER

NOT SHOWN:

FOOTNOTES:

NOTE:

## WASH WAND

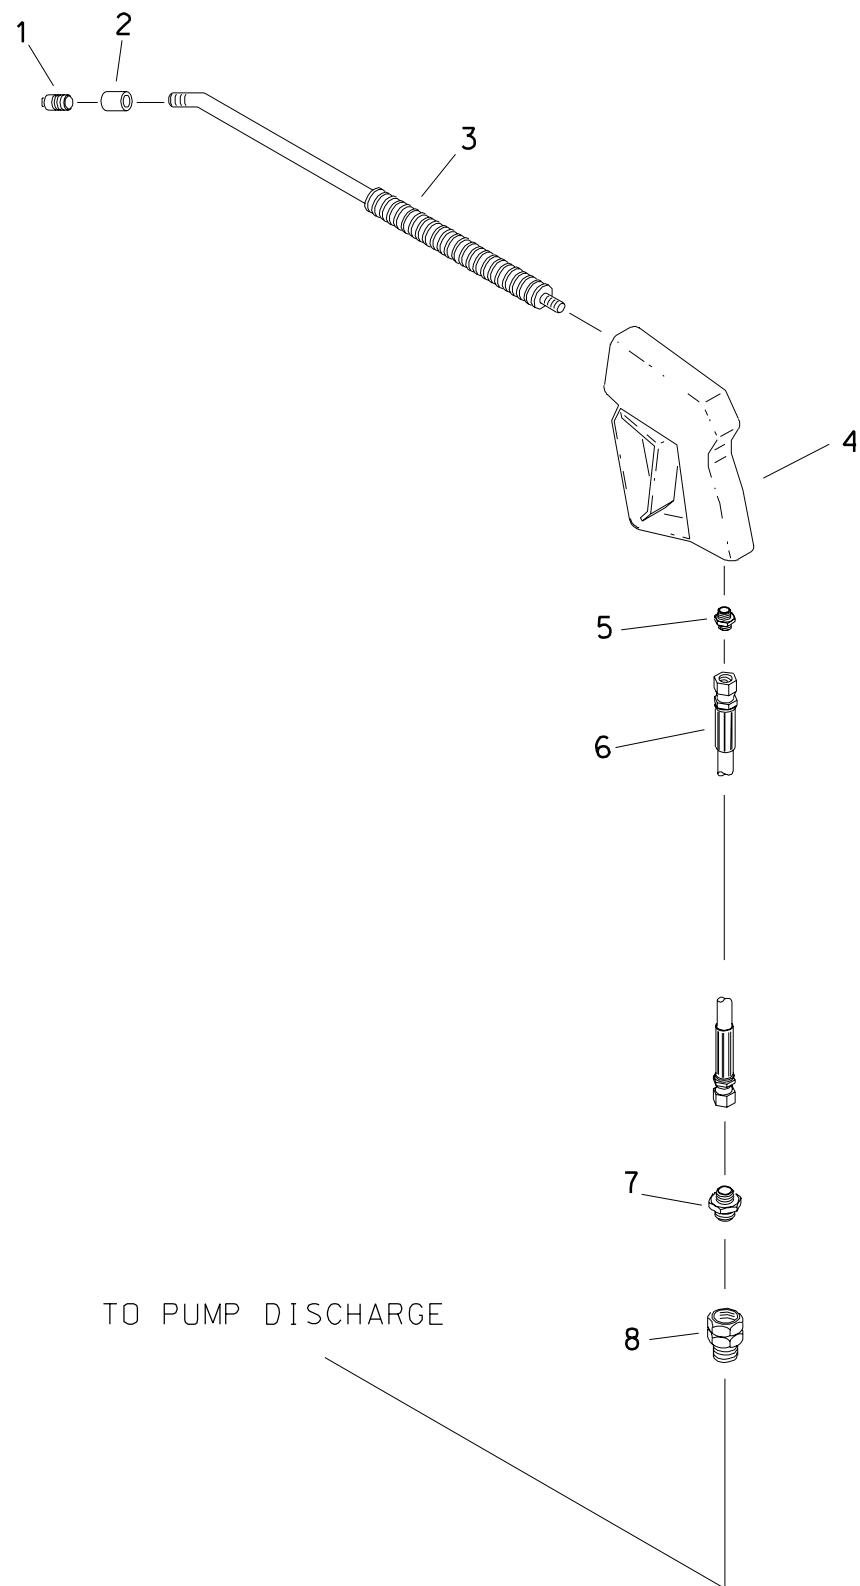

## WASH WAND

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	155-242	1	NOZZLE (04N, ORF.047", TC)	
2.	115-170	1	COLLAR (04NF)	
3.	259-353	1	WASH WAND (04N-36")	
4.	259-197	1	SPRAY GUN	
	190-179	1	SEAL REPAIR KIT	RHINO
	190-938	1	SPRAY GUN, REPAIR KIT	CHAPPELL
5.	514-141	1	CONNECTOR (06N-08D)	
6.	154-753	1	HOSE (080FX-600"-3000)	
7.	154-233	1	CONNECTOR (08S-08D)	
8.	159-089	1	QDC ADAPTER (08-08SF)	

## FOOTNOTES

## NOTE:


REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

**NOTES:**

# **PIPE LOADER SYSTEMS**

**ID0135289**

## PIPE LOADER (MOUNT)

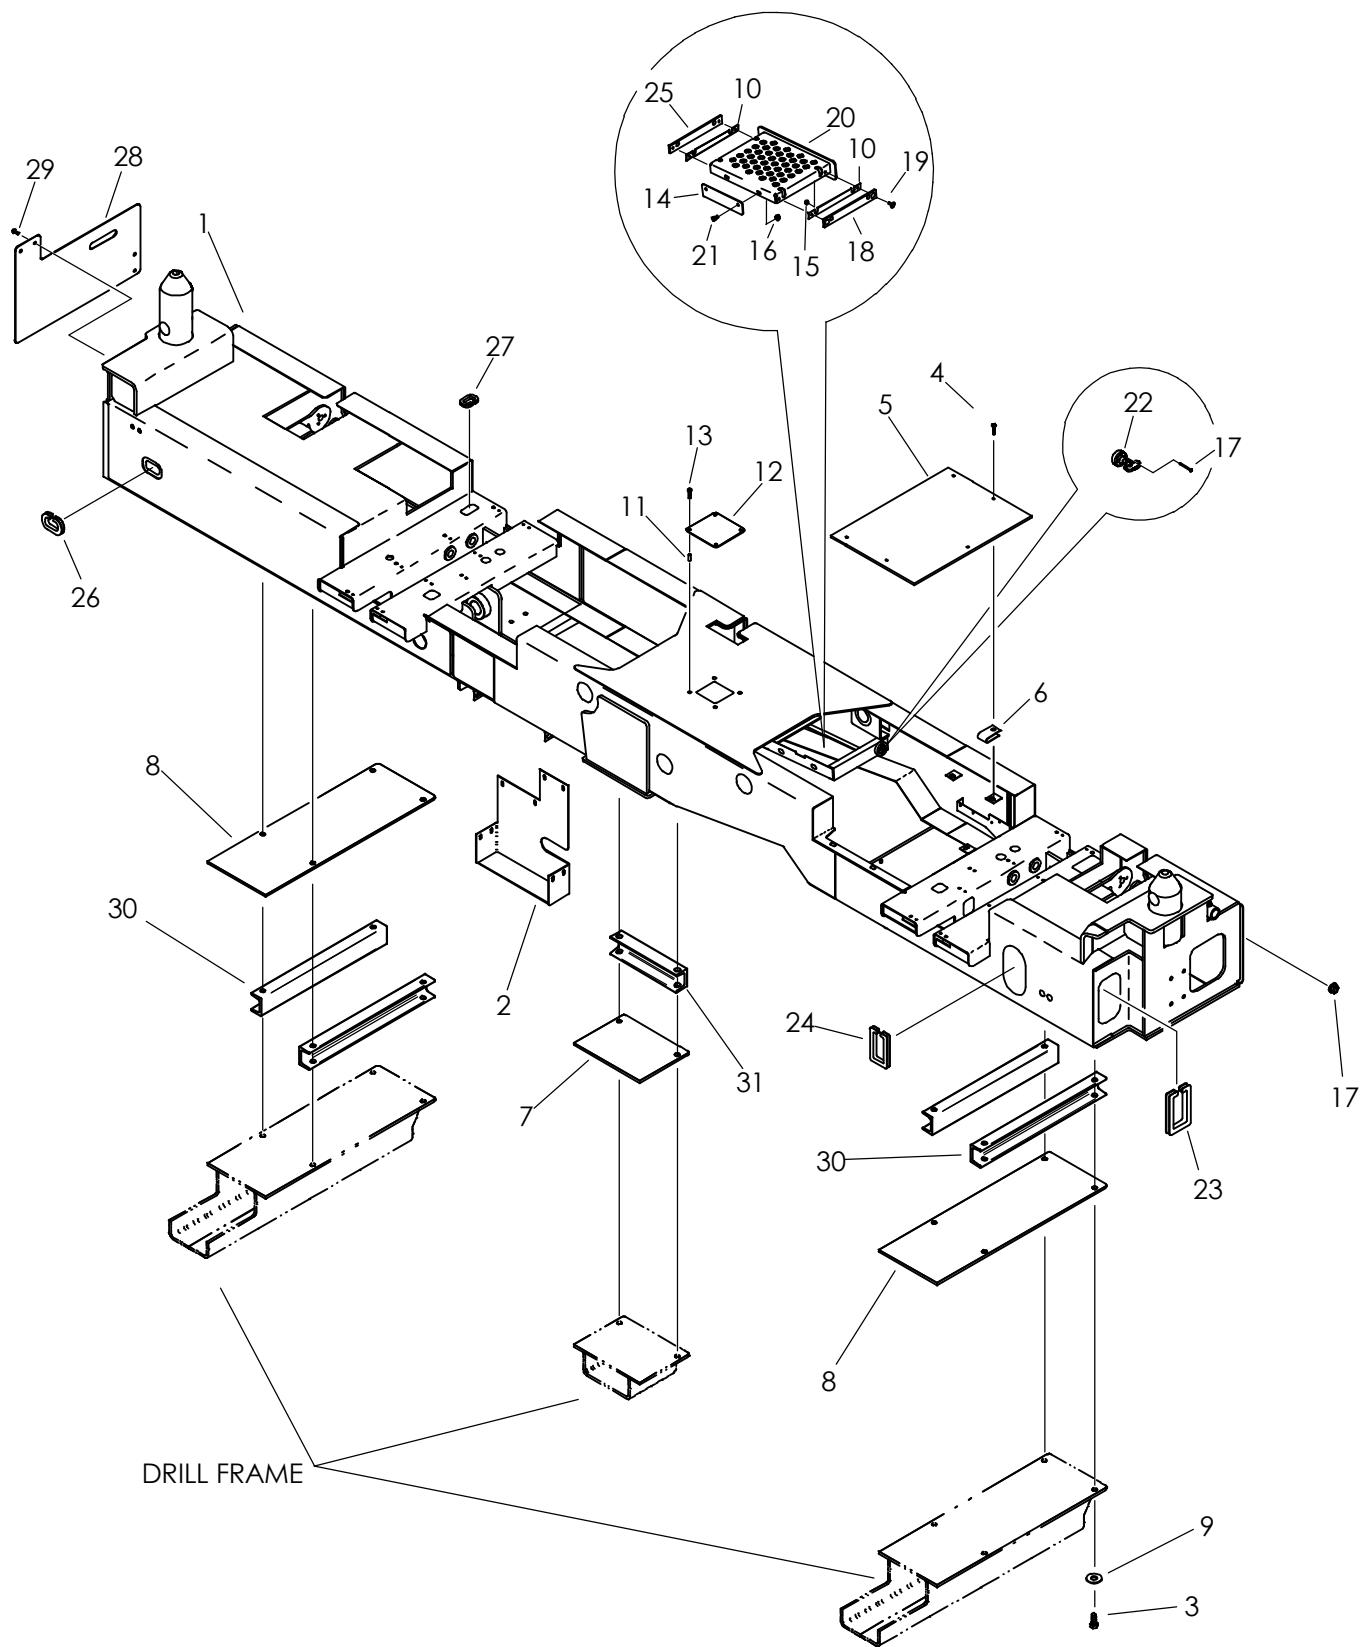

# PIPE LOADER (MOUNT)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	300-6136	1	PIPE LOADER	
2.	300-7992	1	COVER	
3.	106-540	10	SCREW (M16-2.0 X 130mm)	USE LOCTITE 277 OR EQUIVALENT
4.	106-162	13	FLG SCREW (M8-1.25 X 20mm)	
5.	370-133	1	COVER PLATE	
6.	106-551	13	CLIP NUT (M8-1.25)	
7.	370-148	AR	TOP FLG PLATE	
	370-165	AR	CENTER SHIM PLATE	
8.	370-163	AR	SPACER PLATE	
	370-164	AR	SHIM PLATE	
9.	106-398	10	WASHER (M16, HARDENED)	
10.	370-325	AR	SHIM (.065")	
11.	105-633	1	NUTSERT(M8-1.25)3.80-7.9" THK	
12.	370-079	1	COVER PLATE	
13.	107-032	4	SCREW (M8-1.25 X 20mm, BUT SOC)	
14.	370-242	1	STOP PLATE	
15.	106-353	4	FLG NUT (M6-1.00)	
16.	106-386	8	FLG LOCKNUT (M8-1.25)	
17.	106-796	2	SCREW (M4-.70 X 30mm)	
18.	370-243	1	SLIDE BAR	
19.	107-170	4	BOLT (M6-1.00 X 20mm)	
20.	370-231	1	STEP	
21.	106-380	2	FLG LK SCREW (M8-1.25 X 16mm)	
22.	347-888	1	SPRING LOADED PIN	
23.	116-259	AR	BULK EDGE (1/2", SOLD PER FT)	USE 1 @ 18"
24.	116-259	AR	BULK EDGE (1/2", SOLD PER FT)	USE 1 @ 22"
25.	370-241	1	CROSS BAR	
26.	116-259	AR	BULK EDGE (1/2", SOLD PER FT)	USE 1 @ 9"
27.	116-686	AR	BULK EDGE (5/32", SOLD PER FT)	USE 1 @ 9"
28.	324-358	1	COVER	
29.	106-724	1	FLG LK SCREW (M10-1.50 X 25mm)	
30.	300-6124	4	3" SPACER	
31.	300-7938	1	SPACER	

NOT SHOWN:

FOOTNOTES:

NOTE:

## GUARD RAIL

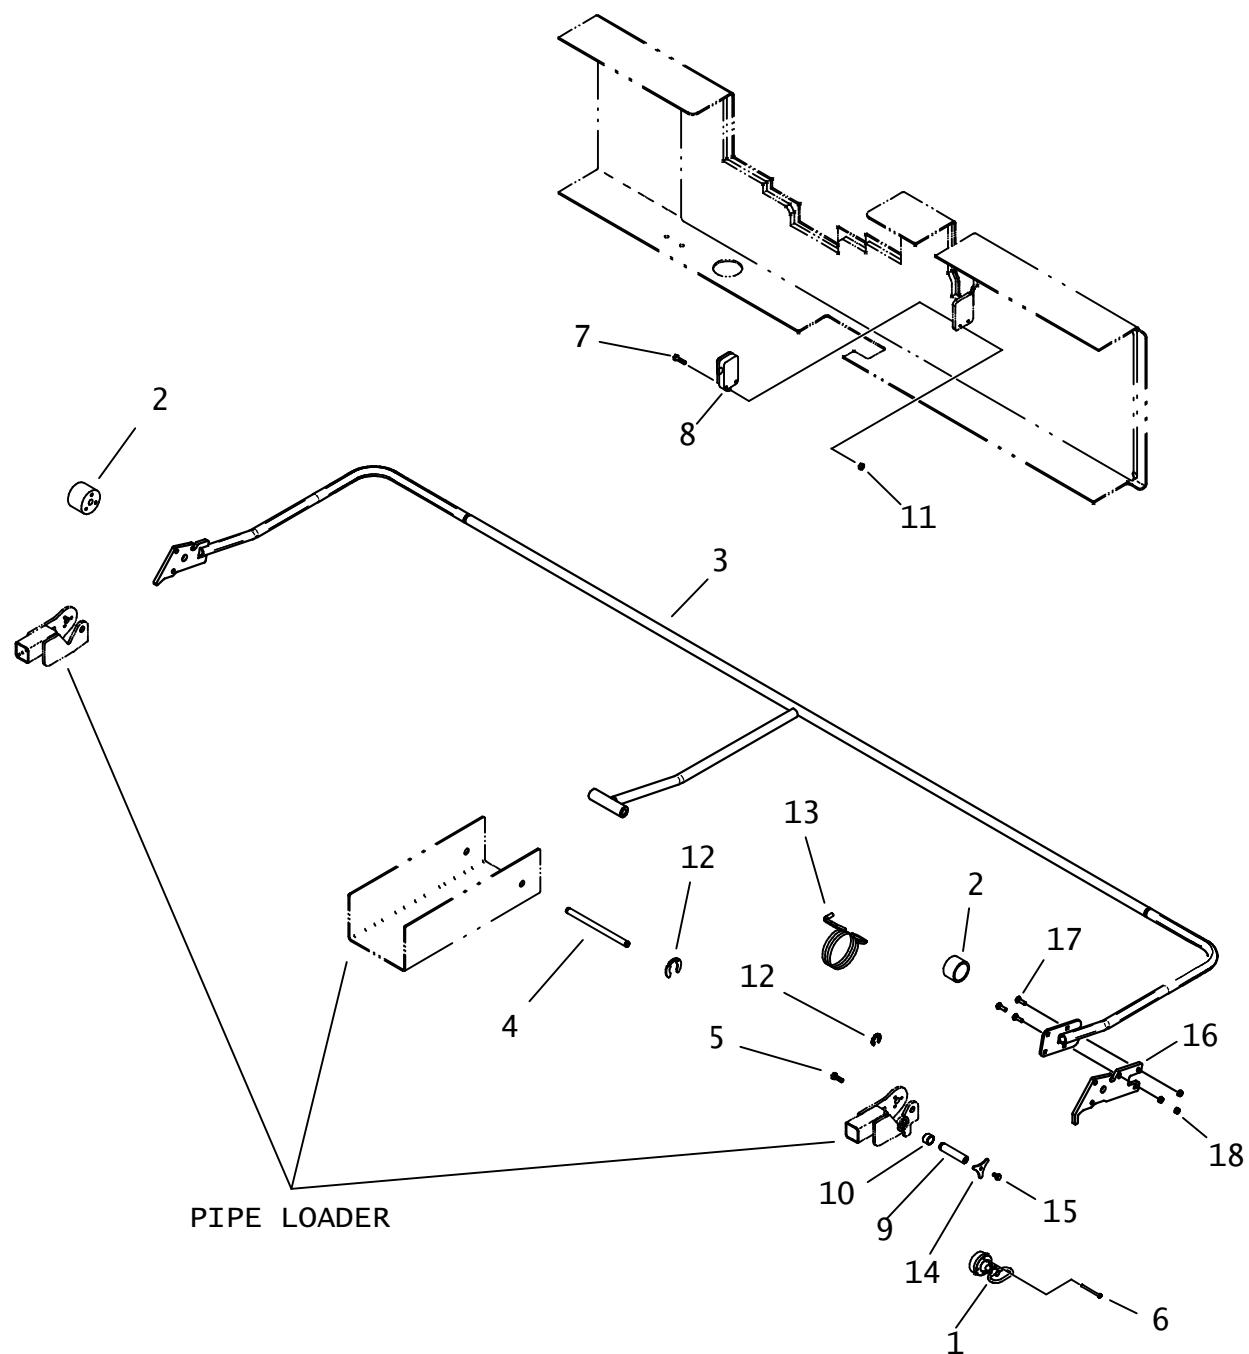

## GUARD RAIL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	347-888	1	SPRING LOADED PIN	
2.	348-098	2	SPRING TUBE	
3.	300-6264	1	GUARD RAIL	SEE FOOTNOTE 1
4.	348-068	1	SUPPORT PIN	
5.	106-381	6	FLG LK SCREW (M8-1.25 X 25MM)	
6.	106-796	2	SCREW (M4-0.70 X 30MM)	
7.	106-427	2	SCREW (M5-0.80 X 22MM, SOC)	
8.	215-1175	1	PROXIMITY SWITCH	
9.	370-334	2	PIN	
10.	125-731	2	COMPOSITION BUSHING (.750")	USE LOCTITE 680 OR EQUIVALENT
11.	106-850	2	LOCKNUT (M5-0.80)	
12.	115-503	4	KLIP RING (.750")	
13.	117-121	2	TORSION SPRING	
14.	370-335	2	HEAD PLATE	
15.	106-378	2	FLG LK SCREW (M6-1.00 X 12MM)	USE LOCTITE 242 OR EQUIVALENT
16.	300-6259	1	TUBE END PLATE	
17.	105-249	3	CARRIAGE BOLT (3/8-NC X 1-1/4")	
18.	105-834	3	FLG LOCKNUT (3/8-NC)	


NOT SHOWN:

FOOTNOTES:

- I. 307-789 GUARD RAIL (BEFORE S/N CMWJT100PA0000027) IS NO LONGER AVAILABLE. REPLACE WITH 300-6264 AND REF. NO'S 16, 17 AND 18.

NOTE:

**PIPE LOADER LIFT ARMS**  
ENDS WITH S/N: CMWJT100PA0000027

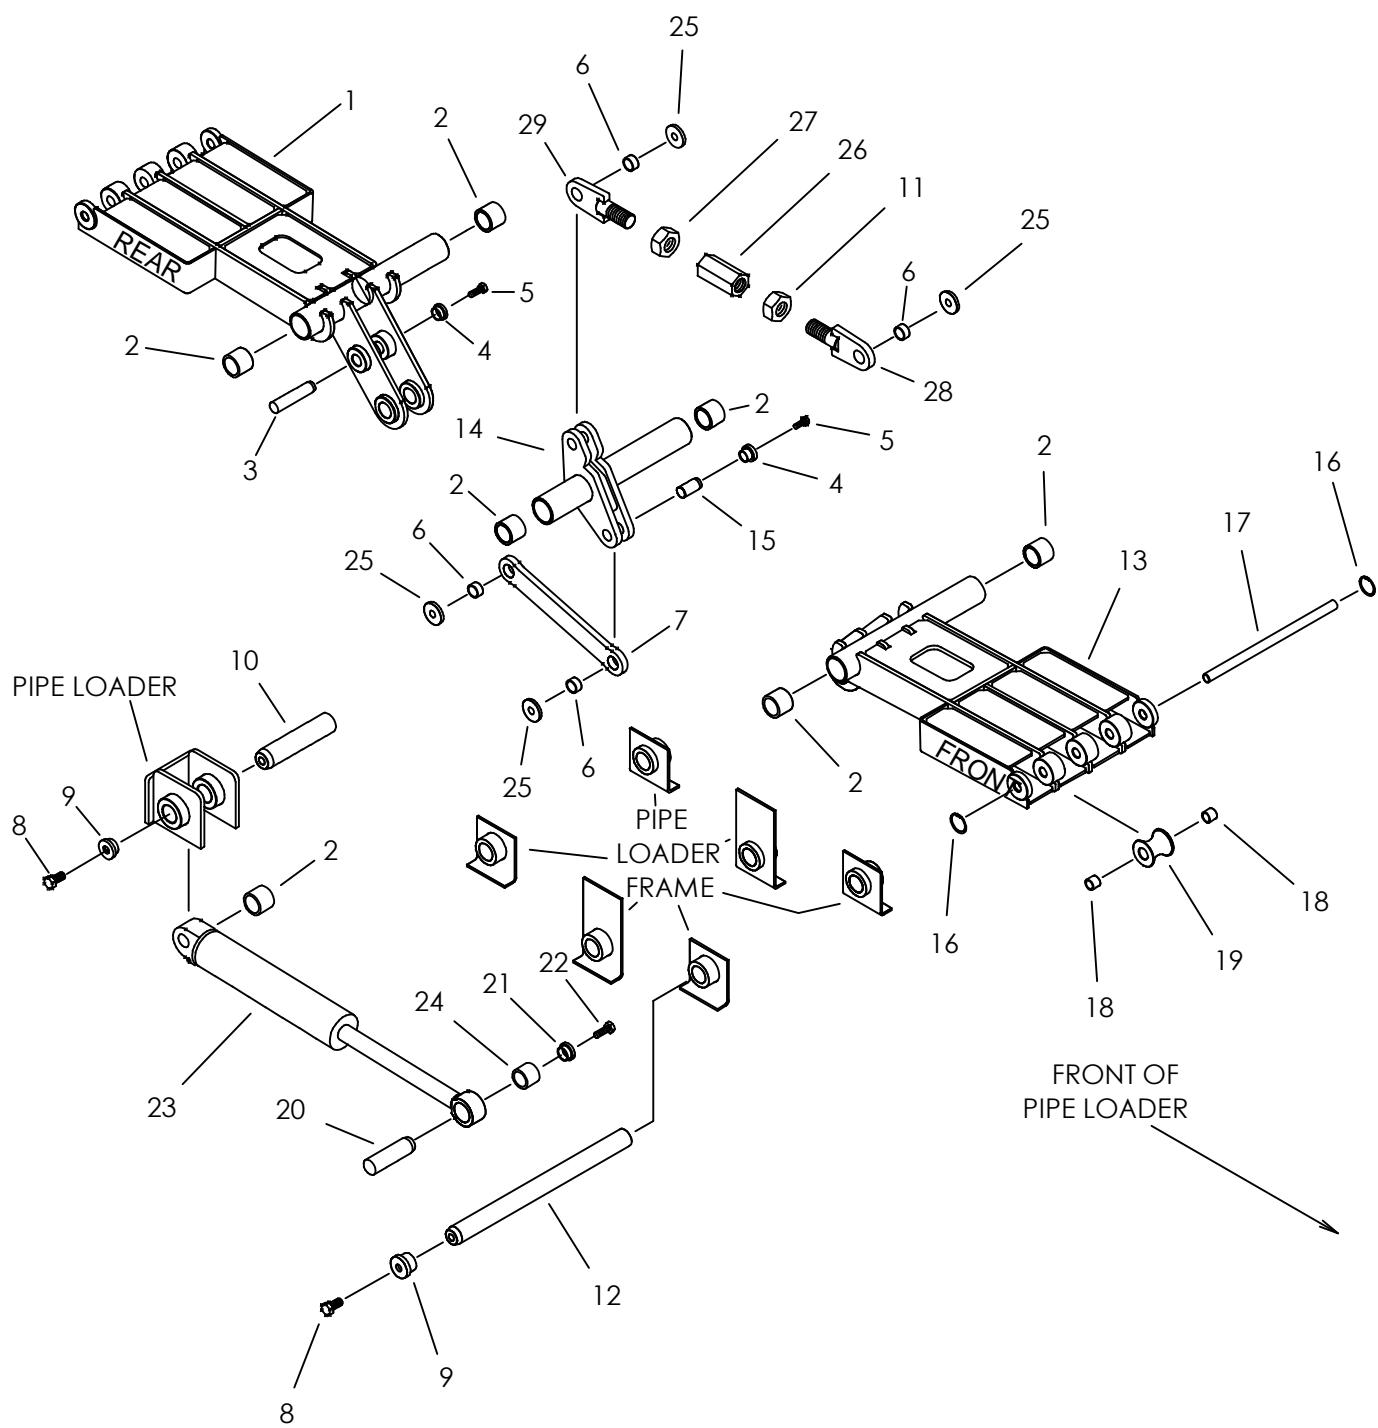

**PIPE LOADER LIFT ARMS**  
**ENDS WITH S/N: CMWJT100PA0000027**

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-967	1	LIFT ARM	
2.	125-754	7	COMPOSITION BUSHING (2")	
3.	179-042	2	TAPERED PIN (31.75MM X 144MM)	
4.	181-982	4	TAPERED INSERT (1.25")	
5.	105-247	2	SCREW (M12-1.75 X 35MM)	USE LOCTITE 242 OR EQUIVALENT
6.	125-143	4	BRONZE BUSHING (1.250")	
7.	349-965	1	LINKAGE ARM	
8.	106-344	4	SCREW (M20-2.5 X 40MM)	USE LOCTITE 242 OR EQUIVALENT
9.	184-064	4	TAPERED INSERT (2")	
10.	179-236	1	TAPERED PIN (50.8MM X 200MM)	
11.	105-604	1	JAM NUT (1-1/2 NF-12, LHTHD)	
12.	179-168	3	TAPERED PIN (50.8MM X 655MM)	
13.	349-237	1	LIFT ARM	
14.	349-962	1	CENTER LINKAGE	
15.	179-232	2	TAPERED PIN (31.75MM X 65MM)	
16.	118-047	4	INTERNAL SNAP RING (1.000")	
17.	349-240	2	LIFT BAR	
18.	125-770	16	COMPOSITION BUSHING (1")	
19.	349-766	8	ROLLER	
20.	183-878	1	TAPERED PIN (44.4MM X 135MM)	
21.	181-975	1	TAPERED INSERT (1.75")	
22.	106-470	1	FLG SCREW (M16-2.0 X 40MM)	USE LOCTITE 242 OR EQUIVALENT
23.	151-085	1	CYL (3.5" X 1.75" X 16")	
24.	125-773	1	COMPOSITION BUSHING (1.75")	
25.	110-056	AR	MACHINERY BUSHING (1.25")	
26.	370-303	1	ADJUSTMENT BAR	
27.	105-377	1	JAM NUT (1-1/2-NF)	
28.	370-298	1	FRONT LINK	
29.	370-301	1	BACK LINK	


NOT SHOWN:

FOOTNOTES:

NOTE:

**PIPE LOADER LIFT ARMS**

BEGINS WITH S/N: CMWJT100A0000029 &amp; CMWAT100A90000001

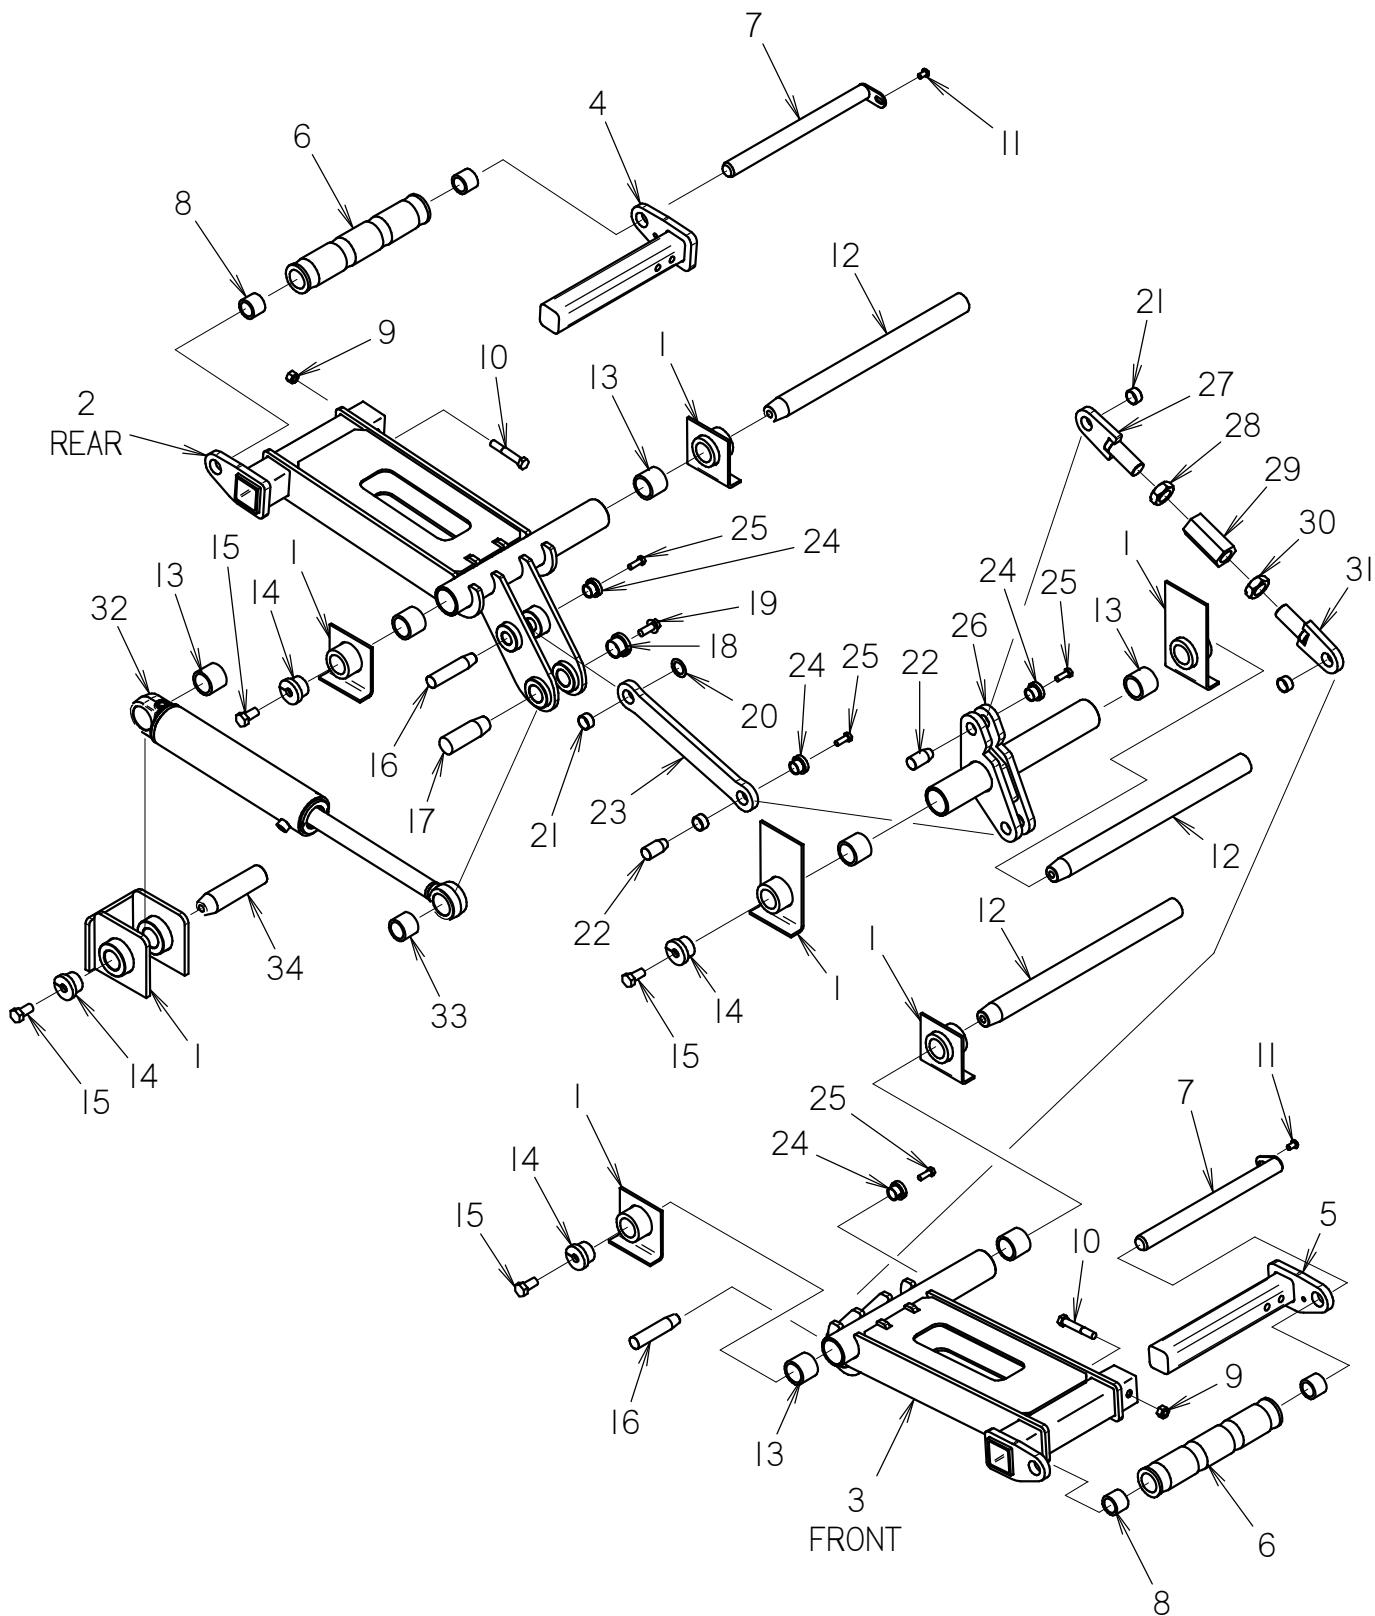

# PIPE LOADER LIFT ARMS

BEGINS WITH S/N: CMWJT100A0000029 & CMWAT100A90000001


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-6136	1	PIPE LOADER	ONLY PIN BOSSES SHOWN FOR REFERENCE
2	301-1073	1	REAR LIFT ARM	
3	301-1061	1	FRONT LIFT ARM	
4	301-1125	1	REAR PIN MOUNT	
5	301-1067	1	FRONT PIN MOUNT	
6	301-1081	2	ROLLER (JT)	301-1078 ROLLER (AT)
7	301-1079	2	ROLLER PIN (JT)	301-1076 ROLLER PIN (AT)
8	I25-772	4	COMPOSITION BUSHING (1.5")	
9	I06-545	2	LOCKNUT (M16-2.0, PRV TRQ, 0.9)	
10	I07-144	2	SCREW (M16-2.00 X 100MM)	
11	I07-759	2	SCREW (M12-1.75 X 20MM, BUT SOC)	
12	I79-168	3	TAPERED PIN (2.00" X 25.8")	
13	I25-754	7	COMPOSITION BUSHING (2")	
14	I84-064	4	TAPERED INSERT (2")	
15	I06-344	4	SCREW (M20-2.50 X 40MM)	USE LOCTITE 242 OR EQUIVALENT
16	I79-042	2	TAPERED PIN (31.75MM X 144MM)	
17	I83-878	1	TAPERED PIN (1.75" X 5.31")	
18	I81-975	1	TAPERED INSERT (1.75")	
19	I06-470	1	FLG SCREW (M16-2.0 X 40MM)	USE LOCTITE 242 OR EQUIVALENT
20	I10-056	1	MACH BUSHING (1-1/4", I8GA)	AS REQUIRED
21	I25-143	4	BRONZE BUSHING (1.250")	
22	I79-232	2	TAPERED PIN (31.75MM X 65MM)	
23	349-965	1	LINKAGE ARM	
24	I81-982	4	TAPERED INSERT (1.25")	
25	I05-247	4	SCREW (M12-1.75 X 35MM)	USE LOCTITE 242 OR EQUIVALENT
26	349-962	1	CENTER LINKAGE	
27	370-301	1	BACK LINK	
28	I05-377	1	JAM NUT (1-1/2-NF)	
29	370-303	1	ADJUSTMENT BAR	
30	I05-604	1	JAM NUT (1-1/2-UNF LH)	
31	370-298	1	FRONT LINK	
32	I51-085	1	CYL (3.5" X 1.75" X 16")	
33	I25-773	1	COMPOSITION BUSHING (1.75")	
34	I79-236	1	TAPERED PIN (50.8MM X 200MM)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## PIPE LOADER (SHUTTLE MOUNT)

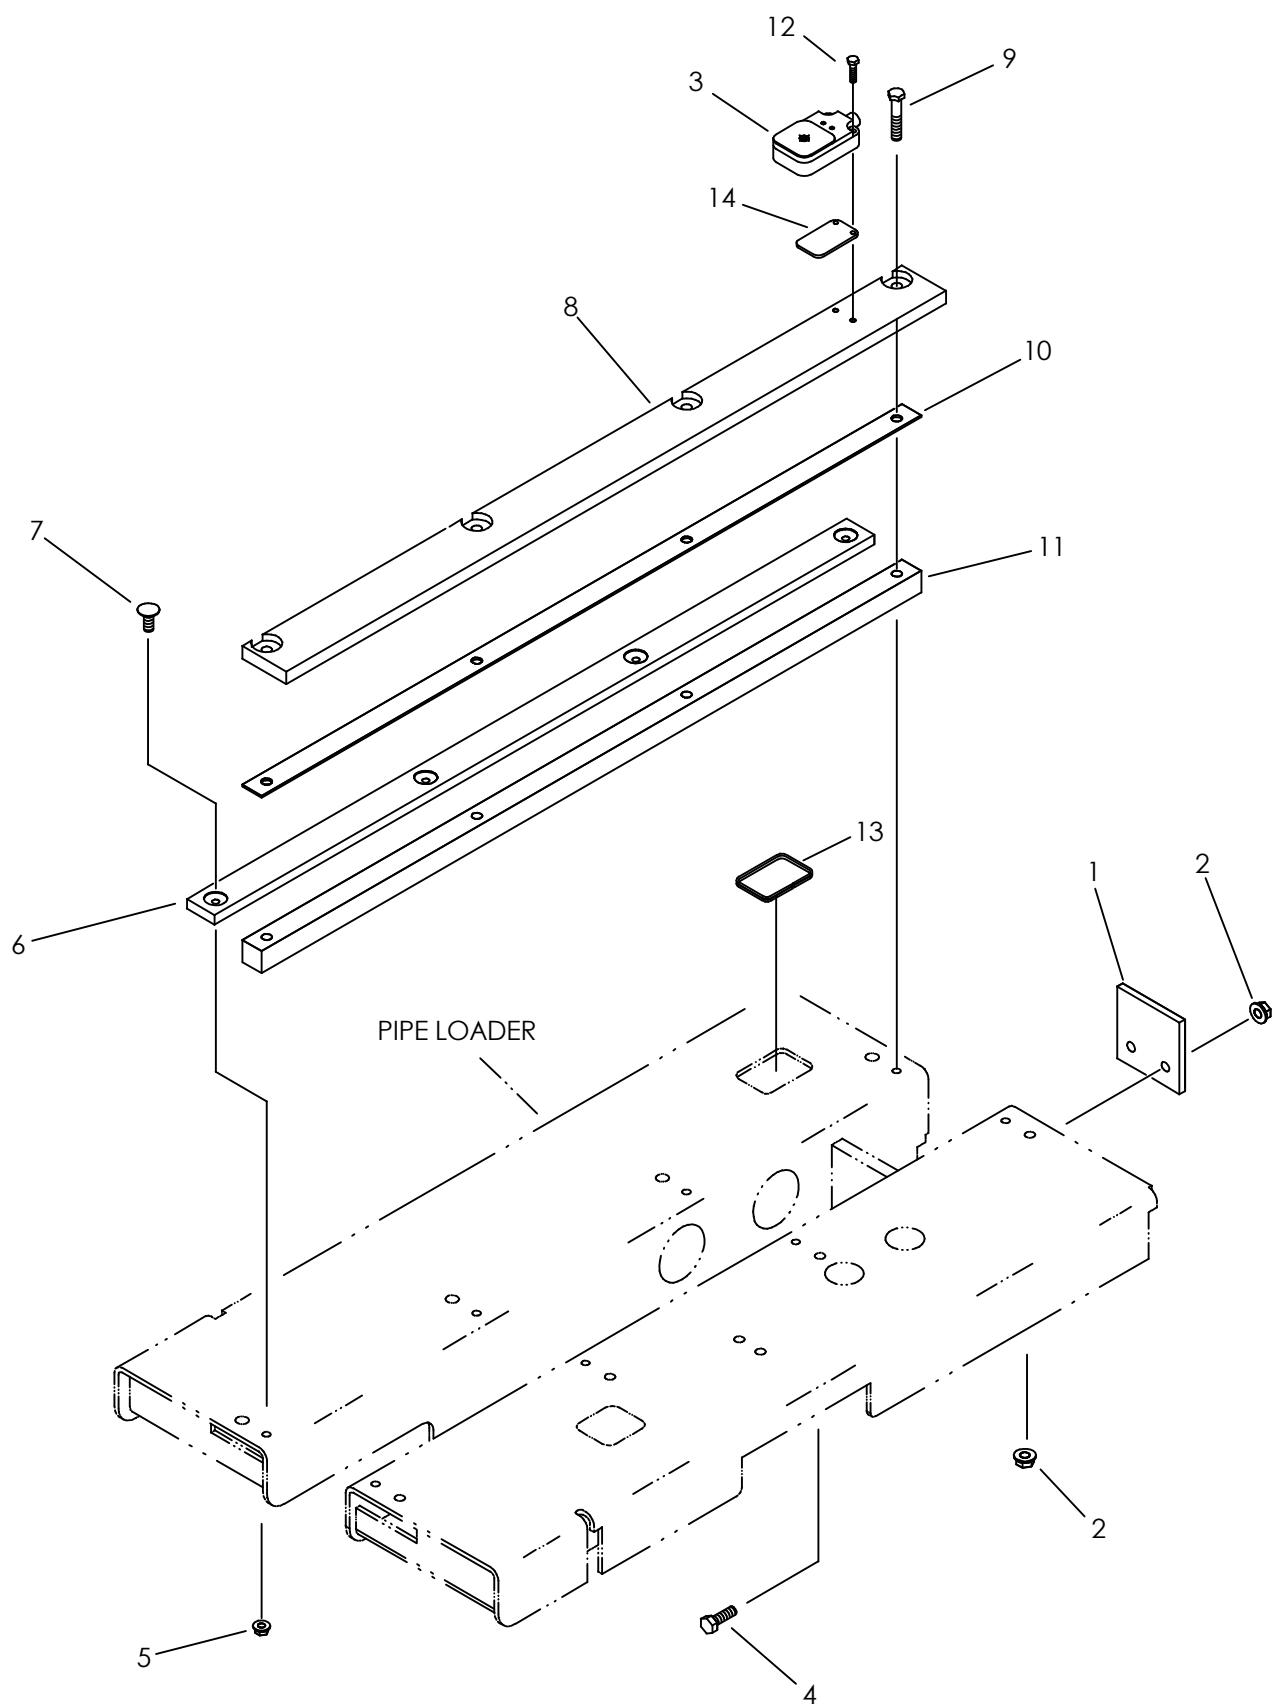

# PIPE LOADER (SHUTTLE MOUNT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	348-064	3	SHIM	
2.	106-386	20	FLG LOCKNUT (M8-1.25)	
3.	215-1175	1	PROXIMITY SWITCH	
4.	106-328	4	FLG SCREW (M8-1.25 X 30MM)	
5.	106-353	16	FLG NUT (M6-1.00)	
6.	300-6142	4	BOTTOM SLIDE BAR	
7.	107-170	16	SCREW (M6-1.00 X 20MM)	
8.	300-6139	3	RETAINER BAR	
	300-6140	1	RETAINER BAR	
9.	106-329	16	SCREW (M8-1.25 x 50MM)	
10.	300-6141	4	OUTER SHIM	
11.	300-6135	4	BAR	
12.	106-427	2	SCREW (M5-080 X 22MM, SOC)	
13.	115-686	AR	BULK EDGE (5/32", SOLD PER 1")	USE 1 @ 9".
14.	107-451	AR	SHIM (.135")	


NOT SHOWN:

FOOTNOTES:

NOTE:

# PIPE LOADER SHUTTLES

ENDS WITH S/N: CMWJT100PA0000027

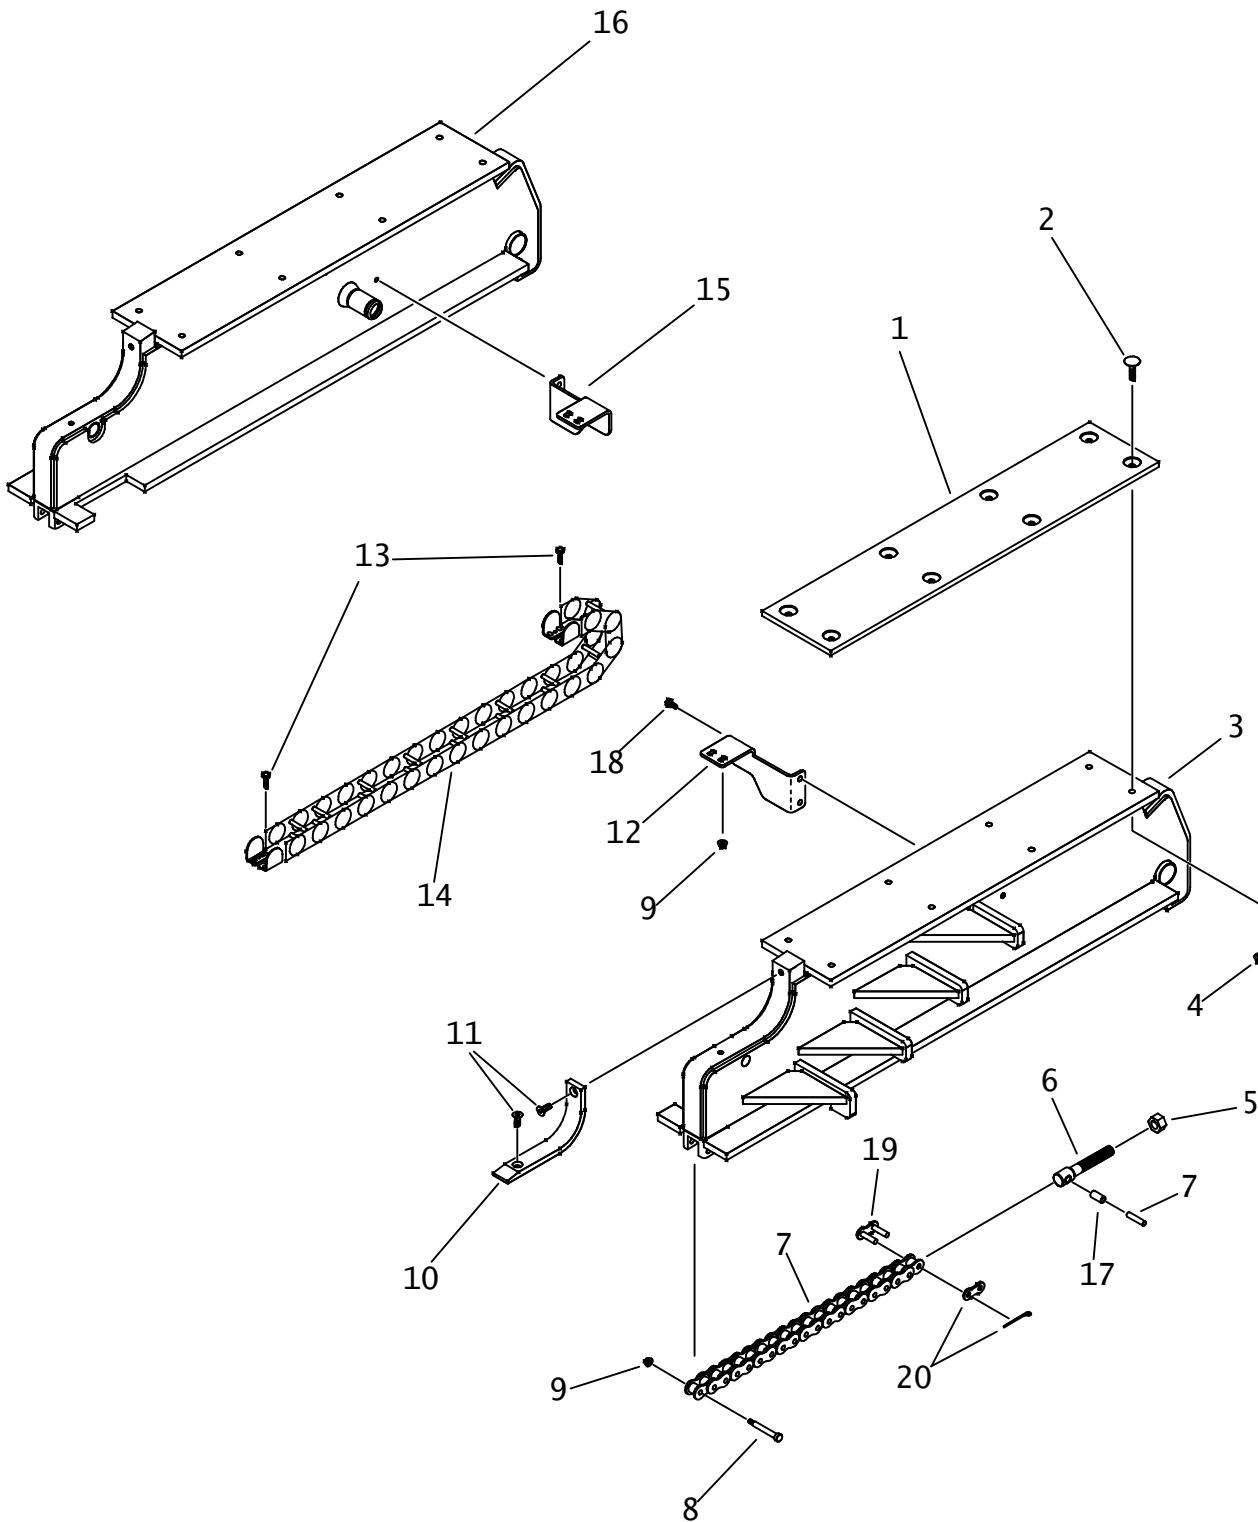

# PIPE LOADER SHUTTLES

ENDS WITH S/N: CMWJT100PA0000027

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-296	2	TOP SLIDE BAR	
2.	107-187	16	SCREW (M8-1.25 x 35mm)	
3.	306-898	1	FRONT SHUTTLE	
4.	106-386	16	FLG LOCKNUT (M8-1.25)	
5.	105-357	2	LOCKNUT (5/8-NC)	
6.	356-205	2	CHAIN ADJUSTER (#80)	
7.	130-330	2	ROLLER CHAIN (#80, 58P)	INCL REF NO'S 19 AND 20
8.	107-160	2	SHLDR BOLT (M8 X 50MM, M6-1.00)	
9.	106-353	10	FLG NUT (M6-1.00)	USE 242 LOCTITE OR EQUIVALENT
10.	348-036	2	WEAR PAD	
11.	106-943	4	SCREW (M8-1.25 x 16mm, CSK SLT)	
12.	349-978	1	TRACK BRACKET	
13.	106-379	8	FLG LK SCREW (M6-1.00 x 20mm)	
14.	349-068	2	HOSE TRACK (34.4")	
15.	349-980	1	TRACK BRACKET	
16.	306-897	1	BACK SHUTTLE	
17.	130-300	2	ROLLER BUSHING (#80)	
18.	106-381	4	FLG LK SCREW (M8-1.25 x 25mm)	
19.	130-304	-	CONNECTOR LINK (#80)	


NOT SHOWN:

FOOTNOTES:

NOTE:

**PIPE LOADER SHUTTLES**

BEGINS WITH S/N: CMWJT100A0000029 &amp; CMWAT100A90000001

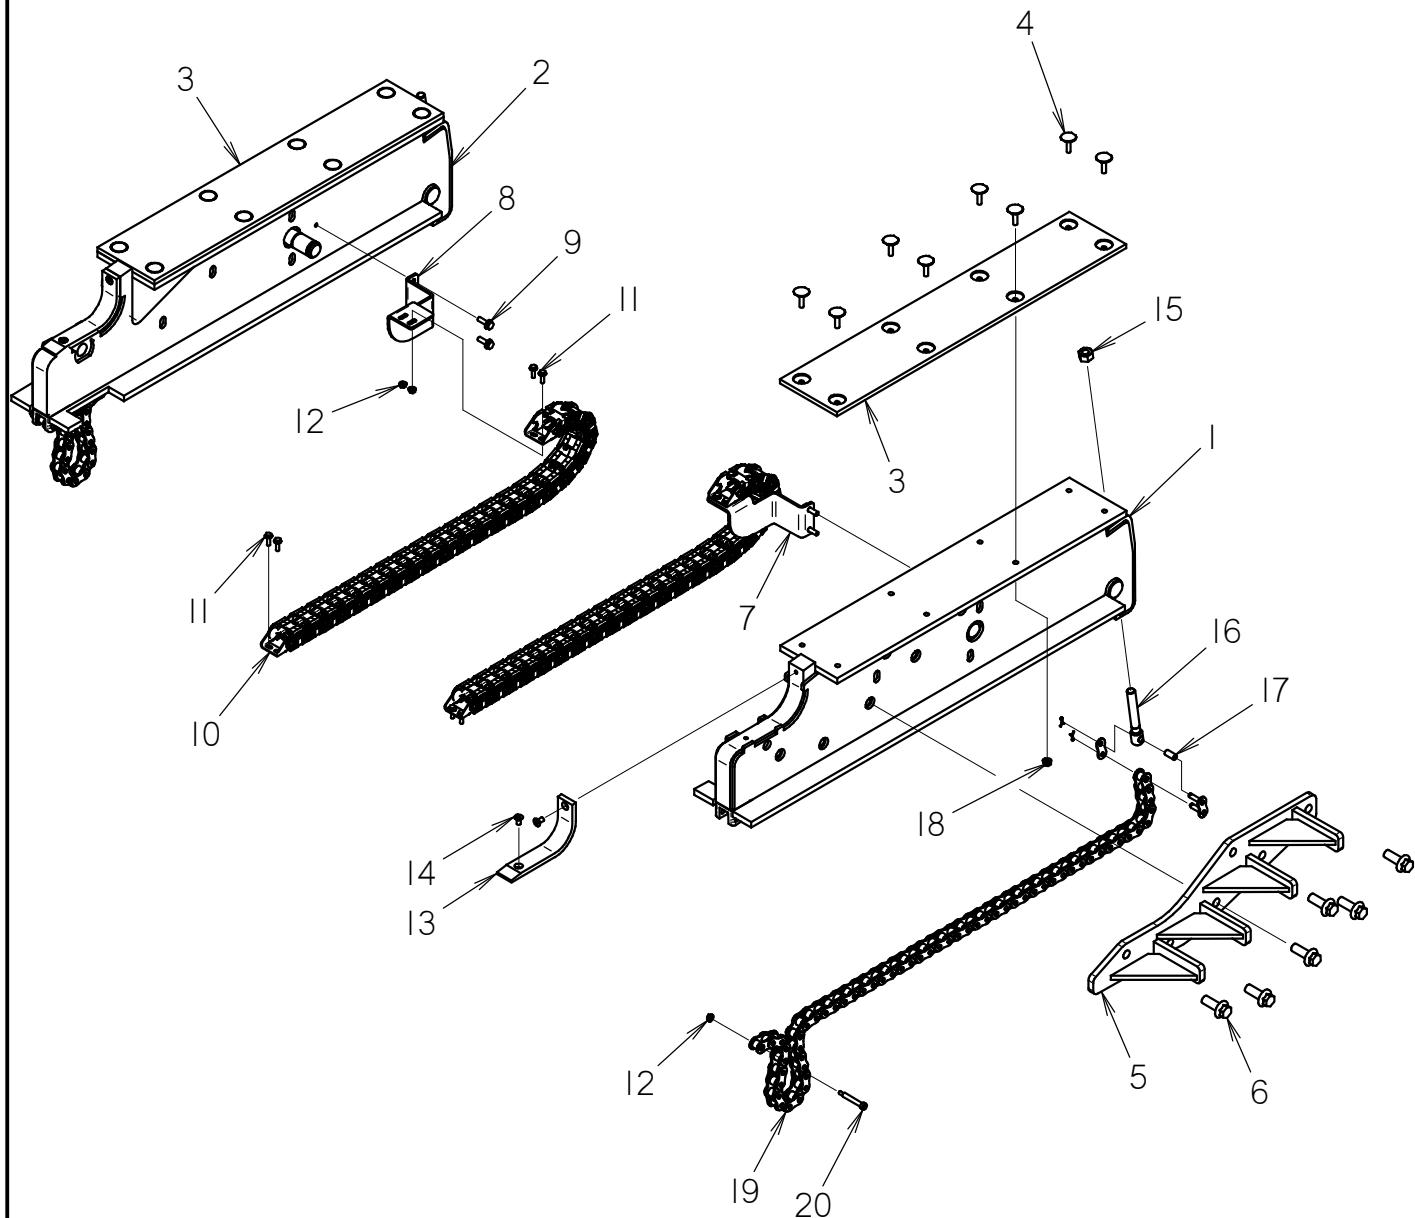

# PIPE LOADER SHUTTLES

BEGINS WITH S/N: CMWJT100A0000029 & CMWAT100A90000001


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	30I-I030	1	FRONT SHUTTLE	
2	30I-I041	1	BACK SHUTTLE	
3	30I-I037	2	TOP SLIDE BAR	
4	I07-I87	16	SCREW (M8-I.25 X 35MM)	
5	30I-I040	1	SHUTTLE STOP (JT)	30I-I038 SHUTTLE STOP (AT)
6	I07-336	6	FLG SCREW (M16-2.00X45MM,I0.9)	
7	30I-I087	1	FRONT CARRIER MOUNT	
8	30I-I088	1	REAR CARRIER MOUNT	
9	I06-381	4	FLG LK SCREW (M8-I.25 X 25MM)	
I0	I18-I010	2	HOSE CARRIER (38.1")	
I1	I06-379	8	FLG LK SCREW (M6-I.00 X 20MM)	
I2	I06-353	6	FLG NUT (M6-I.00)	USE LOCTITE 242 OR EQUIVALENT
I3	348-036	2	WEAR PAD	
I4	I06-943	4	SCREW (M8-I.25 X 16MM,CSK SOC)	
I5	I05-357	1	LOCKNUT (5/8-NCI)	
I6	356-205	2	CHAIN ADJUSTER	
I7	I30-300	1	ROLLER BUSHING (#80)	
I8	I06-386	16	FLG LOCKNUT (M8-I.25)	
I9	I30-330	2	ROLLER CHAIN (#80, 58P)	INCLUDES I30-304 CONNECTOR LINK (#80)
I20	I07-I60	2	SHLD BLT (M8 X 50MM, M6-I.00)	

NOT SHOWN:

FOOTNOTES:

NOTE:

# PIPE LOADER (SHUTTLE DRIVE)

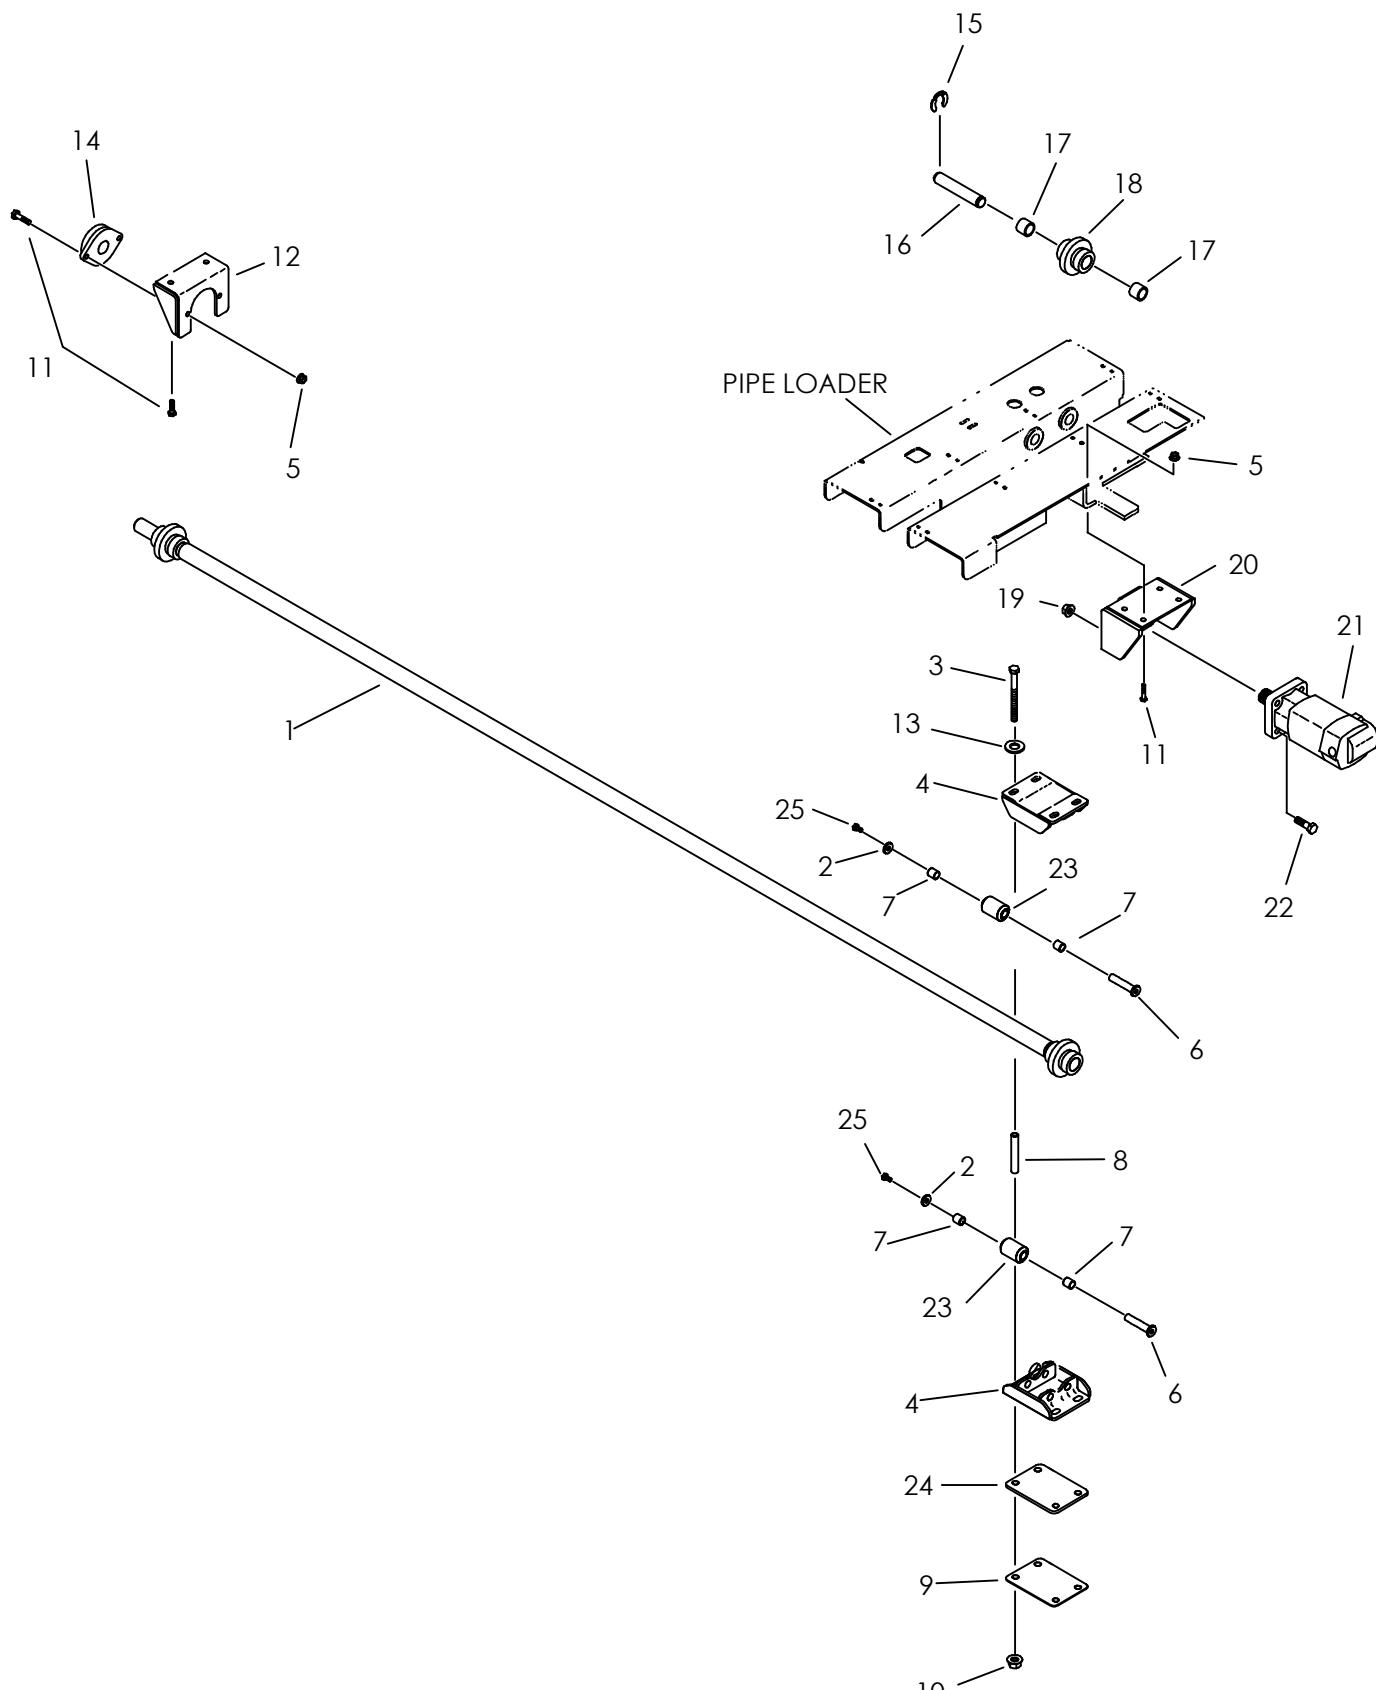

# PIPE LOADER (SHUTTLE DRIVE)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	349-228	1	SHAFT	
2.	105-264	8	WASHER (3/8")	
3.	106-620	8	SCREW (M12-1.75 X 150MM)	
4.	348-053	4	SHAFT SUPPORT	
5.	106-387	8	FLG LOCKNUT (M10-1.50)	
6.	370-518	8	PIN	
7.	125-403	16	BRONZE BUSHING (.625")	
8.	370-036	8	SPACER	
9.	348-067	AR	SUPPORT SHIM	
10.	106-354	6	FLG NUT (M12-1.75)	
11.	106-383	8	FLG LK SCREW (M10-1.50 X 30MM)	
12.	348-062	1	BEARING MOUNT	
13.	106-391	8	WASHER (M12)	
14.	125-605	1	FLANGE BEARING (1.25", 2-BLT)	
15.	115-499	8	KLIP RING (1.000")	
16.	183-912	4	PIN	
17.	125-770	8	COMPOSITION BUSHING (1")	
18.	175-529	4	IDLER SPROCKET (80B9)	
19.	106-198	4	FLG LOCKNUT (1/2-NC, GD8)	
20.	348-060	1	MOTOR MOUNT	
21.	158-952	1	HYD MOTOR (SHUTTLE)	SEE FOOTNOTE 1
22.	105-066	4	BOLT (1/2-NC X 1.75")	
23.	370-361	8	ROLLER	
24.	370-360	AR	SPACER PLATE	
25.	105-274	8	SCREW (M10-1.50 X 20MM)	USE LOCTITE 242 OR EQUIVALENT


NOT SHOWN:

FOOTNOTES:

1. SEAL REPAIR KIT 500-658

NOTE:

## PIPE LOADER (SHUTTLE STOP)

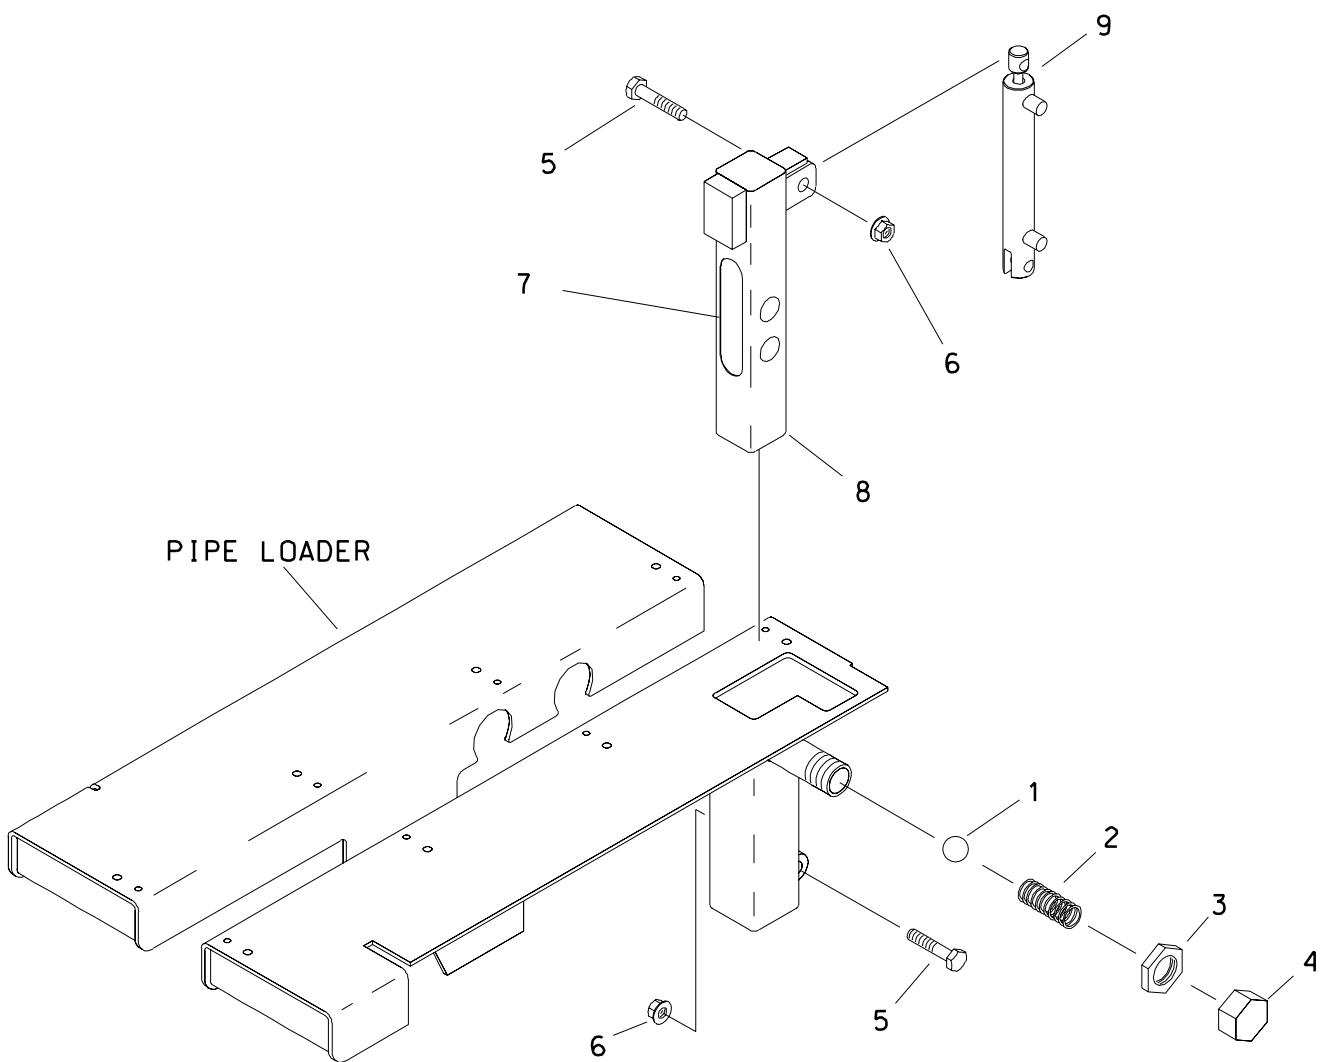


## PIPE LOADER (SHUTTLE STOP)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	125-121	1	DETENT BALL (1.000", CHROME)	
2.	117-115	1	COMPRESSION SPRING	
3.	107-108	1	JAM NUT (1-5/16")	
4.	370-263	1	CAP	
5.	106-334	2	SCREW (M12-1.75 X 50MM)	
6.	106-685	2	LOCKNUT (M12-1.75, PRV TRQ, 10.9)	
7.	274-831	1	PIPE ROW INDICATOR	
8.	349-258	1	ROW SELECT TUBE	
9.	150-726	1	CYL (1.0" X 6.0")	

FOOTNOTES

# PIPE LOADER GRIPPERS BEGINS WITH S/N 2W0856

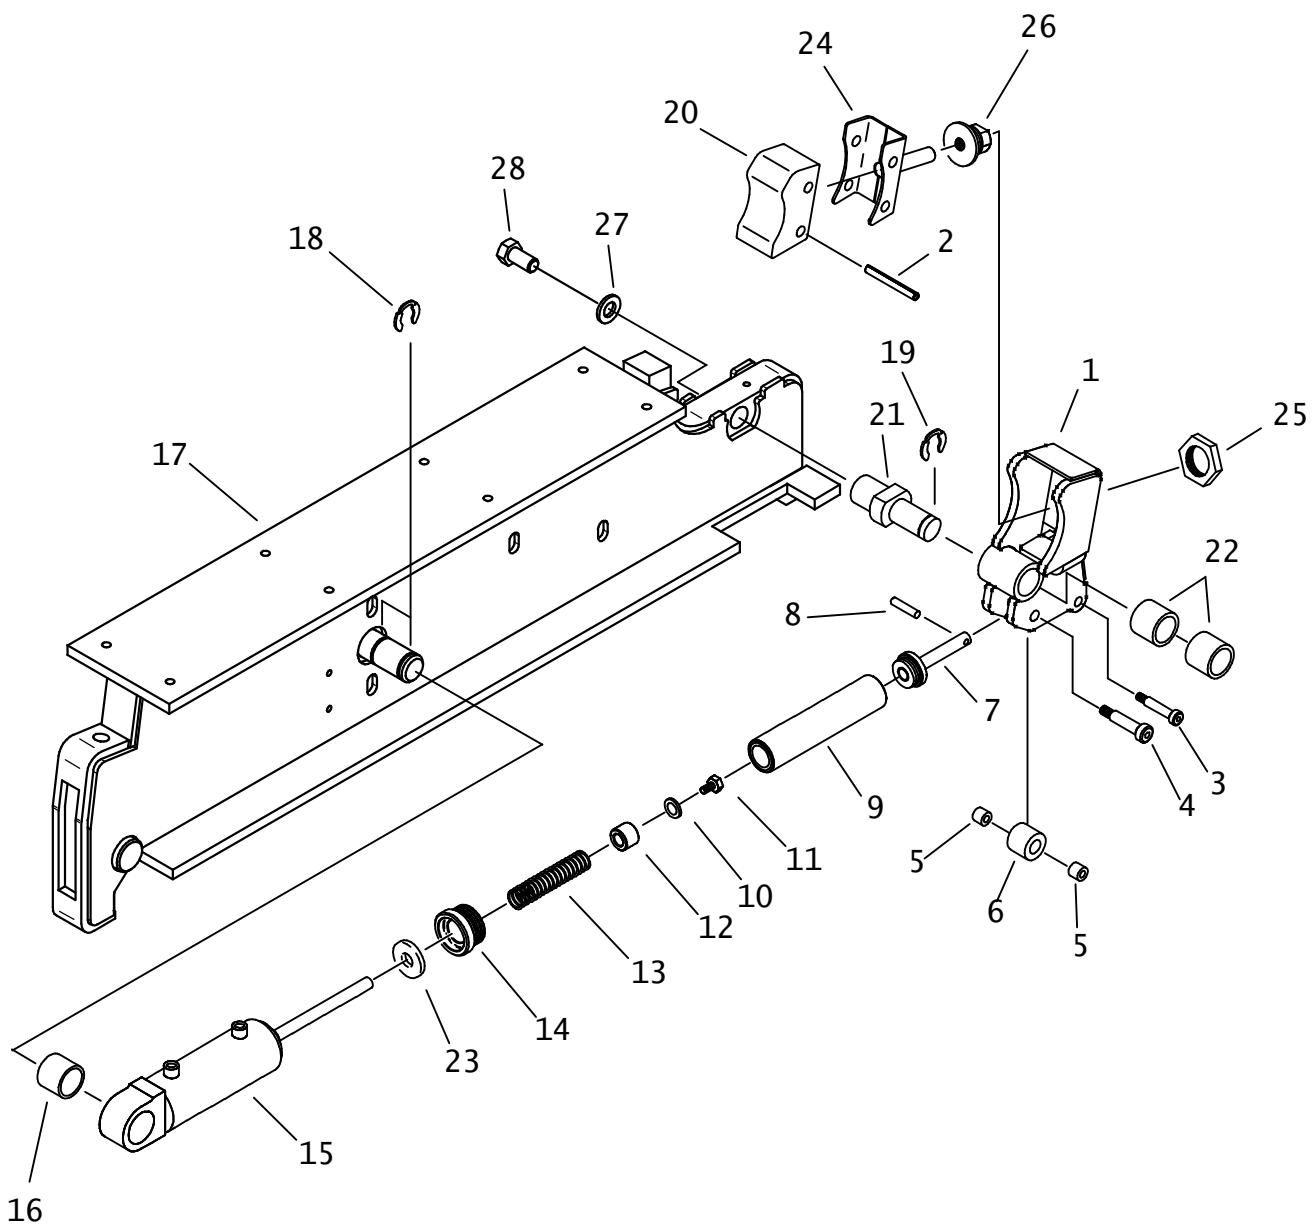

# PIPE LOADER GRIPPERS

BEGINS WITH S/N 2WO856


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	308-939	1	FRONT GRIPPER	
	308-938	1	REAR GRIPPER	
2.	107-682	4	ROLL PIN (M12 X 50MM)	
3.	107-223	2	SHLD BOLT (M10 X 35MM,M8-1.25)	USE 242 LOCTITE OR EQUIVALENT
4.	107-043	2	SHLD BLT (M12 X 35MM,M10-1.50)	USE 242 LOCTITE OR EQUIVALENT
5.	125-137	4	BALL BEARING (.375)	
6.	370-154	2	ROLLER	
7.	349-057	2	PLUNGER	
8.	125-430	2	BRONZE BUSHING (.502")	
9.	349-060	2	TUBE	
10.	348-037	2	SPRING WASHER (1.56")	
11.	105-858	2	BOLT (1/2-NC X 1-1/4")	
12.	349-061	2	SPRING GUIDE	
13.	117-128	2	COMPRESSION SPRING	
14.	351-163	2	CAP	
15.	151-163	-	CYL (2" X 1" X 3")	
16.	125-771	2	COMPOSITION BUSHING (1.25")	
17.	306-897	-	BACK SHUTTLE	ENDS WITH S/N: CMWJT100PA0000027
	306-898	-	FRONT SHUTTLE	ENDS WITH S/N: CMWJT100PA0000027
	301-1041	1	BACK SHUTTLE	
	301-1030	1	FRONT SHUTTLE	
18.	115-483	2	KLIP RING (1.250")	
19.	115-499	2	KLIP RING (1.000")	
20.	308-940	2	GRIP PAD	
21.	349-972	-	PIN (1.5" X 4.539")	ENDS WITH S/N: CMWJT100PA0000027
	300-6323	2	PIN (1.5" X 4.5")	
22.	125-770	4	COMPOSITION BUSHING (1")	
23.	157-537	2	WIPER SEAL (1.500")	
24.	308-944	2	GRIP PAD HOLDER	
25.	105-304	2	JAM NUT (1-5/16-NF)	
26.	107-928	2	ADJUSTMENT NUT	
27.	106-398	2	WASHER (M16, HARDENED)	
28.	107-181	2	BOLT (5/8-NC X 1-1/4", GD8)	

NOT SHOWN:

FOOTNOTES:

NOTE:

# CONTROL VALVE PIPE LOADER

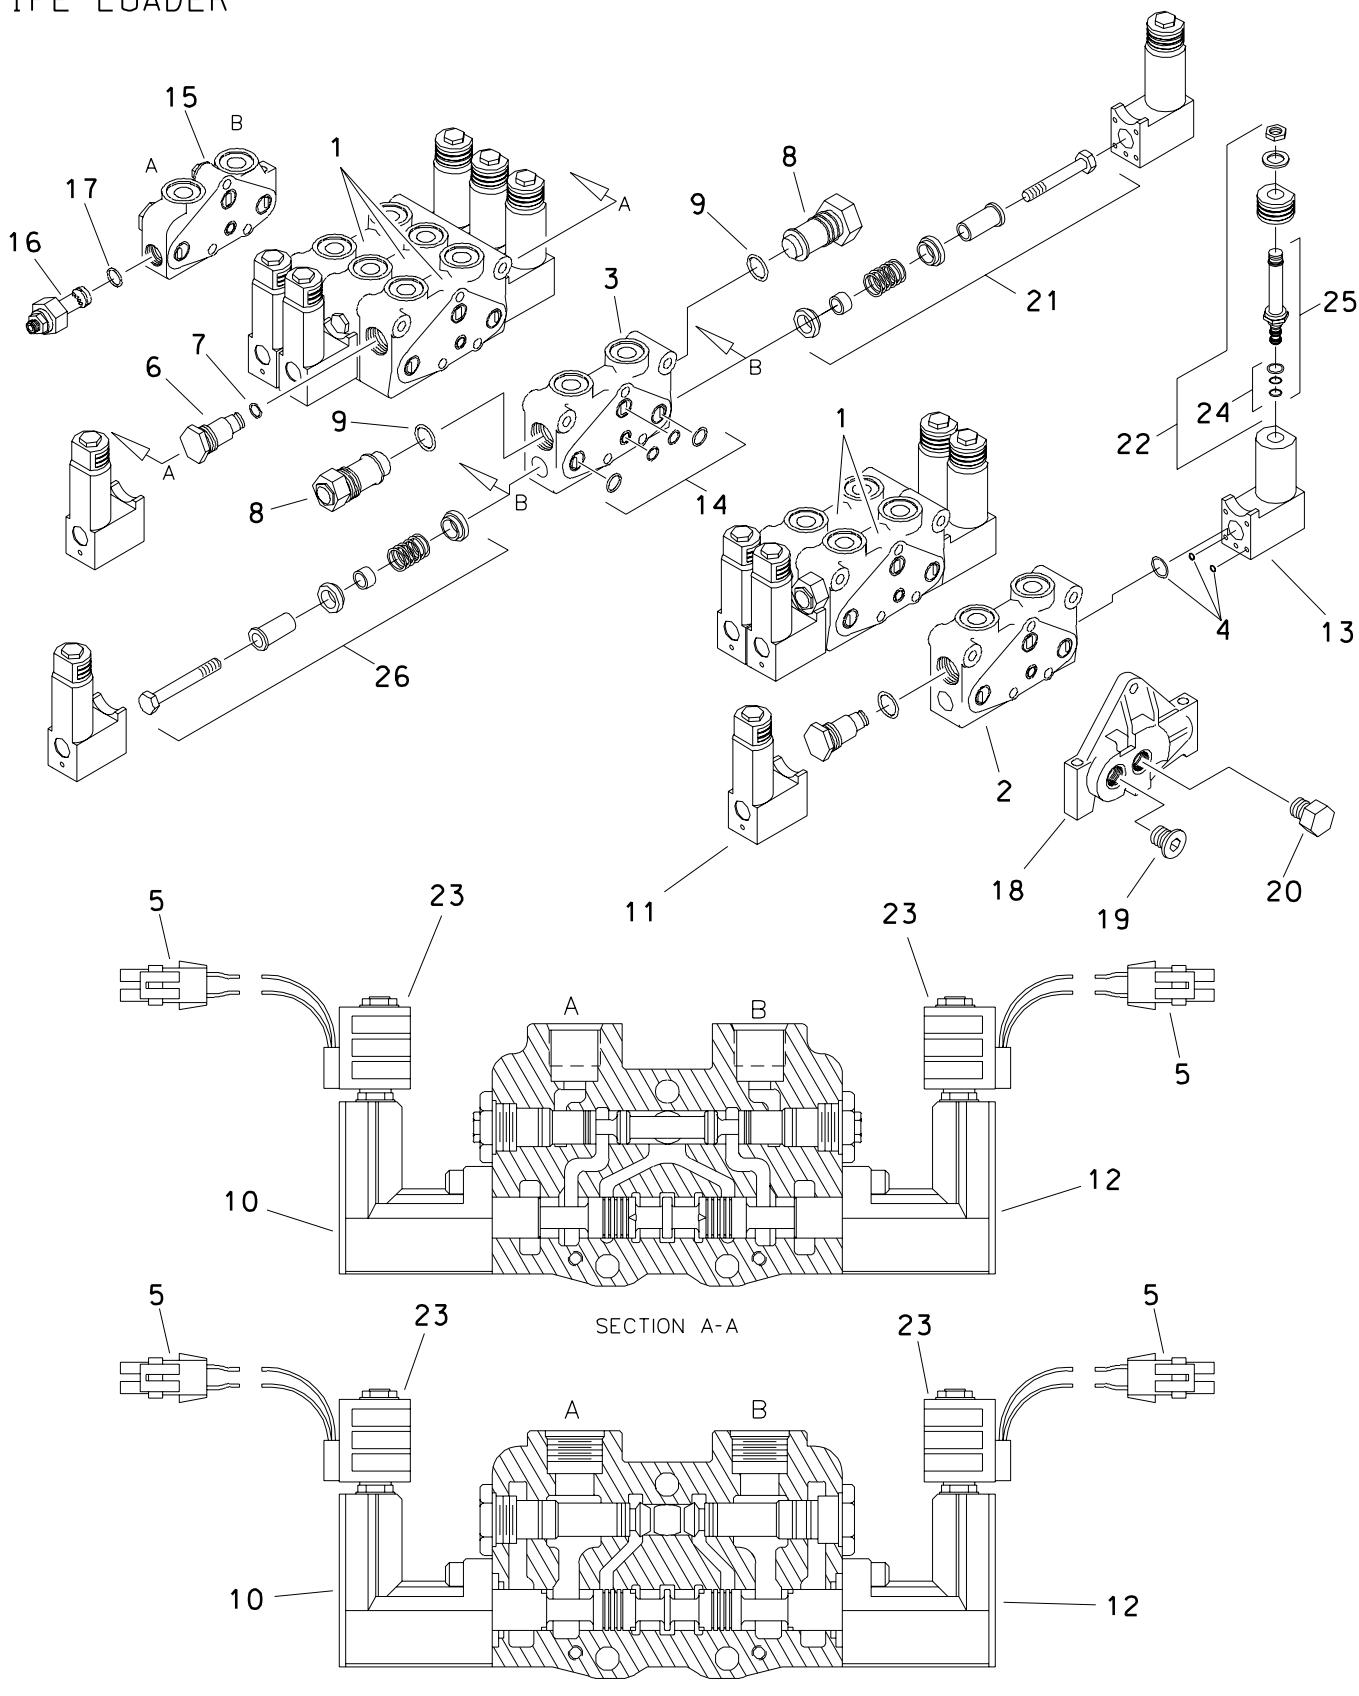


# CONTROL VALVE PIPE LOADER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	153-252		CONTROL VALVE (7-SPOOL)	
1.	499-145	5	VALVE SECTION	
2.	499-146	1	VALVE SECTION	
3.	499-147	1	VALVE SECTION	
4.	499-150	14	BONNET SEAL KIT	
5.	499-151	14	COIL CONNECTOR KIT	
6.	499-029	12	LOCK OUT CARTRIDGE	
7.	499-030	12	LOCK OUT CARTRIDGE SEAL KIT	
8.	500-638	2	RC RELIEF CARTRIDGE (1500 PSI)	
9.	500-950	2	RELIEF CARTRIDGE SEAL KIT	
10.	499-156	6	SOLENOID ACTUATOR	
11.	499-157	1	SOLENOID ACTUATOR	
12.	499-158	6	SOLENOID ACTUATOR	CONTAINS PILOT PORT
13.	499-159	1	SOLENOID ACTUATOR	
14.	500-588	8	SECTIONAL O-RING REPAIR KIT	CONTAINS PILOT PORT
15.	499-144	1	INLET COVER HOUSING	
16.	155-630	1	WH RELIEF CARTRIDGE (2000 PSI)	
17.	500-581	1	SEAL REPAIR KIT	
18.	500-298	1	OUTLET COVER	
19.	500-302	1	PLUG (12S, SOC)	
20.	155-160	1	PLUG (14 SAE, SOC)	
21.	499-155	-	SPRING	
22.	217-949	-	SOLENOID CARTRIDGE KIT	
23.	217-950	-	SOLENOID COIL KIT (W/CONN)	
24.	499-153	-	CARTRIDGE SEAL KIT	
25.	499-152	-	CARTRIDGE TUBE KIT	
26.	499-154	-	SPRING	

FOOTNOTES

# PIPE LOADER VALVE HYDRAULICS

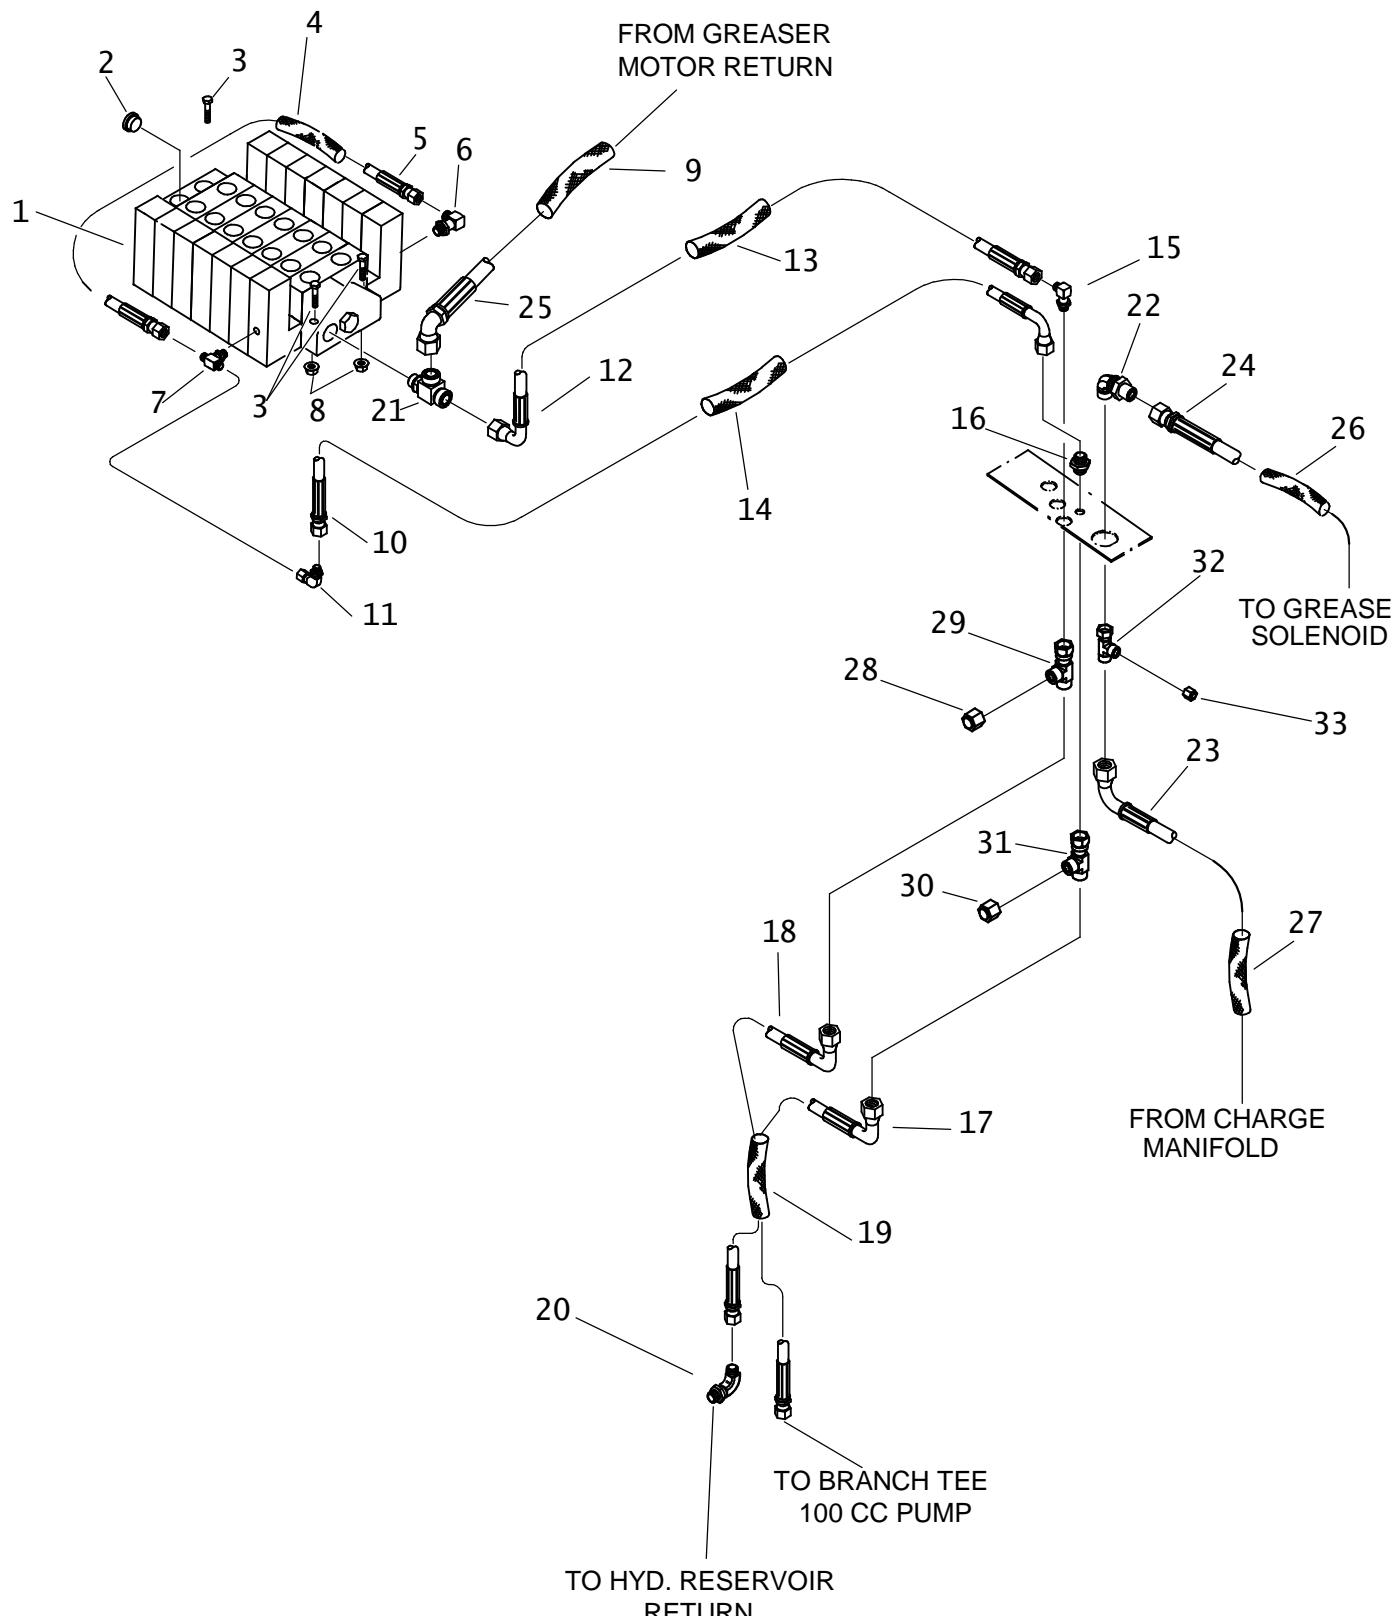

# PIPE LOADER VALVE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	153-252	1	HYD CONTROL VALVE (7-SPOOL)	INCL. REF. NO. 2
2.	500-302	1	PLUG (12S SOC)	SEE FOOTNOTE I
3.	105-292	3	SCREW (M8-1.25 X 75MM)	
4.	117-718	1	ABRASION SLEEVE (1" X 36")	
5.	154-911	1	HOSE (040FX-36"-3000 AR)	
6.	154-252	1	CONNECTOR (04S-04090)	
7.	154-293	1	BR TEE (04S-040-040)	
8.	106-386	3	FLG LOCKNUT (M8-1.25)	
9.	117-737	1	ABRASION SLEEVE (1.59" X 140")	
10.	116-804	1	HOSE (040FX90-69"-3000)	
11.	154-255	1	UNION (040-04FX90)	
12.	116-806	1	HOSE (100FX90S-62"-3000)	
13.	116-634	1	ABRASION SLEEVE (1.59" X 65")	
14.	117-702	1	ABRASION SLEEVE (1" X 68")	
15.	154-291	1	BK CONNECTOR (100-10090BK)	
16.	154-275	1	BK CONNECTOR (040-040BK)	
17.	153-125	1	HOSE (040FX90L-85"-3000)	
18.	153-126	1	HOSE (100FX90L-82"-3000)	
19.	117-312	1	ABRASION SLEEVE (1.59" X 80")	
20.	154-298	1	CONNECTOR (10S-10090)	
21.	154-370	1	RUN TEE (12S-100-100)	
22.	154-396	1	BK CONNECTOR (080-08090BK)	
23.	515-701	1	HOSE (080FX90-122"-3000)	
24.	515-233	1	HOSE (080FX90S-95"-3000)	
25.	515-616	1	HOSE (100FX90-140"-3000)	
26.	116-787	1	ABRASION SLEEVE (1.59" X 95")	
27.	117-674	1	ABRASION SLEEVE (1.59" X 122")	
28.	154-324	1	CAP (100F)	
29.	154-488	1	UNION RUN TEE (100FX-100-100)	
30.	154-296	1	CAP (040F)	
31.	154-265	1	UNION RUN TEE (040FX-040-040)	
32.	154-266	1	UNION RUN TEE (080FX-080-080)	
33.	154-327	1	CAP (080F)	

NOT SHOWN:

FOOTNOTES:


- I. TAKE EXISTING PLUG OUT OF RETURN PORT AND PLACE IN THE PORT SHOWN.

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

# PIPE LOADER VALVE HYDRAULICS

BEGINS WITH S/N: CMWJT100T90000006

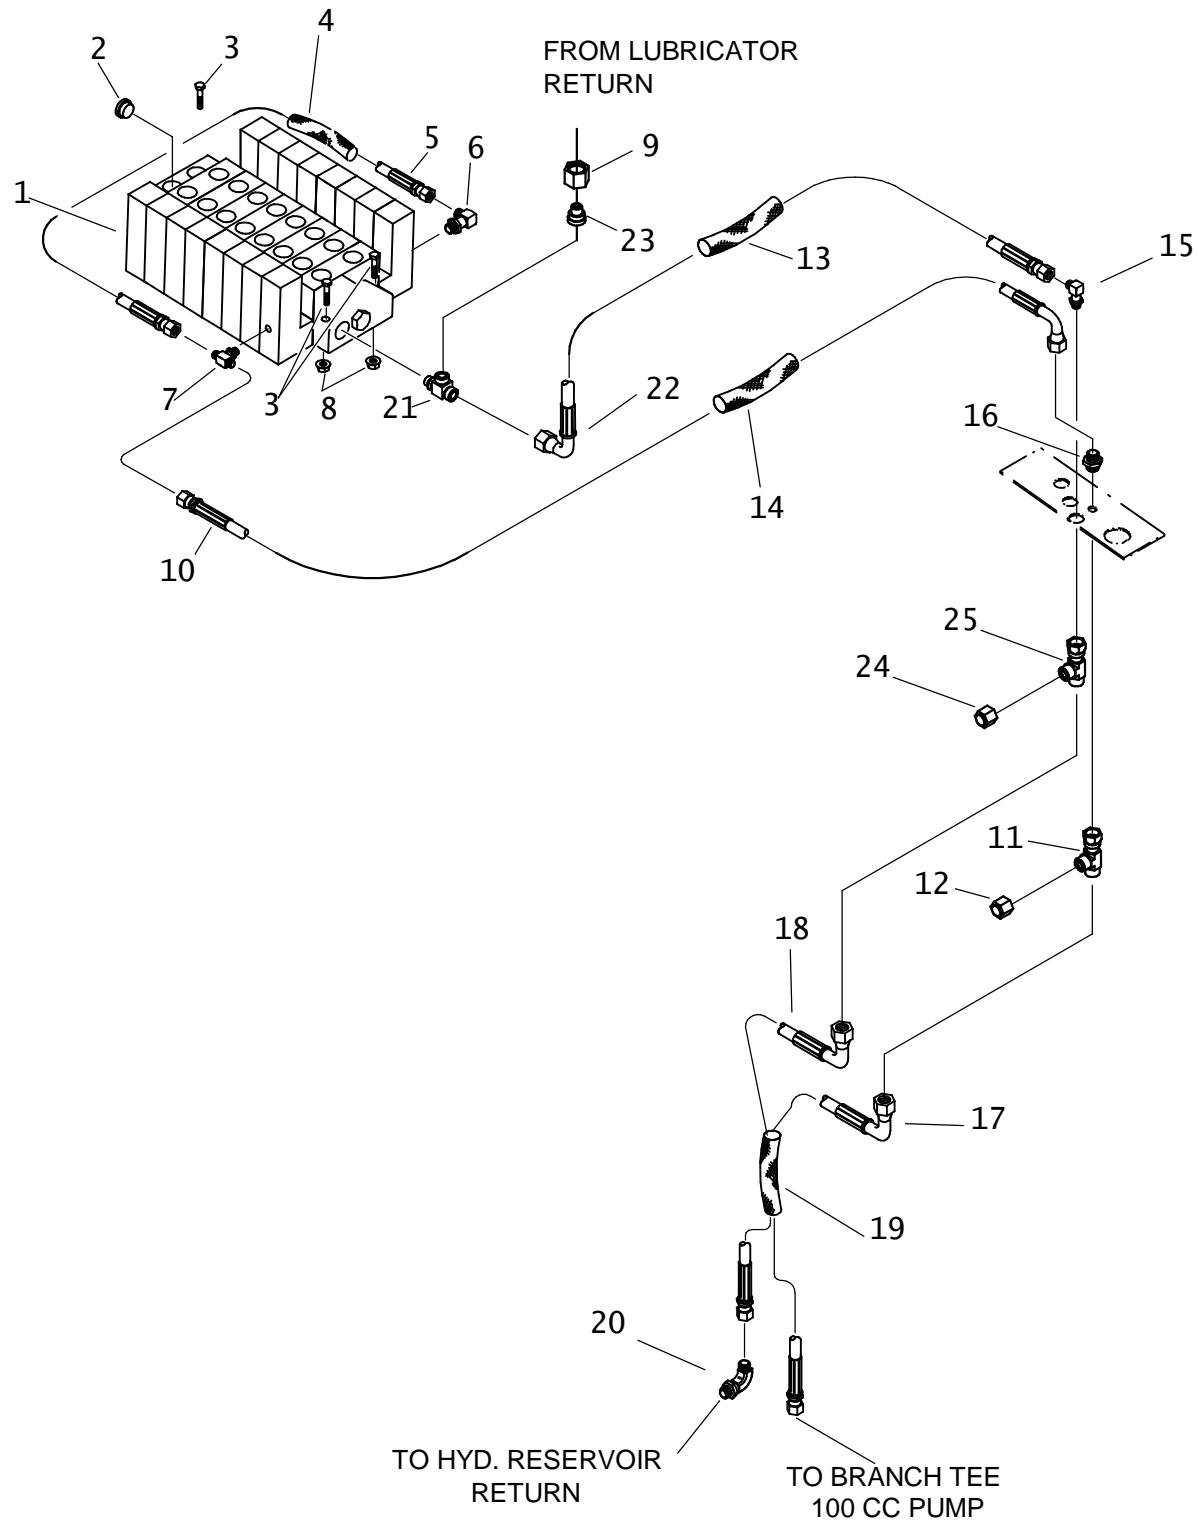

# PIPE LOADER VALVE HYDRAULICS

BEGINS WITH S/N: CMWJT100T90000006

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	150-2731	1	HYD CONTROL VALVE (8-SECTION)	INCL. REF. NO. 2
2.	500-302	1	PLUG (12S SOC)	SEE FOOTNOTE I
3.	105-292	3	SCREW (M8-1.25 X 75MM)	
4.	117-718	1	ABRASION SLEEVE (1" X 36")	
5.	154-911	1	HOSE (040FX-36"-3000 AR)	
6.	154-252	1	CONNECTOR (04S-04090)	
7.	154-293	1	BR TEE (04S-040-040)	
8.	106-386	3	FLG LOCKNUT (M8-1.25)	
9.	154-310	1	REDUCER NUT (100F)	
10.	116-804	1	HOSE (040FX90-69"-3000)	
11.	154-265	1	UNION RUN TEE (040FX-040-040)	
12.	154-296	1	CAP (040F)	
13.	115-755	1	ABRASION SLEEVE (1.59" X 60")	
14.	117-702	1	ABRASION SLEEVE (1" X 68")	
15.	154-291	1	BK CONNECTOR (100-10090BK)	
16.	154-275	1	BK CONNECTOR (040-040BK)	
17.	153-125	1	HOSE (040FX90L-85"-3000)	
18.	153-126	1	HOSE (100FX90L-82"-3000)	
19.	117-312	1	ABRASION SLEEVE (1.59" X 80")	
20.	154-298	1	CONNECTOR (10S-10090)	JT
	154-318	1	RUN TEE (10S-100-100)	AT
21.	154-370	1	RUN TEE (12S-100-100)	
22.	116-805	1	HOSE (100FX90S-58"-3000)	
23.	154-311	1	REDUCER STEM (040)	
24.	154-324	1	CAP (100F)	
25.	154-488	1	UNION RUN TEE (100FX-100-100)	

NOT SHOWN:


FOOTNOTES:

- I. TAKE EXISTING PLUG OUT OF RETURN PORT AND PLACE IN THE PORT SHOWN.

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

**PIPE GRIP HYDRAULICS**  
ENDS WITH S/N: CMWJT100PA0000027

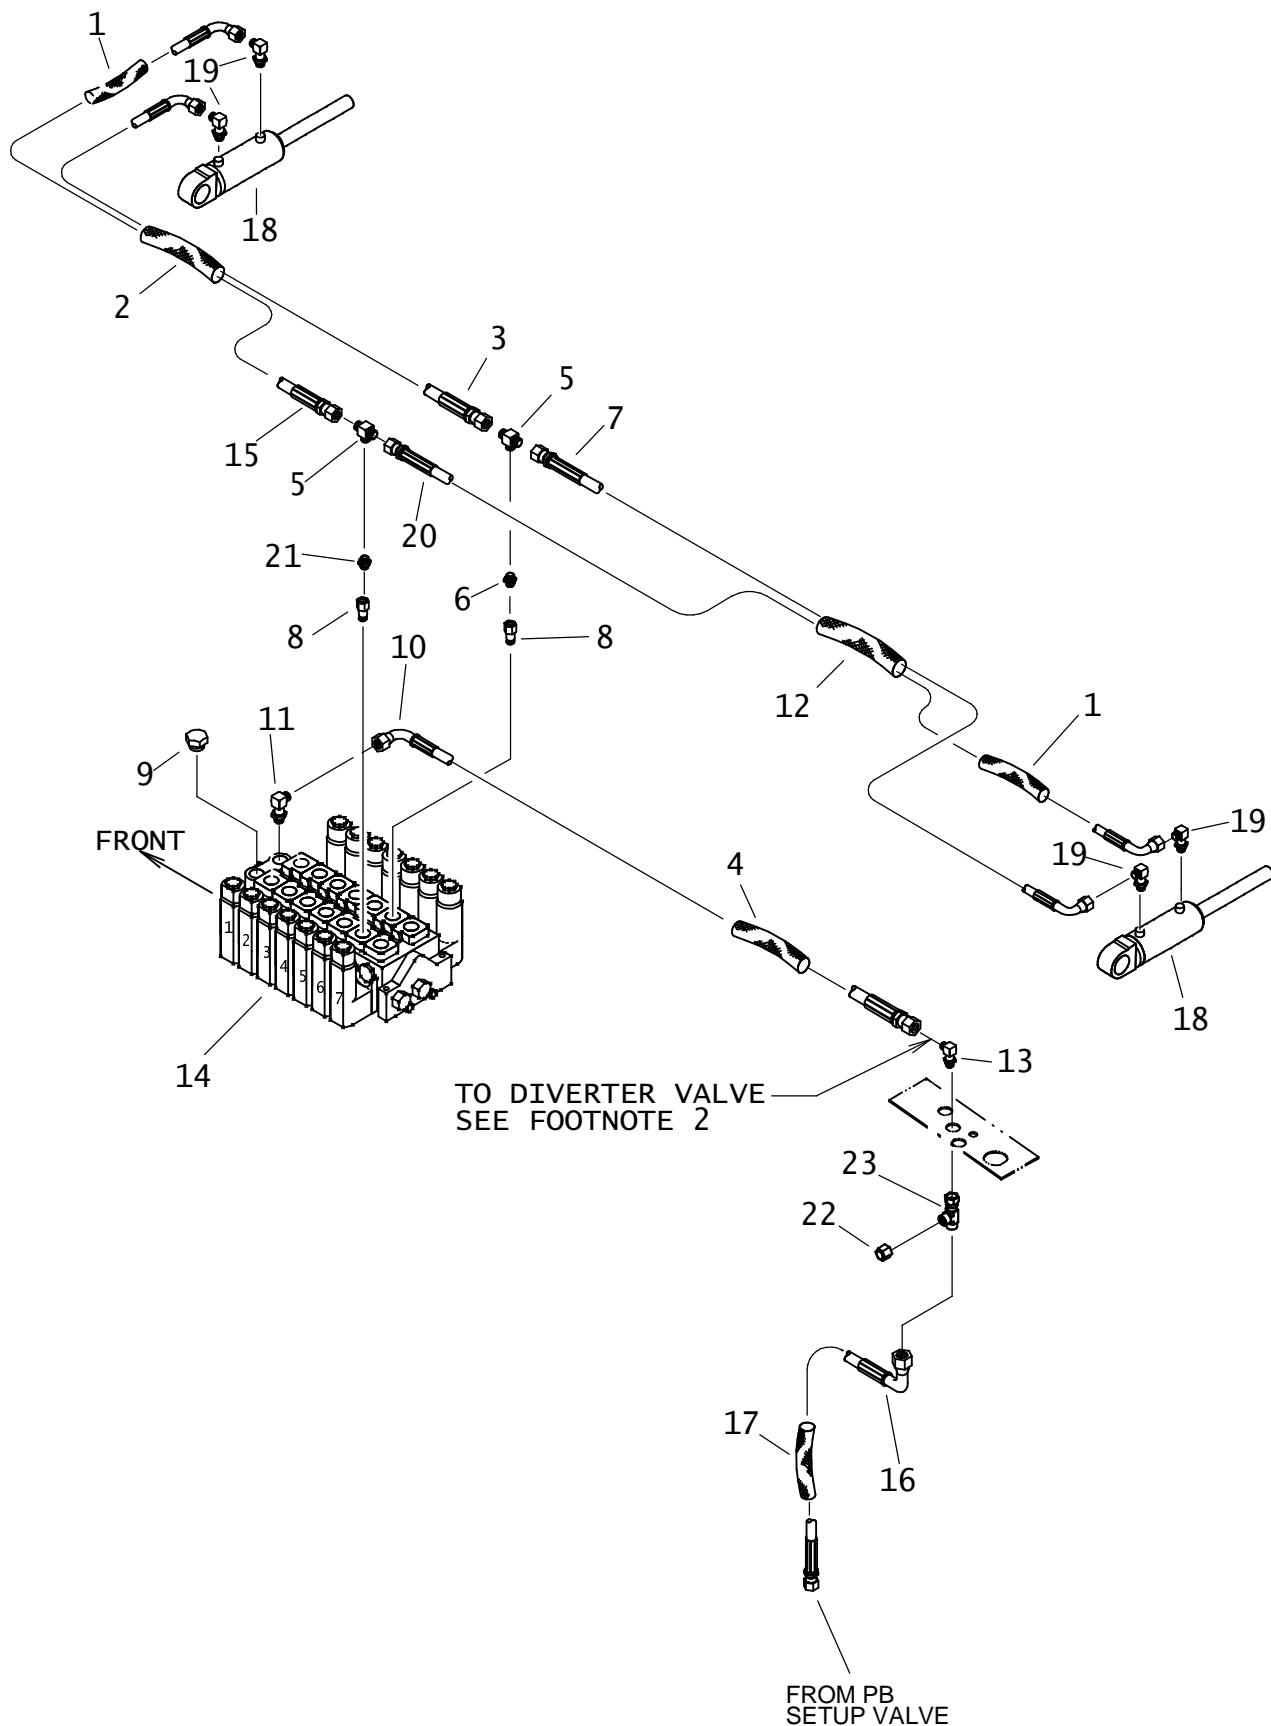

# PIPE GRIP HYDRAULICS

ENDS WITH S/N: CMWJT100PA0000027

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	117-670	2	ABRASION SLEEVE (1.00" x 10")	
2.	117-761	1	ABRASION SLEEVE (1.59" x 70")	
3.	515-240	1	HOSE (040FX90-72"-3000)	
4.	115-963	1	ABRASION SLEEVE (1.59" x 75")	SEE FOOTNOTE 2
5.	154-379	2	UN BR TEE (040FX-040-040)	
6.	514-018	1	CONNECTOR (040-06S, ORF)	
7.	116-809	1	HOSE (040FX90-132"-3000)	
8.	155-171	2	REDUCER (10S-06SF)	
9.	500-302	-	PLUG (12S)	SEE FOOTNOTE 1
10.	116-812	1	HOSE (100FX90-71"-3000)	SEE FOOTNOTE 2
11.	154-300	1	CONNECTOR (100-12S90)	
12.	116-632	1	ABRASION SLEEVE (1.59" x 130")	
13.	154-291	1	BK CONNECTOR (100-10090BK)	
14.	153-252	-	HYD CONTROL VALVE (7-SPOOL)	INCL. REF. NO. 9
	150-2731	-	HYD CONTROL VALVE (8-SPOOL)	INCL. REF. NO. 9 ; BEGINS WITH S/N: CMWJT100T90000006
15.	116-810	1	HOSE (040FX90-76"-3000)	
16.	154-986	1	HOSE (10FX90-80"-3000)	
17.	117-312	1	ABRASION SLEEVE (1.59" x 80")	
18.	151-163	2	HYD CYL (2" X 1" X 3")	
19.	154-252	4	CONNECTOR (04S-04090)	
20.	116-808	1	HOSE (040FX90L-138"-3000)	
21.	154-220	1	CONNECTOR (040-06S)	
22.	154-324	1	CAP (100F)	
23.	154-488	1	UNION RUN TEE (100F-100-100)	

NOT SHOWN:

FOOTNOTES:


- I. TAKE EXISTING PLUG OUT OF RETURN PORT AND PLACE IN THE PORT SHOWN.
2. REFERENCE NO'S 4 & 10 NOT USED IN CURRENT PRODUCTION, SEE PAGE ENTITLED "DIVERTOR VALVE HYDRAULICS".

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT O-RINGS.

## PIPE GRIP HYDRAULICS

BEGINS WITH S/N: CMWJT100A0000029 &amp; CMWAT100A90000001

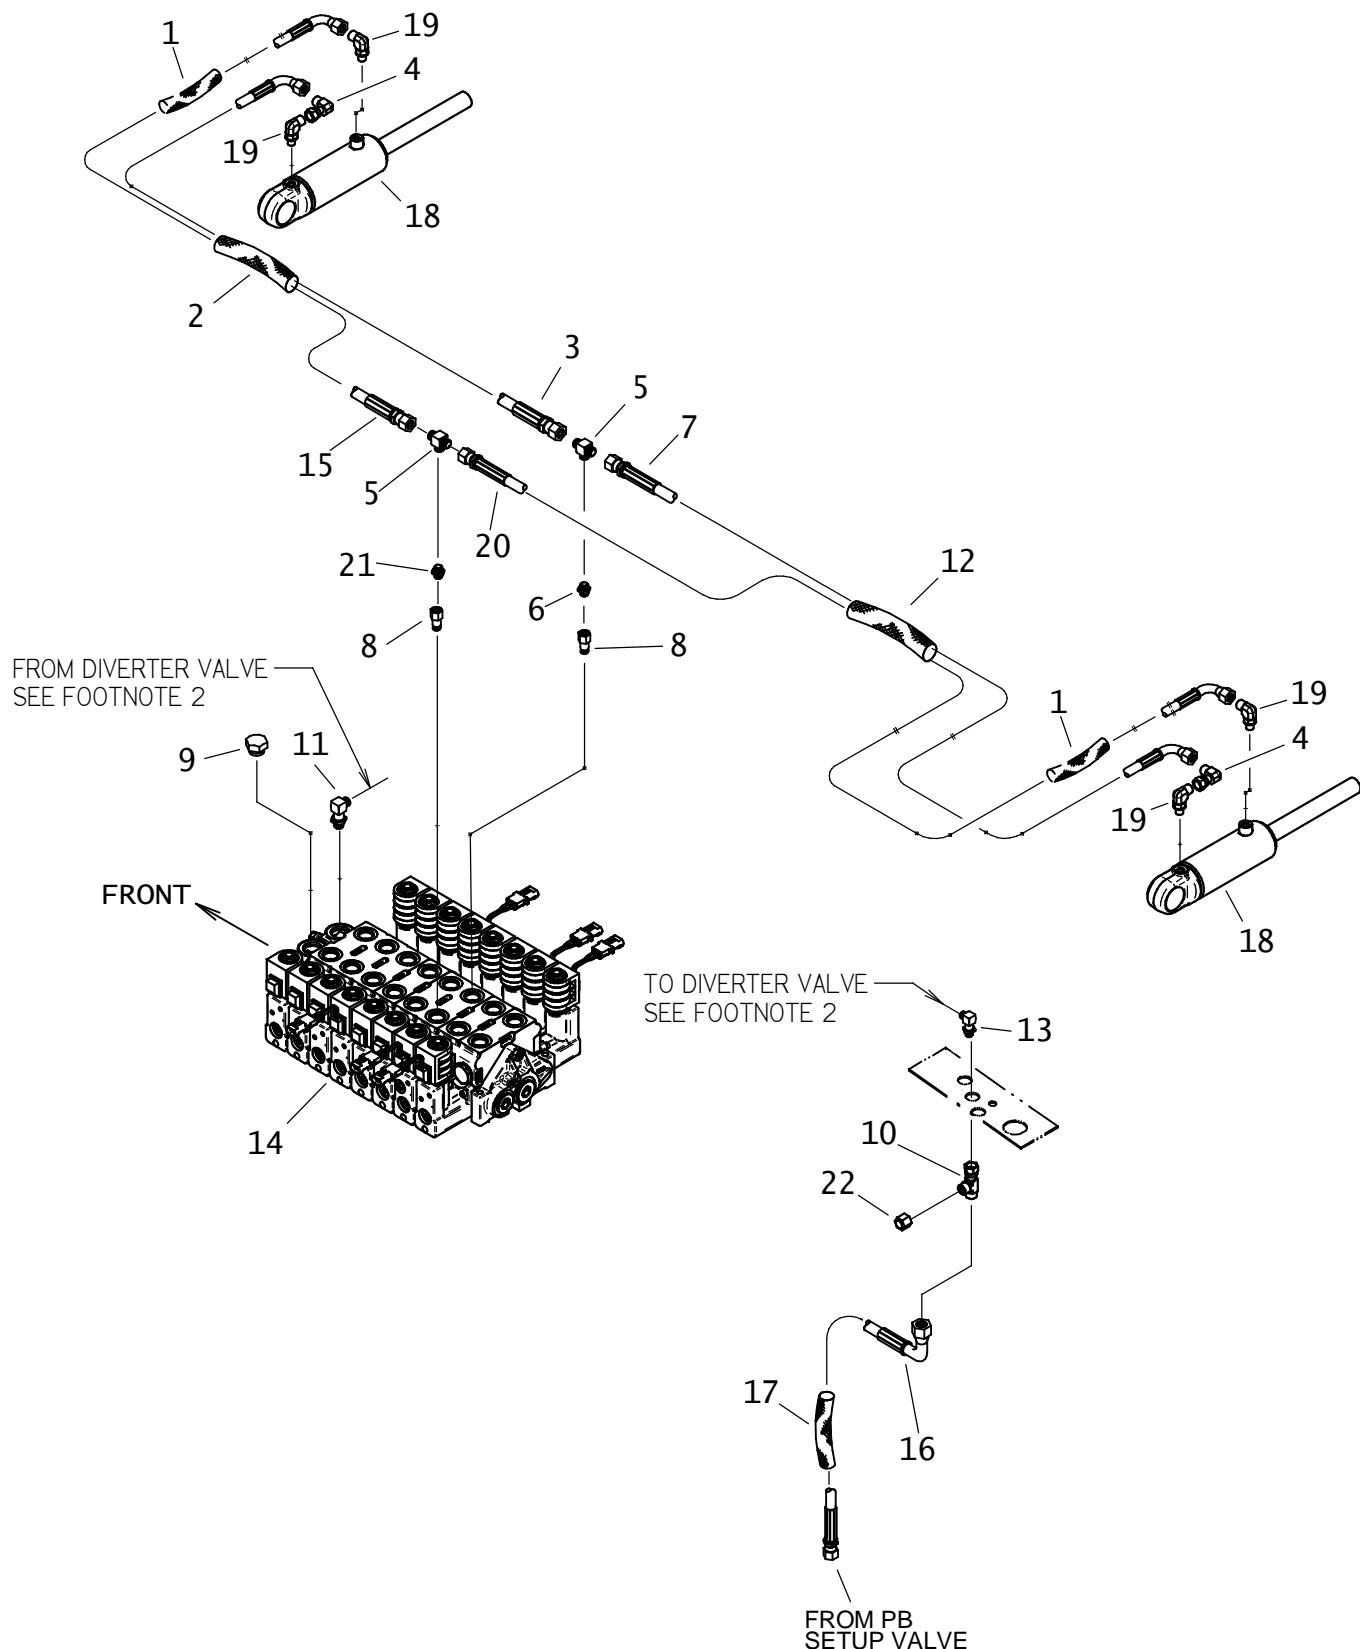

# PIPE GRIP HYDRAULICS

BEGINS WITH S/N: CMWJT100A0000029 & CMWAT100A90000001

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	117-670	2	ABRASION SLEEVE (1.00" x 10")	
2.	117-761	1	ABRASION SLEEVE (1.59" x 70")	
3.	515-240	1	HOSE (040FX90-72"-3000)	
4.	154-255	2	UNION (040-040FX90)	
5.	154-379	2	UN BR TEE (040FX-040-040)	
6.	514-018	1	CONNECTOR (040-06S, ORF)	
7.	150-3138	1	HOSE (040FX90L-136"-3000)	
8.	155-171	2	REDUCER (10S-06SF)	
9.	500-302	-	PLUG (12S)	SEE FOOTNOTE I
10.	154-488	1	UNION RUN TEE (100F-100-100)	
11.	154-300	1	CONNECTOR (100-12S90)	
12.	105-1481	1	ABRASION SLEEVE (1.59" x 132")	
13.	154-291	1	BK CONNECTOR (100-10090BK)	
14.	150-2731	-	HYD CONTROL VALVE (8-SPOOL)	INCL. REF. NO. 9
15.	116-810	1	HOSE (040FX90-76"-3000)	
16.	154-986	1	HOSE (10FX90-80"-3000)	
17.	117-312	1	ABRASION SLEEVE (1.59" x 80")	
18.	151-163	2	HYD CYL (2" x 1" x 3")	
19.	154-252	4	CONNECTOR (04S-04090)	
20.	150-3139	1	HOSE (040FX90L-140"-3000)	
21.	154-220	1	CONNECTOR (040-06S)	
22.	154-324	1	CAP (100F)	

NOT SHOWN:


FOOTNOTES:

- I. TAKE EXISTING PLUG OUT OF RETURN PORT AND PLACE IN THE PORT SHOWN.
2. SEE PAGE ENTITLED "DIVERTOR VALVE HYDRAULICS".

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT O-RINGS.

## PIPE LIFT AND SHUTTLE HYDRAULICS

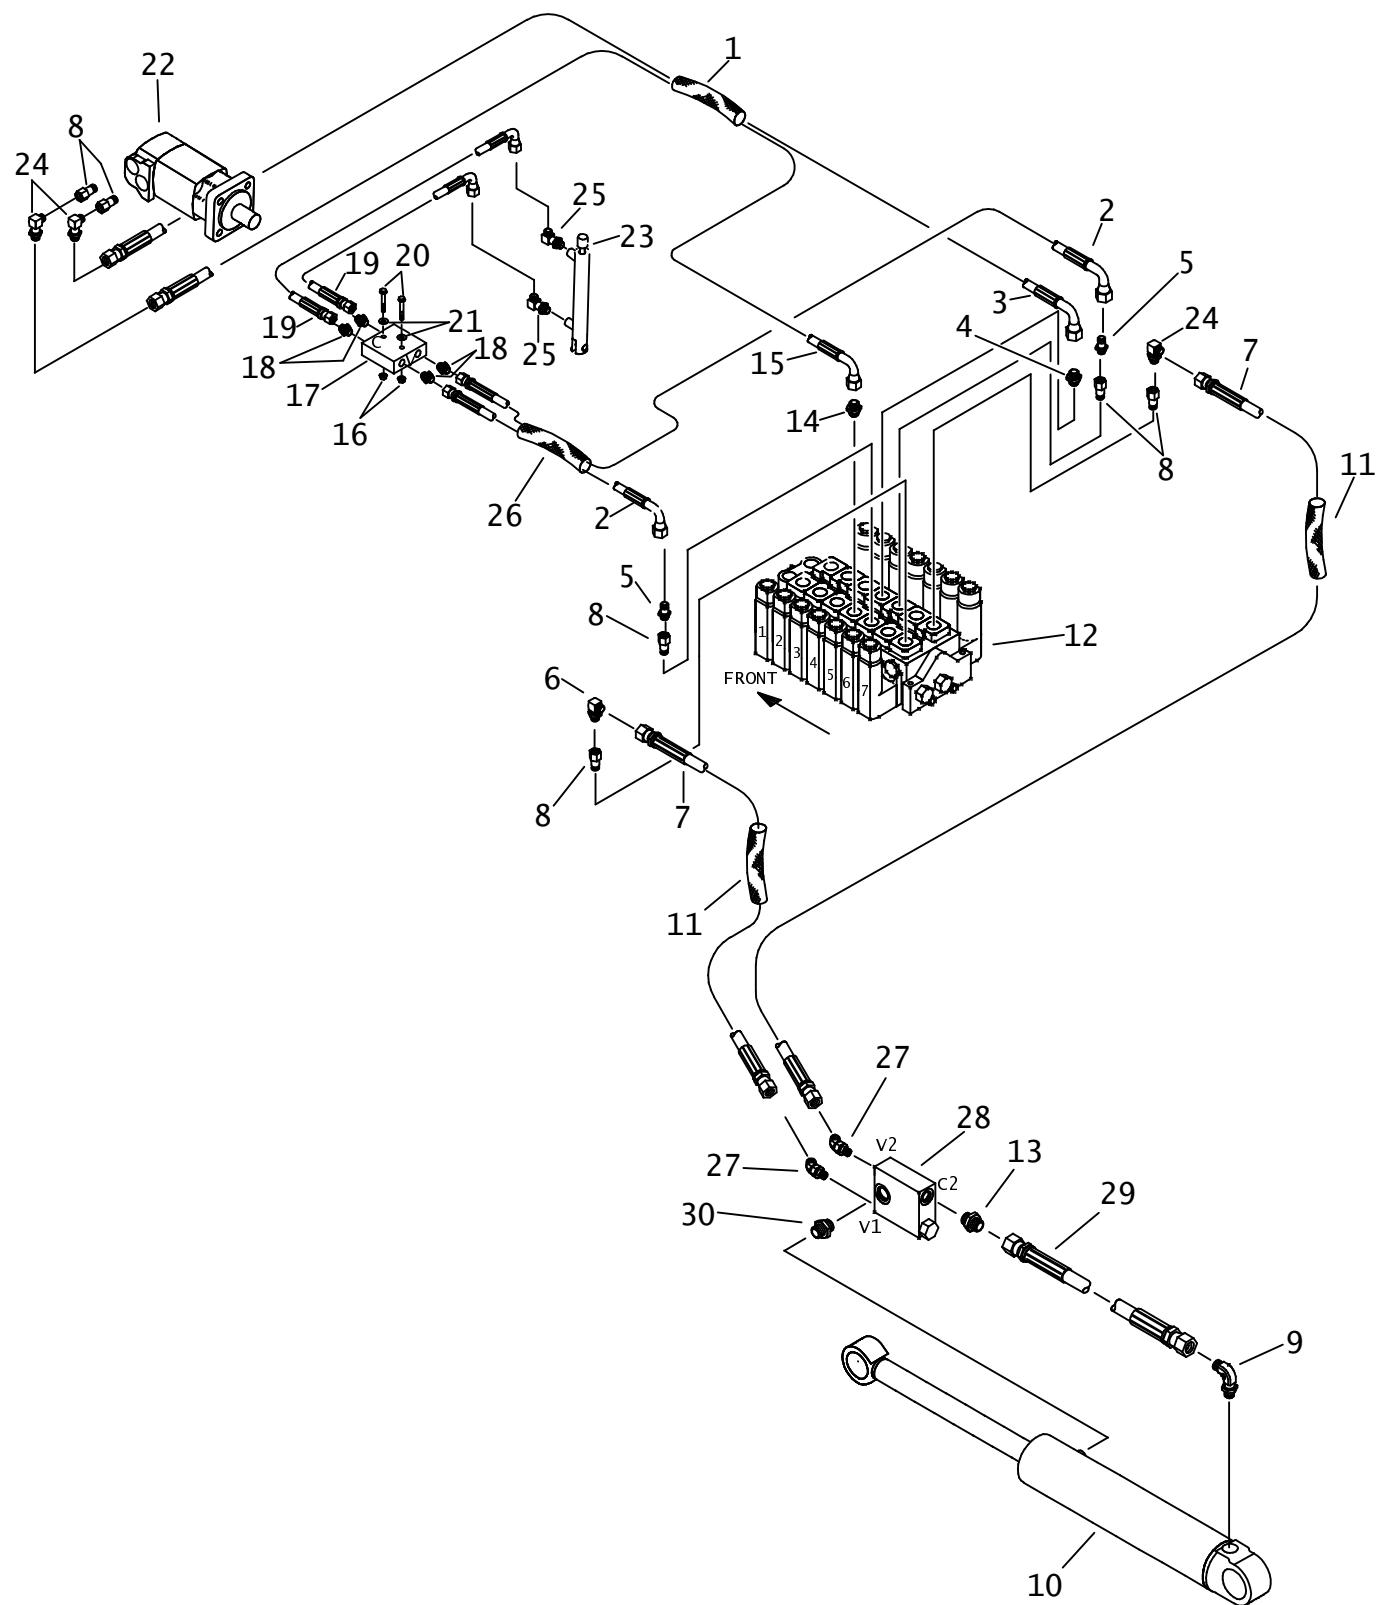

# PIPE LIFT AND SHUTTLE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	115-737	1	ABRASION SLEEVE (1.59" X 40")	
2.	154-743	2	HOSE (040FX90S-23"-3000)	
3.	116-811	1	HOSE (060FX90-40"-3000)	
4.	156-993	1	CONNECTOR (060-10S, ORF)	
5.	514-074	2	CONNECTOR (06S-040, ORF)	
6.	156-193	1	CONNECTOR (06S-06090, ORF)	
7.	154-798	2	HOSE (060FX-62"-3000)	
8.	155-171	6	REDUCER (10S-06SF)	
9.	154-227	1	CONNECTOR (060-08S90)	
10.	151-085	1	CYL (3.5" X 1.75" X 16")	
11.	116-613	2	ABRASION SLEEVE (1.00" X 64")	
12.	153-252	1	HYD CONTROL VALVE (7 SPOOL)	ENDS WITH CMW S/N:
	150-2730	1	HYD CONTROL VALVE (8 SPOOL)	BEGINS WITH CMW S/N:
13.	154-221	1	CONNECTOR (06S-060)	
14.	154-369	1	CONNECTOR (060-10S)	
15.	515-015	1	HOSE (060FX90M-44"-3000)	
16.	105-832	2	FLG LOCKNUT (1/4-NC)	
17.	155-623	1	DOUBLE LOCKOUT VALVE	
18.	154-220	4	CONNECTOR (040-06S)	
19.	515-041	2	HOSE (040FX90-20"-3000)	
20.	105-106	2	BOLT (1/4-NC X 2")	
21.	105-095	2	WASHER (1/4")	
22.	158-952	1	HYD MOTOR (SHUTTLE)	
23.	150-726	1	CYL (1.0" X 6.0")	
24.	154-342	3	CONNECTOR (06S-06090)	
25.	154-252	2	CONNECTOR (04S-04090)	
26.	117-706	1	ABRASION SLEEVE (1.59" X 17")	
27.	154-224	2	CONNECTOR (06S-06045)	
28.	159-482	1	CHECK VALVE	
29.	154-731	1	HOSE (060FX-17"-3000)	
30.	154-466	1	CONNECTOR (08S-08S)	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## DIVERTER VALVE HYDRAULICS

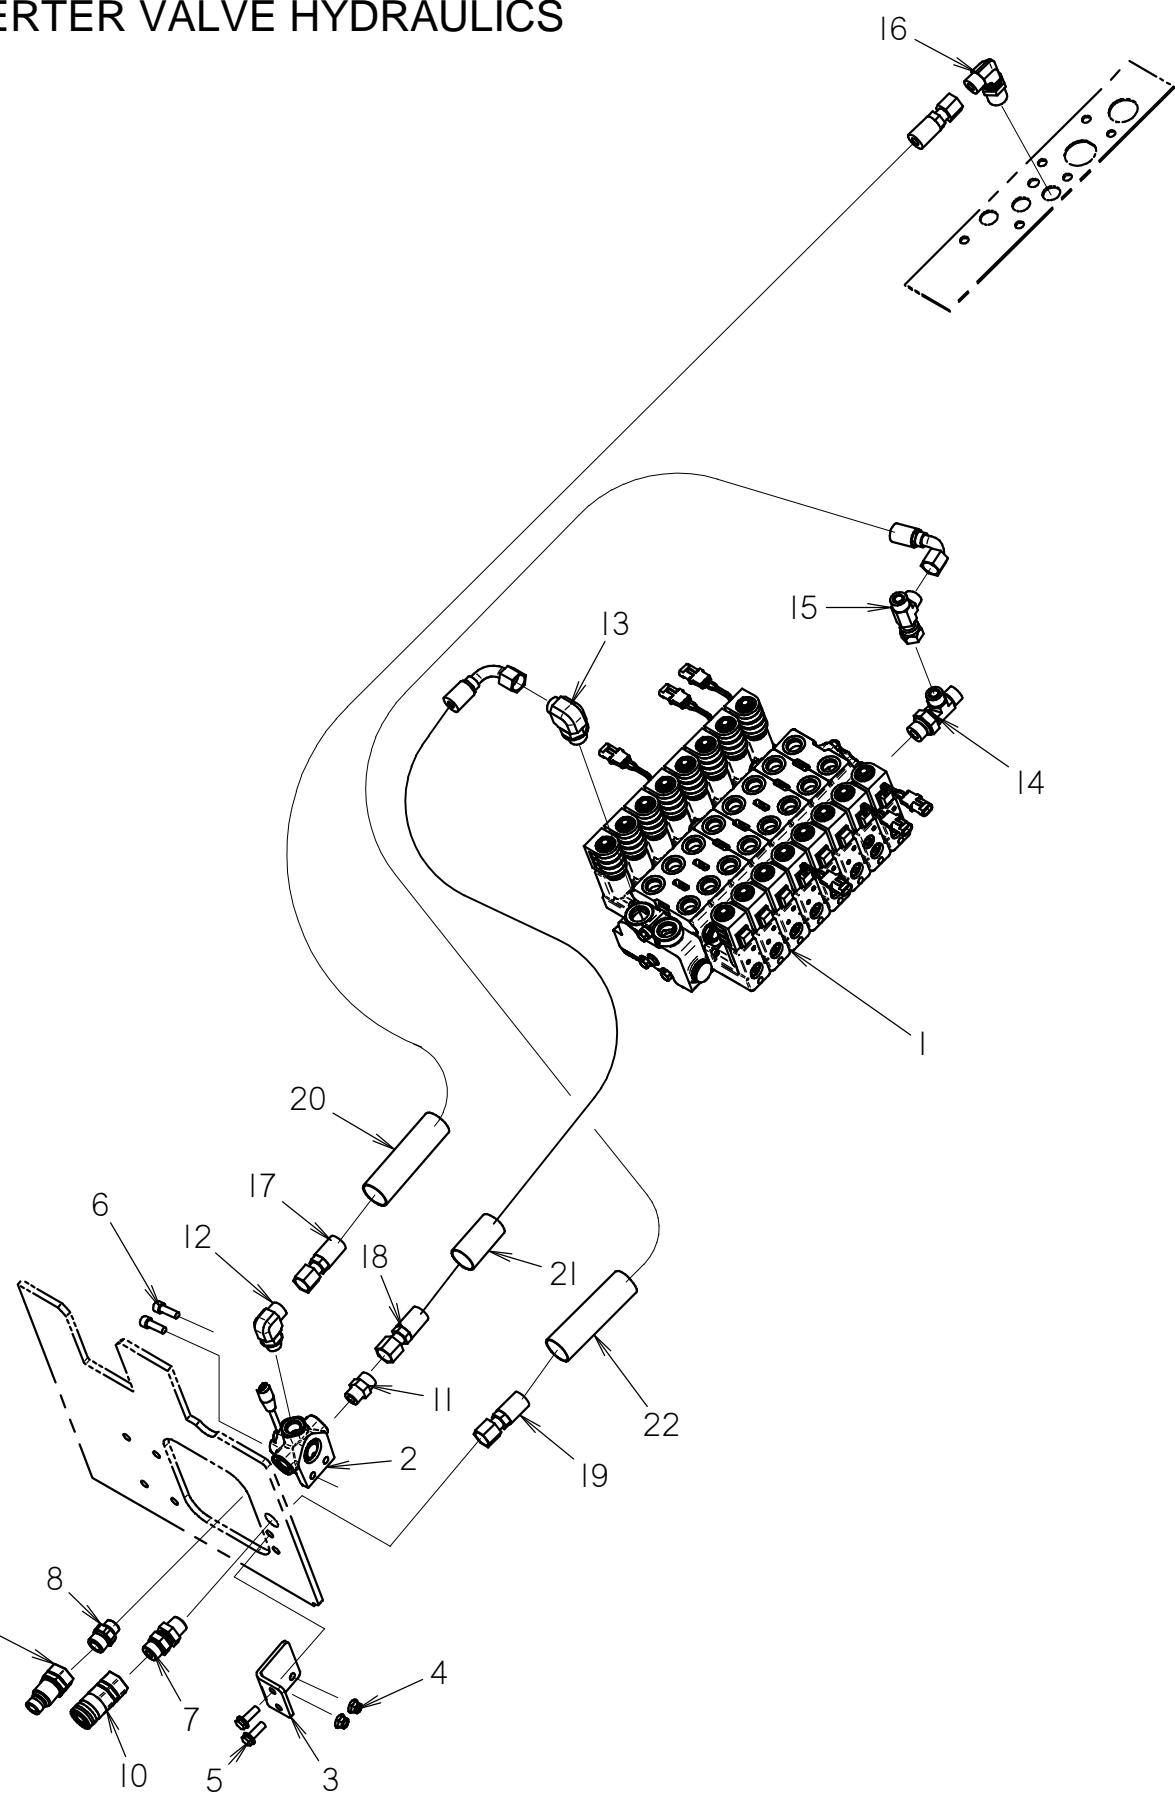

# DIVERTER VALVE HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-2731	1	HYD CONTROL VALVE (8-SECTION)	
2	150-2927	1	DIVERTER VALVE 2 POS ROTARY 3 WAY 24 GPM	
3	300-9910	1	BRACKET	
4	106-387	2	FLG LOCKNUT (M10-I.50)	
5	106-383	2	FLG LK SCREW (M10-I.50 X 30MM)	
6	106-755	2	SCREW (M10-I.50 X 30MM, SOCI)	
7	514-275	1	BK CONNECTOR (I2S-100)	
8	150-1241	1	CONNECTOR (I0S-I2S)	
9	159-351	1	QDC BODY (08-I2SF)	
10	159-350	1	QDC ADAPTER (08-I2SF)	
11	154-301	1	CONNECTOR (I0S-100)	
12	154-298	1	CONNECTOR (I0S-I0090)	
13	154-300	1	CONNECTOR (I00-I2S90)	
14	154-370	1	RUN TEE (I2S-100-100)	
15	154-488	1	UN RUN TEE (I00FX-100-100)	
16	154-291	1	BK CONNECTOR (I00-I0090BK)	
17	153-274	1	HOSE (I00FX-I22"-3000)	
18	515-743	1	HOSE (I00FX90M-47"-3000)	
19	154-986	1	HOSE (I00FX90S-80"-3000)	
20	I17-674	1	ABRASION SLEEVE (I.59" X I22")	
21	I17-720	1	ABRASION SLEEVE (I.59" X 48")	
22	I17-312	1	ABRASION SLEEVE (I.59" X 80")	

NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC MOTOR  
SHUTTLE DRIVE  
SAE MOUNT PORTS

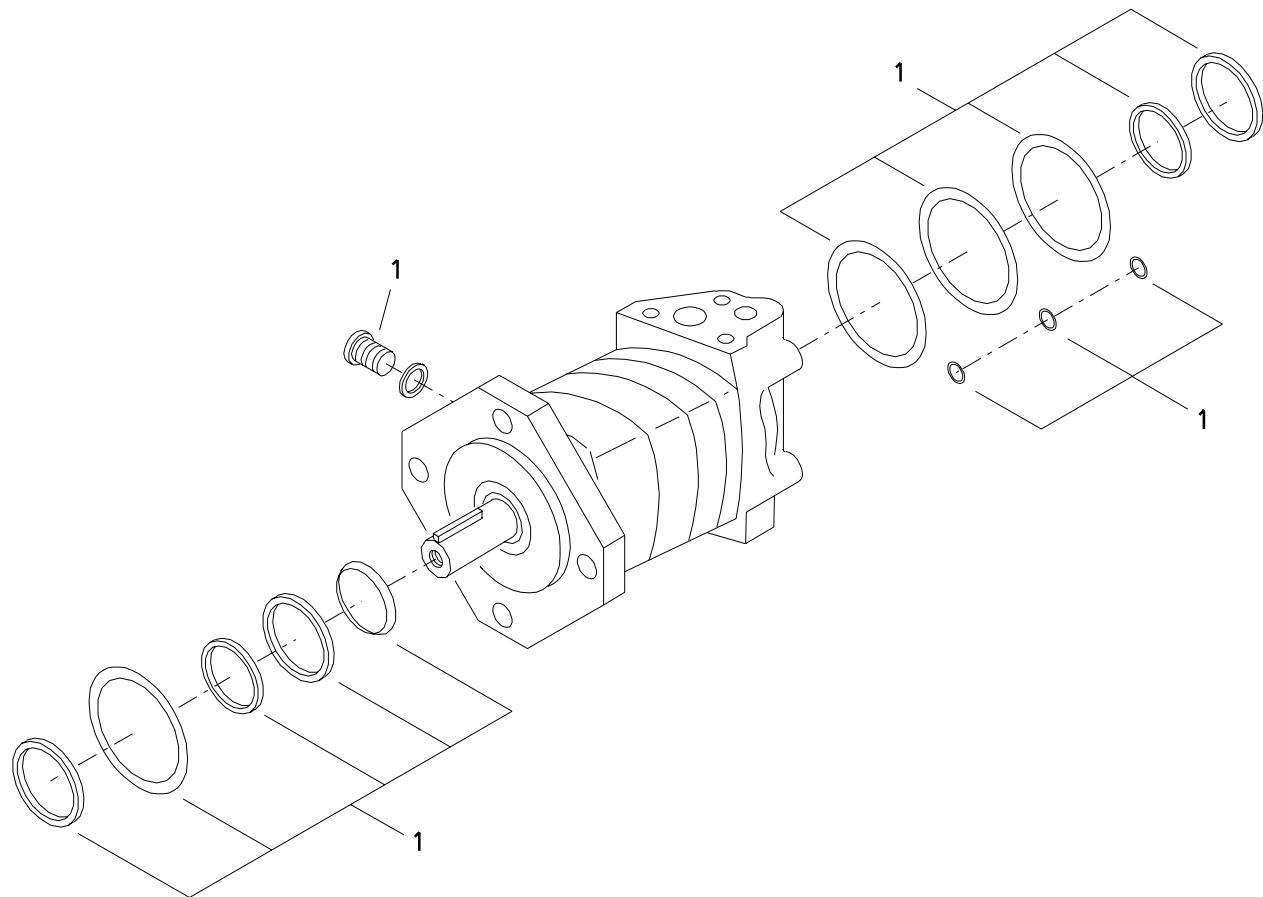

## HYDRAULIC MOTOR

SHUTTLE DRIVE


SAE MOUNT PORTS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	158-952	1	HYDRAULIC MOTOR (SHUTTLE)	
	500-658	1	SEAL REPAIR KIT	
	157-712	1	SHAFT SEAL	

FOOTNOTES

# AIR COMPRESSOR

ENDS WITH S/N:CMWJT100C90000005

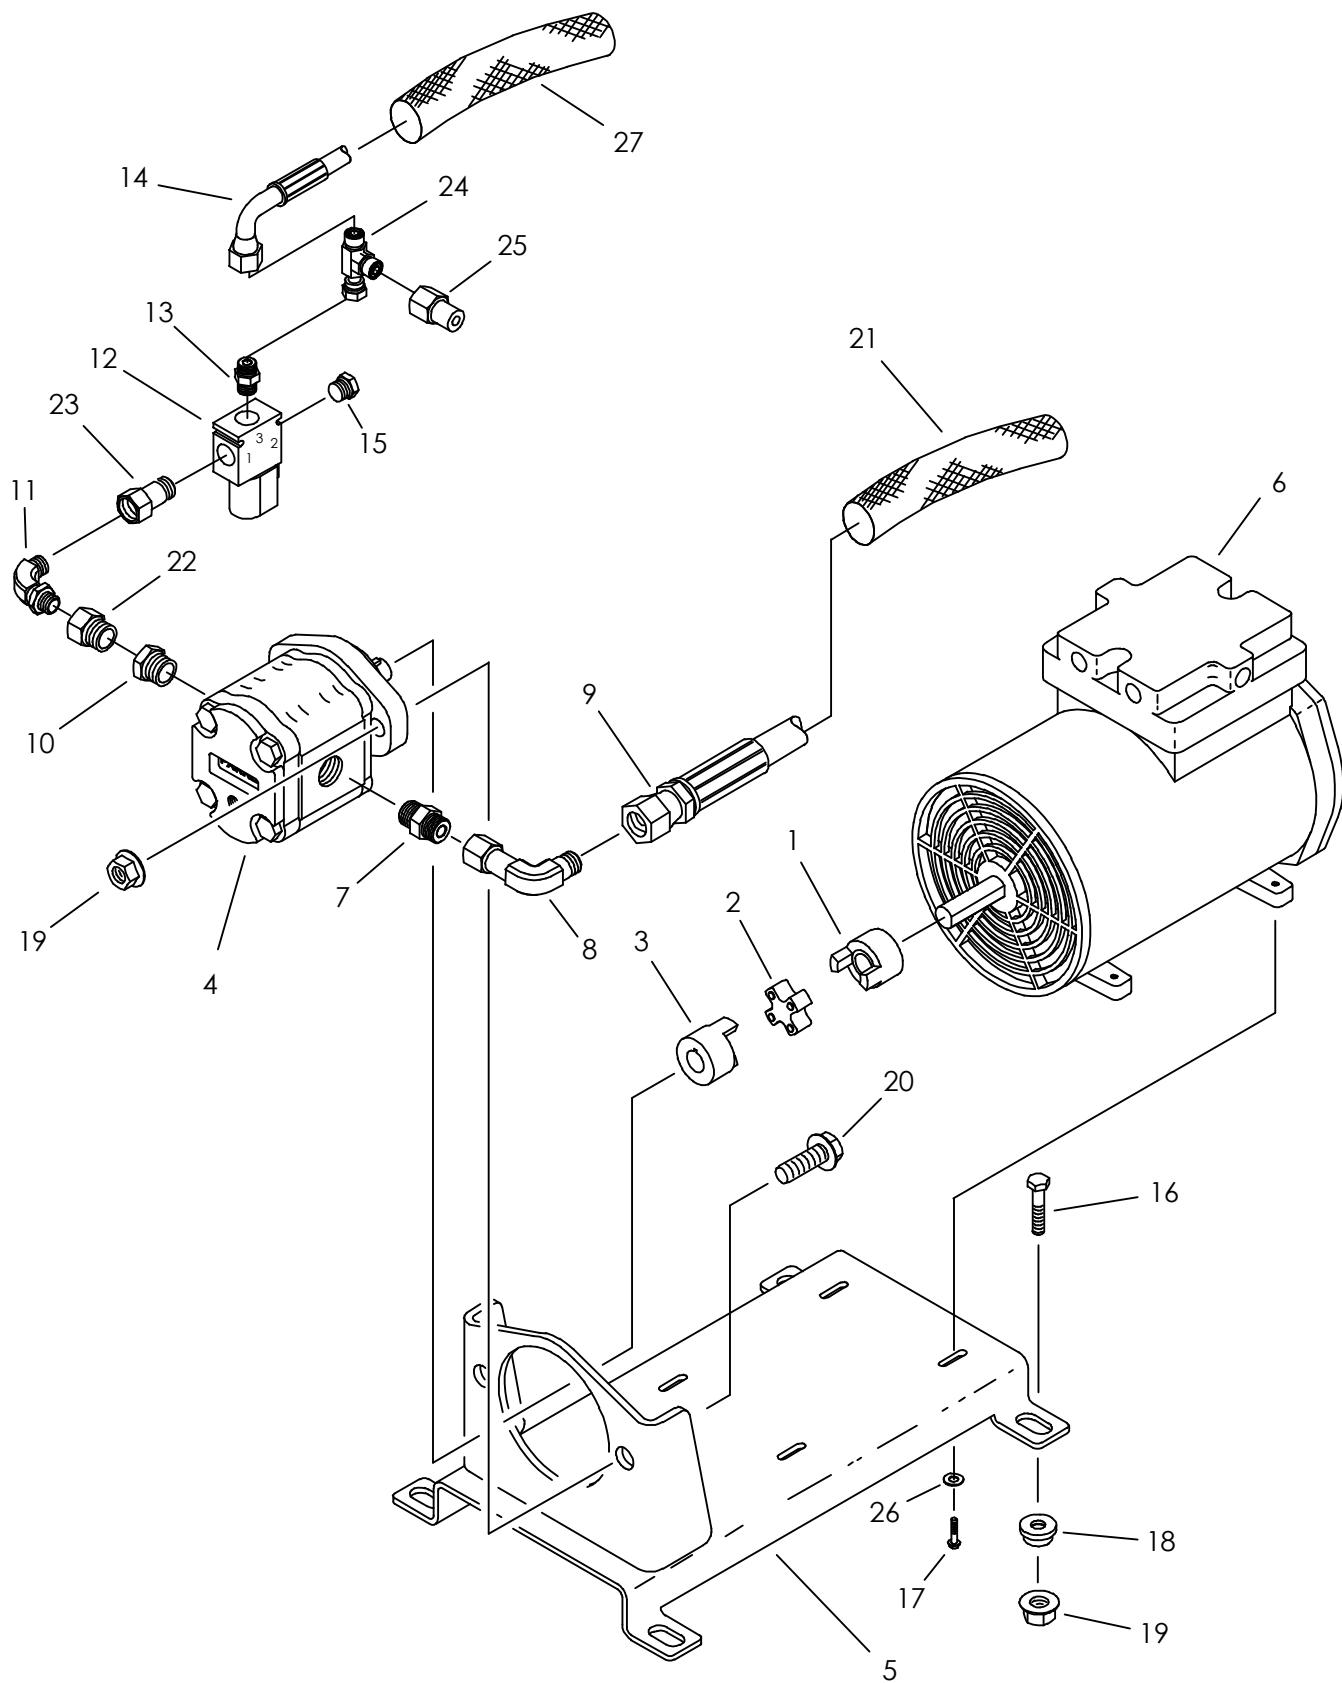

# AIR COMPRESSOR

ENDS WITH S/N:CMWJT100C90000005

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	166-317	1	COUPLER 1/2" W/OUT KEYWAY	
2.	166-318	1	SPIDER CENTER L070	
3.	166-319	1	COUPLER 5/8" W/KEYWAY	
4.	158-918	1	HYDRAULIC MOTOR	
5.	307-078	1	COMPRESSOR STAND	
6.	120-086	1	AIR COMPRESSOR	OBSOLETE, SUPERCEDED WITH I90-1697 HYD GREASE PUMP KIT
	191-160		SERVICE REPAIR KIT	
	499-330		FILTER ASSEMBLY	
7.	154-308	1	CONNECTOR (100-12S)	
8.	154-315	1	CONNECTOR (100-100FX90)	
9.	515-616	1	HOSE (100FX90-140"-3000)	
10.	510-017	1	REDUCER (12S-10SF)	
11.	154-342	1	CONNECTOR (06S-06090)	
12.	158-627	1	SOLENOID VALVE	SEE FOOTNOTE 1
13.	154-246	1	CONNECTOR (06S-080)	
14.	515-233	1	HOSE (080FX90S-95"-3000)	
15.	155-130	1	PLUG (06S)	
16.	105-271	4	SCREW (M10-1.5 x 40mm)	
17.	106-349	4	SCREW (#8-32 x 3/4", PAN)	
18.	214-658	4	RUBBER ISOLATOR	
19.	106-387	6	FLG LOCKNUT (M10-1.50)	
20.	106-079	2	SCREW (M10-1.50 x 30MM)	
21.	117-737	1	ABRASION SLEEVE (1.59" x 140")	
22.	159-947	1	REDUCER(10S-06SF)	
23.	514-409	1	UNION (06J-060FX)	SEE FOOTNOTE 2
24.	154-266	1	UNION RUN TEE (080FX-080-080)	
25.	159-158	1	QDC ADAPTER (02-080FX)	
26.	106-205	4	WASHER (.191")	
27.	116-787	1	ABRASION SLEEVE (1.59" x 95")	

NOT SHOWN:

FOOTNOTES:


1. #12 VALVE 158-627 (PORT #1 OUTLET, PORT #2 PLUGGED, PORT #3 INLET)
2. USE O-RING 155-705 AS NEEDED FOR UNION 514-409

NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RING.

# AUTO-GREASER

ENDS WITH CMW S/N:

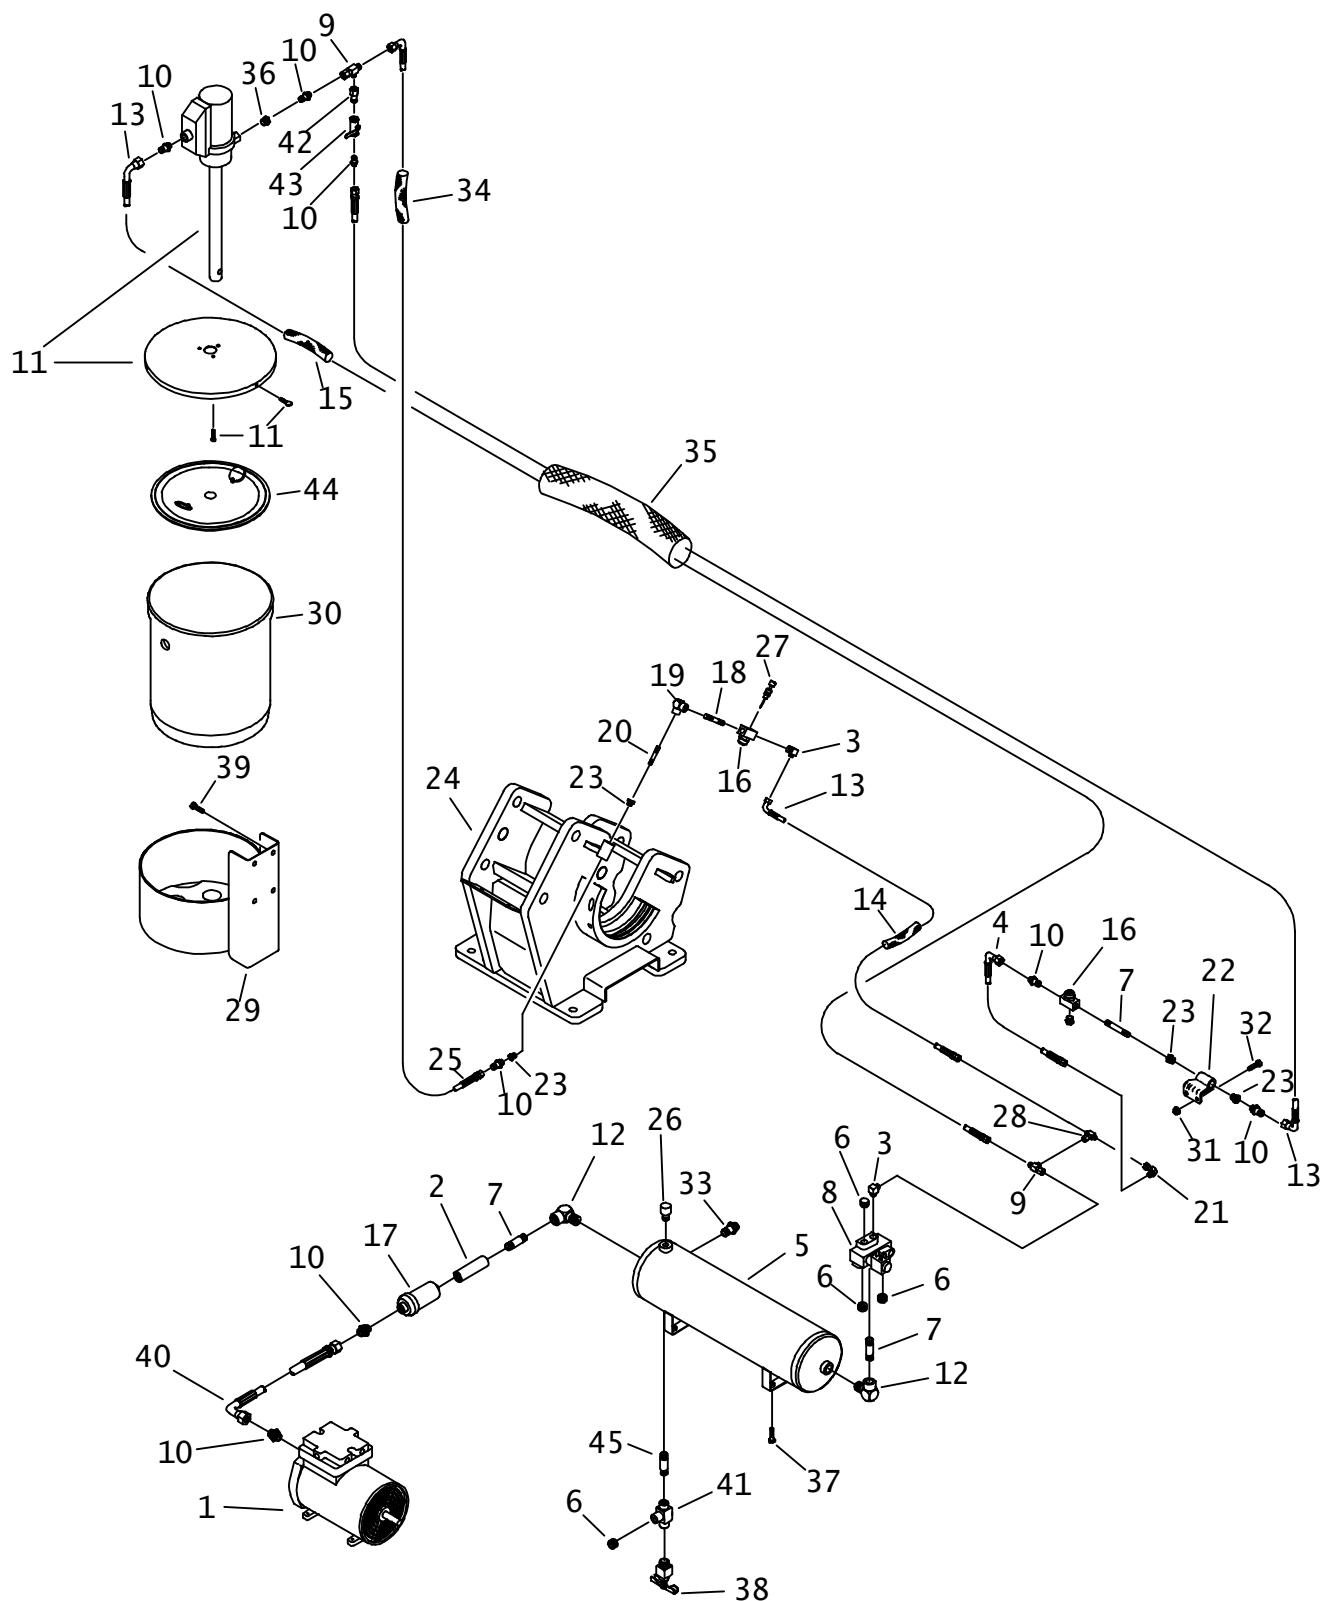

# AUTO-GREASER

## ENDS WITH CMW S/N:

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	120-086	1	- AIR COMPRESSOR	OBSOLETE, SUPERCEDED WITH 190-1697 HYD GREASE PUMP KIT
2.	115-170	1	COLLAR (04NF)	
3.	154-482	2	CONNECTOR (04N-04090)	
4.	154-743	1	HOSE(040FX90S-23"-3000)	
5.	120-089	1	AIR TANK	
6.	115-444	4	PLUG (04N, SOC, SS)	
7.	115-136	3	NIPPLE (04N-4")	
8.	214-417	1	SOLENOID VALVE	SEE FOOTNOTE 1
9.	154-265	2	UN RUN TEE(040FX-040-040)	
10.	154-339	8	CONNECTOR (04N-040)	
11.	156-189	1	GREASE PUMP	
	191-096	1	AIR VALVE KIT	
	191-064	1	PUMP TUBE REPAIR KIT	
12.	155-120	2	STREET ELBOW (04N-04NF90)	
13.	149-068	3	HOSE (04NFX90-230"-3000)	
14.	117-612	1	ABRASION SLEEVE (1.00" X 46")	
15.	117-672	1	ABRASION SLEEVE (1.00" X 20")	
16.	149-056	2	SPRAY NOZZLE	
	159-480	1	AIR CAP,SS	
	.159-481	1	FLUID CAP,SS	
	165-890	1	GASKET, PLUG	
	165-891	1	GASKET,FLUID CAP	
17.	120-088	1	INLINE DESICCANT DRYER	HAND TIGHTEN TO LEAK PROOF SEAL
18.	149-071	1	NIPPLE (04N-5")	
19.	115-114	1	ELBOW (04NF-04NF90)	
20.	115-1010	1	NIPPLE (04N-2.0")	
21.	154-255	1	UNION (040-040FX90)	
22.	370-296	1	NOZZLE MOUNT	
23.	115-135	4	REDUCER (08N-04NF)	
24.	370-276	1	- STATIONARY CLAMP	
25.	154-963	1	HOSE (040FX45-24"-3000)	
26.	217-243	1	PRESSURE SWITCH	
27.	156-927	1	NEEDLE VALVE	
28.	154-379	1	UN BR TEE (040FX-040-040)	
29.	370-292	1	GREASE BUCKET CONTAINER	
30.	256-025	1	- TOOL JNT LUBE, SUMR SPRY 5 GAL	
	256-027	1	TOOL JNT LUBE, STD SPRAY 5 GAL	
31.	106-386	2	FLG LOCKNUT (M8-1.25)	
32.	106-327	2	SCREW (M8-1.25 X 30MM)	
33.	149-812	1	RELIEF VALVE	
34.	117-611	1	ABRASION SLEEVE (1.00" X 22")	
35.	115-737	1	ABRASION SLEEVE (1.59" X 40")	
36.	115-106	1	REDUCER (06N-04NF)	
37.	105-873	4	FLG LK BOLT (5/16-NC X 1")	
38.	110-141	1	DRAIN VALVE (04N)	
39.	106-383	4	FLG LK SCREW (M10-1.50 X 30MM)	
40.	515-744	1	HOSE (040FX90S-28"-3000)	
41.	115-130	1	TEE (04NF-04NF-04NF)	
42.	149-868	1	CONNECTOR (04N-040FX)	
43.	120-090	1	SHUT-OFF (04NF-04NF, NONVENTED)	
44.	499-299	1	GREASE FOLLOWER	
45.	115-1010	1	NIPPLE (04N-2.0")	

## FOOTNOTES:


1. PORT 1 INLET, PORT 4 OUTLET, PORT 2, 3, AND 5 ARE PLUGGED

## NOTE:

REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RING.

# LUBRICATOR HYDRAULICS

BEGINS WITH CMW S/N:CMWJT100T90000006

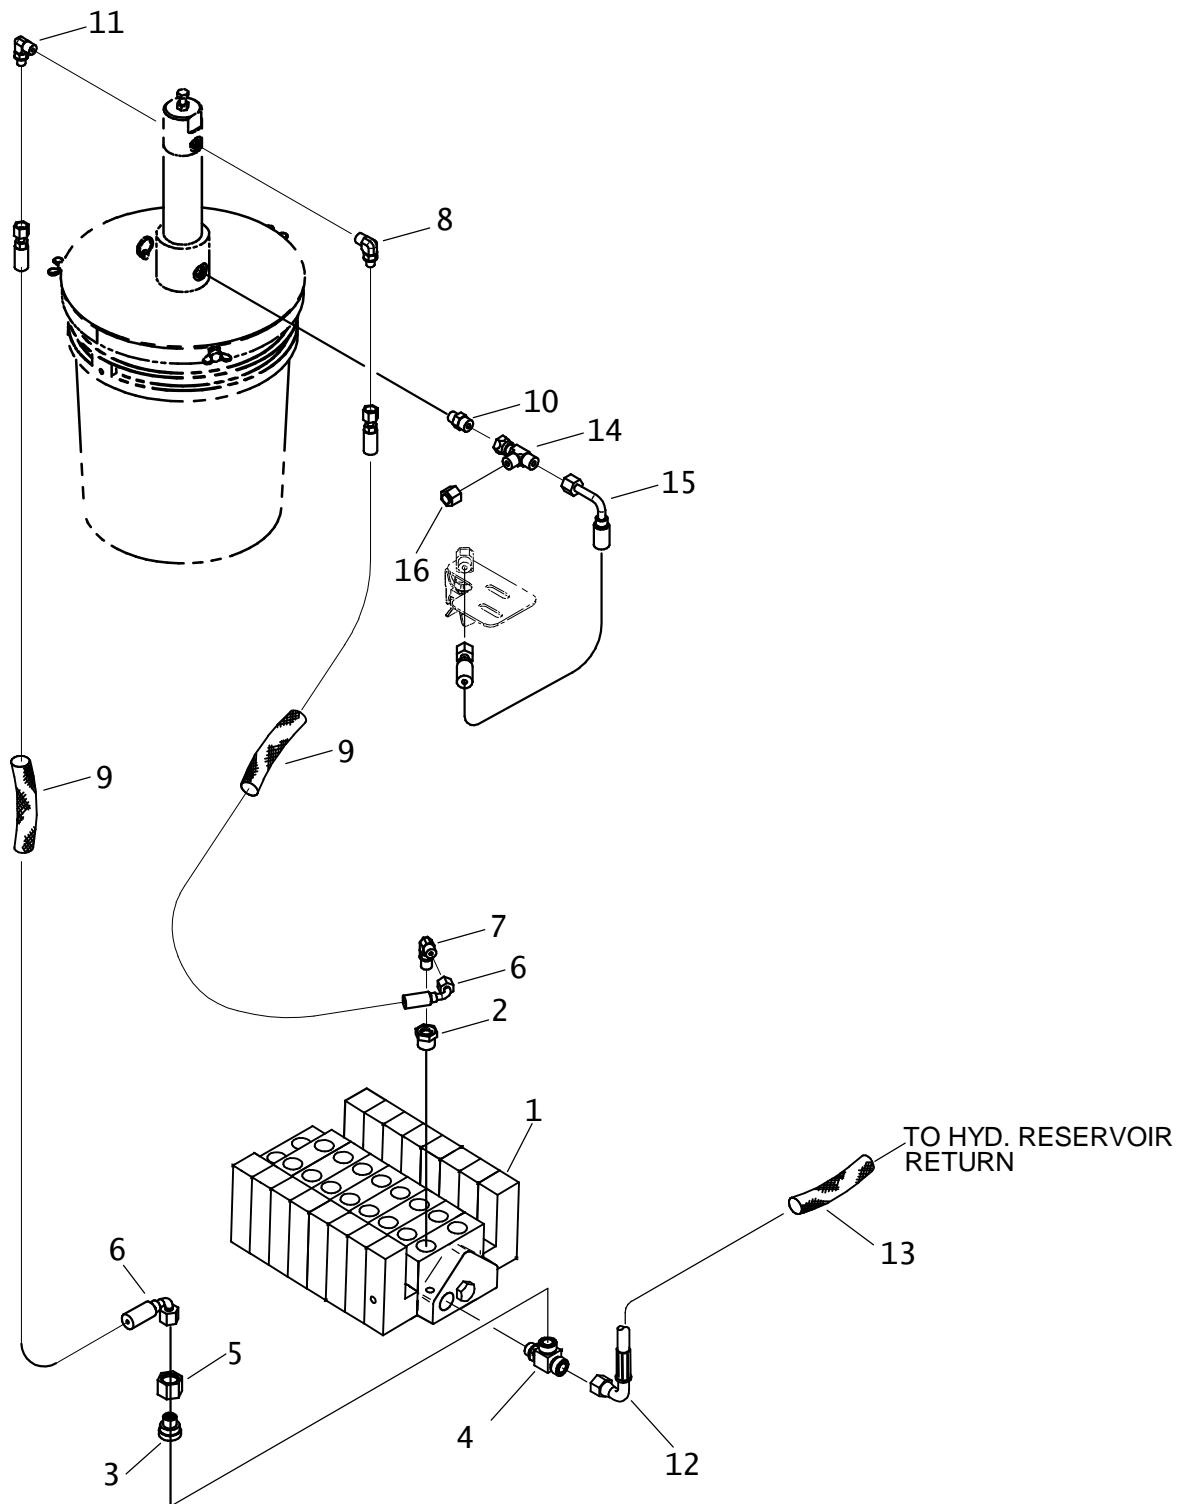

# LUBRICATOR HYDRAULICS

BEGINS WITH CMW S/N:CMWJT100T90000006

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	150-2731	1	HYD CONTROL VALVE (8-SPOOL)	
2.	155-171	1	REDUCER (10S-06SF)	
3.	154-311	1	REDUCER STEM (.040)	
4.	154-370	1	RUN TEE (12S-100-100)	
5.	154-310	1	REDUCER NUT (100F)	
6.	515-190	2	HOSE (040FX90S-88"-3000)	
7.	154-226	1	CONNECTOR (040-06S90)	
8.	154-252	1	CONNECTOR (04S-04090, ORF)	
9.	117-414	2	ABRASION SLEEVE	
10.	154-221	1	CONNECTOR (06S-060)	
11.	159-797	1	CONNECTOR (04S-04090, ORF/CHK)	
12.	116-805	1	HOSE (100FX90S-58"-3000)	
13.	115-755	1	ABRASION SLEEVE (1.59" X 60")	
14.	154-344	1	UNION RUN TEE (060FX-060-060)	
15.	149-825	1	HOSE (060FX90L-28"-3000)	
16.	154-326	1	CAP (06F)	


NOT SHOWN:

FOOTNOTES:

NOTE:

REFER TO O-RING CHART (800-30) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## AUTO-LUBBER ASSEMBLY

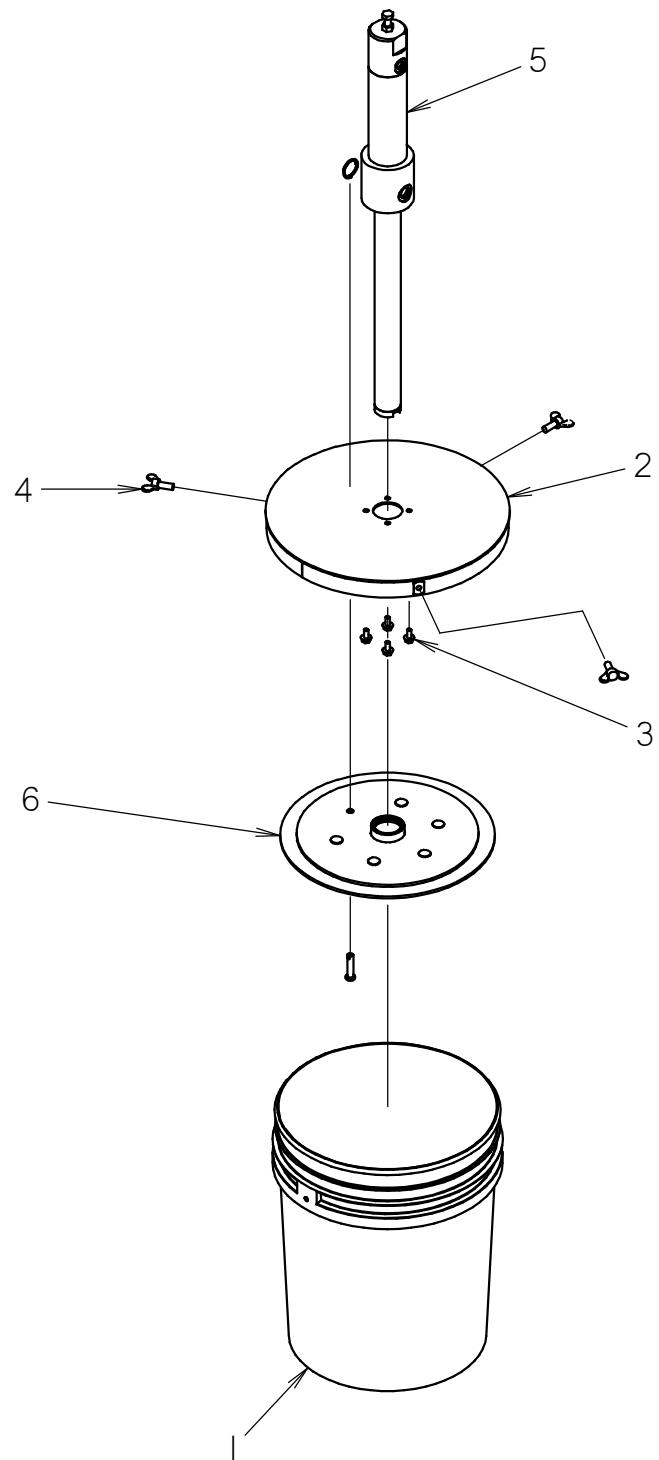

# AUTO-LUBBER ASSEMBLY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	256-025	1	TOOL JNT LUBE, SUMR SPRY 5 CAL	
2	300-5628	1	COVER	
3	106-378	4	FLG LK SCREW (M6-1.00 X 12MM)	
4	106-795	3	WING SCREW (M8-1.25 X 20MM)	
5	350-2183	1	GREASE PUMP PARTS	
6	350-2177	1	TOOL JOINT LUBE FOLLOWER	

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0219968

## GREASE PUMP

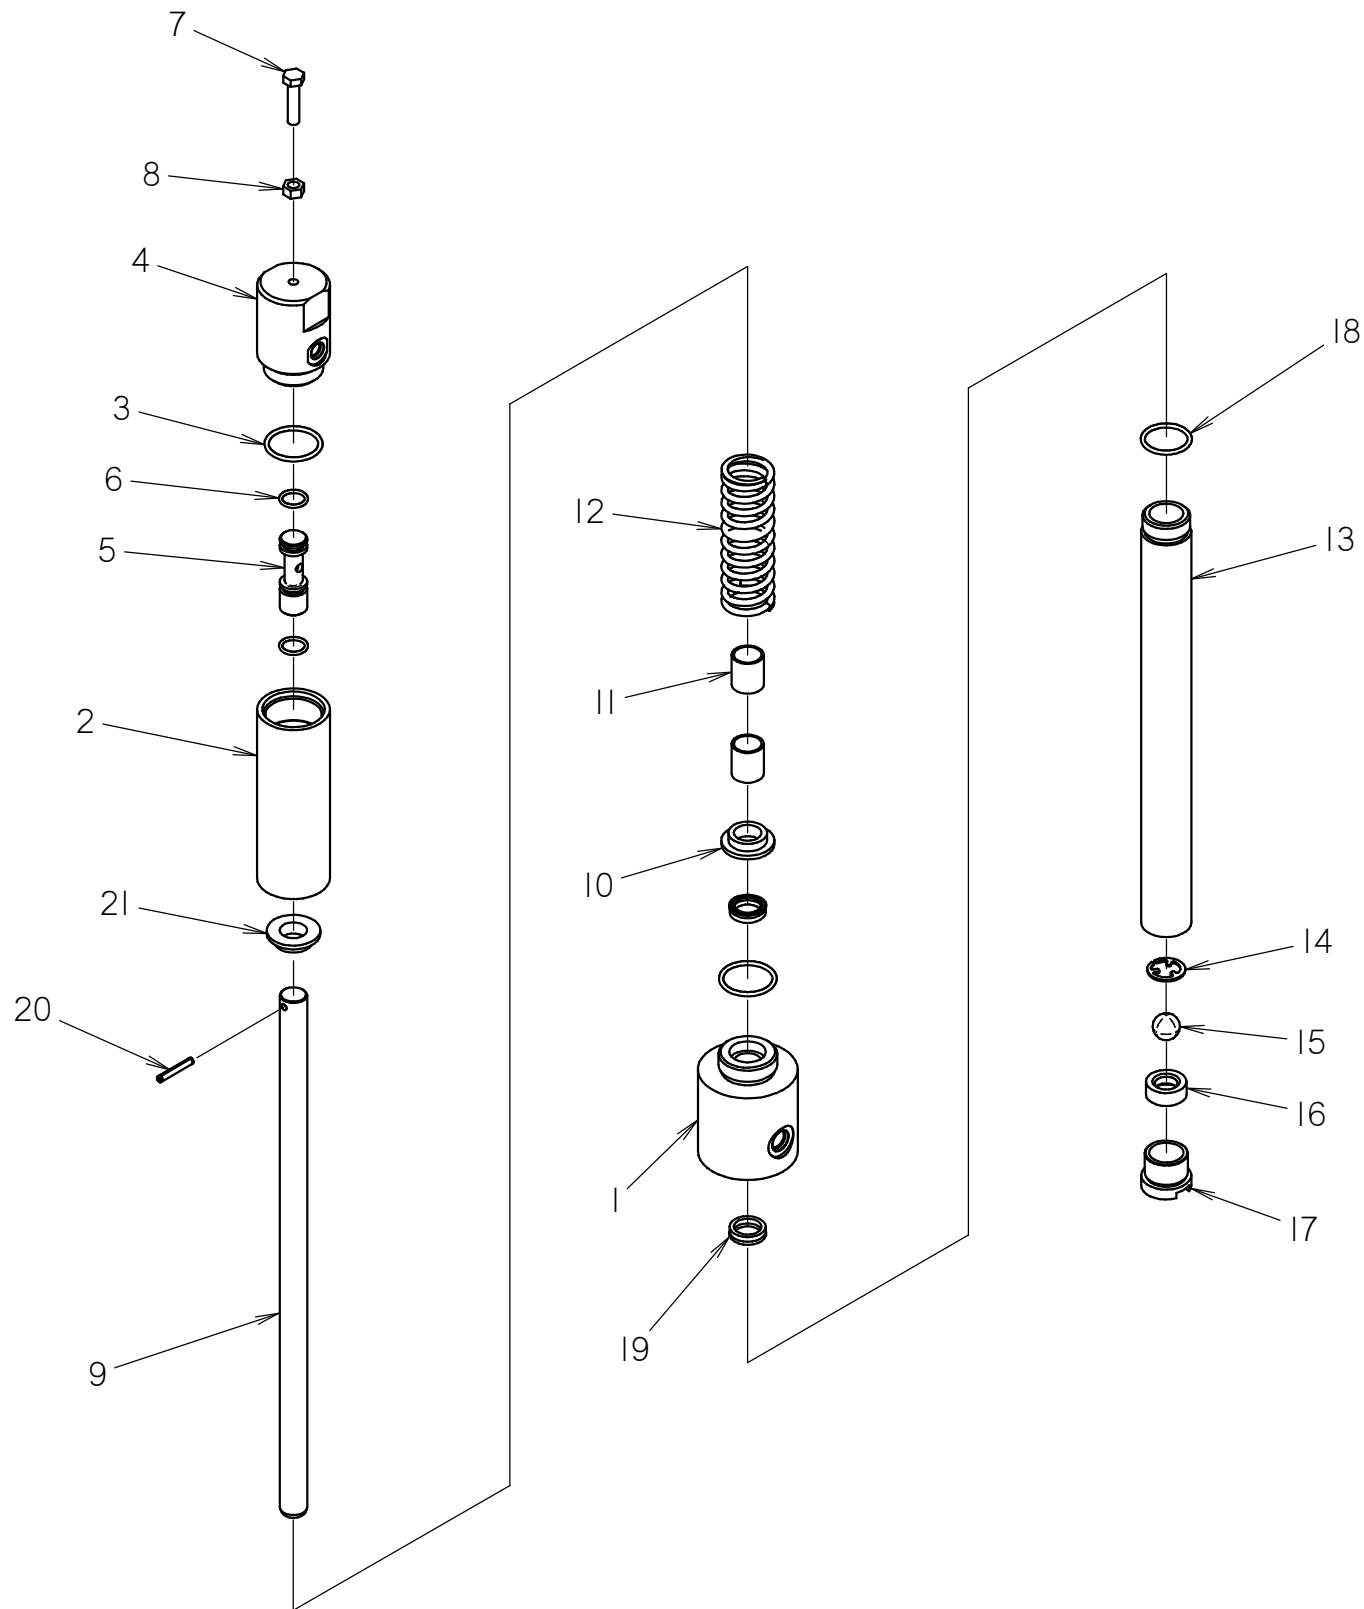

# GREASE PUMP


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	350-2183	1	GREASE PUMP PARTS ASSEMBLY	INCL. REF #s I-21
I	350-687	1	PUMP BODY	
2	350-682	1	BARREL	
3	I55-702	2	O-RING (920 D90)	
4	350-686	1	CYLINDER CAP	
5	350-421	1	ADJUSTING SPOOL	
6	I57-049	2	O-RING (I13 D70)	
7	I07-492	1	SCREW (M8-I.25 X 35MM, ALL THD)	
8	I06-078	1	NUT (M8-I.25)	
9	300-5647	1	PLUNGER	
I0	350-671	1	ROD GUIDE	
I1	I25-424	2	BRONZE BUSHING (.750")	
I2	I17-228	1	COMPRESSION SPRING	
I3	300-5648	1	PUMP BARREL	
I4	301-0196	1	RETAINER CLIP	SUPERSEDES RETAINER CLIP I05-653
I5	I25-125	1	DETENT BALL (.750")	
I6	350-691	1	VALVE SEAT	
I7	350-692	1	INLET TUBE	
I8	I55-748	1	O-RING (916 D90)	
I9	I17-227	2	SEAL (POLY PAK)	
I0	I05-525	1	ROLL PIN (3/16" X 1-I/4")	
I1	I78-467	1	ROD CAP	

NOT SHOWN:

FOOTNOTES:

NOTE:

**AUTO-GREASER (NOZZLES)**  
BEGINS WITH CMW S/N:CMWJT100T90000006  
ENDS WITH S/N: CMWJT100PA0000013

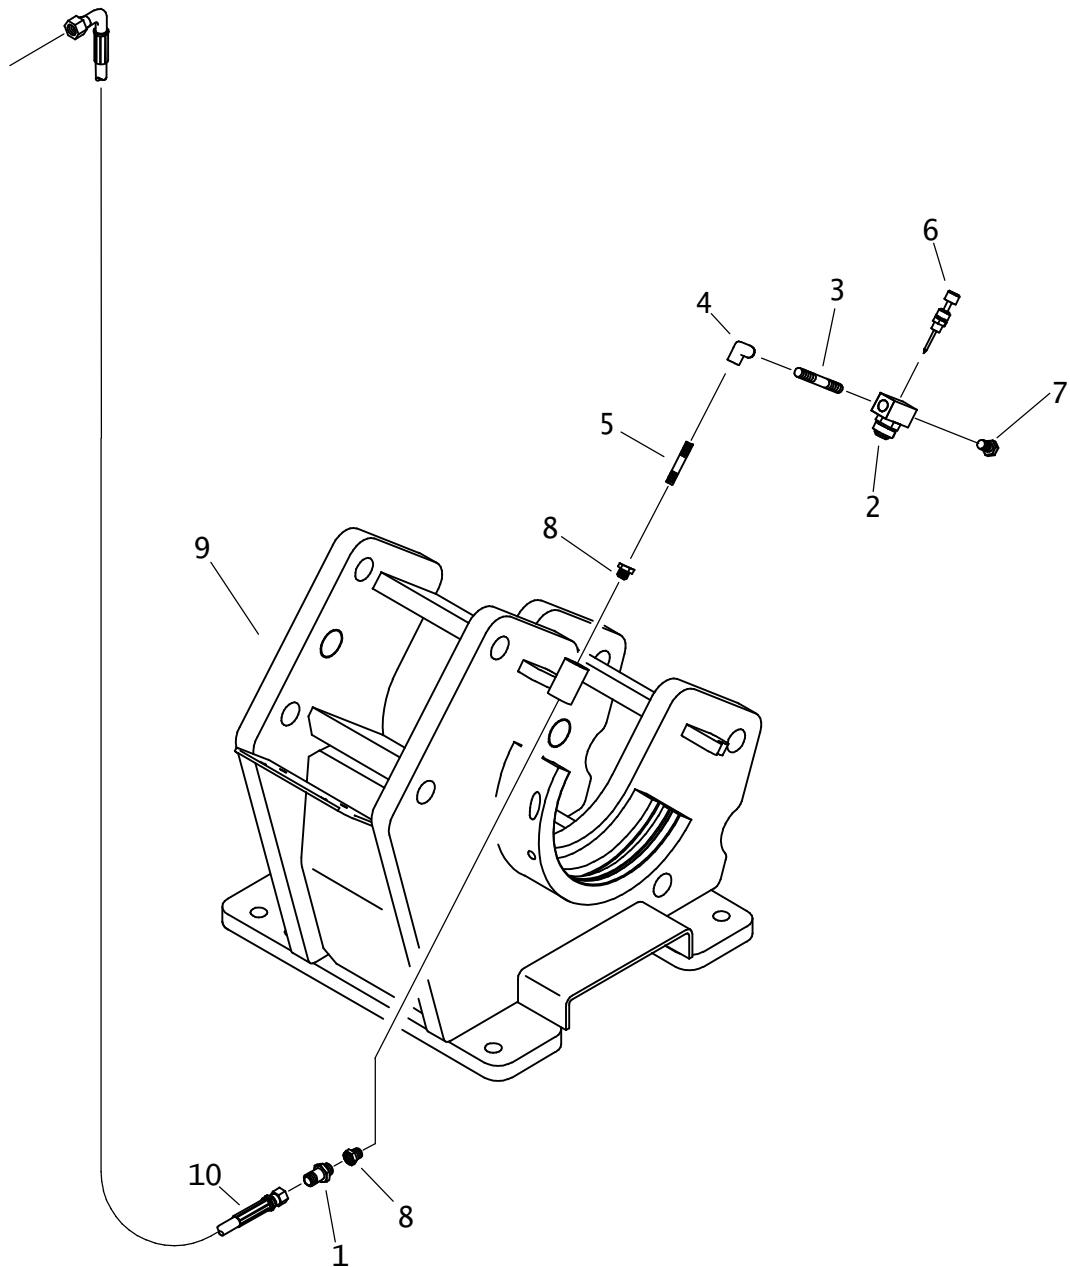

**AUTO-GREASER (NOZZLES)**

BEGINS WITH CMW S/N:CMWJT100T90000006

ENDS WITH S/N: CMWJT100PA0000013


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-181	1	CONNECTOR (04N-060)	
2.	149-056	2	SPRAY NOZZLE	
	159-480	1	AIR CAP (SS)	
	159-481	1	FLUID CAP (SS)	
	165-890	1	GASKET, PLUG	
	165-891	1	GASKET, FLUID CAP	
3.	149-071	1	NIPPLE (04N-5")	
4.	115-114	1	ELBOW (04NF-04NF90)	
5.	115-1010	1	NIPPLE (04N-2.0")	
6.	156-927	1	NEEDLE VALVE	
7.	115-444	1	PLUG (04N, SOC, SS)	
8.	115-135	4	REDUCER (08N-04NF)	
9.	370-276	1	STATIONARY CLAMP	
10.	149-825	1	HOSE (060FX90L-28"-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

**AUTO-GREASER (NOZZLES)**  
BEGINS WITH S/N: CMWJT100KA0000014

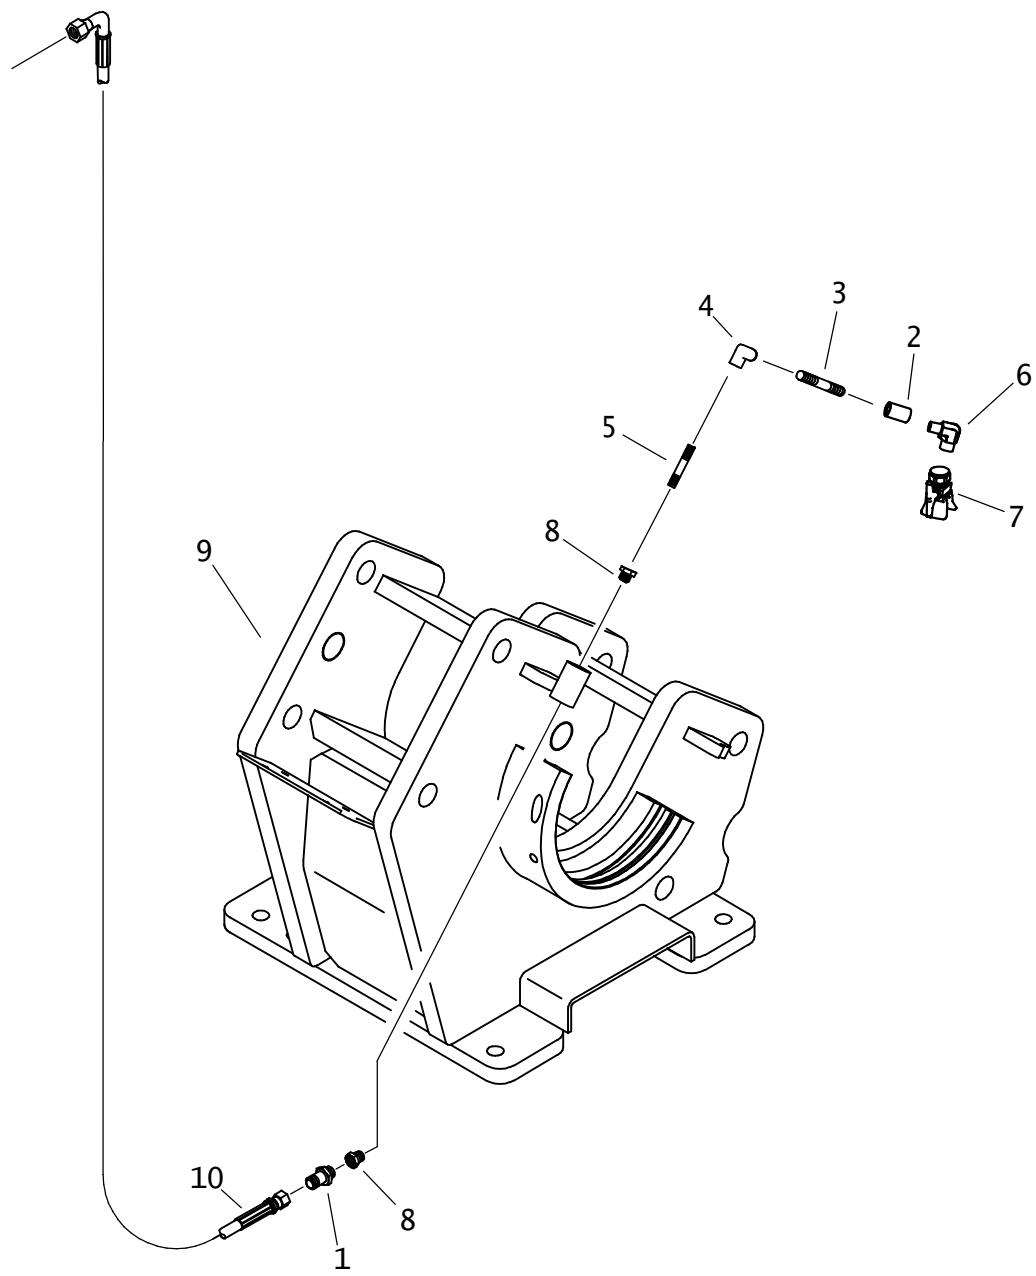

# AUTO-GREASER (NOZZLES)

BEGINS WITH S/N: CMWJT100KA0000014

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-181	1	CONNECTOR (04N-060)	
2.	115-170	1	COLLAR (04NF)	
3.	115-136	1	NIPPLE (04N-4")	
4.	115-114	1	ELBOW (04NF-04NF90)	
5.	115-1010	1	NIPPLE (04N-2.0")	
6.	149-039	1	CONNECTOR (04N-06090)	
7.	149-399	1	SPRAY NOZZLE (65)	
8.	115-135	4	REDUCER (08N-04NF)	
9.	370-276	1	STATIONARY CLAMP	
10.	149-825	1	HOSE (060FX90L-28"-3000)	

NOT SHOWN:


FOOTNOTES:

NOTE:

OI

ID0248035

## AUTO-GREASER (NOZZLES) ENDS WITH CMW S/N:

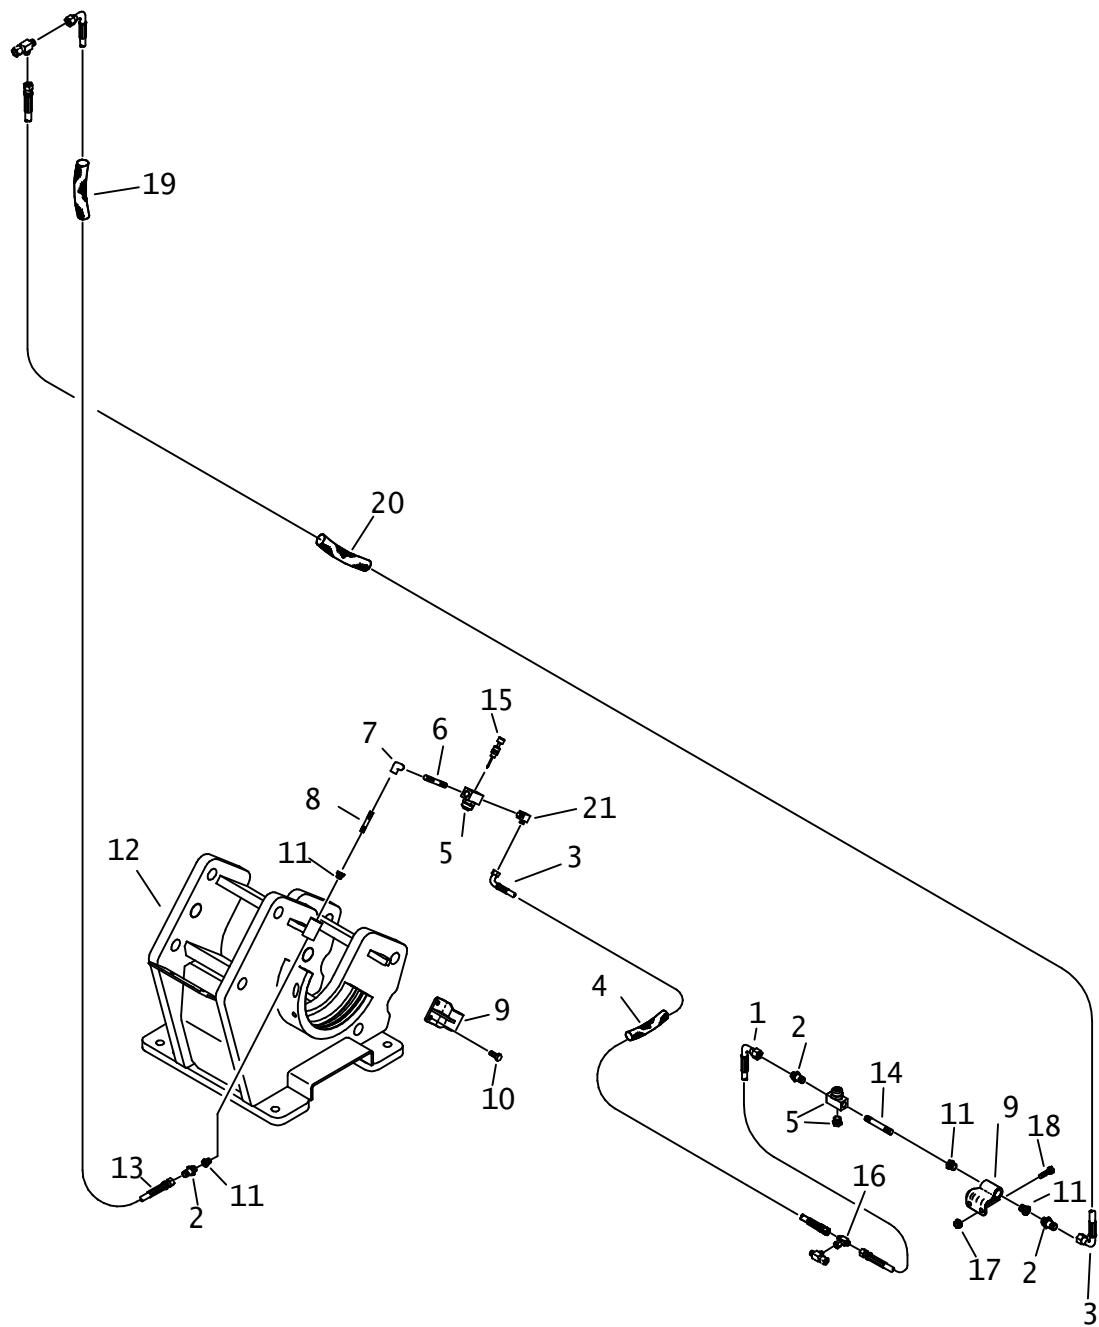

# AUTO-GREASER (NOZZLES)

ENDS WITH CMW S/N:


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-743	1	HOSE (040FX90-23"-3000)	
2.	154-339	4	CONNECTOR (04N-040)	
3.	149-068	2	HOSE (04NFX90-230"-3000)	
4.	117-612	1	ABRASION SLEEVE (1.00" X 46")	
5.	149-056	2	SPRAY NOZZLE	
	159-480	1	AIR CAP (SS)	
	159-481	1	FLUID CAP (SS)	
	165-890	1	GASKET, PLUG	
	165-891	1	GASKET, FLUID CAP	
6.	149-071	1	NIPPLE (04N-5")	
7.	115-114	1	ELBOW (04NF-04NF90)	
8.	115-1010	1	NIPPLE (04N-2.0")	
9.	370-296	2	NOZZLE MOUNT	FRONT NOZZLE MOUNT USED ON EARLY MODELS ONLY
10.	106-083	-	SCREW (M8-1.25 X 20MM)	USED ON EARLY UNITS
11.	115-135	4	REDUCER (08N-04NF)	
12.	370-276	1	STATIONARY CLAMP	
13.	154-963	1	HOSE (040FX45-24"-3000)	
14.	115-136	1	NIPPLE (04N-4")	
15.	156-927	1	NEEDLE VALVE	
16.	154-379	1	UN BR TEE (040FX-040-040)	
17.	106-386	2	FLG LOCKNUT (M8-1.25)	
18.	106-327	2	SCREW (M8-1.25 X 30MM)	
19.	117-611	1	ABRASION SLEEVE (1.0" X 22")	
20.	115-737	1	ABRASION SLEEVE (1.59" X 40")	
21.	154-482	1	CONNECTOR (04N-04090)	

NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC CYLINDER  
2" X 1" X 3"

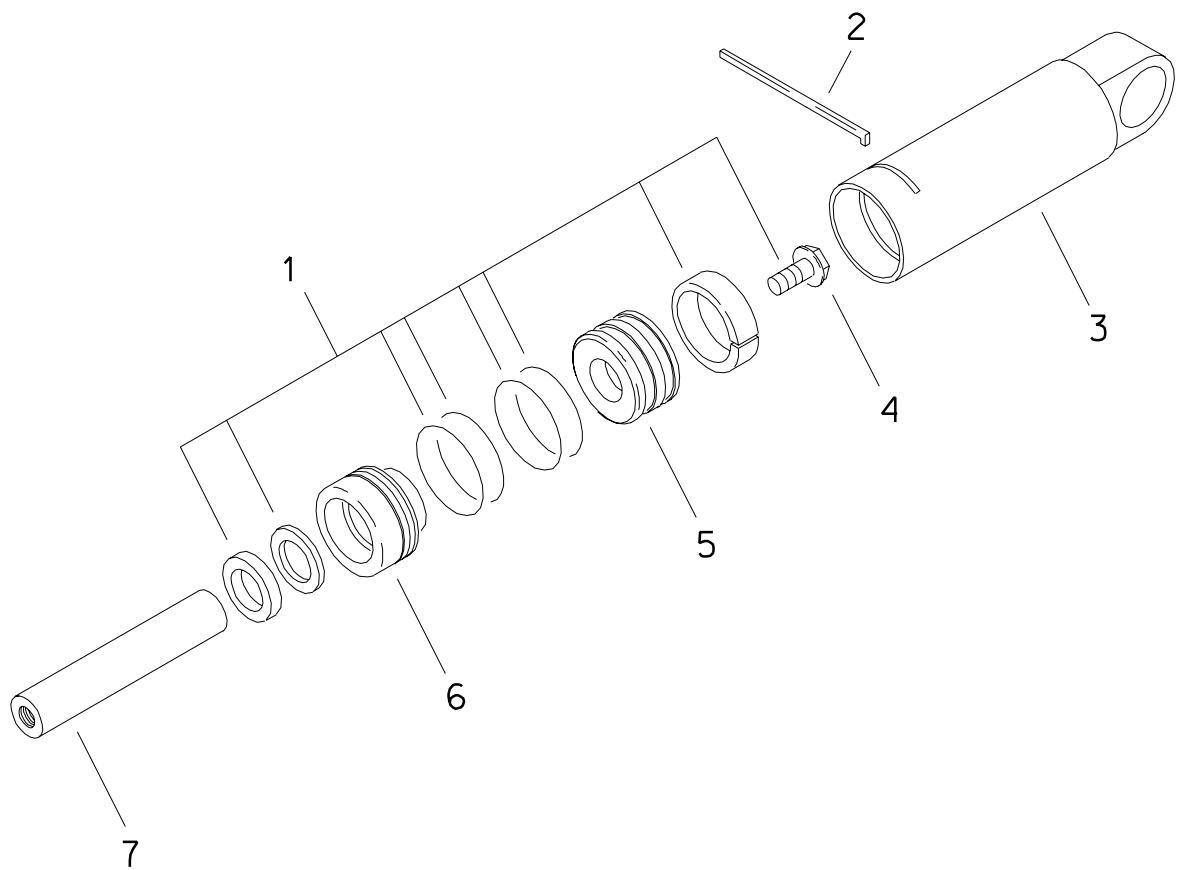

## HYDRAULIC CYLINDER

2" X 1" X 3"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-163	1	CYL (2" X 1" X 3")	INCL REF NO.'S 1 - 7
1.	190-165	1	SEAL REPAIR KIT (2" X 1")	
2.	150-778	1	LOCK RING (2")	
3.	150-282	1	CYLINDER BARREL (2")	
4.	106-096	1	FLG BOLT (1/2-NC X 1-3/4", GD 8)	SEE FOOTNOTE 1
5.	150-775	1	CYLINDER PISTON (2" X 1")	
6.	150-772	1	CYLINDER HEAD (2" X 1")	
7.	150-676	1	CYLINDER ROD	

## NOT SHOWN:

259-100 U-SEAL INSTALLER (1" - 1.499")

259-239 WIPER/SEAL INSTALLER (2")


259-241 PISTON INSTALLER (2")

259-188 CYL HEAD SPANNER - TWO PIN

## FOOTNOTES

1. CLEAN AND DRY THREADS. APPLY RED LOCKTITE (RC271 OR RC272). TORQUE TO 90-100 FT-LBS (120-135 NM).

HYDRAULIC CYLINDER  
3.5" X 1.75" X 16"

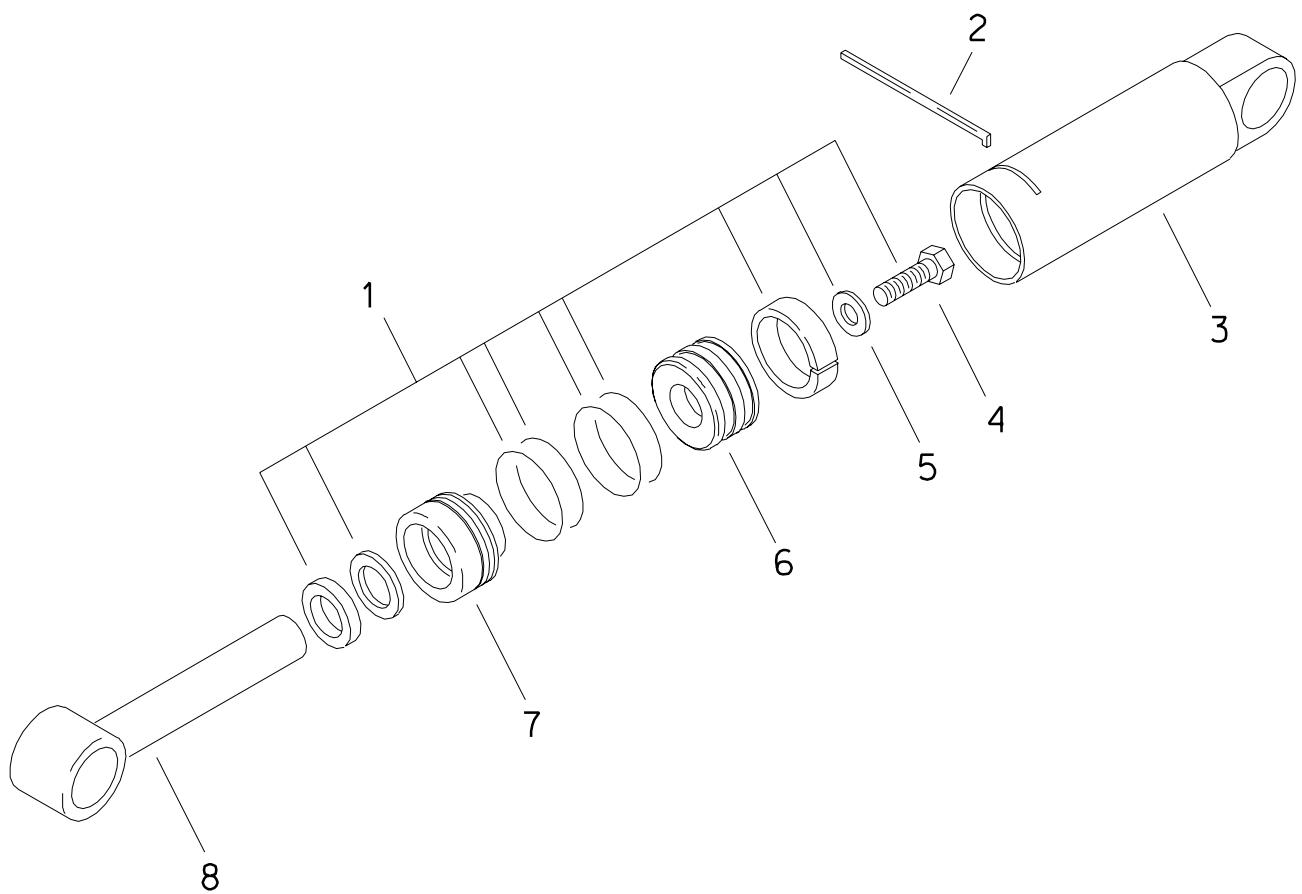

## HYDRAULIC CYLINDER

3.5" X 1.75" X 16"

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-085	1	CYL (3.5" X 1.75" X 16")	INCL. REF. NO.'S 1 - 7
1.	190-174	1	SEAL REPAIR KIT (3.5" X 1.75")	INCL. REF. NO.'S 4 & 5
2.	149-302	1	LOCK RING (3.5")	
3.	152-021	1	CYLINDER BARREL	
4.	106-122	1	BOLT (7/8-NC X 2-1/4", GD 8)	SEE FOOTNOTE 1
5.	105-363	1	WASHER (7/8")	
6.	149-301	1	CYL PISTON 3.5" X 1.75"	
7.	150-761	1	CYL HEAD (3.5" X 1.75")	
8.	153-004	1	1.75" ROD ASSEMBLY	

## NOT SHOWN:

259-040	U-SEAL INSTALLER (1.500" - UP)
259-238	WIPER INSTALLER (1.75")
259-244	PISTON SEAL INSTALLER (3.50")
259-245	PISTON INSTALLER (3.5")
259-188	CYL HEAD SPANNER - TWO PIN

## FOOTNOTES


1-USE LOCTITE 277, TORQUE TO 410-460 FT-LBS (550-625 N.M)

**NOTES:**

# HOIST SYSTEMS

ID0040619

## DECAL LOCATION CRANE

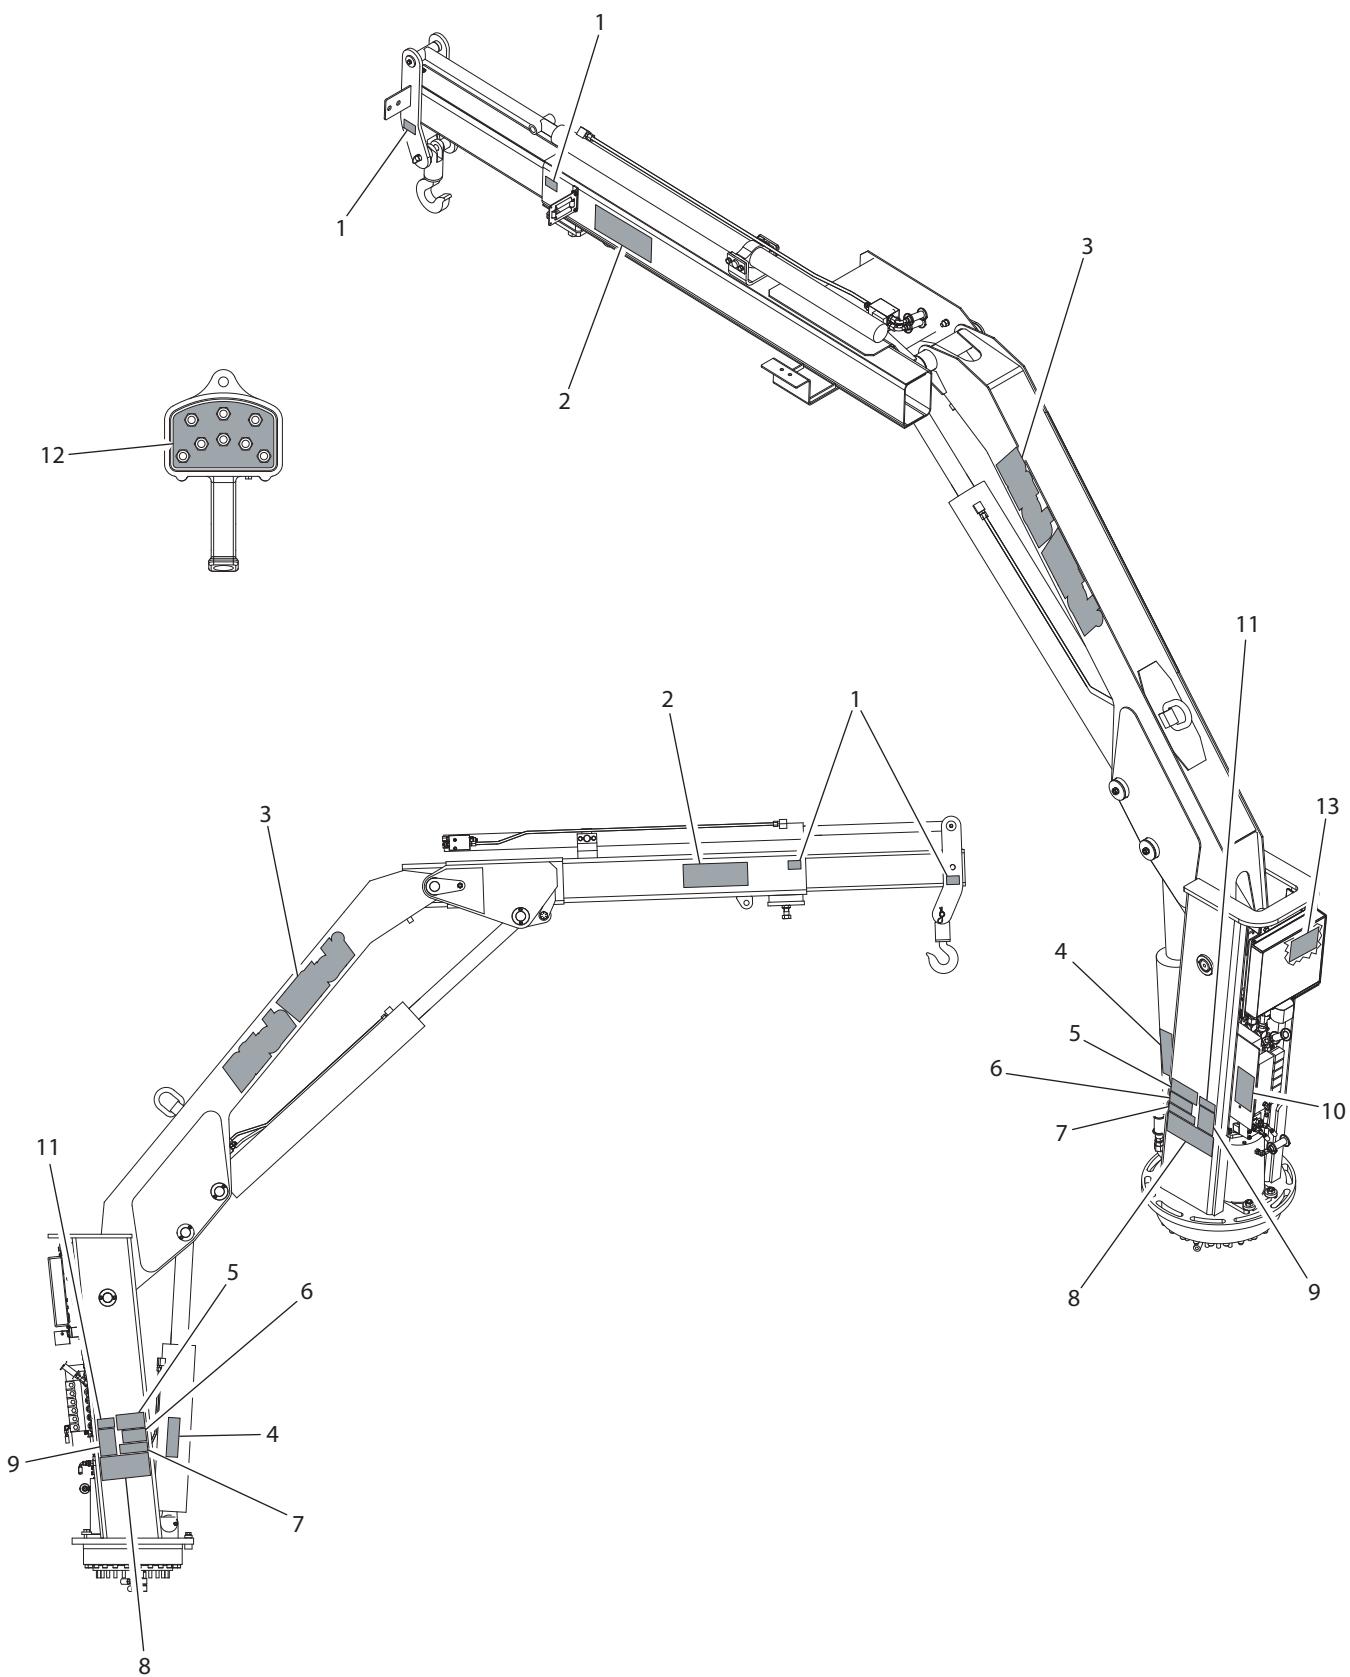


## DECAL LOCATION CRANE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	275-792		DECAL KIT - CRANE	
I	274-968	4	STAY CLEAR OF BOOM	
2	274-966	2	ELECTROCUTION HAZARD	
3	274-967	2	DITCH WITCH LOGOTYPE	
4	274-965	2	PINCH POINT	
5	274-960	2	EXTEND OUTRIGGER	
6	275-326	2	WARNING CRUSHING WEIGHT	
7	274-962	2	NEVER RIDE ON HOOK	
8	274-957	2	LOAD CHART	
9	274-959	2	OPERATION INSTRUCTIONS	
I0	700-963	I	MANUAL VALVE OPERATION	
II	273-475	2	NOTICE - READ MANUAL	
I2	700-958	I	PENDANT CONTROL	
I3	273-670	I	TERMINAL BLOCK	

FOOTNOTES

## PEDESTAL

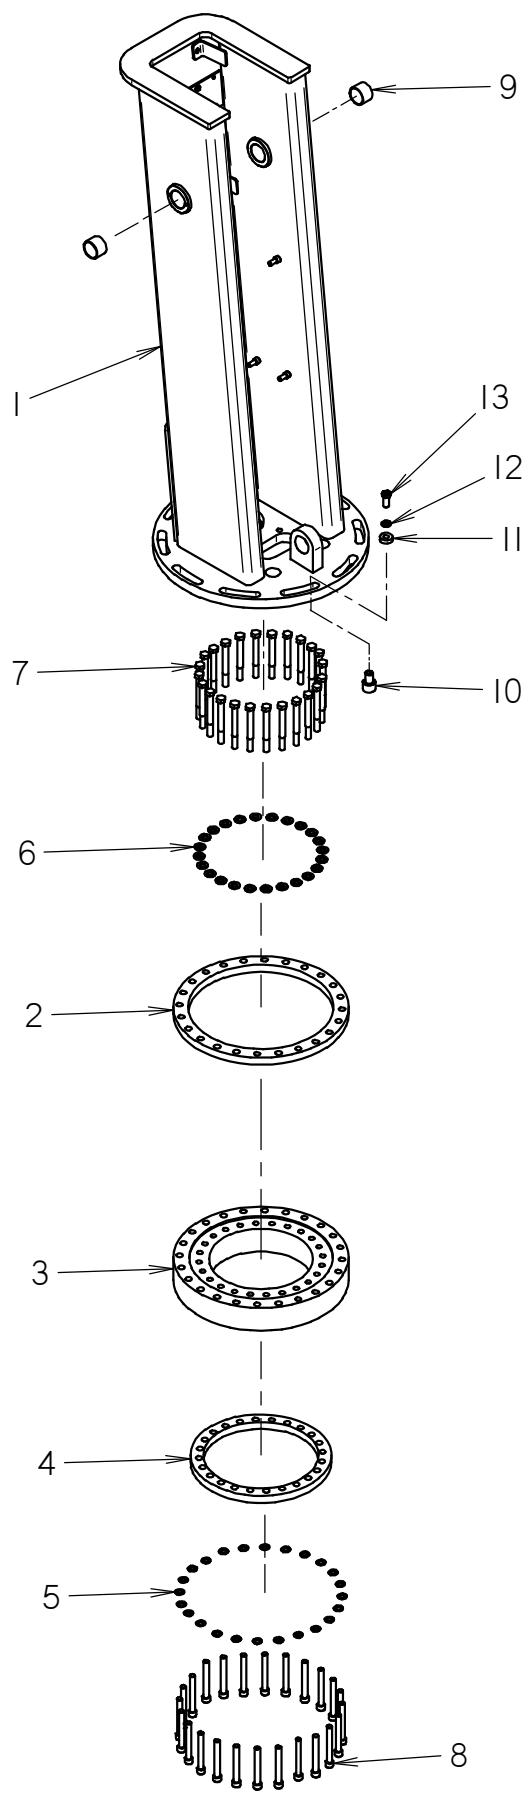

# PEDESTAL

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	324-755	1	PEDESTAL	
2	348-285	1	SPACER, OUTER RACE	
3	499-265	1	ROTATION BEARING	
4	325-339	1	SPACER, INNER RACE	
5	I08-222	24	WASHER (5/8" HARDENED)	
6	I06-398	24	WASHER IMI6, HARDENED	
7	I06-983	24	SCREW IMI6-2.00 X 150MM, I0.91	USE LOCTITE 277 OR EQUIVALENT; SEE FOOTNOTE I
8	I08-221	24	BOLT (5/8-NC X 5", SOC, GD8)	USE LOCTITE 277 OR EQUIVALENT, TORQUE TO 180 FT. LB.
9	I25-483	2	COMPOSITION BUSHING (2.000")	
I0	I79-270	1	SLIDE STOP PIN	
I1	499-266	1	SLIDE STOP WASHER	
I2	I05-385	1	LOCK WASHER (5/8")	
I3	I05-358	1	BOLT (5/8-NC X 1-1/2", GD8)	


NOT SHOWN:

FOOTNOTES:

- I. TIGHTEN BOLTS THROUGH ACCESS HOLES ON PEDESTAL BASE

NOTE:

## INNER BOOM

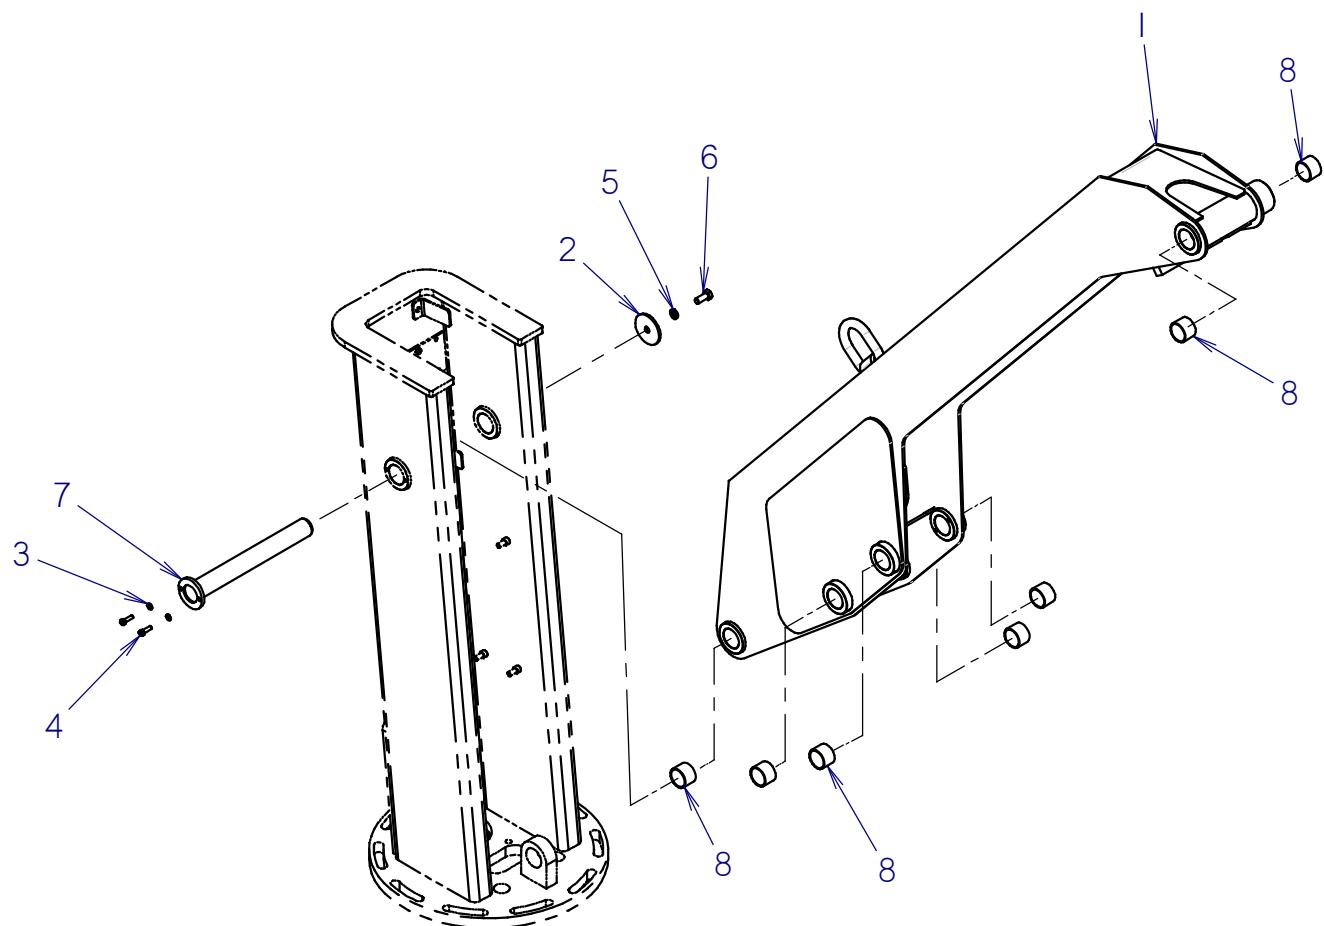

# INNER BOOM

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	324-756	1	INNER BOOM	
2	499-235	1	PIN WASHER	
3	I05-072	2	LOCK WASHER (3/8")	
4	I05-052	2	BOLT (3/8-NC X 1-1/4")	USE LOCTITE 242 OR EQUIVALENT
5	I05-385	1	LOCK WASHER (5/8")	
6	I05-358	1	BOLT (5/8-NC X 1-1/2", GD8)	USE LOCTITE 242 OR EQUIVALENT
7	I79-268	1	PIN	
8	I25-483	7	COMPOSITION BUSHING (2.000")	


FOOTNOTES

NOTE:

02

ID0036223

## OUTER BOOM

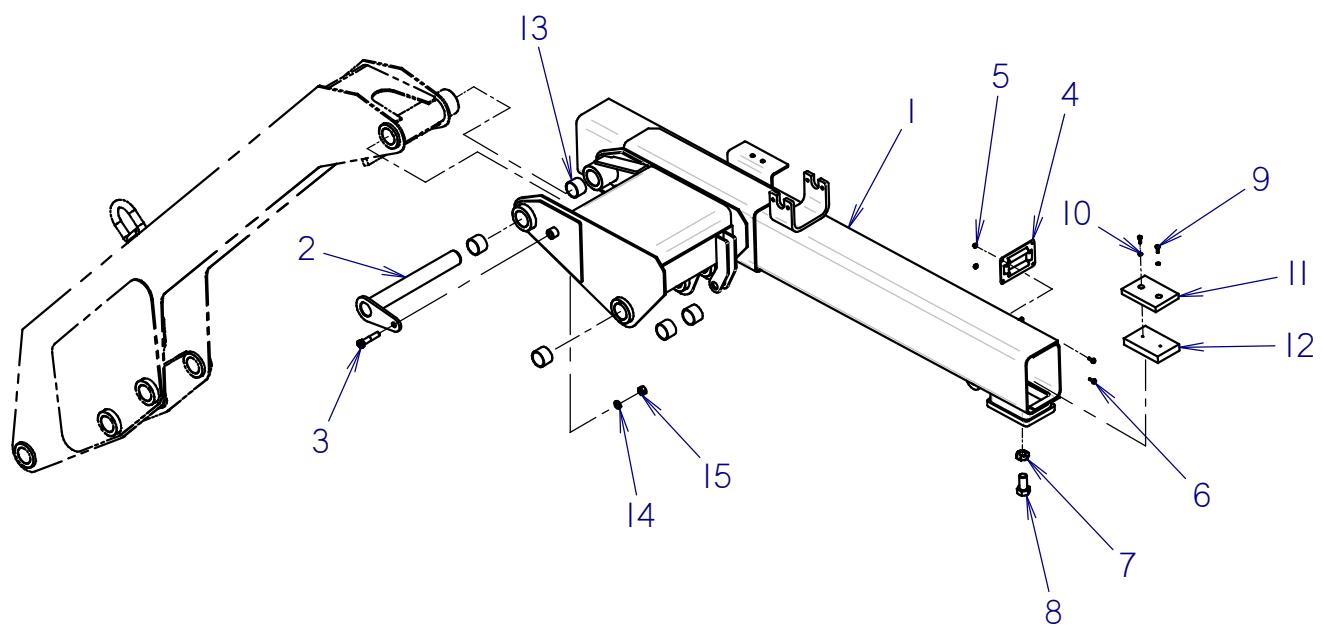

## OUTER BOOM


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	324-757	1	OUTER BOOM	
2	I79-271	1	PIN	
3	I05-376	1	BOLT (5/8-NC X 3", GD8)	
4	I06-288	1	HOSE REEL GUIDE	
5	I06-385	2	FLG LOCKNUT (M6-I.00)	
6	I06-379	2	FLG LK SCREW (M6-I.00 X 20MM)	
7	I06-033	1	JAM NUT (I-NC)	
8	I06-167	1	BOLT (I-NC X 2") GRADE 5	
9	I05-865	2	BOLT (I/4-NC X 3/4", GD8)	
10	I05-079	2	LOCK WASHER (I/4)	
11	348-286	1	SLIDE PAD	USE EP GEAR GREASE FOR LUBRICATION
12	499-261	1	SLIDE PAD MOUNT	
13	I25-483	5	COMPOSITION BUSHING (2.000")	
14	I05-385	1	LOCK WASHER (5/8")	
15	I05-357	1	LOCKNUT (5/8-NC)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## EXTENTION BOOM

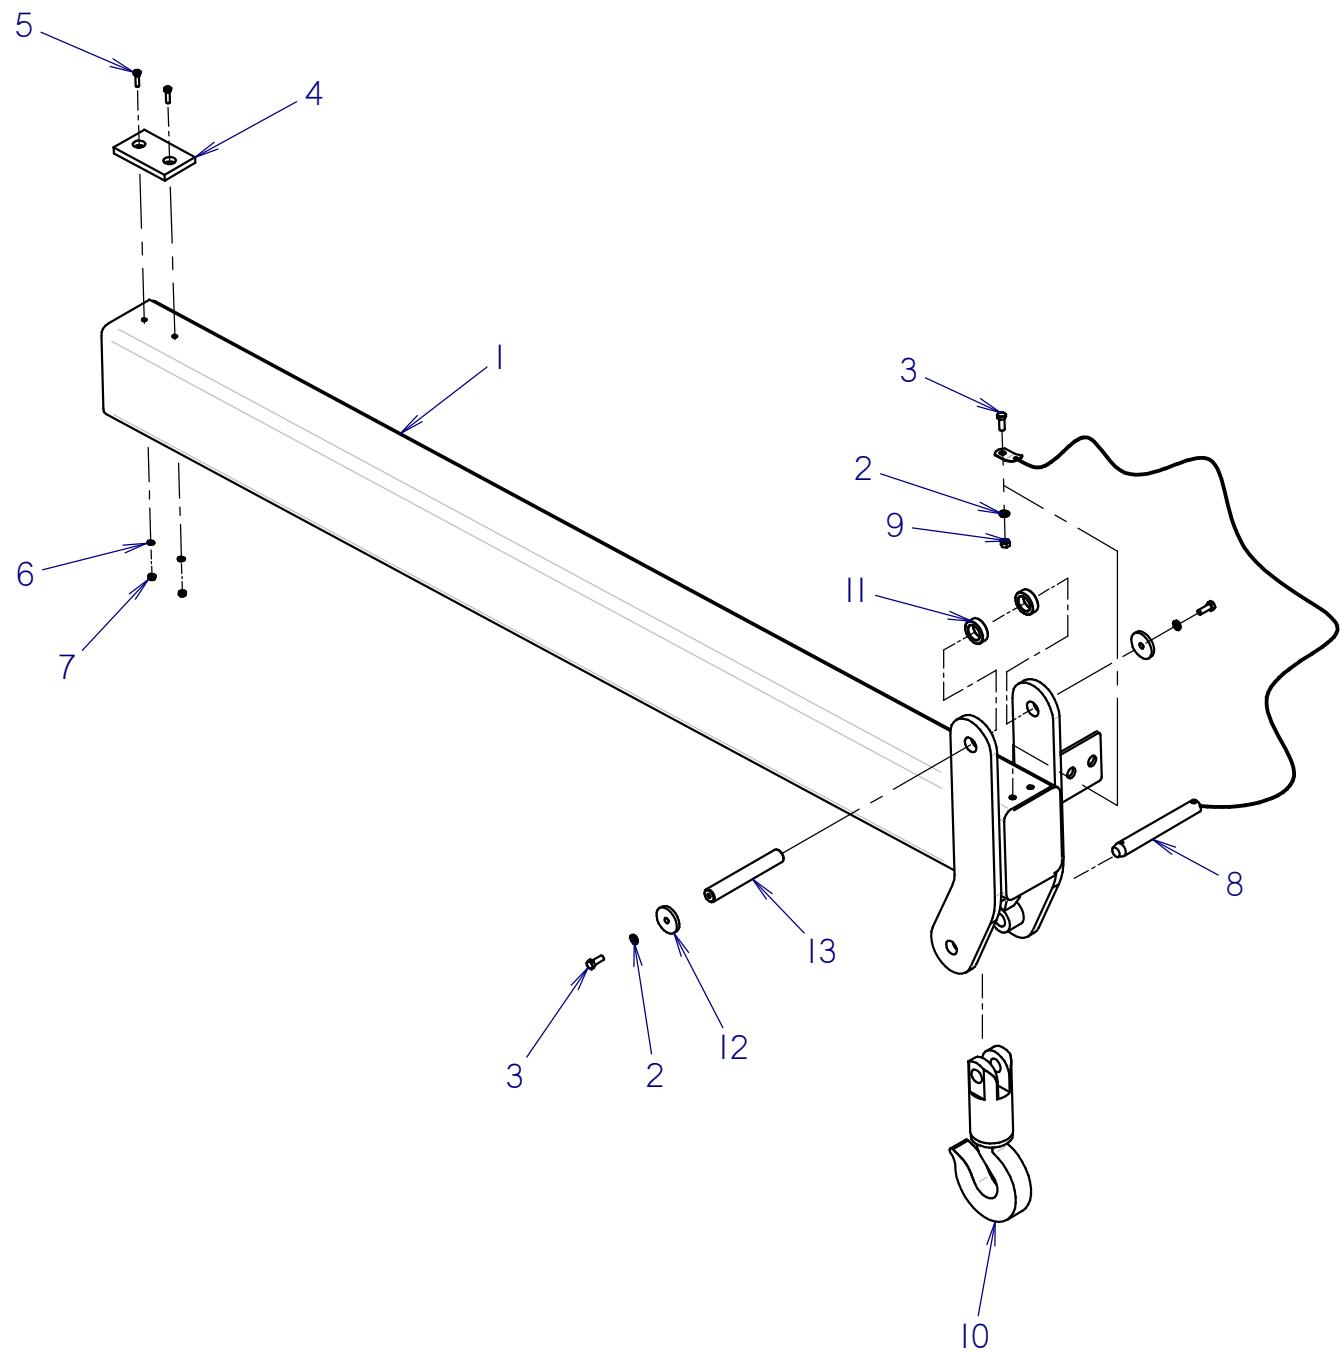

## EXTENTION BOOM


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	324-758	1	EXTENSION BOOM	
2	I05-072	3	LOCK WASHER (3/8")	
3	I05-031	3	BOLT (3/8-NC X 1")	USE LOCTITE 242 OR EQUIVALENT; TORQUE TO 37 FT-LBS
4	348-287	1	SLIDE PAD	
5	I05-I97	2	BOLT (1/4-NC X 1")	
6	I05-079	2	LOCK WASHER (1/4)	
7	I05-078	2	NUT (1/4-NC)	
8	I79-274	1	HOOK PIN	
9	I05-053	1	NUT (3/8 NC) HEX	
10	III-041	1	SWIVEL HOOK (6-TON)	
11	I81-965	2	SPACER	
12	I05-223	2	WASHER (3/8")	
13	499-260	1	PIN	

NOT SHOWN:

FOOTNOTES:

NOTE:

## SWING DRIVE

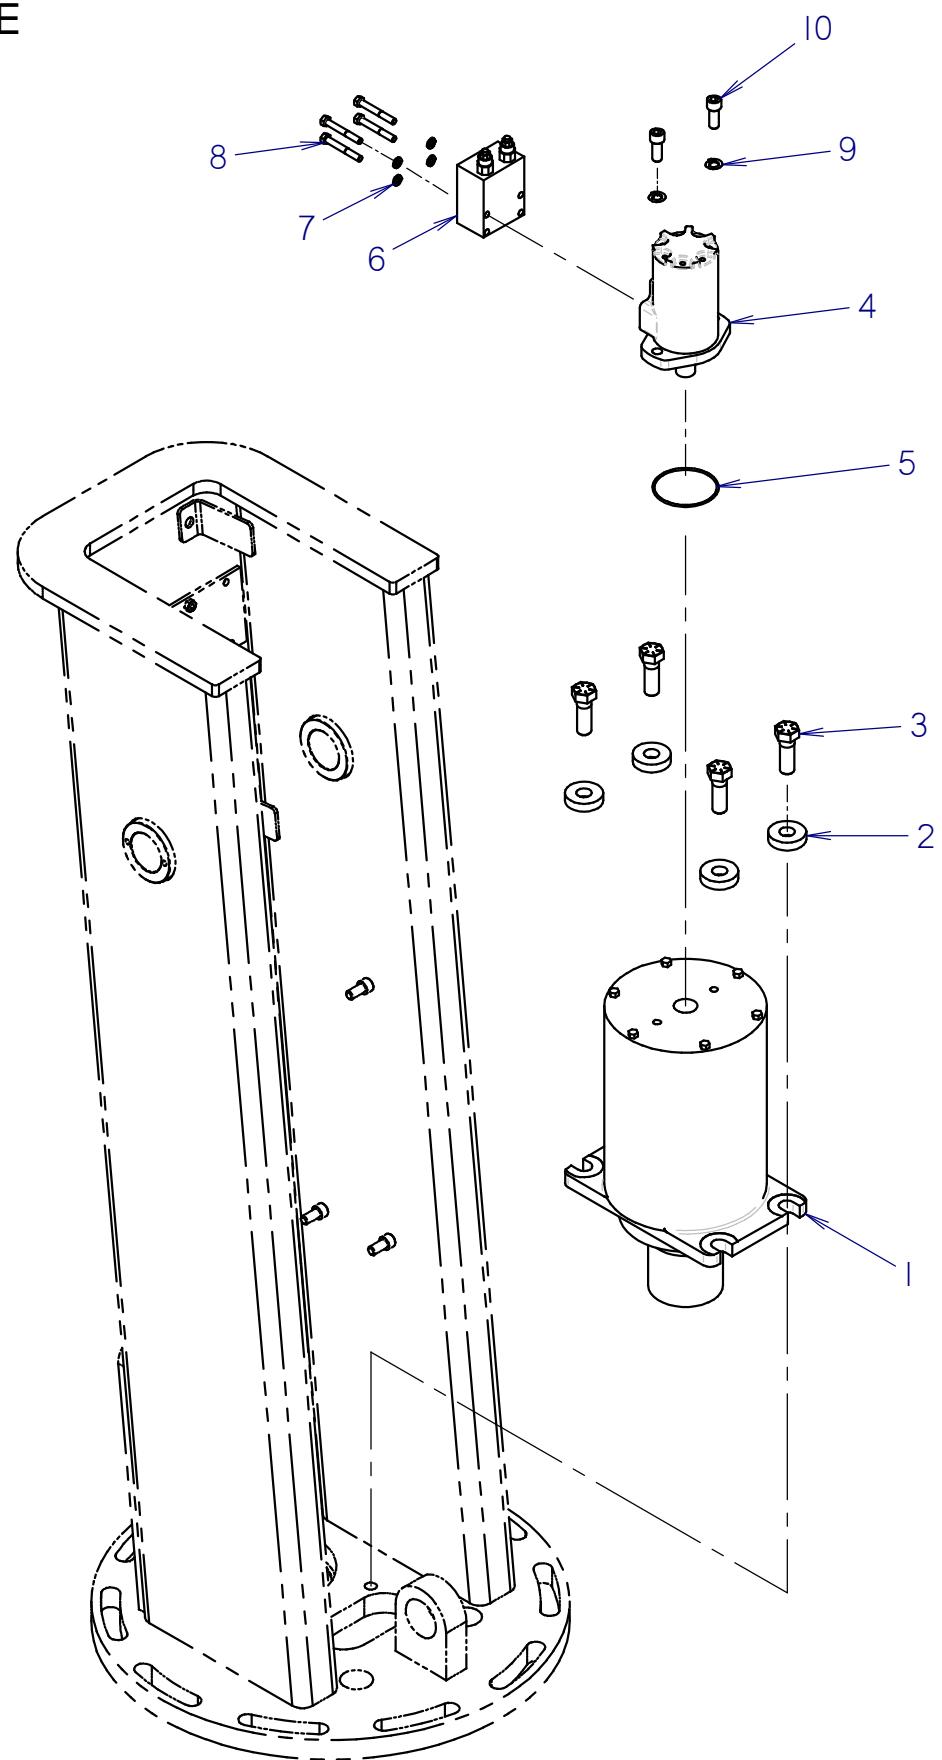




## SWING DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	499-236	1	SWING DRIVE	USE 80W-90 GEAR OIL, 3 QUART CAPACITY
2	370-162	4	WASHER (812, HARDENED)	
3	I05-320	4	BOLT (3/4-NC X 2-1/4", GD8)	USE LOCTITE 277 OR EQUIVALENT; TORQUE TO 180 FT-LBS
4	499-238	1	HYDRAULIC MOTOR	
5	I57-041	1	O-RING (I52 D70)	
6	516-I17	1	COUNTERBALANCE VALVE	
7	I05-091	4	LOCK WASHER (5/16")	
8	I05-I78	4	BOLT (5/16-NC X 2-1/2", GD8)	USE LOCTITE 242 OR EQUIVALENT
9	I05-070	2	LOCK WASHER (1/2")	
10	I05-282	2	BOLT (1/2 - NC X 1.25", SOCI)	USE LOCTITE 277 OR EQUIVALENT; TORQUE TO 90 FT-LBS

### FOOTNOTES

NOTE:

## SWING DRIVE

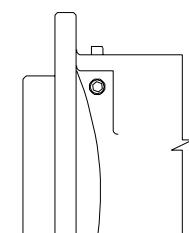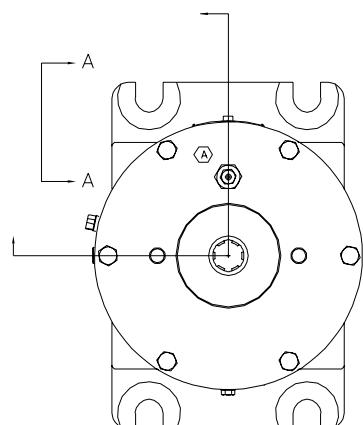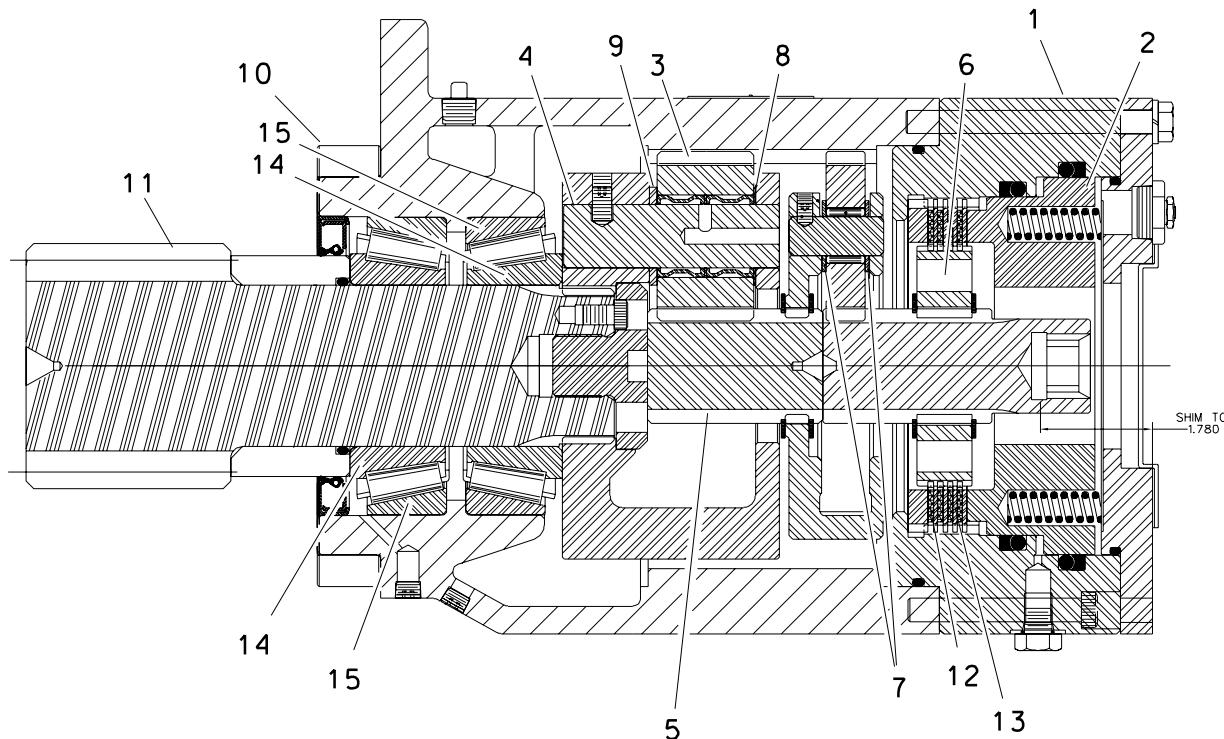

## NOTES:


1. PRELOAD THE TIMKEN BEARINGS TO 40-60 IN.-LBS AND LOCK BOLT IN PLACE.
2. TORQUE ITEMS #58 & #60 TO 39 FT.-LBS.
3. STAKE ITEMS #62 & #63
4. AIR TEST FOR LEAKS

## SWING DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	499-236	1	SWING DRIVE	
1.	499-239	1	BRAKE CYLINDER	
2.	499-240	1	BRAKE PISTON	
3.	499-241	1	PLANET GEAR	- - - - -
4.	499-242	1	PLANET GEAR SHAFT	- - - - -
5.	499-243	1	OUTPUT GEAR SHAFT	- - - - -
6.	499-244	1	BRAKE DRIVER	- - - - -
7.	499-248	1	THRUST WASHER RACE (.625")	
8.	499-249	-	THRUST WASHER RACE (1.000")	- - - - -
9.	499-250	-	THRUST WASHER RACE (1.000")	- - - - -
10.	499-251	1	ECCENTRIC RING	
11.	499-252	1	PINION	
12.	499-253	1	REACTION DISC	- - - - -
13.	499-254	1	BRAKE DISC	
14.	499-255	1	TAPERED BEARING	- - - - -
15.	499-256	1	TAPERED RACE	- - - - -

FOOTNOTES

## LIFT CYLINDER

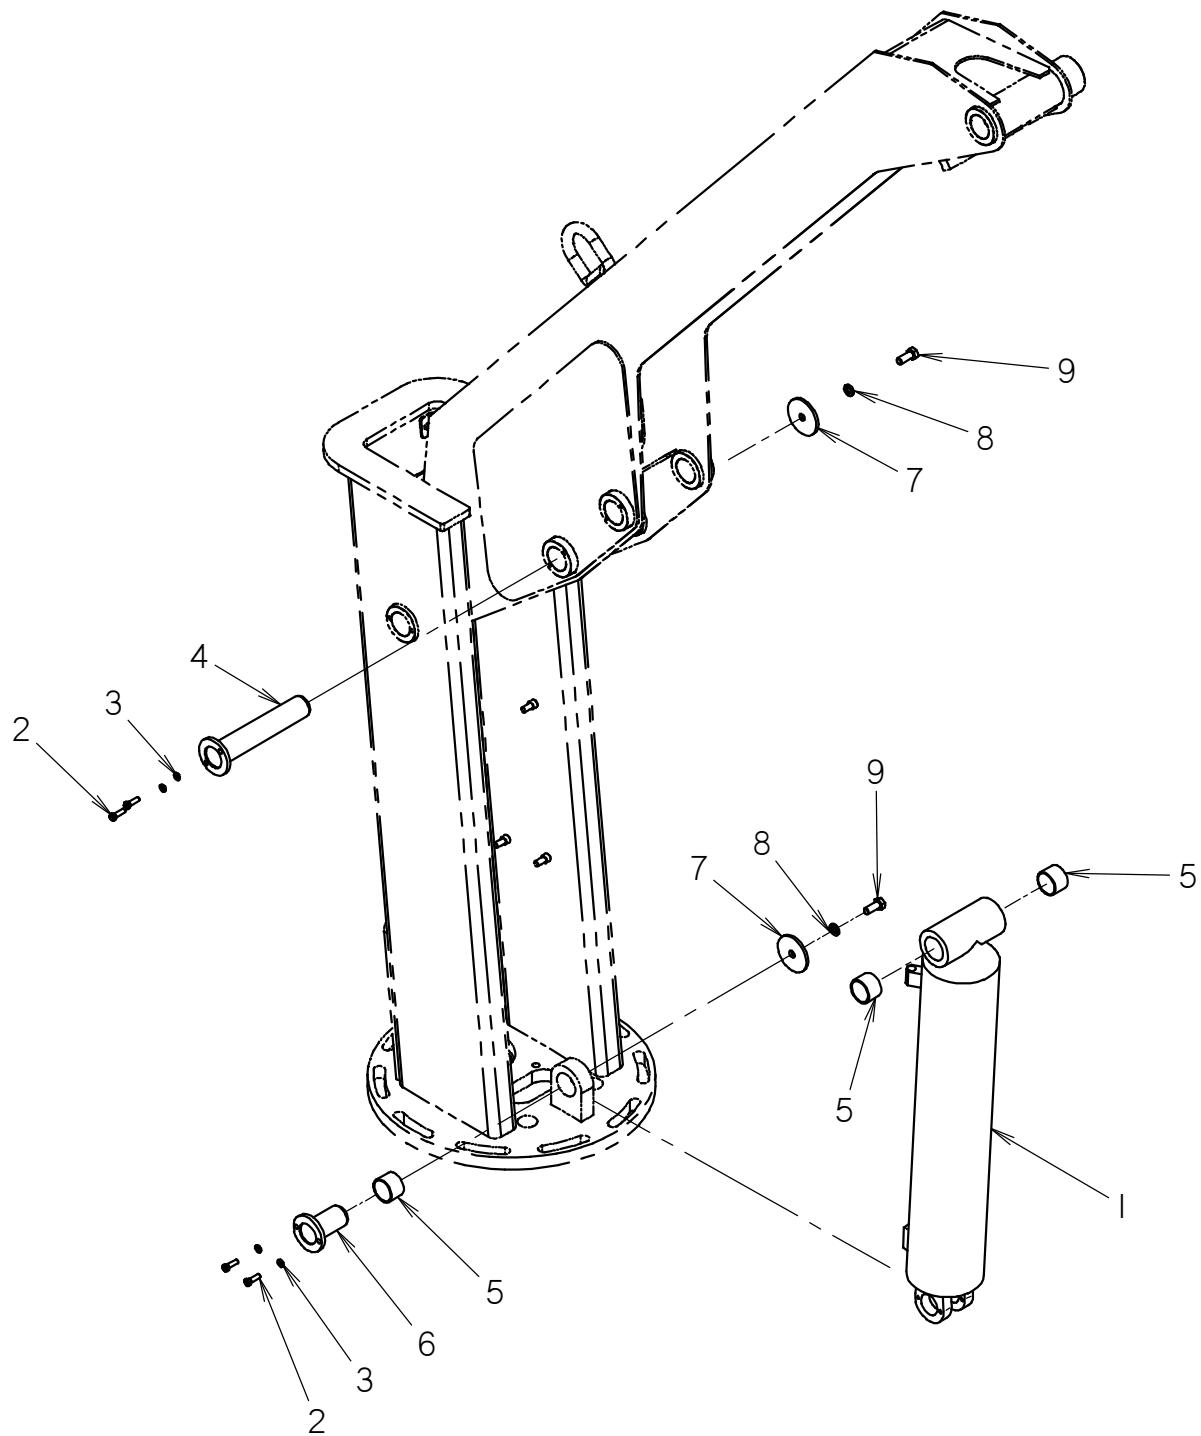

# LIFT CYLINDER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	151-198	1	LIFT CYLINDER	SEE FOOTNOTE I
2	105-052	4	BOLT (3/8-NC X 1-1/4")	USE 242 LOCTITE OR EQUIVALENT
3	105-072	4	LOCK WASHER (3/8")	
4	179-269	1	PIN	
5	125-483	3	COMPOSITION BUSHING (2.000")	
6	179-267	1	PIN	USE 242 LOCTITE OR EQUIVALENT
7	499-235	2	PIN WASHER	
8	105-385	2	LOCK WASHER (5/8")	
9	105-358	2	BOLT (5/8-NC X 1-1/2", GD8)	


NOT SHOWN:

FOOTNOTES:

- I. SEAL KIT 500-2120.

NOTE:

## OVERLOAD

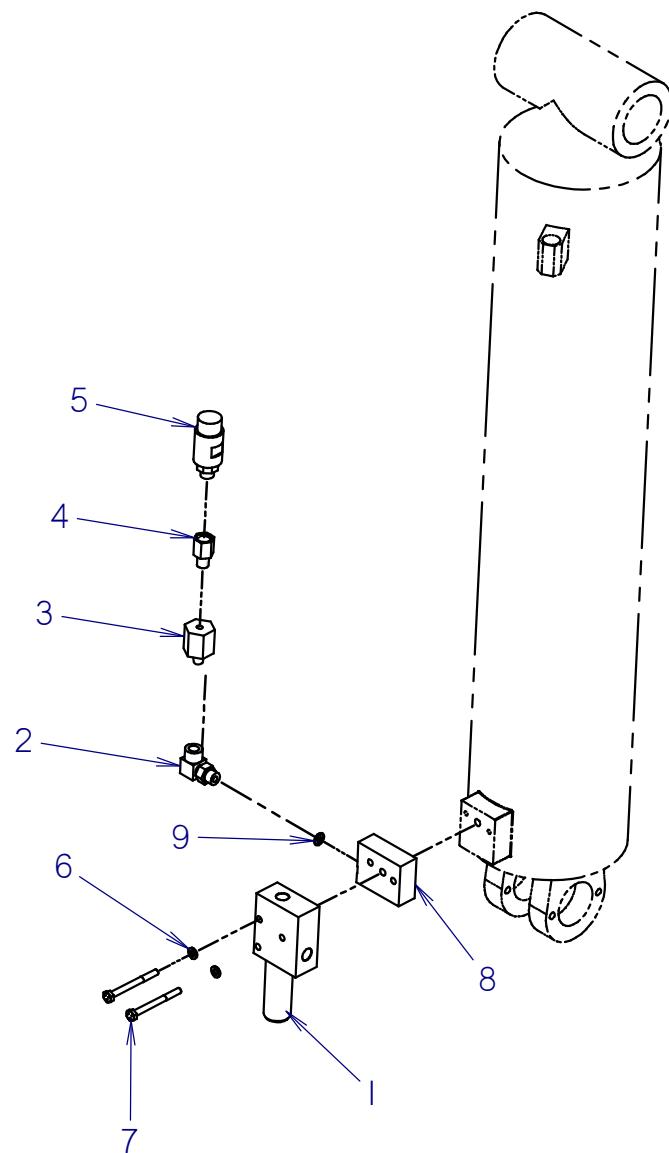

## OVERLOAD


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	516-112	1	COUNTERBALANCE VALVE	
2	I53-203	1	ELBOW (060-04N90)	
3	I53-202	1	ADJUSTABLE GAUGE SNUBBER	
4	I53-264	1	REDUCER (04N-06SF)	
5	2I3-3I5	1	PRESSURE SWITCH	
6	I05-079	2	LOCK WASHER (I/4)	
7	I07-743	2	BOLT (I/4-NC X 2.75, GD5)	
8	516-III	1	SENSE MANIFOLD	
9	I58-079	1	ORIFICE DISC (.016)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## OUTER BOOM CYLINDER

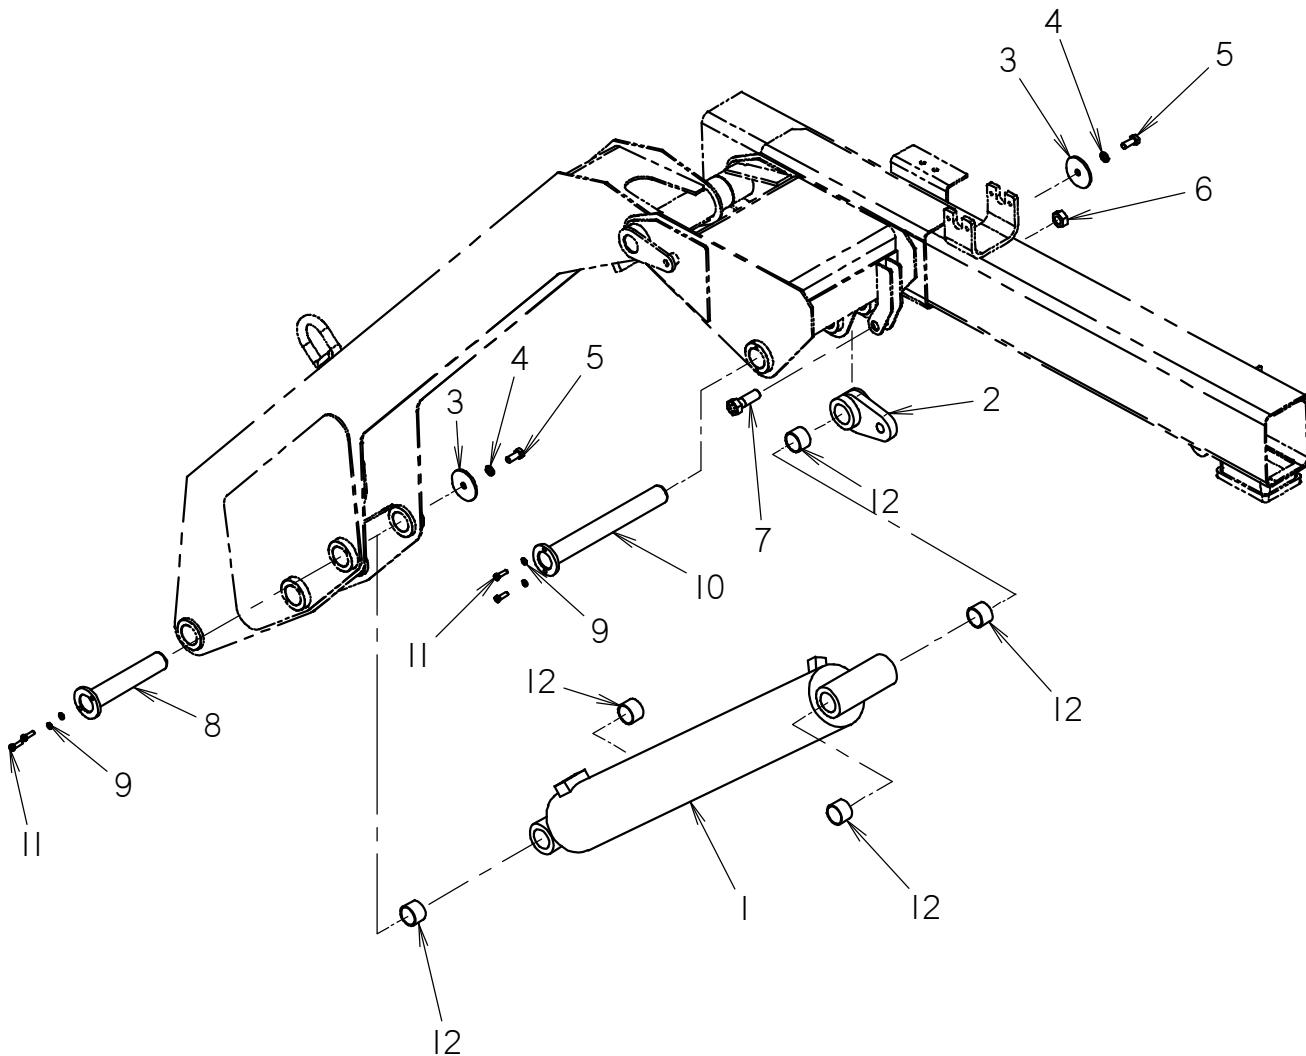

# OUTER BOOM CYLINDER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I5I-I97	1	OUTER BOOM CYLINDER	SEE FOOTNOTE I.
2	499-262	1	LIFTING LUG	
3	499-235	2	PIN WASHER	
4	I05-385	2	LOCK WASHER (5/8")	
5	I05-358	2	BOLT (5/8-NC X 1-1/2", GD8)	USE LOCTITE 242 OR EQUIVALENT
6	I05-375	1	NUT (1-NC)	
7	I05-373	1	BOLT (1-NC X 3")	
8	I79-269	1	PIN	
9	I05-072	4	LOCK WASHER (3/8")	
10	I79-268	1	PIN	
II	I05-052	4	BOLT (3/8-NC X 1-1/4")	USE LOCTITE 242 OR EQUIVALENT
I2	I25-483	5	COMPOSITION BUSHING (2.000")	


NOT SHOWN:

FOOTNOTES:

I. SEAL KIT 500-2120.

NOTE:

## EXTENSION CYLINDER

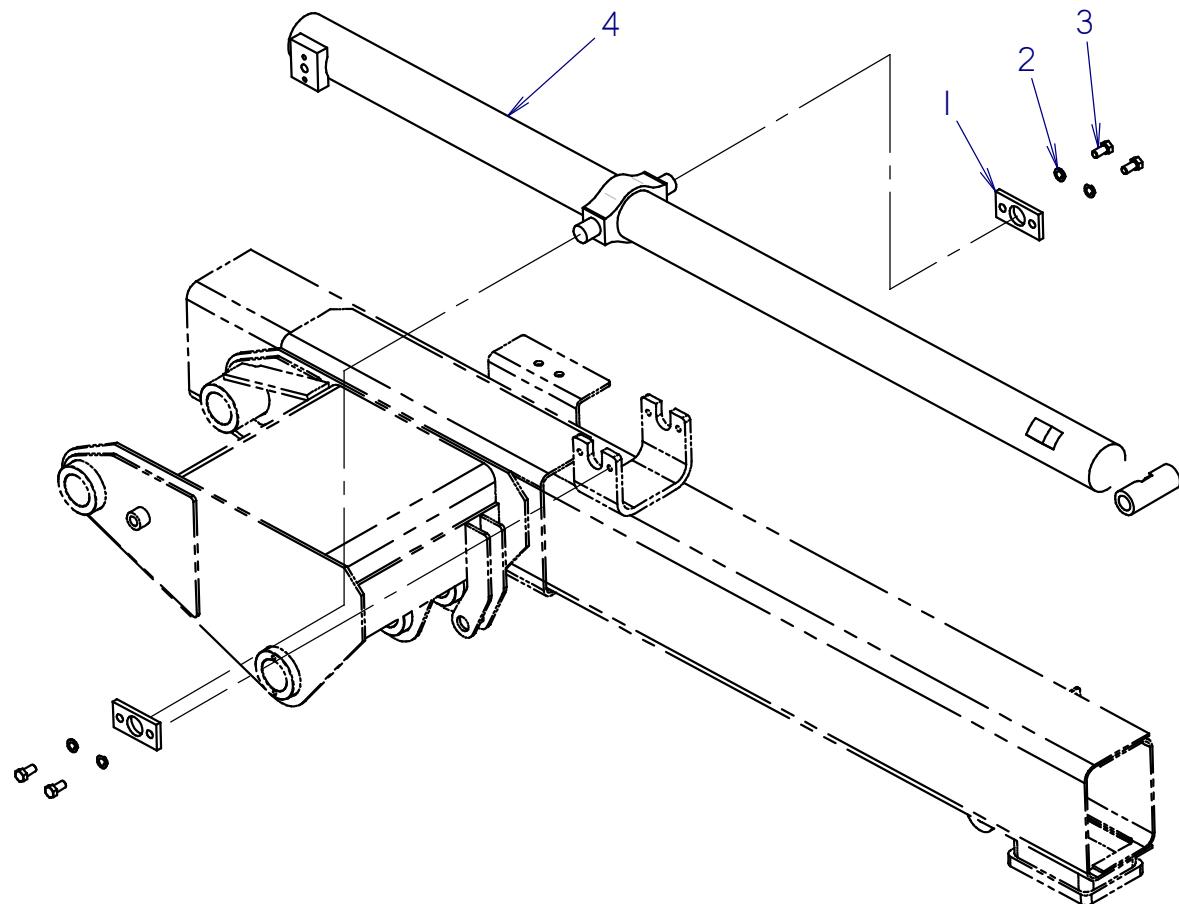

## EXTENSION CYLINDER


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	348-297	2	TRUNNION CAP	
2	105-070	4	LOCK WASHER (1/2")	
3	105-121	4	BOLT (1/2-NC X 1")	USE LOCTITE 242 OR EQUIVALENT; TORQUE TO 90 FT-LBS
4	499-259	1	EXTENSION BOOM CYLINDER	

NOT SHOWN:


FOOTNOTES:

NOTE:

## CONTROL VALVE

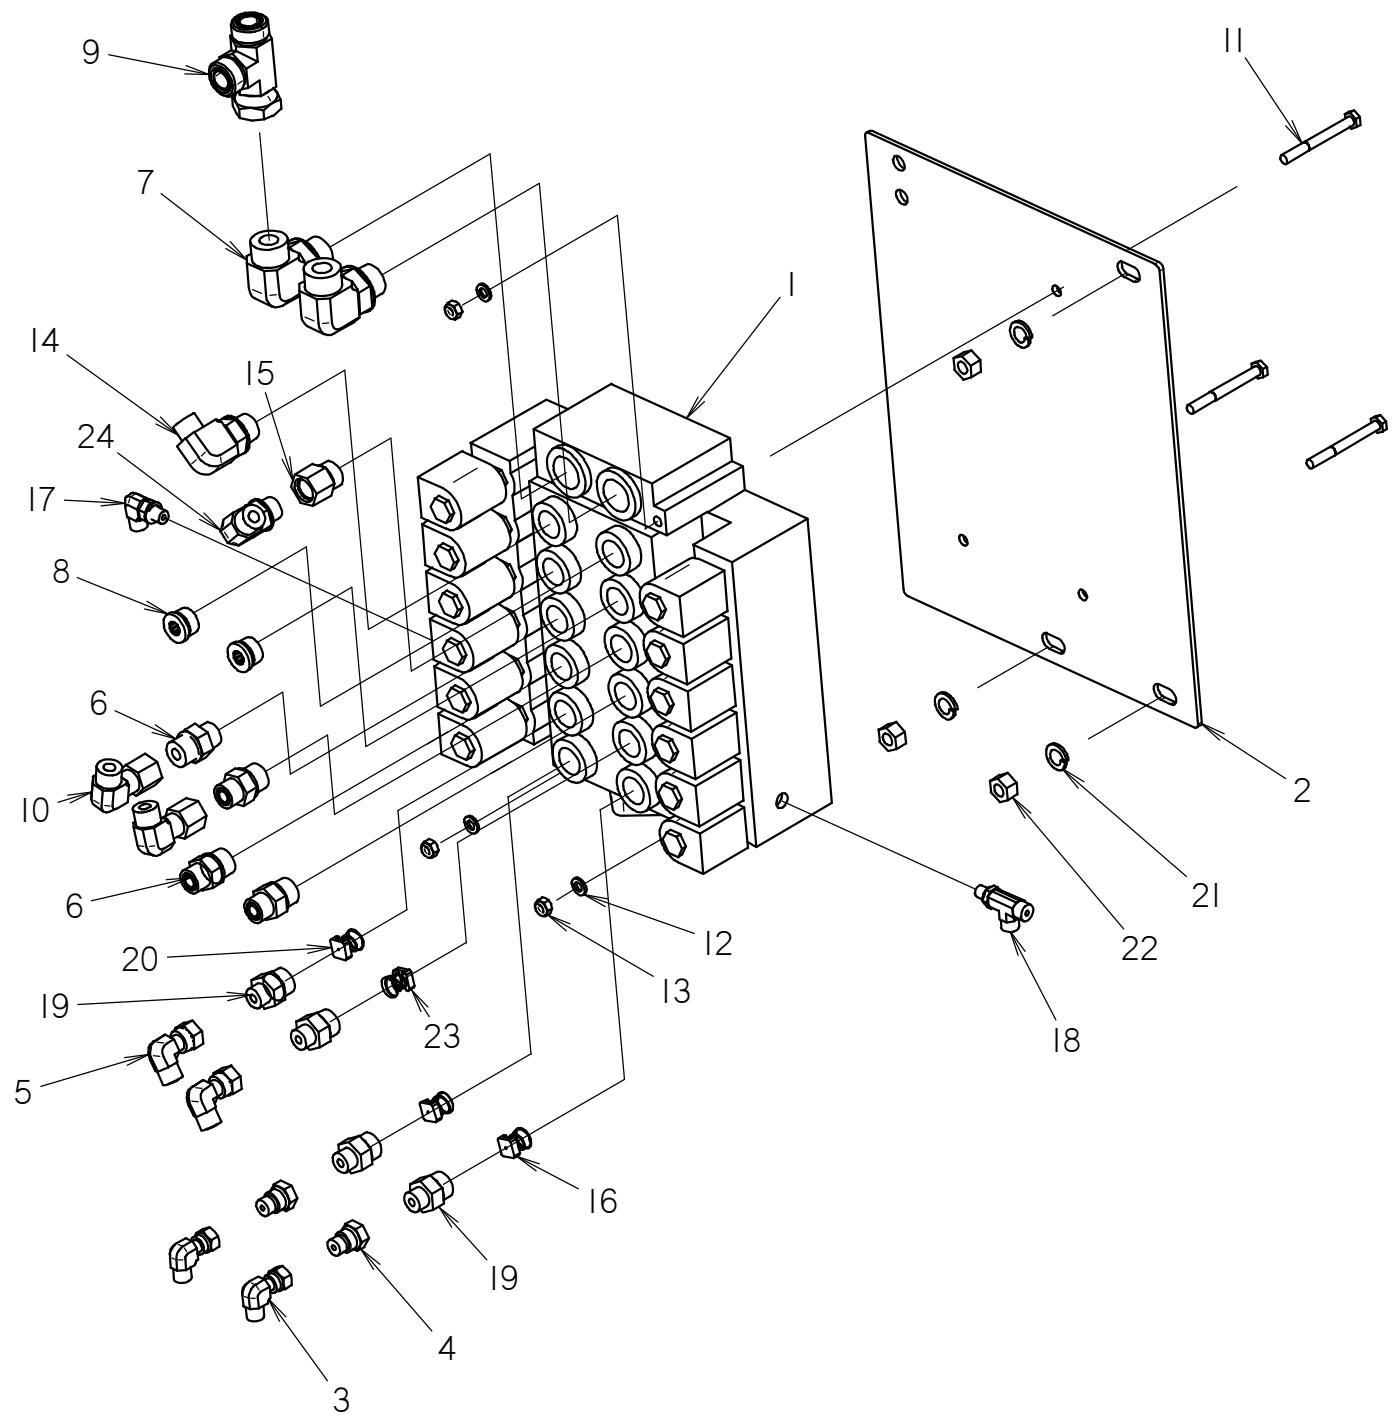

## CONTROL VALVE

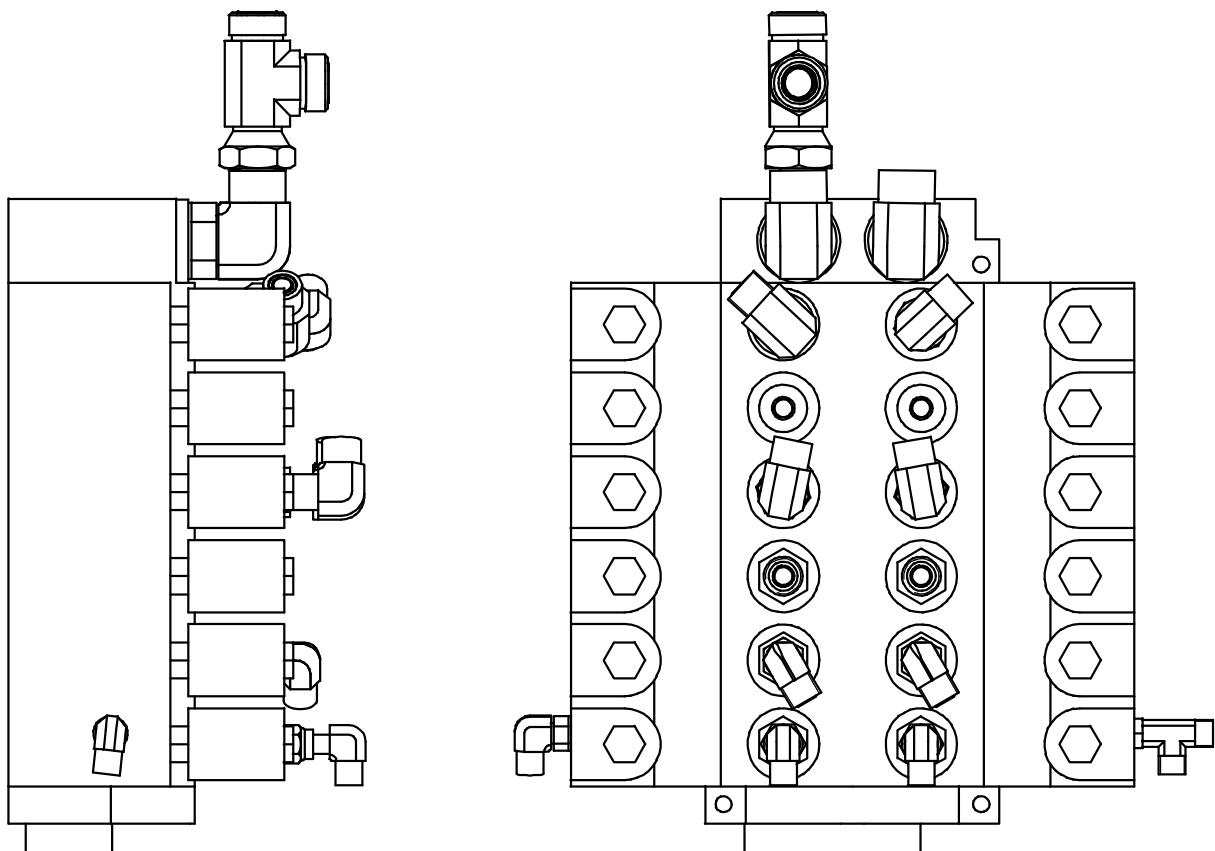

# CONTROL VALVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	499-237	1	HYD CONTROL VALVE	
2	370-073	1	VALVE MOUNT	
3	154-255	2	UNION (040-040FX90)	
4	154-373	2	REDUCER (040-060F)	
5	154-228	2	UNION (060-060FX90)	
6	154-279	4	CONNECTOR (080-10S)	
7	154-270	2	CONNECTOR (12S-12090)	
8	500-294	2	PLUG (10S)	
9	154-368	1	UN RUN TEE (120FX-120-120)	
10	154-256	2	UNION (080-080FX90)	
11	105-170	3	BOLT (5/16-NC X 3")	
12	105-091	3	LOCK WASHER (5/16")	
13	105-089	3	LOCKNUT (5/16-NC)	
14	154-322	1	CONNECTOR (080-10S90)	
15	155-193	1	REDUCER (10S-08SF)	
16	158-076	2	FLOW RESTRICTOR (053)	
17	154-252	1	CONNECTOR (04S-04090)	
18	154-316	1	RUN TEE (04S-040-040)	
19	150-1133	4	CONNECTOR (060-10S)	
20	158-282	1	FLOW RESTRICTOR (047)	
21	105-070	3	LOCK WASHER (1/2")	
22	105-021	3	NUT(1/2-NC)	
23	158-283	1	FLOW RESTRICTOR (062)	INSTALL WITH SPRING SIDE UP
24	154-235	1	CONNECTOR (08S-08090)	

## NOT SHOWN:


500-2034 SOLENOID ACTUATOR  
 500-2035 SOLENOID ACTUATOR  
 500-2036 SOLENOID ACTUATOR  
 500-2037 COIL KIT  
 500-2038 OUTLET COVER  
 499-150 BONNET SEAL KIT  
 500-581 PLUG SEAL KIT  
 500-2050 RELIEF VALVE

## FOOTNOTES:

## NOTE:



## CONTROL VALVE CHARGE HYDRAULICS

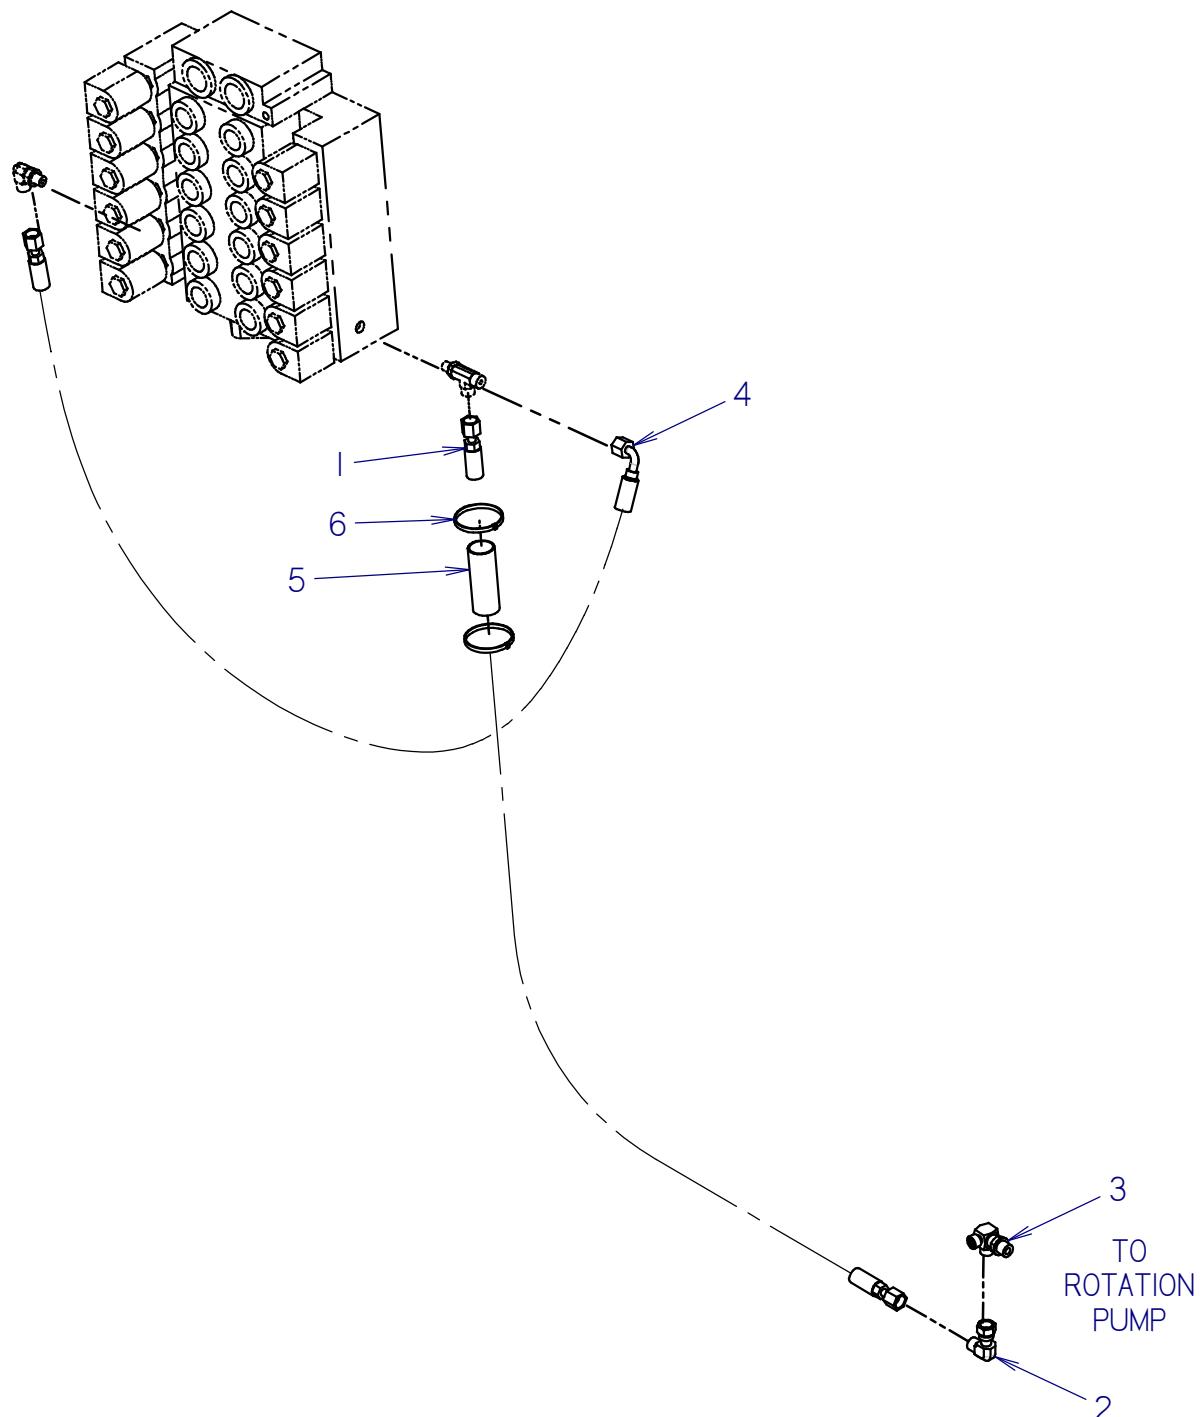

## CONTROL VALVE CHARGE HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	515-639	1	HOSE (040FX-140"-3000)	
2	154-255	1	UNION (040-040FX90)	
3	154-230	1	BRANCH TEE (06S-040-040)	INSTALL IN ROTATION PUMP
4	154-743	1	HOSE (040FX90S-23"-3000)	
5	117-203	1	ABRASION SLEEVE (1.00" X 143")	
6	110-030	2	CABLE TIE (1/16" TO 4")	

NOT SHOWN:

FOOTNOTES:

NOTE:

## PROPORTIONAL VALVE

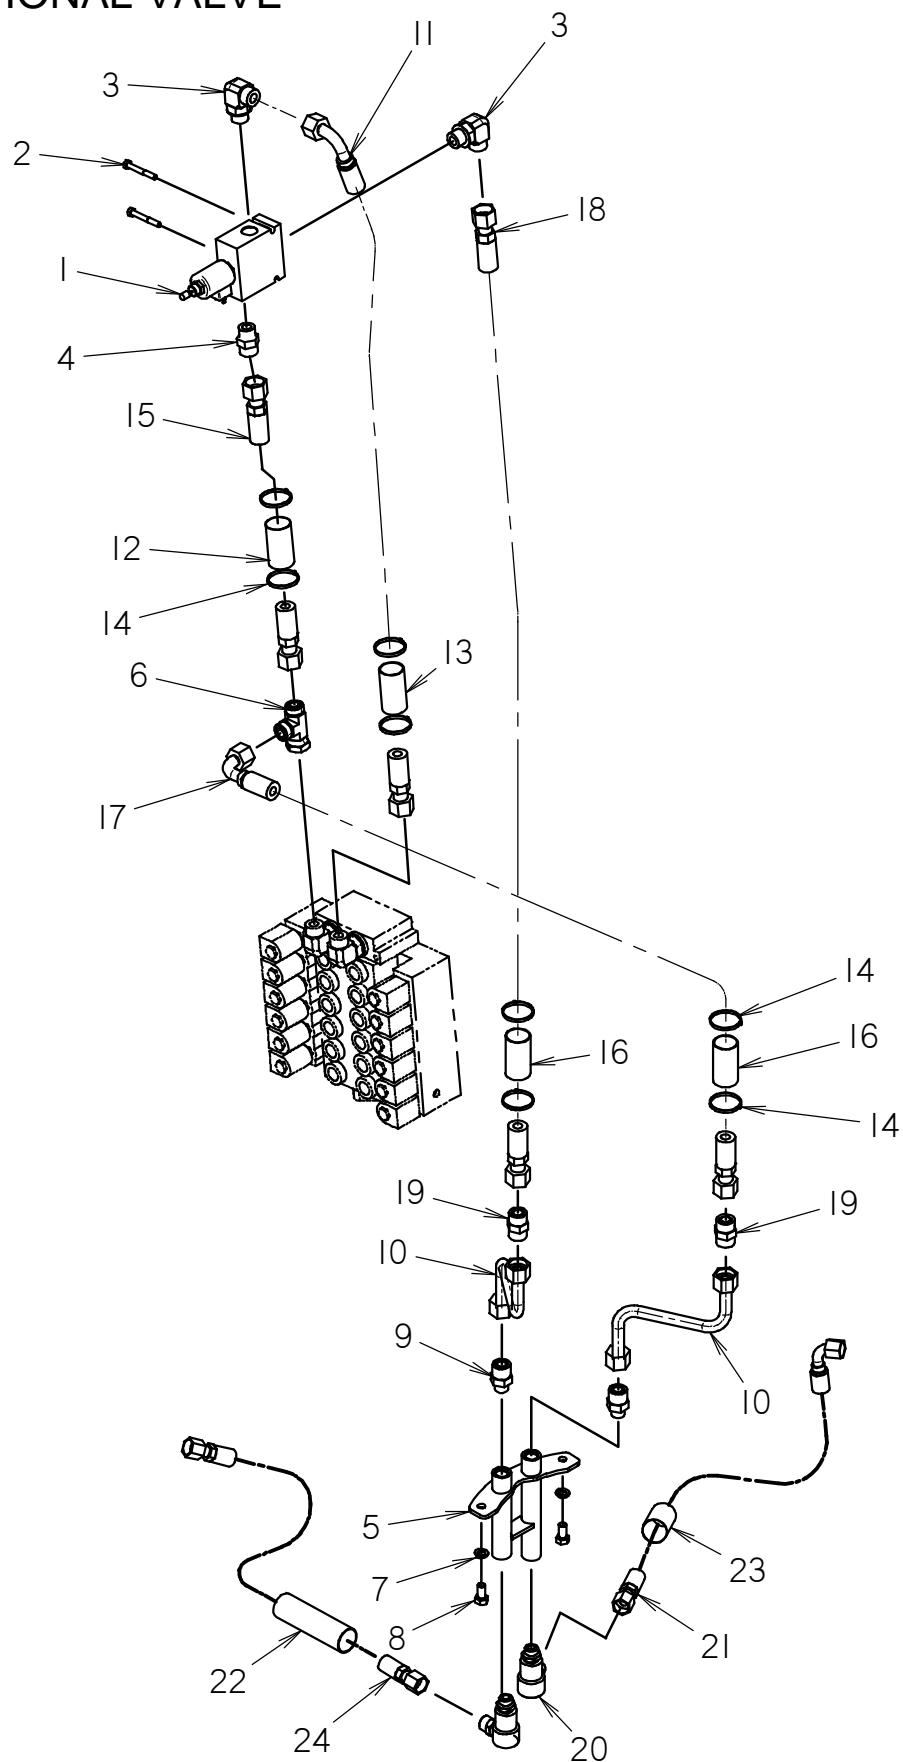

# PROPORTIONAL VALVE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	499-267	1	PROPORTIONAL VALVE	
2	I05-I78	2	BOLT (I/16-NC X 2-I/2", GD8)	
3	I54-270	2	CONNECTOR (I2S-I2090)	
4	I54-269	1	CONNECTOR (I2S-I20)	
5	I53-552	1	MANIFOLD	
6	I54-368	1	UN RUN TEE (I20FX-I20-I20)	
7	I05-070	2	LOCK WASHER (I/2")	
8	I05-I21	2	BOLT (I/2-NC X I")	
9	I54-247	2	CONNECTOR (I0S-I20)	
10	I50-I021	2	HYDRAULIC LINE (-I2)	
11	I59-782	1	HOSE (I20FX90S-24"-4000)	
12	I15-777	1	ABRASION SLEEVE (I.59" X 15")	
13	I15-811	1	ABRASION SLEEVE (I.59" X 20")	
14	I10-030	8	CABLE TIE (I/16" TO 4")	
15	I50-I032	1	HOSE (I20FX-15"-3000)	
16	I17-720	2	ABRASION SLEEVE (I.59" X 48")	
17	I50-I033	1	HOSE (I20FX90L-37"-3000)	
18	I50-I034	1	HOSE (I20FX-51"-3000)	
19	I54-431	2	CONNECTOR (I20-I20)	
20	I53-772	2	HYD SWIVEL	
21	515-082	1	HOSE (I00FX90S-60"-3000)	
22	I17-204	1	ABRASION SLEEVE (I.59" X 108")	
23	I15-755	1	ABRASION SLEEVE (I.59" X 60")	
24	515-202	1	HOSE (I00FX-106"-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

# HOIST HYDRAULICS WITHOUT HOIST

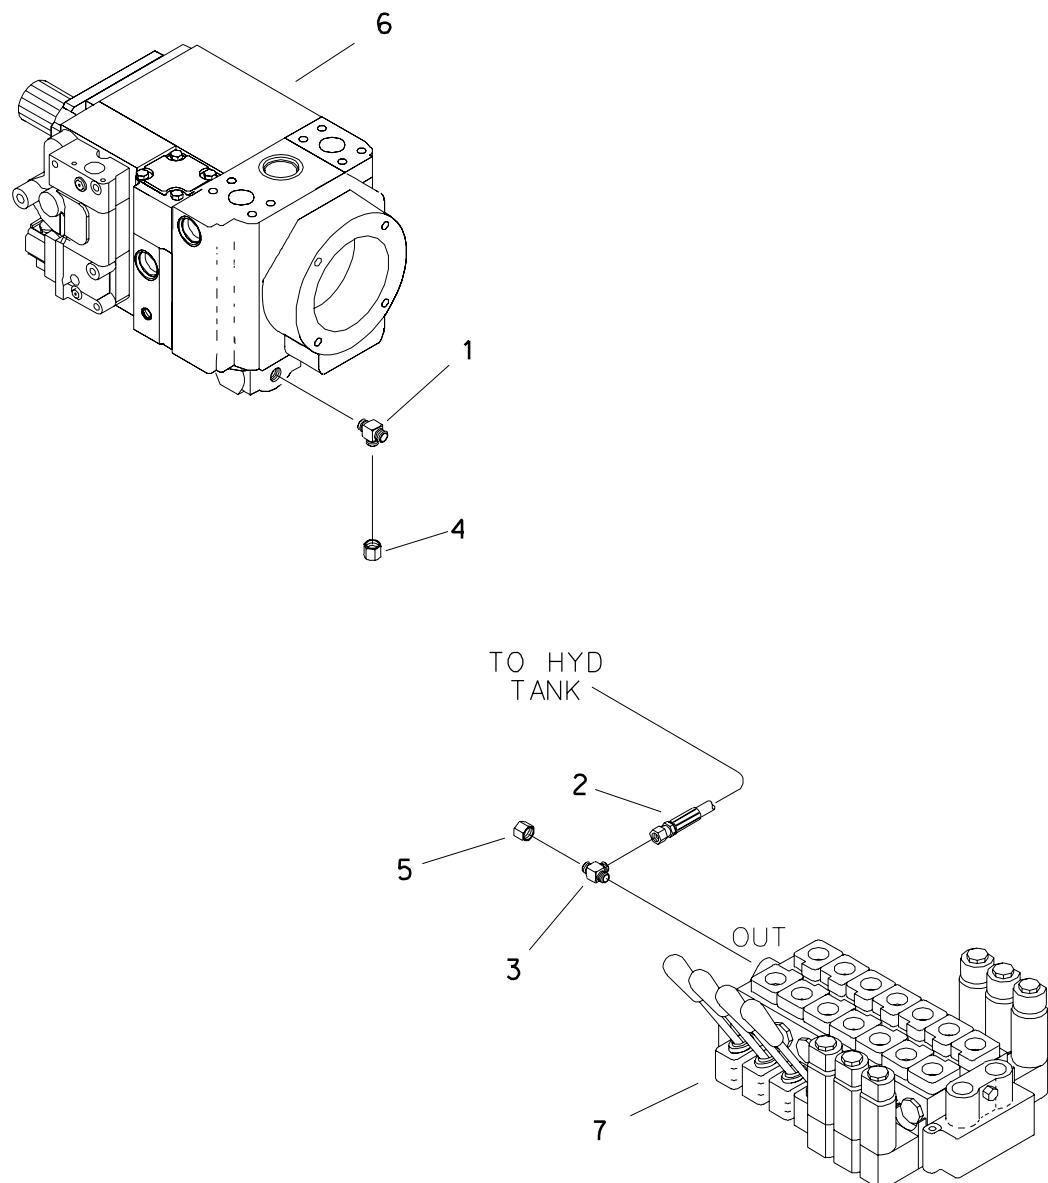

# HOIST HYDRAULICS


## WITHOUT HOIST

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	154-230	-	BRANCH TEE (06S-040-040)	
2.	515-259	-	HOSE (100FX45-14"-3000)	
3.	154-370	-	RUN TEE (12S-100-100)	
4.	154-296	1	CAP (040F)	
5.	154-324	1	CAP (100F)	
6.	149-901	-	HYDRAULIC PUMP (130)	
7.	516-049	-	HYD CONTROL VALVE (7-SPOOL)	

### FOOTNOTES

NOTE  
REFER TO O-RING CHART (800-301) IN BACK OF THE BOOK FOR REPLACEMENT OF O-RINGS.

## SWING DRIVE HYDRAULICS

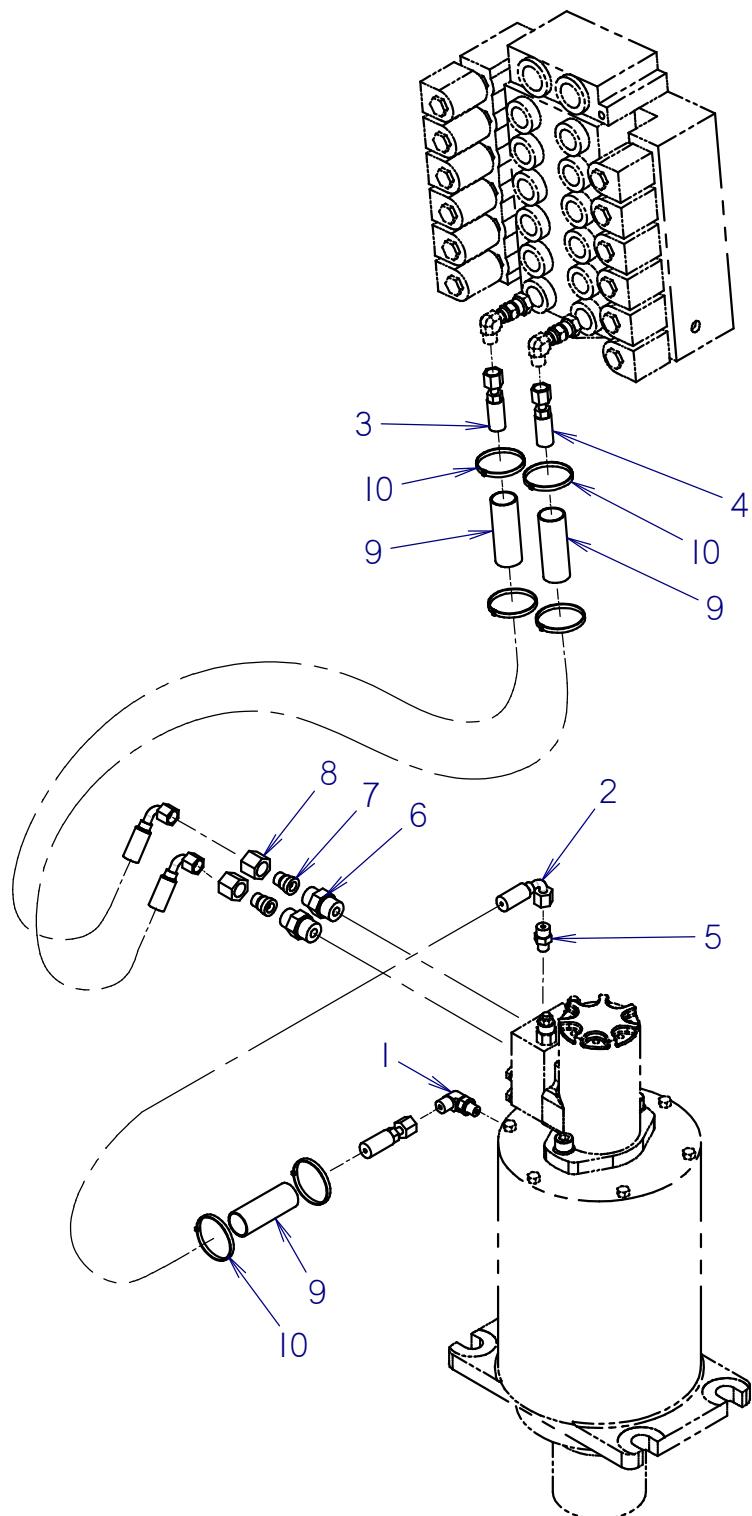

## SWING DRIVE HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I54-252	1	CONNECTOR (I04S-04090)	
2	I50-1029	1	HOSE (I040FX90S-16"-6000) - NEW PART	
3	I50-1029	1	HOSE (I040FX90S-16"-6000) - NEW PART	
4	I50-1029	1	HOSE (I040FX90S-16"-6000) - NEW PART	
5	I54-278	1	CONNECTOR (I04S-040)	
6	I54-279	2	CONNECTOR (I080-I0S)	
7	I54-248	2	REDUCER STEM (I040)	
8	I54-272	2	REDUCER NUT (I080F)	
9	I17-278	3	ABRASION SLEEVE (1.00" X 14")	
10	I10-030	6	CABLE TIE (1/16" TO 4")	

NOT SHOWN:

FOOTNOTES:

NOTE:

## LIFT CYLINDER HYDRAULICS

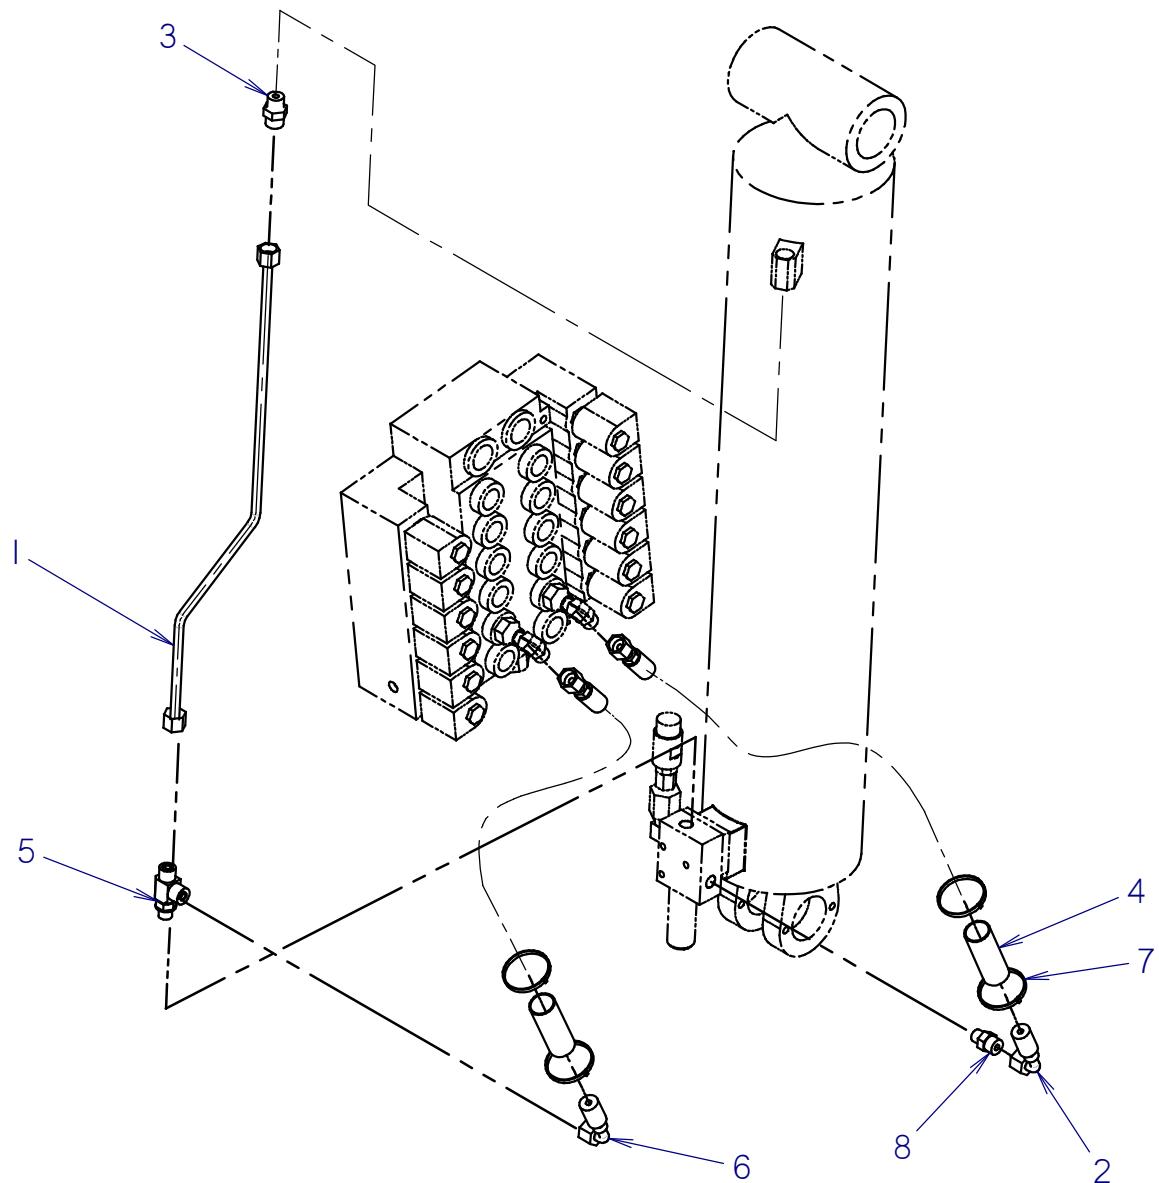

## LIFT CYLINDER HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I59-997	1	HYDRAULIC LINE (-08)	
2	515-188	1	HOSE (060FX90S-23"-3000)	
3	I54-222	1	CONNECTOR (060-08S)	
4	I17-672	2	ABRASION SLEEVE (1.00" X 20")	
5	I54-345	1	RUN TEE (06S-060-060)	
6	515-188	1	HOSE (060FX90S-23"-3000)	
7	I10-030	4	CABLE TIE (1/16" TO 4")	
8	I54-221	1	CONNECTOR (06S-060)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## EXTENSION CYLINDER HYDRAULICS

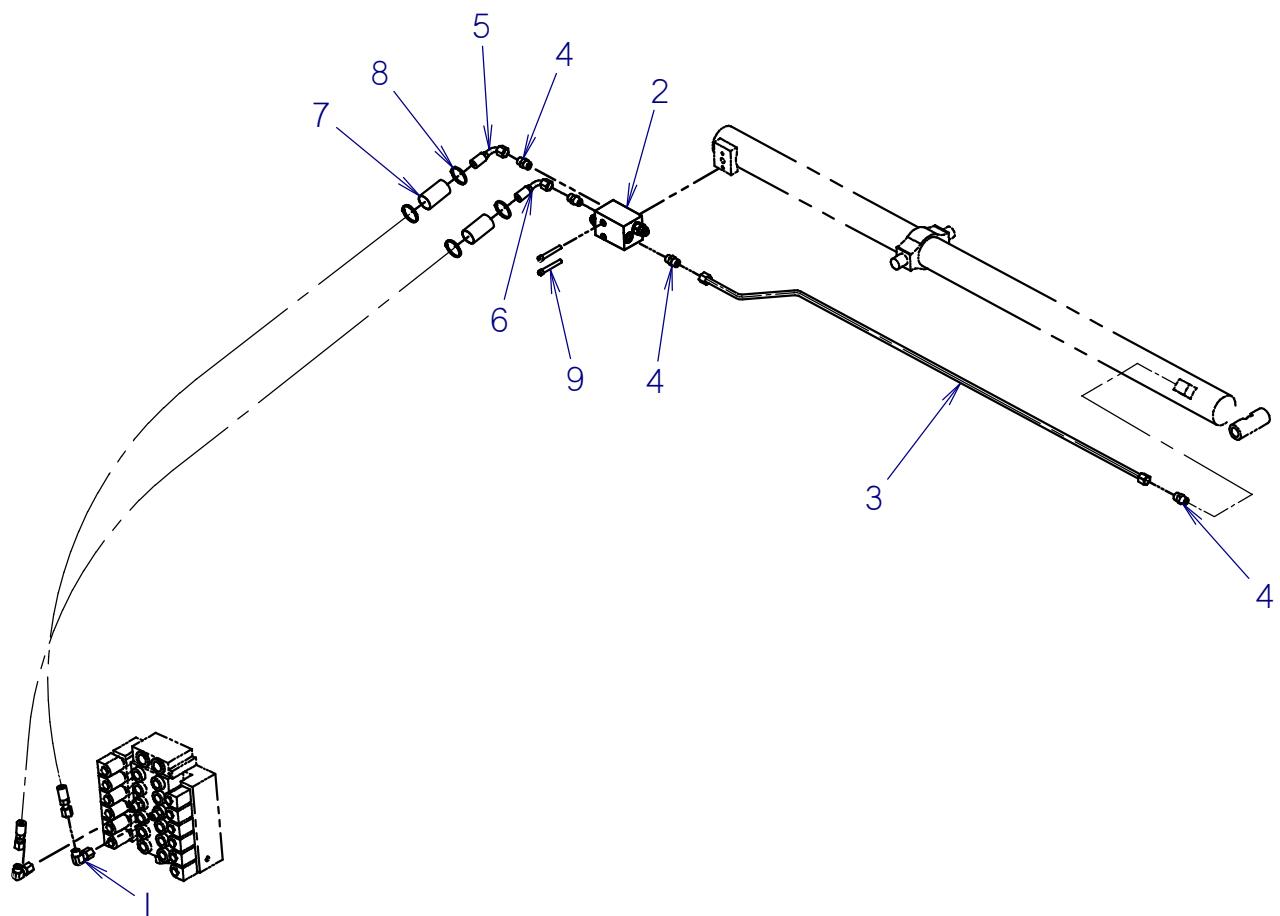

## EXTENSION CYLINDER HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I54-256	2	UNION (080-080FX90)	
2	516-118	1	COUNTERBALANCE VALVE	
3	I59-995	1	HYDRAULIC LINE (-08)	
4	I54-233	4	CONNECTOR (08S-080)	
5	I50-I030	1	HOSE (080FX90S-155"-4000)	CONNECT TO V1 PORT ON COUNTERBALANCE VALVE
6	I50-I030	1	HOSE (080FX90S-155"-4000)	CONNECT TO V2 PORT ON COUNTERBALANCE VALVE
7	I16-640	2	ABRASION SLEEVE (1.59" X 150")	
8	I10-030	4	CABLE TIE (1/16" TO 4")	
9	I05-I064	2	BOLT (3/8-NC X 2-3/4", SOC)	

NOT SHOWN:

FOOTNOTES:

NOTE:

## OUTER BOOM HYDRAULICS

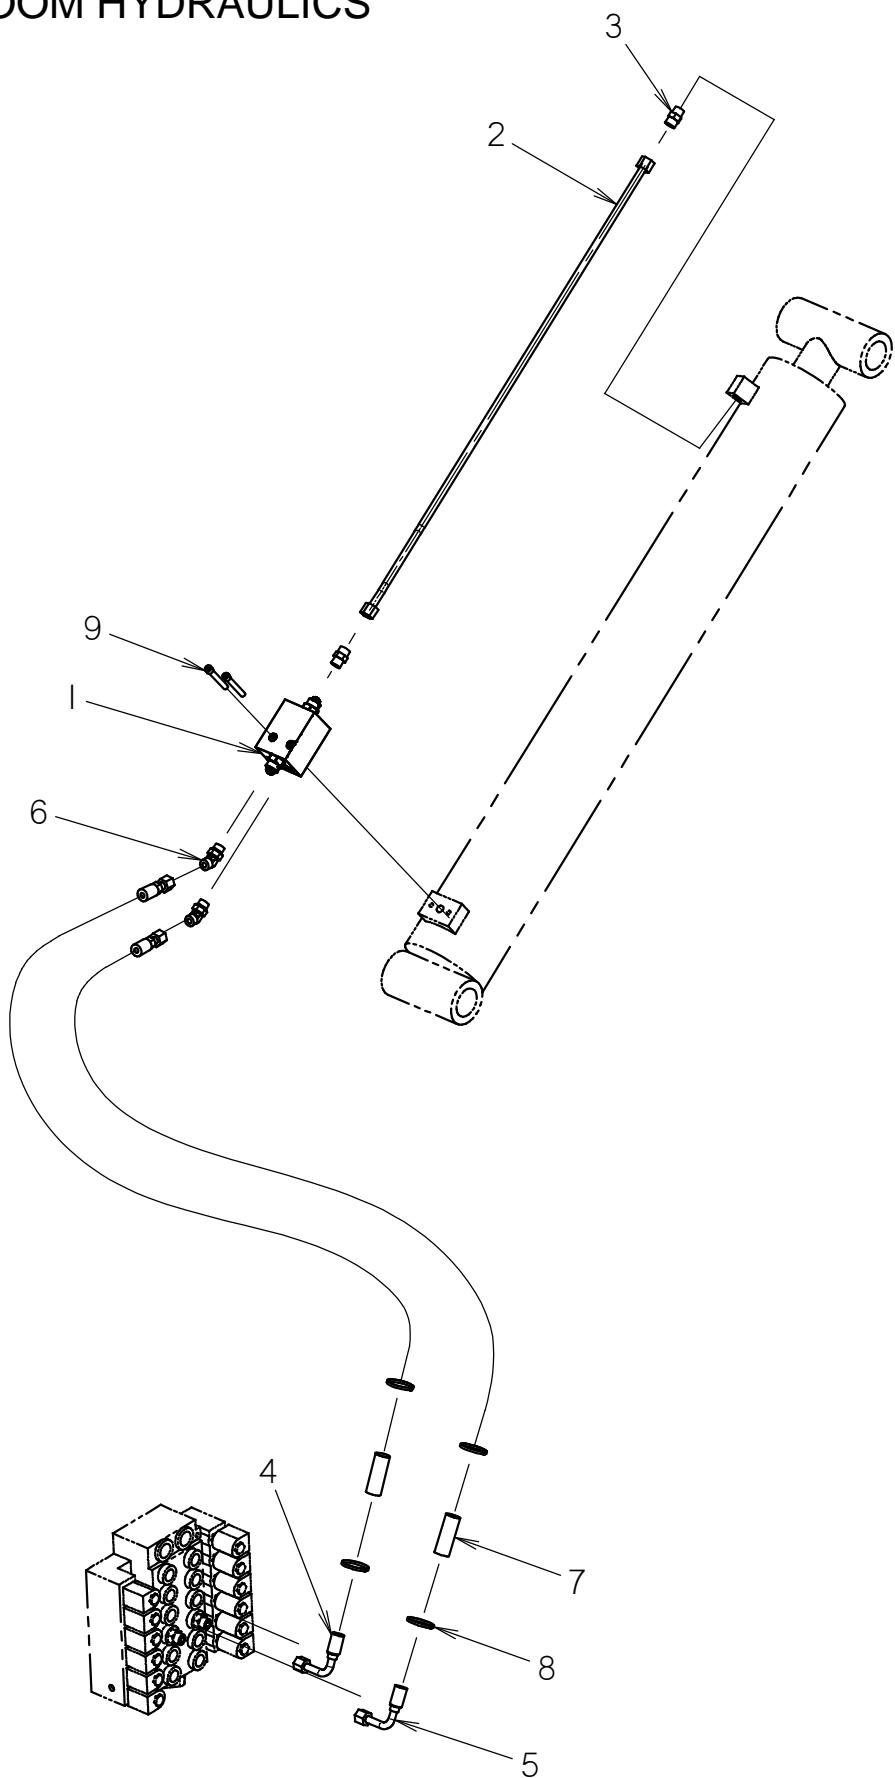

# OUTER BOOM HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	516-118	1	COUNTERBALANCE VALVE	SEE FOOTNOTE I
2	I59-996	1	HYDRAULIC LINE (-08)	
3	I54-233	2	CONNECTOR (I08S-080)	
4	I59-853	1	HOSE (I080FX90L-64"-4000)	
5	I59-853	1	HOSE (I080FX90L-64"-4000)	
6	I54-284	2	CONNECTOR (I08S-08045)	
7	I17-693	2	ABRASION SLEEVE (1.00" X 60")	
8	I10-030	4	CABLE TIE (1/16" TO 4")	
9	I05-I064	2	BOLT (3/8-NC X 2-3/4", SOC)	


NOT SHOWN:

FOOTNOTES:

I. VI INSIDE / V2 OUTSIDE

NOTE:

# PENDANT

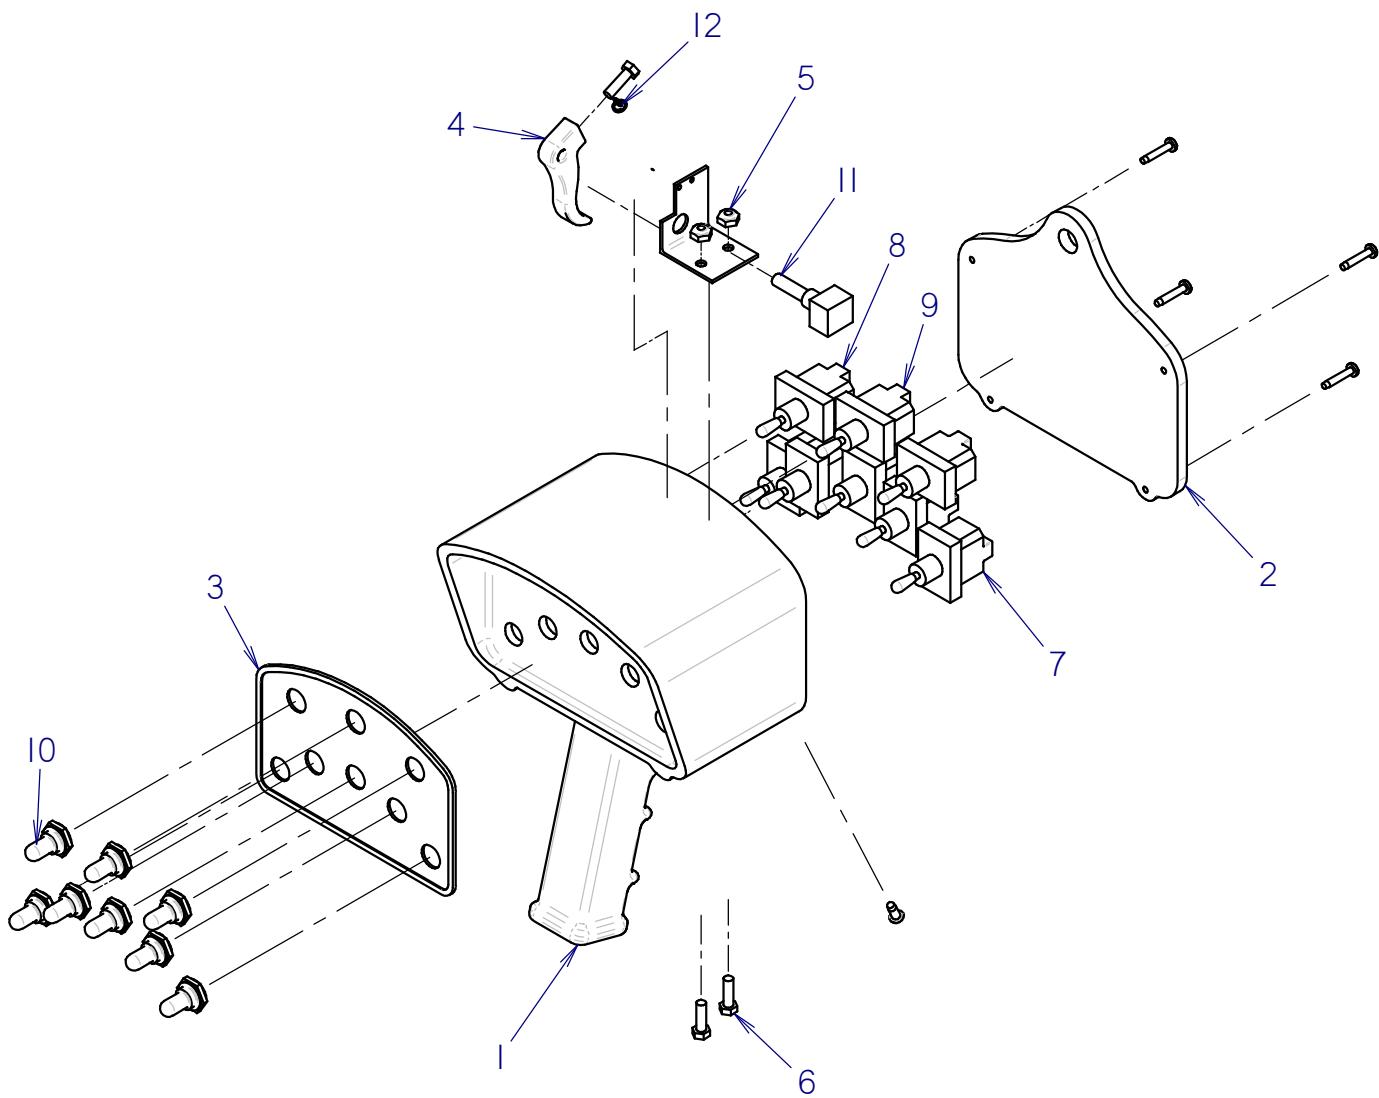

# PENDANT


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I64-034	1	CASE PENDANT	
2	325-344	1	PENDANT BACK PLATE	
3	700-958	1	PENDANT - 8 FUNCTION	
4	499-431	1	TRIGGER, PENDANT	
5	I06-048	2	LOCKNUT (#10-24)	
6	I07-781	3	HEX SCREW (#10-24 X 5/8")	
7	499-271	6	TOGGLE SWITCH (DPDT)	
8	213-386	1	TOGGLE SWITCH (ON/OFF)	
9	213-387	1	TOGGLE SWITCH (SPDT)	
10	499-273	8	TOGGLE BOOT	
11	217-406	1	POTENTIOMETER	
12	I17-206	1	EXTENSION SPRING	

NOT SHOWN:

FOOTNOTES:

NOTE:

## LIMIT SWITCH

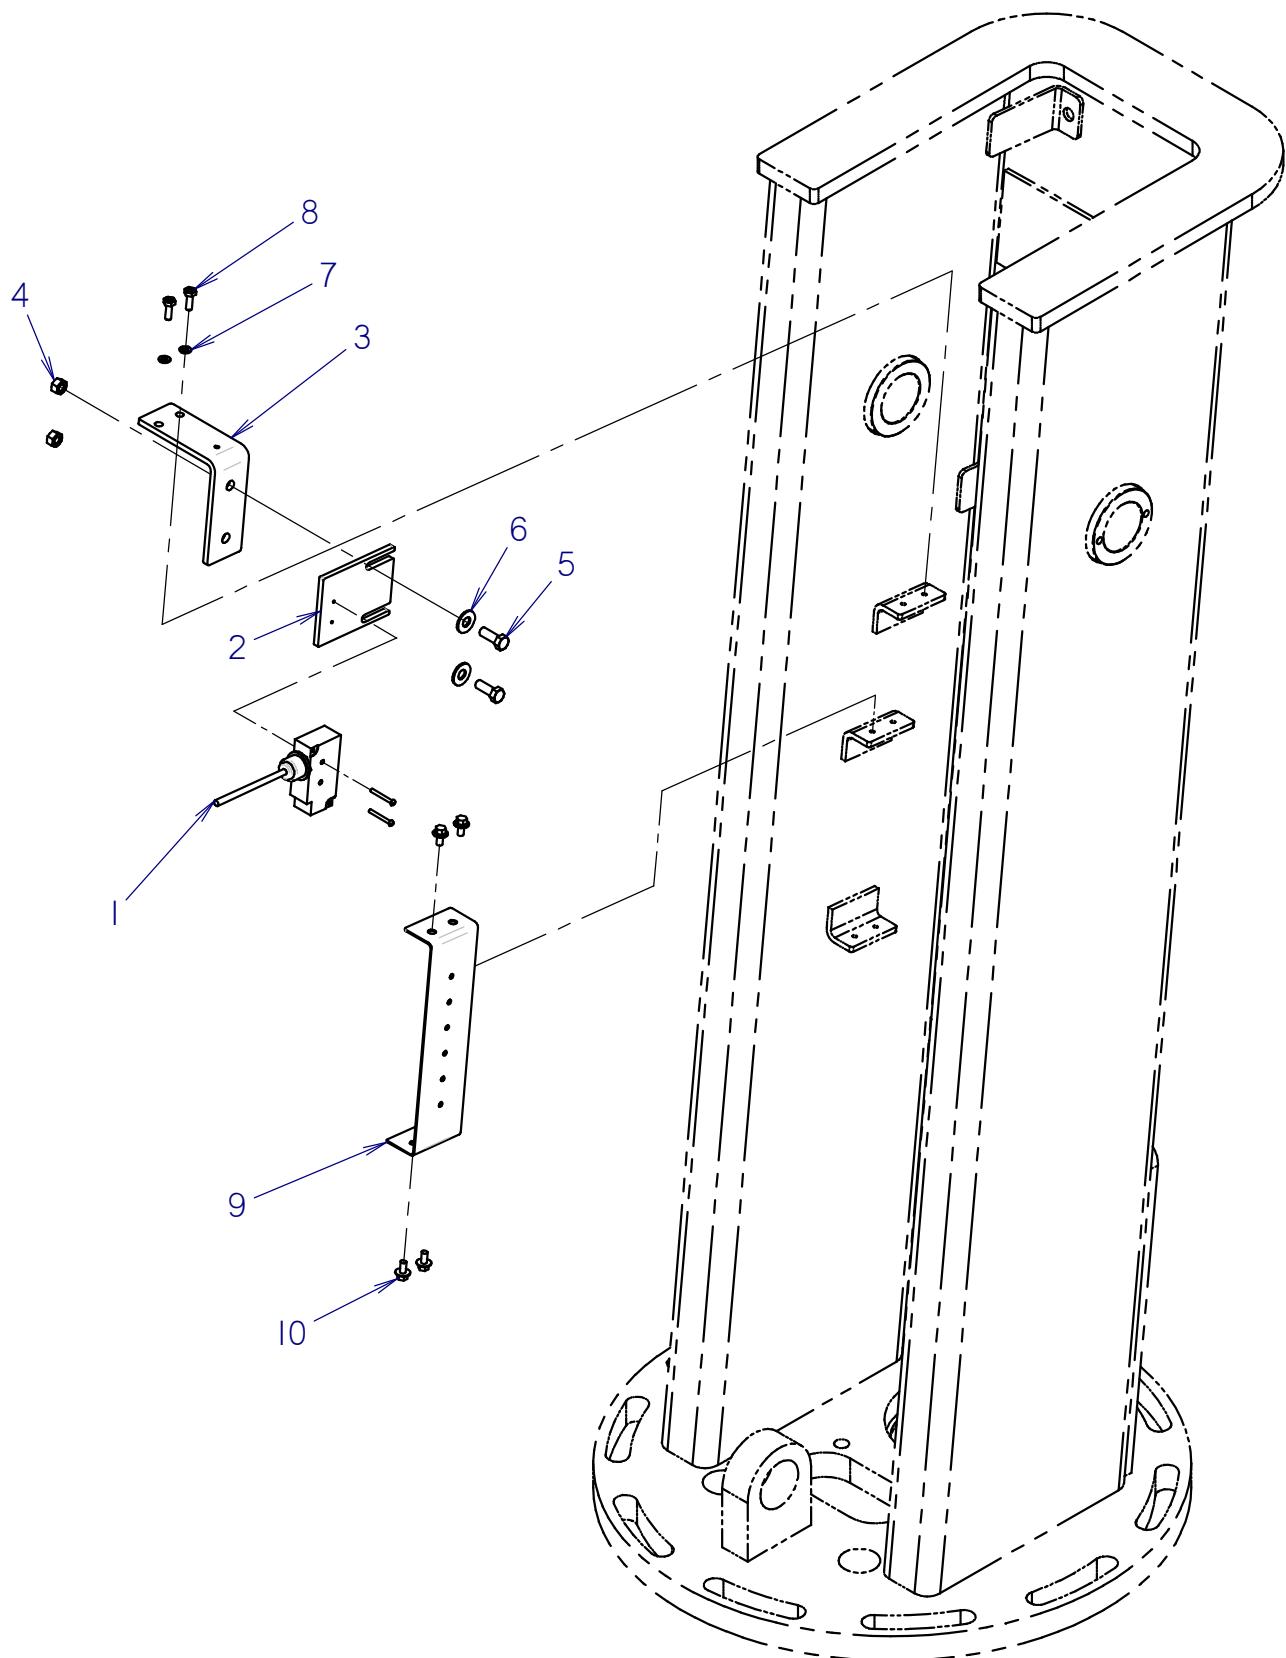

# LIMIT SWITCH


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	213-384	1	LIMIT SWITCH	
2	325-342	1	SWITCH MOUNT	
3	325-341	1	SWITCH MOUNT	
4	I05-053	2	NUT (3/8 NC) HEX	
5	I05-031	2	BOLT (3/8-NC X 1")	
6	I05-I18	2	WASHER (3/8")	
7	I05-079	2	LOCK WASHER (1/4)	
8	I05-865	2	BOLT (1/4-NC X 3/4", GD8)	
9	325-340	1	BRACKET, WEATHER PACK	
10	I05-836	4	FLG LK BOLT (1/4-NC X 1/2")	

NOT SHOWN:

FOOTNOTES:

NOTE:

## ELECTRICAL COMPONENTS

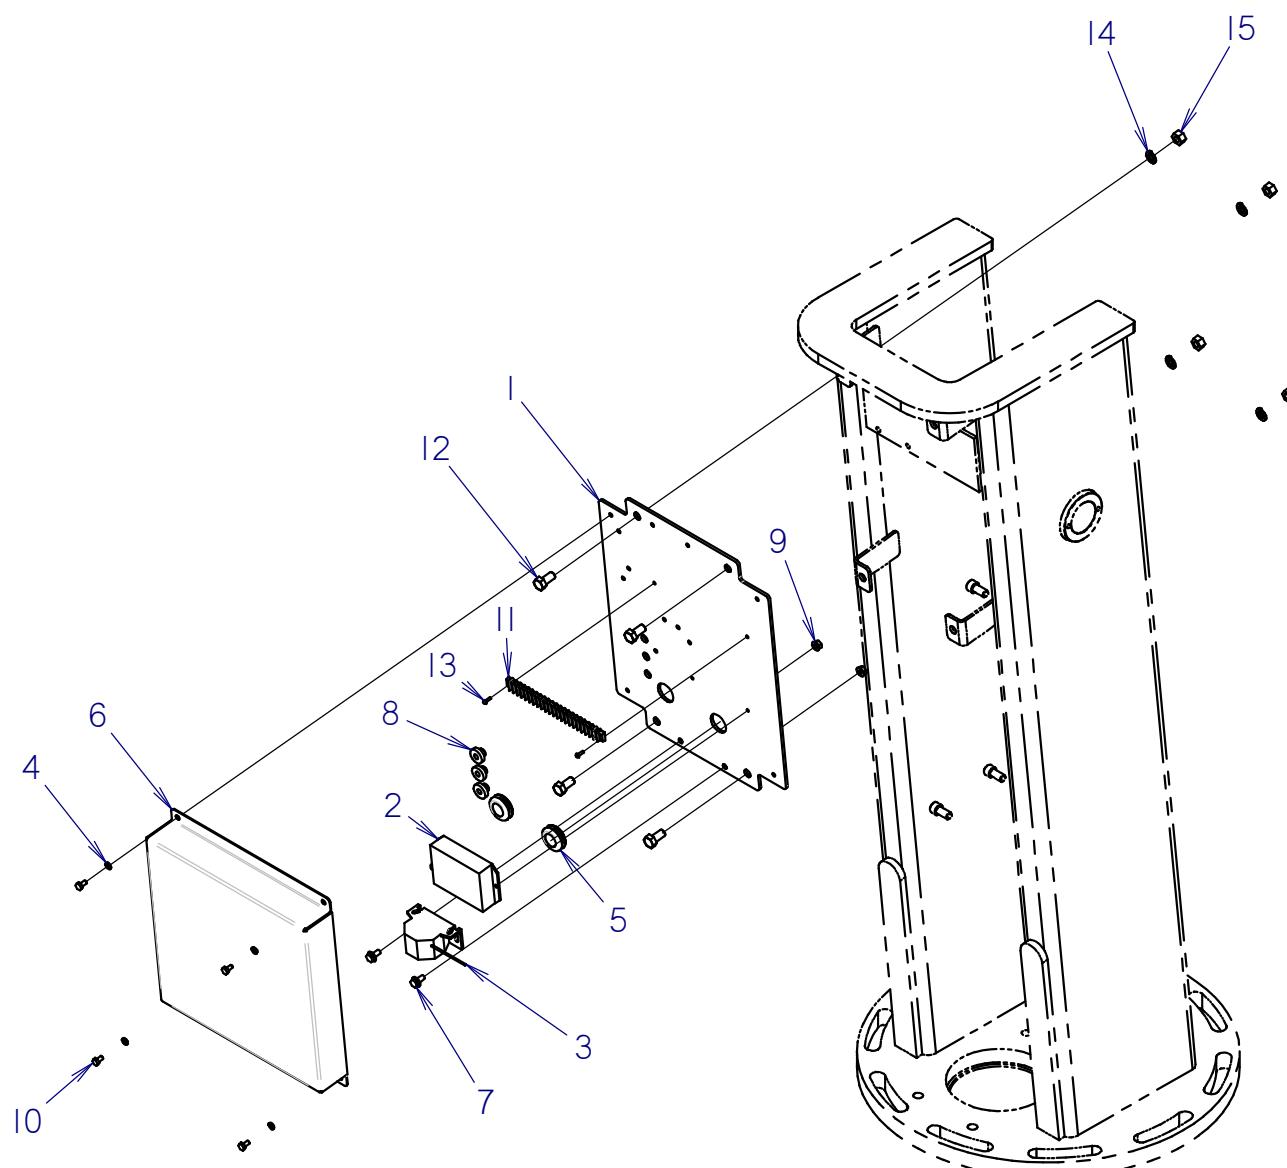

## ELECTRICAL COMPONENTS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	349-589	1	PROPORTIONAL MOUNT	
2	2I3-3I6	1	PROPORTIONAL AMPLIFIER	
3	2I4-4I6	1		
4	I05-079	4	LOCK WASHER (I/4)	
5	I15-355	2	GROMMET (I-3/8")	
6	329-592	1	COVER	
7	I06-380	2	FLG LK SCREW (M8-I.25 X 16MM)	
8	I16-325	3	GROMMET (.362")	
9	I06-386	2	FLG LOCKNUT (M8-I.25)	
I0	I05-I74	4	BOLT (I/4-NC X I/2")	
I1	2I3-3I4	1	TERMINAL BLOCK, 22 STA	
I2	I05-I2I	4	BOLT (I/2-NC X I")	
I3	I06-367	2	SCREW (#6-32 X I/2" PLPS SS)	
I4	I05-070	4	LOCK WASHER (I/2")	
I5	I05-02I	4	NUT(I/2-NC)	

NOT SHOWN:

FOOTNOTES:


NOTE:

## OVERLOAD ALERT

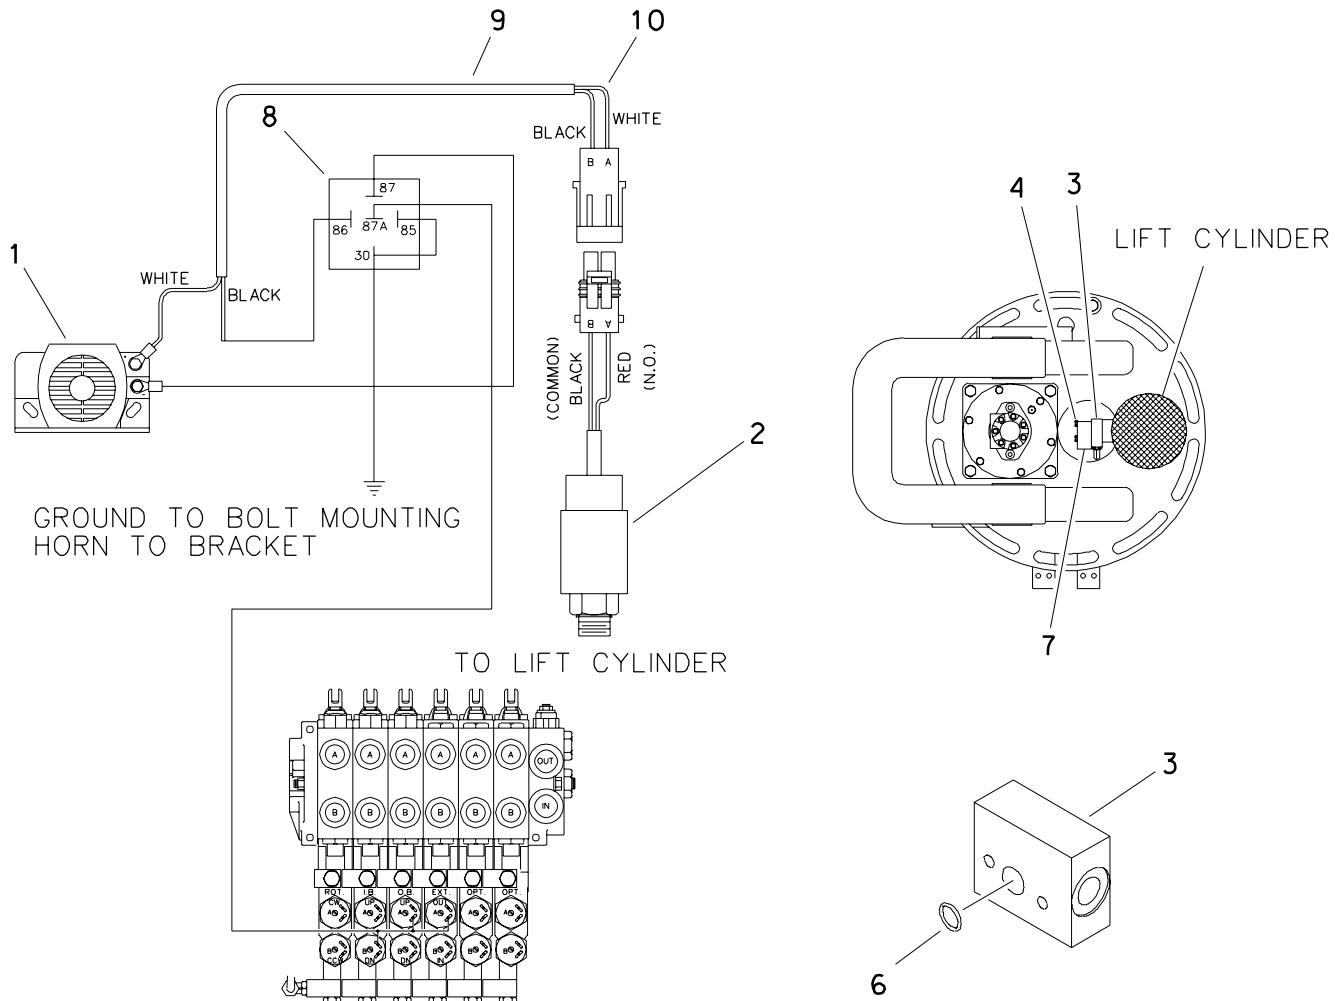


WIRE HARNESS & GROUNDS NOT USED IN OVERLOAD PROTECTION CIRCUIT REMOVED FOR CLARITY.

## WIRING DETAIL

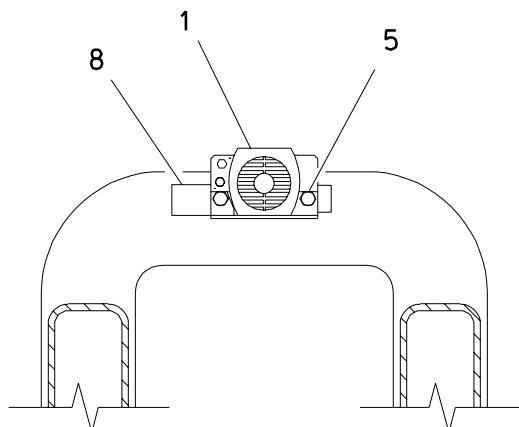

HORN MOUNTING DETAIL  
UNDERSIDE OF TOP OF PEDESTAL

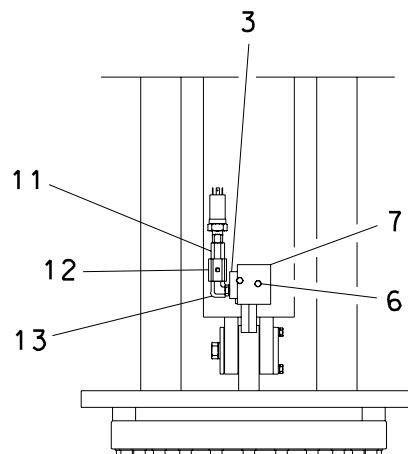

PRESSURE SWITCH DETAIL  
LIFT CYLINDER

# OVERLOAD ALERT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	306-610	-	HORN ALERT	CRANE
2.	217-943	-	PRESSURE SWITCH	CRANE
3.	516-111	-	VALVE, SENSE	CRANE
4.	105-224	-	BOLT (1/4-NC X 2-1/2")	
5.	105-197	-	BOLT (1/4-NC X 1")	
	105-152	-	NUT (1/4-NF)	
	105-095	-	WASHER (1/4")	
	105-079	-	LOCK WASHER (1/4")	
6.	157-743	-	O-RING SEAL	CRANE
7.	516-112	-	COUNTERBALANCE VALVE	
8.	217-944	-	RELAY, OVERLOAD	CRANE
9.	214-461	-	LOOM, (WIRE ASS'Y SLEEVE)	
10.	214-462	-	HORN ALERT WIRE	
11.	153-201	-	ADAPTER	
12.	153-202	-	ADJUSTABLE GAUGE SNUBBER	
13.	153-203	-	ELBOW	


## FOOTNOTES

REMOVE METAL TAB FROM HORN COVERING GROUND TO ISOLATE GROUND.

**NOTES:**

# ACCESSORIES

## FLUID MIXING ACCESSORIES

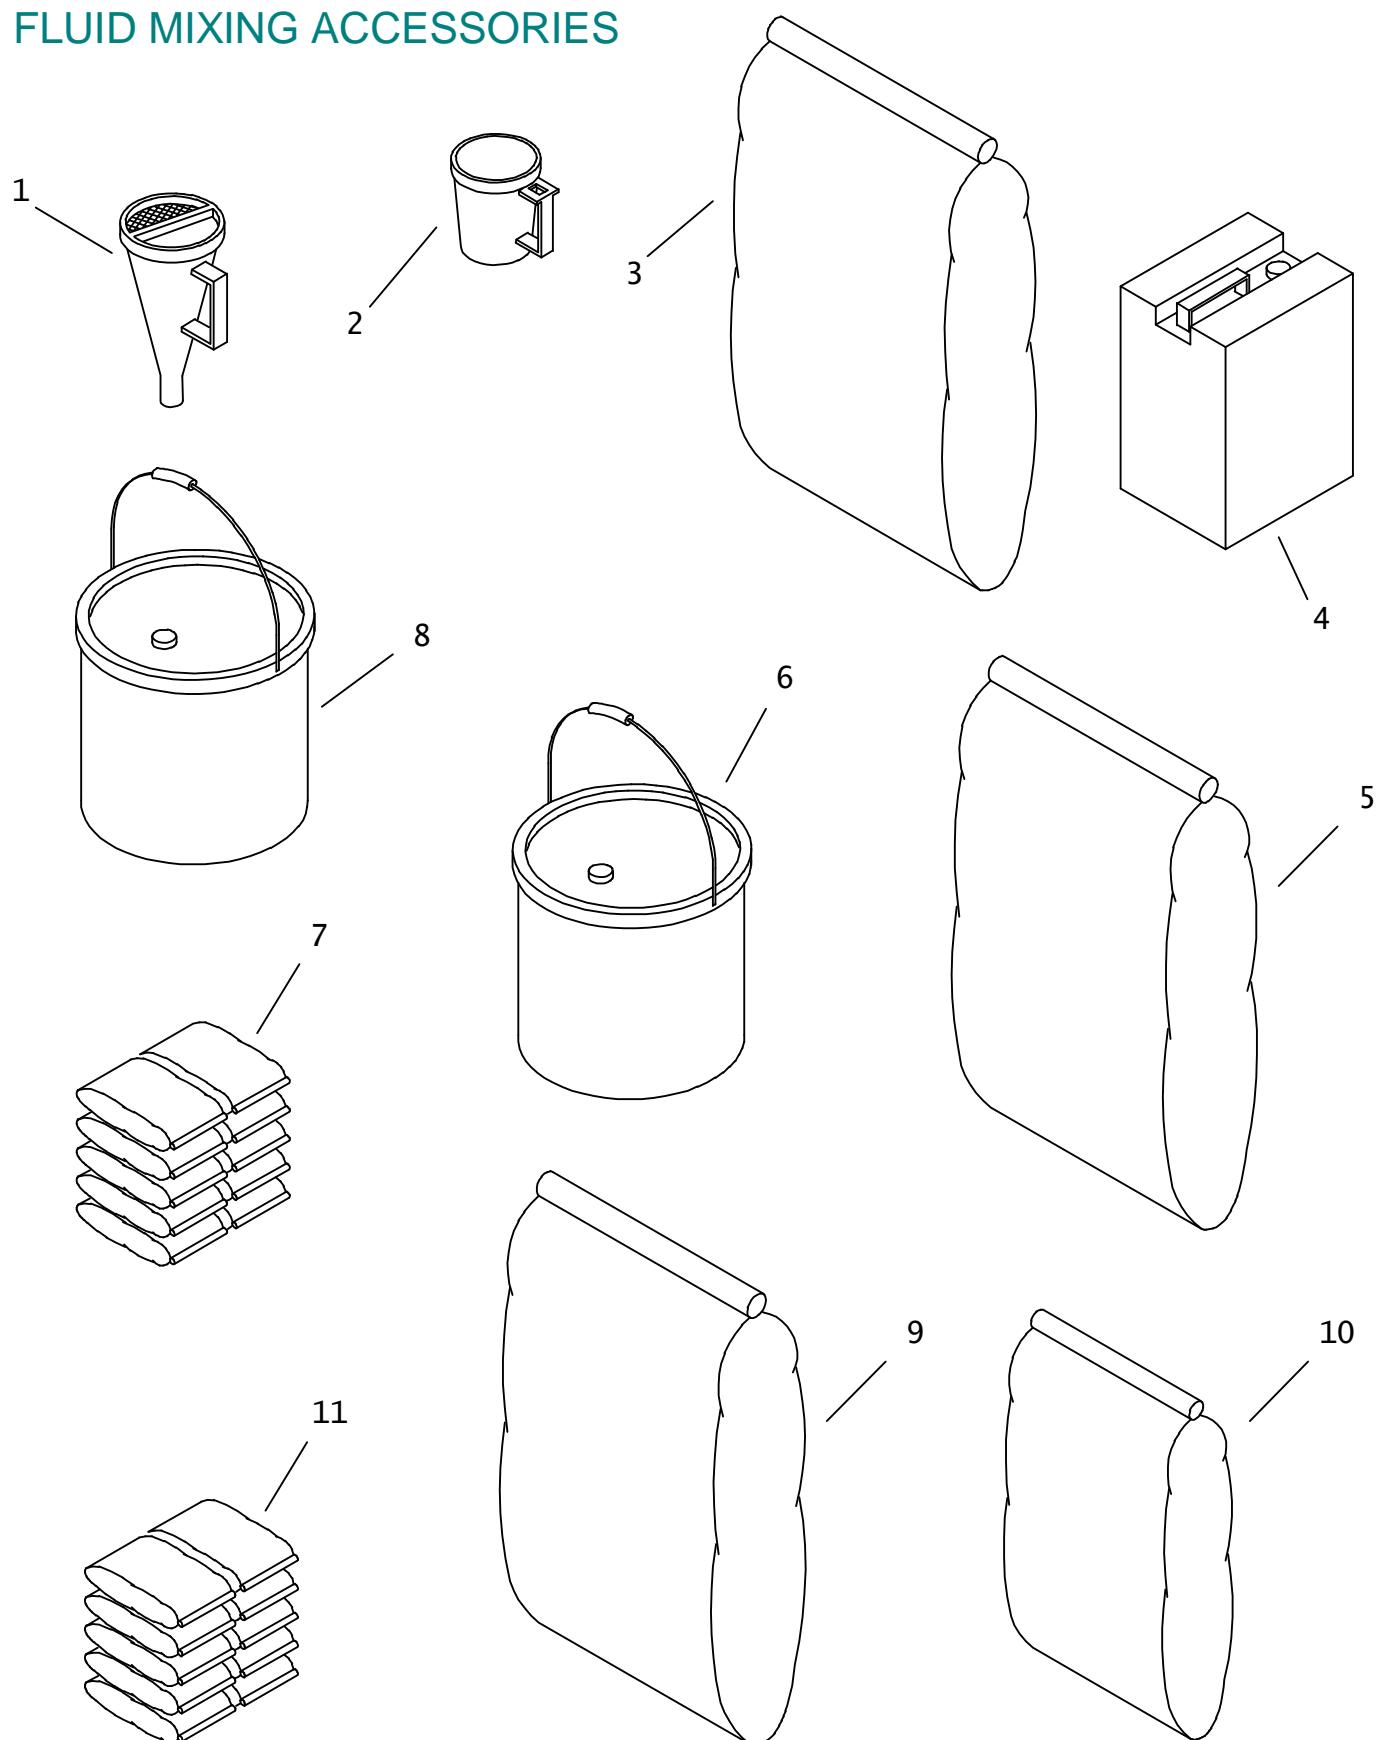

## FLUID MIXING ACCESSORIES

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	259-195	1	VISCOSITY FUNNEL	
2.	259-196	1	VISCOSITY CUP	
3.	259-804	AR	BENTONITE, QUIK-GEL (50 LB)	
4.	259-805	AR	LIQUID POLYMER, EZ-MUD (5 GAL)	
5.	259-807	AR	BENTONITE, BORE-GEL (50 LB)	
6.	259-808	AR	VISCOSIFIER, LIQUI-TROL (5 GAL)	
7.	259-809	AR	POWDER POLYMER, QUIK-TROL (20 LB)	
8.	259-810	AR	WET AGENT, CON-DET (5 GAL)	
9.	259-821	AR	'PAC-R' FILTRATION CONTROL	
10.	259-822	AR	'BARAZAN D+' VISCOSIFIER	
11.	259-832	AR	'NO SAG' (20# BOX/10-2#BAGS)	


NOT SHOWN:

191-158 1 DRILLING FLUID TEST KIT  
259-487 1 SHEAROMETER

FOOTNOTES:

NOTE:

## WIRELINE KIT (JT)

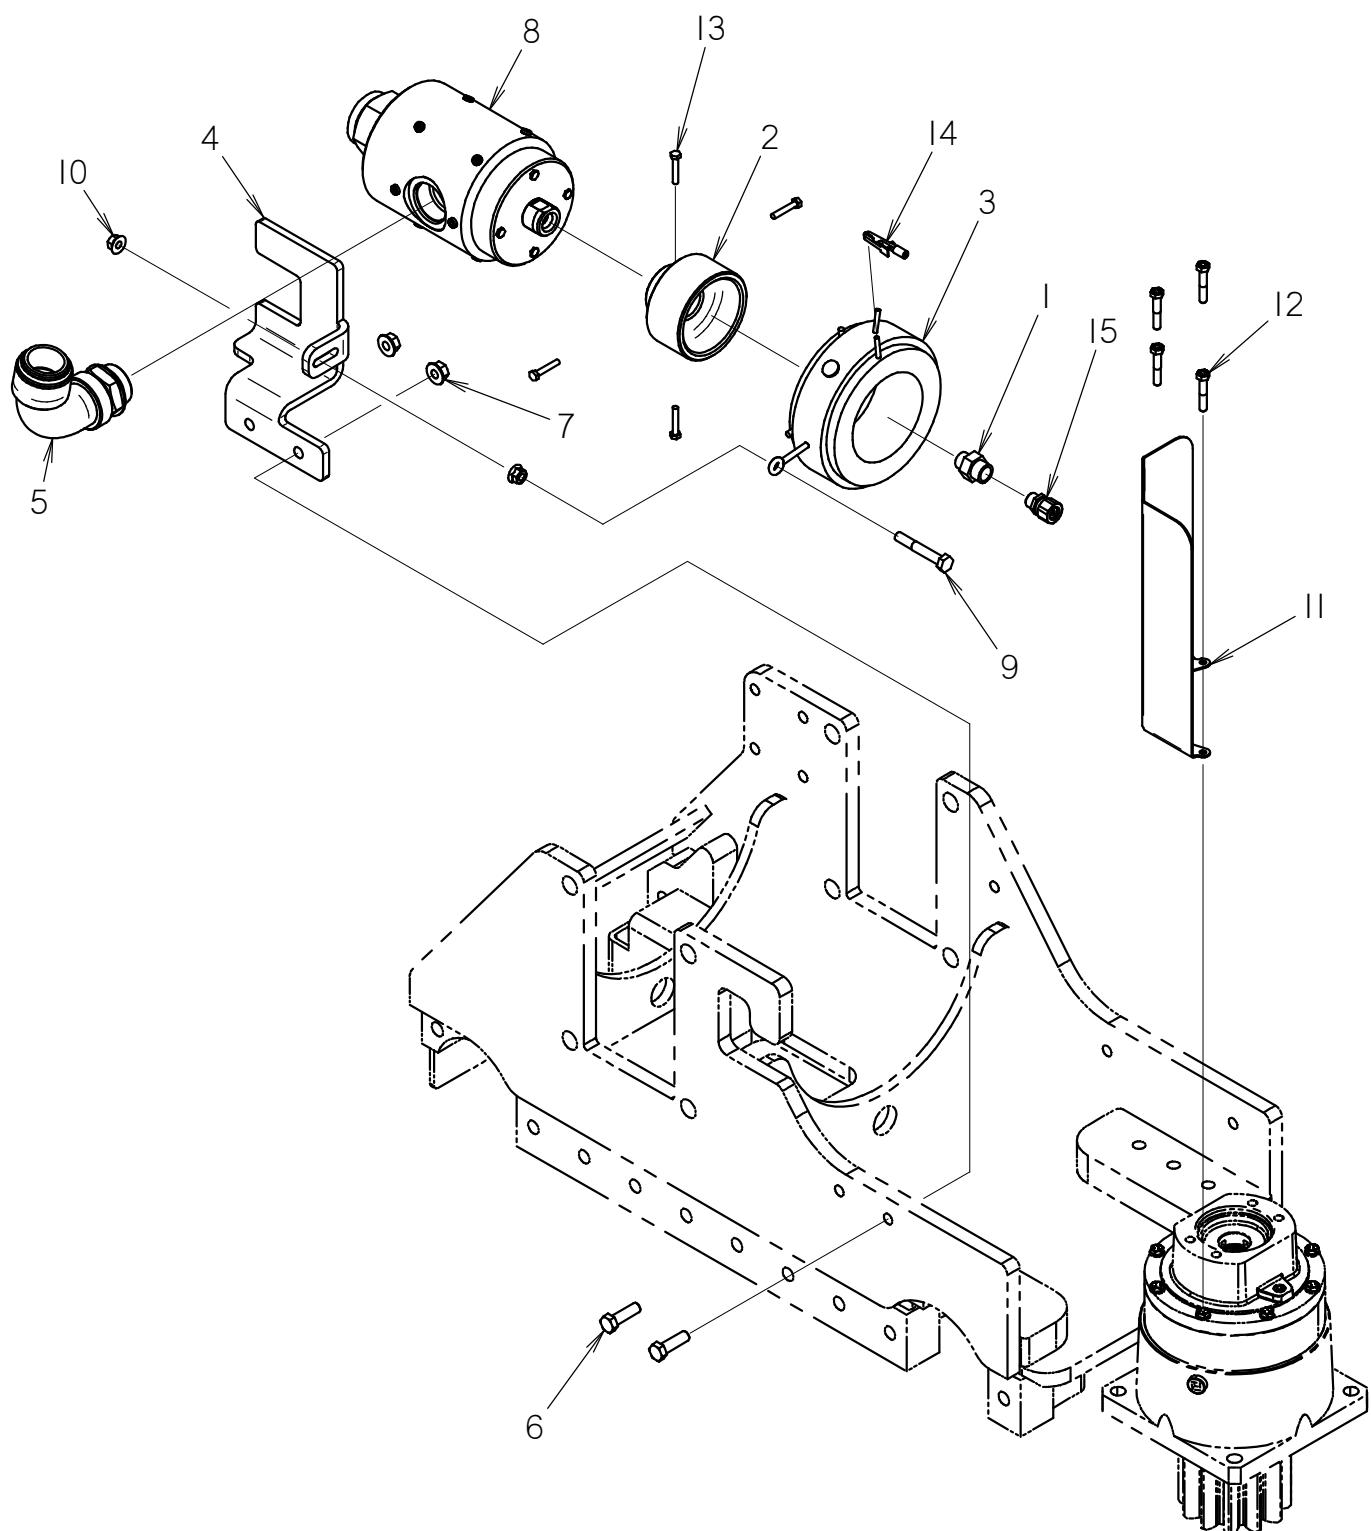

# WIRELINE KIT (JT)

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	115-156	1	REDUCER (08N-06NF)	
2	300-8709	1	COIL MOUNT	
3	214-548	1	COLLECTOR RING	
4	300-5431	1	SWIVEL TORQUE BRACKET	
5	150-2732	1	CONNECTOR (24S-32J90 SPECIAL)	
6	106-547	2	SCREW (M12-1.75 X 40MM,10.9)	
7	106-709	2	FLG LK NUT (M12-1.75)	
8	150-2670	1	WATER SWIVEL	USE SWIVEL SEAL KIT 500-2033
9	106-332	1	SCREW (M10-1.50 X 70MM)	
10	106-387	2	FLG LOCKNUT (M10-1.50)	
11	300-8211	1	HEAT SHIELD	
12	106-045	4	BOLT (5/16-NC X 1-3/4")	
13	105-688	4	SCREW (M6-1.00 X 35MM)	
14	105-693	1	ALLIGATOR CLIP .312" X 2.343"	
15	358-855	1	PACF-OFF FITTING	


NOT SHOWN:

KIT 190-1459 includes parts 1-3 & 9-15  
 Parts 4-8 are standard parts on unit.

FOOTNOTES:

NOTE:

WORK LIGHTS  
BEGINS WITH S/N: 2W0856

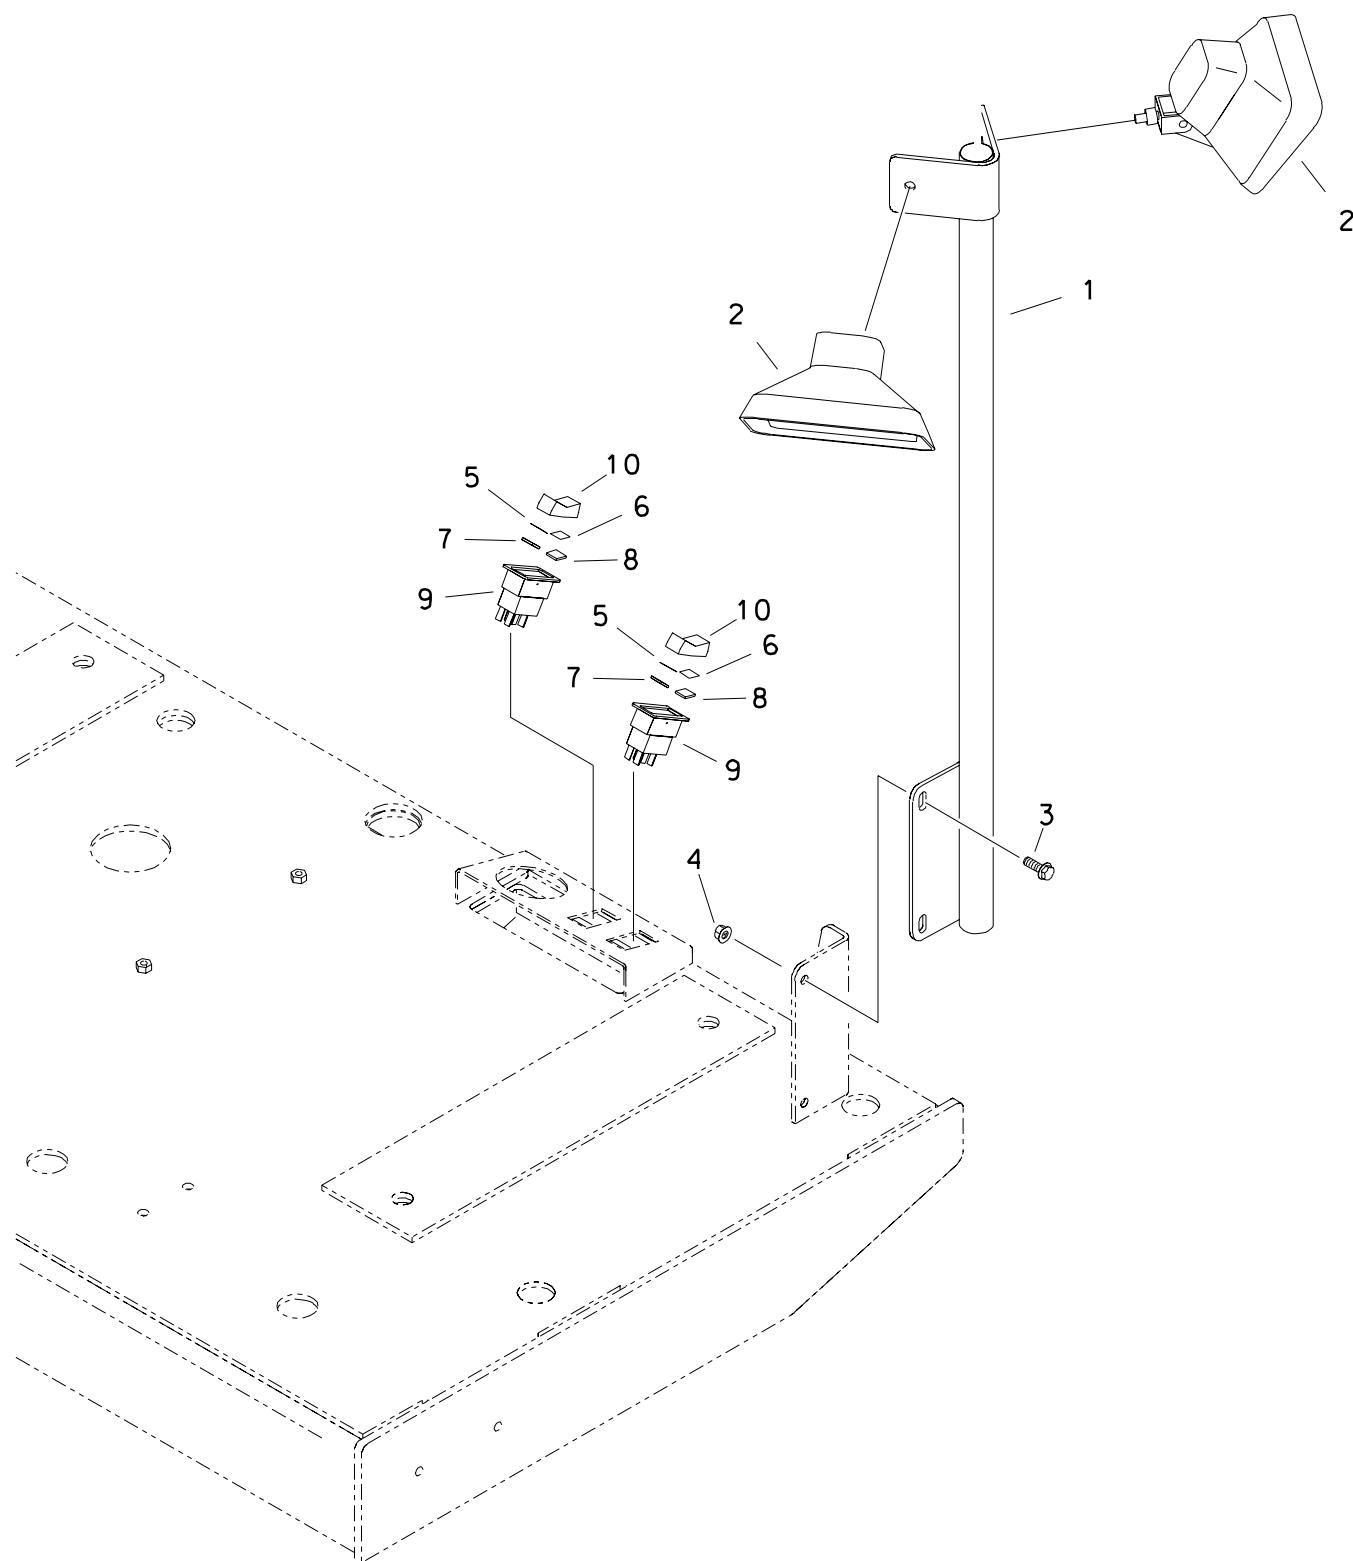

## WORK LIGHTS


BEGINS WITH S/N: 2W0856

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1.	305-924	1	SUPPORT, WORK LIGHT	
2.	217-057	2	WORKING LIGHT - CLEAR	
3.	106-991	2	FLG LK SCREW (M8-1.25 X 20MM)	
4.	106-386	2	FLG LOCKNUT (M8-1.25)	
5.	217-136	2	ICON (WHT) ON-START	
6.	217-137	2	ICON (WHT) OFF-STOP	
7.	217-156	2	DIFFUSION LENS (GREEN)	
8.	217-158	2	DIFFUSION LENS (WHITE)	
9.	217-918	2	ROCKER SW (DPDT) ON-ON	
10.	217-925	2	ROCKER SWITCH (ACTUATOR)	

FOOTNOTES

# PIPE BOX

JT100

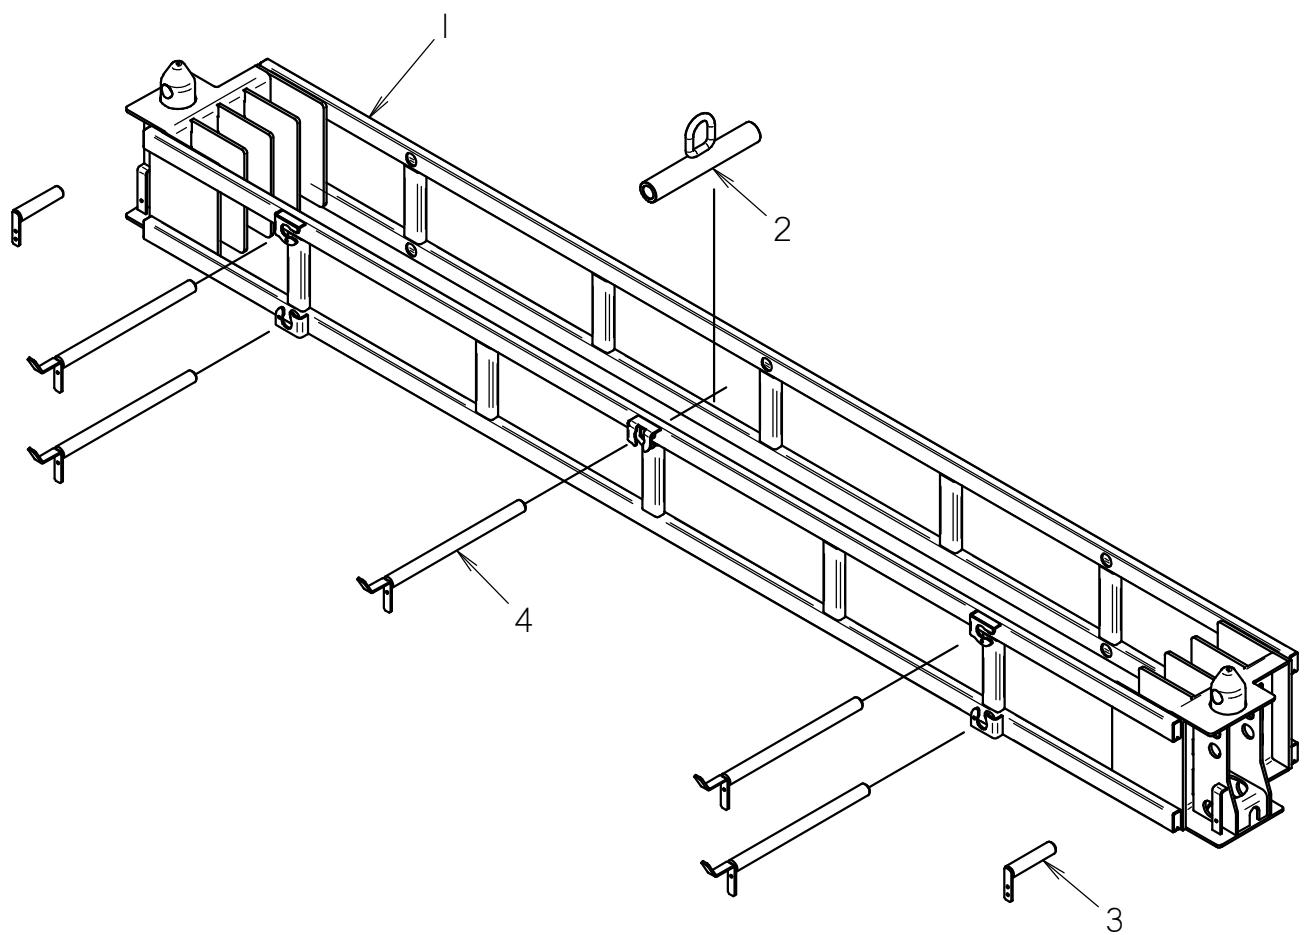

# PIPE BOX


## JT100

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	303-941	1	PIPE BOX ASS'Y	INCLUDES REF NO'S 1, 3 & 4
1	369-694	1	PIPE BOX	
2	348-091	1	PIPE BOX LIFT MOUNT	
3	303-943	2	PIN	
4	303-942	5	PIN	

NOT SHOWN:

FOOTNOTES:

NOTE:

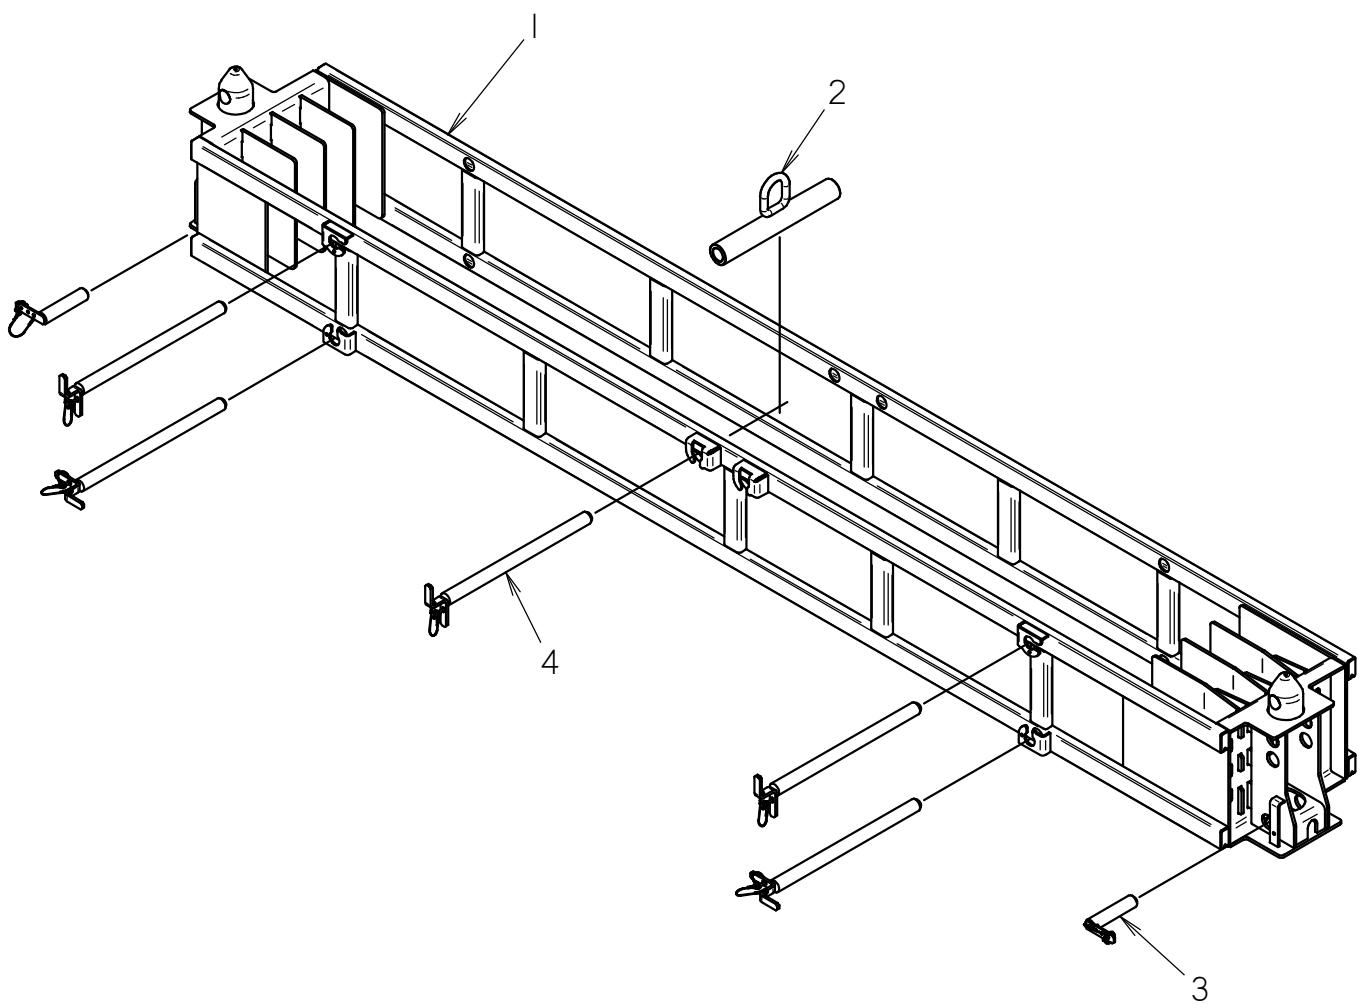**PIPE BOX  
AT100**

# PIPE BOX

AT100

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	190-1486	1	PIPE BOX ASS'Y	
1	301-1016	1	PIPE BOX	
2	301-1022	1	PIPE BOX LIFT MOUNT	
3	301-1461	2	PIN	
4	301-1462	5	PIPE BOX PIN	

NOT SHOWN:

FOOTNOTES:

NOTE:

**NOTES:**

# MISCELLANEOUS

ID0135063

# SAE Bolt and Nut Torque Value Chart

## Grade 5: UNC or UNF Thread

Size	Hex nut, or bolt tapped into hex nut, or d&t hole		Hex top deformed locknut		Flange nut, locknut, or bolt tapped into flange nut or d&t* hole	
	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m
1/4	12	16	8	11	20	27
5/16	25	34	15	20	45	60
3/8	40	54	25	34	75	100
7/16	65	90	40	55	125	170
1/2	100	135	60	80	190	260
9/16	150	200	90	125	270	370
5/8	200	270	120	165	370	500
3/4	350	475	210	285	650	880
7/8	560	760	340	460	1250	1425
1	840	1140	500	680	1580	2145
1-1/8	1030	1400	320	840	1950	3645
1-1/4	1460	1980	880	1195	2760	3475

## Grade 8: UNC or UNF Thread

Size	Hex nut, or bolt tapped into hex nut, or d&t hole		Hex top deformed locknut		Flange nut, locknut, or bolt tapped into flange nut or d&t* hole	
	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m
1/4	14	19	10	14	24	33
5/16	30	40	18	25	50	70
3/8	55	73	35	50	90	125
7/16	85	115	50	70	140	190
1/2	130	175	80	110	220	300
9/16	190	260	110	150	310	420
5/8	260	355	160	245	430	585
3/4	450	610	270	365	750	1015
7/8	730	990	440	600	1210	1640
1	1090	1480	650	880	1320	2465
1-1/8	1550	2100	930	1260	2580	3500
1-1/4	2180	2955	1310	1780	3640	4935

\*drilled and tapped

# Metric Bolt and Cap Screw Torque Values

Size	Class 4.8				Class 8.8 and 9.8				Class 10.9				Class 12.9			
	Lubricated		Dry		Lubricated		Dry		Lubricated		Dry		Lubricated		Dry	
	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	190
M16	100	73	125	92	190	140	240	175	275	200	350	225	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1600	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

Do not use these values if a different torque value or tightening procedure is given for specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class fasteners.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to strength of original.

Make sure fastener threads are clean and that the threads are properly started. This will prevent them from cross threading or galling when tightened.

Tighten plastic insert or crimped type steel locknuts to approximately 50% of dry torque indicated on chart. Apply torque to the nut - not the bolt head. Tighten toothed or serrated type locknuts to full torque value.

LUBRICATED means coated with lubricant. DRY means plain or zinc plated without any type of lubricant.

## Hydraulic Cylinder Bolt Torque Chart

Bolt Size (inch)	Bolt Part No.	Cylinder Repair Kit Part No.	Torque (ft•lb)	Torque (N•m)
1/2	106-096	190-165	90-100	120-135
5/8	106-097	190-166 & 190-169	180-200	245-270
3/4	106-098	190-167 & 190-170	290-325	395-440
7/8	106-122	190-172 & 190-174	410-640	550-625
1	106-145	190-175 & 190-189	630-700	855-950
1-1/8	106-146	190-177	770-850	1045-1170

As a general rule:

- 1/2-inch bolts are used in cylinders with 1-inch rods
- 5/8-inch bolts are used in cylinders with 1 1/4-inch rods
- 3/4-inch bolts are used in cylinders with 1 1/2-inch rods
- 7/8-inch bolts are used in cylinders with 1 3/4-inch rods
- 1-inch bolts are used in cylinders with 2-inch rods (one with 1 3/4-inch)
- 1-1/8-inch bolts are used in cylinders with 2-1/4-inch rods

**IMPORTANT:** Do not reuse cylinder piston bolts when rebuilding a hydraulic cylinder. Each cylinder repair kit contains a new bolt. Use it. Lubricate lightly and torque to value shown on chart.

# SAE & ORS Hydraulic Fitting Replacement O-Ring Chart

Fraction Size	Dash Size	SAE (Port Seal O-Ring)		ORS (Face Seal O-Ring)	
		Thread Size	O-Ring P/N	Thread Size	O-Ring P/N
1/16	1	NA	NA	NA	NA
1/8	2	5/16 - 24	NA	NA	NA
3/16	3	3/8 - 24	NA	NA	NA
1/4	4	7/16 - 20	155-760	9/16 - 18	157-037
5/16	5	1/2 - 20	NA	NA	NA
3/8	6	9/16 - 18	155-705	11/16 - 16	157-038
1/2	8	3/4 - 16	155-706	13/16 - 16	157-039
5/8	10	7/8 - 14	155-707	1 - 14	157-040
3/4	12	1-1/16 - 12	155-709	1-3/16 - 12	157-017
7/8	14	1-3/16 - 12	155-747	NA	NA
1	16	1-5/16 - 12	155-748	1-7/16 - 12	155-714
1-1/4	20	1-5/8 - 12	155-702	1-11/16 - 12	NA
1-1/2	24	1-7/8 - 12	157-001	2 - 12	NA
2	32	2-1/2 - 12	NA	NA	NA
2-1/2	40	3 - 12	NA	NA	NA
3	48	3-1/2 - 12	NA	NA	NA

Thread size indicates the diameter of the threaded area in fractions of an inch and number of threads per inch.

NA = not a current CMW part numbered o-ring, or dash size does not occur in current CMW applications

SAE = straight thread fitting that seals by sandwiching a hard o-ring between a shoulder on the male part and an angular surface at the mouth of the female port.

ORS = o-ring face seal; a type of fitting that seals by compressing a hard, captive o-ring between two flat parallel faces, one grooved for the o-ring and the other plain to act as the sealing surface

# JT100

## Related Publications

Component	Ass'y	P/N
<b>Model:</b>		
JT100 .....	Parts Manual .....	053-1232
JT100 .....	Operators Manual .....	053-1348
JT100 .....	Repair Guide (Service Manual) .....	XXX-XXX
JT100 .....	Technical Supplement .....	053-1352
JT100 .....	Special Tools Guide .....	052-901
<b>Engine:</b>		
Deutz .....	Operators Manual - TCD2013L062V .....	194-892 .....
Deutz .....	Problem Diagnosis Guide .....	050-555
Deutz .....	Sales & Service Directory .....	050-556

## Filters

<b>Engine:</b>	
Air Filter Parts Ass'y .....	194-672
Element (primary) .....	500-1086
Element (safety) .....	500-1087
Oil Filter Element (spin-on) - Deutz .....	500-1082
Fuel Filter Element (pre-filter, cartridge) - Deutz.....	500-1083
Element (primary, spin-on) - Deutz .....	500-1084
<b>Hydraulic:</b>	
Oil Filter Element (cartridge), Pall (HC9104FKS8H) - Charge .....	153-375
Element (1-1/2-UNF, spin-on, Replacement) .....	153-792
Element (1-1/2-UNF, spin-on, Break-In) .....	153-791
Oil Strainer (2-1/2-UN-20SF) .....	159-432
<b>Water {H2O}:</b>	
Water Strainer (2.250" x 7.0") - Y-Strainer .....	159-239
Strainer (4.000" x 9.0") - Y-Strainer .....	159-490

## Optional Kits

O-ring Repair Kit - FLG, ORS & SAE (15 different O-rings) .....	190-051
O-ring Repair Kit - Field Service (46 different O-rings) .....	190-052



**Ditch  
Witch®**

## ***Parts Manual Change Request***

(Please print clearly)

Date: \_\_\_\_\_

Dealer No. (required): \_\_\_\_\_

Your Name: \_\_\_\_\_

Position: \_\_\_\_\_

Phone: \_\_\_\_\_

Fax: \_\_\_\_\_

E-mail: \_\_\_\_\_

### **Publication Information:**

Parts Manual No.: \_\_\_\_\_ - \_\_\_\_\_

Model: \_\_\_\_\_

Illustration Part No.:

Manual Page No.:

- |                        |          |
|------------------------|----------|
| 1. _____ - _____ ..... | 1. _____ |
| 2. _____ - _____ ..... | 2. _____ |
| 3. _____ - _____ ..... | 3. _____ |

Nature of Change Request:

Text

Graphics

Missing Information

Describe change requested (*if possible, include copy of publication page with changes marked.*):

---



---



---



---



---



---



---

**Please fax completed form to  
Parts Manual Department (580) 572-3525**

*Thank you for taking the time to submit this request. We will contact you if further information is needed to process your request.*



## A Note To Ditch Witch Equipment Owners:

If your equipment was purchased through a Ditch Witch dealer, there is no need to read further.

However, if you purchased from any other source, please fill out the form on the reverse side and return it to us.

This will enable you to receive updates on this equipment as well as information on new products of interest.

Thanks for using Ditch Witch equipment.

(Please Fold Along This Line And Seal At Bottom With Tape)

.....




NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES

### BUSINESS REPLY MAIL

FIRST CLASS

PERMIT NO 23 PERRY OKLAHOMA

POSTAGE WILL BE PAID BY

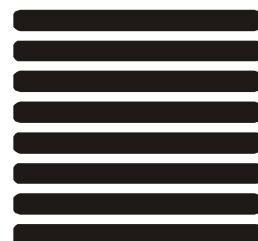

**The Charles Machine Works, Inc.  
P.O. Box 66  
Perry, Oklahoma 73077-9989**



ID0040564

# Ditch Witch® Registration Card

Please Type or Print All Information

Purchaser's Company Name

## Attention

Street Address or P.O. Box

### City

### County

## State

Zip

Nation

( )

## Phone Number With Area Code

## Model

### Serial Number

## Attachments/Accessories

## Serial Numbers

## Attachments/Accessories

## Serial Numbers

## Attachments/Accessories

## Serial Numbers

Name of Ditch Witch Dealership

Your Signature