

850JR Crawler Dozer Operation and Test

OPERATION & TEST TECHNICAL MANUAL

850JR MCT Crawler Dozer

TM10779 03MAY19 (ENGLISH)

**Worldwide Construction
And Forestry Division**
PRINTED IN U.S.A.

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine problems quickly.

Information is organized in groups for the various components requiring service instruction. At the

beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

TX,750C,YY977 -19-06APR95-1/1

Contents

Section 9000—General Information

Group 01—Safety

Section 9001—Diagnostic Trouble Codes (DTCs)

Group 10—CAN Monitor Unit (CMU) Diagnostic Trouble Codes

Group 20—Engine Control Unit (ECU) Diagnostic Trouble Codes

Group 30—Transmission Control Unit (TCU) Diagnostic Trouble Codes

Section 9005—Operational Checkout Procedure

Group 10—Operational Checkout Procedure

Section 9010—Engine

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Tests

Section 9015—Electrical System

Group 05—System Information

Group 10—System Diagrams

Group 15—Sub-System Diagnostics

Group 20—References

Section 9025—Hydraulic System

Group 05—Theory

Group 15—Diagnostic Information

Group 25—Tests

Section 9026—Hydrostatic System

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Tests

Section 9031—Heating and Air Conditioning

Group 05—Theory of Operation

Group 15—Diagnostic Information

Group 25—Tests

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2019
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2008, 2009, 2010, 2011, 2012, 2013, 2016, 2017, 2018

Section 9000 General Information

Contents

	Page
Group 01—Safety	
Recognize Safety Information	9000-01-1
Follow Safety Instructions.....	9000-01-1
Operate Only If Qualified	9000-01-1
Wear Protective Equipment.....	9000-01-2
Avoid Unauthorized Machine	
Modifications.....	9000-01-2
Inspect Machine	9000-01-2
Stay Clear of Moving Parts.....	9000-01-2
Avoid High-Pressure Fluids	9000-01-3
Avoid High-Pressure Oils	9000-01-3
Beware of Exhaust Fumes	9000-01-4
Prevent Fires	9000-01-4
Prevent Battery Explosions	9000-01-4
Handle Chemical Products Safely.....	9000-01-5
Dispose of Waste Properly	9000-01-5
Prepare for Emergencies.....	9000-01-5
Cab Guarding For Special Uses.....	9000-01-6
Use Steps and Handholds	
Correctly	9000-01-6
Start Only From Operator's Seat	9000-01-6
Use and Maintain Seat Belt	9000-01-6
Prevent Unintended Machine	
Movement.....	9000-01-7
Use Ground Guide.....	9000-01-7
Avoid Work Site Hazards.....	9000-01-7
Keep Riders Off Machine	9000-01-8
Avoid Backover Accidents	9000-01-8
Avoid Machine Tip Over and	
Machine Damage	9000-01-9
Add and Operate Attachments	
Safely.....	9000-01-9
Park and Prepare for Service	
Safely.....	9000-01-10
Service Cooling System Safely	9000-01-10
Remove Paint Before Welding or	
Heating	9000-01-10
Make Welding Repairs Safely	9000-01-11
Drive Metal Pins Safely	9000-01-11

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555 —UN—15APR13


T133588 —19—28AUG00

TX03679,00016CC -19-08JAN18-1/1

Follow Safety Instructions

Read the safety messages in this manual and on the machine. Follow these warnings and instructions carefully. Review them frequently. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Be sure all operators of this machine understand every safety message. Replace operator's manual and safety labels immediately if missing or damaged.

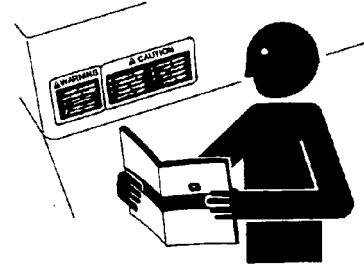

T133556 —UN—24AUG00

TX03679,00016F9 -19-14JAN08-1/1

Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.


TX03679,00016FA -19-03JAN07-1/1

Wear Protective Equipment

Guard against injury from flying pieces of metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

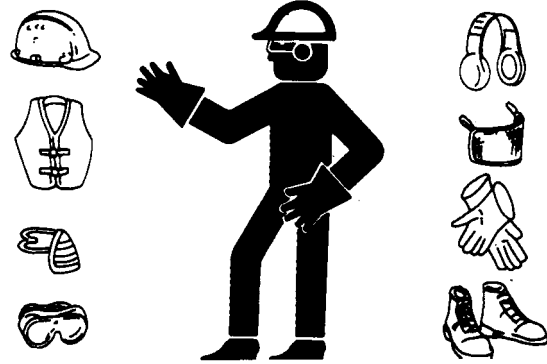

TS206—UN—15APR13

TX03679,00016D0 -19-05MAY10-1/1

Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere Parts, or any damage or failures resulting from their use are not covered by any John Deere warranty.

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or

reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact your supervisor before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

MB60223,000005E -19-09SEP08-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ—UN—15APR13


TX03679,0001734 -19-08JAN08-1/1

Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

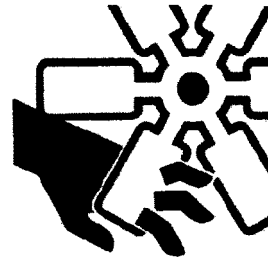

T133592—UN—15APR13

TX03679,00016D2 -19-08JAN08-1/1

Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.


Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar

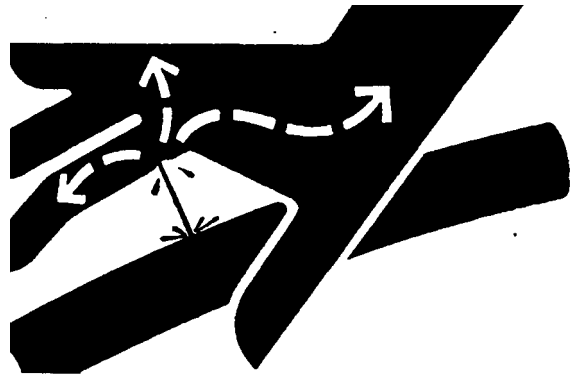

with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID -19-12OCT11-1/1


X9811 —UN—23AUG88

Avoid High-Pressure Oils

This carrier uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene may result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

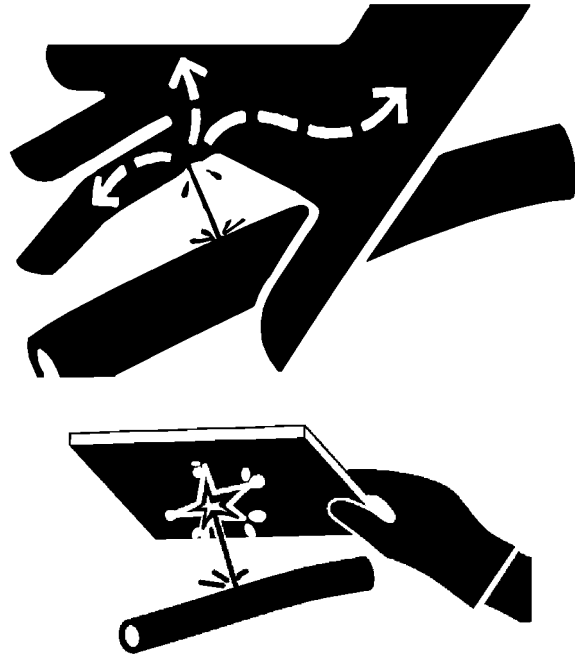

TX03679,00016D3 -19-16JUN08-1/1


T133509 —UN—15APR13

T133840 —UN—20SEP00

Beware of Exhaust Fumes

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in an enclosed space, provide adequate ventilation. Use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring outside air into the area.

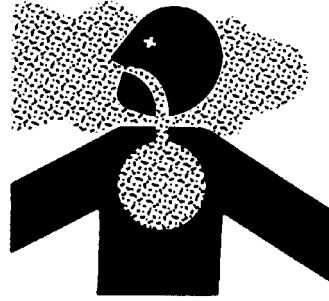

TX03679,00016D4 -19-23JUN08-1/1

T133546 —UN—24AUG00

Prevent Fires

Handle Fuel Safely: Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.


Clean Machine Regularly: Keep trash, debris, grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines, exhaust components and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

Maintain Hoses and Wiring: Replace hydraulic hoses immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.


Keep A Fire Extinguisher Available: Always keep a multi-purpose fire extinguisher on or near the machine. Know how to use extinguisher properly.



T133553 —UN—07SEP00

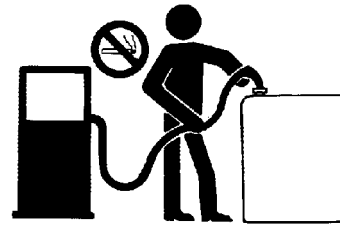

T133554 —UN—07SEP00

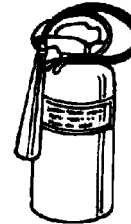

TX03679,00016F5 -19-26JUN09-1/1

T133552 —UN—15APR13

Prevent Battery Explosions

Battery gas can explode. Keep sparks, lighted matches, and open flame away from the top of battery.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TX03679,000174A -19-08JAN08-1/1

TS204 —UN—15APR13

Handle Chemical Products Safely

Exposure to hazardous chemicals can cause serious injury. Under certain conditions, lubricants, coolants, paints and adhesives used with this machine may be hazardous.

If uncertain about safe handling or use of these chemical products, contact your authorized dealer for a Material Safety Data Sheet (MSDS) or go to internet website <http://www.jdmsds.com>. The MSDS describes physical and health hazards, safe use procedures, and emergency response techniques for chemical substances. Follow MSDS recommendations to handle chemical products safely.



T133580 —UN—25AUG00

TX03679,00016D7 -19-03JAN07-1/1


Dispose of Waste Properly

Improper disposal of waste can threaten the environment. Fuel, oils, coolants, filters and batteries used with this machine may be harmful if not disposed of properly.

Never pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants can damage the atmosphere. Government regulations may require using a certified service center to recover and recycle used refrigerants.

If uncertain about the safe disposal of waste, contact your local environmental or recycling center or your authorized dealer for more information.

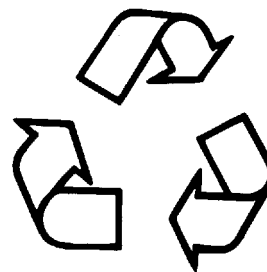

T133567 —UN—25AUG00


TX03679,0001733 -19-08JAN08-1/1

Prepare for Emergencies

Be prepared if an emergency occurs or a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

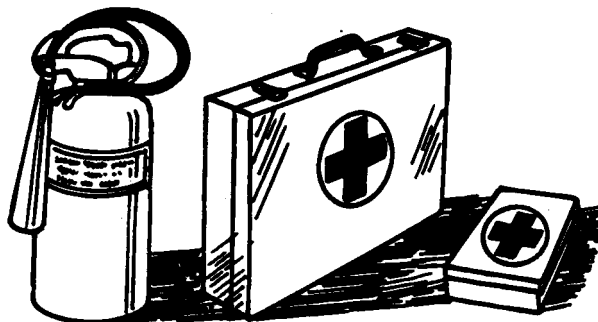


TS291 —UN—15APR13

TX03679,000174B -19-08JAN08-1/1

Cab Guarding For Special Uses

Special work situations or machine attachments may expose the operator to intruding or flying objects. Using this machine in a forestry application or woods environment, or with attachments such as a winch, requires added guarding to protect the operator.

Forestry protection packages or special screens should be installed when working in areas where logs or branches may strike the operator. A rear screen should always be used with a winch to protect against a snapping cable. Contact your authorized dealer for information on protective guarding before operating in any hazardous environment.

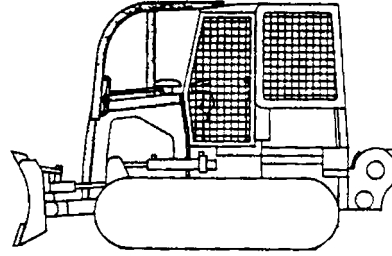


T139005—UN—05MAR01

MB60223,000004F -19-02MAY08-1/1

Use Steps and Handholds Correctly

Prevent falls by facing the machine when you get on and off. Maintain 3-point contact with steps and handrails. Never use machine controls as handholds.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

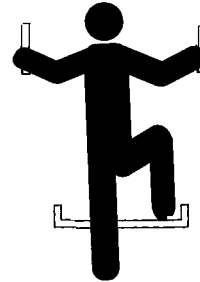

T133468—UN—15APR13

TX03679,00016F2 -19-12FEB07-1/1

Start Only From Operator's Seat

Avoid unexpected machine movement. Start engine only while sitting in operator's seat. Ensure all controls and working tools are in proper position for a parked machine.

Never attempt to start engine from the ground. Do not attempt to start engine by shorting across the starter solenoid terminals.



T133715—UN—15APR13

TX03679,0001799 -19-22APR10-1/1

Use and Maintain Seat Belt

Use seat belt when operating machine. Remember to fasten seat belt when loading and unloading from trucks and during other uses.

Examine seat belt frequently. Be sure webbing is not cut or torn. Replace seat belt immediately if any part is damaged or does not function properly.

The complete seat belt assembly should be replaced every three years, regardless of appearance.



**USE
SEAT
BELT**


T133716—19—17APR13

TX03679,00016DD -19-19MAR07-1/1

Prevent Unintended Machine Movement

Always move the park lock lever to the up (locked) position before leaving the operator's seat for any reason.

Be careful not to accidentally actuate controls when coworkers are present. Engage park lock and lower work equipment to the ground during work interruptions. Stop the engine before allowing anyone to approach the machine. Follow these same precautions before standing up, leaving the operator's seat, or exiting the machine.

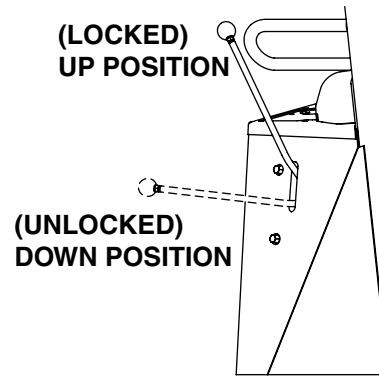

TX03768,0000B72 -19-23NOV10-1/1

T207688 —19—31JAN05

Use Ground Guide

Always use a ground guide when driving the machine in congested areas and up and down ramps in preparation for highway, marine, or air transport. Ground guide must

be familiar with the use of recognized and standardized hand signals. Failure to use a ground guide can result in an accident, causing injury or death to personnel or damage to equipment.

DP99999,00003BA -19-06MAR08-1/1

Avoid Work Site Hazards

Avoid contact with gas lines, buried cables, and water lines. Call utility line location services to identify all underground utilities before starting work.

Prepare work site properly. Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.


Avoid boom or attachment contact with overhead obstacles or overhead electrical lines. Never move machine closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.

Keep bystanders clear at all times. Keep bystanders away from raised booms, attachments, and unsupported loads. Avoid swinging or raising booms, attachments, or loads over or near personnel. Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.


Operate only on solid footing with strength sufficient to support machine. Be especially alert working near embankments or excavations.

Avoid working under over-hanging embankments or stockpiles that could collapse under or on machine.

Reduce machine speed when operating with tool on or near ground when obstacles may be hidden (e.g., during snow removal or clearing mud, dirt, etc.). At high speeds,

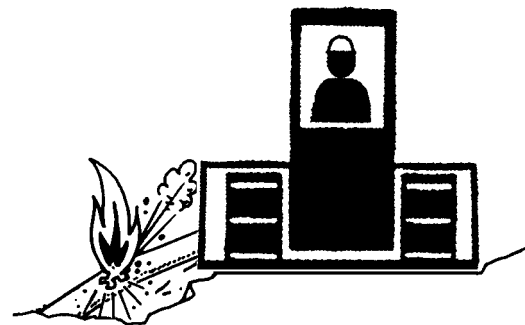

Contact With Gas Line

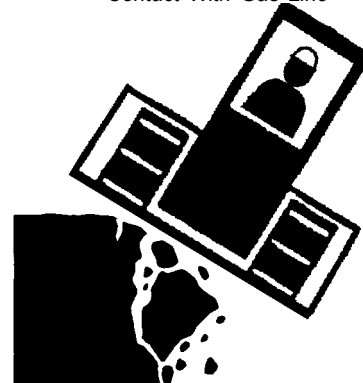

Only on Solid Footing

hitting obstacles (rocks, uneven concrete, or manholes) can cause a sudden stop. Always wear your seat belt.

VD76477,000135C -19-07AUG15-1/1

T139002 —UN—05MAR01


T139003 —UN—05MAR01

Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator's view or impair the operator's ability to operate machine safely.

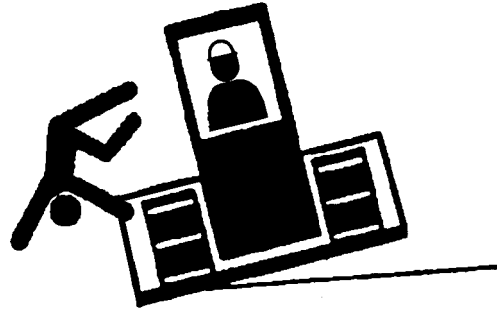

Keep Riders Off Machine

T137680 —UN—22FEB01

TX03768,0000B73 -19-03JUN15-1/1

Avoid Backover Accidents

Before moving machine, be sure all persons are clear of the machine path. Turn around and look directly for best visibility. Use mirror to assist in checking behind the machine. Keep windows and mirror clean and in good repair.

Be certain backup warning alarm is working properly.

Use a ground guide when backing if view is obstructed or when in close quarters. Keep ground guide in view at all times. Use prearranged hand signals to communicate.



T138441 —UN—22FEB01

MB60223,0000097 -19-29SEP08-1/1

Avoid Machine Tip Over and Machine Damage

Use seat belt at all times.

Do not jump if the machine tips. You will be unlikely to jump clear and the machine may crush you.

Load and unload from trucks or trailers carefully. Be sure truck is wide enough and secured on a firm level surface. Use loading ramps and attach them properly to truck bed. Avoid trucks with steel beds because tracks slip more easily on steel.


Be careful on slopes. Use extra care on soft, rocky, or frozen ground because machine may slip sideways in these conditions. When traveling up or down steep slopes, keep the bucket or blade on uphill side and just above ground level.

Ensure solid footing. Use extra care when operating on stockpile materials, or near banks or excavations that may cave-in and cause machine to tip or fall.

Avoid machine damage on slopes. Use extra care to operate machine.



**USE
SEAT
BELT**

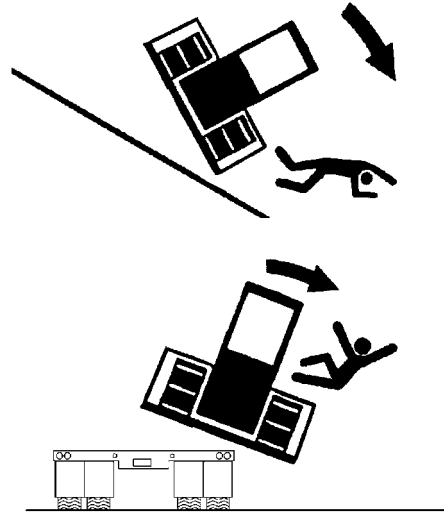

AM40430,00000B7 -19-12FEB07-1/1

T133716 —19—17APR13

T138416 —UN—22FEB01

T138415 —UN—22FEB01

Add and Operate Attachments Safely

Always verify compatibility of attachments by contacting your authorized dealer. Adding unapproved attachments may affect machine stability or reliability and may create a hazard for others near the machine.

Ensure that a qualified person is involved in attachment installation. Add guards to machine if operator protection

is required or recommended. Verify that all connections are secure and attachment responds properly to controls.

Carefully read attachment manual and follow all instructions and warnings. In an area free of bystanders and obstructions, carefully operate attachment to learn its characteristics and range of motion.

TX03679,00016F0 -19-12FEB07-1/1

Park and Prepare for Service Safely



Warn others of service work. Always park and prepare your machine for service or repair properly.

- Park machine on a level surface and lower blade and attachments to the ground.
- Place park lock lever in “up” (locked) position and stop engine.
- Attach a “Do Not Operate” tag in an obvious place in the operator’s station.

Securely support machine or attachment before working under it.

- Do not support machine with blade or attachments.
- Do not support machine with cinder blocks or wooden pieces that may crumble or crush.
- Do not support machine with a single jack or other devices that may slip out of place.

Understand service procedures before beginning repairs. Keep service area clean and dry. Use two people whenever the engine must be running for service work.

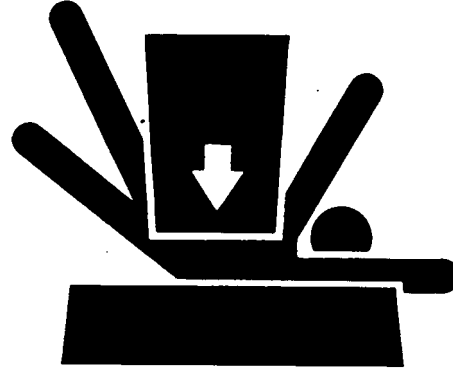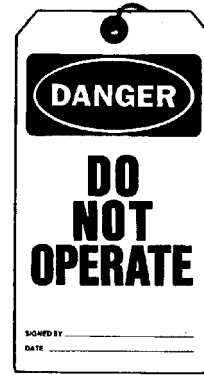

MB60223,0000098 -19-29SEP08-1/1

T133332 —19—17APR13

TS229 —UN—23AUG88

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Do not service radiator through the radiator cap. Only fill through the surge tank filler cap. Shut off engine. Only remove surge tank filler cap when cool enough to touch with bare hands. Slowly loosen cap to relieve pressure before removing completely.



TX,SURGE -19-19JAN11-1/1


TS281 —UN—15APR13

Remove Paint Before Welding or Heating

Hazardous fumes can be generated when paint is heated by welding or using a torch. Dust from sanding or grinding paint can also be hazardous.

Remove paint to at least 76 mm (3 in.) from area to be heated. Wear an approved respirator when sanding or grinding paint. If a solvent or paint stripper is used, wash area with soap and water. Remove solvent or paint stripper containers from work area, and allow fumes to disperse at least 15 minutes before welding or heating.

Work outside or in a well-ventilated area. Dispose of waste, paint, and solvents properly.

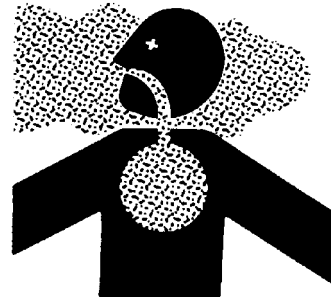

TX03679,0001732 -19-29AUG07-1/1

T133546 —UN—24AUG00

Make Welding Repairs Safely

IMPORTANT: Disable electrical power before welding. Turn off main battery switch or disconnect positive battery cable. Separate harness connectors to engine and vehicle microprocessors.

Avoid welding or heating near pressurized fluid lines. Flammable spray may result and cause severe burns if pressurized lines fail as a result of heating. Do not let heat go beyond work area to nearby pressurized lines.

Remove paint properly. Do not inhale paint dust or fumes. Use a qualified welding technician for structural repairs.



Make sure there is good ventilation. Wear eye protection and protective equipment when welding.


TX03679,00016D5 -19-11SEP09-1/1

T133547 —UN—15APR13

Drive Metal Pins Safely

Always wear protective goggles or safety glasses and other protective equipment before striking hardened parts. Hammering hardened metal parts such as pins and bucket teeth may dislodge chips at high velocity.

Use a soft hammer or a brass bar between hammer and object to prevent chipping.

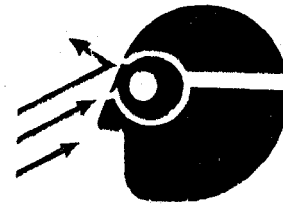

Hardened Metal Parts

OOU1065,0000090 -19-06JAN16-1/1

T133738 —UN—15APR13

Section 9001

Diagnostic Trouble Codes (DTCs)

Contents

	Page
Group 10—CAN Monitor Unit (CMU)	
Diagnostic Trouble Codes	
CAN Monitor Unit (CMU)	
Diagnostic Trouble Codes	9001-10-1
96.03 — Fuel Level Sensor Open or Short.....	9001-10-1
96.04 — Fuel Level Sensor Short to Ground	9001-10-1
107.03 — Engine Air Filter Restriction Indicator Switch Short to Power	9001-10-1
107.04 — Engine Air Filter Restricted	9001-10-2
177.03 — Transmission Oil Temperature Sensor Short to Power	9001-10-2
177.04 — Transmission Oil Temperature Sensor Short to Ground	9001-10-2
177.16 — Transmission Oil Temperature High.....	9001-10-2
Transmission Oil Temperature High	9001-10-3
609.09 — CAN Communication Error, No TCU Message.....	9001-10-3
1638.00 — Hydraulic Oil Temperature High.....	9001-10-3
1638.03 — Hydraulic Oil Temperature Short to Power	9001-10-3
1638.04 — Hydraulic Oil Temperature Short to Ground.....	9001-10-4
1713.31 — Hydraulic Oil Filter Restricted	9001-10-4
Hydraulic Oil Filter Restricted Diagnostic Procedure.....	9001-10-4
1857.03 — Winch Oil Pressure Sensor Short to Power	9001-10-6
1857.04 — Winch Oil Pressure Low.....	9001-10-6
2000.09 — CAN Communication Error, No ECU Configuration.....	9001-10-7
3359.31 — Transmission Oil Filter Restricted	9001-10-7
Transmission Oil Filter Restricted Diagnostic Procedure.....	9001-10-7
524227.31 — Fan Oil Filter Restricted	9001-10-9
Fan Oil Filter Restricted Diagnostic Procedure.....	9001-10-9

	Page
Group 20—Engine Control Unit (ECU)	
Diagnostic Trouble Codes	
Engine Control Unit (ECU)	
Diagnostic Trouble Codes	9001-20-1
Group 30—Transmission Control Unit (TCU)	
Diagnostic Trouble Codes	
Transmission Control Unit (TCU)	
Diagnostic Trouble Codes	9001-30-1
70.00 — Park Lock Lever Inputs Both ON.....	9001-30-1
70.01 — Park Lock Lever Inputs Both OFF	9001-30-2
91.00 — Throttle Sensor Input Greater Than Maximum Calibration Value	9001-30-3
91.01 — Throttle Sensor Input Less Than Minimum Calibration Value	9001-30-4
91.03 — Throttle Sensor Short to Power	9001-30-4
91.04 — Throttle Sensor Open or Short.....	9001-30-5
91.15 — Throttle Sensor Minimum Calibration Value Too High	9001-30-5
91.16 — Throttle Sensor Maximum Calibration Value Too High	9001-30-6
91.17 — Throttle Sensor Minimum Calibration Value Too Low	9001-30-6
91.18 — Throttle Sensor Maximum Calibration Value Too Low	9001-30-7
116.00 — Brake Pressure High	9001-30-7
Brake Pressure High Diagnostic Procedure.....	9001-30-7
116.01 — Brake Pressure Low.....	9001-30-8
Brake Pressure Low Diagnostic Procedure.....	9001-30-8
116.03 — Brake Pressure Short to Power	9001-30-9
116.04 — Brake Pressure Open or Short.....	9001-30-10
158.03 — TCU System Volts Too High.....	9001-30-10
158.04 — TCU System Volts Too Low.....	9001-30-10
177.00 — Transmission Over Temp	9001-30-11
190.09 — CAN Communication Error No Engine Speed	9001-30-11

Continued on next page

Page	Page
190.19 — CAN Communication Error Invalid Engine Speed9001-30-11	604.17 — FNR Neutral Switch Minimum Calibration Value Too Low.....9001-30-29
521.00 — Decel Sensor Input Greater Than Maximum Calibration Value9001-30-12	604.18 — FNR Neutral Switch Maximum Calibration Value Too Low.....9001-30-29
521.01 — Decel Sensor Input Less Than Minimum Calibration Value9001-30-12	619.05 — Brake Solenoid No Response9001-30-30
521.03 — Decel Sensor Short to Power.....9001-30-13	620.03 — TCU 5V Supply Short to Power9001-30-31
521.04 — Decel Sensor Open or Short.....9001-30-14	620.04 — TCU 5V Supply Open or Short.....9001-30-33
521.05 — Decel Sensor Brake Calibration Value Too Low.....9001-30-15	907.03 — Left Speed Sensor Short to Power9001-30-35
521.06 — Decel Sensor Brake Calibration Value Too High.....9001-30-15	907.04 — Left Speed Sensor Short.....9001-30-35
521.15 — Decel Sensor Minimum Calibration Value Too High.....9001-30-16	907.07 — Left Speed Sensor No Response9001-30-36
521.16 — Decel Sensor Maximum Calibration Value Too Low.....9001-30-16	907.12 — Left Speed Sensor Open9001-30-36
521.17 — Decel Sensor Minimum Calibration Value Too Low.....9001-30-17	908.03 — Right Speed Sensor Short to Power9001-30-37
521.18 — Decel Sensor Maximum Calibration Value Too Low.....9001-30-17	908.04 — Right Speed Sensor Short.....9001-30-37
581.00 — Speed Buttons Input Greater Than Maximum Calibration Value9001-30-17	908.07 — Right Speed Sensor No Response9001-30-38
Transmission Speed Control Sensor Input Greater Than Maximum Calibration Value Diagnostic Procedure.....9001-30-18	908.12 — Right Speed Sensor Open9001-30-38
581.01 — Speed Buttons Input Less Than Minimum Calibration Value9001-30-19	977.05 — Fan Reverse Solenoid No Response9001-30-39
581.03 — Speed Buttons Short to Power.....9001-30-20	1071.05 — Fan Drive Solenoid Open Circuit.....9001-30-39
581.04 — Speed Buttons Open or Short.....9001-30-21	1071.06 — Fan Drive Solenoid Short Circuit.....9001-30-40
581.15 — Speed Buttons Minimum Calibration Value Too High.....9001-30-22	2660.00 — Steer Sensor Input Greater Than Maximum Calibration Value9001-30-40
581.16 — Speed Buttons Maximum Calibration Value Too High.....9001-30-23	2660.01 — Steer Sensor Input Less Than Minimum Calibration Value9001-30-41
581.17 — Speed Buttons Minimum Calibration Value Too Low.....9001-30-24	2660.03 — Steer Sensor Short to Power9001-30-42
581.18 — Speed Buttons Maximum Calibration Value Too Low.....9001-30-25	2660.04 — Steer Sensor Open or Short.....9001-30-43
604.03 — FNR Neutral Switch Open Circuit.....9001-30-26	2660.15 — Steer Sensor Minimum Calibration Value Too High.....9001-30-44
604.04 — FNR Neutral Switch Short Circuit.....9001-30-27	2660.16 — Steer Sensor Maximum Calibration Value Too Low.....9001-30-44
604.15 — FNR Neutral Switch Minimum Calibration Value Too High.....9001-30-28	2660.17 — Steer Sensor Minimum Calibration Value Too Low.....9001-30-45
604.16 — FNR Neutral Switch Maximum Calibration Value Too High.....9001-30-28	2660.18 — Steer Sensor Maximum Calibration Value Too Low.....9001-30-45
	2661.00 — FNR Sensor Input Greater Than Maximum Calibration Value9001-30-46
	2661.01 — FNR Sensor Input Less Than Minimum Calibration Value9001-30-46

Continued on next page

Page	Page
2661.03 — FNR Sensor Short to Power.....9001-30-47	522448.15 — Right Reverse Pump Threshold Calibration Value Too High.....9001-30-63
2661.04 — FNR Sensor Open or Short.....9001-30-48	Right Reverse Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-64
2661.15 — FNR Sensor Minimum Calibration Value Too High.....9001-30-49	522448.16 — Right Reverse Pump Max Speed Calibration Value Too High.....9001-30-64
2661.16 — FNR Sensor Maximum Calibration Value Too Low.....9001-30-49	522448.17 — Right Reverse Pump Thresh Calibration Value Too Low.....9001-30-64
2661.17 — FNR Sensor Minimum Calibration Value Too Low.....9001-30-50	Right Reverse Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-65
2661.18 — FNR Sensor Maximum Calibration Value Too Low.....9001-30-50	522448.18 — Right Reverse Pump Max Speed Calibration Value Too Low.....9001-30-65
522439.05 — Tank Bypass Solenoid Open Circuit.....9001-30-51	522449.05 — Left Reverse Pump Coil Open.....9001-30-65
522444.00 — Charge Pressure High.....9001-30-51	Left Reverse Pump Coil Open Diagnostic Procedure.....9001-30-66
522444.01 — Charge Pressure Low.....9001-30-51	522449.06 — Left Reverse Pump Coil Short.....9001-30-67
522444.03 — Charge Pressure Short to Power.....9001-30-52	Left Reverse Pump Coil Open Diagnostic Procedure.....9001-30-68
522444.04 — Charge Pressure Open or Short.....9001-30-53	522449.15 — Left Reverse Pump Threshold Calibration Value Too High.....9001-30-69
522447.05 — Right Forward Pump Coil Open.....9001-30-53	Left Reverse Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-70
Right Forward Pump Coil Open Diagnostic Procedure.....9001-30-53	522449.16 — Left Reverse Pump Max Speed Calibration Value Too Low.....9001-30-70
522447.06 — Right Forward Pump Coil Short.....9001-30-55	522449.17 — Left Reverse Pump Threshold Calibration Value Too Low.....9001-30-70
Right Forward Pump Coil Short Diagnostic Procedure.....9001-30-55	Left Reverse Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-71
522447.15 — Right Forward Pump Threshold Calibration Value Too High.....9001-30-57	522449.18 — Left Reverse Pump Max Speed Calibration Value Too Low.....9001-30-71
Right Forward Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-58	522450.05 — Left Forward Pump Coil Open.....9001-30-71
522447.16 — Right Forward Pump Max Speed Calibration Value Too High.....9001-30-58	Left Forward Pump Coil Open Diagnostic Procedure.....9001-30-72
522447.17 — Right Forward Pump Threshold Calibration Value Too Low.....9001-30-58	522450.06 — Left Forward Pump Coil Short.....9001-30-73
Right Forward Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-59	Left Forward Pump Coil Short Diagnostic Procedure.....9001-30-74
522447.18 — Right Forward Pump Max Speed Calibration Value Too Low.....9001-30-59	522450.15 — Left Forward Pump Threshold Calibration Value Too High.....9001-30-75
522448.05 — Right Reverse Pump Coil Open.....9001-30-59	Left Forward Pump Threshold Calibration Value Too High Diagnostic Procedure.....9001-30-76
Right Reverse Pump Coil Open Diagnostic Procedure.....9001-30-60	
522448.06 — Right Reverse Pump Coil Short.....9001-30-61	
Right Reverse Pump Coil Short Diagnostic Procedure.....9001-30-62	

Continued on next page

	Page
522450.16 — Left Forward Pump Max Speed Calibration Value Too High.....	9001-30-76
522450.17 — Left Forward Pump Threshold Calibration Value Too Low.....	9001-30-76
Left Forward Pump Threshold Calibration Value Too High Diagnostic Procedure.....	9001-30-77
522450.18 — Left Forward Pump Max Speed Calibration Value Too Low.....	9001-30-77
522451.05 — Cooler Bypass Solenoid No Response	9001-30-78
523108.13 — TCU Not Calibrated High Speed Not Done.....	9001-30-78
523108.14 — TCU Not Calibrated Sensor/Pump/Motor	9001-30-78
523436.07 — TCU Watchdog Timer Exceeded	9001-30-78
523577.05 — Left Motor Solenoid Open Circuit	9001-30-79
523577.06 — Left Motor Solenoid Short Circuit	9001-30-79
523577.16 — Left Motor Maximum Calibration Value Too High.....	9001-30-79
523577.18 — Left Motor Maximum Calibration Value Too Low.....	9001-30-80
523578.05 — Right Motor Solenoid Open Circuit	9001-30-80
523578.06 — Right Motor Solenoid Short Circuit	9001-30-80
523578.16 — Right Motor Maximum Calibration Value Too High.....	9001-30-81
523578.18 — Right Motor Maximum Calibration Value Too Low.....	9001-30-81