


CFP83 SERIES

Operation & Maintenance Manual Fire Pump Drive Engines

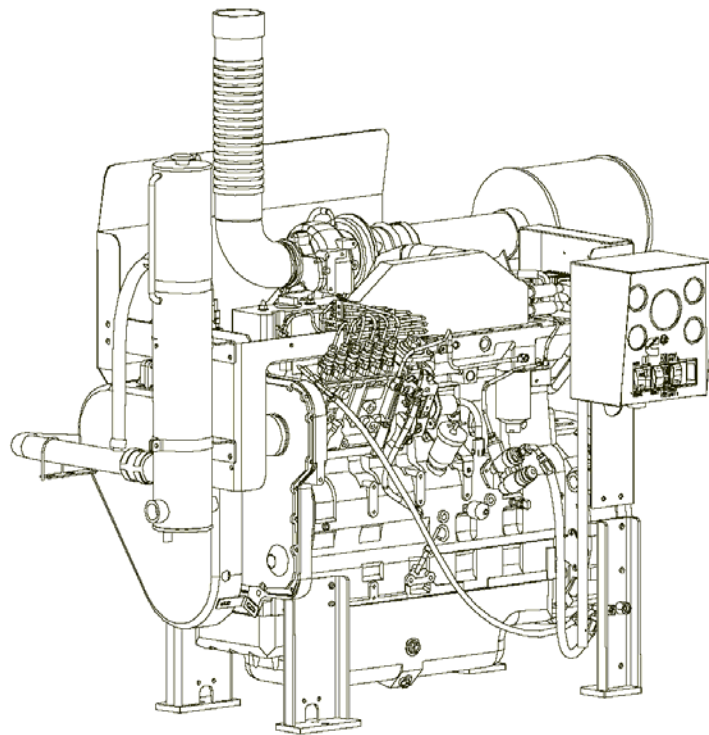

Foreword

This manual contains information for the correct operation and maintenance of a Cummins Fire Pump engine. It also includes important safety information, engine and systems specifications, troubleshooting guidelines, and listings of Cummins Authorized Repair Locations.

Read and follow all safety instructions. Refer to the General Safety Instructions in Section 1.

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. Cummins Fire Power, Cummins NPower and Cummins Engine Company, Inc. reserve the right to make changes at any time without obligation. If any differences are found between an engine and the information in this manual, contact the local Cummins Authorized Repair Location.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts. These parts can be identified by the following trademarks:

NOTE: Warranty information is located in Section 11. Make sure you are familiar with the warranty or warranties applicable to your engine.



Index of Sections

Introduction	1
Engine Identification	2
Installation and Operation	3
Maintenance Guidelines	4
Maintenance Procedures	5
System Diagrams	6
Adjustment, Replace and Replacement.....	7
Service Literature	8
Service Assistance	9
Maintenance Specifications	10
Warranty Information.....	11
Troubleshooting	12
Assembly Drawings.....	13

THIS PAGE INTENTIONALLY LET BLANK

Section 1 – Introduction

Section Contents

	Page
To the Owner and Operator	1-3
About the Manual.....	1-3
How to Use the Manual	1-3
Symbols	1-4
Illustrations	1-5
General Safety Instructions	1-6
General Cleaning Instructions	1-8
Acronyms and Abbreviations.....	1-14

THIS PAGE INTENTIONALLY LEFT BLANK

To the Owner and Operator

Preventative maintenance is the easiest and least expensive type of maintenance. Follow the maintenance schedule recommendations outlined in Maintenance Guidelines in Section 4.

Keep records of regularly scheduled maintenance.

Use the correct fuel, oil, coolant, and filters in the engine as specified in Maintenance Specifications in Section 10.

Cummins Fire Power, Cummins NPower and Cummins Engine Company, Inc use the latest technology and the highest quality components to produce its engines. Cummins recommends using only genuine Cummins parts.

Personnel at Cummins Authorized Repair Locations have been trained to provide expert service and parts support. If a problem that can not be resolved by a Cummins Authorized Repair Location occurs, follow the steps outlined in the Service Assistance in Section 9.

About the Manual

This manual contains information needed to operate and maintain an engine correctly as recommended by Cummins Fire Power, Cummins NPower and Cummins Engine Company, Inc. Additional service literature (troubleshooting and repair manual) can be ordered by filling out and mailing the Literature Order Form located in Service Literature in Section 8.

Both metric and U.S. customary values are listed in this manual. The metric value is listed first, followed by the U.S. customary in brackets.

Numerous illustrations and symbols are used to aid in understanding the meaning of the text. Refer to the Symbols subsection in this section for a complete listing of symbols and their definitions.

Each section is preceded by a Section Contents to aid in locating information more quickly.

How to Use the Manual












This manual is organized according to intervals at which maintenance on the engine is to be performed. A table that states the required intervals and the checks to be made is located in Section 4. Locate the interval at which maintenance will be performed, then follow the steps given in the referenced section for all the procedures to be performed. All the procedures done under previous maintenance intervals must be performed, also.

Keep a record of all the checks and inspections made. A record form for recording date, mileage/kilometer or hours, and which maintenance checks were performed is located in Section 4.

Refer to the Maintenance Specifications in Section 10 for specifications recommended by Cummins Engine Company, Inc., for your engine. Specifications and torque values for each engine system are given in that section.

Symbols

The following symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning define below:


	WARNING. Serious personal injury or extensive property damage can result if the warning instructions are not followed.
	CAUTION. Minor personal injury can result or a part, an assembly, or the engine can be damaged if the caution instructions are not followed.
	INSPECTION is required.
	Refer to another location in this manual or another publication for additional information.
	Indicates a REMOVAL or DISASSEMBLY step
	LUBRICATE the part or assembly.
	CLEAN the part or assembly.
	TIGHTEN to a specific torque.
	Indicates an INSTALLATION or an ASSEMBLY step
	PERFORM a mechanical or time MEASUREMENT .
	PERFORM an electrical MEASUREMENT .

Illustrations

The illustrations used in this manual are intended to give an example of a problem, and to show what to look for and where the problem can be found.


Some of the illustrations are “generic” and might not look exactly like the engine or parts used in your application.

The illustrations can contain symbols to indicate an action required, and an acceptable or not acceptable condition.

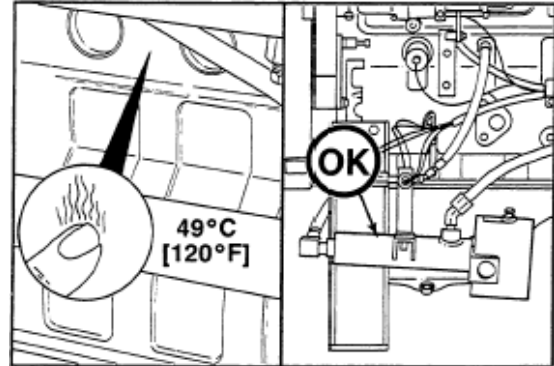

The illustrations are also intended to show repair or replacement procedures.

The illustration can differ from your application, but the procedure given will be the same.

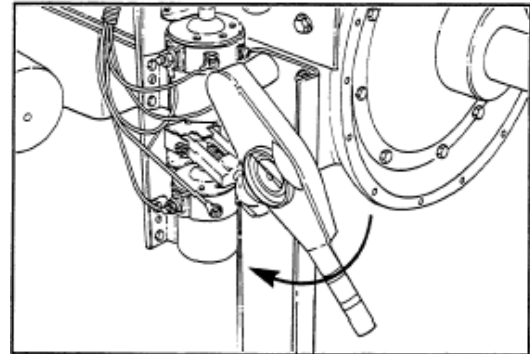

General Safety Instructions



Improper practices or carelessness can cause burns, cuts, mutilation, asphyxiation or other bodily injury or death.

- Read and understand all of the safety precautions and warnings before performing any repair. This list contains the general safety precautions that must be followed to provide personal safety. Special safety precautions are included in the procedures when they apply.
- Make sure the work area surrounding the product is dry, well lit, ventilated; free from clutter, loose tools, parts, ignition sources and hazardous substances. Be aware of hazardous conditions that can exist.
- **Always** wear protective glasses and protective shoes when working.
- Rotating parts can cause cuts, mutilation or strangulation.
- Do not wear loose-fitting or torn clothing. Remove all jewelry when working.
- Disconnect the battery (negative [-] cable first) and discharge any capacitors before beginning any repair work. Put a **"Do Not Operate"** tag on the controls.
- Use **ONLY** the proper engine barring techniques for manually rotating the engine. Do not attempt to rotate the crankshaft by pulling or prying on the fan. This practice can cause serious personal injury, property damage, or damage to the fan blade(s) causing premature fan failure.
- If an engine has been operating and the coolant is hot, allow the engine to cool before you slowly loosen the filler cap and relieve the pressure from the cooling system.
- Do not work on anything that is supported **ONLY** by lifting jacks or a hoist. Always use blocks or proper stands to support the product before performing any service work.
- Relieve all pressure in the air, oil, and the cooling systems before any lines, fittings, or related items are removed or disconnected. Be alert for possible pressure when disconnecting any device from a system that utilizes pressure. Do not check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- To avoid personal injury, use a hoist or get assistance when lifting components that weigh 23 kg [50 lb] or more. Make sure all lifting devices such as chains, hooks, or slings are in good condition and are of the correct capacity. Make sure hooks are positioned correctly. Always use a spreader bar when necessary. The lifting hooks must not be side-loaded.
- Corrosion inhibitor contains alkali. Do not get the substance in your eyes. Avoid prolonged or repeated contact with skin. Do not swallow internally. In case of contact, immediately wash skin with soap and water. In case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes.
IMMEDIATELY CALL A PHYSICIAN. KEEP OUT OF REACH OF CHILDREN.

General Safety Instructions (Cont.)

- Naphtha and Methyl Ethyl Ketone (MEK) are flammable materials and must be used with caution. Follow the manufacturer's instructions to provide complete safety when using these materials. **KEEP OUT OF REACH OF CHILDREN.**
- To avoid burns, be alert for hot parts on products that have just been turned OFF, and hot fluids in lines, tubes, and compartments.
- **Always** use tools that are in good condition. Make sure you understand how to use them before performing any service work. Use **ONLY** genuine Cummins or Cummins ReCon® replacement parts.
- **Always** use the same fastener part number (or equivalent) when replacing fasteners. Do not use a fastener of lesser quality if replacements are necessary.
- Do not perform any repair when fatigued or after consuming alcohol or drugs that can impair your functioning.
- Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. Dispose of waste oil in accordance with applicable requirements.

General Cleaning Instructions



Abrasive material must be kept out of or removed from oil passages and parts wear points. Abrasive material in oil passages can cause bearing and bushing failures that can progress to major component damage beyond reuse. This is particularly true of main and rod bearings.



Excessive sanding or grinding the carbon ring from the top of the cylinder liners can damage the liner beyond reuse. The surface finish will be damaged and abrasive particles can be forced into the liner material which can cause early cylinder wear-out or piston ring failures.



When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.



When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.



Do not use bead blasting cleaning methods on aluminum pistons skirts or the pin bores in any piston, piston skirt or piston crown. Small particles of the media will embed in the aluminum or other soft metal and result in premature wear of the cylinder liner, piston rings, pins and pin bores. Valves, turbocharger shafts, etc., can also be damaged. Follow the cleaning directions listed in the procedures.



Do not contaminate wash tanks and tank type solvent cleaners with the foreign material and plastic beads. Remove the foreign material and plastic beads with compressed air, hot high pressure water or steam before placing them in tanks or cleaners. The foreign material and plastic beads can contaminate the tank and any other engine parts cleaned in the tank. Contaminated parts may cause failures from abrasive wear.



The bead blasting operation must not disturb the metal surface. If the metal surface is disturbed the engine can be damaged due to increased parts clearance or inadequate surface finish on parts that move against other parts.

Definition of Clean

Parts must be free of debris that can contaminate any engine system. This does not necessarily mean they have to appear as new.

Sanding gasket surfaces until the factory machining marks are disturbed adds no value and is often harmful to forming a seal. It is important to maintain surface finish and flatness tolerances to form a quality sealing surface. Gaskets are designed to fill small voids in the specified surface finish.

Sanding gasket surfaces where edge-molded gaskets are used is most often unnecessary. Edge-molded gaskets are those metal carriers with sealing material bonded to the edges of the gasket to seal while the metal portion forms a metal to metal joint for stability. Any of the small amounts of sealing material that can stick to the parts are better removed with a blunt-edged scraper on the spots rather than spending time polishing the whole surface with an air sander or disc.

For those gaskets that do not have the edge molding, nearly all have a material that contains release agents to prevent sticking. Certainly this is not to say that some gaskets are not difficult to remove because the gasket has been in place a long time, has been overheated or the purpose of the release agent has been defeated by the application of some sealant. The object however is just to remove the gasket without damaging the surfaces of the mating parts without contaminating the engine (don't let the little bits fall where they can not be removed).

Bead blasting piston crowns until the dark stain is removed is unnecessary. All that is required is to remove the carbon build-up above the top ring and in the ring grooves. There is more information on bead blasting and piston cleaning later in this document.

Cummins Inc. does not recommend sanding or grinding the carbon ring at the top of cylinder liners until clean metal is visible. The liner will be ruined and any signs of a problem at the top ring reversal point (like a dust-out) will be destroyed. It is necessary to remove the carbon ring to provide for easier removal of the piston assembly. A medium bristle, high quality, steel wire wheel that is rated above the rpm of the power tool being used will be just as quick and there will be less damage. Yes, one must look carefully for broken wires after the piston is removed but the wires are more visible and can be attracted by a magnet.

Oil on parts that have been removed from the engine will attract dirt in the air. The dirt will adhere to the oil. If possible, leave the old oil on the part until it is ready to be cleaned, inspected and installed, and then clean it off along with any attracted dirt. If the part is cleaned then left exposed it can have to be cleaned again before installation. Make sure parts are lubricated with clean oil before installation. They do not need to be oiled all over but do need oil between moving parts (or a good lube system priming process conducted before cranking the engine).

Bead blasting parts to remove exterior paint is also usually unnecessary. The part will most likely be painted again so all that needs happen is remove any loose paint.

Using Abrasive Pads and Abrasive Paper

The keyword here is "abrasive". There is no part of an engine designed to withstand abrasion. That is they are all supposed to lock together or slide across each other. Abrasives and dirt particles will degrade both functions.



Abrasive material must be kept out of or removed from oil passages and parts wear points. Abrasive material in oil passages can cause bearing and bushing failures that can progress to major component damage beyond reuse. This is particularly true of main and rod bearings.

Cummins Inc. does not recommend the use of emery cloth or sand paper on any part of an assembled engine or component including but not limited to removing the carbon ridge from cylinder liners or to clean block decks or counterbores.

Great care must be taken when using abrasive products to clean engine parts, particularly on partially assembled engines. Abrasive cleaning products come in many forms and sizes. All of them contain aluminum oxide particles, silicon carbide, or sand or some other similar hard material. These particles are harder than most of the parts in the engine. Since they are harder, if they are pressed against softer material they will either damage the material or become embedded in it. These materials fall off the holding media as the product is used. If the products are used with power equipment the particles are thrown about the engine. If the particles fall between two moving parts, damage to the moving parts is likely.

If particles that are smaller than the clearance between the parts while they are at rest (engine stopped), but larger than the running clearance then damage will occur when the parts move relative to each other (engine started). While the engine is running and there is oil pressure, particles that are smaller than the bearing clearance are likely to pass between the parts without damage and be trapped in the oil filter. However, particles larger than the bearing clearance will remove material from one part and can become embedded in one of the parts. Once embedded in one part it will abrade the other part until contact is no longer being made between the two parts. If the damage sufficiently degrades the oil film, the two parts will come into contact resulting in early wear-out or failure from lack of effective lubrication.

Abrasive particles can fly about during cleaning it is very important to block these particles from entering the engine as much as possible. This is particularly true of lubricating oil ports and oil drilling holes, especially those located downstream of the lubricating oil filters. Plug the holes instead of trying to blow the abrasive particles and debris with compressed air because the debris is often simply blown further into the oil drilling.

All old gasket material must be removed from the parts gasket surfaces. However, it is not necessary to clean and polish the gasket surface until the machining marks are erased. Excessive sanding or buffing can damage the gasket surface. Many newer gaskets are of the edge molded type (a steel carrier with a sealing member bonded to the steel). What little sealing material that can adhere is best removed with a blunt-edged scraper or putty knife. Cleaning gasket surfaces where an edge-molded gasket is used with abrasive pads or paper is usually a waste of time.



Excessive sanding or grinding the carbon ring from the top of the cylinder liners can damage the liner beyond reuse. The surface finish will be damaged and abrasive particles can be forced into the liner material which can cause early cylinder wear-out or piston ring failures.

Tape off or plug all openings to any component interior before using abrasive pads or wire brushes. If really necessary because of time to use a power tool with abrasive pads, tape the oil drillings closed or use plug and clean as much of the surface as possible with the tool but clean around the oil hole/opening by hand so as to prevent contamination of the drilling. Then remove the tape or plug and clean the remaining area carefully and without the tool. DO NOT use compressed air to blow the debris out of oil drilling on an assembled engine! More likely than not, the debris can be blown further into the drilling. Using compressed air is fine if both ends of the drilling are open but that is rarely the case when dealing with an assembled engine.

Cleaning Gasket Surfaces

The object of cleaning gasket surfaces is to remove any gasket material, not refinish the gasket surface of the part.

Cummins Inc. does not recommend any specific brand of liquid gasket remover. If a liquid gasket remover is used, check the directions to make sure the material being cleaned will not be harmed.

Air powered gasket scrapers can save time but care must be taken to not damage the surface. The angled part of the scraper must be against the gasket surface to prevent the blade from digging into the surface. Using air powered gasket scrapers on parts made of soft materials takes skill and care to prevent damage.

Do not scrape or brush across the gasket surface if at all possible.

Solvent and Acid Cleaning

Several solvent and acid-type cleaners can be used to clean the disassembled engine parts (other than pistons. See Below). Experience has shown that the best results can be obtained using a cleaner that can be heated to 90 to 95 °C (180 to 200 °F). Kerosene emulsion based cleaners have different temperature specifications, see below. A cleaning tank that provides a constant mixing and filtering of the cleaning solution will give the best results. Cummins Inc. does not recommend any specific cleaners. Always follow the cleaner manufacturer's instructions. Remove all the gasket material, o-rings, and the deposits of sludge, carbon, etc., with a wire brush or scraper before putting the parts in a cleaning tank. Be careful not to damage any gasket surfaces. When possible, steam clean the parts before putting them in the cleaning tank.



When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

Experience has shown that kerosene emulsion based cleaners perform the best to clean pistons. These cleaners should not be heated to temperature in excess of 77 °C (170 °F). The solution begins to break down at temperatures in excess of 82 °C (180 °F) and will be less effective.

Do not use solutions composed mainly of chlorinated hydrocarbons with cresols, phenols and/or cresylic components. They often do not do a good job of removing deposits from the ring groove and are costly to dispose of properly.

Solutions with a pH above approximately 9.5 will cause aluminum to turn black; therefore do not use high alkaline solutions.

Chemicals with a pH above 7.0 are considered alkaline and those below 7.0 are acidic. As you move further away from the neutral 7.0, the chemicals become highly alkaline or highly acidic.

Remove all the gasket material, o-rings, and the deposits of sludge, carbon, etc., with a wire brush or scraper before putting the parts in a cleaning tank. Be careful to not damage any gasket surfaces. When possible use hot high pressure water or steam clean the parts before putting them in the cleaning tank. Removing the heaviest dirt before placing in the tank will allow the cleaner to work more effectively and the cleaning agent will last longer.

Rinse all the parts in hot water after cleaning. Dry completely with compressed air. Blow the rinse water from all the capscrew holes and the oil drillings.

If the parts are not to be used immediately after cleaning, dip them in a suitable rust proofing compound. The rust proofing compound must be removed from the parts before assembly or installation on the engine.

Steam Cleaning

Steam cleaning can be used to remove all types of dirt that can contaminate the cleaning tank. It is a good method for cleaning the oil drillings and coolant passages.



When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

Do not steam clean the following components:

- Electrical Components
- Wiring Harnesses
- Injectors
- Fuel Pump
- Belts and Hoses
- Bearings (ball or taper roller)
- Electronic Control Module (ECM)
- ECM Connectors

Plastic Bead Cleaning

Cummins Inc. does not recommend the use of glass bead blast or walnut shell media on any engine part. Cummins Inc. recommends using only plastic bead media, Part Number 3822735 or equivalent on any engine part. Never use sand as a blast media to clean engine parts. Glass and walnut shell media when not used to the media manufacturer's recommendations can cause excess dust and can embed in engine parts that can result in premature failure of components through abrasive wear.

Plastic bead cleaning can be used on many engine components to remove carbon deposits. The cleaning process is controlled by the use of plastic beads, the operating pressure and cleaning time.



Do not use bead blasting cleaning methods on aluminum pistons skirts or the pin bores in any piston, piston skirt or piston crown. Small particles of the media will embed in the aluminum or other soft metal and result in premature wear of the cylinder liner, piston rings, pins and pin bores. Valves, turbocharger shafts, etc., can also be damaged. Follow the cleaning directions listed in the procedures.



Do not contaminate wash tanks and tank type solvent cleaners with the foreign material and plastic beads. Remove the foreign material and plastic beads with compressed air, hot high pressure water or steam before placing them in tanks or cleaners. The foreign material and plastic beads can contaminate the tank and any other engine parts cleaned in the tank. Contaminated parts may cause failures from abrasive wear.

Plastic bead blasting media, Part Number 3822735, can be used to clean all piston ring grooves. Do not use any bead blasting media on piston pin bores or aluminum skirts.

Plastic Bead Cleaning (Cont)

Follow the equipment manufacturer's cleaning instructions. Make sure to adjust the air pressure in the blasting machine to the bead manufacturer's recommendations. Turning up the pressure can move material on the part and cause the plastic bead media to wear out more quickly. The following guidelines can be used to adapt to manufacturer's instructions:

Bead size: U.S. size Number 16 — 20 for piston cleaning with plastic bead media, Part Number 3822735

Operating Pressure — 270 kPa (40 psi) for piston cleaning. Pressure should not cause beads to break.

Steam clean or wash the parts with solvent to remove all of the foreign material and plastic beads after cleaning. Rinse with hot water. Dry with compressed air.



The bead blasting operation must not disturb the metal surface. If the metal surface is disturbed the engine can be damaged due to increased parts clearance or inadequate surface finish on parts that move against other parts.

When cleaning pistons, it is not necessary to remove all the dark stain from the piston. All that is necessary is to remove the carbon on the rim and in the ring grooves. This is best done by directing the blast across the part as opposed to straight at the part. If the machining marks are disturbed by the blasting process, then the pressure is too high or the blast is being held on one spot too long. The blast operation must not disturb the metal surface.

Walnut shell bead blast material is sometimes used to clean ferrous metals (iron and steel). Walnut shell blasting produces a great amount of dust particularly when the pressure if the air pressure on the blasting machine is increased above media manufacturer's recommendation. Cummins Inc. recommends not using walnut shell media to clean engine parts due to the risk media embedment and subsequent contamination of the engine.

Cummins Inc. now recommends glass bead media NOT used to clean any engine parts. Glass media is too easily embedded into the material particularly in soft materials and when air pressures greater than media manufacturer's recommend are used. The glass is an abrasive so when it is in a moving part, that part is abrading all the parts in contact with it. When higher pressures are used the media is broken and forms a dust of a very small size that floats easily in the air. This dust is very hard to control in the shop, particularly if only compressed air (and not hot water) is used to blow the media after it is removed from the blasting cabinet (blowing the part off inside the cabinet may remove large accumulations but never removes all the media).

Bead blasting is best used on stubborn dirt/carbon build-up that has not been removed by first steam/higher pressure washing then washing in a heated wash tank. This is particularly true of pistons. Steam and soak the pistons first then use the plastic bead method to safely remove the carbon remaining in the grooves (instead of running the risk of damaging the surface finish of the groove with a wire wheel or end of a broken piston ring. Make sure the parts are dry and oil free before bead blasting to prevent clogging the return on the blasting machine.

Always direct the bead blaster nozzle "across" rather than directly at the part. This allows the bead to get under the unwanted material. Keep the nozzle moving rather than hold on one place. Keeping the nozzle directed at one-place too long causes the metal to heat up and be moved around. Remember that the spray is not just hitting the dirt or carbon. If the machining marks on the piston groove or rim have been disturbed then there has not been enough movement of the nozzle and/or the air pressure is too high.

Never bead blast valve stems. Tape or use a sleeve to protect the stems during bead blasting. Direct the nozzle across the seat surface and radius rather than straight at them. The object is to remove any carbon build up and continuing to blast to remove the stain is a waste of time.

Acronyms and Abbreviations

AFC	Air Fuel Control	in.	Inch
Amp	Ampere	in-lb	Inch Pound
API	American Petroleum Institute	kg	Kilograms
ASA	Air Signal Attenuator	kPa	Kilopascal
ASTM	American Society of Testing and Materials	l	Liter
AWG	American Wire Gauge	lb.	pound
C	Celsius	lbf.	Pound force
C.I.D.	Cubic Inch Displacement	m	Meter
CAC	Charge Air Cooler	ml	Milliliter
CARB	California Air Resources Board	mm	Millimeter
cc	Cubic Centimeter	MPa	Megapascal
cm	Centimeter	MPH	Miles Per Hour
CPL	Control Parts List	MPQ	Miles Per Quart
cSt	Centistokes	N	Newton
D.	Diameter	N•m	Newton-meter
DCA	Diesel Coolant Additive	OEM	Original Equipment Manufacturer
E.C.S.	Emission Control System	oz.	Ounce
ECM	Electronic Control Module	ppm	Parts Per Million
EPA	Environmental Protection Agency	psi	Pounds Per Square Inch
EPS	Engine Position Sensor	PTO	Power Takeoff
F	Fahrenheit	qt	Quart
FSO	Fuel Shut-Off	RPM	Revolutions Per Minute
FSOS	Fuel Shut-Off Switch	S.A.E.	Society of Automotive Engineers
ft-lb	Foot-Pound	STC	Step Timing Control
GAL	Gallon (US)	TDC	Top Dead Center
H ₂ O	Water	US	United States of America
Hg	Mercury	V	Volt
HP	Horsepower	VS	Variable Speed

Section 2 - Engine Identification

Section Contents

	Page
Fire Pump Engines	2-3
Overspeed Switches.....	2-3
Operating Speed	2-3
Control System	2-3
External Engine Components and Views.....	2-4
Instrument Panel.....	2-9
Fire Pump Engine Data Tag.....	2-10
Factory Setting Tag	2-10
Fuel Injection Pump Dataplate	2-11

THIS PAGE INTENTIONALLY LEFT BLANK

Fire Pump Engines

Cummins' complete line of fire pump engines have been approved as packaged units (engine and all accessories) by Factory Mutual Research and listed by Underwriter's Laboratories, Inc. and Underwriter's Laboratories of Canada. Because of the lengthy and expensive process to design and produce a fire pump engine that meets these requirements, no deviations are permitted without approval. These engines are to be used only for fire protection applications.

Overspeed Switches

Each engine is equipped with an overspeed switch which will activate the fuel pump solenoid valve and shut off the engine when the RPM exceeds a present limit. The overspeed switch senses engine speed during the start cycle and stops the starting motor cranking cycle. The overspeed switch must be adjusted to the required speed limit during the in-service inspection.

Operating Speed

All Cummins fire pump engines are shipped from the factory with the operating speed adjusted to the lowest approved operating speed. Final operating speed adjustment must be made at the time of the in-service inspection to obtain the required fire pump operating speed specified by the pump manufacturer.

Control System

The function of a fire pump controller is to start the engine. These controllers are more sophisticated than standard industrial controllers because they include special items for fire pumps. Several options are available:

The automatic start controller can be used for either automatic or manual stop after the fire demand signal is removed.

Pressure recorders are available to provide a permanent record of water pressure fluctuations and engine starts.


Sequential starting is available for multiple-pump installations to keep all pumps from starting simultaneously.

NOTE: Fire pump controllers are not supplied by Cummins Fire Power, or Cummins Engine Company, Inc.

External Engine Components and Views


The following illustrations show the locations of the major external engine components, and other service and maintenance points. Some external components will be at different locations for different engine models.

Instrument Panel Side

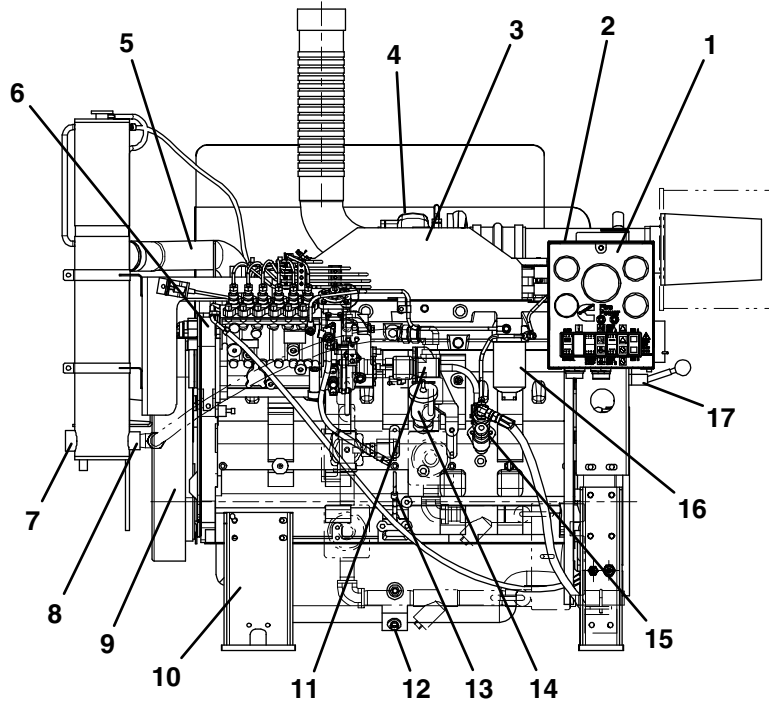


- | | | |
|--------------------------|----------------------------|--------------------------|
| 1. Instrument Panel | 7. Raw Water Outlet | 13. Dipstick |
| 2. Terminal Box | 8. Raw Water Inlet | 14. Lubricating Oil Fill |
| 3. Charge Air Cooler | 9. Flywheel Housing | 15. Lift Pump |
| 4. Turbocharger | 10. Engine Support | 16. Fuel Filter |
| 5. Upper Water Hose/Tube | 11. Electric Fuel Solenoid | 17. Manual Start |
| 6. Fuel Pump | 12. Oil Pan Drain | |

Turbocharger Side

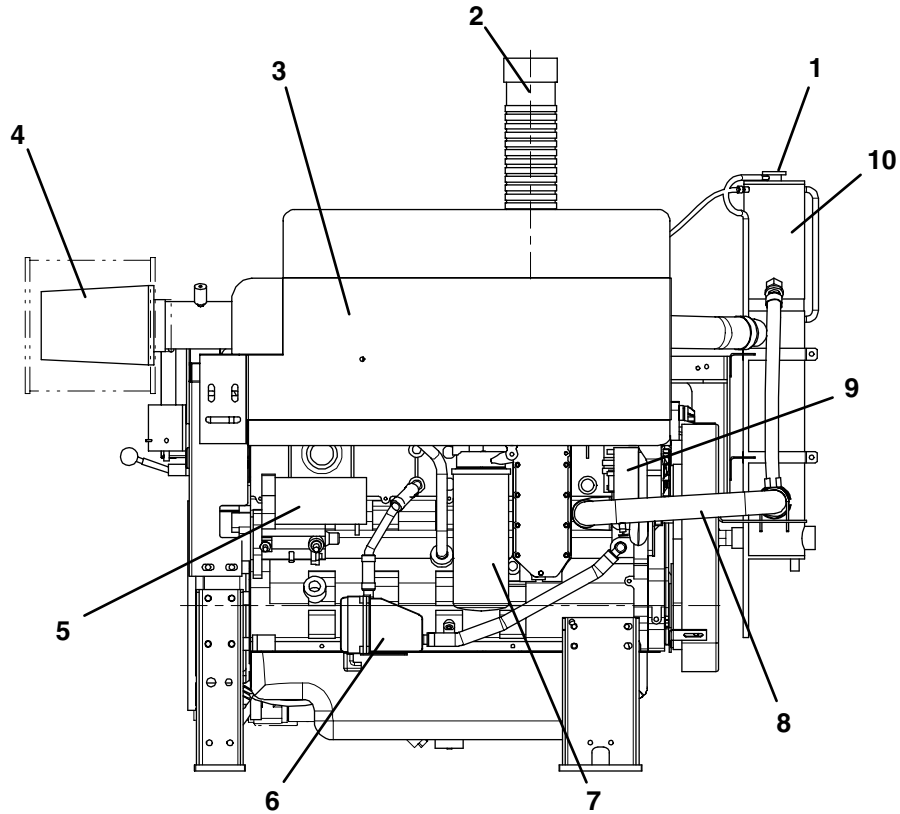


- | | | | |
|----|---------------------------------|-----|------------------------|
| 1. | Top Tank Fill | 6. | Coolant Heater |
| 2. | Exhaust | 7. | Lubricating Oil Filter |
| 3. | Turbocharger and Exhaust Shield | 8. | Lower Water Hose/Tube |
| 4. | Air Cleaner Element | 9. | Alternator |
| 5. | Starter Motor | 10. | Heat Exchanger |



Front View

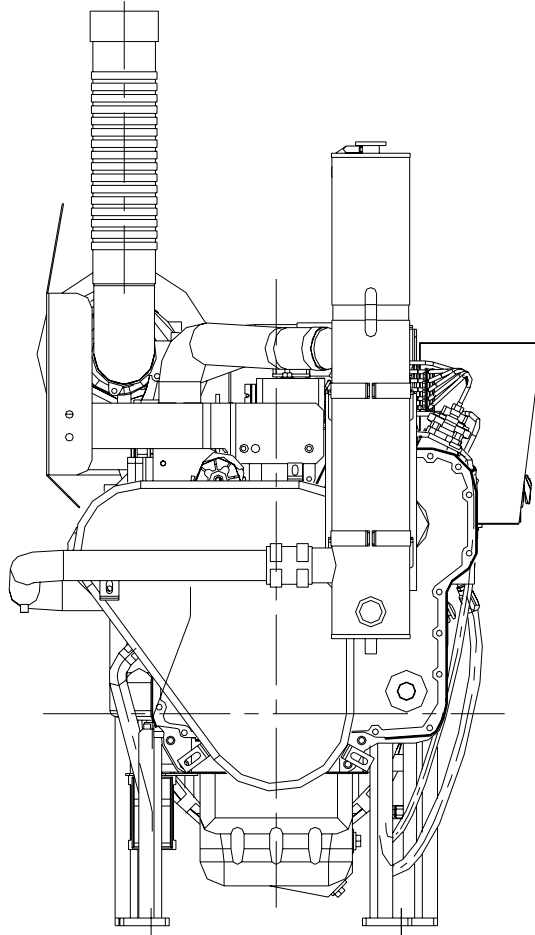


Top View

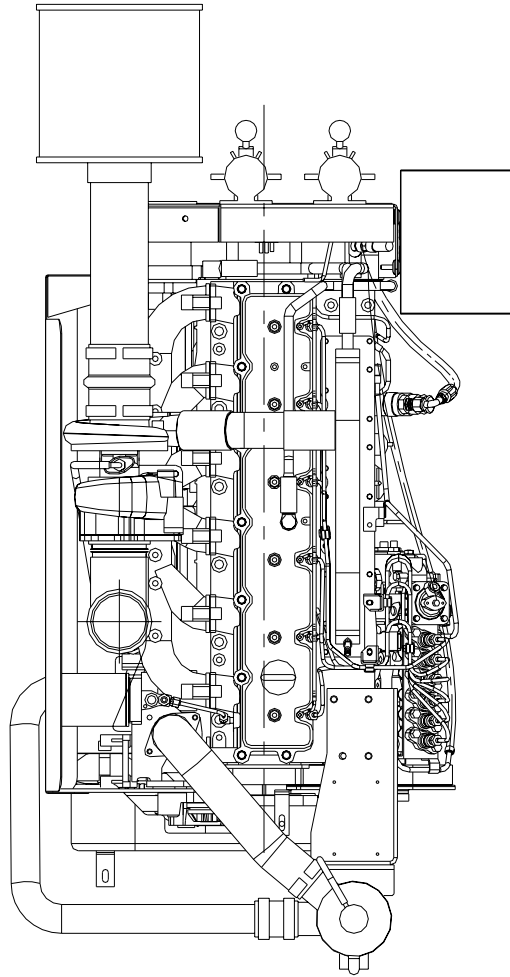

Isometric Views

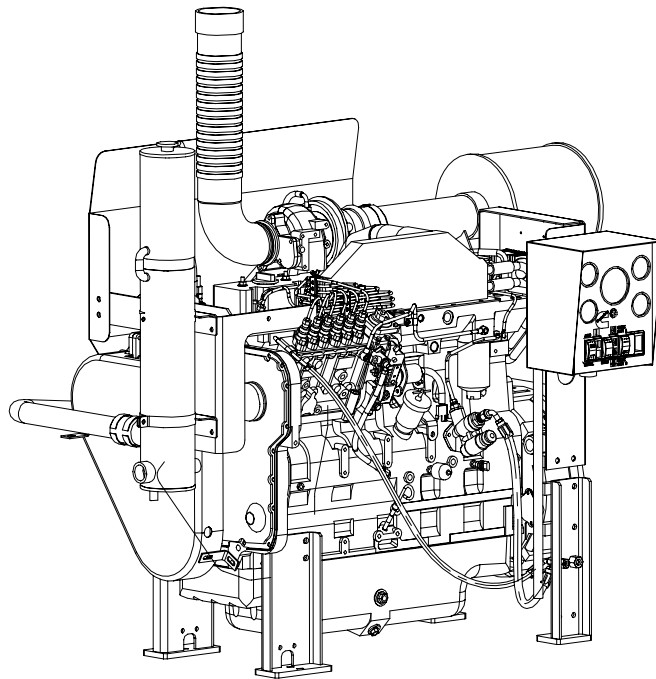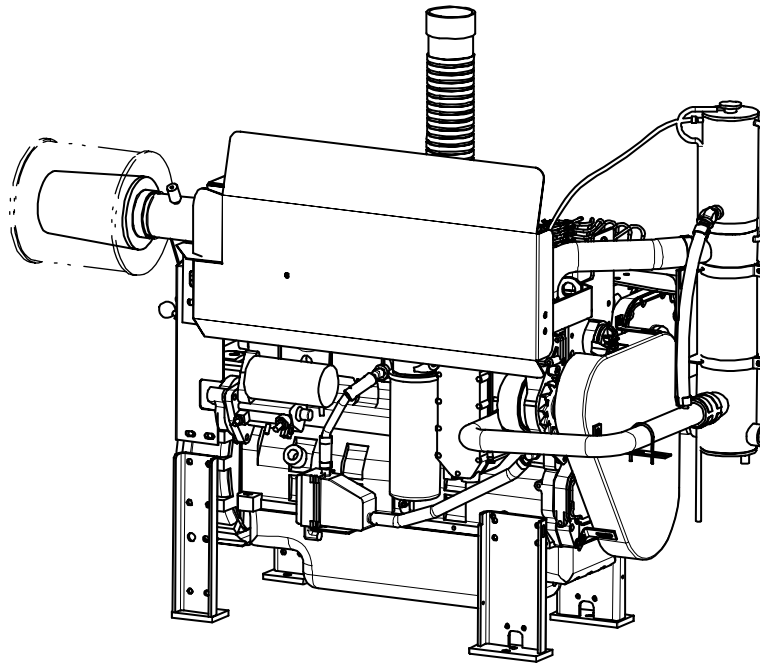

Instrument Panel

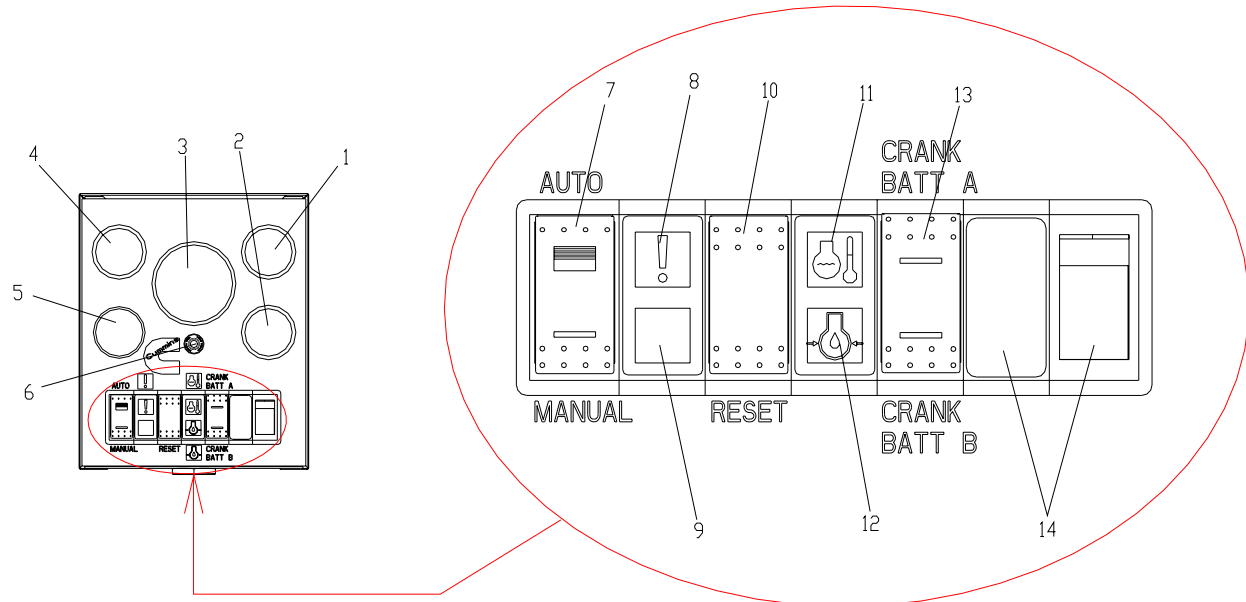

- | | | | |
|----|--------------------------------|-----|---|
| 1. | Battery "A" Voltmeter | 8. | Overspeed Warning Light |
| 2. | Battery "B" Voltmeter | 9. | Not used |
| 3. | Tachometer (with hour-meter) | 10. | Overspeed Reset Switch |
| 4. | Water Temperature Gauge | 11. | High Water Temperature Warning Light |
| 5. | Lubricating Oil Pressure Gauge | 12. | Low Oil Pressure Warning Light |
| 6. | Circuit Breaker | 13. | Battery A/B Switch |
| 7. | ON/OFF Switch (AUTO/MANUAL) | 14. | ECM Indicators (For Electronic Engine Models) |

Fire Pump Engine Data Tag


<p>The Fire Pump Engine Data Tag is located at the pump end of the engine just above the redundant starter solenoids. Refer to <u>Drawing 8708</u> (CFP83-F10, F20, F30) or <u>Drawing 8710</u> (CFP83-F40) in Section 13 for location details.</p> <p>This tag shows specific information about your engine. The engine serial number provides information for ordering parts and service needs.</p> <p>NOTE: The fire pump dataplate must not be changed unless approved by Cummins Fire Power.</p>	<div style="text-align: center;"> WWW.CUMMINSFIREPOWER.COM CUMMINS FIRE POWER A DIVISION OF CUMMINS NPOWER, LLC DE PERE, WI 54115 </div> <hr/> <p>MFD. DATE: _____ MODEL: "see table"</p> <p>SERIAL #: <input style="width: 100px;" type="text"/> YEAR: _____</p> <p>RATED SPEED: "see table"</p> <p>HP OUTPUT: "see table"</p> <hr/> <p>SPEED RANGE IF APPLICABLE</p> <div style="display: flex; align-items: center;"> <div style="flex: 1;"> <p>MIN. HP @ SPEED: "see table"</p> <p>MAX HP @ SPEED: "see table"</p> </div> <div style="flex: 0.2; text-align: center;"> </div> <div style="flex: 0.1; text-align: center;"> <p>0.75 TYP.</p> </div> </div> <p>HORSEPOWER RATINGS WITHIN THE SPECIFIED SPEED RANGE ARE TO BE DETERMINED BY THE USE OF LINEAR INTERPOLATION BETWEEN HORSEPOWERS DEVELOPED AT MINIMUM AND MAXIMUM SPEEDS.</p> <div style="display: flex; justify-content: center; gap: 20px;"> </div> <p style="text-align: center;">INTERNAL COMBUSTION ENGINE FOR DRIVING CENTRIFUGAL FIRE PUMP 19ZG</p> <div style="display: flex; justify-content: space-between;"> <p>CERTIFIED FOR USE OF SAE DF2 FUEL ONLY PER SAE J313 MAR92</p> </div> <div style="position: absolute; right: 0; top: 50%; transform: translateY(-50%); font-size: 8px;"> "Part number" </div>
---	---

Factory Setting Tag


<p>The Factory Setting Tag is located at the pump end of the engine just above the redundant starter solenoids. Refer to <u>Drawing 8708</u> (CFP83-F10, F20, F30) or <u>Drawing 8710</u> (CFP83-F40) in Section 13 for location details.</p> <p>This tag identifies to rated operating speed at the rated horsepower. It also provides the over speed switch setpoint. Both values are set at the factory.</p> <p>Refer to <u>Installation Instructions</u> in Section 3 for procedures to verify or adjust either setpoint.</p>	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>FACTORY SETTING</p> <p>ENGINE SPEED SETTING: _____ (⊕ HP SETTING)</p> <p>OVERSPEED SWITCH SETTING: _____</p> </div>
---	---

Fuel Injection Pump Dataplate

The Bosch® fuel injection pump dataplate is located on the side of the injection pump. It provides information for fuel pump calibration.

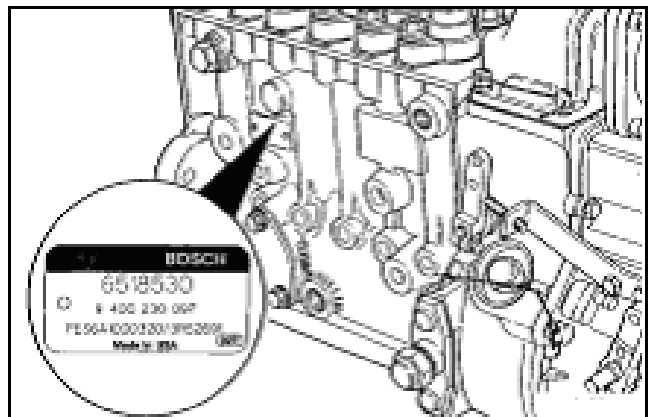

The Cummins part number for the fuel pump-governor combination is located on the governor dataplate.

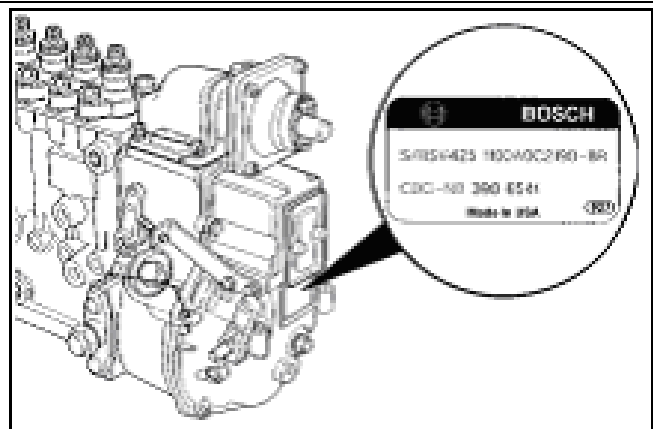

THIS PAGE INTENTIONALLY LEFT BLANK

Section 3 – Installation and Operation

Section Contents

	Page
Installation Overview	3-3
Physical Engine Installation	3-4
Fuel Supply Installation	3-6
Fire Pump Installation	3-6
Raw Water Supply Installation	3-7
Battery and Electrical Installation	3-13
Signal and Control Installation	3-14
Coolant System Preparation	3-15
Lubricating Oil System Preparation	3-18
Fuel System Preparation.....	3-19
Pre-Start Inspections.....	3-21
Pre-Lubricate the Engine (CFP83-F10, F20, F30)	3-22
Pre-Lubricate the Engine (CFP83-F40).....	3-23
Lubricate Zerk Fittings on Auxiliary Drive Shaft	3-24
Check Engine to Pump Alignment.....	3-25
Initial Start-Up	3-26
Initial Start	3-34
Second Start.....	3-36
Rated Speed Setpoint Adjustment (CFP83-F10, F20, F30)	3-37
Rated Speed Setpoint Adjustment (CFP83-F40).....	3-39
Overspeed Setpoint Adjustment and Testing.....	3-41
Crank Terminate Adjustment and Testing	3-45
Isolated Acceptance Testing	3-48
Integrated Acceptance Testing	3-48
General Operating Information	3-49
Normal Remote Starting Procedure.....	3-49
Normal Local Starting Procedure	3-50
Jumpering the Batteries.....	3-53
Operating the Engine	3-54
Emergency Manual Starting Procedures	3-55
Emergency Manual Mode Electric Start	3-56

Emergency Starting Manual Mode Non-Electric Start (CFP83-F10, F20, F30) 3-58

Emergency Starting in Automatic Mode with Failed Fuel Shut-Off Solenoid 3-62

Emergency Manual Stopping Procedure..... 3-63

Starting Procedure - After Extended Shutdown or Oil Change 3-64

Installation Overview

The first part of this section provides instructions for the initial installation, adjustment, and testing of the Cummins NPower Fire Pump engine. Appropriate portions of this section should also be used when returning the engine to operation after overhaul or major maintenance. The second part details normal operations.

Physical Engine Installation

Location

Refer to Drawing CFP83 GEN in Section 13 for the general fire pump and engine layout.

Refer to the following drawings in Section 13 for the general fire pump engine power module assembly:

Model	Drawing
CFP83-F10, F20, F30	Drawing 8708
CFP83-F40	Drawing 8710



Do not operate a diesel engine where there are or can be combustible vapors. These vapors can be sucked through the air intake system and cause engine acceleration and overspeeding, which can result in a fire, an explosion, and extensive property damage. Numerous safety devices are available, such as air intake shutoff devices, to minimize the risk of overspeeding in which an engine, because of application, might operate in a combustible environment (from a fuel spill or gas leak, for example). Cummins Engine Company, Inc. does not know how you will use your engine. The equipment owner and operator, therefore, are responsible for safe operation in a hostile environment. Consult your Cummins Authorized Repair Location for further information.

Install the fire pump engine in a sheltered environment protected from extremes of weather. Any enclosure must protect the water supply from freezing. Ensure that the engine and electrical components are not exposed to significant water dripping or sprays. Avoid installation in a dusty or dirty environment. Provide adequate physical protection from other physical damage as may be present in the specific location. (Refer to National Fire Protection Association NFPA20-2003 Chapter 11 for additional installation requirements for installations in the USA.)

Design the installation to meet the engine's mounting requirements. Refer to General Engine Data in Section 10.

Install the engine on a stable level foundation that is designed for the load and vibration of pump operation.

Install the engine with ample room for servicing of the engine, the pump, fuel supply, and support systems.

Ensure that the engine location is free of any risk of exposure to combustible vapors.

Physical Engine Installation (Cont)

Physical Installation

Use the supplied lifting hooks on the engine to position the engine.


Provide engine support as required to support the wet weight specified in General Engine Data in Section 10.

Position the engine as required for the interface with the pump, piping, and electrical connections.

Level the installation with shims as required.

Secure the engine to the support or floor.

Connect the exhaust piping.

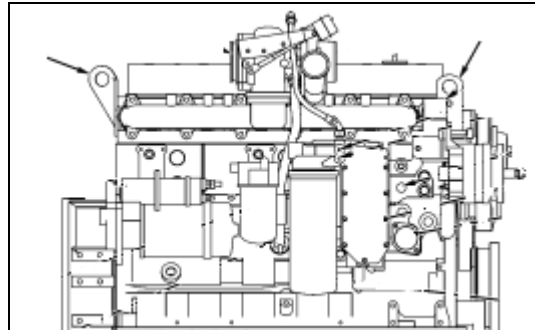

Fuel Supply Installation

NOTE: Refer to National Fire Protection Association NFPA20-2003 Chapter 11 for additional installation requirements for installations in the USA. Ensure that the fuel system is installed in a safe and an effective manner.


Install an elevated Diesel # 2 fuel tank or other fuel supply arrangement that meets the specifications listed in Fuel System Specifications in Section 10.

Install a 3/8" NPT (minimum) fuel supply line to the fire pump engine.

Install a 1/4" NPT (minimum) fuel return line. Route this line to the bottom of the fuel tank in order to minimize the return head.

Provide a pre-filter on the fuel line to the fire pump engine.

Size the fuel tank for the maximum expected full-load engine operation period with the initial fuel level at the minimum level for refueling.

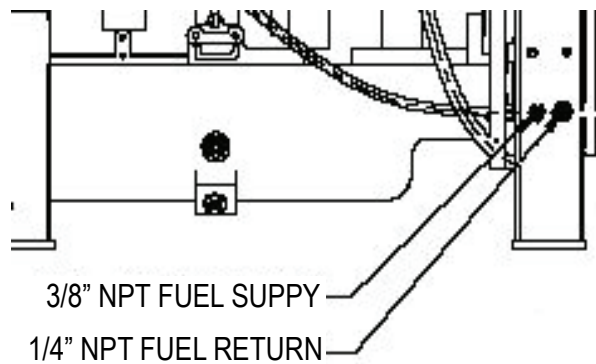

Fire Pump Installation

Install the customer supplied fire pump as per the pump manufacturer's instructions and applicable code requirements. Refer to National Fire Protection Association NFPA20-2003 Chapter 11 for requirements for installations in the USA. Ensure that the engine and pump are correctly aligned.

Raw Water Supply Installation

Overview

Raw water is used to cool the engine cooling fluid. Raw water is supplied from the fire pump prior to the pump discharge flange. It is forced through a cooling loop by fire pump pressure to the heat exchanger. In the heat exchanger, it flows through the tubes in the bundle and is discharged to an open waste cone. The raw water supply must be immediately available when the engine is started.

Refer to the Cooling System Flow Diagrams in Section 6 for a simplified block diagram of the cooling water system. Refer to Cooling System Specifications in Section 10 for pipe size requirements.

Refer to Drawing 9659 in Section 13 for the optional raw water piping manifold that is available from Cummins Fire Power.

If the piping supplied by the customer, provide raw water supply piping and components equivalent to that can be supplied by Cummins Fire Power and as shown in Assembly Diagram, Raw Water Piping in Section 6. Refer to National Fire Protection Association NFPA20-2003 Chapter 11 for installation requirements for installations in the USA. When choosing the components for the raw water supply and by-pass, care must be taken to ensure that the internal cross sectional area of the component is at least as large as the recommended pipe size.

When the raw water piping is installed, adjust both pressure regulator setpoints before operating the pump. Damage to the heat exchanger may occur from improperly regulated raw water supply pressure.

Raw Water Supply and Drain without Cummins Raw Water Manifold (CFP83-F10, F20, and F30 Only)


NOTE: Raw water outlet piping from the heat exchanger should be one pipe size larger than the supply piping.

NOTE: The velocity of raw water should be as great as possible without exceeding the maximum shown on the appropriate engine data sheet.

NOTE: Failure to comply will result in engine overheat and failure.

Provide raw water supply to the engine side of the heat exchanger.

Provide an open waste cone raw water drain at the outside of the heat exchanger.

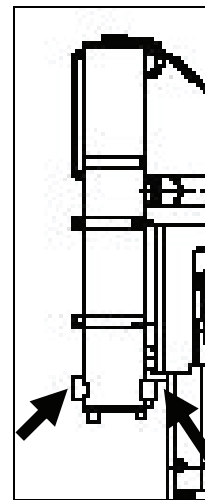

Raw Water Supply Installation (Cont)

Raw Water Supply & Drain without Cummins Raw Water Manifold (CFP83-F40 Only)


NOTE: Raw water outlet piping from the heat exchanger should be one pipe size larger than the supply piping.

NOTE: The velocity of raw water should be as great as possible without exceeding the maximum shown on the appropriate engine data sheet.

NOTE: Failure to comply will result in engine overheat and failure.

Provide raw water supply to the Charge Air Cooler water inlet.

Provide an open waste cone raw water drain at the outside of the heat exchanger.

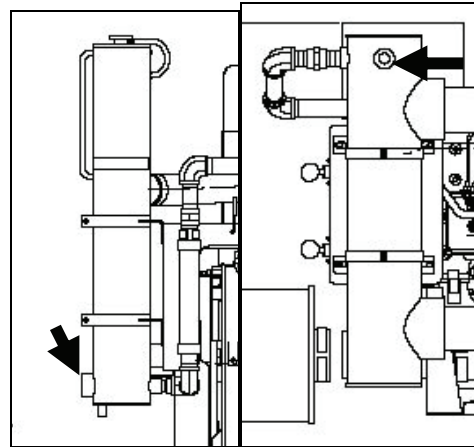

Raw Water Supply and Drain with Cummins Raw Water Manifold


NOTE: Raw water outlet piping from the heat exchanger should be one pipe size larger than the supply piping.

NOTE: The velocity of raw water should be as great as possible without exceeding the maximum shown on the appropriate engine data sheet.

NOTE: Failure to comply will result in engine overheat and failure.

Provide raw water supply to the raw water manifold inlet.

Provide an open waste cone raw water drain at the outside of the heat exchanger.

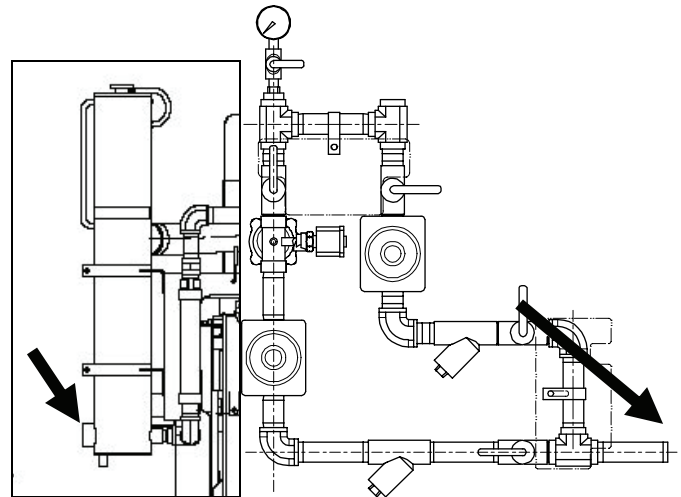


Check Raw Water Pressure Regulator Setpoints (CFP83-F10, F20, and F30 Only)

NOTE: Adapt this procedure to the actual installation if a Cummins raw water manifold is not supplied.

Temporarily remove the raw water inlet piping from the engine coolant heat exchanger. Refer to Drawing 9637 in Section 13.

Temporarily remove the raw water supply piping from the fire pump to the manifold.

Temporarily supply an alternate source of raw water to the inlet to the raw water manifold. The temporary water supply pressure should exceed 414 kPa [60 psig].

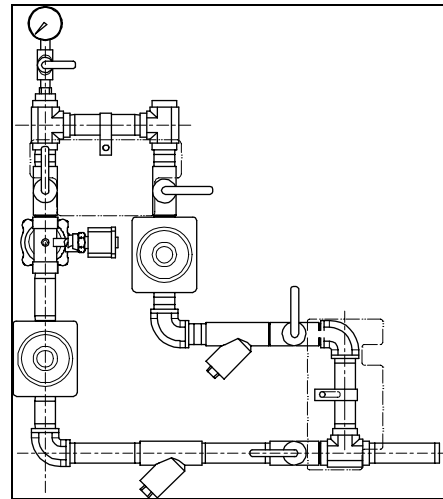

Raw Water Supply Installation (Cont)

Check Raw Water Pressure Regulator Setpoints (CFP83-F10, F20, and F30 Only) (Cont)

Provide temporary drain piping at the raw water manifold outlet.

If closed, open the pressure gauge isolation valve.

NOTE: The normal line has the solenoid valve. The bypass line does not.

If open, close the normal line inlet valve.

Open the bypass line inlet and outlet valves.

Apply water pressure to the raw water manifold.

NOTE: The heat exchanger is rated at 414 kPa [60 psig].

Adjust the bypass pressure regulator for 414 kPa [60 psig] or slightly less.

Close the bypass line inlet valve.

NOTE: Use the correct voltage for unit.

Provide a temporary 12 VDC standard (24 VDC optional) power source for the solenoid valve at Pin 13 and Pin 17. Refer to Drawing 10423 Sheet 1 in Section 13.

Open the normal line inlet and outlet valves.

Adjust the normal pressure regulator for 414 kPa [60 psig] or slightly less.


Remove the power jumper and reconnect the wiring.

Re-install the raw water piping from the manifold to the engine. Refer to Drawing 9637 in Section 13.

Test the pressure regulator setpoints with water flowing through the heat exchanger. Trim the setpoints if required.

Remove the temporary water supply to the manifold.

Re-install the raw water piping at the pump.

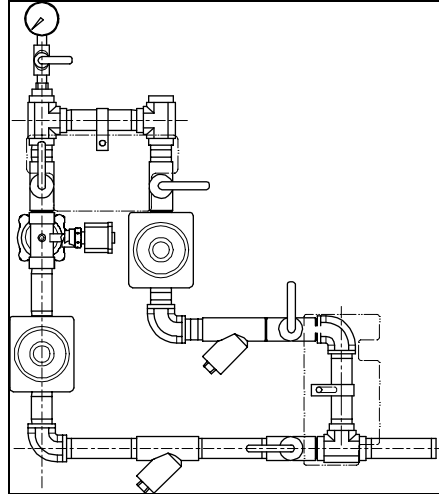

Raw Water Supply Installation (Cont)

Check Raw Water Pressure Regulator Setpoints (CFP83-F40 Only)

NOTE: Adapt this procedure to the actual installation if a Cummins raw water manifold is not supplied.

Temporarily remove raw water inlet piping at the charge air cooler. Refer to [Drawing 10712](#) in Section 13.

Provide temporary drain piping at the raw water manifold outlet.

If closed, open the pressure gauge isolation valve.

NOTE: The normal line has the solenoid valve. The bypass line does not.

If open, close the normal line inlet valve.

Open the bypass line inlet and outlet valves.

NOTE Temporary water supply pressure should exceed 414 kPa [60 psig].


Provide temporary water supply piping to the raw water manifold.

Adjust the bypass pressure regulator for 414 kPa [60 psig] or slightly less.

Close the bypass line inlet valve.

NOTE: Use the correct voltage for unit.

Provide a temporary 12 VDC standard (24 VDC optional) power source for the solenoid valve at Pin 13 and Pin 17. Refer to [Drawing 10423 Sheet 1](#) in Section 13.

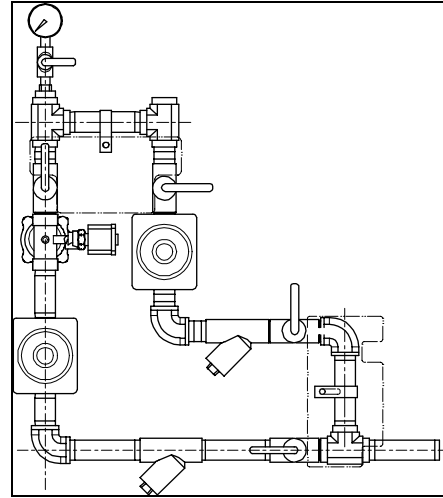

Raw Water Supply Installation (Cont)

Check Raw Water Pressure Regulator Setpoints (CFP83-F40 Only) (Cont)

Open the normal line inlet and outlet valves.

Adjust the normal pressure regulator for 414 kPa [60 psig] or slightly less.

Remove the power jumper and reconnect the wiring.

Re-install the raw water piping from the manifold to the charge air cooler. Refer to Drawing 10712 in Section 13.

Test the pressure regulator setpoints with water flowing through the heat exchanger. Trim the setpoints if required.

Remove the temporary water supply to the manifold.

Re-install the raw water piping at the pump.

Battery and Electrical Installation

Overview

Two redundant sets of batteries must be supplied for the selected operating voltage (standard 12 VDC or optional 24 VDC).

Batteries must meet the requirement listed in Electrical System Specifications in Section 10.

Batteries may be supplied by Cummins Fire Power as an option or may be supplied by the customer.

Refer to National Fire Protection Association NFPA20-2003 Chapter 11 for battery and battery charger requirements for installations in the USA.

Battery Installation

Install the redundant sets of batteries in a well ventilated or otherwise protected location. Provide adequate room for servicing or replacing the batteries. Provide protection from extremes of temperature and weather.

Locate the batteries near the engine or increase the size of the conductors as required by applicable codes.

Ensure that the batteries are configured properly for either 12 VDC or 24 VDC operations as appropriate.

Battery Wiring Installation

NOTE: Install the wiring in accordance with applicable codes and specifications.

Install the Loose Wire Kit wires. Refer to Drawing 9767 in Section 13.

If purchased, install the optional battery cable kit (Cummins Fire Power Part No. 9609). Otherwise, install equivalent customer supplied wiring.

Signal and Control Installation

NOTE: Install signal and control wiring at Terminal Board TB. Refer to Drawing 10423 Sheet 1 in Section 13.

Ensure that the fire control system is properly installed and configured as per the manufacturer's instructions.

Complete the customer-supplied fire pump controller wiring as per the manufacturer's instructions.

NOTE: Do not connect more than two wires at any point on the fire pump engine control panel terminal board. If necessary, add a grounding terminal board at the fire control system.

Connect the control power from the fire pump controller at TB-1 (+) and TB-11 (-). This power source is necessary for fire pump operations while in the AUTO mode.

Connect the two redundant crank signals from the fire pump controller to TB-9 (Crank Battery A) and to TB-10 (Crank Battery B). Connect the signal ground to TB-11.

Connect the Crank Terminate input to the fire pump controller from TB-2 with signal ground at TB-11. This 12 or 24 VDC signal is present when the engine is running. This signal indicates that the engine has started and that the crank command from the fire pump controller should stop immediately.

Connect the remote overspeed alarm input to the fire pump controller from TB-3. This 12 or 24 VDC signal is present when the overspeed switch has operated. If this event occurs, the fire pump engine will stop. The local RESET button must be pressed in order to restart the engine.

Connect the Low Oil Pressure alarm input to the fire pump controller from TB-5. This 0 VDC grounded signal is present when the oil pressure has dropped below the 110 kPa [16 PSIG] setpoint. The engine will continue to operate but immediate attention is necessary in order to prevent excessive damage to the engine or catastrophic engine failure.

Connect the High Water Temperature alarm input to the fire pump controller from TB-5. This 0 VDC grounded signal is present when the engine is running and the coolant temperature has risen above the 93 °C [200 °F] setpoint. The engine will continue to operate but immediate attention is necessary in order to prevent excessive damage to the engine or catastrophic engine failure.

If used, provide permanently installed redundant battery charging systems with connections at TB 6 and TB-8 (+) and TB-11 (-). TB-6 (+) and TB-8 (+) and TB-11 (-) should also be used for remote battery voltage indications at the fire control system or elsewhere.

Ensure electrical continuity and adequate insulation resistance for the installed wiring.

Provide the initial charge on the redundant batteries as per the battery charger's instructions.

Check that both voltmeters on the local control panel indicate the approximate battery voltage.

Coolant System Preparation


Check Cooling System Integrity



NOTE: Refer to Drawing 8708 (CFP83-F10, F20, F30) or Drawing 8710 (CFP83-F40) in Section 13 for hose arrangement.


Check that all coolant hoses are properly installed and that the clamps are tight.

Check that the coolant drain petcock is closed.

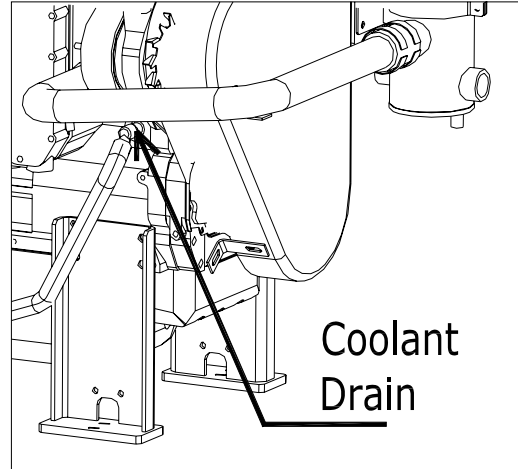


The valve must be in the ON position to prevent engine damage.

Check that the coolant filter valve is open. If required, turn the shutoff to the ON position by rotating the knob from horizontal to vertical in the direction shown.

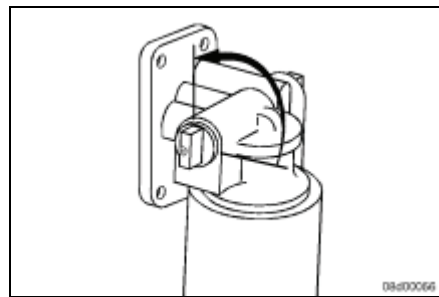

CFP83-F10, F20, F30 Only


Open the aftercooler coolant vent.

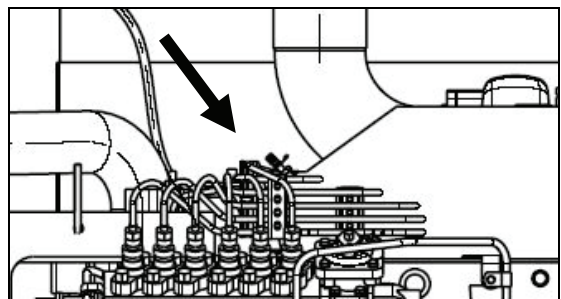

Coolant System Preparation (Cont)

Add Coolant

Remove the pressure cap from the heat exchanger.

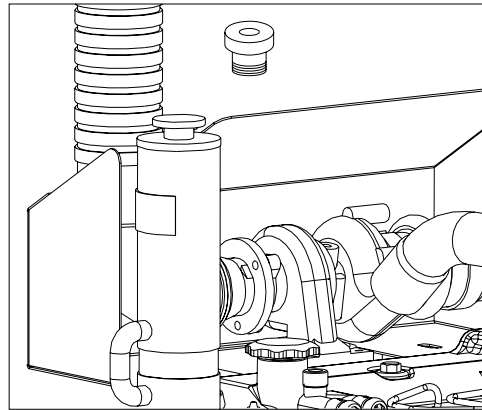

Refer to Cooling System Specifications and Coolant Recommendations and Specifications in Section 10.




NOTE: Use a mixture of at least 50 percent antifreeze and 50 percent water.

NOTE (CFP83-F10, F20, F30 Only): Close the coolant vent when coolant level reaches the vent.

Add coolant until the coolant level is just below the fill tube in the coolant heat exchanger.

Check for leaks. Correct any leaks.

Install the pressure cap on the heat exchanger.

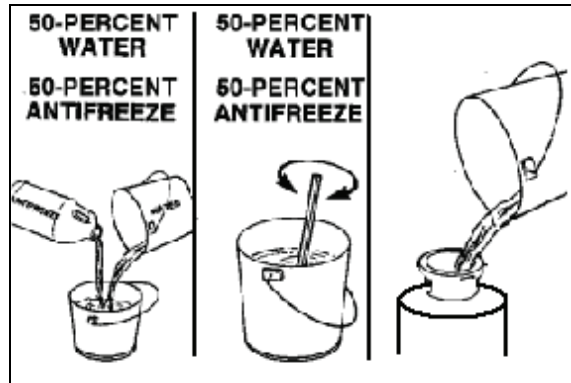


Check Raw Water Supply Lineup



The raw water lines to and from the fire pump must be open, and there must be sufficient water to the heat exchanger when the engine has started. Insufficient water supply will cause overheating, resulting in engine failure.

Check that the pressure gauge isolation valve is open.

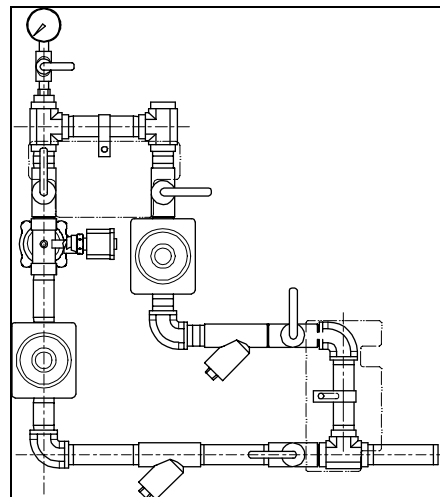


Coolant System Preparation (Cont)

NOTE: The right line is the bypass line. The left line with the solenoid valve is the normal line.

Check that the bypass line outlet valve is closed.

Check that the normal line inlet valve is open.

Check that the normal line outlet valve is open.

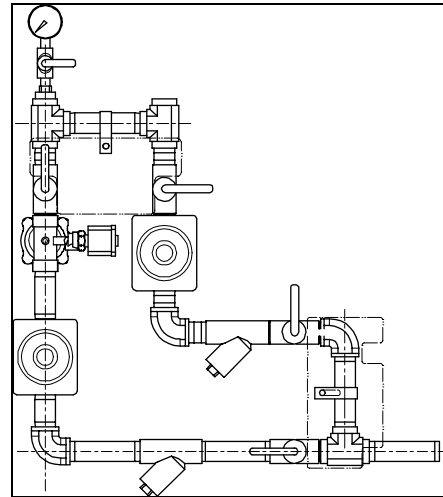


Lubricating Oil System Preparation

Add Lubricating Oil

NOTE: For oil requirements, refer to [Lubricating Oil System Specifications](#) and [Lubricating Oil Recommendations and Specifications](#) in Section 10. No change in oil viscosity or type is needed for new or newly rebuilt engines.

Fill the crankcase with lubricating oil to the “H” (high) mark on the dipstick.

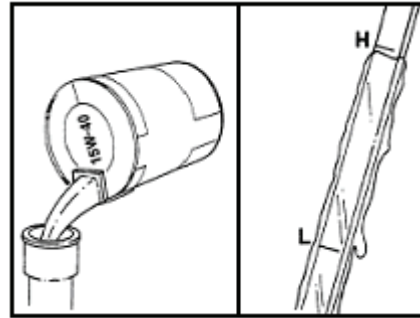


Prime the Turbocharger



New turbochargers must be pre-lubricated before startup. Failure to pre-lube the turbochargers will result in turbocharger bearing failure.

Remove the air intake filter assembly. Refer to [Intake Air Filter Removal/Installation](#) in Section 7.

Remove the turbocharger oil inlet line from the turbocharger bearing housing.

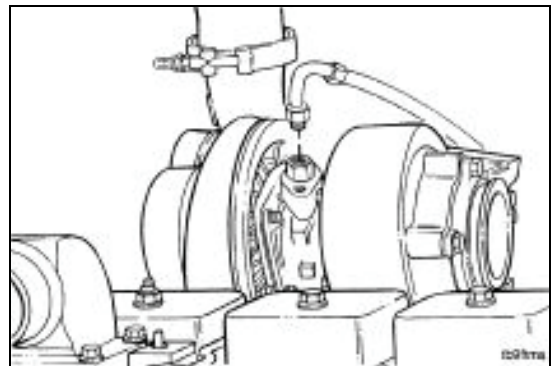


NOTE: Rotate the turbine wheel to allow oil to enter the bearing housing. Any excess oil will drain through the oil drain line.

Lubricate the bearings by pouring 59 to 89 ml [2 to 3 oz] of clean engine lubricating oil into the turbocharger oil supply line fitting.

Tighten the oil supply line.

Torque Value: 24 N•m [18 ft-lb]


Install the air intake filter assembly. Refer to [Intake Air Filter Removal/Installation](#) in Section 7.

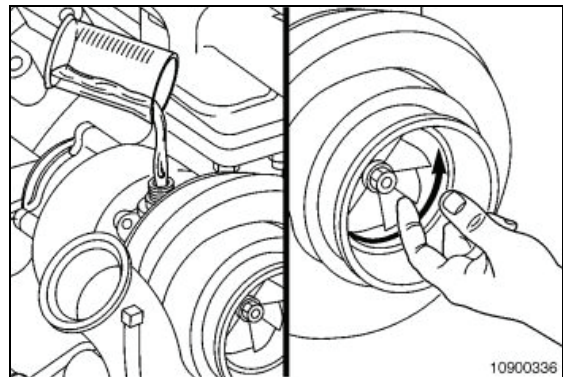

Fuel System Preparation

Fill the Fuel Filter

Unscrew the combination fuel filter assembly and remove it from the engine.

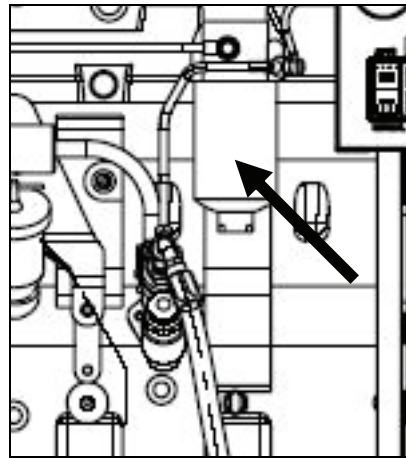


If open, close the water separator drain cock. Refer to Drain Fuel-Water Separator in Section 5.



Lubricate the o-ring seal with clean lubricating oil.

NOTE: Refer to Fuel Recommendations and Specifications in Section 10 for fuel requirements.

Fill the fuel element with fuel.

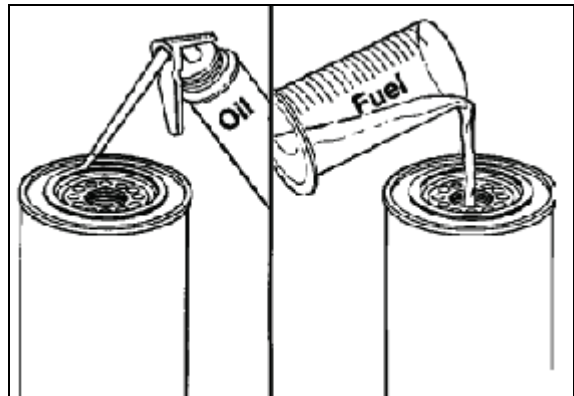


Mechanical over-tightening will distort the threads, filter element seal or filter can.

Install the filter on the filter head.

Tighten the filter until the gasket contacts the filter head surface.

Tighten the filter an additional one-half to three-fourths of a turn, or as specified by the filter manufacturer.

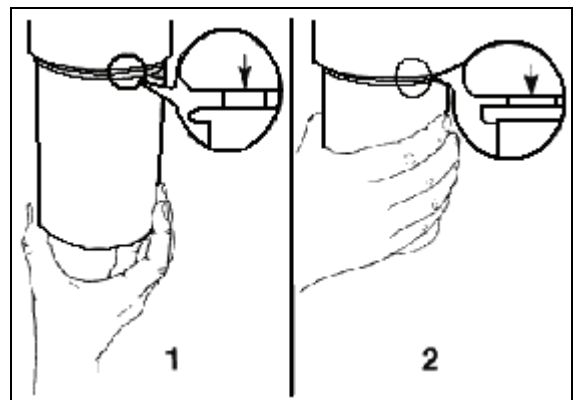

Fuel System Preparation (Cont)

Fill the Fuel Tank

Check that the fuel tank and piping is clean.

Fill the fuel tank with Number 2 Diesel fuel.

Bleed the air from the fuel supply line to the fire pump engine.

Fill the fuel lines to the engine and fill the fuel pre-filter.

Tighten all fuel supply line fittings to stop possible suction leaks.


Bleed the Engine Fuel Lines

Loosen the banjo connector bleed screw at the fuel filter housing.

Operate the plunger on the fuel lift pump until the fuel flowing from the fitting is free of air.

Tighten the bleed screw.

Torque Value: 9 N•m [80 in-lb]

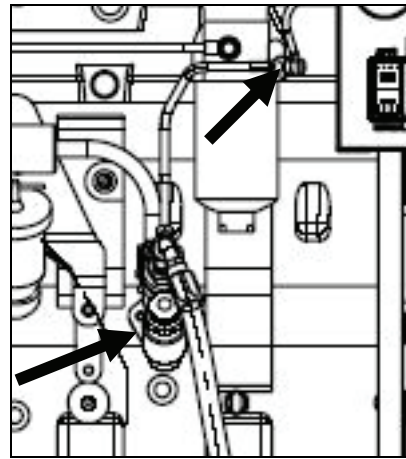


Pre-Start Inspections

Perform a visual inspection as follows:

- Check that there is no apparent damage and that all components are installed.
- Check that the drive belt is properly installed.
- Check that all hoses and tubes are properly installed.
- Check that all electrical connections are properly installed.
- Check that the fire pump is properly installed as per the pump manufacturer's instructions, is correctly aligned, and is free to rotate.

Pre-Lubricate the Engine (CFP83-F10, F20, F30)

Disconnect the connector at the electric fuel solenoid (Fuel Shutoff Valve).

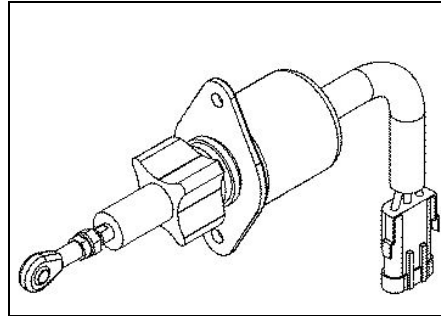


Press the MANUAL position on the AUTO/MANUAL rocker switch.

NOTE: Monitor engine oil pressure on the local control panel. Some pressure indication is expected. Also, the low oil pressure light should go off.


Crank the engine about two revolutions using either the CRANK BATT A or the CRANK BATT B switch positions.

Repeat a second time if oil pressure did not register on the gauge.

NOTE: Troubleshoot as per Lubricating Oil Pressure Low in Section 12 if oil pressure did not register on the gauge.

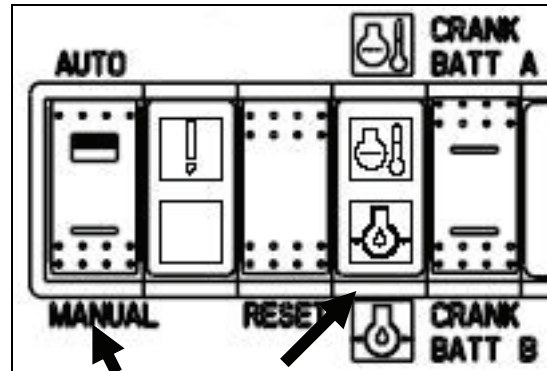


When pre-lubrication has been accomplished, reconnect the connector at the fuel injection pump solenoid (Fuel Shutoff Valve).

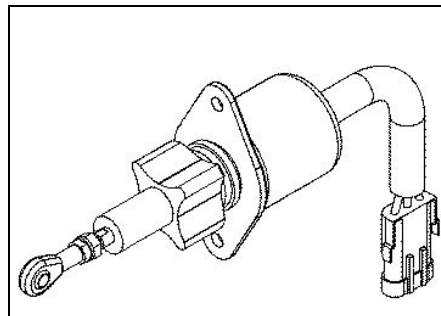

Pre-Lubricate the Engine (CFP83-F40)

Check content, option info not found/available

Disconnect the connector at the electric fuel solenoid.

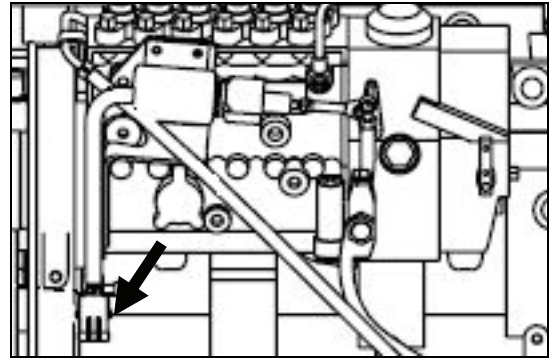


Press the MANUAL position on the AUTO/MANUAL rocker switch.

NOTE: Monitor engine oil pressure on the local control panel. Some pressure indication is expected.


Crank the engine about two revolutions using either the CRANK BATT A or the CRANK BATT B switch positions.

Repeat a second time if oil pressure did not register on the gauge.

NOTE: Troubleshoot as per Lubricating Oil Pressure Low in Section 12 if oil pressure did not register on the gauge.

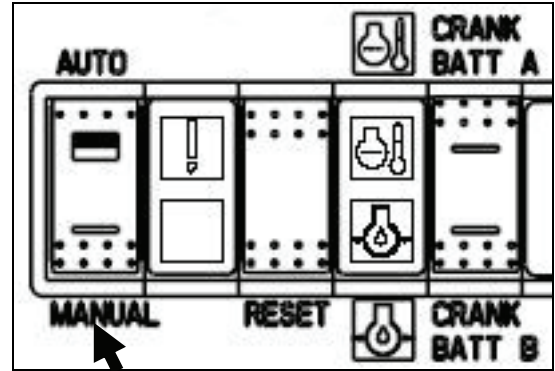

When pre-lubrication has been accomplished, reconnect the connector at the fuel injection pump solenoid.

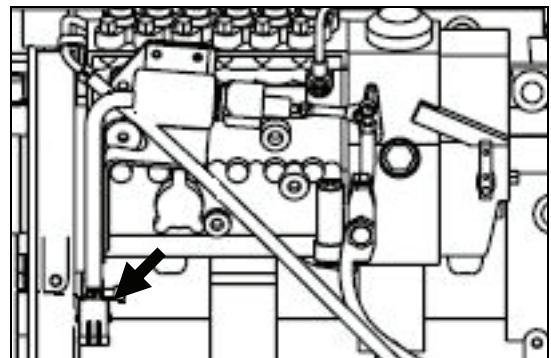


Lubricate Zerk Fittings on Auxiliary Drive Shaft

Some lubrication loss may occur during transport and storage. It is recommended that all drive shafts be re-lubricated upon installation.


Grease zerk fittings as shown.

See Lubricating Oil Recommendations and Specifications in Section 10 for grease specifications.

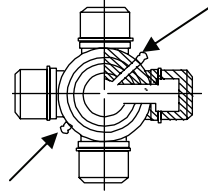


Check Engine to Pump Alignment

Ensure engine position is centered on Frame side to side within $\pm 1/32"$, by measuring outside of frame side to engine support leg mounting pad. (Compare two front engine supports and Two back engine supports).

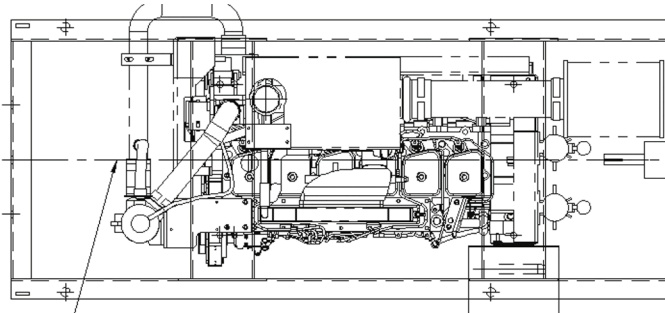


Align engine centerline to pump centerline within $\pm 1/32"$.

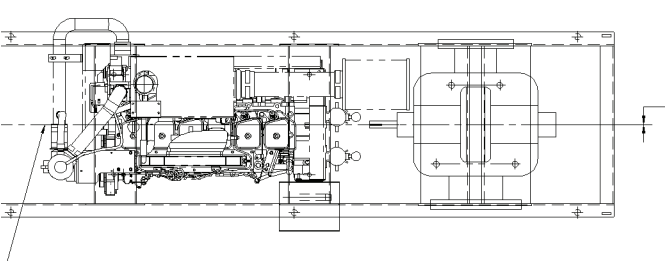


The pump centerline to the engine crank centerline (in vertical plane) is to be $1/2"$ $+0, -1/4"$ offset.

NOTE: The slip joint must rest in the middle third of its travel when installed.

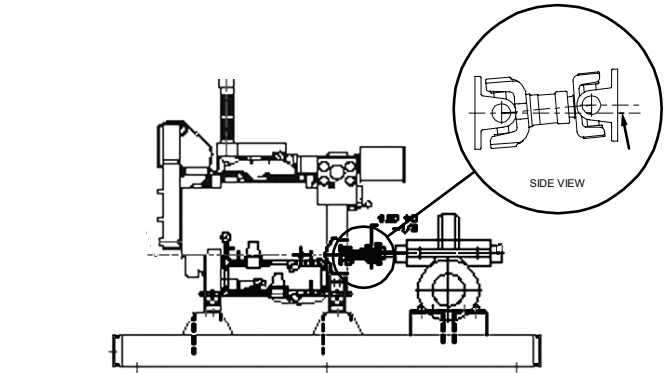

Auxiliary Drive shaft mounting flanges must be parallel within 1.5 degrees.

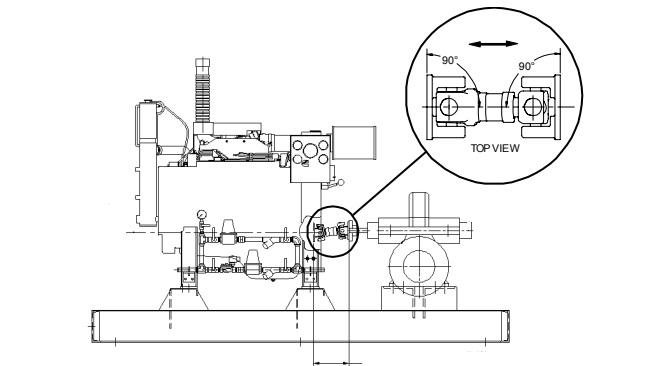

Initial Start-Up

NOTE: Contact personnel responsible for the fire protection system before starting and to obtain approval to service or repair the system.

Check the Raw Water Valves




The raw water lines to and from the fire pump must be open, and there must be sufficient water to the heat exchanger when the engine has started. Insufficient water supply will cause overheating, resulting in engine failure.

Align raw water supply to the raw water supply valves.

Align drainage from the heat exchanger raw water outlet.


Open the raw water supply valves as shown.

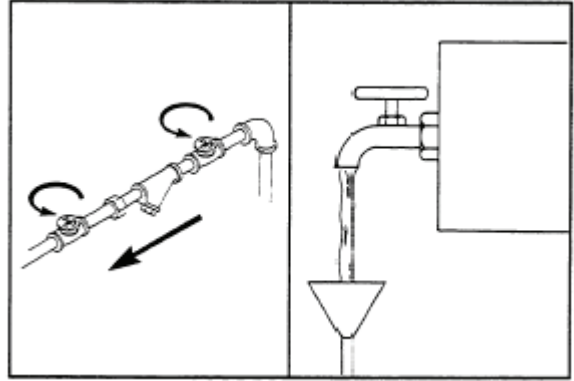

Check the Engine Coolant Supply

Close all cooling system drains.

Verify that the vents are opened.

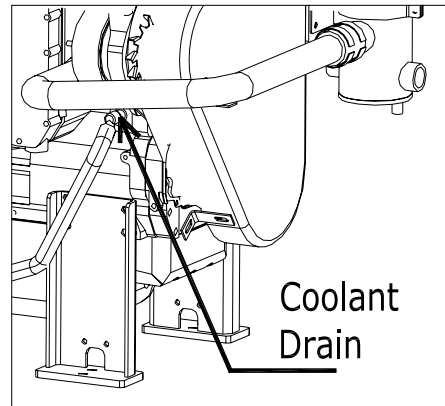


Initial Start-Up (Cont)

Remove the coolant tank cap.

Check coolant level.


Cold coolant level should be between the bottom of the tube and above the top of the heat exchange coils.

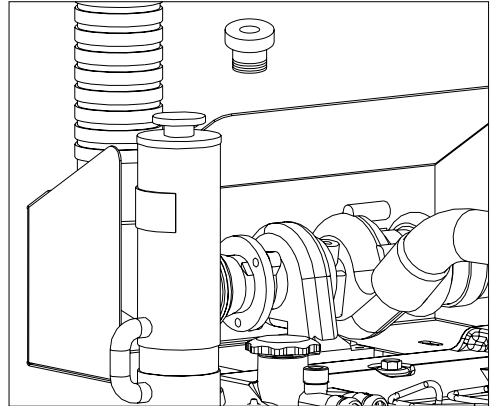

Add coolant if necessary. Use a mixture of at least 50 percent antifreeze and 50 percent water.

Replace the coolant tank cap.

Make a visual check for coolant leaks.

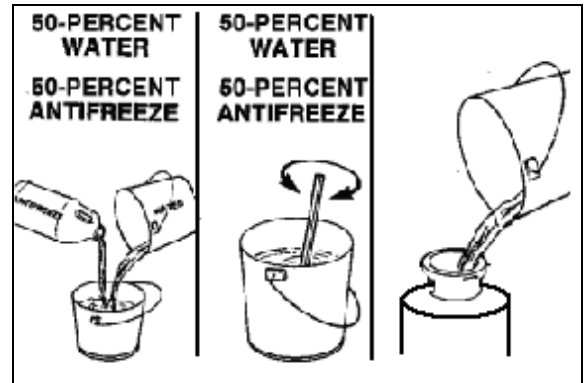

Prime the Fuel System:

Fill the fuel filter (see [Fuel Recommendations and Specifications](#) in Section 10).

Remove the fuel pump suction line and wet the gear pump gears with clean lubricating oil.

Check and fill the fuel tanks.

Check the injectors to be sure they are properly adjusted.


Initial Start-Up (Cont)

Check Initial Crankcase Oil Level:



Never operate the engine with the oil level below the low (“L”) mark or above the high (“H”) mark on the dipstick

Check the oil level.

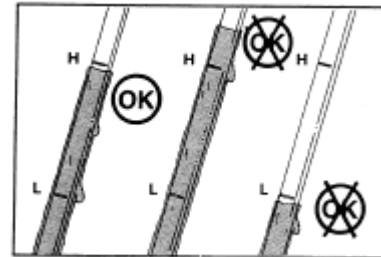


NOTE: No change in oil viscosity or type is needed for new or newly rebuilt engines.

If below the low mark, fill the crankcase to the low “L” (low) mark on the dipstick.

See Lubricating Oil Recommendations and Specifications in Section 10 for oil specifications.

See the Lubricating Oil System Specification for quantity that may be required.

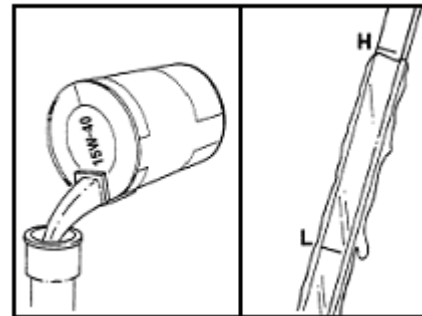

Pre-Lubricate the Turbocharger:




New turbochargers must be pre-lubricated before startup. Failure to pre-lube the turbochargers will result in turbocharger bearing failure.

Remove the turbocharger oil inlet line.

Pre-lubricate the housing by adding 50 to 60 cc (2 to 3 oz.) of clean engine lubricating oil.

Replace the line.

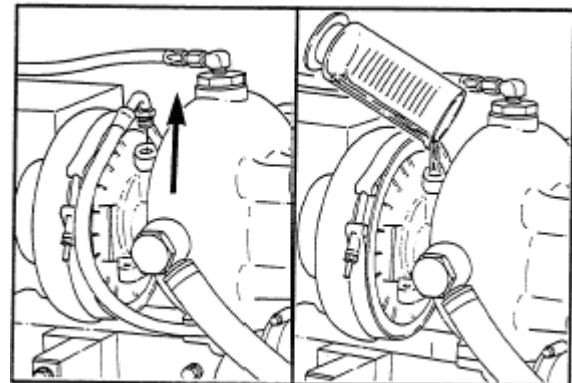

Pre-Lubricate the Engine

NOTE: Do not prime the engine lubricating system from the by-pass filter.

On the top of the fuel pump, disconnect the electric fuel solenoid. Make sure that the fuel pump solenoid wire terminal does not touch the engine.


Close the fuel shutoff valve from the fuel tank to prevent the engine from starting.

Prime the engine lubricating system until a 30 psi [207 kPa] minimum pressure is obtained.

Initial Start-Up (Cont)


NOTE: Use the fire pump controller or manual setting from the gauge panel to crank the engine through two cranking cycles.

Crank the engine at least 15 seconds, while maintaining the external oil pressure at a minimum of 15 psi [103kPa].

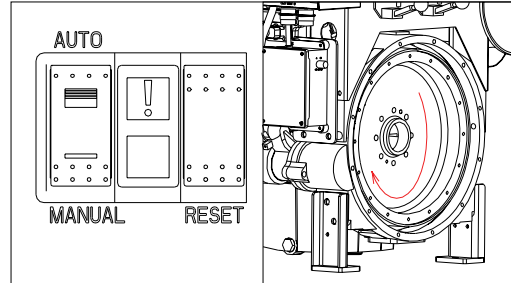

Never operate the engine with the oil level below the low ("L") mark or above the high ("H") mark on the dipstick

Check the oil level again.

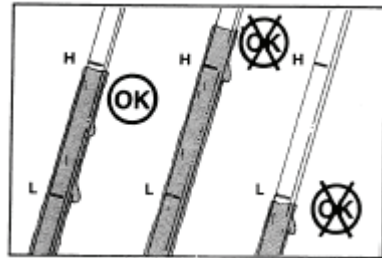


Initial Start-Up (Cont)

NOTE: No change in oil viscosity or type is needed for new or newly rebuilt engines.

If below the high mark, fill the crankcase to the high “H” (high) mark on the dipstick.


See Lubricating Oil Recommendations and Specifications in Section 10 for oil specifications.

See the Lubricating Oil System Specification for quantity that may be required.

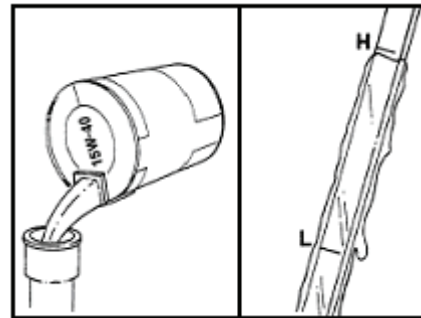

Initial Test Run

Move the throttle lever to mid-speed position.

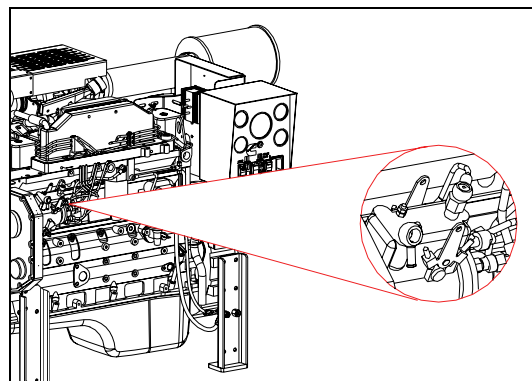

Start the engine.

Immediately move the throttle to the low idle position.

Allow the engine to operate at low idle speed (700 RPM).

Check the lubricating oil pressure within 15 seconds after the engine starts.


Operate the engine at set point for 8 to 10 minutes.

Check for leaks, unusual noises, or other indications of incorrect operation. Shut off the engine and correct any problems found during the inspection before proceeding.

After 8 to 10 minutes, stop the engine.

Check the engine oil and expansion tank coolant levels. Top off if necessary.

Clean the raw water strainer.

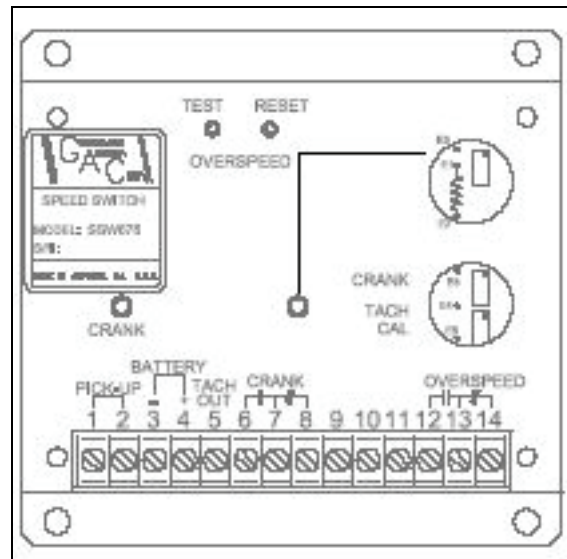

Initial Start-Up (Cont)

Supplemental Test Run

Start the engine.

Bring it to the fire pump
required operating speed.

Adjust the raw water pressure
regulator to obtain the required
pressure.


Readjust the engine speed if
necessary.

Overspeed Adjustment Procedure:


NOTE: Overspeed is already
set at factory.

Remove the calibrating screw
cover from the electronic
overspeed switch.

Turn the small screw on the
potentiometer near the word
“OVERSPEED” clockwise to
increase trip speed.

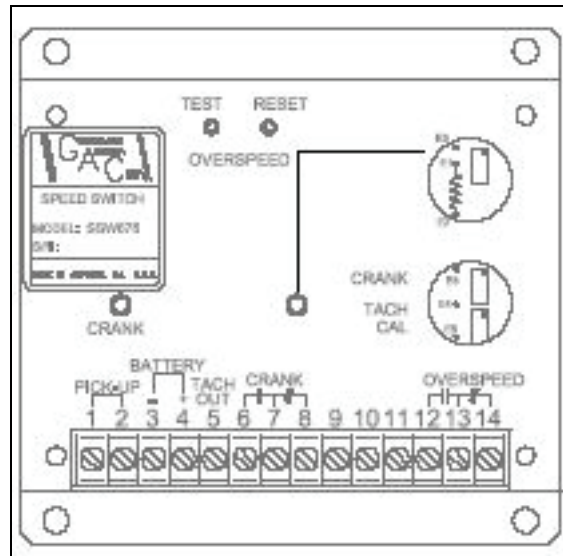

Move the throttle to the half
throttle position. Start the
engine and move the throttle
to the minimum position.

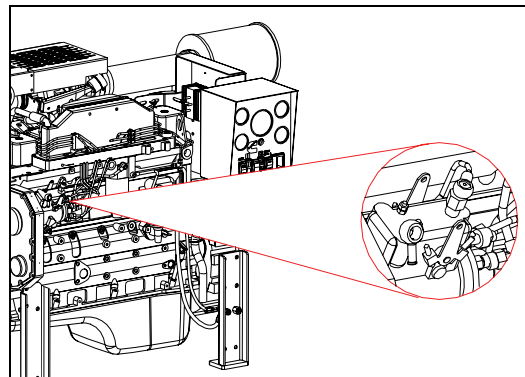


Initial Start-Up (Cont)

NOTE: Test button triggers overspeed at 10% below normal.

Depress the “TEST” button push-button on the inside of the panel.


Turn the screw to increase speed.

Verify overspeed trip/indications.

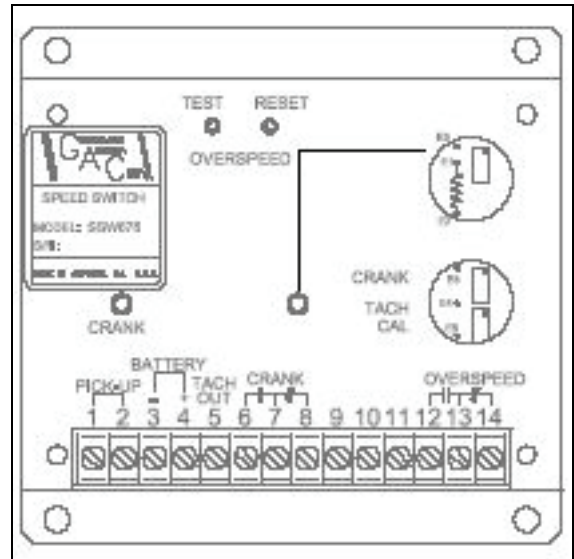

Operate the RESET switch on the front of the engine control panel.

Repeat if necessary to further adjust the overspeed stop setting.

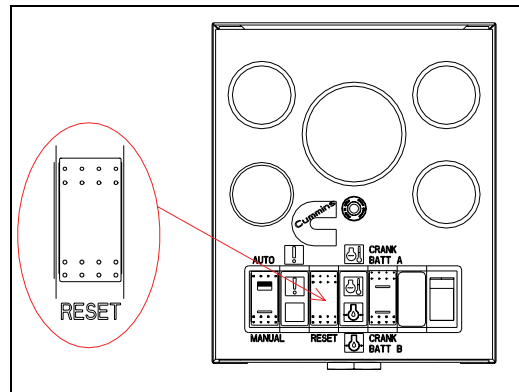


Start the engine.

Check operation at rated speed.

Shut off the engine.

Press the “AUTO” button so the fire pump will be ready to start automatically.

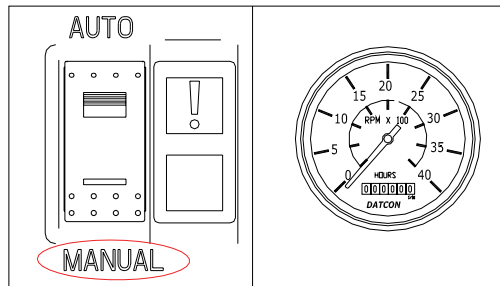

Initial Start-Up (Cont)

Completion

Support fire pump testing as per NFPA or applicable requirements.

Contact operating personnel responsible for fire protection system that engine is ready for service.

Obtain authorized signature of acceptance.

Initial Start

NOTE: The object of this test is to check that the engine starts and operates normally with oil pressure being displayed and raw water flow being established to the coolant heat exchanger. Operation at the factory-adjusted rated speed is also checked.

NOTE: If the engine does not start, vent the fuel system. Refer to Air in Fuel in Section 7, for instructions on how to vent the fuel system.

NOTE: If the engine still will not start, troubleshoot as per Engine Cranks But Will Not Start (No Exhaust Smoke) or Engine Difficult to Start or Will Not Start - Exhaust Smoke Present in Section 12.

NOTE: When the engine starts, immediately check that oil pressure is displayed. It should be on-scale within a few seconds. Stop the engine if oil pressure is not displayed within about 15 seconds.

NOTE: When the engine starts, immediately check that raw water flow is established through the coolant heat exchanger. Raw water flow should be established immediately but some delay may occur before the flow exits the heat exchanger drain connection.

NOTE: Rated speed is displayed on the Factory Setting Tag described in Section 2.

NOTE: If the engine fully loaded, it should operate at rated speed. Unloaded, it may operate about 10% faster. If it becomes necessary to adjust the engine's actual speed to match the rated value, refer to Rated Speed Setpoint Adjustment (CFP83-F10, F20, F30) or Rated Speed Setpoint Adjustment (CFP83-F40) in this section.

○	FACTORY SETTING	○
	ENGINE SPEED SETTING: (@ HP SETTING)	_____
	OVERSPEED SWITCH SETTING:	_____
○		○

Initial Start (Cont)

Start the engine using either the CRANK BATT A or the CRANK BATT B switch positions.

Check that the engine starts and operates at about rated speed.

NOTE: If oil pressure is not present or if the Low Oil Pressure Light does not go out, stop the engine and troubleshoot as per Lubricating Oil Pressure Low in Section 12.


Check that lubricating oil pressure is displayed within 15 seconds after the engine starts.

NOTE: Raw water should be flowing through the heat exchanger and water pressure shown on the local pressure gauge should be no more than 414 kPa (60 psig).

Check that raw water is flowing through the heat exchanger.

Check that raw water supply pressure is correctly adjusted.

Operate the engine for 8 to 10 minutes.

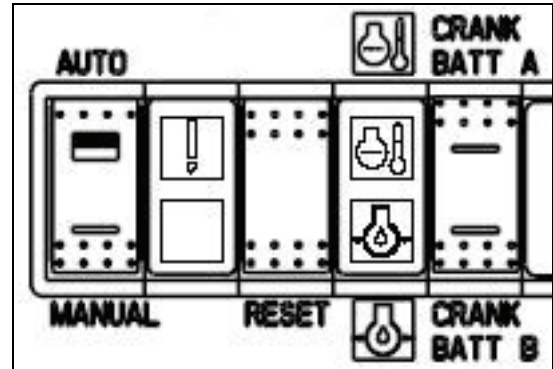

Check for leaks, unusual noises, or other indications of incorrect operation.

Shut off the engine by pressing the AUTO position on the AUTO/MANUAL rocker switch and by momentarily pressing the RESET switch.


Check that raw water flow stops automatically shortly after the engine stops.

Correct any problems found during the inspection before proceeding.

Check the engine lubricating oil level. Refer to Check Lubricating Oil Level in Section 5. Top off if necessary.

Check the coolant heat exchanger's coolant level. Refer to Check Coolant Level in Section 5. Top off if necessary.

Check the raw water strainer. Clean the strainer if necessary.

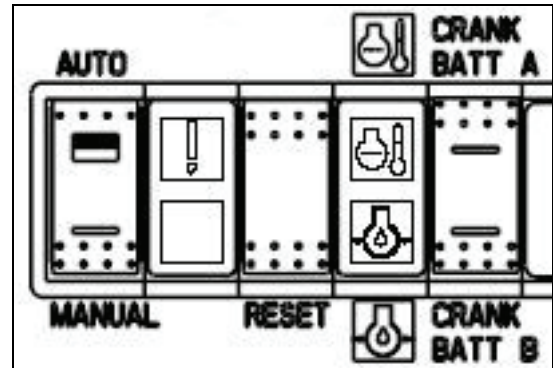

Second Start


The object of this test is to check that the engine operates normally with coolant temperature being maintained. Oil pressure is checked at rated speed.

NOTE: Adjust engine operating speed as per Rated Speed Setpoint Adjustment below.

Start the engine and observe that it is operating at rated speed.

Check that the oil pressure is as specified in Lubricating Oil System Specifications in Section 10.

NOTE: If oil pressure is not within the rated range, troubleshoot as per Lubricating Oil Pressure High or Lubricating Oil Pressure Low in Section 12.

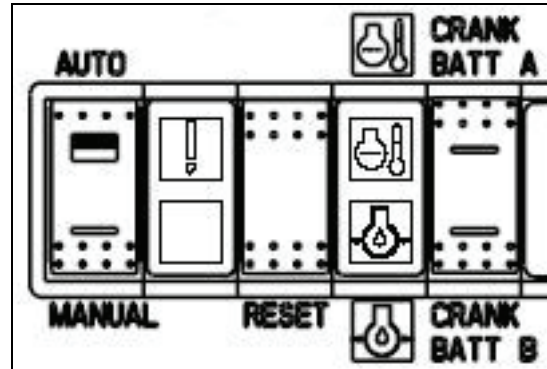

NOTE: If temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in Troubleshooting Section 12.

Check that engine operating temperature stabilizes between about 82 and 95 °C [180 and 203 °F].


Shut off the engine.

Correct any problems found before proceeding.

Check the engine lubricating oil level. Refer to Check Lubricating Oil Level in Section 5. Top off if necessary.

Check the coolant heat exchanger's coolant level. Refer to Check Coolant Level in Section 5. Top off if necessary.

Check the raw water strainer. Clean the strainer if necessary.

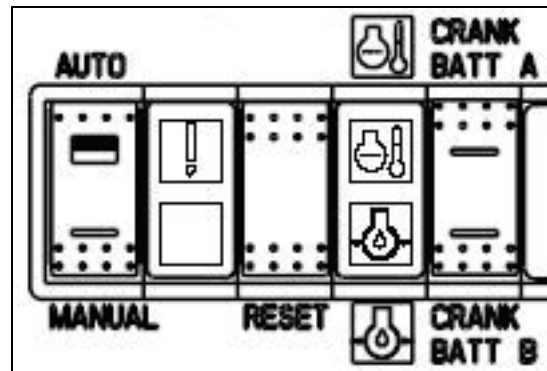

Rated Speed Setpoint Adjustment (CFP83-F10, F20, F30)


NOTE: If required, use this section to adjust the normal operating speed to the nameplate value.

NOTE: Rated speed is displayed on the Factory Setting Tag described in Section 2.

○		○
FACTORY SETTING		
ENGINE SPEED SETTING: (@ HP SETTING)	_____	
OVERSPEED SWITCH SETTING:	_____	○
○		○


Start the engine.

Observe that the engine starts and accelerates the currently adjusted speed setpoint.

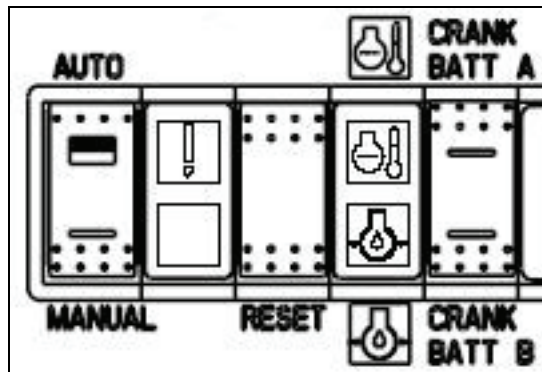

Adjust the speed setpoint to rated speed.

NOTE: Rated speed is adjusted by locating the threaded linkage rod on the fuel pump side of the engine.

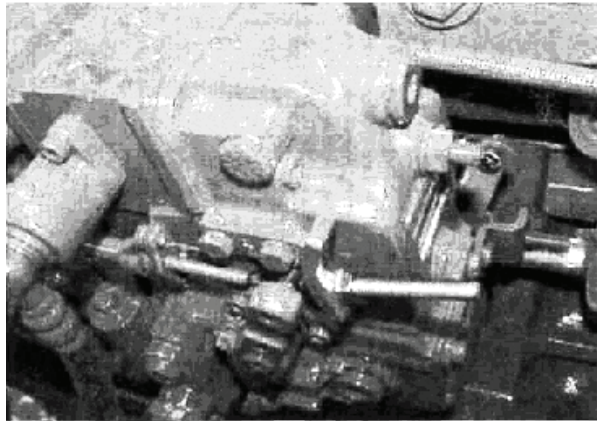

Rated Speed Setpoint Adjustment (CFP83-F10, F20, F30) (Cont)


To increase the rated speed, turn the bolt on the right side of the throttle bracket clockwise. The adjustment of the bolt will pivot the throttle bracket counter-clockwise and will allow more fuel through the pump to speed up the engine.

Loosen the lock nut and turn bolt clockwise to allow for more RPM speed. When rated speed is correct, tighten lock nut against stop.

To decrease the speed, turn the bolt counter-clockwise on the right side of the throttle bracket. The adjustment of the bolt will pivot the throttle bracket clockwise and will allow less fuel to flow through the pump to slow down the engine.

When rated speed is correct, tighten the locking nuts against the stops.

The threaded bolt on the left side of the bracket is for maximum speed and may also need to be adjusted if maximum speed cannot be reached. The same adjustment sequence can be performed for maximum speed adjustment.

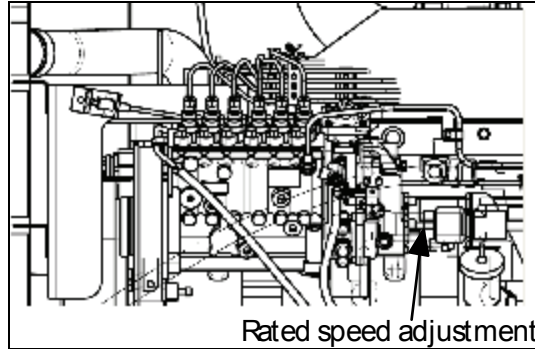

Stop the engine.

Start the engine.

Observe that the engine starts and accelerates to the rated speed setpoint.

Stop the engine. Repeat the above adjustment until the desired speed is attained.

Rated Speed Setpoint Adjustment (CFP83-F40 Only)


NOTE: If required, use this section to adjust the normal operating speed to the nameplate value.

NOTE: Rated speed is displayed on the Factory Setting Tag described in Section 2.

<input type="radio"/>	FACTORY SETTING	<input type="radio"/>
ENGINE SPEED SETTING: _____		
(@ HP SETTING)		
OVERSPEED SWITCH SETTING: _____		
<input type="radio"/>		<input type="radio"/>

Start the engine.

Observe that the engine starts and accelerates the currently adjusted speed setpoint.

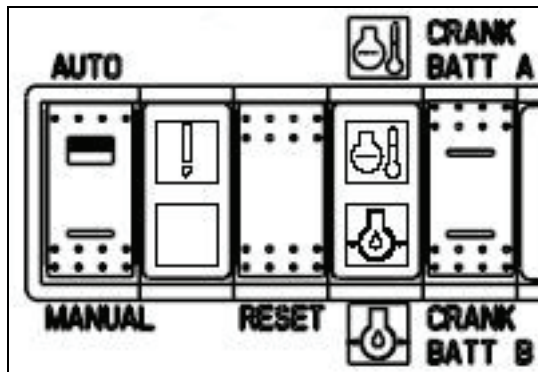

Adjust the speed setpoint to rated speed.

Rated Speed Setpoint Adjustment (CFP83-F40) (Cont)


To increase the rated speed, turn the bolt clockwise on the right side of the throttle bracket. The adjustment of the bolt will pivot the throttle bracket to allow more fuel through the pump to speed up the engine.

The nut on the right, closest to the bracket will need to be tightened to lock in the adjusted speed set point.

Loosen lock nuts and turn threaded bolt clockwise to allow for more RPM speed. When rated speed is correct, tighten lock nut against stop.

To decrease the speed, turn the threaded bolt counter-clockwise. The adjustment of the bolt in a counter-clockwise direction will allow less fuel to flow through the pump to slow down the engine.

When rated speed is correct, tighten the locking nut against the stops.

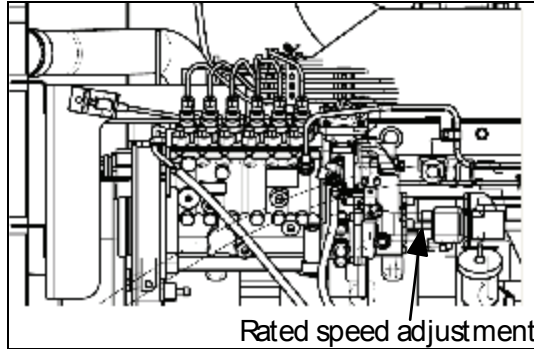

Stop the engine.

Start the engine.

Observe that the engine starts and accelerates to the rated speed setpoint.

Stop the engine. Repeat the above adjustment until the desired speed is attained.

Overspeed Setpoint Adjustment and Testing


Overview

Overspeed setpoint adjustment and testing is a repetitive process. Use the Adjustment Procedure to change the setpoint. Use the Test Procedure to check the setpoint. Repeat the adjustments and checks until the desired setpoint is demonstrated. When the overspeed setpoint is successfully demonstrated, then check that the engine operates normally while not being tested.

NOTE: The overspeed trip setpoint is displayed on the Factory Setting Tag described in Section 2.

NOTE: The overspeed setpoint must be set at between 115 and 120% of the engine's rated speed.

The speed switch located on the engine's local control panel has a TEST button which lowers the currently adjusted overspeed by 10%. Thus, an overspeed setpoint of 2112 rpm would be reduced to $(2112 * 0.9 =) 1901$ RPM when the test button is pressed.

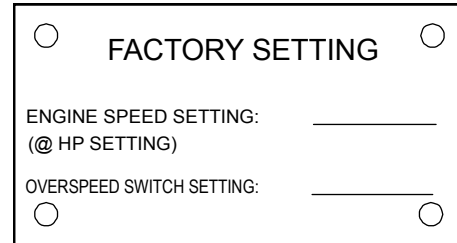


Adjust the Speed Switch:

Lower the cover on the engine's local control panel.

Disconnect the engine speed sensor signal from PICK-UP terminals 1 and 2.

Connect a signal generator capable of providing between 0.25 to 120 VAC RMS signal to the switch. The signal must be proportional to the engine's rated speed.

Provide an overspeed signal at the specified overspeed switch setting frequency.

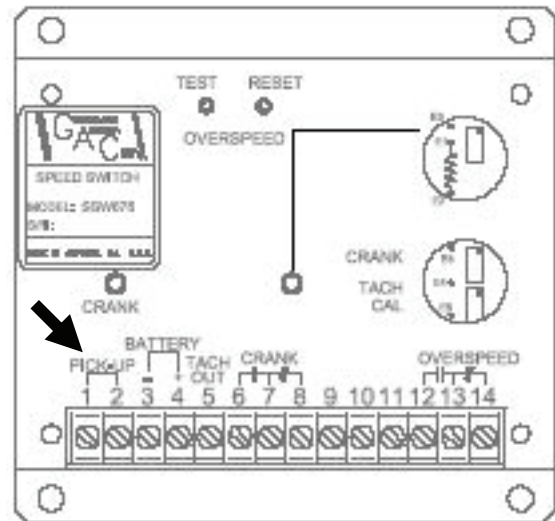

Overspeed Setpoint Adjustment and Testing (Cont)

Remove the calibrating screw cover from the electronic overspeed switch.

NOTE: Turn the small screw on the potentiometer near the word “OVERSPEED” clockwise to increase trip speed. Turn it counter-clockwise to reduce trip speed.

If the OVERSPEED light is illuminated with the signal present, perform the following steps:

Reduce the signal frequency.

Press the RESET button.

Turn the potentiometer clockwise to raise the setpoint.

Increase the signal frequency to setpoint.

With the OVERSPEED light off, slowly turn the potentiometer counter-clockwise until the light is just illuminated.

NOTE: Repeat the adjustments as required to make the finest adjustment practical.

When the setpoint is adjusted, perform the following steps:


Replace the screw cover at the potentiometer.

Disconnect the signal generator.

Reset the light.

Reconnect the speed sensor input.


Perform the Test Procedure as outlined to check the effect of the adjustment.

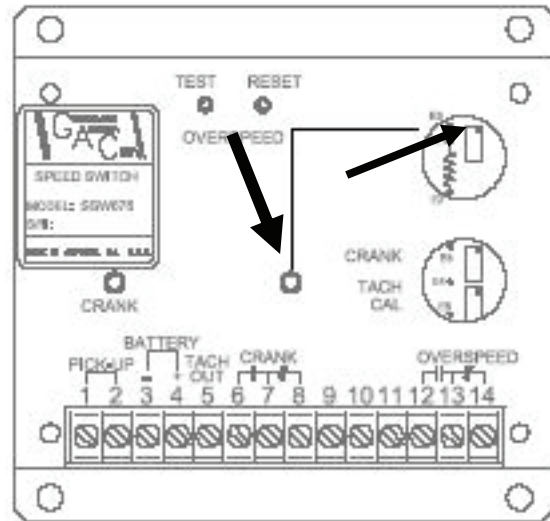

Overspeed Setpoint Adjustment and Testing (Cont)

Test Procedure

NOTE: The overspeed trip setpoint is displayed on the Factory Setting Tag described in Section 2.

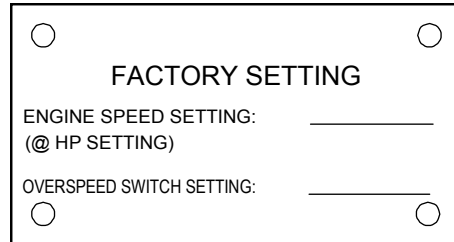


Start the engine.

Observe that the engine starts and operates at about rated speed.

NOTE: Monitor engine speed on the tachometer. Record the observed engine speed when it trips. It must trip between 115 and 120% of rated speed.

NOTE: Do not exceed 120% of rated speed. If the engine does not trip at or below 120%, stop the engine and Adjust the Speed Switch.

Adjust the mechanical throttle adjustment to increase engine speed to the setpoint.

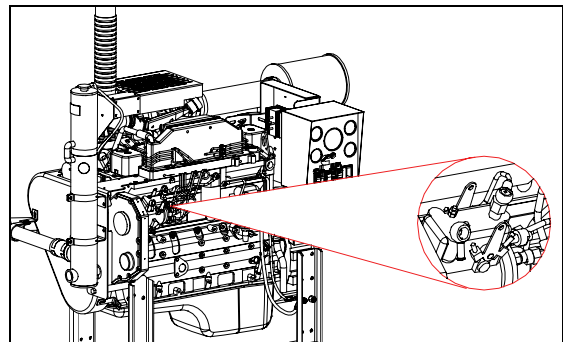

Observe that the engine stops automatically and that the overspeed trip light is illuminated.


Verify that the engine tripped at a speed between 115 and 120% of rated speed.

Press the RESET button on the speed switch.

Press the RESET switch on the front of the engine control panel.

Observe that the overspeed light has extinguished.

NOTE: If required by the local authority, restart the engine at the current mechanical throttle setpoint to demonstrate a run-away overspeed shutdown as specified by Underwriter's Laboratory UL 1247.

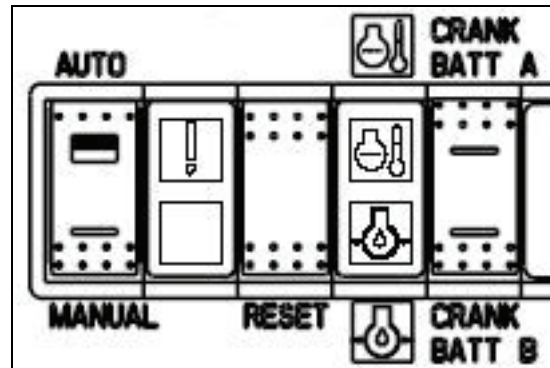


Overspeed Setpoint Adjustment and Testing (Cont)

Set/Check Normal Operation

Start the engine.

Adjust engine speed for rated value. Refer to Rated Speed Setpoint Adjustment (CFP83-F10, F20, F30) or Rated Speed Setpoint Adjustment (CFP83-F40) in this section.

Stop the engine.

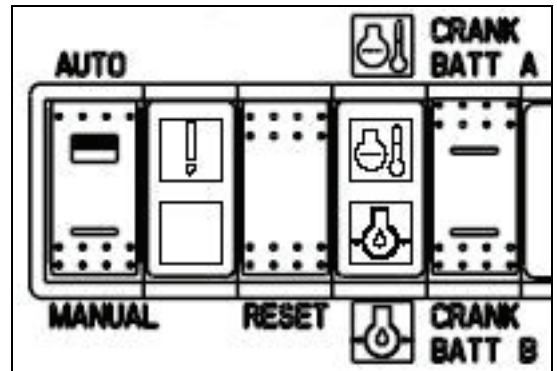

Crank Terminate Adjustment and Testing


NOTE: The crank terminate signal to the remote fire pump controller informs the controller that the engine has started. This allows the controller to terminate the selected crank signal to the engine. This crank terminate signal is produced by the overspeed switch in the engine’s local control panel. The setpoint for the crank terminate signal is adjusted at the factory to a value above normal idling speeds but less than the rated speed. The setpoint should not require adjustment unless it is necessary to test the switch operation or to replace the overspeed speed switch.

NOTE: If using this procedure for troubleshooting, perform the test portion prior to making any adjustments. Verify automatic reset of the crank terminate signal.

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

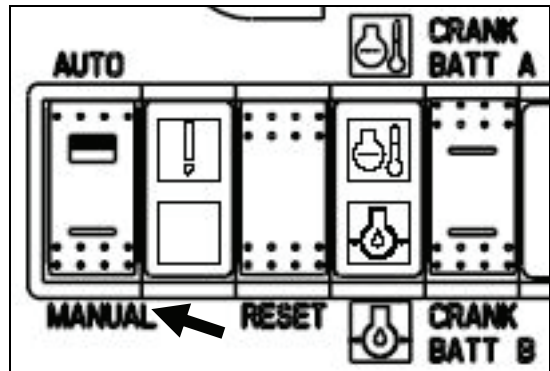


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

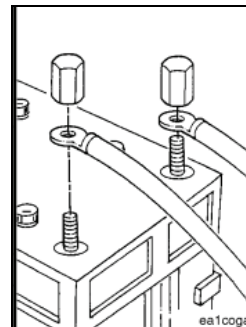

Crank Terminate Adjustment and Testing (Cont)

Adjust

NOTE: Refer to Drawing 10423 Sheet 1 in Section 13.

Open the engine's local control panel cover.

Disconnect the GRAY/RED (MPU +) wire from PICK-UP terminal 1 at the speed switch.

Disconnect the GRAY/BLK (MPU -) wire from PICK-UP terminal 1 at the speed switch.


Connect a signal or pulse generator to the switch inputs with the same signal polarity.

Adjust the pulse generator to about 1100 cycles or pulses per second.

Remove the cover from the speed switch CRANK/TACH CAL potentiometers.

If, with this signal, the CRANK LED is illuminated on the speed switch, turn the CRANK potentiometer E5 clockwise until the LED extinguishes.

Then, turn the CRANK potentiometer E5 slowly counterclockwise until the CRANK LED illuminates.

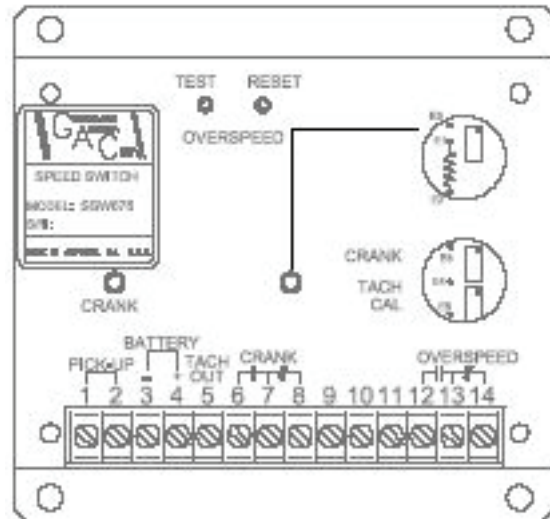


Replace the cover on the speed switch.

Remove the signal generator.

Connect the GRAY/RED (MPU +) wire at PICK-UP terminal 1 at the speed switch.

Connect the GRAY/BLK (MPU -) wire at PICK-UP terminal 1 at the speed switch.

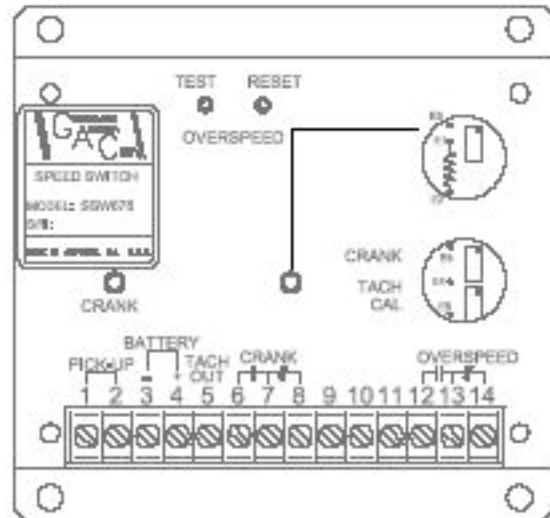


Crank Terminate Adjustment and Testing (Cont)

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.

Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

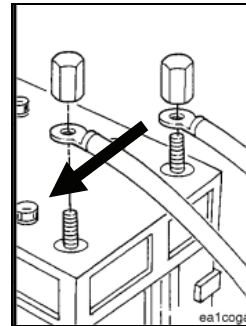

Test

NOTE: Monitor fire pump controller operations from the controller. Check for the crank terminate signal at the input terminals and observe that the controller removes the crank output to the engine.

Connect a digital voltmeter at crank terminate output of the local control panel between TB2 (+) and TB11 (-). Refer to Drawing 10423 Sheet 1 in Section 13.

NOTE: The engine's rated speed is displayed on the Factory Setting Tag described in Section 2.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Start the engine from the fire pump controller.

Observe that the engine starts and accelerates to about rated speed.


Observe that the CRANK terminal LED on the speed switch is illuminated.

Check that the local digital voltmeter indicates the 12 VDC standard (24 VDC optional) signal output voltage.

When testing is done, stop the engine.

Remove the digital voltmeter.

Close the cover on the engine control panel.

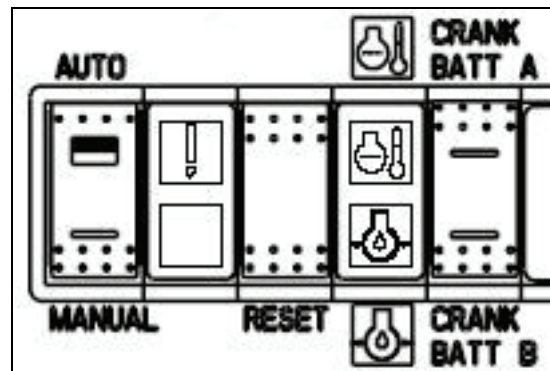

Isolated Acceptance Testing

Demonstrate the manual local start, operation, and shutdown of the fire pump from the engine's local starter-solenoid controls. Demonstrate that the engine will operate in the event of blown fuses or other faults in the local control panel. Demonstrate manual engine speed control. Manual raw water valve operations are required.

Demonstrate the manual local start, operation, and shutdown of the fire pump from the engine's control panel. Demonstrate that the engine starts, operates at speed, and stops in the event that the fire pump controller is not functioning.

Demonstrate the start of the fire pump engine using each battery set separately.

Demonstrate that the fire pump engine alternator operates while the engine is running. Demonstrate that any customer supplied battery charging systems operate when the engine is not running.

Integrated Acceptance Testing

Demonstrate the start-up, operation, and shutdown of the fire pump engine in response to operations of the customer-installed fire pump controller. Perform this testing with the testing of the fire pump controller.

Demonstrate that the fire pump controller provides design indications and/or alarms for simulated engine oil pressure, water temperature, and overspeed faults.

Demonstrate the actual operation of the crank terminate output from the overspeed switch.

Participate in any flushing, pressure testing, flow testing, or capacity testing required for the fire protection system.

Complete the Cummins Fire Power Start-Up Inspection (SUI) Checklist. This is available on the Cummins Fire Power web site (www.cumminsfirepower.com/startup).

When these items have been demonstrated, contact operating personnel responsible for fire protection system that engine is ready for service.

General Operating Information

Cummins fire pumps are tested before being shipped from the factory and are ready to put to work in application regarding to fire emergencies.

Correct care of your engine will result in longer life, better performance, and more economical operation.

Follow the daily maintenance checks listed in Maintenance Guidelines, Section 4.

Check the water temperature and oil pressure indicators, warning lights, and other gauges daily to make sure they are operational.

Normal Remote Starting Procedure

The fire pump engine starts automatically upon receipt of the start command from the customer installed fire control panel. The remote command starts the engine when the AUTO/MANUAL rocker switch at the local; control panel is in the AUTO position. The remote start command consists of either the Crank A or the Crank B signal. Only one should be selected.

The engine continues to operate as long as the run signal is present. When the run signal is lost, the engine promptly stops.

When the engine starts, the crank terminate signal is sent to the fire control panel to indicate that the engine is running. How this is displayed depends upon the fire control panel manufacturer. This indication should be checked in the event that an automatic start is initiated. If the signal is not present, the engine can be started locally by using the Emergency Starting Procedure in this section.

The engine may be stopped locally by selecting the manual position on the AUTO/MANUAL rocker switch and by pressing the local RESET switch.

Normal Local Starting Procedure

Overview

The fire pump engine is started locally for testing and maintenance. Local starts for testing will be performed at rated speed. That is, the engine starts and promptly ramps up to operating speed. If it is necessary to operate the engine at idle speed for maintenance or troubleshooting, the engine speed must be manually reduced. After maintenance or troubleshooting, the speed must be manually reset to the rated value shown on the Factory Setting Tag in see Section 2.

Local Starting Procedure for Testing



To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each attempt to start (electrical starting motors only).

Start the Engine

Press the MANUAL position on the AUTO/MANUAL rocker switch.


Observe the battery voltages displayed on the engine control panel. Use the battery with the highest indicated voltage.

NOTE: Depress the selected switch for up to 15 seconds or until the engine starts. Repeat up to three times if necessary.

Start the engine using either the CRANK BATT A or the CRANK BATT B rocker switch positions.


NOTE: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.

Engine oil pressure must be indicated on the gauge within 15 seconds after starting.

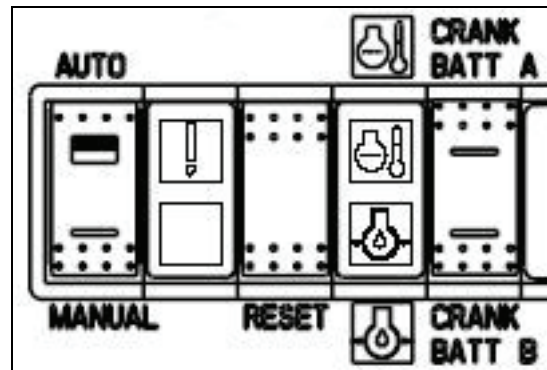

Stop the Engine

To stop the engine, select the AUTO position on the AUTO/MANUAL rocker switch and press the RESET switch.

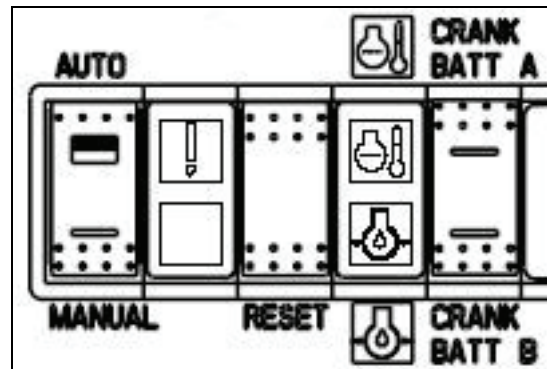

Normal Local Starting Procedure (Cont)

Local Starting Procedure for Maintenance or Troubleshooting

Engines used in fire pumps or standby service are expected to transition from crank to full load within a short period of time.



Do not idle the engine for excessively long periods. Long periods of idling (more than 10 minutes) can damage an engine because combustion chamber temperatures drop so low the fuel will not burn completely. This will cause carbon to clog the injector spray holes and piston rings, and can cause the valves to stick. If the engine coolant temperature becomes too low (60°C [140°F]), raw fuel will wash the lubricating oil off the cylinder walls and dilute the crankcase oil; therefore, all moving parts of the engine will not receive the correct amount of lubrication.

Adjust the fuel pump as per instructions in Section 7 to get idle speed.

Manually position the fuel pump at mid throttle position.

Press the MANUAL position on the AUTO/MANUAL rocker switch.




To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each attempt to start (electrical starting motors only).

Start the engine using either the CRANK BATT A or the CRANK BATT B switch positions.

NOTE: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.


Engine oil pressure must be indicated on the gauge within 15 seconds after starting.

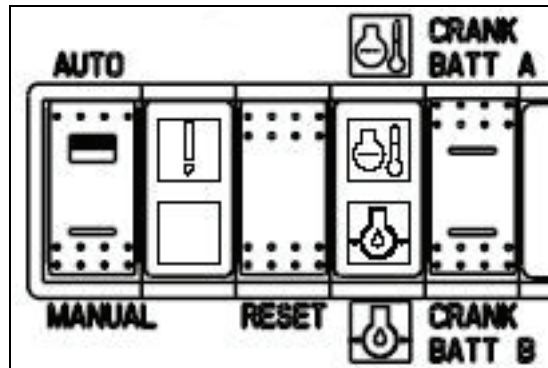

Normal Local Starting Procedure (Cont)



Do not operate the engine at low idle for long periods. Long periods at low idle, more than 10 minutes, can damage an engine because combustion chamber temperatures will decrease and the fuel will not completely burn. This will cause carbon to build up around the injector spray holes and piston rings, which can cause the valves to stick. To avoid damage, operate the engine at higher idle.

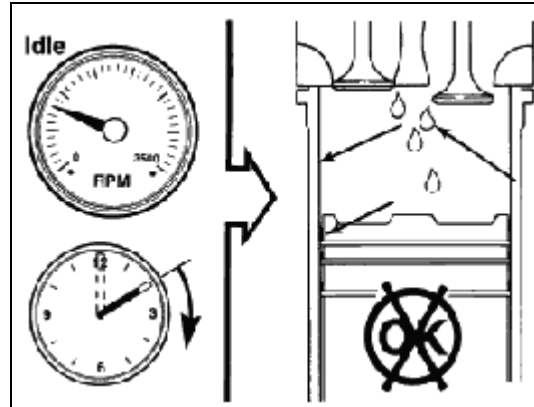

When the engine starts, immediately position the throttle linkage to an idle speed setting of about 700 RPM.

To stop the engine, select the AUTO position on the AUTO/MANUAL rocker switch and press the RESET switch.

Adjust the engine to operate at rated speed as per instructions in this section.

Jumpering the Batteries

NOTE: If a battery charging system is not provided, the engine can be started using known good batteries to provide a temporary power source. Once the engine is started, disconnect the added batteries and allow the engine's alternator to charge the existing batteries. It may take some time to charge the batteries with this method.

NOTE: For maintainable lead acid batteries as supplied by Cummins N Power, check the state of charge by the measurement of battery cell specific gravity. Refer to [Battery Testing](#) in Section 7 for more information.



Batteries can emit explosive gases. To avoid personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.




When using jumper cables to start the engine, make sure to connect the cables in parallel: Positive (+) to positive (+) and ground (-) to ground (-).

The accompanying illustration shows a typical parallel battery connection. This arrangement, positive (+) to positive (+), doubles the cranking amperage.

Use this type of connection to jump start the engine.

For a 24 VDC system, two or more 12 VDC batteries are connected in the parallel connection as shown. If jumpering a 24 VDC battery setup, another 24 VDC battery pair is required as the source.

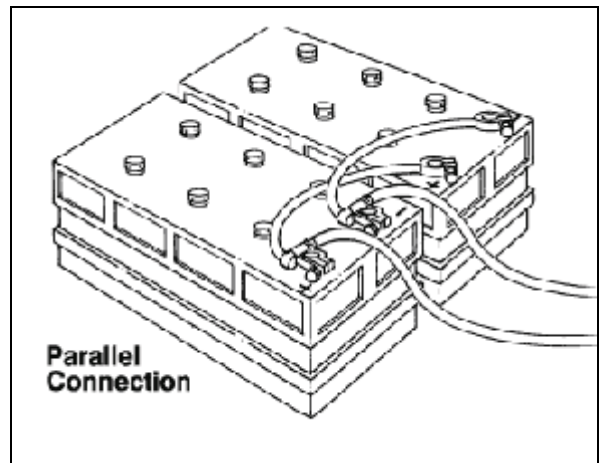


The accompanying illustration shows a typical series battery connection.



This arrangement, positive (+) to negative (-), doubles the voltage.

Do not use this type of connection to jump start the engine using a second 12 VDC battery.

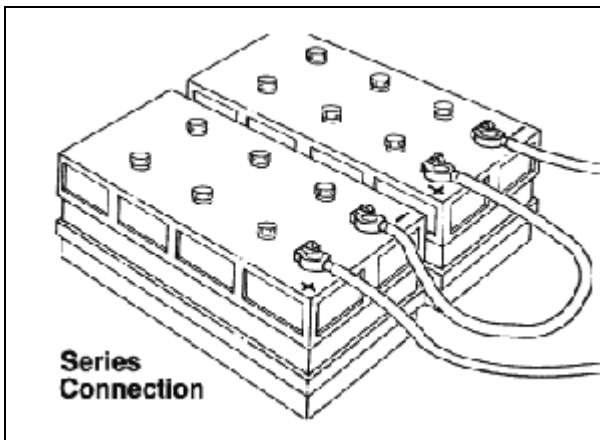

Operating the Engine

Monitor Operating Values Frequently

Monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System Specifications or Cooling System Specifications in Section 10 for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does not meet the specifications.

Do not exceed a maximum coolant temperature (93°C [220°F]). The pressure cap (or radiator cap) must meet the minimum pressure of 48 kPa [7 psi].



Continuous operation with low coolant temperature (below 60°C [140°F]) or high coolant temperature (above 100°C [212°F]) can damage the engine.

Verify raw water coolant pressure and flow.

Monitor Engine Condition Periodically

Most engine failures give an early warning. Look and listen for changes in performance, sound, or engine appearance that can indicate service or engine repair is needed. Some changes to look for are as follows:

- Engine misfires
- Vibration
- Unusual engine noises
- Fuel, oil, or coolant leaks
- Sudden changes in engine operating temperature or oil pressure
- Excessive smoke
- Loss of power
- An increase in oil consumption
- An increase in fuel consumption

Emergency Manual Starting Procedures

Overview

The engine starts automatically in the event of a fire emergency. However, if it fails to start automatically, the engine can be started locally by either of two means. The Normal Local Starting Procedure in this section can be used to start the engine if it fails to start because of a failure in the remote fire control system. Operating the engine with this procedure will automatically control raw water flow.


Additionally, manual means are available to start the engine in the event of some local failures. This procedure requires the manual operation of the raw water valves and the use of the manual starting lever on either of the two starting solenoids.

Use the following procedures as specified:

If the red low lube oil pressure light is illuminated, attempt an Emergency Manual Mode Electrical Start.

If the red low lube oil pressure light is not illuminated, attempt an Emergency Manual Mode Non-Electrical Start.


Also, if the fuel shutoff valve is known to be faulted, attempt an Emergency Manual Mode Non-Electrical Start.

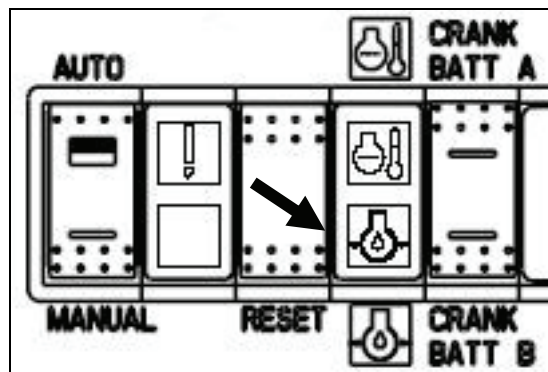


Emergency Manual Mode Electrical Start

Starting the Engine

Open both manual valves in the raw water bypass supply piping.

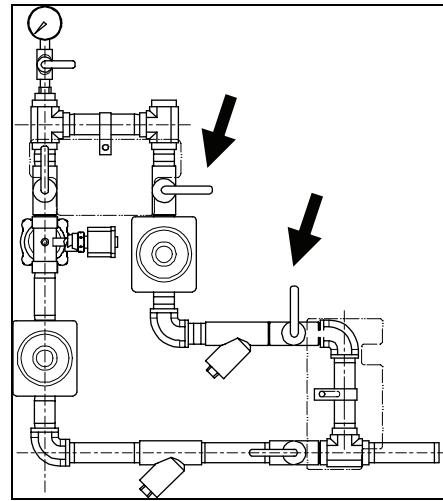

Press the MANUAL position on the AUTO/MANUAL rocker switch.

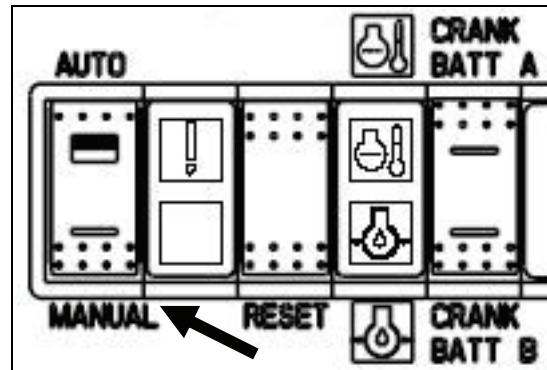


NOTE: Use the lever on either solenoid. If one does not crank the engine, then use the other.

Depress the lever on the selected solenoid to start the engine.

When the engine starts, release the lever.


If the engine cranks but does not start, try the Manual Mode Non-Electrical Start procedure in this section.

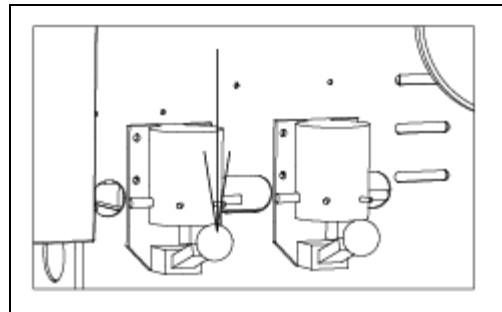

Emergency Manual Mode Electrical Start (Cont)

Stopping the Engine


When emergency operation is done, stop the engine by pressing the AUTO position on the AUTO/MANUAL rocker switch and then press the RESET switch.

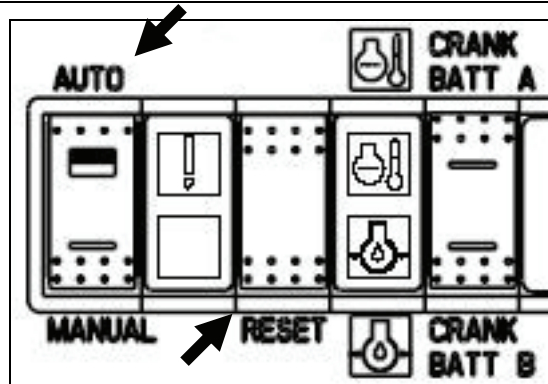

Emergency Manual Mode Non-Electrical Start (CFP 83-F10, F20, F30)

Starting the Engine


Open both manual valves in the raw water bypass supply piping.

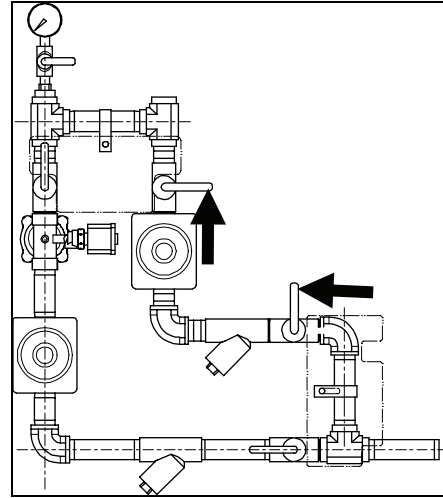

Throttle cable assembly is provided to allow the operator to start the unit in manual mode.

The Throttle cable assembly is located on the fuel pump side of the engine and has a pull handle that is attached to the fuel pump lever which activates the fuel solenoid shut-off (FSO).


The throttle cable assembly is factory installed and is securely fastened to the fuel pump lever in position shown to allow engine to run in closed/automatic mode.

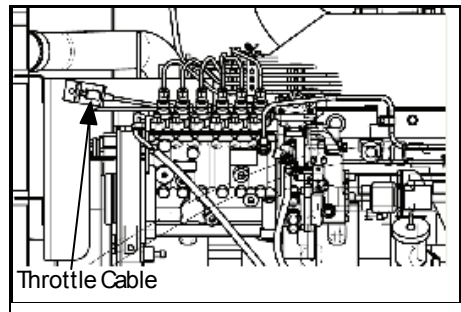

Emergency Manual Mode Non-Electrical Start (CFP 83-F10, F20, F30) (Cont)


In the event the automatic start is not operational, pull on the throttle handle assembly which will move the lever to the run position to start the engine.

Turn handle assembly to lock throttle cable assembly in position to allow the engine to run in manual mode.

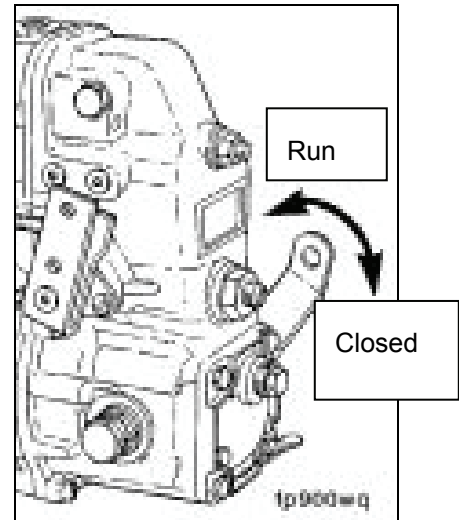

Press down on the crank solenoid lever to engage the starter while in manual mode. Depress until engine starts.

NOTE: If first crank solenoid lever does not engage the starter, repeat on second crank solenoid lever.

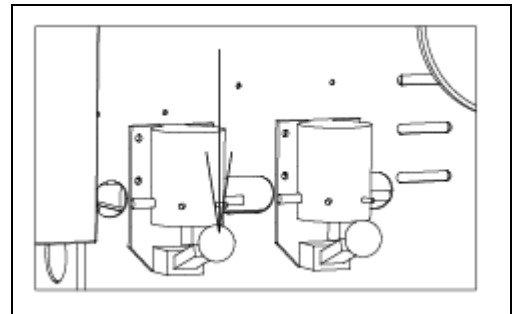


Emergency Manual Mode Non-Electrical Start (CFP 83-F10, F20, F30) (Cont)

Stopping the Engine

Once engine is operational in automatic mode, be sure to retract the throttle cable to the closed or automatic position to allow the engine to start in automatic mode.

NOTE: If throttle cable assembly does not retract to correct closed position, manually push the lever to the closed or automatic position and adjust the throttle cable assembly so that when activated, it opens and closes the FSO lever accordingly.

Periodic inspection of the throttle cable assembly is recommended.

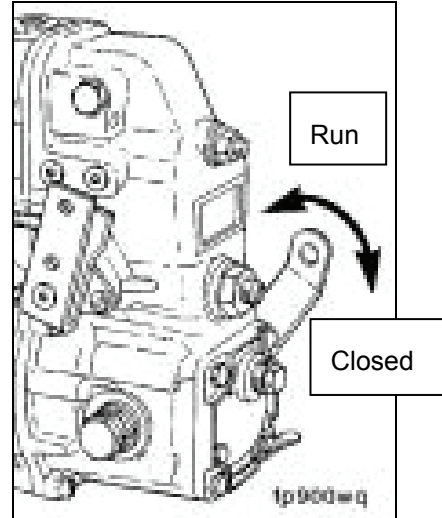


Emergency Starting in Automatic Mode with Failed Fuel Shut-Off Solenoid

Throttle Cable assembly will be provided to allow the operator to start the unit in manual mode.


The Throttle Cable assembly is located on the fuel pump side of the engine and has a pull handle that is attached to the fuel pump lever which activates the fuel solenoid shut-off (FSO).

The throttle cable assembly is factory installed and is securely fastened to the fuel pump lever in position shown to allow engine to run in closed or automatic mode.

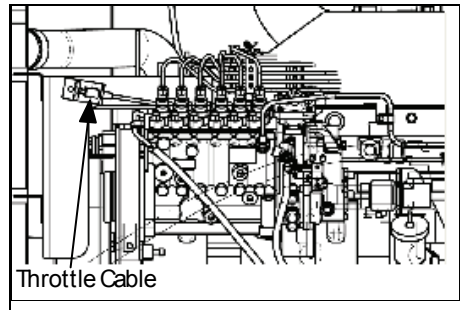

In the event the Fuel Shut-off Solenoid has failed, pull on the throttle handle assembly which will move the lever to the run position to start the engine.

Turn handle assembly to lock cable assembly in position to allow the engine to run.

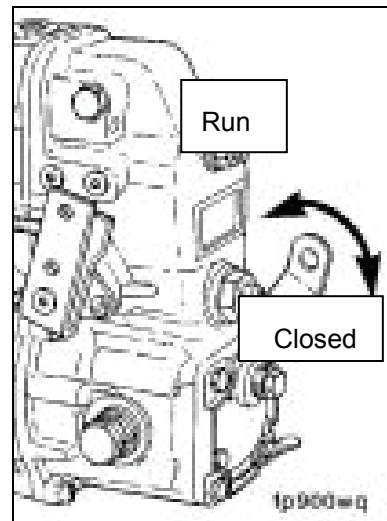

Emergency Starting in Automatic Mode with Failed Fuel Shut-Off Solenoid (Cont)

Stopping the Engine

Retract the throttle cable to the closed or automatic position to allow the engine to stop.

Once engine is operational and fuel solenoid has been replaced, the cable assembly to be restored in the closed or automatic mode. The engine is now ready to run in automatic mode.


NOTE: If throttle cable assembly does not retract to correct closed position, manually push the lever to the closed or automatic position and adjust the throttle cable assembly so that when activated, it opens and closes the FSO lever accordingly.

Periodic inspection of the throttle cable assembly is recommended.

Emergency Manual Stopping Procedure

Disconnect the connector at the electric fuel solenoid (Fuel Shutoff Valve (FSOV)).

Reconnect the connector after the engine as stopped.

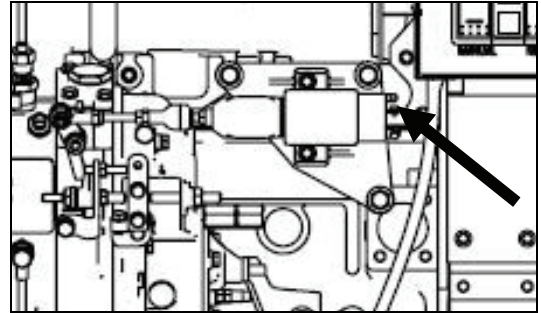

Starting Procedure - After Extended Shutdown or Oil Change

Complete the following steps after each oil change, or after the engine has been shut off for more than 30 days to make sure the engine receives the correct oil flow through the lubricating oil system:

Bump the engine. Refer to Pre-Lubricate the Engine in this section.

Depending upon the nature of the shutdown, perform other installation checks in this section as appropriate.

Start the engine. Refer to Normal Local Starting Procedure in this section.

If required, vent the fuel system. Refer to Air in Fuel in Section 7.

Section 4 - Maintenance Guidelines

Section Contents

	Page
Overview	4-3
Tool Requirements	4-4
Maintenance Schedule	4-5
Maintenance Record Form.....	4-6

THIS PAGE INTENTIONALLY LEFT BLANK

Overview

Cummins Inc. recommends that the engine must be maintained according to the Maintenance Schedule in this section.

If the engine is operating in ambient temperatures below -18°C [0°F] or above 38°C [100°F], perform maintenance at shorter intervals. Shorter maintenance intervals are also required if the engine is operated in a dusty environment or if frequent stops are made. Contact your local Cummins Authorized Repair Location for recommended maintenance intervals.

Some of these maintenance procedures require special tools or must be completed by qualified personnel. Contact your local Cummins Authorized Repair Location for detailed information.

If your engine is equipped with a component or accessory not manufactured by Cummins Inc., refer to the component manufacturer's maintenance recommendations.

Use the form provided in this section as a convenient way to record maintenance performed.

NOTE: If the engine is equipped with a component or an accessory not manufactured by Cummins, refer to the component manufacturer's maintenance recommendations.

Tool Requirements

Most of the maintenance operations described in this manual can be performed with common hand tools (metric and S.A.E. wrenches, sockets, and screwdrivers).

The following is a list of special service tools required for some maintenance operations:

Tool Part Number	Description
CC-2802	Coolant test kit
CC-2800	Refractometer
ST-1273	Pressure gauge
3375045	Torque wrench (0 to 175 ft-lb)
3375049	Oil filter wrench
3376807	Engine coolant and fuel filter wrench
3377161	Digital multimeter
3822524	Belt tension gauge, click type (v-belts and ribbed with 4 or 5 ribs)
3822525	Belt Tension Gauge, Click-type (for V-ribbed with 6 to 12 ribs)
3824556	Charge air cooler (CAC) pressure kit
3824591	Engine barring gear
3824783	Torque wrench (0 to 300 in-lb)
3824842	M10 Compuchek® fitting
3825157	Fuel Injector Connector Puller
3825156	Fuel Injector Puller

Contact your nearest Cummins Authorized Repair Location for the required service tools.

Sockets	Wrenches	Other
10 mm	8 mm	Engine Barring Gear, Part No. 3377371
12 mm	13 mm	Allen Wrench (8 mm)
13 mm	15 mm	Breaker Bar (3/8-in drive)
15 mm	19 mm	Flat Screwdriver
17 mm	22 mm	Ratchet (3/8-in drive)
18 mm	24 mm	Ratchet (1/2-in drive)
19 mm	17 mm (open end)	Filter Wrenches (75 to 80 mm, 90 to 95 mm, and 118 to 131 mm)
22 mm		Pliers
27 mm		Torque Wrench
		T-Bar Puller (75 mm)

Maintenance Schedule

Activity (as per engine specifications)			Trimonthly												Procedure #	Page #
	Daily	Weekly	1	2	3	4	5	6	7	8	9	10	11	12		
Check Air Intake Filter and Piping.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	1	5-4
Check Coolant Level	x	x	x	x	x	x	x	x	x	x	x	x	x	x	2	5-4
Check Crankcase Breather Tube	x	x	x	x	x	x	x	x	x	x	x	x	x	x	3	5-5
Check Lubricating Oil Level	x	x	x	x	x	x	x	x	x	x	x	x	x	x	4	5-6
Drain Fuel-Water Separator	x	x	x	x	x	x	x	x	x	x	x	x	x	x	5	5-6
Inspect After Cooler / Charge Air Cooler Piping	x	x	x	x	x	x	x	x	x	x	x	x	x	x	6	5-7
Inspect Charge Air Cooler Piping	x	x	x	x	x	x	x	x	x	x	x	x	x	x	6	5-8
Check Coolant Heat Exchanger Piping	x	x	x	x	x	x	x	x	x	x	x	x	x	x	7	5-9
Check Coolant Heater Piping	x	x	x	x	x	x	x	x	x	x	x	x	x	x	8	5-10
Bleed Fuel Tanks		x	x	x	x	x	x	x	x	x	x	x	x	x	9	5-11
Clean Raw Water Strainers		x	x	x	x	x	x	x	x	x	x	x	x	x	10	5-11
Check Battery Condition		x	x	x	x	x	x	x	x	x	x	x	x	x	11	5-11
Test Run Engine		x	x	x	x	x	x	x	x	x	x	x	x	x	12	5-12
Check Hose Condition			x	x	x	x	x	x	x	x	x	x	x	x	13	5-14
Check Engine Coolant Heater			x	x	x	x	x	x	x	x	x	x	x	x	14	5-14
Inspect Heat Exchanger Zinc Plug			x	x	x	x	x	x	x	x	x	x	x	x	15	5-14
Inspect Electrical Components			x	x	x	x	x	x	x	x	x	x	x	x	16	5-15
Check Turbochargers Mounting Nuts			x	x	x	x	x	x	x	x	x	x	x	x	17	5-15
Check Engine Mounting Bolts			x	x	x	x	x	x	x	x	x	x	x	x	18	5-15
Check Cooling System Condition			x	x	x	x	x	x	x	x	x	x	x	x	19	5-15
Check Air Cleaner Service Indicator			x	x	x	x	x	x	x	x	x	x	x	x	20	5-16
Inspect Air Intake System Piping			x	x	x	x	x	x	x	x	x	x	x	x	21	5-17
Check Fuel Pump			x	x	x	x	x	x	x	x	x	x	x	x	22	5-17
Change Lubricating Oil and Filters			x	x	x	x	x	x	x	x	x	x	x	x	23	5-18
Change Fuel Filter (Spin-on Type)			x	x	x	x	x	x	x	x	x	x	x	x	24	5-23
Clean Charge Air Cooler			x	x	x	x	x	x	x	x	x	x	x	x	25	5-25
Lubrication of Output Shafts			x	x	x	x	x	x	x	x	x	x	x	x	26	5-26
Drain and Flush Cooling System				x		x		x		x		x		x	27	5-27
Change Coolant Filter				x		x		x		x		x		x	28	5-31
Vent Fuel Supply Lines				x		x		x		x		x		x	29	5-34
Vent Injection Pump				x		x		x		x		x		x	30	5-35
Check Overspeed Switch Operation						x				x				x	31	5-36
Check Drive Belt, Tensioner Bearing and Belt Tension						x				x				x	32	5-36
Adjust Valve Lash Clearance						x				x				x	33	5-42
Inspect Turbocharger										x					34	5-46
Inspect Viscous Damper										x					35	5-47
Inspect Water Pump										x					36	5-47
Engine Steam Cleaning										x					37	5-48
Inspect Overhead Set														x	38	5-49

Refer to Maintenance Procedures in Section 5 for instructions.

Section 5 - Maintenance Procedures

Section Contents

	Page
Daily	5-3
Weekly	5-11
Every Three Months or 250 Hours	5-14
Every Six Months or 500 Hours	5-27
Every Year or 1000 Hours.....	5-36
Every Two Years or 2000 Hours	5-47
Every Four Years or 5000 Hours.....	5-49

THIS PAGE INTENTIONALLY LEFT BLANK

DAILY

General Information

Preventative maintenance begins with day-to-day awareness of the engine and its system.

On a daily basis, inspect the engine for the following issues:

- Leaks
- Loose or damaged parts
- Worn or damaged belts
- Any change in engine appearance
- Odor of fuel
- Correct any problems as per the instructions in this manual.
- Perform the specific checks in this section only after the engine has been stopped. Do not perform this section if the fire pump is in operation.

Engine Operation Report

The engine must be maintained in top mechanical condition if the operator is to get optimum satisfaction from its use. The maintenance department needs daily running reports from the operator to make necessary adjustments in the time allocated. The daily running report also helps to make provisions for more extensive maintenance work as the reports indicate the necessity.


Comparison and intelligent interpretation of the daily report, along with a practical follow-up action, will eliminate most failures and emergency repairs.

Report to the maintenance department any of the following conditions:

- Low lubricating oil pressure
- Low power
- Power increases or engine surge
- Erratic or no accelerator control or response
- Any warning lights flashing or staying on
- Abnormal water or oil temperature
- Unusual engine noise
- Excessive smoke
- Excessive use of coolant, fuel, or lubricating oil
- Any fuel, coolant, or lubricating oil leaks
- Loose or damaged parts
- Worn or damaged belts

Unusual Engine Noise

During daily maintenance checks, listen for any unusual engine noise that can indicate that service is required.

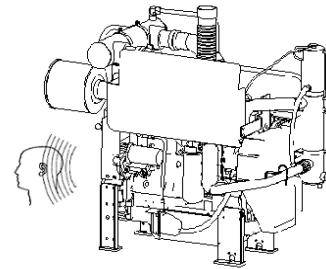

Procedure 1

Check Air Intake Filter and Piping

Visually inspect the air intake filter and piping daily for wear points and damage to piping, loose clamps, or punctures.



Replace damaged air filter or pipes, and tighten loose clamps, as necessary, to prevent the air system from leaking. Refer to Adjustment, Repair and Replacement in Section 7 for replacement procedures.



Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow corrosive products and dirt to enter the intake system.




Disassemble and clean, as required. Refer to Adjustment, Repair and Replacement in Section 7 for replacement procedures.



Torque loosened clamps.



Torque Value: 8 N•m [72 in-lb]

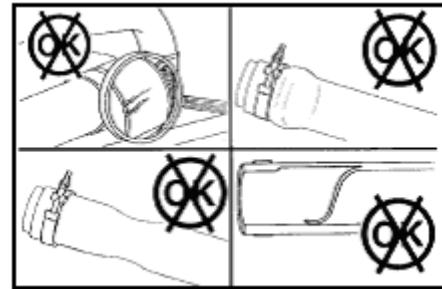

Procedure 2

Check Coolant Level



Do not remove a pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap, (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.



Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system plugging and inadequate coolant flow, causing the engine to overheat.






Do not add cold coolant to a hot engine. Engine castings can be damaged. Allow the engine to cool to below 50°C [120°F] before adding coolant.

Press down, unscrew and remove the pressure cap (Cummins Fire Power Part No. 11407).

NOTE: Coolant level should be at the bottom of the fill neck. It must be above the raw water tubes.


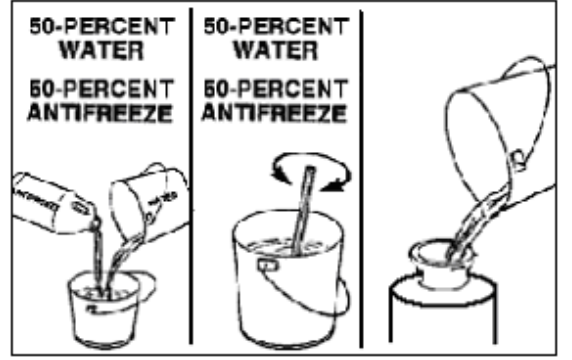
Check coolant level.

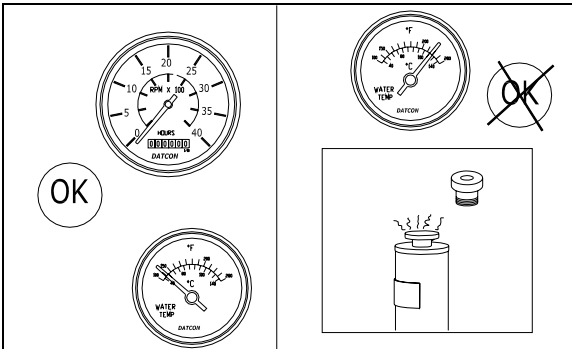NOTE: Make up coolant added to the engine must be mixed with the correct proportions of antifreeze, supplemental coolant additive and water to avoid engine damage.


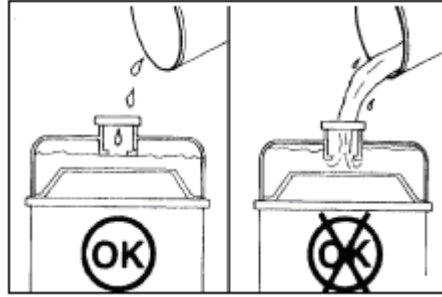
Coolant specifications can be found in Coolant Recommendations and Specifications in Section 7.

If required, prepare a coolant solution.

Fill the cooling system with coolant to the bottom of the fill neck in the coolant heat exchanger.

When done, press down and screw in the pressure cap (Cummins Fire Power Part No. 11407).




Procedure 3

Check Crankcase Breather Tube

Inspect the breather tube for sludge, debris, or ice in the tube.

If the breather tube is obstructed or blocked, clean it.

Inspect the tube more frequently in icy conditions.

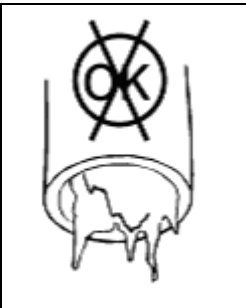Procedure 4

Check Lubricating Oil Level



Never operate the engine with oil level below the L (low) mark or above the H (high) mark. Poor engine performance or engine damage can occur.

NOTE: Wait at least 15 minutes after shutting off the engine to check the oil level. This allows time for the oil to drain into the oil pan.

The engine must be level when checking the oil level to make sure the measurement is correct.

Check the oil level on the dipstick.

NOTE: If the lube oil is excessively high, troubleshoot as per Oil Level Rises in Section 7.


If the lube oil level is greater than the high mark, drain the excessive oil. Refer to Drain Oil in Change Lubricating Oil and Filters in Section 7.

If the lube oil level is below the low mark, add oil. Refer to Fill Oil in Change Lubricating Oil and Filters later in this Section.

NOTE: If the lube oil is excessively low, troubleshoot as per Lubricating Oil Consumption Excessive in Section 12.

Oil Capacity (Low to High Mark Oil): 3.8 liters [4 U.S. qt]

For additional lubricating oil recommendations and oil pan capacity information, refer to Lubricating Oil Recommendations and Specifications and Lubricating Oil System Specifications in Section 7.

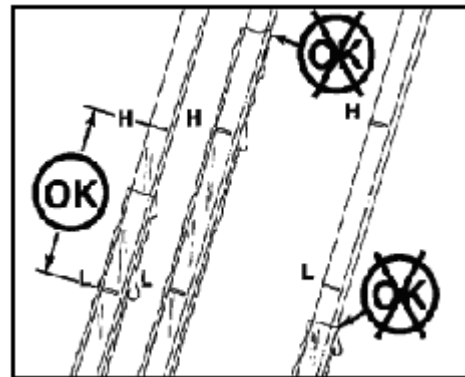

Procedure 5

Drain Fuel-Water Separator

Cummins Inc. requires a fuel-water separator or fuel filter be installed in the fuel supply system. Drain the water and sediment from the separator daily.



Drain the water-fuel separator into a container and dispose of in accordance with local environmental regulations.


Spin-on Type

Procedure 6a **Inspect Aftercooler Piping (CFP83-F10, F20, F30)**

Inspect the charge air piping and hoses daily for holes, cracks, or loose connections.

Tighten the hose clamps, if necessary.

Refer to the manufacturer's specifications for the correct torque value.

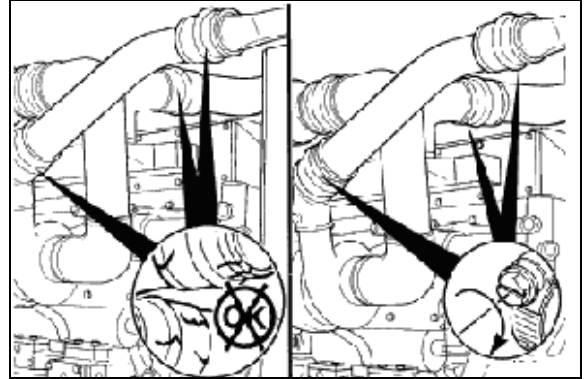

Inspect the charge air cooler for dirt and debris blocking the fins.

Check for cracks, holes, or other damage.

If damage is found, refer to the [Charge Air Cooler Removal/Installation](#) in Section 7.




Inspect the intake piping daily for wear points and damage to piping, loose clamps, or punctures that can damage the engine.

Replace damaged pipes and tighten loose clamps as necessary to prevent the air system from leaking.

Torque Value: 8 N•m [72 in-lb]

Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean as required.

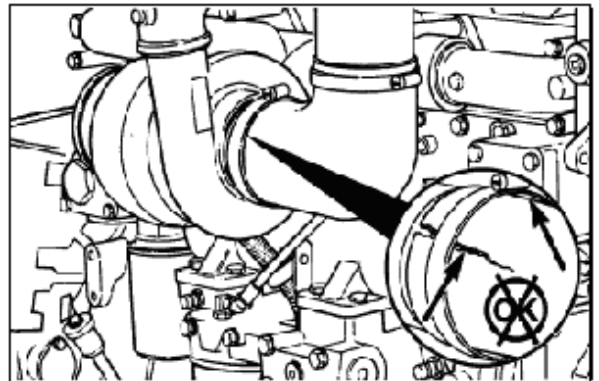

NOTE: If more than 59 ml (2 oz) is drained, refilling of the filter is required to prevent hard starting.

Use your hand to open the drain valve. Turn the valve counterclockwise approximately 3½ turns until the valve drops down 25.4 mm [1 in] and draining occurs.


Drain the filter sump until clear fuel is visible.



When closing the drain valve, do not over-tighten the valve. Over-tightening can damage the threads.

Close the valve by lifting the valve and turning it clockwise until it is hand-tight.

If required, refill the filter. Refer to Change Fuel Filter later in this Section for removal and installation instructions.

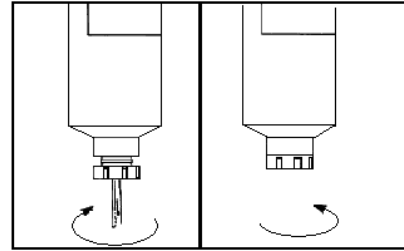


Canister Type

Shut off the engine.

Pull up on the drain valve lever until fluid drains out of the drain tube. Drain the filter sump until clear fuel is visible.

Push up on the drain valve until fluid drains out of the drain tube.

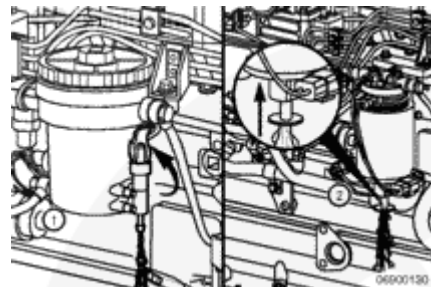


Procedure 6b

Inspect Charge Air Cooler Piping (CFP83-F40)


Inspect the charge air cooler piping and hoses daily for holes, cracks, or loose connections.

Tighten the hose clamps, if necessary.

Torque Value: 8 N•m [72 in-lb]

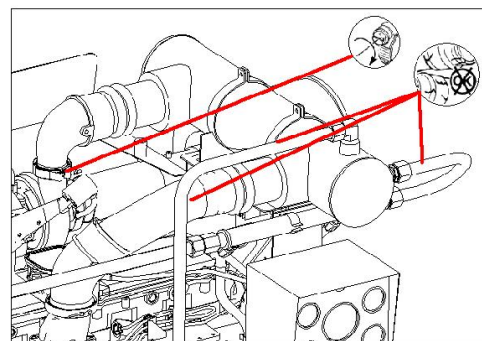

Inspect the charge air cooler for dirt and debris blocking the fins.
Check for cracks, holes, or other damage.
If damage is found, refer to Charge Air Cooler (CAC) Removal and Installation instructions in Section 7.

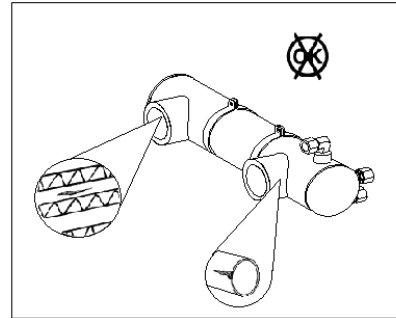


Inspect the intake piping daily for wear points and damage to piping, loose clamps, or punctures that can damage the engine.

Replace damaged pipes and tighten loose clamps as necessary to prevent the air system from leaking.

Torque Value: 8 N•m [72 in-lb]

Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean as required.

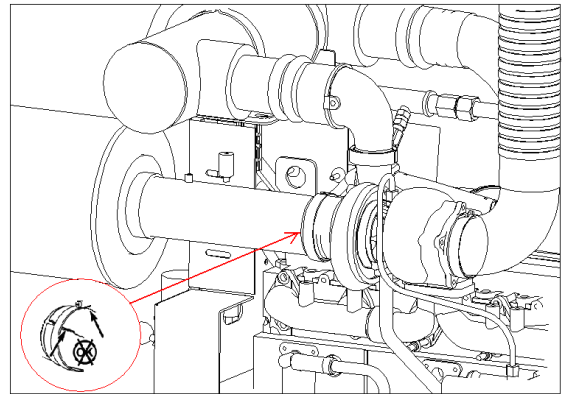


Procedure 7

Check Coolant Heat Exchanger Piping

Visually inspect the coolant heat exchanger and piping daily for wear points and damage to piping, loose clamps, or punctures.

Replace damaged tubes, clamps, or pipes, and tighten loose clamps, as necessary, to prevent the coolant system from leaking. Refer to Adjustment, Repair and Replacement in Section 7 for replacement procedures.

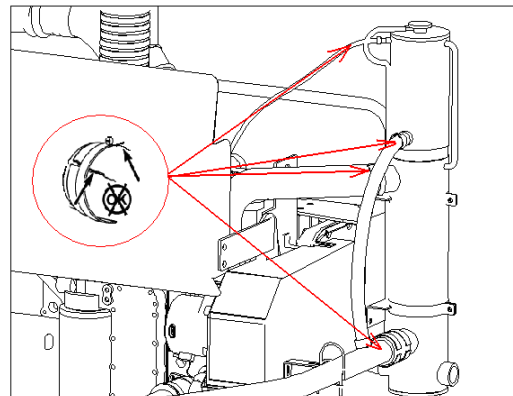


Procedure 8

Check Coolant Heater Piping

Visually inspect the engine coolant heater hoses and piping daily for wear points and damage to piping, loose clamps, or punctures.



Replace damaged tubes, clamps, or pipes, and tighten loose clamps, as necessary, to prevent the coolant system from leaking. Refer to Adjustment, Repair and Replacement in Section 7 for replacement procedures.

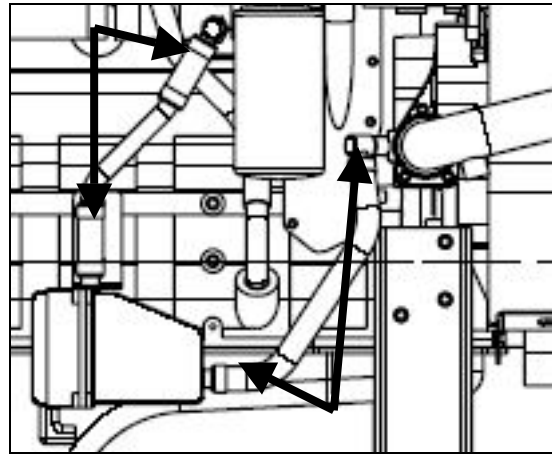

WEEKLY

General Information

With the engine not running, perform the daily maintenance checks plus the following:

Procedure 9


Bleed Fuel Tanks

Loosen the fuel tank drain plug or open the drain valve.

Drain approximately 1 cup of fuel to remove water and sediment.

Close the drain valve or tighten the drain plug.

Dispose of the waste fuel in accordance with applicable requirements.

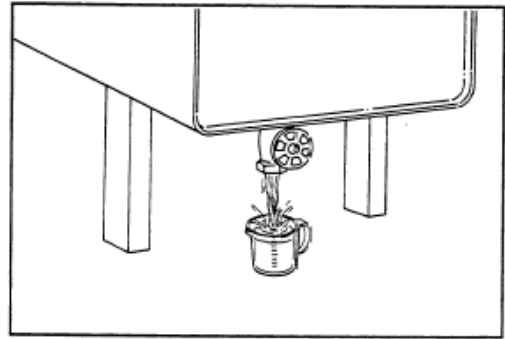

Procedure 10


Clean Raw Water Strainers

For each raw water strainer, remove the plug.

Inspect and remove any debris.

Install the strainer plugs.

Unless otherwise directed, ensure that the bypass line valves are closed and the normal line valves are open.

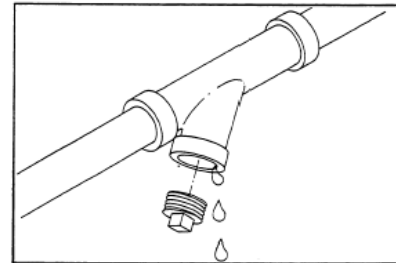


Procedure 11

Check Battery Condition

Inspect the condition of the batteries.

Refer to Section 7 for inspection and maintenance procedures.

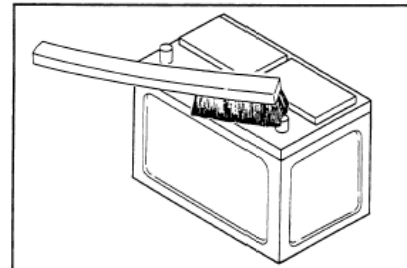


Procedure 12

Test Run Engine

Start Test Run

Select the **MANUAL** position on the AUTO/MANUAL Switch.

Press the **CRANK A** or **CRANK B** switch.

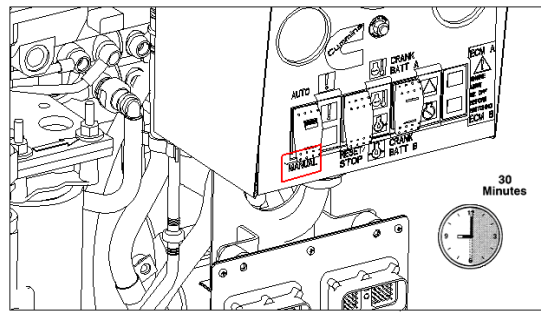


Check Unusual Engine Noise




Run the engine no less than 30 minutes to attain normal running temperature.

During the weekly maintenance check, listen for any unusual engine noise which can indicate that service is required.


Check running indications.

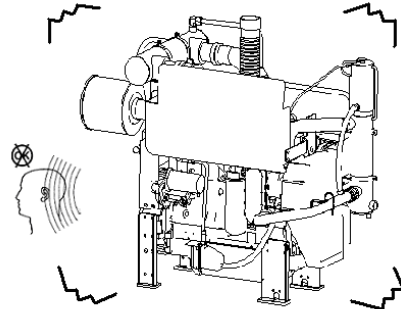


Observe that the engine is operating at test speed as follows:

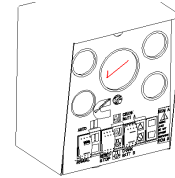


Check that oil pressure is greater than 10 PSI.

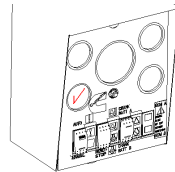


Check that coolant temperature is between 140°F and 212°F.

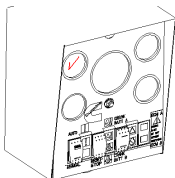


Check that both battery voltmeters indicate 12 VDC standard (24 VDC optional) depending upon the application.

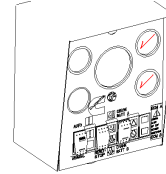

Check that the inlet air restriction indicator has not popped-up. Red plunger would be popped as shown.

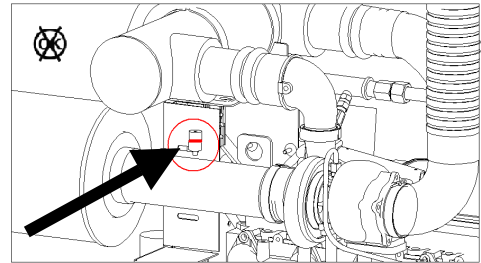


Check that the Fuel Injection Failure (F.I.F.) light is not turned on.

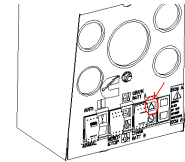

End Test Run

Select the **AUTO** position on the AUTO/MANUAL Switch.

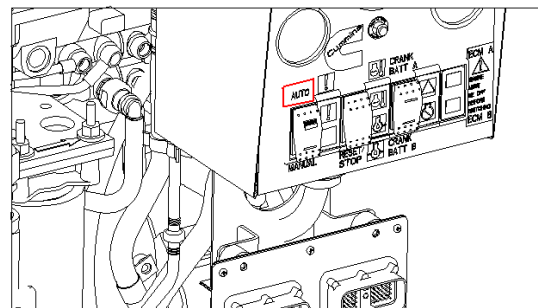

Every Three Months or 250 Hours


General Information

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

Procedure 13

Check Hose Condition

Inspect the lubricating, fuel, and cooling system hoses and hose connection for leaks or deterioration. Particles of deteriorated hose can be carried through the cooling system and slow or partially stop circulation.

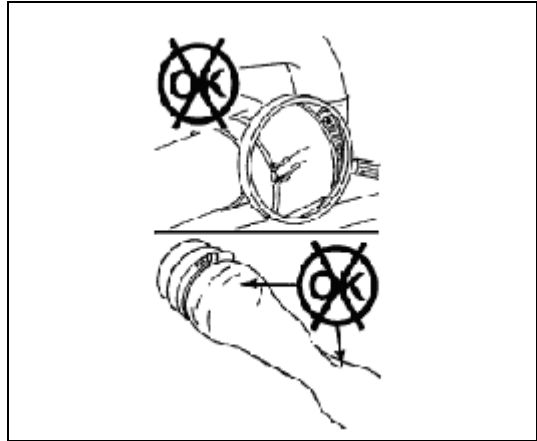


Procedure 14

Check Engine Coolant Heater

NOTE: Do not perform this inspection procedure until 24 hours after shutting off the engine.

The engine coolant heater must maintain an engine coolant temperature of 49 °C (120 °F) or above. The engine block must be warm to the touch in the water jacket areas.

If the heater does not appear to be working correctly, contact a Cummins Authorized Repair Location.

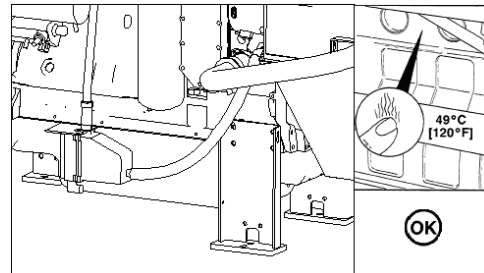


Procedure 15

Inspect Heat Exchanger Zinc Plug


Remove the zinc plug.

Inspect the plug. If it has eroded over 50 percent, replace the plug (Cummins Fire Power Part No. 9750), and brass fitting (Cummins Fire Power Part No. 9751).

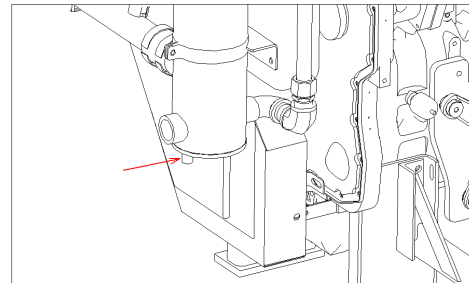

Procedure 16 **Inspect Electrical Components**


Clean and tighten any loose electrical connections.
Follow the manufacturer's recommended procedures for servicing the electrical components and batteries.

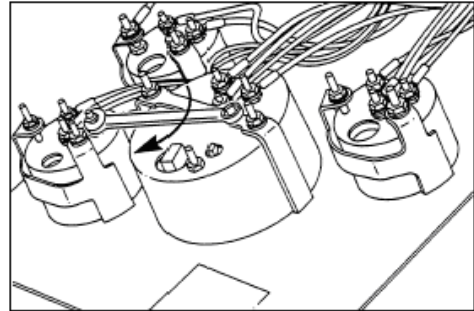

Procedure 17 **Check Turbocharger Mounting Nuts**

Check the turbocharger mounting nuts. Tighten the mounting nuts.

Torque Value: 65 N•m (50 ft-lb)

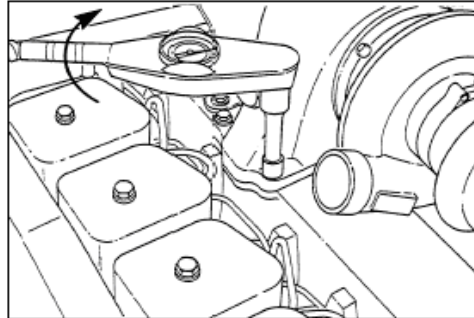

Procedure 18 **Check Engine Mounting Bolts**




Damaged engine mounts and brackets can cause engine misalignment. Driveline component damage can result in vibration complaints.

Inspect all rubber-cushioned mounts for cracks or damage.

Inspect all mounting brackets for cracks or damaged bolt holes.

Check the torque on the engine mounting nuts and bolts. Tighten any that are loose.

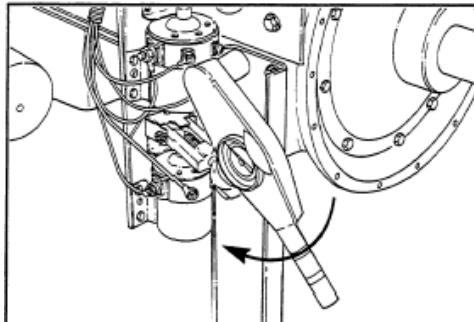

Procedure 19 **Check Cooling System Condition**




Check the coolant level only when the engine is stopped. Wait until the coolant temperature is below 50 °C (120 °F) before removing the pressure cap, (Cummins Fire Power Part No. 11407). Failure to do so can cause personal injury from heated coolant spray.

Supplemental Coolant Additive(SCA)

Check the SCA concentration level:

- ~At least twice a year
- ~At every subsequent oil drain interval if the concentration is above 3 units
- ~Whenever coolant is added to the cooling system between filter changes.

Use Fleetguard® coolant test kit, Part No. CC2602, to check the SCA concentration level. Instructions are included with the test kit. Refer to Coolant Recommendations and Specifications in Maintenance Specifications (Section V) for the correct SCA and antifreeze level.

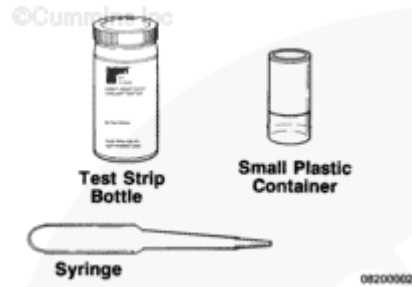

Antifreeze




Over concentration of antifreeze or use of high-silicate antifreeze can damage the engine.

Check the antifreeze concentration.

Use a mixture of 50-percent water and 50-percent ethylene glycol-base antifreeze to protect the engine to -37°C [-34°F] year-around.

Antifreeze is essential in any climate. It broadens the operating temperature range by lowering the coolant freezing point and raising its boiling point.

The corrosion inhibitors also protect the cooling system components from corrosion and provide longer component life.

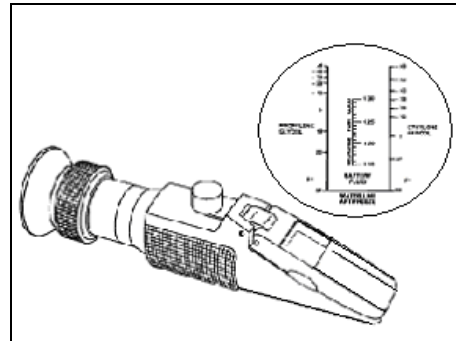

Procedure 20

Check Air Cleaner Service Indicator



Never operate the engine without an air cleaner. Unfiltered foreign objects could cause engine damage.

Maximum intake air restriction is 762 mm H2O [30.0 in H2O] for turbocharged engines.

Turbocharged engines must be operated at rated RPM and full load to check maximum intake air restriction. Replace the air cleaner element when the restriction reaches the maximum allowable limit, or clean according to the manufacturer's recommendations.

NOTE: Follow the manufacturer's instructions when cleaning or replacing the air cleaner element.



NOTE: Do not remove the felt washer from the indicator. The felt washer absorbs moisture.


Check the air cleaner service indicator, if equipped.

A mechanical restriction indicator is available to indicate excessive air restriction through a dry-type air cleaner. This instrument can be mounted in the air cleaner outlet or on the instrument panel.

Change the filter element when the red indicator flag (2) is at the raised position in the window (1).

After the air cleaner has been serviced, push the button (3) to reset the service indicator.

NOTE: Never operate the engine without an air cleaner. Intake air must be filtered to prevent dirt and debris from entering the engine and causing premature wear.

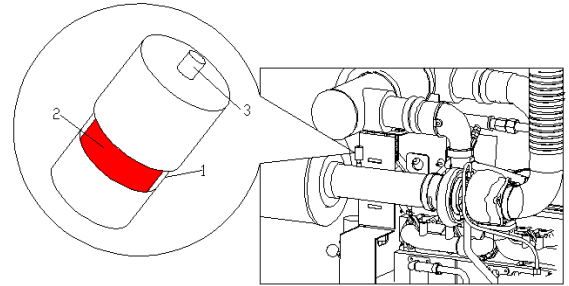

Procedure 21

Inspect Air Intake System Piping

Inspect the intake piping for cracked hoses, loose clamps, or punctures that can allow dirt and debris to enter the engine.




Tighten or replace parts as necessary to make sure the air intake system does not leak.



Check for corrosion of the intake system piping under the clamps and hoses. Corrosion can allow corrosive products and dirt to enter the intake system.


Disassemble and clean as required.

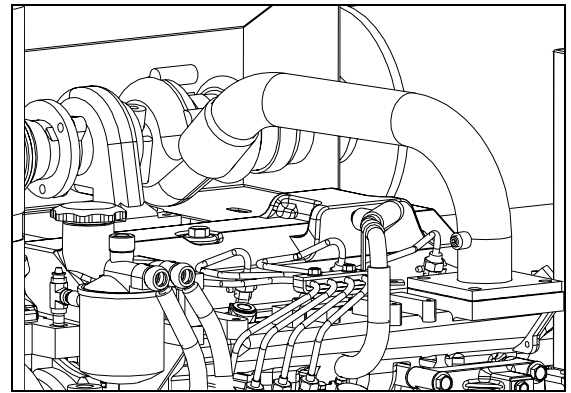

Procedure 22

Check Fuel Pump

Inspect the fuel injection pump mounting nuts, including the support bracket, for loose or damaged hardware.

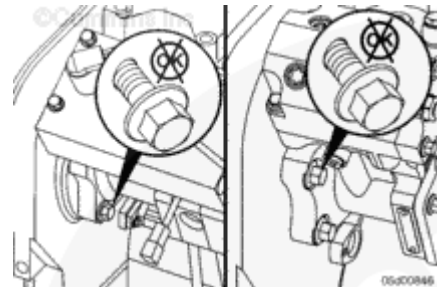

Procedure 23

Change Lubricating Oil and Filters



To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.



Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.



If no oil pressure is noted within 15 seconds after the engine is started, shut down the engine to reduce the possibility of internal damage.



For composite oil pans, always use a new sealing washer on the oil drain plug. Hold the external locking nut in place while tightening the oil drain plug.

Lubricating Oil and Filter Change Interval


Engine oil becomes contaminated and essential oil additives are depleted with use. The amount of contamination is related to the total amount of fuel and oil consumed.

The oil change interval for turbocharged engines is every 3 months or 250 hours. Change the oil and the filters to remove the contaminants suspended in the oil.

NOTE: If the lubricating oil is drained from the oil pan to make an engine repair, new oil must be used. Do not use oil after it has been drained from the oil pan.

Laboratory and field tests have determined that, when using the recommended quality oils and filters, a turbocharged engine in good condition and equipped with a by-pass oil filter can consume 255 U.S. gallons of fuel for each U.S. gallon of oil in the oil system before the maximum level of oil contamination is reached.

NOTE: Cummins Engine Co. Inc, does not recommend exceeding 25,000 miles and/or 600 hours on oil change intervals.

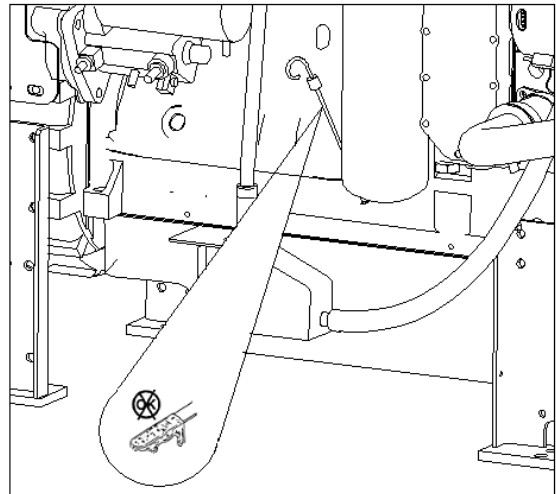


Drain



Avoid prolonged and repeated skin contact with used engine oils. Such prolonged and repeated contact can cause skin disorders or other bodily injury. Wash thoroughly after contact. Keep out of reach of children.

NOTE: If the engine is in service, the oil drain interval of 250 hours or 3 months must be observed.

PROTECT THE ENVIRONMENT: Handling and disposal of used engine oil is subject to federal, state, and local laws and regulations. Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for receipt of used oil. If in doubt, contact state and local environmental authorities or the Environmental Protection Agency for guidance as to proper handling and disposal of used engine oil.

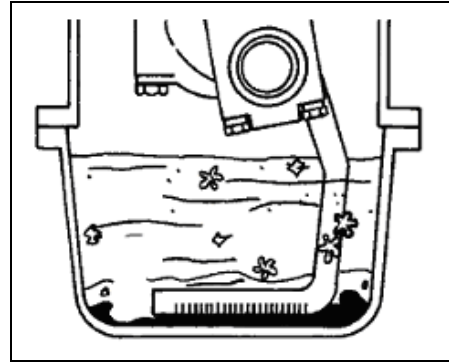


Change the oil and filters to remove the contaminants suspended in the oil.

NOTE: Drain the oil only when it is hot and the contaminants are in suspension.



Hot oil can cause personal injury.

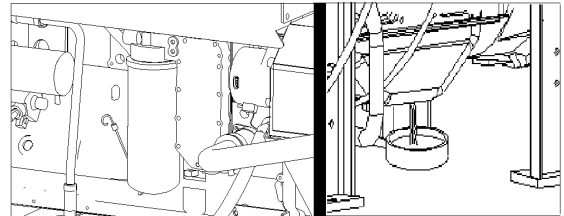

Operate the engine until the water temperature reaches 60°C [140°F].


Shut the engine off.

NOTE: Use a container that can hold at least 20 liters [21.1 qt] of oil.

NOTE: For composite oil pans, hold the external locking nut in position with a separate wrench while removing the drain plug. This will prevent the bulkhead from loosening during drain plug removal.

Remove the oil drain plug.


Drain the oil immediately to make sure all the oil and suspended contaminants are removed from the engine.

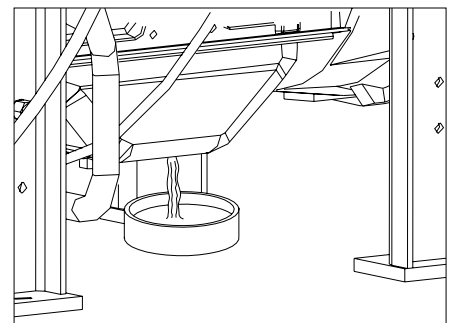

Remove

Clean the area around the lubricating oil filter head. Using an oil filter wrench, remove the filter. Clean the gasket surface of the filter head with a clean lint-free cloth.

NOTE: The o-ring can stick on the filter head. Make sure it is removed before installing the new filter.

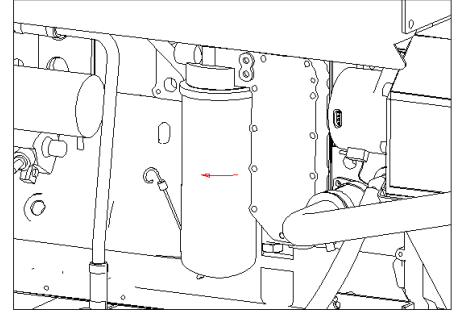

Install



The lubricating oil filter should be full of oil at start-up to prevent engine damage.

Apply a light film of lubricating oil to the gasket sealing surface before installing the filters.

Use clean 15W-40 oil to coat the gasket surface of the filter.


Fill the filter with clean 15W-40 oil.



Mechanical over tightening can distort the threads or damage the filter element seal.

Install the filter on the oil filter head. Tighten the filter until the gasket contacts the filter head surface.


Install the filter as specified by the filter manufacturer.

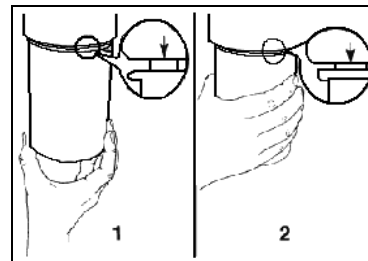

Check and clean the oil drain plug threads and sealing surface.

Install the oil drain plug.

Torque Value: 50 N•m [37 ft-lb]

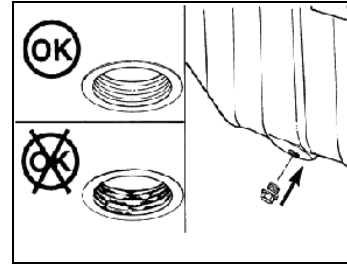


NOTE: Use a high-quality 15W-40 multiviscosity lubricating oil, such as Cummins Premium Blue®, or its equivalent, in Cummins engines. Choose the correct lubricating oil for your operating climate as outlined in Section 5.



Fill the engine with clean oil to the proper level.


NOTE: Capacities assume standard pan. Total system assumes standard pan plus filter.

NOTE: When filling the oil pan, use the fill tube on the side of the engine rather than on top of the rocker lever cover.

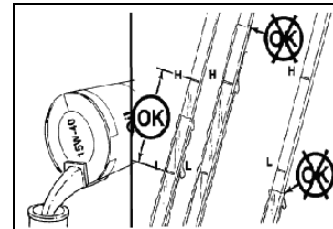

If no oil pressure is noted within 15 seconds after the engine is started, shut down the engine to reduce the possibility of internal damage.

Operate the engine at idle to inspect for leaks at the filters and the drain plug.

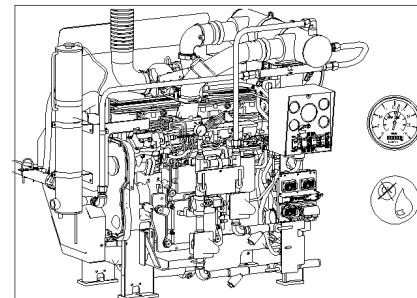


Stop the engine.

Wait approximately 15 minutes to let the oil drain from the upper parts of the engine.

Check the oil level again.

Add oil as necessary to bring the oil level to the H (high) mark on the dipstick.

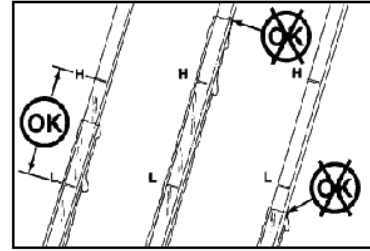

Procedure 24

Change Fuel Filter (Spin-on Type)



Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.



Use caution when disconnecting or removing fuel lines, replacing filters and priming the fuel system that fuel is not spilled or drained into the bilge area. Do not drop or throw filter elements into the bilge area. The fuel and fuel filters must be discarded in accordance with local environmental regulations.




Mechanical overtightening can distort the threads as well as damage the filter element seal or filter canister.

Remove

NOTE: Close any OEM fuel valves (if equipped) to prevent fuel from draining or siphoning.

Clean the area around the fuel filter head. Remove the filters. Clean the gasket surface of the filter head.


Replace the o-ring.

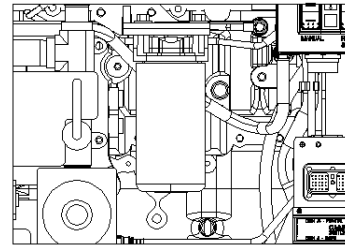

Install

Fill the new filter(s) with clean fuel, and lubricate the o-ring seal with clean lubricating oil.


Fuel-water separator - used in single-filter applications.

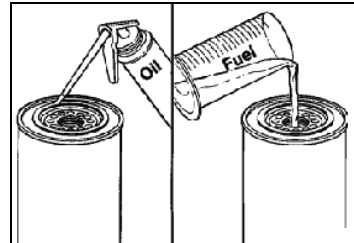

It will be necessary to fill the 10-micron water stripping (suction side) fuel filter with fuel.

Do **not** fill the 10-micron (pressure side) fuel filter with fuel before installation; instead, prime the fuel system using the fuel lift pump.


Be sure the center seal ring is installed onto the filter spud.

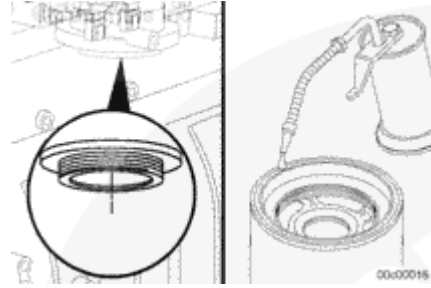

CAUTION

Mechanical over-tightening will distort the threads, filter element seal or filter can.

Install the filter as specified by the filter manufacturer.

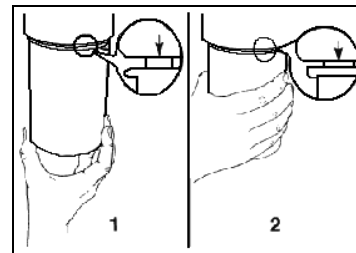


Prime

WARNING

Do not open the high-pressure fuel system with the engine running. Engine operation causes high fuel pressure. High-pressure fuel spray can cause serious injury or death.

Open the fuel supply and return valves, if equipped.

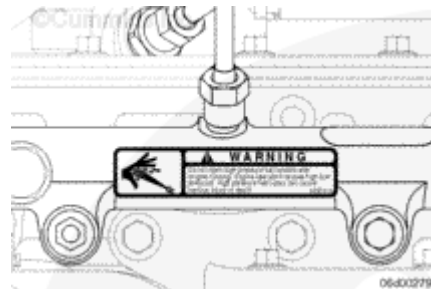


Finishing Steps

Once the engine is started, slowly increase the engine speed while air is purged from the fuel plumbing.

Procedure 25

Clean Charge Air Cooler

If the engine experiences a turbocharger failure or any other occasion where oil or debris is put into the charge air cooler, the charge air cooler must be cleaned.

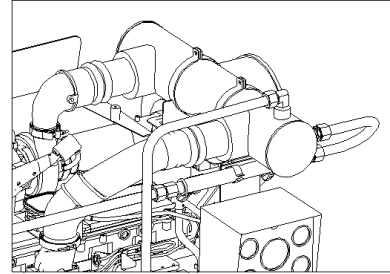

Remove charge air cooler from the engine. Refer to Section 4.



WARNING

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.



CAUTION


Do not use caustic cleaners to clean the charge air cooler. Damage to the charge air cooler will result.

Flush the charge air cooler internally with solvent in the opposite direction of normal airflow.




Shake the charge air cooler and lightly tap on the end tanks with a rubber mallet to dislodge trapped debris.

Continue flushing until all debris or oil is removed.

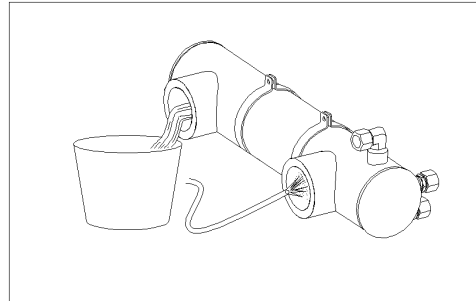



Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

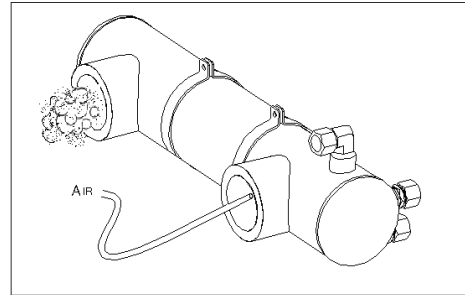

After the charge air cooler has been thoroughly cleaned of all oil and debris with solvent, wash the charge air cooler internally with hot, soapy water to remove the remaining solvent.

Rinse thoroughly with clean water.

Blow compressed air into the charge air cooler in the opposite direction of normal airflow until the charge air cooler is dry internally.

Refer to Section 4 for installation procedures.


Procedure 26

Lubrication of Output Shafts

It is recommended that proper lubrication to drive shafts and output shafts is to be completed on a regular schedule.



Grease zerk fittings as shown.

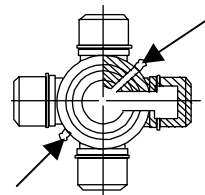

See Section 10 for grease specifications and lubricating oil recommendations.

Every Six Months or 500 Hours

General Information

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

Procedure 27 Drain and Flush Cooling System

The cooling system must be clean to work correctly.

Drain the system and flush with clean water.

If the system shows mineral buildup, scale, rust or oil, clean with a heavy duty engine coolant cleaner and follow the manufacturer's directions.

Drain



Avoid prolonged and repeated skin contact with used antifreeze. Such prolonged, repeated contact can cause skin disorders or other bodily injury.




Wait until the temperature is below 50°C [120°F] before removing the coolant system pressure cap (Cummins Fire Power Part No. 11407). Failure to do so can cause personal injury from heated coolant spray.

Avoid excessive contact - wash thoroughly after contact.

Keep out of reach of children.


Protect the environment: Handling and disposing of used antifreeze can be subject to federal, state, and local laws and regulations. Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze. If in doubt, contact local authorities or the EPA for guidance as to proper handling of used antifreeze.

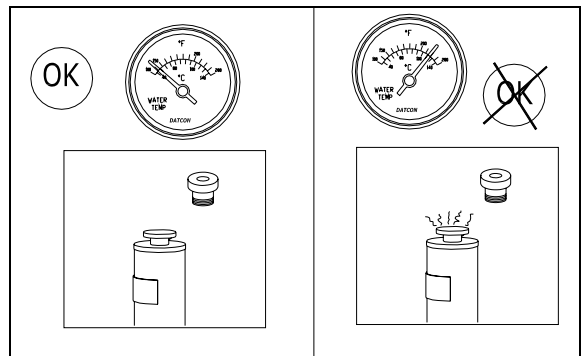

Drain the cooling system by opening the drain valve on the heat exchanger and removing the plug in the bottom of the water inlet.



A drain pan with a capacity of 20 liters [5 gal] will be adequate in most applications.

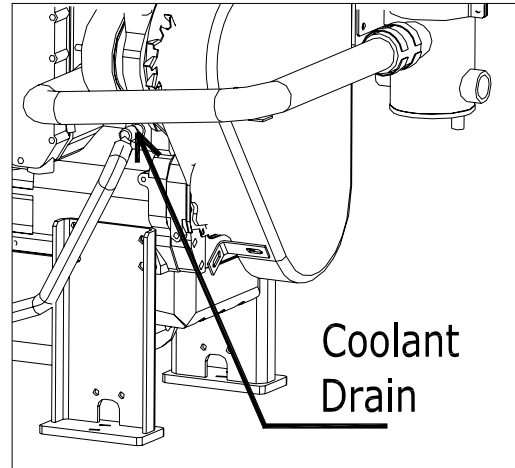


Check for damaged hoses and loose or damaged hose clamps.



Replace as required.

Check the heat exchanger for leaks, damage, and buildup of dirt.

Clean and repair as required.

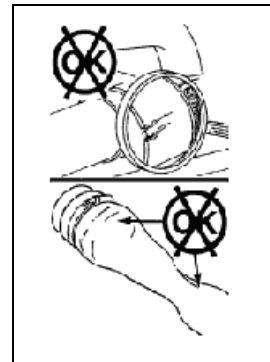


Flush



During filling, air must be vented from the engine coolant passages. The air vents through the “jiggle pin” openings to the top heat exchanger hose and out the fill opening. Additional venting is provided for engines equipped with an after cooler. Open the petcock during filling.


NOTE: Adequate venting is provided for a fill rate of 10 liters/minute [2.6 gal/min].

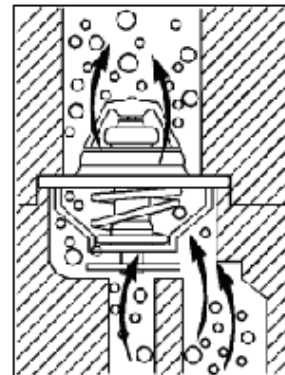

NOTE: Do not install the heat exchanger cap. The engine is to be operated without the cap for this process.


Fill the system with a mixture of sodium carbonate and water (or a commercially available equivalent).

NOTE: Use 0.5 kg [1.0 lb] of sodium carbonate for every 23 liters [6 gal] of water.

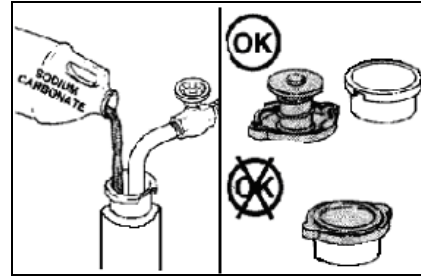

Operate the engine for 5 minutes with the coolant temperature above 82°C [180°F].


Shut the engine off, and drain the cooling system.

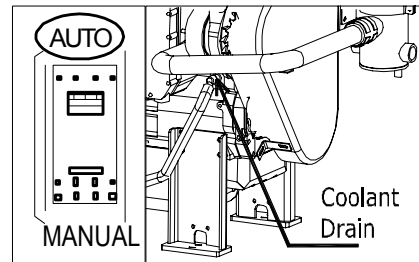

Fill the cooling system with clean water.

NOTE: Be sure to vent the engine and aftercooler for complete filling.

NOTE: Do not install the radiator cap or the new coolant filter.

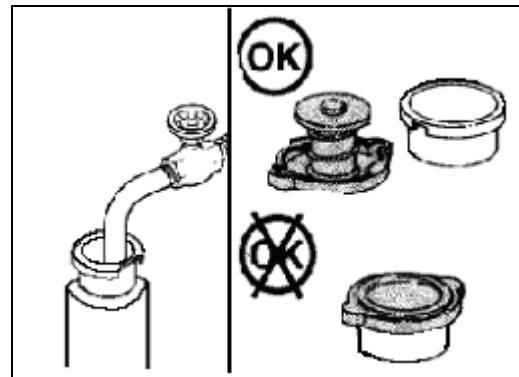


Operate the engine for 5 minutes with the coolant temperature above 82°C [180°F].



Shut the engine off.

Drain the cooling system.

NOTE: If the water being drained is still dirty, the system must be flushed again until the water is clean.

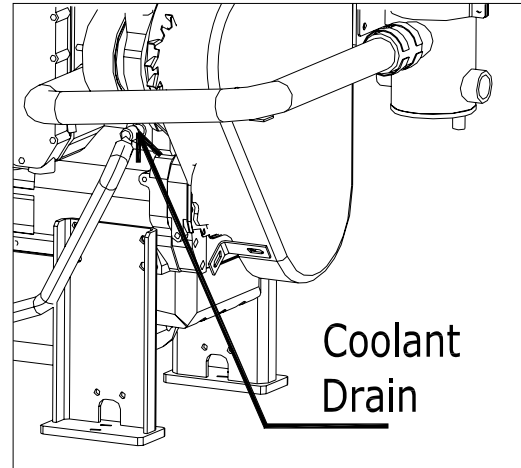


Fill



The system must be filled properly to prevent air locks. During filling, air must be vented from the engine coolant passages.


The system has a design fill rate of 10 liters/minute [2.8 gal/min].

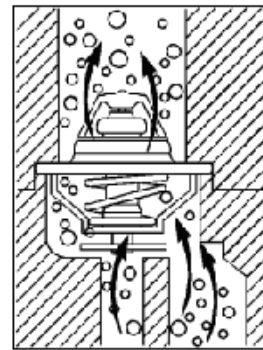

Never use water alone for coolant. Damage from corrosion can be the result of using water alone for coolant.

Use a mixture of 50-percent water and 50-percent ethylene glycol antifreeze to fill the cooling system.

Coolant Capacity (Engine Only): 4.50 liters [1.19 US Gal]

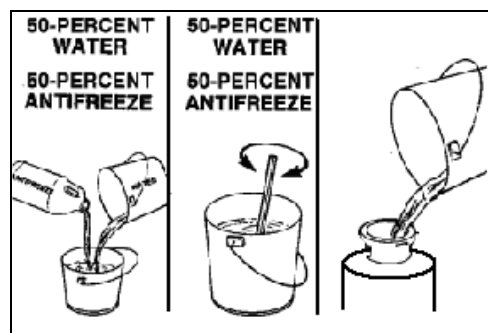




Before removing the pressure cap, wait until the coolant temperature is below 50°C [120°F]. Failure to do so can cause personal injury from heated coolant spray.

Install the pressure cap (Cummins Fire Power Part No 11407.).

Operate the engine until it reaches a temperature of 82°C [180°F], and check for coolant leaks.

Check the coolant level again to make sure the system is full of coolant, or that the coolant level has risen to the hot level in the recovery bottle on the system, if so equipped.

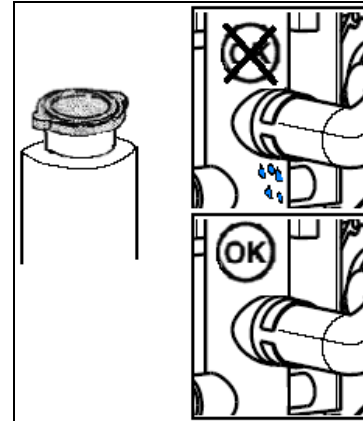

Procedure 28

Change Coolant Filter


Remove



Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Remove the coolant system pressure cap and close the shutoff valve before removing the coolant filter. Failure to do so can result in personal injury from heated coolant spray.

Remove the coolant system pressure cap (Cummins Fire Power Part No. 11407).

Turn the shutoff valve to the OFF position by rotating the knob from vertical to horizontal in the direction shown.

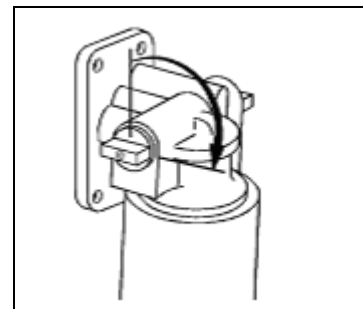

 **WARNING** 

A small amount of coolant can leak when servicing the coolant filter with the shutoff valve in the OFF position. To reduce the possibility of personal injury, avoid contact with hot coolant.


 **WARNING** 

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

 **CAUTION** 


Use caution when draining coolant that coolant is not spilled or drained into the bilge area. Do not pump the coolant overboard. If the coolant is not reused, it must be discarded in accordance with local environmental regulations.

Remove and discard the coolant filter.

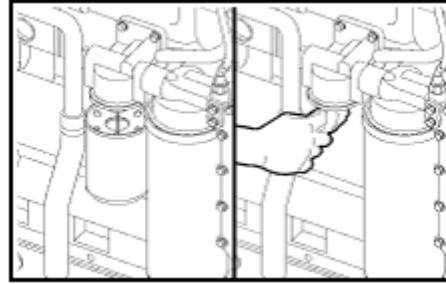

Clean

Clean the gasket surface.

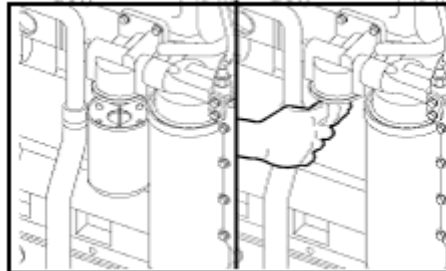

Install



Do not allow oil to get into the filter. Oil will damage the DCA.




Mechanical over-tightening can distort the threads or damage the filter head.

Apply a thin film of lubricating oil to the gasket sealing surface before installing the new coolant filter.


Install the coolant filter on the filter head. Tighten the filter until the gasket contacts the filter head surface.

Tighten the coolant filter an additional 1/2 to 3/4 of a turn, or as specified by the filter manufacturer.

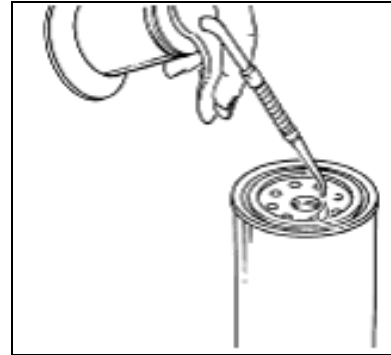

The valve must be in the ON position to prevent engine damage.

Turn the shutoff to the ON position by rotating the knob from horizontal to vertical in the direction shown.

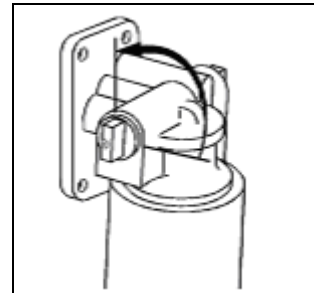

Test Run

Install the coolant system pressure cap, (Cummins Fire Power Part No. 11407).

Operate the engine.

Check for coolant leaks.

After the air has been purged from the system, check the coolant level again.



Procedure 29 **Vent Fuel Supply Lines**

General Information

Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the filters or injection pump supply line will be vented automatically if the fuel filter is changed in accordance with the instructions. No manual bleeding of fuel lines is required.

NOTE: Manual bleeding is required if any of the following is true:

- The fuel filter is not filled prior to installation.
- The injection pump is replaced.
- High-pressure fuel line connections are loosened or lines replaced.
- Engine is initially started or started after an extended period of no engine operation.

Low Pressure Fuel Line(s)


Open the vent screw.

Allow fuel to drain until the fuel flowing from the fitting is free of air.

Tighten the vent screw.

Torque value: 8 N•m (6ft-lb)

The low pressure fuel lines are bled by pumping the hand lever on the filter head.

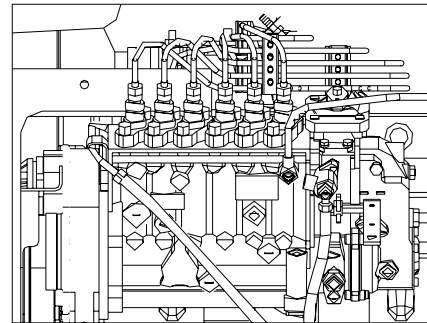


High Pressure Fuel Line(s)



The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious bodily harm.


Venting is accomplished by loosening one or more fittings at the injectors and cranking the engine to allow entrapped air to bleed from the lines.

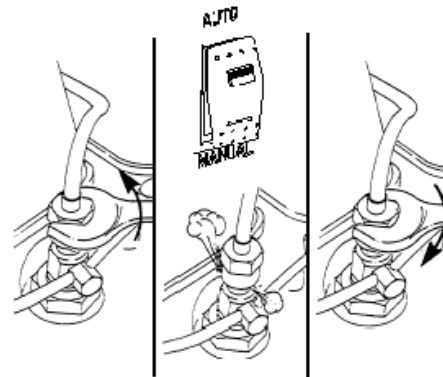



Do not bleed a hot engine as this could cause fuel to spill onto a hot exhaust manifold creating a danger of fire.


With the engine at idle, vent one line at the time until the engine runs smoothly.

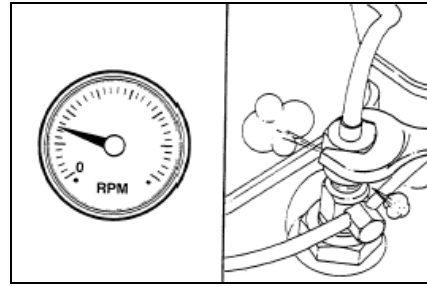

Retighten Line Fittings

Tighten the line fittings and check for leaks.

Torque Value: 22 N•m [16 ft-lb]

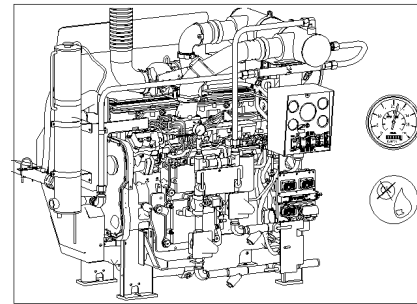

Procedure 30

Vent Injection Pump



The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious personal injury. Wear gloves and protective clothing.


Loosen the fittings at the injectors, and crank the engine to allow entrapped air to bleed from the lines. Tighten the fittings.



It is necessary to put the engine in the run position. Because the engine could start, be sure to follow all the safety precautions. Use the normal engine starting procedure.

Start the engine and vent one line at a time until the engine runs smoothly.

NOTE: Do not engage the starter for more than 30 seconds each time when it is used to vent the system: Wait 2 minutes between engagements.

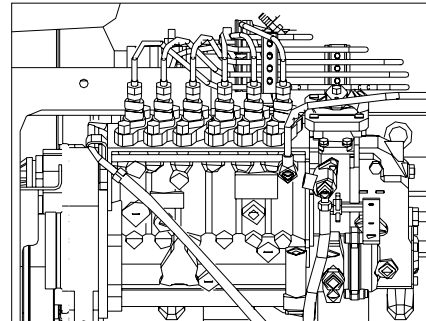


Every Year or 1000 Hours

General Information

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval, except for valve lash adjustment.

Procedure 31 Check Overspeed Switch Operation


Check the overspeed switch for operation.
Refer to Operating Instructions in Section 3 of the Operational Manual for settings.

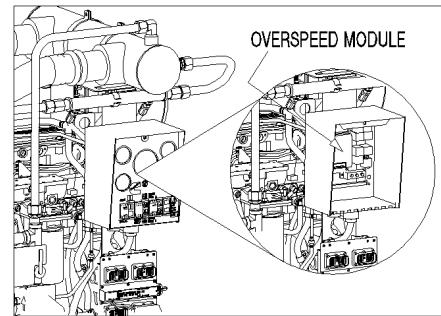


Procedure 32 Check Drive Belt, Tensioner Bearing and Belt Tension

Inspect


Remove heat exchanger, piping and hoses.

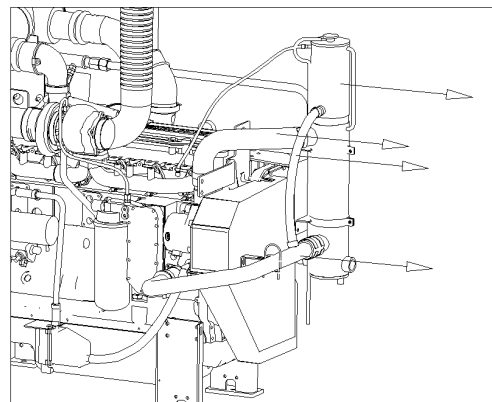

Remove the belt guard.

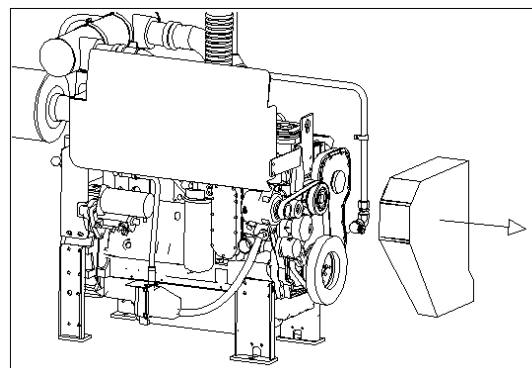

Remove the drive belt.

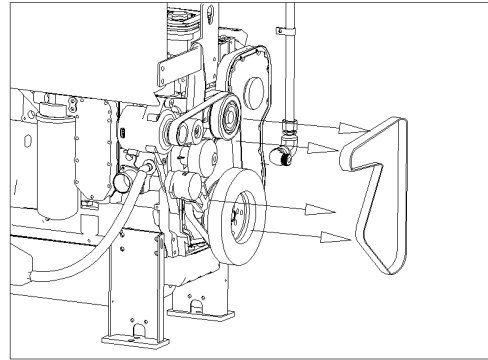

Poly-Vee Belt


Visually inspect the belt.

Check the belt for intersecting cracks. Transverse (across the belt width) cracks are acceptable. Longitudinal (direction of belt length) cracks that intersect with transverse cracks are not acceptable.

Replace the belt if it is frayed or has pieces of material missing.

Belt damage can be caused by:

- Incorrect tension
- Incorrect size or length
- Pulley misalignment
- Incorrect installation
- Severe operating environment
- Oil or grease on the belts

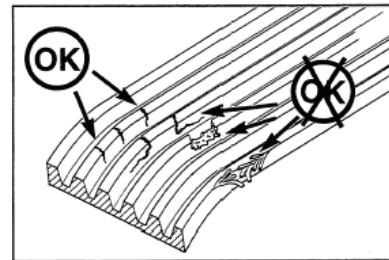


Cogged Belt

Inspect the belts daily. Replace the belts if they are cracked, frayed, or have chunks of material missing. Small cracks are acceptable.

Adjust the belts that have a glazed or shiny surface, which indicates belt slippage. Correctly installed and tensioned belts will show even pulley and belt wear. Refer to Section A for belt adjustment and replacement procedures.

Belt damage can be caused by:

- Incorrect tension
- Incorrect size or length
- Pulley misalignment
- Incorrect installation
- Severe operating environment
- Oil or grease on the belts

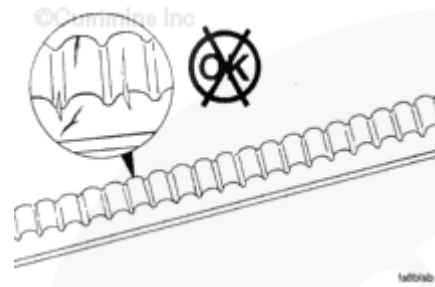


Measure the belt tension in the center span of the pulleys.


Refer to the Belt Tension Chart in Section V for the correct gauge and tension value for the belt width used.

An alternate method (deflection method) can be used to check belt tension by applying 110 N [25 lbf] force between the pulleys on v-belts. If the deflection is more than one belt thickness per foot of pulley center distance, the belt tension must be adjusted.

Refer to Section A for adjustment.

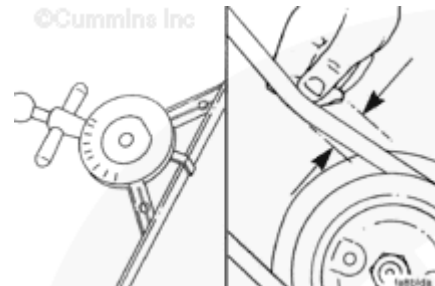


For cogged belts, make sure that the belt tension gauge is positioned so that the center tensioning leg is placed directly over the high point (hump) of a cog. Other positioning will result in incorrect measurement.

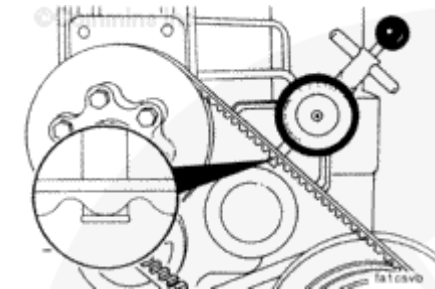


Check the tensioner bearing.

The tensioner pulley should spin freely with no rough spots detected under hand pressure.

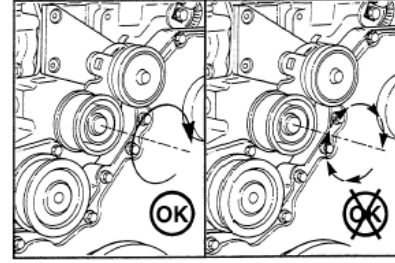


Replace tensioner or bearing if defective.


Install the drive belt.

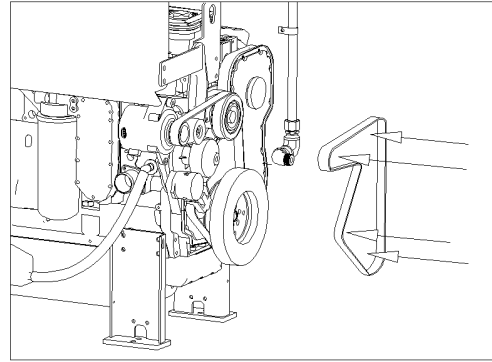


Torque Value: Tension Limit: 360 to 490 N•m [266 to 361 ft-lb]

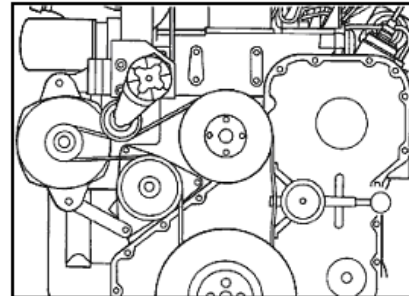


Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or centered close to the middle of, the pulley. Unaligned belts, either too far forward or backward, can cause belt wear, belt roll-off failures, or increase uneven tensioner bushing wear.

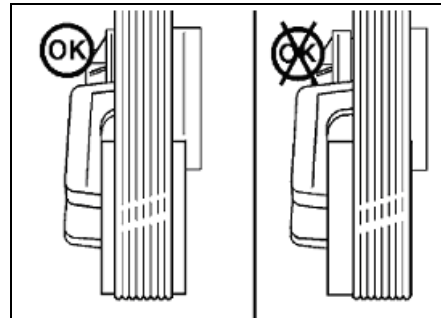


Use the Cummins belt tensioner gauge, Part No. 3822524, to measure the tension in the drive belt. This needs to be in the range of 360 to 490 N•m [266 to 361 ft-lb].

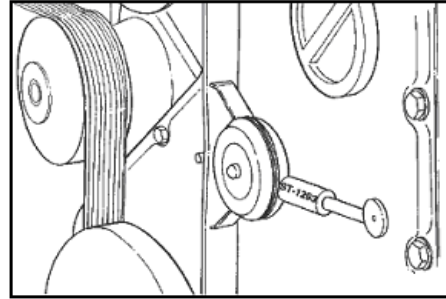

Check the tensioner arm, pulley, and stops for cracks. If any cracks are noticed, the tensioner must be replaced.

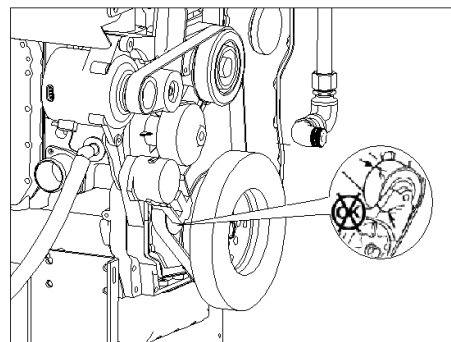

With the belt on, verify that neither tensioner arm stops are in contact with the spring casing stop. If either stop is touching, the drive belt must be replaced. After replacing the belt, if the tensioner arm stops are still in contact with the spring casing stop, replace the tensioner.

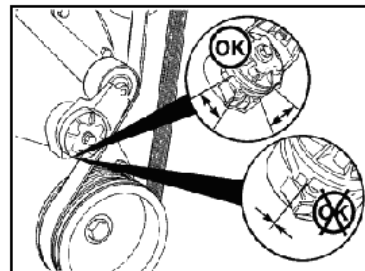


Remove the drive belt, and check the torque of the tensioner capscrew. After checking the torque, use a breaker bar with a 3/8-inch ratchet to rotate the tensioner slowly away from the area of belt contact. If the arm rotates with any roughness or hesitancy, replace the tensioner.



Torque Value: 43 N•m [32 ft-lb]


Check the belt for damage. Transverse (across the belt width) cracks are acceptable. Longitudinal (direction of the belt length) cracks that intersect with transverse cracks are not acceptable.

If the belt is frayed or has any piece of material missing, the belt is unacceptable and needs to be replaced.

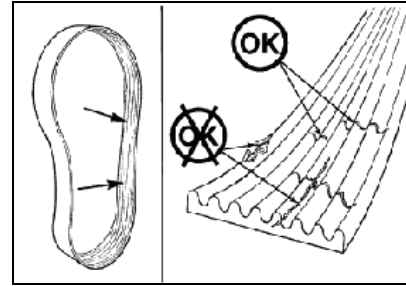

With the belt removed, verify that the tensioner arm stop is in contact with the spring case stop.

If these two are not touching, the tensioner must be replaced.

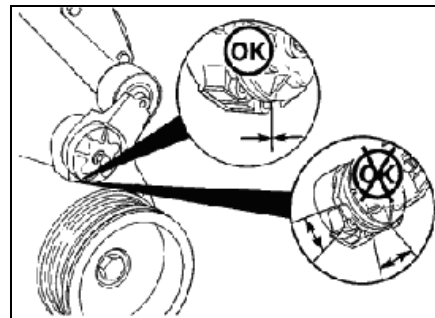

With the belt removed, check to be sure that the tensioner pulley rotates freely.

Measure the clearance between the tensioner spring case and the tensioner arm to verify tensioner wear-out and uneven bearing wear.


If the clearance exceeds 3 mm [0.12 in] at any point, the tensioner failed and must be replaced as a complete assembly.

Experience has revealed that tensioners generally will show a larger clearance gap near the lower portion of the spring case, resulting in the upper portion rubbing against the tensioner arm.


Always replace the belt when a tensioner is replaced.



Tensioner cap
Tensioner arm
Spring case
Tensioner pulley
Clearance gap

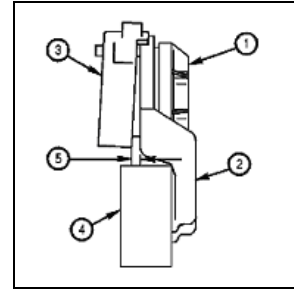

Inspect the tensioner for evidence of the tensioner arm contacting the tensioner cap.
If there is evidence of the two areas making contact, the pivot tube bushing has failed and the tensioner must be replaced.

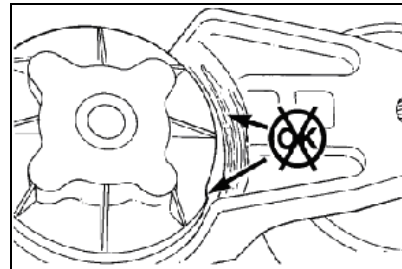


Procedure 33


Adjust Valve Lash Clearance

Adjust


Remove the air crossover tube from the engine if equipped.

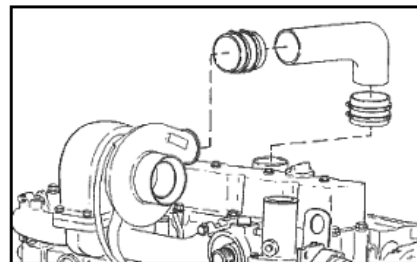

Disconnect the support clamps, hose clamp, and wastegate sensing line.
Remove the crankcase vent tube and any other parts that would prevent removal of the valve cover.

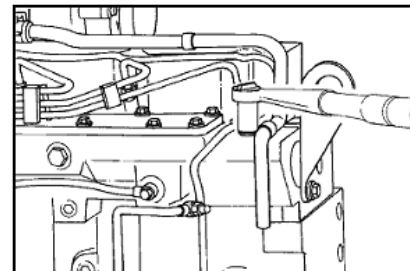


Remove valve cover.

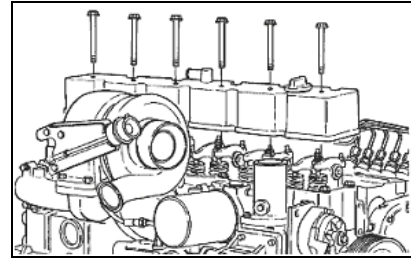


Locate top dead center for cylinder No. 1 by rotating the crankshaft slowly while pressing on the engine timing pin.


The barring gear inserts into the flywheel housing and engages the flywheel ring gear. The engine can then be rotated by hand using a 1/2-inch ratchet or breaker bar.

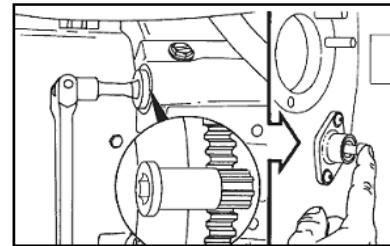

When the engine timing pin engages the hole in the camshaft gear, cylinder No. 1 is at top dead center on the compression stroke.

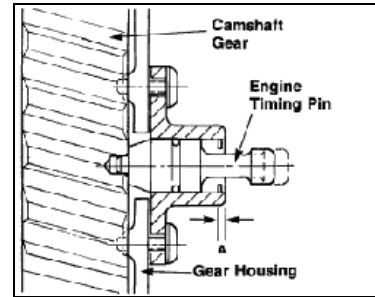

Be sure to disengage the engine timing pin after locating top dead center to prevent damage to the engine timing pin.

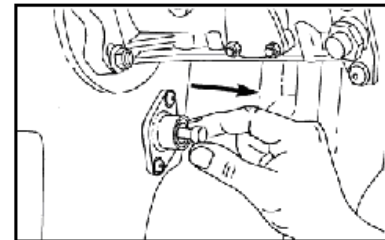


Intake clearance: 0.30 mm [0.012 in]

Exhaust clearance: 0.61 mm [0.024 in]

Check/set valves with engine cold - below 60°C [140°F].

NOTE: The clearance is correct when some resistance is “felt” when the feeler gauge is slipped between the valve stem and the rocker lever.

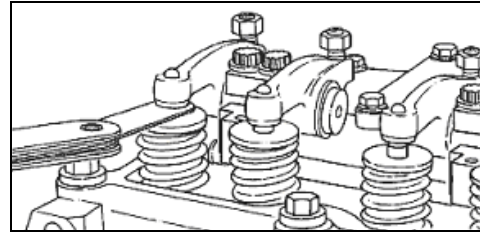


Locate top dead center for cylinder No. 1.

Check/adjust the valves indicated for STEP A (I = intake; E = exhaust).


After tightening the rocker lever locknut, check the valve clearance to make sure the valve clearance has not changed.

Torque Value: 24 N•m [212 in-lb]

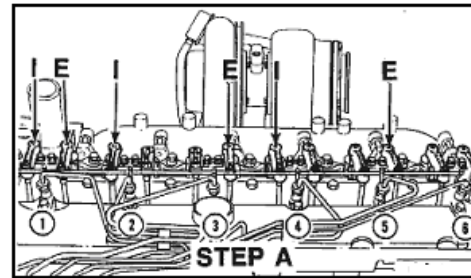

Be sure the engine timing pin is disengaged to prevent damage to the engine timing pin.


Mark vibration damper and rotate the crankshaft 360 degrees.

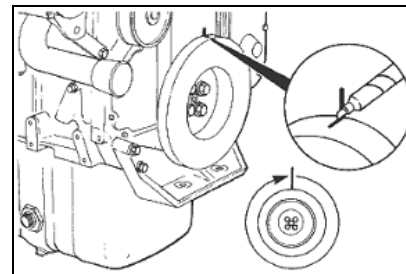

Set the valves indicated for STEP B.

After tightening the rocker lever locknut, check the valve clearance to make sure the valve clearance has not changed.

Torque Value: 24 N•m [212 in-lb]

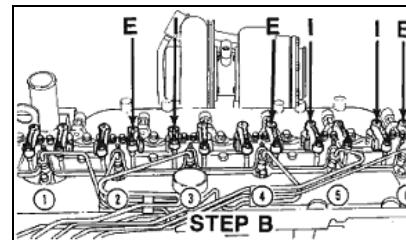

NOTE: If the seal is not damaged, it can be used again.


If the seal is damaged, install a new seal.

Install the rubber seal into the groove in the valve cover.

Start the installation at the overlap area shown in the illustration.

Do not stretch the rubber seal.


If the seal has more overlap than shown in the illustration, trim the length to provide the correct overlap.

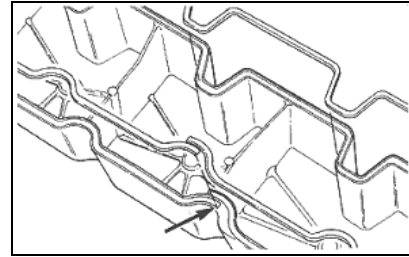

Install new sealing o-rings on the capscrews.

Install the valve cover and wastegate sensing tube.

Torque Value: 24 N•m [212 in-lb]

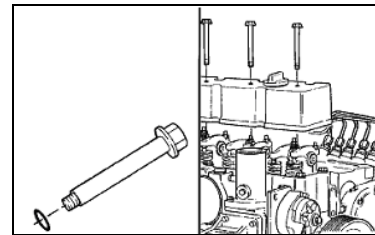


Install the crankcase vent tube, and secure with the support clamps and hose clamp.


Torque Values:

A = 24 N•m [212 in-lb]

B = 43 N•m [32 in-lb]

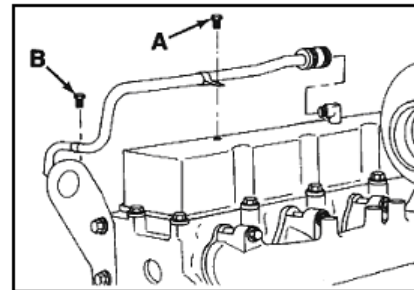


Install the air crossover tube and any other parts previously removed to gain access to the valve cover.

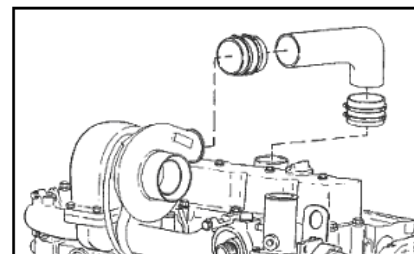


Procedure 34

Inspect Turbocharger


Remove the air intake and the exhaust piping.
Look for damaged or cracked compressor or turbine blades.
Check to see that the turbocharger shaft spins freely.

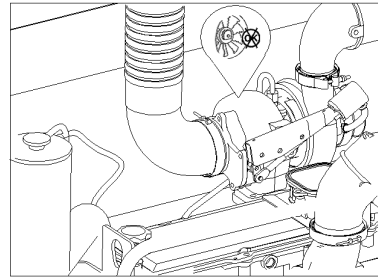

If the compressor impeller is damaged, inspect the intake piping and filter element for damage.
Repair any damage before operating the engine.

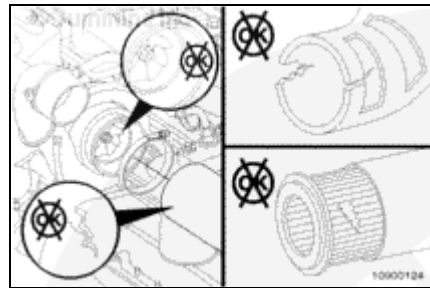


Remove the exhaust pipe from the turbocharger.
Inspect the turbine wheel for damage.
Replace the turbocharger if damage is found. Contact a Cummins Authorized Repair Location for replacement.

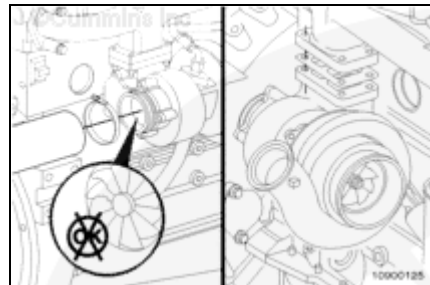

NOTE: If visual inspections or dimensional checks indicate a problem, contact a Cummins Authorized Location for Assistance.



The turbocharger must be removed for replacement or rebuild if the clearances are beyond the limits.
Install the air intake and the exhaust piping and tighten the clamps.

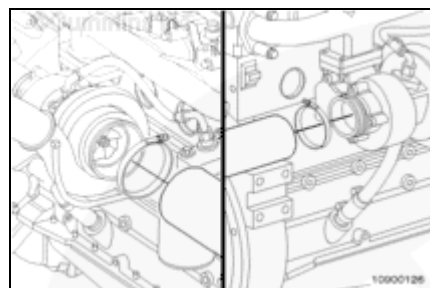

Every Two Years or 2000 Hours

General Information

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

Procedure 35

Inspect Viscous Damper




The silicone fluid in the vibration damper will become solid after extended service and will make the damper inoperative. An inoperative vibration damper can cause major engine or drivetrain failures.

Check the damper for evidence of fluid loss, dents, and wobble.

Visually inspect the vibration damper thickness for any deformation or raising of the damper front cover plate.

If any variations or deformations are detected, refer to the Troubleshooting and Repair Manual for detailed inspection procedures.

Viscous dampers have a limited life. The maximum damper life specifications are located in Maintenance Specifications.

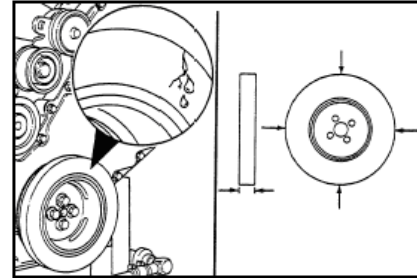


Procedure 36

Inspect Water Pump

Inspect the water pump for drive pulley wobble and grease or water leakage around the water pump shaft.

Replace with a new or rebuilt, pre-lubricated unit as necessary.

Refer to the Troubleshooting and Repair Manual for more information.

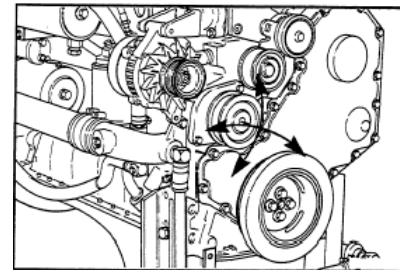

Procedure 37


Engine Steam Cleaning

**WARNING**

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

Steam is the best method of cleaning a dirty engine or a piece of equipment. If steam is **not** available, use a solvent to wash the engine.

Protect all electrical components, openings, and wiring from the full force of the cleaner spray nozzle.

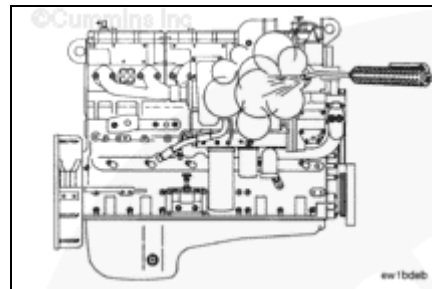

Every Four Years or 5000 Hours

General Information

All maintenance checks and inspections listed in previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

Procedure 38

Inspect Overhead Set

Preparatory Steps

Remove the crankcase breather tube, rocker lever cover mounted breather only.




Remove the variable geometry turbocharger actuator air supply line, if equipped.


Remove the capscrews.

Remove the rocker lever cover and gasket.

NOTE: Rocker lever cover configurations will be different based upon if the cover is center bolted or perimeter bolted.

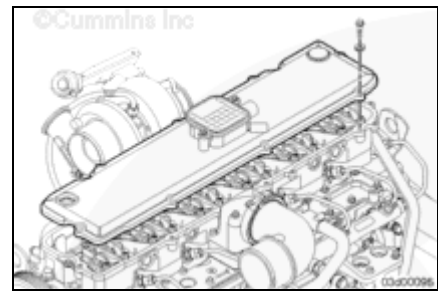

Remove the plastic fuel pump drive cover located on the front of the engine.

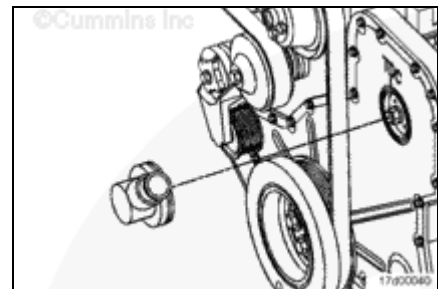


Adjust



Engine coolant temperature should be less than 60°C [140°F].


Use the barring tool, Part Number 3824591, or equivalent, and rotate the crankshaft to align the top dead center marks on the gear cover and the fuel pump gear.

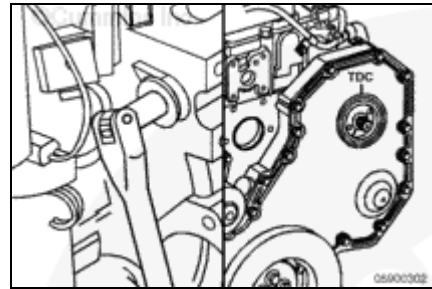

With the engine in this position, lash can be checked on the following rocker arms: 1I, 1E, 2I, 3E, 4I, and 5E.


Lash Check Limits

	mm		in
Intake	0.152	MIN	0.006
	0.559	MAX	0.022
Exhaust	0.381	MIN	0.015
	0.813	MAX	0.032

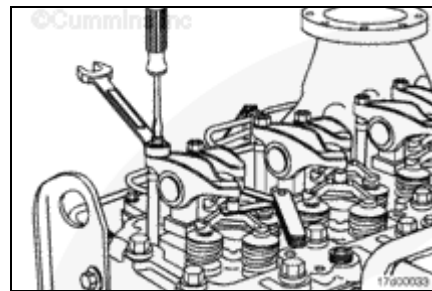

NOTE: Lash checks are performed as part of a troubleshooting procedure, and resetting is not required during checks as long as the lash measurements are within the above limits.

Measure lash by inserting a feeler gauge between the crosshead and the rocker lever ball insert and socket while lifting up on the end of the rocker arm. If the lash measurement is out of specification, loosen the locknut and adjust the lash to the nominal specification.

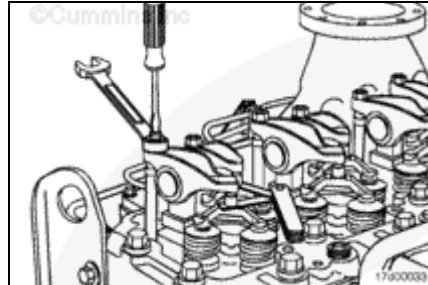

Lash Reset Specifications


	mm		in
Intake	0.305	NOM	0.012
Exhaust	0.559	NOM	0.022

NOTE: Lash resets are only required at the interval specified in the Maintenance Schedule, when lash is measured and found out of specification, or when engine repairs cause removal of the rocker arms and/or loosening of the adjusting screws.

Tighten the locknut and measure again.

Torque Value: 24 N•m [18 ft-lb]

Use the barring tool, Part Number 3824591, or equivalent, and rotate the crankshaft 360 degrees and measure lash for rocker arms 2E, 3I, 4E, 5I, 6I, and 6E. Reset the lash, if out of specification.

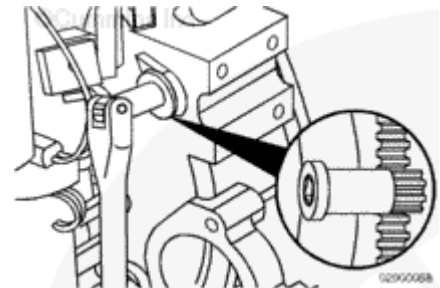


Finishing Steps

Center Bolted Rocker Lever Cover

Place the gasket on the cylinder head. Be sure the gasket is properly aligned around the cylinder head capscrews.




Install the rocker lever cover and capscrews.

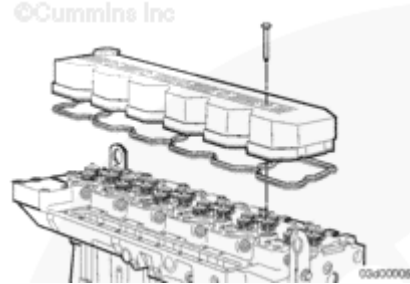

Tighten the capscrews.

Torque Value: 12 N•m [106 in-lb]

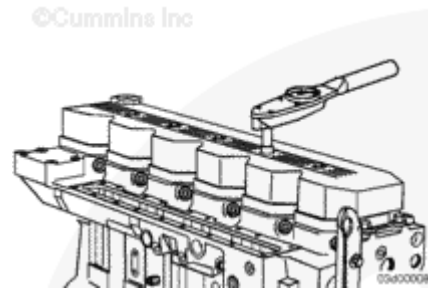


Perimeter Bolted Rocker Lever Cover

NOTE: If the gasket has been removed from the rocker lever cover, a new gasket must be used.


The following installation procedure must be used when installing the press-in gasket:

1. Press the molded gasket into the corners of the rocker lever cover.
2. Press the gasket around the capscrew mounting holes.
3. Press the remaining gasket into the rocker lever cover.

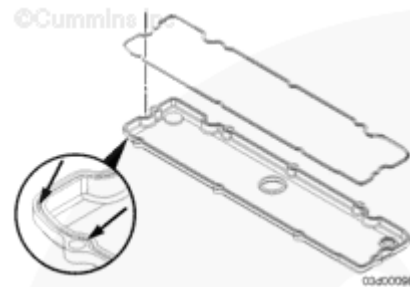

Install the rocker lever cover and capscrews.

Torque Value: 12 N•m [106 in-lb]

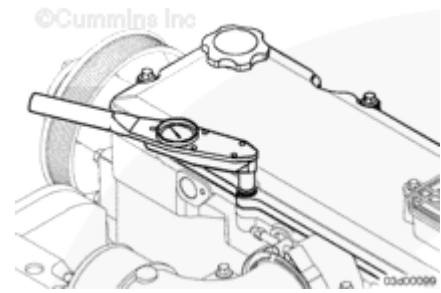

Install the crankcase breather tube, rocker lever cover mounted breather only.

Install the variable geometry turbocharger actuator air supply line, if equipped.

THIS PAGE INTENTIONALLY LEFT BLANK

Section 6 - System Diagrams

Section Contents

	Page
Overview	6-3
Flow Diagram, Fuel System	6-4
Flow Diagrams, Lubricating Oil System	6-5
Flow Diagrams, Cooling System	6-8
Flow Diagram, Air Intake System	6-11
Flow Diagram, Exhaust System	6-12
Assembly Diagram, Raw Water Piping	6-13

THIS PAGE INTENTIONALLY LEFT BLANK

Overview


General Information

The following drawings show the flow through the engine systems. Although the parts can be different for various applications and installations, the flow remains the same. The systems shown are as follows:

- Fuel System
- Lubricating Oil System
- Coolant System
- Intake Air System
- Exhaust System
- Raw Water Piping

Knowledge of the engine systems can help in troubleshooting, servicing, and general maintenance of the engine.


Flow Diagram, Fuel System

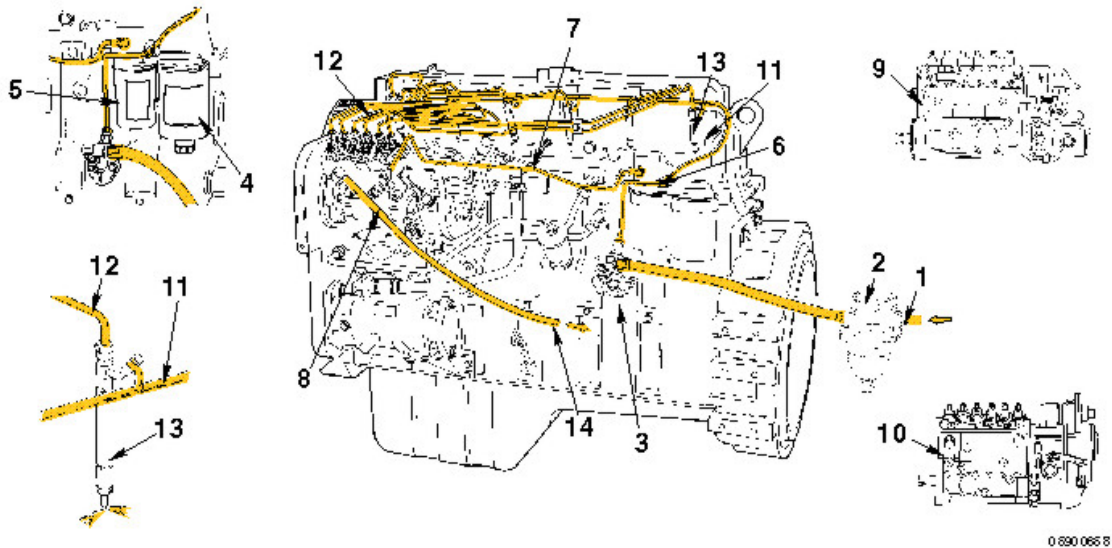

0 690 066 8


- | | | | |
|----|---------------------------------|-----|------------------------------|
| 1. | Fuel from supply tank | 8. | Bosch® PES.MW injection pump |
| 2. | Pre-filter or screen | 9. | Bosch® PES.A injection pump |
| 3. | Fuel transfer pump | 10. | Bosch® PES.P injection pump |
| 4. | Fuel/water separator | 11. | Fuel drain manifold |
| 5. | Fuel filter | 12. | High-pressure fuel lines |
| 6. | Low-pressure supply line | 13. | Hole-type injectors |
| 7. | Turbocharger boost control line | 14. | Fuel return to supply tank |

Flow Diagrams, Lubricating Oil System

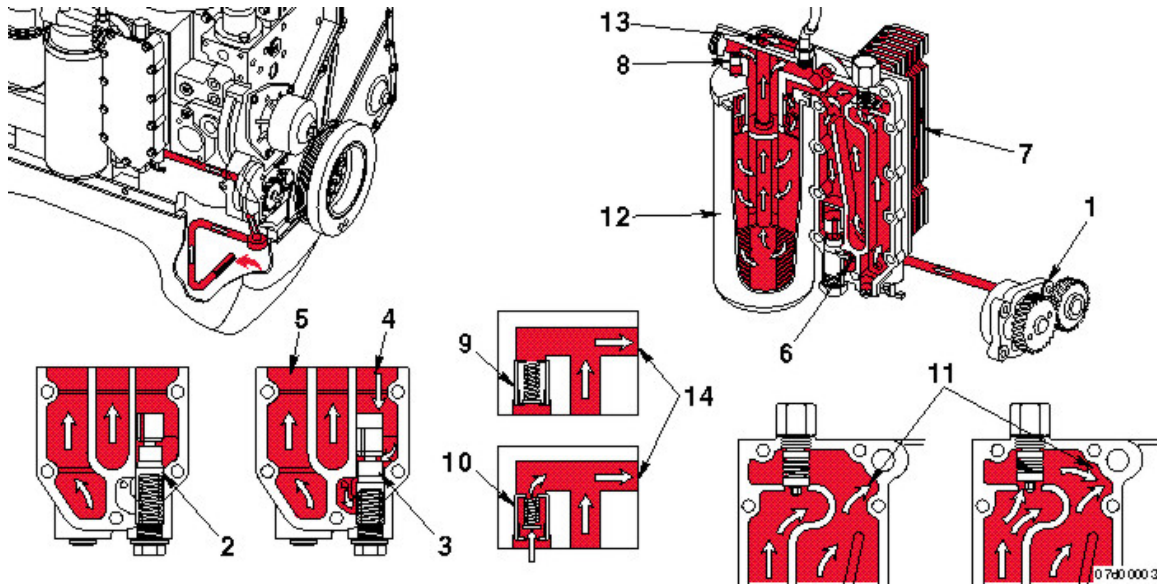


- | | | | |
|----|----------------------------------|-----|----------------------------------|
| 1. | Gerotor lubricating oil pump | 8. | Filter bypass valve |
| 2. | Pressure regulating valve closed | 9. | Filter bypass valve closed |
| 3. | Pressure regulating valve open | 10. | Filter bypass valve open |
| 4. | From lubricating oil pump | 11. | To lubricating oil filter |
| 5. | To lubricating oil cooler | 12. | Full-flow lubricating oil filter |
| 6. | To lubricating oil pump oil pan | 13. | From lubricating oil filter |
| 7. | Lubricating oil cooler | 14. | Main lubricating oil rifle |

Flow Diagrams, Lubricating Oil System (Cont)

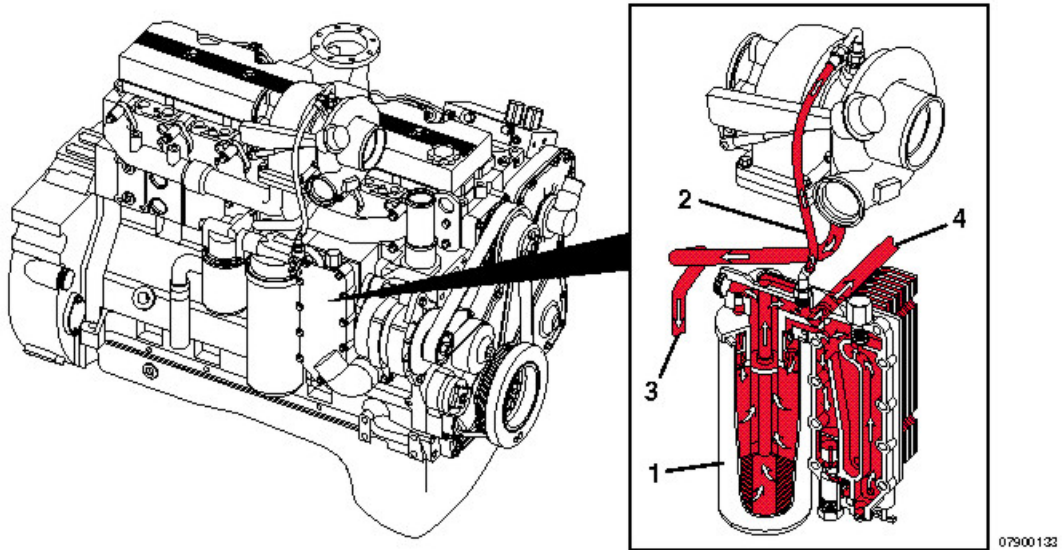


- | | | | |
|----|-------------------------------------|----|------------------------------------|
| 1. | Lubrication oil filter | 3. | Turbocharger lubricating oil drain |
| 2. | Turbocharger lubricating oil supply | 4. | To main lubricating oil rifle |

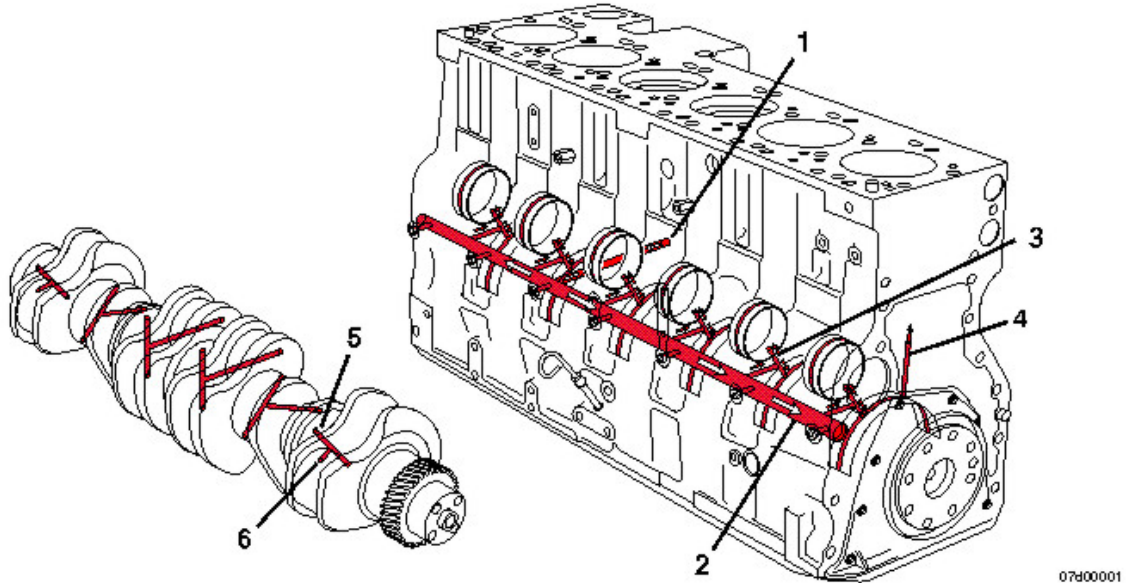

- | | | | |
|----|-----------------------------|----|---------------------------------|
| 1. | From lubricating oil cooler | 4. | To piston cooling nozzle |
| 2. | Main lubricating oil rifle | 5. | From main lubricating oil rifle |
| 3. | To camshaft | 6. | To connecting rod bearing |


Flow Diagrams, Lubricating Oil System (Cont)

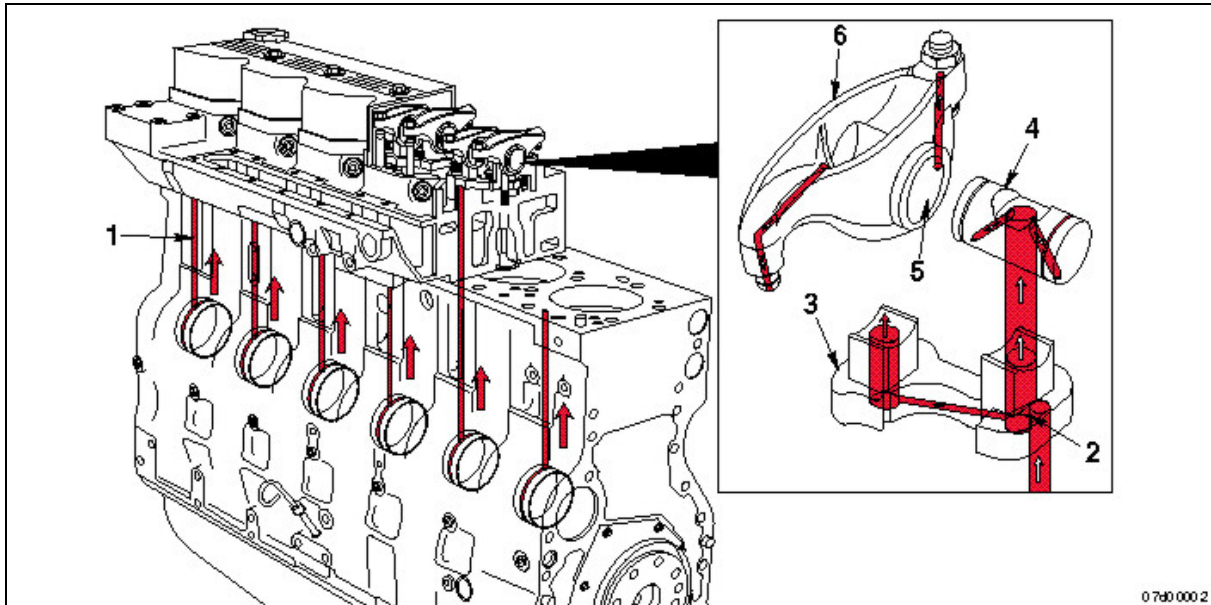


0740 000.2

- | | | | |
|----|----------------------|----|--------------------|
| 1. | From cam bushings | 4. | Rocker lever shaft |
| 2. | Transfer slot | 5. | Rocker lever bore |
| 3. | Rocker lever support | 6. | Rocker lever |

Flow Diagrams, Cooling System

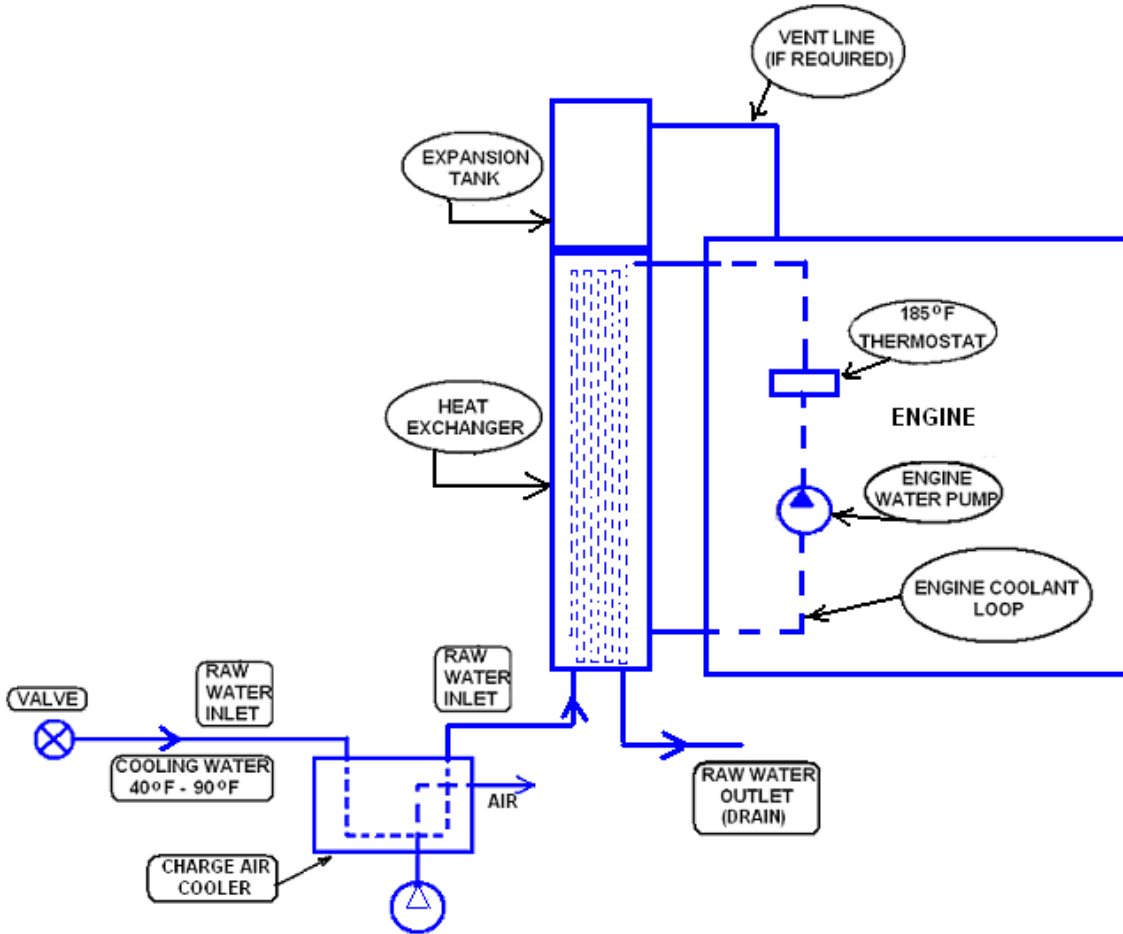


Flow Diagrams, Cooling System (Cont)

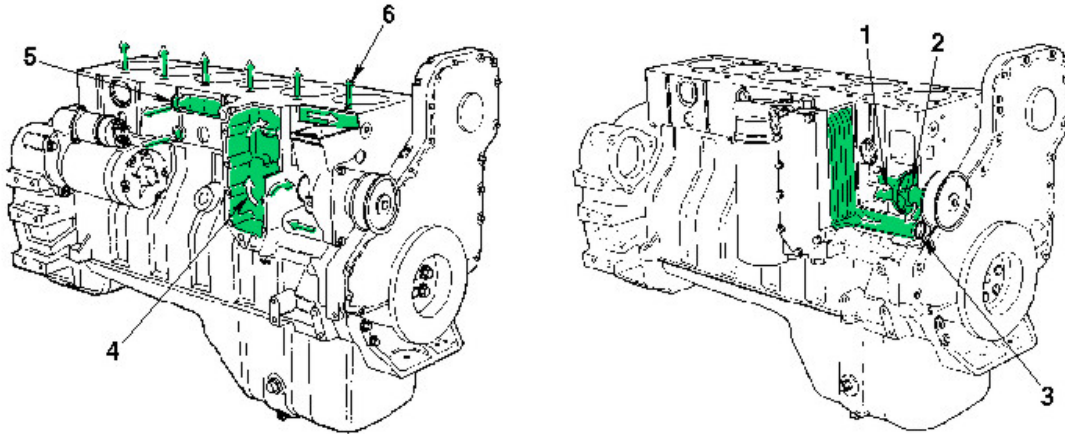

08900201


- | | | | |
|----|----------------------------|----|-------------------------------|
| 1. | Cylinder Bloc | 5. | Coolant flow past oil cooler |
| 2. | Coolant inlet | 6. | Upper coolant manifold |
| 3. | Water pump impeller | 7. | Coolant flow to cylinder head |
| 4. | Coolant flow to oil cooler | | |

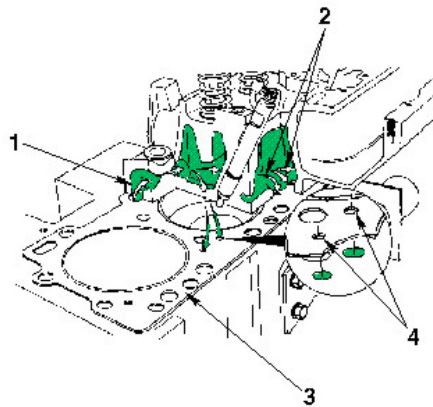

08900202


- | | | | |
|----|----------------------------------|----|----------------------|
| 1. | Cylinder Head | 4. | Cylinder head gasket |
| 2. | Flow from upper coolant manifold | 5. | Coolant flow orifice |
| 3. | Flow to liner cavity | | |

Flow Diagrams, Cooling System (Cont)

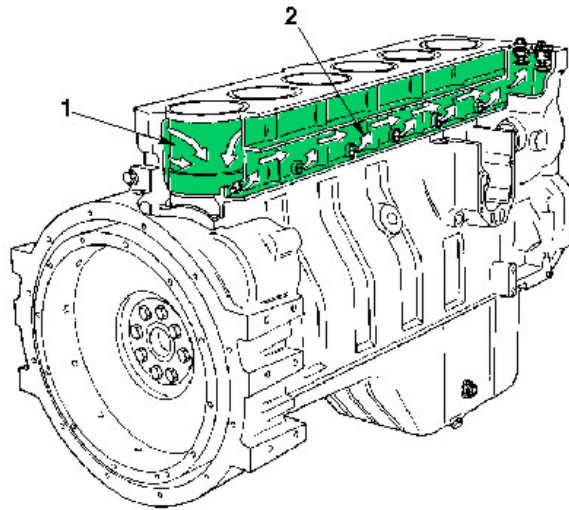

08900200


- 1. Flow past cylinder liners
- 2. Lower coolant manifold

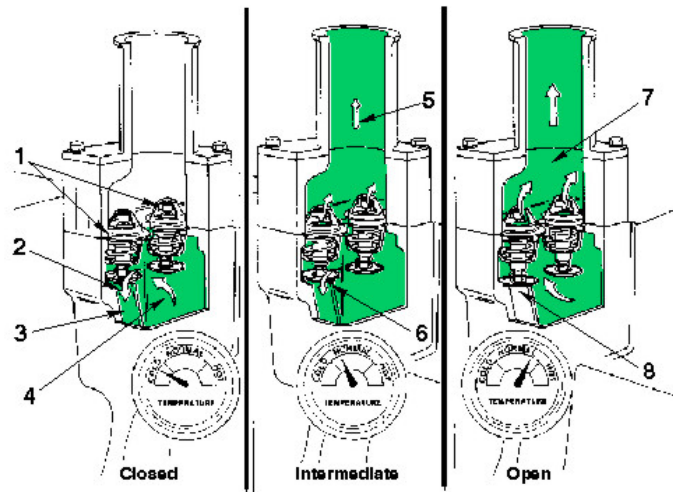

08900202

- 1. Thermostat
- 2. Thermostats
- 3. Flow to water pump inlet
- 4. Bypass passage open
- 5. Flow from lower coolant manifold
- 6. Partial coolant flow to radiator
- 7. Restricted flow to bypass
- 8. Flow to radiator
- 9. Bypass closed


Flow Diagram, Air Intake System

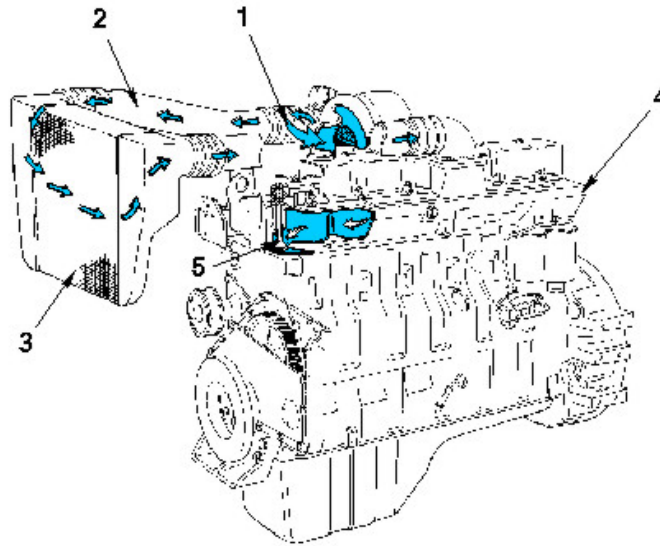

10900277

- | | | | |
|----|---------------------------------------|----|--|
| 1. | Intake air inlet to turbocharger | 4. | Intake manifold - integral part of cylinder head |
| 2. | Turbocharger air to charge air cooler | 5. | Intake valve |
| 3. | Charge air cooler | | |

Flow Diagram, Exhaust System

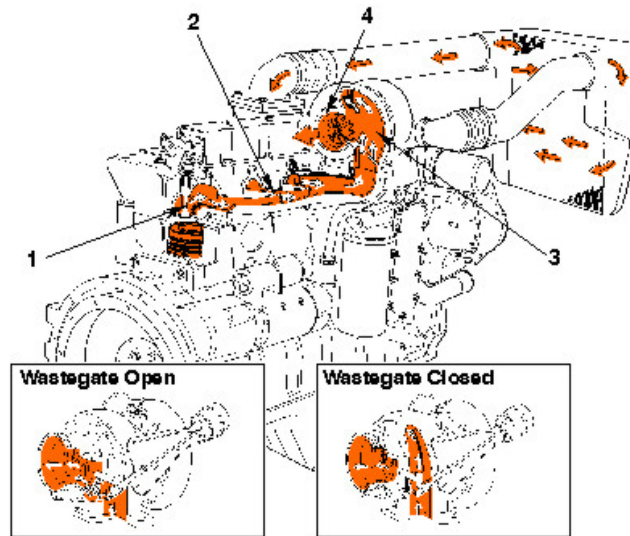


11900058

- | | | | |
|----|-------------------------------|----|-----------------------------|
| 1. | Exhaust valve | 3. | Dual entry to turbocharger |
| 2. | Exhaust manifold - pulse-type | 4. | Turbocharger exhaust outlet |

Assembly Diagram, Raw Water Piping

Raw water is used to cool the engine coolant and is supplied from the fire pump prior to the pump discharge flange. It is forced through a cooling loop by fire pump pressure to the engine heat exchanger. Then it is discharged to an open waste cone.

The following raw water manifold is available as an option (Cummins NPower Part No. 9659). If supplied by the customer, National Fire Protection Association (NFPA) Pamphlet No. 20 lists the components that are required. Refer to the Cooling System Specifications in Section 10 for process requirements. Refer to Raw Water Piping, Lineup, and Configuration in Section 3.

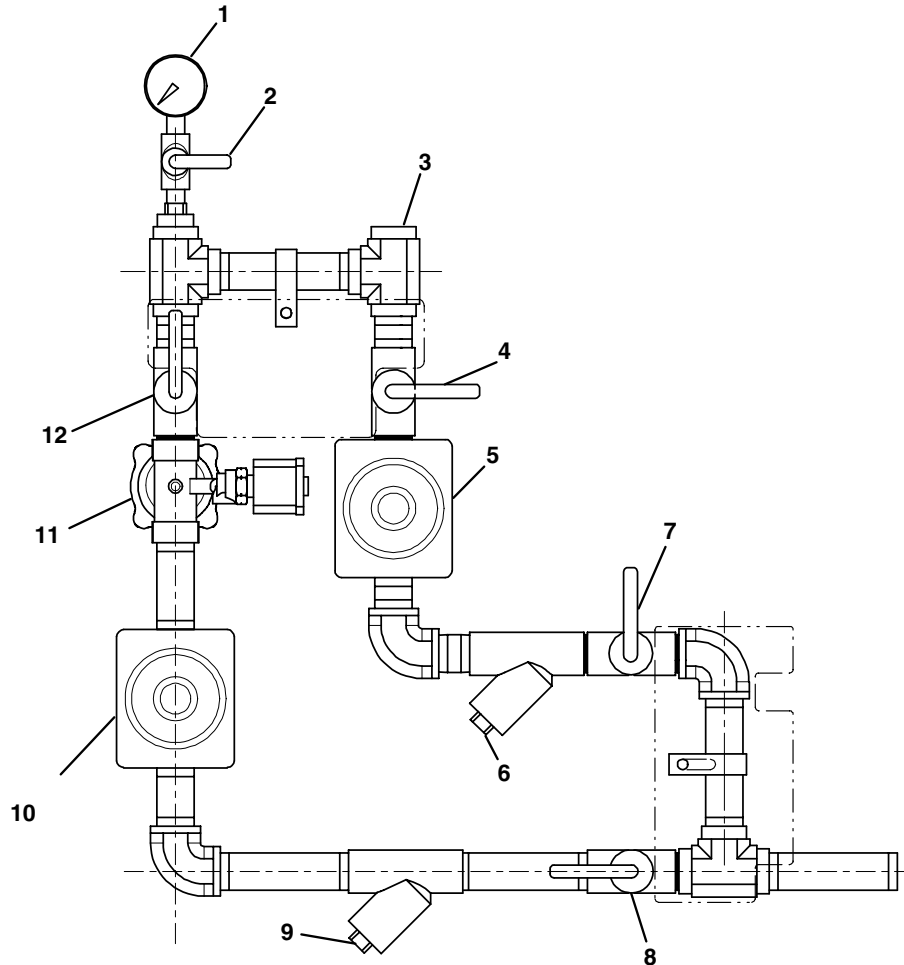

- | | | | |
|----|---------------------------------------|-----|---------------------------|
| 1. | Supply Pressure Gauge | 7. | Bypass Inlet Valve |
| 2. | Supply Pressure Gauge Isolation Valve | 8. | Normal Inlet Valve |
| 3. | 1" supply to the heat exchanger | 9. | Normal Strainer |
| 4. | Bypass Outlet Valve | 10. | Normal Pressure Regulator |
| 5. | Bypass Pressure Regulator | 11. | Solenoid Operated Valve |
| 6. | Bypass Strainer | 12. | Normal Outlet Valve |

THIS PAGE INTENTIONALLY LEFT BLANK

Section 7 – Adjustment, Repair and Replacement

Section Contents

	Page
Overview	7-5
<u>Belts</u>	
Belt Guard Removal/Installation	7-7
Belt Removal/Installation	7-12
Automatic Belt Tensioner Removal/Installation	7-13
<u>Coolant</u>	
Coolant Heat Exchanger Removal/Installation	7-15
Coolant Heater Removal/Installation	7-25
Coolant Hose Removal/Installation	7-30
Raw Water Pressure Regulator Removal/Installation	7-38
Raw Water Solenoid Valve Removal/Installation.....	7-42
Water Temperature Gauge Removal/Installation	7-45
Coolant Temperature Sender Removal/Installation	7-47
Coolant Temperature Switch Removal/Installation.....	7-49
Coolant Thermostat Removal/Installation.....	7-51
Coolant Thermostat Tests	7-57
Coolant Water Pump Removal/Installation	7-59
Coolant Filter Assembly Removal/Installation	7-64
<u>Electrical</u>	
Alternator Checks and Testing	7-67
Alternator Removal/Installation	7-70
Battery Isolator Removal/Installation	7-72
Engine Harness Removal/Installation	7-75
Voltmeter Removal/Installation	7-77
Battery Testing.....	7-79
Battery Removal/Installation	7-84
Check Battery Cables and Connections	7-88
Starter Motor Assembly Removal/Installation	7-89
Crank Solenoid Assembly Removal/Installation	7-91
Control Panel Fuse Replacement	7-94

Section Contents (Cont)

	Page
<u>Exhaust</u>	
Exhaust Manifold Removal/Installation	7-97
Exhaust Restriction Measurement	7-99
Exhaust Shield Removal/Installation	7-100
<u>Fuel</u>	
Inline Fuel Injection Pump Removal/Installation	7-103
Fuel Injection Pump, In-Line, Spill Port Timing	7-111
Fuel Pump Idle Speed Adjustment.....	7-119
Fuel Shutoff Valve Removal/Installation	7-120
Fuel Lift Pump Removal/Installation.....	7-123
Air in Fuel.....	7-125
Measure Fuel Drain Line Restriction	7-130
Fuel Drain Lines Removal/Installation.....	7-131
Fuel Filter Adapter Removal/Installation	7-134
Measure Fuel Inlet Restriction.....	7-135
Fuel Drain Manifold Removal/Installation	7-137
Low Pressure Fuel Supply Lines Removal/Installation	7-139
Fuel Injectors Removal/Installation	7-141
Fuel Return Overflow Valve Removal/Installation.....	7-143
High Pressure Injector Supply Lines Removal/Installation.....	7-146

Section Contents (Cont)

	Page
<u>Intake Air</u>	
Air Leaks, Air Intake and Exhaust Systems Checks.....	7-149
Air Intake Restriction Indicator Removal/Installation	7-153
Intake Air Cleaner Element Removal/Installation	7-154
Air Crossover Pipe Removal/Installation	7-156
Air Intake Manifold Removal/Installation	7-157
Aftercooler Removal/Installation (CFP83-F10, F20, F30 Only).....	7-161
Charge-Air Cooler Removal/Installation (CFP83-F40 Only)	7-165
Turbocharger Removal/Installation	7-166
Turbocharger Axial Clearance Check.....	7-173
Turbocharger Oil Drain Line Removal/Installation.....	7-174
Turbocharger Oil Supply Line Removal/Installation.....	7-176
Turbocharger Radial Bearing Clearance.....	7-177
Turbocharger Wastegate Actuator Removal/Installation	7-179
<u>Oil</u>	
Lubricating Oil Cooler Removal/Installation.....	7-185
Lubricating Oil and Filter Analysis	7-189
Lubricating Oil Pan Removal/Installation.....	7-191
Lubricating Oil Pressure Regulator Removal/Installation.....	7-192
Lubricating Oil Pump Removal/Installation	7-194
Oil Pressure Sender Removal/Installation	7-204
Oil Pressure Gauge Removal/Installation	7-205
Oil Pressure Switch Removal/Installation.....	7-207

Section Contents (Cont)

	Page
<u>Speed</u>	
Speed Sensor Removal/Installation	7-209
Tachometer Removal/Installation	7-211
Overspeed Switch Removal/Installation.....	7-213
Tachometer Calibration.....	7-215

Overview

Coverage

This section of this manual addresses the Adjustment, Repair, and Replacement of Cummins NPower Fire Pump Engine components. Work this manual with the associated base engine troubleshooting and repair manual.

Base engine components are addressed in Cummins Manual No. 3666003, C Series Troubleshooting and Repair Manual.

Refer to Service Literature in Section 8 for additional information about this manual.

Requirements

Satisfy all code requirements or local regulations necessary to remove the fire pump from service. This may require contacting the local fire department or other authority.

Obtain the required tools and supplies for the intended service. If fluids are to be drained, get appropriate containers. Dispose of any waste fluids or removed components in accordance with applicable environmental requirements.

Ensure that the area is prepared for the intended service.

When work is completed, ensure that the fire pump is operational and correctly aligned for service. As required, notify the local fire department or other authority.

Maintenance must be performed by trained, experienced technicians. Refer to Service Assistance in Section 9 for qualified service assistance.

This Page Intentionally Left Blank

Belt Guard Removal/Installation

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.




Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap (Cummins Fire Power Part No.11407). Heated coolant spray or steam can cause personal injury.

Place the fire protection system in a safe mode for engine service.



Place the AUTO/MANUAL rocker switch in the MANUAL position.

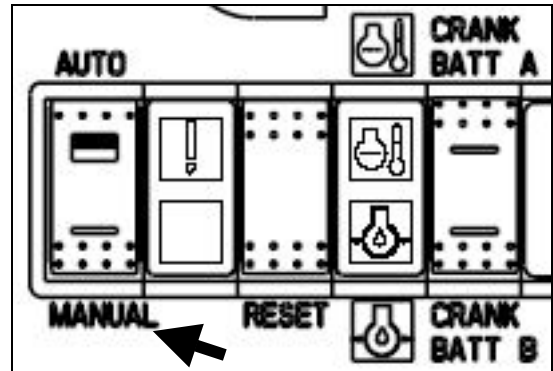

Disconnect or isolate the coolant heater power supply.




REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

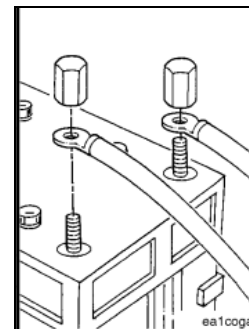


Belt Guard Removal/Installation (Cont)

All


Ensure that the engine and engine coolant is cool in order to avoid burns.

Remove the engine coolant pressure cap, (Cummins Fire Power Part No.11407).

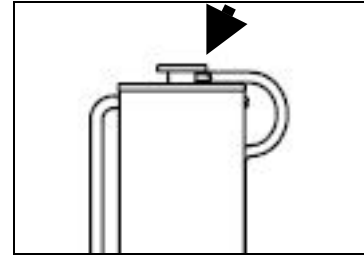


CFP83-F10, F20, F30 Only

Open the aftercooler coolant vent.

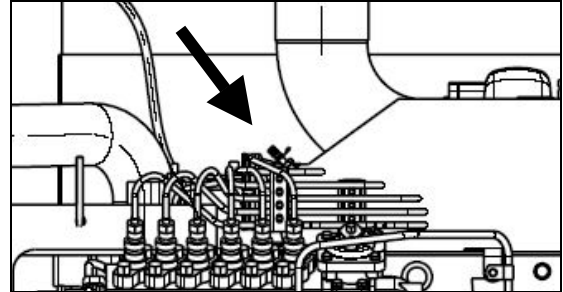

All


Drain the engine coolant system. Refer to Drain and Flush Coolant System in Section 5.

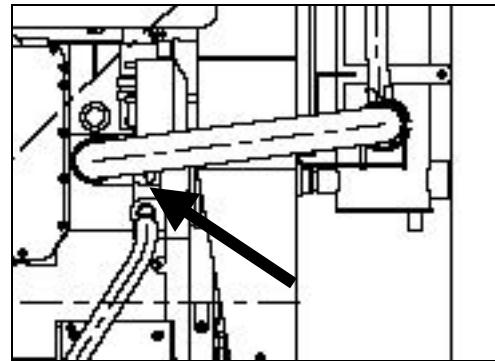

Remove the Upper Engine Coolant Hose from the heat exchanger.

Remove the Lower Engine Coolant and Fill Hose from the heat exchanger.

Remove the Coolant Vent Hose from the heat exchanger.

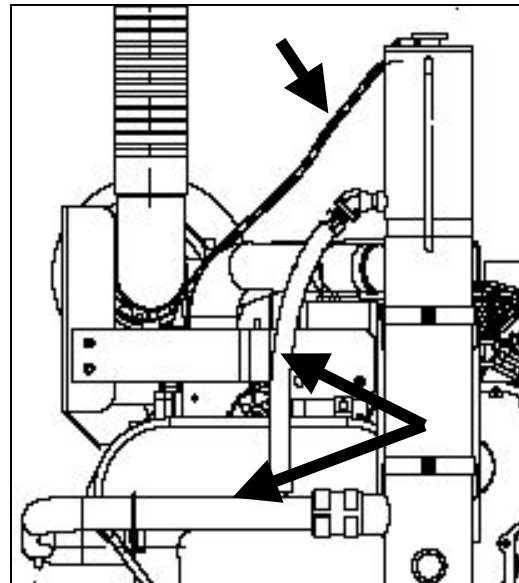


Belt Guard Removal/Installation (Cont)

Remove

Drain the coolant from the coolant heat exchanger. Refer to Drain and Flush Cooling System in Section 5.

Remove the Coolant Heat Exchanger's Coolant Outlet Hose and Vent Hose. Refer to Coolant Hose Removal / Installation in this section.

Remove the three bolts and the belt guard.

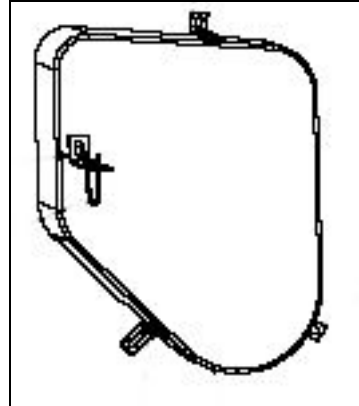

Install


NOTE: Install only Cummins approved replacement belt guard (Cummins Fire Power Part No. 9625 [CFP83- F10, F20, F30] or Part No. 9627 [CFP83- F40]).

When other work is completed, install the belt guard using the three bolts.

Torque as per Capscrew Markings and Torque Values in Section 10.

Install the Coolant Heat Exchanger's Coolant Outlet Hose and Vent Hose. Refer to Coolant Hose Removal / Installation in this section.

Refill the coolant. Refer to Drain and Flush Cooling System in Section 5.

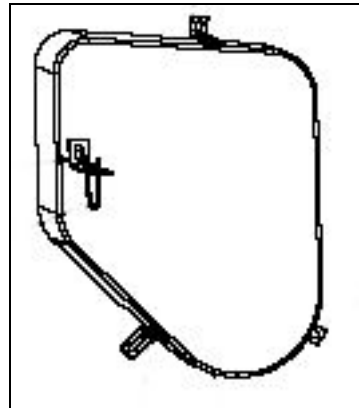


Follow-Up

Install the Upper Engine Coolant Hose at the heat exchanger.

Install the Lower Engine Coolant and Fill Hose at the heat exchanger.


Install the Coolant Vent Hose at the heat exchanger.

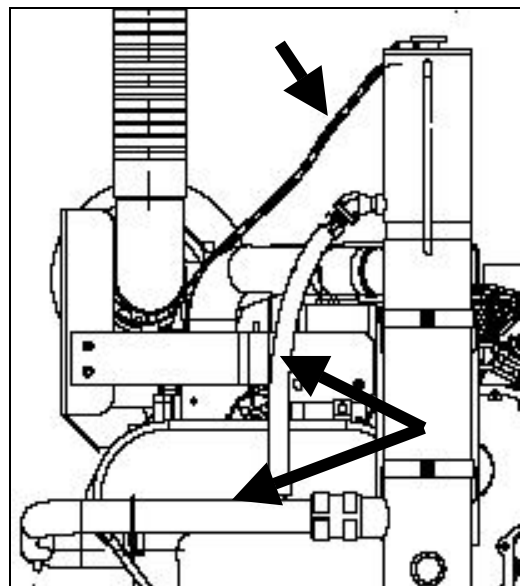

Belt Guard Removal/Installation (Cont)


CFP83-F10, F20, F30 Only

Close the aftercooler coolant vent.

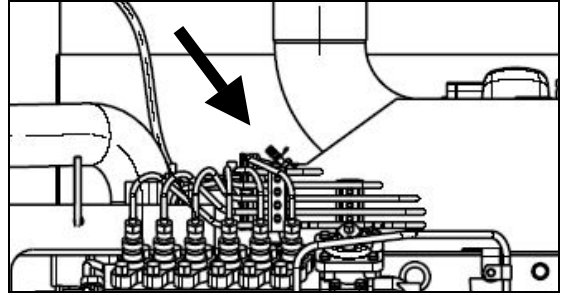

All


Close the coolant drain valve.

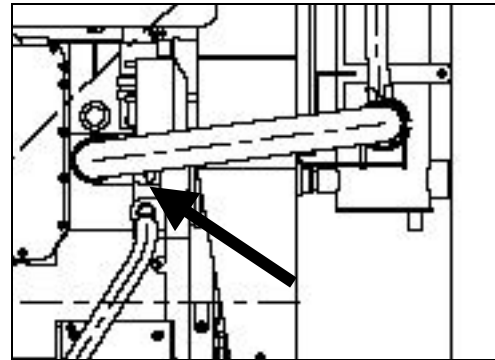

Refill engine coolant as required Refer to Drain and Flush Coolant System in Section 5.



Install the coolant system pressure cap (Cummins Fire Power Part No.11407).

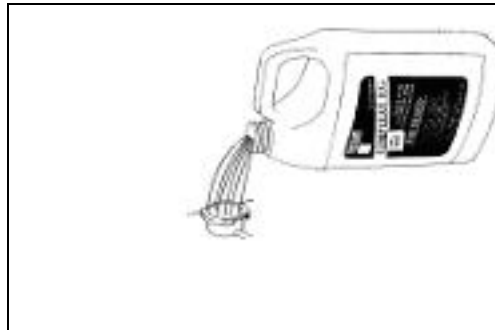

Reconnect the coolant heater power supply.




For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

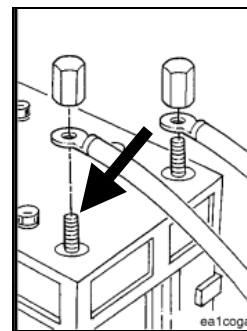

Belt Guard Removal/Installation (Cont)

NOTE: Start the engine and do a quick check for leaks. If any coolant leaks are observed, stop the engine, repair the leak, check coolant level, then restart the engine.



Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Check for and repair any coolant leaks.


Ensure that repairs are completed satisfactorily.

Stop the engine.

Place the AUTO/MANUAL rocker switch in the AUTO position.



Return the fire protection system to operating status.

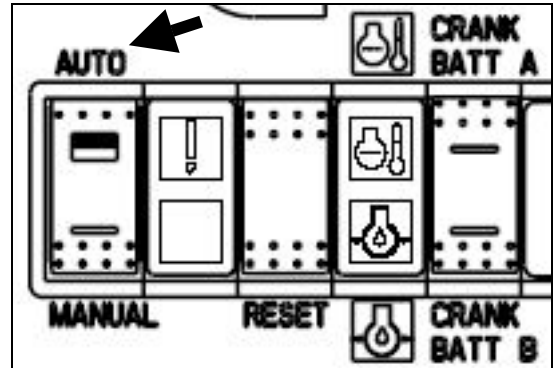

Belt Removal/Installation

Prepare


Do the preparatory steps and remove the Belt Guard. Refer to Belt Guard Removal / Installation in this section.



Remove

NOTE: The belt tensioner is spring-loaded and must be pivoted away from the drive belt. Pivoting in the wrong direction can result in damage to the belt tensioner.

Lift belt tensioner to relieve tension in the belt, and remove the belt.

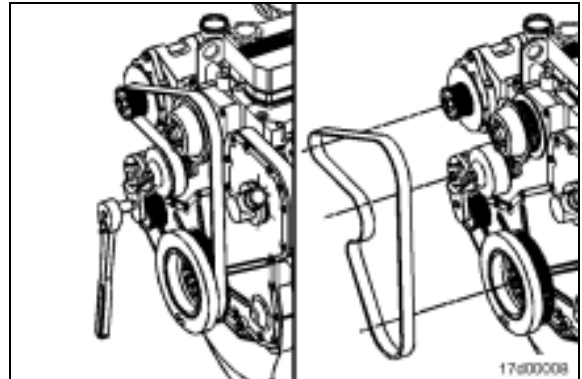

Install

Service Tip: If difficulty is experienced installing the drive belt; for example, the belt seems too short; position the belt over the grooved pulleys first; then, while holding the tensioner up, slide the belt over the water pump pulley.

NOTE: The belt tensioner is spring-loaded and must be pivoted away from the drive belt. Pivoting in the wrong direction can result in damage to the belt tensioner.


NOTE: Install only Cummins approved replacement v-ribbed belts (Cummins Part No. 3288812) or equivalent.

Lift belt tensioner to relieve tension in the belt, and install the belt.



Allow the belt tensioner to relax.

Ensure that the belt tensioner supplies tension to the belt without being at a mechanical limit stop.

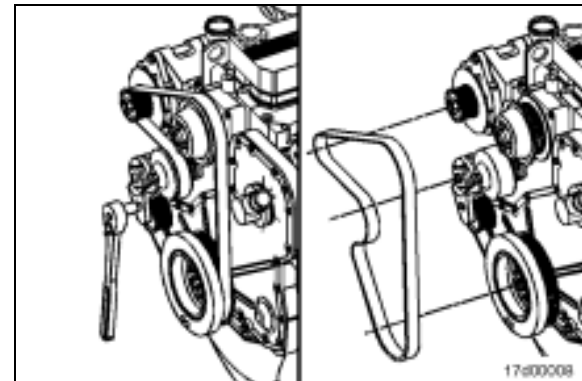

Follow-Up

When work is completed, install the Belt Guard and do the listed follow up steps. Refer to Belt Guard Removal/Installation in this section.



Check that the drive belt operates without unusual noises.




Automatic Belt Tensioner Removal/Installation

Prepare


Do the preparatory steps and remove the Belt Guard. Refer to [Belt Guard Removal/Installation](#) in this section.

Remove the Drive Belt. Refer to [Belt Removal/Installation](#) in this section.



Remove


Remove the capscrew and belt tensioner.

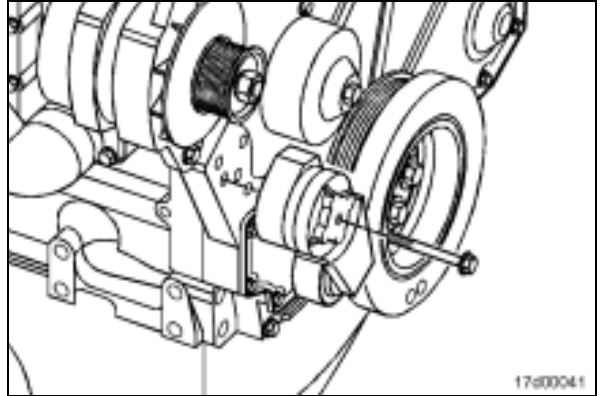

Install

Install the belt tensioner and tighten the capscrew.

Torque Value: 43 N•m [32 ft-lb]

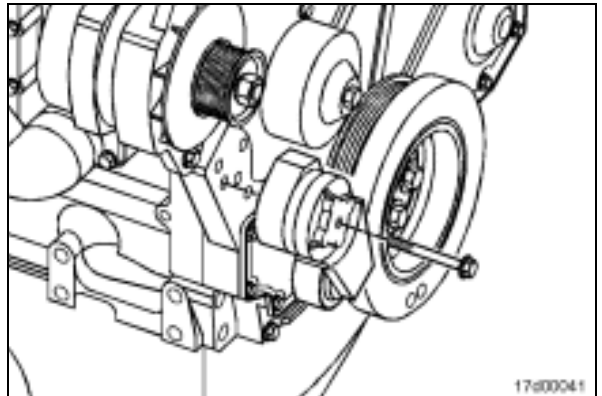

Follow-Up

When work is completed, install the Drive Belt. Refer to [Belt Removal/Installation](#) in this section.

When work is completed, install the Belt Guard and do the listed follow up steps. Refer to [Belt Guard Removal/Installation](#) in this section.

Check that the drive belt operates without unusual noises.



This Page Intentionally Left Blank

Coolant Heat Exchanger Removal/Installation

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.




Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Place the fire protection system in a safe mode for engine service.



Place the AUTO/MANUAL rocker switch in the MANUAL position.

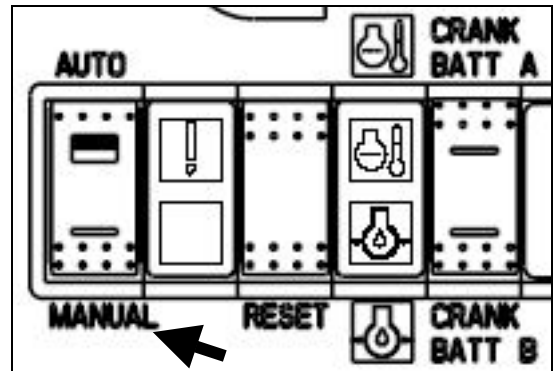

Disconnect or isolate the coolant heater power supply.




REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

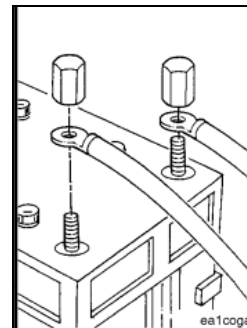


Coolant Heat Exchanger Removal/Installation (Cont)

All


Ensure that the engine and engine coolant is cool in order to avoid burns.

Remove the engine coolant pressure cap (Cummins Fire Power Part No. 11407).

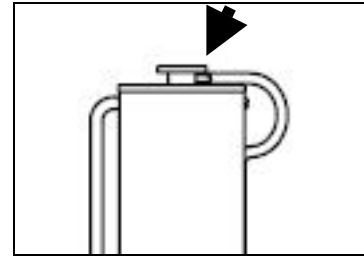


CFP83-F10, F20, F30 Only

Open the aftercooler coolant vent.

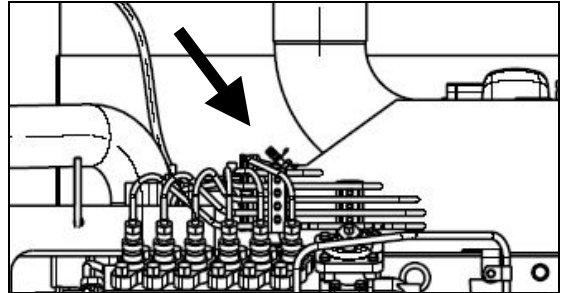

All

Drain the engine coolant system. Refer to Drain and Flush Coolant System in Section 5.

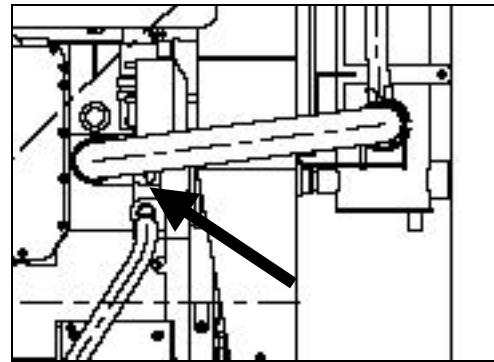


Coolant Heat Exchanger Removal/Installation (Cont)

Remove the Upper Engine Coolant Hose from the heat exchanger.




Remove the Lower Engine Coolant and Fill Hose from the heat exchanger.

Remove the Coolant Vent Hose from the heat exchanger.

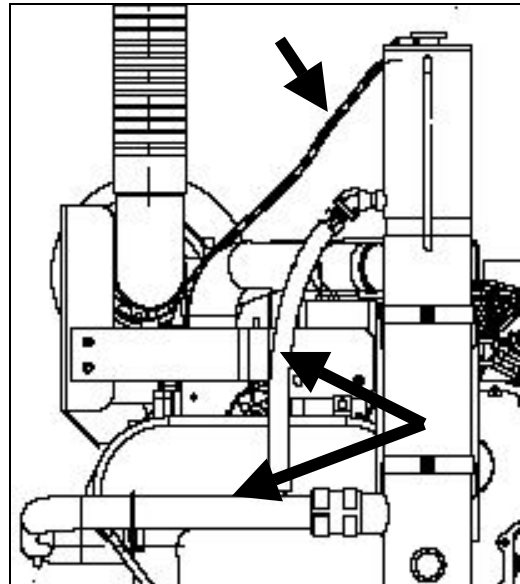

Close the Raw Water Manifold Bypass Line Outlet Isolation Valve.

Close the Raw Water Manifold Normal Line Outlet Isolation Valve.

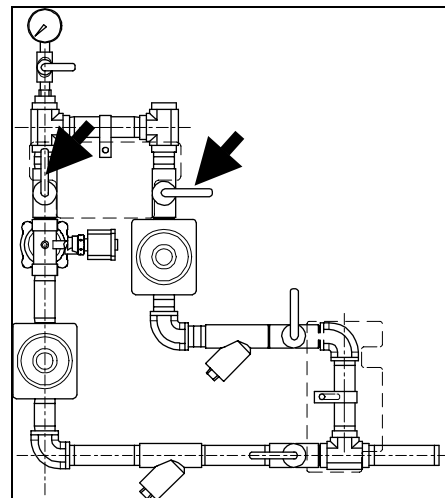


CFP83-F10, F20, or F30 Only

NOTE: If using piping supplied by Cummins Fire Power, refer to Drawing 9637 in Section 13 for raw water supply piping details.



Remove the 1" NPT raw water inlet piping from the valve manifold to the heat exchanger.

Also, remove any customer-supplied raw water outlet fittings. Save these components for reuse.

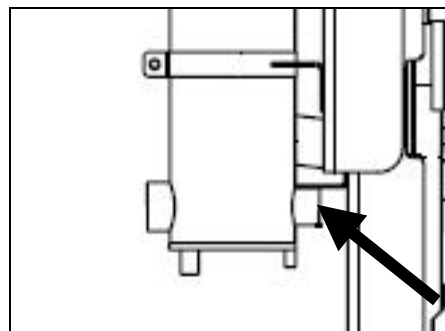


Coolant Heat Exchanger Removal/Installation (Cont)

CFP83-F40 Only

Remove the raw water inlet piping from the charge air cooler to the heat exchanger. (Refer to Drawing 10712 in Section 13 for raw water supply piping details.)

Also, remove any customer-supplied raw water outlet fittings. Save these components for reuse.

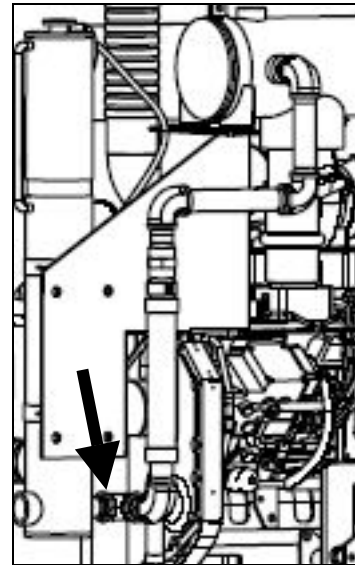

Pressure Test

NOTE: This test is required if internal leakage in the heat exchanger is suspected. It may be performed prior to the removal from the engine.

NOTE: Use teflon tape or other pipe sealant when installing the test setup in order to prevent leaks.

Install a 1-1/4" NPT pipe plug at the raw water outlet of the heat exchanger.

Install a pressure test setup with 700 kPa [100 psi] pressure gauge at the 1" NPT raw water inlet to the heat exchanger.

NOTE: There should be no detectable decrease in the pressure reading for the duration of the test.


Apply air pressure at 621 kPa [90 psig].

Isolate the pressure source and monitor the pressure gauge for 5 minutes.

After testing, release the pressure.

Remove the pipe plug and the test setup.

If leakage is detected, the heat exchanger must be replaced.

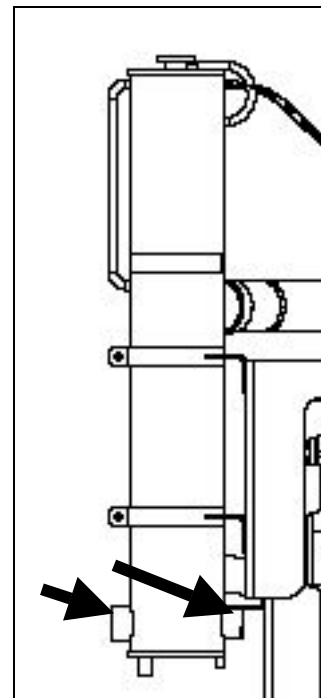


Coolant Heat Exchanger Removal/Installation (Cont)

Remove

Provide temporary support for the coolant heat exchanger in order to avoid dropping it.

Remove the four back sets of nuts, washers, and bolts at the heat exchanger mounting clamps.


Remove the heat exchanger and clamps from the engine.

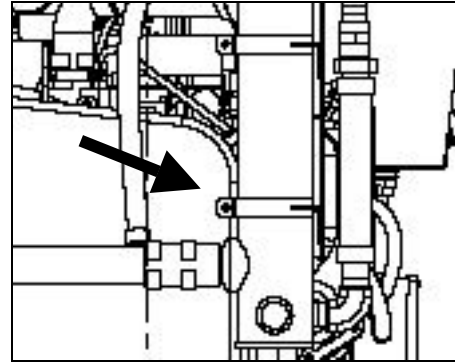

Disassemble

If required for replacement, remove the two front sets of nuts and bolts at the coolant heat exchanger clamps.


If required for replacement, remove the zinc plug and other pipe fittings from the heat exchanger.

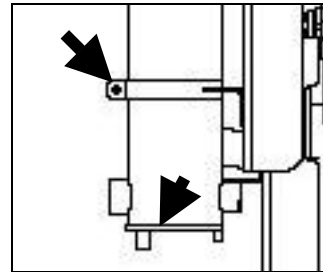

Assemble

NOTE: Use teflon or other pipe sealant when installing threaded pipe fittings.


If missing, install the zinc plug (Cummins Fire Power Part No. 9750) and brass fitting (Cummins Fire Power Part No. 9751) in the bottom of the heat exchanger.

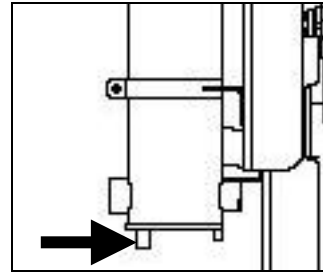

Torque Values: As per capscrew markings and torque values in Section 10

If missing, install the pipe fittings removed from the original heat exchanger. Refer to [Drawing 8919](#) in Section 13 for component information.

If removed, position the two clamps on the heat exchanger and install the two front sets of nuts and bolts at the coolant heat exchanger clamps. Do not tighten at this time. Refer to [Drawing 8919](#) in Section 13 for component information.

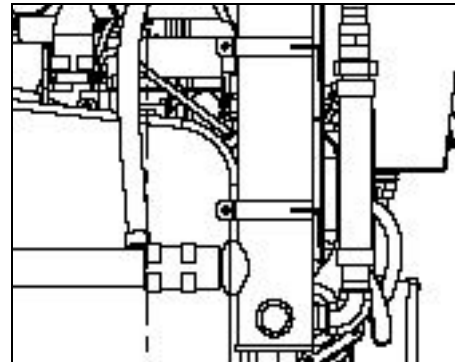

Coolant Heat Exchanger Removal/Installation (Cont)

Install

Provide support for the coolant heat exchanger in order to avoid dropping it.


Position the heat exchanger and clamps on the engine's mounting bracket and start the four bolts.

Start the nut and washers on the four bolts.

Align the heat exchanger with the required hose connections and tighten the four back sets of clamp fasteners.

Tighten the two front sets of clamp fasteners.

Torque Value: As per capscrew markings and torque values in Section 10

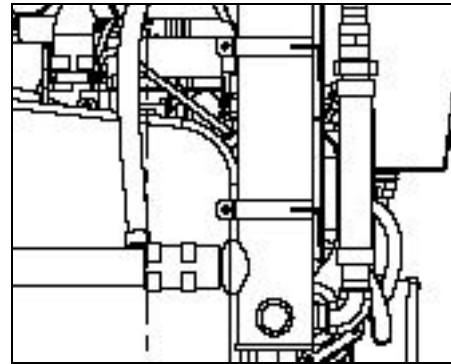


Follow-Up

Install the Upper Engine Coolant Hose at the heat exchanger.

Install the Lower Engine Coolant and Fill Hose at the heat exchanger.

Install the Coolant Vent Hose at the heat exchanger.

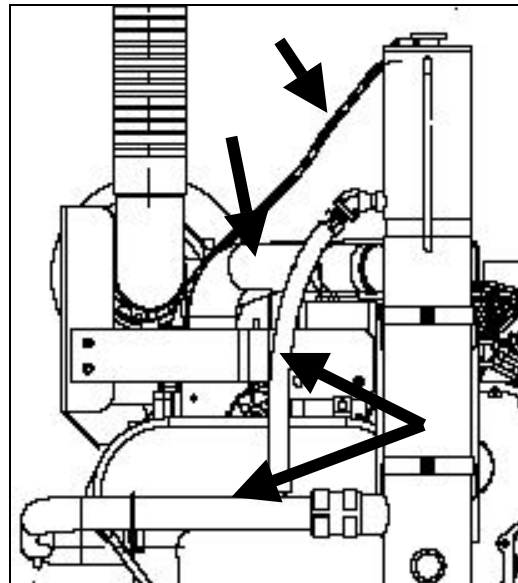


CFP83-F10, F20, or F30 Only

NOTE: If using piping supplied by Cummins Fire Power, refer to Drawing 9637 in Section 13 for raw water supply piping details.

Install the 1" NPT raw water inlet piping from the valve manifold to the heat exchanger.

Also, install any customer-supplied raw water outlet fittings.

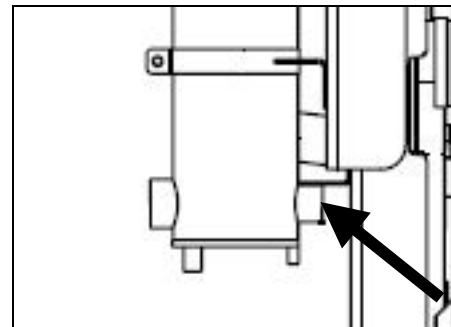


Coolant Heat Exchanger Removal/Installation (Cont)

CFP83-F40 Only


Install the raw water inlet piping from the charge air cooler to the heat exchanger. (Refer to Drawing 10712 in Section 13 for raw water supply piping details.)

Also, install any customer-supplied raw water outlet fittings. Save these components for reuse.

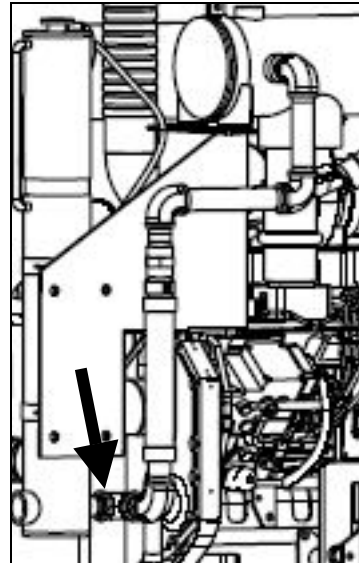


CFP83-F10, F20, F30 Only

Close the aftercooler coolant vent.

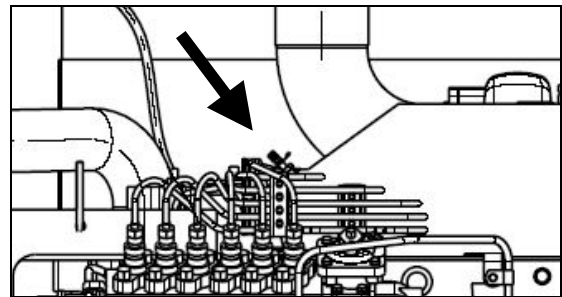

All

Close the coolant drain valve.

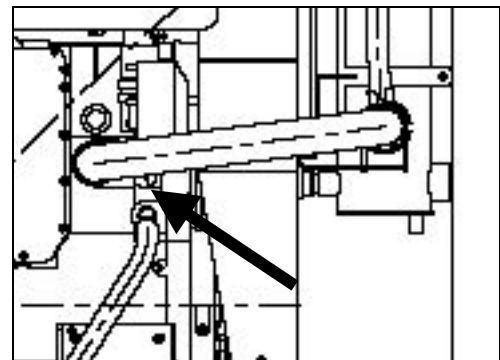


Coolant Heat Exchanger Removal/Installation (Cont)

Refill engine coolant as required Refer to Drain and Flush Coolant System in Section 5.



Install the coolant system pressure cap (Cummins Fire Power Part No. 11407).

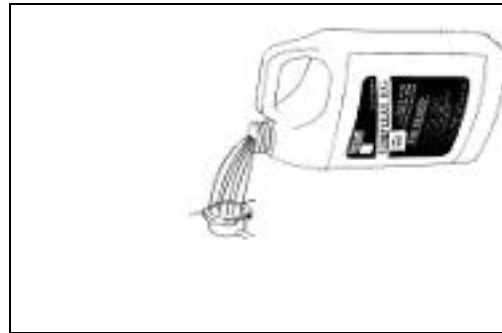

Reconnect the coolant heater power supply.




For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

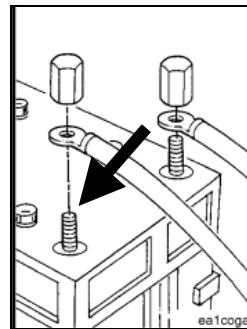

NOTE: Start the engine and do a quick check for leaks. If any coolant leaks are observed, stop the engine, repair the leak, check coolant level, then restart the engine. If no leaks are present, promptly establish raw water flow through the heat exchanger.



Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Check for and repair any coolant leaks.

Coolant Heat Exchanger Removal/Installation (Cont)




When establishing raw water flow, ensure that the raw water pressure does not exceed 414 kPa (60 psig) at the heat exchanger. Adjust the pressure regulators as required.

Slowly open the Raw Water Manifold Bypass Line Outlet Isolation Valve.

Observe raw water flow through the heat exchanger.

Adjust the bypass pressure regulator if required.

Close the Raw Water Manifold Bypass Line Outlet Isolation Valve.

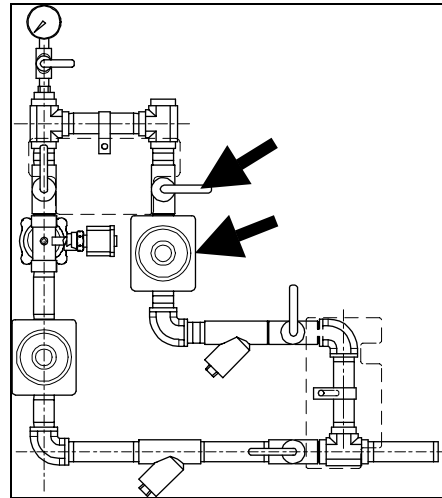


When establishing raw water flow, ensure that the raw water pressure does not exceed 414 kPa (60 psig) at the heat exchanger. Adjust the pressure regulators as required.

Slowly open the Raw Water Manifold Normal Line Outlet Isolation Valve.

Observe raw water flow through the heat exchanger.

Adjust the normal pressure regulator if required.

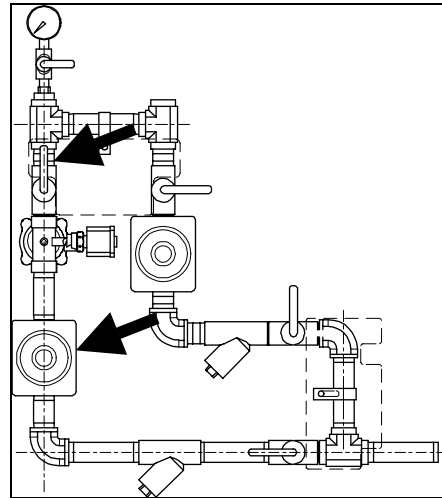

NOTE: If temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in Troubleshooting Section 12.




Check that engine operating temperature stabilizes between about 82 and 93 °C [180 and 200 °F].

Check that no coolant hoses are collapsed.

When temperature has stabilized, stop the engine.

Ensure that repairs are completed satisfactorily.

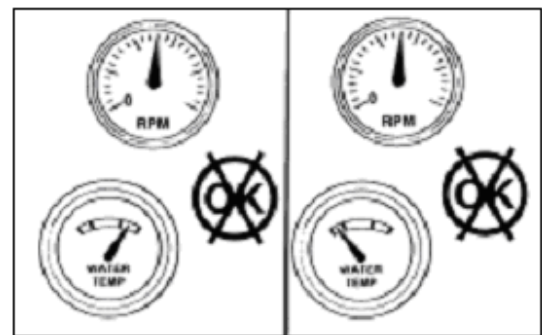


Coolant Heat Exchanger Removal/Installation (Cont)



WARNING


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap, (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Check the coolant level. Refer to Check Coolant Level in Section 5. Add coolant if necessary.

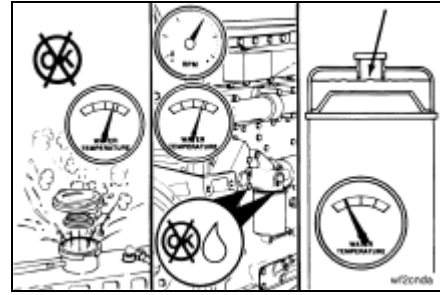

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

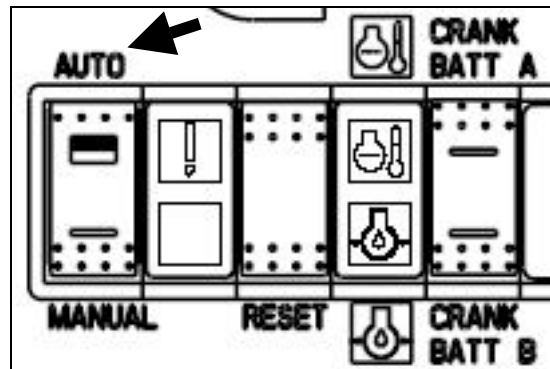

Coolant Heater Removal/Installation

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.




Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Place the fire protection system in a safe mode for engine service.



Place the AUTO/MANUAL rocker switch in the MANUAL position.

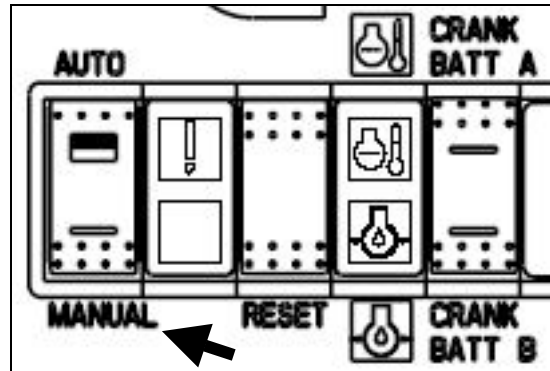

Disconnect or isolate the coolant heater power supply.




REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!


Next, disconnect both batteries at their terminals.

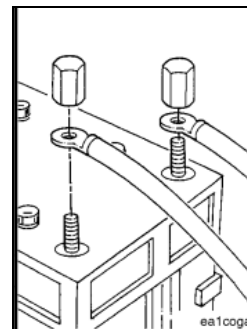

Coolant Heater Removal/Installation (Cont)


CFP83-F10, F20, F30 Only

Open the aftercooler coolant vent.

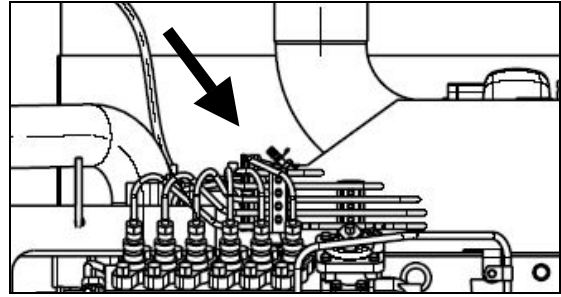

All

Drain the engine coolant system. Refer to Drain and Flush Coolant System in Section 5.

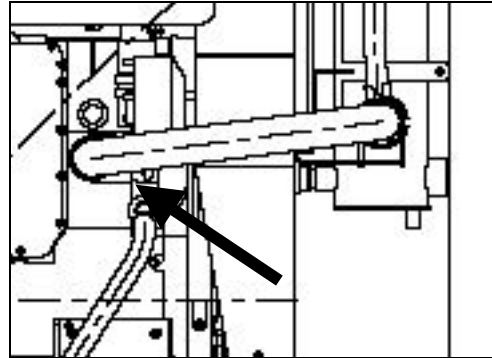


NOTE: Collect the remainder of the coolant in the heater hoses.



NOTE: Refer to Drawing 8930 in Section 13 for detailed component information.

Remove the Upper Coolant Heater Hose.

Remove the Lower Coolant Heater Hose.

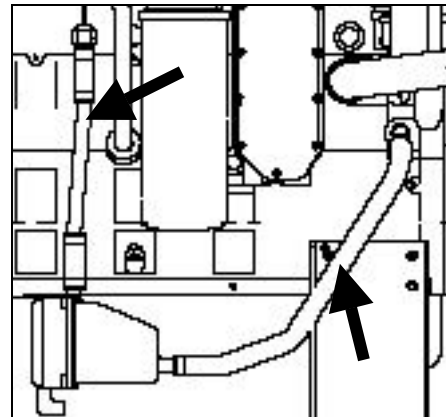


Remove

NOTE: Refer to Drawing 8930 in Section 13 for detailed component information.



Remove the two capscrews, washers, bracket, and coolant heater.

If required, remove the nuts, bolts, washers and mounting bracket from the coolant heater.

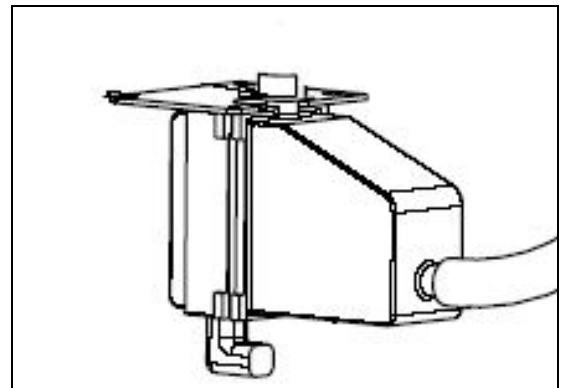

Coolant Heater Removal/Installation (Cont)


Install

NOTE: Refer to Drawing 8930 in Section 13 for detailed component information.

If missing, install the nuts, bolts, washers and mounting bracket on the coolant heater.

Position the coolant heater and mounting bracket and start the two bolts with washers.

Tighten the two bolts on the mounting bracket.

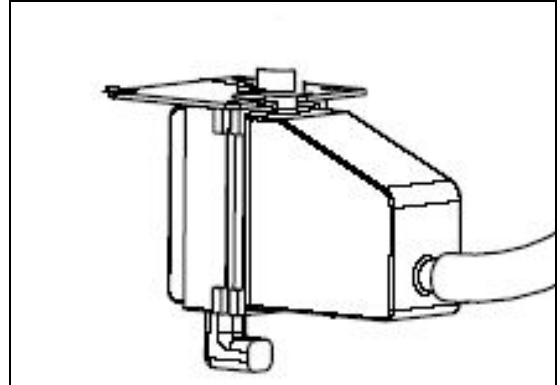


Follow-Up

NOTE: Refer to Drawing 8930 in Section 13 for detailed component information.


Install the Upper Coolant Heater Hose.

Install the Lower Coolant Heater Hose.

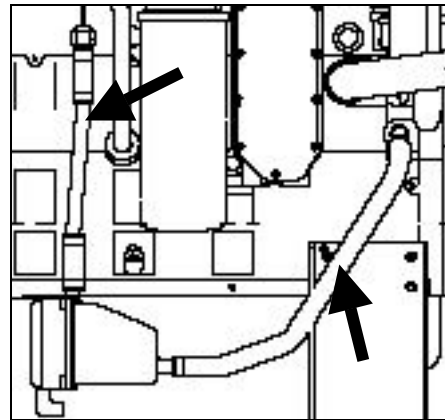


CFP83-F10, F20, F30 Only

Close the aftercooler coolant vent.

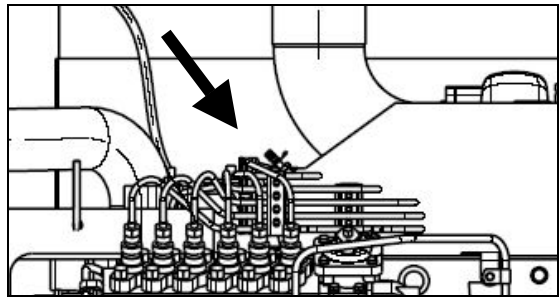


All

Close the coolant drain valve.

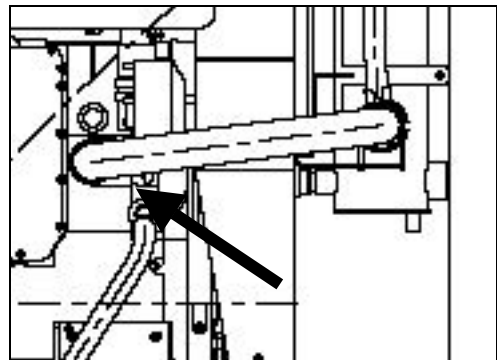


Coolant Heater Removal/Installation (Cont)

Refill engine coolant as required Refer to Drain and Flush Coolant System in Section 5.

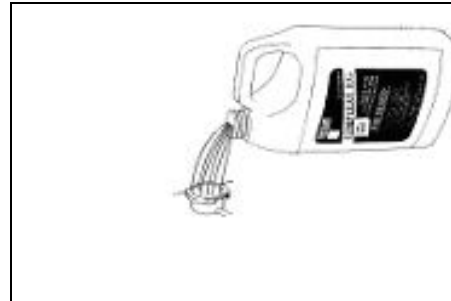

Install the coolant system pressure cap (Cummins Fire Power Part No. 11407).

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.

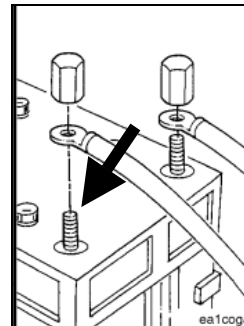

Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

NOTE: Start the engine and do a quick check for leaks. If any coolant leaks are observed, stop the engine, repair the leak, check coolant level, then restart the engine.



Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Check for and repair any coolant leaks.


Stop the engine.



WARNING



Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

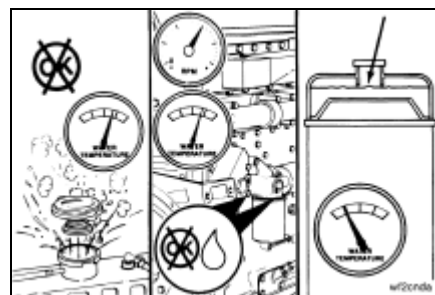

Check the coolant level. Refer to Check Coolant Level in Section 5. Add coolant if necessary.

Reconnect the coolant heater power supply.



Observe that the coolant temperature cools down but stabilizes.


Check that the engine block remains warm to the touch.

Coolant Heater Removal/Installation (Cont)

Place the AUTO/MANUAL rocker switch in the AUTO position.



Return the fire protection system to operating status.

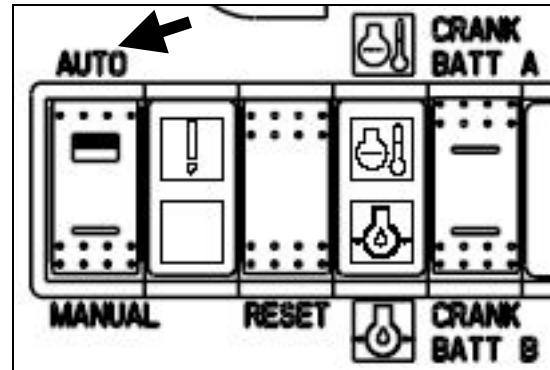

Coolant Hose Removal/Installation

NOTE: This section addresses all coolant tubes and hoses. Only remove those coolant hoses that are necessary. It is not required to remove both ends of the hose for the replacement of other components.

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.




Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Place the fire protection system in a safe mode for engine service.



Place the AUTO/MANUAL rocker switch in the MANUAL position.

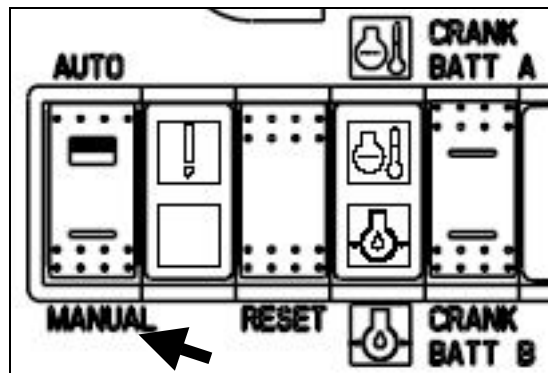


Disconnect or isolate the coolant heater power supply.



REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

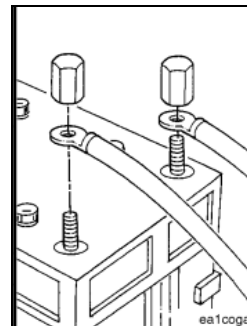

Wear safety glasses when disconnecting batteries!


Next, disconnect both batteries at their terminals.

Coolant Hose Removal/Installation (Cont)

All


Ensure that the engine and engine coolant is cool in order to avoid burns.

Remove the engine coolant pressure cap (Cummins Fire Power Part No. 11407).

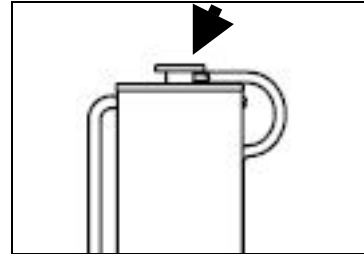

CFP83-F10, F20, F30 Only


Open the aftercooler coolant vent.

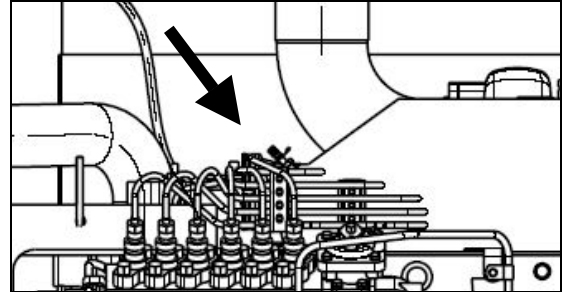

All

NOTE: When draining coolant, drain only the amount needed for the required repair.

Drain the engine coolant system. Refer to [Drain and Flush Coolant System](#) in Section 5.

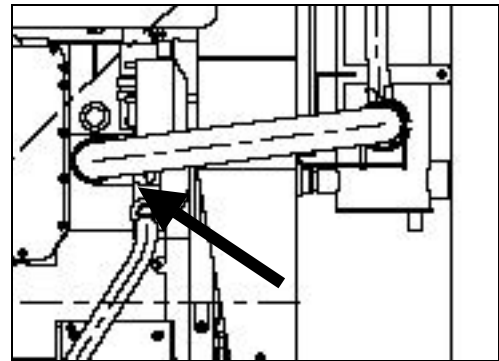


Remove the Upper Engine Coolant Hose

NOTE: Refer to Assembly [Drawing 8919](#) in Section 13 for detailed construction.

Loosen the hose clamp at the heat exchanger.

Loosen the hose clamp at the engine.

Pull the hose from the heat exchanger and engine.

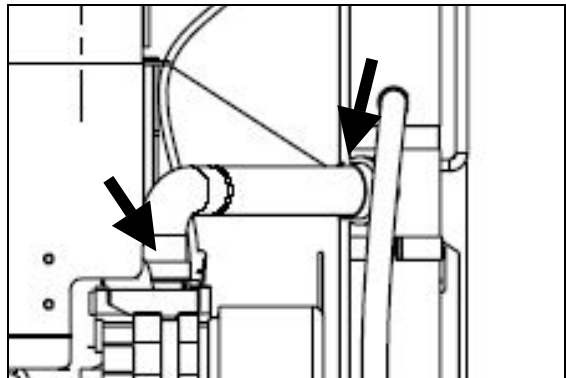

Coolant Hose Removal/Installation (Cont)

Remove the Lower Engine Coolant and Fill Hoses

NOTE: Refer to Assembly Drawing 8919 in Section 13 for detailed construction.


Remove the nuts and U-bolt supporting the lower hose.

Loosen the upper fill hose clamp at the heat exchanger.

Loosen the lower engine coolant hose clamp at the heat exchanger.

Loosen the lower engine coolant hose clamp at the engine.

Pull the hoses from the heat exchanger and engine.

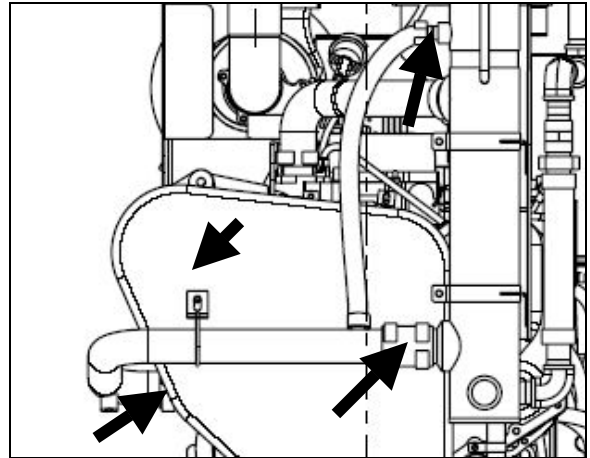

Remove the Upper Coolant Heater Hose

NOTE: Refer to Assembly Drawing 8930 in Section 13 for detailed construction.


NOTE: Be prepared to collect the residual coolant in the hose.

Loosen the hose clamp at the coolant heater.

Loosen the hose clamp at the engine.

Pull the hoses from the coolant heater and engine.

Disassemble additional components if this is required for inspection or repairs.

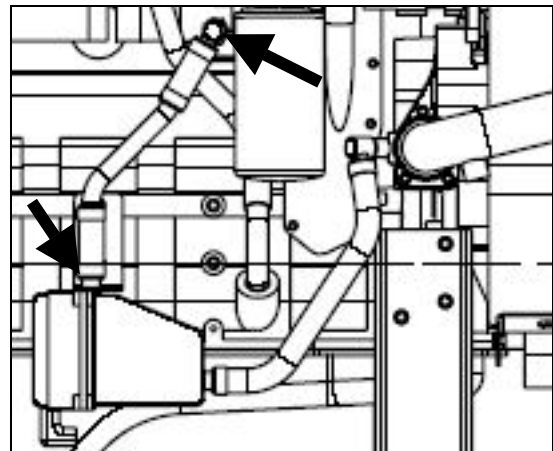

Remove the Lower Coolant Heater Hose

NOTE: Refer to Assembly Drawing 8930 in Section 13 for detailed construction.


NOTE: Be prepared to collect the residual coolant in the hose.

Loosen the hose clamp at the coolant heater.

Loosen the hose clamp at the engine.

Pull the hoses from the coolant heater and engine.

Disassemble additional components if this is required for inspection or repairs.

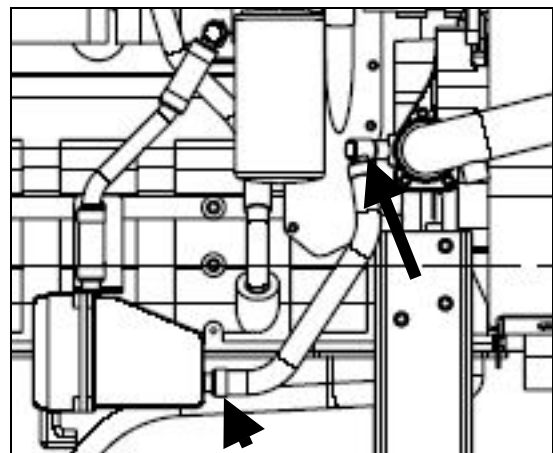

Coolant Hose Removal/Installation (Cont)


Remove the Coolant Vent Hose

NOTE: Refer to Assembly Drawing 9658 in Section 13 for detailed construction.

Loosing the fitting at the heat exchanger.

Loosing the fitting at the engine.

Pull the tubing from the connections.

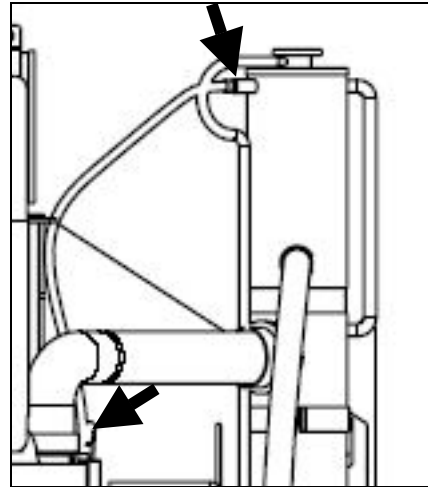


Inspect

NOTE: Inspect the cooling system hoses and hose connection for leaks or deterioration. Particles of deteriorated hose can be carried through the cooling system and slow or partially stop circulation.

Inspect the hoses and hose connections.

Replace any hoses or clamps that are damaged.

Clean any debris from the hose connections.

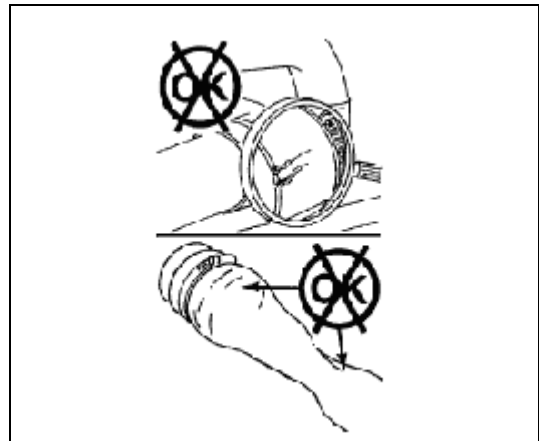

Install the Upper Engine Coolant Hose

NOTE: Refer to Assembly Drawing 8919 in Section 13 for detailed construction.


Position the hose clamps on the hose.

Push the hose onto the heat exchanger and engine.

Tighten the hose clamp at the heat exchanger.

Tighten the hose clamp at the engine.

Torque Value: As per capscrew markings and torque values in Section 10

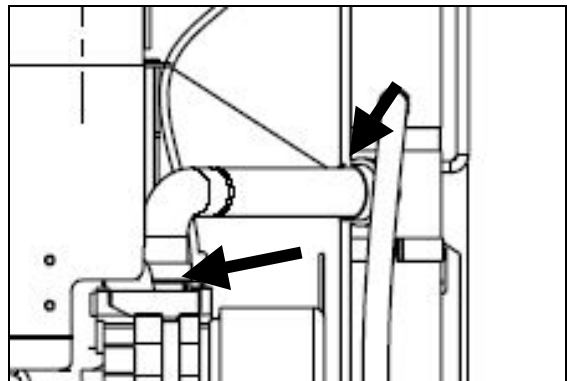

Coolant Hose Removal/Installation (Cont)

Install the Lower Engine Coolant and Fill Hoses



Do not re-install worn or damaged hoses or corroded clamps.

NOTE: Refer to Assembly Drawing 8919 in Section 13 for detailed construction.

Position the hose clamps on the hose.

Position the hoses at the connections on the heat exchanger and engine.


Position and tighten the hose clamp at the engine.

Position and tighten the lower hose clamp at the heat exchanger.

Position and tighten the fill hose clamp at the heat exchanger.

Torque Value: As per capscrew markings and torque values in Section 10

Install the nuts and U-bolt supporting the lower hose. Tighten as per Capscrew Markings and Torque Values in Section 10.

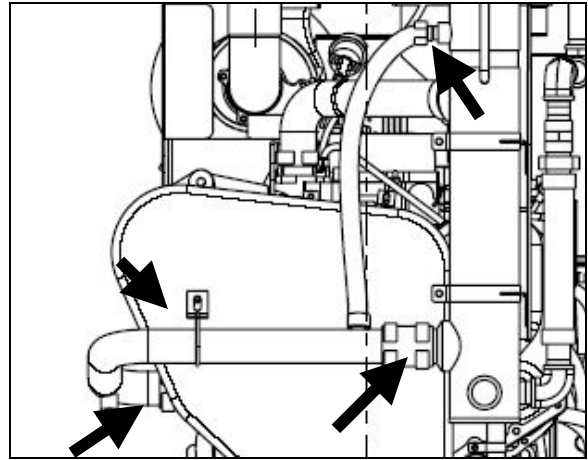

Install the Upper Coolant Heater Hose


NOTE: Refer to Assembly Drawing 8930 in Section 13 for detailed construction.

Position the hose clamps on the hose.

Push the hose on the fitting at the heater and at the engine connection.

Position and tighten the hose clamps.

Torque Values: As per capscrew markings and torque values in Section 10

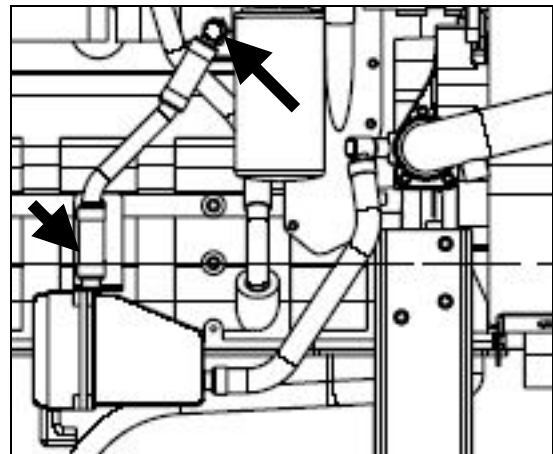

Coolant Hose Removal/Installation (Cont)

Install the Lower Coolant Heater Hose


NOTE: Refer to Assembly Drawing 8930 in Section 13 for detailed construction.

Position the hose clamps on the hose.

Push the hose on the fitting at the heater and at the engine connection.

Position and tighten the hose clamps.

Torque Value: As per capscrew markings and torque values in Section 10

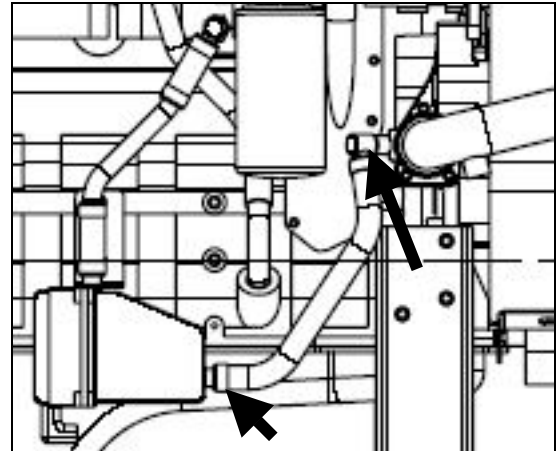


Install the Coolant Vent Hose

NOTE: Refer to Assembly Drawing 9658 in Section 13 for detailed construction.

Connect the hose fitting at the heat exchanger.

Connect the hose fitting at the engine.


Torque Value: As per capscrew markings and torque values in Section 10

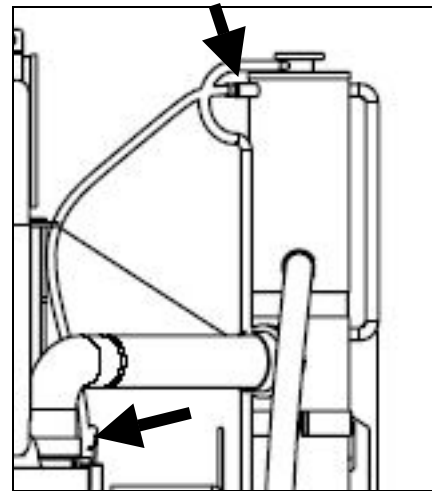

Follow-Up

CFP83-F10, F20, F30 Only


Close the aftercooler coolant vent.

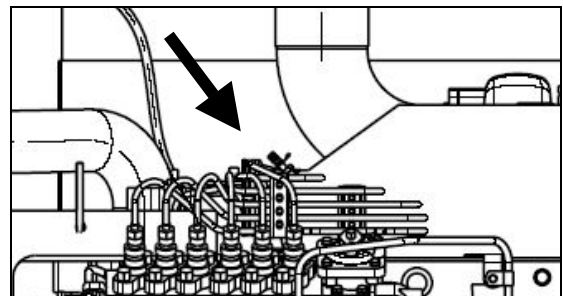

Coolant Hose Removal/Installation (Cont)

All


Close the coolant drain valve.

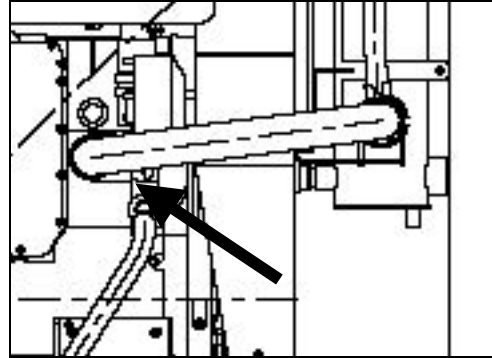

Refill engine coolant as required Refer to [Drain and Flush Coolant System](#) in Section 5.



Install the coolant system pressure cap (Cummins Fire Power Part No. 11407).

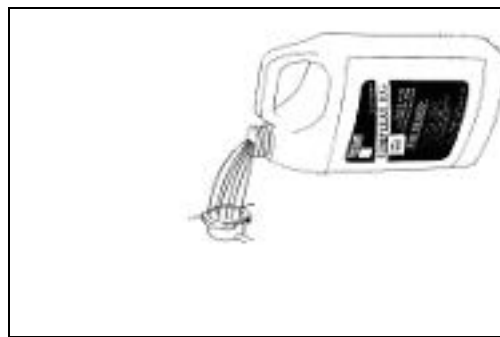

Reconnect the coolant heater power supply.




For safety reasons, both batteries must be reconnected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

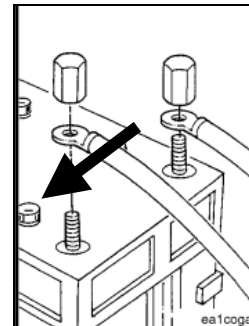

NOTE: Start the engine and do a quick check for leaks. If any coolant leaks are observed, stop the engine, repair the leak, check coolant level, then restart the engine.



Start the engine. Refer to [Normal Local Starting Procedure](#) in Section 3.

Check for and repair any coolant leaks.

Coolant Hose Removal/Installation (Cont)


NOTE: If temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in Troubleshooting Section 12.



Check that engine operating temperature stabilizes between about 82 and 93 °C [180 and 200 °F].

Check that no coolant hoses are collapsed.


When temperature has stabilized, stop the engine.

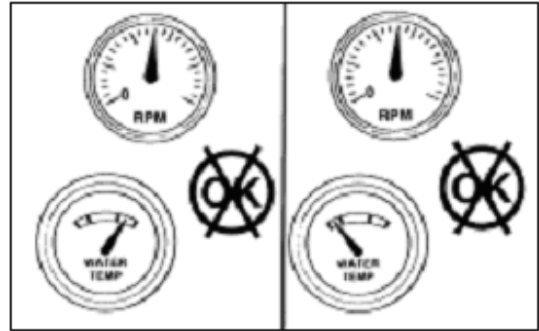

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap, (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.




Check the coolant level. Refer to Check Coolant Level in Section 5. Add coolant if necessary.

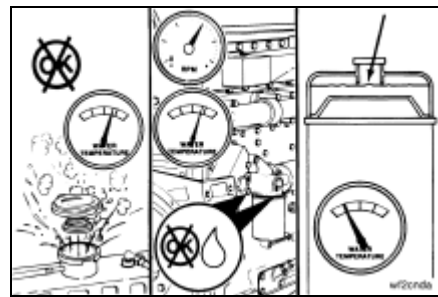

Place the AUTO/MANUAL rocker switch in the AUTO position.



Return the fire protection system to operating status.

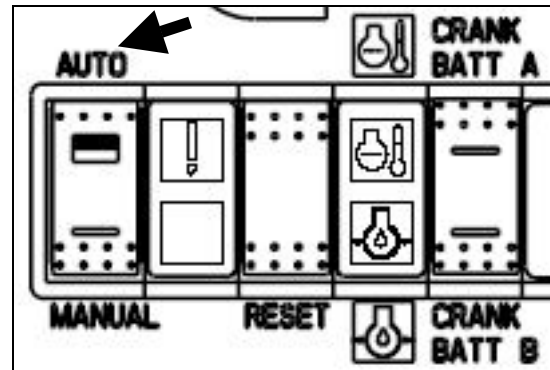

Raw Water Pressure Regulator Removal/Installation

NOTE: This section applies only to pressure regulators supplied by Cummins Fire Power. These procedures should be modified for alternative piping or components as supplied by the customer.


NOTE: This section applies to both the normal and bypass lines.

Prepare (Bypass Line)

Place the AUTO/MANUAL Switch at the local panel in the MANUAL position.

Close the Raw Water Manifold Bypass Line Inlet Isolation Valve.

Close the Raw Water Manifold Bypass Line Outlet Isolation Valve.

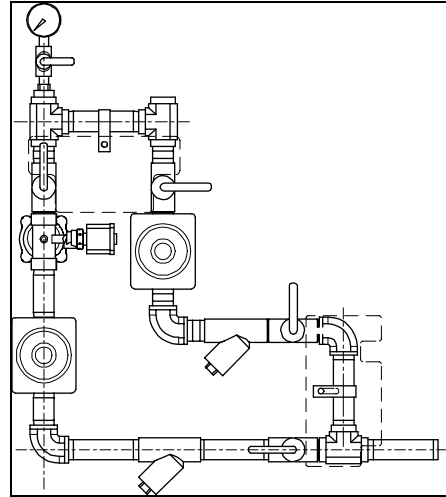


Prepare (Normal Line)

Place the AUTO/MANUAL Switch at the local panel in the MANUAL position.

Close the Raw Water Manifold Normal Line Inlet Isolation Valve

Close the Raw Water Manifold Normal Line Outlet Isolation Valve.

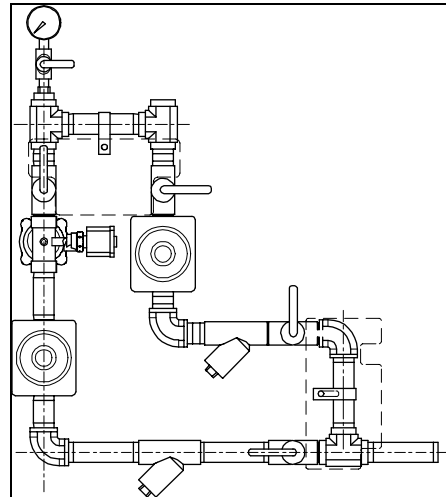

Raw Water Pressure Regulator Removal/Installation (Cont)


Remove (Bypass Line)

Loosen the pipe union upstream of the pressure regulator.



Unscrew the pressure regulator from the outlet isolation valve.

As required, remove the pipe nipples from the pressure regulator.

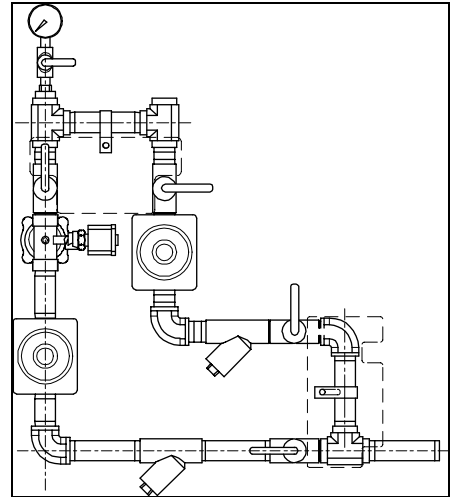


Remove (Normal Line)

Loosen the pipe union downstream of the pressure regulator.



Unscrew the pressure regulator from the solenoid valve.

As required, remove the pipe nipples from the pressure regulator.

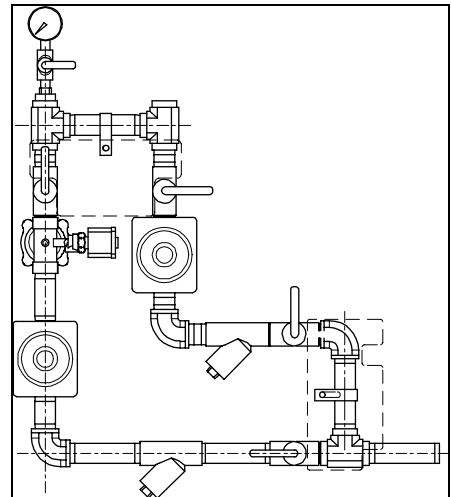

Install (Bypass Line)

When the pressure regulator is repaired or replaced, prepare it for installation.




NOTE: Use pipe dope or silicon sealant on threaded fittings.

As required, install the pipe nipples on the pressure regulator. Tighten with a pipe wrench or equivalent.

Screw the pressure regulator onto the outlet isolation valve.

Align and connect the pipe union. Tighten with a pipe wrench or equivalent.

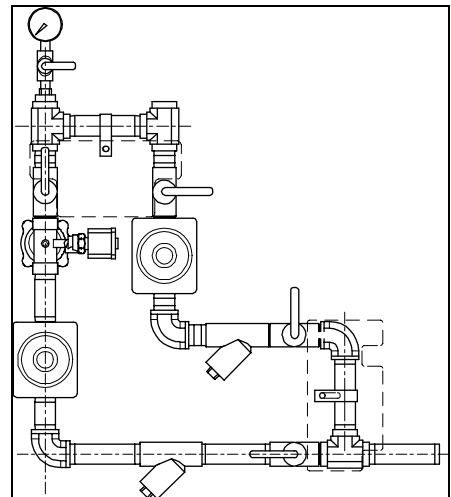

Raw Water Pressure Regulator Removal/Installation (Cont)

Install (Normal Line)


When the pressure regulator is repaired or replaced, prepare it for installation.

NOTE: Use pipe dope or silicon sealant on threaded fittings.

As required, install the pipe nipples on the pressure regulator. Tighten with a pipe wrench or equivalent.

Screw the pressure regulator onto the solenoid valve.

Align and connect the pipe union. Tighten with a pipe wrench or equivalent.

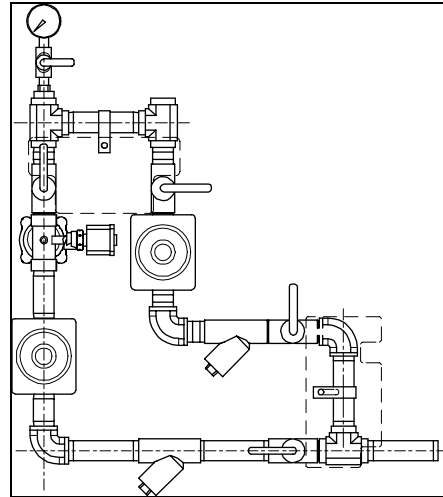


Follow-Up (Bypass Line)

Check the pressure regulator setpoint. (Refer to instructions in Section 3.)

If required, open the Raw Water Manifold Bypass Line Inlet Isolation Valve.

If required, open the Raw Water Manifold Bypass Line Outlet Isolation Valve.

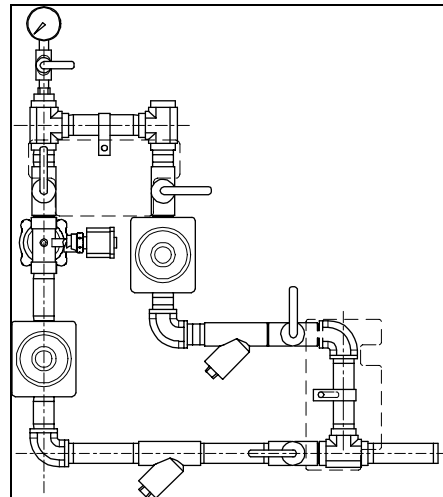

Verify that raw water flow is established through the heat exchanger.


When flow is verified, close the bypass line outlet valve.

Ensure that the normal line inlet and outlet valves are both open.

Ensure that the pressure gauge isolation valve is open.

Ensure that repairs are completed satisfactorily.

Place the AUTO/MANUAL Switch at the local panel in the AUTO position.

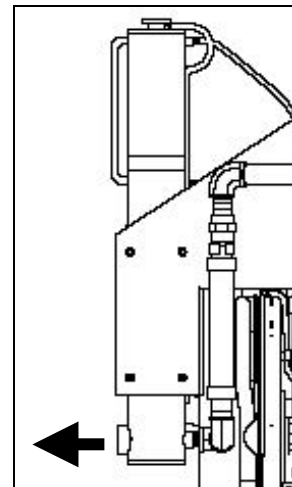

Raw Water Pressure Regulator Removal/Installation (Cont)

Follow-Up (Normal Line)


Check the pressure regulator setpoint. (Refer to instructions in Section 3.)

If required, open the Raw Water Manifold Normal Line Inlet Isolation Valve.

If required, open the Raw Water Manifold Normal Line Outlet Isolation Valve.

As required, close the bypass line outlet valve.

Ensure that the pressure gauge isolation valve is open.

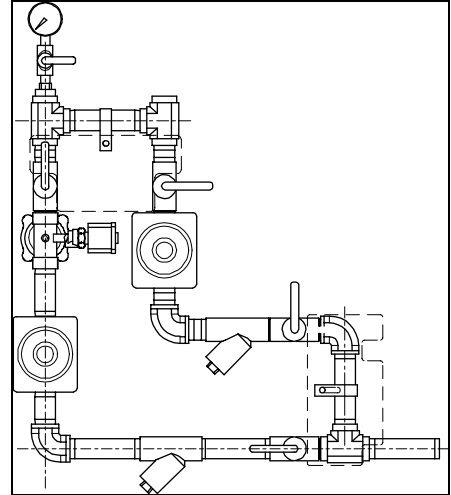

Start the engine to operate the raw water solenoid valve. (Refer to instructions in Section 3.)


Verify that raw water flow is established through the heat exchanger.

When flow is verified, stop the engine.

Observe that raw water flow stops.

Ensure that repairs are completed satisfactorily.

Place the AUTO/MANUAL Switch at the local panel in the AUTO position.

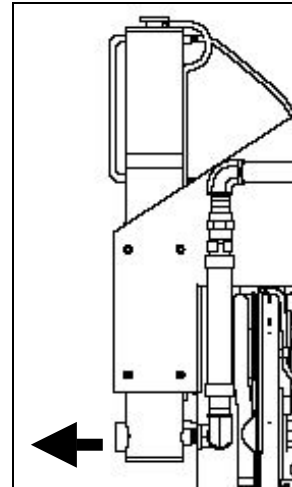

Raw Water Solenoid Valve Removal/Installation

NOTE: This section applies to solenoid valves supplied by Cummins Fire Power.

Prepare

Place the AUTO/MANUAL Switch at the local panel in the MANUAL position.




Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

Disconnect the positive battery cables from both batteries.

Disconnect any customer supplied battery chargers.

Close the Raw Water Manifold Normal Line Inlet Isolation Valve.

Close the Raw Water Manifold Normal Line Outlet Isolation Valve.

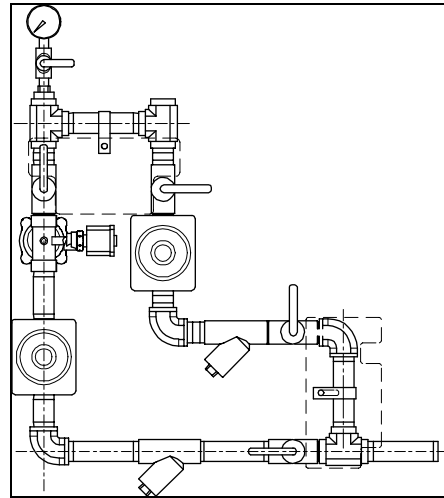

Remove

NOTE: Minimize the loss of wire when cutting the splices.

NOTE: Tag each end of the wire before making the cut.

Cut the butt-splices at the connection between the two solenoid valve pigtail wires and the fire pump electrical harness.




Loosen the union fitting between the solenoid valve and the pressure regulator.

Unscrew the solenoid valve from the outlet isolation valve or inlet nipple.

Remove the solenoid valve.

If appropriate for replacement, remove the pipe fittings from the solenoid valve.

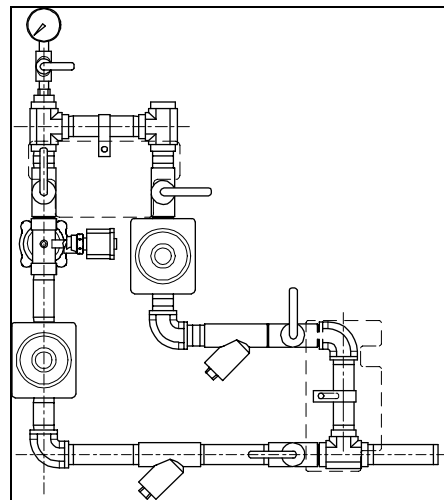

Raw Water Solenoid Valve Removal/Installation (Cont)

Install

NOTE: Install only Cummins approved replacement solenoid valves [Cummins Fire Power Part No. 8210G4-12VDC (12 VDC) or 8210G4-24VDC (24 VDC)].

NOTE: Use thread sealant when making threaded plumbing connections.

If removed, install the inlet and outlet fittings on the solenoid valve.

Position the solenoid valve and start threading it into the outlet valve or onto the outlet valve nipple.


Thread the valve until it is tight and so that the electrical housing is facing up.

Align and tighten the union connection.

NOTE: Use termination techniques that meet all local requirements. Cummins recommends crimped and insulated butt splices.

NOTE: The solenoid valve's green pigtail lead is not used. The other two leads are not polarity dependent.

Splice the two solenoid pigtail leads to the fire pump harness solenoid leads.

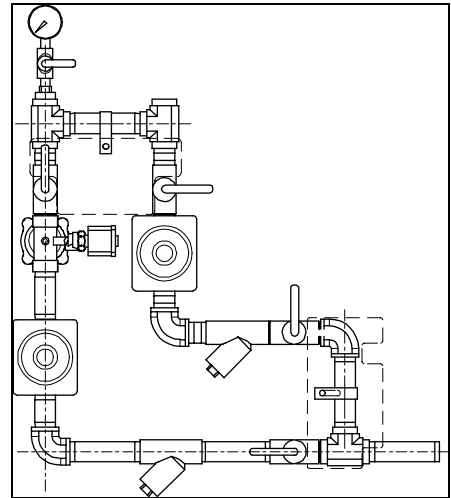

Raw Water Solenoid Valve Removal/Installation (Cont)

Follow-Up



Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

Connect the positive battery cables at both batteries.

Open the Raw Water Manifold Normal Line Inlet Isolation Valve.

Open the Raw Water Manifold Normal Line Outlet Isolation Valve.

Place the AUTO/MANUAL Switch at the local panel in the MANUAL position.

Operate the engine. Refer to Operating Instructions in Section 3.

Check for leaks. Repair any leaks.


Check that raw water flow starts when the engine starts.

Stop the engine.

Check that raw water flow stops shortly after the engine stops.

If raw water flow does not start when the engine starts, refer to Coolant Temperature Above Normal in Troubleshooting Section 12.

If raw water flow does not stop shortly after the engine stops, refer to Troubleshooting Section 12.

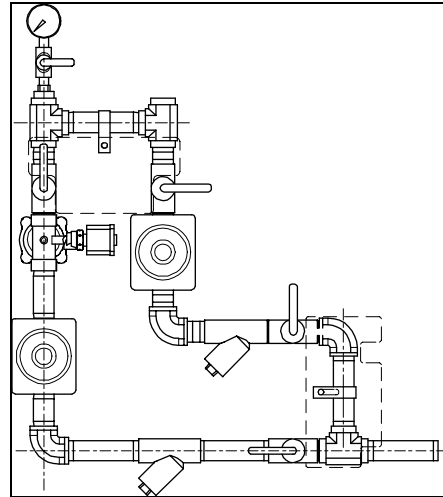

Water Temperature Gauge Removal/Installation

Prepare

Place the AUTO/MANUAL Switch at the local panel in the MANUAL position.



Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

Disconnect the positive battery cables from both batteries.

Disconnect any customer supplied battery chargers.

Remove

Use a nut driver or equivalent to remove the control panel's mounting bolt.

Pull the control panel out from the enclosure so that it is supported by the piano hinge on the bottom.

NOTE: Check and tag all wires with location tags prior to removal.

Remove the two dark blue [METER +] wires from the [I] terminal on the gauge.


Remove the single black ground wire from the [G] terminal on the gauge.

Remove the single [WTG] wire from the [S] terminal on the gauge.

NOTE: Catch the gauge as the meter bracket is removed.

Remove the two nuts and the meter bracket from the back of the panel.

Remove the gauge from the panel.

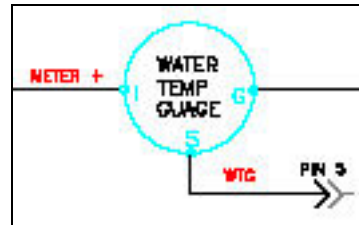

Water Temperature Gauge Removal/Installation (Cont)

Install

Position the gauge in the panel. Orient it for ease of reading.

Position the meter bracket on the gauge's mounting studs. Start the nuts.


Tighten the nuts hand tight plus a full turn.

Connect the two dark blue [METER +] wires on the [I] terminal on the gauge.

Connect the single black ground wire on the [G] terminal on the gauge.

Connect the single [WTG] wire on the [S] terminal on the gauge.

Raise the control panel and install the panel mounting bolt.

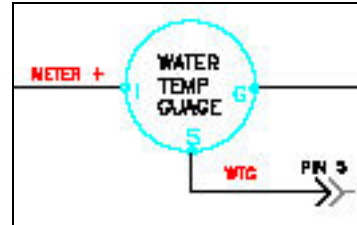

Follow-Up

Reconnect the batteries and any battery chargers.

Observe that the [WATER TEMP] gauge indicates a reasonable value for cooling water temperature.

If the gauge does not indicate correctly, refer to Troubleshooting Section 12.

If the gauge does indicate correctly, place the AUTO/MANUAL Switch at the local panel in the MANUAL position.

Coolant Temperature Sender Removal/Installation

Prepare



Coolant is toxic. Keep away from pets and children. If not reused, dispose of in accordance with local environmental regulations.




Do not remove the pressure cap from a hot engine. Wait until the temperature is below 50°C [122°F] before removing the pressure cap, (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Drain the coolant. Refer to [Drain and Flush Cooling System](#) in Section 5.



Remove

Disconnect the temperature sensor wiring.
Remove the temperature sensor.

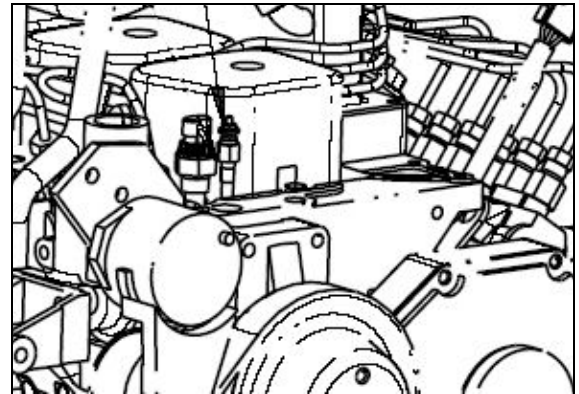

Install


NOTE: Apply liquid teflon sealant to the threads when installing the temperature sensor.

Install the temperature sensor.

Torque Value:

- (Cast Iron) 50 N•m [37 ft-lb]
- (Aluminum) 30 N•m [22 ft-lb]

Reconnect the wiring.

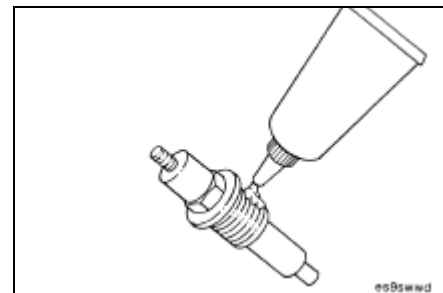

Coolant Temperature Sender Removal/Installation (Cont)

Follow-Up

Fill coolant to proper level. Refer to Drain and Flush Cooling System in Section 5.



Operate the engine. Refer to Operating Instructions in Section 3.

Check for leaks. Repair any leaks.

Check that engine operating temperature stabilizes between 83 and 91 °C [181 and 196 °F]. If temperature does not stabilize, stop the engine and refer to Troubleshooting Instructions Section 12.

Coolant Temperature Switch Removal/Installation

Prepare



Coolant is toxic. Keep away from pets and children. If not reused, dispose of in accordance with local environmental regulations.




Do not remove the pressure cap from a hot engine. Wait until the temperature is below 50°C [122°F] before removing the pressure cap, (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Drain the coolant. Refer to [Drain and Flush Cooling System](#) in Section 5.



Remove

Disconnect the temperature switch wiring.
Remove the temperature switch.

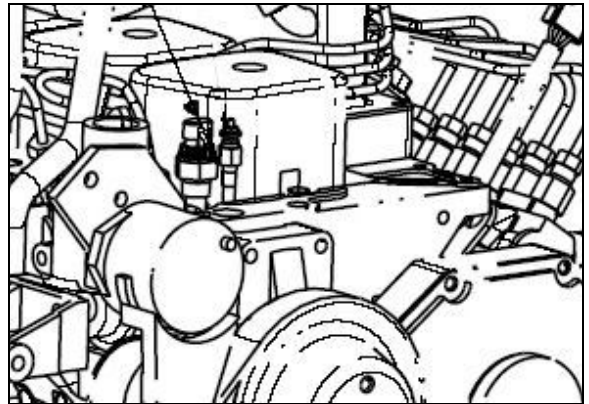

Install


Apply liquid teflon sealant to the threads when installing the temperature switch.

Install the temperature switch.

Torque Value:

- (Cast Iron) 50 N•m [37 ft-lb]
- (Aluminum) 30 N•m [22 ft-lb]

Reconnect the wiring.

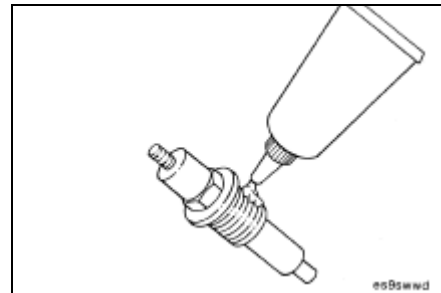

Coolant Temperature Switch Removal/Installation (Cont)

Follow-Up

Fill coolant to proper level. Refer to Drain and Flush Cooling System in Section 5.



Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Check for leaks. Repair any leaks.

Check that engine operating temperature stabilizes between 82 and 94 °C [180 and 201 °F]. If temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in Troubleshooting Section 12.

Coolant Thermostat Removal/Installation

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.



Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.




Always use the correct thermostat, and never operate the engine without a thermostat installed. The engine can overheat if operated without a thermostat because the path of least resistance for the coolant is through the bypass to the pump inlet. An incorrect thermostat can cause the engine to overheat or run too cold.

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

Disconnect the battery cables at the battery source.

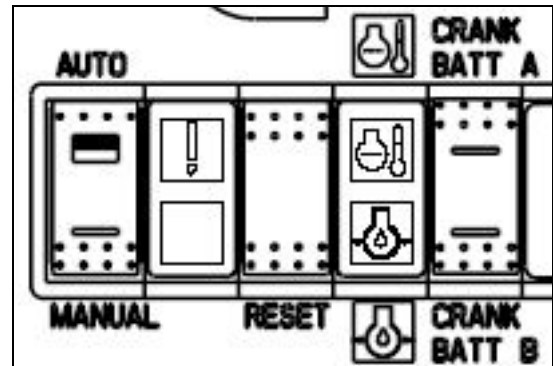






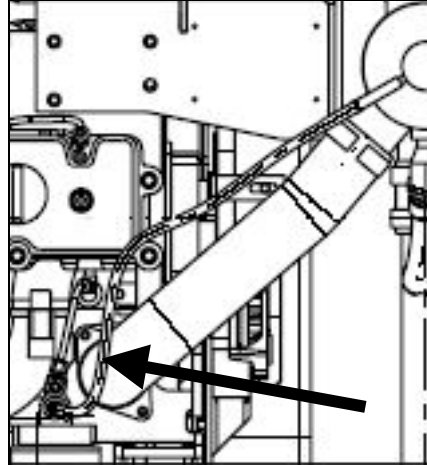

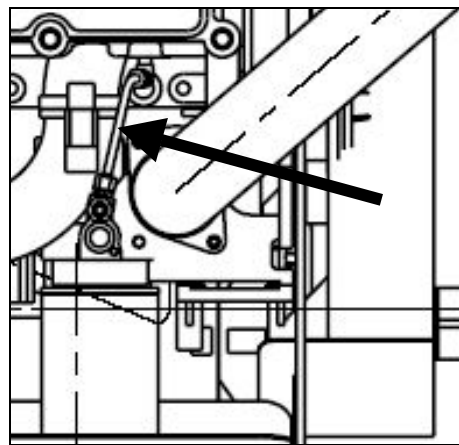
Drain the coolant. Refer to [Drain and Flush Cooling System](#) in Section 5.



Disconnect the upper engine coolant hose. Refer to [Coolant Hose Removal/Installation](#) in this section.



Coolant Thermostat Removal/Installation (Cont)

<p>Remove the lower engine coolant hose and the fill hose. Refer to <u>Coolant Hose Removal/Installation</u> in this section.</p>	
<p>Remove the belt guard. Refer to <u>Belt Guard Removal/Installation</u> in this section.</p>	
<p>Remove the drive belt. Refer to <u>Belt Removal/Installation</u> in this section.</p>	
<p>Remove the alternator. Refer to <u>Alternator Removal/Installation</u> in this section.</p>	
<p>Remove For CFP83-F10, F20, or F30 models only, remove the coolant filter vent tubing between the coolant filter housing and the heat exchanger.</p>	 
<p>Remove the coolant vent tubing between the coolant filter housing and the engine block</p>	 


Coolant Thermostat Removal/Installation (Cont)

Remove the two water outlet capscrews from the thermostat housing.



Remove the water outlet connection and gasket.


Clean the gasket surface on the engine block and the outlet connection.

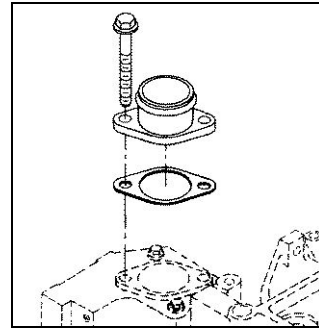


Remove the belt tensioner capscrew and the belt tensioner.



Remove the two belt tensioner mounting bracket capscrews from the thermostat housing.

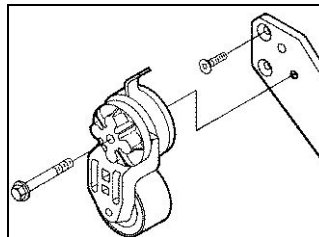


Remove the two capscrews and the thermostat housing.

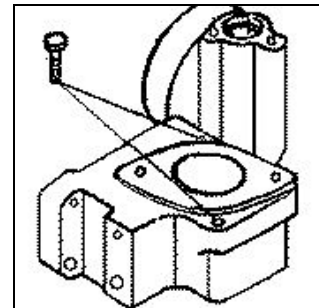

Debris in the cooling system can cause damage to the engine.




Remove the thermostat gasket and clean the gasket surface.

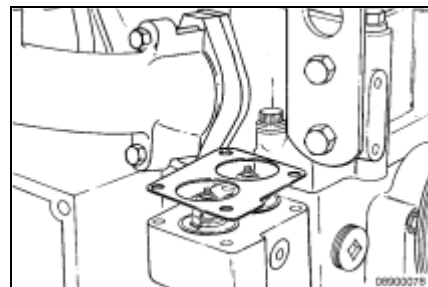

Coolant Thermostat Removal/Installation (Cont)

NOTE: If the thermostats and shims may be reused, separate and tag the shims along with the associated thermostats.

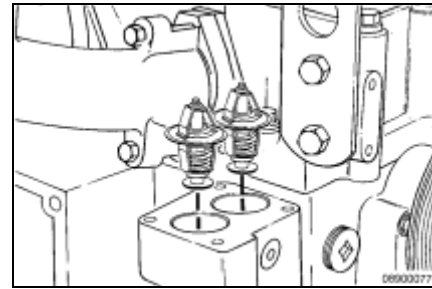


Remove both thermostats and any shims.

Inspect for Reuse



Inspect the thermostats for damage.

Make sure both thermostats are clean and free from corrosion.

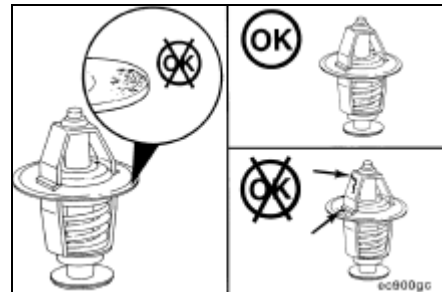


Suspend the thermostats and a 100°C [212°F] thermometer in a container of water.

NOTE: Do not allow the thermostats or thermometer to touch the container.

Heat the water slowly so the wax element in the thermostats has sufficient time to react to the rising water temperature.


NOTE: The normal operating temperature is stamped on the thermostat.

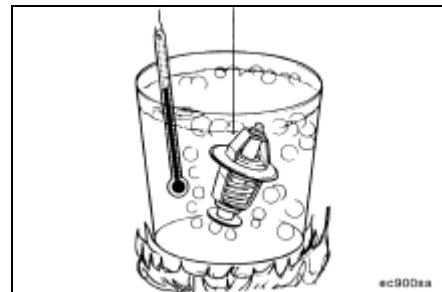



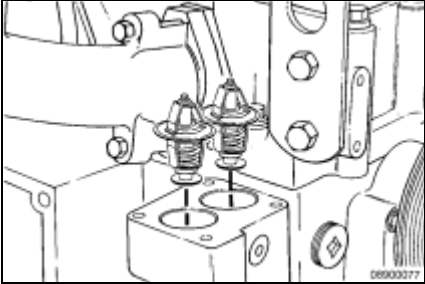

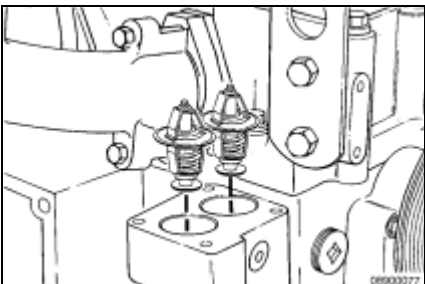
Inspect the thermostats as follows:

- **Thermostat must begin to open within 1°C [2°F] of 82°C [180°F].**
- **Thermostat must be fully open within 1°C [2°F] of 95°C [203°F].**

NOTE: The fully open clearance between the thermostat flow valve and flange must be 41.5 mm [1.63 in] minimum.

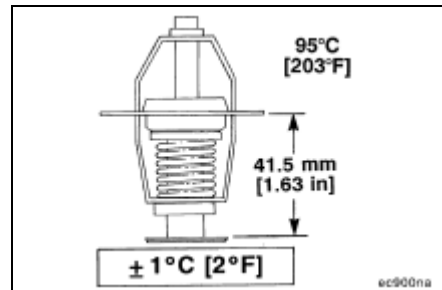

Coolant Thermostat Removal/Installation (Cont)

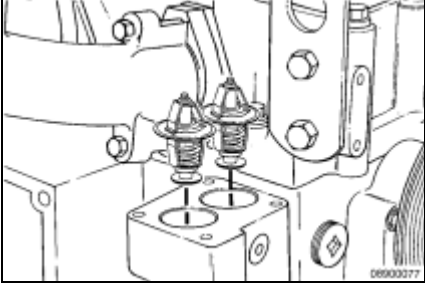
<p>Install the Thermostats</p> <p>Use the appropriate section as follows:</p> <p>If installing a new thermostat, use the <u>Install New Thermostat and Shims</u> subsection.</p> <p>If reusing existing thermostat and shims, use the <u>Reinstall Thermostat and Shims</u> subsection.</p>		
<p>Install New Thermostat and Shims</p> <p style="text-align: center;">▲ CAUTION ▲</p> <p>Do not shim the thermostats beyond the top of the block.</p> <p>Temporarily position the thermostats in the bore.</p> <p>Measure the distance from the thermostat flange to the top of the block surface of each thermostat to determine the proper shim(s) to use.</p> <p>NOTE: The service shims included are 0.25 mm [0.010 in], 0.50 mm [0.020 in], 0.75 mm [0.030 in], and 1 mm [0.040 in].</p> <p>NOTE: Any combination of shims can be used, but stacking is limited to a maximum of two shims per bore.</p> <p>Select the appropriate combination of shims that will bring each thermostat's height as close to the top of the block as possible.</p>		
<p>Remove each thermostat.</p> <p>Insert the selected shims into each bore, making sure each shim is seated properly in the bore.</p> <p>Install the thermostats on top of the service shim(s) in the thermostat flanges.</p> <p>NOTE: They can be within 0.23 mm [0.009 in] of flush with the top of the block, without being above the top of the block.</p> <p>Check that the thermostats are correctly installed.</p> <p>Continue to Install the Thermostat Housing.</p>		

Coolant Thermostat Removal/Installation (Cont)

Reinstall Thermostat and Shims


Reinstall the shims and thermostats in the same order and position as found in the removal step.

Continue to Install the Thermostat Housing.

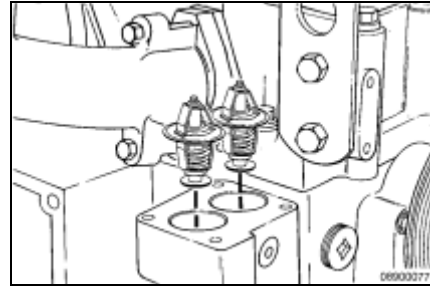


Install the Thermostat Housing

Install a new thermostat gasket.

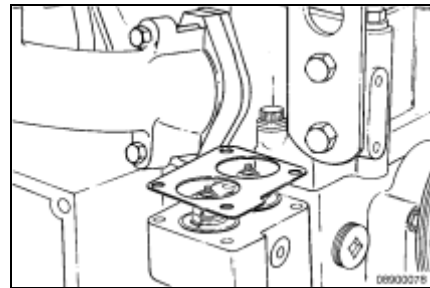


Position the thermostat housing and belt tensioner over the thermostats and gasket.

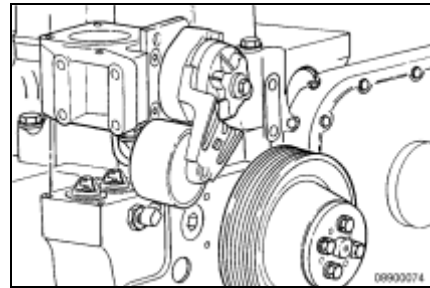

Make sure the gasket is aligned with the capscrew holes.


Install the capscrews and finger-tighten.

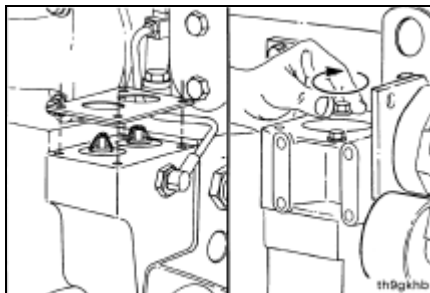

Install the water outlet connection.

Tighten all capscrews.

Torque Value: 24 N•m [212 in-lb]

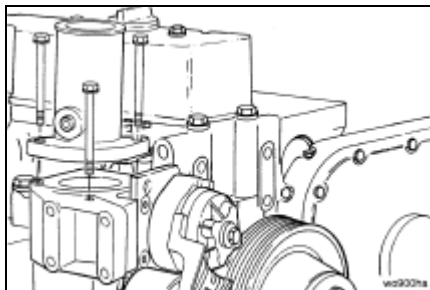


Coolant Thermostat Tests

Coolant Thermostat Leak Test




The engine thermostat must operate properly in order for the engine to operate in the most efficient heat range. Overheating or overcooling will shorten engine life.

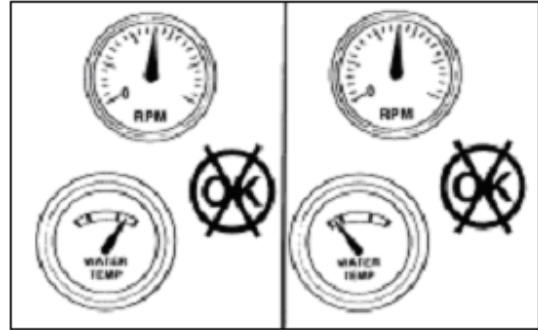

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Allow the engine to cool well below 83 °C [181 °F].


Loosen the hose clamp on the Upper Engine Coolant Hose. Remove the hose from the thermostat housing.

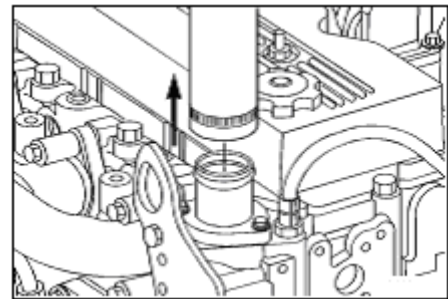

Install a hose of the same size on the thermostat housing outlet long enough to reach a remote, dry container used to collect coolant.


Install and tighten a hose clamp on the housing outlet.

Place the other end of the hose in a dry container.

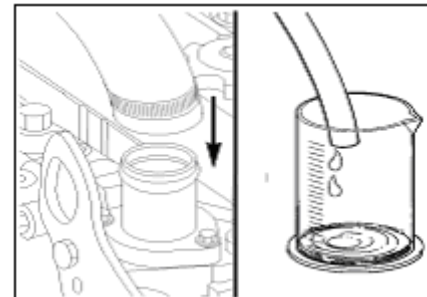

If desired, install an accurate thermocouple or temperature gauge in the 3/4-inch pipe plug located at the front of the cylinder block.

Otherwise, monitor the engine coolant temperature on the local control panel.

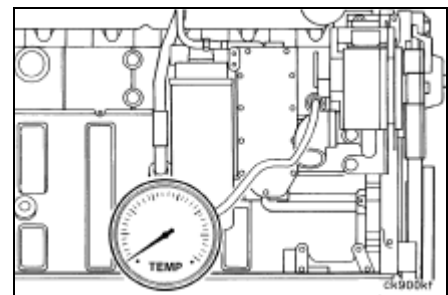


Coolant Thermostat Tests (Cont)

Start the engine. Refer to Local Starting Procedure for Testing in Section 3. Operate the engine for one minute and then stop it.


Measure the amount of coolant collected in the container.

The amount of coolant collected must not be more than 150 cc [5 fl oz].

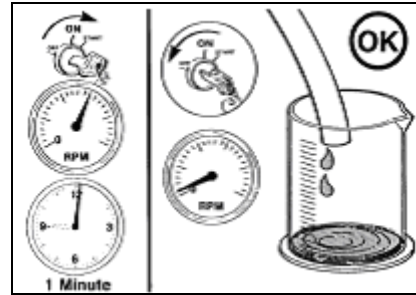

If more than 150 cc [5 fl oz] of coolant is collected, the thermostat is leaking and must be replaced. Refer to Coolant Thermostat Removal/Installation in this section.

If leakage is not present, then continue to perform the Coolant Thermostat Function Test below.

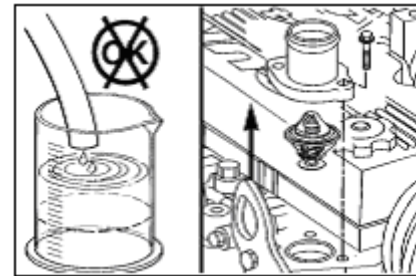

Coolant Thermostat Function Test

Start the engine. Refer to Local Starting Procedure for Testing in Section 3.

Allow the engine to approach operating temperature.

Monitor the operation of the thermostat.

Thermostat Initial Opening Temperature

- MIN: 81 °C [178 °F]
- MAX: 83 °C [181 °F]


Stop the engine when the coolant starts to flow.

If the coolant does not start flowing into the container during the initial opening temperature range, the thermostat must be replaced. Refer to Coolant Thermostat Removal/Installation in this section.

Install the heat exchanger hose and tighten hose clamp.

If used, remove the temperature sensor and reinstall the pipe plug.

Return any coolant to the engine.

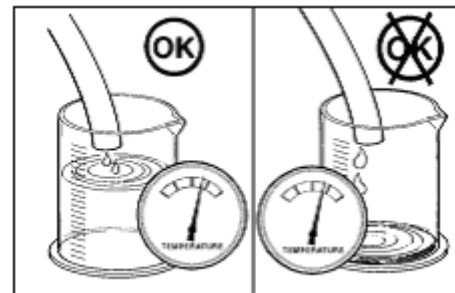

Coolant Water Pump Removal/Installation

Prepare




Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.



Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50 °C [120 °F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

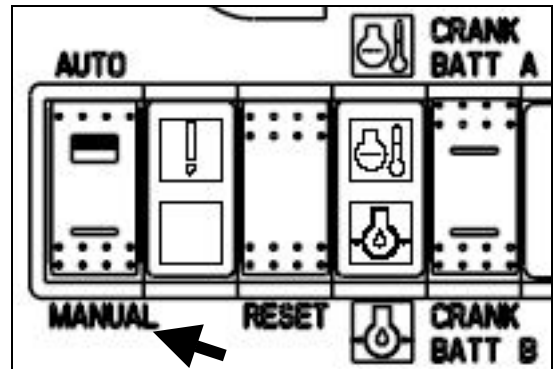


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.


Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

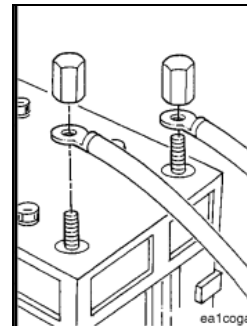

Coolant Water Pump Removal/Installation (Cont)

Drain engine coolant as required for the intended service. Refer to Drain and Flush Coolant System in Section 5.

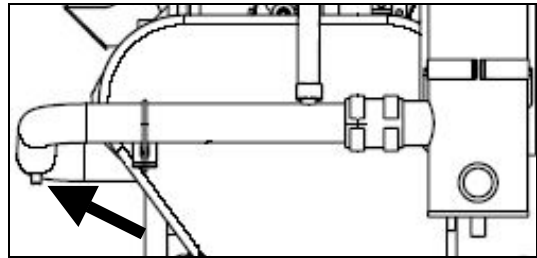

Disconnect the lower engine coolant and fill hoses. Refer to Coolant Hose Removal/Installation in this section.



Remove the Belt Guard. Refer to Belt Guard Removal/Installation in this section.




Remove the Drive Belt. Refer to Belt Removal/Installation in this section.



Disconnect the upper engine coolant hose. Refer to Coolant Hose Removal/Installation in this section.



Loosen the capscrew for the alternator link at the alternator. Refer to Alternator Removal/Installation in this section.

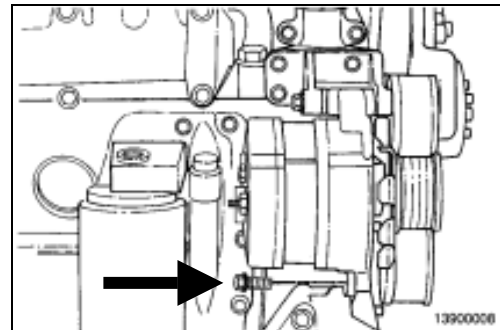


Remove

Remove the two lower capscrews at the water pump.

Slide the alternator link aside.


Remove the upper capscrew, the water pump and the o-ring seal.

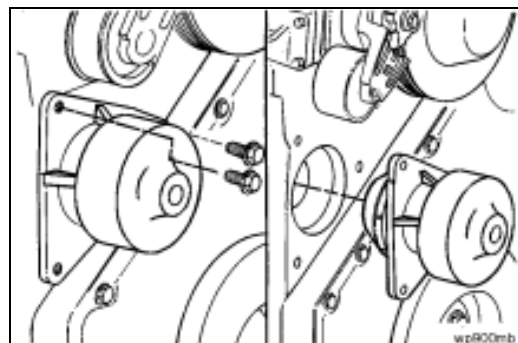

Coolant Water Pump Removal/Installation (Cont)

Clean


Clean the sealing surface on the cylinder block.
If reusing the water pump, clean the sealing surface on the water pump.

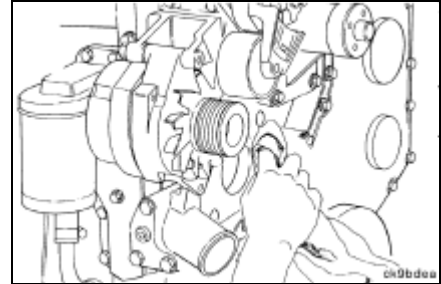

Inspect for Reuse


NOTE: A minor streak or chemical buildup at the weep hole is not justification for water pump replacement. The water pump seal design requires a coolant film for lubrication and cooling. Therefore, it is normal to observe a minor chemical buildup or streaking at the weep hole.

Inspect the water pump body for indications of water leakage at the weep hole. If a repeating drip of coolant is observed, replace the water pump with a new unit.

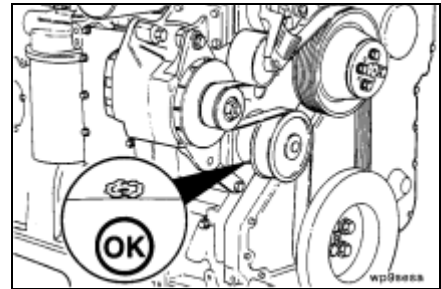


NOTE: A plugged weep hole can cause the water pump to fail. A small screwdriver or a small tool can be used to remove any debris.

Inspect the weep hole to make sure it is open.

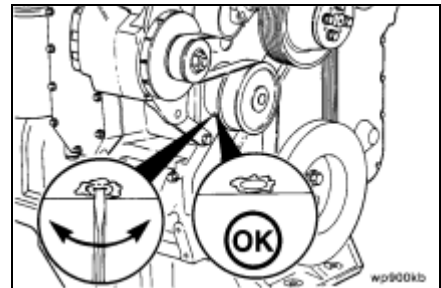

NOTE: Replace the water pump if it is damaged.
Inspect the water pump housing and impeller for any physical damage.

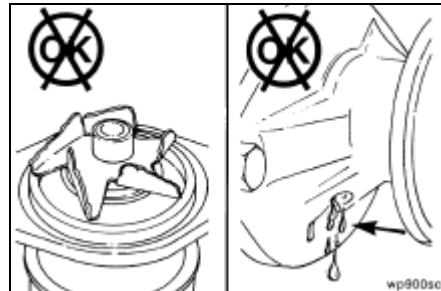


Coolant Water Pump Removal/Installation (Cont)

Install

If reusing the original water pump, install a new water pump seal (Cummins Part No 3902089) onto the water pump housing.

Otherwise, install a new water pump kit (Cummins Part No 3800974).

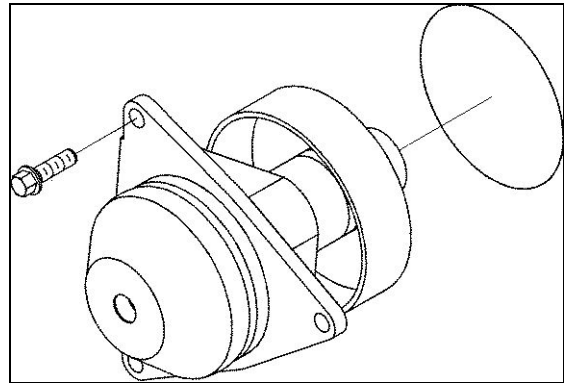


Position the water pump and start the upper capscrew.

Position the alternator link and start the two lower capscrew.


Tighten the three capscrews at the water pump.

Torque Value: 24 N•m [18 ft-lb]

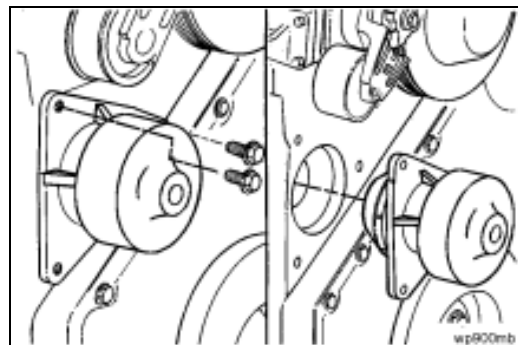

Follow-Up

Install the alternator link at the alternator. Refer to Alternator Removal/Installation in this section.

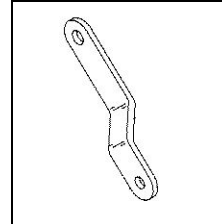

Install the upper engine coolant hose. Refer to Coolant Hose Removal/Installation in this section.



Install the drive belt. Refer to Belt Removal/Installation in this section.



Install the belt guard. Refer to Belt Guard Removal/Installation in this section.



Reconnect the lower engine coolant hose. Refer to Coolant Hose Removal/Installation in this section.



Refill the coolant. Refer to Drain and Flush Cooling System in Section 5.




Coolant Water Pump Removal/Installation (Cont)

For safety reasons, both batteries must be reconnected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

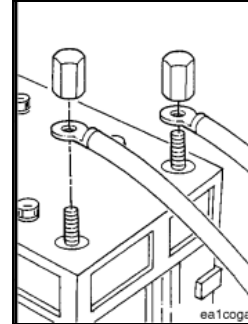

Start the engine. Refer to Local Starting Procedure for Testing in Section 3.



Observe that raw water is flowing through the coolant heat exchanger.

NOTE: A leak at the water pump weep hole is not justification for water pump replacement. The water pump seal design requires a coolant film for lubrication and cooling. Therefore, it is normal to observe an occasional drip.

Check for leaks. Repair any leaks.

Check that the drive belt makes no unusual noises.

Check that the alternator is charging.

NOTE: If temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in Troubleshooting Section 12.

Check that engine operating temperature stabilizes between about 82 and 93 °C [180 and 200 °F].

Check that no coolant hoses are collapsed.


After the thermostat operation has been checked, stop the engine. Refer to Local Starting Procedure for Testing in Section 3.



Recheck the coolant level. Refer to Check Coolant Level in Section 5.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

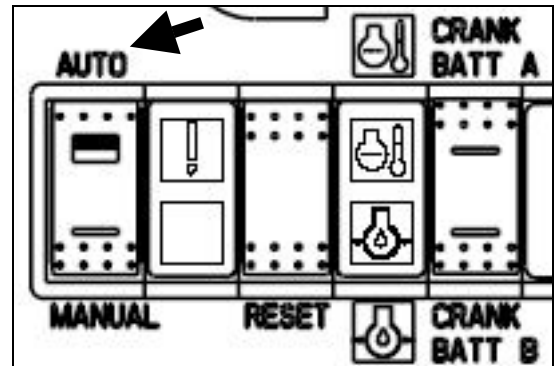

Coolant Filter Assembly Removal/Installation

Prepare



WARNING

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.




WARNING

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Place the fire protection system in a safe mode for engine service.



Place the AUTO/MANUAL rocker switch in the MANUAL position.

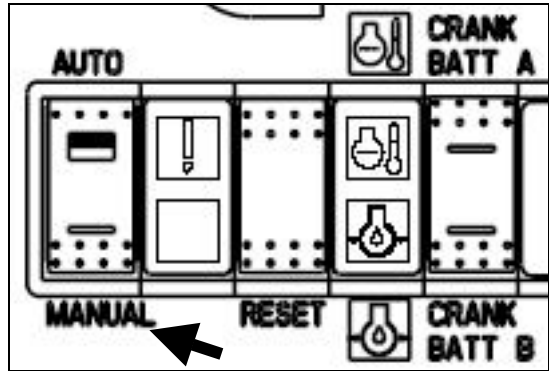


For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a "Battery Failure" alarm.



Wear safety glasses when disconnecting batteries!


Next, disconnect both batteries at their terminals.

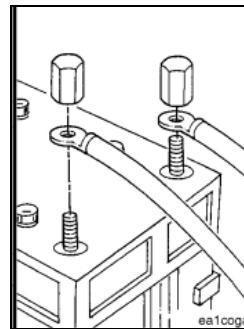

Remove the coolant system pressure cap (Cummins Fire Power Part No. 11407).



Turn the shutoff valve to the OFF position by rotating the knob from vertical to horizontal in the direction shown.

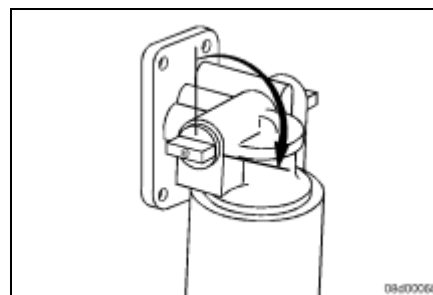

Coolant Filter Assembly Removal/Installation (Cont)


Remove



A small amount of coolant can leak when servicing the coolant filter with the shutoff valve in the OFF position. To reduce the possibility of personal injury, avoid contact with hot coolant.

Remove and discard the coolant filter.

Clean the filter housing with a dry clean rag.

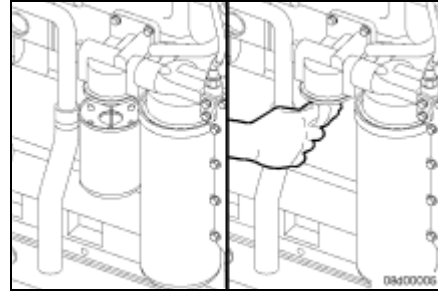

Install



Do not allow oil to get into the filter.


Apply a thin film of lubricating oil to the gasket sealing surface before installing the new coolant filter.



Mechanical over-tightening can distort the threads or damage the filter head.


Install the coolant filter on the filter head. Tighten the filter until the gasket contacts the filter head surface.

Tighten the coolant filter an additional 1/2 to 3/4 of a turn, or as specified by the filter manufacturer.

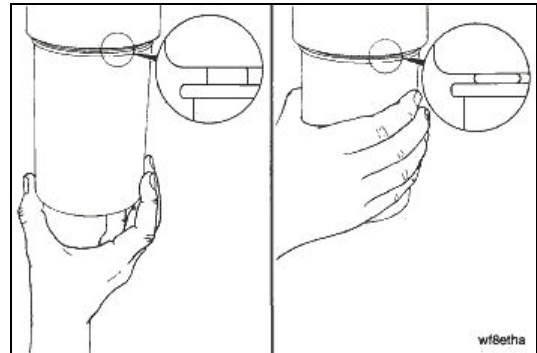

The valve must be in the ON position to prevent engine damage.

Turn the shutoff to the ON position by rotating the knob from horizontal to vertical in the direction shown.

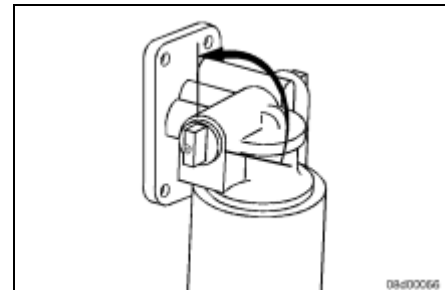

Coolant Filter Assembly Removal/Installation (Cont)


Follow-Up

Install the coolant system pressure cap (Cummins Fire Power Part No. 11407).

Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Check for and repair any coolant leaks.

After the air has been purged from the system, stop the engine.

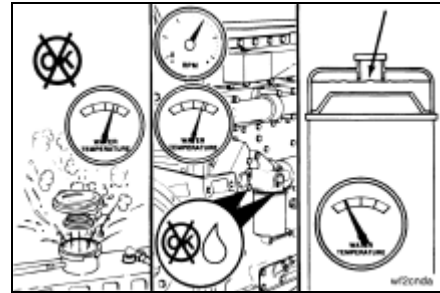

WARNING


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap (Cummins Fire Power Part No. 11407). Heated coolant spray or steam can cause personal injury.



Check the coolant level. Refer to Check Coolant Level in Section 5. Add coolant if necessary.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

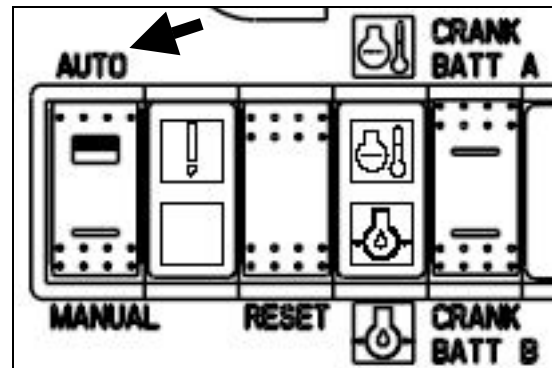

Alternator Checks and Testing

Alternator Wiring Integrity Check

NOTE: Refer to [Drawing 10423 Sheet 1](#), [Drawing 10423 Sheet 2](#), and [Drawing 9767](#) in Section 13 for schematic details.

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the battery compartment before servicing the batteries.

WARNING

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


Check the battery and all wiring connections for damage. Refer to [Battery Cables and Connections](#) in this section.

Check all connections for tightness and cleanliness. Include both the slip connectors at the alternator and connections at the battery.

NOTE: Continuity should be in the single digit Ohms or less. Resistance to ground should be in the mega-Ohm range. Refer to any applicable customer criteria.

Using a digital multimeter or other test equipment, check for continuity between terminals. Check also the insulation resistance to ground.

Correct any electrical faults.

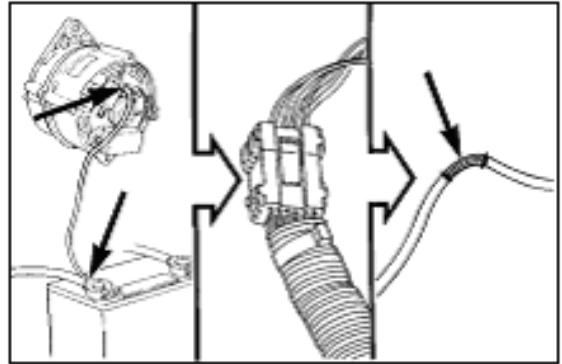

Alternator Mechanical Check


Start the engine. Refer to [Normal Local Starting Procedure](#) in Section 3.

Visually check the drive belt and alternator pulley to be sure the alternator is rotating.

Note any unusual noises such as from belt whine or alternator mechanical fault.

Stop the engine.

Correct any mechanical failures.

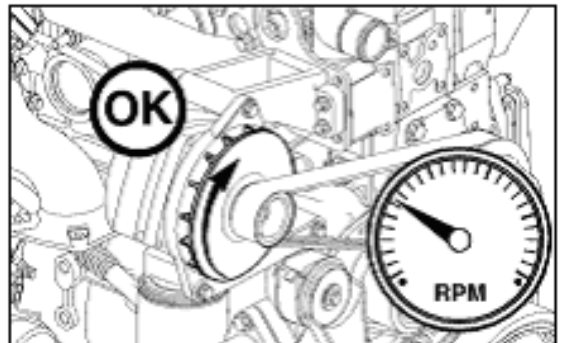

Alternator Checks and Testing (Cont)

Alternator Voltage Output Test



Batteries must have been satisfactorily load tested and must be charged with a resting voltage of more than 12.4 Volts for this testing.



Batteries must have been satisfactorily load tested and must be charged with a resting voltage of more than 12.4 Volts for this testing.

NOTE: Conduct this testing at normal shop temperature.


NOTE: Voltage should not exceed 15.5 V (for a 12 VDC system) or 31 V (for a 24 VDC system).

Start the engine and operate at rated speed. Refer to Normal Local Starting Procedure in Section 3.

Measure the alternator voltage output to the batteries with digital multimeter, Cummins Part Number 3377161.

Stop the engine.

Replace the alternator if the voltage exceeds specification. Refer to Alternator Removal/Installation in this section.

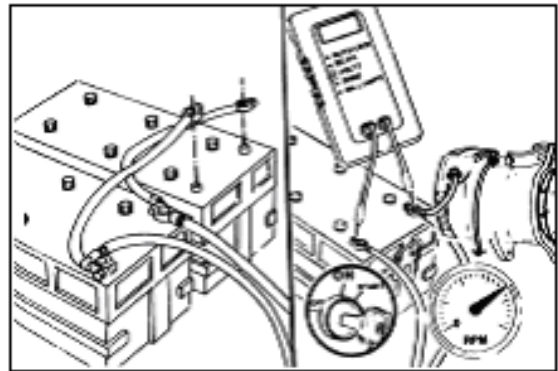

Alternator Checks and Testing (Cont)

Alternator Amperage Output Test

NOTE: Conduct this testing at normal shop temperature.

NOTE: Refer to Electrical Specifications in Section 10 for the minimum required alternator output. Use the value listed for the system voltage.

Connect a carbon pile load in parallel across the battery terminals. Refer to Jumpering the Batteries in Section 3 for how to make a parallel connection.

Connect a clamp-on (induction) ammeter across the alternator output cable.

Start the engine and operate at rated speed. Refer to Normal Local Starting Procedure in Section 3.


Adjust the carbon pile for maximum indication.

Note the amperage indicated on the ammeter.

Stop the engine.

Remove the test equipment.

Replace the alternator if the output is not 90% or more of the specification value. Refer to Alternator Removal/Installation in this section.

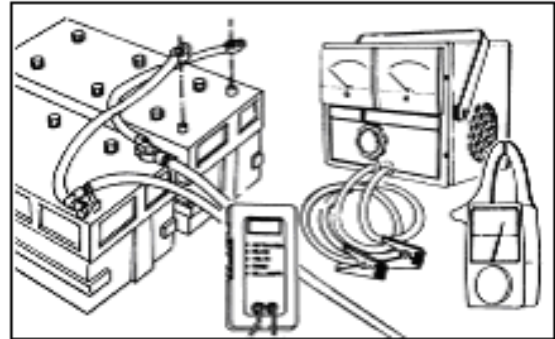

Alternator Removal/Installation

Prepare

Remove the belt guard. Refer to Belt Guard Removal/Installation in this section.



Remove the drive belt. Refer to Belt Removal/Installation in this section.

NOTE: Refer to Drawing 8513 Sheet 1 in Section 13 for wiring harness information.

NOTE: Ensure that the connectors are clearly tagged for the correct reconnection.


Disconnect the engine wiring harness connectors from the alternator.

Remove


Disconnect the ground (-) cable from the battery terminal.

Identify each electrical wire with a tag indicating location.

Remove the capscrew from the alternator link.

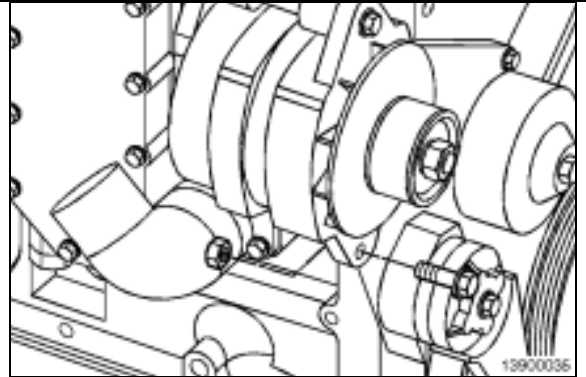

Remove the alternator mounting screws.
Remove the alternator.

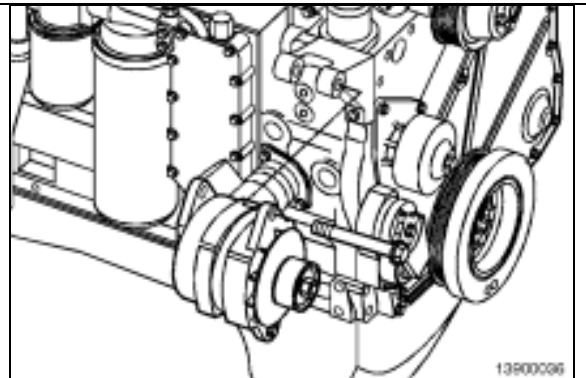

Alternator Removal/Installation (Cont)


Install

Position the alternator on the bracket, and secure it with the mounting capscrews.

Do not tighten at this time.

Connect the alternator link to the alternator. Finger-tighten the capscrews.

NOTE: Make sure the alternator link is properly positioned for correct belt alignment.

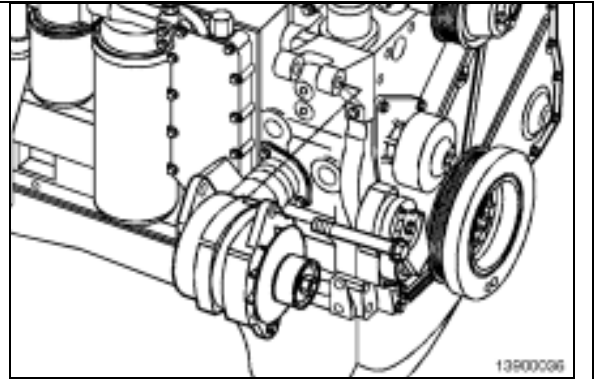

Tighten the alternator mounting capscrews.


To install the alternator, the alternator mounting components must be tightened in the following sequence:

1. Alternator-to-alternator bracket capscrew

Torque Value: 43 N•m [32 ft-lb]

2. Lower brace-to-alternator capscrew

Torque Value: 24 N•m [18 ft-lb]

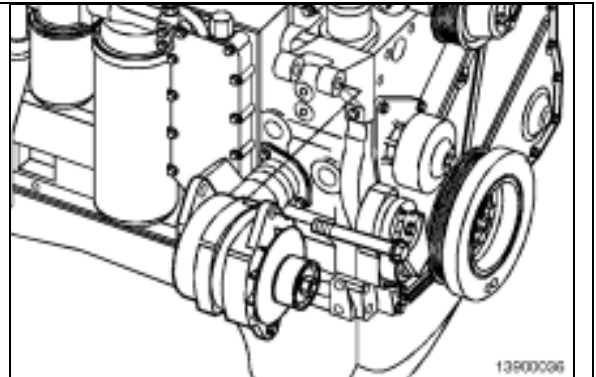

Follow-Up

NOTE: Refer to Drawing 8513 Sheet 1 in Section 13 for wiring harness information.

Connect the engine wiring harness connectors to the alternator.

Install the drive belt. Refer to Belt Removal/Installation in this section.

Install the belt guard. Refer to Belt Guard Removal/Installation in this section.




Battery Isolator Removal/Installation

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

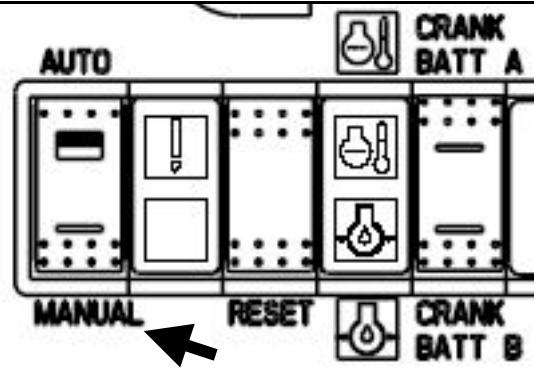


NOTE: Refer to Battery Removal/Installation in this section for detailed instructions for disconnecting the battery cable clamps.

Disconnect the negative battery cable from Battery A.

Disconnect the negative battery cable from Battery B.


Remove

NOTE: Ensure that all battery isolator wires are clearly tagged for reconnection. Also note the orientation of the existing isolator.

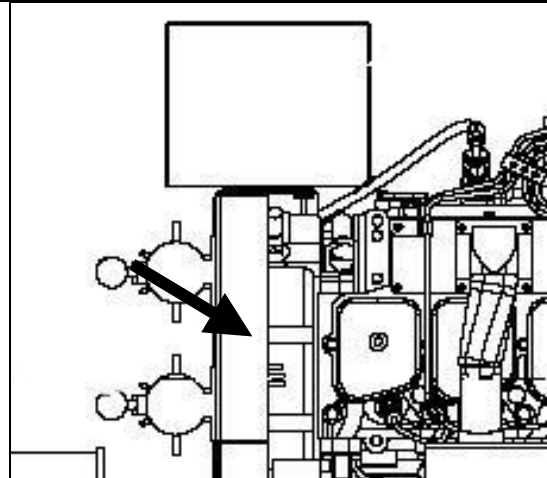

Battery Isolator Removal/Installation (Cont)


Disconnect the battery cable from terminal 1.
Disconnect the battery cable from terminal 2.
Disconnect the alternator cable from terminal A.
Disconnect the alternator excitation cable from terminal E.
Remove the four mounting nuts and the battery isolator.

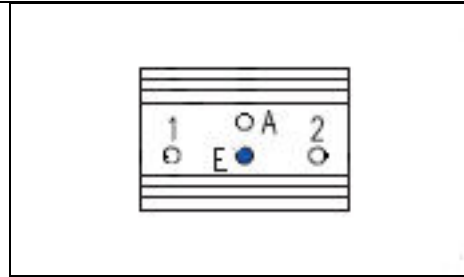


Install

Align and position the battery isolator on the four mounting studs.
Install the four mounting nuts.

Torque Value: As per capscrew markings and torque values in Section 10

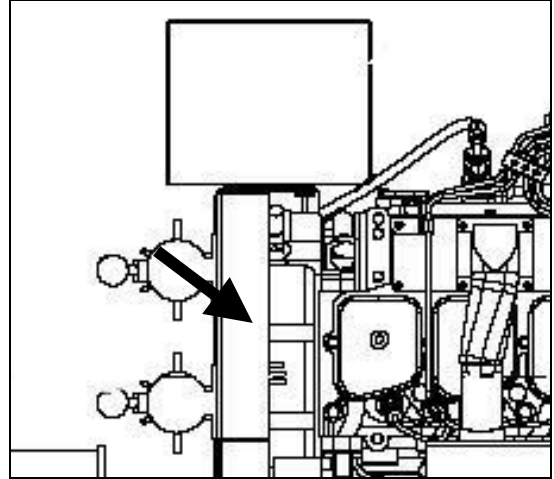

Connect the battery cable at terminal 1.
Connect the battery cable at terminal 2.
Connect the alternator cable at terminal A.
Connect the alternator excitation cable at terminal E.
Ensure that all four rubber caps are in position.

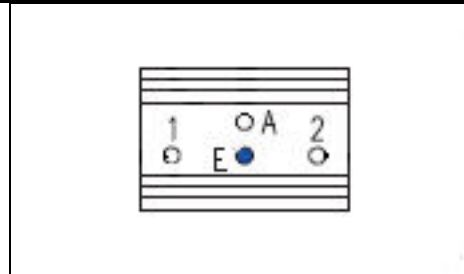

Follow-Up

NOTE: Refer to [Battery Removal/Installation](#) in this section for detailed instructions for connecting the battery cable clamps.

Connect the negative battery cable at Battery A.
Connect the negative battery cable at Battery B.

Battery Isolator Removal/Installation (Cont)

NOTE: Refer to Drawing 10423 Sheet 2 for schematic details. Measure voltages at the most convenient location.

With the engine off, verify the following voltages at the battery isolator terminals to ground:

Terminal 1 indicates battery voltage.

Terminal 2 indicates the other battery voltage.

Terminal E indicates no voltage.

Start the engine. Refer to Normal Local Starting Procedure in Section 3.

With the engine running, verify the following voltages at the battery isolator terminals to ground:

Terminal 1 indicates battery voltage.

Terminal 2 indicates the other battery voltage.


Terminal E indicates battery voltage.

Terminal A indicates about 1 volt higher than battery voltage.

Stop the engine.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

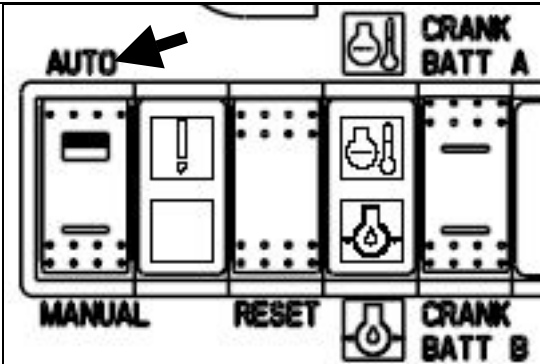


Engine Harness Removal/Installation

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

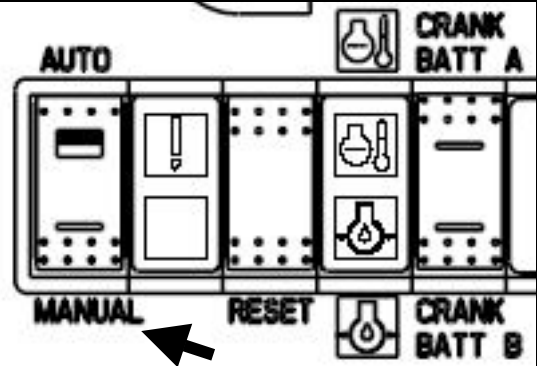

NOTE: Refer to Battery Removal/Installation in this section for detailed instructions for disconnecting the battery cable clamps.

Disconnect the negative battery cable from Battery A.

Disconnect the negative battery cable from Battery B.

Remove

NOTE: Refer to Drawing 8513 Sheet 1 in Section 13 for a depiction of the engine wiring harness.

NOTE: Ensure that each terminal is properly labeled for ease of reconnection.

Disconnect the harness connection at each terminal.

Install

NOTE: Refer to Drawing 8513 Sheet 1 in Section 13 for a depiction of the engine wiring harness.

Connect the harness connection at each terminal.

Engine Harness Removal/Installation (Cont)

Follow-Up

NOTE: Refer to Battery Removal/Installation in this section for detailed instructions for connecting the battery cable clamps.

Connect the negative battery cable at Battery A.

Connect the negative battery cable at Battery B.

NOTE: Refer to Second Start in Section 3 for the suggested checks.

Start the engine. Refer to Normal Local Starting Procedure in Section 3.


Observe that the engine starts with no unusual noises or vibrations.

Verify that the engine reaches operating temperature.

Stop the engine.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

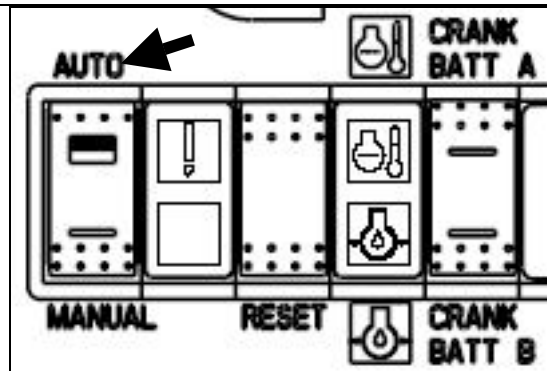


Voltmeter Removal/Installation

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

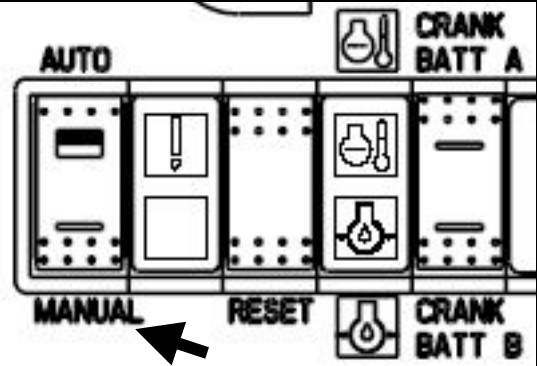


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

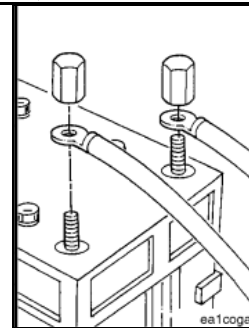

Remove


NOTE: Refer to Drawing 10423 Sheet 1 in Section 13 for electrical schematic details.

Open the local control panel.

NOTE: Ensure that the wires are clearly tagged for reconnection.

Loosen the nuts on the stud and remove the wires.

Remove the nuts on the mounting bracket and remove the voltmeter from the panel.

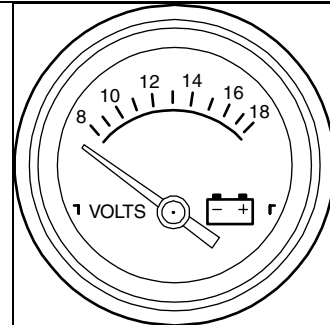

Voltmeter Removal/Installation (Cont)

Install


Orient the voltmeter in the cutout in the electrical panel.

Position the mounting bracket on the gauge.

Install the mounting nuts.

Reconnect the electrical wires on the studs in the same positions as they were originally installed.


Tighten the nuts on the studs.

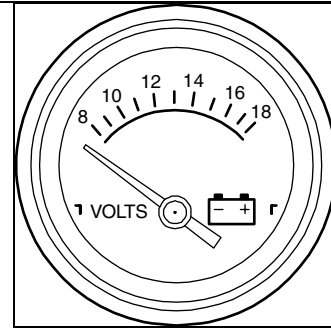

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.


Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

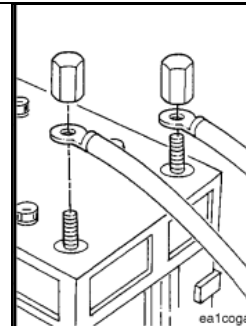

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

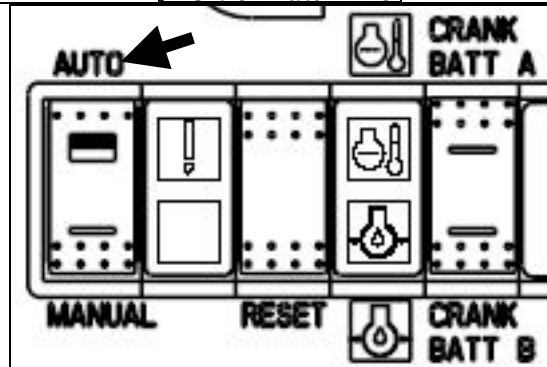

Battery Testing



Batteries can emit explosive gases. To avoid injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.



Acid is extremely dangerous and can damage the machinery and can also cause serious burns. Always provide a strong tank of soda water as a neutralizing agent when servicing the batteries. Wear goggles and protective clothing to avoid serious burns.

NOTE: This section is for conventional batteries only. Maintenance-free batteries may be supplied by the customer. These are sealed and do not require the addition of water. Also, specific gravity cannot be checked. If the batteries are not supplied by Cummins Fire Power, follow the battery manufacturer's recommendations for testing and servicing their batteries.

<p>Prepare</p> <p>Place the fire protection system in a safe mode for engine service.</p> <p>Place the AUTO/MANUAL rocker switch in the MANUAL position.</p>	
<p>REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS</p> <p>For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a "Battery Failure" alarm.</p> <p>Wear safety glasses when disconnecting batteries!</p> <p>Next, disconnect both batteries at their terminals.</p>	


Battery Testing (Cont)

Check Electrolyte Level

Remove all cell covers for both sets of batteries.

Check the electrolyte level in each cell of each battery.

NOTE: Cummins recommends the use of a self-leveling filler. If a syringe type filler is used, use care to prevent overflow or splashing of acid from the cell.

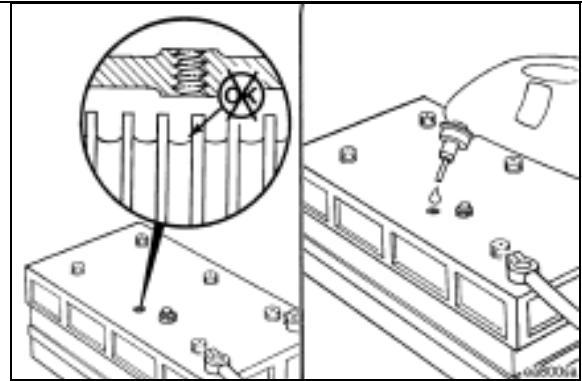

Do not overfill the cell. Fill only to the level indication.



If a syringe type filler is used, use care to prevent overflow or splashing of acid from the cell.

As required, fill each battery cell with distilled water.

Install all cell covers for both sets of batteries.

If water was added, recharge the battery prior to checking specific gravity.


Battery Testing (Cont)

Check Specific Gravity

NOTE: If water has been added to a dry cell, recharge the battery to mix the added water with the existing battery electrolyte. This will prevent incorrect readings.

NOTE: The battery must be more than about ¼ charged before the hydrometer readings can be accurate. Accurate readings may require several hours of charging for a fully discharged battery.

Use a hydrometer to measure the specific gravity of each cell.

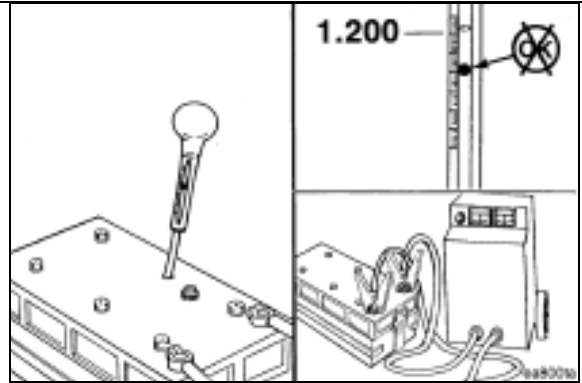

State of Charge and Specific Gravity*

% Charged	Non-Tropical	Tropical
100%	1.265	1.225
75%	1.225	1.185
50%	1.190	1.150
25%	1.155	1.115
0%	1.120	1.080

* At 26.7 °C [80 °F]

Check the battery fluid column in the refractometer to determine the state of charge of each battery cell.

NOTE: Evaluate the state of charge in respect to the local requirements. A cold location will require a greater specific gravity than a hot climate for the necessary cranking amperes.

If charge is low, charge the batteries. Refer to [Battery and Electrical Installation](#) in Section 3.

Battery Testing (Cont)

Check Battery Output



Do not connect battery charging cables to any electronic control system part. This can damage the electronic control system parts.

NOTE: Use the inductive charging-cranking systems analyzer, Cummins Part Number 3377193, to test the output amperage of either maintenance-free or conventional vent cap batteries. Follow the instructions provided with the test equipment.


NOTE: The required battery output in cold cranking amperes is provided in Electrical System Specifications in Section 10. Use the listed value for the system voltage.

Test both sets of batteries.

NOTE: For customer supplied batteries, refer to the manufacturer's literature for charging instructions.

If the output amperage is low, charge the battery. Refer to Battery and Electrical Installation in Section 3.


Replace the battery if it will not charge to the manufacturer's specifications or will not maintain a charge.

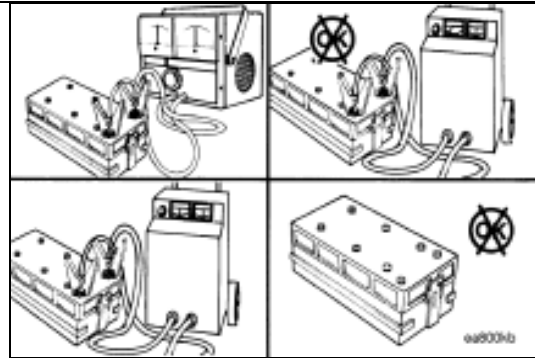

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.

Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

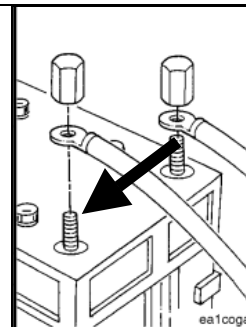


Battery Testing (Cont)

Place the AUTO/MANUAL rocker switch in the AUTO position.



Return the fire protection system to operating status.

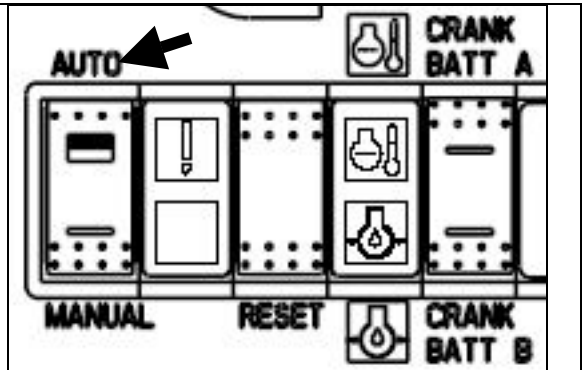

Battery Removal/Installation



Batteries can emit explosive gases. To avoid injury, always ventilate the compartment before servicing the batteries.




Acid is extremely dangerous and can damage the machinery and can also cause serious burns. Always provide a strong tank of soda water as a neutralizing agent when servicing the batteries. Wear goggles and protective clothing to avoid serious burns.

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

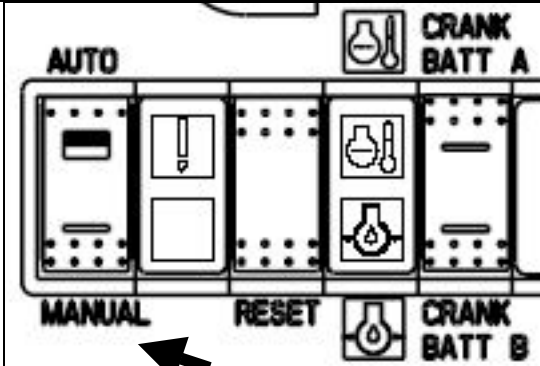


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a "Battery Failure" alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

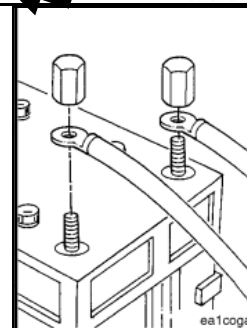

Clear and ventilate the battery storage area.

Collect the necessary tools and safety equipment.

Battery Removal/Installation (Cont)

Remove

NOTE: Use the correct battery tools. Use end wrenches to loosen the battery clamps. Use a battery cable puller to remove tight cable clamps from the battery terminal. Use a battery carrier to lift and carry the battery.

Remove any battery support hardware.



To reduce the possibility of arcing, remove the negative (-) battery cable first.

Loosen the battery cable clamps.

Remove the negative battery cable first.

Remove the positive battery cable first.



Do not tip the battery and spill the acid.

Using a battery carrier, lift and remove the battery.

If disposing of the battery, dispose of it in accordance with all applicable environmental regulations.

Clean

NOTE: Use the correct battery tools. Use a terminal cleaning brush for the battery terminal. Use a putty knife and wire brush to remove dirt and corrosion from the battery body and any support.

Clean the battery posts to remove all corrosion and to expose the metal.

Remove any other corrosion or debris from the battery body or battery support.

Battery Removal/Installation (Cont)

Install

NOTE: Use the correct battery tools. Use a battery cable clamp spreader to install tight cable clamps on the battery terminal. Use end wrenches to tighten the battery clamps



Do not tip the battery and spill the acid.

Using a battery carrier, carry and position the battery.



To reduce the possibility of arcing, attach the negative (-) battery cable last.

Spread the positive cable clamp and position the clamp on the post.

Tighten the positive cable clamp.

Spread the negative cable clamp and position the clamp on the post.

Tighten the negative cable clamp.

Torque Value: As per capscrew markings and torque values in Section 10.

Install any battery support hardware.

Follow-Up


If new batteries are installed, charge the batteries. Refer to [Battery and Electrical Installation](#) in Section 3.

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.




Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

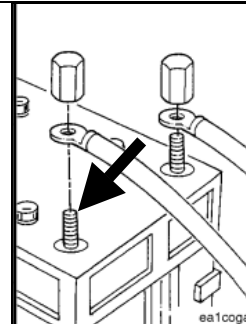

Battery Removal/Installation (Cont)

Place the AUTO/MANUAL rocker switch in the AUTO position.
Return the fire protection system to operating status.

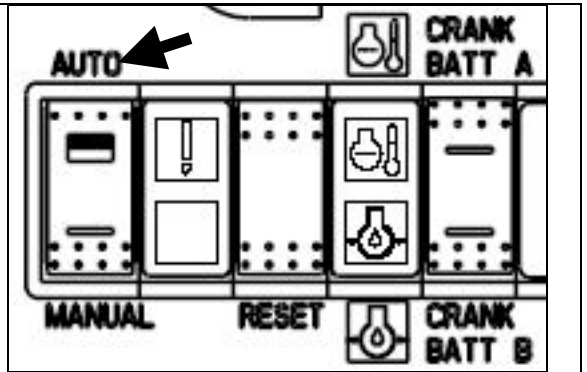


Check Battery Cables and Connections



WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries.

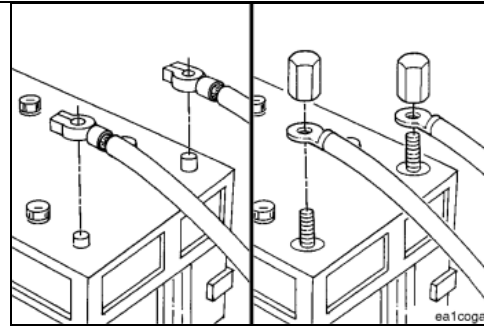

WARNING

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


NOTE: There are two possible heavy-duty battery connections:

Battery terminal and clamp

Threaded battery terminal and nut

Remove and inspect the battery cables and connections for cracks or corrosion.


Replace broken terminals, connectors, or cables.

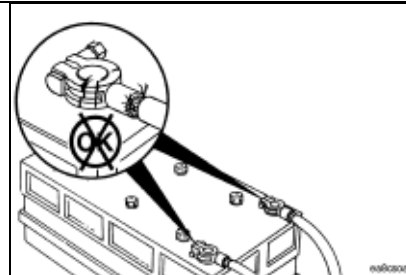

If the connections are corroded, use a battery brush or wire brush to clean the connections until shiny.


Alternatively, if a brush won't do the job, use an acid neutralizing solution to remove the corrosion.

Brush or wipe all residue or debris from the terminals.

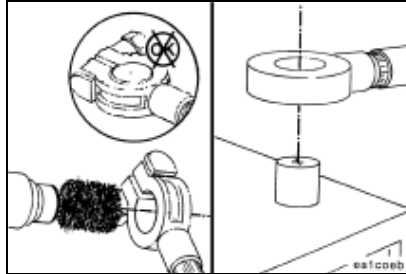

NOTE: Coat the terminals with a high temperature grease to prevent corrosion.

Install the cables and tighten the battery connections.

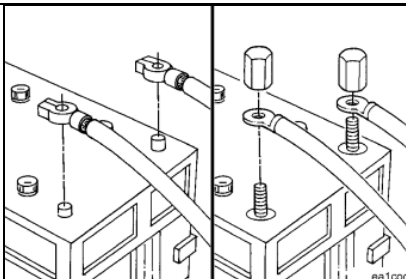


Starter Motor Assembly Removal/Installation

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

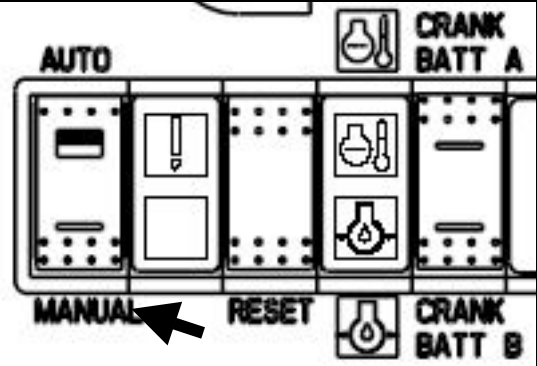


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

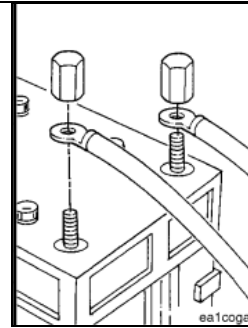


Remove

Disconnect the ground (-) cable from the battery.

Identify each electrical wire with a tag indicating location.



Remove the battery cable from the solenoid.

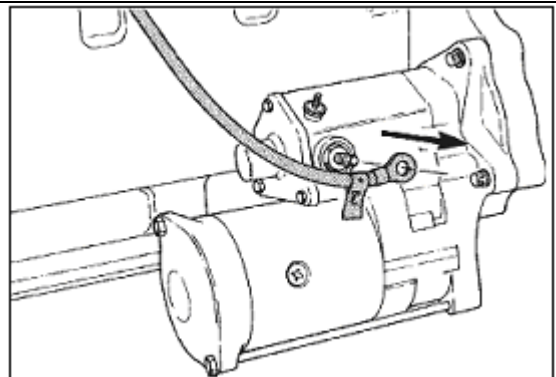

Starter Motor Assembly Removal/Installation (Cont)

Remove the starting motor.




Install

NOTE: Use only the Delco 39MT replacement starter Cummings Part No. ST9370 / 3971603 (12 VDC) or Cummings Part No. ST9258 / 3957598 (24 VDC).

Align and install the starter motor.

Install and tighten the three mounting capscrews.


Torque Value: 43 N•m [32 ft-lb]

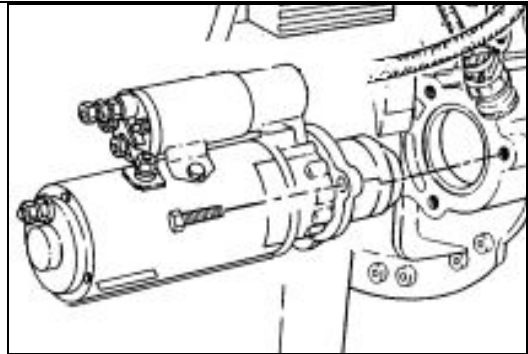

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.

Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

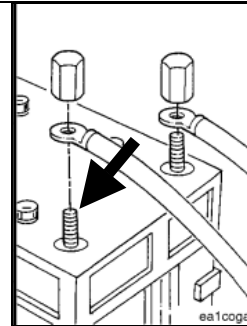


Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Observe that the engine starts with no unusual noises or vibrations.

Stop the engine.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

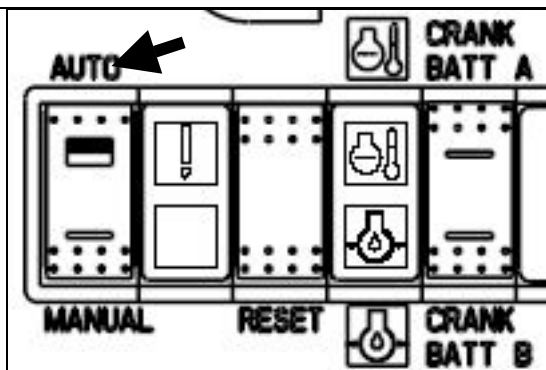


Crank Solenoid Assembly Removal/Installation

NOTE: Use this procedure to remove and install either or both of the crank solenoid assemblies. The crank solenoid assembly sub-components are not serviceable parts as supplied by Cummins Fire Power.

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

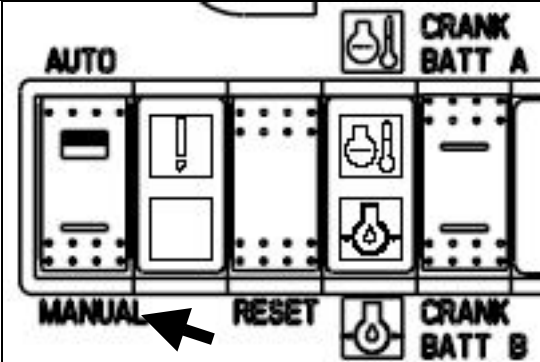

NOTE: Refer to [Battery Removal/Installation](#) in this section for detailed instructions for disconnecting the battery cable clamps.

Disconnect the negative battery cable from Battery A.

Disconnect the negative battery cable from Battery B.

Remove

NOTE: Refer to [Drawing 10423 Sheet 1](#) in Section 13 for schematic information related to the crank solenoid assemblies.

NOTE: Ensure that the wires are clearly identified for ease of reconnection.


NOTE: Observe the location of flat and lock washers for ease of reconnection.

NOTE: Save the nuts, bolts, flat washers, and lock washers for reuse.

Disconnect all electrical connectors from the solenoid's four terminal studs.

Loosen the four sets of mounting nuts, bolts, and washers.

Remove the crank solenoid and fasteners from the engine.

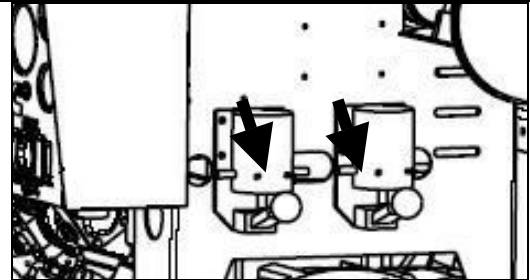

Crank Solenoid Assembly Removal/Installation (Cont)**Install**

NOTE: Install the correct component. For 12 VDC systems, use Cummins NPower Part No 8824. For 24 VDC systems, use Cummins NPower Part No 8846.

Position the four bolts through the mounting holes.

Position the crank solenoid on the bolts, add the lock washers, and start the nuts.

Tighten the four mounting nuts.


NOTE: Refer to Drawing 10423 Sheet 1 in Section 13 for crank solenoid schematic information.

Position the flat washers, cable lugs, lock washers, and nuts on the studs in the same order as was removed.

Tighten the nuts on the studs.

Torque Values: As per capscrew markings and torque values in Section 10

With power still disconnected, verify that the lever handle on the crank solenoid operates freely.

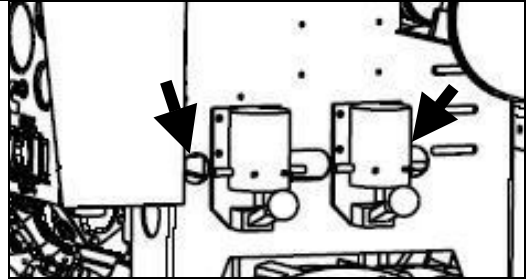**Follow-Up**

NOTE: Refer to Battery Removal/Installation in this section for detailed instructions for reconnecting the battery cable clamps.

Connect the negative battery cable from Battery A.

Connect the negative battery cable from Battery B.

Crank Solenoid Assembly Removal/Installation (Cont)

Demonstrate Local Electrical Start

NOTE: If Crank Solenoid A was replaced, start the engine using CRANK BATT A. Alternatively; use B if B was replaced.

Start the engine electrically from the local control panel. Refer to Normal Local Starting Procedure in Section 3.

Verify that the engine starts normally with no unusual indications.

Stop the engine.

Demonstrate Local Manual Start

NOTE: If Crank Solenoid A was replaced, start the engine using CRANK BATT A. Alternatively; use B if B was replaced.

Start the engine manually from the crank solenoid lever handle.

Refer to Normal Local Starting Procedure in Section 3.


Verify that the engine starts normally with no unusual indications.

Stop the engine.

Place the AUTO/MANUAL rocker switch in the AUTO position.




Return the fire protection system to operating status.

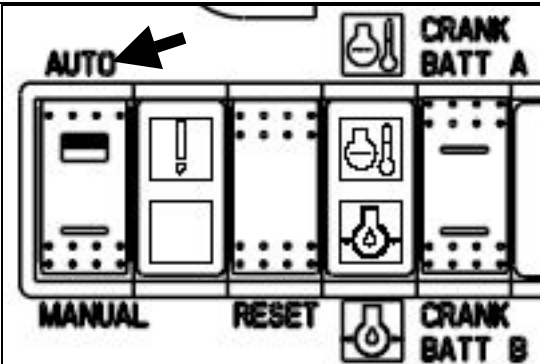

Control Panel Fuse Replacement


Prepare

Place the fire protection system in a safe mode for engine service.
Place the AUTO/MANUAL rocker switch in the MANUAL position.

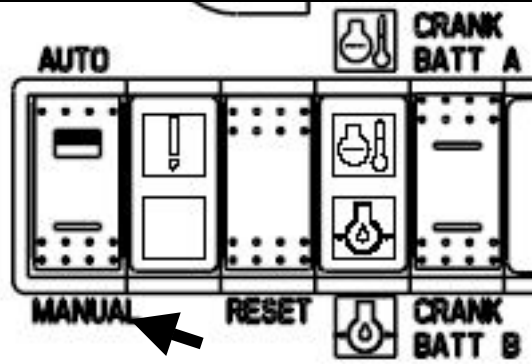

REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

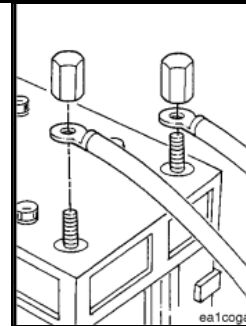


Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

Remove

Open the fire pump engine’s local control panel. Loosen the cover screw and remove the fuse block cover.

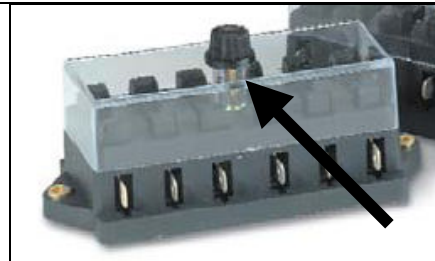

Control Panel Fuse Replacement (Cont)

NOTE: The fuses are ATO/ATC ¼” blade type automotive fuses. The 20 Amp fuses (Fuse 1, 2, and 3) are colored yellow. The five amp fuse is colored tan.

NOTE: Refer to Drawing 10423 Sheet 1 in Section 13 for schematic details.

NOTE: The fuses are ordered from top to bottom as follows:

5 A Fuse F4 (Control Panel Indications)

20 A Fuse F1 (Battery A)

20 A Fuse F2 (Battery B)

20 A Fuse F3 (Crank Circuit)

Select the fuse for testing or replacement.

Pull the fuse from the fuse block.

Check for continuity either visually or with an ohmmeter.

Check for short circuits to ground on any fuse circuit that had an open circuited fuse. Correct any faults.

If necessary, remove, test, or replace the engine harness. Refer to Engine Harness Removal/Installation in this section.



Install

Replace any fuse with an open circuit. Place the new fuse into the fuse block and press it in until the fuse is properly inserted.

Install the fuse block cover and tighten the cover screw,

Close the control panel.




For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

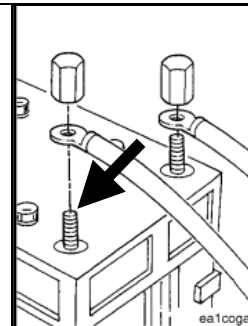

Control Panel Fuse Replacement (Cont)

NOTE: If Fuse 1 or Fuse 2 was replaced, start the engine using CRANK BATT A or CRANK BATT B respectively.

Start the engine. Refer to Normal Local Starting Procedure in Section 3.

Observe that the engine starts with no unusual indications.


Observe that engine speed is indicated.

Observe that raw water flow has started.

Stop the engine.

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

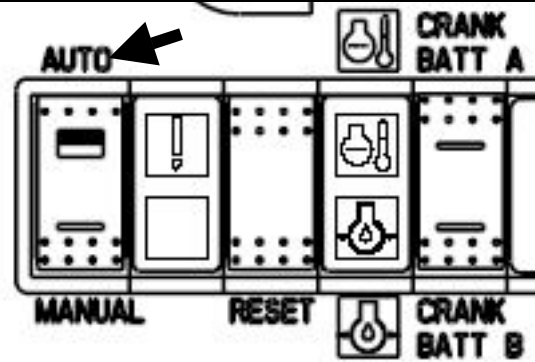

Exhaust Manifold Removal/Installation

Prepare

Remove the heat shield. Refer to instructions in this section.

Remove the air intake piping from the turbocharger. Refer to instructions in this section.


Remove the air outlet piping from the turbocharger. Refer to instructions in this section.

Remove the exhaust outlet piping from the turbocharger. Refer to instructions in this section.

Remove the turbocharger. Refer to instructions in this section.


Remove

Refer to Exhaust Manifold, Dry (41-011-007-tr) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

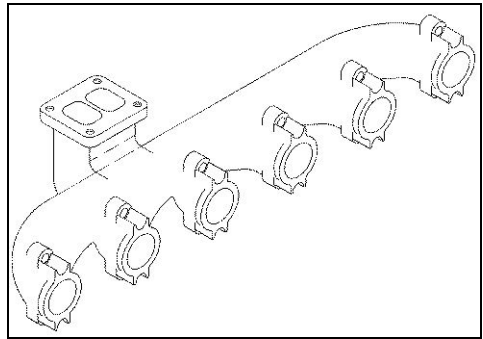


Clean

Refer to Exhaust Manifold, Dry (41-011-007-tr) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

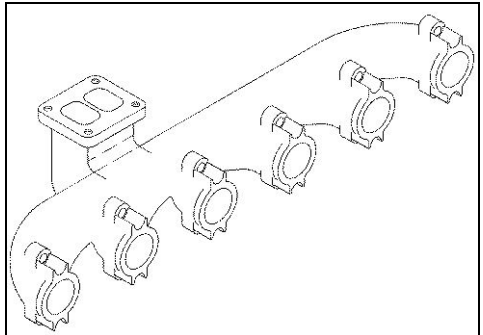

Exhaust Manifold Removal/ Installation (Cont)**Install**

Refer to Exhaust Manifold, Dry (41-011-007-tr)
in C Series Troubleshooting and Repair Manual,
Bulletin No. 3666003.

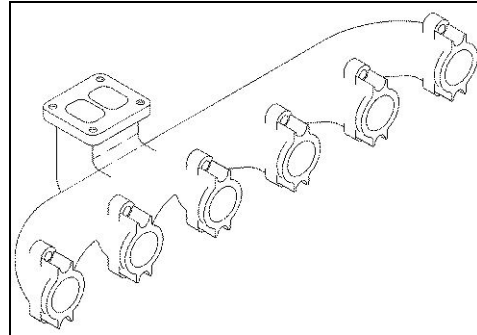**Follow-Up**

Install the turbocharger. Refer to instructions in
this section.

Install the exhaust outlet piping at the
turbocharger. Refer to instructions in this
section.

Install the air outlet piping at the turbocharger.
Refer to instructions in this section.

Install the air intake piping at the turbocharger.
Refer to instructions in this section.

Install the heat shield. Refer to instructions in
this section.

Exhaust Restriction Measurement

Measure

NOTE: The maximum acceptable exhaust restriction is listed in Exhaust System Specifications in Section 10.

NOTE: A new pressure tap in the customer-supplied exhaust piping may be required.

Install pressure gauge, Cummins Part Number ST-1273, in the exhaust piping at the connection to the fire pump.

Operate the engine at rated speed and load. Refer to Normal Local Starting Procedure in Section 3.

Observe the exhaust restriction.

Stop the engine. Refer to Normal Local Starting Procedure in Section 3.

Remove the pressure gauge and plug the pressure tap.


If the backpressure exceeds specification, modify the exhaust piping accordingly.

Exhaust Shield Removal/Installation

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

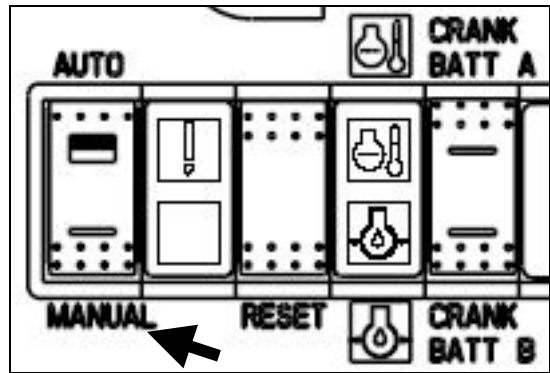


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.


Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

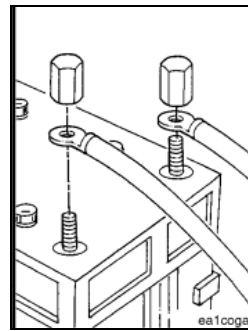

Remove


Remove the exhaust shield and fasteners. Refer to [Drawing 8913](#) (for CFP83-F10, F20, F30 models) or [Drawing 8937](#) (for CFP83-F40 model) in Section 13.

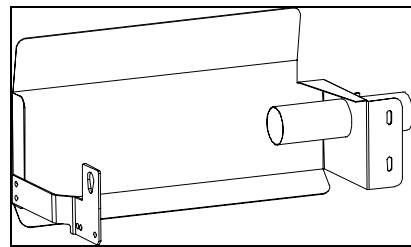

Exhaust Shield Removal/Installation (Cont)


Install

Install the exhaust shield and fasteners. Refer to [Drawing 8913](#) (for CFP83-F10, F20, F30 models) or [Drawing 8937](#) (for CFP83-F40 model) in Section 13.

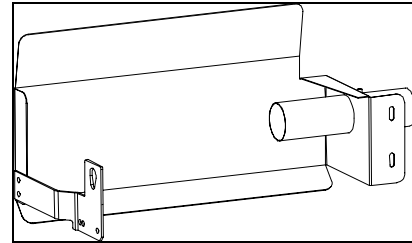

Torque Value: As per capscrew markings and torque values in Section 5

For safety reasons, both batteries must be reconnected before putting the engine and fire protection system controller back in service.

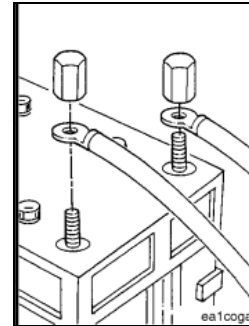


Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

If functional components were removed, repaired, or replaced, perform the appropriate installation checks and engine starts as listed in [Section 3](#). Verify that the components operate properly.

If testing is completed, place the AUTO/MANUAL rocker switch in the AUTO position.

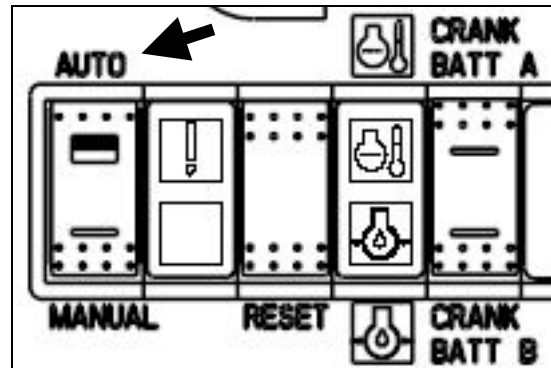

This Page Intentionally Left Blank

Inline Fuel Injection Pump Removal/Installation

Refer to Fuel Injection Pumps, In-Line (41-005-012) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

- Clean debris.
- Remove all fuel lines.
- Remove control linkage.
- Remove fuel shutoff solenoid.
- Remove AFC air line.
- Remove oil line(s).

Remove



A diesel engine can not tolerate dirt or water in the fuel system. A tiny piece of dirt or a few drops of water in the injection system can stop the unit.

Clean all external surfaces of the injection pump, including all line connections and fittings that are to be disconnected.


Clean the area around the injection pump gear cover to prevent dirt from entering the crankcase.

Locate top dead center for cylinder No. 1.

Push the top dead center pin into the hole in the camshaft gear while slowly barring the engine.

NOTE: Be sure to disengage the pin after locating top dead center.

The barring gear inserts into the flywheel housing and engages the flywheel ring gear. The engine can then be rotated by hand using a 1/2-inch ratchet or breaker bar.

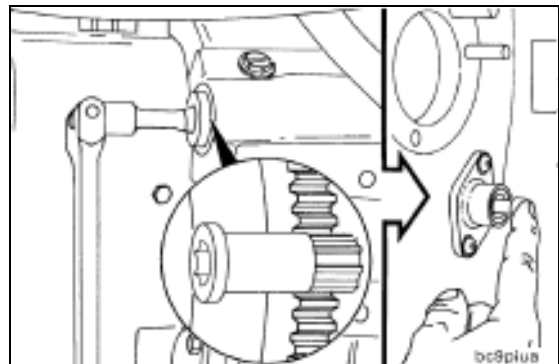


Inline Fuel Injection Pump Removal/Installation (Cont)

Remove the fuel pump mounting bracket.




Remove the gear cover access cap.


Remove the nut and washer from the fuel pump shaft.

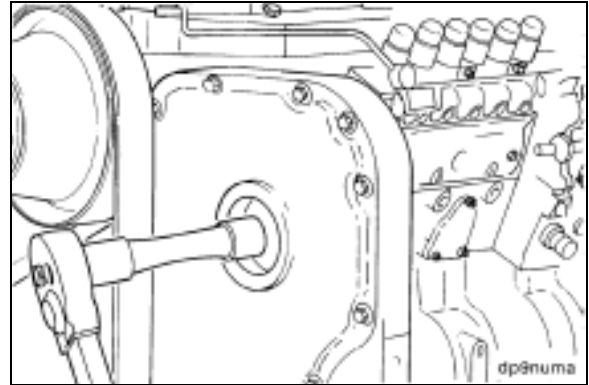

With fuel pump gear puller, Part Number 3824469, pull the fuel injection pump drive gear loose from the shaft.

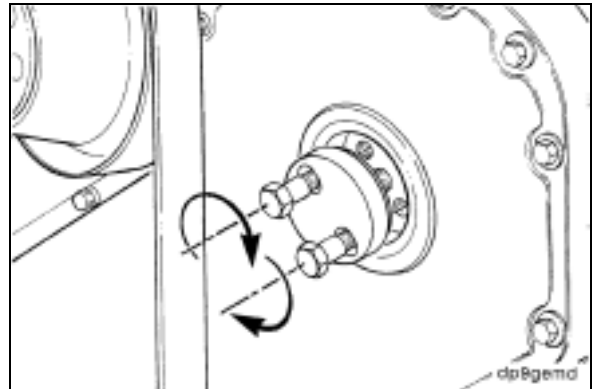


Engines equipped with the P7100, P3000, A, and MW fuel injection pump are equipped with support brackets that must be removed.

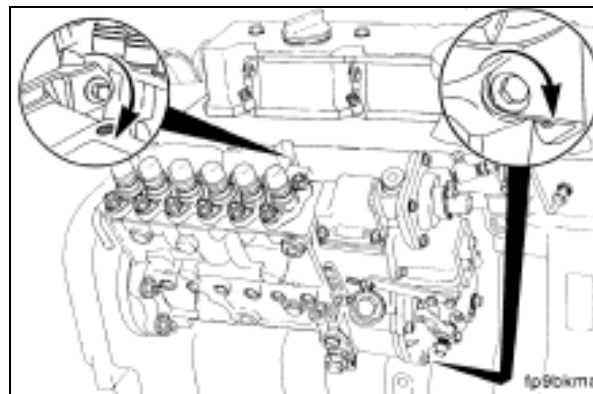


Inline Fuel Injection Pump Removal/Installation (Cont)

Remove the four fuel injection pump mounting nuts.
Remove the fuel injection pump.

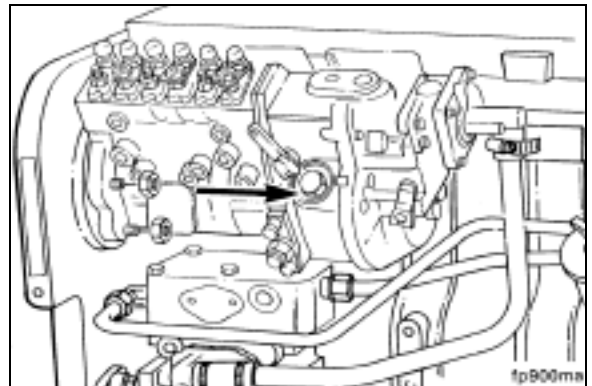


Install

Make sure the engine has cylinder No. 1 at top dead center.
The barring gear inserts into the flywheel housing and engages the flywheel ring gear.
The engine can then be rotated by hand using a 1/2-inch ratchet or breaker bar.

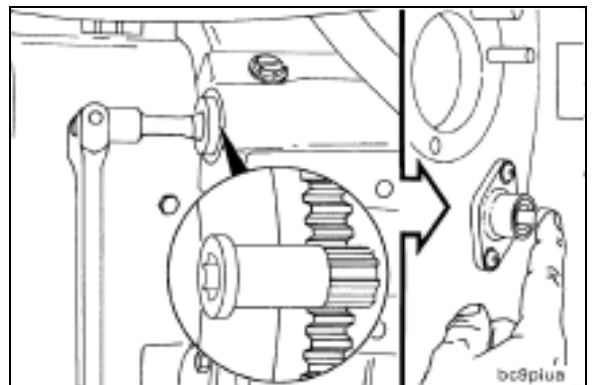


Injection Pump Timing

The injection pump also has a timing pin, located in the governor housing, to position the pump shaft to correspond with top dead center for cylinder No. 1.

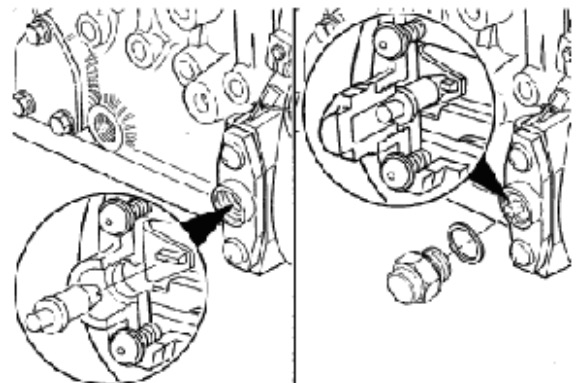


Inline Fuel Injection Pump Removal/Installation (Cont)


Remove the access plug.

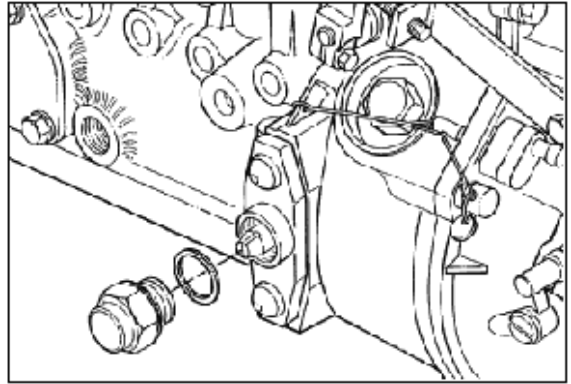

Remove the timing pin.

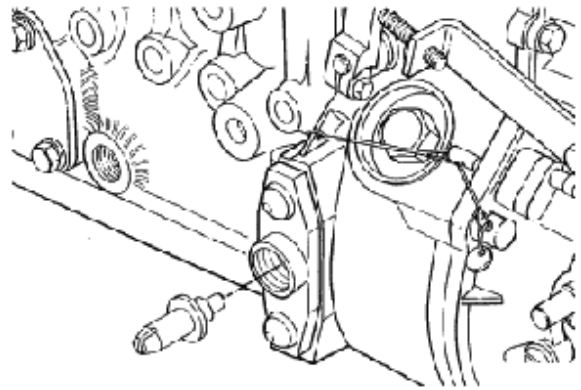


If the timing tooth is not aligned with the timing pin hole, rotate the pump shaft until the timing tooth aligns.

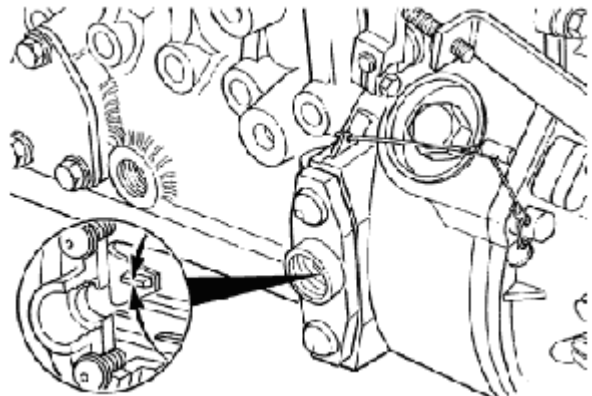

Inline Fuel Injection Pump Removal/Installation (Cont)

Reverse the position of the pin so the slot of the pin will fit over the timing tooth in the pump.
Install and secure the pin with the access plug.

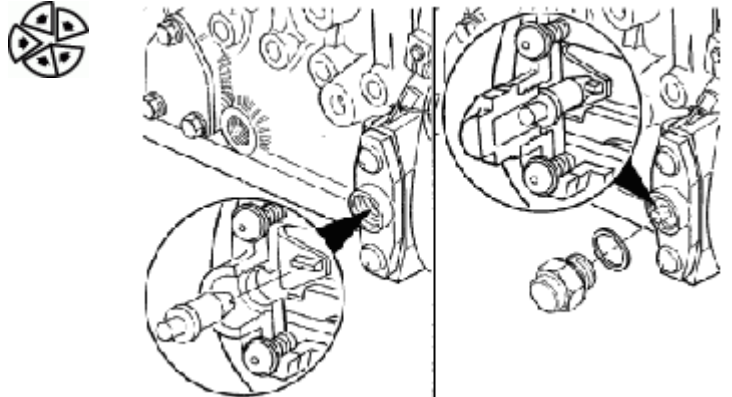

CAUTION


The fuel pump drive inside diameter and the shaft outside diameter must be clean and dry before installing the shaft into the gear. A non-petroleum-based cleaner can be used to clean the drive gear and shaft mounting surfaces. Failure to do so will result in gear slippage in the retarded direction.

Clean the drive gear and shaft with a non-petroleum-based cleaner.

NOTE: If the mounting flange o-ring has a colored stripe, it can not be reused. Replace with a new o-ring. Furthermore, do not lubricate the new-type o-ring. Instead, lubricate the seating area of the gear housing.

Lubricate the mounting flange of the fuel injection pump with clean lubricating engine oil.

NOTE: The P7100 fuel injection pump driveshaft has a provision for a Woodruff key; however, it is not required for the P7100 drive gear.

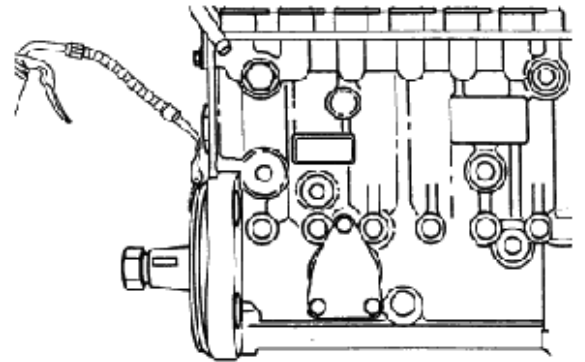


Inline Fuel Injection Pump Removal/Installation (Cont)

Slide the pump shaft through the drive gear, and position the pump flange onto the mounting studs.



Push the pump forward until the mounting flange and o-ring are properly fitted into the gear housing bore.

If equipped, finger-tighten the capscrews for the support bracket.

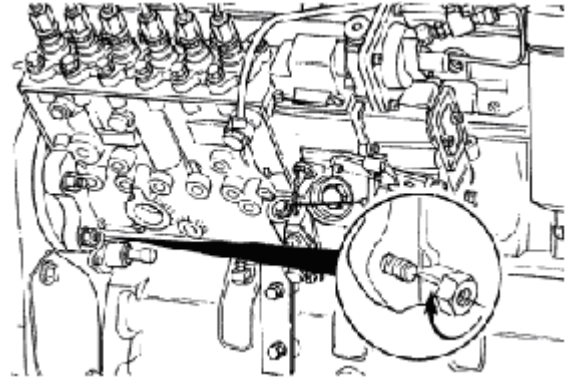

Tighten the mounting nuts.



Torque Value:

Mounting Nuts 44 N•m [32 ft-lb]


Tighten the capscrews for the rear support bracket.



Torque Value:

Support Bracket 14 N•m [124 in-lb]


Install the fuel injection pump retaining nut and washer.

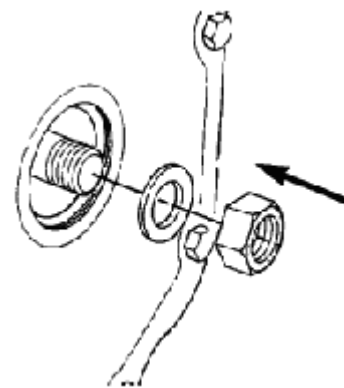

Torque Value: 10 to 15 N•m [89 to 133 in-lb]

Inline Fuel Injection Pump Removal/Installation (Cont)


Disengage the engine timing pin.

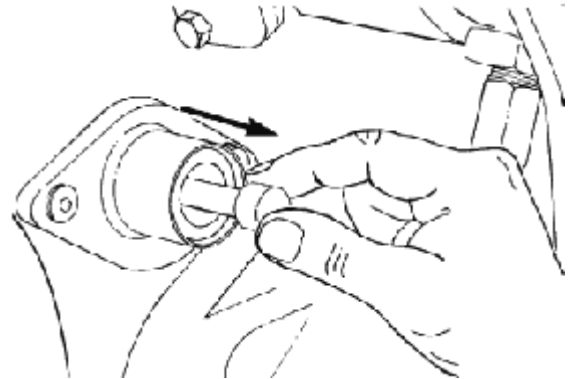

Remove the fuel pump timing pin plug.

Reverse the position of the pin and install the pin, plug, and sealing washer.

Torque Value: 24 N•m [18 ft-lb]

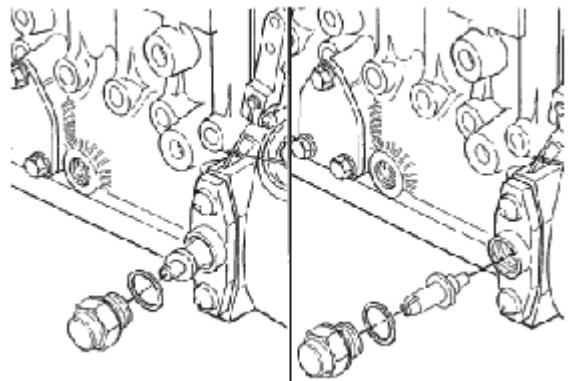

Tighten the fuel pump drive nut.

Torque Values:

- **P7100 Pump 178 N•m [131 ft-lb]**
- **A Pump 95 N•m [70 ft-lb]**
- **EP9 Pump 127 N•m [94 ft-lb]**

Install the gear cover access cap hand-tight.

Install the fuel pump mounting bracket
capscrews finger-tight.

Install support mounting capscrews finger-tight.

Make sure alignment is correct and tighten
capscrews.

Torque Value: 24 N•m [18 ft-lb]

Inline Fuel Injection Pump Removal/Installation (Cont)



If a replacement or repaired pump was installed, be sure to fill the governor housing with clean lubricating engine oil before starting the engine. Failure to do so will result in damage to the governor fly weights.

Remove the access plug, and fill the governor housing with clean lubricating engine oil using specifications below.

Oil Capacities:

- RQVK Governor 750 ml [0.71 qt]
- RQV Governor 750 ml [0.71 qt]
- RSV Governor 450 ml [0.48 qt] Bosch
- RSV-H Governor 500 ml [0.53 qt] Denso

Install the access plug.

Torque Value: 28 N•m [21 ft-lb]

Follow-Up

Fuel Injection Pump, In-Line, Spill Port Timing

Refer to Fuel Injection Pump, In-Line, Spill Port Timing (41-005-013) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

- Clean debris.
- Remove all fuel lines.
- Remove control linkage.
- Remove fuel shutoff solenoid.
- Remove AFC air line.
- Remove oil line(s).

Remove



A diesel engine can not tolerate dirt or water in the fuel system. A tiny piece of dirt or a few drops of water in the injection system can stop the unit.

Clean all external surfaces of the injection pump, including all line connections and fittings that are to be disconnected.


Clean the area around the injection pump gear cover to prevent dirt from entering the crankcase.

Locate top dead center for cylinder No. 1.

Push the top dead center pin into the hole in the camshaft gear while slowly barring the engine.

NOTE: Be sure to disengage the pin after locating top dead center.

The barring gear inserts into the flywheel housing and engages the flywheel ring gear. The engine can then be rotated by hand using a 1/2-inch ratchet or breaker bar.

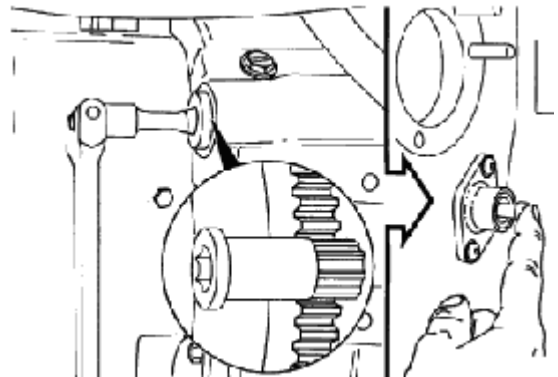


Fuel Injection Pump, In-Line, Spill Port Timing (Cont)

Remove the fuel pump mounting bracket.



Remove the gear cover access cap.

Remove the nut and washer from the fuel pump shaft.

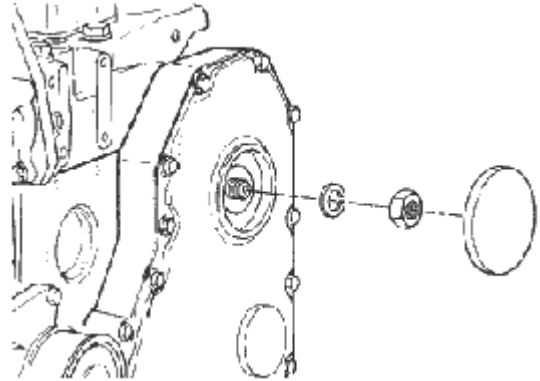

Pull the fuel pump drive gear loose from the shaft.


Remove the four mounting nuts.

Remove the fuel pump.

Install

Make sure the engine has cylinder No. 1 at top dead center.


The barring gear inserts into the flywheel housing and engages the flywheel ring gear. The engine can then be rotated by hand using a 1/2-inch ratchet or breaker bar.

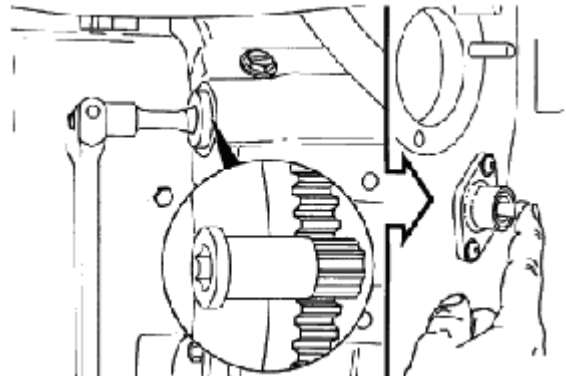


Fuel Injection Pump, In-Line, Spill Port Timing (Cont)

Injection Pump Timing


The injection pump also has a timing pin, located in the governor housing, to position the pump shaft to correspond with top dead center for cylinder No. 1.

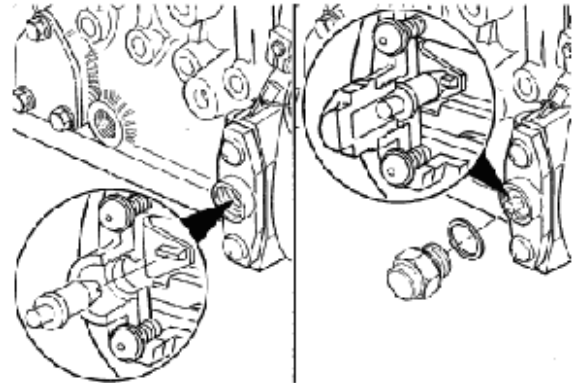

Remove the access plug.

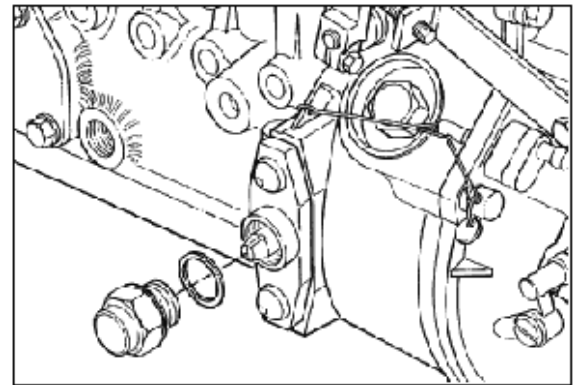


Remove the timing pin.

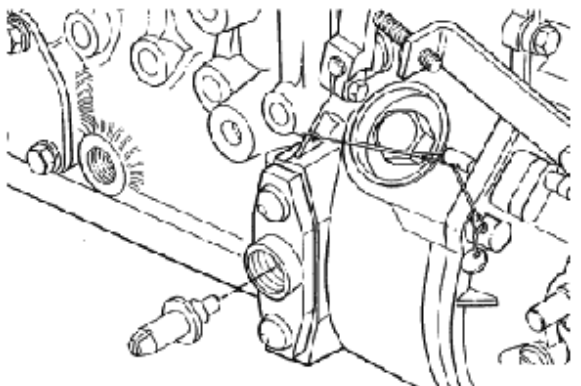


Fuel Injection Pump, In-Line, Spill Port Timing (Cont)

If the timing tooth is not aligned with the timing pin hole, rotate the pump shaft until the timing tooth aligns.

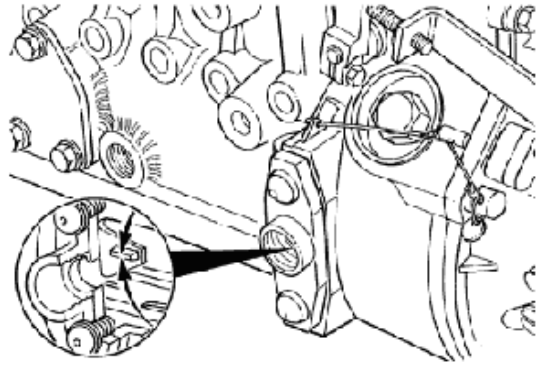

Reverse the position of the pin so the slot of the pin will fit over the timing tooth in the pump.
Install and secure the pin with the access plug.

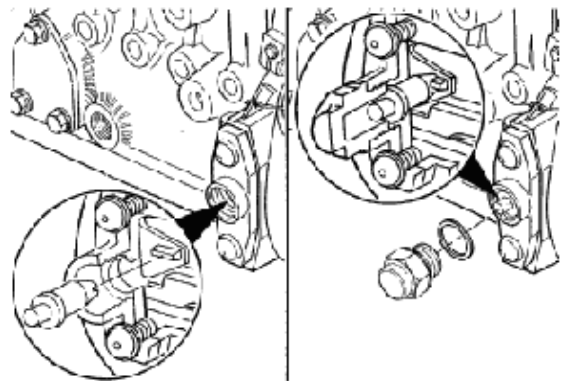

Fuel Injection Pump, In-Line, Spill Port Timing (Cont)




The fuel pump drive inside diameter and the shaft outside diameter must be clean and dry before installing the shaft into the gear. A non-petroleum-based cleaner can be used to clean the drive gear and shaft mounting surfaces. Failure to do so will result in gear slippage in the retarded direction.

Clean the drive gear and shaft with a non-petroleum-based cleaner.

NOTE: If the mounting flange o-ring has a colored stripe, it can not be reused. Replace with a new o-ring. Furthermore, do not lubricate the new-type o-ring. Instead, lubricate the seating area of the gear housing.

Lubricate the mounting flange of the fuel injection pump with clean lubricating engine oil.


NOTE: The P7100 fuel injection pump driveshaft has a provision for a Woodruff key; however, it is not required for the P7100 drive gear.

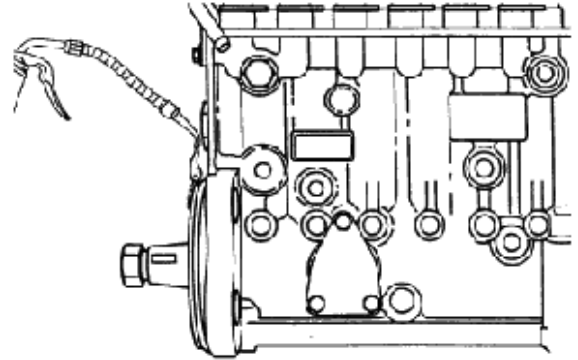

Slide the pump shaft through the drive gear, and position the pump flange onto the mounting studs.

Push the pump forward until the mounting flange and o-ring are properly fitted into the gear housing bore.

If equipped, finger-tighten the capscrews for the support bracket.

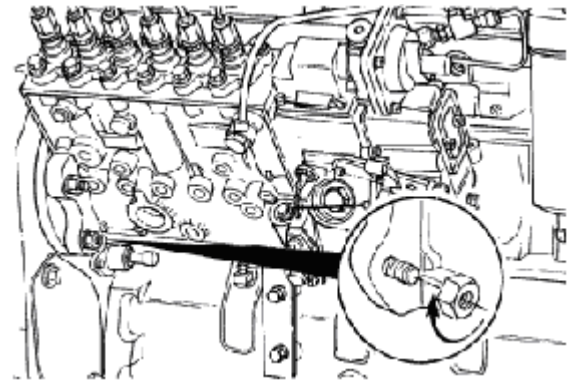

Tighten the mounting nuts.

Torque Value:

Mounting Nuts 44 N•m [32 ft-lb]



Fuel Injection Pump, In-Line, Spill Port Timing (Cont)

Tighten the capscrews for the rear support bracket.




Torque Value:

Support Bracket 14 N•m [124 in-lb]


Install the fuel injection pump retaining nut and washer.



Torque Value: 10 to 15 N•m [89 to 133 in-lb]

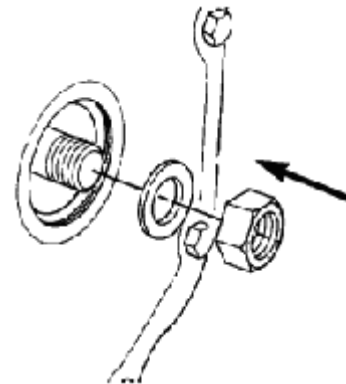

Disengage the engine timing pin.

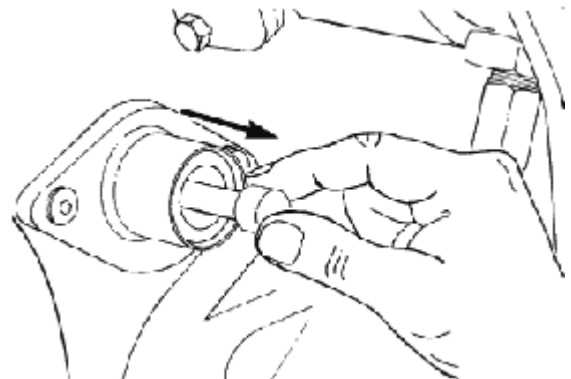


Fuel Injection Pump, In-Line, Spill Port Timing (Cont)

Remove the fuel pump timing pin plug.

Reverse the position of the pin and install the pin, plug, and sealing washer.

Torque Value: 24 N•m [18 ft-lb]

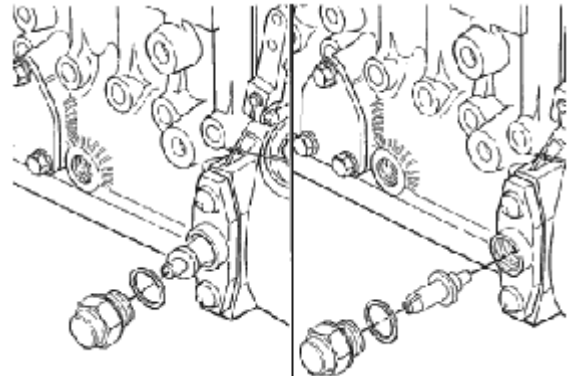

Tighten the fuel pump drive nut.

Torque Values:

- **P7100 Pump 178 N•m [131 ft-lb]**
- **A Pump 95 N•m [70 ft-lb]**
- **EP9 Pump 127 N•m [94 ft-lb]**

Install the gear cover access cap hand-tight.

Install the fuel pump mounting bracket
capscrews finger-tight.

Install support mounting capscrews finger-tight.

Make sure alignment is correct and tighten
capscrews.

Torque Value: 24 N•m [18 ft-lb]

Fuel Injection Pump, In-Line, Spill Port Timing (Cont)



If a replacement or repaired pump was installed, be sure to fill the governor housing with clean lubricating engine oil before starting the engine. Failure to do so will result in damage to the governor fly weights.

Remove the access plug, and fill the governor housing with clean lubricating engine oil using specifications below.

Oil Capacities:

- RQVK Governor 750 ml [0.71 qt]
- RQV Governor 750 ml [0.71 qt]
- RSV Governor 450 ml [0.48 qt] Bosch
- RSV-H Governor 500 ml [0.53 qt] Denso

Install the access plug.

Torque Value: 28 N•m [21 ft-lb]

Follow-Up

Fuel Pump Idle Speed Adjustment

Refer to Fuel Pump Idle Speed (41-005-029) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Adjust



Idle Speed Adjustment, RQVK Governor

NOTE: Idle adjustment for the RQVK governor requires setting of the idle adjustment screw.

Loosen the locknut.


NOTE: Turn the screw counterclockwise to raise the rpm; clockwise to decrease idle speed.

Adjust the screw until the dataplate-specified idle speed is attained with normal idle operation accessory loads.

Tighten the lock screw.

RSV Governor

Idle adjustment for industrial engines requires the setting of both the low-idle screw (1) and the bumper spring screw (2).

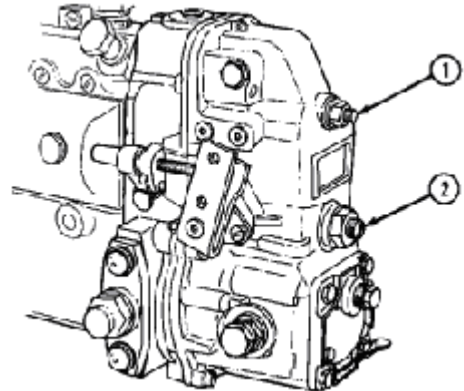

Fuel Shutoff Valve Removal/Installation


Refer to Fuel Shutoff Valve (41-005-043) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

Label and disconnect wiring.

Remove

- Remove the electrical wiring.
- Remove the fuel drain line.
- Remove the throttle shutoff linkage.
- Remove the fuel injection pump top cover.
- Disassemble the fuel injection pump top cover.

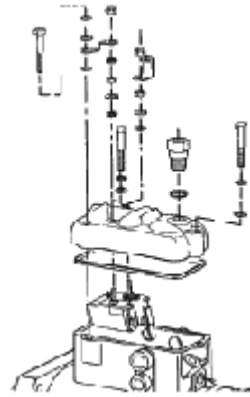

Clean

Rotary Pumps

- Clean around the valve.
- Remove the valve.

NOTE: Be careful not to drop the piston and spring when removing the valve.

Replace the valve and connect the electrical wire.

Torque Value: 43 N•m [32 ft-lb]





Fuel Shutoff Valve Removal/Installation (Cont)

Install

Install new insulating tubes onto the terminals on the terminal studs of the new solenoid.

Install the valve into the cover.

Torque Value: 14 N•m [124 in-lb]

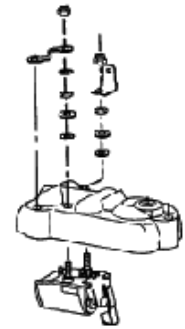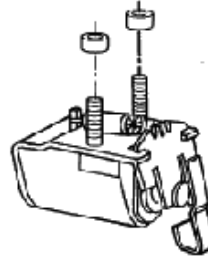


Install the cover and gasket onto the fuel injection pump.

NOTE: Extreme care must be taken in assembling the cover to the fuel injection pump to make sure the shutoff arm is in proper contact with the linkage hook tab.

Install the cover to the pump at a downward angle from the driveshaft end of the fuel injection pump; then slide the cover horizontally into position.

Torque Value: 5 N•m [44 in-lb]

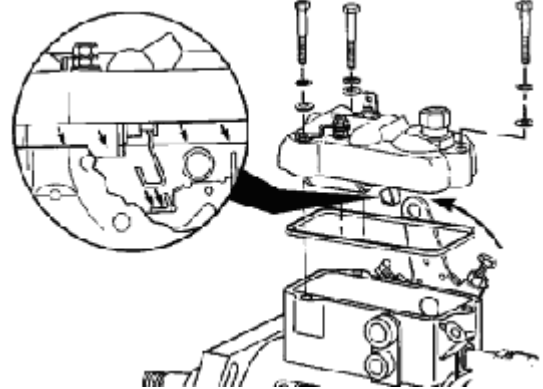

Fuel Shutoff Valve Removal/Installation (Cont)

Inline Pumps



RQVK Governor Shutoff Solenoid

Remove the hitch pin clip, mounting capscrews, and the fuel shutoff solenoid.

Install the new solenoid in reverse order of removal and connect the wires. Make sure the part number and cable tie block is facing away from the engine.



Torque Value: 10 N•m [89 in-lb]

Adjust the solenoid linkage as necessary so that the plunger is magnetically held in with the shutoff lever in the absolute full-run position. Turn the large hex on the end of the plunger to make adjustments.

Follow-Up

Fuel Lift Pump Removal/Installation

Refer to Fuel Lift Pump (41-005-045) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.


Preparatory

Clean debris from around the lift pump.

Disconnect the fuel supply lines.

Clean Piston Style


Clean the mounting surface on the cylinder block.

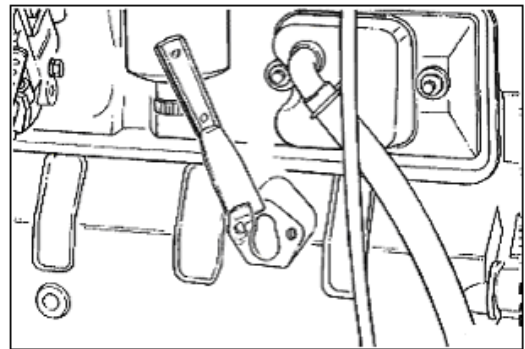

Clean Diaphragm Style

Remove the lift pump.

Clean the mounting surface on the cylinder block.

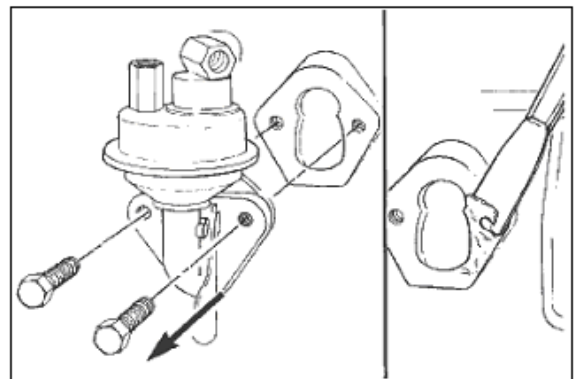

Fuel Lift Pump Removal/Installation (cont)

Install Diaphragm Style


Install the lift pump and a new gasket.

Torque Value: 24 N•m [18 ft-lb]

Connect the fuel lines.



Alternately tighten the mounting capscrews. As the capscrews are tightened, the fuel transfer pump plunger is pushed into the pump. Failure to tighten the capscrews evenly can result in the plunger being bent or broken.

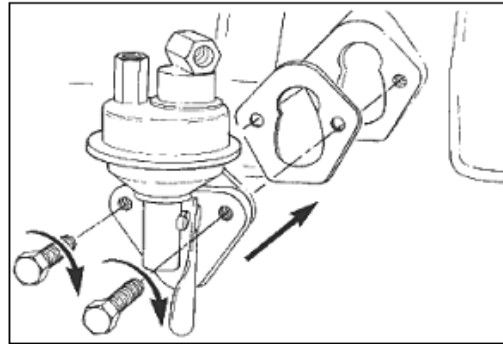

Install Piston Style

Install the pump.

Torque Value: 24 N•m [18 ft-lb]

Connect the fuel lines.



Follow-Up

Air in Fuel

Refer to Air in Fuel (41-006-003) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

General Information



Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.



Do not vent the fuel system on a hot engine; this can cause fuel to spill onto a hot exhaust manifold, which can cause a fire.

The low-pressure fuel system for a Cummins engine consists of the fuel tank, lines between tank and engine, transfer pump and lines, and fuel filter and lines. Air or bubbles at the injection pump can cause no or erratic engine operation and/or subsequent malfunction of the fuel injection pump. Air can be introduced by leaks in the fuel system prior to the transfer pump since fuel pressure is a vacuum. Bubbles can result from any number of restrictions in the system:

Plugged fuel filter

Crimped fuel line

Stopped-up tank module

Inoperative transfer pump

If sufficient fuel reaches the injection pump from the low-pressure system, then solutions to engine operational problems are elsewhere. The following steps will aid in evaluating low-pressure fuel system performance in absence of fault codes.

NOTE: For cold-start/performance problems, perform the following steps:


Leave engine outside in cold environment for at least 12 hours.

Perform outlined test.

If the system fails to meet test criteria, replace the fuel lift pump.


Test

NOTE: A replacement of fuel supply lines, fuel filters, fuel injection pump, high-pressure fuel lines, and injectors will let air enter the fuel system. Air in the system will make the engine hard to start, run rough, misfire, produce low power, and can cause excessive smoke and a fuel knock.

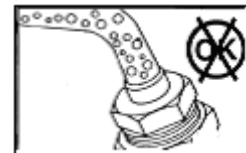

Air in Fuel (Cont)

NOTE: Since the fuel lift pump provides positive pressure through the fuel filter and supply line to the fuel injection pump, loose connections or defective seals can show as a fuel leak, not as an air leak.

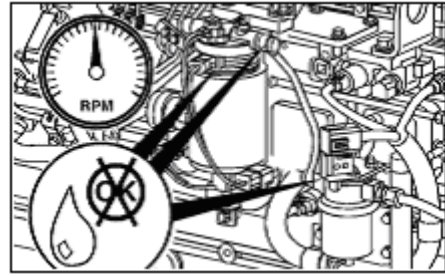


NOTE: If an excessive amount of air has entered into the system, the system will need to be vented.

Loosen the return banjo fitting on the fuel lift pump.

Run the fuel lift pump until all the air has been vented.

When all the air has been vented, retighten the fitting.

NOTE: To run the fuel pump for 25 seconds, crank the engine for a split second, and leave the key in the ON position.

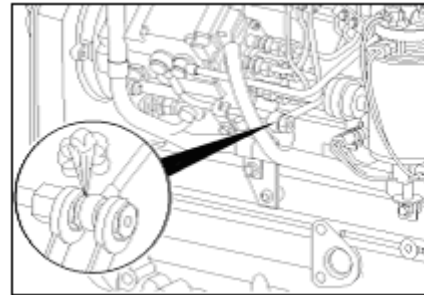


If air continues to bubble out of the system for several minutes, then an air leak is present.

NOTE: An often overlooked source from which air can enter the fuel system is between the inlet of the fuel transfer pump and the suction tube in the tank. Fuel tanks that have the outlet fitting at the top will have a suction tube that extends to the bottom of the tank. Cracks or pin holes in the weld that join the tube to the fitting can let air enter the fuel system.


Also, check to make sure all the fittings from the fuel supply line on the tank to the inlet of the fuel transfer pump are tight.

Use a sight glass at the fuel lift pump inlet to check for air in the fuel supply lines.

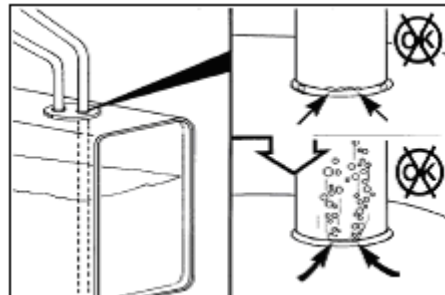

Air in Fuel (Cont)

NOTE: Since the fuel pump provides a positive pressure through the fuel filter and supply line to the fuel injection pump, loose connections or defective seals should show as a fuel leak, not as an air leak.

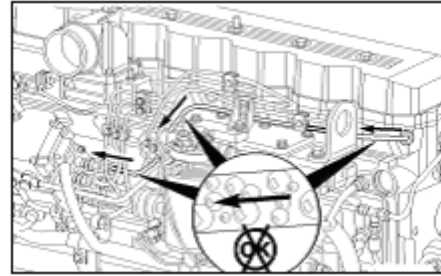

NOTE: A stuck-open injector can also blow combustion gas back into the pump and cause air to be present in the overflow.

If the engine seems to be misfiring or running rough, break all the injector supply lines loose at the pump end.

Crank the engine, and observe the lines.


If combustion gas seems to be blowing back through the line, the injector is stuck open.

Remove the injector.


Take the engine to an Authorized Cummins Repair Facility/Dealer Location for testing.

Torque Value: 24 N•m [212 in-lb]

NOTE: Use two wrenches when loosening the lines at the fuel pump: One to hold the delivery valve and one to loosen the fuel line.

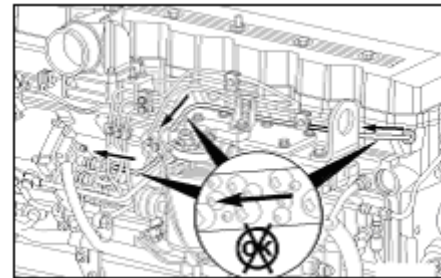


Disconnect the fuel line from the outlet of the fuel filter.

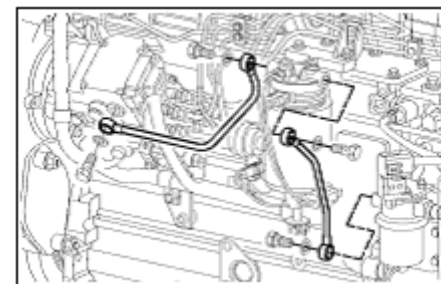


Air in Fuel (Cont)

Attach a preferably clear hose to the outlet of the fuel filter. (Do not use pressure test fitting.)

Place a pressure gauge on the inlet side of the fuel filter and a vacuum gauge on the inlet side to the transfer pump.

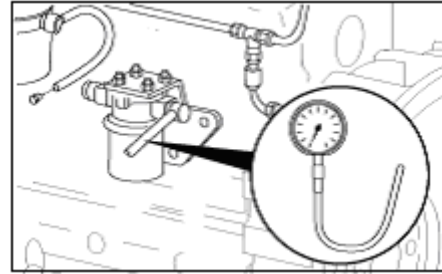

Insert a hose into an empty 3.8-liter [1-gal] container.

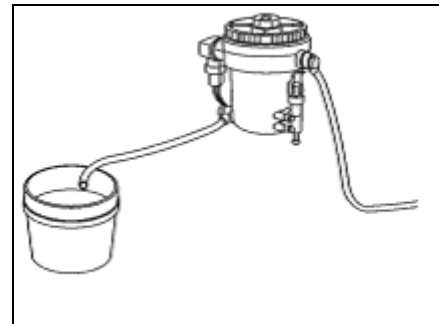


Operate the fuel lift pump by bumping the starter. (The lift pump should run for 25 to 30 seconds.)

Check for bubbles in fuel.

Record filter inlet pressure and transfer pump inlet restriction.

If filter inlet pressure is greater than 34.8 kPa [5 psi], the filter element must be replaced. Repeat test.


If inlet restriction is greater than 152.4 mm Hg [6 in Hg] or 155.1 mm Hg [3 psi], then excessive restriction exists between fuel in the tank and the transfer pump, which must be repaired (e.g., fuel line or tank module). Repeat test.

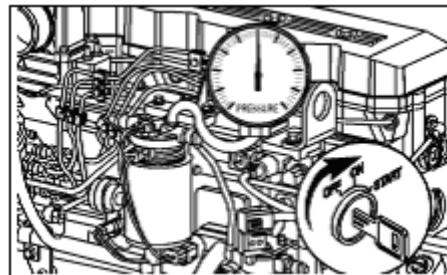

Air in Fuel (Cont)


If bubbles are present, check for air leaks in the fuel supply circuit.

Measure the amount of fuel in the container. If more than 1.33 liters [45 fl oz] are collected and the fuel is bubble-free, then it is unlikely the low-pressure fuel system is the cause of engine operational problems.

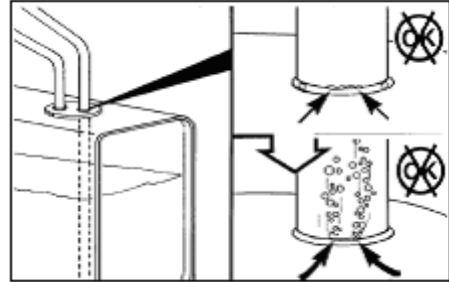

Reconnect the lift pump that is retaining the fuel filter pressure connections.

Running engine at high idle, the filter inlet pressure should be greater than 42.3 kPa [6 psi]; otherwise, there is a fuel lift pump malfunction.

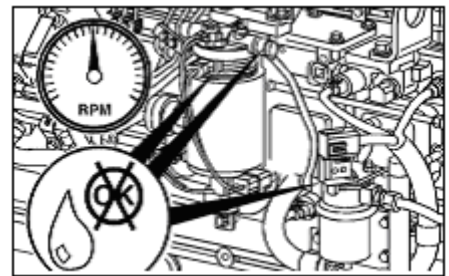


If the fuel transfer pump does not run, check electrical circuits, and verify voltage is present at lift pump connector.

NOTE: When an engine is not running, with switch on, the lift pump will run less than 2 seconds (varies with ECM calibration); with starter bump, about 25 to 30 seconds.

If voltage is present, replace fuel transfer pump.

Resistance measurement across the transfer pump terminals can be made for confirmation of pump malfunction.

Resistance greater than 200 ohms or less than 0.2 ohm does confirm an electrical fault when voltage is present but the fuel pump is not running.

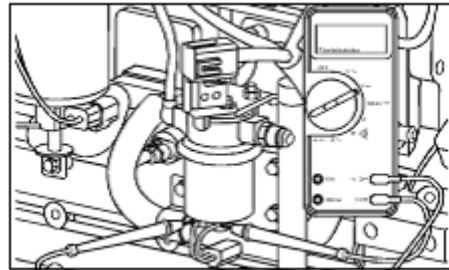


Measure Fuel Drain Line Restriction

Refer to Fuel Drain Line Restriction (41-006-012) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.


Measure

Remove the fuel drain line from the fitting at the injection pump.

Install the 0 to 207 kPa [0 to 30 psi] pressure gauge.

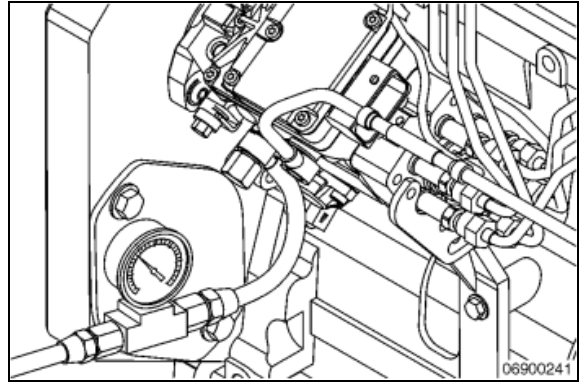


Operate the engine at rated speed and no load.

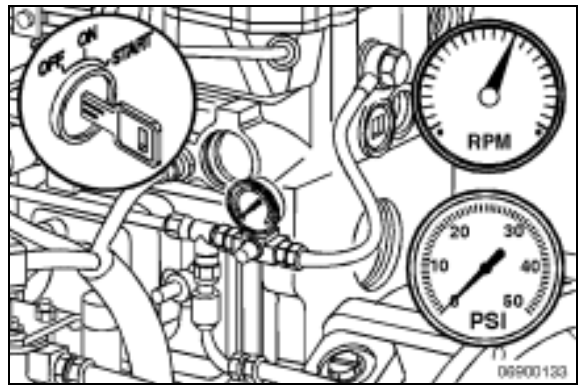

Observe the reading on the pressure gauge.

Maximum Fuel Drain Line Restriction: 69 kPa [10 psi]

If the drain line pressure is out of specification, check for bends or kinks in the drain lines.

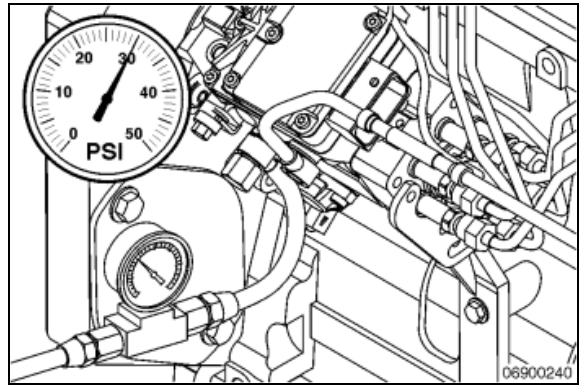


Fuel Drain Lines Removal/Installation

Refer to Fuel Drain Lines (41-006-013) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare


Remove

Remove, clean, and inspect the fuel drain lines for reuse. Refer to Fuel Drain Lines (53-006-013) in ISB and QSB5.9 Base Engine Troubleshooting and Repair Manual, Bulletin Number 3666193.

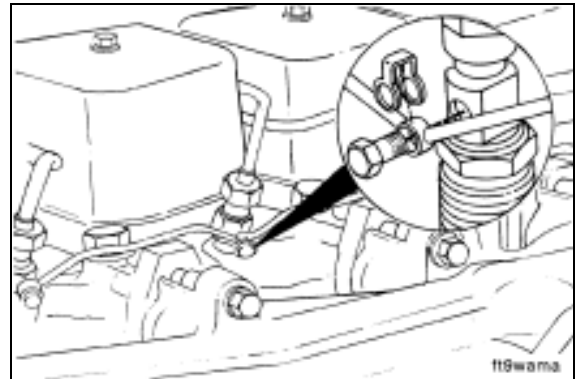


Remove

Remove the banjo fitting capscrews and washers.

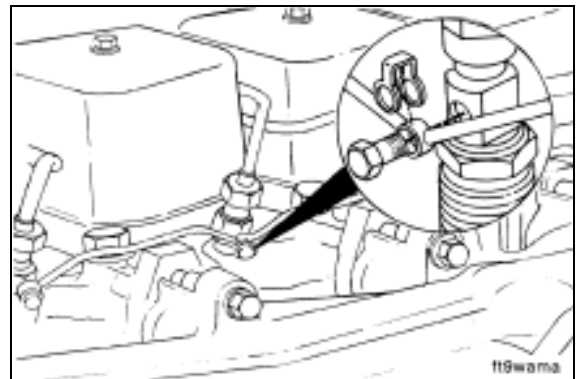

Fuel Drain Lines Removal/Installation (Cont)


Remove the banjo capscrew and sealing washers at the fuel filter head.

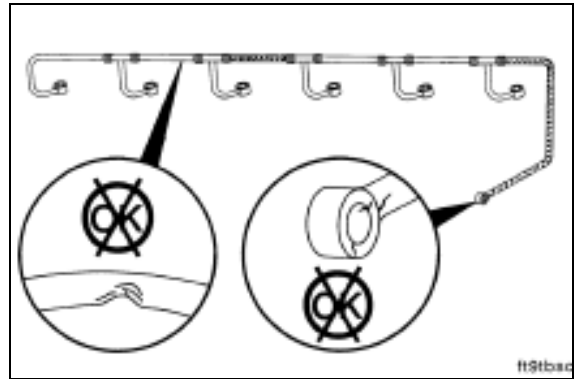

Clean



WARNING
When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.

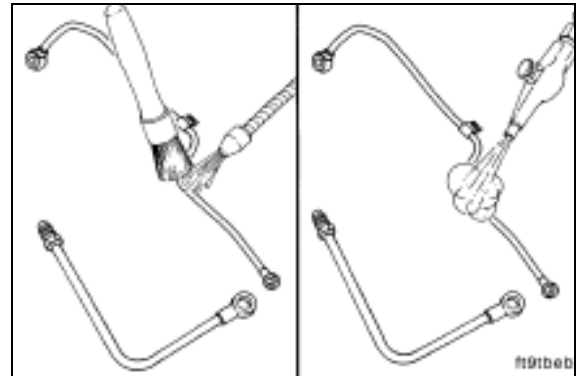

WARNING
Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Wash the low-pressure fuel lines in solvent.

Dry the fuel lines with compressed air.


Inspect for Reuse



Inspect the fuel drain lines for cracks and other damage.

Inspect the fuel drain manifold banjo connections.

NOTE: The banjo connection seals must be discarded when removed.

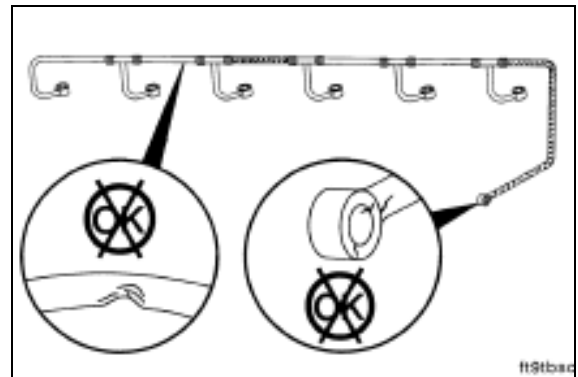


Install

Install the banjo capscrew and sealing washers at the fuel filter head.


Install the banjo fitting capscrews and washers.

Torque Value: 9 N•m [80 in-lb]

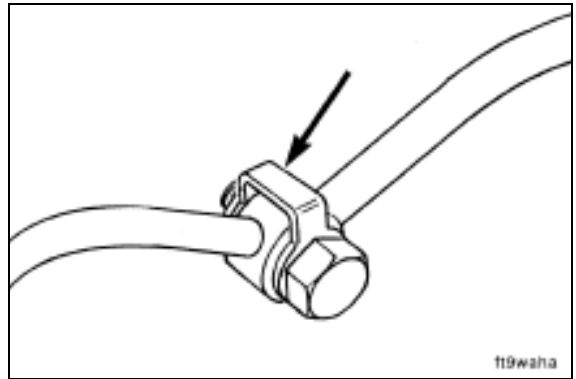

Install

Install the fuel drain lines. Refer to Fuel Drain Lines (53-006-013) in ISB and QSB5.9 Base Engine Troubleshooting and Repair Manual, Bulletin Number 3666193.

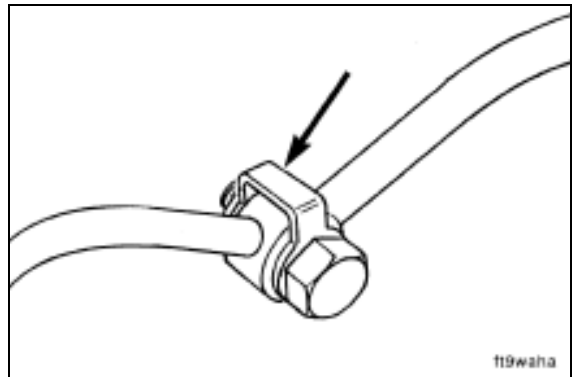


Follow-Up

Fuel Filter Adapter Removal/Installation

Refer to Fuel Filter (Spin-On Type) (41-006-015-tr) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

- Clean debris
- Remove fuel filters.

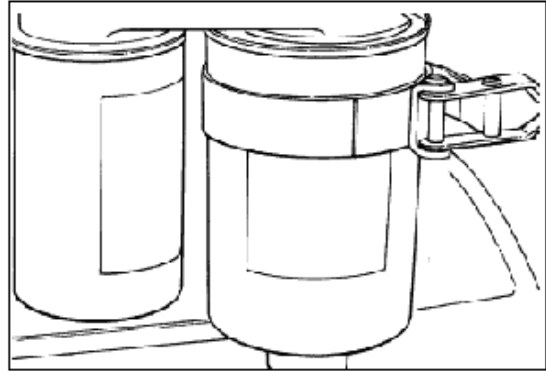


Remove

- Remove the retaining nut, filter head adapter, and sealing washers.

Install in reverse order of removal.

Torque Value: 32 N•m [24 ft-lb]

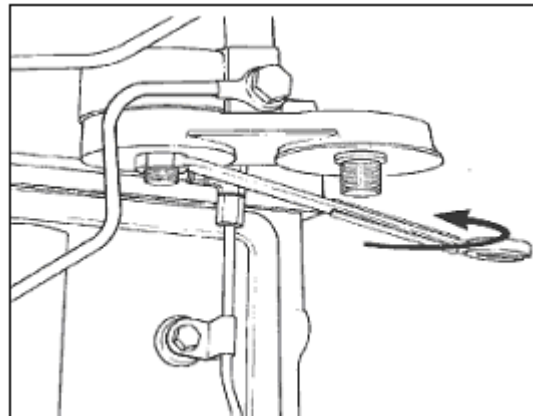

Install


Follow-Up

Measure Fuel Inlet Restriction

Prepare


Measure

Install a fitting at the transfer pump fuel inlet
Install a vacuum gauge that has a range of at least 0 to 508 mm Hg [0 to 20 in Hg].

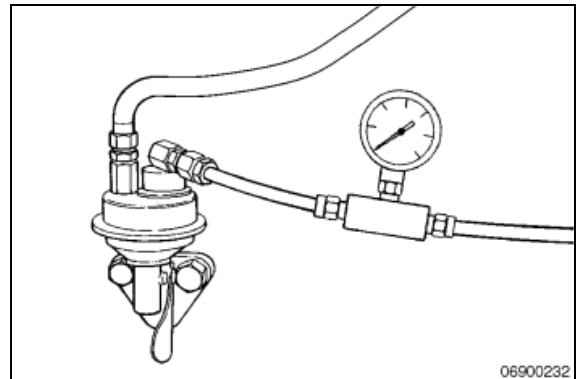

Start the engine, and run at low or high idle.


Maximum Allowable Inlet Restriction at Low/High Idle: 101.6 mm-hg [4.0 in-hg]

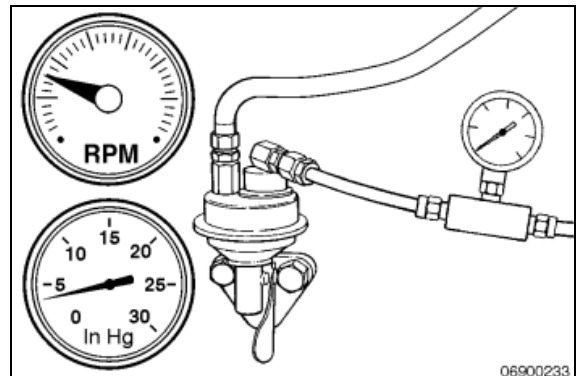

Measure Fuel Inlet Restriction (Cont)

If the fuel inlet restriction is too high, check to make sure that the OEM lines from the tank are sized properly, there are no kinks or bends in the lines, and the lines are not clogged.

Make sure that there are no clogged fuel strainers or malfunctioning check valves.

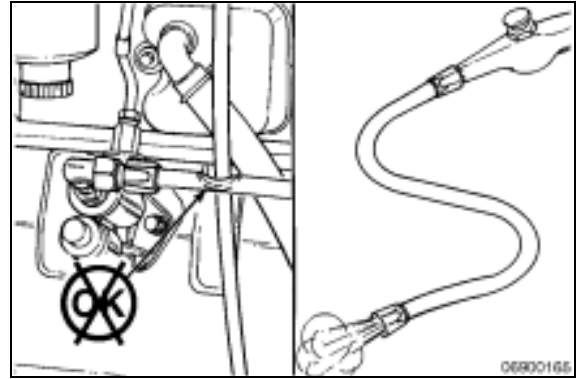

Follow-Up

Fuel Drain Manifold Removal/Installation

Refer to Fuel Manifold (Drain) (41-006-021-tr) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare



Inline Pumps

NOTE: Use new seals and sealing washers.



Assemble the drain line and drain manifold in the reverse order of removal.

Torque Values:

- (Banjo Fitting Screw) 15 N•m [133 in-lb]
- (Banjo Fitting) 9 N•m [80 in-lb]
- (Bracket Capscrew) 24 N•m [18 ft-lb]

Remove Rotary Pumps



Remove the capscrew from the hold-down clamp.

Remove the banjo fitting screws and washers.

Disconnect the drain line fitting from the injection pump.


Remove Inline Pumps



Remove the drain line banjo capscrew from the fuel filter head.

Remove the capscrew from the bracket on the intake cover.

Remove the banjo capscrews from the injectors.

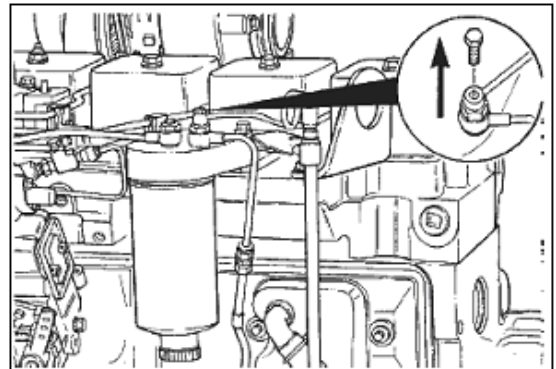

Fuel Drain Manifold Removal/Installation (Cont)

Install Rotary Pumps

NOTE: Use new seals and sealing washers.

Assemble the drain line and fuel drain manifold in the reverse order of removal.



Torque Values:

- (Banjo Fitting Screw) 15 N•m [133 in-lb]
- (Banjo Fitting) 9 N•m [80 in-lb]
- (Clamp Screw) 24 N•m [18 ft-lb]

Install Inline Pumps

NOTE: Use new seals and sealing washers.

Assemble the drain line and drain manifold in the reverse order of removal.



Torque Values:

- (Banjo Fitting Screw) 15 N•m [133 in-lb]
- (Banjo Fitting) 9 N•m [80 in-lb]
- (Clamp Screw) 24 N•m [18 ft-lb]

Follow-Up

Low Pressure Fuel Supply Lines Removal/Installation

Refer to Fuel Supply Lines (41-006-024) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare



Low Pressure Fuel Line

Thoroughly clean all fittings and components before removal. Make sure that the debris, water, steam, or cleaning solution does not reach the inside of the fuel system.

Remove [Diaphragm Style Lift Pump]



Disconnect the fuel line from the lift pump and filter head.

Use two wrenches to disconnect the line from the lift pump.

Remove [Piston Style Lift Pump]

Disconnect the fuel line from the lift pump and filter head.

Use two wrenches to disconnect the line from the lift pump.

Install [Diaphragm Style Lift Pump]



Install the fuel line to the lift pump and filter head. Use two wrenches to tighten the connection to the lift pump.



Torque Value: 24 N•m [18 ft-lb]

NOTE: Do not over-tighten the connection. Fuel leaks can result from over-tightening.

Low Pressure Fuel Supply Lines Removal/Installation (Cont)

Install [Piston Style Lift Pump]

Install the fuel line to the lift pump and filter head. Use two wrenches to tighten the connection to the lift pump.

Torque Value: 24 N•m [18 ft-lb]



Injection Pump Supply Line Replacement

Remove the bleed screw banjo fitting.

Remove the supply line (Bosch® injection pump).

NOTE: Replace the seals (1) in the fittings if the line is disassembled.

Remove the supply line (Lucas CAV injection pump). The Lucas CAV pump has two fittings for the supply line.

Replace fitting sealing washers (1), and ferrules (2) each time they are removed.

Torque Value: 32 N•m [24 ft-lb]



NOTE: Replace the seals in the fittings if the line is disassembled.

Engines rated at 2500 rpm and above require additional fuel line support. Install as illustrated.

Torque Value: 24 N•m [18 ft-lb]



Follow-Up

Fuel Injectors Removal/Installation

Prepare

Clean around the injectors.

Disconnect the high-pressure fuel lines. Refer to [High Pressure Injector Supply Lines Removal/Installation](#) in this section.

Disconnect the fuel drain manifold. Refer to [Fuel Drain Manifold Removal/Installation](#) in this section.

Remove




Be careful not to damage the tip of the injector when removing.

Remove the mounting capscrew, washer, and injector.

NOTE: When removing the injector, clean around the injector, and insert a blind plug to prevent dust or dirt from entering the engine.


NOTE: Mark the injectors with tags showing the cylinder number, and keep it in a safe place. If there is no abnormality in the injector, install it in the same position during assembly.

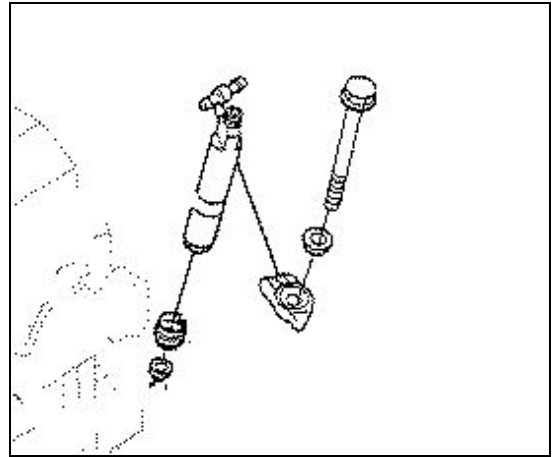

Install

NOTE: Install new injector gasket (Cummins Part No. C6204113880) or replacement injector kit (Cummins Option No. I13002.01).

Coat the injectors with anti-seize compound, Part No. 3824879, before installation.

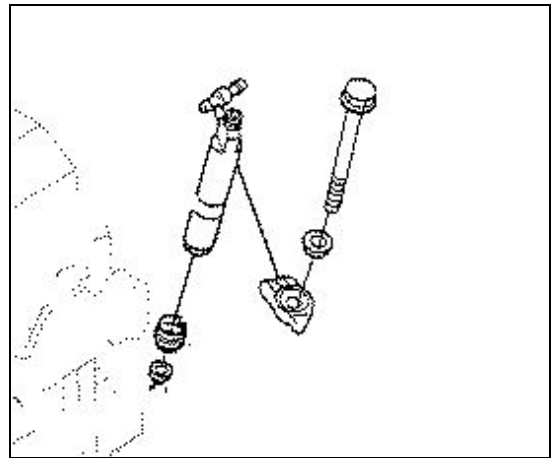

Fuel Injectors Removal/Installation (Cont)



Be careful not to damage the tip of the injector when installing.


NOTE: When installing the injector, clean around the injector, and do not allow dust or dirt to enter the engine.

NOTE: If there is no abnormality in the injector, install it in the same position during assembly.

Install the injector, washer, and mounting capscrew.

Tighten the capscrew.

Torque Value: 44 N•m [33 ft-lb]

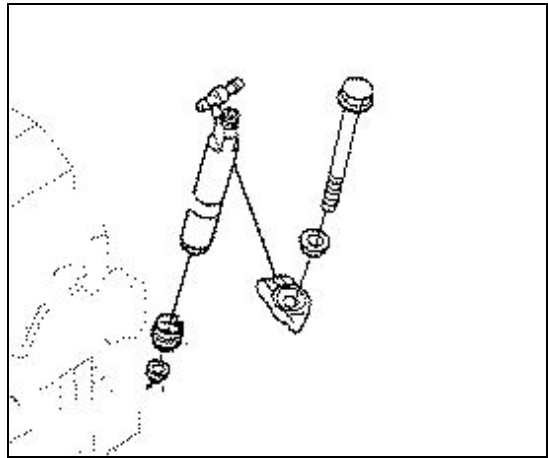

Follow-Up

Reconnect the high-pressure fuel lines. Refer to [High Pressure Injector Supply Lines Removal/Installation](#) in this section.

Reconnect the fuel drain manifold. Refer to [Fuel Drain Manifold Removal/Installation](#) in this section.

Operate the engine.

Check for leaks.

Check function.

Stop the engine.


RTN

Fuel Return Overflow Valve Removal/Installation

Prepare


Remove

Remove, clean, and inspect the fuel return overflow valve for reuse. Refer to Fuel Return Overflow Valve (53-006-044) in ISB and QSB5.9 Base Engine Troubleshooting and Repair Manual, Bulletin Number 3666193.

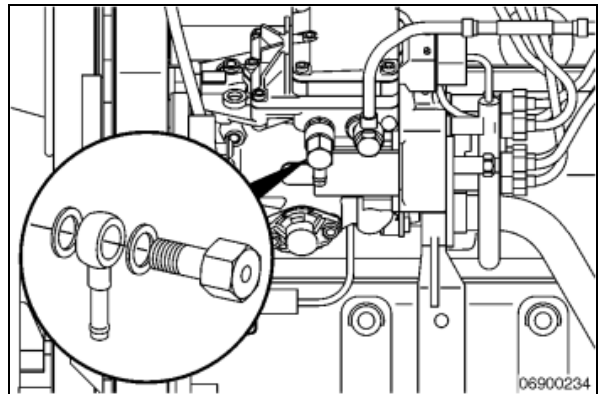

Remove

Remove the fuel return overflow valve and rubber-coated sealing washer.

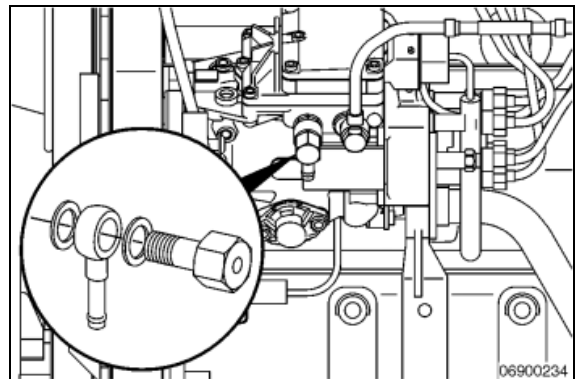

Fuel Return Overflow Valve Removal/Installation (Cont)

Clean



When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.


Thoroughly flush the high-pressure relief valve with cleaning solution.



ts9vaaa

Inspect for Reuse

Use a small screwdriver to verify that the check ball is not sticking in the high-pressure relief valve assembly and that the spring is not broken.

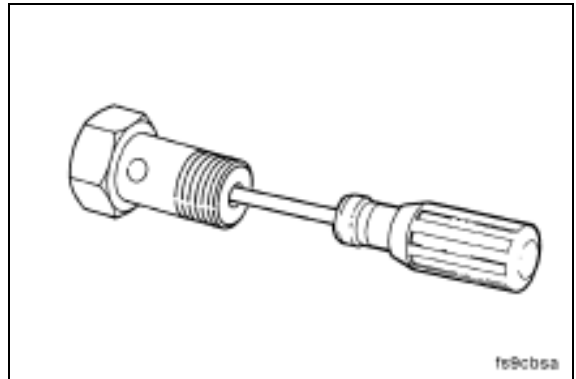


ts9cb5a

Install

Install new rubber-coated sealing washers and fuel return overflow valve.

NOTE: Use two wrenches when installing the overflow valve.

Torque Value: 24 N•m [18 ft-lb]

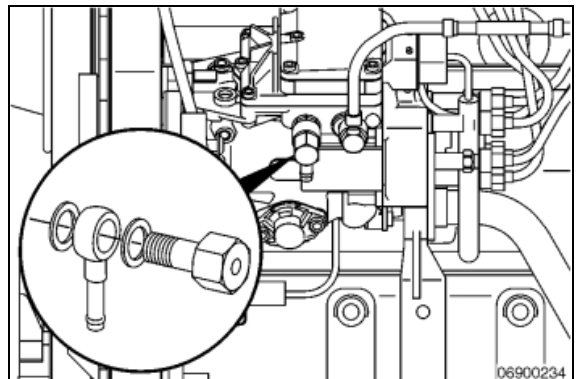


06900234

Fuel Return Overflow Valve Removal/Installation (Cont)

Install

Install the fuel return overflow valve. Refer to Fuel Return Overflow Valve (53-006-044) in ISB and QSB5.9 Base Engine Troubleshooting and Repair Manual, Bulletin Number 3666193.

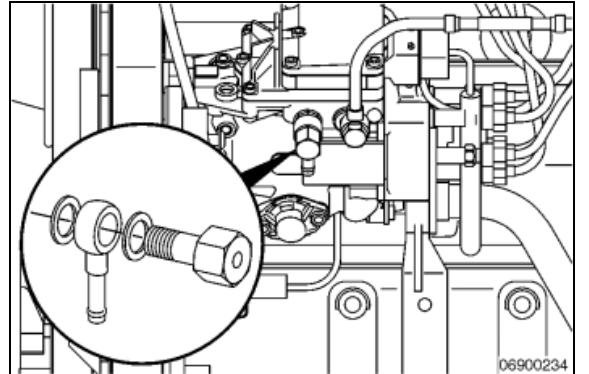

Follow-Up

High Pressure Injector Supply Lines Removal/Installation

Refer to Injector Supply Lines (High Pressure) (41-006-051) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

Clean all debris from around the fittings.



Remove Rotary Pumps

Disconnect the fuel line(s) from the injector.

NOTE: If individual lines are to be replaced, remove the support clamp from the set of lines containing the line to be replaced.

Disconnect the fuel line(s) from the fuel pump. Install protective covers onto the injectors and delivery valves to prevent entry of dirt into the system.



Remove Inline Pumps

Disconnect the line(s) from the injector(s).

NOTE: If individual lines are to be replaced, remove the support clamp from the set of lines containing the line to be removed.

Disconnect the line(s) from the fuel pump.



High Pressure Injector Supply Lines Removal/Installation (Cont)

Install



Install the support clamp in the original position and, to prevent damage from high-frequency vibration, make sure the lines have not been bent or do not contact each other or another component.



To prevent damage to the fuel lines, they must be connected to the injectors and fuel injection pump in a free state without forcing the connecting nuts. The fuel lines are correctly sized for each application. Bending the lines is not acceptable and can cause fuel leaks.

Install Rotary Pumps

Install the fuel lines in reverse order of removal.

Torque Values:

- Line Fittings: 24 N•m [18 ft-lb]
- Support Clamp: 6 N•m [53 in-lb]
- Support Bracket: 24 N•m [18 ft-lb]



High Pressure Injector Supply Lines Removal/Installation (Cont)

Install Inline Pumps

Install the lines in reverse order of removal.

Torque Values:

- **Line Fittings: 24 N•m [18 ft-lb]**
- **Support Clamp: 6 N•m [53 in-lb]**
- **Support Bracket: 24 N•m [18 ft-lb]**

NOTE: If removed, reinstall the support clamp in the original position, and make sure the lines do not contact each other or another component. Install a protective cover on the injectors and fuel delivery valves to prevent the entry of dirt into the system.



Follow-Up

Air Leaks, Air Intake and Exhaust Systems Checks

Prepare

Initial Check




Engine intake air must be filtered to prevent dirt and debris from entering the engine. If intake air piping is damaged or loose, unfiltered air will enter the engine and cause premature wear.

Inspect the intake air piping for cracked hoses, damage, or loose clamps.

Replace damaged pipes, and tighten loose clamps, as necessary, to make sure the air intake system does not leak.


Torque Value: 8 N•m [71 in-lb]

Check for corrosion of the intake system piping under the clamps and hoses. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean, as required.

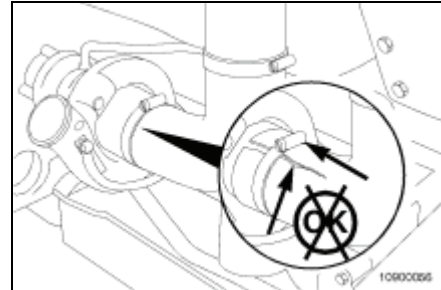

Operate the engine at high idle, and use a solution of soapy water to spot intake air leaks.

If an air leak exists, the soap bubbles will be drawn in with the air.

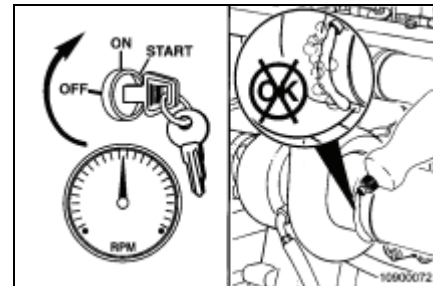


Air Leaks, Air Intake and Exhaust Systems Checks (Cont)

Operate the engine at full throttle and rated rpm with maximum load.



Listen for a high-pitched whistling noise from the turbocharger, nearby piping, and connections.

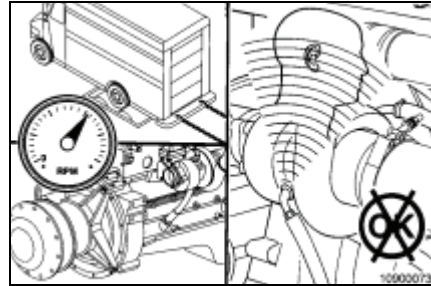


The noise can be caused by an air leak from the turbocharger-to-discharge elbow connection.



Inspect for damage. Tighten loose clamps.



Torque Value: 8 N•m [71 in-lb]

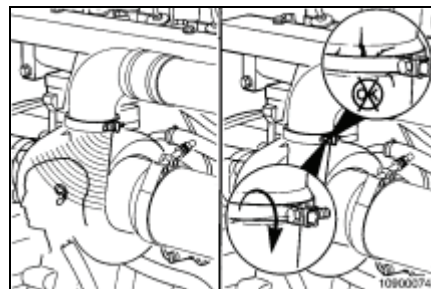

Any charge air cooler tubing or connecting hoses.




Inspect the hose and tubing for damage.



Tighten the hose clamps.


Refer to the manufacturer's specifications for the correct torque value.

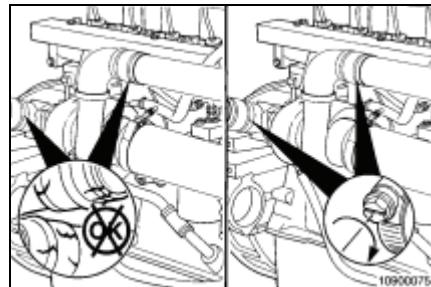

Turbocharger-to-exhaust-manifold mounting gasket.



Replace the gasket. Refer to [Procedure 010-033](#).

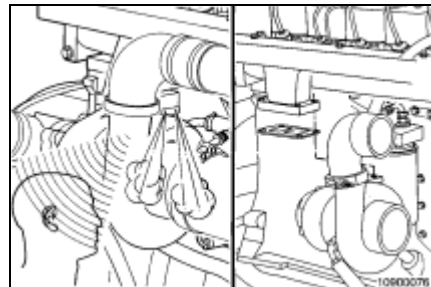


Air Leaks, Air Intake and Exhaust Systems Checks (Cont)

Operate the engine at full throttle and rated rpm with maximum load.


Listen again for leaks.

Replace the turbocharger if the air piping is not damaged and the noise can still be heard. Refer to [Procedure 010-033](#).

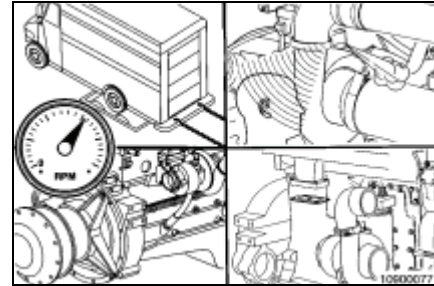


Loose connections or cracks in the suction side of the intake pipe and after the air filter can allow debris to be ingested by the engine, causing rapid wear in the cylinders.

Leaks at the intake manifold, unsealed bolt holes, or manifold cover gasket can also allow dust and dirt to be ingested into naturally aspirated engines.

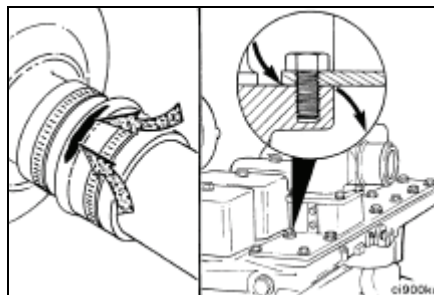

Debris drawn into the air suction side can damage the compressor blades, causing an imbalance resulting in bearing failure.

To verify a bearing failure or damaged compressor, remove the intake and exhaust piping, and check for contact. The rotor assembly must rotate freely and should not be damaged. Measurement of axial and radial clearance is described in this section.

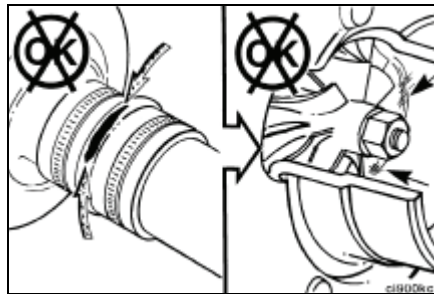


Excessive smoke and low power from a turbocharged engine can be caused by pressurized air leaking from loose connections or cracks in the crossover tube or intake manifold. This can also cause a noise problem.



Air Leaks, Air Intake and Exhaust Systems Checks (Cont)

In addition to the inspection for cracks and loose fittings, liquid soap can be applied to the charge air cooler, connections, and the manifold cover sealing surfaces to find the leaks. The leaks will create bubbles that are easier to detect. Measurement of manifold pressure is described in this section.

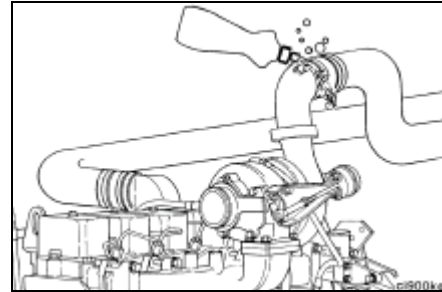

Follow-Up

Air Intake Restriction Indicator Removal/Installation

A mechanical restriction indicator is available to indicate excessive air restriction through a dry-type air cleaner. This instrument is mounted on the air cleaner outlet tube.


Refer to Air Filter Assembly Drawing in Section 13.

Change the filter element when the red indicator flag (2) is at the raised position in the window (1). See Air Cleaner Element Removal/Installation this section.

NOTE: Do not remove the felt washer from the indicator. The felt washer absorbs moisture.

After the air cleaner has been serviced, push the button (3) to reset the service indicator. If the indicator does not retract to the service position with new air cleaner element installed, the service indicator needs to be replaced.

Remove service indicator from Air Cleaner Element piping. Apply Teflon sealant to the threads on the indicator. Install new indicator on Intake pipe.

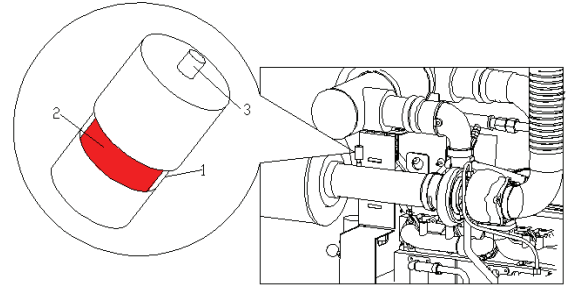

Follow-Up

Run engine to determine if new indicator is functioning.

Intake Air Cleaner Element Removal/Installation




Never operate the engine without an air cleaner. Unfiltered foreign objects could cause engine damage.

Check Air Restriction Indicator. Replace the air cleaner element when the restriction reaches the maximum allowable limit, or clean according to the manufacturer's recommendations. See [Air Cleaner Restriction Removal/Installation](#) this section.

Turbocharged engines must be operated at rated RPM and full load to check maximum intake air restriction.

Maximum intake air restriction is 762 mm H₂O [30.0 in H₂O] for turbocharged engines.

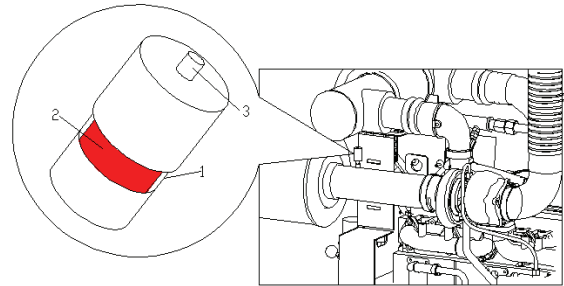

Loosen air cleaner clamp.


Remove the air cleaner element.

Clean and Inspect for Reuse


Inspect the air cleaner for cuts, cracks, holes, or excessive debris.

Clean or replace if necessary.

See [Air Intake System Specifications](#) in Section 10 for correct Cummins Fire Power replacement part number.

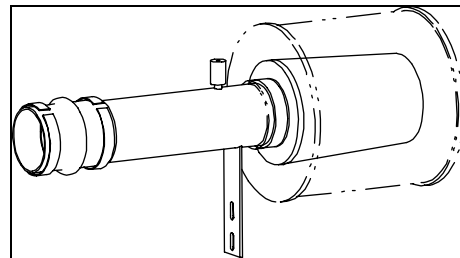

Check for corrosion of the intake system piping under the clamp. Corrosion can allow corrosive products and dirt to enter the intake system.

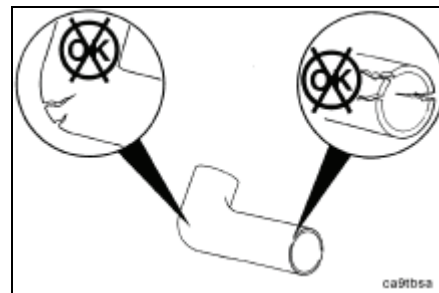

Intake Air Cleaner Element Removal/Installation (Cont)

Re-run engine at rated RPM at full load to check maximum intake restriction.

Maximum intake air restriction is 762 mm H₂O
[30.0 in H₂O] for turbocharged engines.

Follow-Up


Air Crossover Pipe Removal/Installation

Refer to Air Crossover (100-010-019) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

Remove


Loosen the hose clamps, and position the hose so the crossover tube can be removed.

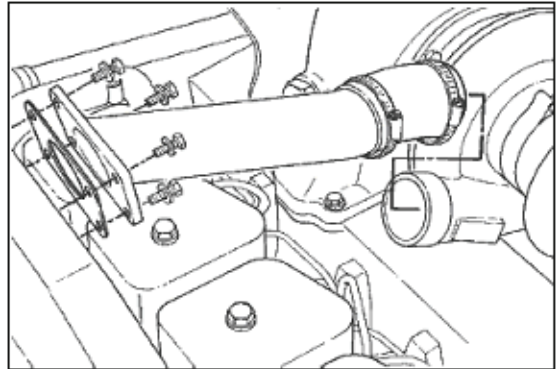

Install

Use new hose and clamps as required to install the crossover tube.

Torque Value: 8 N•m [71 in-lb]

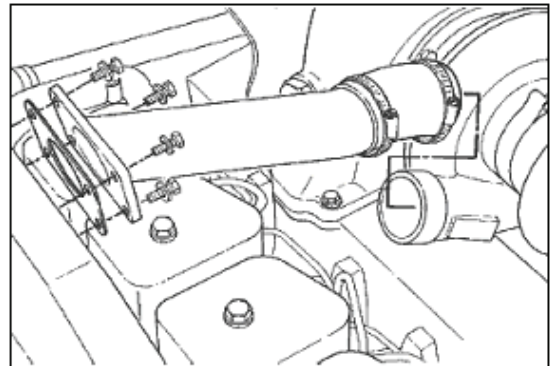

Follow-Up

Air Intake Manifold Removal/Installation

Refer to Air Intake Manifold (41-010-023) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.


Prepare

Remove the high-pressure fuel lines
Disconnect the cold starting aid, if used.
Remove the air crossover tube.

Remove

Remove the manifold cover and gasket.


NOTE: Plug the opening of the air intake with a clean shop rag to prevent foreign matter from entering combustion chamber.

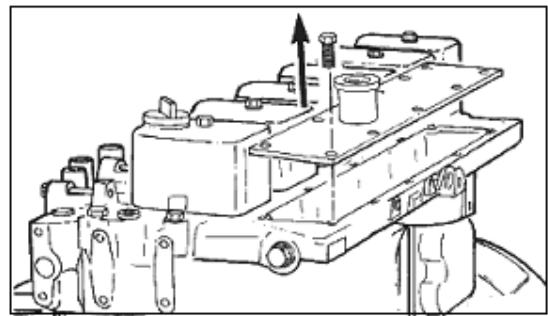

Clean

Clean the sealing surface.


NOTE: Keep the gasket material and any other material out of the air intake.

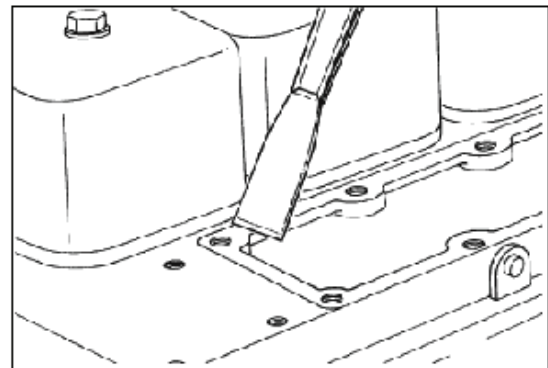

Air Intake Manifold Removal/Installation (Cont)


Install

NOTE: The holes shown in the illustration are drilled through and must be sealed by applying liquid Teflon™ sealant to the capscrews.

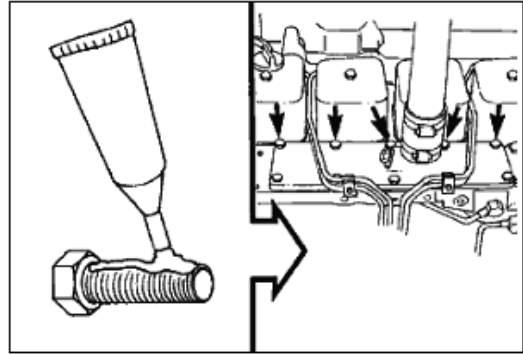


Install the cover and a new gasket.

Torque Value: 24 N•m [18 ft-lb]

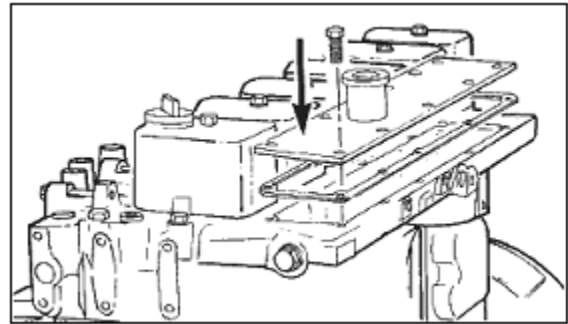

Assemble the intake piping, and connect the cold starting aid if used.

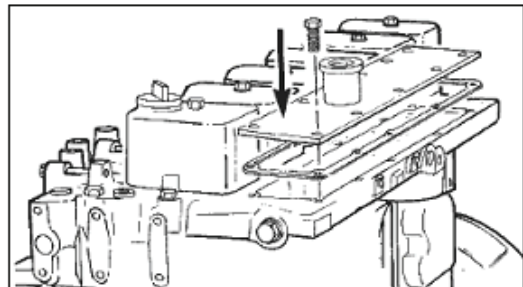

Air Intake Manifold Removal/Installation (Cont)


Pressure Test

Install the pressure gauge to the fitting in the turbocharger outlet.

Install another pressure gauge, in the intake manifold.


Operate the engine at rated rpm and load.
Record the readings on the two gauges.

If the differential pressure is greater than 21 kPa [3 psi], check the charge air cooler for plugging.
Clean or replace if necessary.

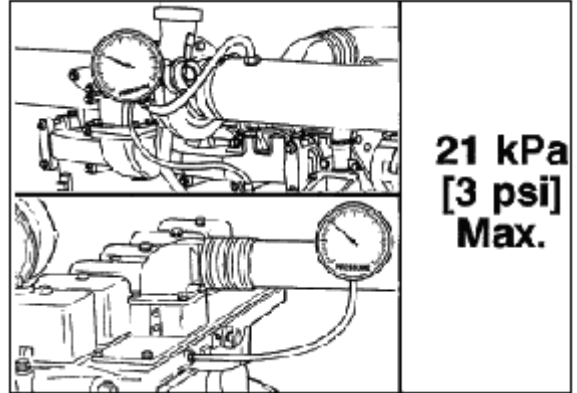


Temperature Differential Test

Install a temperature gauge in the intake manifold.

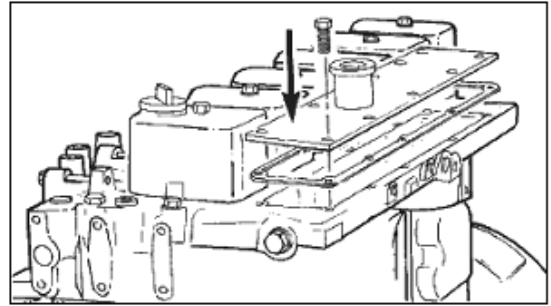

Lock the fan drive in the ON mode to prevent erratic test results.

Operate the engine at rate rpm and load.
Record the intake manifold temperature.

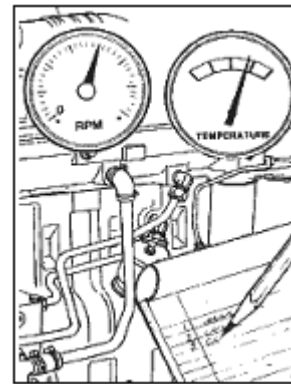

Air Intake Manifold Removal/Installation (Cont)

Measure the ambient temperature.

The maximum temperature differential must not be greater than 25°C [45°F].

If the temperature differential is greater than 25°C [45°F], check the charge air cooler for dirt and debris on the fins, and clean as necessary.

If the problem still exists, check the cooler for internal contamination or plugging.

Vent



Do not mix gasoline, alcohol, or gasohol with diesel fuel. This mixture can cause explosion.

Install and bleed the high-pressure fuel lines.

Follow-Up

Aftercooler Removal/Installation

Refer to Aftercooler (40-010-001-tr) in B3.9, B4.5, and B5.9 Series Engines Troubleshooting and Repair Manual, Bulletin No. 3666087.

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Disconnect the cold starting aid, if used.


Remove the air crossover tube.

Remove the high-pressure fuel lines.

Drain 2 liters [2.1 qt] of coolant.


Remove

Remove the coolant supply tube (1) and the coolant return tube (2).

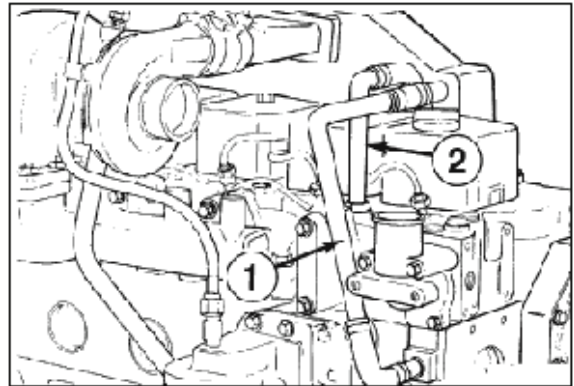


Aftercooler Removal/Installation (Cont)

Remove the high-pressure fuel lines.

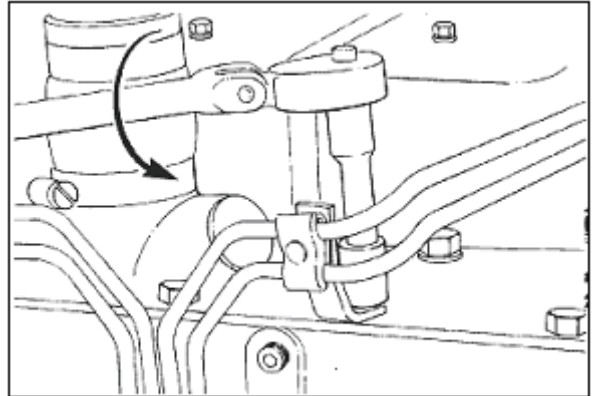

Remove the aftercooler housing and gasket.


Plug the opening with a clean shop rag to prevent foreign material from entering the air intake.

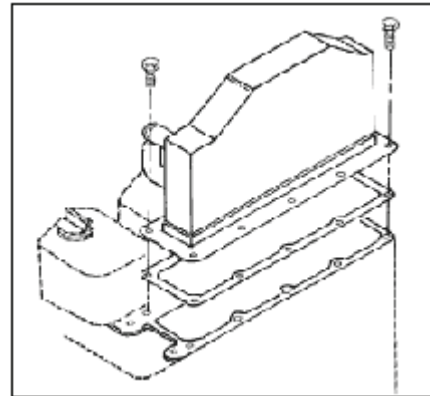

Clean

Clean the sealing surface.

NOTE: Keep the gasket material and any other material out of the air intake.

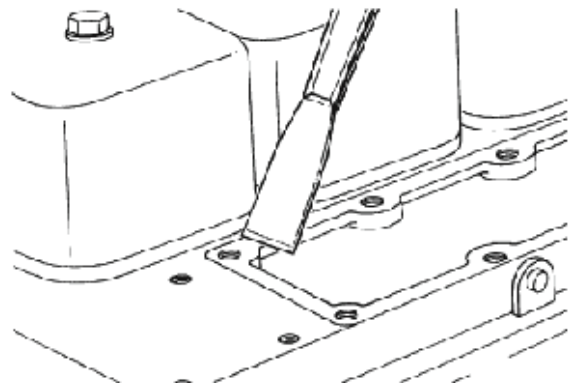


Aftercooler Removal/Installation (Cont)

Install

NOTE: The holes shown in the illustration are drilled through. Apply liquid Teflon™ sealant to the capscrews.


Install the aftercooler housing and a new gasket.

Torque Value: 24 N•m [18 ft-lb]

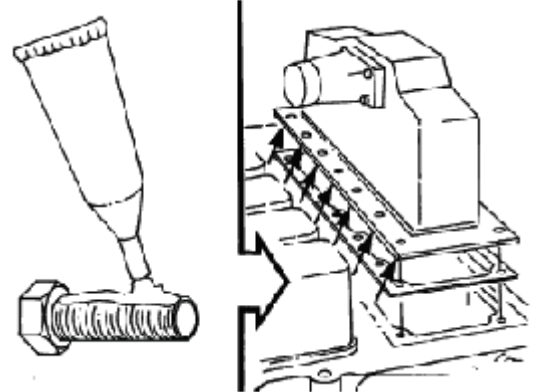

Install the coolant supply tube (1) and coolant return tube (2). Install the air crossover tube (3).

Torque Value: 8 N•m [71 in-lb]

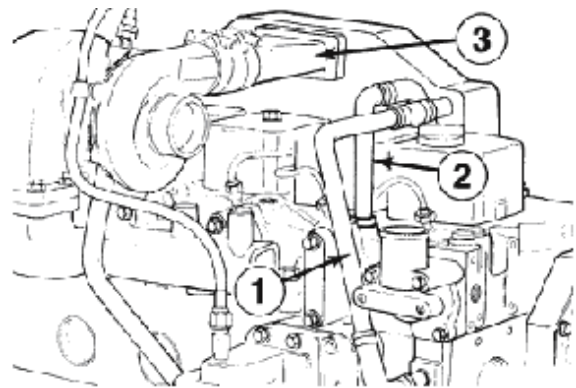

Fill


During filling, air must be vented from the engine cooling passages. Open the engine vent petcock. Make sure to open the petcock on the aftercooler for aftercooled engines. The system must be filled slowly to prevent air locks. Wait 2 to 3 minutes to allow air to be vented; then add coolant to bring the level to the bottom of the radiator filler neck. Failure to do so will cause entrapment of air in cooling system and will cause engine to overheat.

Fill the coolant system with a mixture of 50-percent water and 50-percent ethylene-glycol-type antifreeze.

Aftercooler Removal/Installation (Cont)**Follow-Up**

Charge Air Cooler (CAC) Removal and Installation (for CFP83-F40 only)

If the engine experiences a turbocharger failure or any other occasion where oil or debris is put into the charge air cooler, the charge air cooler must be cleaned or replaced.

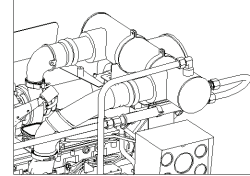

Remove charge air cooler from the engine.

Remove

Refer to Assembly Drawing 8967 and 10903 in Section 13.

Disconnect the CAC Air Outlet Piping Assembly from the CAC.


Disconnect the CAC Air Inlet Piping Assembly from the CAC.

Disconnect the CAC Raw Water Coolant Inlet Piping Assembly from the CAC.

Disconnect the CAC Raw Water Outlet Piping Assembly from the CAC.

Remove the bolts from mounting bracket and remove the cooler assembly.

Remove the two clamps from the cooler assembly.

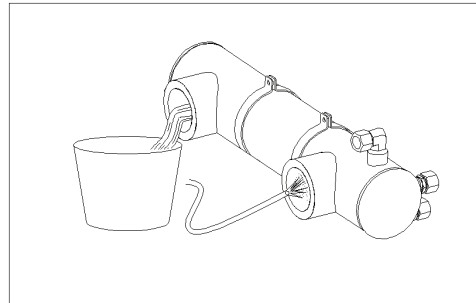

Install

Install two clamps on the cooler assembly
Install the cooler assembly and start the bolts on the mounting bracket.


NOTE: Apply Teflon tape or pipe sealant to the threaded fittings as the raw water piping is reinstalled.

Re-connect the CAC Raw Water Coolant Outlet Piping Assembly to the CAC.

Re-connect the CAC Raw Water Coolant Inlet Piping Assembly to the CAC.

Connect the CAC Air Outlet Piping Assembly to the CAC.

Connect the CAC Air Inlet Piping Assembly to the CAC.

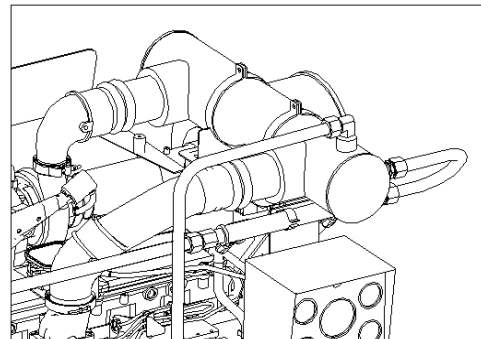

Turbocharger Removal/Installation


Refer to Turbocharger (41-010-033-tr) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare


- Remove the air crossover tube.
- Disconnect the intake and exhaust piping.

Remove

- Remove the capscrews from the oil drain tube.

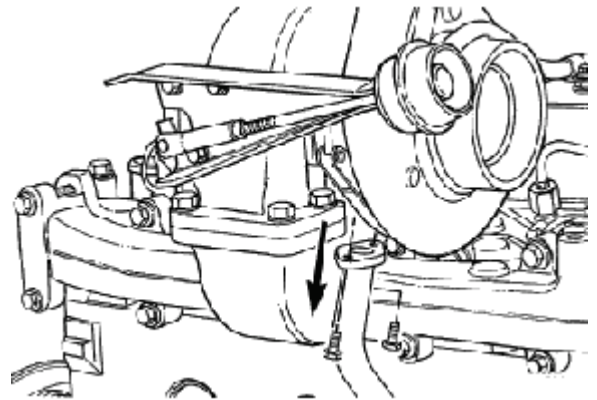


- Remove the oil supply line.

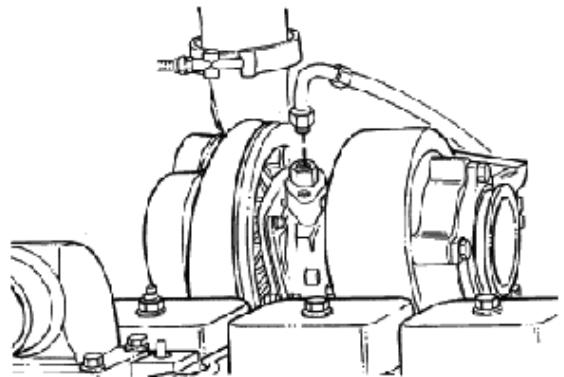


Turbocharger Removal/Installation (Cont)

If equipped with a wastegate turbocharger, remove the intake manifold pressure supply line from the boost capsule.

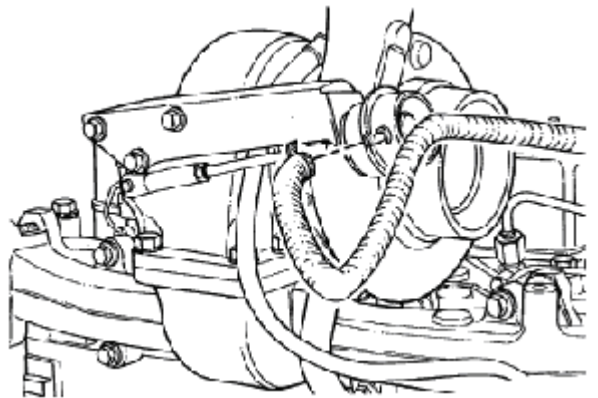


Remove the exhaust clamp, turbocharger, and gasket.

Plug the opening with a clean shop rag to prevent foreign material from entering exhaust system.

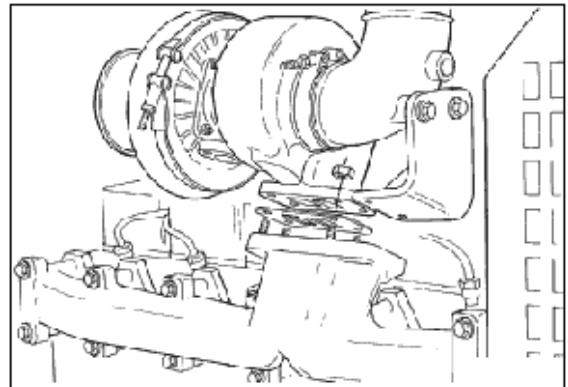

Clean


Clean the sealing surface. Inspect the sealing surface and mounting studs for damage.

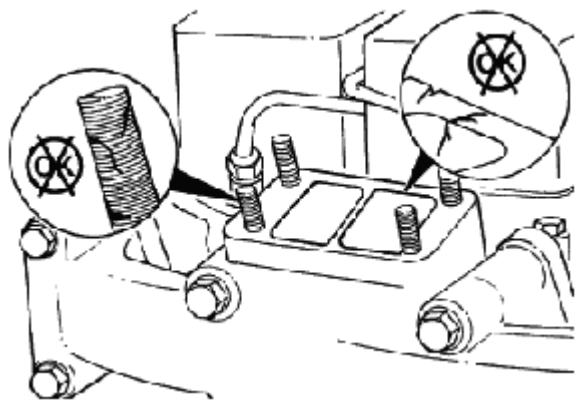


Turbocharger Removal/Installation (Cont)

Install

NOTE: If the turbocharger is not to be immediately replaced, cover the opening to prevent any material from falling into the manifold.

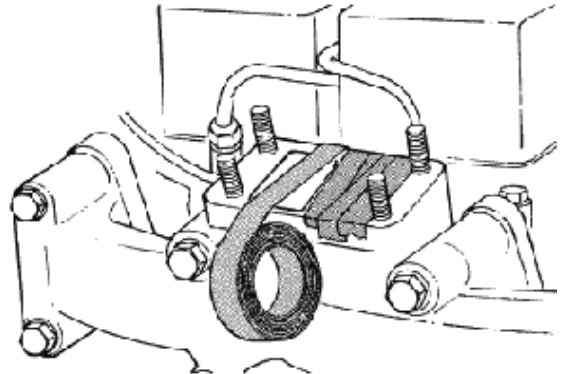


Install a new gasket and apply anti-seize compound to the mounting studs.

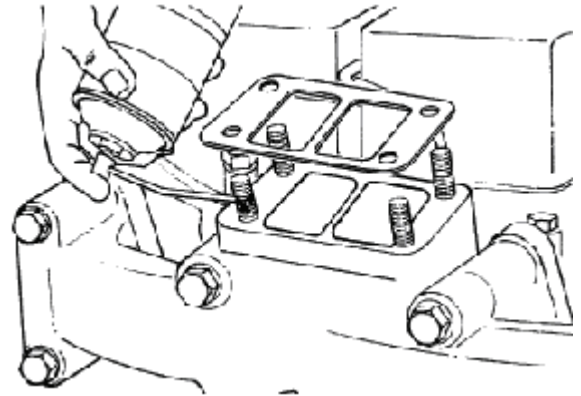

Install the turbocharger and a new gasket.

Torque Value: 43 N•m [32 ft-lb]

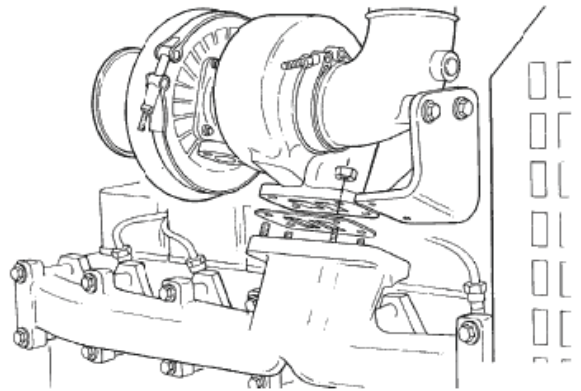


Turbocharger Removal/Installation (Cont)

If required, bend the lockplates back and loosen the turbine housing capscrews.




Position the bearing housing to install the turbocharger drain tube.

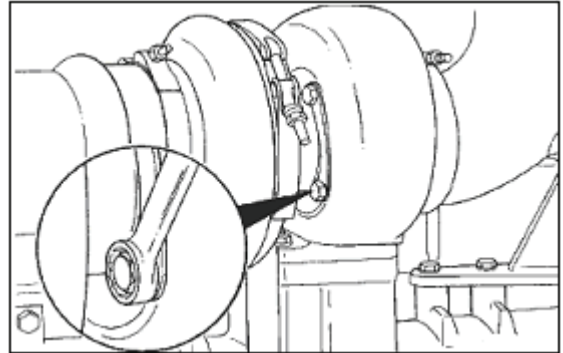

Install the hose and clamps on the turbocharger drain tube loosely. Install the drain tube and gasket on the turbocharger.




Torque Value: 24 N•m [18 ft-lb]

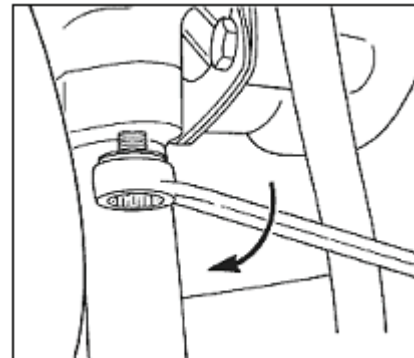

Position the turbocharger drain hose to connect the drain tubes.




Tighten the clamps.

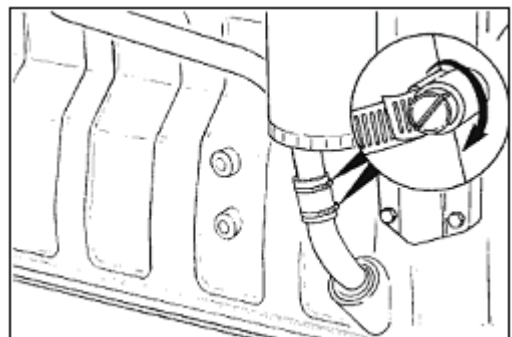

Turbocharger Removal/Installation (Cont)

If loosened, tighten the turbine housing capscrews. Bend the lockplates onto the flats to prevent loosening.

Torque Value: 20 N•m [15 ft-lb]

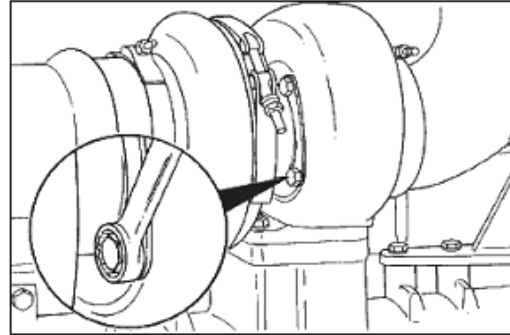

If required, loosen the compressor housing, and position the housing to align with the crossover tube.


Torque Value: 9 N•m [80 in-lb]



Tighten the band clamp.

Tap around the clamp with a plastic hammer and tighten again.


Torque Value: 9 N•m [80 in-lb]

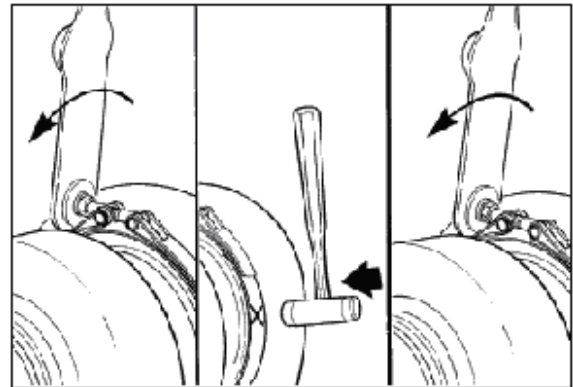

To prevent bearing damage, new turbochargers must be pre-lubricated before start-up.

Pour 50 to 60 cc [3 to 4 oz] of clean lubricating engine oil into the oil supply fitting.

Rotate the turbine wheel to allow the oil to enter the bearing housing.

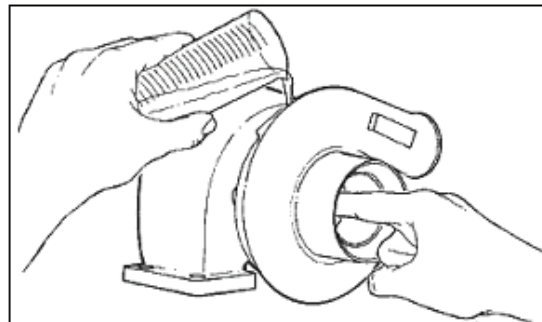

Turbocharger Removal/Installation (Cont)

Install the exhaust outlet connection.

Do not tighten the two mounting capscrews until the band clamp has been tightened.

Torque Values:


- Band Clamp 8 N•m [71 in-lb]
- Capscrews 43 N•m [32 ft-lb]




When installing the oil supply line, be sure the line is not in direct contact with the turbine housing or the line will burn during operation.

Install the oil supply line.

Torque Value: 35 N•m [26 ft-lb]

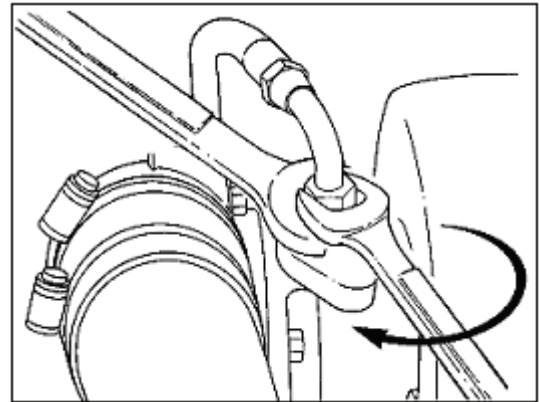


If equipped with a wastegate turbocharger, install the intake manifold pressure supply line from the boost capsule.

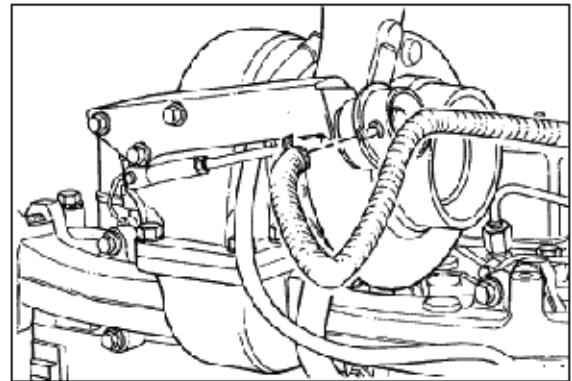

Turbocharger Removal/Installation (Cont)

Test

- Install the air crossover tube.
- Install the air inlet.
- Install the exhaust piping.
- Operate the engine and check for leaks.

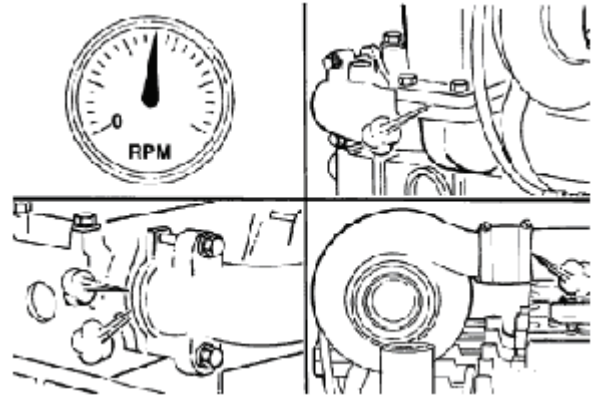


Follow-Up

Turbocharger Axial Clearance Check

Prepare

Axial Clearance Check

Use dial depth gauge, Part Number ST-537.
Push the rotor assembly away from the gauge.
Set the gauge to zero.

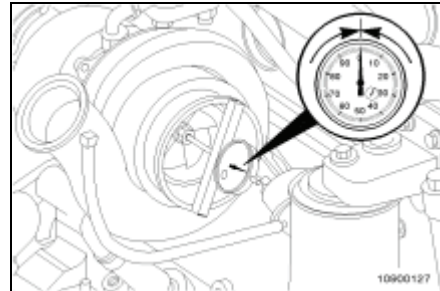


Push the rotor assembly toward the gauge and record the reading.

Axial Clearance

- **Minimum 0.038 mm [0.0015 in]**
- **Maximum 0.093 mm [0.0037 in]**

Replace the turbocharger if the clearance does not meet specifications. See the Remove and Install steps in this procedure.

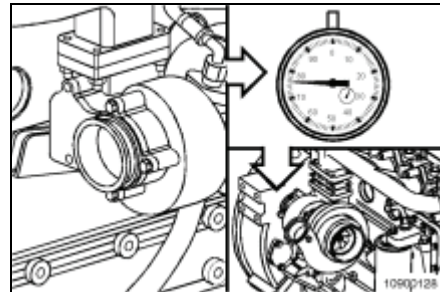

Follow-Up


Turbocharger Oil Drain Line Removal/Installation

Prepare

Remove

Remove the capscrews from the turbocharger oil drain tube.


Pull the drain line out of the drain line boss.

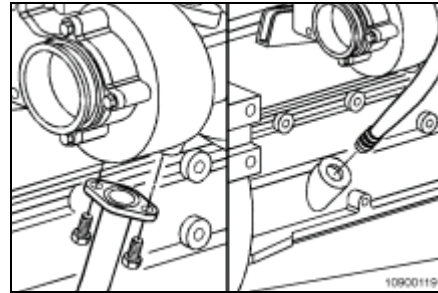

Clean

Clean the gasket sealing surfaces (first frame).

Clean the o-ring seating bore, and make sure it is free of dirt and debris.

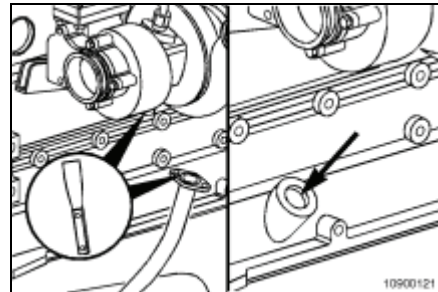


Inspect for Reuse

Inspect line for cracks, wear, and damage.

Inspect the o-ring for fretting and cracking, and replace as necessary.

Check the rubber section of the drain line for deterioration.

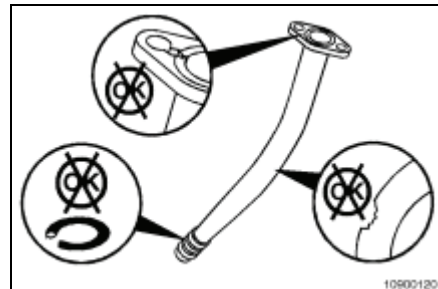

Turbocharger Oil Drain Line Removal/Installation (Cont)


Install

Apply a thin film of oil to the drain line o-rings.

Push the drain line into the drain line boss. Be sure both o-rings are completely seated in the bore.

Install the drain line capscrews with a new gasket.

Torque Value: 24 N•m [18 ft-lb]

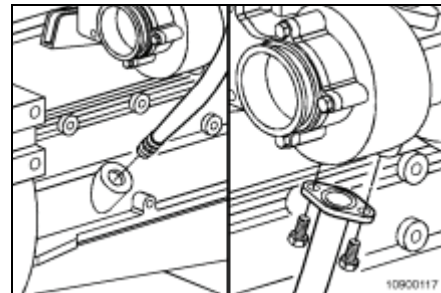

Follow Up

Operate the engine, and check for leaks.



Turbocharger Oil Supply Line Removal/Installation


Prepare

Remove

Remove

Remove the oil supply line from the oil filter head (1).


Remove the oil supply line from the turbocharger bearing housing (2).

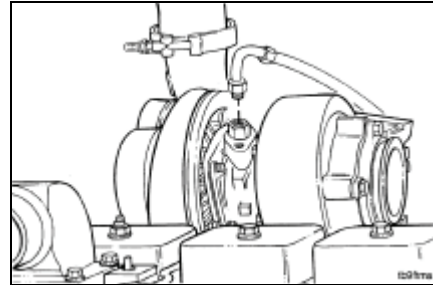

Inspect for Reuse

Inspect the line for cracks, wear, and damage.

Inspect o-rings for cracking and fretting.
Replace as necessary.

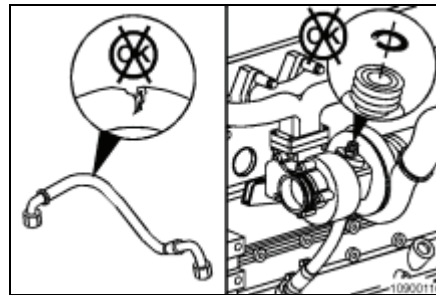

Install


Apply a thin film of oil to the o-ring seals.

Fill the turbocharger oil inlet with clean oil.

Install the oil supply line at both the filter head and the turbo bearing housing.

Tighten the oil supply line to final torque.

Torque Value: 24 N•m [18 ft-lb]

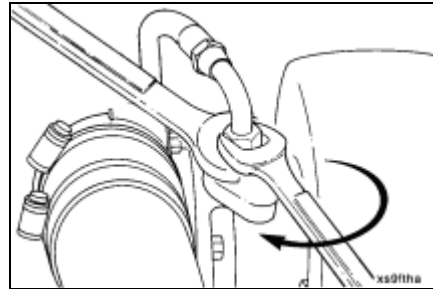

Follow-Up

Turbocharger Radial Bearing Clearance

Prepare

Radial Clearance Check

Use a wire-type feeler gauge to measure the clearance between the compressor wheel and housing.

Gently push the compressor wheel toward the compressor housing and gauge.

Record the clearance.



With the feeler gauge in the same location, gently push the compressor wheel away from the compressor housing and measure the clearance between the compressor wheel and housing.

Subtract the smaller clearance from the larger clearance. This is the radial bearing clearance.

Radial Bearing Clearance

- **Minimum 0.30 mm [0.012 in]**
- **Maximum 0.46 mm [0.018 in]**


Repeat the procedure on the turbine wheel.

Replace the turbocharger if the radial bearing clearance does not meet specifications. See the Remove and Install steps in this procedure.



Inspect the turbocharger compressor intake and discharge for oil.

If oil is present in the compressor intake as well as in the discharge, check upstream in the turbocharger for the source of oil.

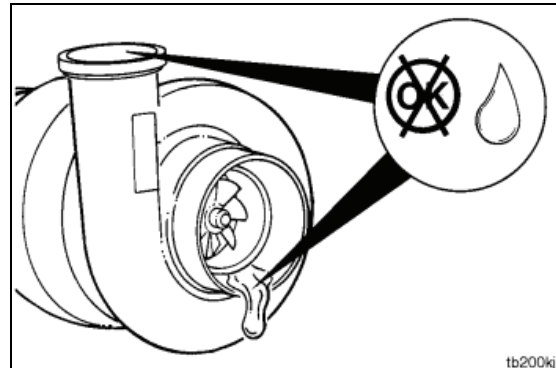


Turbocharger Radial Bearing Clearance (Cont)

If oil is present only in the discharge side, install the air intake and charge air cooler piping. Refer to the OEM service manual.

Check for intake restriction. Refer to Procedure 010-031.

If excessive intake restriction is not found, replace the turbocharger.

NOTE: If the engine experiences a turbocharger failure or any other occasion where oil is put into the charge air system, the charge air system must be inspected and cleaned. Refer to Procedure 010-027.

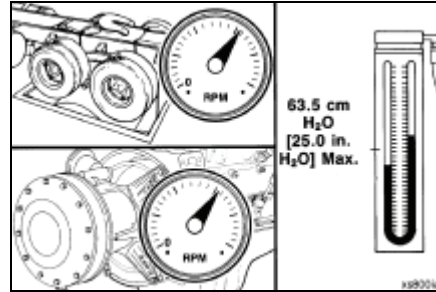


Follow-Up

Turbocharger Wastegate Actuator Removal and Installation

Initial Check

Inspect the integral wastegate actuator hose for cracks or holes.


Replace the hose if damaged.

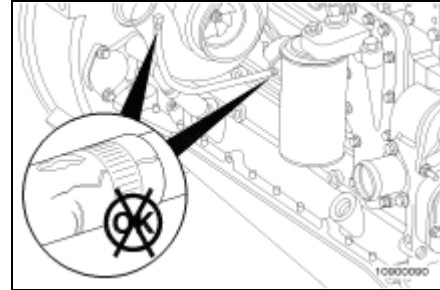

A bent wastegate mounting bracket, actuator rod, or lever can cause improper operation.

Inspect the wastegate mounting bracket, actuator rod, and lever for damage.


If the wastegate mounting bracket, actuator rod, or lever is bent, it must be replaced.

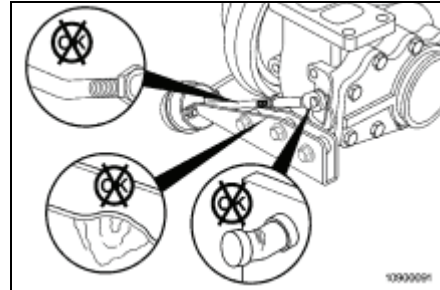

Prepare


Remove

NOTE: In some applications, the turbocharger must be removed in order to remove the wastegate actuator. Refer to [Procedure 010-033](#).

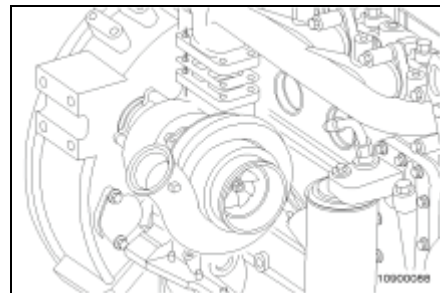


Turbocharger Wastegate Actuator Removal and Installation (Cont)

NOTE: Prior to removal, note position length of the control rod from the boost capsule housing and orientation of the boost capsule hose connector in relation to the mounting bracket.

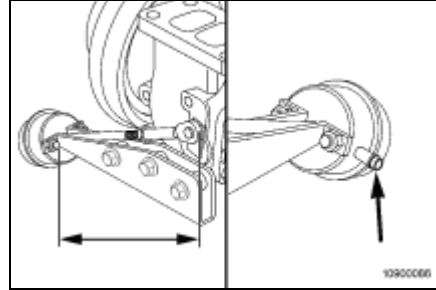

Remove the retaining clip from the control lever.
Disconnect the integral boost line from the wastegate capsule.

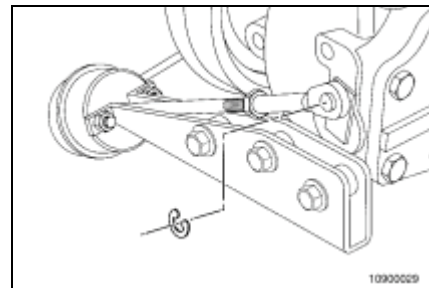


CAUTION

Be careful not to bend the control lever.


Disconnect the boost capsule actuator rod end from the turbocharger wastegate lever. This can be accomplished by slowly applying regulated air pressure to the boost capsule until the control rod is activated.

Disconnect the control rod from the turbocharger wastegate lever pin.

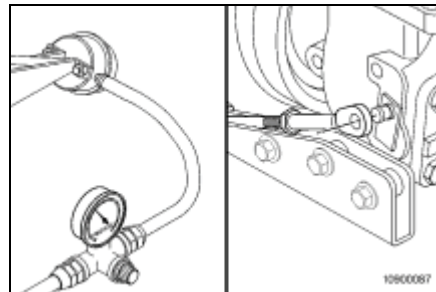

NOTE: If the boost capsule diaphragm material is ruptured and will not hold air pressure, manually pull the control rod outward in order to overcome boost capsule spring tension for removal of the control rod from the turbocharger wastegate lever pin.


Loosen the boost capsule mounting capscrews, disconnect the air supply hose, and remove assembly from the mounting bracket.

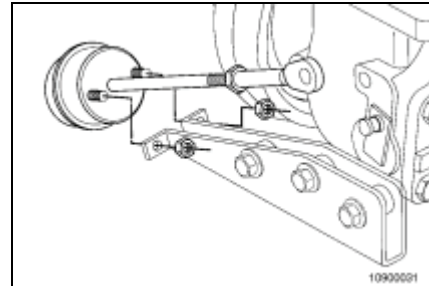

Turbocharger Wastegate Actuator Removal and Installation (Cont)

Test

NOTE: In some applications, the turbocharger must be removed in order to test the wastegate actuator. Refer to [Procedure 010-033](#).

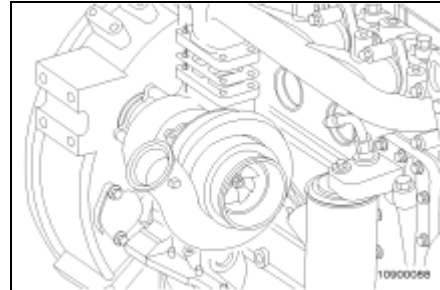

Disconnect the integral boost line from the wastegate capsule.


Attach a dial indicator (1) as shown, so that its shaft is in line with the wastegate actuator rod. Set the indicator to zero.

Connect clean, regulated air pressure and a pressure gauge to the capsule. Apply 200 kPa [29 psi] to make sure the wastegate is functioning properly.


The rod should move approximately 0.33 to 1.27 mm [0.013 to 0.050 in] without any sticking or air leakage.

NOTE: No air should be heard (i.e., leaking noise) through a functional wastegate capsule.

NOTE: A small amount of travel when air pressure is first applied is normal; the tolerance is being removed from the system.

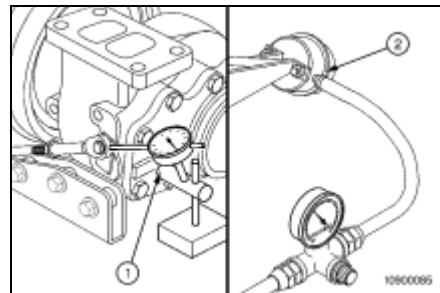


Replace the actuator if no movement of the actuator rod and lever is detected.

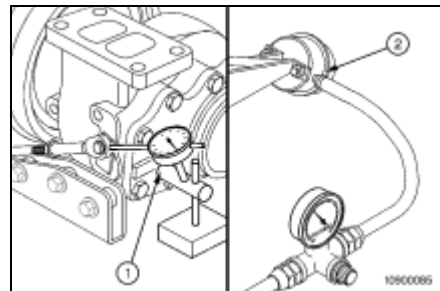


Turbocharger Wastegate Actuator Removal and Installation (Cont)

Install

NOTE: In some applications, the turbocharger must be removed in order to install a new wastegate actuator. Refer to [Procedure 010-033](#).

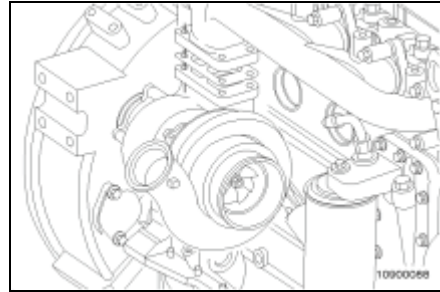


Fit the end-link over the turbocharger wastegate lever pin. With the spine of the spacer visible and the turbocharger wastegate lever pushed toward the rod, lay the actuator alongside the mounting bracket.

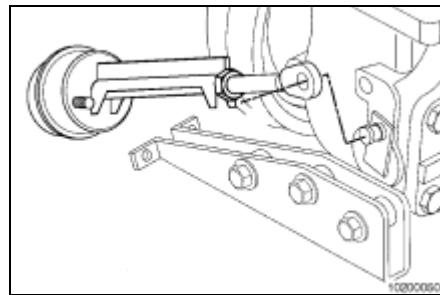


NOTE: Do not fit the two studs into the mounting holes at this time.

Adjust the length of the actuator assembly by removing from the turbocharger, rotating the end-link, and re-fitting the actuator until the underside of the actuator will just fit over the bracket mounting studs with less than 0.5-mm [0.20-in] gap.

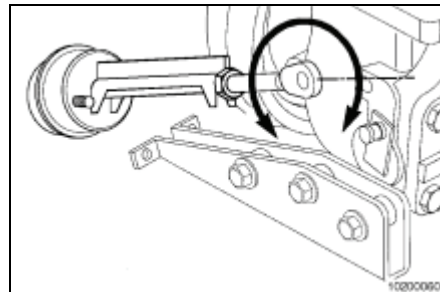

The setting is correct when the underside of the actuator will just fit over the bracket with less than 0.5-mm [0.20-in] gap.

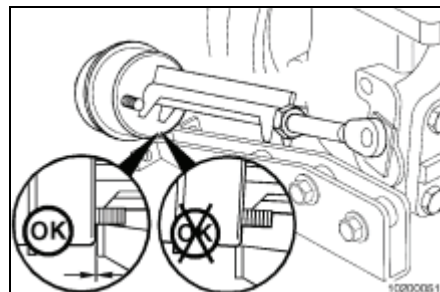

Turbocharger Wastegate Actuator Removal and Installation (Cont)


Fit the actuator mounting studs into the holes in the bracket, and fit both actuator mounting capscrews.



Refit the end-link onto the crank-pin. Install the control rod retaining clip.




Torque Value: 8 N•m [75 in-lb]

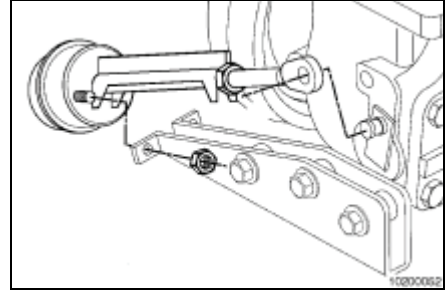


Tighten the control rod jam nut against the end-link. Cut the tie wrap and remove tie wrap and spacer piece. Discard tie wrap. Continue turning jam nut in the same direction, and tighten against end-link.



Torque Value: 8 N•m [75 in-lb]

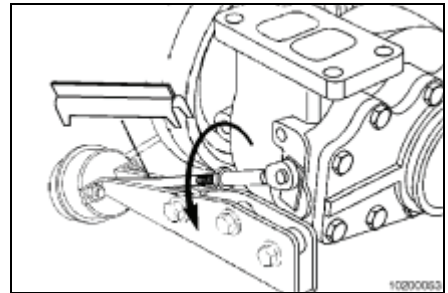

Refit the air supply hose to the actuator using the new hose clamp provided.

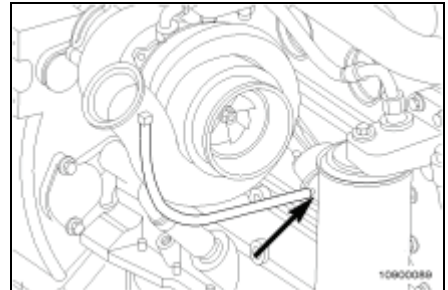

Follow-Up

This Page Intentionally Left Blank

Lubricating Oil Cooler Removal/Installation

Refer to Lubricating Oil Cooler (100-007-003) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare



Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.




Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.

Drain the coolant.

Remove the oil filter.


Remove

Remove the turbocharger oil supply line from the oil filter head.

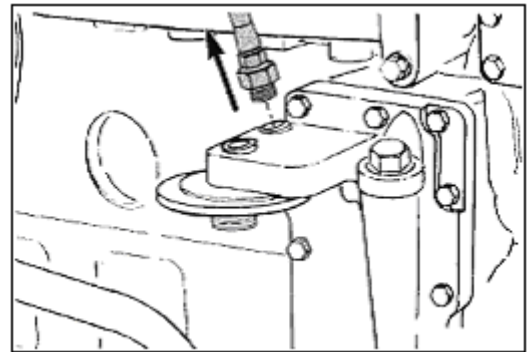


Lubricating Oil Cooler Removal/Installation (Cont)

Remove the oil cooler cover, element, and gaskets.

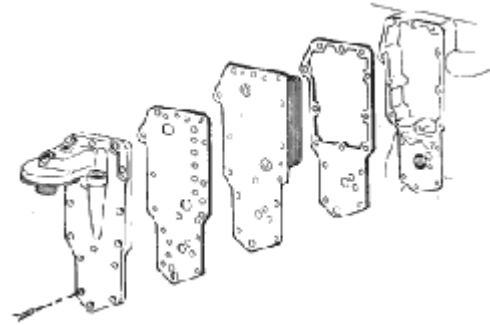


Clean the sealing surfaces.

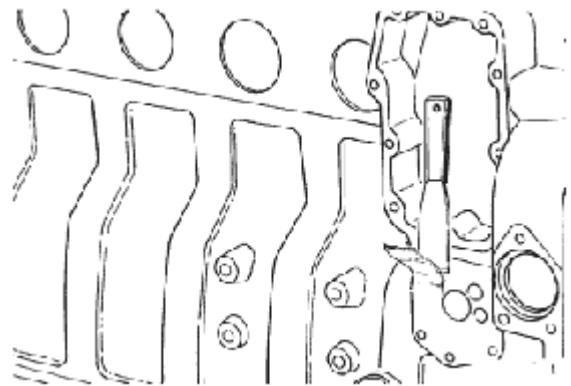

Clean

Clean all debris from around the oil cooler.

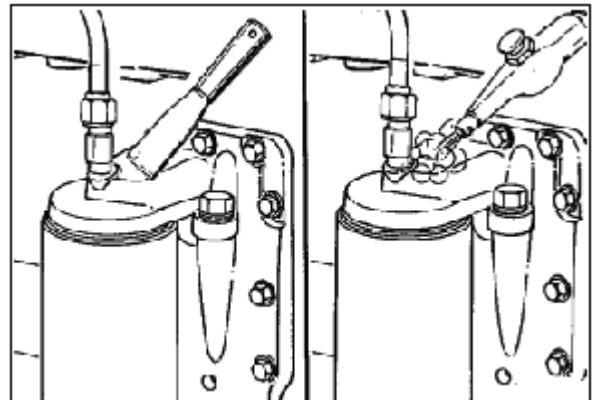


Lubricating Oil Cooler Removal/Installation (Cont)

Install

Assemble the oil cooler gasket, element, cooler cover gasket, and cooler cover to the cylinder block.


NOTE: Be sure to remove the shipping plugs (A) from the new cooler element.

Torque Value: 24 N•m [18 ft-lb]

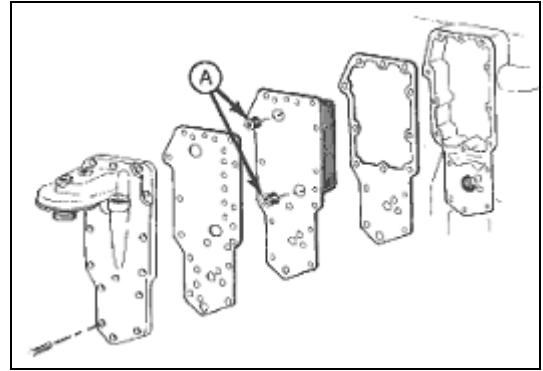


Connect the turbocharger oil supply line.

Torque Value: 35 N•m [26 ft-lb]

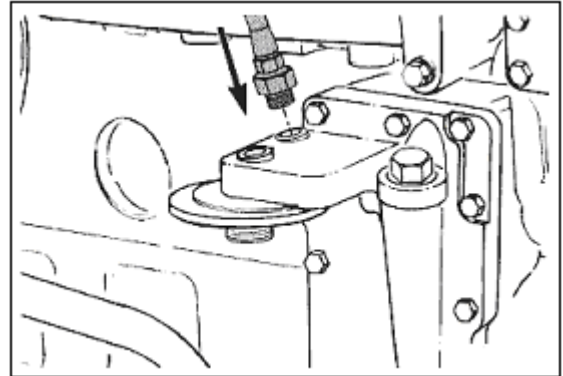

Install a new oil filter.

Follow the manufacturer's instructions for tightening.

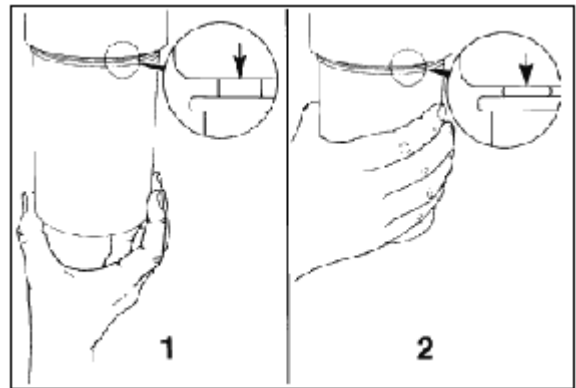

Lubricating Oil Cooler Removal/Installation (Cont)

Fill




The system must be filled slowly to prevent air locks. Be sure to open the aftercooler to allow air to escape as the system is filled.

Fill the coolant system and lubricating oil system.

Operate the engine to check for leaks.


Stop the engine and check the coolant and oil level.

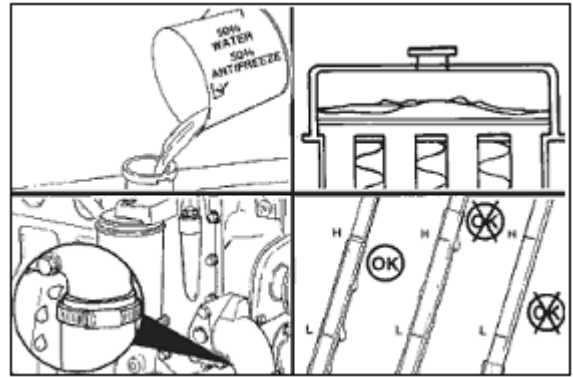

Pressure Test



Pressurize the element to 690 kPa [100 psi] to check it for leaks.

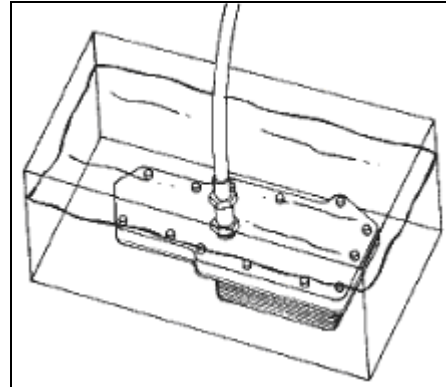


Follow-Up

Lubricating Oil and Filter Analysis

Inspect

An analysis of used oil can help diagnose internal engine damage and determine if it was caused by one of the following:


- Intake air filter malfunction
- Coolant leaks
- Oil diluted with fuel
- Metal particles causing wear

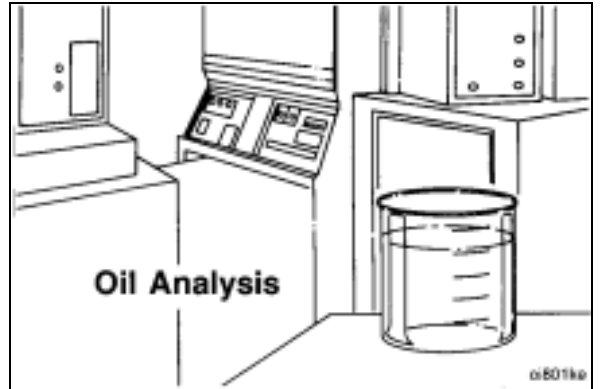


For additional oil analysis information, Refer to Cummins Engine Oil Recommendations, Bulletin [3810340](#).



NOTE: Do not take apart an engine for repair based solely on the results of an oil analysis. Inspect the oil filters. If the oil filter shows evidence of internal damage, find the source of the problem, and repair the damage. Refer to the appropriate procedure(s) based on the following oil filter inspection.

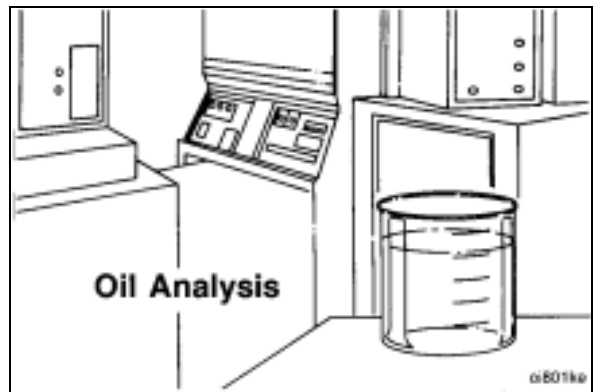


Restrain the full flow lubricating oil filter, and carefully cut the filter (upper section of combination filter) open. The filter element spring is under compression and can cause personal injury.

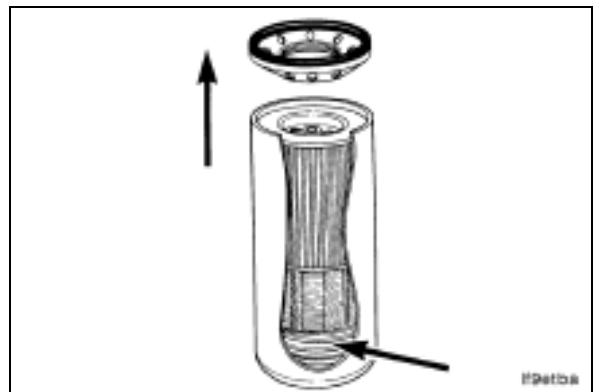

Lubricating Oil and Filter Analysis (Cont)

Use the tube cutter, Part No. 3376579, to open the full-flow oil filter (upper section of the bypass filter).

Inspect the filter element for evidence of moisture or metal particles.

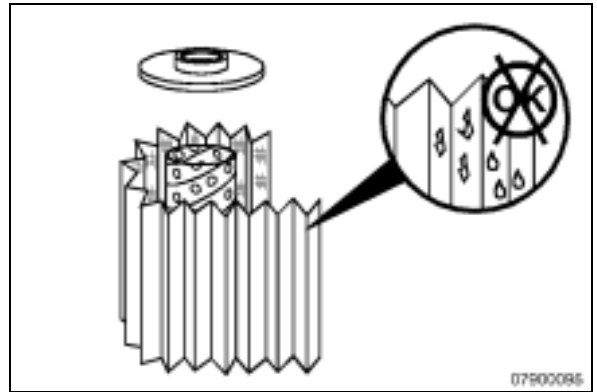

07500085

Metal	Possible Source
Copper	Bearings and Bushings
Chromium	Piston Rings
Iron	Cylinder Liners
Lead	Bearing Overlay Material
Aluminum	Piston Wear or Scuffing

Lubricating Oil Pan Removal/Installation

Refer to Lubricating Oil Pan (100-007-025) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.

Prepare

Drain



WARNING

Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapor, ingestion, and prolonged contact with used engine oil.




WARNING

Hot oil can cause serious personal injury.

NOTE: Use a container that can hold at least 20 liters [15 qt] of lubricating oil.


Operate the engine until the coolant temperature reaches 60°C [140°F]. Shut off the engine. Remove the oil drain plug. Drain the oil immediately to be sure all the oil and suspended contaminants are removed from the engine.

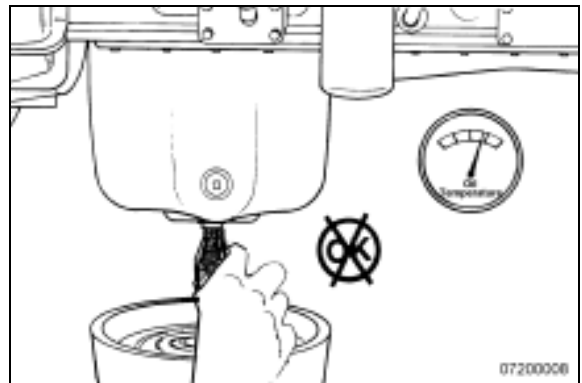

Remove

Remove the lubricating oil pan and gasket.

If the suction tube must be removed. Refer to [Procedure 007-035](#).

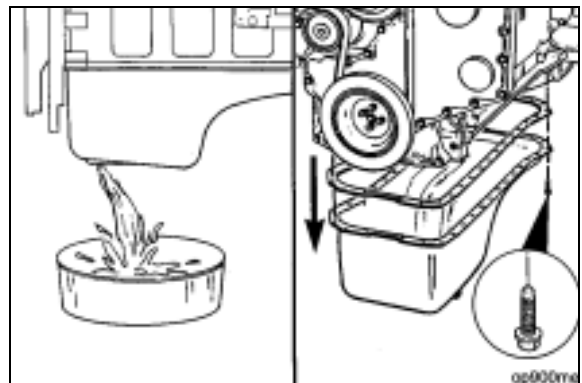

Lubricating Oil Pressure Regulator Removal/Installation

Refer to Lubricating Oil Pressure Regulator (Main Rifle) (100-007-029) in C Series Troubleshooting and Repair Manual, Bulletin No. 3666003.


Prepare

Clean debris.




Remove

Remove the plug and regulator valve.

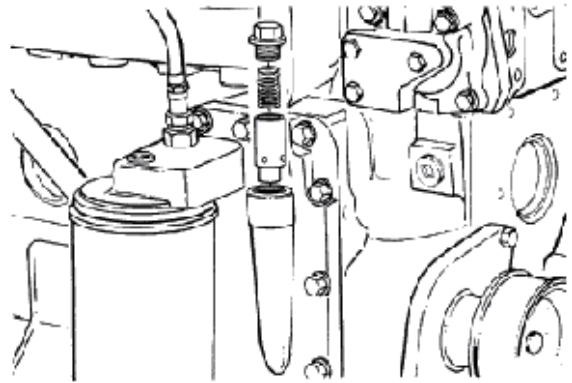

Clean


Clean and inspect the regulator valve.

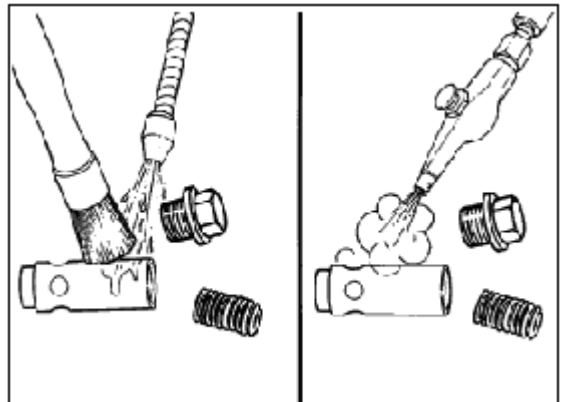

Lubricating Oil Pressure Regulator Removal/Installation (Cont)

Clean and inspect the regulator valve bore.

NOTE: In order to regulate the oil pressure, the valve must move freely in the bore.

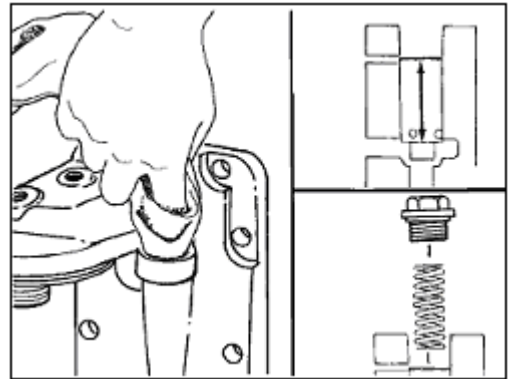


Install

Install a new sealing o-ring on the threaded plug and lubricate with clean lubricating engine oil.

Install the pressure regulator assembly.

Torque Value: 80 N•m [59 ft-lb]

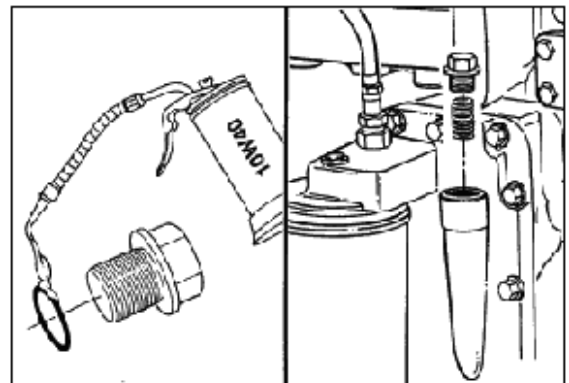


Follow-Up

Lubricating Oil Pump Removal/Installation


Prepare

Remove the drive belt. Refer to [Procedure 008-002](#).

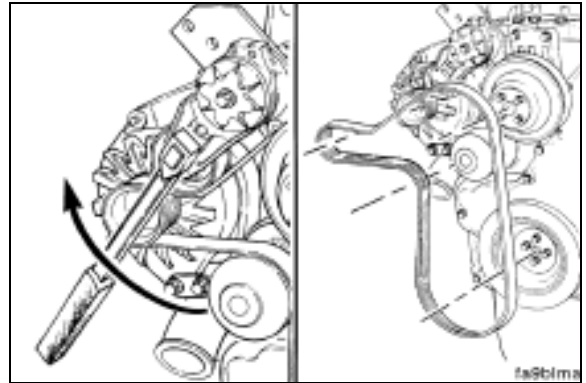


Remove

Remove the vibration damper. Refer to [Procedure 001-051](#) or [Procedure 001-052](#).

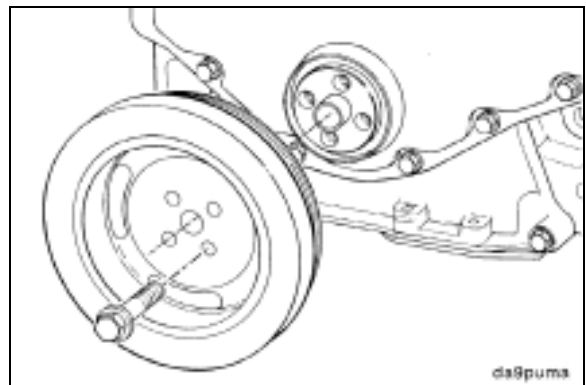

Remove the front gear cover. Refer to [Procedure 001-031](#).

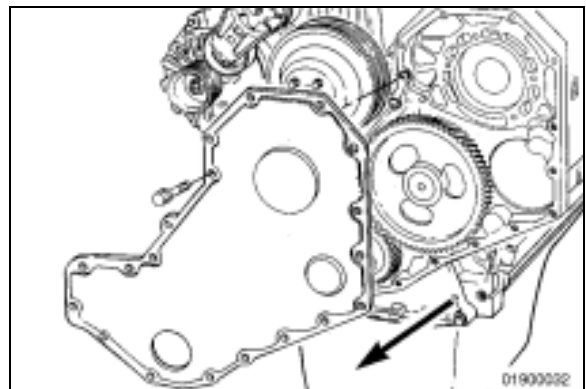


Lubricating Oil Pump Removal/Installation (Cont)

Remove the four mounting capscrews (1, 2, 3, and 4).




Remove the lube oil pump from the bore in the cylinder block.

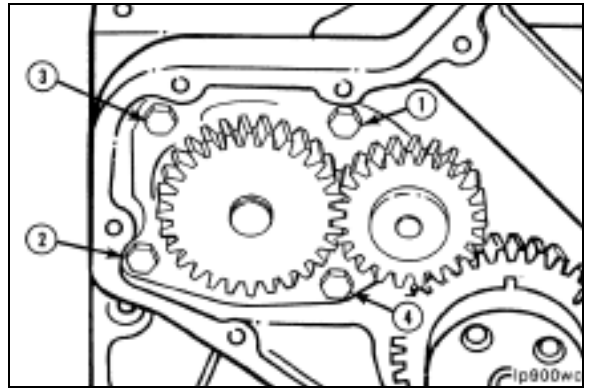


Inspect for Reuse

Inspect the lubricating oil pump gears for chips, cracks, or excessive wear.

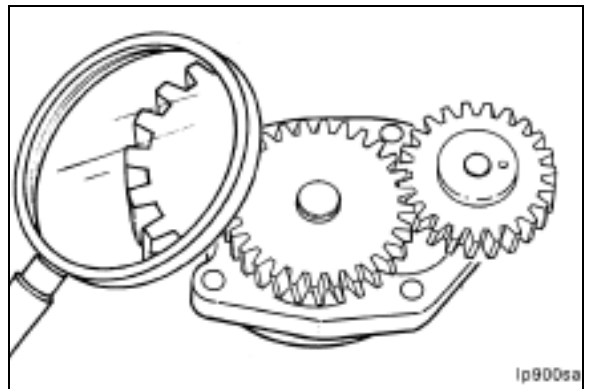


Remove the back plate.

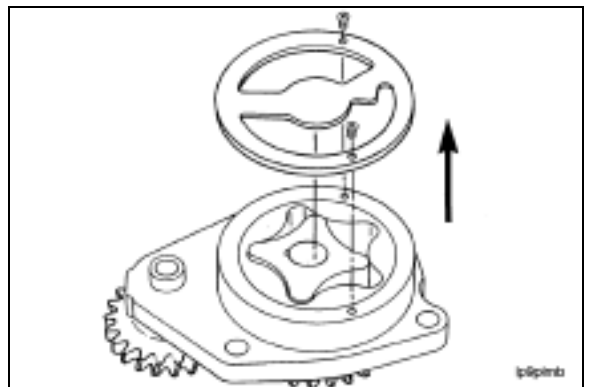


Lubricating Oil Pump Removal/Installation (Cont)

Mark "TOP" on the gerotor planetary.

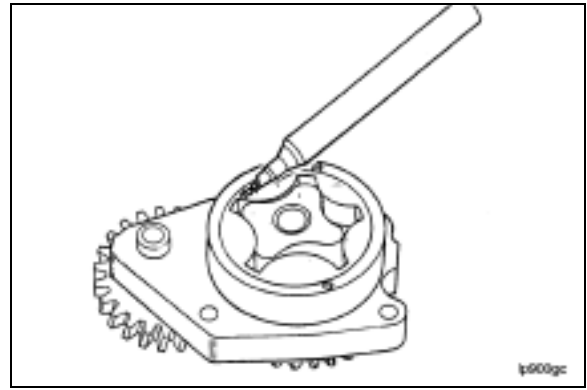

Remove the gerotor planetary.
Inspect for excessive wear or damage.

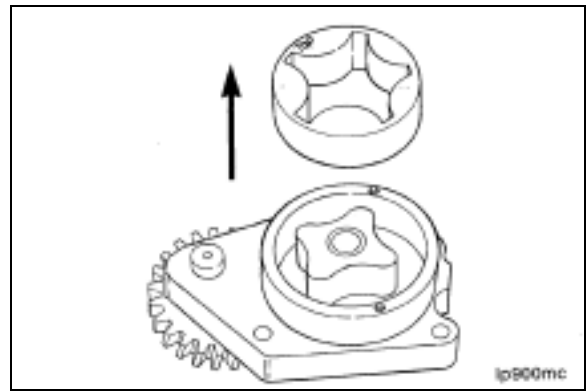

WARNING


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.



WARNING


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Clean all parts in solvent and dry with compressed air.

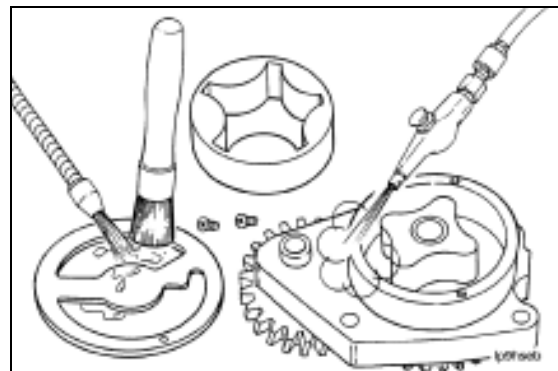


Lubricating Oil Pump Removal/Installation (Cont)

Inspect the lubricating oil pump housing and gerotor drive for damage and excessive wear.

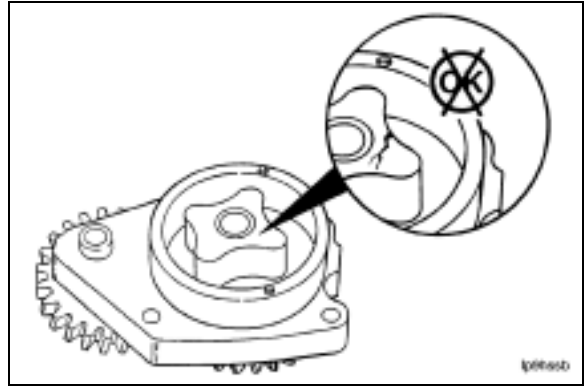

CAUTION
Make sure the gerotor planetary is installed in the original position. Failure to do so can damage the oil pump.


Install the gerotor planetary.

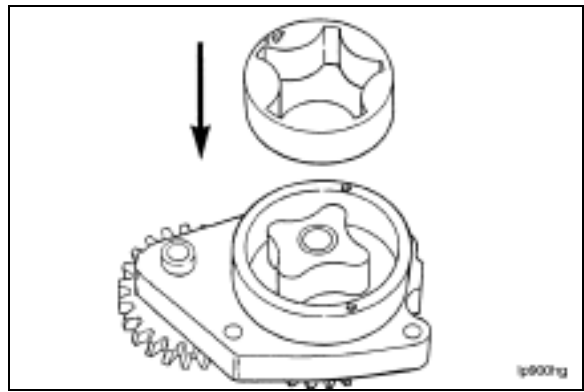

Measure

Measure the tip clearance.

MAX Limit 0.1778 mm [0.007 in]

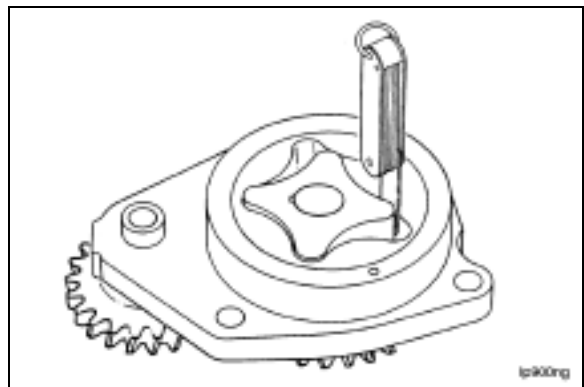


Lubricating Oil Pump Removal/Installation (Cont)

Measure the clearance of the gerotor drive/gerotor planetary to port plate.




MAX Limit 0.127 mm [0.005 in]

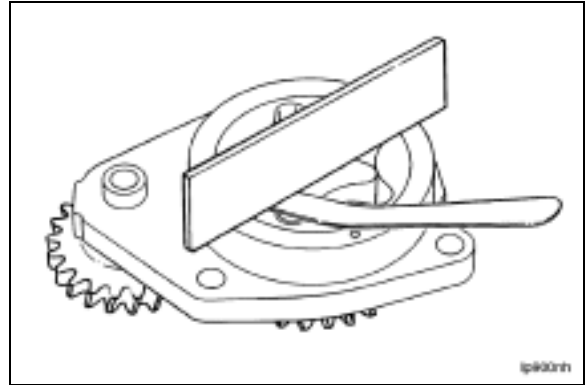

Measure the clearance of the gerotor planetary to the body bore.



MAX Limit 0.381 mm [0.015 in]

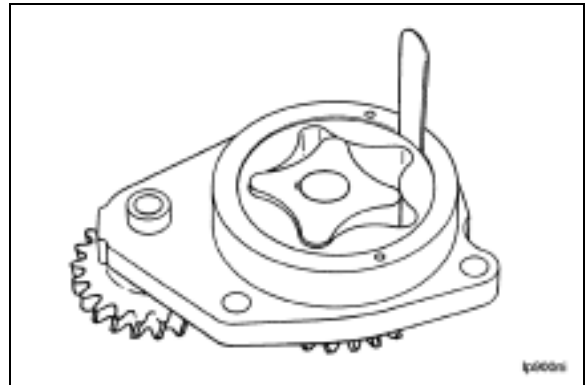


Measure the gear backlash.



Limits (Used Pump)


- **MIN 0.75 mm [0.030 in]**
- **MAX 0.85 mm [0.033 in]**

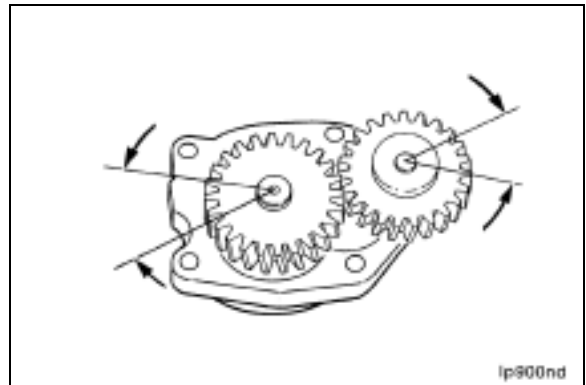

Lubricating Oil Pump Removal/Installation (Cont)


Install

Install the back plate.

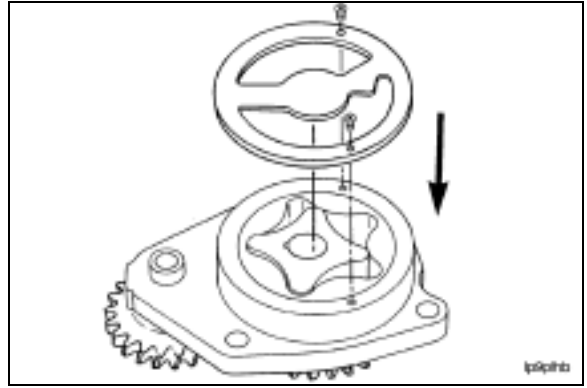


Failure to fill the pump with oil during installation can result in a slow prime at initial engine start-up, resulting in severe engine damage.

Lubricate the lubricating oil pump with clean 15W-40 engine oil.

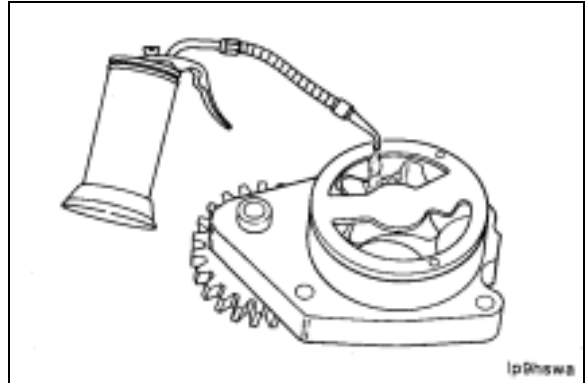

Make sure the idler gear pin is installed in the locating bore in the cylinder block.


Install the lubricating oil pump.

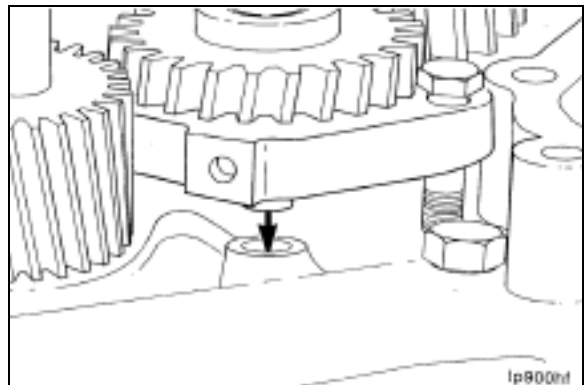


Lubricating Oil Pump Removal/Installation (Cont)

Tighten in the sequence shown.

Torque Value: 24 N•m [18 ft-lb]

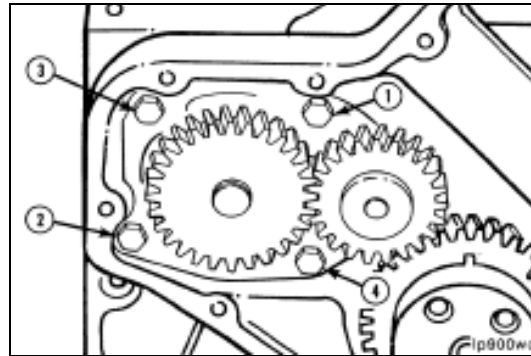

NOTE: The back plate on the pump seats against the bottom of the bore in the cylinder block. When the lubricating oil pump is correctly installed, the flange on the lubricating oil pump will not touch the cylinder block.

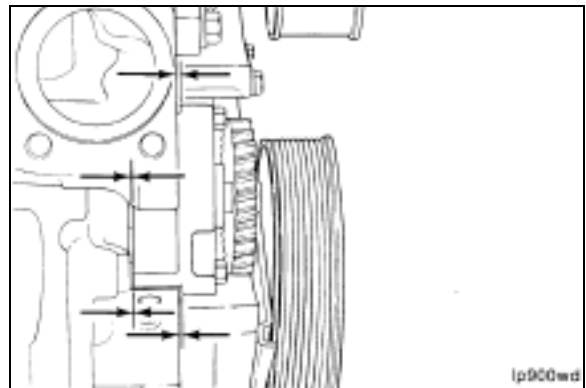

NOTE: Be sure the gear backlash is correct if installing a new lubricating oil pump.

Measure the gear backlash.

Backlash Limits


A

- MIN 0.75 mm [0.030 in]
- MAX 0.85 mm [0.033 in]

B

- MIN 0.75 mm [0.030 in]
- MAX 0.85 mm [0.033 in]


NOTE: If the adjoining gear moves when you measure the backlash, the reading will be incorrect.

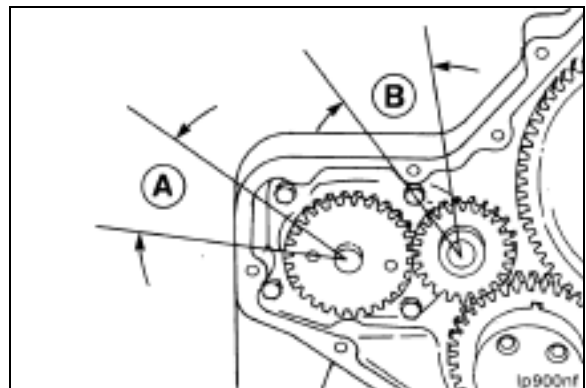

Lubricating Oil Pump Removal/Installation (Cont)

Gear Cover - Installation


Lubricate the front gear train with clean 15W-40 engine oil.

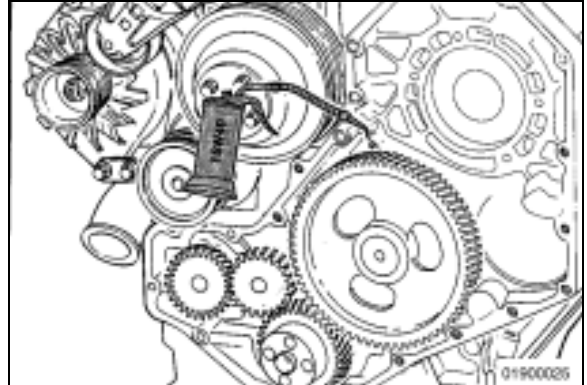

The seal lip and the sealing surface on the crankshaft must be free from all oil residue to prevent seal leaks.

Thoroughly clean the front seal area of the crankshaft.


NOTE: Always replace the front seal when removing and installing the gear cover. Refer to [Procedure 001-023](#).

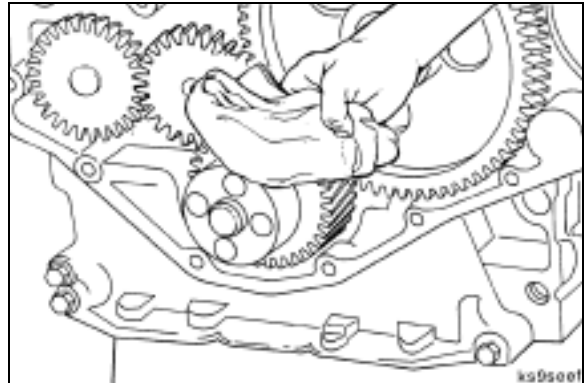

Apply a thin bead of Three-Bond™, or equivalent, to the front cover side of the gasket only.

NOTE: Do not remove the plastic seal pilot tool from the lubricating oil seal at this time. Use the plastic seal pilot tool to guide the seal on the crankshaft.


Install the gasket and front cover on the engine.

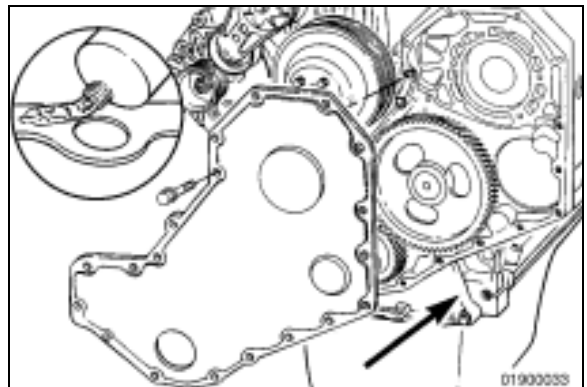


Lubricating Oil Pump Removal/Installation (Cont)

Tighten the front cover mounting capscrews in the indicated order.


Torque Value: 24 N•m [18 ft-lb]

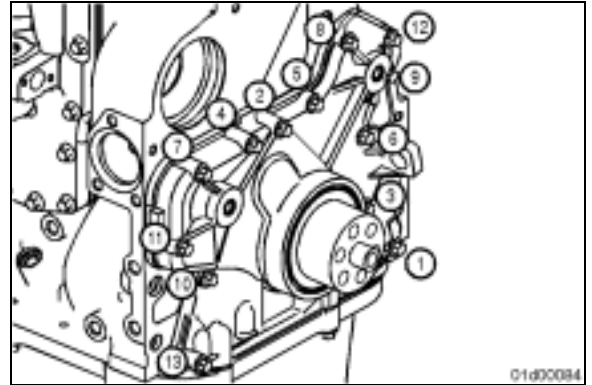

Remove the plastic pilot tool from the crankshaft.

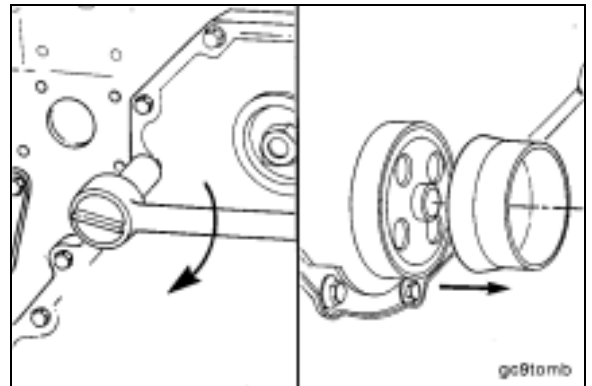


Install the front breather and tube. Refer to Procedure 003-018.

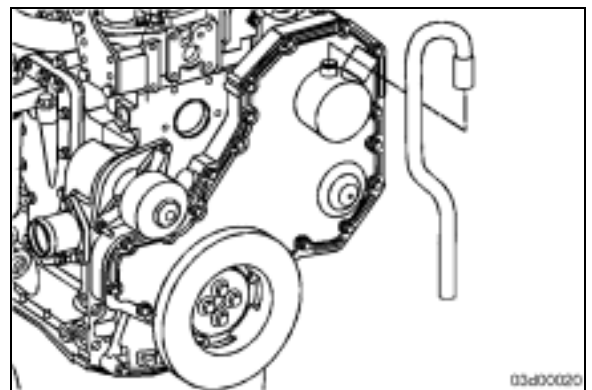


Lubricating Oil Pump Removal/Installation (Cont)

Install the vibration damper. Refer to [Procedure 001-051](#) or [Procedure 001-052](#).

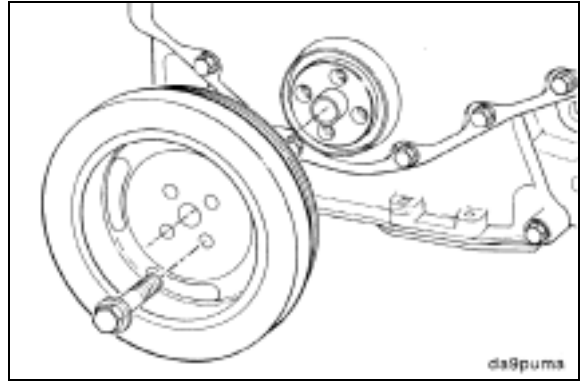


Tighten the vibration damper. Refer to [Procedure 001-051](#) or [Procedure 001-052](#).

Torque Value: 125 N•m [92 ft-lb]

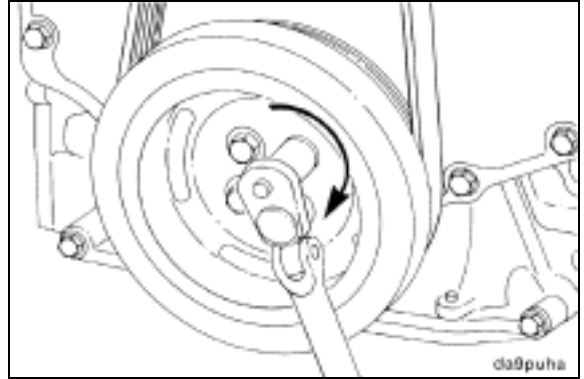

Raise the belt tensioner to install the belt. Refer to [Procedure 008-002](#).

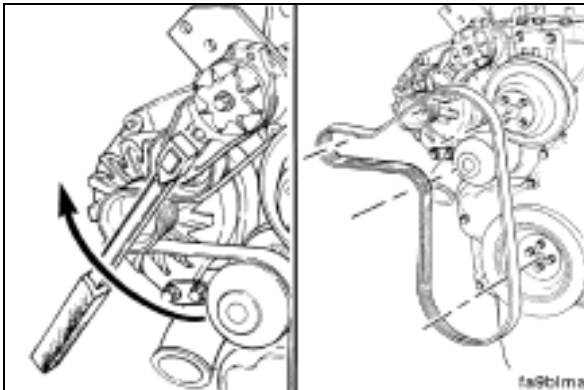

Follow-Up


Oil Pressure Sender Removal/Installation

Prepare

Remove

Disconnect the wire from the sending unit.

NOTE: The sending units illustrated can differ from those installed by the original equipment manufacturer (OEM).

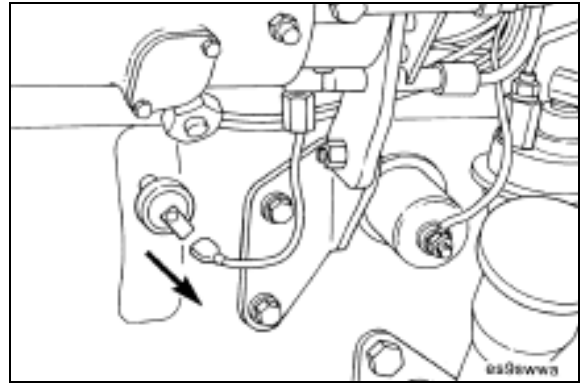

Inspect for Reuse


Remove the OEM oil pressure sensor, and install a pressure gauge.

Start the engine.

Measure the lubricating oil pressure.

Minimum lubricating oil pressure:

- **Low Idle (675 to 725 rpm): 69 kPa [10 psi]**
- **High Idle rpm: 207 kPa [30 psi]**

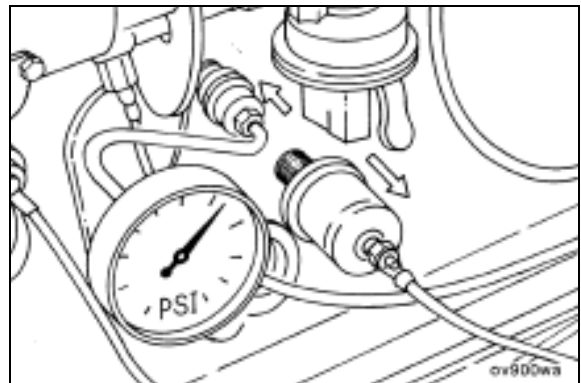

Install

Install the sending unit.

Connect the wire to the sending unit.

Torque Values:

- **Installed into Cast Iron 16 N•m [12 ft-lb]**
- **Installed into Aluminum 10 N•m [7 ft-lb]**




Follow-Up

Oil Pressure Gauge Removal/Installation

Prepare

Place the fire protection system in a safe mode for engine service.

Place the AUTO/MANUAL rocker switch in the MANUAL position.

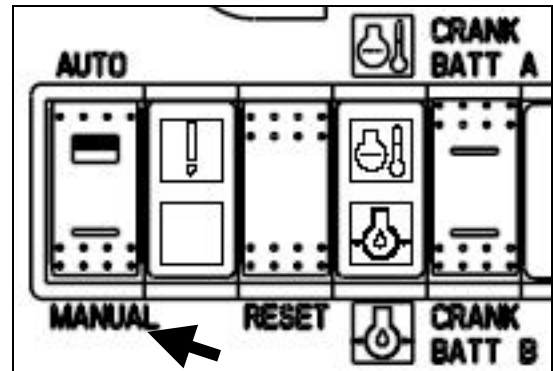


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS

For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

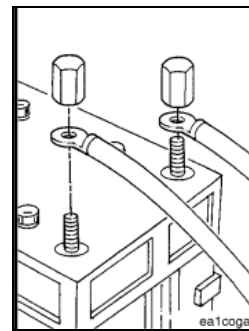

Remove


NOTE: Refer to Drawing 10423 Sheet 1 in Section 13 for electrical schematic details.

Open the local control panel.

NOTE: Ensure that the wires are clearly tagged for reconnection.

Loosen the nuts on the stud and remove the wires.

Remove the nuts on the mounting bracket and remove the gauge from the panel.

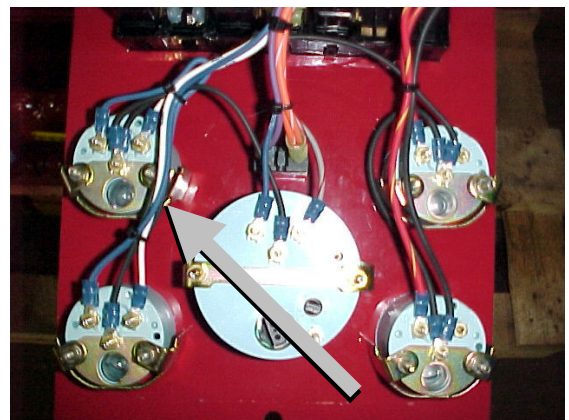

Oil Pressure Gauge Removal/Installation (Cont)

Install


Orient the gauge in the cutout in the electrical panel.

Position the mounting bracket on the gauge.

Install the mounting nuts.

Reconnect the electrical wires on the studs in the same positions as they were originally installed.

Tighten the nuts on the studs.

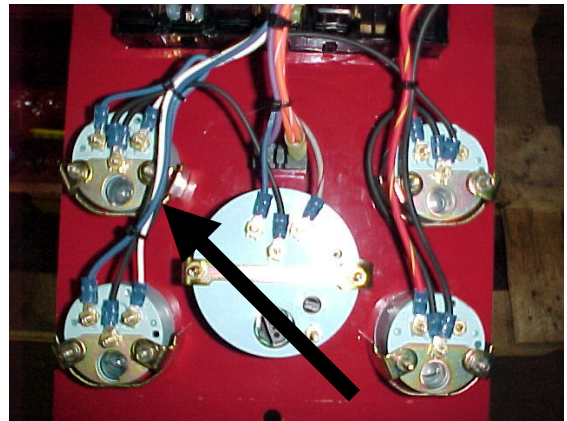


Follow-up

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.


Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

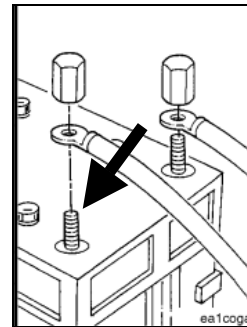

Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system to operating status.

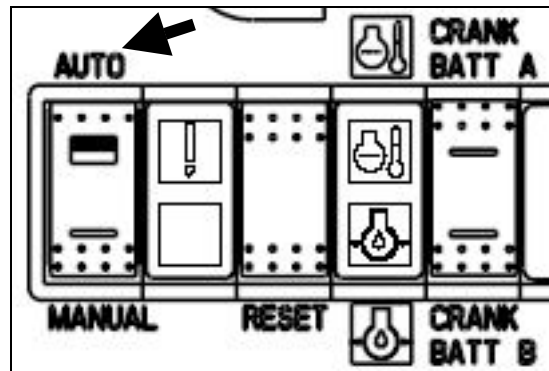


Oil Pressure Switch Removal/Installation

Prepare

Remove

Disconnect the oil pressure switch wiring.
Remove the oil pressure switch.

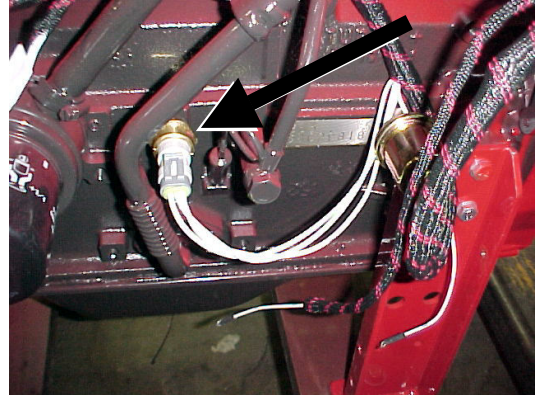

Install


NOTE: Apply liquid teflon sealant to the threads when installing the temperature switch.

Install the temperature sensor.

Torque Value:

- (Cast Iron) 50 N•m [37 ft-lb]
- (Aluminum) 30 N•m [22 ft-lb]

Reconnect the wiring.

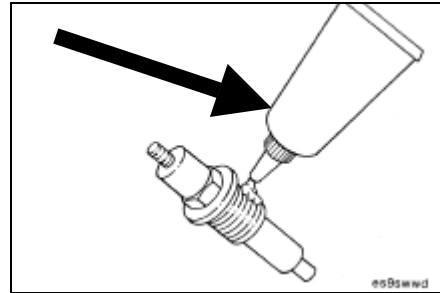

Follow-Up

Operate the engine. Refer to Operating Instructions in Section 3.

Check for leaks. Repair any leaks.




This Page Intentionally Left Blank

Speed Sensor or Mag Pick-Up Sensor Removal/Installation

Prepare: Place the fire protection system in a safe mode for engine service.



Place the AUTO/MANUAL rocker switch in the MANUAL position.

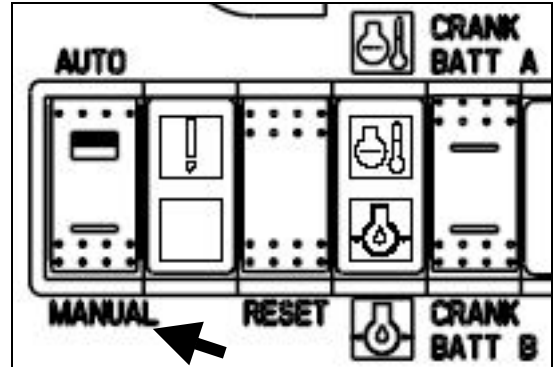


REMOVE BATTERY POWER BEFORE SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

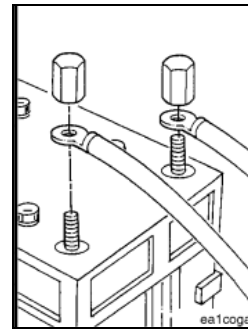

Remove The Mag Pick-Up (Speed Sensor) which is mounted on the bell-housing and located over the flywheel teeth. Both the Speed Switch and the Tachometer (located in the Engine control Panel) use the Mag Pick-Up as the engine speed signal. The resistance on a good Mag Pick-Up should be approximately 265 Ohms.



Remove the 2-wire cable that is connected to it. (The cable wires are not polarity sensitive, so it makes no difference how the wires are connected to it). Remove the Mag Pick-Up by turning it out counter-clockwise.

Speed Sensor or Mag Pick-Up Sensor Removal/Installation (Cont)

When installing a new Mag Pick-Up, first check that the threads in the bell-housing are clean. Any burrs may prevent proper installation.




Install the Mag Pick-Up by threading it into the bell-housing until its tip is bottomed out against the flywheel. Then back out the Mag Pick-Up 1/2 turn. Reconnect the 2-wire cable. Reconnect the batteries.

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!


Reconnect the batteries at their terminals after all service work has been completed.

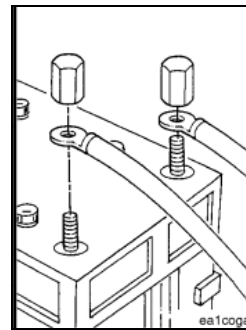

Place the AUTO/MANUAL rocker switch in the AUTO position on the fire pump panel.



Return the fire protection system controller back to operating status.

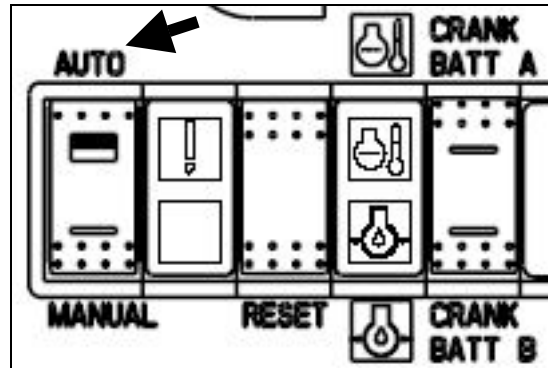


Tachometer Removal/Installation

Prepare: Place the fire protection system in a safe mode for engine service.




Place the AUTO/MANUAL rocker switch in the MANUAL position.

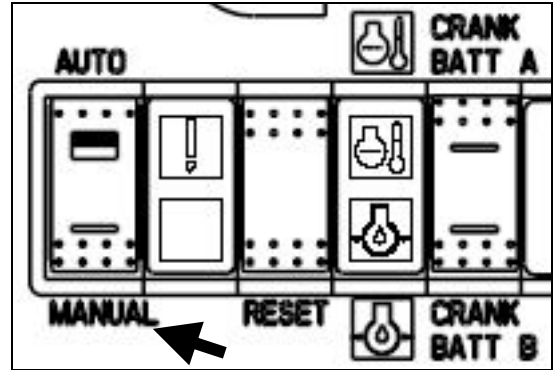

REMOVE BATTERY POWER BEFORE
SERVICING ENGINE OR CONTROLS




For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

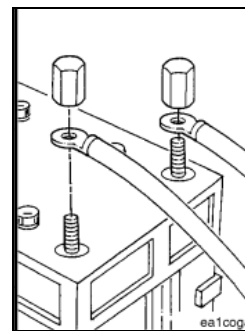

Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

To remove the tachometer, open the cover of the Engine Control Panel. Disconnect the 3-wire connector that is plugged into the back of the tachometer. Next, remove the tachometer’s retaining bracket.

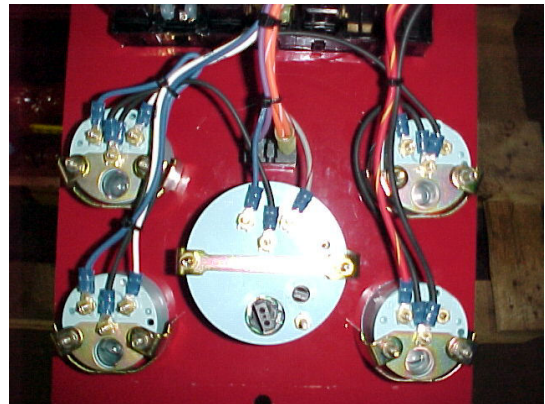

Tachometer Removal/Installation (Cont)

Install the new tachometer in reverse order.
Refer to instructions for Tachometer Calibration in this section.




For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.



Wear safety glasses when reconnecting batteries!


Reconnect the batteries at their terminals after all service work has been completed.

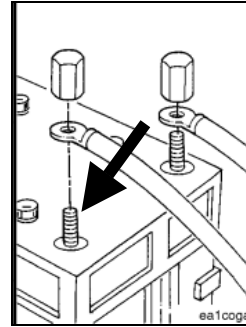

Place the AUTO/MANUAL rocker switch in the AUTO position.



Return the fire protection system controller back to operating status.

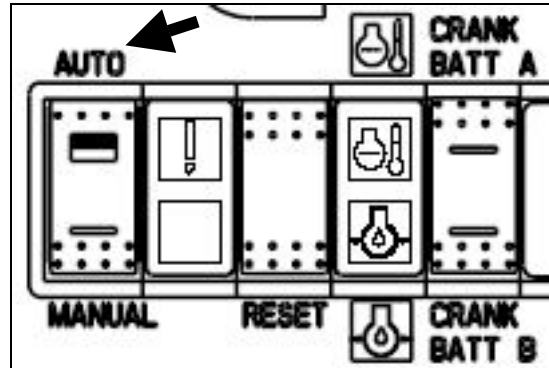


Overspeed Switch Removal/Installation

Prepare: Place the fire protection system in a safe mode for engine service.




Place the AUTO/MANUAL rocker switch in the MANUAL position.

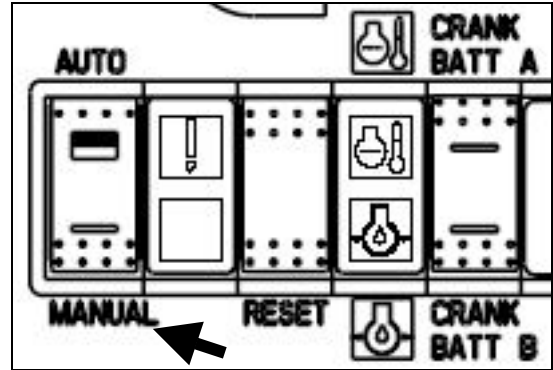

REMOVE BATTERY POWER BEFORE
SERVICING ENGINE OR CONTROLS



For safety reasons, both batteries must be disconnected before performing service on the Firepump Engine or on any of its controls. Before disconnecting the batteries, place the Firepump Controller in its appropriate service position in order to avoid a “Battery Failure” alarm.

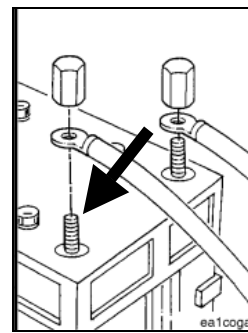


Wear safety glasses when disconnecting batteries!

Next, disconnect both batteries at their terminals.

Begin removing the Speed Switch by first documenting the wires that are connected to its terminals. If necessary, place a piece of masking tape on each wire, noting the terminal number that it's connected to.




Once all of the wires are removed, the Speed Switch can be removed from the Engine Control Panel by removing the four screws that are securing it to the panel. Each screw is fastened to the back of the Control Panel. In order to access the four retaining nuts, the Control Panel may have to be loosened from the engine frame to allow clearance for a wrench.

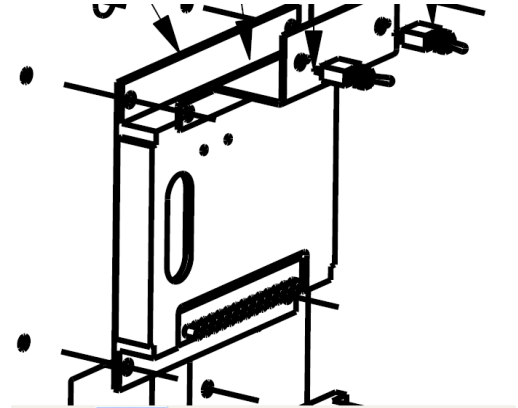

Overspeed Switch Removal/Installation (Cont)


Once the Speed Switch is removed, install the new one in reverse order. All Speed Switches are factory calibrated for the specific Firepump Engine model that it's intended to be used with. No adjustments will be necessary.

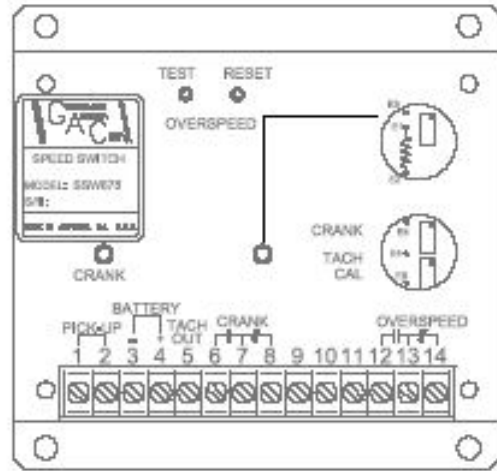

For safety reasons, both batteries must be re-connected before putting the engine and fire protection system controller back in service.


Wear safety glasses when reconnecting batteries!

Reconnect the batteries at their terminals after all service work has been completed.

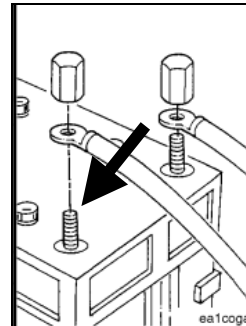


Place the AUTO/MANUAL rocker switch in the AUTO position.

Return the fire protection system controller back to operating status.

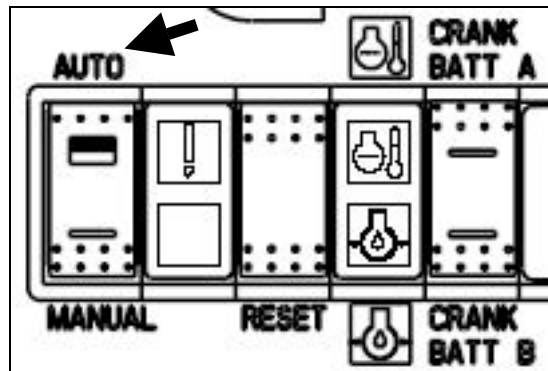


Tachometer Calibration

After a new tachometer has been installed, it will be necessary to calibrate it. In order to do this, the engine must be started and verified that it is operating at rated speed.

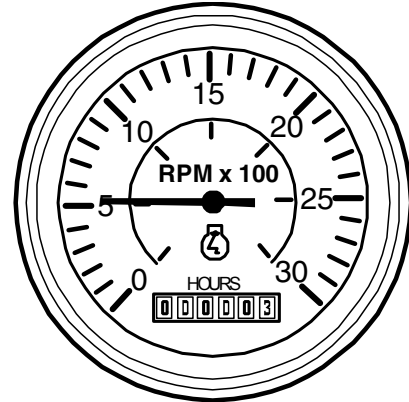

With a small flat-blade screwdriver, turn the trim pot, located on the back of the tachometer, until its indicator agrees with the engine speed.

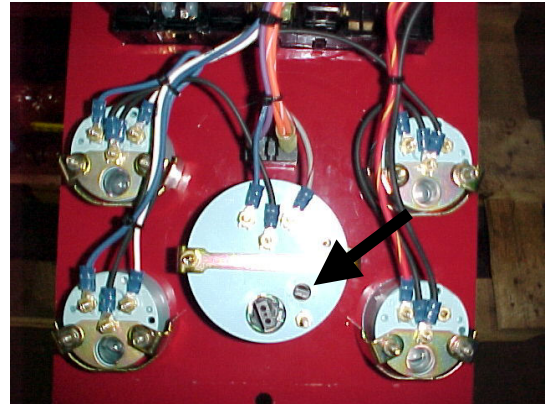

This Page Intentionally Left Blank

Section 8 – Service Literature

Section Contents

	Page
Additional Service Literature.....	8-3
Service Literature Ordering Location.....	8-4

THIS PAGE INTENTIONALLY LEFT BLANK

Additional Service Literature

General Information

The following publications can be purchased at your selected Service Literature Ordering Location:

Bulletin	Title of Publication
3379000	Air for Your Engines
3379001	Fuel for Cummins Engines Bulletin
3379009	Operation, Cold Weather
3666003	C Series Troubleshooting and Repair Manual
3666008	C Series Engine Shop Manual
3666021	C Series Specifications Manual
3666109	Alternative Repair Manual, B and C Series Engines
3666132	Coolant Requirements and Maintenance Bulletin
3810340	Cummins Engine Oil Recommendations Bulletin

Service Literature Ordering Location

Contact Information

Region	Ordering Location
United States and Canada	Cummins Distributors – 1-800 DIESELS 1-800-343-7357 OR Credit Cards at 1-800-646-5609 OR Order online at www.powerstore.cummins.com
U.K., Europe, Mid-East, Africa, and Eastern European Countries	Cummins Engine Co., Ltd. Royal Oak Way South Daventry Northants, NN11 5NU, England
South and Central America (excluding Brazil and Mexico)	Cummins Americas, Inc. 16085 N.W. 52nd Avenue Hialeah, FL 33104
Brazil and Mexico	Cummins Inc. International Parts Order Dept., MC 40931 Box 3005 Columbus, IN 47202-3005
Far East (excluding Australia and New Zealand)	Cummins Diesel Sales Corp. Literature Center 8 Tanjong Penjuru Jurong Industrial Estate Singapore
Australia and New Zealand	Cummins Diesel Australia Maroondah Highway, P.O.B. 139 Ringwood 3134 Victoria, Australia

Section 9 – Service Assistance

Section Contents

	Page
Routine Service and Parts	9-3
Problem Solving	9-4

THIS PAGE INTENTIONALLY LEFT BLANK

Routine Service and Parts

Personnel at Cummins Authorized Repair Locations can assist you with the correct operation and service of your engine. Cummins has a worldwide service network of more than 5,000 Distributors and Dealers who have been trained to provide sound advice, expert service, and complete parts support. Check the telephone directory yellow pages or refer to the directory in this section for the nearest Cummins Authorized Repair Location.

Emergency and Technical Service

The Cummins Customer Assistance Center provides a 24-hour, toll free telephone number to aid in technical and emergency service when a Cummins Authorized Repair Location can not be reached or is unable to resolve an issue with a Cummins product.


If assistance is required, call Toll-Free:

1-800-DIESELS (1-800-343-7357)

Includes all 50 states, Bermuda, Puerto Rico, Virgin Islands, and the Bahamas.

Outside of North America contact your Regional Office. Telephone numbers and addresses are listed in the International Directory.

See also www.cummins.com

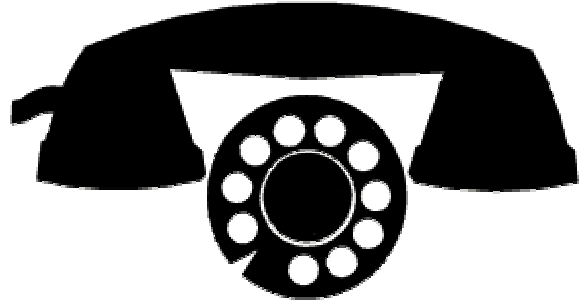

©1997

Problem Solving

Normally, any problem that arises with the sale, service, or repair of your engine can be handled by a Cummins Authorized Repair Location in your area. Refer to the telephone directory yellow pages for the one nearest you. If the problem has not been handled satisfactorily, follow the steps outlined below:

If the disagreement is with a Dealer, talk to the Cummins Distributor with whom he has his service agreement.

If the disagreement is with a Distributor, call the nearest Cummins Division or Regional Office; however, most problems are solved below the Division or Regional office level. Telephone numbers and addresses are listed in this section.

Before calling, write down the following information:

- Engine model and serial number
- Type and make of equipment
- Total kilometers [miles] or hours of operation
- Warranty start date
- Nature of problem
- Summary of the current problem arranged in the order of occurrence
- Name and location of the Cummins Distributor or Dealer

If a problem can not be resolved satisfactorily through your Cummins Authorized Repair Location or Division Office, write to:

**Cummins Customer Assistance Center - 41403,
Cummins Engine Company, Inc.,
Box 3005, Columbus, IN 47202-3005**

Section 10 – Maintenance Specifications

Section Contents

	Page
General Engine Data.....	10-3
Fuel System Specifications	10-4
Lubricating Oil System Specifications	10-4
Cooling System Specifications	10-4
Air Intake System Specifications	10-5
Exhaust System Specifications	10-5
Electrical System Specifications	10-5
Cummins/Fleetguard® Filter Specifications	10-6
Fuel Recommendations and Specifications	10-6
Lubricating Oil Recommendations and Specifications	10-7
Coolant Recommendations and Specifications	10-8
Engine Component Torque Values	10-9
Sealants	10-10
Capscrew Markings and Torque Values.....	10-11

THIS PAGE INTENTIONALLY LEFT BLANK

General Engine Data

NOTE: The following engine and system specification data is extracted from the curves and data sheets that were current when this document was prepared. Refer to Performance Curve Drawing 9744 and Data Sheet Drawing 9745 for the most current information. Contact Cummins Fire Power at 920-337-9750 if current information is required.

Refer to the base engine troubleshooting and repair manual for base engine coverage (see Service Literature in Section 8).

Model	Cummins Engine Co. Base Engine	Cummins Base Engine Fuel Rating
CFP83-F10	6CTA8.3G2	FR90242 / FR90243
CFP83-F20	6CTA8.3G2	FR90242 / FR90243
CFP83-F30	6CTA8.3G2	FR90242 / FR90243
CFP83-F40	6CTAA8.3G3	FR90940

Model	Installation Drawing	Configuration Number
CFP83-F10	8708 (see <u>Section 13</u>)	D413034GX02
CFP83-F20	8708 (see <u>Section 13</u>)	D413034GX02
CFP83-F30	8708 (see <u>Section 13</u>)	D413034GX02
CFP83-F40	8710 (see <u>Section 13</u>)	D413035GX02

Model	Fuel System	Aspiration
CFP83-F10	Bosch - P3000 Direct Injection	Turbocharged, Jacket Water Aftercooled (JWAC)
CFP83-F20	Bosch - P3000 Direct Injection	Turbocharged, Jacket Water Aftercooled (JWAC)
CFP83-F30	Bosch - P3000 Direct Injection	Turbocharged, Jacket Water Aftercooled (JWAC)
CFP83-F40	Bosch - P7100 Inline	Turbocharged, Charge Air Cooled

Type	4 Cycle; In-Line; 6 Cylinder
Firing Order	1-5-3-6-2-4
Rotation, Viewed from the Front of the Engine	Clockwise
Compression Ratio:	16.8:1
Valves per cylinder: Inlet/Exhaust	1 / 1

	Metric	US
Bore	114 mm	4.49 in
Stroke	135 mm	5.32 in
Displacement	8.3 liters	505 in. ³
Intake Valve Clearance	0.30 mm	0.012 in
Exhaust Valve Clearance	0.61 mm	0.024 in
Dry Weight	790 kg	1742 lb
Wet Weight	823 kg	1815 lb

Fuel System Specifications

Fuel	Type Number 2 Diesel Only
Recommended primary fuel filter	Fleetguard FS1251

	Metric	US
Minimum supply line size	9.5 mm D.	0.375 in. D.
Minimum drain line size	6.4 mm D.	0.25 in. D.
Maximum fuel line length between supply tank & fuel pump	12 m	40 ft.
Maximum fuel height above C/L crankshaft	2030 mm	80 in.
Maximum restriction @ lift pump-inlet - with clean filter	102 mm Hg	4.0 in. Hg
Maximum restriction @ lift pump-inlet - with dirty filter	203 mm Hg	8.0 in. Hg
Maximum return line restriction - without check valves	254 mm Hg	10.0 in. Hg
Minimum fuel tank vent capability	0.342 m ³ /hr	12 ft ³ /hr
Maximum fuel temperature @ lift pump inlet	71 °C	160 °F

Lubricating Oil System Specifications

Recommended lube oil filter	Fleetguard LF9009
-----------------------------	-------------------

	Metric	US
Oil pressure range at rated	276-414 kPa	40-60 PSI
Oil capacity of pan (high - low)	18.9-15.1 litre	20-16 U.S. quarts
Total system capacity	23.8 litre	6.3 U.S. Gal.

Cooling System Specifications

Recommended coolant filter	Fleetguard WF2072
----------------------------	-------------------

	Metric	US
Maximum raw water working pressure range at heat exchanger	414 kPa	60 PSI
Recommended minimum water supply pipe size to heat exchanger	25.4 mm D.	1.0 in. D.
Recommended minimum water discharge pipe size from heat exchanger	31.7 mm D.	1.25 in. D.
Coolant water capacity (engine side)	22.2 Litre	5.9 U.S. gal.
Modulating thermostat range	82-95 °C	180-203 °F
Minimum raw water flow with water temperatures to 90 °F (32 °C)	1.9 litre/s	30 U.S. GPM

Air Intake System Specifications

NOTE: Engine intake air must be filtered to prevent dirt and debris from entering the engine. If intake air piping is damaged or loose, unfiltered air will enter the engine and cause premature wear.

Recommended air cleaner element	(Standard) K&N RU5045 (Optional) Donaldson B105006	
	Metric	US
Maximum temperature rise between ambient air and engine air inlet	15 °C	30 °F
Maximum inlet restriction with dirty filter	635 mm H ₂ O	25 in. H ₂ O

Exhaust System Specifications

	Metric	US
Maximum exhaust back pressure imposed by complete exhaust system	10.2 kPa	40.8 in. H ₂ O
Exhaust pipe size normally acceptable	102 mm D.	4 in. D.

Electrical System Specifications

Start Circuit

The start circuit consists of a single starter motor and redundant starter control relays as well as using redundant power sources either 12 V or 24 V comprised of 12 V wet type storage batteries (optional at shipment).

The battery, starter and starter solenoid positive terminals are booted with a non-conducting cover or otherwise insulated from unintended grounding. Battery cable leads from the batteries to the designated connection points in the starting circuit are minimum 6.53 mm D. (No. 2 AWG), neoprene or rubber insulated with a 1.5 mm (0.060 in.) minimum insulation thickness rated 80°C (176 °F) minimum. The starter and starter solenoid are all metal enclosed.

Wiring for automatic starting (negative ground)	Standard
Reference wiring diagram	10423 (see Section 13)
B.C.I. Group Size	8D

	12V	24V
Minimum recommended battery cold cranking amperes (CCA) ⁽¹⁾	1250 Amps	625 Amps
Minimum recommended battery reserve capacity	400 Minutes	800 Minutes
Maximum resistance of starting circuit	0.002 Ohms	0.004 Ohms
Typical cranking speed	120 RPM	120 RPM
Alternator (standard), internally regulated	95 Amps	45 Amps
Battery Cable Size (Metric) (For less than 1.5 meters long)	10.6 mm D.	10.6 mm D.
Battery Cable Size (US) (For less than 5 feet long)	00 AWG	00 AWG

(1) Cold soak at -18 °C (0 °F) or above

Cummins/Fleetguard® Filter Specifications

General Information

Fleetguard® is a subsidiary of Cummins Inc. Fleetguard® filters are developed through joint testing at Cummins and Fleetguard®. Fleetguard® filters are standard on new Cummins engines. Cummins Inc. recommends their use.

Fleetguard® products meet all Cummins Source Approval Test standards to provide the quality filtration necessary to achieve the engine's design life. If other brands are substituted, insist on products that the supplier has tested to meet Cummins high-quality standards.

Cummins can not be responsible for problems caused by non-genuine filters that do not meet Cummins performance or durability requirements.

Fuel Recommendations and Specifications

Fuel Recommendations



Do not mix gasoline, alcohol, or gasohol with diesel fuel. This mixture can cause an explosion.



Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors.

Use only number 2 diesel (ASTM no. 2D) fuel.

Any adjustment to compensate for reduced performance with a fuel system using alternate fuel is not warrantable.

Additional information for fuel recommendations and specifications can be found in Fuel for Cummins Engines, Bulletin No. 3379001. See Section 8, [Service Literature](#), for ordering information.

Lubricating Oil Recommendations and Specifications

Oil Performance Recommendations

Using quality engine lubricating oils, along with appropriate oil drain and filter change intervals, is a critical factor in maintaining engine performance and durability. Refer to Service Literature in Section 8 for reference to related Cummins service bulletins.

Cummins Engine Company, Inc. recommends the use of a high-quality SAE 15W-40 heavy-duty engine oil (such as Cummins Premium Blue®), which meets the American Petroleum Institute (API) performance classification CH4/SG.

A sulfated ash limit of 1.0 mass percent is suggested for optimum valve and piston deposit and oil consumption control. The sulfated ash must not exceed 1.85 mass percent.

New Engine Break-In Oils

Do not use special “break-in” lubricating oils for new or rebuilt Cummins engines. Use the same type of oil during the “break-in” as that which is used in normal operation.

Recommended Oil Change Intervals


The oil change interval for turbocharged engines is every 6 months or 250 hours.

Oil Viscosity Recommendations

The use of multiviscosity lubricating oil has been found to improve oil consumption control and improve engine cranking in cold temperatures while maintaining lubrication at high operating temperatures.

While 15W-40 oil is recommended for most climates, refer to the accompanying table for oil viscosity recommendations for extreme climates.

NOTE: Limited use of low-viscosity oils, such as 10W-30, can be used for easier starting and providing sufficient oil flow at ambient temperatures below -35°C [23°F]. However, continuous use of low viscosity oils can decrease engine life because of wear. Refer to the accompanying chart.

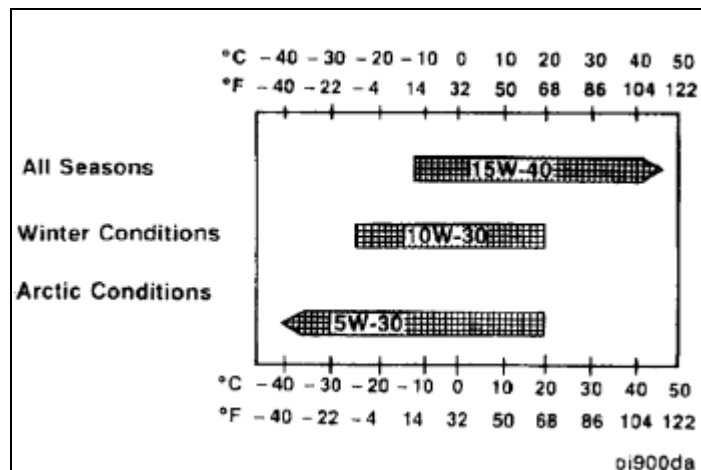

Coolant Recommendations and Specifications

General Information

Heavy-duty diesel engines require a balanced coolant mixture of water and antifreeze. Drain and replace the mixture every 1 year or 1500 hours of operation (whichever occurs first) to eliminate buildup of harmful chemicals.

Antifreeze is essential in any climate. It broadens the operating temperature range by lowering the coolant freezing point and by raising its boiling point. Do not use more than 50-percent antifreeze in the mixture unless additional freeze protection is required. Never use more than 68-percent antifreeze under any condition.

Use soft water in the coolant mixture. Contaminants in hard water neutralize the corrosion inhibitor components. Water must not exceed 300-ppm hardness or contain more than 100 ppm of either chloride or sulfate.

Specifications

Use low-silicate antifreeze that meets ASTM4985 test (GM6038M spec.) criteria.

Refer to Service Literature in Section 8 for reference to related Cummins service bulletins.

Concentration

Antifreeze must be used in any climate for both freeze and boiling point protection. Cummins recommends a 50-percent concentration level (40-percent to 60-percent range) of ethylene glycol or propylene glycol in most climates. Antifreeze at 68-percent concentration provides the maximum freeze protection and must never be exceeded under any condition. Antifreeze protection decreases above 68 percent.

Ethylene Glycol	Propylene Glycol
40% = -23°C [-10°F]	40% = -21°C [-6°F]
50% = -37°C [-34°F]	50% = -33°C [-27°F]
60% = -54°C [-65°F]	60% = -49°C [-56°F]
68% = -71°C [-90°F]	68% = -63°C [-82°F]

Concentration Testing

Antifreeze concentration must be checked using a refractometer (such as Fleetguard® Part No. CC2800). "Floating ball" types of density testers or hydrometers are not accurate enough for use with heavy-duty diesel cooling systems.

Engine Component Torque Values

Torque Table

Component	Wrench Size	N•m	ft-lb	in-lb
Aftercooler mounting	10 mm	24	18	
Aftercooler water hose clamp	8 mm	5		44
Alternator link (Delco 10-15 SI)	13 mm	24	18	
Alternator link (Delco 20-27 SI)	3/4 in	43	32	
Alternator mtg. bolt 10-15 SI	15 mm	43	32	
Alternator mtg. 27 SI	18 mm	77	57	
Alternator support (upper)	10 mm	24	18	
Belt tensioner flat bracket	Allen 5 mm	24	18	
Belt tensioner mounting	15 mm	43	32	
Crankshaft damper and pulley	15 mm	137	101	
Crossover clamp	5/16 in	5		44
Tee bolt type clamp	11 mm	8		71
Exhaust outlet pipe, v-band clamp	7/16 in	8		71
Fuel filter	75 to 85 mm	Install as specified by filter manufacturer.		
Fuel filter adapter nut	24 mm	32	24	
Lubricating oil filter	75 to 85 mm	3/4 of a turn after contact		
Lubricating oil cooler assembly	10 mm	24	18	
Lubricating oil pan drain plug	17 mm	80	59	
Lubricating oil pan heater plug	27 mm	80	59	
Lubricating oil pressure regulator plug	19 mm	80	59	
Starter mounting	10 mm	43	32	
Thermostat housing	10 mm	24	18	
Water inlet connection	15 mm	43	32	
Water pump mounting	13 mm	24	18	
Rocker lever (valve) cover	15 mm	12		106
Water-in-fuel (WIF) sensor	19 mm	Hand-tighten		

Sealants

General Information

Use either the sealants listed below or sealants containing equivalent properties.

Item Description	Sealing Method
Pipe plugs	Pre-coated Teflon™ or pipe sealer
Gaskets	No sealant required
Cups plugs	Loctite 277 or Cummins sealant, Part Number 3375068
O-rings	Lubriplate™ 105
Rear camshaft expansion plug	Loctite 277 or Cummins sealant, Part Number 3375068
Fuel pump studs	Loctite 242
Turbocharger drain (in block)	Loctite 277 or Cummins sealant, Part Number 3375068
Dipstick tube (in block)	Loctite 277 or Cummins sealant, Part Number 3375068
Wet flywheel housing to block	Three-Bond™ sealant, Part Number 3823494
Rear seal (in rear cover)	No sealant required
Timing pin housing capscrews	No sealant required
Side oil fill	Loctite 277 or Cummins sealant, Part Number 3375068
Oil pan at gear housing joint	Three-Bond™ sealant, Part Number 3823494

Capscrew Markings and Torque Values

General Information



When replacing capscrews, always use a capscrew of the same measurement and strength as the capscrew being replaced. Using the wrong capscrews can result in engine damage.

Always use the torque values listed in the following tables when specific torque values are not available.

Do not use the torque values in place of those specified in other sections of this manual.

The torque values in the table are based on the use of lubricated threads.




When the ft-lb value is less than 10, convert the ft-lb value to in-lb to obtain a better torque with an in-lb torque wrench. Example: 6 ft-lb equals 72 in-lb.

Metric Capscrew Identification

Sample:	M8-1.25 x 25		
Value:	M8	1.25	X 25
Meaning:	Major thread diameter in millimeters	Distance between threads in millimeters	Length in millimeters

Metric Capscrew Head Markings

Metric capscrews and nuts are identified by the grade number stamped on the head of the capscrew or on the surface of the nuts.

Commercial Steel Class	8.8	10.9	12.9
Capscrew Head Markings			

Metric Capscrew Torque Values


Class:	8.8				10.9				12.9			
	Cast Iron		Aluminum		Cast Iron		Aluminum		Cast Iron		Aluminum	
Diameter	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb
6	9	5	7	4	13	10	7	4	14	9	7	4
7	14	9	11	7	18	14	11	7	23	18	11	7
8	23	17	18	14	33	25	18	14	40	29	18	14
10	45	33	30	25	65	50	30	25	70	50	30	25
12	80	60	55	40	115	85	55	40	125	95	55	40
14	125	90	90	65	180	133	90	65	195	145	90	65
16	195	140	140	100	280	200	140	100	290	210	140	100
18	280	200	180	135	390	285	180	135	400	290	180	135
20	400	290	—	—	550	400	—	—	—	—	—	—

US Customary Capscrew Identification

Sample:	5/16 x 18 x 1-1/2		
Value:	5/16	18	1-1/2
Meaning:	Major thread diameter in inches	Number of threads per inch	Length in inches

U.S. Customary Capscrew Head Markings

U.S. Customary capscrews are identified by radial lines stamped on the head of the capscrew.

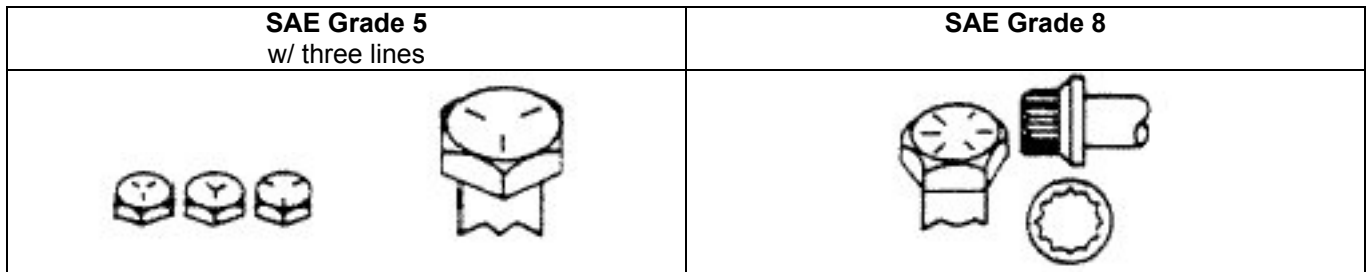

U.S. Customary Capscrew Torque Values

Grade	SAE Grade 5				SAE Grade 8			
	Cast Iron		Aluminum		Cast Iron		Aluminum	
	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb
1/4-20	9	7	8	6	15	11	8	6
1/4-28	12	9	9	7	18	13	9	7
5/16-18	20	15	16	12	30	22	16	12
5/16-24	23	17	19	14	33	24	19	14
3/8-16	40	30	25	20	55	40	25	20
3/8-24	40	30	35	25	60	45	35	25
7/16-14	60	45	45	35	90	65	45	35
7/16-20	65	50	55	40	95	70	55	40
1/2-13	95	70	75	55	130	95	75	55
1/2-20	100	75	80	60	150	110	80	60
9/16-12	135	100	110	80	190	140	110	80
9/16-18	150	110	115	85	210	155	115	85
5/8-11	180	135	150	110	255	190	150	110
5/8-18	210	155	160	120	290	215	160	120
3/4-10	325	240	255	190	460	340	255	190
3/4-16	365	270	285	210	515	380	285	210
7/8-9	490	360	380	280	745	550	380	280
7/8-14	530	390	420	310	825	610	420	310
1-8	720	530	570	420	1100	820	570	420
1-14	800	590	650	480	1200	890	650	480

Section 11 – Warranty Information

LIMITED WARRANTY

EXCLUSIVE EXPRESS LIMITED WARRANTY: Cummins NPower, LLC (“CNP”), expressly warrants to the original end consumer only that, for a period not to exceed the earlier of two (2) years or 2000 hours of use from the start-up date (or, if the original end consumer fails to register as purchaser with CNP, six (6) months from CNP shipment date), the diesel fire pump drivers, manufactured and sold by CNP, shall be free from defects in material and workmanship when used and serviced in accordance with the Operations and Maintenance manual for the applicable Cummins Fire Pump engine model (the “Exclusive Warranty”). The Exclusive Warranty is non-transferable and shall immediately terminate and be of no further force or effect upon the sale, lease, assignment, transfer or other disposition by an original end consumer of a Cummins Fire Pump engine that contains a diesel fire pump driver covered by this Exclusive Warranty. Nothing contained herein shall be construed to extend the Exclusive Warranty, and the Exclusive Warranty shall not be extended, to:

- Maintenance, adjustment, installation or start-up costs;
- Diesel fire pump driver failure due to normal wear, accident, misuse, abuse, neglect, improper installation or a defect attributable to a Cummins Fire Pump engine;
- Alterations or modifications not authorized in writing by CNP;
- Additional components added to a diesel fire pump driver package subsequent to shipment of the engine; or
- Starting batteries and heaters.

DISCLAIMER OF WARRANTIES: Except for the Exclusive Warranty provided above, which is in lieu of all other express and implied warranties, CNP EXPRESSLY DISCLAIMS ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION AND EXCLUSION OF REMEDIES: All claims under this Exclusive Warranty shall be deemed waived by the original end consumer if not submitted to CNP or an authorized distributor within thirty (30) days of initial discovery that a diesel fire pump driver is not conforming to the Express Warranty. The original end consumer’s remedy under this Exclusive Warranty is limited, in CNP’s reasonable discretion, to repair, replacement or other appropriate adjustment of a non-conforming diesel fire pump driver determined, upon CNP’s inspection, to have been properly installed, maintained and operated in accordance with the Operations and Maintenance manual furnished by CNP. IN ANY EVENT, CNP SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

The Cummins Industrial Warranty covers the base engine for a period of time not to exceed the earlier of two (2) years or 2000 hours of operation from the date of delivery and start-up of the engine. Reference bulletin numbers 3381321 US/Canada & 3381322 Outside US/Canada. Cummins Fire Power components are warranted for a period of time not to exceed the earlier of two (2) years or 2000 hours of operation from the start-up date of the fire pump system, and the coverage includes travel time and mileage for the first year of the Limited Warranty, and repair or replacement of parts and reasonable cost of labor. The Cummins Fire Power Limited Warranty does not cover failures or damage due to abuse or neglect and including, but not limited to: shipping damage, improper storage, improper installation, unauthorized modification or lack of maintenance. **Cummins Fire Power is not responsible for incidental or consequential damages.**

THIS PAGE INTENTIONALLY LEFT BLANK

Section 12 – Troubleshooting

Section Contents

	Page
Troubleshooting Procedures and Techniques	12-3
Troubleshooting Symptoms Charts	12-3
Alternator Overcharging with the Engine Running.....	12-4
Neither Battery is Charging with the Engine Running.....	12-5
Only One Battery is Charging with the Engine Running	12-7
Voltage Indications Differ	12-8
Coolant Contamination	12-9
Excessive Coolant Loss.....	12-11
Coolant Temperature Above Normal	12-12
Coolant Temperature Below Normal (Engine Off).....	12-16
Coolant Temperature Below Normal (Engine Running)	12-17
Raw Water Drain Steaming.....	12-18
Raw Water Solenoid Valve Fails to Operate	12-19
Auto Start Failure - Does not Crank on A.....	12-20
Auto Start Failure - Does not Crank on B.....	12-21
Auto Start Failure - Does not Crank on A or B	12-22
Auto Start Failure – Cranks but does not Start	12-23
Auto Start Failure – Engine Starts but Crank Terminate does not Occur	12-25
Manual Start Failure from Solenoid Lever - Does not Crank on A	12-27
Manual Start Failure from Solenoid Lever - Does not Crank on B	12-28
Manual Start Failure from Solenoid Lever - Does not Crank on A or B	12-29
Manual Start Failure from Control Panel - Does not Crank on A.....	12-30
Manual Start Failure from Control Panel - Does not Crank on B.....	12-31
Manual Start Failure from Control Panel - Does not Crank on A or B	12-32
Engine Cranks Normally But Will Not Start (No Exhaust Smoke)	12-33
Engine Cranks Slowly But Does Not Start.....	12-37
Engine Difficult to Start or Will Not Start - Exhaust Smoke Present.....	12-38
Engine Acceleration or Response Poor	12-42
Engine Noise Excessive - Mechanical.....	12-47
Engine Noise Excessive — Combustion Knocks.....	12-50
Engine Runs Rough at Idle	12-52

Section Contents (Cont)

	Page
Engine Runs Rough or Misfires Under Load	12-55
Engine Speed Surges at Idle.....	12-58
Engine Speed Surges Under Load.....	12-61
Engine Vibration Excessive at Rated Speed.....	12-63
Engine Stops During Operation	12-65
Engine Will Not Reach Rated Speed (RPM)	12-67
Engine Will Not Shut Off Remotely	12-71
Engine Will Not Shut Off Locally	12-72
Excessive Black Exhaust Smoke	12-73
Excessive White Exhaust Smoke	12-76
Fuel Consumption Is Excessive	12-78
Fuel or Lubricating Oil Leaking From Exhaust Manifold.....	12-80
Lubricating Oil Contaminated.....	12-82
Coolant in the Lubricating Oil.....	12-83
Fuel in the Lubricating Oil.....	12-85
Lubricating Oil Consumption Excessive.....	12-86
Lubricating Oil in the Coolant.....	12-88
Lubricating Oil Pressure High	12-89
Lubricating Oil Pressure is Low	12-91
Oil Level Rises	12-94
Lubricating Oil Sludge in the Crankcase Excessive	12-95
Turbocharger Leaks Engine Oil or Fuel	12-97
Crankcase Gases (Blowby) - Excessive	12-98
Engine Overspeed Trip.....	12-99
Tachometer Does Not Indicate Engine Speed	12-100

Troubleshooting Procedures and Techniques

General information

This guide describes some typical engine operating problems, their causes, and some acceptable corrections to those problems.



Performing troubleshooting procedures NOT outlined in this in Section can result in equipment damage or personal injury or death

Troubleshooting must be performed by trained, experienced technicians.

Consult a Cummins Authorized Repair Location for diagnosis and repair beyond that which is contained in this manual, and for symptoms not listed in this in section.

Before beginning any troubleshooting, refer to the General Safety Instructions in Section 1 of this manual.

Follow the suggestions below for troubleshooting:

Study the complaint thoroughly before acting.

Refer to the Engine Identification diagrams in Section 2, the System Diagrams in Section 6, and the Assembly Drawings in Section 13.

Do the easiest and most logical things first.

Find and correct the cause of the complaint.

Troubleshooting Symptoms Charts



Troubleshooting presents the risk of equipment damage, personal injury or death Troubleshooting must be performed by trained, experienced technicians.

Use the charts on the following pages of this section to aid in diagnosing specific engine symptoms.

Read each row of blocks from top to bottom.

Follow through the chart to identify the corrective action.

Alternator Overcharging with the Engine Running

NOTE: If the batteries are overcharged while the engine is not running, troubleshoot the customer supplied battery charging system.

Cause	Correction
Batteries have failed.	Check the condition of the batteries. Refer to <u>Battery Testing</u> Section 7. Replace any defective batteries.
OK ↓	
The internal voltage regulator in the alternator is malfunctioning.	Test the alternator electrically. Refer to <u>Alternator Checks and Testing</u> in Section 7. If required, replace the alternator. Refer to <u>Alternator Removal/Installation</u> Section 7.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Neither Battery is Charging with the Engine Running

NOTE: If one or both batteries do not charge with the engine stopped, troubleshoot the customer supplied battery charging system.

NOTE: If only one battery is maintaining charge, go to Only One Battery is Charging with the Engine Running.

Cause	Correction
Battery cables or connections are loose, broken, or corroded (excessive resistance).	Check the battery cables and connections. Refer to Battery Cables and Connections (013-009) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Ensure that all connections are free of corrosion and that no cables are broken.
OK ↓	
Battery condition is poor.	Load-test the battery. If the battery charge is low, charge the battery. If battery fails the second load test, replace the battery. Refer to Batteries (013-007) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Alternator rotor is not turning.	<p>Test the alternator mechanically. Refer to <u>Alternator Checks and Testing</u> in Section 7.</p> <p>If the alternator shaft does not spin freely because of a bad bearing, replace the alternator. Refer to <u>Alternator Removal/Installation</u> in Section 7.</p> <p>If the alternator does not turn because of a bad drive belt, replace the drive belt. Refer to <u>Belt Removal/Installation</u> in Section 7.</p> <p>If the alternator does not charge because of poor drive belt tension, replace the automatic tensioner. Refer to <u>Automatic Belt Tensioner Removal/Installation</u> in Section 7.</p> <p>If the alternator pulley is loose on the shaft, tighten the pulley. Refer to Alternator Pulley (013-006) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
OK ↓	

Neither Battery is Charging with the Engine Running (Cont)

Cause	Correction
Battery Isolator input has faulted.	<p>Test continuity from the alternator to the battery isolator input. Refer to <u>Drawing 10423 Sheet 2</u> in Section 13. Repair any open circuit.</p> <p>Test continuity through the battery isolator. If an internal open circuit is detected, replace the battery isolator. Refer to <u>Battery Isolator Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
Alternator excitation is lost.	<p>Test the alternator electrically. Refer to <u>Alternator Checks and Testing</u> in Section 7.</p> <p>If required, replace the replaceable diode. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.</p> <p>If required, locate and repair the open circuit or short to ground in the alternator excitation wiring.</p>
<p>OK ↓</p>	
Alternator connection to ground is poor.	<p>Inspect the alternator mounting hardware for a proper electrical connection to the battery. Remove any paint and debris from the ground connection. Check mounting bracket bolts for proper torque.</p>
<p>OK ↓</p>	
Alternator internal voltage regulator is malfunctioning.	<p>Test the alternator electrically. Refer to <u>Alternator Checks and Testing</u> in Section 7.</p> <p>If required, replace the alternator. Refer to <u>Alternator Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
Battery temperature is above specification.	<p>Position the batteries away from heat sources.</p>
<p>OK ↓</p>	
Contact an Authorized Cummins Repair Facility.	

Only One Battery is Charging with the Engine Running





NOTE: If one or both batteries do not charge with the engine stopped, troubleshoot the customer supplied battery charging system.

NOTE: If neither battery is maintaining charge, go to Neither Battery is Charging with the Engine Running.

Cause	Correction
Battery has failed.	<p>Test battery condition. Refer to <u>Battery Testing</u> in Section 7.</p> <p>If the battery has failed, replace the failed battery units. Refer to <u>Battery Removal/Installation</u> in Section 7.</p>
OK ↓	
Battery cables or connections are loose, broken, or corroded (excessive resistance).	<p>Check the battery cables and connections. Ensure that all connections are free of corrosion and that no cables are broken.</p>
OK ↓	
Battery isolator has failed.	<p>Remove the battery isolator. Refer to <u>Battery Isolator Removal/Installation</u> in Section 7.</p> <p>Test the internal diodes for open circuit or short to ground. Refer to the <u>Schematic, Electrical Wiring, 10423 Sheet 2</u> in Section 13.</p> <p>If required, obtain a replacement battery isolator.</p> <p>Install the battery isolator. Refer to <u>Battery Isolator Removal/Installation</u> in Section 7.</p>
OK ↓	
Voltmeter is providing false indication.	<p>Go to <u>Voltage Indications Differ</u> in this section.</p>
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Voltage Indications Differ



NOTE: The two voltmeters may differ slightly due to calibration differences between the meters. Normal differences in battery condition may also cause differences in indication. These are normal differences and require no action. A voltage difference of more than three or four volts should be investigated.

Cause	Correction
One battery is discharged or failing.	Check battery condition. Replace failing battery elements. Check wiring for corrosion. Ensure good electrical contact. Charge discharged batteries by running the engine or with an external battery charger. If the battery does not charge with the engine running, go to <u>Only One Battery is Charging with the Engine Running</u> .
OK 	
Fuse 1 or Fuse 2 is open.	Check for apparent wire damage or shorts to grounds. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Correct any electrical faults. Replace the failed fuse. If the fuse operates again, locate and correct the overload or repair the short circuit.
OK 	
Open circuit or short to ground in indicator wiring.	Locate and repair the electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK 	
Voltmeter has failed.	Remove wiring at the voltmeter and apply test voltage. If necessary, replace the faulted voltmeter. Refer to <u>Voltmeter Removal/Installation</u> in Section 7.
OK 	
Contact an Authorized Cummins Repair Facility.	

Coolant Contamination

Cause	Correction
Coolant is rusty and has debris.	<p>Drain and flush the cooling system. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p> <p>If the drained coolant has excessive rust or debris, change the coolant more frequently or contact a Cummins Authorized Repair Facility.</p> <p>Otherwise, refill with correct mixture of antifreeze and water. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p>
<p>OK ↓</p>	
Lubricating oil cooler is leaking oil into the coolant. Coolant begins to have the texture and color of chocolate pudding.	<p>Drain and flush the cooling system. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p> <p>Check the lubricating oil cooler for coolant leaks and cracks. Refer to <u>Lubricating Oil Cooler Removal/Installation</u> in Section 7. Replace the oil cooler gasket or other parts.</p> <p>Refill with correct mixture of antifreeze and water. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p> <p>If the problem persists, the cylinder block may be cracked or porous. Refer to a Cummins Authorized Repair Facility.</p>
<p>OK ↓</p>	

Coolant Contamination (Cont)




<p>Coolant Heat Exchanger is leaking raw water into the coolant. Coolant volume increases and pressure is relieved when the unit is operating. Antifreeze concentration decreases.</p>	<p>Drain and flush the cooling system. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p> <p>Remove Coolant Heat Exchanger. Refer to <u>Coolant Heat Exchanger Removal/Installation</u> in Section 7.</p> <p>Perform a pressure test of the raw water side of the heat exchanger. Refer to <u>Coolant Heat Exchanger Removal/Installation</u> in Section 7. If the heat exchanger leaks, it should be replaced.</p> <p>Install a known good Coolant Heat Exchanger. Refer to <u>Coolant Heat Exchanger Removal/Installation</u> in Section 7.</p> <p>Check and adjust raw water pressure regulator setpoints. Refer to <u>Raw Water Piping, Lineup, and Configuration</u> in Section 3.</p> <p>Check and, if required, replace the Zinc Plug. Refer to <u>Inspect Heat Exchanger Zinc Plug</u> in Section 5.</p> <p>Refill with correct mixture of antifreeze and water. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p>
	
<p>Coolant is inadvertently contaminated with unknown liquids.</p>	<p>Drain and flush the cooling system. Refill with correct mixture of antifreeze and water. Refer to <u>Drain and Flush Cooling System</u> in Section 5.</p>
	
<p>Contact an Authorized Cummins Repair Facility.</p>	

Excessive Coolant Loss

Cause	Correction
External engine leak is present at a seal, gasket, or draincock.	Inspect the engine and its components for seal, gasket, or draincock leaks. Correct any leaks.
OK ↓	
Pressure cap is malfunctioning or has low-pressure rating.	Inspect the pressure cap (Cummins Fire Power Part No. 11407). Refer to Radiator Pressure Cap (008-047) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Cooling system hose is collapsed, restricted, or leaking.	Inspect the hoses. Refer to <u>Check Hose Condition</u> in Section 5. Replace any damaged hoses. Refer to <u>Coolant Hose Removal/Installation</u> in Section 7.
OK ↓	
Engine is overheating.	Refer to the <u>Coolant Temperature Above Normal</u> symptom tree.
OK ↓	
Coolant is leaking into the lubricating oil.	Check for coolant in the oil. Refer to the <u>Coolant in the Lubricating Oil</u> symptom tree in this section.
OK ↓	
Coolant is leaking into the combustion chamber.	Remove the cylinder head, and inspect cylinder head, gasket, and pistons for evidence of coolant. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Refer to a Cummins Authorized Repair Facility.	

Coolant Temperature Above Normal

NOTE: The thermostat’s normal operating temperature range is 82-95 °C [180-203 °F]. The High Water Temperature lamp on the local control panel (see Instrument Panel in Section 2) illuminates at 93 (92-94) °C [200 (198-202) °F]. The lamp will only illuminate if the engine is running. If the lamp is illuminated or if temperature is otherwise excessive, the engine should be stopped as soon as practical and the problem corrected.

Cause	Correction
Raw water flow is improperly aligned.	<p>Check that the raw water manifold is aligned for normal flow through the solenoid valve (preferred) or bypass flow around the solenoid valve (alternative). (Refer to <u>Drawing 9659</u> in Section 13.)</p> <p>Align flow if required.</p>
	
Raw water pressure regulator is improperly adjusted.	<p>NOTE: Pressure should be about 414 kPa [60 psig] or slightly less.</p> <p>Check the raw water pressure indication.</p> <p>If pressure is indicated but is low, adjust the regulator (Refer to <u>Check Raw Water Pressure Regulator Setpoints</u> in Section 3.)</p> <p>If pressure is not indicated or is excessively low, go to <u>Raw water solenoid has failed</u> in this table.</p>
	
Raw water solenoid has failed.	<p>If pressure is excessively low when aligned for normal flow, open the bypass valves.</p> <p>Then, when practical, troubleshoot the raw water solenoid valve. Refer to <u>Raw Water Solenoid Valve Fails to Operate</u> in this section.</p> <p>If the solenoid valve operates, replace the pressure regulator. (Refer to <u>Raw Water Pressure Regulator Removal/Installation</u> in Section 7.)</p> <p>If pressure is excessively low when aligned for bypass flow, open the normal valves.</p> <p>Then, when practical, replace the pressure regulator. (Refer to <u>Raw Water Pressure Regulator Removal/Installation</u> in Section 7.)</p>
	

Coolant Temperature Above Normal (Cont)

Cause	Correction
Raw water piping or heat exchanger is plugged.	<p>Check the raw water strainer for blockage. Refer to <u>Drawing 9659</u> in Section 13. Clean the strainer if necessary.</p> <p>Check the Cummins supplied raw water piping for blockage. Clean the piping if necessary.</p> <p>Check the customer supplied raw water piping for blockage. Remove any blockage.</p> <p>Check for flow through the heat exchanger. If necessary, replace the heat exchanger. Refer to <u>Coolant Heat Exchanger Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
Coolant level is below specification.	<p>Check the coolant level. Refer to <u>Check Coolant Level</u> in Section 5. Add coolant as required.</p> <p>If coolant level was excessively low, go to <u>Excessive Coolant Loss</u> in this section.</p>
<p>OK ↓</p>	
Cooling system hose is collapsed or restricted.	<p>Inspect the hoses. Refer to <u>Check Hose Condition</u> in Section 5. Replace any damaged hoses. Refer to <u>Coolant Hose Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
Coolant thermostat is malfunctioning.	<p>Remove and test the coolant thermostat. Refer to <u>Coolant Thermostat Removal/Installation</u> in Section 7. Replace the thermostat if it is defective.</p>
<p>OK ↓</p>	
Coolant water pump is malfunctioning.	<p>Remove and inspect the water pump. Refer to <u>Coolant Water Pump Removal/Installation</u> in Section 7. Replace the thermostat if it is defective.</p>
<p>OK ↓</p>	

Coolant Temperature Above Normal (Cont)

Cause	Correction
Lubricating oil is contaminated with coolant or fuel.	Check the appearance of the lubricating oil. If the color and texture is abnormal, refer to the <u>Lubricating Oil Contaminated</u> symptom tree.
OK ↓	
Cooling system hose is collapsed, restricted, or leaking.	Inspect the hoses. Refer to <u>Check Hose Condition</u> in Section 5. Replace any damaged hoses. Refer to <u>Coolant Hose Removal/Installation</u> in Section 7.
OK ↓	
Coolant mixture of antifreeze and water is not correct.	Verify the concentration of antifreeze in the coolant. Refer to <u>Check Cooling System Condition</u> in Section 5. Add antifreeze or water to correct the concentration. Refer to <u>Coolant Recommendations and Specifications</u> in Section 10.
OK ↓	
Lubricating oil level is above or below specification.	Check the oil level. Refer to <u>Check Engine Oil Level</u> in Section 5. Add or drain oil, if necessary.
OK ↓	
Coolant temperature sender is malfunctioning.	Check for an open or short circuit at the temperature sender. If required, replace the temperature sender. Refer to <u>Coolant Temperature Sender Removal/Installation</u> in Section 7.
OK ↓	
Coolant temperature gauge is malfunctioning.	Replace the temperature gauge. Refer to <u>Coolant Temperature Gauge Removal/Installation</u> in Section 7.
OK ↓	




Coolant Temperature Above Normal (Cont)

Cause	Correction
Coolant temperature switch is malfunctioning.	Remove the temperature switch. Refer to <u>Coolant Temperature Switch Removal/Installation</u> in Section 7. Test the temperature switch. Repair or replace the switch, if necessary.
OK ↓	
Refer to a Cummins Authorized Repair Facility.	

Coolant Temperature Below Normal (Engine Off)



Cause	Correction
The 120 VAC power supply to the coolant heater is not connected.	Connect the power supply. Correct any electrical faults in the supply circuit.
OK ↓	
The heater's overload thermostat has operated.	Ensure that there is coolant in the heater. Allow time for the automatic overload reset to occur.
OK ↓	
Coolant temperature sender is malfunctioning.	Replace the temperature sender. Refer to <u>Coolant Temperature Sender Removal/Installation</u> in Section 7.
OK ↓	
Coolant temperature gauge is malfunctioning.	Replace the temperature sender. Refer to <u>Coolant Temperature Sender Removal/Installation</u> in Section 7.
OK ↓	
Coolant is not free to circulate through the heater.	Ensure that the coolant hoses are clear. Refer to <u>Coolant Hose Removal/Installation</u> in Section 7.
OK ↓	
The coolant heater has failed electrically.	Replace the coolant heater. Refer to <u>Coolant Heater Removal/Installation</u> in Section 7.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Coolant Temperature Below Normal (Engine Running)

Cause	Correction
Coolant thermostat has failed open.	Test operation of the thermostat. Refer to <u>Coolant Thermostat Tests</u> in Section 7. If necessary, replace the thermostat. Refer to <u>Coolant Thermostat Removal/Installation</u> in Section 7.
OK 	
Coolant temperature sender is malfunctioning.	Replace the temperature sender. Refer to <u>Coolant Temperature Sender Removal/Installation</u> in Section 7.
OK 	
Coolant temperature gauge is malfunctioning.	Replace the temperature gauge. Refer to <u>Coolant Temperature Gauge Removal/Installation</u> in Section 7.
OK 	
Contact an Authorized Cummins Repair Facility.	




Raw Water Drain Steaming

NOTE: The raw water drain from the Coolant Heat Exchanger may steam if raw water flow is inadequate when the engine is running. It may also steam shortly after the engine is stopped. If coolant is leaking into the raw water drain piping, the steaming may last for some time while the engine cools. Antifreeze may also be observed in the raw water drain.

Cause	Correction
Raw water flow did not start when the engine started.	Check engine coolant temperature. Go to <u>Coolant Temperature Above Normal</u> in this section.
OK 	
Engine coolant is leaking into the raw water piping in the coolant heat exchanger.	When practical, remove the coolant heat exchanger and perform the pressure test. Refer to <u>Coolant Heat Exchanger Removal/Installation</u> in Section 7. If pressure is not maintained, replace the heat exchanger.
OK 	
Contact an Authorized Cummins Repair Facility.	

Raw Water Solenoid Valve Fails to Operate

NOTE: The raw water solenoid failure may fail to open or to close. The normally closed valve may fail to open when the engine starts. This fault will prevent raw water flow through the normal valves. Bypass flow should be aligned in this event. The valve may also fail to close because of mechanical blockage. In this event, the raw water flow from the heat exchanger does not stop when it should. Depending upon the fire protection system piping, the open solenoid valve may drain all water from the fire protection system piping that is higher than the engine's piping.

Cause	Correction
Solenoid valve fails to close when the engine stops.	Replace the solenoid valve. Refer to <u>Raw Water Solenoid Valve Removal/Installation</u> in Section 7. Clean the raw water strainer more frequently. Increase the frequency of operational testing.
OK 	
Solenoid valve fails to energize.	Check electrical continuity and insulation from ground to the solenoid. Repair any open or short circuits in the wiring.
OK 	
Solenoid fails to open mechanically.	NOTE: Apply the correct operating voltage, 12 VDC standard (24 VDC optional) depending upon the model. Apply temporary voltage to the solenoid. If the solenoid fails to operate, replace it. Refer to <u>Raw Water Solenoid Valve Removal/Installation</u> in Section 7.
OK 	
Contact an Authorized Cummins Repair Facility.	

Auto Start Failure - Does not Crank on A

NOTE: The fire pump engine will not crank automatically when solenoid A is selected at the fire protection system. However, it does start automatically when solenoid B is selected.

Cause	Correction
The electrical connection from the fire protection system to Terminal Board TB 9 has failed.	Test continuity and insulation from ground between the fire protection system and the engine control panel. Locate and repair any electrical fault in the field wiring or in the fire protection system panel.
OK ↓	
The electrical connection from Terminal Board TB 9 to Relay K1 has failed.	Test continuity and insulation from ground between the TB 9 and Relay K1. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Relay K1 has failed.	Check de-energized continuity at Relay K1 pin 87 to 30. Replace K1 if the circuit is open.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Auto Start Failure - Does not Crank on B

NOTE: The fire pump engine will not crank automatically when solenoid B is selected at the fire protection system. However, it does start automatically when solenoid A is selected.

Cause	Correction
The electrical connection from the fire protection system to Terminal Board TB 10 has failed.	Test continuity and insulation from ground between the fire protection system and the engine control panel. Locate and repair any electrical fault in the field wiring or in the fire protection system panel.
OK ↓	
The electrical connection from Terminal Board TB 10 to Relay K2 has failed.	Test continuity and insulation from ground between the TB 10 and Relay K2. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Relay K2 has failed.	Check de-energized continuity at Relay K2 pin 87 to 30. Replace K1 if the circuit is open.
OK ↓	
Contact an Authorized Cummins Repair Facility.	





Auto Start Failure - Does not Crank on A or B

NOTE: The fire pump engine will not crank automatically when either solenoid A or solenoid B is selected at the fire protection system. However, it does crank and start when started locally. If local starting problems are identified, go to the applicable Manual Start Failure troubleshooting table.

Cause	Correction
The Fire Protection System fails to produce either redundant start signal to the fire pump.	Locate and correct the common mode fault in the Fire Protection System.

Auto Start Failure – Cranks but does not Start

NOTE: The fire pump engine will crank automatically when either solenoid A or solenoid B is selected at the fire protection system. However, the engine does not start. The engine will start locally. If local starting problems are identified, go to the applicable Manual Start Failure troubleshooting table.

Cause	Correction
The overspeed switch as actuated. The overspeed lamp is illuminated on the local control panel.	Press the RESET switch on the local control panel.
	
Control power from the Fire Protection System is not available at local control panel TB1.	When practical, locate and correct the fault in the Fire Protection System or the field wiring to the local control panel.
	
Circuit Breaker CB is open in the local control panel.	<p>Check whether Circuit Breaker CB at the local control panel is open. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.</p> <p>If open, reset the circuit breaker.</p> <p>Locate and correct any electrical faults in the control panel.</p> <p>Press the RESET switch on the local control panel.</p>
	
The AUTO/MANUAL Rocker Switch fails to select AUTO mode.	<p>When practical, open Circuit Breaker CB at the local control panel and test switch operation electrically. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.</p> <p>If required, replace the switch or repair other electrical faults.</p> <p>When done, close Circuit Breaker CB at the local control panel and reset rocker switch to Auto mode.</p>
	

Auto Start Failure – Cranks but does not Start (Cont)

<p>The overspeed switch has failed.</p>	<p>Check power and grounding to the overspeed switch. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Repair any electrical faults.</p> <p>If required, test and adjust the overspeed setting. Refer to <u>Overspeed Setpoint Adjustment and Testing</u> in Section 3.</p> <p>Replace the overspeed switch. Refer to <u>Overspeed Switch Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
<p>Contact an Authorized Cummins Repair Facility.</p>	

Auto Start Failure – Engine Starts but Crank Terminate does not Occur




Cause	Correction
<p>The overspeed switch not correctly adjusted or has failed.</p>	<p>When practical, with the engine running, verify speed sensor input to the overspeed switch. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.</p> <p>If signal is not present, go to The speed sensor has failed. The tachometer also indicates zero speed in this table.</p> <p>Adjust the overspeed switch crank terminate setpoint. Refer to instructions in Section 3.</p> <p>If required, replace the overspeed switch. Refer to <u>Overspeed Switch Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
<p>Fuse 3 has opened. The raw water solenoid valve also fails to open.</p>	<p>Open the raw water bypass valves.</p> <p>When practical, replace Fuse F3.</p> <p>Locate and repair any local electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.</p>
<p>OK ↓</p>	
<p>The speed sensor has failed. The tachometer also indicates zero speed.</p>	<p>When practical, locate and repair any electrical fault in the speed sensor circuitry. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.</p> <p>If necessary, replace the speed sensor. Refer to <u>Speed Sensor Removal/Installation</u> in Section 7.</p>
<p>OK ↓</p>	
<p>An electrical fault is present in the Fire Protection System.</p>	<p>When practical, test continuity and insulation from ground in the fire protection system and the engine control panel. Locate and repair any electrical fault in the fire protection system panel.</p>
<p>OK ↓</p>	
<p>An electrical fault is present between Control Panel TB 2 and the Fire Protection System.</p>	<p>When practical, test continuity and insulation from ground between the fire protection system and the engine control panel. Locate and repair any electrical fault in the field wiring.</p>
<p>OK ↓</p>	

**Auto Start Failure – Engine Starts but Crank Terminate does not Occur
(Cont)**

An electrical fault is present in the control panel between Fuse F3 and TB 2.	When practical, test continuity and insulation from ground between Fuse F3 and TB 2. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Manual Start Failure from Solenoid Lever - Does not Crank on A

NOTE: The fire pump engine will not crank locally from the solenoid lever when solenoid A is actuated. However, it does start when solenoid B is actuated.

Cause	Correction
Battery A is discharged or has failed.	Recharge or replace the battery.
OK 	
An electrical fault is present between Battery A and the starter motor.	When practical, test continuity and insulation from ground between Battery A and the starter motor. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK 	
Solenoid A's switch contact does not close.	Remove and test Solenoid A lever and switch operation. Refer to <u>Crank Solenoid Assembly Removal/Installation</u> in Section 7. If required, replace Solenoid A.
OK 	
Contact an Authorized Cummins Repair Facility.	

Manual Start Failure from Solenoid Lever - Does not Crank on B

NOTE: The fire pump engine will not crank locally from the solenoid lever when solenoid B is actuated. However, it does start when solenoid A is actuated.

Cause	Correction
Battery B is discharged or has failed.	Recharge or replace the battery.
<p>OK ↓</p>	
An electrical fault is present between Battery B and the starter motor.	When practical, test continuity and insulation from ground between Battery B and the starter motor. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
<p>OK ↓</p>	
Solenoid B's switch contact does not close.	Remove and test Solenoid B lever and switch operation. Refer to <u>Crank Solenoid Assembly Removal/Installation</u> in Section 7. If required, replace Solenoid B.
<p>OK ↓</p>	
Contact an Authorized Cummins Repair Facility.	

Manual Start Failure from Solenoid Lever - Does not Crank on A or B

NOTE: The fire pump engine will not crank locally when either solenoid lever is actuated.

Cause	Correction
Starter motor has failed.	Replace the starter motor. Refer to <u>Starter Motor Removal/Installation</u> in Section 7.
OK ↓	
An electrical fault is present in the power or ground circuit for the starter motor.	Test continuity and insulation from ground between the battery splice, the ground connection, and the starter motor. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Engine is seized.	Bar the engine over to break the seizure.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Manual Start Failure from Control Panel - Does not Crank on A

NOTE: The fire pump engine will not crank locally from the control panel when CRANK BATT A is selected. However, it does start when CRANK BATT B is selected.

Cause	Correction
The CRANK BATT A switch fails to make contact.	When practical, test the electrical operation of the CRANK BATT A switch. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the switch if faulted.
OK ↓	
Relay K1 fails in the local manual mode.	When practical, test the electrical operation of the Relay K1. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the relay if faulted.
OK ↓	
Solenoid A fails to energize due to electrical fault in the power or ground circuit.	Test continuity and insulation from ground between the CRANK BATT A switch, Relay K1, and the starter Solenoid. Also, check the solenoid coil connection to ground. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Solenoid A fails to operate.	When practical, test the electrical operation of the Solenoid A. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the solenoid if faulted.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Manual Start Failure from Control Panel - Does not Crank on B

NOTE: The fire pump engine will not crank locally from the control panel when CRANK BATT B is selected. However, it does start when CRANK BATT A is selected.

Cause	Correction
The CRANK BATT B switch fails to make contact.	When practical, test the electrical operation of the CRANK BATT B switch. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the switch if faulted.
OK ↓	
Relay K2 fails in the local manual mode.	When practical, test the electrical operation of the Relay K2. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the relay if faulted.
OK ↓	
Solenoid B fails to energize due to electrical fault in the power or ground circuit.	Test continuity and insulation from ground between the CRANK BATT B switch, Relay K2, and the starter Solenoid. Also, check the solenoid coil connection to ground. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Solenoid B fails to operate.	When practical, test the electrical operation of the Solenoid B. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the solenoid if faulted.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Manual Start Failure from Control Panel - Does not Crank on A or B

NOTE: The fire pump engine will not crank locally from the control panel when either CRANK BATT A or CRANK BATT B is selected. However, it does start when a solenoid lever is actuated.

Cause	Correction
The MANUAL mode rocker switch contact fails to close.	When practical, test the electrical operation of the AUTO/MANUAL rocker switch. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace the solenoid if faulted.
OK ↓	
An electrical fault exists in the signal power circuit or the ground to the Relays K1 and K2.	Test continuity and insulation from ground between the AUTO/MANUAL rocker switch and the relays. Also, check the relay connection to ground. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Fuse F3 has opened. The raw water solenoid valve also fails to open.	Open the raw water bypass valves. When practical, replace Fuse F3. Locate and repair any local electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
An electrical fault exists in the signal power circuit or the ground to the overspeed switch's crank circuit.	Test continuity and insulation from ground between Fuse F3 and the overspeed switch's crank circuit. Also, check the crank circuit output to the CRANK BATT switches. Locate and repair any electrical fault. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
Overspeed switch crank circuit fails to reset with engine shutdown.	If required, test and adjust the crank setting. Refer to <u>Overspeed Setpoint Adjustment and Testing</u> in Section 3. If required, replace the overspeed switch. Refer to <u>Overspeed Switch Removal/Installation</u> in Section 7.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Engine Cranks Normally But Will Not Start (No Exhaust Smoke)

Cause	Correction
No fuel in supply tank.	Check and replenish fuel supply. Check fittings and hose connections and hose conditions.
OK ↓	
Air is in the fuel system.	<p>Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank standpipe and fuel filters as necessary.</p> <p>Vent air from the system. Refer to <u>Air in Fuel</u> in Section 7.</p>
OK ↓	
Fuel Shutoff Valve (FSOV) fails to open.	<p>If the fuel shutoff valve is not functioning, manually override it. Refer to <u>Emergency Starting With Failed Fuel Shut-Off Solenoid</u> in Section 3.</p> <p>When practical, check the wiring for electrical faults. Refer to <u>Drawing 10423 Sheet 2</u> in Section 13.</p> <p>If the wiring is OK, replace the Fuel Shutoff Valve. Refer to <u>Fuel Shutoff Valve (FSOV) Removal/Installation</u> in Section 7.</p>
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine from a tank of high-quality fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	
Fuel connections on the suction side of the fuel lift pump are loose.	Tighten all the fuel fittings and connections between the fuel tanks and fuel lift pump.
OK ↓	

Engine Cranks Normally But Will Not Start (No Exhaust Smoke) (Cont)

Cause	Correction
Fuel lift pump malfunctioning.	Inspect the fuel transfer pump. Replace if necessary. Refer to Fuel Lift Pump (005-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel filter is blocked.	Remove and inspect the fuel filter. Replace the fuel filter if necessary. Refer to <u>Change Fuel Filter (Spin-on Type)</u> in Section 5.
OK ↓	
Fuel suction standpipe in the fuel tank is broken.	Check and repair the standpipe, if necessary.
OK ↓	
Fuel tank air breather hole is clogged.	Clean the fuel tank breather.
OK ↓	
Fuel supply line restriction is present.	Clean all pre-filters and screens. Check the fuel suction line for restriction.
OK ↓	
Excessive water in the fuel filter.	Drain the fuel water separator and replace the fuel filter. Refer to <u>Change Fuel Filter (Spin-on Type)</u> in Section 5.
OK ↓	
Intake and exhaust system restricted.	Check the intake and exhaust systems for restrictions. Inspect the intake air filter and replace as necessary. Refer to Air Leaks, Air Intake and Exhaust Systems (010-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Engine Cranks Normally But Will Not Start (No Exhaust Smoke) (Cont)

Cause	Correction
Fuel injection pump not getting fuel or air in fuel.	Check fuel flow or bleed fuel system. Refer to Air in Fuel (006-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel return restriction excessive.	Inspect the fuel return lines for restrictions. Refer to Fuel Drain Line Restriction (006-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel pump return overflow valve is malfunctioning.	Inspect the return overflow valve. Replace if necessary. Refer to Fuel Return Overflow Valve (006-044) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Injection pump driveshaft or driveshaft key is damaged.	Repair or replace the injection pump. Refer to <u>Fuel Injection Pump Removal/Installation</u> in Section 7.
OK ↓	
Fuel injection pump is malfunctioning.	Remove the fuel injection pump. Refer to <u>Fuel Injection Pump Removal/Installation</u> in Section 7. Check the calibration of the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Engine Cranks Normally But Will Not Start (No Exhaust Smoke) (Cont)

Cause	Correction
Camshaft timing is not correct (after engine rebuild or repair).	Check the gear train timing alignment. Refer to Camshaft (001-008) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injectors are plugged.	Replace the fuel injectors. Refer to <u>Fuel Injectors Removal/Installation</u> in Section 7.
OK ↓	
Throttle linkage misadjusted or damaged.	Adjust or repair the linkage. Refer to instructions in Section 7.
OK ↓	
Starting motor rotation is not correct.	Check the direction of crankshaft rotation. Refer to instructions in Section 7. Replace the starting motor if necessary. Refer to <u>Starter Motor Assembly Removal/Installation</u> in Section 7.
OK ↓	
Starting motor is not turning the engine.	Replace the starting motor if necessary. Refer to <u>Starter Motor Assembly Removal/Installation</u> in Section 7.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Engine Cranks Slowly But Does Not Start

NOTE: Typical engine cranking speed is 120 RPM. Engine cranking speed can be checked with a hand-held tachometer, stroboscope, or electronic service tool.

Cause	Correction
The batteries are cold.	Ensure that the batteries are protected from extreme temperatures.
OK ↓	
The battery cables or connections are loose, broken, or corroded creating excessive resistance.	Check the battery cables and connections. Ensure that connections are clean and tight.
OK ↓	
The battery is not properly charged or has failed.	Recharge the battery. If the battery does not take the charge, replace it.
OK ↓	
Lubricating oil level is too high.	Check the oil level. Refer to <u>Check Engine Oil Level</u> in Section 7. Drain any excess oil.
OK ↓	
Lubricating oil is the wrong grade or type.	Check the grade and type of oil. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10. If the wrong type or grade of oil is present, drain and replace it. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.
OK ↓	
Engine temperature is too low.	Troubleshoot as per <u>Coolant Temperature Below Normal (Engine Off)</u> in this section.
OK ↓	
Starting motor is malfunctioning.	Replace the starting motor. Refer to <u>Starter Motor Assembly Removal/Installation</u> in Section 7.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Engine Difficult to Start or Will Not Start - Exhaust Smoke Present








NOTE: If the engine cranks slowly, refer to Engine Cranks Slowly But Does Not Start in this section.

Cause	Correction
Fuel tank level is low.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
OK ↓	
Fuel drain line is restricted.	Check the fuel drain lines for restriction. Clear or replace the fuel lines, check valves, or tank vents as necessary.
OK ↓	
Fuel return line improperly plumbed.	Make sure the fuel return line is plumbed to the bottom of the fuel tank.
OK ↓	
Fuel filter is clogged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 5.
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine from a tank of high-quality fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	
Fuel shutoff valve (FSOV) is malfunctioning.	Check for loose wires and verify that the fuel shutoff valve solenoid is functioning. Check to be sure manual shutoff lever is not binding at the injection pump. Refer to Fuel Pump Control Lever and Spring (005-018) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Engine Difficult to Start or Will Not Start - Exhaust Smoke Present (Cont)

Cause	Correction
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Replace the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Air is present in the fuel supply system to the engine.	Check for air in the fuel system. Refer to Air in Fuel (006-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel pre-filter is clogged.	Clean the customer-supplied fuel pre-filter.
OK ↓	
Fuel pump return overflow valve is malfunctioning.	Inspect the return overflow valve. Replace if necessary. Refer to Fuel Return Overflow Valve (006-044) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel suction line is restricted.	Check the fuel suction line for restriction.
OK ↓	
Fuel connections on the suction side of the fuel lift pump are loose.	Tighten all the fuel fittings and connections between the fuel tanks and fuel lift pump.
OK ↓	

Engine Difficult to Start or Will Not Start - Exhaust Smoke Present (Cont)

Cause	Correction
Fuel suction standpipe in the fuel tank is broken.	Check and repair the standpipe, if necessary.
	
Fuel tank air breather hole is clogged.	Clean the fuel tank breather.
	
Fuel lift pump is malfunctioning.	Check the fuel lift pump for correct operation. Check the pump output pressure. Replace the fuel lift pump if necessary. Refer to Fuel Lift Pump Removal/Installation in Section 7.
	
Throttle linkage misadjusted or damaged.	Adjust or repair the linkage. Refer to instructions in Section 7.
	
Intake air flow is restricted.	Check the air intake system for restriction. Refer to Check Air Cleaner Service Indicator in Section 5. Replace the air filter if required.
	
Charge air cooler air flow is restricted (CFP83-F45 Only), intake air is overheated.	Inspect the air cooler for internal and external restrictions. Replace the restricted cooler if necessary. Refer to Clean Charge Air Cooler (CAC) in Section 7.
	
Aftercooler air flow is restricted (CFP83-F10, F20, F30 Only), intake air is overheated.	Inspect the air cooler for internal and external restrictions. Replace the restricted cooler if necessary. Refer to Aftercooler Assembly (010-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	

Engine Difficult to Start or Will Not Start - Exhaust Smoke Present (Cont)

Cause	Correction
Exhaust air flow is restricted.	Check the exhaust air piping for restriction. Remove any restriction.
OK ↓	
Valves are not sealing correctly.	Check and adjust the valves. Refer to Valve, Cylinder Head (002-020) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Injectors worn or malfunctioning.	Remove and test the injectors. Replace as necessary. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Engine compression is low.	Perform the compression check to identify the malfunction. Correct as required. Refer to Engine Testing (Chassis Dynamometer) (014-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	








Engine Acceleration or Response Poor

Cause	Correction
Fuel level is low in the tank.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
OK ↓	
Fuel inlet restriction.	Check for fuel inlet restriction. Refer to Fuel Inlet Restriction (006-020) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel drain line is restricted.	Check the fuel drain lines for restriction. Clear or replace the fuel lines, check valves, or tank vents as necessary.
OK ↓	
Fuel filter is clogged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 7.
OK ↓	
Fuel leak.	Check the fuel lines, fuel connections, and fuel filters for leaks. Check the fuel lines to the supply tanks.
OK ↓	
Air is present in the fuel supply system to the engine.	Check for air in the fuel system. Refer to Air in Fuel (006-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine from a tank of high-quality fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	

Engine Acceleration or Response Poor (Cont)

Cause	Correction
Fuel supply line restriction between the fuel pump and the injectors.	Check the fuel supply line from the fuel pump to the cylinder head for sharp bends that can cause restrictions. Refer to Fuel Supply Lines (006-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fire pump is not correctly sized for the engine.	Check for correct pump sizing.
OK ↓	
Air intake or exhaust leaks.	Inspect the air intake and exhaust systems for air leaks. Refer to Air Leaks, Air Intake and Exhaust Systems (010-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Replace the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel pre-filter is clogged.	Clean the customer-supplied fuel pre-filter.
OK ↓	






Engine Acceleration or Response Poor (Cont)

Cause	Correction
Fuel pump return overflow valve is malfunctioning.	Inspect the return overflow valve. Replace if necessary. Refer to Fuel Return Overflow Valve (006-044) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Fuel suction line is restricted.	Check the fuel suction line for restriction.
	
Fuel connections on the suction side of the fuel lift pump are loose.	Tighten all the fuel fittings and connections between the fuel tanks and fuel lift pump.
	
Fuel tank air breather hole is clogged.	Clean the fuel tank breather.
	
Fuel lift pump is malfunctioning.	Check the fuel lift pump for correct operation. Check the pump output pressure. Replace the fuel lift pump if necessary. Refer to <u>Fuel Lift Pump Removal/Installation</u> in Section 7.
	
Turbocharger wastegate is malfunctioning (if equipped).	Check the wastegate for correct operation. Refer to Turbocharger Wastegate Actuator (010-050) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Turbocharger wheel clearance is out of specification.	Check the radial bearing clearance and axial clearance. Inspect the turbocharger. Repair or replace the turbocharger if necessary. Refer to Turbocharger Axial Clearance (010-038) and Turbocharger Radial Bearing Clearance (010-047) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	

Engine Acceleration or Response Poor (Cont)

Cause	Correction
Turbocharger is malfunctioning.	Replace the turbocharger if necessary. Refer to Turbocharger (010-033) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Injectors worn or malfunctioning.	Remove and test the injectors. Replace as necessary. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Intake air flow is restricted.	Check the air intake system for restriction. Refer to <u>Check Air Cleaner Service Indicator</u> in Section 7. Replace the air filter if required.
OK ↓	
Exhaust system restriction is not within specification.	Check the exhaust system for restrictions. Refer to Exhaust Restriction (011-009) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Exhaust air is leaking.	Check the exhaust piping for loose or damaged piping connections and missing pipe plugs. Check the turbocharger and exhaust manifold mounting. If required, replace the turbocharger. Refer to <u>Turbocharger Removal/Installation</u> in Section 7.
OK ↓	
The charge air cooler is restricted or leaking (CFP83-F40 Only).	Inspect the charge air cooler for air restrictions or leaks. If required, replace the charge air cooler. Refer to <u>Charge Air Cooler Removal/Installation</u> in Section 7.
OK ↓	








Engine Acceleration or Response Poor (Cont)

Cause	Correction
The aftercooler is restricted or leaking (CFP83-F10, F20, F30 Only).	Inspect the air cooler for internal and external restrictions. Replace the restricted cooler if necessary. Refer to Aftercooler Assembly (010-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Overhead adjustments are not correct.	Measure and adjust the overhead settings. Refer to Overhead Set (003-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Engine compression is low.	Perform the compression check to identify the malfunction. Correct as required. Refer to Engine Testing (Chassis Dynamometer) (014-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Valves are not sealing correctly.	Check and adjust the valves. Refer to Valve, Cylinder Head (002-020) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Internal engine damage.	Analyze the oil and inspect the filters to locate an area of probable damage. Refer to Lubricating Oil Analysis (007-051) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Refer to a Cummins Authorized Repair Facility.	

Engine Noise Excessive - Mechanical

Cause	Correction
Lubricating oil is thin or diluted.	<p>Check the oil level. Refer to <u>Check Lubricating Oil Level</u> in Section 7. If the oil level is above the high mark, go to <u>Oil Level Rises</u> in this section.</p> <p>Otherwise, ensure that the correct type and grade of lubricating oil is being used. Refer to the <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.</p>
<p>OK ↓</p>	
Lubricating oil pressure is below specification.	<p>NOTE: Oil pressure should range between 69 and 345 kPa [10 to 50 PSI] with the engine running.</p> <p>Check the oil pressure on the local control panel.</p> <p>If the pressure is low, refer to the <u>Lubricating Oil Pressure Low</u> symptom tree in this section.</p>
<p>OK ↓</p>	
Vibration damper is damaged.	<p>Inspect the vibration damper. Refer to <u>Inspect Vibration Damper</u> in Section 5. If the vibration damper is damaged, refer to a Cummins Authorized Repair Facility.</p>
<p>OK ↓</p>	
Engine mounts are worn or damaged.	<p>Inspect the engine mounts. If the engine mounts are worn or damaged, refer to a Cummins Authorized Repair Facility.</p>
<p>OK ↓</p>	
Coolant temperature is above specification.	<p>Check the coolant temperature indication on the local control panel. If the high coolant temperature light is illuminated, refer to the <u>Coolant Temperature Above Normal</u> symptom tree in this section.</p>
<p>OK ↓</p>	







Engine Noise Excessive – Mechanical (Cont)

Cause	Correction
Drive belt is squeaking due to insufficient tension or high loading.	Check the automatic belt tensioner. If required, replace the tensioner. Refer to <u>Automatic Belt Tensioner Removal/Installation</u> in Section 7.
	
Intake air flow is restricted.	Check the air intake system for restriction. Refer to <u>Check Air Cleaner Service Indicator</u> in Section 7. Replace the air filter if required.
	
Exhaust air flow is restricted.	Check the exhaust air piping for restriction. Remove any restriction.
	
Intake air or exhaust leaks.	Refer to the <u>Excessive Black Exhaust Smoke</u> symptom tree in this section.
	
Turbocharger noise.	Turbocharger fluttering noises can be heard during deceleration or quick throttle closing. This noise is normal.
	
Air leakage between the turbocharger and head.	Tighten the clamp between turbocharger and head. Repair leaks between turbocharger and head.
	
Valve lash excessive.	Adjust valves. Make sure the push rods are not bent or rocker levers not severely worn. Refer to Push Rods or Tubes (004-014) and Overhead Set (003-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	

Engine Noise Excessive – Mechanical (Cont)

Cause	Correction
Gear train backlash is excessive or the gear teeth are damaged.	Check the gear backlash and the gear teeth. Refer to Gear Housing, Front (001-033) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Power knock.	Inspect rod bearings. Replace if necessary. Refer to Connecting Rod (001-014) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Engine Noise Excessive — Combustion Knocks

Cause	Correction
Engine is overloaded.	Check for added mechanical loading from damaged or defective pump, changes in suction head, or changes in discharge piping restriction.
	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine using the correct fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
	
Air is present in the fuel supply to the engine.	<p>Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank standpipe and fuel filters as necessary.</p> <p>Vent air from the system. Refer to <u>Air in Fuel</u> in Section 7.</p>
	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Fuel injection pump is malfunctioning.	Replace the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Coolant temperature is below specification.	Refer to the <u>Coolant Temperature Below Normal (Engine Running)</u> symptom tree in this section.
	

Engine Noise Excessive — Combustion Knocks (Cont)

Cause	Correction
Injectors worn or malfunctioning.	Remove and test the injectors. Replace as necessary. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Engine Runs Rough at Idle



NOTE: Operation at idle speed is for maintenance only.

Cause	Correction
The engine is cold.	Allow the engine to warm to operating temperature. If the engine will not reach operating temperature, refer to the <u>Coolant Temperature Below Normal (Engine Running)</u> symptom tree.
OK ↓	
Idle speed is set too low.	Check and adjust the low-idle screw. Refer to Fuel Pump Idle Speed (005-029) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Engine mounts are worn, damaged, loose, or not correct.	Verify the condition of the mounts. Refer to Engine Mounts (016-010) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Air is present in the fuel system.	Bleed the fuel system and check for suction leaks. Refer to Fuel Supply Lines (006-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel filter is becoming plugged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 7.
OK ↓	
Fuel supply to the engine is inadequate.	Locate and correct the restriction in fuel flow to the engine.
OK ↓	

Engine Runs Rough at Idle (Cont)

Cause	Correction
The fuel lift pump is malfunctioning.	Inspect the fuel lift pump. Replace if necessary. Refer to Fuel Lift Pump (005-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine on the required fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	
Fuel pump overflow valve is malfunctioning.	Inspect the return overflow valve. Replace if necessary. Refer to Fuel Return Overflow Valve (006-044) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is incorrect.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Valves are not sealing correctly.	Check and adjust the valves. Refer to Overhead Set (003-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Engine compression is low.	Perform the compression check to identify the malfunction. Correct as required. Refer to Engine Testing (Chassis Dynamometer) (014-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	







Engine Runs Rough at Idle (Cont)

Cause	Correction
Injector is malfunctioning.	Inspect the injectors. Replace the injectors as necessary. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Fuel injection pump is malfunctioning.	Remove the fuel pump. Refer to Procedure Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
Contact a Cummins Authorized Repair Facility.	

Engine Runs Rough or Misfires Under Load

Cause	Correction
The engine is cold.	Allow the engine to warm to operating temperature. If the engine will not reach operating temperature, refer to the Coolant Temperature Below Normal (Engine Running) symptom tree.
OK ↓	
Air is present in the fuel system.	Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank standpipe and fuel filters as necessary. Vent air from the system. Refer to Air in Fuel in Section 7.
OK ↓	
The fuel filter is becoming plugged.	Replace the fuel filter. Refer to Change Fuel Filter in Section 7.
OK ↓	
Fuel supply to the engine is inadequate.	Locate and correct the restriction in fuel flow to the engine.
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine on the required fuel. Refer to Fuel Recommendations and Specifications in Section 10.
OK ↓	
Engine fuel leak is present.	Check the fuel lines, fuel connections, fuel delivery valve seals, and fuel filters for leaks. Check the fuel lines from the supply tank(s). Refer to Fuel Supply Lines (006-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	

Engine Runs Rough or Misfires Under Load (Cont)

Cause	Correction
Fuel pump return overflow valve is malfunctioning.	Inspect the return overflow valve. Replace if necessary. Refer to Fuel Return Overflow Valve (006-044) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
The fuel lift pump is malfunctioning.	Inspect the fuel lift pump. Replace if necessary. Refer to Fuel Lift Pump (005-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
Valves are not sealing correctly.	Check and adjust the valves. Refer to Overhead Set (003-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
Injectors are worn or malfunctioning.	Check the injectors and replace any malfunctioning injectors. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
Engine compression is low.	Perform the compression check to identify the malfunction. Correct as required. Refer to Section 9.
	

Engine Runs Rough or Misfires Under Load (Cont)

Cause	Correction
Fuel injection pump timing is incorrect.	Check and adjust the injection pump timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Camshaft timing is not correct (after engine rebuild or repair).	Check the gear train timing alignment. Refer to Camshaft (001-008) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	
Camshaft, tappets, or pushrods are damaged.	Inspect the camshaft and tappets. Refer to Camshaft (001-008) or Tappet (004-015) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Engine Speed Surges at Idle

NOTE: Operation at idle speed is for maintenance only.

Cause	Correction
Fuel level is low in the tank.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
OK ↓	
Idle speed is set too low.	Check and adjust the low-idle screw. Refer to Fuel Pump Idle Speed (005-029) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Air is in the fuel supply to the engine.	Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank standpipe and fuel filters as necessary. Vent air from the system. Refer to <u>Air in Fuel</u> in Section 7.
OK ↓	
The fuel filter is plugged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 7.
OK ↓	
Fuel flow to the engine is not adequate.	Locate and correct the restriction in the customer-supplied fuel lines to the engine.
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine with the required fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	
A fuel supply line restriction exists between the fuel injection pump and the injectors.	Check the fuel supply line or passage for sharp bends or restriction. Remove any restrictions.
OK ↓	

Engine Speed Surges at Idle (Cont)

Cause	Correction
Moisture is present in the wiring harness connectors.	Dry the connectors with Cummins electronic cleaner, Part Number 3824510.
OK ↓	
Engine is operating under excessive load.	Check for added mechanical loading from damaged or defective pump, changes in suction head, or changes in discharge piping restriction.
OK ↓	
Throttle linkage misadjusted or damaged.	Adjust or repair the linkage. Refer to instructions in Section 7.
OK ↓	
Engine fuel leak is present.	Check the fuel lines, fuel connections, fuel delivery valve seals, and fuel filters for leaks. Check the fuel lines from the supply tank(s). Refer to Fuel Supply Lines (006-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	
Injectors are worn or malfunctioning.	Check the injectors and replace any malfunctioning injectors. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	
Fuel injection pump timing is incorrect.	Check and adjust the injection pump timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	






Engine Speed Surges at Idle (Cont)

Cause	Correction
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Engine Speed Surges Under Load

Cause	Correction
Pump suction head or pump discharge head changes.	Some variation in speed response to load changes is normal. Excessive speed changes may occur upon sudden failures in either suction or discharge piping systems.
OK ↓	
Fuel level is low in the tank.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
OK ↓	
Air is in the fuel supply to the engine.	Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank standpipe and fuel filters as necessary. Vent air from the system. Refer to <u>Air in Fuel</u> in Section 7.
OK ↓	
The fuel filter is plugged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 7.
OK ↓	
Fuel flow to the engine is not adequate.	Locate and correct the restriction in the customer-supplied fuel lines to the engine.
OK ↓	
The fuel lift pump is malfunctioning.	Check the fuel lift pump for correct operation. Check the pump output pressure. Replace the fuel lift pump if necessary. Refer to <u>Fuel Lift Pump Removal/Installation</u> in Section 7.
OK ↓	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine with the required fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	

Engine Speed Surges Under Load (Cont)

Cause	Correction
A fuel supply line restriction exists between the fuel injection pump and the injectors.	Check the fuel supply line or passage for sharp bends or restriction. Remove any restrictions.
	
Injectors are worn or malfunctioning.	Check the injectors and replace any malfunctioning injectors. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
	
Fuel injection pump timing is incorrect.	Check and adjust the injection pump timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Moisture is present in the wiring harness connectors.	Dry the connectors with Cummins electronic cleaner, Part Number 3824510.
	
Contact a Cummins Authorized Repair Facility.	

Engine Vibration Excessive at Rated Speed

Cause	Correction
Engine runs rough or is misfiring.	Refer to the <u>Engine Runs Rough or Misfires Under Load</u> symptom tree in this section.
OK ↓	
Alternator bearing is worn or damaged.	Check if the alternator is vibrating excessively. Replace the alternator if necessary. Refer to <u>Alternator Removal/Installation</u> in Section 7.
OK ↓	
Water pump bearing is worn or damaged.	Check if the water pump is vibrating excessively. Replace the pump if necessary. Refer to <u>Water Pump Removal/Installation</u> in Section 7.
OK ↓	
Automatic belt tensioner bearing is worn or damaged.	Check if the belt tensioner is vibrating excessively. Replace the tensioner if necessary. Refer to <u>Automatic Belt Tensioner Removal/Installation</u> in Section 7.
OK ↓	
Vibration damper is damaged.	Inspect the vibration damper. Refer to <u>Vibration Damper, Viscous (001-052)</u> in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	
Engine mounts are worn, damaged, loose, or not correct.	Verify the condition of the mounts. Refer to <u>Engine Mounts (016-010)</u> in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	








Engine Vibration Excessive at Rated Speed (Cont)

<p>Power components loose or broken.</p>	<p>Inspect the crankshaft and rods for damage that causes an unbalance. Refer to Crankshaft (001-016) or Connecting Rod (001-014) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.</p>
<p style="text-align: center;">OK ↓</p>	
<p>Flywheel housing is not aligned correctly.</p>	<p>Check the flywheel housing alignment. Refer to Flywheel Housing (016-006) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.</p>
<p style="text-align: center;">OK ↓</p>	
<p>Flywheel capscrews are loose or broken.</p>	<p>Check the flywheel and the mounting capscrews. Refer to Flywheel (016-005) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.</p>
<p style="text-align: center;">OK ↓</p>	
<p>Contact a Cummins Authorized Repair Facility.</p>	

Engine Stops During Operation

Cause	Correction
Normal automatic mode shutdown occurs when the fire protection systems removes the signal power feed to the local control panel.	No action required This is a desirable outcome.
OK ↓	
In the automatic mode, the signal power feed is lost from the fire protection system to the control panel.	Locate and correct the electrical fault in the fire protection system or the field wiring to the engine control panel.
OK ↓	
Signal power is lost by the operation of the circuit breaker the engine control panel.	Press the circuit breaker reset button on the engine control panel. Locate and correct the electrical fault in engine control panel. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
An overspeed trip has occurred. The overspeed trip light is illuminated on the local control panel. Remote indications may also be present. Alternatively, a related overspeed switch failure has occurred. The trip indications may not be present.	Go to <u>Engine Overspeed Trip</u> in this section.
OK ↓	
The fuel shutoff valve (FSOV) has failed.	Check the wiring continuity and insulation from ground for the Fuel Shutoff Switch. Refer to <u>Drawing 10423 Sheet 1</u> and <u>Drawing 10423 Sheet 2</u> in Section 13. Correct any electrical faults. If required, replace the FSOV. Refer to <u>Fuel Shutoff Valve (FSOV) Removal/Installation</u> in Section 7.
OK ↓	
Fuel tank level is low.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
OK ↓	

Engine Stops During Operation (Cont)

Cause	Correction
Clogged fuel tank air breather hole.	Clean the fuel tank breather.
	
Customer-supplied fuel pre-filter is clogged.	Clean the fuel pre-filter. Fill and bleed the fuel lines to the engine.
	
Fuel piping to engine is clogged.	Clean and repair the fuel piping to the engine.
	
The fuel filter is clogged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 5.
	
Air is trapped in the low pressure fuel lines at the engine.	Bleed the fuel lines. Refer to <u>Air in Fuel</u> in Section 7.
	
The fuel lift pump is malfunctioning.	Check the fuel lift pump for correct operation. Check the pump output pressure. Replace the fuel lift pump if necessary. Refer to <u>Fuel Lift Pump Removal/Installation</u> in Section 7.
	
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Contact an Authorized Cummins Repair Facility.	

Engine Will Not Reach Rated Speed (RPM)

Cause	Correction
Load is excessive for engine horsepower rating.	Reduce the engine load.
<p>OK ↓</p>	
Throttle adjustment is not correct.	Check the throttle adjustment. Refer to instructions in Section 3.
<p>OK ↓</p>	
Fuel shutoff lever (mechanical) is partially engaged.	Check for correct solenoid operation. Refer to Fuel Shutoff Valve (005-043) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
<p>OK ↓</p>	
Engine fuel leak is present.	Check the fuel lines, fuel connections, fuel delivery valve seals, and fuel filters for leaks. Check the fuel lines from the supply tank(s). Refer to Fuel Supply Lines (006-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
<p>OK ↓</p>	
Fuel pump return overflow valve is malfunctioning.	Inspect the return overflow valve. Replace if necessary. Refer to Fuel Return Overflow Valve (006-044) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
<p>OK ↓</p>	
Tachometer is not calibrated.	Compare the tachometer reading with a handheld tachometer or an electronic service tool reading. If out of calibration, calibrate the tachometer as necessary at the CAL adjustment on the back of the gauge. Refer to <u>Tachometer Calibration</u> in Section 7.
<p>OK ↓</p>	

Engine Will Not Reach Rated Speed (RPM) (Cont)

Cause	Correction
Tachometer is malfunctioning.	Replace the tachometer. Refer to <u>Tachometer Removal/Installation</u> in Section 7.
OK ↓	
Engine power output is low.	Refer to the <u>Engine Acceleration or Response Poor</u> symptom tree in this section.
OK ↓	
Fuel grade is not correct for the application, or the fuel quality is poor.	Operate the engine with the required fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	
Fuel filter is clogged.	Replace the fuel filter. Refer to <u>Change Fuel Filter</u> in Section 5.
OK ↓	
Fuel suction line is restricted.	Check the fuel suction line for restriction.
OK ↓	
Charge air cooler air flow is restricted (CFP83-F40 Only).	Inspect the charge air cooler for internal and external restrictions. Replace the restricted cooler if necessary. Refer to <u>Charge Air Cooler (CAC) Removal and Installation</u> in Section 7.
OK ↓	
Aftercooler air flow is restricted (CFP83-F10, F20, F30 Only).	Inspect the aftercooler for internal and external restrictions. Replace the aftercooler if necessary. Refer to <u>Aftercooler Assembly (010-002)</u> in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	

Engine Will Not Reach Rated Speed (RPM) (Cont)

Cause	Correction
Fuel supply is not adequate.	Locate and correct the restriction in the customer-supplied fuel lines to the engine.
OK ↓	
Exhaust back pressure is too high.	<p>NOTE: The maximum allowable exhaust back pressure is specified in <u>Exhaust System Specifications</u> in Section 10.</p> <p>Measure the exhaust back pressure. Correct the problem if it is above specification.</p>
OK ↓	
The fuel lift pump is malfunctioning.	Inspect the fuel lift pump. Replace if necessary. Refer to Fuel Lift Pump (005-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02. Calibrate the fuel pump.
OK ↓	
Turbocharger wastegate is malfunctioning (CFP83-F40 Only).	Check the wastegate for correct operation. Refer to Turbocharger Wastegate Actuator (010-050) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is incorrect.	Check and adjust the injection pump timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Engine Will Not Reach Rated Speed (RPM) (Cont)

Cause	Correction
A base engine problem is present.	Check the engine for high crankcase pressure, low compression, static injection timing, damaged pistons, camshaft, and other parts. Refer to Engine Testing (Chassis Dynamometer) (014-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact an Authorized Cummins Repair Facility.	




Engine Will Not Shut Off Remotely

NOTE: Stop the engine mechanically by moving the manual shutoff lever to the STOP position. Refer to Emergency Manual Stopping Procedure in Section 3.

Cause	Correction
<p>Stop circuit malfunction in the fire pump controller of field wiring.</p>	<p>NOTE: In the AUTO mode, the fire pump engine stops upon loss of signal power from the fire pump controller.</p> <p>Check the engine stop circuit in the fire pump controller. Correct any faults.</p> <p>Check for short to voltage on the signal wiring from the fire pump controller to the engine control panel. Correct any faults.</p> <p>Check operation of the switch contacts of the AUTO/MANUAL switch at the engine control panel. Replace the switch if the switch contacts fail to operate properly.</p>
<p>OK ↓</p>	
<p>Fuel shutoff valve (FSOV) is malfunctioning.</p>	<p>Check for correct solenoid operation. Refer to Fuel Shutoff Valve (005-043) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
<p>OK ↓</p>	
<p>Engine is running on fumes drawn into the air intake.</p>	<p>Check the air intake ducts. Locate and isolate the source of the fumes. Repair as necessary.</p>
<p>OK ↓</p>	
<p>Fuel injection pump is malfunctioning.</p>	<p>Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
<p>OK ↓</p>	
<p>Contact an Authorized Cummins Repair Facility.</p>	

Engine Will Not Shut Off Locally






NOTE: Stop the engine mechanically by moving the manual shutoff lever to the STOP position. Refer to Emergency Manual Stopping Procedure in Section 3.

Cause	Correction
Engine is running on fumes drawn into the air intake.	Check the air intake ducts. Locate and isolate the source of the fumes. Repair as necessary.
	
Fuel shutoff valve (FSOV) is malfunctioning.	Check for correct solenoid operation. Refer to Fuel Shutoff Valve (005-043) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Refer to a Cummins Authorized Repair Facility.	

Excessive Black Exhaust Smoke

Cause	Correction
Engine is being lugged down.	Increase pump suction head or decrease pump discharge head.
OK ↓	
Air filter is plugged.	Check the air intake system for restriction. Refer to <u>Check Air Cleaner Service Indicator</u> in Section 5. Replace the air filter if required.
OK ↓	
AFC plunger not fully open.	Inspect AFC air tube and fuel drain lines for restriction. Inspect the AFC operation.
OK ↓	
Aftercooler restricted (CFP83-F10, F20, F30 Only).	Inspect for plugged passages in the aftercooler. Refer to Aftercooler Assembly (010-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Exhaust system restriction.	Check the exhaust system for any restrictions. Refer to Exhaust Restriction (011-009) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Charge air cooler is restricted or leaking (CFP83-F40 Only).	Inspect the charge air cooler for air restrictions or leaks.
OK ↓	







Excessive Black Exhaust Smoke (Cont)

Cause	Correction
Air leak between the turbocharger and the intake manifold.	Check for leaks in the air crossover tube, charge air cooler connections, hoses, or through holes in the manifold cover and repair or replace if necessary. Refer to Air Leaks, Air Intake and Exhaust Systems (010-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Exhaust leaks at the manifold or turbocharger.	Check and correct any leaks in the exhaust manifold or turbocharger gaskets. Check for a cracked exhaust manifold. Refer to Exhaust Manifold, Dry (011-007) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Turbocharger wastegate is malfunctioning.	Check the wastegate for correct operation. Refer to Turbocharger Wastegate Actuator (010-050) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Turbocharger is worn or malfunctioning.	Check for the specified boost pressure. Inspect the turbocharger. Replace if necessary. Refer to Turbocharger Axial Clearance (010-038) and Turbocharger Radial Bearing Clearance (010-047) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Fuel is contaminated.	Operate the engine from a tank of high-quality fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
	
Injectors worn or malfunctioning.	Remove and test the injectors. Replace as necessary. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.

Excessive Black Exhaust Smoke (Cont)

OK ↓	
Cause	Correction
Injector sealing washer not correct.	Check to see if an extra sealing washer is installed under injector. Remove any additional sealing washer. Only one is required. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Injector sealing washer not correct.	Remove injector and install the proper sealing washer. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Remove the fuel injection pump. Check the calibration of the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Refer to a Cummins Authorized Repair Facility.	

Excessive White Exhaust Smoke

Cause	Correction
Coolant temperature is below specification or the intake manifold air temperature is below specification.	Refer to the <u>Coolant Temperature Below Normal (Engine Running)</u> symptom tree.
	
Poor fuel quality or wrong fuel grade.	Operate the engine from a tank of high-quality fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) or Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Injector sealing washer not correct.	Remove injector and install the proper sealing washer. Refer to Injector (006-026 in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Injector sealing washer not correct.	Remove injector and install the proper sealing washer. Refer to Injector (006-026 in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Injectors worn or malfunctioning.	Remove and test the injectors. Replace as necessary. Refer to Injector (006-026 in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	

Excessive White Exhaust Smoke (Cont).

Cause	Correction
Coolant is leaking into the combustion chamber.	Refer to the <u>Excessive Coolant Loss</u> symptom tree in this section.
OK ↓	
Fuel injection pump is malfunctioning.	Remove the fuel injection pump. Check the calibration of the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Refer to a Cummins Authorized Repair Facility.	

Fuel Consumption Is Excessive

Cause	Correction
Air intake system restriction is above specification.	Check the air intake system for restriction. Refer to <u>Check Air Cleaner Service Indicator</u> in Section 7. Replace the air filter as necessary.
OK ↓	
Engine is operating under excessive load.	Check for excessive loading from the water pump.
OK ↓	
Fuel is leaking.	Check the fuel lines, fuel connections, and fuel filters for leaks. Check the fuel lines to the supply tanks. Repair any leaks.
OK ↓	
Poor-quality fuel is being used.	Assure good-quality No. 2 diesel fuel is being used. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
OK ↓	
Charge air cooler air flow is restricted (CFP83-F40 Only).	Inspect the charge air cooler for internal and external restrictions. Replace it if necessary. Refer to <u>Charge Air Cooler (CAC) Removal and Installation</u> in Section 7.
OK ↓	
Aftercooler air flow is restricted (CFP83-F10, F20, F30 Only).	Inspect the aftercooler for internal and external restrictions. Replace it if necessary. Refer to <u>Aftercooler Assembly (010-002)</u> in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Injectors are worn or malfunctioning.	Remove and test the injectors. Replace as necessary. Refer to <u>Injector (006-026)</u> in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Fuel Consumption Is Excessive (Cont)

Cause	Correction
Intake and exhaust system manifold leaks are present.	Check the intake and exhaust systems for leaks. Refer to Air Leaks, Air Intake and Exhaust Systems (010-024) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pump, In-Line, Spill Port Timing (005-013) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Replace the fuel pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Valves are not sealing correctly.	Check and adjust the valves. Refer to Overhead Set (003-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Hour meter is malfunctioning.	Check operation of the hour meter. Replace the tachometer if necessary. Refer to Tachometer Removal/Installation in Section 7.
OK ↓	
Lubricating oil level is above specification.	Check the oil level. Refer to Check Engine Oil Level in Section 5. Drain excess oil and correct the deficiency in maintenance processes.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Fuel or Lubricating Oil Leaking From Exhaust Manifold

Cause	Correction
Intake air restriction is high.	Check the air intake system for restriction. Refer to <u>Check Air Cleaner Service Indicator</u> in Section 7. Replace the air filter if required.
OK ↓	
Engine is operating for extended periods under light or no-load conditions (slobbering).	Limit operations at idle speed to maintenance activities only.
OK ↓	
Injector needle valve sticking.	Check or replace the injector. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Turbocharger oil drain line is restricted.	Remove the turbocharger oil drain line and check for restriction. Clean or replace the oil drain line. Refer to Turbocharger Oil Drain Line (010-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Turbocharger oil seal is leaking.	Check the turbocharger compressor and turbine seals. Refer to Turbocharger (010-033) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Worn piston rings.	Check for excessive blowby. Refer to Crankcase Blowby, Measure (014-010) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Fuel or Lubricating Oil Leaking From Exhaust Manifold (Cont)

Cause	Correction
Valve guide seals are leaking.	Inspect the valve guide seals. Replace if necessary. Refer to Valve Guide Seal, Cylinder Head (002-016) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump timing is not correct.	Put the engine at top dead center. Check and adjust the fuel timing. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Lubricating Oil Contaminated

NOTE: If excessive sludge is present in the oilpan, refer to Lubricating Oil Sludge in the Crankcase Excessive in this section.

Cause	Correction
Bulk oil supply is contaminated.	Check the bulk oil supply. Replace it is necessary. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10. Drain the oil and replace with non-contaminated oil. Also, replace the oil filter. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.
OK ↓	
Fuel is present in the lubricating oil.	Refer to the <u>Fuel in Lubricating Oil</u> symptom tree.
OK ↓	
Coolant is present in the lubricating oil.	Refer to the <u>Coolant in Lubricating Oil</u> symptom tree in this section.
OK ↓	
Metal is present in the lubricating oil.	Contact an Authorized Cummins Repair Facility.
OK ↓	
Identify unknown lubricating oil contamination.	Analyze the oil and inspect the filters to identify the contamination. Contact an Authorized Cummins Repair Facility.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Coolant in the Lubricating Oil

Cause	Correction
Lubricating oil cooler is leaking.	Check the lubricating oil cooler for coolant leaks and cracks. Refer to Lubricating Oil Cooler (007-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Aftercooler is leaking.	Inspect and pressure-test the aftercooler for leaks. Refer to Aftercooler Assembly (010-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Cylinder head gasket is leaking.	Check the cylinder head gasket. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Cylinder head is cracked or porous.	Remove intake and exhaust manifolds. Check for evidence of coolant leak. If necessary, operate engine at low idle. Pressure-test the cylinder head. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Cylinder head expansion plugs leaking or misassembled.	Inspect the cylinder head. Refer to Cylinder Block (001-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Cylinder liner is cracked or porous.	Inspect the cylinder liners for cracks and pitting. Refer to Cylinder Liner (001-028) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Coolant in the Lubricating Oil (Cont)

Cause	Correction
Cylinder block is cracked or porous.	Inspect the cylinder block. Refer to Cylinder Block (001-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Fuel in the Lubricating Oil

Cause	Correction
Fuel transfer pump malfunctioning.	Check or replace the fuel transfer pump. Refer to Fuel Lift Pump (005-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Injector needle valve sticking.	Inspect the injectors. Replace if necessary. Refer to Injector (006-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Internal plunger seal leaking (inline).	Remove the fuel injection pump and repair if necessary. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Fuel injection pump is malfunctioning.	Replace the fuel injection pump. Refer to Fuel Injection Pumps, In-Line (005-012) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
Contact a Cummins Authorized Repair Facility.	






Lubricating Oil Consumption Excessive

Cause	Correction
Verify the oil consumption rate.	Check the amount of oil added versus the hours of operation.
OK ↓	
An external engine leak is present.	Inspect the engine and its components for seal, gasket, tappet cover, oil cooler, or draincocks leaks. Repair or correct any leaks.
OK ↓	
Crankcase ventilation system is plugged.	Check and clean the crankcase breather and vent tube. Refer to Crankcase Breather Tube (003-018) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Lubricating oil does not meet specifications for operating conditions.	Change the oil and filters. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7. Use the oil type recommended in <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.
OK ↓	
Lubricating oil cooler is leaking.	Check the lubricating oil cooler for coolant leaks. Refer to <u>Lubricating Oil in the Coolant</u> in this section.
OK ↓	
Turbocharger leaking lubricating oil to the air intake or exhaust.	Inspect the air crossover tube for evidence of lubricating oil transfer. Refer to Air Crossover (010-019) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Lubricating oil drain interval is excessive.	Verify the correct lubricating oil drain interval. Refer to <u>Change Lubricating Oil and Filters</u> in Section 5.
OK ↓	

Lubricating Oil Consumption Excessive (Cont)

Cause	Correction
Piston rings not sealing (blue smoke).	Check for excessive blowby. Refer to Engine Testing (Chassis Dynamometer) (014-002) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Valve seals are worn.	Inspect the valve seals. Replace the valve seals, if necessary. Refer to Valve Guide Seal, Cylinder Head (002-016) and Valve, Cylinder Head (002-020) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	


Lubricating Oil in the Coolant

Cause	Correction
Bulk coolant supply is contaminated.	<p>Check the bulk coolant supply. Refer to <u>Coolant Recommendations and Specifications</u> in Section 10.</p> <p>Drain the coolant and replace with non-contaminated coolant. Refer to <u>Drain and Flush Cooling System</u> in Section 7.</p> <p>Replace the coolant filters. Refer to <u>Change Coolant Filter</u> in Section 7.</p>
	
Lubricating oil cooler is malfunctioning.	Check the oil cooler. Refer to Lubricating Oil Cooler (007-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Cylinder head gasket is leaking.	Check the cylinder head gasket. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Cylinder head is cracked or porous.	Remove intake and exhaust manifolds. Check for evidence of coolant leak. If necessary, operate engine at low idle. Pressure-test the cylinder head. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Cylinder block is cracked or porous.	Inspect the cylinder block. Refer to Cylinder Block (001-026) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
	
Contact a Cummins Authorized Repair Facility.	

Lubricating Oil Pressure High

Cause	Correction
The engine is cold.	Allow the engine to warm to operating temperature. If the engine will not reach operating temperature, refer to the <u>Coolant Temperature Below Normal (Engine Running)</u> symptom tree in this section.
OK ↓	
Lubricating oil viscosity is not correct.	Drain the oil and replace the oil filter. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7. Use the correct oil. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.
OK ↓	
Lubricating oil filter is not correct.	Replace the oil filter. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7. Use the correct oil filter. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.
OK ↓	
The pressure regulator valve is struck open.	Check and replace valve. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
The lubricating oil pump installation not correct.	Verify that the correct lubricating oil pump and o-rings are installed. Refer to Lubricating Oil Pump (007-031) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	

Lubricating Oil Pressure High (Cont)

Cause	Correction
The pressure gauge is malfunctioning.	Install a temporary pressure gauge at main oil rifle. Compare the indications with the engine running. If required, replace the pressure sender. Refer to <u>Oil Pressure Sender Removal/ Installation</u> in Section 7. If required, replace the pressure gauge. Refer to <u>Oil Pressure Gauge Removal/ Installation</u> in Section 7.
	
Contact a Cummins Authorized Repair Facility.	

Lubricating Oil Pressure is Low

NOTE: Low oil pressure is normally indicated by a low pressure reading on the pressure gauge and by the Low Oil Pressure Light on the engine control panel. If both low pressure indications are present, check for an actual low oil pressure. If only one indication is present, check first to see if the indication is incorrect.

Cause	Correction
Lubricating oil level is low.	Check and replenish lubricating oil. Refer to <u>Check Lubricating Oil Level</u> in Section 7.
OK ↓	
Cylinder head core and expansion plugs leaking or misassembled.	Check cylinder head. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Lubricating oil is diluted.	Refer to the <u>Lubricating Oil Contaminated</u> symptom tree in this section.
OK ↓	
Lubricating oil filter is plugged.	Replace the oil and filter. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7. Use the correct oil filter. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.
OK ↓	
Pressure gauge is malfunctioning.	Check for electrical faults for the pressure gauge wiring. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Correct any electrical faults. Ensure that power and grounding are connected. Ensure that the field wire to the sender is not open or shorted to ground. Correct any electrical faults. If required, replace the pressure sender. Refer to <u>Oil Pressure Sender Removal/ Installation</u> in Section 7. If required, replace the pressure gauge. Refer to <u>Oil Pressure Gauge Removal/ Installation</u> in Section 7.
OK ↓	

Lubricating Oil Pressure is Low (Cont)

Cause	Correction
<p>Oil pressure switch fails to open the contacts on running pressure. The Low Oil Pressure Light remains illuminated yet the oil pressure gauge indicates normal pressure when the engine is running.</p>	<p>Check for a short circuit in the wiring to the pressure switch or in the wiring to the remote Fire Pump Controller. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Correct any electrical faults.</p> <p>If required, replace the oil pressure switch. Refer to <u>Oil Pressure Switch Removal/ Installation</u> in Section 7.</p>
<p>OK ↓</p>	
<p>Lubricating oil filter is not correct.</p>	<p>Replace the oil filter. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.</p> <p>Use the correct oil filter. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.</p>
<p>OK ↓</p>	
<p>Pressure regulator valve is struck open.</p>	<p>Check and replace valve. Refer to Lubricating Oil Pressure Regulator (Main Rifle) (007-029) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
<p>OK ↓</p>	
<p>Lubricating oil cooler is plugged.</p>	<p>Check the oil cooler. Refer to Lubricating Oil Cooler (007-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
<p>OK ↓</p>	
<p>Lubricating oil cooler was replaced with shipping plugs left in cooler.</p>	<p>Check and remove shipping plugs. Refer to Lubricating Oil Cooler (007-003) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
<p>OK ↓</p>	
<p>Lubricating oil pump is malfunctioning.</p>	<p>Inspect the lubricating oil pump. Refer to Lubricating Oil Pump (007-031) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.</p>
<p>OK ↓</p>	

Lubricating Oil Pressure is Low (Cont)

Cause	Correction
Lubricating oil suction or transfer tube is loose or broken, or the gasket or o-rings are leaking.	Remove and inspect the oil pan or suction tube. Refer to Lubricating Oil Pan (007-025) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Main bearing capscrews are loose, worn or not tightened correctly.	Check the torque on the main bearing capscrews. Inspect the capscrews for wear. Refer to Bearings, Main (001-006) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Main bearings are damaged or worn, or the wrong bearings are installed.	Inspect the main bearings for damage, excessive wear, and the correct part number. Refer to Bearings, Main (001-006) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Camshaft journals and number 1 bushing are severely damaged.	Inspect the camshaft journals and number 1 bushing for wear. Refer to Camshaft Bushings (001-010) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact a Cummins Authorized Repair Facility.	

Oil Level Rises

NOTE: Oil level may increase due to thermal expansion as the engine warms up and then decrease as the engine cools down. Slight variations due to temperature changes are normal.

Cause	Correction
Excessive oil has been added to the engine.	Drain the excess oil. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.
OK ↓	
Fuel is leaking into the oil system.	Troubleshoot as per <u>Lubricating Oil Contaminated</u> in this section.
OK ↓	
Coolant is leaking into the oil system.	Troubleshoot as per <u>Lubricating Oil Contaminated</u> in this section.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Lubricating Oil Sludge in the Crankcase Excessive

Cause	Correction
Bulk oil supply is contaminated.	<p>Check the bulk oil supply. Replace it is necessary. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.</p> <p>Drain the oil and replace with non-contaminated oil. Also, replace the oil filter. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.</p>
<p>OK ↓</p>	
Coolant temperature is below specification.	Refer to the <u>Coolant Temperature Below Normal (Engine Running)</u> symptom tree in this section.
<p>OK ↓</p>	
Crankcase ventilation system is plugged.	Check and clean the crankcase breather and vent tube. Refer to Rocker Lever (003-008) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
<p>OK ↓</p>	
Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine from a tank of high-quality fuel. Refer to <u>Fuel Recommendations and Specifications</u> in Section 10.
<p>OK ↓</p>	
Lubricating oil does not meet specifications for operating conditions.	<p>Check the grade and type of oil. Refer to <u>Lubricating Oil Recommendations and Specifications</u> in Section 10.</p> <p>If the wrong type or grade of oil is present, drain and replace it. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.</p>
<p>OK ↓</p>	
Lubricating oil drain interval is excessive.	Verify the correct lubricating oil drain interval. Refer to <u>Change Lubricating Oil and Filters</u> in Section 7.
<p>OK ↓</p>	

Lubricating Oil Sludge in the Crankcase Excessive (Cont)

Cause	Correction
Lubricating oil is contaminated with coolant or fuel.	Go to the <u>Lubricating Oil Contaminated</u> symptom tree in this section.
OK ↓	
Crankcase pressure is excessive.	Check for excessive blowby. Refer to the <u>Crankcase Gases (Blowby) Excessive</u> symptom tree in this section.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Turbocharger Leaks Engine Oil or Fuel

Cause	Correction
Engine is operating for extended periods under light or no-load conditions (slobbering).	Limit engine operations at idle speed to maintenance activities only. If required, adjust the engine's speed as per <u>Rated Speed Setpoint Adjustment</u> in Section 3.
OK ↓	
Turbocharger drain line is restricted.	Remove the turbocharger drain line and check for restriction. Clean or replace the drain line. Refer to Turbocharger Oil Drain Line (010-045) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Turbocharger oil supply line loose or leaking.	Check and tighten oil supply line fitting(s), if necessary. Replace the supply line if necessary. Refer to Turbocharger Oil Supply Line (010-046) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Lubricating oil or fuel is entering the turbocharger.	Troubleshoot the turbocharger as per Turbocharger (010-033) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Crankcase Gases (Blowby) - Excessive

Cause	Correction
Cylinder head valve guides are excessively worn.	Check the valve guides for wear. Replace the cylinder head if necessary. Refer to Cylinder Head (002-004) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Pistons or piston rings are worn, damaged, or not correct.	Check the pistons for correct part numbers. Refer to Control Parts List (CPL), Bulletin 3379133 or 4021327. Check the pistons and rings for wear and damage. Refer to Piston (001-043) and Piston Rings (001-047) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Turbocharger oil seal is leaking.	Check the turbocharger compressor and turbine seals. Refer to Turbocharger (010-033) in Troubleshooting and Repair Manual C Series Engines, Bulletin Number 3666003-02.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Engine Overspeed Trip

NOTE: An engine overspeed trip occurs when the engine’s speed exceeds the value specified on the Factory Setting Tag described in Section 2. The trip isolates the fuel supply to the engine and it stops immediately. The trip is indicated on the local control panel and inside the local control panel on the speed switch. Additionally, a trip output is supplied to the fire protection system for remote display.

Cause	Correction
Engine actually operated at too great a speed due to catastrophic load failure such as pipe break, pump mechanical failure, or loss of suction.	Correct the cause of the load failure.
OK ↓	
Engine actually operated at too great a speed due to configuration error.	Check rated speed setting as specified on the <u>Factory Setting Tag</u> described in Section 2. Refer to <u>Rated Speed Setpoint Adjustment and Testing</u> in Section 3.
OK ↓	
Overspeed switch is set at too low a setpoint.	Check overspeed speed setting as specified on the <u>Factory Setting Tag</u> described in Section 2. Refer to <u>Overspeed Setpoint Adjustment and Testing</u> in Section 3.
OK ↓	
Speed switch wiring failure has occurred.	Check continuity and insulation from ground for the signal power wiring and ground wiring to the speed switch. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace defective components and repair electrical faults.
OK ↓	
Speed switch failure has occurred.	If the speed switch fails to operate as per <u>Overspeed Setpoint Adjustment and Testing</u> in Section 3, replace the speed switch. Refer to <u>Overspeed Switch Removal/Installation</u> in Section 7.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Tachometer Does Not Indicate Engine Speed



Cause	Correction
Fuse F4 has opened.	If required, replace Fuse F4. Locate and correct the electrical fault that caused the fuse to operate. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13.
OK ↓	
An electrical fault exists in the tachometer power and grounding circuits.	Check continuity and insulation from ground for the power wiring and ground wiring to the tachometer. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace defective components and repair electrical faults.
OK ↓	
An electrical fault exists in the speed sensor input circuit. This fault may also cause a failure in the crank terminate signal to the fire protection system.	Check continuity and insulation from ground for the speed sensor circuit. Refer to <u>Drawing 10423 Sheet 1</u> in Section 13. Replace defective components and repair electrical faults.
OK ↓	
The speed sensor has failed.	With the engine running, check the signal from the speed sensor with an oscilloscope or pulse counter. Replace the speed sensor if it has failed. Refer to <u>Speed Sensor Removal/Installation</u> in Section 7.
OK ↓	
The tachometer has failed.	Check the operation of the tachometer with a pulse generator. Replace the tachometer if it has failed. Refer to <u>Tachometer Removal/Installation</u> in Section 7.
OK ↓	
Contact an Authorized Cummins Repair Facility.	

Section 13 – Assembly Drawings ⁽¹⁾




Description	Drawing No.	Sheet No	Revision
Drawing, Installation, FirePump, CFP83-F10/20/30 (6CTA8.3)	8708	1	H
Drawing, Installation, FirePump, CFP83-F40 (6CTAA8.3)	8710		H
Options, Engine, FirePump, G-Drive, CFP83-F40 (6CTAA8.3)	8728		B
Options, Engine, FirePump, G-Drive, CFP83-F10/20/30 (6CTA8.3)	8738		B
Assembly, Engine Mounting, CFP83	8907		B
Leg, Support, Engine, Rear	8412		E
Leg, Support, Engine, Front	8908		B
Assembly, Air Cleaner, C83-F10/20/30	8911		E
Assembly, Air Cleaner, CFP83-F40	9531		D
Assembly, Air Filter Cover Implementation Date of April, 2009	13439		
Assembly, Heat Shield, Exhaust, CFP83-F10/20/30	8913		D
Assembly, Heat Shield, Exhaust, CFP83-F40	8937		B
Assembly, Charge Air Cooling, CFP83-F40	8967		A
Assembly, Plumbing, CAC Heat Exchanger, CFP83-F40	10903		B
Assembly, Hose Water	11086		B
Assembly, Heat Exchanger, C8.3	8919		E
Assembly, Vent Line	9658		
Assembly, Coolant Heater, C8.3	8930		D
Assembly, Operator Station, 6B, CFP83-F10	9560		E
Assembly, Operator Station, 6CTAA8.3, CFP83-F40	9592		C
Assembly, Panel, Instrument, 12VDC, Alternate Beginning 9/06	10452		E
Assembly, Panel, Instrument, 24VDC, Alternate Beginning 9/06	10453		E
Assembly, Sensor Package, C8.3, (Non-ECM)	9574		A
Assembly, Fuel Supply & Return Lines, C8.3 CFP83-F10	9575		A
Assembly, Fuel Supply & Return Lines, 6CTAA8.3, CFP84-F40	9588		B
Assembly, Pulley Guard, CFP83-F10/20/30	9625		A
Assembly, Pulley Guard, CFP83-F40	9627		B
Misc. Piping, Cooling Loop, Raw Water, 6C, CFP83-F10/20/30	9637		D
Misc. Piping, Cooling Loop, Raw Water, 6C, CFP83-F40	10712		B
Assembly, Raw Water Cooling, Loop 1"	9659		D
Assembly, Solenoid Override, CFP83	9830		A
Assembly, Solenoid Override, CFP83-F40	10365		B
Fuel Line, 3/8" NPT	10234		
Fuel Line, 1/4" NPT	10235		
Exhaust, 4" Bellows w/ Elbow	8780		C
Assembly, Drive Shaft & Guard	10165		
Assembly, Stub-Shaft, SAE #3, 2.25" QSB, QSC, 4B, 6B, 6C	8619		B
Kit, Loose Wires, 4B, 6B, 6C, QSB, QSC	9767		D
General Layout, FirePump, CFP83	CFP83_GEN		D
General Layout, FirePump, CFP83-F40	CFP83_F40GEN		D
Schematic, Control Panel, Alternate Beginning 9/06	10423	1-6	E
Harness, Engine	8513	1-2	L

(1): Also see Engine Identification in Section 2 the System Diagrams in Section 6. The most current revisions to these drawings and related documents are accessible at <http://www.cumminsfirepower.com/products.html>.




THIS PAGE INTENTIONALLY LEFT BLANK

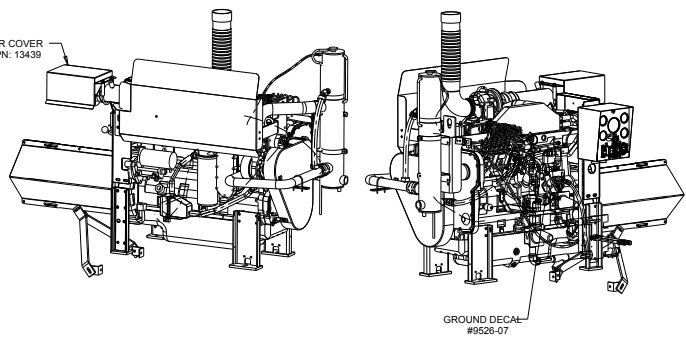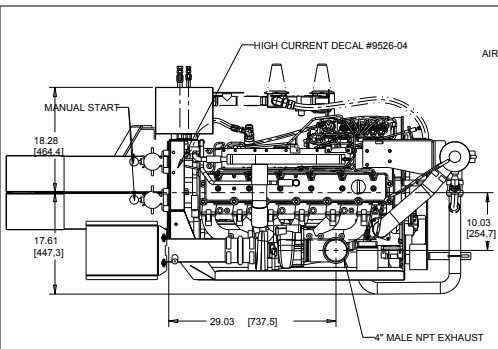




BILL OF MATERIAL			PART NUMBER
1	1	ASSEMBLY ENGINE, 6CTAC8-302	6728
2	1	ASSEMBLY MOUNTING ENGINE, FIREPUMP, 6C8-3	6907
3	1	ASSEMBLY AIR CLEANER, CPRES, FIRE PUMP	6911
4	1	ASSEMBLY HEAT SHIELD, FIREPUMP, C8-3	6913
5	1	ASSEMBLY HEAT EXCHANGER, SICKS, FIREPUMP	6919
6	1	ASSEMBLY COOLANT HEATING, C8-3	6930
7	1	ASSEMBLY OPERATORS STATION, 48 MARINE, FIREPUMP	6950
8	1	ASSEMBLY SENSOR PACKAGE, C8-3, FIREPUMP	6954
9	2	ASSEMBLY FUEL LINE, C8-3, FIREPUMP	6955
10	1	GUARD PULLEY, 6C, FIREPUMP	6955
11	1	MISC PIPING RAW WATER, 6C, 1" FIREPUMP	6957
12	1	COOLING LOOP, 1" UPPER RH ORIENTATION, FIREPUMP	6959
13	1	ASSEMBLY SCIENCE/CHARGE, FIREPUMP	6960
14	1	FUEL LINE, 1/2" NPT X 12' LD	10204
15	1	FUEL LINE, 1/4" NPT X 12' LD	10225
16	1	ADBY TELESCOPING GUARD 24" DS, SAE #3 CFP 8.3 L	11179-01
17	1	ASSEMBLY AIR FILTER COVER	13439
18	1	FLANGE COMPANION	8608_OLD
19	1	ADAPTER, U-JOINT, 1400, FITS LOVEJOY FLYWHEEL	8615
20	1	FLEX EXHAUST, 4" COPP, FIREPUMP	8790
21	1	CLAMP, U-BOLT, GALVANNEAL, 400"	8904K

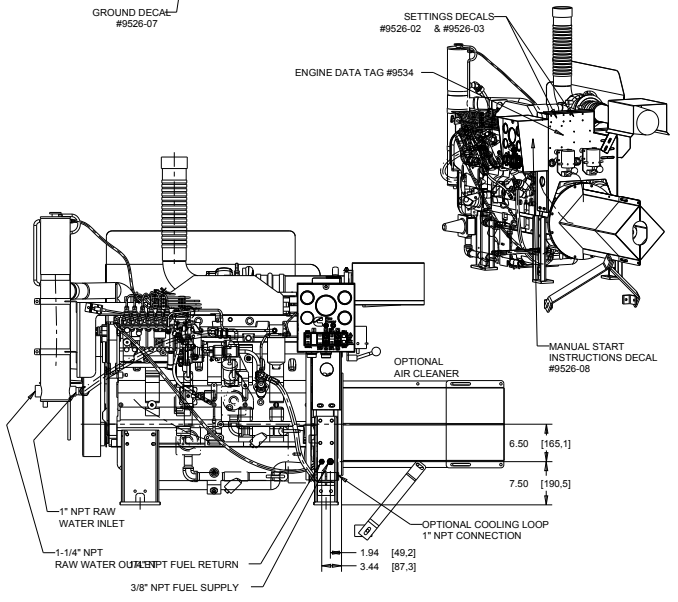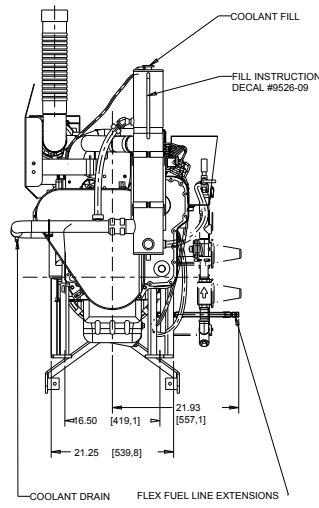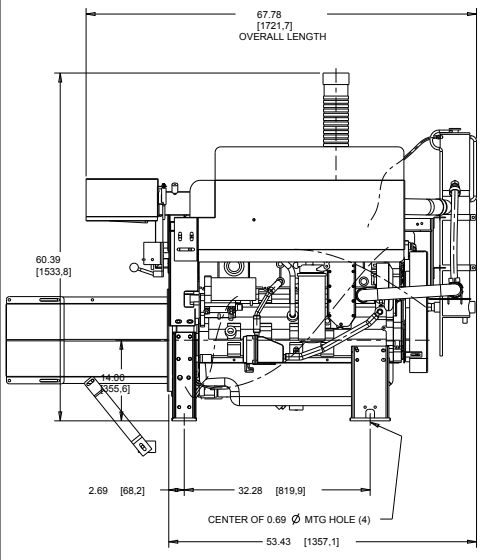

CE <small>CONSTRUCTION EQUIPMENT</small> <small>MANUFACTURING</small> <small>INCORPORATED</small> <small>10000 WILSON AVENUE</small> <small>ANN ARBOR, MI 48106-1500</small> <small>TEL: 734.769.2000</small> <small>FAX: 734.769.2001</small> <small>WWW.CECONSTRUCTIONEQUIPMENT.COM</small>		<small>DATE APPROVED</small> <small>DATE</small> <small>SCALE</small> <small>SHEET</small> <small>REV.</small>
<small>14</small> ADDED PN: 13439 & 8904K ENF PN: 2008-075 <small>15</small> PER PER OP STATION AIR CLEANER <small>REV</small> DESCRIPTION OF REVISIONS		<small>DATE APPROVED</small> <small>DATE</small> <small>SCALE</small> <small>SHEET</small> <small>REV.</small>
<small>14</small> ADDED PN: 13439 & 8904K ENF PN: 2008-075 <small>15</small> PER PER OP STATION AIR CLEANER <small>REV</small> DESCRIPTION OF REVISIONS	<small>MAC</small> 03-14-2008 <small>DATE N</small> <small>REV</small> BY DATE	<small>DESIGNED BY</small> DAVID S. <small>APPROVED BY</small> <small>DATE</small> <small>SCALE</small> <small>SHEET</small> <small>REV.</small>

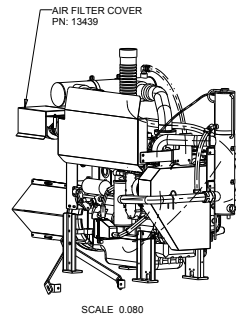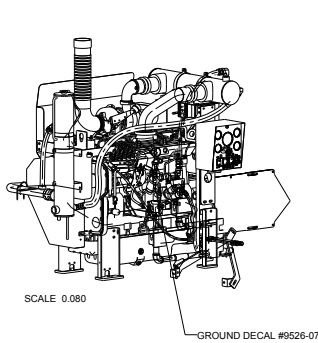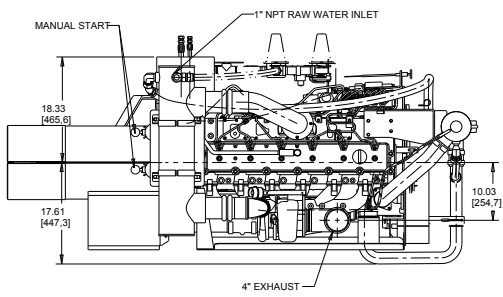

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY ENGINE, SCTA8.3, FIREPUMP	8728ACTAG23
2	1	ASSEMBLY MOUNTING ENGINE, FIREPUMP, C63	8907
3	1	ASSEMBLY HEAT EXCHANGER, C63.3, FIREPUMP	8919
4	1	ASSEMBLY HEAT EXCHANGER, C63.3, FIREPUMP	8920
5	1	ASSEMBLY HEAT EXCHANGER, C63.3, FIREPUMP	8921
6	1	ASSEMBLY CHARGE AIR, C63.3, FIREPUMP	8967
7	1	ASSEMBLY AIR CLEANER, C63.3, FIREPUMP	9531
8	1	ASSEMBLY SENSOR PACKAGE, C63.3, FIREPUMP	9534
9	1	ASSEMBLY FUEL SYSTEM PLUMBING, SCTA8.3, FIREPUMP	9535
10	1	ASSEMBLY OPERATORS STATION, SCTA8.3, FIREPUMP	9562
11	1	ASSEMBLY GUARD, PULLEY, C63.3, FIREPUMP	9527
12	1	ASSEMBLY COOLING LOOP, 1\"/>	
13	1	FUEL LINE, 1/2\"/>	
14	1	FUEL LINE, 1/2\"/>	
15	1	ASSEMBLY SOLENOID OVERIDE, C63.3, FIREPUMP	10365
16	1	ASSEMBLY SOLENOID OVERIDE, C63.3, FIREPUMP	10372
17	1	ASSEMBLY CAGE WATER CONNECTION, C63.3, FIREPUMP	10363
18	1	ASSEMBLY TELESCOPING GUARD 2\"/>	
19	1	ASSEMBLY AIR FILTER COVER, . . .	13439
20	1	FLANGE, COMPANION, . . .	8906_OLD
21	1	ADAPTER, SLOTTED, 1400, FITS LOVELADY FLYWHEEL	8915
22	1	FLEX EXHAUST, 4\"/>	
23	1	CLAMP, U-BOLT, GALVANNEAL, 4\"/>	

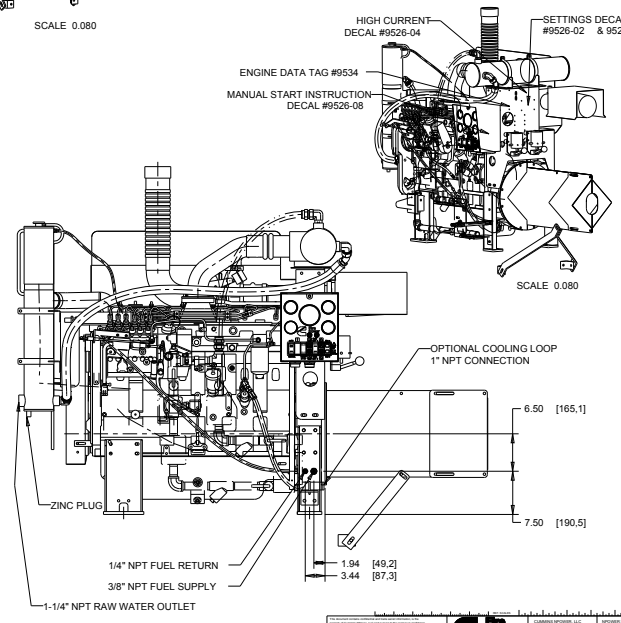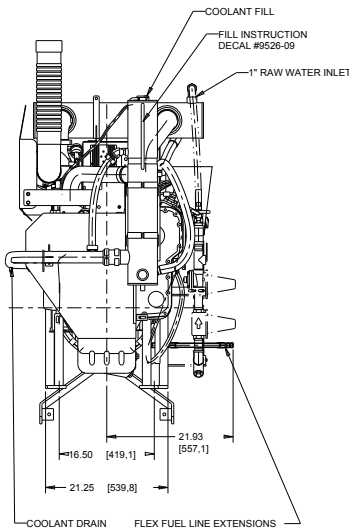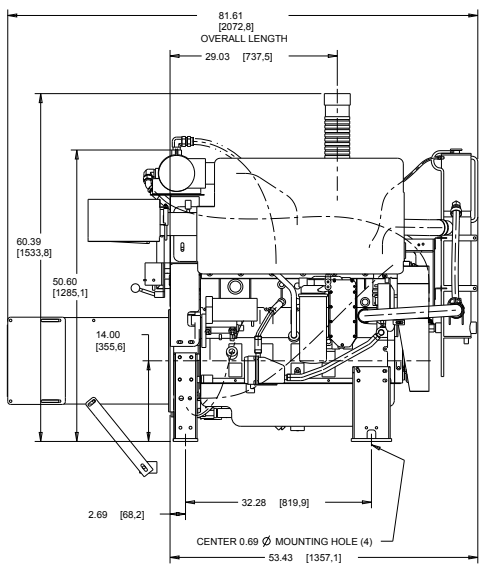

REV	DESCRIPTION OF REVISION	DATE	BY	CHKD	APP'D	DATE
1	ISSUED FOR FAB & ASSEMBLY	01-14-2010	DAVE N	DAVE N	DAVE N	01-14-2010
2	REV PER UPDATED PLUMBING	02-10-2010	DAVE N	DAVE N	DAVE N	02-10-2010
3	REV PER OPERATOR STATION AIR CLEANER	03-01-2010	DAVE N	DAVE N	DAVE N	03-01-2010

PN 8728
 SO 35328
 Model 6CTAA8.3G3
 Config D413035GX03

Option	Desc	Option	Desc
FIRE 31	6CTAA8.3G3	FX 9024	SUPPLY,INJECTION
AP 9301	AGENCY APPROVAL	△ IC 9024	CONNECTION,TUR C
BP 9026	BASE PARTS	IC 9125	COVER,AIR INTAKE
BP 9717	FOLLOWER,CAM	LA 9006	BRACKET,LIFTING
BP 9795	LEVER,ROCKER	LC 9028	COOLER,ENGINE OI
BP 9827	COVER,FRONT GEAR	LG 9028	GAUGE,OIL LEVEL
BP 9897	BLOCK,ENGINE	LP 9710	PUMP,LUBRICATING
BR 9002	BREATHER,CRANKCA	OB 9006	COVER,CYLINDER B
DA 9087	DAMPER,VIBRATION	OP 9013	PAN,OIL
DF 9063	DRIVE,FRT GR TR	PP 8000	PERFORMANCE PART
DL 9009	LOCATION,FUEL DR	PP 9996	HEAD,CYLINDER
EC 9002	THERMOSTAT	PP97833	TURBOCHARGER
△ EE9242	Alternator, 12V, 95A, Delco 11SI	SG 9000	PACKAGE,GUARD
EH 9020	LOCATION,ALTRNA	SM 9706	MOUNTING,STARTER
EH97011	DRIVE,ALTERNATOR	SS 9005	PAINT
EI 9000	DRIVE,MECH TACH	SS 9075	SKID
EI 9701	DRIVE,MECH TACH	SS 9702	ENGINE,DRY
ES 9107	SYSTEM,ETR ENGIN	ST 9238	MOTOR,STARTING
FA 9000	DRIVE,FAN	TB 9337	LOCATION,TURBOCH
FE 9927	PLUMBING,AIR FUE	TB 9789	GASKET,EXHAUST M
FF 9011	FILTER,FUEL	TB 9809	MANIFOLD,EXHAUST
FF 9735	PLUMBING,FUEL FI	TH 9007	HOUSING,THERMOST
FH 9030	HOUSING,FLYWHEEL	TP 9709	PLUMBING,TURBOCH
FP 9600	COUPLING,FUEL PU	VC 9014	COVER,VALVE
FP99052	PUMP,BASE FUEL	WF 9003	RESISTOR,CORROSI
FR90940	RATING,FUEL	WH 9005	PLUMBING,BLOCK V
FS 9089	PUMP,LIFT	WI 9007	CONNECTION,WATER
FT 9920	PLUMBING,FUEL	WO 9004	CONNECTION,WATER
FW 9024	FLYWHEEL	WP 9028	PUMP,WATER
FW 9335	Flywheel, 8/10		


BUILT BEFORE JANUARY 1, 2007

PN 8728
 SO 35328
 Model 6CTAA8.3G3
 Config D413035GX03

Option	Desc	Option	Desc
FIRE 31	6CTAA8.3G3	FX 9024	SUPPLY,INJECTION
△ AP 9529	AGENCY APPROVAL	IC 9024	CONNECTION,TUR C
BP 9026	BASE PARTS	△ IC 9124	COVER,AIR INTAKE
BP 9717	FOLLOWER,CAM	LA 9006	BRACKET,LIFTING
BP 9795	LEVER,ROCKER	LC 9028	COOLER,ENGINE OI
BP 9827	COVER,FRONT GEAR	LG 9028	GAUGE,OIL LEVEL
BP 9897	BLOCK,ENGINE	LP 9710	PUMP,LUBRICATING
BR 9002	BREATHER,CRANKCA	OB 9006	COVER,CYLINDER B
DA 9087	DAMPER,VIBRATION	OP 9013	PAN,OIL
DF 9063	DRIVE,FRT GR TR	PP 8000	PERFORMANCE PART
DL 9009	LOCATION,FUEL DR	PP 9996	HEAD,CYLINDER
EC 9002	THERMOSTAT	PP97833	TURBOCHARGER
△ EE9249	Alternator, 12V, 95A, Delco 11SI	SG 9000	PACKAGE,GUARD
EH 9020	LOCATION,ALTRNA	SM 9706	MOUNTING,STARTER
EH97011	DRIVE,ALTERNATOR	SS 9005	PAINT
EI 9000	DRIVE,MECH TACH	△ SS 9025	OIL,ENGINE
EI 9701	DRIVE,MECH TACH	△ SS 9075	ARRANGEMENT,SHIP
△ ES 9117	SYSTEM,ETR ENGIN	△ SS 9701	ENGINE,DRY
FA 9000	DRIVE,FAN	ST 9238	MOTOR,STARTING
FE 9927	PLUMBING,AIR FUE	TB 9337	LOCATION,TURBOCH
FF 9011	FILTER,FUEL	TB 9789	GASKET,EXHAUST M
FF 9735	PLUMBING,FUEL FI	TB 9809	MANIFOLD,EXHAUST
FH 9030	HOUSING,FLYWHEEL	TH 9007	HOUSING,THERMOST
FP 9600	COUPLING,FUEL PU	TP 9709	PLUMBING,TURBOCH
FP99052	PUMP,BASE FUEL	VC 9014	COVER,VALVE
FR90940	RATING,FUEL	WF 9003	RESISTOR,CORROSI
FS 9089	PUMP,LIFT	WH 9005	PLUMBING,BLOCK V
FT 9920	PLUMBING,FUEL	WI 9007	CONNECTION,WATER
△ FV 9171	VALVE,FUEL SHUTO	△ WO 9010	CONNECTION,WATER
△ FW 9828	FLYWHEEL	WP 9028	PUMP,WATER

BUILT AFTER JANUARY 1, 2007

B	UPDATED PER ENGINE SPEC AND DWG BORDER	DAVE N	08JAN2007
A	REDRAWN PER ENGINE SPEC	DAVE N	16OCT2004
REV	DESCRIPTION OF REVISION	BY	DATE

<small>ALL RIGHTS TO MANUFACTURE, COPY OR SOURCE BY THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED BY WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN WWW.CUMMINSFIREPOWER.COM</small>
	<small>UNLESS OTHERWISE NOTED: ALL DIMENSIONS ARE IN INCHES</small>	DWG SCALE: NTS	DRAWN BY: DAVE N	DATE: 23SEP2004
<small>APPLY MACHINE TOLERANCES .X = ± 0.06 .XX = ± 0.010 .XXX = ± 0.001</small>	PLOT SCALE:	APPD BY:	DATE:	
<small>APPLY WELD TOLERANCES .X = ± 0.12 .XX = ± 0.06</small>	DESCRIPTION ASSEMBLY, ENGINE, 6CTAA8.3G3			
	REFERENCE:	DRAWING NUMBER:		
	CFP83-F40	8728B		

PN 8738
SO 35330
Model 6CTA8.3G2
Config D413034GX02

Option	Desc
FIRE 32	6CTA8.3G2
AP 9229	APPROVAL,AGENCY
BP 9026	BASE PARTS
BP 9717	FOLLOWER,CAM
BP 9795	LEVER,ROCKER
BP 9827	COVER,FRONT GEAR
BP 9896	BLOCK,ENGINE
BR 9002	BREATHER,CRANKCA
DA 9087	DAMPER,VIBRATION
DF 9063	DRIVE,FRT GR TR
DL 9009	LOCATION,FUEL DR
EC 9002	THERMOSTAT
△ EE9242	Alternator, 12V, 95A, Delco 11SI
EH 9020	LOCATION,ALTERNA
EH97011	DRIVE,ALTERNATOR
EI 9000	DRIVE,MECH TACH
EI 9701	DRIVE,MECH TACH
FA 9000	DRIVE,FAN
FF 9011	FILTER,FUEL
FF 9766	PLUMBING,FUEL FI
FH 9030	HOUSING,FLYWHEEL
FP97838	COUPLING,FUEL PU
FP98036	PUMP,BASE FUEL
LFR90242	RATING,FUEL
FS 9089	PUMP,LIFT
FT 9982	PLUMBING,FUEL
FV 9206	VALVE,FUEL SHUTO
FW 9024	FLYWHEEL
△ FW 9335	Flywheel, 8/10

Option	Desc
FX 9004	SUPPLY,LATCHOUT
LA 9006	BRACKET,LIFTING
LC 9028	COOLER,ENGINE OI
LG 9028	GAUGE,OIL LEVEL
LP 9710	PUMP,LUBRICATING
OB 9006	COVER,CYLINDER B
OP 9013	PAN,OIL
PP 2218	PERFORMANCE PART
PP 9830	HEAD,CYLINDER
PP97945	TURBOCHARGER
SG 9000	PACKAGE, GUARD
SM 9706	MOUNTING,STARTER
SS 9005	PAINTSS 9075SKID
SS 9702	ENGINE,DRY
ST 9238	MOTOR,STARTING
TB 9757	AFTERCOOLER,JACK
TB 9789	GASKET,EXHAUST M
TB 9809	MANIFOLD,EXHAUST
TB90076	LOCATION,TURBOCH
TH 9007	HOUSING,THERMOST
TP 9709	PLUMBING,TURBOCH
VC 9014	COVER,VALVE
WA 9703	PLUMBING,AFTERCO
WF 9003	RESISTOR,CORROSI
WH 9005	PLUMBING,BLOCK V
WI 9007	CONNECTION,WATER
WO 9004	CONNECTION,WATER
WP 9028	PUMP,WATER
△XS 9024	CONNECTION,EXHAU

PN 8738
SO 35330
Model 6CTA8.3G2
Config D413034GX02


Option	Desc
FIRE 32	6CTA8.3G2
△ AP 9529	APPROVAL,AGENCY
BP 9026	BASE PARTS
BP 9717	FOLLOWER,CAM
BP 9795	LEVER,ROCKER
BP 9827	COVER,FRONT GEAR
BP 9896	BLOCK,ENGINE
BR 9002	BREATHER,CRANKCA
DA 9087	DAMPER,VIBRATION
DF 9063	DRIVE,FRT GR TR
DL 9009	LOCATION,FUEL DR
EC 9002	THERMOSTAT
EE 9242	Alternator, 12V, 95A, Delco11SI
EH 9020	LOCATION,ALTERNA
EH97011	DRIVE,ALTERNATOR
EI 9000	DRIVE,MECH TACH
EI 9701	DRIVE,MECH TACH
FA 9000	DRIVE,FAN
FF 9011	FILTER,FUEL
FF 9766	PLUMBING,FUEL FI
FH 9030	HOUSING,FLYWHEEL
FP97838	COUPLING,FUEL PU
FP98036	PUMP,BASE FUEL
FR90242	RATING,FUEL
FS 9089	PUMP,LIFT
FT 9982	PLUMBING,FUEL
FV 9206	VALVE,FUEL SHUTO
△ FW 9828	FLYWHEEL
FX 9004	SUPPLY,LATCHOUT
LA 9006	BRACKET,LIFTING


Option	Desc
LC 9028	COOLER,ENGINE OI
LG 9028	GAUGE,OIL LEVEL
LP 9710	PUMP,LUBRICATING
OB 9006	COVER,CYLINDER B
OP 9013	PAN,OIL
PP 2218	PERFORMANCE PART
PP 9830	HEAD,CYLINDER
PP97945	TURBOCHARGER
SG 9000	PACKAGE, GUARD
SM 9706	MOUNTING,STARTER
SS 9005	PAINT
△ SS 9025	OIL,ENGINE
SS 9075	ARRANGEMENT,SHIP
△ SS 9701	OIL,ENGINE
ST 9238	MOTOR,STARTING
TB 9757	AFTERCOOLER,JACK
TB 9789	GASKET,EXHAUST M
TB 9809	MANIFOLD,EXHAUST
TB90076	LOCATION,TURBOCH
TH 9007	HOUSING,THERMOST
TP 9709	PLUMBING,TURBOCH
VC 9014	COVER,VALVE
WA 9703	PLUMBING,AFTERCO
WF 9003	RESISTOR,CORROSI
WH 9005	PLUMBING,BLOCK V
WI 9007	CONNECTION,WATER
△ WO 9010	CONNECTION,WATER
WP 9028	PUMP,WATER
XS 9024	CONNECTION,EXHAU

BUILT BEFORE JANUARY 1, 2007


BUILT AFTER JANUARY 1, 2007

B	UPDATED PER ENGINE SPEC AND DWG BORDER	DAVE N	08JAN2007
A	REDRAWN PER ENGINE SPEC	DAVE N	16OCT2004
REV	DESCRIPTION OF REVISION	BY	DATE

<small>ALL RIGHTS TO MANUFACTURE, COPY OR SOURCE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED BY WRITING BY CUMMINS NPPOWER, LLC</small>			<small>CUMMINS NPPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN WWW.CUMMINSFIREPOWER.COM</small>
	<small>UNLESS OTHERWISE NOTED: ALL DIMENSIONS ARE IN INCHES</small>	DWG SCALE: NTS	DRAWN BY: DAVE N	DATE: 23SEP2004
<small>APPLY MACHINE TOLERANCES X = ± 0.06 XX = ± 0.010 XXX = ± 0.001</small>	PLOT SCALE:	APPD BY:	DATE:	
<small>APPLY WELDED TOLERANCES X = ± 0.12 XX = ± 0.06 XXX = ± 0.06</small>	DESCRIPTION ASSEMBLY, ENGINE, 6CTA8.3G3			
	REFERENCE:	DRAWING NUMBER:		
	CFP83-F10/20/30	8738B		

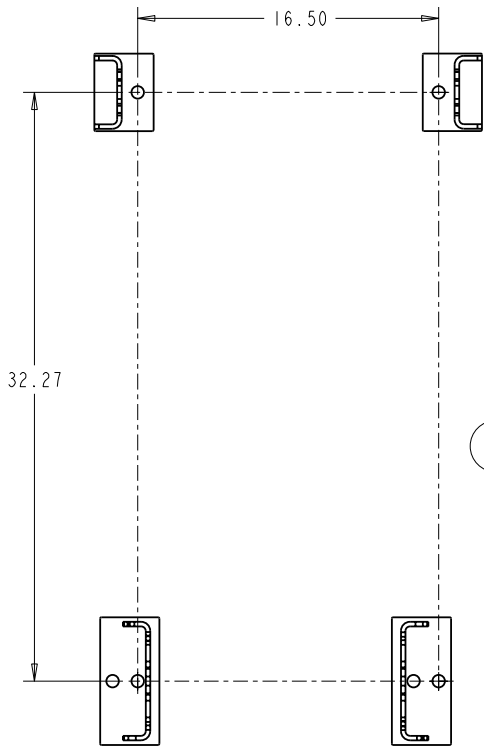





BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	LEG, ENGINE SUPPORT, REAR, FIREPUMP, 6B/4B	8412
2	2	SUPPORT, ENGINE, FRONT, FIREPUMP, C8.3	8908

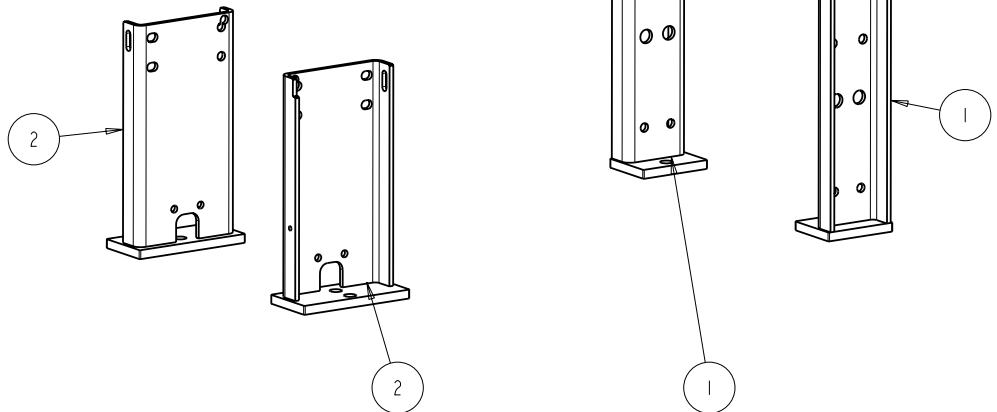

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small> CN <small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± .1°</small>	<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>
	TITLE 1: ASSEMBLY, MOUNTING, ENGINE TITLE 2: FIREPUMP, 6C8.3	
<small>IMPERIAL UNITS</small> DWG UNITS: IN/LB/S	<small>METRIC UNITS</small> DRAWN BY: DAVE N APPD BY:	DATE: 28APR2004
<small>EST WEIGHT:</small> 238534.059	<small>SCALE:</small> 0.200 SCALE	<small>SHEET</small> 10F1
	<small>DRAWING NO:</small> 8907	<small>REV:</small> B

BI	ADDED TOP VIEW	DAVE N	29APR05
A/B	REV PER FRONT SUPPORT	DAVE N	26AUG04
REV	DESCRIPTION OF REVISION	REV BY	DATE





BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	CHANNEL, SUPPORT, ENGINE, REAR, FIREPUMP, 6B/4B	8408
2	1	PLATE, LEG, ENGINE SUPPORT, FIREPUMP	8409

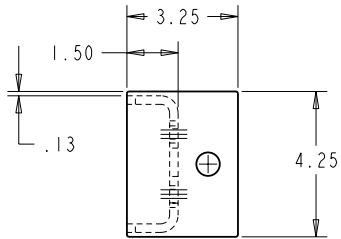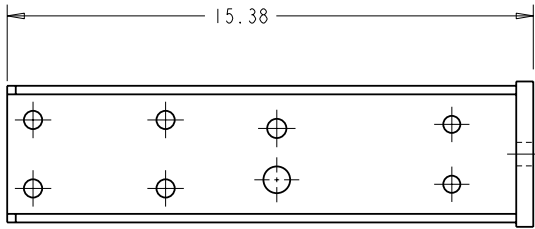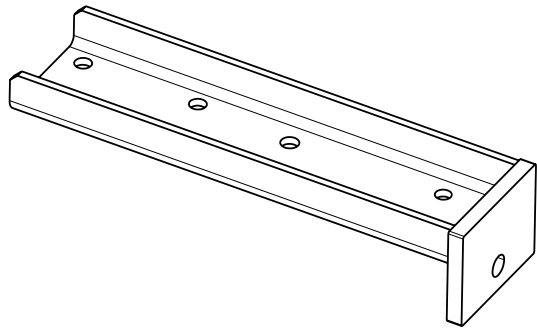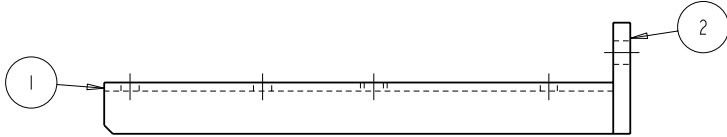

- NOTES:
 1) REMOVE ALL BURS AND SHARP EDGES
 2) PRIME AND PAINT FIRE ENGINE RED
 3) CENTER CHANNEL ON PLATE

REV	DESCRIPTION OF REVISION	REV BY	DATE
D	REV PER ITEM #1	DAVE N	22NOV05
C	REV PER MTG PAD	DAVE N	20OCT04

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM	NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
<small>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± .1°</small>			TITLE 1: LEG, ENGINE SUPPORT, REAR TITLE 2: FIREPUMP, 6B/4B	DWG UNITS: 08FEB2004 EST WEIGHT: 8.239

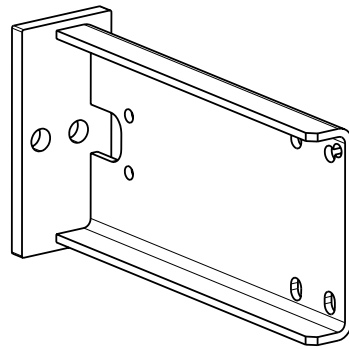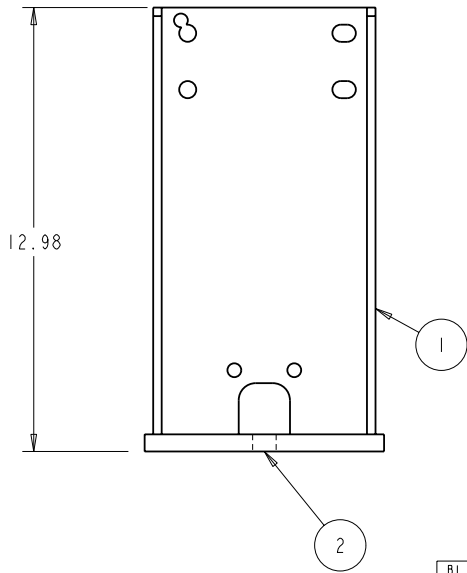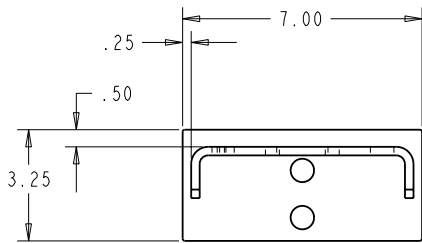

- NOTES:
 1) REMOVE BURRS AND SHARP EDGES
 2) PRIME AND PAINT FIRE ENGINE RED
 3) CENTER CHANNEL ON PLATE


BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	CHANNEL, SUPPORT, ENGINE, REAR, FIREPUMP, C8.3	8909
2	1	PLATE, LEG, ENGINE SUPPORT, FIREPUMP	8910

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>	
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± .1°</small>			TITLE 1: SUPPORT, ENGINE, FRONT TITLE 2: FIREPUMP, C8.3		DWG UNITS: IN/LB/S	DRAWN BY: DAVE N APPD BY:
IMPERIAL UNITS DIM. TOLERANCES .125" ± .015" .250" ± .010" .375" ± .010" .500" ± .010" .750" ± .015" 1.000" ± .015" 1.500" ± .020" 2.000" ± .020" 2.500" ± .025" 3.000" ± .030"	METRIC UNITS DIM. TOLERANCES 3.175 ± .004 6.350 ± .003 9.525 ± .003 12.700 ± .003 19.050 ± .004 25.400 ± .004 38.100 ± .005 50.800 ± .005 63.500 ± .006	EST WEIGHT: 308.884	SCALE: DO NOT SCALE	SHEET 10F1	DRAWING NO: 8908	REV: B

REV	DESCRIPTION OF REVISION	REV BY	DATE
BI	REV PER 8910	DAVE N	20OCT04
B	REV PER 8909	DAVE N	19JUL04
A	MISC REVISIONS	DAVE N	JUN04

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	3	CLAMP, 4" NOMINAL, AC400	8815
2	1	AIR FILTER, 4" DIA. INLET, CFP59,6E,83,9E FIREPUMP	9606
3	1	TUBE, AIR CLEANER EXTENSION, FIREPUMP	9576
4	1	COUPLING, RUBBER, 4", NELSON #89835K	89835K
5	1	RESTRICTION INDIACOR, 1/8" NPT	RAX00-2352

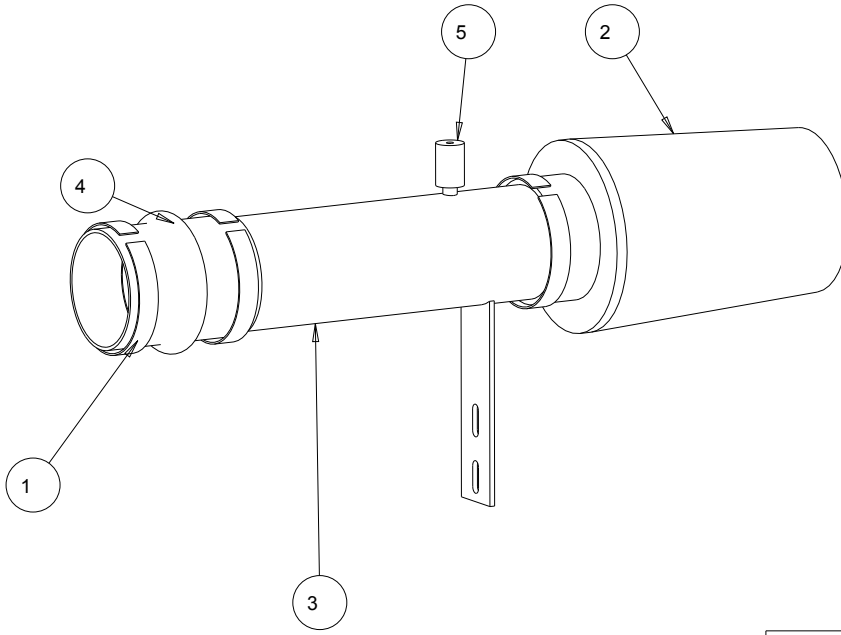

This document contains confidential and trade secret information in the property of Cummins NPower, LLC and is given in confidence. The recipient, by receiving and retaining of this document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not make the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document or upon demand, return the document, all copies thereof and all related copies hereof. ©2004 Cummins NPower, LLC


Cummins NPower
 CUMMINS NPOWER, LLC
 CORPORATE OFFICE
 1600 BUEHLER ROAD
 WHITE BEAR LAKE, MN
 WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
 DESIGN CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

TITLE 1: ASSEMBLY, AIR CLEANER, CFP83
 TITLE 2: FIRE PUMP

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS IN ° IMPERIAL UNITS METRIC UNITS
 THIRD ANGLE PROJECTION

E	OMIT PN: 9525 ENF PN: 2008-275	MAC	10-14-2008	DWG UNITS: IN/LB/S	DRAWN BY: S. DANFORTH	DATE: 28APR2004
D	REV PER AIR CLEANER	DAVE N	13DEC06	EST WEIGHT: 9.400	APPD BY:	DATE:
REV	DESCRIPTION OF REVISION	REV BY	DATE	SCALE: 0.300	DO NOT SCALE	SHEET 10F1
						DRAWING NO: 8911
						REV: E

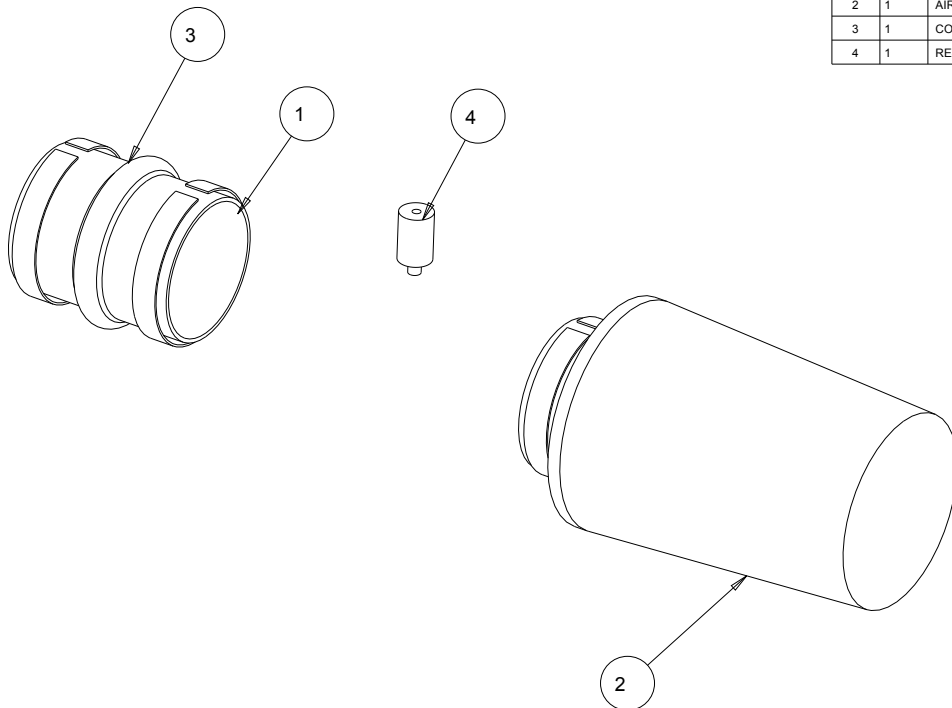

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	3	CLAMP, 4" NOMINAL, AC400	8815
2	1	AIR FILTER, 4" DIA. INLET, CFP59,6E,83,9E FIREPUMP	9606
3	1	COUPLING, RUBBER, 4", NELSON #89835K	89835K
4	1	RESTRICTION INDIACOR, 1/8" NPT	RAX00-2352

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given in confidence. The recipient, by receiving and opening of this document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will not use the document or any copy thereof or the confidential or trade secret information therein. It is not to be distributed, disclosed, or otherwise made available to any other person without the prior written consent of Cummins NPower, LLC. If you are not an intended recipient, you should not disseminate, distribute, or copy this document. If you have received this document in error, please notify the sender immediately by e-mail at npower@cummins.com. All rights reserved. ©2007 Cummins NPower, LLC

Cummins NPower
 CUMMINS NPOWER, LLC
 CORPORATE OFFICE
 1600 BUEHLER ROAD
 WHITE BEAR LAKE, MN
 WWW.NPOWER.CUMMINS.COM

NPPOWER SYSTEMS
 DESIGN CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS IN ° ±0.1
 DIMENSIONS IN INCHES ±0.005
 DIMENSIONS IN METRIC ±0.1







THIRD ANGLE PROJECTION

TITLE 1: ASSEMBLY, AIR CLEANER, CFP83
 TITLE 2: FIRE PUMP

DWG UNITS: IN/LB/S	DRAWN BY: DAVE N	DATE: 07JUL2004
EST WEIGHT: 5.253	APPD BY:	DATE:
SCALE: 0.375	DO NOT SCALE	SHEET 10F1
	DRAWING NO: 9531	REV: D

D	OMIT PN:9525 ENF PN:2008-275	MAC	10-14-2008
C	REV PER AIR CLEANER	DAVE N	13DEC06
REV	DESCRIPTION OF REVISION	REV BY	DATE


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, AIR FILTER COVER, -	13440
2	1	PLATE, SUPT. AIR FILTER COVER, -	13441

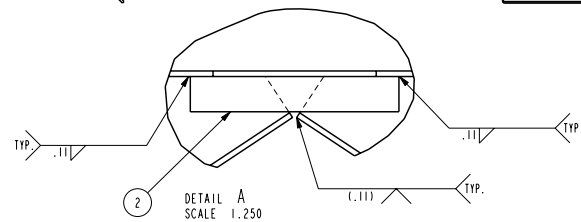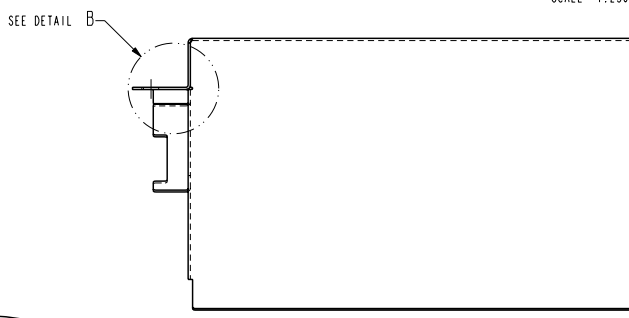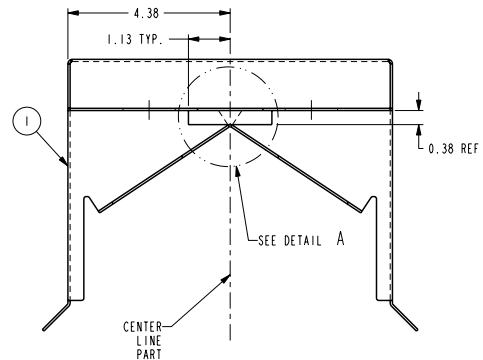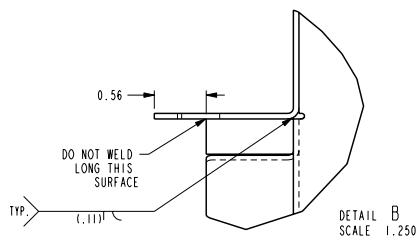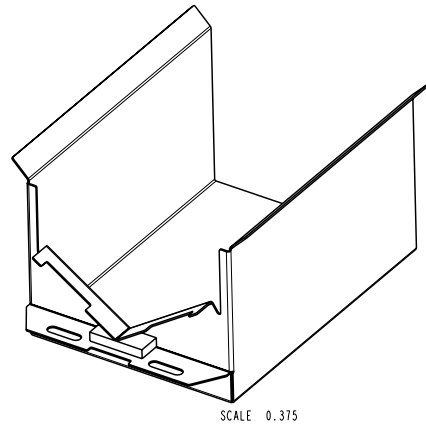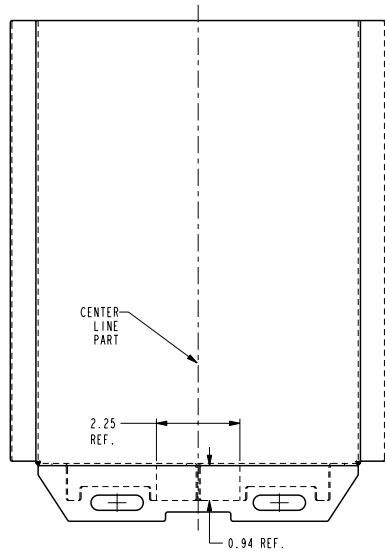

NOTE:
1.) PRIME AND PAINT CASE RED

<small>This drawing contains confidential and trade secret information. It is the property of Cummins Power Generation, LLC and is to be used only for the intended purpose. The recipient of this drawing shall not disclose the contents of this drawing to any third party without the prior written consent of Cummins Power Generation, LLC. If you have any questions regarding this drawing, please contact the person named in the title block. If you are not the intended recipient, you should not disseminate, distribute or copy this drawing. If you have received this drawing in error, you should notify us immediately by telephone at 1-800-451-7334 or by email at powergen@cummins.com. Thank you for your cooperation.</small>				CUMMINS POWER, LLC CORPORATE OFFICE 4810 BEECHER ROAD WHITE PLAIN, IL 62290 WWW.NPOWER.CUMMINS.COM		POWER SYSTEMS DESIGN CENTER 810 LAMAR DRIVE BELLEVILLE, WISCONSIN	
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:				TITLE 1: ASSEMBLY, AIR FILTER COVER			
FRACTIONAL DIMENSIONS ± 0.0005 INCHES / METRIC DIMENSIONS ± 0.0254 MM				TITLE 2: -			
		DWG UNITS: IN/LBS EST WEIGHT: 42238.628		DRAWN BY: MAC APPD BY: -		DATE: 08-21-2008 DATE: -	
		SCALE: DO NOT SCALE SHEET 1 OF 1		SCALE: DO NOT SCALE		DRAWING NO: 13439 REV: PO	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, MOUNTING, TURBO, FRONT, FIREPUMP, C8.3	8915
2	1	HEAT SHIELD, TURBO, C8.3, FIREPUMP	9578
3	1	BRACKET, TURBO GUARD STIFFENER, FIREPUMP	9619

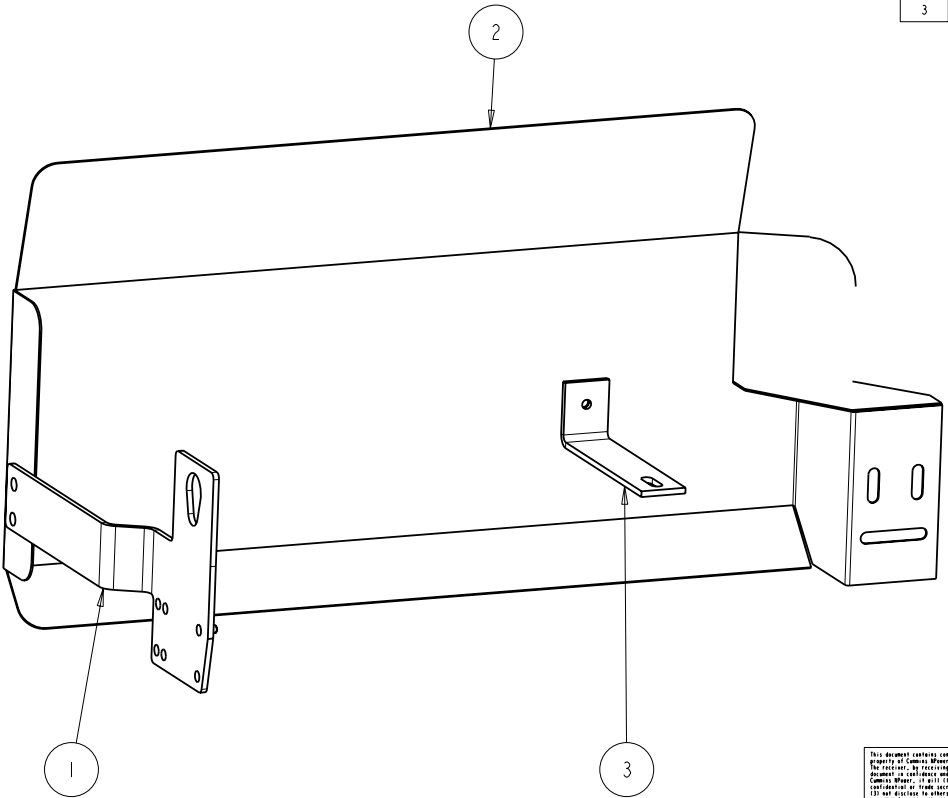

This document contains confidential and trade secret information. It is the property of Cummins Power, LLC and is loaned to the receiver. In confidence, the receiver, by receiving and retaining of the document accepts the obligation to keep this document confidential and secure. This obligation includes not disclosing, copying, distributing, or otherwise using the document for any purpose other than that intended by Cummins Power, LLC. If you are not the intended recipient, you should not disseminate, distribute, or otherwise use this document. If you have received this document in error, please notify the sender immediately by e-mail or by phone. Thank you for your cooperation. ©2004 Cummins Power, LLC. ALL RIGHTS RESERVED.

Cummins Power
 CUMMINS POWER, LLC
 CORPORATE OFFICE
 1600 OVERBLECK ROAD
 WHITE BEAR LAKE, MN
 WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
 DESIGN CENTER
 815 LAWRENCE DRIVE
 DEPERE, WISCONSIN


TITLE 1: ASSEMBLY, HEAT SHIELD
TITLE 2: FIREPUMP, C8.3


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
		± 0.005	± 0.125
		± 0.010	± 0.250
		± 0.015	± 0.375
		± 0.020	± 0.500


DWG UNITS:	DRAWN BY: DAVE N	DATE: 27APR2004
IN/LB/S	APPD BY:	DATE:
EST WEIGHT: 34.424	SCALE: 0.250	DO NOT SCALE
	SHEET 10F1	DRAWING NO: 8913
		REV: D

DI	GRAPHICS UPDATE	DAVE N	14AUG06
D	REV PER SUB COMPONENT	DAVE N	06OCT05
REV	DESCRIPTION OF REVISION	REV BY	DATE


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HEAT SHIELD, TURBO, OSC8.3, FIREPUMP	9530
2	1	BRACKET, MOUNTING, TURBO, FRONT, FIREPUMP, C8.3	8915

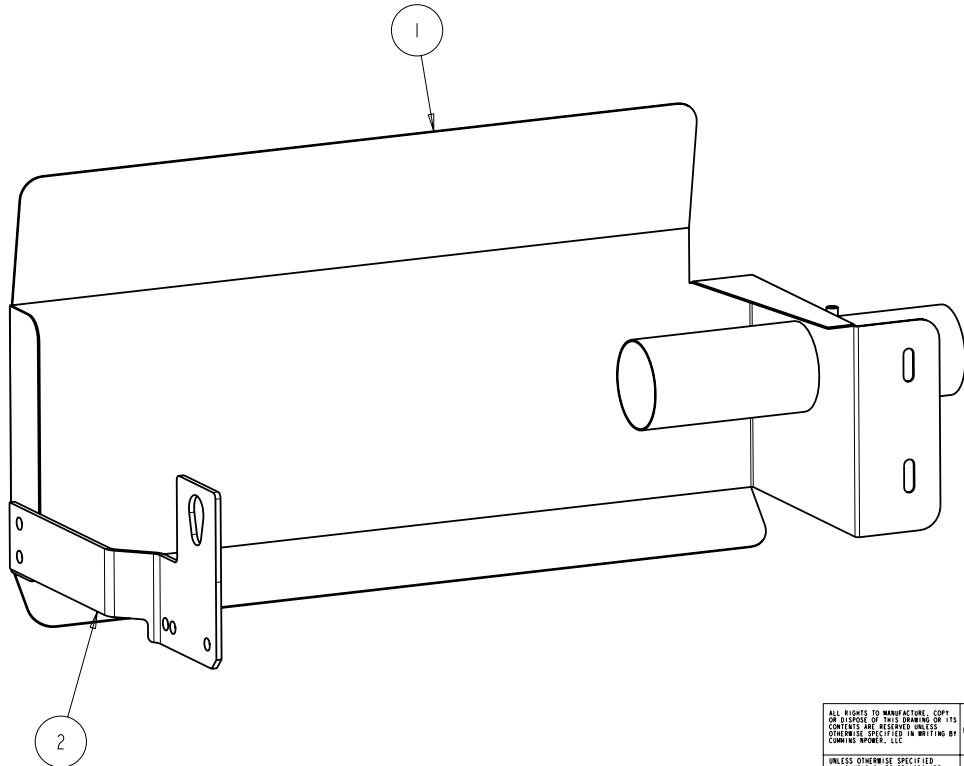

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>
<small>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± .1°</small>			TITLE 1: ASSEMBLY, HEAT SHIELD TITLE 2: FIREPUMP, OSC8.3	DATE: 07JUL2004
<small>IMPERIAL UNITS</small> <small>INCH TOLERANCES</small> <small>IN : ± .015</small> <small>FIN : ± .005</small> <small>APP : ± .001</small> <small>WELD TOLERANCES</small> <small>IN : ± .010</small> <small>MM : ± .25</small>	<small>METRIC UNITS</small> <small>MM TOLERANCES</small> <small>IN : ± .015</small> <small>FIN : ± .005</small> <small>APP : ± .001</small> <small>WELD TOLERANCES</small> <small>IN : ± .010</small> <small>MM : ± .25</small>	DWG UNITS: IN/LB/S	DRAWN BY: DAVE N APPD BY:	DATE:
B GRAPHICS REVISION REV DESCRIPTION OF REVISION	DAVE N REV BY	06OCT05 DATE	EST WEIGHT: 34.424	SCALE: DO NOT SCALE SCALE
			SHEET 1 OF 1	DRAWING NO: 8937 REV: B

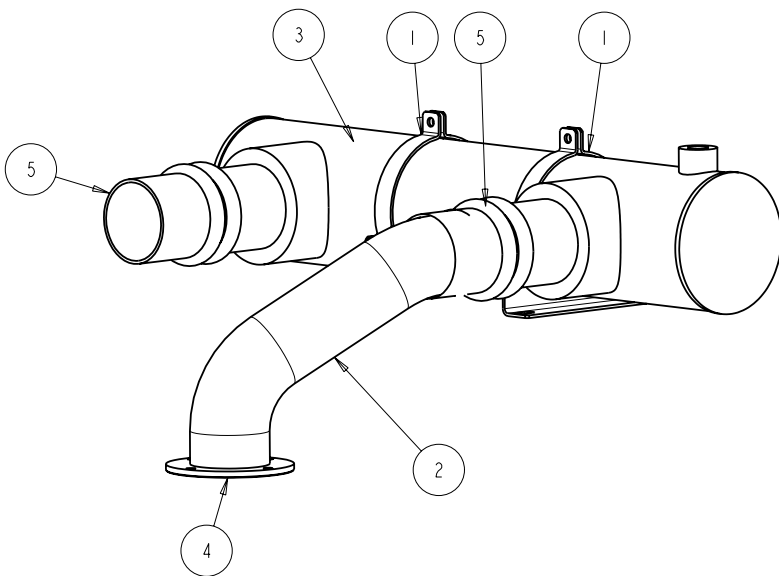


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	CLAMP, HEAT EXCHANGER, 6" DIA, CMAP #CP090496-2	8965
2	1	CAC CONNECTION, CHARGE AIR, C8.3, FIREPUMP	8970
3	1	CAC - SHELL & TUBE	8966
4	1	GASKET, CAC CONNECTION, CUMMINS NO. 3917892, FIREPUMP	9504
5	2	COUPLING, RUBBER, 3-1/2", CUMMINS 3071050	1C9159

ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC			CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM		NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	
UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°			TITLE 1: ASSEMBLY, CHARGE AIR, C8.3 TITLE 2: FIREPUMP		DATE: 18JUN2004	
IMPERIAL UNITS	METRIC UNITS	DWG UNITS:	DRAWN BY: DAVE N	DATE:		
IN/LB/S	MM/KG	IN/LB/S	APPD BY:	DATE:		
EST WEIGHT:	SCALE:	DO NOT SCALE	SHEET 10F1	DRAWING NO:	REV:	
42238.628	0.250		8967		A	

REV	DESCRIPTION OF REVISION	REV BY	DATE
A	REV PER HEAT EXCHANGER	DAVE N	04SEP04

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, WATER, 16 JIC BOTH ENDS	11086-06
2	2	ELBOW, 1" NPTM X #16 JIC 37 DEG	11588
3	1	CLAMP, 1"	LTL-SCPVI6627

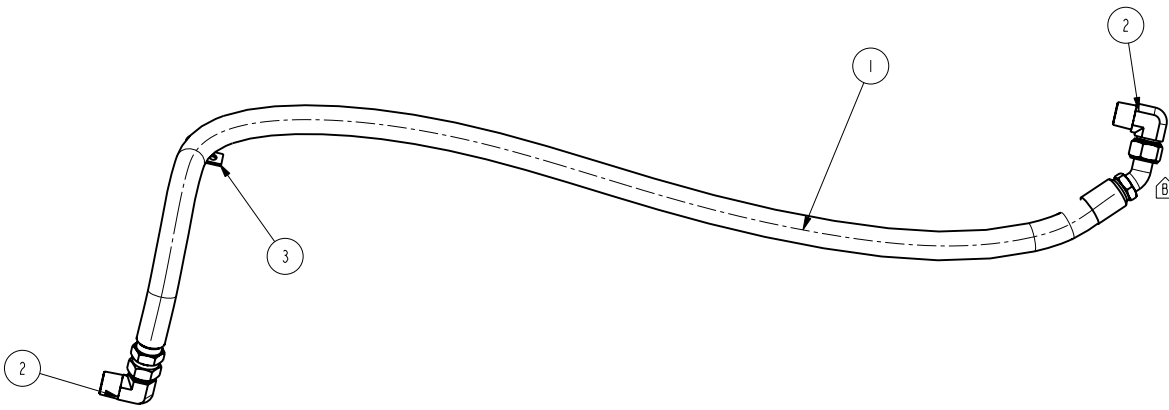

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the recipient in confidence. The recipient, by accepting and retaining of this document accepts the confidentiality of trade secret information therein. I/it will keep the document, its contents and information herein, and will not disclose the document or its contents or any confidential information therein, and will upon completion of the need to retain the document, or upon order, return the document, all copies thereof, and all material used herefrom. COPYRIGHT Cummins NPower, LLC

NPower CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BURNELLY ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:


ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	IN/LB/S	MM/KG/M
	±.005	±.02
	±.010	±.05
	±.015	±.075
	±.020	±.10
	±.030	±.15
	±.040	±.20
	±.050	±.25
	±.060	±.30
	±.070	±.35
	±.080	±.40
	±.090	±.45
	±.100	±.50

TITLE 1: ASSEMBLY, CAC WATER CONNECTION, CFP83-F40
TITLE 2: FIREPUMP

DWG UNITS:	DRAWN BY: DAVE N	DATE: 02MAY2006
1N/LB/S	APPD BY: -	DATE: -
EST WEIGHT:	SCALE:	DO NOT
42238.628	0.200	SCALE
		SHEET
		1 OF 1
		DRAWING NO:
		10903
		REV:
		B

REV	DESCRIPTION OF REVISION	REV BY	DATE
B	REV FOR ADDED 45° FITTING	JD T	22APR07
A	REV PER FLEX CONNECTION	DAVE N	13DEC06

ITEM	QTY	DESCRIPTION	END FITTING	END FITTING	LENGTH "L"
01	A/R	CFP11E FUEL COOLER TO JW HX	45° SWIVEL	STRAIGHT SWIVEL	16"
02	A/R	CFP11E CAC HX TO FUEL COOLER	STRAIGHT SWIVEL	STRAIGHT SWIVEL	44"
03	A/R	CFP11E MISC PIPING	STRAIGHT SWIVEL	STRAIGHT SWIVEL	36"
04	A/R	CFP83 COOLING LOOP CONNECTION	STRAIGHT SWIVEL	STRAIGHT SWIVEL	29"
05	A/R	CFP83-F40 COOLING LOOP CONNECTION	STRAIGHT SWIVEL	STRAIGHT SWIVEL	30"
06	A/R	CFP83-F40 CAC WATER CONNECTION	45° SWIVEL	STRAIGHT SWIVEL	68"
07					
08					

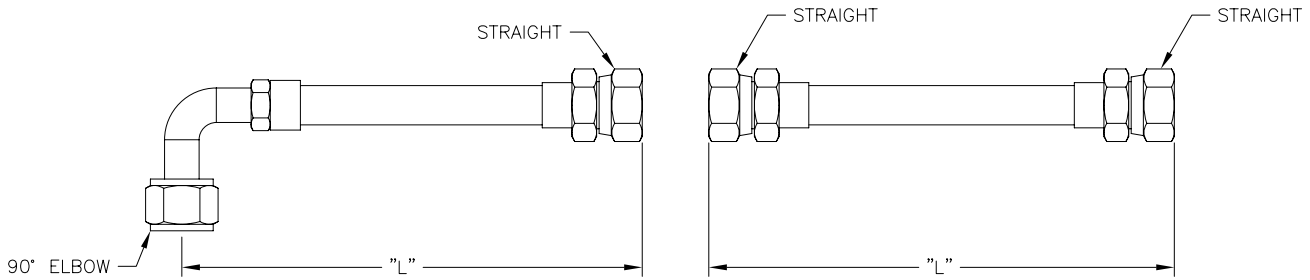

NOTES

- 1) FLEXIBLE HOSE RATING:
 - 250 PSI BURST
 - WATER/SEA WATER @ TEMP 32°-120°
 - ENVIORMENT MAY CONTAIN OIL, FUEL, OR ENGINE COOLANT
 - ENVIORMENT TEMPERATURE UP TO 200°
- 2) END FITTINGS INSTALLED ON HOSE
- 3) EACH PIECE INDIVIDUALLY LABELED

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of this document, consents to the disclosure of trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower, LLC

Cummins NPower

CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

REF. SCALES


HOSE, WATER, #16 3/7" JIC ENDS

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE


ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
± 0.001	± 0.001	± 0.001
± 0.002	± 0.002	± 0.002
± 0.003	± 0.003	± 0.003
± 0.004	± 0.004	± 0.004
± 0.005	± 0.005	± 0.005
± 0.006	± 0.006	± 0.006
± 0.007	± 0.007	± 0.007
± 0.008	± 0.008	± 0.008
± 0.009	± 0.009	± 0.009
± 0.010	± 0.010	± 0.010

DWG UNITS: IN \ LB \ S	DRAWN BY: DAVE N	DATE: 20DEC2006
EST WEIGHT: NTS	APPD BY:	DATE:
SCALE: DO NOT SCALE	SHEET 10F1	DRAWING NO: 11086
		REV: A

A	45° SWIVEL WAS STRAIGHT, PART LENGTHS	JDT	4APRO7
REV	DESCRIPTION OF REVISION	BY	DATE

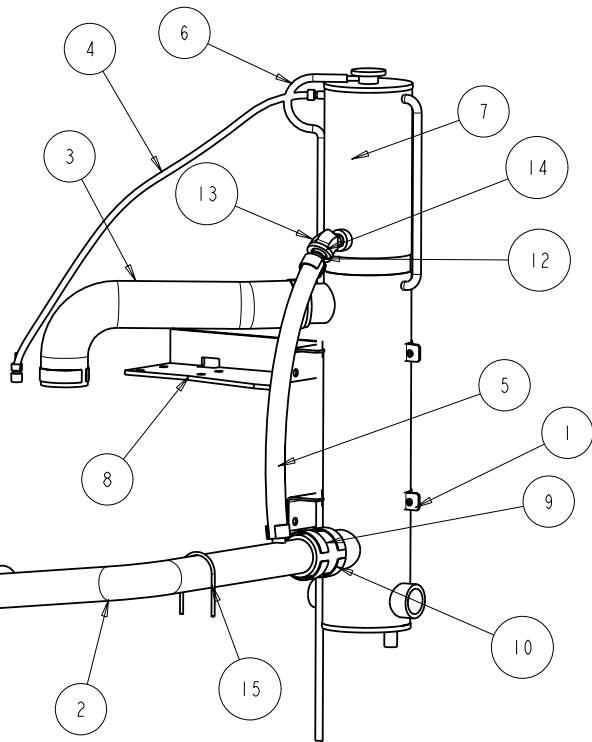



BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	CLAMP, SUPPORT, HEAT EXCHANGER, CHAMP #300385	8819
2	1	TUBE, WATER INLET, FIREPUMP, c8.3	8920
3	1	HOSE, WATER OUTLET, FIREPUMP, C8.3	8921
4	1	ASSEMBLY, VENT LINE, 3/16" x 28", FIREPUMP	9658
5	1	FILL HOSE, 3/4" ID X 20" LG #70232GL	70232GL_8919
6	1	TUBE, OVERFLOW, 5/16" ID x 36" LG	8662
7	1	HEAT EXCHANGER, 5", #CM012904-1	8687
8	1	BRACKET, SUPPORT, HEAT EXCHANGER, FIREPUMP, C8.3	8922
9	4	CLAMP, 2-1/2" NOMINAL	8928
10	1	HOSE, CONNECTION, 2.0 ID, FIREPUMP	8929
11	1	DRAIN VALVE, 1/4" NPT	80511
12	2	CLAMP, 1" NOMINAL, #92216	92216
13	1	STREET ELBOW, BLK, 3/4" NPT, 45 DEG.	E3445
14	1	ADAPTER, 3/4" NPT X 3/4" OD	R-68HB_12-8
15	1	U-BOLT, 2" TUBE	U-BOLT225

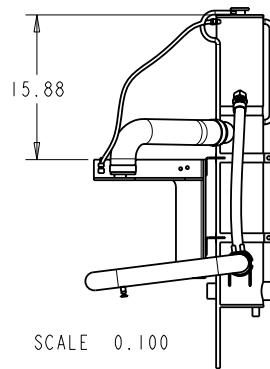


<small>ALL RIGHTS TO MANUFACTURING COPY OR REPRODUCTION OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>					<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>	
<small>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			<small>IMPERIAL UNITS METRIC UNITS</small>		<small>TITLE 1: ASSEMBLY, HEAT EXCHANGER, 6C8.3 TITLE 2: FIREPUMP</small>		<small>DWG UNITS: DRAWN BY: DAVE N DATE: 28APR2004 IN/LB/S APPD BY: DATE:</small>	
<small>E ADDED DRAIN VALVE DAVE N 30MAY05</small>			<small>D ADDED 45 ELBOW, VENT & VIEW DAVE N 15DECO4</small>		<small>EST WEIGHT: SCALE: DO NOT SHEET DRAWING NO: REV: 42238.628 0.188 SCALE 10F1 8919 E</small>			
<small>REV DESCRIPTION OF REVISION REV BY DATE</small>								


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, VENT LINE, #801-4 X 28" LG, FIREPUMP	9658-HOSE
2	1	BUSHING, 1/4" NPT X 1/2" NPT	LTL-SRB-1214
3	2	ADAPTER, FLARED, 1/4" NPT	R-30882-4-4
4	2	ADAPTER, FLARED, 1/4" NPT x #4 FLARE	R-48F-4-4

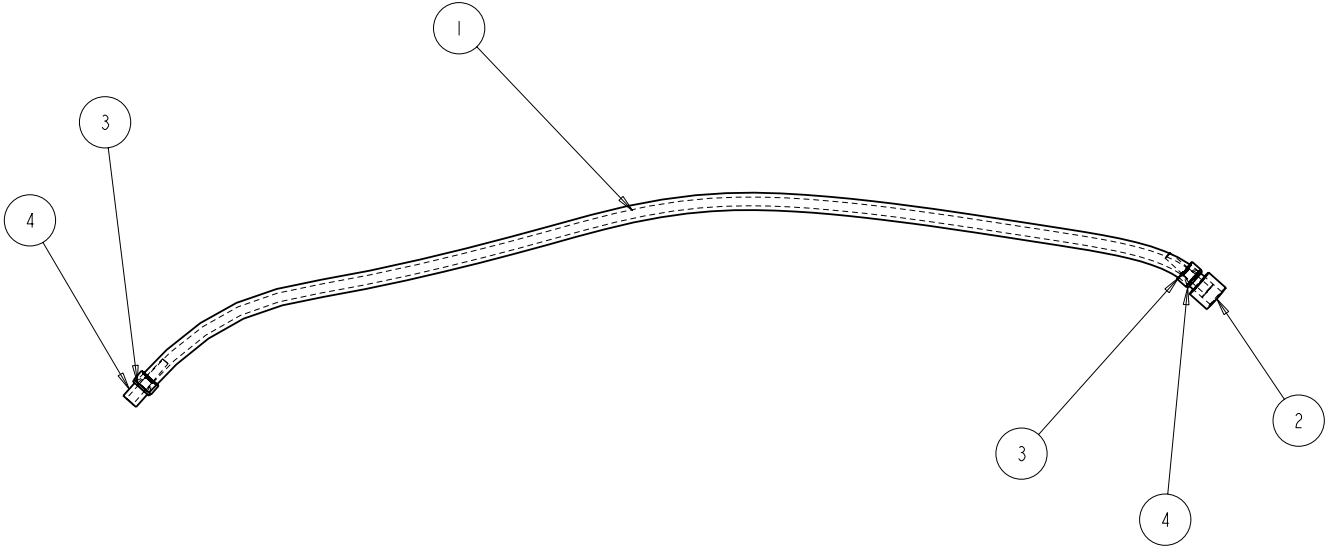


<small>ALL RIGHTS TO MANUFACTURING COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>							
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			<small>TITLE 1: ASSEMBLY, VENT LINE, 3/16" x 28" TITLE 2: FIREPUMP</small>	<small>DATE: 05AUG2004</small>							
<small>IMPERIAL UNITS</small> <small>INCH TOLERANCES</small> <small>1/16" ± 0.010</small> <small>1/32" ± 0.005</small> <small>3/16" ± 0.005</small> <small>1/2" ± 0.005</small> <small>3/4" ± 0.005</small> <small>1" ± 0.005</small>	<small>METRIC UNITS</small> <small>DECIMAL TOLERANCES</small> <small>0.1 ± 0.05</small> <small>0.2 ± 0.05</small> <small>0.5 ± 0.05</small> <small>1.0 ± 0.05</small> <small>1.5 ± 0.05</small> <small>2.0 ± 0.05</small>	<small>DWG UNITS:</small> <small>IN/LB/S</small>	<small>DRAWN BY: DAVE N</small> <small>APPD BY: -</small>	<small>SCALE: DO NOT SCALE</small> <small>SHEET 10F1</small>							
<table border="1"> <thead> <tr> <th>REV</th> <th>DESCRIPTION OF REVISION</th> <th>REV BY</th> <th>DATE</th> </tr> </thead> <tbody> <tr> <td>A</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	REV	DESCRIPTION OF REVISION	REV BY	DATE	A				<small>EST WEIGHT:</small> <small>42238.628</small>	<small>DRAWING NO:</small> <small>9658</small>	<small>REV:</small>
REV	DESCRIPTION OF REVISION	REV BY	DATE								
A											

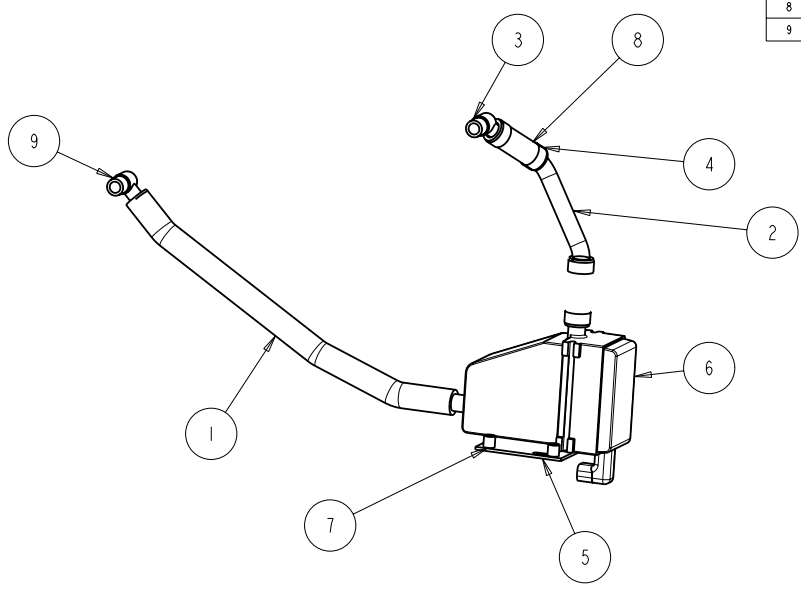


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, 3/4" ID #80242GL X 20" LG	8931
2	1	TUBE, COOLANT HEATER, C8.3	8932
3	1	ADAPTER, BARBED, 1/2" NPT X 3/4" TUBE, 45 DEG	I-2_HB_45
4	2	COUPLING, HOSE, 3/4" I.D. #80242GL X 3" LG, FIREPUMP	8562
5	1	BRACKET, MOUNTING, COOLANT HEATER, FIREPUMP	9542
6	1	CIRCULATION HEATER, P&T #3315033, 2250W, 120V, 176 DEG F	9599
7	2	SPACER, 0.5 OD X 0.38 ID X 0.50 LG	9618
8	6	CLAMP, 1" NOMINAL #92216	CLAMP_100
9	1	ADAPTER, 1/2" NPT X 3/4" 90 DEG BARB	R-269HB-12-8

<small>ALL RIGHTS TO MANUFACTURING COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>					<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>																					
<small>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			<small>IMPERIAL UNITS METRIC UNITS</small> <small>TYPICAL TOLERANCES</small> <small>FIN. ± 0.004 FIN. ± 0.05</small> <small>DRY ± 0.001 DR. ± 0.02</small> <small>HEAT TREATING HEAT TREATING</small> <small>DR. ± 0.002 DR. ± 0.02</small> <small>TH. ± 0.001 TH. ± 0.02</small>		<small>TITLE 1: ASSEMBLY, COOLANT HEATING, C8.3</small> <small>TITLE 2:</small>		<small>DWG UNITS: DRAWN BY: DAVE N DATE: 04MAY2004</small> <small>IN/LB/S APPD BY: DATE:</small>																					
<table border="1"> <tr> <th>REV</th> <th>DESCRIPTION OF REVISION</th> <th>REV BY</th> <th>DATE</th> </tr> <tr> <td>D</td> <td>RELOCATED ON ENGINE</td> <td>DAVE N</td> <td>14DECO4</td> </tr> <tr> <td>C</td> <td>HEATER WAS 1500 WATT</td> <td>DAVE N</td> <td>18NOVO4</td> </tr> <tr> <td>B</td> <td>REV PER INSTALL</td> <td>DAVE N</td> <td>23AUG04</td> </tr> <tr> <td>A</td> <td>REV PER COOLANT HEATER</td> <td>DAVE N</td> <td>JUN04</td> </tr> </table>			REV	DESCRIPTION OF REVISION	REV BY	DATE	D	RELOCATED ON ENGINE	DAVE N	14DECO4	C	HEATER WAS 1500 WATT	DAVE N	18NOVO4	B	REV PER INSTALL	DAVE N	23AUG04	A	REV PER COOLANT HEATER	DAVE N	JUN04	<small>EST WEIGHT:</small> 565.840		<small>SCALE: DO NOT SCALE</small> SCALE 10F1		<small>DRAWING NO: 8930</small> <small>REV: D</small>	
REV	DESCRIPTION OF REVISION	REV BY	DATE																									
D	RELOCATED ON ENGINE	DAVE N	14DECO4																									
C	HEATER WAS 1500 WATT	DAVE N	18NOVO4																									
B	REV PER INSTALL	DAVE N	23AUG04																									
A	REV PER COOLANT HEATER	DAVE N	JUN04																									

DETAIL A
SCALE 0.400


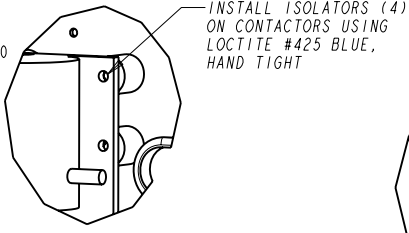


DETAIL B
SCALE 0.400

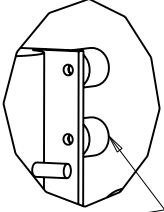

SEE DETAIL A

SEE DETAIL B

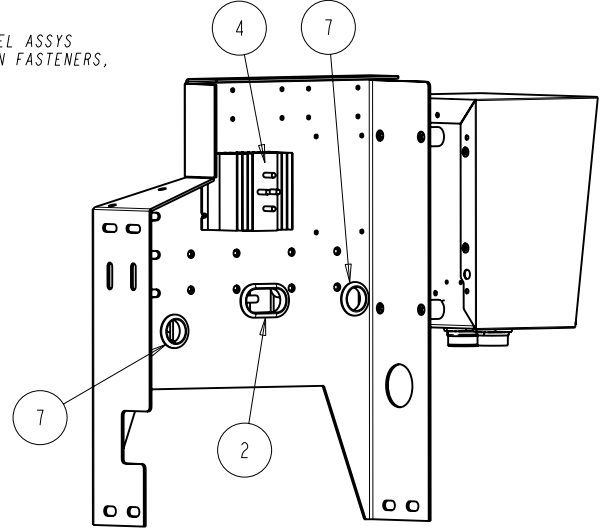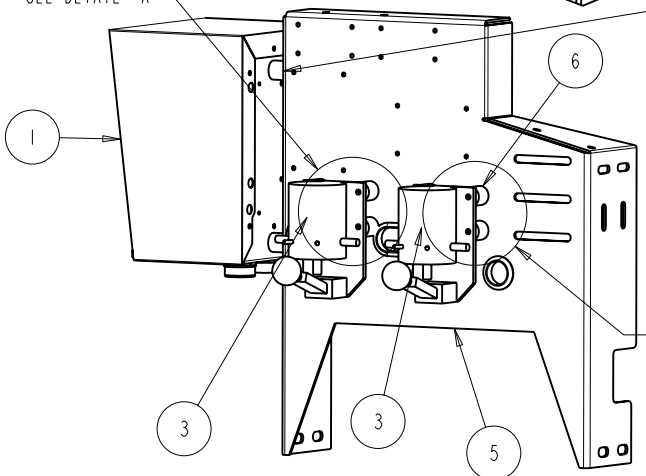

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, INSTRUMENT PANEL, ISOLATED, FIREPUMP	13236
2	1	GROMMETT	508-1057
3	2	CONTACTOR, MANUAL OVERRIDE, FIREPUMP	8824
4	1	BATTERY ISOLATOR, FIRE PUMP	8838
5	1	BRACKET, OPERATORS STATION, B & C SERIES, FIREPUMP	9561
6	8	ISOLATOR, PLATE MOUNT, 5/16-18x1x1 NEOPRENE, TECH PRODUCTS #51272	13011
7	2	GROMMETT, 1.50 DIA HOLE	19447

E D

REV	DESCRIPTION OF REVISION	REV BY	DATE
E	MODIFIED ISOLATOR MTG SPEC	S DUBICK	16JUL08
D	CHANGED ISOLATOR	S DUBICK	28MAY08
C	REV PER PANEL	DAVE N	13OCT06
B	REV PER BRKT. ADDED GROMMETS	DAVE N	15DEC04



UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± °	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	INCHES	MILLIMETERS
	FRACTIONS	DECIMALS
	16	0.0005
	32	0.001
	64	0.002
	128	0.005
	256	0.010
	512	0.020
	1024	0.050


NPow | CUMMINS NPow, LLC | NPow SYSTEMS
 CORPORATE OFFICE | 1600 BUEKLE ROAD | DESIGN CENTER
 WHITE BEAR LAKE, WY | 875 LAWRENCE DRIVE
 WY 82401 | WWW.NPOWER.CUMMINS.COM | DEPERE, WISCONSIN

TITLE 1: ASSEMBLY, OPERATORS STATION, 6B MARINE
 TITLE 2: FIREPUMP
 DWG UNITS: IN/LB/S | DRAWN BY: DAVE N | DATE: 11AUG2004
 APPD BY: | EST WEIGHT: 56.960 | SCALE: 0.200 | DO NOT SCALE | SHEET 1 OF 1 | DRAWING NO: 9560 | REV: E

ATTACH CONTACTOR AND PANEL ASSYS
WITH LOCTITE #425 BLUE ON FASTENERS,
HAND TIGHT + 1/4 TURN.

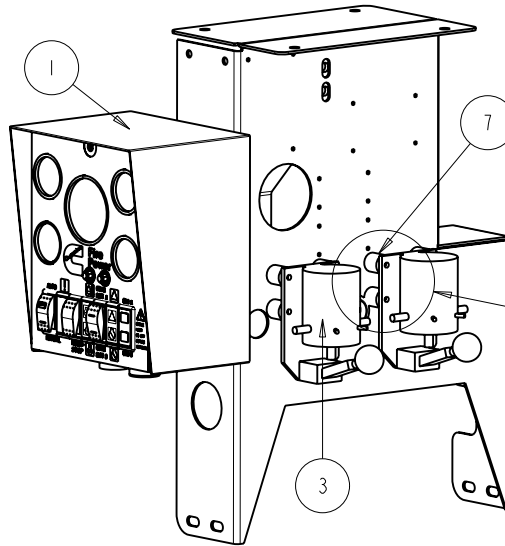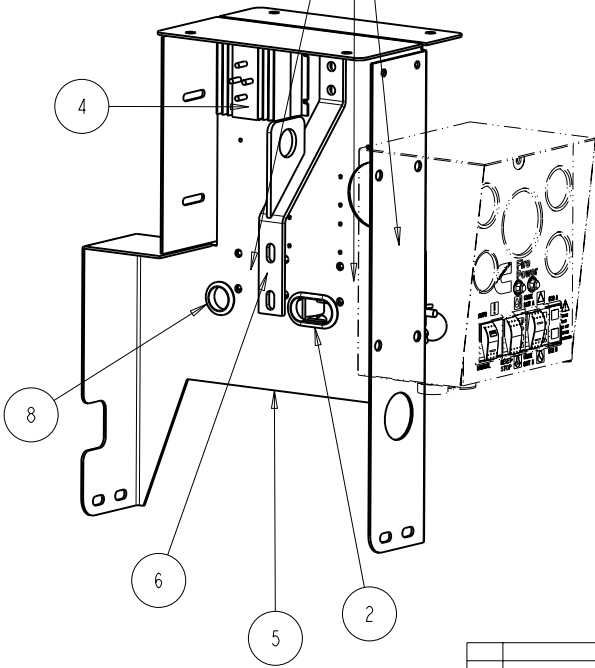

DETAIL A
SCALE 0.400

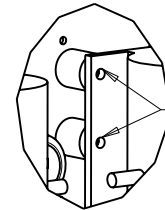

INSTALL ISOLATORS (4)
ON EACH CONTACTOR WITH
LOCTITE #425 BLUE,
HAND TIGHT.

SEE DETAIL A

REF. SCALES

CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
Ⓢ 1	1	ASSEMBLY, INSTRUMENT PANEL, ISOLATED, FIREPUMP	13236
2	1	GROMMETT	508-1057
3	2	CONTACTOR, MANUAL OVERRIDE, FIREPUMP	8824
4	1	BATTERY ISOLATOR, FIRE PUMP	8838
5	1	BRACKET, MOUNTING, OPERATORS STATION, C8.3, FIREPUMP	9500
6	1	BRACKET, STIFFENER, OPERATOR STATION, FIREPUMP	9501
Ⓡ 7	8	ISOLATOR, PLATE MOUNT, 5/16-18x1x1 NEOPRENE, TECH PRODUCTS #51272	13011
8	1	GROMMETT, 1.50 DIA HOLE	19447

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE


ANGULAR DIMENSIONS ±	IMPERIAL UNITS	METRIC UNITS
± 0.000	± 0.000	± 0.000
± 0.005	± 0.005	± 0.005
± 0.010	± 0.010	± 0.010
± 0.015	± 0.015	± 0.015
± 0.020	± 0.020	± 0.020
± 0.030	± 0.030	± 0.030
± 0.040	± 0.040	± 0.040
± 0.050	± 0.050	± 0.050
± 0.060	± 0.060	± 0.060
± 0.070	± 0.070	± 0.070
± 0.080	± 0.080	± 0.080
± 0.090	± 0.090	± 0.090
± 0.100	± 0.100	± 0.100
± 0.125	± 0.125	± 0.125
± 0.150	± 0.150	± 0.150
± 0.175	± 0.175	± 0.175
± 0.200	± 0.200	± 0.200
± 0.250	± 0.250	± 0.250
± 0.300	± 0.300	± 0.300
± 0.375	± 0.375	± 0.375
± 0.450	± 0.450	± 0.450
± 0.500	± 0.500	± 0.500
± 0.625	± 0.625	± 0.625
± 0.750	± 0.750	± 0.750
± 0.875	± 0.875	± 0.875
± 1.000	± 1.000	± 1.000
± 1.250	± 1.250	± 1.250
± 1.500	± 1.500	± 1.500
± 1.750	± 1.750	± 1.750
± 2.000	± 2.000	± 2.000
± 2.500	± 2.500	± 2.500
± 3.000	± 3.000	± 3.000
± 3.750	± 3.750	± 3.750
± 4.500	± 4.500	± 4.500
± 5.000	± 5.000	± 5.000

THIRD ANGLE PROJECTION

TITLE 1: ASSEMBLY, OPERATORS STATION, 6CCTA8.3
TITLE 2: FIREPUMP

DWG UNITS:	IN/LB/S	DRAWN BY:	DAVE N	DATE:	08SEP2004
EST WEIGHT:	65.510	APPD BY:			
SCALE:	0.200	DO NOT SCALE	SHEET 10F1	DRAWING NO:	9592
				REV:	C

REV	DESCRIPTION OF REVISION	REV BY	DATE
C	MODIFY ISOLATOR MTG SPEC., INST. PANEL	S DUBICK	18JUL08
B	CHANGED ISOLATOR	S DUBICK	28MAY08
A	REV PER OP STATION	DAVE N	13DEC06

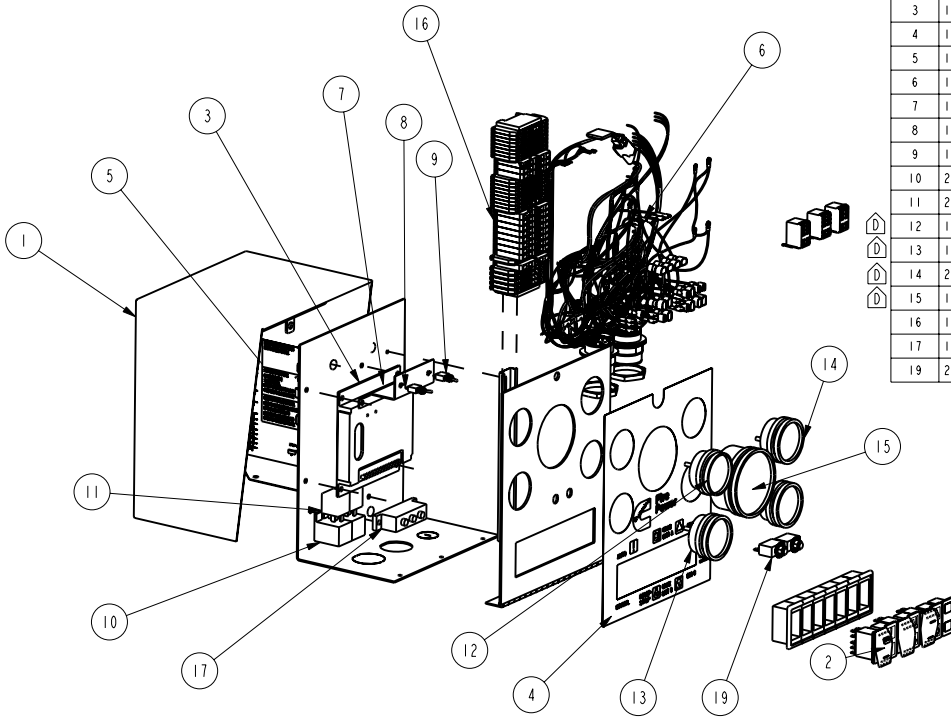

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ENCLOSURE, FIREPUMP INSTRUMENT	10454
2	1	ASSEMBLY, SWITCH GANG, FIREPUMP	11084
3	1	MODULE, OVERSPEED, FIREPUMP	8836
4	1	DECAL, INSTRUMENT PANEL, FIREPUMP	10731
5	1	DECAL, INSTRUCTION, GAUGE PANEL	11136
6	1	ASSEMBLY, HARNESS, INSTRUMENT PANEL, FIREPUMP	11185
7	1	BRACKET, TOGGLE SWITCH MOUNTING, FIREPUMP GAUGE PANEL - E-ENG	8887
8	1	SWITCH, TOGGLE, MINIATURE, MOMENTARY (ON)-OFF-(ON)	8889
9	1	SWITCH, TOGGLE, MINIATURE, SUSTAINED ON-OFF-ON	8888
10	2	RELAY HOLDER, FIREPUMP	9528
11	2	RELAY, INSTRUMENT PANEL, 40 AMP, 12vdc	8857
12	1	GAUGE, OIL PRESSURE, 0-80 PSI, 12VDC, FIREPUMP	11194
13	1	GAUGE, WATER TEMPERATURE, 12VDC, FIREPUMP	11197
14	2	GAUGE, VOLTMETER 8-18VDC, FIREPUMP	11200
15	1	GAUGE, TACHOMETER/HOUR METER, FIREPUMP	11202
16	1	ASSEMBLY, TERMINALS, GAUGE PANEL, FIREPUMP	11137
17	1	MODULE, DIODE, INSTRUMENT PANEL, FIREPUMP	9529
19	2	CIRCUIT BREAKER, INSTRUMENT PANEL, FIREPUMP	11203

NOTES:
 GAUGE PANEL EXPLOSION DEPICTED FOR SERVICE PART IDENTIFICATION. WHERE APPLICABLE, SUB-ASSEMBLY DRAWINGS MAY BE REQUIRED FOR COMPONENT DETAIL(S). WIRING HARNESS IS NOT FIELD SERVICEABLE WITHOUT TRP ISSUED BY CUMMINS FIREPOWER IF APPLICABLE.

D	CORRECTED GAUGE P/N'S	S. DANFORTH	02JAN2007
C	REDRAWN AND RELEASED	ANTONIO G.	25-SEP-06
B	REVISED TERMINAL STRIP	S. DANFORTH	
A	PROTOTYPE RELEASE	S. DANFORTH	10JUL2006
REV	DESCRIPTION OF REVISION	REV BY	DATE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION


IMPERIAL UNITS	METRIC UNITS
FRAMES	MM
HOLES	MM
TEETH	MM
SPACES	MM

DWG UNITS: 1N/LB/S
 EST WEIGHT: 21.556
 SCALE: 0.200
 DO NOT SCALE
 SHEET 1 OF 1
 DRAWING NO: 10452
 REV: D

Fire Power
 CUMMINS NPPOWER, LLC
 CORPORATE OFFICE
 1600 BUENKE ROAD
 WHITE BEAR LAKE, WI
 WWW.NPOWER.CUMMINS.COM

NPPOWER SYSTEMS
 DESIGN CENTER
 835 LAWRENCE DRIVE
 DEPERE, WISCONSIN

TITLE 1: ASSEMBLY, INSTRUMENT PANEL
 TITLE 2: FIREPUMP
 DRAWN BY: S. DANFORTH
 DATE: 10JUL2006

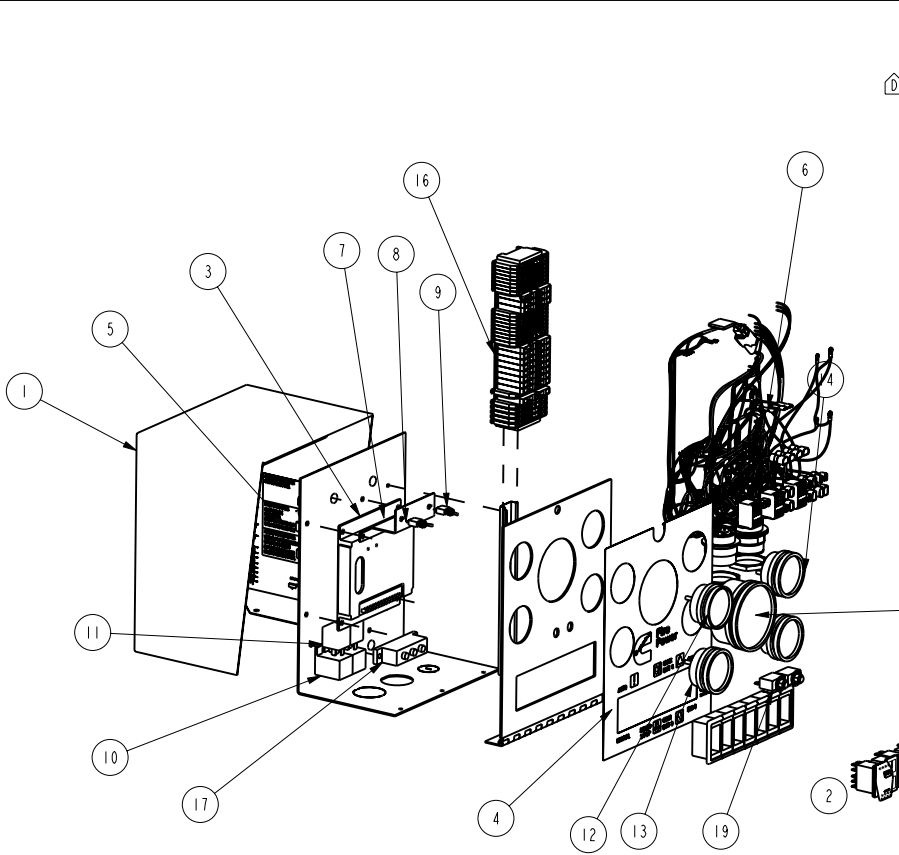

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ENCLOSURE, FIREPUMP INSTRUMENT	10454
2	1	ASSEMBLY, SWITCH GANG 24VDC, FIREPUMP	11085
3	1	MODULE, OVERSPEED, FIREPUMP	8836
4	1	DECAL, INSTRUMENT PANEL, FIREPUMP	10731
5	1	DECAL, INSTRUCTION, GAUGE PANEL	11136
6	1	ASSEMBLY, HARNESS, INSTRUMENT PANEL, FIREPUMP	11185
7	1	BRACKET, TOGGLE SWITCH MOUNTING, FIREPUMP GAUGE PANEL - E-ENG	8887
8	1	SWITCH, TOGGLE, MINIATURE, MOMENTARY (ON)-OFF-(ON)	8889
9	1	SWITCH, TOGGLE, MINIATURE, SUSTAINED ON-OFF-ON	8888
10	2	RELAY HOLDER, FIREPUMP	9528
11	2	RELAY, INSTRUMENT PANEL, 40 AMP, 12vdc	8857
12	1	GAUGE, OIL PRESSURE, 0-80 PSI, 24VDC, FIREPUMP	11195
13	1	GAUGE, WATER TEMPERATURE, 24VDC, FIREPUMP	11198
14	2	GAUGE, VOLTMETER 16-32VDC, FIREPUMP	11201
15	1	GAUGE, TACHOMETER/HOUR METER, FIREPUMP	11202
16	1	ASSEMBLY, TERMINALS, GAUGE PANEL, FIREPUMP	11137
17	1	MODULE, DIODE, INSTRUMENT PANEL, FIREPUMP	9529
19	2	CIRCUIT BREAKER, INSTRUMENT PANEL, FIREPUMP	11203

NOTES:
 GAUGE PANEL EXPLOSION DEPICTED FOR SERVICE PART IDENTIFICATION. WHERE APPLICABLE, SUB-ASSEMBLY DRAWINGS MAY BE REQUIRED FOR COMPONENT DETAIL(S). WIRING HARNESS IS NOT FIELD SERVICEABLE WITHOUT TRP ISSUED BY CUMMINS FIREPOWER IF APPLICABLE.

D	11085 WAS 11084	S. DANFORTH	02JAN2007
C	REDRAWN AND RELEASED	ANTONIO G.	25-SEP-06
B	REVISED TERMINAL STRIP	S. DANFORTH	
A	PROTOTYPE RELEASE	S. DANFORTH	10JUL2006
REV	DESCRIPTION OF REVISION	REV BY	DATE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION

IMPERIAL UNITS	METRIC UNITS
±.005	±.127
±.010	±.254
±.015	±.381
±.030	±.762
±.060	±.1524

EST WEIGHT: 20.096
 SCALE: 0.200
 DO NOT SCALE
 SHEET 1 OF 1
 DRAWING NO: 10453
 REV: D




TITLE 1: ASSEMBLY, INSTRUMENT PANEL
 TITLE 2: FIREPUMP

DWG UNITS: 1N/LB/S
 APPD BY: S. DANFORTH
 DATE: 10JUL2006

CUMMINS FIREPOWER, LLC
 CORPORATE OFFICE
 1600 BURNHOLE ROAD
 WHITE BEAR LAKE, WI
 WWW.FIREPOWER.CUMMINS.COM


POWER SYSTEMS
 DESIGN CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	SWITCH, WATER TEMP, 200F SETTING, RS#85879-A3	8860
2	1	SWITCH, OIL PRESSURE, 16 PSI, RS#85858-A3	8861
3	1	SENDER, WATER TEMPERATURE, DATCON #02022-00	8862
4	1	SENDER, OIL TEMPERATURE, DATCON #02504-00	8863
5	1	SENSOR, MAG PICK UP	9569

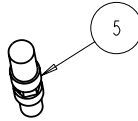


<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC.</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>		
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS: 0.1°</small>			TITLE 1: ASSEMBLY, SENSOR PACKAGE, C8.3 TITLE 2: FIREPUMP				
<small>IMPERIAL UNITS</small> <small>INCH TOLERANCES</small> <small>0.1, 0.004, 0.001</small> <small>0.001, 0.002, 0.001</small>		<small>METRIC UNITS</small> <small>DECIMAL TOLERANCES</small> <small>0.1, 0.004, 0.001</small> <small>0.001, 0.002, 0.001</small>		DWG UNITS: IN/LB/S		DRAWN BY: DAVE N APPD BY: -	
A UPDATED PER ASSEMBLY REV DESCRIPTION OF REVISION		DAVE N REV BY DATE		26AUG04 DATE		DATE: 21AUG2004 DATE: -	
				EST WEIGHT: 42238.628		SCALE: DO NOT SCALE SHEET 10F1	
						DRAWING NO: 9574 REV: A	


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	FUEL LINE, RETURN, #261-6 X 44" LG, FIREPUMP	9575.RETURN
2	1	FUEL LINE, SUPPLY, 261-8 X 18" LG, FIREPUMP	9575.SUPPLY
3	1	BULKHEAD, #6 X 1/4" NPT	6_WGTX-S
4	1	BULKHEAD, #8 X 3/8" NPT	8_WGTX-S
5	1	CLAMP, 5/8" NOMINAL, #CL-6	8663
6	1	ADAPTER, HOSE, FEMALE JIC 45 DEG. SWIVEL	20820-8-8
7	1	ELBOW, HOSE, FEMALE JIC 37 DEG. SWIVEL 90 DEG. ELBOW	23920-6-6
8	1	ELBOW, HOSE, FEMALE JIC 37 DEG.	23920-8-8
9	1	ELBOW, 3/4" NPT X #8 FLARE	R-149F-8-8

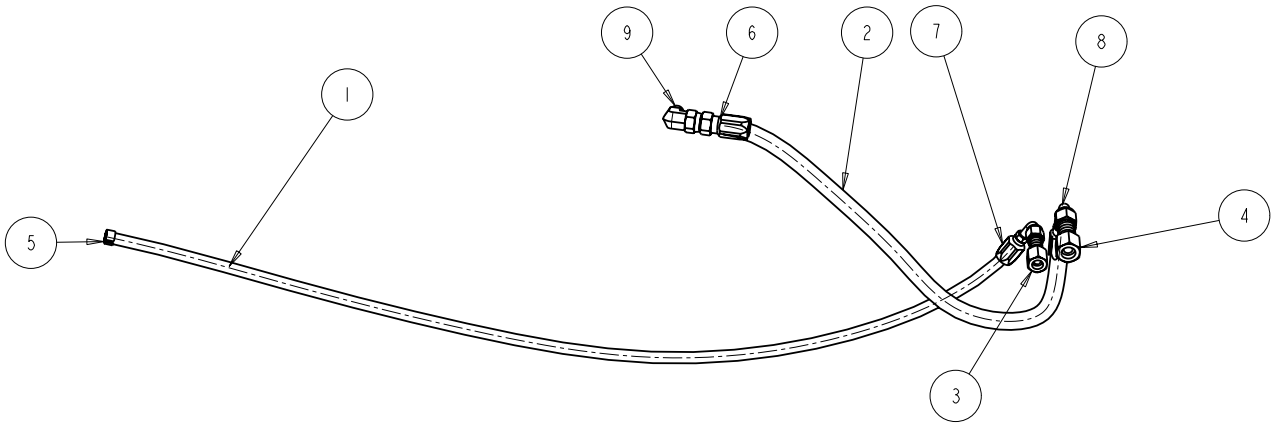


<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>		
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			<small>TITLE 1: ASSEMBLY, FUEL LINE, C8.3 TITLE 2: FIREPUMP</small>		<small>DATE: 23AUG2004</small>		
<small>IMPERIAL UNITS</small>		<small>METRIC UNITS</small>		<small>DWG UNITS:</small>		<small>DRAWN BY: DAVE N</small>	
<small>INCH TOLERANCES FRACTIONAL DECIMAL HOLE DIMENSIONS FRACTIONAL DECIMAL</small>		<small>MILLIMETER TOLERANCES FRACTIONAL DECIMAL HOLE DIMENSIONS FRACTIONAL DECIMAL</small>		<small>IN/LB/S</small>		<small>APPD BY: -</small>	
<small>EST WEIGHT:</small>		<small>SCALE:</small>		<small>DO NOT SCALE</small>		<small>SHEET 10F1</small>	
<small>8.105</small>		<small>0.250</small>		<small>SCALE</small>		<small>DRAWING NO: 9575</small>	
<small>REV</small>		<small>DESCRIPTION OF REVISION</small>		<small>REV BY</small>		<small>DATE</small>	
<small>A</small>		<small>REV AS BUILT</small>		<small>DAVE N</small>		<small>19JAN06</small>	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	FUEL LINE, RETURN, #261-6 X 44" LG	9588.RETURN
2	1	FUEL LINE, SUPPLY, #261-8 X 20" LG	9588.SUPPLY
3	1	BULKHEAD, #6 X 1/4" NPT	6.WGTX-S
4	1	BULKHEAD, #8 X 3/8" NPT	8.WGTX-S
5	1	CLAMP, 5/8" NOMINAL, #CL-1	8663
6	1	ADAPTER, HOSE, FEMALE JIC 45 DEG. SWIVEL	20820-8-8
7	1	ELBOW, HOSE, FEMALE JIC 37 DEG. SWIVEL 90 DEG. ELBOW	23920-6-6
8	1	ELBOW, HOSE, FEMALE JIC 37 DEG.	23920-8-8
9	1	ELBOW, 3/4" NPT X #8 FLARE	R-149F-8-8

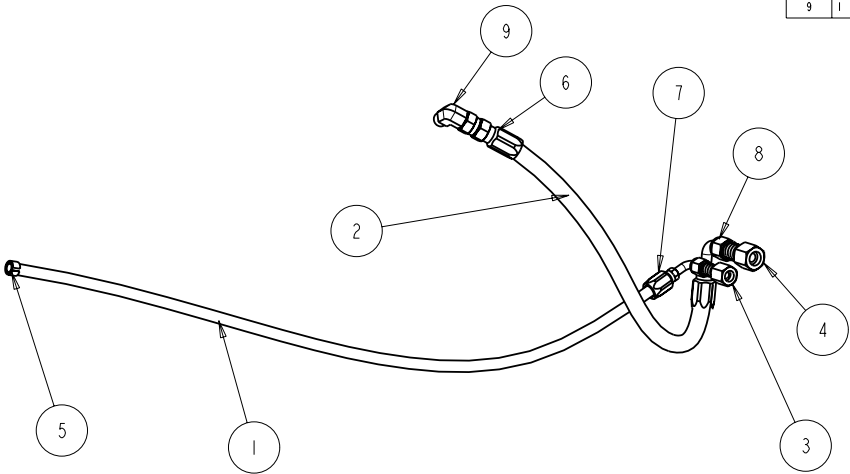

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>																
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			TITLE 1: ASSEMBLY, FUEL SYSTEM PLUMBING, 6CTA8.3 TITLE 2: FIREPUMP																		
<table border="1"> <tr> <td>B</td> <td>REV AS BUILT</td> <td>DAVE N</td> <td>01JUN05</td> </tr> <tr> <td>A</td> <td>REDRAWN</td> <td>DAVE N</td> <td>08SEP04</td> </tr> <tr> <td>REV</td> <td>DESCRIPTION OF REVISION</td> <td>REV BY</td> <td>DATE</td> </tr> </table>		B	REV AS BUILT	DAVE N	01JUN05	A	REDRAWN	DAVE N	08SEP04	REV	DESCRIPTION OF REVISION	REV BY	DATE	<table border="1"> <tr> <td>IMPERIAL UNITS</td> <td>METRIC UNITS</td> </tr> <tr> <td>INCH TOLERANCES 1/16 ± 0.015 1/8 ± 0.010 3/16 ± 0.008 1/2 ± 0.004 1 ± 0.003 2 ± 0.002</td> <td>MILLIMETER TOLERANCES 0.1 ± 0.15 0.2 ± 0.10 0.3 ± 0.08 0.5 ± 0.04 1.0 ± 0.03 2.0 ± 0.02</td> </tr> </table>	IMPERIAL UNITS	METRIC UNITS	INCH TOLERANCES 1/16 ± 0.015 1/8 ± 0.010 3/16 ± 0.008 1/2 ± 0.004 1 ± 0.003 2 ± 0.002	MILLIMETER TOLERANCES 0.1 ± 0.15 0.2 ± 0.10 0.3 ± 0.08 0.5 ± 0.04 1.0 ± 0.03 2.0 ± 0.02	DWG UNITS: IN/LB/S EST WEIGHT: 42238.628	DRAWN BY: DAVE N APPD BY: - SCALE: DO NOT SCALE SHEET 10F1	DATE: 07SEP2004 DATE: - DRAWING NO: 9588 REV: B
B	REV AS BUILT	DAVE N	01JUN05																		
A	REDRAWN	DAVE N	08SEP04																		
REV	DESCRIPTION OF REVISION	REV BY	DATE																		
IMPERIAL UNITS	METRIC UNITS																				
INCH TOLERANCES 1/16 ± 0.015 1/8 ± 0.010 3/16 ± 0.008 1/2 ± 0.004 1 ± 0.003 2 ± 0.002	MILLIMETER TOLERANCES 0.1 ± 0.15 0.2 ± 0.10 0.3 ± 0.08 0.5 ± 0.04 1.0 ± 0.03 2.0 ± 0.02																				

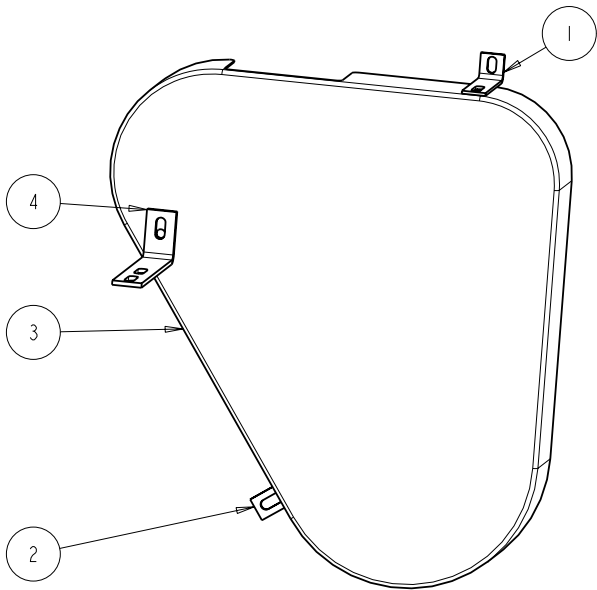

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, MOUNTING, GUARD, FIREPUMP	8592
2	1	BRACKET, MOUNTING, GUARD, FIREPUMP	8593
3	1	GUARD, PULLEY, 6C, FIRE PUMP	8633
4	1	BRACKET, MOUNTING, TUBE SUPPORT, FIREPUMP	9834

This document contains confidential and trade secret information. It is the property of Cummins Power, LLC and is loaned to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the obligation to keep this information confidential and to not copy, distribute, or otherwise disclose the information to any third party. If you are not the intended recipient, you should not disseminate, distribute, or copy this document. If you have received this document in error, please notify the sender immediately by e-mail at power@cummins.com. Copyright © Cummins Power, LLC. All rights reserved.

Cummins Power
 CUMMINS POWER, LLC
 CORPORATE OFFICE
 1600 OVERBLECK ROAD
 WHITE BEAR LAKE, MN
 WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
 DESIGN CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

TITLE 1: GUARD, PULLEY, 6C
 TITLE 2: FIREPUMP


REV	DESCRIPTION OF REVISION	REV BY	DATE
A1	GRAPHICS UPDATE	DAVE N	14SEP06
A	CREATED DRAWING	DAVE N	26APR05


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE


ANGULAR DIMENSIONS ±	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	±0.0005	±0.005
	±0.001	±0.01
	±0.002	±0.02
	±0.005	±0.05
	±0.010	±0.10

DWG UNITS:	DRAWN BY:	DATE:
IN/LB/S	DAVE N	26APR2005
EST WEIGHT:	SCALE:	SHEET
8.183	DO NOT SCALE	10F1
		DRAWING NO:
		9625
		REV:
		A

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, MOUNTING, GUARD, FIREPUMP	8592
2	2	BRACKET, MOUNTING, GUARD, FIREPUMP	8593
3	1	BRACKET, MOUNTING, TUBE SUPPORT, FIREPUMP	8657
4	1	GUARD, PULLEY, OSC, FIREPUMP	9628
5	1	U-BOLT, 2"	U200

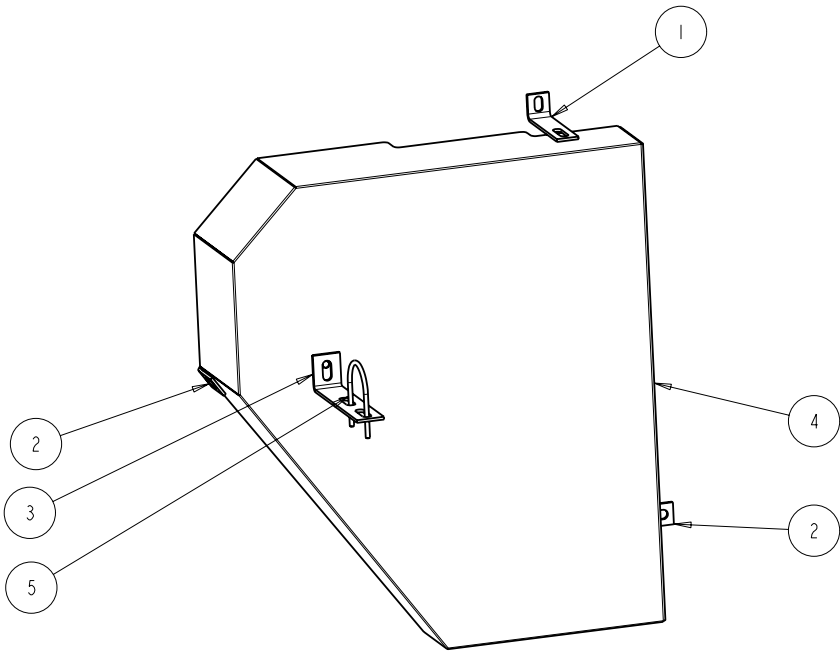


<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>			<small>CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</small>												
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			TITLE 1: ASSEMBLY, GUARD, PULLEY, OSC TITLE 2: FIREPUMP														
<table border="1"> <thead> <tr> <th>IMPERIAL UNITS</th> <th>METRIC UNITS</th> </tr> </thead> <tbody> <tr> <td><small>INCH TOLERANCES 1/16" ± 0.015 1/32" ± 0.010 3/16" ± 0.010 1/2" ± 0.010 3/4" ± 0.010 1" ± 0.010</small></td> <td><small>MILLIMETER TOLERANCES ± 0.125 ± 0.250 ± 0.375 ± 0.500 ± 0.625 ± 0.750</small></td> </tr> </tbody> </table>		IMPERIAL UNITS	METRIC UNITS	<small>INCH TOLERANCES 1/16" ± 0.015 1/32" ± 0.010 3/16" ± 0.010 1/2" ± 0.010 3/4" ± 0.010 1" ± 0.010</small>	<small>MILLIMETER TOLERANCES ± 0.125 ± 0.250 ± 0.375 ± 0.500 ± 0.625 ± 0.750</small>	DWG UNITS: IN/LB/S	DRAWN BY: DAVE N	DATE: 20JAN2005									
IMPERIAL UNITS	METRIC UNITS																
<small>INCH TOLERANCES 1/16" ± 0.015 1/32" ± 0.010 3/16" ± 0.010 1/2" ± 0.010 3/4" ± 0.010 1" ± 0.010</small>	<small>MILLIMETER TOLERANCES ± 0.125 ± 0.250 ± 0.375 ± 0.500 ± 0.625 ± 0.750</small>																
<table border="1"> <thead> <tr> <th>REV</th> <th>DESCRIPTION OF REVISION</th> <th>REV BY</th> <th>DATE</th> </tr> </thead> <tbody> <tr> <td>B</td> <td>REV AS BUILT</td> <td>DAVE N</td> <td>24FEB05</td> </tr> <tr> <td>A</td> <td>RELEASED</td> <td>DAVE N</td> <td>20JAN05</td> </tr> </tbody> </table>		REV	DESCRIPTION OF REVISION	REV BY	DATE	B	REV AS BUILT	DAVE N	24FEB05	A	RELEASED	DAVE N	20JAN05	EST WEIGHT: 12.262	APPD BY:	SCALE: DO NOT SCALE	SHEET 1 OF 1
REV	DESCRIPTION OF REVISION	REV BY	DATE														
B	REV AS BUILT	DAVE N	24FEB05														
A	RELEASED	DAVE N	20JAN05														
				DRAWING NO: 9627	REV: B												

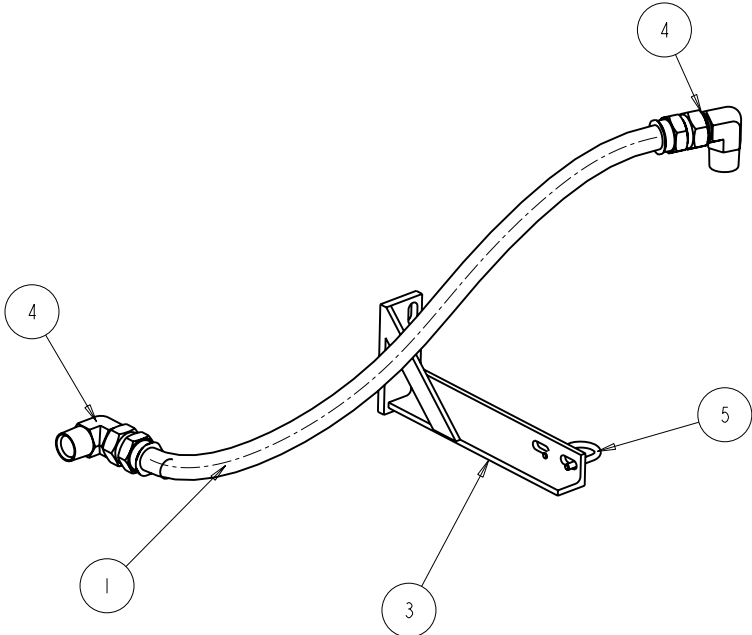

E

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, WATER, 16 JIC BOTH ENDS	11086-04
2	1	BRACKET, RAW WATER COOLING, 8" LG, FIREPUMP	8814
3	1	BRACKET, MOUNTING, COOLING LOOP, M11, FIREPUMP	9755
4	2	ELBOW, 1" NPTM X #16 JIC 37 DEG	11588
5	2	U-BOLT, FITS 1" PIPE	3201T13
6	1	NIPPLE, BLK, 1 x 6	BNGU

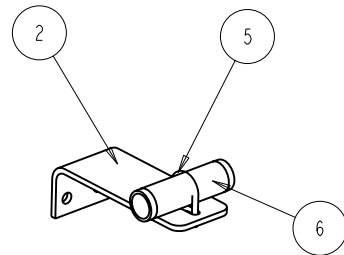


REF. SCALES
 This document contains confidential and trade secret information, as the property of Cummins NPower, LLC, and is given to the receiver in confidence. The receiver, by accepting and retaining of the document accepts the confidentiality of trade secret information therein. It is not to be used for any other purpose than that for which it was intended. If you are not the intended recipient, you should not disseminate, distribute or copy this document. If you have received this document in error, please notify the sender immediately by e-mail at npower@cummins.com. All rights reserved. ©2004 Cummins NPower, LLC

NPower CUMMINS NPOWER, LLC
 CORPORATE OFFICE
 1600 BUENKE ROAD
 WHITE BEAR LAKE, WI
 WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
 DESIGN CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		ANGULAR DIMENSIONS ± 1°		THIRD ANGLE PROJECTION		DWG UNITS: 1N/LB/S		DRAWN BY: DAVE N		DATE: 18NOV2004	
TITLE 1: MISC PIPING, RAW WATER, 6C, 1"		TITLE 2: FIREPUMP		EST WEIGHT: 295.053		SCALE: 0.250		DO NOT SCALE		SHEET 1 OF 1	
DRAWING NO: 9637		REV: E		APPD BY: -		DATE: -		DATE: -		DATE: -	

REV	DESCRIPTION OF REVISION	REV BY	DATE
E	ITEM #4 WAS P/N - 16.CTX-S	JD T	14MAY07
D	REV PER FLEX CONNECTION	DAVE N	13DEC06

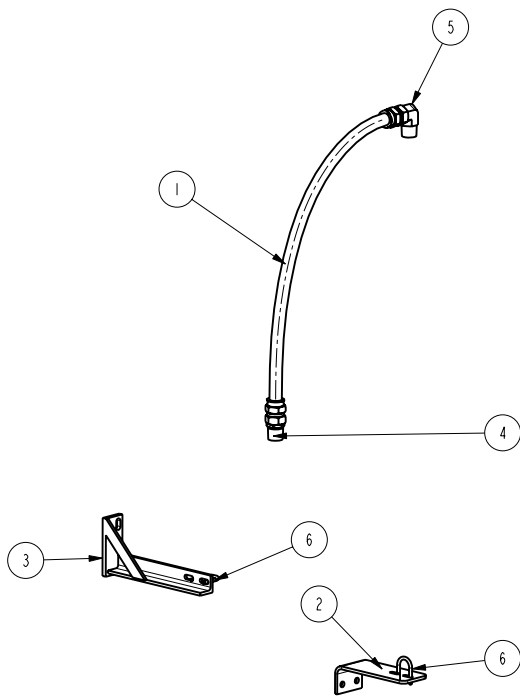

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, WATER, 16 JIC BOTH ENDS	11086-05
2	1	BRACKET, RAW WATER COOLING, 8" LG, FIREPUMP	8814
3	1	BRACKET, MOUNTING, COOLING LOOP, M11, FIREPUMP	9755
4	1	ADAPTER, NPTM X JIC 37 DEG	11587
5	1	ELBOW, 1" NPTM X #16 JIC 37 DEG	11588
6	2	U-BOLT, FITS 1" PIPE	320113

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:

ANGULAR DIMENSIONS ± °	IMPERIAL UNITS	METRIC UNITS
± 0.5	± 0.005	± 0.125
± 0.1	± 0.001	± 0.025
± 0.05	± 0.0005	± 0.0125

THIRD ANGLE PROJECTION

EST WEIGHT: 42238.628

SCALE: 0.125

DO NOT SCALE

SHEET 1 OF 1

DRAWING NO: 10712

REV: C

DATE: 08FEB2006

DRAWN BY: DAVE N

APPD BY: -

TITLE 1: ASSY, MISC PIPING, CFP83-F40

TITLE 2: FIREPUMP


NPow CUMMINS NPow, LLC
CORPORATE OFFICE
1600 BUENKE ROAD
WHITE BEAR LAKE, WI
WWW.NPOWER.CUMMINS.COM

NPow SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

This document contains confidential and trade secret information, is the property of Cummins Power, LLC and is given in confidence. The recipient, by accessing and retaining this document, agrees to the document in confidence and agrees that, except as authorized in writing by Cummins Power, it will not use the document or any copy thereof or the confidential or trade secret information therein. It will keep the document, its use and disclosure in strict confidence and will not disclose the document, its use or disclosure to any other person. It will use the document, its use or disclosure in strict confidence and will not disclose the document, its use or disclosure to any other person. It will use the document, its use or disclosure in strict confidence and will not disclose the document, its use or disclosure to any other person. ©2006 Cummins Power, LLC

C	ITEM #4 WAS P/N - 16-FTX-S & ITEM #5 WAS P/N - 16CTX-S	JDT	15MAY07
B	REV PER FLEX CONNECTION	DAVE N	13DEC06
A	REV AS BUILT	DAVE N	09FEB06
REV	DESCRIPTION OF REVISION	REV BY	DATE

**VALVES SHOWN OPEN - NOT IN OPERATING POSITION
FOLLOW HANDLE ORIENTATION**

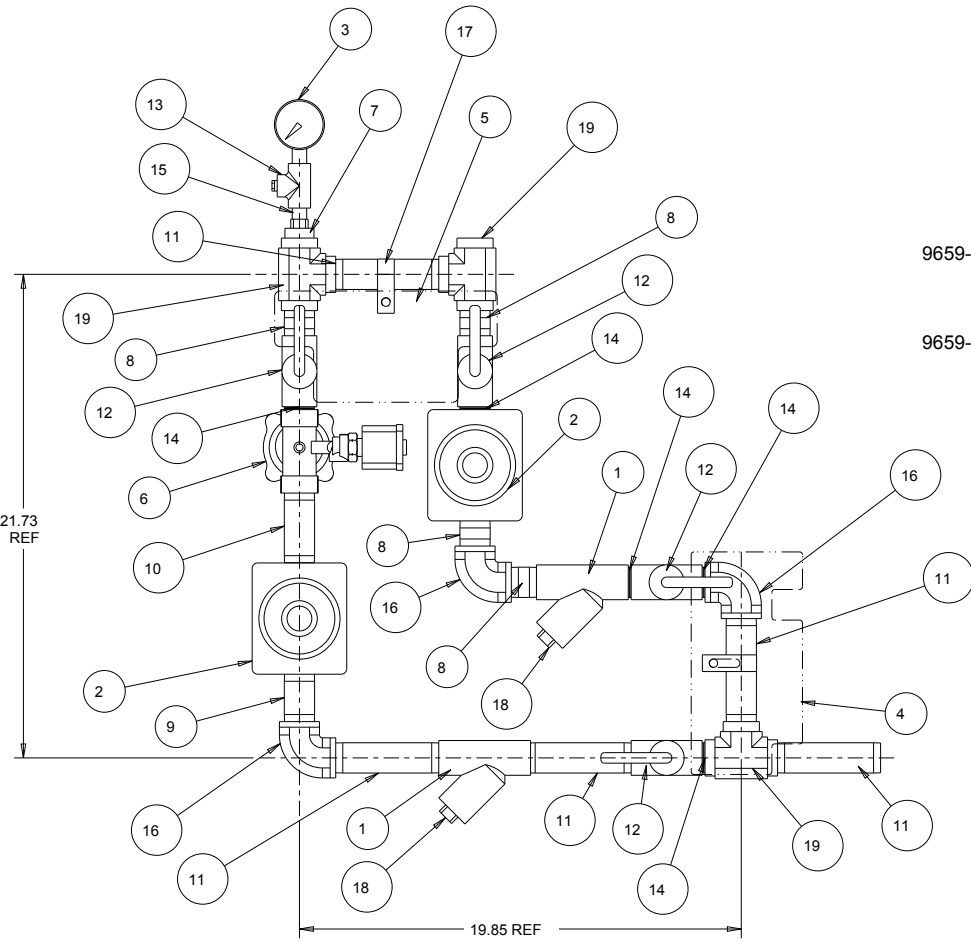

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	STRAINER, WITH PLUG, 1" NPT	1_775M1
2	2	REGULATOR, 1" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	1_N45DBU
3	1	GAUGE, PRESSURE, 1/4" NPT, 0-100 PSI RANGE	8892
4	1	TAG, COOLANT LOOP LABEL, VERTICAL MTG	10965
5	1	NAME PLATE, COOLING LOOP VALVE LABEL, NORMAL/CLOSED , EMERGENCY OPEN	10966
6	1	VALVE, SOLENOID, 1" NPT, 12VDC, 150 PSI MAX	8210G4-12VDC
7	1	REDUCER BUSHING, BLK, 1" NPT x 1/4" NPT	BBGB
8	4	NIPPLE, BLK, 1 X 2-1/2"	BNGL
9	1	NIPPLE, BLK, 1 X 3-1/2"	BNGN
10	1	NIPPLE, BLK, 1 X 4-1/2"	BNGR
11	5	NIPPLE, BLK, 1 X 6"	BNGU
12	4	VALVE, BALL, 1" NPT	FA60203-1
13	1	VALVE, BALL, 1/4" NPT	FA60204-1
14	5	NIPPLE, BLK, 1 X CLOSE	LTL-CPN1
15	1	NIPPLE, BLK, 1/4 X CLOSE	LTL-CPN14
16	3	ELBOW, BLK, 1" NPT	LTL-E190
17	2	CLAMP, P-STYLE, 1-1/4"	LTL-SCPV20627
18	2	PLUG, BLK, 1" NPT	LTL-SCSP1
19	3	TEE, BLK, 1"	LTL-ST1


9659-01 FOR VERTICLE TURBINE PUMP:
REMOVE VALVE 8210G4 AND 4.5" LG NIPPLE
REPLACE WITH 9" LG NIPPLE BNGY9

9659-02 FOR 24vdc OPERATION:
REMOVE VALVE 8210G4-12vdc AND REPLACE
WITH #8210G4-24vdc


 FIREPOWER, LLC
 CORPORATE OFFICE
 875 LAMARINE ROAD
 WHITE BEAR LAKE, WI
 WWW.FIREPOWER.COM


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: ANGULAR DIMENSIONS: IMPERIAL UNITS METRIC UNITS DWG UNITS: IN/LB/S EST WEIGHT: 53.400 DRAWN BY: DAVE N APPD BY: DATE: 06JAN2005 SCALE: 0.300 DO NOT SCALE SHEET 10FT DRAWING NO: 9659 REV: E		TITLE 1: COOLING LOOP, 1", UPPER HX ORIENTATION TITLE 2: FIREPUMP
E CHG 7" CLAMPS TO 1-1/4, WERE 1-1/2 D REV PER PART NUMBERS REV DESCRIPTION OF REVISION	S DUBICK 15OCT08 DAVE N 20SEP08 REV BY DATE	THIRD ANGLE PROJECTION

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	THROTTLE CABLE, TURN LOCKING	R09D3-5X06
2	1	DECAL, FUEL SOLENOID OVERRIDE (NOT SHOWN), FIREPUMP	9526-12
3	1	BRACKET, MTG. FUEL SOLENOID OVERRIDE, FIREPUMP	9831
4	1	CHAIN, CONNECTING (NOT SHOWN) P/N 1250, FIREPUMP	CHAIN-1250

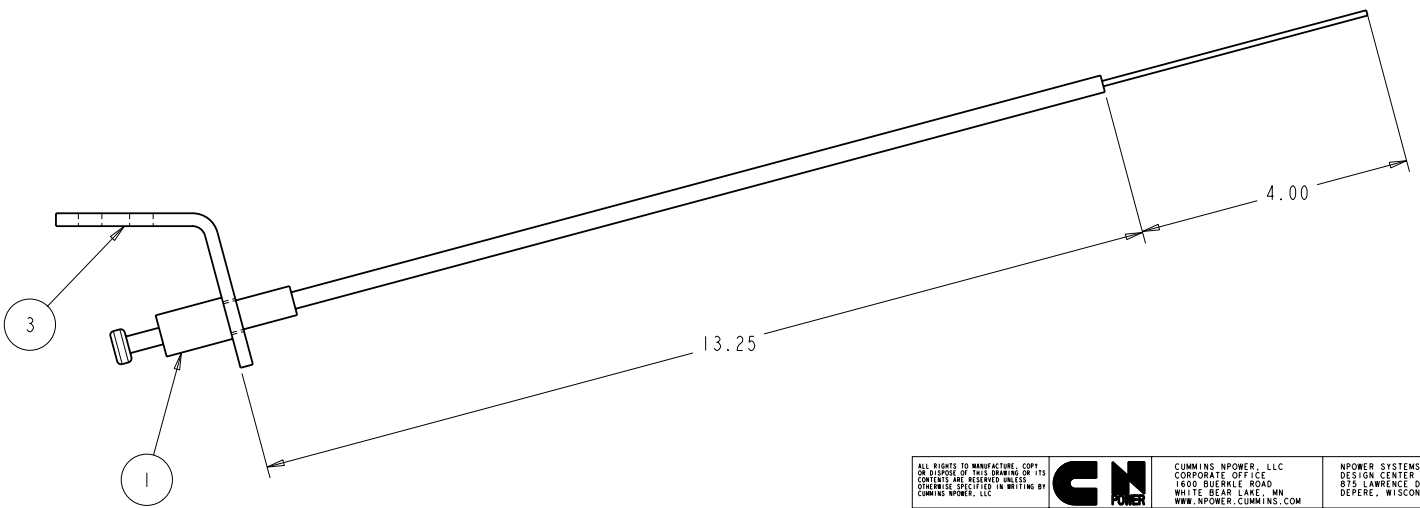


REV	DESCRIPTION OF REVISION	REV BY	DATE
A	AS BUILT	DAVE N	03MAY05

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC.</small>			CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM	NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°</small>			TITLE 1: ASSEMBLY, SOLENOID OVERRIDE TITLE 2: FIREPUMP	DWG UNITS: IN/LB/S EST WEIGHT: 42238.628	DRAWN BY: DAVE N APPD BY: - SCALE: DO NOT SCALE SHEET 10F1

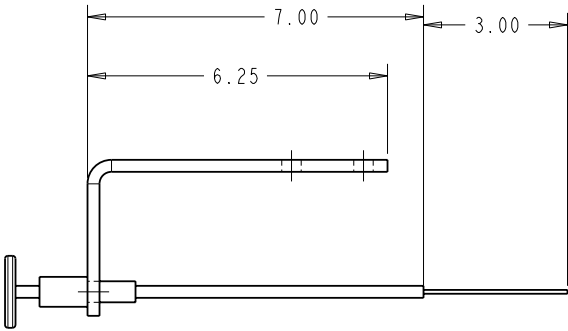

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	THROTTLE CABLE, TURN LOCKING	R09D3-5X06.10365
2	1	DECAL, FUEL SOLENOID OVERRIDE (NOT SHOWN), FIREPUMP	9526-12
3	1	BRACKET, SOLENOID OVERRIDE, CFP83-F40, FIREPUMP	10364
4	1	CLIP, THROTTLE OVERRIDE, CFP83-F40, FIREPUMP	11147
5	1	CHAIN, CONNECTING (NOT SHOWN) P/N 1250, FIREPUMP	CHAIN-1250

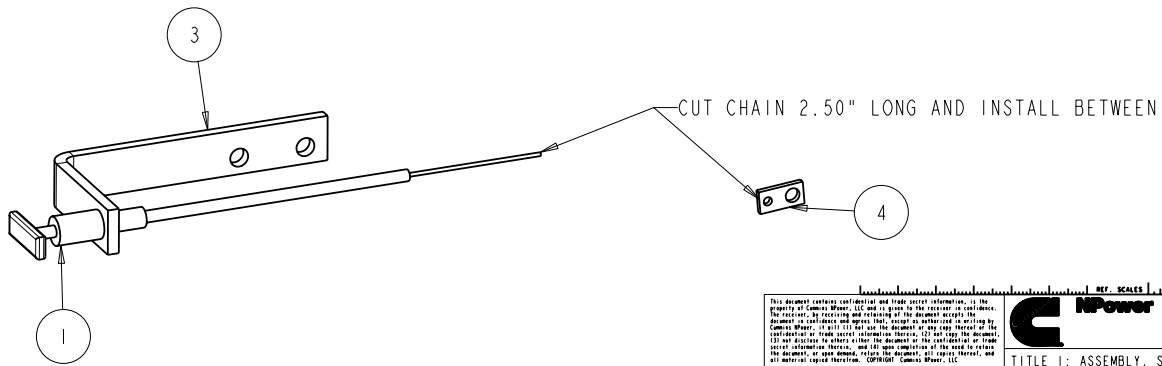

This document contains confidential and trade secret information. It is the property of Cummins Power, LLC and is loaned to the receiver. In confidence, the receiver, by receiving and retaining of the document accepts the obligation to keep this document confidential. It is not to be distributed, copied, or otherwise made available to any third party. If you are not the intended recipient of this document, you should not disseminate, distribute, or otherwise make available this information. If you have received this document in error, please notify the sender immediately by e-mail or telephone. Copyright Cummins Power, LLC.

Cummins Power
 CUMMINS POWER, LLC
 CORPORATE OFFICE
 1600 OVERBLEE ROAD
 WHITE BEAR LAKE, MN
 WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
 DESIGN CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

TITLE 1: ASSEMBLY, SOLENOID OVERRIDE, CFP83-F40
 TITLE 2: FIREPUMP


ANGULAR DIMENSIONS IN IMPERIAL UNITS		METRIC UNITS	
THIRD ANGLE PROJECTION	AS SHOWN	THIRD ANGLE PROJECTION	AS SHOWN
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	

DWG UNITS:	IN/LB/S	DRAWN BY:	DAVE N	DATE:	26SEP2005
EST WEIGHT:	42238.628	APPD BY:	-	DATE:	-
SCALE:	DO NOT SCALE	SHEET:	10F1	DRAWING NO:	10365
		REV:	B		

REV	DESCRIPTION OF REVISION	REV BY	DATE
B	REV PER UPFIT. ADDED CLIP	DAVE N	06SEP06
A	CORRECTED DRAWING	DAVE N	02NOV05


BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	FUEL LINE, #8-261 x 8.25" LG, -	10234-LINE
2	1	HOSE END, 20 SERIES, 3/8" NPT X #8 HOSE	20120-6-8
3	1	ADAPTER, HOSE, FEMALE JIC 45 DEG. SWIVEL	20820-8-8

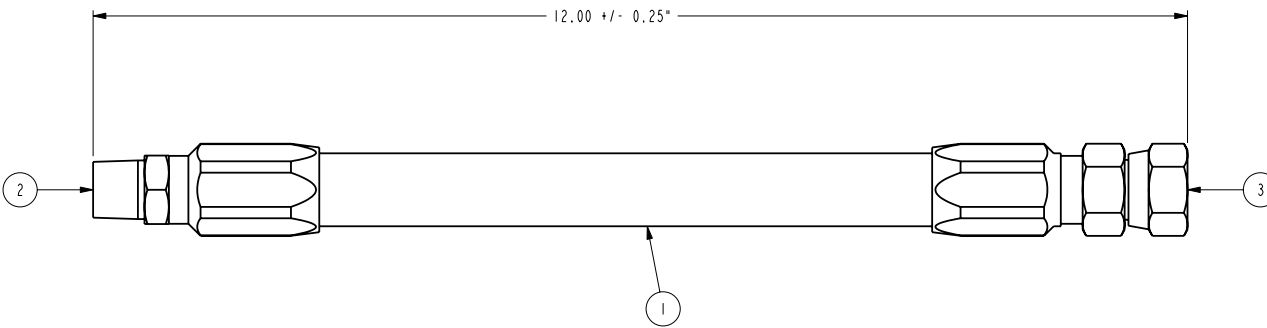


<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS FIREPOWER, LLC.</small>			<small>CUMMINS FIREPOWER, LLC CORPORATE OFFICE 1600 BERKLEY ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>CUMMINS FIREPOWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN CUMMINSFIREPOWER.COM</small>									
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS: 0.1°</small>			TITLE 1: FUEL LINE, #8, 45 DEG FLARE X 3/8" NPT TITLE 2: 12" LONG FLEX EXTENSION	DATE: 22JUL2005									
<small>IMPERIAL UNITS</small> DWG UNITS: IN/LB/S	<small>METRIC UNITS</small> DRAWN BY: DAVE N APPD BY: -	EST WEIGHT: 42238.628	SCALE: DO NOT SCALE SHEET 10F1	DRAWING NO: 10234	REV:								
<table border="1"> <thead> <tr> <th>REV</th> <th>DESCRIPTION OF REVISION</th> <th>REV BY</th> <th>DATE</th> </tr> </thead> <tbody> <tr> <td>A</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>	REV	DESCRIPTION OF REVISION	REV BY	DATE	A								
REV	DESCRIPTION OF REVISION	REV BY	DATE										
A													

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	FUEL LINE, #6-261 x 9.375" LG. -	10235.LINE
2	1	HOSE END, 20 SERIES, 1/4" NPT X #6 HOSE	20120-4-6
3	1	ADAPTER, HOSE, FEMALE JIC 45 DEG SWIVEL	20820-6-6

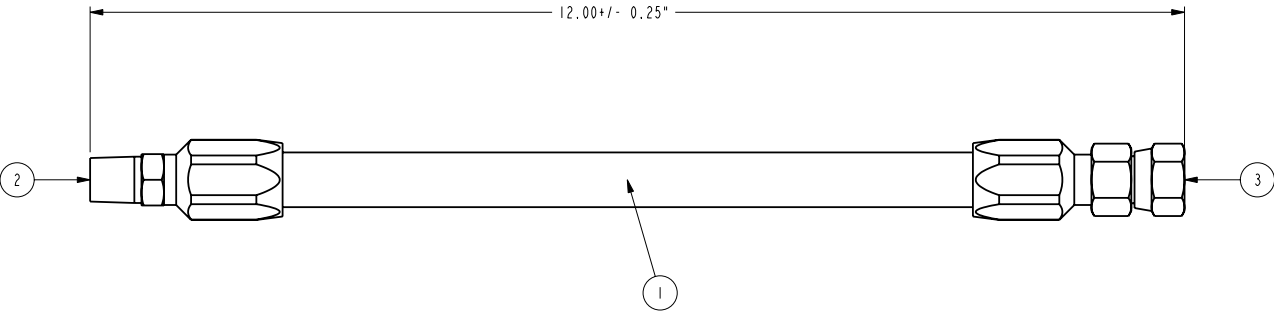

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS FIREPOWER, LLC.</small>			<small>CUMMINS FIREPOWER, LLC CORPORATE OFFICE 1600 BERKLEY ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>		<small>CUMMINS FIREPOWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN CUMMINSFIREPOWER.COM</small>	
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS: ± 1°</small>			<small>TITLE 1: FUEL LINE, #6, 45 DEG FLARE X 1/4" NPT TITLE 2: 12" LONG FLEX EXTENSION</small>		<small>DATE: 22JUL2005</small>	
<small>IMPERIAL UNITS METRIC UNITS</small>		<small>DWG UNITS: DRAWN BY: DAVE N</small>		<small>DATE: -</small>		
<small>SCALE: 1:1</small>		<small>APPD BY: -</small>		<small>SCALE: DO NOT SCALE</small>		
<small>EST WEIGHT: 42238.628</small>		<small>SCALE: 1.000</small>		<small>SHEET 10F1</small>		
<small>REV DESCRIPTION OF REVISION REV BY DATE</small>		<small>DRAWING NO: 10235</small>		<small>REV:</small>		

ITEM	QTY	DESCRIPTION	MATERIAL
01	A/R	4" MALE NPT	
02	A/R	4" I.D. CUFF	
03	A/R	4" 125# ANSI FLANGE	

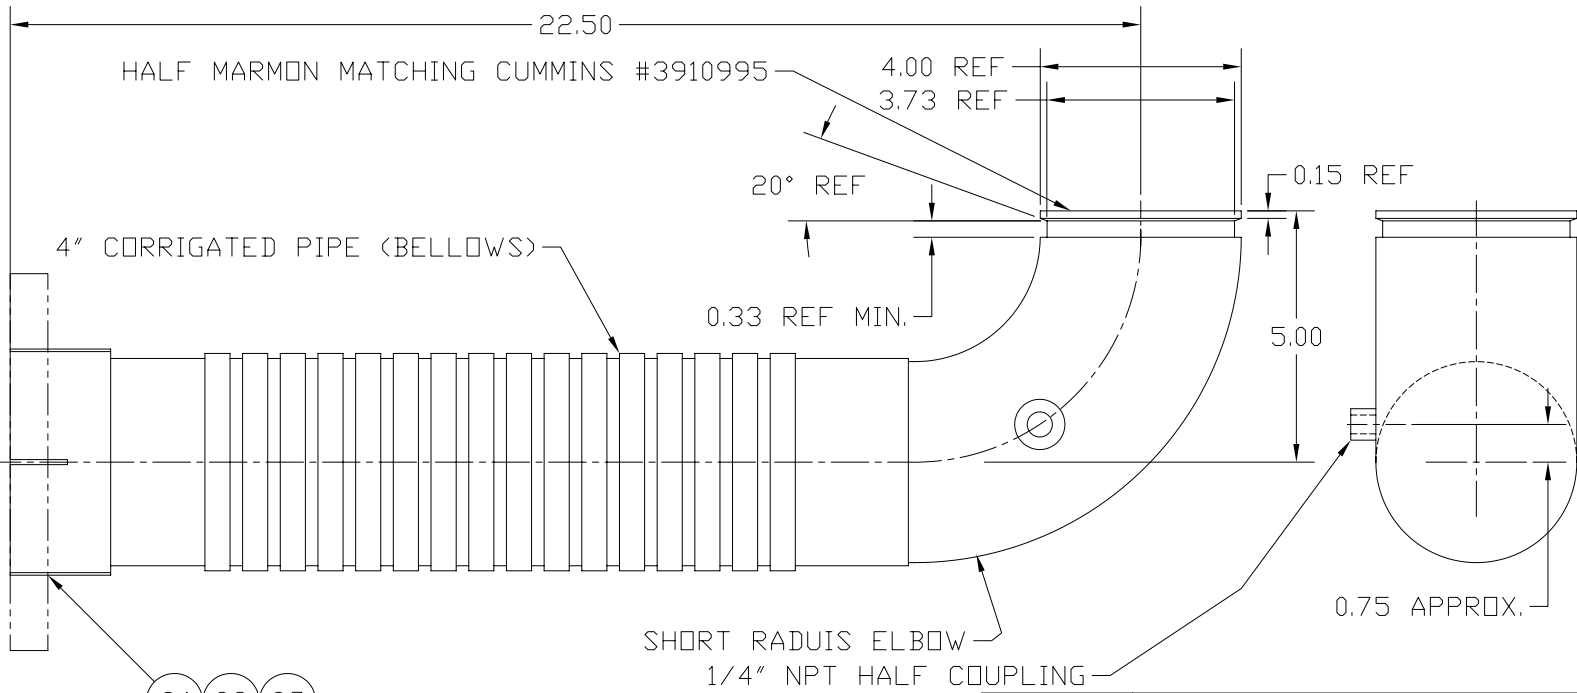

01 02 03

C1	REV PER TITLE BLOCK	DAVE N	21JUN2005
C	ADDED HALF COUPLING	DAVE N	21JAN2005
B	REWORKED BOM TO TABULATE END OPTIONS	DAVE N	18NOV2004
A	ITEM 2 WAS FLEX	CMC	18MAY2004
REV	DESCRIPTION OF REVISION	BY	DATE

ALL RIGHTS TO MANUFACTURE, COPY OR SOURCE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED BY WRITING BY CUMMINS NPOWER, LLC

UNLESS OTHERWISE NOTED:
ALL DIMENSIONS ARE IN INCHES

APPLY MACHINE TOLERANCES
X = ± 0.06
XX = ± 0.010
XXX = ± 0.001

APPLY WELDED TOLERANCES
X = ± 0.12
XX = ± 0.06




CUMMINS NPOWER
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

CUMMINS FIRE POWER
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN
WWW.CUMMINSFIREPOWER.COM

DWG SCALE: 1/2	DRAWN BY: DAVE N	DATE: 09MAR2004
PLOT SCALE:	APPD BY:	DATE:
DESCRIPTION EXHAUST, 90°, HALF MARMON TABULATED		
REFERENCE: FIREPUMP, 4" TURBO OUTLET	DRAWING NUMBER: 8780C	




ITEM	QTY	DESCRIPTION	MATERIAL
01	1	U-JOINT ADAPT, SAE#3, HAYES #127513-02	8615
02	1	DRIVE SHAFT, 1480	8613
03	1	COMPANION FLANGE, SEE WO FOR BORE	8608---
04	1	ASSEMBLY, TELESOPING GUARD, CFP59	9494

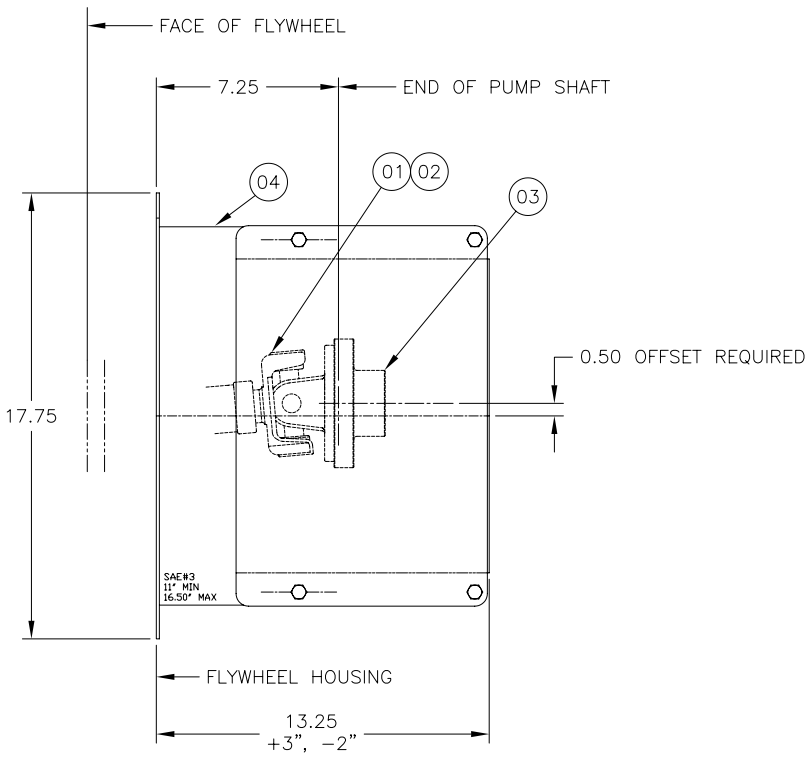


<small>ALL RIGHTS TO MANUFACTURE, COPY OR SOURCE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC</small>		<small>CUMMINS NPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</small>	<small>CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN WWW.CUMMINSFIREPOWER.COM</small>
		<small>UNLESS OTHERWISE NOTED ALL DIMENSIONS ARE IN INCHES</small>	<small>DWG SCALE: 1/4</small>
<small>APPLY MACHINE TOLERANCES X = ± 0.06 XX = ± 0.010 XXX = ± 0.001</small>	<small>PLOT SCALE:</small>	<small>APPD BY:</small>	<small>DATE:</small>
<small>APPLY WELDED TOLERANCES X = ± 0.12 XX = ± 0.06</small>	<small>DESCRIPTION</small> ASSEMBLY, DRIVE SHAFT W/ GUARD		
<small>REV</small>	<small>DESCRIPTION OF REVISION</small>	<small>BY</small>	<small>DATE</small>
<small>REFERENCE:</small> CFP59-83, 1480 DRIVE SHAFT		<small>DRAWING NUMBER:</small> 10165	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	GUARD, STUB SHAFT, SAE #3 FLYWHEEL, FIREPUMP	8611
2	1	STUB SHAFT, SAE #3 FLYWHEEL, HAYES #, FIREPUMP	9624
3	4	SCREW, CAP, HEX HEAD, M10 x 20	HHCS.M10.20
4	4	SCREW, CAP, HEX HEAD, M10 x 50	HHCS.M16.50


TORQUE CLASS 1
28-32 FT*LB

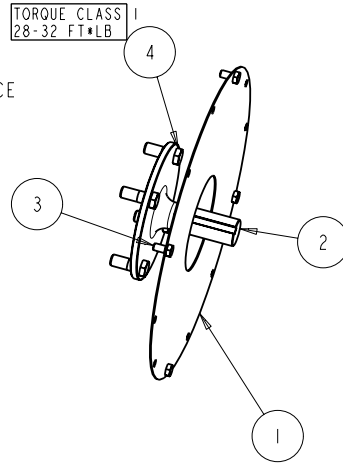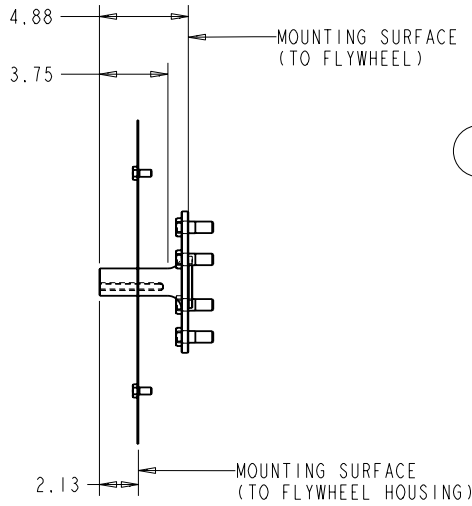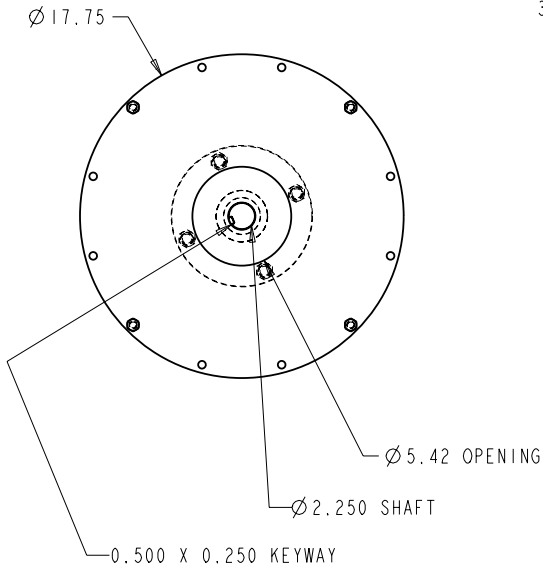

<small>ALL RIGHTS TO MANUFACTURE, COPY OR DISCLOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS FIREPOWER, LLC.</small>			<small>CUMMINS FIREPOWER, LLC CORPORATE OFFICE 1600 BERKLEY ROAD WHITE BEAR LAKE, MN WWW.FIREPOWER.CUMMINS.COM</small>	<small>CUMMINS FIREPOWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN CUMMINSFIREPOWER.COM</small>																						
<small>UNLESS OTHERWISE SPECIFIED: ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS: 0.1°</small>			TITLE 1: ASSEMBLY, STUB SHAFT, 2.25" DIA TITLE 2: FIREPUMP																							
<table border="1"> <tr> <td>BI</td> <td>CORRECTED TORQUE</td> <td>DAVE N</td> <td>20JUN05</td> </tr> <tr> <td>B</td> <td>GUARD WAS 9553</td> <td>DAVE N</td> <td>20JAN05</td> </tr> <tr> <td>A</td> <td>ADDED HARDWARE</td> <td>DAVE N</td> <td>21OCT04</td> </tr> <tr> <td>REV</td> <td>DESCRIPTION OF REVISION</td> <td>REV BY</td> <td>DATE</td> </tr> </table>	BI	CORRECTED TORQUE	DAVE N	20JUN05	B	GUARD WAS 9553	DAVE N	20JAN05	A	ADDED HARDWARE	DAVE N	21OCT04	REV	DESCRIPTION OF REVISION	REV BY	DATE	<table border="1"> <tr> <td>IMPERIAL UNITS</td> <td>METRIC UNITS</td> </tr> <tr> <td>INCH TOLERANCES FRACTIONAL DIM: ± 0.004 DEC: ± 0.001</td> <td>MILLIMETER TOLERANCES DIM: ± 0.025 DEC: ± 0.010</td> </tr> <tr> <td>ANGULAR TOLERANCES DIM: ± 0.1°</td> <td>ANGULAR TOLERANCES DIM: ± 0.1°</td> </tr> </table>	IMPERIAL UNITS	METRIC UNITS	INCH TOLERANCES FRACTIONAL DIM: ± 0.004 DEC: ± 0.001	MILLIMETER TOLERANCES DIM: ± 0.025 DEC: ± 0.010	ANGULAR TOLERANCES DIM: ± 0.1°	ANGULAR TOLERANCES DIM: ± 0.1°	DWG UNITS: IN/LB/S EST WEIGHT: 42238.628	DRAWN BY: DAVE N APPD BY: - SCALE: DO NOT SCALE SHEET 10F1	DATE: 15OCT2004 DATE: - DRAWING NO: 8619 REV: B
BI	CORRECTED TORQUE	DAVE N	20JUN05																							
B	GUARD WAS 9553	DAVE N	20JAN05																							
A	ADDED HARDWARE	DAVE N	21OCT04																							
REV	DESCRIPTION OF REVISION	REV BY	DATE																							
IMPERIAL UNITS	METRIC UNITS																									
INCH TOLERANCES FRACTIONAL DIM: ± 0.004 DEC: ± 0.001	MILLIMETER TOLERANCES DIM: ± 0.025 DEC: ± 0.010																									
ANGULAR TOLERANCES DIM: ± 0.1°	ANGULAR TOLERANCES DIM: ± 0.1°																									

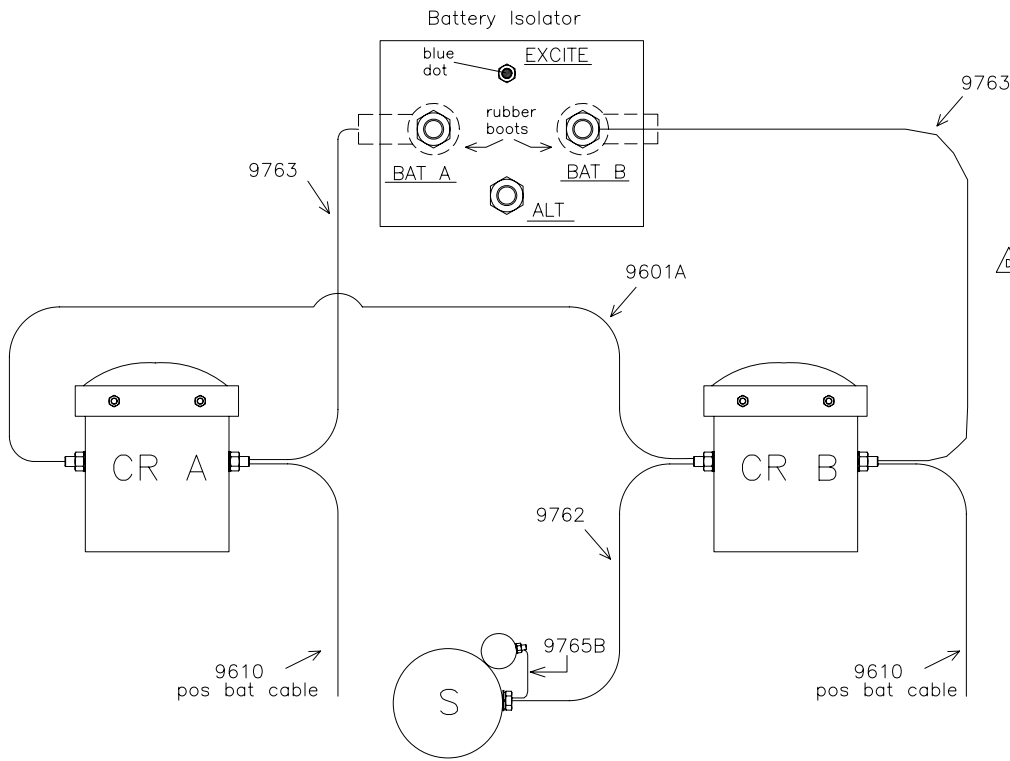

P/N	DESCRIPTION	QTY
9601A	Cable, Battery Contactor Jumper	1
9762A	Cable, Contactor to Starter	1
9763B	Cable, Isolator to Battery	2
9764	Wire, FSO Connector	1
9765B	Wire, Starter Solenoid Jumper	1
9609	Battery Cable Kit (optional)	1

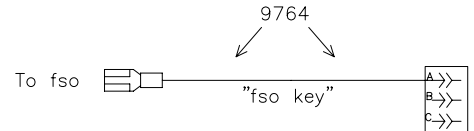

(neg bat cable: 9611)
(not shown)

REV	DESCRIPTION OF REVISION	BY	DATE
D	CHANGED P/N 9763 TO REV B	RJS	6 NOV 06
C	CHANGED P/N 9765 TO REV B	RJS	25 JULY 06
B	P/N 9601 CHG'D TO REV A	RJS	30 NOV 05
A2	MOVED THE CR A-TO-CR B JUMPER	JRJS	2 JULY 05
A1	ADDED REV # TO THE P/N'S	RJS	17 JUNE 05
A	ADDED WIRING DIAGRAM	RJS	5 JAN 05

ALL RIGHTS TO MANUFACTURE, COPY OR SOURCE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC

UNLESS OTHERWISE NOTED:
ALL DIMENSIONS ARE IN INCHES
APPLY MACHINE TOLERANCES
X = ± 0.06
XX = ± 0.010
XXX = ± 0.001
APPLY WELDED TOLERANCES
X = ± 0.03
XX = ± 0.02
XXX = ± 0.06








CUMMINS NPOWER
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

DWG SCALE:	DRAWN BY: RJS	DATE: 6 DEC 2004
PLOT SCALE:	APPD BY:	DATE:
DESCRIPTION KIT, LOOSE WIRES		
REFERENCE: 4B, 6B, 6C, QSB, & QSC	DRAWING NUMBER: 9767_D	

SAE #3	FLYWHEEL HOUSING
3/8" NPT	FUEL SUPPLY
1/4" NPT	FUEL RETURN
1" NPT	RAW WATER SUPPLY
1-1/4" NPT	RAW WATER RETURN
115v. PLUG	COOLANT HEATER
4" DIA.	EXHAUST CONNECTION

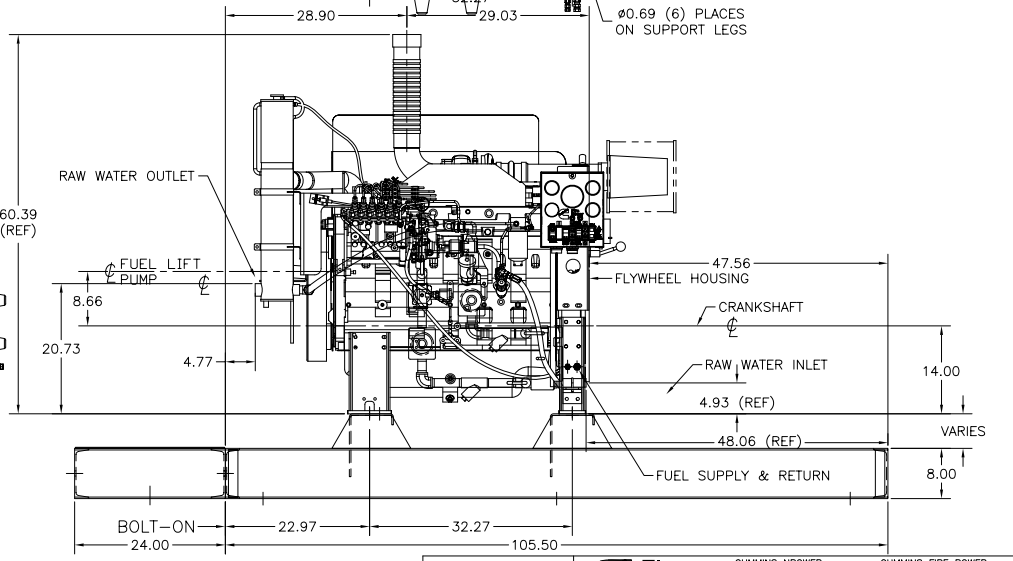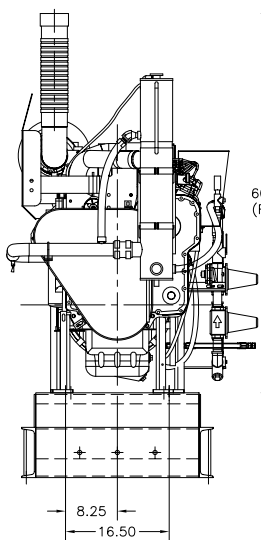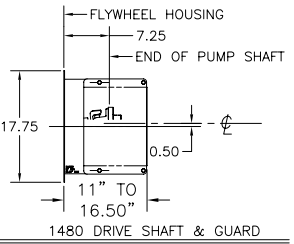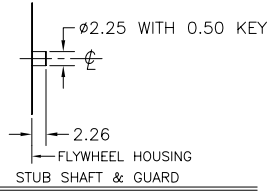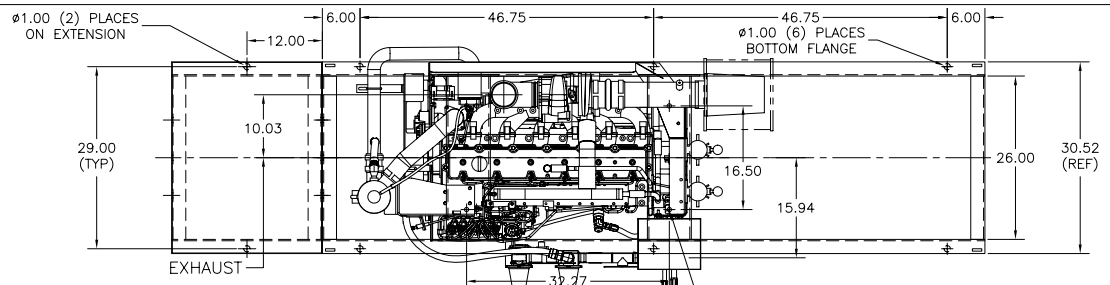

NOTES

- 1) DETAILS REMOVED FOR CLARITY
- 2) OPTIONAL COMPONENTS SHOWN
- 3) SUBJECT TO CHANGE WITHOUT NOTICE
- 4) LEG EXTENSION LENGTH DETERMINED BY PUMP SIZE
- 5) SEE ASSEMBLY DRAWING AND DATA SHEET FOR ADDITIONAL INFORMATION
- 6) DRIVE SHAFT MUST NOT RUN AT 0° ANGLE

D	GRAPHICS UPDATE	DAN	12JAN2007
REV	DESCRIPTION OF REVISION	BY	DATE






ALL RIGHTS TO MANUFACTURE, COPY OR SOURCE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC

UNLESS OTHERWISE NOTED:
ALL DIMENSIONS ARE IN INCHES
APPLY MACHINE TOLERANCES
X = ± 0.06
XX = ± 0.010
XXX = ± 0.001

APPLY WELDED TOLERANCES
X = ± 0.12
XX = ± 0.15
XXX = ± 0.06

	CUMMINS NPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM	CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN WWW.CUMMINSFIREPOWER.COM
	DWG SCALE: 1/16 PLOT SCALE:	DRAWN BY: CNP APPD BY:
DESCRIPTION GENERAL LAYOUT, FIREPUMP, CFP83		
REFERENCE:	DRAWING NUMBER: CFP83_GEN	

SAE #3	FLYWHEEL HOUSING
3/8" NPT	FUEL SUPPLY
1/4" NPT	FUEL RETURN
1" NPT	RAW WATER SUPPLY
1-1/4" NPT	RAW WATER RETURN
115v. PLUG	COOLANT HEATER
4" DIA.	EXHAUST CONNECTION

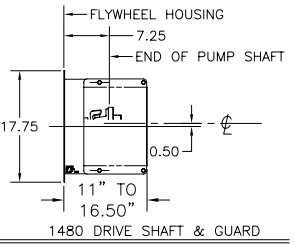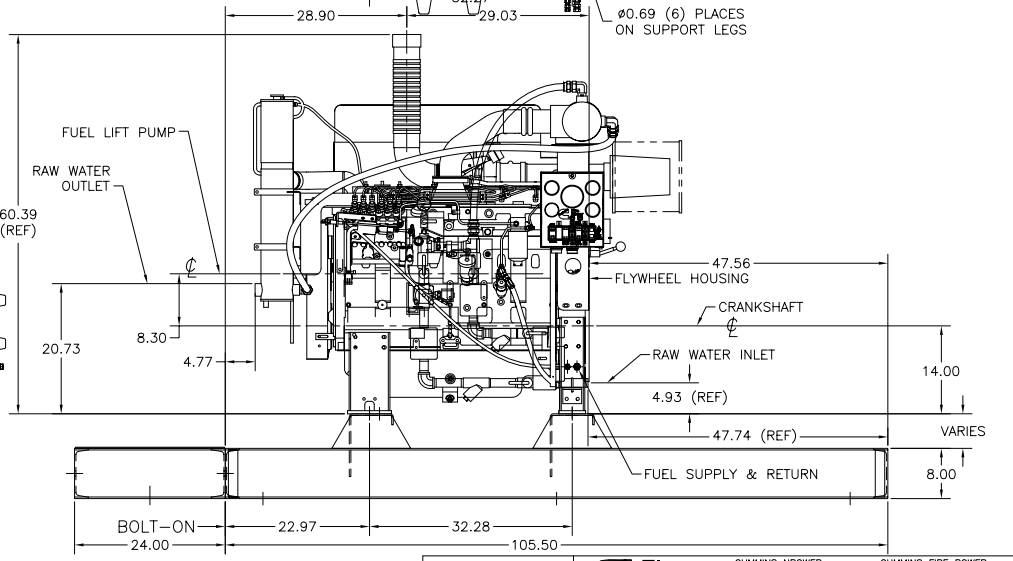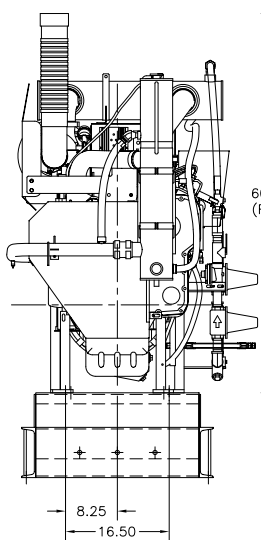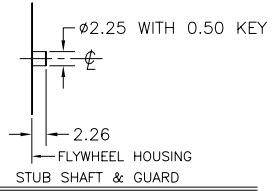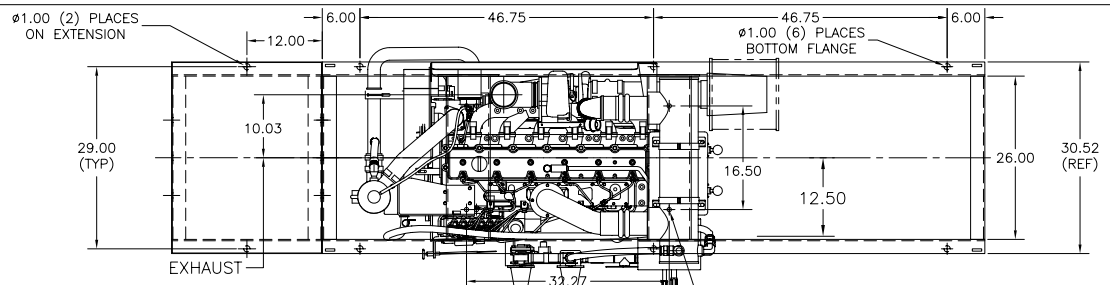

NOTES

- 1) DETAILS REMOVED FOR CLARITY
- 2) OPTIONAL COMPONENTS SHOWN
- 3) SUBJECT TO CHANGE WITHOUT NOTICE
- 4) LEG EXTENSION LENGTH DETERMINED BY PUMP SIZE
- 5) SEE ASSEMBLY DRAWING AND DATA SHEET FOR ADDITIONAL INFORMATION
- 6) DRIVE SHAFT MUST NOT RUN AT 0° ANGLE

D	GRAPHICS UPDATE	DAN	12JAN2007
REV	DESCRIPTION OF REVISION	BY	DATE


ALL RIGHTS TO MANUFACTURE, COPY OR REPRODUCE BY THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPPOWER, LLC

UNLESS OTHERWISE NOTED:
ALL DIMENSIONS ARE IN INCHES

APPLY MACHINE TOLERANCES
X = ± 0.06
XX = ± 0.010
XXX = ± 0.001

APPLY WELDED TOLERANCES
X = ± 0.03
XX = ± 0.02
XXX = ± 0.06

	CUMMINS NPPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM	CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN WWW.CUMMINSFIREPOWER.COM
	DWG SCALE: 1/16 PLOT SCALE:	DRAWN BY: CNP APPD BY:
DESCRIPTION GENERAL LAYOUT, FIREPUMP, CFP83-F40		
REFERENCE:	DRAWING NUMBER: CFP83-F40_GEN	

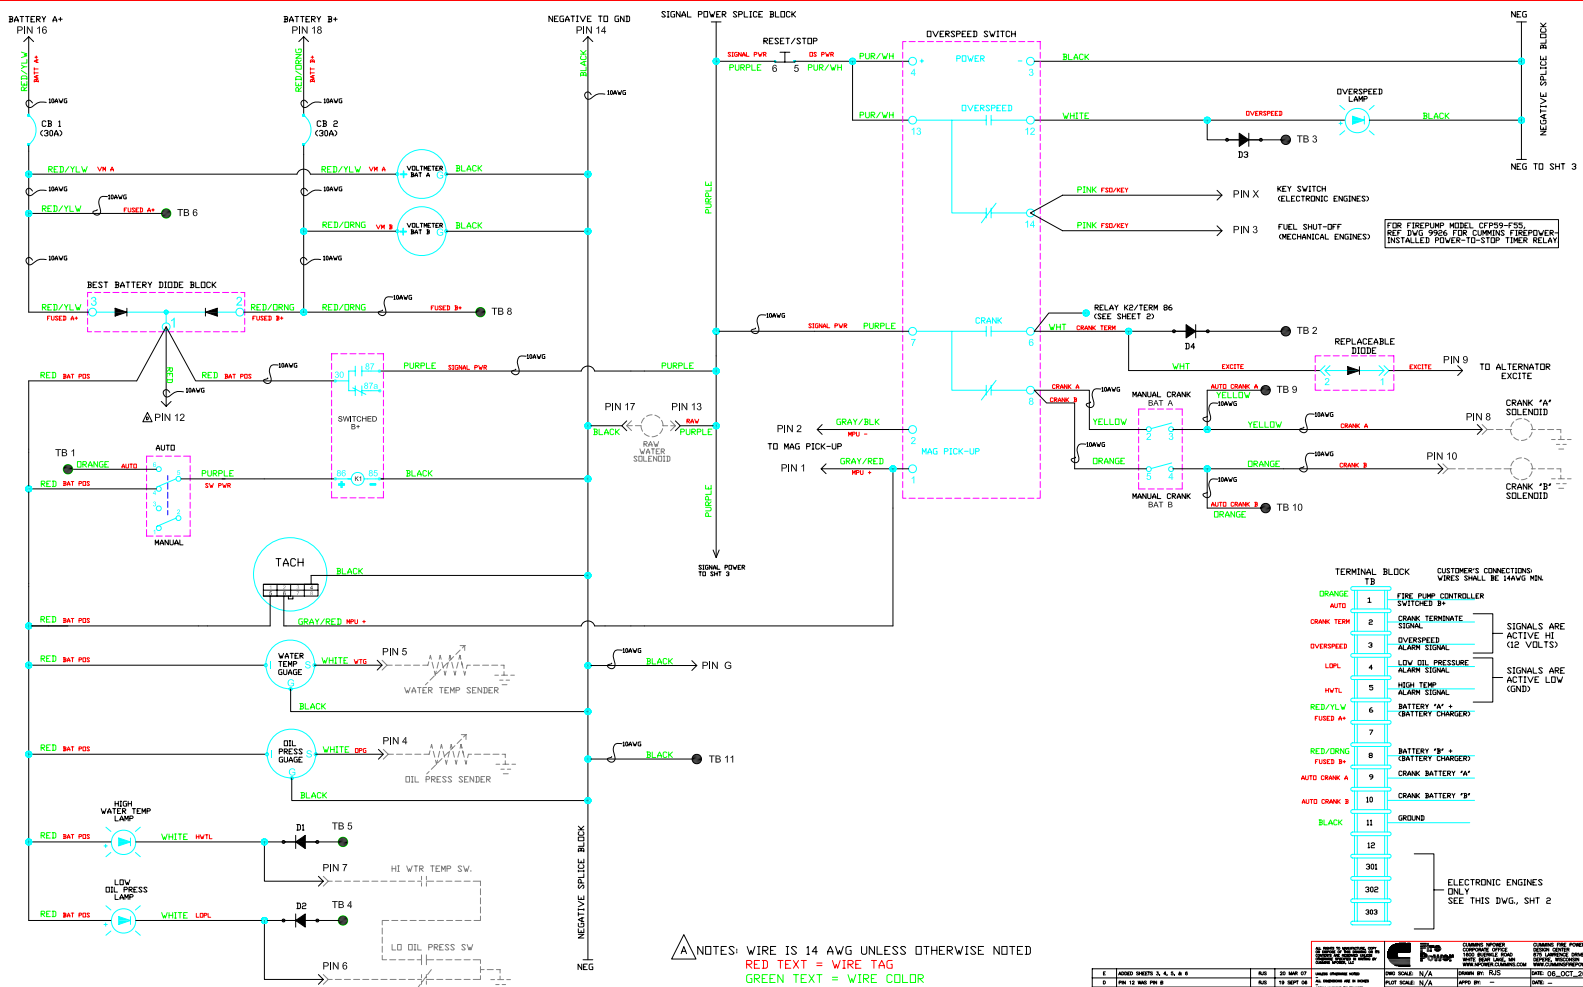

NOTES: WIRE IS 14 AWG UNLESS OTHERWISE NOTED
 RED TEXT = WIRE TAG
 GREEN TEXT = WIRE COLOR
 WIRE COLOR IS WHITE UNLESS OTHERWISE NOTED
 D1 - D4: 6 Amp/400 Vpiv



NO.	DESCRIPTION OF REVISION	DATE	BY	CHKD.	APP. BY	DATE
1	ISSUED SHEETS 3, 4, 5, & 6	10 MAR 07
2	PIN 12 WAS PIN 8	10 SEPT 08
3	CHANGED 8 AMP CIRCUIT BREAKER	10 JAN 09
4	ADDED CONNECTION TO TERM 8 OF SPEED SWITCH	11 DEC 08
5	CHANGED WIRE GAUGE DASH TO 1 LABEL	10 OCT 09
6

TERMINAL BLOCK	CUSTOMER'S CONNECTIONS	SIGNALS ARE
ORANGE 1	FIRE PUMP CONTROLLER SWITCHED BY	SIGNALS ARE ACTIVE HI (12 VOLT)
CRANK TERM 2	CRANK TERMINATE SIGNAL	
OVERSPEED 3	OVERSPEED ALARM SIGNAL	SIGNALS ARE ACTIVE LOW (GND)
LAMPL 4	LOW OIL PRESSURE ALARM SIGNAL	
HVTL 5	HIGH TEMP ALARM SIGNAL	
RED/YLW FUSED A+ 6	BATTERY CHARGER	
RED/DRNG FUSED B+ 8	BATTERY CHARGER	
AUTO CRANK A 9	CRANK BATTERY 'A'	
AUTO CRANK B 10	CRANK BATTERY 'B'	
BLACK 11	GROUND	
301		
302		
303		

ELECTRONIC ENGINES ONLY
 SEE THIS DWG, SHT 2


NO.	DESCRIPTION OF REVISION	DATE	BY	CHKD.	APP. BY	DATE
1	ISSUED SHEETS 3, 4, 5, & 6	10 MAR 07
2	PIN 12 WAS PIN 8	10 SEPT 08
3	CHANGED 8 AMP CIRCUIT BREAKER	10 JAN 09
4	ADDED CONNECTION TO TERM 8 OF SPEED SWITCH	11 DEC 08
5	CHANGED WIRE GAUGE DASH TO 1 LABEL	10 OCT 09
6

ADDITIONAL CIRCUITS FOR ELECTRONIC ENGINES

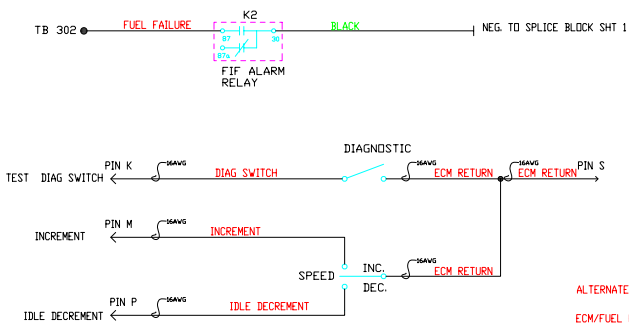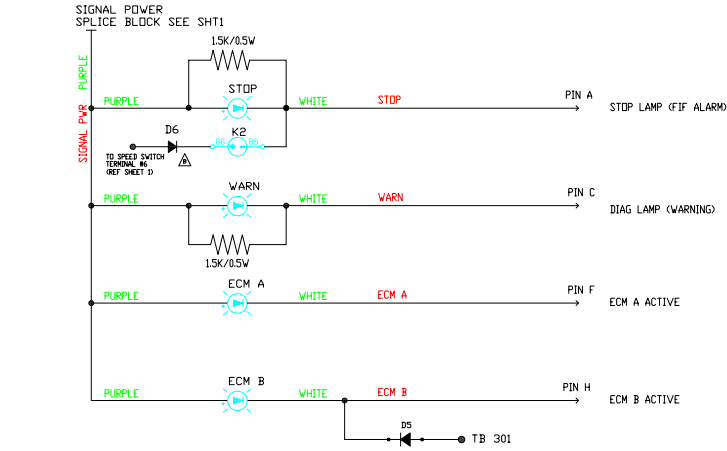


LEGEND:
 K2 ECM/FUEL FAIL RELAY
 R RESISTOR

NOTES: WIRE IS 14AWG UNLESS OTHERWISE NOTED
 RED TEXT = WIRE TAG
 GREEN TEXT = WIRE COLOR
 WIRE COLOR IS WHITE UNLESS OTHERWISE NOTED
 RESISTOR VALUE = 1.5Kohms, 1/2W
 MINIMUM DIODE RATING: 6A/400V




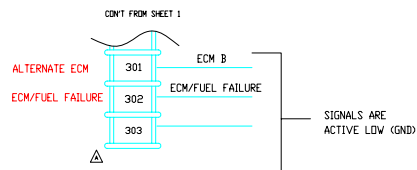


1	ADD SHEETS 3, 4, 5, & 6	KAS	01 MAR 07	ISSUE SHEETS	REV SCALE: N/A	ISSUE SHEETS
2	REV SHEET 1 FOR REV CHANGE	KAS	13 SEPT 08	ISSUE SHEETS	REV SCALE: N/A	ISSUE SHEETS
3	ISSUE	KAS	13 SEPT 08	ISSUE SHEETS	APPD BY: --	DATE: --
4	CHNG WIRING OF K2	KAS	17 DEC 08	ISSUE SHEETS	ISSUE SHEETS	ISSUE SHEETS
5	REV PAGE 1 REV NOTES	KAS	01 OCT 09	ISSUE SHEETS	ISSUE SHEETS	ISSUE SHEETS
6	REVISION OF REGION	RS	DATE:	ISSUE SHEETS	ISSUE SHEETS	ISSUE SHEETS

CONTROL PANEL CONNECTOR

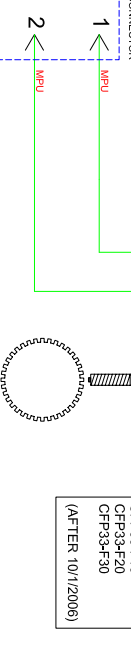

MODELS:
 CFP33-F10
 CFP33-F20
 CFP33-F30
 (AFTER 10/1/2006)

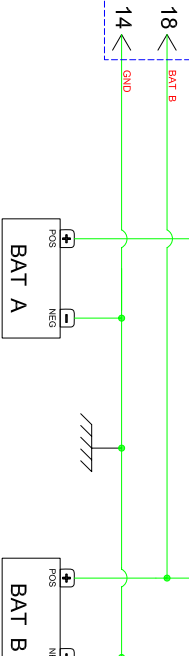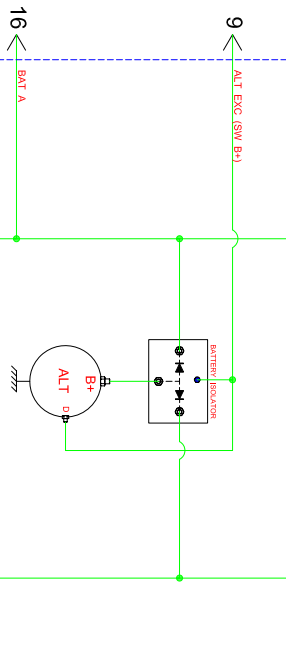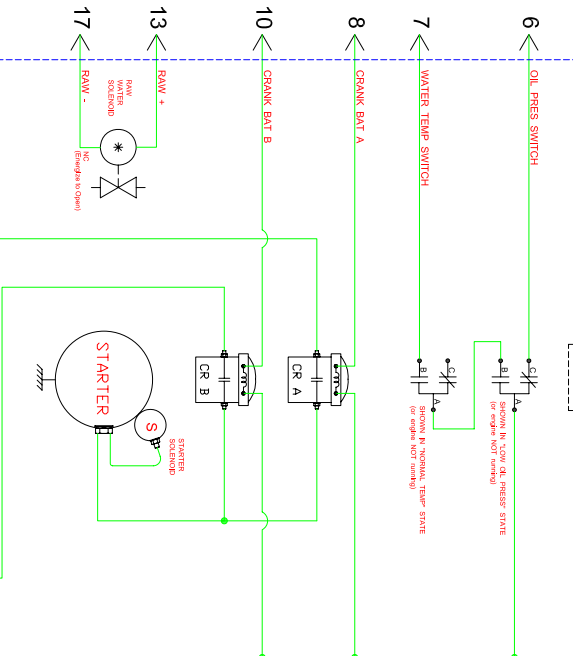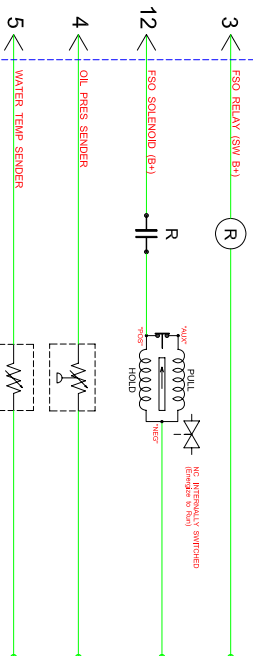


1	ISSUED SHEETS A, A.1, A.2, A.3	KAS	22 MAR 07	DATE	22 MAR 07	NO. SHEETS	N/A	SCALE	N/A	DESIGNED BY	KAS	DATE	22 MAR 07	NO. SHEETS	10423E_SHT4
2	REV. BATT. 1 FOR REV. CHANGE	KAS	13 SEP 08	DATE	13 SEP 08	NO. SHEETS	N/A	SCALE	N/A	DESIGNED BY	KAS	DATE	13 SEP 08	NO. SHEETS	10423E_SHT4
3	REVISED	KAS	13 SEP 08	DATE	13 SEP 08	NO. SHEETS	N/A	SCALE	N/A	DESIGNED BY	KAS	DATE	13 SEP 08	NO. SHEETS	10423E_SHT4
4	CHANGED WIRING OF #2	KAS	13 SEP 08	DATE	13 SEP 08	NO. SHEETS	N/A	SCALE	N/A	DESIGNED BY	KAS	DATE	13 SEP 08	NO. SHEETS	10423E_SHT4
5	REV. FUSE 1 AND MOTOR	KAS	21 OCT 08	DATE	21 OCT 08	NO. SHEETS	N/A	SCALE	N/A	DESIGNED BY	KAS	DATE	21 OCT 08	NO. SHEETS	10423E_SHT4
6	REVISION OF REGION	KAS	21 OCT 08	DATE	21 OCT 08	NO. SHEETS	N/A	SCALE	N/A	DESIGNED BY	KAS	DATE	21 OCT 08	NO. SHEETS	10423E_SHT4




PERFORMANCE
 ENGINE SCHEMATIC
 FIREPUMP

DATE: 25-SEP-2008
 DRAWN BY: KAS
 CHECKED BY: KAS
 APPROVED BY: KAS

CONTROL PANEL
CONNECTOR




MODELS:
CFP33-F25
CFP33-F35
CFP59-F35

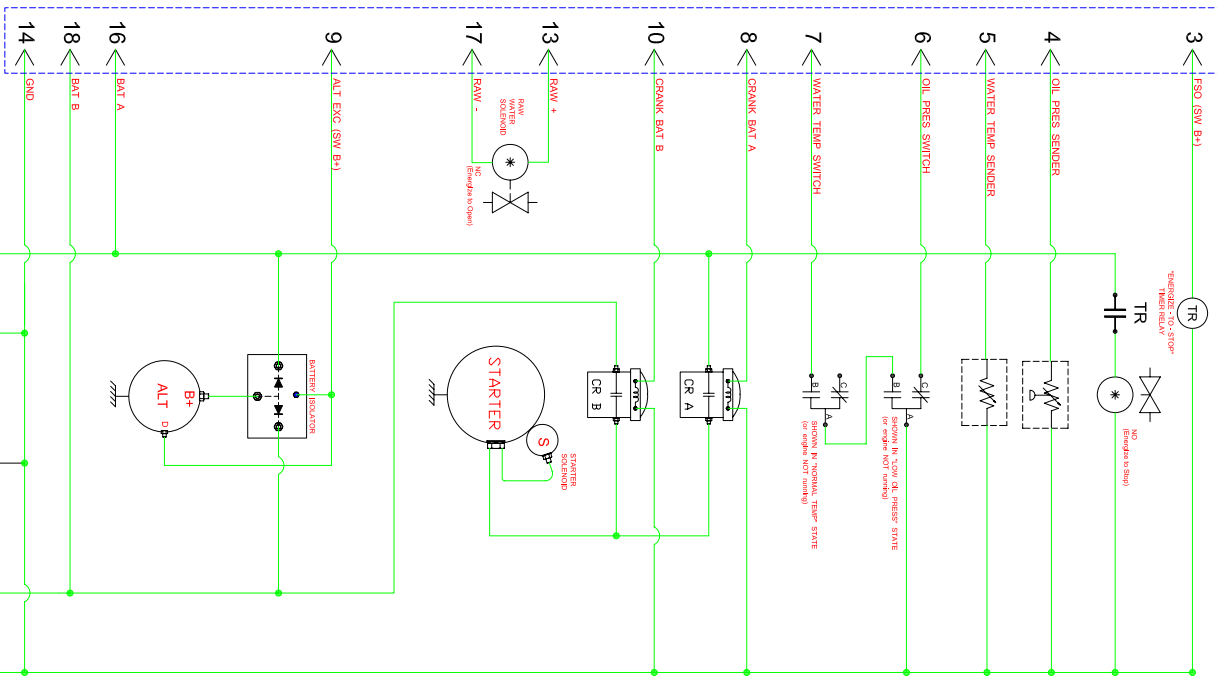

1	CONFIRM SHEETS A, A-1, A-2, A-3	KAS	23 MAR 07	ISSUED SHEETS	NO SCALE	N/A	ISSUED BY	ISSUED DATE
2	REV B01 1 FOR REV CHANGE	KAS	13 SEPT 08	NO. SHEETS IN SET	NO. SHEETS IN SET	N/A	ISSUED BY	ISSUED DATE
3	REVISED	KAS	13 SEPT 08	NO. SHEETS IN SET	NO. SHEETS IN SET	N/A	ISSUED BY	ISSUED DATE
4	CHNGE WIRING OF #2	KAS	13 SEPT 08	NO. SHEETS IN SET	NO. SHEETS IN SET	N/A	ISSUED BY	ISSUED DATE
5	REV FINE 1 REV WIRING	KAS	21 OCT 08	NO. SHEETS IN SET	NO. SHEETS IN SET	N/A	ISSUED BY	ISSUED DATE
6	REVISIONS BY REGION	KAS	21 OCT 08	NO. SHEETS IN SET	NO. SHEETS IN SET	N/A	ISSUED BY	ISSUED DATE


TRIP	ENGINE SCHEMATIC	REVISIONS	DATE
10423E_SHT5	FIREPUMP		

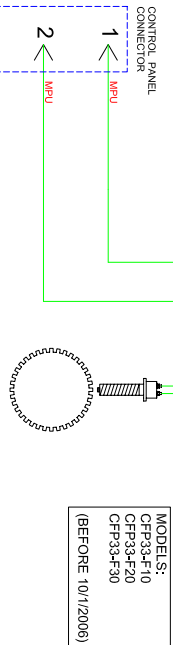

MODELS:
 CFP33-F10
 CFP33-F20
 CFP33-F30
 (BEFORE 10/1/2008)

	ENGINE SCHEMATIC FIREPUMP	SHEET NO. 10423_SHT6 DATE: 05/05/2005 DRAWN BY: [blank] CHECKED BY: [blank]
--	-------------------------------------	--

REV	DESCRIPTION OF REVISION	BY	DATE

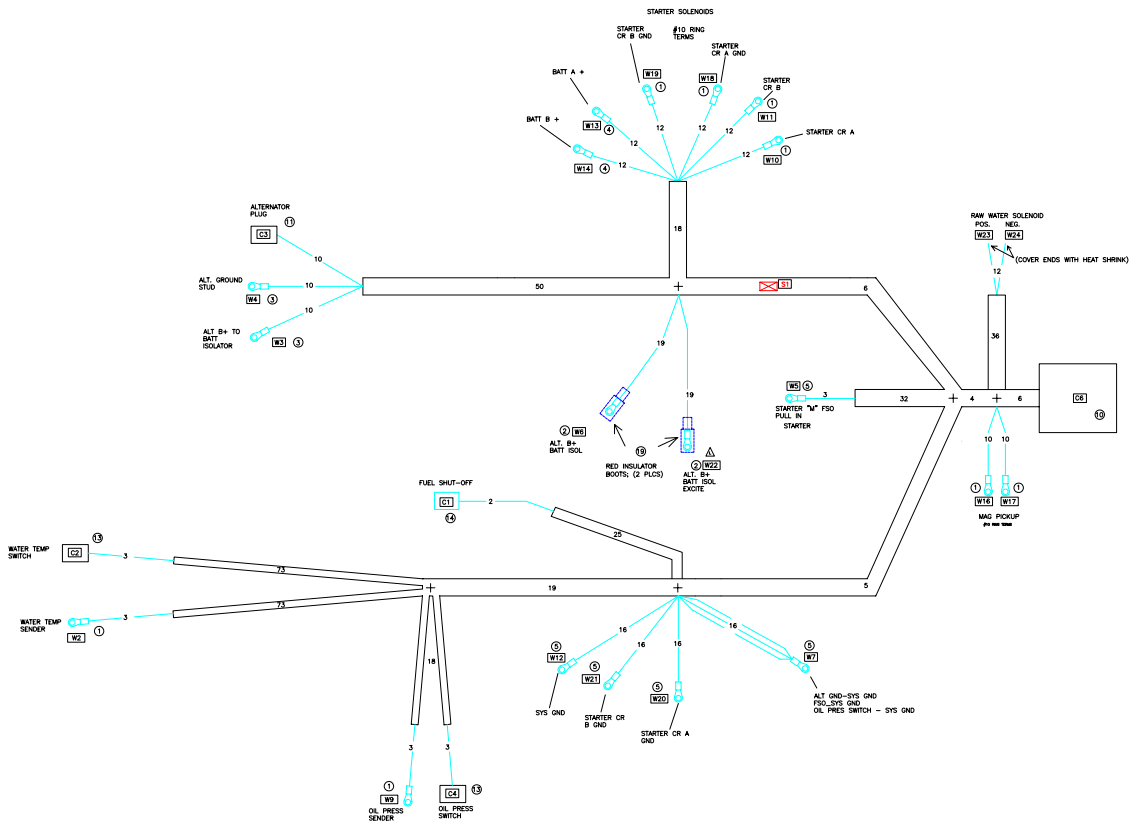

THIS HARNESS TO BE OVER-BRAIDED WITH BLACK AND RED NYLON. ALL BLACK NYLON WILL BE CONSIDERED.

THIS HARNESS TO BE USED ON THE FOLLOWING FIREPUMP ENGINES ONLY - 4B, 6B, AND 6C

ALL DIMENSIONS IN INCHES

REV	DESCRIPTION OF REVISION	BY	DATE
L	REMOVED BATT ISOL EXCITE FUSE	RJS	25 OCT 06
K	W10 & W11 WIRE 14 AWG	RJS	29 JUNE 06
J1	Chg'd mid insulator boot p/n	RJS	21 March 05
J	REMOVED TO FIT ECM ENGINES, ADDED ITEMS 19 & 20	RJS	ANNOS

<p>ALL RIGHTS RESERVED. CUMMINS INC. IS THE PROPRIETOR OF THIS DESIGN. ALL RIGHTS RESERVED BY CUMMINS INC.</p>	<p>CUMMINS NP POWER CORPORATE OFFICE 1400 RIVERDALE ROAD BENTON, MISSISSIPPI 39210 WWW.NPPOWER.CUMMINS.COM</p>	<p>CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DESOIRE, MISSISSIPPI 39230 WWW.CUMMINSFIREPOWER.COM</p>
<p>WIRE GAUGES AND WIRE SIZES ARE IN INCHES</p> <p>AWG WIRE GAUGES 16 = 1.024 18 = 0.843 20 = 0.707 22 = 0.589 24 = 0.485</p>	<p>DWG SCALE: --- PLG SCALE: ---</p>	<p>DRAWN BY: SAH APP'D BY: --- DATE: 29JUN2004</p>
<p>DESCRIPTION WIRING_HARNESS_SCHEMATIC</p>		
<p>REFERENCE FIRE_PUMPS_NON-3.3LITER</p>		<p>DRAWING NUMBER 8513SHT1_L</p>

CIRCUIT DATA										
CIRCUIT NO.	FROM			TO			WIRE COLOR	WIRE SIZE (AWG)	INSUL TYPE	STAMP
	DESIG-NATOR	CAVITY POS./TERMINAL	DESIG-NATOR	CAVITY POS./TERMINAL	DESIG-NATOR	CAVITY POS./TERMINAL				
	C 1	B	W 5	1/2" RNG	WHT	16	SXL	F50 PULL-IN		
	C 1	C	W 7	1/2" RNG	WHT	16	SXL	F50 GND		
	C 2	A	C 4	B	WHT	16	GXL	OPS TO WTS		
	C 3	C	S 1	-	WHT	16	SXL	EXCITE		
	C 4	A	W 7	1/2" RNG	WHT	16	GXL	OPS GND		
	S 1	-	W 22	1/4" RNG	WHT	16	SXL	BATT EXCITE		
	C 6	1	W 16	#10 RING	WHT	16	SXL	M P U +		
	C 6	2	W 17	#10 RING	WHT	16	SXL	M P U -		
	C 6	3	C 1	A	WHT	16	SXL	F50 /KEY		
	C 6	4	W 9	#10 RNG	WHT	16	SXL	OPG		
	C 6	5	W 2	#10 RNG	WHT	16	SXL	WTG		
	C 6	6	C 4	C	WHT	16	GXL	LOPL		
	C 6	7	C 2	B	WHT	16	GXL	HW TL		
	C 6	8	W 10	#10	WHT	10	SXL	CRANK A		
	C 6	9	S 1	-	WHT	16	SXL	EXCITE		
	C 6	10	W 11	#10 RING	WHT	10	SXL	CRANK B		
	C 6	13	W 23	NO TERM	WHT	14	SXL	RW SOL +		
	C 6	14	W 12	1/2"	WHT	10	GXL	SYS GND		
	C 6	16	W 13	3/8"	WHT	10	GXL	BATT A +		
	C 6	17	W 24	NO TERM	WHT	14	SXL	RW SOL -		
	C 6	18	W 14	3/8"	WHT	10	GXL	BATT B +		
	W 18	#10	W 20	1/2" RNG	WHT	14	SXL	CRNK A GND		
	W 19	#10	W 21	1/2" RNG	WHT	14	SXL	CRNK B GND		
	W 3	5/16" RNG	W 6	1/4" RNG	WHT	6	GXL	ALT B +		
	W 4	5/16" RNG	W 7	1/2" RNG	WHT	6	GXL	ALT GND		

WIRING HARNESS CONTENT			
REF NO.	SUPPLIER	SUPPLIER PART NO.	QTY
1			8
2			2
3			2
4			2
5			5
10	DEUTSCH	HDP26-24-19SN	1
11	PACKARD	12047950/12188566	1
13	PACKARD	12182260	2
14	PACKARD	12015793	1
18			1
19	stella-m aris	400N9V02	2

1	REVISED BY: SULLOW DATE: 04/15/04	AS	20 OCT 04	DATE: 1 OCT 04
2	BY: SULLOW DATE: 11 JUN 05	AS	20 JUNE 05	DATE:
3	BY: SULLOW DATE: 18 JUN 05	AS	20 JUNE 05	DATE:
7	BY: SULLOW DATE: 18 JUN 05	AS	20 JUNE 05	DATE:

WIRING HARNESS SCHEMATIC
FIRE PUMP CONTROL PANEL

DRAWING NUMBER: 8513SH22_L