

Operation & Maintenance Manual

SEAMA2050503


PC200-5, 200LC-5 PC200-5 MIGHTY, PC200LC-5 MIGHTY, PC220-5, 220LC-5 HYDRAULIC EXCAVATOR

SERIAL NUMBERS	PC200-5, PC200LC-5	:58019	
	PC200-5, PC200LC-5	:A70001	
	PC200-5 MIGHTY	:58019	
	PC200LC-5 MIGHTY	:58019	and up
	PC220-5, PC220LC-5	:58019	
	PC220LC-5	:A70001	

KOMATSU

FOREWORD

This manual describes procedures for operation, handling, lubrication, maintenance, checking, and adjustment. It will help the operator or anyone realize peak performance through effective, economical and safe machine operation and maintenance.

- Please read this manual carefully BEFORE operating the machine.
 - Please continue studying this manual until proper operation is completely reinforced into personal habit.
 - This manual describes the basic techniques. Skill is performed as the operator or anyone get the correct knowledge and performance of the machine.
 - Operation, inspection, and maintenance should be carefully carried out, and the safety must be given the first priority. Safety precautions are indicated with  marks and technical precautions with ★ marks in this manual. The safety information contained in this manual is intended only to supplement safety codes, insurance requirements, local laws, rules and regulations.
 - Some illustration pictures are different from your machine as technical improvement is continuously reflected on it. Revision to up-to-date manual's content is performed in later editions.
 - This operation & maintenance manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.
- Materials and specifications are subject to change without notice.

BREAKING IN YOUR NEW MACHINE

Each machine is carefully adjusted and tested before shipment. However, a new machine requires careful operation during the first 100 hours to break in the various parts.

If a machine is subjected to unreasonably hard use at the initial operation stage, the potential of performance will prematurely deteriorate and the service life will be reduced. A new machine must be operated with care, particularly with regard to the following items.

- After starting, let the engine idle for 5 minutes to allow proper engine warm-up prior to actual operation.
- Avoid operation with heavy loads or at high speeds.
- Sudden starting or acceleration, unnecessarily abrupt braking and sharp turning should be avoided.
- If the machine is delivered without any cooling water in the radiator, flush the cooling system with ample clean water to clean the system, then fill the radiator with cooling water.
- ★ When replacing oil filter elements (cartridges), check their interiors for dirt and dust. If heavily collected, check for possible cause before starting operation.
- ★ Hours of operation are indicated by the service meter.

CONTENTS

OPERATION

GENERAL LOCATIONS AND SPECIFICATIONS	4
INSTRUMENTS AND CONTROLS	6
METHOD OF USING MODE SELECTOR SWITCHES	46
CHECK BEFORE STARTING	50
OPERATING YOUR MACHINE	56
INVERSION AND REPLACEMENT OF BUCKET	80
HANDLING THE TRAPEZOIDAL BUCKET (EXCEPT PC200, 200LC-5 MIGHTY)	82
USING THE EXTENSION ARM (EXCEPT PC200, 200LC-5 MIGHTY)	84
HANDLING THE CLAMSHELL BUCKET (EXCEPT PC200; 200LC-5 MIGHTY)	84
SELECTION OF TRACK SHOES (EXCEPT PC200, 200LC-5 MIGHTY)	86
HANDLING RUBBER PAD SHOE (EXCEPT PC200, 200LC-5 MIGHTY)	88
SELECTION OF BUCKET TEETH	92
INSTALLATION OF OPTIONAL ELECTRICAL EQUIPMENT	94
COLD WEATHER OPERATION	98

MAINTENANCE


PERIODIC MAINTENANCE	107
BLEEDING AIR FROM CIRCUIT	108
PERIODICAL REPLACEMENT OF SAFETY PARTS	112
MAINTENANCE TABLE	116
OIL FILLER AND LEVEL GAUGE POSITIONS	120
EVERY 100 HOURS SERVICE	122
EVERY 250 HOURS SERVICE	128
EVERY 500 HOURS SERVICE	134
EVERY 1000 HOURS SERVICE	138
EVERY 2000 HOURS SERVICE	142
EVERY 4000 HOURS SERVICE	147
WHEN REQUIRED	148
ADJUSTMENT	164
TROUBLE SHOOTING GUIDE	166
SERVICE METER	178
MACHINE AND ENGINE SERIAL NUMBERS	180
FUEL, COOLANT AND LUBRICANTS	182
 PC200, 200LC-5 MIGHTY (METHOD FOR HANDLING THE ATTACHMENTS)	 185

GENERAL LOCATIONS AND SPECIFICATIONS

1. Bucket
2. Bucket cylinder
3. Arm
4. Arm cylinder
5. Boom
6. Boom cylinder
7. Sprocket
8. Track frame
9. Idler
10. Track shoe

MACHINE MODEL		PC200 -5	PC200LC -5	PC200-5 MIGHTY	PC200LC-5 MIGHTY	PC220 -5	PC220LC -5
PERFORMANCE							
Bucket capacity (m ³)	[SAE]	0.8	0.8	0.8	0.8	1.0	1.0
	[CECE]	0.7	0.7	0.7	0.7	0.9	0.9
Travel speed (km/h)	Hi	5.5	5.5	5.5	5.5	5.5	5.5
	Lo	3.2	3.2	3.2	3.2	3.4	3.4
Swing speed (rpm)		13	13	13	13	13	13
OPERATING WEIGHT (kg)		18930	19730	21100	21600	22000	23130
ENGINE							
Model		Komatsu S6D95L Diesel Engine		Komatsu S6D95L Diesel Engine		Komatsu SA6D95L Diesel Engine	
Flywheel horsepower (HP) [Rated rpm]		123 [2050]	123 [2050]	123 [2050]	123 [2050]	153 [2200]	153 [2200]

NOTE: Specifications are subject to change without notice.

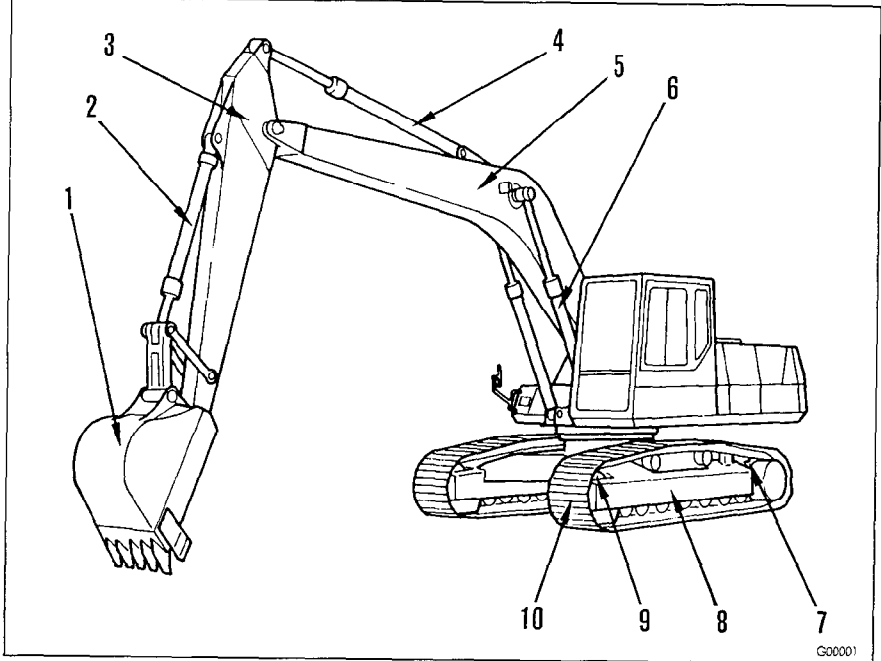

INSTRUMENTS AND CONTROLS

ELECTRONIC MONITOR & CONTROL CONSOLE (EMACC)

This monitor system consists of monitor lamp groups (A, B, C), meter group D and switch group E.

A CHECK MONITOR GROUP (Check items before starting)

If there is any abnormality, the appropriate monitor lamp will flash.

Check the locations where the monitor is flashing, and carry out the checks before starting.

- ★ When the engine is started, these monitor lamps will go off even if there are abnormalities.

B CAUTION MONITOR GROUP (Caution items)

If any abnormality occurs while the engine is running, the appropriate monitor lamp will flash to indicate the abnormality.

- ★ Even if any monitor lamp flashes, the machine can operate, but it should be repaired as soon as possible.

C CAUTION MONITOR GROUP (Emergency caution items)

If any abnormality occurs while the engine is running, the appropriate monitor lamp will flash and the alarm buzzer will sound intermittently at the same time.

- ★ If any monitor lamp flashes, stop the work and repair it immediately.

D METER GROUP


This group consists of engine water temperature gauge, fuel gauge, engine pre-heating monitor lamp and swing lock lamp.

E SWITCH GROUP

This consists of the lamps, car heater, mode selector switches, wiper switch, alarm buzzer stop switch, and travel speed switches.

Functional check of the machine monitor system

When the starting switch is turned ON before starting the engine, all the monitor lamps and the gauges light up and the alarm buzzer sounds for about 3 seconds. If any monitor lamp does not light up, there is probably a broken bulb or disconnection in the monitor, so ask your Komatsu distributor to inspect it.

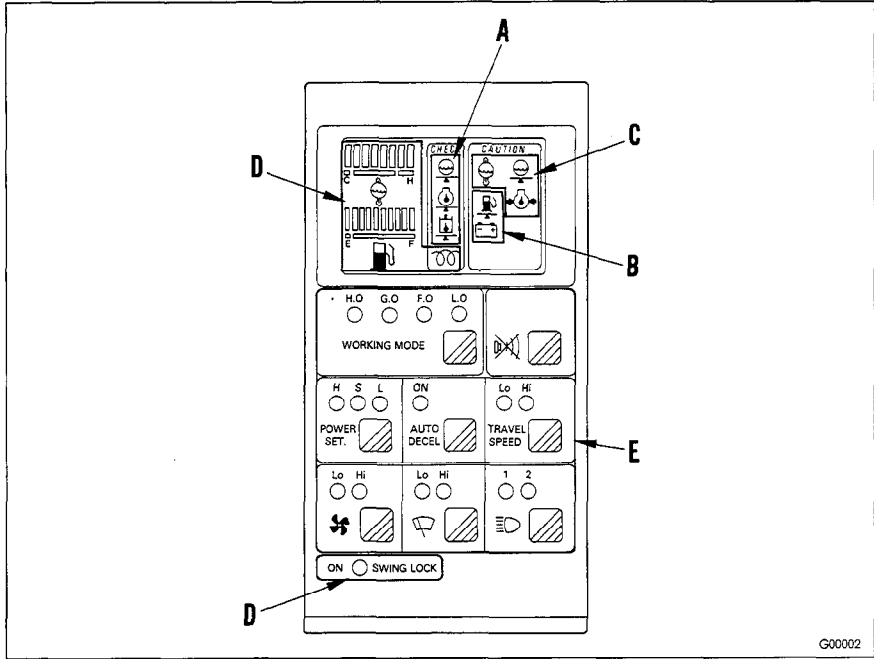

A: CHECK MONITOR GROUP (Check items before starting)

- ★ Do not rely on the "CHECK MONITOR GROUP (Check before starting)" only for the check before starting. Always make the check by referring to the section on CHECK BEFORE STARTING.
- ★ Park the machine on level ground and check the monitor lamps.
- ★ Confirm that these monitor lamps light for about 3 seconds after turning the starting switch to **ON** before the engine is started. If any monitor lamp does not light, ask your Komatsu distributor to inspect that monitor lamp.

1. RADIATOR COOLANT LEVEL MONITOR

This warns of any drop in the radiator cooling water level.

If it flashes, check the cooling water level in the radiator and sub-tank, and add water.

2. ENGINE OIL LEVEL MONITOR

This monitor indicates a low oil level in the engine oil pan.

If the monitor lamp flashes, check the oil level in the engine oil pan and add oil as required.

3. HYDRAULIC OIL LEVEL MONITOR

This monitor indicates a low oil level in the hydraulic tank. If the monitor lamp flashes, check the oil level in the hydraulic tank and add oil as required.


B: CAUTION MONITOR GROUP (Caution items)

- ★ If the monitor lamp flashes, it should be repaired as soon as possible.
- ★ Park the machine on level ground and check the monitor lamps.
- ★ This monitor lamp lights, when the starting switch is turned to **ON** immediately after the engine is started or immediately before the engine is stopped. It does not indicate an abnormality.
- ★ Confirm that these monitor lamps light for about 3 seconds after turning the starting switch to **ON** before the engine is started. If any monitor lamp does not light, ask your Komatsu distributor to inspect that monitor lamp.





1. CHARGE MONITOR

This monitor indicates an abnormality in the charging system while the engine is running.

If the monitor lamp flashes, check the charging circuit.

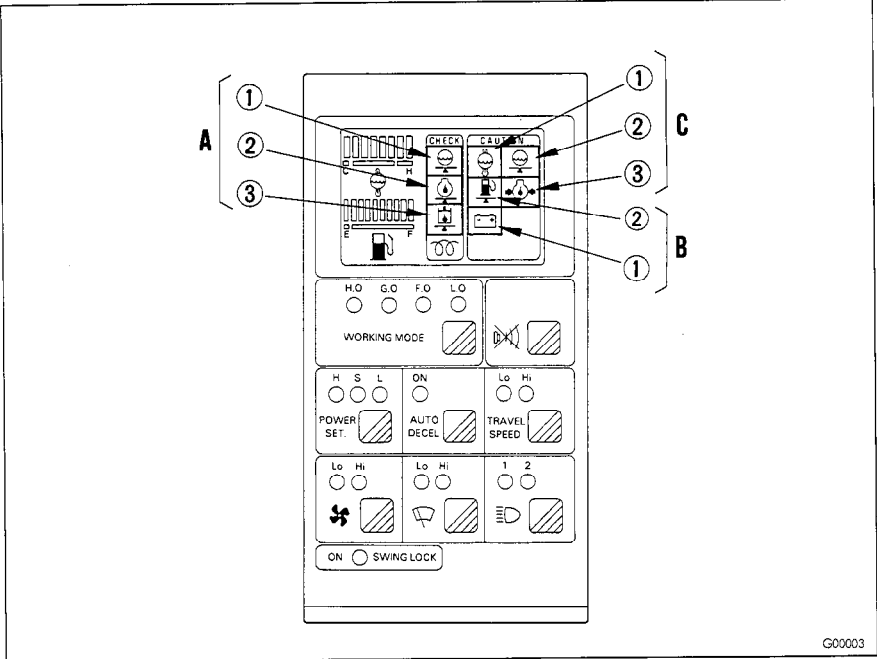

G00003

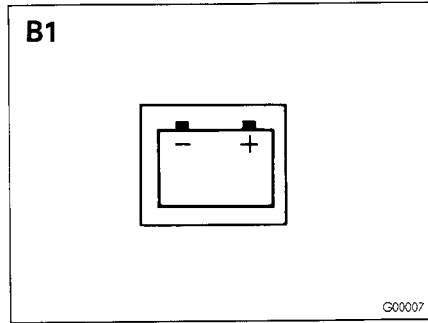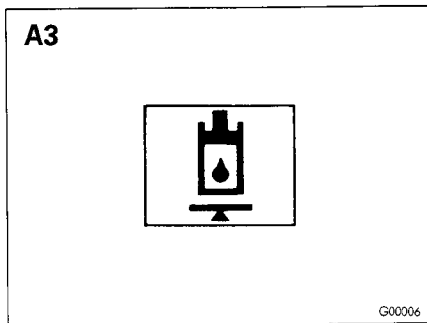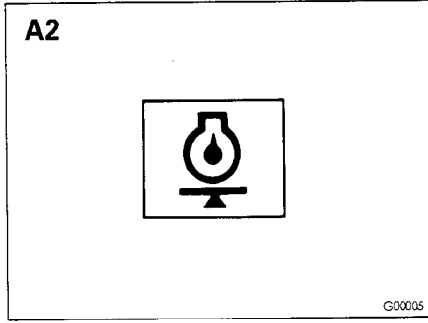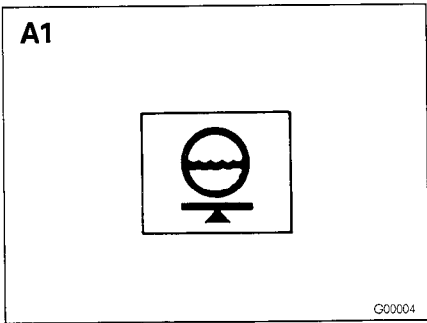

2. FUEL LEVEL

This warns that the fuel level is low.

If it flashes, stop the engine, then check the fuel level and add fuel.

C: CAUTION MONITOR GROUP (Emergency caution items)

- ★ If any monitor lamp flashes, stop the engine or run it at a low idling speed, and repair it immediately.
- ★ Park the machine on level ground and check the monitor lamps.
- ★ Confirm that these monitor lamps light for about 3 seconds after the starting switch is turned to **ON** before the engine is started. If any monitor lamp does not light, ask your Komatsu distributor to inspect that monitor lamp.

1. ENGINE COOLING WATER TEMPERATURE MONITOR

This warns of any rise in the engine cooling water temperature.

If it flashes, the engine overheat prevention system is automatically actuated to run the engine at low idling until the engine water temperature gauge enters the green range.

2. RADIATOR COOLANT LEVEL MONITOR

This monitor indicates a low radiator coolant level.


Check the coolant level when the alarm buzzer sounds and this monitor lamp flashes, stop engine and add water as required.

3. ENGINE OIL PRESSURE MONITOR





This monitor indicates a low engine oil pressure.

If the alarm buzzer sounds and this lamp flashes, the engine oil pressure is below the lower limit. Immediately stop the engine.

- ★ This monitor lamp lights and the alarm buzzer sounds, when the starting switch is turned to **ON** immediately after the engine is started. It does not indicate an abnormality.

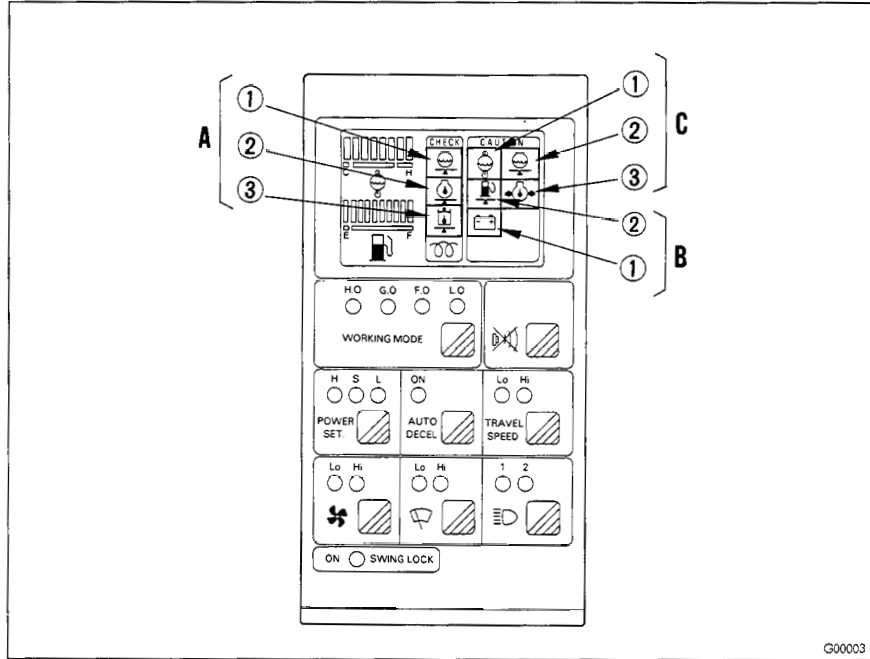

G00003

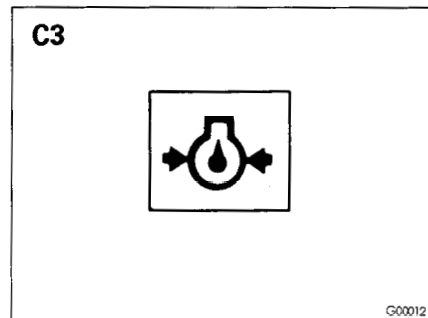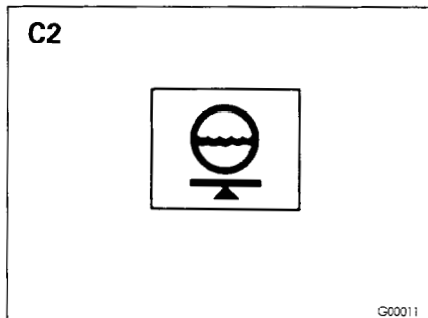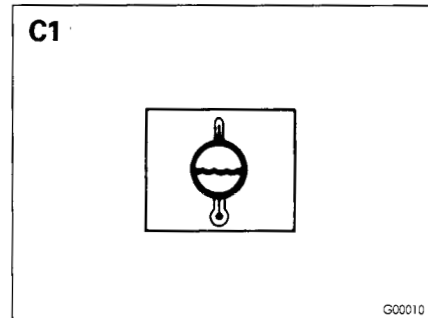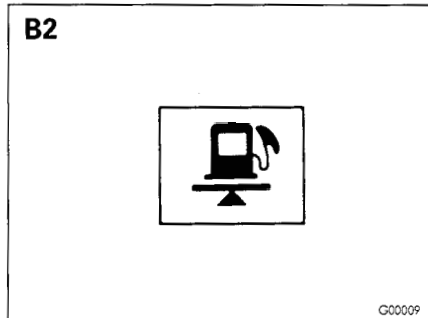

D: METER GROUP

- ★ Confirm that gauges (1), (2) and monitor lamp (3) will light, when the starting switch is turned to **ON** before the engine is started. If any gauge or monitor lamp does not light, ask your Komatsu distributor to inspect that monitor lamp or gauge.

1. ENGINE COOLING WATER TEMPERATURE GAUGE

This gauge indicates the temperature of the cooling water. If the temperature is normal during operation, the green range will light. If red range (1) lights up during operation, the engine overheat prevention system is actuated.

If red range (2) lights up during operation, the alarm buzzer sounds, the engine water temperature monitor flashes, and the overheat prevention system is actuated.

- ★ The engine overheat prevention system acts as follows.
 - Red range (1) lights up:
The power mode is switched to L mode for each working mode and the caution monitor lamp flashes.
 - Red range (2) lights up:
The engine speed is reduced to low idling, the caution monitor lamp flashes and the alarm buzzer sounds.
- ★ The engine overheat prevention system is actuated until the temperature returns to the green range.
- ★ If red range (2) lights up, after the engine water temperature is lowered, turn the fuel control dial to low idling (MIN) to cancel the display.
 - (a): White
 - (b): Green
 - (c): Red

2. FUEL GAUGE

This gauge indicates the amount of fuel in the fuel tank. If there is enough fuel in the tank while the engine is running, the green range lights. If the red range lights, there is less than 35 liters of fuel in the tank.





When the red range lights, add fuel.

- ★ After the starting switch is turned ON, the correct level may not be displayed for a moment, but this does not indicate any abnormality.
 - (a): Red
 - (b): Green

3. ENGINE PRE-HEATING MONITOR LAMP

This monitor lamp indicates the pre-heating time required when starting the engine at an ambient temperature below 0°C.

The monitor lamp lights when the starting switch is turned to HEAT position and flashes after about 30 seconds to show that the pre-heating is completed. (The monitor lamp will go off after about 10 seconds.)

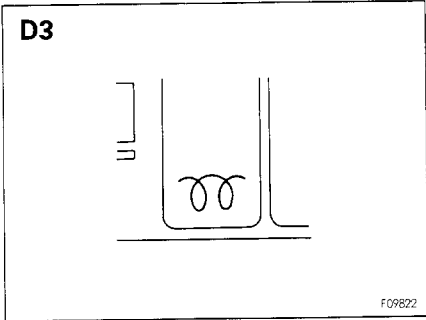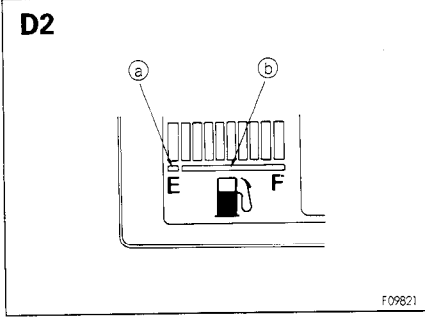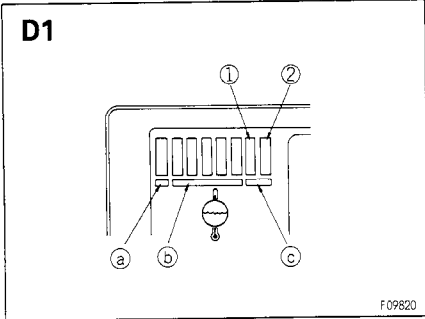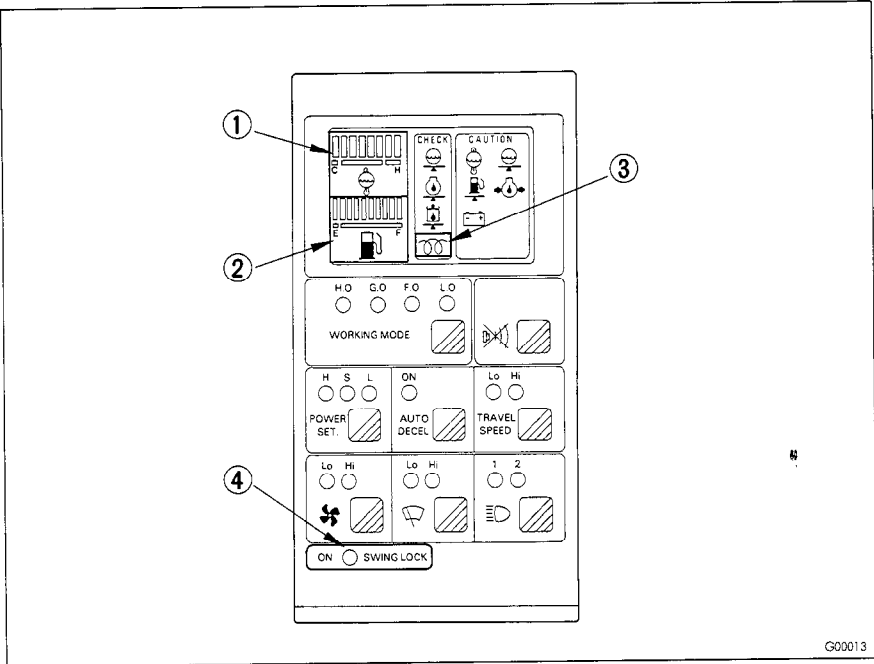


4. SWING LOCK LAMP


This informs the operator that the swing lock is being actuated.

Actuated: Lights up

- ★ When the swing lock switch is turned ON (ACTUATED), the lamp lights up.

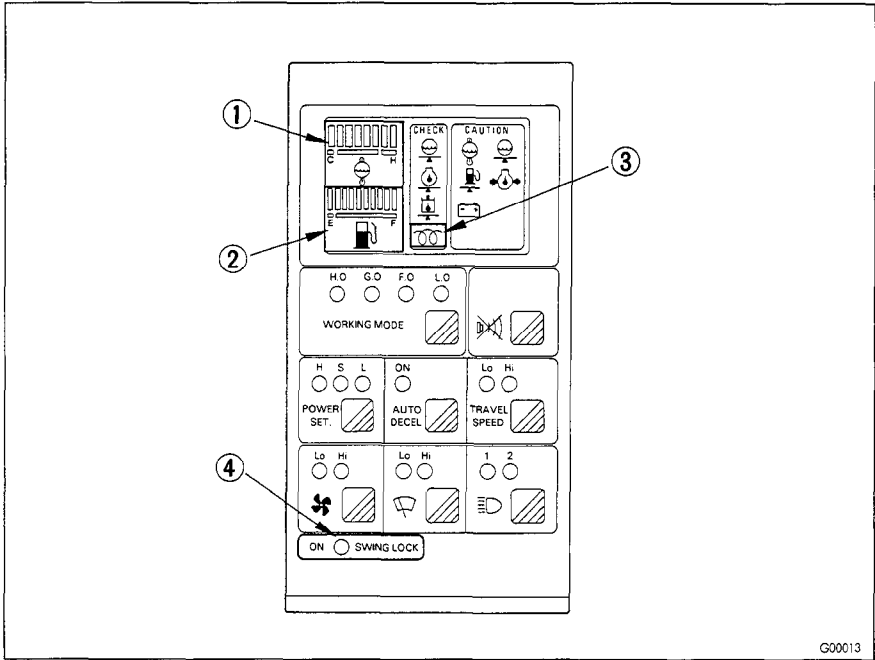

G00013

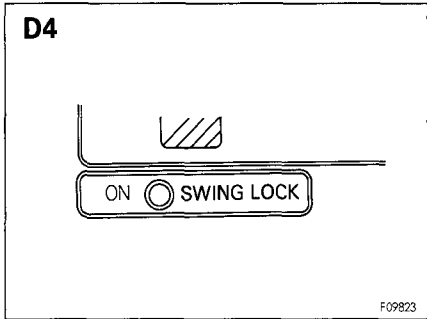

F09823

E: SWITCHES

1. WORKING MODE SELECTOR SWITCH (BASIC MODE)

This switch is used to set the movement or power for the work equipment to match the content or purpose of the operation.

H.O (heavy-duty operation mode) lights up:

This is used for heavy-duty work.

G.O (general operation mode) lights up:

This is used for ordinary work.

F.O (finishing operation mode) lights up:

This is used for leveling or grading work.

L.O (lifting operation mode) lights up:

This is used for fine control operations.

★ When starting the engine, the general operation mode (S mode) is automatically selected.

2. POWER MODE SWITCH (SELECTED MODE)

This switch is used to set output force for the work equipment to match the content or soil quality for the operation.

H lights up:

This is used for high productivity loading operations.

S lights up:

This is used for normal operations.

L lights up:

This is used for grading or other light-duty operations.

3. AUTO-DECELERATION SWITCH (SELECTED MODE)

This switch is used to actuate the auto-deceleration system so that the engine speed is lowered when all the control levers are at neutral.





ON lights up:

Auto-deceleration is actuated

OFF lights up:

Auto-deceleration is canceled

★ For the use of switches 1, 2, and 3, see METHOD OF USING MODE SELECTOR SWITCHES.

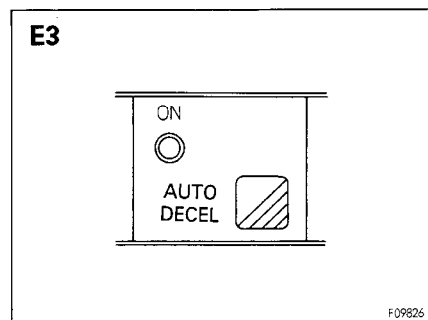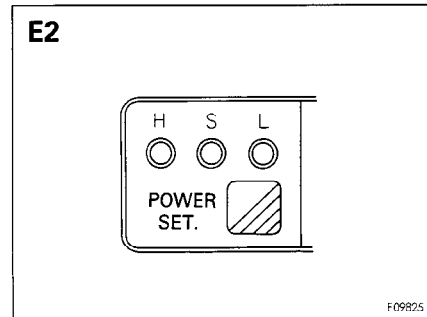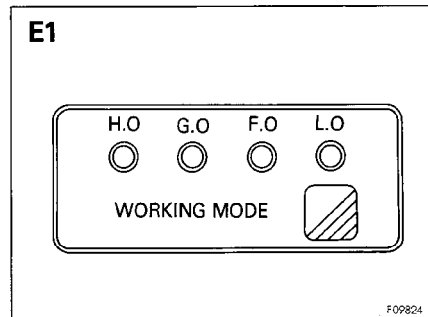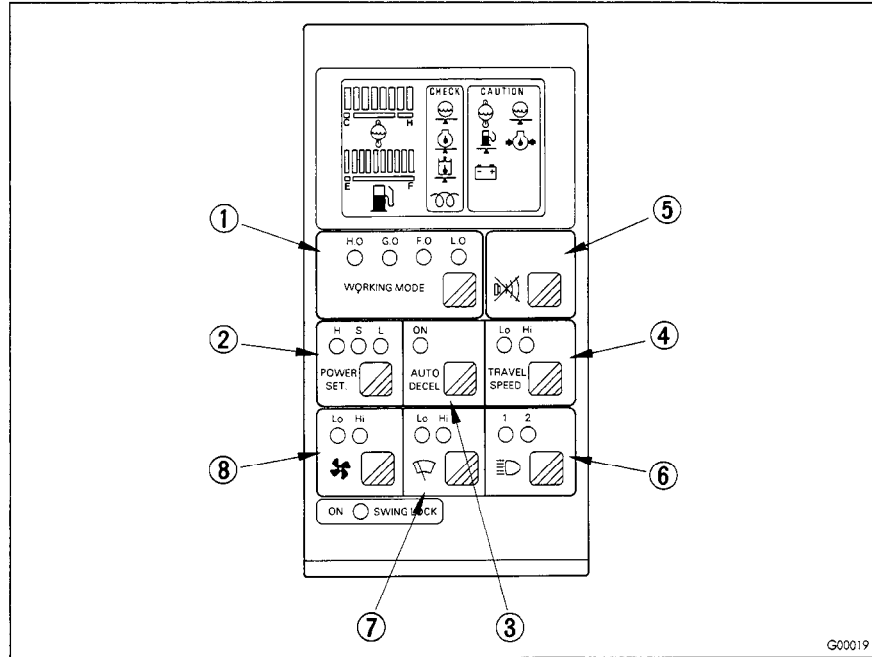

4. TRAVEL SPEED SWITCH

This is used to select the two travel speeds.

Lo lights up:

Low speed travel

Hi lights up:

High speed travel

- ★ When starting the engine, the travel speed is automatically switched to low speed travel (Lo).
- ★ If this switch is operated when the machine is traveling, it may cause deviation, so always stop the machine before operating the switch.
- ★ When traveling in Hi, the travel speed is automatically switched to low speed travel (Lo) to match the travel surface on soft ground or when traveling uphill, so there is no need to operate this switch.

5. ALARM BUZZER STOP SWITCH

This switch is used to stop the alarm buzzer when it has sounded to warn of some abnormality while the engine is running.

6. LAMP SWITCH

This lights up the head lamps and panel lamps.

Position 1:

Panel lamps light up

Position 2:

Panel lamps and head lamps light up

OFF: Panel lamps and head lamps are OFF

7. WIPER SWITCH

This operates the wipers for the front window.


Lo lights up:

Intermittent wiper operation





Hi lights up:

Continuous wiper operation

OFF: Wipers stopped

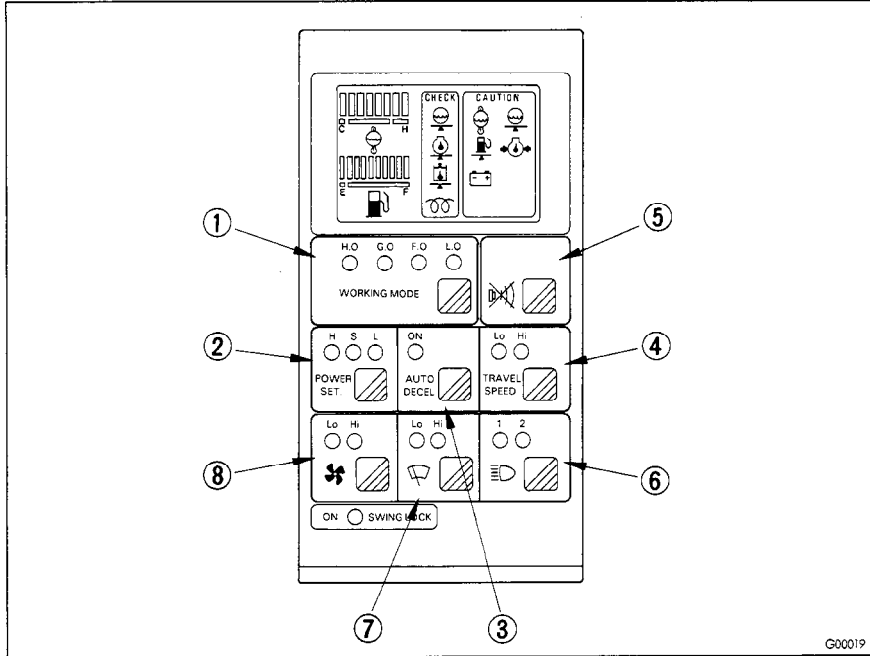

G00019

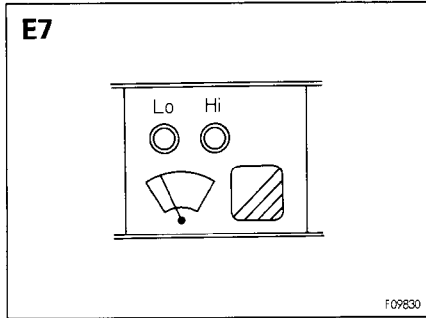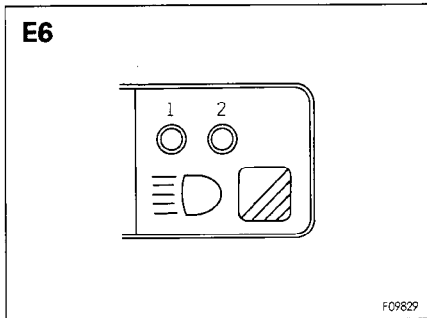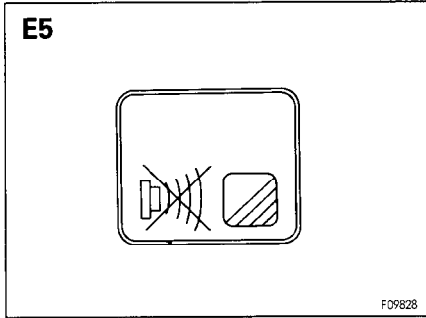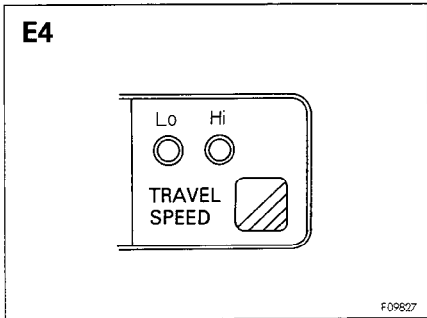

8. CAB HEATER SWITCH

This switch is used to heat the operator's compartment. The flow rate of the hot air can be set to two levels.

Lo lights up:

Low wind speed

Hi lights up:

High wind speed

OFF: Cab heater stopped

★ The cab is heated by means of warm water from the engine.

Accordingly, heating can not take place while the engine cooling water is warming up.





METERS

1. SERVICE METER

This meter shows the total operation hours of the machine. The service meter advances while the engine is running - even if the machine is not traveling.

Refer to the section "SERVICE METER".

★ While the engine is running, the indicator of the meter will rotate to indicate that the meter is turning over.

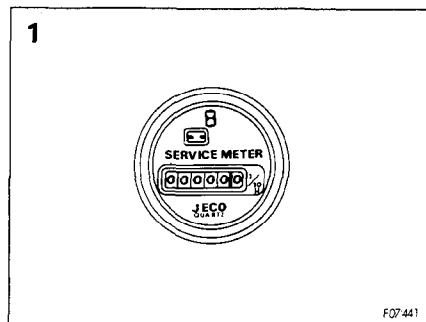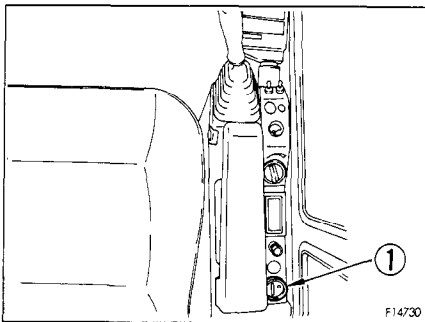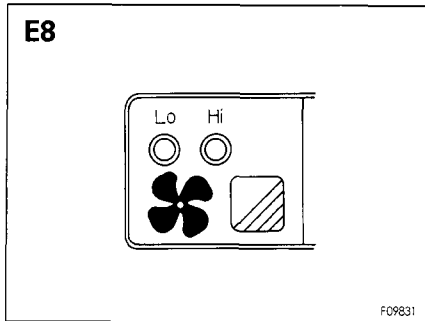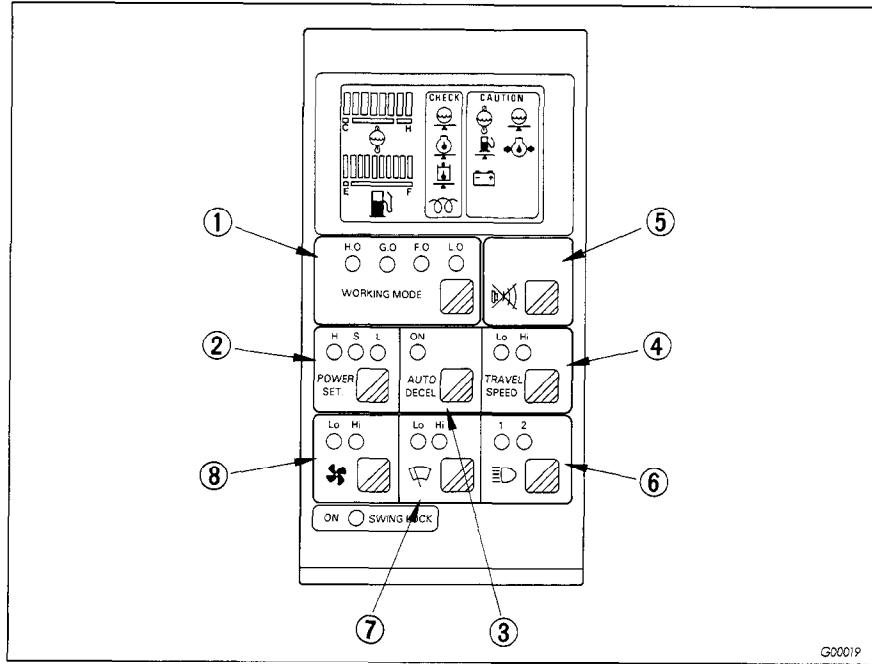

SWITCHES

1. STARTING SWITCH

This switch is used to start or stop the engine.

OFF

Key insertion-withdrawal position. None of electrical circuits activate.

ON

Charging and lamp circuits activate. Keep key at ON after starting.

START

At this key position, the starting motor will crank the engine. Release key immediately after starting.

HEAT

Use this position when starting in cold weather.

Release the key to allow it to return automatically to OFF and then, without delay, turn it to START.

★ When starting, be sure to use the starting key.

2. FUEL CONTROL DIAL (WITH AUTO-DECELERATION MECHANISM)

This adjusts the engine speed and output.

(1): Low idling (MIN)

Turned fully to the left

(2): Full speed (MAX)

Turned fully to the right

★ To stop the engine, turn the starting switch to the OFF position.

3. WINDOW WASHER


While the switch is being held at the ON position, washer fluid is sprayed out.

When the switch is released, it will return automatically to the OFF position and the supply of washer fluid will stop.


★ Do not keep the switch at the ON position for more than 10 seconds continuously.

★ Do not operate the switch to the ON position if there is no more washer fluid.


(f): Front of machine

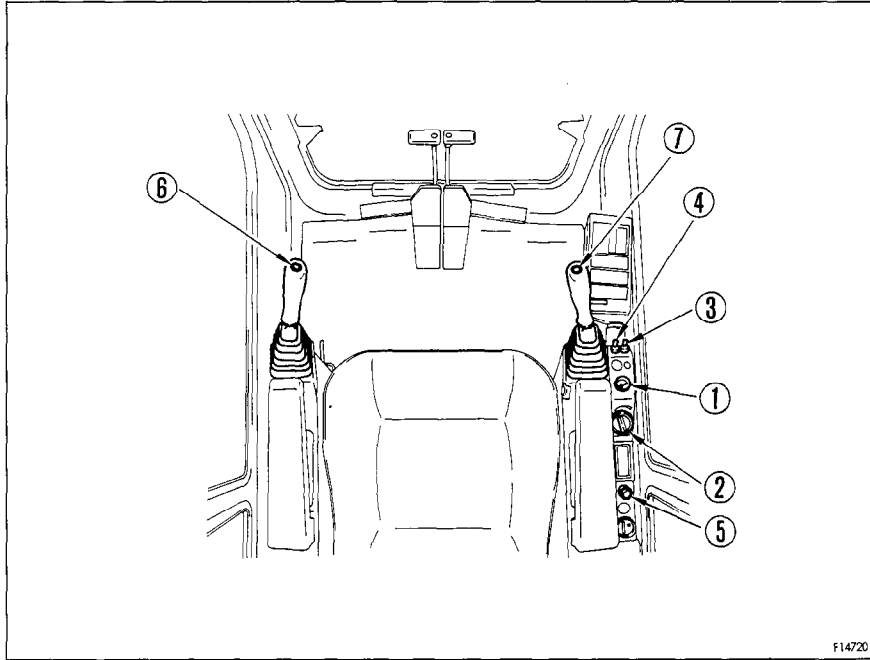


F14720

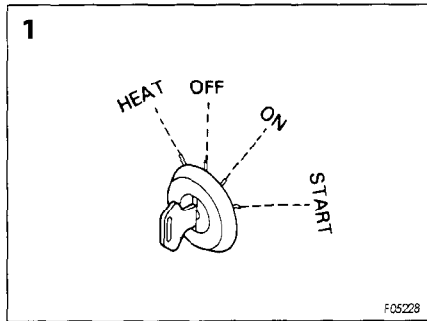

F05228

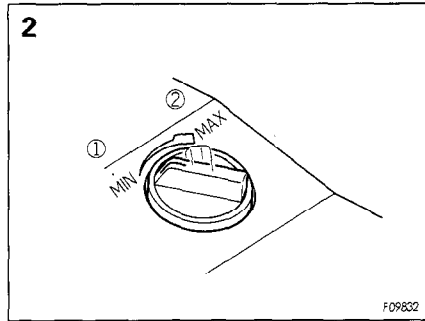

F09832

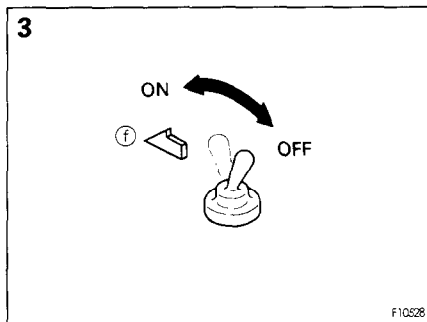

F10528

4. SWING LOCK SWITCH

This actuates the swing lock.

ON position (actuated):

The swing lock is always applied, and the upper structure will not swing even if the swing is operated. In this condition, the swing lock lamp lights up.

OFF position (canceled):

The swing lock is applied only when the swing control lever is at neutral; when the swing is operated, it is canceled.

★ When the lamp is OFF, the swing lock is actuated approx. 4 seconds after the swing lever is placed in neutral, and the upper structure is then fixed in position.

⚠ When the machine is traveling under its own power, or when the swing is not being operated, always set the switch to the ON (ACTUATED) position.

(f): Front of machine

5. CIGARETTE LIGHTER

This is used to light cigarettes. To use, push the lighter in. After a few seconds it will spring back.


At that time, remove the lighter and light your cigarette.

6. POWER MAX. BUTTON


When the button in the center of the knob of the left work equipment control lever is being pressed (max.: approx. 8 sec), the maximum power is increased.

7. HORN BUTTON


When this button is pressed, the horn will sound.

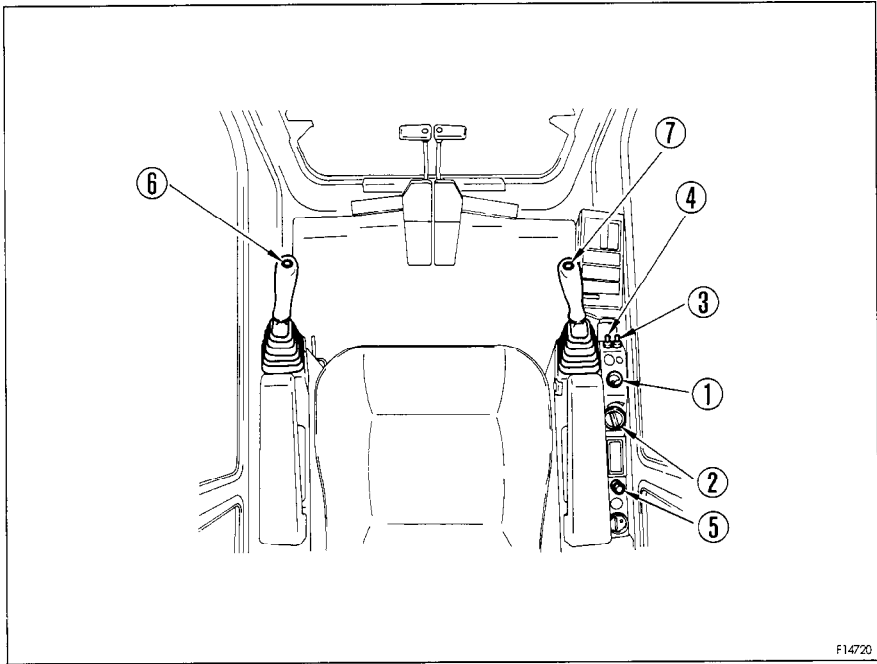


F14720

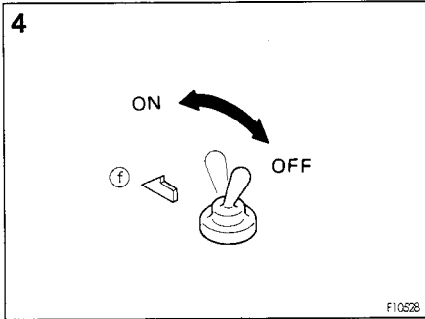


F10528

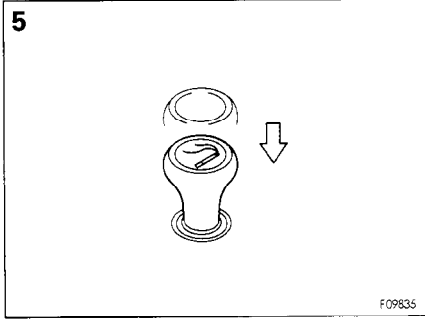

F09835

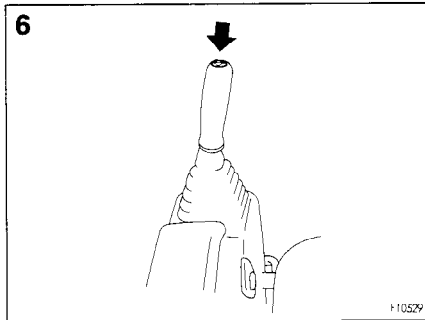



F10529

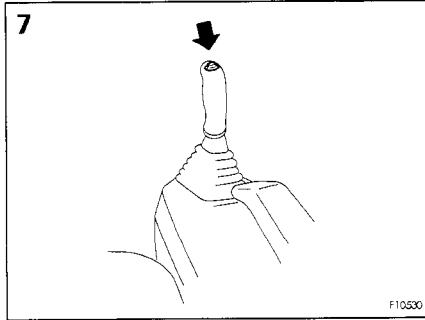

F10530

8. ROOM LAMP SWITCH

When this switch is moved to ON position, the room lamp will light.

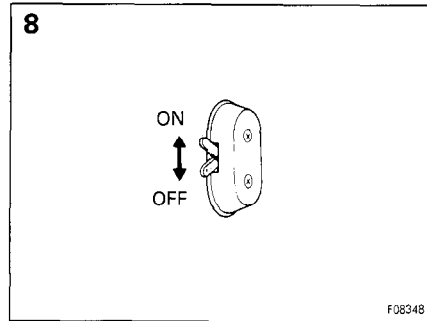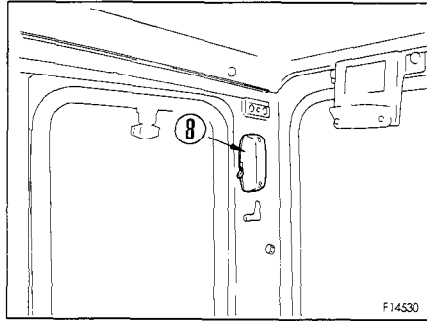

LEVERS

1. LOCK LEVER

This locks the work equipment, travel, and swing. Lower the lever to apply the lock.

⚠ When parking the machine or leaving the machine, always lower the bucket to the ground, and apply this lever to lock the control levers.

★ This lock lever is a hydraulic lock, so even if it is in the lock position, the work equipment control lever and travel lever will move, but the work equipment, travel motor, and swing motor will not work.

(a): Free

(b): Lock

2. TRAVEL LEVERS (WITH PEDAL, AUTO-DECELERATION MECHANISM)

(1) FORWARD:

The lever is pushed forward
(The pedal is angled forward)

(2) REVERSE:

The lever is pulled back
(The pedal is angled back)

N (Neutral): The machine stops

★ (): This indicates operation of the pedal.

⚠ Do not put your foot on the pedal unless you are using it.

3. LEFT WORK EQUIPMENT LEVER (arm/swing control lever) (with auto-deceleration device)

(N) Neutral:

When the lever in this position, the upper works and the arm will be retained in the position in which they stop.

Arm operation


(A) Arm moves out.

(B) Arm moves in.


Swing operation

(C) Upper works swings to the right.


(D) Upper works swings to the left.

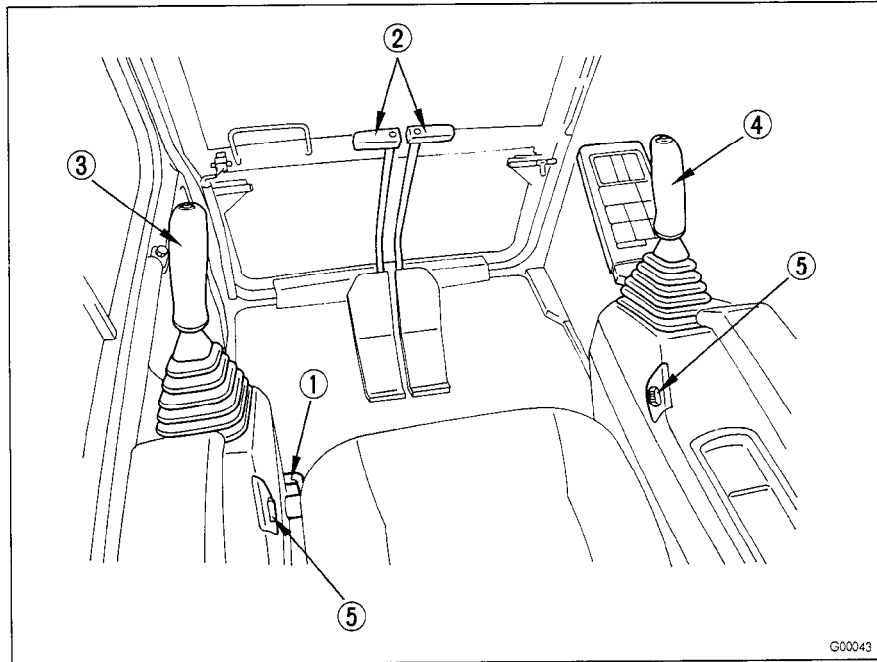


G00043

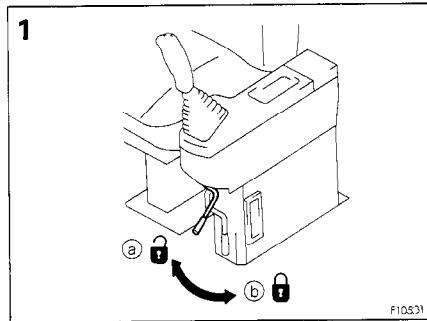

F10831

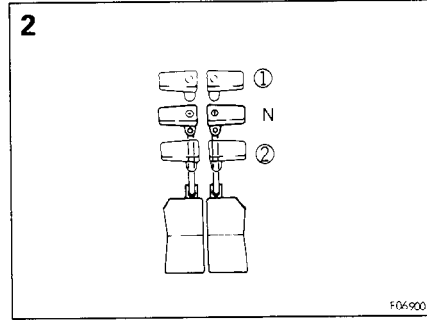

F06900

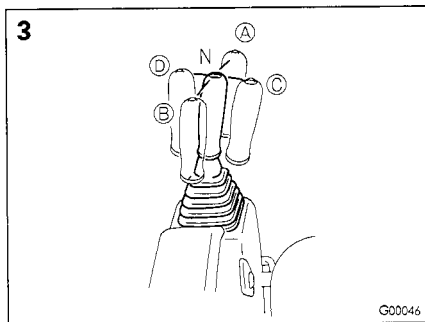

G00046

**4. RIGHT WORK EQUIPMENT LEVER (boom/bucket control lever)
(with auto-deceleration device)**

(N) Neutral:

When the lever in this position, the boom and the bucket will be retained in the position in which they stop.


Boom operation

- (1) Boom raises.
- (2) Boom lowers.

Bucket operation

- (3) Bucket dumps.
- (4) Bucket curls.

- ★ For levers 2, 3, and 4, the engine speed changes as follows because of the auto-deceleration mechanism.
- When the travel lever and work equipment control levers are at neutral, even if the fuel control dial is above the mid-range position, the engine speed will drop to a mid-range speed.
If any of the levers are operated, the engine speed will rise to the speed set by the fuel control dial.
- If all control levers are set to neutral, the engine speed will drop by approx. 100 rpm, and after approx. 4 seconds, the engine speed will drop to the deceleration speed (approx. 1400 rpm).

 **If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.**

5. FORWARD ADJUSTMENT BUTTON FOR WORK EQUIPMENT CONTROL LEVER


If the button at the side of the left and right console boxes is pressed, it is possible to move the console box forward in tow stages.

N: Neutral position


F1: Middle position

F2: Deep excavation position


- ★ The left console box only can also be adjusted back from the N position.
Use this position when getting on or off the machine.

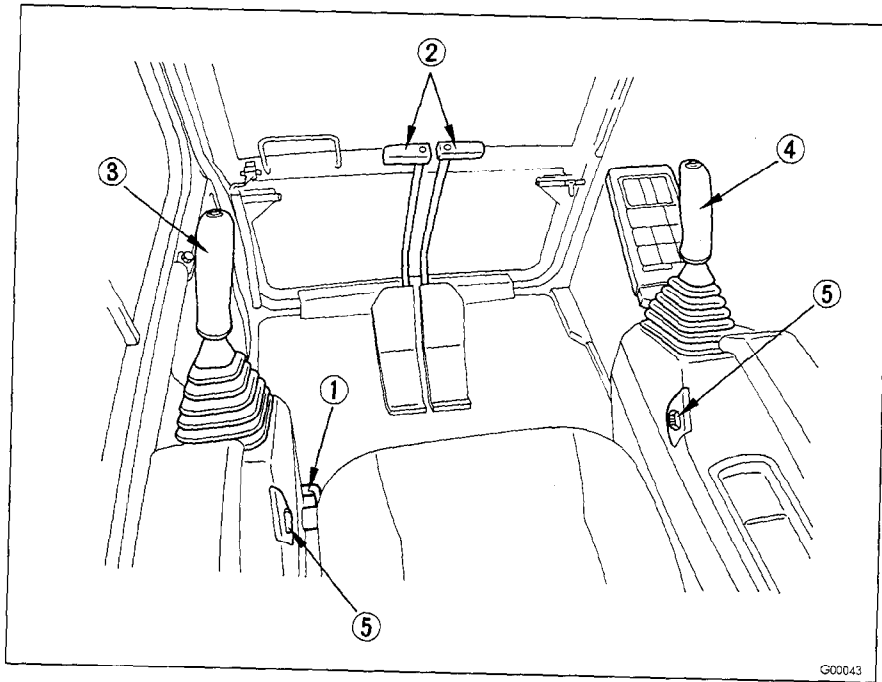

G00043

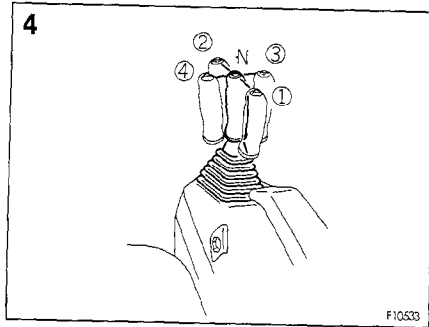

F10533

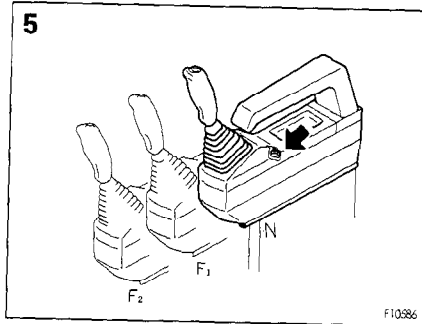

F10586

DUST INDICATOR

This device indicates clogging of the air cleaner the element. When red piston (1) appears in the transparent part of this indicator, the element is clogged. Immediately clean the element.

After cleaning, push indicator button (2) to return the red piston to the original position.

This is under the air cleaner inside the engine side cover.

DOOR LOCK




Use the door lock to fix the door in position after opening it.

1. The door will become fixed in place when it is pressed against catch (1).
 2. To release the lock, press knob (2) down at the left side of the operator's seat to release the catch.
- ★ When fixing the door, fix it firmly to the catch.

CEILING WINDOW

Ceiling window is opened by releasing the lock in the direction of the arrow and pushing the handle.

- ★ When opening or closing the ceiling window, grasp the handle.
Do not push in grasping staydumper (A).

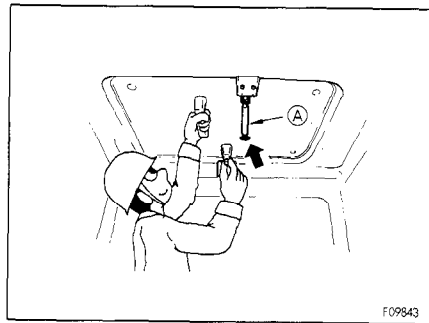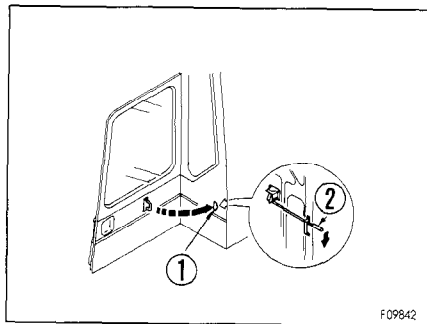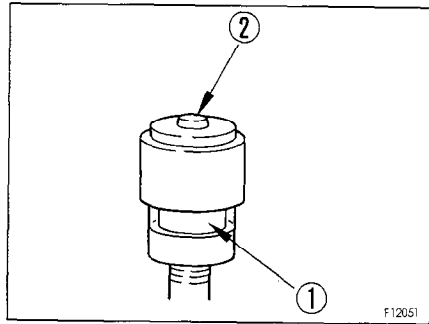

FRONT WINDSHIELD

It is possible to store (pull up) the front window (top) in the roof of the operator's compartment.

When opening








1. Stop the machine on flat ground, lower the work equipment to the ground, and stop the engine.
2. Lock the left and right work equipment control levers and travel levers.
3. Disconnect the wiring for the wiper motor from socket (B).
4. Pull lock pins (A) at the top left and right sides of the front window to the inside to release the lock.
5. From the inside of the operator's cab, hold the bottom grip with the left hand and the top grip with the right hand, pull up the window, and push it in fully until it is locked by catch (C).
6. Lock with lock pins (A) on the left and right sides.

When closing

1. Stop the machine on flat ground, lower the work equipment to the ground, and stop the engine.
2. Lock the left and right work equipment control levers and travel levers.
3. Release lock pins (A).
4. Hold the grip at the bottom of the front window with your left hand and the grip at the top with your right hand, release the lock of catch (C) with your right thumb, then pull the top grip slowly and lower the front window. When releasing the lock of catch (C), push release lever (D) in the direction of the arrow to release the lock.
5. Lock securely with lock pins (A) at the left and right sides.
6. Connect the wiper motor wiring to socket (B).

Removing front window (bottom)

With the front window open, remove lock pin (E), and the bottom part of the front window can be removed. Store the removed bottom part of the front window at the rear of the operator's cab.

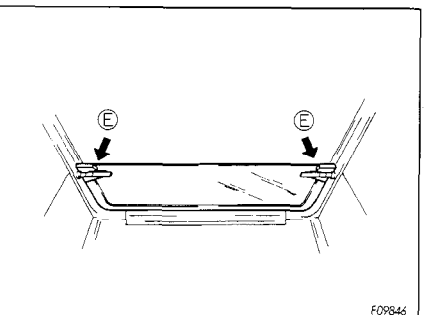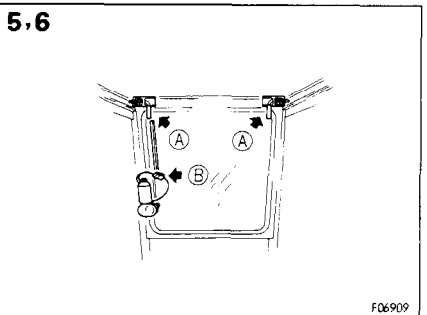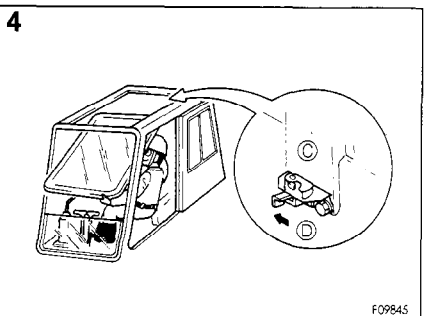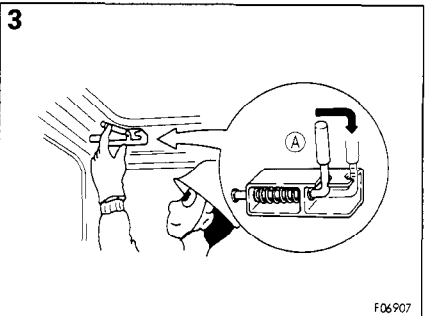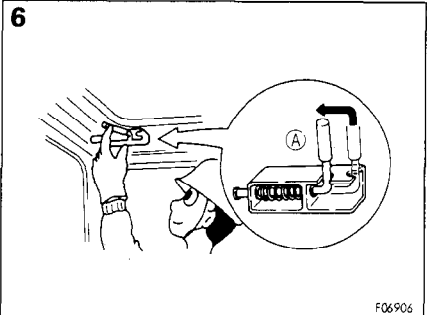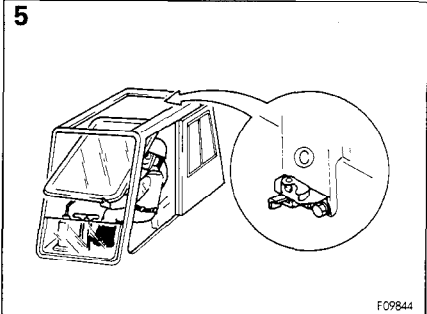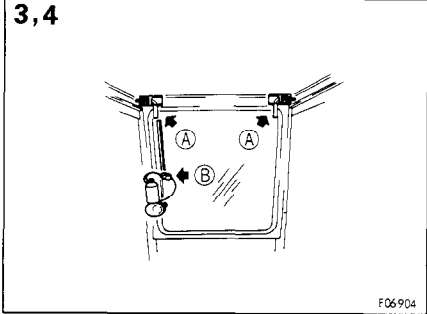

OPERATOR'S SEAT

The seat adjustment should be checked at the beginning of each shift and when operators change.

Ⓐ Forward-backward adjustment

Move lever (1) to the right, move the seat to the best position and release the lever. The seat can be moved forward or backward over 160 mm in nine stages.

Ⓑ Backrest adjustment




Pull lever (2) in the direction of arrow, move the back-rest to the desired position and release the lever.

Ⓒ Up-down adjustment of seat

When carrying out the adjustment, stop the engine and lock the left and right work equipment control levers with the lock lever.

Up-down adjustment range: 110 mm (5 stages)

1. Turn knob (3) to the left to loosen it, then pull up lever (4).
2. Align the pin hole in the mount base with the seat bracket pin hole at the desired height, then return lever (4) and insert pin (5).
Turn knob (3) to the right to fix the seat in position.

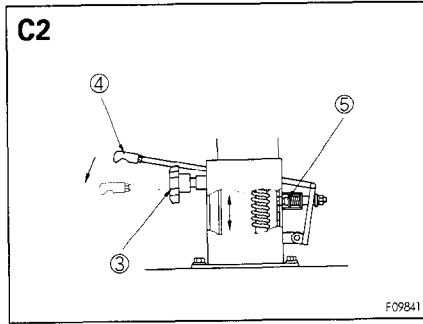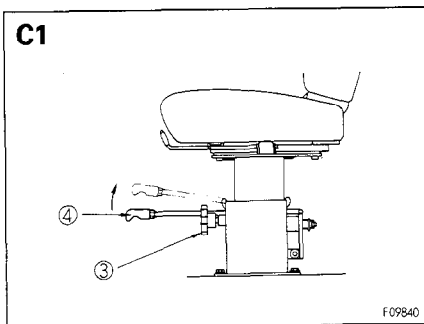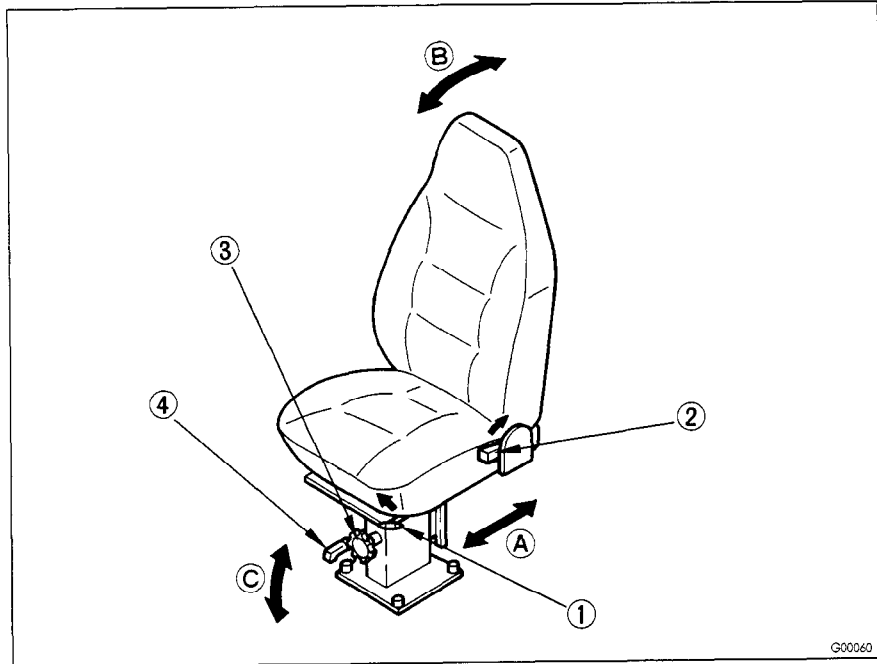

FUSE BOX

The fuses protect the electrical equipment and wiring from burning out.

If the fuse becomes corroded, or white powder can be seen, or the fuse is loose in the fuse holder, replace the fuse.



★ Replace a fuse with another of the same capacity.

 **Before replacing a fuse, be sure to turn off the starting switch.**

Fuse arrangement and circuit

★ Spare fuses (two of 10A, one of 15A) are kept in the spare fuse box.

No.	Fuse capacity	Circuit	Remark
①	10A	Pump controller, Solenoid valve, (Swing flasher)	—
②	10A	Engine governor controller	—
③	10A	Monitor, Buzzer	—
④	15A	Heater, (Air conditioner, Cooler)	—
⑤	15A	Right head lamp, Working lamp, (Head lamp on cab)	—
⑥	10A	Radio, Cigarette lighter	—
⑦	10A	Wiper motor, Horn, (Window washer)	—
⑧	10A	Room lamp	—
⑨	10A	Battery relay, Electric heater relay, Start signal	—
⑩	10A	(Swing flasher)	—

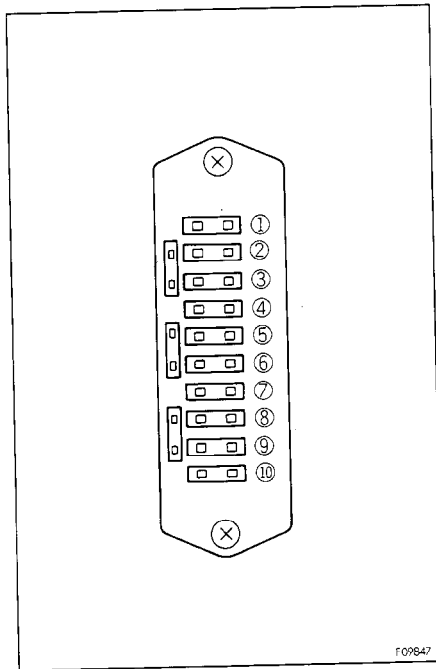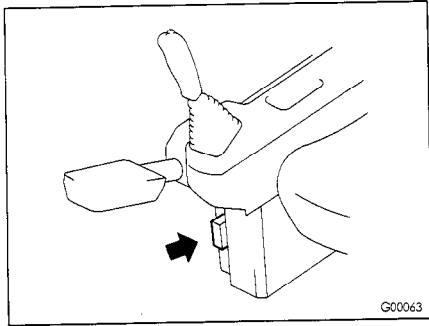

FUSIBLE LINK

If the starting motor does not turn even when the starting switch is turned to START position, a possible cause is a disconnection in the wire-shaped fusible link (1), so check and replace if necessary.

ELECTRONIC MONITOR AND CONTROL CONSOLE (EMACC)

The angle of the monitor panel can be changed to make it easier to see.

When changing the angle, use both hands, and always stop the monitor panel at a position where it is held in the notch.

★ Range of adjustment: 30° (3 stages)

CONTROLLERS




PUMP CONTROLLER

This informs of the location of any abnormality in the electronic control system of the pump.

A 2-digit display (01 — 29) indicates the location of the abnormality.

When the electronic control system is normal, the display in the table is shown.

★ If a display is given to show an abnormality, see TROUBLE SHOOTING GUIDE.

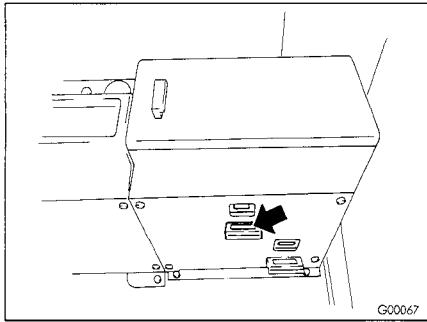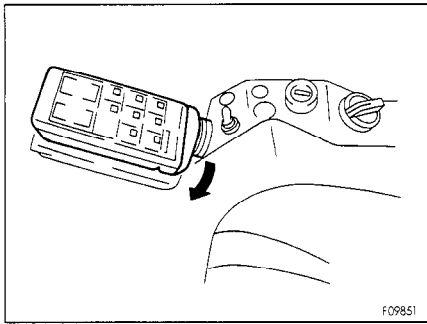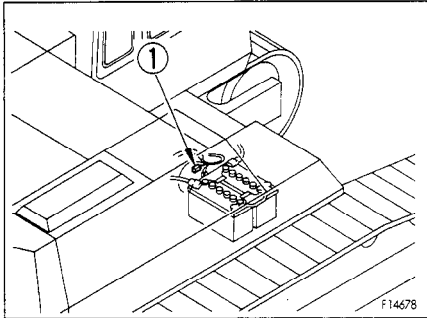


When normal

No.	Input mode and condition	Display	
①	Power source monitor (with starting switch ON)	Lights up	
②	Power mode	H mode	H
		S mode	S
		L mode	L
③	Engine speed signal monitor (when engine is running)	Flashes	
④	Working mode	Heavy-duty operation mode	1
		General operation mode	2
		Finishing operation mode	3
		Lifting operation mode	4

- ★ The combinations given in the table above are displayed according to the input mode and machine condition.
- ★ Engine speed signal monitor (3) flashes according to the engine speed.
(At 2000 rpm, it flashes approx. 20 times/10 sec)
- ★ When switching the input, the following display is given.

When switching input		Display
When electric power is switched on (0.5 sec)	PC200-5, -5 MIGHTY	. 4
	PC200LC-5, -5 MIGHTY	. 4
	PC220-5	. 5
	PC220LC-5	. 5
Switching travel speed	Hi	.H.1
	Lo	.L.0
Auto-deceleration switch		.A.d
Swing lock switch		.b.5
Work equipment control lever		.P.1
Swing control lever		.P.2
Service control lever		.P.4
Travel lever		.P.6
Power max. button		.UP

The display is given for 0.5 — 1.5 sec after the input is switched.

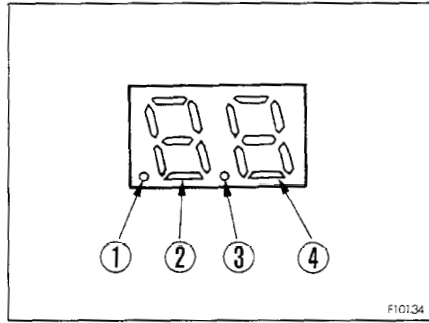

F10134

ENGINE THROTTLE CONTROLLER

This informs of the location of any abnormality in the control system for the electrically controlled throttle. Green and red LEDs (Light Emitting diodes) are installed, and these go out or light up to give a combination that shows the location of the abnormality.

When the electrically controlled throttle is normal, the display is as given in the table.

★ If the LEDs light up to show an abnormality, see TROUBLE SHOOTING GUIDE.



When normal

For PC200, 200LC-5, -5 MIGHTY

LED display			Condition of machine
L ₃ Red	L ₂ Green	L ₁ Red	
OFF	OFF	ON	For 5 seconds after power is switched on
OFF	ON	OFF	5 seconds after power is switched on

For PC220, 220LC-5

LED display			Condition of machine
L ₃ Red	L ₂ Green	L ₁ Red	
OFF	ON	OFF	—

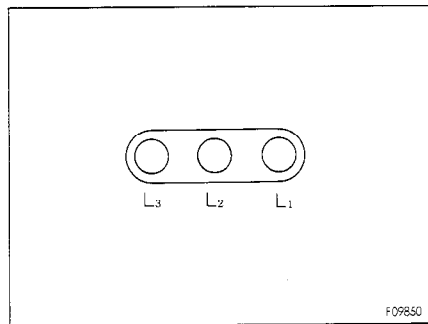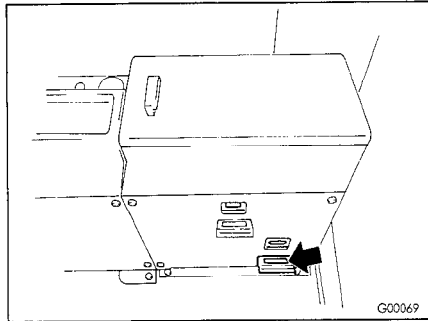

METHOD OF USING MODE SELECTOR SWITCHES

The mode selector switches can be used to switch the mode to match the conditions and purpose of work, thereby enabling efficient operations.


Use the following procedures to make effective use of each mode.

PROCEDURE FOR SETTING MODE SELECTOR SWITCH SETTING BASIC MODES

When the starting switch is turned ON, the working mode is set to general operation mode, so normal work can be carried out without any need to set the mode. The most effective mode for the type of work is set with the basic mode (1) (working mode switch).

★ The table below shows the condition of the power mode and auto-deceleration, and the most suitable type of work for each setting.

Basic mode Working mode	Selected mode		Applicable work
	Power mode	auto-deceleration	
Heavy-duty control operation mode	H mode	ON	Large digging and loading production in a short time
General operation mode	S mode	ON	Normal digging and loading operations, crushing (breaker) operations
Finishing operation mode	S mode	OFF	Finishing and leveling operations, general hauling operations
Lifting operation mode	L mode	OFF	Positioning, etc.

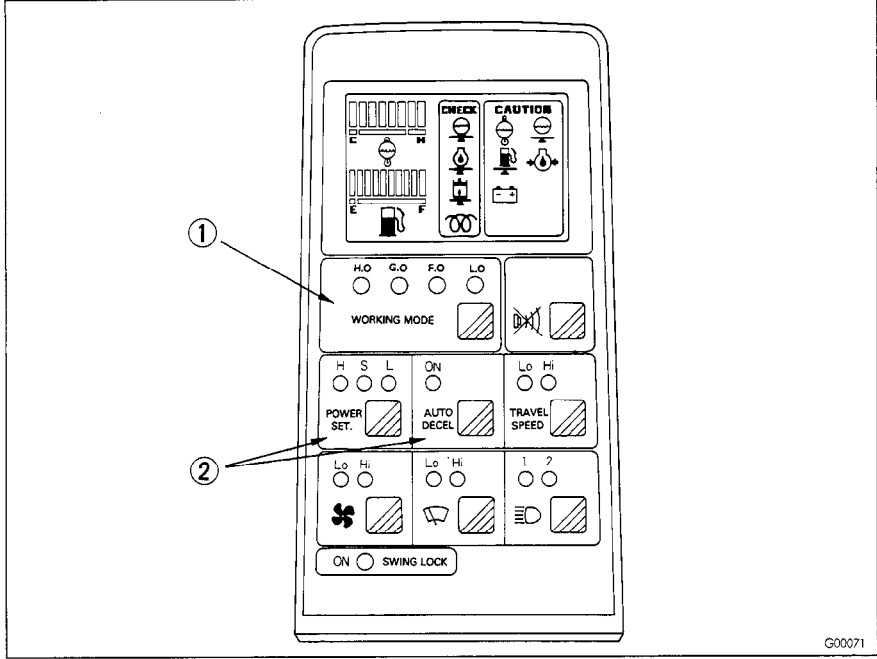

G00071

SETTING OF SELECTED MODES


The selected modes are automatically set by setting the basic mode, but after the basic mode is selected, it is possible to change the selected mode (2) as desired.

Power mode

Working mode	Selection of power mode	Effect
Heavy-duty operation mode	H → S	Reduction in fuel consumption
General, finishing operation mode	H ← S	Increase in speed
	S → L	Reduction in fuel consumption
Lifting operation mode	S ← L	Increase in speed

Auto-deceleration

If the auto-deceleration is always actuated, it improves fuel consumption, so we recommend that it always be used. However, if the control levers are operated in small movements, the engine speed changes greatly, so it is better to carry out such operations with the auto-deceleration canceled.

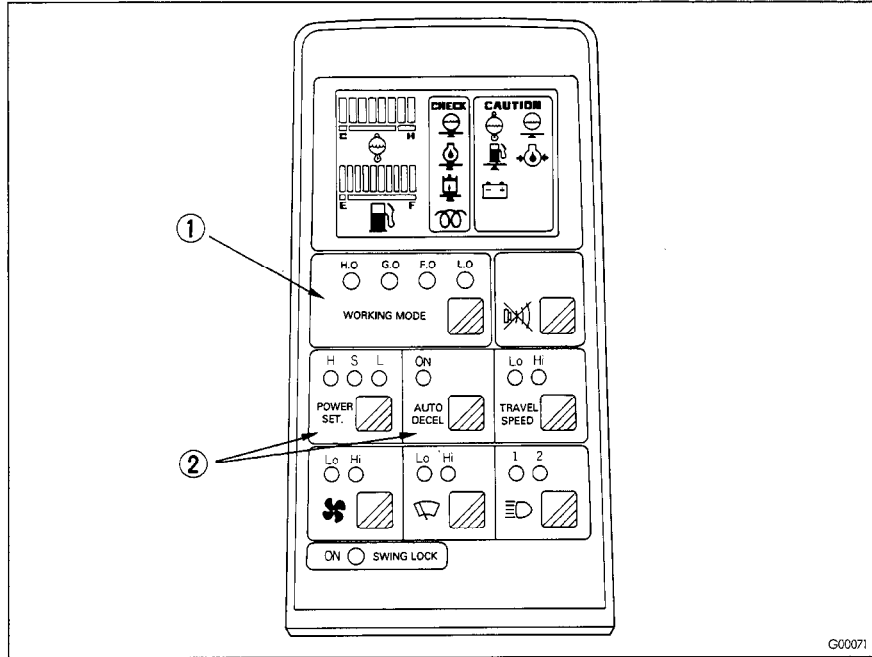

G00071

CHECK BEFORE STARTING

Pre-operation checks forestall machine trouble. Never neglect them.

a. WALK-AROUND CHECK

Look around the machine and under the machine to check for loose nut or bolts, collection of dirt, or leakage of oil, fuel, or coolant, and check the condition of the work equipment and hydraulic system. Check also for loose wiring, play, and collection of dust at places which reach high temperatures.

1. Check for oil leak at high pressure hose, high pressure hose joints and hydraulic cylinder seal.
2. Check tightness of idler mounting bolt.
3. Check tightness of battery terminal.
4. Check radiator for water leaks.
5. Check around the engine for water and oil leaks.
6. Check final drive case for oil leaks and check tightness of sprocket mounting bolt.
7. Check tightness of air cleaner mounting bolt.

b. CHECK AND REFILL COOLANT

Open the cover at the rear of the machine and check that the cooling water is inside the correct range (shown in the diagram on the right) for sub-tank (1). If the water level is low, add water through water filler (2).

(3): FULL

(4): LOW

- ★ If the volume of coolant added is more than usual, check for possible water leakage.






Do not remove the cap while cooling water is hot. Hot water may spout out.

When removing the cap, wait until the water temperature goes down and release radiator pressure little by little by loosening the cap slowly, then remove the cap.

c. CHECK OIL LEVEL IN ENGINE OIL PAN

1. Open the cover at the rear of the machine.
 2. Use the dipstick (G) to check the oil level.
 3. The oil level should be between mark L and H, if necessary, add oil at the oil filler (F).
- ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
 - ★ When checking the oil level, park the machine on a level surface, stop the engine and wait for 15 minutes before checking.


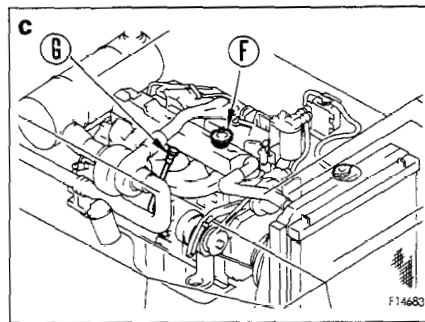
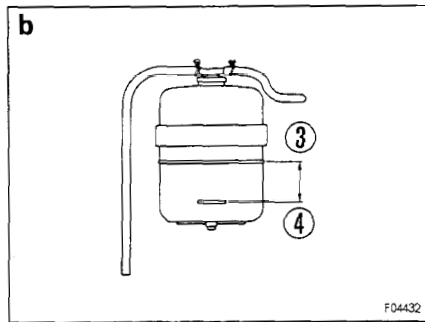
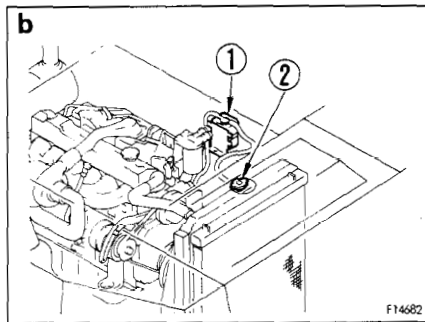


d. CHECK FUEL LEVEL

1. Check the fuel level using sight gauge (G) on the side face of the tank.
 2. Upon completion of work, pour in additional fuel through filler (F) until the fuel tank is full.
- ★ When adding fuel, never let the fuel overflow. This may cause a fire.
 - ★ If breather hole (1) in the cap is blocked up, fuel flow to the engine may stop. Accordingly, clean it from time to time.
 - ★ Fuel capacity: 310 ℓ

e. CHECK OIL LEVEL IN HYDRAULIC TANK

1. Run the engine at low speed, retract the arm and bucket cylinders, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.
 2. Operate all the control levers (work equipment and travel) in all directions to the end of their stroke to release the internal pressure.
- ★ Carry out this operation within 15 seconds of stopping the engine.
3. If the level of hydraulic oil is not between top H and bottom L lines of sight gauge (G), pour in additional engine oil through filler (F).
- ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
 - ★ Do not pour in additional oil if the level is above the top line H of the sight gauge.
 - ★ The oil level will vary depending upon the oil temperature. Accordingly, use the following as a guide:
 - When the oil temperature is close to the ambient temperature (10 to 30°C), the level will be close to bottom line L on the sight gauge.
 - When the oil temperature is the normal operating temperature (50 to 80°C), the level will be close to top line H on the sight gauge.

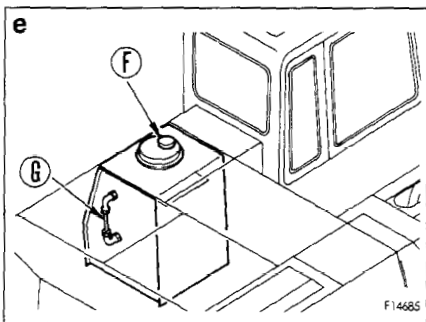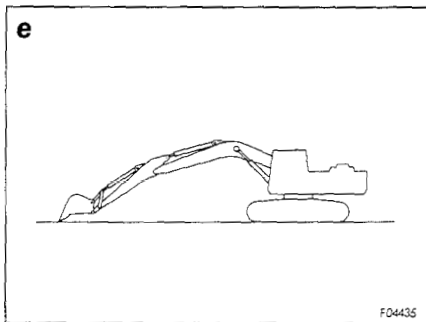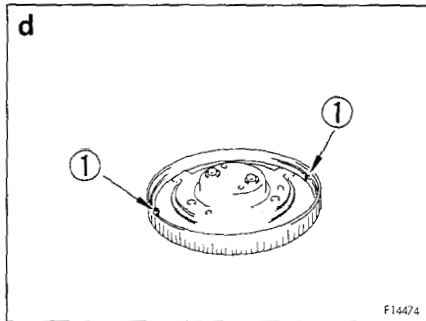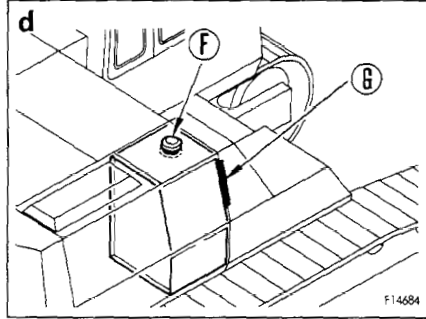

f. CHECK DUST INDICATOR

When the air cleaner element is clogged, the red piston of dust indicator (1) reaches the service level and gets locked.


In that case, clean the element, referring to the section "WHEN REQUIRED".

After cleaning the element, push the button to return the red piston.

g. CHECK ELECTRIC WIRINGS

Check for damage of the fuse and any sign of disconnection or short circuit in the electric wiring. Check also for loose terminals and tighten any loose parts. Check the following points carefully.

- Battery
- Starting motor
- Alternator

 **If the fuse is damaged or there is any sign of shortcircuiting in the electric wiring, always investigate the cause and correct it.**

- ★ Please contact your Komatsu distributor for investigation and correction of the cause.




h. LUBRICATE CLAMSHELL BUCKET (except PC200, 200LC-5 MIGHTY)

Apply grease to the grease fitting shown by the arrows. (12 points)

i. CHECK FOR SEDIMENT AND WATER IN THE WATER SEPARATOR

The water separator separates water mixed in the fuel. If float (2) is at or above red line (1), drain the water. For the draining procedure, see section "WHEN REQUIRED".

- ★ Even if a water separator is installed, be sure to check the fuel tank to remove water and sediment in the fuel.

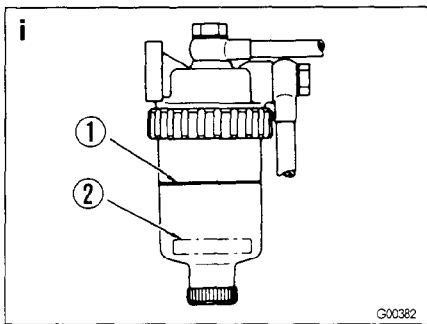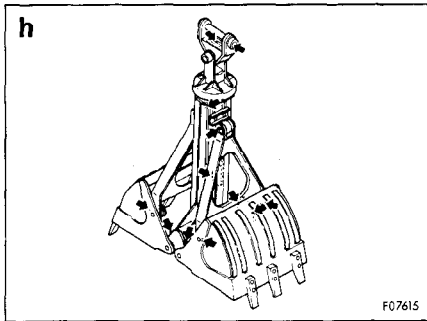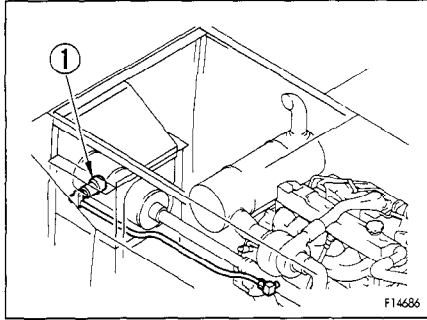

OPERATING YOUR MACHINE

A: BEFORE STARTING THE ENGINE

Before starting the engine, check the positions of all levers.

1. Carry out an initial inspection. (For details of the inspection, see CHECK BEFORE STARTING.)
2. Is lock lever (1) in the LOCK position?
 - (a): Free
 - (b): Lock

B: TO START THE ENGINE

Before starting the engine, check that the surrounding area is safe.

1. Set fuel control dial (1) at the low idling (MIN) position.
 - (a): Low idling
2. Turn the key of starting switch (2) to the START position.
3. When the engine starts, return the key of starting switch (2) to the ON position.

(The key will return automatically when released).

 - ★ If engine will not start, repeat the starting procedure after about 2 minutes.
 - ★ Do not leave the key in START for more than 20 seconds.
 - ★ To start engine in cold weather, refer to COLD WEATHER OPERATION.
 - ★ When using low cetane fuel, starting ability at normal temperatures will be reduced. In such cases, starting will be facilitated by adopting the procedure for low-temperature starting.

Special starting







When starting after running out of fuel, fill with fuel, then fill the fuel filter cartridge with clean fuel and bleed the air from the fuel system before starting.

- ★ For details of bleeding the air, see the section on replacement of the FUEL FILTER.

Starting machine after long period out of use

When starting the machine after a long period out of use, first cancel the automatic-up warming function as follows.

1. Turn the starting switch key to the ON position.
2. Turn the fuel control dial to the low idling (MIN) position, then turn it to the full position (MAX) and hold it there for 3 seconds.
3. Turn the fuel control dial back to the low idling (MIN) position, and turn the starting switch key to the START position to start the engine.

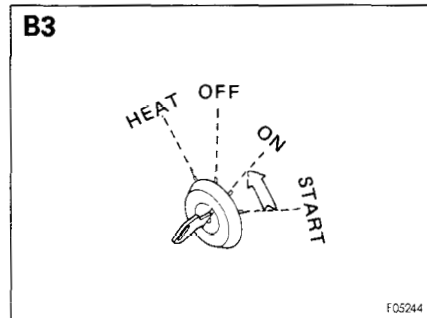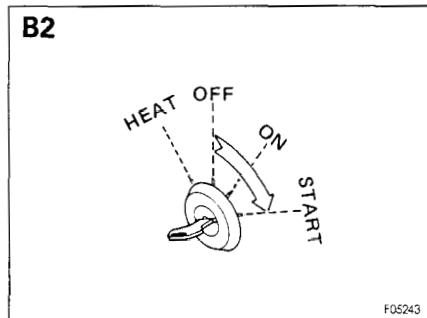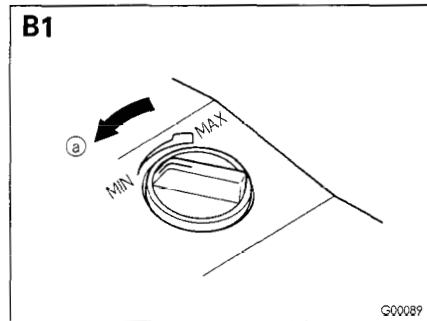
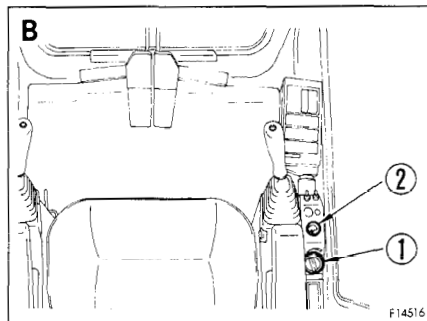
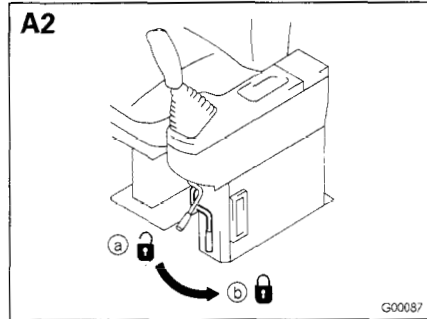
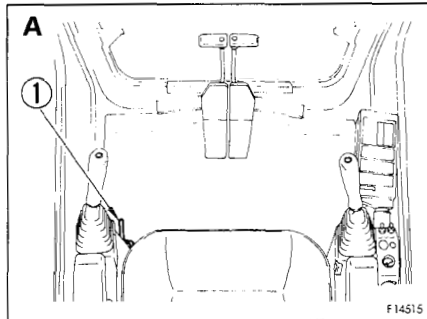


C: CHECKS AFTER STARTING

After starting the engine, do not immediately start operations. First, carry out the following operations and checks.

1. Turn fuel control dial (1) to run the engine at a midrange speed, and run under no load for approx. 5 minutes.
 - (a): Midrange speed
2. Push working mode switch (2) on the monitor panel to select H.O (heavy-duty operation) mode.


(The H.O lamp above the working mode switch lights up)
3. Operate bucket control lever (3) and arm control lever (4) slowly to move the bucket cylinder and arm cylinder to the end of their stroke.
 - (a): In
 - (b): Out
 - (c): Curl
 - (d): Dump
4. Operate the bucket for 30 seconds and the arm for 30 seconds in turn fully for 5 minutes.
 - ★ When pulling in the work equipment, be careful not to hit the chassis or ground.
 - ★ Turn the swing lock switch ON (ACTUATED) and operate the lever to make the oil temperature rise more quickly.
5. After the warming-up operation, check that all gauges and caution lamps are normal.
 - ★ Run under light load until the engine water temperature gauge enters the green range.
6. Check that there is no abnormal exhaust gas color, noise, or vibration.
 - ★ Do not suddenly accelerate the engine before the completion of the warming-up operation.
 - ★ The most suitable temperature for the hydraulic oil is 50 — 80°C, but in order to extend the life of the machine, the temperature must be raised to at least 20°C before starting work.
 - ★ Do not suddenly operate the levers when the hydraulic oil temperature is below 20°C.
 - ★ Do not run the engine at low idling or high idling for more than 20 minutes. If it is necessary to run the engine at idling, apply a load or run at a mid-range speed from time to time.

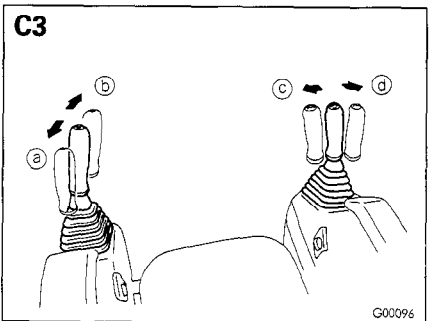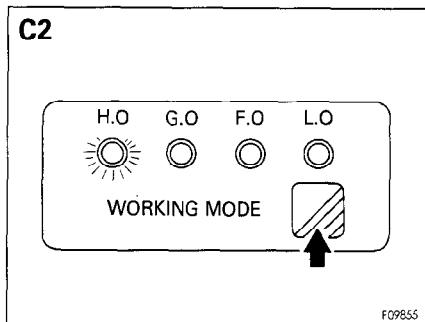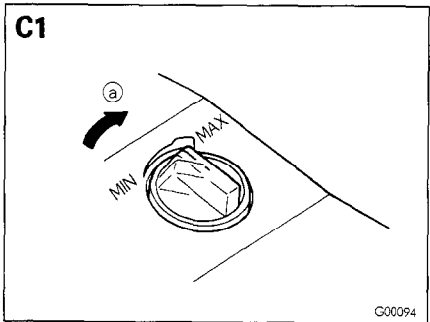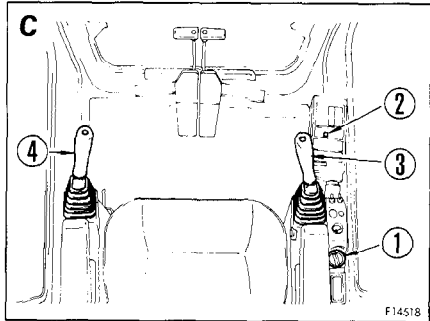


D: TO MOVE THE MACHINE OFF






Before starting the machine, confirm the safety around the machine, and make a signal.

1. Turn swing lock switch (1) ON (ACTUATED) and check that swing lock lamp (2) lights up.
(f): Front of machine
2. Turn fuel control dial (3) and increase the engine speed.
(a): Full speed
3. Set lock lever (4) in the FREE position, fold the work equipment, and raise it 40 — 50 cm from the ground.
(a): Free
(b): Lock
4. Slowly incline left and right traveling and steering levers (5) in the forward (a: forward moving off) or reverse (b: reverse moving off) direction, and move off.

 **Check whether the track frame is facing forward or backward before operating the traveling and steering levers.**

 **Avoid abruptly operating the traveling and steering levers with the fuel control dial fully open, as this will cause the machine to move off suddenly.**

 **For machine with auto-deceleration device, if the lever is operated inside the deceleration range, the engine speed will rise suddenly.**

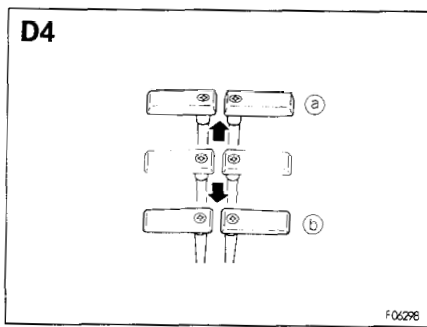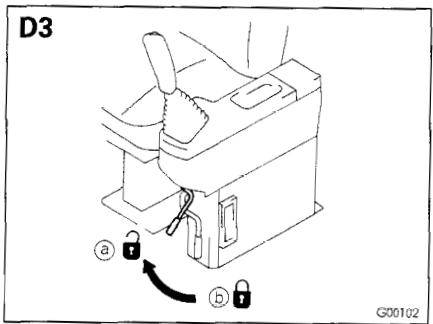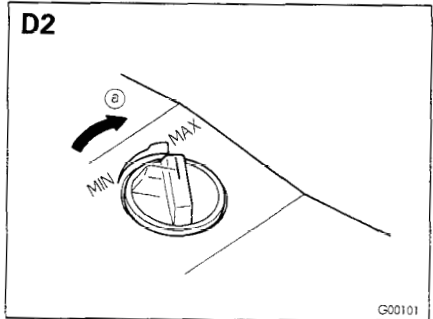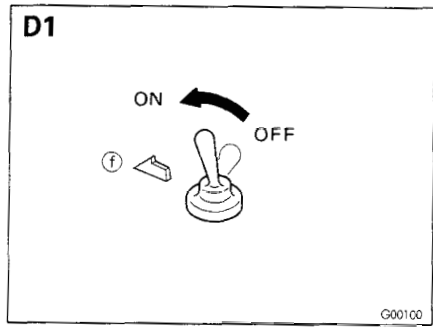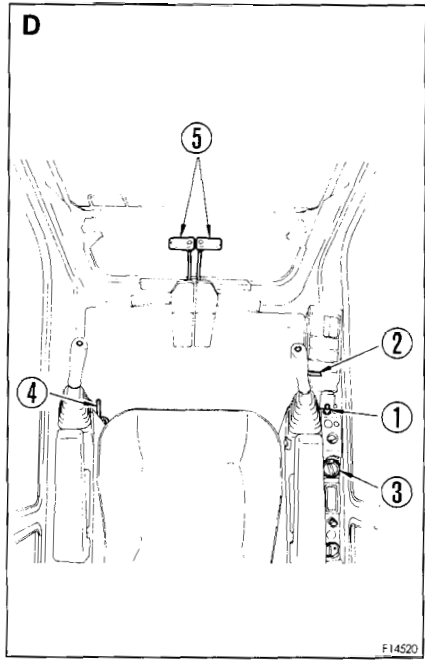

E: STEERING (CHANGING DIRECTION)

Use the travel levers to change direction.

Operate the two travel levers (1) as follows.

- ★ When the sprocket is at the front, the travel levers turn the machine in the opposite direction, so before operating the travel levers, check the position of the sprocket.
- ★ Avoid sudden changes of direction as far as possible. In particular, when carrying out counter-rotation (spin turn), stop the machine first before turning.

1. Changing direction of machine when stopped

(a): Turning left when traveling forward

(b): Turning left when traveling in reverse

When turning to the left:

Push the right travel lever forward to travel left when traveling forward; and pull it back to turn left when traveling in reverse.

- ★ When turning to the right, operate the left travel lever in the same way.

2. Steering when traveling (left and right travel levers both operated in same direction)

(a): Turning left when traveling forward

(b): Turning left when traveling in reverse

When turning to the left:





If the left travel lever is returned to the neutral position, the machine will turn to the left.

- ★ When turning to the right, operate the right travel lever in the same way.

3. When making counter-rotation turn (spin turn)

When turning left using counter-rotation, pull the left travel lever back and push the right travel lever forward.


- ★ When turning to the right using counter-rotation, pull the right travel lever back and push the left travel lever forward.

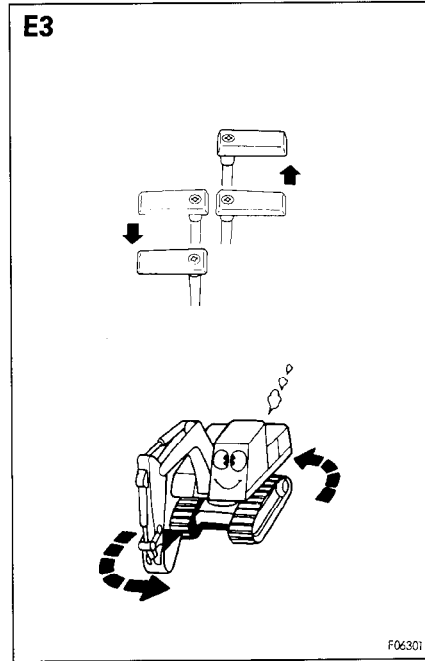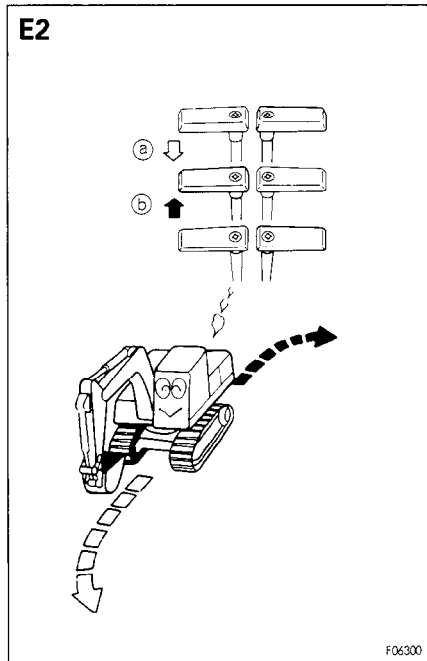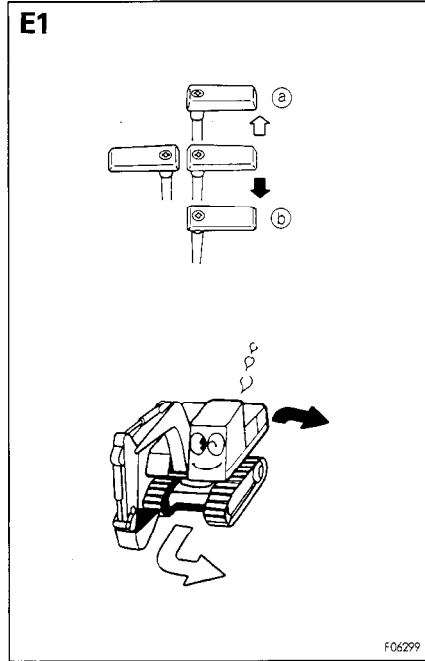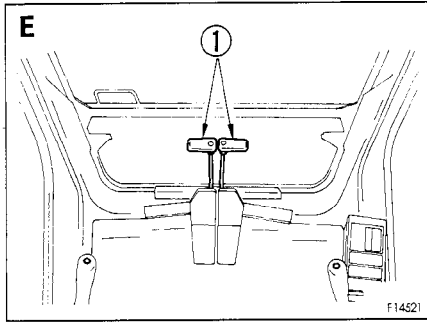

F: SWINGING

When operating the swing, check that the area around the machine is safe.

1. Before operating the swing, turn swing lock switch (1) OFF (CANCELED).
 - ★ Check that swing lock lamp (2) goes out at the same time.
2. Operate the left work equipment control lever to swing the upper structure.
3. When not operating the swing, turn the swing lock switch ON (ACTUATED).

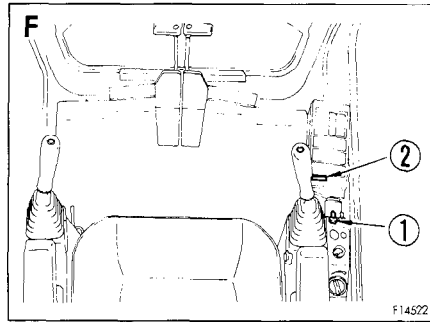

G: OPERATION OF THE WORKING EQUIPMENT

The work equipment is operated by the left and right work equipment control levers. The left work equipment control lever operates the arm and swing, and the right work equipment control lever operates the boom and bucket.

The movements of the lever and work equipment are as shown in the diagrams on the right. When the levers are released, they automatically return to the HOLD position and the work equipment is held in place.

- If the work equipment control lever is returned to HOLD when the machine is stopped, even if the fuel control dial is set to FULL, the auto-deceleration mechanism will act to reduce the engine speed to a mid-range speed.

⚠ If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.



- ★ If the levers are operated within 15 seconds after stopping the engine, it is possible to lower the work equipment to the ground.

In addition, the levers can also be operated to release any remaining pressure inside the hydraulic cylinder circuit and to lower the boom after loading the machine on a trailer.

LEFT WORK EQUIPMENT LEVER

N. Neutral



- 1. Arm out**
- 2. Arm out and swing right**
- 3. Swing right**
- 4. Arm in and swing right**
- 5. Arm in**
- 6. Arm in and swing left**
- 7. Swing left**
- 8. Arm out and swing left**

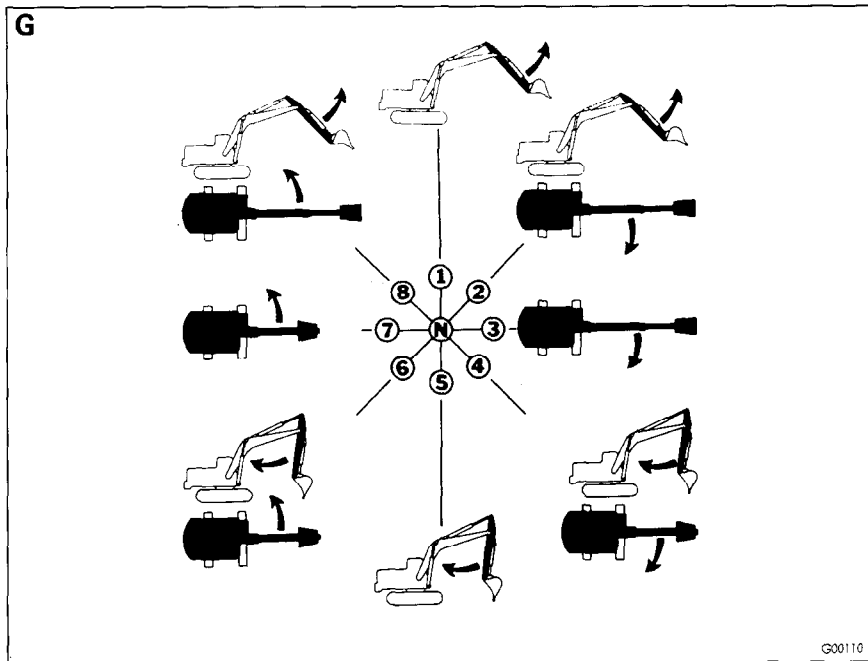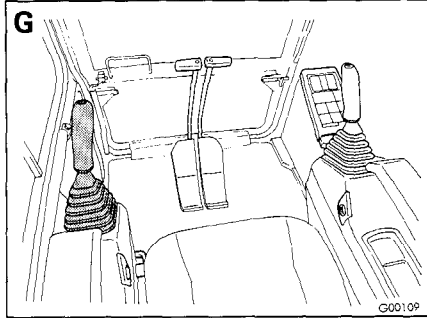

RIGHT WORK EQUIPMENT LEVER

N. Neutral

- 1. Boom lower**
- 2. Boom lower and bucket dump**
- 3. Bucket dump**
- 4. Boom raise and bucket dump**
- 5. Boom raise**
- 6. Boom raise and bucket curl**
- 7. Bucket curl**
- 8. Boom lower and bucket curl**

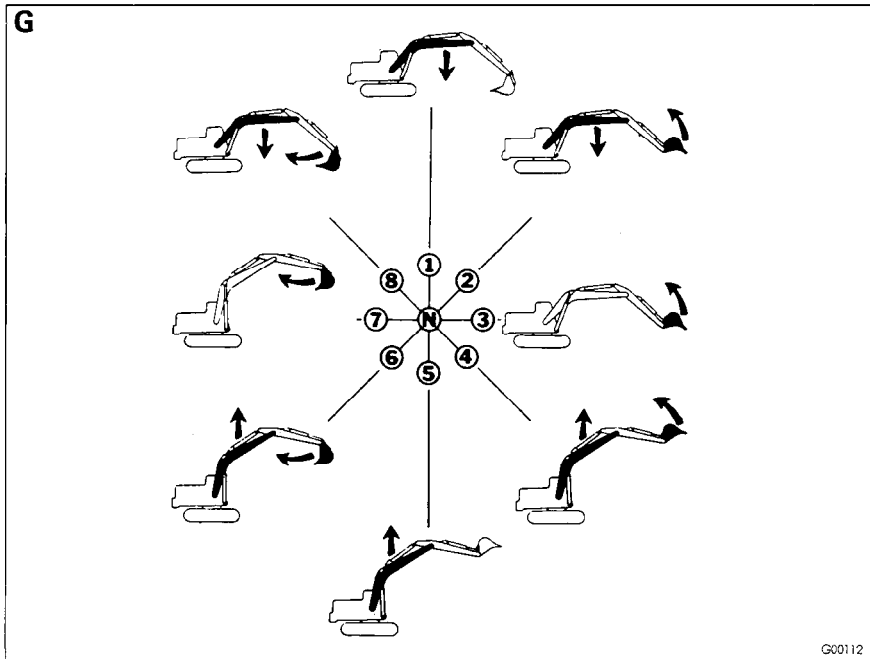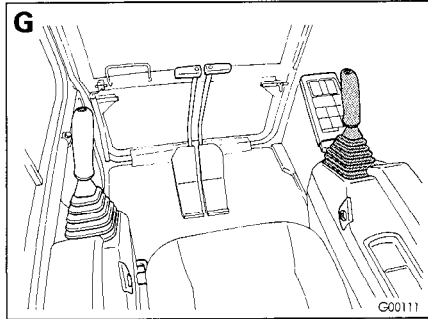

H: TO STOP THE MACHINE

Avoid stopping suddenly. Give yourself ample room when stopping.







1. Put the left and right traveling and steering levers (1) in the neutral position.
(a): Neutral
2. Turn fuel control dial (2) to lower the engine speed.
(a): Low idling
3. Lower the bucket horizontally until its underside touches the ground.
4. Set lock lever (3) in the LOCK position.
(a): Free
(b): Lock

⚠ When stopping the machine, select flat hard ground and avoid dangerous places. If it is unavoidably necessary to park the machine on a slope, insert blocks underneath the track shoes. As an additional safety measure, thrust the bucket into the ground.

I: TO STOP THE ENGINE


Cool the engine gradually before stopping the engine.

1. Run the engine at low idling speed for about 5 minutes to allow it to gradually cool down.
 2. Return the key of starting switch (1) to the OFF position and remove the key.
- ★ If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.
 - ★ In particular, if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.

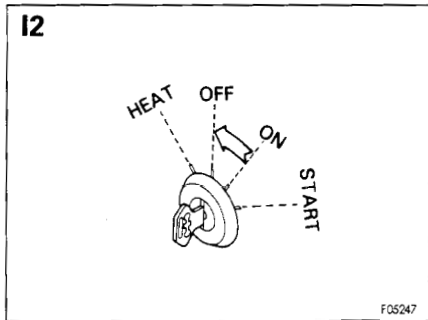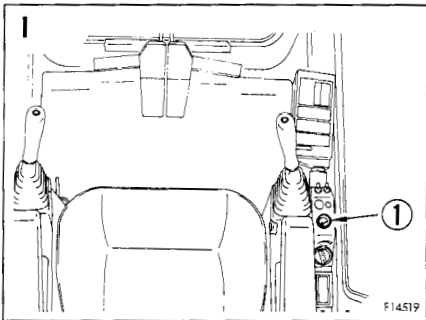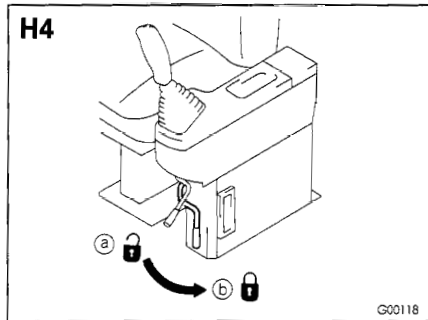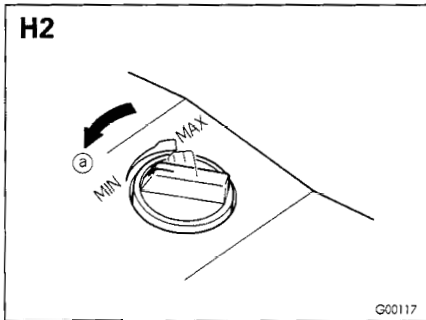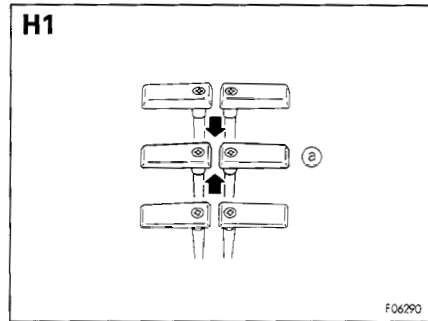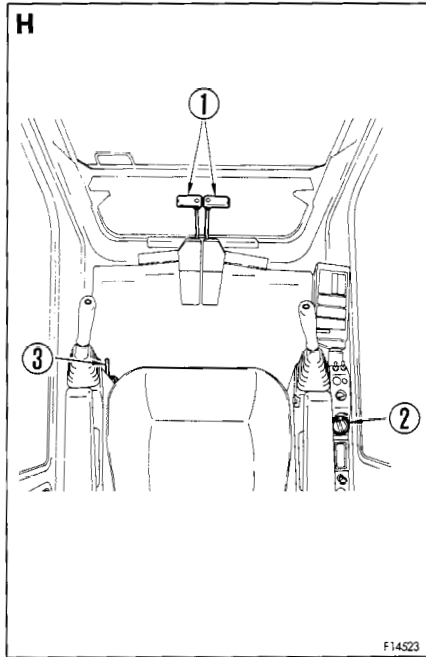

J: PRECAUTIONS FOR OPERATION

1. Be careful not to compact the soil or damage earth mounds as a result of the swinging force.
2. When swinging, do not dig the bucket teeth into the soil.
3. Do not move off and excavate with the bucket leaving dug into the ground.
4. When working with the machine, do not move the cylinder to the end of its stroke but leave a small safety margin.
5. Do not use the dropping force of the bucket as a pickaxe, breaker, or pile driver.
6. Do not use the dropping force of the machine for digging.
7. It is better to excavate hard rocky ground after breaking it up by some other means. This will not only reduce damage to the machine but make for better economy.
8. Note that the following phenomena are not faults:
 - a) When the arm is pulled back, it will sometimes stop when becomes more or less vertical.
 - b) The arm may sometimes stop when the bucket teeth become more or less horizontal.
 - c) At the beginning and end of a swinging, a noise may sometimes be emitted from the brake valve.
 - d) When descending a steep slope at low speed, a noise may sometimes be emitted from the travel motor.

 **If it is necessary to operate the work equipment lever when the machine is traveling, stop the machine before operating the work equipment lever.**

 **For machine with autodeceleration device, if the lever is operated inside the deceleration range, the engine speed will rise suddenly.**







K: PRECAUTIONS WHEN TRAVELING

1. When traveling over obstacles such as boulders or tree stumps, the machine (in particular, the undercarriage) is subjected to a large shock, so reduce the travel speed and travel over the obstacle at the center of the tracks.

Special tracks (except PC200, 200LC-5 MIGHTY)

Wide triple shoes (700, 800, 900 mm) and swamp shoes (860 mm) are used as special shoes for soft ground. Therefore, do not use them when traveling over rocky ground, sandy gravel, rough ground with cobbles, and even on soft ground where there are boulders or tree roots.

* When selecting track, see "SELECTION OF TRACK SHOES."

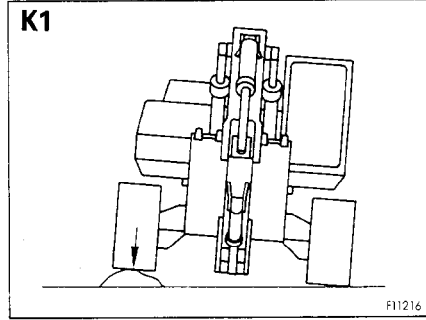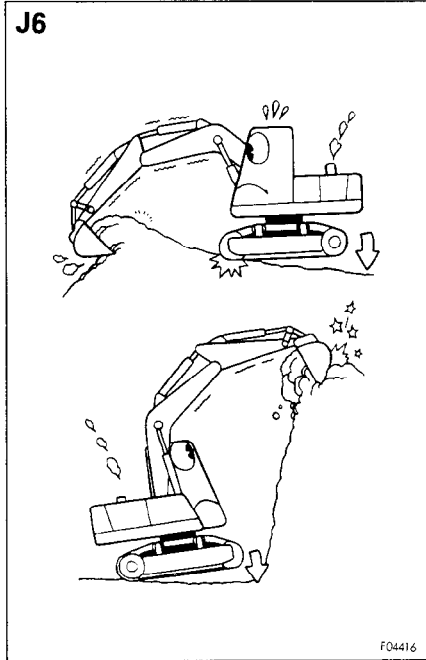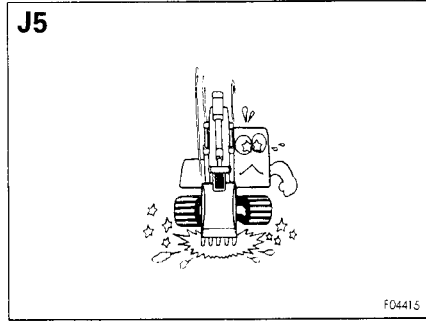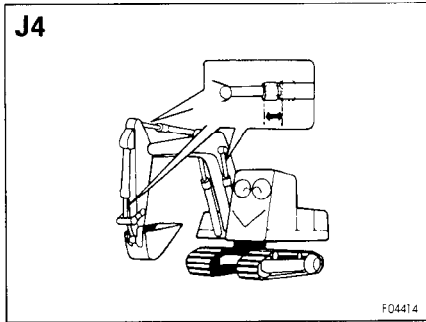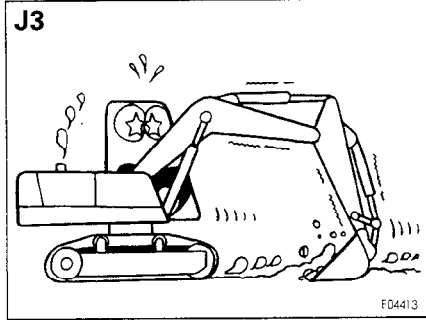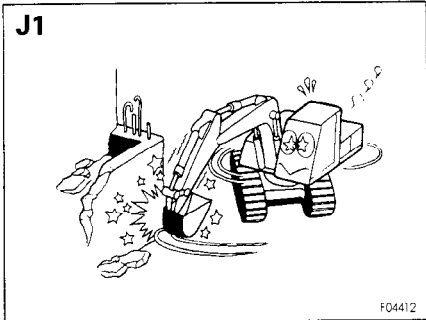

L: PERMISSIBLE WATER







1. Do not immerse the machine in water by more than the permissible depth (under center of carrier roller (1)). In addition, properly grease parts which have been immersed in water for a long time, until the old grease comes out from the bearings (vicinity of bucket pins).
2. When driving the machine out of water, if the angle of the machine exceeds 15°, the rear of the upper structure will go under water, and water will be thrown up by the radiator fan. This may cause the fan to break.
Be extremely careful when driving the machine out of water.






M: PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS

1. When traveling on a steep downhill grade

When traveling down a hill, adjust the speed with the traveling and steering lever and fuel control dial.

If the grade exceeds 15°, set the machine in the posture shown in the diagram, and reduce the engine speed.

- a.  Do not travel on slopes of over 30° as there is danger that the machine may overturn.
- b.  When traveling, raise the bucket approx. 20 - 30 cm from the ground.
- c.  When traveling over ridges or other obstacles, keep the work equipment close to the ground and travel slowly.
- d.  It is dangerous to turn on slopes or to travel across slopes. Always go down to a flat place to perform these operations. It may be longer, but it will ensure safety.
- e.  If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
- f.  Turning or operating the work equipment when working on slopes may cause the machine to lose its balance and turn over, so avoid such operations. It is particularly dangerous to swing downhill when the bucket is loaded.
If such operations have to be carried out, pile soil to make platform (A) on the slope so that the machine can be kept horizontal when operating.

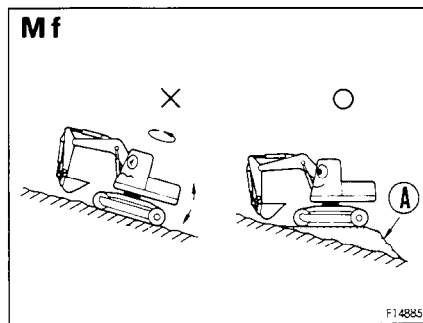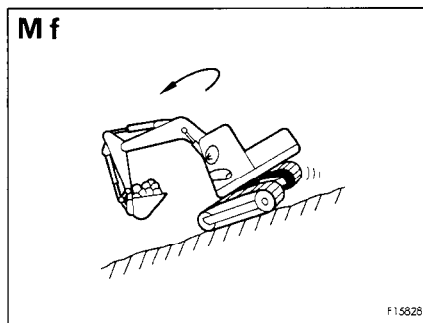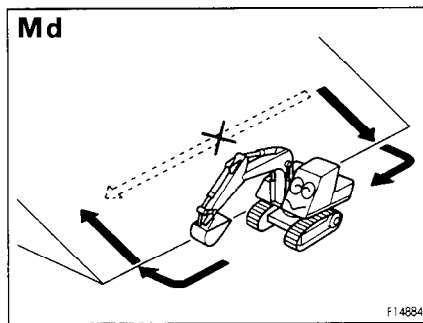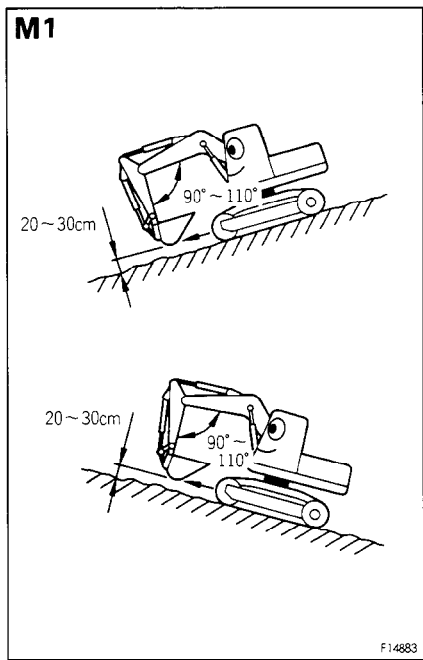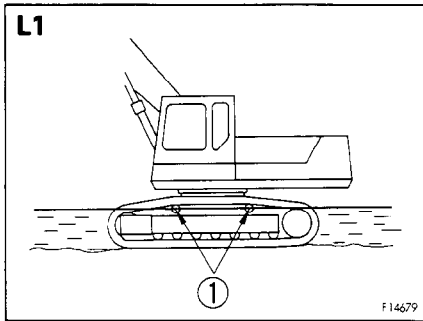

2. Braking when traveling downhill

To brake the machine during downhill runs, put the traveling and steering lever in the neutral position. This will cause the brake to be automatically applied.

3. If shoes slip

When climbing a hill, if the shoes slip or the travel motor relieves, preventing the machine from climbing by means of the tracks alone, it is possible to use the force of the arm as an aid.

4. If engine stops

When the engine stops on a slope, move the traveling and steering levers to neutral position and lower the bucket. Thereafter, turn starting key to START.

N: MATTERS FOR ATTENTION AT SPECIAL WORK SITES

- a) If operation is executed in water, if the work equipment fixing pins come in contact with water, greasing is to be performed after every underwater operation.
- b) Greasing of the work equipment fixing pins is to be performed every time before heavy digging or deep digging.
- ★ After greasing is done, the boom, arm and bucket are to be operated several times. This should be followed by re-greasing.

O: PROTECTION OF CONTROLLER

Always keep covers (1) of the display panel closed unless necessary. If rain or dust gets in, it may cause a failure in the controller.

P: HOW TO ESCAPE FROM MUD

- Always operate carefully to avoid getting stuck in mud. If the machine does get stuck in mud, use the following procedures to get the machine out.

1. When one side is stuck.

When only one side is stuck in mud, use the bucket to raise the track, then lay boards or logs and drive the machine out. If necessary, put a board under the bucket also.

- ★ When using the boom or arm to raise the machine, always have the bottom of the bucket in contact with the ground. (Never push with the teeth.) The angle between the boom and arm should be 90° to 110°.

The same applies when using the inverting bucket.





2. When both sides are stuck.

When the tracks on both sides are stuck in mud and the machine will not move, lay boards as explained in the diagram, and dig the bucket into the ground in front. Then pull in the arm as in normal digging operations and put the travel levers in the FORWARD position to pull the machine out.

Q: METHOD OF TOWING MACHINE

If the machine sinks in mud and cannot get out under its own power, or if the drawbar pull of the excavator is being used to tow a heavy object, use a wire rope (a) as shown in the diagram on the right.




- ★ Do not use the hole for the towing hook.

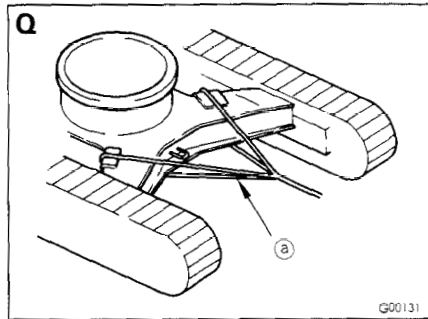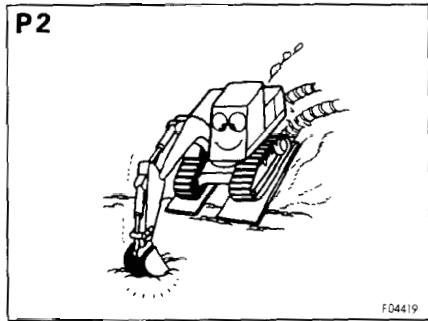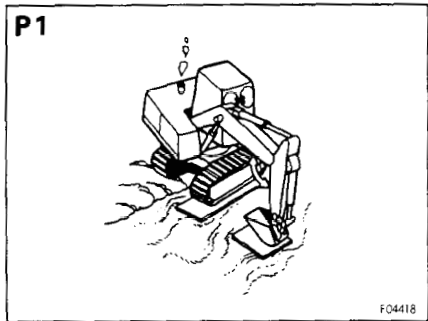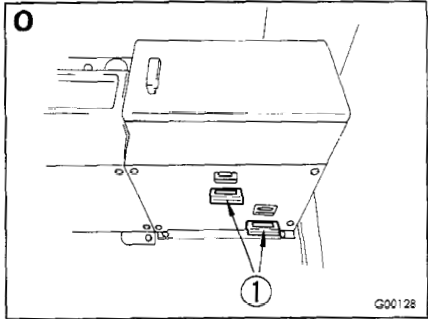

INVERSION AND REPLACEMENT OF BUCKET

Stop the machine on a firm, flat surface. When performing joint work, make clear signals to each other and work carefully for safety's sake.

1. Select a flat surface and stabilize the bucket.
 - (a): Bucket cylinder
 - (b): Link
 - (c): Arm
2. After removing the stop bolt and nut for each pin, extract pins A and B.
 - ★ After removing the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.
3. Reverse the bucket.
 - ★ After reversing the bucket, correct the direction and inclination of mounting pin holes (1) and (2) then firmly stabilize the bucket so that it does not shake about.
4. Couple the arm to hole (1), then connect the link to hole (2).
5. After mounting the stop bolt and nut for each pin, apply grease to each pin.
 - ★ When replacing bucket, adjust bucket clearance. (Refer to ADJUSTMENT)

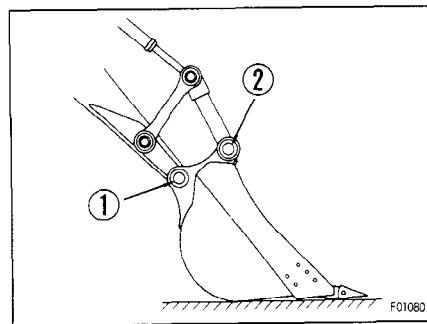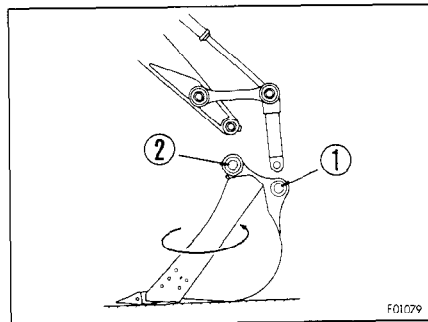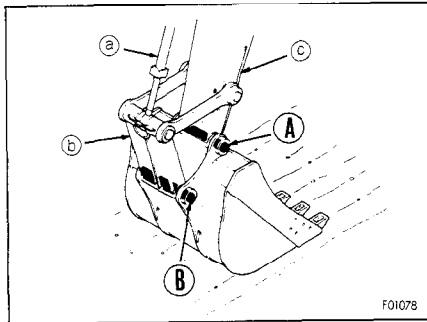

HANDLING THE TRAPEZOIDAL BUCKET (EXCEPT PC200, 200LC-5 MIGHTY)

This bucket is used in sloped ditch digging work in the farm.

The three different ditch inclination can be obtained by changing the angle of the attached plate.

The angles available are 45°, 40° and 38°.

★ Install the bucket using the holes for 45°, 40° and 38° ditch.

a. How to perform excavation

Operate the boom, the arm and the bucket to make the line (A) of the side-plate of the bucket vertical.

The guide plate (B) to check this position is installed beside the bucket pins. Accordingly, hold this plate horizontal when digging.

b. Attached plate

(a): 45°, 40°, 38° ditch common hole

(b): 45° ditch hole

(c): 40° ditch hole

(d): 38° ditch hole

(e): 38°, 40° ditch common hole







c. Shape of ditch

1. Shape of ditch 45° bucket.

2. Shape of ditch 40° bucket.

3. Shape of ditch 38° bucket.

★ Hold the plate horizontal for every ditch angle.

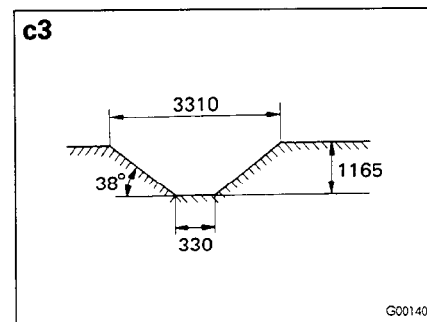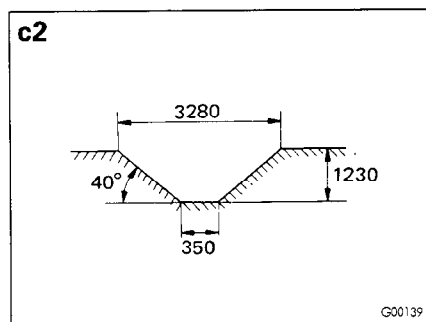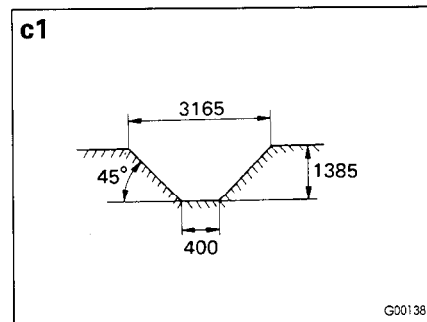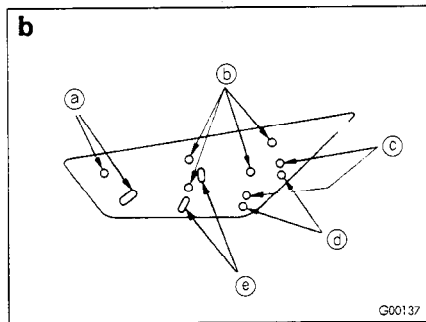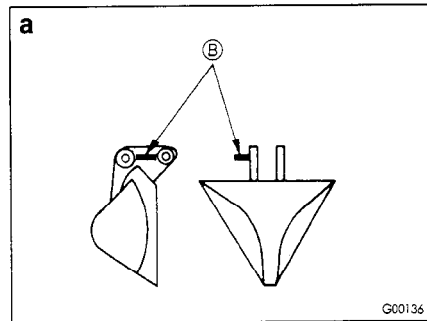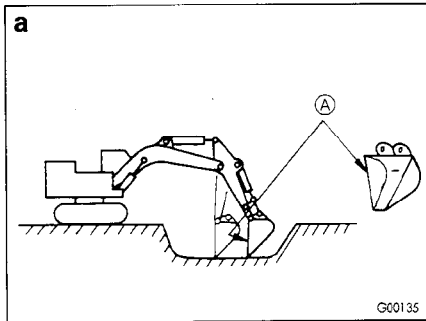

USING THE EXTENSION ARM (EXCEPT PC200, 200LC-5 MIGHTY)

When the extension arm is installed, be careful when retracting the arm because the bucket hits the foot of the boom cylinder or the lower frame of the swing circle.

(a): Prohibited zone to be operated

- Use the narrow bucket (width: 750 mm) without the side-cutter when installing the extension arm. When you use the standard width bucket, the machine stability is lost. Also the bucket will hit the cab when the arm is retracted.
- Work in hard soil or rocky terrain will shorten the life of the extension arm, the boom and the arm.
It is better not to use the extension arm in such conditions.

HANDLING THE CLAMSHELL BUCKET (EXCEPT PC200, 200LC-5 MIGHTY)

This bucket is used for digging and loading in side-ditches or the confined spaces.

How to perform excavation


Carry out digging work by lowering the boom keeping the clamshell opened.

Close the bucket while raising the boom gradually.

When you begin to dig and find the bucket rotating, do as follows.

Extend the bucket cylinder fully and hold, the bucket will soon stop rotating.

- ★ Make the teeth of the bucket vertical in digging.
- ★ For safety, always avoid abrupt traveling, swing and stopping.
- ★ Do not swing the bucket to crush the rock or to cut through soil.
- ★ Do not use the bucket for hammering or pulling out piles etc.
- ★ Before leaving the machine, open the bucket and lower it to the ground.
- ★ Remove the bucket from the arm when transporting the machine.

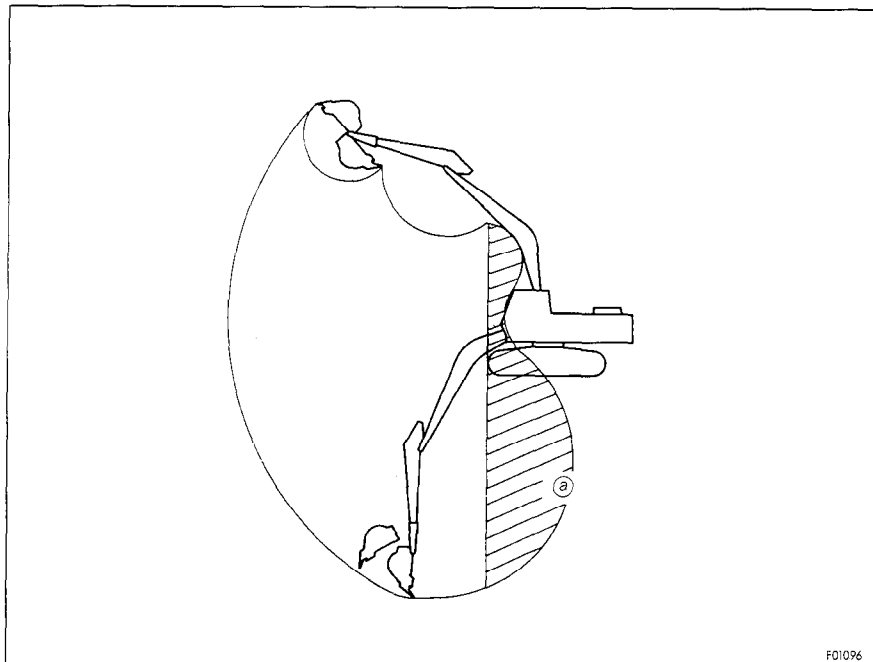

F01096

SELECTION OF TRACK SHOES (EXCEPT PC200, 200LC-5 MIGHTY)

Choose suitable track shoes to match the ground conditions.

METHOD OF SELECTING SHOES

Confirm the category from the list of uses in Table 1, then use Table 2 to select the shoe.

- ★ Categories B and C are wide shoes, so there are limitations on their use. When using these shoes, check the precautions, then investigate and study fully the conditions of use to confirm that these shoes are suitable.
- ★ When selecting the shoe width, select the narrowest shoe possible that will give the required flotation and ground pressure. If a wider shoe than necessary is used, the load on the track will increase, and this will cause the shoes to bend, links to crack, pins to break, shoe bolts to come loose, and various other problems.

Table 1

Category	Use	Precautions when using
A	Rocky ground, riverbeds, normal soil	<ul style="list-style-type: none"> ● On rough ground with large obstacles such as boulders or fallen trees, travel at low speed.
B	Normal soil, soft ground	<ul style="list-style-type: none"> ● These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees. ● Travel at Hi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.
C	Extremely soft ground (swampy ground)	<ul style="list-style-type: none"> ● Use the shoes only in places where the machine sinks and it is impossible to use A or B shoes. ● These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees. ● Travel at Hi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.
D	Paved road surfaces	<ul style="list-style-type: none"> ● The shoes are flat, and the gradeability is low, so use care on slopes.
E	Paved road surfaces	<ul style="list-style-type: none"> ● To protect the rubber shoes, always follow the instructions given in HANDLING RUBBER PAD SHOE.

Table 2

PC200-5		PC200LC-5	
Specifications	Category	Specifications	Category
600 triple grouser	A	700 triple grouser	B
700 triple grouser	B	600 triple grouser	A
800 triple grouser	C	800 triple grouser	C
900 triple grouser	C	900 triple grouser	C
860 swamp shoe	C	860 swamp shoe	C
610 flat shoe	D	—	—
600 rubber pad shoe	E	—	—

PC220-5		PC220LC-5	
Specifications	Category	Specifications	Category
600 triple grouser	A	700 triple grouser	B
700 triple grouser	B	600 triple grouser	A
800 triple grouser	C	800 triple grouser	C
610 flat shoe	D	—	—
600 rubber pad shoe	E	—	—

HANDLING RUBBER PAD SHOE (EXCEPT PC200, 200LC-5 MIGHTY)

When using rubber shoes, always obey the following precautions for handling.

a. Working environment



- Use the rubber pad shoes mainly for work on paved road surfaces.
If they are used on surfaces which are not paved, the rubber will be cut or damaged, so its durability will drop markedly.
In particular, avoid the following operations.
- Operations on broken pieces on concrete or gravel.
- Operations on sharp protruding objects such as reinforcing iron or glass (and in particular when traveling over steel sheets driven into the ground).
- Operations traveling over the shoulder of concrete roads, and operations on rockbed or stony river beds.
- Be careful not to let the machine slip when operating on road surfaces covered with water, ice, snow, or gravel.
Be particularly careful when unloading the machine.
- Because of the physical properties of rubber, use the rubber pad shoe in a temperature range of -25°C to 65°C .

b. Operating conditions

- Operations such as those shown in the diagram where the machine is braced when working, side ditching operations, or operations on slopes, or operations where the machine is frequently steered from side to side, there will be an excessive load on the rubber pad shoe and this will cause damage.
- If special work equipment is installed, the durability of the rubber pad shoe cannot be guaranteed.

c. Storage, maintenance

- Be careful not to get oil or grease on the rubber. If there is any oil or grease on the rubber, wipe it off immediately.
- Install rubber pad shoe (1) continuously to all links.
If it is not installed, it will cause excessive deformation or damage to the rubber.
- When storing rubber pad shoe (1) for a long time, keep it indoors out of direct sunlight or rain.

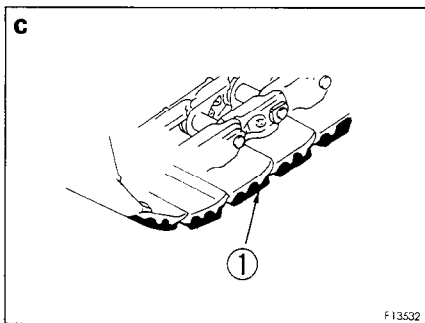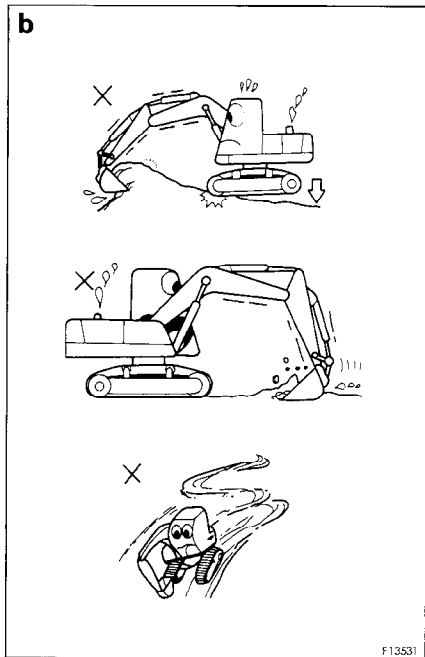

d. Condition of damage to rubber



- When traveling on concrete road surfaces, the rubber is transferred to the road surface, and leaves a black track.

(a): Tracks are left

- When the shoes contact each other, dents may be formed, but the shoes can still be used.

(b): Dents formed

- Even if there are cuts or pieces of the rubber missing, and the shoes look in extremely bad condition, this damage does not extend immediately to the whole shoe, and it does not damage the road surface, so the shoe can be used.

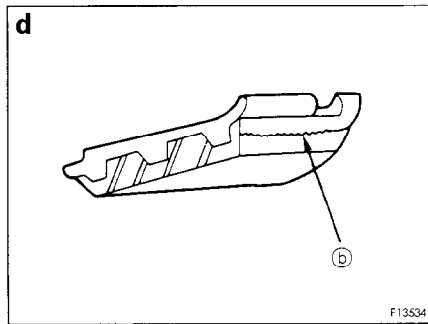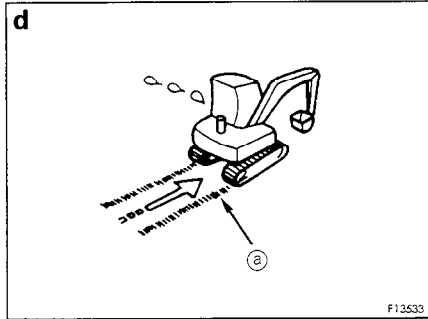

SELECTION OF BUCKET TEETH

Select suitable bucket teeth to match the operating conditions.

METHOD OF SELECTING TEETH

The standard teeth can be used over a wide range, but according to the operating conditions, we recommend the following teeth.

Long-Life teeth

- Jobsites where wear life is demanded, such as when loading hard rocks.
- Jobsites where no penetration is needed, such as when working with crushed rock after blasting or ripping.
- Jobsites where heavy-duty operations are carried out, such as hitting or pulling up rocks with the tips of the teeth.

Self-sharpening teeth

- Jobsites demanding penetration such as digging and loading sandy or clayey soil.


MEMO



INSTALLATION OF OPTIONAL ELECTRICAL EQUIPMENT

A: Power source when installing optional electrical equipment.

1. When installing extra electrical equipment, always take the power from connector No. M39 provided inside the panel (incl. standard lamp within 15A).
2. Never take the power from the following terminals.
It will cause the fuse to blow or will have adverse effect on the mecha-
tronics equipment.
 - Fuse No. 9
 - Starting switch terminal B, BR and ACC
 - Battery relay terminal BR
3. Use a connector (No. M26) to connect to the power source pick-up ex-
cept adding the extra lamp.

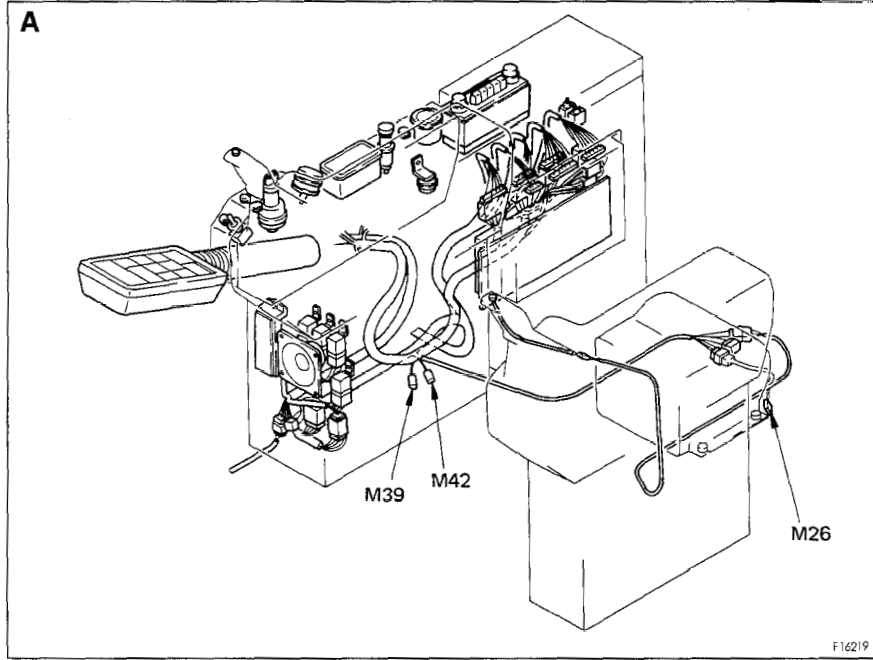

B: Connections when adding extra lamps

When adding lamps, use the connection method shown in the diagram.

- ★ When the present lamp relay is turned ON, the standard lamps light up.
At the same time, power flows to the additional relay, so the additional relay is switched on and the extra lamps light up.

(a): Fuse box

(b): Monitor panel

(c): Lamp switch

(d): Two direct relays cannot be used


(e): Lamp relay

(f): Additional relay

(g): Standard lamps

(h): Additional lamps

----- Dashed line: Additional wiring harness

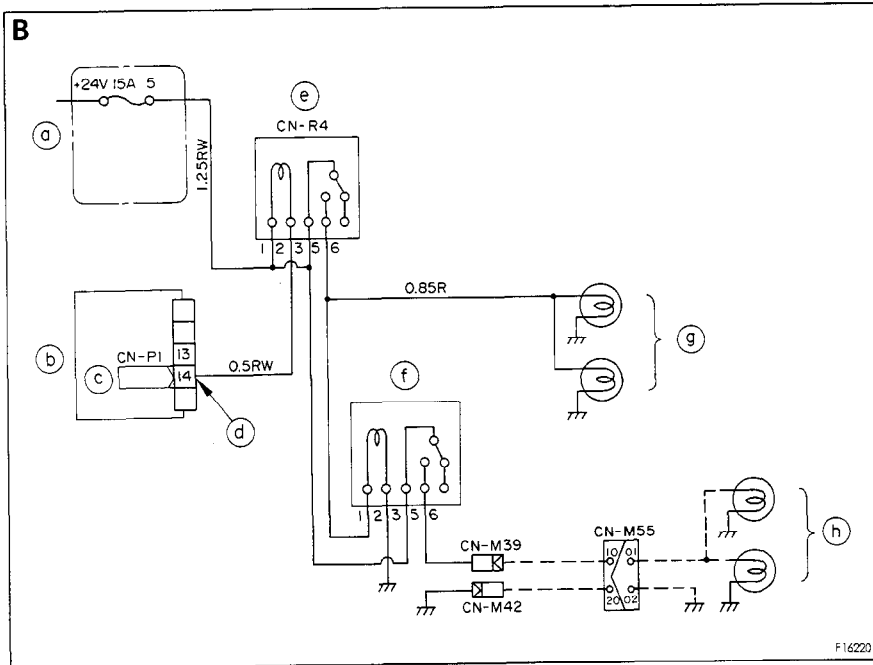

COLD WEATHER OPERATION

PREPARATION FOR LOW TEMPERATURE

If the temperature becomes low, it becomes difficult to start the engine, and the coolant may freeze, so do as follows.

FUEL AND LUBRICANTS

Change to fuel and oil with low viscosity for all components.

For details of the specified viscosity, see the TABLE OF FUEL, COOLANT AND LUBRICANTS.

COOLANT

After cleaning inside of the cooling system, add antifreeze to the coolant to prevent the coolant from freezing when the machine is not being used.

★ For details of the antifreeze mixture when changing the coolant, see WHEN REQUIRED.


Care in using Antifreeze

Use a Permanent Antifreeze (ethylene glycol mixed with corrosion inhibitor, antifoam agent, etc.) meeting the standard requirements as shown below. With permanent antifreeze, no change of coolant is required for a year. If it is doubtful that an available antifreeze meets the standard requirements, ask the supplier of that antifreeze for information.

Standard requirements for permanent antifreeze

- SAE J1034
- FEDERAL STANDARD O-A-548D

- ★ Never use methanol, ethanol or propanol based antifreeze.
- ★ Where no permanent antifreeze is available, an ethylene glycol antifreeze without corrosion inhibitor may be used only for the cold season. In this case, clean the cooling system twice a year (in spring and autumn). When refilling the cooling system, add antifreeze in autumn, but do not add any in spring.
- ★ Absolutely avoid using any water leak preventing agent irrespective of whether it is used independently or mixed with an antifreeze.
- ★ Do not mix one antifreeze with a different brand.

 **Antifreeze is flammable, so keep it away from any flame.**

BATTERY


As ambient temperature drops, battery capacity will drop, and electrolyte may sometimes freeze if battery charge is low. Maintain battery at a charge level of approx. 100% and insulate it against cold temperature so that machine can be readily started the next morning.

★ Measure specific gravity of fluid and obtain rate of charge from the following conversion table:

Rate of charge	Temp. of fluid			
	20°C	0°C	-10°C	-20°C
100%	1.28	1.29	1.30	1.31
90%	1.26	1.27	1.28	1.29
80%	1.24	1.25	1.26	1.27
75%	1.23	1.24	1.25	1.26

★ When electrolyte level is low, add distilled water in the morning before work instead of after the day's work. This is to prevent fluid from freezing at night.

 **To avoid gas explosions, do not bring fire or sparks near the battery.**

 **If the electrolyte gets on your skin or clothes, immediately wash with plenty of clean water.**

A: STARTING IN COLD WEATHER






For the pre- and post-starting inspection, refer to the section OPERATING YOUR MACHINE.







1. Set fuel control dial (1) at the low idling (MIN) position.
 - (a): Low idling
 2. Turn the key of starting switch (2) to HEAT, and confirm that engine preheating monitor lamp (3) comes on. After about 30 seconds, preheating monitor lamp (3) will flash for about 10 seconds to indicate that preheating is finished.
- ★ The preheating times are as shown below.

Ambient temperature	Preheat time
Above 0°C	—
0°C to -10°C	20 seconds
-10°C to -20°C	30 seconds

3. After preheating monitor lamp (3) starts to flash, turn the key of starting switch (2) to START and start the engine.
 4. When the engine starts, return the key of starting switch (2) to the ON position.
(The key will return automatically when released.)
- ★ If the engine does not start up under the above procedure, repeat steps 2 and 3 after waiting for about 2 minutes.

 **Never use starting aid fluids as they may cause explosions.**

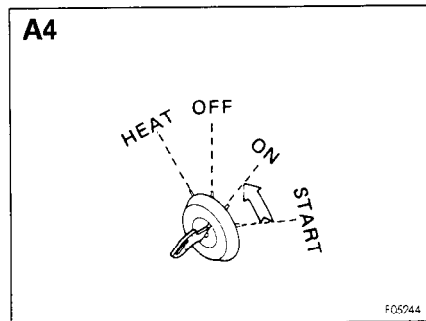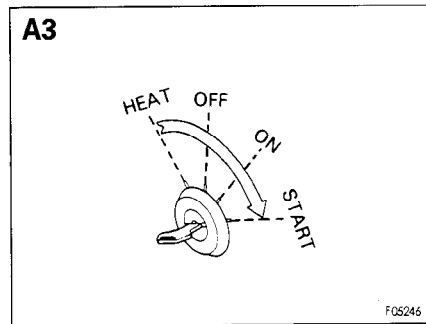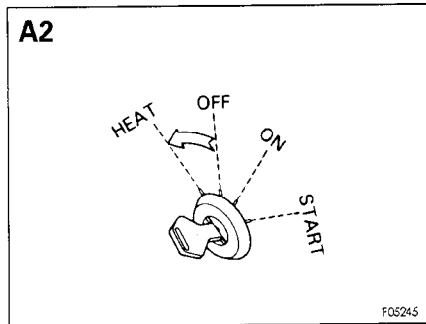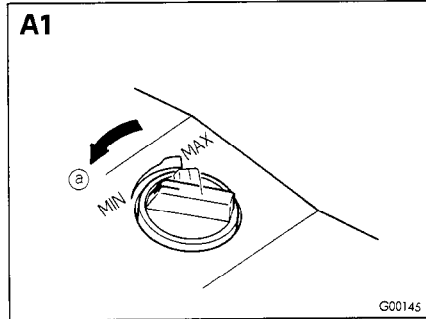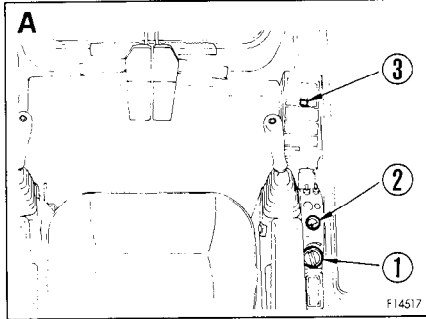

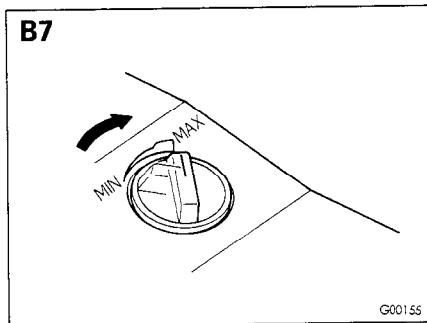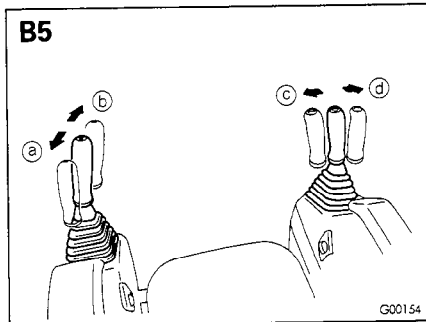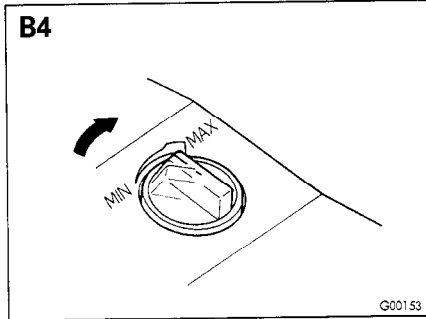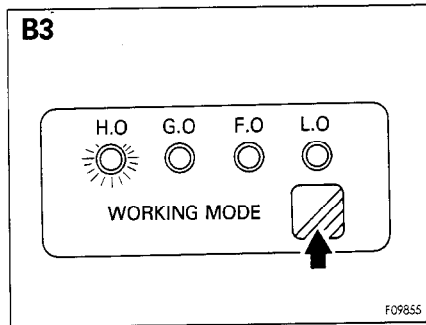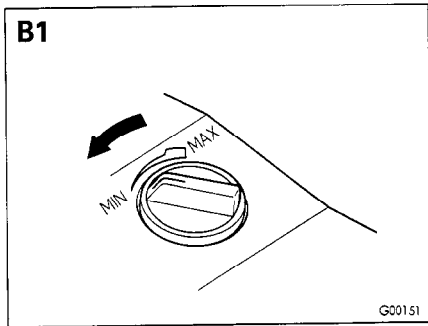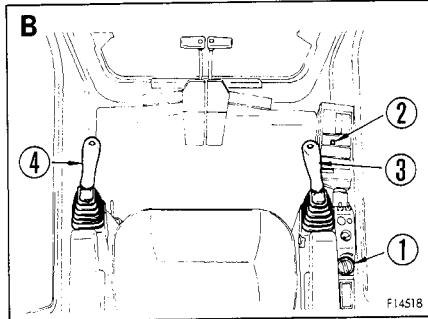

★ Canceling automatic warming-up operation

If it becomes necessary in an emergency to lower the engine speed to low idling, cancel the automatic warming-up operation as follows.

1. Set the power mode to S mode or H mode.
2. Turn the fuel control dial to the full speed (MAX) position and hold it for 3 seconds.
3. When the fuel control dial is returned to the low idling (MIN) position, the engine speed will drop.

CAUTIONS AFTER COMPLETION OF WORK

To prevent mud, water, or the undercarriage from freezing and making it impossible for the machine to move on the following morning, always observe the following precautions.

- Mud and water on the machine body should be completely removed.
This is to prevent damage to the seal caused by mud or dirt getting inside the seal with frozen drops of water.
- Park the machine on concrete or hard ground. If this is impossible, park the machine on wooden boards.
- Drain water collected in fuel system so that such water may be frozen at night.
- As battery capacity drops at low ambient temperature, cover the battery or remove it from the machine to be kept warm at night.

AFTER COLD WEATHER

When weather becomes warm, perform the following without fail:


- Replace lubricating oils for various units with the ones specified for warm-weather use.
- If for any reason permanent antifreeze cannot be used, and an ethyl glycol base antifreeze (winter, one season type) is used instead, or if no antifreeze is used, drain the cooling system completely, then clean out the inside of the cooling system thoroughly, and fill with fresh water.

PREPARING THE CAB HEATER


If the ambient temperature drops, use the cab heater.

When using the cab heater, turn valve (1) on the water manifold counterclockwise to open it.

- ★ When leaving the cab heater unused for a long time, turn valve (1) clockwise to close it.

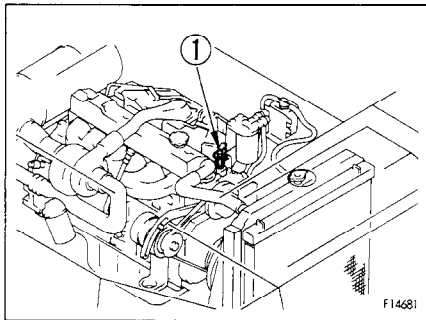

MEMO

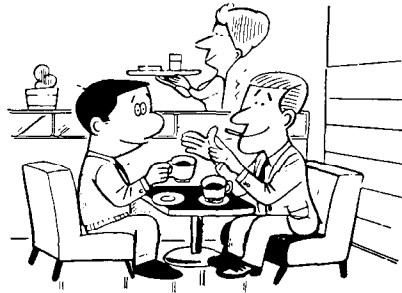

PERIODIC MAINTENANCE

Proper lubrication and maintenance assure trouble-free operation and long machine life. Time and money spent for scheduled periodic maintenance will be amply compensated by prolonged machine operation and reduced operating cost.

All hourly figures given in the following descriptions are based on service meter readings. In practice, however, it is recommended to rearrange all of them into units of days, weeks and months to make the maintenance schedule more convenient. Under rough job site or operating conditions, it is necessary to somewhat shorten the maintenance intervals stated in this manual.

BLEEDING AIR FROM CIRCUIT


After replacing or cleaning the hydraulic oil, filter element, or strainer, or after repairing or replacing the hydraulic equipment, or after removing the hydraulic piping, bleed the air from the circuit.

PROCEDURE FOR BLEEDING AIR

Air bleeding item	Air bleeding procedure					
	1	2	3	4	5	6
Nature of work	Bleed air from pump	Start engine	Bleed air from cylinder	Bleed air from swing motor	Bleed air from travel motor	Start operations
· Change hydraulic oil · Clean strainer	○ →	○ →	○ →	○ →	○ →	○
· Replace return filter element		○ →	○ →	○ →	○ →	○
· Replace, repair pump · Remove suction piping	○ →	○ →	○ →	○ →	○ →	○
· Replace, repair control valve		○ →	○ →	○ →	○ →	○
· Replace cylinder · Remove cylinder piping		○ →	○ →	○ →	○ →	○
· Replace swing motor · Remove swing motor piping		○ →	○ →	○ →	○ →	○
· Replace travel motor, swivel · Remove travel motor, swivel piping		○ →	○ →	○ →	○ →	○

a. Bleeding air from pump

- Loosen air bleed plug (1), and check that oil oozes out from the air bleed plug.
- If oil does not ooze out from the plug, remove the drain hose from the pump case, and add oil through drain port (2) to fill the pump case with hydraulic oil.
 - ★ Oil will come out from the drain hose when it is removed, so secure the mouth of the hose at a place higher than the oil level inside the hydraulic tank.
- After completion of the air bleed operation, tighten air bleed plug (1), then install the drain hose.
 - ★ If the drain hose is installed first, oil will spurt out from the hole of plug (1).
 - ★ If the pump is operated without filling the pump case with hydraulic oil, abnormal heat will be generated and this may lead to premature damage of the pump.

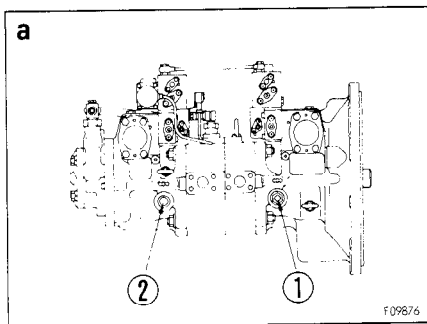

b. Start engine

Start the engine (see OPERATING YOUR MACHINE) and run at low idling for 10 minutes, before going on to the next operation.

c. Bleeding air from cylinders

1. Run the engine at low idling, and extend and retract each cylinder 4 — 5 times without operating it to the end of its stroke. (Stop approx. 100 mm before the end of the stroke)
 2. Next, operate each cylinder to the end of its stroke 3 — 4 times.
 3. After this, operate each cylinder 4 — 5 times to the end of its stroke to completely bleed the air.
- ★ If, at first, the engine is run at high speed or the cylinder is operated to the end of its stroke, the air inside the cylinder may cause damage to the piston packing or other parts.

d. Bleeding air from swing motor

1. Run the engine at low idling, loosen air bleed plug (1), and check that oil oozes out from air bleed plug (1).
- ★ When doing this, do not operate the swing.
2. If oil does not ooze out, stop the engine, remove air bleed plug (1), fill the motor case with hydraulic oil.
 3. After completion of the air bleed operation, tighten air bleed plug (1).
 4. Run the engine at low idling, and swing 2 or more times slowly and uniformly to the left and right.
- ★ If the air is not bled from the swing motor, the bearings of the motor may be damaged.




e. Bleeding air from travel motor

1. Run the engine at low idling, loosen air bleed plug (1), and if oil flows out, tighten the air bleed plug again.
2. Keep the engine running at low idling, and swing the work equipment 90° to bring it to the side of the track.
3. Jack up the machine until the track is raised slightly from the ground. Rotate the track under no load for 2 minutes. Repeat this procedure on both the left and right sides, and rotate the track equally both forward and in reverse.

f. Start operations

After completion of bleeding the air, stop the engine, and wait for at least 5 minutes before starting operations. In this way, the air bubbles are removed from the oil inside the hydraulic tank.

- ★ Check for any leakage of oil, and wipe off any oil that has been spilled.

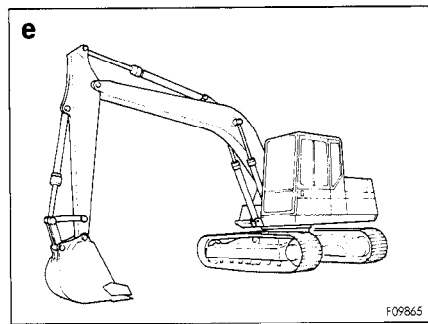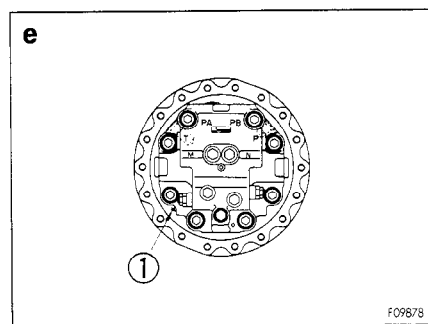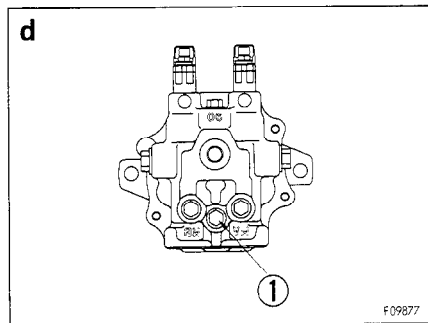

PERIODICAL REPLACEMENT OF SAFETY PARTS

To ensure safety at all times when operating or driving the machine, the user of the machine must always carry out periodic maintenance. In addition, to further improve safety, the user should also carry out periodic replacement of the parts given in the table on the next page. These parts are particularly closely connected to safety and fire prevention.

With these parts, the material changes as time passed, or they easily wear or deteriorate. However, it is difficult to judge the condition of the parts simply by periodic maintenance, so they should always be replaced after a fixed time has passed, regardless of their condition. This is necessary to ensure that they always maintain their function completely.

However, if these parts show any abnormality before the replacement interval has passed, they should be repaired or replaced immediately.

If the hose clamps show any deterioration, such as deformation or cracking, replace the clamps at the same as the hoses.

Carry out the following inspection for hydraulic hoses in addition to the periodic replacement parts listed on the next page. If any abnormality is found, tighten, replace, or take any other necessary action.

Category of inspection	Inspection item
Check before starting	Leakage from joints or caulked portion of fuel or hydraulic hoses
Periodic inspection (monthly inspection)	Leakage from joints or caulked portion of fuel or hydraulic hoses Damage (cracks, wear and tear) of fuel or hydraulic hoses
Periodic inspection (yearly inspection)	Leakage from joints or caulked portion of fuel or hydraulic hoses Interference, deterioration, twisting, damage (cracks, wear and tear, crushed parts) of fuel or hydraulic hoses



Fuel system parts

No.	Safety parts for periodical replacement	Q'ty	Replacement interval
1	Fuel hose (fuel tank ~ engine)	2	
2	Fuel hose (fuel filter ~ injection pump)	2	
3	Spill hose (nozzle ~ injection pump)	1	Every 2 years or 4000 hours, whichever comes sooner
4	Spill hose (between nozzles)	5	
5	Fuel tube cap	1	

Hydraulic system parts

No.	Safety parts for periodical replacement	Q'ty	Replacement interval
6	Pump outlet hose (pump ~ control valve)	2	Every 2 years or 4000 hours, whichever comes sooner
7	Front and rear pump branch hoses	2	

- ★ When replacing the hoses, always replace the O-rings, gaskets, and other such parts at the same time.
- ★ Ask your Komatsu distributor to replace the safety parts.

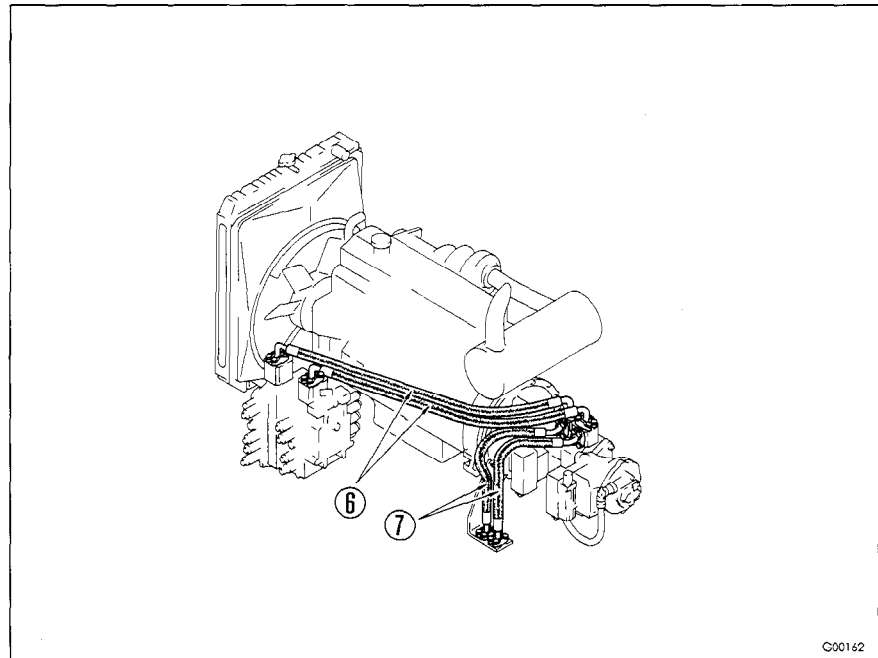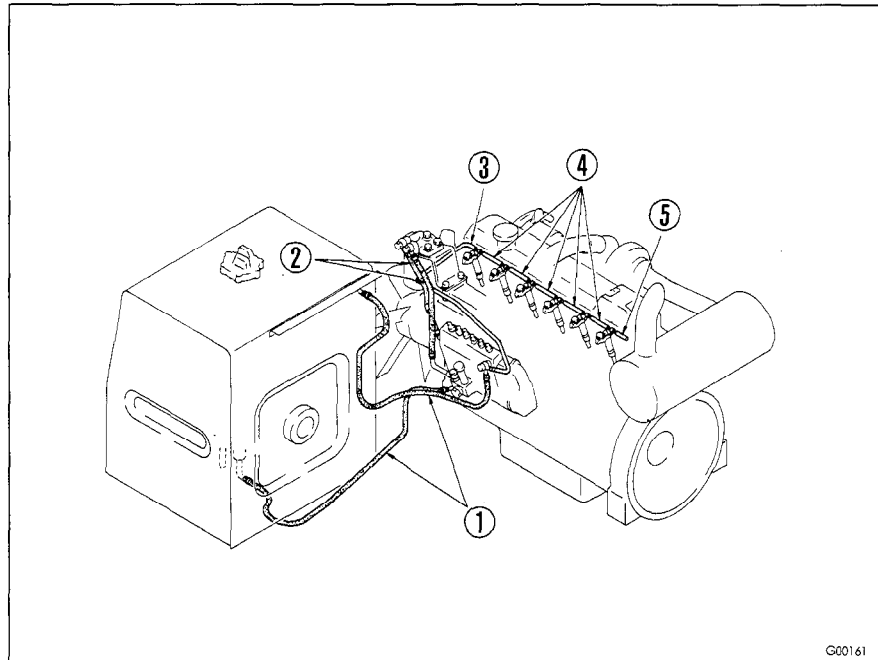

MAINTENANCE TABLE

No.	ITEM	SERVICE	PAGE
CHECK BEFORE STARTING			
a	Walk-around check		50
b	Coolant	Check and supply	50
c	Engine oil pan	Check and supply	50
d	Fuel	Check and supply	52
e	Hydraulic tank	Check and supply	52
f	Dust indicator	Check	54
g	Electric wirings	Check	54
h	Clamshell bucket (except PC200, 200LC-5 MIGHTY)	Lubricate 12 points	54
i	Water separator	Inspect float position	54
EVERY 100 HOURS SERVICE			
a	Swing machinery case	Check and supply	122
b	Fuel tank	Drain water and sediment	122
c	Lubricating		124
-1	Boom cylinder foot pin	Lubricate 2 points	124
-2	Boom foot pin	Lubricate 2 points	124
-3	Boom cylinder rod end	Lubricate 2 points	124
-4	Arm cylinder foot pin	Lubricate 1 point	124
-5	Boom-Arm coupling pin	Lubricate 1 point	124
-6	Arm cylinder rod end	Lubricate 1 point	124
-7	Bucket cylinder foot pin	Lubricate 1 point	126
-8	Arm-Link coupling pin	Lubricate 1 point	126
-9	Arm-Bucket coupling pin	Lubricate 1 point	126
-10	Link coupling pin	Lubricate 2 points	126
-11	Bucket cylinder rod end	Lubricate 1 point	126

No.	ITEM	SERVICE	PAGE
-12	Bucket-Link coupling pin	Lubricate 1 point	126

EVERY 250 HOURS SERVICE

(The items marked * are carried out after the first 250 hours only for new machines.)

*	Fuel filter	Replace cartridge	128
*	Engine valve clearance	Check and adjust	128
a	Final drive case	Check and supply	128
b	Engine oil pan and filter	Change oil and replace cartridge	128
c	Drive belt	Check tension	130
d	Hydraulic filter	Replace element	130
e	Swing circle	Lubricate 3 points	132
f	Battery electrolyte	Check fluid level	132

EVERY 500 HOURS SERVICE

a	Swing circle pinion	Lubricate with grease	134
b	Radiator fins and oil cooler fins	Clean	134
c	Fuel filter	Replace cartridge	136

EVERY 1000 HOURS SERVICE

a	Swing machinery case	Change oil	138
b	Damper case	Check and supply	138
c	Turbocharger clamping joint	Check and retighten	138
d	Turbocharger rotor	Check play	140
e	Corrosion resistor	Replace cartridge	140



No.	ITEM	SERVICE	PAGE
EVERY 2000 HOURS SERVICE			
a	Hydraulic tank	Change oil	142
b	Hydraulic tank strainer	Clean	144
c	Final drive case	Change oil	144
d	Turbocharger	Clean blower impeller	146
e	Alternator and starting motor	Check	146
f	Vibration damper	Check	146
g	Engine valve clearance	Check and adjust	146
EVERY 4000 HOURS SERVICE			
a	Water pump	Check	147
WHEN REQUIRED			
a	Cooling system	Clean	148
b	Air cleaner element	Check, clean or replace when required	152
c	Track	Check and adjust tension	156
d	Electrical intake air heater	Check once a year	158
e	Track shoe bolts	Check and retighten	158
f	Bucket teeth (Horizontal pin type)	Replace	158
g	Bucket teeth (Vertical pin type) (except PC200, 200LC-5 MIGHTY)	Replace	160
h	Line filter	Clean	162
i	Water separator	Drain water	162

MEMO



OIL FILLER AND LEVEL GAUGE POSITIONS

1. Swing machinery case oil filler
2. Hydraulic tank oil filler
3. Hydraulic tank sight gauge
4. Final drive case oil filler
5. Final drive case drain plug
6. Hydraulic tank drain plug
7. Engine oil pan oil filler
8. Engine oil pan level gauge
9. Cooling water inlet
10. Fuel tank oil filler
11. Fuel tank sight gauge
12. Fuel tank drain valve
13. Swing machinery case drain plug
14. Cooling water drain valve
15. Engine oil pan drain plug

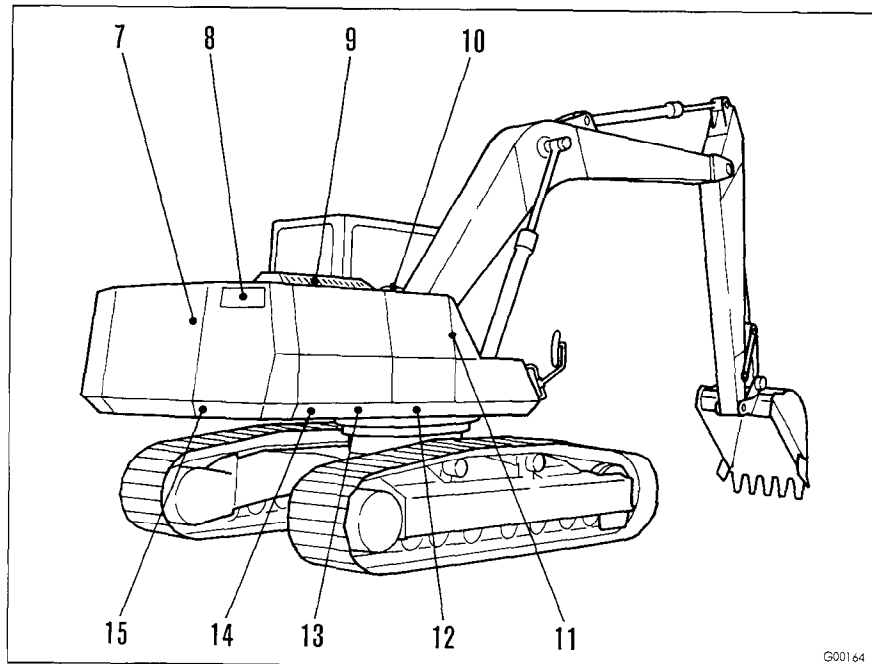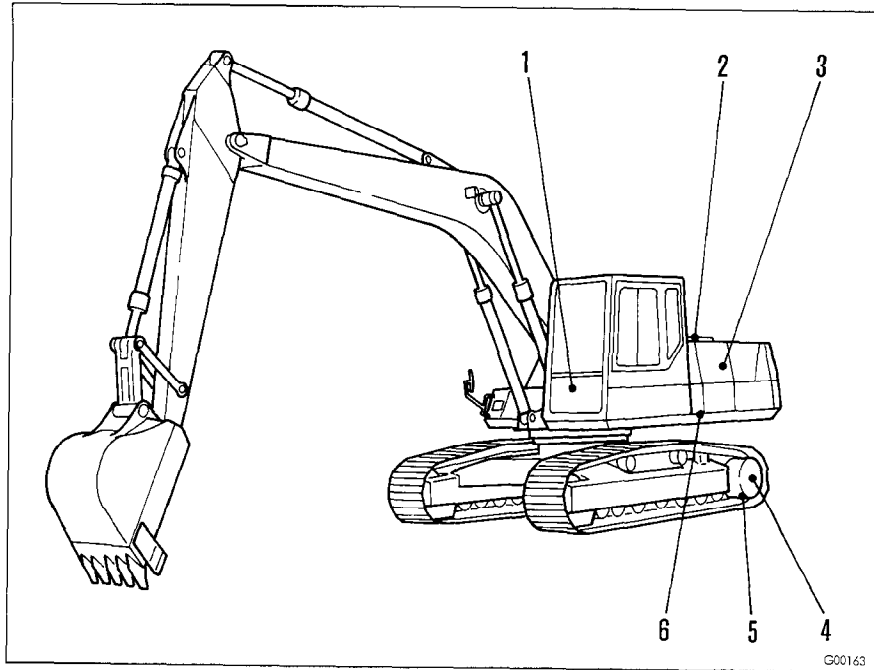

CHECK BEFORE STARTING

See the section on **CHECK BEFORE STARTING** aforementioned.

EVERY 100 HOURS SERVICE



a. SWING MACHINERY CASE

Inspect the oil level using dipstick (G), and if insufficient pour in additional engine oil through the dipstick guide hole.

- ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
- ★ Insert dipstick (G) fully into the guide when checking the oil level.

b. FUEL TANK






Loosen valve (1) on the bottom of the tank so that the sediment and mixed water will be drained in accompaniment with fuel.

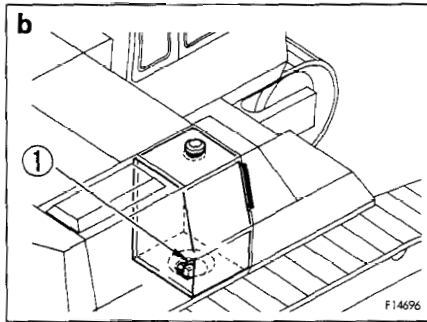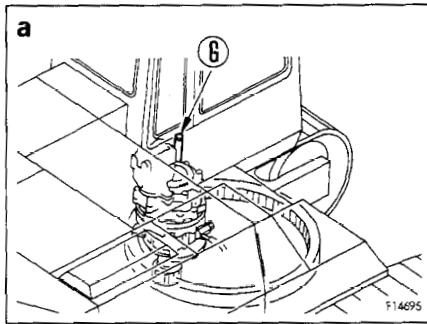




c. LUBRICATING

Apply grease to the grease fittings shown by arrows.

- | | |
|----------------------------|------------|
| 1. Boom cylinder foot pin | (2 points) |
| 2. Boom foot pin | (2 points) |
| 3. Boom cylinder rod end | (2 points) |
| 4. Arm cylinder foot pin | (1 point) |
| 5. Boom — Arm coupling pin | (1 point) |
| 6. Arm cylinder rod end | (1 point) |

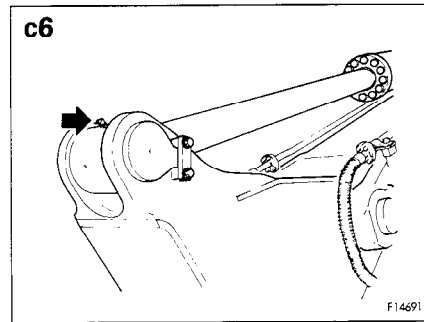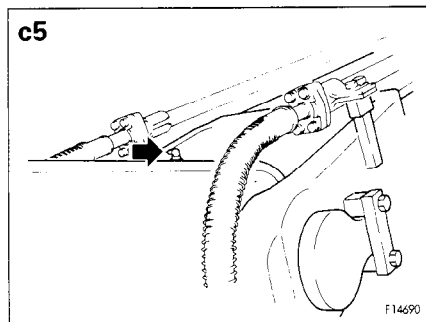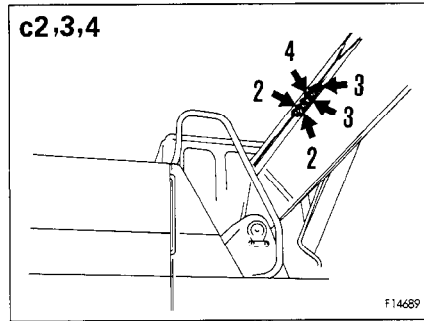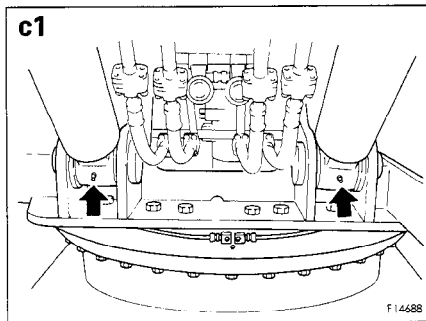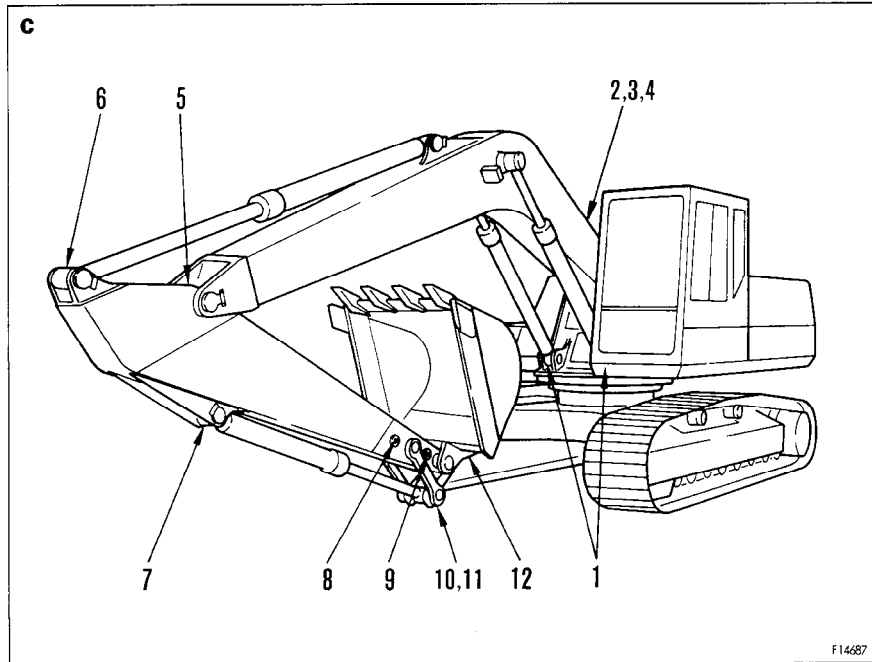

- | | |
|--------------------------------|------------|
| 7. Bucket cylinder foot pin | (1 point) |
| 8. Arm — Link coupling pin | (1 point) |
| 9. Arm — Bucket coupling pin | (1 point) |
| 10. Link coupling pin | (2 points) |
| 11. Bucket cylinder rod end | (1 point) |
| 12. Bucket — Link coupling pin | (1 point) |

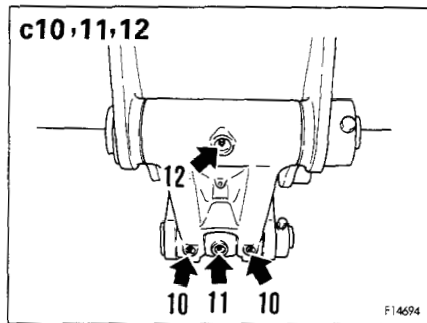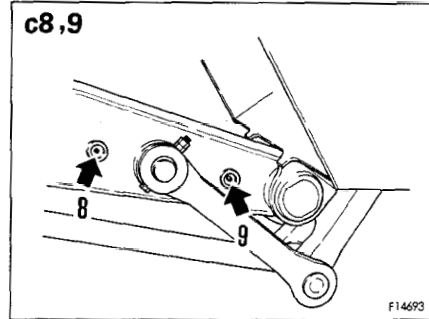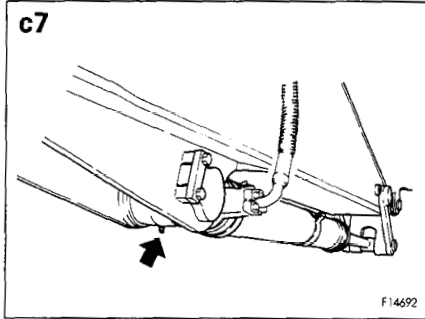

EVERY 250 HOURS SERVICE

Carry out the following maintenance only after the first 250 hours.

- **FUEL FILTER, REPLACE CARTRIDGE**
- **ENGINE VALVE CLEARANCE, CHECK AND ADJUST**



For details of the method of replacing or maintaining, see the section on EVERY 500 HOURS AND 2000 HOURS SERVICE.

a. FINAL DRIVE CASE

1. Set the UP mark at the top, with the UP mark and plug (P) perpendicular to the ground surface.
 2. Remove plug (F), and check that oil level is within 10 mm below the bottom of the plug hole. If it is not within this range, add engine oil through the plug hole.
- ★ If the inspection shows that the oil level is low, turn the sprocket one turn, then check the oil level again.
 - ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".

b. ENGINE OIL PAN AND FILTER

1. Remove drain plug (P) under the chassis, drain the oil, then tighten it again.
 2. Using a filter wrench, remove cartridge (1) of the engine oil filter by turning it counterclockwise.
 3. Clean the filter holder, coat the seal surface of a new filter cartridge with engine oil (or coat it thinly with grease), then install.
- ★ When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten a further 1/2 turn.
 - 4. After replacing the cartridge, pour in the specified quantity of engine oil through oil filler (F).
 - 5. Run the engine at idling for a short time, then stop the engine and check that the oil level is correct. For details, see CHECK BEFORE STARTING.
- ★ Refill capacity: 18.5 ℓ
 - ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
 - ★ Be sure to fit a genuine Komatsu cartridge.
 - ★ Replace once every 6 months, regardless of the number of hours operated.
 - ★ When supplying oil, be careful not to get oil on the alternator.
 - ★ If filter cartridge (1) is removed immediately after stopping the engine, oil will spill. Wait at least 10 minutes after stopping the engine before replacing the filter cartridge.
 - ★ Use API category CD class oil. If CC class oil must be used, change the oil and replace the oil filter at half the usual interval.

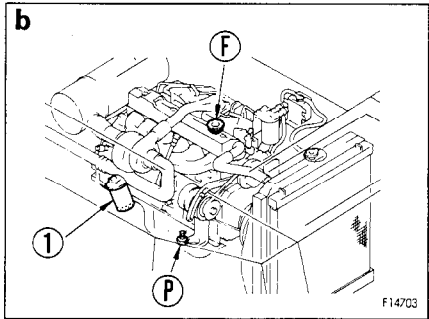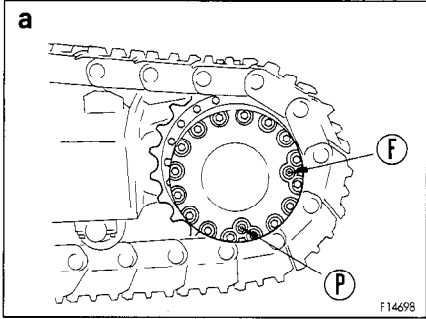


c. DRIVE BELT

1. The belt tension should normally deflect by about 10 mm when pressed with the finger (approx. 6 kg) at a point midway between alternator pulley (1) and water pump pulley (2) (or fan pulley (2) for PC200, 200LC-5 MIGHTY).
 2. To adjust the belt tension, loosen bolt (3) and nut (4) and shift alternator (5) slightly.
 3. After adjustment, tighten bolt (3) and nut (4) securely.
- ★ When adjusting the V-belt, do not attempt to push alternator (3) directly with a bar or the like, but use a wood pad to prevent damage to the core.
 - ★ Check each pulley for damage, and V-grooves and V-belt for wear. Particularly, check whether V-belt is in contact with bottom of V-groove through wear.
 - ★ Replace belt if it has stretched, leaving no allowance for adjustment, or if there is a cut or crack on belt.

d. HYDRAULIC FILTER

1. Remove the cap from oil filler (F).
2. Remove cover (1), then remove spring (2) and valve (3), and take out element (4).
3. Clean the parts after taking them out, then install a new element.

 **When removing the cap, turn it slowly to relieve inner pressure.**

 **When removing the cover (1), undo the bolts (4 bolts) gradually to prevent the cover flying off under the force of the spring (2).**






- ★ When a hydraulic breaker is installed, the hydraulic oil deteriorates much more rapidly than when carrying out ordinary digging operations with a bucket. Therefore, change the element for the first time on new machines after 100 — 150 hours, and change the element following this according to the table.

(a): Replacement interval (Hours)

(b): Breaker operation rate (%)

(c): (When not using breaker)

(d): (Using only breaker)

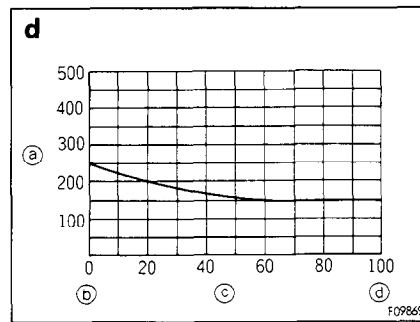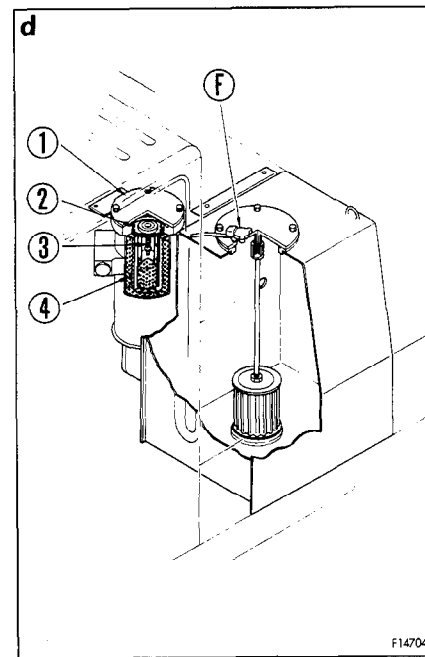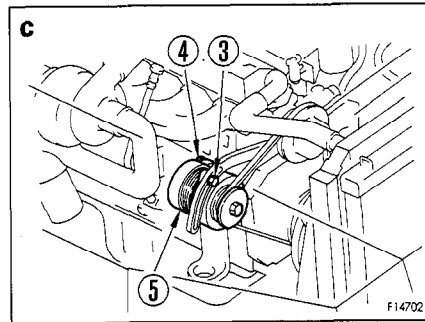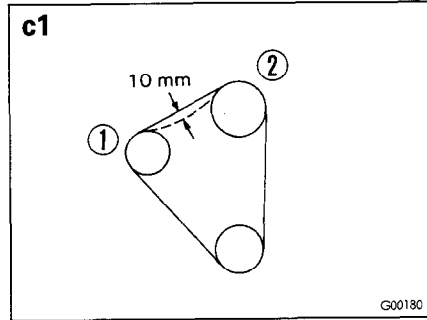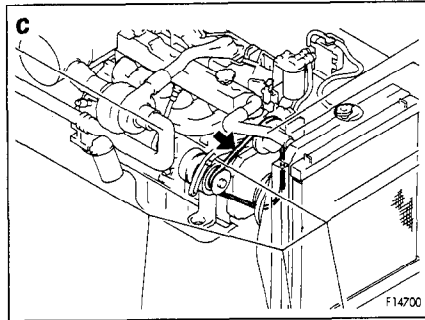

e. SWING CIRCLE


Lubricate to the 3 grease fittings shown by arrows.


f. BATTERY ELECTROLYTE



Remove cap (1) and check the electrolyte level.

If the electrolyte level is lower than the prescribed level (10 to 12 mm above the plate), supply distilled water.

- ★ Should any of the acid be spilt, have it replenished by the nearest battery shop with acid of the correct specific gravity.
- ★ When inspecting electrolyte level, clean the air hole of the battery cap (1).

 **If the electrolyte gets on your skin or clothes, immediately wash with plenty of clean water.**

 **To avoid gas explosions, do not bring fire or sparks near the battery.**

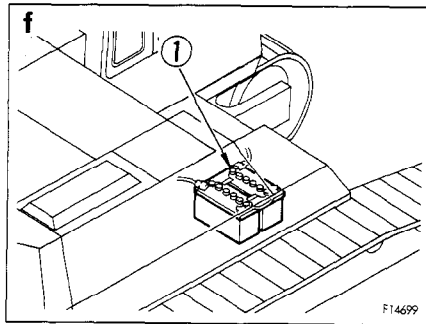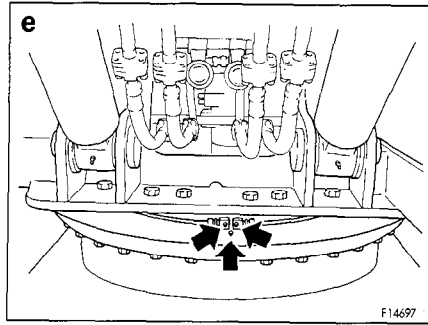

EVERY 500 HOURS SERVICE

- ★ Maintenance for every 100 and 250 hours should be carried out at the same time.



a. SWING CIRCLE PINION

1. Remove bolts (1) (2 bolts) on the top of the revolving frame and remove cover (2).
 2. Insert a scale into the grease and check that the height of the grease in the portion where the pinion passes is at least 28 mm. Add more grease if necessary.
- ★ If the grease is particularly milky due to ingress of water, etc., then remove cover (3) from the bottom of the track frame and remove the grease. Replace all of the grease with new grease.
 - ★ The total amount of grease is 21 ℓ [18.9 kg].
 - ★ When changing the grease, contact your Komatsu distributor.

b. RADIATOR FINS AND OIL COOLER FINS


Clean the radiator fins and oil cooler fins clogged with mud, dust and leaves with compressed air. Steam or water may be used instead of compressed air.

- ★ The rubber hose should be checked at the same time. If the hose is found to have cracks or to be hardened by ageing, such hose should be replaced by new one. Further, loosened hose clamp should also be checked.
- ★ When cleaning, clean the net at the front of the oil cooler also.
- ★ On dusty jobsites, carry out this inspection every day regardless of the maintenance interval.
- ★ After-cooler fins are installed only to the PC220 and 220LC.

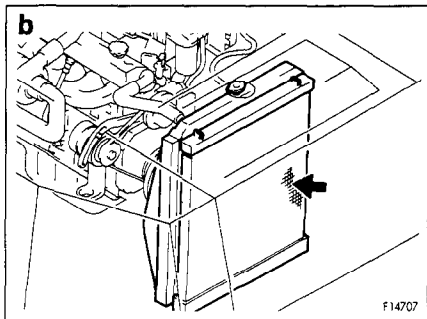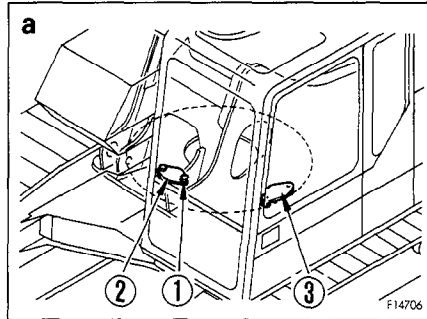

c. FUEL FILTER


1. Using a filter wrench, remove cartridge (1) by turning it counterclockwise.
2. Fill a new cartridge with fuel and refit it after applying a dab of oil to the packing face.
 - ★ To refit the cartridge, place the packing face in contact with the seal face of the filter stand, then screw up the cartridge about 2/3 of a turn.
3. After replacing the filter cartridge, set the fuel control dial to the low idling position.
4. Turn the starting switch key to the START position, and turn the starting motor for 15 — 20 seconds to crank the engine and bleed the air.

 **The engine may start, so check carefully that the area around the engine is safe before starting to crank it.**

- ★ If the machine runs out of fuel, use the same procedure, and crank 3 — 4 times for 15 — 20 seconds each time to bleed the air.
- ★ Do not continue to crank the starting motor for more than 20 seconds continuously. Wait for 1 — 2 minutes before turning the starting motor again.
- ★ The air bleeding operation can be carried out more quickly if the fuel tank is full.
- ★ After replacing the filter cartridge, start the engine and check that there is not leakage of oil from the filter seal surface.
- ★ Be sure to use a genuine Komatsu cartridge.
- ★ If a pre-fuel filter is installed, replace the pre-fuel filter cartridge at the same time.

If the ambient temperature is below 0°C or if a water separator is installed, bleed the air as follows.

1. Loosen the knob of feed pump (2), pump up and down 5 — 6 times to bleed the air, then push in the knob and tighten it.
2. Carry out the normal air bleeding procedure to bleed the air.
 - ★ If it is difficult to start the engine, carry out Step 1 again.

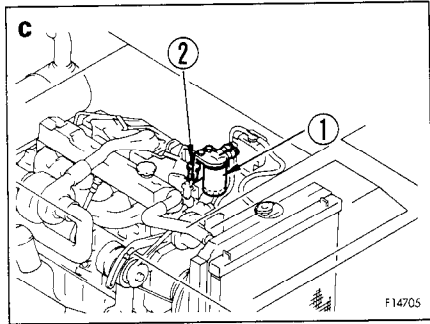

EVERY 1000 HOURS SERVICE

★ Maintenance for every 100, 250 and 500 hours should be carried out at the same time.

a. SWING MACHINERY CASE

1. Drain off oil from drain valve (P) at the bottom of the machine.
After draining, tighten drain valve (P).
 2. Pour in the specified amount of engine oil through gauge hole (G).
(Refer to EVERY 100 HOURS SERVICE.)
- ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
 - ★ Refill capacity: 9.3 ℓ



b. DAMPER CASE

1. Remove plug (G) and check that the oil level is up to the bottom edge of the plug hole.
- ★ When checking the oil level, stop the machine on flat ground, then stop the engine, and wait for at least 30 minutes before checking.
2. If the oil level is too low, add engine oil through oil filler port (F).
- ★ If the oil level is too high, it may cause overheating, so always drain oil until the oil level reaches the specified point.
 - ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS."

c. TURBOCHARGER CLAMPING JOINT

Contact your Komatsu distributor for checking, or proceed as follows:
Periodically inspect all joints for looseness. Tighten when necessary.

- Tightening torque for bolts on turbine housing side: 1.84 — 2.19 kgm
- Tightening torque for clamp bolts on blower housing side: 1.15 — 1.50 kgm
- Tightening torque for exhaust manifold and turbine housing mounting bolts (for turbocharger mounting): 6.0 — 7.5 kgm
- Tightening torque for turbocharger oil pipe (inlet): 2.8 — 3.5 kgm
- Tightening torque for turbocharger oil pipe (outlet): 6.0 — 7.5 kgm

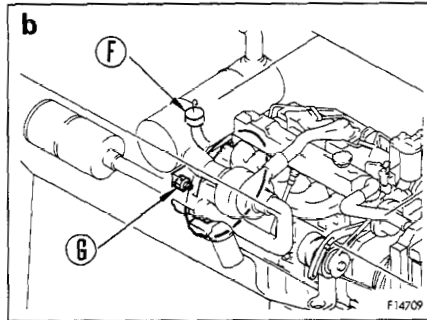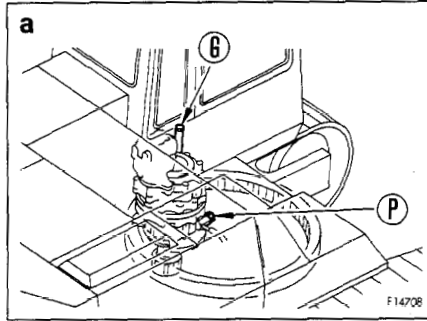

d. TURBOCHARGER ROTOR PLAY

Contact your Komatsu distributor for checking, or proceed as follows:
Remove air intake and exhaust pipes from turbocharger.

1. Axial play

Check axial play by moving rotor in axial direction.

Play:

Standard

0.025 to 0.100 mm

2. Radial play

Measure radial play by moving rotor holding both ends by hands in radial direction in parallel.

Play:


Standard

0.075 to 0.180 mm

- ★ If the play is over the limit, consult your Komatsu distributor.
- ★ If the rotor is excessively soiled with dust or carbon or if any oil leakage caused by turbocharger trouble is noted, have the turbocharger repaired by your Komatsu distributor.

e. CORROSION RESISTOR

1. Screw in valves (1) at the top of the corrosion resistor.
2. Using a filter wrench, turn cartridge (2) counterclockwise and remove it.
3. Coat the seal surface of the new cartridge with engine oil.
- ★ Bring the packing surface into contact with the seal surface of the filter holder, then tighten a further 2/3 turns.
4. Open valves (1).
- ★ Use a genuine Komatsu cartridge.
5. Start the engine and check that there is no leakage of water from the seal surface.

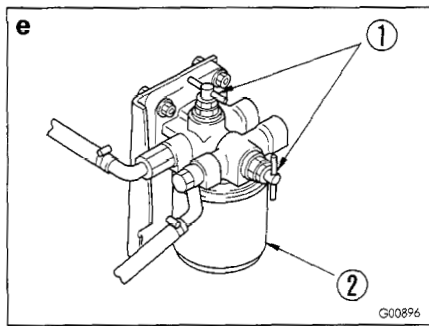

EVERY 2000 HOURS SERVICE

★ Maintenance for every 100, 250, 500 and 1000 hours should be carried out at the same time.

a. HYDRAULIC TANK

1. Retract the arm and bucket cylinder to the stroke end, then lower the boom and put the bucket teeth in contact with the ground.
2. Remove the cap of oil filler (F).

 **When removing the cap, turn it slowly to relieve inner pressure.**

3. Remove drain plug (P) at the bottom of the machine to drain off the oil, after draining off the oil, tighten up drain plug (P).
 4. Pour in the specified amount of engine oil through oil filler (F).
 5. After adding oil, check that the oil is at the specified level. For details, see CHECK BEFORE STARTING.
- ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
 - ★ Refill capacity: 170 ℓ
 - ★ When changing the oil in the hydraulic tank or replacing the main pump, or when removing the pump suction piping, bleed the air from the circuit before starting the engine. For details, see BLEEDING AIR FROM CIRCUIT.
 - ★ If the pump is operated without filling the pump case with hydraulic oil, abnormal heat will be generated and this may lead to premature damage of the pump.
 - ★ When a hydraulic breaker is installed, the hydraulic oil deteriorates much more rapidly than when carrying out ordinary digging operations with a bucket. Therefore, change the oil according to the table.




(a): Hydraulic oil change interval curve

(b): Change interval (Hours)

(c): Breaker operation rate (%)

(d): (When not using breaker)


(e): (Using only breaker)

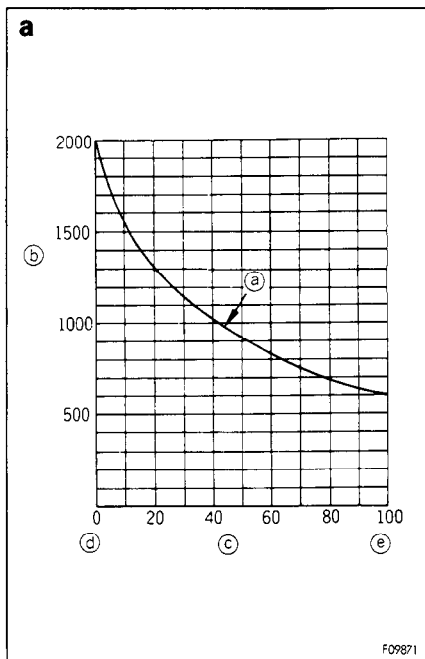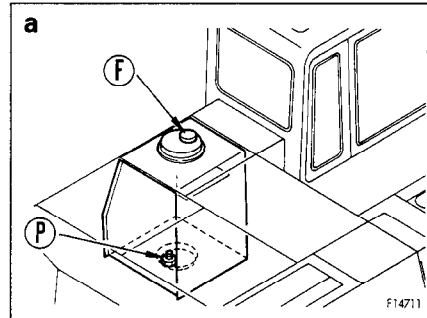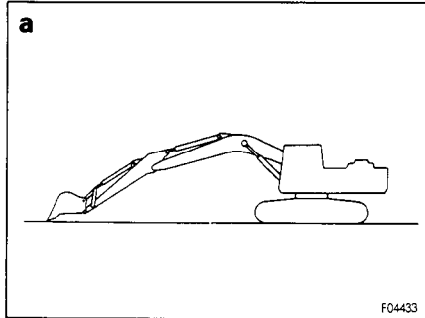

b. HYDRAULIC TANK STRAINER



1. Remove the cap of oil filler (F).
2. Remove cover (1) and lift up the top of rod (3) from above to take out spring (2) and strainer (4).
3. Wash the strainer with fuel oil. If strainer (4) is damaged, replace it with a new one.
4. Refit strainer (4) by inserting it into tank projecting part (5).

 **When removing the cap, turn it slowly to relieve inner pressure.**

 **When removing cover (1), undo the bolts (4 bolts) gradually to prevent the cover flying off under the force of spring (2).**

c. FINAL DRIVE CASE

1. Set the UP mark at the top, with the UP mark and plug (P) perpendicular to the ground surface.
 2. Drain the oil from drain plugs (P) on both sides of the machine. After draining, tighten the drain plugs.
 3. Then, supply new engine oil through oil filler (F) respectively to the specified level. (Refer to EVERY 250 HOURS SERVICE.)
- ★ The type of lubricant used depends on the ambient temperature. Select according to the table "FUEL, COOLANT AND LUBRICANTS".
 - ★ Refill capacity: 7.6 ℓ (each side)

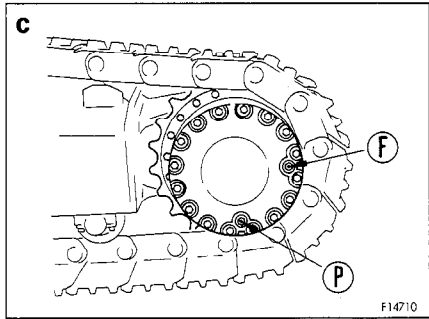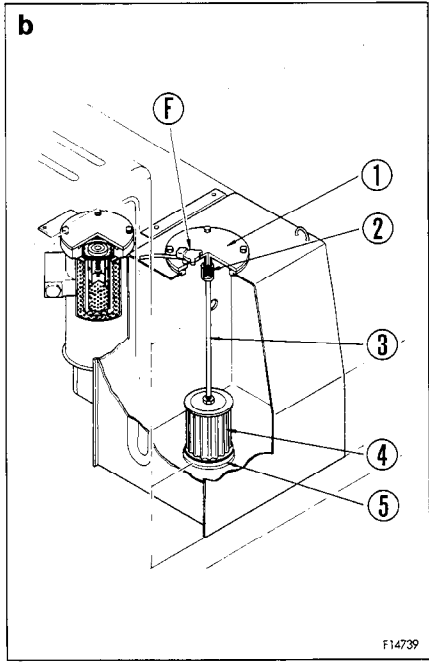

d. TURBOCHARGER

Excessive carbon or oil sludge adhering to the turbocharger blower impeller may deteriorate normal performance of the turbocharger and may sometimes damage it.

Contact your Komatsu distributor.

1. Remove the turbocharger oil supply tube and the drain tube. Then, remove the connection area of the intake manifold and the blower housing so that the blower impeller can be seen.
2. Using light oil, wash the impeller to eliminate carbon adhered on the surface.
 - ★ Do not use wire brushes or the like to prevent damage to the impeller surface.
3. Pour light oil through the turbocharger oil filler. Turn the blower impeller several turns so that foreign materials such as sludge can be washed away.
4. Using your fingers, turn the impeller vigorously for one revolution or more. If there is no sign of interference or catching, the impeller is normal.
 - ★ If the impeller seems to turn heavily, contact your Komatsu distributor to ask for repair or replacement.
5. If the impeller is found normal after this check, supply engine oil to the turbocharger.

e. ALTERNATOR AND STARTING MOTOR

The brush may be worn, or the bearing may have run out of grease, so please contact your Komatsu distributor for inspection or repair.

- ★ If the engine is started frequently, carry out inspection every 1000 hours.

f. VIBRATION DAMPER

Check the vibration damper for cracks or separation on rubber surface.

If there are cracks or separation, contact your Komatsu distributor for replacement.

g. ENGINE VALVE CLEARANCE

Ask Komatsu distributor to check engine valve clearance because special tools should be used.

EVERY 4000 HOURS SERVICE

★ **Maintenance for every 100, 250, 500, 1000 and 2000 hours should be carried out at the same time.**

a. WATER PUMP

Check that there is no play in the pulley, water leakage, or clogging of the drain hole. If any abnormality is found, please contact your Komatsu distributor for disassembly and repair or replacement.

WHEN REQUIRED

a. CLEAN INSIDE OF COOLING SYSTEM

Clean the inside of the cooling system, change the coolant, and add the corrosion resistor agent KI, or replace the corrosion resistor cartridge (if equipped), according to the table.

- ★ Stop the machine on level ground when cleaning or changing the coolant.
- ★ Use a *permanent type of antifreeze*.


If, for some reason, it is impossible to use permanent type antifreeze, use an antifreeze containing ethylene glycol.

- ★ In areas where the water is hard, always add genuine Komatsu anticorrosion agent KI.

(One packet of corrosion resistor agent KI contains 100g. The standard density of the mixture should be 7g/l.)

- ★ If a corrosion resistor cartridge is installed, always replace it.
- ★ Use city water for the cooling water.

If river water, well water or other such water supply must be used, contact your Komatsu distributor.

 **Antifreeze is flammable, so keep it away from any flame.**

Kind of coolant	Cleaning inside of cooling system and changing coolant	Adding corrosion resistor agent KI or replacing corrosion resistor cartridge
Permanent type antifreeze (All season type)	Every year (autumn) or every 2000 hours whichever comes first	
Non permanent type antifreeze containing ethylene glycol (Winter, one season type)	Every 6 months (spring, autumn) (Drain antifreeze in spring, add antifreeze in autumn)	Every 1000 hours and when cleaning the inside of the cooling system and when changing coolant
When not using antifreeze	Every 6 months or every 1000 hours whichever comes first	

- Add antifreeze in the cooling water
When deciding the ratio of antifreeze to water, check the lowest temperature in the past, and decide from the mixing rate table given below.
It is actually better to estimate a temperature about 10°C lower when deciding the mixing rate.

Mixing rate of water and antifreeze

For PC200, 200LC-5, PC220, 220LC-5

Min. atmospheric temperature (°C)	-5	-10	-15	-20	-25	-30
Amount of antifreeze (ℓ)	4.6	5.9	7.2	8.1	9.1	9.9
Amount of water (ℓ)	15.1	13.8	12.5	11.6	10.6	9.8

For PC200, 200LC-5 MIGHTY

Min. atmospheric temperature (°C)	-5	-10	-15	-20	-25	-30
Amount of antifreeze (ℓ)	4.7	6.1	7.3	8.3	9.3	10.1
Amount of water (ℓ)	15.5	14.1	12.9	11.9	10.9	10.1



- ★ We recommend use of an antifreeze density gauge to control the mixing proportions.

1. Stop the engine.
 - ★ If a corrosion resistor cartridge is installed, close valves (1).
2. Turn water filler cap (2) slowly until it comes off.

 **Do not remove the cap while cooling water is hot. Hot water may spout out.**

When removing the cap, wait until the water temperature goes down and release radiator pressure little by little by loosening the cap slowly, then remove the cap.

3. Open drain valve (3) at the bottom of the radiator and plug (4) on the side of cylinder block to drain off the cooling water.
4. After draining the cooling water, close up drain valve (3), plug (4), and pour in soft water (ex; city water) up to the vicinity of the water filler.
5. When the water reaches the vicinity of the water filler, put the engine at low idling, open drain valve (3), plug (4), then pass water for 10 minutes through the cooling system.
 - ★ When doing this, adjust the speed of filling and draining the water so that the radiator is always full.
6. When the water becomes completely clean, stop the engine, draining off the cooling water, and close drain valve (3), plug (4).
7. After draining the water, clean with a cleaning agent.
 - ★ We recommend use of a Komatsu genuine cleaning agent. For details of the cleaning method, see the instructions given with the cleaning agent.
8. After cleaning, drain all the cooling water, then close the drain valve (3), plug (4) and fill slowly with clean water.
9. When the cooling water comes up to near the radiator water filler port, start the engine, and run at low idling. Add clean water, open drain valve (3), plug (4) and continue to run water until clean colorless water comes out from the drain valve (3) and plug (4).
 - ★ When doing this, adjust the speed of filling and draining the water so that the radiator is always full.
10. When the water is completely clean, stop the engine and close drain valve (3), plug (4).
 - ★ If a corrosion resistor cartridge is installed, replace the cartridge and open valve (1).
(For details, see EVERY 1000 HOURS SERVICE.)
 - ★ In areas where the water is hard, if there is no corrosion resistor cartridge installed, always add genuine Komatsu anticorrosion agent KI.
(For details of the adding procedure, follow the instructions on the agent.)
11. Add cooling water until it overflows from the water filler.

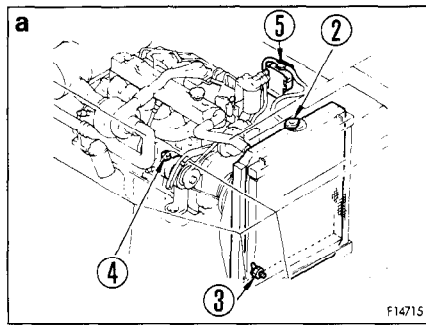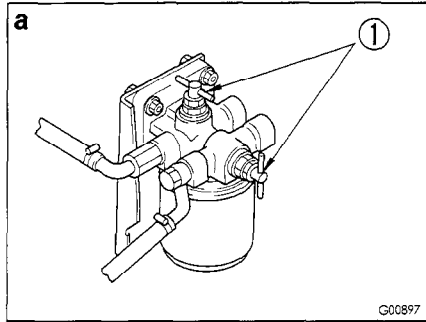

12. To remove the air in the cooling water, run for five minutes at low idling, then for another five minutes at high idling.
When doing this, leave radiator cap (2) off.
13. After draining off the cooling water of sub-tank (5), clean sub-tank and refill the water between H and L level.
14. Stop the engine, wait for about three minutes, add cooling water to the specified level, then tighten cap (2).





b. CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT

Checking

Whenever the red piston in dust indicator (1) appears, clean the air cleaner outer element. Stop the engine when cleaning the element.

Cleaning or replacing outer element

1. Open the cover at the left side of the chassis, remove wing nut (2), then take out outer element (3).
 2. Clean the air cleaner body interior and the removed cover.
 3. Clean and inspect the element. (See the item "Cleaning outer element" for cleaning procedure.)
 4. Install the cleaned element.
 5. Push the dust indicator reset button to return the red piston to the original position.
- ★ Replace the outer element which has been cleaned 6 times repeatedly or used throughout a year.
Replace the inner element at the same time.
 - ★ Replace both inner and outer element when the dust indicator red piston appears soon after installing the cleaned element even though it has not been cleaned 6 times.
 - ★ Remove one seal from the outer element. The number of times the outer element has been cleaned can be seen by the number of removed seals.
 - ★ Check inner element mounting nuts for looseness and, if necessary, re-tighten.
 - ★ Replace seal washer (4) or wing nut (2) if they are broken.
 - ★ When inspecting or cleaning the air cleaner, remove evacuator valve (5) and clean with compressed air.

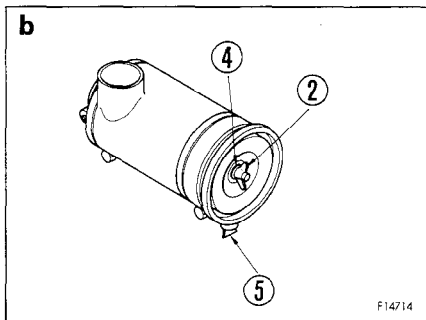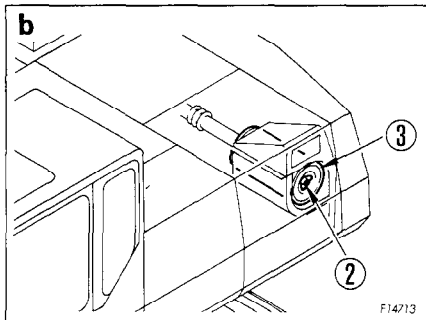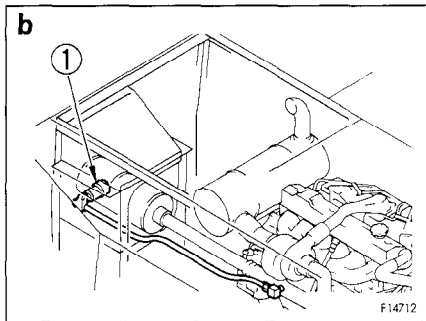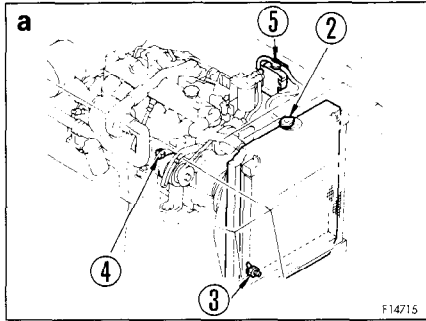

Replacing inner element

1. Remove the outer element, and then remove the inner element.
 2. Cover the air connector with a clean cloth or tape.
 3. Clean inside the body, then remove the cover fitted in Step 2.
 4. Install the new inner element.
 5. After installing the new outer element, return the red piston in the dust indicator to its original position.
- ★ Do not attempt to reinstall a cleaned inner element.

⚠ Do not clean or replace the air cleaner element with the engine running.

Cleaning the outer element

With compressed air

Direct dry compressed air (less than 7 kg/cm²) to the element from inside along its folds, then direct it from outside along its folds and again from inside, and check the element.

⚠ When using compressed air, wear safety glasses and other things required to maintain safety.

The following methods require spare parts.



With water

Dash city water (less than 3 kg/cm²) on the element from inside along folds, then from outside and again from inside. Dry and check it.

With cleaning agent

For removing oils and fats as well as carbon, etc., attached on the element, the element may be cleaned in lukewarm solution of mild detergent, then rinsed in clean water and left to drip dry.

- ★ Drying can be speeded up by blowing dried compressed air (less than 7 kg/cm²) from the inside to the outside of the element.
Never attempt to heat the element.
- ★ Using warm water (about 40°C) instead of soapy water may also be effective.
- ★ If small holes or thinner parts are found on the element when it is checked with an electric bulb after cleaning and drying, replace the element.
- ★ Do not use an element whose folds or gasket or seal are damaged.
- ★ When cleaning the element, do not hit it or beat it against something.

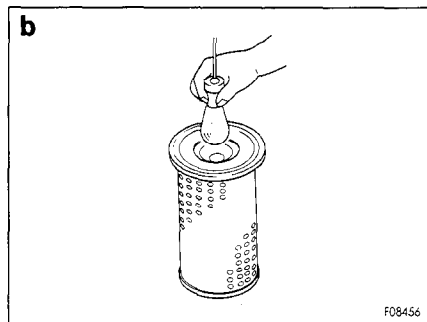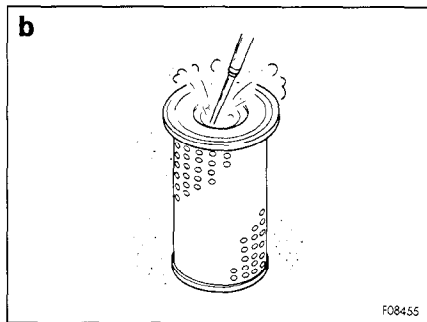

c. CHECK TRACK TENSION

The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties. It is thus necessary to continually inspect the track tension so as to maintain the standard tension on it.

If the track tension is not at the standard value, adjust it in the following manner:

Inspection

1. Raise the chassis with the boom and arm.
2. The standard clearance between the bottom of the track frame and the top surface of the track shoe is 303 ± 20 mm.

(a): Track frame

(b): Track shoe

★ Places to measure

PC200-5, 5 MIGHTY: 4th track roller from sprocket

PC200LC-5, 5 MIGHTY: 5th track roller from sprocket

PC220-5: Between 4th and 5th track roller from sprocket

PC220LC-5: Between 5th and 6th track roller from sprocket





Adjustment

If the tension is not the standard value, adjust as follows.

1. To increase the tension, pump in grease through grease fitting (1). To release the tension, loosen plug (2) a little at a time to release the grease.
2. It is permissible to insert grease until S becomes 0 mm. If, despite doing this, the track tension is still low, the pin and bushing have become excessively worn and must either be inverted or replaced.

Have this work done by Komatsu distributor.

⚠ When loosening plug (2), do not slacken it by more than one turn. Also, during this operation, do not loosen any part other than plug (2). (This is because of the danger of grease spurting out under high pressure.) If the grease comes out sluggishly, move the machine slightly backward and forward.

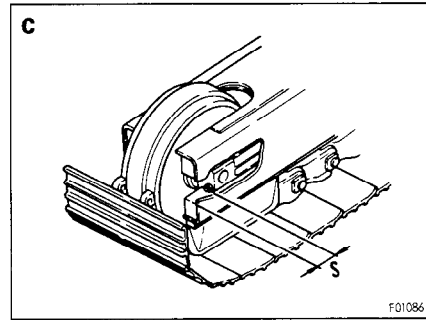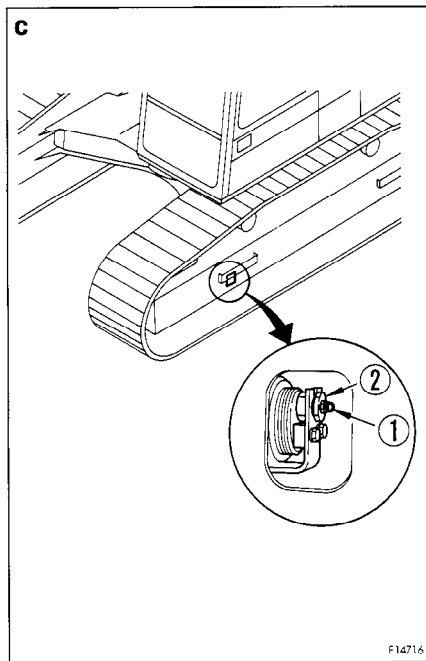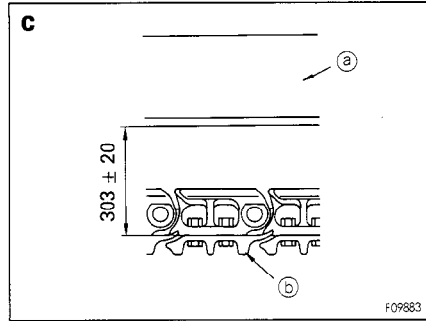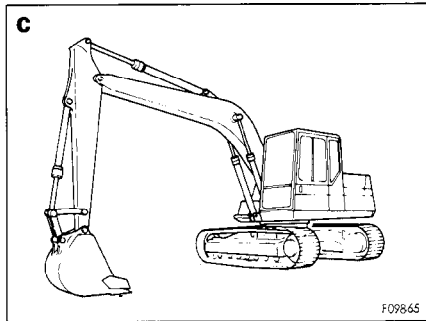

d. CHECK ELECTRICAL INTAKE AIR HEATER

Check electrical intake air heater (1) once a year before commencing work in the cold season.

Remove electrical intake air heater (1) from the engine intake connection, and check it for possible open-circuits and dirt.

When inspecting and replacing electrical intake air heater (1), replace the gasket with new one.

e. TRACK SHOE BOLTS

If the machine is used with track shoe bolts (1) loose, they will break, so tighten any loose bolts immediately.

Method of tightening

1. Tighten first to a tightening torque of 40 ± 4 kgm, then check that the nut and shoe are in close contact with the link mating surface.
2. After checking, tighten a further $120^\circ \pm 10^\circ$.






Order for tightening

Tighten the bolts in the order shown in the diagram. After tightening, check that the nut and shoe are in close contact with the link mating surface.

f. REPLACE BUCKET TEETH (HORIZONTAL PIN TYPE)

Replace the teeth before the wear reaches the adapter.









1. Remove pin (2) mounting the bucket, then remove tooth (1).
 - ★ When removing pin (2), use a bar that is slightly thinner than the pin, then tap and remove from the opposite side.
2. Fit new tooth (1) in adapter (3), push in pin (2) partially by hand, then knock in with a hammer.

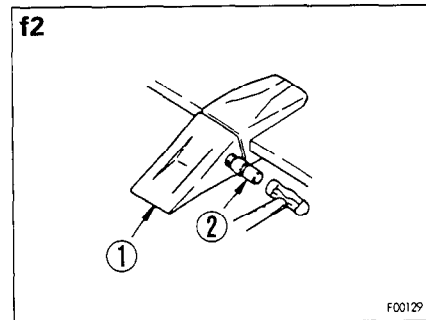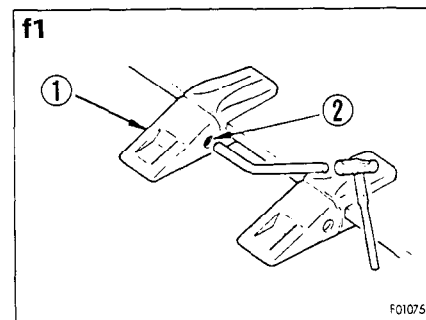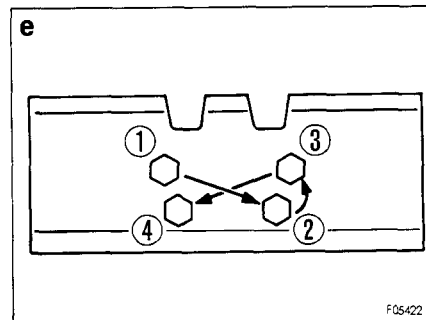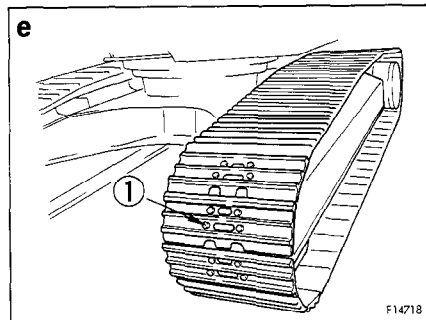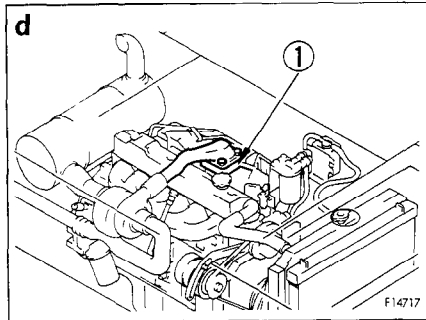

**g. REPLACE BUCKET TEETH (VERTICAL PIN TYPE)
(except PC200, 200LC-5 MIGHTY)**

Replace the point before the adapter starts to wear.

- ★ Set the bucket so that its bottom is horizontal.
- 1. Use a hammer and drift to drive out lock pin (2), which is fixing point (1) to the bucket. (If the drift is struck while facing rubber pin lock (3), the rubber pin lock may break. Direct the drift to the back of the pin.)
- 2. Check lock pin (2) and rubber pin lock (3) which were removed.
- ★ If the lock pins and rubber pin locks with the following defects are used, the point may come off the bucket. Replace them with new ones.
 - 1) A lock pin (a) which is too short. (When aligning with bottom face (c), clearance (b) becomes more than 1/3A.)
 - 2) A rubber pin lock, the rubber (d) of which is broken and whose steel balls come out easily.
 - 3) A rubber pin lock, the steel balls (e) of which can be buried by being pressed with a finger.
- 3. Clean the surface of adapter (4) and remove the soil from it with a knife.
- 4. Use your hand or a hammer to drive rubber pin lock (3) into the hole of the adapter. Take care that the rubber pin lock does not project out of the adapter.
- 5. Clean the inside of point (1) and install it to adapter (4). If it is stained with soil or has projections (f), it will not fit to the adapter.
- 6. Fit point (1) to adapter (4), and confirm that when the pointer is pressed strongly, the rear face of the hole for the pin of the point is at the same level as the rear face of the hole for the pin of the adapter.
- ★ If the rear face of the hole for the pin of point (1) is projecting from that of adapter (4), do not drive in the pin. Instead, find out what substance is preventing point (1) from fitting to adapter (4), and remove it. Then fit point (1) to adapter (4) and drive in lock pin (2).
- 7. Insert lock pin (2) in the hole of the point and hit it until its top is the same level as the surface of point (1).
- 8. After replacing a bucket tooth, confirm that it is installed securely by doing the following:
 - 1) Confirm that the surface of the lock pin is secured against the point.
 - 2) Lightly hit lock pin (2) in the reverse direction from which it was hit in.
 - 3) Lightly hit the tip of the point from above and below, and hit its sides from right and left.
 - 4) Confirm that rubber pin lock (3) and lock pin (2) are set as shown in the figure.
- ★ The life of the point can be lengthened and the frequency of its replacement can be reduced by turning it upside down so that it will wear evenly.
- ★ When replacing the point, replace the rubber pin and lock pin with new ones. This will prevent the point from falling.

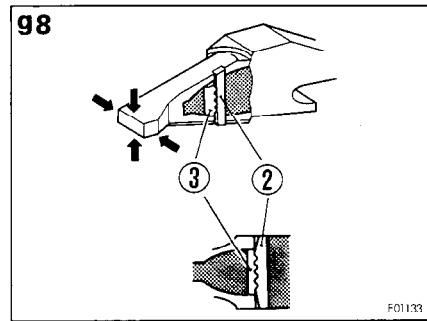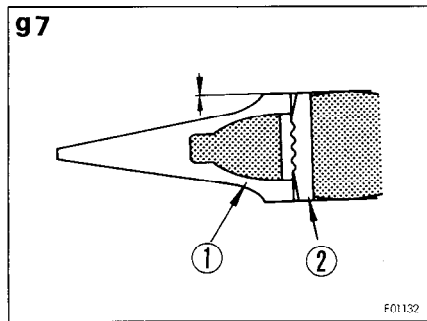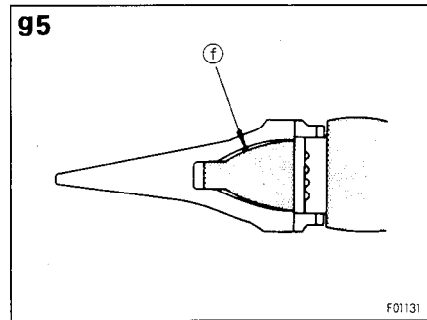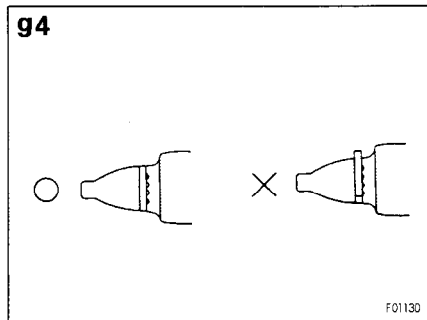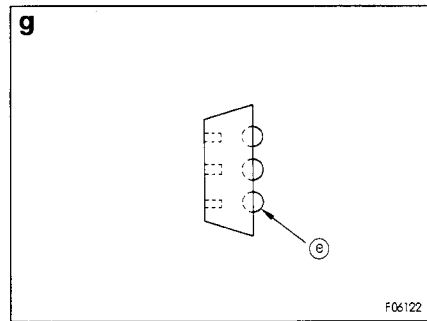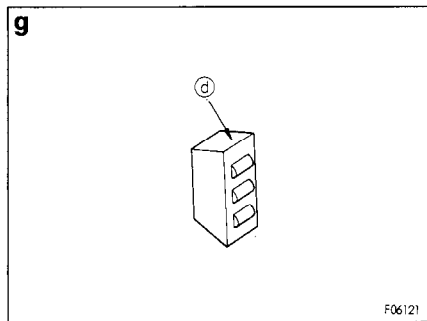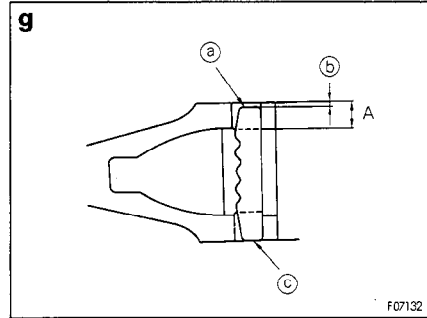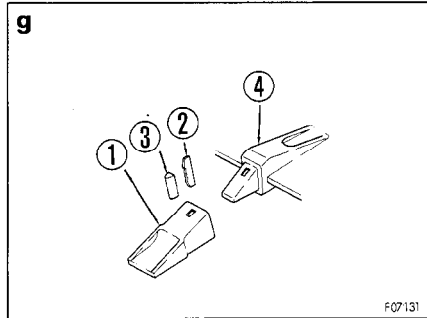

h. CLEAN LINE FILTER

If there is any abnormality in the pump or other hydraulic equipment, remove the dirt from inside the line filter.

- ★ Before removing the line filter, release the pressure inside the hydraulic circuit as follows.

Releasing pressure

1. Lower the work equipment to the ground on a firm, flat surface as shown in the diagram, then stop the engine.
 - ★ Set the lock lever to the FREE position.
2. Operate all the work equipment levers to the end of their travel within 5 – 6 seconds of stopping the engine.
3. Remove the cap from the hydraulic tank.
4. Start the engine, run for approx. 10 seconds, then stop the engine.
 - ★ Do not run the engine at above 1000 rpm.
 - ★ Place the work equipment levers at neutral.
5. Operate all the work equipment levers to the end of their travel within 5 – 6 seconds of stopping the engine.
 - ★ Repeat Steps 4 – 5 three times.

⚠ When removing the oil filler cap from the hydraulic tank, turn it slowly to release the internal pressure, and remove it carefully.




Method of cleaning

1. Remove case (1), then remove element (2) and clean it.
 - ★ Some of the oil inside the piping will come out, so prepare a container to catch it.
 - ★ Remove the dirt stuck inside the case.
2. Install element (2), then screw in case (1) to install it.
 - ★ Replace o-ring (3) and backup ring (4) as a set when reassembling.
 - ★ Tightening torque Case (1): 4.5 ± 0.5 kgm
 - ★ After reassembling the line filter, start the engine and run at low idling for 5 minutes to bleed the air. It is not necessary to operate the control levers to bleed the air.

i. DRAIN WATER FROM WATER SEPARATOR

When float (2) is at or above red line (1), drain the water according to the following procedure:

1. Loosen drain plug (3) and drain the accumulated water until the float reaches the bottom.
2. Tighten drain plug (3).
3. If the air is sucked into the fuel line when draining the water, be sure to bleed the air in the same manner as for the fuel filter.
(See Fuel Filter Cartridge in EVERY 500 HOURS SERVICE section.)

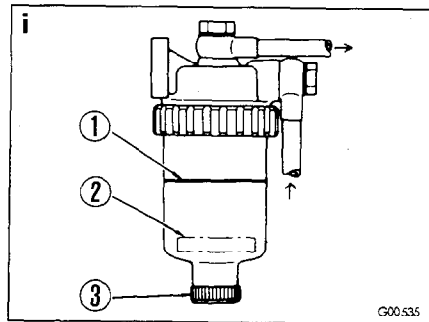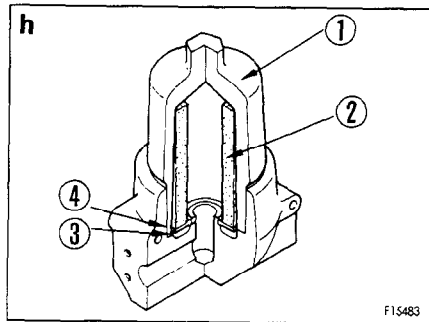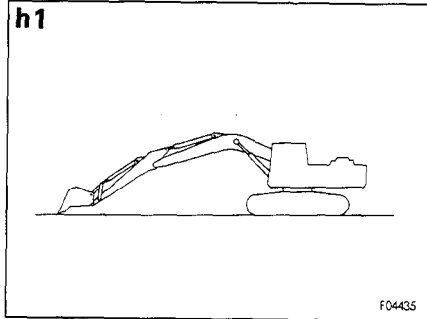

ADJUSTMENT

ADJUSTMENT OF BUCKET CLEARANCE

If there is excessive free play on the coupling section of the bucket and arm, adjust the bucket clearance in the following manner.

★ When adjusting, set the work equipment in the posture shown in the diagram.

1. Loosen 4 bolts (2), bolt (3) and plate (1).

2. Take out shims (4) equivalent in size to free play "a".

★ The thickness of shim (4) is 0.5 mm or 1 mm each.

★ When free play "a" is less than 0.5 mm, do not compress the shims by tightening bolt (2).


3. Tighten 4 bolts (2) and bolt (3).

Then, clearance "b" becomes larger and free play "a" is removed.

(5): Bucket

(6): Bush

(7): Arm

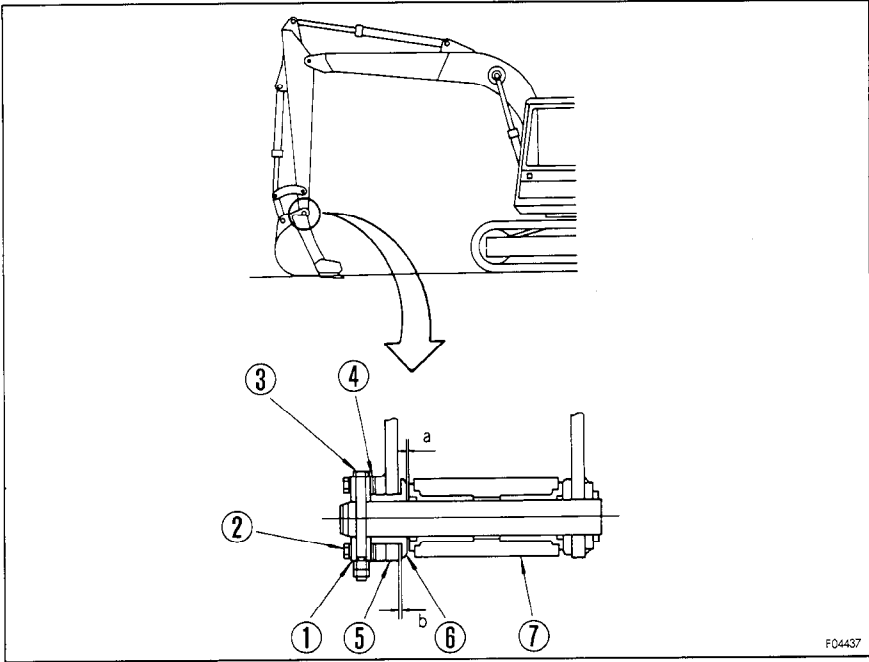

F04437

TROUBLE SHOOTING GUIDE

This guide is not intended to cover every conditions, however many of the more common possibilities are listed.

ELECTRICAL SYSTEM

Lamp does not glow brightly even when engine runs at high speed.

Lamp flickers while engine runs.

- Check for loose terminals and open-circuit wiring.
- Adjust belt tension.

Charge monitor does not go out even when engine runs at high speed.

- Replace the alternator.
- Check and repair wiring.

Unusual noise is emitted from the alternator.

- Replace the alternator.

Starting motor does not turn when starting switch is turned on.

- Check and repair the wiring.
- Charge the battery.
- Replace the starting motor.
- Replace the safety relay.

The pinion of the starting motor keeps going in and out.

- Charge the battery.

Starting motor turns the engine sluggishly.

- Charge the battery.
- Replace the starting motor.

The starting motor disengages before the engine starts up.

- Check and repair the wiring.
- Charge the battery.
- Replace the electrical intake air heater.

The engine pre-heating monitor does not flash.

- Check and repair wiring.
- Replace the heater relay.
- Replace the monitor.

The engine oil pressure monitor does not light up when engine is stationary (when the starting switch is in ON position.)

- Replace the monitor.
- Replace the caution lamp switch.

Charge monitor does not light up when the engine is stationary. (When the starting switch is in ON position.)

- Replace the monitor.
- Check and repair the wiring.

Outside the electrical intake air heater is not warm when touched with the hand.

- Check and repair wiring.
- Replace the electrical intake air heater.
- Check and repair the heater switch.

ENGINE

The engine oil pressure monitor flashes when engine speed is raised after completion of warm-up.

- Add the oil to the specified level.
- Replace the oil filter cartridge.
- Check oil leakage from the pipe or the joint.
- Replace the monitor.

**Steam is emitted from the top part of the radiator (the pressure valve).
The radiator cooling water level monitor flashes.**

- Supply the cooling water and check leakage.
- Adjust fan belt tension.
- Wash out inside of cooling system.
- Clean or repair the radiator fin.
- Replace the thermostat.
- Tighten the radiator cap firmly or replace the gasket of it.
- Replace the monitor.

The engine does not start when the starting motor is turned over.

- Add fuel.
- Repair where air is leaking into fuel system.
- Replace the injection pump or the nozzle.
- Check the valve clearance.
- Check engine compression pressure.
- Refer to the section of electrical system.

Exhaust gas is white or blue.

- Adjust to specified oil quantity.
- Replace with specified fuel.

Exhaust gas occasionally turns black.

- Clean or replace the air cleaner element.
- Replace the nozzle.
- Check engine compression pressure.
- Clean or replace the turbocharger.

Combustion noise occasionally changes to breathing sound.

- Replace the nozzle.

Unusual combustion noise or mechanical noise.

- Replace with specified fuel.
- Check over-heating.
- Replace the muffler.
- Adjust valve clearance.

CHASSIS

Slow speed of travel, swing, boom, arm and bucket

- Add oil to specified level.

Unusual noise emitted from pump

- Clean the hydraulic tank strainer.

Excessive oil temperature rise of hydraulic oil

- Clean the oil cooler.
- Adjust fan belt tension.
- Add oil to specified level.

Track slip out of place

Excessive wear of the sprocket

- Adjust tension of track.

Bucket either rises slowly or not at all

- Add oil to specified level.

MECHATRONICS RELATED PARTS

1. PUMP CONTROLLER

When normal

No.	Input mode and condition	Display
①	Power source monitor (with starting switch ON)	Lights up
②	H mode	H
	S mode	S
	L mode	L
③	Engine speed signal monitor (when engine is running)	Flashes
④	Heavy-duty operation mode	1
	General operation mode	2
	Finishing operation mode	3
	Lifting operation mode	4

- ★ The combinations given in the table above are displayed according to the input mode and machine condition.
- ★ Engine speed signal monitor (3) flashes according to the engine speed.
(At 2000 rpm, it flashes approx. 20 times/10 sec)
- ★ When switching the input, the following display is given.

When switching input	Display
When electric power is switched on (0.5 sec)	PC200-5, -5 MIGHTY PC200LC-5, -5 MIGHTY . 4
	PC220-5 PC220LC-5 . 5
Switching travel speed	Hi .H.1
	Lo .L.0
Auto-deceleration switch	.A.d
Swing lock switch	.b.5
Work equipment control lever	.P.1
Swing control lever	.P.2
Service control lever	.P.4
Travel lever	.P.6
Power max. button	.UP

- The display is given for 0.5 — 1.5 sec after the input is switched.



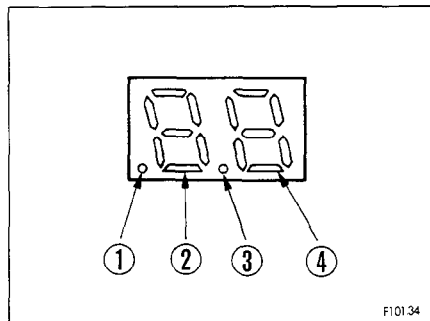


FIG. 134

When abnormal

Display	Condition of machine
	Abnormality in electrical system
Only power source monitor lights up	Abnormality in electrical system
All lamps OFF	Abnormality in electrical system

- ★ If any abnormality occurs, lower the work equipment to the ground, check the display on the controller, then contact your Komatsu distributor for repairs.
- ★ If it is thought that there is any abnormality or cause not listed above, please contact your Komatsu distributor for repairs.
- ★ If there is more than one failure, the abnormality display shows each abnormality in turn, so check all of the abnormality codes.
- ★ When any abnormality occurs, always check the abnormality display of the controller before turning the starting switch to the OFF position.

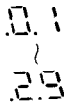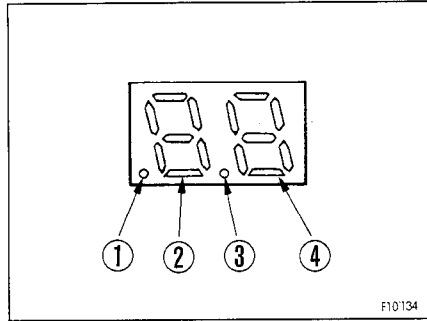

F10134

2. ENGINE THROTTLE CONTROLLER


When normal

For PC200, 200LC-5, 5 MIGHTY

LED display			Condition of machine
L ₃ Red	L ₂ Green	L ₁ Red	
OFF	OFF	ON	For 5 seconds after power is switched on
OFF	ON	OFF	5 seconds after power is switched on

For PC220, 220LC-5


LED display			Condition of machine
L ₃ Red	L ₂ Green	L ₁ Red	
OFF	ON	OFF	—

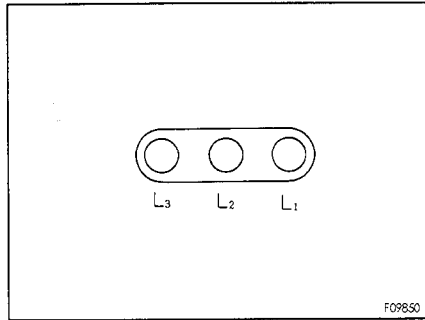

When abnormal

LED display			Condition of machine
L ₃ Red	L ₂ Green	L ₁ Red	
OFF	OFF	OFF	Abnormality in electrical system
OFF	OFF	ON	
ON	OFF	OFF	
OFF	ON	ON	
ON	OFF	ON	
ON	ON	OFF	
ON	ON	ON	

- ★ If any abnormality occurs, lower the work equipment to the ground, check the display on the controller, then contact your Komatsu distributor for repairs.
- ★ If it is thought that there is any abnormality or cause not listed above, please contact your Komatsu distributor for repairs.
- ★ When any abnormality occurs, always check the abnormality display of the controller before turning the starting switch to the OFF position.

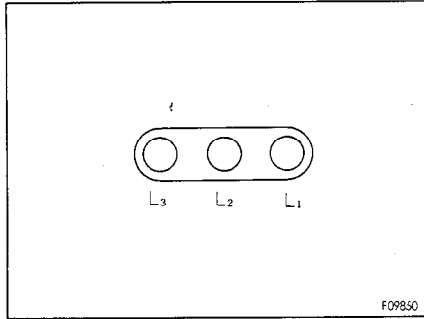


SERVICE METER

This meter indicates the integrated work hours. So, use it according to the following instructions.

- Record the readings at the start and the end of work, this is the work record of the machine.
- This record will indicate, when periodical maintenance is due.
- It also indicates the integrated working hours when machine problems are encountered.

★ **How the meter progresses**

The service meter progresses by 1 when the engine is operated for one hour, regardless of the engine speed. Consequently, if the engine is running, the service meter will advance even if the machine does not move.

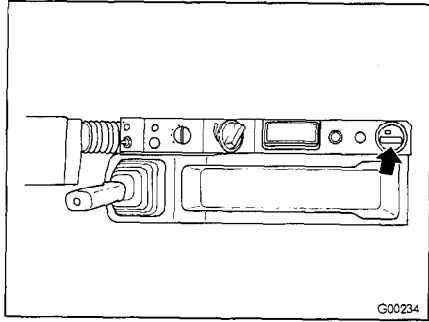

G00234

MACHINE AND ENGINE SERIAL NUMBERS



When calling for a service of mechanic or when making replacement-parts order, be sure to give Komatsu distributor the machine and engine serial numbers as well as the service meter reading before mentioned. These numbers are found on the plates shown in the figure.

A. Location of the machine serial number mark.

This is seen on the bottom right of the cab.

B. Location of the engine serial number mark.

This is seen on the upper side of the cylinder head cover.

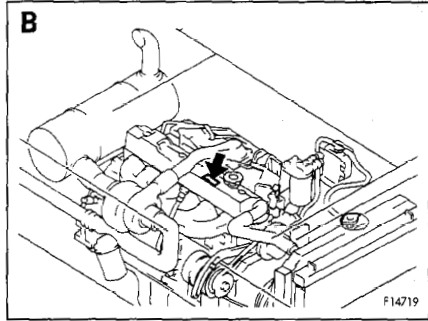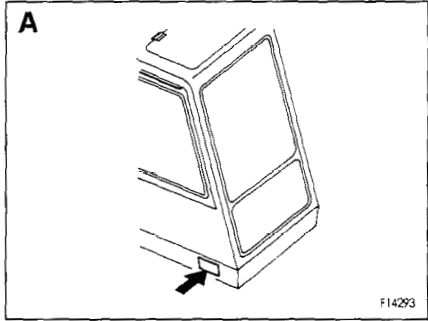

FUEL, COOLANT AND LUBRICANTS

PROPER SELECTION OF FUEL, COOLANT AND LUBRICANTS

RESERVOIR	KIND OF FLUID	AMBIENT TEMPERATURE										CAPACITY (ℓ)	
		-22	-4	14	32	50	68	86	104	122°F	Specified	Refill	
		-30	-20	-10	0	10	20	30	40	50°C			
Engine oil pan	Engine oil						SAE 30				19.5	18.5	
					SAE 10W								
				SAE 10W-30									
			SAE 15W-40										
Swing machinery case Final drive case (each) Damper case	Engine oil				SAE 30				10 7.6 (each) 1.0	9.3 7.6 (each) —			
				SAE 10W									
				SAE 10W-30									
Hydraulic system	Engine oil				SAE 10W				230	170			
				SAE 10W-30									
			SAE 15W-40										
Fuel tank	Diesel fuel				ASTM D975 No.2				310	—			
			*										
Cooling system	Water	Add antifreeze										19.7 [20.2]	—

[]: PC200, 200LC-5 MIGHTY

※ ASTM D975 No.1

NOTE:

- (1) When fuel sulphur content is less than 0.5%, change oil in the oil pan every periodic maintenance hours described in this manual.
Change oil according to the following table if fuel sulphur content is above 0.5%.


Fuel sulphur content	Change interval of oil in engine oil pan
0.5 to 1.0 %	1/2 of regular interval
Above 1.0 %	1/4 of regular interval

- (2) When starting the engine in an atmospheric temperature of lower than 0°C, be sure to use engine oil of SAE10W, SAE10W-30 and SAE15W-40, even though an atmospheric temperature goes up to 10°C more or less in the day time.
- (3) Use API classification CD as engine oil and if API classification CC, reduce the engine oil change interval to half.
- (4) There is no problem if single grade oil is mixed with multigrade oil (SAE10W-30, 15W-40), but be sure to add single grade oil that matches the temperature in the table on the left.
- (5) We recommend Komatsu genuine oil which has been specifically formulated and approved for use in engine and hydraulic work equipment applications.

ASTM: American Society of Testing and Material
SAE: Society of Automotive Engineers
API: American Petroleum Institute

Specified capacity: Total amount of oil including oil for components and oil in piping.

Refill capacity: Amount of oil needed to refill system during normal inspection and maintenance.



PC200, 200LC-5 MIGHTY (METHOD FOR HANDLING THE ATTACHMENTS)

This section gives details of only the method for handling the attachments that require a hydraulic cylinder with a reciprocal function, such as breakers and crushers.

EXPLANATIONS OF COMPONENTS

1. PUMP SELECTOR SWITCH

This is the switch to select one pump or two pumps.

When installing attachments that require speed (crushers, etc.) set to the 2-pump position (a), and when installing the attachment do not require speed, set to the 1-pump position (b).

★ When installing a bucket, set to the 1-pump position.

(f): Front of machine

2. CONTROL PEDAL

This is used to operate the attachment.

When the pedal is depressed, the attachment is actuated.

★ For details of the oil flow, see HYDRAULIC CIRCUIT.

★ Please follow the precautions for handling the attachment given in the operation manual provided by the attachment maker.

★ When general attachments are not installed, if the pedal is installed, it will cause overheating.






(f): Front of machine

3. FUSES

Fuse capacity and the name of circuit

★ There are two 10A fuses and one 15A fuse provided as spare fuses.

No.	Fuse capacity	Name of circuit	Remarks
①	10A	Pump controller, solenoid valve	—
②	10A	Engine governor controller	—
③	10A	Monitor, buzzer	—
④	15A	Heater (air conditioner, cooler)	—
⑤	15A	Right head lamp, working lamp (additional front lamp)	—
⑥	10A	Room lamp, radio, cigarette lighter	—
⑦	10A	Wiper motor, horn (Window washer)	—
⑧	10A	Room lamp, clock	—
⑨	10A	Battery relay, preheating heater relay, starting signal	—
⑩	10A	1-pump/2-pump selector switch, solenoid	—

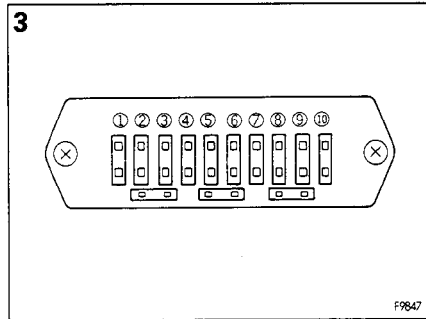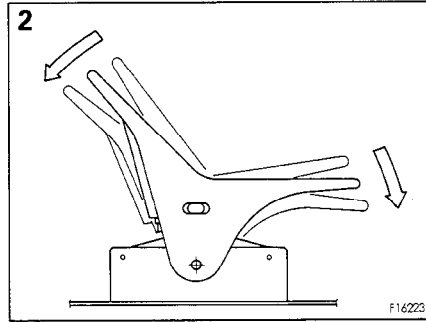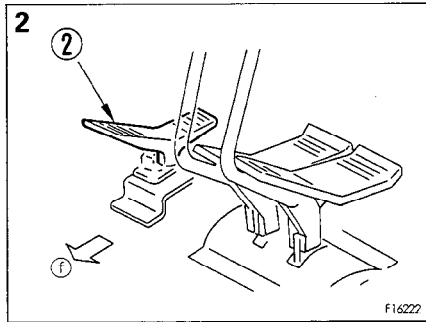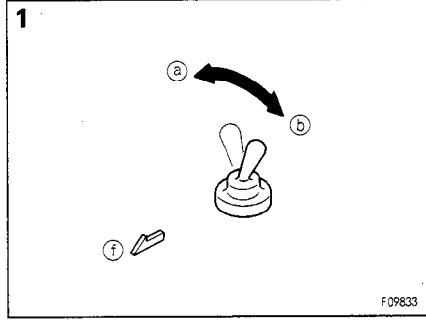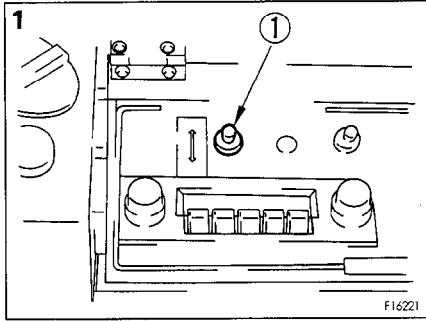





HYDRAULIC CIRCUIT

A. SWITCHING HYDRAULIC CIRCUIT


When installing an attachment or installing a bucket, set left and right 3-way valves (1) installed to the hydraulic circuit as follows.

Match the attachment and the direction of left and right 3-way valves (1) as shown in the table below.


(The arrow showing the direction of the port is stamped on the head of the 3-way valve. In the case of the breaker, set the direction of the arrow to "B", and in the case of crusher, set it to "C".)

Attachment	Left 3-way valve	Right 3-way valve
Breaker, etc.	Front of machine B 	Front of machine B 
Crusher, etc.	Front of machine C 	Front of machine C 

- **Switch the direction of the 3-way valve port as follows.**
Using a wrench, turn rotor (A) to the end of its stroke.
- ★ When installing a breaker, connect the return circuit directly to the return filter.
- ★ The standard set pressure for the low pressure safety valve is set as 210 kg/cm² when shipping from the plant.
When installing breakers made by other manufacturers, it is necessary to adjust the pressure, so please contact your Komatsu distributor.

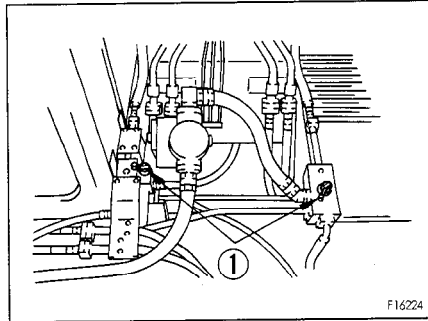

F16224


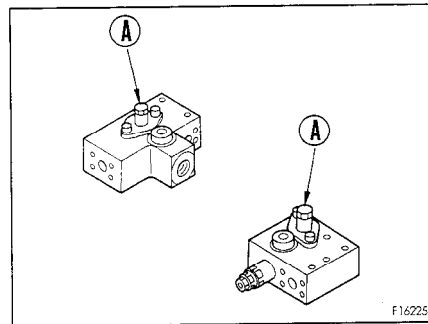


F16225



B. CONNECTING HYDRAULIC CIRCUIT

When connecting the attachment, connect the hydraulic circuit as follows.

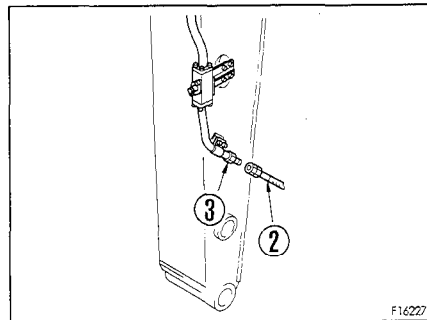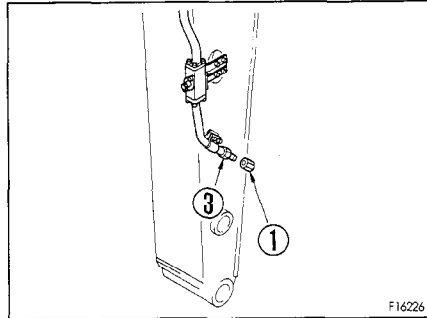1. Remove blind plug (1) at the tip of the stop valve piping. (Left and right, 2 places)
 - ★ Be careful not to lose or damage the removed parts.
2. Connect attachment piping (2) provided by the attachment maker to the part from the which the plug was removed.
- ★ When it is shipped from the plant, tube (3) is fitted with an Okada compatible part. In other cases, a Nippon Pneumatic compatible part is also used, but when adding an accumulator, the action to take differs according to the attachment maker, so please contact your Komatsu distributor.



C. PATH OF OIL FLOW

- The direction of operation of the pedal and the flow of oil is as shown in the diagram.
- Hydraulic circuit when crusher is installed
 - - - Hydraulic circuit when breaker is installed
 - · - · - Pilot circuit
 - · — Electrical circuit
 -  When rear of pedal is depressed
 -  When front of pedal is depressed

★ When the breaker is being used, no oil will flow when the rear of the pedal is depressed.

- | | |
|---|---|
| 1. Circuit connected directly to oil cooler (selection possible by 3-way valve) | 7. Control valve |
| 2. Additional filter | 8. Solenoid valve |
| 3. Oil cooler | 9. Control pedal |
| 4. Main filter | 10. Selector switch |
| 5. Hydraulic pump | 11. Low pressure safety valve circuit (Selection possible by 3-way valve) |
| 6. Hydraulic tank | 12. Stop valve |


D. HYDRAULIC SPECIFICATIONS

- Max. flow when merged: $191 \times 2 \text{ l/min}$
- Main relief set pressure: 325 kg/cm^2
(when pressure rises: 340 kg/cm^2)
- Safety valve set pressure: $175 \sim 365 \text{ kg/cm}^2$

E. OPERATION OF PEDAL

When the pedal is pressed to the front, neutral, or rear, the movement of the attachment is as follows.



- | | |
|---|---|
| · Hydraulic breaker
Front: Actuated
Neutral: Stop
Rear: Stop | · Scrap grapple bucket
Front: Grip
Neutral: Hold
Rear: Release |
| · Power ripper
Front: Dig in
Neutral: Hold
Rear: Remove | · TS crusher
Front: Bite
Neutral: Hold
Rear: Release |
| · Fork grab
Front: Grip
Neutral: Hold
Rear: Release | · Hydraulic pile driver
Front: Grip
Neutral: Hold
Rear: Release |
| · Grapple bucket
Front: Grip
Neutral: Hold
Rear: Release | · Hydraulic excavator with multi-purpose crane
Front: Wind in
Neutral: Hold
Rear: Wind out |

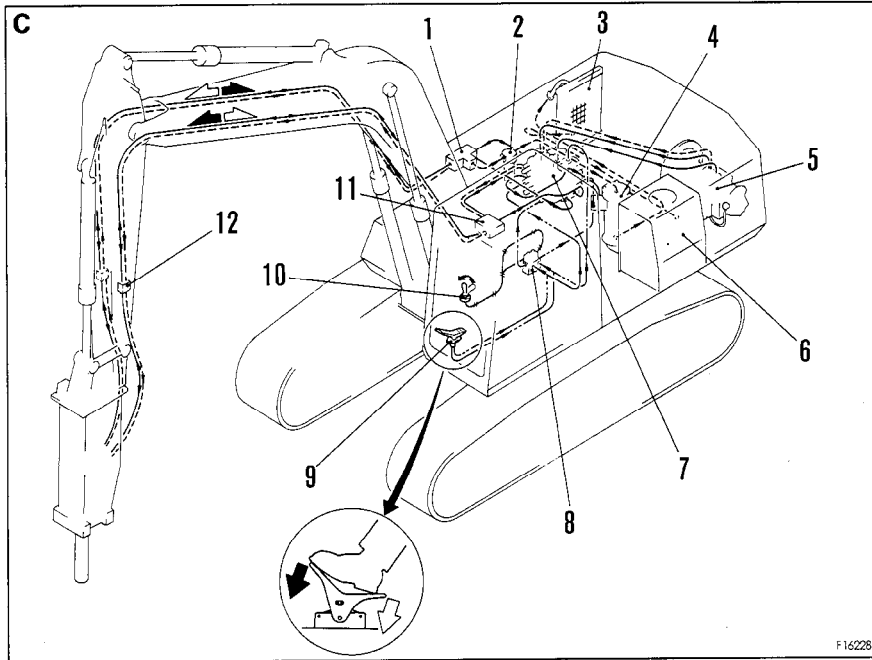

PROCEDURE FOR REMOVAL AND INSTALLATION OF ATTACHMENT



PROCEDURE FOR REMOVAL

1. Lower the attachment to the ground and stop the engine.
2. After stopping the engine, operate each control lever and attachment control pedal to the front and rear, and left and right 2 or 3 times to the end of its stroke to release the remaining pressure inside the hydraulic circuit.
3. After checking that the oil temperature is low, turn the rotor of the stop valves installed to the inlet and outlet piping at the side of the arm to the *OFF position*.
4. Remove the hose from the attachment, then install blind covers to the inlet port and outlet port (2 places).
 - ★ The blind covers are to prevent defective actuation of the attachment caused by the entry of dirt or dust, so fit them securely before storing the parts away.
5. Pull out the mounting pins (2 places), remove the attachment, then install the bucket.
 - ★ For details of the procedure for installing the bucket, see *INVERSION AND REPLACEMENT OF BUCKET* in the operation manual for the standard machine.
6. After installing the bucket, check the oil level in the hydraulic tank.

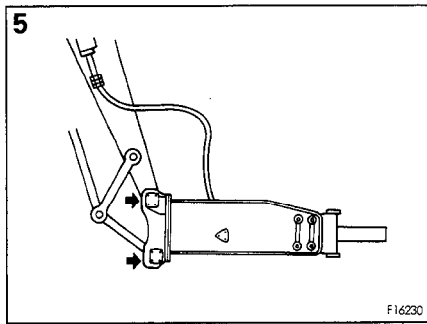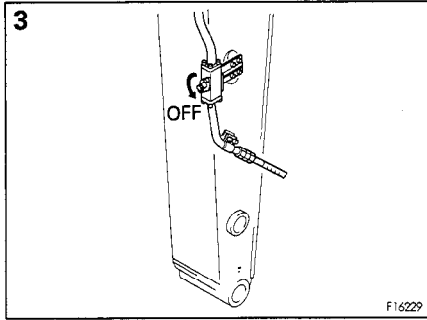

PROCEDURE FOR INSTALLATION

1. Remove the bucket.
- ★ For details of the procedure for removing the bucket, see **INVERSION AND REPLACEMENT OF BUCKET** in the operation manual for the standard machine.
2. Place the attachment in a horizontal position, then install to the arm with pin (A) and then pin (B).
3. After installing the attachment, stop the engine. Then operate each control lever and attachment control pedal to the front and rear, and left and right 2 or 3 times to the end of its stroke to release the remaining pressure inside the hydraulic circuit.
4. After checking that the oil temperature is low, remove the blind covers from the inlet port and outlet port (2 places).
 - ★ Be careful that no dirt or mud is stuck to the hose joint.
If the O-ring is damaged, replace it with a new part.
5. Turn the rotor of the stop valves installed to the inlet and outlet piping at the side of the arm to the ON position.
6. After installing the attachment, check the oil level in the hydraulic tank.

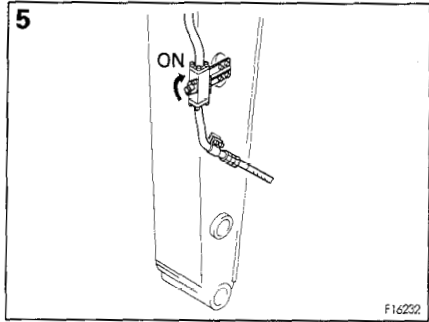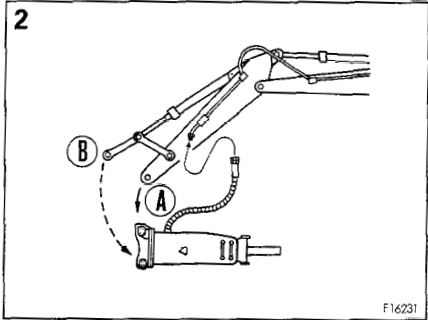


PERIODIC MAINTENANCE

EVERY 250 HOURS SERVICE

When the attachment has been used for 250 hours, replace the additional filter element as follows.

a. REPLACE ELEMENT OF ADDITIONAL FILTER IN RETURN CIRCUIT

1. Remove the cap from oil filler port (F).
 2. Loosen drain plug (P) of additional filter (1), and drain the oil from inside the filter case.
 3. Remove the filter case, and take out the element.
 4. Clean the removed parts, then install a new element.
- ★ By installing an additional filter, the element of the hydraulic filter can be changed at the normal time (250 hours) (see EVERY 250 HOURS SERVICE in the operation and maintenance manual for the standard machine).

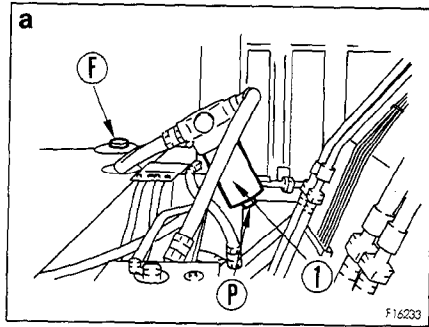

WHEN REQUIRED

a. CLEAN INSIDE OF COOLING SYSTEM

The proportion of water and antifreeze is determined according to the table below.

Mixing rate of water and antifreeze

Min. atmospheric temperature (°C)	-5	-10	-15	-20	-25	-30
Amount of antifreeze (ℓ)	3.7	4.9	5.8	6.7	7.5	8.1
Amount of water (ℓ)	12.4	11.2	10.3	9.4	8.6	8.0

★ The specified amount of cooling water in the cooling system is 16.1 ℓ.

For details of the method of cleaning, see the operation and Maintenance Manual for the standard machine, WHEN REQUIRED.

b. CHANGE OIL IN HYDRAULIC TANK

When a hydraulic breaker is installed, the hydraulic oil deteriorates much faster than when carrying out normal bucket digging operations, so change the oil as shown in the diagram on the right.

(a): Hydraulic oil change interval curve


(b): Change interval (Hours)

(c): Breaker operation rate (%)

(d): (When not using breaker)

(e): (Using only breaker)

For details of the method of changing, see the Operation and Maintenance Manual for the standard machine, EVERY 2000 HOURS SERVICE.

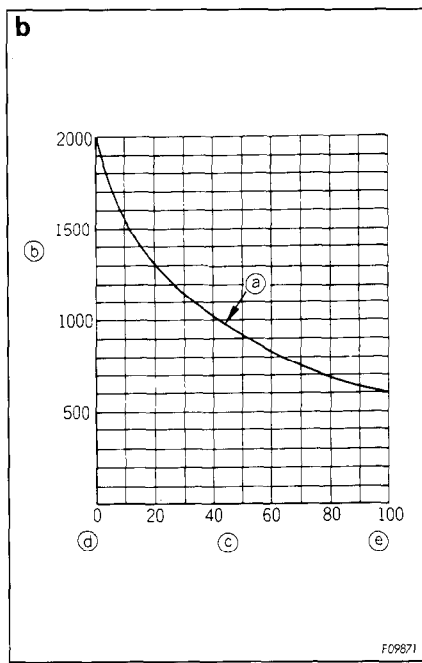

ADJUSTING PEDAL




Adjust the pedal as follows.

1. Lock the pedal with lock pin (1).
 2. Loosen locknut (2), and adjust the clearance between adjustment bolt (3) and rocker arm (4) to 0.5 mm.
- ★ Adjust the opposite side in the same way.

LONG-TERM STORAGE

When the machine is not to be used for a long time, do as follows.

1. Fit blind plugs and O-rings to the attachment joints.
2. Lock the pedal with lock pin (1) so that it does not move.

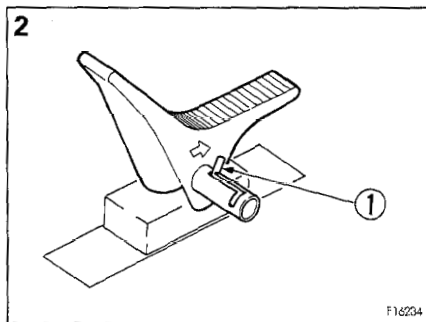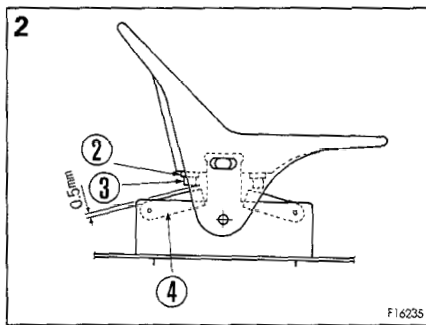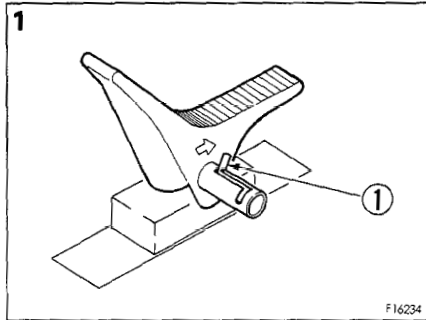

SAFETY AND OPERATION



CONTENTS




SAFETY HINTS . . . ▲	2
RADIO	18
LOCKING CAP	22
OPERATING THE CAR COOLER	24
OPERATING THE AIR CONDITIONER (EXCEPT PC200, 200LC-5 MIGHTY)	28
EXCAVATOR'S WORK	36
HANDLING OF BATTERY	38
METHOD OF LIFTING CHASSIS	44
TRANSPORTATION	46
PRECAUTIONS FOR MAINTENANCE	48
STORAGE	54
COOLANT AND LUBRICANTS	56

SAFETY HINTS . . .

OPERATION







GENERAL

1. Wear well-fitting helmet, safety shoes and working clothes. If the nature of the work requires safety, wear protective goggles or mask, thick gloves, ear plugs or other protection.
2. Accidents or injuries are liable to occur when the operator is careless or slack. It is most important to bear safe operation in mind at all times.
3. Take care of your health. Do not operate when tired, or after drinking.
4. Learn the prohibitions, cautions and rules about work procedures in the work site.
When there is a leader, fix standard signals and always follow these signals when operating.
5. If there should be an accident or fire or any other such unexpected mishap, deal with it quickly, using the nearest apparatus.
Learn beforehand the locations of the first aid boxes and fire extinguishers and how to use them. It is also important to know the emergency contact system.
6. Learn about the safety devices on your own machine and about how to use them. Confirm that they are correctly attached in the prescribed position. Such safety devices include:
 - ★ Protective-Devices
 - ★ Seat Belts
7. Exhaust gas is dangerous. When running the engine for long periods in a poorly ventilated area, there is a danger of gas poisoning, so open the windows or doors to ensure a good supply of fresh air.
8. Read the Operation and Maintenance Manual carefully. Learn how to use the control devices, gauges and warning devices. Be sure you understand the meaning of the caution plates. Remember the check points and checking method for engine oil, fuel, cooling water and hydraulic oil levels.
9. When operating inside a building always be sure of the clearance of the ceiling, entrances, aisles, etc. and the load limit of the floor.
10. Never allow other person than the operator to ride on the machine during operation.

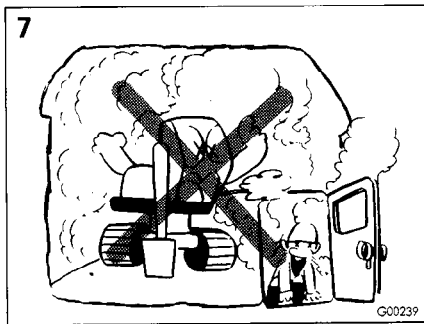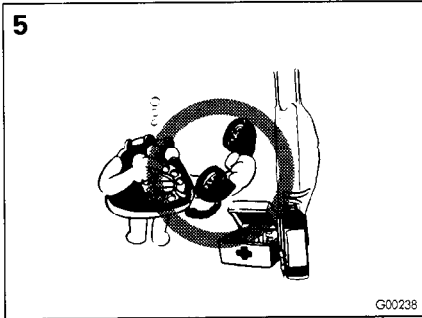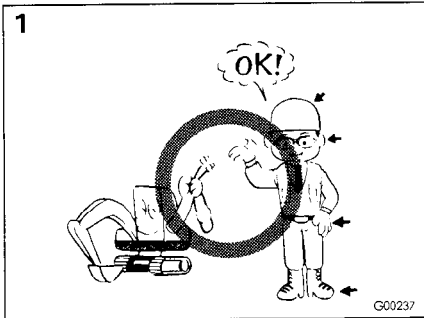


BEFORE STARTING OPERATION

1. Examine the lay of the land and the kind of soil at the work site to determine the dangerous points and the best method of operation.
Proceed with the work only after making safety arrangements about the dangerous points.
2. Inspect leakages from the fuel, lubricating and hydraulic systems. Repair any fuel or oil leakage, and wipe off all dirty oil. Check that the shoe bolts are not loose, and that no other parts are damaged or missing. Machines having such failures should not be operated.
3. When getting on or off the machine, use the handrail provided. Do not jump up or down from the machine.
4. Do not leave parts or tools lying around in the vicinity of or on the floor of the operator's cab. Keep everything in its proper place.
5. Wipe off thoroughly any grease, oil or mud on the handrail, floor or control levers. Failure to do this may cause you to slip.
6. Check the level of the fuel, lubricants and cooling water. Extinguish cigarettes before checking or replenishing. Check that the radiator cap and each oil filler caps or plugs are firmly tightened.
7. Adjust the operator's seat until it is in the most comfortable position for operating. Always sit in the seat while operating. Do not operate the machine from any other position.
8. To ensure the safety of workers near the machine, always sound the horn to warn them before starting the engine and moving the machine. Be particularly careful to check that the rear is clear before backing the machine.
9. Combustible objects such as pieces of wood, dead leaves, and pieces of paper may cause fire, so inspect the inside of the engine room and remove them.
10. Before starting the engine, confirm that all control levers are in NEUTRAL.

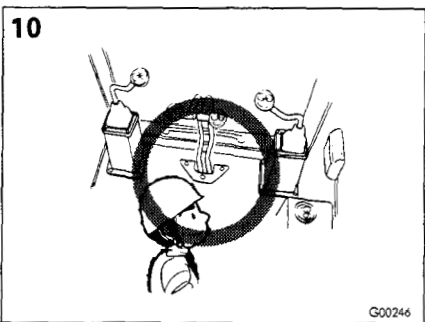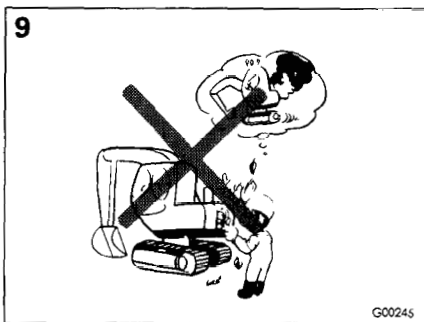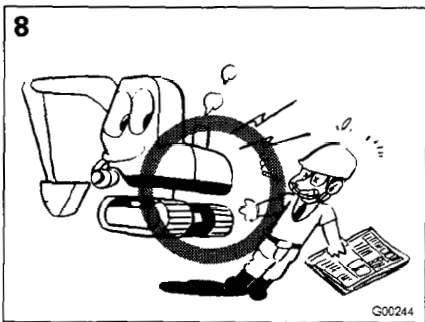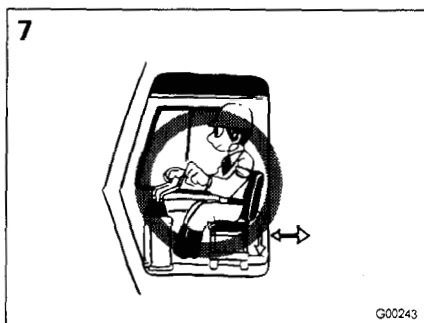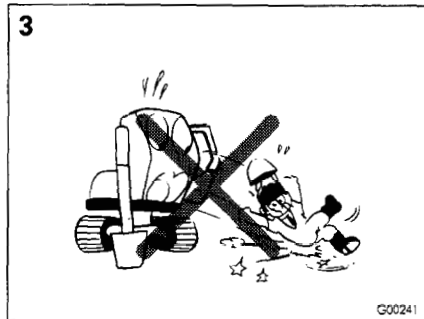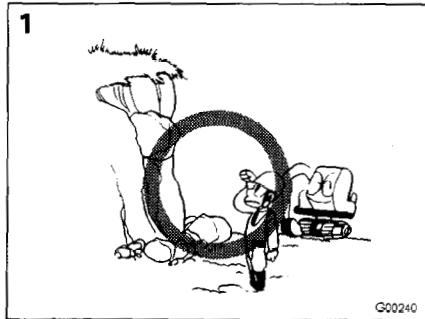









AFTER STARTING THE ENGINE

1. Confirm that all gauges and warning devices are functioning correctly, and that the gauge readings are within the prescribed range.
2. Check the play and travel of each lever.
3. Operate the work equipment to confirm that they are functioning normally.
4. Before operating the traveling and steering levers, check whether the track frame is forward or backwards. If the track frame is facing backwards, operate the traveling and steering levers in the reverse manner to that when the track frame is facing forward.
5. Move the machine slowly and listen carefully to the engine or gears to confirm that they are not making any unusual noises.
6. Choosing a safe place, turn the machine to the left and right to confirm that the traveling and steering levers are functioning normally.
7. If these tests reveal anything wrong, however slight it may be, contact the man in charge of the machine and operate the machine only after obtaining his permission.

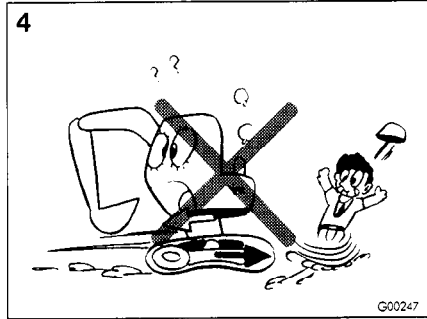








DURING OPERATION

1. Maintain the bucket at a height of 40 to 50 cm above the ground so that it can be quickly lowered to the ground and the machine stopped in an emergency.
2. As far as possible, operate the machine so that it does not tilt. (Do not tilt it by more than 35° in either the forward, rear, left or right directions, even under static conditions.)
3. Always operate slowly in crowded places. On haul roads or in narrow places, give way to loaded vehicles.
4. Do not allow unauthorized persons into the work area.
5. Before reversing or turning, ensure that there is nobody in the vicinity. Also, be careful of obstacles.
6. When operating on slopes, as far as possible, avoid turning the machine on a slope. It may cause the machine to roll over or slip sideways.
7. When operating the machine along a road, retract the work equipment to improve machine stability. As far as possible proceed along a flat road.
8. The machine should always be operated at a speed where it can be correctly controlled. Never do the following:
 - 1) Speeding
 - 2) Sudden starting, sudden braking, sudden turning.
 - 3) Snaking
 - 4) Coasting
9. When operating on uneven ground or in places where there are obstacles, remember the following points:
 - ★ Operate at as low a speed as possible and avoid sudden changes in direction.
 - ★ Wherever possible, avoid traveling over large rocks, fallen trees, tree stumps and other such obstacles. Either use the work equipment to remove them, or travel round them.
When it is impossible to avoid traveling over them, reduce speed and mount over the obstacle. Just before the front of the machine tips down, reduce speed even more to make the shock of hitting ground as small as possible.
 - ★ Never mount over an obstacle at an angle; never disengage one traveling and steering lever to travel over an obstacle.
10. The machine condition can be judged from many factors. Changes in the gauges, sound, vibration, exhaust gas color or response of the control levers can indicate the occurrence of some disorder. If any disorder occurs, park the machine immediately in a safe place and take appropriate action. Be especially careful in the case of a fuel leak as there is danger of fire.
11. The work area should be made as flat as possible. If the work area is flat, operation is made much easier and this reduces operator fatigue.

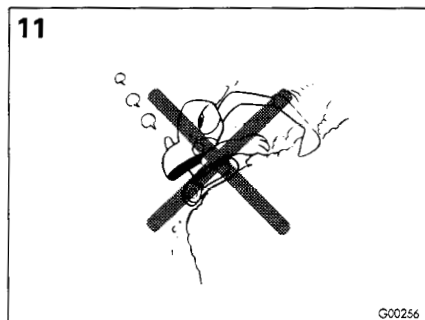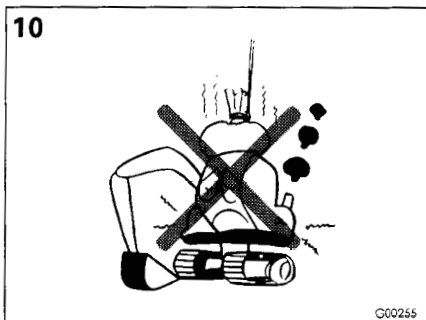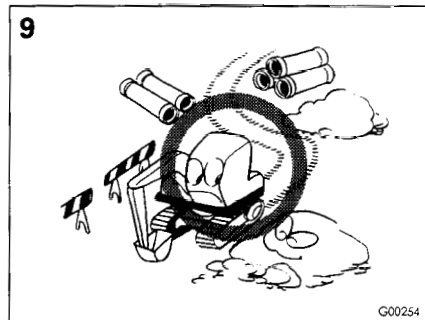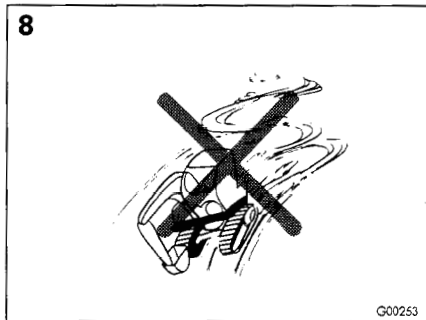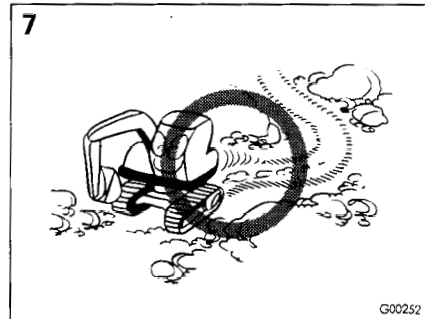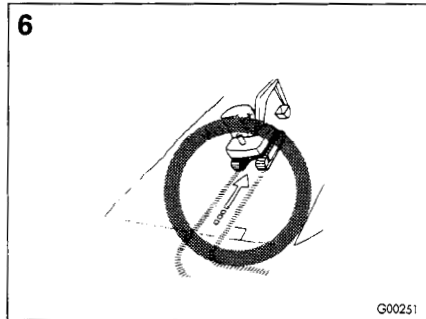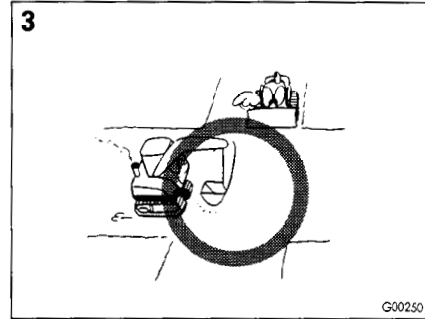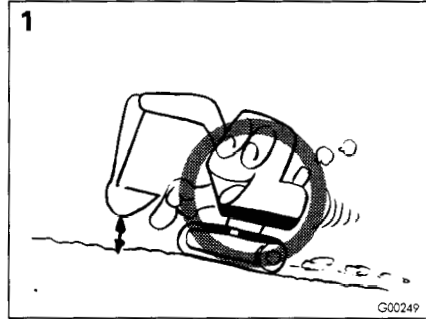

12. Always concentrate. It is extremely dangerous to allow yourself to be distracted or to think of other things when operating a machine. In dangerous places, or where there is restricted visibility, it is important to get down from the machine and confirm whether it is safe before continuing work.
13. Be careful of those around you, and always confirm that there is no person or obstacle in the way before moving or turning the machine.
14. When using the work equipment, be sure to keep your eyes on it all the time. Failure to do this may result in an accident.
15. When passing through a narrow space, be careful of the side and overhead clearances. Take special care not to touch any obstacles on either side or overhead. If necessary, have someone outside the machine call out instructions.
16. Be careful not to operate the machine into a bog. In the event that the machine goes into a bog, extract it in the following manner;
 - 1) If only one track of the machine is in the bog, push the bucket down against the ground on the side of the machine which is stuck so as to float the track. Then place logs or timber underneath the track and free the machine.
 - ★ When raising the undercarriage by means of the boom or arm, push the bottom of the bucket against the ground (on no account use the teeth) until the angle between the boom and the arm is 90° to 110°.
 - 2) If both tracks of the machine are in the bog and slip, preventing the machine from getting in, place logs or timber under the tracks in the manner described in 1), then thrust the bucket into the soil in front of the machine and drag it out by bending the arm in the same manner as when excavating and putting the traveling and steering lever into the forward position.
17. After earthquakes, confirm that the ground is still firm; after blasting, confirm that there are no unexploded charges remaining.
18. When working on river embankments or other places made of piled soil, there is the danger that the weight of vibration of the machine may cause the machine to sink into the piled soil, so be extremely careful when operating in such places.
19. When continuing operations after rain, remember that conditions will have changed from those before the rain started, so proceed with caution.

Be particularly careful when approaching the shoulder of the road of cliffs, as they may have been loosened by the rain.
20. Check the load limits of bridges before crossing.
21. When working in water or marshy ground, be careful of the following:
 - ★ When working on soft ground, place thick boards on the ground to prevent the machine sinking. Place the boards horizontally and arrange them as neatly as possible.

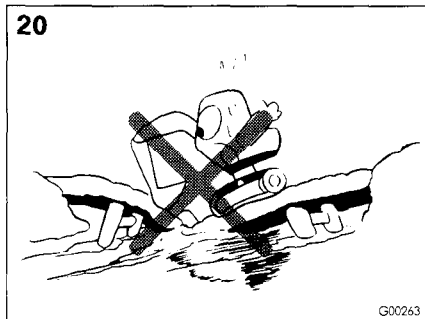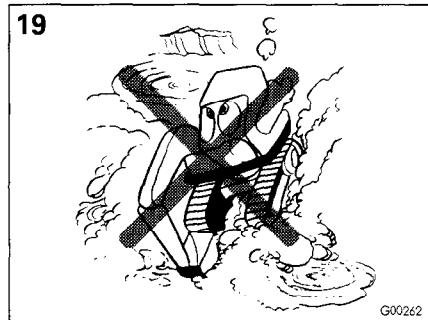
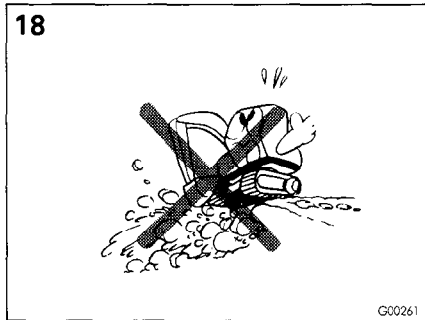
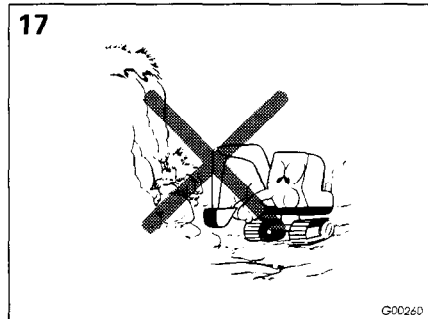
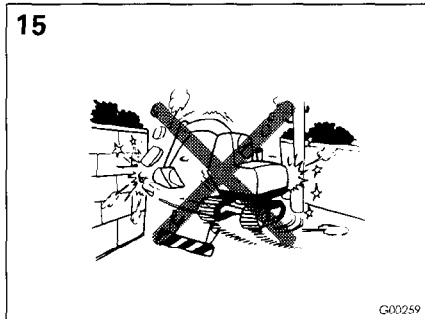
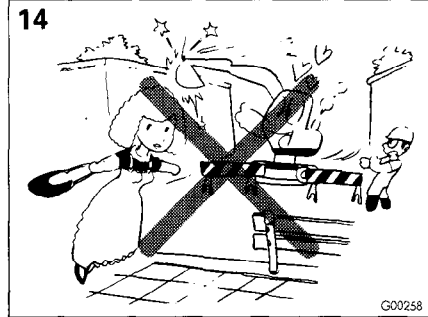
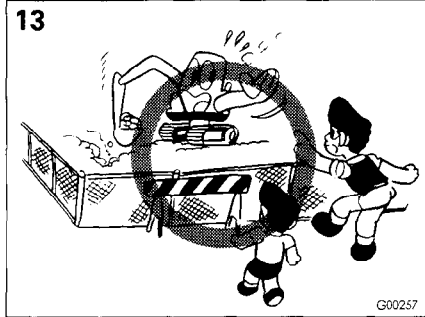


22. When operating in water or when crossing shallows, first check the bed soil condition and the depth and flow speed of water, then proceed, taking care not to go beyond the permitted depth.
 - ★ First check the water depth, the firmness of the ground and the strength of the current. Do not enter if the water exceeds the permissible depth (up to the bottom of the swing circle).
23. When operating in fog, mist or smoke, where visibility is bad, be especially careful to confirm first whether operation is safe.




When visibility drops below safety level, stop work and wait for the visibility to improve.
24. When operating at night, remember the following points:
 - ★ Be sure to arrange an adequate lighting system.
 - ★ At night it is very easy to make mistakes in assuming the distance and height of objects and land.
25. Be very careful not to touch electric wires, always bearing in mind that there is a possibility of receiving an electric shock.
 - ★ Wear rubber or leather soled shoes.
 - ★ Position a full-time watcher at the site to ensure that operator is not exposed to the risk of electric shock.
- ★ Depending upon the supply voltage it is conceivable that an electric shock may be received by merely coming into the vicinity of an electric feeder wire. Accordingly, observe the minimum distances given in the table below, taking into account the inertia of the boom when in motion.

Supply voltage (number of insulators)	Minimum safe separation
6.6 kv (distribution line)	3 m
33.0 (1 to 3 insulators)	4 m
66.0 (5 to 8 insulators)	5 m
154.0 (10 to 18 insulators)	8 m
275.0 (16 to 30 insulators)	10 m

- ★ Become familiar with the necessary measures to be taken in the event that a operator receives an electric shock.
26. Do not perform excavation at the bottom of a precipice as it is dangerous practice.
 27. If it is unavoidably necessary to operate the work equipment lever when traveling the machine in the vicinity of a precipice, road shoulders, on sloping ground or through a confined space, stop the machine momentarily before operating the work equipment lever in order to minimize danger.
 28. When working on loose, crumbly soil, do not dig deeply and back the machine off smartly. If the ground crumbles, preventing the machine from getting away in time, do not panic and raise the work equipment. It is often better in the interests of stability to leave it down.

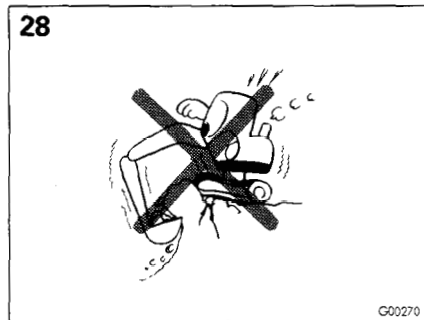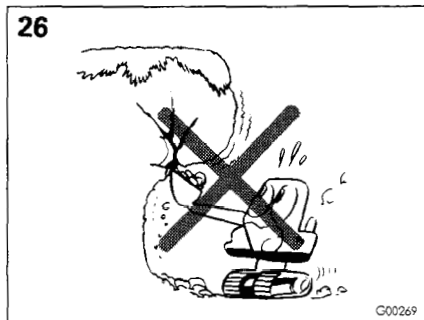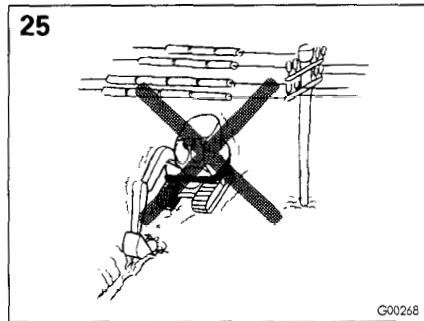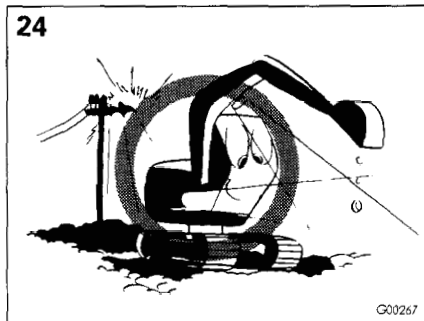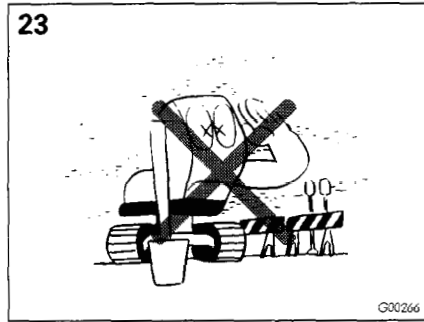
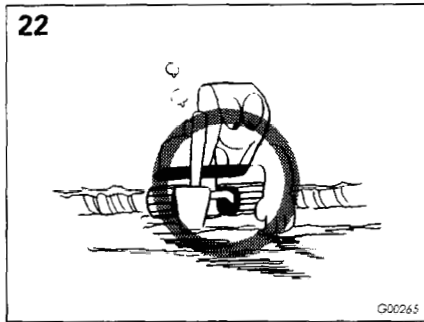


29. Do not undercut the machine, unless absolutely necessary.
If necessary, always take care to prevent the machine falling.
30. When operating at the edge of a cliff or on the shoulder of a road, remember the following points:
 - ★ When operating in a place where there is danger of the machine falling over the side, be doubly careful. Do not approach the edge of the cliff or road shoulder by mistake.
31. If you suspect that there are buried facilities (water or gas pipes, etc.) at the work site, check with the companies responsible for looking after such facilities and also try a different method of excavation. Then, after confirming the existence and location of such facilities, carefully carry out excavation work.
32. Take care not to swing the bucket against the sides of trenches or dump trucks. Load the truck from the rear.

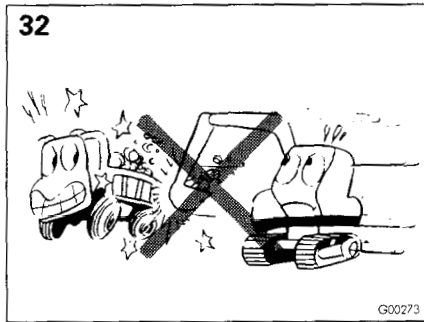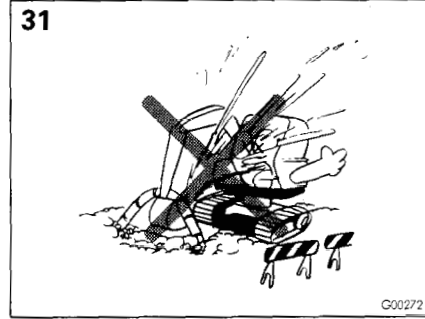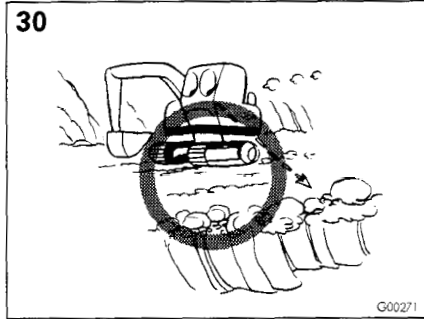

PARKING

1. When parking the machine, park it in a safe place outside the working area, or in the specified place. The following factors should be considered when choosing a parking place: it should be on flat, firm ground where there is no danger of rockfalls, landslides or floods. If the machine has to be parked on a slope, it should be parked facing directly up or down the slope, and chocks should be placed under the tracks. When the machine is facing downhill, lower the bucket so that it cuts slightly into the ground to further increase the safety.
2. If it is absolutely necessary to park the machine on a slope, park it facing downhill and put chocks against the tracks. If the ground is soft enough, dig the bucket into the ground for added safety.
3. When parking the machine, return the work equipment levers to neutral, apply the brake lock, lower the bucket to the ground, and put all safety levers in the lock position. Switch off the engine and remove the key.
4. Before leaving the machine, carry out the following:
 - ★ Apply the swing lock.
 - ★ Lower the bucket to the ground.
 - ★ Put the work equipment lever in neutral and lock it.
 - ★ Stop the engine and remove the key to prevent other people using the machine.
 - ★ Lock the cab.

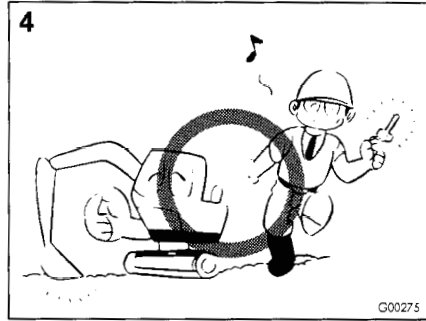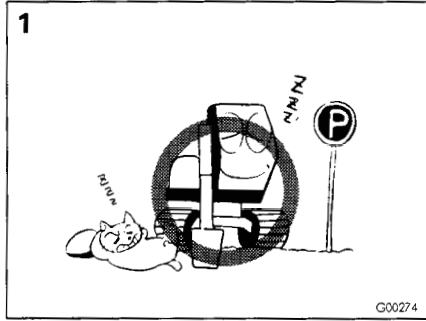

RADIO

A: TUNING KNOB

Turn this knob in to the desired station.

Turn right in to the station. If the tuning is off center, the sound quality will be unnatural and sensitivity will be reduced.

B: TONE CONTROL

Use this knob to adjust the tone as desired.

When it is turned to the right the high tones will be emphasized, and when it turned to the left the high tones will be cut, resulting in a mellow tone.


C: POWER SWITCH/VOLUME CONTROL

Press the knob to turn on (or off) the radio. When it is turned to the right, the sound level will increase, and vice-versa.

D: STATION SELECTOR BUTTONS (5 buttons)

By pressing these buttons it is possible to tune in to preset stations.

E: POINTER

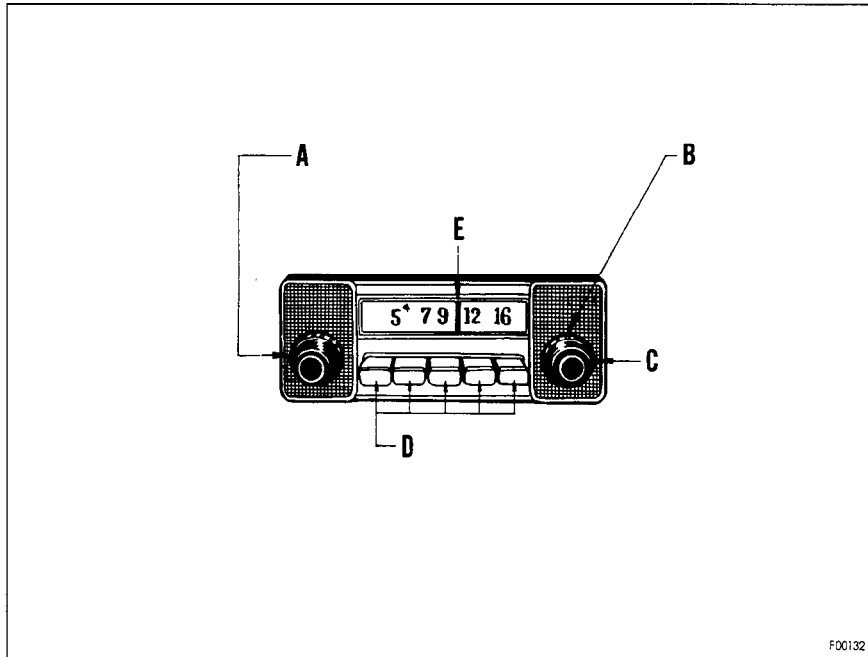

How to set station selector buttons

Set the station selector buttons to the desired stations as shown in the following figure.

1. Pull back the button corresponding to the station to be preselected.
 2. Turn the station selector knob until the pointer is in front of the desired station. (Carefully tune in so that noise disappears and the broadcast is heard plainly.)
 3. Carefully push back the button with the fingertip until it clicks into place.
- ★ When setting the turning selector to a strong station, shorten the antenna to reduce the input as far as possible before carrying out alignment.

Precautions when using radio

- To prevent possible breakdown, keep water well away from the speaker case and interior of the radio. In particular, close the window during rain or when washing the machine.
- Do not wipe the dial plate or knobs with benzine or paint thinners, etc. Always use a dry, soft cloth (if the radio is particularly dirty, soak the cloth in alcohol).
- Do not disassemble the radio.

Trouble shooting guide




No sound

- Turn the SW/VOL knob to the right and press it two or three times.

Sound quality is poor.

Reception is noisy.

- Return using the station selector knob. If the problem disappears, reset the tuning button.
- Try lengthening the antenna to its fullest extent.

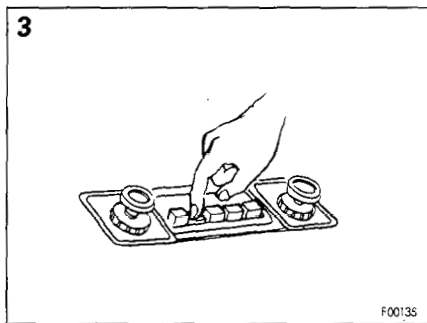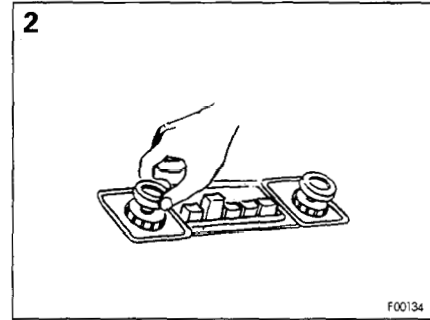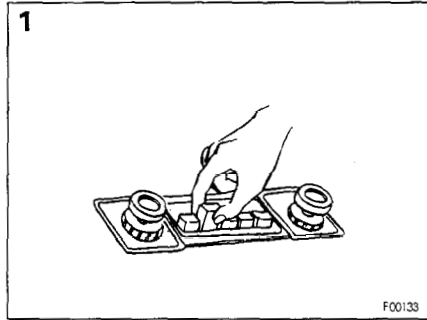

LOCKING CAP

Locks are installed to the fuel tank filler cap, hydraulic tank filler cap, operator's cab, left side door (rear), and engine hood.

★ Use the starting key to open and close the cap.

Open and close locking cap as follows:

(For the fuel tank filler port)

A: To open the cap

1. Insert the key into the cap.

(a): OPEN

(b): LOCK

2. Turn the key clockwise, align the match mark on the cap with the rotor groove, then remove the cap.

B: To lock the cap

1. Turn the cap into place.

2. Turn the key counterclockwise and take the key out.

(For the hydraulic tank filler port)

C: To open the cap

1. Insert the key into the cap.

(a): LOCK

(b): OPEN

2. Turn the key counterclockwise and bring the rotor groove in line with the aligning mark on the cap. Turn the cap slowly until a "clicking" sound is made. This releases the lock and allows the cap to be opened.

(a): Aligning mark

D: To lock the cap





1. Turn the cap into place.

2. Turn the key clockwise and take the key out.

★ When the cap is locked (against vandalism), it rotates freely.

★ Insert the key as far as it will go. If the key is turned before it is inserted all the way, it may break.

(a): Shoulder

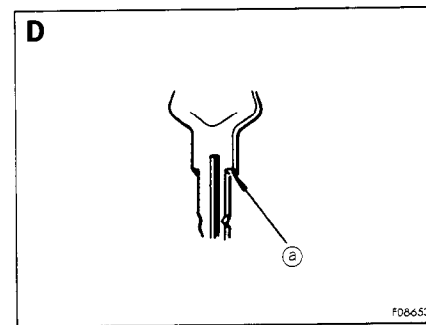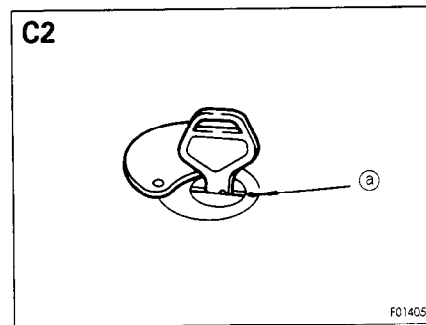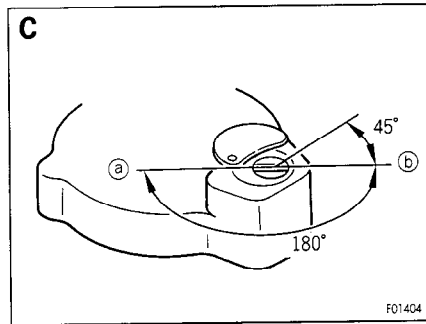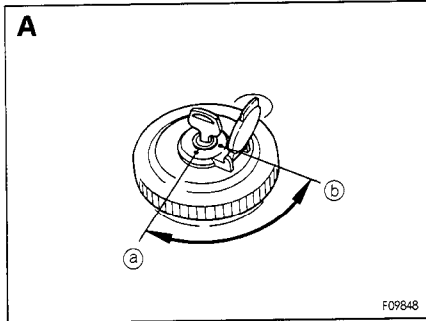

OPERATING THE CAR COOLER

CONTROL PANEL

① **Air flow control knob**


Turn from LO to MED or HI to increase the air flow.

② **Temperature control knob**

Turn the knob clockwise to give a lower room temperature.

For efficient use

- ★ If the inside of the operator's cab is hot after the machine has been parked for a long time in the sun, open the windows and doors fully to *cool the operator's cab before switching on the cooler.*
- ★ When using the cooler, make sure that the windows and doors are properly shut.
- ★ If there is dirt or mud on the condenser, the cooler will not cool properly. *When washing or checking the machine, always remove all dirt and mud from the condenser, to ensure a good flow of air.*
- ★ For reasons of health, the temperature inside the cab should not be adjusted too low. As a general rule, the temperature should be kept at a maximum of 5 to 6°C below the outside temperature, enough to feel cool when entering the cab.

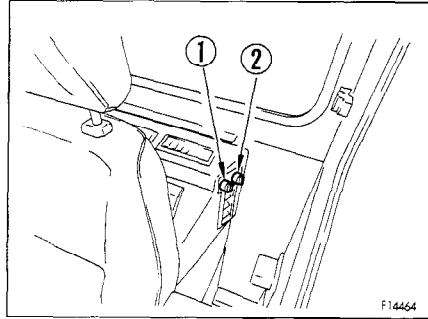

CHECKING AND MAINTAINING CAR COOLER


a. Check volume of refrigerant (gas)

If there is a lack of refrigerant, the cooling performance will be poor.

When operating the cooler at high speed, there should be no bubbles in the sight glass (inspection window) mounted on the condenser unit receiver.

If there are any bubbles, there is a lack of gas, so have to add refrigerant at a shop.

- (a): Sight glass
- (b): No refrigerant
- (c): Lack of refrigerant
- (d): Correct amount of refrigerant

 **The refrigerant used in the cooler is colorless and odorless, and is harmless when released into the atmosphere. However if it gets in the eyes or on the hands, it will be cause of burn or loss of sight, so never loosen any part of the refrigerant circuit.**

b. Clogging of condenser

If there is any dirt or mud stuck to the condenser, there will be a big reduction in the cooling efficiency of the condenser. That will mean a reduction in the cooling capacity, so clean the dirt and mud off and correct any bent fins with a screw-driver.

c. Check during off-season

When the cooler is not being used, run the compressor at low speed for a few minutes every week to avoid loss of oil. (Run the engine at low speed with the cooler temperature control knob at LOW COOL.)

★ In cold weather, do not run the compressor suddenly at high speed. This may cause failure in the compressor. When the temperature is below 2 to 6.5°C, the low pressure cut-off switch functions to stop the compressor from running even when the cooler switch is turned on.

d. Checking and adjusting V-belt tension

Checking




The slack should be 8 to 13 mm when pushed with a finger force of about 6 kg midway between the compressor pulley (1) and the crankshaft pulley (2).

(3): Water pump pulley

(4): Alternator pulley

Adjustment

To adjust, loosen bolt (5), then loosen locknut (6) and move adjustment bolt (8) with nut (7) to move the compressor.

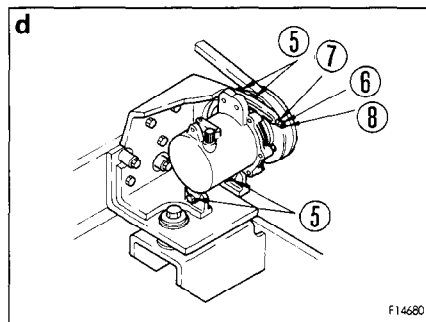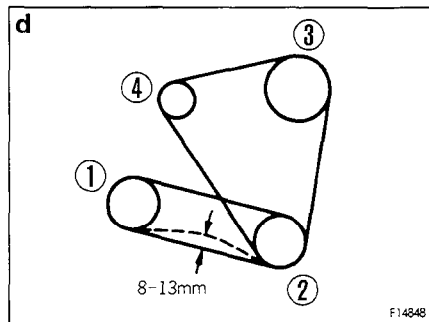
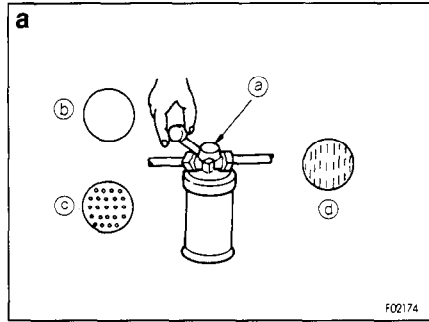


OPERATING THE AIR CONDITIONER (EXCEPT PC200, 200LC-5 MIGHTY)

CONTROL PANEL

① Outlet change-over knob

- Switches over air outlets

Knob position	Air outlet	Purpose
FOOT 	Floor	Heating Dehumidity
FACE 	Rear	Cooling

② Heater temperature knob

Controls heating temperature

- The nearer to WARM MAX. the knob goes, the higher heater outlet air temperature will be.
- At OFF position, water valve will be closed and heating function will stop.

③ Blower switch

Used for both controlling the air flow in cooling and heating and as the main switch.



- Changeable at three steps; low, medium and high.
- Placing knob in OFF cuts off the power supply and stops the air conditioner.

④ Cooler temperature knob

The temperature is controlled with this knob for cooling.

It is also the cooler switch.

- Move the knob towards LOW to decrease the output air temperature.
- When the knob is moved to OFF, the cooler switch is turned off and the cooling stops.

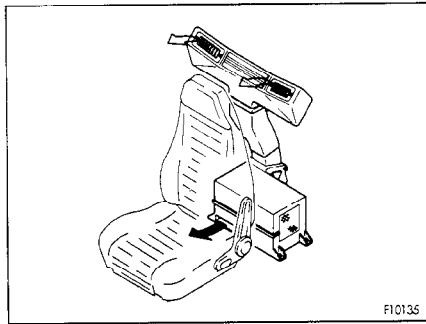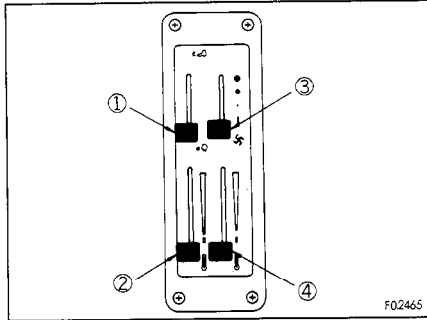

OPERATION

A. Cooling

Set the knobs to the following positions and a cool breeze will be flowed in from the rear vents.

- Outlet change-over knob (1): FACE
- Heater temperature knob (2): OFF
- Blower switch (3): See table below.
- Cooler temperature knob (4): See table below.



Control knob	Blower switch (3)	Cooler temp. knob (4)
Purpose		
Quick cooling	HIGH	HIGH
Normal cooling	MEDIUM-LOW	MEDIUM
Gradual cooling	LOW	LOW

B: Heating

Set the knobs to the following positions, then warm breeze will be flowed in to the feet.

- Outlet change-over knob (1): FOOT
- Heater temperature knob (2): See table below.
- Blower switch (3): See table below.
- Cooler temperature knob (4): OFF

Control knob	Heater temp. knob (2)	Blower switch (3)
Purpose		
Quick heating	HIGH	HIGH
Normal heating	MEDIUM	MEDIUM or LOW
Mild heating	LOW	LOW

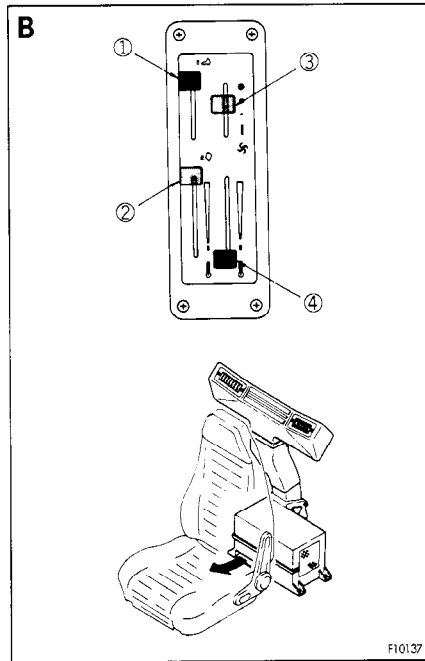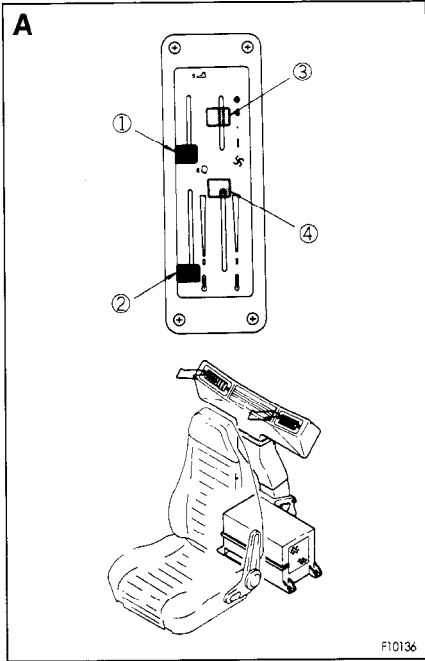

C. Dehumidity and heating

Set the knobs to the following positions and a dry, fresh, warm breeze will be flowed from the vents at operator's feet.


- Outlet change-over knob (1): FOOT
- Heater temperature knob (2): See table below.
- Blower switch (3): See table below.
- Cooler temperature knob (4): HIGH

	Control knob	Heater temp. knob (2)	Blower switch (3)
Purpose			
Dehumidifying and heating	Winter	HIGH	HIGH
	Spring and Autumn	MEDIUM or LOW	MEDIUM or LOW

- ★ If very damp air is used for heating, only hot, humid air will be sent to the cab, producing an unpleasant atmosphere. This air conditioner first cools the air to dehumidify it, and then reheats it to produce the optimum heating conditions. In addition, there is no problem with the windows misting up. This setting is particularly useful in spring, autumn or on rainy days when the air is very damp.
- ★ When the outside temperature is from 2°C to 6.5°C, a low pressure cut switch functions to automatically and switch the compressor off. In this situation it is impossible to use the combination of dehumidifying and heating.

Precautions for using air conditioner

- When cooling, change the air occasionally.
- Smoking in the air-conditioned cab will cause your eyes to get sore. While smoking, open the window to let the smoke out of the cab.
- While using the air conditioner, open the window once every hour.
- When using the cooler, make sure the hot water circuit is completely stopped.
- If hot water is circulating in the heater, it is like having a hot heater, it is like having a hot water bottle in the cab. Always make sure the heater temperature knob is at the OFF position.
- When not using the heater for a long period, fully close the hot water outlet and inlet valves under the engine water manifold and radiator.
- Be careful not to overcool the cab. The cab should feel cool when entering there from outside (5°C or 6°C lower than the outside temperature). It is unhealthy to have the temperature in the cab too low. Always give careful consideration to temperature regulation.

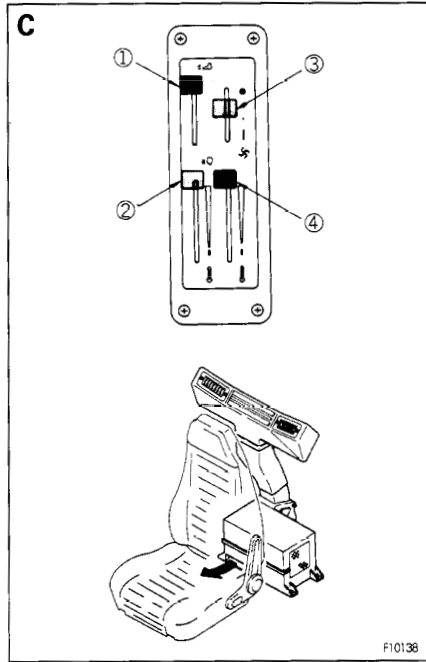

INSPECTION AND MAINTENANCE

A. Clean air filter

If the air filter inlets is clogged, the heating or cooling capacity will drop.

Clean the air filter with compressed air once a week.

B. Check tension of compressor belt.

If the belt is loose, it will slip and the air conditioner will not be able to cool properly.

Periodically press the mid-point of the belt with the finger and check that the deflection is 15 to 18 mm.

When the belt is new, it is particularly liable to stretch, so always adjust it after 2 to 3 days.

(a): Compressor pulley

(b): Drive pulley

C. Check volume of refrigerant (gas)

If there is a lack of refrigerant, the cooling performance will be poor.

When operating the cooler at high speed, there should be no bubbles in the sight glass (inspection window) mounted on the condenser unit receiver.

If there are any bubbles, there is a lack of gas, so have to add refrigerant at a shop.

(a): Sight glass

(b): No refrigerant

(c): Lack of refrigerant



(d): Correct amount of refrigerant

⚠ The refrigerant used in the cooler is colorless and odorless, and is harmless when released into the atmosphere. However if it gets in the eyes or on the hands, it will be cause of burn or loss of sight, so never loosen any part of the refrigerant circuit.

D: Check during off-season

When the air conditioner is not being used, run the compressor at low speed for a few minutes every week to avoid loss of oil. (Run the engine at low speed with the cooler temperature regulator knob at LOW COOL.)

★ In cold weather, do not run the compressor suddenly at high speed. This may cause failure in the compressor. When the temperature is below 2 to 6.5°C, the low pressure cut-off switch functions to stop the compressor from running even when the air conditioner switch is pressed.

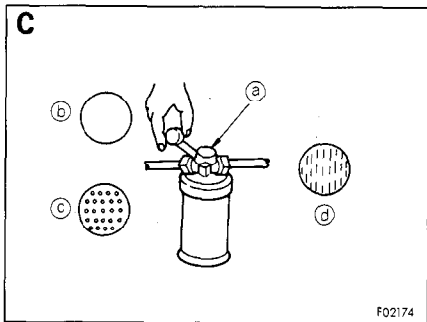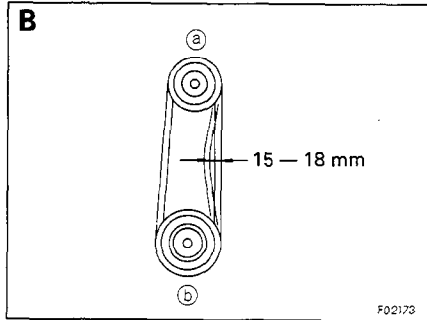

EXCAVATOR'S WORK

In addition to the following, it is possible to further increase the range of applications by using various attachments.

A: BACK HOE WORK

A back hoe is suitable for excavation at a position lower than the machine. It is possible to effectively move the arm through 30° in the direction towards the machine and 45° in the direction away from the machine, making for efficient work.

B: SHOVEL WORK

A shovel is suitable for excavating at a position higher than the machine. Shovel work is performed by attaching the bucket in the reverse direction.

C: LOADING WORK





About half of the time spent during excavating and loading work is taken up swinging. Maximum work efficiency can be attained by carrying out work in such a way that the swinging angle is kept as small as possible in accordance with the terrain.

When loading, it is better to fit the machine in the longitudinal direction of the dump truck and to load from the front of the dump truck body. This both facilitates loading and also enables a greater amount of material to be loaded as compared with loading from the side of the truck.

D: DITCH DIGGING WORK

Ditch digging work can be performed efficiently by attaching a bucket to match the width of the ditch and then setting the tracks parallel to the line of the ditch to be excavated.

To excavate a wide ditch, first dig out both sides and then finally remove the center portion.

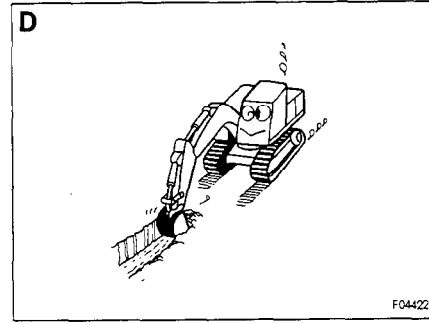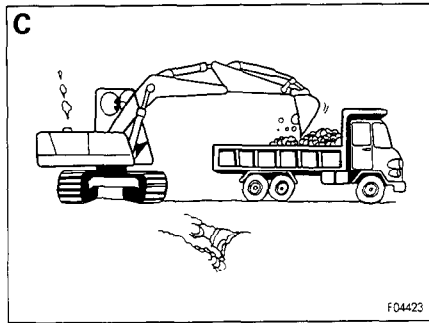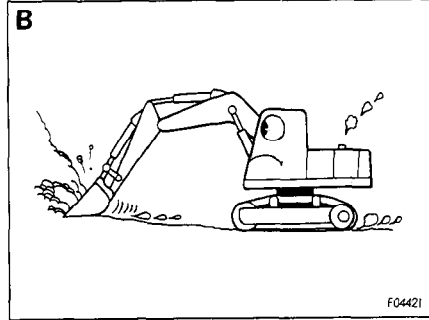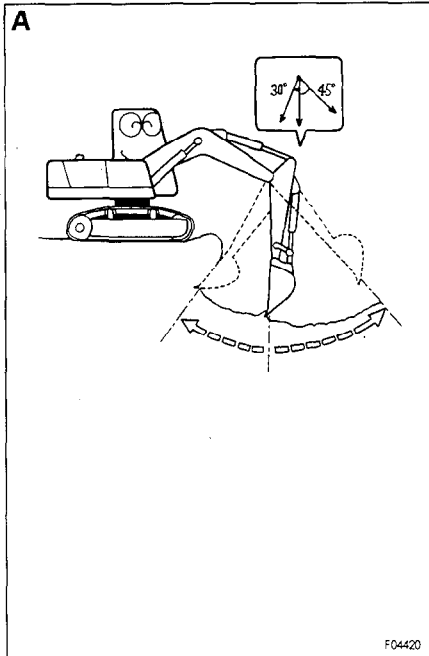


HANDLING OF BATTERY

A. PRECAUTIONS FOR CHARGING BATTERY

1. Before charging, disconnect the cable from the negative (—) terminal of the battery. Otherwise, an unusually high voltage will damage the alternator.
2. While charging the battery, remove all battery plugs for satisfactory ventilation.

 **To avoid gas explosions, do not bring fire or sparks near the battery.**

3. If the electrolyte temperature exceeds 45°C, stop charging for a while.
4. Turn off the charger as soon as the battery is charged.
Overcharging the battery may cause followings:
 - 1) Overheating the battery
 - 2) Decreasing the quantity of electrolyte
 - 3) Damaging the electrode plate

 **If the electrolyte gets on your skin or clothes, immediately wash with plenty of clean water.**

5. Do not mix up cables (positive (+) to negative (—) or negative (—) to positive (+)), as it will damage the alternator.
6. When inspecting or servicing a battery, be sure to stop the engine and turn the starting switch key to "OFF" position.
7. When performing any service to battery besides checking the electrolyte level or measuring the specific gravity, disconnect cables from the battery.

B. REMOVAL AND INSTALLATION OF BATTERY

- When removing the battery, first disconnect the cable from the ground (normally, from the negative (—) terminal). If a tool touches a cable connecting the positive terminal and the chassis, there is danger of sparks being emitted.
- When installing the battery, the ground cable should be connected to the ground terminal as the last step.

C. STARTING ENGINE WITH A BOOSTER CABLE


When starting the engine with a booster cable, do as follows:

1. Before connecting the booster cable
 - 1) Size of booster cable and clip should be suitable for the battery size.
 - 2) Check cables and clips for breaks, corroded surfaces, etc.
 - 3) Make sure cables and clips are firmly secured.
 - 4) Keep the starting switch in the "OFF" position.
 - 5) The battery of the running engine must be the same capacity as that of the engine to be started.

2. Connect the booster cables in the following manner.
 - 1) Connect one clip of booster cable (A) to the positive (+) terminal of the engine to be started.
 - 2) Connect the other clip to the positive (+) terminal of the engine which is running.
 - 3) Connect one clip of booster cable (B) to the negative (—) terminal of the engine which is running.
 - 4) Connect the other clip to the engine block to be started.


★ Make sure the clips are firmly connected to battery terminals. Then, start the engine.

(C): Battery for running engine
(D): Battery for engine to be started
(E): Engine block to be started

 **When connecting the cables, never contact the positive (+) and negative (—) terminals.**

 **Make sure that the booster cable connections are correct. Connect the booster cable to the engine block as far as possible from the battery.**

3. Starting engine
 - 1) Turn the starting switch to START position and start up the engine.
 - 2) If the engine doesn't start at first, try again after 2 minutes or so.

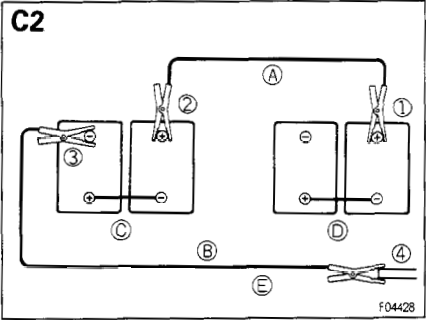

D. After the engine has started, the booster cables should be disconnected in the reverse order in which they were connected.


1. Disconnecting the booster cables

- 1) Disconnect the clip of booster cable (B) from the engine block which was started.
- 2) Disconnect the other clip from the negative (—) terminal of the running engine.
- 3) Disconnect the clip of booster cable (A) from the positive (+) terminal of the running engine.
- 4) Disconnect the other clip from the positive (+) terminal of the engine which was started.

(C): Battery for running engine

(D): Battery for engine which was started

(E): Engine block which was started

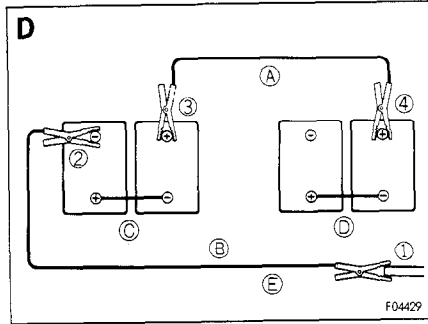

METHOD OF LIFTING CHASSIS

The person performing lifting operations using a crane must have the following qualifications.


When lifting the chassis, do as follows.


1. Set the wire rope to the following lengths:

L = Min. 7 m

- ★ When lifting, pay attention to the position of the center of gravity and be careful to maintain the balance.
2. Set the work equipment with the boom cylinder and arm cylinder fully extended.
When a bucket is installed, extend the bucket cylinder fully, but when a crusher is installed, set it so that it is perpendicular.
 - ★ Never try to lift the chassis with the undercarriage at an angle to the upper structure.
 3. When the chassis comes off the ground, stop and wait for the chassis to stop swinging, and then lift slowly.

 **Never allow any worker to ride on the machine while it is being lifted.**

 **Be sure to use a wire rope that has ample strength for the weight of the machine being lifted.**

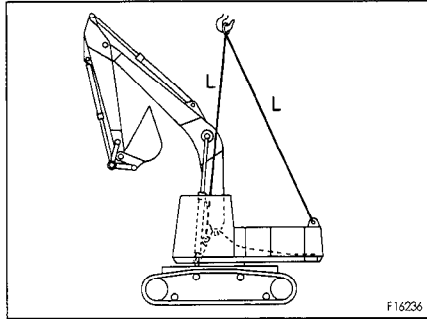

TRANSPORTATION

When transporting the machine, observe the various road rules, road transportation vehicle laws and vehicle limit ordinances, etc. It is a good idea to obtain a special platform for loading and unloading the machine. When it is unavoidably necessary to use a gangplank, however, at the very least observe the following for the sake of safety.

1. Properly apply the brakes on the trailer and insert blocks (a) beneath the tires to ensure that it does not move. Then fix gangplank (b) in line with the centers of the trailer and the machine.
- ★ Make sure the gangplank has sufficient width, length and thickness to enable the machine to be safely loaded and unloaded.
If the gangplank sags appreciably, reinforce it with blocks, etc.
- ★ Make angle (c) of the gangplank a maximum of 15°.
- ★ Set distance (d) between the gangplanks to match the center of the tracks.

⚠ Remove the mud from the undercarriage to prevent the machine from slipping to the side on slopes.



2. Set the travel speed switch to the Lo position.
3. Turn the AUTO-DECEL switch OFF, and return the fuel control dial to reduce the engine speed.
4. Turn the swing lock switch ON to apply the swing lock.
5. Set in the direction of the gangplank, lower the work equipment as far as possible without letting it hit the trailer, then travel slowly to load or unload the machine.
- ★ When on the gangplank, do not operate any lever other than the travel lever.
- ★ When the work equipment is installed, load the machine from the front; when the work equipment is not installed, load the machine from the rear.

⚠ Never change the direction of travel when on the gangplank. If it is necessary to change direction, drive off the gangplank and correct the direction, then drive on to the gangplank again.

6. Load the machine correctly in the specified position on the trailer.
After loading the machine, fully extend the bucket and arm cylinders, then slowly lower the boom.
★ When transporting the machine, place rectangular timber under one end of the bucket cylinder to prevent it touching the ground, thereby saving it from possible damage.
7. When transporting the machine, place rectangular timber underneath the front and rear track shoes to prevent the machine from moving about. Also, hold it down with chains or rope. Be particularly careful to ensure that the machine does not slip sideways.
8. Lock all the control levers securely with the lock lever.

⚠ When loading the machine, park the trailer on a flat firm roadbed. Keep a fairly long distance between the road shoulder and the machine.

- ★ Determine the route for transporting the machine by taking into account the width, height and weight of the machine.

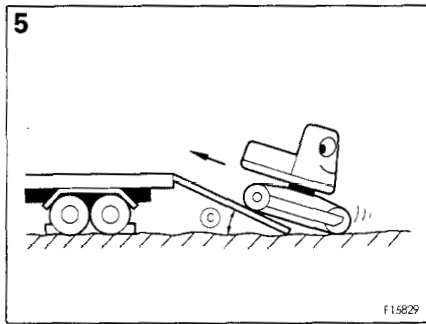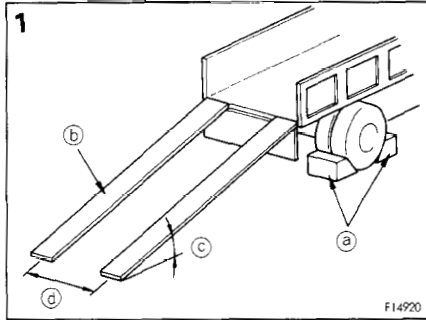








PRECAUTIONS FOR MAINTENANCE

SAFETY ····▲






1. Wear well-fitting helmet, safety shoes and working clothes. When drilling, grinding or hammering, always wear protective goggles.
2. Fuel or oil are dangerous substances.
Never handle fuel, oil, grease or oily clothes in places where there is any fire or flame.
As preparation in case of fire, always know the location and directions for use of fire extinguishers and other fire-fighting equipment.
3. Do not handle electrical equipment while wearing wet gloves, or in wet places, as this can cause electric shock.
4. During maintenance do not allow any unauthorized person to stand near the machine.
5. Exhaust gas is dangerous. When working inside, be particularly careful to have good ventilation.
6. Unless you have special instructions to the contrary, maintenance should always be carried out with the engine stopped. Apply the swing lock lever and also all of the safety levers. If maintenance is carried out with the engine running, there must be two men present: one sitting in the operator's seat and the other one performing the maintenance. In such a case, never touch any moving part.
7. When working underneath the machine, place a sign to that effect on the operator's seat and, if necessary, put a similar signs in the vicinity as well.
8. Do not go underneath the machine after raising it up using the boom and the arm.
9. When working with others, choose a group leader and work according to his instructions. Do not perform any maintenance beyond the agreed work.
10. When maintenance has to be carried out with the work equipment raised, they must be securely supported by blocks.
11. Always remember that the hydraulic oil circuit is under pressure. When feeding or draining the oil or carrying out inspection and maintenance, release the pressure first.

Method of relieving pressure

- 1) Lower the work equipment to the ground and stop the engine after idling it for two or three minutes. Then operate the various operation levers. (work equipment, traveling and steering lever through their full stroke in each direction)
When removing air instruments or pipings, open the drain valve under the air reservoir to relieve air pressure.
- 2) Gradually unscrew the cap of the hydraulic tank and leave it for a few minutes.

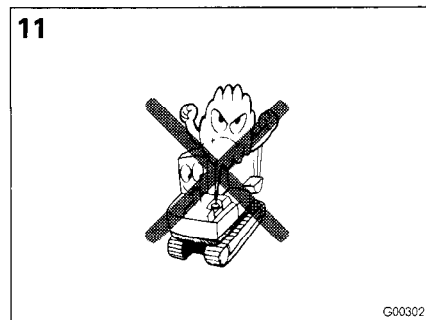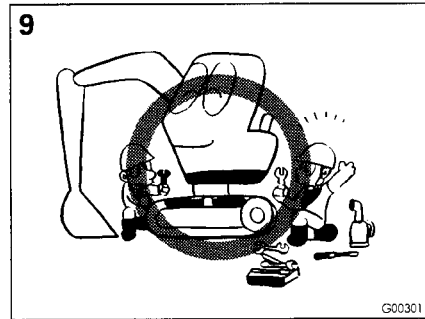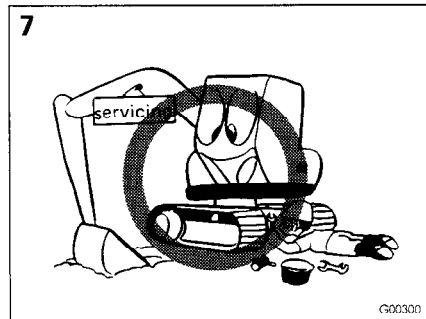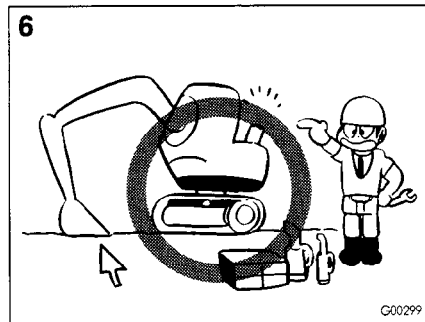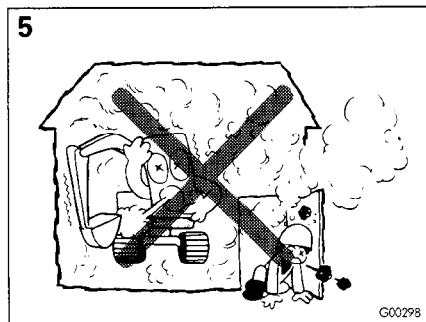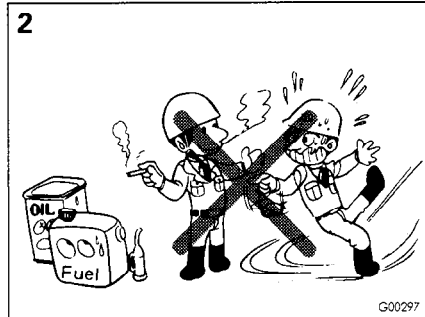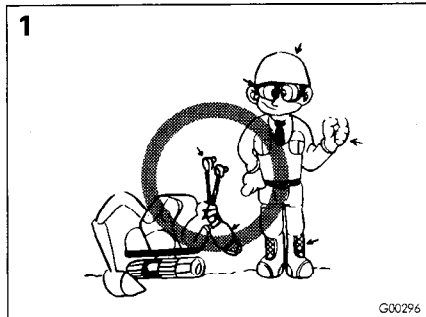

12. Flames should never be used instead of lamps. Never use a naked flame to check leaks or the level of oil, fuel, antifreeze or electrolyte.
13. Immediately remove any oil or grease on the floor of the operator's compartment, or on the handrail. It is very dangerous if someone slips while on the machine.
14. Be particularly careful when removing the radiator cap. If this is done immediately after using the machine, there is a danger that boiling water may spurt out.
15. Do not check the fan belt tension while the engine is running. Be sure to turn off the engine before inspecting other rotating parts and the vicinity thereof.
16. Do not allow anybody other than the necessary workers to go near the machine while it is being inspected or maintained. Also, be careful of people in the vicinity. It is necessary to exercise particular care when performing grinding or welding, or when swinging a large hammer.
17. Use the tool which is suitable for the maintenance work.
18. Remove the minus terminal from the battery in maintaining the electrical system.
19. When the tracks are removed, never put your fingers between the shoes.
20. When carrying out other difficult maintenance works, carrying them out carelessly can cause unexpected accidents. If you consider the maintenance is too difficult, always request Komatsu distributor to carry out it.

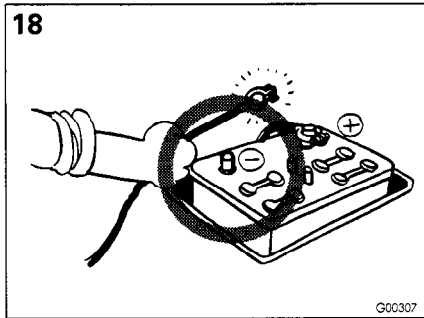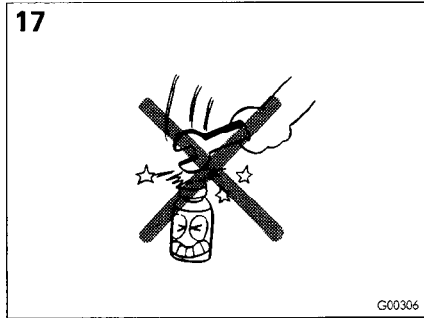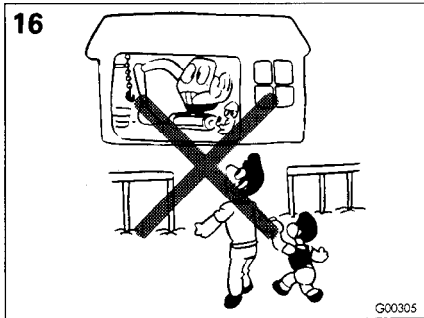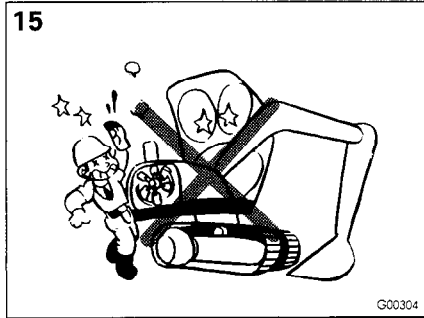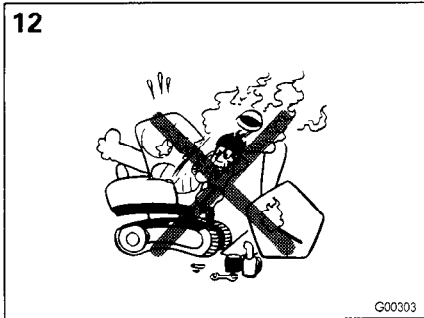

MISCELLANEOUS

- Thoroughly wash the machine, particularly the oiling and greasing parts and the vicinity, thereof, in order to prevent the ingress of dust.
- Use genuine Komatsu replacement parts specified in the parts list.
- Use Komatsu specified oil and grease. Use oil and grease having the recommended viscosity for the particular ambient temperature.
- Use clean oil and grease and keep them in clean containers to avoid the ingress of dust.
- Inspect or replace oil in a dust-free location to prevent the ingress of dirt.
- Drain off used oil after heating it to a suitable temperature (about 20 to 40°C).
- After replacing oil, filter element or strainer, bleed the air from the circuit.
- When the strainer is located in the oil filler, the strainer must not be removed while adding oil.
- When adding oil or checking the oil level, check that the oil is at the correct level.

When adding oil or fuel, do not let the oil or fuel overflow.

If oil or water are spilled, always wipe it up. Spilled oil or water may cause people to slip; spilled oil may cause fire.

If soil is piled on top of a place where fuel has been spilled, remove the soil.

- After greasing up, always wipe off the old grease that was forced out.
- When changing the oil or filter, check the drained oil and filter for any signs of excessive metal particles or other foreign materials.
- When removing parts containing O-rings, gaskets or seals, clean the mounting surface and replace with new sealing parts.
- When washing the machine, ensure that water does not get onto the alternator.
- Special measuring apparatus is needed for testing hydraulic pressure.
- Thoroughly wash the machine. In particular, be careful to clean the filler caps, grease fittings and the area around the dipsticks. Be careful not to let any dirt or dust into the system.
- When check an open cover there is a risk of dropping things in. Before removing the covers to inspect cover, empty everything from your pockets. Be particularly careful to remove wrenches and nuts.
- When working on the sea shore, check that the various plugs and valves, etc., are tightened up properly. After the completion of work, thoroughly wash the machine and carefully clean all electrical equipment to ensure that it does not corrode.
- Before working in muddy water, rain or snow, check that the various plugs, valves, are properly screwed up. Upon completion of work, wash the machine, then check the various parts of the machine for cracking, scratching, loose or missing nuts and bolts. Also, oil and grease the various parts of the machine.

- When working in a dusty location, be careful of the following:
 - 1) Inspect the dust indicator to see whether the air cleaner is blocked up.
Clean the air cleaner as soon as it becomes dirty.
 - 2) Clean the radiator core so that it does not become blocked up.
 - 3) Clean or replace the fuel filter as soon as it becomes dirty.
 - 4) Clean the electrical equipment, particularly the starting motor and alternator, to prevent accumulation of dust.
- When working on rocky ground, be careful of damage to the undercarriage, loose nuts and bolts, cracks, wear and other damage. Also, adjust the track tension so that it is a little slacker than usual.
- When installing car radio and a walkie-talkie or citizen band, contact your Komatsu distributor.
- Do not direct the steam jet directly at any mechatronic parts or connectors.
- Do not get any water on the controllers or monitors inside the operator's cab.
- Do not direct a high-pressure jet directly at the radiator.
- After disconnecting the connector, cover it with a vinyl bag to prevent oil or dust from sticking to its contact section.
- When welding, be careful of the following:
 - 1) Turn OFF the power (starting switch).
 - 2) Do not continuously apply more than 200 V.
 - 3) Install the ground cable at least 1 m from the range to be welded.
 - 4) Do not insert any seal or bearing between the weld and ground.
 - 5) When repairing the controller mount, remove the controller connectors and carry out the welding.

Precautions when power source for options

When installing electrical components such as a car cooler, connect to the special power source connector.

The power source for options must never be connected to the fuse, starting switch, or battery relay.

STORAGE


BEFORE STORAGE

To place the machine in storage for an extended period of time, the following measures must be taken to insure that it can be returned to operation with minimum of service.

- After every part is washed and dried, the machine should be housed in a dry building. Never leave it outdoors.
In case it is unavoidable to leave it outdoors, lay wood plates on the ground, and park the machine on the wood plates and cover it with canvas, etc.
- Completely fill the fuel tank, lubricate and change the oil before storage.
- ★ To protect the cylinder rod when the machine is not being used, set the work equipment in the posture shown in the diagram.
(This prevents rusting of the cylinder rod)
- Apply a thin coat of grease to metal surfaces (hydraulic piston rods and front idler adjusting rods).
- As for the batteries, remove the terminals and cover them, or remove them from the machine and store separately.
- When the ambient temperature is anticipated to drop below 0°C, always add antifreeze in the cooling water.
- Lock all the control levers securely with the lock lever.

DURING STORAGE


- Operate the engine and move the machine for a short distance once a month so that a new film of oil will be coated over movable parts and component surfaces.
- Before operating the working equipment, wipe off the grease on the hydraulic piston rod.

 **If it is unavoidably necessary to carry out the rust-preventive operation while the machine is indoors, open the doors and windows to improve ventilation and prevent gas poisoning.**

AFTER STORAGE

Carry out the following procedure when taking the machine out of long-term storage.

- Wipe off the grease on the hydraulic piston rod.
- Completely fill fuel tank, lubricate and add oil.
- ★ If the machine is stored without carrying out the monthly rust prevention operation, request your Komatsu distributor for service.

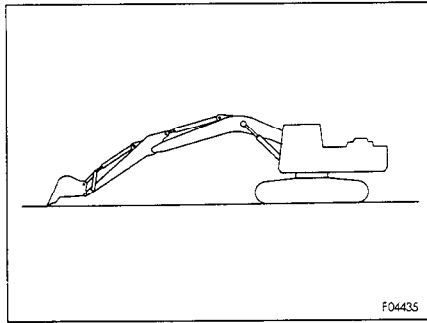

COOLANT AND LUBRICANTS

No.	Supplier	Engine Oil [CD or CE] SAE10W, 30, 40 10W30, 15W40 (The 15W40 oil marked * is CE.)	Grease [Lithium-Base] NLGI No. 2	Anti-freeze Coolant [Ethylene Glycol Base] Permanent Type
1	KOMATSU	EO-10-CD EO30-CD EO10-30CD EO15-40CD	G2-LI G2-LI-S	AF-ACL AF-PTL AF-PT (Winter, one season type)
2	AGIP	Diesel sigma S Super dieselmultigrade *Sigma turbo	GR MU/EP	—
3	AMOCO	*Amoco 300	RYKON premium grease	—
4	ARCO	*Arcofleet S3 plus	Litholine HEP 2 Arco EP moly D	—
5	BP	Vanellus C3	Energrease LS-EP2	Antifreeze
6	CALTEX	*RPM delo 400 RPM delo 450	Marfak all purpose 2 Ultra-duty grease 2	AF engine coolant
7	CASTROL	*Turbomax *RX super CRD	MS3 Spheerol EPL2	Anti-freeze
8	CHEVRON	*Delo 400	Ultra-duty grease 2	—
9	CONOCO	*Fleet motor oil	Super-sta grease	—
10	ELF	Multiperformance 3C Performance 3C	Tranself EP Tranself EP type 2	Glacelf
11	EXXON (ESSO)	Essolube D3 *Essolube XD-3 *Essolube XD-3 Extra *Esso heavy duty Exxon heavy duty	Beacon EP2	All season coolant
12	GULF	Super duty motor oil *Super duty plus	Gulfcrown EP2 Gulfcrown EP special	Antifreeze and coolant
13	MOBIL	Delvac 1300 *Delvac super 10W-30, 15W-40	Mobilux EP2 Mobilgrease 77 Mobilgrease special	—
14	PENNZOIL	*Supreme duty fleet motor oil	Multi-purpose white grease 705 707L White -- bearing grease	Anti-freeze and summer coolant

No.	Supplier	Engine Oil [CD or CE] SAE10W, 30, 40 10W30, 15W40 (The 15W40 oil marked * is CE.)	Grease [Lithium-Base] NLGI No. 2	Anti-freeze Coolant [Ethylene Glycol Base] Permanent Type
15	PETROFINA	FINA kappa TD	FINA marson EPL2	FINA tamidor
16	SHELL	Rimula X	Alvania EP grease	—
17	SUN	—	Sunoco ultra prestige 2EP Sun prestige 742	Sunoco antifreeze and summer coolant
18	TEXACO	*Ursa super plus Ursa premium	Multifak EP2 Starplex 2	Code 2055 startex antifreeze coolant
19	TOTAL	Rubia S *Rubia X	Multis EP2	Antigel/antifreeze
20	UNION	*Guardoi	Unoba EP	—
21	VEEDOL	*Turbostar *Diesel star MDC	—	Antifreeze

Komatsu America International Company
 440 North Fairway Drive
 Vernon Hills, IL 60061-8112 U.S.A.
 Attn: Technical Publications
 Fax No. (847) 970-4186

PROPOSAL FOR MANUAL REVISION

FOR INTERNAL USE ONLY - No. PMR

P R O P O S E R	NAME OF COMPANY:		LOCATION:		
			PHONE NO:		
	DEPARTMENT:		DATE:		
	NAME:				
	MANUAL NAME:				
MANUAL NO:					
MACHINE MODEL: S/N IF APPLICABLE:					
PAGE NO:					
PROBLEM:					
Attach photo or sketch. If more space is needed, use another sheet.					

FOR INTERNAL USE ONLY					
CORRECTIVE ACTION:					
