

Operation & Maintenance Manual

HYDRAULIC
EXCAVATOR

PC800 -8 PC800LC -8
PC800SE -8
PC850 -8 PC850SE -8

SERIAL NUMBERS

PC800-50001
PC850-10001 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU

FOREWORD

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling.

BEFORE READING THIS MANUAL

This manual gives details of the operation and methods of inspection and maintenance for this machine that must be obeyed in order to use the machine safely. Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines.


Read, understand and follow all precautions and warnings in this manual and on the machine before performing operation and maintenance. Failure to do so may result in serious injury or death.

Komatsu cannot predict every circumstance that might involve a potential hazard when the machine is used. Therefore, the safety messages in this manual and on the machine may not include all possible safety precautions. If you carry out any operation, inspection, or maintenance under conditions that are not described in this manual, understand that it is your responsibility to take the necessary precautions to ensure safety. In no event should you or others engage in the prohibited uses or actions described in this manual. Improper operation and maintenance of the machine can be hazardous and could result in serious injury or death.

If you sell the machine, be sure to give this manual to the new owner together with the machine.

Always keep this Operation and Maintenance Manual in the location shown on the right so that all relevant personnel can read it at any time.

Storage location for the Operation and Maintenance Manual:
magazine box on the left side of the operator's seat.

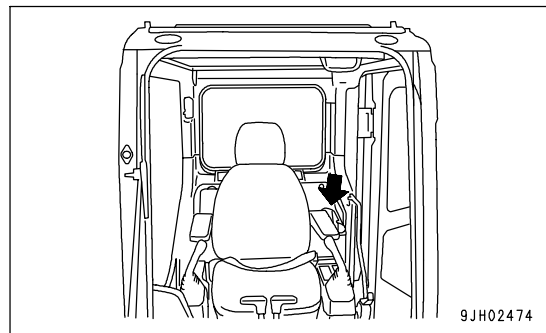

If this manual is lost or damaged, contact your distributor immediately to arrange for its replacement. For details regarding the machine serial No. you will need to provide your Komatsu distributor, see "YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR (PAGE 1-7)".

This manual uses the international units (SI) for units of measurement. For reference, units that have been used in the past are given in ().

The explanations, values, and illustrations in this manual have been prepared based on the latest information available as of the date of its publication. Continuing improvements in the design of this machine may lead to additional changes that are not reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information concerning your machine or with questions regarding information contained in this manual.

- The numbers in circles in the illustrations correspond to the numbers in () in the text.
(For example: ① → (1))




Komatsu delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies with the applicable standards and regulations of your country, consult Komatsu or your Komatsu distributor before operating the machine.

SAFETY INFORMATION

To enable you to use the machine safely, and to prevent injury to operators, service personnel or bystanders, the precautions and warnings included in this manual and the safety signs attached to the machine must always be followed.

To identify important safety messages in the manual and on the machine labels, the following signal words are used.

The "Safety Alert Symbol" identifies important safety messages on machines, in manuals, and elsewhere. When you see this symbol, be alert to the risk of personal injury or death. Follow the instructions in the safety message.

- | | |
|--|--|
|  DANGER | This signal word indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. |
|  WARNING | This signal word indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. |
|  CAUTION | This signal word indicates a potentially hazardous situation exists which, if not avoided, may result in minor or moderate injury. |

The following signal words are used to alert you to information that must be followed to avoid damage to the machine.

- | | |
|----------------|--|
| NOTICE | This precaution is given where the machine may be damaged or the service life reduced if the precaution is not followed. |
| REMARKS | This word is used for information that is useful to know. |

INTRODUCTION


USE OF MACHINE

This Komatsu machine is designed to be used mainly for the following work:

- Digging work
- Leveling work
- Ditching work
- Loading work
- Demolition work

See the section "RECOMMENDED APPLICATIONS (PAGE 3-131)" for further details.

DIRECTIONS OF MACHINE

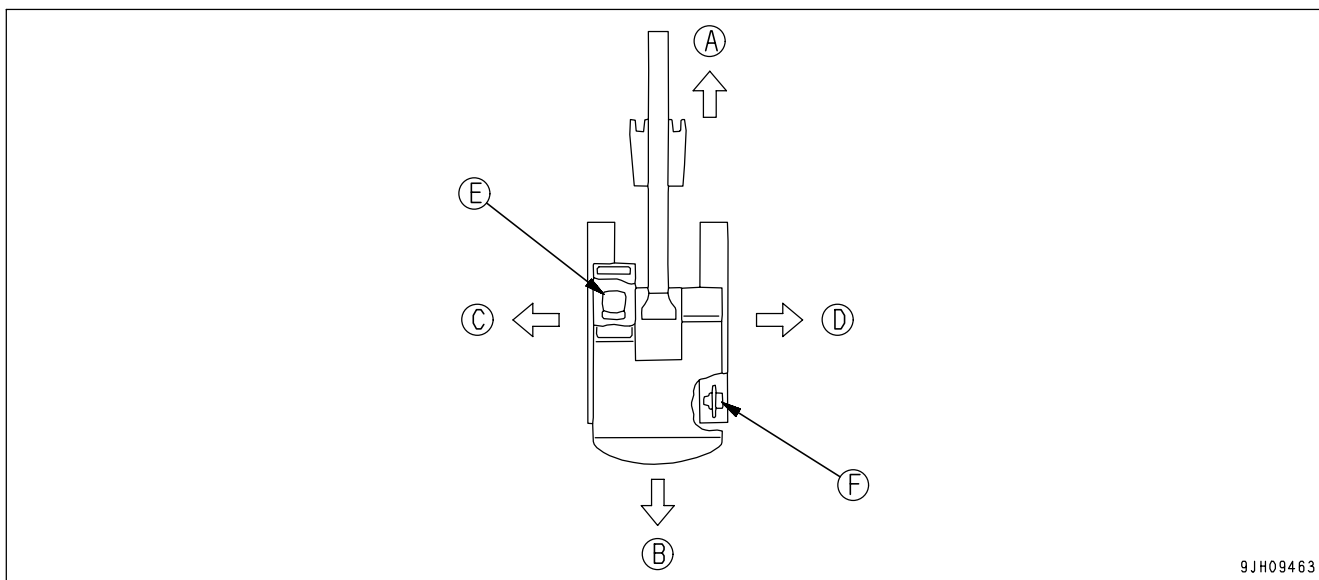

(A) Front

(B) Rear

(C) Left

(D) Right

(E) Operator's seat

(F) Sprocket


In this manual, the terms front, rear, left, and right refer to the travel direction as seen from the operator's seat when the operator's seat is facing the front and the sprocket is at the rear of the machine.

VISIBILITY FROM OPERATOR'S SEAT

The visibility standards (ISO 5006) for this machine require a view shown in the diagram below.


PROXIMITY VISIBILITY

The visibility of this machine in the area 1 m from the outside surface of the machine at a height of 1.5 m is shown in the diagram below. The hatched area (A) shows the area where the view is blocked by part of the machine when mirrors or other aids to visibility are installed as standard. Please be fully aware that there are places that cannot be seen when operating the machine.

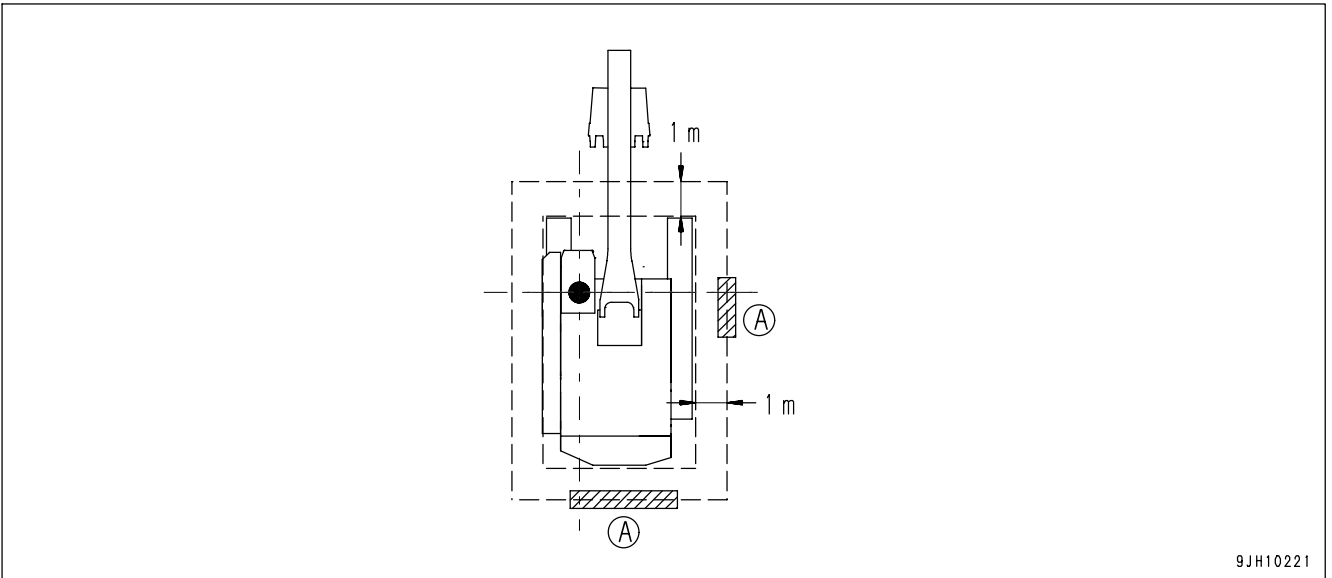

12M CIRCUMFERENCE VISIBILITY

The visibility at a radius of 12 m from the machine is as shown in the diagram below. The hatched areas (B) show the areas where the view is blocked when mirrors or other aids to visibility are installed as standard. Please be fully aware that there are places that cannot be seen when operating the machine.

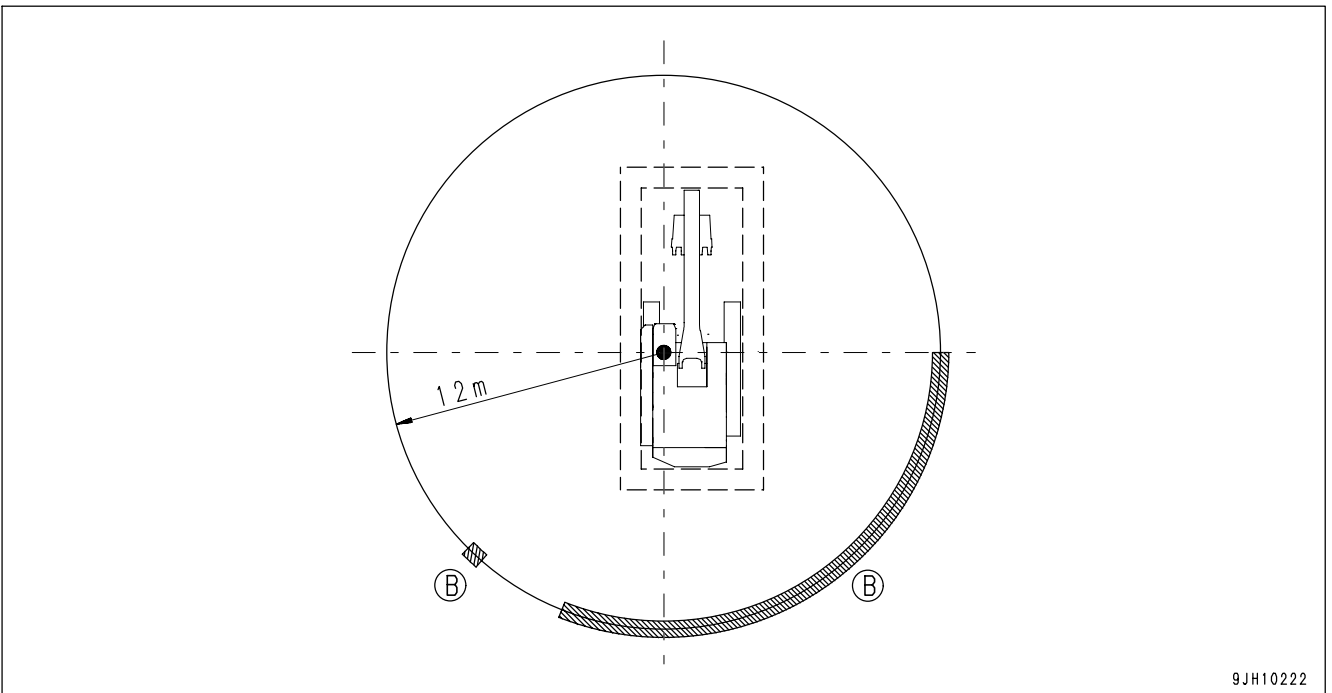


PRODUCT INFORMATION

When requesting service or ordering replacement parts, please inform your Komatsu distributor of the following items.

PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE


On the bottom right of the operator's cab

The design of the nameplate differs according to the territory.

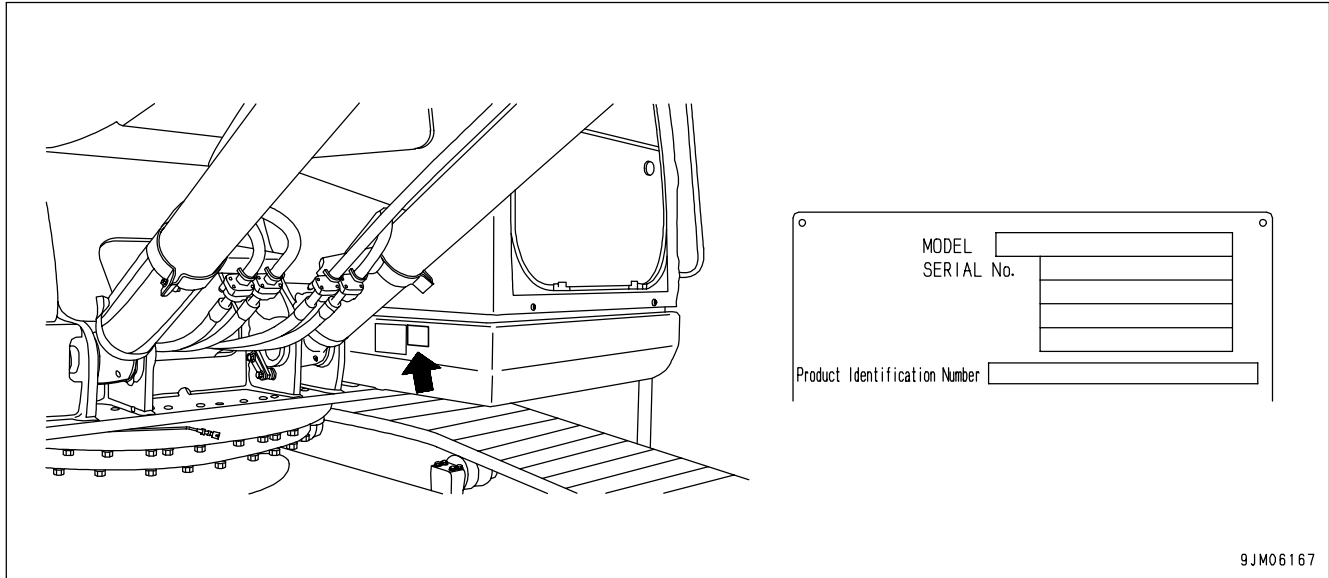

EPA REGULATIONS, ENGINE NUMBER PLATE


On the upper side of the engine cylinder head cover.

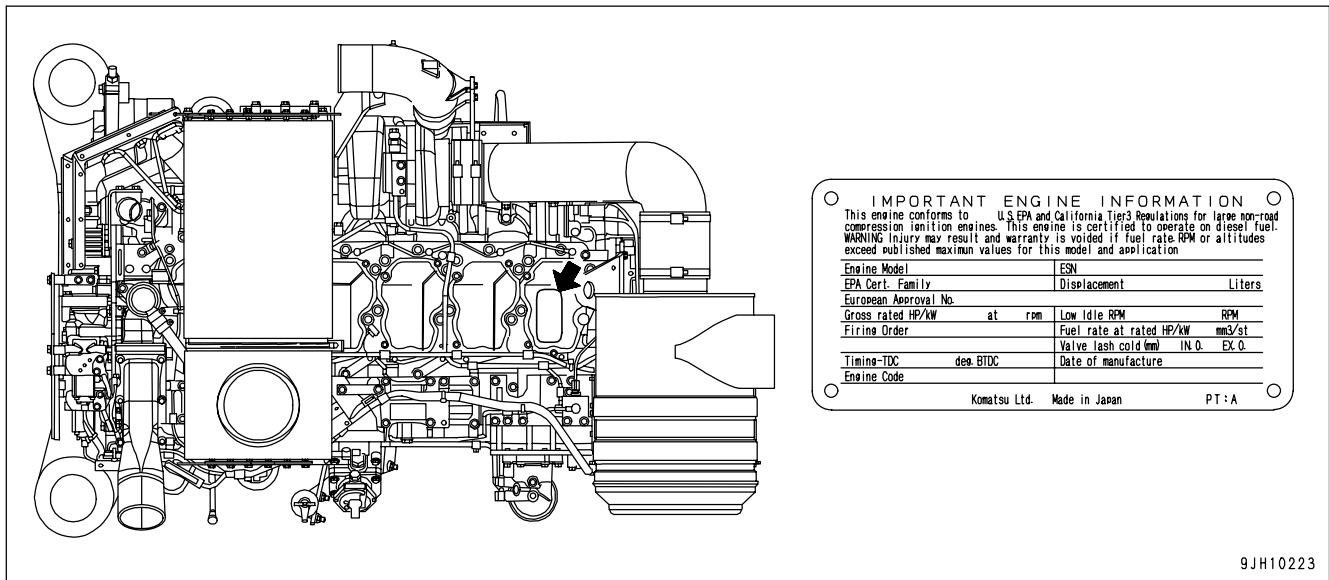

EPA: Environmental Protection Agency, U.S.A.

SERVICE METER LOCATION

On top of the machine monitor

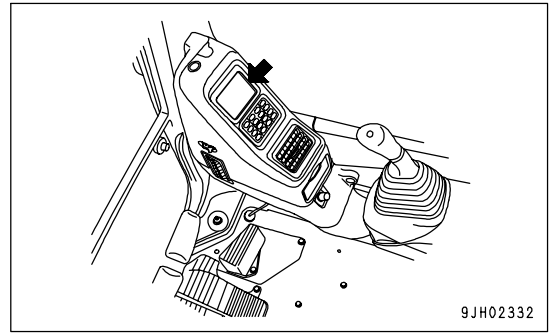

YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR

Machine serial No.	
Engine serial No.	
Product identification number (PIN)	
Distributor name	
Address	-----

Service Personnel	
Phone/Fax	

CONTENTS

FOREWORD	1- 1
BEFORE READING THIS MANUAL	1- 2
SAFETY INFORMATION	1- 3
INTRODUCTION	1- 4
USE OF MACHINE	1- 4
DIRECTIONS OF MACHINE	1- 4
VISIBILITY FROM OPERATOR'S SEAT	1- 5
PRODUCT INFORMATION	1- 6
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1- 6
EPA REGULATIONS, ENGINE NUMBER PLATE	1- 6
SERVICE METER LOCATION	1- 7
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 7
SAFETY	2- 1
SAFETY	2- 2
SAFETY LABELS	2- 5
LOCATION OF SAFETY LABELS	2- 6
SAFETY LABELS	2- 7
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE	2- 13
PRECAUTIONS BEFORE STARTING OPERATION	2- 13
PREPARATIONS FOR SAFE OPERATION	2- 13
FIRE PREVENTION	2- 15
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE	2- 16
DO NOT GET CAUGHT IN WORK EQUIPMENT	2- 18
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES	2- 18
PROTECTION AGAINST FALLING, FLYING, INTRUDING OBJECTS	2- 18
UNAUTHORIZED MODIFICATION	2- 19
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS	2- 19
PRECAUTIONS RELATED TO CAB GLASS	2- 19
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING	2- 19
PRECAUTIONS FOR OPERATION	2- 20
PRECAUTIONS FOR JOBSITE	2- 20
STARTING ENGINE	2- 22
OPERATION	2- 24
TRANSPORTATION	2- 31
TOWING	2- 32
LIFTING OBJECTS WITH BUCKET	2- 33
PRECAUTIONS FOR MAINTENANCE	2- 34
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE	2- 34
PRECAUTIONS FOR INSPECTION AND MAINTENANCE	2- 38
OPERATION	3- 1
MACHINE VIEW ILLUSTRATIONS	3- 2
OVERALL MACHINE VIEW	3- 2
CONTROLS AND GAUGES	3- 3
DETAILED CONTROLS AND GAUGES	3- 5
MONITORING SYSTEM	3- 5
SWITCHES	3- 34
CONTROL LEVERS AND PEDALS	3- 41
SUN ROOF	3- 44
WINDSHIELD	3- 44

EMERGENCY EXIT FROM OPERATOR'S CAB -----	3- 49
DOOR LOCK -----	3- 49
CAP WITH LOCK -----	3- 50
HOT AND COOL BOX -----	3- 52
MAGAZINE BOX -----	3- 52
ASHTRAY -----	3- 52
FIRE EXTINGUISHER -----	3- 53
AIR CONDITIONER CONTROLS -----	3- 54
RADIO -----	3- 68
AUXILIARY ELECTRIC POWER -----	3- 72
FUSE -----	3- 73
CIRCUIT BREAKER -----	3- 74
CONTROLLER -----	3- 75
TOOL BOX -----	3- 75
GREASE PUMP -----	3- 76
MACHINE OPERATIONS AND CONTROLS -----	3- 79
BEFORE STARTING ENGINE -----	3- 79
STARTING ENGINE -----	3- 98
AFTER STARTING ENGINE -----	3-101
STOPPING THE ENGINE -----	3-110
MACHINE OPERATION -----	3-111
STEERING THE MACHINE -----	3-115
SWINGING -----	3-117
WORK EQUIPMENT CONTROLS AND OPERATIONS -----	3-118
WORKING MODE -----	3-119
PROHIBITED OPERATIONS -----	3-121
GENERAL OPERATION INFORMATION -----	3-126
TRAVELING ON SLOPES -----	3-128
ESCAPE FROM MUD -----	3-130
RECOMMENDED APPLICATIONS -----	3-131
BUCKET REPLACEMENT -----	3-132
PARKING MACHINE -----	3-134
MACHINE INSPECTION AFTER DAILY WORK -----	3-135
LOCKING -----	3-136
TRANSPORTATION -----	3-137
TRANSPORTATION PROCEDURE -----	3-137
LIFTING MACHINE -----	3-138
SHIPPING MACHINE INFORMATION -----	3-139
TRANSPORTATION POSTURE -----	3-140
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE -----	3-146
COLD WEATHER OPERATION -----	3-148
COLD WEATHER OPERATION INFORMATION -----	3-148
AFTER DAILY WORK COMPLETION -----	3-151
AFTER COLD WEATHER SEASON -----	3-151
LONG TERM STORAGE -----	3-152
BEFORE STORAGE -----	3-152
DURING STORAGE -----	3-152
AFTER STORAGE -----	3-153
STARTING MACHINE AFTER LONG-TERM STORAGE -----	3-153
TROUBLES AND ACTIONS -----	3-154

RUNNING OUT OF FUEL	3-154
PHENOMENA THAT ARE NOT FAILURES	3-155
TOWING THE MACHINE	3-156
SEVERE JOB CONDITION	3-156
DISCHARGED BATTERY	3-157
OTHER TROUBLE	3-161
MAINTENANCE	4- 1
MAINTENANCE INFORMATION	4- 2
OUTLINE OF SERVICE	4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC	4- 4
ELECTRIC SYSTEM MAINTENANCE	4- 7
WEAR PARTS	4- 8
WEAR PARTS LIST	4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT	4- 9
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL	4- 11
TIGHTENING TORQUE SPECIFICATIONS	4- 12
TIGHTENING TORQUE LIST	4- 12
SAFETY CRITICAL PARTS	4- 13
SAFETY CRITICAL PARTS LIST	4- 14
MAINTENANCE SCHEDULE	4- 15
MAINTENANCE SCHEDULE CHART	4- 15
MAINTENANCE PROCEDURE	4- 17
INITIAL 100 HOURS MAINTENANCE (ONLY AFTER THE FIRST 100 HOURS)	4- 17
INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS)	4- 17
WHEN REQUIRED	4- 18
CHECK BEFORE STARTING	4- 41
EVERY 10 HOURS MAINTENANCE	4- 42
EVERY 100 HOURS MAINTENANCE	4- 44
EVERY 250 HOURS MAINTENANCE	4- 45
EVERY 500 HOURS MAINTENANCE	4- 50
EVERY 1000 HOURS MAINTENANCE	4- 59
EVERY 2000 HOURS MAINTENANCE	4- 73
EVERY 4000 HOURS MAINTENANCE	4- 79
EVERY 5000 HOURS MAINTENANCE	4- 82
EVERY 8000 HOURS MAINTENANCE	4- 84
SPECIFICATIONS	5- 1
SPECIFICATIONS	5- 2
ATTACHMENTS AND OPTIONS	6- 1
GENERAL PRECAUTIONS FOR SAFETY	6- 2
PRECAUTIONS WHEN SELECTING	6- 2
READ THE INSTRUCTION MANUAL THOROUGHLY	6- 2
PRECAUTIONS WHEN REMOVING OR INSTALLING	6- 2
PRECAUTIONS WHEN USING	6- 2
ATTACHMENT GUIDE	6- 3
COMBINATIONS OF WORK EQUIPMENT	6- 4
TRACK SHOES SELECTION	6- 6
HANDLING COUNTERWEIGHT REMOVER	6- 7
HANDLING MACHINES EQUIPPED WITH KOMTRAX	6- 19
BASIC PRECAUTIONS	6- 19

LOADING SHOVEL -----	7-	1
EXPLANATION OF COMPONENTS -----	7-	2
SWITCHES -----	7-	2
FUSE -----	7-	5
OPERATIONS -----	7-	6
OPERATION OF WORK EQUIPMENT -----	7-	6
PRECAUTIONS DURING OPERATION -----	7-	8
PRECAUTIONS FOR JOBSITE -----	7-	11
EXCAVATOR WORK -----	7-	13
TRANSPORTATION -----	7-	14
MACHINE CONFIGURATION FOR TRANSPORT -----	7-	14
WEAR PARTS -----	7-	15
WEAR PARTS LIST -----	7-	15
MAINTENANCE -----	7-	16
CHECK BEFORE STARTING -----	7-	16
EVERY 10 HOURS MAINTENANCE -----	7-	18
EVERY 5000 HOURS MAINTENANCE -----	7-	19
SPECIFICATION -----	7-	21
COMBINATION OF WORK EQUIPMENT -----	7-	22
COMBINATION OF WORK EQUIPMENT -----	7-	22
INDEX -----	8-	1

SAFETY

WARNING

Please read and make sure that you fully understand the precautions described in this manual and the safety labels on the machine. When operating or servicing the machine, always follow these precautions strictly.

SAFETY

SAFETY LABELS	2- 5
LOCATION OF SAFETY LABELS	2- 6
SAFETY LABELS	2- 7
GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE	2- 13
PRECAUTIONS BEFORE STARTING OPERATION	2- 13
ENSURING SAFE OPERATION	2- 13
UNDERSTANDING THE MACHINE	2- 13
PREPARATIONS FOR SAFE OPERATION	2- 13
PRECAUTIONS REGARDING SAFETY-RELATED EQUIPMENT	2- 13
INSPECTING MACHINE	2- 13
WEAR WELL-FITTING CLOTHES AND PROTECTIVE EQUIPMENT	2- 13
KEEP MACHINE CLEAN	2- 14
PRECAUTIONS INSIDE OPERATOR'S COMPARTMENT	2- 14
PROVIDE FIRE EXTINGUISHER AND FIRST AID KIT	2- 14
IF ANY PROBLEM IS FOUND	2- 14
FIRE PREVENTION	2- 15
ACTION IF FIRE OCCURS	2- 15
PRECAUTIONS TO PREVENT FIRE	2- 15
PRECAUTIONS WHEN GETTING ON OR OFF MACHINE	2- 16
USE HANDRAILS AND STEPS WHEN GETTING ON OR OFF MACHINE	2- 16
NO JUMPING ON OR OFF MACHINE	2- 17
NO PEOPLE ON ATTACHMENTS	2- 17
PRECAUTIONS WHEN STANDING UP FROM OPERATOR'S SEAT	2- 17
PRECAUTIONS WHEN LEAVING MACHINE	2- 17
EMERGENCY EXIT FROM OPERATOR'S CAB	2- 17
DO NOT GET CAUGHT IN WORK EQUIPMENT	2- 18
PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES	2- 18
PROTECTION AGAINST FALLING, FLYING, INTRUDING OBJECTS	2- 18
UNAUTHORIZED MODIFICATION	2- 19
PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS	2- 19
PRECAUTIONS RELATED TO CAB GLASS	2- 19
PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING	2- 19

PRECAUTIONS FOR OPERATION	2- 20
PRECAUTIONS FOR JOBSITE	2- 20
INVESTIGATE AND CONFIRM JOBSITE CONDITIONS	2- 20
WORKING ON LOOSE GROUND	2- 20
DO NOT GO CLOSE TO HIGH-VOLTAGE CABLES	2- 21
ENSURE GOOD VISIBILITY	2- 21
CHECKING SIGNS AND SIGNALMAN'S SIGNALS	2- 21
BEWARE OF ASBESTOS DUST	2- 22
STARTING ENGINE	2- 22
USE WARNING TAGS	2- 22
INSPECTION AND MAINTENANCE BEFORE STARTING ENGINE	2- 23
PRECAUTIONS WHEN STARTING ENGINE	2- 23
PRECAUTIONS IN COLD AREAS	2- 23
STARTING WITH BOOSTER CABLES	2- 24
OPERATION	2- 24
CHECKS BEFORE OPERATION	2- 24
PRECAUTIONS WHEN TRAVELING IN FORWARD OR REVERSE AND SWINGING	2- 25
PRECAUTIONS WHEN TRAVELING	2- 26
TRAVELING ON SLOPES	2- 27
OPERATING ON SLOPES	2- 28
PROHIBITED OPERATIONS	2- 28
TRAVELING ON SNOW-COVERED OR FROZEN SURFACES	2- 30
PARKING MACHINE	2- 30
TRANSPORTATION	2- 31
LOADING AND UNLOADING	2- 31
TOWING	2- 32
PRECAUTIONS WHEN TOWING	2- 32
LIFTING OBJECTS WITH BUCKET	2- 33
PRECAUTIONS FOR LIFTING OPERATIONS	2- 33


PRECAUTIONS FOR MAINTENANCE	2- 34
PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE	2- 34
DISPLAY WARNING TAG DURING INSPECTION AND MAINTENANCE	2- 34
KEEP WORKPLACE CLEAN AND TIDY	2- 34
SELECT SUITABLE PLACE FOR INSPECTION AND MAINTENANCE	2- 34
ONLY AUTHORIZED PERSONNEL	2- 34
APPOINT LEADER WHEN WORKING WITH OTHERS	2- 34
STOP ENGINE BEFORE CARRYING OUT INSPECTION AND MAINTENANCE	2- 35
TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING	2- 36
INSTALLING, REMOVING, OR STORING ATTACHMENTS	2- 36
PRECAUTIONS WHEN WORKING AT HIGH PLACES	2- 36
PRECAUTIONS WHEN WORKING ON MACHINE	2- 37
PRECAUTIONS WHEN WORKING UNDER MACHINE OR WORK EQUIPMENT	2- 37
PROPER TOOLS	2- 37
PRECAUTIONS FOR INSPECTION AND MAINTENANCE	2- 38
PRECAUTIONS WHEN WELDING	2- 38
HANDLING BATTERY	2- 38
PRECAUTIONS WHEN USING HAMMER	2- 39
PRECAUTIONS WITH HIGH-TEMPERATURE COOLANT	2- 39
PRECAUTIONS WITH HIGH-TEMPERATURE OIL	2- 39
PRECAUTIONS WITH HIGH-PRESSURE OIL	2- 40
PRECAUTIONS WITH HIGH-PRESSURE FUEL	2- 40
HANDLING HIGH-PRESSURE HOSES AND PIPING	2- 40
PRECAUTIONS FOR HIGH VOLTAGE	2- 41
NOISE	2- 41
PRECAUTIONS WITH HIGH-PRESSURE GREASE WHEN ADJUSTING TRACK TENSION	2- 41
DO NOT DISASSEMBLE RECOIL SPRING	2- 42
HANDLING ACCUMULATOR AND GAS SPRING	2- 42
PRECAUTIONS WITH COMPRESSED AIR	2- 42
MAINTENANCE OF AIR CONDITIONER	2- 42
DISPOSING OF WASTE MATERIALS	2- 43
METHOD OF SELECTING WINDOW WASHER FLUID	2- 43
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS	2- 43

SAFETY LABELS

The following warning signs and safety labels are used on this machine.

- Be sure that you fully understand the correct position and content of labels.
- To ensure that the content of labels can be read properly, be sure that they are in the correct place and always keep them clean. When cleaning them, do not use organic solvents or gasoline. These may cause the labels to peel off.
- There are also other labels in addition to the warning signs and safety labels. Handle those labels in the same way.
- If the labels are damaged, lost, or cannot be read properly, replace them with new ones. For details of the part numbers for the labels, see this manual or the actual label, and place an order with Komatsu distributor.

LOCATION OF SAFETY LABELS

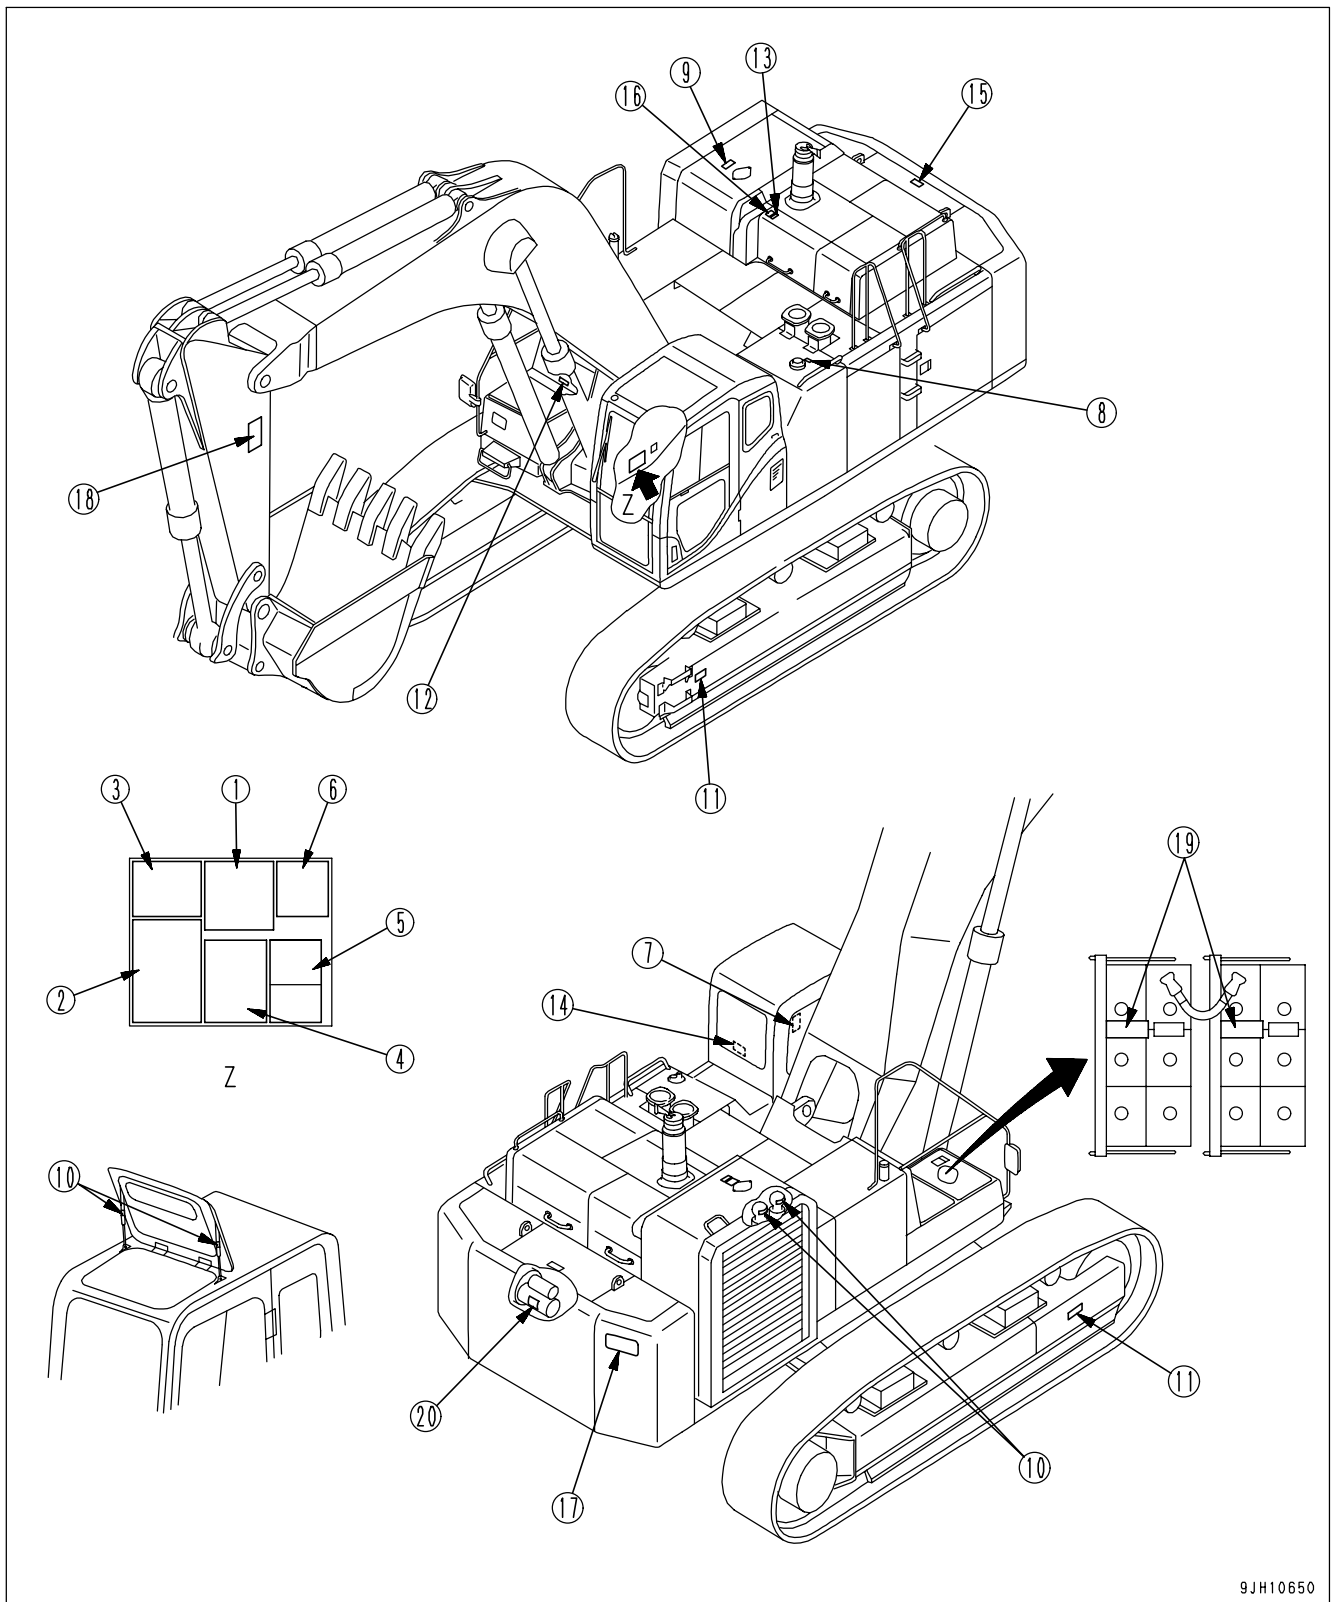


9JH10650

SAFETY LABELS

- (1) Caution before operating or maintaining machine
(09651-03001)



- (2) Caution before operating (09802-03000)

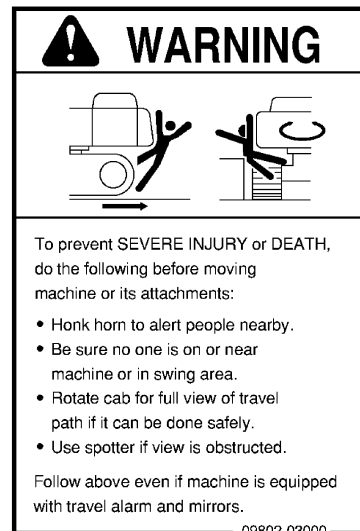


- (3) Caution for leaving operator's seat (09654-03001)



(4) Caution for going close to electric cables (09801-03001)

⚠ DANGER



Hazardous voltage hazard.
Serious injury or death can occur if machine or attachments are not kept safe distance away from electric lines.

	VOLTAGE	SAFE DISTANCE
LOW VOLTAGE	100V 200V	2m
	6.600V	2m
	22.000V	3m
	66.000V	4m
SPECIAL HIGH VOLTAGE	154.000V	5m
	187.000V	6m
	275.000V	7m
	500.000V	11m


09801-03001

(5) Caution for operating pattern (09822-03000)

⚠ WARNING


In order to prevent an accident resulting in injury or death caused by error-operation, confirm the machine motion and indicated operating pattern, when operating machines. Pay attention to the circumference and operate slowly when confirming the machine motion.

ISO pattern

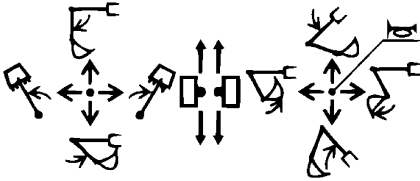


09822-03000

- (6) Caution when opening or closing front window
(09839-03000)

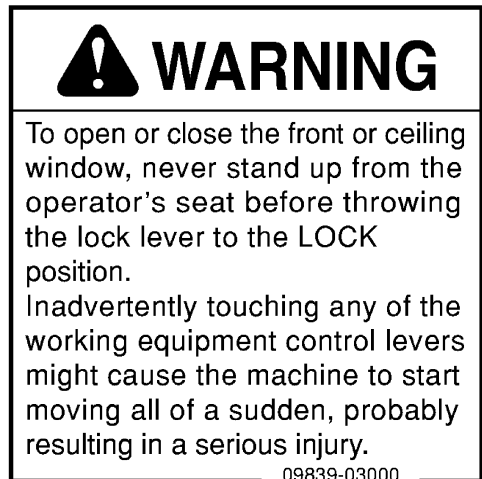

- (7) Caution when stowing front window (09803-03000)

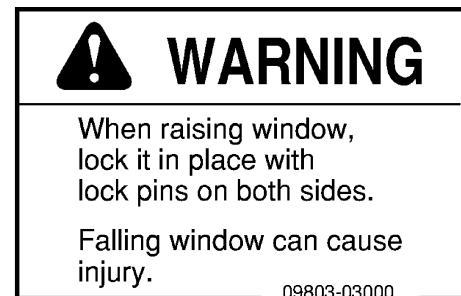

- (8) Caution for high-temperature hydraulic oil (09653-03001)



- (9) Caution with high-temperature coolant (09668-03001)




(10) Caution for handling accumulator and gas spring
(09659-53000)




(11) Caution for adjusting track tension (09657-03003)




(12) Caution for handling cable (09808-03000)

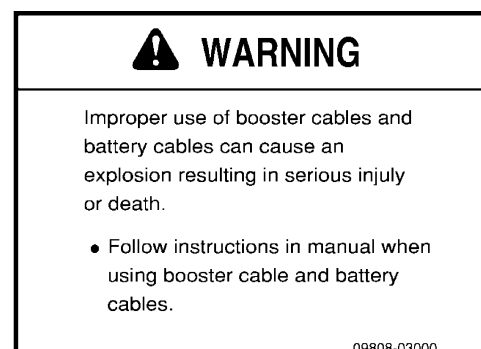

(13) Stopping rotation for inspection and maintenance
(09667-03001)

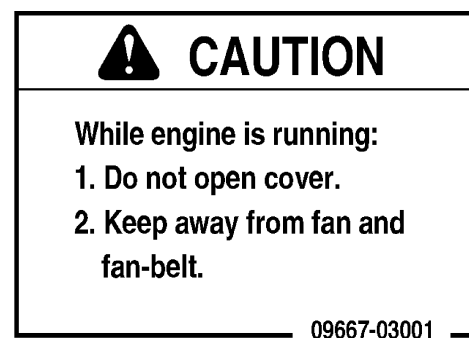

(14) Emergency escape (09844-00050)

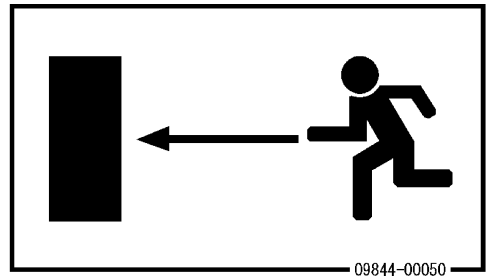

It is the emergency escape exit for when the operator's cab door did not open for some reason. In emergency, break the glass with the hammer of equipment and escape through the window from the operator's cab.

(15) Caution against falling (09805-23000)



(16) Caution against falling (09805-13000)



(17) Prohibited to enter within swing range (09133-23000)




(18) Beware of work equipment (09134-A1681)



Sign indicates a hazard of being hit by the working device of the machine.

Keep away from machine during operation.

(19) Caution when handling battery (14X-98-11370)

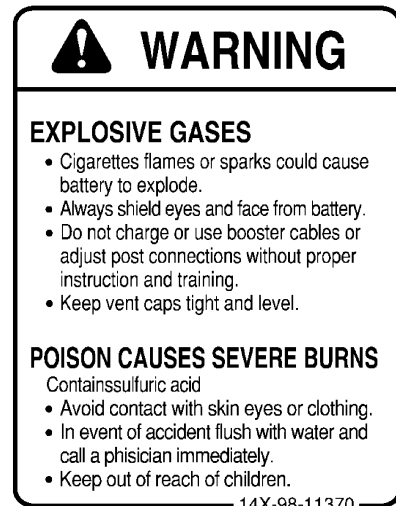

(20) Jump start prohibited (09842-A0481)



Start the engine only after sitting down in the operator's seat.

Do not attempt to start the engine by short-circuiting the engine starting circuit. Such an act may cause a serious bodily injury or fire.

GENERAL PRECAUTIONS COMMON TO OPERATION AND MAINTENANCE

Mistakes in operation, inspection, or maintenance may result in serious personal injury or death. Before carrying out operation, inspection, or maintenance, always read this manual and the safety labels on the machine carefully and obey the warnings.

PRECAUTIONS BEFORE STARTING OPERATION

ENSURING SAFE OPERATION

- Only trained and authorized personnel can operate and maintain the machine.
- Follow all safety, precautions, and instructions in this manual when operating or performing inspection or maintenance on the machine.
- If you are not feeling well, or if you are under the influence of alcohol or medication, your ability to safely operate or repair your machine may be severely impaired, putting yourself and everyone else on your job site in danger.
- When working with another operator or with the person on the worksite traffic duty, discuss the content of the operation beforehand and use the determined signals when carrying out the operation.

UNDERSTANDING THE MACHINE

Before operating the machine, read this manual thoroughly. If there are any places in this manual that you do not understand, ask the person in charge of safety to give an explanation.

PREPARATIONS FOR SAFE OPERATION

PRECAUTIONS REGARDING SAFETY-RELATED EQUIPMENT


- Be sure that all guards, covers and mirrors are in their proper position. Have guards and covers repaired immediately if they are damaged.
- Understand the method of use of safety features and use them properly.
- Never remove any safety features. Always keep them in good operating condition.

INSPECTING MACHINE

Check the machine before starting operations. If any abnormality is found, do not operate the machine until repairs of the problem location have been completed.


WEAR WELL-FITTING CLOTHES AND PROTECTIVE EQUIPMENT

- Do not wear loose clothes or any accessories. If these catch on the control levers or protruding parts, there is danger that it may cause the machine to move unexpectedly.
- Always wear a hard hat and safety shoes. If the nature of the work requires it, wear safety glasses, mask, gloves, ear plugs, and safety belt when operating or maintaining the machine.
- If you have long hair and it hangs out from your hard hat, there is a hazard that it may get caught up in the machine, so tie your hair up and be careful not to let it get caught.
- Check that all protective equipment functions properly before using it.

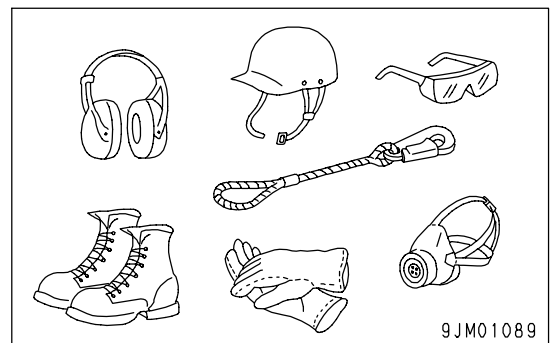

KEEP MACHINE CLEAN

- If you get on or off the machine or carry out inspection and maintenance when the machine is dirty with mud or oil, there is a hazard that you will slip and fall. Wipe off any mud or oil from the machine. Always keep the machine clean.
- If water gets into the electrical system, there is a hazard that it will cause malfunctions or misoperation. If there is any misoperation, there is danger that the machine may move unexpectedly and cause serious personal injury or death. When washing the machine with water or steam, do not allow the water or steam to come into direct contact with electrical components.

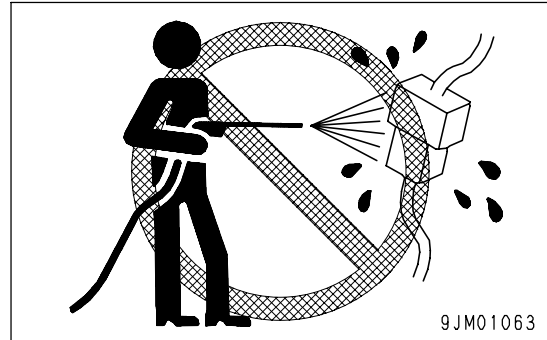
**PRECAUTIONS INSIDE OPERATOR'S COMPARTMENT**

- When entering the operator's compartment, always remove all mud and oil from the soles of your shoes. If you operate the pedal with mud or oil affixed to your shoes, your foot may slip and this may cause a serious accident.
- Do not leave tools or a machine parts lying around inside the operator's compartment. If tools or parts get into the control devices, it may obstruct operation and cause the machine to move unexpectedly, resulting in serious personal injury or death.
- Do not stick suction pads to the window glass. Suction pads act as a lens and may cause fire.
- Do not use a cell phone when driving or operating the machine. This may lead to mistakes in operation, which could cause serious personal injury or death.
- Never bring any dangerous objects such as flammable or explosive items into the operator's compartment.

PROVIDE FIRE EXTINGUISHER AND FIRST AID KIT

Always follow the precautions below to prepare for action if any injury or fire should occur.

- Be sure that fire extinguishers have been provided and read the labels to ensure that you know how to use them in emergencies.
- Carry out periodic inspection and maintenance to ensure that the fire extinguisher can always be used.
- Provide a first aid kit in the storage point. Carry out periodic checks and add to the contents if necessary.

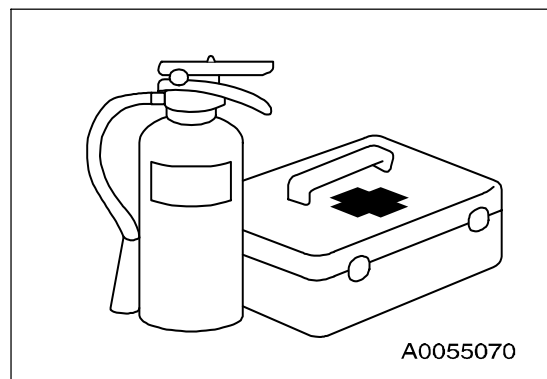**IF ANY PROBLEM IS FOUND**

If you find any problems in the machine during operation or maintenance (noise, vibration, smell, incorrect gauges, smoke, oil leakage, etc., or any abnormal display on the warning devices or monitor), report to the person in charge and have the necessary action taken. Do not operate the machine until the problem has been corrected.

FIRE PREVENTION

ACTION IF FIRE OCCURS


- Turn the start switch OFF to stop the engine.
- Use the handrails and steps to get off the machine.
- Do not jump off the machine. There is the danger of falling and suffering serious injury.

PRECAUTIONS TO PREVENT FIRE

- **Fire caused by fuel, oil, antifreeze, or window washer fluid**

Do not bring any flame or fire close to flammable substances such as fuel, oil, antifreeze, or window washer fluid. There is danger that they may catch fire. To prevent fire, always observe the following:

- Do not smoke or use any flame near fuel or other flammable substances.
- Stop the engine before adding fuel.
- Do not leave the machine when adding fuel or oil.
- Tighten all fuel and oil caps securely.
- Be careful not to spill fuel on overheated surfaces or on parts of the electrical system.
- After adding fuel or oil, wipe up any spilled fuel or oil.
- Put greasy rags and other flammable materials into a safe container to maintain safety at the workplace.
- When washing parts with oil, use a non-flammable oil. Do not use diesel oil or gasoline. There is danger that they may catch fire.
- Do not weld or use a cutting torch to cut any pipes or tubes that contain flammable liquids.
- Determine well-ventilated areas for storing oil and fuel. Keep the oil and fuel in the determined place and do not allow unauthorized persons to enter.
- When carrying out grinding or welding work on the machine, move any flammable materials to a safe place before starting.

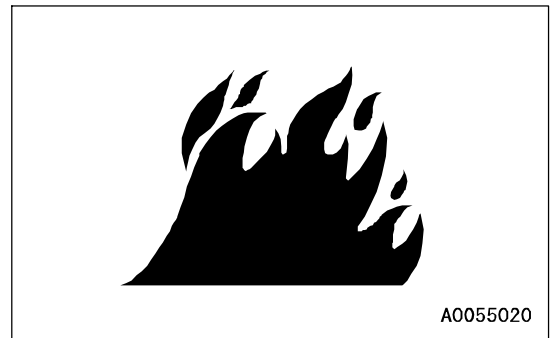

- **Fire caused by accumulation of flammable material.**

- Remove any dry leaves, chips, pieces of paper, coal dust, or any other flammable materials accumulated or affixed around the engine, exhaust manifold, muffler, or battery, or inside the undercovers.
- To prevent fires spreading from sparks or burning particles from other fires, remove any flammable materials such as dry leaves, chips, pieces of paper, coal dust, or any other flammable materials accumulated around the cooling system (radiator, oil cooler) or inside the undercover.

- **Fire coming from electric wiring**

Short circuits in the electrical system can cause fire. To prevent fire, always observe the following.

- Keep all electric wiring connections clean and securely tightened.
- Check the wiring every day for looseness or damage. Tighten any loose connectors or wiring clamps. Repair or replace any damaged wiring.

- **Fire coming from piping**

Check that all the hose and tube clamps, guards, and cushions are securely fixed in position.

If they are loose, they may vibrate during operation and rub against other parts. There is danger that this may lead to damage to the hoses and cause high-pressure oil to spurt out, leading to fire, serious personal injury or death.

- **Explosion caused by lighting equipment**



- When checking fuel, oil, battery electrolyte, or coolant, always use lighting with anti-explosion specifications.
- When taking the electrical power for the lighting from the machine itself, follow the instructions in this manual.

PRECAUTIONS WHEN GETTING ON OR OFF MACHINE


USE HANDRAILS AND STEPS WHEN GETTING ON OR OFF MACHINE

To prevent personal injury caused by slipping or falling off the machine, always do as follows.

- Use the handrails and steps marked by arrows in the diagram on the right when getting on or off the machine.

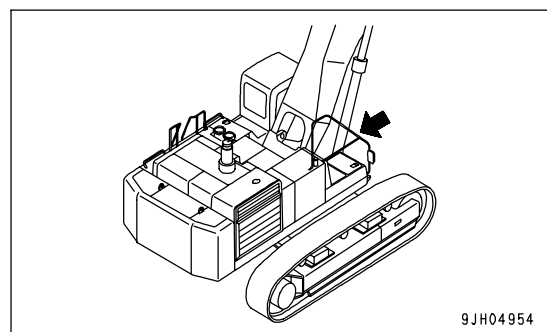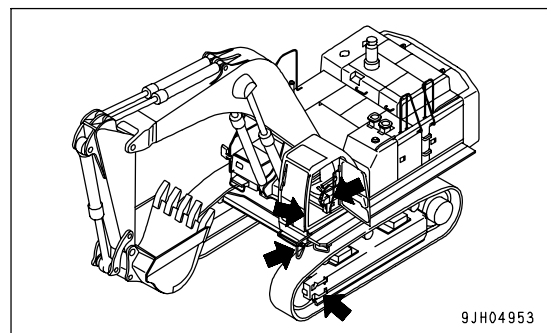

- Always face the machine and maintain at least three-point contact (both feet and one hand, or both hands and one foot) with the handrail and steps to ensure that you support yourself.

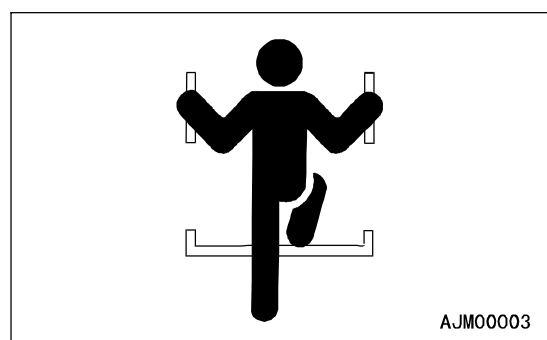

- Before getting on or off the machine, check the handrails and steps, and if there is any oil, grease, or mud on them, wipe it off immediately. In addition, repair any damage and tighten any loose bolts.
- Do not grip the control levers or lock lever when getting on or off the machine.
- Never climb on the engine hood or covers where there are no non-slip pads.
- Do not get on or off the machine while holding tools in your hand.
- The collapsible type side mirror can turn, so do not grab hold of it as a handrail.

NO JUMPING ON OR OFF MACHINE

- Never jump on or off the machine. Never get on or off a moving machine.
- If the machine starts to move when there is no operator on the machine, do not jump on to the machine and try to stop it.


NO PEOPLE ON ATTACHMENTS

Never let anyone ride on the work equipment or other attachments. There is a hazard of falling and suffering serious personal injury or death.

PRECAUTIONS WHEN STANDING UP FROM OPERATOR'S SEAT



Before standing up from the operator's seat, such as when opening or closing the front window or ceiling window, when removing or installing the bottom window, or adjusting the position of the seat, always lower the work equipment completely to the ground, set lock lever (1) to the lock position (L), and stop the engine.

If the control levers are touched by mistake, the machine may suddenly move and cause serious personal injury or death.

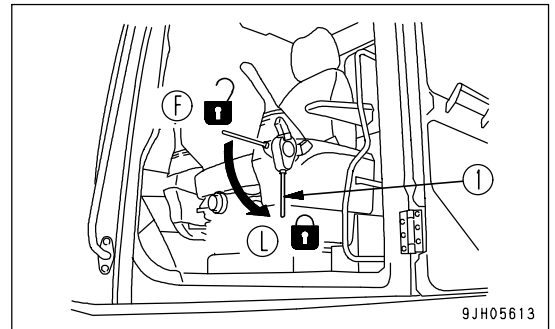**PRECAUTIONS WHEN LEAVING MACHINE**

If the proper procedures are not taken when parking the machine, the machine may suddenly move off by itself, and this may lead to serious personal injury or death. Always do the following.

- When leaving the machine, always lower the work equipment completely to the ground, set lock lever (1) to the lock position (L), and stop the engine.
In addition, lock all parts, always take the key with you and leave it in the specified place.

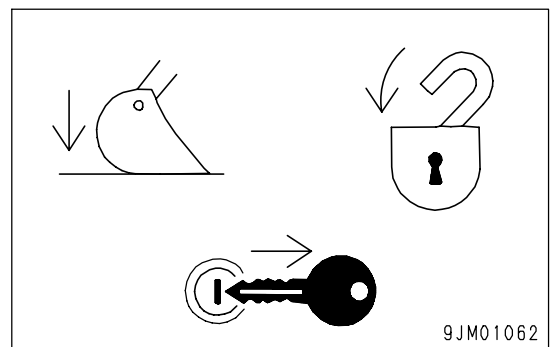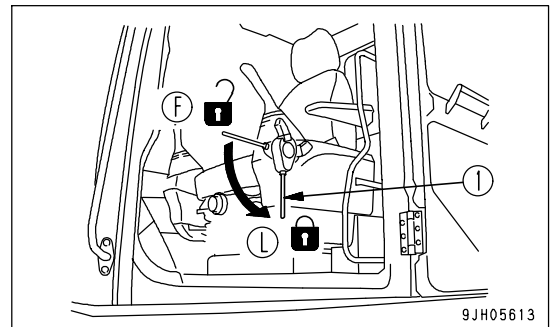**EMERGENCY EXIT FROM OPERATOR'S CAB**


If for some reason, the cab door does not open, use the rear window as an emergency escape. For details, see "EMERGENCY EXIT FROM OPERATOR'S CAB (PAGE 3-49)" in this manual.

DO NOT GET CAUGHT IN WORK EQUIPMENT

The clearance in the area around the work equipment changes according to the movement of the link. If you get caught, you may suffer serious personal injury or death. Do not allow anyone to come close to any rotating or extending/retracting portion.

PRECAUTIONS RELATED TO PROTECTIVE STRUCTURES

The operator's compartment is equipped with a structure (ROPS, FOPS) to protect the operator by absorbing the impact energy. If the machine weight (mass) exceeds the certified value (shown on the ROLL-OVER PROTECTIVE STRUCTURE (ROPS) CERTIFICATION plate), ROPS will not be able to fulfill its function. Do not increase machine weight beyond the certified value by modifying the machine or by installing attachments to the machine. Also, if the function of the protective equipment is impeded, the protective equipment will not be able to protect the operator, and the operator may suffer injury or death. Always observe the following.

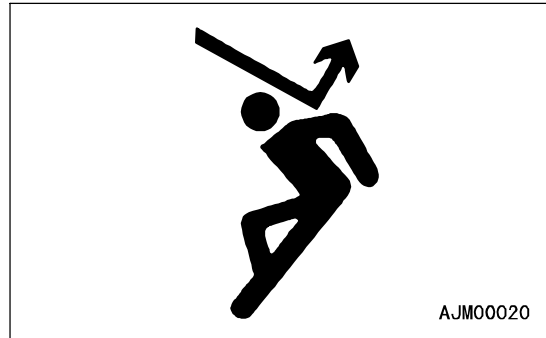



- If the machine is equipped with a protective structure, do not remove the protective structure and carry out operations without it.
- If the protective structure is welded, or holes are drilled in it, or it is modified in any other way, its strength may drop. Consult your Komatsu distributor before carrying out any modifications.
- If the protective structure is damaged or deformed by falling objects or by rolling over, its strength will be reduced and it will not be able to fulfill its function properly. In such cases, always contact your Komatsu distributor for advice on the method of repair.
- Even if the protective structure is installed, always fasten your seat belt properly when operating the machine. If you do not fasten your seatbelt properly, it cannot display its effect.

PROTECTION AGAINST FALLING, FLYING, INTRUDING OBJECTS

On jobsites where there is a hazard that falling objects, flying objects, or intruding objects may hit or enter the operator's cab, consider the operating conditions and install the necessary guards to protect the operator.

- When operating on jobsites, such as mines or quarries, where there is a hazard of falling rocks, install FOPS and a front guard, and always keep all the windows and doors closed when operating. In addition, always check that there is no one except the operator in the surrounding area. They may be hit by falling objects or flying objects.
- When carrying out demolition or breaker operations, install a front guard and always keep all the windows closed when operating. In addition, always check that there is no one except the operator in the surrounding area. They may be hit by falling objects or flying objects.
- If, furthermore, the machine is used for standard operations, it is also necessary to install additional guards, depending on the prevailing conditions at the jobsite.

In such a case, do not operate the machine without an additional guard. Be sure to consult with your Komatsu distributor about necessary guards.

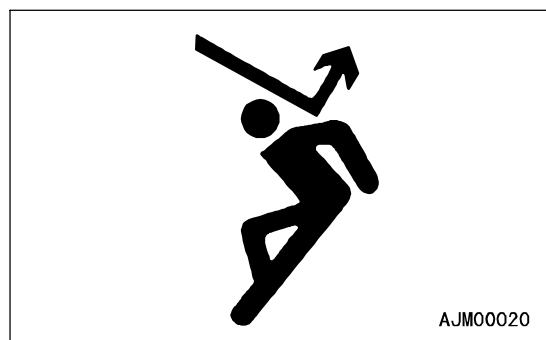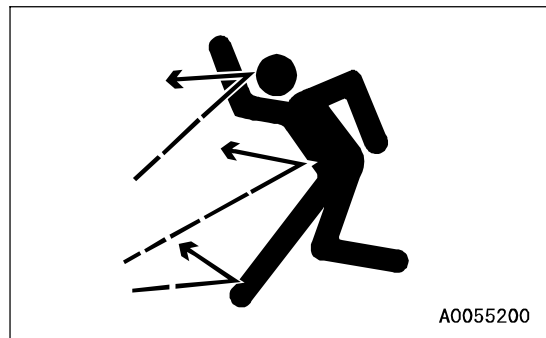

UNAUTHORIZED MODIFICATION

- Komatsu will not be responsible for any injuries, accidents, product failures or other property damages resulting from modifications made without authorization from Komatsu.
- Any modification made without authorization from Komatsu can create hazards. Before making a modification, consult your Komatsu distributor.

PRECAUTIONS RELATED TO ATTACHMENTS AND OPTIONS


- Any injuries, accidents, product failures or other property damages resulting from the use of unauthorized attachments or parts will not be the responsibility of Komatsu.
- When installing optional parts or attachments, there may be problems with safety or legal restrictions. Therefore contact your Komatsu distributor for advice.
- Depending on type of combination of work equipment, there is hazard that the work equipment may hit the cab or other parts of the machine. During operation, an interference of the work equipment with the machine may cause a serious personal injury. Before using unfamiliar work equipment, check there is hazard of interference, and operate within not contact.
- When installing and using optional attachments, read the instruction manual for the attachment, and the general information related to attachments in this manual.

PRECAUTIONS RELATED TO CAB GLASS

- If the cab glass is broken during operations, stop operations and repair the cab glass immediately.
- If the cab glass on the work equipment side is broken, there is a hazard that the operator may be directly hit or caught in the work equipment. If the glass is broken, stop operations immediately and replace the glass.
- The ceiling window is made of plastic, so if it is scratched, the visibility will become poor and there is danger that it may break. If it is scratched, replace it with the new part as soon as possible. If the window is scratched and is not replaced, there is danger that any rocks falling on it will cause it to break, leading to injury to the operator.

PRECAUTIONS WHEN RUNNING ENGINE INSIDE BUILDING

The engine exhaust gas contains substances that may damage your health or even cause death. Start or operate the engine in a place where there is good ventilation. If the engine or machine must be operated inside a building or under ground, where the ventilation is poor, take steps to ensure that the engine exhaust gas is removed and that ample fresh air is brought in.

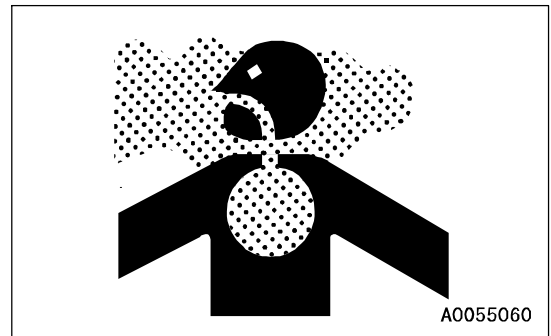


PRECAUTIONS FOR OPERATION

PRECAUTIONS FOR JOBSITE

INVESTIGATE AND CONFIRM JOBSITE CONDITIONS

On the jobsite, there are various hidden dangers that may lead to personal injury or death. Before starting operations, always check the following to confirm that there is no danger on the jobsite.

- When carrying out operations near combustible materials such as thatched roofs, dry leaves or dry grass, there is a hazard of fire, so be careful when operating.
- Check the terrain and condition of the ground at the worksite, and determine the safest method of operation. Do not operate where there is a hazard of landslides or falling rocks.
- If water lines, gas lines, or high-voltage electrical lines may be buried under the worksite, contact each utility and identify their locations. Be careful not to sever or damage any of these lines.
- Take necessary measures to prevent any unauthorized person from entering the operating area.
- In particular, if you need to operate on a road, protect pedestrian and cars by designating a person for worksite traffic duty or by installing fences around the worksite.
- When traveling or operating in water or on soft ground, check the water depth, speed of the current, bedrock, and shape of the ground beforehand and avoid any place that will obstruct travel.

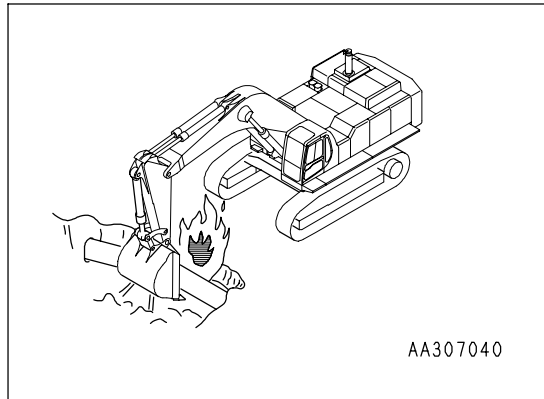


WORKING ON LOOSE GROUND

- Avoid traveling or operating your machine too close to the edge of cliffs, overhangs, and deep ditches. The ground may be weak in such areas. If the ground should collapse under the weight or vibration of the machine, there is a hazard that the machine may fall or tip over. Remember that the soil after heavy rain or blasting or after earthquakes is weak in these areas.
- When working on embankments or near excavated ditches, there is a hazard that the weight and vibration of the machine will cause the soil to collapse. Before starting operations, take steps to ensure that the ground is safe and to prevent the machine from rolling over or falling.

DO NOT GO CLOSE TO HIGH-VOLTAGE CABLES

Do not travel or operate the machine near electric cables. There is a hazard of electric shock, which may cause serious personal injury or death. On jobsites where the machine may go close to electric cables, always do as follows.

- Before starting work near electric cables, inform the local power company of the work to be performed, and ask them to take the necessary action.

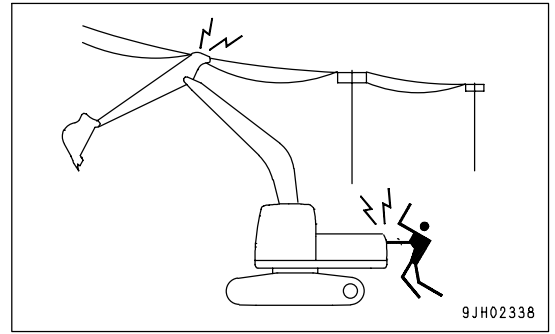

- Even going close to high-voltage cables can cause electric shock, which may cause serious burns or even death. Always maintain a safe distance (see the table on the right) between the machine and the electric cable. Check with the local power company about safe operating procedure before starting operations.
- To prepare for any possible emergencies, wear rubber shoes and gloves. Lay a rubber sheet on top of the seat, and be careful not to touch the chassis with any exposed part of your body.
- Use a signalman to give warning if the machine approaches too close to the electric cables.

Voltage of Cables	Safety Distance
100V - 200V	Over 2 m (7 ft)
6,600V	Over 2 m (7 ft)
22,000V	Over 3 m (10 ft)
66,000V	Over 4 m (14 ft)
154,000V	Over 5 m (17 ft)
187,000V	Over 6 m (20 ft)
275,000V	Over 7 m (23 ft)
500,000V	Over 11 m (36 ft)

- When carrying out operations near high voltage cables, do not let anyone near the machine.
- If the machine should come too close or touch the electric cable, to prevent electric shock, the operator should not leave the operator's compartment until it has been confirmed that the electricity has been shut off. Also, do not let anyone near the machine.

ENSURE GOOD VISIBILITY

This machine is equipped with mirrors to ensure good visibility, but even then there are places that cannot be seen from the operator's seat, so be careful when operating.

When traveling or carrying out operations in places with poor visibility, it is impossible to check for obstacles in the area around the machine and to check the condition of the jobsite. This leads to danger of serious personal injury or death. When traveling or carrying out operations in places with poor visibility, always observe the following.

- Position a signalman if there are areas where the visibility is not good.
- Only one signalman should give signals.
- When working in dark places, turn on the working lamp and front lamps installed to the machine, and set up additional lighting in the work area if necessary.
- Stop operations if the visibility is poor, such as in mist, snow, rain, or dust.
- When checking the mirrors installed to the machine, remove all dirt and adjust the angle of the mirror to ensure good visibility.

CHECKING SIGNS AND SIGNALMAN'S SIGNALS


- Set up signs to inform of road shoulders and soft ground. If the visibility is not good, position a signalman if necessary. Operators should pay careful attention to the signs and follow the instructions from the signalman.
- Only one signalman should give signals.
- Make sure that all workers understand the meaning of all signals and signs before starting work.

BEWARE OF ASBESTOS DUST

Asbestos dust in the air can cause lung cancer if it is inhaled. There is danger of inhaling asbestos when working on jobsites handling demolition work or work handling industrial waste. Always observe the following.

- Spray water to keep down the dust.
- Do not use compressed air.
- If there is danger that there may be asbestos dust in the air, always operate the machine from an upwind position, and make sure that all workers operate on the upwind side.
- All workers should use anti-dust masks.
- Do not allow other persons to approach during the operation.
- Always observe the rules and regulations for the work site and environmental standards.



This machine does not use asbestos, but there is a danger that imitation parts may contain asbestos, so always use genuine Komatsu parts.

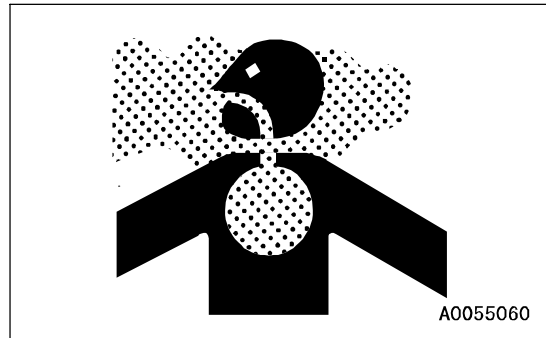

STARTING ENGINE

USE WARNING TAGS


If there is any "DANGER! Do NOT operate!" warning tag displayed, it means that someone is carrying out inspection and maintenance of the machine. If the warning sign is ignored and the machine is operated, there is danger that the person carrying out inspection or maintenance may be caught in the rotating parts or moving parts and suffer serious personal injury or death. Do not start the engine or touch the levers.

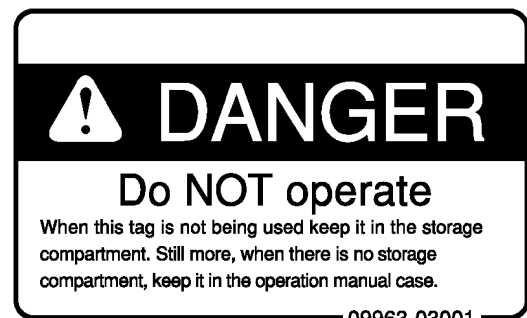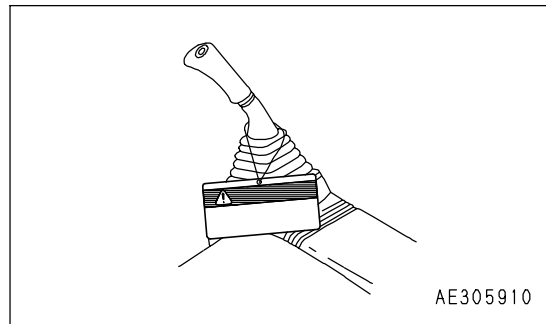

INSPECTION AND MAINTENANCE BEFORE STARTING ENGINE

Carry out the following checks before starting the engine at the beginning of the day's work to ensure that there is no problem with the operation of the machine. If this inspection is not carried out properly problems may occur with the operation of the machine, and there is danger that this may lead to serious personal injury or death.

- Remove all dirt from the surface of the window glass to ensure a good view.
- Carry out the "Walk-around Checks (PAGE 3-79)".
- Remove all dirt from the surface of the lens of the front lamps and working lamps, and check that they light up correctly.
- Check the coolant level, fuel level, and oil level in engine oil pan, check for clogging of the air cleaner, and check for damage to the electric wiring.
- Check that there is no mud or dust accumulated around the movable parts of any pedals, and check that the pedals work properly.
- Adjust the operator's seat to a position where it is easy to carry out operations, and check that there is no damage or wear to the seat belt or mounting clamps.
- Check that the gauges work properly, check the angle of the mirror, and check that the control levers are all at the Neutral position.
- Before starting the engine, check that lock lever (1) is in LOCK position (L).
- Adjust the mirrors so that the rear of the machine can be seen clearly from the operator's seat.
When adjusting, see "Rearview Mirrors (PAGE 3-93)".
- Check that there are no persons or obstacles above, below, or in the area around the machine.

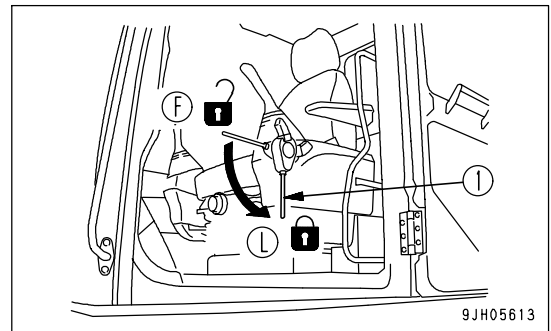

PRECAUTIONS WHEN STARTING ENGINE

- Start and operate the machine only while seated.
- When starting the engine, sound the horn as a warning.
- Do not allow anyone apart from the operator to ride on the machine.
- Do not attempt to start the engine by short-circuiting the engine starting circuit. This may cause fire, serious personal injury or death.



PRECAUTIONS IN COLD AREAS

- Carry out the warming-up operation thoroughly. If the machine is not thoroughly warmed up before the control levers or control pedals are operated, the reaction of the machine will be slow or the machine may move in a way not expected by the operator. Particularly in cold weather, be sure to carry out the warming-up operation thoroughly.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is a hazard that this will ignite the battery and cause the battery to explode.
Before charging or starting the engine with a different power source, melt the battery electrolyte and check that there is no leakage of electrolyte before starting.

STARTING WITH BOOSTER CABLES

If any mistake is made in the method of connecting the booster cables, it may cause the battery to explode, so always do as follows.

- Always wear safety goggles and rubber gloves when starting the engine with booster cable.
- When connecting a normal machine to a problem machine with booster cables, always use a normal machine with the same battery voltage as the problem machine.
- When starting with a booster cable, carry out the starting operation with two workers (one worker sitting in the operator's seat and the other working with the battery).
- When starting from another machine, do not allow the two machines to touch.
- When connecting the booster cables, turn the starting switch to the OFF position for both the normal machine and problem machine. There is a hazard that the machine will move when the power is connected.
- Be sure to connect the positive (+) cable first when installing the booster cables. Disconnect the negative (-) cable (ground side) first when removing them.
- When removing the booster cables, be careful not to let the booster cable clips touch each other or to let the clips touch the machine.
- For details of the starting procedure when using booster cables, see "Starting Engine with Booster Cables (PAGE 3-159)" in the OPERATION section.

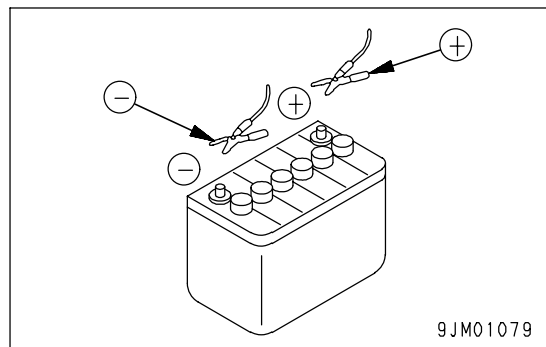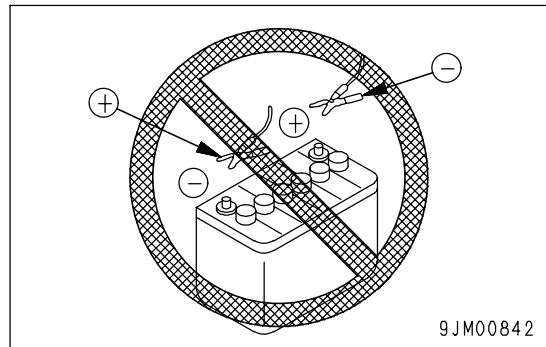


OPERATION

CHECKS BEFORE OPERATION

If the checks before starting are not carried out properly, the machine will be unable to display its full performance, and there is also danger that it may lead to serious personal injury or death.

When carrying out the checks, move the machine to a wide area where there are no obstructions, and pay careful attention to the surrounding area. Do not allow anyone near the machine.




- Always wear the seatbelt. There is danger that you may be thrown out of the operator's seat and suffer serious injury when the brakes are applied suddenly.
- Check that the movement of the machine matches the display on the control pattern card. If it does not match, replace it immediately with the correct control pattern card.
- Check the operating condition of the machine, work equipment, arm, boom, travel, and swing system.
- Check for any problem in the sound of the machine, vibration, heat, smell, or gauges; check also that there is no leakage of oil or fuel.
- If any problem is found, carry out repairs immediately.

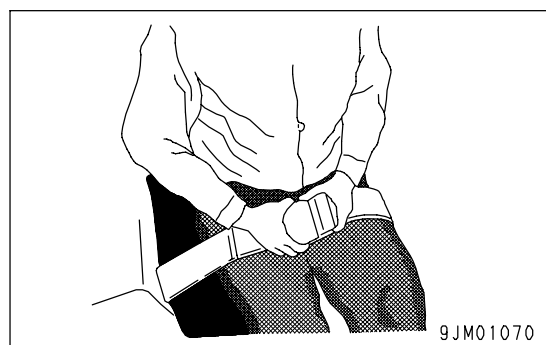

PRECAUTIONS WHEN TRAVELING IN FORWARD OR REVERSE AND SWINGING



- When traveling, drive with sprocket (1) at the rear of the machine. If sprocket (1) is at the front, the operation of the travel levers will be the opposite of the actual direction of travel, so there is a hazard that the machine may travel in an unexpected direction, leading to serious injury or death.
- Always lock all the door and windows of the operator's compartment in position (open or closed).
On jobsites where there is a hazard of flying objects or of objects entering the operator's compartment, check that all the door and windows are securely closed.
- Do not allow anyone apart from the operator to ride on the machine.
- If there are any persons in the area around the machine, there is danger that they may be hit or caught by the machine, and this may lead to serious personal injury or death. Always observe the following before traveling.
 - Always operate the machine only when seated.
 - Before moving off, check it again that there is no person or obstacle in the surrounding area.
 - Before starting to move, sound the horn to warn people in the surrounding area.
 - Check that the travel alarm and other alarms work properly.
 - If there is an area to the rear of the machine that cannot be seen, position a signalman. Swing slowly and be extremely careful not to hit any person or object.

Always be sure to carry out the above precautions even when the machine is equipped with mirrors.

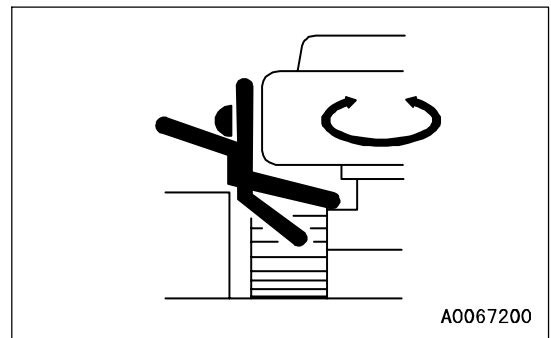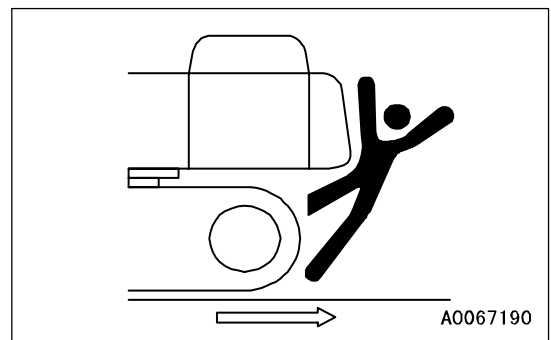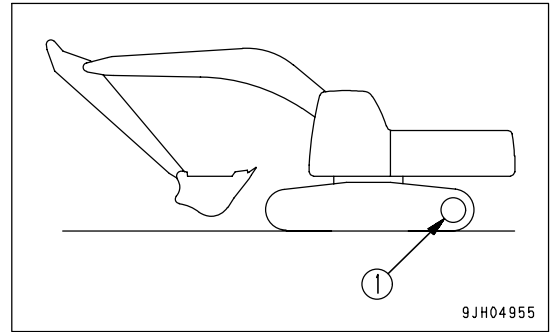

PRECAUTIONS WHEN TRAVELING



- When traveling or carrying out operations, always keep a safe distance from people, structures, or other machines to avoid coming into contact with them.
- When traveling on the level ground, keep the work equipment approximately 40 to 50 cm above the ground. Otherwise, the work equipment may contact to the ground and the machine may be turned over.
- If the view to the right side is poor, raise the boom to ensure better visibility.
- For machines equipped with an auto-deceleration system, always turn the auto-deceleration switch OFF when traveling on rough ground or steep slopes. If the machine is operated with the auto-deceleration system ON, the engine speed will rise and the machine travel speed may suddenly become faster.
- Avoid traveling over obstacles when possible. If the machine has to travel over an obstacle, keep the work equipment close to the ground and travel at low speed. There is more danger of the machine tipping over to the left or right than tipping over to the front or rear, so do not travel over obstacles which make the machine tilt strongly to the left or right sides.
- When traveling on rough ground, travel at low speed and do not operate the steering suddenly. There is danger that the machine may turn over. The work equipment may hit the ground surface and cause the machine to lose its balance, or may damage the machine or structures in the area.
- When using the machine, to prevent personal injury caused by damage to the work equipment or by the machine overturning due to overloading, do not exceed the permitted performance of the machine or the maximum permitted load for the structure of the machine.
- When passing over bridges or structures, check first that the structure is strong enough to support the weight of the machine.
- When operating in tunnels, under bridges, under electric wires, or other places where the height is limited, operate slowly and be extremely careful not to let the machine body or work equipment hit anything.

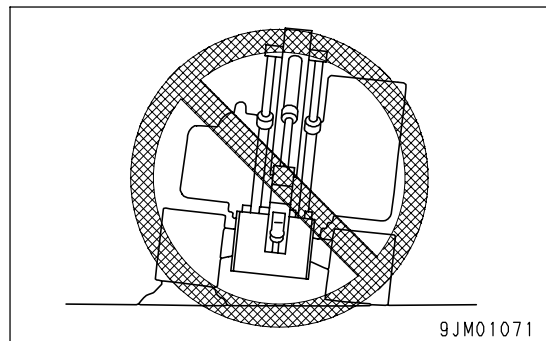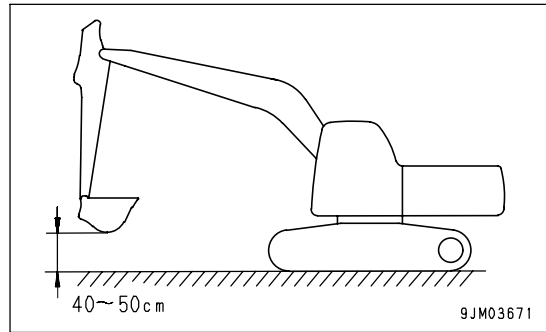


TRAVELING ON SLOPES

To prevent the machine from tipping over or slipping to the side, always do as follows.


- Keep the work equipment approx. 20 to 30 cm (8 to 12 in) above the ground. In case of emergency, lower the work equipment to the ground immediately to help stop the machine.
- When travel up slopes, set the operator's cab facing uphill, when travel down slopes, set the operator's cab facing downhill. Always check the firmness of the ground under the front of the machine when traveling.

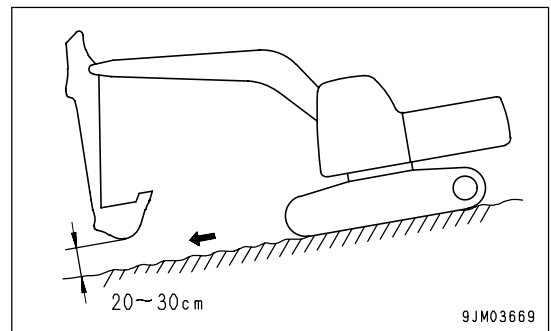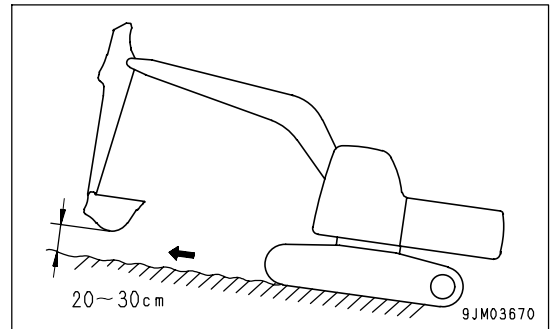

- When traveling up a steep slope, extend the work equipment to the front to improve the balance, keep the work equipment approximately 20 to 30 cm (8 to 12 in) above the ground, and travel at low speed.

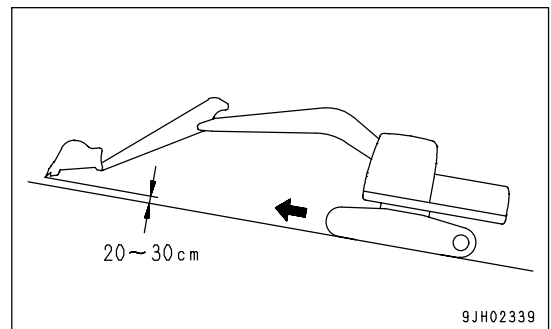


- When traveling downhill, lower the engine speed, keep the travel lever close to the neutral position, and travel at low speed.
- Always travel straight up or down a slope. Traveling at an angle or across the slope is extremely dangerous.
- Do not turn on slopes or travel across slopes. Always go down to a flat place to change the position of the machine, then travel on to the slope again.

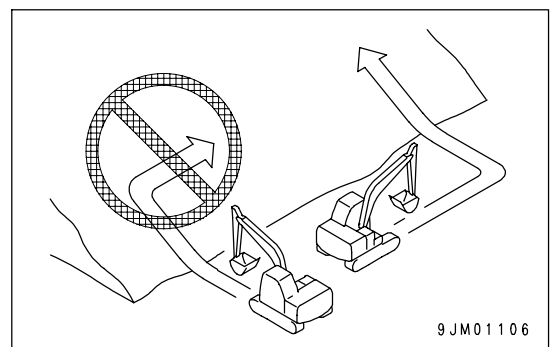

- Do not travel on a slope covered with the steel plates. Even with slight slopes there is a hazard that the machine may slip.
- Travel on grass or fallen leaves with low speed. Even with slight slopes there is a hazard that the machine may slip.
- If the engine stops when the machine is traveling on a slope, move the control levers immediately to the neutral position and start the engine again.

OPERATING ON SLOPES


- When working on slopes, there is a hazard that the machine may lose its balance and turn over when the swing or work equipment are operated. This may lead to serious injury or property damage, so always provide a stable place when carrying out these operations, and operate carefully.
- Do not swing the work equipment from the uphill side to the downhill side when the bucket is loaded. This operation is dangerous, and may cause the machine to tip over.
- If the machine has to be used on a slope, pile the soil to make a platform (A) that will keep the machine as horizontal as possible.
- Do not work on a slope covered with the steel plates. Even with slight slopes there is a hazard that the machine may slip.

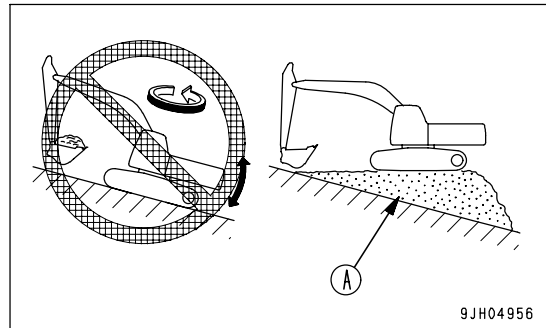


PROHIBITED OPERATIONS

If the machine rolls over or falls, or the ground at the working point collapses, or a structure being demolished collapses, it may lead to serious personal injury or death. Always observe the following.


- Never dig the work face under an overhang. There is a hazard that rocks may fall or that the overhang may collapse and fall on top of the machine.

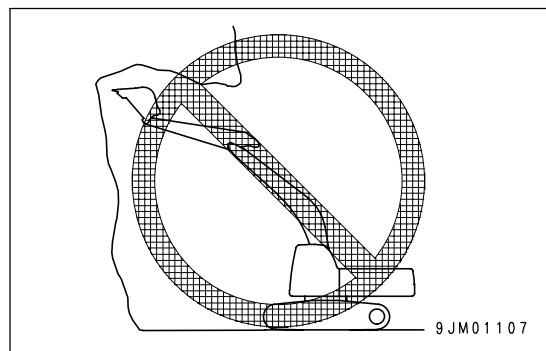


- Do not excavate too deeply under the front of the machine. The ground under the machine may collapse and cause the machine to fall.

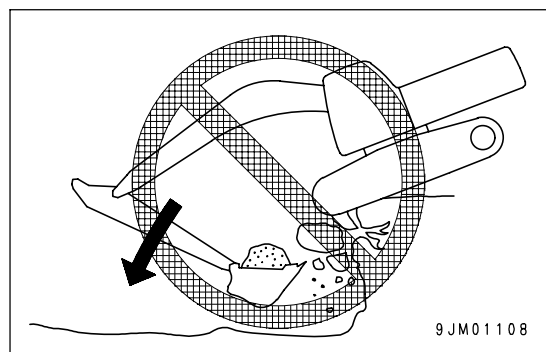


- To make it easier to escape if there is any problem, set the tracks at right angles to the road shoulder or cliff with the sprocket at the rear when carrying out operations.

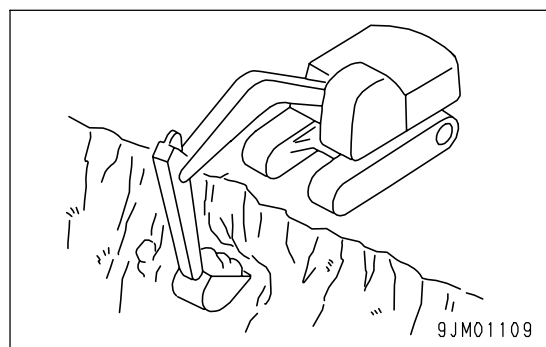


- When carrying out demolition work, do not carry out demolition work under the front of the machine. This makes the ground unstable, and there is a hazard of the machine falling.

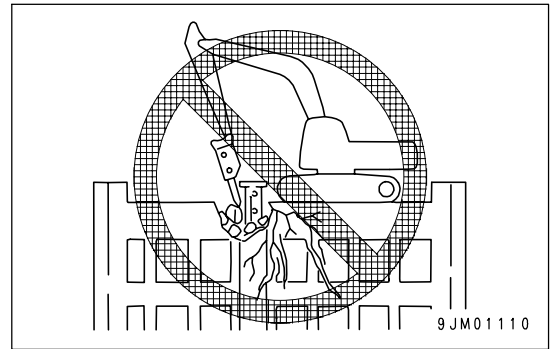

- When carrying out demolition work, do not carry out demolition work above your head. There is a hazard of broken parts falling or of the building collapsing and causing serious injury or death.

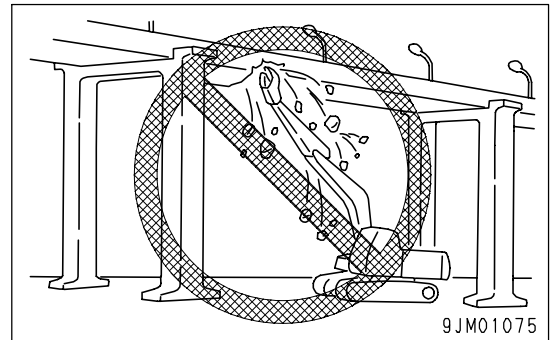

- When carrying out demolition work, do not use the impact force of the work equipment for breaking work. There is a hazard of damage to the work equipment and also a hazard of serious personal injury or death being caused by flying pieces of broken materials, or of the machine tipping over due to reaction from the impact.

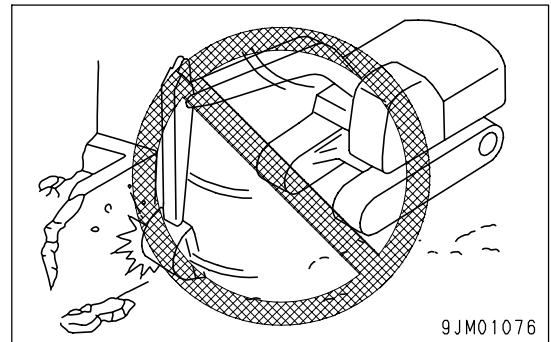


- Do not pass the bucket over the heads of other workers or over the operator's seat of dump trucks or other hauling equipment. There is danger that the load may spill or the bucket may hit the dump truck and cause serious personal injury or death.
- When working on or from the top of buildings or other structures, check the strength and the structure before starting operations. There is a hazard of the building collapsing and causing serious injury or damage.
- Generally speaking, the machine is more liable to overturn when the work equipment is at the side than when it is at the front or rear.
- When using a breaker or other heavy work equipment, there is a hazard of the machine losing its balance and tipping over. When operating on flat ground as well as on slopes.
 - Do not suddenly lower, swing, or stop the work equipment.
 - Do not suddenly extend or retract the boom cylinder. There is a hazard that impact will cause the machine to tip over.

TRAVELING ON SNOW-COVERED OR FROZEN SURFACES


- Snow-covered or frozen surfaces are slippery, so be extremely careful when traveling or operating the machine, and do not operate the levers suddenly. Even a slight slope may cause the machine to slip, so be particularly careful when working on slopes.
- With frozen ground surfaces, the ground becomes soft when the temperature rises, and this may cause the machine to tip over or make it impossible for the machine to escape.
- If the machine enters deep snow, there is a hazard that it may tip over or become buried in the snow. Be careful not to leave the road shoulder or to get trapped in a snow drift.
- When clearing snow, the road shoulder and objects placed beside the road are buried in the snow and cannot be seen. There is a hazard of the machine tipping over or hitting covered objects, so always carry out operations carefully.

PARKING MACHINE


- Park the machine on firm, level ground.
- Select a place where there is no hazard of landslides, falling rocks, or flooding.
- Lower the work equipment completely to the ground.

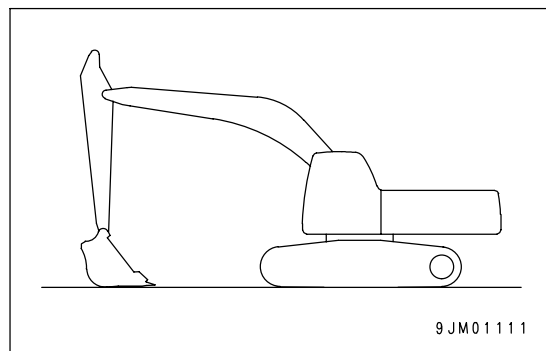

- When leaving the machine, set lock lever (1) to the LOCK position (L), then stop the engine.
- Always close the operator's cab door, and use the key to lock all the equipment in order to prevent any unauthorized person from moving the machine. Always remove the key, take it with you, and leave it in the specified place.

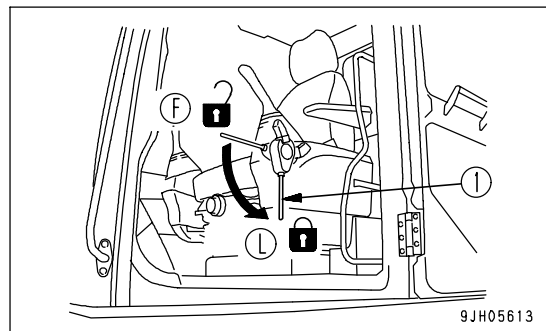

- If it is necessary to park the machine on a slope, always do as follows.
 - Set the work equipment on the downhill side and dig it into the ground.
 - In addition, put blocks under the tracks to prevent the machine from moving.

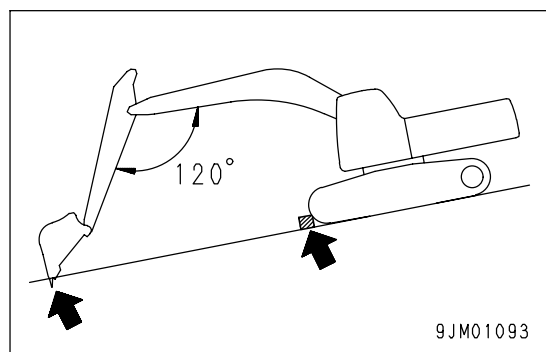

TRANSPORTATION

When the machine is transported on a trailer, there is danger of serious personal injury or death during transportation. Always do as follows.


- Always check the machine dimensions carefully. Depending on the work equipment installed, the machine weight, transportation height, and overall length may differ.
- Check beforehand that all bridges and other structures on the transportation route are strong enough to withstand the combined weight of the transporter and the machine being transported.
- The machine can be divided into parts for transportation, so when transporting the machine, please contact your Komatsu distributor to have the work carried out.

LOADING AND UNLOADING

When loading or unloading the machine, mistaken operation may bring the hazard of the machine tipping over or falling, so particular care is necessary. Always do as follows.

- Perform loading and unloading on firm, level ground only. Maintain a safe distance from the edge of the road or cliff.
- Never use the work equipment to load or unload the machine. There is danger that the machine may fall or tip over.
- Always use ramps of adequate strength. Be sure that the ramps are wide, long, and thick enough to provide a safe loading slope. Take suitable steps to prevent the ramps from moving out of position or coming off.
- Be sure the ramp surface is clean and free of grease, oil, ice and loose materials. Remove dirt from machine-tracks. On a rainy day, in particular, be extremely careful since the ramp surface is slippery.
- For machines equipped with an auto-deceleration device, always turn the auto-deceleration switch OFF. If the machine is operated with the auto-deceleration system ON, there is danger that the engine speed will suddenly rise, the machine will suddenly move off, or the machine travel speed will become faster.
- Run the engine at low idling and drive the machine slowly at low speed.
- When on the ramps, do not operate any lever except for the travel lever.
- Never correct your steering on the ramps. If necessary, drive off the ramps, correct the direction, then enter the ramps again.
- The center of gravity of the machine will change suddenly at the joint between the ramps and the track or trailer, and there is danger of the machine losing its balance. Travel slowly over this point.
- When loading or unloading to an embankment or platform, make sure that it has suitable width, strength, and grade.
- When swinging the upper structure on the trailer, the trailer is unstable, so pull in the work equipment and swing slowly.
- For machines equipped with a cab, always lock the door after boarding the machine. If this is not done, the door may suddenly open during transportation.

Refer to "TRANSPORTATION (PAGE 3-137)".

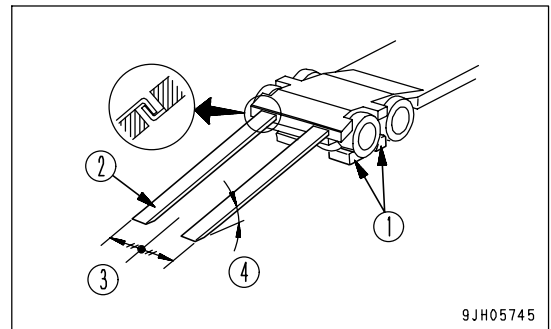

- (1) Blocks
- (2) Ramp
- (3) Centerline of trailer
- (4) Angle of ramps: Max. 15°

9JH05745


TOWING

PRECAUTIONS WHEN TOWING

Always use the correct towing equipment and towing method. Any mistake in the selection of the wire rope or towing bar or in the method of towing a disabled machine may lead to serious personal injury or death.

For towing, see "TOWING THE MACHINE (PAGE 3-156)".



- Always confirm that the wire rope or drawbar used for towing has ample strength for the weight of the machine being towed.
- Never use a wire rope which has cut strands (A), reduced diameter (B), or kinks (C). There is danger that the rope may break during the towing operation.
- Always wear leather gloves when handling wire rope.
- Never tow a machine on a slope.
- During the towing operation, never stand between the towing machine and the machine being towed.

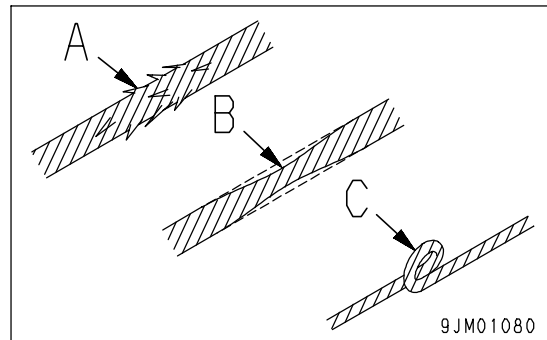

LIFTING OBJECTS WITH BUCKET

PRECAUTIONS FOR LIFTING OPERATIONS

- Do not carry out lifting work on slopes, soft ground, or other places where the machine is not stable.
- Use wire rope that conforms to the specified standard.
- Always observe the specified lifting load strictly.
- Determine the signals to be used and place a signaller in position.
- To prevent the danger of contact with a raised load or the danger from a falling load, do not allow any worker inside the area.
- It is dangerous if a raised load hits any person or structure. When operating the swing or work equipment, always check carefully that the surrounding area is safe.
- Do not start, swing, or stop the machine suddenly. There is a hazard that the lifted load will swing.
- Do not use the work equipment or swing to pull the load in any direction. There is danger that the hook may break and the load come off, causing the work equipment to move suddenly and cause personal injury.
- Do not leave the operator's seat when there is a raised load.

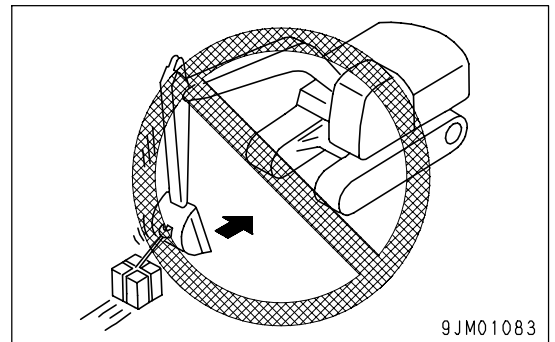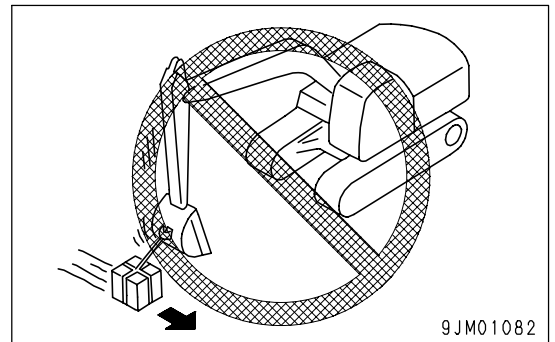

PRECAUTIONS FOR MAINTENANCE

PRECAUTIONS BEFORE STARTING INSPECTION AND MAINTENANCE

DISPLAY WARNING TAG DURING INSPECTION AND MAINTENANCE



If there is any "DANGER! Do NOT operate!" warning tag displayed, it means that someone is carrying out inspection and maintenance of the machine. If the warning sign is ignored and the machine is operated, there is danger that the person carrying out inspection or maintenance may be caught in the rotating parts or moving parts and suffer serious personal injury or death. Do not start the engine or touch the levers.

- If necessary, put up signs around the machine also.

Warning tag part number: 09963-03001

When not using this warning tag, keep it in the toolbox.

If there is no toolbox, keep it in the pocket for the Operation and Maintenance Manual

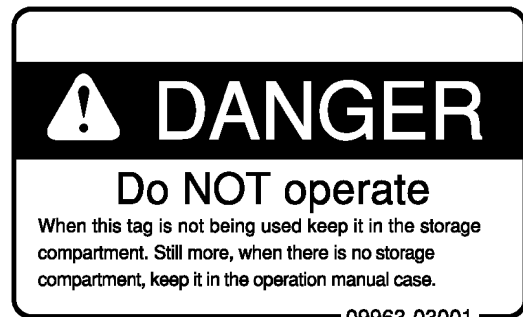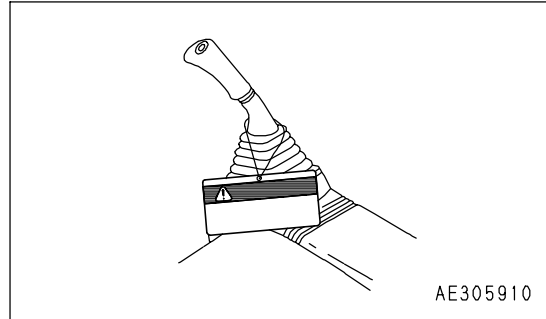

KEEP WORKPLACE CLEAN AND TIDY

- Do not leave hammers or other tools lying around in the work place. Wipe up all grease, oil, or other substances that will cause you to slip. Always keep the work place clean and tidy to enable you to carry out operations safely. If the work place is not kept clean and tidy, there is the danger that you will trip, slip, or fall over and injure yourself.
- When cleaning the ceiling window which is made of organic glass (polycarbonate), use tap water and avoid use of organic solvents for cleaning. An organic solvent like benzene, toluene or methanol can invite a chemical reaction like dissolution and decomposition on the window glass, deteriorating polycarbonate in use.

SELECT SUITABLE PLACE FOR INSPECTION AND MAINTENANCE

- Stop the machine on firm, level ground.
- Select a place where there is no hazard of landslides, falling rocks, or flooding.

ONLY AUTHORIZED PERSONNEL


Do not allow any unauthorized personnel into the area when servicing the machine. If necessary, employ a guard.

APPOINT LEADER WHEN WORKING WITH OTHERS


- When repairing the machine or when removing and installing the work equipment, appoint a leader and follow his instructions during the operation.

STOP ENGINE BEFORE CARRYING OUT INSPECTION AND MAINTENANCE


- Lower the work equipment completely to the ground and stop the engine before performing any inspection and maintenance.

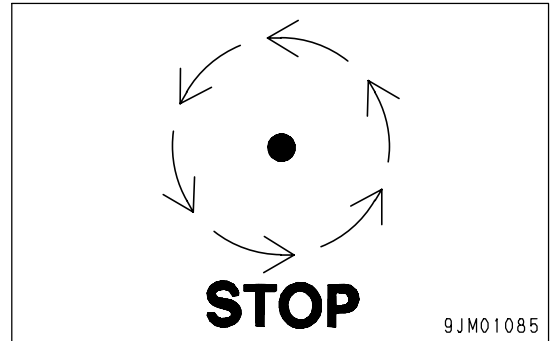

- Turn the starting switch to the ON position. Operate the work equipment control lever back and forth, left and right at the full stroke 2 to 3 times to eliminate the remaining internal pressure in the hydraulic circuit, and then move lock lever (1) to the LOCK position (L).
- Check that the battery relay is off and main power is not conducted. (Wait for approx. one minute after turning off the engine starting switch key and press the horn switch. If the horn does not sound, it is not activated.)

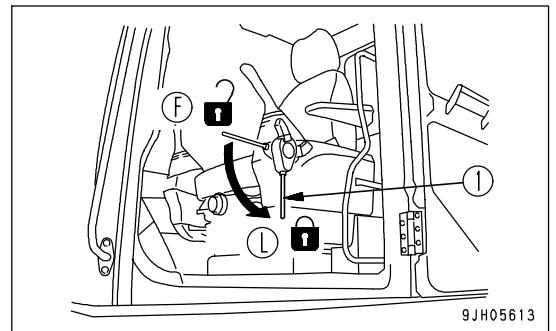


- Put blocks under the track to prevent the machine from moving.

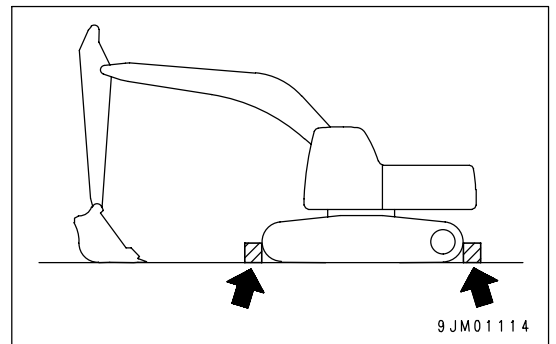


TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING

To prevent personal injury, do not carry out maintenance with the engine running. If maintenance must be carried out with the engine running, carry out the operation with at least two workers and do as follows.

- One worker must always sit in the operator’s seat and be ready to stop the engine at any time. All workers must maintain contact with the other workers.
- When carrying out operations near the fan, fan belt, or other rotating parts, there is a hazard of being caught in the parts, so be careful not to come close.
- Never drop or insert tools or other objects into the fan, fan belt, or other rotating parts. There is danger that they may contact the rotating parts and break or be sent flying.

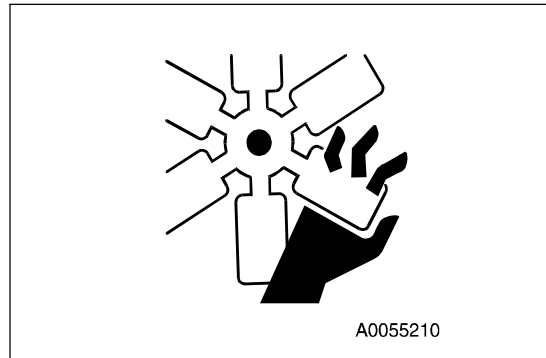

- Release the residual pressure from the hydraulic system, and place Lock lever (1) to its LOCK position. For releasing of the residual oil pressure, see the METHOD OF RELEASING PRESSURE IN HYDRAULIC CIRCUIT (PAGE 4-78)".
- Do not touch the control levers or pedals. If it is necessary to operate the control levers or pedals, always give a signal to your fellow workers and have them move to a safe place.

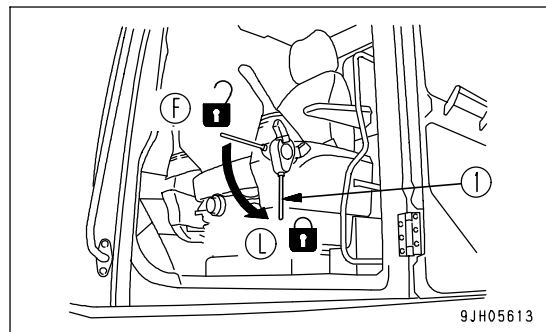

INSTALLING, REMOVING, OR STORING ATTACHMENTS

- Appoint a leader before starting removal or installation operations for attachments.
- Place attachments that have been removed from the machine in a stable condition so that they do not fall. And take steps to prevent unauthorized persons from entering the storage area.




PRECAUTIONS WHEN WORKING AT HIGH PLACES


When working at high places, use a step ladder or other stand to ensure that the work can be carried out safely.

PRECAUTIONS WHEN WORKING ON MACHINE


- Clean up the machine to prevent falling off when performing maintenance, always do as follows.
 - Do not spill oil or grease.
 - Do not scatter the tools.
 - Be careful at the time of the walk on the step.
 - Remove mud and the oils and fats kind of the bottom of shoes.
- Never jump off the machine. When getting on or off the machine, maintain at least three-point contact (both feet and one hand, or both hands and one foot) with the handrail and steps to ensure that you support yourself.
- Use the protection tool matching work contents.
- To prevent personal injury caused by slipping or falling off the machine, never climb on the engine hood or covers except the check passage with non-slip pads.

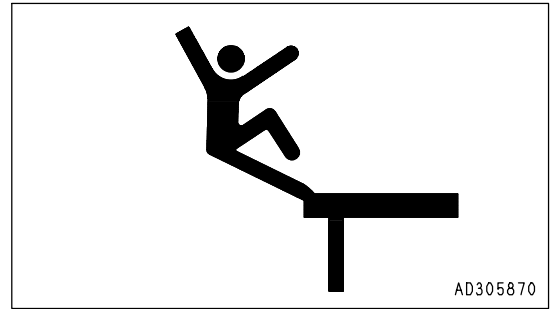**PRECAUTIONS WHEN WORKING UNDER MACHINE OR WORK EQUIPMENT**

- Make sure the hoists or jacks you use are in good repair and strong enough to handle the weight of the component. Never use jacks at places where the machine is damaged, bent, or twisted. Never use frayed, twisted or pinched wire rope. Never use bent or distorted hooks.
- It is extremely dangerous to work under the machine if the track shoes are lifted off the ground and the machine is supported only with the work equipment. If any of the control levers is touched by accident, or there is damage occurring to the hydraulic piping, the work equipment or the machine will suddenly drop. This is extremely dangerous. Never work under the work equipment or the machine.
- If it is necessary to raise the work equipment or the machine and then go under it to carry out inspection or maintenance, support the work equipment and machine securely with blocks and stands strong enough to support the weight of the work equipment and machine. If the work equipment and machine are not supported, there is a hazard that they may come down and that this may lead to serious personal injury or death.
- Never use concrete blocks for supports. They can collapse under even light loads.

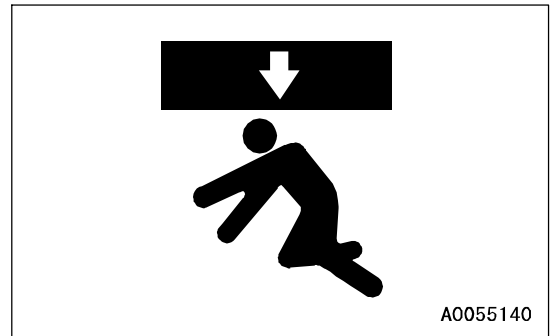**PROPER TOOLS**

Use only tools suited to the task and be sure to use the tools correctly. Using damaged, deformed, or low quality tools, or making improper use of the tools may cause serious personal injury.

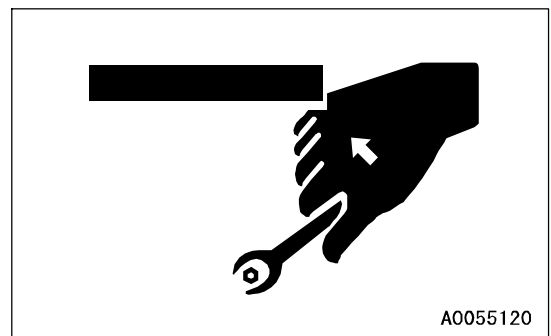

PRECAUTIONS FOR INSPECTION AND MAINTENANCE

PRECAUTIONS WHEN WELDING

Welding operations must always be carried out by a qualified welder and in a place equipped with proper equipment. There is a hazard of gas, fire, or electrocution when carrying out welding, so never allow any unqualified personnel to carry out welding.


HANDLING BATTERY

Before inspecting or handling the battery, turn the key in the starting switch to the OFF position.

- **Danger of battery exploding**

When the battery is being charged, flammable hydrogen gas is generated and may explode. In addition, the battery electrolyte includes dilute sulphuric acid. Any mistake in handling may cause serious personal injury, explosion, or fire, so always observe the following.


- Do not use or charge the battery if the battery electrolyte is below the LOWER LEVEL mark. This will cause explosion. Always carry out periodic inspection of the battery electrolyte level, and add distilled water (or commercially available battery filler solution) to the UPPER LEVEL mark.
- Do not smoke or bring any flame close to the battery.
- Hydrogen gas is generated when the battery is being charged, so remove the battery from the machine, take it to a well-ventilated place, remove the battery caps, then carry out the charging.
- After charging, tighten the battery caps securely.

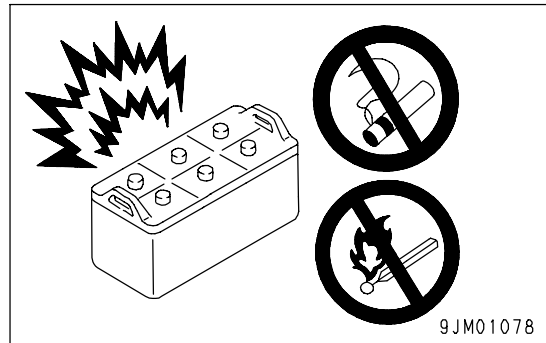

- **Danger from dilute sulphuric acid**

When the battery is being charged, flammable hydrogen gas is generated and may explode. In addition, the battery electrolyte includes dilute sulphuric acid. Any mistake in handling may cause serious personal injury, explosion, or fire, so always observe the following.

- When handling the battery, always wear protective goggles and rubber gloves.
- If battery electrolyte gets into your eyes, immediately wash your eyes with large amounts of fresh water. After that, get medical attention immediately.
- If battery electrolyte gets on your clothes or skin, wash it off immediately with large amounts of water.

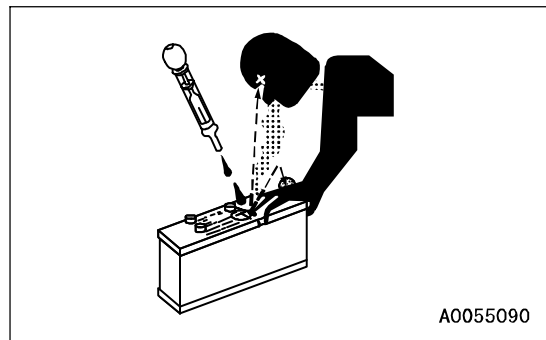

- **Removing battery cables**

Before repairing the electrical system or carrying out electric welding, turn the starting switch OFF. Wait for approx. 1 minute, then remove the negative (-) battery cable to stop the flow of electricity.

- **Danger of sparks**


There is hazard that sparks will be generated, so always observe the following.

- Do not let tools or other metal objects make any contact between the battery cables. Do not leave tools lying around near the battery.
- When removing the battery cables, remove the ground cable (negative (-) cable) first. When installing, connect the positive (+) cable first, then connect the ground. Tighten the battery cable terminals securely.
- Secure the battery firmly in the specified position.

PRECAUTIONS WHEN USING HAMMER


When using a hammer, pins may fly out or metal particles may be scattered. This may lead to serious personal injury or death. Always do as follows.

- When hitting pins or bucket teeth, there is a hazard that broken pieces might be sent flying and injure people in the surrounding area. Always check that there is no one in the surrounding area.
- If hard metal parts such as pins, bucket teeth, cutting edges, or bearings are hit with a hammer, there is a hazard that pieces might be scattered and cause serious personal injury or death. Always wear safety glasses and gloves.
- If the pin is hit with strong force, there is a hazard that it may fly out and injure people in the surrounding area. Do not allow anyone to enter the surrounding area.

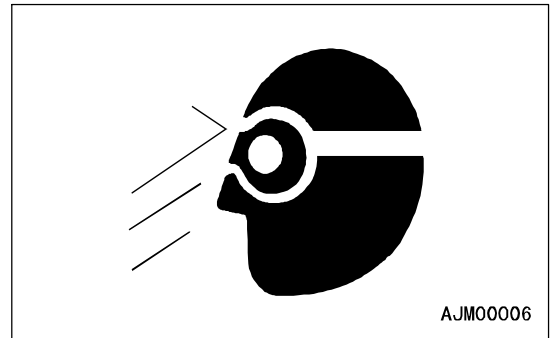


PRECAUTIONS WITH HIGH-TEMPERATURE COOLANT

To prevent burns from boiling water or steam spurting out when checking or draining the coolant, wait for the coolant to cool down to a temperature where the radiator cap can be touched by hand. Then loosen the cap slowly to release the pressure inside the radiator, and remove the cap.

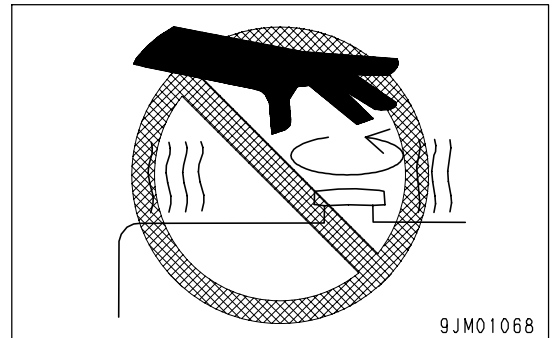

PRECAUTIONS WITH HIGH-TEMPERATURE OIL


To prevent burns from hot oil spurting out or from touching high-temperature parts when checking or draining the oil, wait for the oil to cool down to a temperature where the cap or plug can be touched by hand. Then loosen the cap or plug slowly to release the internal pressure and remove the cap or plug.

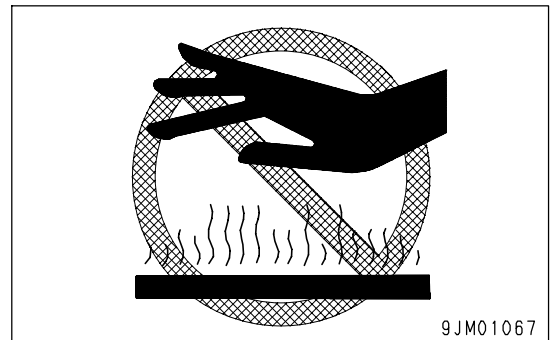

PRECAUTIONS WITH HIGH-PRESSURE OIL

The hydraulic system is always under internal pressure. In addition, the fuel piping is also under internal pressure when the engine is running and immediately after the engine is stopped. When carrying out inspection or replacement of the piping or hoses, check that the internal pressure in the circuit has been released. If this is not done, it may lead to serious personal injury or death. Always do as follows.

- Do not carry out inspection or replacement work with the circuit under pressure.
Always release the pressure before starting. For details, see "METHOD OF RELEASING PRESSURE IN HYDRAULIC CIRCUIT (PAGE 4-78)".
- If there is any leakage from the piping or hoses, the surrounding area will be wet, so check for cracks in the piping and hoses and for swelling in the hoses.
When carry out inspection, wear safety glasses and leather gloves.
- There is a hazard that high-pressure oil leaking from small holes may penetrate your skin or cause loss of sight if it contacts your skin or eyes directly. If you are hit by a jet of high-pressure oil and suffer injury to your skin or eyes, wash the place with clean water, and consult a doctor immediately for medical attention.

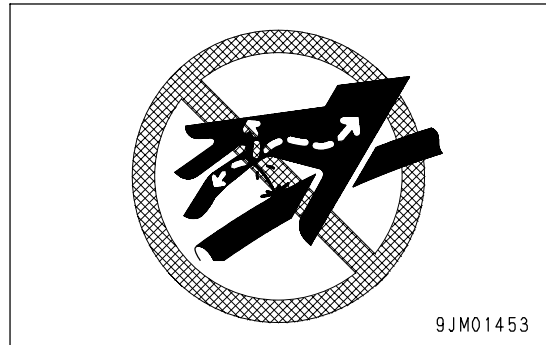**PRECAUTIONS WITH HIGH-PRESSURE FUEL**

When the engine is running, high-pressure is generated in the engine fuel piping. When carrying out inspection or maintenance of the fuel piping system, stop the engine and wait for at least 30 seconds to allow the internal pressure to go down before starting the operation.

HANDLING HIGH-PRESSURE HOSES AND PIPING

- If oil or fuel leaks from high-pressure hoses or piping, it may cause fire or misoperation, and lead to serious personal injury, or death. If the hose or piping mounts are loose or oil or fuel is found to be leaking from the mount, stop operations and tighten to the specified torque.
If any damaged or deformed hoses or piping are found, please consult your Komatsu distributor.


Replace the hose if any of the following problems are found.

- Damaged hose or deformed hydraulic fitting.
- Frayed or cut covering or exposed reinforcement wire layer.
- Covering swollen in places.
- Twisted or crushed movable portion.
- Foreign material embedded in covering.

PRECAUTIONS FOR HIGH VOLTAGE

When the engine is running and immediately after it is stopped, high voltage is generated inside the engine controller and the engine injector, and there is danger of electrocution. Never touch the inside of the controller or the engine injector portion.

If it is necessary to touch the inside of the controller or the engine injector portion, please contact your Komatsu distributor.

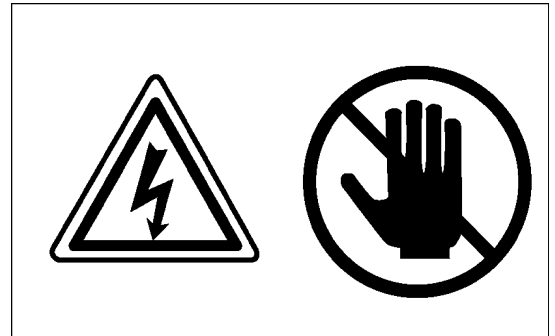**NOISE**

When carrying out maintenance of the engine and you are exposed to noise for long periods of time, wear ear covers or ear plugs while working.



If the noise from the machine is too loud, it may cause temporary or permanent hearing problems.

PRECAUTIONS WITH HIGH-PRESSURE GREASE WHEN ADJUSTING TRACK TENSION

- Grease is pumped into the track tension adjustment system under high pressure.

If the specified procedure for maintenance is not followed when making adjustment, grease drain plug (1) may fly out and cause serious injury or property damage.


- When loosening grease drain plug (1) to loosen the track tension, never loosen it more than one turn. Loosen the grease drain plug slowly.
- Never put your face, hands, feet, or any other part of your body close to grease drain plug (1).

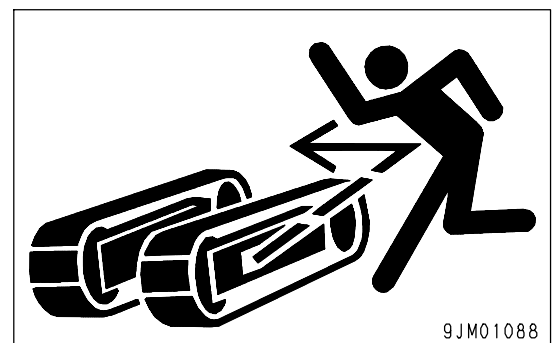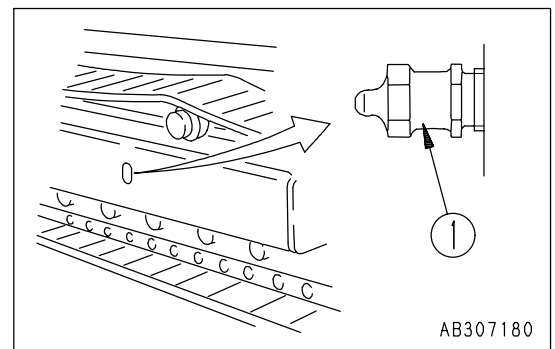

DO NOT DISASSEMBLE RECOIL SPRING

Never disassemble the recoil spring assembly. The recoil spring assembly has a powerful spring that acts to reduce the impact on the idler. If it is disassembled by mistake, the spring may shoot out and cause serious personal injury or death.

It is necessary to disassemble the recoil spring assembly, always ask your Komatsu distributor to carry out the operation.

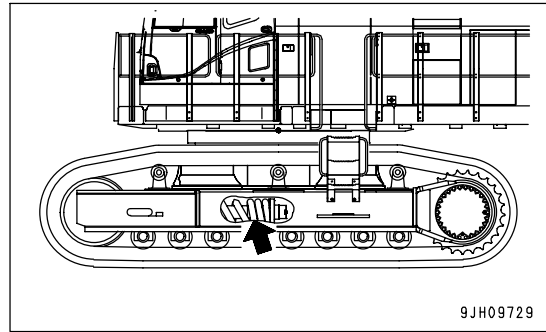

HANDLING ACCUMULATOR AND GAS SPRING

This machine is equipped with an accumulator. Even after the engine stops, the work equipment control levers can be operated for a short time in the LOWER direction to allow the work equipment to go down under its own weight. After stopping the engine, set the lock lever to the LOCK position.

The accumulator and gas spring are charged with high-pressure nitrogen gas. If the accumulator is handled mistakenly, it may cause an explosion that could lead to serious personal injury or death. For this reason, always observe the following precautions.

- Do not disassemble the accumulator.
- Do not bring it near flame or dispose of it in fire.
- Do not make holes in it, weld it, or use a cutting torch.
- Do not hit or roll the accumulator, or subject it to any impact.
- When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work performed.



PRECAUTIONS WITH COMPRESSED AIR

- When carrying out cleaning with compressed air, there is a hazard of serious personal injury caused by flying dust or particles.
- When using compressed air to clean the filter element or radiator, wear safety glasses, anti-dust mask, gloves, and other protective equipment.


MAINTENANCE OF AIR CONDITIONER

- If air conditioner refrigerant gets into your eyes, it may cause loss of sight; if it contacts your skin, it may cause frostbite. Never loosen any parts of the cooling circuit.

DISPOSING OF WASTE MATERIALS

To prevent pollution, pay careful attention to the method of disposing of waste materials.

- Always put oil drained from your machine in containers. Never drain oil directly onto the ground or dump into the sewage system, rivers, the sea, or lakes.
- Obey appropriate laws and regulations when disposing of harmful objects such as oil, fuel, coolant, solvent, filters, and batteries.

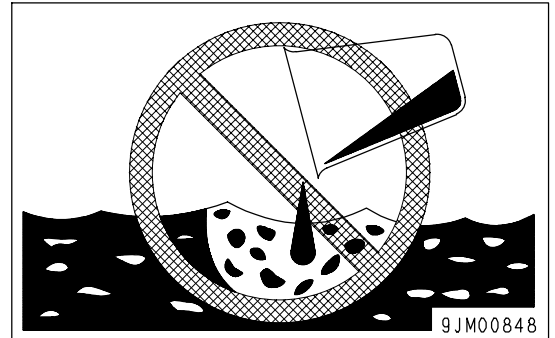**METHOD OF SELECTING WINDOW WASHER FLUID**

Use an ethyl alcohol base washer liquid.

Methyl alcohol base washer liquid may irritate your eyes, so do not use it.

PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS

- To enable this machine to be used safely for a long period, always carry out periodic replacement of safety critical parts that have a particularly close relation to safety, such as hoses and the seatbelt.
For details of the replacement of safety critical parts, see "SAFETY CRITICAL PARTS (PAGE 4-13)".
- The material of these components naturally changes over time, and repeated use causes deterioration, wear, and fatigue. As a result, there is a hazard that these components may fail and cause serious personal injury or death. It is difficult to judge the remaining life of these components from external inspection or the feeling when operating, so always replace them at the specified interval.
- Replace or repair safety-critical parts if any defect is found, even when they have not reached the specified replacement time.


OPERATION

WARNING

Please read and make sure that you understand the SAFETY section before reading this section.

MACHINE VIEW ILLUSTRATIONS

OVERALL MACHINE VIEW

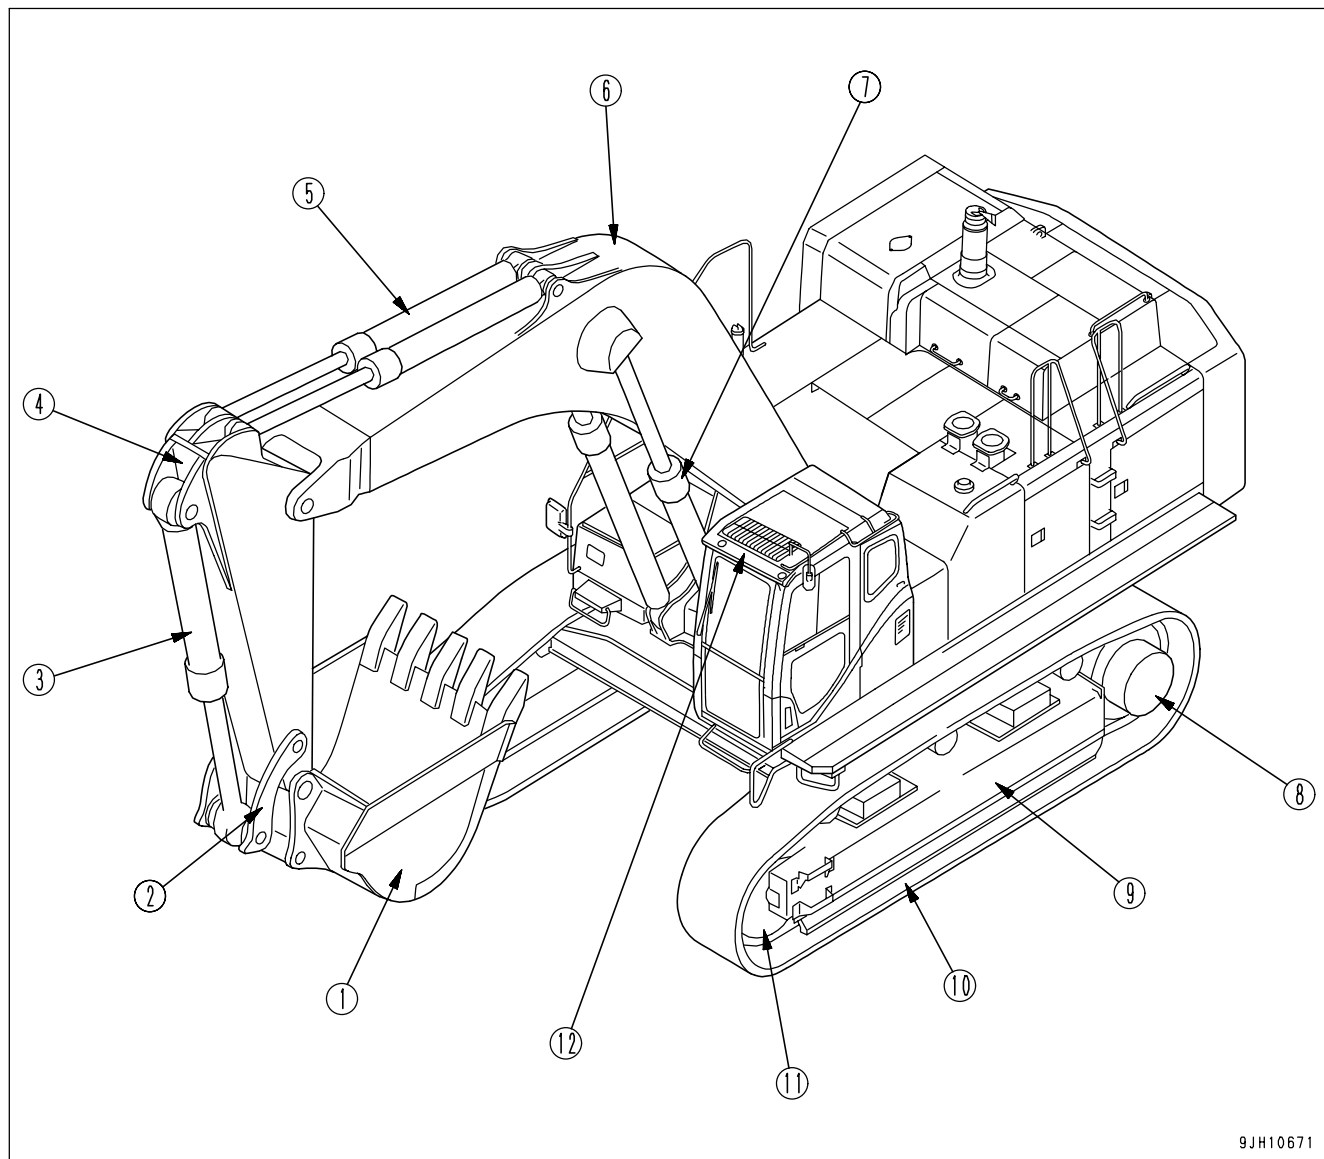


9JH10671

- (1) Bucket
- (2) Bucket link
- (3) Bucket cylinder
- (4) Arm
- (5) Arm cylinder
- (6) Boom
- (7) Boom cylinder

- (8) Sprocket
- (9) Track frame
- (10) Track shoe
- (11) Idler
- (12) OPG (Operator Protection Guard)
This is an option for the PC800-8.


CONTROLS AND GAUGES

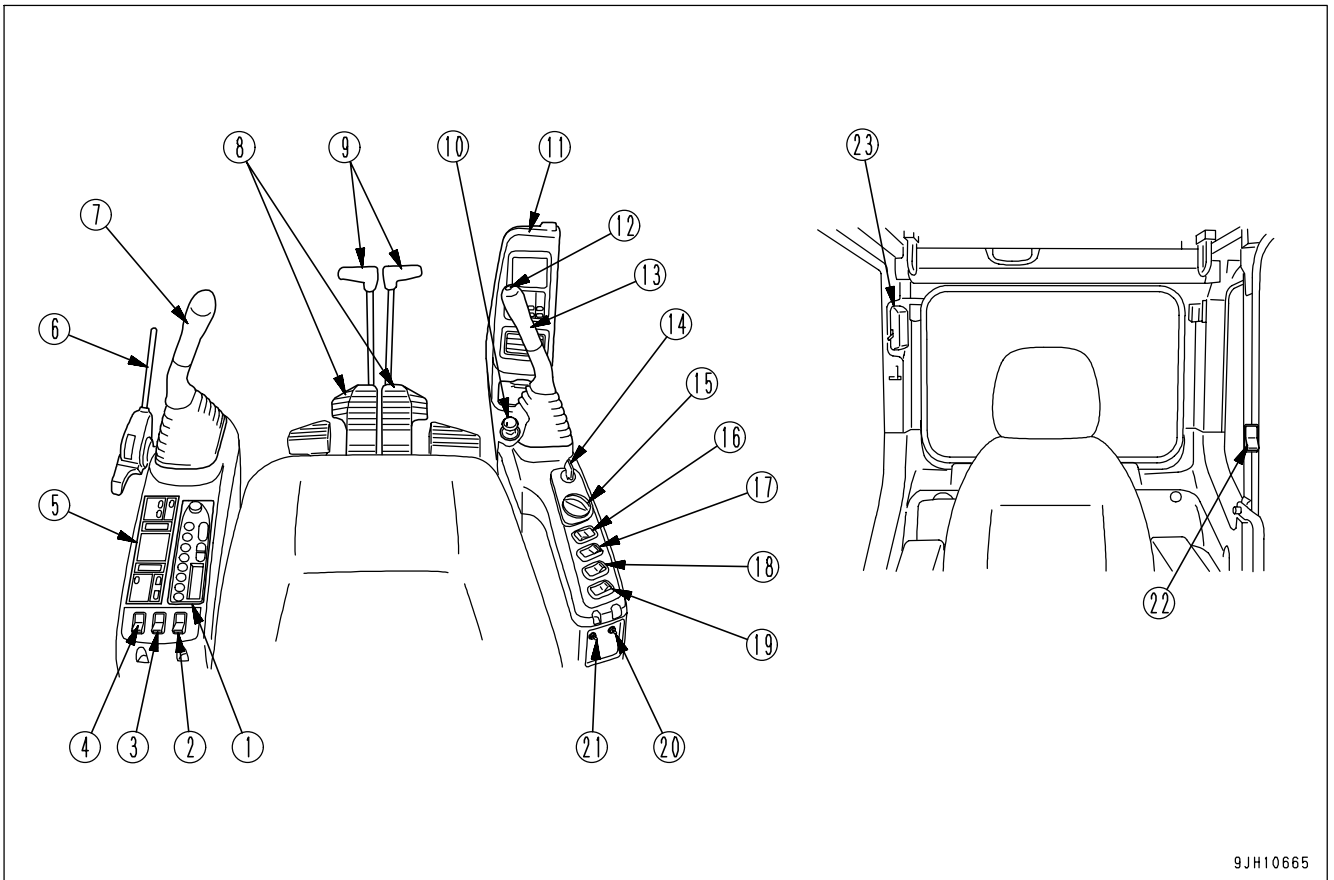

9JH10665

- | | |
|---|---|
| (1) Car radio | (11) Machine monitor |
| (2) Lower wiper switch
(Fixed front window cab specification
(if equipped)) | (12) Horn switch |
| (3) Rotating lamp switch (if equipped) | (13) Right work equipment control lever |
| (4) Large capacity airflow air conditioner
blower switch (if equipped) | (14) Starting switch |
| (5) Air conditioner control switch | (15) Fuel control dial |
| (6) lock lever | (16) Lamp switch |
| (7) Left work equipment control | (17) Swing lock switch |
| (8) Travel pedals | (18) Machine push-up switch |
| (9) Travel levers | (19) Boom shockless control switch |
| (10) Cigarette lighter | (20) Swing holding brake release switch |
| | (21) Pump drive emergency switch |
| | (22) Step light switch |
| | (23) Room lamp switch |

Machine monitor

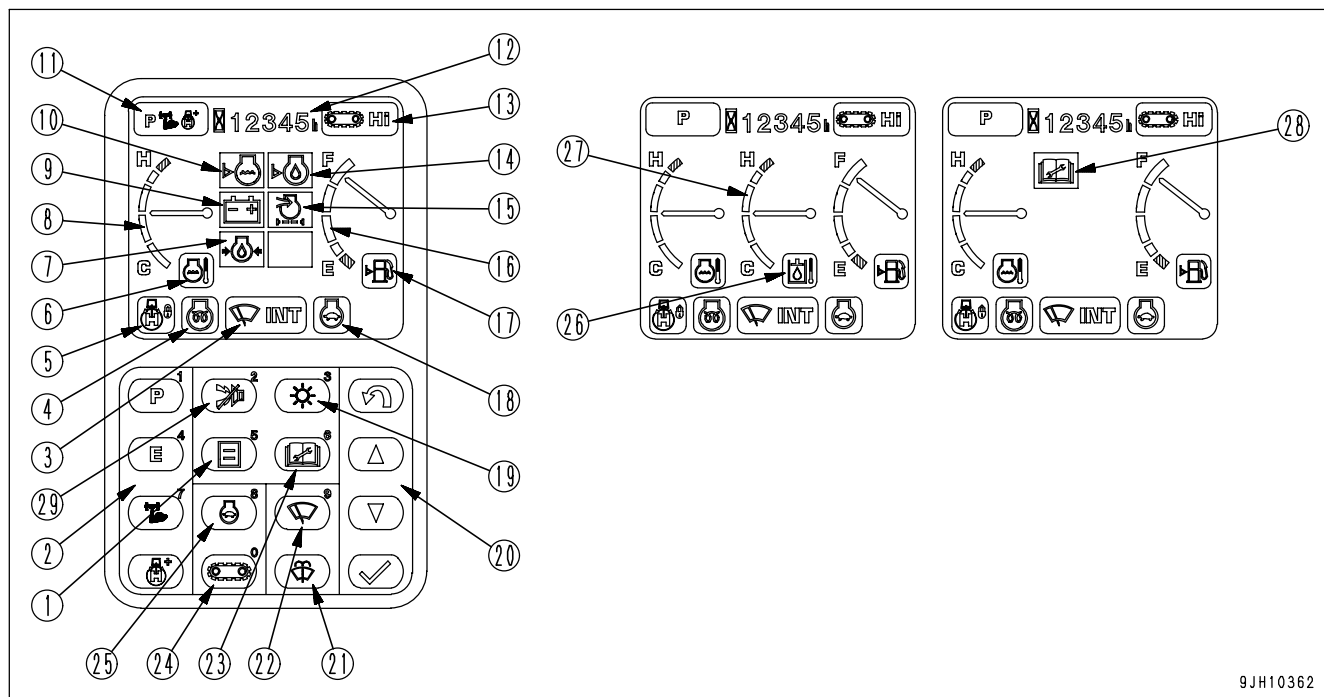

9JH10362


- | | |
|--------------------------------------|--|
| (1) User mode adjustment switch | (16) Fuel gauge |
| (2) Working mode selection switch | (17) Fuel level monitor |
| (3) Wiper monitor | (18) Auto-deceleration monitor |
| (4) Engine pre-heating monitor | (19) Display control switch |
| (5) Swing lock monitor | (20) Input control switch |
| (6) Engine water temperature monitor | (21) Window washer switch |
| (7) Engine oil pressure monitor | (22) Windshield Wiper switch |
| (8) Engine water temperature gauge | (23) Maintenance switch |
| (9) Charge level monitor | (24) Travel speed selection switch |
| (10) Radiator coolant level monitor | (25) Auto-deceleration switch |
| (11) Working mode monitor | (26) Hydraulic oil temperature monitor |
| (12) Service meter | (27) Hydraulic oil temperature gauge |
| (13) Travel speed monitor | (28) Maintenance interval monitor |
| (14) Engine oil level monitor | (29) Alarm buzzer stop switch |
| (15) Air cleaner clogging monitor | |

DETAILED CONTROLS AND GAUGES

The following is an explanation of devices needed for operating the machine.

To perform suitable operations correctly and safely, it is important to completely understand methods of operating the equipment, and the meanings of the displays.

MONITORING SYSTEM

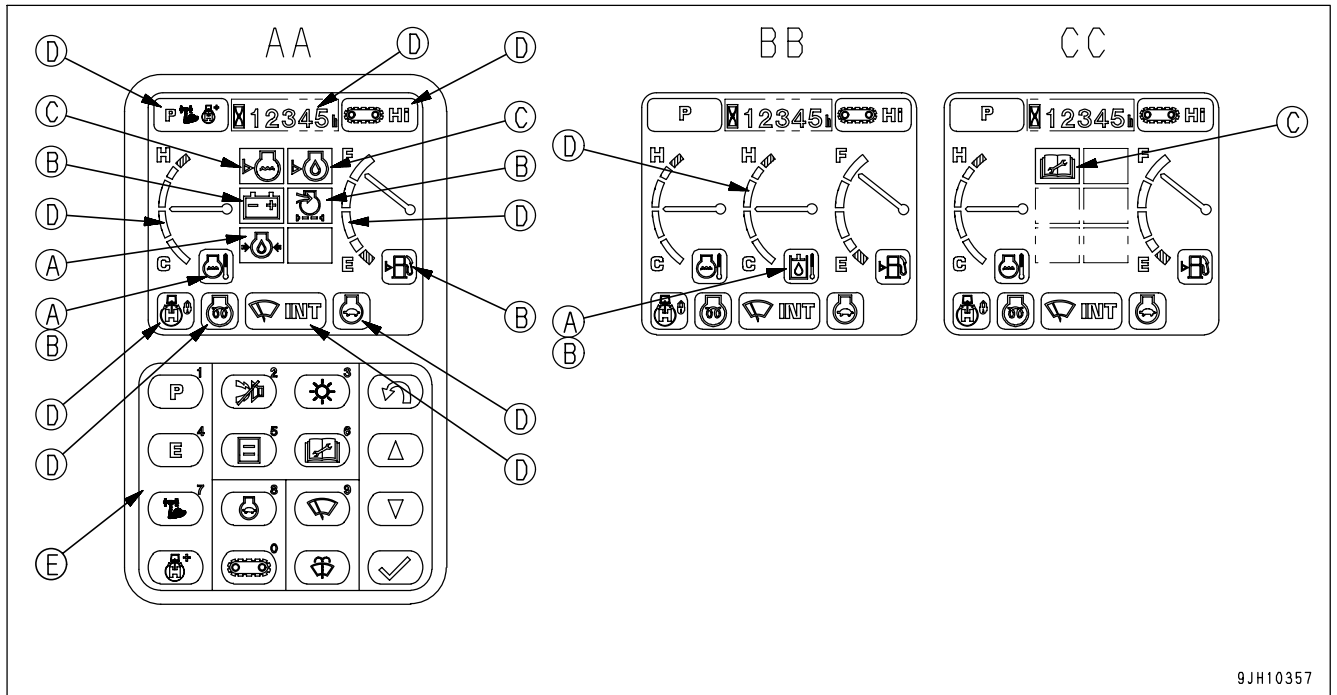


9JH10357

- AA: Screen with all lamps lighted up
- BB: Screen for standard
- CC: Maintenance time warning screen

- (A) Emergency monitors
- (B) Caution monitors
- (C) Basic check monitors
- (D) Meter display portion
- (E) Monitor switches portion


Basic Operation of Machine Monitor

If There Is Abnormality When Starting Engine

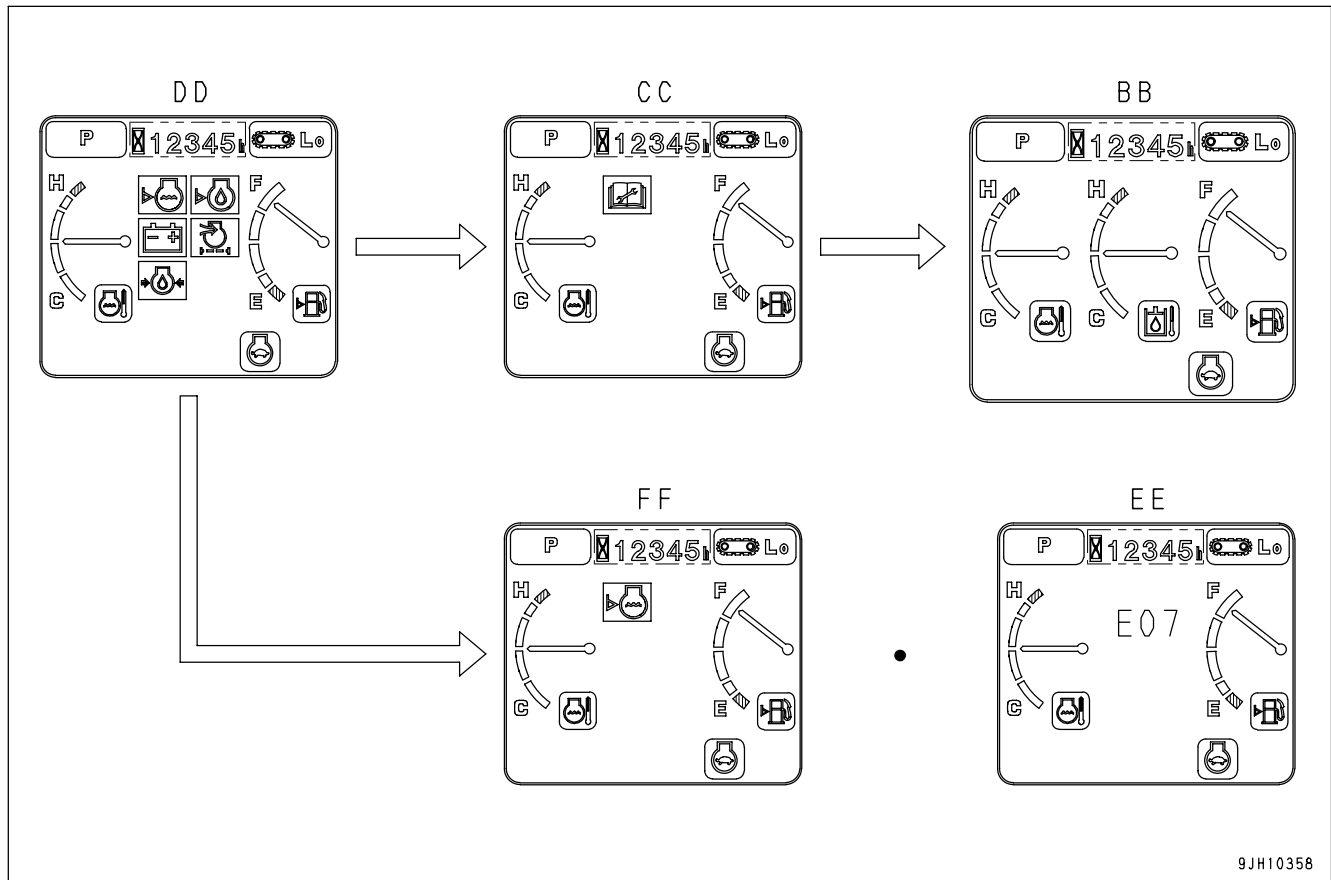

- If there is any abnormality when starting the engine, the check before starting screen DD changes to the maintenance interval warning screen CC, warning screen FF, or error screen EE.
- After displaying the check before starting screen DD for 2 seconds, the screen changes to the maintenance interval warning screen CC.
- After displaying the maintenance interval warning screen CC for 30 seconds, the screen returns to the standard screen BB.
- After displaying the check before starting screen DD for 2 seconds, the screen changes to the warning screen FF or error screen EE.

If Any Abnormality Occurs During Operation

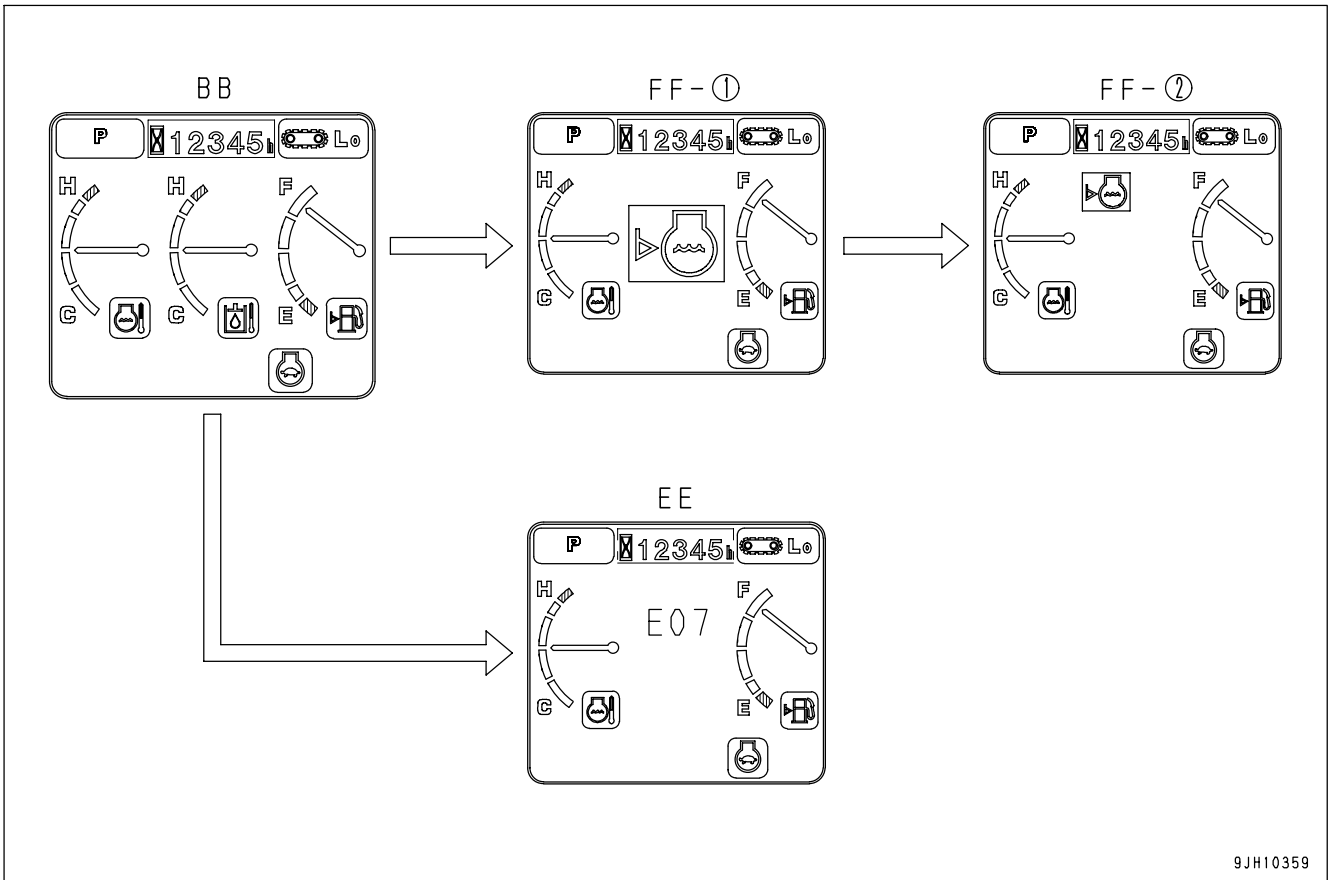


9JH10359

- If any abnormality occurs during operation, the standard screen BB changes to warning screen FF-(1) or the error screen EE.
- After displaying warning screen FF-(1) for 2 seconds, the screen automatically changes to warning screen FF-(2).

REMARK

The colors lighting up the monitors related to the emergency stop items, caution items, and basic check items are as follows.

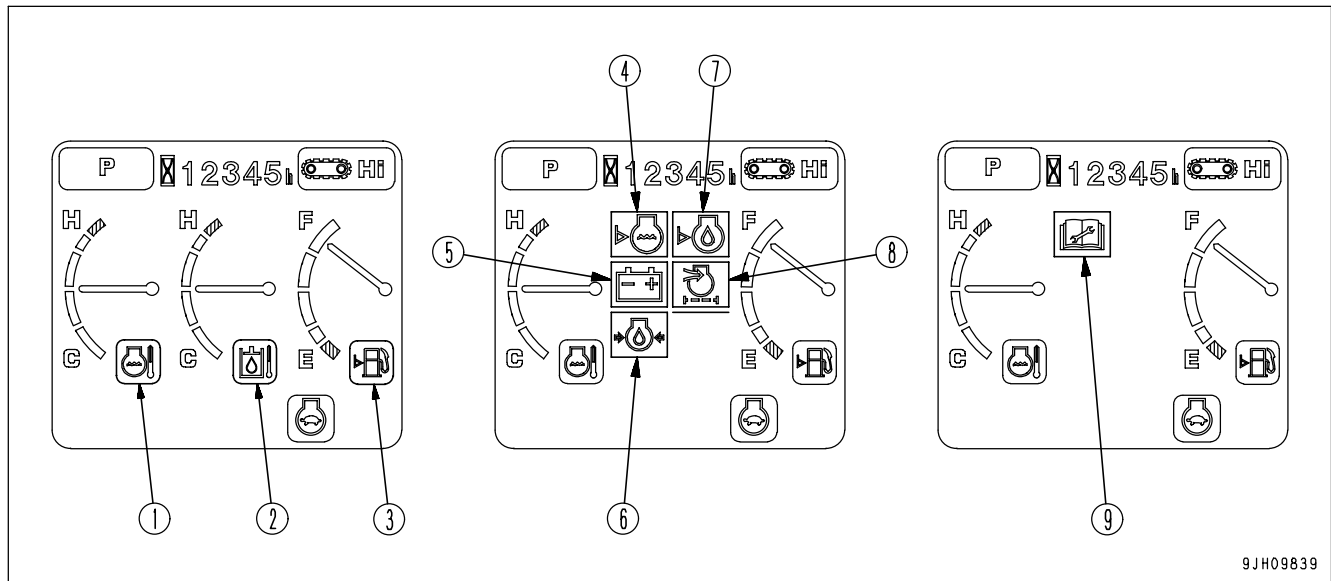

9JH09839


	Type of monitor	Color when monitor lights up		
		When normal	When abnormal	At low temperature
(1)	Engine coolant temperature monitor	Green	Red	White
(2)	Hydraulic oil temperature monitor	Green	Red	White
(3)	Fuel level monitor	Green	Red	-
(4)	Radiator coolant level monitor	OFF	Red	-
(5)	Charge monitor	OFF	Red	-
(6)	Engine oil pressure monitor	OFF	Red	-
(7)	Engine oil level monitor	OFF	Red	-
(8)	Air cleaner clogging monitor	OFF	Red	-
(9)	Maintenance interval monitor	OFF	Red	-

Emergency Monitors

! CAUTION

If the monitor lights up red, stop the engine immediately or run at low idle, check applicable location, then perform necessary actions.

These items should be observed while the engine is running. If there is a problem, the monitor for the abnormal location lights up red and buzzer sounds, perform action immediately.

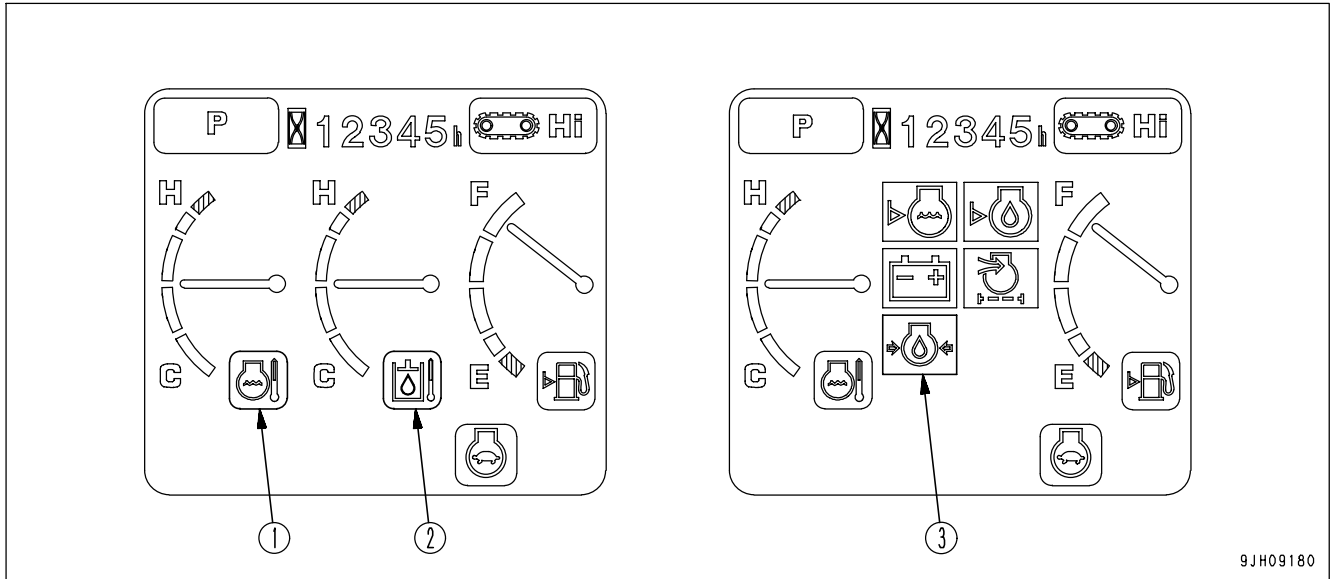

- (1) Engine coolant temperature monitor
- (2) Hydraulic oil temperature monitor

- (3) Engine oil pressure monitor


Engine Coolant Temperature Monitor

Monitor (1) warns operator that the engine coolant temperature has risen.

If engine coolant temperature becomes abnormally high, monitor lights up red, overheat prevention system is automatically actuated, and the engine speed goes down.

Stop operations and run engine at low idle until monitor (1) changes to green.

Check for clogging of the radiator grill or any other problem that will cause overheating.

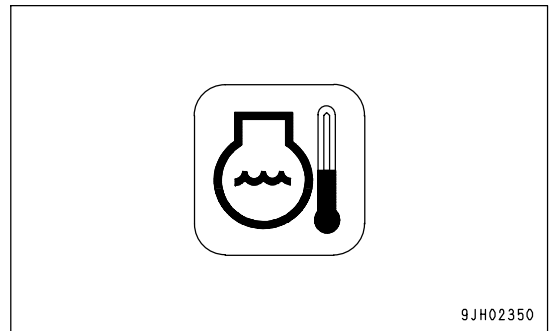


Hydraulic Oil Temperature Monitor

Monitor (2) warns operator that the hydraulic oil temperature has risen.

If monitor lights up red during operations, run engine at low idle or stop the engine and wait until the oil temperature goes down and monitor (2) changes to green.

Check for clogging of the radiator grill or any other problem that will cause overheating.

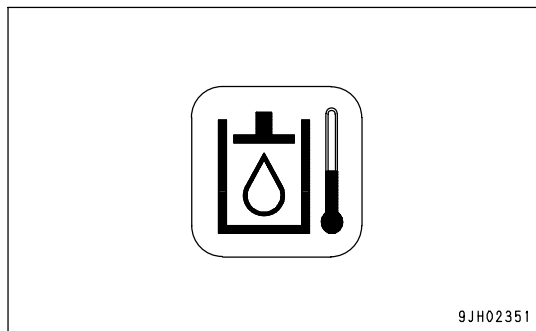


Engine Oil Pressure Monitor

Monitor (3) lights up red if the engine lubrication oil pressure goes below normal level. If monitor lights up red, stop the engine immediately, check the lubrication system and level of oil in the engine oil pan.

REMARK

The lamp may lights up momentarily and the alarm buzzer sounds when the engine starts up or stops, but this is nothing abnormal.

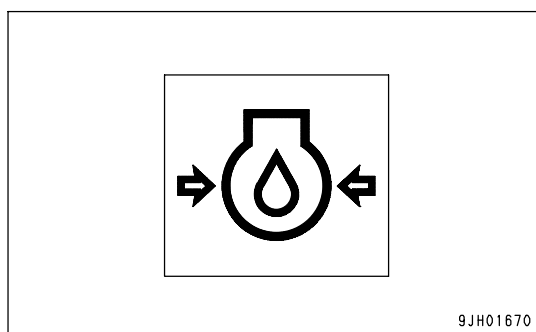


Caution Monitors



If the warning monitor lights up red, stop operations as soon as possible and perform inspection and maintenance of the applicable location. If the warning is ignored, it may lead to failure.

These are items that should be observed while the engine is running. If any abnormality occurs, the screen displays the item that needs immediate action.

If there is an abnormality, the monitor for the abnormal location lights up red.

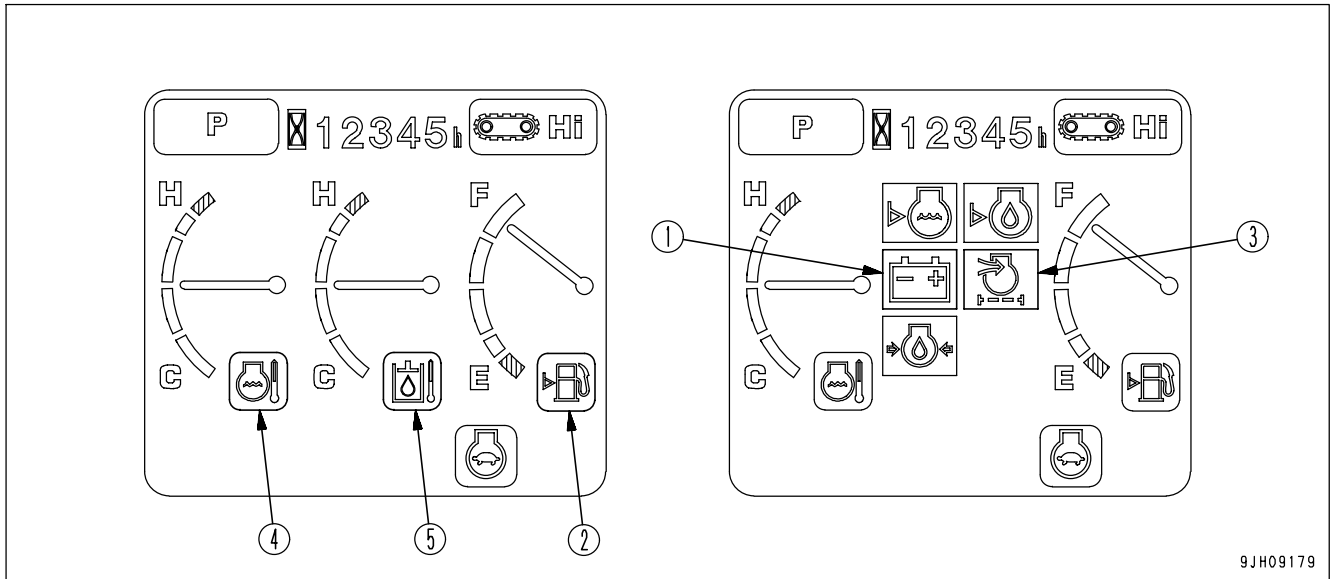


- (1) Charge level monitor
- (2) Fuel level monitor
- (3) Air cleaner clogging monitor
- (4) Engine water temperature monitor
- (5) Hydraulic oil temperature monitor

Charge Level Monitor

Monitor (1) warns the operator of an abnormality in the charging system while the engine is running.

If the battery is not being charged properly while the engine is running, monitor (1) lights up red.

If monitor lights up red, check the V-belt for looseness. If any abnormality is found, perform the necessary actions. For details, see "OTHER TROUBLE (PAGE 3-161)".

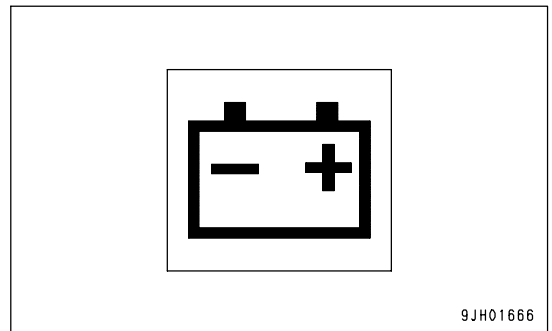


REMARK

When the engine is started or stopped, the lamp may light momentarily, but this does not indicate any abnormality.

Fuel Level Monitor

Monitor (2) lights up to warn the operator the fuel level in the tank is low.


If the remaining amount of fuel goes down to 106 liters (28.01 US gal), the light changes from green to red, so add fuel as soon as possible.

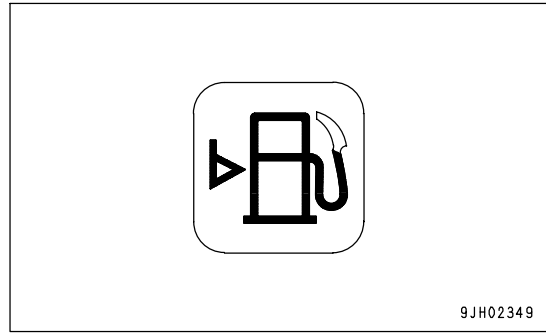

Air Cleaner Clogging Monitor


Monitor (3) warns the operator of a clogged air cleaner.

If the monitor lights up red, stop the engine, inspect and clean the air cleaner. For details, see "CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT (PAGE 4-18)".

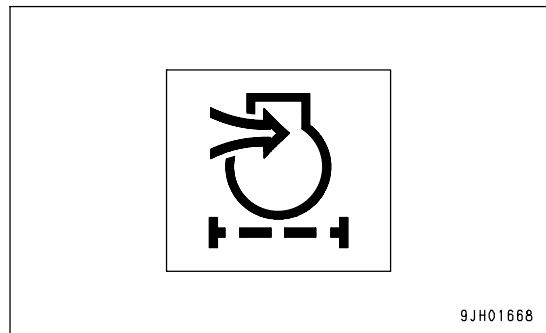


Engine Coolant Temperature Monitor

If monitor (4) lights up white in low temperatures, perform warming-up operation. For details, see "Engine Warm Up (PAGE 3-102)". Continue warming-up operation until monitor (4) changes to green.

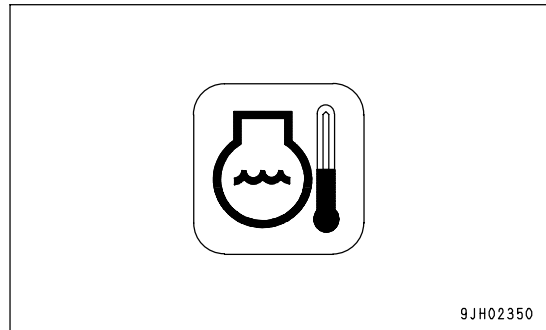

Hydraulic Oil Temperature Monitor

If monitor (5) lights up white in low temperatures, perform warming-up operation. For details, see "Hydraulic Equipment Warm Up (PAGE 3-104)". Continue warming-up operation until monitor (5) changes to green.

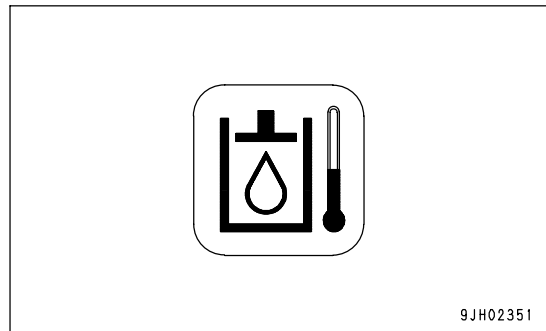


Basic Check Monitors



These monitors do not guarantee the condition of the machine.

Do not simply rely on the monitor when carrying out checks before starting (daily inspection). Always get off the machine and check each item directly.

Displays basic items among the check before starting items that must be checked before starting the engine. If there is any abnormality, monitor for the location of abnormality will light up.

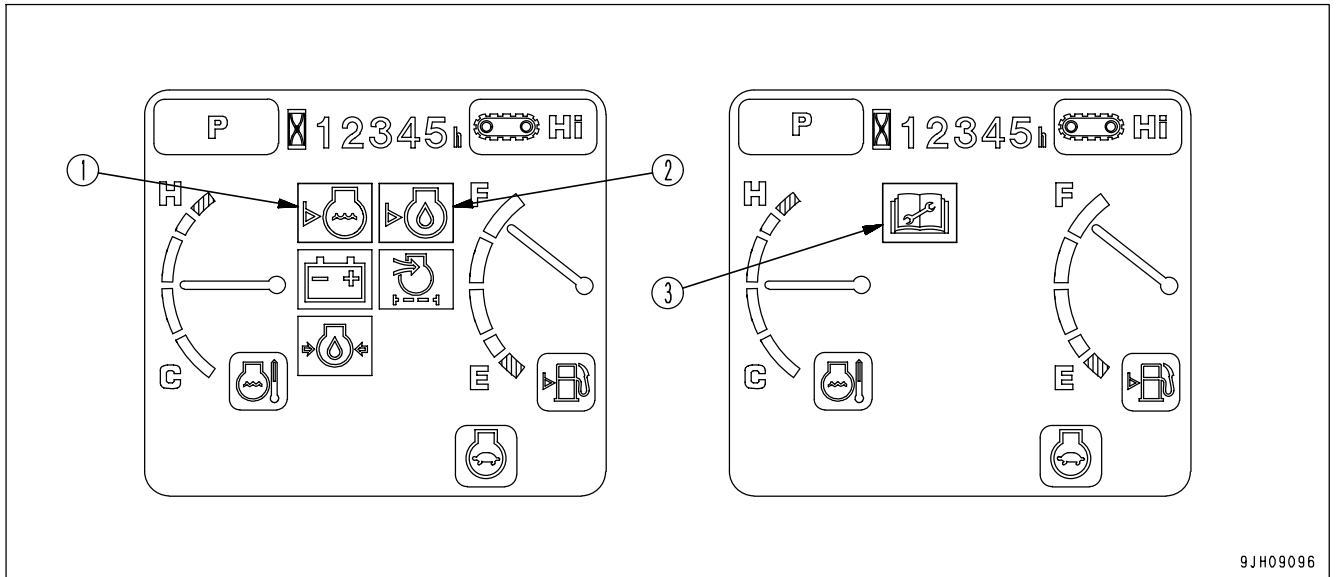


- (1) Radiator coolant level monitor
- (2) Engine oil level monitor

- (3) Maintenance interval monitor

Radiator Coolant Level Monitor

Monitor (1) warns the operator that there has been a drop in the radiator coolant level.


If the radiator coolant is low, the lamp lights up red, so check coolant level in the radiator and subtank, and add coolant.

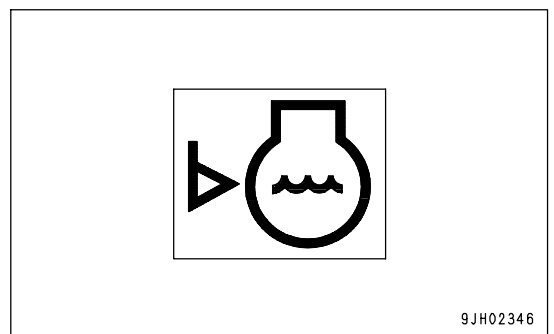

Engine Oil Level Monitor

Monitor (2) warns the operator that the oil level in the engine oil pan has dropped.

If oil level in the engine oil pan is low, the lamp lights up red, so check the oil level, and add oil.

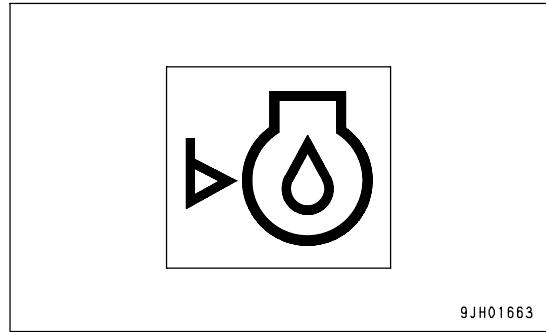


Maintenance Interval Monitor

This monitor (3) lights up when the maintenance time gets close and remains lighted after the maintenance time has already passed.

- Lighted yellow: The maintenance time is due within 30 hours.
- Lighted red: The maintenance time has already passed.


This monitor lights up when the starting switch is turned to the ON position. It goes off after 30 seconds and the display changes to the normal screen.

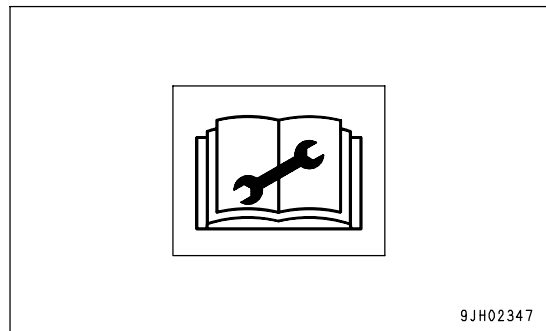

REMARK

- For details of the method of confirming the maintenance interval, see "Maintenance Switch (PAGE 3-24)".
- If it is desired to change settings for the maintenance interval, have your Komatsu distributor change the settings.

Meter Display Portion

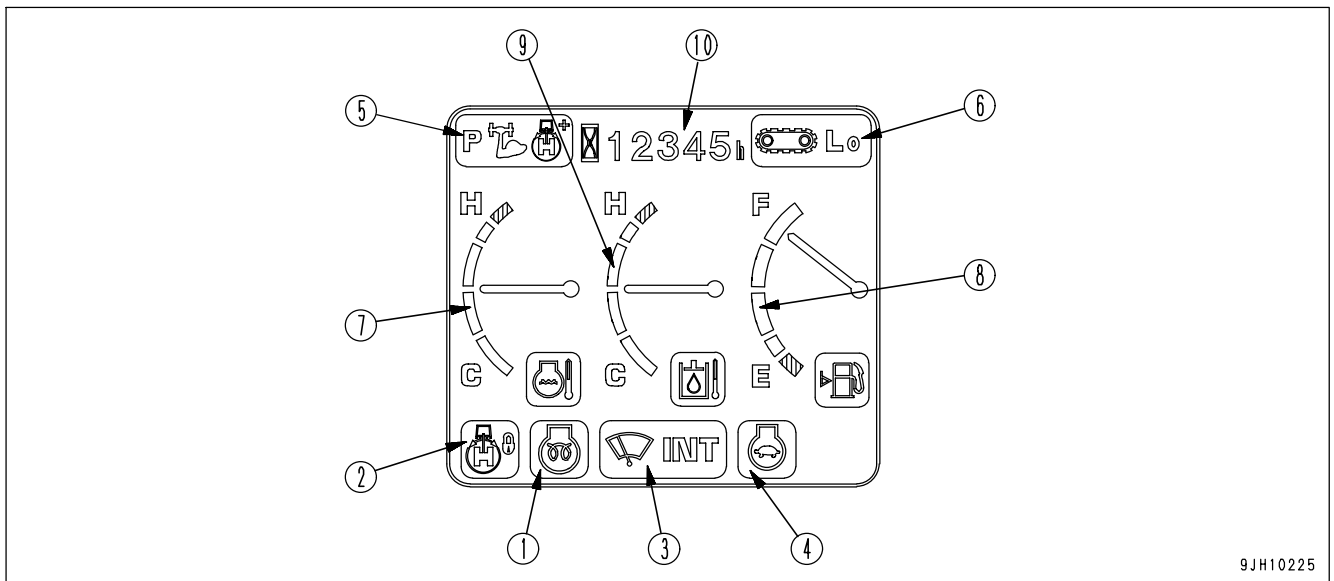

9JH10225

Pilot display

- (1) Engine pre-heating monitor
- (2) Swing lock monitor
- (3) Wiper monitor
- (4) Auto-deceleration monitor
- (5) Working mode monitor
- (6) Travel speed monitor

Gauges and Meter

- (7) Engine coolant temperature gauge
- (8) Fuel gauge
- (9) Hydraulic oil temperature gauge
- (10) Service meter


Pilot Display

When the starting switch is ON, the pilot display lights up when the display items are functioning.

Engine Pre-heating Monitor

This monitor (1) lights up when the engine preheating electric heater is actuated. When the ambient temperature is low and the starting switch is set to the ON position, the lamp lights up, and when the preheating is completed, it goes out.

The preheating time differs according to the ambient temperature.

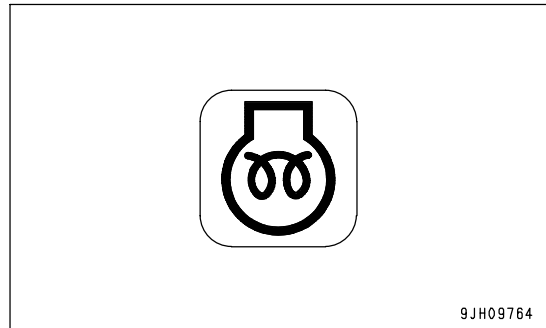


Swing Lock Monitor

This monitor (2) informs the operator that the swing lock has been actuated.

When actuated: Lights up

The monitor lights up when the swing lock switch is turned to the ON (LOCK) position.

The monitor flashes when the swing holding brake release switch is turned ON.

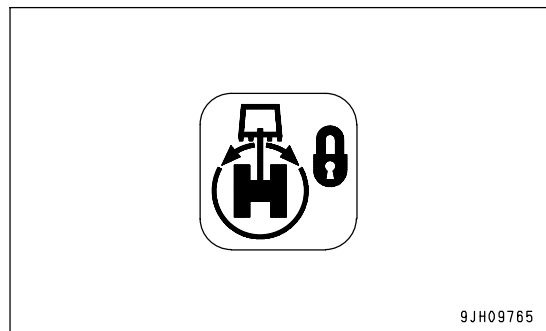

REMARK

The swing motor is equipped with a disc brake that mechanically stops the rotation. When the swing lock monitor is lighted up, the brake remains applied.

Wiper Monitor


Monitor (3) indicates operating status of the wiper.

The monitor display when wiper switch is operated, as follows.

When ON lights up: Wiper moves continuously

When INT lights up: Wiper moves intermittently

OFF: Wiper stops

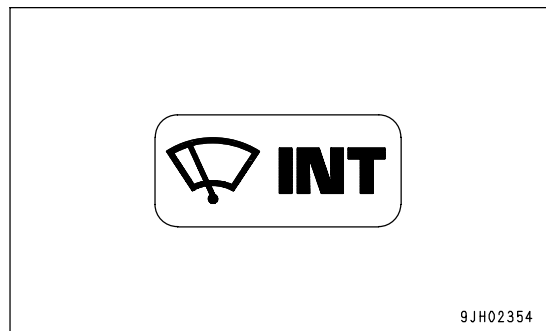


Auto-deceleration Monitor

Monitor (4) shows if the auto-deceleration is being actuated. The monitor display when auto-deceleration switch is operated, as follows.

Auto-deceleration monitor ON: Auto-deceleration actuated

Auto-deceleration monitor OFF: Auto-deceleration canceled

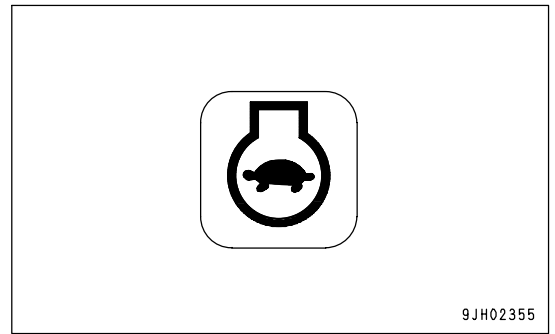

Working Mode Monitor

Monitor (5) displays the set working mode.


The monitor display when working mode switch is operated, as follows.

P : P mode (for heavy-load operations)

E : E mode (for operations with emphasis on fuel economy)

X : Heavy-duty lift (boom lifting power increased when raising boom independently)

Y : Swing priority mode (priority given to swing when operating boom and swing simultaneously)

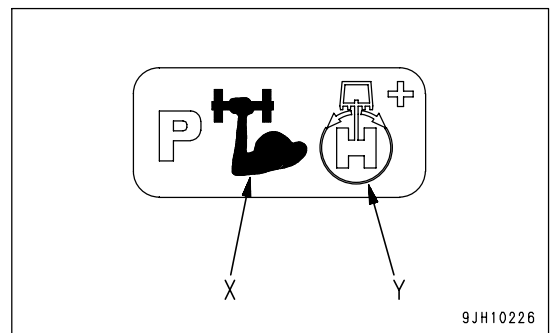


Travel Speed Monitor

Monitor (6) displays set mode for the travel speed.

The monitor display when the travel speed selector switch is operated, as follows.

Lo : Low speed

Hi : High speed

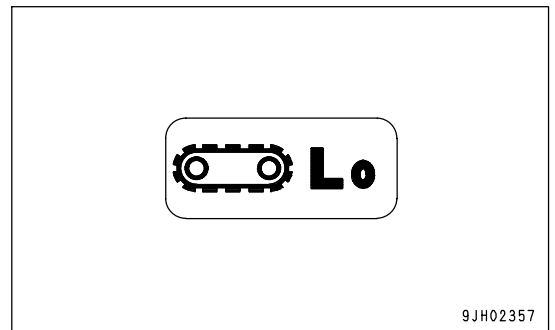


Gauges and Meter

Engine Coolant Temperature Gauge

This meter (7) indicates the engine cooling water temperature. During normal operations, the indicator should be in the black range. If the indicator enters the red range during operations, the overheat prevention system is actuated.

- (A) - (B): Red range
- (A) - (C): Black range

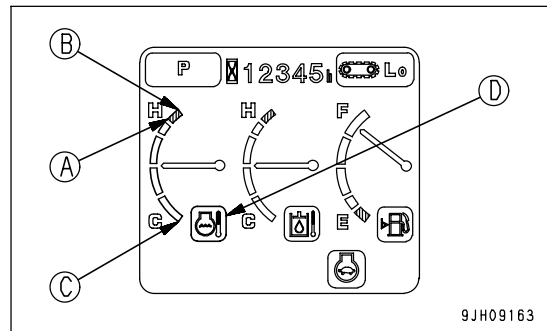

The overheat prevention system acts as follows.

Red range position (A) : Engine water temperature monitor (D) lights up red.

Red range position (B) : Engine speed is reduced to low idling, engine water temperature monitor (D) lights up red, and the alarm buzzer sounds at same time.

The overheat prevention system remains actuated until the indicator returns to the black range.

When the engine is started, if the indicator is at position (C), engine water temperature monitor (D) lights up white.


In this case, carry out the warming-up operation. For details, see "Engine Warm Up (PAGE 3-102)".

Fuel Gauge

Meter (8) displays the level of fuel in the fuel tank.

During operations, the indicator should be in the black range. If indicator enters red range (A) during operations, there is less than 125 liters (33.03 US gal) of fuel remaining in the tank, check and add fuel.

- (A) - (B): Red range
- (A) - (C): Black range

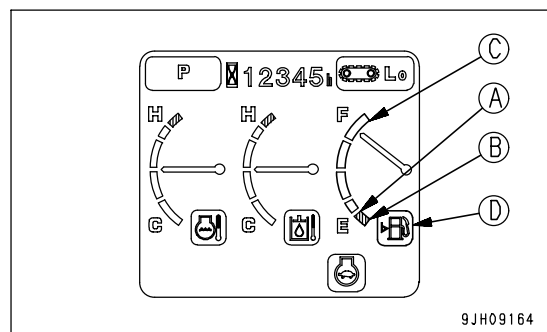

REMARK

When the indicator reaches red range (B), there is less than 106 liters (22.19 US gal) of fuel remaining.

When the indicator is in the red range (B), fuel level monitor (D) lights up red.

If the indicator enters the red range (A) to (B), do not carry out operations on steep slopes. There is danger of the engine stalling.

The correct fuel level may not be displayed for a short time when the starting switch is turned ON, but this is not an abnormality.


Hydraulic Oil Temperature Gauge

Meter (9) displays the hydraulic oil temperature.

During operations, the indicator should be in the black range (A) to (C).

If the indicator enters red range (A) during operations, the hydraulic oil temperature has gone above 102°C (215.6°F).

Stop the engine or run it at low idle and wait for the hydraulic oil temperature to go down.

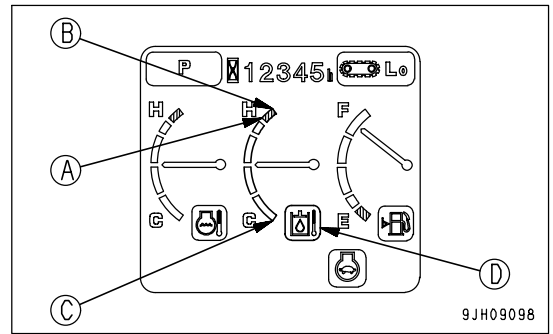

REMARK

When the indicator is in the red range (A) to (B), the hydraulic oil temperature is as follows.

Red range position (A) : More than 102°C (215.6°F)

Red range position (B) : More than 105°C (221°F)

When the indicator is in the red range (A) to (B), fuel level monitor (D) lights up red.

If the indicator is at position (C) when the engine is started, the hydraulic oil temperature is 20°C (68°F) or lower, and hydraulic oil temperature monitor (D) lights up white. In this case, carry out the warming-up operation. For details, see "Hydraulic Equipment Warm Up (PAGE 3-104)".

Service Meter


This monitor (10) displays the total time that the machine has been operated.

Use the time display to set the maintenance interval. When the starting switch is ON, the service meter advances even if the machine is not moving.

The service meter advances by 1 for every hour of operation, regardless of the engine speed.



Monitor Switches Portion

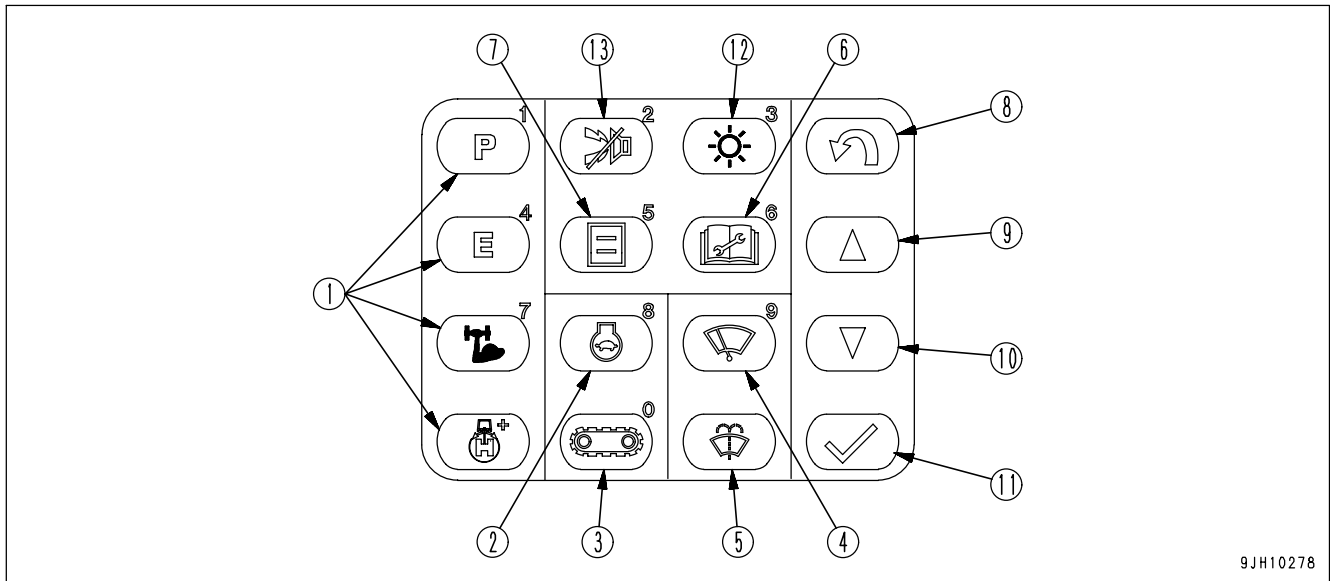

9JH10278

- | | |
|---|--|
| (1) Working mode selector switch (basic switch) | (8) Back switch |
| (2) Auto-deceleration switch (selection switch) | (9) Up switch |
| (3) Travel speed selector switch (selection switch) | (10) Down switch |
| (4) Wiper switch | (11) Input confirmation switch |
| (5) Window washer switch | (12) Adjusting brightness and contrast |
| (6) Maintenance switch | (13) Alarm buzzer stop switch |
| (7) User mode adjustment switch | |

Working Mode Selector Switch (Basic Switch)

Switch (1) is used to set the power and movement of the work equipment.


Operations can easily be performed by selecting the mode to match the type of operation.

P mode : For heavy-load operations

E mode : For operations with emphasis on fuel economy

Heavy-duty lift mode : Boom lifting power increased when raising boom independently

Swing priority mode : Priority given to swing when operating boom and swing simultaneously

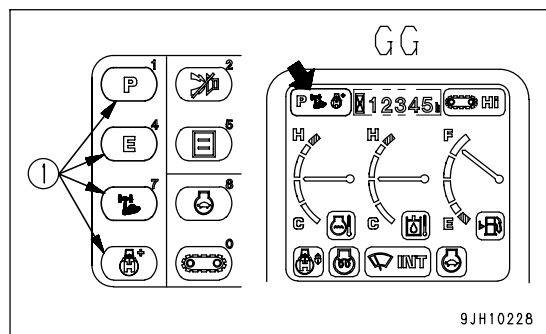


9JH10228

- When the engine is started, the working mode is set automatically to P mode. When the switch is pressed, it is possible to select the other modes. The monitor display GG on the monitor display portion changes for each mode.
- If it is desired to have the working mode set to start automatically in E, L, or B mode (default option setting), have your Komatsu distributor change the setting.

REMARK

When the mode selector switch is pressed, the mode is displayed in the center of monitor display portion (GG), and the screen returns to standard screen (BB) after 2 seconds. (Diagram on the right is an example of display for the E mode.)

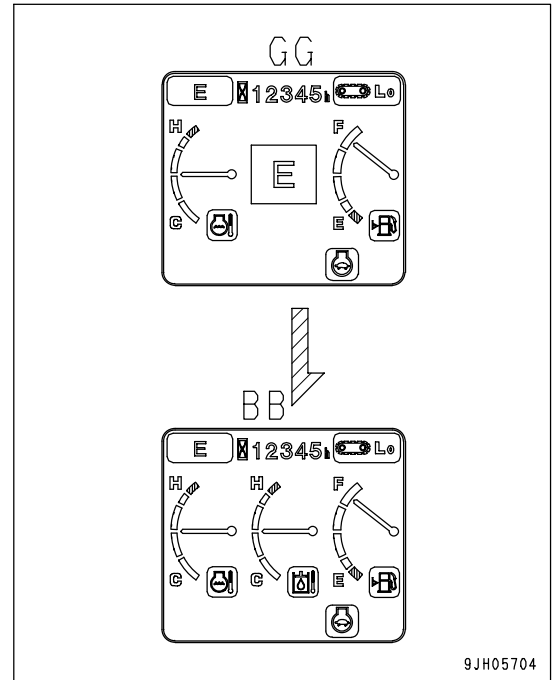


Auto-deceleration Switch (Selection Switch)

When switch (2) is pressed, the auto-deceleration is actuated, if the control levers are in neutral position, the engine speed is automatically lowered to reduce fuel consumption.

Monitor display portion GG ON : Auto-deceleration actuated

Monitor display portion GG OFF : Auto-deceleration canceled

Each time the switch is pressed, auto-deceleration switches between actuated and canceled.

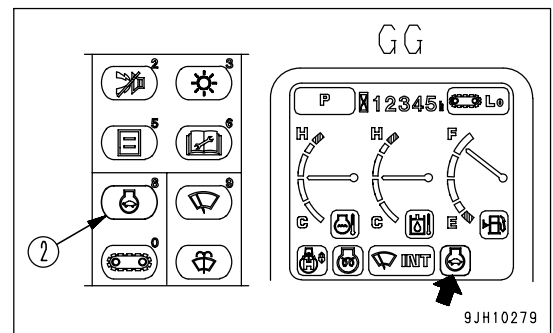


- Auto-deceleration function

When the auto-deceleration function is ON, if the work equipment and travel levers are returned to the N position, the engine speed will drop after 4 seconds from the operating speed to idling speed. This makes it possible to reduce fuel consumption.

If any lever is operated when the machine is in this condition, engine speed will return to the previous operating speed to make it possible to perform operations.

REMARK

When the auto-deceleration switch is pressed and the auto-deceleration is actuated, the mode is displayed in the center of display portion (GG), and the screen returns to standard screen (BB) after 2 seconds.

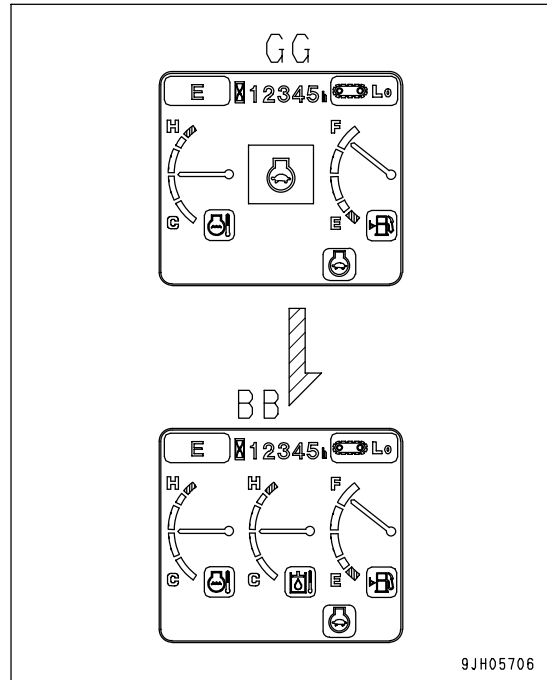

Travel Speed Selector Switch (Selection Switch)

WARNING

- When loading or unloading from a trailer, always travel at low speed (with travel speed selector switch (3) at the Lo position). Never operate travel speed selector switch (3) while loading or unloading.
- If the travel speed is switched between Hi and Lo when the machine is traveling, the machine may deviate to one side, even when traveling in a straight line.
Stop the machine before switching the travel speed.


This switch (3) is used to set the travel speed to 2 stages.

Lo lights up : Low-speed travel

Hi lights up : Hi-speed travel

When the engine is started, the speed is automatically set to Lo.


Each time that the switch is pressed, the display changes Lo → Hi → Lo in turn.

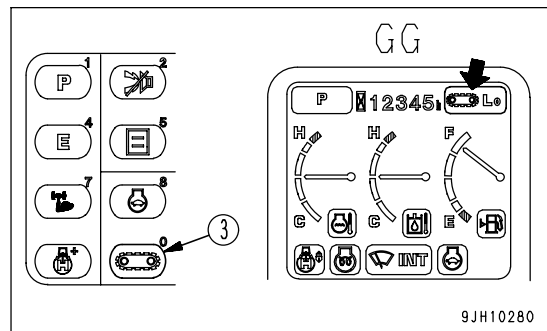

When traveling in high speed (Hi), if travel power is needed, such as when traveling on soft ground or on slopes, the speed automatically switches to low speed (Lo), so there is no need to operate the switch. The monitor display stays at Hi.

REMARK

Each time that the travel speed selector switch is operated, the mode is displayed in the center of display portion (GG), and the screen returns to standard screen (BB) after 2 seconds.

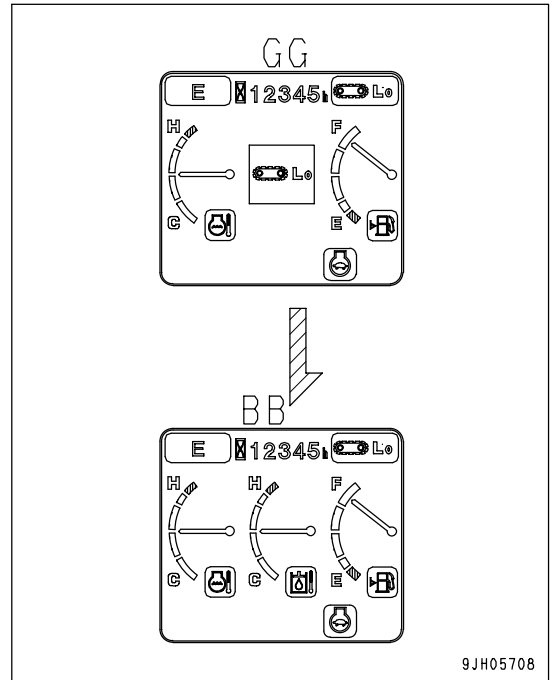

Wiper Switch


This switch (4) actuates the front window wiper.

Each time the switch is pressed, it changes ON → INT → stop (OFF).

Monitor display portion GG INT lighted up: Wiper moves intermittently


Monitor display portion GG ON lighted up: Wiper moves continuously

Monitor display portion GG OFF: Wiper stops

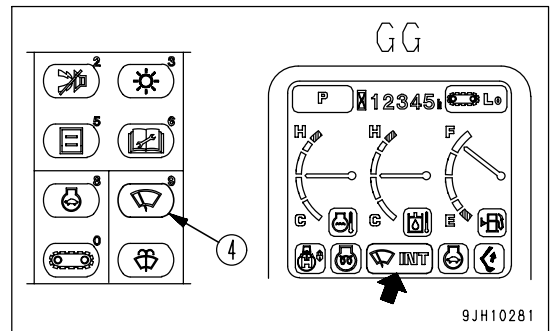

REMARK


Each time that the wiper switch is operated, the mode is displayed in the center of display portion (GG). The screen returns to standard screen (BB) after 2 seconds.

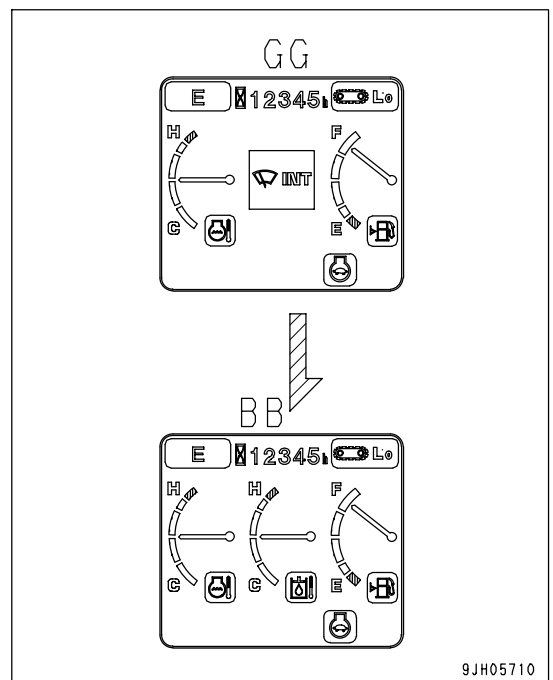

Window Washer Switch


This switch (5) is kept continuously pressed, window washer fluid is sprayed out on the front glass. When the switch is released, the spray stops.

- If switch (5) is kept pressed when the wiper is stopped, the window washer fluid will spray out, and at the same time, the wiper will be actuated continuously. When switch (5) is released, the wiper will continue to operate for 2 cycles, then stop.
- If the wiper is moving intermittently and switch (5) is kept pressed continuously, window washer fluid will spray out, and at the same time, the wiper will be actuated continuously. When switch (5) is released, the wiper will continue to operate for 2 cycles, then return to intermittent operation.

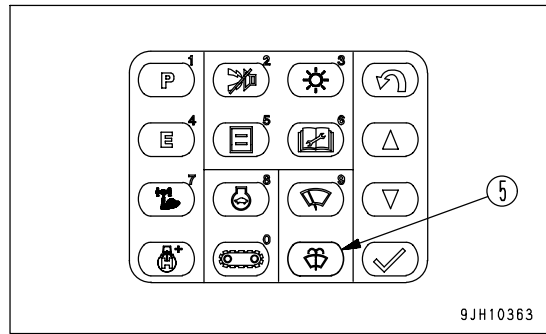

Maintenance Switch


- Switch (6) is used to check the time remaining until maintenance.

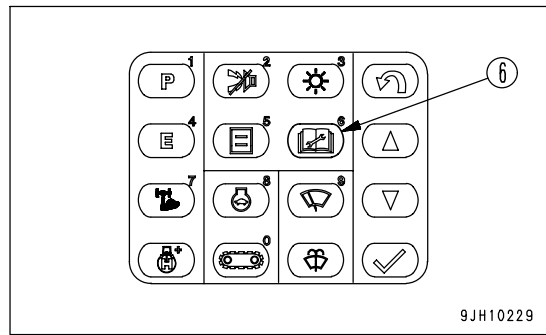

- When switch (6) is pressed, screen on the monitor display changes to the maintenance screen, as shown in diagram on the right.


The time remaining until maintenance is indicated by the color of each monitor display. After confirming the maintenance time, perform the maintenance.

- White display: More than 30 hours remaining until maintenance
- Yellow display: Less than 30 hours remaining until maintenance
- Red display : Maintenance time has already passed

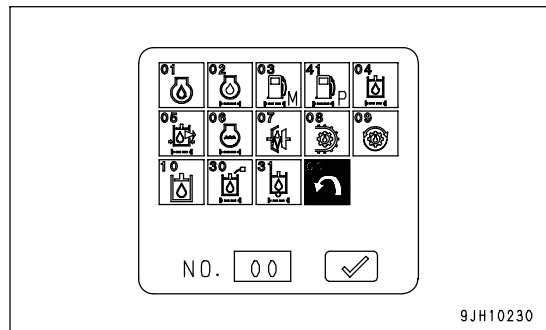


NOTICE

1. If monitor display portion GG changes to the maintenance timing warning screen when the engine is started or when the machine is being operated, stop operations immediately.
2. Press switch (6) to display the maintenance screen.
Perform maintenance for any location indicated by the monitor that has lighted red.

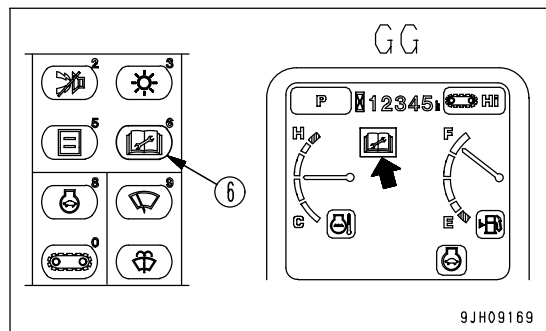

- Maintenance display items are as follows:


Monitor No.	Maintenance item	Default set screen (H)
01	Change engine oil	500
02	Replace engine oil filter	500
03	Replace fuel main filter	1000
41	Replace fuel pre-filter	500
04	Replace hydraulic oil filter	1000
05	Replace hydraulic tank breather	1000
06	Replace corrosion resistor (if equipped)	1000
07	Change coupling case oil	1000
08	Change final drive case oil	2000
09	Change swing machinery case oil	1000
10	Change hydraulic oil	5000
30	Replace hydraulic oil pilot filter	500
31	Replace hydraulic oil drain filter	500

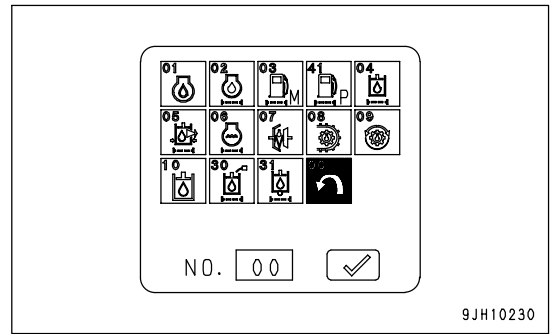


If it is desired to change settings for the maintenance interval, have your Komatsu distributor change the settings.

- How to check a remaining time up to the next maintenance and reset after the maintenance is carried out is as explained below.

1. Look at the maintenance screen, press up switch (9) or down switch (10) on the monitor switch portion, and select the item. (Color of the monitor for selected item is inverted to black.)

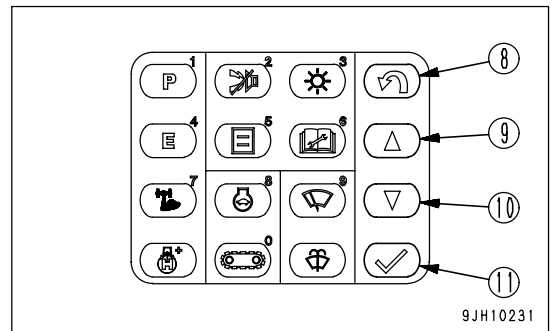

2. After selecting the monitor item, press input confirmation switch (11). Display screen will switch to the time remaining until maintenance. (Press back switch (8) to return to the previous screen.)

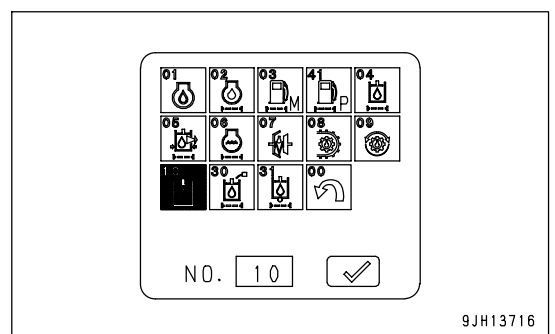

3. Check the time remaining until maintenance.

- (a): Time remaining until maintenance
- (b): Default setting for maintenance interval

When only checking the time remaining until maintenance, press back switch (8) twice.



The screen will return to the normal operation monitor screen.

When canceling time remaining until maintenance and returning to the default time setting, press in/out confirmation switch (11). The screen will switch to the default setting screen.

4. After checking the time on the default setting screen, press in/out confirmation switch (11).


The screen will return to the maintenance screen.

(Press back switch (8) to return to the previous screen.)

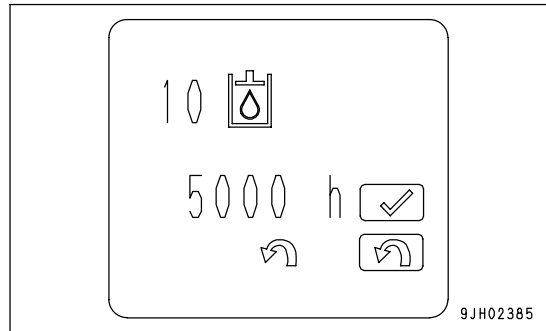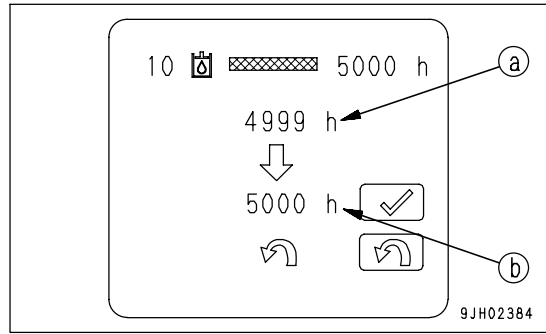

User Mode Adjustment Switch

Press this switch (7) to set to fan reverse rotation and to adjust the set value for the economy mode.

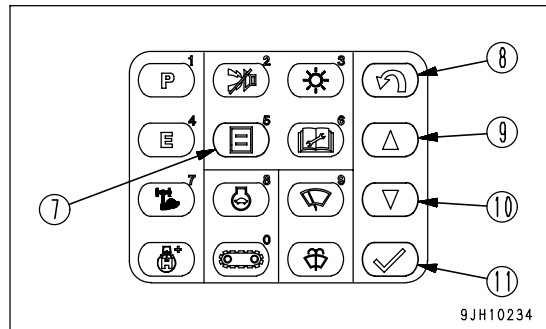


Fan Reverse Rotation

1. Press switch (7) and the monitor display screen changes to the fan reverse rotation and economy mode adjustment screen show on the right.

01: Fan reverse rotation menu


02: Economy mode adjustment menu

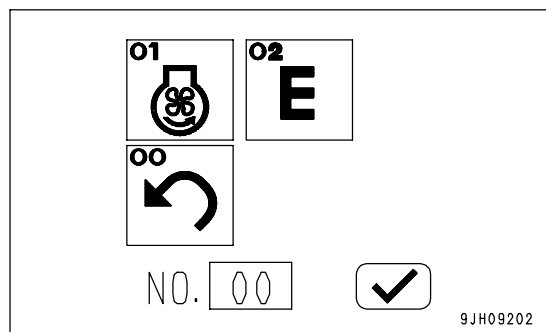

2. Fan reverse rotation means that the air from the fan blows to the outside of the machine. This can be used when cleaning to remove insects or dirt stuck to the net.

Check first that there is no flammable or burning material in the surrounding area that will be sucked in, then operate the switch to rotate the fan in reverse.


3. Set lock lever (1) securely to LOCK position (L).

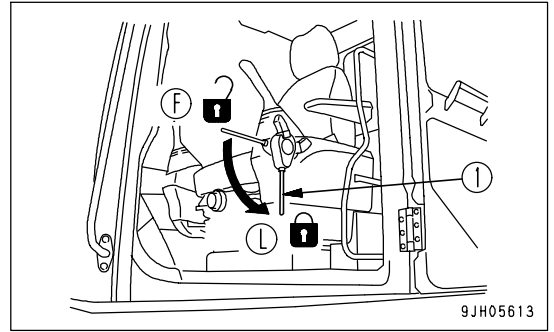


4. Use UP switch (9) or DOWN switch (10) to select "01: Fan reverse rotation", then press input confirmation switch (11) to accept the input. The screen changes to the screen on the right (green display).

To switch the fan to reverse rotation, press input confirmation switch (11).

(Press Back switch (8) to return to the previous screen.)

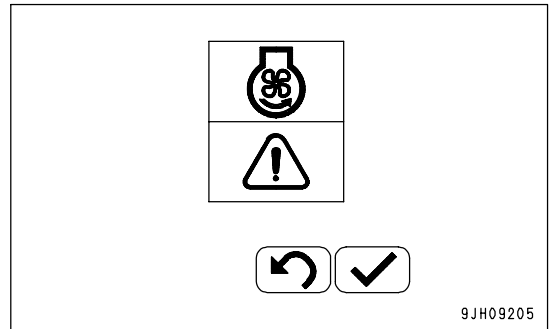


5. When the fan rotation is being changed, the screen changes to the waiting screen. The engine is automatically set to low idling, and after approx. 15 seconds, the fan rotates in reverse. After another approx. 4 seconds, the engine speed returns to normal.

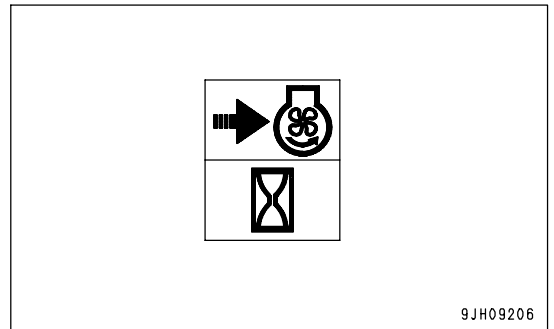


NOTICE

- The fan rotation speed is proportional to the engine speed. When the engine is running at low idling, the fan also rotates at minimum speed. If it is desired to raise the fan rotating speed, use the fuel control dial to raise the engine speed.
- When rotating the fan in reverse with the engine stopped, change to this screen, then turn the starting switch to the START position. This screen does not change until the engine starts, so if it is desired to cancel, turn the starting switch to the OFF position.


6. When the fan rotates in reverse, the screen switches automatically to the screen shown on the right (yellow display). While the fan is rotating in reverse, the screen maintains this display.

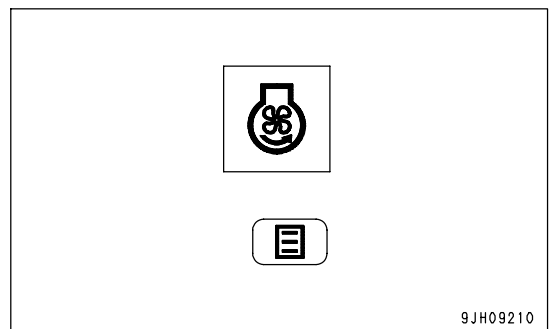


7. If any abnormality occurs when the fan is rotating in reverse, a warning monitor is displayed as shown in the diagram on the right. If the warning monitor is displayed, see "MONITORING SYSTEM (PAGE 3-5)" and follow the instructions.

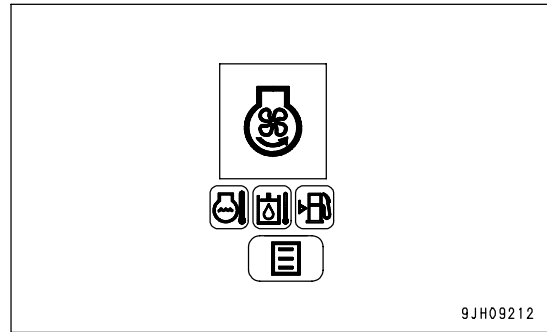


8. When changing the fan rotation direction from reverse direction to the normal direction, press User mode adjustment switch (7).

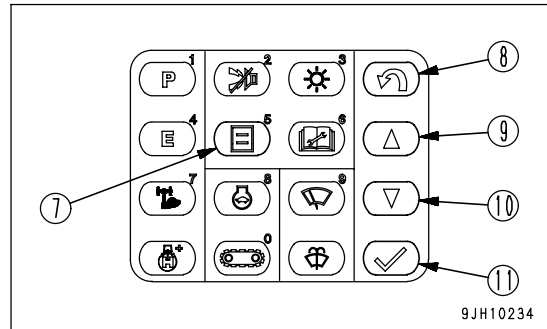


9. When changing the fan rotation direction from reverse direction to the normal direction, press input confirmation switch (11).
(Press Back switch (8) to return to the previous screen.)

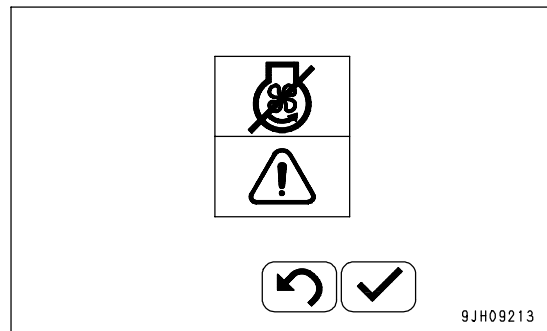

10. When the fan rotation is being changed, the screen changes to the waiting screen. The engine is automatically set to low idling, and after approx. 15 seconds, the fan rotates in the normal direction. After another approx. 4 seconds, the engine speed returns to normal.


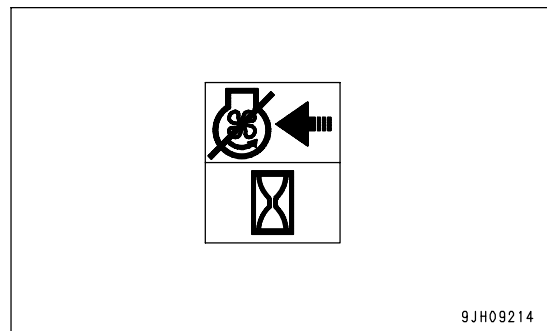


11. When the fan returns to rotating in the normal direction, the display switches automatically to the initial screen.

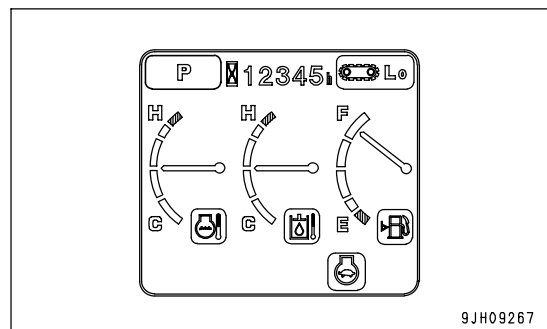


REMARK

- In some cases, the screen in Step 1 may switch to the screen on the right (red display) without switching to the screen in Step 4, and the fan may not rotate in reverse. This is designed to protect the equipment and to prevent the fan from rotating in reverse depending on the water temperature and hydraulic oil temperature.
- If it is desired to rotate the fan in reverse, press Back switch (8), switch to the initial screen, run the engine at low idling or stop it, then carry out the warming-up or cooling-down operation.
- If the water temperature and hydraulic temperature on the initial screen indicates ranges (A) - (B) shown in the diagram on the right, the fan can be rotated in reverse. Carry out the procedure in order from Step 1.
- The system is controlled so that when the fan is rotating in reverse, the work equipment makes almost no movement even when the levers are operated. Rotating the fan in reverse is intended for use in cleaning the radiator, so when carrying out operations and moving the work equipment, switch the fan to the normal direction of rotation before starting operations.

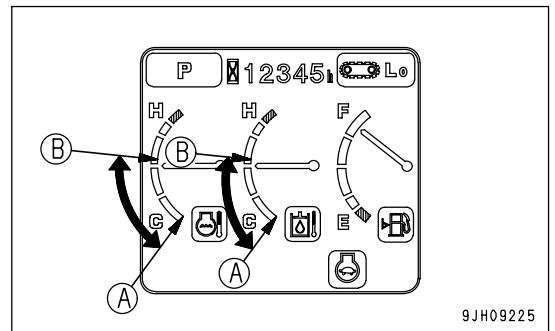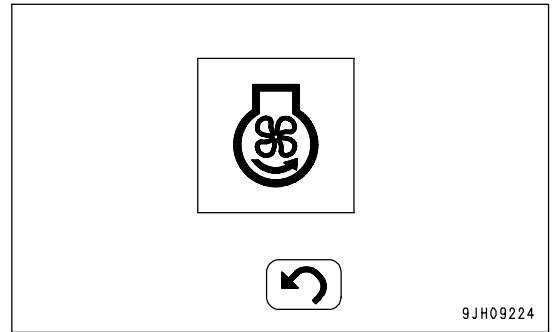


Adjusting Set Value of Economy Mode

1. Press switch (7) and the monitor display screen changes to the fan reverse rotation and economy mode adjustment screen show on the right.
 01: Fan reverse rotation menu
 02: Economy mode adjustment menu

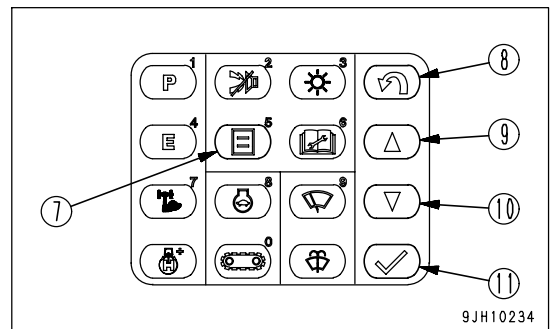

2. When adjusting the set value of the economy mode, adjusting the engine output can provide an improvement in fuel consumption in E mode.
 Use UP switch (9) or DOWN switch (10) to select "02: Fan reverse rotation", then press enter switch (11) to accept the input. The screen changes to the screen on the right.
 There are four levels that can be set: E0, E1, E2, and E3, as shown in the diagram on the right.
 (It is set to E0 when the machine is shipped from the factory.)
3. Use UP switch (9) or DOWN switch (10) to select E0 - E3.

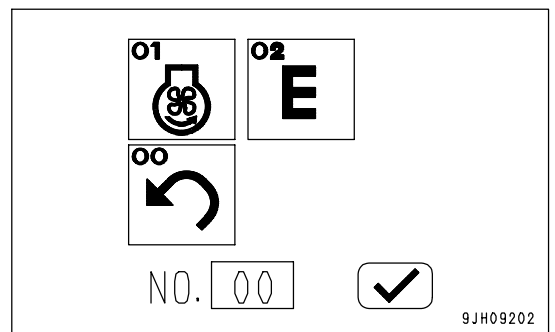

4. Press input confirmation switch (11).

The relationship between fuel consumption and production is as follows.


E0: Default set value (maximum emphasis on production, not on fuel consumption)

E1: Economy adjustment 1 (emphasis on production)

E2: Economy adjustment 2 (emphasis on fuel consumption)

E3: Economy adjustment 3 (maximum emphasis on fuel consumption, not on production)

For details of productivity in each mode, see "Setting Economy Mode (PAGE 3-120)".

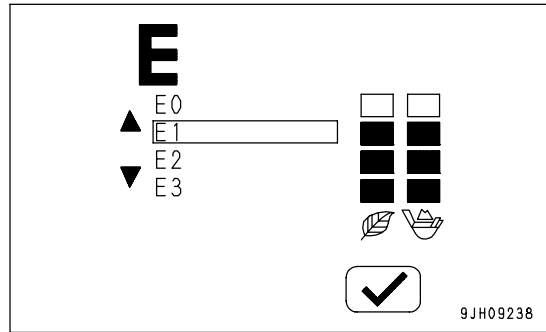


REMARK

The closer the selection is made to E3, the better the fuel consumption becomes, but the production is reduced accordingly.


Back Switch

Press switch (8) when in the maintenance mode, brightness/contrast adjustment mode, or select mode. The screen will return to the previous screen on the monitor display.

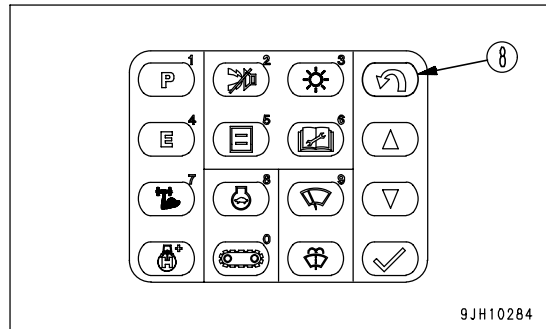


Up Switch, Down Switch

Press up switch (9) or down switch (10) when in the maintenance mode, brightness/contrast adjustment mode, or select mode to move the cursor on the monitor display (colors of selected monitor are inverted) up, down, left, or right.

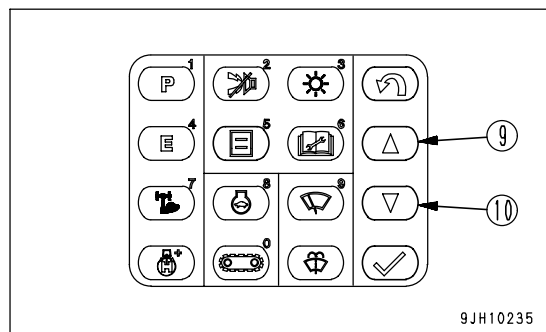


Input Confirmation Switch

Press switch (11) to confirm selected mode when in the maintenance mode, brightness/contrast adjustment mode, or select mode.

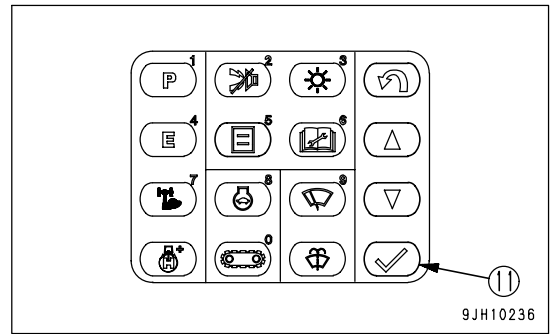


Liquid Crystal Monitor Adjustment Switch

Press switch (12) to adjust the brightness or contrast of the display monitor.

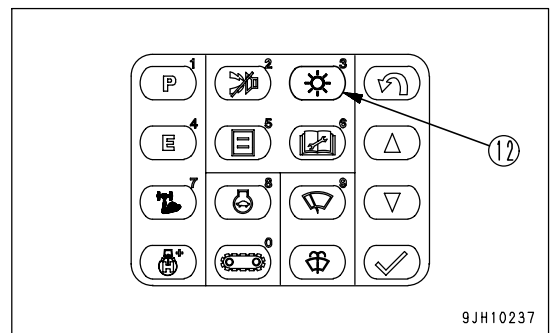


Adjusting Brightness


1. When monitor adjustment switch (12) is pressed, the monitor display screen changes to the brightness/contrast screen shown in the diagram on the right.

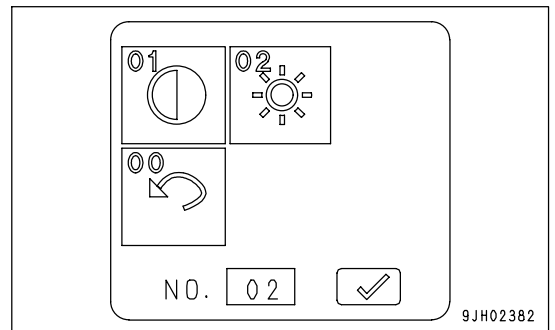

2. Use the brightness/contrast screen and press up switch (9) or down switch (10) to select brightness of the monitor. (The selected monitor is inverted to black.)

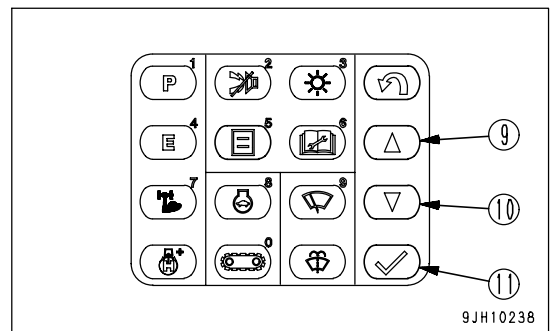


3. When the screen changes to the brightness adjustment screen, press up switch (9) or down switch (10) to adjust the brightness.
4. After completing adjustment of the brightness, press input confirmation switch (11).

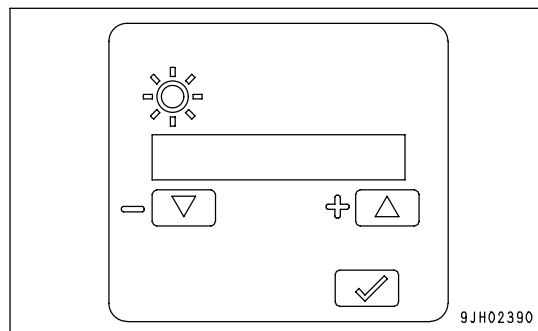


Adjusting Contrast


1. When monitor adjustment switch (12) is pressed, the monitor display screen changes to the brightness/contrast screen shown in the diagram on the right.

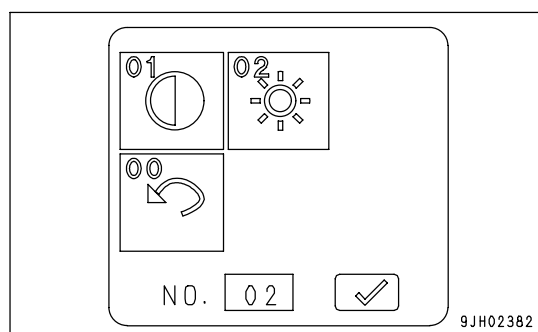

2. Use the brightness/contrast screen and press up switch (9) or down switch (10) to select the contrast monitor. (The selected monitor is inverted to black.)

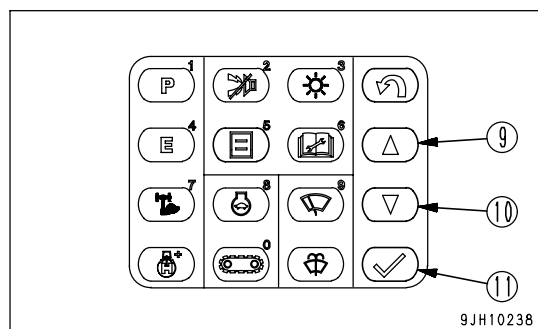

3. When the screen changes to the contrast adjustment screen, press up switch (9) or down switch (10) to adjust the contrast.
4. After completing adjustment of the contrast, press input confirmation switch (11).

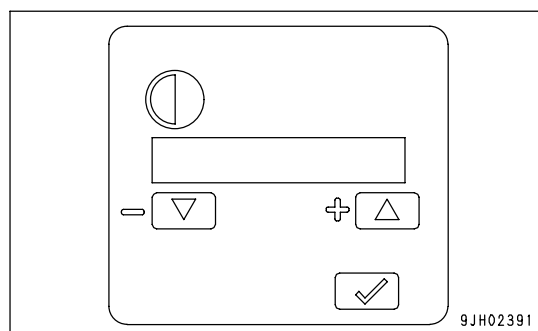


REMARK


When the machine is shipped from the factory, the backlighting is set to the maximum plus (+). The contrast is set to the middle value. After adjusting, even if the starting switch is turned OFF, the adjusted value is retained.

Alarm Buzzer Stop Switch

Use this switch (13) to stop the alarm buzzer when it is sounding during operation to indicate an abnormality in the warning item.

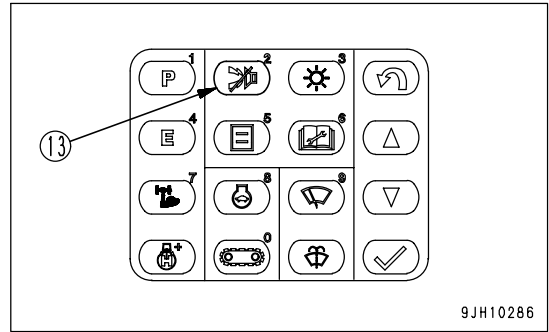

SWITCHES

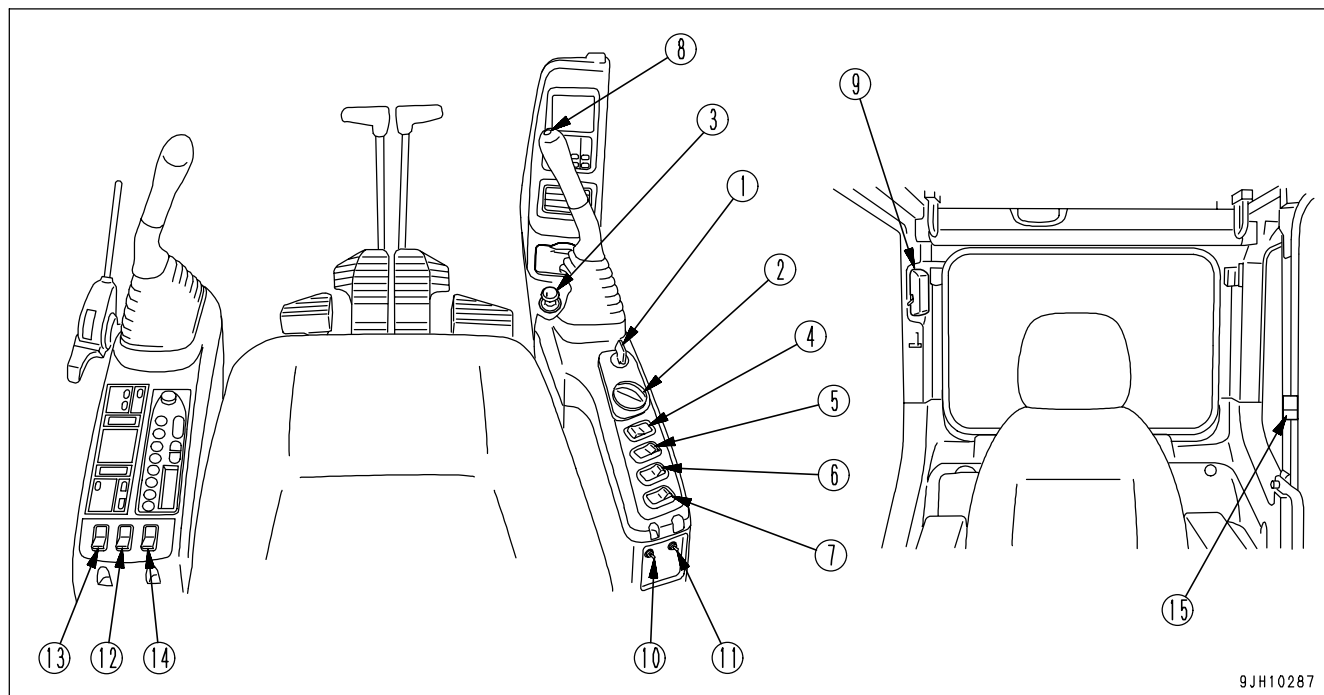

9JH10287

- | | |
|-----------------------------------|--|
| (1) Starting switch | (10) Emergency pump drive switch |
| (2) Fuel control dial | (11) Swing brake cancel switch |
| (3) Cigarette lighter | (12) Rotating lamp switch (if equipped) |
| (4) Lamp switch | (13) Large capacity airflow air conditioner blower switch (if equipped) |
| (5) Swing lock switch | (14) Lower wiper switch (Fixed front window cab specification) (if equipped) |
| (6) Machine push-up switch | (15) Step light switch |
| (7) Boom shockless control switch | |
| (8) Horn switch | |
| (9) Room lamp switch | |

Starting Switch

Starting switch (1) is used to start or stop the engine.

(A): OFF position


The key can be inserted or withdrawn. Switches for the electrical system (except room lamp), are all turned off and the engine is stopped.

(B): ON position

Electric current flows through the charging and lamp circuits. Keep starting switch key in the ON position while the engine is running.

(C): START position

This is the engine-start position. Keep the key at this position during cranking. Immediately after starting the engine, release the key. It will automatically return to the ON position (B).

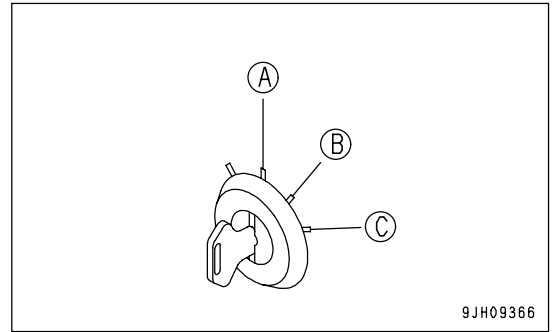

Fuel Control Dial


Dial (2) adjusts the engine speed and output.

(a) Low idling (MIN): Turned fully to the left

(b) Full speed (MAX): Turned fully to the right

REMARK

When the fuel control dial is turned, the engine speed does not change for the first few notches from MIN and the last few notches before MAX, but this does not indicate any abnormality.

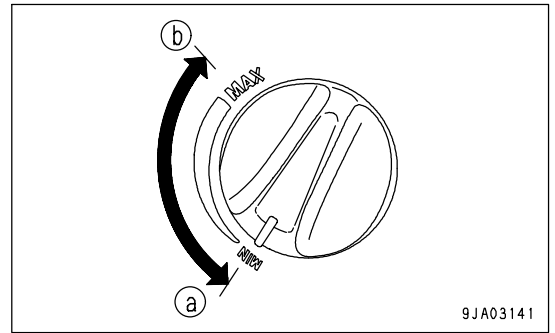


Cigarette Lighter

Lighter (3) is used to light cigarettes.

To use, push the lighter in. After a few seconds it will spring back. Pull out the lighter and light your cigarette.

By removing the cigarette lighter, the socket is available as a power source for the yellow flashing lamp.

Max. current is 85 W (24V x 3.5 A).

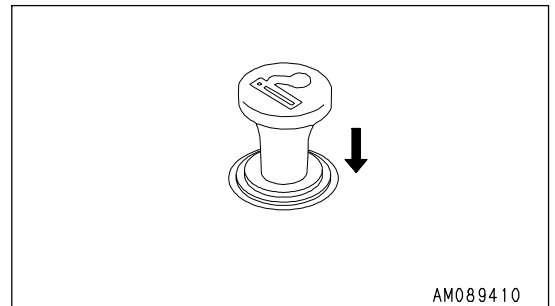


Lamp Switch

Switch (4) is used to turn on the front lamps, working lamps, additional lamp at top front of the cab, and monitor lighting.

(a) ON: Lamps light up

(b) OFF: Lamps go off

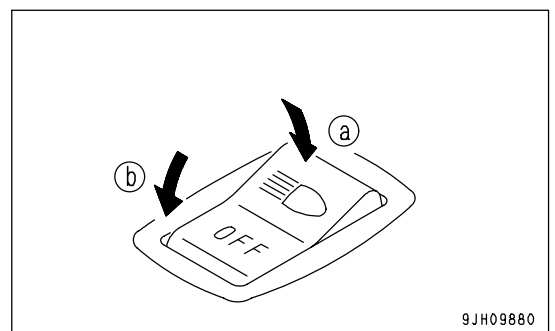

Swing Lock Switch

! WARNING


- When the machine is traveling under its own power, or when the swing is not being operated, always set the switch to the ON position (a).
- On slopes, even when the swing lock switch is at the ON position (a), the weight of the work equipment may cause the upper structure to swing if the swing control lever is operated in the downhill direction.

Switch (5) is used to lock the upper structure so it cannot swing.

(a) ON position (actuated) : The swing lock is always applied, and the upper structure will not swing even if the swing is operated. In this condition, the swing lock lamp lights up.

(b) OFF position (canceled) : The swing lock is applied only when all the work equipment control levers are in neutral; when any work equipment control lever is operated, the swing lock is canceled.

The swing lock is actuated approx. 5 seconds after all the control levers are placed in the neutral position.

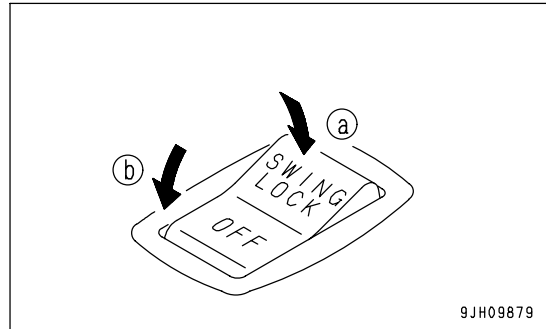

9JH09879

Machine Push-up Switch

! WARNING

When using the boom thrust force to push up the chassis when moving down from a bench, there is danger that the machine may suddenly go down and turn over, so set to the high-pressure setting.

This switch (6) is used to switch the safety valve set pressure at the head end of the boom cylinder to two levels.


(a) Low pressure setting:

The boom thrust force is weak, so swaying of the chassis is small during digging operations, and digging can be performed smoothly.

This is used for general digging operations on normal ground, soft rock, or blasted rock.

(b) High pressure setting:

The boom thrust force becomes more powerful, so it is easy to twist and swing or escape from soft ground. It is effective in performing digging operations using the bucket and weight of the machine in confined areas.

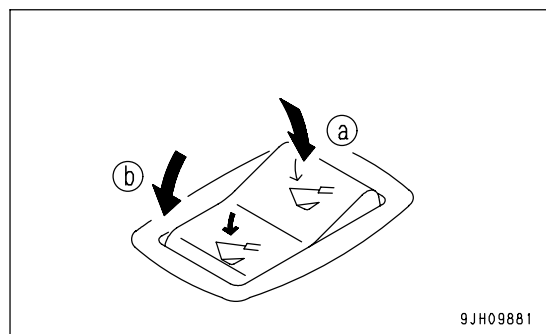

9JH09881

Boom Shockless Control Switch


Switch (7) controls the shaking of work equipment when the boom is stopped.

Effect

- The shaking and spillage of load from the bucket is reduced.
- Operator fatigue is reduced when operating for long periods, so operations can be performed safely.


REMARK

- When the switch is at the ON position (a) and the boom is stopped, the movement of the boom until it stops will increase slightly.
Be careful when using this operation until you become accustomed to it.
- The boom drifts down and it is difficult to position it, so set this switch to the OFF position (b) when carrying out operations with a raised load.

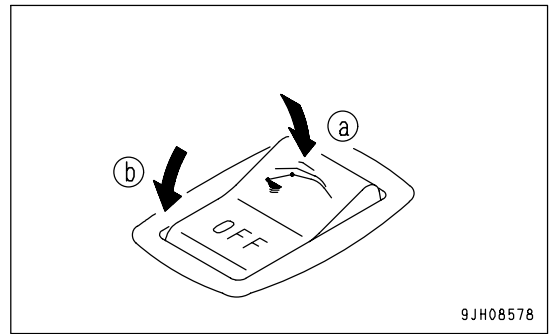

Horn Switch

When the switch (8) at the tip of the right work equipment control lever is pressed, the horn will sound.

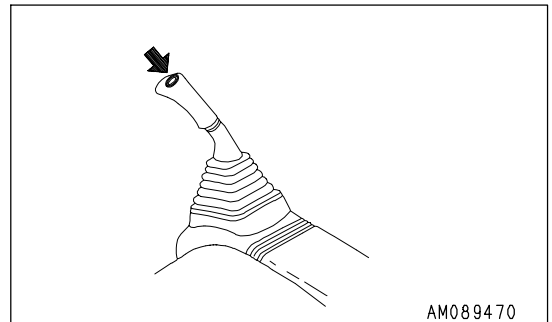

Room Lamp Switch

NOTICE


It is possible to turn on the interior cab room lamp even when starting switch is in the OFF position, do not forget to turn it off.

Use this switch (9) to light up the room lamp.

Position (a) ON: Lights up

Position (b) OFF: Goes out

The room lamp lights up even when the starting switch is in the OFF position.

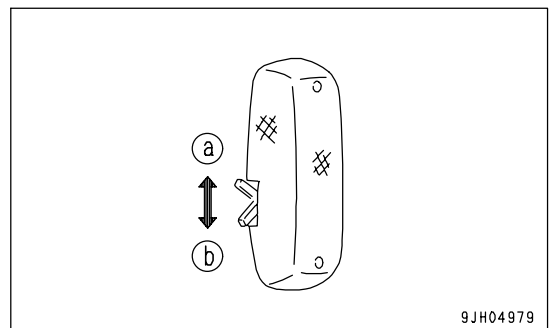


Emergency Pump Drive Switch

NOTICE

Emergency pump drive switch is provided to make it possible to perform work for a short time when there is a failure in the pump control system. It is necessary to repair the abnormal location as soon as possible.

This switch (10) makes it possible to do the work temporarily or start up the engine when there is something wrong with the network (i.e. when the display shows "E0E") and with the pump control system (i.e. when the display shows "E07").

- (a) Emergency: In abnormality (Switch pushed up)
- (b) Normalcy: In normalcy (Switch pushed down)
- (c) Emergency: In abnormality in engine startup (Switch in the middle)

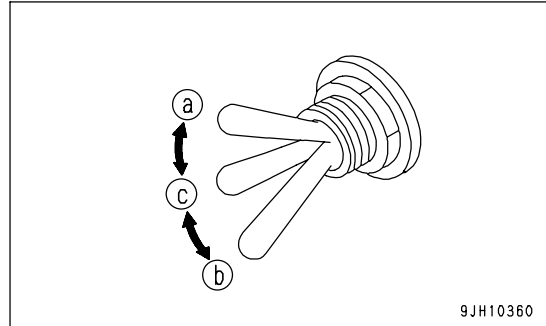

- When "E0E" is shown on the display and this switch is pushed up to position (a), smoothness in the work is lost, but the work equipment may be moved slightly faster than normal. Use this switch when the machine has to be moved as fast as possible such as in the evacuation.
- When starting up the engine with "E0E" or "E07" showing on the display and the engine does not run, move this switch to position (c). Then the engine may be started. After the engine startup, temporary work may become possible by pushing up this switch to position (a).

Swing Parking Brake Release Switch


NOTICE

This switch makes it possible to perform swing operations for a short even when there is a problem in the swing parking brake electric system. DO NOT use this switch except in emergencies. Repair the problem as soon as possible.

This switch (11) is used to make it possible to carry out operations temporarily if any problem should occur in the swing parking brake system (when the upper structure does not swing but the display does not show "E03").

- (a) FREE: When abnormal (move switch up)
- (b) NORMAL: When normal (move switch down)

- If the display does not show "E03", move the switch up to FREE position (a) to make it possible to carry out work.
- When the switch is moved to FREE position (a), the swing lock monitor flashes.

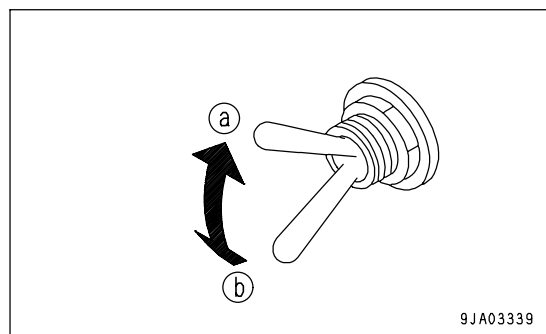


Rotating Lamp Switch

(if equipped)

This switch (12) is used to light up the yellow rotating lamp on top of the cab.

- (a) ON: Lamps light up
- (b) OFF: Lamps go off

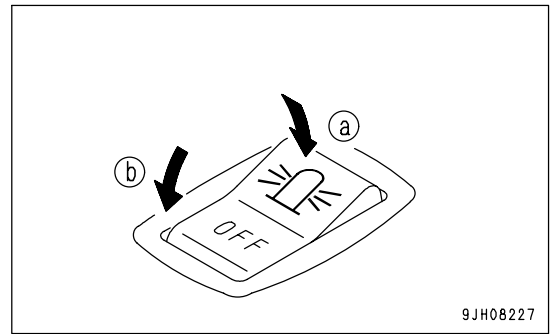


Large Capacity Airflow Air Conditioner Blower Switch

(if equipped)

This switch (13) operates the large-capacity airflow air conditioner blower.

- (a) ON: Large-capacity air conditioner blower is actuated
- (b) OFF: Large-capacity air conditioner blower is stopped

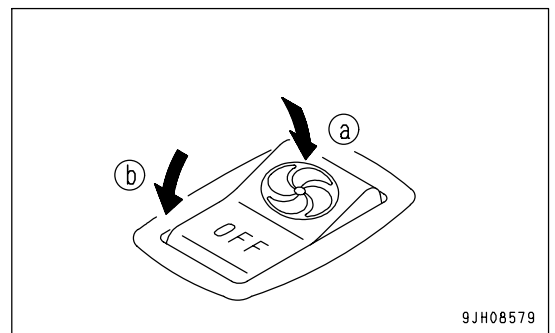


Lower Wiper Switch

(if equipped)

Switch (14) operates lower wiper (A).


- (a) ON position: Lower wiper (A) is actuated
- (b) OFF position: Lower wiper (A) stops

If this switch is turned to the ON position at the same time as the wiper switch, the wiper and lower wiper (A) will be actuated in turn.

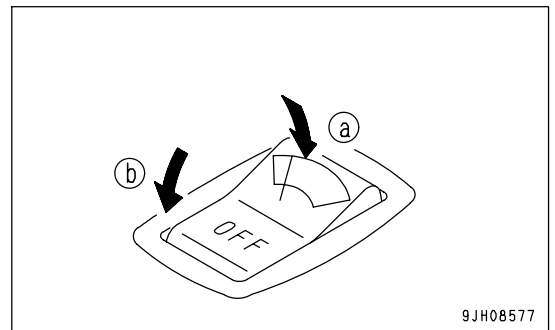

REMARK


- If the wiper and lower wiper are being actuated at the same time, lower wiper will not stop even when the wiper switch (monitor) is turned OFF. To stop the lower wiper, turn switch (13) OFF.
- When the wiper is under continuous operation at the ON position, if the lower wiper switch is turned ON, the wiper and lower wiper will be actuated in turn.
- If the lower wiper switch is at the ON position and is operating continuously, and the wiper is actuated with the machine monitor, the lower wiper (both INT and ON) and wiper will be actuated in turn.

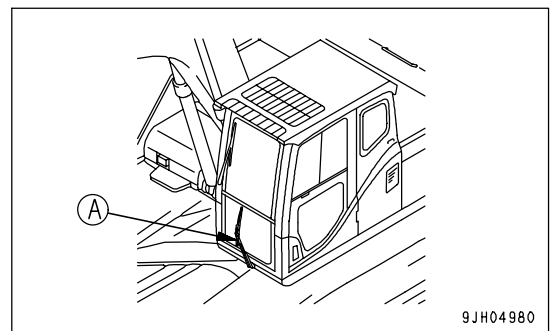


Step Light Switch

Use switch (15) when dismounting the machine at night.

- When the switch is turned to the ON (a) position, the step light will light up for approx. 60 seconds.
- Even if the starting switch key is at the OFF position, the step light will light up for approx. 60 seconds when the switch is pressed.

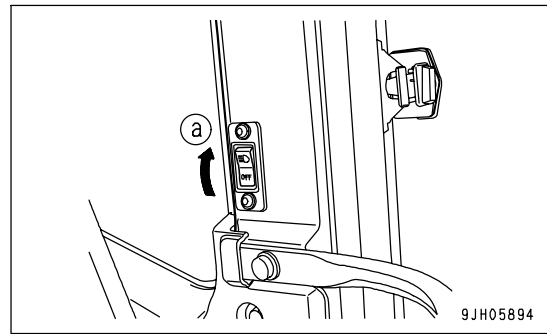

CONTROL LEVERS AND PEDALS

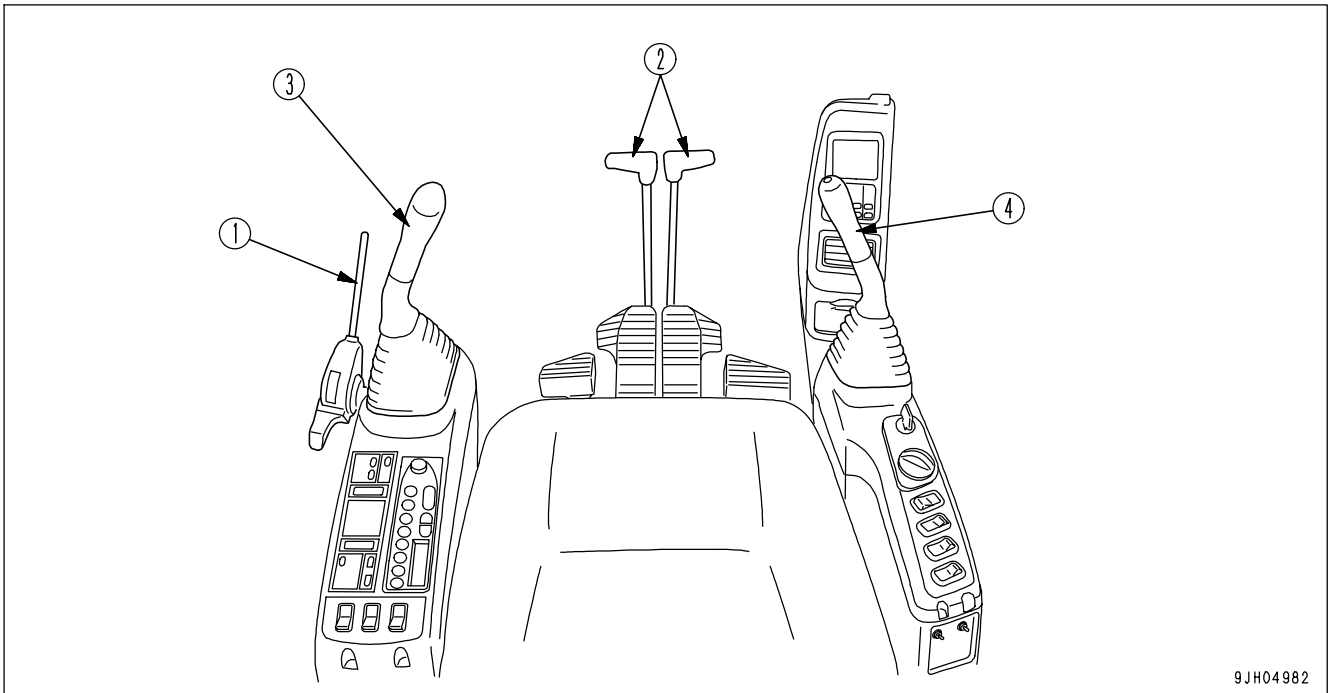


9JH04982

- (1) Lock lever
- (2) Travel levers
(with a pedal and auto-deceleration system)
- (3) Left work equipment control lever
(with auto-deceleration system)
- (4) Right work equipment control lever
(with auto-deceleration system)

Lock Lever

! WARNING

- When standing up from the operator's seat, push lock lever (1) down securely to set it to LOCK position (L). If lock lever (1) is not in LOCK position (L) and the control levers are touched by mistake, it may lead to serious personal injury.
- Check lock lever (1) is placed securely at LOCK position (L).
- Be careful not to touch the work equipment control levers when pulling lock lever (1) up or pushing it down.

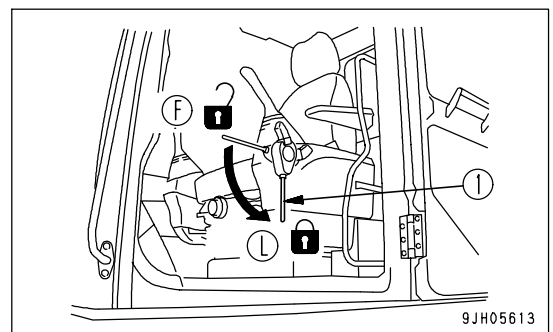

9JH05613


This lever (1) is a device to lock the work equipment, swing, travel, and attachment (if equipped) control levers. Push the lever (1) down to apply the lock.

This lock lever (1) is a hydraulic lock, even if it is in the lock position (L), the work equipment control lever and travel lever will move, but the work equipment, travel motor, and swing motor will not work.

Travel Levers (with Pedals and Auto-deceleration Device)

WARNING

- Do not rest your foot on the pedal during operations. If the pedal is depressed by mistake, the machine may suddenly move and cause a serious accident. Be extremely careful when operating the pedal for travel or steering operations. When you are not using the pedal, do not rest your foot on it.
- If the track frame is facing the rear, the direction of travel operations will be reversed when the travel lever is operated. (The machine will travel forward when operated in reverse, and in reverse when operated forward; the left and right directions will also be reversed.)
- When operating the travel levers, check if the track frame is facing the front or the rear. (If the sprocket is at the rear, the track frame is facing the front.)

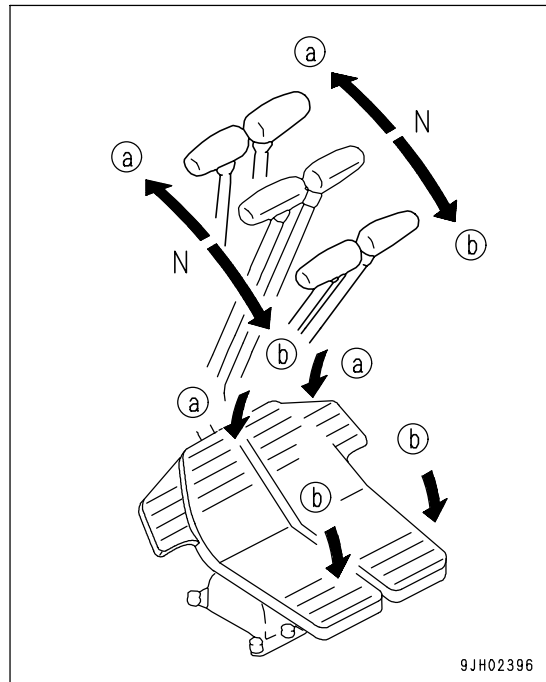

This lever (2) is used to change the direction of travel between forward and reverse. () shows the pedal operation.

(a) FORWARD: The lever is pushed forward
(The pedal is angled forward)

(b) REVERSE: The lever is pulled back
(The pedal is angled back)

N (Neutral): The machine stops

REMARK

If the lever is shifted to the FORWARD or REVERSE position from the Neutral position, the alarm sounds to warn that the machine is starting to move.

Work Equipment Control Lever


Left work equipment control lever (3) is used to operate the arm and upper structure.

Arm operation

- (a) Arm OUT
- (b) Arm IN

Swing operation

- (c) Swing to right
- (d) Swing to left

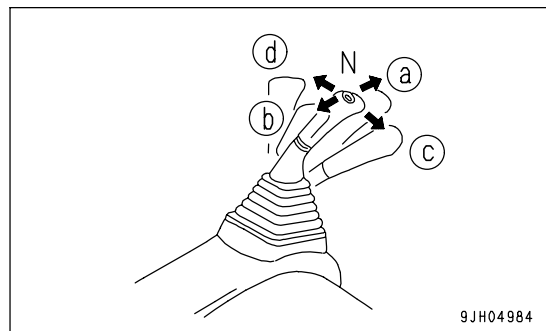

N (Neutral) : The upper structure and arm are held in position and do not move.


Right work equipment control lever (4) is used to operate the boom and bucket.

Boom operation

- (a) RAISE
- (b) LOWER

Bucket operation

- (c) DUMP
- (d) CURL

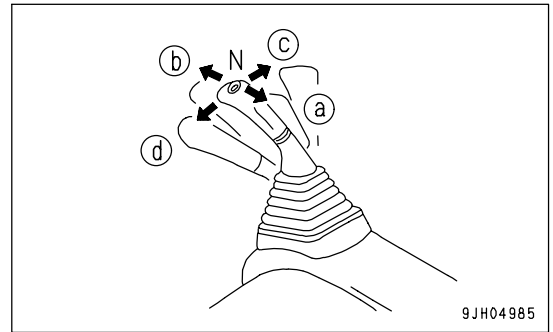

N (Neutral) : The boom and bucket are held in position and do not move.

REMARK

The engine speed for all control levers (travel, work equipment, attachment) is changed as follows by the auto-deceleration mechanism.

- When the travel lever and work equipment control levers are at the neutral position, even if the fuel control dial is above midrange speed, the engine speed will go down to a midrange speed. If one of these levers is operated, the engine speed will rise to the speed set by the fuel control dial.
- If all the control levers are at the neutral position, then after approx. 4 seconds, the engine speed goes down to the deceleration speed (approx. 1425 rpm).


SUN ROOF

(PC800,PC800LC,PC800SE-8 pull up cab specification machine only)




WARNING

When standing up from the operator's seat, push lock lever (1) down securely to set it to LOCK position (L).
If lock lever (1) is at the FREE position (F) and the control lever is touched by mistake, this may lead to a serious accident.

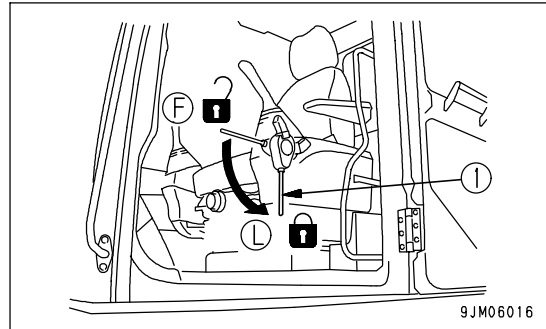

Opening

1. Set the lock lever (1) securely to the LOCK position (L).
2. Check for any ceiling window movement by pulling lock knob (A) located on front side, then push up and open the ceiling window grasping grip (B).

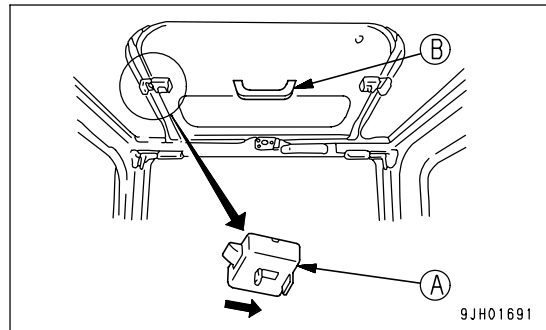

Closing

Hold grasping grip (B), lower the ceiling window, and apply lock (A). If the lock cannot be applied, open the ceiling window, then pull it in again and apply the lock.


WINDSHIELD

(PC800,PC800LC,PC800SE-8 pull up cab specification machine only)



WARNING


- When opening or closing the front window, bottom window, or door, always set lock lever (1) to LOCK position (L).
If the control levers are not locked and they are touched by accident, this may lead to a serious accident.
- When opening or closing the window at the front of the cab, stop the machine on horizontal ground, lower the work equipment completely to the ground, stop the engine, then carry out the operation.
- When opening the front window, hold the grip securely with both hands, pull up, and do not let go until the automatic lock catch is locked.
- When closing the front window, the window will move quicker under its own weight. Hold the grips securely with both hands when closing it.

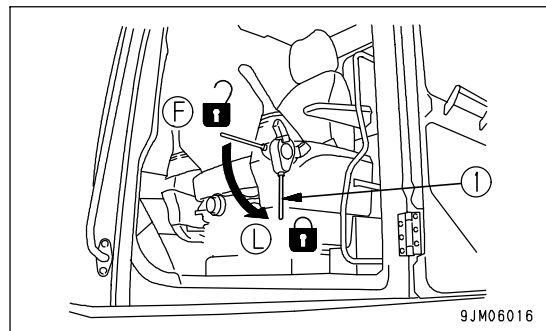


It is possible to stow (pull up) the front window in the roof of the operator's compartment.

Opening



1. Stop the machine on level ground, lower the work equipment completely to the ground, then stop the engine.
2. Set the lock lever securely in the LOCK position (L).

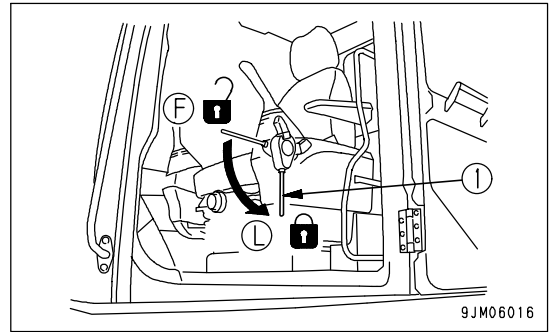




3. Check that the wiper blade is stowed in the right stay.

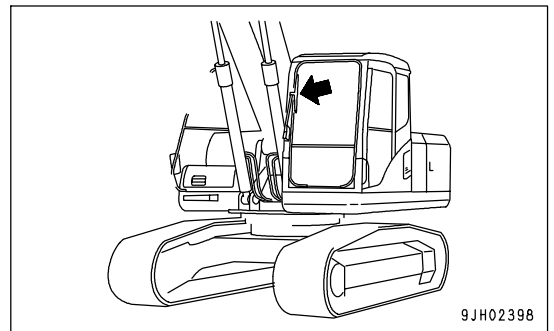

4. Grip handles (A) at the top right and left of the front window, and pull lock lever (B) toward yourself to release the lock at the top of the front window. The top of the front window will come out.

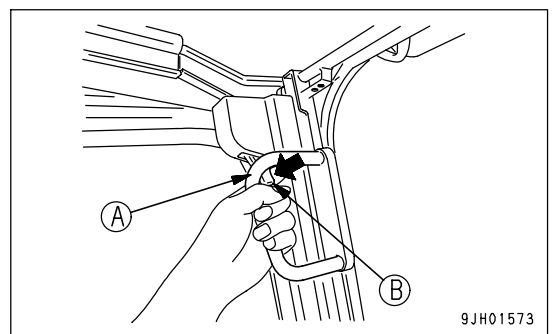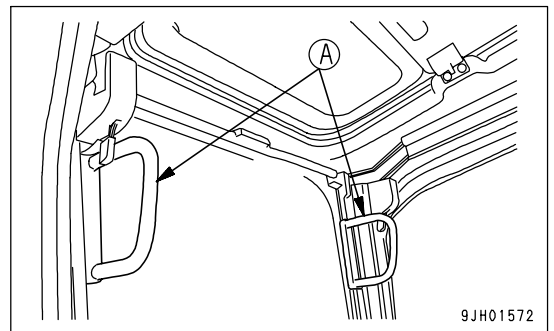


5. Hold lower knob (C) with your left hand from inside the operator's cab, and with your right hand, grip top knob (D), pull it up, and push it against lock catch (E) at the rear of the cab securely to lock the window.

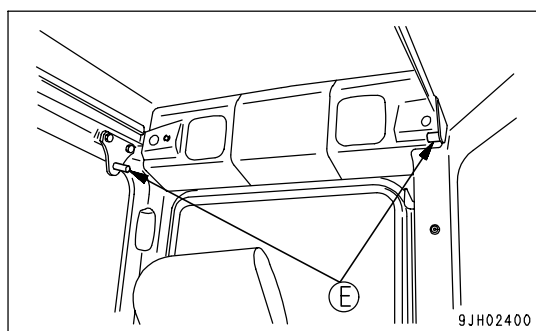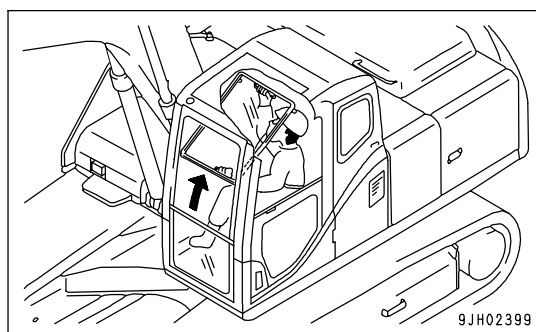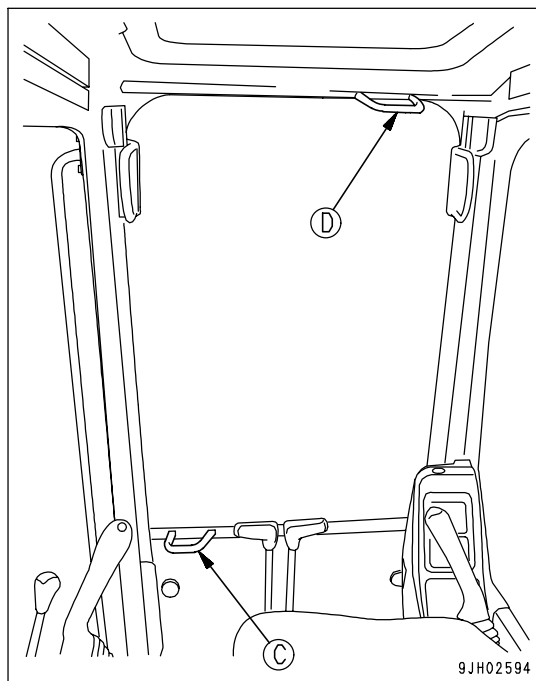

6. Check that lock lever (B) is securely in the LOCK position.

- The lock is engaged if the arrow on lock case (F) matches the position of the arrow on lock lever (B). Check visually.
- If the arrow on lock case (F) does not match the position of the arrow on lock lever (B), the lock is not engaged. Repeat the operation in Step 5 to engage the lock.

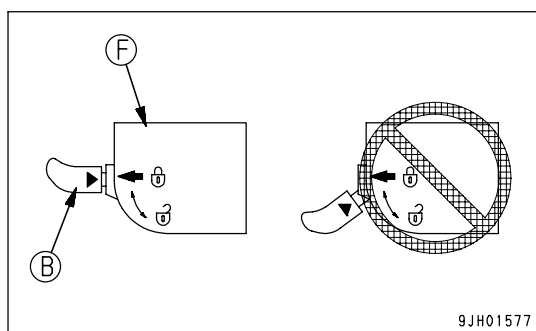


Closing


**WARNING**

When closing the window, lower it slowly and be careful not to get your hand caught.



1. Stop the machine on level ground, lower the work equipment completely to the ground, then stop the engine.
2. Set the lock lever securely in the LOCK position (L).

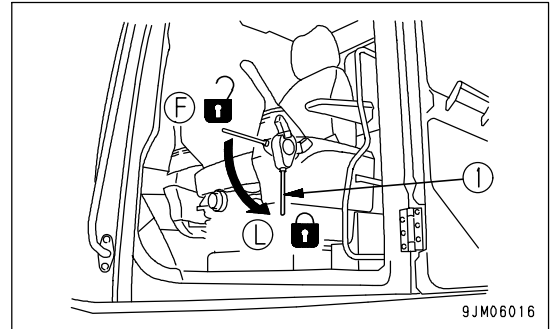


3. Grip left and right handles (A), and pull down lock lever (B) to release the lock.

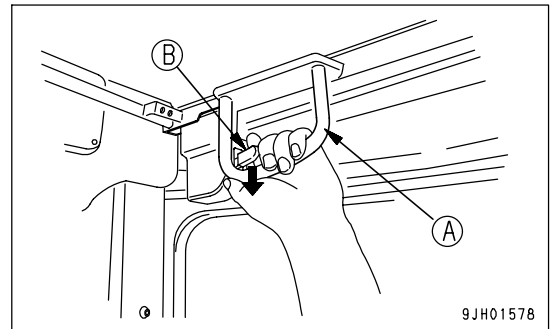


4. Grip handle (C) at the bottom of the front window with your left hand and handle (D) at the top with your right hand, push to the front, then lower slowly.

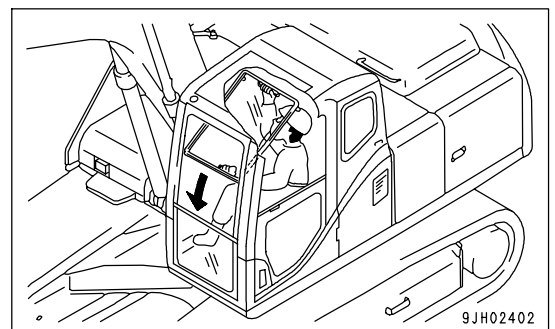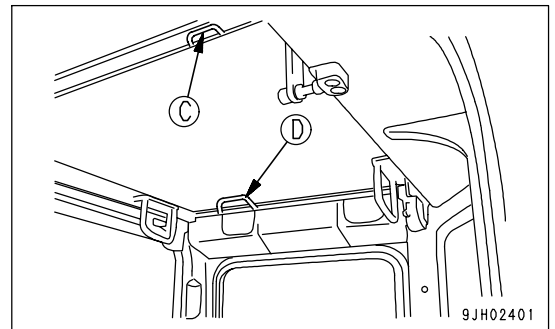

5. When the bottom of the window reaches the top of the bottom window, push the top of the window to the front to push it against left and right lock catches (G) and engage the lock.

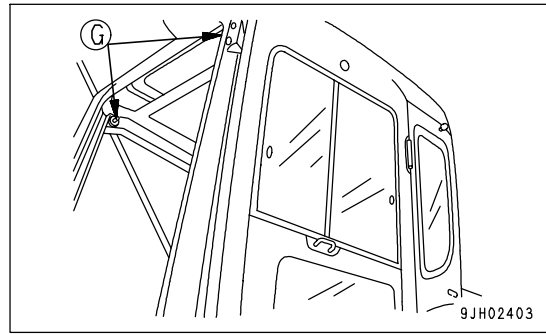


6. Check that lock lever (B) is securely in the LOCK position.
 - The lock is engaged if the arrow on lock case (F) matches the position of the arrow on lock lever (B). Check visually.
 - If the arrow on lock case (F) does not match the position of the arrow on lock lever (B), the lock is not engaged. Repeat the operation in Step 5 to engage the lock.

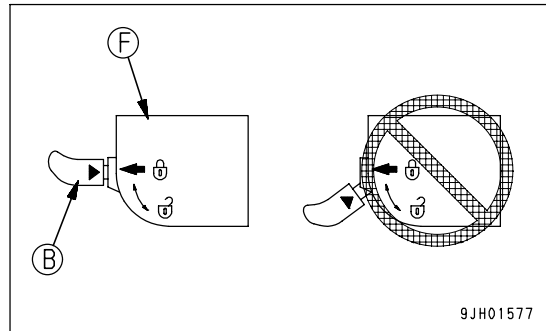


Removing Lower Windshield

1. Open the front window, then hold grip (A), pull up, and remove the bottom window.

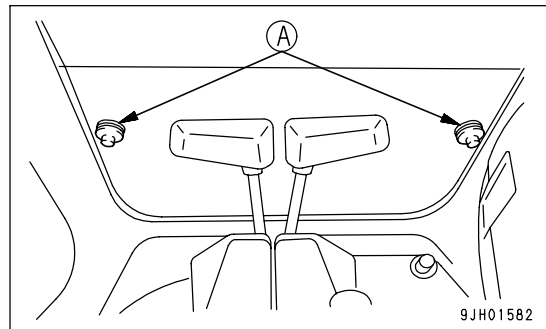


2. After removing the bottom window, store it at the rear of the operator's cab and lock it securely with left and right locks (B).
 - When removing, always hold the glass with one hand and release the lock with the other hand.

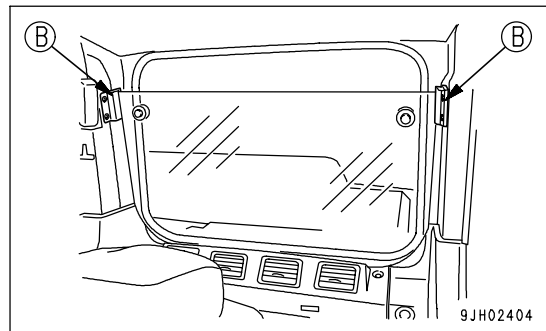

EMERGENCY EXIT FROM OPERATOR'S CAB

- If for some reason, the cab door does not open, remove the rear window and use it as an emergency escape.
- Remove the rear window as follows.
 1. Pull ring (1) and completely remove seal (2) from the rubber core.
 2. With pressure push on corner of the window, the glass will fall outside.
 - Do not remove the rear window except when using it as an emergency exit.

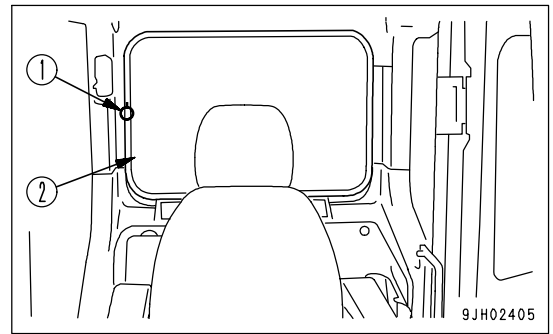

DOOR LOCK




WARNING

- Before releasing the door lock, always stop the machine on flat ground. Never release the door lock on a slope. The door may suddenly close and cause injury.
- When releasing the door lock, do not extend your body or hands outside the machine and do not put your hands on the door frame. The door may suddenly close and cause injury.

Use the door lock to fix the door in position after opening it.

1. Push the door against catch (1) to lock it in position.
 2. To release the lock, press knob (2) down at the left side of the operator's seat to release the catch.
- When fixing the door, fix it firmly to the catch.

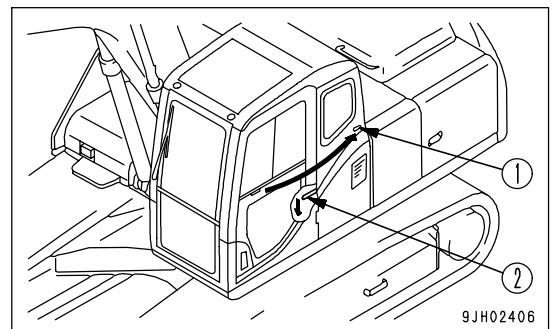


CAP WITH LOCK

Use the starting switch key to open and close the locks on the caps and covers.

For details of the locations of the caps and covers with locks, see "LOCKING (PAGE 3-136)".


Insert the key as far as it will go to the shoulder (A). If the key is turned before it is inserted all the way, it may break.

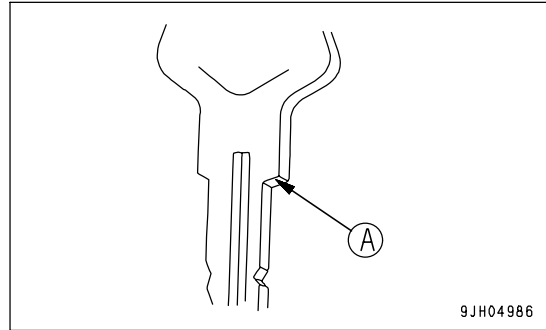

Opening and Closing Hydraulic Tank Cap

Opening the Cap

1. Insert the key into the key slot.
 2. Turn the starting switch key counterclockwise, align the key slot with the match mark (3) on the cap, then open the cap.
- (1): Open
(2): Lock

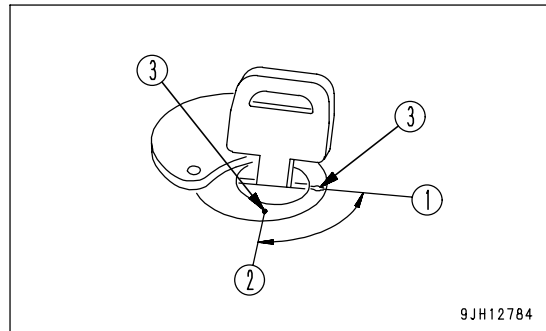


Locking the Cap

1. Turn the cap until tight, then insert the key into the key slot.
2. Turn the key clockwise and take the key out.

Opening and Closing Cover with Lock

Opening the Cover (Locked Cover)

1. Insert the key into the key slot.
 2. Turn the key counterclockwise and open the cover by pulling the cover grip.
- (A): Open
(B): Lock

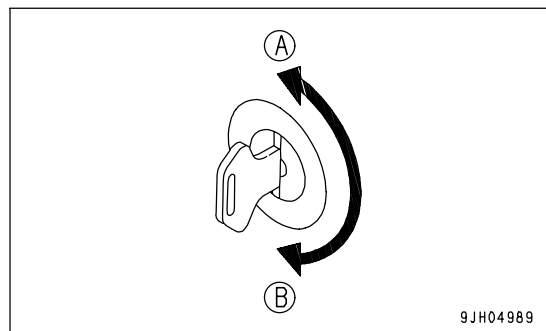


Locking the Cover

1. Close the cover and insert the key into the key slot.
2. Turn the key clockwise and take the key out.

Opening and Closing Fuel Tank Cap


Opening the Cap

1. Raise lever (1) in the (a) direction.
2. When lever (1) is turned in the (c) direction (counterclockwise) by approx 35°, it stops at the stopper, and the cap can be opened.

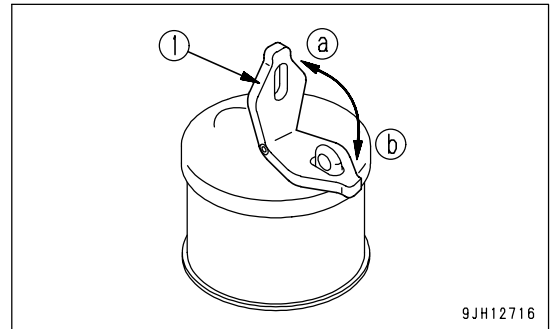


Closing the Cap

1. After turning lever (1) in the (c) direction (counterclockwise), keep it in that position and fit the cap.
2. Turn lever (1) in the (d) direction (clockwise) until it stops at the stopper, and then tilt it in the (b) direction.

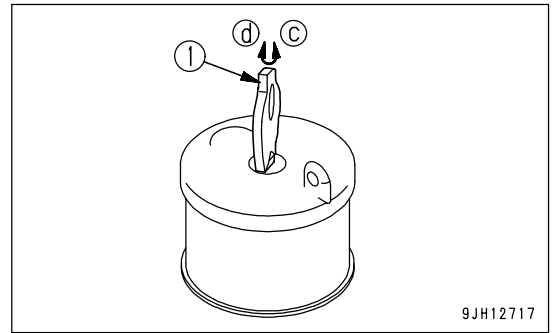

HOT AND COOL BOX

Located on the right side at rear of the operator's seat. It is interconnected with the air conditioner. Box stays warm when the heater is used, and box stays cool when the air conditioning is used.

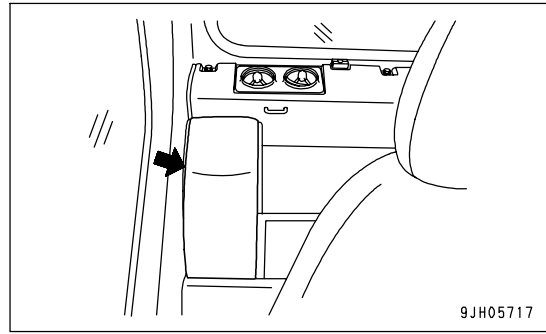


9JH05717

MAGAZINE BOX

(The cup holder is provided separately at the front of the magazine box.)

Located on left side of the operator's seat. Keep the Operation and Maintenance Manual in this box so that it can be taken out and read whenever necessary.

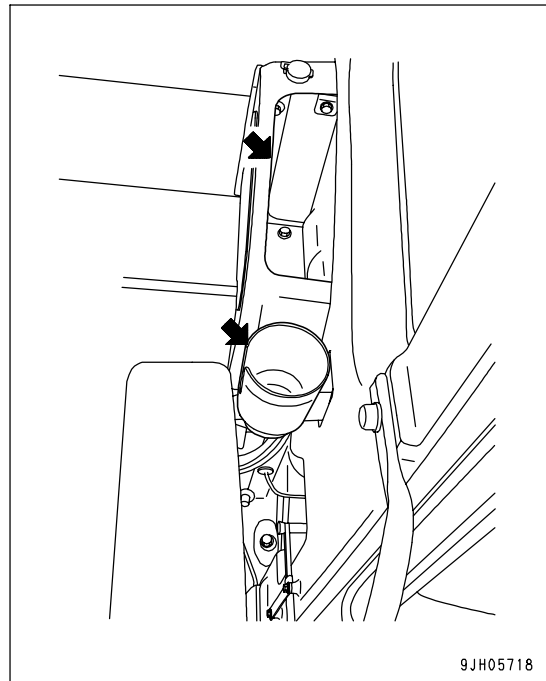


9JH05718

ASHTRAY

This is under the machine monitor at the front right of the operator's compartment.

Always make sure that you extinguish your cigarette, then put it in the ashtray and close the lid.

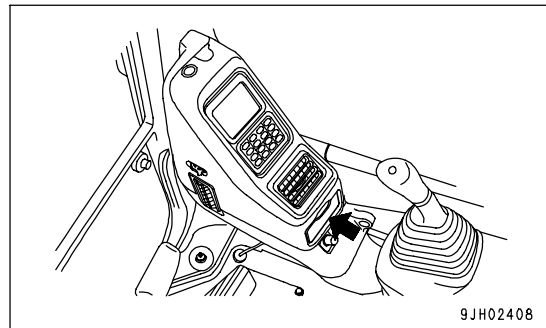


9JH02408

FIRE EXTINGUISHER


(If equipped)

The fire extinguisher can be set at the rear left of the cab. When installing, please consult your Komatsu distributor.

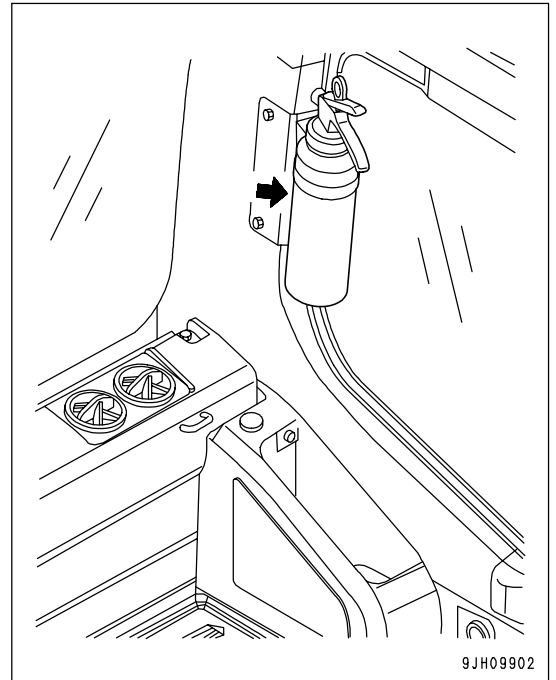

AIR CONDITIONER CONTROLS

Air Conditioner Control Panel

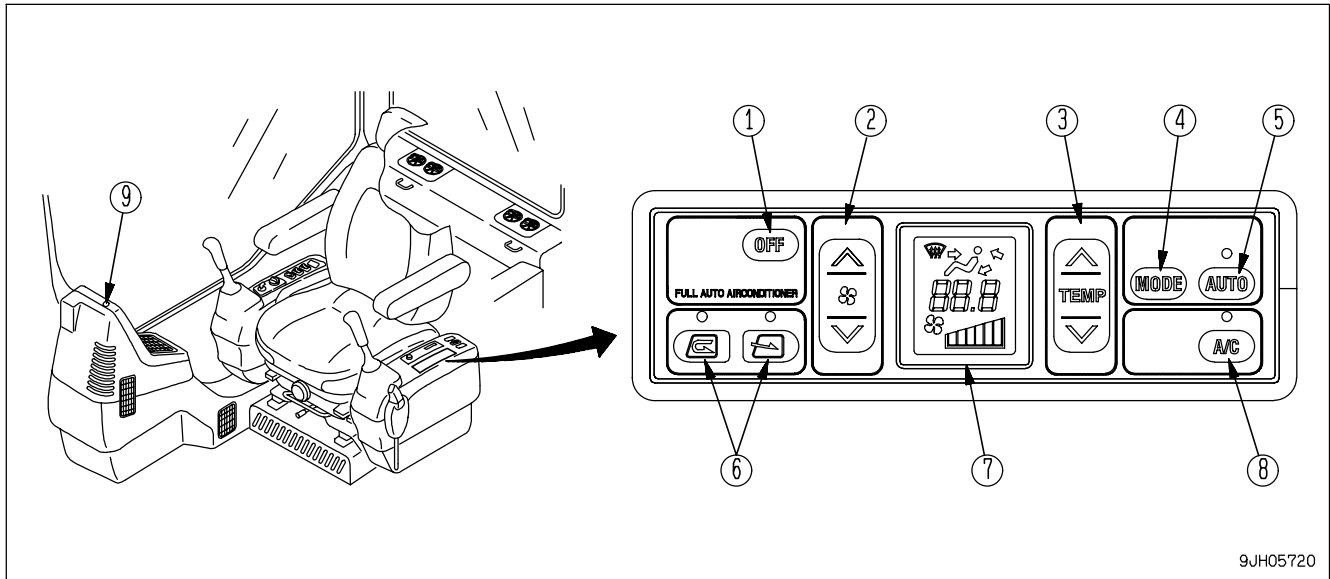

9JH05720

- (1) OFF switch
- (2) Fan switch
- (3) Temperature control switch
- (4) Vent selector switch
- (5) Auto switch
- (6) FRESH/RECIRC selector switch
- (7) Display monitor
- (8) Air conditioner switch
- (9) Sunlight sensor

OFF Switch

Switch (1) is used to stop the fan and air conditioner.

- When OFF switch (1) is pressed, the set temperature and air flow display on display monitor (7), the lamps above auto switch (5), and air conditioner (8) go out, and operation stops.

REMARK

When switch (1) is turned to the OFF position, the lamp above FRESH/RECIRC selector switch (6) does not go out, but this is not a problem.




9JH02411

Fan Switch

Switch (2) is used to adjust the air flow.

The air flow can be adjusted to six levels.

- Press the ^ switch to increase the air flow; press the v switch to reduce the air flow.
- During auto operation, the air flow is automatically adjusted.

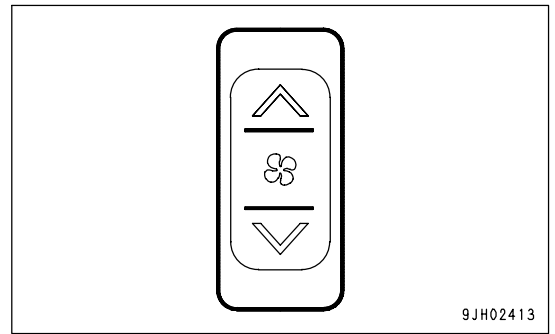

Monitor display and air flow

A: Liquid crystal display

B: Air flow

a: Air flow "low"

b: Air flow "medium 1"

c: Air flow "medium 2"

d: Air flow "medium 3"

e: Air flow "medium 4"


f: Air flow "high"

A	B
	a
	b
	c
	d
	e
	f

Temperature Control Switch

Switch (3) is used to control temperature inside the cab. The temperature can be set between 18°C (64.4°F) and 32°C (89.6°F).

- Press the ^ switch to raise the set temperature; press the v switch to lower the set temperature.
- The temperature is generally set at 25°C (77°F).
- The temperature can be set in stages of 0.5°C (0.9°F).

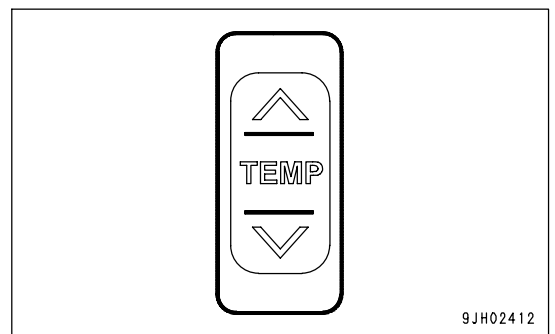


<Monitor display and the function>

Monitor display °C	Set temperature
18.0	Max. cooling
18.5 to 31.5	Adjusts temperature inside cab to set temperature
32.0	Max. heating


Vent Selector Switch

Switch (4) is used to select the vents.

- When switch (4) is pressed, the display on monitor display (7) switches and air blows out from the vents displayed.
- During automatic operation, the vents are automatically selected.

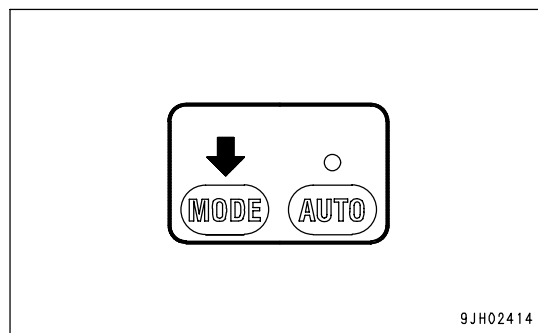

- (A): Rear vent (4 places)
- (B1): Face vent (1 place)
- (C): Foot vent (1 place)
- (D): Front window glass vent (2 place)
- (B2): Front window glass vent (1 place)

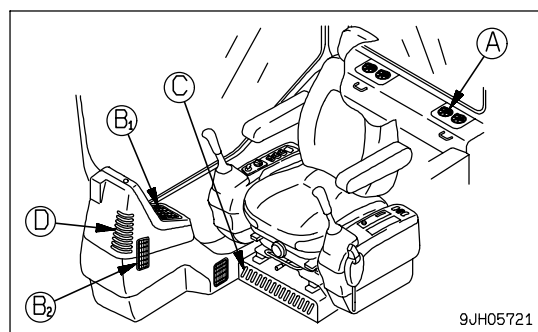


Liquid crystal display	Vent mode	Vent				Remarks
		Ⓐ	Ⓑ	Ⓒ	Ⓓ	
	Front vent		○			Cannot be selected for automatic operation
	Front and rear vents	○	○			—
	Front, rear and foot vents	○	○	○		—
	Foot vent			○		—
	Foot vent Defroster vent			○	○	Cannot be selected for automatic operation
	Defroster vent				○	Cannot be selected for automatic operation

Note 1: Air blows out from vents marked ○

Auto Switch

With switch (5), the air flow, vents, and air source (RECIRC/FRESH) are automatically selected according to the set temperature.

- When auto switch (5) is pressed, the lamp above the auto switch lights up.
- Press switch (5), then use temperature control switch (3) to set the temperature, and run the air conditioner under automatic control.
- When the control is switched from automatic operation to manual operation, it is possible to operate the to change air flow, vents, and air source (RECIRC/FRESH). When manual control is used, lamp above the auto switch goes out.

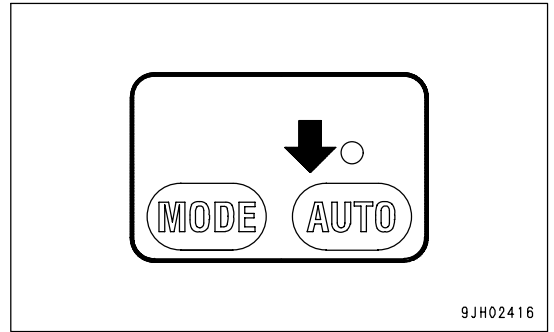


REMARK

When Auto Mode is selected, if the set temperature is set to 18.0 °C (64.4 °F) or 32.0 °C (89.6 °F), the air flow is always set to High, but this is not a problem.

FRESH/RECIRC Selector Switch

Switch (6) is used to switch the air source between recirculation of the air inside the cab and intake of fresh air from the outside.

- When switch (6) is pressed, the lamp above the selector switch lights up to show that air is being blown out.
- During automatic operation, the selection of inside air (RECIRC) and outside air (FRESH) is performed automatically.

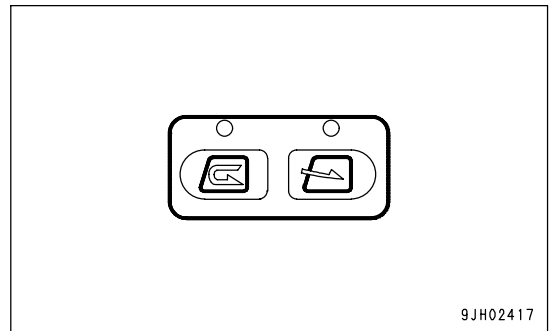


RECIRC	Outside air is shut off and only air inside the cab is circulated. Use this setting to perform rapid cooling of the cab or when outside air is dirty.
FRESH	Outside air is taken into the cab. Use this setting to take in fresh air when performing demisting.

Display Monitor

Monitor (7) displays the status of temperature setting (a), air flow (b), and vents (c).

- When OFF switch (1) is pressed, the display of temperature setting (a) and air flow (b) goes out, and operation stops.

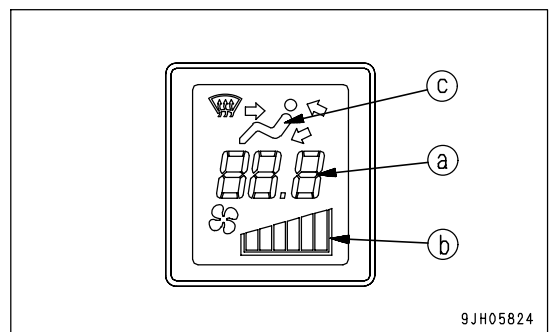


Air Conditioner Switch

Switch (8) is used to turn the air conditioner (cooling, dehumidifying, heating) ON or OFF.

- When the fan is actuated (display (b) is shown) and air conditioner switch (8) is pressed, the air conditioner is switched ON, lamp above the air conditioner switch lights up, and the air conditioner starts.


When switch (8) is pressed again, the air conditioner is switched OFF, lamp above the air conditioner switch goes out, and the air conditioner stops.

- Air conditioner cannot be operated while the fan is off.

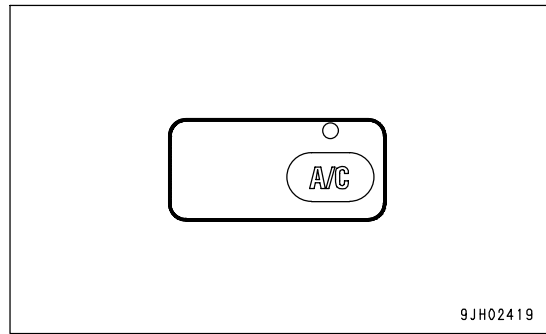

Sunlight Sensor

This sensor (9) automatically adjusts the flow of air from the vents to match the strength of the sun's rays. In addition, it automatically detects changes in the temperature inside the cab caused by changes in the strength of the sun's rays beforehand and automatically adjusts the temperature.


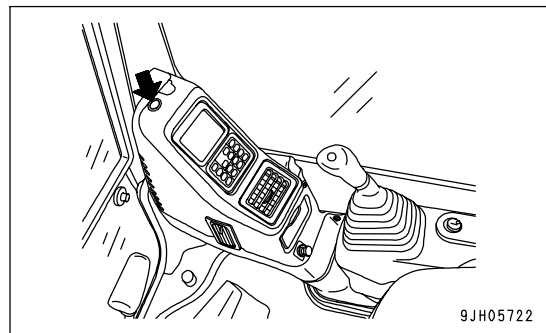


Method of Operation


The air conditioner can be operated automatically or manually. Select the method of operation as desired.

Automatic Operation

1. Turn auto switch (5) ON.
 - The lamp above switch (5) lights up.
 - The set temperature (a) and air flow (b) are displayed on the monitor.

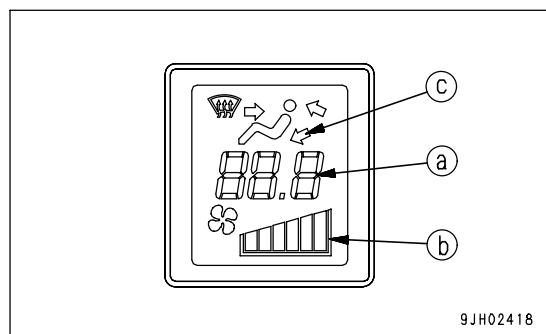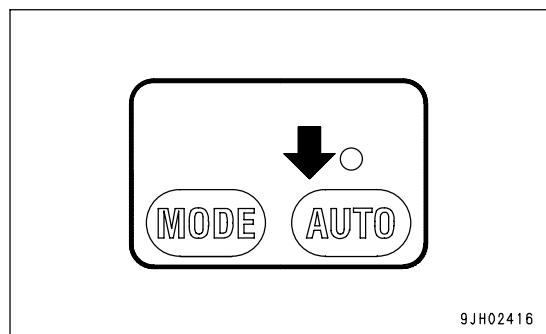


2. Use temperature set switch (3) to set to the desired temperature. The air flow, combination of vents, and selection of fresh or recirculated air is automatically selected according to the set temperature, and the air conditioner is operated automatically to provide the set temperature.

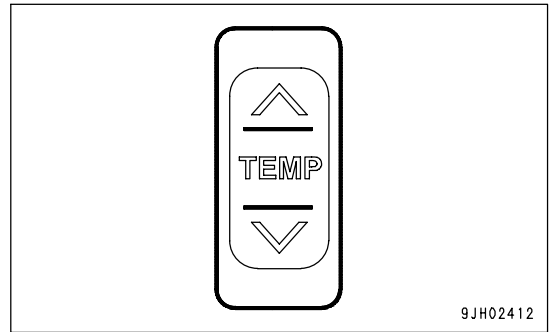

REMARK

When vent display monitor (c) displays (d) or (e), and engine coolant temperature is low, the air flow is automatically limited to prevent cold air from blowing out.

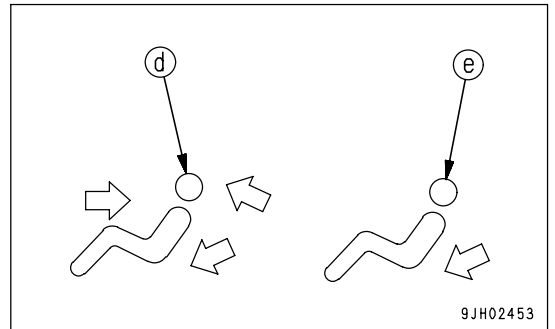



Stopping Automatic Operation

Press OFF switch (1). The displays for temperature setting (a) and air flow (b) on monitor (7), and lamps above auto switch (5) and air conditioner switch (8) go out, the operation stops.




Manual Operation


1. Press fan switch (2) and adjust the air flow. When doing this, check that temperature setting (a) and air flow (b) are displayed on monitor (7).

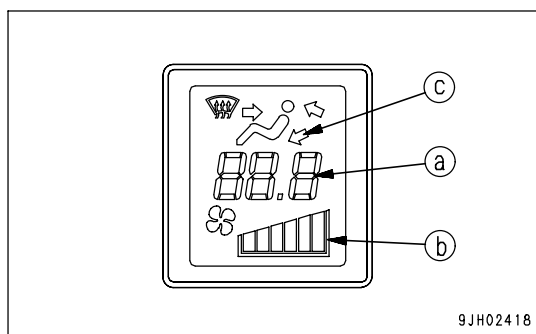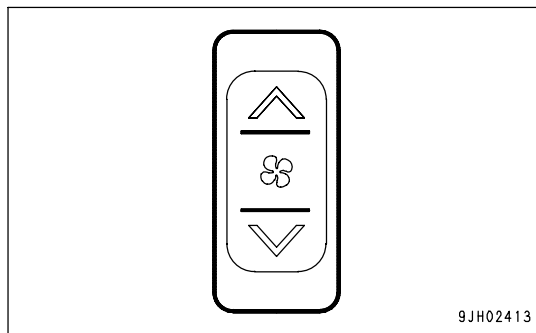



2. Turn air conditioner switch (8) ON. Check that the lamp above air conditioner switch lights up.

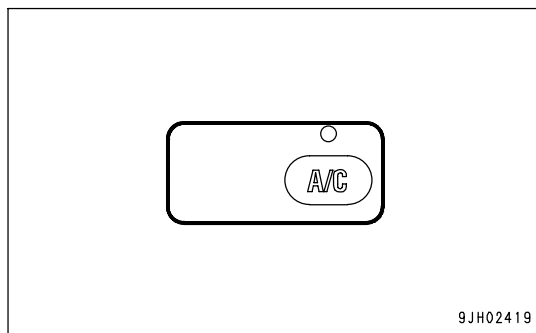


3. Press temperature setting switch (3) and adjust temperature inside the cab.

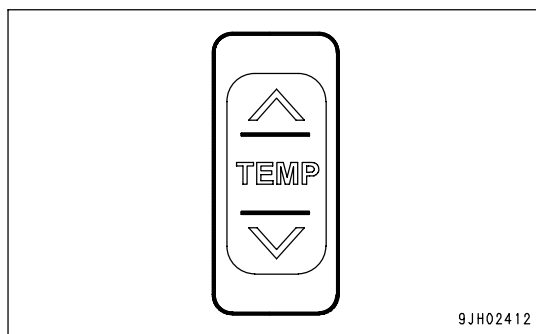

4. Press vent selector switch (4) and select the desired vents.
 When this is done, the display for vent (c) of the display monitor changes according to the selection.

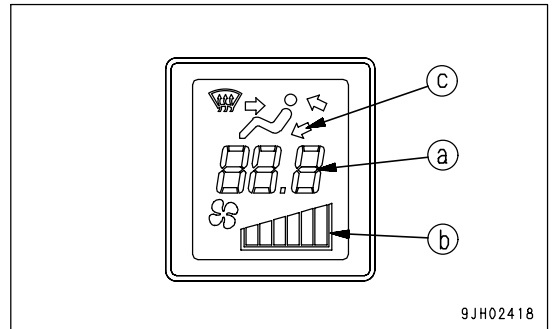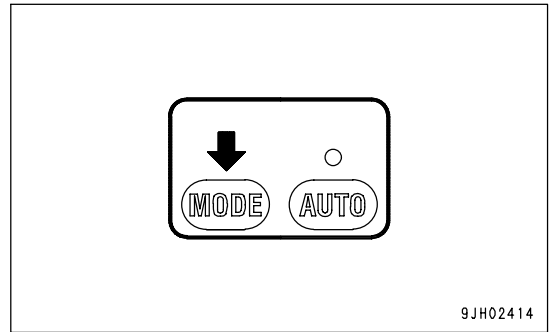


5. Press RECIRC/FRESH selector switch (6) and select recirculation of the air inside the cab (RECIRC) or intake of fresh air from outside (FRESH).

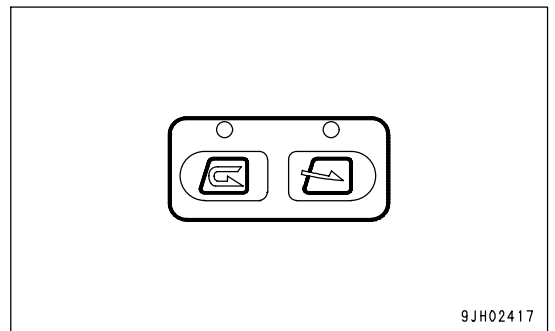

Stopping Manual Operation


Press OFF switch (1). The displays for temperature setting (a) and air flow (b) on monitor (7), and lamps above auto switch (5) and air conditioner switch (8) go out, the operation stops.

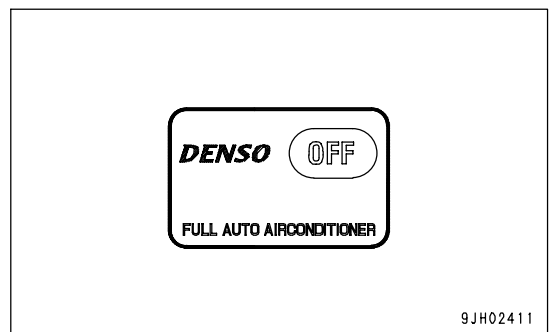


Operation with Cold Air to Face and Warm Air to Feet

To operate with cold air blowing to the face and warm air blowing to the feet, set as follows.

1. Press fan switch (2) and adjust the air flow. When doing this, check that temperature setting (a) and air flow (b) are displayed on monitor (7).

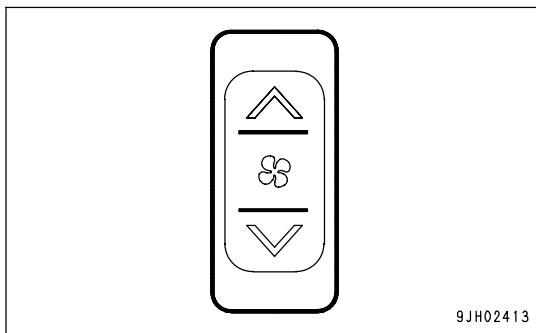


9JH02413

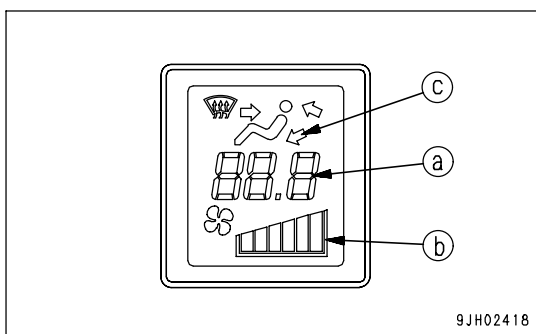


9JH02418

2. Press vent selector switch (4) and set the vent display on the display monitor to the display shown in the diagram on the right.

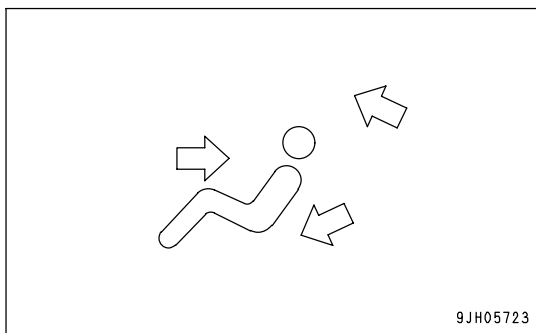


9JH05723

3. Turn air conditioner switch (8) ON. Check that the lamp above air conditioner switch lights up.

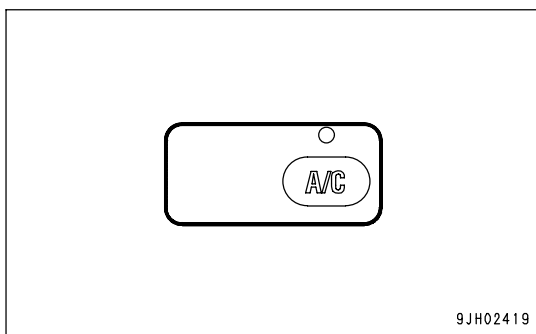



9JH02419

4. Adjust fan switch (2), temperature setting switch (3) and RECIRC/FRESH selector switch (6) to the desired positions.


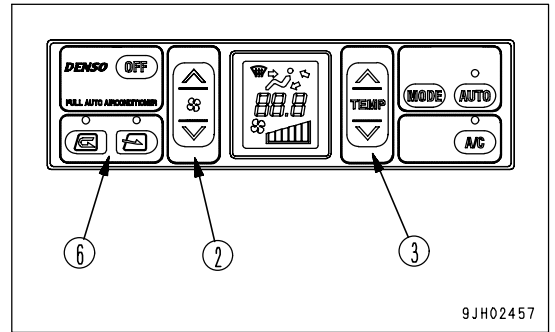


Defroster Operation


1. Press fan switch (2) and adjust the air flow. When doing this, check that temperature setting (a) and air flow (b) are displayed on monitor (7).

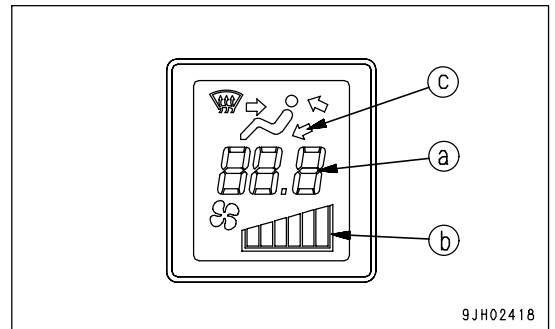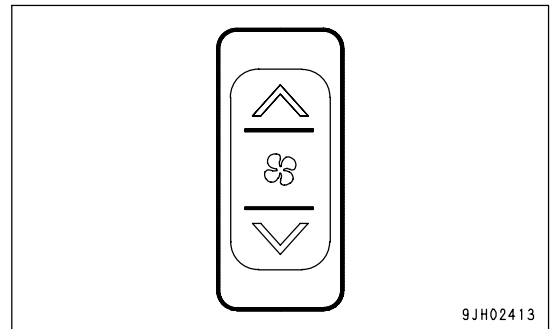


2. Press vent selector switch (4) and set vent display on the display monitor to (f) or (g) as shown in diagram on the right.

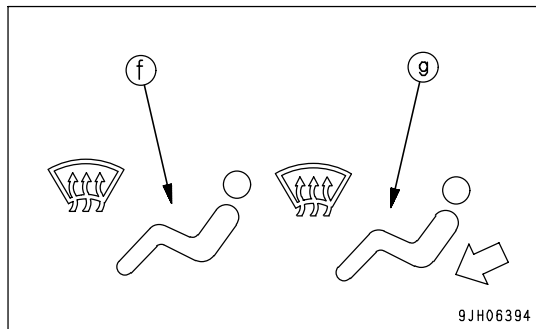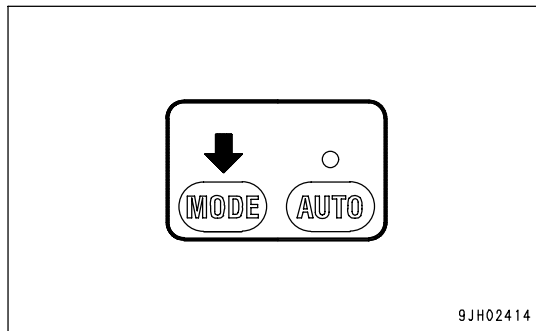


3. Press RECIRC/FRESH selector switch (6) and set it to take in fresh air.

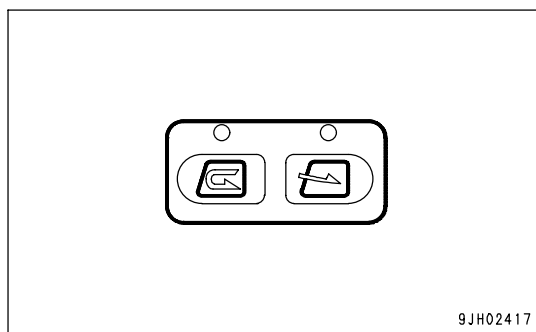


4. Press temperature setting switch (3) and set temperature on the display (7) monitor to maximum heating.

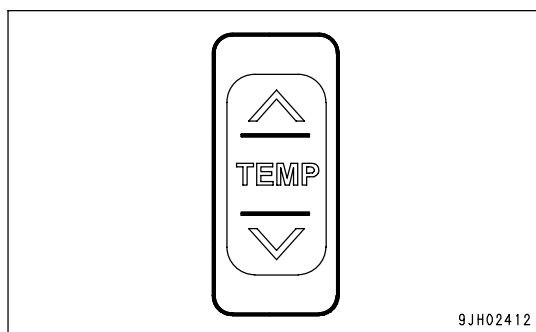

5. Adjust vents (A), (B1), and (B2) so that the air blows onto the window glass.
(Vents (C) and (D) are fixed and cannot be adjusted.)

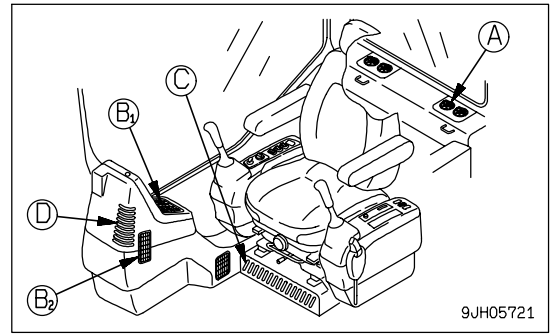

When operating in the rainy season or when it is desired to remove the mist from the window glass or to dehumidify the air, turn air conditioner switch (8) ON.

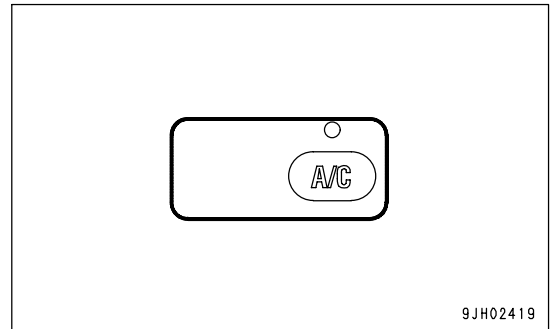

Use Air Conditioner with Care

NOTICE

- When running the air conditioner, always start with the engine running at low speed. Never start the air conditioner when the engine is running at high speed. It will cause failure of the air conditioner.
- If water gets into the control panel or sunlight sensor, it may lead to unexpected failure, be careful not to let water get on these parts. In addition, never bring any flame near these parts.
- For the auto function of the air conditioner to work properly, always keep the sunlight sensor clean and do not leave anything around the sunlight sensor that may interfere with its sensor function.

Ventilation

- When running the air conditioner for a long time, turn the lever to the FRESH position once an hour to carry out ventilation and cooling.
- If you smoke when the air conditioner is on, the smoke may start to hurt your eyes, so open the window and turn the lever to FRESH for a while to remove the smoke while continuing the cooling.

Temperature Control

When the cooler is on, set the temperature so that it feels slightly cool when entering the cab (5 or 6 °C (9 or 10.8 °F) lower than the outside temperature). This temperature difference is considered to be the most suitable for your health, so always be careful to adjust the temperature properly.

Air Conditioner Maintenance


When carrying out inspection of a machine equipped with an air conditioner, see the "CHECK AND MAINTENANCE AIR CONDITIONER (PAGE 4-35), CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST (PAGE 4-49), CLEAN FRESH/RECIRC AIR FILTERS OF AIR CONDITIONER (ONLY FOR MACHINES EQUIPPED WITH AIR CONDITIONER) (PAGE 4-54)" and carry out inspection according to the table.

Other Functions


Self-diagnostic Function

It is possible to perform troubleshooting of various sensors and equipment used on the air conditioner.


1. Turn the starting switch key to the ON (B) position.

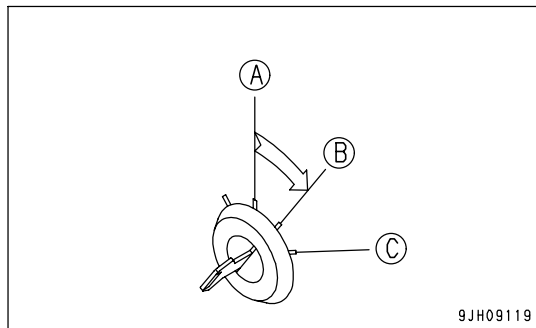

2. Press OFF switch (1). The temperature setting and air flow display on the liquid crystal display portion go out and operation stops.

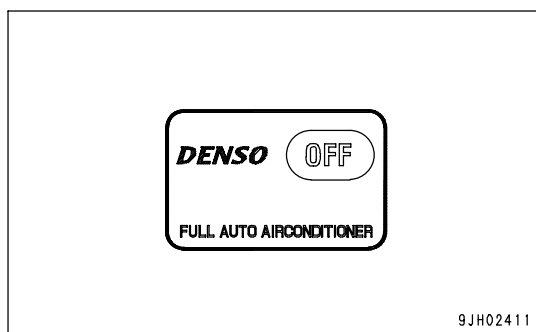

3. If the "∨" and "∧" parts of temperature setting switch (3) are kept pressed at the same time for at least 3 seconds, the troubleshooting mode is displayed on the liquid crystal display portion.

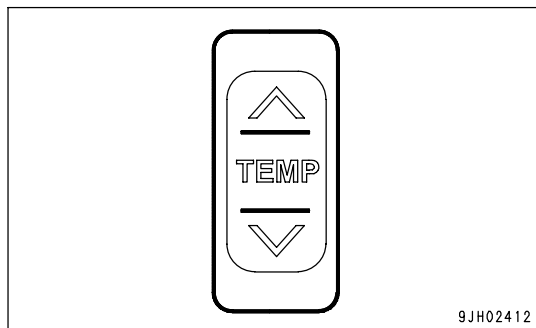

<Monitor display and failure mode>

Display	Failure mode
E--	No failure
E11	Disconnection in RECIRC sensor
E12	Short circuit in RECIRC sensor
E15	Disconnection in water temperature sensor
E16	Short circuit in water temperature sensor
E18	Short circuit in sunlight sensor
E43	Abnormality in vent damper
E44	Abnormality in air mix damper
E45	Abnormality in RECIRC/FRESH damper


- When more than one failure is detected, press the "∨" or "∧" portion of temperature setting switch (3) to display the failures in turn.
- After completing the troubleshooting, press OFF switch (1) again to return to the normal display.

If any problem is detected by the self-diagnostic function, contact your Komatsu distributor perform inspection and repair.

Function to Switch Set Temperature Display Between Fahrenheit and Celsius

It is possible to switch the set temperature display between °F and °C.


If the "v" and "^" portions of temperature setting switch (3) are pressed at the same time for more than 5 seconds while the fan is running, the temperature display will switch between °F and °C. (Note that the unit is not displayed.)

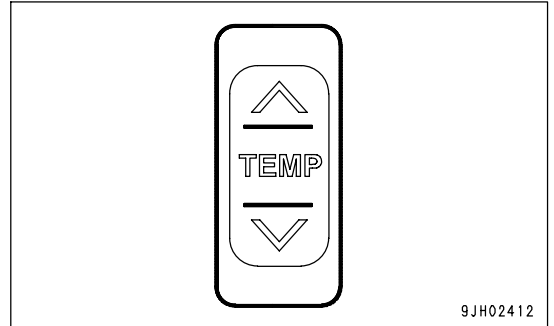

	Liquid crystal display range
°C	18.0 to 32.0
°F	63 to 91

RADIO

Control Panel

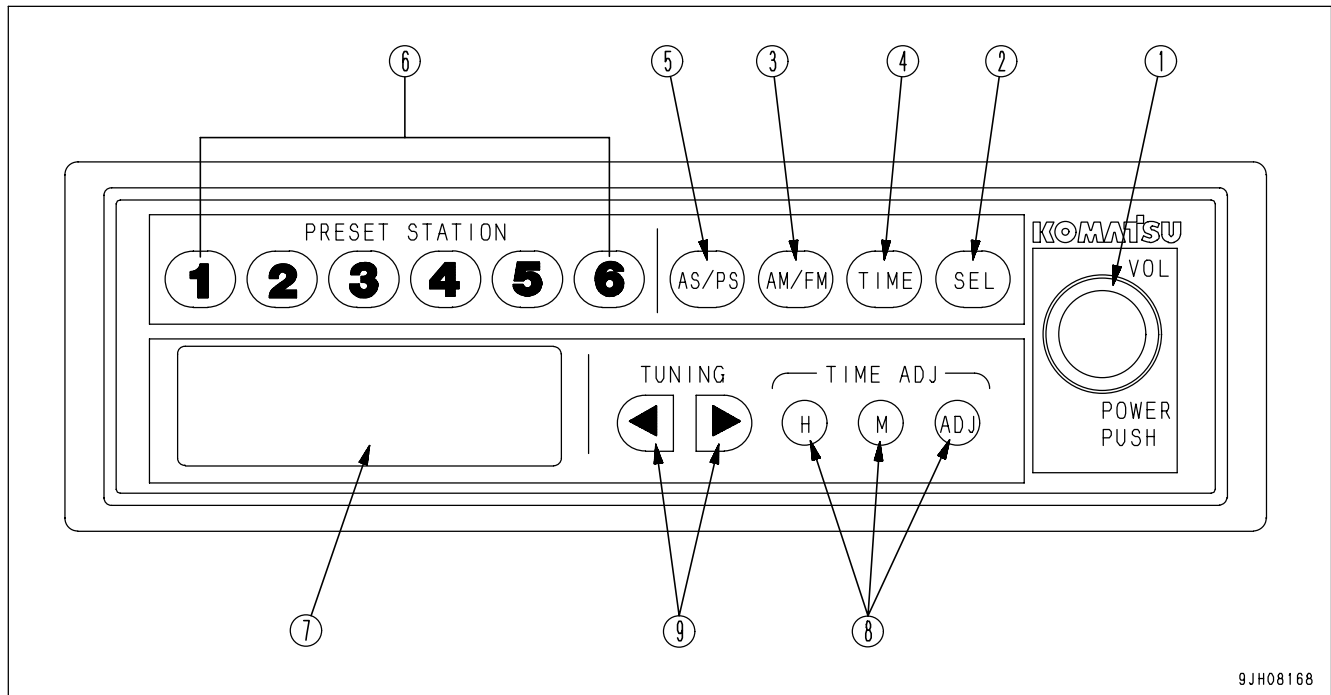

9JH08168

- | | |
|---|--|
| (1) Power switch, Volume control knob, Balance control knob | (5) AS/PS button |
| (2) SEL button | (6) Preset station buttons (1,2,3,4,5,6) |
| (3) FM/AM selection button | (7) Display |
| (4) Display selection button | (8) Time reset button |
| | (9) Tuning button |

Power switch, Volume control knob, Balance control knob

Press this knob (1) to turn the power for the radio on. The frequency is displayed on display (7). Press the knob again to turn the power off.

Turn the knob clockwise to increase the volume; press counterclockwise to reduce the volume. The range for the volume is VOL 0 - VOL 40.

SEL button

Each time this button (2) is pressed, the mode changes as follows: VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance). The mode is displayed on display (7). For details of each mode, see "Method of Operating Mode (PAGE 3-71)".

FM/AM Selection Button (AM/FM)

Press this button (3) to select the desired band.

Each time the button is pressed, the band changes FM → AM → FM . . .

Display Selection Button (TIME)

On this machine, priority is given to the frequency display. When the frequency is being displayed, press button (4) and the display will show the present time for 5 seconds. After 5 seconds pass, the display returns automatically to the frequency display. If any button other than TIME ADJ (H, M, ADJ) is pressed within 5 seconds, the display returns to the frequency display. For details of the method of adjusting the time, see "Setting Correct Time (PAGE 3-71)".

AS/PS button

This button (5) actuates the auto store and preset scan functions.

- Auto store
If this button is kept pressed for at least 2 seconds during radio reception, it will automatically search for six available AM and FM stations each, starting with the lowest frequency and going up to the highest frequency. These frequencies can then be saved in the preset memory.
- Preset scan
If this button is pressed within 2 seconds, it is possible to select one of the already preset stations. Wait for 6 sec. after pressing the button and then press the button again to select the next preset station. If it is impossible to receive the preset frequency, the selection advances after 1 second to the next preset station.

Preset Station Buttons (1, 2, 3, 4, 5, 6)

If this button (6) has been used to decide which stations to preset, it is possible to select the desired station at a touch. It is possible to preset 6 stations each for both AM and FM.

For details of the method of presetting the stations, see "Method of Setting with Preset Button (PAGE 3-70)".

REMARK

The preset button can be used to save the frequency manually. To save the frequency automatically, use the Auto store button.

Display

This display (7) shows the reception band, frequency, preset No., and time.

Time Reset Button

Use this button (8) when adjusting the time. For details of the method of adjusting the time, see "Setting Correct Time (PAGE 3-71)".

H: Hour

M: Minute

ADJ: Sets to 00 minutes

Tuning Button (TUNING)

Use this button (9) to change the frequency.


For further details, see "Method of Tuning (PAGE 3-70)"

Controls of Radio

Method of Setting with Preset Button

1. Press power switch (1) and display the frequency on display (7).
2. Use tuning button (9) to set to the desired frequency. There are two methods for tuning: auto tuning and manual tuning.
3. With the display (7) showing the desired frequency, keep the desired Preset button No pressed for at least 1.5 seconds. The reception sound will disappear, but when the presetting operation (saving to memory) is completed, the sound will appear again and the Preset No and frequency will be shown on the display to show that the presetting operation has been completed.

After completing the presetting, press Preset button (6) and release it within approx. 1.5 seconds. This will make it possible to receive the channel preset to that button. One channel each for AM and FM can be preset to each Preset button.

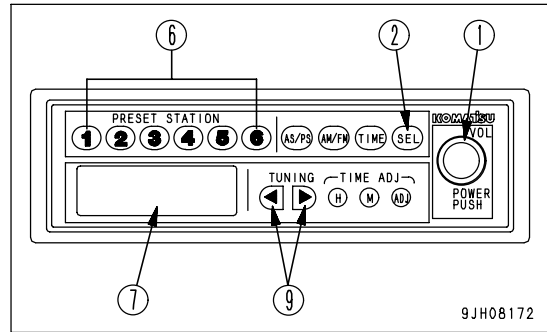

REMARK

It is also possible to save to the Preset button by using the auto store button.

Method of Tuning

1. Press power switch (1) and display the frequency on display (7).
2. Use tuning button (9) to set to the desired frequency. There are two methods for tuning: auto tuning and manual tuning.

- Manual tuning

Press tuning button (9) until the frequency is displayed on display (7).

< button: Frequency moves down

> button: Frequency moves up

When the frequency reaches the top or bottom frequency, it automatically continues as follows: Top → Bottom, or Bottom → Top.

- Auto tuning

Press tuning button (9) for at least 3 seconds. When a station is picked up, the tuning automatically stops. To search for the next station, press the tuning button again for at least 3 seconds.

< button: Frequency moves down

> button: Frequency moves up

If this button is pressed during auto tuning, the auto tuning will be cancelled and the setting will return to the frequency in use before the button was pressed.

Method of Operating Mode

- (BAS) Bass adjustment: When button (2) is pressed, BAS is displayed on display (7). If knob (1) is turned clockwise within 5 seconds, the bass sound is emphasized. If the knob is turned counterclockwise, the bass sound is reduced.
- (TRE) Treble adjustment: When button (2) pressed, TRE is displayed on display (7). If knob (1) is turned clockwise within 5 seconds, the treble sound is emphasized. If the knob is turned counterclockwise, the treble sound is reduced.
- (BAL) Balance adjustment: When button (2) is pressed, BAL is displayed on display (7). If knob (1) is turned clockwise within 5 seconds, the sound from the right speaker is increased. If the knob is turned counterclockwise, the sound from the left speaker is increased. When it is set to BAL 0, the sound from the left and right speakers is balanced.

REMARK

With each mode, the display is returned automatically to its original setting after 5 seconds.

Setting Correct Time

1. Press display selector button (4) to display the time.

After 5 seconds, the display will return to the frequency display and the time cannot be corrected. If this happens, press display selector button (4) again.

2. Press time adjustment button (8) to select Hour or Minute.

H button: Adjusts the hour (each time the button is pressed, the time advances by one hour)


M button: Adjusts the minute (each time the button is pressed, the time advances by one minute)

- If the H or M button is kept pressed, the time will advance continuously until the button is released.

ADJ button: When the ADJ button is pressed, the time is reset as follows.

- When display is 00 - 05 minutes, time is returned to 00 min. 00 sec. (No change in hour)
(10:05 → 10:00)
- When display is 55 - 59 minutes, time is advanced to 00 min. 00 sec. (Hour advances)
(10:59 → 11:00)
- When display is 06 - 54 minutes, time cannot be reset.
(Time stays same)
(10:26 → 10:26)

Use the H, M, and ADJ buttons to set to the correct time.

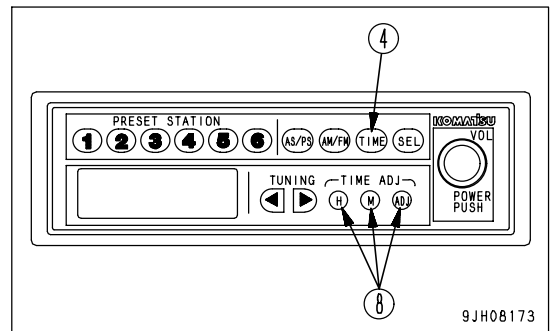


9JH08173

Antenna

Before transporting the machine putting it inside a building, stored the antenna to prevent any interference. Stow the antenna as follows.

1. Loosen antenna mounting bolt (1) and store the antenna at position (A).
2. Tighten bolt(1).

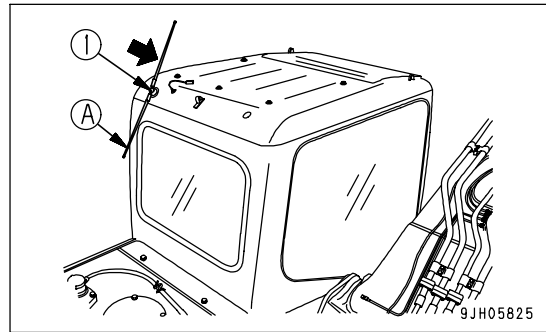

Use Radio with Care

- To ensure safety, always keep the sound to a level where it is possible to hear outside sounds during operation.
- If water gets into the speaker case or radio, it may lead to an unexpected failure, so be careful not to get water on the equipment.
- Do not wipe the scales or buttons with solvent such as benzene or thinner. Wipe with a dry soft cloth. If the dirt cannot be removed easily, soak the cloth with alcohol.
- When the battery is replaced, the settings for the preset buttons are all cleared, so set them again.


AUXILIARY ELECTRIC POWER

24V Power Source

NOTICE

Do not use this as the power supply for 12V equipment. It will cause failure of the equipment.


Pull out the connector plug for taking out electric power from the rear side of the panel. Maximum usable electric power is 85 W (24 V x 3.5 A).

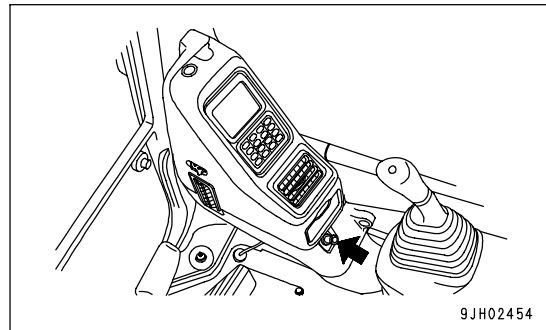

12V Power Source

(If equipped)

This power source can be used up to a capacity of 60W (12V x 5A).

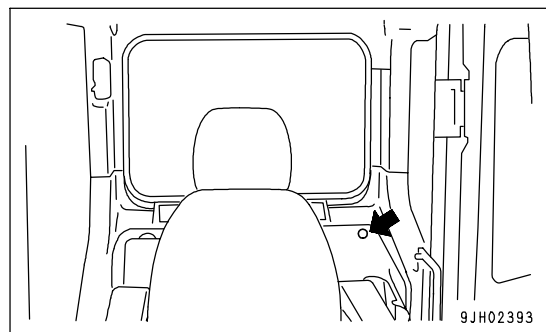

FUSE


NOTICE

Before replacing a fuse, be sure to turn off the starting switch.

The fuses protect the electrical equipment and wiring from burning out.


If the fuse becomes corroded, or white powder can be seen, or the fuse is loose in the fuse holder, replace the fuse.

Replace the fuse with another of the same capacity.

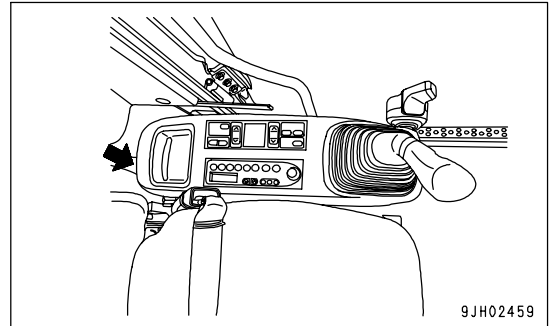

Fuse Capacities and Circuit Names

NO.	Fuse Capacity	Circuit Name
(1)	10A	Redundancy, Swing holding brake solenoid
(2)	10A	Solenoid valve
(3)	10A	PPC lock solenoid Starting motor cut-out relay
(4)	20A	Window washer, Cigarette lighter
(5)	10A	Horn, flashlight (OPT)
(6)	10A	Ribbon heater relay
(7)	10A	Revolving warning lamp (OPT)
(8)	10A	Spare fuse
(9)	10A	Radio
(10)	20A	Monitors, Buzzer
(11)	25A	Air conditioner unit
(12)	20A	Spare fuse
(13)	20A	Spare fuse
(14)	10A	OPT power supply (1)
(15)	10A	OPT power supply (2) 12V power supply (OPT)
(16)	10A	Radio backup, Room lamp
(17)	10A	Step light (OPT)
(18)	10A	Spare fuse
(19)	10A	Spare fuse
(20)	5A	ACC (ENGINE CON)

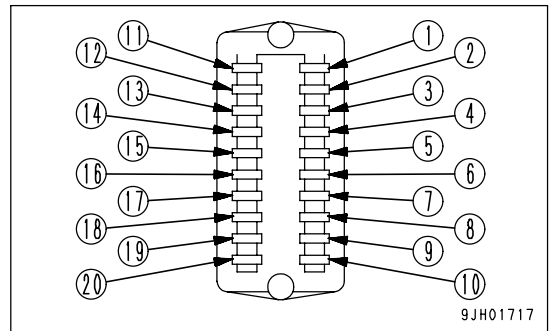

CIRCUIT BREAKER



NOTICE

When resetting the circuit breaker, always turn the starting switch OFF first.

- If the starting switch does not work, even when the starting switch is turned on, open the circuit breaker box inside the grease pump box located at the front right of machine, and perform inspection.
- If an excess current is generated, the circuit breaker cuts off electrical current to protect electrical components and wiring from damage. To return the circuit electrical current to normal after it has been cut off, push in the reset button.
If the electric circuit is working normally, the reset button remains in. If the reset button pops out again immediately after it is pushed in, it is necessary to check the electric circuit.

REMARK

- The circuit breaker is a circuit protection device installed to circuits where large current flows. It protects the electrical components and wiring from damage caused by an abnormal current in the same way as a normal fuse. After repairing and restoring the location of the abnormality, there is no need to replace the breaker. It can be used again.
- If the starting motor does not work even when the starting switch is turned to the ON position, breaker (6) has probably cut off the circuit, so check and restore circuit breaker (6).
- If the electrical equipment does not work even when the fuse is replaced, breaker (1) or (9) has probably cut off the circuit, so check and restore circuit breaker (1) or (9).

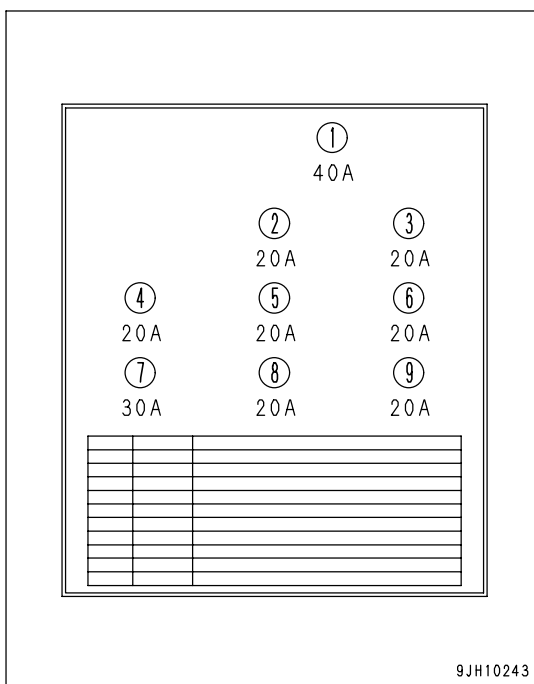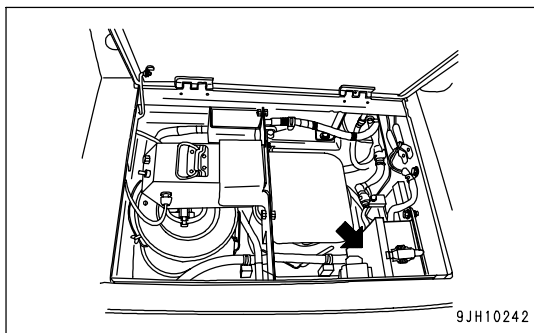

No.	Fuse Capacity	Circuit Name
1	40A	Fuse 1 to 15
2	20A	Work equipment headlamp Right side headlamp
3	20A	Power supply grease pump
4	20A	Pump controller (VIS)
5	20A	Cab upper headlamp
6	20A	Starting switch Pump controller (VB)
7	30A	Engine controller (Power supply)
8	20A	Monitor,buzzer
9	20A	Fuse 16 to 20


CONTROLLER

Controller installed.


NOTICE

- Be careful not to get water, mud, or juice on the controller. This will cause failure.
- The engine controller has been given moisture prevention treatment, so there is no problem if rain gets on it, but do not spray it with water when washing the machine.
- If any abnormality occurs in the controller, do not disassemble it yourself. Contact your Komatsu distributor for repairs.

- Engine controller
Open the engine hood. It is under the engine oil filter.

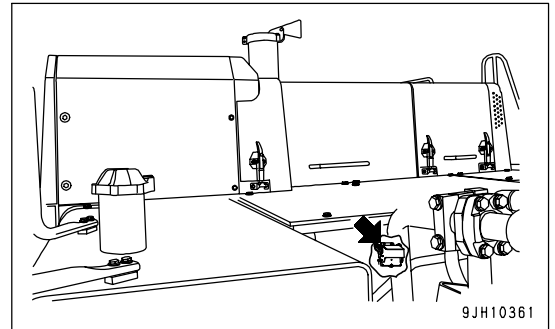


- Pump controller
This is on the right side at the rear of the operator's seat.

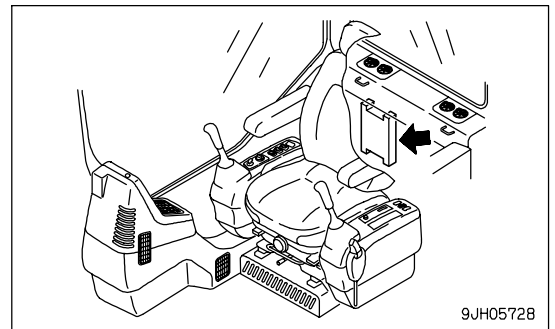

TOOL BOX


(Cloth bag)

This is inside the toolbox at the rear of the cab.

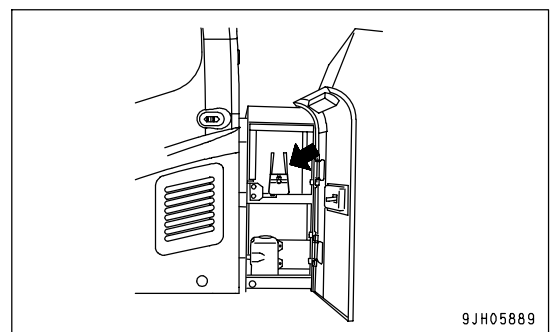




GREASE PUMP

This is stored inside the grease pump box on the right side of the chassis.

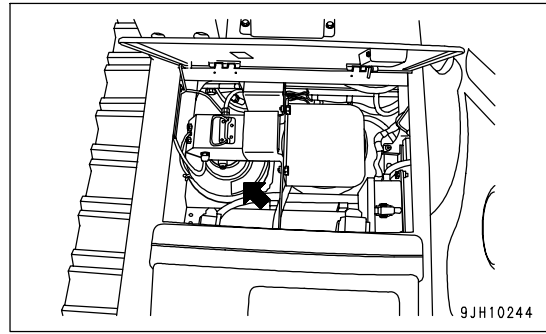

Method of Use

1. When the engine is started, and the power switch (1) and remote switch (2) are turned to the ON position, pump (3) is actuated and grease is sent under pressure to grease gun (4).
2. When the lever of grease gun (4) is pulled, it is set to the greasing condition and grease is discharged.

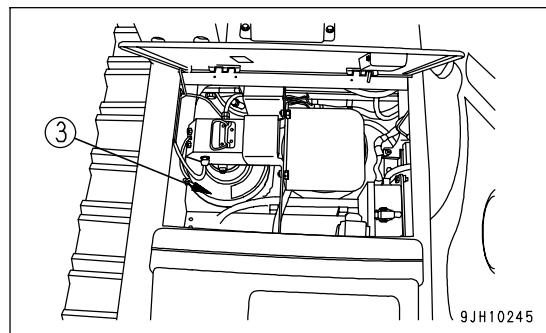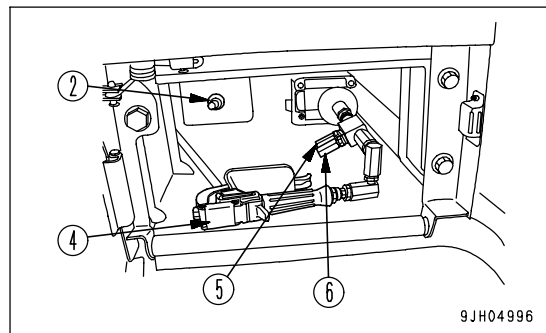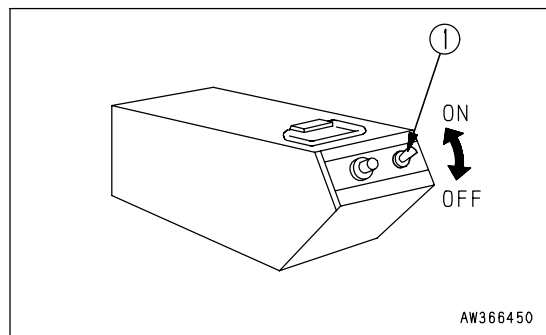

- The greasing condition can be checked with pressure gauges (5) and (6).
- (5): Green color (low pressure)
- (6): Red color (high pressure)


Greasing condition	Pressure gauge	
	Green color (low pressure)	Red color (high pressure)
When grease gun is empty		
Greasing in progress		
When tip is clogged		

- When the lever of grease gun (4) is released, the supply of grease stops.
- After using, turn only remote switch (2) OFF.


Precautions when Using

NOTICE


When not using the grease pump, always turn off remote switch (2) to prevent pressure from building up inside grease gun (1).

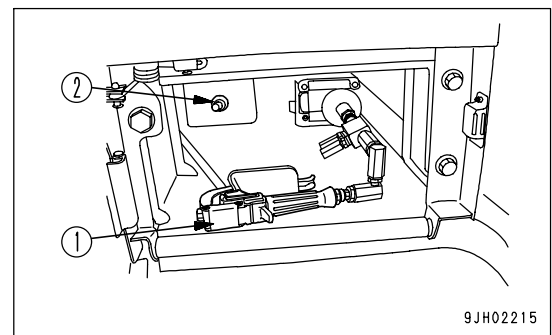

- Set so the nipple and nozzle at the tip of grease gun are perpendicular.


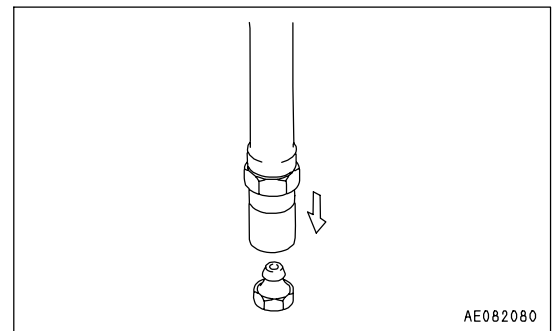


- When removing the nozzle at tip of the grease gun from the grease fitting, carefully angle the tip of nozzle slightly and remove it.
- When there is only a small amount of grease left in the grease can, the pump will not pump out grease, so move grease to the center or fill the can with new grease.

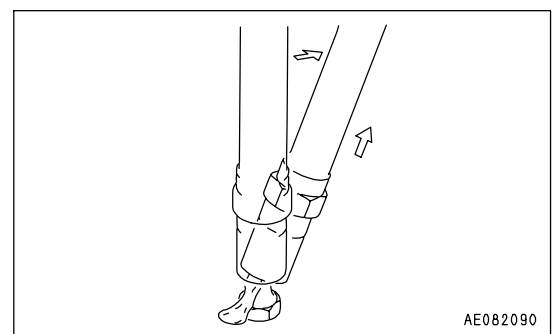


Supplying Grease

1. Remove bolts (2) at 2 places, then remove grease pump holder bracket (1).
2. Remove wing bolts (4) of grease can (3) at 3 places, then remove cover (5) together with the grease pump.
3. Remove follow plate (6) inside the grease can.
4. Fill grease can (3) with fresh grease, place follow plate (6) on top of the grease surface flatly and press it down with fingers until grease oozes out from the packing portion in the middle of the plate.
- When putting follow plate on top of the grease, first fill the hollow in the center of the follow plate with grease to enable the operation to be carried out smoothly.
5. Insert the grease pump into the packing portion at the center of follow plate (6), set cover (5) on grease can (3), then tighten 3 wing bolts (4) uniformly to hold in position.
6. After fitting grease pump holder bracket (1) into the head of the grease pump, install with 2 bolts (2).

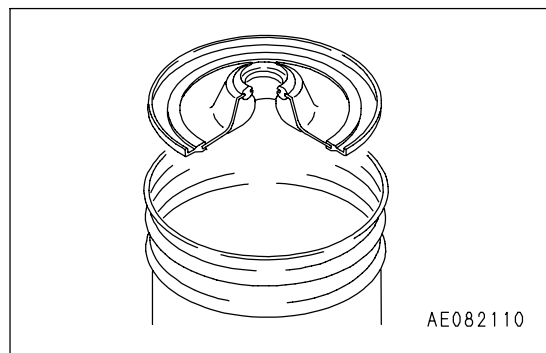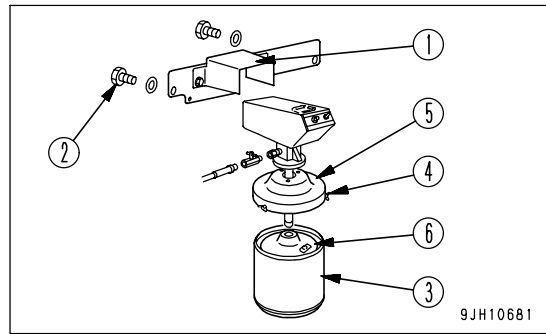

- The pump will operate for a short time and then stop, but the first grease includes air inside the pump, so it is cloudy white and not suitable for use.

7. Loosen check valve (7), and pump out all the grease which has air in it from hole (a) at the bottom of check valve (7).
8. After bleeding the air, close check valve (7) securely.
9. After bleeding air from inside the pump, pull lever of the grease gun to completely discharge grease mixed with air from inside the hose and grease gun.

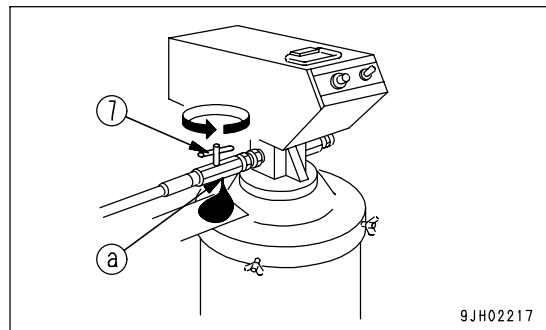


- When filling with grease, be extremely careful not to let sand or dirt stick to follow plate (6) or the suction portion of the grease pump.
- If there is ample grease, but the pump does not pump out any grease, follow plate (6) may not be correctly set in position, so correctly set it into position again.

The standard grease can contains 18 liters (4.76 US gal). If a 20-liter (5.28 US gal) can is used, there will be more grease left.

REMARK

Keep spare grease in grease can storage location in the grease pump chamber.

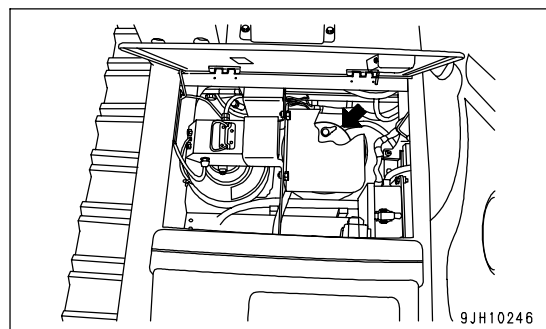

MACHINE OPERATIONS AND CONTROLS

BEFORE STARTING ENGINE

Walk-around Checks

Before starting the engine, walk around the machine and look at the underside of chassis for anything unusual like loose bolts and nuts, leakage of fuel, oil and coolant. Also check the condition of the work equipment and the hydraulic system.

Also check for loose wiring, play, and collection of dust at places that reach high temperature.



WARNING

Remove any flammable materials from around the battery, engine, muffler, turbocharger, or other high temperature engine parts. Leakage of fuel or oil will cause the machine to catch fire. Check carefully, be sure to repair any problem, or contact your Komatsu distributor.

Perform the following inspections and cleaning every day before starting engine for the day's work.

1. Check for damage, wear, play in work equipment, cylinders, linkage, hoses
Check for cracks, excessive wear, play in work equipment, cylinders, linkage, and hoses. If any problem is found, repair it.
2. Remove dirt and debris from around the engine, battery, and radiator.
Check for dirt accumulated around the engine and radiator. Also check for flammable material (dry leaves, twigs, etc.) around the battery, engine muffler, turbocharger, or other high temperature engine parts. If any dirt or flammable materials are found, remove them.
For the method of removing dirt from the radiator, see "CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTERCOOLER FINS, FUEL COOLER FINS, AND AIR CONDITIONER CONDENSER FINS (only machines equipped with air conditioner) (PAGE 4-53)".
3. Check for coolant and oil leakage around the engine
Check for oil leakage from the engine and coolant leaks from the cooling system. If any problem is found, repair it.
4. Check for oil leakage from hydraulic equipment, hydraulic tank, hoses, and joints
Check for oil leakage. If any problem is found, repair the area where oil is leaking.
5. Check for leakage from fuel line.
Check that there is no leakage of fuel or damage to the hoses and tubes. If any problem is found, carry out repairs.
6. Check the undercarriage (track, sprocket, idler, guard) for damage, wear, loose bolts, or leakage of oil from rollers.
If any problem is found, repair it.
7. Check for problems in handrails, steps, loose bolts.
If any problem is found, repair it. Tighten any loose bolts.

8. Check for problem in gauges, monitor.

Check for problem in the gauges and monitor in the operator's cab. If any problem is found, replace the parts. Clean off any dirt from the surface.

9. Clean, check rear view mirror

Check that there is no damage to the rear view mirror. If it is damaged repair. Clean the surface of the mirror and adjust the angle so that the area at the rear can be seen from the operator's seat.

10. Seat belt and mounting clamps

Check for damage or wear to the seat belt and mounting clamps. If there is any damage, replace with new parts.

Checks Before Starting

Always check the items in this section before starting the engine each day.



Check Coolant Level, Add Coolant



WARNING



- Do not open the radiator cap unless necessary. When checking the coolant, always wait for the engine to cool down and check the sub tank.
- Immediately after the engine is stopped, the coolant is at a high temperature and the radiator is under high internal pressure. If the cap is removed to check the coolant level in this condition, there is a hazard of burns. Wait for the temperature to go down, then turn the cap slowly to release the pressure and remove it carefully.

1. Open rear cover (1) at left side of the machine, and check coolant level is between the FULL and LOW lines in sub tank (2). If the level is low, open top cover (3) and add coolant through filler (4) of sub tank to the FULL line.
2. After adding coolant, tighten the cap securely.
3. If sub tank (2) is empty, check for leaks, then check coolant level in the radiator. If the coolant level is low, add coolant to the radiator, then add coolant to sub tank (2).

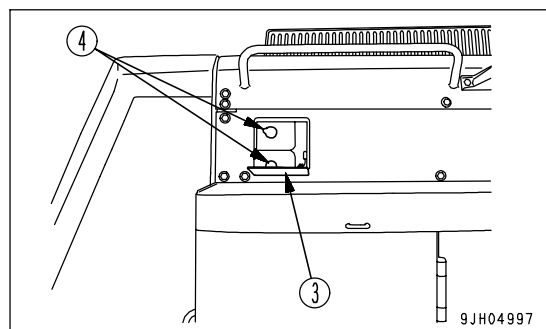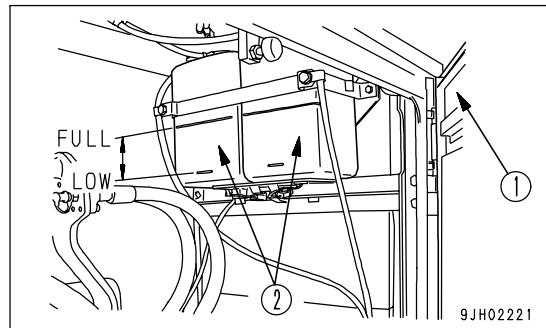

REMARK

- When adding coolant to the radiator, remove cover (5), slowly loosen radiator cap (6) to release the cooling system pressure. Then push cap (6) in and turn, then remove it.
- Check that the coolant level is above shaded portion in diagram on the right. If the level is low, add coolant through the filler.
- After adding coolant, install radiator cap (6).
- For details of the procedure in cold weather, see "COLD WEATHER OPERATION (PAGE 3-148)".

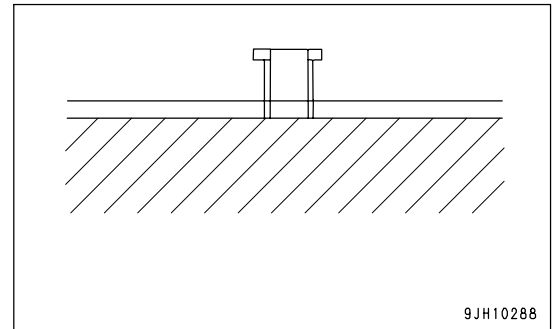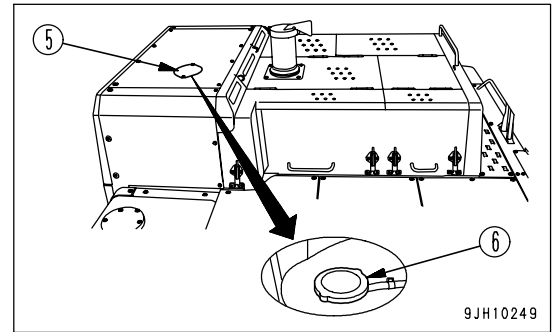


Check Oil Level in Engine Oil Pan, Add Oil


**WARNING**

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.


1. Open the front cover in the center of the engine hood.
2. Remove dipstick (G), and wipe the oil off with a cloth.
3. Fully insert dipstick (G) into filler pipe, then remove it.

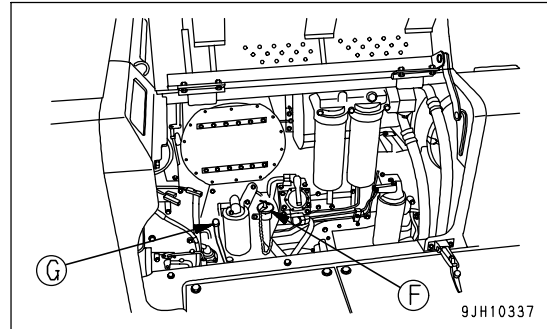

4. The oil level should be between the H and L marks on dipstick (G).
If the oil level is below the L mark, add oil through oil filler port (F).

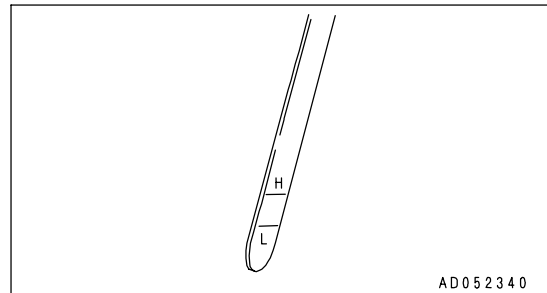


5. If the oil is above the H mark on the gauge, remove cover (1), drain the excess oil from drain valve (P) at the bottom of the engine oil pan, then check the oil level again.
6. If oil level is correct, securely tighten the oil filler cap and close the engine hood.

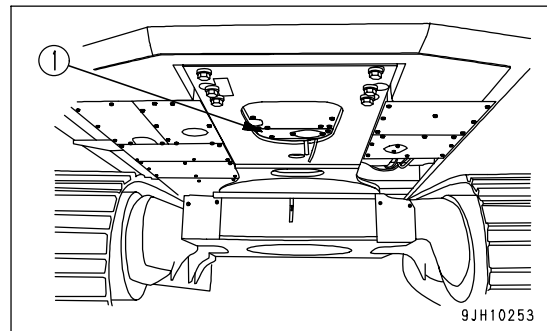**REMARK**

When checking the oil level after the engine has been operated, wait for at least 15 minutes after stopping the engine before checking.

If the machine is at an angle, make it horizontal before checking.


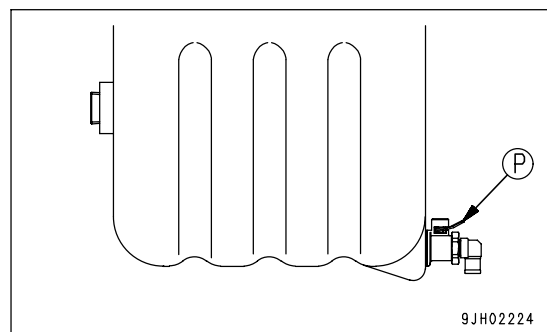


Check Fuel Level, Add Fuel

**WARNING**

When adding fuel, never let the fuel overflow. This may cause a fire. If any fuel is spilled, wipe it up completely. Never bring flames near fuel because it is highly flammable and dangerous.


1. Open fuel filler cap (F) of the fuel tank.
2. When fuel filler cap (F) is opened, float gauge (G) comes up in proportion to the remaining fuel level in the tank. Check that the fuel tank is full. Inspect the fuel level both visually and with float gauge (G).
3. If fuel is found to be low, unscrew fuel filler cap (F) on the fuel tank and add fuel through the filler port until float gauge (G) comes up to the highest point.
Fuel capacity: 980 liters (258.9 US gal)
Position of tip (a) of float gauge (G) when fuel tank is full:
Approx 50 mm (2 in)
4. After refilling with fuel, push float gauge (G) straight down with fuel filler cap (F) and then tighten the cap securely.

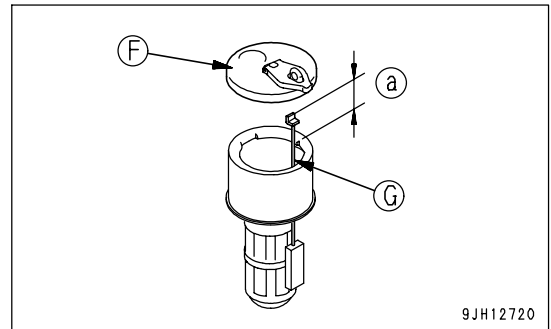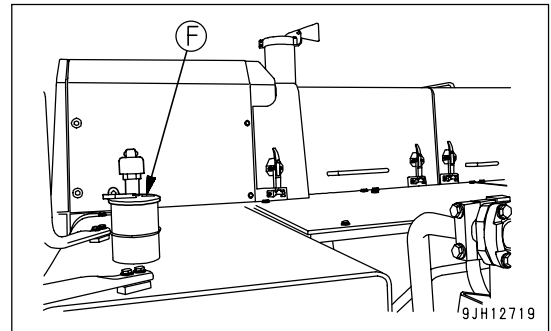**REMARK**

If the fuel tank breather gets clogged, pressure inside the fuel tank goes down and fuel may not be sent, so clean the breather element every now and then. If pressure inside the fuel tank remains low and fuel is not sent even though the breather has been cleaned, replace the breather element with a new one, seeing "REPLACE FUEL TANK BREATHER ELEMENT (PAGE 4-62)".

Drain Water And Sediment from Fuel Tank

1. Set a container under drain hose (1) to catch the drained fuel.
2. Pull out drain hose (1) from the clip on the chassis and point the hose tip to the container.
3. Open drain valve (2) and drain the sediment and water accumulated at the bottom together with the fuel.
4. Close drain valve (2) when only clean fuel begins to flow out, and put away drain hose (1) to the original place.

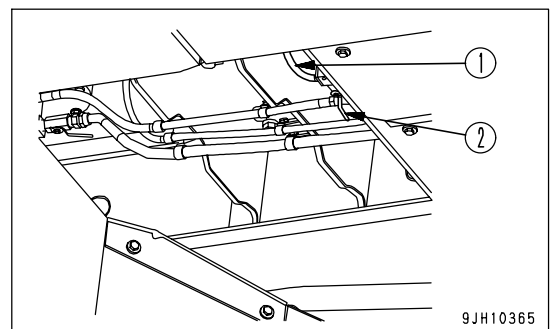


Check for Water and Sediment in Water Separator, Drain Water

The water separator is installed at the bottom of the fuel pre-filter.

1. Open up the front left side cover of the engine hood.
2. It is possible to judge the water level and amount of sediment by looking through transparent cap (2). If there is any water or sediment collected at the bottom, set a container to catch the drain water under drain hose (3).
3. Loosen drain valve (1) and drain the water.
4. When fuel comes out from drain hose (3), tighten drain valve (1) immediately.

Tightening torque: 0.2 to 0.45 Nm (0.02 to 0.046 kgm, 0.1 to 0.3 lbft)


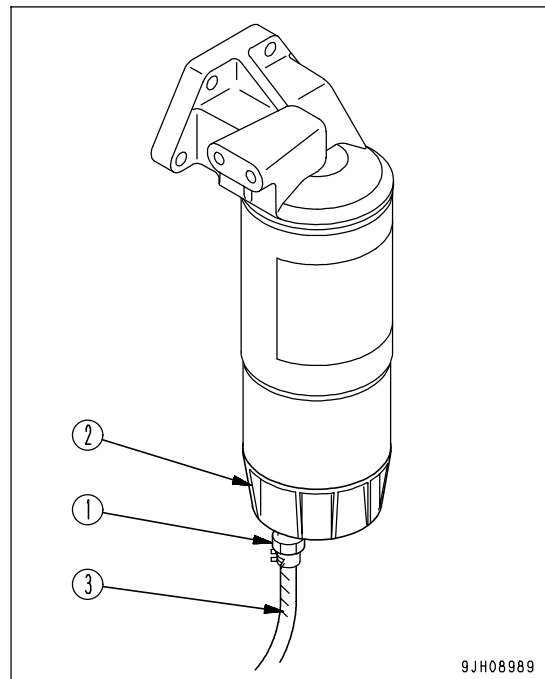


Check Oil Level in Hydraulic Tank, Add Oil

**WARNING**

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Set the work equipment in the posture shown in the diagram on the right, then check the oil level and add oil if necessary.
2. If the machine is not in the condition shown in the diagram on the right, start the engine, run the engine at low speed, retract the arm and bucket cylinder fully, lower the boom, put the bucket teeth in contact with the ground, then stop the engine.
3. Within 15 seconds after stopping the engine, move each control lever (for work equipment and travel) to the full stroke in all directions to release the internal pressure.
4. Open cover (1) on the left side of the machine and check sight gauge (G). The oil level should be between the H and L marks.
5. If the level is below the L mark, add oil through oil filler (F) at the top of the hydraulic tank.

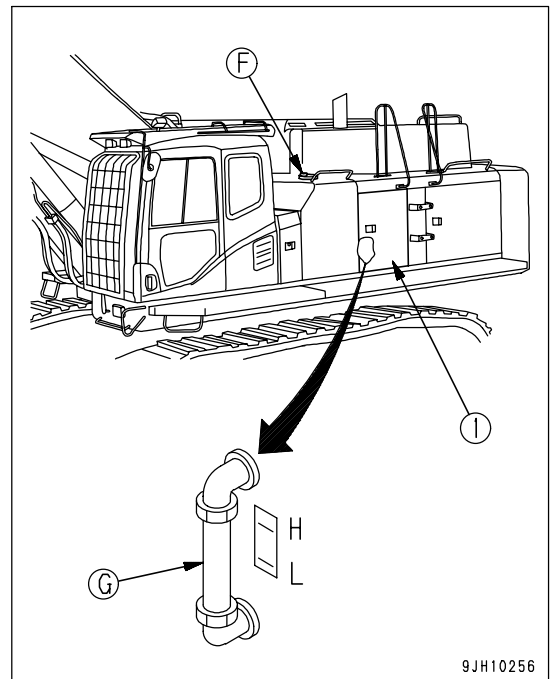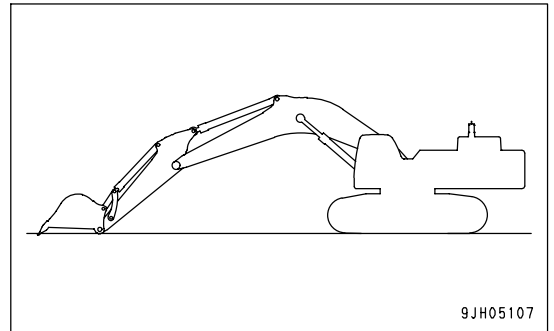**REMARK**

The oil level will vary depending upon the oil temperature.


Accordingly, use the following as a guide:

- Before starting operation: Between H and L levels
(Oil temperature 10 to 30°C (50 to 86°F))
- Normal operation: Around H level
(Oil temperature 50 to 80°C (122 to 176°F))

NOTICE

Do not fill with hydraulic oil exceeding the "H" level, otherwise there will be damage on the hydraulic system, or oil will spurt out.

When having filled with hydraulic oil above "H" level by mistake, swing the upper structure so that drain plug (P) in the lower part of the suction tube comes in between the right and left track shoes, stop the engine and drain excess oil from drain plug (P) after making sure that oil has cooled down enough.

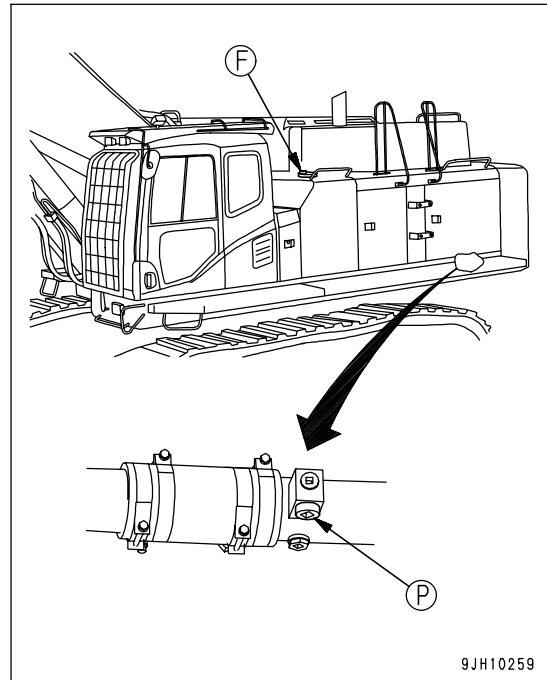

Check Oil Level in Swing Machinery Case, Add Oil


**WARNING**

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.


1. Remove dipstick (G) and wipe oil from the dipstick with a cloth.
2. Fully insert dipstick (G) into the filler pipe.

(A): Front


Swing machinery at front of machine

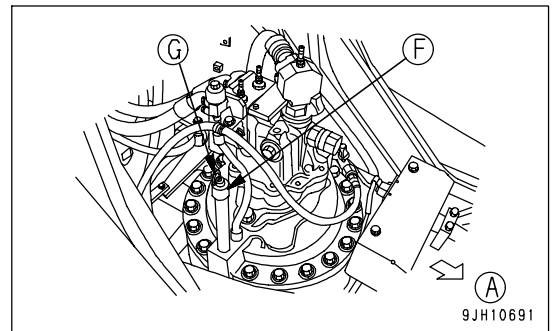

Swing machinery at rear of machine

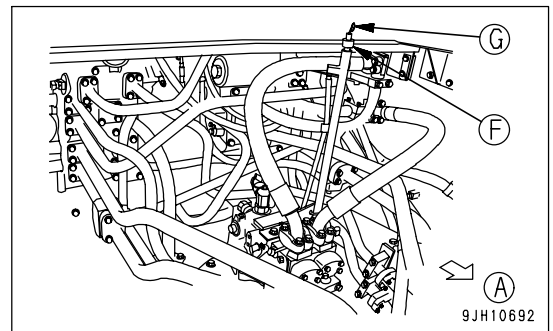


3. When dipstick (G) is pulled out, if oil level is between the H and L marks of the gauge, oil level is proper.
4. If oil does not reach the L mark on dipstick (G), add oil through the filler pipe (F).

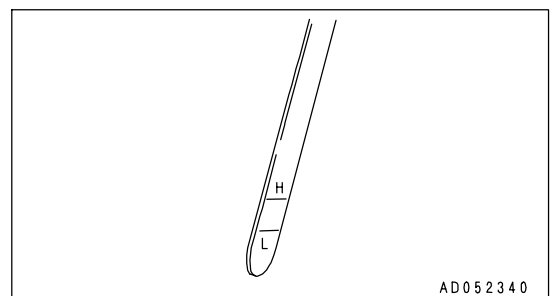


5. If oil is above the H mark on the oil level gauge, loosen drain plug (P) and drain the excess oil.

- When draining oil, pull out tube (1), then loosen drain plug (P). After draining the excess oil, store tube (1) inside hole (B).

Machine front drain

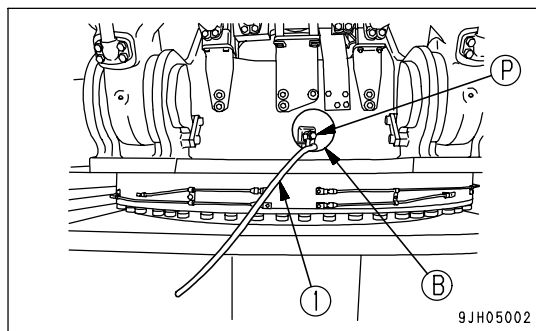

Machine rear drain

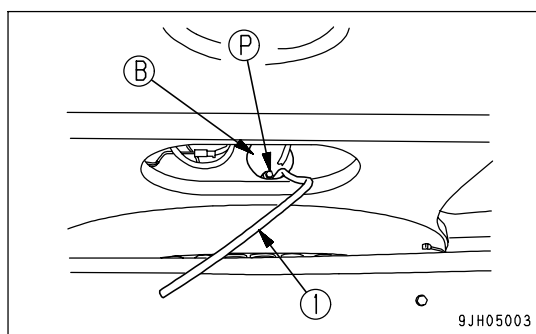

6. After checking oil level or adding oil, fully insert dipstick (G) into the filler pipe.


Check Oil Level in Coupling Case, Add Oil**WARNING**

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.


NOTICE

Park the machine on flat ground and stop the engine. After waiting for more than 30 minutes after stopping the engine, check the oil level.

1. Open up the front left side cover of the engine hood, and check the oil level with oil level gauge (G).

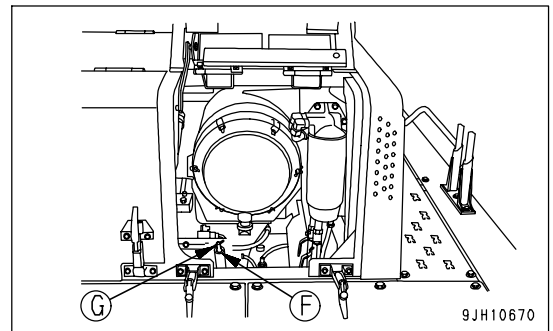


2. If oil does not reach the L mark on dipstick (G), add oil through the filler pipe (F).

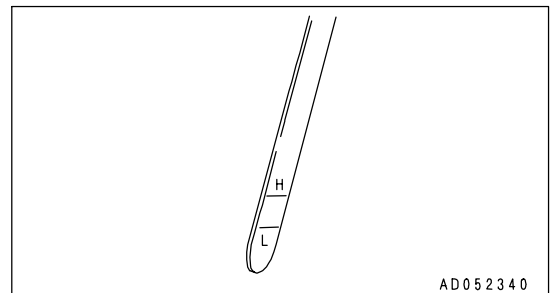**Check Working Lamp Switch**

Turn the lamp switch to the ON position and check that the working lamp light up.

If the lamps do not light up, there is probably a broken bulb or disconnection in the wiring, contact your Komatsu distributor for repairs.

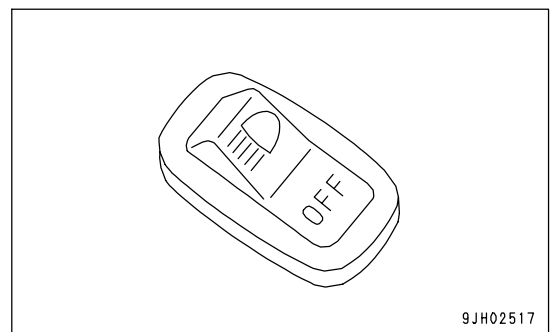

Check Electric Wiring



WARNING

- If the fuses frequently blow or if there are traces of short circuits in the electrical wiring, locate the cause and immediately perform repairs, or contact your Komatsu distributor for repairs.
- Keep the top surface of the battery clean and check the breather hole in the battery cap. If it is clogged with dirt or dust, wash the battery cap to clean the breather hole.

Check for damage and wrong capacity of the fuse and any sign of disconnection or short circuit in the electric wiring. Check also for loose terminals and tighten any loose parts.

Check the wiring of the "battery", "starting motor" and "alternator" carefully in particular.

Always check if there is any accumulation of flammable material around the battery, and remove such flammable material.

Please contact your Komatsu distributor for investigation and correction of the cause.

Check Function of Horn

1. Turn the starting switch to the ON position.
2. Confirm that the horn sounds immediately when the horn button is pressed.
If the horn does not sound, contact your Komatsu distributor for repair.

Adjustment

Seat Adjustment



WARNING

When adjusting the position of the operator's seat, always set the lock lever to the LOCK position to prevent any accidental contact with the control levers.

- Always adjust the operator's seat before starting each operation or when the operators change shift.
- Adjust the operator's seat so control levers and switches can be operated freely and easily with the operator's back against the backrest.

(A) Fore-and-aft adjustment

Pull lever (1) up, set the seat to the desired position, then release the lever.

Fore-and-aft adjustment: 160 mm (6.3 in) (16 stages)


(B) Adjusting reclining

NOTICE

The operator's seat can be reclined to a large angle when the seat is completely pushed forward, but the reclining angle is reduced when the seat is moved backward. So return the seat to its upright position before moving the seat to the rear.

Pull up lever (2) and set the backrest to a position that is comfortable for operation, then release the lever.

Sit with your back against the seat backrest when adjusting. If your back is not against the backrest, the backrest may suddenly move forward.

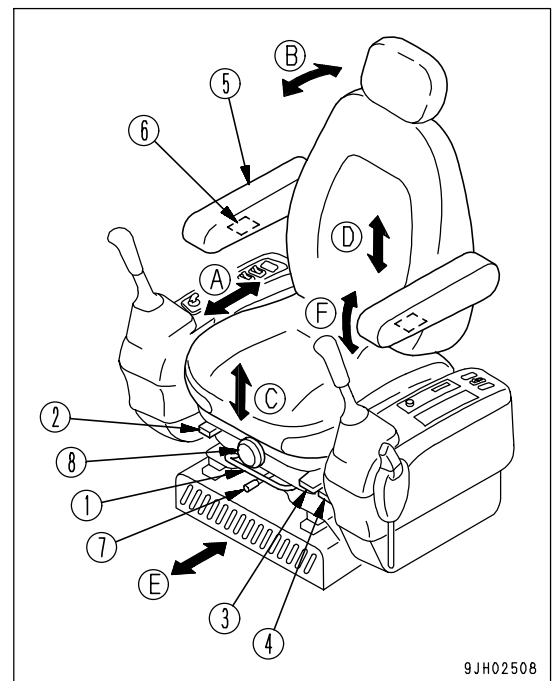

9JH02508

(C) Adjusting seat tilt

- Forward tilt

Push lever (3) down to adjust angle of the front of seat. (4 stages)

- To raise the angle at front of the seat, keep the lever pushed down and apply your weight to the rear of seat.
- To lower the angle at front of the seat, keep the lever pushed down and apply your weight to the front of seat.

- Rear tilt

Pull lever (4) up to adjust angle of the rear of seat. (4 stages)

- To raise the angle at rear of the seat, keep lever (3) pulled up, and stand up slightly to remove your weight from the seat.
- To lower the angle at rear of the seat, keep lever (3) pulled up, and apply your weight to the seat.

Amount of tilt: Up 13°, down 13°

- Adjusting seat height

It is possible to move the seat up or down by combining adjustments forward tilt and rear tilt.

After setting the forward tilt or rear tilt to the desired height, operate the opposite part to set the seat horizontal then secure in position.

Height adjustment: 60 mm (2.4 in)

(D) Adjusting armrest angle

Armrest (5) can be made to spring up by hand approx. 90°.

In addition, by turning the bottom (6) of the armrest by hand it is possible to make fine vertical adjustments of the armrest angle.

Armrest adjustment angle: 25°.

REMARK

- If the seat back is tipped to the front without raising the armrest(5), armrest will rise automatically.
- If the cable at the rear of armrest (5) is tense (when the seat back is tipped to the front), armrest (5) cannot be adjusted by turning dial (6). When adjusting the angle of armrest (5), set the seat back to a position where it is easy to carry out operations, then adjust the armrest.

(E) Overall fore-and-aft adjustment of seat

Move lever (7) to right, set to the desired position, then release the lever. In this case, the operator's seat, left and right control levers, and lock lever all slide together.

Fore-and-aft adjustment:180 mm (7.1 in) (9 stages)

(F) Adjusting suspension

Turn knob (8) to the right to make the suspension harder, or to the left to make the suspension softer. Adjust the reading of the dial to match the operator's weight and select the optimum suspension.

REMARK

To obtain the optimum adjustment, turn the knob (8) so that the indicator of the weight display (kg) in the transparent portion of knob (8) is the same as the operator's weight.



Rearview Mirrors

! WARNING

Be sure to adjust the mirrors before starting work. If they are not adjusted properly, you cannot secure the visibility and may be injured or may injure someone seriously.

Loosen nut (1), screw (2), and bolt (3) installing the mirror, then adjust the position to give the best view from the operator's seat.


- Adjust the mirror mount so that it is possible to see any person (or object of height 1 m (3 ft 3 in) and diameter 30 cm (11.8 in) at the rear left and right of the machine.
- Install the mirror to the mounting position and dimensions shown. The values given below are reference values for the range of view.

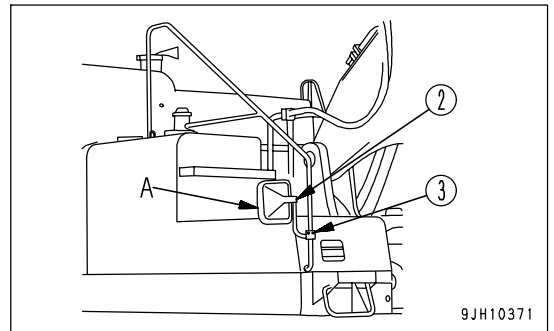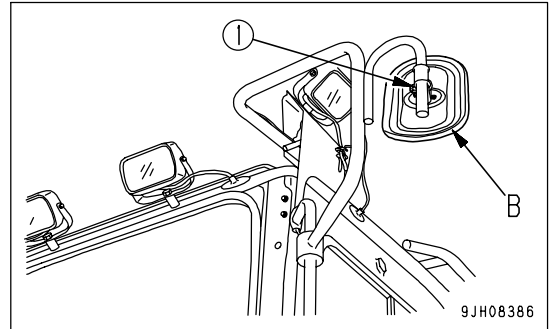

- Mounting position X1: 220mm (8.7 in)
- X2: 75mm (3.0 in)
- X3: 100mm (3.9 in)

- Range of view Y (right side): 2000mm (6 ft 7 in)
- Range of view Z (left side): 3700mm (12 ft 2 in)
- Range of view H (height): 3100mm (10 ft 2 in)

- Mirror A: Must be possible to see hatched portion (A)
- Mirror B: Must be possible to see hatched portion (B)
- Mirror C: Must be possible to see hatched portion (C)

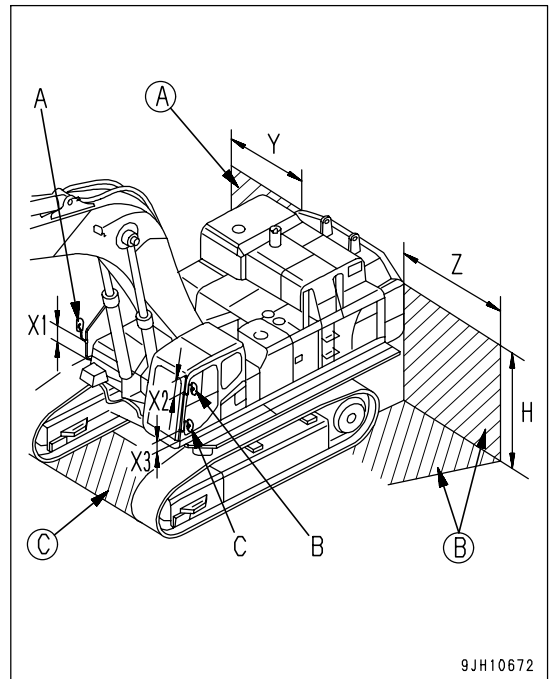

Seat Belt



WARNING

- Before fitting the seat belt, check that there is no problem in the belt mount bracket or mounting belt. If it is worn or damaged, replace the seat belt.
- Even if no problem can be seen in the belt, replace the seat belt every 3 years. The date of manufacture of the belt is shown on the back of the belt.
- Always wear the seat belt during operations.
- Fit the seat belt so that it is not twisted.


Fastening and Removing

This seat belt has a wind-in device, so it is not necessary to adjust the length.

Fastening Seat Belt

Hold grip (2) and pull the belt out from wind-in device (1), check that the belt is not twisted, then insert tongue (3) into buckle (4) securely.

When doing this, pull the belt lightly to check that it is properly locked.

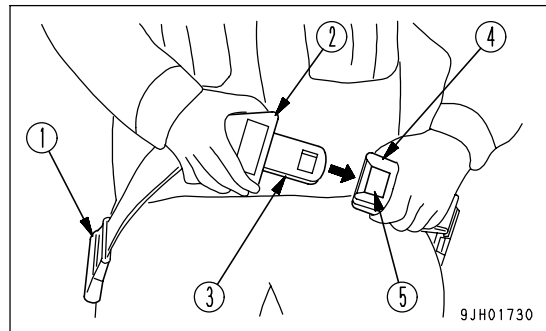

Removing Belt

Press button (5) in buckle (4), and remove tongue (3) from buckle (4).


The belt is automatically wound in, hold grip (2) and return the belt slowly to wind-in device (1).

Operations Before Starting Engine

**WARNING**


When starting the engine, check that the lock lever is securely at the LOCK position.

If the lock lever is not locked securely and the control levers or control pedal are touched when the engine is started, the machine may move unexpectedly, and this may lead to serious personal injury.

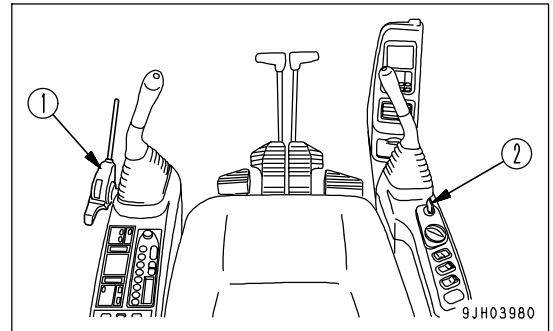


1. Check that lock lever (1) is at the LOCK position (L).
2. Check that each control lever and control pedal is at the Neutral position.

If the control levers and control pedal are not being touched, they will be at the Neutral position.

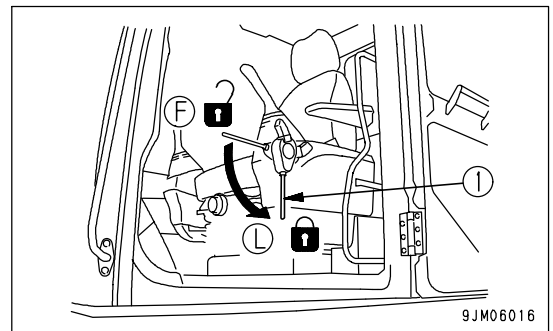



3. Insert key into starting switch (2), turn the key to ON position (B), then perform the following checks.

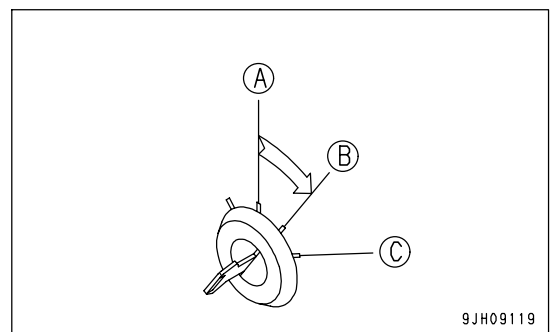

- If a password has been set, the input display screen is shown on the monitor screen.
After inputting the password, press input confirmation switch (3).


REMARK

For details of the method of setting, changing, or canceling the password, see separate "PROCEDURE FOR SETTING, CHANGING, OR CANCELING PASSWORD".

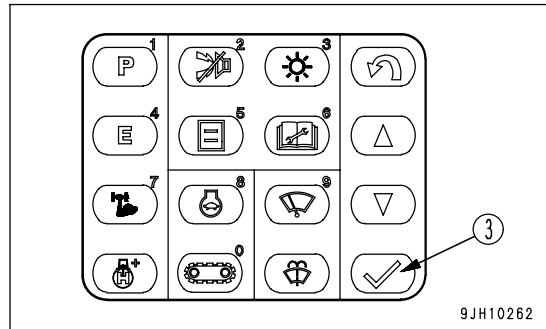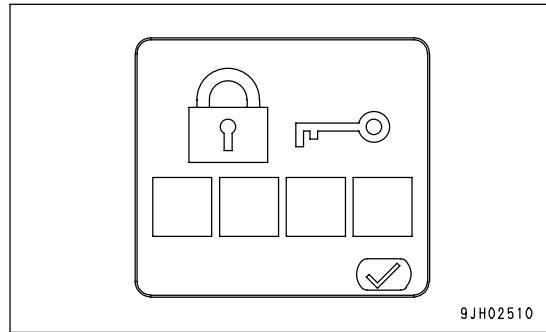

1) The buzzer sounds for approx. 1 second, and the following monitors and meters light up for approx. 3 seconds.


- Radiator coolant level monitor (4)
- Engine oil level monitor (5)
- Charge level monitor (6)
- Fuel level monitor (7)
- Engine coolant temperature monitor (8)
- Engine oil pressure monitor (9)
- Engine coolant temperature gauge (10)
- Fuel gauge (11)
- Air cleaner clogging monitor (12)

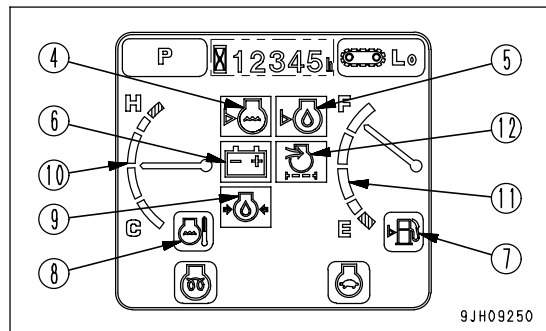


If the monitors do not light up or the buzzer does not sound, there is probably a failure in the monitor, so contact your Komatsu distributor for repairs.

2) After approx. 3 seconds, the screen switches to the working mode/travel speed display monitor. Then it switches to the normal screen.

- Fuel level monitor (7)
- Engine coolant temperature monitor (8)
- Engine coolant temperature gauge (10)
- Fuel gauge (11)
- Hydraulic oil temperature gauge (13)
- Hydraulic oil temperature monitor (14)


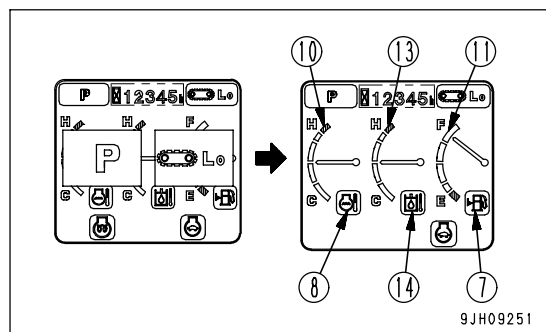


- 3) If the hydraulic oil temperature gauge goes out and caution lamp (15) stays lighted up red, perform inspection immediately for the item which is lighted up red.

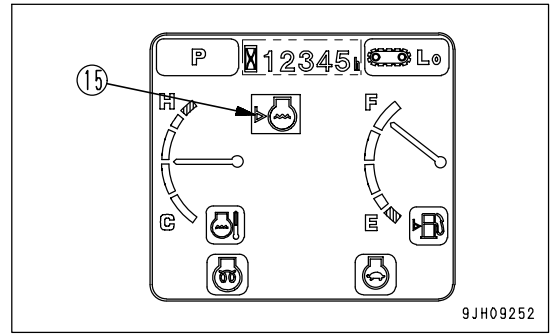

- 4) If there are any items where the maintenance time has passed, maintenance interval monitor (16) lights up for 30 seconds. Press maintenance switch (17), check the item, then perform maintenance immediately.

For details of the method of checking the maintenance interval, see "Maintenance Switch (PAGE 3-24)" in the Detailed controls and gauges.

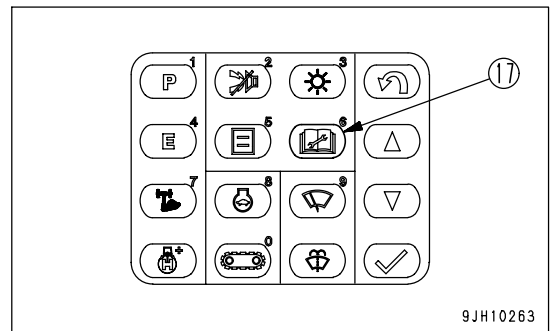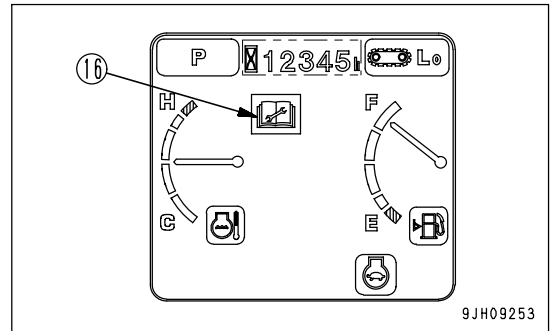


STARTING ENGINE

WARNING

- Start the engine only after sitting down in the operator's seat.
- Do not attempt to start the engine by short-circuiting the engine starting circuit. Such an act may cause a serious bodily injury or fire.
- Check that there are no persons or obstacles in the surrounding area, then sound the horn and start the engine.
- Never use starting aid fluids as they may cause explosions.
- Exhaust gas is toxic. When starting the engine in confined spaces, be particularly careful to ensure good ventilation.

NOTICE


- Before starting the engine, check that fuel control dial (2) is at the low idling (MIN) position. If the fuel control dial is at the full speed (MAX) position, the engine will accelerate suddenly and cause damage to the engine parts.
- Do not keep the key in starting switch (3) at the START position continuously for more than 20 seconds.
If the engine does not start, wait for at least 2 minutes, then start again from the beginning.
- After the engine starts, wait for the engine oil pressure monitor to go out. Do not touch the control levers or control pedal while the engine oil pressure monitor is lighted up.

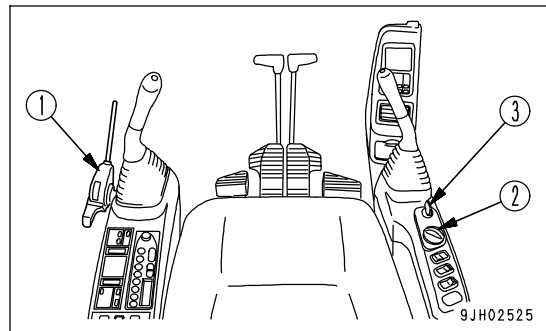


This machine is equipped with an engine automatic preheating device that functions to start the engine preheating automatically.

If the ambient temperature is low, the preheating monitor will light up when the key in starting switch (3) is turned to the ON position to inform the operator that preheating has been started automatically.

1. Check the lock lever (1) is in the LOCK position (L). If the lock lever is in the FREE position (F), the engine does not start.

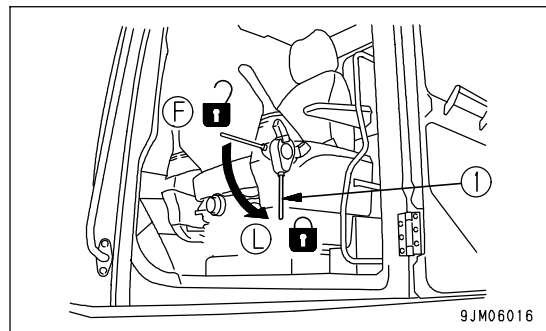


2. Set fuel control dial (2) to the low idling (MIN) position.

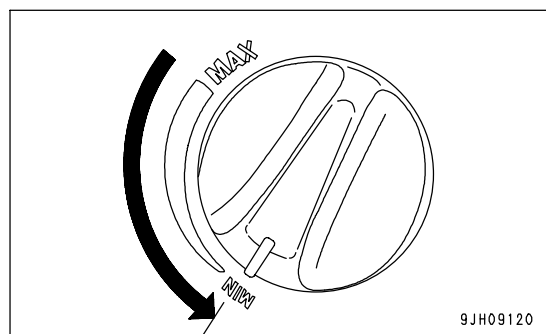

3. Turn the key in starting switch (3) to ON position (B).

If the ambient temperature is low, the preheating monitor lights up and automatic preheating is carried out. Keep the key in starting switch (3) at the ON position until the preheating monitor goes out.

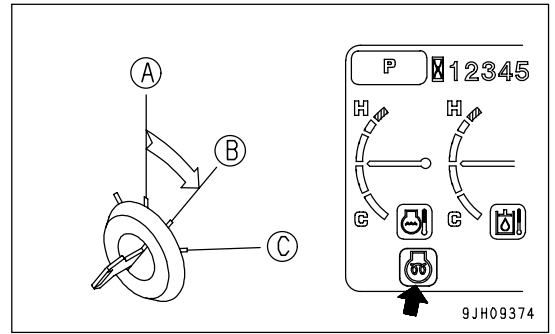


The time that the preheating monitor stays lighted up depends on the ambient temperature as shown in the table on the right.

Ambient temperature	Lighting time
- 5 °C (23 °F)	20 seconds
- 10 °C (14 °F)	25 seconds
- 20 °C (- 4 °F)	40 seconds


4. If the preheating monitor does not light up, or it lights up and then goes out to inform that the engine preheating has been completed, turn the key in starting switch (3) to the START position (C) and start the engine.

REMARK

If the ambient temperature is low, the engine may not start even when the key in the starting switch (3) is kept at the START position for 20 seconds. If this happens, wait for at least 2 minutes, then start again from the beginning.

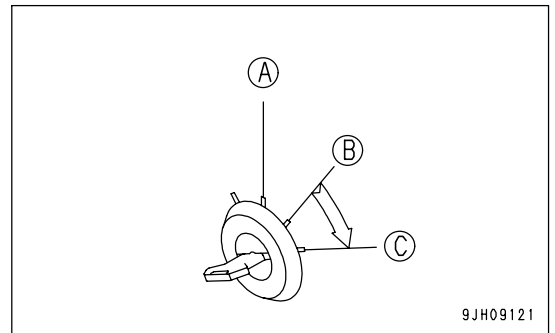


5. After the engine starts, release the key in starting switch (3). The key will automatically return to the ON position (B).

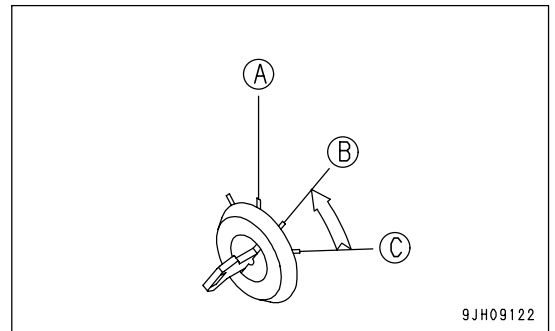

6. Even if the engine starts, wait for the engine oil pressure monitor to go out. Do not touch the control levers or control pedal while the engine oil pressure monitor is lighted up.

NOTICE

If the engine oil pressure monitor does not go out even after 4 to 5 seconds have passed, stop the engine immediately. Check the oil level, check for leakage of oil, and take the necessary action.


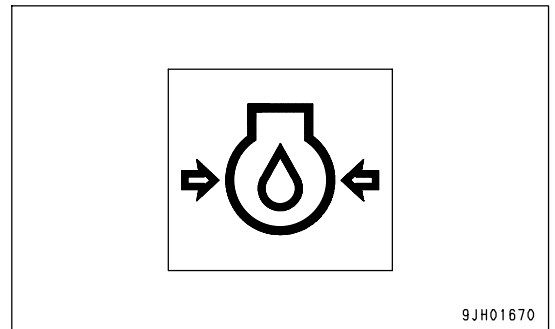


REMARK

Regardless of the ambient temperature, it is possible to start the engine preheating manually.

1. Turn the key in starting switch (3) to the left from OFF position (A). The preheating monitor lights up and engine preheating starts.
(Preheating continues while the key in starting switch (3) is held at the left position.)
2. The preheating monitor starts lighting about 30 seconds after preheating starts and then goes off in about 10 seconds.
3. After the preheating monitor goes off, turn the key in starting switch (3) to START position (C). The engine will start.

If the engine cannot be started with the above procedure, wait for at least two minutes, then start again from Step 1.

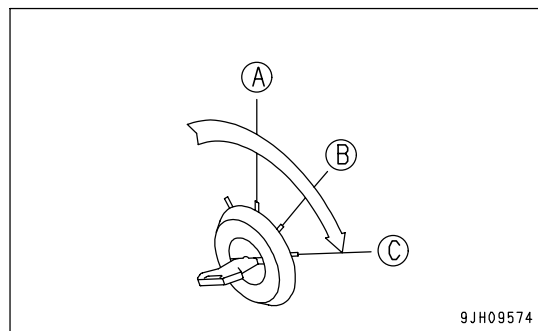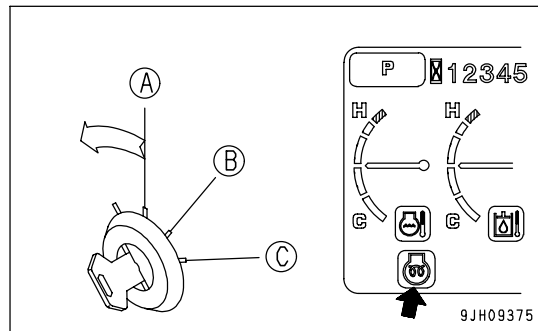

REMARK

- The relationship between the turbocharger protection function and an engine cooling water temperature is as shown in the table below.

The engine revolution dose not rise above 1000 rpm within the time shown in the table, even if the fuel control dial is operated.

Coolant temperature	Turbo protect time (sec.)
Above 10 °C (50 °F)	0
10 to -10°C (50 to 14°F)	Change 0 to 20
below -10 °C (14 °F)	20

- In cold weather, the turbo protect function is actuated, so the engine speed is maintained below 1000 rpm for several seconds. After that, the automatic warming-up function raises the engine speed to 1200 rpm.

AFTER STARTING ENGINE



WARNING

- **Emergency stop**
If there has been any abnormal actuation or trouble, turn the starting switch key to the OFF position.
- Do not carry out operations or operate the levers or pedals suddenly while the hydraulic oil is at low temperature. Always carry out the warm-up operation for the hydraulic equipment until the hydraulic oil temperature monitor is displayed green.
- If the warm-up operation for the hydraulic equipment is not carried out thoroughly, and the machine is moved, the reaction of the control levers and pedals will be slow and the movement may not be what the operator intended. Always warm up the hydraulic equipment. In particular, in cold areas, always warm up the hydraulic equipment thoroughly.

There are two types of warm-up operation: warm up the engine and warm up the hydraulic equipment. In addition, depending on the environment, the method of carrying out the warm-up operation may differ, so carry out the warm-up operation according to the items given in the appropriate section.

(When only the engine is warmed up, the hydraulic equipment is not warmed up, so always carry out the warm-up operation for the hydraulic equipment separately from the warm-up operation for the engine. Warm up the hydraulic equipment thoroughly ensures that the hydraulic oil is warmed up and that warm hydraulic oil circulates in all the control circuits.)

Checking of Engine Startability and Noise

When starting the engine, check that the engine causes no abnormal noise and that it starts up easily and smoothly. Check also that there is no abnormal noise when the engine is idling or when the revolution rises slightly.

- When there is an abnormal noise at the engine startup and if that condition continues, the engine may be damaged. In that case, ask your Komatsu distributor to check the engine as soon as possible.

Checking of Engine Acceleration and Deceleration

When stopping the machine during the operation, check that there is no irregular engine revolution or that the engine does not stop suddenly.

Check also that the engine speed rises smoothly when the fuel control dial is turned to the full (Max).

- Carry out these checks in a safe place, watching out for danger in the surroundings.
- When the engine performs very badly at low idling and in the acceleration and if that condition continues, the engine may be damaged or confuse the operator's sense of driving or lower the braking efficiency, and as a result lead to an unexpected accident. In that case, ask your Komatsu distributor to check the engine as soon as possible.

Breaking-in the New Machine

NOTICE

Your Komatsu machine has been thoroughly adjusted and tested before shipment from the factory. However, operating the machine under full load before breaking the machine in can adversely affect the performance and shorten the machine life. Be sure to break in the machine for the initial 100 hours (as indicated on the service meter).


Make sure that you fully understand the content of this manual, and pay careful attention to the following points when breaking in the machine.

- Run the engine at idle for 15 seconds after starting it. During this time, do not operate the control levers or fuel control dial.
- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Immediately after starting the engine, avoid sudden starts, sudden acceleration, unnecessary sudden stops, and sudden changes in direction.

Engine Warm Up

NOTICE

- Do not accelerate the engine suddenly until the warm-up operation has been completed.
- Do not run the engine at low idling or high idling under no load for more than 20 minutes. This will have an adverse effect on the environment, and will also have an adverse effect on the internal structure of the engine. If it is necessary to run the engine at idling for more than 20 minutes, apply a load from time to time or run at a mid-range speed.

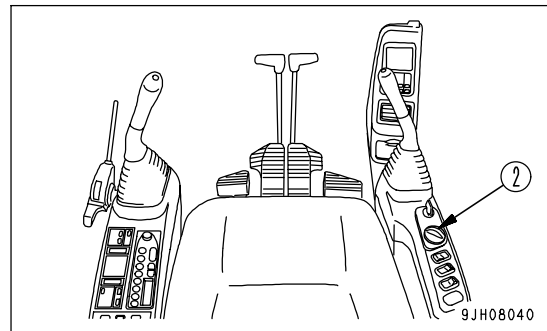


After the engine starts, do not start operating the machine immediately. First, carry out the following operations and checks.

1. This machine is equipped with an automatic engine warm-up system, so if the engine water temperature is below 30 °C after the engine is started, the engine warm-up operation starts automatically. When the engine automatic warm-up operation starts, the engine speed is maintained at a speed higher than the normal low idling speed.


If the engine water temperature goes above 30 °C or if the warm-up operation has been continued for more than 10 minutes, the automatic warm-up operation is cancelled and the engine speed drops to the normal low idling speed.

2. Check that engine water temperature monitor (1) displays green.

If it displays white, use the procedure in Step 3 to carry out additional warm up of the engine until the monitor displays green.

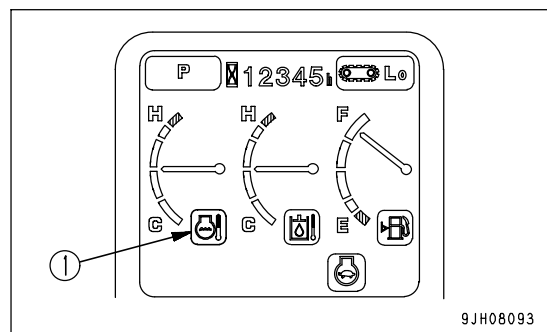

3. Turn fuel control dial (2) to a point midway between low idling (MIN) and full speed (MAX), run the engine at a mid-range speed, and run under no load until engine water temperature monitor (1) displays green.

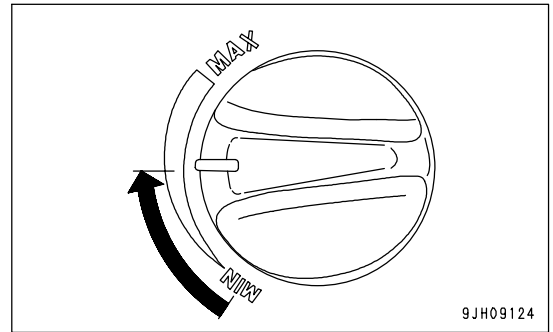


If the engine water temperature monitor displays green, the engine warm-up operation is completed. After checking that the engine water temperature monitor displays green, carry out the warming-up operation for the hydraulic equipment.

NOTICE


Canceling automatic warm-up operation

If it becomes necessary in an emergency to cancel the automatic warm-up operation or to lower the engine speed to low idle, do as follows.

- 1] Turn fuel control dial (2) to the full speed (MAX) position and hold it for 3 seconds.

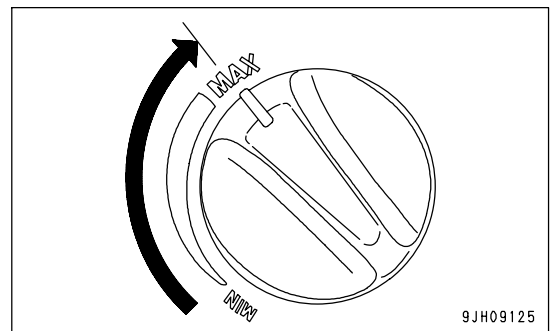


- 2] When fuel control dial (2) is returned to the low idle (MIN) position, the engine speed will drop.

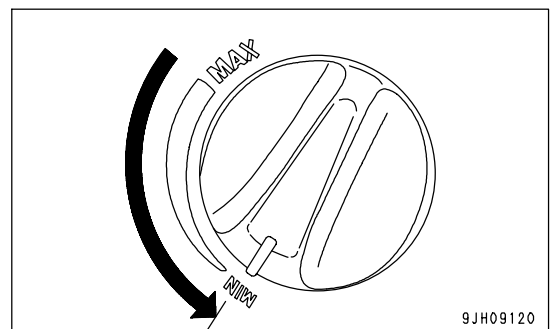


Hydraulic Equipment Warm Up

! WARNING


- Before carrying out the warm-up operation for the hydraulic equipment, turn the swing lock switch ON, check on the monitor that the swing lock is actuated, then start the warm-up operation.
- When warming up the hydraulic equipment, check that there is no person or obstacle in the surrounding area, then sound the horn and start the operation.
- Carry out the warm-up operation for the hydraulic equipment until the hydraulic oil temperature monitor displays green.
- The warm-up operation for the hydraulic equipment is necessary not only for the circuit between the pump and cylinders and between the pump and motor, but also for all the control circuits. Do not carry out the operation just for one cylinder or motor, or the operation just in one direction. Carry out the operation in both directions for the work equipment (boom, arm, bucket), swing, travel, and attachment (if equipped).

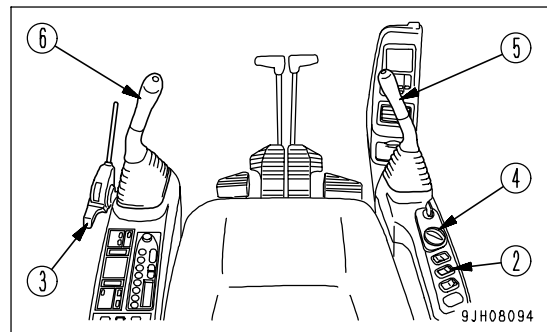

1. Check that engine water temperature monitor (1) displays green.
If it displays white, carry out additional warm up of the engine until engine water temperature monitor (1) displays green.
For details of the procedure, see "Engine Warm Up (PAGE 3-102)".

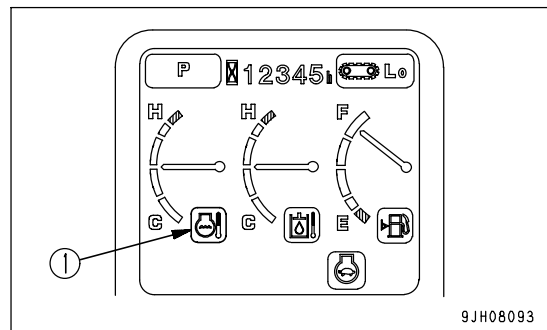


2. Turn swing lock switch (2) ON and check that the swing lock monitor lights up.

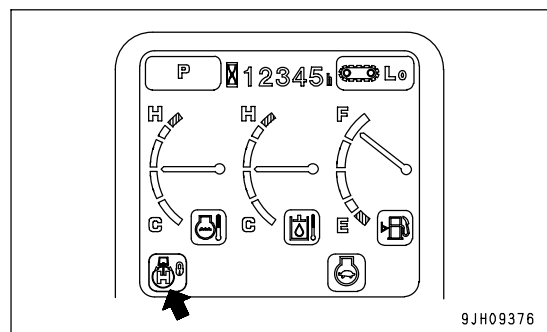


- To complete the warm-up operation of the hydraulic equipment more quickly, set the working mode to P mode (heavy-duty mode).


For details of the procedure for setting the working mode, see "Working Mode Selector Switch (Basic Switch) (PAGE 3-20)".

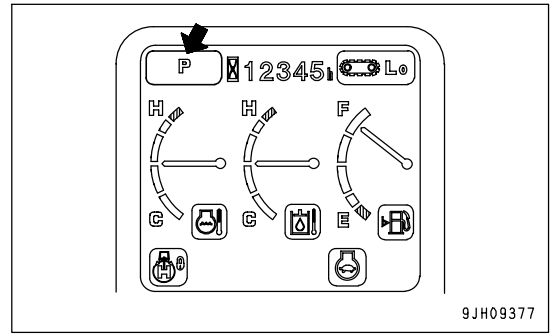

- Move lock lever (3) slowly to the FREE position (F), then raise the bucket from the ground.

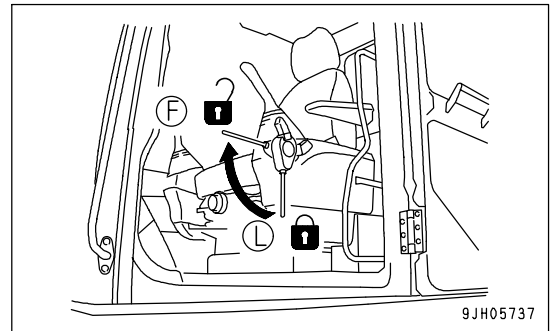


- Turn fuel control dial (4) to a point midway between low idling (MIN) and full speed (MAX).

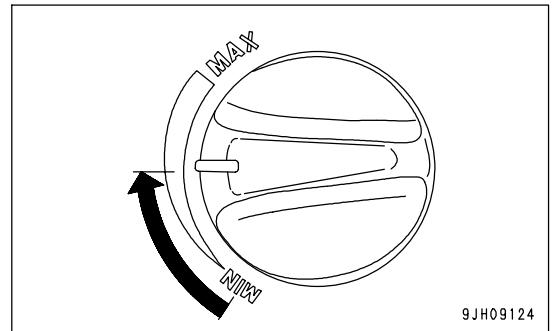


NOTICE

When the work equipment is retracted, take care that it does not interfere with the machine body or ground.


- Move right work equipment control lever (5) slowly in the direction to pull in the bucket (D). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Move right work equipment control lever (5) slowly in the direction to push out the bucket (C). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Next, move left work equipment control lever (6) slowly in the direction to pull in the arm (B). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Move left work equipment control lever (6) slowly in the direction to push out the arm (A). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Repeat the operation in Steps 6 to 9 for 5 minutes.

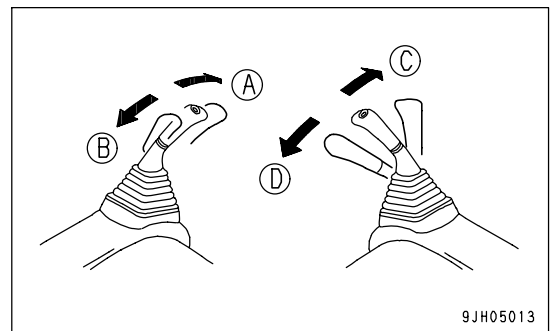

11. Check that hydraulic oil temperature monitor (7) is displaying green.
 If the hydraulic oil temperature monitor is not displaying green (it is displaying white), repeat Steps 6 to 10 until the display is green.

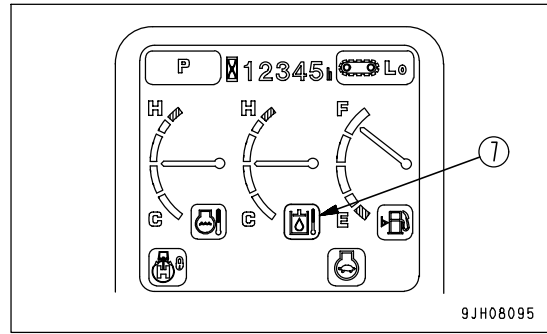


12. Check that engine water temperature monitor (1) displays green.
 If it displays white, carry out additional warm up of the engine until engine water temperature monitor (1) displays green.
 For details of the procedure, see "Engine Warm Up (PAGE 3-102)".

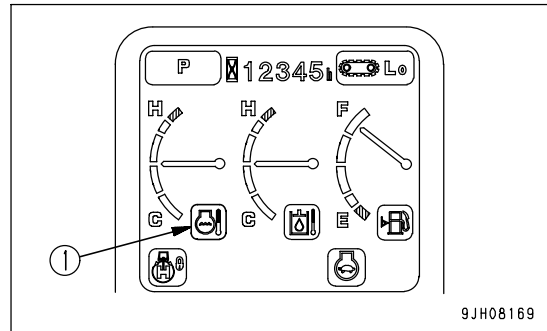

13. Check that the hydraulic oil temperature monitor and engine water temperature monitor are displaying green, then check that all the gauges and caution monitors on the machine monitor our in the following status.



- Radiator coolant level monitor (8): OFF
- Charge level monitor (9): OFF
- Engine oil pressure monitor (10): ON
- Engine oil level monitor (11): OFF
- Air cleaner clogging monitor (12): OFF
- Engine preheating lamp (13): OFF
- Engine water temperature gauge (14): Indicator in green range
- Engine water temperature monitor (1): Green display
- Hydraulic oil temperature gauge (15): Indicator in black range
- Hydraulic oil temperature monitor (7): Green display
- Fuel gauge (16): Indicator in black range
- Fuel level monitor (17): Green display

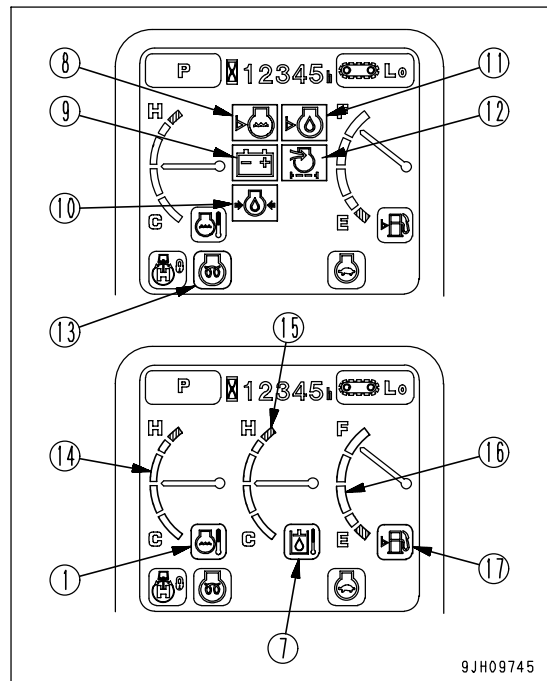

14. Check for abnormal exhaust gas color, noise, or vibration. If any problem is found, contact your Komatsu distributor.


In cold temperatures (ambient temperature below 0°C), even when the hydraulic oil temperature monitor displays green, carry out additional Step 15 to warm up all the hydraulic equipment.

15. Turn fuel control dial (4) to the full speed (MAX) position, repeat Steps 6 to 9 for 3 to 5 minutes, then check again that the hydraulic oil temperature monitor is displaying green. If it is not displaying green, repeat Steps 6 to 9 for 3 to 5 minutes until hydraulic oil temperature monitor (7) displays green.

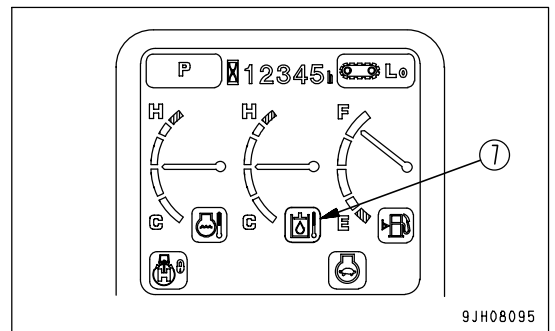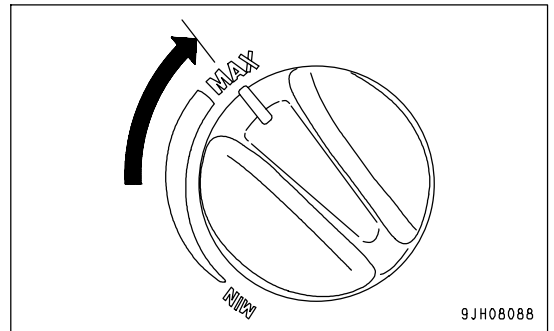

For both normal temperatures and cold temperatures, carry out the following operation.

16. Check that fuel control dial (4) is at a point midway between low idling (MIN) and full speed (MAX). If it is not at the midway position, set it to the midway position and run the engine at a mid-range speed before operating.


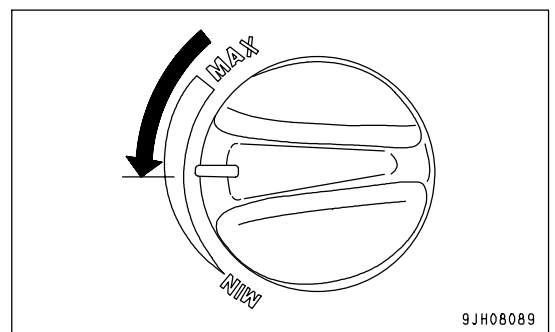


17. Before starting operations, repeat the following operations slowly 3 to 5 times to circulate warm oil through the control circuits.


- Boom operation RAISE (E) ↔ LOWER (F)
- Arm operation IN (B) ↔ OUT (A)
- Bucket operation CURL (D) ↔ DUMP (C)

When carrying out swing operations, release swing lock switch (2), check that swing lock monitor (18) goes out, then operate the swing.

- Swing operation Left (G) ↔ Right (H)

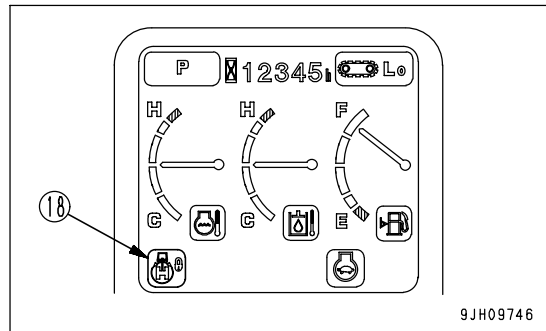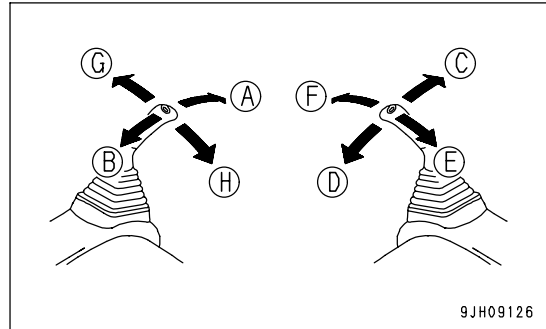


- Travel (Lo) operation FORWARD (A) ↔ REVERSE (B)

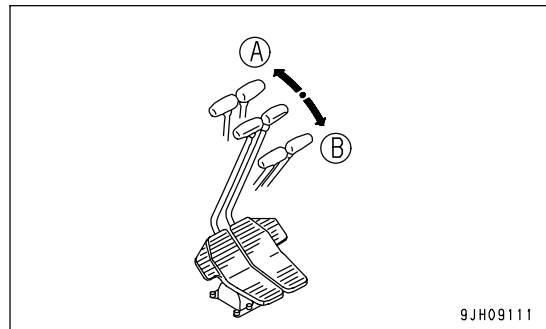

18. Check that hydraulic oil temperature monitor (7) is displaying green.


If the hydraulic oil temperature monitor is not displaying green (it is displaying white), repeat Steps 6 to 10 until the display is green.

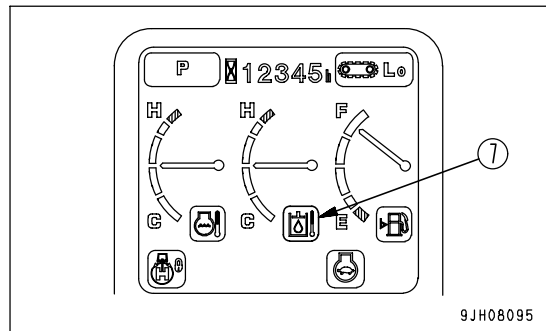


If the hydraulic oil temperature monitor displays green, the hydraulic equipment warm-up operation is completed. After confirming that the hydraulic oil temperature monitor displays green, carry out the following procedure.

Operation After Completion Of Warm-Up Operation

1. Check that hydraulic oil temperature monitor (7) displays green.

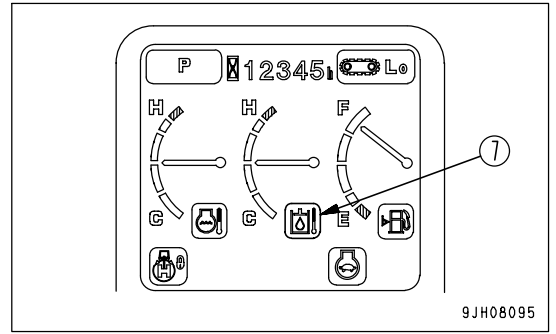


2. Push working mode selector switch (19) of the machine monitor to select the working mode to be used.
For details of the procedure for selecting the working mode, see "Working Mode Selector Switch (Basic Switch) (PAGE 3-20)".

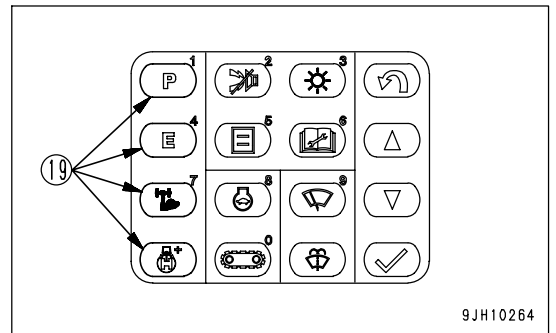


• Working mode monitor display

- 1) P mode
For heavy-duty operations

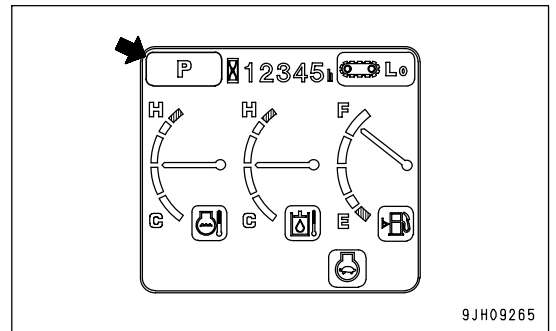


- 2) E mode
For operations with emphasis on fuel economy

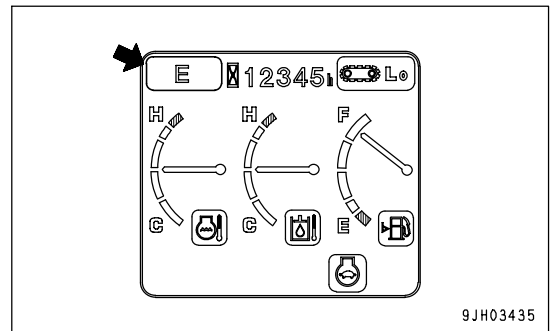


3) Heavy-duty lift

Boom lifting power increased when raising boom independently

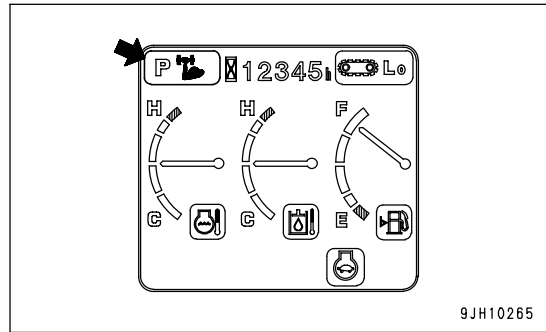

4) Swing priority mode

Priority given to swing when operating boom and swing simultaneously


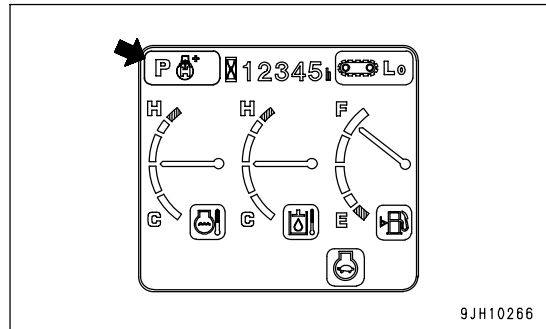


STOPPING THE ENGINE

NOTICE

If the engine is stopped abruptly, service life of component parts of the engine may be considerably reduced. Do not stop the engine abruptly except in an emergency. If the engine has overheated, do not try to stop it abruptly but run it at medium speed to allow it to cool down gradually, and then stop it.


1. Run the engine at low idle for about 5 minutes to cool down gradually.
2. Turn the key in starting switch (1) to the OFF position (A) and stop the engine.
3. Remove the key from starting switch (1).

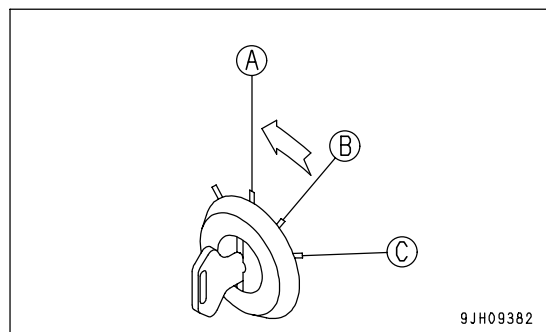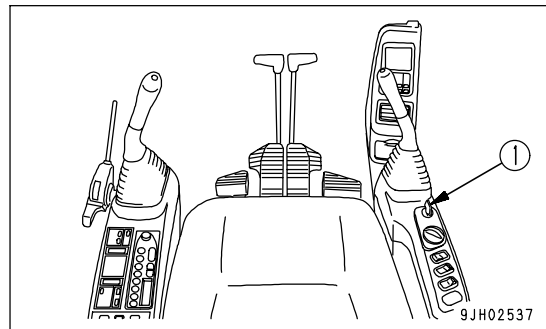


MACHINE OPERATION

**WARNING**


- Before operating the control lever, check the direction of the track frame. If the track frame is facing the rear (if the sprocket is at the front), the machine moves in the opposite direction from the operation of the travel lever (front and rear travel is reversed, left and right steering is reversed).
- Before starting the machine off, check that the area around the machine is safe, and sound the horn.
- Do not allow anyone to enter the area around the machine.
- Clear any obstacles from the travel path.
- There is a blind spot at the rear of the machine, so be particularly careful when traveling in reverse.
- If the control lever is operated when the auto deceleration is being actuated, the engine speed will suddenly rise, so be careful when operating.
- Before starting the machine off, check that the travel alarm sounds normally.

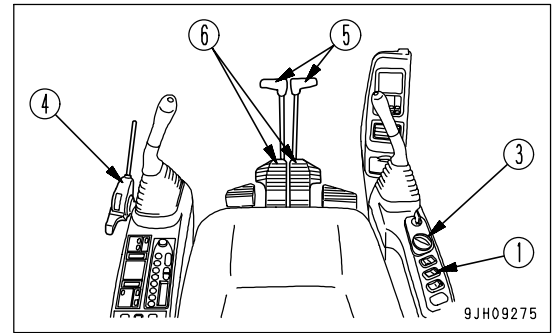**Preparations for Moving the Machine**

1. Set swing lock switch (1) to the ON (actuated) position and confirm that swing lock monitor lamp (2) lights up.

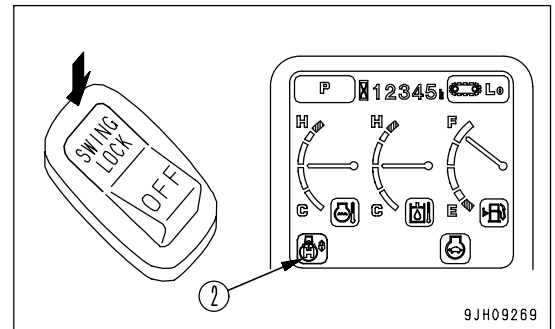


2. Turn fuel control dial (3) towards the full speed (MAX) position to increase the engine speed.

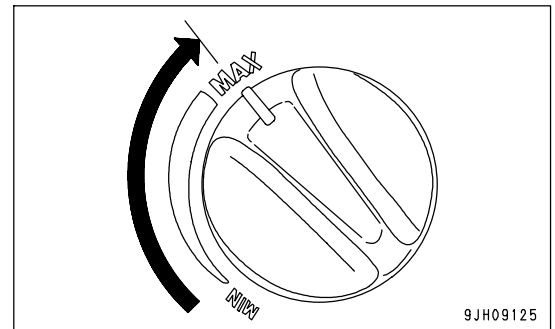

Moving Machine Forward


1. Set lock lever (4) in the FREE position (F), fold the work equipment, and raise it 40 to 50 cm (16 to 20 in) from the ground.

- If the work equipment blocks the view and it is difficult to travel in safety, raise the work equipment to a greater height.

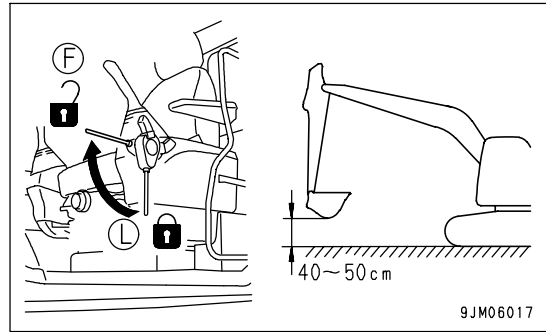


2. Operate the right and left travel levers (5), or the right or left travel pedals (6) as follows:

- When sprocket (A) is at the rear of the machine:
Slowly push the levers (5) forward, or slowly depress the front part of the pedals (6) to move the machine forward.

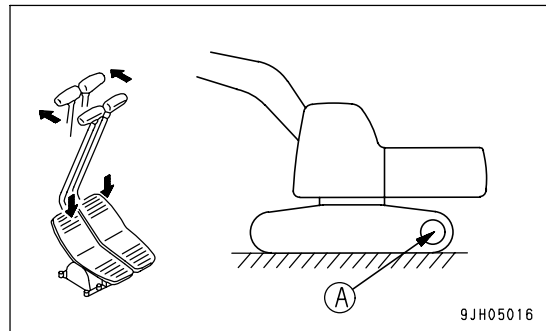

- When sprocket (A) is at the front of the machine:
Slowly pull the levers (5) backward, or slowly depress the rear part of the pedals (6) to move the machine forward.

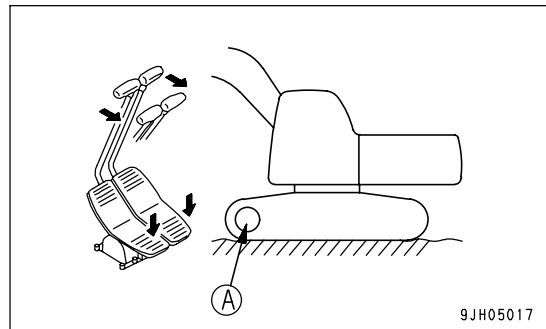


3. Check that the travel alarm sounds properly. If the travel alarm does not sound, please contact your Komatsu distributor for repair.

REMARK

In cold temperatures, if the machine travel speed is not normal, thoroughly perform the warming-up operation. In addition, if the undercarriage is clogged with mud and the machine travel speed is not normal, remove the soil and mud from the undercarriage.


Moving Machine Backward

1. Set lock lever (4) in the FREE position (F), fold the work equipment, and raise it 40 to 50 cm (16 to 20 in) from the ground.
 - If the work equipment blocks the view and it is difficult to travel in safety, raise the work equipment to a greater height.

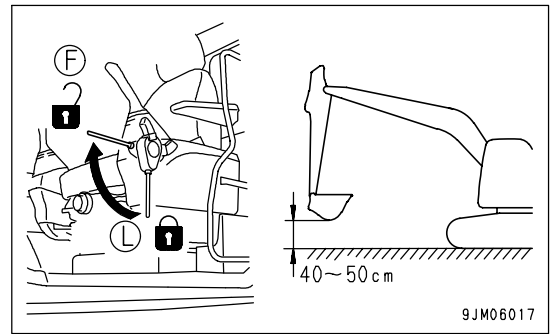


2. Operate the right and left travel levers (5), or the right or left travel pedals (6) as follows:

- When sprocket (A) is at the rear of the machine:
Slowly pull the levers (5) backward, or slowly depress the rear part of the pedals (6) to move the machine backward.

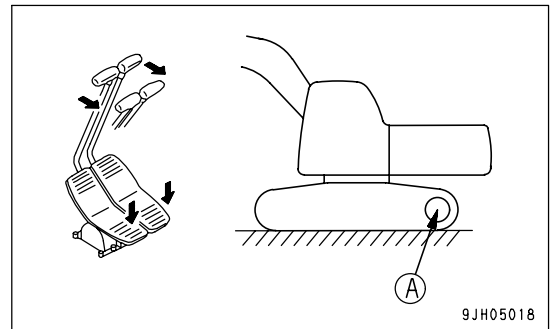

- When sprocket (A) is at the front of the machine:
Slowly push the levers (5) forward, or slowly depress the front part of the pedals (6) to move the machine backward.


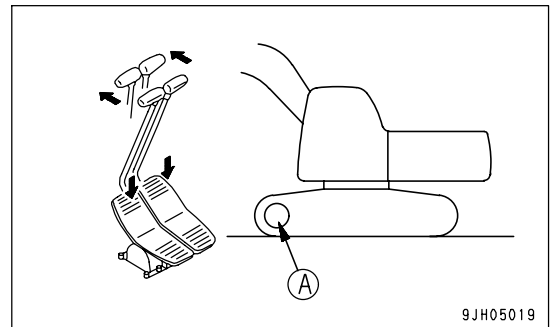


3. Check that the travel alarm sounds properly. If the travel alarm does not sound, please contact your Komatsu distributor for repair.

Stopping Machine

Avoid stopping suddenly. Give yourself ample room when stopping.

1. Put the left and right travel levers (1) in the neutral position, then stop the machine.

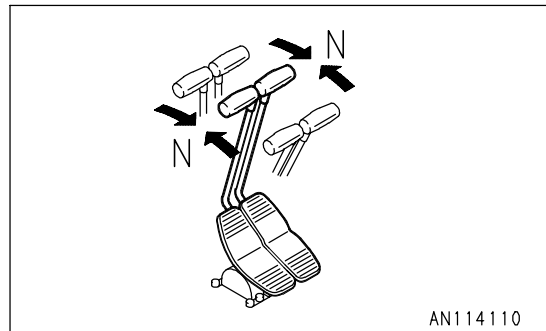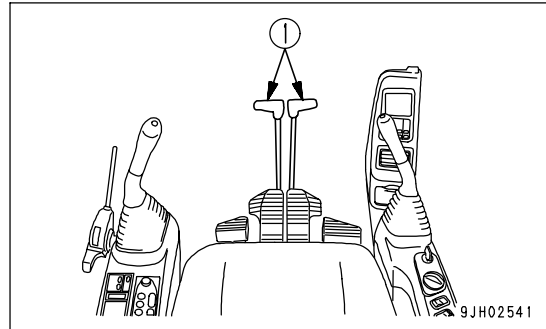

STEERING THE MACHINE


Steering



WARNING

Before operating the travel levers, check the direction of the track frame (the position of the sprocket). If the sprocket is at the rear, the machine moves in the reverse direction to the operation of the travel levers.

Use the travel levers to change direction.
 Avoid sudden changes of direction as much as possible.
 Especially when performing counter-rotation (spin turn), stop the machine before turning.
 Operate two travel levers (1) as follows.

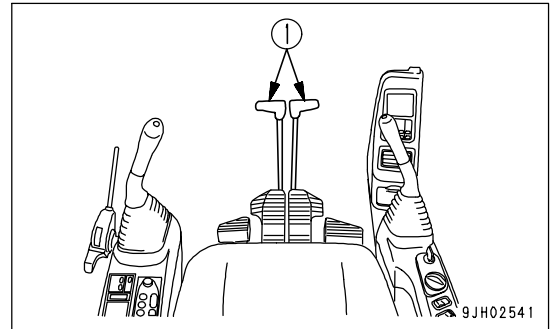

Steering the Machine when Stopped

When turning to the left:


Push the right travel lever forward to turn to the left when traveling forward; and pull it back to turn left when traveling in reverse.

(A): Forward left turn

(B): Reverse left turn

REMARK

When turning to the right, operate the left travel lever in the same way.

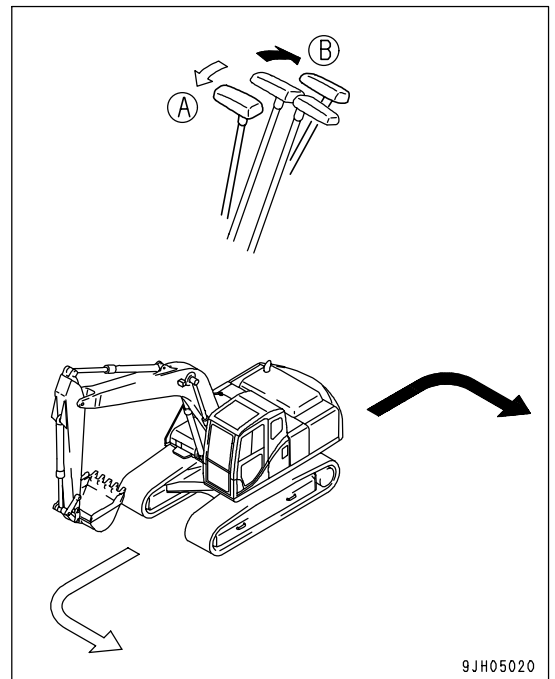

Changing Direction of the Machine

When turning to the left:


If the left travel lever is returned to the neutral position, the machine will turn to the left.

(A): Forward left turn

(B): Reverse left turn

REMARK

When turning to the right, operate the right travel lever in the same way.

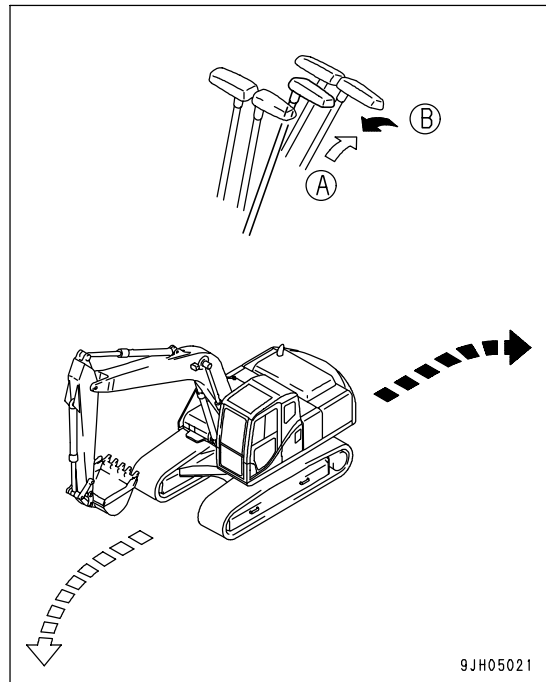


9JH05021

Counter-rotation Turn (Spin Turn)

When using counter-rotation (spin turn) to turn left, pull the left travel lever back and push the right travel lever forward.

REMARK

When using counter-rotation to turn right, pull the right travel lever back and push the left travel lever forward.

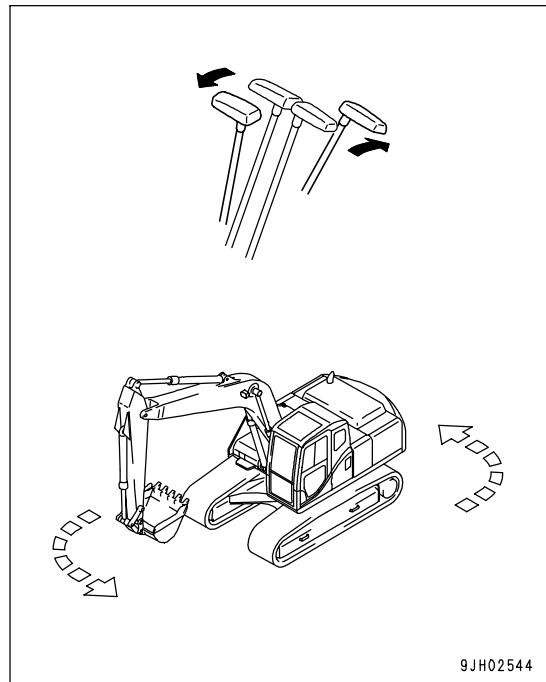


9JH02544


SWINGING

WARNING


The tail of the machine extends outside the tracks. Before operating the swing, check that the area around the machine is safe.

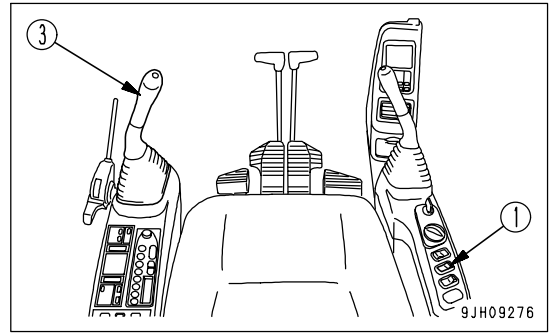


1. Before starting the swing operation, turn swing lock switch (1) OFF and check that swing lock monitor (2) has gone out.

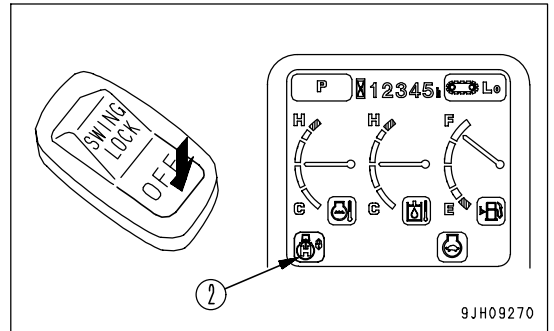

2. Operate left work equipment control lever (3) to swing the upper structure.
 - (A): Left swing
 - (B): Right swing

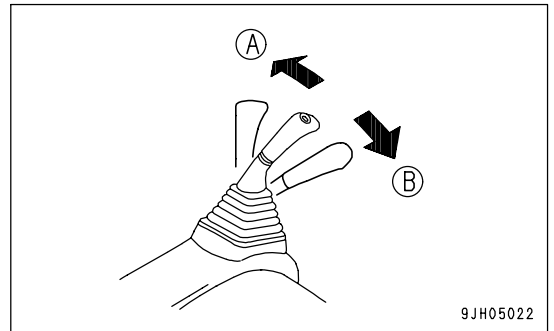

3. When not using the swing, turn swing lock switch (1) ON. Check that swing lock monitor (2) lights up.

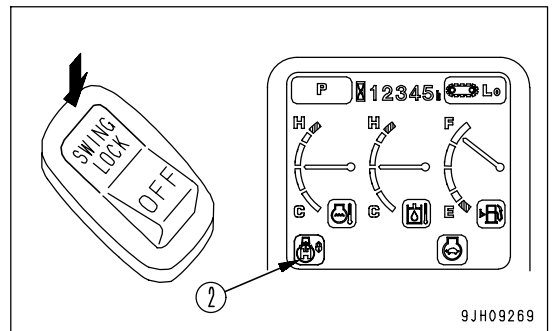

WORK EQUIPMENT CONTROLS AND OPERATIONS



WARNING

If the lever is operated when the engine speed has been lowered by the auto-deceleration function, the engine speed will suddenly rise, so operate the levers carefully.

Use the control levers to operate the work equipment.

Note that when the levers are released, they return to the HOLD position and the work equipment is held in that position.

- If the work equipment control levers are returned to the neutral position when the machine is stopped, even if the fuel control dial is set to FULL, the auto-deceleration mechanism will act to reduce the engine speed to a mid-range speed.


REMARK

With this machine, an accumulator is installed in the operating circuit, if less than 15 seconds has passed since the engine was stopped, when the starting switch is turned to the ON position even with the engine stopped, it is possible to operate the levers to lower work equipment to the ground.

In addition, this operation can also be used to release the remaining pressure in the hydraulic cylinder circuit or to lower the boom after the machine has been loaded onto a trailer.


- Arm control

Move the left work equipment control lever to the front or rear to operate the arm.

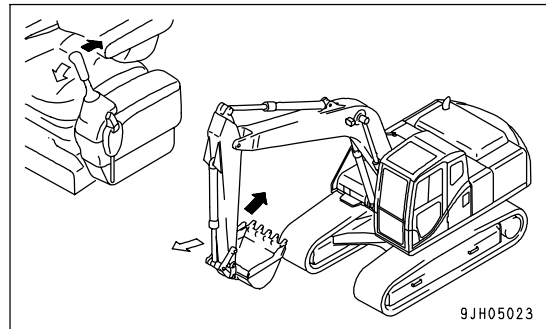


- Swing control


Move the left work equipment control lever to the left or right to swing the upper structure.

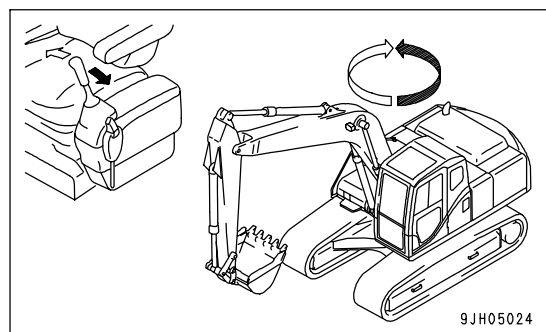

- Boom control
Move the right work equipment control lever to the front or rear to operate the boom.

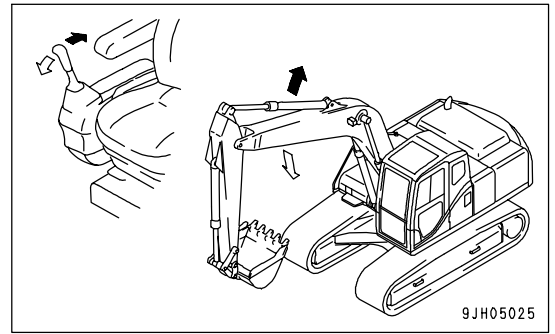

- Bucket control
Move the right work equipment control lever to the left or right to operate the bucket.

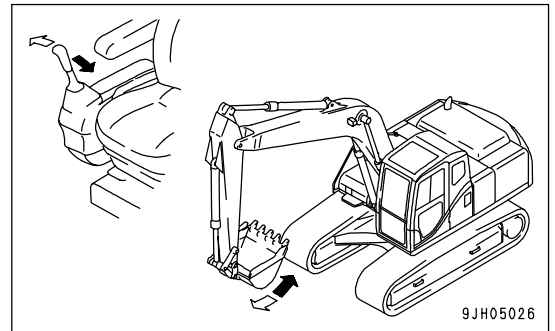

WORKING MODE

Working Mode


The mode selector switch can be used to switch the mode to match operating conditions and purpose, thereby enabling work to be performed efficiently.

Make effective use of each mode as follows.

When the starting switch is turned to the ON position, the working mode is set to P mode (digging).

Use the working mode switch to set the mode to the most efficient mode to match the type of work.

Working mode	Applicable operations
P mode	Normal digging, loading operations (Operations with emphasis on productivity)
E mode	Normal digging, loading operations (operation with emphasis on fuel economy)
Heavy-duty lift mode	Normal digging, loading operations (boom lifting power increased when raising boom independently)
Swing priority mode	Normal digging, loading operations (priority given to swing when operating boom and swing simultaneously)

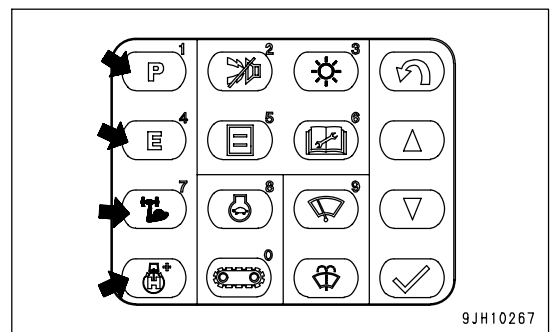


Setting Economy Mode

We recommend adjusting the economy mode settings to give the fuel consumption and production in the table below.

REMARK

The closer the selection is made to E3, the better the fuel consumption becomes, but the production is reduced accordingly.

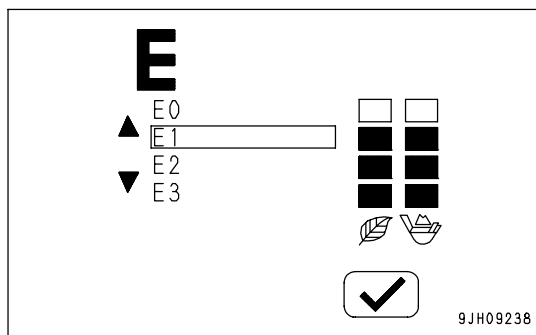

Mode	Dumping and loading		Handling overburden		Excavated and blasted rock	Pit excavation	Handling remaining walls	Trenching		Lifting work
	Blasted rock	Loosened sandy soil	Soft rock	Sandy bedrock				Soft rock	Sandy bedrock	
E0	◎	◎	○	◎	○	○	○	○	○	◎
E1	○	○	○	○	△	△	△	△	△	◎
E2	△	○	△	△	×	×	×	×	△	○
E3	×	△	×	×	×	×	×	×	×	○

◎ : Work possible without problem (can carry out that operation without problem)

○ : Work possible (can carry out operation with some minor problems)

△ : Work possible (can carry out operation but there are many problems)

× : Work impossible (too many problems, cannot carry out operation)

PROHIBITED OPERATIONS




WARNING

- If it is necessary to operate the work equipment control lever when the machine is traveling, stop the machine, then operate the control lever.
- If any lever is operated when the auto-deceleration is being actuated, the engine speed will suddenly increase, so be careful when operating.


Operations Using Swing Force

Do not use the swing force to compact soil or break objects. This is not only dangerous, but will also drastically reduce the life of the machine.

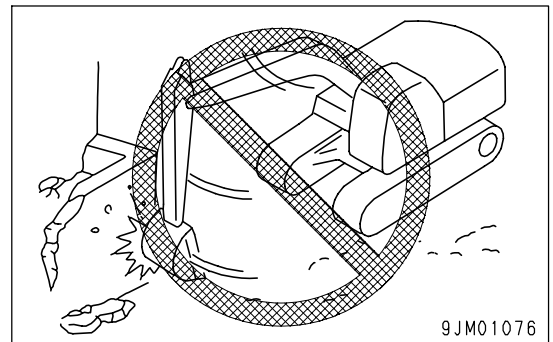


Operations Using Travel Force

Do not dig the bucket into the ground and use the travel force to carry out excavation. This will damage the machine or work equipment.

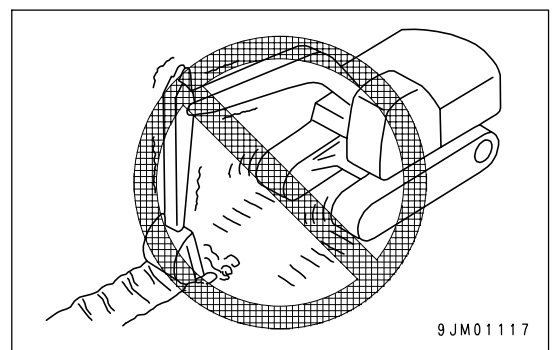


Prohibition of Operations Using Hydraulic Cylinders to Stroke Ends

If the work equipment is used with the cylinder rod operated to its stroke end, and given impact by some external force, the hydraulic cylinders will be damaged, causing personal injury. Avoid operations with the hydraulic cylinder fully retracted or fully extended.

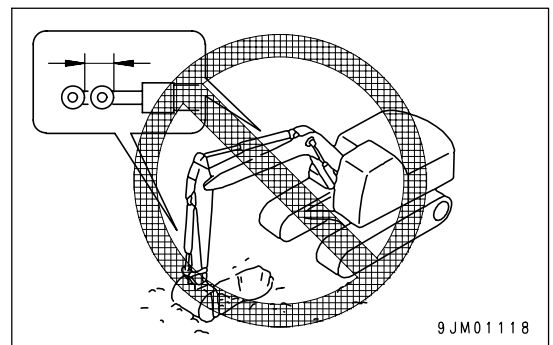

Operations Using Bucket Dropping Force


Do not use the dropping force of the machine for digging, or use the dropping force of the bucket as a pickaxe, breaker, or pile driver. This will drastically reduce the life of the machine.

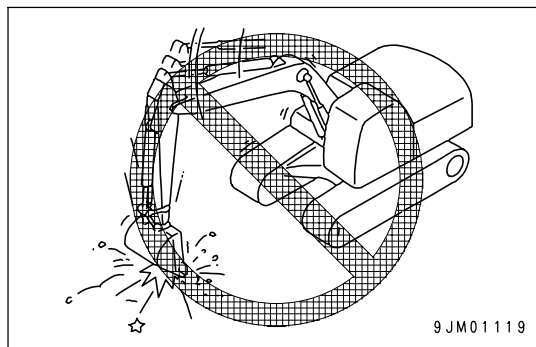

Operations Using Bucket as Lever



Do not use the bucket to lever rocks out. If the back of the bucket contacts the rock behind, the principle of the lever will bring excessive force to bear on the machine or work equipment, and there is danger that this may lead to breakage or damage of the machine.

In such situations, use only the force of the arm and bucket to carry out the digging operation. If any excessive force is brought to bear, the safety valve in the hydraulic system automatically controls the force within the specified range, and this prevents damage to the machine.

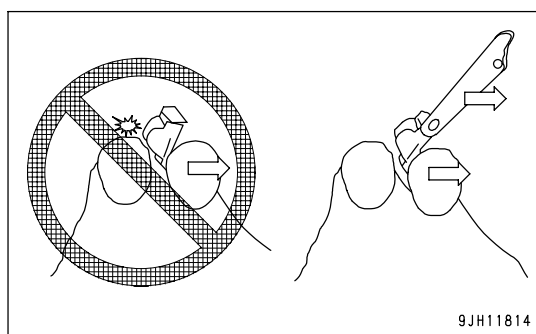

Operations Using Machine Dropping Force


Do not use the dropping force of the machine for digging.

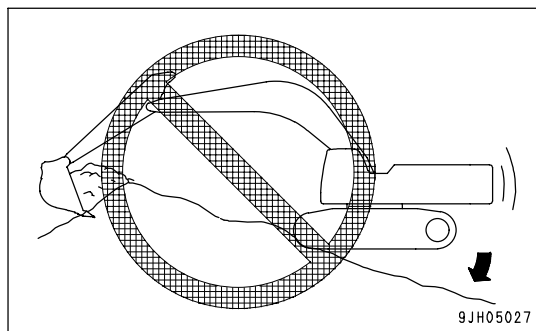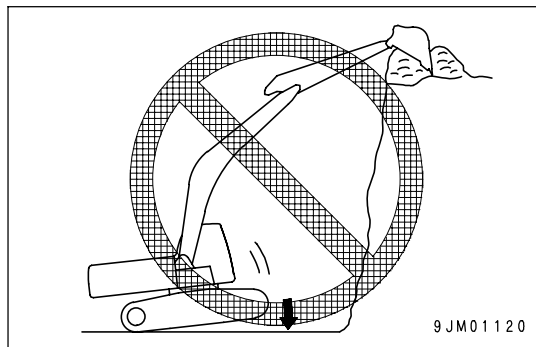

Operations Digging at an Angle without Engaging Teeth

Do not swing the upper structure when digging hard rock at a position higher than the machine if the bucket teeth will not penetrate the rock. The teeth will slip on the rock surface and generate excessive vibration of the machine, and this will lead to cracking of the work equipment or frame.

In addition, if the bucket teeth slip and hit the rock, there will be excessive impact load on the work equipment and frame, and this will reduce the service life of the machine.

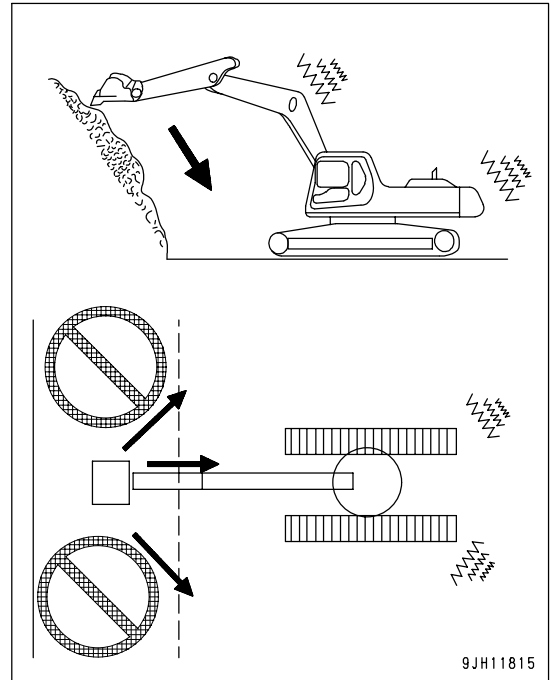


Digging Hard Rocky Ground


Do not attempt to directly excavate hard rocky ground with the work equipment. It is better to excavate it after breaking up by some other means. This will not only save the machine from damage but will make for better economy.

Operations When Machine is Not Stable

Do not carry out operations when the machine is not in a stable position. This will generate a twisting load on the frame and other parts and will reduce the service life of the machine.

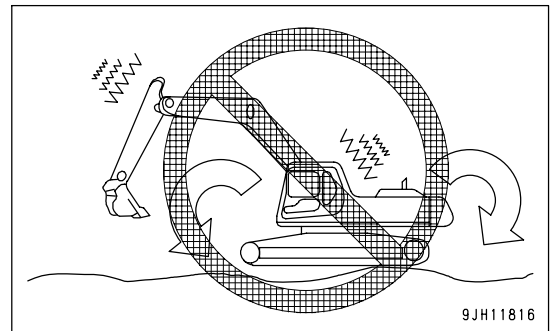


When carrying out operations in such a place, pile soil under the front of the track or take other measures to stabilize the machine before starting the operation.

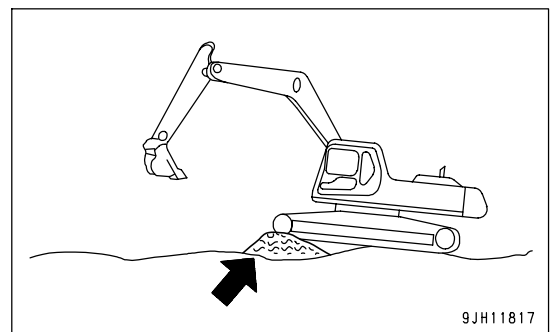


Swinging or Traveling When Rock Is on Top of Track Assembly

Do not swing the upper structure or travel if there is in the rock on top of the track assembly. It will contact the undercover or frame and cause damage. In the worst case, it may cause damage to the hydraulic equipment and result in a serious breakdown.

During operations, always check that there is no rock, pieces of rock, or mud on top of the track assembly.

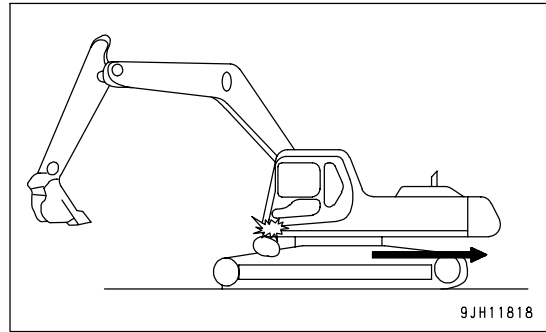
**Sudden Lever or Pedal Shifting High Speed Travel**

- (1) Do not operate the levers and pedals suddenly or take any other action to move the machine quickly.
- (2) Do not operate the levers or pedals suddenly from FORWARD (A) to REVERSE (B) (or from REVERSE (B) to FORWARD (A)).
- (3) Do not operate the levers or pedals suddenly (do not release them suddenly) to stop the machine when traveling at high speed.

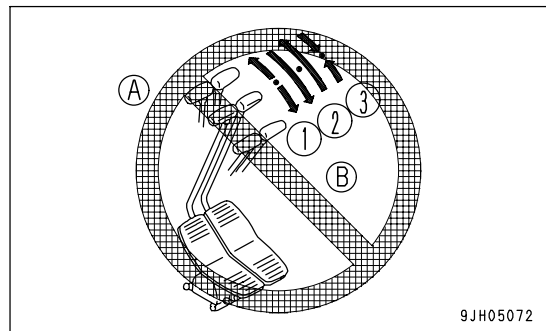


High-Speed Travel Operations on Rough Ground

Do not travel at high speed on rough ground or rocks. Each time the machine travels over rough parts of the ground surface, the thrusting load on the machine will increase and reduce the service life of the machine.

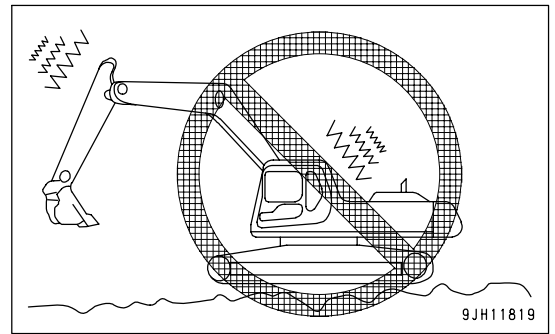


To protect the machine when traveling on rough ground or on rocks, there is a cushion structure in the idler (1), so set the idler facing in the direction of travel and travel at low speed.

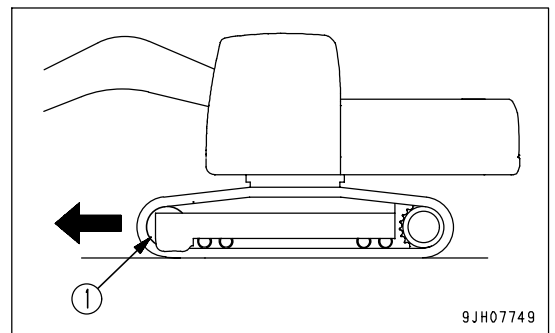

Long-Time Continuous Travel Operations

Do not travel continuously at high speed for 1.5 hours or more. The lubricating oil inside the track rollers and final drive will rise to a high temperature, and there is danger that this will cause damage to the oil seal or leakage of oil.

When traveling continuously for a long time, stop the machine for 30 minutes every 1.5 hours to allow the lubricating oil inside the track rollers and final drive to cool down.

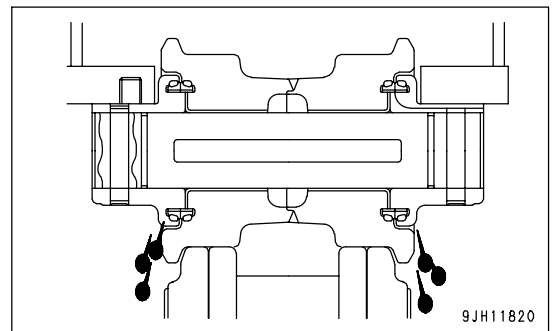


GENERAL OPERATION INFORMATION

Traveling

Traveling over boulders, tree stumps, or other obstacles will cause a big shock to the chassis (and in particular to the tracks), and this will cause damage to the machine. For this reason, always remove any obstacles or travel around them, or take other steps to avoid traveling over such obstacles as far as possible.


If there is no way to avoid traveling over an obstacle, reduce the travel speed, keep the work equipment close to the ground, and try to travel so that the center of the track passes over the obstacle.

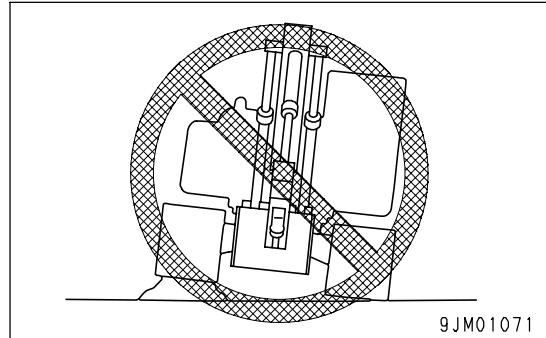

High Speed Travel

On uneven roadbeds such as rock beds or uneven roads with large rocks, travel at Lo speed. When traveling at high speed, set the idler in the forward direction.

- To switch the travel speed, press travel speed selector switch (1). The travel speed is displayed as Lo, Mi, or Hi on the monitor display.

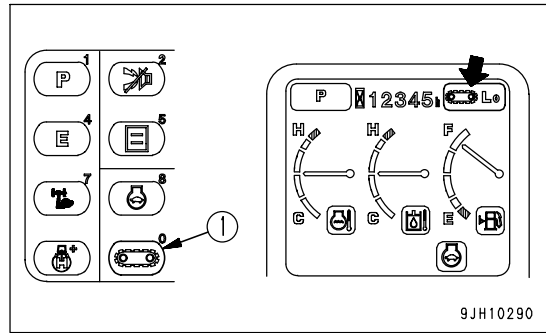

Precautions when Carrying Out Operations Continually with the Work Equipment in the Same Posture


Precautions when carrying out operations continually with the work equipment in the same posture.

When operations are carried out continuously with the cylinder operated slightly, operate the cylinder occasionally by a large amount to ensure greasing of the work equipment pins. This will prevent loss of grease at the pins.

Permissible Water Depth


NOTICE

When driving the machine out of water, if the angle of the machine exceeds 15° , the rear of the upper structure will go under water, and water will be thrown up by the cooling fan. This may cause the fan to break. Be extremely careful when driving the machine out of water.

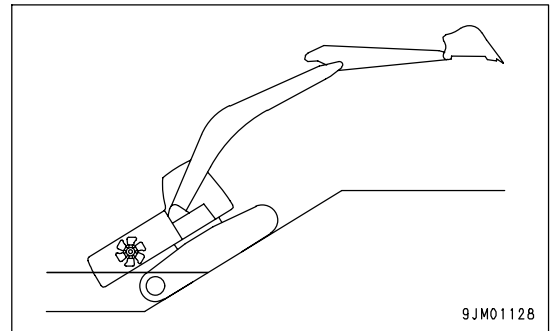

Do not drive the machine in water deeper than the center of carrier roller (1).



Supply grease to the parts which have been under water for a long time until the used grease is projected out of the bearings (around the bucket pin, in particular).

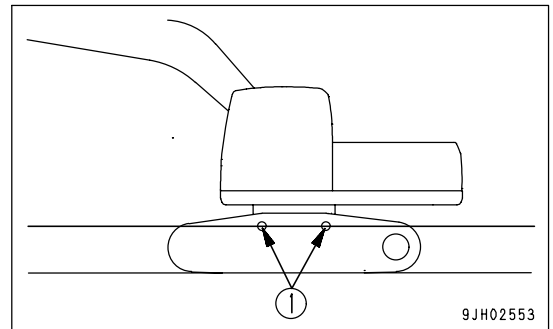


TRAVELING ON SLOPES

! WARNING


- Turning or operating the work equipment when working on slopes may cause the machine to lose its balance and turn over, so avoid such operations.
It is particularly dangerous to swing downhill when the bucket is loaded. If such operations have to be performed, pile soil to make a platform (A) on the slope so the machine is kept horizontal during operation.
- Do not work on a slope covered with the steel plates. Even with slight slopes there is a hazard that the machine may slip.
- Do not travel up or down steep slopes. There is a danger that the machine may turn over.
- When traveling, raise the bucket approx. 20 to 30 cm (8 to 12 in) from the ground.
Do not travel downhill in reverse.
- Never turn on slopes or travel across slopes.
Always go down to a flat place to perform these operations. It may be longer, but it will ensure safety.
- Always operate or travel in such a way that it is possible to stop safely at any time if the machine slips or becomes unstable.
- When traveling uphill, if the shoes slip or it is impossible to travel uphill using only the force of the tracks, do not use the pulling force of the arm to help the machine travel uphill. There is danger that the machine may turn over.

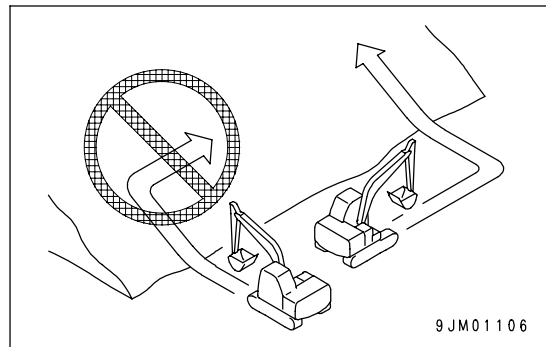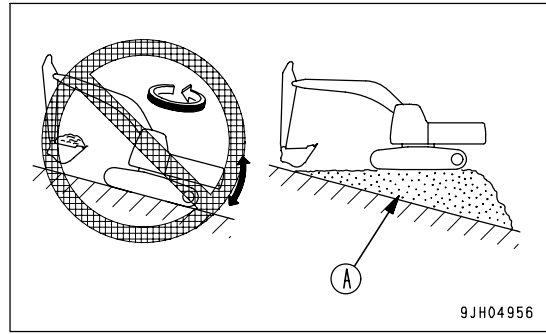


1. When traveling down steep hills, use the travel lever and fuel control lever to keep the travel speed low.
When traveling down slopes of more than 15°, set the work equipment in the posture shown in the figure on the right, and lower the engine speed.

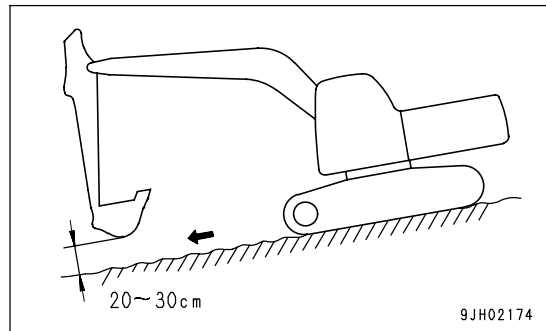

2. When traveling up a steep hill of more than 15°, set the work equipment to the posture shown in the diagram on the right.

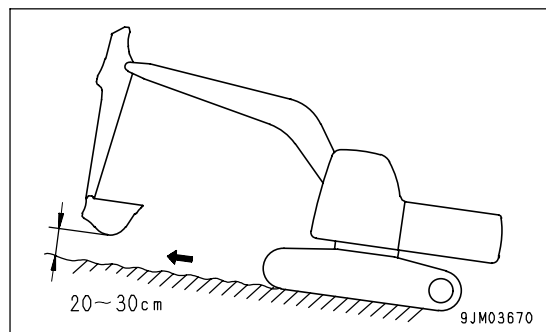

- When traveling up a steep slope, extend the work equipment to the front to improve the balance, keep the work equipment approximately 20 to 30 cm (8 to 12 in) above the ground, and travel at low speed.

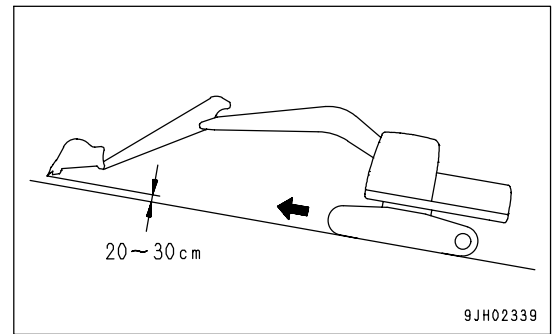

Traveling Downhill

Put the travel lever in the neutral position. This will cause the brake to be automatically applied.

Engine Stopped on Slope

If the engine stops when traveling uphill, move the travel levers to the neutral position, lower the bucket to the ground, stop the machine, then start the engine again.


Cab Doors on Slope

- If the engine stops when the machine is on a slope, never use the left work equipment control lever to carry out swing operations. The upper structure will swing under its own weight.
- Do not open or close the door when the machine is on a slope. The operating effort may suddenly change. Always keep the door locked in position when it is open and when it is closed.

ESCAPE FROM MUD

When operating, be careful not to get stuck in mud. If the machine gets stuck in mud, do as follows to get the machine out.

- Place the machine push-up switch at high-pressure set position (b). This will increase the pushing power of the boom and make it easier to escape.

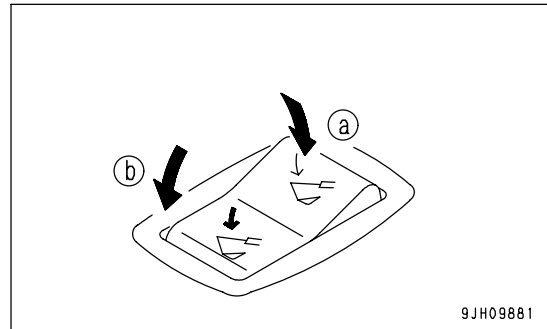


Track on One Side Stuck

NOTICE

When using the boom or arm to raise the machine, always have the bottom of the bucket in contact with the ground. The angle between the boom and arm should be 90° to 110° .


The same applies when using the bucket installed in the reverse direction.

When only one side is stuck in mud, use the bucket to raise the track, then lay boards or logs and drive the machine out.

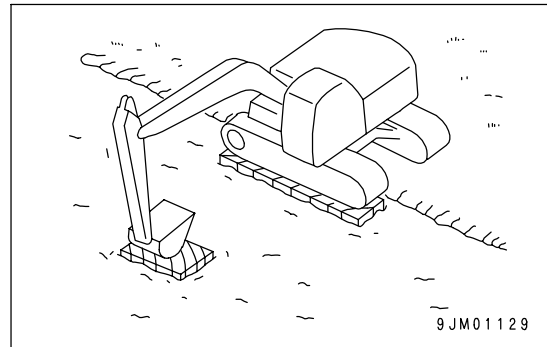

Tracks on Both Sides Stuck

When the tracks on both sides are stuck in mud and they slip, making it impossible for the machine to move, lay boards or logs as explained above, and dig the bucket into the ground in front. Then pull in the arm as in normal digging operations and put the travel levers in the FORWARD position to pull the machine out.

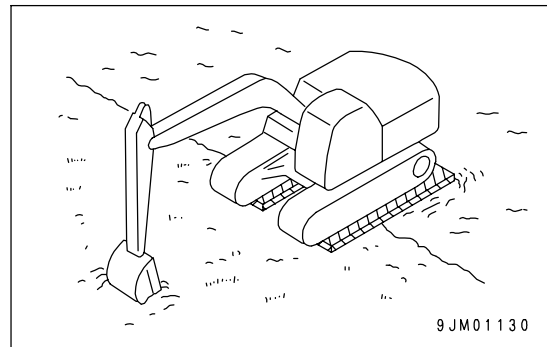

RECOMMENDED APPLICATIONS

In addition to the following, it is possible to further increase the range of applications by using various attachments.

Backhoe Work



A backhoe is suitable for excavating areas that are lower than the machine.

When the condition of the machine is as shown in the diagram on the right (angle between [bucket cylinder and link] and [arm cylinder and arm] is 90°), the maximum excavation force is obtained from the pushing force of each cylinder.

When excavating, use this angle effectively to optimize your working efficiency.

The range for excavating with the arm is from a 45° angle away from the machine to a 30° angle towards the machine.


There may be some differences depending on the excavation depth, but try to stay within the above range rather than operating the cylinder to the end of its stroke.

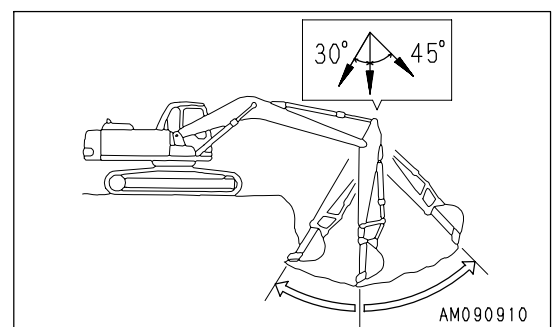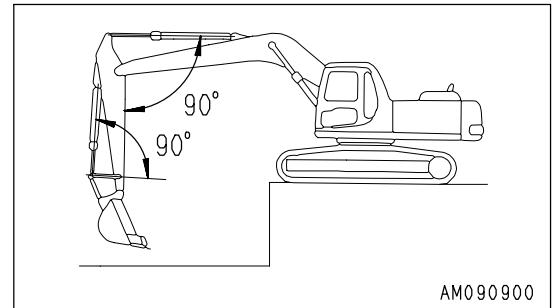

Ditching Work

Ditching work can be performed efficiently by attaching a bucket which matches the digging operation and then setting the tracks parallel to the line of the ditch to be excavated.


To excavate a wide ditch, first dig both sides and then finally remove the center portion.

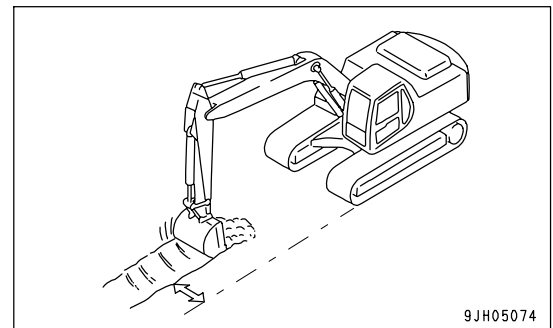

Loading Work

In places where the swing angle is narrow, work efficiency can be enhanced by locating the dump truck in a place easily visible to the operator.

Loading is easier and capacity greater if you begin from the front of the dump truck body than if loading is done from the side.

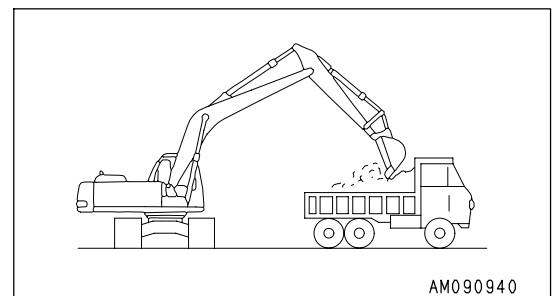

BUCKET REPLACEMENT



WARNING

- When pins are knocked in with a hammer, pieces of metal may fly and cause serious injury. When carrying out this operation, always wear goggles, hard hat, gloves, and other protective equipment.
- When the bucket is removed, place it in a stable condition.
- If pins are hit with a strong force, there is a hazard that the pin may fly out and injure people in the surrounding area. Make sure that there is no one in the surrounding area before starting the operation.
- When removing the pins, do not stand behind the bucket. In addition, be extremely careful not to put your foot under the bucket while standing at the side for the work.
- When removing or inserting pins, be extremely careful not to get your fingers caught.
- Never insert your fingers into the pin holes when aligning the holes.

Stop the machine on a firm and flat surface and do the work. When performing joint work, appoint a lead and follow that person's instructions and signals.

Replacement

1. Place the bucket in contact with a flat surface.


NOTICE

When removing the bucket, set the bucket cylinder (5) facing down as shown in the diagram in the right to prevent the front link (4) from jumping up under the weight of the bucket cylinder (5).

REMARK

When removing the pins, place the bucket so that it is in light contact with the ground.


If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

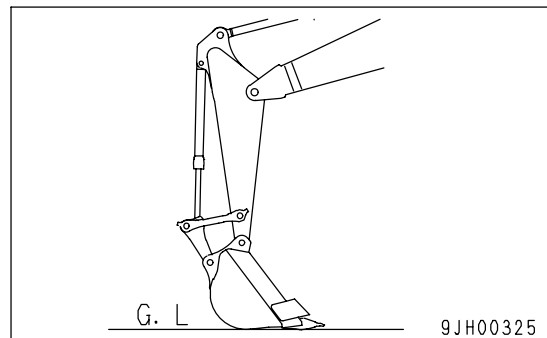


- Remove the stopper at the end of the pin, then pull out pins (A) and (B) and remove the bucket.

NOTICE

After removing the pins, make sure that mud or sand does not get on them. Dust seals are fitted at both ends of the bushings, be careful not to damage them.

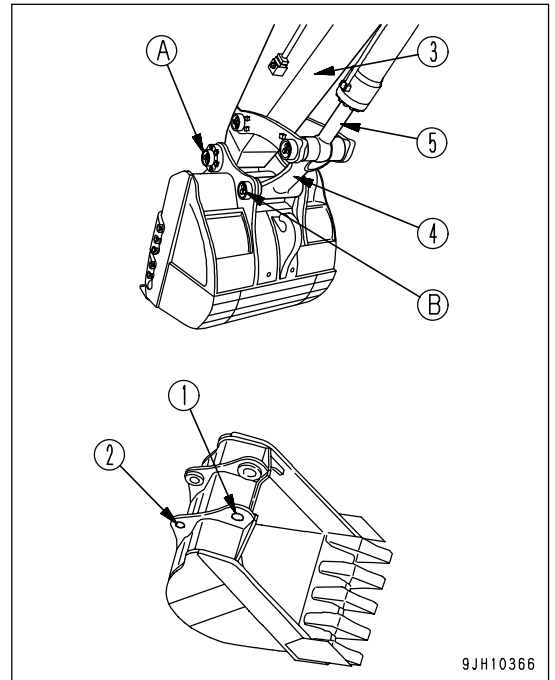


- Align the arm (3) with holes (1) of the replacement bucket and the link (4) with holes (2), then insert grease-coated pins (A) and (B) into hole (1) and hole (2) respectively.

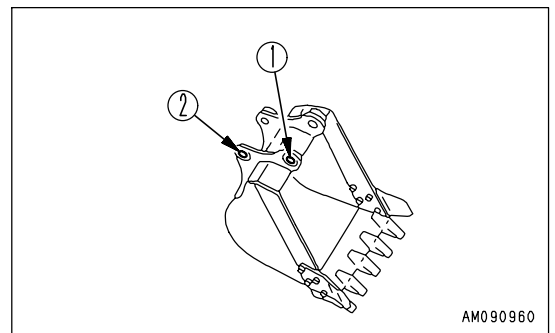

REMARK


- Carry out installation in the reverse order to removal.
- When installing bucket (6), it is easy to damage the O-ring (7), so fit O-ring (7) to bucket (6) in the position shown in diagram on the right. After inserting pin, fit the O-ring correctly in the groove.
- Install the stopper bolts and nuts for each pin, then grease the pin.
- Add fresh grease sufficiently until it is pushed out of the edge.
- If the dust seal is damaged when replacing the bucket, replace it with a new one. If the defective dust seal is not replaced, dirt and sand enter the pin portion and cause abnormal wear to the pin.

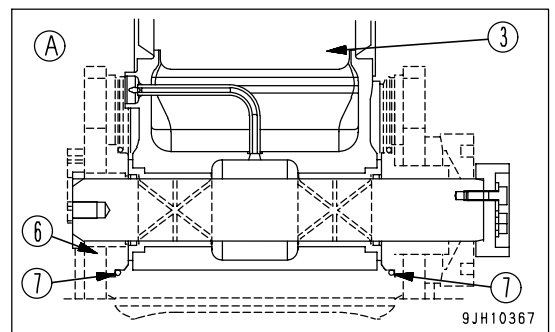



PARKING MACHINE

! WARNING


- Avoid stopping suddenly. Give yourself ample room when stopping.
- When stopping the machine, select flat hard ground and avoid dangerous places.
If it is unavoidably necessary to park the machine on a slope, insert blocks underneath the track shoes. As an additional safety measure, thrust the bucket into the ground.
- If the control lever is touched by accident, the machine may move suddenly, and this may lead to a serious accident.
Before leaving the operator's compartment, always set the lock lever securely to LOCK position.

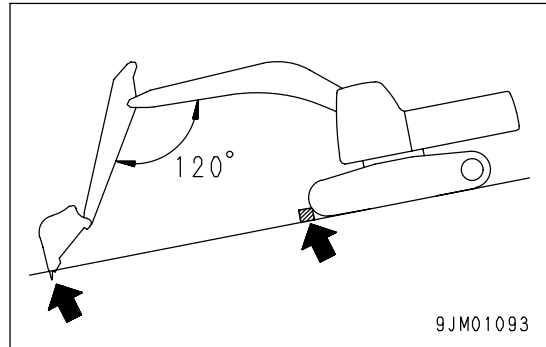


1. Put left and right travel levers (1) in the neutral position.
The machine stops.

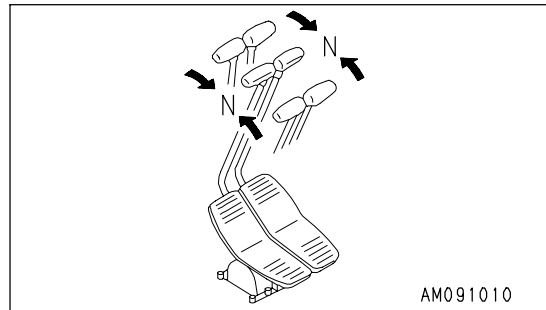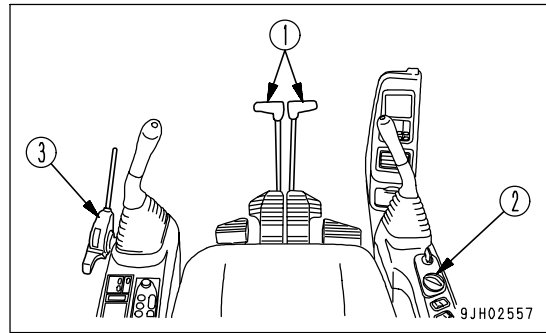


2. Turn fuel control dial (2) to low idling position (MIN) and lower the engine speed.

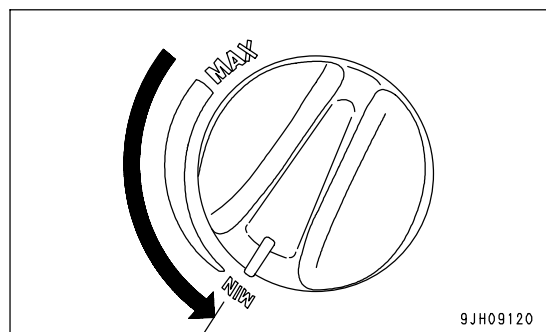

3. Lower the bucket horizontally until the bottom touches the ground.

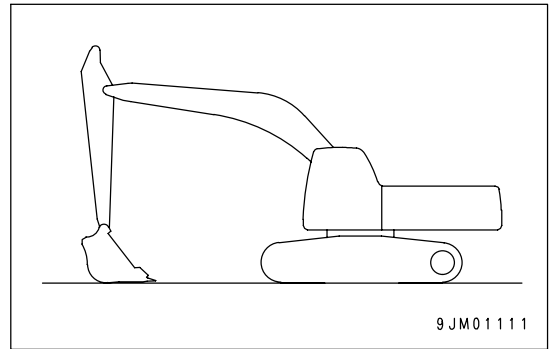


4. Set lock lever (3) in the LOCK position (L).

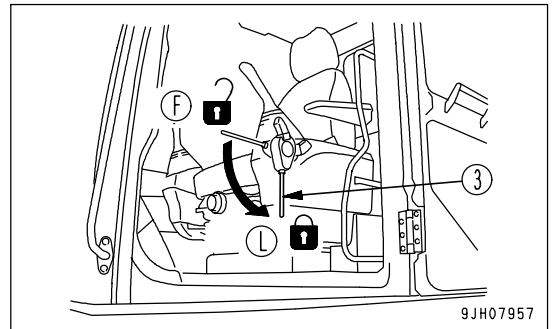

5. Check the engine cooling water temperature and engine oil pressure with the machine monitor.

- If the coolant temperature gauge is in the red range, allow it to cool until the indicator enters the black range, then stop the engine. For details of the inspection and action to take, see "TROUBLES AND ACTIONS (PAGE 3-154)".
- If the engine oil pressure monitor lights up, stop the engine immediately. For details of the inspection and action to take, see "TROUBLES AND ACTIONS (PAGE 3-154)".

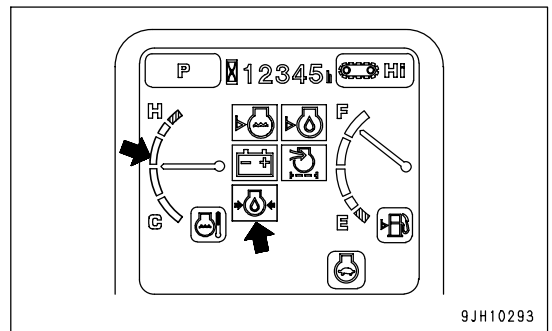

6. Stop the engine. For details on the procedure for stopping the engine, see "STOPPING THE ENGINE (PAGE 3-110)".


MACHINE INSPECTION AFTER DAILY WORK

1. Walk around the machine and check the work equipment, machine exterior, and undercarriage, also check for any leakage of oil or coolant. If any problems are found, repair them.
2. Fill the fuel tank.
3. Check the engine compartment for paper and debris. Clean out any paper and debris to avoid a fire hazard.
4. Remove any mud affixed to the undercarriage.

LOCKING

Always lock the following places.



- (1) Door of operator's cab
Always remember to close the window.
- (2) Fuel tank filler port cap
- (3) Engine hood (3 places)
- (4) Battery box cover (2 places)
- (5) Left side door of the machine (2 places)
- (6) Tool box side cover
- (7) Hydraulic tank filler port cap

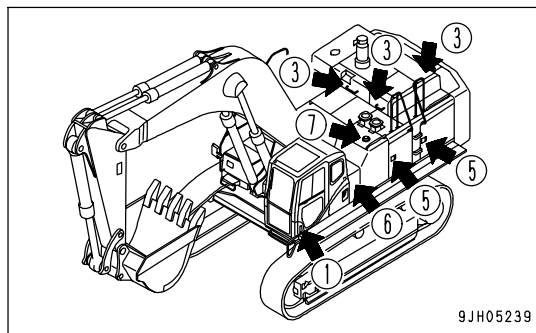

REMARK

Use the starting switch key to lock and unlock these places except (2).

The fuel tank filler port cap is locked with padlock (A).

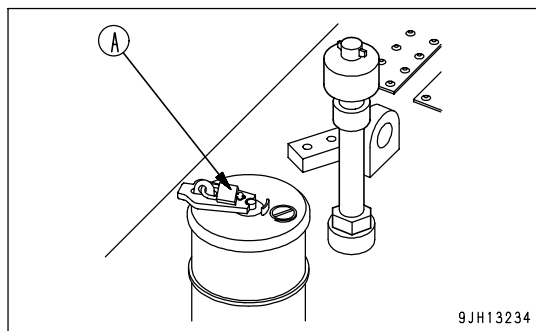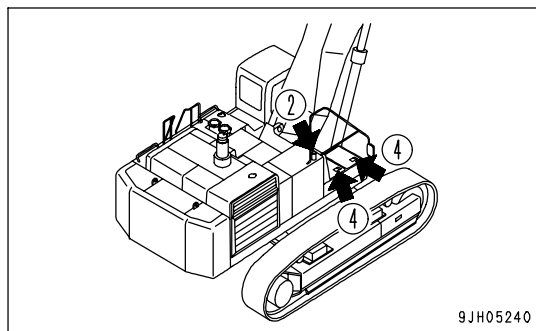

TRANSPORTATION

When transporting the machine, observe all related laws and regulations, and be careful to assure safety.

TRANSPORTATION PROCEDURE

Select the method of transportation to match the weight and dimensions given in "SPECIFICATIONS (PAGE 5-2)". Note that the weight and dimensions given in SPECIFICATIONS may differ according to the type of shoe or arm, or other attachments.

LIFTING MACHINE

! WARNING

- The operator carrying out the lifting operation using a crane must be a properly qualified crane operator.
- Never raise the machine with any worker on it.
- Always make sure that the wire rope is of ample strength for the weight of this machine.
- When lifting, keep the machine horizontal.
- When carrying out lifting operations, set the lock lever to the LOCK position to prevent the machine from moving unexpectedly.
- Never enter the area under or around a raised machine.

Never try to lift the machine in any posture other than the posture given in the procedure below or using lifting equipment other than in the procedure below.

There is a hazard that the machine may lose its balance.

NOTICE

This method of lifting applies to the standard specification machine.

The method of lifting differs according to the attachments and options installed.

For details of the procedure for machines that are not the standard specification, please consult your Komatsu distributor.

For weight, see "SPECIFICATIONS (PAGE 5-2)".

When lifting the machine, carry out the operation on flat ground as follows.

1. Lifting machine

Fit wire rope (cable) to lifting holes (2) in the bracket installed to the mounting hole of the counterweight and boom foot pin (1).


- Lifting weight: 26.5 tons

(a): Pin diameter at lifting position $\varnothing 140$ mm (5.5in)


(b): Hole diameter at lifting position $\varnothing 75$ mm (3.0in)

(c): 2782mm (9ft 2in)

2. The mark for the center of gravity installed to the machine shows the position of the center of gravity in the condition shown in the diagram on the right.

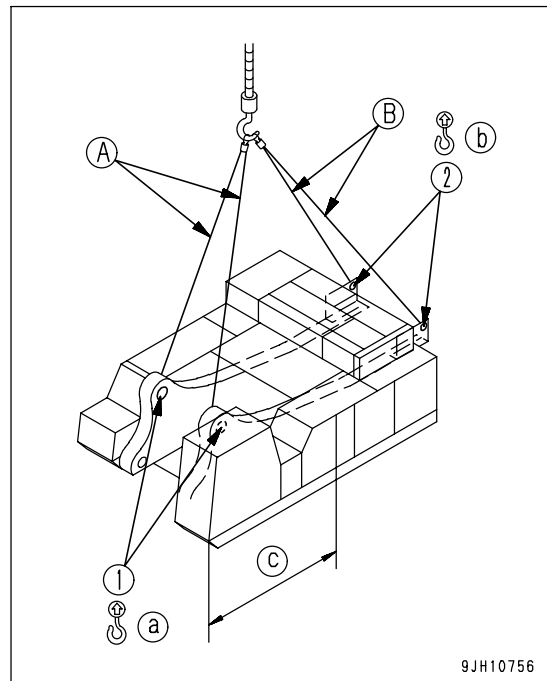

(d): Distance between centers (horizontal) measurement 4507mm (4ft 9in)

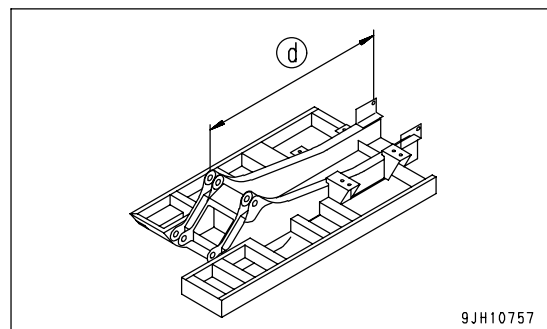

3. Combination of wire rope (cable) length

The length of wire rope (cable) is the length from the pin to center of the hole.

- When using the following wire rope, use wire rope with more length than given in chart below.
- In addition, select a wire rope length that will bring the lifting position directly above the center of gravity of the machine.

	Combination
(A)	6.8m(22 ft 4 in)
(B)	8m(26 ft 3 in)

4. After the machine comes off the ground, check the hook condition and the lifting posture, and then lift slowly.


SHIPPING MACHINE INFORMATION

! WARNING


- When loading the machine, choose firm level ground. Keep well away from the road shoulder.
- Run the engine at low speed and operate slowly.

After placing the machine on the specified position of the trailer, secure it according to the following procedure.

1. Set all the control levers securely at LOCK position (L) with lock lever (1).
2. Stop the engine and pull out the starting switch key.
3. Lock the window glass, roof window, front window, operator's seat door, side cover, engine hood, and battery box cover securely.

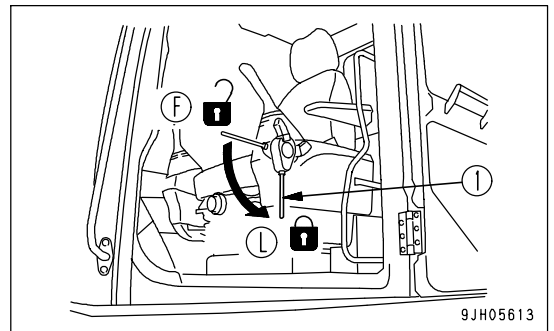


4. When transporting the machine, place a rectangular block under the front and rear track shoes to prevent the machine from moving. Furthermore fasten the machine with chains or wire ropes of sufficient strength. Make sure particularly that the machine will not slip sideways.

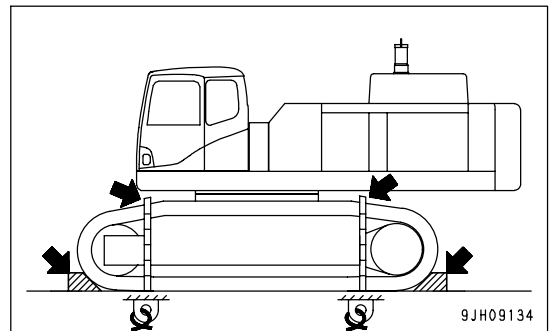


TRANSPORTATION POSTURE

This machine can be divided into three or four units for transportation. When transporting, contact your Komatsu distributor.

Three Units for Transportation

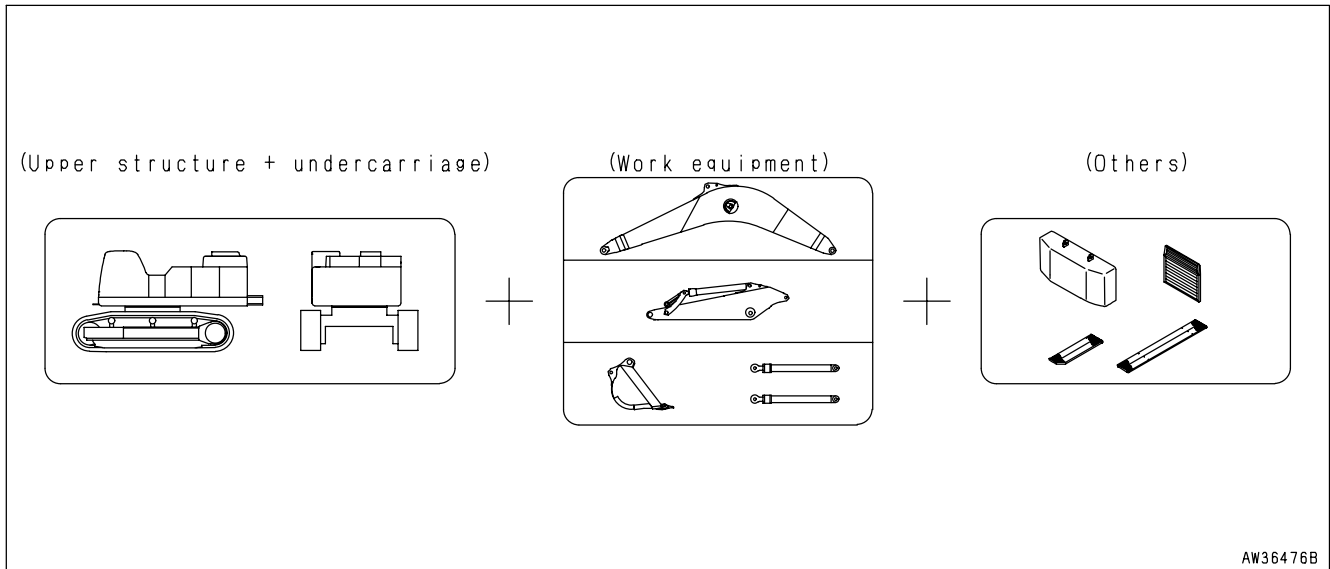


Four Units for Transportation

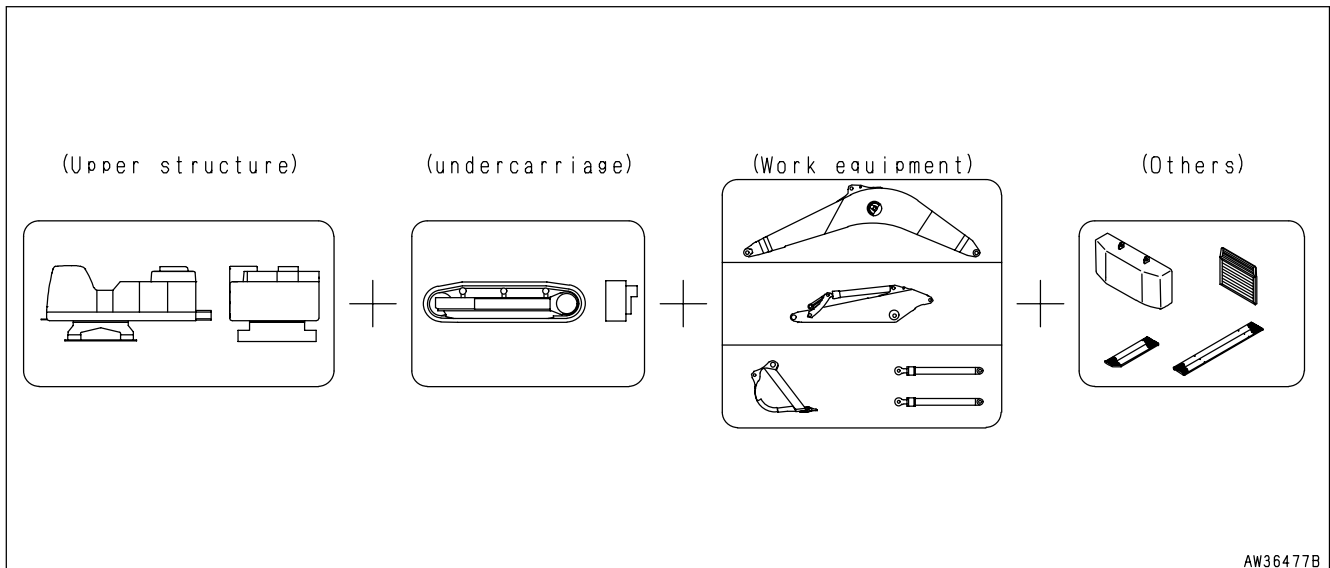

Posture for Each Unit

Upper Structure + Undercarriage


Item	Unit	PC800-8 PC800SE-8	PC850-8 PC850SE-8	PC800LC-8
Overall width	mm (ft in)	3,490 (11'5")	3,535 (11'7")	3,490 (11'5")
A1	mm (ft in)	3,890 (12'9")		
A2	mm (ft in)	-		
B	mm (ft in)	6,900 (22'8")	6,900 (22'8")	7,160 (23'6")
Weight	kg (lb)	46,700 (102,974)	47,300 (104,297)	49,400 (108,927)

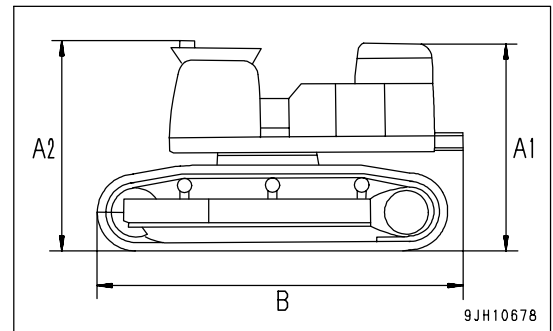

Upper Structure

Secure the upper structure to the platform with a chain and block.


Item	Unit	PC800-8 PC800SE-8 PC800LC-8	PC850-8 PC850SE-8
Overall width	mm (ft in)	3,295 (10'10")	
A1	mm (ft in)	3,005 (9'10")	
A2	mm (ft in)	-	
B	mm (ft in)	6,040 (19'10")	
Weight	kg (lb)	25,700 (56,669)	25,800 (56,889)

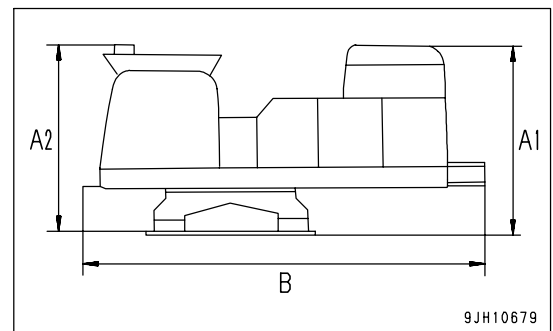

Undercarriage

If there is a warning tag hanging on the work equipment control lever, do not start the engine.


Item	Unit	PC800-8 PC800SE-8 (610mm SHOE)	PC850-8 PC850SE-8 (610mm SHOE)	PC800LC (810mm SHOE)
Q'ty	-	2	2	2
A	mm (ft in)	1,445 (4'9")	1,445 (4'9")	1,445 (4'9")
B	mm (ft in)	5,810 (19'1")	5,810 (19'1")	6,330 (20'9")
C	mm (ft in)	980 (3'3")	1000 (3'3")	980 (3'3")
Weight	kg (lb)	10,450x2 (23,042x2)	10,700x2 (23,594x2)	11,800x2 (26,019x2)

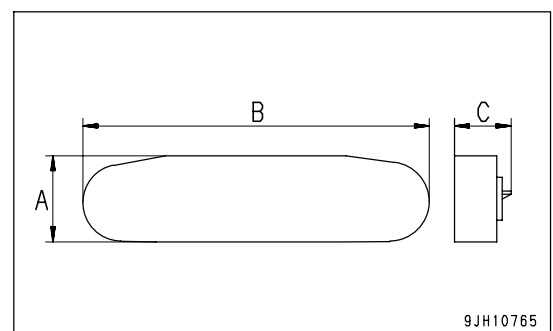

Work Equipment


• Boom

Item	Unit	PC800-8 PC800LC-8	PC800SE -8	PC850-8	PC850SE -8
A	mm (ft in)	8,530 (27'12")	7,430 (24'5")	8,380 (27'6")	7,430 (24'5")
B	mm (ft in)	2,800 (9'2")	2,695 (8'10")	2,695 (8'10")	2,695 (8'10")
Overall width	mm (ft in)	1,500 (4'11")			
Weight	kg (lb)	7,900 (17,420)	7,300 (16,097)	8,100 (17,861)	7,300 (16,097)

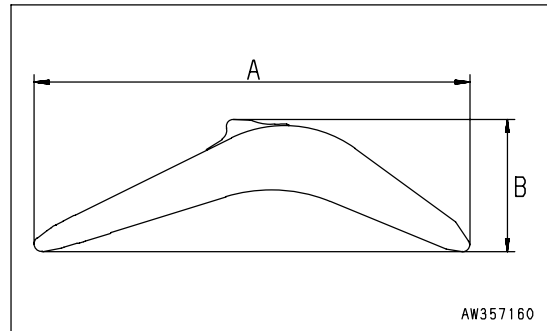


• Arm

Item	Unit	PC800-8 PC800LC-8	PC800SE -8	PC850-8	PC850SE -8
A	mm (ft in)	5,120 (16'10")	4,080 (13'5")	4,770 (15'8")	4,080 (13'5")
B	mm (ft in)	1,345 (4'5")	1,695 (5'7")	1,420 (4'8")	1,695 (5'7")
Overall width	mm (ft in)	750 (2'6")			
Weight	kg (lb)	3,900 (8,600)	4,900 (10,805)	4,500 (9,923)	4,900 (10,805)

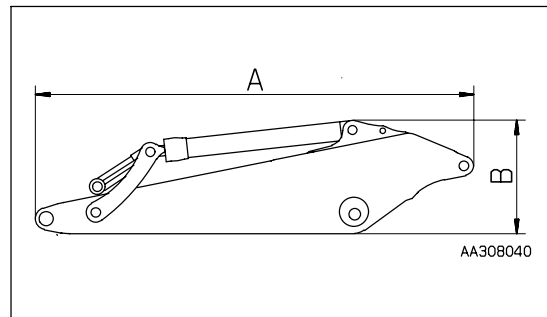


• Bucket (with side cutter, shroud)

Item	Unit	PC800-8 PC800LC-8	PC800SE -8	PC850-8	PC850SE -8
A	mm (ft in)	2,365 (7'9")	2,200 (7'3")	2,390 (7'10")	2,200 (7'3")
B	mm (ft in)	1,850 (6'1")	1,950 (6'5")	1,880 (6'2")	1,950 (6'5")
Overall width	mm (ft in)	1,850 (6'1")	2,105 (6'11")	2,230 (7'4")	2,150 (7'1")
Weight	kg (lb)	2,900 (6,395)	3,400 (7,497)	3,800 (8,379)	4,300 (9,482)

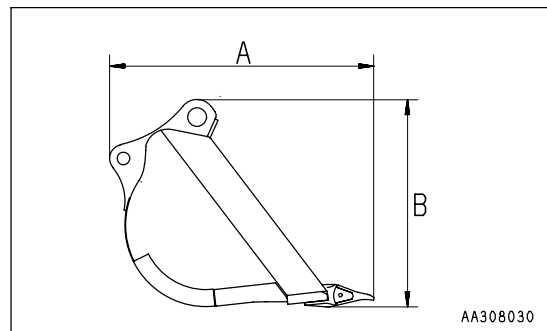


- Boom cylinder (same for all models)

Item	Unit	PC800,PC800SE,PC800LC-8 PC850,PC850SE-8
Q'ty	-	2
A	mm (ft in)	3,235 (10'7")
Weight	kg (lb)	775x 2 (1,709x2)

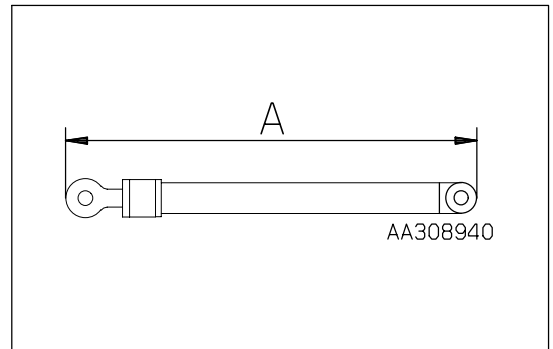

- Arm cylinder


Item	Unit	PC800-8 PC800LC-8	PC800SE-8 PC850-8 PC850SE-8
Q'ty	-	1	2
A	mm (ft in)	3,500 (11'6")	2,590 (8'6")
Weight	kg (lb)	870 (1,918)	493x2 (1,087x2)

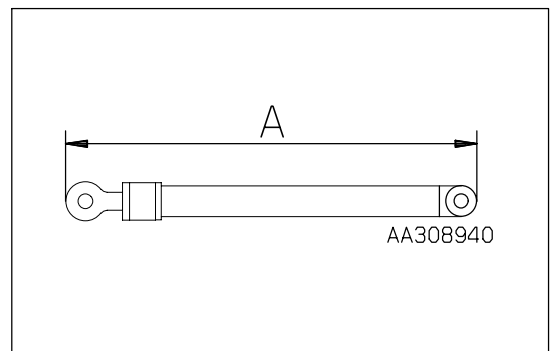

Others


- Counterweight

Item	Unit	PC800-8 PC800SE-8	PC850-8 PC850SE-8	PC800LC-8 (OPT)
A	mm (ft in)	1,530 (5'0")	1,530 (5'0")	1,530 (5'0")
B	mm (ft in)	3,195 (10'6")	3,195 (10'6")	3,195 (10'6")
C	mm (ft in)	930 (3'1")	930 (3'1")	930 (3'1")
Weight	kg (lb)	9,800 (21,609)	11,850 (26,129)	13,600 (29,988)

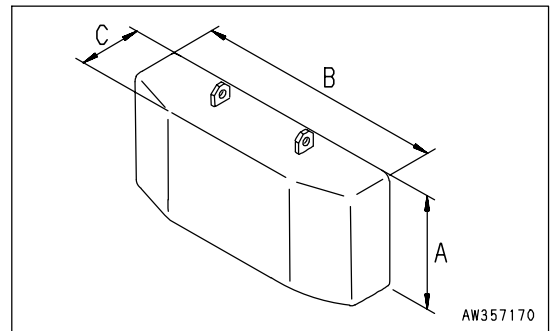

- OPG(PC850-8, PC850SE-8 only)


Item	Unit	PC850-8,PC850SE-8
A	mm (ft in)	1,820 (5'12")
B	mm (ft in)	250 (0'10")
C	mm (ft in)	980 (3'3")
Weight	kg (lb)	55 (121)

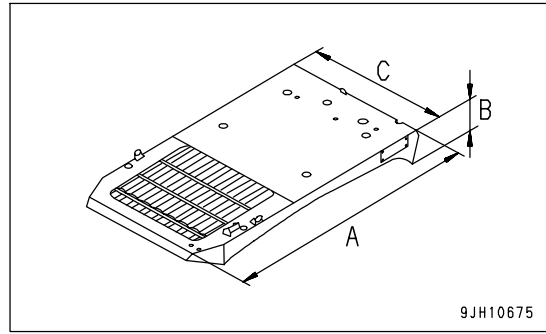

9JH10675

- Radiator duct (same for all models)


Item	Unit	PC800,PC800SE,PC800LC-8 PC850,PC850SE-8
A	mm (ft in)	1,790 (5'10")
B	mm (ft in)	70 (0'3")
C	mm (ft in)	1,790 (5'10")
Weight	kg (lb)	81 (179)

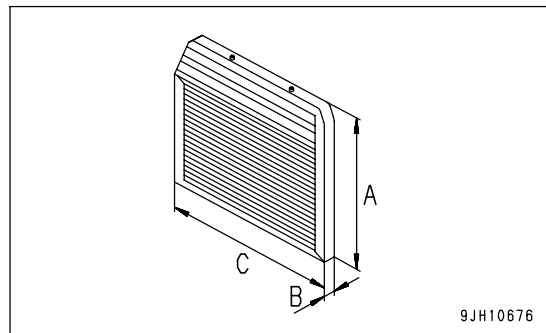

9JH10676

- Travel motor cover (same for all models)


Item	Unit	PC800,PC800SE,PC800LC-8 PC850,PC850SE-8
Q'ty	-	2
A	mm (ft in)	1,175 (3'10")
B	mm (ft in)	315 (1'0")
C	mm (ft in)	995 (3'3")
Weight	kg (lb)	120x2 (265x2)

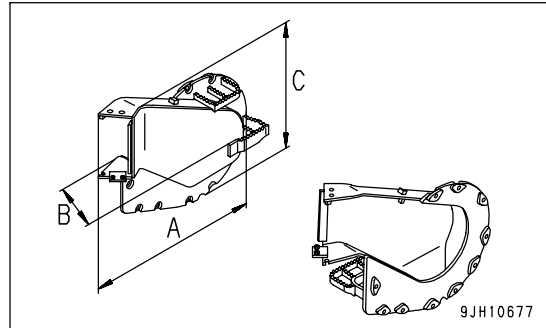

9JH10677


- Catwalk (1) (same for all models)

Item	Unit	PC800,PC800SE,PC800LC-8 PC850,PC850SE-8
A	mm (ft in)	3,200 (10'6")
B	mm (ft in)	495 (1'7")
Weight	kg (lb)	50 (110)

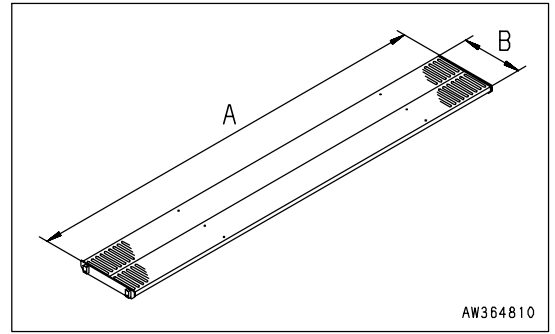

- Catwalk (2) (same for all models)

Item	Unit	PC800,PC800SE,PC800LC-8 PC850,PC850SE-8
A	mm (ft in)	1,900 (6'3")
B	mm (ft in)	495 (1'7")
Weight	kg (lb)	30 (66)

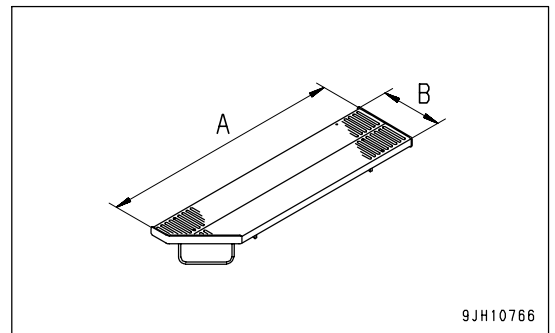

PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE




WARNING


Never use the machine for operations with the track frame retracted.

Reducing Track Gauge


1. Remove center frame mounting bolts (1). (one side, front + rear: 20 bolts)

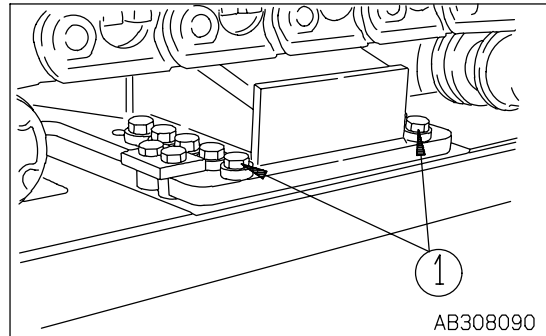

2. Swing the upper structure so that it is at 90° on the side of track frame (A) to be retracted, then use the work equipment to jack up the track frame.
3. Set blocks (B) (20 to 30 cm (8 to 12 in) wooden blocks) towards the outside of track frame (A), then use the boom cylinder to lower the machine slowly. The track frame (A) will slide and stop when it contacts the stopper.

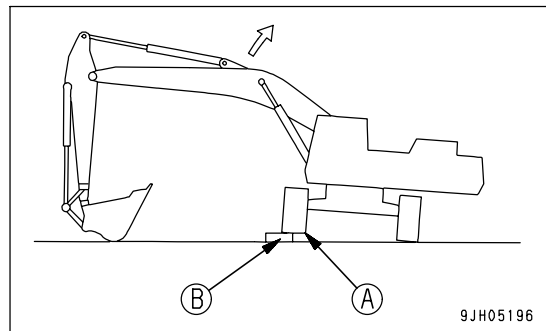


4. Lower the machine carefully and install bolts (2). (one side, front + rear: 8 bolts out of bolts (1))
Tightening torque: 2452 - 3040 Nm
(250 - 310 kgm, 1810 - 2245 lbf)
5. Follow the same procedure to retract the track frame on the other side.

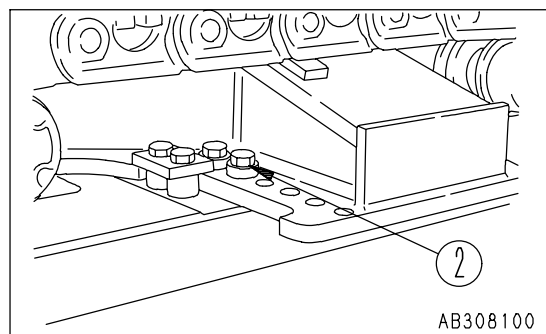

Increasing Track Gauge


1. Remove center frame mounting bolts (2) (one side, front + rear: 8 bolts) from the front and rear of the track frame on the side to be extended.

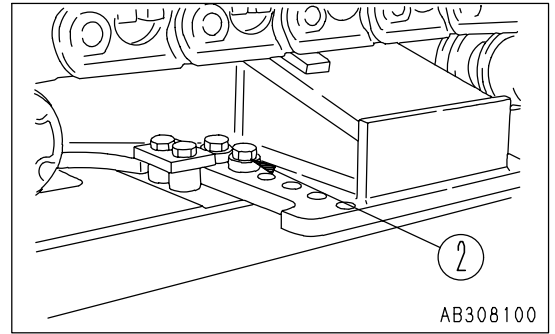


2. Swing the upper structure so that it is at 90° on the opposite side to track frame (A) to be extended.

REMARK

Height H of the track frame being raised should be less than 50 mm (2 in). Take care not to raise the track frame so much that the stopper bolt is distorted.

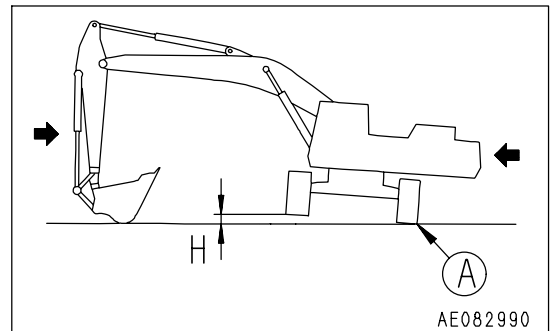

3. Using the arm, pull the machine to the front.
The track frame will slide.
4. Extend the track frame until it comes into contact with the stopper, then lower the machine slowly to the ground. Install bolts (1) (one side, front + rear: 20 bolts) and tighten to specified torque.
Tightening torque: 2452 - 3040 Nm
(250 - 310 kgm, 1810 - 2245 lbft)
5. Follow the same procedure to retract the track frame on the other side.

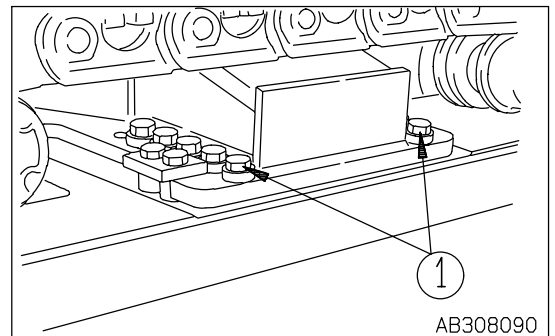

- Stop the machine on firm level ground when extending or retracting the track frame gauge width.
- Never operate the cylinders suddenly when extending or retracting the track frame gauge width. It is dangerous if they are operated suddenly.

COLD WEATHER OPERATION

COLD WEATHER OPERATION INFORMATION

If the temperature becomes low, it becomes difficult to start the engine, and the coolant may freeze, so do as follows.

Fuel and Lubricants

Change to fuel and oil with low viscosity for all components. For details of the specified viscosity, see "RECOMMENDED FUEL, COOLANT, AND LUBRICANT (PAGE 4-9)".

Cooling System Coolant



WARNING

- Antifreeze is toxic. Be careful not to get it into your eyes or on your skin. If it should get into your eyes or on your skin, wash it off with large amounts of fresh water and see a doctor at once.
- When changing the coolant or when handling coolant containing antifreeze that has been drained when repairing the radiator, please contact your Komatsu distributor or request a specialist company to carry out the operation. Antifreeze is toxic. Do not let it flow into drainage ditches or spray it onto the ground surface.
- Antifreeze is flammable. Do not bring any flame close. Do not smoke when handling antifreeze.

NOTICE

Please use Komatsu genuine supercoolant (AF-NAC) for the coolant. As a basic rule, we do not recommend the use of any coolant other than Komatsu genuine supercoolant.

For details of the antifreeze mixture when changing the coolant, see "CLEAN INSIDE OF COOLING SYSTEM (PAGE 4-23)".

Battery



WARNING

- The battery generates flammable gas. Do not bring fire or sparks near the battery.
- Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with a large amount of water and consult a doctor.
- Battery electrolyte dissolves paint. If it gets on the bodywork, wash it off immediately with water.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is danger that the battery may explode.
- Battery electrolyte is toxic. Do not let it flow into drainage ditches or spray it on to the ground surface.

When the ambient temperature drops, the capacity of the battery will also drop. If the battery charge ratio is low, the battery electrolyte may freeze. Maintain the battery charge as close as possible to 100%. Insulate it against cold temperature to ensure the machine can be started easily the next morning.

REMARK

Measure the specific gravity and calculate the charging rate from the following conversion table.

Charging Rate (%)	Electrolyte Temperature	20°C (68°F)	0°C (32°F)	-10°C (14°F)	-20°C (-4°F)
	100		1.28	1.29	1.30
90		1.26	1.27	1.28	1.29
80		1.24	1.25	1.26	1.27
75		1.23	1.24	1.25	1.26

- As the battery capacity drastically drops in low temperatures, cover or remove the battery from the machine, store the battery in a warm place, and install it again the next morning.
- If the electrolyte level is low, add distilled water in the morning before beginning work. Do not add water after the day's work to prevent diluted electrolyte in the battery from freezing during the night.

Monitor


A feature of the liquid crystal monitor is that the screen becomes dark and is difficult to read in cold weather (particularly with the starting switch ON).

In this case, adjust the brightness and contrast of the screen.


For details, see "Liquid Crystal Monitor Adjustment Switch (PAGE 3-31)".

If the screen is dark, increase the brightness and contrast (extend the scale in the + Δ direction) to make the screen brighter and easier to read.

Brightness

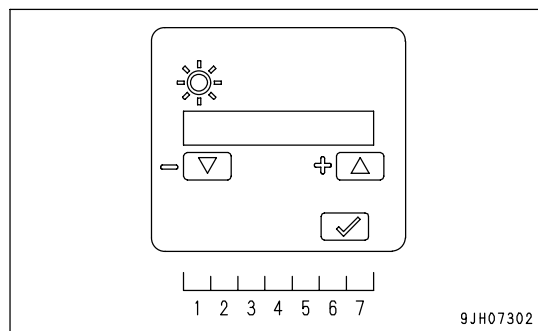

Contrast

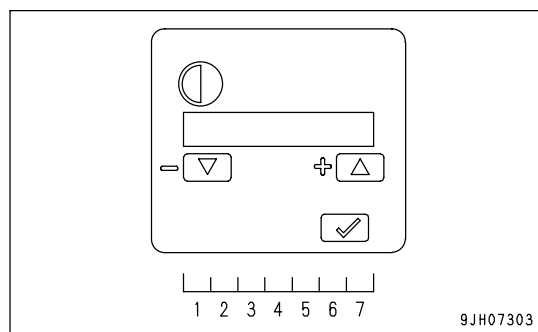

Guideline for bar display for brightness and contrast in cold weather

Ambient temperature	Brightness	Contrast
-10°C (14°F)	7 (max)	5 - 4
-20°C (-4°F)	7	7 - 6

AFTER DAILY WORK COMPLETION



WARNING

Performing idle-running of the tracks is dangerous, stay well away from the tracks.


To prevent mud, water, or the undercarriage from freezing and making it impossible for the machine to move on the following morning, observe the following precautions.

- Remove all the mud and water from the machine body. In particular, wipe the hydraulic cylinder rods clean to prevent damage to the seal caused by mud, dirt, or drops of water on the rod from getting inside the seal.
- Park the machine on hard, dry ground.

If this is impossible, park the machine on boards.

The boards prevent the tracks from freezing to the ground, and allow the machine to be moved the next morning.

- Open the drain valve and drain any water collected in the fuel system to prevent it from freezing.
 - Fill the fuel tank to capacity. This minimizes moisture condensation in the tank when the temperature drops.
 - After operation in water or mud, remove water from undercarriage as described below to extend undercarriage service life.
1. Swing 90° with engine at low idle and bring the work equipment to the side of the track.
 2. Jack up the machine until the track is raised slightly from the ground. Rotate the track under no load. Repeat this procedure on both the left and right sides.

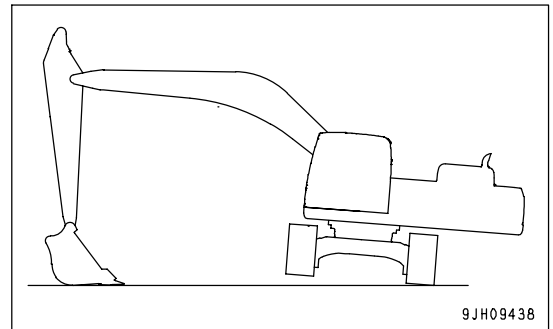

AFTER COLD WEATHER SEASON

When the season changes and the weather becomes warmer, do as follows.

- Replace the fuel and oil for all parts with oil of the viscosity specified.
For details, see "RECOMMENDED FUEL, COOLANT, AND LUBRICANT (PAGE 4-9)".


LONG TERM STORAGE

BEFORE STORAGE

NOTICE

To protect the hydraulic cylinder piston rod while in storage, keep the work equipment in the posture shown at right.

(This prevents rust from developing on the piston rod)

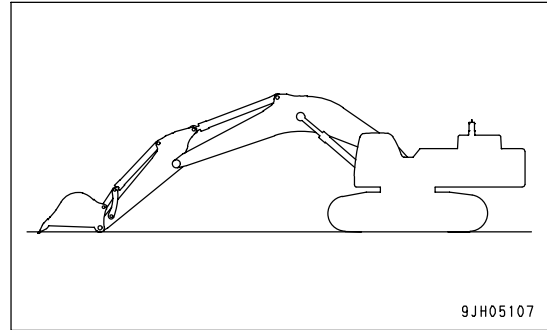

When putting the machine in storage for a long time (more than one month), do as follows.

- Clean and wash all parts, then store the machine indoors. If the machine has to be stored outdoors, select level ground and cover the machine with canvas.
- Completely fill the fuel tank. This prevents moisture from collecting.
- Lubricate and change the oil before storage.
- Coat the exposed portion of the hydraulic cylinder piston rod with grease.
- Disconnect the negative terminals of the battery and cover it or remove it from the machine and store it separately.
- Lock each control lever and pedal with the lock lever and pedal lock.
- Set the stop valve to the LOCK position on machines ready for attachments. Install the blind plugs to the elbows.
- Set the selector valve on the machines which can install attachments to the "Where no attachment is mounted" position.
- To prevent rust, fill with Komatsu genuine supercoolant (AF-NAC) to give a density of at least 30% for the engine coolant.

DURING STORAGE



WARNING

If it is necessary to perform the rust-prevention operation while the machine is indoors, open the doors and windows to improve ventilation and prevent gas poisoning.

- During storage, operate and move the machine for a short distance once a month so that a new film of oil will coat moving parts. At the same time, also charge the battery.
- For machines equipped with an air conditioner, operate the air conditioner for three to five minutes once a month to circulate lubricant to all parts of its compressor. Be sure to idle the engine at low speed and operate the air conditioner. Also check the quantity of refrigerant twice a year.
- When operating the work equipment, wipe off all the grease from the hydraulic cylinder rods.
- If the machine is equipped with an air conditioner, operate the air conditioner for 3 to 5 minutes once a month to lubricate all parts of the air conditioner compressor. Always run the engine at low idle when doing this. In addition, check the refrigerant level twice a year.

AFTER STORAGE

NOTICE

If the machine has been stored without carrying out the monthly rust-prevention operation, consult your Komatsu distributor before using it.

When using the machine after long-term storage, do as follows before using it.

- Wipe off the grease from the hydraulic cylinder rods.
- Add oil and grease at all lubrication points.
- When the machine is stored for a long period, moisture in the air will mix with the oil. Check the oil before and after starting the engine. If there is water in the oil, change all the oil.

STARTING MACHINE AFTER LONG-TERM STORAGE

When starting the engine after long-term storage, carry out the warming-up operation thoroughly. For details, see "Engine Warm Up (PAGE 3-102)".

TROUBLES AND ACTIONS

RUNNING OUT OF FUEL

When starting the engine again after running out of fuel, fill with fuel, then bleed the air from the fuel system before starting the engine.

Always watch the fuel level and be careful not to run out of fuel.

If the engine has stopped because of lack of fuel, it is necessary to use the priming pump to bleed the air completely from the fuel circuit.




Procedure for Bleeding Air




CAUTION

- This engine consists of higher precision parts than on the conventional fuel injection pump and nozzle, so if dirt gets in, it will cause problems. If there is any dirt stuck to the fuel line, use fuel to wash it off completely.
- Be careful when opening the air bleed plug at the fuel filter head. The system is still under pressure and fuel may spurt out.

1. Loosen air bleed plug (A) at the fuel main filter head (1).
2. Loosen wing nut (4) holding lever (3) of priming pump (2).
3. Push in lever (3) repeatedly.
Check that bubbles come out with the fuel from air bleed plug (A).
4. Tighten air bleed plug (A).
Tightening torque: 4.9 to 6.9 Nm (0.5 to 0.7 kgm, 3.6 to 5.1 lbft)
5. Tighten wing nut (4) securely to lock lever (3) in position.
Target tightening torque: 11.8 Nm
(1.2 kgm, 8.7 lbft)

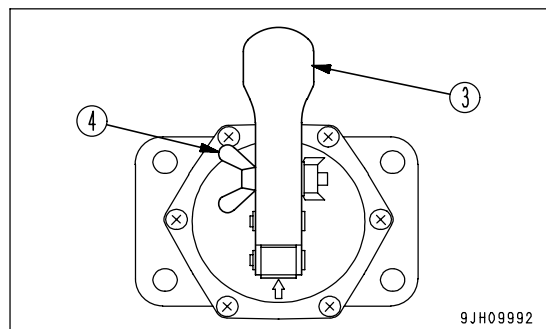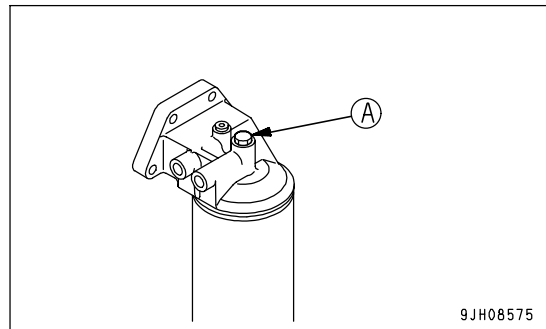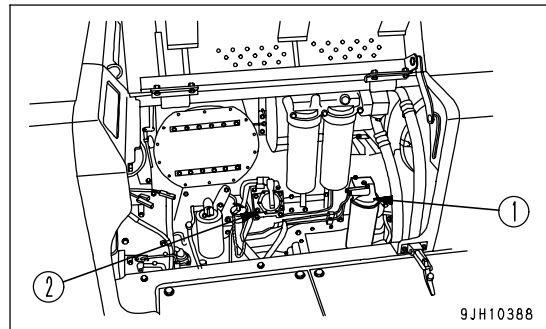

6. Carry out priming approx. 50 times with priming pump (5) at the side of the supply pump.


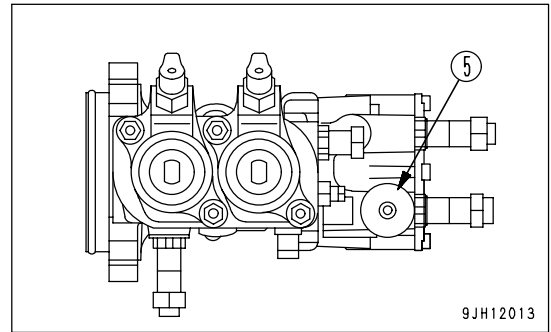


7. Turn the key in the starting switch to the START position and start the engine.
When doing this, do not crank the starting motor continuously for more than 20 seconds. If the engine does not start, wait for at least 2 minutes, then try again. Perform this operation a maximum of 4 times.
8. If the engine does not start, repeat the operation from Step 1.

PHENOMENA THAT ARE NOT FAILURES

Note that the following phenomena are not failures:

- When the arm control lever is operated to the IN position and the work equipment is lowered under no load from a high position, the arm speed will drop momentarily when the arm is more or less at the vertical position.
- When the bucket control lever is operated to the CURL position and the work equipment is lowered under no load from a high position, the bucket speed will drop momentarily when the bucket teeth are more or less at the horizontal position.
- The bucket or arm will fluctuate by itself during heavy-duty digging operations.

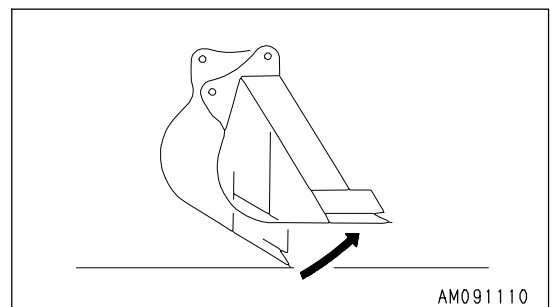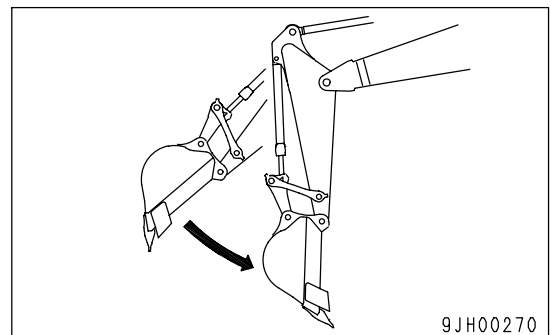

- When starting or stopping the swing, noise will be emitted from the brake valve.
- When going down a steep slope at low speed, a noise will be emitted from the travel motor brake valve.


TOWING THE MACHINE



WARNING

Serious injury or death could result if a disabled machine is towed incorrectly or if there is a mistake in the selection or inspection of the wire rope.

- Always check that the wire rope used for towing has ample strength for the weight of the machine being towed.
- Never use a wire rope which has cut strands (A), reduced diameter (B), or kinks (C). There is danger that the rope may break during the towing operation.
- Always wear leather gloves when handling wire rope.
- Never tow a machine on a slope.
- During the towing operation, never stand between the towing machine and the machine being towed.
- Operate the machine slowly and be careful not to apply any sudden load to the wire rope.

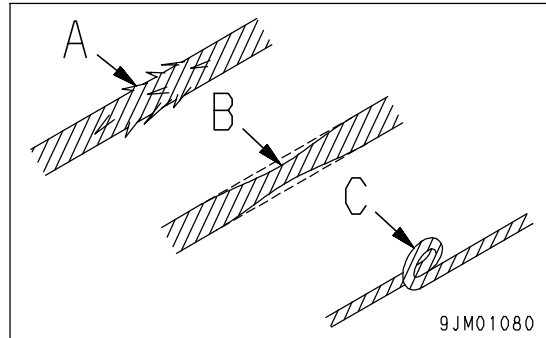



NOTICE

The maximum towing capacity for this machine is 585,000N(59,600kgf).

Always carry out towing operations within the maximum towing capacity.

- If the machine sinks in mud and cannot get out under its own power, or if the drawbar pull of the excavator is being used to tow a heavy object, use a wire rope as shown in the diagram on the right.
- Place pieces of wood between wire ropes and body to prevent damage to ropes and body.
- Hold the wire rope level and direct it straight to the track frame.
- When towing a machine, travel at a speed of less than 1 km/h for a distance of only a few meters to a place that is suitable for carrying out repairs.

This is for use only in emergencies.

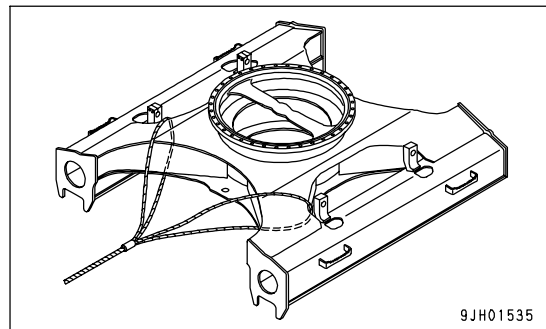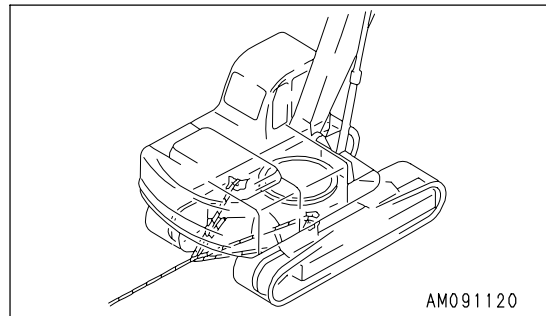


SEVERE JOB CONDITION

- When carrying out digging operations in water, if the work equipment mounting pin goes into the water, carry out greasing every time the operation is carried out.
 - For heavy-duty operations and deep digging, carry out greasing of the work equipment mounting pins every time before operation.
- After greasing, operate the boom, arm and bucket several times, then grease again.

DISCHARGED BATTERY

 **WARNING**

- It is dangerous to charge a battery when mounted on a machine. Make sure that it is dismantled before charging.
- When checking or handling the battery, stop the engine and turn the starting switch key to the OFF position.
- The battery generates hydrogen gas, so there is a hazard of explosion. Do not bring lighted cigarettes near the battery, or do anything that will cause sparks.
- Battery electrolyte is dilute sulfuric acid, and it will attack your clothes and skin. If it gets on your clothes or on your skin, immediately wash it off with a large amount of water. If it gets in your eyes, wash it out with fresh water and consult a doctor.
- When handling batteries, always wear safety glasses and rubber gloves.
- When removing the battery, first disconnect the cable from the ground (normally the negative (-) terminal). When installing, install the positive (+) terminal first.
If a tool touches the positive terminal and the chassis, there is danger that it will cause a spark, so be extremely careful.
- If the terminals are loose, there is danger that the defective contact may generate sparks that will cause an explosion.
- When removing or installing the terminals, check which is the positive (+) terminal and which is the negative (-) terminal.

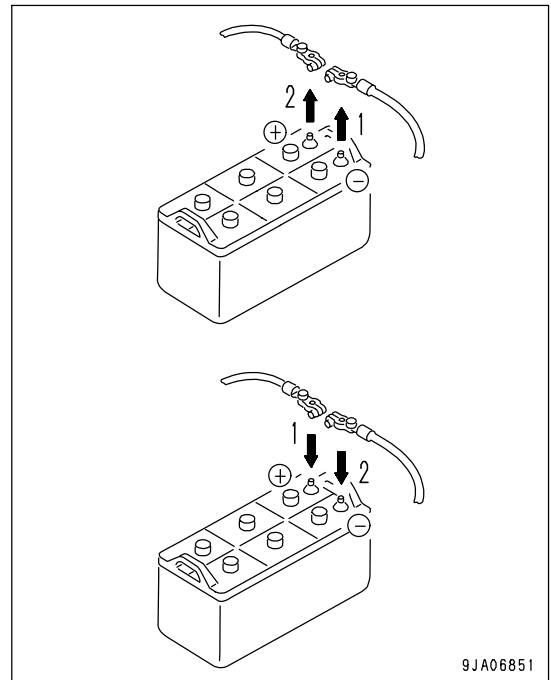

9JA06851


Battery Removal and Installation

- Before removing the battery, remove the ground cable (normally connected to the negative (-) terminal).
If any tool touches between the positive terminal and the chassis, there is a hazard of sparks being generated.
- When installing the battery, connect the ground cable last.
- When replacing the battery, fix the battery securely in position with the battery mounting clamp.
Tightening torque of mounting bolt: 9.8 to 19.6 Nm (1.0 to 2.0 kgm, 7.2 to 14.5 lbft)

Battery Charges

When charging the battery, if the battery is not handled correctly, there is a hazard that the battery may explode. Always follow the instructions of "DISCHARGED BATTERY (PAGE 3-157)" and the instruction manual accompanying the charger, and do as follows.

- Set the voltage of the charger to match the voltage of the battery to be charged. If the correct voltage is not selected, the charger may overheat and cause an explosion.
- Connect the positive (+) charger clip of the charger to the positive (+) terminal of the battery, then connect the negative (-) charger clip of the charger to the negative (-) terminal of the battery. Be sure to attach the clips securely.
- Connect the positive (+) charger clip of the charger to the positive (+) terminal of the battery, then connect the negative (-) charger clip of the charger to the negative (-) terminal of the battery. Be sure to attach the clips securely.
- Set the charging current to 1/10 of the value of the rated battery capacity; when carrying out rapid charging, set it to less than the rated battery capacity.
If the charger current is too high, the electrolyte will leak or dry up, and this may cause the battery to catch fire and explode.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is a danger that this will ignite the battery electrolyte and cause the battery to explode.
- Do not use or charge the battery if the battery electrolyte level is below the LOWER LEVEL line. This may cause an explosion. Check the battery electrolyte level periodically and add distilled water to bring the electrolyte level to the UPPER LEVEL line.

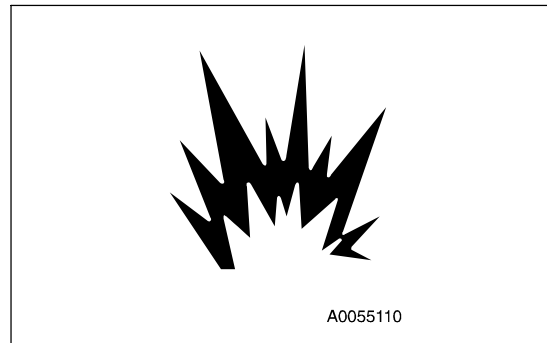

Starting Engine with Booster Cables


When starting the engine with a booster cable, do as follows.

Connecting and Disconnecting Booster Cables



WARNING

- When connecting the cables, never contact the positive (+) and negative (-) terminals.
- When starting the engine with a booster cable, always wear safety glasses.
- Be careful not to let the normal machine and problem machine contact each other. This prevents sparks from generating near the battery which could ignite the hydrogen gas given off by the battery. If hydrogen gas explodes, it could cause serious injury.
- Be careful not to make a mistake when connecting a booster cable. In the last connection (to the upper structure frame), a spark will be caused, connect the cable to a spot as far away from the battery as possible. (Avoid the work equipment, however, because it is not a good conductor)
- When removing the booster cable, exercise good care so that the booster cable clips may not contact each other, or they contact the chassis.

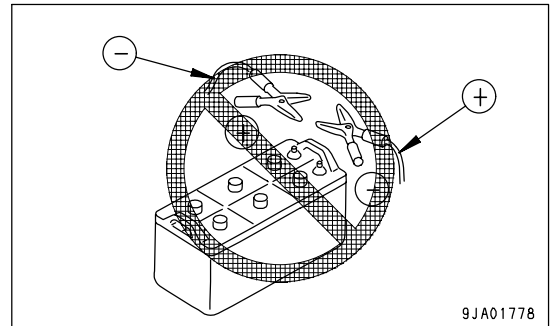

NOTICE


- The starting system on this machine is 24 V. Always use a 24 V machine for the normal machine also.
- Always use a booster cable or clip of a thickness that is suitable for the size of the battery.
- For the battery on the normal machine, use a battery with the same capacity as the problem machine.
- Check that the cable and clips are not damaged or corroded.
- Connect the clips securely.
- Check that the lock levers of both machines are at the LOCK position.
- Check that all levers are at the neutral position.

Booster Cable Connection

Keep the starting switch of the normal machine and problem machine in the OFF position.

Connect the booster cable as follows, in the order of the numbers marked in the diagram.

1. Connect the clip of booster cable (A) to the positive (+) terminal of battery (C) on the problem machine.
2. Connect the clip at the other end of booster cable (A) to the positive (+) terminal of battery (D) on the normal machine.
3. Connect the clip of booster cable (B) to the negative (-) terminal of battery (D) on the normal machine.
4. Connect the other clip of booster cable (B) to the revolving frame (E) of the problem machine.

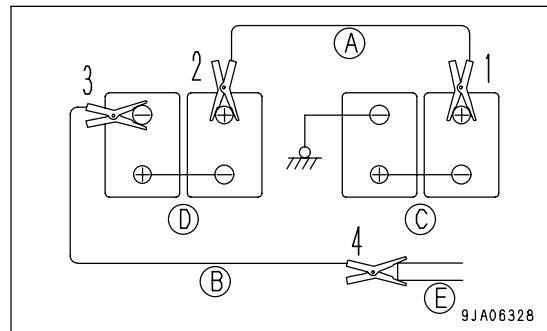

Starting the Engine



CAUTION


Always check that the lock lever is set to the LOCK position, regardless of whether the machine is working normally or has failed. Check also that all the control levers are at the HOLD or neutral position.

1. Make sure the clips are firmly connected to the battery terminals.
2. Start engine of the normal machine and run it at high idle speed.
3. Turn the starting switch of the problem machine to the START position and start the engine.
If the engine doesn't start at first, try again after 2 minutes or so.

Booster Cable Disconnection

After the engine has started, disconnect the booster cables in the reverse of the order in which they were connected.

1. Remove one clip of booster cable (B) from the revolving frame (E) of the problem machine.
2. Remove the clip of booster cable (B) from the negative (-) terminal of battery (D) on the normal machine.
3. Remove the clip of booster cable (A) from the positive (+) terminal of battery (D) on the normal machine.
4. Remove the clip of booster cable (A) from the positive (+) terminal of battery (C) on the problem machine.

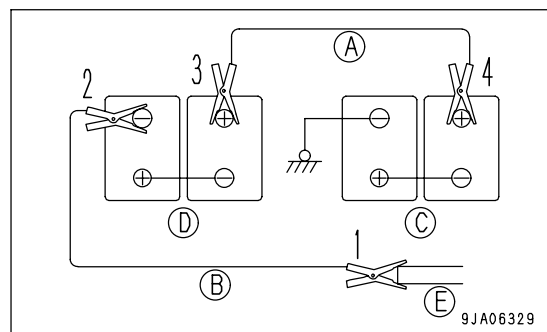

OTHER TROUBLE

Electrical System

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of problems or causes which are not listed below, contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Lamp does not glow brightly even when the engine runs at high speed	<ul style="list-style-type: none"> • Defective wiring • Deteriorated battery 	<ul style="list-style-type: none"> (• Check, repair loose terminals,disconnections) (• Replace battery)
Lamp flickers while engine is running	<ul style="list-style-type: none"> • Defective adjustment of V belt tension 	<ul style="list-style-type: none"> • Check, adjust V belt tension For details, see EVERY 250 HOURS SERVICE
Charge level monitor does not go out even when engine is running	<ul style="list-style-type: none"> • Defective alternator • Defective wiring 	<ul style="list-style-type: none"> (• Replace) (• Check, repair)
Abnormal noise is generated from alternator	<ul style="list-style-type: none"> • Defective alternator 	<ul style="list-style-type: none"> (• Replace)
Starting motor does not crank when Starting switch is turned ON	<ul style="list-style-type: none"> • Defective wiring • Defective starting motor • Insufficient battery charge • Defective safety relay • Defective engine controller 	<ul style="list-style-type: none"> (• Check, repair) (• Replace) • Charge (• Replace) (• Replace)
Pinion of starting motor keeps going in and out	<ul style="list-style-type: none"> • Insufficient battery charge • Defective safety relay (direct starting motor) 	<ul style="list-style-type: none"> • Charge (• Replace)
Starting motor turns engine sluggishly	<ul style="list-style-type: none"> • Insufficient battery charge • Defective starting motor 	<ul style="list-style-type: none"> • Charge (• Replace)
Starting motor disengages before engine starts	<ul style="list-style-type: none"> • Defective wiring,defective ring gear pinion • Insufficient battery charge 	<ul style="list-style-type: none"> (• Check, repair) • Charge
Pre-heating monitor does not light	<ul style="list-style-type: none"> • Defective wiring • Defective heater relay • Defective monitor 	<ul style="list-style-type: none"> (• Check, repair) (• Replace) (• Replace)
Oil pressure monitor does not light up when engine is stopped (starting switch at ON position)	<ul style="list-style-type: none"> • Defective monitor • Defective sensor • Defective wiring 	<ul style="list-style-type: none"> (• Replace) (• Replace) (• Check, repair)
Charge level monitor does not light up when engine is stopped (starting switch at ON position)	<ul style="list-style-type: none"> • Defective monitor • Defective wiring 	<ul style="list-style-type: none"> (• Replace) (• Check, repair)

Chassis

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of problems or causes which are not listed below, contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Speed of travel, swing, boom, arm, bucket is slow	<ul style="list-style-type: none"> • Lack of hydraulic oil 	<ul style="list-style-type: none"> • Add oil to specified level, see CHECK BEFORE STARTING
Pump generates abnormal noise	<ul style="list-style-type: none"> • Clogged element in hydraulic tank strainer • Loose suction hose • Lack of hydraulic oil 	<ul style="list-style-type: none"> • Clean, see EVERY 2000 HOURS SERVICE • Retighten • Add oil to specified
Excessive rise in hydraulic oil temperature	<ul style="list-style-type: none"> • Dirty oil cooler • Lack of hydraulic oil 	<ul style="list-style-type: none"> • Clean, see EVERY 500 HOURS SERVICE • Add oil to specified level, see CHECK BEFORE STARTING
Track comes off	<ul style="list-style-type: none"> • Track too loose 	<ul style="list-style-type: none"> • Adjust track tension, see WHEN REQUIRED
Abnormal wear of sprocket		
Bucket rises slowly, does not rise	<ul style="list-style-type: none"> • Lack of hydraulic oil 	<ul style="list-style-type: none"> • Add oil to specified level, see CHECK BEFORE STARTING
Does not swing	<ul style="list-style-type: none"> • Swing lock switch still applied 	<ul style="list-style-type: none"> • Turn swing lock switch OFF

Engine

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of problems or causes which are not listed below, contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Engine oil pressure monitor lights up	<ul style="list-style-type: none"> • Engine oil pan oil level is low (sucking in air) • Clogged oil filter cartridge • Defective tightening of oil pipe joint, oil leakage from damaged part • Disconnection, broken wiring to sensor • Defective sensor • Defective Monitor 	<ul style="list-style-type: none"> • Add oil to specified level, see CHECK BEFORE STARTING • Replace cartridge, see EVERY 500 HOURS SERVICE (• Check, repair) (• Repair, connect wiring) (• Replace) (• Replace)
Steam is emitted from top part of radiator (pressure valve)	<ul style="list-style-type: none"> • Coolant level low • Loosen fan belt • Defective water level sensor 	<ul style="list-style-type: none"> • Add coolant, repair, see leakage CHECK BEFORE STARTING • Check fan belt tension, see EVERY 500 HOURS SERVICE (• Replace water level sensor)
Radiator coolant level monitor lights up	<ul style="list-style-type: none"> • Dirt or scale accumulated in cooling system • Clogged radiator fin or damaged fin 	<ul style="list-style-type: none"> • Change coolant, clean inside of cooling system, see WHEN REQUIRED • Clean or repair, see EVERY 500 HOURS SERVICE
Engine water temperature gauge is in red range	<ul style="list-style-type: none"> • Defective engine water temperature gauge • Defective thermostat • Defective thermostat seal • Loose radiator filler cap (high altitude operation) 	<ul style="list-style-type: none"> (• Replace engine water temperature gauge¹⁾) (• Replace thermostat¹⁾) (• Replace thermostat seal¹⁾) • Tighten cap or replace packing
Engine water temperature monitor lights up	<ul style="list-style-type: none"> • Disconnection, broken wiring to sensor 	<ul style="list-style-type: none"> (• Repair, connect wiring)
Engine water temperature gauge display stays at lowest level and does not rise	<ul style="list-style-type: none"> • Defective water temperature gauge monitor • Defective thermostat • In cold weather, cold wind is blowing strongly against engine 	<ul style="list-style-type: none"> (• Replace water temperature gauge monitor) • Replace thermostat (• Install radiator curtain)

Problem	Main causes	Remedy
Engine does not start even when starting motor is turned	<ul style="list-style-type: none"> • Lack of fuel • Air in fuel system • No fuel in fuel filter • Starting motor cranks engine too slowly • Starting motor does not turn • Defective valve clearance (defective compression) 	<ul style="list-style-type: none"> • Add fuel, see CHECK BEFORE STARTING (• Repair place where air is sucked in) • Fill filter with fuel. See EVERY 500 HOURS SERVICE. • See ELECTRICAL SYSTEM • See ELECTRICAL SYSTEM (• Adjust valve clearance)
Fuel stops from time to time	<ul style="list-style-type: none"> • Fuel tank cap 	<ul style="list-style-type: none"> • (Clean or replace fuel tank cap)
Excessive oil consumption	<ul style="list-style-type: none"> • Oil leakage • Excessive oil in il pan 	<ul style="list-style-type: none"> (• Check, repair) • Add oil to specified level. See CHECK BEFORE STARTING.
Exhaust gas is white or blue	<ul style="list-style-type: none"> • Worn piston, ring, cylinder liner • Improper fuel • Defective turbocharger 	<ul style="list-style-type: none"> (• Replace) • Replace with specified fuel (• Check, replace)
Exhaust gas is black	<ul style="list-style-type: none"> • Clogged air cleaner element • Worn piston, ring, cylinder liner • Defective compression • Defective turbocharger • Defective injector 	<ul style="list-style-type: none"> • Clean or replace. See WHEN REQUIRED. (• Check, repair) • See adjustment of clearance above (• Check, replace) (• Check, adjust, repair)
Engine hunts	<ul style="list-style-type: none"> • Air entering suction side of fuel line 	<ul style="list-style-type: none"> (• Check, repair)
Abnormal noise generated (combustion or mechanical)	<ul style="list-style-type: none"> • Low-grade fuel being used • Overheating 	<ul style="list-style-type: none"> • Change to specified fuel • Refer to "Radiator water level monitor lights up" as above
Error code is displayed on monitor	Contact your Komatsu distributor	
Alarm buzzer sounds		
Engine suddenly loses power (entered delayed mode)		

Electronic Control System

If an error code is displayed on the machine monitor display, follow the self-diagnostic remedy table below.

Machine Monitoring System

Monitor display	Failure mode	Remedy
E03	Swing brake system error	Carry out inspection immediately.
E07	Error in pump controlling system (Emergency safeguard system in action)	An abnormality has occurred in the electronic pump control system, and the emergency safeguard system is in action. Part of the machine's functions is lost. The ordinary work is still possible with the machine, but ask your distributor for an inspection.
E10	Abnormality in electronic governor system (engine stopped)	Carry out inspection immediately.
E11	Abnormality in electronic governor system (abnormality in engine protection output)	It is possible to carry out normal working operations, but have inspection carried out immediately.
E14	Abnormality in throttle (abnormality in fuel control dial)	Move machine to a safe posture, and carry out inspection immediately.
E15	Abnormality in electronic governor system	It is possible to carry out normal driving operations, but have inspection carried out immediately.
E0E	Abnormality in network	<ul style="list-style-type: none"> • If the engine can be operated, set the machine to a safe posture, then have inspection carried out immediately. • If the engine is operated and stalls, turn the emergency pump drive switch is up set the machine to a safe posture, then have inspection carried out immediately. • Even if the engine is stopped, have inspection carried out immediately.
If no error code is displayed but work equipment or swing cannot be operated		Carry out inspection immediately.

(*): For details of handling the emergency pump drive switch, see "Emergency Pump Drive Switch (PAGE 3-38)".

Point of Contact to Telephone when Error Occurs


If an error screen is displayed on the monitor, the screen changes as follows each time input confirmation switch (1) is pressed.

Error screen → screen A → screen B → screen C → error screen
 Check the point of contact telephone number on screen B.


REMARK

If the point of contact telephone number has not been registered, screen B is not displayed.

If it is necessary to register the point of contact telephone number, ask your Komatsu distributor to register it.

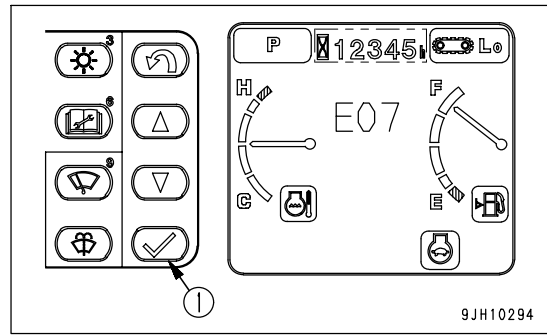


9JH10294

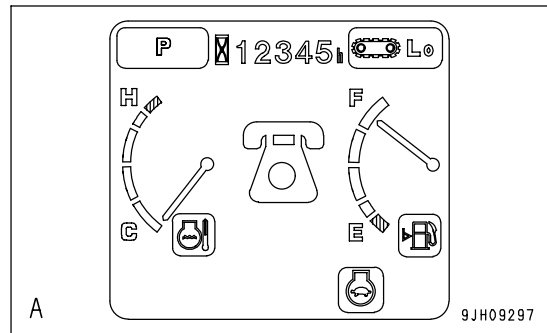


A

9JH09297

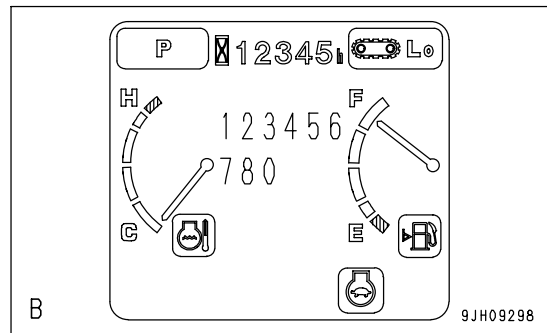

B

9JH09298

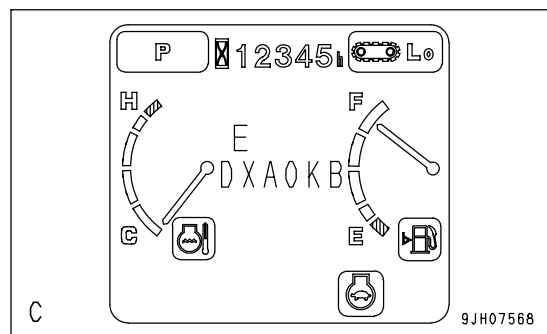

C

9JH07568

MAINTENANCE

WARNING

Please read and make sure that you understand the SAFETY section before reading this section.

MAINTENANCE INFORMATION

Do not perform any inspection and maintenance operation that is not found in this manual.

Service Meter Reading

Check the service meter reading every day to see if the time has come for any necessary maintenance to be performed.

Komatsu Genuine Replacement Parts

Use Komatsu genuine parts specified in the Parts Book as replacement parts.

Komatsu Genuine Lubricants

For lubrication of the machine, use the Komatsu genuine lubricants. Moreover use oil of the specified viscosity according to the ambient temperature.

Windshield Washer Fluid

Use automobile window washer fluid, and be careful not to let any dirt get into it.

Fresh and Clean Lubricants

Use clean oil and grease. Also, keep the containers of the oil and grease clean. Keep foreign materials away from oil and grease.

Check Drained Oil and Used Filter

After oil is changed or filters are replaced, check the old oil and filters for metal particles and foreign materials. If large quantity of metal particles or foreign materials are found, always report to the person in charge, and carry out suitable action.

Fuel Strainer

If your machine is equipped with a fuel strainer, do not remove it while fueling.

Welding Instructions

- Cut off power. Wait for approx. one minute after turning off the engine starting switch key, and then disconnect the negative (-) terminal of the battery.
- Do not apply more than 200 V continuously.
- Connect grounding cable within 1 m (3.3 ft) of the area to be welded. If grounding cable is connected near instruments, connectors, etc., the instruments may malfunction.
- If a seal or bearing happens to come between the part being welded and grounding point, change the grounding point to avoid such parts.
- Do not use the area around the work equipment pins or the hydraulic cylinders as the grounding point.

Do not Drop Things Inside Machine

- When opening inspection windows or the oil filler port of the tank to carry out inspection, be careful not to drop nuts, bolts, or tools inside the machine.
If such things are dropped inside the machine, it may cause damage and/or malfunction of the machine, and will lead to failure. If you drop anything inside the machine, always remove it immediately.
- Do not put unnecessary things in your pockets. Carry only things which are necessary for inspection.

Dusty Jobsite

When working at dusty worksites, do as follows:

- Clean the radiator fins and other parts of the heat exchange equipment more frequently, and take care not to let the fins become clogged.
- Replace the fuel filter more frequently.
- Clean electrical components, especially the starting motor and alternator, to avoid accumulation of dust.
- When checking and replacing the oil or filters, move the machine to a place where there is no dust and take care to prevent dust from entering the system.

Avoid Mixing Lubricants

If a different brand or grade of oil has to be added, drain the old oil and replace all the oil with the new brand or grade of oil. Never mix different brand or grade of oil.

Locking the Inspection Covers

Lock inspection cover securely into position with the lock bar. If inspection or maintenance is performed with inspection cover not locked in position, there is a danger that it may be suddenly blow shut by the wind and cause injury to the worker.

Hydraulic System - Air Bleeding

When hydraulic equipment has been repaired or replaced, or the hydraulic piping has been removed and installed again, the air must be bled from the circuit. For details, see "BLEEDING AIR FROM HYDRAULIC SYSTEM (PAGE 4-38)".

Hydraulic Hose Installation

- When removing parts at locations where there are O-rings or gasket seals, clean the mounting surface, and replace with new parts.
When doing this, be careful not to forget to assemble the O-rings and gaskets.
- When installing the hoses, do not twist them or bend them sharply. If they are installed so, their service life will be shortened extremely and they may be damaged.

Checks After Inspection and Maintenance Works

If you forget to perform the checks after inspection and maintenance, unexpected problems may occur, and this may lead to serious injury or property damage. Always do the following:

- Checks after operation (with engine stopped)
 - Have any inspection and maintenance points been forgotten?
 - Have all inspection and maintenance items been performed correctly?
 - Have any tools or parts been dropped inside the machine? It is particularly dangerous if parts are dropped inside the machine and get caught in the lever linkage mechanism.
 - Are there any leakage of coolant or oil? Have all nuts and bolts been tightened?
- Checks when operating engine
 - For details of the checks when operating the engine, see "TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING (PAGE 2-36)" and pay careful attention to safety.
 - Are the inspection and maintenance items working properly?
 - Is there any leakage of fuel or oil when the engine speed is raised?

OUTLINE OF SERVICE

- Always use Komatsu genuine parts for replacement parts, grease or oil.
- When changing the oil or adding oil, do not mix different types of oil. When changing the type of oil, drain all the old oil and fill completely with the new oil. Always replace the filter at the same time. (There is no problem if the small amount of oil remaining in the piping mixes with the new oil.)
- Unless otherwise specified, when the machine is shipped from the factory, it is filled with the oil and coolant listed in the table below.

Item	Type
Engine oil pan	Engine oil EO15W40DH (Komatsu genuine parts)
Coupling case	Powertrain oil TO30 (Komatsu genuine parts)
Swing machinery case	
Final drive case	
Hydraulic oil system	Powertrain oil TO10 (Komatsu genuine parts)
Radiator	Supercoolant AF-NAC (density: 30% or above) (Komatsu genuine parts)

HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC

OIL

- Oil is used in the engine and hydraulic equipment under extremely severe conditions (high temperature, high pressure), and deteriorates with use.
Always use oil that matches the grade and maximum and minimum ambient temperatures recommended in the Operation and Maintenance Manual. Even if the oil is not dirty, always change the oil at the specified interval.
- Oil corresponds to blood in the human body, always be careful when handling it to prevent any impurities (water, metal particles, dirt, etc.) from getting in.
The majority of problems with the machine are caused by the entry of such impurities.
Take particular care not to let any impurities get in when storing or adding oil.
- Never mix oils of different grades or brands.
- Always add the specified amount of oil.
Having too much oil or too little oil are both causes of problems.
- If the oil in the work equipment is not clear, there is probably water or air getting into the circuit. In such cases, please contact your Komatsu distributor.
- When changing the oil, always replace the related filters at the same time.
- We recommend you have an analysis made of the oil periodically to check the condition of the machine. For those who wish to use this service, please contact your Komatsu distributor.
- When using commercially available oil, it may be necessary to reduce the oil change interval.
We recommend that you use the Komatsu oil clinic to carry out a detailed checks of the characteristics of the oil.

FUEL

- To prevent the moisture in the air from condensing and forming water inside the fuel tank, always fill the fuel tank after completing the day's work.
- The fuel pump is a precision instrument, and if fuel containing water or dirt is used, it cannot work properly.
- Be extremely careful not to let impurities get in when storing or adding fuel.
- Always use the fuel specified for the temperature in the Operation and Maintenance Manual.
 - If the fuel is used at temperatures lower than the specified temperature (particularly at temperatures below -15 °C (5°F), the fuel will solidify.
 - If the fuel is used at temperatures higher than the specified temperature, the viscosity will drop, and this may result in problems such as a drop in output.
- Before starting the engine, or when 10 minutes have passed after adding fuel, drain the sediment and water from the fuel tank.
- If the engine runs out of fuel, or if the filters have been replaced, it is necessary to bleed the air from the circuit.
- If there is any foreign material in the fuel tank, wash the tank and fuel system.

NOTICE

Always use diesel oil for the fuel.

To ensure good fuel consumption characteristics and exhaust gas characteristics, the engine mounted on this machine uses an electronically controlled high-pressure fuel injection device. This device requires high precision parts and lubrication, so if low viscosity fuel with low lubricating ability is used, the durability may drop markedly.

COOLANT AND WATER FOR DILUTION

- The coolant has the important function of preventing corrosion as well as preventing freezing. Even in the areas where freezing is not an issue, the use of antifreeze coolant is essential. Komatsu machines are supplied with Komatsu Supercoolant (AF-NAC). Komatsu Supercoolant (AF-NAC) has excellent anticorrosion, antifreeze and cooling properties and can be used continuously for 2 years or 4000 hours. As a basic rule, we do not recommend the use of any coolant other than Komatsu genuine supercoolant (AF-NAC). If you use another coolant, it may cause serious problems such as corrosion of the engine and parts of the cooling system that use light metals such as aluminum.
- When using Komatsu Supercoolant (AF-NAC), there is no need to use a corrosion resistor. For details, see "CLEAN INSIDE OF COOLING SYSTEM (PAGE 4-23)".
- When diluting the antifreeze coolant, use distilled water or tap water (soft water). Natural water, such as a river water or well water (hard water), contains large amounts of minerals (calcium, magnesium, etc.), and this makes it easier for scale to form inside the engine or radiator. Once scale is deposited inside the engine or radiator, it is extremely difficult to remove. It also causes overheating due to poor heat exchange, so when you dilute the coolant, we recommend that you use water with an overall hardness of less than 100 PPM.
- When using antifreeze, always observe the precautions given in the Operation and Maintenance Manual.
- Antifreeze coolant is flammable, so be sure to keep it away from flame.
- The ratio of Supercoolant (AF-NAC) to water differs according to the ambient temperature. For details of the ratio when mixing, see "CLEAN INSIDE OF COOLING SYSTEM (PAGE 4-23)". Even in areas where it is not necessary to prevent freezing, use Supercoolant (AF-NAC) at a mixing ratio of at least 30% to prevent corrosion of the cooling system. Supercoolant (AF-NAC) may be supplied in premix. In this case, never add diluting water.
- If the engine overheats, wait for the engine to cool before adding coolant.
- If the coolant level is low, it will cause overheating, and will also cause problems with corrosion due to air entering the coolant.

GREASE

- Grease is used to prevent seizure and noises at the joints.
- This construction equipment is used under heavy-duty conditions. Always use the recommended grease and follow the change intervals and recommended ambient temperatures given in this Operation and Maintenance Manual.
- Grease fittings not included in the maintenance section are grease fittings for overhaul, so they do not need grease.
If any part becomes stiff after being used for long time, add grease.
- Always wipe off all of the old grease that is pushed out when greasing.
Be particularly careful to wipe off the old grease in places where sand or dirt sticking in the grease would cause wear of the rotating parts.


CARRYING OUT KOWA (Komatsu Oil Wear Analysis)

KOWA is a maintenance service that makes it possible to prevent machine failures and downtime. With KOWA, the oil is periodically sampled and analyzed. This enables early detection of wear of the machine drive parts and other problems.


We strongly recommend you to use this service. The oil analysis is carried out at actual cost, so the cost is low, and the results of the analysis are reported together with recommendations which will reduce repair costs and machine downtime.

KOWA ANALYSIS ITEMS

- Measurement of density of metal wear particles
This uses an ICP (Inductively Coupled Plasma) analyzer to measure the density of iron, copper, and other metal wear particles in the oil.

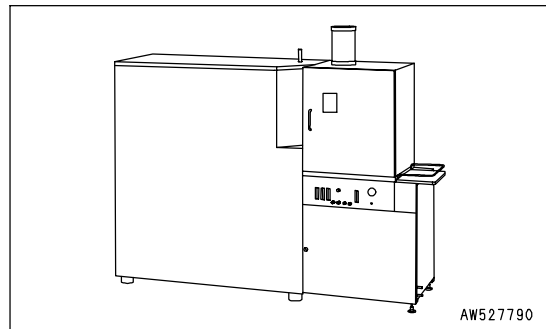

- Measurement of quantity of particles
This uses a PQI (Particle Quantifier Index) measurer to measure the quantity of iron particles of 5µm or more, enabling early detection of failures.

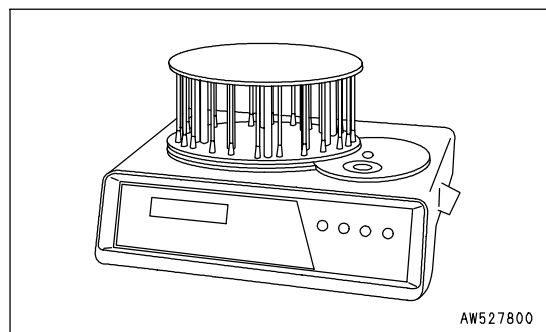

- Others
Measurements are made of items such as the ratio of water in the oil, density of the antifreeze coolant, ratio of fuel in the oil, and dynamic viscosity, enabling a highly precise diagnosis of the machine's health.

OIL SAMPLING

- Sampling interval
 - 250 hours: Engine
 - 500 hours: Other components
- Precautions when sampling
 - Make sure that the oil is well mixed before sampling.
 - Perform sampling at regular fixed intervals.
 - Do not perform sampling on rainy or windy days when water or dust can get into the oil.

For further details of KOWA, please contact your Komatsu distributor.

STORING OIL AND FUEL

- Keep indoors to prevent any water, dirt, or other impurities from getting in.
- When keeping drum cans for a long period, put the drum on its side so that the filler port of the drums is at the side to prevent moisture from being sucked in.
If drums have to be stored outside, cover them with a waterproof sheet or take other measures to protect them.
- To prevent any change in quality during long-term storage, be sure to use in the order of first in - first out (use the oldest oil or fuel first).

FILTERS

- Filters are extremely important safety parts. They prevent impurities in the fuel and air circuits from entering important equipment and causing problems.
Replace all filters periodically. For details, see the Operation and Maintenance Manual.
However, when working in severe conditions, replace the filters at shorter intervals according to the oil and fuel (sulfur content) being used.
- Never try to clean the filters (cartridge type) and use them again. Always replace with new filters.
- When replacing oil filters, check if any metal particles are attached to the old filter. If any metal particles are found, contact your Komatsu distributor.
- Do not open packs of spare filters until just before they are to be used.
- Use of Komatsu genuine filter elements is strongly recommended.

ELECTRIC SYSTEM MAINTENANCE

- It is extremely dangerous if the electrical equipment becomes wet or the covering of the wiring is damaged. This will cause an electrical short circuit and may lead to malfunction of the machine. Do not wash the inside of the operator's cab with water. When washing the machine, be careful not to let water get into the electrical components.
- Service relating to the electric system is checking fan belt tension, checking damage or wear to the fan belt and checking battery fluid level.
- Never install any electric components other than those specified by Komatsu.
- External electro-magnetic interference may cause malfunction of the control system controller, before installing a radio receiver or other wireless equipment, contact your Komatsu distributor.
- When working at the seashore, carefully clean the electric system to prevent corrosion.
- When installing electrical equipment, connect it to the special power source connector.
Do not connect the optional power source to the fuse, starting switch, or battery relay.

WEAR PARTS

Replace wear parts such as the filter element or air cleaner element at the time of periodic maintenance or before they reach the wear limit. The wear parts should be replaced correctly in order to ensure more economic use of the machine. When replacing parts, always use Komatsu genuine parts.

As a result of our continuous efforts to improve product quality, the part number may change, so inform your Komatsu distributor of the machine serial number and check for the latest part number when ordering parts.

WEAR PARTS LIST

The parts in parentheses are to be replaced at the same time.

Item	Part No.	Part No.	Q'ty	Replacement frequency	
Hydraulic oil filter	209-60-77532 (07000-05180)	Element (O-ring)	2 (2)	Every 1000 hours	
Drain filter	209-60-76210	Cartridge	1	Every 500 hours	
Pilot filter	21T-60-31410	Filter	1	Every 500 hours	
Engine oil filter	600-211-1340	Cartridge	2	Every 500 hours	
Fuel main filter	600-319-3550	Cartridge	1	Every 1000 hours	
Fuel pre-filter	600-319-4540	Cartridge	1	Every 500 hours	
	600-319-4500	Cartridge (with transparent cap)	1	-	
Corrosion resistor (if equipped)	600-411-1171	Cartridge	1	Every 1000 hours	
Air conditioner RECIRC filter	20Y-979-6261	Filter	1	Every one year	
Air conditioner FRESH filter	17M-911-3530	Element	1	Every one year	
Air cleaner	600-185-6100	Element assembly	1	-	
Bucket	All models	209-70-44241 (209-70-44261)	Tooth (KMAX type) (Pin)	5 (5)	-
	PC800-8	209-70-14181	Side cutter (left)	1	
		209-70-14191	Side cutter (right)	1	
		(209-70-14210)	(Bolt)	(12)	
(21T-32-11320)		(Nut)	(12)		
PC850-8	(01643-33380)	(Washer)	(12)		
	427-70-13611	Side Shroud	4		
	21N-939-3330	(Pin)	(8)		
	(209-939-7110)	(Shim)	(16)		
PC800SE-8 PC850SE-8	(209-939-7120)	(Shim)	(8)		
	209-70-54610	Shroud	4		
	01011-83015	Bolt	(12)		
	01643-33080	Washer	(24)		
Hydraulic tank breather	01580-13024	Nut	(12)		
	20Y-60-21470 421-60-35170	Element	1	Every 1000 hours	
Fuel tank breather	421-60-35170	Element	1	Every 1000 hours	
Line filter	21N-62-31221 (07000-12055)	Element (O-ring)	2 (2)	-	
	(07000-12070)	(O-ring)	(2)		
	(07001-02070)	(Back-up ring)	(2)		

RECOMMENDED FUEL, COOLANT, AND LUBRICANT

- Komatsu genuine oils are adjusted to maintain the reliability and durability of Komatsu construction equipment and components.

In order to keep your machine in the best conditioner for long periods of time, it is essential to follow the instructions in this Operation and Maintenance Manual.

- Failure to follow these recommendations may result in shortened life or excess wear of the engine, power train, cooling system, and/or other components.
- Commercially available lubricant additives may be good for the machine, but they may also cause harm. Komatsu does not recommend any commercially available lubricant additive.
- Use the oil recommended according to the ambient temperature in the chart below.
- Specified capacity means the total amount of oil including the oil in the tank and the piping. Refill capacity means the amount of oil needed to refill the system during inspection and maintenance.
- When starting the engine in temperatures below 0°C (32°F), be sure to use the recommended multi-grade oil, even if the ambient temperature may become higher during the course of the day.
- If the machine is operated at a temperature below -20°C (-4°F), a separate device is needed, so consult your Komatsu distributor.
- When the fuel sulfur content is less than 0.2%, change the engine oil according to the period inspection table given in this Operation and Maintenance Manual.

If the fuel sulfur content is more than 0.2%, change the oil according to the following table.

Sulfur content (%)	Oil change interval
Less than 0.2 %	500 hours
0.2 to 0.5 %	250 hours
0.5 and up	Not recommendable (*)

* If these fuels are used, there is danger that serious trouble may occur because of early deterioration of the engine oil or early wear of the internal parts of the engine. If the local situation makes it necessary to use these fuels, always remember the following.

- 1) Be sure to check Total Basic Number (TBN) of oil frequently by TBN handy checker etc., and change oil based on the result.
- 2) Always be aware that oil change interval is extremely shorter than standard.
- 3) Be sure to carry out periodic engine inspection by distributor's expert since change interval of periodic replacement parts and overhaul interval are also shorter.

Reservoir	Fluid Type	Ambient Temperature, degrees Celsius									Recommended Komatsu Fluids
		-22	-4	14	32	50	68	86	104	122 °F	
		-30	-20	-10	0	10	20	30	40	50 °C	
Engine oil pan	Engine oil	(Note.1)									Komatsu EOS0W30
		(Note.1)									Komatsu EOS5W40
		(Note.1)									Komatsu EO10W30-DH
		(Note.1)									Komatsu EO15W40-DH
		(Note.1)									Komatsu EO30-DH
Swing machinery case Final drive case	Powertrain oil (Note.2)	(Note.1)									TO30
Coupling case	Powertrain oil	(Note.1)									TO10
		(Note.1)									TO30
Hydraulic system	Powertrain oil	(Note.1)									TO10
	Hydraulic oil	(Note.1)									HO46-HM
Grease fitting	Hyper grease (Note.3)	(Note.1)									G2-T, G2-TE
	Lithium EP grease	(Note.1)									G2-LI
Cooling system	Supercoolant AF-NAC (Note.4)	(Note.1)									AF-NAC
Fuel tank	Diesel fuel	(Note.1)									ASTM Grade No.1-D S15 ASTM Grade No.1-D S500
		(Note.1)									ASTM Grade No.2-D S15 ASTM Grade No.2-D S500

• ASTM: American Society of Testing and Material

		Engine Oil pan	Swing machinery case (Each)	Final drive case (Each)	Coupling case	Hydraulic oil system	Cooling system	Fuel tank
Specified capacity	Liter	58	24.5	20	7	800	104	980
	US gal	15.32	6.47	5.28	1.85	211.36	27.48	258.92
Refill capacity	Liter	53	24.5	20	7	470	-	-
	US gal	14.00	6.47	5.28	1.85	124.17	-	-

NOTICE

Always use diesel oil for the fuel.

To ensure good fuel consumption characteristics and exhaust gas characteristics, the engine mounted on this machine uses an electronically controlled high-pressure fuel injection device. This device requires high precision parts and lubrication, so if low viscosity fuel with low lubricating ability is used, the durability may drop markedly.

Note 1: HTHS (High-Temperature High-Shear Viscosity 150°C), specified by ASTM D4741 must be equal to or higher than 3.5 mPa-S. Komatsu EOS0W30 and EOS5W40 are the most suitable oils.

Note 2: Powertrain oil has different properties from engine oil. Be sure to use the recommended oils.

Note 3: Hyper grease (G2-T, G2-TE) has a high performance.

When it is necessary to improve the lubricating ability of the grease in order to prevent squeaking of pins and bushings, the use of G2-T or G2-TE is recommended.

Note 4: Supercoolant (AF-NAC)

1) Coolant has the important function of anticorrosion as well as antifreeze.

Even in the areas where freezing is not an issue, the use of antifreeze coolant is essential.

Komatsu machines are supplied with Komatsu Supercoolant AF-NAC. Komatsu Supercoolant AF-NAC has excellent anticorrosion, antifreeze and cooling properties and can be used continuously for 2 years or 4000 hours.

Komatsu Supercoolant AF-NAC is strongly recommended wherever available.

2) For details of the ratio when diluting super coolant with water, see "CLEAN INSIDE OF COOLING SYSTEM (PAGE 4-23)".

Supercoolant AF-NAC may be supplied in premix. In this case, always top off with premix solution. (never dilute with water)

3) To maintain the anticorrosion properties of Supercoolant AF-NAC, always keep the density of Supercoolant between 30% and 68%.

RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL

When using commercially available oils other than Komatsu genuine oil, consult your Komatsu distributor.

TIGHTENING TORQUE SPECIFICATIONS

TIGHTENING TORQUE LIST




If nuts, bolts, or other parts are not tightened to the specified torque, it will cause looseness or damage to the tightened parts, and this will cause failure of the machine or problems with operation.

Always pay careful attention when tightening parts.


Unless otherwise specified, tighten the metric nuts and bolts to the torque shown in the table below. If it is necessary to replace any nut or bolt, always use a Komatsu genuine part of the same size as the part that was replaced.

Thread diameter of bolt (a)(mm)	Width across flats (b)(mm)	Tightning torque [Nm (kgm)]	
		Target value	Permissible range
6	10	13.2 (1.35)	11.8 - 14.7 (1.2 - 1.5)
8	13	31 (3.2)	27 - 34 (2.8 - 3.5)
10	17	66 (6.7)	59 - 74 (6.0 - 7.5)
12	19	113 (11.5)	98 - 123 (10.0 - 12.5)
14	22	177 (18.0)	157 - 196 (16.0 - 20.0)
16	24	279 (28.5)	245 - 309 (25.0 - 31.5)
18	27	382 (39.0)	343 - 425 (35.0 - 43.5)
20	30	549 (56.0)	490 - 608 (50.0 - 62.0)
22	32	745 (76.0)	662 - 829 (67.5 - 84.5)
24	36	927 (94.5)	824 - 1030 (84.0 - 105.0)
27	41	1320 (135.0)	1180 - 1470 (120.0 - 150.0)
30	46	1720 (175.0)	1520 - 1910 (155.0 - 195.0)
33	50	2210 (225.0)	1960 - 2450 (200.0 - 250.0)
36	55	2750 (280.0)	2450 - 3040 (250.0 - 310.0)
39	60	3280 (335.0)	2890 - 3630 (295.0 - 370.0)
42	65	3830 (390.0)	3430 - 4220 (350.0 - 430.0)

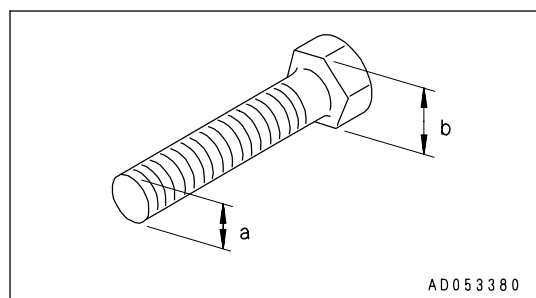

Apply the following table for Hydraulic Hose.

Nominal - No. of threads (a)	Width across flats (b) (mm)	Tightening torque					
		Target value			Permissible range		
		Nm	kgm	lbft	Nm	kgm	lbft
9/16 -18UNF	19	44	4.5	32.5	35 - 63	3.5 - 6.5	25.3 - 47.0
11/16 -16UN	22	74	7.5	54.2	54 - 93	5.5 - 9.5	39.8 - 68.7
13/16 -16UN	27	103	10.5	75.9	84 - 132	8.5 - 13.5	61.5 - 97.6
1 -14UNS	32	157	16.0	115.7	128 - 186	13.0 - 19.0	94.0 - 137.4
13/16 -12UN	36	216	22.0	159.1	177 - 245	18.0 - 25.0	130.2 - 180.8

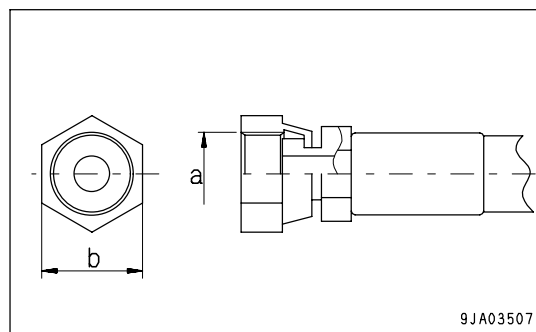

SAFETY CRITICAL PARTS

For using the machine safely for an extended period of time, you must periodically replace the safety critical and fire prevention-related parts listed in the table of important parts.

Material quality of these parts can change as time passes and they are likely to wear out or deteriorate. However, it is difficult to determine the extent of wear or deterioration at the time of periodic maintenance. Hence, it is required to replace them with new ones regardless of their condition after a certain period of usage. This is important to ensure that these parts maintain their full performance at all times.

Furthermore, should anything abnormal be found on any of these parts, replace it with a new one even if the periodic replacement time for the part has not yet arrived.

If any of the hose clamps show deterioration like deformation or cracking, replace the clamps at the same time as the hoses.

Also perform the following checks with hydraulic hoses which need to be replaced periodically. Tighten all loose clamps and replace defective hoses, as required.

When replacing hoses, always replace O-rings, gaskets, and other such parts at the same time.

Have your Komatsu distributor replace the critical parts.

SAFETY CRITICAL PARTS LIST

NO.	Safety critical parts for periodic replacement	Q'ty	Replacement interval
1	Fuel hose(fuel tank to Fuel Cutoff Valve)	1	Every 2 years or 4000 hours, whichever comes sooner
2	Fuel hose(Fuel Cutoff Valve to fuel pre-filter)	1	
3	Fuel hose(fuel pre-filter to Fuel Cutoff Valve)	1	
4	Fuel hose(Fuel Cutoff Valve to priming pump)	1	
5	Fuel return hose (injection pump to fuel cooler)	1	
6	Fuel return hose (fuel cooler to fuel tank)	1	
7	Fuel drain hose	1	
8	Heater hose (heater to engine)	2	
9	Fuel spill hose (engine to fuel tank)	1	
10	Fan pump outlet hose	1	
11	Accumulator (for control circuit)	2	
12	Water separator (case, O-ring, plug)	1	
13	Front pump outlet hose	2	
14	Rear pump outlet hose	2	
15	Pump branch hose	2	
16	Swing hose	4	
17	Suction hose	4	
18	Boom cylinder line hose (B/H)	4	
19	Arm cylinder line hose (B/H)	6	
20	Bucket cylinder line hose (B/H)	4	
21	Boom cylinder line hose (L/S)	4	
22	Arm cylinder line hose (L/S)	2	
23	Bucket cylinder line hose (L/S)	6	
24	Bottom dump cylinder line hose (L/S)	10	
25	High-pressure piping clamp	15	Every 8000 hours
26	Missing fuel spray prevention cap	16	
27	Seat belt	1	Every 3 years

MAINTENANCE SCHEDULE

MAINTENANCE SCHEDULE CHART

INITIAL 100 HOURS MAINTENANCE (ONLY AFTER THE FIRST 100 HOURS)	
CLEAN STRAINER OF COUPLING LUBRICATING OIL FILTER	4- 56
INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS)	
CHANGE OIL IN SWING MACHINERY CASE	4- 66
CHANGE OIL IN COUPLING CASE	4- 68
CHANGE OIL IN FINAL DRIVE CASE	4- 73
WHEN REQUIRED	
CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT	4- 18
CLEAN INSIDE OF COOLING SYSTEM	4- 23
CHECK AND TIGHTEN TRACK SHOE BOLTS	4- 26
CHECK AND ADJUST TRACK TENSION	4- 27
REPLACE BUCKET TEETH (KMAX)	4- 29
ADJUST BUCKET CLEARANCE	4- 33
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID	4- 34
CHECK AND ADJUST AIR CONDITIONER	4- 35
CLEAN LINE FILTER, REMOVE DIRT	4- 36
CHECK GAS SPRING	4- 37
BLEEDING AIR FROM HYDRAULIC SYSTEM	4- 38
CHECKS BEFORE STARTING	
EVERY 10 HOURS MAINTENANCE	
LUBRICATING	4- 42
EVERY 100 HOURS MAINTENANCE	
LUBRICATING SWING CIRCLE	4- 44
EVERY 250 HOURS MAINTENANCE	
CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL	4- 45
CHECK LEVEL OF BATTERY ELECTROLYTE	4- 46
CHECK AND TIGHTEN TRACK FRAME AND AXLE CONNECTING BOLTS	4- 48
CHECK ALTERNATOR DRIVE BELT TENSION, ADJUST	4- 48
CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST (ONLY FOR MACHINES EQUIPPED WITH AIR CONDITIONER)	4- 49
EVERY 500 HOURS MAINTENANCE	
REPLACE FUEL PRE-FILTER CARTRIDGE	4- 50
CHECK SWING PINION GREASE LEVEL, ADD GREASE	4- 52
CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTER COOLER FINS, FUEL COOLER FINS, AND CONDENSER FINS (ONLY MACHINES EQUIPPED WITH AIR CONDITIONER) --	4- 53
CLEAN FRESH/RECIRC AIR FILTERS OF AIR CONDITIONER (ONLY FOR MACHINES EQUIPPED WITH AIR CONDITIONER)	4- 54
REPLACE PILOT FILTER	4- 55
CLEAN STRAINER OF COUPLING LUBRICATING OIL FILTER	4- 56

REPLACE DRAIN FILTER CARTRIDGE -----	4- 56
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE -----	4- 57
 EVERY 1000 HOURS MAINTENANCE	
REPLACE FUEL MAIN FILTER CARTRIDGE -----	4- 59
REPLACE FUEL TANK BREATHER ELEMENT -----	4- 62
REPLACE BREATHER ELEMENT IN HYDRAULIC TANK -----	4- 63
REPLACE HYDRAULIC TANK ADDITIONAL BREATHER ELEMENT -----	4- 64
REPLACE HYDRAULIC OIL FILTER ELEMENT -----	4- 65
CHANGE OIL IN SWING MACHINERY CASE -----	4- 66
CHANGE OIL IN COUPLING CASE -----	4- 68
REPLACE CORROSION RESISTOR CARTRIDGE (IF EQUIPPED) -----	4- 69
CHECK WELDED STRUCTURE -----	4- 70
CHECK NITROGEN GAS CHARGE PRESSURE IN ACCUMULATOR (FOR BREAKER) -----	4- 72
 EVERY 2000 HOURS MAINTENANCE	
CHANGE OIL IN FINAL DRIVE CASE -----	4- 73
CLEAN HYDRAULIC TANK STRAINER -----	4- 74
CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT) -----	4- 75
CHECK ALTERNATOR -----	4- 78
CHECK ENGINE VALVE CLEARANCE, ADJUST -----	4- 78
CHECK ALL TIGHTENING POINTS OF ENGINE EXHAUST PIPE CLAMPS -----	4- 78
 EVERY 4000 HOURS MAINTENANCE	
CHECK WATER PUMP -----	4- 79
REPLACE ACCUMULATOR (FOR CONTROL CIRCUIT) -----	4- 79
CHECK FOR LOOSENESS OF HIGH-PRESSURE PIPING CLAMP, HARDENING OF RUBBER -----	4- 80
CHECK FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER -----	4- 80
CHECK OPERATING CONDITION OF COMPRESSOR -----	4- 81
CHECK STARTING MOTOR -----	4- 81
 EVERY 5000 HOURS MAINTENANCE	
CHANGE OIL IN HYDRAULIC TANK -----	4- 82
 EVERY 8000 HOURS MAINTENANCE	
REPLACE HIGH-PRESSURE PIPING CLAMP -----	4- 84
REPLACE FUEL SPRAY PREVENTION CAP -----	4- 84

MAINTENANCE PROCEDURE

INITIAL 100 HOURS MAINTENANCE (ONLY AFTER THE FIRST 100 HOURS)

Perform the following maintenance only after the first 100 hours.

- Clean strainer of coupling lubricating oil filter

For details of the method of maintaining, see EVERY 500 HOURS MAINTENANCE.

INITIAL 500 HOURS MAINTENANCE (ONLY AFTER THE FIRST 500 HOURS)

Carry out the following maintenance only after the first 500 hours of operation on new machines.

- Change oil in swing machinery case
- Change oil in couplig case
- Change oil in final drive case

Special tools are needed for inspection and maintenance, so contact your Komatsu distributor.

For details of the method of replacing or maintaining, see EVERY 1000 HOURS and EVERY 2000 HOURS SERVICE.

WHEN REQUIRED

CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT

WARNING

- When using compressed air, there is danger of dirt flying and causing personal injury. Always wear protective glasses, dust mask, or other protective equipment.
- When removing the outer element from the air cleaner body, it is dangerous to pull it out by force. When working in high places or where the foothold is poor, be careful not to fall because of the reaction when pulling out the outer element.

NOTICE


- Do not clean the air cleaner element until the air cleaner clogging monitor on the monitor panel light up. If the element is cleaned frequently before the air cleaner clogging monitor light up, the air cleaner will not be able to display its performance fully, and the cleaning efficiency will also go down. In addition, during the cleaning operation, more dirt stuck to the element will fall inside the inner element.
- If inspection, cleaning, or maintenance is carried out with the engine running, dirt will enter the engine and cause damage to the engine. Always stop the engine before carrying out these operations.

Checking

If air cleaner clogging monitor (1) of the monitor panel flashes, clean the air cleaner element.

Replacing

- Replacing element, O-ring
 - If one year has passed since installing the element or if air cleaner clogging monitor (1) on the monitor panel flashes immediately after the element is cleaned, replace the outer element, inner element, and O-ring.
- Replacing evacuator valve
 - Replace it if it is damaged or the rubber is markedly deformed.

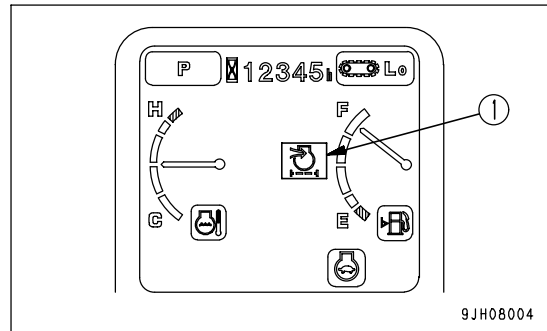


Cleaning Outer Element

NOTICE

Before and after cleaning the element, do not leave or keep it in direct sunlight.



1. Open the engine hood at the front side of the machine, remove 6 hooks (2), then remove cover (3).

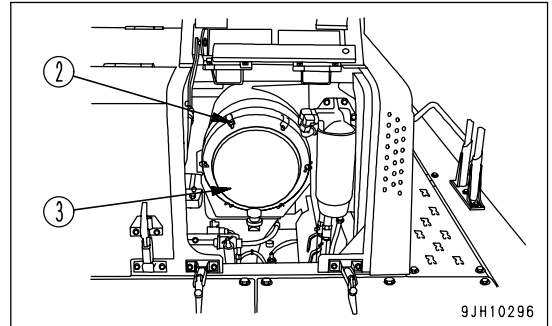

NOTICE

- Never remove the inner element (6). It will allow dirt to enter and cause failure of the engine.
- Do not use a screwdriver or other tool.


2. Hold the outer element (5), rock it lightly up and down and to the left and right, and rotate the element to the left and right to pull it out.
3. When the outer element (5) has been removed, check that the inner element has not come out of position and is not at an angle. If it is at an angle, insert your hand and push it in straight.
4. After removing the outer element (5), cover the inner element (6) with a clean cloth or tape to prevent dirt or dust from entering.
5. Wipe off or brush off the dirt stuck to cover (3) and the inside of the air cleaner body (7).
6. Remove any dirt or dust that is accumulated to evacuator valve (4) installed to cover (3).

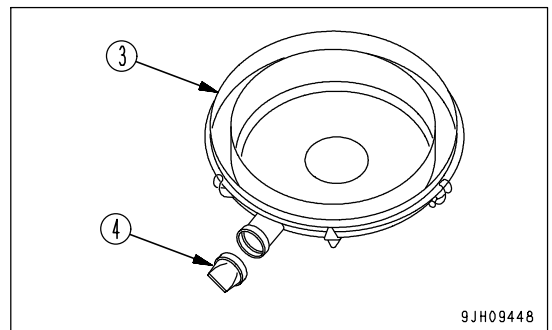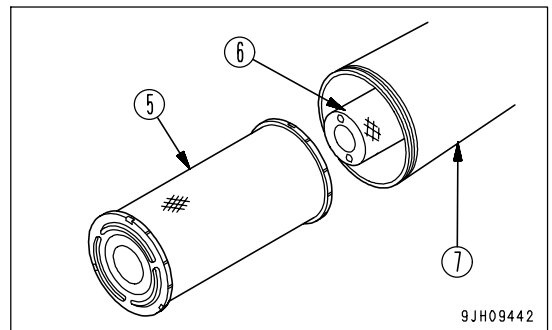

NOTICE


When cleaning the element, do not hit or beat it against anything.

7. Direct dry compressed air (less than 0.69 MPa (7 kg/cm², 99.4 PSI)) to the outer element from inside along its folds, then direct it from outside along its folds and again from inside.
 - 1) Replace the outer element which has been cleaned 6 times repeatedly or used throughout a year. Replace the inner element at the same time.

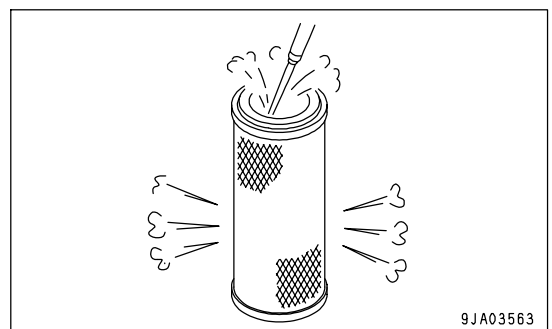

- 2) Replace both inner and outer elements when the air cleaner clogging monitor (1) lights up soon after installing the cleaned outer element even though it has not been cleaned 6 times.

8. If small holes or thinner parts are found on the element when it is checked by shining a light through it after cleaning, replace the element.

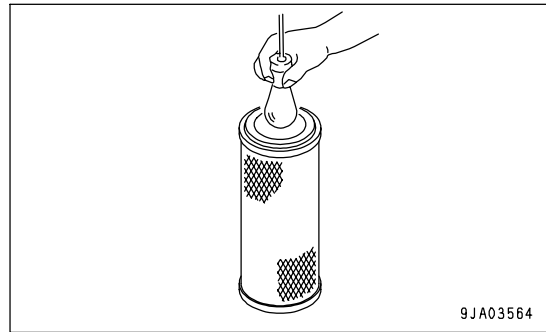

9. Remove the cloth or tape covering inner element (6).

NOTICE


- Do not use an element whose folds or gasket or seal are damaged.
- If the element or O-ring are cleaned and used again after they have been used for more than one year, it will cause problems. Do not use them again.

10. Check that there is no dirt or oil stuck to the seal portion of the new element or cleaned element. Wipe off any dirt or oil.

11. Push the outer element in straight with your hand when installing it to the air cleaner body. If the outer element is held and rocked lightly up and down and to the left and right while pushing it in, the outer element can be inserted easily.


NOTICE

When inserting the element, if the rubber at the tip is swollen or the outer element is not pushed in straight, and cover (3) is assembled by force to hook (2), there is danger that the hook and air cleaner body may be damaged, so be careful when assembling.

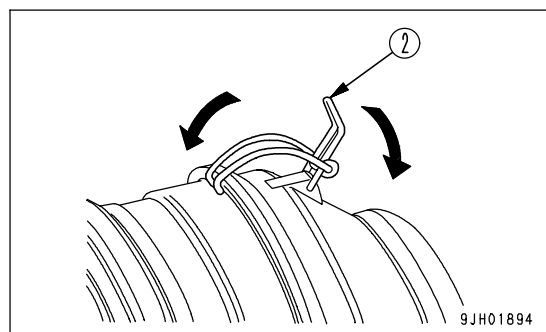

12. Install cover (3) as follows.


- 1) Align cover (3) with the element.
- 2) Hook the tip of hook (2) to the protruding part of the air cleaner body and lock it in position.
- 3) When locking hooks (2) in position, apply the hooks in turn on opposite sides (top, bottom, left, right) in the same way as when tightening bolts.
- 4) Always install cover (3) so that the evacuator (4) is facing the ground (A).
- 5) When cover (3) is installed, check that the clearance between the air cleaner body and cover (3) is not too large. If it is too large, install again.

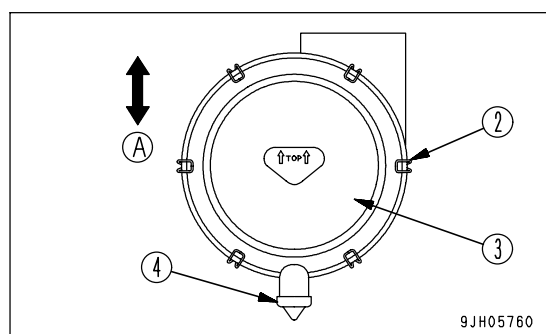

13. When replacing the element, push the indicator button at the bottom of the air cleaner to reset it.

Install Air Cleaner Element

1. Open the engine hood at the front side of the machine, remove 6 hooks (2), then remove cover (3).

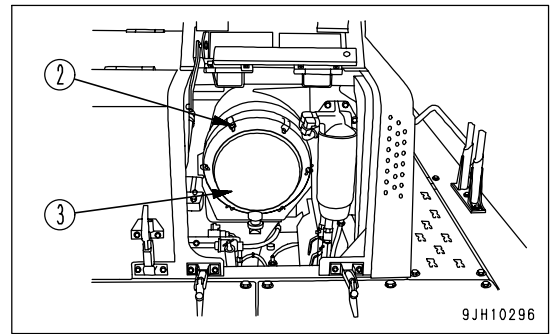



2. Hold the outer element (5), rock it lightly up and down and to the left and right, and rotate the element to the left and right to pull it out.

Do not remove inner element (6) when doing this.

3. When the outer element (5) has been removed, check that the inner element has not come out of position and is not at an angle. If it is at an angle, insert your hand and push it straight.

4. Wipe off or brush off the dirt stuck to cover (3) and the inside of the air cleaner body (7).

5. Remove any dirt or dust that is accumulated to evacuator valve (4) installed to cover (3).

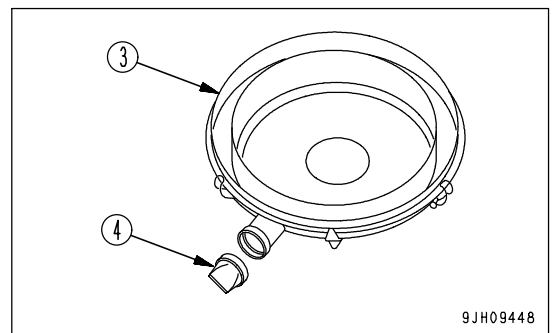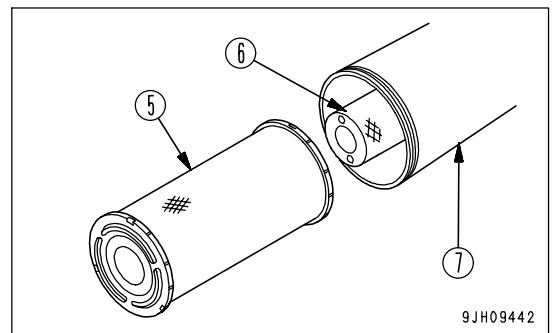


NOTICE

- The inner element must not be cleaned and used again. When replacing the outer element, replace the inner element at the same time.
- If the inner element is not installed properly and the outer element and cover are installed, there is danger that the outer element will be damaged.
- The seal portion on imitation parts lacks precision, and allows the entry of dust, which leads to damage of the engine. Do not use such imitation parts.

6. Remove inner element (6), then quickly install the new inner element.
Insert the inner element securely so that it does not move.

7. Push the new outer element (5) in straight with your hand when installing it to the air cleaner body.
If the element is held and rocked lightly up and down and to the left and right while pushing it in, the element can be inserted easily.

8. Replace O-ring (8) of cover (3) with a new part.

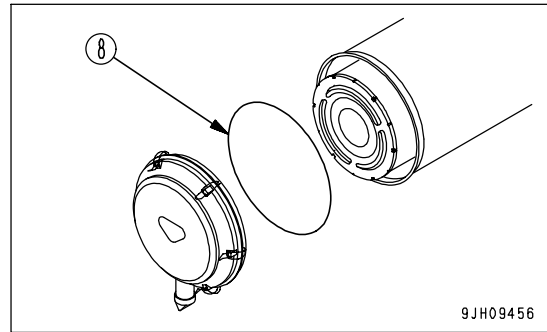


NOTICE



When inserting the element, if the rubber at the tip is swollen or the outer element is not pushed in straight, and cover (3) is assembled by force to hook (2), there is danger that the hook and air cleaner body may be damaged, so be careful when assembling.

9. Install cover (3) as follows.

- 1) Align cover (3) with the element.
- 2) Hook the tip of hook (2) to the protruding part of the air cleaner body and lock it in position.
- 3) When locking hooks (2) in position, apply the hooks in turn on opposite sides (top, bottom, left, right) in the same way as when tightening bolts.
- 4) Always install cover (3) so that the evacuator (4) is facing the ground (A).
- 5) When cover (3) is installed, check that the clearance between the air cleaner body and cover (3) is not too large. If it is too large, install again.

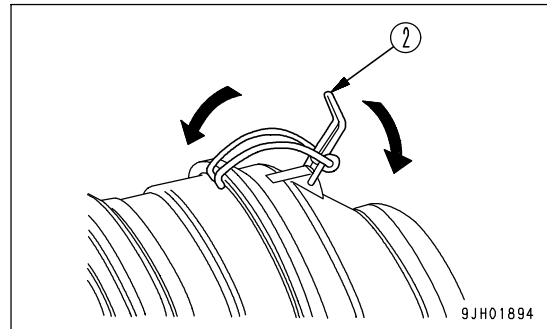

10. After replacing the element, press reset button (9) of the dust indicator to return the yellow display to its original position.

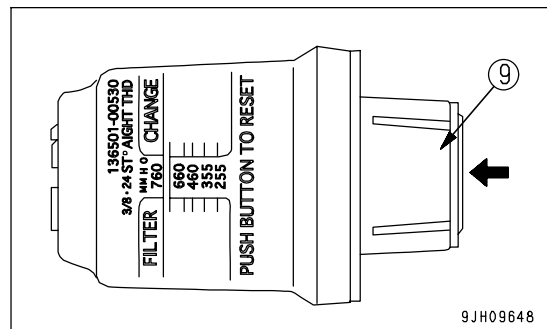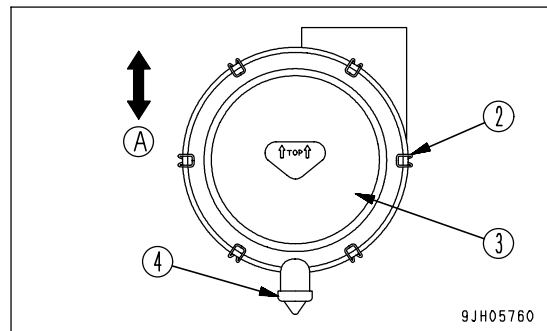

CLEAN INSIDE OF COOLING SYSTEM

 **WARNING**

- Immediately after the engine is stopped, the coolant is at a high temperature and the radiator is under high internal pressure. If the cap is removed to drain the coolant in this condition, there is a hazard of burns. Wait for the temperature to go down, then turn the cap slowly to release the pressure before removing it.
- Cleaning is carried out with the engine running. When standing up or leaving the operator's seat, set the lock lever to the LOCK position.
- For details of starting the engine, see "BEFORE STARTING ENGINE (PAGE 3-79)" and "STARTING ENGINE (PAGE 3-98)" in the OPERATION section.
- There is danger of touching the fan if the undercover is left removed.
Never enter behind the machine when the engine is running.

Stop the machine on level ground when cleaning or changing the coolant.

Clean the inside of the cooling system, change the coolant according to the table below.

Antifreeze coolant	Interval for cleaning inside of cooling system and changing antifreeze coolant	Precautions for use
Komatsu supercoolant (AF-NAC)	Every two years or every 4000 hours whichever comes first	1*

*1: When using Komatsu Supercoolant (AF-NAC), there is no need to use a corrosion resistor. When no corrosion resistor is used, use the special cover (600-411-9000). Please consult your Komatsu distributor about the method of installing.
When using corrosion resistor, use Komatsu genuine corrosion resistor. If you use another corrosion resistor, it may cause serious problems such as corrosion of the engine and parts of the cooling system that use light metals such as aluminum.

The coolant has the important function of preventing corrosion as well as preventing freezing. Even in the areas where freezing is not an issue, the use of antifreeze coolant is essential. Komatsu machines are supplied with Komatsu Supercoolant (AF-NAC). Komatsu Supercoolant (AF-NAC) has excellent anticorrosion, antifreeze and cooling properties and can be used continuously for 2 years or 4000 hours. Komatsu Supercoolant (AF-NAC) is strongly recommended wherever available.

To maintain the anticorrosion properties of Supercoolant (AF-NAC), always keep the density of Supercoolant between 30% and 68%.

When deciding the ratio of antifreeze to water, check the lowest temperature in the past, and decide from the mixing table given below.

It is actually better to estimate and temperature about 10°C (18°F) lower when deciding the mixing ratio.

The mixing ratio depends on the ambient temperature, but it should always be a minimum of 30% by volume (antifreeze/total amount of coolant x 100).

Even in areas where it is not necessary to prevent freezing, use Supercoolant (AF-NAC) at a mixing ratio of at least 30% to prevent corrosion of the cooling system.

The freezing temperature of undiluted antifreeze is -15°C (5°F). Do not store undiluted antifreeze at a temperature of below -15°C (5°F).

Mixing rate of water and antifreeze

Min. atmospheric temperature	°C	Above- 10	- 15	- 20	- 25	- 30	-35	-40
	°F	Above14	5	- 4	- 13	- 22	-31	-40
Amount of antifreeze	liters	31.2	37.4	42.6	47.8	52.0	56.2	60.3
	US gal	8.24	9.88	11.25	12.63	13.74	12.13	15.93
Amount of water	liters	72.8	66.6	61.4	56.2	52.0	47.8	43.7
	US gal	19.23	17.60	16.22	14.85	13.74	12.63	11.55
Proportion by volume	%	30	36	41	46	50	54	58

! WARNING

Antifreeze coolant is flammable, so keep it away from flame.

Antifreeze coolant is toxic. When removing the drain plug, be careful not to get water containing antifreeze coolant on you. If it gets in your eyes, flush your eyes with large amount of fresh water and see a doctor at once.


Use antifreeze and appropriate water for diluting. (for details, see "COOLANT AND WATER FOR DILUTION (PAGE 4-5)")

We recommend use of an antifreeze density gauge to control the mixing proportions.


Prepare a container whose capacity is larger than the specified coolant volume to catch drained coolant.

Prepare a hose to supply antifreeze coolant and water.


1. Stop the engine, close valve (1) on corrosion resistor (2).
(Machines equipped with corrosion resistor)

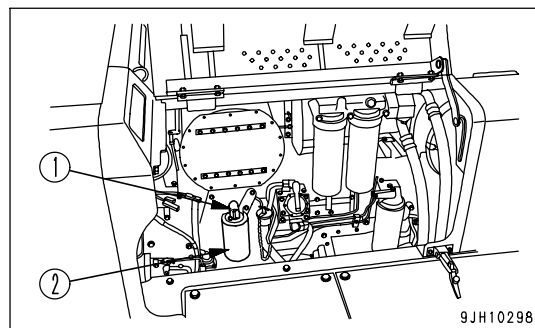

2. Remove the cover and turn radiator cooling water filler cap (3) slowly to take it off.

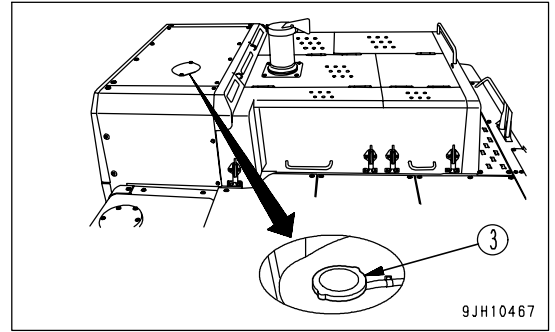

3. Remove covers (4) and (5), and place a container to receive antifreeze- mixed cooling water under drain valve (6) located in the lower part of the radiator and also under engine cooling water drain valve (7) located in the upper part of the engine oil pan.

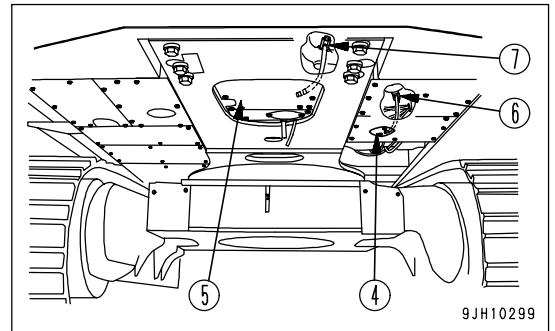

4. Open drain valves (6) and (7) to drain cooling water.
5. After draining the antifreeze solution, close drain valve (6), (7), then fill with clean water. After the radiator is filled with water, start and run the engine at low idling speed. After the water temperature rises above 90°C (194°F), run the engine for about 10 minutes.

6. Stop the engine and open drain valves (6) and (7) to drain the water.
7. After draining the water, clean the radiator with detergent. When carrying out the flushing operation, follow the instructions given with the flushing agent.

8. Replace the corrosion resistor, and open valve (1). (Only machines equipped with corrosion resistor) For details of replacement of the corrosion resistor cartridge, see "REPLACE CORROSION RESISTOR CARTRIDGE (PAGE 4-69)".

9. Close drain valves (6), (7).

10. Install the covers (4) and (5).


11. Add coolant until it overflows from the water filler.

Decide the proportions of antifreeze and water according to the table for the mixing rate of water and antifreeze.

12. Run the engine at low idling for 5 minutes to remove the air from the water, then run at high idling for 5 minutes. (Leave radiator cap (3) removed when doing this.)


13. After draining off the coolant of sub tank (8), clean the inside of the sub tank and refill the water between FULL and LOW level.

14. Stop the engine, wait for 3 minutes, add city water until the water level reaches near the water filler port, then tighten the cap (3).

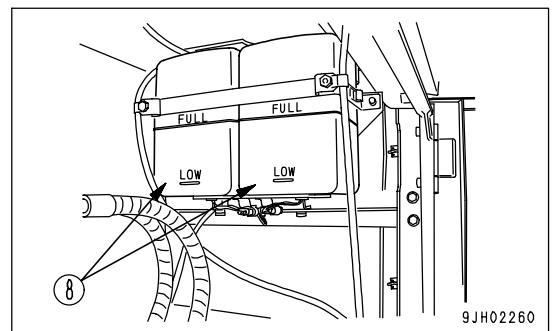

CHECK AND TIGHTEN TRACK SHOE BOLTS

If the machine is used with track shoe bolts (1) loose, they will break, so tighten any loose bolts immediately.

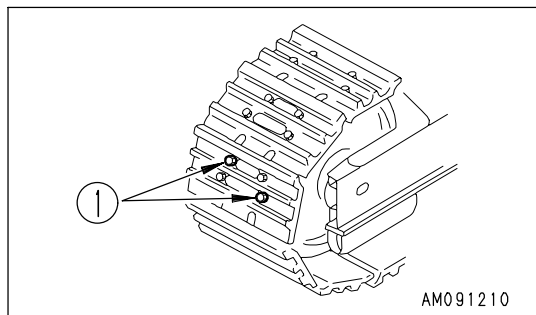


AM091210

Tightening

1. First, tighten to a tightening torque of 784 ± 78 Nm (80 ± 8 kgm, 578.6 ± 57.9 lbft), then check that the nut and shoe are in tight contact with the link mating surface.
2. After checking, further tighten to the tightening torque of $120^\circ \pm 10^\circ$.

Order for Tightening

Tighten the bolts in the order shown in the diagram on the right. After tightening, check that the nut and shoe are in close contact with the link mating surface.

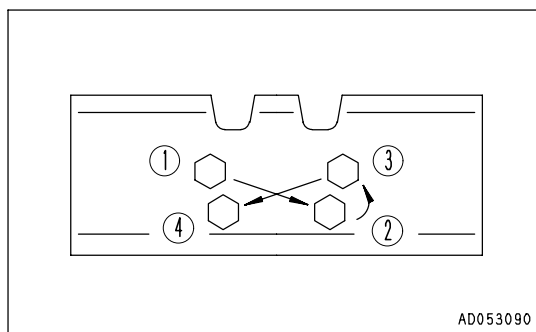

AD053090

CHECK AND ADJUST TRACK TENSION



WARNING


- For details of starting the engine and operating the work equipment, see "BEFORE STARTING ENGINE (PAGE 3-79)", "STARTING ENGINE (PAGE 3-98)", "AFTER STARTING ENGINE (PAGE 3-101)", and "WORK EQUIPMENT CONTROLS AND OPERATIONS (PAGE 3-118)" in the OPERATION section.

The wear of the pins and bushings on the undercarriage will vary with the working conditions and type of soil, so inspect the track tension frequently in order to maintain the standard tension.

Stop the machine on firm, horizontal ground when carrying out the inspection and maintenance.

Checking

1. Run the engine at low idle, then move the machine forward for a distance equal to the track length on ground, and slowly stop the machine.
2. Place wooden bar (3) on top of the track from No. 2 roller (1) to No. 3 roller (2).
3. Measure the maximum deflection between bottom surface of the wooden bar and top surface of the track shoe. Deflection "a" should be 10 - 30 mm (0.4 - 1.2 in).

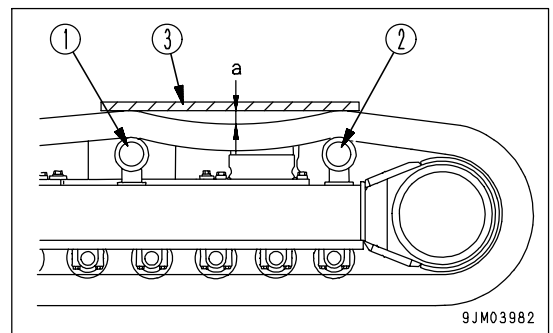

Adjustment


! WARNING

There is danger of plug (1) flying out under the high internal pressure of the grease. Never loosen plug (1) more than 1 turn. Never loosen any part other than plug (1). Never put your face in the mounting direction of plug (1). If the track tension cannot be loosened with the procedure given here, please contact your Komatsu distributor.


Increasing Track Tension

Prepare a grease pump.

1. Pump in grease through valve (1) using a grease gun.
2. To check that the tension is correct, move the machine slowly forward and in reverse.
3. Check the track tension again, and if the tension is not correct, adjust it again.

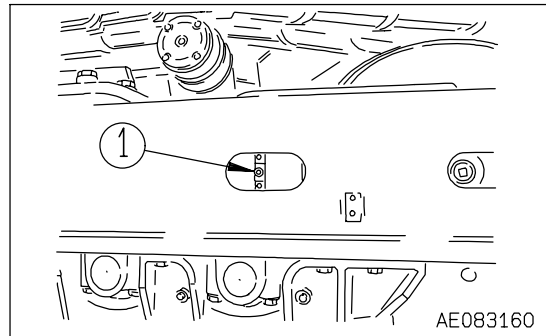

4. Continue to pump in grease until (A) becomes 148 mm (5.8 in). If the tension is still loose, the pin and bushing are excessively worn, so they must be either turned or replaced. Contact your Komatsu distributor for repairs.
(B): Grease cylinder

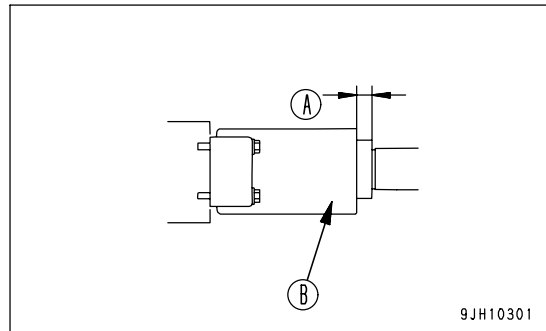


Loosening Track Tension

! WARNING

It is extremely dangerous to release the grease by any method except the procedure given below. If track tension is not relieved by this procedure, contact your Komatsu distributor for repairs.

1. Loosen plug (1) gradually to release the grease.
2. Turn plug (1) a maximum of one turn.
3. If the grease does not come out smoothly, move the machine forwards and backwards a short distance.
4. Tighten plug (1).
5. To check that the tension is correct, move the machine slowly forward.
6. Check the track tension again, and if the tension is not correct, adjust it again.

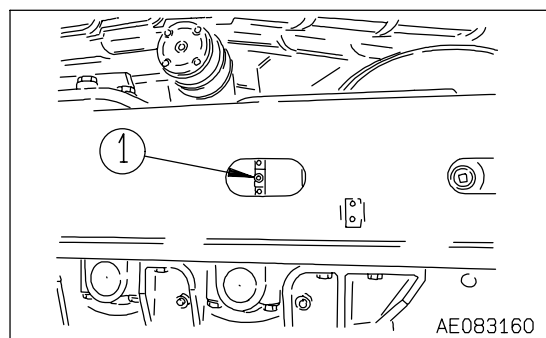

REPLACE BUCKET TEETH (KMAX)

Replace teeth

Replace the bucket teeth before the adapter starts to wear.




WARNING


- It is dangerous if the work equipment moves by mistake when the teeth are being replaced.
Set the work equipment in a stable condition, then stop the engine and set the lock lever securely to the LOCK position.
- There is a hazard that fragments will fly during the replacement work, so always wear protective equipment like safety glasses and gloves.
- If the tooth pins cannot be removed in this procedure, for safety's sake, be sure to ask your Komatsu distributor for the replacement.

- Prepare for a socket wrench for 14 mm- width across flats.
- For machines of loading specifications, prepare for a socket wrench for 16 mm- width across flats.


1. Set the bucket with the bottom of the bucket on block (3) so that pin (1) can be removed, then stop the engine.

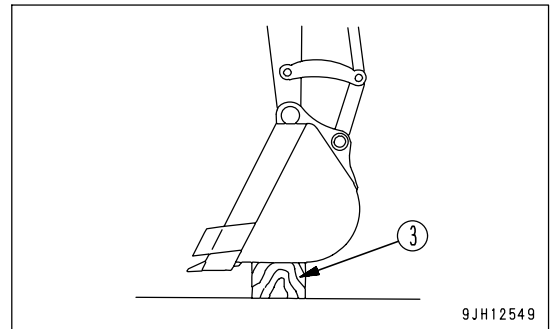


2. Within 15 seconds after stopping the engine, move each control lever (for work equipment and travel) to the full stroke in all directions to release the internal pressure.
3. Check that the work equipment is in a stable condition, then set the lock lever to the LOCK position (L).

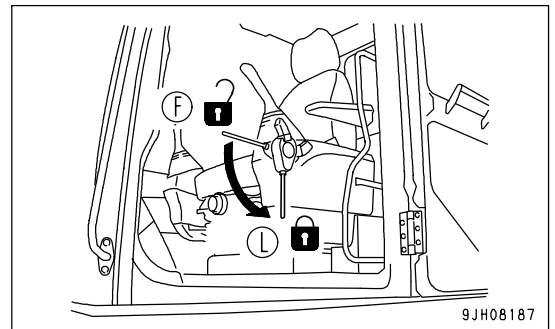


4. Fit a socket wrench to the head of pin (1), then turn it counterclockwise 90° to release the lock of the pin.

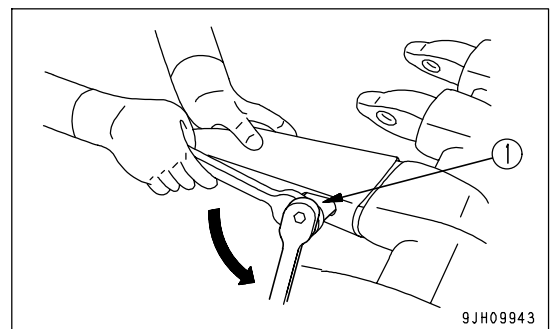

5. Push pin (1) out by hand or with a hammer in the direction of the arrow to remove the teeth (2).

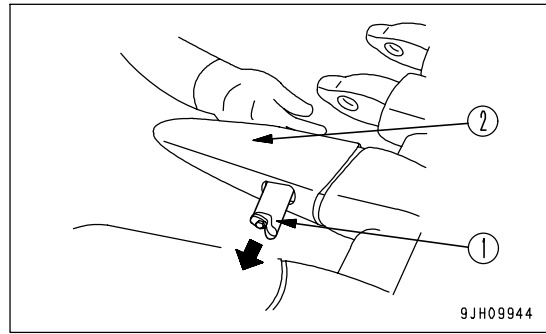

6. Clean the mounting surface, fit new tooth (2) to the adapter, insert new pin (1), then tighten 90° clockwise with the socket wrench to lock the pin and complete the installation.

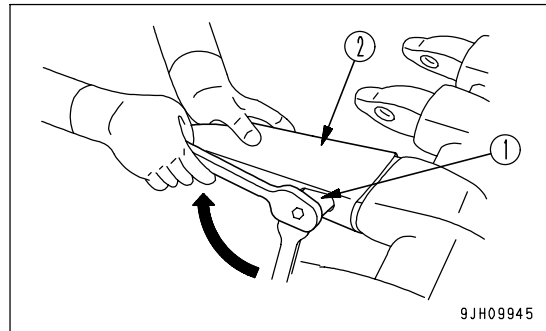


REMARK

Turn the tooth upside down and rotate the installation positions. Such practice allows wear on the teeth to develop evenly, the lifetime to be extended, and the replacement frequency to be reduced.

NOTICE


- To prevent a tooth from slipping off, also replace the pins with a new one when the teeth are replaced.
- To prevent tooth (4) and (5) at the either end from slipping off, insert the pins from within (i.e. in the direction shown with an arrow).

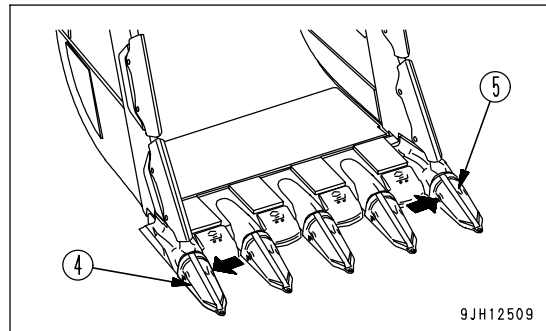

How to Remove Slinging Loop

WARNING

- In case a slinging loop is fitted to the bucket tooth, remove it. If digging work is started without the slinging loop being removed, there is the danger that the slinging loop is broken and broken pieces are sent flying around.
- It is quite dangerous if the work equipment begins to move by mistake while the slinging loop is being removed.
Hold the work equipment in a steady and safe posture; stop the engine; and put the lock lever in the "LOCK" position.
- While the slinging loop is being removed, there is the danger that broken slinging loop pieces are sent flying around, so wear protective tools such as safety glasses.
- Never hit the tooth against a boulder for the purpose of removing the slinging loop.
There is the danger that the broken slinging loop will be sent flying around in pieces, causing a personal injury.

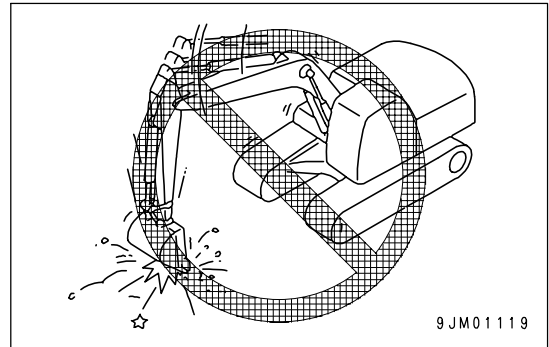


NOTICE

If the machine is operated without the sling being removed, the following problems may possibly arise.


- When the work equipment is pulled back, the slinging loop at the tip of the tooth interferes with the boom.
- A crack occurring at the time of sling breakage progresses to the tooth, resulting in the breakage of the machine itself.
- The sling is broken in the digging operation, broken pieces are mixed in the sand and earth to be loaded.

Be sure to remove the slinging loop in the following steps.

1. Put block (3) under the bottom of the bucket and stop the engine.

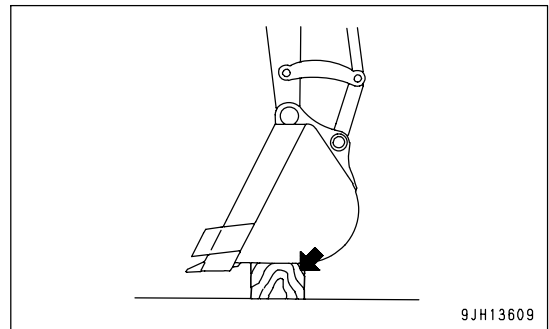

2. Within 15 seconds after stopping the engine, move each control lever (for work equipment and travel) to the full stroke in all directions to release the internal pressure.
3. Check that the work equipment is in a stable condition, then set the lock lever to the LOCK position (L).

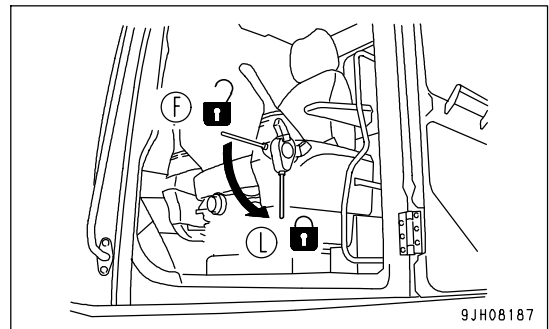


4. Preheat the slinging loop to be cut to 100-150 oC and use a gas cutter to cut the slinging.

- Tip of tooth (1)
- Top of tooth (2)

NOTICE

When cutting the slinging loop at each part of the bucket, cut at the following cutting positions (A) - (A) or (B) - (B), according to the shape of the loop.


In addition, when doing this, be careful that the cutting surface does not cut into the main body of the bucket parts.

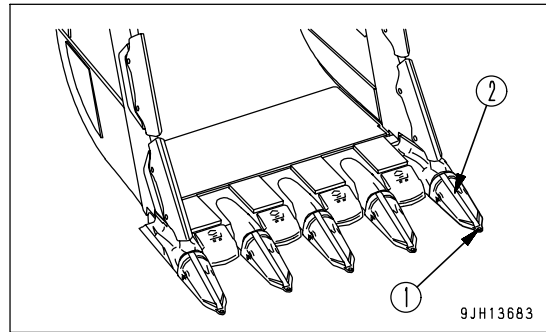

- Cutting position (A) - (A)

This applies to tip of tooth (1).


Cut at the bottom of the hole in the lifting loop.

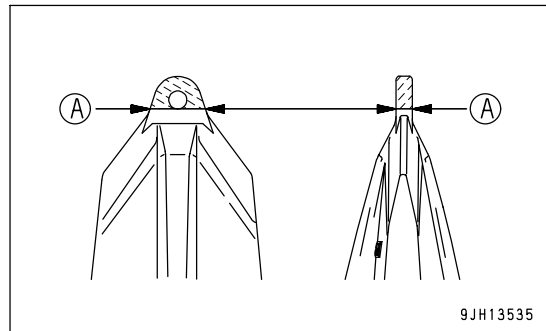

- Cutting position (B) - (B)

This applies to top of tooth (2).

Cut at a position 10-20 mm (0.4 - 0.8 in) from the main body of the bucket part.

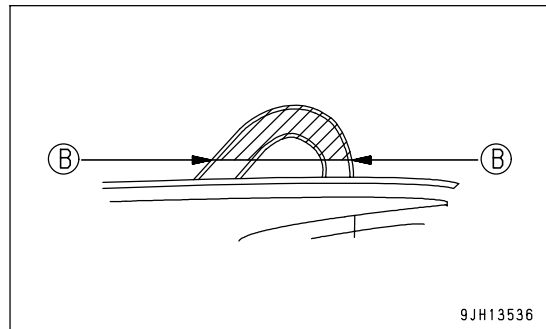

5. Finish the cutting surface smoothly, using a grinding machine.


6. Check that there is no crack on the cutting surface.

ADJUST BUCKET CLEARANCE

⚠ WARNING


It is dangerous if the work equipment is mistakenly moved when adjusting the bucket clearance.

Set the work equipment in a stable condition, stop the engine, then set lock lever securely to the LOCK position (L).

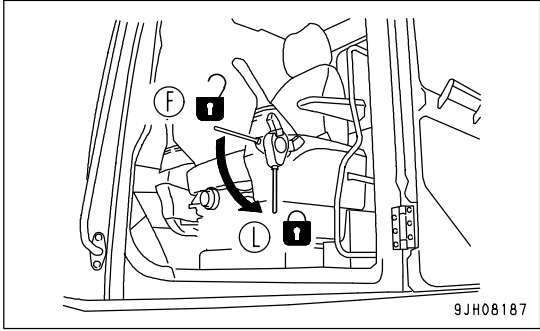

If there is excessive free play on the coupling section of the bucket and arm, adjust the bucket clearance in the following manner.

1. Set the work equipment to the position shown in the diagram on the right, then stop the engine and set the lock lever (1) to the LOCK position (L).
2. Loosen 3 bolts (3), 6 bolts (4), plate (2) and plate (6).
3. Take out shims (5) equivalent in size to free play (a).
Thickness of shim (5) is 0.5 mm or 1.0 mm (0.02 or 0.04 in).
When free play (a) is less than a thickness of shim, do not compress the shims by tightening bolt (2).
4. Tighten 3 bolts (3) and 6 bolts (4).

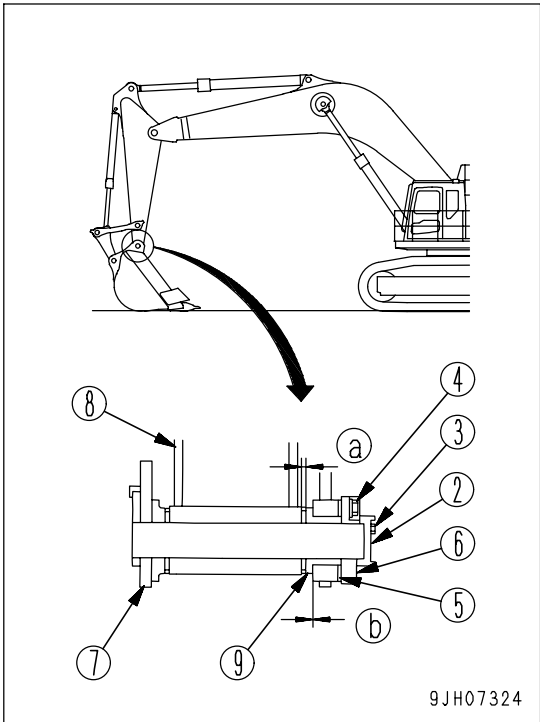


- (7): Bucket
- (8): Arm
- (9): Bush

With this adjustment, clearance (b) becomes larger, but play (a) is removed.

CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID

If there is air in the window washer fluid, check the level of the fluid in window washer tank (1). Add automobile window washer fluid if necessary.

When adding fluid, be careful not to let any dust get in.

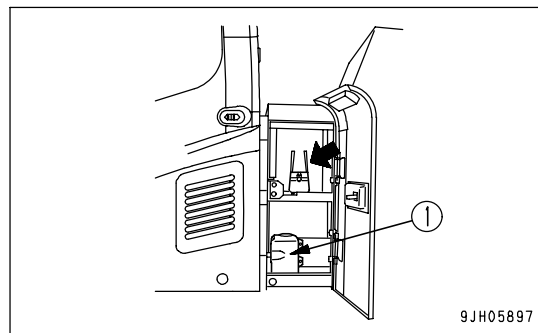

Mixture Ratio of Pure Washer Fluid and Water

The proportion differs according to the ambient temperature, so dilute the washer fluid with water to the following proportions before adding.

Operation area and season	Mixture ratio	Freezing temperature
Normal	Pure washer fluid 1/3: water 2/3	- 10°C (14°F)
Winter in cold region	Pure washer fluid 1/2: water 1/2	- 20°C (- 4°F)
Winter in extremely cold region	Pure washer fluid	- 30°C (- 22°F)

There are two types depending on the freezing temperature:

-10°C (14°F) (general use) and -30°C (-22°F) (cold area use), select according to the area and season.

CHECK AND MAINTENANCE AIR CONDITIONER

(Only for machines equipped with an air conditioner)


Check Level of Refrigerant (gas)

 **WARNING**

If the refrigerant used in the air conditioner gets into your eyes or on your hands, it may cause loss of sight or frostbite. Do not touch the refrigerant. Never loosen any part of the refrigerant circuit. Do not bring any flame close to any point where the refrigerant gas is leaking.


If the level of the refrigerant (gas) is low, the cooling effect will be reduced. Run the engine at high idle, and check the flow of the refrigerant gas (R134a) in the refrigerant circuit through the sight glass (2) (inspection window) of the receiver (1) when the cooler is running at high speed.

- (A) No bubbles in refrigerant flow: Suitable
- (B) Some bubbles in flow (bubbles pass continuously): Lack of refrigerant
- (C) Colorless, transparent: No refrigerant

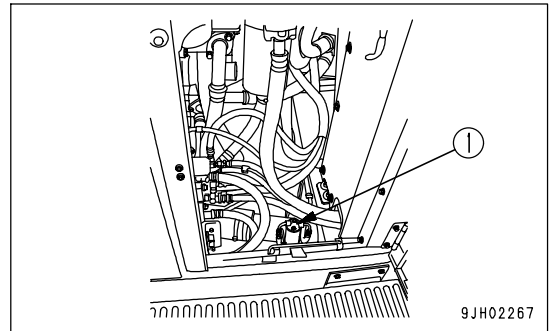

REMARK

When there are bubbles, the refrigerant gas level is low, so contact your Komatsu distributors to have refrigerant added. If the air conditioner is run with the refrigerant gas level low, it will cause damage to the compressor.

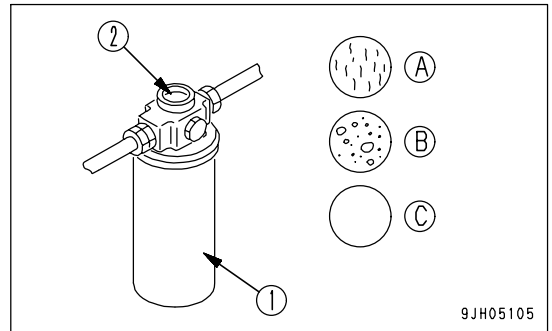

Inspection During Off Season

Even during the off-season, operate the air conditioner for 3 to 5 minutes once a month to maintain the oil film at all parts of the compressor.

Inspection and Maintenance Items


Check, maintenance items	Content of check, maintenance	Guideline for maintenance interval
Refrigerant (gas)	Charge amount	Twice a year (spring, autumn)
Air conditioner condenser	Clogged fins	Every 500 hours
Compressor	Operating condition	Every 4000 hours
V-belt	Damage, tension	Every 250 hours
Blower motor, fan	Operating condition (does it make abnormal noise?)	When required
Control mechanism	Operating condition (does it function normally?)	When required
Piping mounts	Mounting condition, looseness at tightening or connecting portions, leakage of gas, damage	When required

CLEAN LINE FILTER, REMOVE DIRT


If there is any abnormality in the pump or other hydraulic equipment, remove the dirt from inside the line filter as follows.

Before removing the line filter, release the pressure inside the hydraulic circuit. For details, see "METHOD OF RELEASING PRESSURE IN HYDRAULIC CIRCUIT (PAGE 4-78)".

1. Remove plug (2).
2. Using a bolt (10 mm (0.4 in)), remove filter (1).
3. Wash filter (1).
 - Be careful to remove the dirt stuck to the side face of the filter when washing it.
4. Replace backup ring (3) and O-rings (4) and (5) with new parts.
5. Assemble filter (1) after washing it.
 - Tightening torque for plug (2): $181 \pm 18.1 \text{ Nm}$ ($18.5 \pm 1.85 \text{ kgm}$, $133.8 \pm 13.4 \text{ lbft}$)

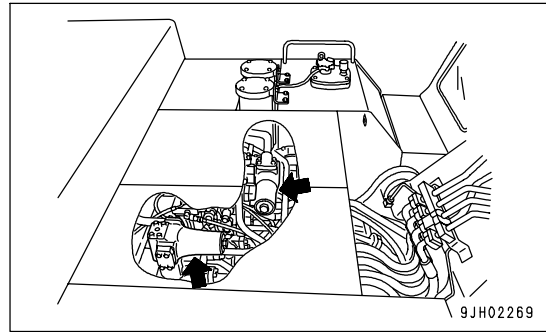

After assembling the line filter again, bleed the air. For details, see "BLEEDING AIR FROM HYDRAULIC SYSTEM (PAGE 4-38)".

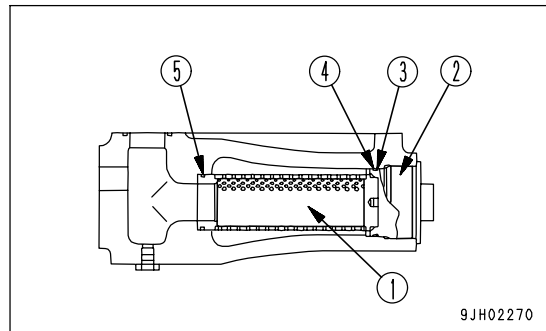

CHECK GAS SPRING



WARNING


The gas spring is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion, which will lead to serious injury or damage. When handling the gas spring, always do as follows.

- Do not disassemble the gas spring.
- Do not bring it near flame or dispose of it in fire.
- Do not make holes in it or weld it.
- Do not hit it, roll it, or subject it to any impact.
- When disposing of the gas spring, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

The gas springs are located at the cab roof (left, right: two places).

In the following cases, please ask your Komatsu distributor to carry out inspection, repair, and replacement.

- When the sun roof is heavy to open.
- When the sun roof is not held open.
- When oil or gas is found to be leaking from the gas spring.

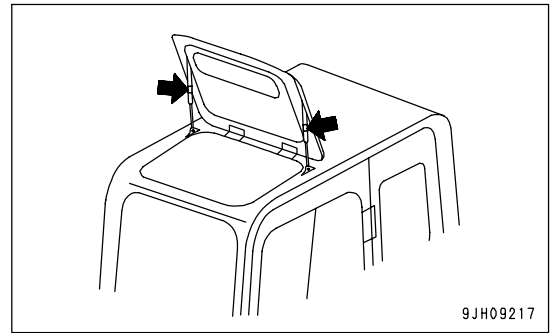

BLEEDING AIR FROM HYDRAULIC SYSTEM

For details of the procedure when starting the engine, see "STARTING ENGINE (PAGE 3-98)". If necessary, refer to the OPERATION volume for the sections for starting the engine, moving the machine off, steering, and stopping.



When starting the engine to bleed the air, cancel the automatic warming-up operation before starting.



NOTICE

- Bleed the air as follows.
 1. Pump (work equipment, swing)
 2. Work equipment circuit
- Run the engine at less than 1000 rpm, and operate the cylinders slowly.
- Do not suddenly stop and cause the cylinder pressure to rise or operate to the end of the stroke.
- When operating the cylinder for the first stroke (extending and retracting), operate particularly slowly.
- When operating the cylinder for the first stroke, there is a large amount of air inside the circuit, so the work equipment will not move for at least 10 seconds. Be careful not to operate the lever to the end of the stroke.
- Use clean oil of NAS7 class or above when filling the pump. Be sure to use a clean oil can.

Carry out Steps 1 - 3 below to bleed the air. If necessary, carry out Steps 4 - 6 in addition.

1. Bleeding air from pump

- 1) Loosen air bleed plug (1) and check that oil oozes out from the air bleeder (3).
- 2) If oil (4) does not ooze out, remove the pump case drain hose and elbow, then fill the inside of the pump case with hydraulic oil through drain port (2).
If the mouthpiece is lower than the surface of the oil in the hydraulic tank, oil will flow out from the drain hole when it is removed, so secure the mouthpiece of the hose at a position higher than the level of the oil in the hydraulic tank.
- 3) After completing the air bleed operation, tighten air bleeder (1) and install the drain hose.

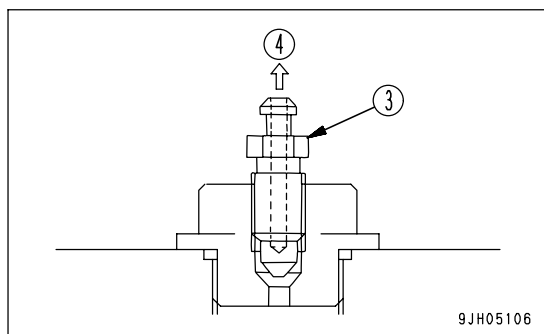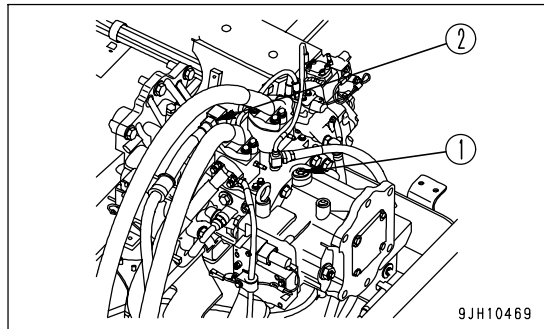

NOTICE

If the drain hose is installed first, oil will spurt out from plug (1) hole. If the pump is operated without filling the pump case with hydraulic oil, abnormal heat will be generated and this may cause premature damage to the pump.

2. Starting engine

Cancel the automatic warming-up operation before starting the engine. Run the engine at low idling for 10 minutes after starting it, then go on to the next operation.


3. Bleeding air from cylinders

- 1) Run the engine at low idle, and extend and retract each cylinder 4 to 5 times, taking care that a cylinder is not moved to the end of its stroke. (Stop the cylinder approx. 100 mm (3.9 in) short of its stroke end)
- 2) Next, operate each cylinder 3 to 4 times to the end of its stroke.
- 3) Finally, operate each cylinder 4 to 5 times to the end of its stroke to completely remove the air.

NOTICE

If the engine is run at high speed immediately after startup or a cylinder is pushed up to its stroke end, air taken inside the cylinder may cause damage to the piston packing.

4. Bleeding air from swing motor (bleed the air only when the oil inside the swing motor case has been drained)
 - When oil has been drained from inside swing motor case
 - 1) Run the engine at low idling, loosen hose (1), and check that oil oozes out from hose (1).

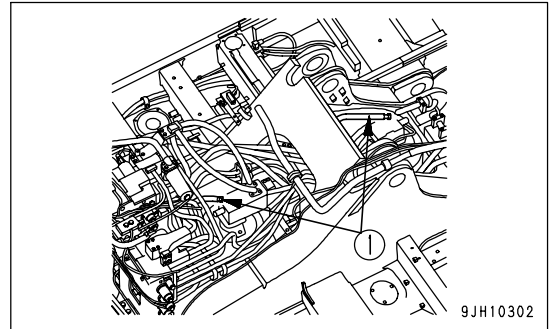

NOTICE

Do not operate the swing under any circumstances.

- 2) If oil does not ooze out, stop the engine, remove hose (1), and fill the inside of the motor case with hydraulic oil.

- 3) After completely bleeding the air, tighten hose (1).
- 4) Run the engine at low idle, and slowly swing the upper structure at least 2 times uniformly to the left and right.

NOTICE

- If the air is not bled from the swing motor, the motor bearings may be damaged.
- Use the above procedure also to bleed the air when the swing motor safety valve has been replaced.

5. Bleeding air from attachment (when installed)

If an attachment has been installed, run the engine at low idling and operate the attachment pedal repeatedly (approx. 10 times) until the air has been bled from the attachment and circuit.


NOTICE

- If the method of bleeding the air from the attachment itself is specified by the manufacturer, bleed the air according to the specified procedure.
- After completing the air bleeding operation, stop the engine, and leave the machine for 5 minutes before starting operations. This will remove the air bubbles in the oil inside the hydraulic cylinders.
- Check that there is no leakage of oil and wipe off any oil that has been spilled.

6. Bleeding air from travel motor circuit

If the piping has been removed from the travel motor circuit, bleed the air after reassembling. To bleed the air, run the engine at low idling and do as follows.


- 1) Start the engine and run at low idling.
- 2) Remove travel motor cover (1), then loosen air bleed plug (2) one turn.

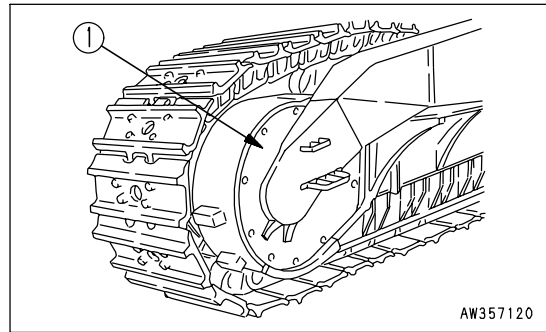

NOTICE

Do not loosen plug (2) more than one turn.

- 3) When no more cloudy white oil comes out from air bleed plug (2), tighten air bleed plug (2).
- 4) Carry out fine operation of the travel lever and set to FORWARD and REVERSE 4 - 5 times.
- 5) Install the travel motor cover.

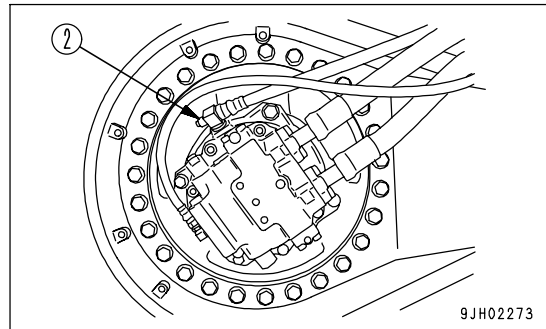

7. Operation

- 1) After completing the air bleed operation, stop the engine and wait for at least 5 minutes before starting operations. This will allow the bubbles in the oil inside the tank to escape.
- 2) Check that there is no leakage of oil, and wipe up any oil that has been spilled.

CHECK BEFORE STARTING

For details of the following items, see "Checks Before Starting (PAGE 3-80)" in the OPERATION section.


- Check coolant level, add coolant
- Check oil level in engine oil pan, add oil
- Check fuel level, add fuel
- Drain water and sediment from fuel tank
- Check for water and sediment in water separator, drain water
- Check oil level in hydraulic tank, add oil
- Check oil level in swing machinery case, add oil
- Check oil level in coupling case, add oil
- Check working lamp switch
- Check electric wiring
- Check function of horn

EVERY 10 HOURS MAINTENANCE


LUBRICATING

1. Set to the greasing posture below, lower the work equipment to the ground, then stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

(1) Boom cylinder foot pin (2 places)

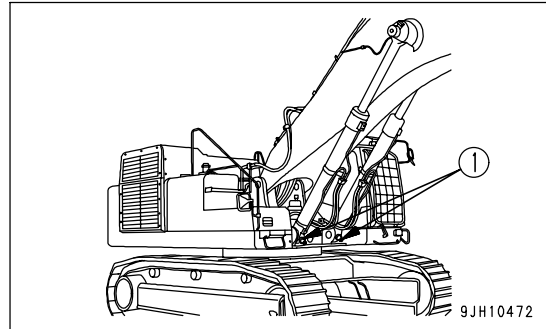


- (2) Boom foot pin (2 places)
- (3) Boom cylinder rod end pin (2 places)
- (4) Arm cylinder foot pin
- (5) Arm cylinder foot pin
(PC800SE,PC850,PC850SE-8 only)

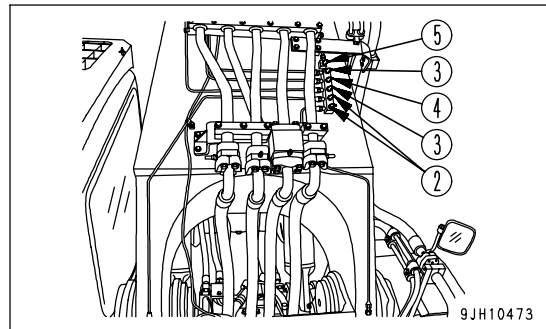

REMARK

The number of arm cylinder foot pins to be greased differs depending on the kind of work equipment.


- (6) Boom-Arm coupling pin (1 place)
- (7) Bucket cylinder foot pin (1 place)
- (8) Arm cylinder rod pin
- (9) Arm cylinder rod pin
(PC800SE,PC850,PC850SE-8 only)

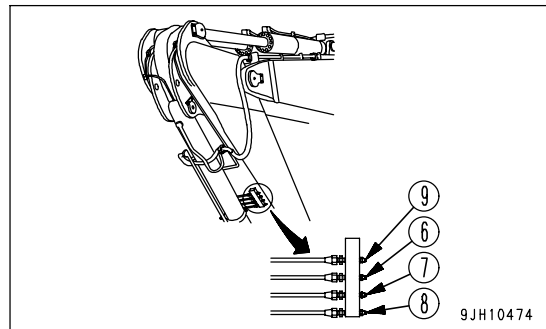


REMARK

The number of arm cylinder rod pins to be greased differs depending on the kind of work equipment.

- (10) Arm-Link coupling pin (1 place)
- (11) Arm-Bucket coupling pin (1 place)

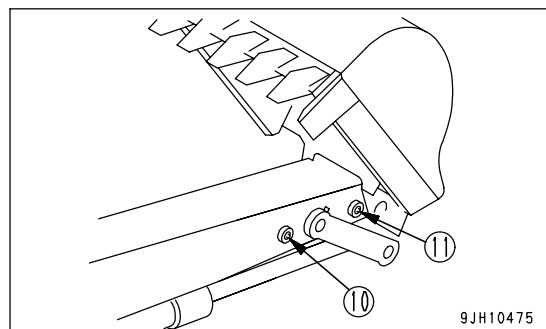

- (12) Link coupling pin (2 places)
- (13) Bucket cylinder rod pin (1 place)
- (14) Bucket-Link coupling pin (1 place)

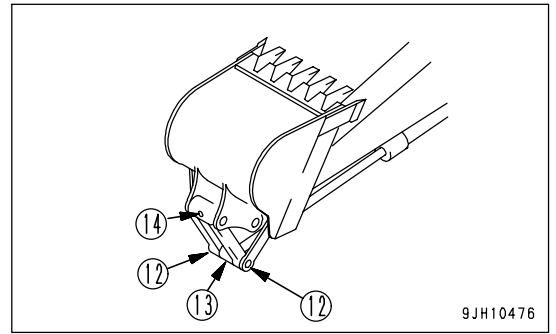


EVERY 100 HOURS MAINTENANCE

Maintenance for every 10 hours service should be carried out at the same time.

LUBRICATING SWING CIRCLE

(4 points)

1. Lower the work equipment to the ground.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

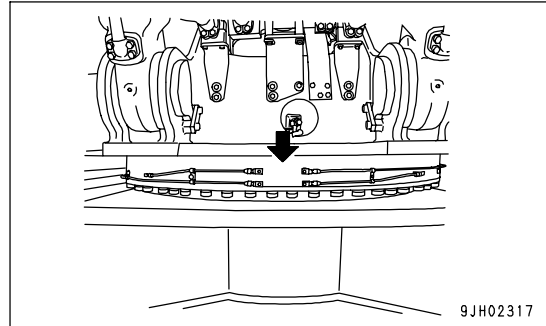

EVERY 250 HOURS MAINTENANCE

Maintenance for every 10 hours service should be carried out at the same time.


CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL



WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause serious burns. Wait for the temperature to go down before starting the operation.
- If there is still pressure remaining inside the case, the oil or plug may fly out.
Loosen the plug slowly to release the pressure.

- Prepare a handle.
 1. Set the TOP mark at the top, with the UP mark and plug (P) perpendicular to the ground surface.
 2. Using a handle, remove plug (F) and check that the oil level is within a range of 10 mm (0.4 in) below the bottom edge of the plug hole.
 3. If the oil level is low, check again. Install plug (F), operate the travel lever, travel in FORWARD or REVERSE, and rotate the sprocket one turn. Perform inspection for Procedure 2 again.
 4. If the oil level is low, add engine oil through plug hole (F) until the oil overflows from plug hole (F).
 5. After checking, install plug (F)
Tightening torque : 93.1 - 122.5 Nm (9.5 - 12.5 kgm, 68.7 - 90.4 lbft)

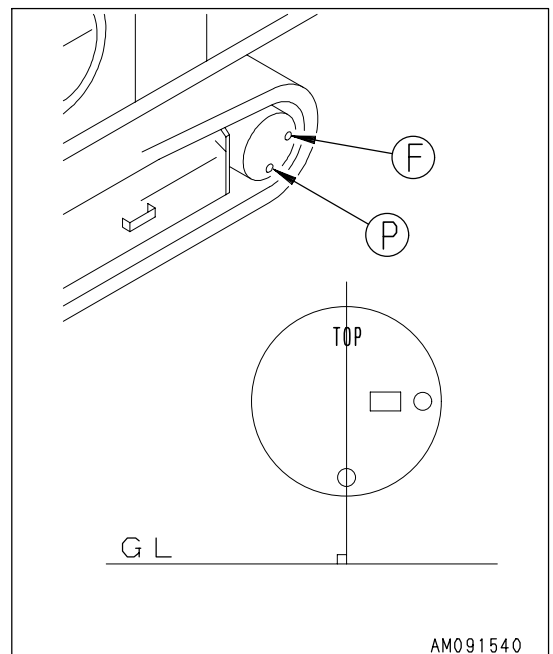

AM091540

CHECK LEVEL OF BATTERY ELECTROLYTE

Carry out this procedure before operating the machine.


! WARNING

- Do not use the battery if the battery electrolyte level is below the LOWER LEVEL line. This will accelerate deterioration of the inside of the battery and reduce the service life of the battery. In addition, it may cause an explosion.
- The battery generates flammable gas and there is danger of explosion, do not bring fire or sparks near the battery.
- Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with a large amount of water and consult a doctor.

NOTICE

- When adding distilled water to the battery, do not allow the battery electrolyte to go above the UPPER LEVEL line. If the electrolyte level is too high, it may leak and cause damage to the paint surface or corrode other parts.
- When adding distilled water in cold weather, add it before starting operations in the morning to prevent the electrolyte from freezing.


Inspect the battery electrolyte level at least once a month and follow the basic safety procedures given below. Open cover (1) at the rear left side of the machine. The batteries are installed at (A) part.

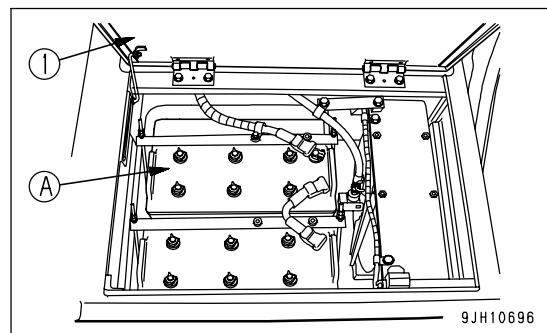


When Checking Electrolyte Level from Side of Battery

If it is possible to check the electrolyte level from the side of the battery, check as follows.

1. Use a wet cloth to clean the area around the electrolyte level lines and check that the electrolyte level is between the UPPER LEVEL (U.L.) and LOWER LEVEL (L.L.) lines. If the battery is wiped with a dry cloth, static electricity may cause a fire or explosion.

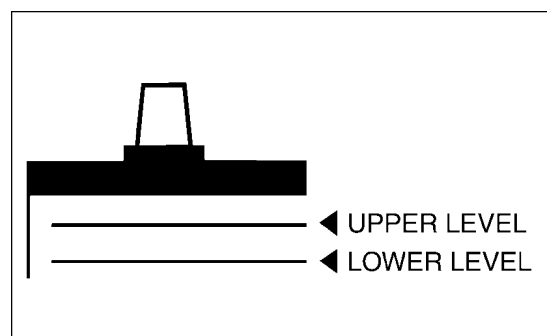

2. If the electrolyte level is below the midway point between the UPPER LEVEL (U.L.) and LOWER LEVEL (L.L.) lines, remove cap (2) and add purified water (e.g. commercially available replenishment water for a battery) to the U.L. line.
3. After adding distilled water, tighten cap (2) securely.

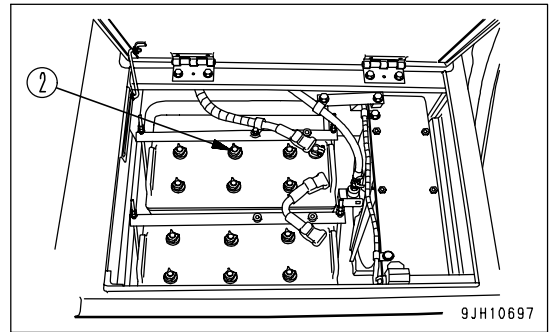



REMARK

If distilled water is added to above the UPPER LEVEL (U.L.) line, use a syringe to lower the level to the UPPER LEVEL (U.L.) line. Neutralize the removed fluid with baking soda (sodium bicarbonate), then flush it away with a large amount of water or consult your Komatsu distributor or battery maker.

When it is Impossible to Check Electrolyte Level from Side of Battery

If it is impossible to check the electrolyte level from the side of the battery, or there is no display of the UPPER LEVEL line on the side of the battery, check as follows.

1. Remove cap (2) at the top of the battery, look through the water filler port (3), and check the electrolyte surface. If the electrolyte does not reach the sleeve (4), add purified water (e.g. commercially available replenishment water for a battery) so that the level reaches the bottom of the sleeve (UPPER LEVEL line) without fail.
 - (A) Suitable level: Electrolyte level is up to bottom of sleeve, so surface tension causes electrolyte surface to bulge and poles appear bent.
 - (B) Low: Electrolyte level is not up to bottom of sleeve, so poles appear straight and not bent.
2. After adding distilled water, tighten cap (2) securely.

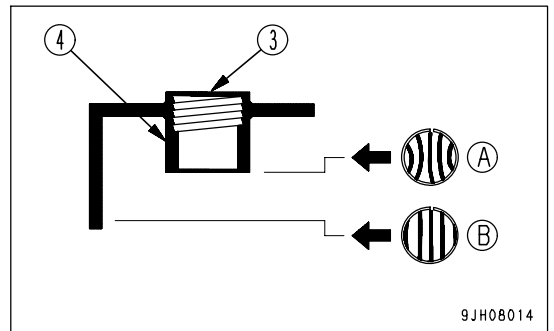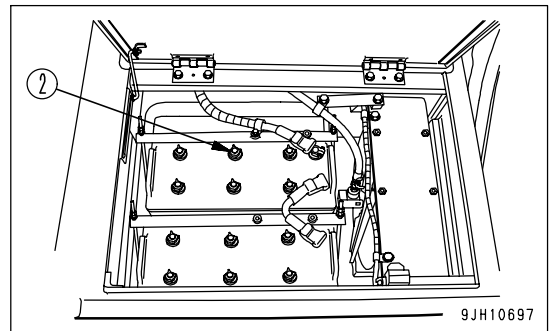

REMARK

If water is added to above the bottom tip of the sleeve, use a pipette to remove electrolyte. Neutralize the removed electrolyte with sodium bicarbonate, then flush it away with a large amount of water. If necessary, contact your Komatsu distributor or your battery maker.


When it is Possible to Use Indicator to Check Electrolyte Level

If it is possible to use an indicator to check the electrolyte level, follow the instructions given.

CHECK AND TIGHTEN TRACK FRAME AND AXLE CONNECTING BOLTS

Bolts (1) connecting the track frame and axle will break if they remain loose, so loose bolts must always be retightened.

- Tightening torque: 2746 ± 294 Nm (280 ± 30 kgm, 2030 ± 220 lbft)

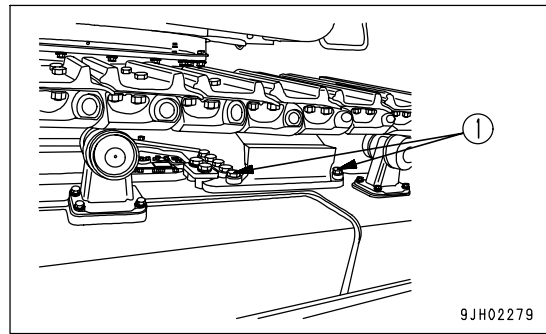


CHECK ALTERNATOR DRIVE BELT TENSION, ADJUST

Checking


The standard deflection for the drive belt is (A) when pressed with a thumb (at approx. 58.8 N {approx. 6 kg}) at a point midway between drive pulley (2) and alternator pulley (1).

(A): 10 - 15 mm (0.4 - 0.6 in)

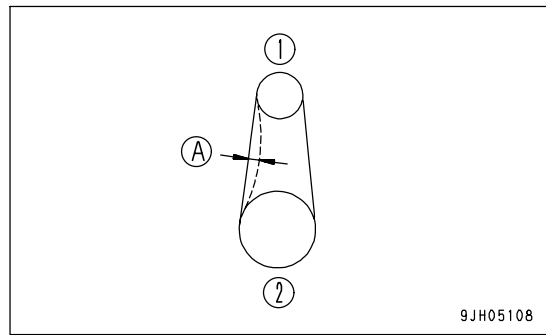

Adjustment



1. Loosen bolts and nuts (3) - (5) in number order, and move the alternator.
 - If nut (6) is tightened, the belt tension will increase; if nut (6) is loosened, the belt will become loose.
2. After adjusting the belt, tighten bolts and nuts (3) - (5) in reverse number order from (5) to (3).
 - Check each pulley for damage, wear of the V-groove, and wear of the V-belt. Check in particular that the V-belt does not contact the bottom of the V-groove.
 - If the V-belt is elongated and there is no more allowance for adjustment, or if the belt is cracked or cut, replace the belt.
 - When the V-belt has been replaced, adjust again after running for 1 hour.

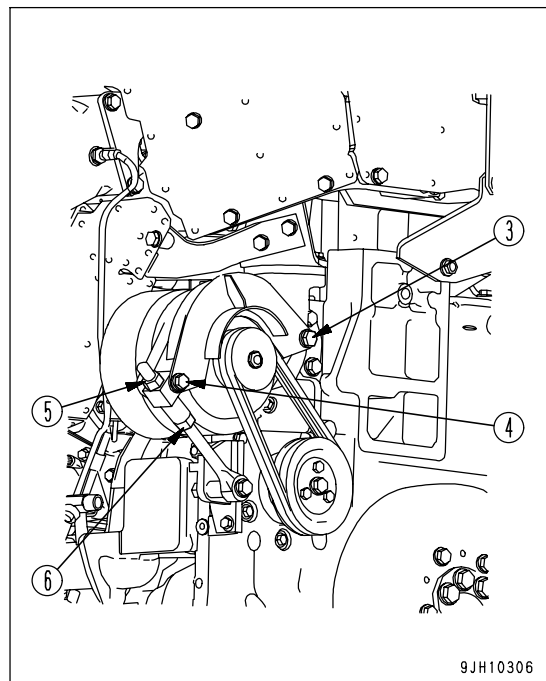

CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST


Checking

1. Remove bolts (2) and (3), then remove cover (1).
2. The standard deflection for the drive belt is (A) when pressed with a thumb [at approx. 58.8 N (approx. 6 kg) at a point midway between drive pulley (4) and air conditioner compressor pulley (5).
(A): 10 - 15 mm (0.4 - 0.6 in)

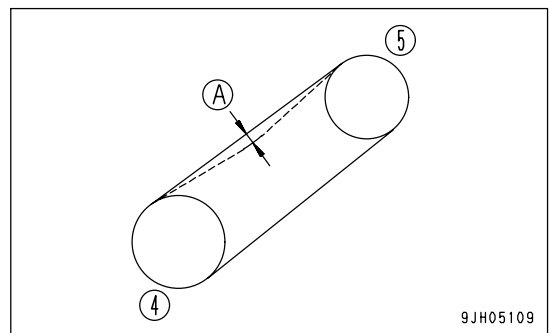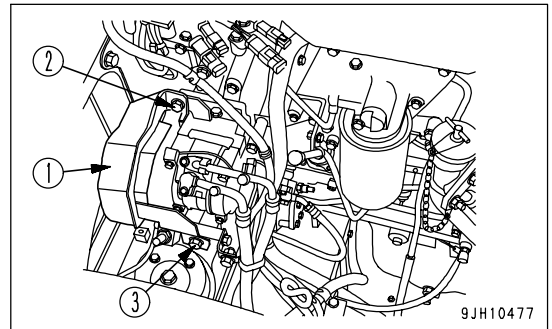

Adjustment

1. Loosen bolts and nuts (6) - (8) in number order, and move the compressor.
 - If nut (9) is tightened, the belt tension will increase; if nut (9) is loosened, the belt will become loose.
2. After adjusting the belt, tighten bolts and nuts (6) - (8) in reverse number order from (8) to (6).
 - Check each pulley for damage, wear of the V-groove, and wear of the V-belt. Check in particular that the V-belt does not contact the bottom of the V-groove.
 - If the V-belt is elongated and there is no more allowance for adjustment, or if the belt is cracked or cut, replace the belt.
 - When the V-belt has been replaced, adjust again after running for 1 hour.
3. Install cover (1).

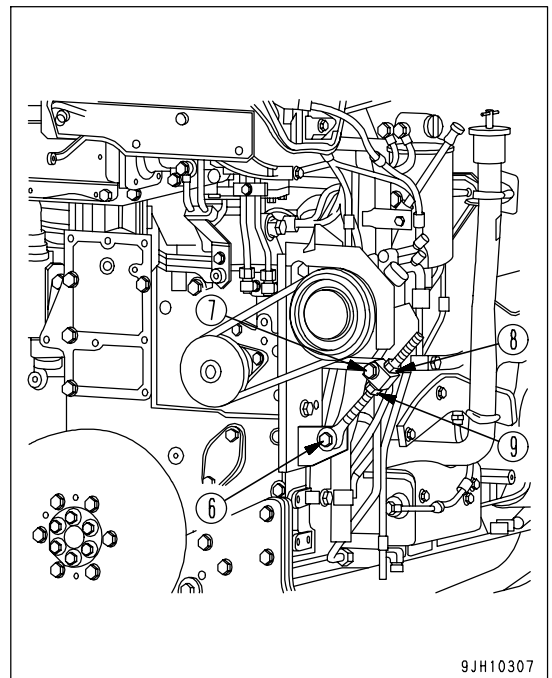

EVERY 500 HOURS MAINTENANCE

Maintenance for every 10, 100, and 250 hours of service should be performed at the same time.

REPLACE FUEL PRE-FILTER CARTRIDGE


WARNING

- After the engine has been operated, all parts are at high temperature, so do not replace the filter immediately. Wait for all parts to cool down before starting the operation.
- High pressure is generated inside the engine fuel piping system when the engine is running.
When replacing the filter, wait for at least 30 seconds after stopping the engine to let the internal pressure go down before replacing the filter.
- Do not bring any fire or flame close.


NOTICE

- Genuine Komatsu fuel filter cartridges use a special filter that has highly efficient filtering ability. When replacing the filter cartridge, always use a genuine Komatsu part.
 - The common rail fuel injection system used on this machine consists of more precise parts than the conventional injection pump and nozzle.
If any part other than a genuine Komatsu filter cartridge is used, dust or dirt may get in and cause problems with the injection system. Always avoid using substitute parts.
 - When carrying out inspection or maintenance of the fuel system, pay more attention than normal to the entry of dirt. If dirt is stuck to any part, use fuel to wash it off completely.
- Prepare a container to catch drain fuel.
 - Prepare a filter wrench


1. Turn valve (1) at the bottom of the fuel tank to the right to close it.

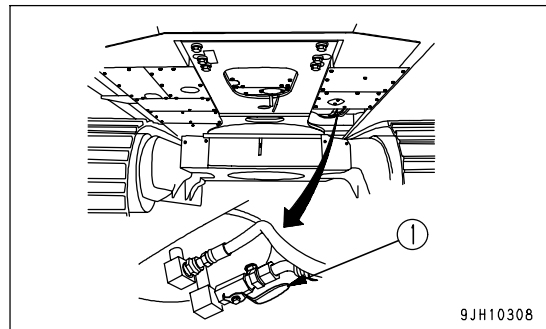

2. Open the engine hood.
3. Set the container to catch the fuel under the filter cartridge (2).
4. Using a filter wrench, turn transparent cap (3) to the left to remove it. (This cap is used again.)
5. Using a filter wrench, turn filter cartridge (2) counterclockwise to remove it.

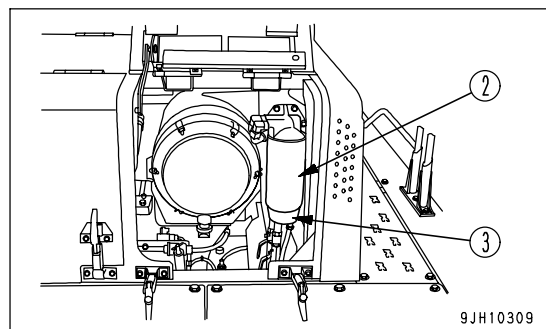


6. Remove seal (4) from transparent cap (3), then clean the cap. If transparent cap (3) is damaged, replace it with a new part.
7. Coat new seal (4) with clean fuel or oil, then install it to transparent cap (3).
8. Install transparent cap (3) to new filter cartridge (2).
 - Tightening torque for transparent cap:
 - 10.0 Nm (1.0 kgm, 7.2 lbft)
9. Check that the drain plug at the bottom of transparent cap (3) is tightened securely.
 - Tightening torque: 0.2 - 0.45Nm (0.02 -0.046 kgm, 0.1 - 0.3 lbft)

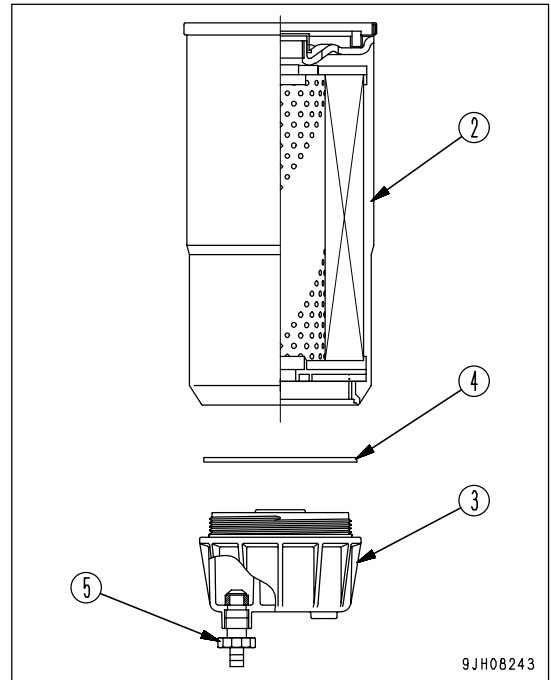

10. Clean the filter holder, fill the new filter cartridge with clean fuel, coat the packing surface thinly with oil, then install to the filter holder.

NOTICE


- When adding fuel, do not remove cap (B). Always add fuel from the 8 small holes (A) on the dirty side.
- After adding fuel, remove cap (B) and install the fuel filter.
- Always fill with clean fuel. Be careful not to let any dirt or dust get into the fuel. In particular, center portion is the clean side, so do not remove cap (B) when adding fuel. Be careful not to let dirt or dust get into center portion on the clean side.

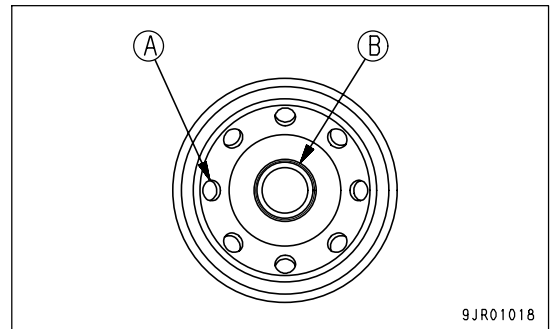

11. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it 3/4 of a turn.
 - If the filter cartridge is tightened too far, the packing will be damaged and this will lead to leakage of fuel. If the filter cartridge is too loose, fuel will also leak from the packing, so always tighten the correct amount.
 - When tightening with a filter wrench, be extremely careful not to dent or damage the filter.


12. Turner valve (1) at the bottom of the fuel tank to the left to open it.

13. After replacing the filter cartridge, start the engine and run it at low idling for 10 minutes.
 - Check for leakage of oil from the filter seal surface. If any oil is leaking, check the tightening of the filter cartridge. If there is still oil leakage, repeat Steps 1 - 5 to remove the filter cartridge, and if any damage or embedded foreign material in the packing surface is found, replace it with a new cartridge and repeat Steps 6 - 13 to install it.

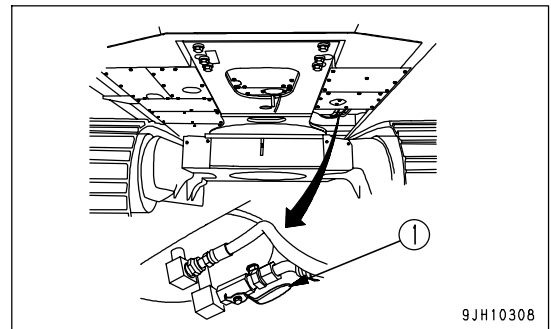

CHECK SWING PINION GREASE LEVEL, ADD GREASE


- Prepare a scale.
- 1. Before starting the inspection, swing 2 times to the right or left, then lower the work equipment to the ground and stop the engine.
- 2. Open the grease pump box at the right side of the machine, then remove spare grease can holder cover (1) and spare grease can.
- 3. Remove 3 bolts (2), then remove cover (3).

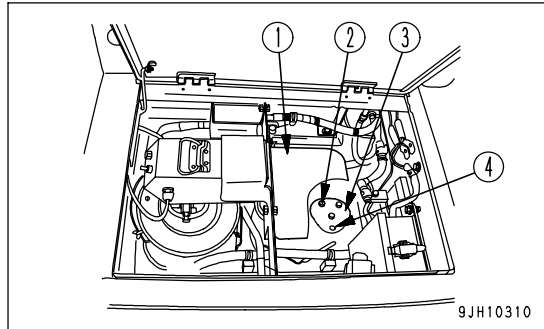

REMARK

When cover (3) does not come off easily, insert removed bolt (2) into tapped bolt hole (4) and then remove cover (3).


- 4. Insert a scale into the grease and check that the depth of the grease is approx. 60 mm (2.4 in). Add grease if necessary. Insert the scale (A) in the position shown in the diagram on the right when measuring.

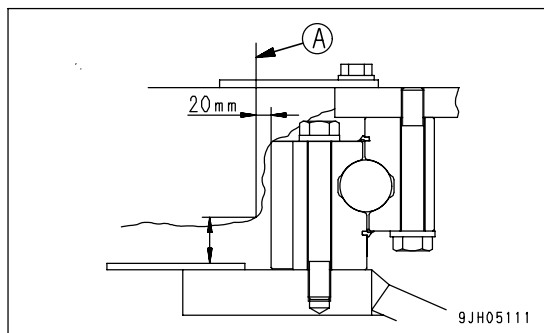

If the grease is particularly milky due to ingress of water, etc., then remove bolts (5) and cover (6) from the bottom of the track frame and remove the grease. Replace all of the grease with new grease.

The total amount of grease is 65 liters (60 kg) [17.17 US gal (132 lb)].

- 5. Install cover (3) with bolts (2).

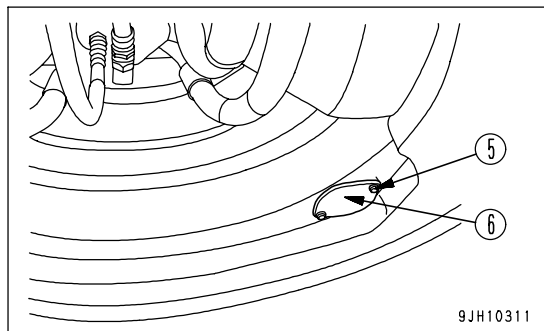

CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTERCOOLER FINS, FUEL COOLER FINS, AND AIR CONDITIONER CONDENSER FINS (only machines equipped with air conditioner)

 WARNING

If compressed air, high-pressure water, or steam hits your body directly or dirt is sent flying by the compressed air, high-pressure water, or steam, there is danger of personal injury. Always wear protective glasses, dust mask, and other protective equipment.

NOTICE


When using compressed air, use from a distance to prevent damage to the fins.

In particular, with the fuel cooler and aftercooler, blow with compressed air at an angle of 45° with the nozzle at a distance of at least 300 mm (11.8 in).

Never blow the compressed air at right angles to the core. If the fins are damaged, it may cause coolant leakage or overheating.

On dusty jobsites, check the fins daily, irrespective of the maintenance interval.


1. Open the cover (1).
2. Open duct (2) at the machine's rear right side.
Duct (2) opens when ten bolts (3) are removed.

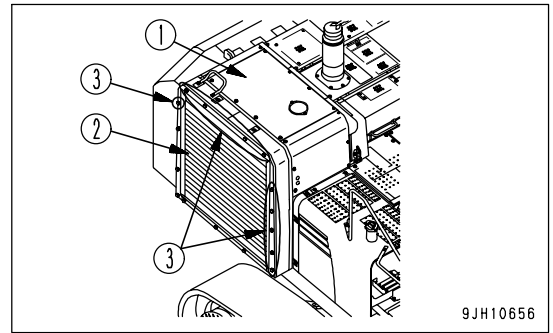

3. Use compressed to blow off mud, dust, or leaves clogging the radiator fins, oil cooler fins, fuel cooler fins (2) and after cooler fins (3). At the same time, clean the net in front of the oil cooler. On machines equipped with an air conditioner, clean the condenser fins (4) also.

Steam or water can be used in place of compressed air.

Steam or water can be used instead of compressed air, or the fan can be rotated in reverse to carry out cleaning. For details of the method for rotating the fan in reverse, see "MONITORING SYSTEM (PAGE 3-5)"

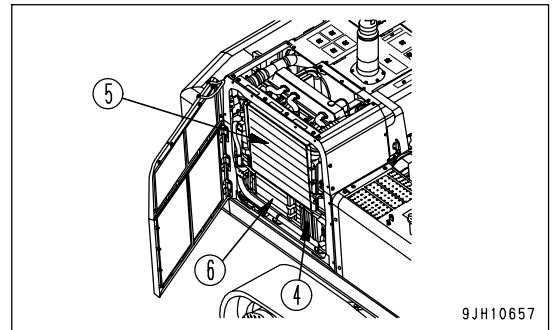

4. Check the rubber hose. Replace with a new one if the hose is found to have cracks or to be hardened by aging.

Also, check hose clamps for looseness.

Aftercooler hose clamp tightening torque:

9.81 ± 0.49 Nm (1.0 ± 0.05 kgm, 7.2 ± 0.4 lbf)

CLEAN FRESH/RECIRC AIR FILTERS OF AIR CONDITIONER (ONLY FOR MACHINES EQUIPPED WITH AIR CONDITIONER)

! WARNING

If compressed air scattered around dust and debris, there is danger of injury. Always wear protective equipment such as protective glasses and mask.

NOTICE


As a guideline, the filters should be cleaned every 500 hours, but on dusty jobsites, clean the filters more frequently.

REMARK

If the filter becomes clogged, the air flow will be reduced, and there will be an abnormal noise from the air conditioner unit.

CLEAN RECIRC AIR FILTER


1. Remove wing bolts (1) from the inspection window at the bottom rear left on the inside of the operator's cab, then take out the recirculated air filter.
2. Clean the filter with compressed air. If there is oil on the filter, or if the filter is extremely dirty, wash it in a neutral agent. After rinsing it in water, dry it thoroughly before using it again.
Replace the filter with a new part every year. If the clogging of the filter cannot be removed by blowing with air or washing in water, replace the filter immediately.

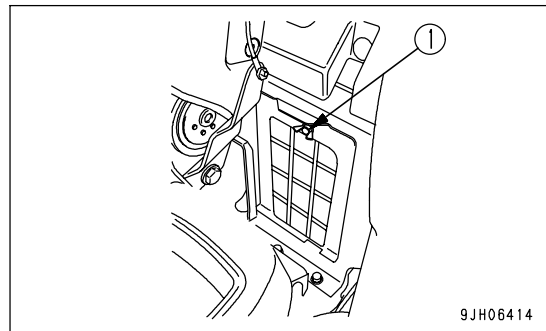

9JH06414

CLEAN FRESH AIR FILTER


1. Use the starting switch key to open cover (2) at the rear left of the operator's cab, then open cover (2) by hand and remove filter (3) inside the cover.
2. Clean the filter with compressed air. If there is oil on the filter, or if the filter is extremely dirty, wash it in a neutral agent. After rinsing it in water, dry it thoroughly before using it again.
Replace the filter with a new part every year. If the clogging of the filter cannot be removed by blowing with air or washing in water, replace the filter immediately.
3. After cleaning, return filter (3) to its original position and close the cover. Use the starting switch key to lock the cover. Do not forget to remove the starting switch key.

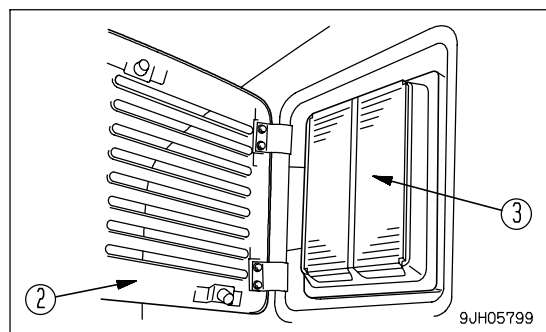

9JH05799

REMARK

The FRESH filter must be installed facing in the correct direction. When installing, insert the long (L) end of filter (3) into the filter case first. If the short (S) end is installed first, cover (2) will not close.


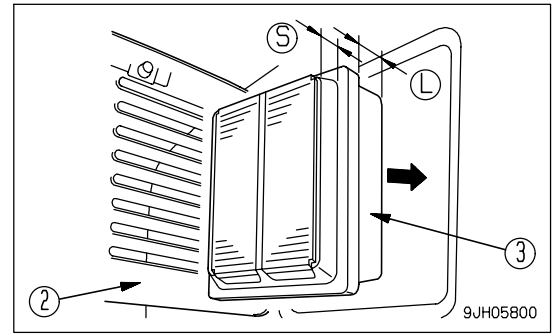


REPLACE PILOT FILTER

WARNING

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

1. Loosen drain plug (1) to drain fuel.
2. Remove filter (2) and replace it with a new one.
Tightening torque: 20 ± 25 Nm (2.04 ± 2.55 kgm, 14.8 ± 18.4 lbft)

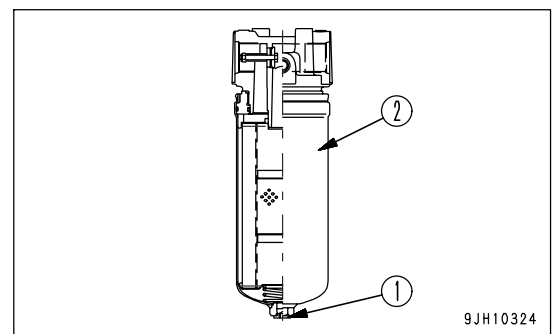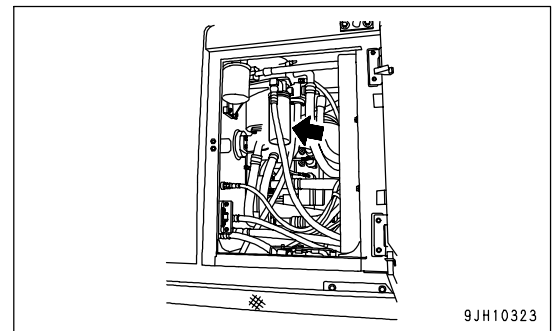


CLEAN STRAINER OF COUPLING LUBRICATING OIL FILTER

! WARNING


Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

1. Remove filter case (1).
2. Take out the strainer, remove any dirt stuck to the strainer, then wash it in flushing oil.
If the strainer or O-ring are damaged, replace with a new part.
3. Install the strainer and filter case (1).

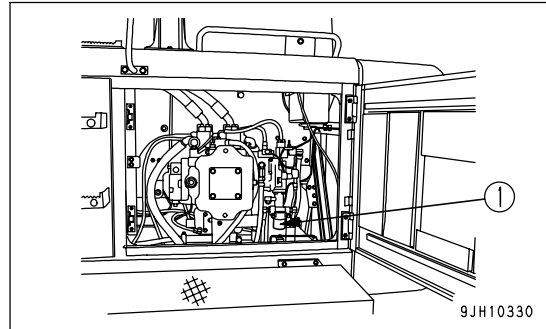

REPLACE DRAIN FILTER CARTRIDGE

1. Using a filter wrench, turn the filter cartridge (1) to the left to remove it.
2. Fill the new filter cartridge with hydraulic oil, coat the packing surface with oil, then install it.
When installing it, bring the packing surface into contact with the seal surface of the filter holder, then tighten a further 1/2 - 3/4 turns.

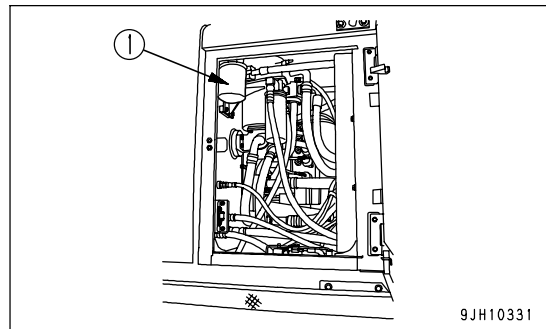


CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE


! WARNING

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

- Oil pan refill capacity: 53 liters (14.00 US gal)
- Prepare a filter wrench
 1. Remove cover (1) under the machine and put a container under drain valve (P) to catch the drained oil.
 2. Install hose (2) (kept in the toolbox) to drain valve (P), then move lever (3) of the drain valve down slowly and drain the oil. After draining the oil, move the lever up to close the valve.
 - Never loosen plug (a). Even if it is not loosened, the oil will come out when the lever is operated.
 - When not using hose (2), keep it in the toolbox.

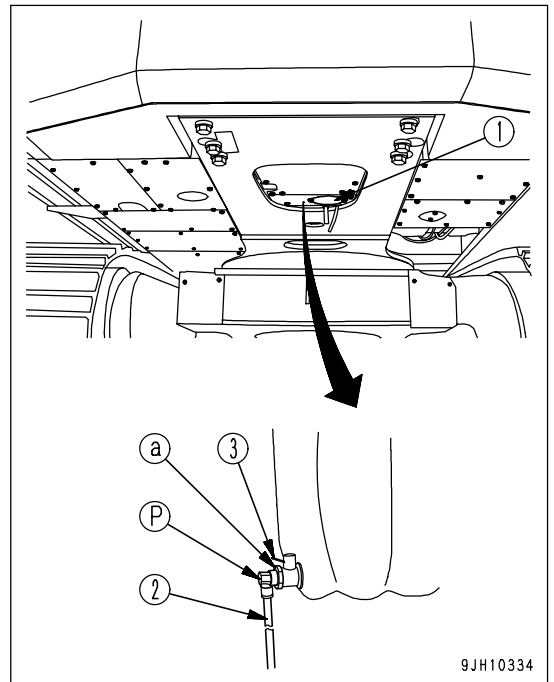

3. Open the front cover of the engine hood, use a filter wrench from the top of the engine, turn filter cartridge (4) to the left, and remove it.

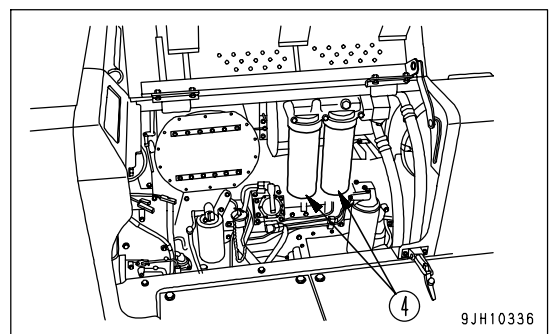



4. Clean the filter holder, fill the new filter cartridge with clean oil, coat the thread and packing surface of the new filter cartridge with clean oil (or coat it thinly with grease), then install it to the filter holder.

REMARK

Check that there is no old packing stuck to the filter holder. If there is any old packing stuck to the filter, it will cause leakage of oil.

5. When installing, bring the packing surface into contact with the seal surface of the filter holder, then tighten a further 3/4 - 1 turn.
 - When using a filter wrench for tightening, be extremely careful not to damage the filter or cause dents.

6. After replacing the filter cartridge, add oil through oil filler port (F) so that the oil level is between the H and L marks on dipstick (G).
7. Run the engine for a short time at low idling, then stop the engine. Check that the oil level gauge is between the H and L marks. For details, see "Check Oil Level in Engine Oil Pan, Add Oil (PAGE 3-82)".
8. Install cover (1).

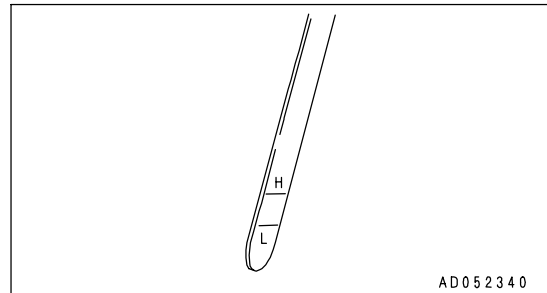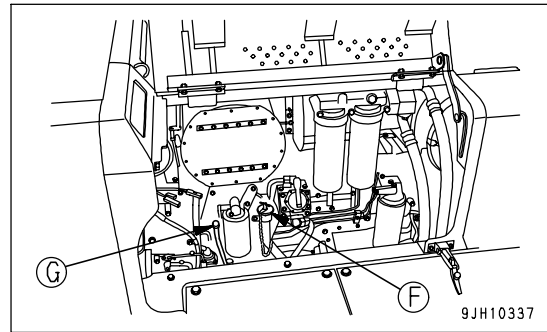

EVERY 1000 HOURS MAINTENANCE

Maintenance for every 10, 100, 250, and 500 hours of service should be performed at the same time.

REPLACE FUEL MAIN FILTER CARTRIDGE



WARNING


- After the engine has been operated, all parts are at high temperature, so do not replace the filter immediately. Wait for all parts to cool down before starting the operation.
- High pressure is generated inside the engine fuel piping system when the engine is running. When replacing the filter, wait for at least 30 seconds after stopping the engine to let the internal pressure go down before replacing the filter.
- Do not bring any fire or flame close.
- Be careful when opening the air bleed plug in the fuel filter head. It is still under pressure, so fuel may spurt out.

NOTICE

- Genuine Komatsu fuel filter cartridges use a special filter that has highly efficient filtering ability. When replacing the filter cartridge, always use a genuine Komatsu part.
- The common rail fuel injection system used on this machine consists of more precise parts than the conventional injection pump and nozzle. If any part other than a genuine Komatsu filter cartridge is used, dust or dirt may get in and cause problems with the injection system. Always avoid using substitute parts.
- When carrying out inspection or maintenance of the fuel system, pay more attention than normal to the entry of dirt. If dirt is stuck to any part, use fuel to wash it off completely.


- Prepare a container to catch drain fuel.
- Prepare a filter wrench

1. Turn valve (1) at the bottom of the fuel tank to the right to close it.

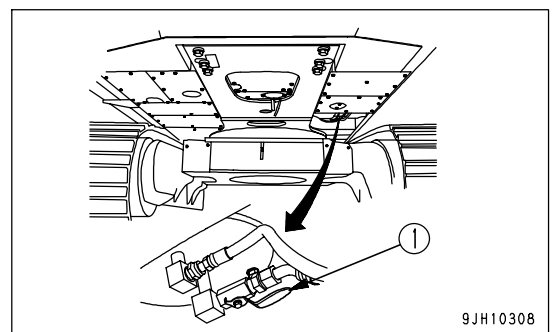

9JH10308

- 2. Open the engine hood.
- 3. Set the container to catch the fuel under the filter cartridge (2).
- 4. Using a filter wrench, turn filter cartridge (2) counterclockwise to remove it.

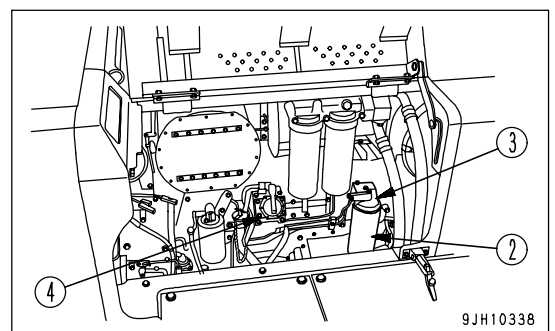


9JH10338

5. Clean the filter holder, coat the packing surface of the new filter cartridge thinly with oil, then install the filter cartridge to the filter holder.

NOTICE


- Do not fill the new filter cartridge with fuel.
- Remove cap (B) and install the filter cartridge.

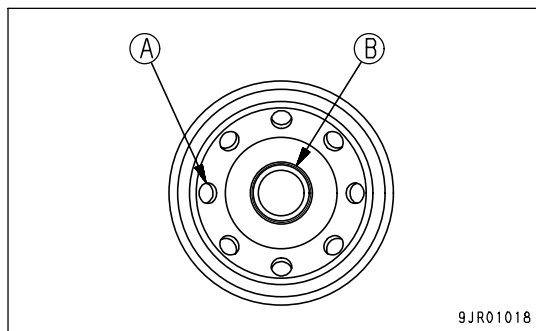

6. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it 3/4 of a turn.

If the filter cartridge is tightened too far, the packing will be damaged and this will lead to leakage of fuel. If the filter cartridge is too loose, fuel will also leak from the packing, so always tighten the correct amount.




7. Turner valve (1) at the bottom of the fuel tank to the left to open it.

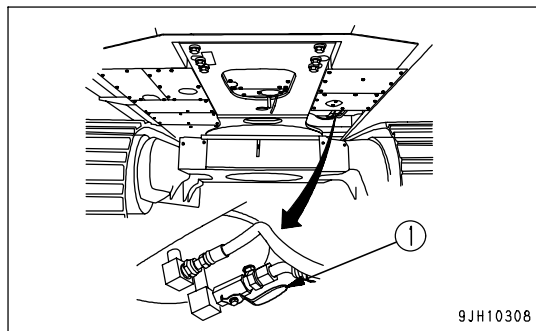

8. After completing the replacement of filter cartridge (2), bleed the air.

Bleed the air as follows:

9. Add fuel to the fuel tank until full (to FULL mark on the fuel gauge).
10. Loosen air bleed plug (C) at the fuel main filter head (3).
11. Loosen wing nut (6) holding lever (5) of priming pump (4).
12. Push in lever (5) repeatedly.
Check that bubbles come out with the fuel from air bleed plug (C).
13. Tighten air bleed plug (C).
Tightening torque: 4.9 to 6.9 Nm (0.5 to 0.7 kgm, 3.6 to 5.1 lbft)
14. Tighten wing nut (6) securely to lock lever (5) in position.
Target tightening torque: 11.8 Nm (1.2 kgm, 8.7 lbft)

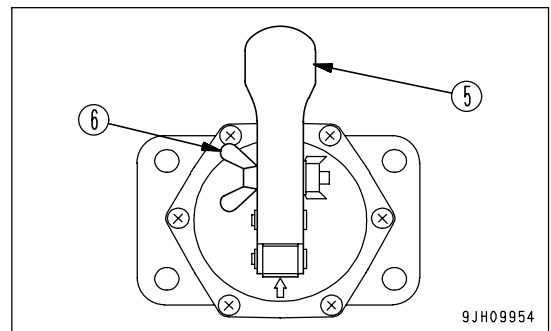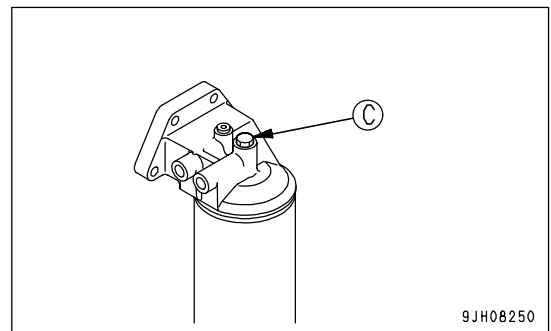
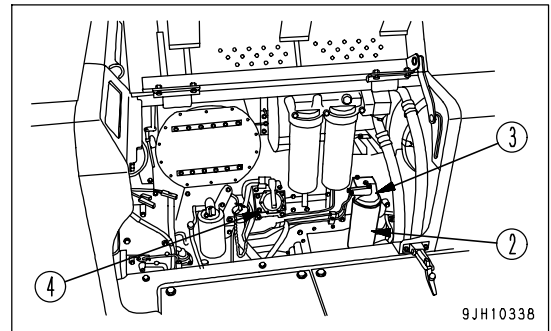


15. After replacing the filter cartridge, start the engine and run it at low idling for 10 minutes.
Check for leakage of fuel from the filter seal surface. If any fuel is leaking, check the tightening of the filter cartridge. If there is still fuel leakage, repeat Steps 1 - 4 to remove the filter cartridge, and if any damage or embedded foreign material in the packing surface is found, replace it with a new cartridge and repeat Steps 5 - 15 to install it.

REPLACE FUEL TANK BREATHER ELEMENT**WARNING**

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Remove nut (2) of breather assembly (1) at the top surface of the fuel tank, then remove cover (3).
2. Replace breather element (4) with a new part.
3. Install cover (3) and nut (2).

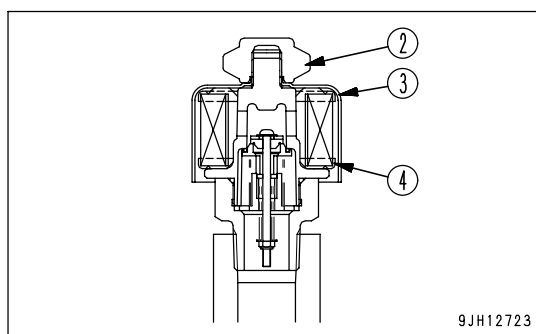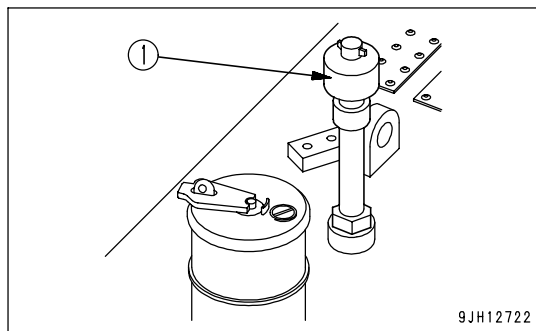


REPLACE BREATHER ELEMENT IN HYDRAULIC TANK


! WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Remove the cap of oil filler (F) at the top of the hydraulic tank.

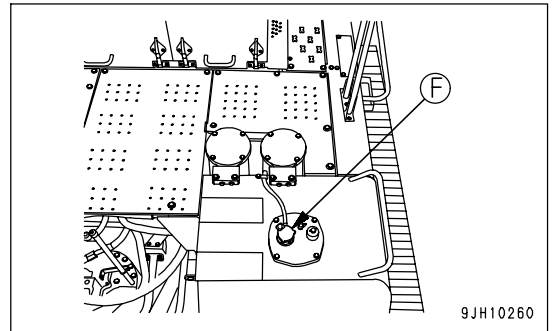

2. Replace element (1) inside the cap.


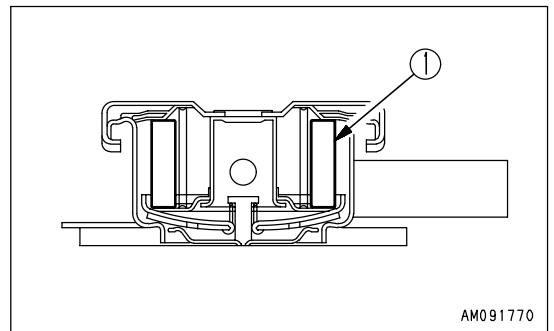


REPLACE HYDRAULIC TANK ADDITIONAL BREATHER ELEMENT

 **WARNING**

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Remove nut (2) of breather assembly (1) at the top of the hydraulic tank, then remove cover (3).
2. Replace filter element (4) with a new element.
3. Install cover (3) and nut (2).

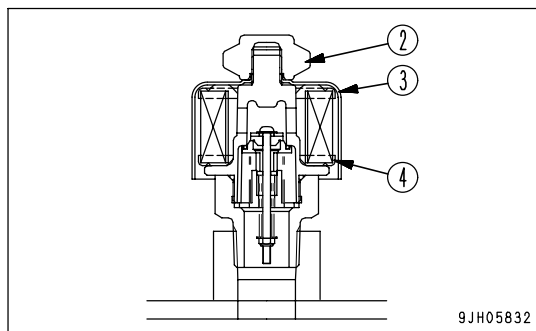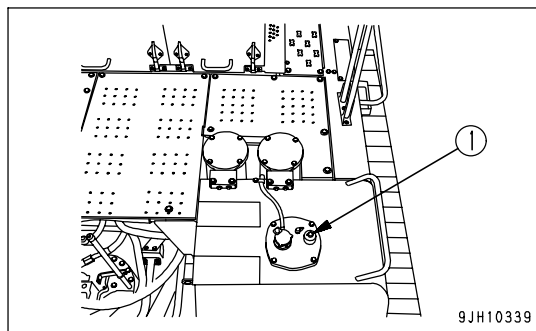


REPLACE HYDRAULIC OIL FILTER ELEMENT

WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Set the work equipment on the hard and flat ground in the maintenance posture as shown in the figure, then lower it to the ground and stop the engine.

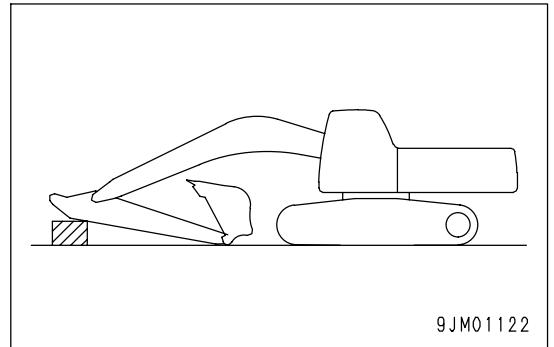

2. Remove the cap from oil filler (F) on top of the hydraulic tank, and release the internal pressure.

3. Loosen 4 bolts, then remove cover (1).

When doing this, the cover may fly out under the force of spring (2), hold the cover down when removing the bolts.

4. After removing spring (2), valve (3) and strainer (5), take out element (4).

- If there are metal particles or foreign material inside strainer (5), contact your Komatsu distributor.

5. Clean the removed parts in flushing oil.

6. Install the new element in the place where old element (4) was installed.



7. Set valve (3), strainer (5) and spring (2) on top of the element.

8. Set cover (1) in position, push it down by hand, and install the cover with the mounting bolts.

9. Install the cap of oil filler port (F).

10. To bleed the air, start the engine according to "Engine Warm Up (PAGE 3-102)" and run the engine at low idle for 10 minutes.

11. Stop the engine.

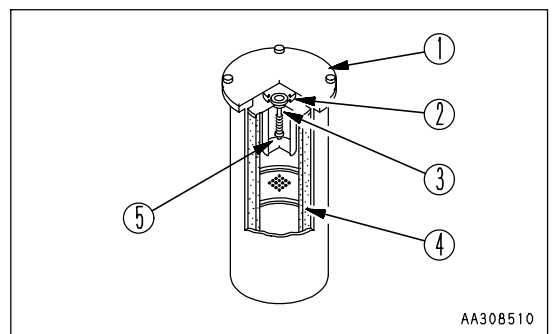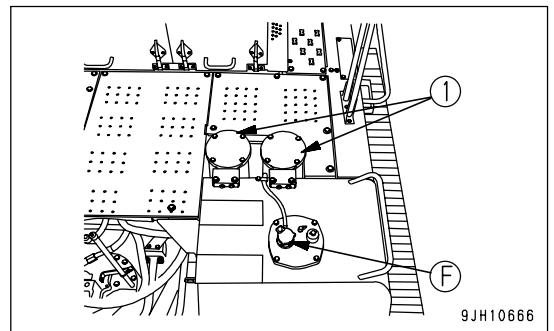

REMARK

Operate the machine after halting for more than 5 minutes to eliminate bubbles in the oil inside the tank.

12. Check for oil leakage and wipe off any spilled oil.

CHANGE OIL IN SWING MACHINERY CASE


! WARNING

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.


- Refill capacity: 24.5 liters (6.47 US gal)

1. Set a container under drain hose (1) at the bottom of the machine to catch the oil.
2. Loosen drain valve (P) under the machine body, drain the oil, then tighten the drain plug again.



Machine front drain

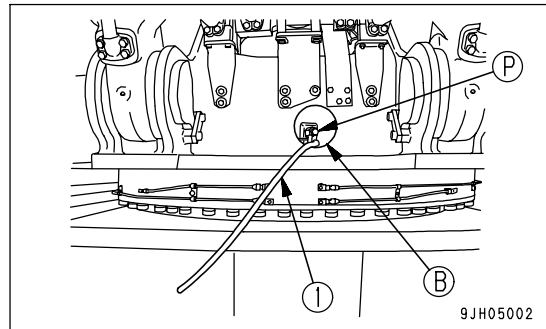


Machine rear drain

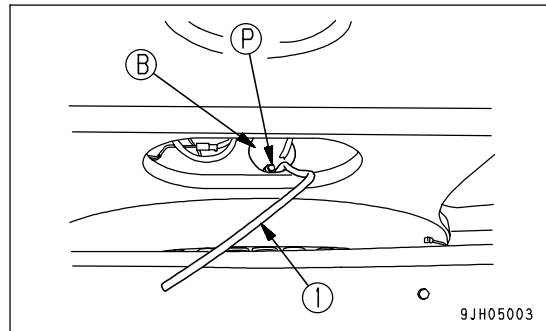

3. When replacing oil, also replace breather (2) together.
4. Remove dipstick (G), then add the specified amount of oil through filler port (F) of the dipstick guide.
5. Wipe off the oil on the dipstick with a cloth.
6. Fully insert dipstick (G) into filler pipe, then remove it.

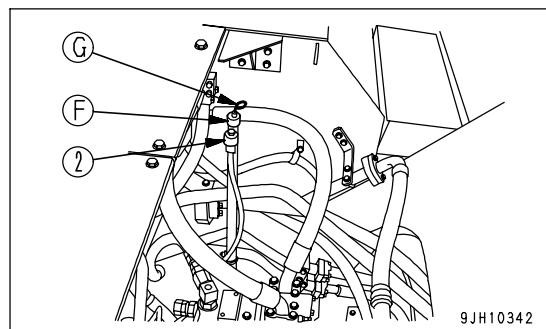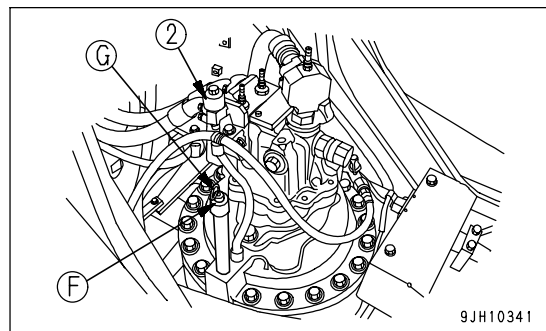

7. The oil level should be between H and L marks on the dipstick (G). If the oil does not reach the L mark, add oil through oil filler port (F).
8. If the oil is above the H mark, pull drain hose (1) out, then loosen plug (P). After draining the excess oil, check the oil level again. If the oil level is correct, wind in drain hose (1) and store it inside the hole.
9. Immediately after changing the oil, oil level is variable. So operate for one hour, then check the oil level again.

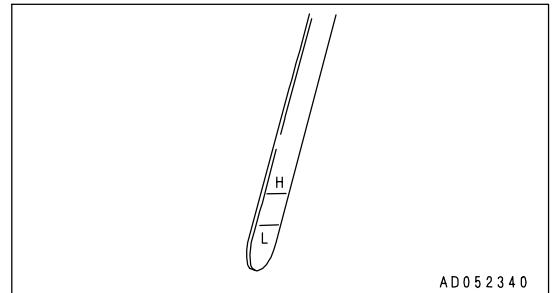

CHANGE OIL IN COUPLING CASE

 **WARNING**

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.



NOTICE

Park the machine on flat ground and stop the engine. After waiting for more than 30 minutes after stopping the engine, check the oil level.

- Refill capacity: 7 liters (1.85 US gal)
1. Loosen drain plug (1) at the bottom of the Coupling case, drain the oil, then tighten the plug again.
 2. Refill the specified quantity of oil through oil filler (F).

NOTICE

If excess oil is supplied, drain it to the specified amount to avoid overheating.

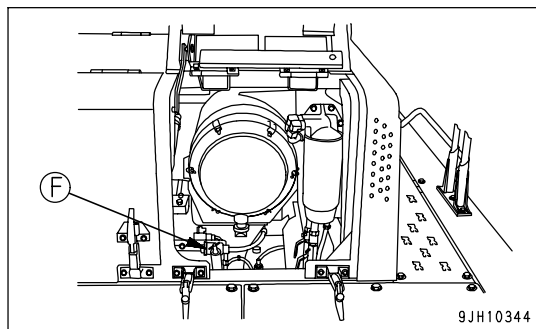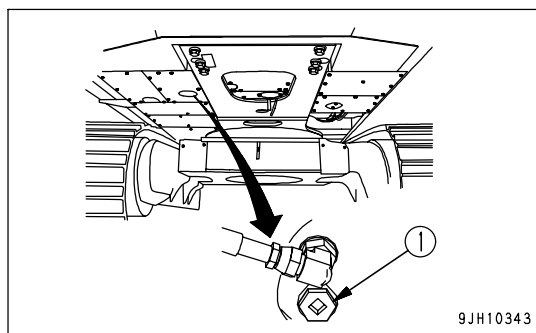

REPLACE CORROSION RESISTOR CARTRIDGE

(If equipped)




WARNING

The oil is at high temperature after the engine has been operated, so never replace the cartridge immediately after finishing operations.

Wait for the oil to cool down before replacing cartridge.

- Container to catch coolant
 - Prepare a filter wrench
1. Turn valve (1) of corrosion resistor (2) to the CLOSE stopper position.
 2. Set a container under the cartridge to catch the coolant.
 3. Using a filter wrench, turn cartridge (2) to the left to remove it.
 4. Clean the filter holder, coat the seal surface of the new cartridge thinly with oil, then install the cartridge.
 - Always use a genuine Komatsu part for the cartridge.

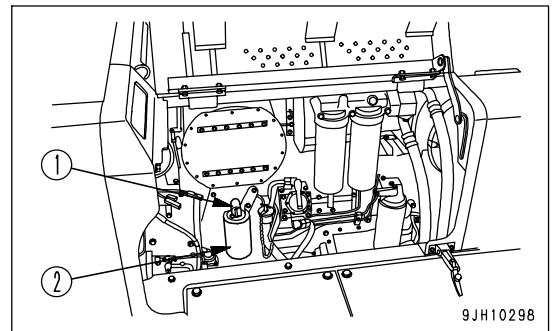

5. When installing the cartridge, bring the packing surface into contact with the seal surface of the filter holder, then tighten a further 2/3 times.

If the filter cartridge is tightened too far, the gasket will be damaged and coolant will leak. If it is too loose, coolant will leak from the gap in the gasket, so always keep the proper tightening angle.
6. Turn valve (1) of corrosion resistor (2) to the OPEN stopper position.
7. After replacing the cartridge, run the engine, and check for any leakage of water from the filter seal surface. If any water leakage is found, check the tightening of the filter cartridge.

CHECK WELDED STRUCTURE

(Color check)

Cracks in welded structures can be seen easily with a color check. Check the revolving frame, center frame, boom, and arm every 1000 hours.


In particular, carry out a color check on the important check points (marked with a circle).

The procedure for the color check is as follows.

1. Prepare the materials needed for the color check. (Detergent, penetrating agent, developing solution)
2. Spray with detergent and wash to remove all the dirt and oil from the place to be checked.
3. After washing, dry the area, then spray with penetrating agent and leave for 5 - 20 minutes.
4. Spray with detergent, then clean the surface with a cloth.
5. Clean the surface again, then spray with developing solution.
6. Leave for 15 - 20 minutes, then check visually for cracks.
If there are any cracks, color can be seen.
7. If there are any cracks, carry out the repair procedure to repair.


(A): Important check points
(F): Front

- Revolving frame

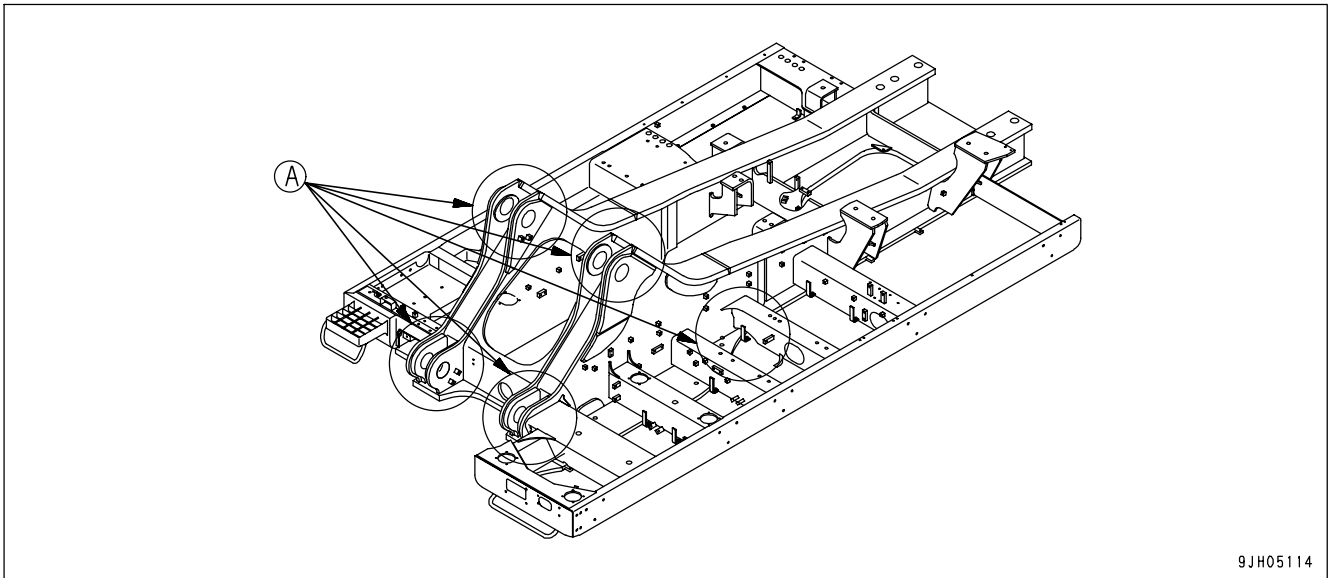

9JH05114


- Center frame

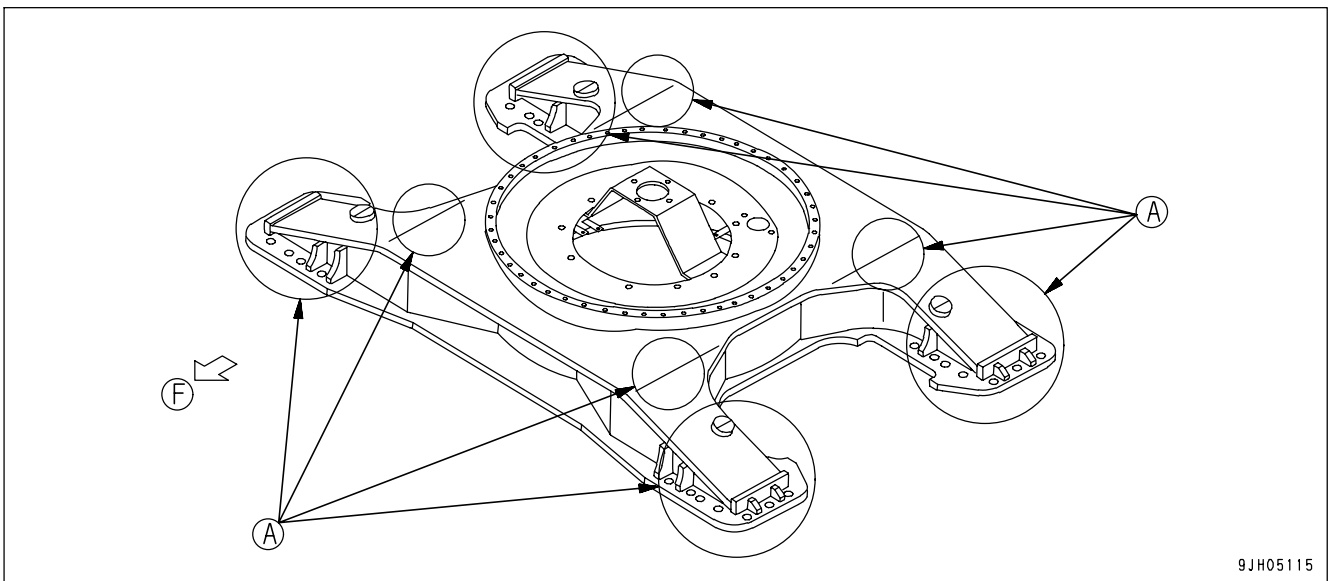


9JH05115

(A): Important check points

- Boom

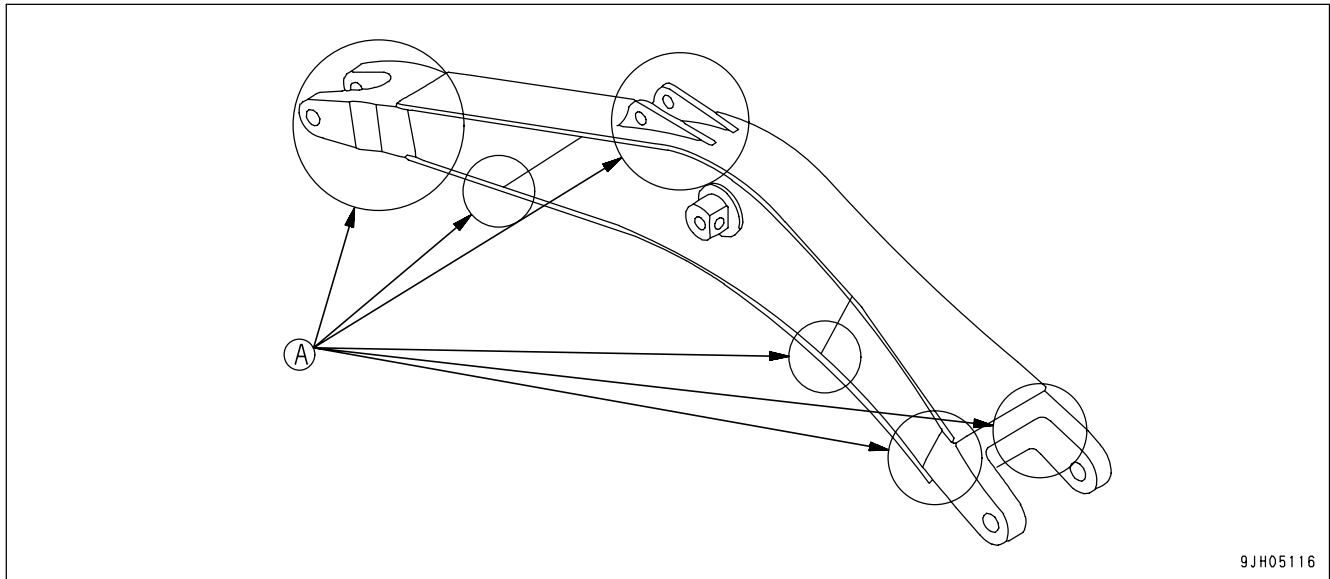

- Arm

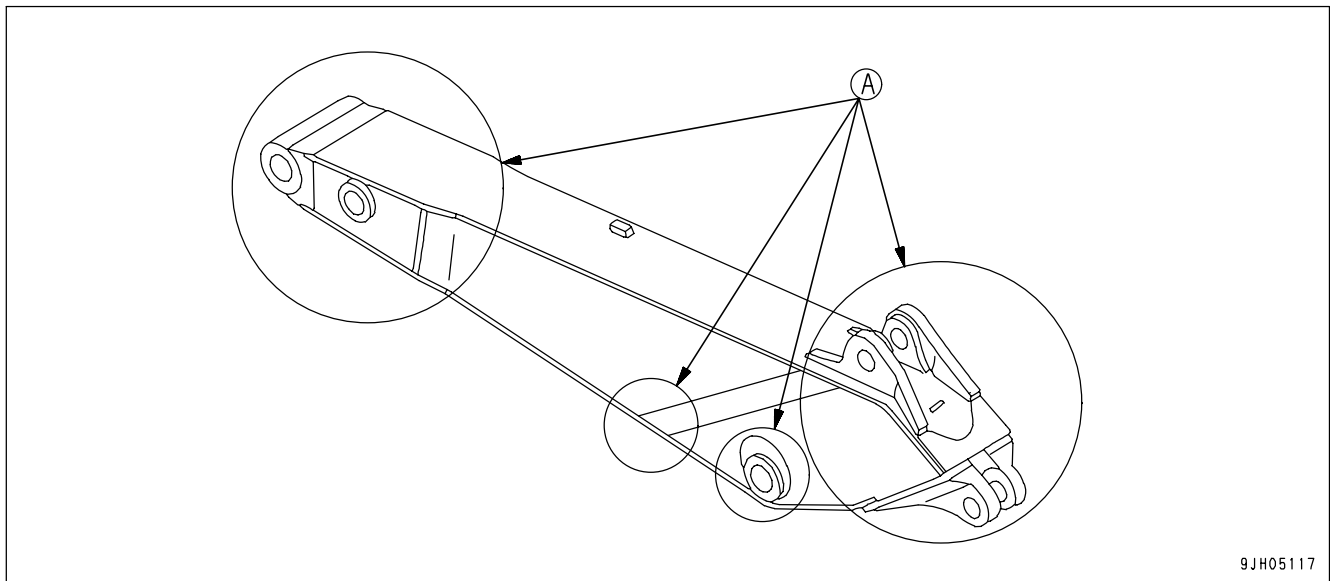

CHECK NITROGEN GAS CHARGE PRESSURE IN ACCUMULATOR (for breaker)

(If equipped)

A special tool is needed for inspecting and charging with nitrogen gas.

Have your Komatsu distributor inspect and charge the accumulator.

EVERY 2000 HOURS MAINTENANCE

Maintenance for every 10, 100, 250, 500, and 1000 hours of service should be performed at the same time.

CHANGE OIL IN FINAL DRIVE CASE



WARNING


- The parts and oil are at high temperature immediately after the engine is stopped, and may cause serious burns. Wait for the temperature to go down before starting the operation.
- If there is still pressure remaining inside the case, the oil or plug may fly out.
Loosen the plug slowly to release the pressure.

- Refill capacity: Each 20 liters (5.28 US gal)
 - Prepare a handle.
1. Set the TOP mark at the top, with the TOP mark and plug (P) perpendicular to the ground surface.
 2. Remove plugs (P) and (F) with the handle and drain the oil.

REMARK

Check the O-rings in the plugs for damage. If necessary, replace with new ones.

3. Tighten plug (P).
4. Add oil through the hole of plug (F).
5. When the oil overflows from the hole of plug (F), install plug (F).
Tightening torque of plugs (P) and (F) :
93.1 - 122.5 Nm (9.5 - 12.5 kgm, 68.7 - 90.4 lbft)

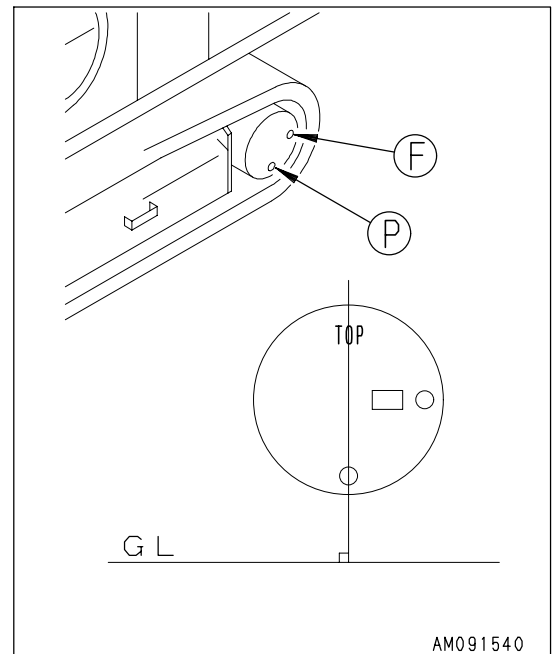



AM091540

CLEAN HYDRAULIC TANK STRAINER

! WARNING

- After the engine is stopped, the parts and oil are at high temperature, so there is danger of burns. Wait for the temperature to go down before starting the operation.
- When the cap of the oil filler port is removed, oil may spurt out, so turn it slowly to release the internal pressure, then remove it carefully.
- When removing cover (1), the cover may fly off under the force of spring (2), so loosen the 4 bolts slowly.

1. Remove the cap from oil filler (F) on top of the hydraulic tank.
2. Remove cover (1) and lift up the top of rod (3) from above to take out spring (2) and strainer (4).
3. Remove any dirt stuck to strainer (4), then wash it in flushing oil. If strainer (4) is damaged, replace it with a new part.
4. When installing, insert strainer (4) into protruding part (5) of the tank, and assemble.
5. Assemble so that the protruding part at the bottom of cover (1) holds spring (2), then tighten with the bolt.

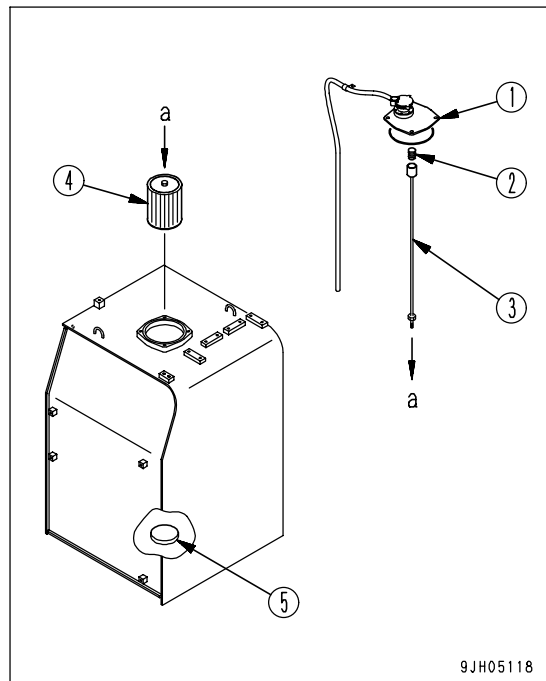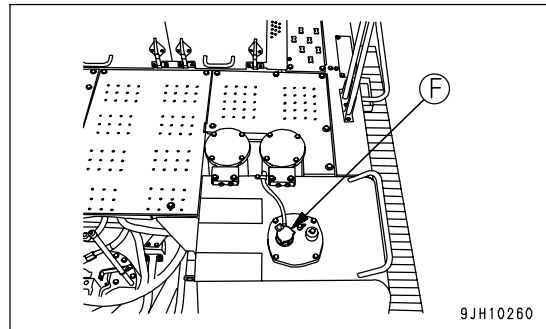

CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT)



WARNING

The accumulator is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion, which will lead to serious injury or damage. When handling the accumulator, always do as follows.

- The pressure in the hydraulic circuit cannot be completely removed. When removing the hydraulic equipment, do not stand in the direction that the oil spurts out when carrying out the operation. In addition, loosen the bolts slowly when carrying out the operation.
- Do not disassemble the accumulator.
- Do not bring it near flame or dispose of it in fire.
- Do not make holes in it or weld it.
- Do not hit it, roll it, or subject it to any impact.
- When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

NOTICE


If the nitrogen gas charge pressure in the accumulator is low and operations are continued, it will become impossible to release the remaining pressure inside the hydraulic circuit if a failure occurs on the machine.

FUNCTION OF ACCUMULATOR

The accumulator stores the pressure in the control circuit. Even after the engine is stopped, the control circuit can be operated, so the following actions are possible.

- If the control lever is operated in the direction to lower the work equipment, it is possible for the work equipment to go down under its own weight.
- The pressure in the hydraulic circuit can be released.

The accumulator is installed to the position shown in the diagram on the right.

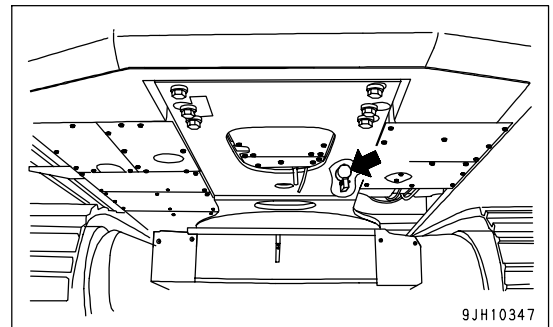


CHECKING FUNCTION OF ACCUMULATOR

CAUTION

When carrying out the inspection, check first that there is no person or obstacle in the surrounding area.

Check the nitrogen gas charge pressure as follows.


1. Stop the machine on firm, level ground.
2. Hold the work equipment in the maximum reach posture (arm fully out, bucket fully dumped) at a height (A) 1.5 m (4 ft 11 in) from the ground.

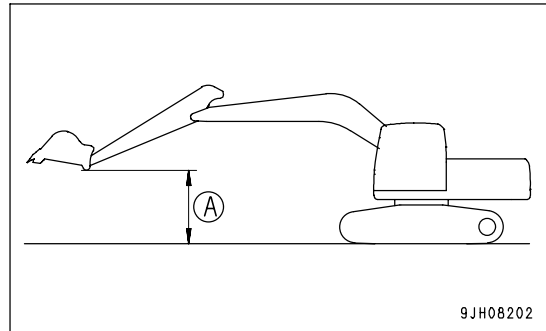


Carry out Steps 3 - 5 within 15 seconds.

When the engine is stopped, the pressure in the accumulator gradually goes down. For this reason, the check can only be carried out immediately after the engine is stopped.


3. Keep the work equipment at the maximum reach, turn the starting switch to the OFF position (A), and stop the engine.

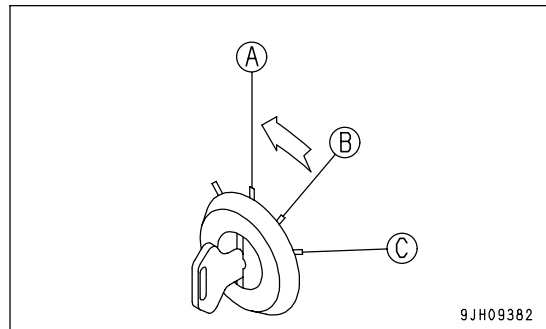


4. Turn the starting switch to the ON position (B).

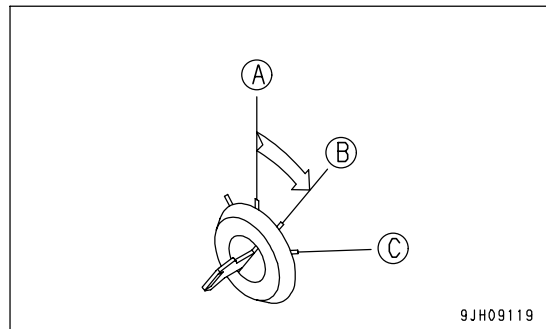

5. With the lock lever at the FREE position (F), operate the work equipment control levers fully in the LOWER direction and check that the work equipment is lowered to the ground.

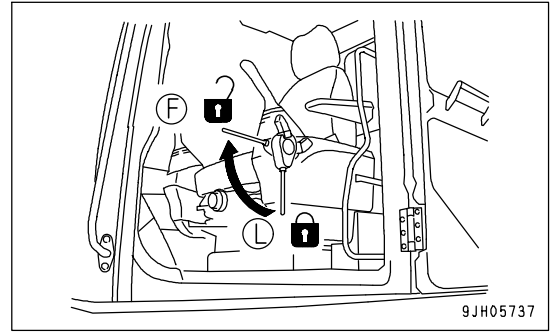

6. If the work equipment goes down under its weight and contacts the ground, the accumulator is normal.
 If the work equipment does not go down or stops in midway, the charged pressure of the gas in the accumulator for the hydraulic circuit has probably dropped.
 Please contact your Komatsu distributor for inspection.

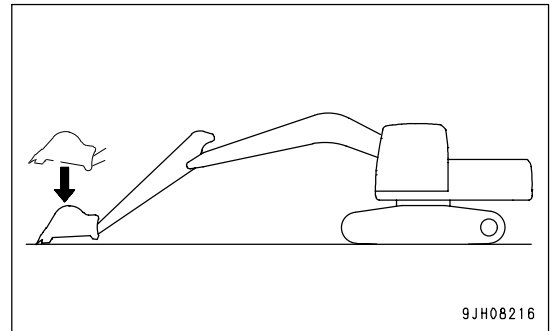

7. This completes the inspection. After completion of the inspection, set the lock lever to the LOCK position and turn the starting switch to the OFF position.

METHOD OF RELEASING PRESSURE IN HYDRAULIC CIRCUIT





WARNING

- The hydraulic system is always under internal pressure, so when inspecting or replacing the piping or hoses, always release the pressure in the circuit before starting. If the pressure is not released, high pressure oil may spurt out and cause serious personal injury.
- The parts and oil are at high temperature after the engine is stopped, and may cause serious burns. Wait for the temperature to go down before starting the operation.
- When the oil filler cap is removed, oil may spurt out, so turn the cap slowly to release the pressure before removing the cap.

1. Stop the machine on firm horizontal ground, lower the work equipment to the ground as shown in the diagram on the right, then stop the engine.

- Set the lock lever at the FREE position (F).
2. Operate each work equipment control lever to the full stroke within 5 - 6 seconds after stopping the engine.
- Leave the starting switch at the ON position.

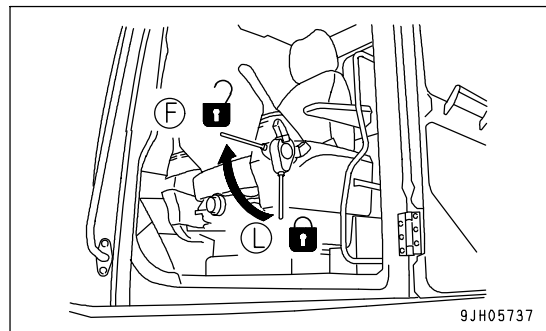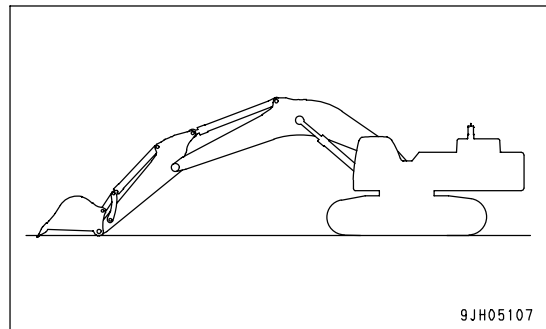

3. Remove the cap of the hydraulic tank.
4. Start the engine, run for approx. 10 seconds, then stop the engine again.
- Do not run the engine at more than 1000 rpm.
 - Set the work equipment control levers to the HOLD position.
5. Operate each work equipment control lever to the full stroke within 5 - 6 seconds after stopping the engine.
- Repeat Steps 4 - 5 three times.

CHECK ALTERNATOR

Contact your Komatsu distributor to have the alternator checked.

If the engine is started frequently, have this inspection carried out every 1000 hours.

CHECK ENGINE VALVE CLEARANCE, ADJUST

Special tools are needed for inspection and maintenance, so contact your Komatsu distributor.

CHECK ALL TIGHTENING POINTS OF ENGINE EXHAUST PIPE CLAMPS

Please ask your Komatsu distributor to check the tightening of the clamps between the air cleaner - turbocharger - aftercooler - engine.

EVERY 4000 HOURS MAINTENANCE

Maintenance for every 10, 100, 250, 500, 1000, and 2000 hours of service should be performed at the same time.

CHECK WATER PUMP

Check for leakage of oil or water. If any problem is found, ask your Komatsu distributor to carry out disassembly and repair or replacement.

REPLACE ACCUMULATOR (FOR CONTROL CIRCUIT)

Replace the accumulator every 2 years or every 4000 hours, whichever comes sooner.




WARNING

The accumulator is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion, which will lead to serious injury or damage. When handling the accumulator, always do as follows.


- The pressure in the hydraulic circuit cannot be completely removed. When removing the hydraulic equipment, do not stand in the direction that the oil spurts out when carrying out the operation. In addition, loosen the bolts slowly when carrying out the operation.
- Do not disassemble the accumulator.
- Do not bring it near flame or dispose of it in fire.
- Do not make holes in it or weld it.
- Do not hit it, roll it, or subject it to any impact.
- When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

If operations are continued after the performance of the accumulator has dropped, it will be impossible to release the remaining pressure in the hydraulic circuit if there should be a failure on the machine. Please ask your Komatsu distributor to replace the accumulator.

The accumulator is installed to the position shown in the diagram on the right.

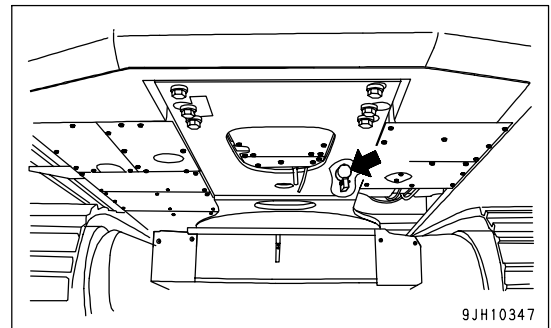


CHECK FOR LOOSENESS OF HIGH-PRESSURE PIPING CLAMP, HARDENING OF RUBBER

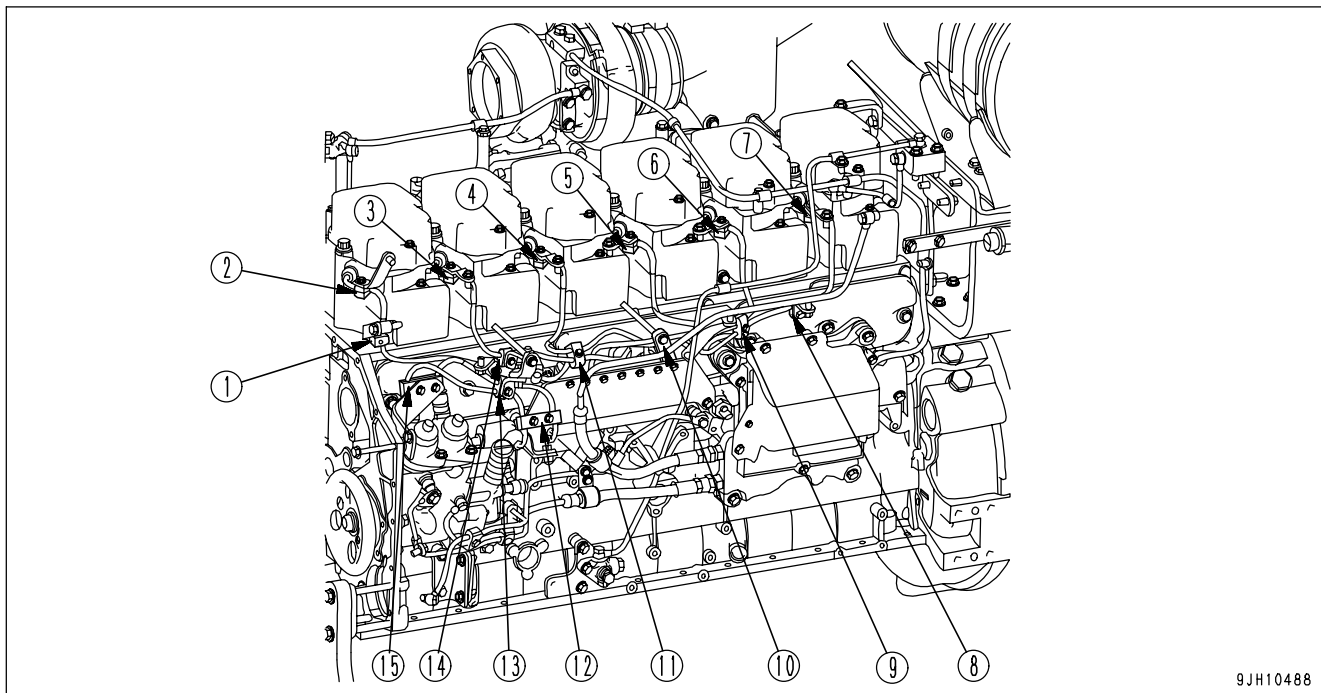

9JH10488

Check visually and touch with your fingers to check that there are no loose bolts or hardening of rubber parts at clamps (1) to (15). If there is any looseness or hardened rubber, contact your Komatsu distributor for replacement.

CHECK FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER

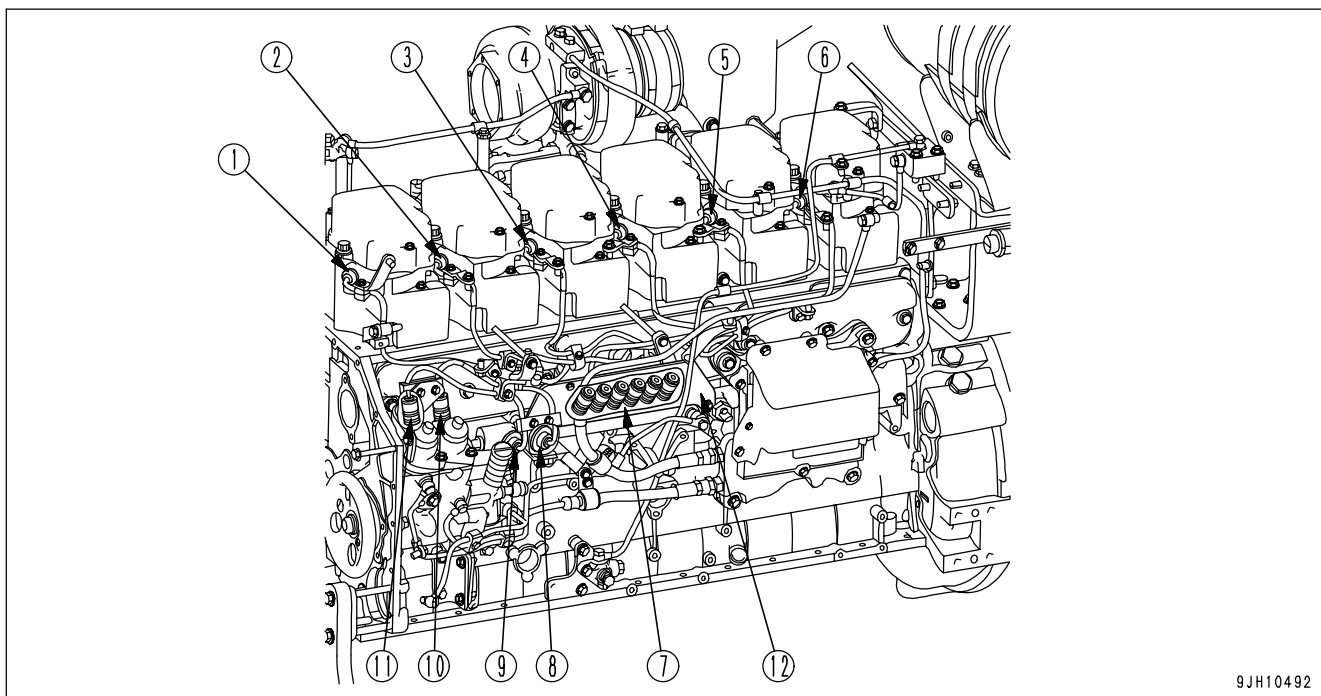

9JH10492

Check for any missing fuel spray prevention caps (1) to (11) or fuel spray prevention cover (12), and check also for any hardened rubber portions. If there are any missing caps or cover or the rubber is hardened, please contact your Komatsu distributor for repairs.

CHECK OPERATING CONDITION OF COMPRESSOR

Ask your Komatsu distributor to carry out the inspection.

CHECK STARTING MOTOR

Contact your Komatsu distributor to have the starting motor checked.

If the engine is started frequently, have this inspection carried out every 1000 hours.

EVERY 5000 HOURS MAINTENANCE

Maintenance for every 10, 100, 250, 500, 1000, and 2000 hours of service should be performed at the same time.



CHANGE OIL IN HYDRAULIC TANK





WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

- Refill capacity: 470 liters (124.2 US gal)
 - Prepare a handle (for the socket wrench).
1. Swing the upper structure so that hydraulic tank drain plug (P3) and drain plug (P1) at the bottom of the pump suction tube are in the middle between the left and right tracks.
 2. Retract the arm and bucket cylinders, then lower the boom and put the teeth in contact with the ground.
 3. Set the lock lever to the LOCK position and stop the engine.

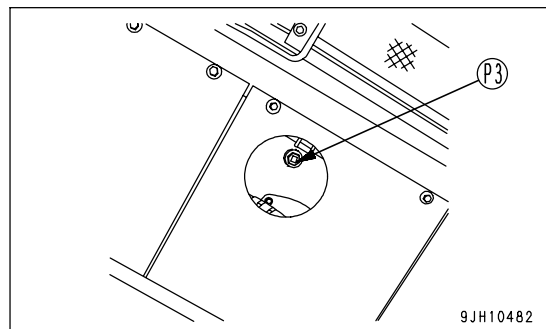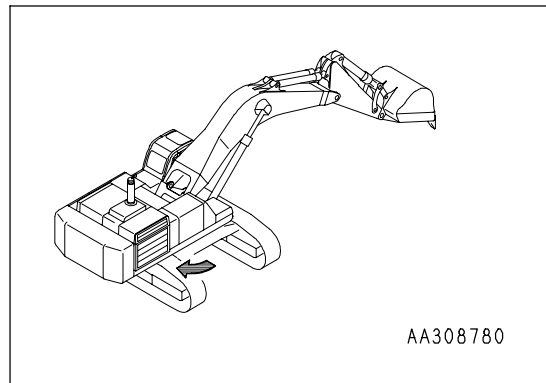

4. Remove the cap from oil filler (F) on top of the hydraulic tank.
5. Place a container to receive drained oil under the drain plug located in the underpart of the machine. Remove drain plug (P1) on the suction tube and then loosen (P2) to drain oil. After draining oil from drain plug (P1), remove drain plug (3) under the hydraulic tank and drain plug (P4) on the suction tube to drain remaining oil.
6. Check the O-rings fitted to drain plugs (P3) and (P4) for any damage. If any, replace the defective O-ring with a new one. After draining oil, tighten drain plugs (P1), (P2), (P3) and (P4).
 - Tightening torque
 - (P1) and (P2): 152 ± 24.5 Nm (15.5 ± 2.5 kgm, 112.1 ± 18.1 lbft)
 - (P3) and (P4): 68.6 ± 9.8 Nm (7 ± 1 kgm, 50.6 ± 7.2 lbft)
 - When removing drain plug (P3), (P4), be careful not to get oil on yourself.
7. Add the specified amount of new and clean oil through oil filler port (F). Check that the oil level is between H and L on the sight gauge.

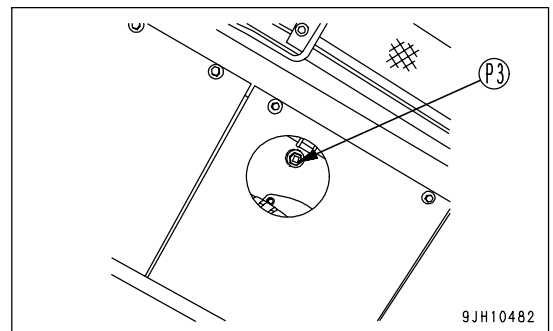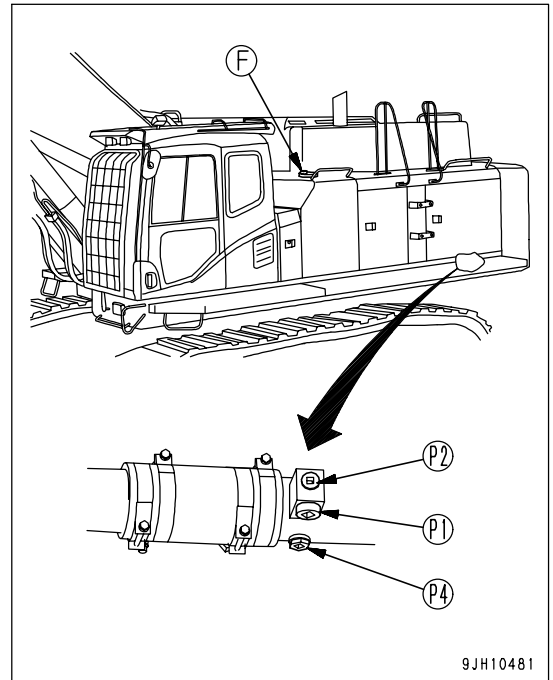

For details of oil level check, see "Check Oil Level in Hydraulic Tank, Add Oil (PAGE 3-85)".

8. Bleed the air from the circuit after cleaning or replacing the filter element or strainer, or after changing the oil. For details of the method of bleeding the air, see "BLEEDING AIR FROM HYDRAULIC SYSTEM (PAGE 4-38)".

EVERY 8000 HOURS MAINTENANCE

Maintenance for every 10, 100, 250, 500, 1000, 2000, and 4000 hours of service should be performed at the same time.

REPLACE HIGH-PRESSURE PIPING CLAMP

Contact your Komatsu distributor to have the engine high-pressure clamps replaced.


REPLACE FUEL SPRAY PREVENTION CAP

Contact your Komatsu distributor to have the fuel spray prevention cap replaced.

SPECIFICATIONS


SPECIFICATIONS

Item	Unit	PC800-8	PC800SE-8	PC800LC-8	PC850-8	PC850SE-8
Operating weight (with operator)	kg (lb)	74,200 (163,611)	75,200 (165,816)	77,200 (170,226)	78,700 (173,534)	78,300 (172,652)
Bucket capacity	m ³ (cu.yd)	3.1 (4.1)	4.0 (5.2)	3.1 (4.1)	3.4 (4.4)	4.3 (5.6)
Name of engine	-	KOMATSU SAA6D140E-5 deisel engine				
Flywheel horsepower	kW (HP)/rpm	363 (486)/1,800				
A Overall length	mm (ft in)	14,405 (47'3")	13,130 (43'1")	14,405 (47'3")	13,995 (45'11")	13,130 (43'1")
B Overall height	mm (ft in)	4,690 (15'5")	4,615 (15'2")	4,690 (15'5")	4,850 (15'11")	4,615 (15'2")
C Overall width	mm (ft in)	4,285 (14'1")	4,285 (14'1")	4,385 (14'5")	4,285 (14'1")	4,285 (14'1")
D Track shoe width	mm (ft in)	610 (2'0")	610 (2'0")	810 (2'8")	610 (2'0")	610 (2'0")
E Height of cab	mm (ft in)	3,560 (11'8")	3,560 (11'8")	3,560 (11'8")	3,640 (11'11")	3,640 (11'11")
F tail swing radius	mm (ft in)	4,400 (14'5")	4,400 (14'5")	4,400 (14'5")	4,400 (14'5")	4,400 (14'5")
G Length of track	mm (ft in)	5,810 (19'1")	5,810 (19'1")	6,330 (20'9")	5,810 (19'1")	5,810 (19'1")
H Tumbler center distance	mm (ft in)	4,500 (14'9")	4,500 (14'9")	5,020 (16'6")	4,500 (14'9")	4,500 (14'9")
I Exterior Part Height	mm (ft in)	4,000 (13'1")	4,000 (13'1")	4,000 (13'1")	4,000 (13'1")	4,000 (13'1")
Min.ground clearance	mm (ft in)	840 (2'9")	840 (2'9")	840 (2'9")	840 (2'9")	840 (2'9")
Travel speed (Low/High)	km/h (MPH)	2.8/4.2 (1.7/2.6)	2.8/4.2 (1.7/2.6)	2.8/4.2 (1.7/2.6)	2.8/4.2 (1.7/2.6)	2.8/4.2 (1.7/2.6)
Swing speed	rpm	6.8	6.8	6.8	6.8	6.8

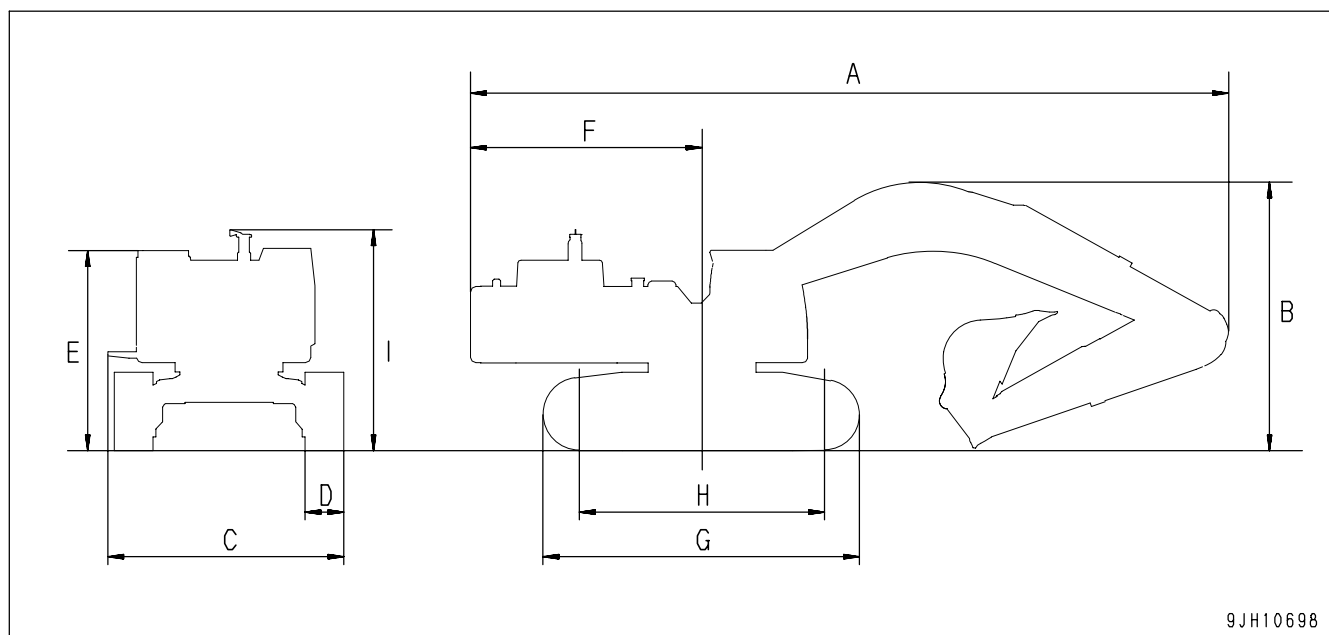

9JH10698

	Working range	Unit	PC800-8	PC800SE-8	PC800LC-8	PC850-8	PC850SE-8
A	Maximum digging radius	mm (ft in)	13,740 (45'1")	12,265 (40'3")	13,740 (45'1")	13,660 (44'10")	12,265 (40'3")
B	Maximum digging depth	mm (ft in)	8,600 (28'3")	7,130 (23'5")	8,600 (28'3")	8,445 (27'8")	7,130 (23'5")
C	Maximum digging height	mm (ft in)	11,840 (38'10")	11,330 (37'2")	11,840 (38'10")	11,955 (39'3")	11,330 (37'2")
D	Maximum vertical wall digging depth	mm (ft in)	5,575 (18'3")	4,080 (13'5")	5,575 (18'3")	5,230 (17'2")	4,080 (13'5")
E	Maximum dumping height	mm (ft in)	8,145 (26'9")	7,525 (24'8")	8,145 (26'9")	8,235 (27'0")	7,525 (24'8")
F	Maximum digging reach at ground level	mm (ft in)	13,460 (44'2")	11,945 (39'2")	13,460 (44'2")	13,400 (43'12")	11,945 (39'2")

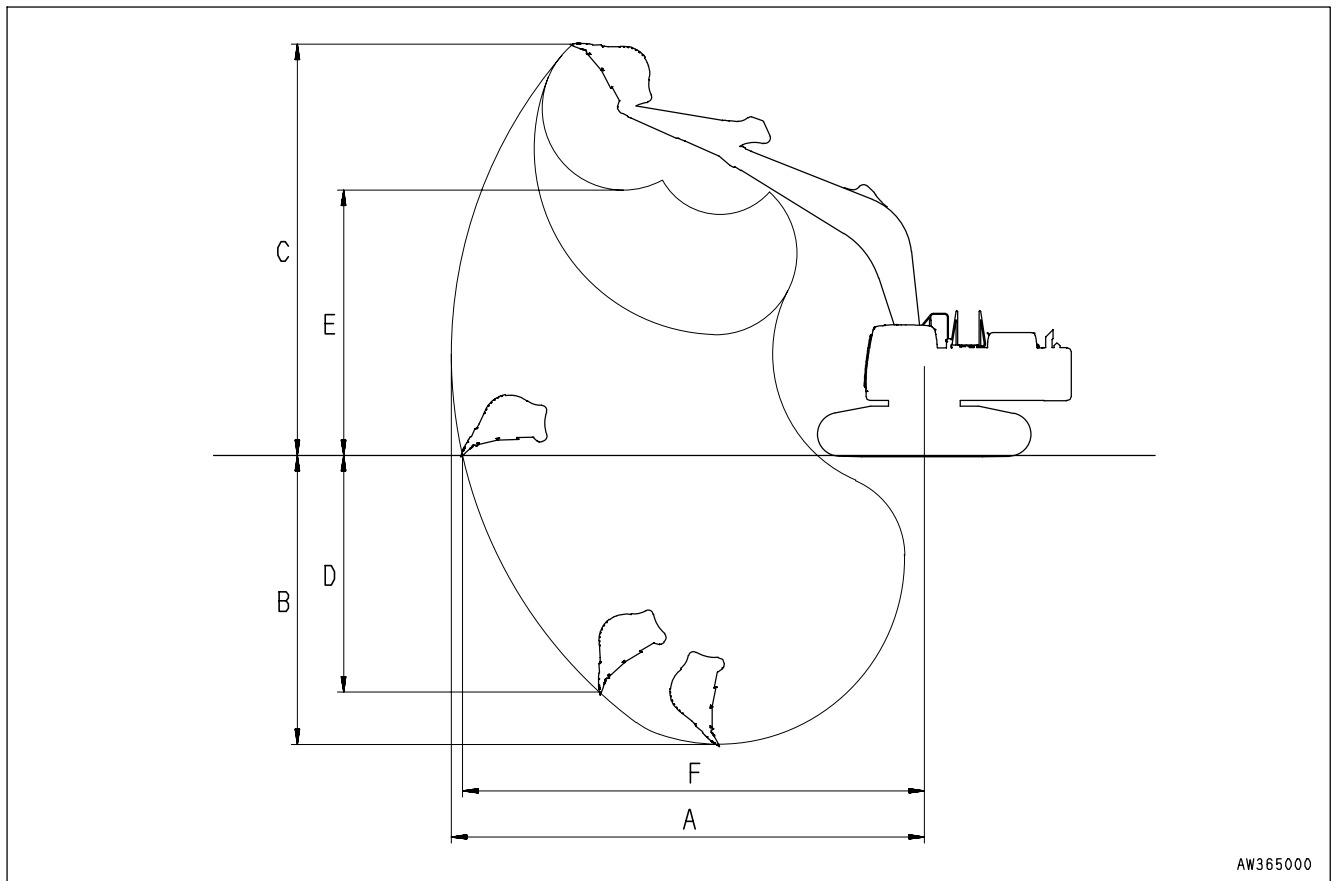

ATTACHMENTS, OPTIONS

WARNING

Please read and make sure that you understand the SAFETY section before reading this section.

GENERAL PRECAUTIONS FOR SAFETY

When installing attachments or options to the machine, it is necessary to pay attention to safety. Please obey the following precautions strictly when selecting, installing, or using attachments or options.

PRECAUTIONS WHEN SELECTING

- Please consult your Komatsu distributor before installing attachments or options to the machine. Depending on the type of attachment or option, it may be necessary to install a front guard, overhead guard, or other safety structure to the machine. There may also be problems of the attachment or option hitting the operator's cab.
- Install only attachments or options authorized by Komatsu. Komatsu cannot accept any responsibility for any accident, damage, or failure caused by the use of attachments or options not authorized by Komatsu.

READ THE INSTRUCTION MANUAL THOROUGHLY

- Before using or starting the operation to remove or install any attachment or optional device, read the instruction manual for the machine itself and for the attachment or optional device thoroughly.
- If you lose the instruction manual or it is damaged, always obtain a new copy from the attachment manufacturer or your Komatsu distributor.

PRECAUTIONS WHEN REMOVING OR INSTALLING

When removing or installing the attachment or option, obey the following precautions, and take care to ensure safety during the operation.

- Carry out the removal and installation operation on a flat, firm ground surface.
- When the operation is carried out by two or more workers, choose the leader and follow his instructions.
- Use a crane when handling heavy objects (more than 25 kg (55 lb)). (The crane must be operated by a qualified operator.)
- Never go under a load raised by the crane.
- Do not carry out operations with the load kept raised by the crane. Always use a stand to prevent the load from falling.
- When removing a heavy part, consider the balance after it is removed. To prevent the machine from tipping over, set a support in position if necessary before removing the part.
- Before installing or after removing the attachment or option, set it in a stable condition to prevent it from falling over.
- For details of the removal or installation operation, please consult your Komatsu distributor.

PRECAUTIONS WHEN USING

When long or heavy work equipment is installed, remember the following precautions. Before starting operations, move the machine to a safe place and carry out a test operation to make sure that you fully understand the movement, center of gravity, and working range of the machine.

- Do not swing the work equipment if the machine is at an angle. If the work equipment is swung with the machine at an angle, there is danger that the machine will tip over.
- Always maintain a safe distance from obstacles in the surrounding area when operating. If long work equipment is installed, the working range becomes larger.
- If heavy work equipment is installed, pay careful attention to the following precautions.
 - The swing overrun (the distance the work equipment moves before completely stopping after the swing brake is applied) will be greater. There is danger of hitting objects if the swing overrun is miscalculated, so allow extra space to the swing position when swinging.
 - The hydraulic drift of the work equipment (the amount of the work equipment moves down under its own weight when it is stopped in a raised position) also becomes greater. Do not stop the work equipment in a raised position; always lower it to the ground.
 - Do not swing, lower, or stop the work equipment suddenly. There is danger that the machine may tip over.
 - Do not suddenly extend or retract the boom cylinder. The shock may cause the machine to tip over.

ATTACHMENT GUIDE



WARNING

- Please read the instruction manual for the attachment and the sections of this manual related to attachments and options.
 - When installing any attachment or option, there may be problems with safety, so please contact your Komatsu distributor before installing.
 - Installing attachments or options without consulting your Komatsu distributor may not only cause problems with safety, but may also have an adverse effect on the operation of the machine and the life of the equipment.
 - Any injuries, accidents, or damage resulting from the use of unauthorized attachments or options will not be the responsibility of Komatsu.
-

COMBINATIONS OF WORK EQUIPMENT

**WARNING**

Depending on the type or combination of work equipment, there is danger that the work equipment may hit the cab or machine body.

When using unfamiliar work equipment for the first time, check before starting if there is any danger of interference, and operate with caution.

Select the combination of boom, arm, and bucket from the combinations shown in the table below.

Model		PC800-8 PC800LC-8		PC800SE-8	PC850-8	PC850SE-8					
Boom		Standard boom 8.2m		SE boom 7.1m	Strengthened boom 8.2m	SE boom 7.1m		Bucket width [mm (in)]			
Arm		Standard arm 3.6m	Long arm 5.6m	SE arm 2.9m	Strengthened arm 3.6m	SE arm		With side cutter (excluding side shroud)	With side cutter (including side shroud)		
						2.9m	3.6m				
Work equipment	Bucket	Narrow 2.8<2.5> m ³	●	●	X	X	X	X	1550 (61.1)	1700 (67.0)	
		Standard 3.1<2.8> m ³	●	○	X	X	X	X	1700 (67.0)	1850 (72.9)	
		Quarry 3.4<3.0> m ³	○	X	X	○	X	X	X	1820 (71.7)	1870 (73.7)
		Quarry strength 3.4<3.0> m ³	X	X	X	●	X	X	X	1820 (71.7)	1870 (73.7)
		Wide 4.0<3.5> m ³	X	X	●	X	●	●	●	2000 (78.8)	2105 (82.9)
		Wide 4.3<3.8> m ³	X	X	○	X	●	X	●	2150 (84.7)	2250 (88.7)
		Wide 4.5<4.0> m ³	X	X	○	X	○	X	○	2230 (87.9)	2335 (92.0)

Note: The figure shown in < > for the bucket shows the CECE bucket capacity.


●: This shows the general operations.

○: This shows the light work.

X: This shows that the impossible to use.

Working Range Diagram

	Working range	Unit	PC800-8 PC800LC-8 Standard arm 3.6m	PC800-8 PC800LC-8 Long arm 5.6m	PC800SE-8 SE arm 2.9m	PC850-8 Strengthened arm 3.6m	PC850SE-8 SE arm 2.9m	PC850SE-8 SE arm 3.6m
A	Maximum digging reach	mm (ft in)	13,740 (45'1")	15,635 (51'4")	12,265 (40'3")	13,660 (44'10")	12,265 (40'3")	12,710 (41'8")
B	Maximum digging depth	mm (ft in)	8,600 (28'3")	10,595 (34'9")	7,130 (23'5")	8,445 (27'8")	7,130 (23'5")	7,790 (25'7")
C	Maximum digging height	mm (ft in)	11,840 (38'10")	12,690 (41'8")	11,330 (37'2")	11,955 (39'3")	11,330 (37'2")	11,055 (36'3")
D	Maximum vertical wall digging depth	mm (ft in)	5,575 (18'3")	7,920 (25'12")	4,080 (13'5")	5,230 (17'2")	4,080 (13'5")	4,260 (13'12")
E	Maximum dumping height	mm (ft in)	8,145 (26'9")	8,890 (29'2")	7,525 (24'8")	8,235 (27'0")	7,525 (24'8")	7,430 (24'5")
F	Maximum digging reach at ground level	mm (ft in)	13,460 (44'2")	15,385 (50'6")	11,945 (39'2")	13,400 (43'12")	11,945 (39'2")	12,400 (40'8")

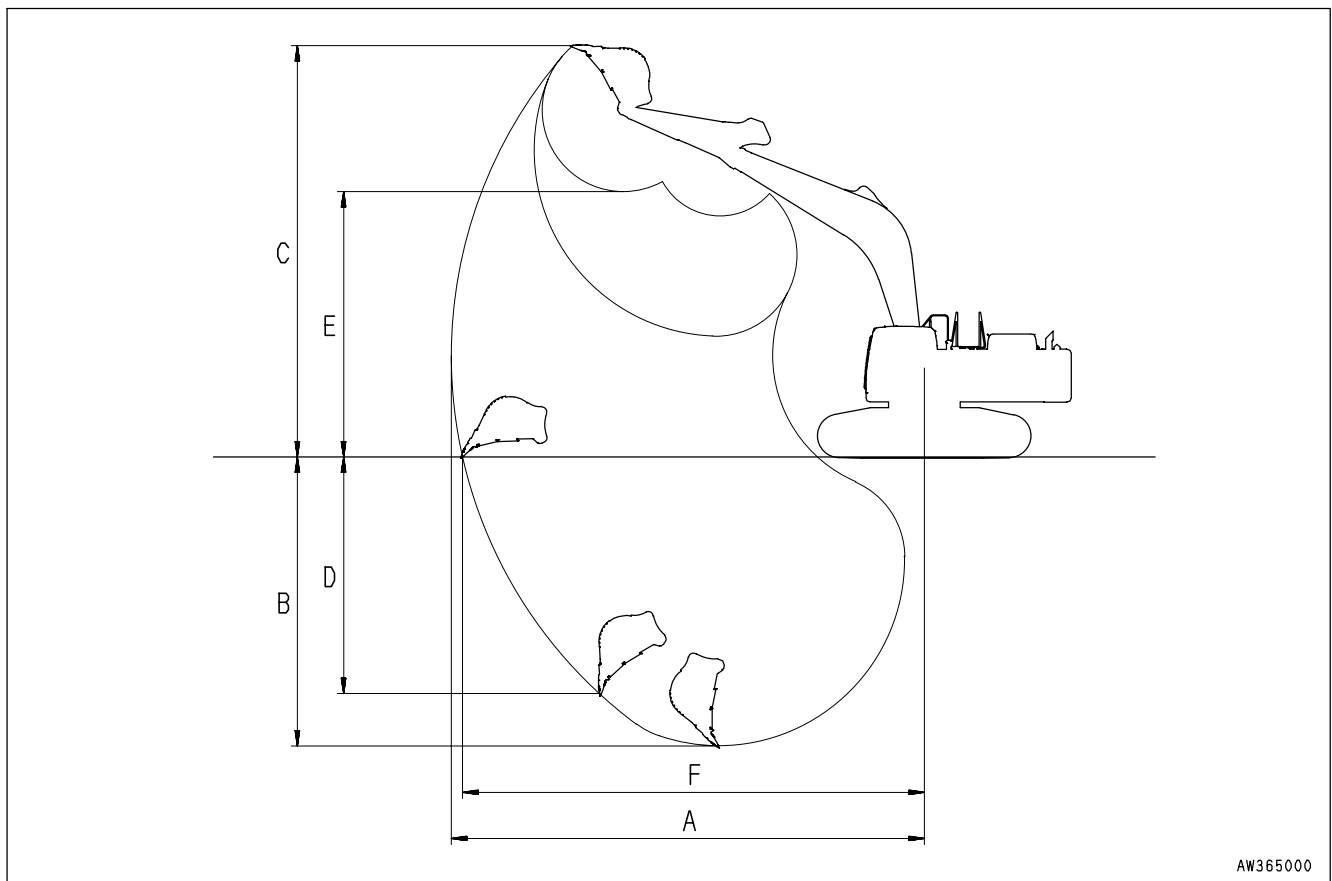

AW365000

TRACK SHOES SELECTION

Select the appropriate track shoe to match the operating conditions.

Selection

Check the category from the uses in the table below, then select the shoes from the table below that.


- Category of use B and C are the wide shoe, so there are limits on the use. Check the precautions for use, examine the conditions of use thoroughly, and use the optimum shoes for the situation.
- When selecting the shoe width, choose the narrowest shoes possible to bring the machine within the range where there is no problem regarding the machine flotation and ground contact pressure. If wider shoes than necessary are used, the load on the shoe will increase, this may cause problems such as bending of the shoe, cracking of the link, damage of the pin, and looseness of the shoe bolts.

Category	Use	Precautions when using
A	Rocky ground, riverbeds, normal soil	<ul style="list-style-type: none"> • On rough ground with large obstacles such as boulders or fallen trees, travel at low speed.
B	Normal soil, soft ground	<ul style="list-style-type: none"> • These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees. • Travel at Hi or Mi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.
C	Extremely soft ground (swamp)	<ul style="list-style-type: none"> • Use only in places where machine sinks into ground and it is impossible to use A and B track shoes. • These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees. • Travel at Hi or Mi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.

	PC800,800SE		PC800LC		PC850,850SE	
	Specifications	Category	Specifications	Category	Specifications	Category
Standard	610 mm Double	A	810 mm Double	A	610 mm Double	A
Option	710 mm Double	A	1010 mm Double	B	710 mm Double	A
Option	810 mm Double	B	1110 mm Double	C		
Option	910 mm Double	B				
Option	1010 mm Double	C				

HANDLING COUNTERWEIGHT REMOVER

EXPLANATION OF COMPONENTS

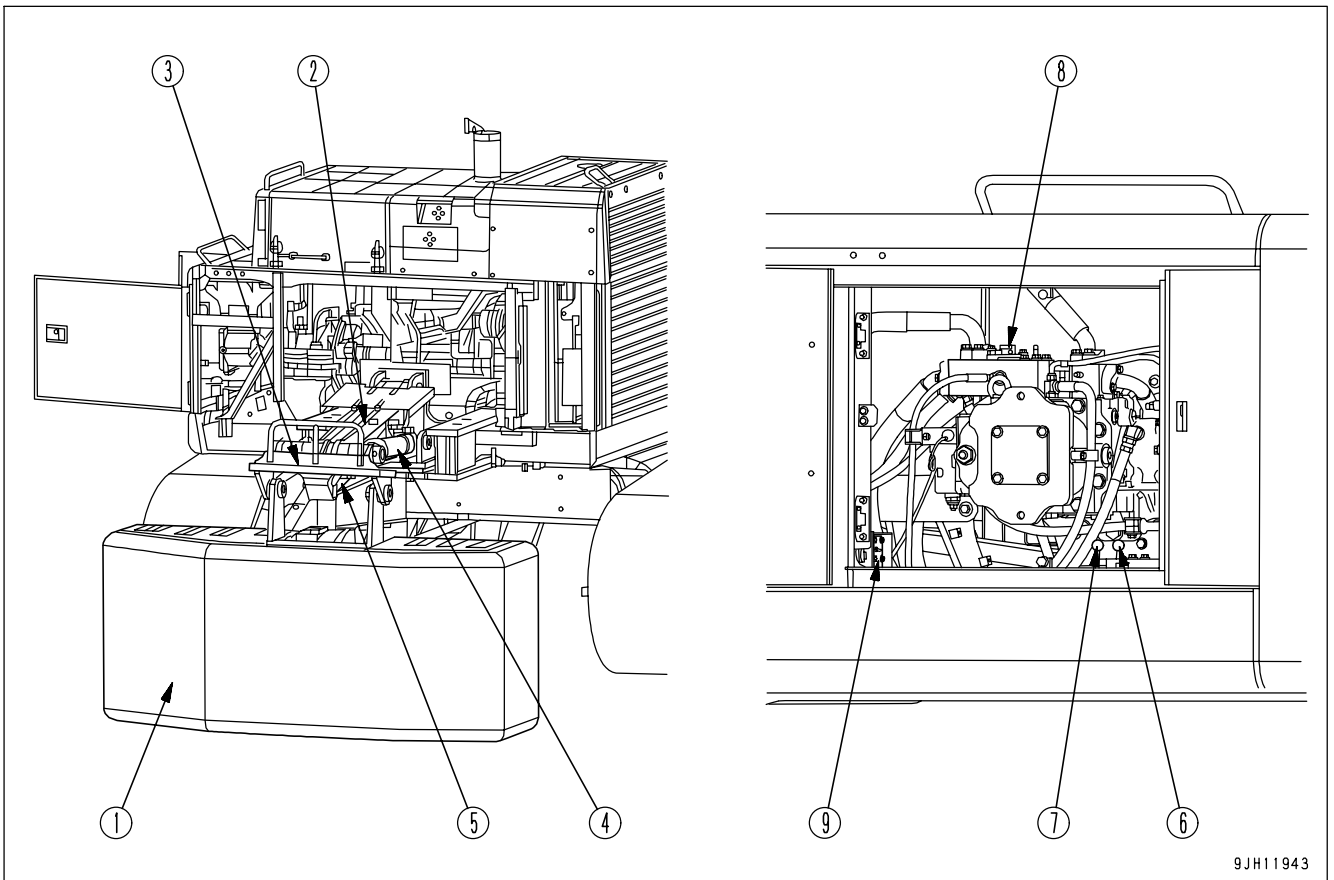

9JH11943


- | | |
|-----------------------------|---|
| (1) Counterweight | (6) Counterweight Removal / Installation
A Control Lever |
| (2) A Remover Link | (7) Counterweight Removal / Installation
B Control Lever |
| (3) B Remover Link | (8) Remover Control Selector Valve |
| (4) A Remover Link Cylinder | (9) Lock Switch |
| (5) B Remover Link Cylinder | |

Counterweight, Remover Link, Remover Link Cylinder


This counterweight (1) is shaped to be fit for slinging. It moves up and down by operating remover links (2) and (3) with remover link cylinders (4) and (5).

Counterweight remover control lever

Use these levers (6) and (7) to move remover link cylinders (4) and (5) and move counterweight (1) up and down.

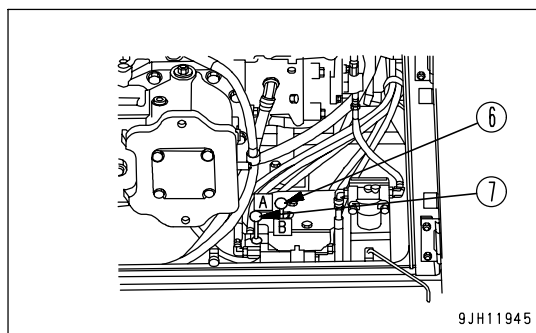
**Remover control selector valve**

Use this valve (8) to switch the hydraulic circuit for normal operations and remover operations.

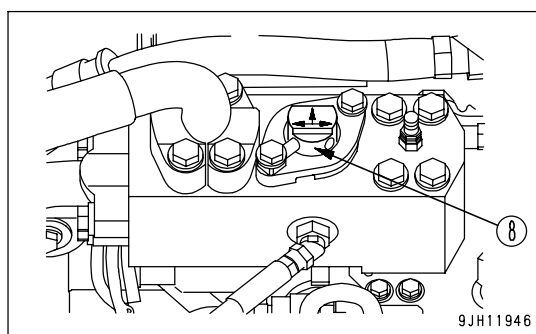**Lock Switch**

This switch (9) is a device to lock operation of the work equipment, swing, travel, and attachment (if equipped) when the remover operation is being carried out.

Switch (10) is a speed limit device to ensure safety when operating the remover.

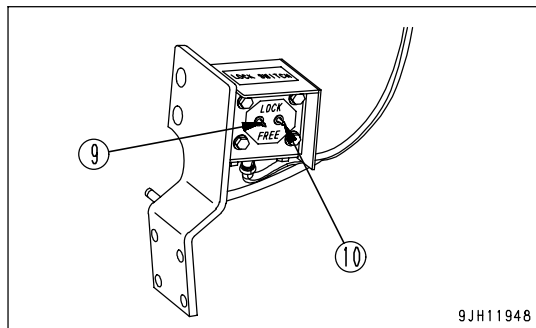

Operation of counterweight remover



WARNING

- When operating the counterweight remover device, do not allow anyone to come close to the machine.
- When operating the counterweight remover device, be sure to apply the lock switches in the operator's cab compartment and in the hydraulic pump chamber.
- When removing or installing the counterweight, park the machine on the flat and solid ground free of fluctuations and stones, and then do the work.
- When removing or installing the counterweight, lower the work equipment to the ground to stabilize the machine.
- When removing or installing the counterweight, keep the engine running at low idling.
- While removing or installing the counterweight, keep a close watch on the counterweight, as it moves, to make sure that it moves without a hitch.
- When the counterweight is not secured to the revolving frame, never do the digging work (i.e. the operation of the work equipment, travel and swing). By the same token, never do the same when the counterweight is stretched.
- Before releasing the remaining pressure in the remover link cylinder, always tighten the mounting bolts of the revolving frame and counterweight temporarily to secure the counterweight in position. If it is not secured in position, the counterweight may move when the remaining pressure is released.
This is extremely dangerous.
- Do not use this machine for digging operations if the counterweight has been removed.

NOTICE


- Always carry out greasing each time the counterweight is removed.
- In the counterweight removal and installation work, be sure to turn the remover control selector valve to the "REMOVAL / INSTALLATION" position before setting about the work. If this step is neglected, the hydraulic pump can be damaged, or the machine's life will be shortened.
- When the counterweight removal or installation work finishes, turn the remover control selector valve to the original position, and start ordinary work thereafter.

When lowering counterweight


CAUTION

Always stop the engine before operating the remover control selector valve.

1. Make sure that lock lever (1) in the operator's cab is in the LOCK (L) position.

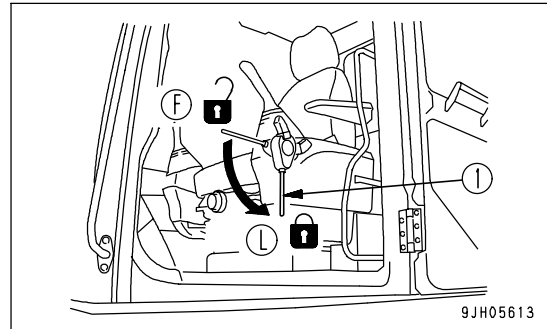


2. Operate lock switches (2) and (3) inside the pump chamber to LOCK position (c).


REMARK

Turn the engine starting switch OFF before operating the lock switches. If the starting switch is ON and the lock switches are operated, error (E07) is displayed on the machine monitor inside the cab.


This is not a failure, but normal operations cannot be carried out when error (E07) is being displayed. If error (E07) is displayed, turn the starting switch to the OFF position, then turn it ON again. Error (E07) display will go out.

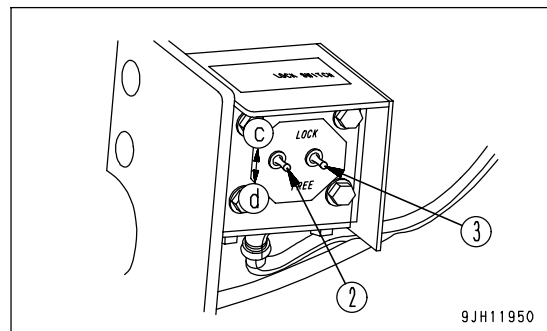


3. Check that nut (4) for the counterweight pin stopper bolt is securely tightened.

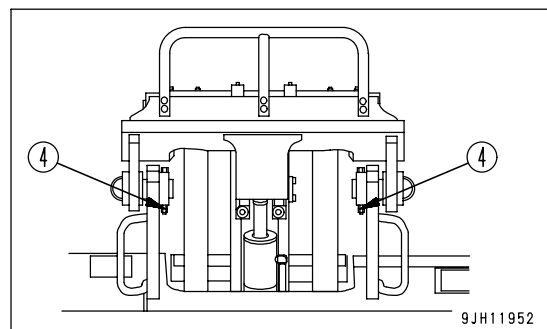


4. Remove grip (5), cover (6) and step (7).

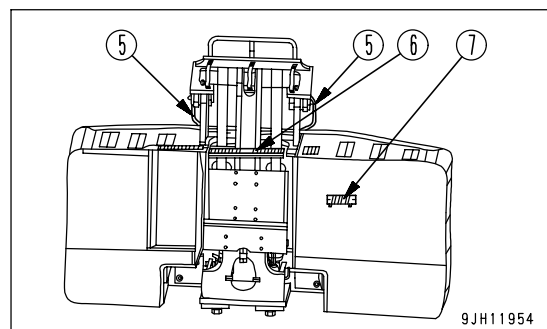

5. Remove grip (20), catcher (21) - only the one on the left side of the machine - and bolts (22) and (23).

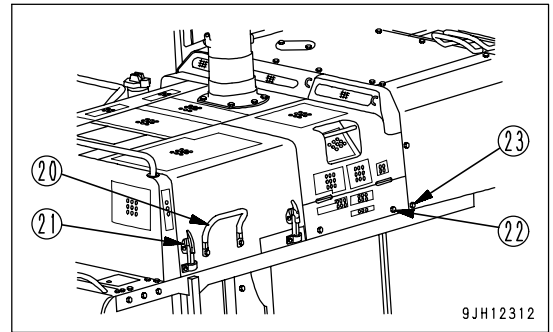


6. Remove 6 counterweight mounting bolts (8).
Width across flats of bolts: 65 mm (2.6 in)

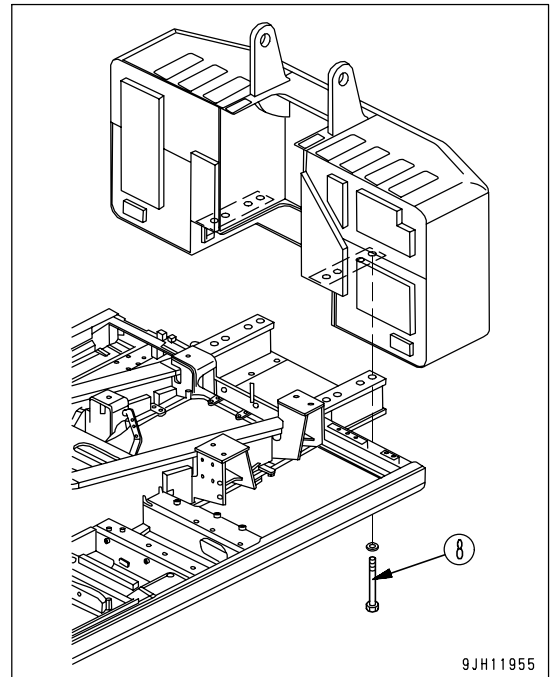


7. Switch remover control selector valve (9) to the counterweight REMOVAL / INSTALLATION position. The switching can be made in the following manner.

- 1) Turn the engine starting switch OFF
- 2) Remove bolt (10).
- 3) Turn remover control selector valve (9) clockwise with lever (11) by 90° until it hits the stopper.
 - Turn the position of an arrow stamped on the head of remover control selector valve (9) from view "Y" to view "Z".

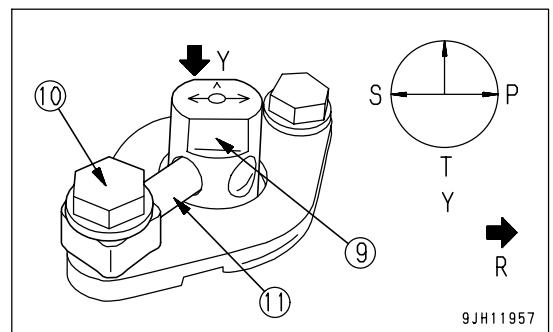

- P : Pump port
- R : Rear of machine
- S : Main valve discharge port
- T : Remover discharge port
- Y : Direction of arrows when not using remover
- Z : Direction of arrows when removing or installing counterweight

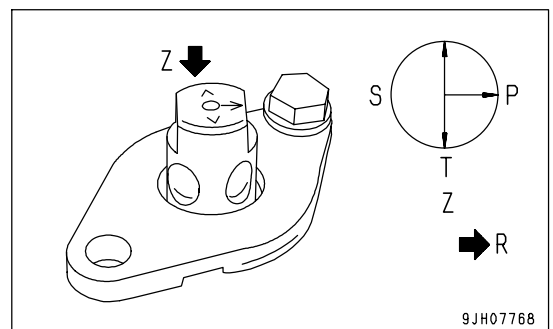


8. Turn lock switches (2) and (3) in the pump room to LOCK (c) position and start up the engine.


REMARK

On that occasion, if lock switches (2) and (3) are in FREE position (d), the engine does not start up.


9. After starting up the engine, release the warming-up mode and keep the engine running at a low speed (low idling).

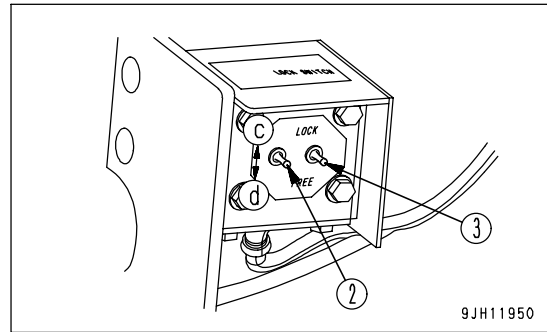


10. Operate counterweight removal / installation B control lever (12) slowly to the RAISE (f) position and extend B remover link cylinder (13) to the stroke end (max.). Then B remover link (14) is stretched, and the counterweight begins to rise as it is also stretched. In this process, raise the counterweight slowly by keeping counterweight removal / installation B control lever (12) at its half stroke instead of at the full stroke to control the rising speed.

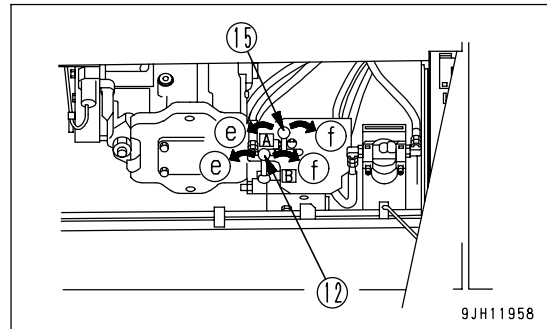

11. Operate counterweight removal / installation A control lever (15) slowly to the LOWER (f) position, allowing A remover link (16) to be stretched. At that time, the counterweight begins to lower together as it is stretched. In this process, lower the counterweight slowly by keeping counterweight removal / installation A control lever (15) at its half stroke instead of at the full stroke to control the lowering speed.

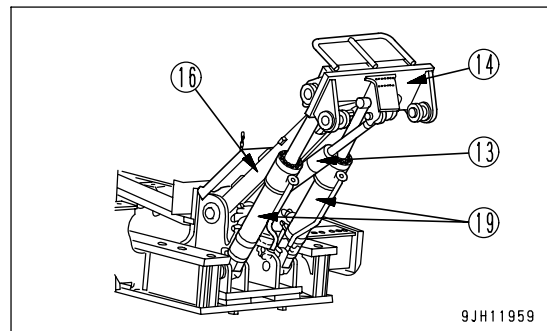


12. Lower the counterweight completely to the ground.
13. Remove 2 pin stopper bolts (17), then remove 2 pins (18) from the counterweight holes.
- When doing this, be careful not to let the counterweight fall over. If there is danger of it falling over, take action to prevent it from falling over before removing pins (18).

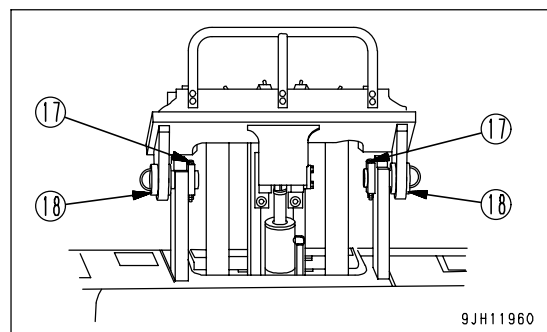

14. Return remover control selector valve (9) to its original position. The procedure for switching is as follows.

- 1) Stow remover links (14) and (16) in their original position.
- 2) Turn the engine starting switch OFF
- 3) Set so that the arrow on the head of remover control selector valve (9) is in the condition shown in View Y, then tighten with bolt (10) and lever (11).

Tightening torque: 9.8 - 12.3 N·m (1.0 - 1.2 . 5 kg·f·m , 72.3-90.4lbft)

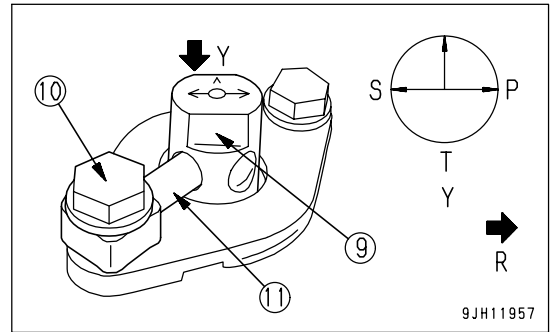


15. Operate lock switches (2) and (3) inside the pump chamber to FREE position (d).

REMARK



Turn the engine starting switch OFF before operating the lock switches. If the starting switch is ON and the lock switches are operated, error (E07) is displayed on the machine monitor inside the cab.

This is not a failure, but normal operations cannot be carried out when error (E07) is being displayed. If error (E07) is displayed, turn the starting switch to the OFF position, then turn it ON again. Error (E07) display will go out.

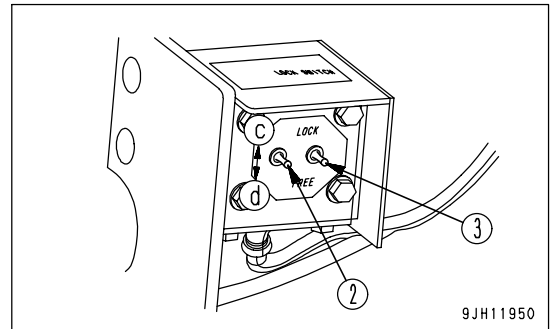

16. Add grease through the grease fitting.

- Always carry out greasing each time the counterweight is removed.

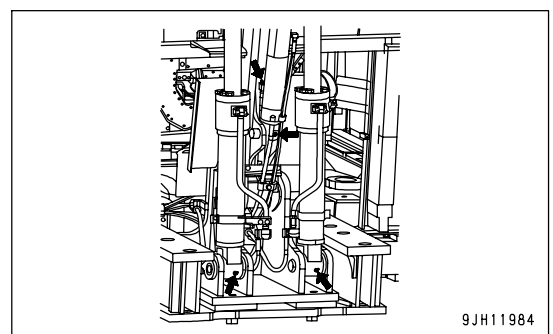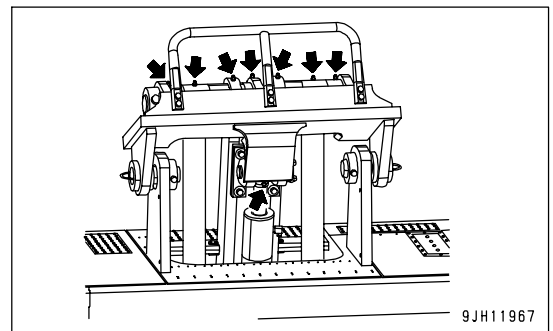


When installing counterweight


CAUTION

Always stop the engine before operating the remover control selector valve.

1. Make sure that lock lever (1) in the operator's cab is in the LOCK (L) position.

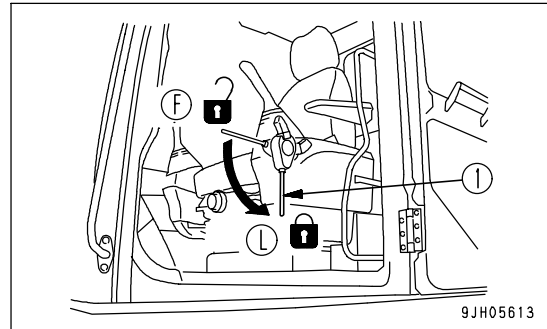


2. Operate lock switches (2) and (3) inside the pump chamber to LOCK position (c).


REMARK

Turn the engine starting switch OFF before operating the lock switches. If the starting switch is ON and the lock switches are operated, error (E07) is displayed on the machine monitor inside the cab.


This is not a failure, but normal operations cannot be carried out when error (E07) is being displayed. If error (E07) is displayed, turn the starting switch to the OFF position, then turn it ON again. Error (E07) display will go out.

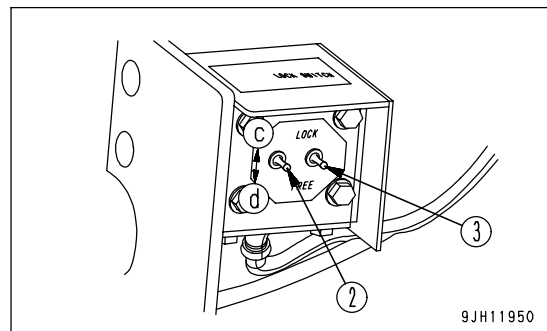

3. Remove grip (5), cover (6) and step (7).

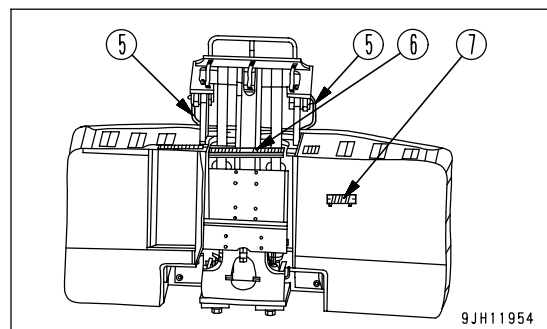


4. Remove grip (20), catcher (21) - only the one on the left side of the machine - and bolts (22) and (23).

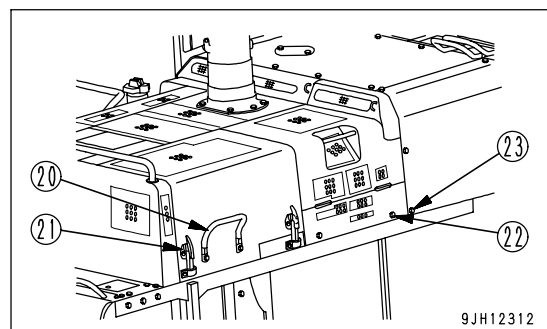


5. Switch remover control selector valve (9) to the counterweight REMOVAL / INSTALLATION position. The switching can be made in the following manner.

- 1) Turn the engine starting switch OFF
- 2) Remove bolt (10).
- 3) Turn remover control selector valve (9) clockwise with lever (11) by 90° until it hits the stopper.
 - Turn the position of an arrow stamped on the head of remover control selector valve (9) from view "Y" to view "Z".

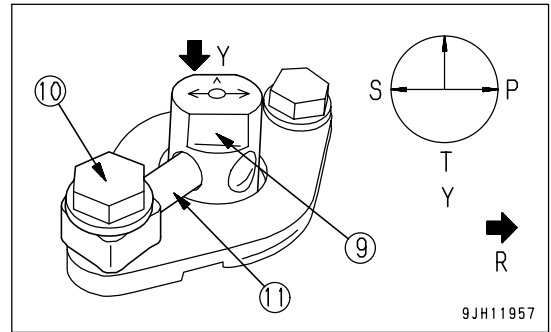

- P : Pump port
- R : Rear of machine
- S : Main valve discharge port
- T : Remover discharge port
- Y : Direction of arrows when not using remover
- Z : Direction of arrows when removing or installing counterweight

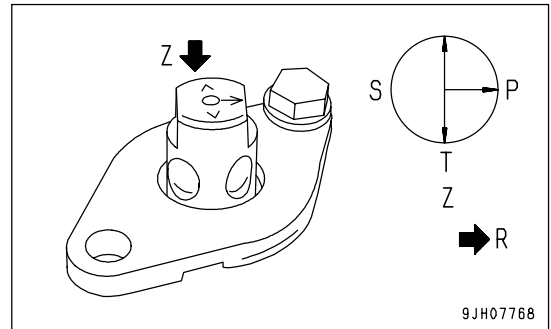


6. Turn lock switches (2) and (3) in the pump room to LOCK (c) position and start up the engine.


REMARK

On that occasion, if lock switches (2) and (3) are in FREE position (d), the engine does not start up.


7. After starting up the engine, release the warming-up mode and keep the engine running at a low speed (low idling).

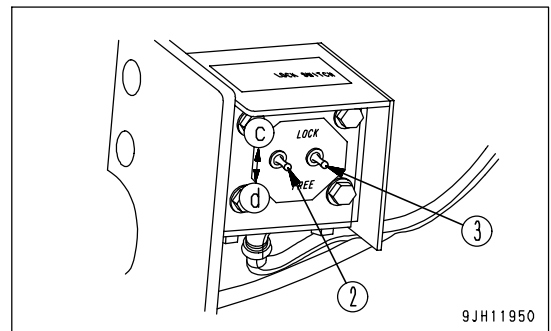

8. Operate counterweight removal / installation B control lever (12) slowly to the RAISE (f) position and extend B remover link cylinder (13) to the stroke end (max.). Then B remover link (14) begins to rise as it is stretched. In this process, raise B remover link (14) slowly by keeping B control lever (12) at its half stroke instead of at the full stroke to control the remover link rising speed.

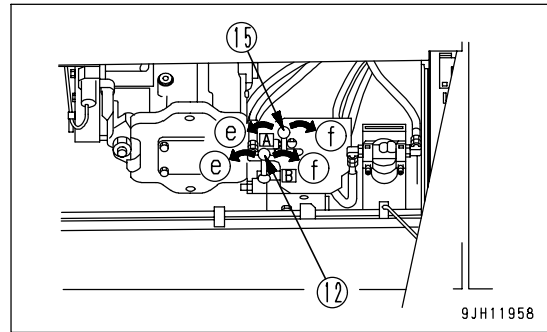

9. Operate counterweight removal / installation A control lever (15) slowly to the LOWER (f) position, allowing A remover link (16) to be stretched. In this process, lower A remover link (16) slowly by keeping A control lever (15) at its half stroke instead of at the full stroke to control the remover link lowering speed.

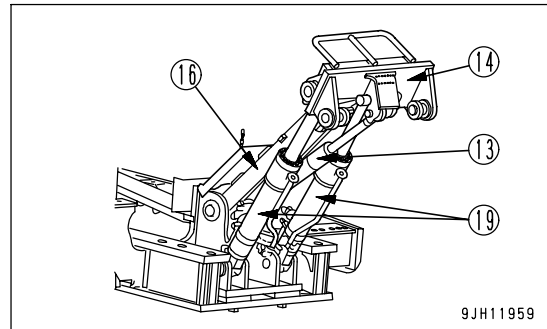

10. Position the machine and the counterweight to face each other squarely, and then stretch A remover link (16) until the pin hole of B remover link (14) and the pin hole of the counterweight are on the same level.


11. Operate the machine back and forth until the pin hole of B remover link (14) and the pin hole of the counterweight are aligned. This can be done through a fine control of B remover link (14).

- When doing this, be careful not to let the counterweight fall over. Do not allow any other person near the machine when carrying out the operation.

12. After both pins are aligned, insert 2 pins (18) and install 2 pin stopper bolts (17).

13. Operate counterweight removal / installation A control lever (15) slowly to the RAISE (e) position, allowing the counterweight to rise. At that time, keep B remover link cylinder (13) at the full stroke (max.), and raise the counterweight until the backside of A remover link (16) is upright.

14. Operate counterweight removal / installation B control lever (12) slowly to the LOWER (e) position, allowing the counterweight to settle in the seat. In this process, lower the counterweight slowly by keeping B control lever (12) at its half stroke instead of at the full stroke to control the lowering speed and make sure that the counterweight settles in the seat safely and neatly.


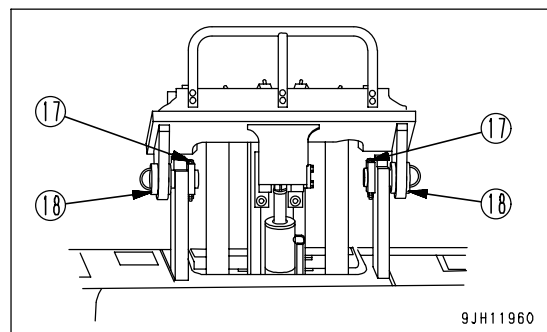


REMARK

In case the mounting holes of the counterweight and revolving frame are misaligned, try to align them properly by operating A remover link cylinder (19) and B remover link cylinder (13).


15. Set all the counterweight completely in the revolving frame, then install with the mounting bolts. The method for installing the counterweight is as follows.

- 1) Turn the engine starting switch OFF
- 2) Temporarily tighten the 6 counterweight mounting bolts (8) so that the gap (g) between the revolving frame and the counterweight mounting bolt washers is 0-5 mm.
- 3) Operate counterweight remover control levers (12) and (15) quickly to the full stroke in direction (e) several times until the counterweight is completely settled, then remove the remaining pressure in remover link cylinders (13) and (19).
- 4) Install 6 counterweight mounting bolts (8) fully.
 Width across flats of bolts: 65 mm (2.6 in)
 Tightening torque: 3,430-4,212Nm (350-430kgf·m , 2,532-3,110lbft)

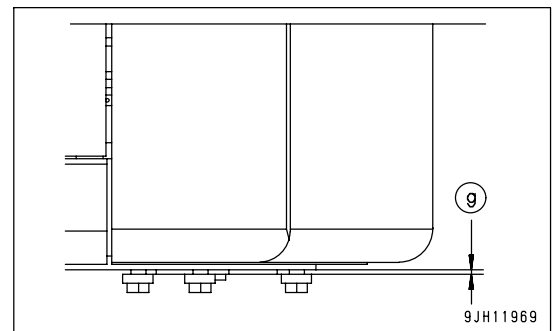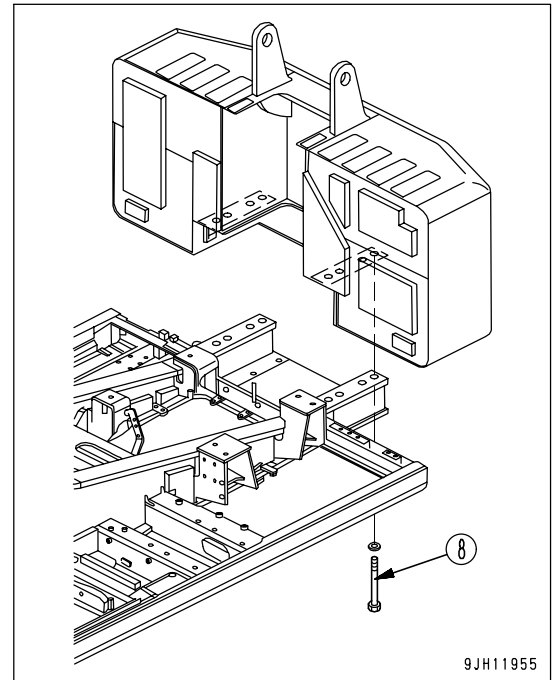

16. Turn the arrow stamped on the head of remover control selector valve (9) to the "Y" view position, and then secure it with bolt (10) and lever (11).

Tightening torque: 98-123Nm(10-12.5kgf·m, 72.3-90.4lbft)

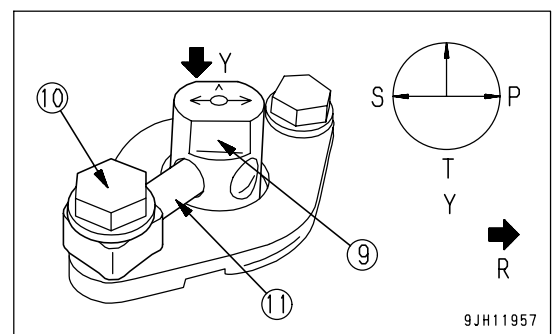


17. Operate lock switches (2) and (3) inside the pump chamber to FREE position (d).

REMARK


Turn the engine starting switch OFF before operating the lock switches. If the starting switch is ON and the lock switches are operated, error (E07) is displayed on the machine monitor inside the cab.

This is not a failure, but normal operations cannot be carried out when error (E07) is being displayed. If error (E07) is displayed, turn the starting switch to the OFF position, then turn it ON again. Error (E07) display will go out.

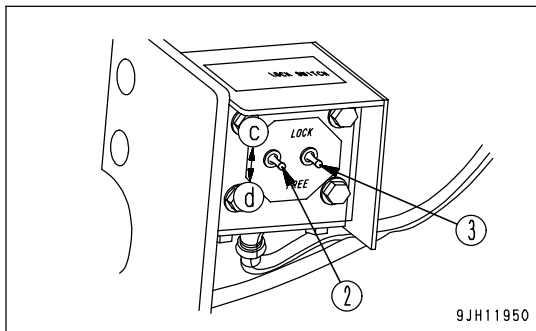


18. Install grip (5), cover (6) and step (7).

- Tighten each mounting bolt to the torque specified in the table below.

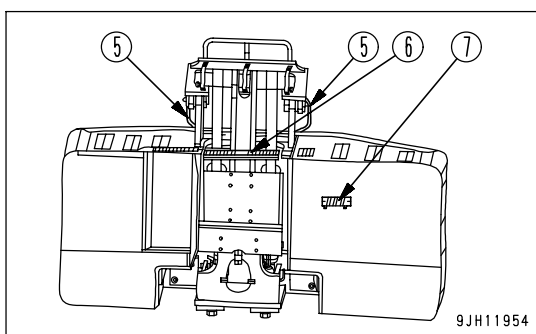

19. Install grip (20), catcher (21) - only the one on the left side of the machine - and bolts (22) and (23).

- Tighten each mounting bolt to the torque specified in the table below.

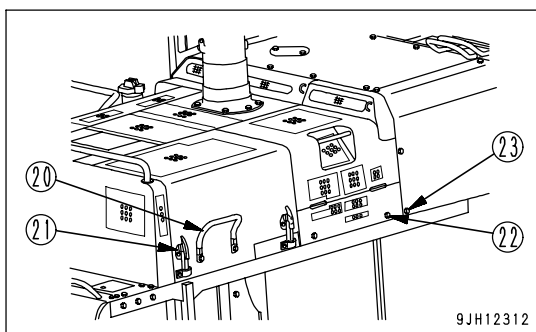

Item	Bolt size	Qty in use	Tightening torque					
			Target value			Service limit		
			N·m	kgf·m	lbft	N·m	kgf·m	lbft
Grip (5)	M12	4	113	11.5	83.2	98 - 123	10 - 12.5	72.3 - 90.4
Cover (6)		4						
Step (7)		4						
Grip (20)		2						
Bolt (22)		1						
Bolt (23)	1							
Catcher (21)	M8	2	31	3.2	23.1	27 - 34	2.8 - 3.5	20.3 - 25.3

HANDLING MACHINES EQUIPPED WITH KOMTRAX

- KOMTRAX is a machine management system that uses wireless communications.
- A contract with your Komatsu distributor is necessary before the KOMTRAX system can be used. Any customers desiring to use the KOMTRAX system should consult their Komatsu distributor.
- The KOMTRAX equipment is a wireless device using radio waves, so it is necessary to obtain authorization and conform to the laws of the country or territory where the machine equipped with KOMTRAX is being used. Always contact your Komatsu distributor before selling or exporting any machine equipped with KOMTRAX.
- When selling or exporting the machine or at other times when your Komatsu distributor considers it necessary, it may be necessary for your Komatsu distributor to remove the KOMTRAX equipment or to carry out action to stop communications.
- If you do not obey the above precautions, neither Komatsu nor your Komatsu distributor can take any responsibility for any problem that is caused or for any loss that results.

BASIC PRECAUTIONS



WARNING

- Never disassemble, repair, modify, or move the communications terminal, antenna, or cables. This may cause failure or fire on the KOMTRAX equipment or the machine itself. (Your Komatsu distributor will carry out removal and installation of KOMTRAX.)
- Do not allow cables or cords to become caught; do not damage or pull cables or cords by force. Short circuits or disconnected wires may cause failure or fire on the KOMTRAX equipment or the machine itself.
- For anyone wearing a pacemaker, make sure that the communications antenna is at least 22 cm (8.7 in) from the pacemaker. The radio waves may have an adverse effect on the operation of the pacemaker.

NOTICE

- Even when the key in the starting switch of the KOMTRAX system is at the OFF position, a small amount of electric power is consumed. When putting the machine into long-term storage, take the action given in "LONG TERM STORAGE (PAGE 3-152)".
- Please contact your Komatsu distributor before installing a top guard or other attachment that covers the cab roof.
- Be careful not to get water on the communications terminal or wiring.

REMARK

- The KOMTRAX system uses wireless communications, so it cannot be used inside tunnels, underground, inside buildings, or in mountain areas where radio waves cannot be received. Even when the machine is outside, it cannot be used in areas where the radio signal is weak or in areas outside the wireless communication service area.
- There is absolutely no need to inspect or operate the KOMTRAX communications terminal, but if any abnormality is found, please consult your Komatsu distributor.


LOADING SHOVEL

WARNING

When using a loading shovel specification machine, the method for operation is different in some way from the standard machine. This section gives the explanation for the parts that are different.

EXPLANATION OF COMPONENTS

SWITCHES

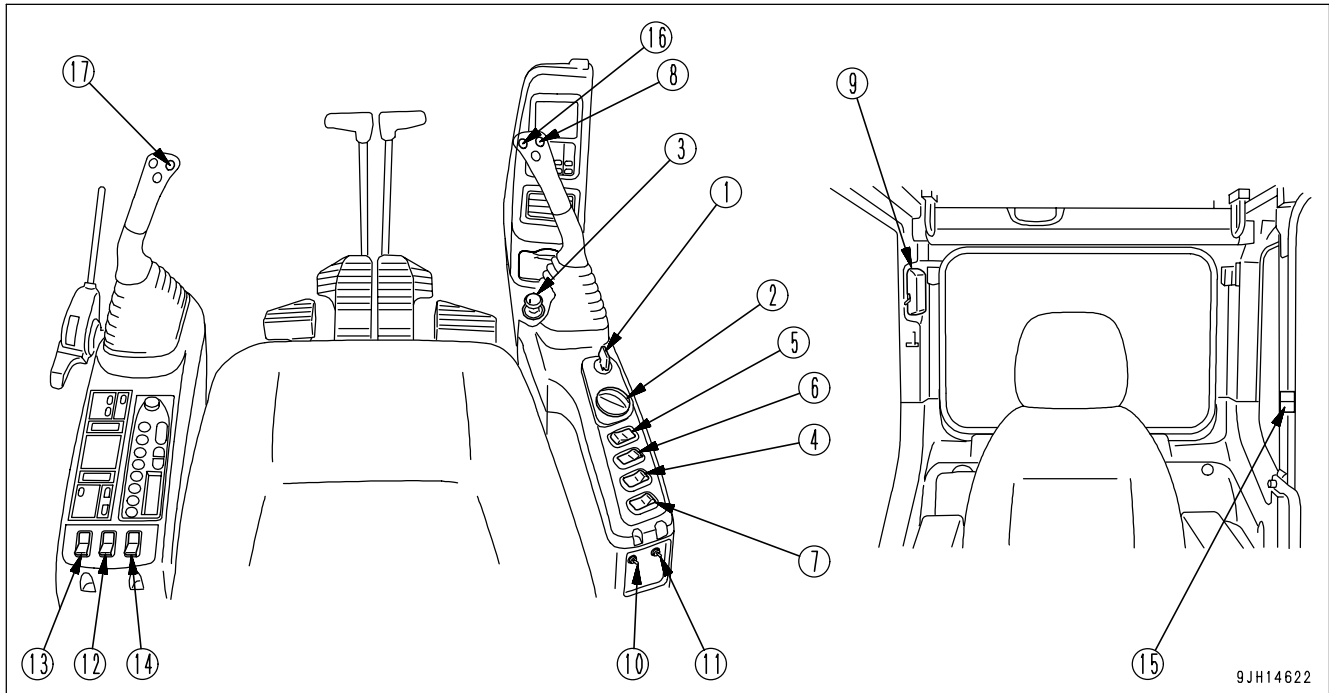

9JH14622

- | | |
|-----------------------------------|--|
| (1) Starting switch | (11) Swing parking brake release switch |
| (2) Fuel control dial | (12) Revolving warning lamp switch (if equipped) |
| (3) Cigarette lighter | (13) Large capacity airflow air conditioner blower switch (if equipped) |
| (4) Machine push-up switch | (14) Lower wiper switch ((Fixed front window cab specification)) (if equipped) |
| (5) Lamp switch | (15) Step light switch |
| (6) Swing lock switch | (16) Bottom dump switch (open) |
| (7) Boom shockless control switch | (17) Bottom dump switch (close) |
| (8) Horn switch | |
| (9) Room lamp switch | |
| (10) Emergency pump drive switch | |

For the loading specification machine, explanation is given only of the different switches.

(1) Starting switch

(2) Fuel control dial
(with Auto-deceleration System)

(3) Cigarette lighter

(4) Machine push-up switch


(5) Lamp switch

(6) Swing lock switch

(7) Boom shockless control switch

(8) Horn switch

When the switch (8) at the tip of the right work equipment control lever is pressed, the horn will sound.

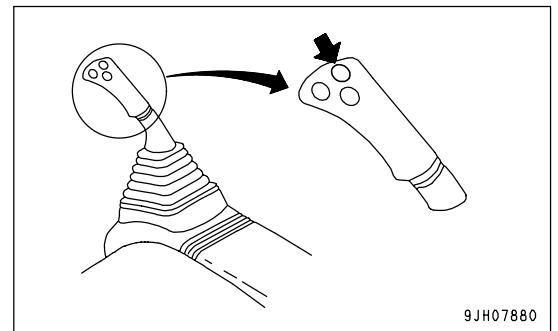

(9) Room lamp switch

(10) Emergency pump drive switch

(11) Swing parking brake release switch

(12) Revolving warning lamp switch (if equipped)

(13) Large capacity airflow air conditioner blower switch (if equipped)


(14) Lower wiper switch (Fixed front window cab specification) (if equipped)

(15) Step light switch


(16),(17) Bottom dump switch

Use these switches (16) and (17) to open and close the front bucket.

If the button (17) at the tip of the left work equipment control lever is depressed, the bucket will close.

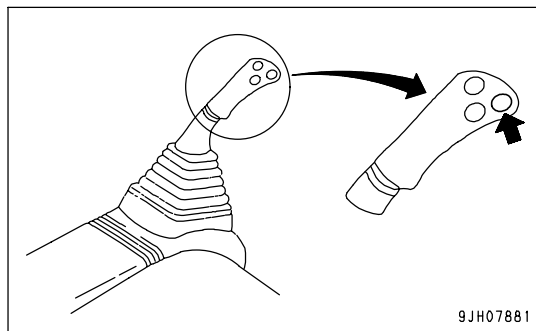

If the button (16) at the tip of the right work equipment control lever is depressed, the front bucket will open.

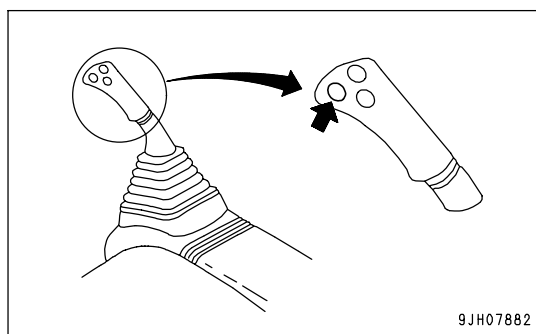

For explanation of switches (1) to (7) and (9) to (15), see "SWITCHES (PAGE 3-34)".

FUSE


NOTICE

Before replacing a fuse, be sure to turn off the starting switch.

The fuses protect the electrical equipment and wiring from burning out.


If the fuse becomes corroded, or white powder can be seen, or the fuse is loose in the fuse holder, replace the fuse.

Replace the fuse with another of the same capacity.

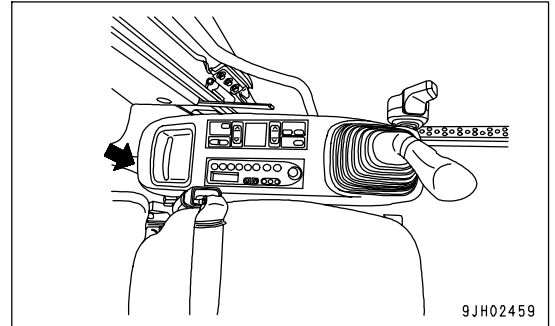

Fuse Capacities and Circuit Name

No.	Fuse Capacity	Circuit Name
(1)	10A	Redundancy, Swing holding brake solenoid valve
(2)	10A	Solenoid valve
(3)	10A	PPC lock solenoid, Starting motor cut-out relay
(4)	20A	Window washer, Cigarette lighter
(5)	10A	Horn, flashlight (OPT), Bottom dump solenoid valve (Close)
(6)	10A	Ribbon heater relay
(7)	10A	Revolving warning lamp (OPT)
(8)	10A	Spare fuse
(9)	10A	Radio, Bottom dump solenoid valve (Open)
(10)	20A	Monitors, Buzzer
(11)	25A	Air conditioner unit
(12)	20A	Spare fuse
(13)	20A	Spare fuse
(14)	10A	OPT power supply (1)
(15)	10A	OPT power supply (2), 12V power supply (OPT)
(16)	10A	Radio backup, Room lamp
(17)	10A	Step light (OPT)
(18)	10A	Spare fuse
(19)	10A	Spare fuse
(20)	5A	ACC (ENGINE CON)

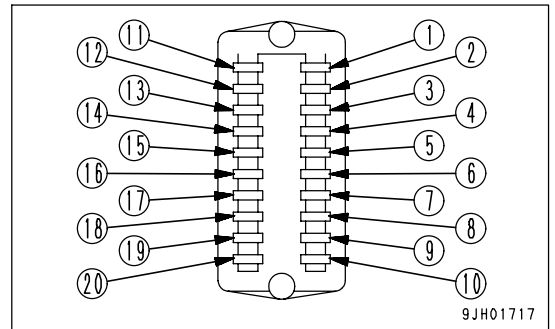

OPERATIONS

OPERATION OF WORK EQUIPMENT

WARNING

If the lever is operated when the engine speed has been lowered by the auto-deceleration function, the engine speed will suddenly rise, so operate the levers carefully.

The work equipment is operated with the left work equipment control lever and right work equipment control lever. The left work equipment control lever operates the arm, swing, and bottom dump (CLOSE); the right work equipment control lever operates the boom, bucket, and bottom dump (OPEN).

The relationship between the operation of the lever and the movement of the work equipment is as shown in the diagram on the right.

When the lever is released, it returns to the HOLD position and the work equipment is held in position.

- If the work equipment control levers are returned to the neutral position when the machine is stopped, even if the fuel control dial is set to FULL, the auto-deceleration mechanism will act to reduce the engine speed to a mid-range speed.

REMARK


If the key in the starting switch is turned ON within 15 seconds after stopping the engine, it is possible to lower the work equipment to the ground by operating the levers.

In addition, the levers can also be operated to release any remaining pressure inside the hydraulic cylinder circuit and to lower the boom after loading the machine on a trailer.

Arm operation

(A): Arm OUT


(B): Arm IN

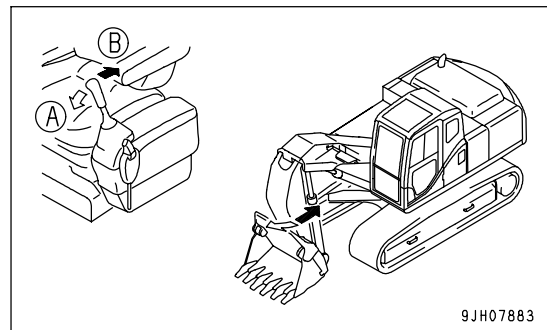

Swing operation


(A): Left swing

(B): Right swing

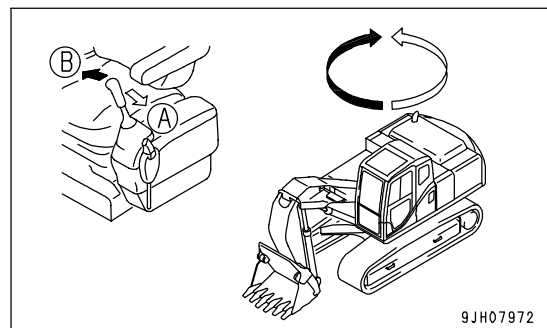


Boom operation

- (A): Boom RAISE
- (B): Boom LOWER

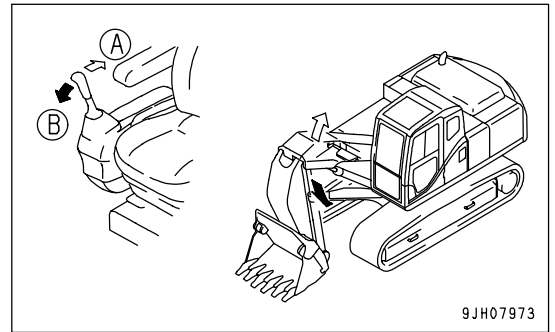


Bucket operation

- (A): Bucket DUMP
- (B): Bucket CURL

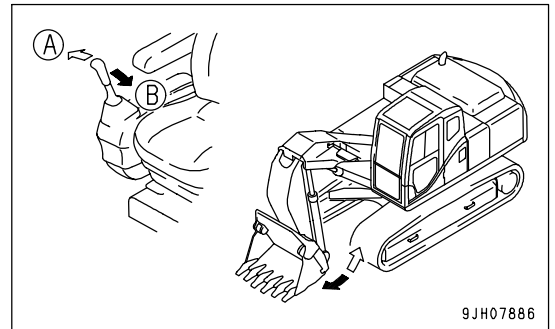

Bottom dump operation

- (A): OPEN
- (B): CLOSE

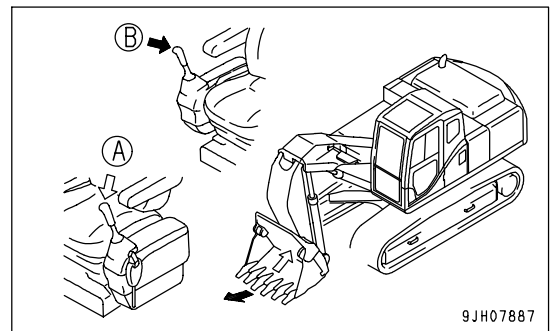

PRECAUTIONS DURING OPERATION




WARNING

- If it is necessary to operate the work equipment control lever when the machine is traveling, stop the machine, then operate the control lever.
- If any lever is operated when the auto-deceleration is being actuated, the engine speed will suddenly increase, so be careful when operating.


It is Prohibited to Use the Swing Force for Operations.

Do not use the swing force to compact soil or break objects. This is not only dangerous, but will also drastically reduce the life of the machine.

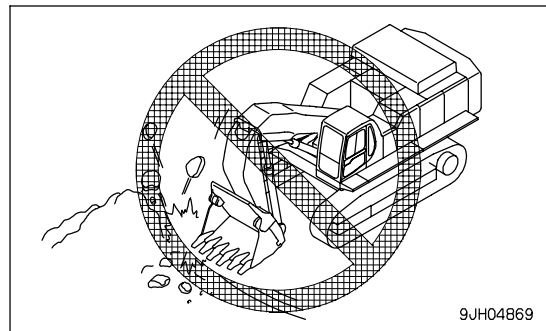


It is Prohibited to Use the Travel Force for Operations.

Do not dig the bucket into the ground and use the travel force to carry out excavation. This will damage the machine or work equipment.

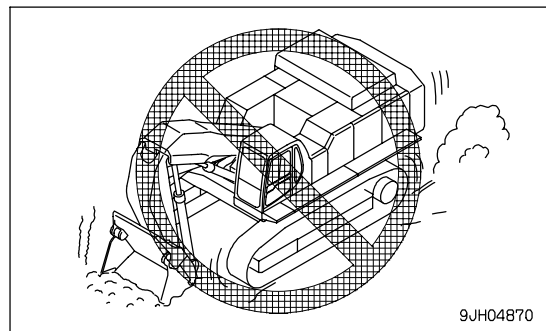


Do not Carry Out Operations with the Hydraulic Cylinder at the End of its Stroke.

If the work equipment is used with the cylinder rod operated to its stroke end, and given impact by some external force, the hydraulic cylinders will be damaged, causing personal injury. Avoid operations with the hydraulic cylinder fully retracted or fully extended.

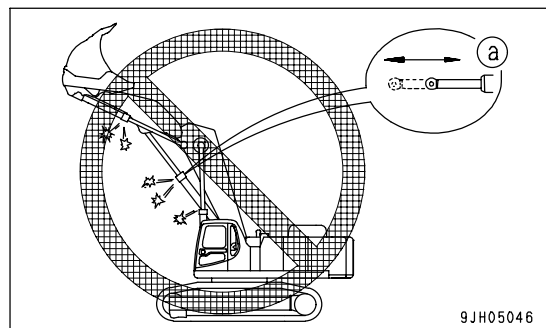


It is Prohibited to Use the Dropping Force of the Bucket for Operations.


Do not use the dropping force of the machine for digging, or use the dropping force of the bucket as a pickaxe, breaker, or pile driver. This will drastically reduce the life of the machine.

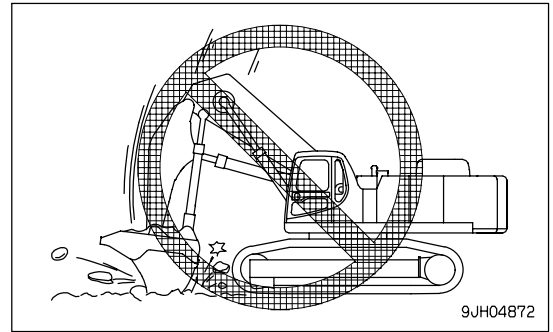**Be Careful of Stability when Swinging.**


During swing operations, the stability of the machine differs to the front, rear, left and right, and there is danger that it may tip over.

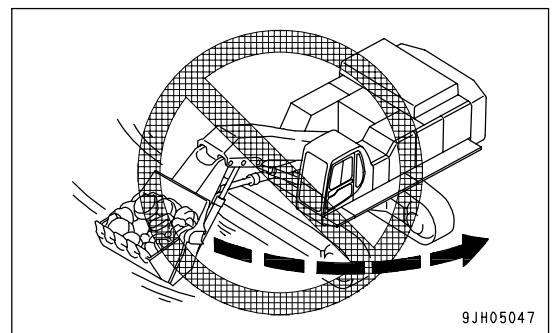**It is Prohibited to Use the Tilt Operation for Digging.**

Do not set the teeth vertically when the bucket is pulled in, and then use the tilt operation to carry out digging.

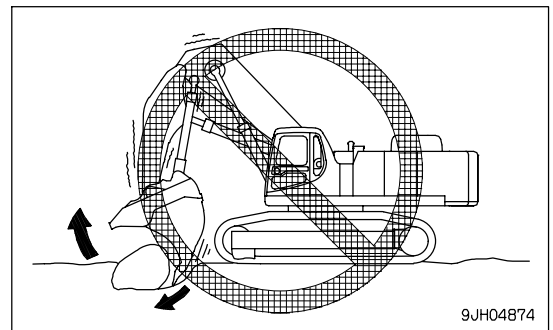
**It is Prohibited to Grip Rocks.**

Do not use the bottom dump bucket to grip rocks.

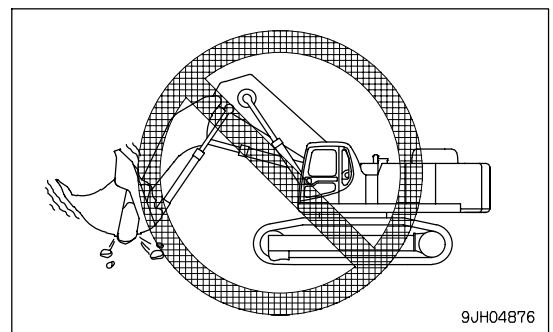


It is Prohibited to Use the Bucket for Leaving Operations.

Using the rear bucket to carry out leveling operations will bring an excessive force to bear on the work equipment, so do not use the rear bucket in this way.

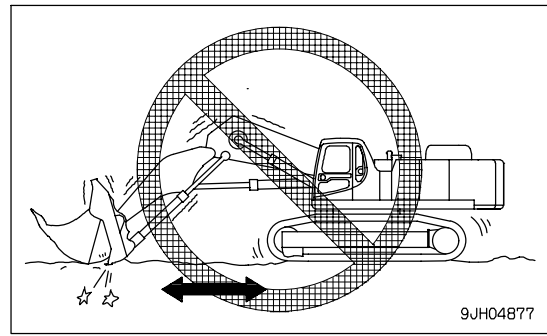


Be Careful not to Spill the Load.

When the bucket is fully loaded, do not raise the boom fully. If the boom is raised fully, the load will spill to the rear and cause danger to the operator.

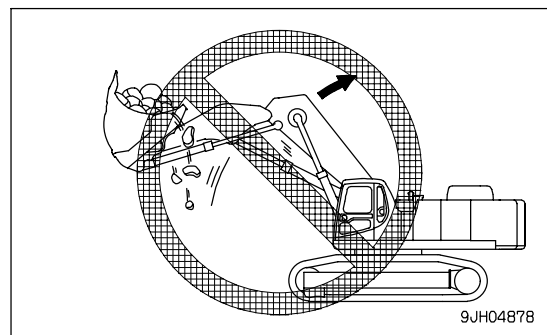


Be Careful not to Hit the Undercarriage.

If the upper structure is set diagonally to the track frame when carrying out digging operations, the work equipment will hit the track links.

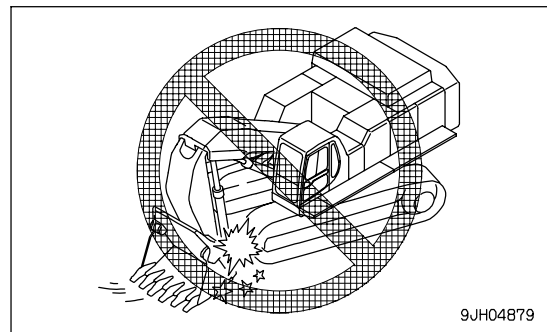

Scraping-down Operations are Prohibited.


Never use the front bucket of a bottom-dump bucket to scrap down rocks or soil.

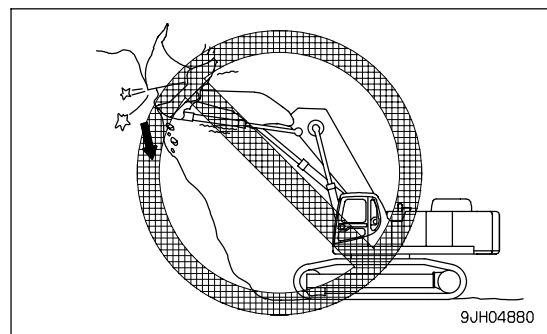

PRECAUTIONS FOR JOBSITE

PRECAUTIONS WHEN TRAVELING



If the forward view is poor when traveling on level ground, raise the work equipment to ensure better visibility.

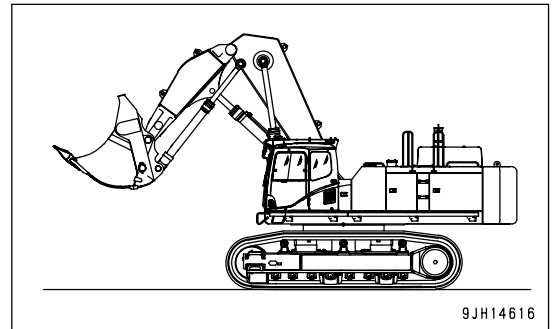


TRAVELING ON SLOPES

To prevent the machine from tipping over or slipping to the side, always do as follows.

- Keep the work equipment approx. 20 to 30 cm (8 to 12 in) above the ground. In case of emergency, lower the work equipment to the ground immediately to help stop the machine.

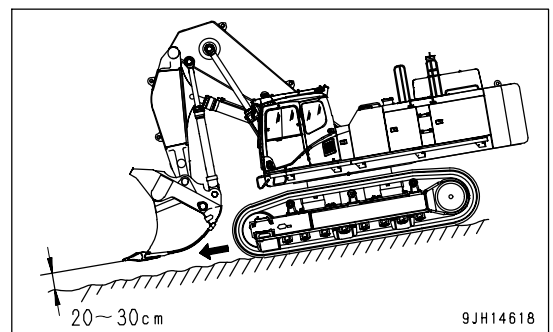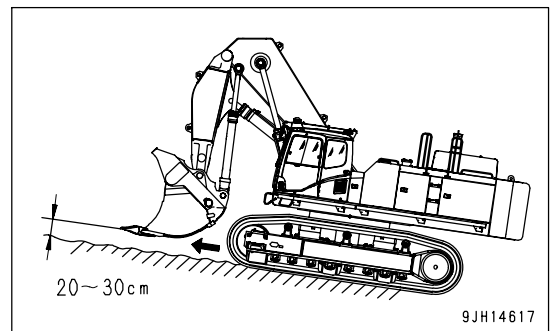


- When traveling up a steep slope, extend the work equipment to the front to improve the balance, keep the work equipment approximately 20 to 30 cm (8 to 12 in) above the ground, and travel at low speed.

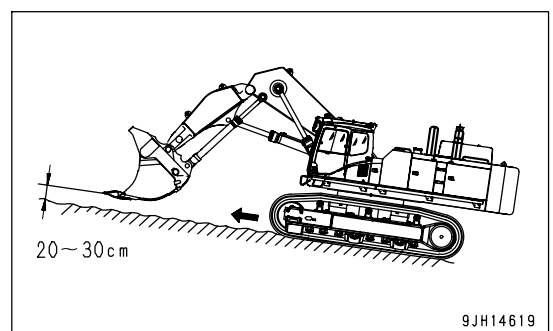


PARKING MACHINE

- Park the machine on firm, level ground.
- Select a place where there is no hazard of landslides, falling rocks, or flooding.
- Lower the work equipment completely to the ground.

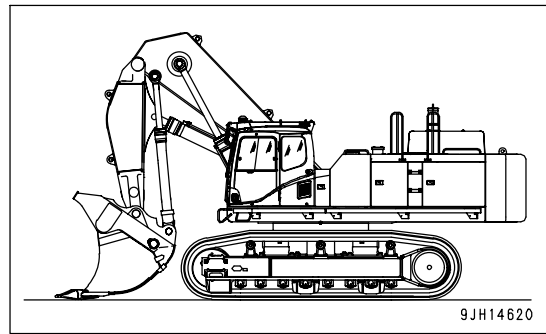

- If it is necessary to park the machine on a slope, always do as follows.
 - Set the work equipment on the downhill side and dig it into the ground.
 - In addition, put blocks under the tracks to prevent the machine from moving.

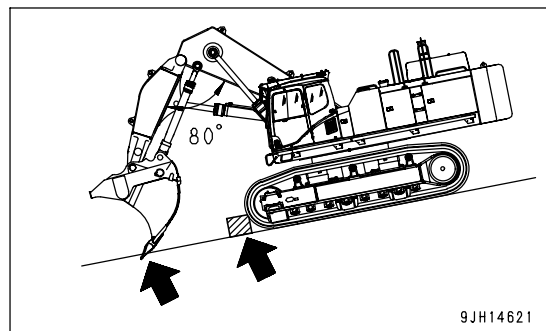


EXCAVATOR WORK


In addition to the following, it is possible to further increase the range of applications by using various attachments.

Shovel Work

This is suitable for digging a place which is higher than the machine's position. It is most efficient if the arm's digging angle is from vertical to 60° forward, and the arm cylinder is used effectively.

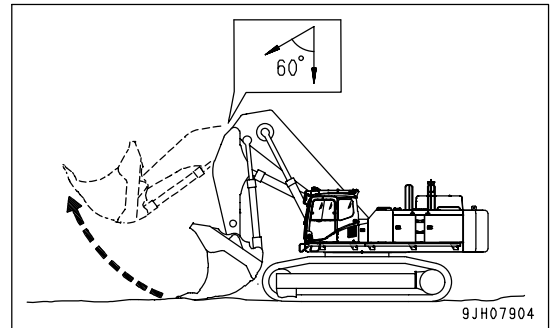


A simple method of seeing the angle of the bucket teeth to the ground surface is to use the teeth and the part of the rear bucket shown in the diagram on the right. Check that the part of the rear bucket is more or less parallel to the teeth.

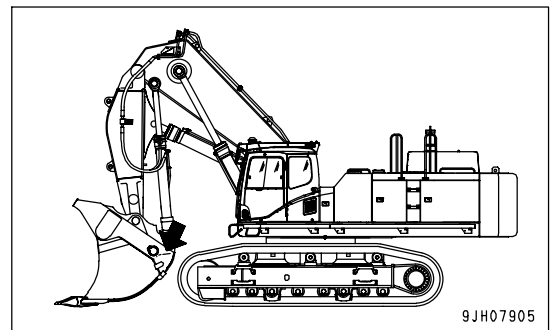

Loading Work

In places where the swing angle is small, work efficiency can be enhanced by locating the dump truck in a place easily visible to the operator.

Loading is easier if the excavator is placed beside the dump truck for loading. This way means more earth can be loaded more effectively than by a loader working behind the truck.

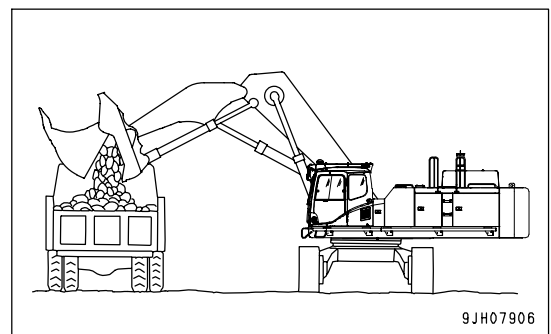

TRANSPORTATION


The machine can be disassembled into the machinery, operator's cab, platform, attachment, and counterweight, and transported in pieces. Please contact your Komatsu distributor when transporting the machine.

MACHINE CONFIGURATION FOR TRANSPORT

PC800-8 (LOADING SHOVEL)


Undercarriage

Item	Unit	PC800-8	
		610 mm SHOE	710 mm SHOE
Q'ty	-	2	
A	mm (ft in)	1,445 (4'9")	
B	mm (ft in)	5,810 (19'1")	
C	mm (ft in)	980 (3'3")	
Weight	kg (lb)	20,900 (46,085)	21,600 (47,628)
		[10,450 X 2 (23,042 X 2)]	[10,800 X 2 (23,814 X 2)]

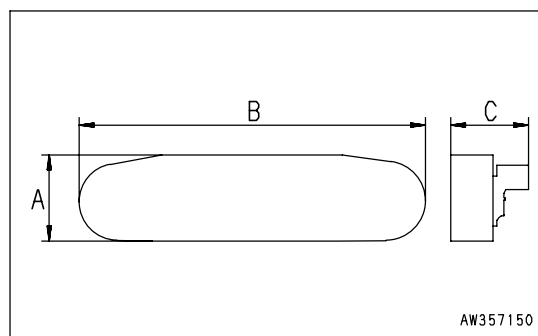

Work Equipment


Item	Unit	PC800-8
Q'ty	-	1
A	mm (ft in)	9,500 (31'2")
B	mm (ft in)	2,855 (9'4")
Overall width	mm (ft in)	2,320 (7'7") / 2,670 (8'9") (5.1 m ³) (6.7 cu.yd)
Weight	kg (lb)	19,800 (43,659) / 21,500 (47,408) (5.1 m ³) (6.7 cu.yd)

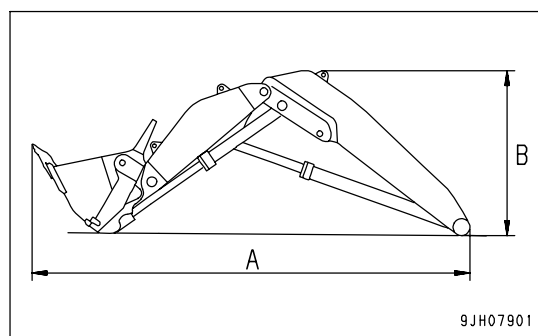

Upper Structure

Secure the upper structure to the platform with a chain and block.

Item	Unit	PC800-8
Q'ty	-	1
A1	mm (ft in)	3,005 (9'10")
A2	mm (ft in)	-
B	mm (ft in)	6,040 (19'10")
Overall width	mm (ft in)	3,295 (10'10")
Weight	kg (lb)	25,700 (56,669)

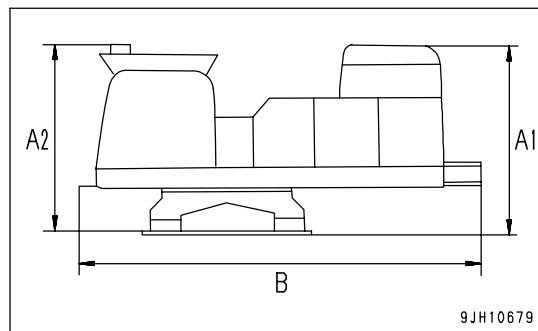

WEAR PARTS

Replace wear parts such as the filter element or air cleaner element at the time of periodic maintenance or before they reach the wear limit. The wear parts should be replaced correctly in order to ensure more economic use of the machine. When replacing parts, always use Komatsu genuine parts.

As a result of our continuous efforts to improve product quality, the part number may change, so inform your Komatsu distributor of the machine serial number and check for the latest part number when ordering parts.

WEAR PARTS LIST

The parts in parentheses are to be replaced at the same time.

Item	Part No.	Part Name	Q'ty	Change interval
Bucket	21N-70-37721	KMAX type Tooth	6	-
	21N-70-37731	(Pin)	(6)	

For details about the item except the bucket, see "WEAR PARTS LIST (PAGE 4-8)" in the MAINTENANCE section of standard machine.

MAINTENANCE



CHECK BEFORE STARTING

Check Oil Level in Hydraulic Tank, Add Oil

 **WARNING**

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Set the work equipment in the posture shown in the diagram on the right, then check the oil level and add oil if necessary.
2. If the work equipment is not in the condition shown in the diagram on the right, start the engine, run the engine at low speed, retract the arm and bucket cylinder rods fully, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.
3. Within 15 seconds after stopping the engine, move each control lever (for work equipment and travel) to the full stroke in all directions to release the internal pressure.
4. Open cover (1) on the left side of the machine and check sight gauge (G). The oil level should be between the H and L marks.
5. If level is below the L mark, add oil through filler (F) at top of the hydraulic tank.

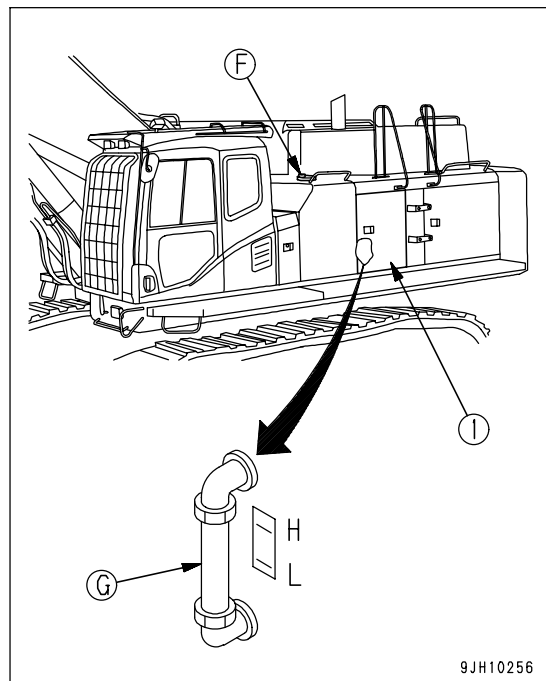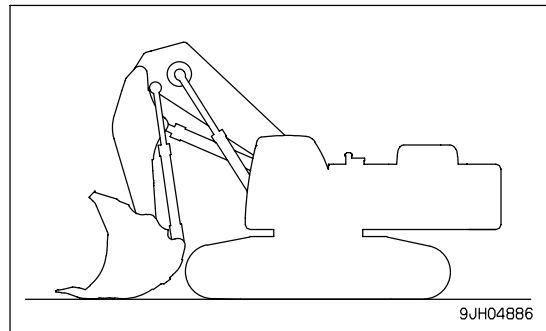

REMARK

The oil level will vary depending upon the oil temperature.


Accordingly, use the following as a guide:

- Before starting operation: Between H and L levels
(Oil temperature 10 to 30°C (50 to 86°F))
- Normal operation: Around H level
(Oil temperature 50 to 80°C (122 to 176°F))

NOTICE

Do not fill with hydraulic oil exceeding the "H" level, otherwise there will be damage on the hydraulic system, or oil will spurt out.


When having filled with hydraulic oil above "H" level by mistake, swing the upper structure so that drain plug (P) in the lower part of the suction tube comes in between the right and left track shoes, stop the engine and drain excess oil from drain plug (P) after making sure that oil has cooled down enough.

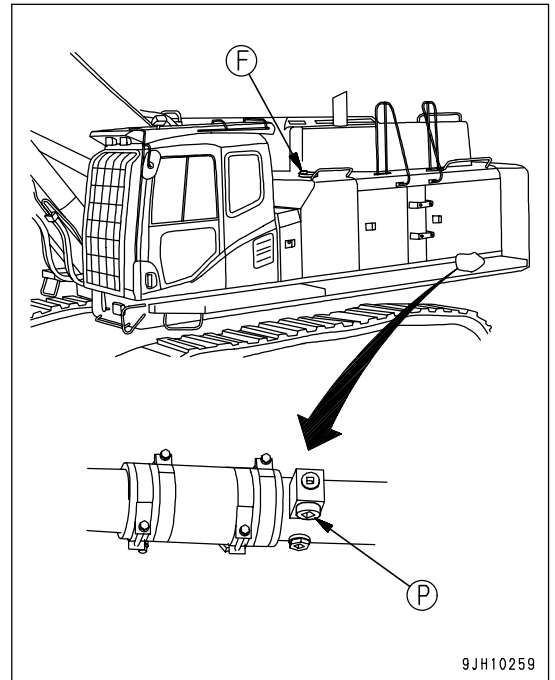

EVERY 10 HOURS MAINTENANCE

LUBRICATING

1. Set the work equipment in the greasing posture below, then lower the work equipment to the ground and stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

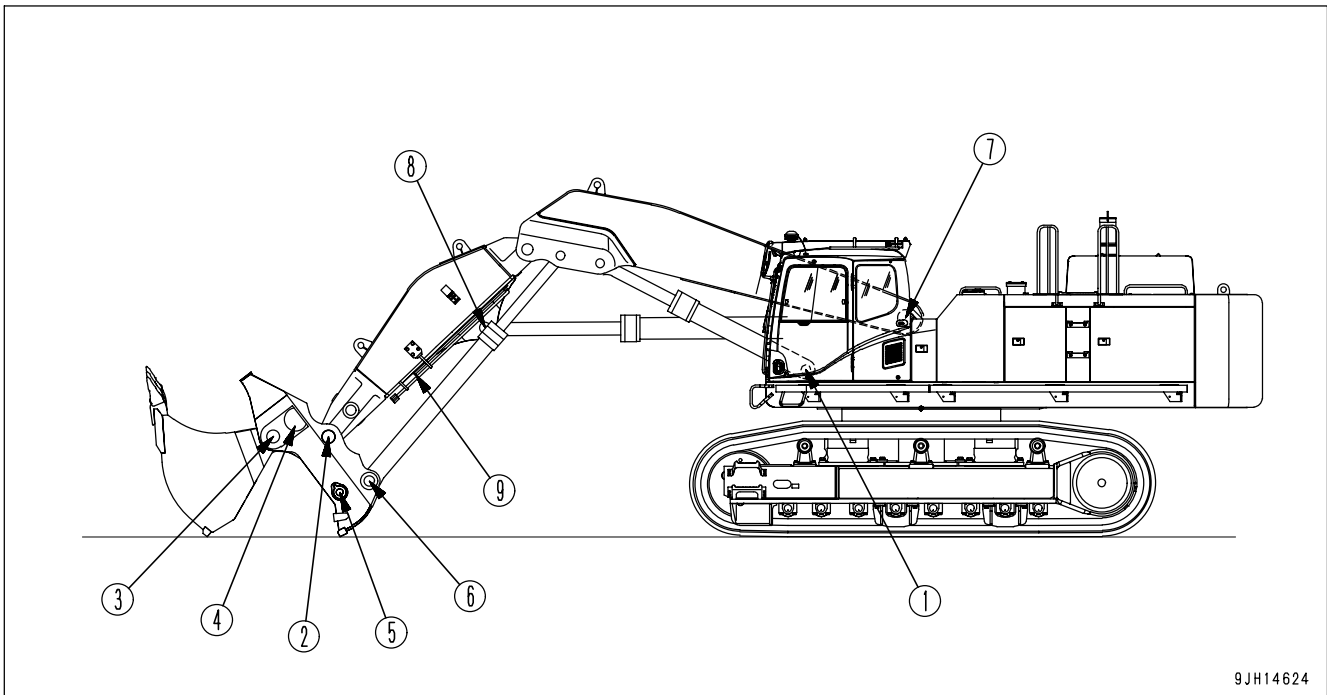

9JH14624

- (1) Boom cylinder foot pin (2 places)
- (2) Arm - Bucket coupling pin (2 place)
- (3) Bucket hinge pin (2 places)
- (4) Bottom dump cylinder rod end pin (2 places)
- (5) Bottom dump cylinder foot pin (2 places)
- (6) Bucket cylinder foot pin (2 places)
- (7) Boom centralized lubricating block (7 places)
 - Boom foot pin
 - Arm cylinder foot pin
 - Boom cylinder rod end pin
 - Bucket cylinder rod end pin
 - Boom - Arm coupling pin (Boom side)
- (8) Arm cylinder rod end pin (1 place)
- (9) Boom - Arm coupling pin (2 places)

EVERY 5000 HOURS MAINTENANCE

Maintenance for every 10 hours service should be carried out at the same time.



CHANGE OIL IN HYDRAULIC TANK, CLEAN STRAINER




WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.


- Refill capacity: 470 liters (124.2 US gal)
- Prepare a handle (for the socket wrench).
- 1. Swing the upper structure so that hydraulic tank drain plug (P3) and drain plug (P1) at the bottom of the pump suction tube are in the middle between the left and right tracks.
- 2. Retract the arm cylinder, extend the bucket cylinder, lower the boom, set the bottom of the bucket in contact with the ground.
- 3. Set the lock lever to the LOCK position and stop the engine.

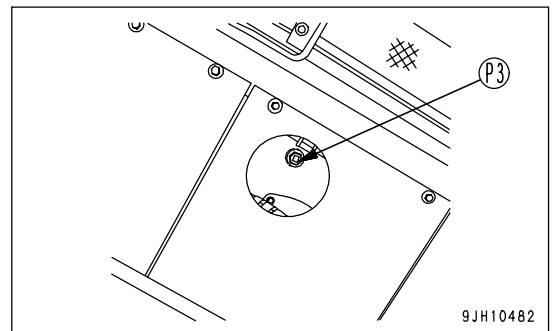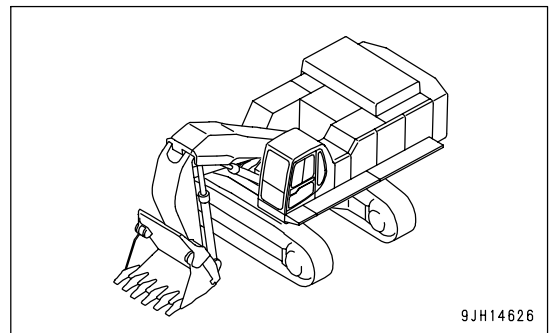

4. Remove the cap from oil filler (F) on top of the hydraulic tank.
5. Place a container to receive drained oil under the drain plug located in the underpart of the machine. Remove drain plug (P1) on the suction tube and then loosen (P2) to drain oil. After draining oil from drain plug (P1), remove drain plug (3) under the hydraulic tank and drain plug (P4) on the suction tube to drain remaining oil.
6. Check the O-rings fitted to drain plugs (P3) and (P4) for any damage. If any, replace the defective O-ring with a new one. After draining oil, tighten drain plugs (P1), (P2), (P3) and (P4).
 - Tightening torque
 - (P1) and (P2): 152 ± 24.5 Nm (15.5 ± 2.5 kgm, 112.1 ± 18.1 lbft)
 - (P3) and (P4): 68.6 ± 9.8 Nm (7 ± 1 kgm, 50.6 ± 7.2 lbft)
 - When removing drain plug (P3), (P4), be careful not to get oil on yourself.
7. Add the specified amount of new and clean oil through oil filler port (F). Check that the oil level is between H and L on the sight gauge.

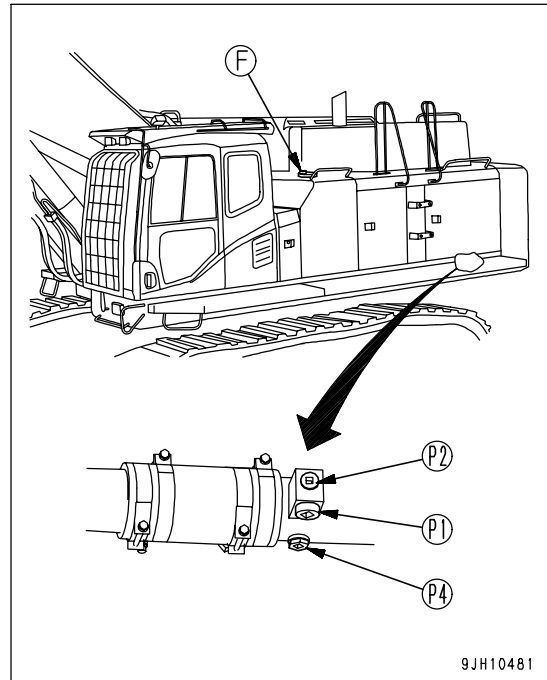

9JH10481

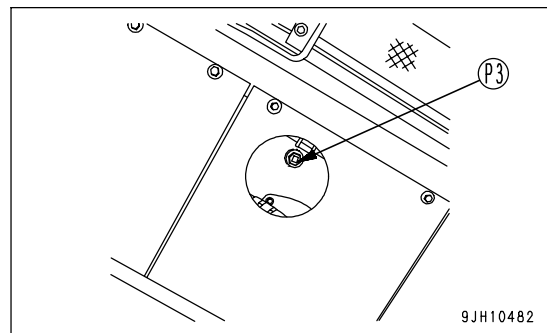

9JH10482


For details of oil level check, see "Check Oil Level in Hydraulic Tank, Add Oil (PAGE 3-85)".

8. Bleed the air from the circuit after cleaning or replacing the filter element or strainer, or after changing the oil. For details of the method of bleeding the air, see "BLEEDING AIR FROM HYDRAULIC SYSTEM (PAGE 4-38)".

SPECIFICATION

PC800-8 (LOADING SHOVEL)

Item	Unit	PC800-8 LOADING SHOVEL	
		610 mm SHOE	710 mm SHOE
Operating weight (including 1 operator)	kg (lb)	77,000 (169,785)	77,800 (171,549)
Bucket capacity	m ³ (cu.yd)	4.5 (5.9)	
Name of engine	-	Komatsu SAA6D140E-5 diesel engine	
Engine horsepower	kW (HP)/rpm	363 (486)/1,800	
A Overall length	mm (ft in)	10,075 (33'1")	
B Overall height	mm (ft in)	5,790 (18'12")	
C Overall width	mm (ft in)	4,285 (14'1")	4,335 (14'3")
D Track width	mm (ft in)	610 (2'0")	710 (2'4")
E Height of cab	mm (ft in)	3,560 (11'8")	
F Tail swing radius	mm (ft in)	4,400 (14'5")	
G Length of track	mm (ft in)	5,810 (19'1")	
H Tumbler center distance	mm (ft in)	4,500 (14'9")	
I Exterior part height	mm (ft in)	4,000 (13'1")	
Min. ground distance	mm (ft in)	840 (2'9")	
Travel speed (Low/Hi)	km/h (MPH)	2.8/4.2 (1.7/2.6)	
Swing speed	rpm	6.8	

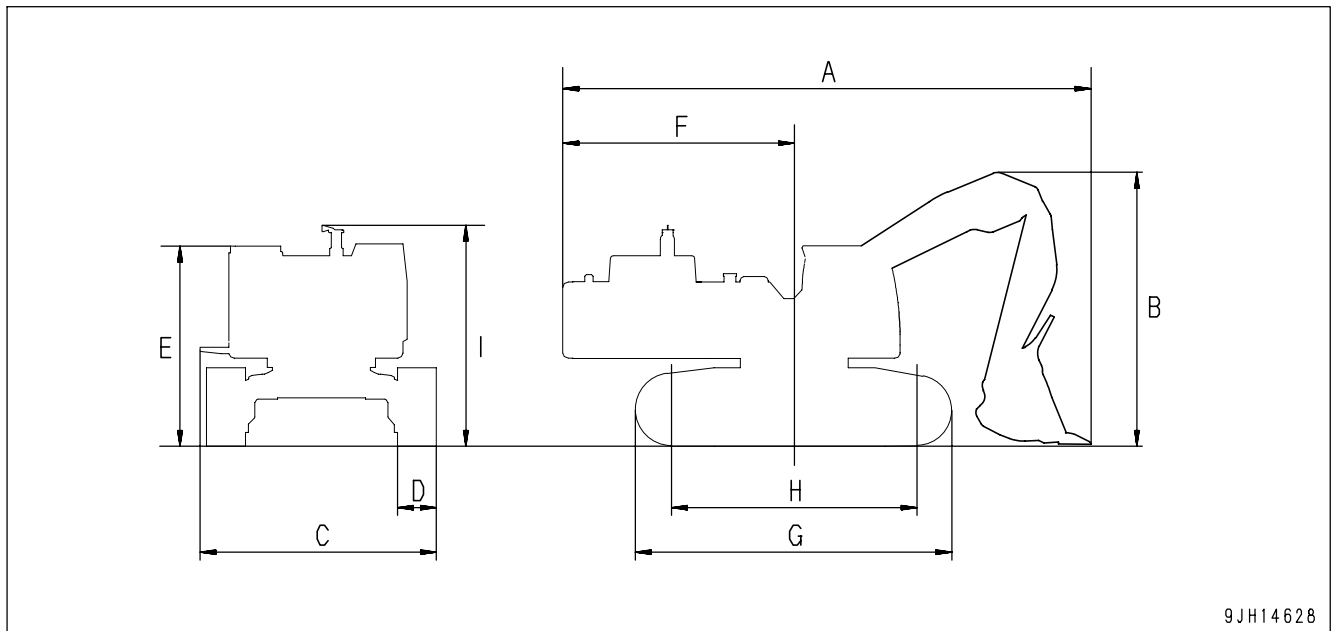

9JH14628

COMBINATION OF WORK EQUIPMENT



WARNING

Depending on the type or combination of work equipment, there is danger that the work equipment may hit the cab or machine body.

When using unfamiliar work equipment for the first time, check before starting if there is any danger of interference, and operate with caution.

COMBINATION OF WORK EQUIPMENT

Select the combination of boom, arm, and bucket from the combinations shown in the table below.


- For the dimensions of A to F, see the specifications shown in the working range diagram

Work equipment	Boom mm (ft in)		4,600 (15' 1")	
	Arm mm (ft in)		3,400 (11' 2")	
	Bucket capacity m ³ (cu.yd)		4.5 (5.9)	5.1 (6.7)
	Bucket width mm (ft in)		2,320 (7' 7")	2,670 (8' 9")
	Loosen specific gravity of soil to be handled	1.8	○	×
		1.6	○	○

Working Range Diagram

PC800-8 (LOADING SHOVEL)

	Working ranges mm (ft in)	PC800-8 LOADING SHOVEL
A	Max. digging reach	10,370 (34' 0")
B	Max. digging depth	9,990 (32' 9")
C	Max. digging height	10,800 (35' 5")
D	Max. vertical wall depth	3,605 (11' 10")
E	Max. dumping height	5,730 (18' 10")
F	Max. reach at ground level	6,350 (20' 10")

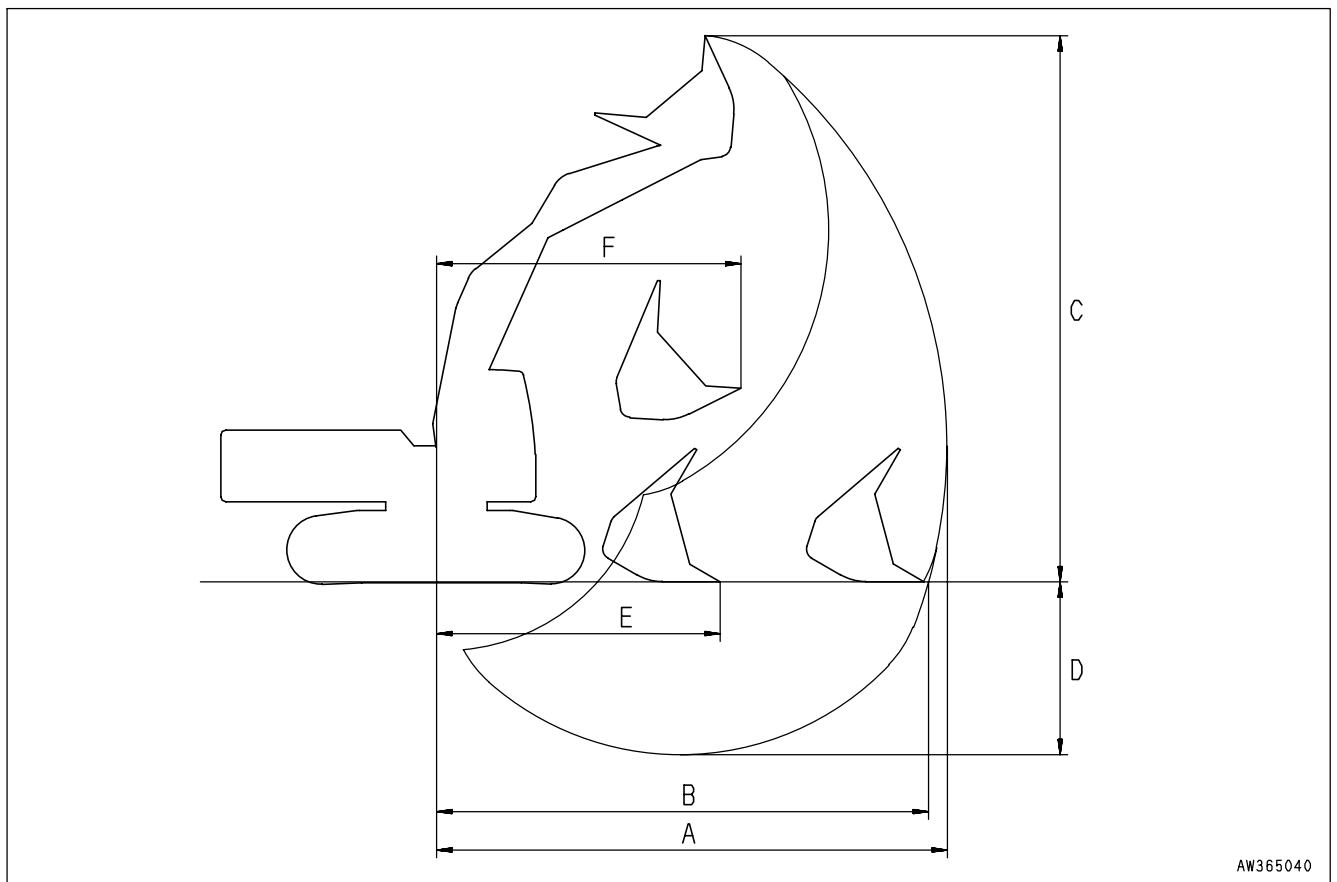

AW365040

INDEX

<A>					
AFTER STARTING ENGINE	-----	3-101			
AIR CONDITIONER CONTROLS	-----	3- 54			
ASHTRAY	-----	3- 52			
ATTACHMENT GUIDE	-----	6- 3			
COMBINATIONS OF WORK					
EQUIPMENT	-----	6- 4			
AUXILIARY ELECTRIC POWER	-----	3- 72			
					
BEFORE READING THIS MANUAL	-----	1- 2			
BEFORE STARTING ENGINE	-----	3- 79			
BUCKET REPLACEMENT	-----	3-132			
<C>					
CAP WITH LOCK	-----	3- 50			
CIRCUIT BREAKER	-----	3- 74			
COLD WEATHER OPERATION	-----	3-148			
AFTER COLD WEATHER SEASON	-----	3-151			
AFTER DAILY WORK COMPLETION	-----	3-151			
COLD WEATHER OPERATION					
INFORMATION	-----	3-148			
COMBINATION OF WORK EQUIPMENT	--	7- 22			
COMBINATION OF WORK					
EQUIPMENT	-----	7- 22			
CONTROL LEVERS AND PEDALS	-----	3- 41			
CONTROLLER	-----	3- 75			
CONTROLS AND GAUGES	-----	3- 3			
<D>					
DETAILED CONTROLS AND GAUGES	----	3- 5			
DIRECTIONS OF MACHINE	-----	1- 4			
DOOR LOCK	-----	3- 49			
<E>					
ELECTRIC SYSTEM MAINTENANCE	-----	4- 7			
EMERGENCY EXIT FROM					
OPERATOR'S CAB	-----	3- 49			
EPA REGULATIONS, ENGINE NUMBER					
PLATE	-----	1- 6			
ESCAPE FROM MUD	-----	3-130			
EXCAVATOR WORK	-----	7- 13			
EXPLANATION OF COMPONENTS	-----	7- 2			
<F>					
FIRE EXTINGUISHER	-----	3- 53			
FUSE	-----	3- 73			
FUSE	-----	7- 5			
<G>					
GENERAL OPERATION INFORMATION	----	3-126			
GENERAL PRECAUTIONS COMMON					
TO OPERATION AND MAINTENANCE	----	2- 13			
DO NOT GET CAUGHT IN					
WORK EQUIPMENT	-----	2- 18			
FIRE PREVENTION	-----	2- 15			
PRECAUTIONS BEFORE STARTING					
OPERATION	-----	2- 13			
PRECAUTIONS RELATED TO					
ATTACHMENTS AND OPTIONS	-----	2- 19			
PRECAUTIONS RELATED TO					
CAB GLASS	-----	2- 19			
PRECAUTIONS RELATED TO					
PROTECTIVE STRUCTURES	-----	2- 18			
PRECAUTIONS WHEN GETTING					
ON OR OFF MACHINE	-----	2- 16			
PRECAUTIONS WHEN RUNNING					
ENGINE INSIDE BUILDING	-----	2- 19			
PREPARATIONS FOR SAFE					
OPERATION	-----	2- 13			
PROTECTION AGAINST FALLING,					
FLYING, INTRUDING OBJECTS	-----	2- 18			
UNAUTHORIZED MODIFICATION	-----	2- 19			
GENERAL PRECAUTIONS FOR					
SAFETY	-----	6- 2			
PRECAUTIONS WHEN REMOVING					
OR INSTALLING	-----	6- 2			
PRECAUTIONS WHEN SELECTING	----	6- 2			
PRECAUTIONS WHEN USING	-----	6- 2			
READ THE INSTRUCTION MANUAL					
THOROUGHLY	-----	6- 2			
GREASE PUMP	-----	3- 76			
<H>					
HANDLING MACHINES EQUIPPED					
WITH KOMTRAX	-----	6- 19			
BASIC PRECAUTIONS	-----	6- 19			
HANDLING OIL, FUEL, COOLANT, AND					
PERFORMING OIL CLINIC	-----	4- 4			
HOT AND COOL BOX	-----	3- 52			
<I>					
INTRODUCTION	-----	1- 4			

<L>		MONITORING SYSTEM -----	3- 5
LIFTING MACHINE -----	3-138		
LOCKING -----	3-136	<O>	
LONG TERM STORAGE -----	3-152	OPERATION OF WORK EQUIPMENT -----	7- 6
AFTER STORAGE -----	3-153	OPERATIONS -----	7- 6
BEFORE STORAGE -----	3-152	OUTLINE OF SERVICE -----	4- 4
DURING STORAGE -----	3-152		
STARTING MACHINE AFTER		<P>	
LONG-TERM STORAGE -----	3-153	PARKING MACHINE -----	3-134
		PRECAUTIONS DURING OPERATION -----	7- 8
<M>		PRECAUTIONS FOR JOBSITE -----	7- 11
MACHINE INSPECTION AFTER DAILY		PRECAUTIONS FOR MAINTENANCE -----	2- 34
WORK -----	3-135	PRECAUTIONS BEFORE STARTING	
MACHINE OPERATION -----	3-111	INSPECTION AND MAINTENANCE -----	2- 34
MACHINE OPERATIONS AND		PRECAUTIONS FOR INSPECTION	
CONTROLS -----	3- 79	AND MAINTENANCE -----	2- 38
MACHINE VIEW ILLUSTRATIONS -----	3- 2	PRECAUTIONS FOR OPERATION -----	2- 20
OVERALL MACHINE VIEW -----	3- 2	LIFTING OBJECTS WITH BUCKET -----	2- 33
MAGAZINE BOX -----	3- 52	OPERATION -----	2- 24
MAINTENANCE -----	7- 16	PRECAUTIONS FOR JOBSITE -----	2- 20
CHECK BEFORE STARTING -----	7- 16	STARTING ENGINE -----	2- 22
EVERY 10 HOURS MAINTENANCE -----	7- 18	TOWING -----	2- 32
EVERY 5000 HOURS		TRANSPORTATION -----	2- 31
MAINTENANCE -----	7- 19	PROCEDURE FOR INCREASING OR	
MAINTENANCE INFORMATION -----	4- 2	REDUCING TRACK FRAME GAUGE -----	3-146
MAINTENANCE PROCEDURE -----	4- 17	PRODUCT IDENTIFICATION NUMBER	
CHECK BEFORE STARTING -----	4- 41	(PIN)/MACHINE SERIAL NO. PLATE -----	1- 6
EVERY 10 HOURS MAINTENANCE -----	4- 42	PRODUCT INFORMATION -----	1- 6
EVERY 100 HOURS MAINTENANCE ---	4- 44	PROHIBITED OPERATIONS -----	3-121
EVERY 1000 HOURS			
MAINTENANCE -----	4- 59	<R>	
EVERY 2000 HOURS		RADIO -----	3- 68
MAINTENANCE -----	4- 73	RECOMMENDED APPLICATIONS -----	3-131
EVERY 250 HOURS MAINTENANCE ---	4- 45	RECOMMENDED FUEL, COOLANT,	
EVERY 4000 HOURS		AND LUBRICANT -----	4- 9
MAINTENANCE -----	4- 79	RECOMMENDED BRANDS,	
EVERY 500 HOURS MAINTENANCE ---	4- 50	RECOMMENDED QUALITY FOR	
EVERY 5000 HOURS		PRODUCTS OTHER THAN	
MAINTENANCE -----	4- 82	KOMATSU GENUINE OIL -----	4- 11
EVERY 8000 HOURS			
MAINTENANCE -----	4- 84	<S>	
INITIAL 100 HOURS		SAFETY -----	2- 2
MAINTENANCE (ONLY AFTER		SAFETY CRITICAL PARTS -----	4- 13
THE FIRST 100 HOURS) -----	4- 17	SAFETY CRITICAL PARTS LIST -----	4- 14
INITIAL 500 HOURS		SAFETY INFORMATION -----	1- 3
MAINTENANCE (ONLY AFTER		SAFETY LABELS -----	2- 5
THE FIRST 500 HOURS) -----	4- 17	SERVICE METER LOCATION -----	1- 7
WHEN REQUIRED -----	4- 18	SHIPPING MACHINE INFORMATION -----	3-139
MAINTENANCE SCHEDULE -----	4- 15	SPECIFICATION -----	7- 21
MAINTENANCE SCHEDULE CHART -----	4- 15	SPECIFICATIONS -----	5- 2

INDEX

STARTING ENGINE	3- 98
STEERING THE MACHINE	3-115
STOPPING THE ENGINE	3-110
SUN ROOF	3- 44
SWINGING	3-117
SWITCHES	3- 34
SWITCHES	7- 2

<T>

TIGHTENING TORQUE LIST	4- 12
TIGHTENING TORQUE SPECIFICATIONS	4- 12
TOOL BOX	3- 75
TRANSPORTATION	3-137
TRANSPORTATION	7- 14
MACHINE CONFIGURATION FOR TRANSPORT	7- 14
TRANSPORTATION POSTURE	3-140
TRANSPORTATION PROCEDURE	3-137
TRAVELING ON SLOPES	3-128
TROUBLES AND ACTIONS	3-154
DISCHARGED BATTERY	3-157
OTHER TROUBLE	3-161
PHENOMENA THAT ARE NOT FAILURES	3-155
RUNNING OUT OF FUEL	3-154
SEVERE JOB CONDITION	3-156
TOWING THE MACHINE	3-156

<U>

USE OF MACHINE	1- 4
----------------------	------

<V>

VISIBILITY FROM OPERATOR'S SEAT ---	1- 5
-------------------------------------	------

<W>

WEAR PARTS	4- 8
WEAR PARTS	7- 15
WEAR PARTS LIST	4- 8
WEAR PARTS LIST	7- 15
WINDSHIELD	3- 44
WORK EQUIPMENT CONTROLS AND OPERATIONS	3-118
WORKING MODE	3-119

<Y>

YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR	1- 7
--	------

PC800-8, PC800LC-8, PC800SE-8, PC850-8, PC850SE-8 HYDRAULIC EXCAVATOR

Form No. TEN00135-08

©2009 KOMATSU
All Rights Reserved
Printed in Japan 03-09
