

**⚠ WARNING**

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who come in contact with it.

**CALIFORNIA**

**Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

**CALIFORNIA**

**Proposition 65 Warning**

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the state of California to cause cancer, birth defects and reproductive harm. Wash hands after handling.

# **Operation & Maintenance Manual**

## **PC210-6K**

## **PC210LC-6K**

## **PC240LC-6K**

## **PC240NLC-6K**

### **HYDRAULIC EXCAVATOR**

**SERIAL NUMBERS PC210-6K - K34001 and up  
PC210LC-6K  
PC240LC-6K  
PC240NLC-6K**

This material is proprietary to Komatsu America International Company and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America International company.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

## EMISSION CONTROL WARRANTY

### EMISSION CONTROL WARRANTY STATEMENT (APPLIES TO CANADA ONLY)

#### 1. Products Warranted

Komatsu America International Company, Komatsu Mining Systems Inc. and Komatsu Utility Corporation (collectively "Komatsu") produce and/or market products under brand names of Komatsu, Dresser, Dressta, Haulpak and Galion. This emissions warranty applies to new engines bearing the Komatsu name installed in these products and used in Canada in machines designed for industrial off-highway use. This warranty applies only to these engines produced on or after January 1, 2000. This warranty will be administered by Komatsu distribution in Canada.

#### 2. Coverage

Komatsu warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform, at the time of sale by Komatsu, with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within five years or 3,000 hours of operation, whichever occurs first, as measured from the date of delivery of the engine to the ultimate purchaser.

#### 3. Limitations

Failures, other than those resulting from defects in materials or workmanship, are not covered by this warranty. Komatsu is not responsible for failures or damage resulting from what Komatsu determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; over fueling; over speeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, run-in or shutdown practices; unauthorized modifications of the engine. Komatsu is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel. Komatsu is not responsible for non-engine repairs, "downtime" expense, related damage, fines, all business costs or other losses resulting from a warrantable failure.

### **KOMATSU IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

This warranty, together with the express commercial warranties, are the sole warranties of Komatsu. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

## GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS

### ÉNONCÉ DE GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS (APPLICABLE AU CANADA SEULEMENT):

#### 1. Produits garantis:

Komatsu America International Company, Komatsu Mining Systems Inc. et Komatsu Utility Corporation (collectivement Komatsu) produisent et/ou font la mise en marché de produits portant les noms de marque Komatsu, Dresser, Dressta, Haulpak et Galion. Cette garantie sur les émissions s'applique à tous les nouveaux moteurs portant le nom Komatsu, installés dans ces produits et utilisés au Canada dans des machines conçues pour utilisation industrielle non-routière. Cette garantie s'applique seulement sur les moteurs produits à partir du 1er Janvier 2000. Cette garantie sera administrée par la distribution de Komatsu au Canada.

#### 2. Couverture:

Komatsu garantit à l'acheteur ultime et chaque acheteur subséquent que le moteur est conçu, construit et équipé en toute conformité, au moment de la vente par Komatsu, avec toutes les Réglementations fédérales américaines sur les émissions applicables au moment de la fabrication et qu'il est exempt de défauts de construction ou de matériaux qui auraient pour effet de contrevenir à ces réglementations en dedans de 5 ans ou 3000 heures d'opération, mesuré à partir de la date de livraison du moteur au client ultime.

#### 3. Limitations:

Les bris, autres que ceux résultant de défauts de matériaux ou de construction, ne sont pas couverts par cette Garantie. Komatsu n'est pas responsable pour bris ou dommages résultant de ce que Komatsu détermine comme étant de l'abus ou négligence, incluant mais ne se limitant pas à: l'opération sans lubrifiants ou agents refroidissants adéquats; la suralimentation d'essence; la survitesse; le manque d'entretien des systèmes de lubrification, de refroidissement ou d'entrée; de pratiques non-propices d'entreposage, de mise en marche, de réchauffement, de conditionnement ou d'arrêt; les modifications non-autorisées du moteur. De plus, Komatsu n'est pas responsable de bris causés par de l'essence inadéquate ou de l'eau, des saletés ou autres contaminants dans l'essence. Komatsu n'est pas responsable des réparations non-reliées au moteur, des dépenses encourues suite aux temps d'arrêts, des dommages relatifs, amendes, et de tout autre coût d'affaires ou autres pertes résultant d'un bris couvert par la garantie.

### **KOMATSU N'EST PAS RESPONSABLE DES INCIDENTS OU DOMMAGES CONSÉQUENTS.**

Cette garantie, ainsi que les garanties expresses commerciales, sont les seules garanties de Komatsu. **IL N'Y A AUCUNE AUTRE GARANTIE, EXPRESSE OU SOUS-ENTENDUE, MARCHANDABLE OU PROPICE A UNE UTILISATION PARTICULIÈRE.**

## FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. Keep this manual handy and have all personnel read it periodically. If this manual has been lost or has become dirty and can not be read, request a replacement manual from Komatsu or your Komatsu distributor.

If you sell the machine, be sure to give this manual to the new owners.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information for your machine or for questions regarding information in this manual.

---

**▲ WARNING**

---

- **This operation & maintenance manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you require.**
- **This machine complies with EC directive (89/392/EEC). Machines complying with this directive display the CE mark**
- **Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.**
- **Operators and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.**
- **Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.**
- **The procedures and precautions given in this manual apply only to intended uses of the machine. If you use your machine for any unintended uses that are not specifically prohibited, you must be sure that it is safe for you and others. In no event should you or others engage in prohibited uses or actions as described in this manual.**
- **Komatsu delivers machines that comply with all applicable regulations and standards of the country to which it has been shipped. If this machine has been purchased in another country or purchased from someone in another country, it may lack certain safety devices and specifications that are necessary for use in your country. If there is any question about whether your product complies**

**with the applicable standards and regulations of your country, consult Komatsu or your Komatsu distributor before operating the machine.**

- **The description of safety is given in see "SAFETY INFORMATION" on page 3. and in "SAFETY" from page 13.**
- 
-


# SAFETY INFORMATION


## SAFETY MESSAGES


Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines.

To avoid accidents, read, understand and follow all precautions and warnings in this manual and on the machine before performing operation and maintenance.

To identify hazards on the machine pictorial decals are used (see "POSITION FOR ATTACHING SAFETY LABELS" on page 45).

 **RED WARNING TRIANGLE** - This is used on safety labels where there is a high probability of serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage to the machine.

 **ORANGE WARNING TRIANGLE** - This is used on safety labels where there is a potentially dangerous situation which could result in serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage of the machine

 **YELLOW SAFETY TRIANGLE** - This is used on safety labels for hazards which could result in minor or moderate injury if the hazard is not avoided. This word might also be used for a hazard where the only result could be damage to the machine.

### NOTICE


**This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.**

Safety precautions are described in "SAFETY" from page 13.

Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore the safety message in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, you must be sure that you and others can do such procedures and actions safely and without damaging the machine. If you are unsure about the safety of some procedures, contact Komatsu or your Komatsu distributor.

## NOISE

- Operator ears noise value (Sound pressure level)

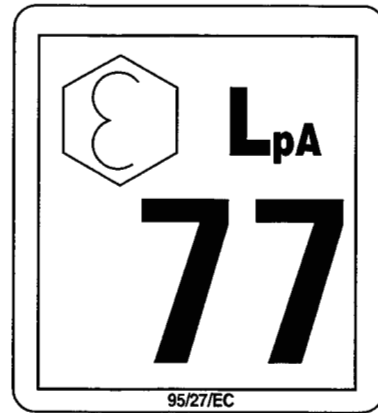

- Ambient noise value (Sound power level)



Noise level indicated is the guaranteed value as specified in the directive 86/662/EEC as amended by 95/27/EC

## VIBRATION

The weighted root mean square acceleration value to which the operator's arms are subjected does not exceed 2.5 m/s

The weighted root mean square acceleration value to which the operator's body is subjected does not exceed 0.5 m/s

These results were obtained by accelerometers during trench digging.

# INTRODUCTION

## INTENDED USE

This Komatsu HYDRAULIC EXCAVATOR is designed to be used mainly for the following work:

- Digging
- Smoothing work
- Ditching work
- Loading work

**See the section “WORK POSSIBLE USING HYDRAULIC EXCAVATOR” on page 125 for further details**

## FEATURES

- This Komatsu HYDRAULIC EXCAVATOR is equipped with various controls based on an advanced electronics system.
- The monitor panel greatly facilitates daily maintenance and self-diagnosis.
- Working mode, travel speed and swing priority are selectable.
- Digging and lifting force can be increased by light-touch control. (For details, see operation section.)
- Adjustable wrist control levers make operations smooth and easy.
- Fresh filtered air conditioner assures comfortable operation.
- Low noise level and smart urban style design and colouring.
- Superb operation performance provided by powerful engine and high-performance hydraulic pumps.
- Low fuel consumption controlled by an electronic control system provides an environment-friendly machine.



## **BREAKING IN YOUR NEW MACHINE**

Your Komatsu machine has been thoroughly adjusted and tested before shipment.

However, operating the machine under severe conditions at the beginning can adversely affect the performance and shorten the machine life.

Be sure to break in the machine for the initial 100 hours (as indicated by the hour meter.)

During breaking in:

- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Sudden starting or acceleration, unnecessarily abrupt braking and sharp turning should be avoided except in cases of emergency.

Additionally for the first 20 hours

- Avoid operating engine for prolonged periods at constant speed (including idle.)
- Avoid high speed travelling for periods of more than 5 minutes.

Pay particular attention to oil pressure and temperature indicators & check coolant and oil levels frequently during breaking in.


The precautions given in this manual for operating, maintenance, and safety procedures are only those that apply when this product is used for the specified purpose. If the machine is used for a purpose that is not listed in this manual, Komatsu cannot bear any responsibility for safety. All consideration of safety in such operations is the responsibility of the user.

Operations that are prohibited in this manual must never be carried out under any circumstances.

## LOCATION OF PLATES, TABLES TO ENTER SERIAL NO. AND DISTRIBUTOR


### MACHINE SERIAL NO. PLATE POSITION

On the front bottom right of the operator's cab

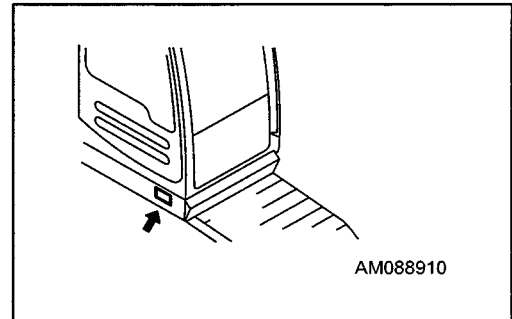

### ENGINE SERIAL NO. PLATE POSITION

On the upper side of the engine cylinder head cover.

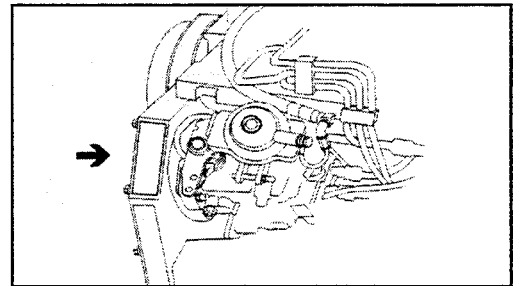

### TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

---

Machine serial No.

---

Engine serial No.

---



Manufacturers name: KOMATSU UK Ltd.  
Address: Durham Road  
Birtley  
Chester-Le street  
County Durham DH32QX  
United Kingdom

Distributor  
Address

Phone

---

**MACHINE SERIAL PLATE.**

  	<b>MODEL</b>	<input type="text"/>
	<b>SERIAL No</b>	<input type="text"/>
	<b>MANUFACTURING YEAR</b>	<input type="text"/>
	<b>MASS</b>	<input type="text"/>
	<b>ENGINE POWER</b>	<input type="text"/>
	<b>MANUFACTURER</b>	<input type="text"/>
<b>Komatsu UK Ltd, Birtley, Co. Durham, United Kingdom</b>		
<b>205-00-K1290</b>		

---

# CONTENTS

<b>FOREWORD .....</b>	<b>1</b>
<b>SAFETY INFORMATION .....</b>	<b>3</b>
SAFETY MESSAGES .....	3
NOISE .....	4
VIBRATION .....	4
<b>INTRODUCTION .....</b>	<b>5</b>
INTENDED USE .....	5
FEATURES .....	5
BREAKING IN YOUR NEW MACHINE .....	6
<b>LOCATION OF PLATES, TABLES TO ENTER SERIAL NO. AND DISTRIBUTOR .....</b>	<b>7</b>
MACHINE SERIAL NO. PLATE POSITION .....	7
ENGINE SERIAL NO. PLATE POSITION .....	7
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR .....	7
MACHINE SERIAL PLATE .....	8
<b>SAFETY.....</b>	<b>13</b>
<b>GENERAL PRECAUTIONS .....</b>	<b>14</b>
<b>PRECAUTIONS DURING OPERATION .....</b>	<b>22</b>
BEFORE STARTING ENGINE .....	22
OPERATING MACHINE .....	24
TRANSPORTATION .....	31
BATTERY .....	32
TOWING .....	33
BUCKET WITH HOOK .....	34
<b>PRECAUTIONS FOR MAINTENANCE .....</b>	<b>37</b>
BEFORE CARRYING OUT MAINTENANCE .....	37
DURING MAINTENANCE .....	40
<b>POSITION FOR ATTACHING SAFETY LABELS .....</b>	<b>45</b>
POSITION FOR ATTACHING SAFETY LABELS .....	45
<b>OPERATION.....</b>	<b>51</b>
<b>GENERAL VIEW .....</b>	<b>52</b>
GENERAL VIEW OF MACHINE .....	52
GENERAL VIEW OF CONTROLS AND GAUGES .....	53

<b>EXPLANATION OF COMPONENTS .....</b>	<b>55</b>
MACHINE MONITOR .....	55
METERS .....	61
SWITCHES .....	66
CONTROL LEVERS, PEDALS .....	72
AIR CONDITIONER .....	83
CAB RADIO .....	86
FUSE .....	87
FUSIBLE LINK .....	88
CONTROLLERS .....	88
TOOL BOX .....	88
REFUELLING PUMP .....	89
HANDLING THE ACCUMULATOR .....	90
<b>OPERATION .....</b>	<b>91</b>
CHECK BEFORE STARTING ENGINE .....	91
STARTING ENGINE .....	102
OPERATIONS AND CHECKS AFTER STARTING ENGINE .....	104
MOVING MACHINE OFF .....	110
STEERING MACHINE .....	113
STOPPING MACHINE .....	115
SWINGING .....	116
OPERATION OF WORK EQUIPMENT .....	117
HANDLING ACTIVE MODE .....	118
WORKING MODE SELECTION .....	119
PROHIBITIONS FOR OPERATION .....	121
PRECAUTIONS FOR OPERATION .....	123
PRECAUTIONS WHEN TRAVELLING UP OR DOWN HILLS .....	124
HOW TO ESCAPE FROM MUD .....	125
WORK POSSIBLE USING HYDRAULIC EXCAVATOR .....	125
REPLACEMENT AND INVERSION OF BUCKET .....	127
PARKING THE MACHINE .....	129
CHECK AFTER FINISHING WORK .....	130
STOPPING ENGINE .....	130
CHECK AFTER STOPPING ENGINE .....	131
<b>TRANSPORTATION .....</b>	<b>133</b>
LOADING, UNLOADING WORK .....	133
<b>COLD WEATHER OPERATION .....</b>	<b>138</b>
PRECAUTIONS FOR LOW TEMPERATURE .....	138
PRECAUTIONS AFTER COMPLETION OF WORK .....	139
<b>LONG-TERM STORAGE .....</b>	<b>141</b>
BEFORE STORAGE .....	141
DURING STORAGE .....	141
AFTER STORAGE .....	142
STARTING MACHINE AFTER LONG-TERM STORAGE .....	142

<b>TROUBLESHOOTING .....</b>	<b>143</b>
PHENOMENA THAT ARE NOT FAILURES .....	143
METHOD OF TOWING MACHINE .....	143
USING METHOD FOR LIGHT-WEIGHT TOWING HOLE .....	144
PRECAUTIONS ON PARTICULAR JOBSITES .....	144
IF BATTERY IS DISCHARGED .....	145
OTHER TROUBLE .....	148
<b>MAINTENANCE .....</b>	<b>153</b>
<b>GUIDES TO MAINTENANCE .....</b>	<b>154</b>
<b>OUTLINES OF SERVICE .....</b>	<b>157</b>
OUTLINE OF OIL, FUEL, COOLANT .....	157
EXPLANATION OF LUBRICATION CHART DECAL .....	160
OUTLINE OF ELECTRICAL SYSTEM .....	162
OUTLINE OF HYDRAULIC SYSTEM .....	162
<b>WEAR PARTS LIST .....</b>	<b>164</b>
<b>USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE .....</b>	<b>165</b>
<b>STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS .....</b>	<b>169</b>
LIST OF NECESSARY TOOLS .....	169
TORQUE LIST .....	170
<b>PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS .....</b>	<b>171</b>
<b>MAINTENANCE SCHEDULE CHART .....</b>	<b>174</b>
MAINTENANCE SCHEDULE CHART .....	174
MAINTENANCE WHEN USING HYDRAULIC BREAKER .....	177
<b>SERVICE PROCEDURE .....</b>	<b>178</b>
INITIAL 250 HOURS SERVICE .....	178
WHEN REQUIRED .....	178
CHECK BEFORE STARTING .....	190
EVERY 100 HOURS SERVICE .....	195
EVERY 250 HOURS SERVICE .....	198
EVERY 500 HOURS SERVICE .....	202
EVERY 1000 HOURS SERVICE .....	208
EVERY 2000 HOURS SERVICE .....	211
EVERY 4000 HOURS SERVICE .....	213
EVERY 5000 HOURS SERVICE .....	213
<b>SPECIFICATIONS.....</b>	<b>217</b>

<b>SPECIFICATIONS .....</b>	<b>218</b>
PC210-6K, PC210LC-6K .....	218
<b>SPECIFICATIONS .....</b>	<b>222</b>
PC240LC-6K, PC240NLC-6K .....	222
explanation of LIFTING CAPACITY CHART .....	225
 <b>OPTIONS, ATTACHMENTS .....</b>	 <b>235</b>
<b>PRECAUTIONS RELATED TO SAFETY .....</b>	<b>236</b>
PRECAUTIONS WHEN INSTALLING ATTACHMENTS .....	237
<b>HANDLING BUCKET WITH HOOK .....</b>	<b>238</b>
CHECKING FOR DAMAGE TO BUCKET WITH HOOK .....	238
PROHIBITED OPERATIONS .....	238
PRECAUTIONS DURING OPERATIONS .....	238
<b>MACHINES READY FOR ATTACHMENTS .....</b>	<b>239</b>
EXPLANATION OF COMPONENTS .....	239
ATTACHMENT MOUNTING/DISMOUNTING PROCEDURE .....	243
<b>INTRODUCTION OF ATTACHMENTS .....</b>	<b>248</b>
SPECIFICATION, USE .....	248
ATTACHMENT INSTALLATION COMBINATION TABLE .....	250
SELECTION OF TRACK SHOES .....	252
SELECTION OF BUCKET TEETH .....	254
HANDLING TRAPEZOIDAL BUCKET .....	254
USING THE EXTENSION ARM .....	256
HANDLING THE CLAMSHELL BUCKET .....	256
<b>EXTENDING MACHINE SERVICE LIFE .....</b>	<b>257</b>
HYDRAULIC BREAKER .....	257
POWER RIPPER .....	261
MAIN FIELDS OF APPLICATIONS .....	261
FORK GRAB .....	262
GRAPPLE BUCKET .....	264
SCRAP GRAPPLE .....	265
CRUSHER & SMASHER .....	267
HYDRAULIC PILE DRIVER .....	268
HYDRAULIC EXCAVATOR WITH MULTIPURPOSE CRANE .....	270
2-PC BOOM .....	272
6.4 M STRAIGHT BOOM .....	277

# SAFETY

---

---

 **WARNING**

---

---

**Read and follow all safety precautions. Failure to do so may result in serious injury or death.**

---

---

This safety section also contains precautions for optional equipment and attachments.



**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

## GENERAL PRECAUTIONS

### SAFETY RULES

- ONLY trained and authorised personnel can operate and maintain the machine.
- Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.
- When working with another operator or a person on worksite traffic duty, be sure all personnel understand all hand signals that are to be used.

### SAFETY LABELS


- Please read and understand the safety labels stuck to the machine.
- Always keep the safety labels clean.
- If the safety label comes off or is lost or damaged, stick it on again or contact your Komatsu distributor and replace it with a new part.

### SAFETY FEATURES

- Be sure all guards and covers are in their proper position. Have guards and covers repaired if damaged.
- Use safety features such as safety lock lever properly.
- NEVER remove any safety features. ALWAYS keep them in good operating condition.


**Safety lever, see "PARKING THE MACHINE" on page 129.**

- Improper use of safety features could result in serious bodily injury or death.

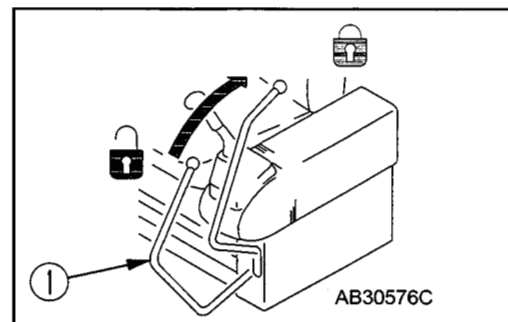

### CLOTHING AND PERSONAL PROTECTIVE ITEMS

- Avoid loose clothing, jewellery, and loose long hair. They can catch on controls or in moving parts and cause serious injury or death. Also, do not wear oily cloths because they are flammable.
- Wear a hard hat, safety glasses, safety shoes, mask or gloves when operating or maintaining the machine. Always wear safety goggles, hard hat and heavy gloves if your job involves scattering metal chips or minute materials <—> this is so particularly when driving pins with a hammer and when cleaning the air cleaner element with compressed air.

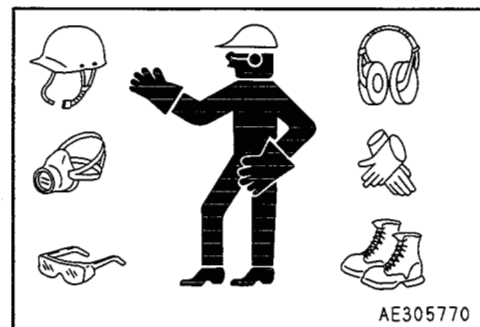

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

- Check also that there is no one near the machine.

**Driving in pins, see “REPLACEMENT AND INVERSION OF BUCKET” on page 127.**

**Cleaning of air cleaner element, see “WHEN REQUIRED” on page 178.**

### UNAUTHORISED MODIFICATION


Any modification made without authorisation from Komatsu can create hazards.

Before making a modification, consult your Komatsu distributor. Komatsu will not be responsible for any injury or damage caused by any unauthorised modification.

### ALWAYS APPLY LOCK WHEN LEAVING OPERATOR'S SEAT


- When standing up from the operator's seat, always place the safety lock lever securely in the LOCK position. If you accidentally touch the travel or swing lever when they are not locked, the work equipment may suddenly move and cause serious injury or damage.
- When leaving the machine, lower the work equipment completely to the ground, set the safety lock lever to the LOCK position, then stop the engine and use the key to lock all the equipment. Always take the key with you.

**Work equipment posture see “PARKING THE MACHINE” on page 129.**

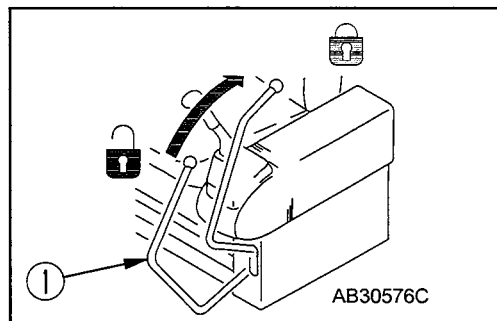



### MOUNTING AND DISMOUNTING

- NEVER jump on or off the machine. NEVER get on or off a moving machine.
- When mounting or dismounting, always face the machine and use the handrails, machine or track frame steps, and track shoes.

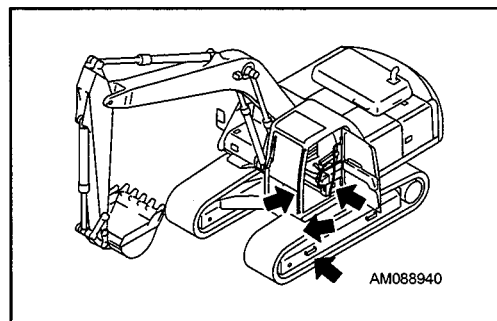

**⚠ WARNING:** For reasons of safety, always follow these safety precautions.


- Do not hold any control levers when getting on or off the machine.
- Ensure safety by always maintaining at least three-point contact of hands and feet with the handrails, steps or track shoes.
- Always remove any oil or mud from the handrails, steps and track shoes. If they are damaged, repair them and tighten any loose bolts.
- If grasping the door handrail when mounting or dismounting or moving on the track, open and lock the door securely in the open position. Otherwise, the door may move suddenly, causing you to lose balance and fall.

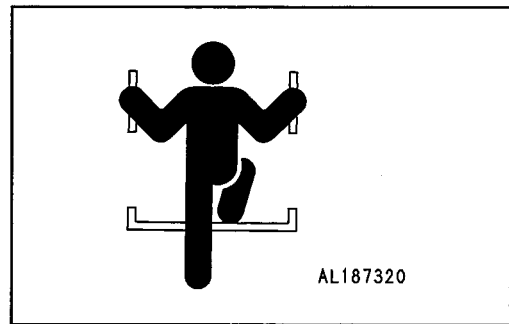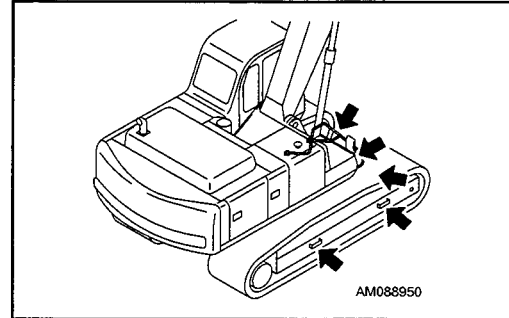

#### FIRE PREVENTION FOR FUEL AND OIL


Fuel, oil, and antifreeze can be ignited by a flame. Fuel is particularly **FLAMMABLE** and can be **HAZARDOUS**.

- Keep flames away from flammable fluids.
- Stop the engine and do not smoke when refuelling.

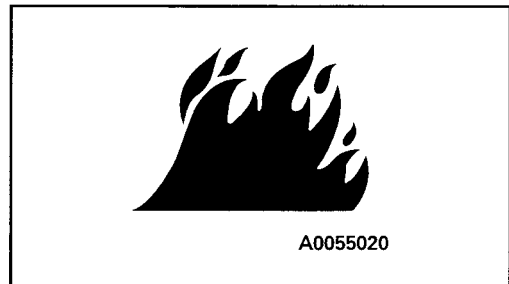

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

- Tighten all fuel and oil caps securely.
- Refuelling and oiling should be carried out in well ventilated areas.

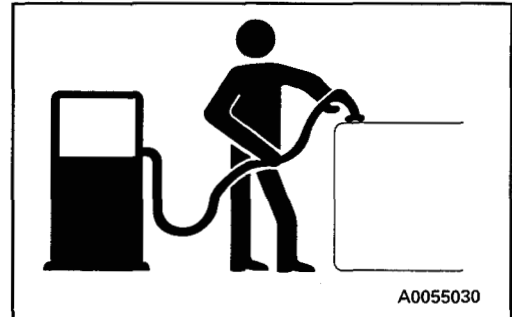


- Keep oil and fuel in a secure place and do not allow unauthorised persons to enter.



### PRECAUTIONS WHEN HANDLING AT HIGH TEMPERATURES

- Immediately after operations are stopped, the engine coolant, engine oil, and hydraulic oil are at high temperatures, and are still under pressure. Attempting to remove the cap, drain the oil or water, or replace the filters may lead to serious burns. Always wait for the temperature to go down, and follow the specified procedures when carrying out these operations.
- To prevent hot water from spurting out:
  - Turn engine off.
  - Allow water to cool.
  - Slowly loosen cap to relieve pressure before removing.
- To prevent hot oil from spurting out:
  - Turn engine off.
  - Allow oil to cool.
  - Slowly loosen cap to relieve pressure before removing.

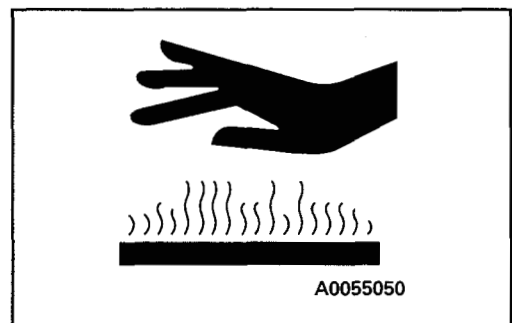


**▲ WARNING:** For reasons of safety, always follow these safety precautions.

### ASBESTOS DUST HAZARD PREVENTION

Asbestos dust can be HAZARDOUS to your health if it is inhaled.

Your Komatsu machine and genuine Komatsu spare parts do not contain any asbestos. Use only genuine Komatsu spare parts. If spare parts containing asbestos are used, the following precautions must be observed:


- NEVER use compressed air for cleaning.
- Use water for cleaning to keep down the dust.
- Operate the machine with the wind to your back, whenever possible.
- Use an approved respirator if necessary.

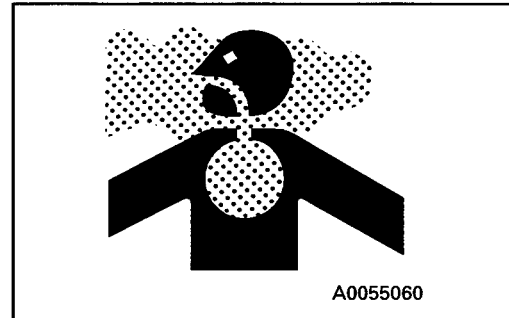

### CRUSHING OR CUTTING PREVENTION

Do not enter, or put your hand or arm or any other part of your body between movable parts such as between the work equipment and cylinders, or between the machine and work equipment.

If the work equipment is operated, the clearance will change and this may lead to serious damage or personal injury.

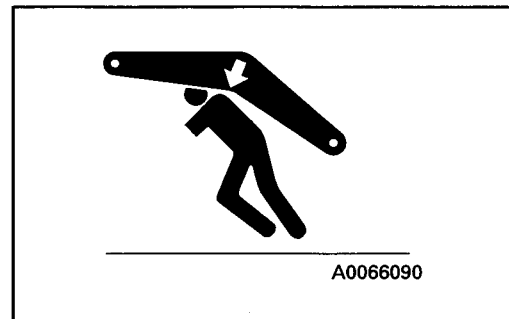


### FIRE EXTINGUISHER AND FIRST AID KIT

Know how to use fire extinguisher (if installed).

Provide a first aid kit at the storage point.

Know what to do in the event of a fire.

Be sure you know the phone numbers of persons you should contact in case of an emergency.

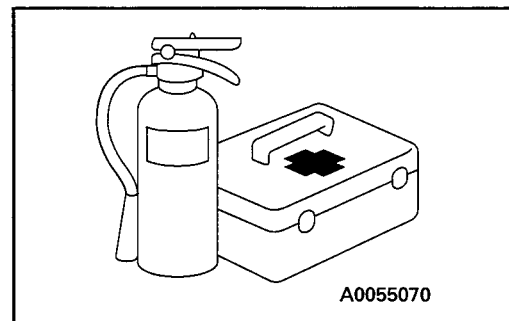

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

### PROTECTION AGAINST FALLING OR FLYING OBJECTS

If there is any danger of falling or flying objects hitting the operator, install protective guards in place to protect the operator as required for each particular situation.

- For work with breakers, install a front guard on the windshield. Also, place a laminate coating sheet over the windshield.
- For demolition or shear work, install a front guard on the windshield and a top guard on the cab. Also, place a laminate coating sheet over the windshield.
- For work in mines, quarries, demolition, tunnels or other places where there is danger of falling rocks, put FOPS (falling object protective structure) in place. Also, place a laminate coating sheet over the windshield.

The above comments are made with regards to typical working conditions. By all means you should put on other guards if required by conditions at your particular site.

For details of safety guards, please contact your Komatsu distributor.



Also, even for other types of work, if there is any danger of being hit by falling or flying objects or of objects entering the operator's cab, select and install a guard that matches the working conditions.

Be sure to close the front window before commencing work.

**Level 1** acceptance is intended for protection from small falling rocks, flying objects and other debris encountered in operations such as highway maintenance, landscaping and light construction site services

#### Level 1 Guards:

- Fitted directly onto the roof and front of the cab.

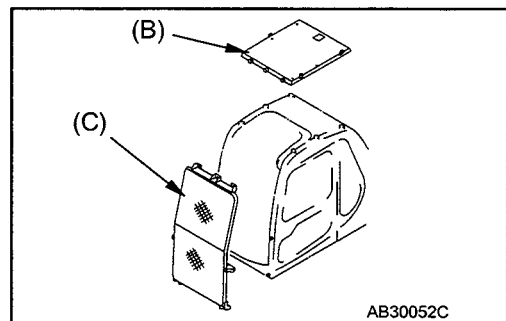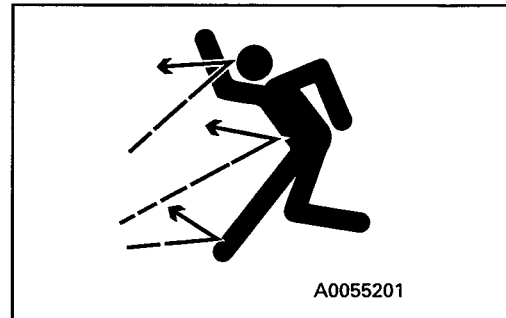

(B): Top guard

(C): Front guard (I)


**▲ WARNING:** For reasons of safety, always follow these safety precautions.

When carrying out the above operations, make sure to keep all persons other than the operator outside the range of falling or flying objects. Be particularly sure to maintain a proper distance when carrying out shear operations.

(A): FOPS

(B) Front guard

**Level 2** acceptance is intended for protection from large falling rocks, flying objects and other debris encountered in operations such as demolition work, building constructions and general heavy site work.

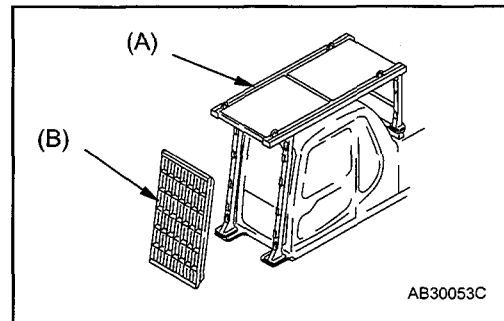

### Level 2 Guards

- Fops fitted directly to the revolving frame
- Front guard fitted directly to front of the fops

**NOTE:** The above guards are the minimum required for typical working conditions as described above and are in accordance with the latest requirements of ISO/DIS 10262 (draft standard).

### PRECAUTIONS FOR ATTACHMENTS

- When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.
- Do not use attachments that are not authorised by Komatsu or your Komatsu distributor. Use of unauthorised attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.
- Any injuries, accidents, product failures resulting from the use of unauthorised attachments will not be the responsibility of Komatsu.


### MACHINES WITH ACCUMULATOR

On machines equipped with an accumulator, for a short time after the engine is stopped, the work equipment will lower under its own weight when the work equipment control lever is shifted to LOWER. After the engine is stopped, set the safety lock lever to the lock position (and also lock the attachment pedal with the lock pin).

When releasing the pressure inside the work equipment circuit on machines equipped with an accumulator, follow the procedure given in the inspection and maintenance section.

**Method of releasing pressure see “HANDLING THE ACCUMULATOR” on page 90.**

The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

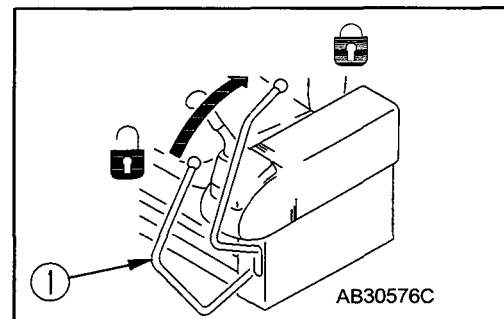


**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

- Never make any hole in the accumulator or expose it to flame or fire.
- Do not weld anything to the accumulator.
- When carrying out disassembly or maintenance of the accumulator, or when disposing of the accumulator, it is necessary to release the gas from the accumulator. A special air bleed valve is necessary for this operation, so please contact your Komatsu distributor.

**Gas in accumulator see "HANDLING THE ACCUMULATOR" on page 90.**

### EMERGENCY EXIT

- When exit by normal means is prevented in an emergency you can get out through the emergency exit (rear window).
- Pull the ring at the bottom of the window and remove strip. This will allow you to push out glass.

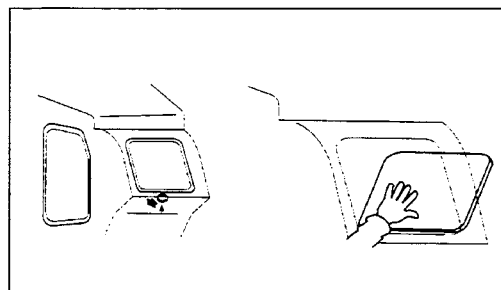

### ROTATING BEACON (Option)

When the machine is operated on or beside a road, a rotating beacon is required to avoid a traffic accident.


Contact your Komatsu distributor to install beacon lamp.

### ELECTROMAGNETIC INTERFERENCE

When this machine is operating close to a source of high electromagnetic interference, such as a radar station, some abnormal phenomena may be observed.

- The display on the monitor panel may behave erratically.
- The warning buzzer may sound.

These effects do not signify a malfunction and the machine will return to normal as soon as the source of interference is removed.

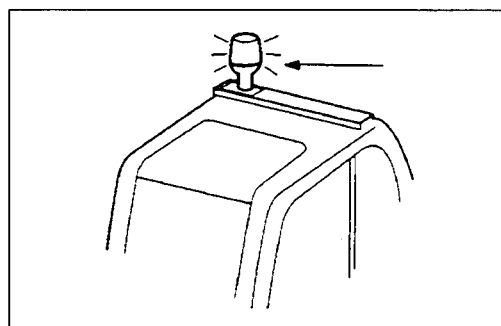



**⚠ WARNING:** For reasons of safety, always follow these safety precautions.


## PRECAUTIONS DURING OPERATION

### BEFORE STARTING ENGINE

#### SAFETY AT WORKSITE

- Before starting the engine, thoroughly check the area for any unusual conditions that could be dangerous.
- Before starting the engine, examine the terrain and soil conditions of the worksite. Determine the best and safest method of operation.
- Make the slope as horizontal as possible before continuing operations.
- If you need to operate on a street, protect pedestrians and cars by designating a person for worksite traffic duty or by installing fences around the worksite.
- If water lines, gas lines, and high-voltage electrical lines may be buried under the worksite, contact each utility and identify their locations. Be careful not to sever or cut any of these lines.
- Check the depth and flow of water before operating in water or crossing a river. **NEVER** be in water which is in excess of the permissible water depth.

**Permissible water depth** see “PRECAUTIONS FOR OPERATION” on page 123.

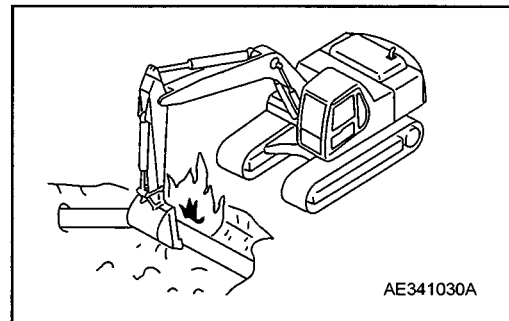


#### FIRE PREVENTION

- Thoroughly remove wood chips, leaves, paper and other flammable things accumulated on the engine compartment. They could cause a fire.
- Check fuel, lubrication, and hydraulic systems for leaks. Have any leaks repaired. Wipe up any excess oil, fuel or other flammable fluids.

**Check point** see “WALK-AROUND CHECK” on page 91.

- Be sure a fire extinguisher is present and working.

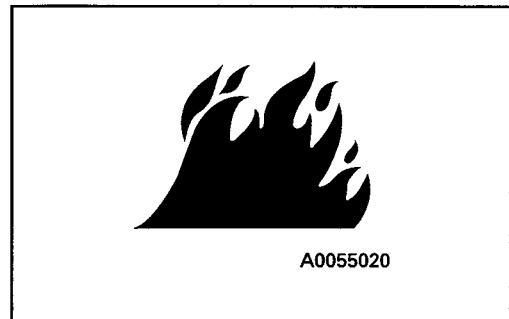

#### IN OPERATOR'S CAB

- Do not leave tools or spare parts lying around in the operator's compartment. They may damage or break the control levers or switches. Always put them in the tool box on the left or right side of the machine.
- Keep the cab floor, controls, steps and handrails free of oil, grease, snow, and excess dirt.

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

### VENTILATION FOR ENCLOSED AREAS

- If it is necessary to start the engine within an enclosed area, provide adequate ventilation. Exhaust fumes from the engine can KILL.

### PRECAUTIONS FOR MIRRORS, WINDOWS AND LIGHTS

- Remove all dirt from the surface of the windows and lights to ensure that you can see well.
- Adjust the rear view mirror so that you can see clearly from the operator's seat, and always keep the surface of the mirror clean. If any glass is broken, replace it with a new part.
- Check that the head lamps and working lamps are installed to match the operating conditions. Check also that they light up properly.



### PRECAUTIONS WHEN HANDLING (TWO PIECE BOOM)


When operating the boom arm 2-piece type, select a specialist operator and do not allow any other person to operate the machine.

- Check that the ground inside the operating range is flat and firm.
- Always operate the work equipment slowly.

### **⚠ WARNING**

**Especially when lowering the work equipment, move it as slowly as possible to prevent any shock to the machine (operate the work equipment in the same way as when operating a crane).**



- Pay attention to warning decal in the cab.

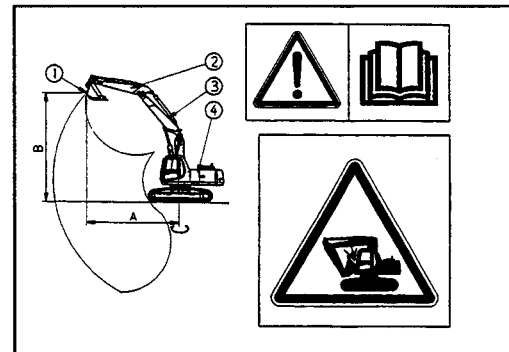

**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

**⚠ WARNING**


If the bucket is operated in a certain way, it comes in contact with the machine body (operator's cab, upper boom, cylinders and undercarriage). When operating the work equipment, take sufficient care not to bring it in contact with the machine body.

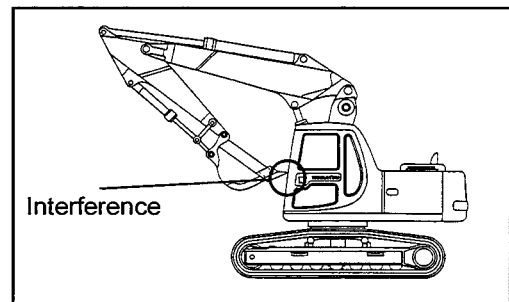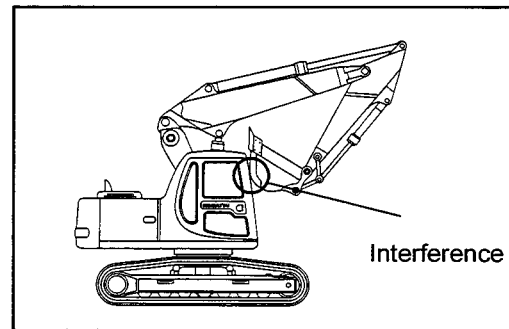

## OPERATING MACHINE

### WHEN STARTING THE ENGINE

- Walk around your machine again just before mounting it, to check for people and objects that might be in the way.
- NEVER start the engine if a warning tag has been attached to the wrist control.
- When starting the engine, sound the horn as an alert.
- Start and operate the machine only while seated.
- Do not allow anyone other than the operator to ride in the cab or on the machine body.
- For machines equipped with a travel alarm buzzer, check that the warning device operates correctly.

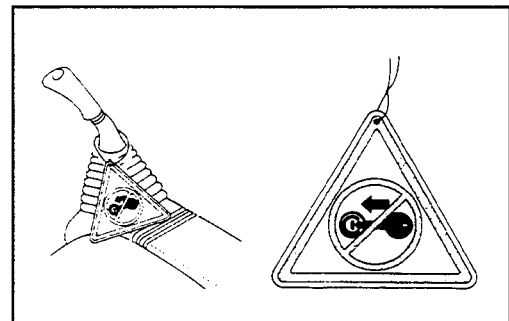

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

### CHECK DIRECTION BEFORE STARTING MACHINE

Before operating the travel lever, check the direction of the track frame. If the sprocket is at the front, the travel lever must be operated in the opposite direction.





Travel operations see **“MOVING MACHINE OFF”** on page 110.

### CHECK THAT NO ONE IS IN THE AREA BEFORE SWINGING OR TRAVELLING IN REVERSE

- Always position a signalman in places in dangerous places or places where the view is not clear.
- Make sure that no one comes inside the swing radius or direction of travel.
- Before starting to move, sound the horn or give a signal to warn people not to come close to the machine.
- There are blind spots behind the machine, so if necessary, swing the upper structure to check that there is no one behind the machine before travelling in reverse.


### PRECAUTIONS WHEN TRAVELLING

- Fold in the work equipment as shown in the diagram below, and keep it at a height of 40-50 cm from the ground level before starting to travel.
- When travelling, do not operate the work equipment control levers. If the work equipment control levers have to be operated, never operate them suddenly.

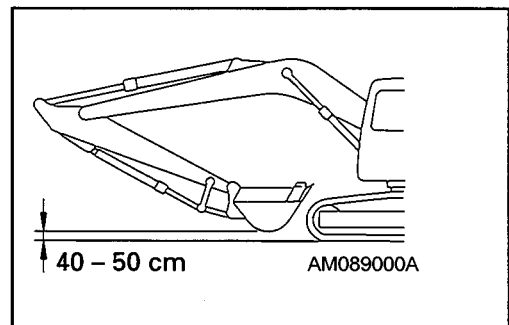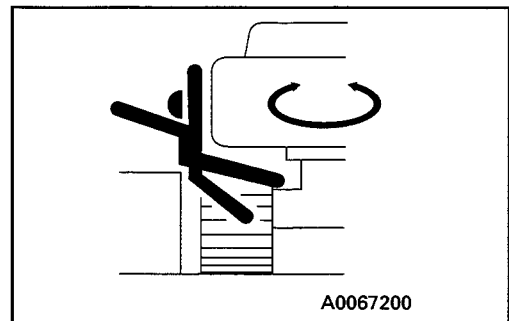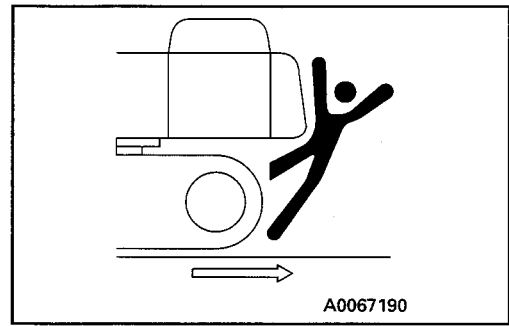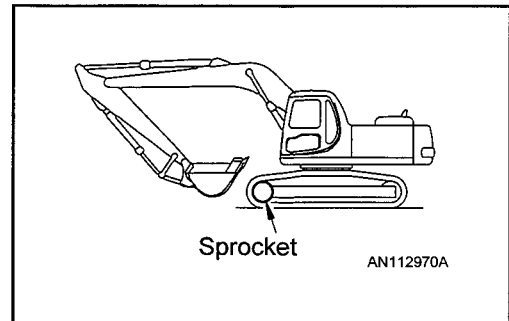


**▲ WARNING:** For reasons of safety, always follow these safety precautions.

- When travelling on rough ground, travel at low speed, and avoid sudden changes in direction.
- Avoid travelling over obstacles as far as possible. If the machine has to travel over an obstacle, keep the work equipment as close to the ground as possible and travel at low speed. Never travel over obstacles which make the machine tilt strongly ( $10^\circ$  or more).

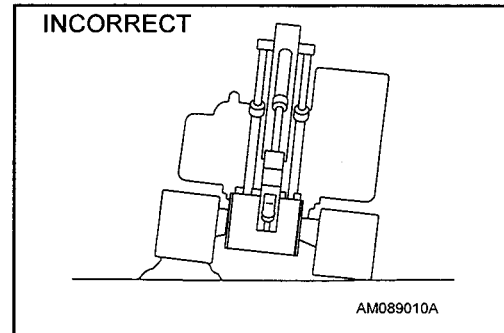


**TRAVELLING ON SLOPES**

- Travelling on hills, banks or slopes that are steep could result in the machine tipping over or slipping.

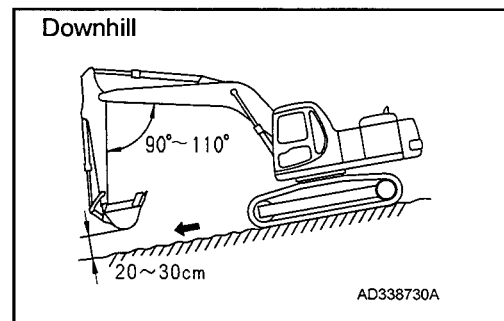


- On hills, banks or slopes, carry the bucket closer to the ground, approximately 20 to 30 cm above the ground. In case of emergency, quickly lower the bucket to the ground to help the machine stop and prevent it from tipping over.

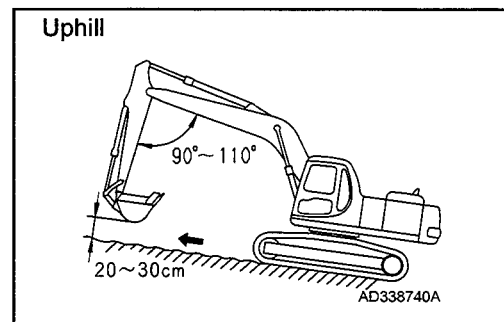

- Do not turn on slopes or travel across slopes. Always go down to a flat place to perform these operations.

**Method of travelling on slopes see "PRECAUTIONS WHEN TRAVELLING UP OR DOWN HILLS" on page 124.**



- Do not travel up and down on grass, fallen leaves, and wet steel plates. These materials may allow the machine to slip, if it is travelling sideways. Keep travel speed very low.

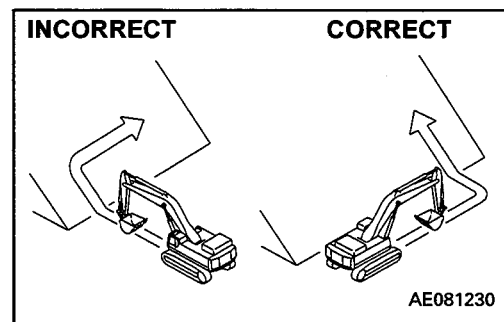

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.


### PROHIBITED OPERATIONS

- Do not dig the work face under an overhang. This may cause the overhang to collapse and fall on top of the machine.
- Do not carry out deep digging under the front of the machine. The ground under the machine may collapse and cause the machine to fall.

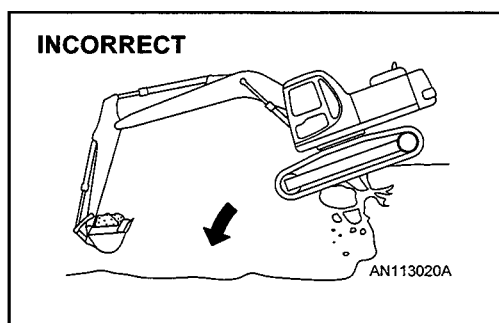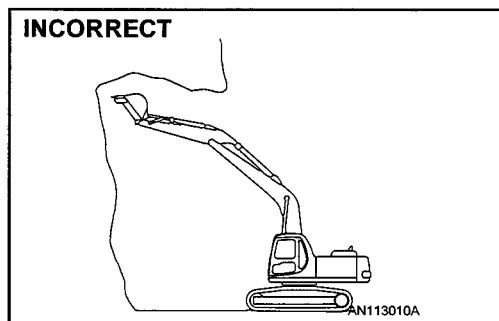


### DO NOT GO CLOSE TO HIGH-VOLTAGE CABLES

- Going close to high-voltage cables can cause electric shock. Always maintain the safe distance given below between the machine and the electric cable.
- The following actions are effective in preventing accidents.
  - 1) Wear shoes with rubber or leather soles.
  - 2) Use a signalman to give warning if the machine approaches too close to the electric cable.
- If the work equipment should touch the electric cable, the operator should not leave the operator's compartment.
- When carrying out operations near high voltage cables, do not let anyone come close to the machine.
- Check with the electricity company about the voltage of the cables before starting operations.

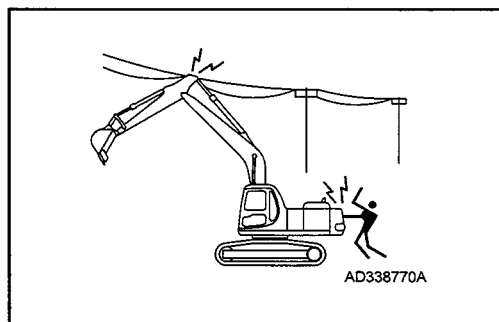

Voltage	Min. Safety distance
6.6 kV	3 m
33.0 kV	4 m
66.0 kV	5 m
154.0 kV	8 m
275.0 kV	10 m

 **WARNING:** For reasons of safety, always follow these safety precautions.

### **DO NOT HIT WORK EQUIPMENT**

- When working in places where there are height limits, such as in tunnels, under bridges, under electric cables, or in garages, be extremely careful not to hit the boom or arm.

### **ENSURE GOOD VISIBILITY**

- When working in dark places, install working lamps and head lamps, and set up lighting in the work area if necessary.
- Stop operations if the visibility is poor, such as in mist, snow, or rain, and wait for the weather to improve to a condition that allows the operation to be carried out safely.

### **OPERATE CAREFULLY ON SNOW**

- When working on snow or icy roads, even a slight slope may cause the machine to slip to the side, so always travel at low speed and avoid sudden starting, stopping, or turning.
- When there has been heavy snow, the road shoulder and objects placed beside the road are buried in the snow and cannot be seen, so always carry out snow-clearing operations carefully.

### **WORKING ON LOOSE GROUND**

- Avoid operating your machine too close to the edge of cliffs, overhangs and deep ditches. If these areas collapse, your machine could fall or tip over and result in serious injury or death. Remember that the soil after heavy rain or blasting is weakened in these areas.
- Earth laid on the ground and the soil near ditches are loose. They can collapse under the weight or vibration of your machine.
- Install the HEAD GUARD (FOPS) if working in areas where there is danger of falling rocks and dirt.

### **TWO PIECE BOOM**

- Positioner cylinder rod and boom rod being extended and bucket being retracted, pay utmost attention to base boom lifting since, after a short run, the bucket reaches the cab area and, consequently, danger of collision becomes possible.
- Do not operate the control levers suddenly.
- Do not start or stop the swing suddenly.
- Do not use the swing force for hitting operations.


### **CHECK BEFORE STARTING**

Always carry out the following inspection and maintenance before starting work each day.

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

1. Greasing

- Supply grease to the greasing points shown in the diagram below (total: 16 places).

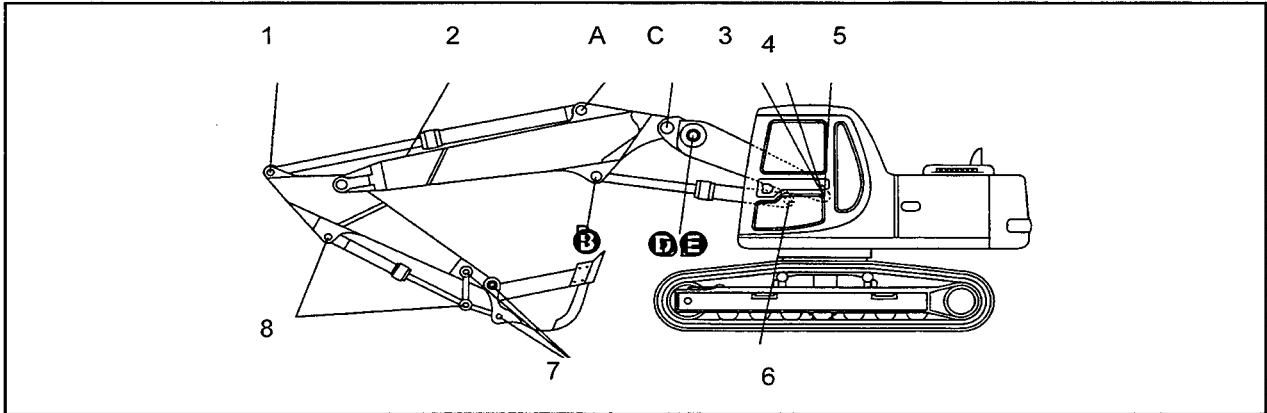


1. Arm cylinder (1 place)	5. Boom foot pin (2 places)
2. 3 places for A, B C	6. Boom cylinder (2 places)
3 Boom cylinders (2 places: D, E)	7. Backhoe and link (3 places)
4 Positioning cylinder (1 place)	8. Bucket cylinder (2 places)

2. Check for cracks, furrows in the base metal.

**OPERATIONS ON SLOPES**

- When working on slopes, there is danger that the machine may lose its balance and turn over when the swing or work equipment are operated. Always carry out these operations carefully.
- Do not swing the work equipment from the uphill side to the downhill side when the bucket is loaded. This operation is dangerous.  
(See the upper diagram on the right.)

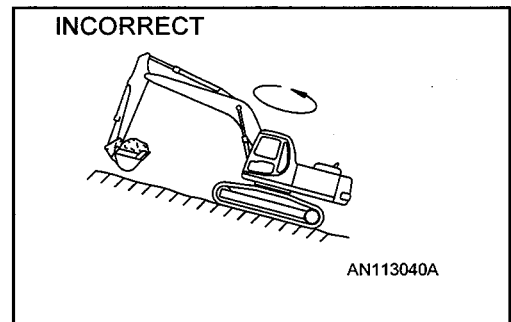




**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

- If the machine has to be used on slope, pile the soil to make a platform that will keep the machine as horizontal as possible. (See the lower diagram on the right.)


**Piled soil on slope** see “PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS” on page 124.

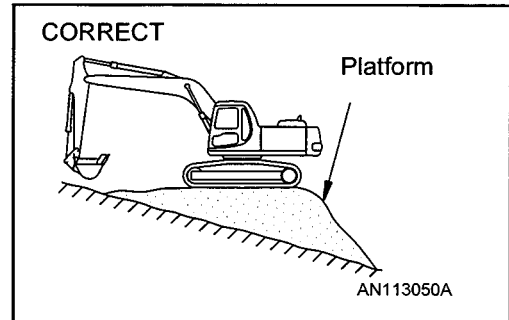

**PARKING THE MACHINE**

- Park on level ground whenever possible. If not possible, block the tracks, lower the bucket to the ground and thrust the bucket in the ground.
- When parking on public roads, provide fences and signs, such as flags or lights, on the machine to warn passers-by to be careful. Be sure that the machine, flags or lights do not obstruct traffic.


**Parking procedure, see “PARKING THE MACHINE” on page 129.**

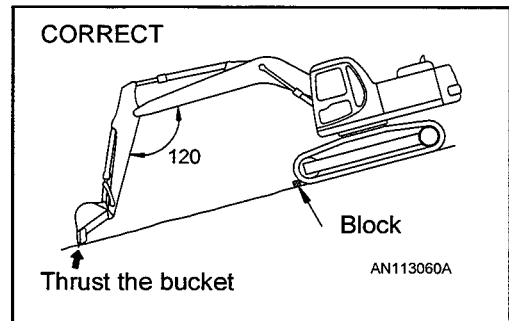

- When leaving the machine, lower the work equipment completely to the ground, set the safety lock lever to the LOCK position, then stop the engine and use the key to lock all the equipment. Always take the key with you.

**Work equipment posture:** see “PARKING THE MACHINE” on page 129.

**Places to lock :** see “LOCKING” on page 132.

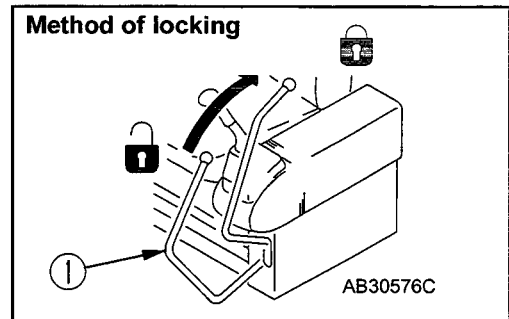

**▲ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

## TRANSPORTATION

### LOADING AND UNLOADING


- Loading and unloading the machine always involves potential hazards. **EXTREME CAUTION SHOULD BE USED.**
- When loading or unloading the machine, run the engine at low idling and travel at low speed.
- Perform loading and unloading on firm, level ground only. Maintain a safe distance from the edge of a road.
- **ALWAYS** block the wheels of the hauling vehicle and place blocks under both ramps before loading and unloading.
- **ALWAYS** use ramps of adequate strength. Be sure the ramps are wide and long enough to provide a safe loading slope.
- Be sure that the ramps are securely positioned and fastened, and that the two sides are at the same level as one another.
- Be sure the ramp surface is clean and free of grease, oil, ice and loose materials. Remove dirt from the machine tracks.
- **NEVER** correct your steering on the ramps. If necessary, drive away from the ramps and climb again.
- Swing the upper structure with extreme care on the trailer to avoid a possible accident caused by body instability.
- After loading, block the machine tracks and secure the machine with tie-downs.

**Loading and unloading : see “TRANSPORTATION” on page 133.**

**Tie-downs : see “TRANSPORTATION” on page 133.**

### SHIPPING

- When shipping the machine on a hauling vehicle, obey all state and local laws governing the weight, width, and length of a load. Also obey all applicable traffic regulations.
- Determine the shipping route while taking into account the width, height and weight of the load.

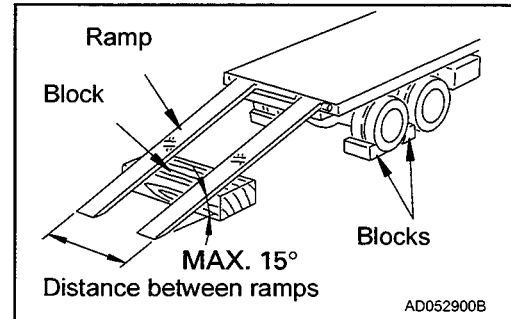

**⚠ WARNING:** For reasons of safety, always follow these safety precautions.





## BATTERY

### BATTERY HAZARD PREVENTION

- Battery electrolyte contains sulphuric acid and can quickly burn the skin and eat holes in clothing. If you spill on yourself, immediately flush the area with water.
- Battery acid could cause blindness if splashed into the eyes. If acid gets into the eyes, flush them immediately with large quantities of water and see a doctor at once.
- If you accidentally drink acid, drink a large quantity of water or milk, beaten egg or vegetable oil. Call a doctor or poison prevention centre immediately.
- When working with batteries. ALWAYS wear safety glasses or goggles.
- Batteries generate hydrogen gas. Hydrogen gas is very **EXPLOSIVE**, and is easily ignited with a small spark or flame.
- Before working with batteries, stop the engine and turn the starting switch to the OFF position.
- Avoid short-circuiting the battery terminals through accidental contact with metallic objects, such as tools, across the terminals.
- When removing or installing, check which is the positive (+) terminal and negative (-) terminal.
- Tighten the battery cap securely.
- Tighten the battery terminals securely. Loosened terminals can generate sparks and lead to an explosion.
- When removing battery cap wear rubber gloves to prevent electrolyte contact with skin.

### STARTING WITH BOOSTER CABLES

- ALWAYS wear safety glasses or goggles when starting the machine with booster cables.
- When starting from another machine, do not allow the two machines to touch.
- Be sure to connect the positive (+) cable first when installing the booster cables. Disconnect the ground or negative (-) cable first when removing them.
- If any tool touches between the positive (+) terminal and the chassis, it will cause sparks. This is dangerous, so be sure to work carefully.
- Connect the batteries in parallel: positive to positive and negative to negative.

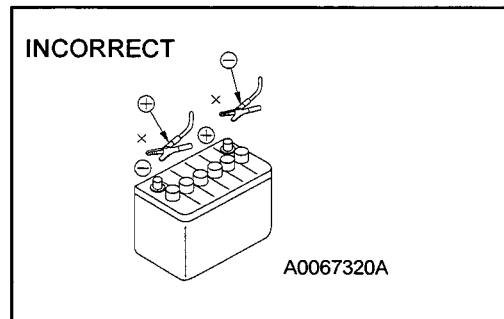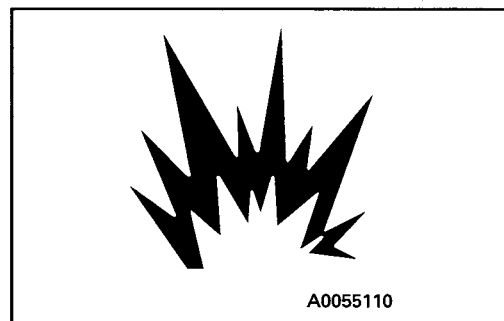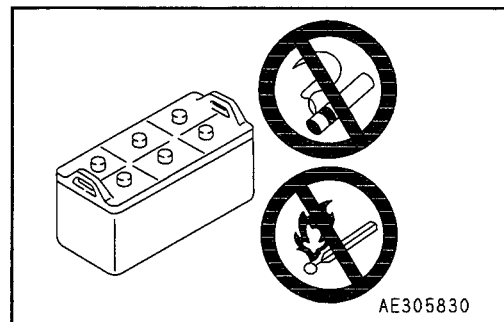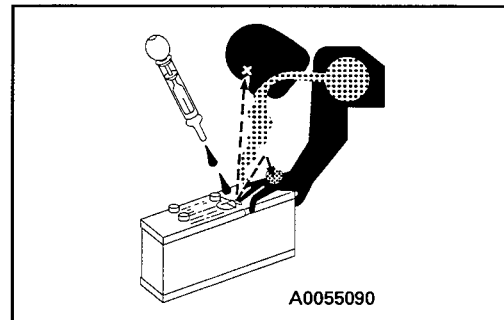

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

- When connecting the ground cable to the frame of the machine to be started, be sure to connect it as far as possible from the battery.




**Starting with booster cables :** see “IF BATTERY IS DISCHARGED” on page 145.

## TOWING

### WHEN TOWING, ATTACH WIRE TO FRAME

- Injury or death could result if a disabled machine is towed incorrectly.
- If your machine is towed by another machine, ALWAYS use a wire rope with a sufficient towing capacity.
- NEVER allow a disabled machine to be towed on a slope.
- Do not use a kinked or frayed wire rope.
- Do not straddle the towing cable or wire rope.
- When connecting up a towing machine, do not let anyone enter the area between the towing machine and the equipment being towed.
- Set the towing machine and the towing connection of the equipment being towed in a straight line when connecting it.
- Place pieces of wood between the wire ropes and body to protect them from wear or damage.
- Never tow the machine using the light-duty towing hole.

**Towing method** see “METHOD OF TOWING MACHINE” on page 143.

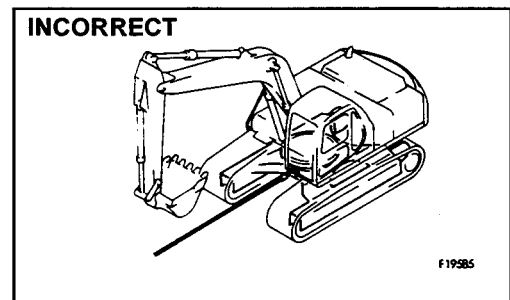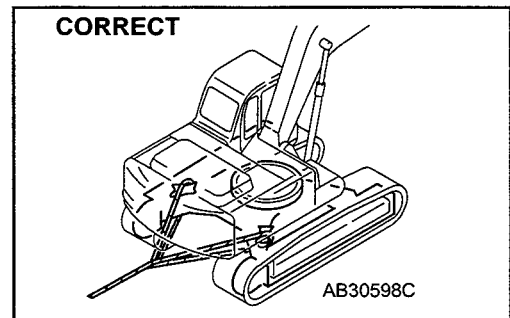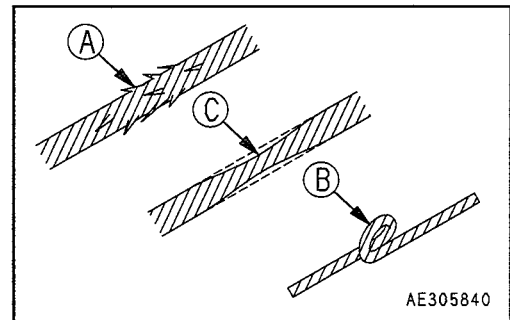


**▲ WARNING:** For reasons of safety, always follow these safety precautions.

## BUCKET WITH HOOK

### GENERAL PRECAUTIONS

#### SPECIAL HOOK

- When carrying out lifting work, the special lifting hook is necessary.
- The following operations are prohibited.
  - Lifting loads with a wire rope fitted around the bucket teeth.
  - Lifting loads with the wire rope wrapped directly around the boom or arm.

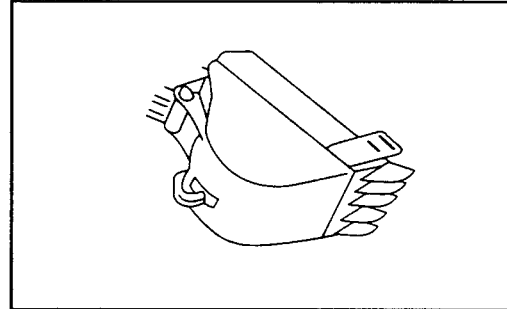

#### CHECKING HOOK

- When lifting a load, carry out the following checks to confirm that there is no abnormality before starting operations.
  - Check that there are no cracks or deformation in the lifting equipment.
  - Check that there is no abnormality in the stopper device.

#### HOOKING WIRE ROPE SECURELY TO HOOK

- When performing lifting operation, securely hook the wire rope onto the special lifting hook.

#### PRECAUTIONS FOR MACHINE INSTALLATION

- After carrying out a preliminary inspection of ground conditions, select a flat, solid location. Confirm that the machine can be safely operated without toppling or rolling.

#### PROHIBITED OPERATIONS OTHER THAN MAIN APPLICATIONS

- When performing lifting operation, never raise or lower a person.

#### NO PERSONS SHALL BE PERMITTED TO ENTER THE WORKING AREA

- Due to the possible danger of the load falling or of collision with the load, no persons shall be allowed in the working area.

#### OPERATION SUPERVISOR

- Before performing lifting operation, designate an operation supervisor.

**▲** **WARNING:** Failure to follow these safety precautions may lead to a serious accident.

**Always execute operation according to his instructions.**

- Execute operating methods and procedures under his direction.
- Select a person responsible for signalling. Operate only on signals given by such person.

**HANDLING OF WIRE ROPES ETC.**

- Wear leather gloves when handling wire ropes.

**HANDLING OF FLUIDS**

- Some oils and other fluids, such as Antifreeze, can be harmful to you and the environment, you should therefore always follow the manufacturers instructions regarding storage, handling and disposal.

**HANDLING OF USED ENGINE OILS**

- Avoid contact with used engine oils.
- Refer to engine oils data sheet for handling and storage precautions.

**HANDLING OF OILS**

- For diesel oils, hydraulic oils and oils used in the swing machinery, PTO, transmission axles and hubs avoid prolonged or frequent contact with skin.
- Refer to manufacturers data sheet for handling and storage precautions.

**HANDLING OF FLUIDS**

- For antifreeze and grease refer to manufacturers data sheet for handling and storage precautions.

**PROTECTING EYES**

- Some oils and fluids can damage eyes. Refer to manufactured data sheet for handling and storage instructions.

**PRECAUTIONS FOR LIFTING OPERATION**

**GRADUAL LIFTING OPERATION**

- When carrying out lifting operations, run the engine at low idling and use the L.O. (lifting operation mode).
- Avoid sudden lever shifting and acceleration.
- Swing speed is three to four times that of movable cranes. Therefore, be especially careful when performing swing operation.


**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

### NEVER LEAVE THE OPERATOR'S SEAT

- Never leave the operator's seat while lifting a load.

### NEVER CARRY OUT EXCESSIVE OPERATIONS

- Operation exceeding machine performance may result in accident or failure.
- Carry out lifting operation within specified load limit.
- Never carry out operations which may damage the machine such as overload or over-impact-load.

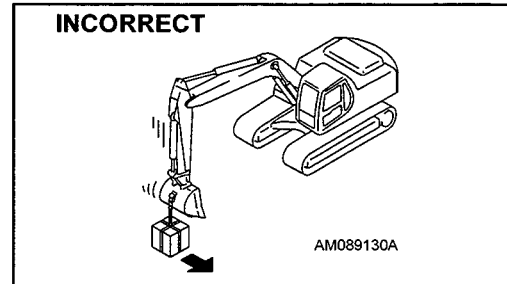


- Never drag a load laterally or longitudinally, nor retract the arm, otherwise, a dangerous situation may result.

### NEVER TRAVELLING WHILE LIFTING A LOAD

- Never travel while carrying a load.

### OPERATING POSTURE

- If the machine posture is not correct, the wire ropes or ring may detach from the hook. Confirm that the hook angle is correct to avoid this.

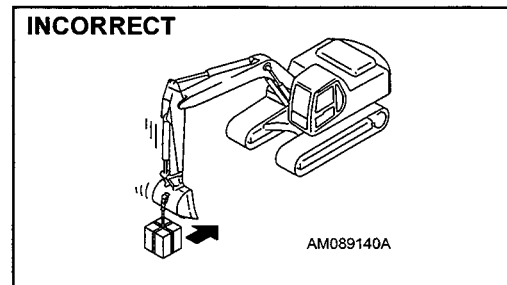

### BE CAREFUL NOT TO HIT THE OBJECT BEING HANDLED

- Always keep the proper distance between the work being handled and the operator's cab when carrying out operations.


**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

## PRECAUTIONS FOR MAINTENANCE

### BEFORE CARRYING OUT MAINTENANCE

#### WARNING TAG

- If others start the engine or operate the controls while you are performing service or lubrication, you could suffer serious injury or death.
- ALWAYS attach the WARNING TAG to the control lever in the operator's cab to alert others that you are working on the machine. Attach additional warning tags around the machine, if necessary.
- These tags are available from your Komatsu distributor. (Part no. 20E-00-K1340)

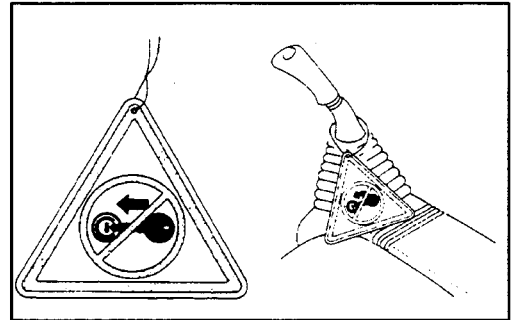

#### PROPER TOOLS


- Use only tools suited to the task. Using damaged, low quality, faulty, or makeshift tools could cause personal injury.

**Tools :** see "LIST OF NECESSARY TOOLS" on page 169.

#### PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS

- Replace the following fire-related components periodically:
  - Fuel system: Fuel hose, spilling hose, and fuel tube cap
  - Hydraulic system: Pump outlet hose, and front and rear pump branch hoses
- Replace these components periodically with new ones, regardless of whether or not they appear to be defective. These components deteriorate over time.
- Replace or repair any such components if any defect is found, event though they have not reached the time specified.

**Replacement of safety critical components :** see "PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS" on page 171.

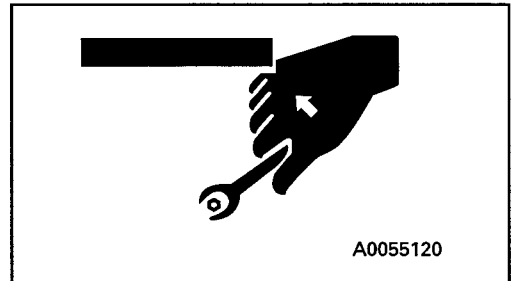





**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

**STOP THE ENGINE BEFORE CARRYING OUT INSPECTION AND MAINTENANCE**

- Always stop the machine on firm flat ground and stop the engine before carrying out inspection and maintenance.
- If it is necessary to run the engine when carrying out maintenance, such as when cleaning the inside of the radiator, place the safety lock lever at the LOCK position (1) and carry out the operation with two workers.

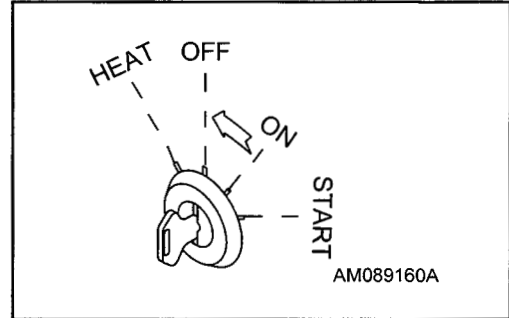


- One worker should sit in the operator's seat so that he can stop the engine immediately if necessary. He should also be extremely careful not to touch any lever by mistake. Touch the levers only when they have to be operated.
- The worker carrying out the maintenance should be extremely careful not to touch or get caught in the moving parts.

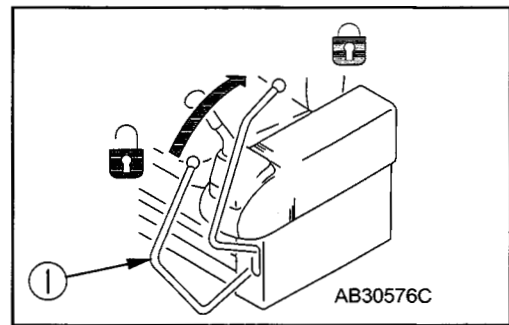


**RULES TO FOLLOW WHEN ADDING FUEL OR OIL**

- Spilt fuel and oil may cause you to slip, so always wipe it up immediately.

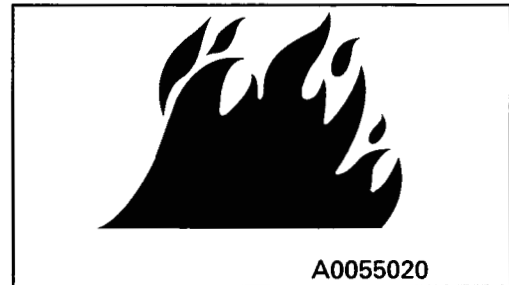

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

- Always tighten the cap of the fuel and oil fillers securely.
- Never use fuel for washing any parts.

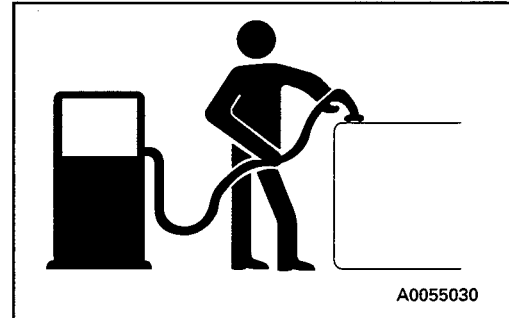


- Always add fuel and oil in a well-ventilated place.




### RADIATOR WATER LEVEL

- If it is necessary to add water to the radiator, stop the engine and allow the engine and radiator to cool down before adding the water.

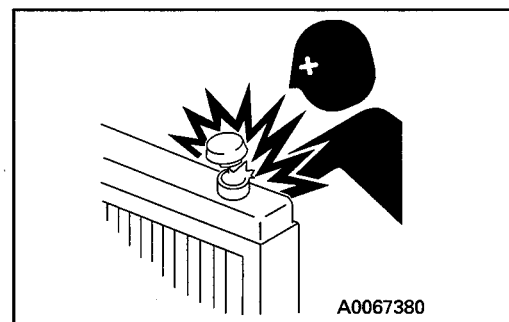


- Slowly loosen the caps to relieve pressure before removing the caps.

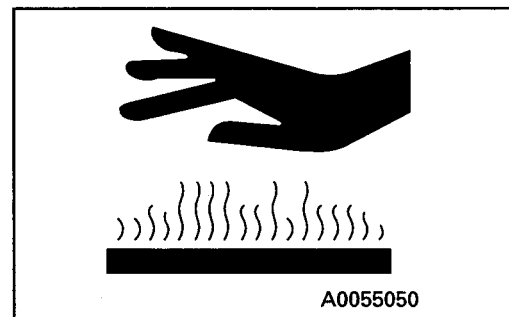

**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

### USE OF LIGHTING

- When checking fuel, oil, coolant, or battery electrolyte, always use lighting with anti-explosion specifications. If such lighting equipment is not used, there is danger of explosion.

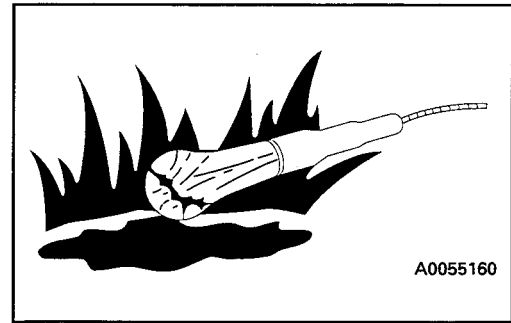


## DURING MAINTENANCE

### PERSONNEL

- Only authorised personnel can service and repair the machine. Extra precaution should be used when grinding, welding, and using a sledge-hammer.

### ATTACHMENTS

- Place attachments that have been removed from the machine in a safe place so that they do not fall. If they fall on you or others, serious injury could result.
- Do not let and children or unauthorized personnel into the place where the attachments are stored.

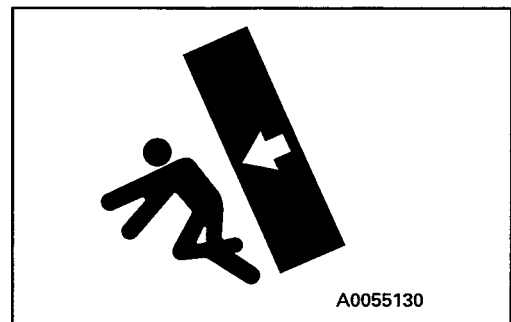

### STABILISE THE WORK EQUIPMENT FIRST

Always lower the work equipment to the ground before carrying out maintenance.


- If maintenance must be carried out with the work equipment raised, always support it with safety supports or safety blocks.
- When the boom or arm are repaired, they cannot be supported by the hydraulic cylinder alone, so always support them on a stand.

If they are supported only by the hydraulic cylinder, there is danger that the work equipment will drop if the control lever is touched by mistake or if there is any damage to the hydraulic line.

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.


### WORK UNDER THE MACHINE

- Always lower all movable work equipment to the ground or to their lowest position before performing service or repairs under the machine.
- Always block the track shoes of the machine securely.
- Never work under the machine if the machine is poorly supported.

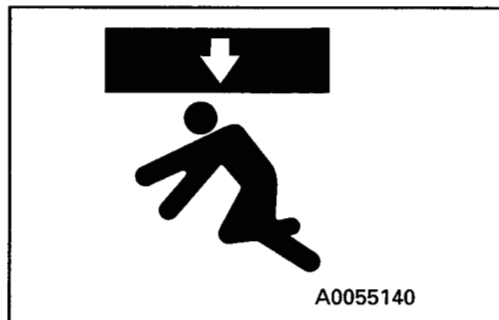


### KEEP THE MACHINE CLEAN

- Spilt oil or grease, or scattered tools or broken pieces are dangerous because they may cause you to slip or trip. Always keep your machine clean and tidy.

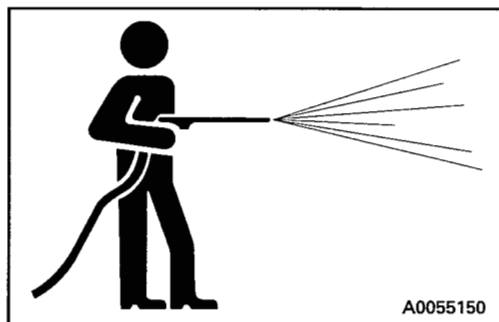

- If water gets into the electrical system, there is danger that the machine may not move or may move unexpectedly. Do not use water or steam to clean the sensors, connectors, or the inside of the operator's compartment.

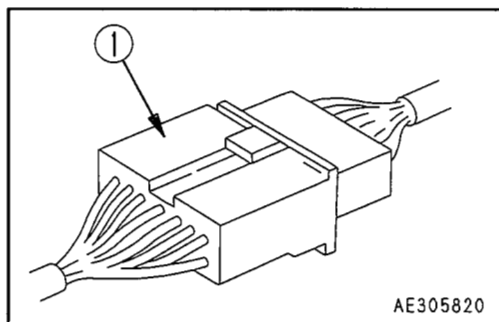

### PRECAUTIONS WITH BATTERY

- When repairing the electrical system or when carrying out electrical welding, remove the negative (-) terminal of the battery to stop the flow of current.



**⚠ WARNING:** For reasons of safety, always follow these safety precautions.

### HANDLING HIGH-PRESSURE HOSES


- Do not bend high-pressure hoses or hit them with hard objects. Do not use any bent or cracked piping, tubes or hoses. They may burst during use.
- Always repair any loose or broken fuel hoses or oil hoses. If fuel or oil leaks, it may cause a fire.

### PRECAUTIONS WITH HIGH PRESSURE OIL

- Do not forget that the work equipment circuits are always under pressure.
- Do not add oil, drain oil, or carry out maintenance or inspection before completely releasing the internal pressure.



- If oil is leaking under high pressure from small holes, it is dangerous if the jet of high-pressure oil hits your skin or enters your eyes. Always wear safety glasses and thick gloves, and use a piece of cardboard or a sheet of wood to check for oil leakage.
- If you are hit by a jet of high-pressure oil, consult a doctor immediately for medical attention.

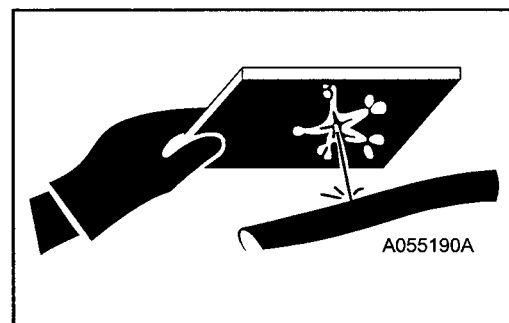

### BE CAREFUL OF FIRE OR EXPLOSION

- Oil is highly flammable, so do not weld or gas cut any tube or pipe that contains oil. Do not carry out any heating or welding close to hydraulic equipment or piping. When carrying out such work, remove the oil first and wash the part.
- Always check that part such as clamps used to prevent vibration, guards used to prevent rubbing against other parts, and heat proof boards used for heated parts are installed properly.

**⚠ WARNING:** Failure to follow these safety precautions may lead to a serious accident.

### PRECAUTIONS WHEN CARRYING OUT MAINTENANCE AT HIGH TEMPERATURE OR HIGH PRESSURE

- Immediately after stopping operations, the engine cooling water and oil at all parts is at high temperature and under high pressure.

In this condition, if the cap is removed, or the oil or water are drained, or the filters are replaced, this may result in burns or other injury. Wait for the temperature to go down, then carry out the inspection and maintenance in accordance with the procedures given in this manual.



**Cleaning inside or cooling system:** see “INITIAL 250 HOURS SERVICE” on page 178.

**Checking cooling water level, hydraulic oil level :** see “CHECK BEFORE STARTING” on page 190.

**Checking lubricating oil level, adding oil:** see “MAINTENANCE SCHEDULE CHART” on page 174.”

**Changing oil, replacing filters:** see “MAINTENANCE SCHEDULE CHART” on page 174.”

### PRECAUTIONS FOR REMOVAL AND INSTALLATION OPERATIONS

When removing or installing attachments, obey the following precautions and take care to ensure safety during the operation.

- Carry out the removal and installation operations on a flat, firm ground surface.
- When the operation is carried out by two or more workers, determine signals and follow these during the operation.
- When carrying heavy objects (more than 25 kg), use a crane.
- When removing heavy parts, always support the part before removing it.
- When lifting such heavy parts with a crane, always pay careful attention to the position of the center of gravity.
- It is dangerous to carry out operations with the load kept suspended. Always set the load on a stand, and check that it is safe.
- When removing or installing attachments, make sure that they are in a stable condition and will not fall over.
- Never go under a load suspended from a crane. Always stand in a position that is safe even if the load should fall.


**▲ WARNING:** For reasons of safety, always follow these safety precautions.

For details of removal and installation operations, please contact your Komatsu distributor.

**PRECAUTIONS WHEN USING HIGH PRESSURE GREASE TO ADJUST TRACK TENSION**


- Grease is pumped into the track tension adjustment system under high pressure. If the specified procedure for maintenance is not followed when making adjustments, the plug or grease fitting may fly out and cause damage or personal injury.
- When loosening the grease drain plug, never loosen it more than one turn.
- Never put your face, hands, feet, or any other part of your body directly in front of any grease drain plug or valve.

**Adjusting track tension: see “WHEN REQUIRED” on page 178.”**

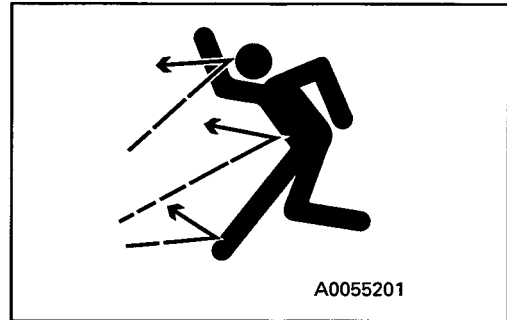


**ROTATING FAN AND BELT**

- Keep away from rotating parts and be careful not to let anything get caught in them.
- If your body or tools touch the fan blades or fan belt, they may be cut off or sent flying, so never touch any rotating parts.

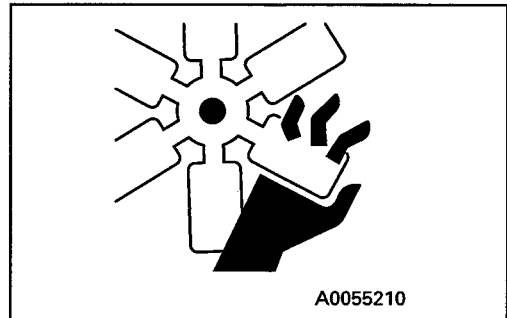

**WASTE MATERIALS**

- Never dump waste oil in a sewer system, rivers, etc.
- Always put oil drained from your machine in containers. Never drain oil directly on the ground.
- Obey appropriate laws and regulations when disposing of harmful objects such as oil, fuel, coolant, solvent, filters, batteries, and others.

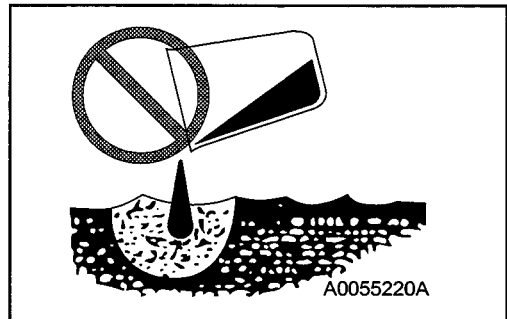

**▲** WARNING: Failure to follow these safety precautions may lead to a serious accident.


## POSITION FOR ATTACHING SAFETY LABELS

Always keep these labels clean. If they are lost or damaged, attach them again or replace them with a new label.

There are other labels in addition to the safety labels listed as follows, so handle them in the same way.

Safety labels are available from your Komatsu distributor.


## POSITION FOR ATTACHING SAFETY LABELS

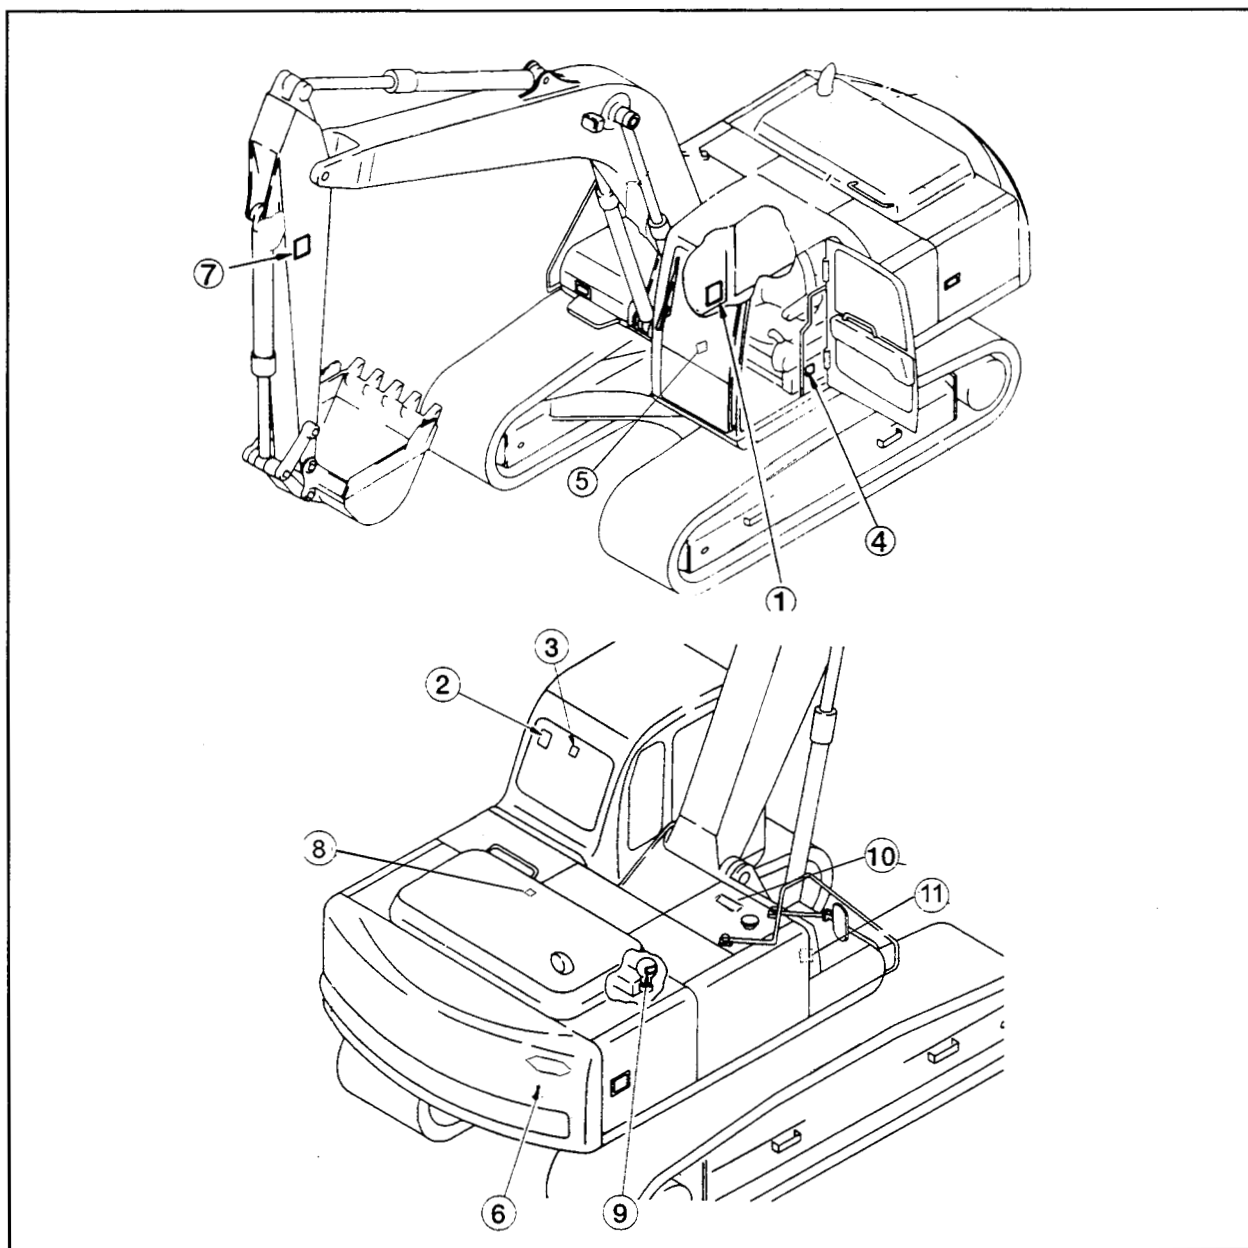




1. Warnings for operation, inspection and maintenance  
(20E-00-K1170)

- Improper operation and maintenance can cause serious injury or death.
- Read the manual and labels before operation and maintenance.  
Follow instructions and warnings in manual and in labels on machine.
- Keep the manual in machine cab near operator.  
If this manual is lost, please contact your Komatsu distributor for a replacement.

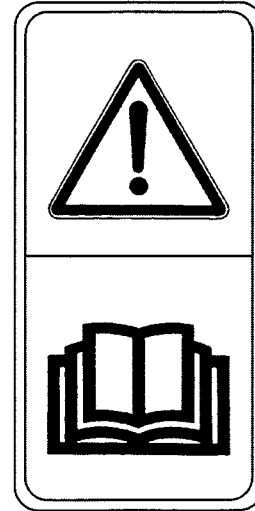


- Always apply lock when leaving operator's seat.

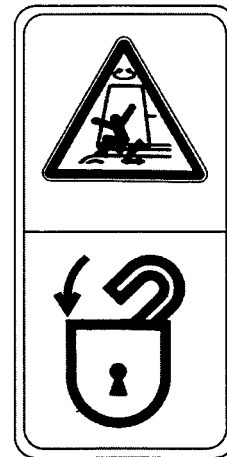


## 2. Warnings when opening front window (20E-00-K1230)

- When raising window, lock it in place with lock pins on both sides.
- Falling window can cause injury.

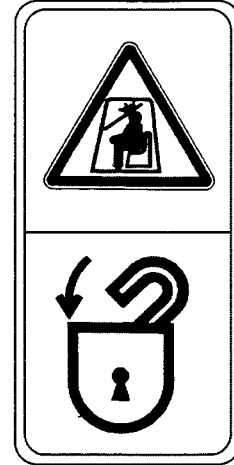


## 3. 20Y-00-K2220

- Emergency exit
- Read operation manual before operation

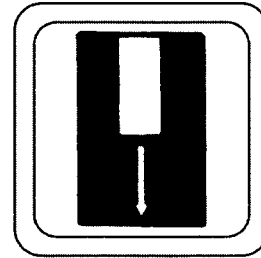


## 4. 20E-00-K1130

- **WARNING - No passengers**  
No passengers allowed to ride on machine while it is moving
- **WARNING - DANGER OF FALLING OBJECTS**  
Do not operate where a danger of falling objects exists.  
Consult your dealer for fitting of FOPS protection.
- **HAZARDOUS - Voltage hazard**  
Serious injury or death can occur if machine or attachments are not kept safe distance away from electric lines.

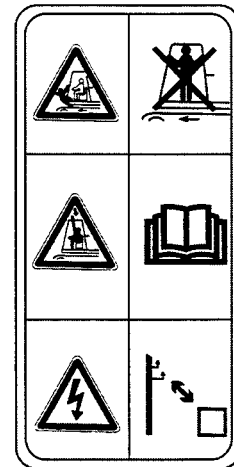

5. 20E-00-K1280

- Pump Control override switch and swing lock override switch
- Read the operation manual before operation

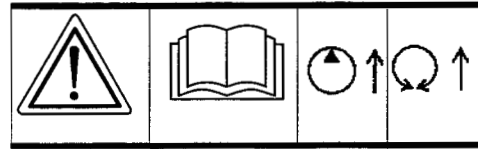


6. 20E-00-51150

Keeping out of moving area

To prevent SEVERE INJURY or DEATH do the following before moving machine or its attachments:

- Sound horn to alert people nearby.
- Be sure no one is on or near machine or in the swing area.
- Rotate cab for full view of travel path if it can be done safely.
- Use spotter if view is obstructed.


Always follow the above

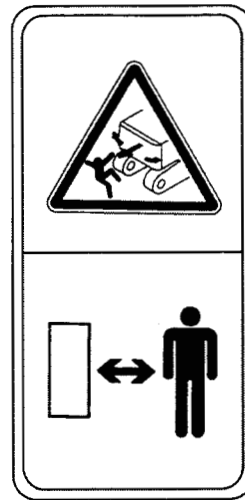

7. 20E-00-K1140


Keeping out of working range area.

- Make sure no one is in the work equipment swing area.

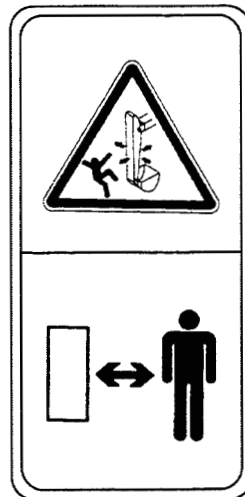

## 8. 20E-00-K1310


- Do not open cover while engine is running.

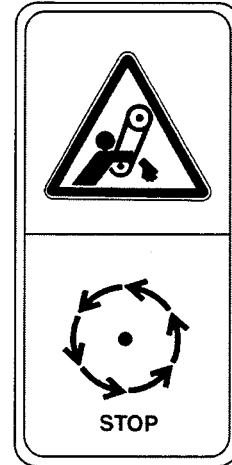

## 9. (20E-00-K1210) Warnings for handling the accumulator

## Explosion hazard

- Keep away from flame.
- Do not weld or drill.
- Read operation manual before operation.

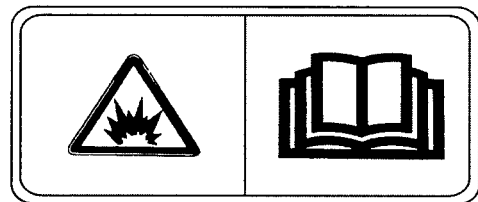

## 10. 20E-00-K1190


## Warning for high temperature coolant and oil.

## Hot water and oil hazard

## To prevent hot water and oil from spurting out:


- Turn engine off.
- Allow water to cool.
- Slowly loosen cap to relieve pressure before removing.

## Read operation manual before operation.

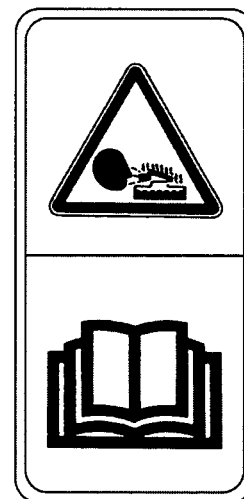

## 11. 20E-00-K1110

- Warning for falling from upper-structure.
- Keep away from sides of machine.
- Keep of counterweight.
- Do not ride on machine when it is moving

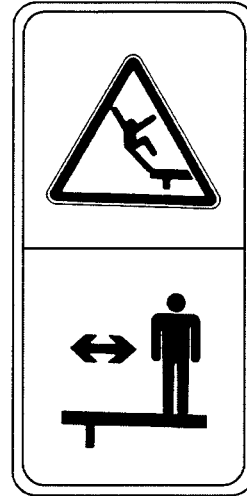


# OPERATION

# GENERAL VIEW

## GENERAL VIEW OF MACHINE

If directions are indicated in this section, they refer to the directions shown by the arrows in the diagram below.


A : FRONT	B : REAR	C : RIGHT	D : LEFT
-----------	----------	-----------	----------

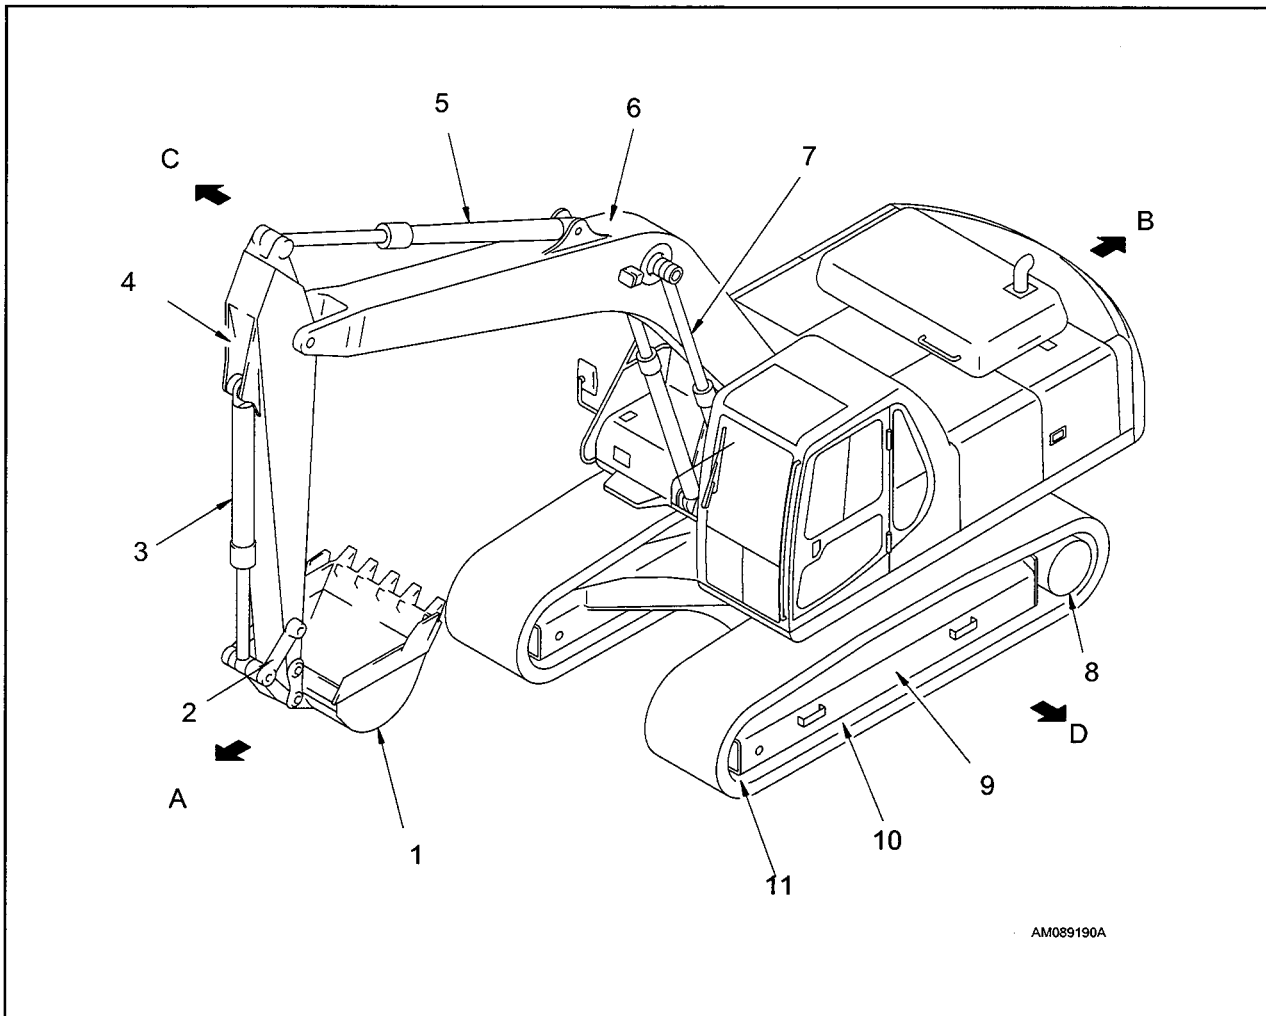

AM089190A

- |                    |                  |
|--------------------|------------------|
| 1. Bucket          | 7. Boom cylinder |
| 2. Bucket link     | 8. Sprocket      |
| 3. Bucket cylinder | 9. Track frame   |
| 4. Arm             | 10. Track shoes  |
| 5. Arm cylinder    | 11. Idler        |
| 6. Boom            |                  |


## GENERAL VIEW OF CONTROLS AND GAUGES

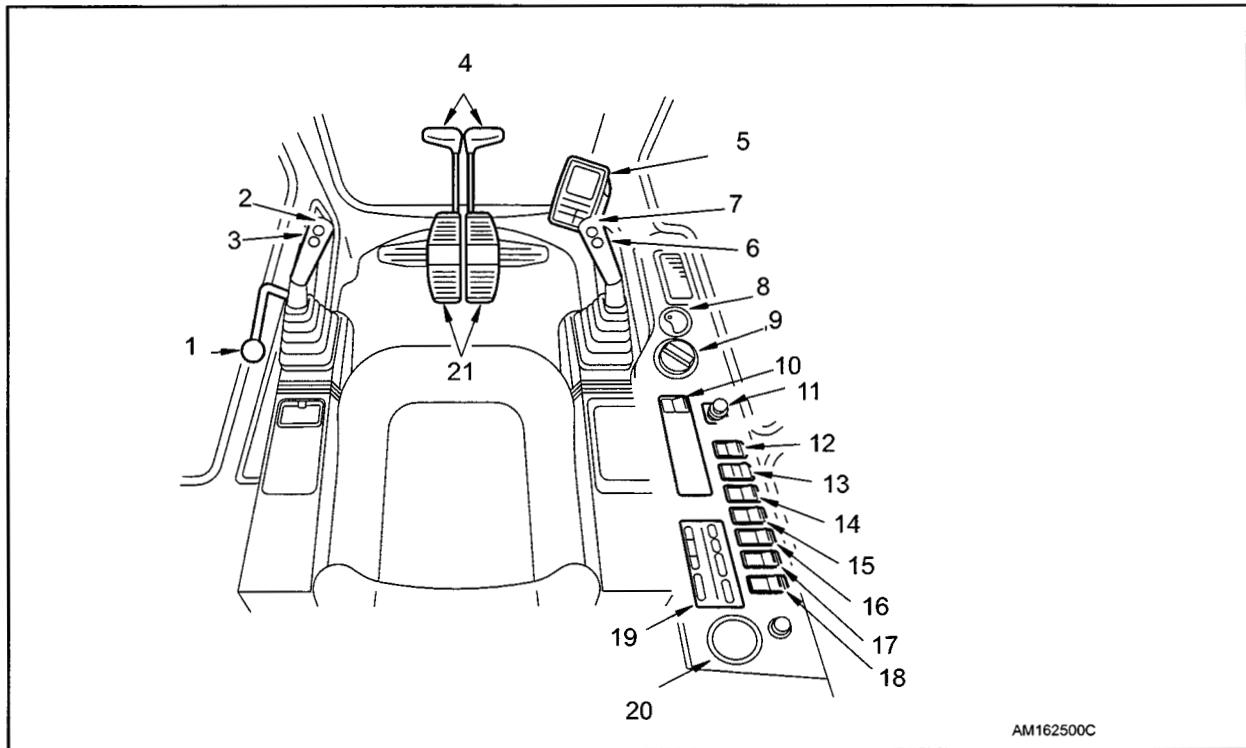

AM162500C

1. Safety lock lever	12. Swing lock switch
2. Left work equipment control lever	13. Wiper switch
3. Knob button (Power Max) (lower button)	14. Lamp switch
4. Travel lever	15. Alarm buzzer stop
5. Machine monitor	16. Lower wiper switch (option)
6. Horn button (lower button)	17. Rotating beacon switch (option)
7. Right work equipment control lever	18. Heated operator seat switch (option)
8. Ignition key	19. Heater/air conditioner control switch
9. Fuel control dial	20. 12V power supply
10. Flow control switch (option)	21. Travel pedal
11. Cigarette lighter	



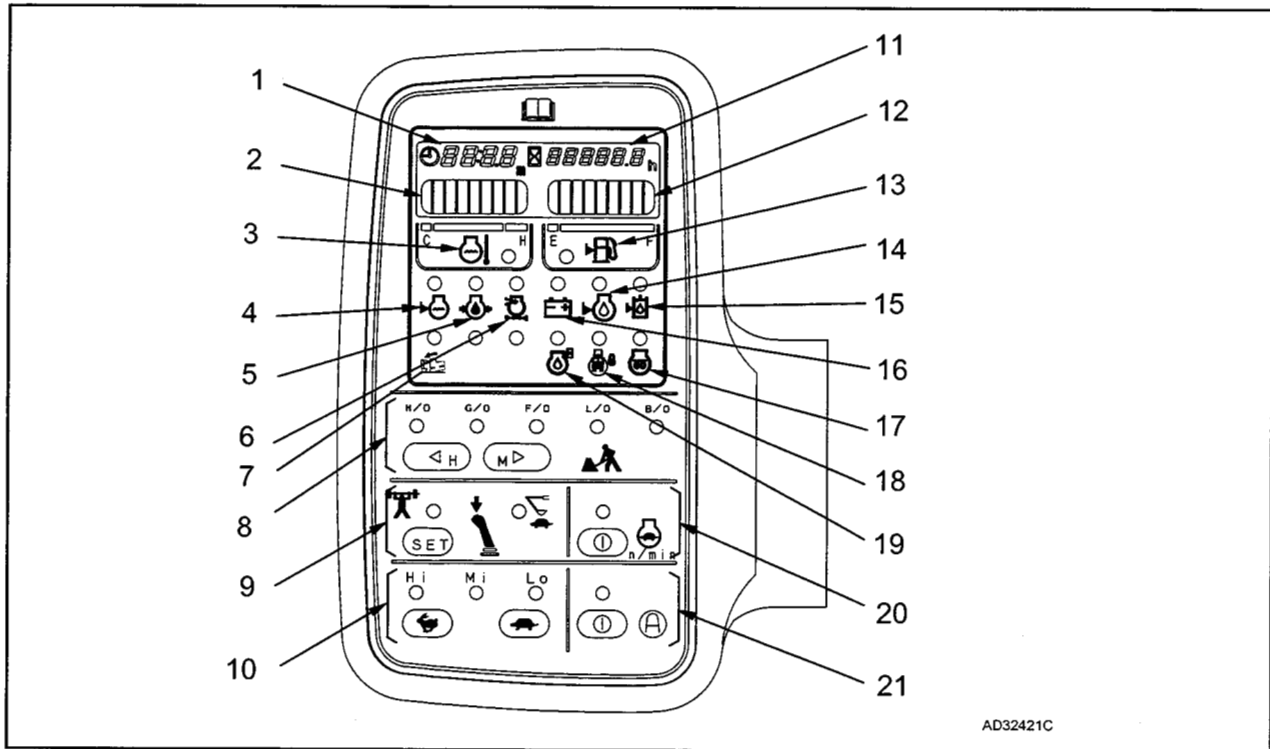

AD32421C


- |   |                                    |
|---|------------------------------------|
| 1. Display (for clock and fault indication) | 11. Service meter                  |
| 2. Engine water temperature gauge           | 12. Fuel gauge                     |
| 3. Engine water temperature monitor         | 13. Fuel level monitor             |
| 4. Radiator water level monitor             | 14. Engine oil level monitor       |
| 5. Engine oil pressure monitor              | 15. Hydraulic oil level monitor    |
| 6. Air cleaner clogging monitor             | 16. Charge level monitor           |
| 7. Overload caution monitor                 | 17. Engine preheating monitor      |
| 8. Working mode selector switch             | 18. Swing lock monitor             |
| 9. Power-max, swift slow-down switch        | 19. Engine oil replacement monitor |
| 10. Travel speed switch                     | 20. Auto-deceleration switch       |
|   | 21. Active mode switch             |

# EXPLANATION OF COMPONENTS

The following is an explanation of the devices needed for operating the machine.

To carry out suitable operations correctly and safely, it is important to understand fully the methods of operating the equipment and the meanings of the displays.

## MACHINE MONITOR

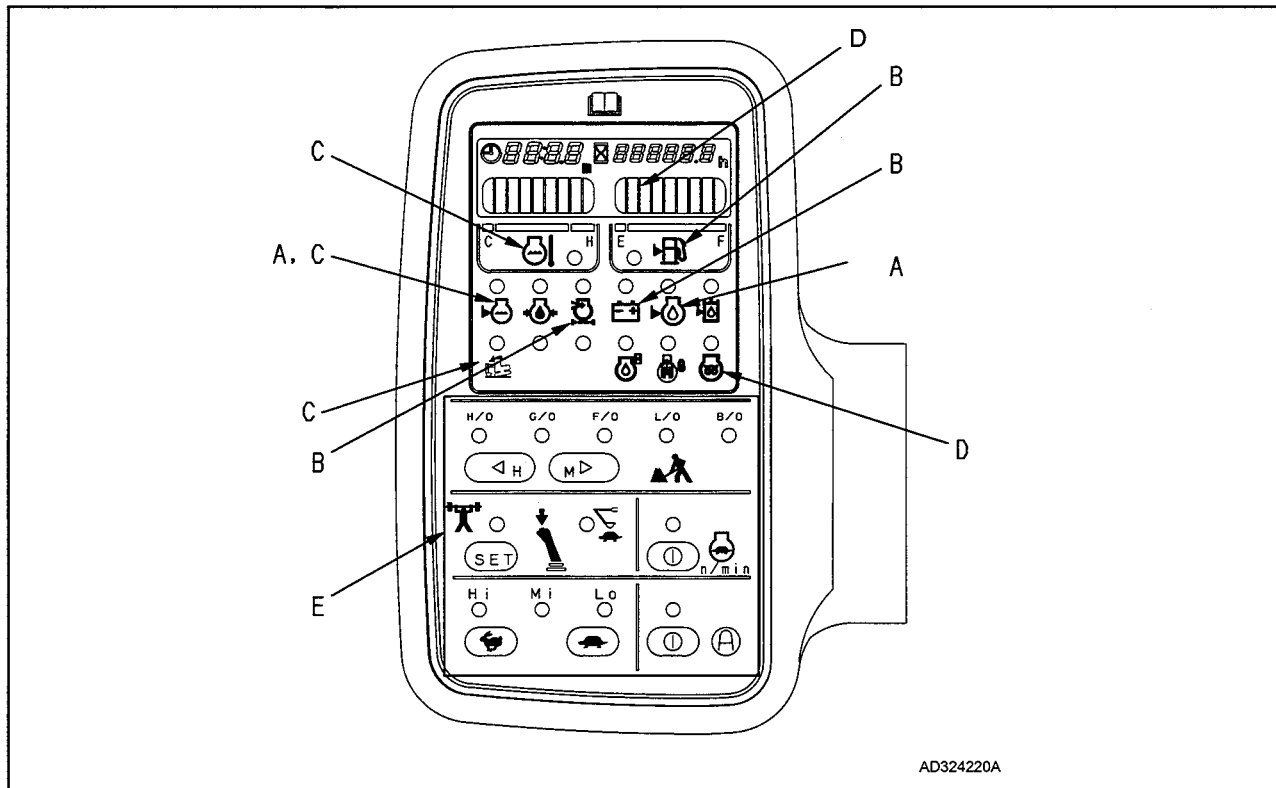

### A. BASIC CHECK ITEMS

This displays the basic items that should be checked before starting the engine.

If there is any abnormality, the appropriate monitor lamp will flash.

### NOTICE

**When carrying out checks before starting, do not simply rely on the monitor. Always refer to the periodic maintenance items or "OPERATION" on page 91 to carry out the checks.**

## B. CAUTION ITEMS

---

---

**▲ CAUTION**

---

---

**If these monitor items flash, check and repair the appropriate location as soon as possible.**

---

---

These are items which need to be observed while the engine is running. If any abnormality occurs, items which need to be repaired as soon as possible are displayed.

If there is any abnormality, the appropriate monitor lamp will flash to indicate the location of the abnormality.

## C. EMERGENCY STOP ITEMS

---

---

**▲ CAUTION**

---

---

**If these monitors items flash, stop operations immediately, then check and repair the appropriate location.**

---

---

These are items which need to be observed while the engine is running. If any abnormality occurs, items which need to be repaired immediately are displayed.

If there is any abnormality, the appropriate monitor lamp will flash to indicate the location of the abnormality and the buzzer will sound.


## D. METER DISPLAY PORTION

This portion consists of pre-heating monitor, swing lock monitor, engine water temperature gauge, fuel gauge and display.

## E. SWITCHES

The switches are used for setting clock time and for selecting working mode and travel speed.

**A: BASIC CHECK ITEMS**

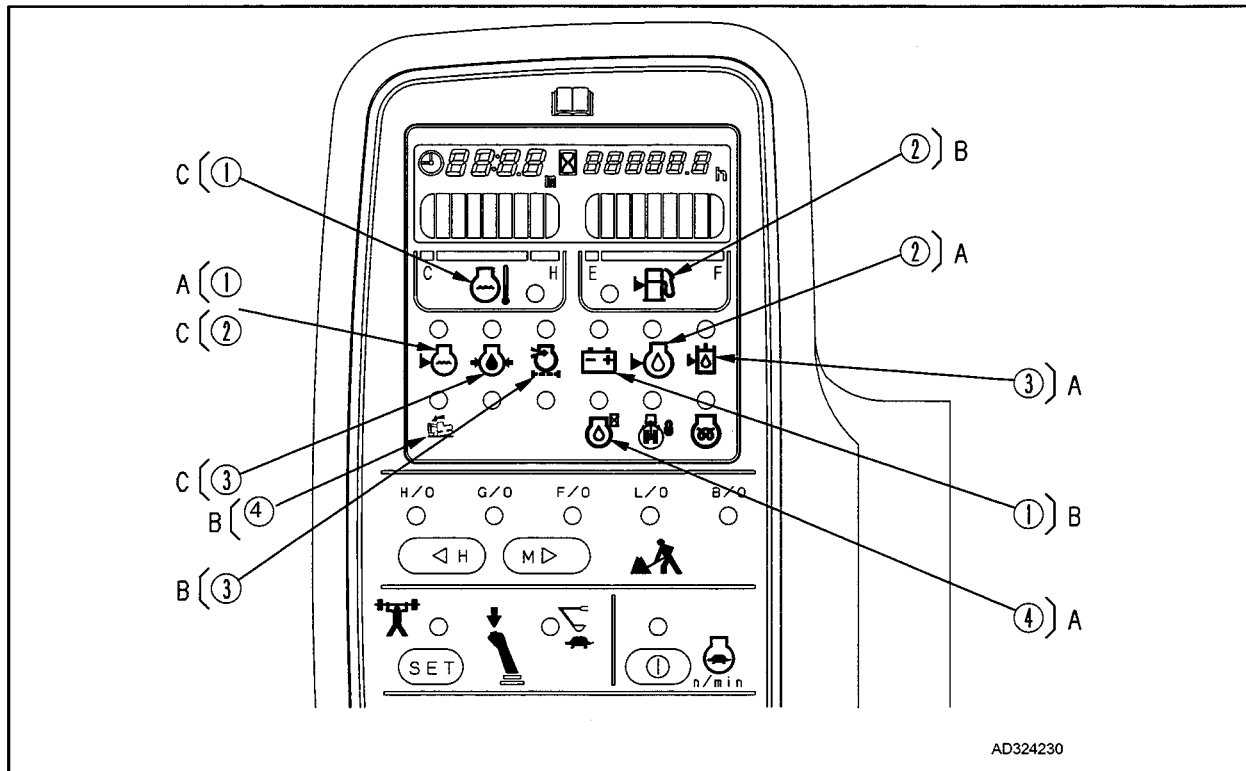


AD324230

**NOTICE**

- Do not rely on the “BASIC CHECK ITEMS” only for the check before starting
- Always refer to the periodic maintenance items or “OPERATION” on page 91 to carry out the checks.

**1. RADIATOR WATER LEVEL**


This warns that the radiator cooling water level is too low. If the monitor lamp flashes, check the cooling water level in the radiator and reserve tank, and add water.

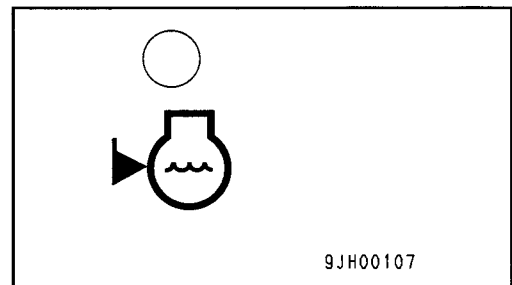

9JH00107

**2. ENGINE OIL LEVEL**


This warns that the oil level in the engine oil pan is too low. If the monitor lamp flashes, check the oil level in the engine oil pan, and add oil.

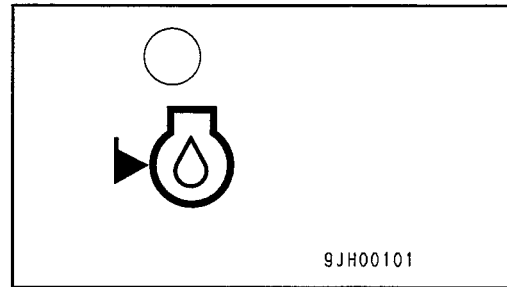

**3. HYDRAULIC OIL LEVEL**


This warns that the hydraulic oil level is to low.

If the monitor lamp flashes, check the hydraulic oil level, and add oil.

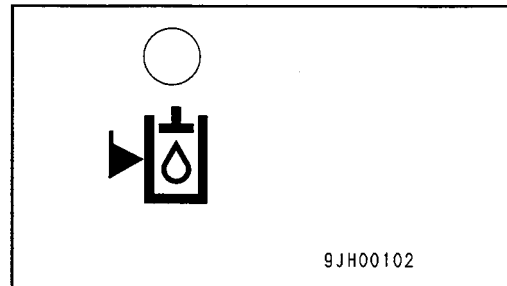

**4. REPLACEMENT OF ENGINE OIL (for only set machines)**

If the set time (125, 250, 500H) passes after the engine oil is replaced, this lamp lights up. At this time, replace the engine oil.

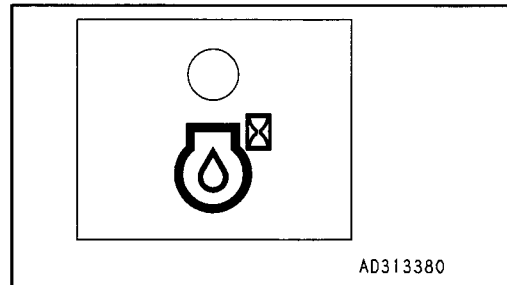


**B: CAUTION ITEMS**

**CAUTION**

If the caution monitor lamp flashes, repair the problem as soon as possible.

**1. CHARGE LEVEL**

This monitor indicates an abnormality in the charging system while the engine is running. If the monitor lamp flashes, check the V-belt tension. If any abnormality is found, see "OTHER TROUBLE" on page 148.

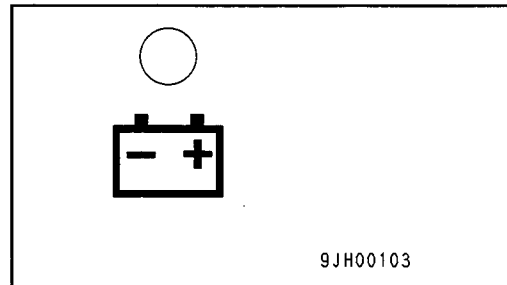


**REMARK**

While the starting switch is ON, the lamp will remain lit and will go off once the engine is started.


**2. FUEL LEVEL**

If the fuel drops below 25 litres, the lamp will flash. Top up the fuel before this.

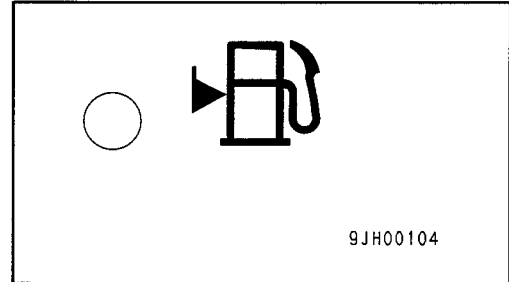
**3. AIR CLEANER CLOGGING**

This warns that the air cleaner is clogged.

If the monitor lamp flashes, stop the engine then inspect and clean the air cleaner.

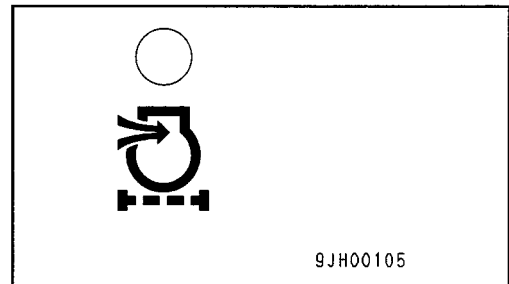**4. OVERLOAD CAUTION (When lifting)**

This warns that the machine is close to tipping due to the load (an audible warning is also given), if the warning is given lower the load. Refer to the lifting capacity chart for safe load.

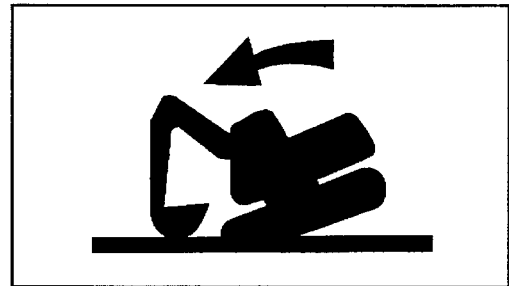**C: EMERGENCY STOP ITEMS**


**CAUTION**

**If any monitor lamp flashes, stop the engine or run it at low idling, and take the following action.**

**1. ENGINE WATER TEMPERATURE**


If the temperature of the engine cooling water becomes abnormally high, the monitor lamp flashes, and the overheat prevention system is automatically actuated to reduce the engine speed.

Stop operations and run the engine at low idling until the engine water temperature gauge enters the green range.

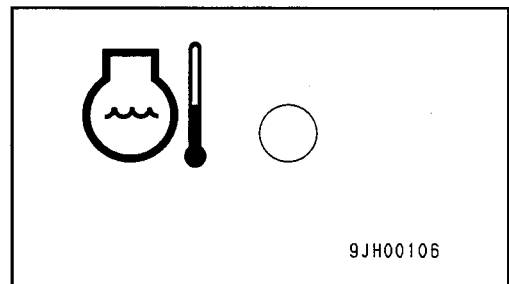

**2. RADIATOR WATER LEVEL**

If the radiator water level drops, the monitor lamp flashes. Stop the engine, check the radiator water level, and add water if necessary.

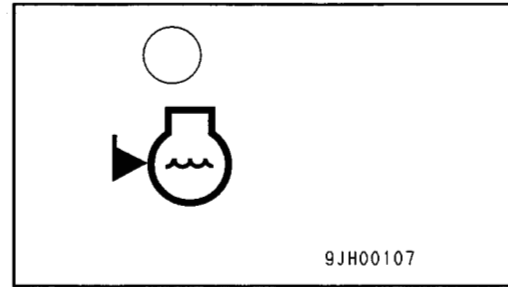


**3. ENGINE OIL PRESSURE**


If the engine oil pressure drops below the normal pressure, the monitor lamp flashes. At this item, stop the engine and inspect it according to, see "OTHER TROUBLE" on page 148.

**REMARK**

While the starting switch is ON, the lamp remains lit and goes off once the engine is started. When the engine starts, the buzzer may sound for a short time, however, this does not indicate a fault.

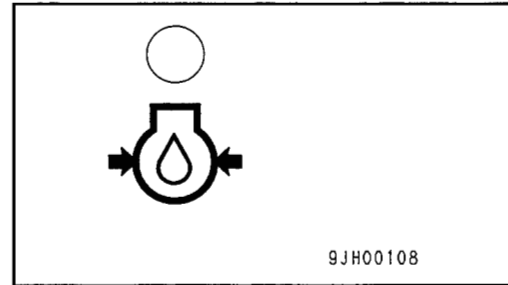

**D: METER DISPLAY PORTION**

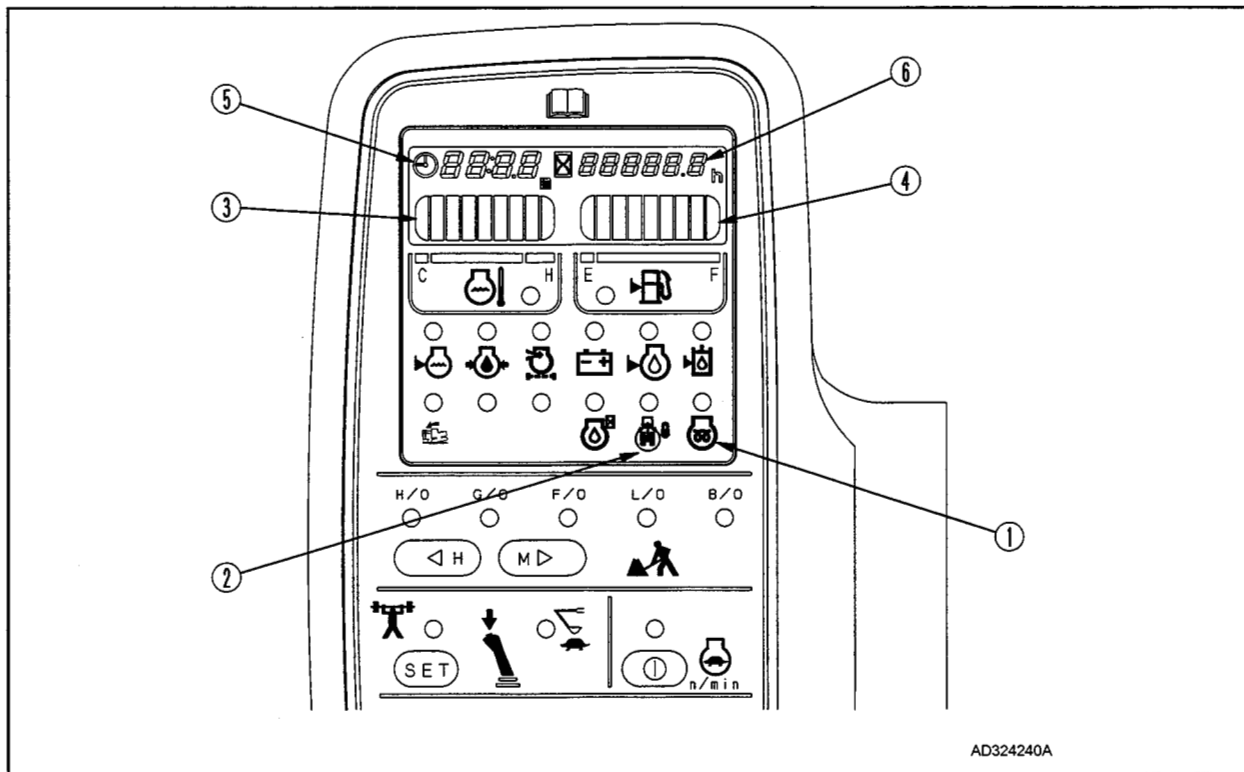


**PILOT DISPLAY**

When the starting switch is ON, the pilot display lights up when the display items are functioning.

### 1. ENGINE PRE-HEATING MONITOR

This monitor lamp indicates the pre-heating time required when starting the engine at an ambient temperature below 0°C.

The monitor lamp lights when the starting switch is turned to HEAT position and flashes after about 30 seconds to show that the pre-heating is completed. (The monitor lamp will go off after about 10 seconds.)

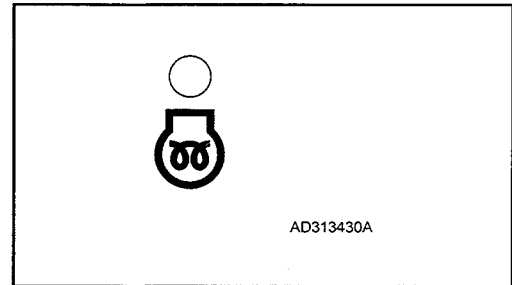


### 2. SWING LOCK MONITOR

This informs the operator that the swing lock is being actuated. Actuated: Lights up

When the swing lock switch is turned ON (ACTUATED), the monitor lamp lights up.

When the swing lock override switch is turned on, this monitor lamp flashes.

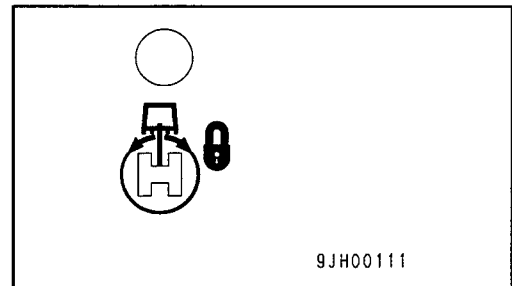

#### REMARK

A disc brake is installed in the swing motor to mechanically stop motor rotation.

The brake is always applied while the swing lock is actuated.

## METERS

### 3. ENGINE WATER TEMPERATURE GAUGE

This gauge indicates the engine cooling water temperature.

If the temperature is normal during operation, the green range (A) will light up.

If the red range (C) lights up during operation, the overheat prevention system will be actuated.


The overheat prevention system acts as follows.

When red range (1) lights up:  
Output horsepower drops, and water temperature monitor (3) flashes.

When red range (2) lights up:  
Engine speed is lowered further to low idling, engine water temperature monitor (3) lights up, and alarm buzzer sounds at the same time.

The overheat prevention system is actuated until the temperature enters the green range.

When red range (2) lights, if the engine water temperature is reduced and the fuel control dial is turned to the low idling position, the display will be cancelled.

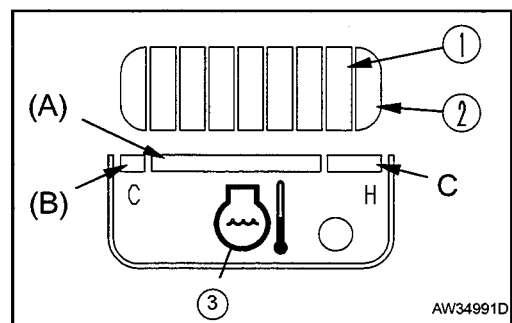



#### 4. FUEL GAUGE


This gauge indicates the amount of fuel in the fuel tank. If the fuel level is normal during operation, the green range (2) will light up.

If only the red range (1) lights up during operation, there is less than 25 litres of fuel remaining in the tank, so check and add fuel.

Red range a ON/ Fuel gauge monitor lamp (LED) (3) flashes.

After the starting switch is turned ON, the correct level may not be displayed for a moment, but this does not indicate any abnormality.


When stopping the engine, turn the starting switch ON and check that the monitor lamps on items A, B, C and D and the meters light up.

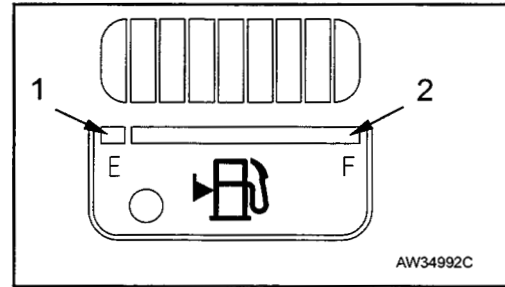

#### 5. DISPLAY


When the starting switch is ON, the time and service meter reading is displayed if the condition is normal. If the condition is abnormal, the content of the failure is displayed.

When setting the time, the symbol flashes.

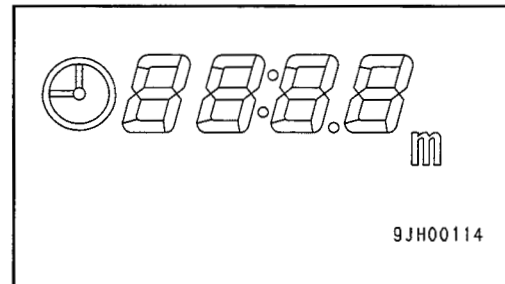

#### Manual setting


1. When the time is displayed, depress clock switch (4) for 2.5 sec or more.
2. The symbol flashes.
3. Pressing H switch (2) increases hours and pressing M switch (3) increases minutes. If switch (2) or (3) is pressed for 2.5 seconds or more, hours or minutes increase continuously.

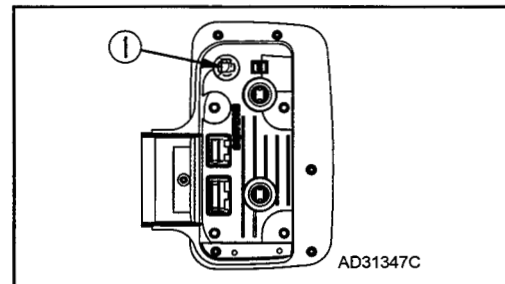

4. When the correct time is reached, press clock switch (1). This completes clock setting.

#### Synchronising to another clock or time signal

1. When the time is displayed, depress the clock switch for 2.5 sec or more.
2. The symbol flashes.
3. When SET switch v is pressed, the hour is rounded off for 0 to 14 minutes and rounded up for 45 to 59 minutes.

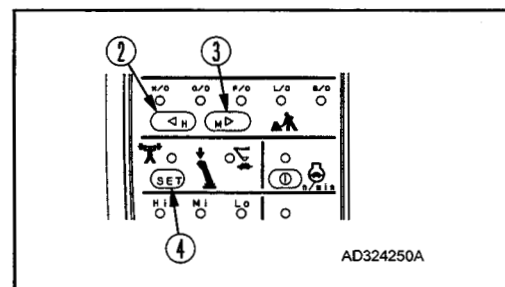

[Examples) 10:14 becomes 10:00 /rounded off)  
10:45 becomes 11:00 (rounded up)

- When the correct time is reached, press clock switch (1). This completes clock setting.

If the machine has a fault, error information appears while the starting switch is turned ON. The monitor flashes and displays all error informations sequentially.

Monitor display	Failure mode
E02	PC-EPC system error
E03	Swing brake system error
E05	Governor system error
CALL	Continuation of work impossible

If any of these monitors flashes, see "ELECTRONIC CONTROL SYSTEM" on page 152.


### 6. SERVICE METER

This meter shows the total operation hours of the machine.

Set the periodic maintenance intervals using this display.


The service meter advances while the engine is running - even if the machine is not travelling.

The meter will advance by 1 for each hour of operation regardless of the engine speed.

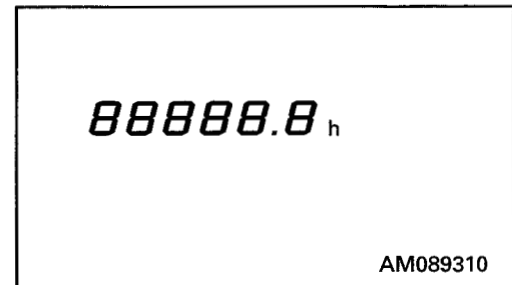

AM089310

### E: SWITCHES

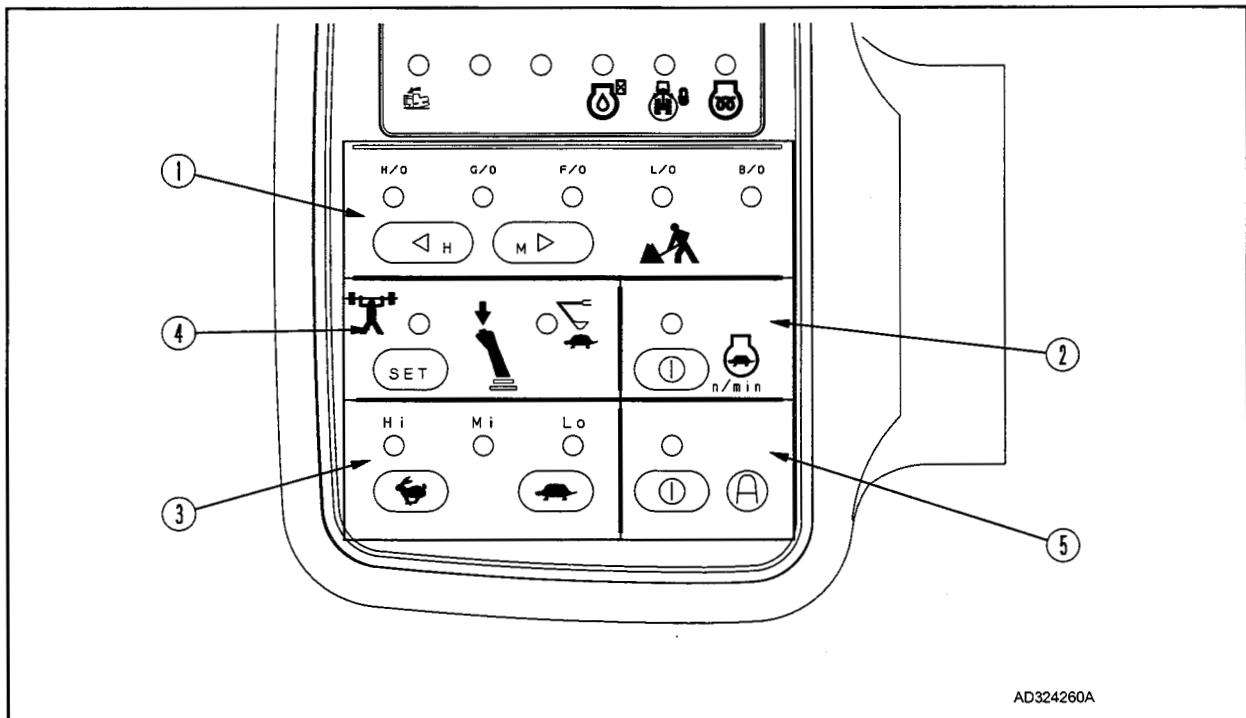

AD324260A

### 1. WORKING MODE SELECTOR SWITCH (Basic switch)

This switch is used to set the movement or power for the work equipment. By selecting the mode to match the working conditions, it is possible to carry out operations more easily.

H.O. (heavy-duty operation mode) lights up:  
This is used for heavy-duty work.

G.O. (general operation model lights up:  
This is used for ordinary work.

F.O. (finishing operation mode) lights up:  
This is used for levelling or grading work.

L.O. (lifting operation mode) lights up:  
This is used for fine control operations.

B.O. (breaker operation mode) lights up:  
This is used for breaker work.

When starting the engine, G.O. (general operation) mode is automatically selected. Each time the switch is pressed, the mode selection changes.

#### NOTICE

**When the breaker is used, never select the H.O. (heavy-duty operation) mode.**

#### REMARK

H switch is also used for setting "hours" in the clock and M switch for setting "minutes". see "DISPLAY" on page 62.

### 2. AUTO-DECELERATION SWITCH (Selection switch)

This switch acts to activate the function that automatically lowers the engine speed and reduces fuel consumption when the control lever is at neutral.

ON lights up: Auto-deceleration is actuated.



OFF: Auto-deceleration is cancelled.

Each time the switch is pressed, the auto-deceleration is actuated or cancelled.

### 3. TRAVEL SPEED SWITCH

#### **WARNING**

**If the Hi-Lo switch is operated when the machine is travelling, the machine may deviate even when travelling in a straight line. To prevent this, always stop the machine before operating the travel speed switch.**

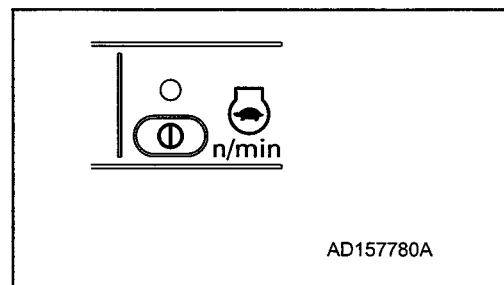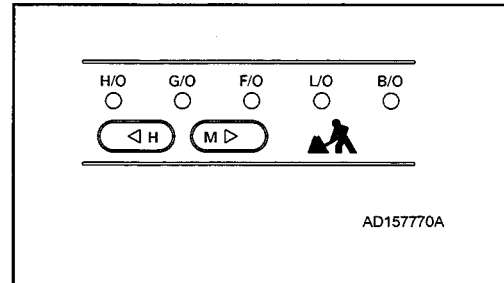


This is used to select the three travel speeds.

Lo lights up: Low speed travel  
 Mi lights up: Mid range speed travel  
 Hi lights up: High speed travel

When the engine is started, the travel speed is automatically set to Lo.

When travelling in Hi, the travel speed is automatically adjusted to match the travel surface on soft ground or when travelling uphill, so there is no need to operate this switch. The monitor indication keeps lamp Hi or Mi lighted.

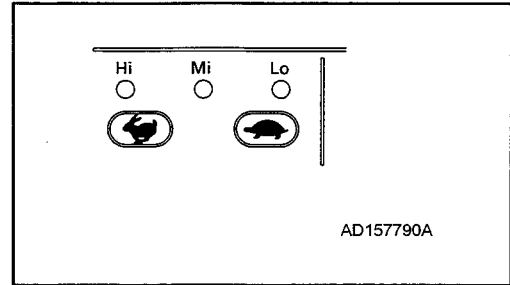


#### 4. POWER MAX./SWIFT SLOW-DOWN SWITCH

During operations, the digging power can be increased and the speed reduced by a one-touch operation of the left lower knob button (single click while pushing).

**Power max. (power up) lights up:**

When the working mode is heavy-duty and general operation mode only, the power can be increased while the knob button is being pressed. Even if the knob button continues to be pressed, the increase in power finishes after approx. 8.5 sec.

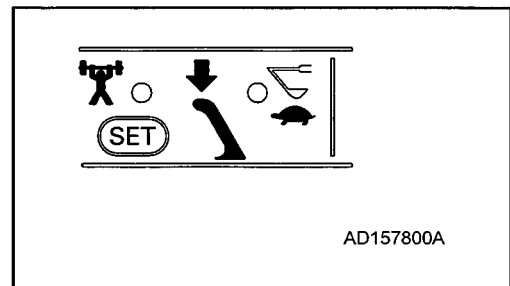

**Swift slow-down (speed down) lights up:**

When the working mode is heavy-duty operation and general operation mode only, the speed is reduced while the knob button is being pressed.

When the engine is started, the power max. lamp lights up. Each time this switch on the monitor panel is pressed, the mode is switch.


#### 5. ACTIVE MODE SWITCH (SELECTOR SWITCH)

The active mode is effective for quick leveling operations or deep digging and loading operations.


Lamp lights up: Active mode is actuated.  
 Lamp goes out: Active mode is cancelled.

The lamp is off when the engine is started.  
 If it is turned ON (lights up), it is possible to enter the active mode from any working mode.

Even when it is turned ON (lights up), the working mode display does not change. When the lamp goes out, the system returns to the original working mode.

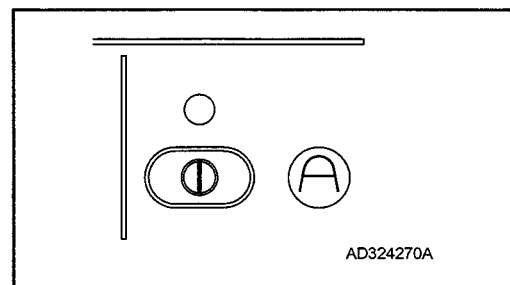

## SWITCHES

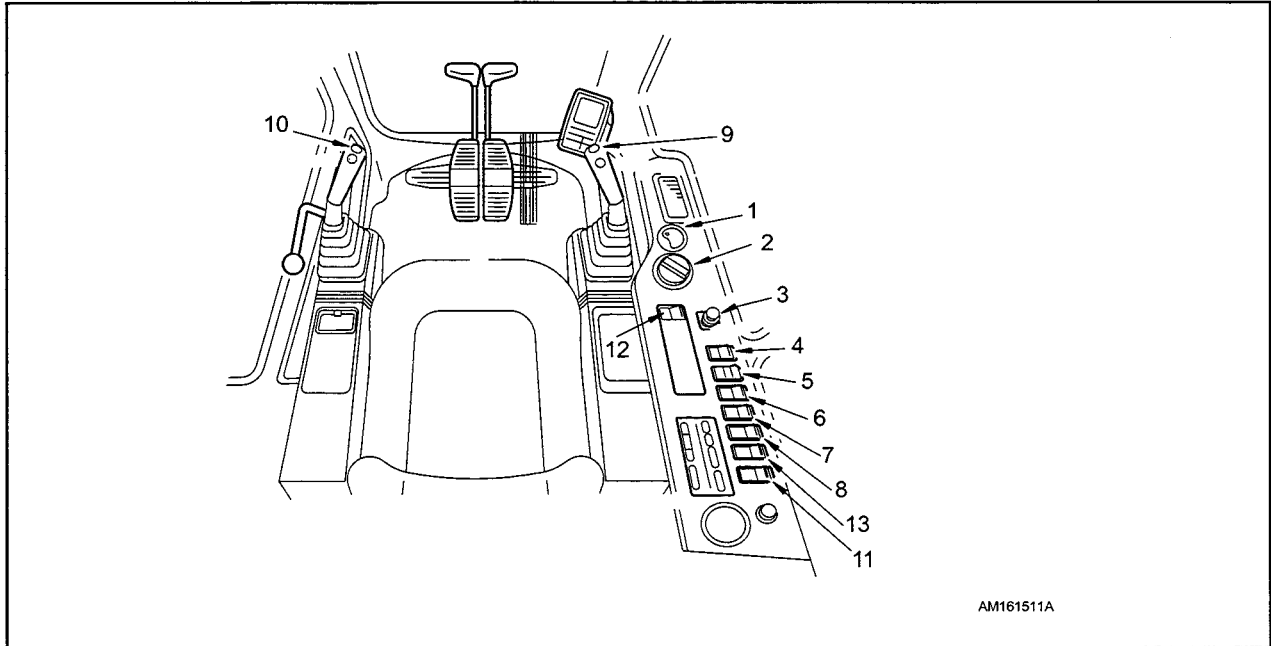

AM161511A

### 1. STARTING SWITCH

This switch is used to start or stop the engine.

#### OFF position

The key can be inserted or withdrawn. Except for the cab lamp, radio (if fitted) and clock, the switches for the electric system are all turned off and the engine is stopped.

#### ON position


Electric current flows in the charging and lamp circuits. Keep the starting switch key at the ON position while the engine is running.

#### START position

This is the engine-start position. Keep the key at this position during cranking. Immediately after starting the engine, release the key which will automatically return to the ON position.

#### HEAT (preheat) position

When starting the engine in winter, set the key to this position. When the key is set to the HEAT position, the pre-heating monitor lights up. Keep the key at this position until the monitor lamp goes off. Immediately after the pre-heating monitor goes off, release the key. The key automatically returns to the OFF position. Then, start the engine by turning the key to the START position.

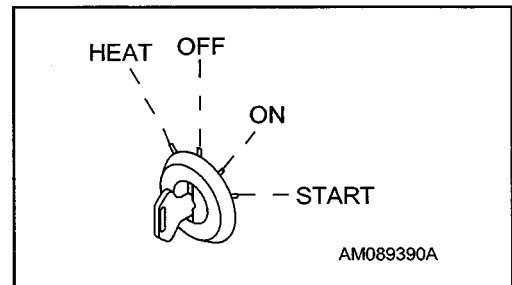


AM089390A

## 2. FUEL CONTROL DIAL (WITH AUTO-DECELERATION MECHANISM)

This adjusts the engine speed and output.


- (1) Low idling (MIN): Turned fully to the left
- (2) Full speed (MAX): Turned fully to the right

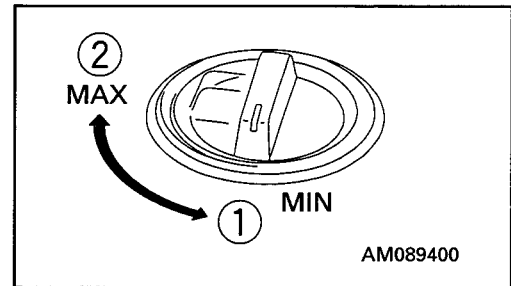

## 3. CIGARETTE LIGHTER

This is used to light cigarettes. To use, push the lighter in. After a few seconds it will spring back.

Pull out the lighter and light your cigarette.  
Nothing may be connected to the cigarette lighter without the prior permission of an authorised Komatsu distributor.

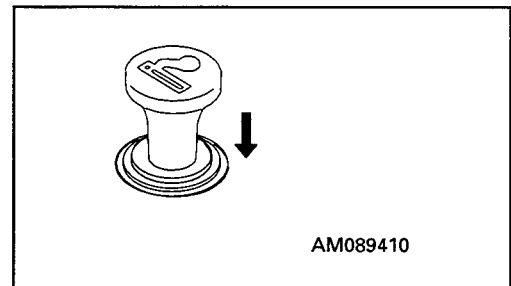

## 4. SWING LOCK SWITCH

### ⚠ WARNING

- When the machine is travelling under its own power, or when the swing is not being operated, always set the switch to the ON (ACTUATED) position.
- On a slope, the work equipment may swing to the down side even if the swing lock switch is located at the ON position. Be careful concerning this point.

This switch is used to lock the upper structure so that it cannot swing.


#### ON position (actuated):

The swing lock is always applied, and the upper structure will not swing even if the swing is operated. In this condition, the swing lock lamp lights up.

#### OFF position (cancelled):

The swing lock is applied only when the swing control lever is at neutral; when the swing control lever is operated, it is cancelled.


The swing lock is actuated approx. 4 seconds after the swing lever is placed in neutral.

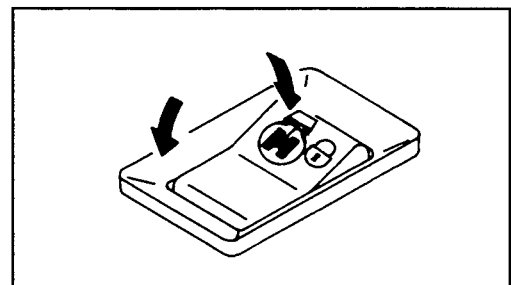

### 5. WIPER SWITCH

This switch actuates the front window wiper.


1. OFF: The wiper stops.
2. ON: The wiper moves continuously
3. Window washer fluid is sprayed out: When the switch is released, it returns to (2).
4. ON: The wiper moves intermittently.
5. Window washer fluid is sprayed out: When the switch is released, it returns to (4).

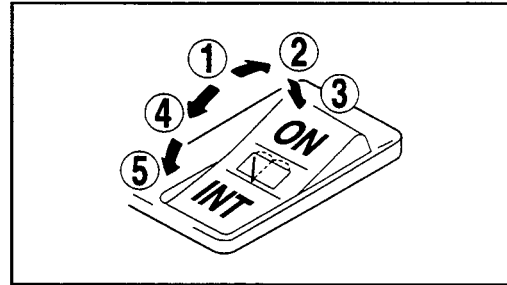

### 6. LAMP SWITCH


This switch is used to turn on the front light, working light, additional lights on the cab roof, rear lights, and monitor lighting.

- (1) OFF
- (2) Standard work lamps
- (3) Standard and additional work lamps(if fitted).

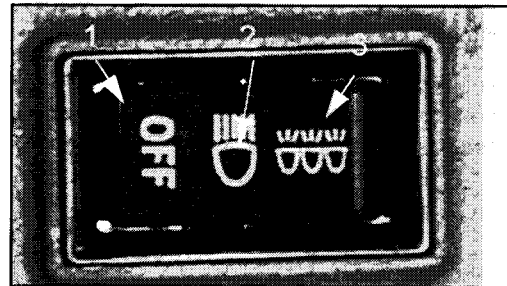

### 7. ALARM BUZZER STOP SWITCH


This is used to stop the alarm buzzer when it has sounded to warn of some abnormality in the EMERGENCY STOP ITEMS while the engine is running.

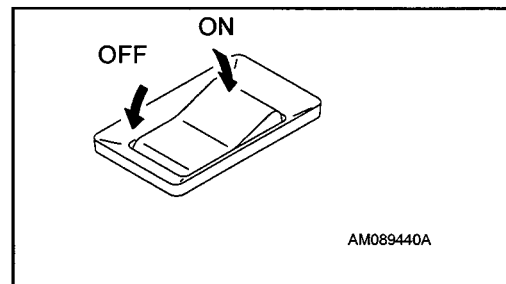

### 8. LOWER WIPER SWITCH (if fitted)


This switch activates the front lower wiper.

- OFF : wiper stops  
 ON : wiper moves continuously  
 NB. Do not operate with front lower screen removed.

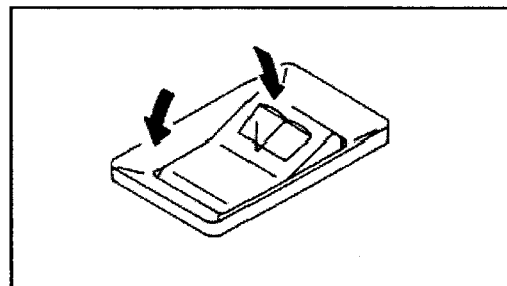


**9. HORN BUTTON**

When the lower button of the right work equipment control lever is pressed, the horn will sound.

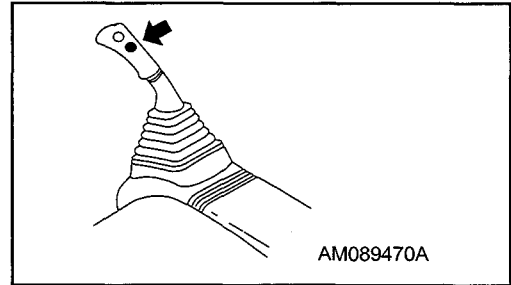**10. KNOB BUTTON (Power Max)**


The lower button of the left work equipment control lever is used to actuate the power max./swift slow-down functions. Press the button once (single click) and keep it depressed. In the heavy-duty and general operation modes, the power max. function actuates for max. 8.5 seconds and the swift slow-down function actuates while the button is depressed.

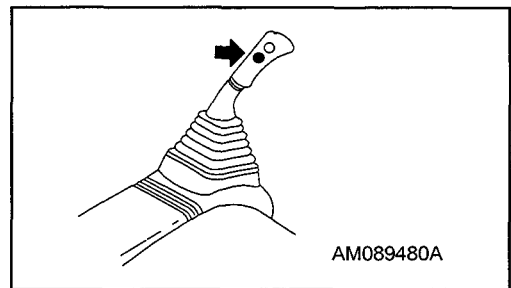**11. HEATED OPERATOR SEAT SWITCH (If fitted)**

This switch is used to switch on the heated seat.

OFF : seat not heated


ON : seat heated

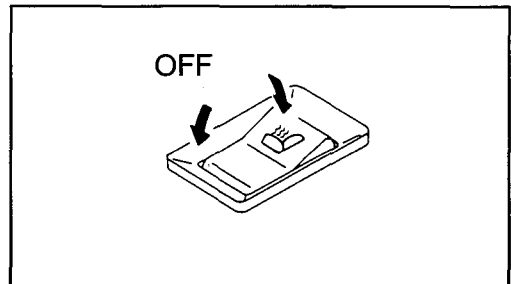**12. BEACON SWITCH (If fitted)**

This switch is used to switch on the rotating beacon.

OFF

ON: beacon lights lights and rotates

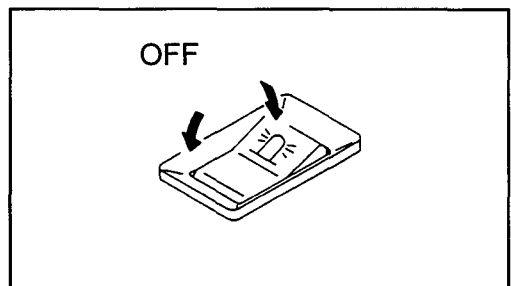





**13. CAB LAMP SWITCH**

This lights up the cab lamp.

ON position(1) : Lights up

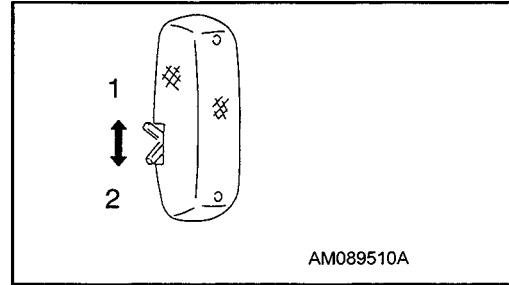


The cab lamp can be turned on even when the starting switch is at the OFF position (2), so be careful not to leave it on by mistake.

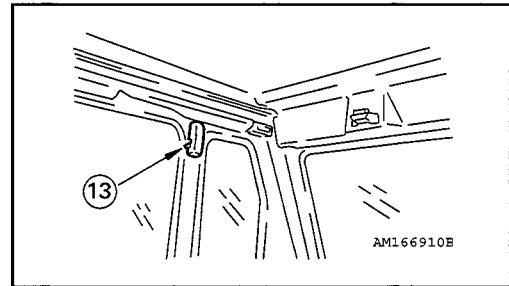


#### 14. PUMP CONTROL OVERRIDE SWITCH

(2) When normal: Switch is down

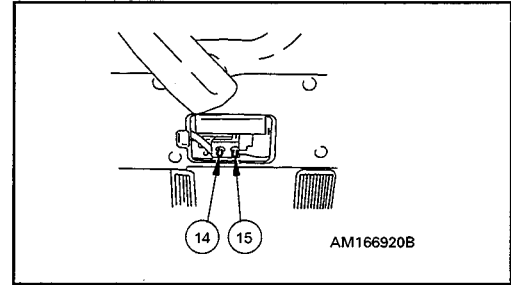

(1) When abnormal: When the monitor display shows E02 (PC-EPC valve system error), it is possible to carry out operation when this switch is moved up. The pump control override switch is designed to allow operations to be carried out for a short period when there is an abnormality in the pump control system (PC-EPC valve system error). The abnormality must be repaired immediately.

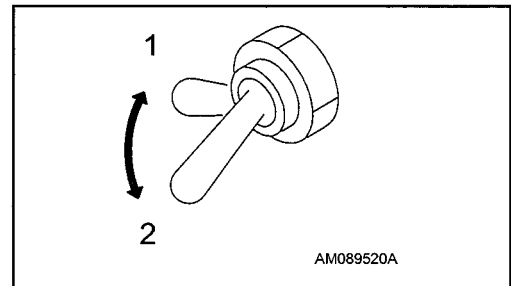


#### 15. SWING LOCK OVERRIDE SWITCH

(2) When normal: Switch is down


(1) When abnormal: When the monitor display shows E03 (swing brake system error), the brake is cancelled and it becomes possible to swing the upper structure when this switch is moved up, so normal operations can be carried out. However, the swing brake remains cancelled.

The swing lock override switch is designed to allow operations to be carried out for a short period when there is an abnormality in the swing brake electrical system (swing brake system error). The abnormality must be repaired immediately.

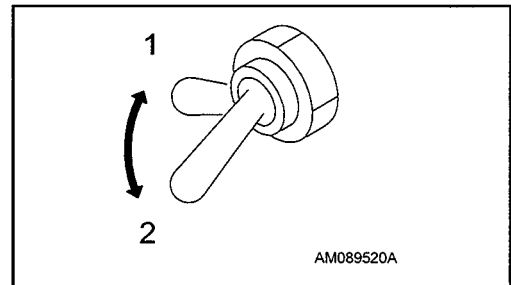


#### 16. 12V POWER SUPPLY

The 12V socket provided on the right hand panel may be used only for electrical accessories drawing 1,5 A. maximum. Any accessories attached to this socket must carry the EC mark.

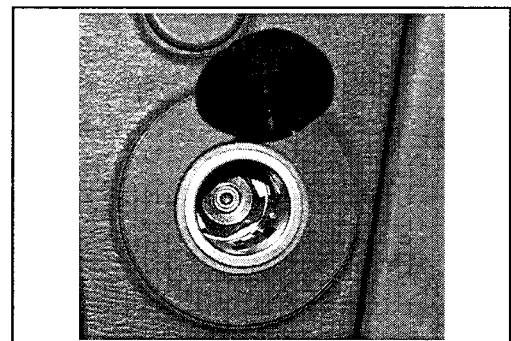


## CONTROL LEVERS, PEDALS

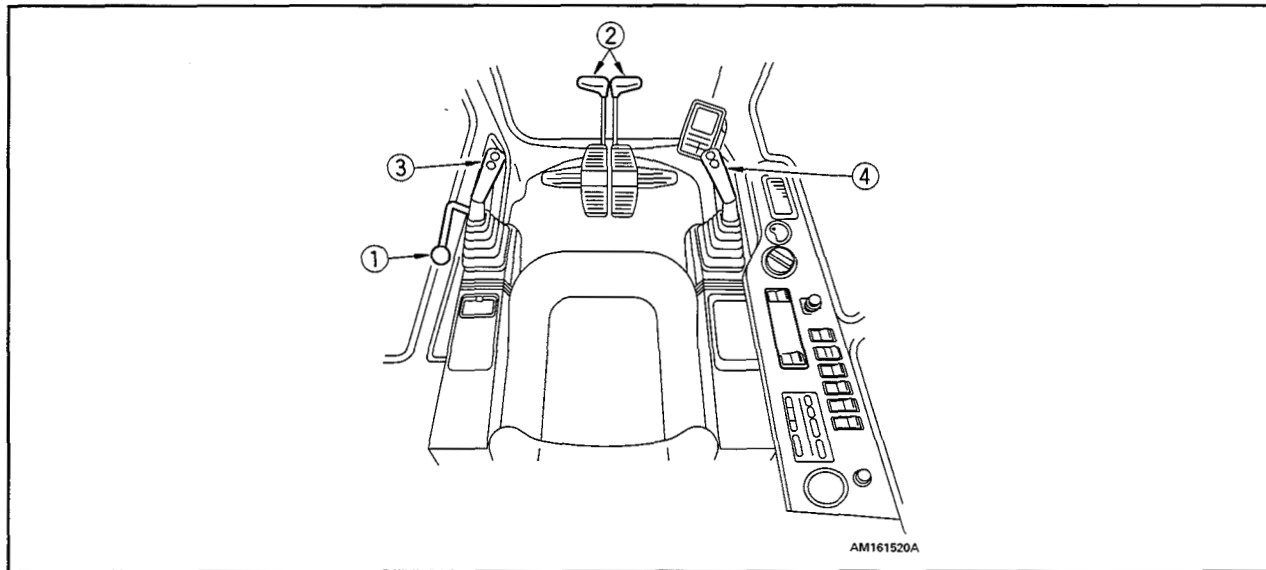

### 1. SAFETY LOCK LEVER


#### **WARNING**

- When leaving the operator's compartment, set the safety lock lever securely to the LOCK position. If the control levers are not locked, and they are touched by mistake, this may lead to a serious accident.
- If the safety lock lever is not placed securely in the LOCK position, the control levers may not be properly locked. Check that the situation is as shown in the diagram.
- When the safety lock lever is raised, take care not to touch the work equipment control lever. If the safety lock lever is not properly locked at the upper position, the work equipment and swing will move, creating a potentially dangerous situation.
- When the safety lock lever is lowered, take care not to touch the work equipment control lever.

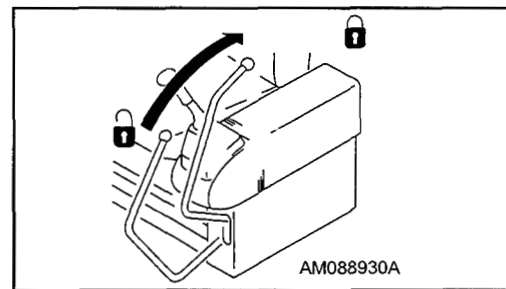

This lever locks the work equipment, swing and attachment controls.


This lock lever is a hydraulic lock, so even if it is in the lock position, the work equipment control lever will move, but the work equipment and swing motor will not work.

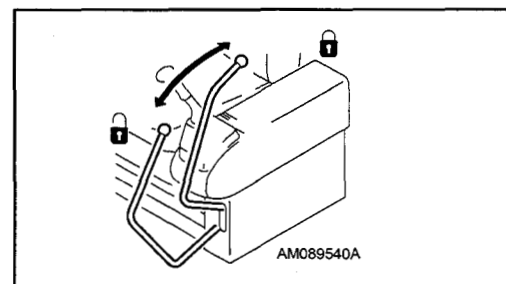

**2. TRAVEL LEVERS (WITH PEDAL, AUTO-DECELERATION MECHANISM)**

**⚠ WARNING**

- Do not put your foot on the pedal unless the machine is travelling. If you leave your foot on the pedal and press it by mistake, the machine will move suddenly, and this may lead to a serious accident.
- With the track frame facing to the rear, the machine will move in the reverse direction by forward travelling and in the forward direction by reverse travelling.
- When the travel lever is used, check to see if the track frame is facing forward or backward. (If the sprocket is located to the rear, the track frame is facing forward.)

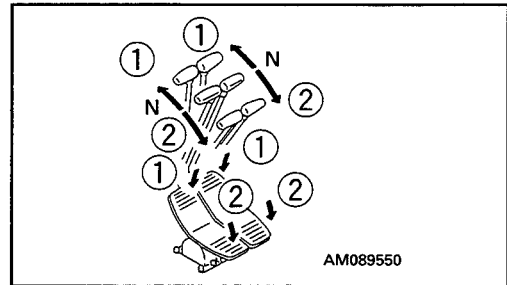

(1) FORWARD	( 2 ) REVERSE:
The lever is pushed forward	The lever is pulled back.
(The pedal is angled forward)	(The pedal is angled back)
N (Neutral): The machine stops	


( ) This indicates operation of the pedal.

**3. LEFT WORK EQUIPMENT CONTROL LEVER**

(with auto-deceleration device)

**⚠ WARNING**

If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.

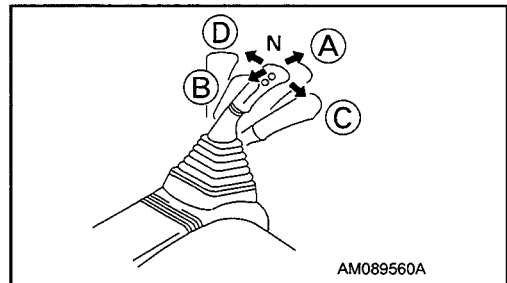

This lever is used to operate the arm and upper structure.

Arm operation	Swing operation
(A) Arm OUT	(C) Swing to right
(B) Arm IN	(D) Swing to left
N (Neutral)	

When the lever in this position, the upper structure and the arm will be retained in the position in which they stop.


**4. RIGHT WORK EQUIPMENT CONTROL LEVER**

(with auto-deceleration device)

**⚠ WARNING**

**If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.**

This lever is used to operate the boom and bucket.

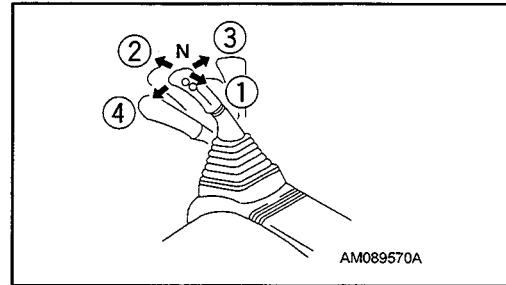


Boom operation	Bucket operation
(1) RAISE	(3) DUMP
(2) LOWER	(4) CURL
N (Neutral)	

When the lever in this position, the boom and the bucket will be retained in the position in which they stop.

For levers (2), (3) and (4), the engine speed changes as follows because of the auto-deceleration mechanism.

- When the travel lever and work equipment control levers are at neutral, even if the fuel control dial is above the mid-range position, the engine speed will drop to a mid-range speed. If any of the levers are operated, the engine speed will rise to the speed set by the fuel control dial.
- If all control levers are set to neutral, the engine speed will drop by approx. 100 rpm, and after approx. 4 seconds, the engine speed will drop to the deceleration speed (approx. 1400 rpm).

**5. ATTACHMENT CONTROL PEDAL**

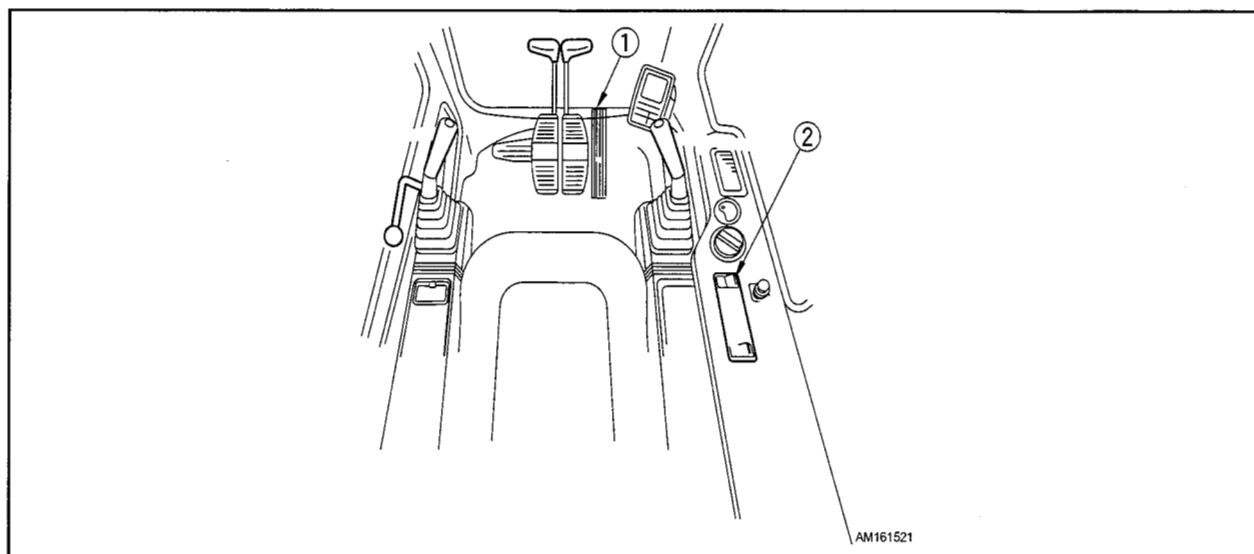

**WARNING**


Do not put your foot on the pedal except when operating the pedal. If you leave your foot resting on the pedal during operation and it is depressed by accident, the attachment may move suddenly and cause serious damage or injury.

**When breaker is installed**

- When the front part of the pedal is depressed, the breaker is actuated.
- Set the working mode to the breaker (B.O.).

**When general attachment is installed**

- When the pedal (1) is depressed, the attachment is actuated.
- The right hand switch panel has a ten position thumbwheelswitch (2). This allows nine values of flow for the right hand foot pedal and no flow at position zero. When selecting switch positions, the RH foot pedal must be fully released before beginning work at the new flow setting.
- Please note your preferred switch position against attachment used for your future reference.

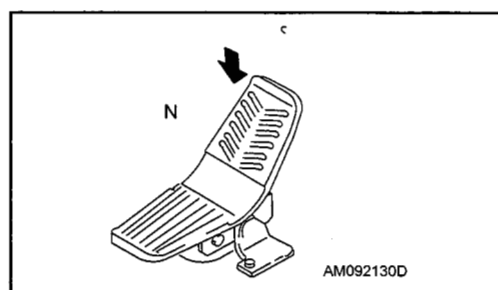


Switch position	1	2	3	4	5	6	7	8	9
Approximate maximum flow (L/min)	30	50	100	125	150	170	202	280	Full flow
Attachment									

- Adjustment of these range of flows is possible. Contact your Komatsu dealer if required.

**HYDRAULIC OIL FLOW**

When the front of the pedal is depressed, the oil flows to the left piping for the work equipment; when the rear of the pedal is depressed, the oil flows to the right piping for the work equipment. (When the breaker is installed, only the front of the pedal is used.)

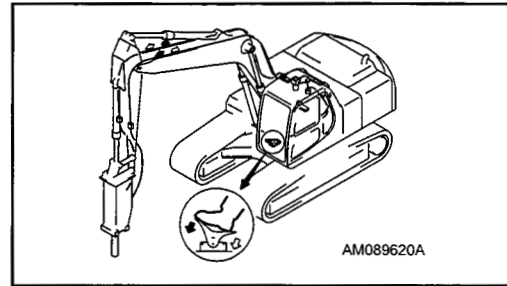




**6. SELECTOR VALVES FOR BREAKER AND GENERAL ATTACHMENT (CRUSHER, ETC.)**

Contact dealer to set left hand boom piping relief pressure.

When using the breaker or general attachment (crusher etc) turn the rotors the rotor of the 3-way valve (1) to charge over according to the following illustrations.

(The marks indicating the port direction are stamped on the 3-way valve)

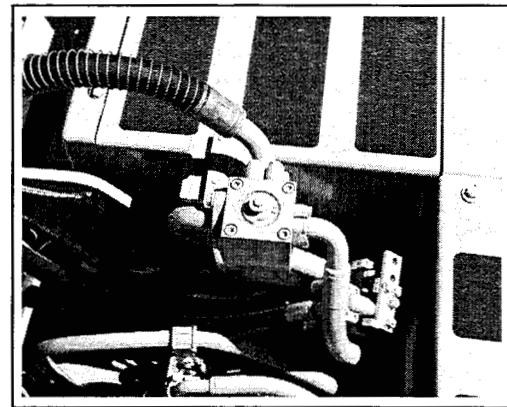

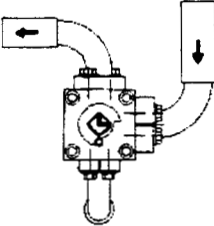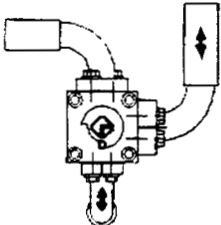Attachments	Right 3-way valve (1)
1-way flow (Breaker)	Front 
2-Way flow (Crusher)	Front 

**NOTICE**

Perform work only after the engine is stopped and the work equipment and machine body are in a stable posture on the ground.

For details, see "MACHINES READY FOR ATTACHMENTS" on page 239.


## CEILING WINDOW

### When opening

1. Lock the safety lock lever securely.
2. Check for an ceiling window movement by pulling lock (2) located on both sides, then push up and open the ceiling window grasping grip (1).

### When closing

Close the ceiling window grasping grip (1) and lock it with lock (2). If the lock cannot be applied, open and close the ceiling window again.

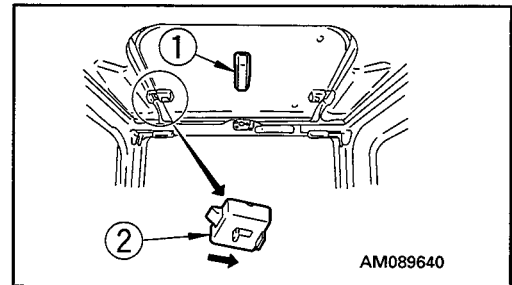



**FRONT WINDOW**

**WARNING**

When opening the front window, always hold grip firmly with both hands and pull up. If you use only one hand, your hand may slip and get caught.

It is possible to store (pull up) the front window (top) in the roof of the operator's compartment.

**When opening**

**WARNING**





When the front window is open, there is danger that it will fall, so always lock it with left and right lock pins (A).

1. Place the work equipment on flat ground and stop the engine.

2. Securely lock the safety lock lever.


3. Confirm that the wiper is stored inside the right frame.

4. Pull lock pins (A) at the top left and right sides of the front window to the inside to release the lock.

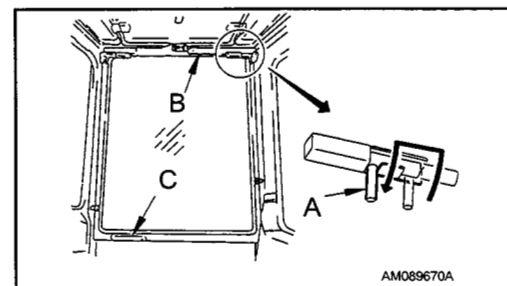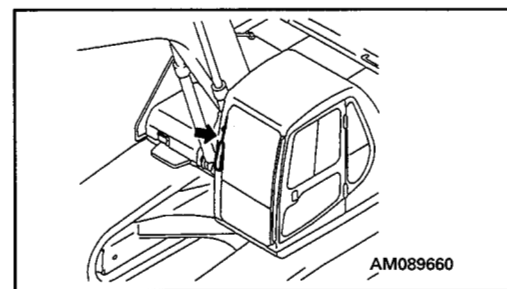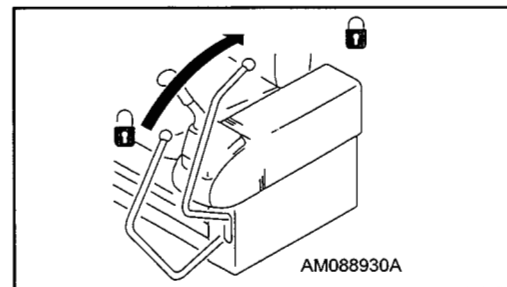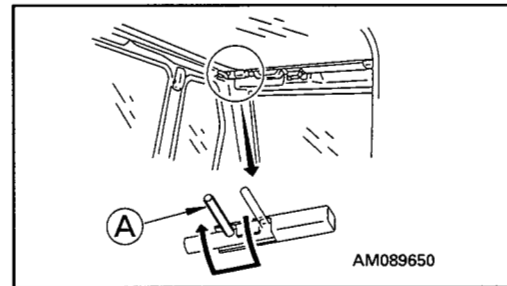

(B)	Top grip
(C)	Bottom grip

- From the inside of the operator's cab, hold the bottom grip with the left hand and the top grip with the right hand, pull up the window, and push it in fully until it is locked by catch (C).

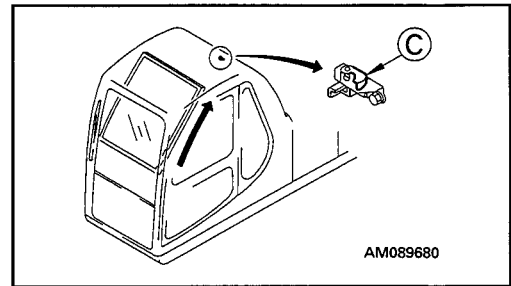


- Lock with lock pins (A) on the left and right sides.


**When closing**

**WARNING**


**When closing the window, lower it slowly and be careful not to get your hand caught.**

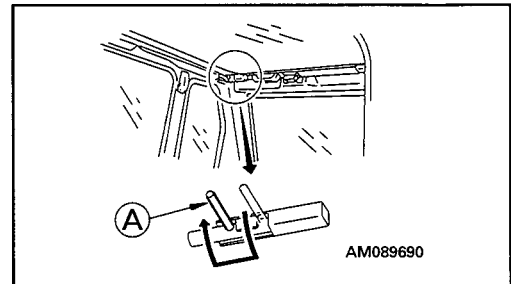


- Place the work equipment on a flat ground and stop the engine.
- Securely lock the safety lock lever.

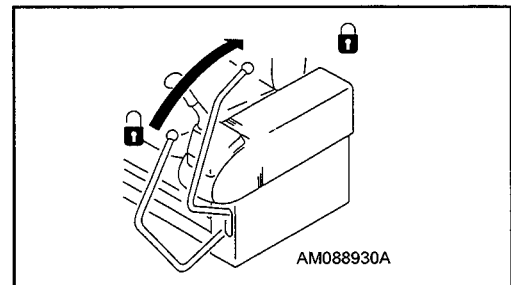


- Release the lock pin (A).

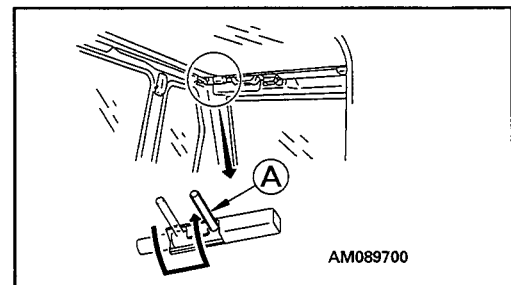

- Hold the grip at the bottom of the front window with your left hand and the grip at the top with your right hand, release the lock of catch (C) with your right thumb, then pull the top grip slowly and lower the front window. When releasing the lock of catch (C), push release lever (D) in the direction of the arrow to release the lock.

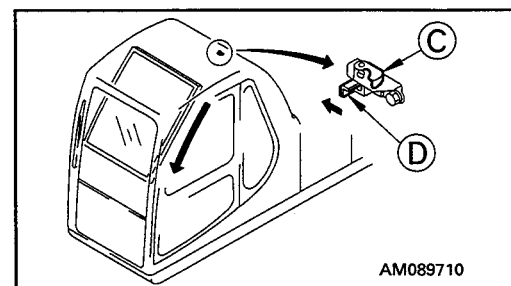


5. Lock securely with lock pins (A) at the left and right sides

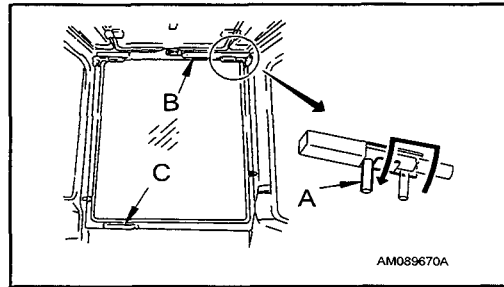

**Removing front window (bottom)**

Ensure lower wiper (if fitted) is in correct park position.


With the front window open, remove lock pins (E), and the bottom part of the front window can be removed.

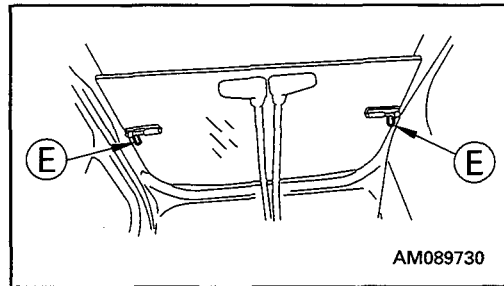

Store the removed bottom part of the front window at the rear of the operator's cab and lock with lock pins (E).

**NOTICE**


Do not operate lower wiper (if fitted) when front window (bottom) is removed.

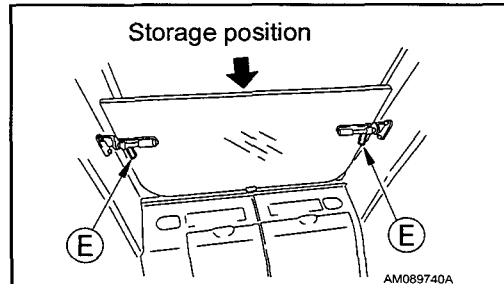

**DOOR LOCK**

Use the door lock to fix the door in position after opening it.

1. The door will become fixed in place when it is pressed against catch (1).
2. To release the lock, press knob (2) down at the left side of the operator's seat to release the catch.  
When fixing the door, fix it firmly to the catch.

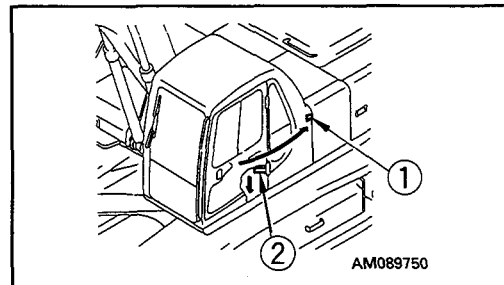

**CAP, COVER WITH LOCK**


The fuel filler, operator's cab, engine hood, battery box cover, right side door and left side door of the machine body are fitted with locks.

Use the starting switch key to lock or unlock these places.

### METHOD OF OPENING AND CLOSING CAP WITH LOCK (For the fuel tank filler port)


#### To open the cap

1. Insert the key into the cap.
2. Turn the key clockwise (2), align the match mark on the cap with the rotor groove, then remove the cap.

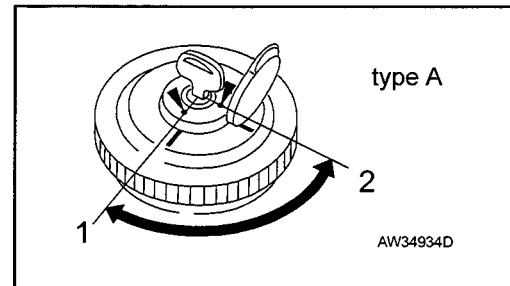

#### To lock the cap

1. Turn the cap into place.
2. Turn the key and take the key out.
3. Match mark on the cap

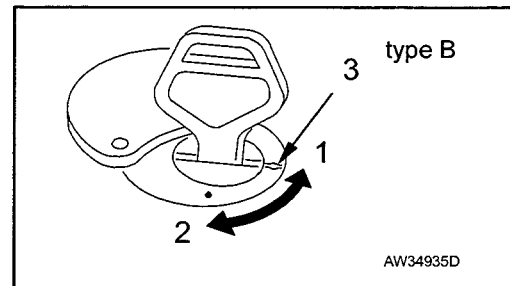


Insert the key as far as it will go (A) . If the key is turned before it is inserted all the way, it may break.

### METHOD OF OPENING AND CLOSING COVER WITH LOCK (cover with lock)

#### To open the cover (locked cover)

1. Insert the key.
2. Turn it counterclockwise and open the cover by pulling the cover grip.

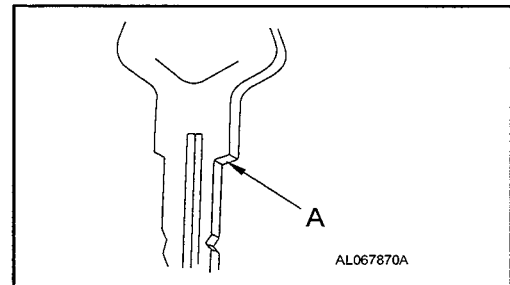


#### To lock the cover

1. Close the cover and insert the key.
2. Turn the key clockwise and take the key out.


### LUGGAGE TRAY

This tray is located to the rear of the operator's seat. Always keep the operation & maintenance manual in this box for easy reading access.

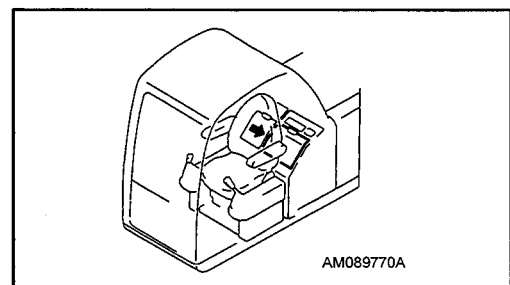


**ASHTRAY**

This is on the side of the operator's seat. Always make sure that you extinguish the cigarette before closing the lid.

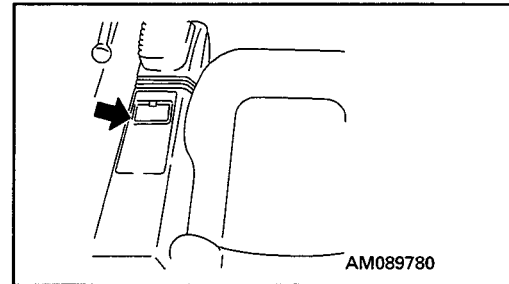

# AIR CONDITIONER





## GENERAL LOCATIONS ON CONTROL PANEL

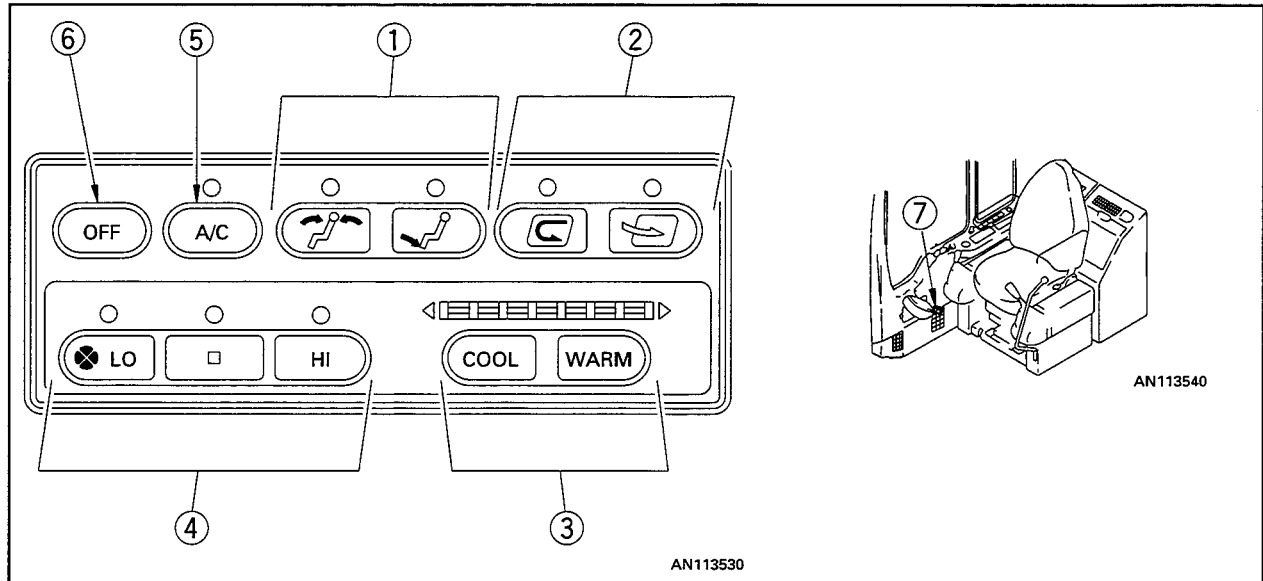

The pilot lamp for the switches light up to indicate that the switch is functioning.



### 1. VENT SELECTOR SWITCH

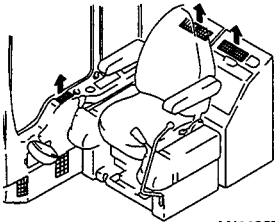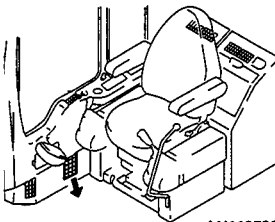This is used to select the vents which match the purpose of use.

	Air flow to face and body	Air flow to foot space
Switch selection	 AN113550	 AN113560
Air flow	 AN11357	 AN113580




**2. FRESH/RECIRC SELECTOR SWITCH**

This switch is used to intake fresh air or recirculate the internal air.

<p><b>Function</b></p>	<p><b>Recirculating</b> Use this position to heat or cool the operator's cab quickly or when the outside air is dirty.</p>	<p><b>Fresh air intake</b> Use this position when taking in clean, fresh air or when demisting.</p>
<p><b>Switch selection</b></p>	 AN113590	 AN113600




**3. TEMPERATURE CONTROL SWITCH**

This switch is used to adjust the temperature steplessly between low and high.

	<p><b>Cooling</b></p>	<p><b>Heating</b></p>
<p><b>Switch selection</b></p>	 AN113610	 AN113620
<p><b>Function</b></p>	 AA30813C <p>The more lamps in the blue range light up, the lower the temperature becomes; the more lamps in the red range light up, the higher the temperature becomes. The range is divided into 7 levels, and each range is steplessly further divided.</p>	

**4. WIND FLOW SELECTOR SWITCH**

The wind flow can be adjusted to 3 levels.

Function	Low	Medium	High
Switch selection	 AN113640	 AN113650	 AN113660

**AIR CONDITIONER SWITCH** 

This is used to switch the air conditioner ON/OFF.

**OFF SWITCH** 


This switch is use to stop the fan.

**DEFROSTER SELECTOR LEVER**


This is used to clear the mist from the front glass in cold or rainy conditions.

Selector lever forward: Defroster (2)

Selector lever back: Foot (1)

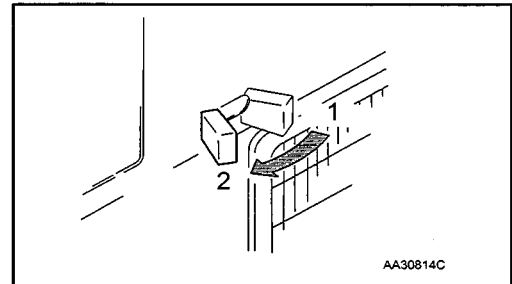

The defroster can be used when the vent selector panel is at the position.

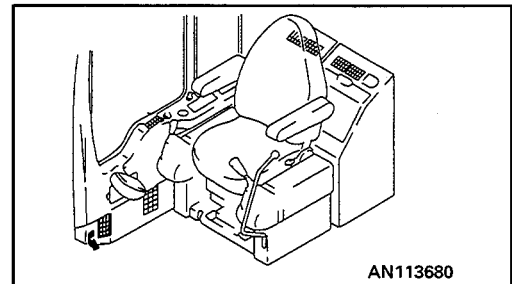

**PRECAUTIONS WHEN USING AIR CONDITIONER**

Carry out ventilation from time to time when using the cooler.

- If you smoke when the cooler is on, the smoke may start to hurt your eyes, so turn the lever to FRESH to remove the smoke while continuing the cooling.
- When running the air conditioner for a long time, turn the lever to the FRESH position once an hour to carry out ventilation and cooling.



Be careful not to make the temperature in the cab too low.

- When the cooler is on, set the temperature so that it feels slightly cool when entering the cab (5 - 6°C lower than the outside temperature). This temperature difference is considered to be the most suitable for your health, so always be careful to adjust the temperature properly.

## CHECK, MAINTAIN MACHINE EQUIPPED WITH AIR CONDITIONER

When carrying out inspection and maintenance of a machine equipped with air conditioner, see Maintenance shedule chart.

## CAB RADIO

Refer to the separate operation manual for radio cassette.

**NOTE:** Ensure radio is switched off when leaving the machine for long periods to prevent draining of battery charge.

### Antenna


If the reception is weak or generates noise, extend the antenna. If the reception is too strong, adjust the sensitivity by retracting the antenna.

### NOTICE

**When transporting the machine or parking it in a garage, always fully retract the antenna to avoid the possibility of breakage.**

### PRECAUTION OF USE

- To ensure safe operation, adjust the volume level so that external noise is still audible.
- Ensure no water is splashed over the speaker case or cab radio to prevent malfunction.
- Never use solution such as benzine or tinnners to clean the dial or buttons. These should be wiped with a dry, soft cloth. (Use a cloth dipped alcohol for very dirty surfaces.)
- At battery replacement, all the memory pre-set with the pre-set buttons will be cleared. Perform pre-setting again.

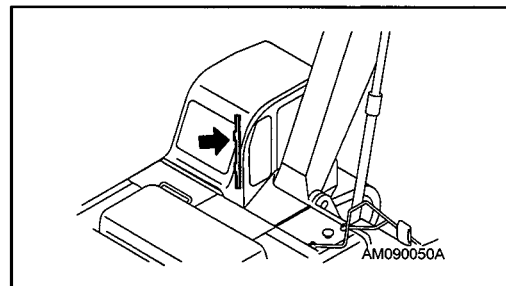

## FUSE

### NOTICE



Before replacing a fuse, be sure to turn off the starting switch.

The fuses protect the electrical equipment and wiring from burning out.

If the fuse becomes corroded, or white powder can be seen, or the fuse is loose in the fuse holder, replace the fuse. Replace a fuse with another of the same capacity.

### Fuse capacity and name of circuit

No.	Fuse capacity	Circuit
(1)	10 A	Governor and pump controller
(2)	10 A	Solenoid valve
(3)	20 A	Air conditioner (motor)
(4)	15 A	Right head lamp, work lamps (Boom LH & RH), engine room lamp, heated seat
(5)	20 A	Cigarette lighter, Heater, window washer, left knob button
(6)	10 A	Horn
(7)	15 A	Wiper controller
(8)	20 A	Cab mounted work lamps (X3), Beacon
(9)	20 A	Lower wiper, Refueling pump
(10)	10 A	Key switch signal
(11)	15 A	Work lamps (Left hand deck, counterweight)
(12)	10 A	Spare
(13)	10 A	Alarm buzzer, monitor
(14)	20 A	Battery relay, Ribbon heater, start signal
(15)	10 A	Room lamp, radio
(16)	10 A	Spare fuse
(17)	10 A	Spare fuse
(18)	15 A	Spare fuse
(19)	20 A	Spare fuse

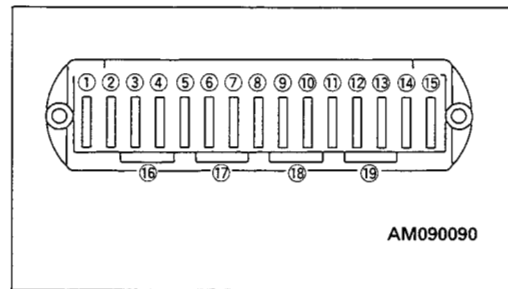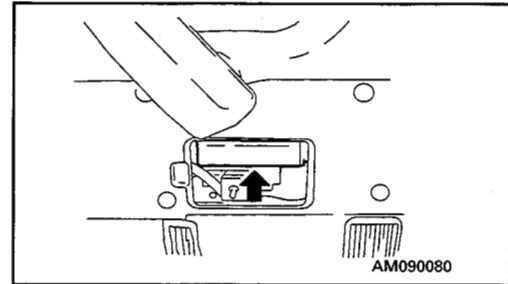


## FUSIBLE LINK

If the starting motor will not rotate when the starting switch is turned ON, a possible cause is disconnection of wire-type fusible link (1). Open the battery room door on the right side of the machine body to inspect the fusible link and, if necessary, replace it.

### REMARK

A fusible link refers to the large-sized fuse wiring installed in the high current flow portion of the circuit to protect electrical components and wiring from burning, similar to an ordinary fuse.

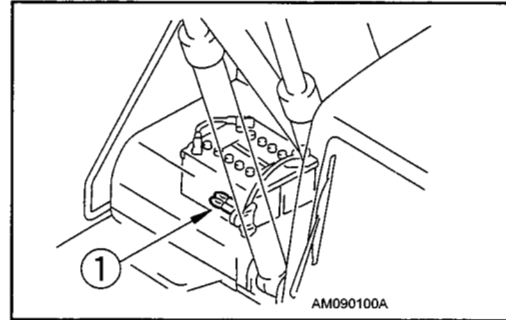


## CONTROLLERS

A combined pump controller and engine controller are provided.


### NOTICE

- Never splash or spill water, mud or drink over the controllers as this may cause a fault.
- If a fault occurs in the controller, do not attempt repair, but consult your Komatsu distributor.

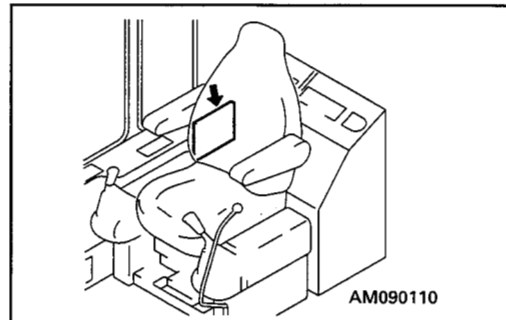

## TOOL BOX

This is used for storage of tools.

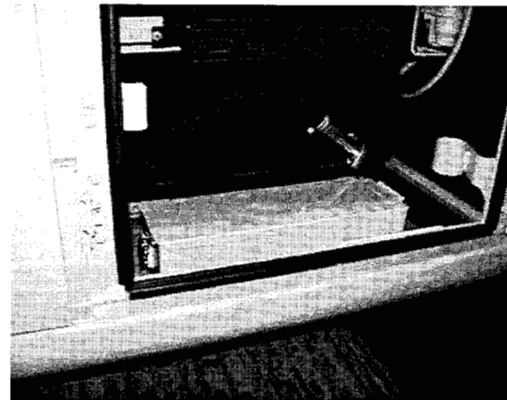

## REFUELLING PUMP



### **⚠ WARNING**

**Do not bring fire or sparks near the fuel.**

1. When the machine is operated on sites with no fuel container and pump, the machine may be refuelled using the refuelling pump (if fitted) from fuel barrels. The refuelling pump is located next to batteries at the front right hand side of the machine.
2. Place the fuel hose (2), which is stored in tray (3) into the fuel barrel placed next to the machine.
3. Switch on refuelling pump using switch (1) on the pump assembly when adding fuel, never let the fuel overflow. This may cause a fires.

### **NOTICE**

- This pump is protected by a fuse (5). If pump fails to function check fuse (10A).
- Ensure strainer on hose end is clean.

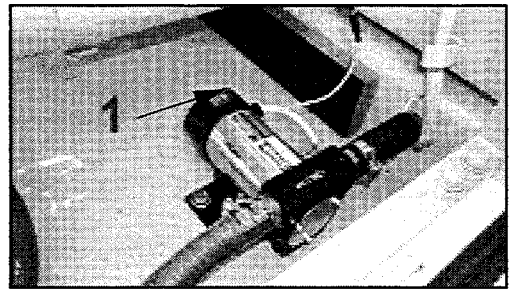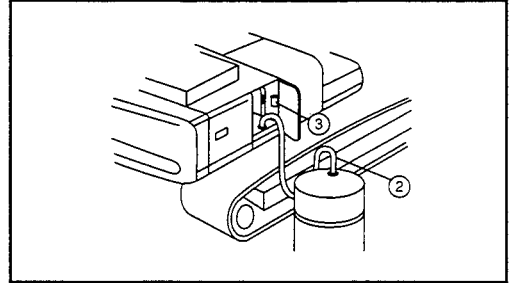

## HANDLING THE ACCUMULATOR

### **▲ WARNING**

On machines equipped with an accumulator, for a short time after the engine is stopped, if the work equipment control lever is moved to the LOWER position, the work equipment will move down under its own weight.


After stopping the engine, always place the safety lock lever in the LOCK position and lock the attachment control pedal with the lock pin.

The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way. Always observe the following precautions.

- Never make any hole in the accumulator or expose it to flame or fire.
- Do not weld any boss to the accumulator.
- When disposing of the accumulator, it is necessary to release the gas from the accumulator, so please contact your Komatsu distributor.

This machine is equipped with the accumulator in the control circuit. The accumulator is a device to store the pressure in the control circuit, and when it is installed, the control circuit can be operated for a short time even after the engine is stopped. Therefore, if the control lever is moved in the direction to lower the work equipment, it is possible for the work equipment to move under its own weight.

The accumulator is installed to the position shown in the diagram on the right.

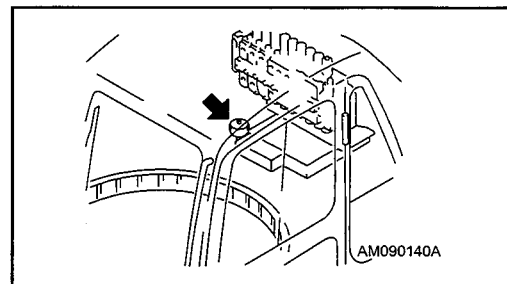

### METHOD FOR RELEASING PRESSURE IN CONTROL CIRCUIT OF MACHINES EQUIPPED WITH ACCUMULATOR

1. Lower the work equipment to the ground. Close any attachment such as the crusher attachment jaws, etc.
2. Stop the engine.
3. Move the safety lock lever completely in the FREE position. Move the work equipment control lever and attachment control pedal full to the back and forth, right and left so as to release the pressure in the control circuit.
4. Move the safety lock lever to the lock position. Lock the control lever and attachment control pedal. The pressure, however, will not be completely released, so when the accumulator is removed in the control circuit, gradually loosen the screws. Never stand in the oil ejection direction.

# OPERATION

## CHECK BEFORE STARTING ENGINE


### WALK-AROUND CHECK

#### **▲ WARNING**

**Dirt, oil or fuel around the parts of the engine which reach high temperatures may cause fire and damage to the machine. Check carefully, and if any abnormality is found, always repair it or contact your Komatsu distributor.**

Before starting the engine, look around the machine and under the machine to check for loose nut or bolts, or leakage of oil, fuel, or coolant, and check the condition of the work equipment and hydraulic system. Check also for loose wiring, play, and collection of dust at places which reach high temperatures.

Always carry out the items in this section before starting the engine each day.

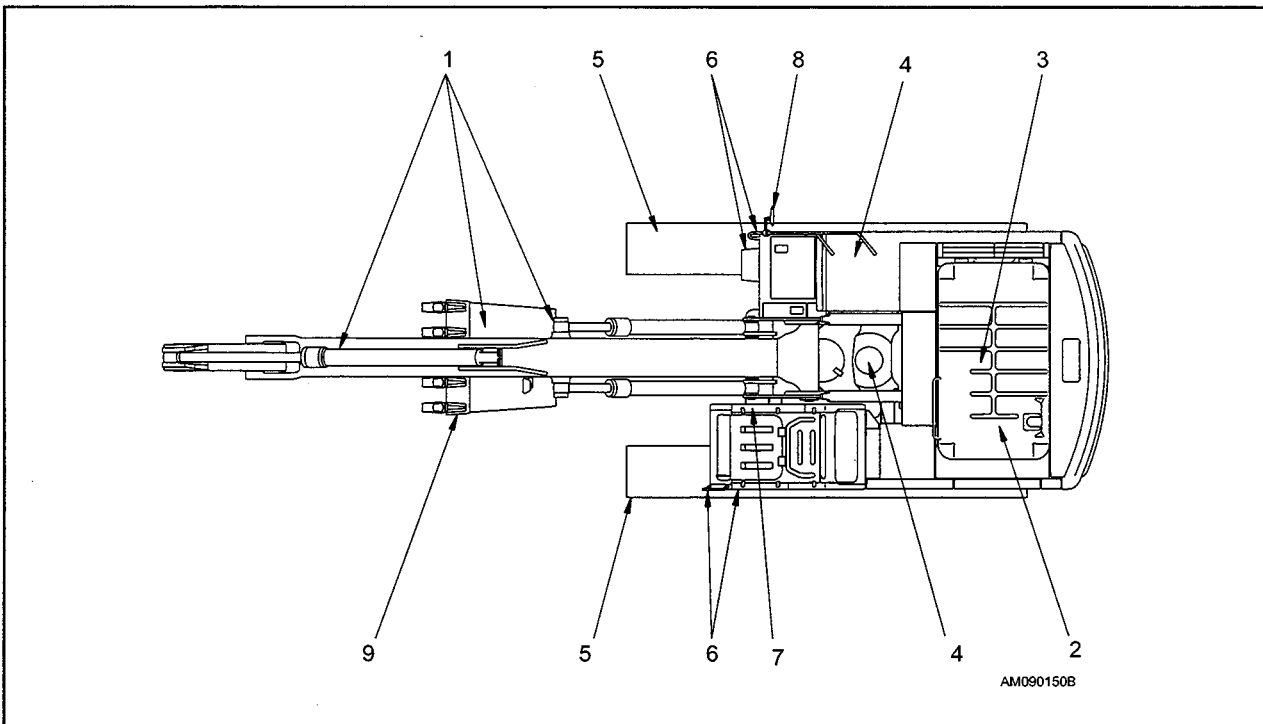

1. Check for damage, wear, play in work equipment, cylinders, linkage, hoses  
Check that there are no cracks, excessive wear, or play in the work equipment, cylinders, linkage, or hoses. If any abnormality is found, repair it.

2. Remove dirt from around engine, radiator  
Check that there is no dirt accumulated around the engine or radiator. If any dirt is found, remove it.
3. Check for leakage of water or oil around engine  
Check that there is no leakage of oil from the engine or leakage of water from the cooling system. If any abnormality is found, repair it.
4. Check for oil leakage from hydraulic equipment, hydraulic tank, hoses, joints  
Check that there is no oil leakage. If any abnormality is found, repair the place where the oil is leaking.
5. Check the undercarriage (track, sprocket, idler, guard) for damage, wear, loose bolts or leaks of oil from rollers.
6. Check for damage to handrail, loose bolts  
Repair any damage and tighten any loose.
7. Check for damage to gauges, monitor, loose bolts.  
Check that there is no damage to the gauges and monitor in the operator's cab. If any abnormality is found, replace the parts. Clean off any dirt on the surface.
8. Clean rear view mirror, check for damage  
Check that there is no damage to the rear view mirror. If it is damaged, replace it with a new mirror. Clean the surface of the mirror and adjust the angle so that the view to the rear can be seen from the operator's seat.
9. Check bucket with hook for damage  
Check the hook, catcher and hook foot for damage. If damage is found, contact your Komatsu distributor for repair.



## **CHECK BEFORE STARTING**

Always carry out the items in this section before starting the engine each day.

**CHECK COOLANT LEVEL, ADD WATER****⚠ WARNING**

**Do not open the radiator cap unless necessary. When checking the coolant, always check the radiator reserve tank when the engine is cold.**



1. Open the left rear cover on the machine and check that the cooling water level is between the FULL and LOW marks on radiator reserve tank 1 (shown in the picture on the right). If the water level is low, add water through the water filler of reserve tank a to the FULL level.
2. After adding water, tighten the caps securely.
3. If the reserve tank becomes empty, first inspect for water leaks and then fill the radiator and the reserve tank with water.

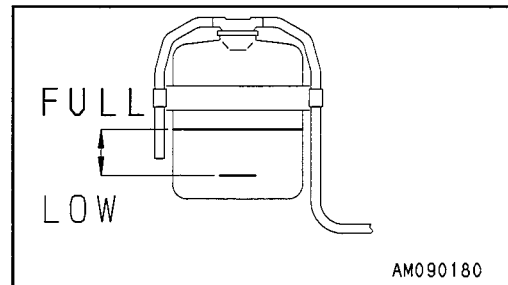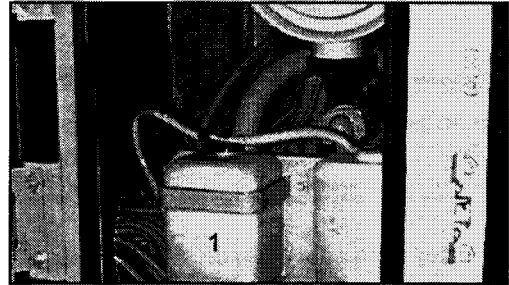**CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL**

1. Open the engine hood on the machine.
2. Remove dipstick (G) and wipe the oil off with a cloth.
3. Insert dipstick (G) fully in the oil filler pipe, then take it out again.
4. The oil level should be between the H and L marks on dipstick (G). If the oil level is below the L mark, add engine oil through oil filler F.

**For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**

5. If the oil is above the H mark, drain the excess engine oil from drain valve (P), and check the oil level again.

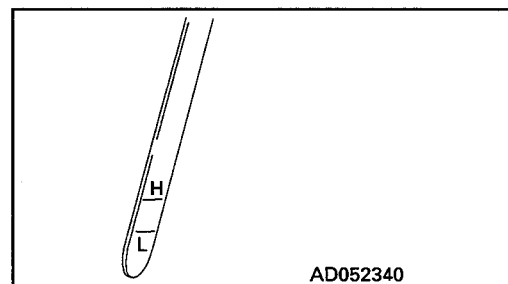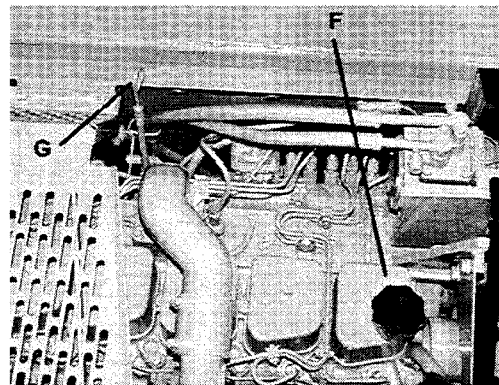



6. If the oil level is correct, tighten the oil filler cap securely and close the engine hood.

**REMARK**

When checking the oil level after the engine has been operated, wait for at least 15 minutes after stopping the engine before checking.

If the machine is at an angle, make it horizontal before checking.

**CHECK FUEL LEVEL, ADD FUEL****▲ WARNING**

**When adding fuel, never let the fuel overflow. This may cause a fire. If spilling fuel, thoroughly clean up any spillage.**

1. Use sight gauge (G) on the front face of the fuel tank to check that the tank is full.
2. If the fuel level is not within the sight gauge, add fuel through filler port (F) while watching sight gauge (G).


Fuel capacity: 340 l

**For details of the fuel to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**

3. After adding fuel, tighten the cap securely.

**REMARK**

If breather holes on the cap is clogged, the pressure in the tank will drop and fuel will not flow. Clean the holes from time to time.

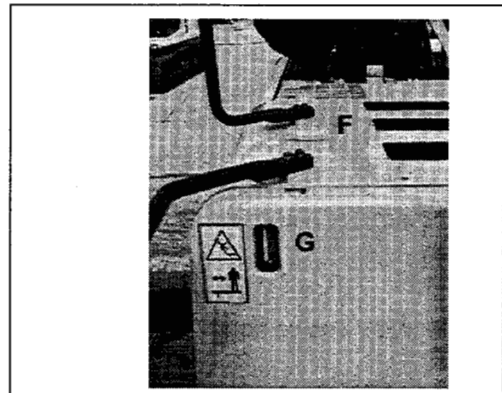


## CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL

### **WARNING**

- When removing the oil filler cap, oil may spurt out, so turn the cap slowly to release the internal pressure before removing the cap.
- If oil has been added to above the H mark, stop the engine and wait for the hydraulic oil to cool down, then drain the excess oil from the drain plug (P).

1. If the work equipment is not in the condition shown in the diagram on the right, start the engine, run the engine at low speed, retract the arm and bucket cylinders, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.
2. Within 15 seconds after stopping the engine, move each control lever (for work equipment and travel) to the full stroke in all directions to release the internal pressure.
3. Check sight gauge (G). The oil level is normal if between the H and L marks.

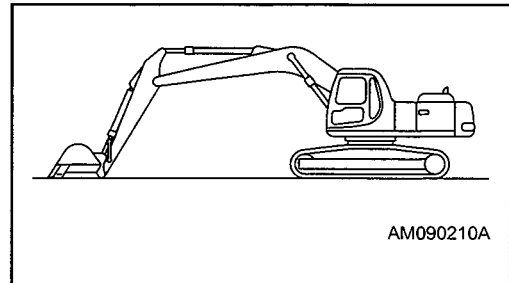

### NOTICE

**Do not add oil if the level is above the H line. This will damage the hydraulic equipment and cause oil to spurt out.**


4. If the level is below the L mark, remove the upper cover of the hydraulic tank and add oil through oil filler (F).

**For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**

### REMARK

The oil level will vary depending upon the oil temperature. Accordingly, use the following as a guide:

- Before operation: around L level  
(Oil temperature 10 to 30°C)
- Normal operation: around H level  
(Oil temperature 50 to 80°C)

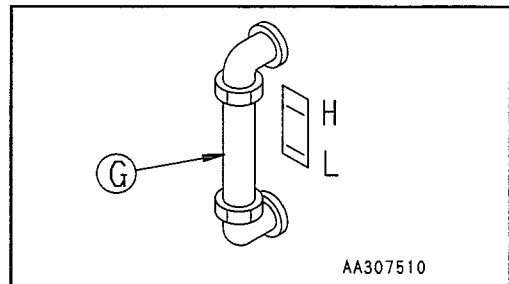

## CHECK AIR CLEANER FOR CLOGGING

1. Confirm that the air cleaner clogging monitor does not flash
2. If it flashes, immediately clean or replace the element.

For details of the method of cleaning the element, see "CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT" on page 178.

## CHECK ELECTRIC WIRINGS

### ⚠ WARNING

- If the fuse blows frequently, or there are traces of short-circuiting in the electric wiring, always locate and repair the cause.
- Accumulation of flammable material (dead leaves, twigs, grass etc.) around the battery may cause fire, so always check and remove such material.
- Keep the top surface of the battery clean and check the breather hole in the battery cap. If it is clogged with dirt or dust, wash the battery cap to clear the breather hole.


Check for damage and wrong capacity of the fuse and any sign of disconnection or short circuit in the electric wiring. Check also for loose terminals and tighten any loose parts.  
Check the wiring of the "battery", "starting motor" and "alternator" carefully in particular.

When carrying out walk-around checks or checks before starting, always check if there is any accumulation of flammable material around the battery, and remove such flammable material.

Please contact your Komatsu distributor for investigation and correction of the cause.

## CHECK FUNCTION OF HORN


1. Turn the starting switch to the ON position.
2. Confirm that the horn sounds without delay when the horn button is pressed. If the horn does not sound, ask your Komatsu distributor for repair.

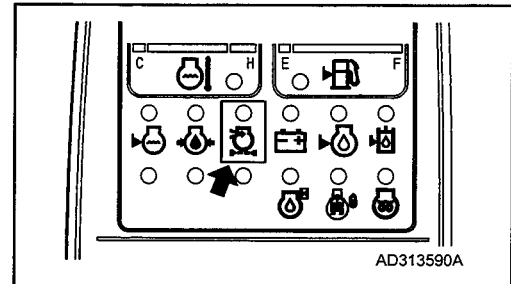

### CHECK FOR WATER AND SEDIMENT IN WATER SEPARATOR, DRAIN WATER

A fuel sedimentor is mounted in pump compartment. Entrapped sediment & water can be seen through the glass bowl.


1. LOOSE DRAIN PLUG (1) and drain water and sediment until none visible in bowl.
2. Tighten drain plug

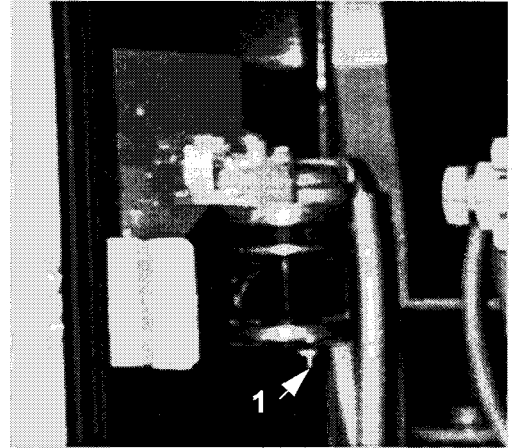

### CHECK FOR WATER IN PRIMARY FUEL FILTER, DRAIN WATER

A primary fuel filter is fitted on the engine.

Drain the water from the primary separator by turning cap at the bottom of the filter.

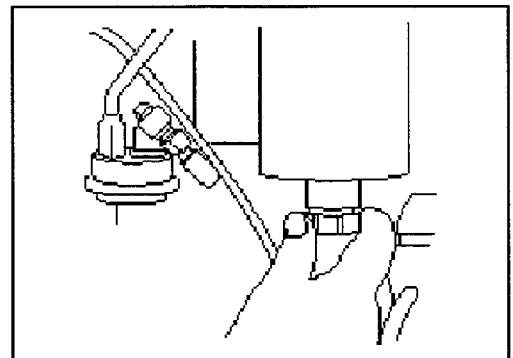

## ADJUSTMENT BEFORE OPERATION OPERATOR'S SEAT

### **▲ WARNING**

- Adjust the seat position before starting operations or after changing the operator.
- Adjust the seat so that the brake pedal can be depressed fully with the operator's back against the backrest.

#### **A: Fore-and-aft adjustment of seat**

Pull lever (1) up. After the seat is set to the desired position, release the lever.

**NOTE:** This operation will not affect relative position of seat and wrist control levers.

#### **B: Fore-and-aft adjustment of seat**

Pull lever (2) up. After the seat is set to the desired position, release the lever.

**NOTE:** This operation will affect relative position of seat and wrist control levers.

#### **C: Adjustment of seat tilting angle**

Pull lever (3) up. After the seat back is set to the optimum position for easy operation, release the lever. Sit with your back against the seat back when adjusting. If your back is not touching the seat back, it may suddenly move forward.

#### **D: Adjustment of armrest height**



Turn thumbwheel (4) to adjust armrests to comfortable height. (Armrest can also be lifted upwards to ease access).

#### **E : Adjustment of tilting seat angle**

Push lever (5) down to alter seat angle, release lever when seat is in required position.

#### **F: Suspension adjustment (standard seat)**

When knob (6) is turned clockwise, the suspension becomes harder and when turned anti-clockwise, softer. Adjust the dial so that the suspension best matching the operator's weight is selected.

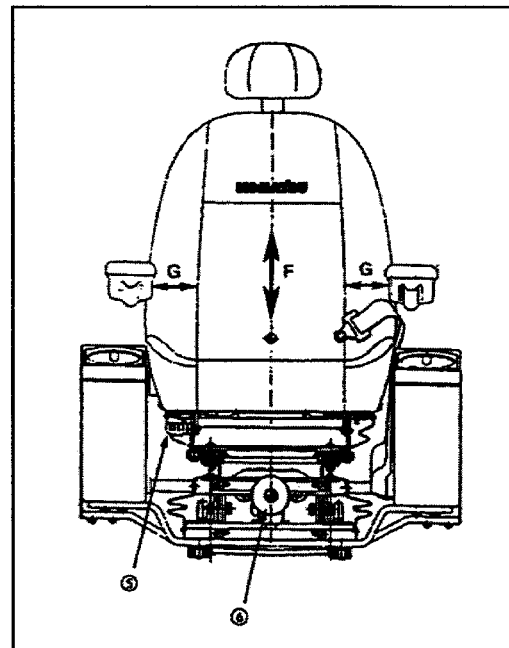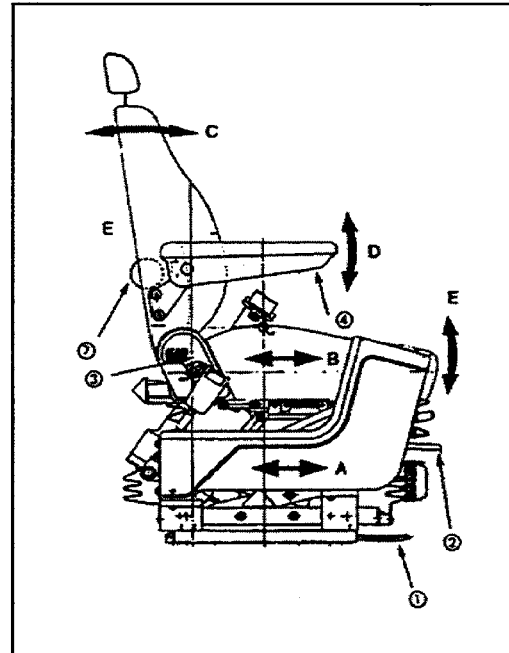


**G: Lumbar adjustment**

Turn knob (7) to adjust lumbar supports.


**(H) Air suspension adjustment (option).**

When button 8 is pressed the air compressor will harden the suspension, and when the button is pulled out, air is released to soften the suspension. Note that the compressor can only be activated when the ignition is on.

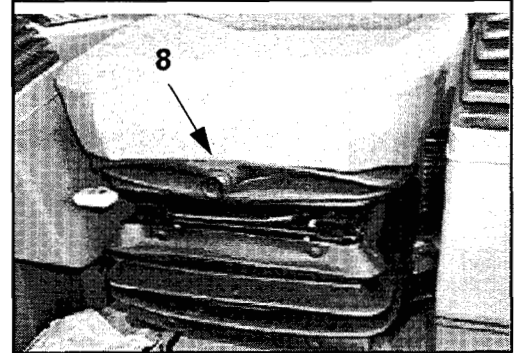**ADJUSTMENT OF MONITOR PANEL ANGLE**

Turn the monitor panel so that the operator can view the monitor with ease. When adjusting the angle, the panel should be set to the desired position using both hands. The panel is automatically locked at that position.

Amount of adjustment: 30° (stepless)

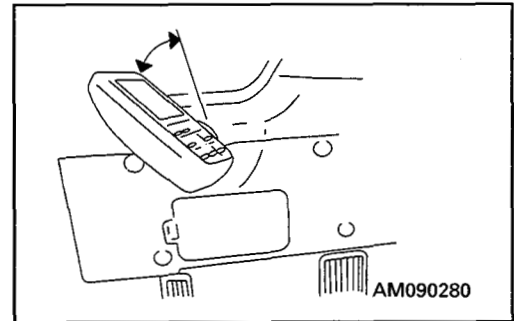

## OPERATIONS AND CHECKS BEFORE STARTING ENGINE

### **WARNING**

If the control lever is touched by accident, the work equipment or the machine may move suddenly. When leaving the operator's compartment, always set the safety lock lever securely to the LOCK position.

1. Check that safety lock lever (1) is at the LOCK position.
2. Check the position of each lever.

Set the control lever to the neutral position.  
When starting the engine, never touch the knob button.

3. Insert the key in starting switch (2), turn the key to the ON position, then carry out the following checks.





The buzzer will sound for approx. 1 sec, and the following monitors and gauges will light up for approx. 3 sec.

- Radiator water level monitor (3)
- Engine oil level monitor (4)
- Hydraulic oil level monitor (5)
- Charge level monitor (6)
- Fuel level monitor (7)
- Engine water temperature monitor (8)
- Engine oil pressure monitor (9)
- Engine water temperature gauge (10)
- Fuel gauge (11)
- Engine pre-heating monitor (12)
- Air cleaner clogging monitor (13)
- Swing lock monitor (14)
- Replacement monitor of engine oil (15)

If the monitors or gauges do not light up or the buzzer does not sound, there is probably a broken bulb or disconnection in the monitor wiring, so contact your Komatsu distributor for repairs.

After approx. 3 sec, the following gauges will remain on and the other monitors will go out.


- Engine water temperature gauge (10)

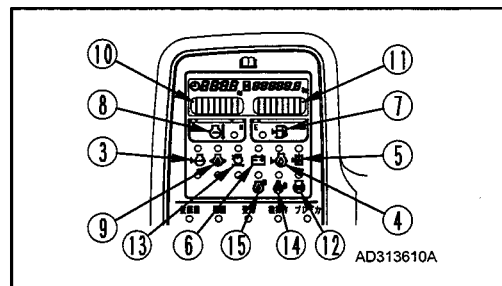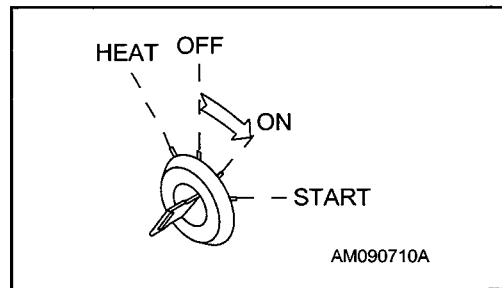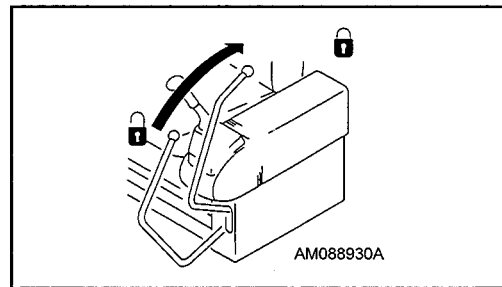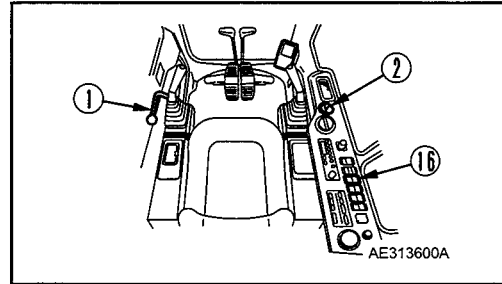

- Fuel gauge (11)

(2) Press lamp switch (1) to turn on the head lamps.

If the lamp switch does not light up, there is probably a broken bulb or disconnection in the wiring, so contact your Komatsu distributor for repairs.

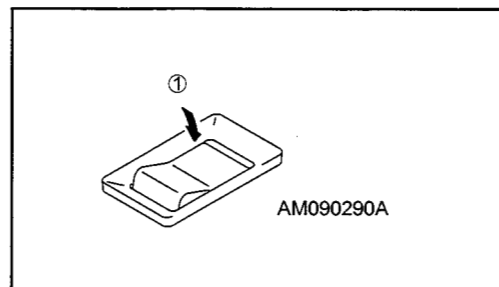



## STARTING ENGINE

### NORMAL STARTING

#### **WARNING**



Check that there are no persons or obstacles in the surrounding area, then sound the horn and start the engine.

#### NOTICE


Do not keep the starting motor rotating continuously for more than 20 seconds.

If the engine will not start, wait for at least 2 minutes before trying to start the engine again.


1. Set fuel control dial (1) at the low idling (MIN) position.

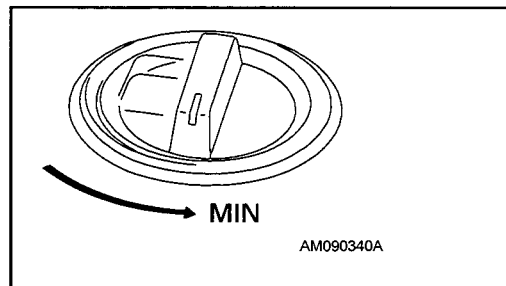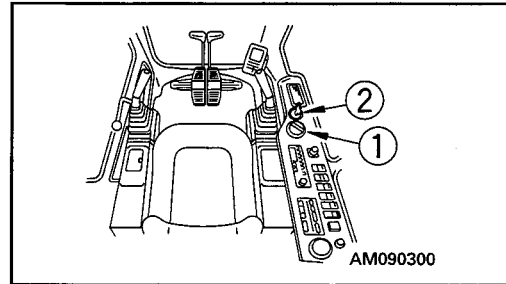

2. Turn the key in starting switch (2) to the START position. The engine will start.

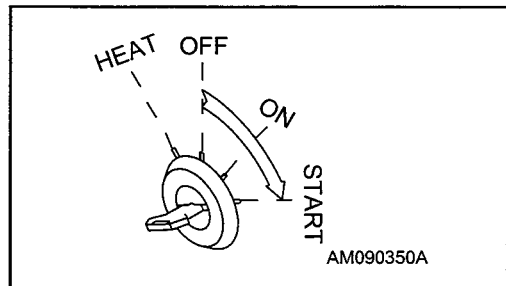

3. When the engine starts, release the key in starting switch (2). The key will return automatically to the ON position.

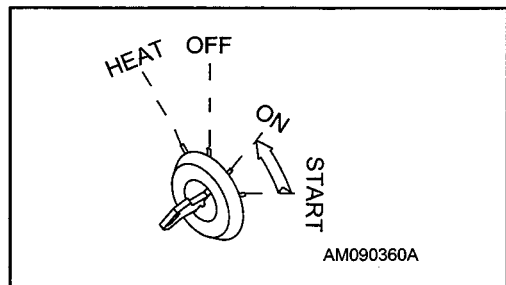

## STARTING IN COLD WEATHER

### WARNING

- Check that there are no persons or obstacles in the surrounding area, then sound the horn and start the engine.
- Never use starting aid fluids as they may cause explosions.

### NOTICE

Do not keep the starting motor rotating continuously for more than 20 seconds.

If the engine fails to start, repeat from step 2 and after waiting for about 2 minutes.





When starting in low temperatures, do as follows.

1. Set fuel control dial (1) at the low idling (MIN) position.

### REMARK

There are 10 notches for the dial rotation, and a click can be felt by hand.


2. Hold the key in starting switch (2) at the HEAT position, and check that preheating monitor (3) lights up. After about 30 seconds, preheating monitor lamp (3) will flash for about 10 seconds to indicate that preheating is finished.

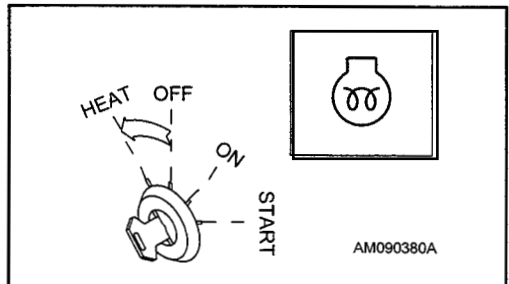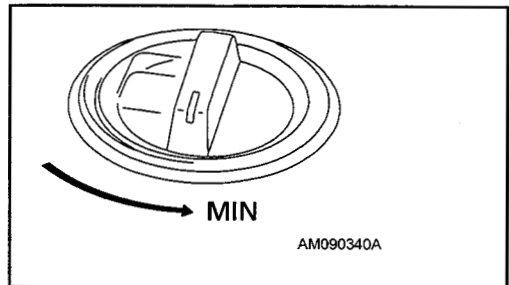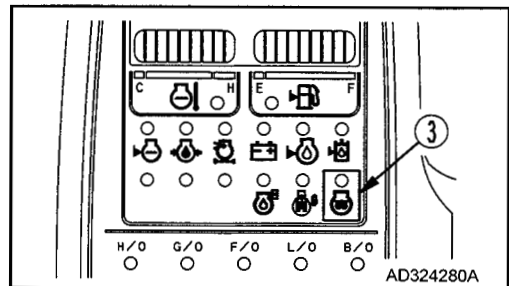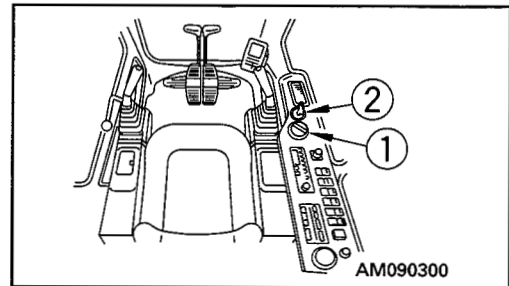


**REMARK**

The monitor and gauge also light up when the key is at the HEAT position, but this does not indicate any abnormality.

- When preheating monitor (3) flashes, turn the key in starting switch (2) to the START position to start the engine.

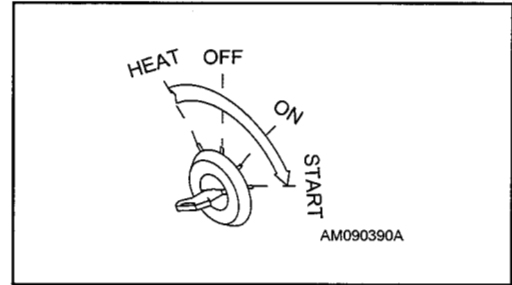

- When the engine starts, release the key in starting switch (2). The key will return automatically to the ON position.

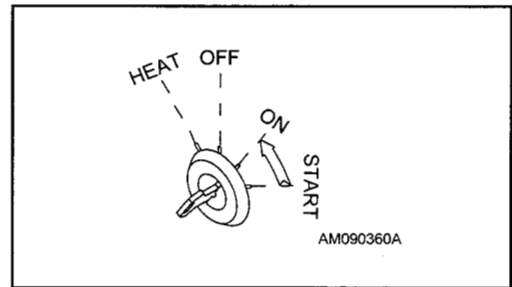

## OPERATIONS AND CHECKS AFTER STARTING ENGINE

### **WARNING**

- Emergency stop
- If there has been any abnormal actuation or trouble, turn the starting switch key to the OFF position.
- If the work equipment is operated without warming the machine up sufficiently, the response of the work equipment to the movement of the control lever will be slow, and the work equipment may not move as the operator desires, so always carry out the warming-up operation. Particularly in cold areas, be sure to carry out the warming-up operation fully.


### WHEN NORMAL

#### NOTICE


- When the hydraulic oil is at a low temperature, do not carry out operations or move the levers suddenly. Always carry out the warming-up operation. This will help to extend the machine life. Do not suddenly accelerate the engine before the warming-up operation is completed.

- Do not run the engine at low idling or high idling continuously for more than 20 minutes. This will cause leakage of oil from the turbocharger oil supply piping. If it is necessary to run the engine at idling, apply a load from time to time or run the engine at a mid-range speed.


After starting the engine, do not immediately start operations. First, carry out the following operations and checks.

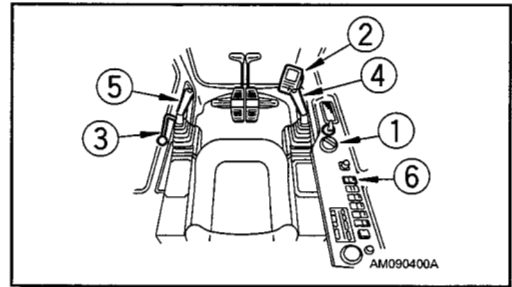


1. Turn fuel control dial (1) to the center position between LOW IDLING (MIN) and HIGH IDLING (MAX) and run the engine at medium speed for about 5 minutes with no load.

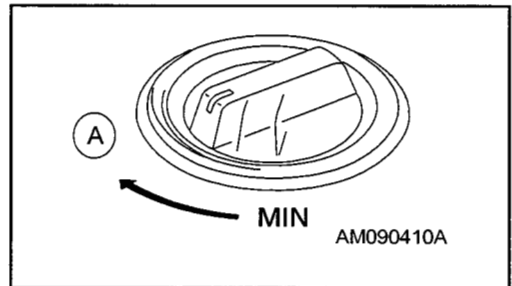

2. While running the engine at medium speed (A), press working mode switch (2) until the heavy-duty operation mode lamp is turned on.

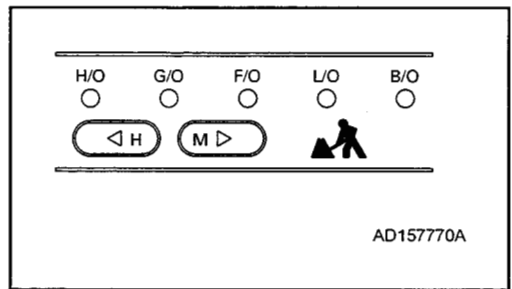


3. Set the safety lock lever to the FREE position, and raise the bucket from the ground.

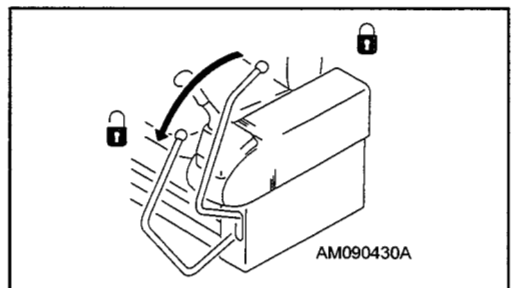

4. Operate bucket control lever (5) and arm control lever (4) slowly to move the bucket cylinder and arm cylinder to the end of the stroke.


(A) IN	(C) CURL
(B) OUT	(D) DUMP

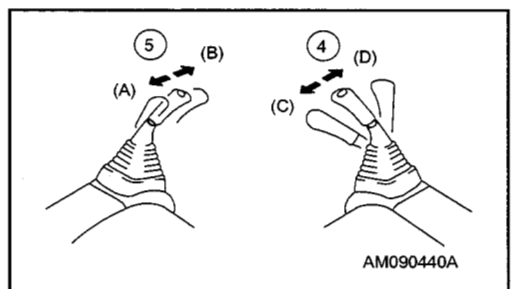

5. Carry out bucket and arm operation for 5 minutes at full stroke, alternating between bucket operation and arm operation at 30 second intervals.  
If the swing lock switch (6) is set to the ON (actuated) position and swing control lever (5) is operated at full stroke, oil temperature rise can be increased earlier.


**NOTICE**

**When the work equipment is retracted, take care that it does not interfere with the machine body or ground.**

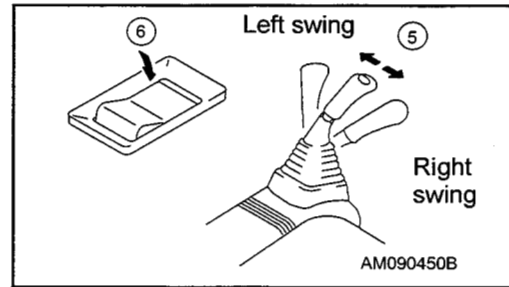

6. After carrying out the warming-up operation, check that each gauge and monitor lamp is in the following condition.

- Engine water temperature gauge (7): Inside green range
- Fuel gauge (8): Inside green range
- Engine water temperature monitor (9): OUT
- Radiator water level monitor (10): OUT
- Engine oil pressure monitor (11): OUT
- Charge level monitor (12): OUT
- Fuel level monitor (13): OUT
- Air cleaner clogging monitor (14): OUT
- Engine pre-heating lamp (15): OUT
- Engine oil level monitor (16): OUT
- Hydraulic oil level monitor (17): OUT
- Replacement monitor of engine oil (18): OUT

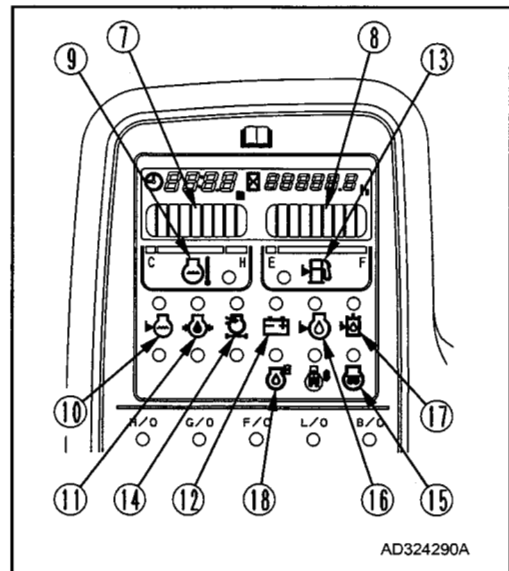

7. Check that there is no abnormal exhaust gas colour, noise, or vibration. If any abnormality is found, repair it.


8. Press mode switch (2) until required operation mode lamp is turned on.

**IN COLD AREAS (AUTOMATIC WARMING-UP OPERATION)**

When starting the engine in cold areas, carry out the automatic warming-up operation after starting the engine.


When the engine is started, if the engine water temperature is low (below 30°C), the warming-up operation is carried out automatically.

The automatic warming-up operation is cancelled if the engine water temperature reaches the specified temperature (30°C) or if the warming-up operation is continued for 10 minutes. If the engine water temperature or hydraulic oil temperature are low after the automatic warming-up operation, warm the engine up further as follows.

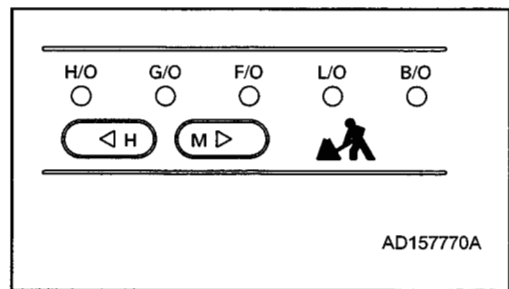


**NOTICE**


- **When the hydraulic oil is at a low temperature, do not carry out operations or move the levers suddenly. Always carry out the warming-up operation. This will help to extend the machine life.**
  - **Do not suddenly accelerate the engine before the warming-up operation is completed.**
  - **Do not run the engine at low idling or high idling continuously for more than 20 minutes. This will cause leakage of oil from the turbocharger oil supply piping. If it is necessary to run the engine at idling, apply a load from time to time or run the engine at a mid-range speed.**
1. Set fuel control dial (1) at the low idling (MIN) position and run the engine for about 5 minutes without load.

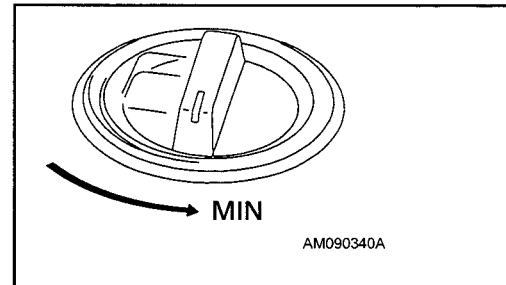


- Press working mode switch (2) on the monitor panel until H.O (heavy duty operation) mode lamp lights up.

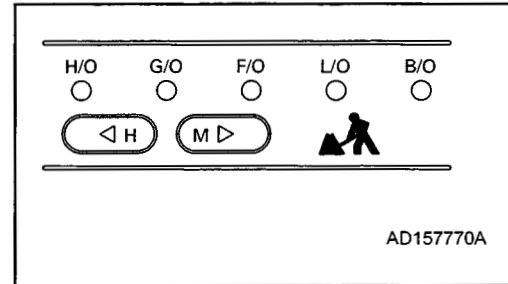

- Turn fuel control dial (1) to the mid-range (A) speed position.

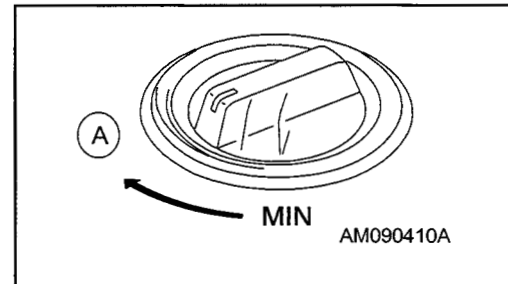


- Set safety lock lever (4) to the FREE position and raise the bucket from the ground.

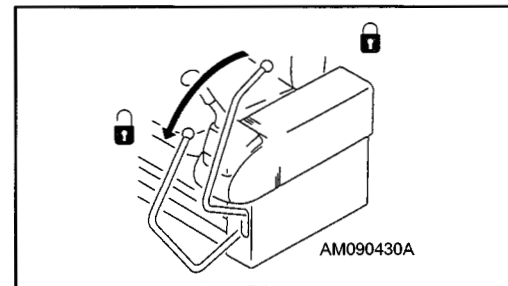

- Operate bucket control lever (5) and arm control lever (4) slowly to move the bucket cylinder and arm cylinder to the end of their stroke.

(A) IN	(C) CURL
(B) OUT	(D) DUMP

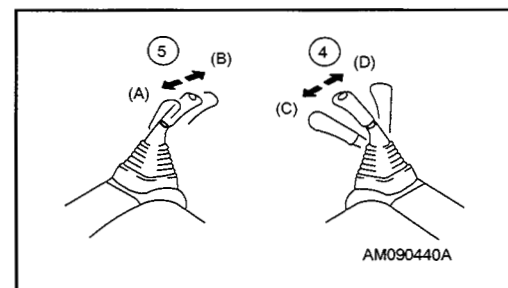


- Operate the bucket for 30 seconds and the arm for 30 seconds in turn fully for 5 minutes.

**REMARK**


Turn swing lock switch (1) ON (ACTUATED) and operate the lever to make the oil temperature rise more quickly.

**NOTICE**

When the work equipment is retraced, take care that it does not interfere with the machine body or ground.

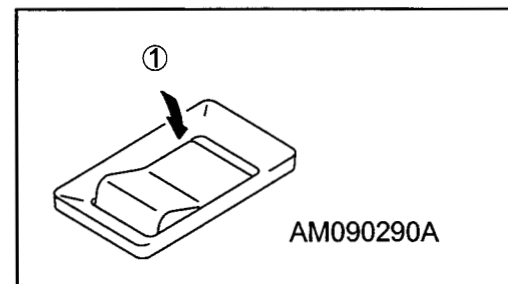

7. Turn fuel control dial (1) to the full speed (MAX) position and carry out the operation in Step 6 for 3-5 minutes.
8. Repeat the following operation 3 - 5 times and operate slowly.
  - Boom operation RAISE ↔ LOWER
  - Arm operation IN ↔ OUT
  - Bucket operation CURL ↔ DUMP
  - Swing operation LEFT ↔ RIGHT
  - Travel (Lo) operation FORWARD ↔ REVERSE

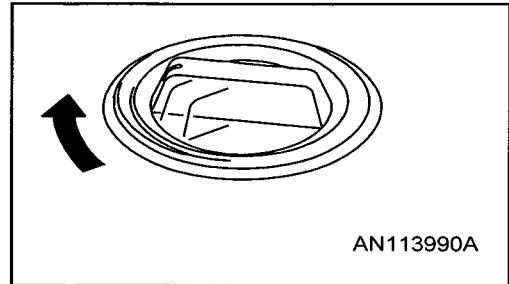


**REMARK**

In the above operation is not carried out, there may be a delay in response when starting or stopping each actuator, so continue the operation until it becomes normal.


9. Use working mode switch (2) on the monitor panel to select the working mode to be used.

**NOTICE**


**Cancelling automatic warming-up operation**  
 If it becomes necessary in an emergency to lower the engine speed to low idling, cancel the automatic warming-up operation as follows.

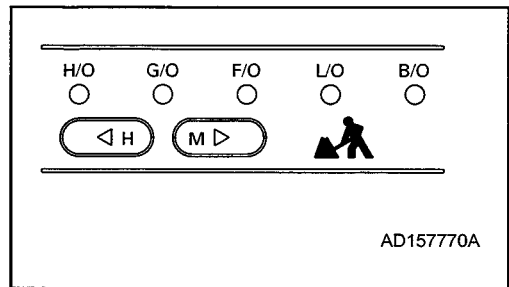

1. Turn fuel control dial (1) to the full speed (MAX) position and hold it for 3 seconds.

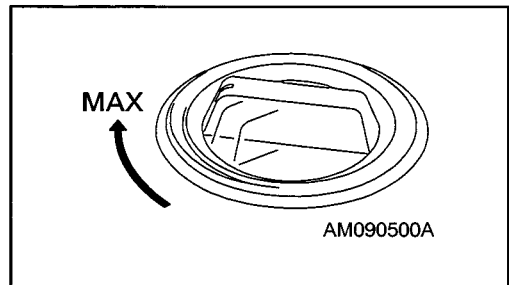

2. When fuel control dial (1) is returned to the low idling (MIN) position, the engine speed will drop.

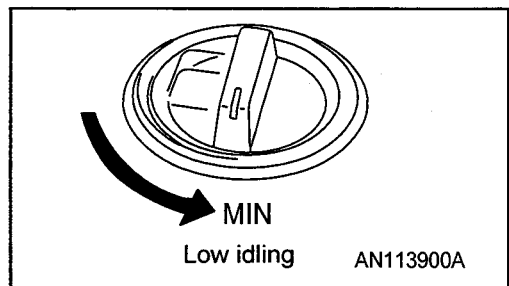




# MOVING MACHINE OFF


## MOVING MACHINE FORWARD

**WARNING**


- Before operating the travel levers, check the direction of the track frame. If the sprocket is at front, the operation of the track levers is reversed.
- When moving off, check that the area around the machine is safe, and sound the horn before moving.
- Clear all personnel from the machine and the area.
- Clear all obstacles from the path of the machine.
- If the lever is moved inside the deceleration range, engine speed will rise suddenly. Operate the levers carefully.

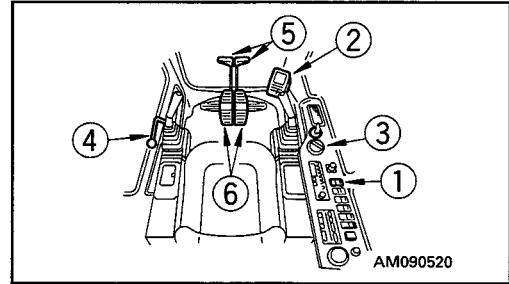


1. Set swing lock switch (1) to the ON (actuated) position and confirm that swing lock monitor lamp (2) lights up.

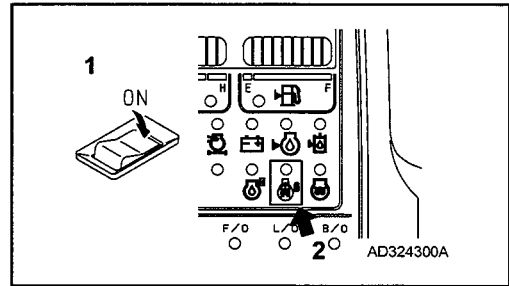

2. Turn fuel control dial (3) towards the full speed position to increase the engine speed.

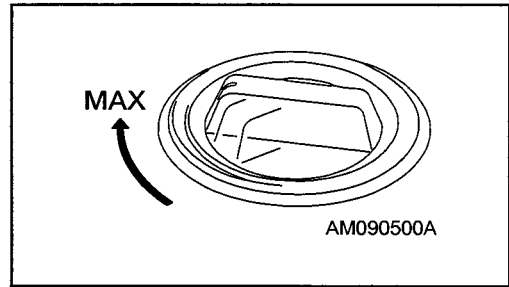


3. Set safety lock lever (4) in the FREE position, fold the work equipment, and raise it 40 - 50 cm from the ground.

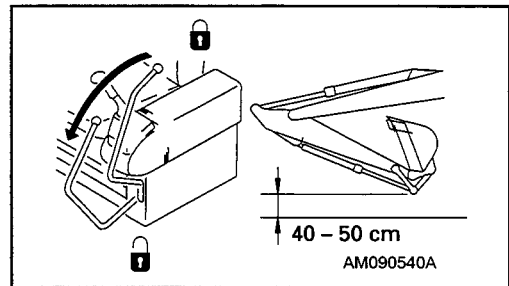

4. Operate right and left travel levers (5) or right and left travel pedals (6) as follows.

- When the sprocket is at the rear of the machine. Push levers (6) forward slowly or depress the front part of pedals (6) slowly to move the machine off.

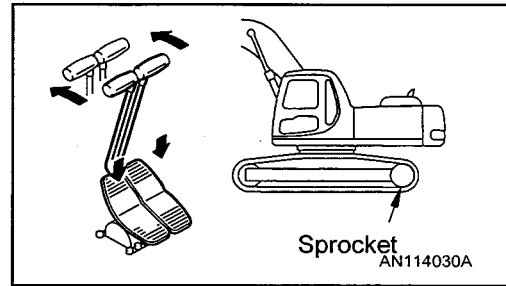

- When the sprocket is at the front of the machine. Pull levers backward slowly or depress the rear part of pedals (6) slowly to move the machine off.



#### REMARK

Each time the travel levers are operated on machines equipped with the travel alarm, the alarm sounds to warn people in the machine vicinity.


#### MOVING MACHINE BACKWARD

#### WARNING


- Before operating the travel levers, check the direction of the track frame. If the sprocket is at front, the operation of the track levers is reversed.
- When moving off, check that the area around the machine is safe, and sound the horn before moving.
- Clear all personnel from the machine and the area.
- Clear all obstacles from the path of the machine.
- Use extreme care when reversing the machine. Note there is a blind spot behind the machine.
- If the lever is moved inside the deceleration range, engine speed will rise suddenly. Operate the levers carefully.

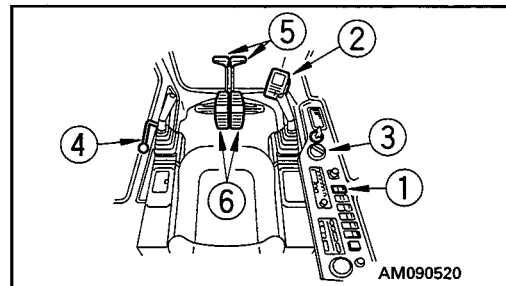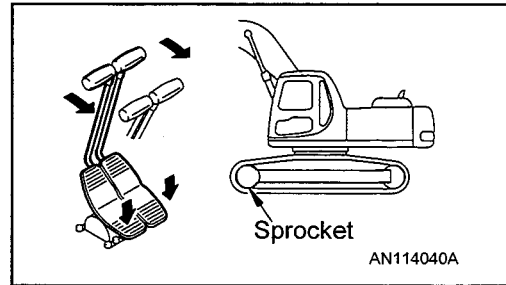


1. Set swing lock switch (1) to the ON (actuated) position and confirm that swing lock monitor lamp (2) lights up.
2. Turn fuel control dial (3) towards the full speed (MAX) position to increase the engine speed.

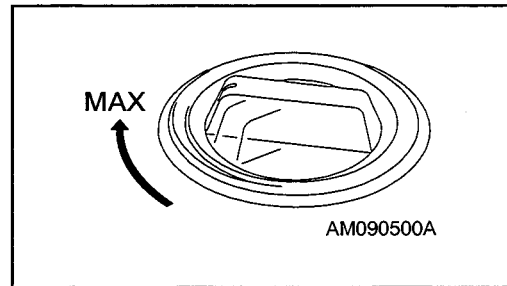


3. Set safety lock lever (4) in the FREE position, fold the work equipment, and raise it 40 - 50 cm from the ground.
4. Operate right and left travel levers (5) or right and left travel pedals (6) as follows.

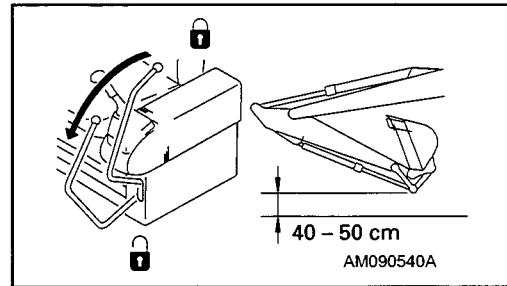

- When the sprocket is at the rear of the machine  
Pull levers (5) backward slowly or depress the rear part of pedals (6) slowly to move the machine off.

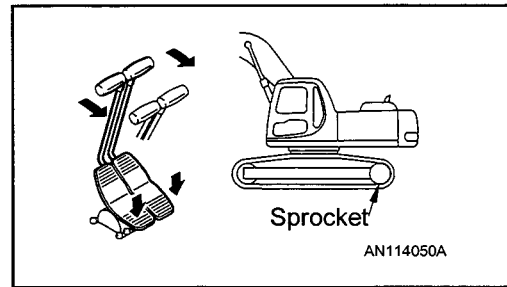

- When the sprocket is at the front of the machine  
Push levers (5) forward slowly or depress the front part of pedals (6) slowly to move the machine off.

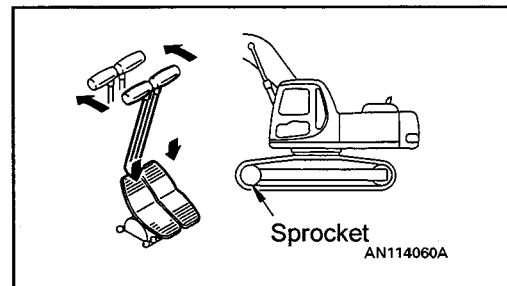

## STEERING MACHINE

### STEERING (changing direction)

**WARNING**

Before operating the travel levers, check the position of the sprocket. If the sprocket is at the front, the operation of the travel levers is reversed.

Use the travel levers to change direction.

Avoid sudden changes of direction as far as possible. In particular, when carrying out counter-rotation (spin turn), stop the machine first before turning.



Operate two travel levers (1) as follows.

#### Changing direction of machine when stopped

When turning to the left:  
Push the right travel lever forward to travel left when travelling forward; and pull it back to turn left when travelling in reverse.


**REMARK**

When turning to the right, operate the left travel lever in the same way.

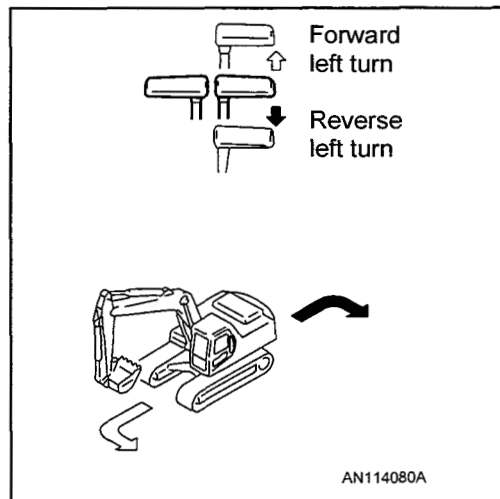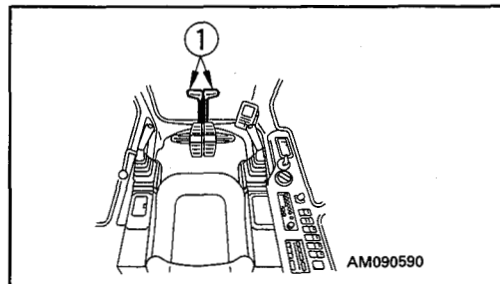

#### Steering when travelling (left and right travel levers both operated in same direction)

When turning to the left:  
If the left travel lever is returned to the neutral position, the machine will turn to the left.

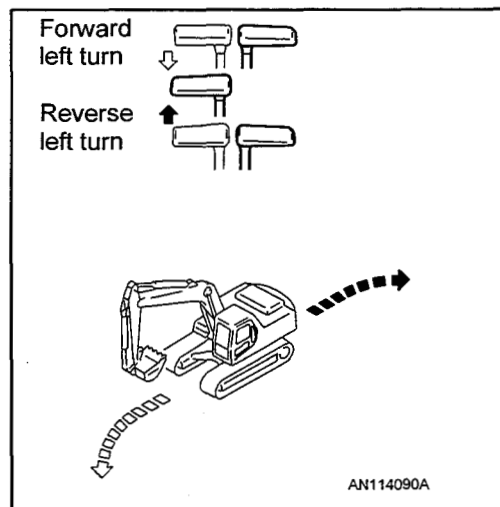

**REMARK**


When turning to the right, operate the right travel lever in the same way.

**When making counter-rotation turn (spin turn)**

When turning left using counter-rotation, pull the left travel lever back and push the right travel lever forward.

**REMARK**




When turning to the right using counter-rotation, pull the right travel lever back and push the left travel lever forward.

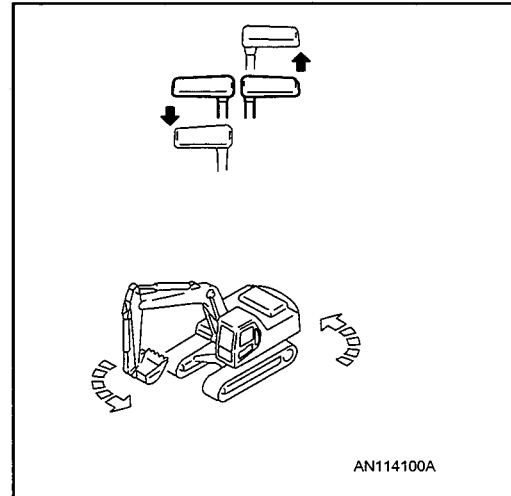


## STOPPING MACHINE

### **⚠ WARNING**

- Avoid stopping suddenly. Give yourself ample room when stopping.
- When stopping the machine, select flat hard ground and avoid dangerous places. If it is unavoidably necessary to park the machine on a slope, block the tracks. As an additional safety measure, thrust the bucket into the ground.
- If the control lever is touched by accident, the work equipment or the machine may move suddenly, and this may lead to a serious accident. Before leaving the operator's compartment, always set the safety lock lever securely to the LOCK position.

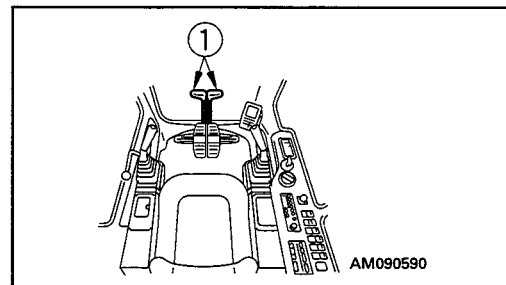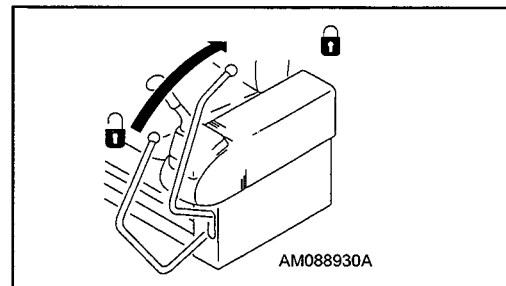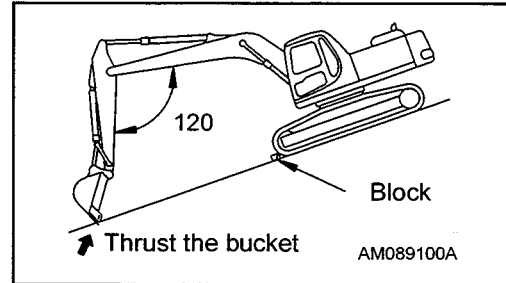


1. Put the left and right travelling and steering levers (1) in the neutral position, then stop the machine.

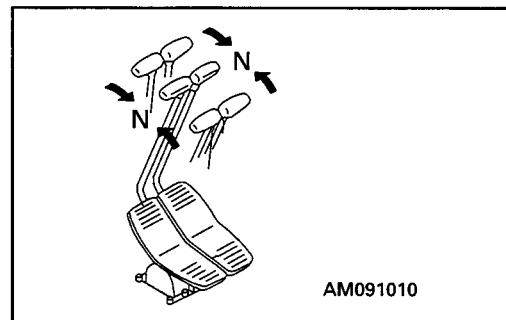

## SWINGING

### WARNING


When operating the swing, check that the area around the machine is safe.

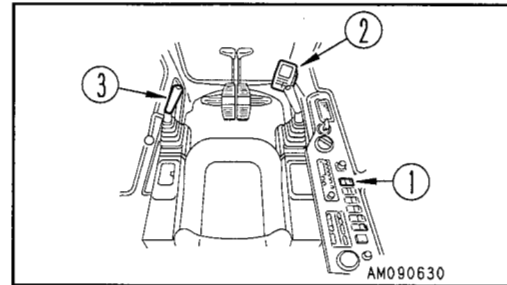

1. Before operating the swing, turn swing lock switch (1) OFF (CANCELLED).


### NOTICE

Check that swing lock lamp (2) goes out at the same time.

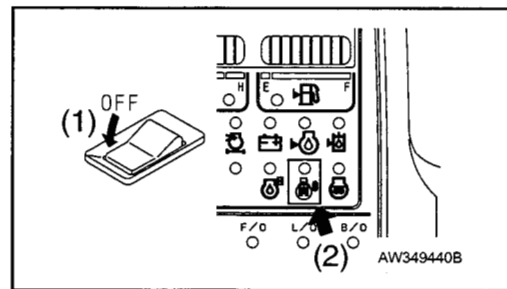


2. Operate the left work equipment control lever (3) to swing the upper structure.

- (A) Left swing
- (B) Right swing

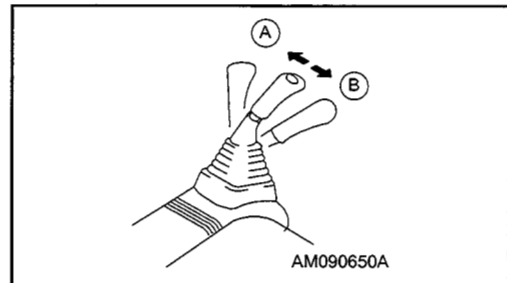

3. When not operating the swing, turn the swing lock switch (1) ON (ACTUATED).

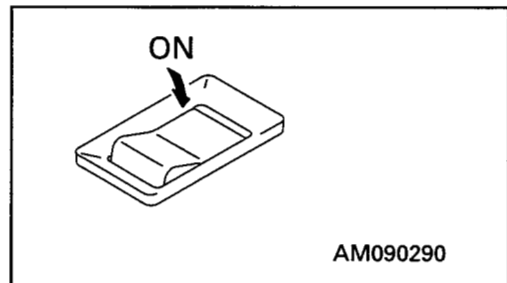

## OPERATION OF WORK EQUIPMENT

### **⚠ WARNING**

If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.





The work equipment is operated by the left and right work equipment control levers. The left work equipment control lever operates the arm and swing, and the right work equipment control lever operates the boom and bucket.

The movements of the lever and work equipment are as shown in the diagrams on the right. When the levers are released, they automatically return to the neutral position and the work equipment is held in place.

- If the work equipment control lever is returned to the neutral position when the machine is stopped, even if the fuel control dial is set to FULL, the auto-deceleration mechanism will act to reduce the engine speed to a mid-range speed.

### **REMARK**

If the levers are operated within 15 seconds after stopping the engine, it is possible to lower the work equipment to the ground. In addition, the levers can also be operated to release any remaining pressure inside the hydraulic cylinder circuit and to lower the boom after the machine on a trailer.

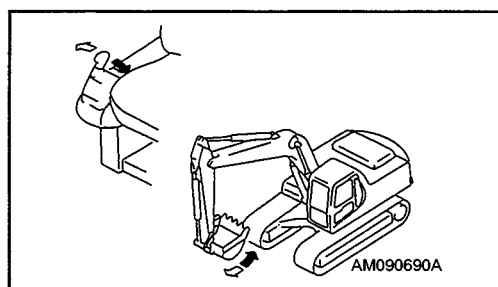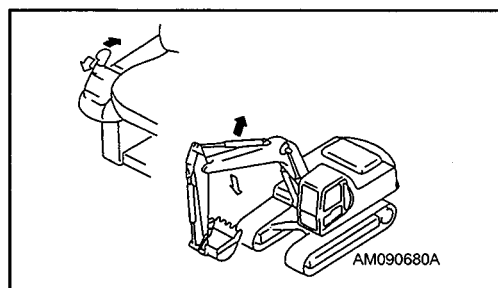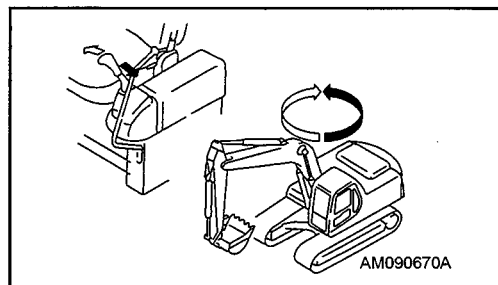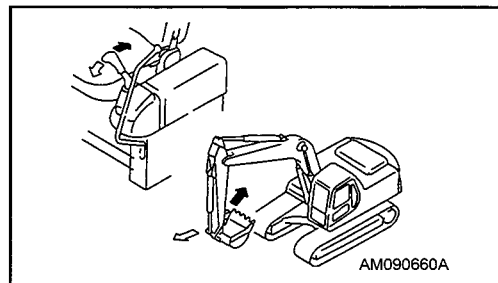



## HANDLING ACTIVE MODE

Make full use of the active mode to match the purpose and conditions of the operation in order to carry out operations effectively and efficiently.

The active mode selector switch can be turned ON (lights up) in order to provide quick leveling operations and effective deep digging and loading operations.


ON lights up: Active mode ON

ON goes out: Active mode cancelled

The ON lamp is off when the engine is started.

If it is turned ON (lights up), it is possible to enter the active mode from any working mode.

Even when it is turned ON (lights up), the working mode display does not change. When the lamp goes out, the system returns to the original working mode.

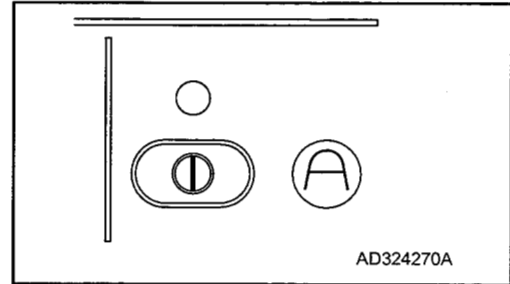

Mode	Effective operations	Advantages for operations
Active mode	Digging and loading	By increasing the boom lowering speed and engine speed and the boom down safety valve pressure, the cycle time for deep digging operations is reduced.
	Levelling	By increasing the arm IN speed and the pump response, the speed of rough levelling (light loads) is increased.

### REMARK

Use the active mode with the fuel control dial turned to the MAX position. If it is not at the MAX position, it will be impossible to achieve a suitable increase in the work equipment speed.

1. Turn on the active mode selector switch (lights up)
2. While in this condition, press and hold the knob switch on the lefthand work equipment lever once (single click).
3. Since the machine returns to the normal active mode in 8.5 sec. after the switch is pressed, use the active power-max function effectively for heavy and quick work.

Function	Suitable work	Advantages in work
Active power-max function	Digging and loading (heavy load) Rock raising (Heavy load)	Since digging forces of arm and bucket are increased, working speed is increased.

The load sensing function is installed to the active mode. If the machine is set to active power-max, however, the load sensing function is turned off and the engine speed returns to full speed to increase the speed of the work equipment.

## WORKING MODE SELECTION


### WORKING MODE

The mode selector switches can be used to switch the mode to match the conditions and purpose of work, thereby enabling efficient operation.

Use the following procedures to make the most effective use of each mode.

When the starting switch is turned ON, the working mode is set to general operation mode (G.O.), so normal work can be carried out without needing to set the mode.

Set the most effective mode according to the type of work using working mode selector switch.

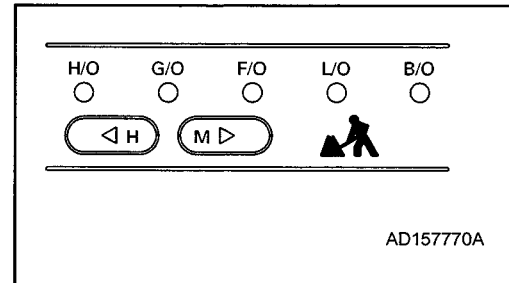

Working mode	Applicable work	Power max. (power up)		Swift slow-down (Speed down)	
		Power	Set pressure	Speed	Set pressure
Heavy-duty operation mode (H.O)	Large amount of digging and loading in a short time	5 % up	9 % up	40 % down	9 % up
General operation mode (G.O.)	Normal digging and loading operation	23 % up	9 % up	30 % down	9 % up
Finishing operation mode (F.O.)	Finishing, leveling and general hauling operation	-	-	-	-
Lifting operation mode (L.O.)	Positioning, etc.	-	-	-	-
Breaker operation mode (B.O.)	Breaker operation	-	-	-	-


### NOTICE

**Never carry out breaker operation in heavy-duty operation mode (H.O.) as this may result in breakage of hydraulic equipment.**


**POWER MAX./ SWIFT SLOW-DOWN**

During operation the power max. and swift slow-down for the work equipment can be carried out at a touch during operations. This can be used effectively in combination with the working mode when necessary.

1. When the starting switch is turned ON, the power max. lamp lights up. Each time the set switch is pressed, the system switches between power max. and swift slow-down.

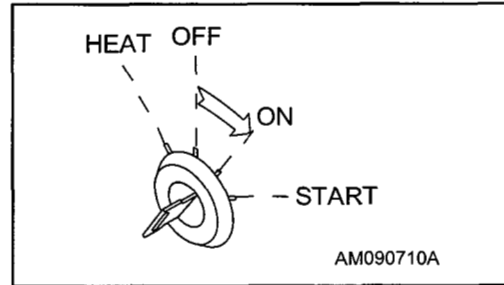


AM090710A

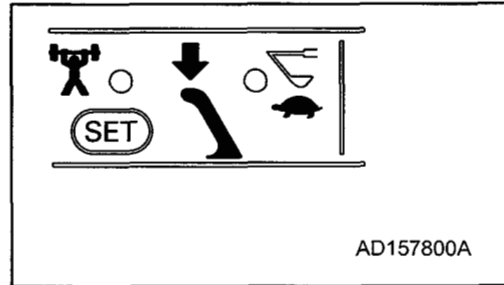

AD157800A

2. If the left lower knob switch is kept pressed, the function is actuated as long as the switch is pressed. However, for the power max. function, the function is automatically finished after 8.5 seconds.

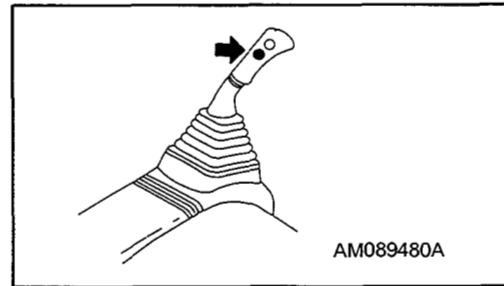

AM089480A

## PROHIBITIONS FOR OPERATION

### ⚠ WARNING


If it is necessary to operate the work equipment control lever when the machine is travelling, stop the machine before operating the work equipment control lever.

- If the lever is moved inside the deceleration range, engine speed will suddenly rise. Operate the levers carefully.
- Never operate the machine on a rock bed (hard or soft rock).

#### Prohibited operations using swing force


Do not use the swing force to compact soil or break earth mounds or walls.

When swinging, do not dig the bucket teeth into the soil. These operations will damage the work equipment.

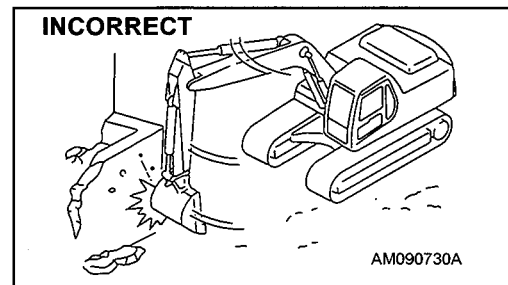


#### Prohibited operations using travel force

Do not leave the bucket dug into the ground and use the travel force to excavate. This will bring excessive force to bear on the rear of the machine.

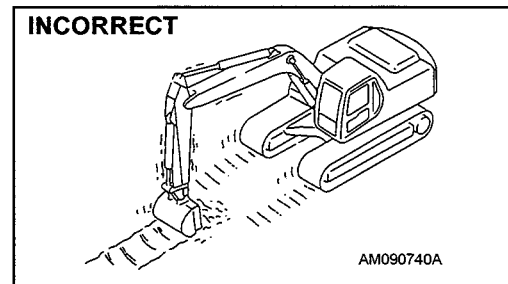


#### Precautions when operating hydraulic cylinders to end of stroke

If the cylinder is operated to the end of its stroke during operations, force will be brought to bear on the stopper inside the cylinder, and this will reduce the life of the machine. To prevent this, always leave a small safety margin (1) when operating the cylinders.

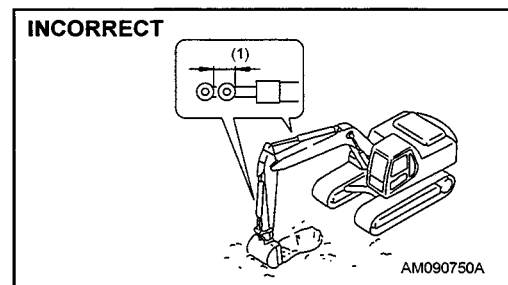

**Prohibited operations using dropping force of bucket**

Do not use the dropping force of the bucket as a pickaxe, breaker, or pile driver. This will bring excessive force to bear on the work equipment, and will not only damage the machine, but is also dangerous.

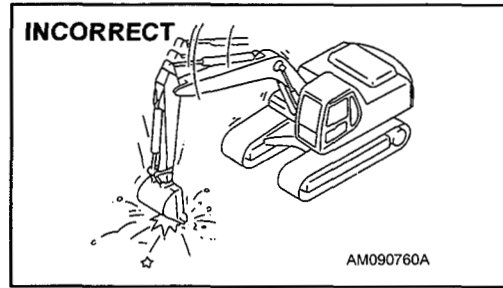


**Prohibited operations using dropping force of machine.**

Do not use the dropping force of the machine for digging.


**Digging rocky ground**

It is better to excavate hard rocky ground after breaking it up by some other means. This will not only reduce damage to the machine but make for better economy.

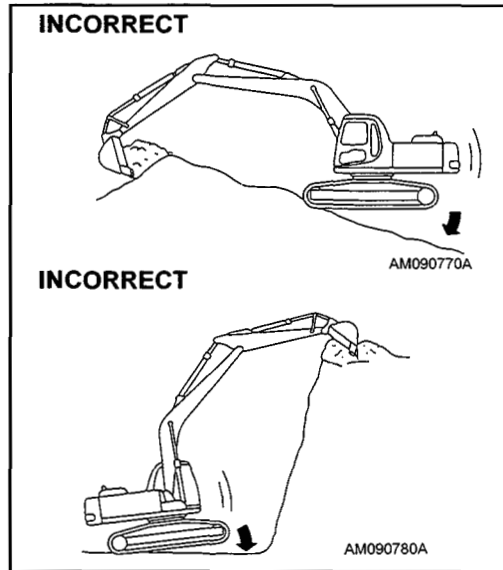

**Sudden lever shifting during HI-speed travel prohibited**


- (1) Never carry out sudden lever shifting as this may cause sudden starting.
- (2) Avoid sudden lever shifting from forward to reverse (or vice versa)
- (3) Avoid sudden lever shifting change such as sudden stopping from near top speed (lever release operation).

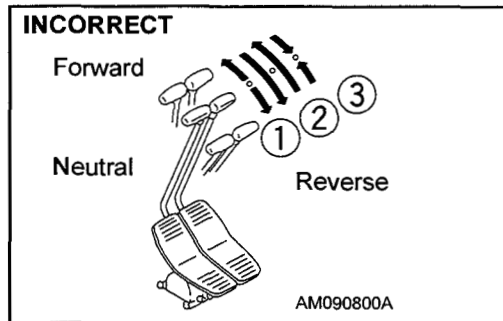

## PRECAUTIONS FOR OPERATION


### PRECAUTIONS WHEN TRAVELLING

When travelling over obstacles such as boulders or tree stumps, the machine (in particular, the undercarriage) is subjected to a large shock, so reduce the travel speed and travel over the obstacle at the center of the tracks. As far as possible, remove such obstacles or avoid travelling over them.

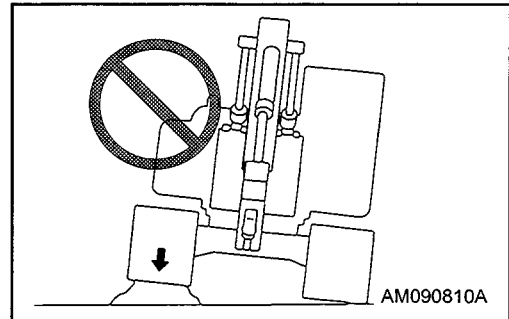

### PRECAUTIONS AT HI-SPEED TRAVEL

On uneven roadbeds such as rock beds or uneven roads with large rocks, travel at Mi or Lo speed. When Hi-speed travelling, set the idler in the forward direction.

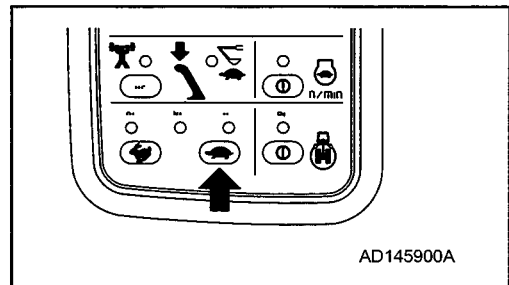


### PERMISSIBLE WATER DEPTH


#### NOTICE

**When driving the machine out of water, if the angle of the machine exceeds 15°, the rear of upper structure will go under water, and water will be thrown up by the radiator fan. This may cause the fan to break. Be extremely careful when driving the machine out of water.**

Do not immerse the machine in water by more than the permissible depth (under center of carrier roller (1)).

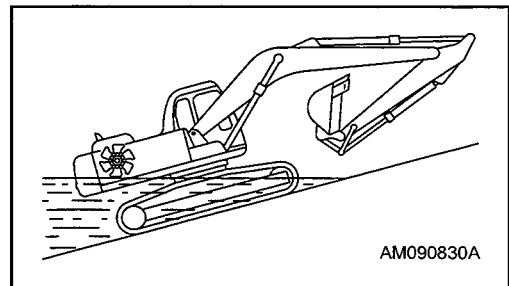



In addition, for parts that have been immersed in water for a long time, pump in grease until the old grease comes out from the bearings. (Around the bucket pins)

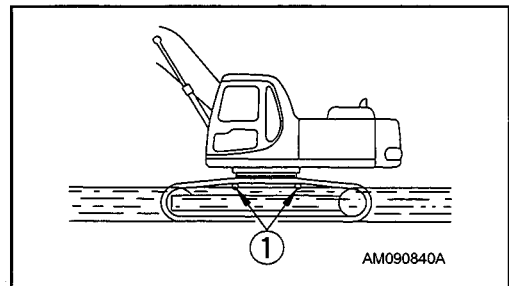


## PRECAUTIONS WHEN TRAVELLING UP OR DOWN HILLS

### **WARNING**


- When travelling, raise the bucket approx. 20 - 30 cm from the ground.  
Do not travel downhill in reverse.
  - When travelling over ridges or other obstacles, keep the work equipment close to the ground and travel slowly.
  - It is dangerous to turn on slopes or to travel across slopes. Always go down to a flat place to perform these operations. It may be longer, but it will ensure safety.
  - If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
- 
- Turning or operating the work equipment when working on slopes may cause the machine to lose its balance and turn over, so avoid such operations. It is particularly dangerous to swing downhill when the bucket is loaded. If such operations have to be carried out, pile soil to make platform on the slope so that the machine can be kept horizontal when operating.
  - Do not travel on slopes of over 30° as there is danger that the machine may overturn.

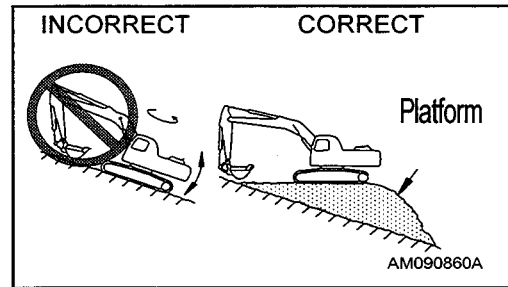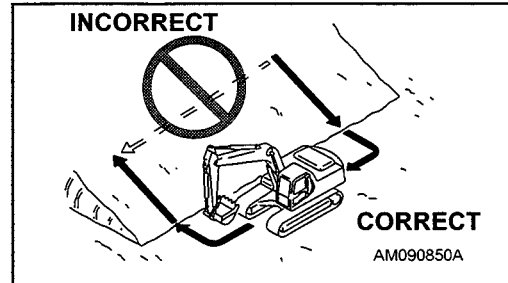

1. When travelling down steep hills, use the travel lever and fuel control lever to keep the travel speed low.  
When travelling down slopes of more than 15°, set the work equipment in the posture shown in the figure on the right, and lower the engine speed.

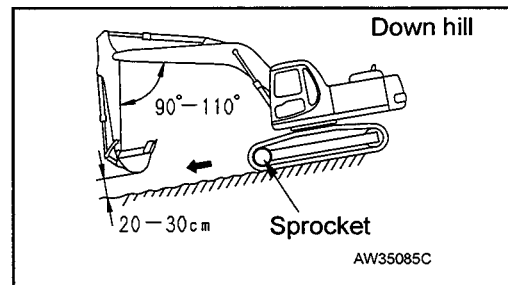

2. When travelling up a steep hill of more than 15°, set the work equipment in the posture shown in the diagram on the right.

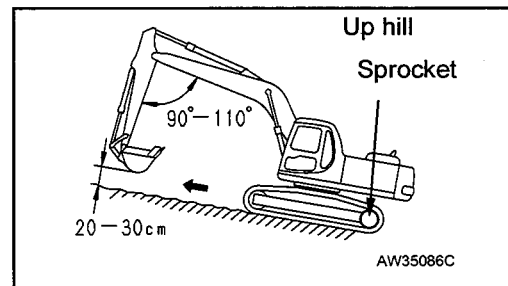

### Braking when travelling downhill

To brake the machine during downhill runs, put the travelling and steering lever in the neutral position. This will cause the brake to be automatically applied.

### If shoes slip

When travelling uphill, if the shoes slip or it is impossible to travel uphill using the force of the track only, it is possible to use pulling force of the arm to help the machine travel uphill.

### **If engine stops**

If the engine stops when travelling uphill, move the travel levers to the neutral position, lower the bucket to the ground, stop the machine, then start the engine again.

### **Precautions on slopes**

- If the engine stops when the machine is on a slope, never use the left work equipment control lever to carry out swing operations. The upper structure will swing under its own weight.
- Do not open or close the door on the cab if the machine is on a slope. This may cause a sudden change in the operating force. Always keep the door locked.

## **HOW TO ESCAPE FROM MUD**

Always operate carefully to avoid getting stuck in mud. If the machine does get stuck in mud, use the following procedures to get the machine out.

### **WHEN ONE SIDE IS STUCK**

When only one side is stuck in mud, use the bucket force to raise the track, then lay boards or logs and drive the machine out. If necessary, put a board under the bucket also.

### **NOTICE**

**When using the boom or arm to raise the machine, always have the bottom of the bucket in contact with the ground. (Never push with the teeth). The angle between the boom and arm should be 90° to 110°. The same applies when using the inverting bucket.**

### **WHEN BOTH SIDES ARE STUCK**

When both tracks are stuck in mud and the machine will not move, lay boards as explained above, and dig the bucket into the ground in front. Then pull in the arm as in normal digging operations and put the travel levers in the FORWARD position to pull the machine out.

## **WORK POSSIBLE USING HYDRAULIC EXCAVATOR**


In addition to the following, it is possible to further increase the range of applications by using various attachments.



## BACKHOE WORK


When condition of the machine is as shown in the diagram at right, each cylinders maximum pushing excavation force is obtained when the bucket cylinder and link, arm cylinder and arm are at  $90^{\circ}$ .

When excavating, use this angle effectively to optimise your work efficiency.

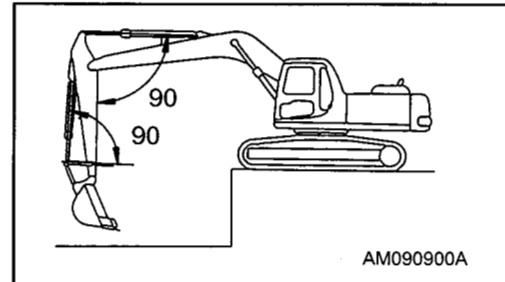


The range for excavating with the arm is from a  $45^{\circ}$  angle away from the machine to a  $30^{\circ}$  toward the machine.

There may be some differences depending on the excavation depth, but try to use within the above range rather than going all the way to the extreme end of the cylinder stroke.

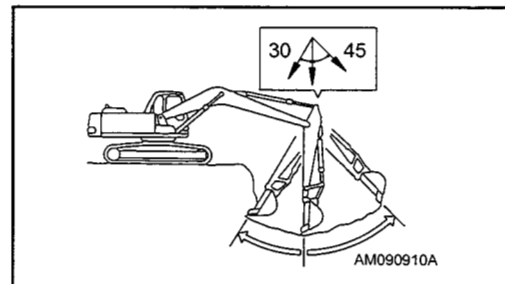

## SHOVEL WORK


A shovel is suitable for excavating at a position higher than the machine. Shovel work is performed by attaching the bucket in the reverse direction.

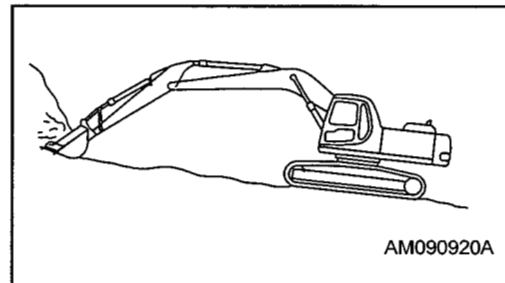

## DITCHING WORK

Ditching work can be performed efficiently by attaching a bucket to match the width of the ditch and then setting the tracks parallel to the line of the ditch to be excavated.


To excavate a wide ditch, first dig out both sides and then finally remove the center portion.

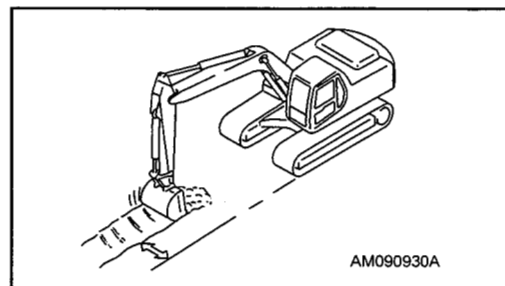

## LOADING WORK

In places where the swing angle is small, work efficiency can be enhanced by locating the dump truck in a place easily visible to the operator.

Loading is easier and capacity greater if you begin from the front of the dump truck body than if loading is done from the side.

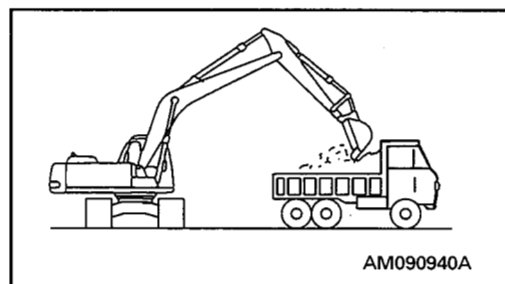

## REPLACEMENT AND INVERSION OF BUCKET

### **WARNING**

- When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.
- When the bucket is removed, place it in a stable condition.

Stop the machine on a firm, flat surface. When performing joint work, make clear signals to each other and work carefully for safety's sake.


### REPLACEMENT

1. Place the bucket in contact with a flat surface.

#### REMARK

When removing the pins, place the bucket so that it is in light contact with the ground.

If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

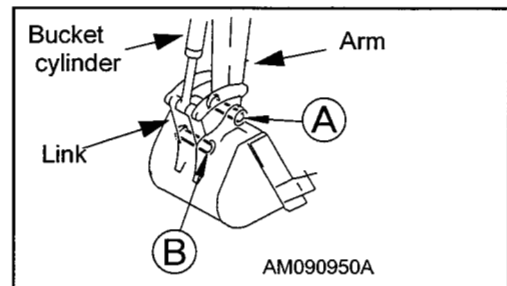


2. Remove the stopper bolts and nuts, then remove pins (A) and (B) and remove the bucket.

#### NOTICE

After removing the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

3. Align the arm with holes (1) and the link with holes (2), then coat with grease and install pins (A) and (B).

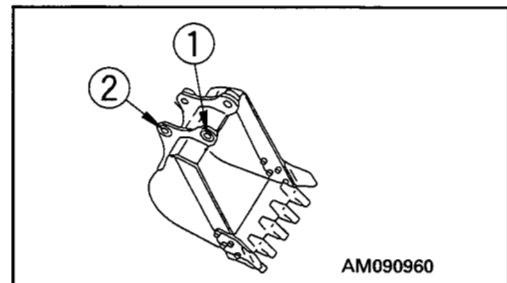


#### REMARK

When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the arm end as shown in the drawing.

When knocking the pin, move the O-ring down to the regular groove.

4. Install the stopper bolts and nuts for each pin, then grease the pin.

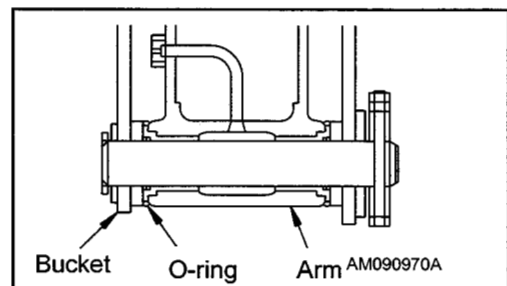

## INVERSION

The rock bucket interferes with the arm, so it cannot be turned and used for shovel operations.

1. Place the bucket in contact with a flat surface.

### REMARK

When removing the pins, place the bucket so that it is in light contact with the ground.

If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

2. Remove the stopper bolts and nuts, then remove pins (A) and (B), and remove the bucket.

### NOTICE

**After removing the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.**

3. Install the bucket inversely.  
After the bucket is inverted, correct the inclination and direction of the retaining pin holes a and b and stabilise the bucket securely.
4. Align the arm with holes a and the link with holes b, then coat with grease and install pins (A) and (B).




### REMARK

Install the O-ring into retaining hole (1) of the arm and the bucket.

When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the arm end as shown in the drawing.

When knocking the pin, move the O-ring down to the regular groove.




5. Install the stopper bolts and nuts for each pin, then grease the pin.

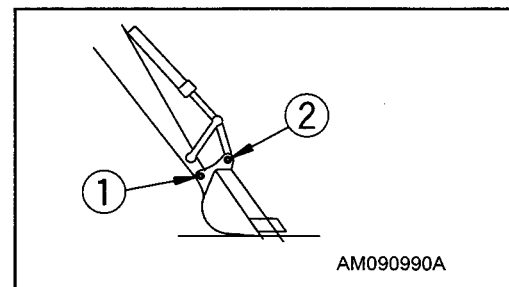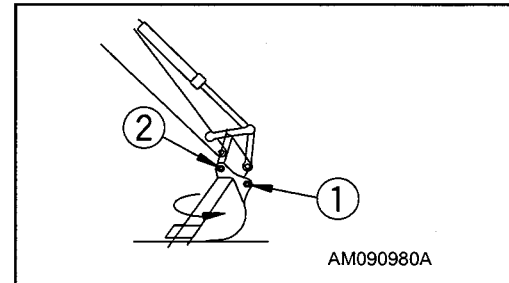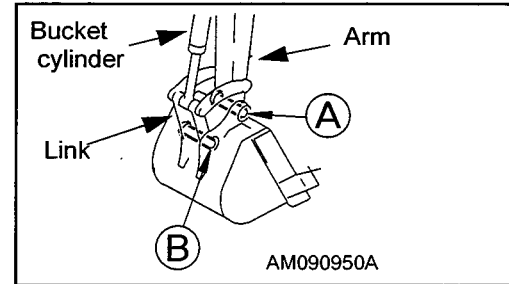


## PARKING THE MACHINE

### ▲ WARNING


- Avoid stopping suddenly. Give yourself ample room when stopping.
- When stopping the machine, select flat hard ground and avoid dangerous places. If it is unavoidably necessary to park the machine on a slope, block the tracks. As an additional safety measure, thrust the bucket into the ground.
- If the control lever is touched by accident, the work equipment or the machine may move suddenly, and this may lead to a serious accident. Before leaving the operator's compartment, always set the safety lock lever securely to LOCK position.

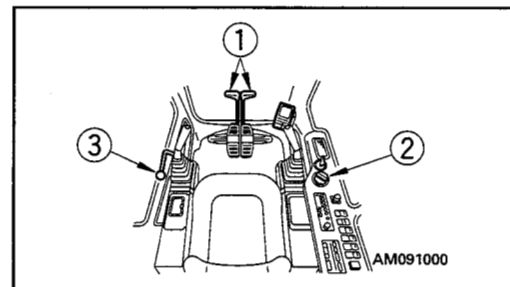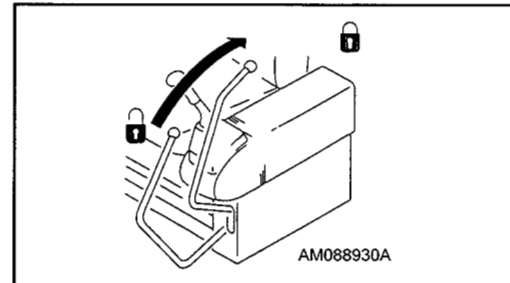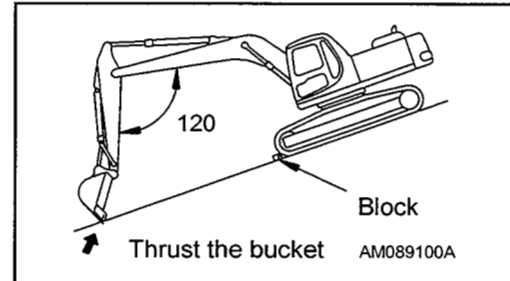


1. Put left and right travel levers (1) in the neutral position. The machine stops.

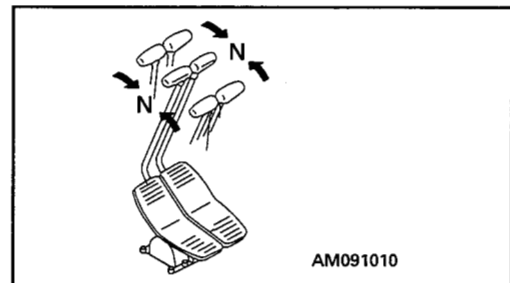


- Turn fuel control dial (2) to lower the engine speed to low idling.

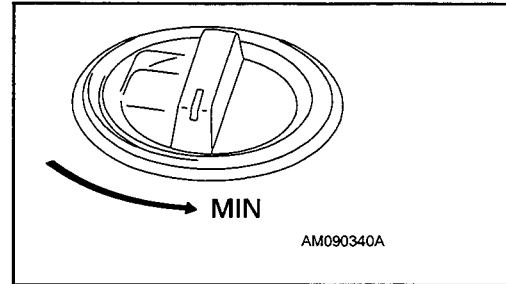

- Lower the bucket horizontally until the bottom touches the ground.
- Stop the engine.

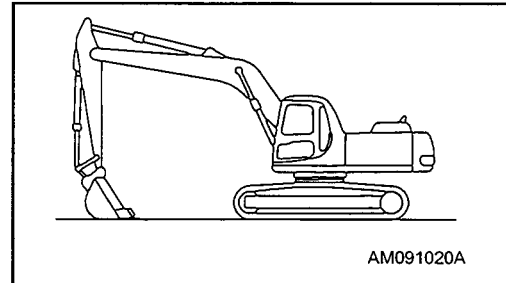

- Set safety lock lever (3) in the LOCK position.

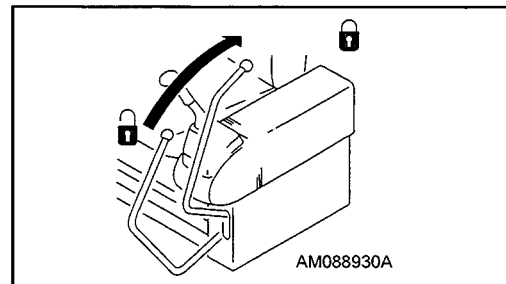

## CHECK AFTER FINISHING WORK

Check the engine water temperature, engine oil pressure and fuel level on the monitor.


## STOPPING ENGINE

### NOTICE


**If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.**

**In particular, if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.**

1. Run the engine at low idling speed for about 5 minutes to allow it to gradually cool down.

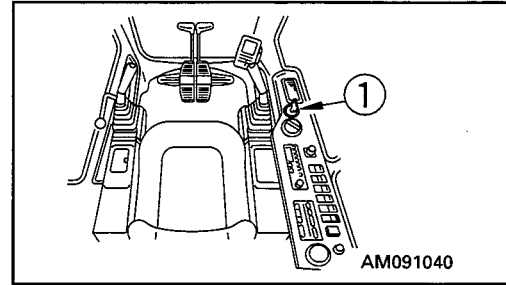

2. Turn the key in starting switch (1) to the OFF position and stop the engine.
3. Remove the key from starting switch (1).

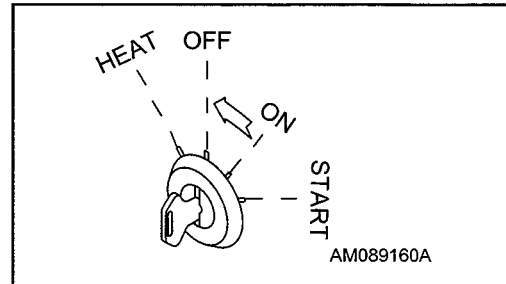

## CHECK AFTER STOPPING ENGINE

1. Walk around the machine and check the work equipment, paintwork, and undercarriage, and check also for leakage of oil or water. If any abnormalities are found, repair them.
2. Fill the fuel tank.
3. Check the engine compartment for paper and debris. Clean out any paper and debris to avoid a fire hazard.
4. Remove any mud stuck to the undercarriage.


## LOCKING

Always lock the following places.

- (1) Door of operator's cab  
Always remember to close the window.
- (2) Fuel tank filler port
- (3) Engine hood
- (4) Battery box cover
- (5) Left side door of the machine
- (6) Right side door of the machine
- (7) Tool box
- (8) Hydraulic tank filler port

### REMARK

Use the starting switch key to open and close all these places.

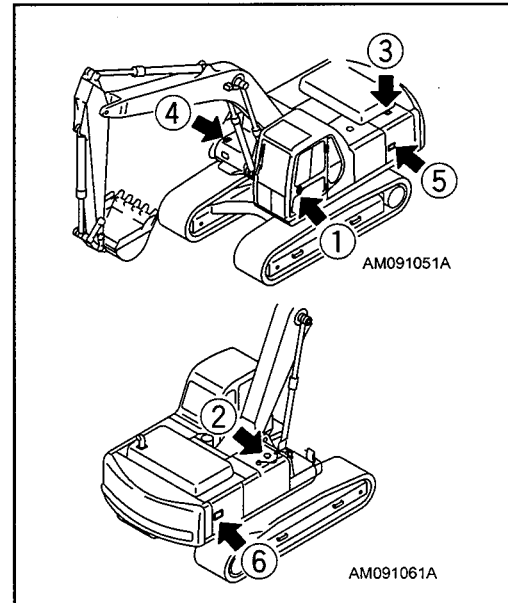

## OVERLOAD WARNING DEVICE

Excavators are provided with this device to warn the operator about tipping over while lifting loads. A buzzer will sound when the machine is in LO mode and the machine nears its lifting capacity.

**NOTE:** Only conduct lifting operations in LO mode as the overload warning device is only active in this mode.

**NOTE:** Ensure "ACTIVE" mode is not selected when in LO mode as this will cancel the overload warning system



## TRANSPORTATION

When transporting the machine, observe all related laws and regulations, and be careful to assure safety.

### LOADING, UNLOADING WORK

#### **WARNING**

- Loading or unloading the machine can be a dangerous operation, so be particularly careful.  
When loading or unloading the machine, run the engine at low idling and travel at low speed.
- Make sure the ramp has sufficient width, length and thickness to enable the machine to be safely loaded and unloaded. If the ramp sags appreciably, reinforce it with blocks, etc.
- When loading and unloading the machine, park the trailer on a flat firm roadbed. Keep a fairly long distance between the road shoulder and the machine.
- Remove the mud from the undercarriage to prevent the machine from slipping to the side on slopes. Be sure the ramp surface is clean and free of grease, oil, ice and loose materials.
- Never change the direction of travel when on the ramps. If it is necessary to change direction, drive off the ramps and correct the direction, then drive on to the ramps again.
- When turning the machine on the trailer, the machine's footing is unstable, so carry out the operation slowly.
- Always check that the door on the cab is locked, regardless of whether it is open or closed.  
Do not open or close the door on ramps or on a platform. This may cause a sudden change in the operating force.
- When loading or unloading the machine with the automatic warming-up operation mode, if the automatic mode is released, the speed may change suddenly. Avoid loading or unloading during automatic warming-up operation.

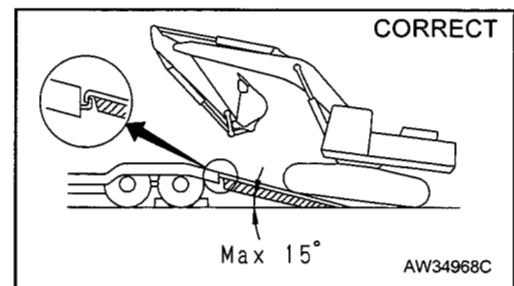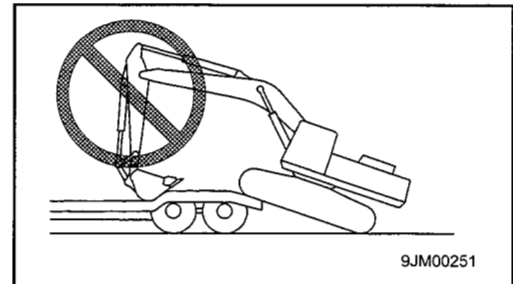





When loading or unloading, always use ramps or a platform and carry out the operations as follows.

1. Properly apply the brakes on the trailer and insert blocks (2) beneath the tyres to ensure that it does not move. Then fix the ramps in line with the centers of the trailer and the machine. Be sure that the two sides are at the same level as one another.


Make the angle of the ramps (3) a maximum of 15°. Set the distance between the ramps (A) to match the center of the tracks.

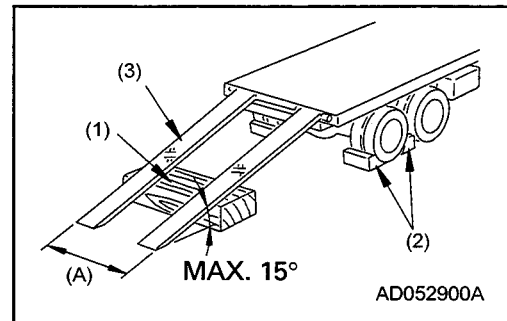


2. Set the travel speed switch to the Lo position.

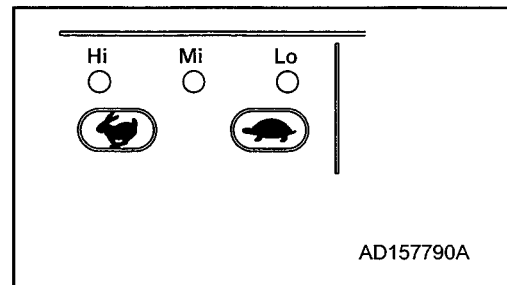

3. Turn the auto-deceleration switch OFF, and return the fuel control dial to reduce the engine speed.

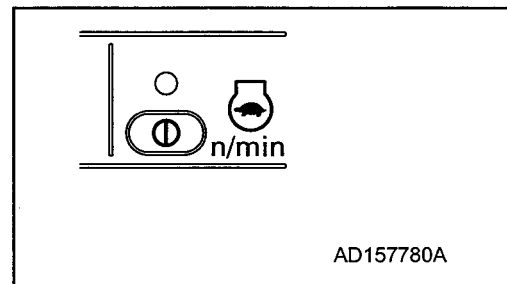

4. Turn the swing lock switch ON to apply the swing lock.
5. Set in the direction of the ramps, lower the work equipment as far as possible without letting it hit the trailer, then travel slowly to load or unload the machine. When on the ramps, do not operate any lever other than the travel lever.
6. Load the machine correctly in the specified position on the trailer.

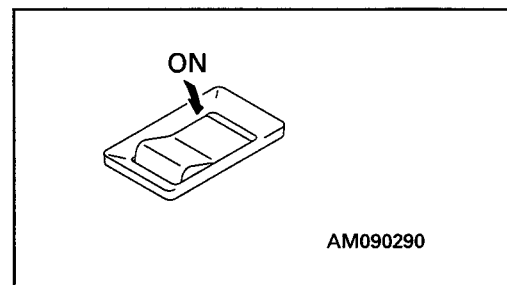

**REMARK**

When the work equipment is installed, load the machine from the front; when the work equipment is not installed, load the machine from the rear.


## PRECAUTIONS FOR LOADING

### **⚠ WARNING**


When loading the machine, park the trailer on a flat firm road-bed. Keep a fairly long distance between the road shoulder and the machine.

After loading to the specified position, secure the machine as follows.

1. Fully extend the bucket and arm cylinders, then slowly lower the boom.
2. Stop the engine and remove the key from the starting switch.

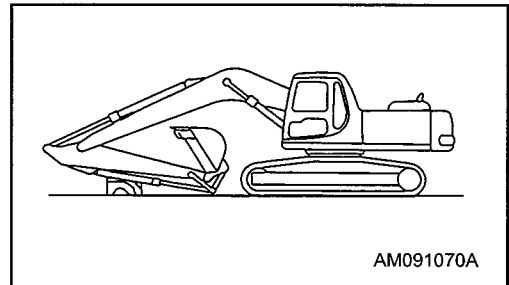


3. Lock all the control levers securely with the safety lock lever.

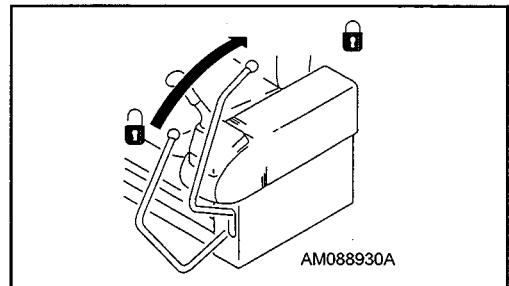

4. When transporting the machine, place rectangular timber underneath the front and rear track shoes to prevent the machine from moving about. Also, hold it down with chains or rope. Be particularly careful to ensure that the machine does not slip sideways.

### **NOTICE**

When transporting the machine, place rectangular timber under one end of the bucket cylinder to prevent it touching the ground, thereby saving it from possible damage.

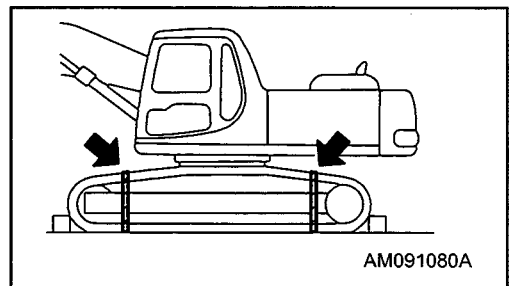

## PRECAUTIONS FOR TRANSPORTATION

### **⚠ WARNING**

- Determine the route for transporting the machine by taking into account the width, height and weight of the machine.
- Always check that the door on the cab is closed and locked before transporting the machine.

**NOTICE**

**Always retract the car radio antenna.**

Obey all state and local laws governing the weight, width and length of a load. Observe all regulations governing wide loads.

**METHOD OF LIFTING MACHINE****How to lift a machine**

Personnel who perform lifting using a crane must be qualified.

**CAUTION**

Contact your distributor to get an instruction of lifting a machine. Some parts are required and available as optional parts.

**WARNING**

- Do not lift a machine with personnel in it.
- The rope used for lifting must have sufficient strength to withstand the weight of this machine.
- The machine must not be in a position other than that shown in the following procedure when lifting a vehicle. Otherwise there is danger that the machine may lose its balance.
- Never lift the machine with the upperstructure swing to the side.
- When lifting, be careful of the center of gravity and be sure to maintain the balance.

**NOTICE**



The lifting procedure given below applies to machines with standard specifications.

The method of lifting differs according to the attachments and options actually installed. In such cases, please contact your Komatsu distributor.

For details of the weight, see "SPECIFICATIONS" on page 217.

**Before lifting the machine, place the machine on a flat horizontal surface and follow the procedure shown below.**

1. Set the machine to the position shown in the figure on the right by fully extending all cylinders (Boom at its highest point, arm and bucket fully retracted). Direct the top revolving super-structure straight forward (idler side)
2. Set the safety lock lever in the lock position.
3. Switch the engine off and confirm any loose objects are placed in the storage compartment behind the operator's seat. Get off the machine, make sure the cab door, windshield all doors and engine hood is closed and securely locked.
4. Mount a shackles the the lifting hooks on the boom and the counter weight. Hang the wire rope.
5. The length of the wire rope and the lifting angle must be as shown in the figure at the right.
6. When lifting, make sure that there is no change in position due to posible leakage in the hydraulic circuit on the boom cylinder head side.
7. When the machine leaves the ground, stop the machine and make sure sufficiently that the machine is balanced, then lift the machine slowly.

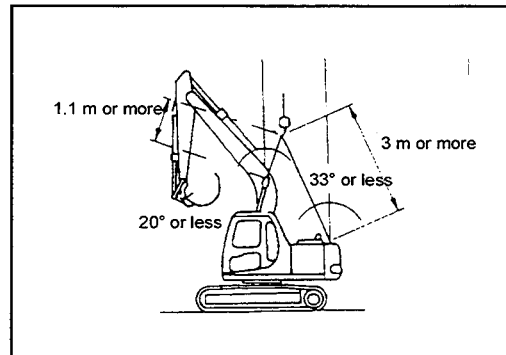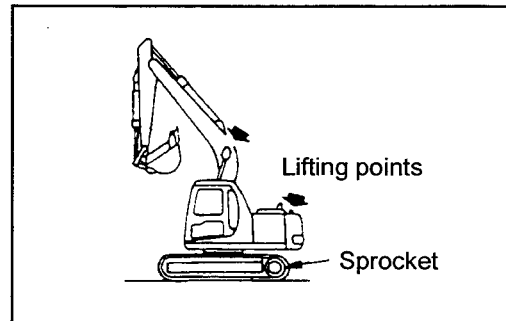

# COLD WEATHER OPERATION

## PRECAUTIONS FOR LOW TEMPERATURE

If the temperature becomes low, it becomes difficult to start the engine, and the coolant may freeze, so do as follows.

## FUEL AND LUBRICANTS

Change to fuel and oil with low viscosity for all components.

**For details of the specified viscosity, see “USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE” on page 165.**

## COOLANT

---

---

**⚠ WARNING**

---

---

**Keep antifreeze fluid away from an open flame. Never smoke when using antifreeze.**

---

---

### NOTICE

- **Never use methanol, ethanol or propanol based anti-freeze.**
- **Absolutely avoid using any water leak preventing agent irrespective of whether it is used independently or mixed with an antifreeze.**
- **Do not mix one antifreeze with a different brand.**  
**For antifreeze mixture requirements, see “USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE” on page 165.**

Use a Permanent Antifreeze (ethylene glycol mixed with corrosion inhibitor, antifoam agent, etc.) meeting the standard requirements as shown below. With permanent antifreeze, no change of coolant is required for a year. If it is doubtful that an available antifreeze meets the standard requirements, ask the supplier of that antifreeze for information.

Standard requirements for permanent antifreeze

- SAE J1034
- FEDERAL STANDARD O-A-548D

### REMARK

Where no permanent antifreeze is available, an ethylene glycol antifreeze without corrosion inhibitor may be used only for the cold season. In this case, clean the cooling system twice a year (in spring and autumn). When refilling the cooling system, add antifreeze in autumn, but do not add any in spring.

## BATTERY

---



---

### WARNING

---



---

- To avoid gas explosions, do not bring fire or sparks near the battery.
  - Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with large amounts of water, and consult a doctor.
- 
- 

When the ambient temperature drops, the capacity of the battery will also drop. If the battery charge ratio is low, the battery electrolyte may freeze. Maintain the battery charge as close as possible to 100%, and insulate it against cold temperature so that the machine can be started easily the next morning.

### REMARK

Measure the specific gravity and calculate the rate of charge from the following conversion table.

Temp. of fluid	20°C	0°C	-10°C	-20°C
Rate of charge				
100%	1.28	1.29	1.30	1.31
90%	1.26	1.27	1.28	1.29
80%	1.24	1.25	1.26	1.27
75%	1.23	1.24	1.25	1.26

## PRECAUTIONS AFTER COMPLETION OF WORK

To prevent mud, water, or the undercarriage from freezing and making it impossible for the machine to move the following morning, always observe the following precautions.

- Mud and water on the machine body should be completely removed. This is to prevent damage to the seal caused by mud or dirt getting inside the seal with frozen drops of water.
- Park the machine on hard, dry ground. If this is impossible, park the machine on wooden boards. The boards help protect the tracks from being frozen in soil and the machine can start next morning.
- Open the drain valve and drain any water collected in the fuel system to prevent it from freezing.
- As the battery capacity drops markedly in low temperatures, cover the battery or remove it from the machine, keep it in a warm place, and install it again the next morning.

- If electrolyte level is found low, add distilled water in the morning before beginning work. Do not add the water after the day's work so as to prevent fluid in the battery from freezing in the night.

## AFTER COLD WEATHER

When season changes and the weather becomes warmer, do as follows.

- Replace the fuel and oil for all parts with oil of the viscosity specified.

**For details, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**

- If for any reason permanent antifreeze cannot be used, and an ethyl glycol base antifreeze (winter, one season type) is used instead, or if no antifreeze is used, drain the cooling system completely, then clean out the inside of the cooling system thoroughly, and fill with fresh water.

# LONG-TERM STORAGE


## BEFORE STORAGE

### NOTICE

To protect the cylinder rod when the machine is not being used, set the work equipment in the posture shown in the diagram. (This prevents rusting of the cylinder rod)

When putting the machine in storage for a long time, do as follows.

- After every part is washed and dried, the machine shall be housed in a dry building. Never leave it outdoors. In case it is indispensable to leave it outdoors, park the machine on the well-drained concrete and cover it with canvas etc.
- Completely fill the fuel tank, lubricate and change the oil before storage.
- Apply a thin coat of grease to metal surface of the hydraulic piston rods.
- Disconnect the negative terminals of the battery and cover it, or remove it from the machine and store it separately.
- If the ambient temperature is expected to drop below 0°C, always add antifreeze to the cooling water.
- Lock each control lever and pedal with the lock lever and pedal lock.
- Set the stop valve to the "lock" position on machines ready for attachments. Install the blind plugs to the elbows.
- Set the selector valve to the "When not use" position on machines ready for attachments.

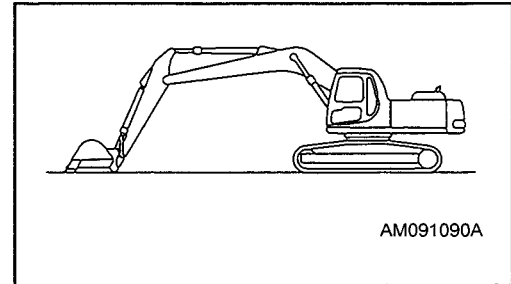

## DURING STORAGE

### ⚠ WARNING

If it is unavoidably necessary to carry out the rustpreventive operation while the machine is indoors, open the doors and windows to improve ventilation and prevent gas poisoning.

Operate the engine and move the machine for a short distance once a month so that a new film of oil will be coated over movable parts and component surfaces. At the same time, also charge the battery.

Also carry out cooler operation in the case of machines equipped with an air conditioner.



## AFTER STORAGE

If the machine is stored without carrying out the monthly rust prevention operation, request your Komatsu distributor for service.

Carry out the following procedure when taking the machine out of long-term storage.

- Wipe off the grease from the hydraulic cylinder rods.
- Add oil and grease to all places.

## STARTING MACHINE AFTER LONG-TERM STORAGE

When starting the machine after a long-term storage, first cancel the automatic warming-up function as follows.



1. Turn the starting switch key to the ON position.
2. Turn the fuel control dial from the low idling (MIN) position to the full (MAX) position, hold it there for 3 seconds, then return it to the low idling (MIN) position and start the engine.

## TROUBLESHOOTING

### PHENOMENA THAT ARE NOT FAILURES

Note that the following phenomena are not failures:

1. When the arm is pulled in, the speed of movement will drop momentarily when the arm is more or less vertical.
2. The arm speed will drop momentarily when the bucket teeth are more or less horizontal.
3. When starting or stopping the swing, noise will be emitted from the brake valve.
4. When going down a steep slope at low speed, a noise will be emitted from the travel motor.

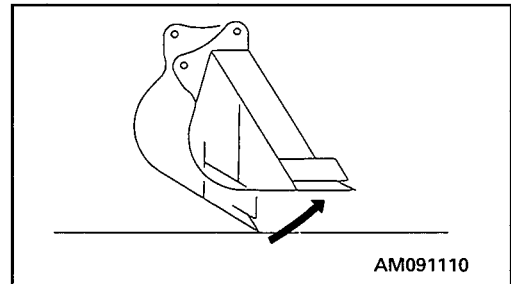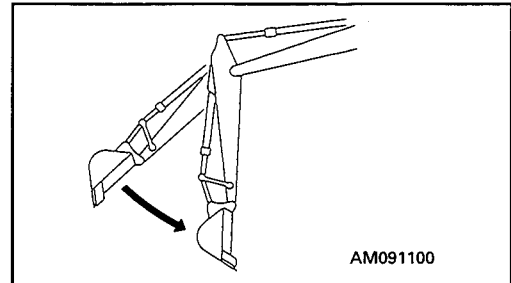


### METHOD OF TOWING MACHINE

#### **WARNING**

**When towing the machine, use a wire rope that has ample strength for the weight of the machine that is being towed.**

If the machine sinks in mud and cannot get out under its own power, or if the drawbar pull of the excavator is being used to tow a heavy object, use a wire rope as shown in the diagram on the right. Place pieces of wood between wire ropes and body to prevent damage to ropes and body. At this time, never use the towing hole which is intended only for light-weight towing.

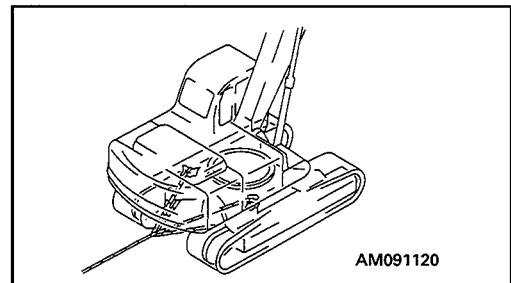

## USING METHOD FOR LIGHT-WEIGHT TOWING HOLE

---


**▲ WARNING**

---

- The shackle must always be used.
  - Hold the rope level and direct it straight to the track frame.
  - Move the machine slowly in the Lo mode.
- 

The track frame has been equipped with a towing hole to pass the shackle through for towing light objects.

In this case, the traction load must be 130 KN or less.

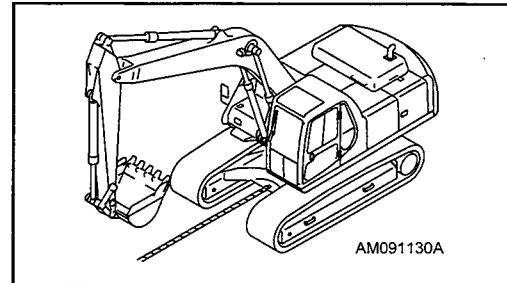

## PRECAUTIONS ON PARTICULAR JOBSITES


1. When carrying out digging operations in water, if the work equipment mounting pin goes into the water, carry out greasing every time the operation is carried out.
2. For heavy-duty operations and deep digging, carry out greasing of the work equipment mounting pins every time before operation.

After greasing, operate the boom, arm and bucket several times, then grease again.

## IF BATTERY IS DISCHARGED

### **▲ WARNING**

- When checking or handling the battery, stop the engine and turn the starting switch key to the OFF position before starting.
- The battery generates hydrogen gas, so there is danger of explosion. Do not bring lighted cigarettes near the battery, or do anything that will cause sparks.
- Battery electrolyte is dilute sulphuric acid, and it will attack your clothes and skin. If it gets on your clothes or on your skin, wash it off immediately with large amounts of water. If it gets in your eyes, wash it out with fresh water, and consult a doctor.
- When handling battery, always wear protective goggles.
- When removing the battery, first disconnect the cable from the ground (normally, from the negative - terminal). When installing, install the positive + terminal first. If a tool touches the cable connecting the positive terminal and the chassis, there is danger that it will cause sparks.
- If the terminals are loose, there is danger that the defective contact may generate sparks that will cause an explosion. When installing the terminals, install them tightly.
- When removing or installing, check which is the positive + terminal and negative - terminal.

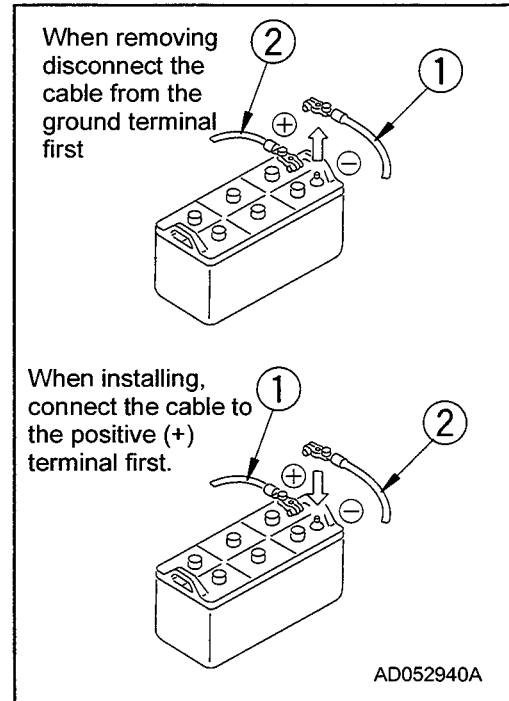

## STARTING ENGINE WITH BOOSTER CABLE


When starting the engine with a booster cable, do as follows:

### Precautions when connecting and disconnecting booster cable

#### **WARNING**

When connecting the cables, never contact the positive + and negative - terminals.

- When starting the engine with a booster cable, always wear safety glasses.
- Be careful not to let the normal machine and problem machine contact each other. This prevents sparks from generating near the battery which could ignite the hydrogen gas given off by the battery. If hydrogen gas explodes, it could cause serious injury.
- Make sure that there is no mistake in the booster cable connections. The final connection is to the revolving frame, but sparks will be generated when this is done, so connect to a place as far as possible from the battery. (However, avoid connecting the cable to the work equipment, as conduction is poor.)
- Use care when removing the cables from the machine that has been started. Do not allow the cable ends to contact each other or the machine, to avoid hydrogen explosion.

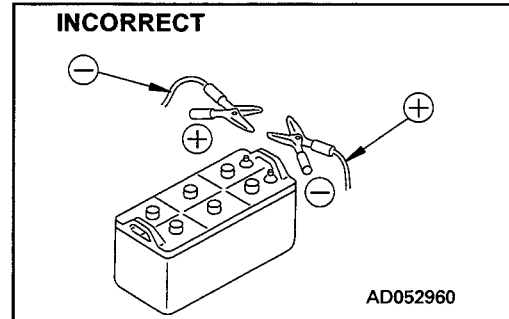

#### NOTICE


- The size of the booster cable and clip should be suitable for the battery size.
- The battery of the normal machine must be the same capacity as that of the engine to be started.
- Check the cables and clips for damage or corrosion.
- Make sure that the cables and clips are firmly connected.

#### Connecting the booster cables

Keep the starting switch at the OFF position.

Connect the booster cable as follows, in the order of the numbers marked in the diagram.

1. Make sure that the starting switches of the normal machine and problem machine are both at the OFF position.
2. Connect one clip of booster cable (A) to the positive + terminal of the problem machine.
3. Connect the other clip of booster cable (A) to the positive + terminal of the normal machine.

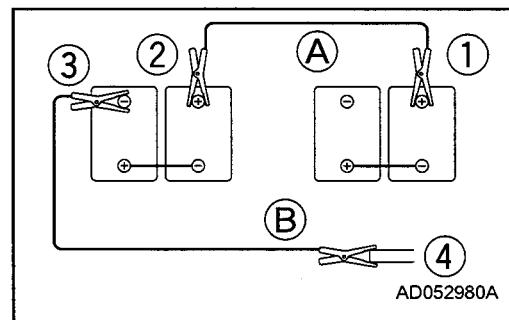

4. Connect one clip of booster cable (B) to the negative - terminal of the normal machine.
5. Connect the other clip of booster cable (B) to the engine block of the problem machine.


### Starting the engine

1. Make sure the clips are firmly connected to the battery terminals.
2. Start the engine of the normal machine and keep it to run at high idling speed.
3. Turn the starting switch of the problem machine to the START position and start the engine. If the engine doesn't start at first, try again after 2 minutes or so.

### Disconnecting the booster cables

After the engine has started, disconnect the booster cables in the reverse of the order in which they were connected.

1. Remove one clip of booster cable (B) from the engine block of the problem machine.
2. Remove the other clip of booster cable (B) from the negative terminal of the normal machine.
3. Remove one clip of booster cable (A) from the positive + terminal of the normal machine.
4. Remove the other clip of booster cable (A) from the positive + terminal of the problem machine.

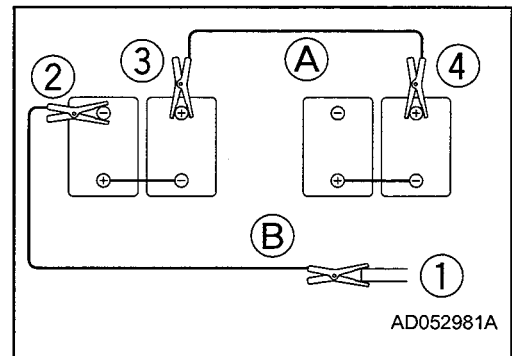

## OTHER TROUBLE

### ELECTRICAL SYSTEM

- ( ): Always contact your Komatsu distributor when dealing with these items.
- In cases of abnormalities or causes which are not listed below, please contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Lamp does not glow brightly even when the engine runs at high speed	● Defective wiring	(● Check, repair loose terminals, disconnections)
Lamp flickers while engine is running	● Defective adjustment of fan belt tension	● Adjust V belt tension For details, see "EVERY 250 HOURS SERVICE" on page 198.
Charge level monitor does not go out even when engine is running	● Defective alternator ● Defective wiring	(● Replace) (● Check, repair)
Abnormal noise is generated from alternator	● Defective alternator	(● Replace)
Starting motor does not turn when starting switch is turned to ON	● Defective wiring ● Insufficient battery charge ● Defective starting motor	(● Check, repair) ● Charge (● Replace)
Pinion of starting motor keeps going in and out	● Insufficient battery charge ● Defective safety relay	● Charge (● Replace)
Starting motor turns engine sluggishly	● Insufficient battery charge ● Defective starting motor	● Charge (● Replace)
Starting motor disengages before engine starts	● Defective wiring ● Insufficient battery charge	(● Check, repair) ● Charge
Pre-heating monitor does not light	● Defective wiring ● Defective heater relay ● Defective monitor	● Charge (● Replace) (● Replace)
Oil pressure monitor does not light up when engine is stopped (starting switch at ON position)	● Defective monitor ● Defective caution lamp switch	(● Replace) (● Replace)
Outside of electrical heater is not warm when touched by hand.	● Defective wiring ● Disconnection in electric heater ● Defective operation of heater switch	(● Check, repair) (● Replace) (● Replace)

**CHASSIS**

- ( ): Always contact your Komatsu distributor when dealing with these items.
- In cases of abnormalities or causes which are not listed below, please contact your Komatsu distributor for repairs.

<b>Problem</b>	<b>Main causes</b>	<b>Remedy</b>
Speed of travel, swing, boom, arm, bucket is slow	<ul style="list-style-type: none"> <li>● Lack of hydraulic oil</li> </ul>	<ul style="list-style-type: none"> <li>● Add oil to specified level, see "CHECK BEFORE STARTING" on page 190.</li> </ul>
Pump generates abnormal noise	<ul style="list-style-type: none"> <li>● Clogged element in hydraulic tank strainer</li> </ul>	<ul style="list-style-type: none"> <li>● Clean, see "EVERY 2000 HOURS SERVICE" on page 211.</li> </ul>
Excessive rise in hydraulic oil temperature	<ul style="list-style-type: none"> <li>● Loose fan belt</li> <li>● Dirty oil cooler</li> <li>● Lack of hydraulic oil</li> </ul>	<ul style="list-style-type: none"> <li>● Check fan belt tension, see EVERY 250 HOURS SERVICE</li> <li>● Clean, see "EVERY 500 HOURS SERVICE" on page 202.</li> <li>● Add oil to specified level, see "CHECK BEFORE STARTING" on page 190.</li> </ul>
Track comes off	<ul style="list-style-type: none"> <li>● Track too loose</li> </ul>	<ul style="list-style-type: none"> <li>● Adjust track tension, see "WHEN REQUIRED" on page 178.</li> </ul>
Abnormal wear of sprocket		
Bucket rises slowly, does not rise	<ul style="list-style-type: none"> <li>● Lack of hydraulic oil</li> </ul>	<ul style="list-style-type: none"> <li>● Add oil to specified level, see "CHECK BEFORE STARTING" on page 190.</li> </ul>



## ENGINE

- ( ): Always contact your Komatsu distributor when dealing with these items.
- In cases of abnormalities or causes which are not listed below, please contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Engine oil pressure monitor lights up	<ul style="list-style-type: none"> <li>● Engine oil pan oil level is low (sucking in air)</li> <li>● Clogged oil filter cartridge</li> <li>● Defective tightening of oil pipe joint, oil leakage from damaged part</li> <li>● Defective engine oil pressure sensor</li> </ul>	<ul style="list-style-type: none"> <li>● Add oil to specified level, see "CHECK BEFORE STARTING" on page 190.</li> <li>● Replace cartridge, see "EVERY 500 HOURS SERVICE"</li> <li>● (●Check, repair)</li> <li>● (●Replace sensor)</li> </ul>
Steam is emitted from top part of radiator (pressure valve)	<ul style="list-style-type: none"> <li>● Cooling water level low, water leakage</li> <li>● Loosen fan belt</li> <li>● Dirt or scale accumulated in cooling system</li> </ul>	<ul style="list-style-type: none"> <li>● Add cooling water, repair, "CHECK BEFORE STARTING"</li> <li>● Check fan belt tension, see "CHECK BEFORE STARTING"</li> <li>● Change cooling water, clean inside of cooling system, see "WHEN REQUIRED"</li> </ul>
Radiator water level monitor lights up	<ul style="list-style-type: none"> <li>● Clogged radiator fin or damaged fin</li> <li>● Defective thermostat</li> <li>● Loose radiator filler cap (high altitude operation)</li> <li>● Defective water level sensor</li> </ul>	<ul style="list-style-type: none"> <li>● Clean or repair, see "EVERY 500 HOURS SERVICE"</li> <li>● (●Replace thermostat)</li> <li>● Tighten cap or replace packing</li> <li>● (●Replace sensor)</li> </ul>
Engine does not start when starting motor is turned	<ul style="list-style-type: none"> <li>● Lack of fuel</li> <li>● Air in fuel system</li> <li>● Defective fuel injection pump or nozzle</li> <li>● Starting motor cranks engine sluggishly</li> <li>● Preheating monitor does not light up</li> <li>● Defective compression</li> <li>● Defective valve clearance</li> <li>● Contaminated fuel</li> <li>● Lift pump not working</li> <li>● fuel filter clogged</li> <li>● fuel lines blocked</li> </ul>	<ul style="list-style-type: none"> <li>● Add fuel, see "CHECK BEFORE STARTING"</li> <li>● Repair place where air is sucked in, see "EVERY 500 HOURS SERVICE"</li> <li>● (●Replace pump or nozzle)</li> <li>● see "ELECTRICAL SYSTEM"</li> <li>● (Adjust valve clearance)</li> <li>● Drain &amp; clean fuel system</li> <li>● Check/replace pump</li> <li>● change filters</li> <li>● check/ blow out lines</li> </ul>

**ENGINE (cont'd)**

Problem	Main causes	Remedy
Exhaust gas is white or blue	<ul style="list-style-type: none"> <li>● Too much oil in oil pan</li> <li>● Improper fuel</li> </ul>	<ul style="list-style-type: none"> <li>● Add oil to specified level, see "CHECK BEFORE STARTING"</li> <li>● Change to specified fuel</li> </ul>
Exhaust gas occasionally turns black	<ul style="list-style-type: none"> <li>● Clogged air cleaner element</li> <li>● Defective nozzle</li> <li>● Defective compression</li> <li>● Defective turbocharger</li> </ul>	<ul style="list-style-type: none"> <li>● Clean or replace, (●Replace nozzle)</li> <li>(●See defective compression above)</li> <li>● Clean or replace turbocharger</li> </ul>
Combustion noise occasionally makes breathing sound	<ul style="list-style-type: none"> <li>● Defective nozzle</li> </ul>	(●Replace nozzle)
Abnormal noise generated (combustion or mechanical)	<ul style="list-style-type: none"> <li>● Low grade fuel being used</li> <li>● Overheating</li> <li>● Damage inside muffler</li> <li>● Excessive valve clearance</li> </ul>	<ul style="list-style-type: none"> <li>● Change to specified fuel</li> <li>● Refer to "Radiator water level monitor lights up" as above</li> <li>(●Replace muffler)</li> <li>(●Adjust valve clearance)</li> </ul>

## ELECTRONIC CONTROL SYSTEM

If an error code appears on the machine monitor display (normally displays TIME), follow the countermeasure table as shown below in the self-diagnosis.

### Machine monitor failure display

Monitor display	Failure mode	Remedy
E02	PC-EPC valve system error	If the pump override switch is set to the ON position, operation can be carried out, however, have the PC-EPC valve system inspected by your Komatsu distributor. (*)
E03	Swing brake system error	Set the swing override switch to the On position to release the brake. If applying swing brake, manually operate swing lock switch. In this case, have the swing brake system inspection immediately by your Komatsu distributor. (*)
E05	Governor system error	The governor cannot carry out control. Operate the governor lever manually. To secure at the full position, there is a mounting hole for the lock bolts in the bracket. In this case, carry out inspection immediately by your Komatsu distributor.
CALL	Operation cannot be continued	Place the machine to a safe posture, and carry out inspection immediately by your Komatsu distributor.
IN case where the monitor will not display no error code and work equipment or swing operation cannot be carried out.		Carry out inspection immediately.

(\*) For detail of operating the pump override switch and the swing override switch, see "SWITCHES" on page 66.

# MAINTENANCE

---

---

 **WARNING**

**Before carrying out maintenance, always attach the  
WARNING TAG to the control lever in the operator's cab.**

---

---

## GUIDES TO MAINTENANCE

Do not carry out any inspection and maintenance operation that is not given in this manual.

Perform maintenance work on hard, flat ground.

### **Check service meter:**

Check the service meter reading every day to see if the time has come for any necessary maintenance to be carried out.

### **Komatsu genuine replacement parts:**

Use Komatsu genuine parts specified in the Parts Book as replacement parts.

### **Komatsu genuine oils:**

Use Komatsu genuine oils and grease. Choose oils and grease with proper viscosities specified for ambient temperature.

### **Always use clean washer fluid:**

Use automobile window washer fluid and be careful not to let any dirt get into it.

### **Always use clean oil and grease:**

Use clean oil and grease. Also, keep containers of the oil and grease clean. Keep foreign materials away from oil and grease.

### **Keeping the machine clean:**

Always keep the machine clean. This makes it easier to find parts causing problems. Keep in particular grease fittings, breathers and oil level gauges clean and avoid foreign matters from getting in them.

### **Be careful of hot water and oil:**

Draining hot oils and coolants and removing their filters immediately after the engine stops are hazardous. Allow the engine to cool.

If the oil has to be drained when it is cold, warm up the oil to a suitable temperature (approx. 20 - 40°C) before draining it.

### **Checking foreign materials in drained oil and on filter:**

After oil is changed or filters are replaced, check the oil and filters for metallic particles and foreign materials. If large quantities of metallic particles or foreign materials are found, contact your Komatsu distributor.

**Fuel strainer:**

If your machine is equipped with a fuel strainer, do not remove it while fueling.

**Oil change:**

Check or change oils in the places where dust is scarce to keep foreign materials away from oils.

**Warning tag:**

Attach the warning tag to the starting switch or other appropriate control lever to avoid someone who is not aware of the circumstances from starting the engine.

**Obey precautions:**

During the operation, always obey the precautions on the safety label attached to the machine.

**Welding instructions:**

- Turn off the engine starting switch.
- Do not apply more than 200 V continuously.
- Connect grounding the cable within 1 m from the area to be welded.
- Avoid seals or bearings from being between the area to be welded and the position of grounding point.
- Do not use the area around the work equipment pins or the hydraulic cylinders as the grounding point.

**Fire prevention:**

Use nonflammable cleaner or light oil for cleaning parts. Keep flame or cigarette light away from light oil.

**Clamp faces:**

When O-rings or gaskets are removed, clean the clamp faces and replace the O-rings and gaskets with new ones. Be sure to fit O-rings and gaskets when assembling.

**Objects in your pockets:**

Keep your pockets free of loose objects which can fall out and drop into the machinery; especially when you work on the machinery while bending over it.

**Checking undercarriage:**

When working in rocky areas, check for damage to the undercarriage and for looseness, flaws, wear and damage in bolts and nuts. Loosen the track tension a little when working in such areas.

**Precautions when washing machine:**

- Never spray steam or water directly on the connectors and mechatronics parts.
- Do not allow water to get on the monitors and controllers inside the operator's cab.
- Never spray steam or water directly at the radiator or oil cooler portions.

**Pre-and post-work checks:**

Before starting work in mud, rain, snow or at seashore, check plugs and valves for tightness.

Wash the machine immediately after the work to protect components from rusting.

Lubricate components more frequently than usual. Be sure to lubricate work equipment pins daily if they are submerged in water.

**Dusty worksites:**

When working at dusty worksites, do as follows:

- Inspect the air cleaner clogging monitor to see whether the air cleaner is blocked up.
- Clean the radiator core frequently to avoid clogging.
- Clean and replace the fuel filter frequently.
- Clean electrical components, especially the starting motor and alternator, to avoid accumulation of dust.

**Avoid mixing oils:**

Never mix oils of different brands. If you have only oil which is a different brand from the one that is used in the machine, do not add it but replace all the oil.

## OUTLINES OF SERVICE

- Use Komatsu genuine parts for replacement.
- When changing or adding oil, do not use a different type of oil.
- Unless otherwise specified, the oil and coolant used at the time of shipment from the factory are as shown in the table below.

Item	Kind of fluid
Engine oil pan	SAE 10W-30 API classification CE or CF-4
Swing machinery case Final drive case Damper case	SAE 30 API classification CD
Hydraulic tank	SAE 10W API classification CD
Fuel tank	ASTM D975 No. 2 (However, ASTM D975 No. 1 is used for the winter season (October to March))
Radiator	Komatsu Super Coolant (AF-ACL) 50% added to water

## OUTLINE OF OIL, FUEL, COOLANT

### OIL

- Oil is used in the engine and work equipment under extremely severe conditions (high temperature, high pressure), and it deteriorates with use.  
Always use oil that matches the grade and temperature for use given in the Operation and Maintenance Manual. Even if the oil is not dirty, always replace the oil after the specified interval.

### NOTICE

**When using biodegradable oil, preferably use synthetic esters (Hees type).**

**For this type of oil the maximum hydraulic oil interval is at 2500 hours.**

**Please contact your Komatsu dealer for more information.**

- Oil corresponds to blood in the human body, so always be careful when handling it to prevent any impurities (water, metal particles, dirt, etc.) from getting in.  
The majority of problems with machine are caused by the entry of such impurities.  
Take particular care not to let any impurities get in when storing or adding oil.



- Never mix oils of different grades or brands.
- Always add the specified amount of oil.  
Having too much oil or too little oil are both causes of problems.
- If the oil in the work equipment is not clear, there is probably water or air getting into the circuit. In such cases, please contact your Komatsu distributor.
- When changing the oil, always replace the related filters at the same time.
- We recommend you to have an analysis made of the oil periodically to check the condition of the machine. For those who wish to use this service, please contact your Komatsu distributor.

## FUEL

- The fuel pump is a precision instrument, and if fuel containing water or dirt is used, it causes problems.
- Be extremely careful not to let impurities get in when storing or adding fuel.
- Always use the fuel specified in the Operation and Maintenance Manual.  
Fuel may congeal depending on the temperature when it is used (particularly in low temperature below -15°C), so it is necessary to change to a fuel that matches the temperature.
- To prevent the moisture in the air from condensing and forming water inside the fuel tank, always fill the fuel tank after completing the day's work.
- Before starting the engine, or when 10 minutes have passed after adding fuel, drain the sediment and water from the fuel tank.
- If the engine runs out of fuel, it is necessary to bleed the air from the circuit.

## COOLANT

- River water contains large amounts of calcium and other impurities, so if it is used, scale will stick to the engine and radiator, and this will cause defective heat exchange and overheating.  
Do not use water that is not suitable for drinking.
- When using anti-freeze, always observe the precautions given in the Operation and Maintenance Manual.

- Komatsu machines are supplied with Komatsu original anti-freeze in the coolant when the machine is shipped. This anti-freeze is effective in preventing corrosion of the cooling system. The anti-freeze can be used continuously for two years or 4000 hours. Therefore, it can be used as it is even in hot areas.
- Anti-freeze is inflammable, so be extremely careful not to expose it to flame or fire.
- The proportion of anti-freeze to water differs according to the ambient temperature.

**For details of the mixing proportions, see "CLEAN INSIDE OF COOLING SYSTEM" on page 180.**

- If the engine overheats, wait for the engine to cool before adding coolant.
- If the coolant level is low, it will cause overheating and will also cause problems with corrosion from the air in the coolant.

## GREASE

- Grease is used to prevent twisting and noise at the joints.
- The nipples not included in the maintenance section are nipples for overhaul, so they do not need grease. If any part becomes stiff after being used for long time, add grease.
- Always wipe off all of the old grease that is pushed out when greasing. Be particularly careful to wipe off the old grease in places. Where sand or dirt sticking in the grease would cause wear of the rotating parts.

## STORING OIL AND FUEL

- Keep indoors to prevent any water, dirt, or other impurities from getting in.
- When keeping drum cans for a long period, put the drum on its side so that the filler port of the drum can is at the side. (To prevent moisture from being sucked in)  
If drum cans have to be stored outside, cover them with a waterproof sheet or take other measures to protect them.
- To prevent any change in quality during long-term storage, be sure to use in the order of first in - first out (use the oldest oil or fuel first).

## FILTERS


- Filters are extremely important safety parts. They prevent impurities in the fuel and air circuits from entering important equipment and causing problems. Replace all filters periodically. For details, see the Operation






and Maintenance Manual.

However, when working in severe conditions, it is necessary to consider replacing the filters at shorter intervals according to the oil and fuel (sulfur content) being used.

- Never try to clean the filters (cartridge type) and use them again. Always replace with new filters.
- When replacing oil filters, check if any metal particles are stuck to the old filter. If any metal particles are found, please contact your Komatsu distributor.
- Do not open packs of spare filters until just before they are to be used.
- Always use Komatsu genuine filters.
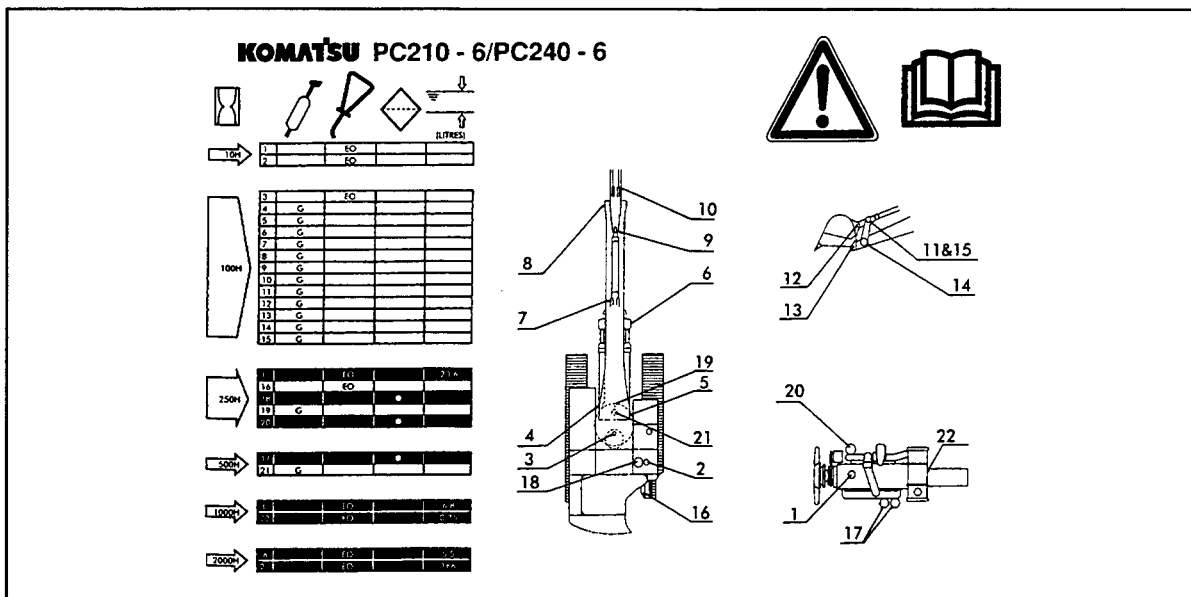
### EXPLANATION OF LUBRICATION CHART DECAL



	<p>Interval of service</p>		<p>Change filter</p>
	<p>Lubrication by greasing (G)</p>		<p>Amount of oil required at change (liters)</p>
	<p>Check oil level/change (EO)</p>		

**Key to lubrication points**

Item	Part	Action	refer to page
1	Engine oil	Check level Change oil	191 204
2	Hydraulic oil	Check level Change oil	192 213
3	Swing machinery oil	Check level Change oil	197 208
4	Boom cylinder foot pin	Grease	195
5	Boom foot pin	Grease	196
6	Boom cylinder rod end pin	Grease	196
7	Arm cylinder foot pin	Grease	196
8	Boom arm coupling pin	Grease	196
9	Arm cilinder rod end	Grease	196
10	Bucket cylinder foot pin	Grease	196
11	Bucket cylinder rod end	Grease	196
12	Bucket-link coupling pin	Grease	196
13	Arm-bucket coupling pin	Grease	196
14	Arm link coupling pin	Grease	196
15	Link coupling pin	Grease	195
16	Final drive oil	Check level Change oil	198 211
17	Engine oil filter & fuel water seperator	Change filter	202
18	Hydraulic filter element	Change filter	206
19	Swing circle	Lubricate	200
20	Engine oil filter	Change filter	204
21	Swing pinion	Lubricate	204
22	Damper case	Check level	209

## OUTLINE OF ELECTRICAL SYSTEM

- If the wiring gets wet or the insulation is damaged, the electric system leaks and this could result in hazardous malfunction of the machine.
- Services relating to the electric system are (1) check of fan belt tension, (2) check of damage or wear in the fan belt and (3) check of battery fluid level.
- Never remove or disassemble any electric components installed in the machine.
- Never install any electric components other than these specified by Komatsu.
- Be careful to keep the electric system free of water when washing the machine or when it rains.
- Since the controller for the control system may cause malfunction due to external wave interference, before installing a radio receiver and a walkie-talkie or citizen band, consult your Komatsu distributor.
- When working on the seashore, carefully clean the electric system to prevent corrosion.
- When installing a car cooler or any other electrical equipment, connect it to an independent power source connector. The optional power source must never be connected to the fuse, starting switch, or battery relay.

## OUTLINE OF HYDRAULIC SYSTEM

- During operation and immediately after operation is ended, the temperature of the hydraulic system still remains high. In addition, high hydraulic pressure is applied to the system. Take care when inspecting and maintaining the hydraulic system.
  - Stop the machine on level ground, lower the bucket to the ground, then set so that there is no pressure applied to the cylinder circuit.
  - Always stop the engine.
  - Immediately after operations, the hydraulic oil and lubricating oil are at high temperature and high pressure, so wait for the oil temperature to go down before starting maintenance.  
Even when the temperature goes down, the circuit may still be under internal pressure, so when loosening the plug or screw, or the hose joint, do not stand in front of the part. Loosen it slowly to release the internal pressure before removing it.
  - When carrying out inspection or maintenance of the hydraulic circuit, always bleed the air from the hydraulic tank to remove the internal pressure.

- Periodic maintenance includes the inspection of the hydraulic oil level, replacement of the filter and refilling of hydraulic oil.
- When the high pressure hose, etc. is removed, check the O-ring for damage. If necessary, replace it.
- After the hydraulic filter element and strainer are cleaned or replaced, or after the hydraulic system is repaired or replaced or the hydraulic piping is removed, bleed air from the hydraulic circuit.

The accumulator is charged with high-pressure nitrogen gas. Incorrect handling may be dangerous.

**For the handling procedure, see “HANDLING THE ACCUMULATOR” on page 90.**

## WEAR PARTS LIST

Wear parts such as the filter element, bucket tooth, etc., are to be replaced at the time of periodic maintenance or before their abrasion limits.

The wear parts should be changed correctly in order to use the machine economically.

For part change, Komatsu genuine parts should be used.

When ordering parts, please check the part number in the parts book.

**The parts in parentheses are to be replaced at the same time.**

Item	Part No.	Part Name	Q'ty	Replacement frequency
Hydraulic oil filter	07063-51210 (07000-05180)	Element (O-ring)	1 (1)	Every 500 hours service
Engine oil filter	6736-51-5140	Cartridge	1	Every 500 hours service
Primary fuel filter	6732-71-6110	Cartridge	1	Every 500 hours service
Secondary fuel filter	6732-71-6120	Cartridge	1	Every 500 hours service
Hydraulic tank breather	20Y-60-21470	Cartridge	1	Every 500 hours service
Air cleaner	205-01-73570 205-01-K1480	Outer element Inner element	1 1	-

# USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE

## PROPER SELECTION OF FUEL, COOLANT AND LUBRICANTS

RESERVOIR	KIND OF FLUID	AMBIENT TEMPERATURE °C		Type of oil	Capacity	
		Min Temp	Max Temp		Specified	Refil
Engine oil pan	Engine oil	0° C -20° C -20° C -15° C	30° C 10° C 40° C 50° C	SAE 30 SAE 10W SAE 10W-30 SAE 15W-40	26.3 liters	24 liters
Swing machinery case		0° C -20° C	50° C 30° C	SAE 50 SAE 20	6.8 liters	6.8 liters
Final drive case (each)		0° C -20° C	50° C 30° C	SAE 50 SAE 30	4.4 liters	4.2 liters
Damper case		-20° C	40° C	SAE 30	0.75 liter	-
Hydraulic system		-20° C -20° C -15° C -25° C	40° C 40° C 50° C 40° C	SAE 10W SAE 10W-30 SAE 15W-40 Bio degradable hyd. oil (Hees) ISO 46	(PC210) 239 liters (PC240) 246 liters	166 liters
Fuel tank	Engine oil	-6° C -20° C		ASTM D975 N° 2 ASTM N° 1 for winter	340 Liters	-
Cooling system	Water	-30° C		<b>Add antifreeze</b>	(PC210) 22.9 liters (PC240) 23.2 liters	-

\* ASTM D975 No. 1

**REMARK**

When fuel sulphur content is less than 0.5%, change oil in the oil pan at every periodic maintenance interval given in this manual.

Change oil according to the following table if fuel sulphur content is above 0.5%.



Fuel sulphur content	Change interval of oil in engine oil pan
0.5 to 1.0%	1/2 of regular interval
Above 1.0%	1/4 of regular interval

- When starting the engine in an atmospheric temperature of under 0°C, be sure to use engine oil of SAE10W, SAE10W-30 and SAE15W-40, even though atmospheric temperature goes up to 10°C more or less in the day time.
- Use API classification CE or CF-4 as engine oil and if API classification CC, reduce the engine oil change interval to half.
- There is no problem if single grade oil is mixed with multi-grade oil (SAE10W-30, 15W-40), but be sure to add single grade oil that matches the temperature in the table.
- We recommend Komatsu genuine oil which has been specifically formulated and approved for use in engine and hydraulic work equipment applications.

Specified capacity: Total amount of oil including oil for components and oil in piping.

Refill capacity: Amount of oil needed to refill system during normal inspection and maintenance.

ASTM: American Society of Testing and Material

SAE: Society of Automotive Engineers

API: American Petroleum Institute


If an engine is operated in ambient temperatures consistently below -23°C and there are no provisions to keep the engine warm when it is not in operation use a synthetic API performance classification CE or CF-4 engine oil with adequate low temperature properties such as SAE SW-20 or 5W-30.

The oil supplier must be responsible for meeting the performatic service specifications.

**NOTICE**

**The use of a synthetic base oil does not justify extended oil change intervals. Extended oil change intervals can decrease engine life due to factors such as corrosion deposits and wear.**

**SPECTRUM XXX**  
KOMATSU GENUINE LUBRICANTS



TYPE	CLASS	VISCOSITY	REFNO
Engine oil	CF-4	SAE15W-40	EO-1540
	CF-4	SAE10W-30	EO-1030
TRANSMISSION OIL	CD	SAE10W	TO-10
& GEAR BOX OIL	CD	SAE10W	STD-10
		SAE30	TD-30
	CD	SAE50	TD-50
HYDRAULIC OIL	CD	SAE10W	HO-10
BIO HYDRAULIC OIL		SAE10W	BO-10
GREASE			LG-R2
BIO GREASE			BIO-R2
ANTI FREEZE			AF-03
BIO ANTI FREEZE			BIO-AF-0


No.	Supplier	Engine Oil [CD or CE] SAE10W, 30, 40 10W30, 15W40 (The 15W40 oil marked * is CE.)	Gear Oil [GL-4 or GL-5] SAE80, 90, 140	Grease [Lithium-Base] NLGI No. 2	Anti-freeze Coolant [Ethylene Glycol Base] Permanent Type
1	KOMATSU	EO10-CD EO30-CD EO10-30CD EO15-40CD	GO90 GO140	G2-LI G2-LI-S	AF-ACL AF-PTL AF-PT (Winter, one season type)
2	AGIP	Diesel sigma S Super diselmulti- grade *Sigma turbo	Rotra MP	GR MU/EP	-
3	AMOCO	*Amoco 300	Multi-purpose gear oil	RYKON premium grease	-
4	ARCO	*Arcofleet S3 plus	Arco HD gear oil	Litholine HEP 2 Arco EP moly D	-
5	BP	Vanellus C3	Gear oil EP Hypogear EP	Energrease LS- EP2	Antifreeze
6	CALTEX	*RPM delo 400 RPM delo 450	Universal thuban Universal thuban EP	Marfak all purpose 2 Ultra-duty grease 2	AF engine coolant
7	CASTROL	*Turbomax *RX super CRD	EP EPX Hypoy Hypoy B Hypoy C	MS3 Spheerol EPL2	Anti-freeze
8	CHEVRON	*Delo 400	Universal gear	Ultra-duty grease 2	-
9	CONOCO	*Fleet motor oil	Universal gear lubricant	Super-sta grease	-
10	ELF	Multiperformance 3C Performance 3C	-	Tranself EP Tranself EP type 2	Glacelf
11	EXXON (ESSO)	Essolube D3 *Essolube XD-3 *Essolube XD-3 Extra *Esso heavy duty Exxon heavy duty	Gear oil GP Gear oil GX	Beacon EP2	All season coolant
12	GULF	Super duty motor oil *Super duty plus	Multi-purpose gear lubricant	Gulfcrown EP2 Gulfcrown EP spe- cial	Antifreeze and coolant
13	MOBIL	Delvac 1300 *Delvac super 10W-30, 15W-40	Mobilube GX Mobilube HD	Mobilux EP2 Mobilgrease 77 Mobilgrease spe- cial	-

No.	Supplier	Engine Oil [CD or CE] SAE10W, 30, 40 10W30, 15W40 (The 15W40 oil marked * is CE.)	Gear Oil [GL-4 or GL-5] SAE80, 90, 140	Grease [Lithium-Base] NLGI No. 2	Anti-freeze Coolant [Ethylene Glycol Base] Permanent Type
14	PENNZOIL	*Supreme duty fleet motor oil	Multi-purpose 4092 Multi-purpose 4140	Multi-purpose white grease 705 707L White - bear- ing grease	Anti-freeze and summer coolant
15	PETROFINA	FINA kappa TD	FINA potonic N FINA potonic NE	FINA marson EPL2	FINA tamidor
16	SHELL	Rimula X	Spirax EP Spirax heavy duty	Albania EP grease	-
17	SUN	-	Sunoco GL5 gear oil	Sunoco ultra pres- tige 2EP Sun prestige 742	Sunoco antifreeze and summer cool- ant
18	TEXACO	*Ursa super plus Ursa premium	Multigear	Multifak EP2 Starplex 2	Code 2055 startex antifreeze coolant
19	TOTAL	Rubia S *Rubia X	Total EP Total transmission TM	Multis EP2	Antigel/antifreeze
20	UNION	*Guardol	MP gear lube LS	Unoba EP	-
21	VEEDOL	*Turbostar *Diesel star MDC	Multigear Multigear B Multigear C	-	Antifreeze

# STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS

## LIST OF NECESSARY TOOLS

The following tools are needed when carrying out maintenance.

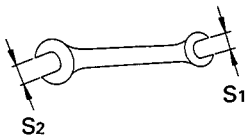No.	Name of tool	Part No.	Remarks
1	Wrench	09002-00810 09002-01214 09002-01317 09002-01922 09002-02427 09002-03032	Applicable width across flats (S1-S2) 8 mm - 10 mm 12 mm- 14 mm 13 mm - 17mm 19mm - 22mm 24 mm - 27 mm 30 mm - 32 mm  AD053370
2	Wrench	09002-03641	Applicable width across flats 36 mm - 41 mm
3	Screwdriver	09033-00190	Interchangeable flat-head and cross-head type
4	Socket wrench set	09020-10282	Applicable width across flats 12 mm, 14 mm, 17 mm, 19 mm, 24 mm, 36 mm Extension, Handle, Joint, Bar
5	Pliers	09036-00150	
6	Filter wrench	09019-08035	
7	Grease pump	07950-10450	For greasing work
8	Nozzle	07951-11400	
9	Grease cartridge	07950-90403	(Lithium base grease, 400 g)
10	Hammer	09039-00150	
11	Pinch bar	09055-10520	
12	Gauge	09054-00009	

If any of the above tools are broken, please order them from your Komatsu distributor.


## TORQUE LIST



Unless otherwise specified, tighten the metric bolts and nuts to the torque shown in the table.

The tightening torque is determined by the width across the flats (b) of the nut and bolt.

If it is necessary to replace any nut or bolt, always use a Komatsu genuine part of the same size as the part that was replaced.

Nm (newton meter): 1Nm = 0.1 kgm

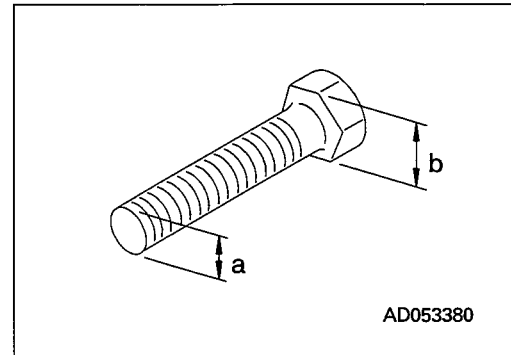

Thread diameter of bolt (mm) (a)	Width across flats (mm) (b)	  AD054300	
		Nm	kgm
6	10	13.2 ± 1.4	1.35 ± 0.15
8	13	31.4 ± 2.9	3.2 ± 0.3
10	16/17	65.7 ± 6.8	6.7 ± 0.7
12	18/19	112 ± 9.8	11.5 ± 1.0
14	21/22	177 ± 19	18.0 ± 2.0
16	24	279 ± 29	28.5 ± 3
18	27	383 ± 39	39 ± 3
20	30	549 ± 58	56 ± 6
22	32/34	745 ± 78	76 ± 8
24	36	927 ± 98	94.5 ± 10
27	41	1320 ± 140	135 ± 15
30	46	1720 ± 190	175 ± 20
33	50	2210 ± 240	225 ± 25
36	55	2750 ± 290	280 ± 30
39	60	3280 ± 340	335 ± 35

### NOTICE

When tightening panels or other parts having tightening fixtures made of plastic, be careful not to use excessive tightening torque: doing so will damage the plastic parts.

## PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS

To ensure safety at all times when operating or driving the machine, the user of the machine must always carry out periodic maintenance. In addition, to further improve safety, the user should also carry out periodic replacement of the parts given in the table. These parts are particularly closely connected to safety and fire prevention.

With these parts, the material changes as time passes, or they easily wear or deteriorate. However, it is difficult to judge the condition of the parts simply by periodic maintenance, so they should always be replaced after a fixed time has passed, regardless of their condition. This is necessary to ensure that they always maintain their function completely.

However, if these parts show any abnormality before the replacement interval has passed, they should be repaired or replaced immediately.


If the hose clamps show any deterioration, such as deformation or cracking, replace the clamps at the same time as the hoses.


When replacing the hoses, always replace the O-rings, gaskets, and other such parts at the same time.

Ask your Komatsu distributor to replace safety critical parts.

**SAFETY CRITICAL PARTS**

No.	Safety critical parts for periodic replacement	Q'ty	Replacement interval
1	Fuel hose (fuel tank - Sedimenter)	2	Every 2 Years or 4000 hours, whichever comes sooner
2	Fuel hose (sedimenter - fift pump)	1	
3	Spill hose (engine - tank)	5	
4	Pump outlet hose (Pump to control valve)	2	
5	Turbocharger librication hose	1	
6	Work equipment hose (arm cylinder line - Boom foot sec'n)	2	
7	Work equipment hose (Arm cylinder inlet)	2	

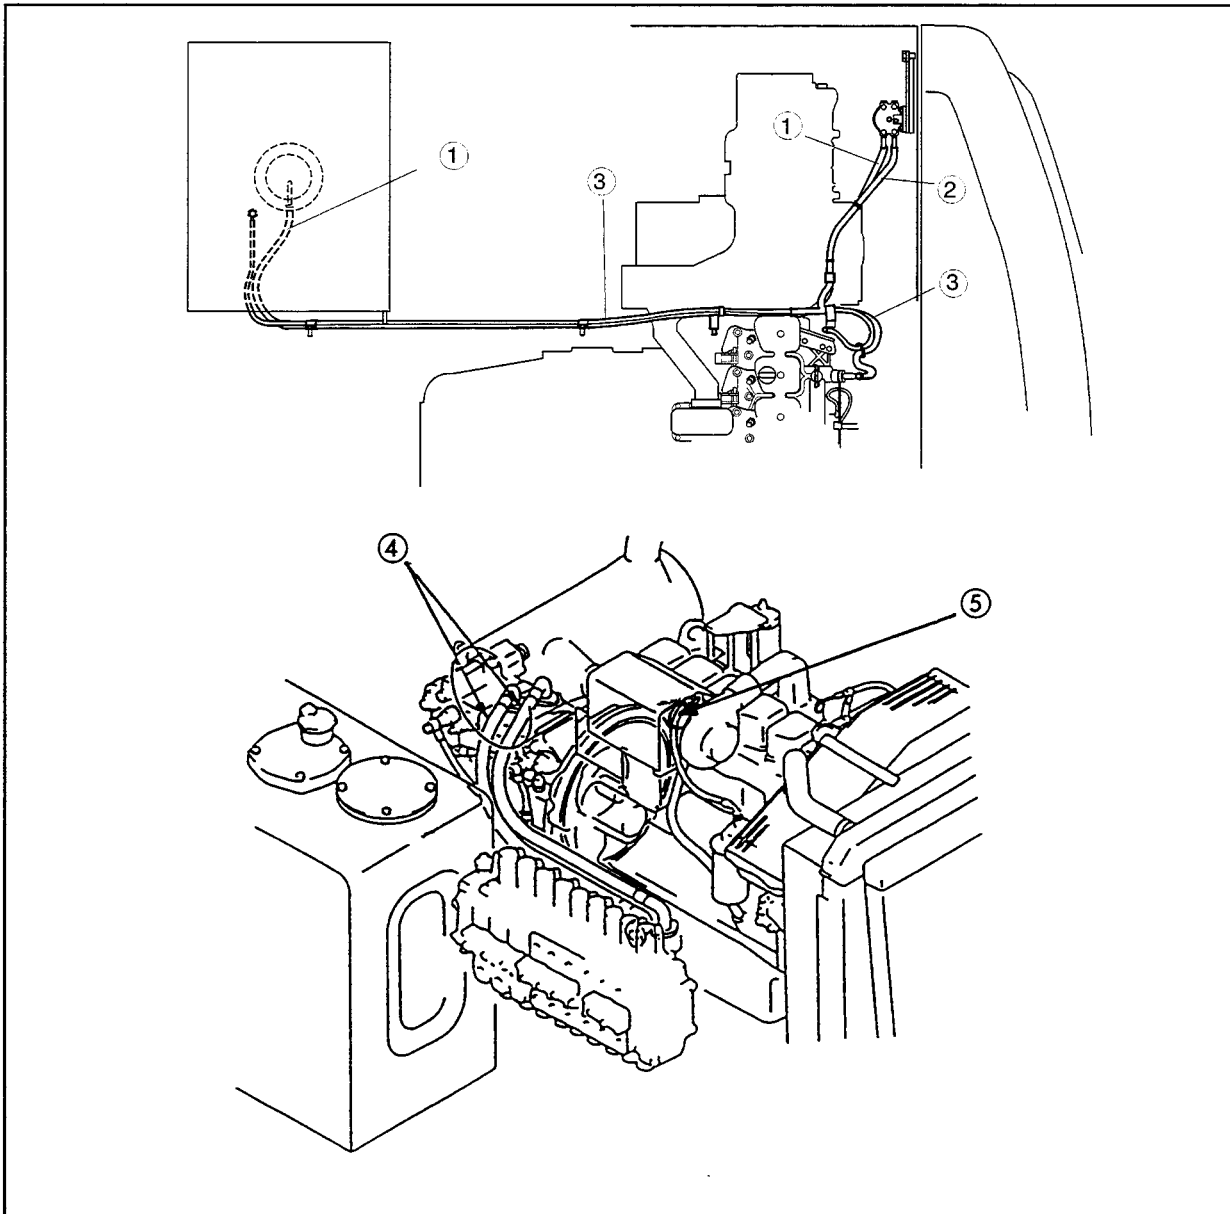

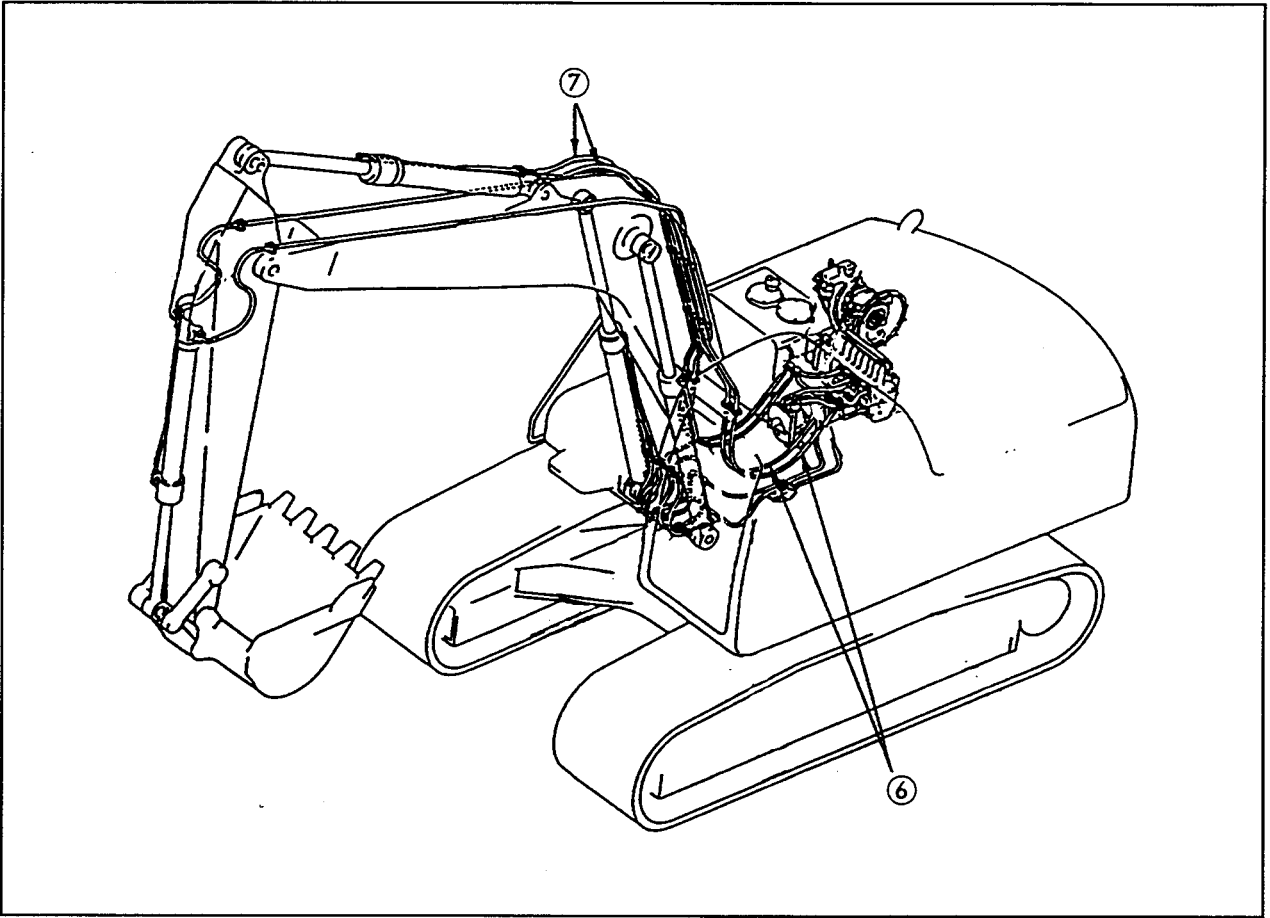



# MAINTENANCE SCHEDULE CHART

## MAINTENANCE SCHEDULE CHART

SERVICE ITEM	PAGE
<b>INITIAL 250 HOURS SERVICE (only after the first 250 hours)</b>	
REPLACE FUEL FILTER CARTRIDGE	178
<b>WHEN REQUIRED</b>	
CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT	178
CLEAN INSIDE OF COOLING SYSTEM	180
CHECK AND TIGHTEN TRACK SHOE BOLTS	183
CHECK and adjust TRACK TENSION	184
CHECK ELECTRICAL INTAKE AIR HEATER	186
REPLACE BUCKET SIDE CUTTERS	186
REPLACE BUCKET TEETH	187
ADJUST BUCKET CLEARANCE	187
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID	188
CHECK, MAINTAIN AIR CONDITIONER	189
<b>CHECK BEFORE STARTING</b>	
CHECK COOLANT LEVEL, ADD COOLANT	190
CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL	191
CHECK FUEL LEVEL, ADD FUEL	191
CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL	192
CHECK AIR CLEANER FOR CLOGGING	193
CHECK ELECTRIC WIRINGS	193


SERVICE ITEM	PAGE
<b>(CHECK BEFORE STARTING)</b>	
CHECK FUNCTION OF HORN	194
CHECK FOR WATER AND SEDIMENT IN SEDIMENTOR, DRAIN WATER AND SEDIMENT	194
<b>CHECK EVERY 100 HOURS SERVICE</b>	
<b>LUBRICATING</b>	<b>195</b>
1. Boom cylinder foot pin (2 points)	195
2. Boom foot pin (2 points)	196
3. Boom cylinder rod pin (2 points)	196
4. Arm cylinder foot pin (1 point)	196
5. Boom-Arm coupling pin (1 point)	196
6. Arm cylinder rod end (1 point)	196
7. Bucket cylinder foot pin (1 point)	196
8. Arm-link coupling pin (1 point)	196
9. Arm-bucket coupling pin (1 point)	196
10. Link coupling pin (2 points)	196
11. Bucket cylinder rod end (1 point)	196
12. Bucket-Link coupling pin (1 point)	196
CHECK OIL LEVEL IN SWING MACHINERY CASE, ADD OIL	197
DRAIN WATER AND SEDIMENT FROM FUEL TANK	197
CLEAN FRESH AIR INTAKE FILTER	198
<b>EVERY 250 HOURS SERVICE</b>	
CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL	198
CHECK LEVEL OF BATTERY ELECTROLYTE	199
LUBRICATE SWING CIRCLE (2 POINTS)	200
CHECK AIR CONDITIONER COMPRESSOR BELT TENSION ADJUST.	200
<b>EVERY 500 HOURS SERVICE</b>	
REPLACE FUEL FILTER CARTRIDGE	202
CHECK SWING PINION GREASE LEVEL, ADD GREASE	204
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE	204
CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS AND CONDENSER FINS (ONLY FOR MACHINES EQUIPPED WITH AIR CONDITIONER)	205

SERVICE ITEM	PAGE
REPLACE HYDRAULIC TANK BREATHER ELEMENT	206
REPLACE HYDRAULIC FILTER ELEMENT	206
<b>EVERY 1000 HOURS SERVICE</b>	
CHANGE OIL IN SWING MACHINERY CASE	208
CHECK OIL LEVEL IN DAMPER CASE, ADD OIL	209
CHECK ALL TIGHTENING PARTS OF TURBOCHARGER	209
CHECK PLAY OF TURBOCHARGER ROTOR	209
CHECK FAN BELT TENSIONER BEARING BELT AND FAN HUB.	210
CHECK FAN BELT TENSION	210
<b>EVERY 2000 HOURS SERVICE</b>	
CHANGE OIL IN FINAL DRIVE CASE	211
CLEAN HYDRAULIC TANK STRAINER	212
CLEAN, CHECK TURBOCHARGER	212
CHECK ALTERNATOR, STARTING MOTOR	212
CHECK ENGINE VALVE CLEARANCE, ADJUST	212
CHECK VIBRATION DAMPER	212
CHANGE ANTI FREEZE	212
CHECK AND ADJUST VALVE CLEARANCE	213
<b>EVERY 4000 HOURS SERVICE</b>	
CHECK WATER PUMP	213
<b>EVERY 5000 HOURS SERVICE</b>	
CHANGE OIL IN HYDRAULIC TANK	213

## MAINTENANCE WHEN USING HYDRAULIC BREAKER

For machines equipped with a hydraulic breaker, the hydraulic oil deteriorates faster than for normal bucket digging operations, so set the maintenance intervals as follows.

- Replacing hydraulic filter element  
On new machines, replace the element after the first 100 to 150 hours, then carry out further replacement of the element according to the table on the right.
- Changing oil in hydraulic tank  
Change the oil according to the table on the right.

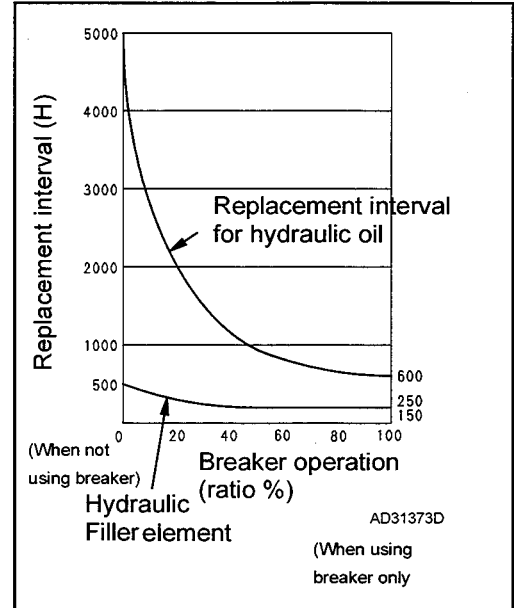

## SERVICE PROCEDURE

### INITIAL 250 HOURS SERVICE

Carry out the following maintenance only after the first 250 hours.

- REPLACE FUEL FILTER CARTRIDGE


For details of the method of replacing or maintaining, see the section on EVERY 500 HOURS and 2000 HOURS SERVICE.

### WHEN REQUIRED

#### CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT

##### WARNING

- Never clean or replace the air cleaner element with the engine running.
- When using pressure air to clean the element wear safety glasses or goggles to protect the eyes.


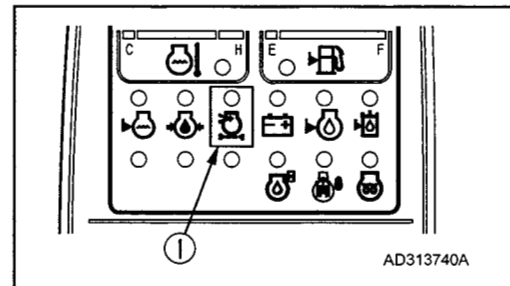


#### Checking

If air cleaner clogging monitor (1) flashes, clean the air cleaner element.

#### Cleaning the outer element

1. Open the front door on the left side of the machine, remove wing nut (2), then take out element (3).  
To prevent entry of dirt or dust, cover the air connector side of the rear end of the air cleaner body with a clean cloth and adhesive tape.
2. Clean interior of the air cleaner body interior and the cover.
3. Direct dry compressed air (less than 700 kPa (7 kg/cm<sup>2</sup>), to element (3) from inside along its folds, then direct it from outside along its folds and again from inside.
  - Replace the outer element if it has been cleaned 6 times repeatedly or used throughout a year. Replace the inner element at the same time.
  - Replace both inner and outer elements when the monitor lamp (1) start flashing soon after installing the cleaned

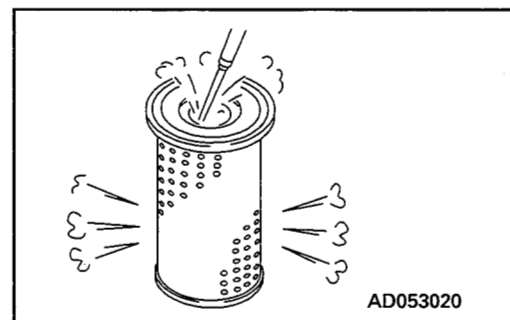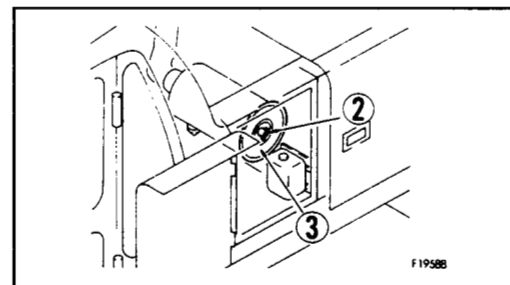


outer element even though it may not have been cleaned 6 times.


- Check inner element mounting nuts for looseness and , if necessary, retighten.
4. If small holes or thinner parts are found on the element when it is checked with an electric bulb after cleaning, replace the element

**NOTICE**

- Do not use an element whose folds or gasket or seal are damaged.
- When cleaning the element, do not hit it or beat it against something.

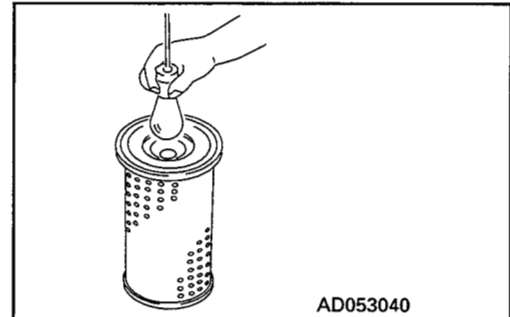

5. Remove the cloth and tape used for cover in Step 1.
6. Install the cleaned element and fix it with the wing nut.
7. Replace the seal washer (4) or the wing nut (2) with new parts if they are broken.
8. Remove the evacuator valve (5) and clean it with compressed air. After cleaning, install it.

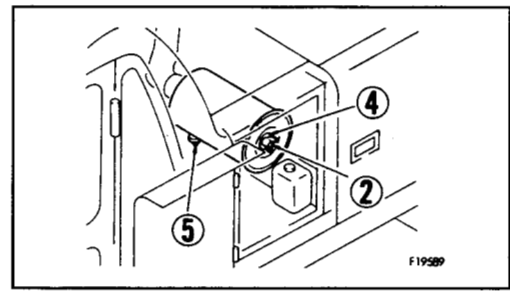

**Replacing the inner element**

1. Firsts remove the cover and the outer element, and then remove the inner element.
2. To prevent dust from getting in, use a clean cloth or tape to cover the air connector (outlet side).
3. Clean the air cleaner body interior, then remove the cover installed in Step 2.
4. Fit a new inner element to the connector and tighten it with the nuts. Do not clean and reinstall a inner element.
5. Install the outer element and fix it with the wing nut

## CLEAN INSIDE OF COOLING SYSTEM

### WARNING

- Soon after the engine has been stopped, the coolant is hot and can cause personal injury. Allow the engine to cool before draining the coolant.
- Since cleaning is performed while the engine is running, it is very dangerous to enter the rear side of the machine as the machine may suddenly start moving. If the under cover is left removed, it may interfere with the fan. While the engine is running, never enter the rearside of the machine.
- Never remove the radiator cap when the engine is at operating temperature. At operating temperature, the coolant is under pressure. Steam blowing up from the radiator could cause personal injury. Allow the engine to cool until the radiator filler cap is cool enough to touch with your hand. Remove the filler cap slowly to allow pressure to be relieved.

- Clean the inside of the cooling system change the coolant and replace the corrosion resistor according to the table below.

Kind of coolant	Cleaning inside of cooling system and changing coolant
Permanent type antifreeze (All season type)	Every year (autumn) or every 2000 hours whichever comes first
Non permanent type antifreeze containing ethylene glycol (winter, one season type)	Every 6 months (spring, autumn) (Drain antifreeze in spring, add antifreeze in autumn)
When not using antifreeze	Every 6 months or every 1000 hours whichever comes first

- Stop the machine on level ground when cleaning or changing the coolant.
- Use a permanent type of antifreeze. If, for some reason, it is impossible to use permanent type antifreeze, use an antifreeze containing ethylene glycol.
- Super Coolant (AF-ACL) has an anti-corrosion effect as well as an antifreeze effect. The ratio of antifreeze to water depends on the ambient temperature, but to obtain the corrosion resistance effect, a minimum ratio of 30% by volume is necessary.

When deciding the ratio of antifreeze to water, check the lowest ; temperature in the past, and decide from the mixing rate table given below.

It is actually better to estimate a temperature about 10°C lower when deciding the mixing rate.

**Mixing rate of water and antifreeze****PC210 series**

Min. atmospheric temperature	°C	-5	-10	-15	-20	-25	-30
Amount of antifreeze	liters	5.1	6.7	8.0	9.1	10.2	11.1
Amount of water	liters	17.1	15.5	14.2	13.1	12.0	11.1

**PC240 series**

Min. atmospheric temperature	°C	-5	-10	-15	-20	-25	-30
Amount of antifreeze	liters	5.4	7.0	8.4	9.6	10.7	11.65
Amount of water	liters	17.4	16.3	14.4	13.7	12.6	11.65

---



---

**⚠ WARNING**


---



---

**Antifreeze is flammable, so keep it away from any flame.**

---



---

- Use city water for the cooling water.  
If river water, well water or other such water supply must be used, contact your Komatsu distributor.
- We recommend use of an antifreeze density gauge to control the mixing proportions.



---

**▲ WARNING**


---

When removing drain plug, avoid pouring coolant on yourself.

---



---

**▲ WARNING**


---

Hot, scalding coolant can spray out if the radiator cap is removed suddenly. Relieve system pressure by slowly turning the cap to the first notch or lifting the safety lever (if equipped). Remove the cap only after the pressure is relieved.

---



- Prepare a container to catch drained coolant: Min 23.3 l capacity.
1. Turn radiator cap (2) slowly to release the internal pressure.
  2. Pushing radiator cap (2), turn it slowly to remove it.
  3. Remove the bolted cover beneath the radiator, then set a container to catch the coolant under drain valve (2) and drain plug (3). Open drain valve (2) at the bottom of the radiator to drain the water. Remove drain plug (3) in the cylinder block when draining the water.
  4. After draining the water, close drain valve (2) and drain plug (3) and fill with city water.
  5. Open drain valve (3) and drain plug (3) run the engine at low idling, and flush water through the system for 10 minutes.

When doing this, adjust the speed of filling and draining the water so that the radiator is always full.


While flushing water through the system, watch carefully that the water inlet hose does not come out of the radiator water filler.

6. After flushing, stop the engine, open drain valve (2) and drain plug (3), then close it again after all the water has drained out.
7. After draining the water, clean with a flushing agent. We recommend use of a Komatsu genuine cleaning agent. For details of the cleaning method, see the instructions given with the cleaning agent.
8. After cleaning, open drain valve (2) and drain plug (3) to drain all the cooling water, then close them and fill slowly with clean water.
9. When the water comes up to near the water filler port, open drain valve (2) and drain plug (3), run the engine at low idling, and continue to run water through the system until clean colorless water comes out.

When doing this, adjust the speed of filling and draining the water so that the radiator is always full.

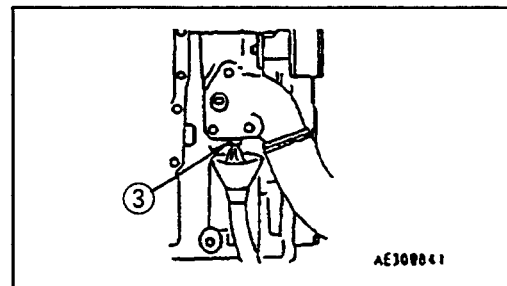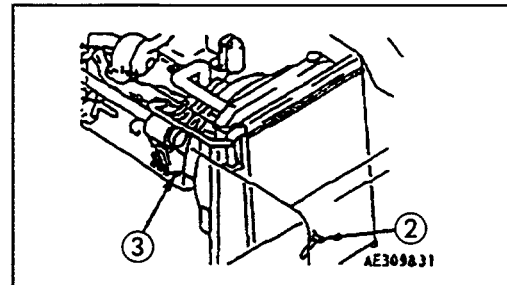

10. When the water is completely clean, stop the engine, close drain valve (2), wrap the drain plug with seal tape, then close drain plug (3).
11. Install the undercover.
12. Add cooling water until it overflows from the water filler.
13. To remove the air in the cooling water, run for five minutes at low idling, then for another five minutes at high idling. When doing this, leave radiator cap (1) off.
14. After draining off the cooling water of reserve tank (4), clean the inside of the reserve tank and refill the water between FULL and LOW level.
15. Stop the engine, wait for about three minutes, add cooling water, up to near the radiator water filler port, then tighten cap (1).

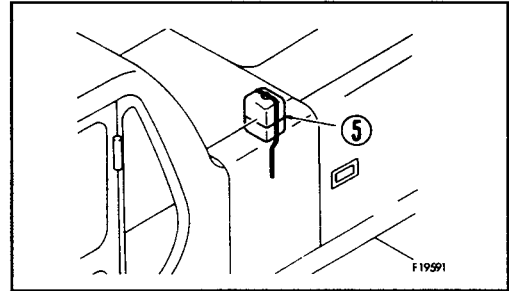


### CHECK AND TIGHTEN TRACK SHOE BOLTS

If the machine is used with track shoe bolts (1) loose, they will break, so tighten any loose bolts immediately.


#### Method for tightening

1. Tighten first to a tightening torque of  $390 \pm 40$  Nm ( $40 \pm 4$  kgm), then check that the nut and shoe are in close contact with the link mating surface.
2. After checking, tighten a further  $120^\circ \pm 10^\circ$ .

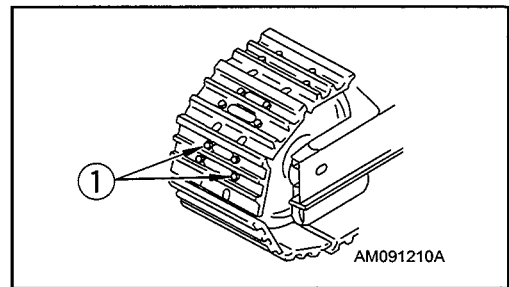

#### Order for tightening

Tighten the bolts in the order shown in the diagram. After tightening, check that the nut and shoe are in close contact with the link mating surface.

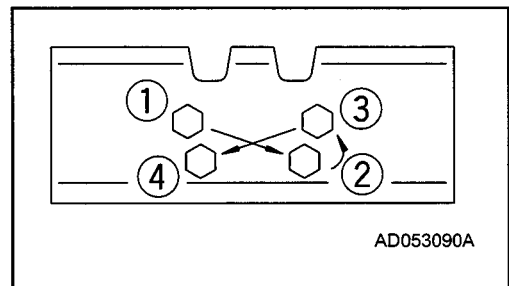

## CHECK AND ADJUST TRACK TENSION

### **⚠ WARNING**

Carry out this operation with two workers. The operator must move the machine in accordance with the signals from the other worker. The track tension is checked with the chassis raised, so it is extremely dangerous if the machine is lowered by mistake during the inspection. Never move the machine while anyone is carrying out measurements.

The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties. It is thus necessary to continually inspect the track tension so as to maintain the standard tension.

Carry out the check and adjustment under the same conditions as when operating (on jobsites where the track becomes clogged with mud, measure with the track clogged with mud).

### Inspection



1. Raise the chassis with the boom and arm. When doing this, operate the levers slowly.
2. Measure the clearance between the bottom of the track frame and the top of the track shoe at a position that is safe even if the chassis should come down

Standard clearance:  $303 \pm 20$  mm.

#### ● Places to measure

- PC210: 4<sup>th</sup> track roller from sprocket.
- PC210LC, PC240NLC: 5<sup>th</sup> track roller from sprocket.
- PC240: Midway between 4<sup>th</sup> and 5<sup>th</sup> track rollers from sprocket.
- PC240LC: Midway between 5<sup>th</sup> and 6<sup>th</sup> track rollers from sprocket.


If the track tension is not the standard value, adjust in the following manner.

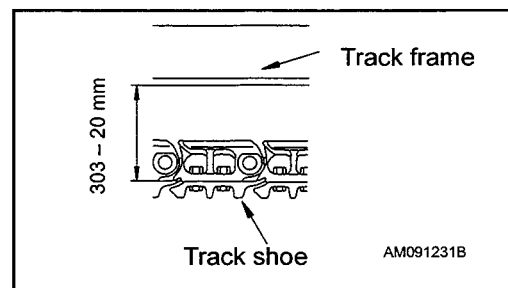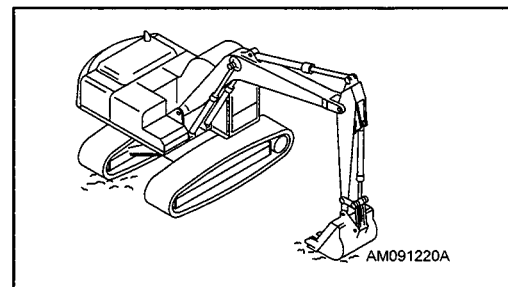

**Adjustment**

**WARNING**



- Grease inside the adjusting mechanism is under high pressure.
- Grease coming from plug a under pressure can penetrate the body causing injury or death. For this reason, do not loosen any part other than the plug a more than one turn. Do not bring your face in front of the plug (1). If the track tension is not relieved by this procedure, please contact your Komatsu distributor.

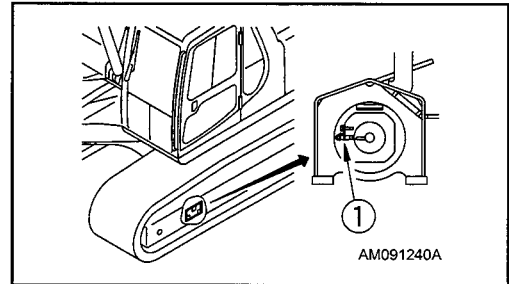

**When increasing tension**

Prepare a grease gun.


1. Pump in grease through grease fitting (2) with a grease gun.
2. To check that the correct tension has been achieved, move the machine backwards and forwards.
3. Check the track tension again, and if the tension is not correct, adjust it again.
4. Continue to pump in grease until S becomes 0 mm. If the tension is still loose, the pin and bushing are excessively worn, so they must be either turned or replaced. Please contact your Komatsu distributor

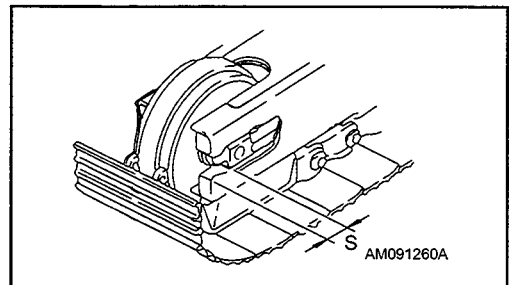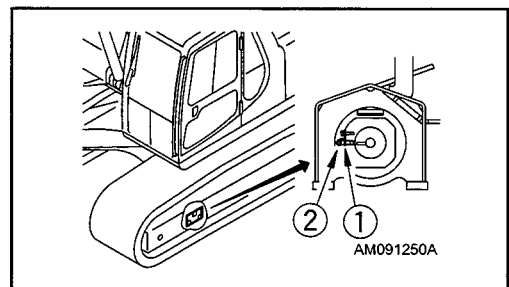

**When loosening tension.**

**WARNING**

**It is extremely dangerous to release the grease by any method except the procedure given below. If the track tension is not relieved by this procedure, please contact your komatsu distributor.**

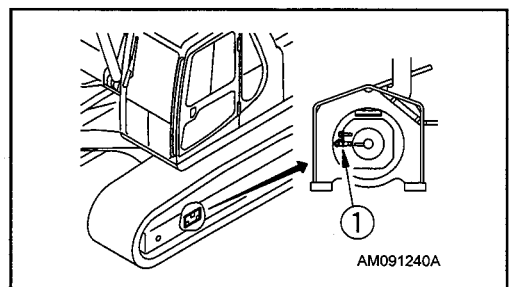

1. Loosen plug (1) gradually to release the grease.
2. Turn plug (1) a maximum of one turn.
3. If the grease does not come out smoothly, move the machine backwards and forwards a short distance.
4. Tighten plug (1)

5. To check that the correct tension has been achieved, move the machine backwards and forwards.
6. Check the track tension again, and if the tension is not correct, adjust it again.

## CHECK ELECTRICAL INTAKE AIR HEATER

Before the start of the cold season (once a year), contact your Komatsu distributor to have the electrical intake air heater repaired or checked for dirt or disconnections.

## REPLACE BUCKET SIDE CUTTERS

### **WARNING**

It is dangerous if the work equipment moves by mistake when the teeth are being replaced. Set the work equipment in a stable condition, then stop the engine and apply the locks securely to the levers.



1. Untighten nuts (5) and bolts (3) and remove side cutters (1) and (2).
2. Clean cutter mounting face on bucket side plate.
3. Check nuts and bolts and replace if damaged.
4. Fit new side cutters.
5. Tighten bolts to  $110 \pm 10$  kgm.

### NOTICE

Please confirm with your bucket supplier for the correct procedure to replace bucket teeth and side cutters.

### NOTICE

When side cutters are not being used, shrouds should be fitted to prevent wear of the bucket side plate.

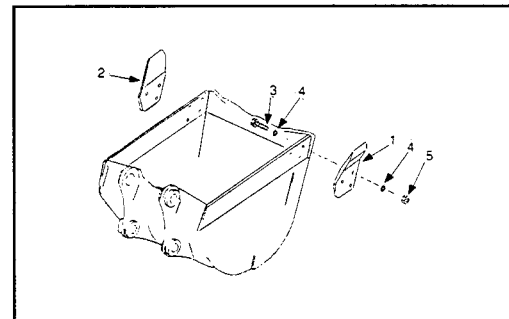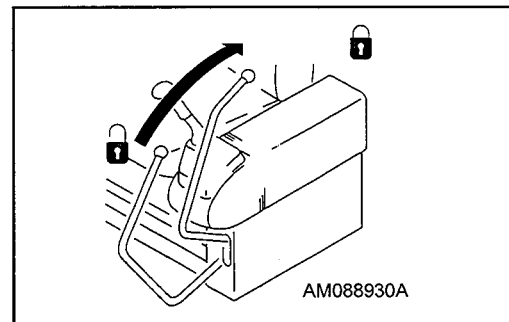

## REPLACE BUCKET TEETH

Replace the point before the adapter starts to wear.

---

### WARNING


---

It is dangerous if the work equipment moves by mistake when the teeth are being replaced. Set the work equipment in a stable condition, then stop the engine and apply the locks securely to the levers.

---

### NOTICE

Please confirm with your bucket supplier for the correct procedure to replace bucket teeth and side cutters.

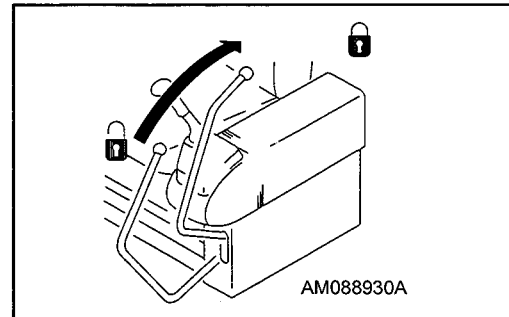

## ADJUST BUCKET CLEARANCE


It is dangerous if the work equipment moves by mistake when the clearance is being adjusted.

---

### WARNING

---

- Set the work equipment in a stable condition, then stop the engine and lock the lever securely.
  - When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.
  - When the bucket is removed, place it in a stable condition.
- 

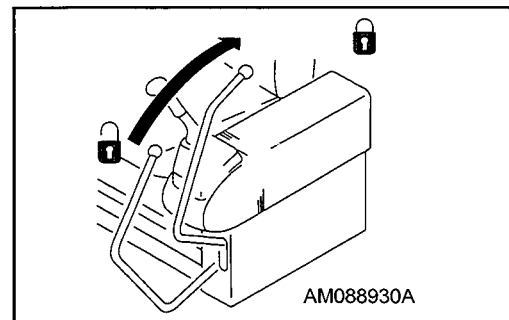


1. Set the work equipment to the position shown in the diagram at right, stop the engine and set the safety lock lever to the lock position.

2. Measure the amount of play (a).  
 Measurement is easier if you move the bucket to one side or the other so all the play can be measured in one place. (In the diagram this is on the left-hand side)  
 Use a gap (clearance) gauge for easy and accurate measurement.

**REMARK**

When removing the pins, place the bucket so that it is in light contact with the ground.  
 If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

3. Remove the stopper bolt (2) and nut and remove the pin half way.
4. Fit shims (3) according to the amount of free play A measured above.

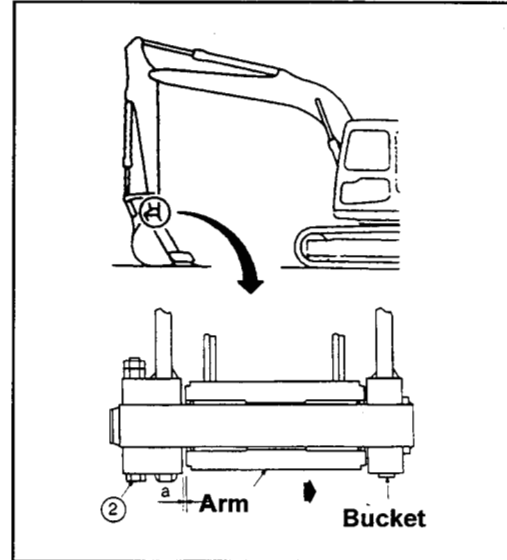


**(EXAMPLE)**

If the play is 3 mm, fit two 1.0 mm shims and one 0,5 mm shim and the play will become 0,5 mm.

When the play (a) is smaller than 0,5 mm. Do not carry out any maintenance.

5. Refit pin and stopper bolt.

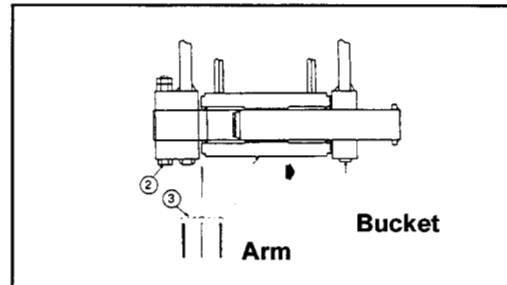


**CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID**

If air is ejected with the window washer fluid, check the fluid level in window washer tank a. If showing under the level, fill with automobile window washer fluid.

When adding fluid, be careful not to let dirt or dust get in.

- Mixture ratio of pure washer fluid and water  
 Since the ratio should be varied depending on atmospheric temperature, replenish washer fluid at the following mixture ratio, taking temperature into account.

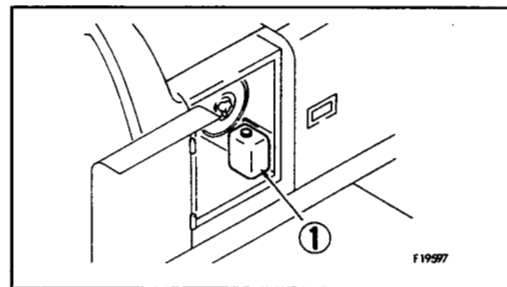

Operation area and season	Mixture ratio	Freezing temperature
Normal	Pure washer fluid 1/3: water 2/3	- 10°C
Winter in cold region	Pure washer fluid 1/2: water 1/2	- 20°C
Winter in extremely cold region	Pure washer fluid	- 30°C

Pure washer fluid comes in two types: for -10°C (for general use) and for -30°C (cold regions).

Use pure washer fluid according to operation area and season.


**CHECK, MAINTAIN AIR CONDITIONER**

**CHECK LEVEL OF REFRIGERANT (GAS)**

**▲ WARNING**  
**If the refrigerant used in the cooler gets into your eyes or on your hands, it may cause loss of sight or frostbite, so never loosen any part of the refrigerant circuit.**

If the level of the refrigerant (gas) is low, the cooling effect will be reduced. Run the engine at high idling, and check the flow of the refrigerant gas (freon 134a) in the refrigerant circuit through the sight glass of the receiver when the cooler is running at high speed.

- (A) No bubbles in refrigerant flow: Suitable
- (B) Some bubbles in flow (bubbles pass continuously): Lack of refrigerant
- (C) Colorless, transparent: No refrigerant

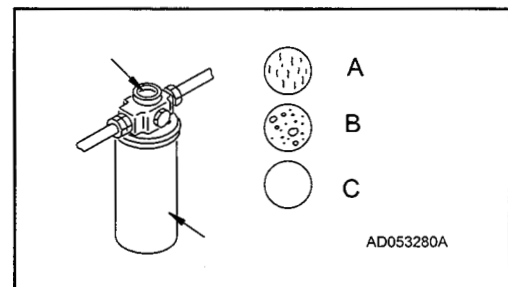

**REMARK**

When there are bubbles, the refrigerant gas level is low, so contact your refrigerant dealer to have refrigerant added. If the air conditioner is run with the refrigerant gas level low, it will cause damage to the compressor.

**INSPECTION DURING OFF-SEASON**

Even during the off-season, run the compressor at low speed for 3 - 5 minutes once a month to prevent the loss of the oil film at the lubricated Parts of the compressor.

**Inspection and maintenance items list for cooler**

Check, maintenance items	Content of check, maintenance	Guideline for maintenance interval
Refrigerant (gas)	Charge amount	Twice a year (spring, autumn)
Condenser	Clogged fins	Every 500 hours
Compressor	Operating condition	Every 4000 hours
V-belt	Damage, tension	Every 250 hours



Check, maintenance items	Content of check, maintenance	Guideline for maintenance interval
Blower motor, fan	Operating condition (does it make abnormal noise?)	When required
Control mechanism	Operating condition (does it function normally?)	When required
Piping mounts	Mounting condition, looseness at tightening or connecting portions, leakage of gas, damage	When required



## CHECK BEFORE STARTING

### CHECK COOLANT LEVEL, ADD COOLANT

#### **▲ WARNING**

Do not open the radiator cap unless necessary. When checking the coolant, always check the radiator reserve tank when the engine is cold.

1. Open the rear door on the right side of the machine and check that the coolant level is between the FULL and LOW marks on radiator reserve tank (shown in the drawing on the right). If the coolant level is low, add coolant through the filler of reserve tank (1) to the FULL level.
2. After adding coolant, tighten the cap securely.
3. If the reserve becomes empty, first inspect for coolant leaks and then fill the radiator and the reserve tank with coolant.

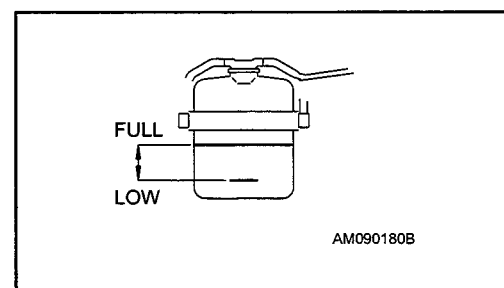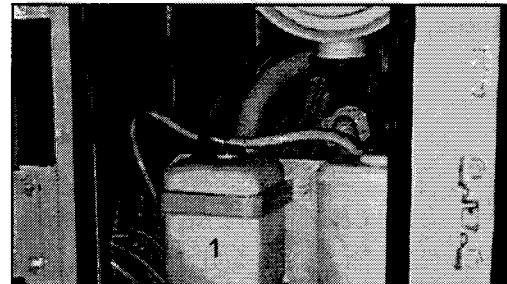

## CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL

### **WARNING**

The turbocharger (with safety cover) exhaust manifold is near dipstick (G), so be careful not to touch it.

1. Open the engine hood on the machine.
2. Remove dipstick (G) and wipe the oil off with a cloth.
3. Insert dipstick (G) fully in the oil filler pipe, then take it out again.
4. The oil level should be between the (H) and (L) marks on dipstick (G). If the oil level is below the (L) mark, add engine oil through oil filler (F).

For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.

5. If the oil is above the (H) mark, drain the excess engine oil using drain valve in the bottom of oil pan, (P) and check the oil level again.
6. If the oil level is correct, tighten the oil filler cap securely and close the engine hood.

### REMARK

When checking the oil level after the engine has been operated wait for at least 15 minutes after stopping the engine before checking. If the machine is at an angle, make it horizontal before checking.

## CHECK FUEL LEVEL, ADD FUEL



### **WARNING**

When adding fuel, never let the fuel overflow. This may cause a fire. If spilling fuel, thoroughly clean up any spillage.


1. Use sight gauge (G) on the rear face of the fuel tank to check that the tank is full.
2. If the fuel level is not within the sight gauge, add fuel through filler port (F), while watching sight gauge (G).

Fuel capacity: 310 liter.

For details of the fuel to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.

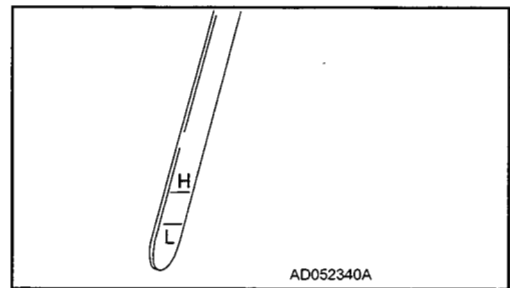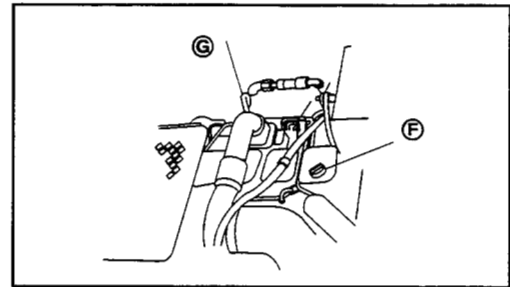

AD052340A

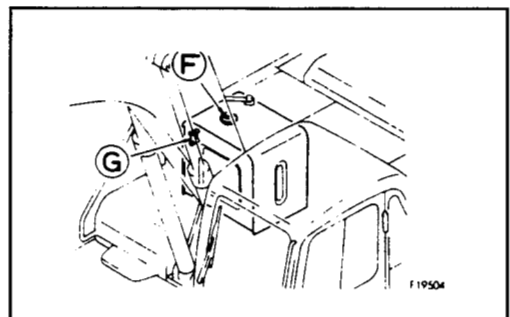


F19504

3. After adding fuel, tighten the cap securely.


**NOTE:** To prevent moisture due to condensation, the fuel tank must be filled at the end of each day's operation.

**REMARK**

If breather holes (1) on the cap is clogged, the pressure in the tank will drop and fuel will not flow. Clean the holes from time to time.

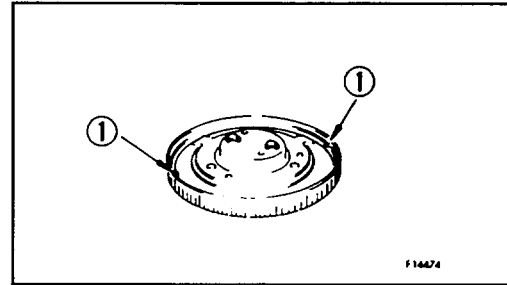


If required, the contents of the fuel tank may be drained from the tank by loosening the drain valve (2) located on the bottom of the tank.

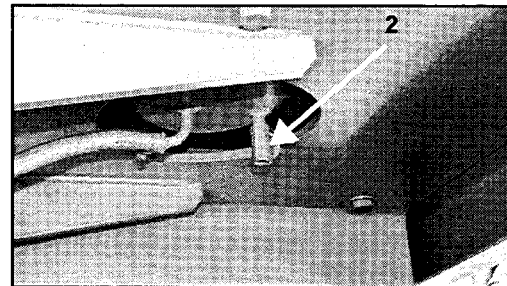


**CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL**

**WARNING**

- When removing the oil filler cap, oil may spurt out, so turn the cap slowly to release the internal pressure before removing the cap.
- If oil has been added to above the H mark, stop the engine and wait for the hydraulic oil to cool down, then drain the excess oil from drain plug (P).

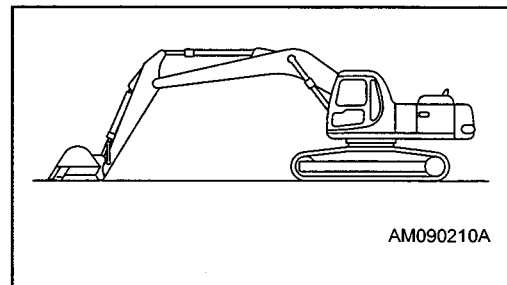

1. If the work equipment is not in the condition shown in the diagram on the right, start the engine run the engine at low speed, retract the arm and bucket cylinders, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.
2. Within 15 seconds after stopping the engine, move each control lever (work equipment and travel) to full stroke in all directions to release the internal pressure.
3. Open the door on the left side of the machine. Check sight gauge (G). The oil level is normal if between the H and L marks.

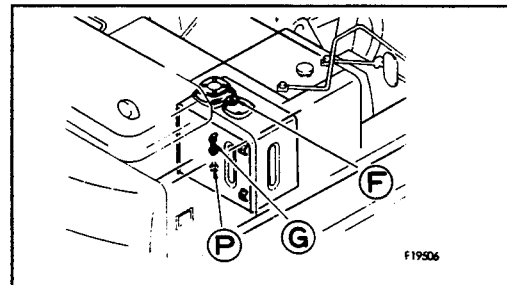

**NOTICE**

Do not add oil if the level is above the H line. This will damage the hydraulic equipment and cause the oil to spurt out.


- If the level is below the L mark, remove the upper cover of the hydraulic tank and add oil through oil filler (F).

For details of the oil to use, see “USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE” on page 165.

**REMARK**


The oil level will vary depending upon the oil temperature. Accordingly, use the following as a guide:

- Before operation: around L level  
(Oil temperature 10 to 30°C)
- Normal operation: around H level  
(Oil temperature 50 to 80°C)

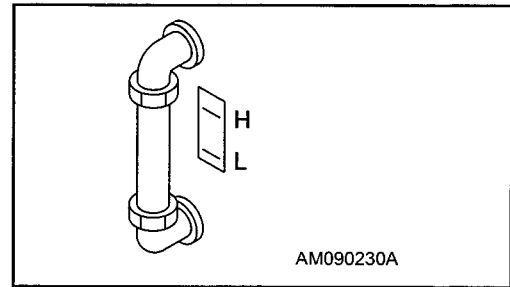**CHECK AIR CLEANER FOR CLOGGING**

- Confirm that the air cleaner clogging monitor does not flash.
- If it flashes, immediately clean or replace the element.

For details of the method of cleaning the element, see “CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT” on page 178.

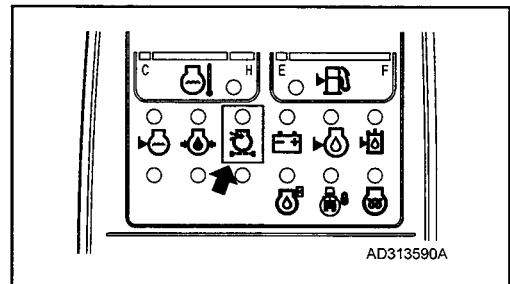**CHECK ELECTRIC WIRINGS**

**▲ WARNING**

- If the fuses are frequently blown or if there are traces of short circuit on the electrical wiring, locate the cause and carry out repair.
- Accumulation of flammable material (dead leaves, twigs, grass, etc.) around the battery may cause fire, so always check and remove such material.
- Keep the top surface of the battery clean and check the breather hole in the battery cap. If it is clogged with dirt or dust, wash the battery cap to clean the breather hole.

Check for damage and wrong capacity of the fuse and any sign of disconnection or short circuit in the electric wiring. Check also for loose terminals and tighten any loose parts.

Check the wiring of the “battery”, “starting motor” and “alternator” carefully in particular.

When carrying out walk-around checks or checks before starting, always check if there is any accumulation of flammable material around the battery, and remove such flammable material.

Please contact your Komatsu distributor for investigation and correction of the cause.

### CHECK FUNCTION OF HORN

1. Turn the starting switch to the ON position.
2. Confirm that the horn sounds without delay when the horn button is pressed. If the horn does not sound, ask your Komatsu distributor for repair.


### CHECK FOR WATER AND SEDIMENT IN SEDIMENTOR, DRAIN WATER AND SEDIMENT

A fuel sedimentor is mounting in the pump compartment and is accessed by the door on the right hand side of the machine. Entrapped sediment and water can be seen through the glass bowl.

1. Loosen drain plug (1) and drain water and sediment until none is visible in bowl.
2. Tighten drain plug.


A : Fuel

B : Water/sediment

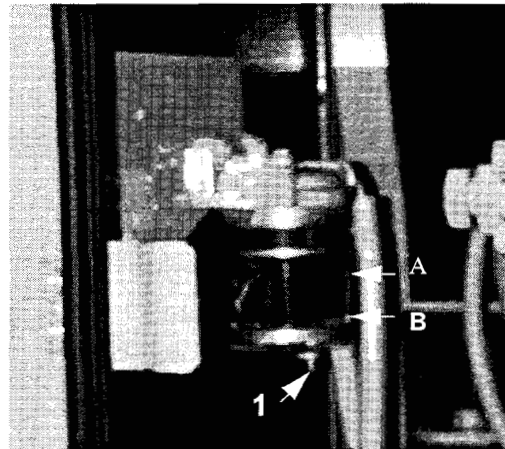

### CHECK FOR WATER IN PRIMARY FUEL FILTER, drain water

A primary fuel filter is fitted on the engine. Drain the water from the primary fuel filter by turning cap at the bottom of the filter.

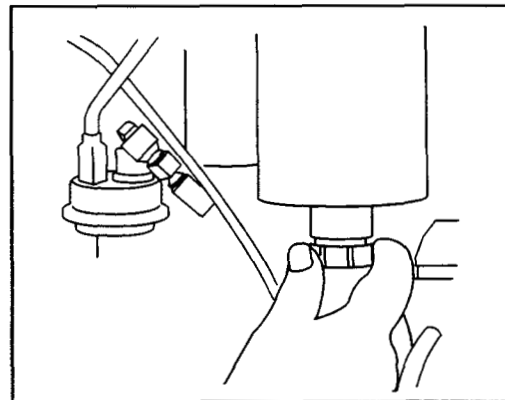


## EVERY 100 HOURS SERVICE

### LUBRICATING


The minimum greasing interval is 100 hours.

However, more frequent greasing will be required depending on conditions/environment


1. Set the work equipment in the greasing posture below, then lower the work equipment to the ground and stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

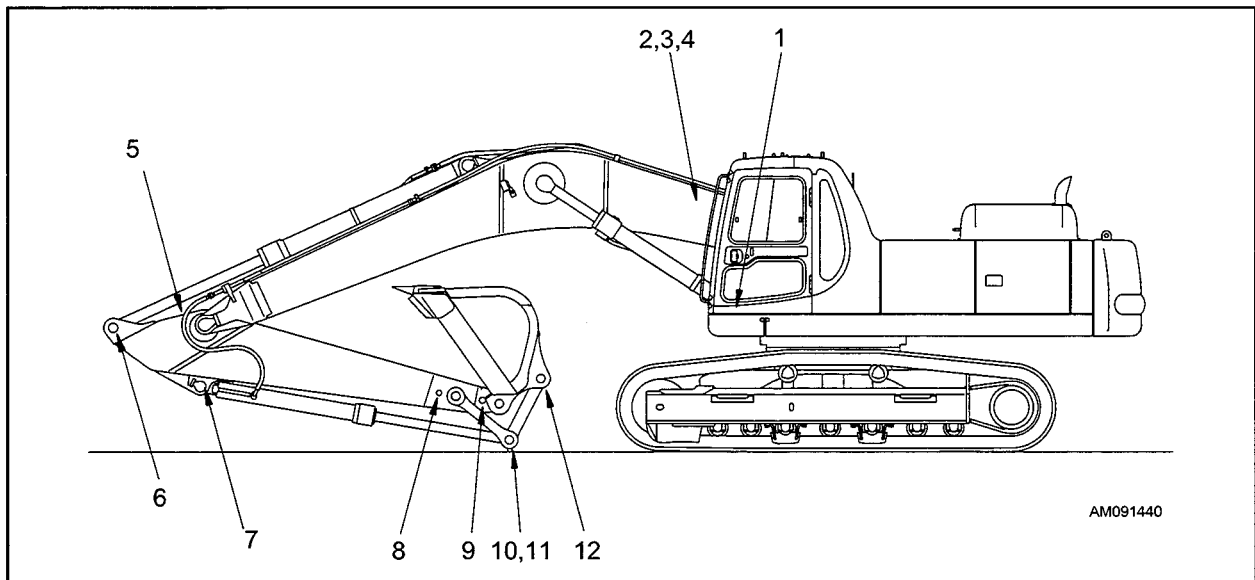

1. Boom cylinder foot pin (2 points)

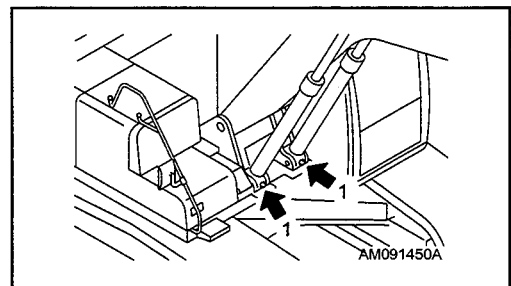


2. Boom foot pin (2 points)

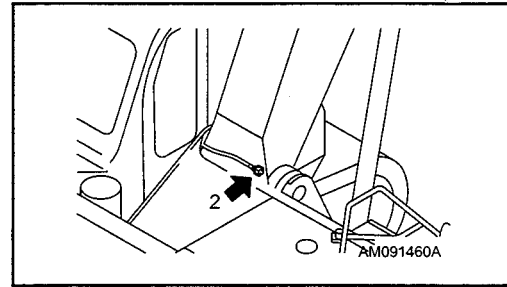

3. Boom cylinder rod pin (2 points)


4. Arm cylinder foot pin (1 point)

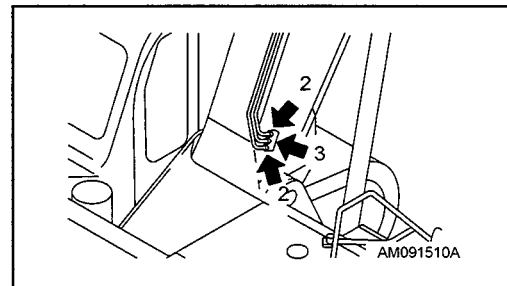

5. Boom-Arm coupling pin (1 point)


6. Arm cylinder rod end (1 point)

7. Bucket cylinder foot pin (1 point)

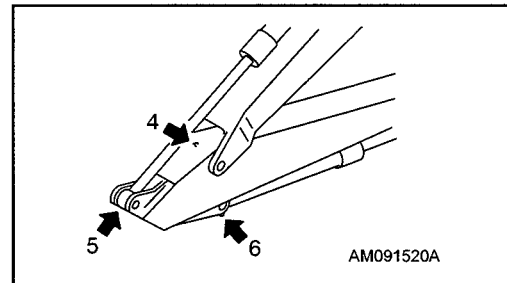

8. Arm-link coupling pin (1 point)


9. Arm-bucket coupling pin (1 point)

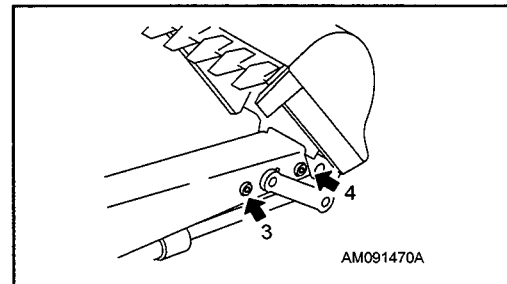

10. Link coupling pin (2 points)

11. Bucket cylinder rod end (1 point)

12. Bucket-Link coupling pin (1 point)

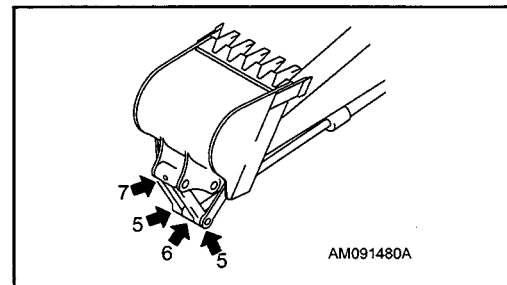

## CHECK OIL LEVEL IN SWING MACHINERY CASE, ADD OIL


### **▲ WARNING**

The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before carrying out this check.

1. Remove dipstick (G) and wipe the oil from the dipstick with a cloth.
2. Insert dipstick (G) fully in the guide.
3. When dipstick (G) is pulled out, if the oil level is between the H and L marks of the gauge, oil level is correct.
4. If the oil does not reach the L mark (F) on dipstick (G), add engine oil through dipstick insertion hole (F). When refilling, remove bleeding plug (1).


For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.

5. If the oil level exceeds the H mark on the dipstick, loosen drain plug (P) to drain the excess oil.
6. After checking oil level or adding oil, insert the dipstick into the hole and install air bleeding plug (1).

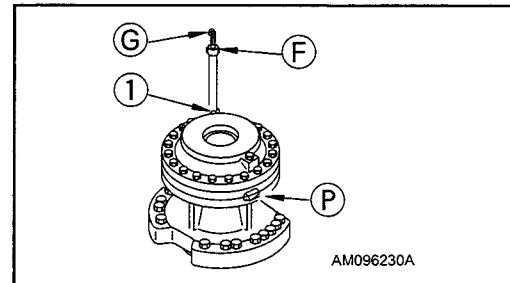

## DRAIN WATER AND SEDIMENT FROM FUEL TANK

1. Carry out this procedure before operating the machine.
2. Prepare a container to catch the fuel that is drained.
3. Open valve (1) at the bottom of the tank and drain the sediment and water that has accumulated at the bottom together with fuel. When doing this, be careful not to get fuel on yourself.
4. When only clean fuel comes out, close drain valve (1).

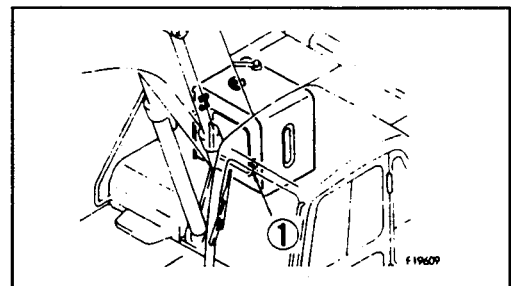

### NOTICE

Never use trichlene for washing the inside of the tank.





## CLEAN FRESH AIR INTAKE FILTER

### NOTICE

The normal cleaning interval is 100 hours, however if the machine is used at a dusty side, shorten this interval.

### Clean recirculation air filter (air conditioner option only.)

1. Remove 4 bolts on the upper side of the luggage tray and remove bracket (1).
2. Remove 4 bolts on the lower side and lift away luggage tray (2). If radio is fitted, disconnect radio connector first by removing radio (using special tools provided).
3. Pull filter elements (3) out of air conditioner housing.
4. Clean as fresh air intake filter (note recirculation air filter is homogenous and can be fitted in either direction).
5. Re-install.

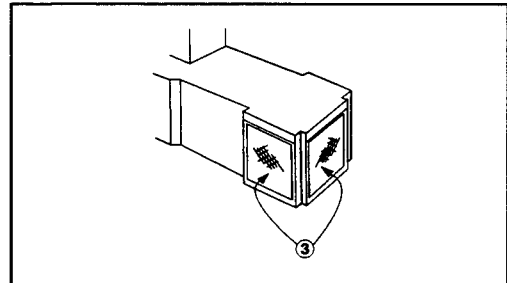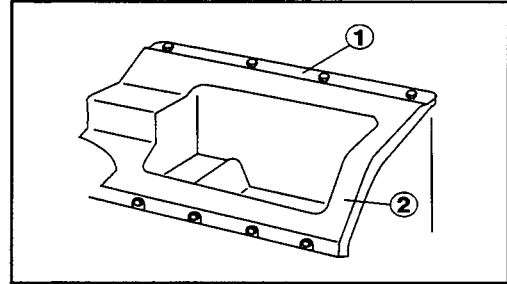

## EVERY 250 HOURS SERVICE

### CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL


#### **▲ WARNING**

- The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before starting the operation.
- If there is still pressure remaining inside the case, the oil or plug may fly out.  
Loosen the plug slowly to release the pressure.

- Prepare a handle.
1. Set the TOP mark at the top, with the TOP mark and plug (P) perpendicular to the ground surface.
  2. Remove plug (F) using the handle. When the oil level reaches a point 10 mm below the bottom of the plug hole, the correct amount of oil has been added.
  3. If the oil level is too low, install plug (F), operate the travel levers, and drive forward or in reverse to rotate the sprocket one turn. Then repeat Step 2 to check again.
  4. If the oil is still low, add engine oil through the hole in plug (F) until the oil overflows.

**For details of the oils to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**

5. After checking, install plug (F).

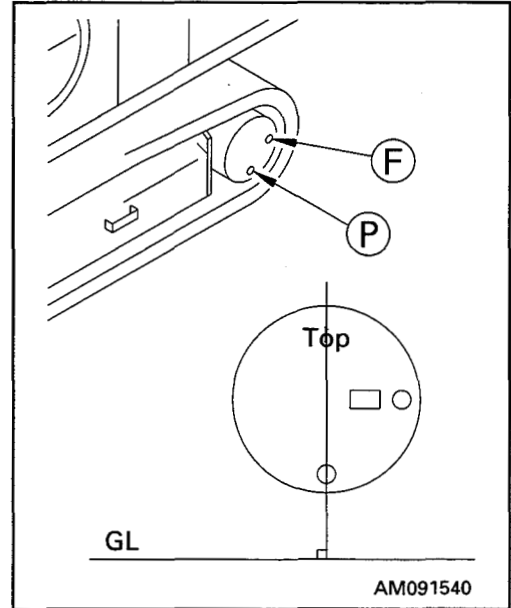


### CHECK LEVEL OF BATTERY ELECTROLYTE

- ⚠ WARNING**
- To avoid gas explosions, do not bring fire or sparks near the battery.
  - Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with large amounts of water, and consult a doctor.

Carry out this check before operating the machine.



1. Open the battery box cover on the right side of the machine.
2. Remove caps (1), and check that the electrolyte is at the specified level (10 to 12 mm) above the plates. If the electrolyte level is low, add distilled water to the specified level. If the battery electrolyte is spilled, have dilute sulphuric acid added.
3. Clean the air hole in the battery caps, then tighten the caps securely.

When adding distilled water in cold weather, add it before starting operations in the morning to prevent the electrolyte from freezing.

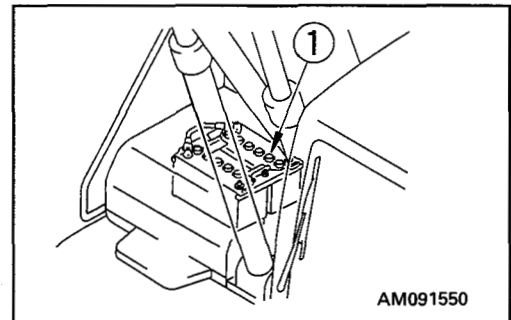

**LUBRICATE SWING CIRCLE (2 POINTS)**


1. Lower the work equipment to the ground.
2. Using a grease gun, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off all the old grease that was pushed out.

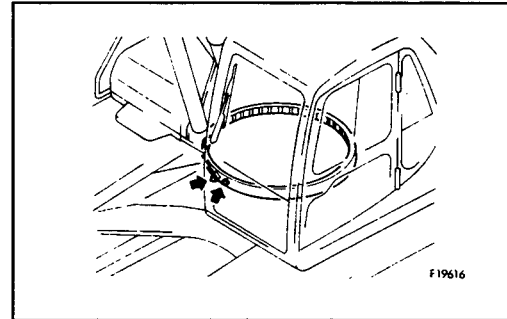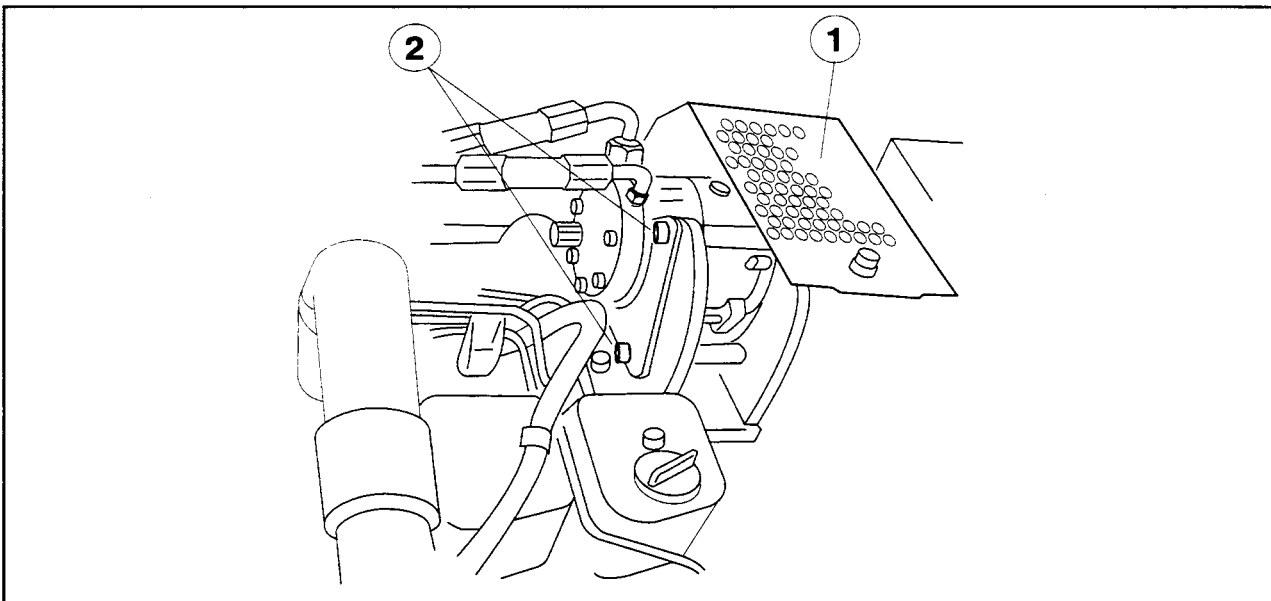**CHECK AIR CONDITIONER COMPRESSOR BELT TENSION ADJUST.****CHECKING**

1. Remove belt guard (1)
2. Press compressor drive belt midway between fan pulley and compressor pulley. The belt should normally deflect by about 15 - 18 mm when pressed with the finger (with a force of approx. 6 kg)

**ADJUSTING**

1. Loosen two nuts and bolts (1)
2. Carefully lever compressor housing as shown to tighten belt to within tightness criteria. Tighten lower bolt to hold in position.
3. Tighten upper bolt.

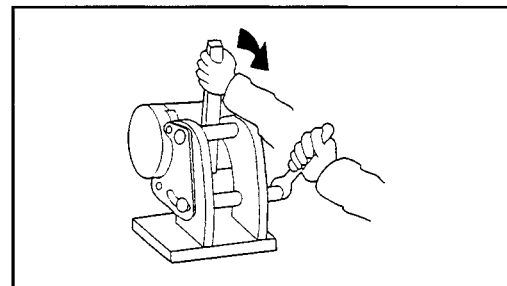

4. Check each pulley for damage, wear of the v-groove and wear of the v-bolt. In particular, be sure to check the v-belt is not touching the bottom of the v-groove.
5. Replace belt if it has stretched, leaving no allowance for adjustment, or if there is a cut or crack on belt.
6. Refit belt guard.
7. When the new belt is set, readjust it after operating for one hour.

## EVERY 500 HOURS SERVICE

Maintenance for every 50, 100 and 250 hours service should be carried out at the same time.

### REPLACE FUEL FILTER CARTRIDGE

#### **⚠ WARNING**

- Engine is at high temperature immediately after the machine has been operated. Wait for engine to cool down before replacing the filter.
- Do not bring fire or sparks near the fuel.
- When cranking the engine, confirm the safety around the engine, as the engine may start.

Prepare a filter wrench and a container to catch the fuel.

1. Set the container to catch the fuel under the filter cartridge.
2. Using a filter wrench, turn primary fuel filter cartridge (1) counterclockwise to remove it. Repeat for secondary fuel filter cartridge (2)
3. Clean the filter holder, fill a new filter cartridge with clean fuel, coat the packing surface with engine oil, then install it to the filter holder.
4. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it up 1/2 of a turn.

If the filter cartridge is tightened too far, the packing will be damaged and this will lead to leakage of fuel. If the filter cartridge is too loose, fuel will also leak from the packing, so always tighten to the correct amount.

After replacing the fuel filter cartridge, bleed the air from the system.



5. After replacing filter cartridge, bleed the air  
bleed the air according to the following procedures.

### BLEEDING THE FUEL SYSTEM

Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the filters or injection pump supply line will be vented automatically, if the fuel filter is changed in accordance with the instructions.


However, manual bleeding will be required if :

- The fuel filter is not filled prior to installation.
- Injection pump is replaced.
- High pressure fuel lines are replaced.

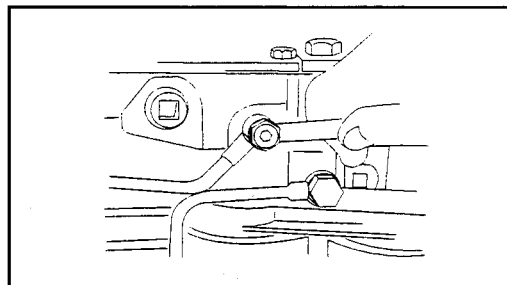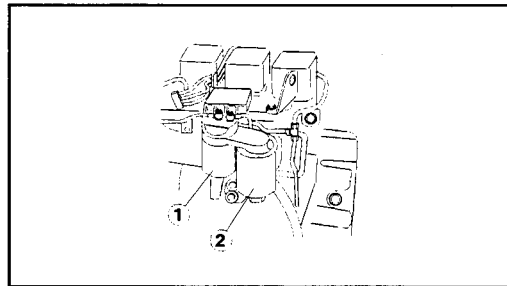

**VENTING THE LOW PRESSURE LINES AND FUEL FILTER**

1. Open the bleed screw. (wrench size: 10 mm.)
2. Operate the hand lever until the fuel flowing from the fitting is free of air.  
Tighten the bleed screw to 9 N.m.
3. Air/fuel can be pumped from this location with the hand lever on the lift pump if the fuel solenoid valve is energised.
4. Air can be vented from both pumps through the fuel drain manifold line by operating the starting motor.  
When using the starting motor to vent the system, do not engage it for more than 30 seconds at a time: wait two (2) minutes between engagements.

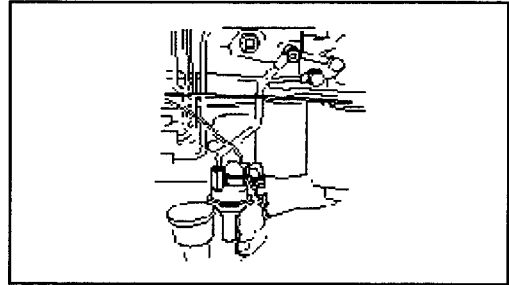


---

**⚠ WARNING**


---

It is necessary to put the engine in the "RUN" position. Because the engine may start, be sure to follow all the safety precautions. Use the normal starting procedure.

---

**VENTING THE HIGH PRESSURE LINES**

Loosen the fittings at the injectors, and crank the engine to allow entrapped air to bleed from the lines. Tighten the fittings to 30 N.m. (wrench size: 17 mm.)


---

**⚠ CAUTION**


---

High pressure could cause penetration of the skin.

---

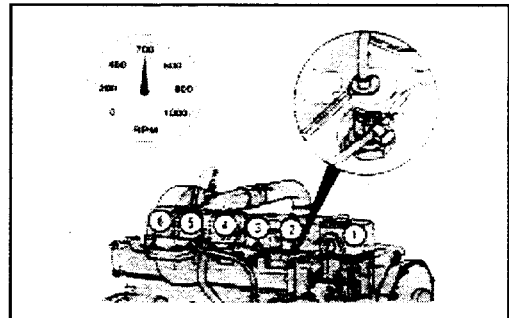


---

**⚠ WARNING**


---


Do not bleed a hot engine as this could cause fuel to spill onto a hot exhaust manifold creating a danger of fire. Start the engine and vent one line at a time until the engine runs smoothly.

---

## CHECK SWING PINION GREASE LEVEL, ADD GREASE

Prepare a scale.

1. Remove bolts (1) (2 bolts) on the top of the revolving frame and remove cover (2).
2. Insert a scale into the grease and check that the height of the grease in the portion where the pinion passes is at least 28 mm. Add more grease if necessary.
3. Check if the grease is milky white. If it is milky white, it is necessary to change the grease. Please contact your Komatsu distributor.
  - The total amount of grease is 21 l
4. Install cover (2) with bolts (1).

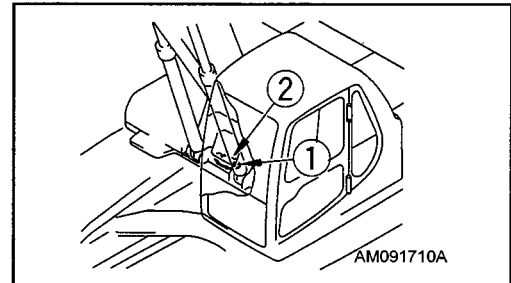

## CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE

### WARNING



The oil is at high temperature after the engine has been operated, so never change the oil immediately after finishing operations. Wait for the oil to cool down before changing it.

Prepare the following

- Container to catch drained oil: Min 24 l capacity
  - Refill capacity: 24 l
  - Filter wrench
1. Place a drain container under drain tap (P) located on the bottom of the machine.
  2. Loosen drain tap (P) slowly to avoid getting oil on yourself, and drain the oil.
  3. Check the drained oil, and if there are excessive metal particles or foreign material, please contact your Komatsu distributor.
  4. Install drain tap (P)
  5. Open the engine hood. Using the filter wrench from the upper side of the engine, turn filter cartridge (2) counterclockwise to remove it.

In particular, if this operation is carried out immediately after stopping the engine, a large amount of oil will come out, so wait for 10 minutes before starting the operation.

6. Clean the filter holder, coat the packing surface of a new filter cartridge with engine oil, and fill the filters with clean lubricat-

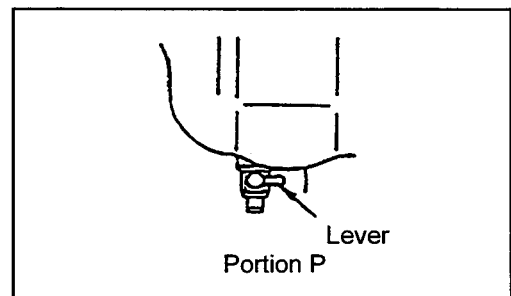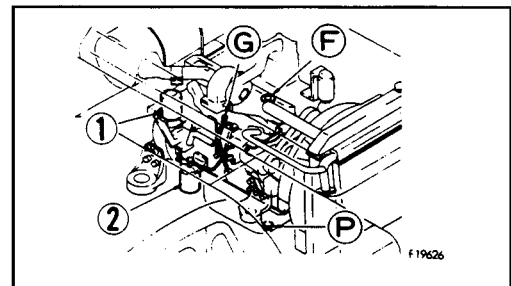

ing oil (or coat it thinly with grease), then install it to the filter holder.

**REMARK**

Confirm that no remnants of old packing still adhere to the filter holder as this may result in oil leakage.

7. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it up further 3/4 of a turn.
8. After replacing the filter cartridge, add engine oil through oil filler (F) until the oil level is between the H and L marks on dipstick (G).

**For details of the oil to use, "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165**

9. Run the engine at idling for a short time, then stop the engine, and check that the oil level is between the H and L marks on the dipstick.

**For details, see "CHECK BEFORE STARTING" on page 190**

**NOTICE**


Replace once every 6 months, regardless of the number of hours operated.

### **CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS AND CONDENSER FINS (ONLY FOR MACHINES EQUIPPED WITH AIR CONDITIONER)**

**▲ WARNING**

**If compressed air, steam, or water hit your body directly, there is danger of injury. Always wear protective glasses, mask, and safety shoes.**

1. Open the engine hood and rear door on the left side of the machine. Loosen bolts (1) and remove the radiator front cover.
2. Blow off mud, dust or leaves clogging the radiator fins and oil cooler fins using compressed air.  
At the same time, clean the net in front of the oil cooler. Clean the condenser fins on machines equipped with the air conditioner. The condenser is mounted on the front of the cooling package.  
Steam or water may be used instead of compressed air. After cleaning, fix the cover with bolts (1)
3. Check the rubber hose. Replace with a new one if the hose is found to have cracks or to be hardened by ageing.  
Further, check hose clamps for looseness.

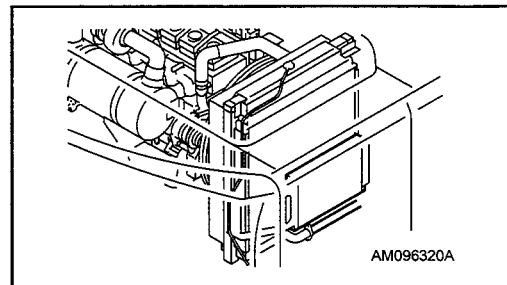



**NOTICE**

To prevent damage to the fins, apply compressed air from an appropriate distance. Damaged fins may cause water leakage or overheating. In a dusty site, check the fins daily, irrespective of the maintenance interval.

**REPLACE HYDRAULIC TANK BREATHER ELEMENT**


---



**WARNING**


---

Replace the element when the oil is cold.  
When removing the oil filler cap, turn it slowly to release the internal pressure before removing it.

---

1. Remove the cap of oil filter (F) at the top of the hydraulic tank.
2. Replace element (1) inside the cap with a new one.

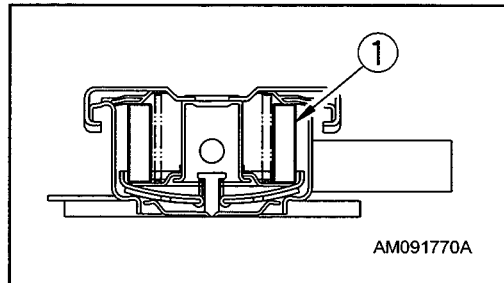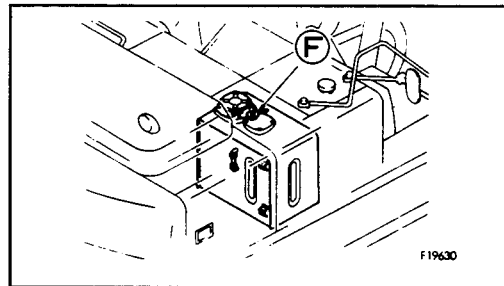**REPLACE HYDRAULIC FILTER ELEMENT**


---


**WARNING**


---


When removing the oil filler cap, turn it slowly to release the internal pressure before removing it.

---

1. Remove the cap from oil filler (F), and release the internal pressure.
2. Loosen 4 bolts, then remove cover (1).  
When doing this, the cover may fly out under the force of spring (2), so hold the cover down when removing the bolts.
3. After removing spring (2) and valve (3) take out element (4).
4. Clean the removed parts in diesel oil.

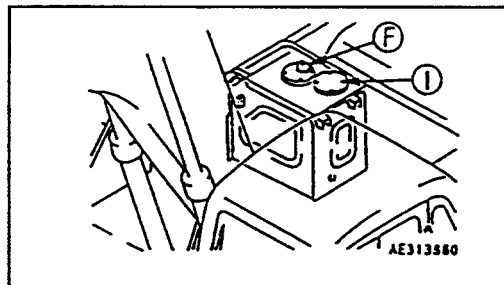

5. Install a new element in the place where old element (4) was installed.
6. Set valve (3) and spring (2) on top of the element.
7. Set cover (1) in position, push it down by hand, and install the cover with the mounting bolts.
8. Screw in the oil filler cap and install the cover.

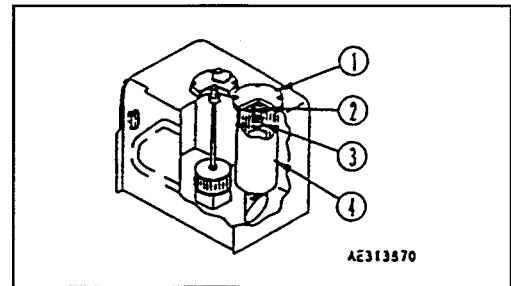

To bleed the air, start the engine according to “STARTING ENGINE” on page 102 and run the engine at low idling for 10 minutes.

9. Stop the engine.


**REMARK**

Operate the machine after halting for more than 5 minutes to eliminate bubbles in the oil inside the tank.

10. Check for oil leakage and wipe off any spilled oil.

When the hydraulic breaker is installed, the hydraulic oil deteriorates earlier than in normal bucket digging work.

The first element replacement should be at 100 to 150 hours for new machines. Thereafter, replace the element according to the table on the right.

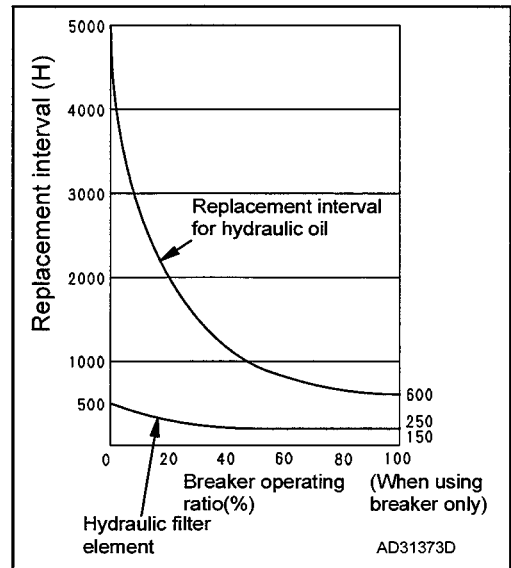

## EVERY 1000 HOURS SERVICE


Maintenance for every 50, 100, 250 and 500 hours should be carried out at the same time.

### CHANGE OIL IN SWING MACHINERY CASE

#### **▲ WARNING**

The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before carrying out maintenance.

- Container to catch drained oil: Min. 6.8 l capacity.
  - Refill capacity: 6.8 l
1. Set an oil container under drain plug (P) under the machine body.
  2. Loosen drain valve (P) under the body, drain the oil, then tighten the drain valve again.
  3. Remove dipstick (G) and bleeding plug (1).  
Add the specified amount of engine oil through gauge hole (F).
- For details of the oil to use, see “USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE” on page 165.**
4. After refilling, install bleeding plug (1).
  5. Wipe off oil on the dipstick with a cloth.
  6. Insert dipstick (G) into the gauge pipe thoroughly and then pull it out again.
  7. When the oil level is between the H and L marks, on dipstick (G), it is normal. If the oil does not reach the L mark, add more oil through oil filler (F).
  8. If the oil level exceeds the (H) mark, drain the excess engine oil from drain plug (P), and check the oil level again.

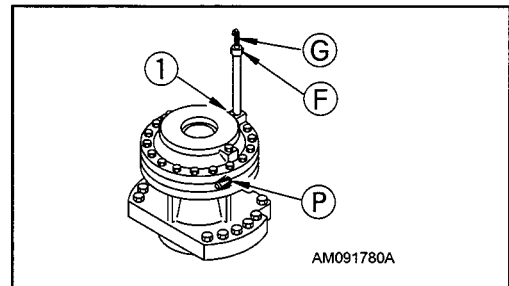

## CHECK OIL LEVEL IN DAMPER CASE, ADD OIL

### **WARNING**

The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before carrying out maintenance.

### NOTICE

Park the machine on flat ground and stop the engine. After waiting for more than 30 minutes after stopping the engine, check the oil level.

1. Open the door on the left side of the machine.
2. Remove plug (G) and check the oil level. If the oil is up to near the bottom of the plug hole, it is normal. If insufficient, remove the plug (F) and add oil through the hole of plug F up to the bottom of the plug hole (G).

For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.

### NOTICE

If excess oil is supplied, drain it to the specified amount to avoid overheating.


3. Install plug (G) and (F)
4. Close the door.

## CHECK ALL TIGHTENING PARTS OF TURBOCHARGER

Contact your Komatsu distributor to have the tightening portions checked.

## CHECK PLAY OF TURBOCHARGER ROTOR

Ask Komatsu distributor to check the play of the turbocharger rotor.

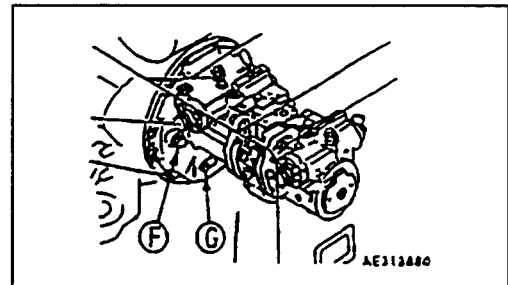

## CHECK FAN BELT TENSIONER BEARING BELT AND FAN HUB.

### Check fan belt

Remove the drive belt by lifting tensioner using a 3/8 inch square drive wrench to release the tension.

Inspect the belt for damage.

Replace belt if any damage is found.

- Check tensioner bearing  
With the fan belt removed rotate fan hub.  
The tensioner pulley should spin freely with no rough spots defected under hand pressure.
- Check the tensioner bearing.
- Replace bearing if damaged.
- Check fan hub. With the drive belt removed, rotate fan hub.

The fan hub should spin freely without excessive end play.

- Check the fan hub bearing.
- Replace bearing if damaged.


## CHECK FAN BELT TENSION

Measure the belt deflection at the longest span of the belt.

Maximum deflection: 9.5-12,7 mm

**If tension is low (deflection is outside range): (see 24.7.6. "Check fan belt tensioner bearing, belt and fan hub.")**

- Check belt & replace if damaged
- Check tensioner & replace if damaged

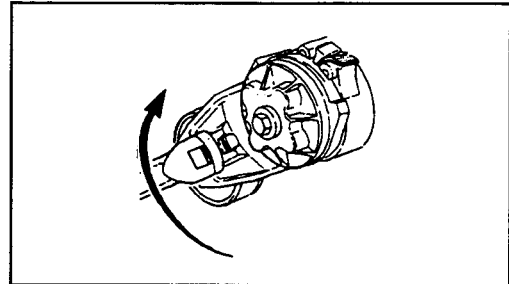

## EVERY 2000 HOURS SERVICE

Maintenance for every 50, 100, 250, 500 and 1000 hours should be carried out at the same time.

### CHANGE OIL IN FINAL DRIVE CASE

#### **WARNING**

- The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before carrying out maintenance.
- If there is still pressure remaining inside the case, the oil or plug may fly out.  
Loosen the plug slowly to release the pressure.

Prepare the following.

- Container to catch drained oil: Min. 4.2 l capacity
  - Refill capacity: 4.2 l
  - Handle
1. Set the TOP mark at the top, with the TOP mark and plug (P) perpendicular to the ground surface.
  2. Set a container under plug (P) to catch the oil.
  3. Remove plug (P) and (F) with the handle and drain the oil.


#### REMARK

Check the O-rings in the plugs for damage. If necessary, replace with new ones.

4. Screw in plug (P).
5. Add engine oil through the hole of plug (F).

**For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**

6. When the oil overflows from the hole of plug (F), install plug (F). Tightening torque of plugs P and F:  $70 \pm 10\text{Nm}$ .

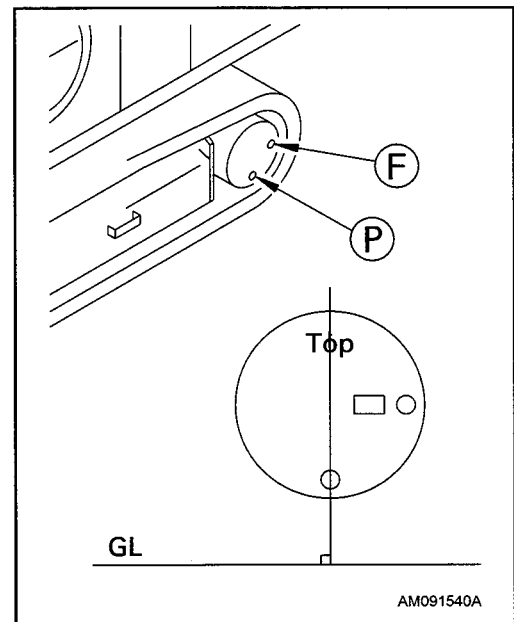


## CLEAN HYDRAULIC TANK STRAINER

### **▲ WARNING**

The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before changing the oil. When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it carefully.

1. Remove 4 bolts, then remove cover (1). When doing this, cover (1) may fly off because of the force of spring (2), so keep the cover pushed down when removing the bolts.
2. Hold the top of rod (3) and pull up to remove spring (2) and strainer (4).
3. Remove any dirt stuck to strainer (4), then wash in clean diesel oil or flushing oil. If strainer (4) is broken, replace it with a new part.
4. When installing, insert strainer (4) into protruding part (5) of the tank, and assemble.
5. Tighten the bolts to install cover (1).

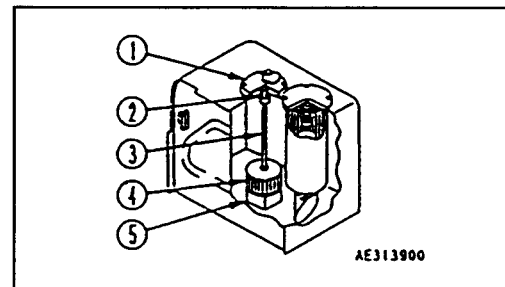

## CLEAN, CHECK TURBOCHARGER

Contact your Komatsu distributor for cleaning or inspection.

## CHECK ALTERNATOR, STARTING MOTOR

The brush may be worn, or the bearing may have run out of grease, so contact your Komatsu distributor for inspection or repair. If the engine is started frequently, carry out inspection every 1000 hours.

## CHECK ENGINE VALVE CLEARANCE, ADJUST

As special tool is required for removing and adjusting the parts, you shall request Komatsu distributor for service.


## CHECK VIBRATION DAMPER

Check that there are no cracks or peeling in the outside surface of the rubber (1).

If any cracks or peeling are found, contact your Komatsu distributor to have the parts replaced.

## CHANGE ANTI FREEZE

Follow the procedure of "CLEAN INSIDE OF COOLING SYSTEM" on page 180 for draining and refilling the cooling system.

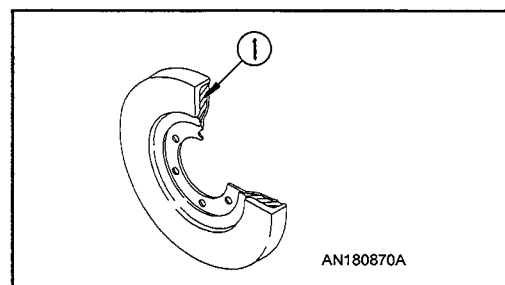

## CHECK AND ADJUST VALVE CLEARANCE

Follow the procedure of "check and adjust valve clearance"

## EVERY 4000 HOURS SERVICE

Maintenance for every 50, 100, 250, 500, 1000 and 2000 hours service should be carried out at the same time.

## CHECK WATER PUMP

Check that there is oil leakage, or clogging of the drain hole. If any abnormality is found, contact your Komatsu distributor for disassembly and repair or replacement.

## EVERY 5000 HOURS SERVICE

Maintenance for every 50, 100, 250, 500 and 1000 hours service should be carried out at the same time.


## CHANGE OIL IN HYDRAULIC TANK

### **WARNING**

The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before changing the oil. When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it carefully.


Prepare the following

- Container to catch drained oil: min. 166 capacity
  - Refill, capacity: 166 l
  - Prepare a handle for the socket wrench set.
1. Swing so that the drain plug at the bottom of the hydraulic tank is in the middle between the left and right tracks.
  2. Retract the arm and bucket cylinders to the end of the stroke, then lower the boom and put the teeth in contact with the ground.

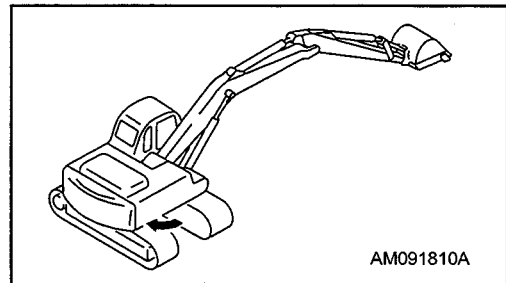



3. Set the safety lock lever to the LOCK position and stop the engine.
4. Remove the cap of oil filler port (F) at the top of the hydraulic tank.
5. Set a container immediately under the drain plug under the machine body to catch the oil that is drained. Using the handle, remove drain plug (P) and drain the oil. Check the O-ring installed to plug (P), and if it is damaged, replace the O-ring. After draining the oil, tighten drain plug (P).  
Tightening torque:  $69 \pm 10 \text{ Nm}$  ( $7 \pm 1 \text{ kgm}$ ).

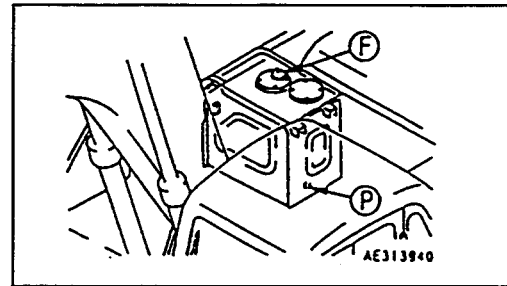

Take care not to get oil on yourself when remove drain plug (P).

6. Add the specified amount of engine oil through oil filler port (F). Check that the oil level is between H and L on the sight gauge.

**For details of the oil to use, see "USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE" on page 165.**


**NOTICE**

**When the hydraulic breaker is installed, the hydraulic oil deteriorates earlier than in normal bucket digging work. Therefore, replace the hydraulic oil according to the chart at the right.**

7. After replacing hydraulic oil and cleaning or replacing filter element and strainer, bleed air from the circuit according to the following procedure.


**Procedure for bleeding air**

Bleed the air from the various components in the order below (1-7).

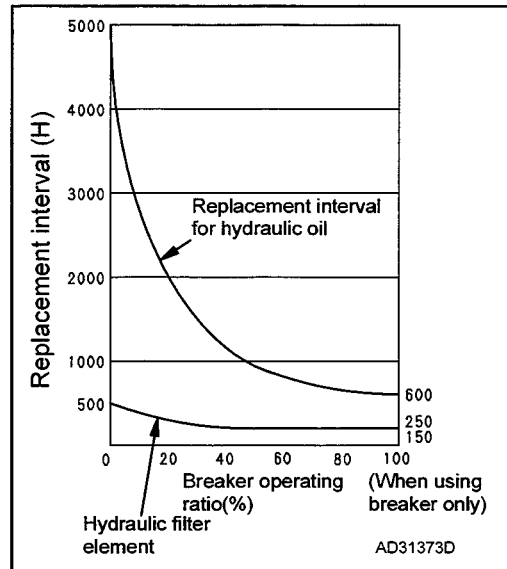

**Bleeding air from pump**

1. Loosen air bleeding plug (1), and check that oil oozes out from the air bleed plug.
2. If no oil oozes out, remove the drain hose from the pump case, and add hydraulic oil through drain port (2) to fill the pump case. Oil will come out when the drain hose is removed, so secure the hose mouthpiece at a position higher than the level of the oil in the hydraulic tank.
3. After completing the air bleed operation, tighten air bleeding plug (1), then install the drain hose.

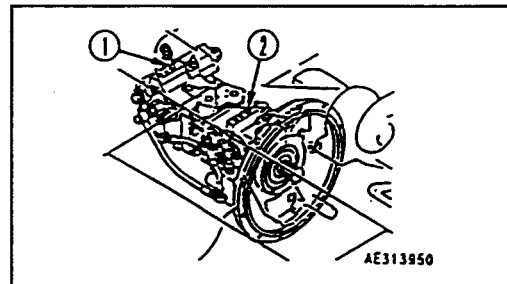

**NOTICE**

- If the drain hose is installed first, oil will spurt out from the hole of plug (1).
- If the pump is operated without filling the pump case with hydraulic oil, abnormal heat will be generated and this may lead to premature damage of the pump.

**Starting engine**

Start the engine according to "STARTING ENGINE" on page 102. Keep running the engine at low idling for 10 minutes, and carry out the following procedure.

**Bleeding air from cylinders**

1. Run the engine at low idling, and extend and retract each cylinder 4-5 times. Do not operate the cylinder to the end of its stroke. Stop at a point approx. 100 mm before the end of the stroke.
2. Next, operate each cylinder to the end of its stroke 3-4 times.
3. After this, operate each cylinder 4-5 times to the end of its stroke to completely bleed the air.

**NOTICE**

If the engine is run immediately at high speed or the cylinder is operated to the end of its stroke, the air inside the cylinder may cause damage to the piston packing.

**Bleeding air from swing motor**

1. Run the engine idle at a low speed for about five minutes, then loosen drain port plug (1) and confirm that oil flows out.


**NOTICE**

When doing this, do not operate the swing.

2. If oil does not flow out, stop the engine and fill the motor case with hydraulic oil through drain port plug (1).
3. After completion of the air bleed operation, tighten drain port plug (1).
4. Run the engine at low idling, and swing the upper structure at least 2 times uniformly to the left and right.

**NOTICE**



If the air is not bled from the swing motor, the bearings of the motor may be damaged.

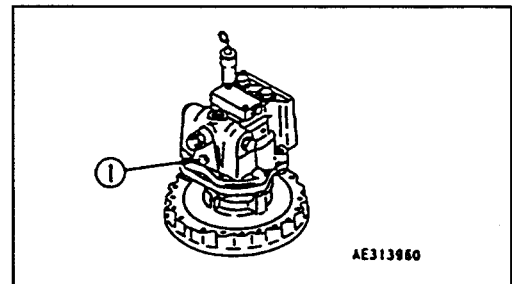

**Bleeding air from travel motor.**

(Carry out this operation only when the oil in the travel motor case has been drained.)

1. Run the engine at low idling, loosen air bleed plug (1) and if oil flows out, tighten the air bleed plug.
2. Keep the engine running at low idling, and swing the upper structure 90° to bring the work equipment to the side of the track.
3. Use the work equipment to jack up the chassis so that the track comes slightly off the ground, then run the track under no load for 2 minutes. Carry out this operation on the left and right sides.

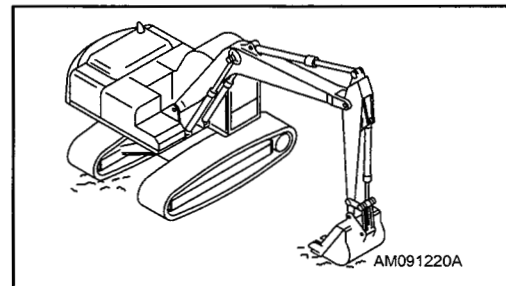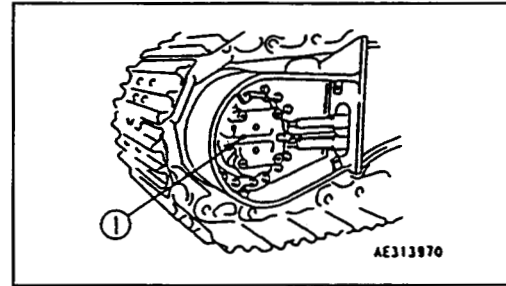**Bleeding air from attachment (hydraulic breaker, etc.)**

If a hydraulic breaker or any other attachment has been newly installed, run the engine at low idling and operate the equipment repeatedly (approx. 10 times) until the air has been bled from the attachment and circuit.

**NOTICE**

**If the method of bleeding the air from the attachment itself is specified by the manufacturer, bleed the air according to those specifications.**

**Operation**

1. After completing the air bleed, stop the engine, and wait for at least 5 minutes before starting operations. This will allow the bubbles in the oil inside the tank to escape.
2. Check that there is no leakage of oil, and wipe up any oil that has been spilled.

# **SPECIFICATIONS**

# SPECIFICATIONS

## PC210-6K, PC210LC-6K


		PC210-6K	PC210LC-6K
<b>WEIGHT</b>			
● Operation weight (without operator)		20,000 kg	21,200 kg
<b>PERFORMANCE</b>			
● Travel speed	Low speed	3.0 km/h	
	Middel speed	4.1 km/h	
	High speed	5.5 km/h	
● Swing speed		12.4 rpm	
<b>TRACK SHOE</b>			
● Tripple grouser shoe (standard)		600 mm width	700 mm width
<b>ENGINE</b>			
● Model		KOMATSU S6D102E Diesel engine	
● Flyweel horsepower		Net 99 kW (133 HP)/2000 RPM gross 104 kW(140 HP)/2000 RPM	
● Starting motor		24V 5.5 kW	
● Alternator		24V 55 A	
● Battery		STD 12 V 95 Ah x 2 pieces Large capacity (Option) 12V 140 Ahx 2 pieces	

**PC210-6K, PC210LC-6K**

The values given are the values for PC210-6K

[ ]: Values for PC210LC-6K.


In cases where are no values given in [ ], the values are the same as for PC210-6K.

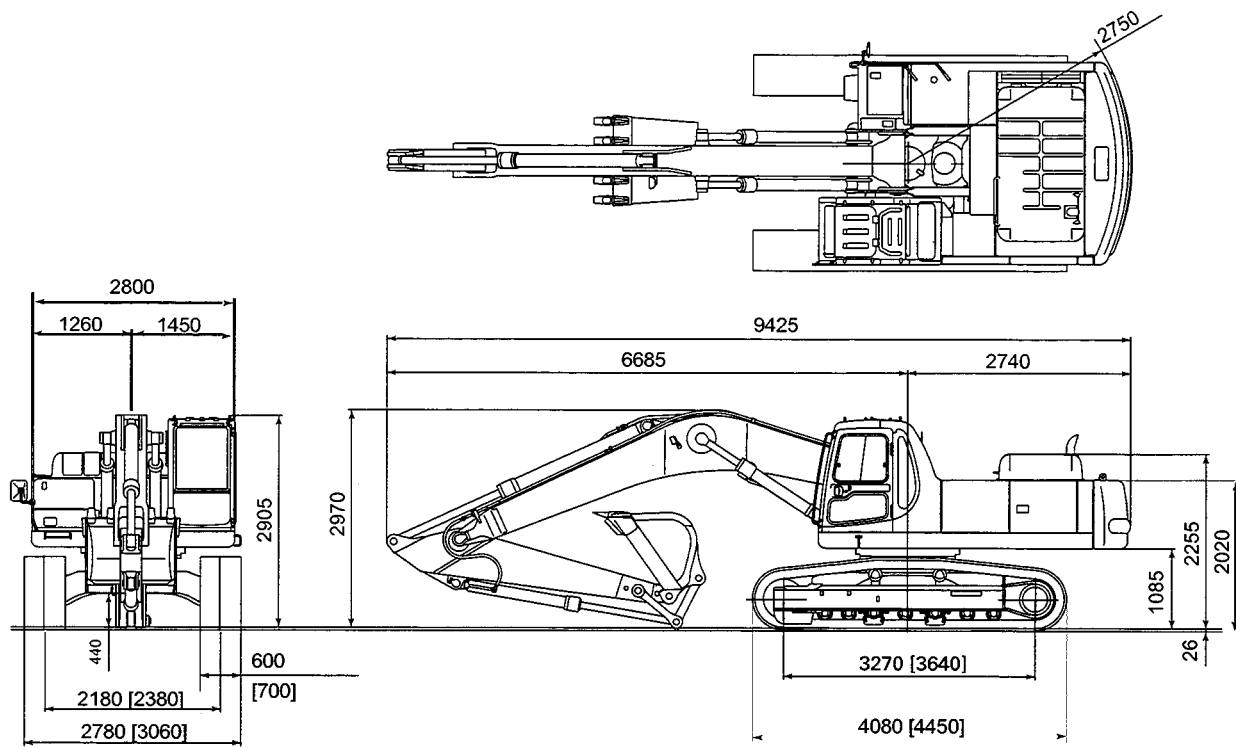

AMPC2106K


**PC210-6K, PC210LC-6K**

1. The mark \* indicates the dimensions for shovel operation.
2. Never allow other person than the operator to enter the swing range (Max. swing range, Max. digging radius).

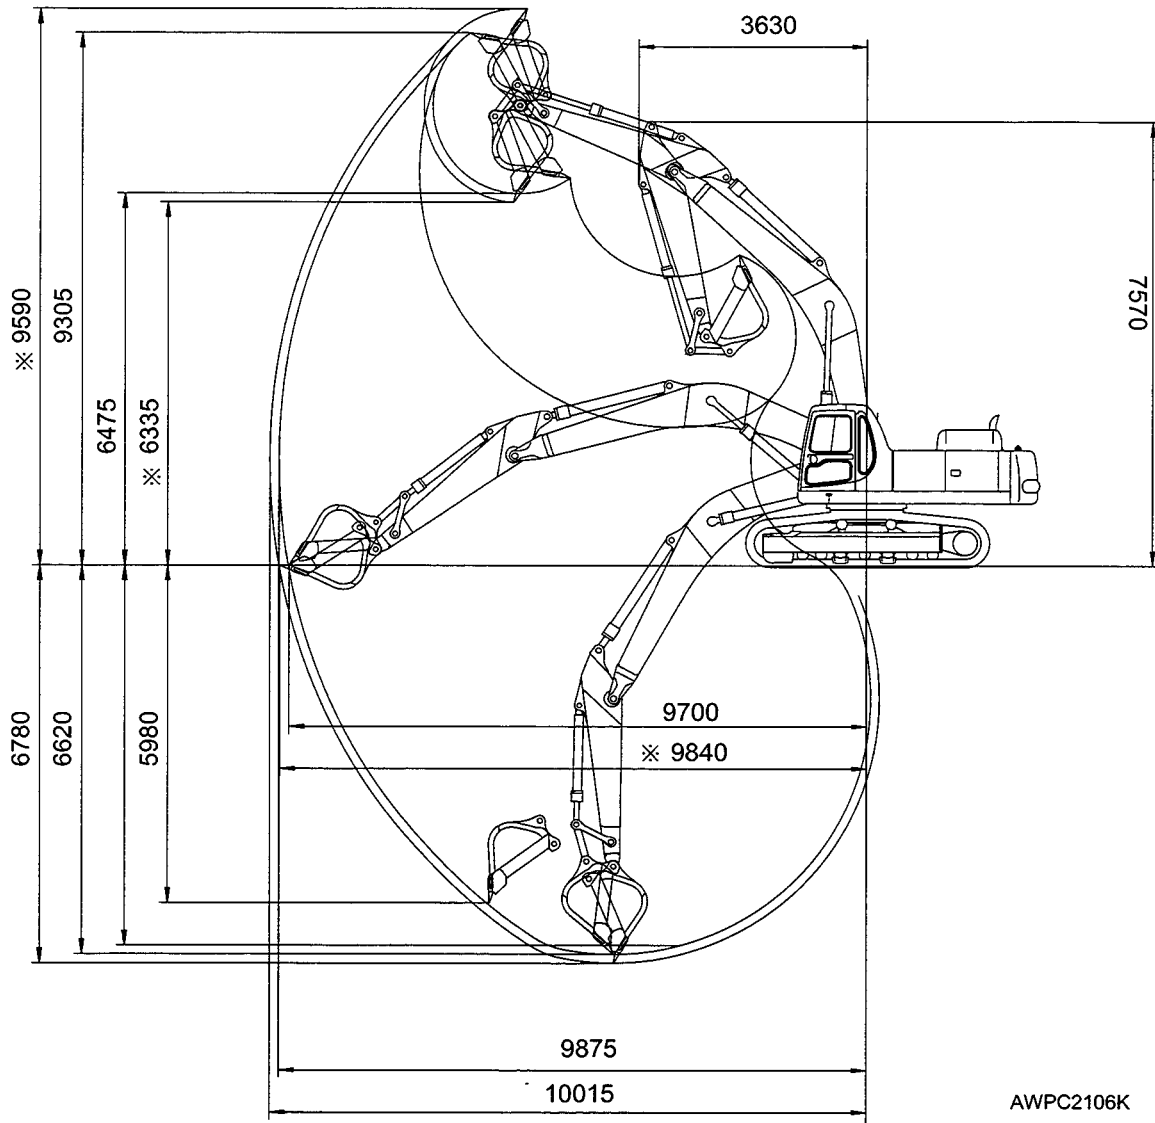

AWPC2106K

**PC210LC-6K straight boom**

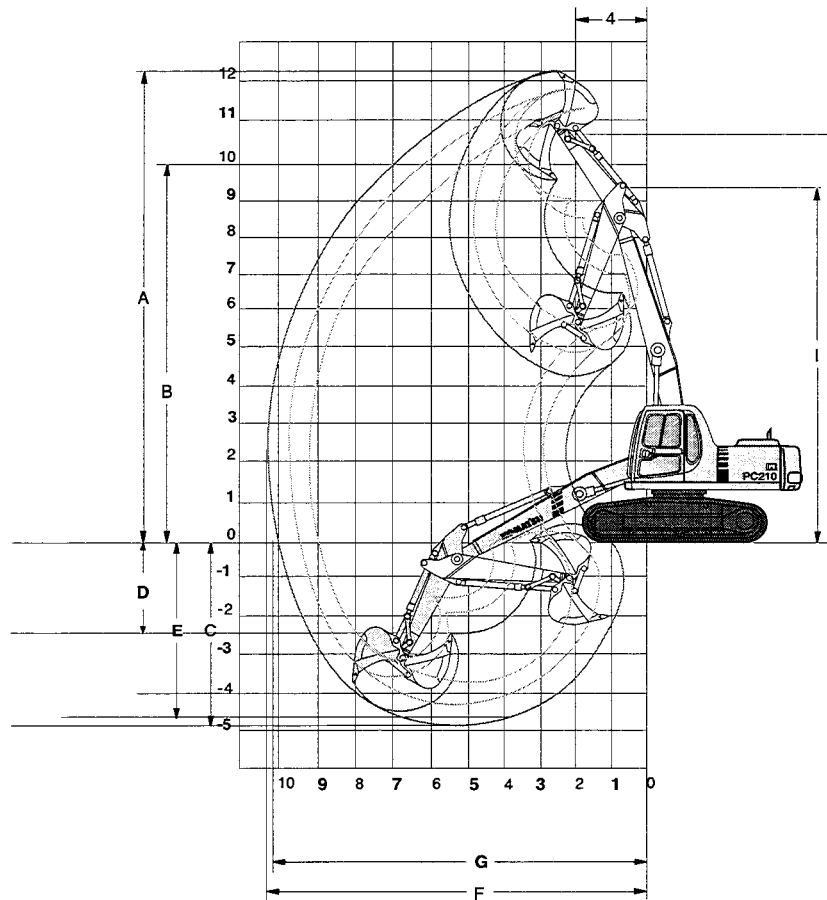

Working ranges		Arms	1800	2400	2930
A	Max. digging height	mm	11270	11780	12230
B	Max. dumping height	mm	8320	8840	9290
C	Max. digging depth	mm	3810	4420	4930
D	Max. vertical wall digging depth	mm	2430	2890	3230
E	Max. digging depth of cut for 2440 mm level	mm	3570	4220	4760
F	Max. digging reach	mm	9710	10280	10790
G	Max. digging reach at ground	mm	9530	10110	10620
H	Min. swing radius	mm	2420	3000	2890
I	Max. height of min. swing	mm	9270	9120	9100
J	Max. pin height	mm	9800	10300	10750
	Operating weight with 700 mm shoes	kg	20760	20800	20886
	Operating weight with 800 mm shoes	kg	21060	21100	21186
	Operating weight with 900 mm shoes	kg	21360	21400	21486



# SPECIFICATIONS

## PC240LC-6K, PC240NLC-6K


		PC240LC-6K	PC240NLC-6K
<b>WEIGHT</b>			
● Operation weight (without operator)		24.100 kg	23.700 kg
<b>PERFORMANCE</b>			
● Travel speed	Low speed	3.0 km/h	
	Middel speed	4.1 km/h	
	High speed	5.5 km/h	
● Swing speed		12.5 rpm	
<b>TRACK SHOE</b>			
● Tripple grouser shoe (standard)		700 mm width	600 mm width
<b>ENGINE</b>			
● Model		KOMATSU S6D102E Diesel engine	
● Flyweel horsepower		Net 118 kW (158 HP)/2000 RPM gross 124 kW(166 HP)/2000 RPM	
● Starting motor		24V 5.5 kW	
● Alternator		24V 55 A	
● Battery		STD 12 V 95 Ah x 2 pieces Large capacity (Option) 12V 140 Ahx 2 pieces	

**PC240NLC-6K, PC240LC-6K**

The values given are the values for PC240NLC-6K

[ ]: Values for PC240LC-6K.


In cases where are no values given in [ ], the values are the same as for PC240NLC-6K.

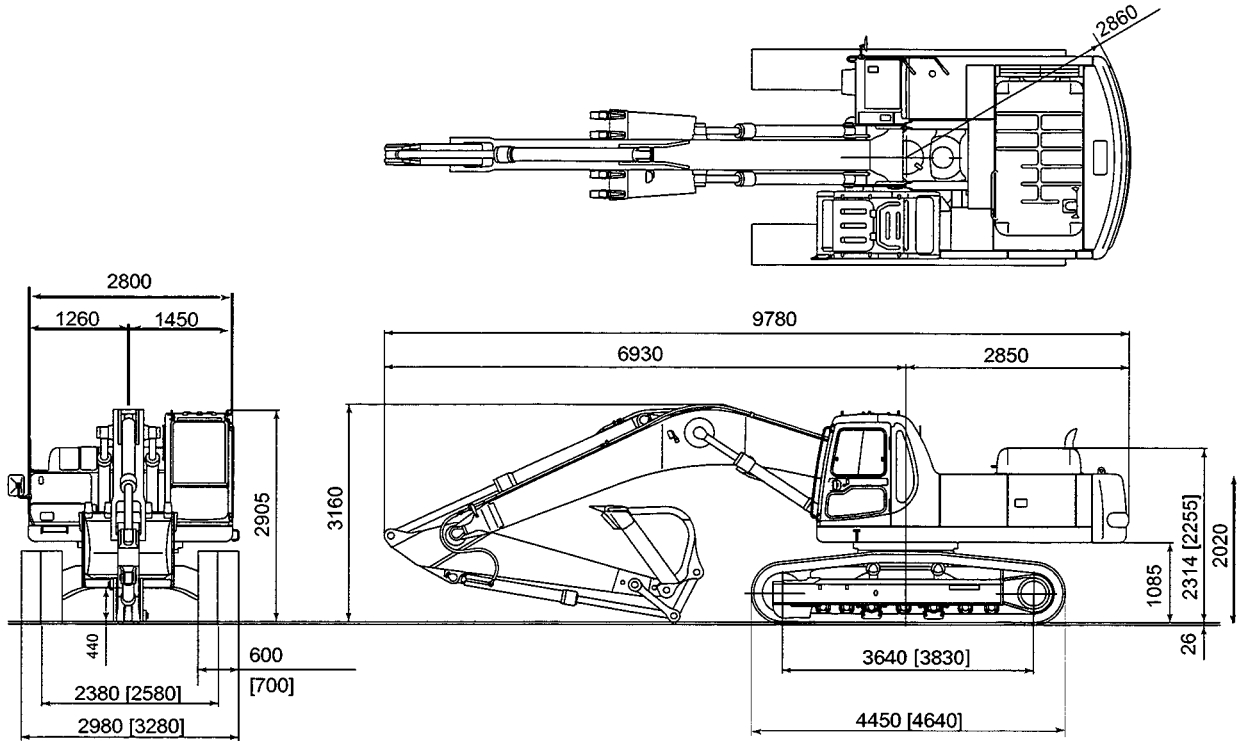

AMPC2406K

**PC240NLC-6K, PC240LC-6K**

1. The mark \* indicates the dimensions for shovel operation.
2. Never allow other person than the operator to enter the swing range (Max. swing range, Max. digging radius).

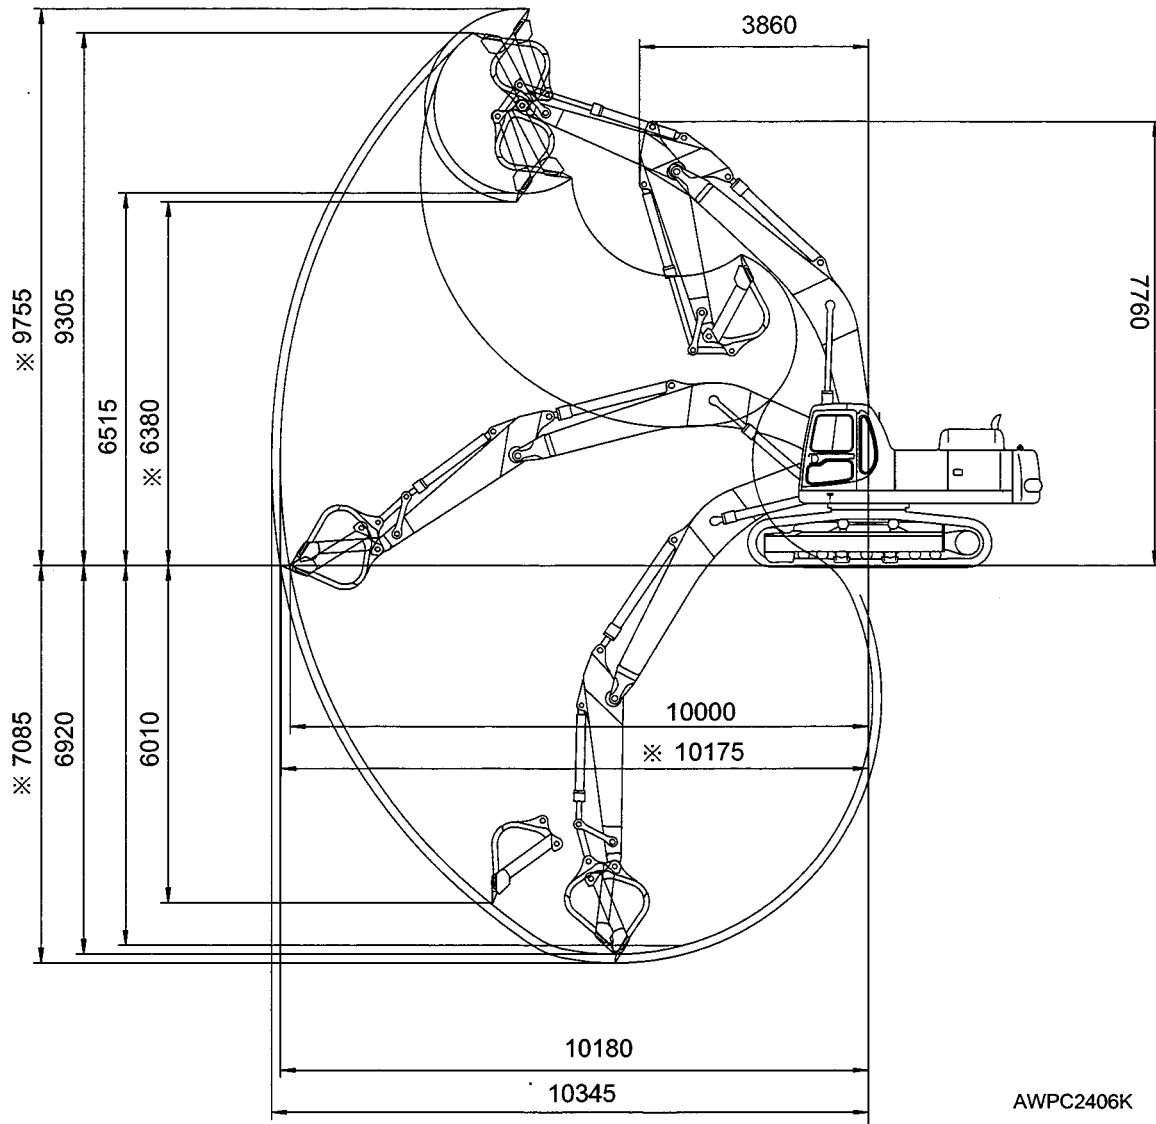

AWPC2406K

## EXPLANATION OF LIFTING CAPACITY CHART

### PC210-6K, PC210LC-6

#### LEGEND

A : Reach from swing centre

B : Bucket hook height

OF : Lifting capacity (rating overfront)

OS : Lifting capacity (rating overside)

#### LEGEND

(1) Position of lifting point

(2) Arm length:

(3) Boom length


(4) Hydraulic pressure: Nom 36.2 MPa WORKING

Max. 37.2 MPa HOLDING CIRCUIT

#### WORKING CONDITIONS:

- WITH BUCKET (0.9m<sup>3</sup> CECE),(680 kg)°
- IF OBJECT HANDLING IS PERFORMED WITH OTHER TOOL INSTALLED, THE WEIGHT DIFFERENCE OF THE TOOL SHALL BE DEDUCTED FROM THE VALUES OF THIS TABLE.
- WITH FULLY EXTENDED BUCKET CYLINDER.
- ON A COMPACT HORIZONTAL LEVEL GROUND.
- WITH 600 mm WIDTH SHOE.

Loads do not exceed 87% of hydraulic capacity or 75% of tipping capacity (\* load limited by hydraulic capacity rather than tipping).

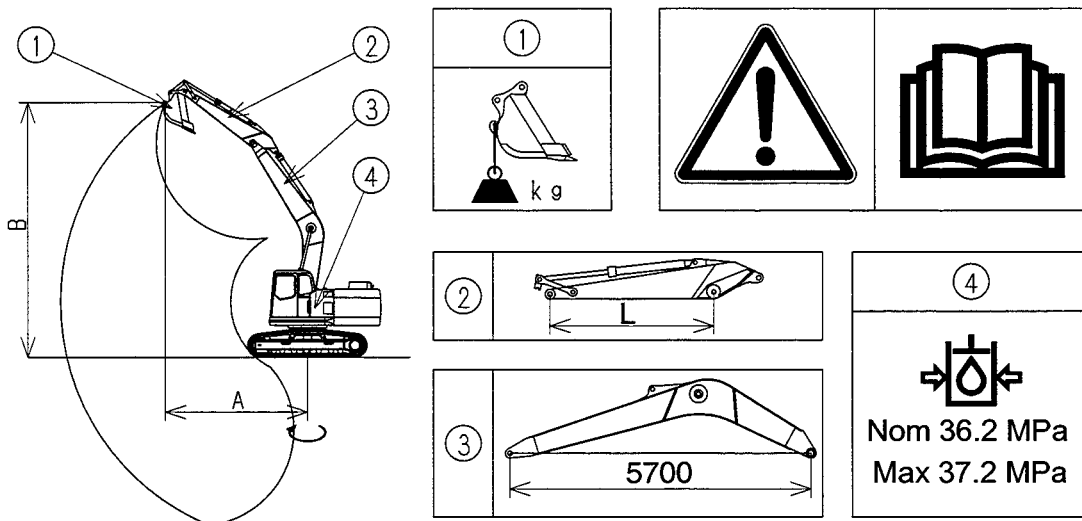

AW40000

Model	Arm	Height	max		7.5 m		6.0 m		4.5 m		3.0 m		1.5 m	
			OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS
PC210 Mono boom	2,9 m	6.0	* 2450	* 2450	* 3300	2750								
		4.5	* 2450	2150	* 4000	2700	* 4150	4100						
		3.0	* 2600	1900	4100	2600	* 5050	3850	* 6400	6150	* 10000	* 10000		
		1.5	* 2800	1850	3950	2450	5700	3600	* 8250	5550	* 5600	* 5600		
		0.0	3100	1850	3850	2350	5450	3350	8650	5200	* 6500	* 6500		
		-1.5	3350	2050	3800	2300	5300	3250	8450	5050	* 9550	* 9550	* 5700	* 5700
		-3.0	3950	2450			5350	3250	8500	5050	* 14050	9900	* 9200	* 9200
		-4.5	5500	3400			5500	3400	8700	5250	* 13050	10300		
	2,4 m	6.0	* 3850	2950			* 4100	* 4100						
		4.5	3800	2400	4150	2700	* 4650	4050						
		3.0	3450	2150	4050	2600	* 5500	3800	* 7150	5950				
		1.5	3350	2050	3950	2500	5650	3550	* 8900	5450				
		0.0	3400	2100	3850	2400	5450	3400	8600	5150				
		-1.5	3750	2350	3850	2350	5350	3300	8550	5100	* 10150	9900	* 6100	* 6100
		-3.0	4600	2850			5450	3350	8600	5150	* 14300	10100	* 10900	* 10900
		-4.5	* 6700	4300					* 8250	5400	* 11900	10550		
	1,8 m	6.0	* 4200	3350			* 4650	4050						
		4.5	4200	2700			* 5150	3900	* 6100	* 6100				
		3.0	3800	2400	4000	2500	5800	3700	* 7950	5750				
		1.5	3650	2300	3900	2450	5550	3500	8750	5300				
		0.0	3800	2350	3850	2400	5400	3350	8550	5100				
		-1.5	4300	2650			5400	3350	8550	5100	* 10950	* 10000		
		-3.0	5450	3400			5550	3450	8700	5250	* 13200	10300		
		-4.5												
PC210LC Mono boom	2,9 m	6.0	* 2450	* 2450	* 3300	3200								
		4.5	* 2450	* 2450	* 4000	3150	* 4150	* 4150						
		3.0	* 2600	2300	* 4450	3050	* 5050	4450	* 6400	* 6400	* 10000	* 10000		
		1.5	* 2800	2200	4850	2900	* 6050	4200	* 8250	6500	* 5600	* 5600		
		0.0	* 3200	2250	4700	2800	6750	3950	* 9550	6100	* 6500	* 6500		
		-1.5	* 3850	2450	4650	2750	6550	3850	* 10150	5950	* 9550	* 9550	* 5700	* 5700
		-3.0	4900	2900			6600	3850	* 10000	6000	* 14050	11900	* 9200	* 9200
		-4.5	* 6200	4000			* 6250	4000	* 8900	6200	* 13050	12300		
	2,4 m	6.0	* 3850	3400			* 4100	* 4100						
		4.5	* 3850	2800	* 4400	3100	* 4650	4650						
		3.0	* 4000	2550	* 4800	3050	* 5500	4400	* 7150	6900				
		1.5	4100	2450	4850	2900	* 8450	4150	* 8900	6400				
		0.0	4200	2500	4750	2850	6750	4000	* 9950	6100				
		-1.5	4650	2750	4700	2800	6650	3900	* 10250	6000	* 10150	* 10150	* 6100	* 6100
		-3.0	5650	3350			6700	3950	* 9800	6100	* 14300	12150	* 10900	* 10900
		-4.5	* 6700	5000					* 8250	6350	* 11900			
	1,8 m	6.0	* 4200	3900			* 4650	4650						
		4.5	* 4200	3150			* 5150	4500	* 6100	* 6100				
		3.0	* 4400	2800	4900	2950	* 5950	4300	* 7950	6700				
		1.5	4500	2700	4800	2650	* 6800	4100	* 9450	6250				
		0.0	4700	2800	4750	2800	6650	3900	* 10150	6050				
		-1.5	5750	3150				6650	3900	* 10150	6050	* 10950	* 10950	
		-3.0	* 6600	4000			* 6700	4050	* 9350	6200	* 13200	123500		
		-4.5												

Model	Arm	Height	MAX		10.5 m		9 m		7.5 m		6.0 m		4.5 m	
			OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF
			PC210LC Straight boom											
1800 mm	10.5													
	9.0	*5750	5750										*7400	6700
	7.5													
	6.0	3900	2550					4000	2600	6050	4050	7700	6600	
	4.5													
	3.0	3050	1950					3850	2500	5500	3550			
	1.5													
	0.0	3100	1950					3700	2850	5150	3250			
	-1.5													
	-3.0									*4650	3300			
2400 mm	10.5													
	9.0	*4850	4250										*6500	*6500
	7.5													
	6.0	3400	2200					4100	2700	*5850	4150	*6100	*6100	
	4.5													
	3.0	2750	1700					3900	2500	5600	3650			
	1.5													
	0.0	2750	1700					3700	2300	5200	3250			
	-1.5													
	-3.0							3750	2400	5250	3300	*6850	5150	
2930 mm	10.5	*6500	*6500											
	9.0	*4400	*4400										*6350	*6350
	7.5	*3750	*3400							*6050	4900	*5800	*5800	
	6.0	*9500	2750					5100	3350	*6250	4800	*6050	*6050	
	4.5	*3400	2400					5000	3250	*6750	4600	*8600	7150	
	3.0	*3400	2250			3600	2350	4850	3150	6850	4350	*9950	6550	
	1.5	3450	2250			3600	2300	4750	3000	6600	4100	*8800	6150	
	0.0	3550	2250			3600	2300	4650	2950	6450	4000	*9100	6000	
	-1.5	3850	2450					4650	2900	6450	3950	*9150	6050	
	-3.0	3550	2250					*4950	3000	*8000	4050	*7500	8510	

**PC240LC-6K, PC240NLC-6K**

**LEGEND**

A : Reach from swing centre  
 B : Bucket hook height

OF : Lifting capacity (rating over front)  
 OS : Lifting capacity (rating over side)


**LEGEND**

- (1) Position of lifting point
- (2) Arm length:
- (3) Boom length
- (4) Hydraulic pressure: Nom 36.2 MPa WORKING  
 Max. 37.2 MPa HOLDING CIRCUIT

**WORKING CONDITIONS:**

- WITH BUCKET (1.1 m<sup>3</sup> CECE) ( 750 kg).
- IF OBJECT HANDLING IS PERFORMED WITH OTHER TOOL INSTALLED, THE WEIGHT DIFFERENCE OF THE TOOL SHALL BE DEDUCTED FROM THE VALUES OF THIS TABLE.
- WITH FULLY EXTENDED BUCKET CYLINDER.
- ON A COMPACT HORIZONTAL LEVEL GROUND.
- WITH 700 mm WIDTH SHOE.

Loads do not exceed 87% of hydraulic capacity or 75% of tipping capacity (\* load limited by hydraulic capacity rather than tipping).

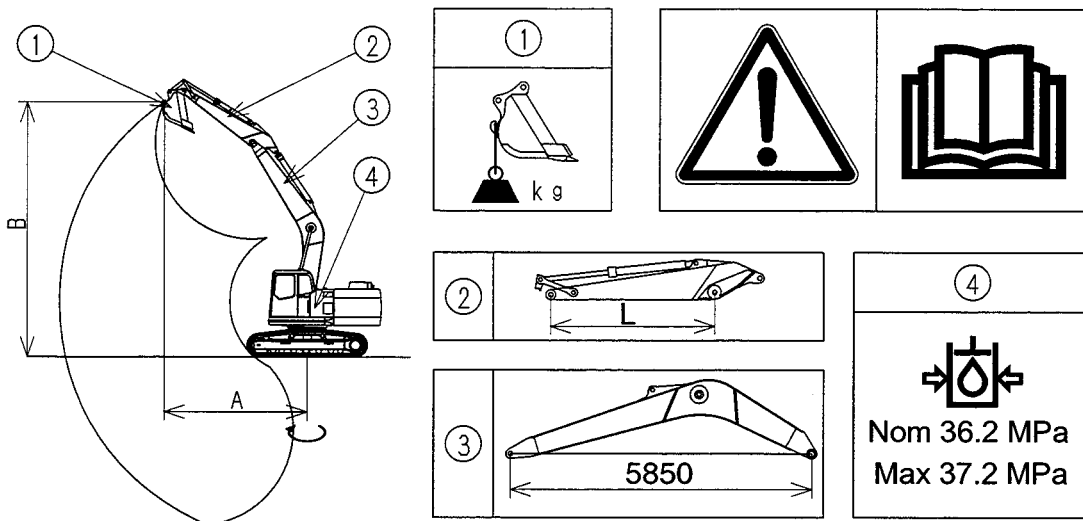

AW40000

Model	Arm	Height	max	7.5 m		6.0 m		4.5 m		3.0 m		1.5 m		
			OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS
PC240LC	3,5m	6.0	* 2400	* 2400	* 4050	* 4050								
		4.5	* 2400	* 2400	* 4450	4300								
		3.0	* 2550	* 2550	* 5150	4150	* 5700	* 5700	* 6900	* 6900				
		1.5	* 2750	2650	* 5950	3950	* 7100	5650	* 9550	8800	* 8750	* 8750		
		0.0	* 3100	2700	6050	3800	* 8350	5350	* 11600	8250	* 7800	* 7800		
		-1.5	* 3650	2850	5900	3700	8350	5100	* 12750	7950	* 10150	* 10150	* 6000	* 6000
		-3.0	* 4650	3300	5900	3650	8300	5100	* 13050	7950	* 14050	* 14050	* 9250	* 9250
		-4.5	6800	4250			8450	5200	* 12500	8050	* 18550	16450	* 13250	* 13250
	3,0m	6.0	* 2850	* 2850	* 4400	4350								
		4.5	* 2850	* 2850	* 4900	4250	* 5000	* 5000						
		3.0	* 3000	2950	* 5550	4100	* 6250	5950	* 7850	* 7850	* 12400	* 12400		
		1.5	* 3250	2850	6200	3950	* 7600	5600	* 10350	8650				
		0.0	* 3700	2900	6050	3800	8600	5350	* 12150	8200	* 7050	* 7050		
		-1.5	* 4400	3150	5950	3700	8350	5150	* 13050	8000	* 10450	* 10450	* 6350	* 6350
		-3.0	* 5750	3700	5950	3750	8400	5150	* 13100	8050	* 15300	* 15300	* 10250	* 10250
		-4.5	7850	4900			8600	5300	* 12150	8520	* 17800	16750	* 15100	* 15100
	2,5m	6.0	* 4500	4300			* 4850	* 4850						
		4.5	* 4500	3650	* 5400	4200	* 5650	* 5650	* 5650					
		3.0	* 4750	3300	* 6000	4050	* 6850	5850	* 8850	* 8850				
		1.5	5050	3200	6150	3900	6150	5500	* 11200	8500				
		0.0	5150	3250	6050	3800	8550	5300	* 12650	8150				
		-1.5	5650	3550	6000	3750	8400	5150	* 13200	8050	* 11300	* 11300		
		-3.0	6800	4250			8500	5250	* 12900	8100	* 18200	16500	* 12250	* 12250
		-4.5	* 8900	6100					* 11450	8400	* 16500	* 16500		
	2,0m	6.0	* 4550	* 4550			* 5400	* 5400						
		4.5	* 4550	3900	* 5750	4050	* 6150	6000	* 7200	* 7200				
		3.0	* 4750	3500	6200	3950	* 7300	5700	* 9700	8900				
		1.5	* 5200	3400	6100	3850	* 8450	5450	* 11850	8300				
0.0		5550	3500	6000	3750	8450	5200	* 12950	8050					
-1.5		6200	3850			8400	5150	* 13200	8050	* 11600	* 11600			
-3.0		7650	4800			8550	5300	* 12550	8200	* 18050	16700			
-4.5		* 9250	7450					* 10350	8500					



Model	Arm	Height	max		7.5 m		6.0 m		4.5 m		3.0 m		1.5 m		
			OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	
PC240NLC	3,5m	6.0	* 2400	* 2400	* 4050	4000									
		4.5	* 2400	* 2400	* 4450	3900									
		3.0	* 2550	2450	* 5150	3700	* 5700	5400	* 6900	* 6900					
		1.5	* 2750	2350	5700	3550	* 7100	5050	* 9550	7850	* 8750	* 8750			
		0.0	* 3100	2350	5500	3350	7850	4750	* 11600	7300	* 7800	* 7800			
		-1.5	* 3650	2550	5400	3250	7600	4550	12300	7050	* 10150	* 10150	* 6000	* 6000	
		-3.0	* 4650	2900	5400	3250	7550	4500	12250	7000	* 14050	13850	* 9250	* 9250	
		-4.5	6200	3750			7700	4600	12450	* 7100	* 18550	14200	* 13250	* 13250	
	3,0m	6.0	* 2850	* 2850	* 4400	3900									
		4.5	* 2850	* 2850	* 4900	3850	* 5000	* 5000							
		3.0	* 3000	2650	* 5550	3700	* 6250	5350	* 7850	* 7850	* 12400	* 12400			
		1.5	* 3250	2550	5650	3500	* 7600	5000	* 10350	7700					
		0.0	* 3700	2600	5500	3350	7650	4750	* 12150	7250	* 7100	* 7100			
		-1.5	* 4400	2800	5450	3300	7600	4550	12350	7100	* 10450	* 6350	* 6350		
		-3.0	5350	3250	5450	3300	7650	4600	12400	7100	* 15300	* 14100	* 10250	* 10250	
		-4.5	7200	4350			7800	4750	* 12150	7300	* 17800	14500	* 15100	* 15100	
	2,5m	6.0	* 4500	3900			* 4850	* 4850							
		4.5	* 4500	3250	* 5400	3750	* 5650	5550							
		3.0	* 4750	2950	5800	3650	* 6850	5250	* 8850	8200					
		1.5	4600	2850	5650	3500	8050	4950	* 11200	7550					
		0.0	47000	2900	5500	3350	7800	4700	12500	7200					
		-1.5	5150	3150	5450	3350	7650	4600	12400	7100	* 11300	* 11300			
		-3.0	6200	3800			7750	4650	12500	7200	* 18200	14250	* 12250	* 12250	
		-4.5	* 8900	5450					* 11450	7450	* 16500	14750			
	2,0m	6.0	* 4550	4250			* 5400	* 5400							
		4.5	* 4550	3500	* 5750	3650	* 6150	5400	* 7200	* 7200					
		3.0	* 4750	3150	5700	3550	* 7300	5100	* 9700	7950					
		1.5	4900	3000	5550	3400	7950	4850	* 11850	7350					
0.0		5100	3100	5500	3350	7700	4600	12400	7100						
-1.5		5650	3450			7650	4600	12400	7100	* 11600	* 11600				
-3.0		7000	4250			7800	4700	12550	7250	* 18050	* 14450				
-4.5		* 9250	6650					* 10350	7500						

**PC210, PC210LC 2-PC BOOM**

Model	Arm	Height	max		7.5 m		6.0 m		4.5 m		3.0 m		1.5 m			
			OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS		
PC210 2 PC boom	2.9 m	6.0	* 2200	* 2200	* 2800	2800	* 3000	* 3000								
		4.5	* 2200	* 2200	* 3600	2750	* 3550	* 3550								
		3.0	* 2250	2000	* 4050	2650	* 4450	3950	* 5500	* 5500	* 8450	* 8450				
		1.5	* 2450	1900	3900	2550	* 5500	3700	* 7500	5750	* 6850	* 6850				
		0.0	* 2800	1950	3800	2400	5400	3450	8600	5350	* 7200	* 7200				
		-1.5	3350	2100	3750	2350	5300	3350	8450	5200	* 10250	10100	* 6800	* 6800		
		-3.0	4000	2550			5300	3350	8450	5200	* 15000	10250				
	2.4 m	6.0	* 3600	3200		* 3550	* 3550									
		4.5	* 3600	2600	* 4050	2700	* 4100	* 4100	* 4500	* 4500						
		3.0	3550	2300	4050	2650	* 5000	3900	* 6300	6200						
		1.5	3450	2250	3900	2550	5650	3650	* 8200	5650						
		0.0	3550	2250	3850	2450	5450	3500	8600	5350	* 7200	* 7200				
		-1.5	3900	2500			5350	3400	8500	5250	* 11800	10250				
		-3.0	4850	3100			5400	3450	8550	5350						
	1.8m	6.0	* 3900	3700			* 4250	4150								
		4.5	* 3900	2950			* 4650	4050	* 5300	* 5300	* 7300	* 7300				
		3.0	4000	2600	4000	2600	*5500	3800	*7150	5950						
		1.5	3850	2450	3900	2500	5550	3600	8750	5500						
		0.0	3950	2550			5400	3450	8500	5250						
		-1.5	4450	2850			5400	3450	8500	5250	* 13000	10250				
		-3.0														
	PC210LC 2 pc boom	2.9m	6.0	* 2200	* 2200	* 2800	* 2800	* 3000	* 3000							
			4.5	* 2200	* 2200	* 3600	2800	* 3550	* 3550							
			3.0	* 2250	2050	* 4050	2700	* 4450	4000	* 5500	* 8450	* 8450				
1.5			* 2450	1950	* 4650	2600	* 5500	3750	* 7500	5850	* 6850	* 6850				
0.0			* 2800	2000	4550	2450	* 6450	3550	* 9050	5450	* 7200	* 7200				
-1.5			* 3350	2150	4500	2400	6350	3400	* 10000	5300	* 10250	* 10250	* 6800	* 6800		
-3.0			* 4500	2600			6350	3400	* 10300	5300	* 15000	10450				
2.4m		6.0	* 3600	3250			* 3550	* 3550								
		4.5	* 3600	2650	* 4050	2800	* 4100	* 4100	* 4500	* 4500						
		3.0	* 3800	2350	* 4450	2700	* 5000	4000	* 6300	6300						
		1.5	4100	2250	4650	2500	6500	3550	* 9550	5450	* 7200	* 7200				
		0.0	4200	2300	4550	2500	6500	3550	* 9550	5450	* 7200	* 7200				
		-1.5	4700	2550			6450	3500	* 10250	5350	* 11800	10450				
		-3.0	5800	3150			6450	3500	* 10350	5450						
1.8m		6.0	* 3900	3750			* 4250	4200								
		4.5	* 3900	3000			* 4650	4100	* 5300	* 5300	* 7300	* 7300				
		3.0	* 4150	2650	* 4200	2650	* 5500	3900	* 71500	6050						
		1.5	4550	2500	4650	2550	* 6400	3700	* 8850	5600						
		0.0	4700	2600			6500	3550	* 9950	5350						
		-1.5	5350	2950			6450	3500	* 10400	5350	* 13000	10450				
		-3.0														

**PC240LC, PC240 NLC 2 pc Boom**

Model	Arm	Height	max		7.5 m		6.0 m		4.5 m		3.0 m		1.5 m		
			OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	
PC240LC 2 pc Boom	3.5 m	6.0	* 2350	* 2350	* 3500	* 3500									
		4.5	* 2350	* 2350	* 3900	* 3900	* 3850	* 3850							
		3.0	* 2450	* 2450	* 4600	4150	* 5050	* 5050	* 6150	* 6150	* 9050	* 9050			
		1.5	* 2650	2650	* 5450	4000	* 6450	5700	* 8750	* 8750	* 8100	* 8100			
		0.0	* 2950	2650	6100	3800	* 7750	5400	* 10900	8350	* 7350	* 7350			
		-1.5	* 3500	2850	6000	3700	8550	5200	* 12300	8100	* 9750	* 9750	* 6450	* 6450	
		-3.0	* 4400	3300	6000	3700	8500	5150	* 13050	8050	* 13650	* 13650	* 9950	* 9950	
	3.0 m	6.0	* 2800	* 2800	* 4050	* 4050									
		4.5	* 2800	* 2800	* 4400	4300	* 4400	* 4400							
		3.0	* 2900	* 2900	* 5050	4150	* 5650	* 5650	* 7050	* 7050	* 11200	* 11200			
		1.5	* 3150	2850	* 5800	4000	* 7000	5650	* 9600	8800					
		0.0	* 3550	2900	6150	3850	* 8250	5400	* 11550	8350	* 6600	* 6600			
		-1.5	* 4200	3150	6050	3750	8600	5250	* 12750	8150	* 10000	* 10000	* 6750	* 6750	
		-3.0	* 5450	3700	6100	3800	8600	5250	* 13250	8200	* 14950	* 14950			
	2.5 m	6.0	* 4400	4250			* 4250	* 4250							
		4.5	* 4400	3600	* 4900	4200	* 5000	* 5000	* 5600	* 5600					
		3.0	* 4600	3300	* 5500	4100	* 6200	5900	* 8050	* 8050					
		1.5	* 5000	3150	* 6200	3950	* 7500	5600	* 10500	8650					
		0.0	5200	3250	6150	3850	* 8650	5400	* 12200	8300					
		-1.5	5700	3550	6100	3800	8650	5300	* 13100	8200	* 10650	* 10650			
		-3.0	6850	4250			8650	5350	* 13250	8300					
	2.0 m	6.0	* 4450	* 4450			* 4800	* 4800							
		4.5	* 4400	3850	* 5350	4100	* 5500	* 5500	* 6400	* 6400	* 9150	* 9150			
		3.0	* 4600	3500	* 5850	4000	* 6650	5750	* 8850	* 8850					
1.5		* 5000	3350	6150	3850	* 7900	5500	* 11150	8450						
0.0		5600	3450	6100	3800	8650	5300	* 12600	8200						
-1.5		6200	3850			8600	5250	* 13200	8150	* 10900	* 10900				
-3.0		7700	4800			8700	5350	* 13050	8300						

Model	Arm	Height	max		7.5 m		6.0 m		4.5 m		3.0 m		1.5 m	
			OF	OS	OF	OS	OF	OS	OF	OS	OF	OS	OF	OS
			<b>PC240NLC 2 pc Boom</b>											
3.5 m	6.0	* 2350	* 2350	* 3500	* 3500									
	4.5	* 2350	* 2350	* 3900	* 3900	* 3850	* 3850							
	3.0	* 2450	2400	* 4600	3750	* 5050	* 5050	* 6150	* 6150	* 9050	* 9050			
	1.5	* 2650	2300	* 5450	3550	* 6450	5100	* 8750	7900	* 8100	* 8100			
	0.0	* 2950	2350	5600	3350	* 7750	4800	* 10900	7350	* 7350	* 7350			
	-1.5	* 3500	2500	5450	3250	7750	4600	* 12300	7100	* 9750	* 9750	* 6450	* 6450	
	-3.0	* 4400	2900	5450	3250	7700	4550	12500	7050	* 13650	* 13650	* 9950	* 9950	
3.0 m	6.0	* 2800	* 2800	* 4050	3950									
	4.5	* 2800	* 2800	* 4400	3850	* 4400	* 4400							
	3.0	* 2900	2600	* 5050	3700	* 5650	5400	* 7050	* 7050	* 11200	* 11200			
	1.5	* 3150	2550	5750	3550	* 7000	5050	* 9600	7800					
	0.0	* 3550	2550	5600	3400	7950	4800	* 11550	7350	* 6600	* 6600			
	-1.5	* 4200	2800	5500	3750	7800	4650	12650	7200	* 10000	* 10000	* 6750	* 6750	
	-3.0	5400	3250	5550	3350	7800	4650	12650	7200	* 14950	14350			
2.5 m	6.0	* 4400	3850			* 4250	* 4250							
	4.5	* 4400	3200	* 4900	3750	* 5000	* 5000	* 5600	* 5600					
	3.0	* 4600	2900	* 5500	3650	* 6200	5300	* 8050	* 8050					
	1.5	4600	2800	5700	3500	* 7500	5000	* 10500	7650					
	0.0	4750	2850	5600	3400	7950	4800	* 12200	7300					
	-1.5	5200	3150	5550	3350	7850	4700	12650	7250	* 10650	* 10650			
	-3.0	6250	3800			7900	4700	12750	7300					
2.0 m	6.0	* 4450	4150			* 4800	* 4800							
	4.5	* 4400	3450	* 5350	3650	* 5500	5450	* 6400	* 6400	* 9150	* 9150			
	3.0	* 4600	3100	5750	3550	* 6650	5150	* 8850	8000					
	1.5	4900	3000	5650	3450	* 7900	4900	* 11150	7450					
	0.0	5100	3050	5550	3350	7850	4700	* 12600	7200					
	-1.5	5650	3400			7800	4650	12650	7200	* 10900	* 10900			
	-3.0	7000	4250			7900	4750	12800	7350					



# **OPTIONS, ATTACHMENTS**

## PRECAUTIONS RELATED TO SAFETY

If attachments or options other than those authorised by Komatsu are installed, this will not only affect the life of the machine, but will also cause problems with safety.

When installing attachments not listed in this Operation and Maintenance Manual, please contact your Komatsu distributor first.

If you do not contact Komatsu, we cannot accept any responsibility for any accident or failure.

---

**▲ WARNING**

---

**Precautions for removal and installation operations**

When removing or installing attachments, obey the following precautions and take care to ensure safety during the operation.

- Carry out the removal and installation operations on a flat, firm ground surface.
- When the operation is carried out by two or more workers, determine signals and follow these during the operation.
- When carrying heavy objects (more than 25 kg), use a crane.
- When removing heavy parts, always support the part before removing it.  
When lifting such heavy parts with a crane, always pay careful attention to the position of the centre of gravity.
- It is dangerous to carry out operations with the load kept suspended. Always set the load on a stand, and check that it is safe.
- When removing or installing attachments, make sure that they are in a stable condition and will not fall over.
- Never go under a load suspended from a crane.  
Always stand in a position that is safe even if the load should fall.

---

**NOTICE**

Qualifications are required to operate a crane. Never allow the crane to be operated by unqualified person.




For details of the removal and installation operations, please contact your Komatsu distributor.

## PRECAUTIONS WHEN INSTALLING ATTACHMENTS

### **▲ WARNING**

Long work equipment reduces the stability of the chassis, so if the swing is operated on a slope, or when going down a steep hill, the machine may lose its balance and overturn. The following operations are particularly dangerous, so never operate the machine in these ways.

- If heavy work equipment is installed, the overrun of the swing becomes greater (the distance from the point where the operator operates the control levers to stop the swing to the point where the upper structure stops completely), so there is danger of mistaking the distance and hitting something. Always operate so that there is an ample margin to the stopping point. Furthermore, the hydraulic drift also becomes larger when the work equipment is stopped in mid air, it will gradually move down under its own weight).
- Always follow the correct procedure when installing the boom and arm. If the correct procedure is not followed, this may lead to serious damage or injury, so please consult your Komatsu distributor before carrying out installation.
- If long work equipment is installed, the working range will suddenly become larger, so there is danger of mistaking the distance and hitting something. Always operate the work equipment so that there is ample space from any obstacles in the area.

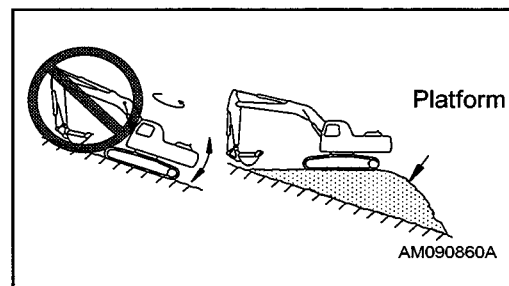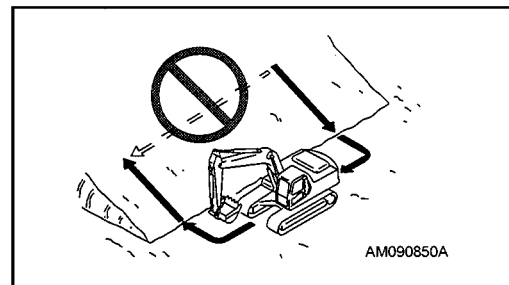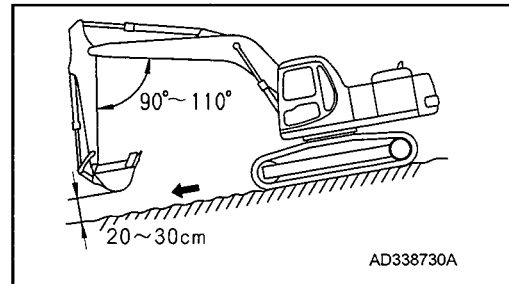




## HANDLING BUCKET WITH HOOK

### CHECKING FOR DAMAGE TO BUCKET WITH HOOK

Check that there is no damage to the hook, stopper, or hook mount. If any abnormality is found, please contact your Komatsu distributor.


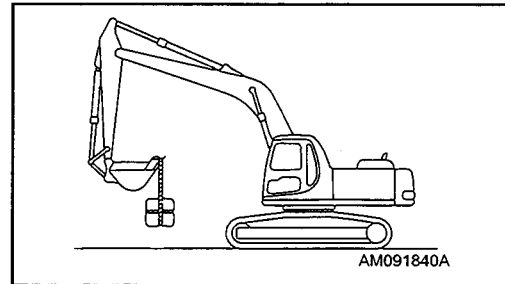


### PROHIBITED OPERATIONS

The standard work equipment must not be used for lifting loads. If this machine is to be used for lifting loads, it is necessary to install the special bucket with hook.


### PRECAUTIONS DURING OPERATIONS

- When carrying out lifting operations, reduce the engine speed and use the lifting operation mode.
- Depending on the posture of the work equipment, there is danger that the wire or load may slip off the hook. Always be careful to maintain the correct hook angle to prevent this from happening.
- Never steer the machine while lifting a load.
- If the bucket with hook is turned and used for operations, it will hit the arm during dumping operations, so be careful when using it.
- The loads must never exceed those specified in the lifting capacity chart when carrying out lifting operations.
- If you wish to install a hook in the future, please contact your Komatsu distributor.

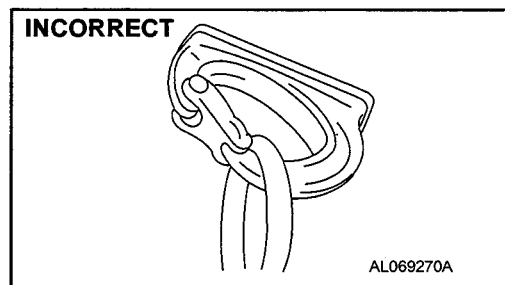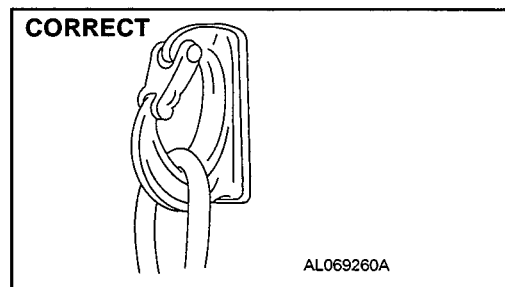

# MACHINES READY FOR ATTACHMENTS


## EXPLANATION OF COMPONENTS

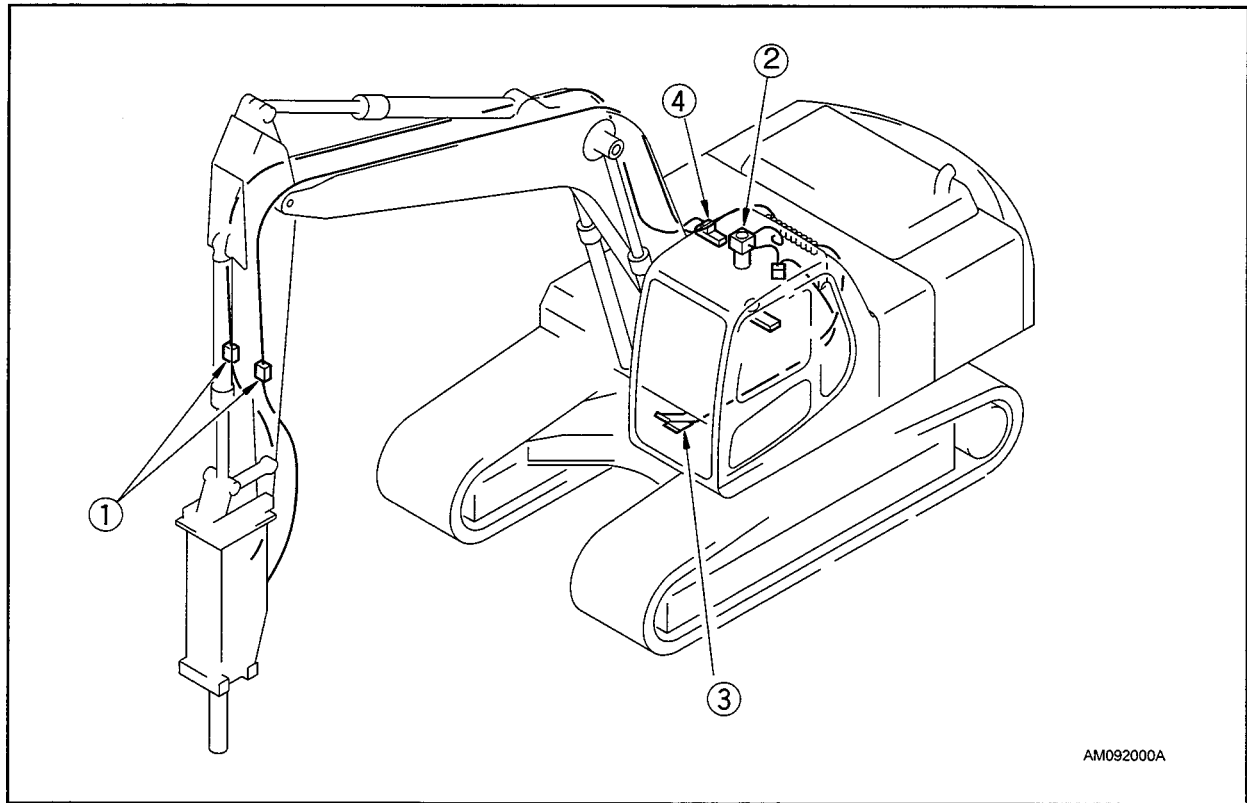

AM092000A


### 1. STOP VALVE

This valve stops the flow of the hydraulic oil

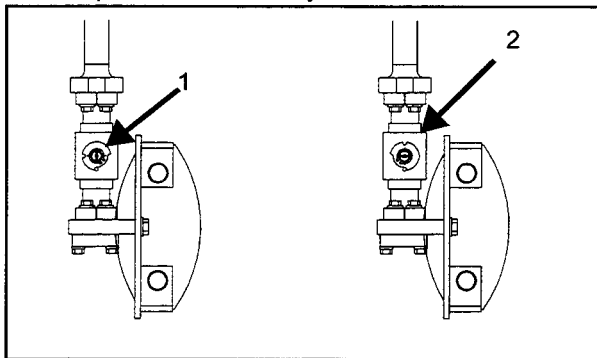

(1) FLOW : Hydraulic oil flows


(2) STOP : Hydraulic oil stops.  
Set this valve to the STOP position when removing or installing attachments.

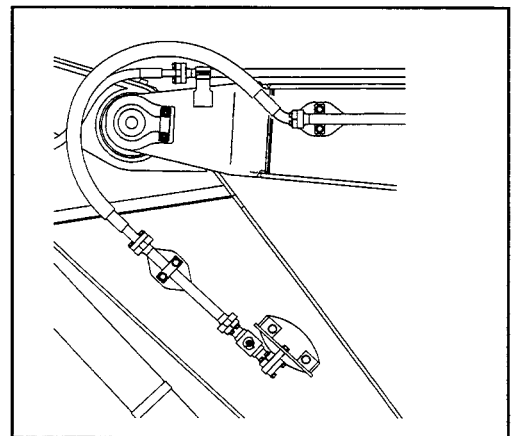

## 2. SELECTOR VALVE

This switches the flow of the hydraulic oil.

For details of the attachment to install and the direction of right 3-way valve, see "5. HYDRAULIC CIRCUIT" on page 241.

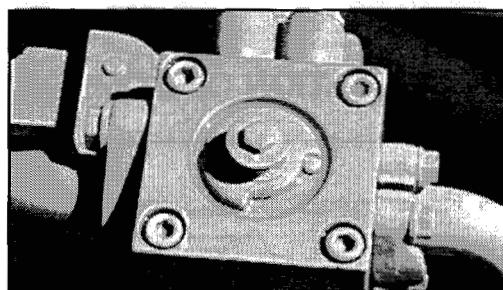

## 3. CONTROL PEDAL FOR ATTACHMENT

This is used to operate the attachment.


The pedal can be depressed to the front, neutral, and rear to operate the attachment as follows.

Hydraulic breaker	
Pedal front (1)	actuated
Pedal neutral (N)	stopped
Pedal rear (2)	stopped

- When the breaker is used, select the breaker operation mode (B.O) in the monitor panel.

For other attachments, confirm with the manufacturer regarding the relation between pedal operation and attachment movement when the attachment is mounted. Use the attachment only after confirming the above.

- Flow from the left hand second attachment pedal can be modified by adjusting the stroke limiting bolts (1) located under the pedal.

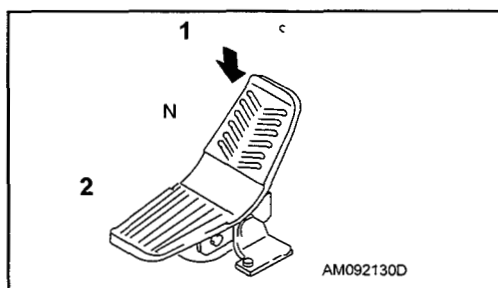



## 4. ACCUMULATOR

### **WARNING**

The accumulator is filled with high-pressure nitrogen gas, and it is extremely dangerous if it is handled in the wrong way.

For handling procedure, see "HANDLING ACCUMULATOR".

The accumulator is provided to release the pressure remaining in the attachment circuit after stopping the engine. Normally, never touch it.

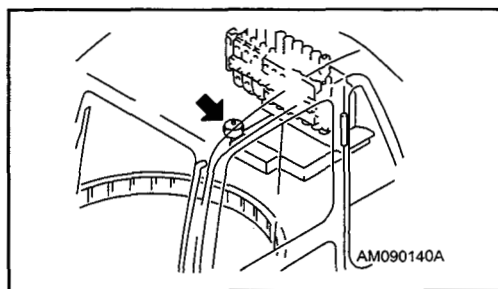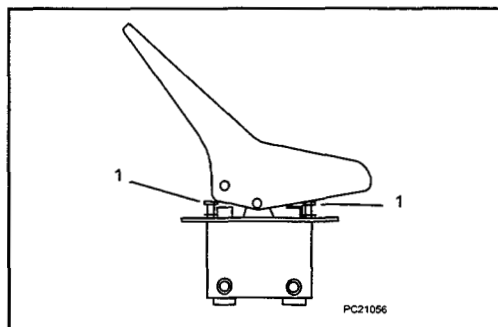


## 5. HYDRAULIC CIRCUIT



### Change-over hydraulic circuit

Contact dealer to set left hand boom piping relief pressure.

When using the breaker and the general attachment (Crusher etc.), turn the rotor of the 3 way valve a to change over according to the following illustration.

(The marks indicating the port direction are stamped on the 3-way valve).

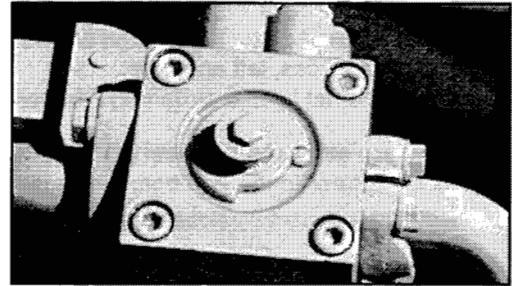

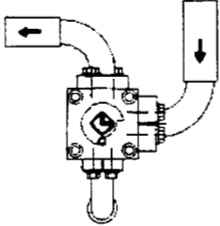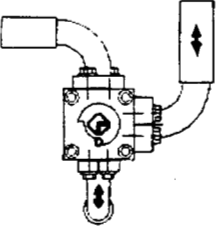Attachments	Right 3-way valve (1)
1-way flow (Breaker)	Front 
2-Way flow (Crusher)	Front 


### NOTICE

Perform work only after the engine is stopped and the work equipment and machine body are in a stable posture on the ground.

### CONNECTING HYDRAULIC CIRCUIT


When connecting the attachment, connect the circuit as follows.

1. Remove blind plugs (1) located on the end of the stop valve piping (2 places, left and right).  
Take care not to lose or damage the removed parts.
2. Connect attachment tubes (2) supplied by the attachment manufacturer to the end from which the plug was removed in step (1).

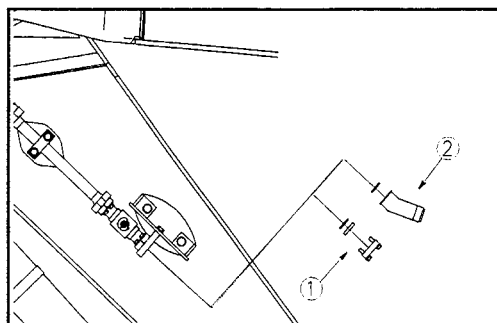

### Path of Oil


The direction of operation of the pedal and the path of the oil are as shown in the diagram below.

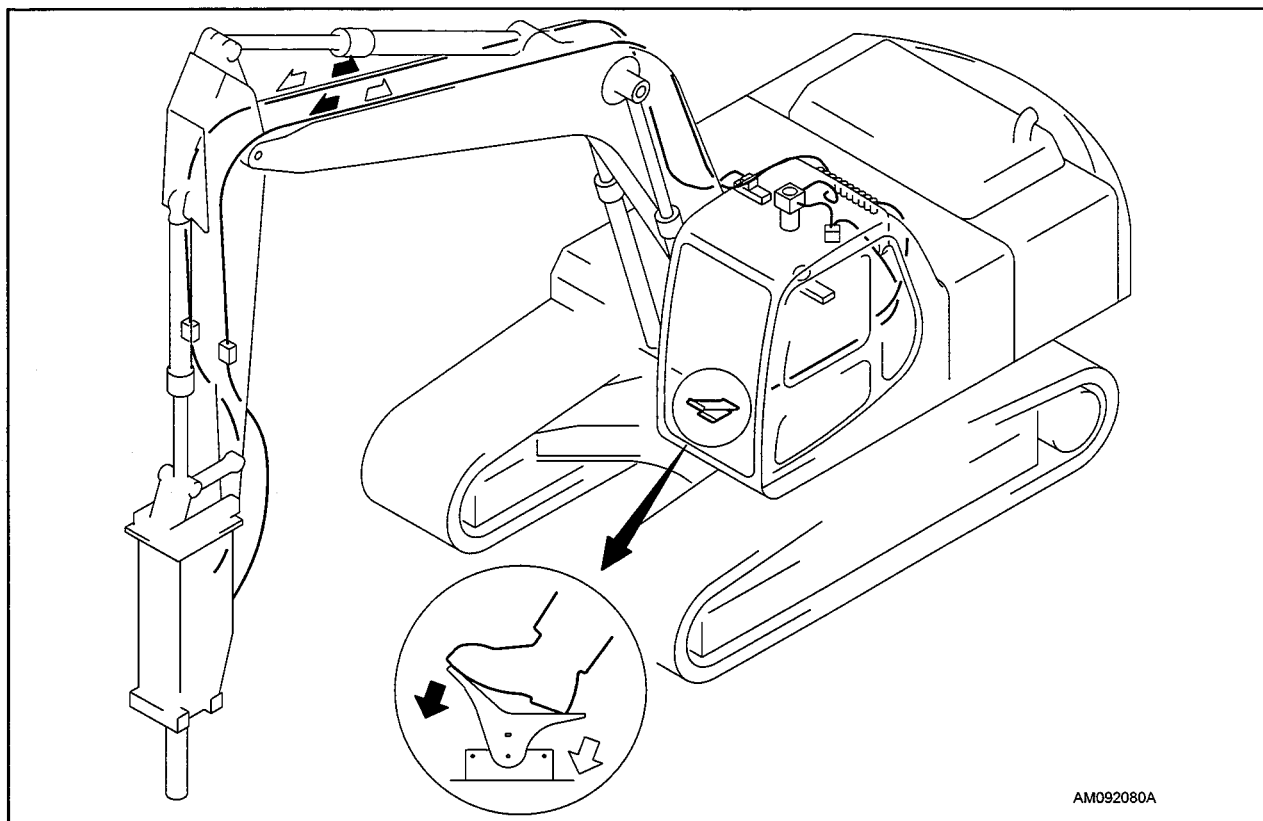

## ATTACHMENT MOUNTING/DISMOUNTING PROCEDURE


### Dismounting procedure

1. Curl the arm in then lower the boom to the ground. Set the attachment valves on the arm to the stop position as shown.
2. Place the attachment on the ground and stop the engine.
3. Operate levers and attachment pedals to full stroke 2 to 3 times to release hydraulic system pressure. Ensure oil temperature is low.
4. Remove the hoses on the attachment side. Install the blind plugs to the two outlets (1). Install blind plugs to the attachment hoses to prevent entry of dirt during dismounting and storage.
5. Dismount the attachment by removing the retaining pins (2). Then, mount the bucket.

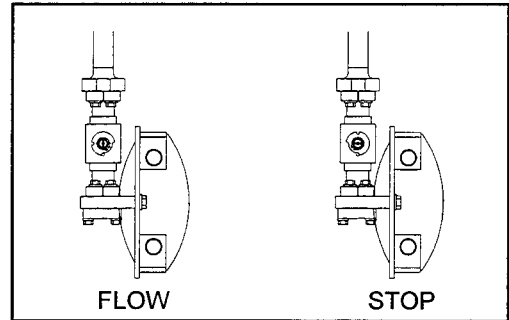

**For the bucket mounting procedure, see “REPLACEMENT AND INVERSION OF BUCKET” on page 127.**

6. After the bucket is mounted, check the hydraulic oil level.

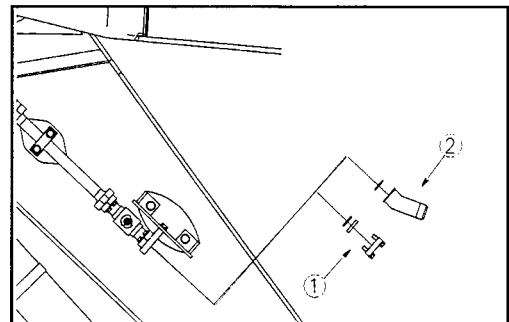


### Mounting Procedure

1. Remove the bucket.

**For bucket dismounting procedure, see “REPLACEMENT AND INVERSION OF BUCKET” on page 133.**


2. Place the attachment on a flat place, install pins (A) and (B) to the arm in that order.
3. After mounting the attachment, stop the engine. Operate each work equipment control lever and the attachment control pedal to full stroke back and forth, right and left to eliminate the internal pressure in the hydraulic circuit.
4. After confirming low oil temperature, remove the blind plug from the outlet and inlet port respectively.

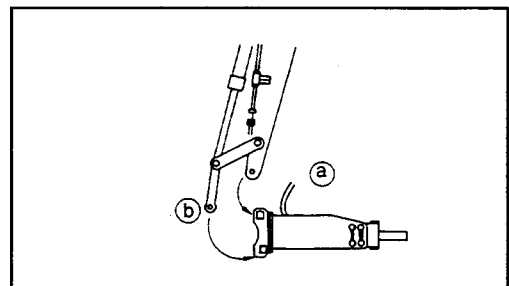

Take care that no dust, mud, etc. adheres to the hose mouthpiece portions.

If O-ring is damaged, replace it with a new one.

5. Turn the rotor of the stop valve connected to the inlet and outlet piping on the arm side face to the free position.
6. Confirm that oil level in the hydraulic oil tank is correct, after mounting the attachment.

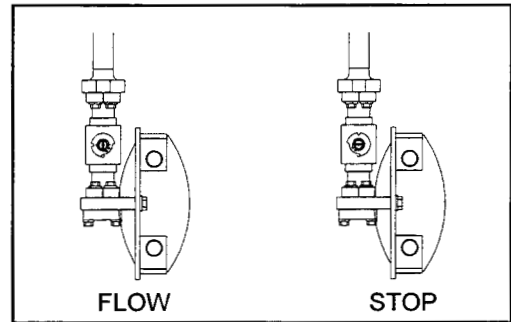

## OPERATION

### **WARNING**

- Be careful when operating the pedal in the deceleration range. The engine speed will rise suddenly.
- Do not put your foot on the pedal except when operating the pedal. If rest your foot on the pedal during operations, and it is depressed by accident, the attachment may move suddenly and cause serious damage or injury.

Operate the attachment as follows.

#### WHEN USING BREAKER

Set the stop valve to the FLOW position, and depress the front of the pedal to operate the breaker.

Select the working mode for breaker (B.O).


#### Precautions when using

- Check that the stop valve is in the FLOW position.
- Check that the selector valve is in the position for using the breaker.

**For details of the path followed by the oil, see “5. HYDRAULIC CIRCUIT” on page 241.**

- For details of other precautions when handling the breaker, read and use correctly the instruction manual provided by the breaker manufacturer.
- When using the breaker, the hydraulic oil deteriorates more rapidly than for normal operations, so change the hydraulic oil and replace the element at a shorter interval.

**For details, see “MAINTENANCE WHEN USING HYDRAULIC BREAKER” on page 212.**

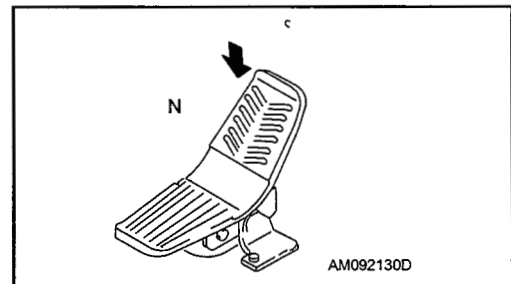

**When using general attachment such as crusher**



When the pedal is depressed at the front to rear portions, the attachment is actuated.

**Precautions when using**

- Check that the stop valve is at the flow position.
- Confirm that the selector valve is set tot the position for general attachments such ast the crusher.

**For details of the oil path, see “5. HYDRAULIC CIRCUIT” on page 241.**

- For other precautions when using the attachment, see the instruction manual provided by the attachment manufacturer.

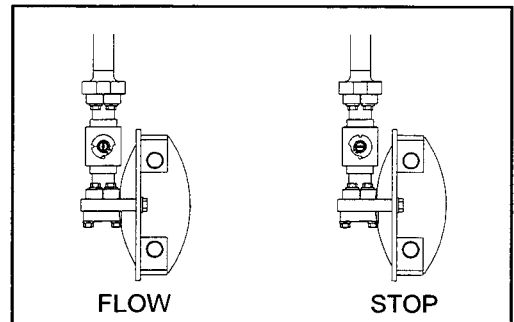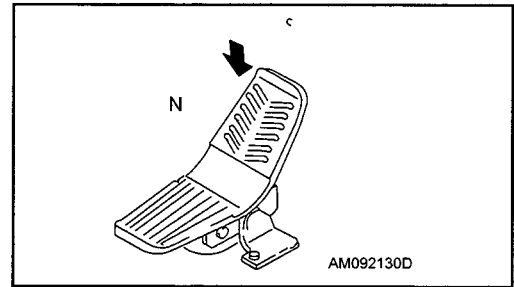



**LONG TERM STORAGE**

If the machine is not to be used for a long period, do as follows.

- Set the stop valve to the STOP position.
- Install the blind plugs and O-rings to the valves.

If the pedal is operated when there is no breaker or general attachment installed, it will cause overheating and other problems.

**SPECIFICATIONS**

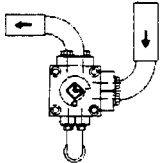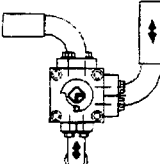Attachments	Right 3-way valve (1)
1-way frow (Breaker)	Front 
2-Way flow (Crusher)	Front 



### Hydraulic specifications

- Max. flow when flow is joined: 191 x 2 liter/min
- Safety valve relief set pressure of service valve: 27500 kPa (280 kg/cm<sup>2</sup>)
- Safety valve cracking set pressure of service valve: 24500 kPa (250 kg/cm<sup>2</sup>)
- Left hand boom piping flow and right hand flow can have different pressures.  
Consult your dealer for various pressures available.


### FIRST ATTACHMENT WITH CLAM-SHELL OPTION

Machines fitted with a single attachment circuit can also be supplied with clam-shell grab piping or can have such piping fitted at a later time.

The clam-shell open/close function uses the bucket cylinder circuit with the bucket cylinder disable by the two arm mounted stop valves (Left hand side example shown below).

The first attachment circuit (right hand cab pedal) can be used to rotate grabs with a rotary function with the revo-frame mounted 3-way valve set to 2-way flow.

Fine control of rotation can be achieved by adjusting the maximum output of the first attachment using the righthand panel mounted 10 position switch.

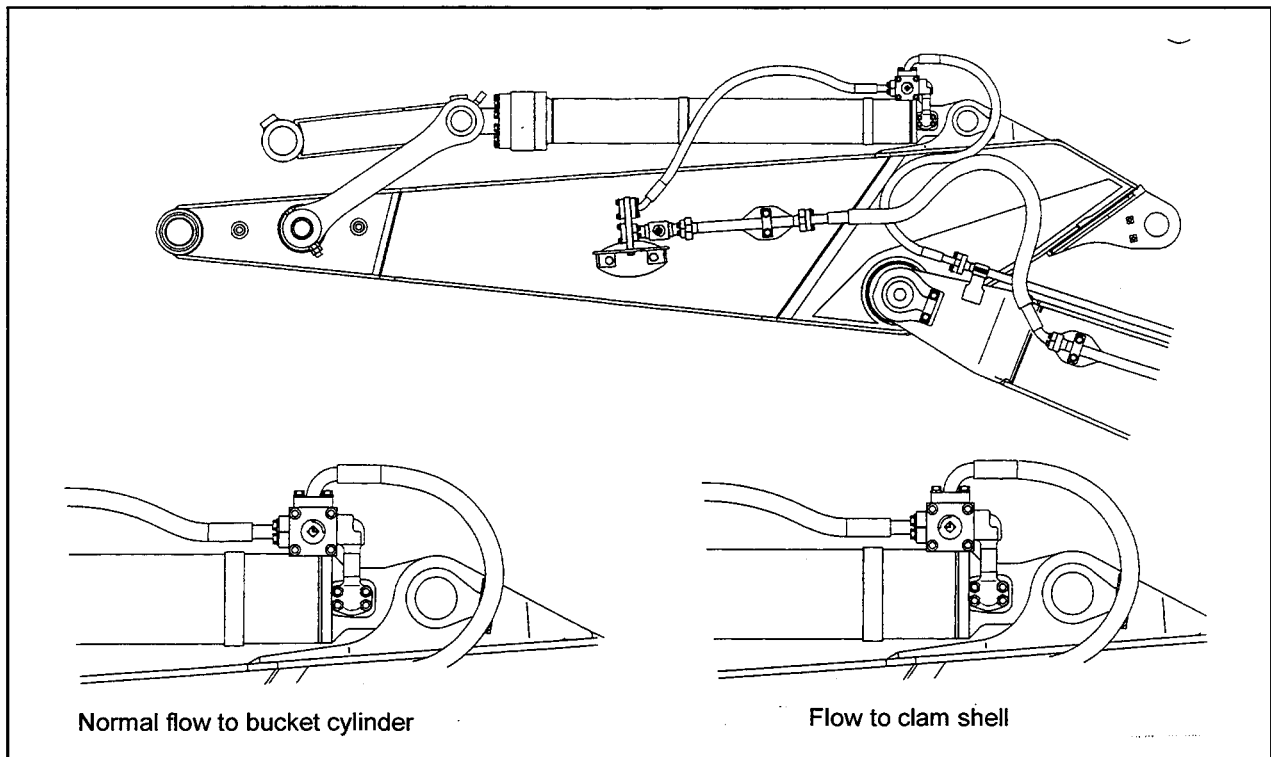

**FIRST AND SECOND ATTACHMENT**


This option can only be fitted to machines that have the main valve converted to or supplied with 2 attachment spool additions (8 spools in total)

The arm end valves are set to the flow or stop position as shown in the figure below.

The second attachment when fitted, is permanently set in two way flow with full flow (2-pump) output and full system pressure.

Attachment pressures can be modified by your local dealer on request and can have different pressures for left hand and right-hand piping by modifying the relief valves in the main control valve portions.

When handling attachments please follow the same procedure and precautions as applied to the first attachment circuit (attachment mounting/dismounting).

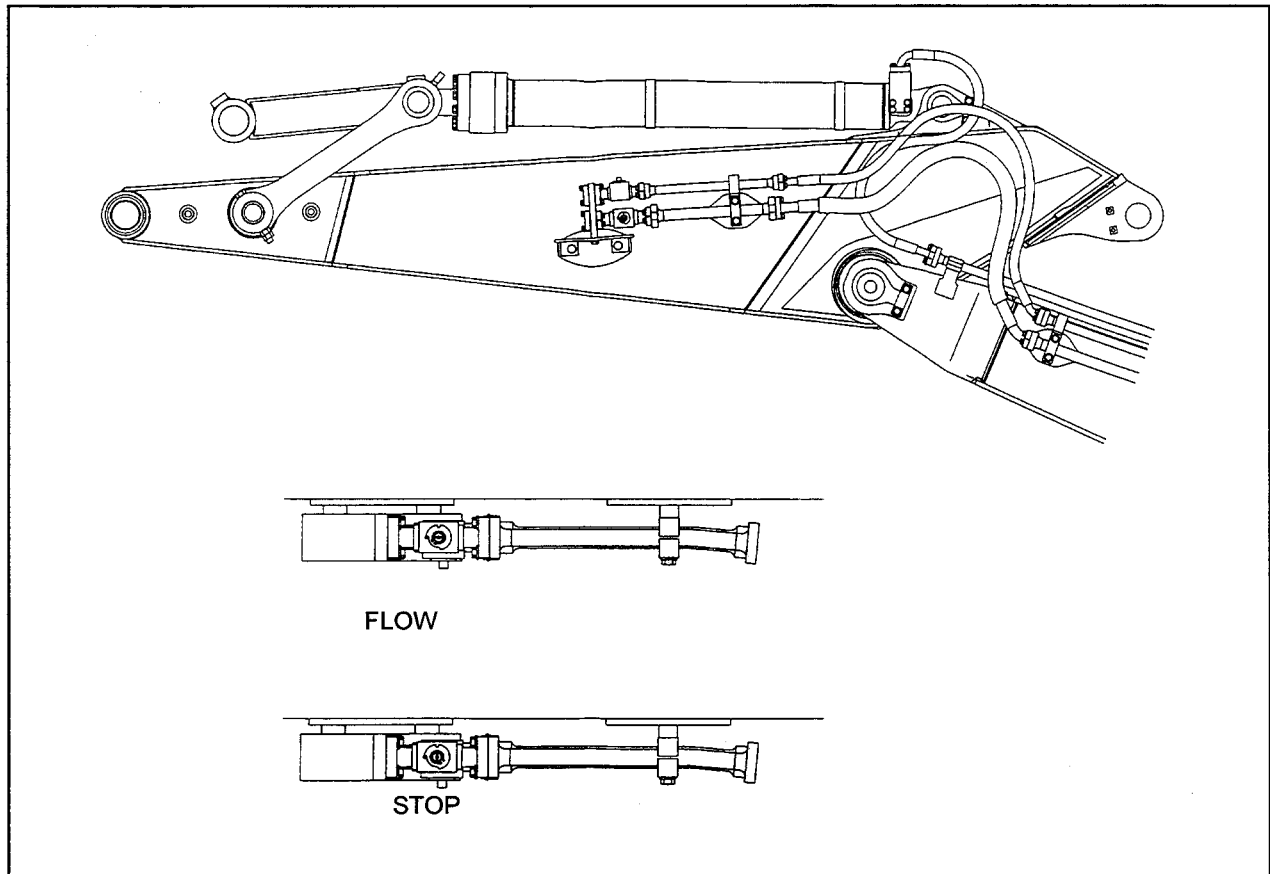

# INTRODUCTION OF ATTACHMENTS

## SPECIFICATION, USE

### PC210-6K, PC210 LC-6K

NAME	Specification, use	
Narrow bucket	Capacity Outside width	SAE/CECE 0.45 m <sup>3</sup> /0.41 m <sup>3</sup> 650 mm
Narrow bucket	Capacity Outside width	SAE/CECE 0.60 m <sup>3</sup> /0.55 m <sup>3</sup> 800 mm
Narrow bucket	Capacity Outside width	SAE/CECE 0.71 m <sup>3</sup> /0.65 m <sup>3</sup> 900 mm
General use bucket	Capacity Outside width	SAE/CECE 0.87 m <sup>3</sup> /0.78 m <sup>3</sup> 1050 mm
Light duty bucket	Capacity Outside width	SAE/CECE 1.08 m <sup>3</sup> /0.96 m <sup>3</sup> 1250 mm
Light duty bucket	Capacity Outside width	SAE/CECE 1.19 m <sup>3</sup> /1.06 m <sup>3</sup> 1350 mm

NAME	Specification, use	
Track shoes (PC210)	Triple grouser shoe width Triple grouser shoe width	700 mm 800 mm
Track shoes (PC210LC)	Triple grouser shoe width Triple grouser shoe width Triple grouser shoe width	600 mm 800 mm 900 mm
Short arm	Arm length Max. digging depth	2,400 mm 6,095 mm
Short arm	Arm length Max. digging depth	2,800 mm 5,485 mm
Head guard	In place where there is danger of falling rocks, always install the head guard to protect the operator.	
FOPS	Level 1/ level 2 (see section 6)	
FRONT GUARD	Level 1/ level 2 (see section 6)	

### Optional Equipment

- Large capacity batteries (2 x 140 Ah)
- Additional work lamps
  - - cab mounted (x 3)
  - - RH boom
  - - counterweight mounted
- Rotating beacon lamp

- Heated operators seat
- Arm hose burst valve
- Lower windscreen wiper
- Radio/cassette
- Additional hydraulic circuit piping
- Air suspension heated seat
- Work levers with 4 bottoms

**PC240NLC-6K, PC240 LC-6K**

NAME	Specification, use	
Narrow bucket	Capacity Outside width	SAE/CECE 0.49 m <sup>3</sup> /0.45 m <sup>3</sup> 650 mm
Narrow bucket	Capacity Outside width	SAE/CECE 0.77 m <sup>3</sup> /0.71 m <sup>3</sup> 900 mm
General use bucket	Capacity Outside width	SAE/CECE 0.95 m <sup>3</sup> /0.86 m <sup>3</sup> 1050 mm
Light duty bucket	Capacity Outside width	SAE/CECE 1.19 m <sup>3</sup> /1.07 m <sup>3</sup> 1250 mm
Light duty bucket	Capacity Outside width	SAE/CECE 1.30 m <sup>3</sup> /1.12 m <sup>3</sup> 1450 mm

NAME	Specification, use	
Track shoes (PC240LC)	Triple grouser shoe width Triple grouser shoe width Triple grouser shoe width	600 mm 800 mm 900 mm
Track shoes (PC240NLC)	Triple grouser shoe width Triple grouser shoe width	700 mm 800 mm
Short arm	Arm length Max. digging depth	2,500 mm 6,370 mm
Short arm	Arm length Max. digging depth	2,000 mm 5,870 mm
Long arm	Arm length Max. digging depth	3,500 mm 7,350 mm
Head guard	In place where there is danger of falling rocks, always install the head guard to protect the operator.	
FOPS	Level 1/ level 2 (see section 6)	
FRONT GUARD	Level 1/ level 2 (see section 6)	

**Optional Equipment**

- Large capacity batteries (2 x 140 Ah)
- Additional work lamps
  - - cab mounted (x 3)
  - - RH boom

- - counterweight mounted
- Rotating beacon lamp
- Heated operators seat
- Arm hose burst valve
- Lower windscreen wiper
- Radio/cassette
- Additional hydraulic circuit piping
- Air suspension heated seat
- Work levers with 4 bottom

## ATTACHMENT INSTALLATION COMBINATION TABLE

### PC210-6K, PC210LC-6K

This table lists the combination of attachments which can be installed to the different arms.

- Can be used. (max weight up to 1.8 t/m<sup>3</sup>)
- Can be used . (max. weight up to 1.5 t/m<sup>3</sup>)
- ▲ Can be used only for light duty work  
(max. weight up to 1.2 t/m<sup>3</sup>)
- × Cannot be used.

### NOTICE

- **When the extension arm is equipped, if the bucket is drawn to the machine body, the arm interferes with the body. Operate the extension arm carefully.**
- **When the boom is fully lowered during oblique digging, the boom interferes with the undercarriage.**

**Operate the boom carefully.**

Categories of use

For general digging : digging or loading sand, gravel, clay etc.

For light duty digging : digging or loading dry, uncaked earth and sand, mud etc.

For loading work : loading dry, loose earth and sand

- For digging or loading hard soil or soft rock, it is recommended that the strengthened bucket with high durability and wear resistance be used

**NOTICE**

- **When the extension arm is equipped, if the bucket is drawn to the machine body, the arm interferes with the body. Operate the extension arm carefully.**
- **When the boom is fully lowered during oblique digging, the boom interferes with the undercarriage..**

Bucket capacity heaped (m <sup>3</sup> )		Outside without side cutters (mm)	Weight (with side cutters) (kg)	No. of teeth	Arm		
SAE, PCSA	CECE				1.8 m	2.4 m	2.93 m
0.45	0.41	650	486	3	○	○	○
0.60	0.55	800	552	3	○	○	○
0.71	0.65	900	583	5	○	○	○
0.87	0.78	1050	631	5	▲	▲	▲
1.08	0.96	1250	713	6	▲	▲	▲
1.19	1.06	1350	745	6	○	○	×

These charts are based on over-side stability with fully loaded bucket at maximum reach.

A wide variety of buckets & attachments is available. Contact your local dealer for more information.

**PC240NLC-6K, PC240LC-6K**

This table lists the combination of attachments which can be installed to the different arms.

- Can be used. (max weight up to 1.8 t/m<sup>3</sup>)
- Can be used . (max. weight up to 1.5 t/m<sup>3</sup>)
- ▲ Can be used only for light duty work (max. weight up to 1.2 t/m<sup>3</sup>)
- × Cannot be used.

**NOTICE**

- **When the extension arm is equipped, if the bucket is drawn to the machine body, the arm interferes with the body. Operate the extension arm carefully.**
- **When the boom is fully lowered during oblique digging, the boom interferes with the undercarriage.**

**Operate the boom carefully.**

## Categories of use

For general digging : digging or loading sand, gravel, clay etc.

For light duty digging : digging or loading dry, uncaked earth and sand, mud etc.

For loading work : loading dry, loose earth and sand

- For digging or loading hard soil or soft rock, it is recommended that the strengthened bucket with high durability and wear resistance be used

**NOTICE**

- **When the extension arm is equipped, if the bucket is drawn to the machine body, the arm interferes with the body. Operate the extension arm carefully.**
- **When the boom is fully lowered during oblique digging, the boom interferes with the undercarriage.**

Operate the boom carefully.

Bucket capacity heaped (m <sup>3</sup> )		Outside without side cutters (mm)	Weight (with side cutters) (kg)	No. of teeth	Arm			
SAE, PCSA	CECE				2.0 m	2.5 m	3.05 m	3.5 m
0.49	0.45	650	513	3	○	○	○	○
0.77	0.71	968	616	3	○	○	○	□
0.95	0.86	1050	666	4	○	○	○	▲
1.19	1.07	1250	752	5	□	□	▲	×
1.30	1.12	1450	800	5	▲	▲	▲	×

These charts are based on over-side stability with fully loaded bucket at maximum reach.

A wide variety of buckets & attachments is available. Contact your local dealer for more information.

**SELECTION OF TRACK SHOES**

Select suitable track shoes to match the operating conditions.

**METHOD OF SELECTING SHOES**

Confirm the category from the list of uses in Table 1, then use Table 2 to select the shoe.

- Categories B and C are wide shoes, so there are limitations on their use. When using these shoes, check the precautions, then investigate and study fully the conditions of use to confirm that these shoes are suitable.

- When selecting the shoe width, select the narrowest shoe possible that will give the required flotation and ground pressure. If a wider shoe than necessary is used, the load on the track will increase, and this will cause the shoes to bend, links to crack, pins to break, shoe bolts to come loose, and various other problems

**Table 1: .**

Category	Use	Precautions when using
A	Rocky ground, riverbeds, normal soil	<ul style="list-style-type: none"> <li>● On rough ground with large obstacles such as boulders or fallen trees, travel at low speed.</li> </ul>
B	Normal soil, soft ground	<ul style="list-style-type: none"> <li>● These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees.</li> <li>● Travel at Hi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.</li> </ul>
C	Extremely soft ground (swampy ground)	<ul style="list-style-type: none"> <li>● Use the shoes only in places where the machine sinks and it is impossible to use A or B shoes.</li> <li>● These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees.</li> <li>● Travel at Hi speed only on flat ground, and if it is possible to avoid going over obstacles, shift down and travel at half speed in Lo.</li> </ul>

**Table 2:**

PC210-6K		PC210LC-6K		PC240NLC-6K		PC240LC-6K	
Specifications	Category	Specifications	Category	Specifications	Category	Specifications	Category
600 triple grouser	A	600 triple grouser	A	600 triple grouser	A	600 triple grouser	A
700 triple grouser	B	700 triple grouser	B	700 triple grouser	B	700 triple grouser	B
800 triple grouser	C	800 triple grouser	C	800 triple grouser	C	800 triple grouser	C
		900 triple grouser	C			900 triple grouser	C



## SELECTION OF BUCKET TEETH

Select suitable bucket teeth to match the operating conditions.

### METHOD OF SELECTING TEETH

The standard teeth can be used over a wide range, but according to the operating conditions, we recommend the following teeth.

#### Long-life teeth


- Jobsites where wear life is demanded, such as when loading hard rocks.
- Jobsites where no penetration is needed, such as when working with crushed rock after blasting or ripping.
- Jobsites where heavy-duty operations are carried out, such as hitting or pulling up rocks with the tips of the teeth.

#### Self-sharpening teeth


- Jobsites demanding penetration such as digging and loading sandy or clayey soil.

## HANDLING TRAPEZOIDAL BUCKET

This bucket is used to dig trapezoidal ditches on paddy fields, farmland ect. and can dig 3 types of ditch gradients (  $45^\circ$ ,  $40^\circ$  and  $38^\circ$ ) when a movable plate is attached.

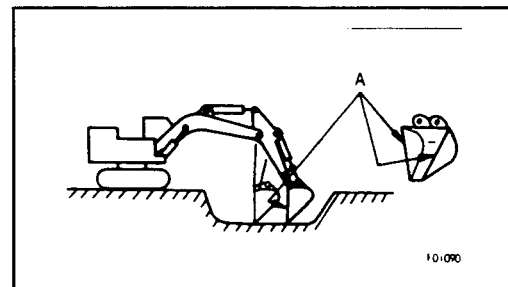


- The mounting position of the movable plate varies depending on whether the ditch gradient is  $45^\circ$ ,  $40^\circ$  or  $38^\circ$ .

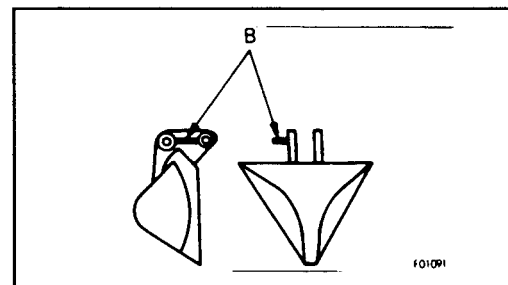

**How to perform excavation**


Operate the boom, the arm and the bucket to make the line (A) of the side-plate of the bucket vertical.

The guide plate (B) to check this position is installed beside the bucket pins. Accordingly, hold this plate horizontal when digging.

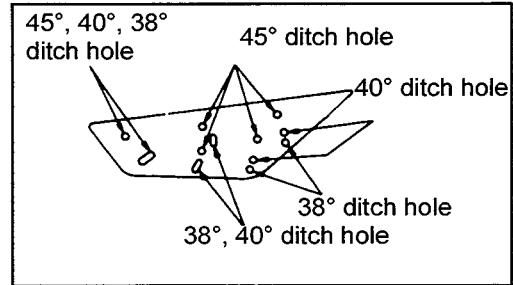


**Ditch gradient of 45°**

Attached the bucket only or the movable plate by selecting the related ditch holes. Perform digging by the above method.

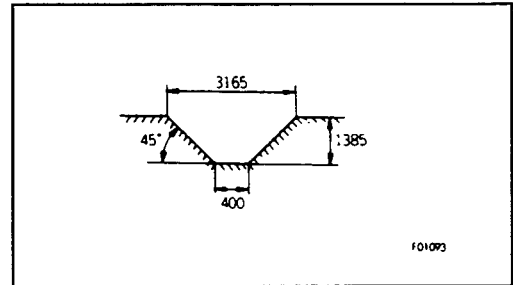


**Ditch gradient of 40° or 38°**

Attached the bucket only or the movable plate by selecting the related ditch holes. Perform digging by the above method.

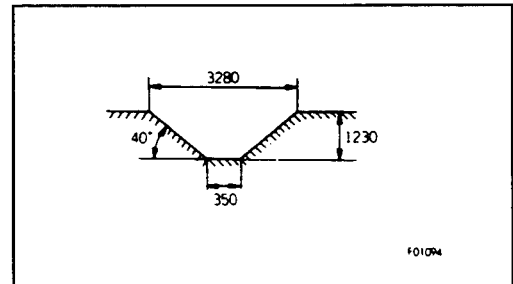

Even if the trapezoidal bucket is provided with the movable plate, always perform digging with the bucket side face perpendicular to the ground.

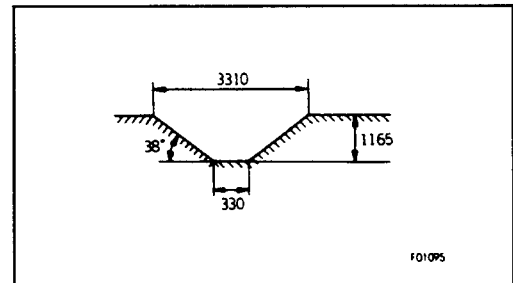


## USING THE EXTENSION ARM

When the extension arm is installed, be careful when retracting the arm because the bucket hits the foot of the boom cylinder or the lower frame of the swing circle. be careful at operation and transportation.

(A): Prohibited zone to be operated

- When the extension arm is equipped, use the narrow bucket (bucket width: 750 mm and 560 mm without the side-cutter. Since the standard bucket causes body instability and the bucket interferes with the operator's cab when retracting the arm, do not mount the standard bucket.
- Work in hard soil or rocky terrain will shorten the life of the extension arm, the boom and the arm. It is better not to use the extension arm in such conditions.

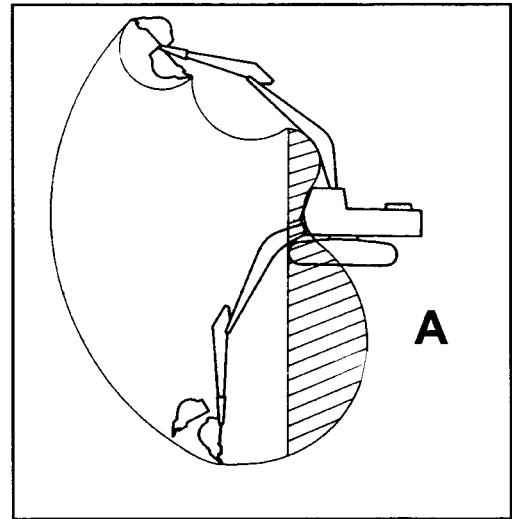

## HANDLING THE CLAMSHELL BUCKET

This bucket is used for digging and loading in side-ditches or in confined spaces.

### How to perform excavation

This clamshell digs by pushing the boom against the ground.

However, when performing bucket operations, perform digging while gradually raising the boom.

If the clamshell bucket rotates, relieve the bucket cylinder pressure then set the lever to the neutral position. This can temporarily stop the rotation.

### PRECAUTIONS WHEN USING.

- For safety, always avoid abrupt travelling, swing and stopping.
- Make the teeth of the bucket vertical in digging.
- Do not swing the bucket to crush the rock or to cut through soil.
- Do not use the bucket for hammering or pulling out piles etc.
- Before leaving the machine, open the bucket and lower it to the ground.

Remove the bucket from the arm when transporting the machine.

## EXTENDING MACHINE SERVICE LIFE

This section describes the necessary precautions to be observed when operating a hydraulic excavator equipped with an attachment.

### NOTICE

Select the attachment most suited to the machine body.


- The machine models to which attachments can be mounted vary. For selection of attachment and machine model, consult your Komatsu distributor.

## HYDRAULIC BREAKER


### MAIN FIELDS OF APPLICATION

- Crushed rock
- Demolition work
- Road construction


This attachment can be used for a wide range of work including demolition of buildings, breaking up of road surfaces, tunnel work, breaking up slag, rock crushing, and breaking operations in quarries.

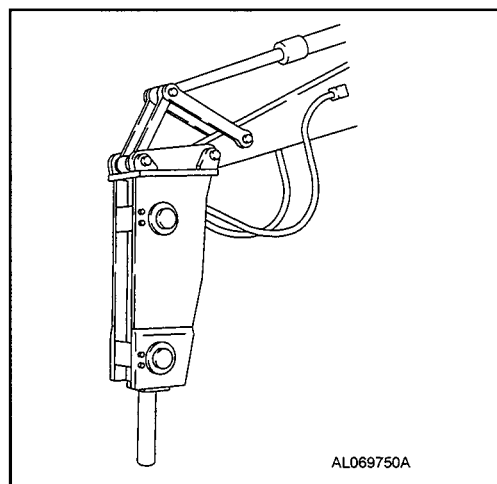


Keep the chisel pushed perpendicularly against the impact surface when carrying out breaking operations.

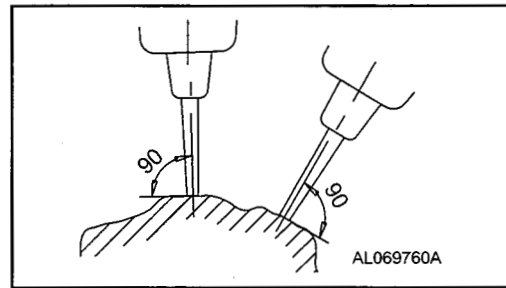


When applying impact, push the chisel against the impact surface and operate so that the chassis rises approx. 5 cm off the ground. Do not let the machine come further off the ground than necessary.

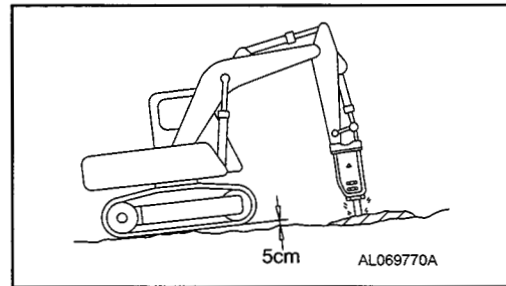


When applying continuous impact to the same impact surface, if the chisel does not penetrate or break the surface within 1 minute, change the point of impact and carry out breaking operations closer to the edge.

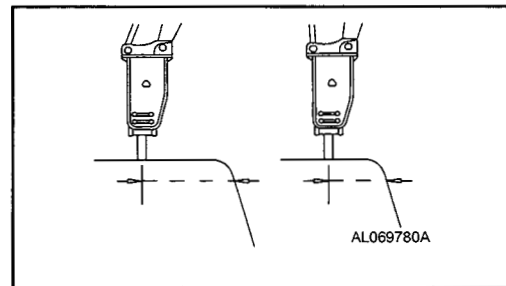

The direction of penetration of the chisel and the direction of the breaker body will gradually move out of line with each other, so always adjust the bucket cylinder to keep them aligned.

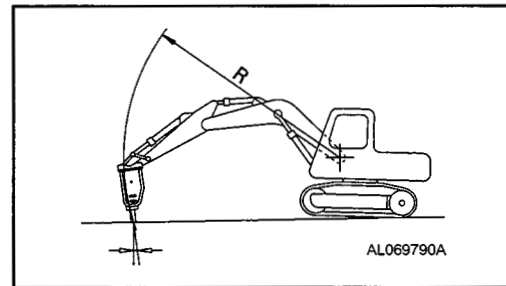

Always keep the chisel pressed against the impact surface properly to prevent using the impact force when there is no resistance.

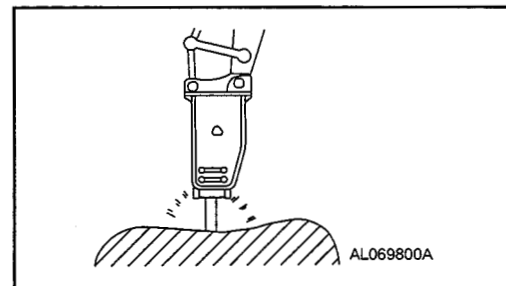


**MISTAKEN METHODS OF USE**


To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.

- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.


Using the mount to gather in pieces of rock

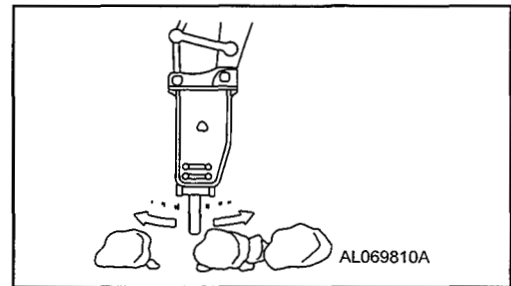


Operations using the swing force

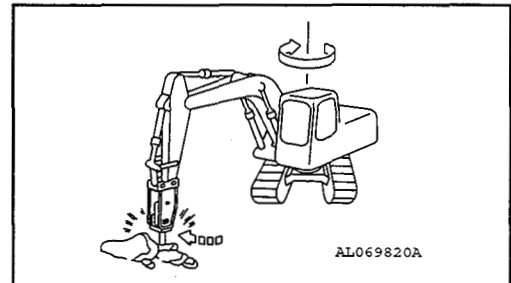


Moving the chisel while carrying out impacting operations

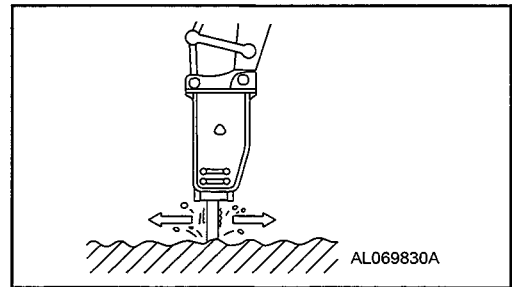


Holding the chisel horizontal or pointed up when carrying out impacting operations

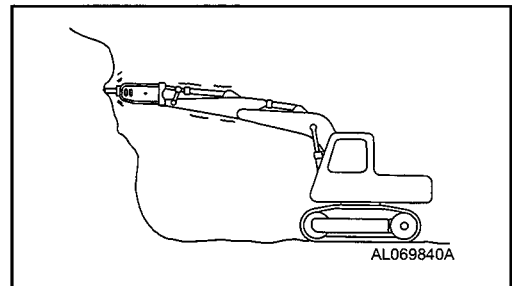


Twisting the chisel when it has penetrated the rock

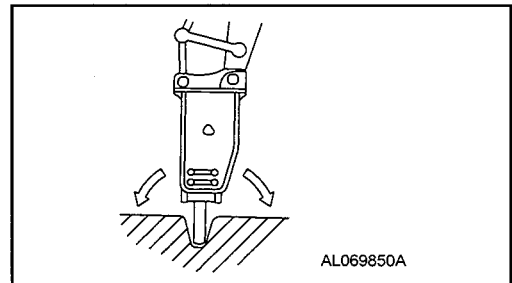

Pecking operations

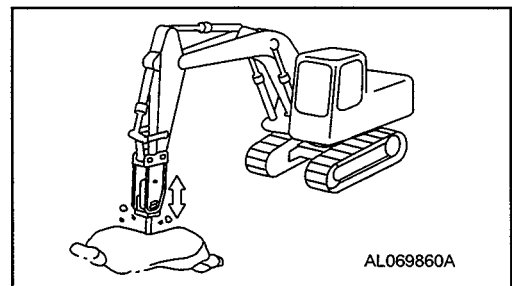

Extending the bucket cylinder fully and thrusting to raise the machine off the ground

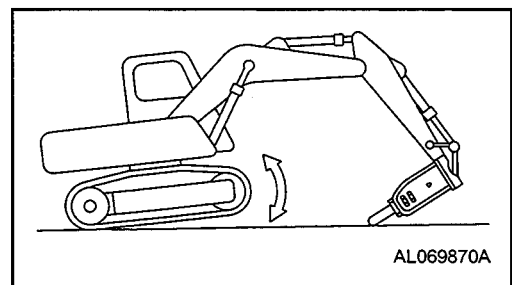

## POWER RIPPER

### MAIN FIELDS OF APPLICATIONS

- Road repair work
- Demolition work



This attachment can be used for a wide range of work including peeling off and crushing pavement roads, demolishing wooden houses and buildings, and crushing foundation and roadbeds.

### MISTAKEN METHODS OF USE

To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.


- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.

Impact operations using attachment

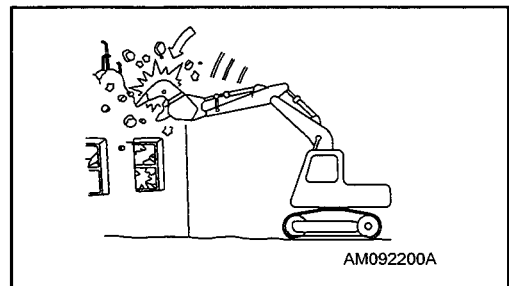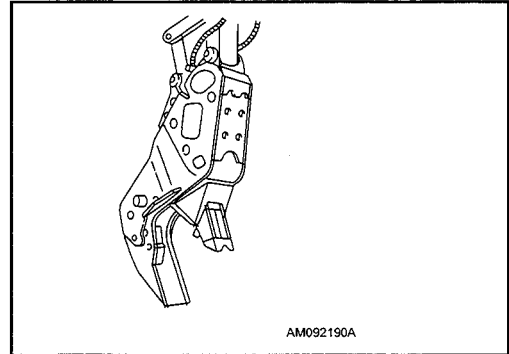





Impact operations using swing force

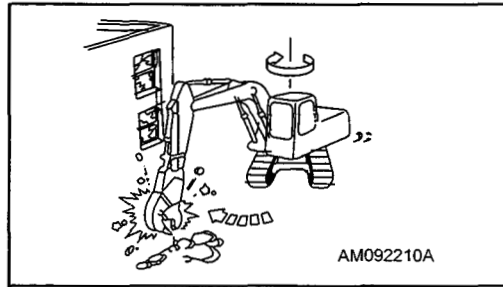

Overloading work equipment during lifting and loading operations

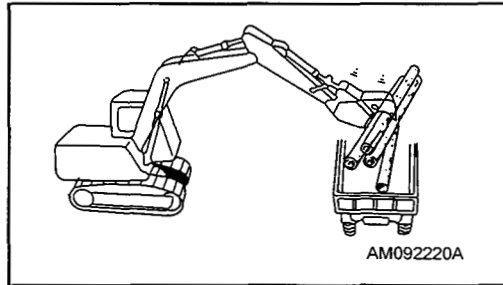

Operations using attachment to grip at an angle

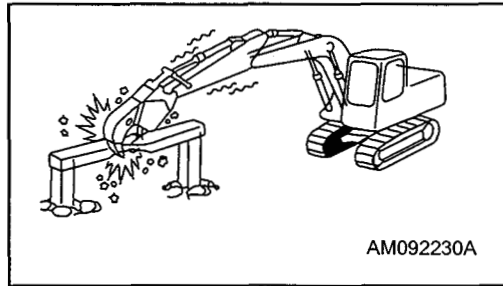

## FORK GRAB

### MAIN FIELDS OF APPLICATION


- Disposing of industrial waste
- Disposing of demolition waste

This can be used for a wide range of work including collecting or loading demolition waste materials and debris, timber, grass.


### MISTAKEN METHODS OF USE

To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.


- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.

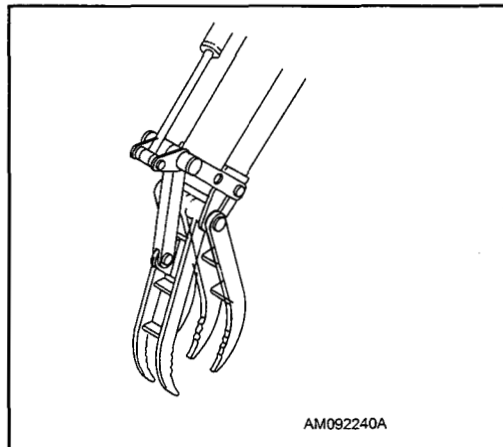


Operations using the swing force

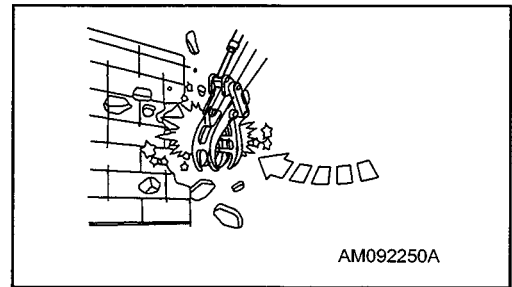


Operations using one side of work equipment

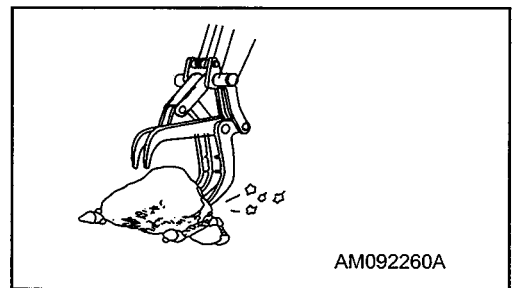

Pushing fork into ground surface to jack up and change direction of machine

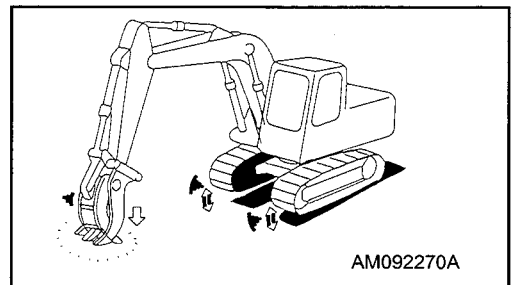

Impact operation with no load

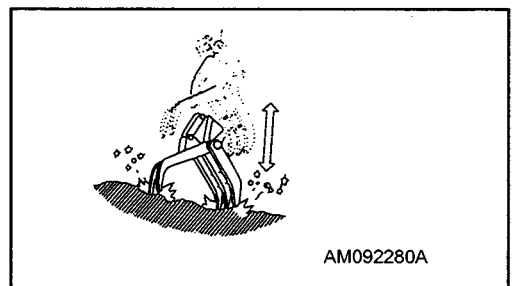

## GRAPPLE BUCKET

### MAIN FIELDS OF APPLICATION

- Demolition
- Disposing of industrial waste
- Forestry



This bucket is widely used for demolition including breaking-up work, grading and digging, clean-up work after natural disasters, dumping industrial waste, and forestry work, etc.

### MISTAKEN METHODS OF USE


To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.

Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.


Operations using the swing force

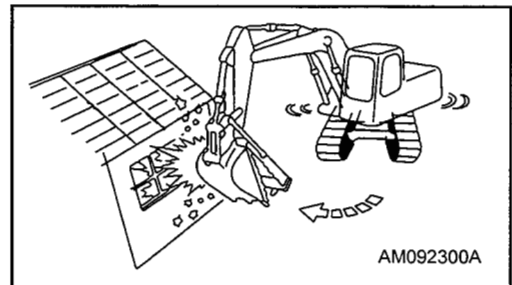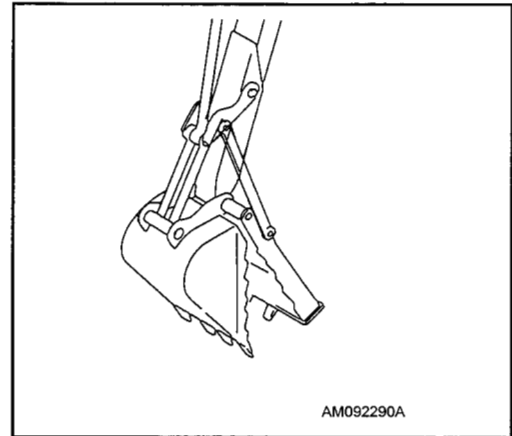


Grabbing an object using buckets on only one side

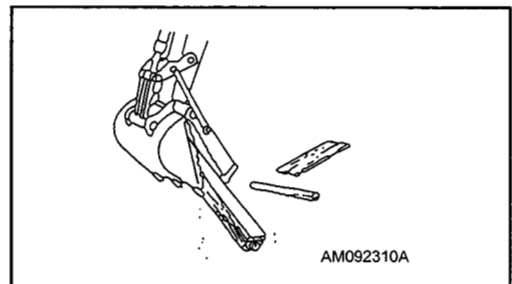

Closing the sub-bucket with the boom and arm fully extended.

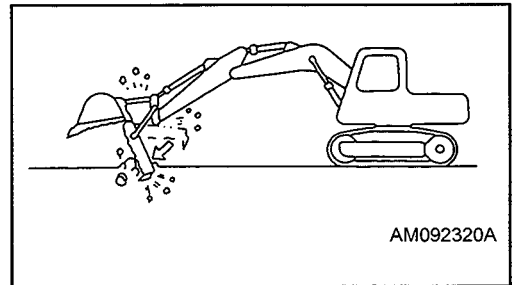

Impact operation with no load

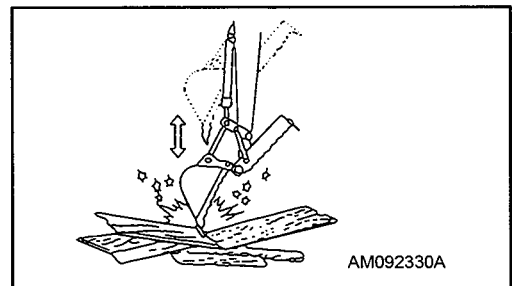

## SCRAP GRAPPLE

### MAIN FIELDS OF APPLICATION


- Disposal of rock or debris

This attachment is mounted to the arm end and used to grasp rock, debris etc. by opening and closing the claws (3 to 5) corresponding to the extension and retraction of the hydraulic cylinder.


### MISTAKEN METHODS OF USE

To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.


- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.

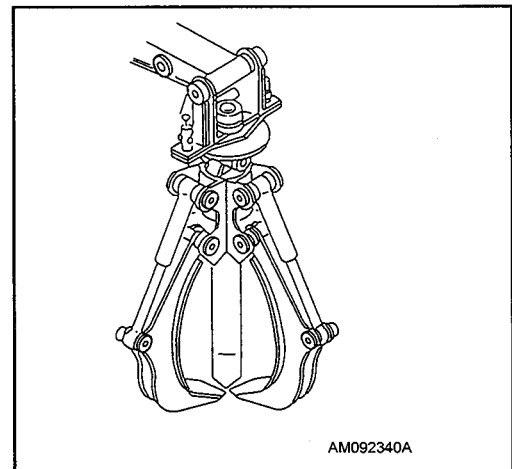


Operations using the swing force

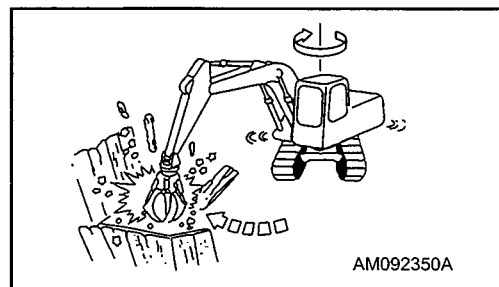


Operations using one side of work equipment

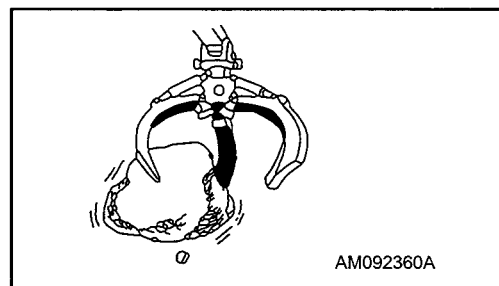

Catching and dragging with claw end

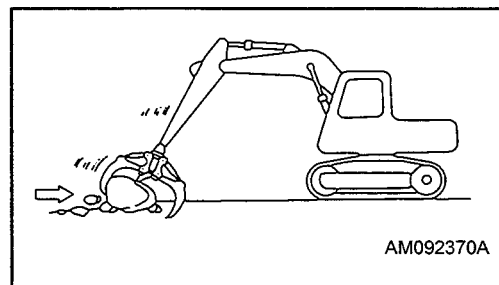

Gouging

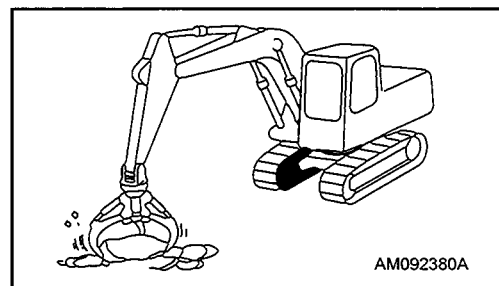

## CRUSHER & SMASHER

### MAIN FIELDS OF APPLICATION

- Demolition
- Road repair work

This is the optimum attachment for demolition of steel frame reinforced structures, and for crushing of concrete blocks and rock, etc. The unique blade shape provides heavy crushing power.




### MISTAKEN METHODS OF USE

To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.


- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.

Operations using cutting tip on one side only


Impact operation with no load

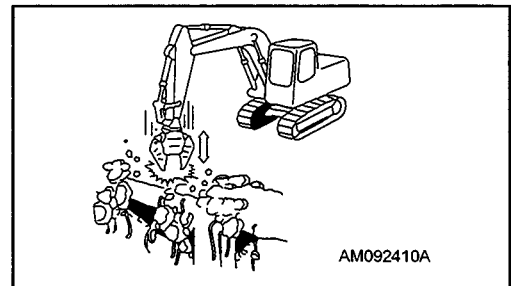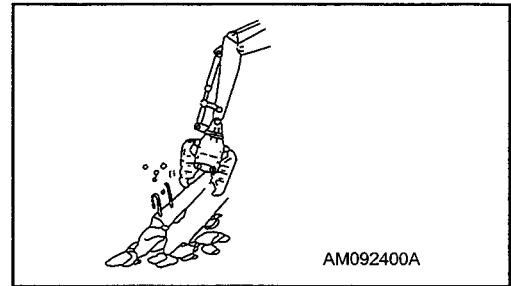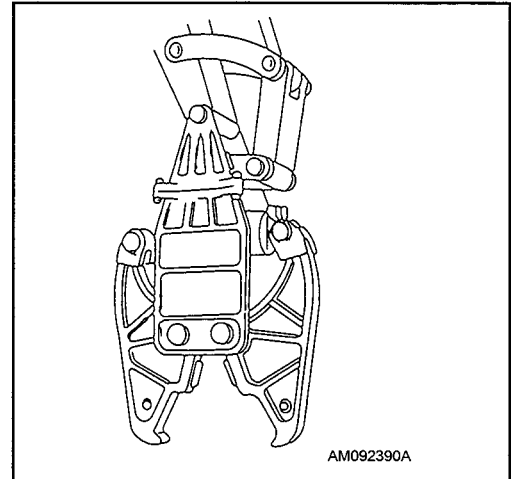

Twisting operations at end of cylinder stroke

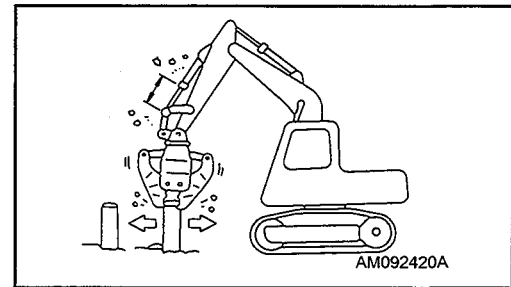

Sudden gripping and breaking operations

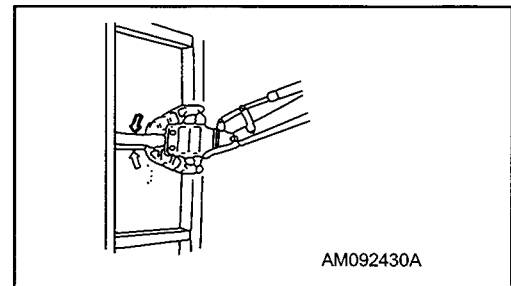

## HYDRAULIC PILE DRIVER

### MAIN FIELDS OF APPLICATION


- Foundation work
- River work
- Water supply and sewerage

This is a piling machine employing the hydraulic power source of the excavator. The machine features a long arm and a chuck unit. This facilitates operations such as driving and removing long piles, driving in piles at corners, etc.


### MISTAKEN METHODS OF USE

To ensure that the machine has a long life, and to ensure that operations are carried out in safety; do not operate the machine in any of the following ways.


- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.

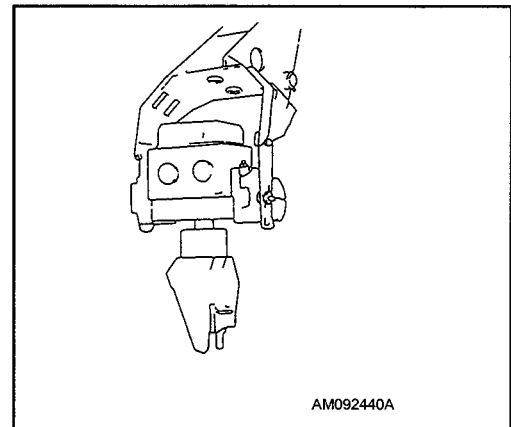


Forward or swing motion while grasping a pile

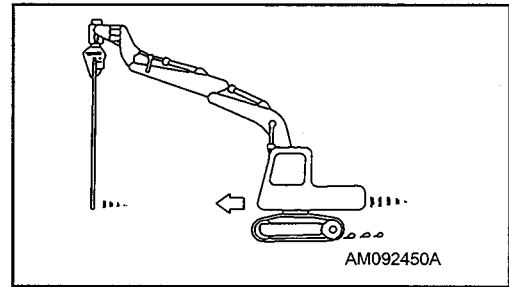


Lifting more than two piles at the same time

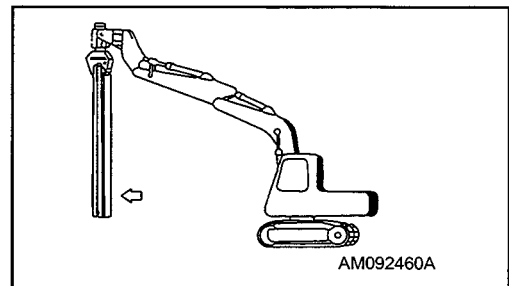

Work other than standard works

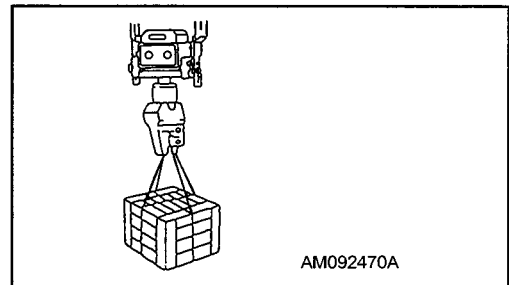

Loading or unloading a machine equipped with hydraulic pile driver

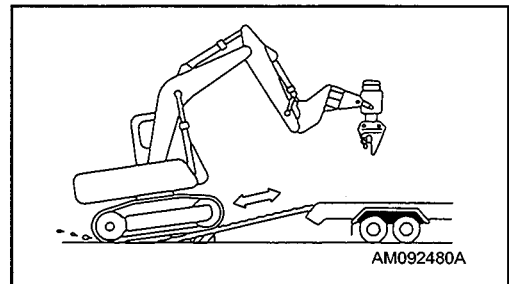



## HYDRAULIC EXCAVATOR WITH MULTIPURPOSE CRANE

### MAIN FIELDS OF APPLICATION

- Site preparation
- Water supply and sewerage
- River work
- Agricultural, civil engineering work



Crane operation can be carried out without removing the bucket. This machine is used for laying U section gutters and pipes for water supply and sewerage as well as river and canal work, agricultural, civil engineering work and site preparation.

### MISTAKEN METHODS OF USE


To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.

- Do not operate the cylinder to the end of its stroke. Always leave approx. 5 cm to spare.


Abrupt lever operation

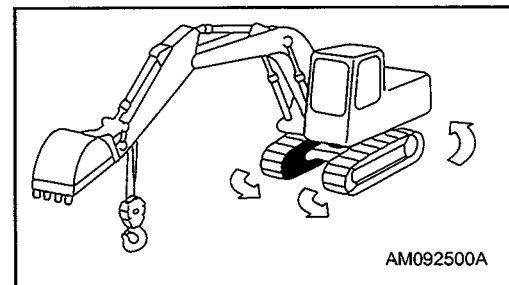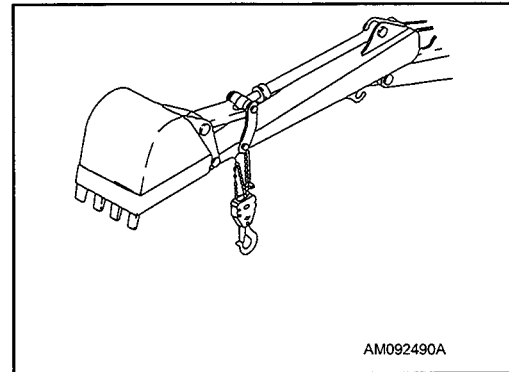


Travelling with a suspended load

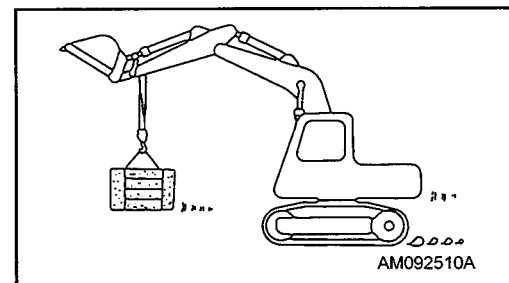

Operating other work equipment during crane operation

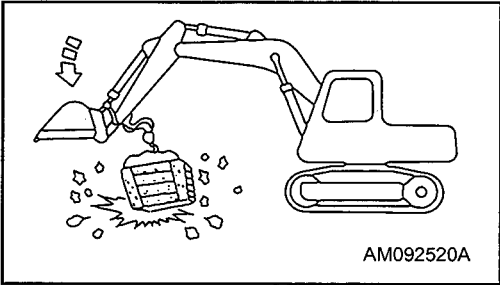

Excessive lengthening of wire rope

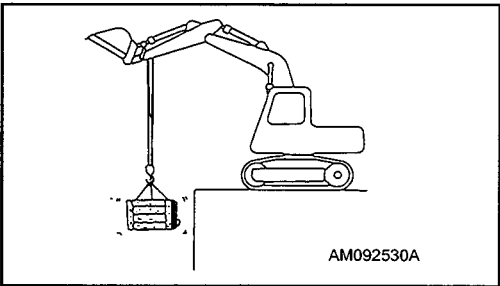


## 2-PC BOOM

### FEATURES OF 2-PIECE BOOM & ARM

This sketch shows format of two piece boom machine, including location of grease points (For 1st and 2nd booms only).

For starting procedure, refer to "OPERATION" on page 51

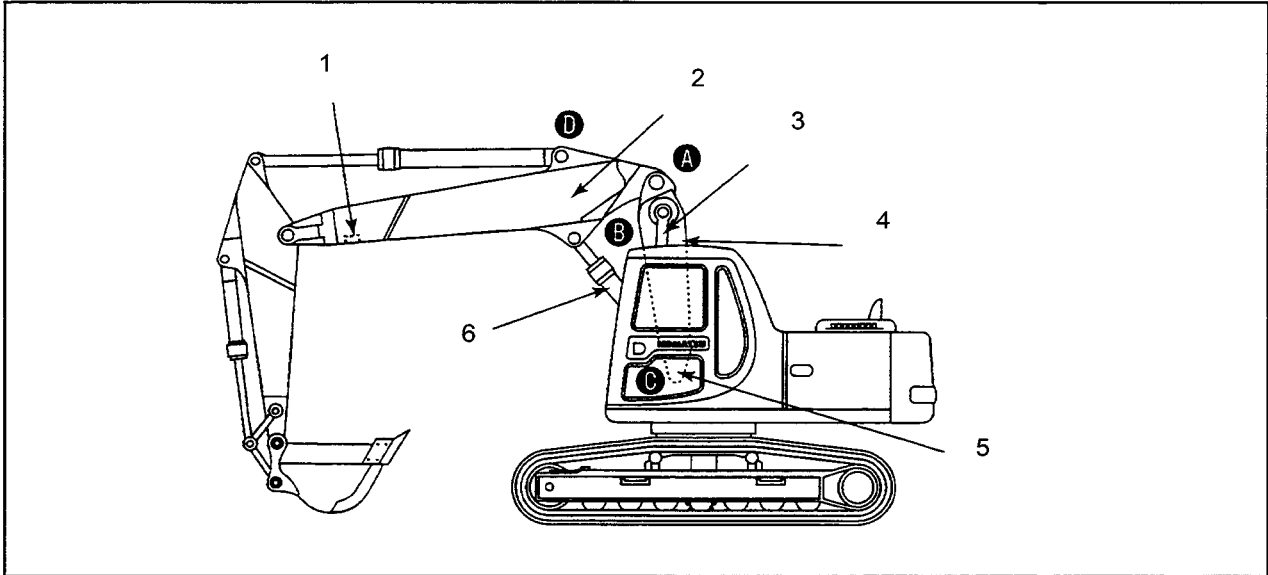

1.	Side of arm. 1 grease point located here for joint D
2.	Second boom
3.	First boom raise cilinder
4.	First boom
5.	Top of boom foot 5 grease points located here for joints A, B and C
6.	Second boom adjust cylinder

## OPERATION

### Explanation of Devices


Dual Purpose Control Pedal.

The additional pedal to the right of the travel levers controls two functions on a 2-Piece Boom machine:


In normal operation the pedal controls the operation of the second boom adjust cylinder. Pressing down on the front of the pedal pushes the second boom away from the cab, pressing down on the rear of the pedal pulls the second boom towards the cab.

The foot pedal is also used to operate the HCU circuit. To select HCU operation, operate the additional switch on the RH. stand console. Once HCU operation has been selected, it is controlled by the foot pedal in the same way as the mono-boom machine. The second boom adjust cylinder will not operate if HCU circuit operation is selected at this switch.


1	Dual purpose control pedal
A	Extend 2nd boom raise cylinder
B	Retract 2 nd boom raise cilinder

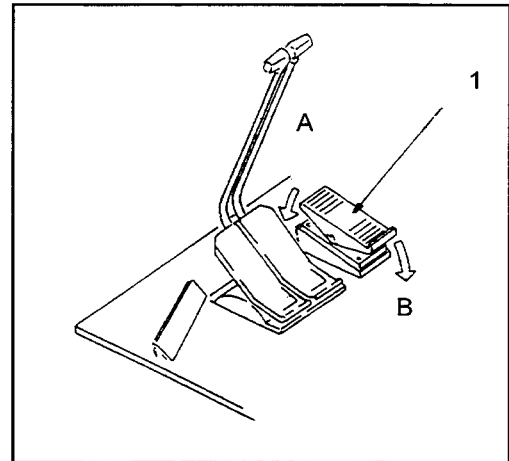

A	Press the rear of the pedal
B	Press the front of the pedal

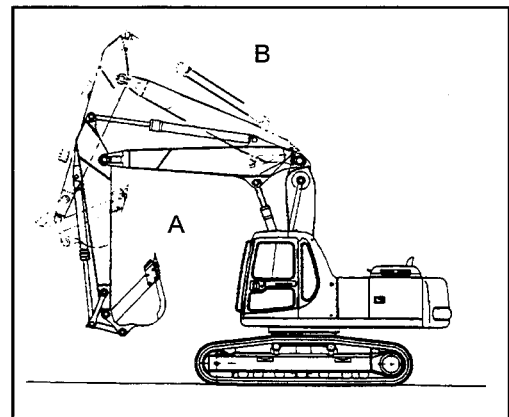


A	Five blank additional switches
B	"HCU Operation" Select switch. Colour : bleu

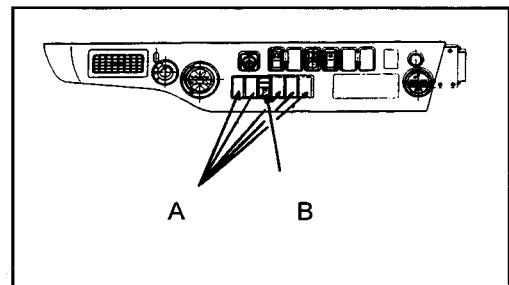


**BEFORE STORAGE POSTURE WHEN LEAVING MACHINE**

When leaving the operator's compartment, put the machine in the following posture for reasons of safety.

1. When leaving the machine for a long time see ,“LONG-TERM STORAGE” on page 141 for instructions on correct preparation of machine for long term storage.

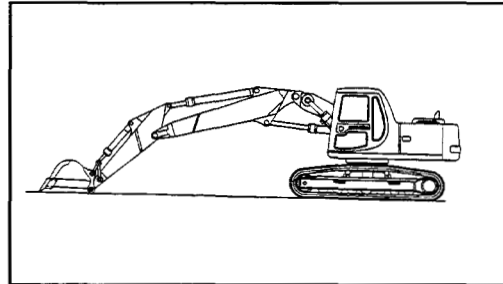

2. When leaving the machine for a short time.

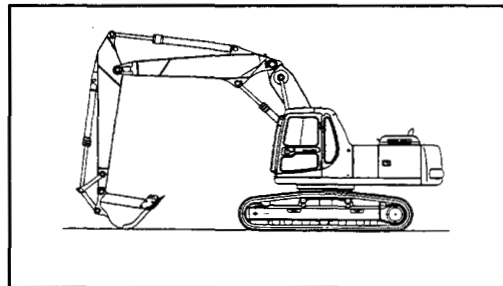


**TESTING AND ADJUSTING**

**INSPECTION AND MAINTENANCE**

To use the machine safely, and to prevent failures before they occur, always carry out checks before starting and periodic maintenance.

The locations for periodic inspection are as shown in the diagram below.

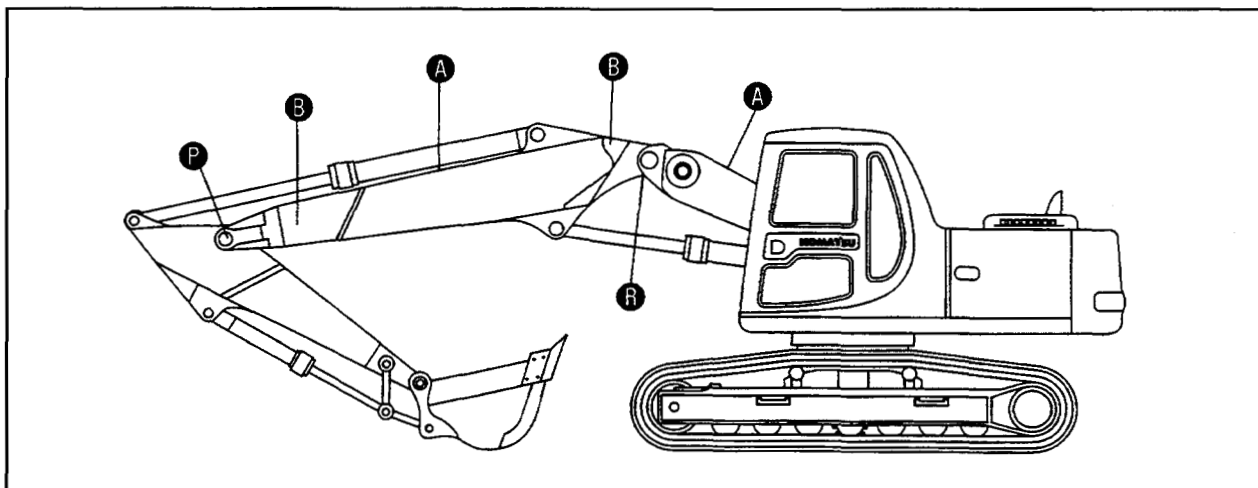

A	Cracks at end of weld (checks before starting).
P R	Play, wear of pins (every 1000 Hours).
B	Furrows in base metal (checks before starting).

**NOTICE**

**If any abnormality is found during inspection, please contact your Komatsu distributor.**


For details of inspection and maintenance items for the chassis other than those listed above, "MAINTENANCE" on page 153

**PERODIC MAINTENANCE**

- Changing the hydraulic oil

When changing the hydraulic oil, set the work equipment in the posture shown below.

- Hydraulic oil capacity for the 2-piece boom machine is 187 litres.
- Periodic maintenance required is the same as mono-boom machine.

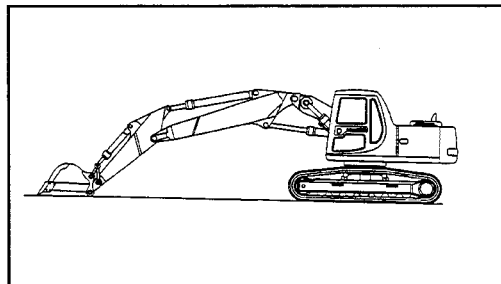

## TRANSPORTATION


### PROCEDURE FOR LOADING ON TO TRAILER

- Loading and unloading procedure.

Refer to "TRANSPORTATION" on page 133 for correct procedure for loading and unloading of machine.

(2-piece boom machine is same as mono-boom machine)

For information on loading and unloading machine for transportation "LOADING, UNLOADING WORK" on page 133

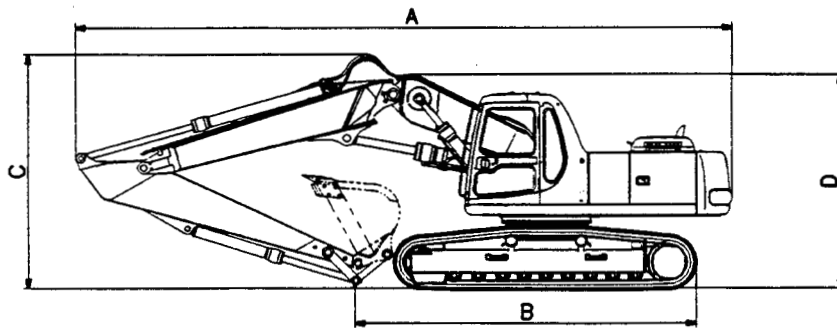

For transportation dimensions, refer to the below mentioned table.

	Braço	1800 mm	2400 mm	2930 mm
PC210-6	A	9440 mm	9380 mm	9315 mm
	B	6215 mm	5415 mm	4875 mm
	C	3085 mm	3155 mm	3190 mm
	D	2960 mm	3181 mm	3057 mm
PC210LC-6	A	9440 mm	9380 mm	9315 mm
	B	6405 mm	5605 mm	5065 mm
	C	3085 mm	3095 mm	3100 mm
	D	2960 mm	3181 mm	3057 mm

	Braço	2000 mm	2500 mm	3000 mm
PC240LC-6	A	9689 mm	9716 mm	9717 mm
	B	6692 mm	6258 mm	5487 mm
	C	3267 mm	3467 mm	3396 mm
	D	3032 mm	3178 mm	3122 mm


	Braço	2000 mm	2500 mm	3000 mm
PC240NLC-6	A	9689 mm	9716 mm	9717 mm
	B	6597 mm	6163 mm	5392 mm
	C	3267 mm	3467 mm	3396 mm
	D	3032 mm	3178 mm	3122 mm

## 6.4 M STRAIGHT BOOM

### BEFORE STORAGE POSTURE WHEN LEAVING MACHINE

When leaving the operator's compartment, put the machine in the following posture for reasons of safety.

1. When leaving the machine for a long time see "LONG-TERM STORAGE" on page 141 for instructions on correct preparation of machine for long term storage.

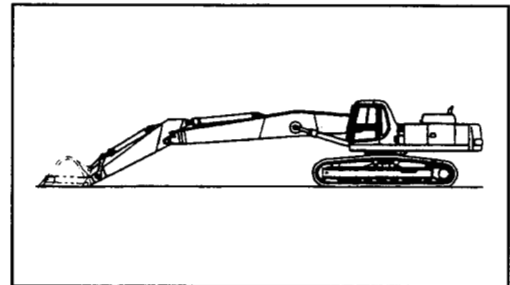


2. When leaving the machine for a short time.

If maintenance must be carried out with the work equipment raised, lower it on to a stand and check that it is in a stable condition before starting the maintenance.

If any load is suspended from work equipment, never leave the operator's seat or go close to the load.

Always make sure that the load is in stable condition.

Never sit or climb on the work equipment.

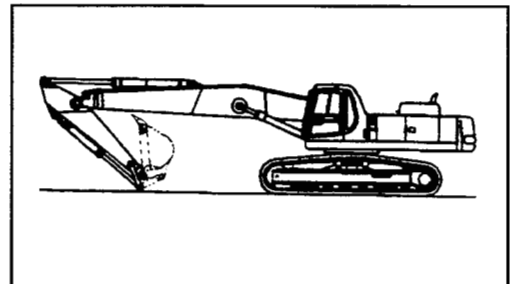





### PREVENTION OF DAMAGE TO WORK EQUIPMENT

To ensure long life on the work equipment, and to carry out work safely, avoid the following kinds of operation.


Do not travel at high speed on rough ground.

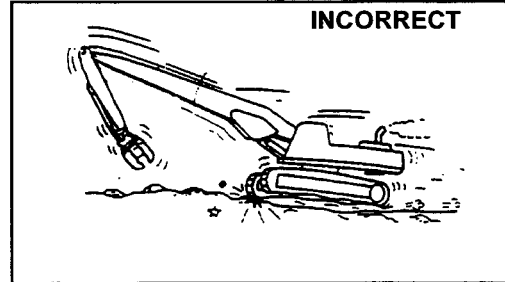


Do not operate the control levers suddenly.

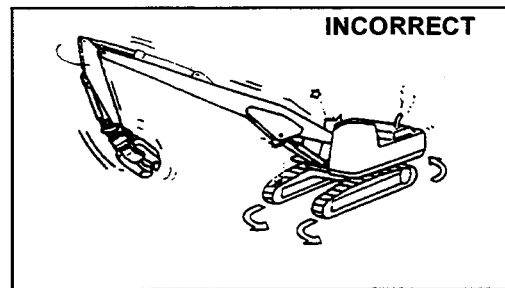


Do not start or stop the swing suddenly.

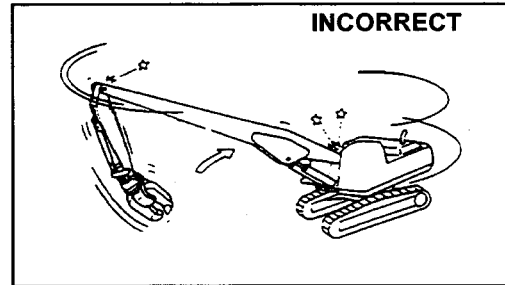


Do not use hitting force for demolition work.

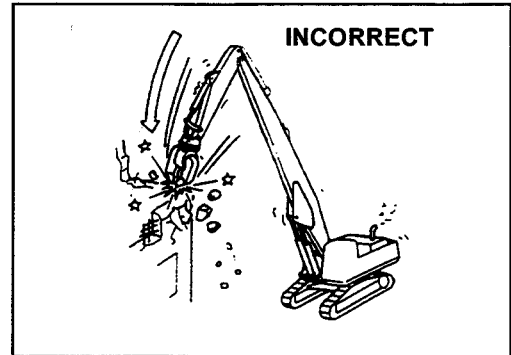


Do not use the swing force for hitting operations.

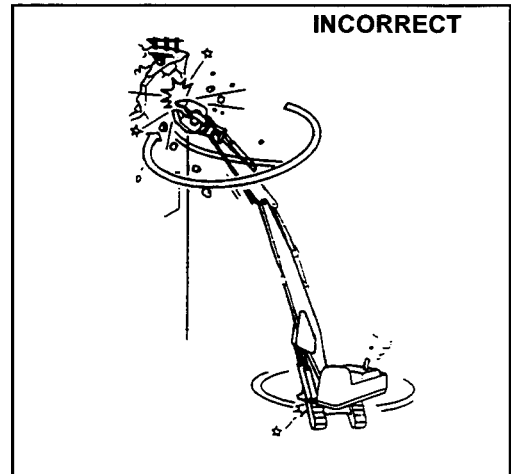


Do not use the dropping force of the machine for operations.

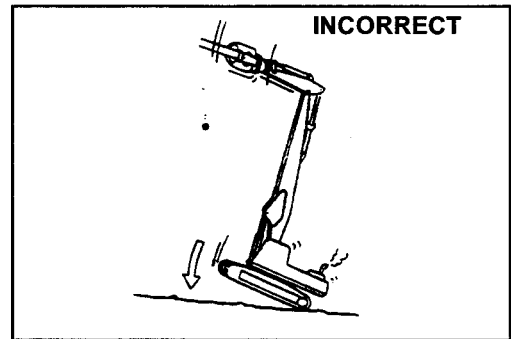


Do not use the travel force of the machine for operations.

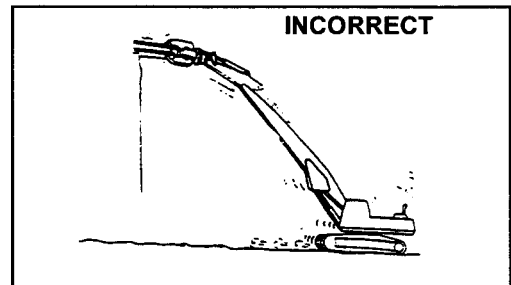


Do not pick up objects and raise or lower them.

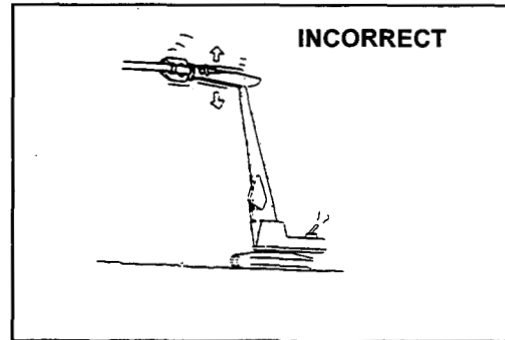


Do not use the jaw on one side only.

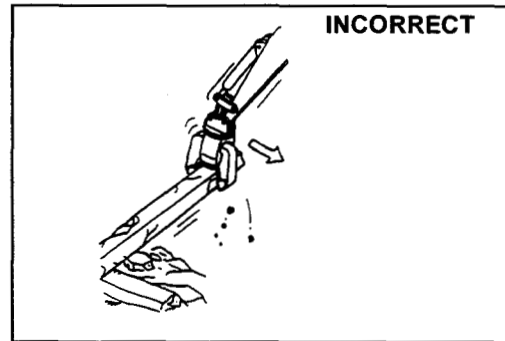

Do not use grip and crush at one blow.

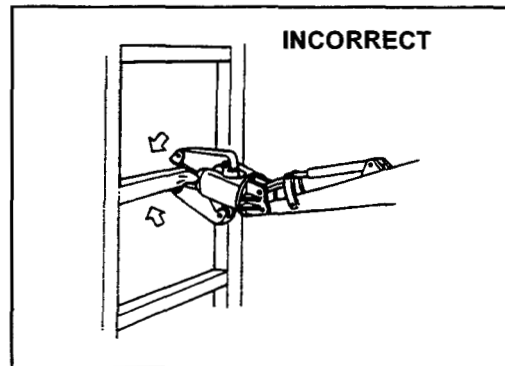

Do not travel with the work equipment raised.

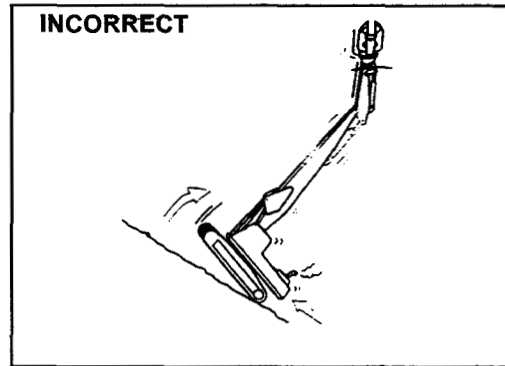


**TRANSPORTATION**

**PROCEDURE FOR LOADING ON TO TRAILER**

- Loading and unloading procedure.

Refer to "TRANSPORTATION" on page 133 for correct procedure for loading and unloading of machine.

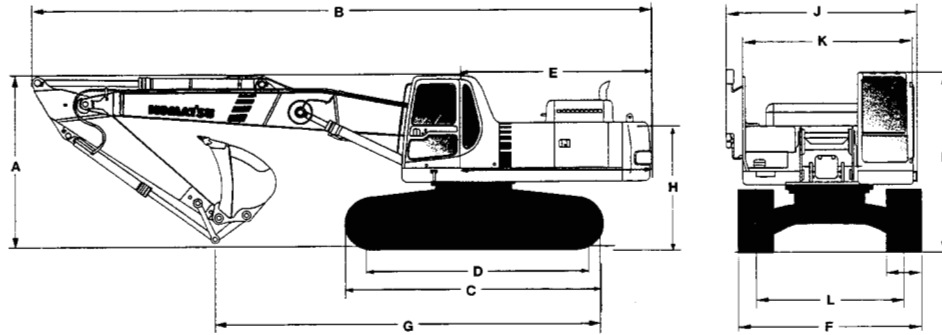

	Dimensions	PC210LC-6K straight boom	
		Arm	mm
A	Shipping height	1,8 m 2,4 m 2,9 m	2691 2768 2743
B	Shipping length	1,8 m 2,4 m 2,9 m	10222 10101 10094
G	Transport length	1,8 m 2,4 m 2,9 m	8080 7222 6511
C	Track length	-	4445
D	Track length on ground	-	3640
E	Tail swing radius	-	2780
F	Overall track width with 700 mm Overall track width with 800 mm Overall track width with 900 mm	- - -	3080 3180 3280
H	Machine tail height	-	2005
I	Overall height of cab	-	2905
J	Overall width of upper structure	-	3080
K	Overall width of machine body	-	2905
L	Track gauge	-	2380

**DataKom Publishing Corporation**  
 440 North Fairway Drive  
 Vernon Hills, IL 60061-8112 U.S.A.  
 Attn: Service Publications  
 Fax No. (847) 970-4186

**PROPOSAL FOR MANUAL OR CSS REVISION**

DATE:	FOR INTERNAL USE ONLY -- No. PMR					
P R O P O S E R	NAME OF COMPANY:	CITY:				
		STATE OR PROVINCE::				
	DEPARTMENT:	COUNTRY:				
	NAME:	FAX NO:				
MANUAL DESCRIPTION:	CSS PROGRAM - e.g: Lookup, Parts or Service					
MANUAL OR CSS CD NO:	CSS PROGRAM RELEASE VERSION:					
MANUAL OR CSS CD ISSUE DATE:	CSS BOOK PUBLISHER:					
BOOK DESCRIPTION MACHINE MODEL & S/N:						
MANUAL SECTION/PAGE NUMBERS OR CSS REFERENCE & PAGE NUMBERS:						
PROBLEM:						
<p>Attach photo or sketch.          If more space is needed, use another sheet.</p>						
<div style="border: 1px solid black; display: inline-block; padding: 2px;">FOR INTERNAL USE ONLY</div>						
CORRECTIVE ACTION:	<table border="1" style="width: 100%; height: 40px; border-collapse: collapse;"> <tr> <td style="width: 25%;"></td> <td style="width: 25%;"></td> <td style="width: 25%;"></td> <td style="width: 25%;"></td> </tr> </table>					
