https://truckmanualshub.com/

# PREFACE

1. This parts catalog covers the parts for crawler backhoe of Europe.

   The England specification in the Parts Catalog for B22(England Australia) (Issue No. 000Y00S2900) has been copied into the Parts Catalog for B22(Ammann) (Issue No. 000Y00S3010) witch will be published as a parts list of European standard specifications. In addition, this Parts list containing additional design change will be published in revised adition.

   <History>

   | | |
   |---|---|
   | 1ST Edition | pub No. : 000Y00S2900 |
   | [B22 (AMMANN)] | Issued : Sep., 1989 |
   | 1ST Edition | pub No. : 000Y00S3010 |
   | [B22 (ENGLAND / AUSTRALIA)] | Issued : Oct., 1990 |
   | 2ND Edition | pub No. : 000Y00S2901 |
   | [B22 (EUROPE)] | Issued : July., 1991 |

2. The Mounted engine of Model 3TN75L-RBVM(Q19830A)

3. Color

| Color | Munsel No. | Paint Code (16ℓ) | Spray |
|---|---|---|---|
| YANMAR Saffron Yellow | 1.0Y7.5/11 | 933110-91603 | 977620-30381 |
| YANMAR Cream White | 5.0Y9/1 | 981101-09614 | 981101-10140 |
| YANMAR Charcoal Gray | N2 | 981101-09516 | 977620-30371 |

4. As this parts catalog covers the specifications of several countries, the Fig. No. for the applicable countries is shown in the following way.

   a) When the applicable figure varies according to the appropriate country(s),

   Example 1 :

| COUNTRY | UK | AY | EP |
|---|---|---|---|
| Fif. No. | — | 19 | 18 |

← Abbreviation of the country concerned
UK : United Kingdom Model
AY : Ammann Model
EP : All Europe Model

↑ Fig. number on the page on which the country concerned is shown

In case of Example 1 above, AY(Ammann Model) is shown in Fig. 19 and EP(All Europe Model) in Fig. 19. UK(United Kingdom Model) is not applicable.

https://truckmanualshub.com/

b) When only one figure is available to be applied to one or more countries.

Example 2 :

| COUNTRY | UK | AY | EP | ← Abbreviation of the country concerned |
|---|---|---|---|---|
| APPLICATION | — | ○ | — | ← The country concerned is indicated by a circle (○). |

In case of Example 2 AY(Ammann Model) is the applicable country.

(Note)

When the figure or specification is common to all destinations, no indication is given.

https://truckmanualshub.com/

# SPECIFICATIONS

| Name | | | YANMAR CRAWLER BACHOE | |
|---|---|---|---|---|
| Model | | | B22-P[R] | B22[R] |
| Engine | Model | | Vertical 3-cylinder water-cooled diesel | |
| | Type | | 3TN75L-RB | |
| Dimensions | Transport length | mm | 4015 | |
| | Transport width | mm | 1360 | |
| | Transport height | mm | 2320 | |
| Std. bucket capacity | | $m^3$ | 0.06 (0.01 old) | |
| Std. bucket width(Outside) | | mm | 450 | |
| Max. digging depth | | mm | 2360 (2500 Blade) | |
| Max. cutting height | | mm | 4165 | 3720 |
| Max. dump height | | mm | 2960 | 2570 |
| Max. reach at ground level | | mm | 3990 | |
| Min. swing radius | | mm | 1465 (Boom swing 1080) | 1705 (Boom swing 1290) |
| Boom swing angle | | degree | Left 50 & Right 90 | |
| Max. digging force(Std. bucket) | | kgf | 1700 | |
| Travel speed | | km/h | 2.1 | |
| Gradability | | degree | 30 | |
| Average ground pressure | | $kgf/cm^2$ | 0.278 [0.263] | 0.294 [0.278] |
| Track shoe width(Std.) | | mm | 270 [280] | |
| Blade | Width×height | mm | 1360 × 300 | |
| | Capacity | $m^3$ | 0.123 | |
| Machine mass | | kg | 2100 [2050] | 2220 [2170] |

[ ] shows to the specification of rubber crowler.

https://truckmanualshub.com/

# 各部の名称
# PARTS NAME

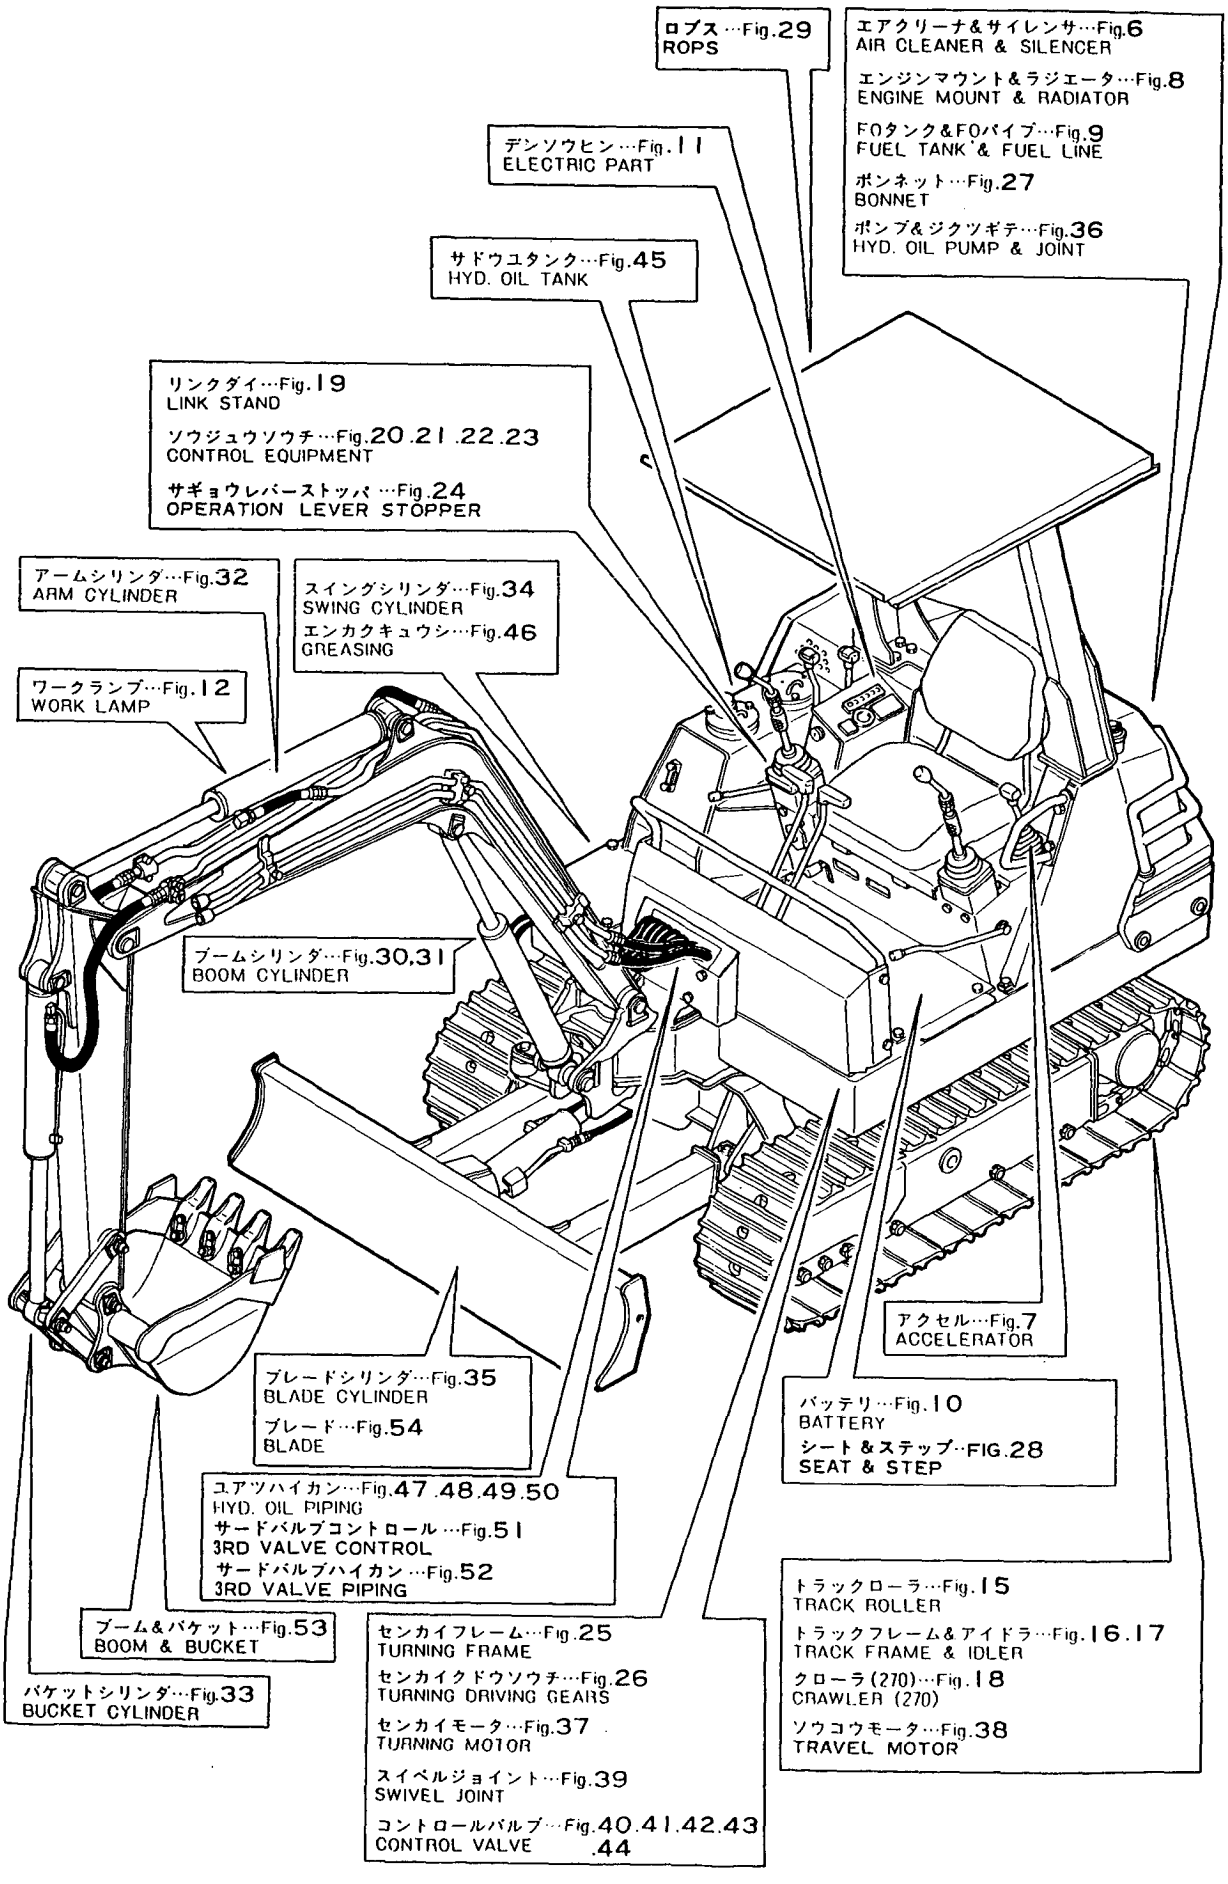

https://truckmanualshub.com/

# 配線図 WIRING DIAGRAM

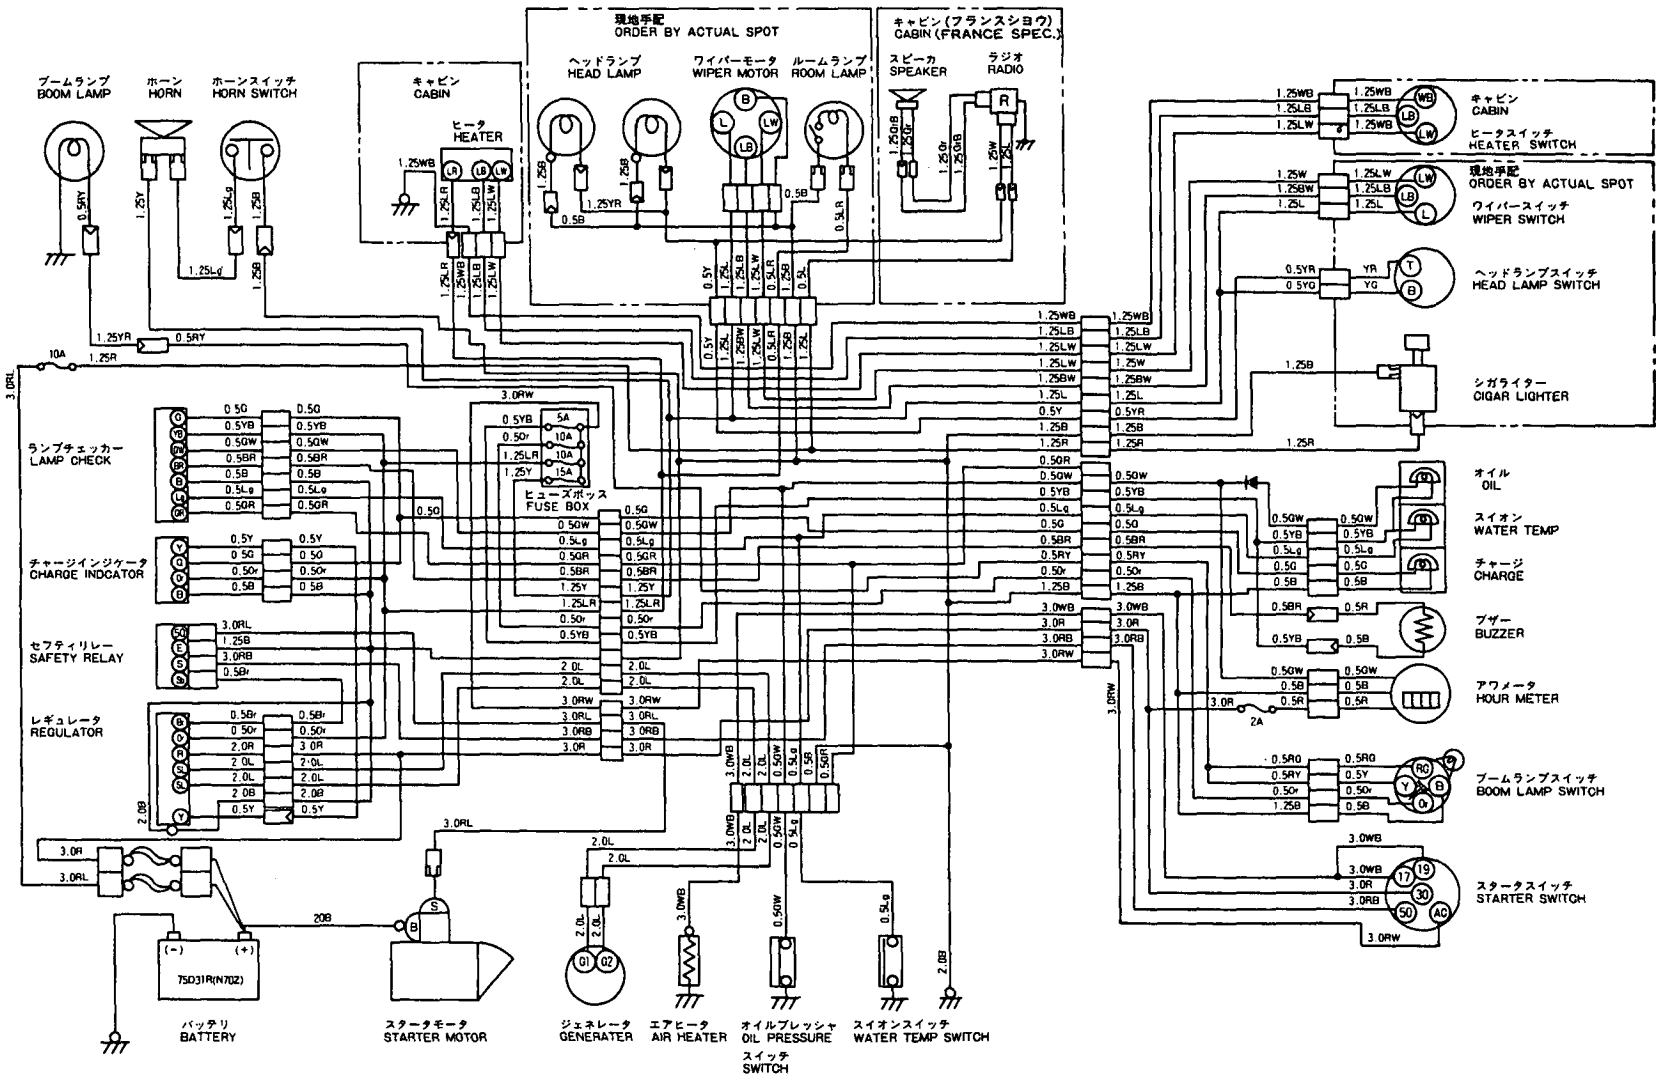


| | | |

```
1,1,,772143-03120,,"LAVEL ASSY",,1,,,,1,,,,,,,,,,,,
2,2,,172141-03100,,LABEL,,1,,,,1,,,,,,,,,,,,
3,2,,172143-03170,,LABEL,,1,,,,1,,,,,,,,,,,,
4,2,,172143-03180,,LABEL,,1,,,,1,,,,,,,,,,,,
5,2,,172141-03210,,"LABEL, SELECT",,1,,,,1,,,,,,,,,,,,
6,2,,172143-03210,,LABEL,,2,,,,2,,,,,,,,,,,,
7,2,,172143-03220,,LABEL,,1,,,,1,,,,,,,,,,,,
8,2,,172143-03230,,LABEL,,1,,,,1,,,,,,,,,,,,
9,2,,172143-03240,,LABEL,,1,,,,1,,,,,,,,,,,,
10,2,,172143-03260,,"LABEL, OPERATION",,1,,,,1,,,,,,,,,,,,
11,2,,172141-03271,,LABEL,,1,,,,1,,,,,,,,,,,,
12,2,,172143-03270,,LABEL,,1,,,,1,,,,,,,,,,,,
13,2,,172141-03281,,LABEL,,1,,,,1,,,,,,,,,,,,
14,2,,172137-03290,,"LABEL, NO.1 MARK",,1,,,,1,,,,,,,,,,,,
15,2,,172141-03291,,"LABEL, STRIPE(REAR)",,1,,,,1,,,,,,,,,,,,
16,2,,172137-03300,,"LABEL, TURNING LOCK",,1,,,,1,,,,,,,,,,,,
17A,2,,172148-03230,,LABEL,,1,,,,,,,,,,,,,,,,
17B,2,,172142-03451,,"LABEL, BOOM",,,,,,2,,,,,,,,,,,,
18,2,,172148-03140,,"LABEL, STRIPE(F)",,1,,,,1,,,,,,,,,,,,
19,2,,172141-03231,,LABEL,,2,,,,2,,,,,,,,,,,,
20,2,,172141-03360,,"LABEL, START SWITCH",,1,,,,1,,,,,,,,,,,,
21,2,,172138-03750,,"LABEL, GREASE",,1,,,,1,,,,,,,,,,,,
22,2,,172137-03780,,"LABEL, THROTTLE",,1,,,,1,,,,,,,,,,,,
23,2,,22857-300050,,"SCREW 3X 5",,4,,,,4,,,,,,,,,,,,
24,2,,933112-45300,,"LABEL, DANGER (A)",,1,,,,1,,,,,,,,,,,,
25,2,,172141-03530,,LABEL,,1,,,,1,,,,,,,,,,,,
26,2,,933112-50700,,"LABEL, OIL FEED",,1,,,,1,,,,,,,,,,,,
27,2,,933112-52500,,"LABEL, FUEL",,1,,,,1,,,,,,,,,,,,
28,2,,933112-54300,,"LABEL, AIR CLEANER",,1,,,,1,,,,,,,,,,,,
29,2,,933112-55700,,"LABEL, SUB-TANK",,1,,,,1,,,,,,,,,,,,
30,2,,933112-55800,,"LABEL, RADIATER",,1,,,,1,,,,,,,,,,,,
31,2,,933112-55900,,"LABEL, ANTI-FREEZING",,1,,,,1,,,,,,,,,,,,
32,2,,172141-03560,,LABEL,,1,,,,1,,,,,,,,,,,,
33,2,,172141-03570,,LABEL,,1,,,,1,,,,,,,,,,,,
34,2,,172141-03580,,LABEL,,1,,,,1,,,,,,,,,,,,
35,2,,172141-03330,,"LABEL, P.T.O.",,1,,,,1,,,,,,,,,,,,
36,2,,172148-03220,,LABEL,,1,,,,,,,,,,,,,,,,
37,2,,172141-03540,,LABEL,,1,,,,1,,,,,,,,,,,,
38,1,,172143-03250,,"LABEL,ADJUST CRAWLER",,1,,,,1,,,,,,,,,,,,
39,1,,172143-03820,,"LABEL(LPA 82",,1,,,,1,W,,,,72142357,*1990.11,,,,,,,,I
40,1,,172125-03840,,"LABEL(LWA 96",,1,,,,1,W,,,,72142357,*1990.11,,,,,,,,I
42,1,,933112-45500,,"LABEL, CAUTION",,1,,,,,,,,,,,,,,,,
43,1,,194340-65580,,LABEL,,1,,,,,,1,,,,,,,,,,
44,1,,22857-300050,,"SCREW 3X 5",,4,,,,,,1,,,,,,,,,,
```

# Fig. 1 メイバン(キャノピ) LABEL (CANOPY SPEC.)

https://quickmanuals.hub.com/

| COUNTRY | AY | UK | EP | UK(OPT |
|---|---|---|---|---|
| Fig No. | 1 | 2 | 1 | 3 |

| COUNTRY APPLI-CATION | AY | UK | EP |
|---|---|---|---|
| | ○ | – | – |

17A

| COUNTRY APPLI-CATION | AY | UK | EP |
|---|---|---|---|
| | ○ | – | – |

36

| COUNTRY APPLI-CATION | AY | UK | EP |
|---|---|---|---|
| | – | – | ○ |

1 inc.2～37

17B

17B

機体NO. 打刻位置
MACHINE SERIAL NO.
IS STAMPED INTO
THIS LOCATION

26 3 14 21 23 18 42

D E F 25 A C 34 19 13

H B I 32 9 24 15

Ⓐ 16 8 G 7 38 2

Ⓑ 6

Ⓒ 10 35

Ⓓ 4 20 5

Ⓔ 22

Ⓕ 27

Ⓖ 40 39

Ⓗ 12 29 サブタンク SUB-TANK 28 エアクリーナ AIR CLEANER 31 30 ラジエータ RADIATOR

Ⓘ 37 44 33 11 19 43

1A,1,,772143-03700,,"LABEL ASSY",,,,1,,,,,,,,,,,,,,
1B,1,,772143-03701,,"LABEL(UK) SET,CANOPY",,,,,,1,,1,,,,,,,,,,
2,2,,772143-03170,,"LABEL ASSY, ENGLISH",,,,1,,1,,2,,,,,,,,,,
3,3,,172143-03310,,LABEL,,,,1,,1,,,,,,,,,,,,
4,3,,172141-03450,,"LABEL, RESERVER(C)",,,,1,,1,,,,,,,,,,,,
5,3,,172141-03440,,LABEL,,,,1,,1,,,,,,,,,,,,
6,3,,172141-03490,,"LABEL, PROTECTOR",,,,2,,2,,,,,,,,,,,,
7,3,,172141-03420,,"LABEL, GREASING",,,,1,,1,,,,,,,,,,,,
8,3,,172141-03430,,LABEL,,,,1,,1,,,,,,,,,,,,
9,3,,172519-03770,,LABEL,,,,1,,1,,,,,,,,,,,,
10,3,,172141-03470,,LABEL,,,,1,,1,,,,,,,,,,,,
11,3,,172122-03740,,"LABEL, GREASE",,,,1,,1,,,,,,,,,,,,
12,3,,22857-300050,,"SCREW 3X 5",,,,4,,4,,,,,,,,,,,,
13,3,,172141-03460,,"LABEL, (D)",,,,1,,1,,,,,,,,,,,,
14,3,,933112-50300,,"LABEL, OIL FEED",,,,1,,1,,,,,,,,,,,,
15,3,,933112-52100,,"LABEL, FUEL",,,,1,,1,,,,,,,,,,,,
16,3,,172125-03950,,"LABEL, AIR CLEANER",,,,1,,1,,,,,,,,,,,,
17,3,,121120-44800,,"LABEL, RADIATOR",,,,1,,1,,,,,,,,,,,,
18,3,,124764-44920,,"LABEL, ANTI-FREEZING",,,,1,,1,,,,,,,,,,,,
19,3,,172122-03912,,LABEL,,,,1,,1,,,,,,,,,,,,
20,3,,124764-44810,,"LABEL, SUB-TANK",,,,1,,1,,,,,,,,,,,,
21,2,,172141-03540,,LABEL,,,,1,,1,,,,,,,,,,,,
22,2,,172141-03210,,"LABEL, SELECT",,,,1,,1,,,,,,,,,,,,
23,2,,172143-03260,,"LABEL, OPERATION",,,,1,,1,,,,,,,,,,,,
24,2,,172141-03271,,LABEL,,,,1,,1,,,,,,,,,,,,
25,2,,172141-03281,,LABEL,,,,1,,1,,,,,,,,,,,,
26,2,,172137-03290,,"LABEL, NO.1 MARK",,,,1,,1,,,,,,,,,,,,
27,2,,172141-03291,,"LABEL, STRIPE(REAR)",,,,1,,1,,,,,,,,,,,,
28,2,,172137-03300,,"LABEL, TURNING LOCK",,,,1,,1,,,,,,,,,,,,
29A,2,,172148-03230,,LABEL,,,,1,,,,,,,,,,,,,,
29B,2,,172142-03451,,"LABEL, BOOM",,,,,,2,,,,,,,,,,,,
30,2,,172148-03140,,"LABEL, STRIPE(F)",,,,1,,1,,,,,,,,,,,,
31,2,,172141-03231,,LABEL,,,,2,,2,,,,,,,,,,,,
32,2,,172141-03360,,"LABEL, START SWITCH",,,,1,,1,,,,,,,,,,,,
33,2,,172137-03780,,"LABEL, THROTTLE",,,,1,,1,,,,,,,,,,,,
34,2,,172141-03530,,LABEL,,,,1,,1,,,,,,,,,,,,
35,2,,172148-03220,,LABEL,,,,1,,,,,,,,,,,,,,
36,2,,172141-03560,,LABEL,,,,1,,1,,,,,,,,,,,,
37,2,,172141-03570,,LABEL,,,,1,,1,,,,,,,,,,,,
38,2,,172141-03580,,LABEL,,,,1,,1,,,,,,,,,,,,
39,1,,172141-03500,,"LABEL,ADJUST CRAWLER",,,,1,,1,,3,,,,,,,,,,

# Fig. 2 メイバン(キャノピ) LABEL (CANOPY SPEC.)

https://tractormanualshub.com/

| COUNTRY | AY | UK | EP | UK(OPT |
|---|---|---|---|---|
| Fig No. | 1 | 2 | 1 | 3 |

1 inc.2～38

2 inc.3～20

| COUNTRY APPLI-CATION | AY | UK | EP |
|---|---|---|---|
| 29A | – | ○ | – |

| COUNTRY APPLI-CATION | AY | UK | EP |
|---|---|---|---|
| 35 | – | ○ | – |

| COUNTRY APPLI-CATION | AY | UK | EP |
|---|---|---|---|
| | – | – | ○ |

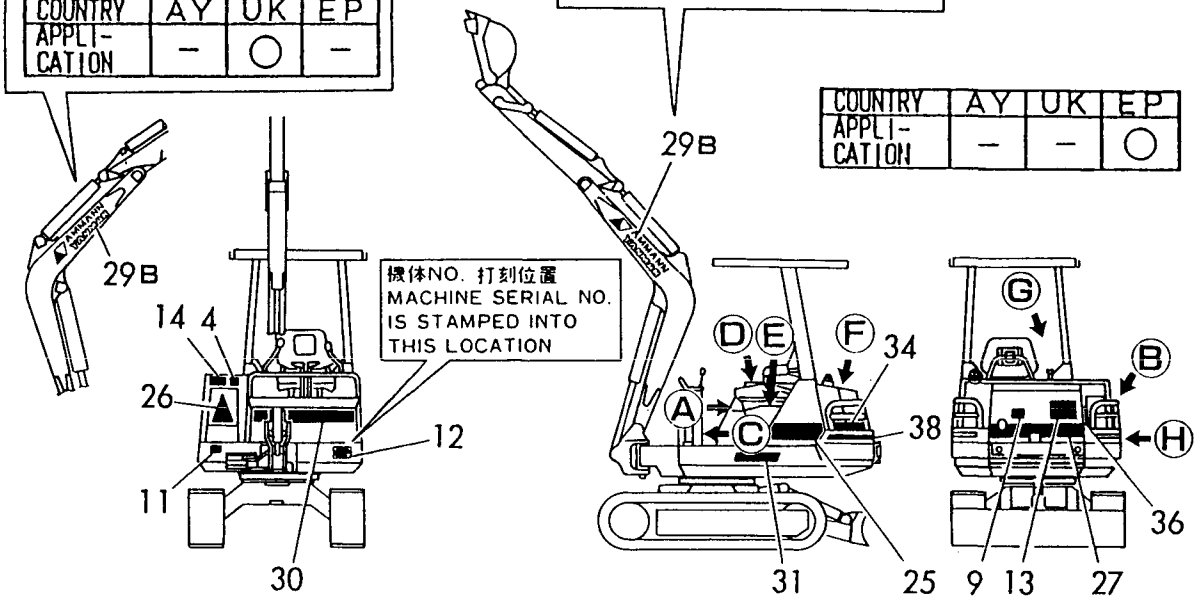


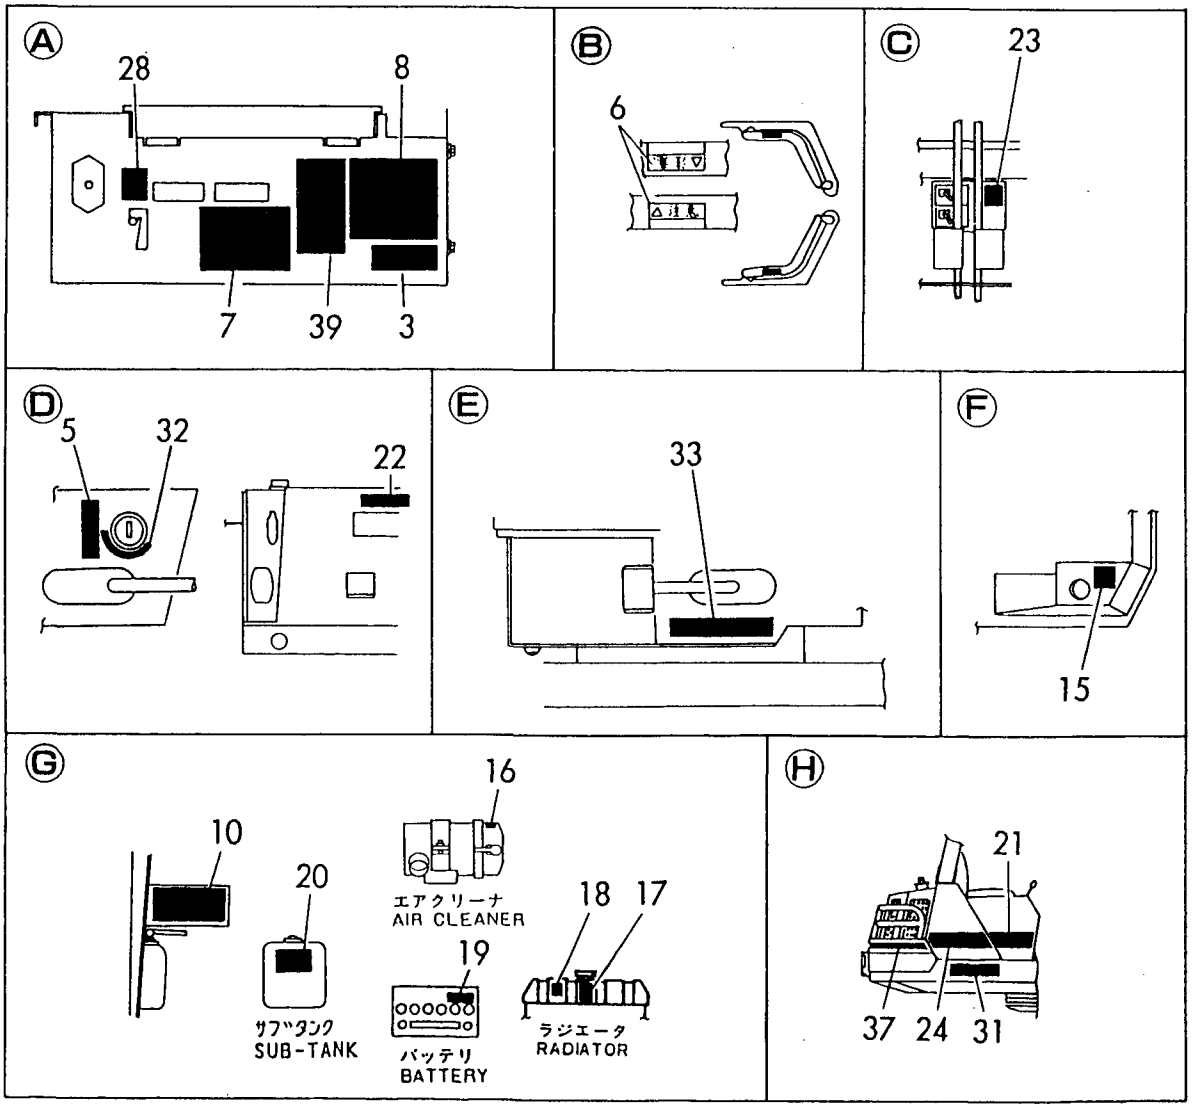

```
1,1,,772143-03170,,"LABEL ASSY, ENGLISH",,,,1,,,1,,,,,,,,,,
2,2,,172143-03310,,LABEL,,,,1,,,,,,,,,,,,,,
3,2,,172141-03450,,"LABEL, RESERVER(C)",,,,1,,,,,,,,,,,,,
4,2,,172141-03440,,LABEL,,,,1,,,,,,,,,,,,,,
5,2,,172141-03490,,"LABEL, PROTECTOR",,,,2,,,,,,,,,,,,,
6,2,,172141-03420,,"LABEL, GREASING",,,,1,,,,,,,,,,,,,,
7,2,,172141-03430,,LABEL,,,,1,,,,,,,,,,,,,,
8,2,,172519-03770,,LABEL,,,,1,,,,,,,,,,,,,,
9,2,,172141-03470,,LABEL,,,,1,,,,,,,,,,,,,,
10,2,,172122-03740,,"LABEL, GREASE",,,,1,,,,,,,,,,,,,
11,2,,22857-300050,,"SCREW 3X 5",,,,4,,,,,,,,,,,,,
12,2,,172141-03460,,"LABEL, (D)",,,,1,,,,,,,,,,,,,
13,2,,933112-50300,,"LABEL, OIL FEED",,,,1,,,,,,,,,,,,,
14,2,,933112-52100,,"LABEL, FUEL",,,,1,,,,,,,,,,,,,
15,2,,172125-03950,,"LABEL, AIR CLEANER",,,,1,,,,,,,,,,,,,
16,2,,121120-44800,,"LABEL, RADIATOR",,,,1,,,,,,,,,,,,,
17,2,,124764-44920,,"LABEL, ANTI-FREEZING",,,,1,,,,,,,,,,,,,
18,2,,172122-03912,,LABEL,,,,1,,,,,,,,,,,,,,
19,2,,124764-44810,,"LABEL, SUB-TANK",,,,1,,,,,,,,,,,,,
20,1,,172141-03500,,"LABEL,ADJUST CRAWLER",,,,1,,,,2,,,,,,,,,
21,1,,172143-03820,,"LABEL(LPA 82",,,,,,1,,3,,,,,,,,,,
22,1,,172125-03840,,"LABEL(LWA 96",,,,,,1,,3,,,,,,,,,,
23,1,,194340-65580,,LABEL,,1,,,,,3,,,,,,,,,,
```

# Fig. 3 メイバン(UKカイソウ)(オプション) LABEL (UK REMODELING)(OPTIONAL)

https://tractormanualshub.com/

| COUNTRY | AY | UK | EP | UK(OPT |
|---|---|---|---|---|
| Fig No. | 1 | 2 | 1 | 3 |

1 inc.2～20

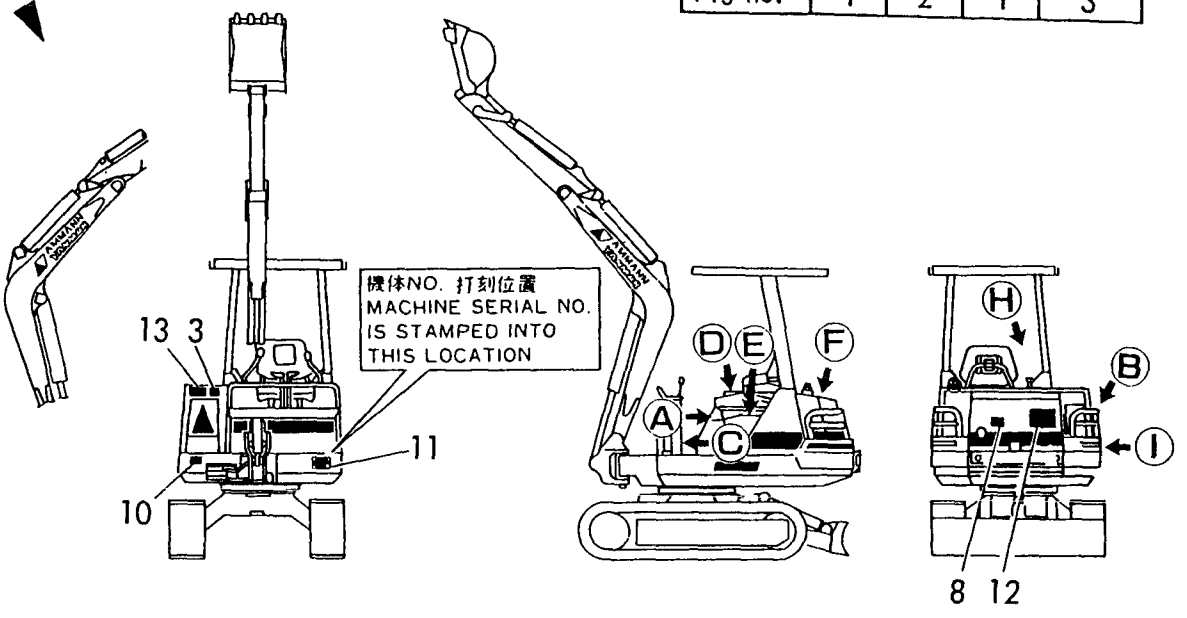


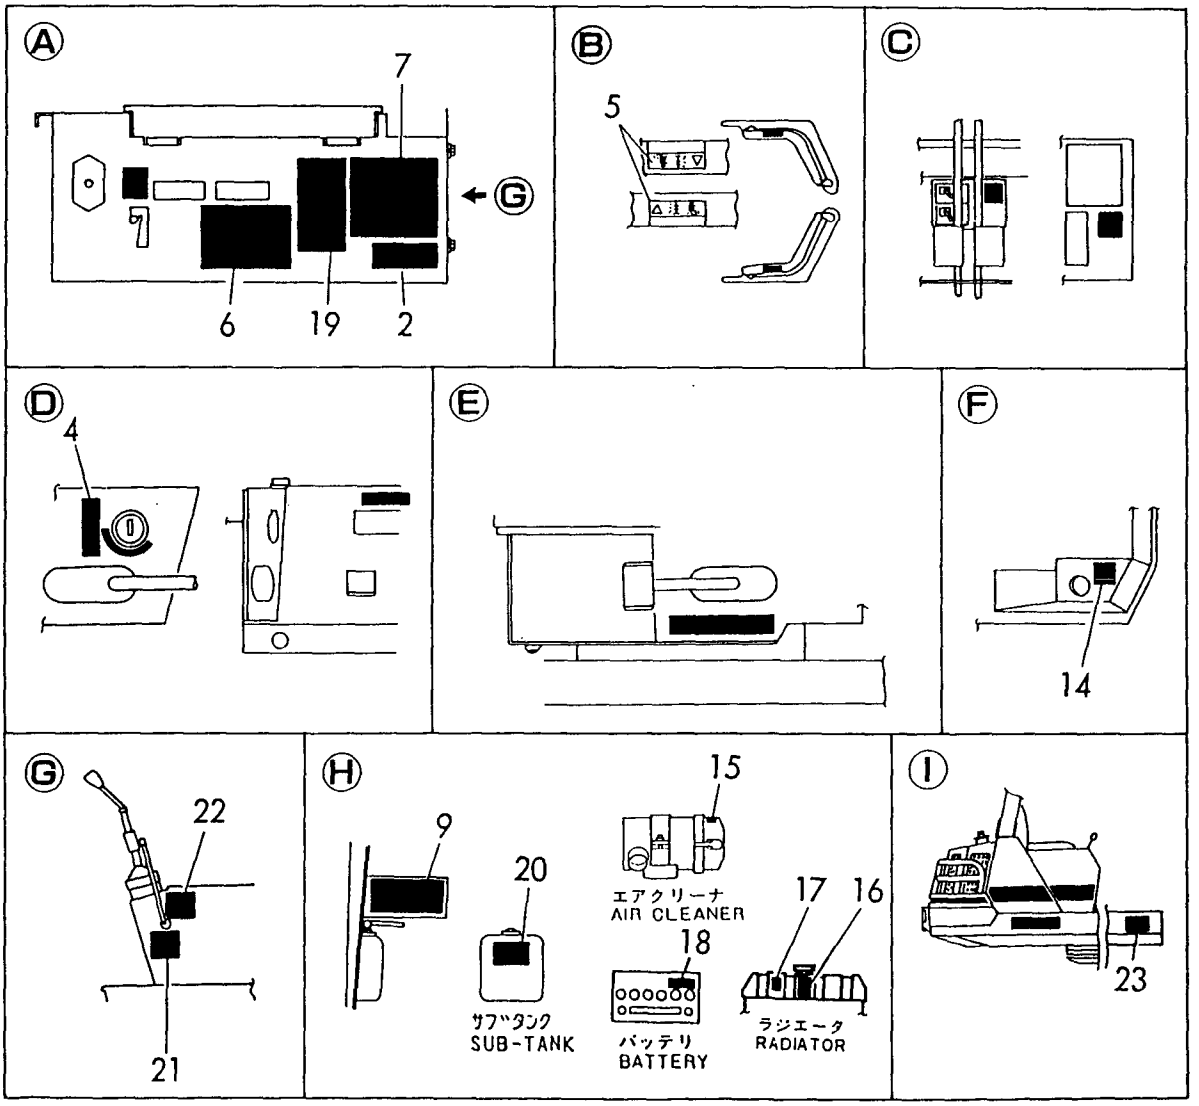

1,1,,772143-05110,,"TOOL ASSY",,,,,1,1,,,,,,,,,,,,
2,2,,172122-05100,,NOZZLE,,,,,1,1,,,,,,,,,,,,
3,2,,172614-38300,,"PIN 5X45, LOCK",,,,,4,4,,,,,,,,,,,,
4,2,,104200-92350,,"DRIVER, SCREW",,,,,1,1,,,,,,,,,,,,
5,2,,171301-92750,,"WRENCH, L.O. FILTER",,,,,1,1,,,,,,,,,,,,
6,2,,22417-800500,,"COTTER PIN 8.0X50",,,,,4,4,,,,,,,,,,,,
7,2,,28110-080100,,"WRENCH  8X10",,,,,1,1,,,,,,,,,,,,
8,2,,28110-120140,,"WRENCH 12X14",,,,,1,1,,,,,,,,,,,,
9,2,,28110-170190,,"WRENCH 17X19",,,,,1,1,,,,,,,,,,,,
10,2,,28110-220240,,"WRENCH 22X24",,,,,1,1,,,,,,,,,,,,
11,2,,28110-270300,,"WRENCH 27X30",,,,,1,1,,,,,,,,,,,,
12,2,,28110-320360,,"WRENCH 32X36",,,,,1,1,,,,,,,,,,,,
13,2,,28150-080000,,"BAR WRENCH  8",,,,,1,1,,,,,,,,,,,,
14,2,,28227-271400,,"BOX WRENCH 27X140",,,,,1,1,,,,,,,,,,,,
15,2,,28230-120250,,"TURNING HANDLE",,,,,1,1,,,,,,,,,,,,
16,2,,933110-90000,,"BAG, TOOL",,,,,1,1,,,,,,,,,,,,
17,2,,933171-00470,,"PLIER (200)",,,,,1,1,,,,,,,,,,,,

# Fig. 4 コウグ TOOL

https://truckmanualshub.com/

| COUNTRY | AY | UK | EP | UK(OPT |
|---|---|---|---|---|
| Fig No. | 5 | 5 | 4 | — |

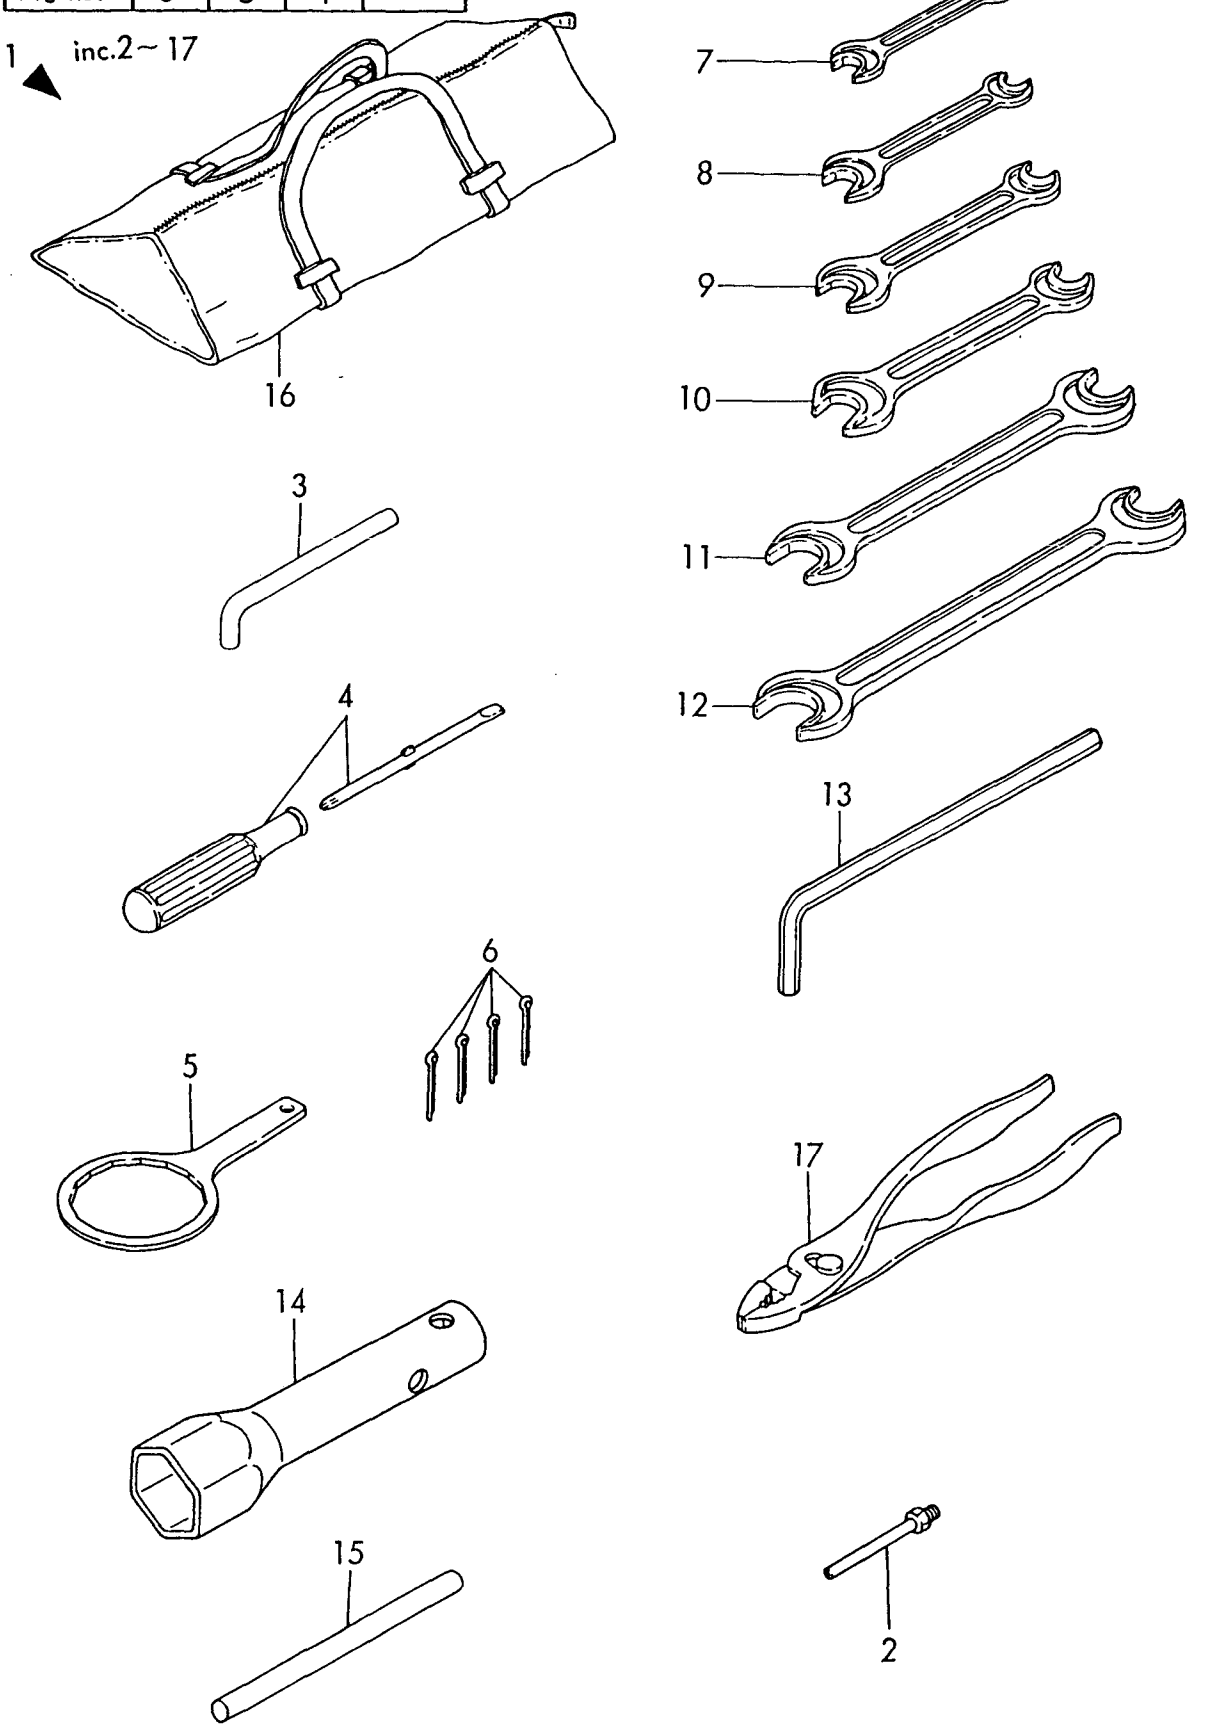

```
1,1,,772141-05100,,"TOOL SET",1,1,1,1,,,,,,,,,,,,,
2,2,,172122-05100,,NOZZLE,1,1,1,1,,,,,,,,,,,,,
3,2,,172614-38300,,"PIN 5X45, LOCK",4,4,4,4,,,,,,,,,,,,,
4,2,,104200-92350,,"DRIVER, SCREW",1,1,1,1,,,,,,,,,,,,,
5,2,,171301-92750,,"WRENCH, L.O. FILTER",1,1,1,1,,,,,,,,,,,,,,
6,2,,22417-800500,,"COTTER PIN 8.0X50",4,4,4,4,,,,,,,,,,,,,
7,2,,28110-080100,,"WRENCH  8X10",1,1,1,1,,,,,,,,,,,,,
8,2,,28110-120140,,"WRENCH 12X14",1,1,1,1,,,,,,,,,,,,,
9,2,,28110-170190,,"WRENCH 17X19",1,1,1,1,,,,,,,,,,,,,
10,2,,28110-220240,,"WRENCH 22X24",1,1,1,1,,,,,,,,,,,,,
11,2,,28110-270300,,"WRENCH 27X30",1,1,1,1,,,,,,,,,,,,,
12,2,,28110-320360,,"WRENCH 32X36",1,1,1,1,,,,,,,,,,,,,
13,2,,28150-080000,,"BAR WRENCH  8",1,1,1,1,,,,,,,,,,,,,
14,2,,28227-271400,,"BOX WRENCH 27X140",1,1,1,1,,,,,,,,,,,,,
15,2,,28230-120250,,"TURNING HANDLE",1,1,1,1,,,,,,,,,,,,,
16,2,,933110-09700,,"HOSE, GREASE",1,1,1,1,,,,,,,,,,,,,
17,2,,933110-09800,,"GUN 800, GREASE",1,1,1,1,,,,,,,,,,,,,
18,2,,933110-90000,,"BAG, TOOL",1,1,1,1,,,,,,,,,,,,,
19,2,,933171-00470,,"PLIER (200)",1,1,1,1,,,,,,,,,,,,,
```

# Fig. 5 コウグ TOOL

https://truckmanualshub.com/

| COUNTRY | AY | UK | EP | UK(OPT |
|---|---|---|---|---|
| Fig No. | 5 | 5 | 4 | — |

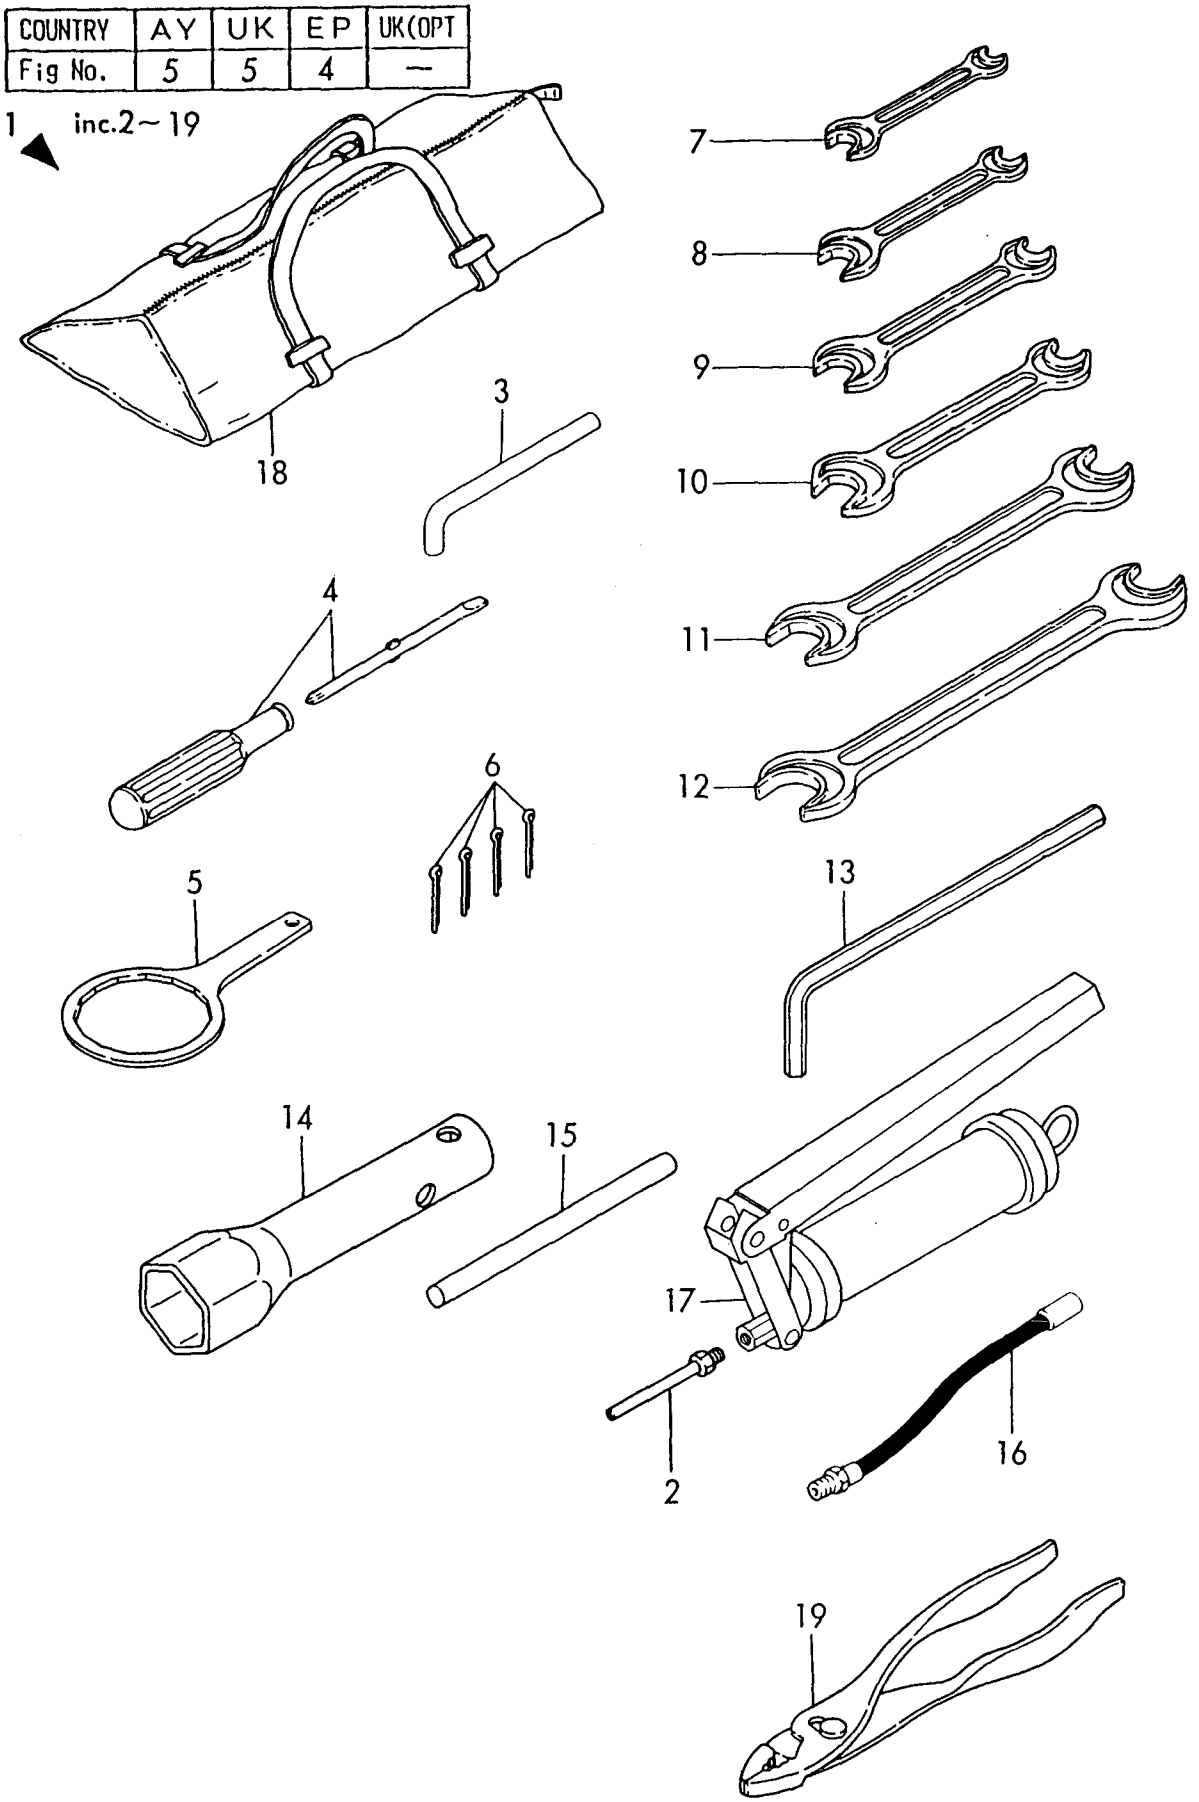

```
1,1,,172141-11300,,"PIPE, EXHAUST",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172519-11350,,"BAND, SILENCER",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-11400,,"SUPPORT, SILENCER",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-11470,,"STAY, SILENCER",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,124701-11910,,"GASKET, SILENCER",1,1,1,1,,,,,,,,,,,,,,,
5-1,1,,124701-11911,,"GASKET, (NON-ASB.)",1,1,1,1,1,1,N,,TE-90034,*1990.06,TE-
90034,*1990.06,TE-90034,*1990.06,TE-90034,*1990.06,,,,,I
6,1,,119831-13500,,SILENCER,1,1,1,1,1,1,,,,,,,,,,,,
7,1,,124664-13580,,CLAMP,1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172112-42090,,"WASHER, STOPPER",1,1,1,1,1,1,,,,,,,,,,,,
9,1,,22137-080000,,"WASHER 8, POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
10,1,,22217-080000,,"SPRING WASHER  8",4,4,4,4,4,4,,,,,,,,,,,,
11,1,,26013-080252,,"BOLT M 8X 25",4,4,4,4,4,4,,,,,,,,,,,,
12,1,,26106-080552,,"BOLT M 8X 55 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,26366-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,26716-080002,,"NUT M 8",4,4,4,4,4,4,,,,,,,,,,,,
15,1,,172141-11500,,"HOSE, SUCTION",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,119831-12500,,"CLEANER ASSY, AIR",1,1,1,1,1,1,,,,,,,,,,,,
17,2,,121465-12700,,RETAINER,1,1,1,1,1,1,,,,,,,,,,,,
18,2,,121465-12510,,"ELEMENT, AIR CLEANER",1,1,1,1,1,1,,,,,,,,,,,,
19,2,,124064-12680,,"BOLT, WING",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,124064-12690,,WASHER,1,1,1,1,1,1,,,,,,,,,,,,
21,1,,119831-12550,,"PIPE, SUCTION",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,119831-12560,,"SUPPORT,AIR CLEANER",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,23000-060000,,"CLAMP 60",4,4,4,4,4,4,,,,,,,,,,,,
24,1,,26106-080162,,"BOLT M 8X 16 PLATED",3,3,3,3,3,3,,,,,,,,,,,,
25,1,,26366-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
26,1,,172141-11310,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
27,1,,22137-100000,,"WASHER 10,POLISHED",2,2,2,2,2,2,,,,,,,,,,,,
28,1,,26013-100202,,"BOLT W/WASHER M10X20",2,2,2,2,2,2,,,,,,,,,,,,
29,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
30,1,,26103-100302,,"BOLT M10X 30",1,1,1,1,1,1,,,,,,,,,,,,,,,I
```

# Fig. 6 エアクリーナ＆サイレンサ AIR CLEANER & SILENCER

https://truckmanualshub.com/

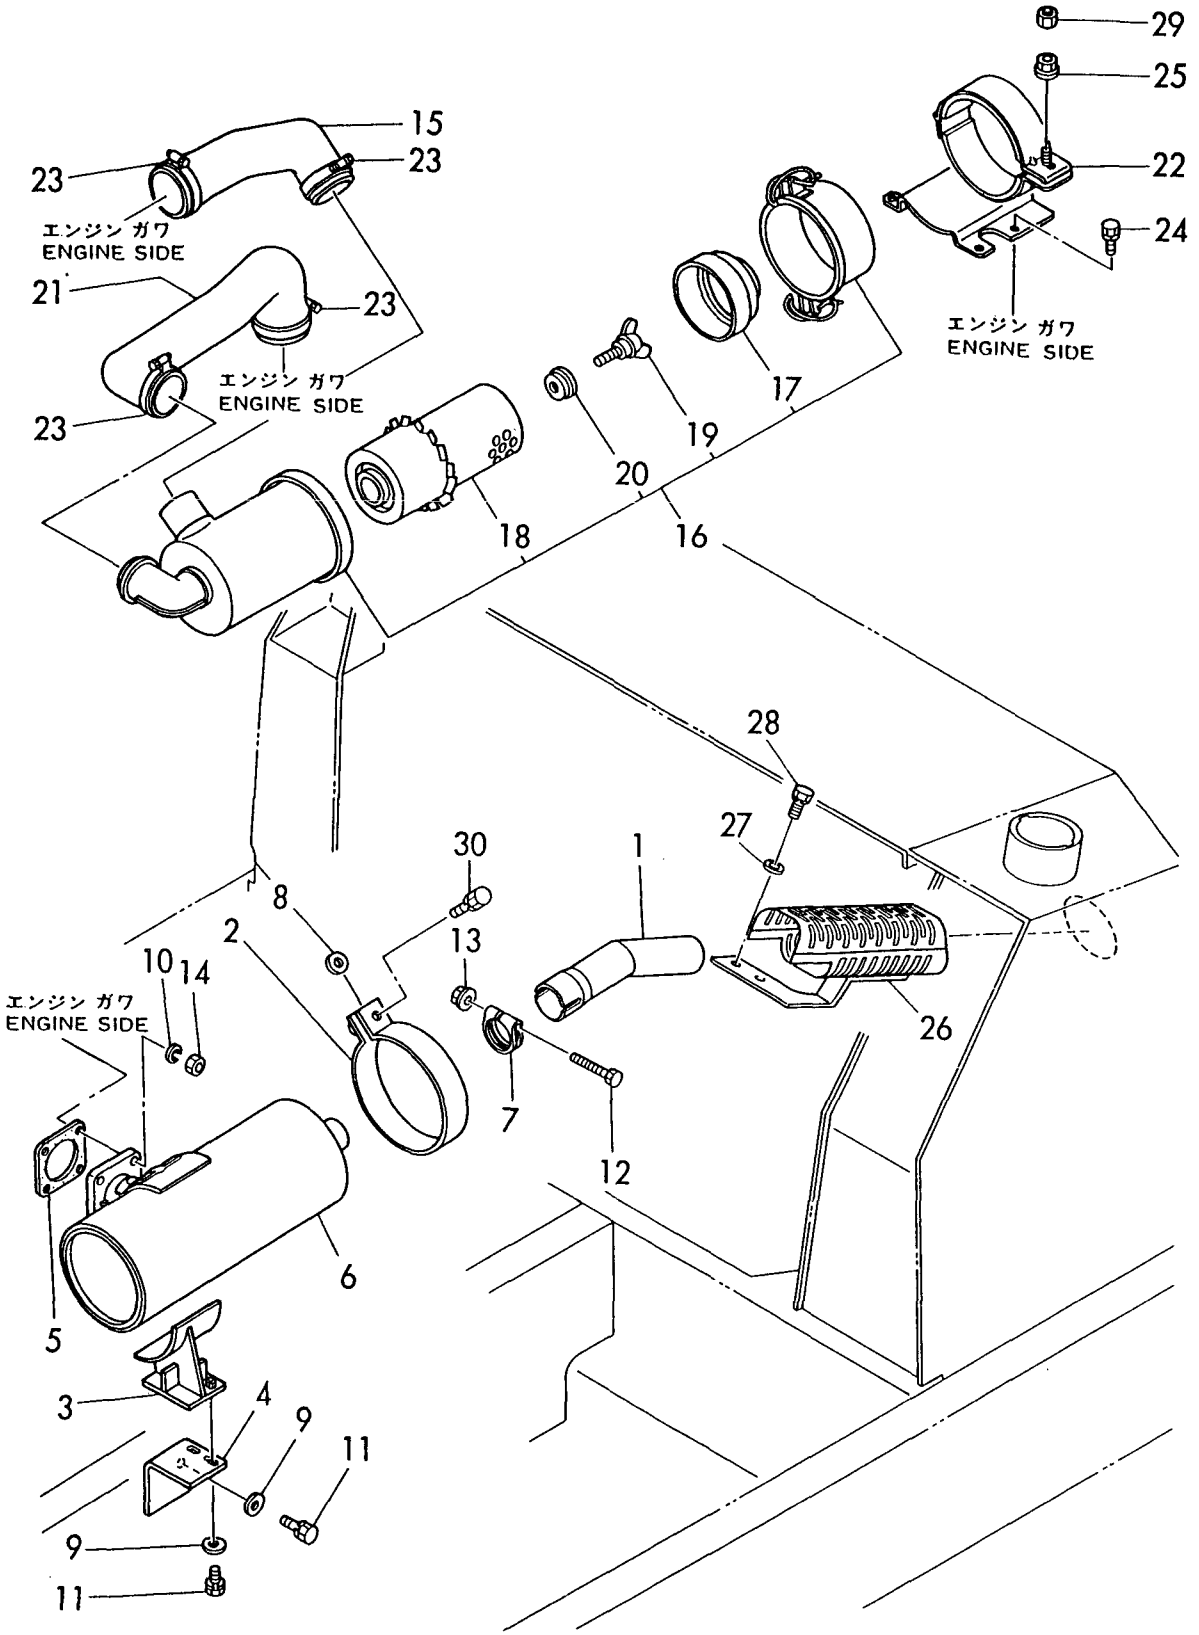

```
1,1,,172137-12110,,"CABLE, THROTTLE",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172142-12150,,"LEVER W/BUSH,ACCEL T",1,1,1,1,1,1,,,,,,,,,,,,
4,2,,172141-12220,,"BUSH 30X10",2,2,2,2,2,2,,,,,,,,,,,,
5,1,,172141-12160,,BRACKET,1,1,1,1,1,1,,,,,,,,,,,,
6,1,,172141-12232,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-12240,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172141-12250,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
9,1,,172137-12270,,"JOINT, CABLE",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,172141-12280,,"CLAMP, ACCEL WIRE",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,172141-41340,,BOOTS,1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172122-46630,,"KNOB(D), LEVER",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",2,2,2,2,2,2,,,,,,,,,,,,
14,1,,1A1040-56900,,"PIN  6X 17",2,2,2,2,2,2,,,,,,,,,,,,
15,1,,22137-060000,,"WASHER 6, POLISHED",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,22217-100000,,"SPRING WASHER 10",2,2,2,2,2,2,,,,,,,,,,,,
17,1,,22217-100000,,"SPRING WASHER 10",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,24190-160001,,"BALL 1/2",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,26013-080162,,"BOLT W/WASHER M8X16",2,2,2,2,2,2,,,,,,,,,,,,
20,1,,26116-100202,,"BOLT M10X 20 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
21,1,,26116-100302,,"BOLT M10X 30 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,933171-15680,,"GROMMET 40X13",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 7 アクセル ACCELERATOR

https://truckmanualshub.com/

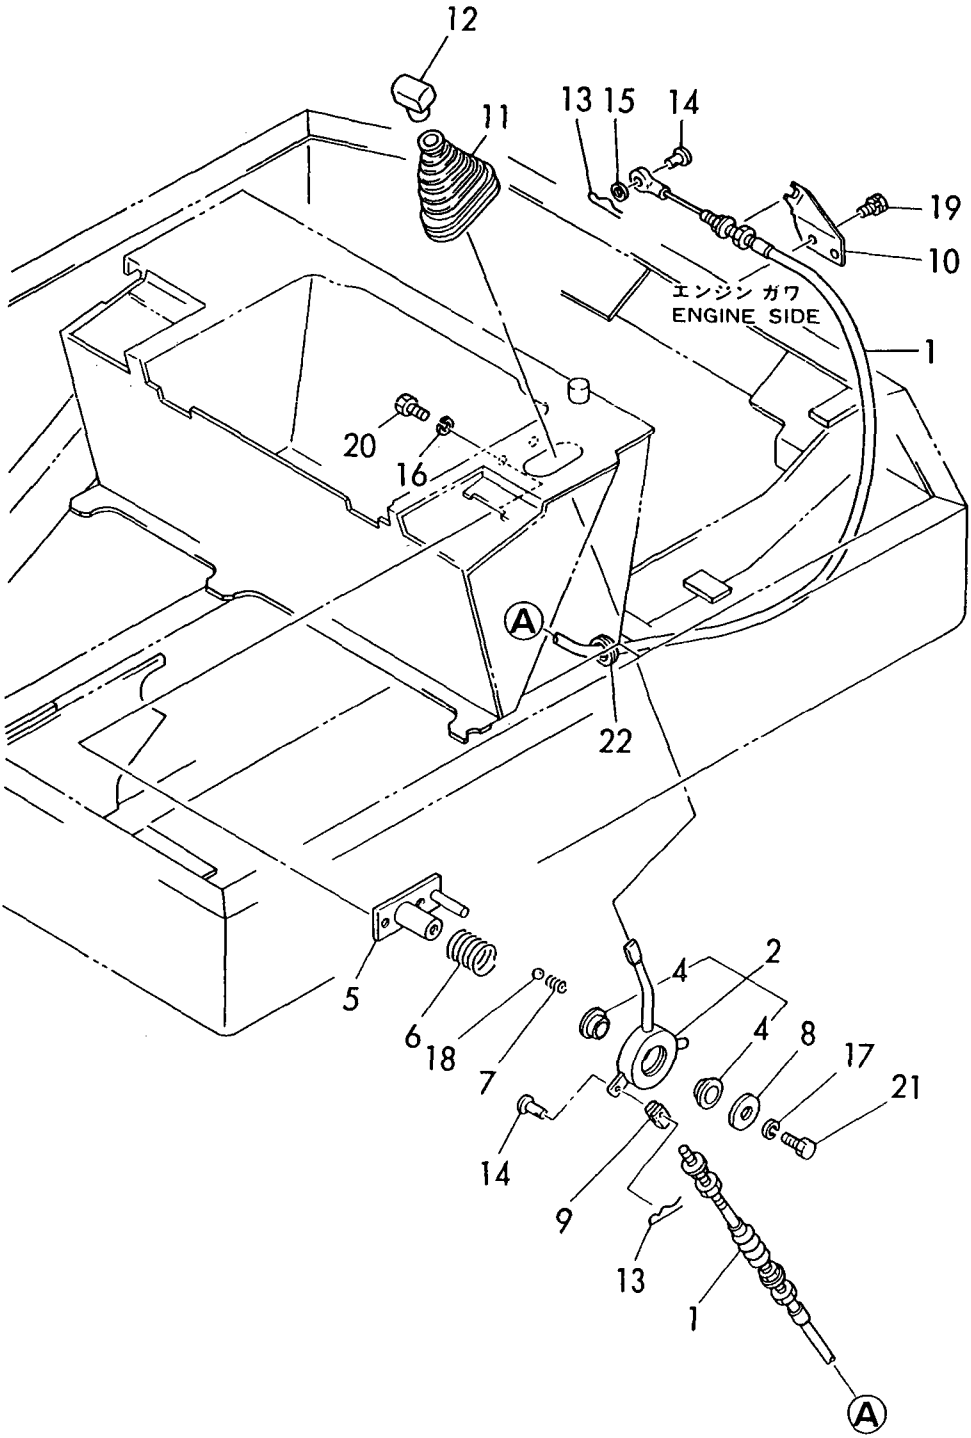

1,1,,196420-02310,,"ABSORBER, SHOCK",4,4,4,4,4,4,,,,,,,,,,,,
2,1,,172141-13010,,"STOPER, ENGINE",3,3,3,3,3,3,,,,,,,,,,,,
3,1,,172141-13030,,"BRACKET(L.R), ENGINE",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-13271,,"BRACKET(L.F), ENGINE",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172141-13100,,"BRACKET(R), ENGINE",1,1,1,1,1,1,,,,,,,,,,,,
6,1,,22217-120000,,"WASHER 12,SPRING",8,8,8,8,8,8,,,,,,,,,,,,
7,1,,26013-100252,,"BOLT M10X 25",8,8,8,8,8,8,,,,,,,,,,,,
8,1,,26013-120252,,"BOLT M12X 25",8,8,8,8,8,8,,,,,,,,,,,,
9,1,,26013-120302,,"BOLT W/WASHER M12X30",6,6,6,6,6,6,,,,,,,,,,,,
10,1,,26716-120002,,"NUT M12",8,8,8,8,8,8,,,,,,,,,,,,
11,1,,172141-13300,,"MOUNT(F), RADIATOR",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172141-13340,,"MOUNT(R), RADIATOR",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,172141-13410,,"BRACKET(F), RADIATOR",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,172141-13420,,"BRACKET(R), RADIATOR",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,172124-13500,,"MOUNT, RADIATOR",4,4,4,4,4,4,,,,,,,,,,,,
16,1,,172141-13500,,"HOSE, SUB-TANK",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,172137-13430,,"PIPE (B), DRAIN",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,172124-14650,,"HOSE L=1100, FUEL",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,119831-44500,,RADIATOR,1,1,1,1,1,1,,,,,,,,,,,,
20,2,,124450-44590,,"CAP, RADIATOR",1,1,1,1,1,1,,,,,,,,,,,,
21,1,,121468-44510,,"SUB-TANK ASSY",1,1,1,1,1,1,,,,,,,,,,,,
23,2,,121450-44531,,CAP,1,1,1,1,1,1,,,,,,,,,,,,
24,2,,121468-44540,,"PLUG, SUB-TANK",1,1,1,1,1,1,,,,,,,,,,,,
25,2,,124450-44560,,CLAMP,1,1,1,1,1,1,,,,,,,,,,,,
26,2,,121470-44581,,GASKET,1,1,1,1,1,1,,,,,,,,,,,,
27,2,,23065-070130,,"PIPE  7X 130",1,1,1,1,1,1,,,,,,,,,,,,
28,1,,121470-44540,,"LABEL, SUB-TANK",1,1,1,1,1,1,,,,,,,,,,,,
29,1,,119280-49010,,"PIPE  A",1,1,1,1,1,1,,,,,,,,,,,,
30,1,,171301-49020,,"PIPE (B), C. WATER",1,1,1,1,1,1,,,,,,,,,,,,
31,1,,172124-13440,,COCK,1,1,1,1,1,1,,,,,,,,,,,,
32,1,,172124-13450,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
33,1,,22137-060000,,"WASHER 6, POLISHED",2,2,2,2,2,2,,,,,,,,,,,,
34,1,,22137-080000,,"WASHER 8, POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
35,1,,22137-080000,,"WASHER 8, POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
36,1,,22137-080000,,"WASHER 8, POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
37,1,,22217-080000,,"SPRING WASHER  8",8,8,8,8,8,8,,,,,,,,,,,,
38,1,,23010-038000,,"CLAMP 38",4,4,4,4,4,4,,,,,,,,,,,,
39,1,,23080-012000,,"CLAMP 12",4,4,4,4,4,4,,,,,,,,,,,,
40,1,,24311-000160,,"O-RING 1A P-16.0",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,26013-060162,,"BOLT M 6X 16",2,2,2,2,2,2,,,,,,,,,,,,
42,1,,26013-080162,,"BOLT W/WASHER M8X16",2,2,2,2,2,2,,,,,,,,,,,,
43,1,,26013-080202,,"BOLT W/WASHER M8X20",4,4,4,4,4,4,,,,,,,,,,,,
44,1,,26013-080252,,"BOLT M 8X 25",4,4,4,4,4,4,,,,,,,,,,,,
45,1,,26716-080002,,"NUT M 8",8,8,8,8,8,8,,,,,,,,,,,,
46,1,,933152-09280,,"BAND 170",2,2,2,2,2,2,,,,,,,,,,,,

# Fig. 8 エンジンマウント＆ラジエータ
# ENGINE MOUNT & RADIATOR

https://truckmanualshub.com/

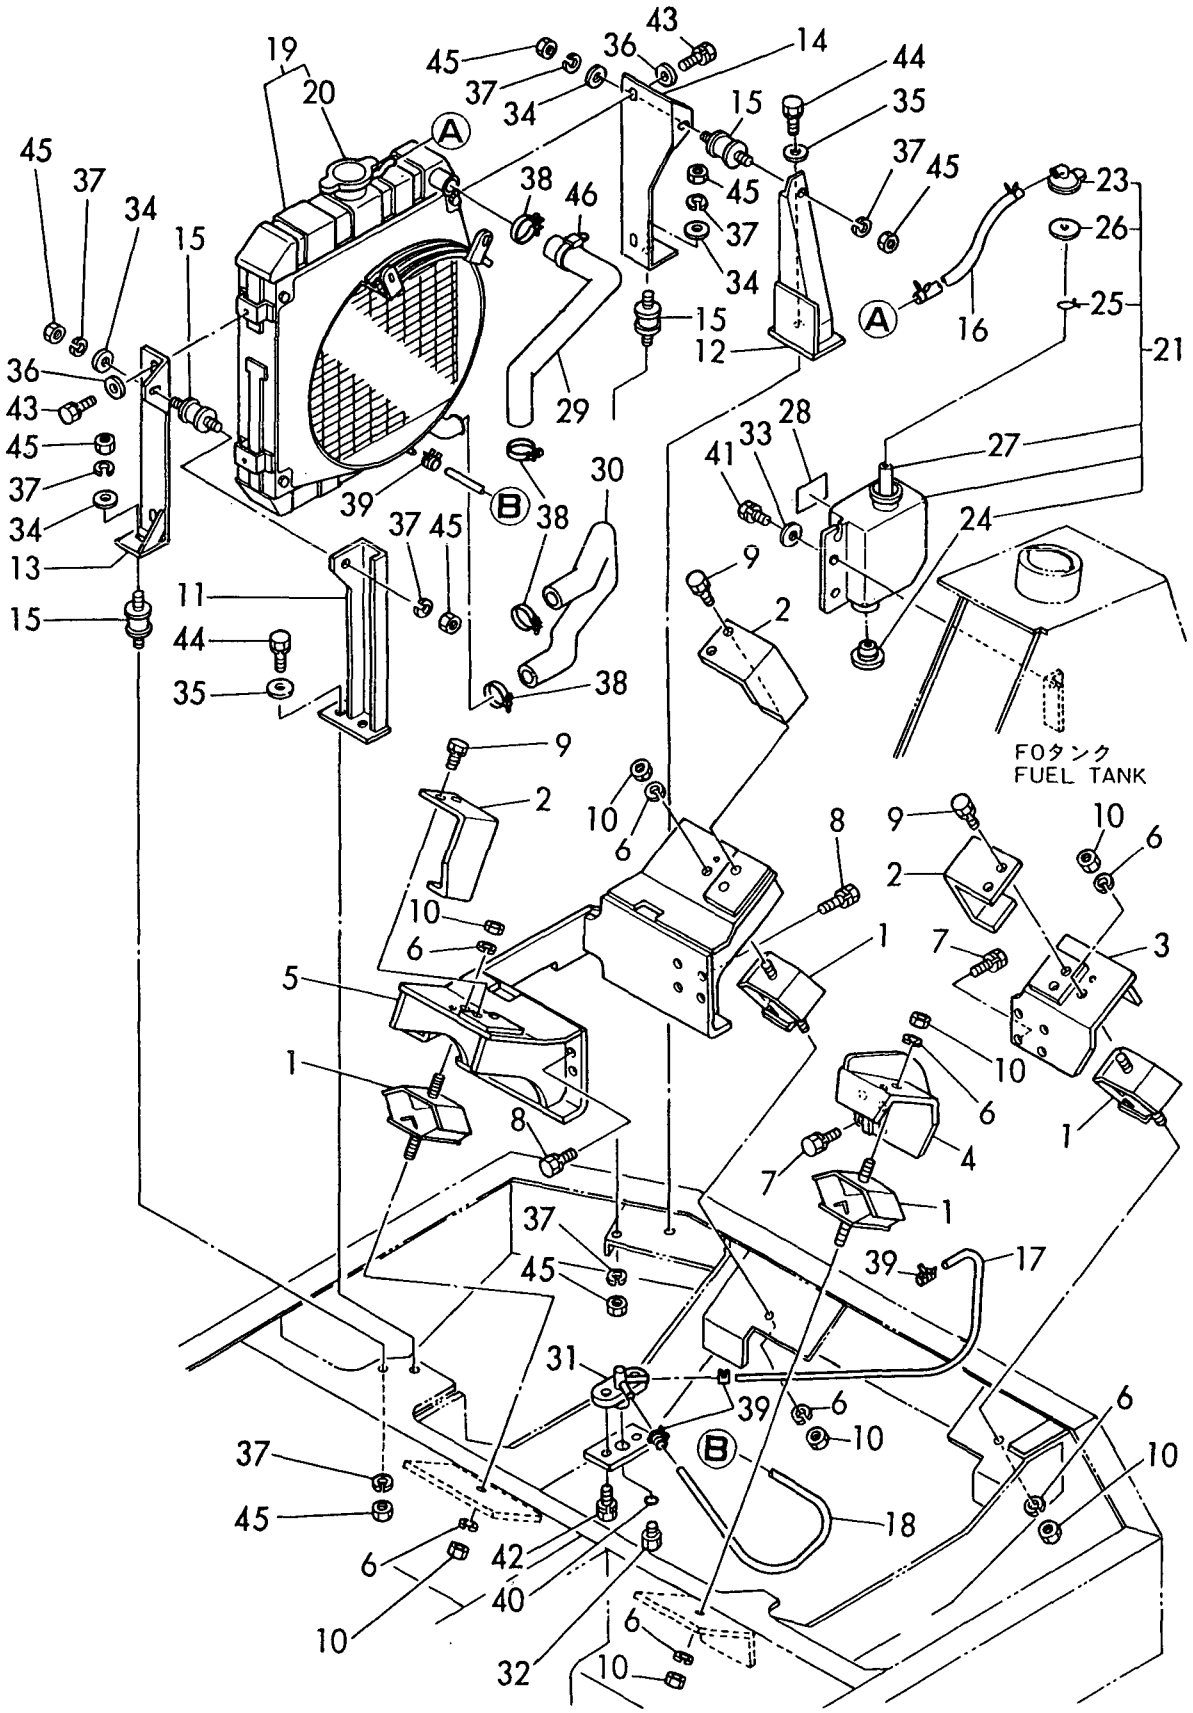

```
1,1,,772141-14100,,"TANK ASSY, FUEL",1,,1,,1,,,,,,,,,,,,
2,1,,772141-14110,,"FUEL TANK ASSY",,1,,1,,1,,,,,,,,,,,,
3,2,,104200-11920,,COCK,1,1,1,1,1,1,,,,,,,,,,,,
5,2,,172141-14250,,"GAUGE, FUEL",1,1,1,1,1,1,,,,,,,,,,,,
6,2,,172141-14260,,FLOAT,1,1,1,1,1,1,,,,,,,,,,,,
7,2,,172122-14300,,"CAP, FUEL TANK",1,1,1,1,1,1,,,,,,,,,,,,
7A,3,,105430-55070,,GASKET,1,1,1,1,1,1,,,,,,,,,,,,
9,2,,101504-55101,,"STRAINER,FUEL INLET",1,1,1,1,1,1,,,,,,,,,,,,
10,2,,23010-014000,,"CLAMP 14",2,2,2,2,2,2,,,,,,,,,,,,
11,1,,172141-14330,,"PROTECTOR, GAUGE",,1,,1,,1,,,,,,,,,,,,
12,1,,22137-080000,,"WASHER 8, POLISHED",,2,,2,,2,,,,,,,,,,,,
13,1,,22137-120000,,"WASHER 12,POLISHED",3,3,3,3,3,3,,,,,,,,,,,,
14,1,,22217-080000,,"SPRING WASHER  8",,2,,2,,2,,,,,,,,,,,,
15,1,,23061-100230,,"PIPE 10X 230",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,23080-013000,,"CLAMP 13,HOSE",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,26013-120352,,"BOLT M12X 35",3,3,3,3,3,3,,,,,,,,,,,,
18,1,,26116-080162,,"BOLT M 8X 16 PLATED",,2,,2,,2,,,,,,,,,,,,
19,1,,933169-22940,,"SPACER, RESERVOIR",1,1,1,1,1,1,,,,,,,,,,,,
20,1,,172137-13430,,"PIPE (B), DRAIN",1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172116-14620,,"PIPE (B), FUEL",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172141-14620,,"HOSE, FUEL",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,129335-55700,,"SEPARATOR, WATER",1,1,1,1,1,1,,,,,,,,,,,,
24,2,,104200-55321,,"VALVE, TAPER",1,1,1,1,1,1,,,,,,,,,,,,
25,2,,104200-55330,,"SPRING, TAPER VALVE",1,1,1,1,1,1,,,,,,,,,,,,
26,2,,104200-55341,,"HANDLE, COCK",1,1,1,1,1,1,,,,,,,,,,,,
27,2,,124064-55510,,"BOWL, FUEL STRAINER",1,1,1,1,1,1,,,,,,,,,,,,
28,2,,102103-55520,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
29,2,,110250-55610,,"RING, RETAINING",1,1,1,1,1,1,,,,,,,,,,,,
30,2,,121257-55720,,"SPRING, SCREEN",1,1,1,1,1,1,,,,,,,,,,,,
31,2,,121257-55731,,FLOAT,1,1,1,1,1,1,,,,,,,,,,,,
33,2,,101720-55750,,"PLUG 6",2,2,2,2,2,2,,,,,,,,,,,,
34,2,,104200-55750,,"SCREW M 4",1,1,1,1,1,1,,,,,,,,,,,,
35,2,,171081-55910,,SCREEN,1,1,1,1,1,1,,,,,,,,,,,,
36,2,,23418-060000,,"GASKET 6, NYLON",2,2,2,2,2,2,,,,,,,,,,,,
37,2,,24311-240100,,"O-RING 1A P-10A",1,1,1,1,1,1,,,,,,,,,,,,
38,1,,124766-59050,,"CLAMP 12",6,6,6,6,6,6,,,,,,,,,,,,
39,1,,22137-080000,,"WASHER 8, POLISHED",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,26116-080652,,"BOLT M 8X 65 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,172126-16540,,"CLAMP 10X70",2,2,2,2,2,2,,,,,,,,,,,,
42,1,,933152-09280,,"BAND 170",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 9 FOタンク&FOパイプ FUEL TANK & FUEL LINE

https://truckmanualshub.com/

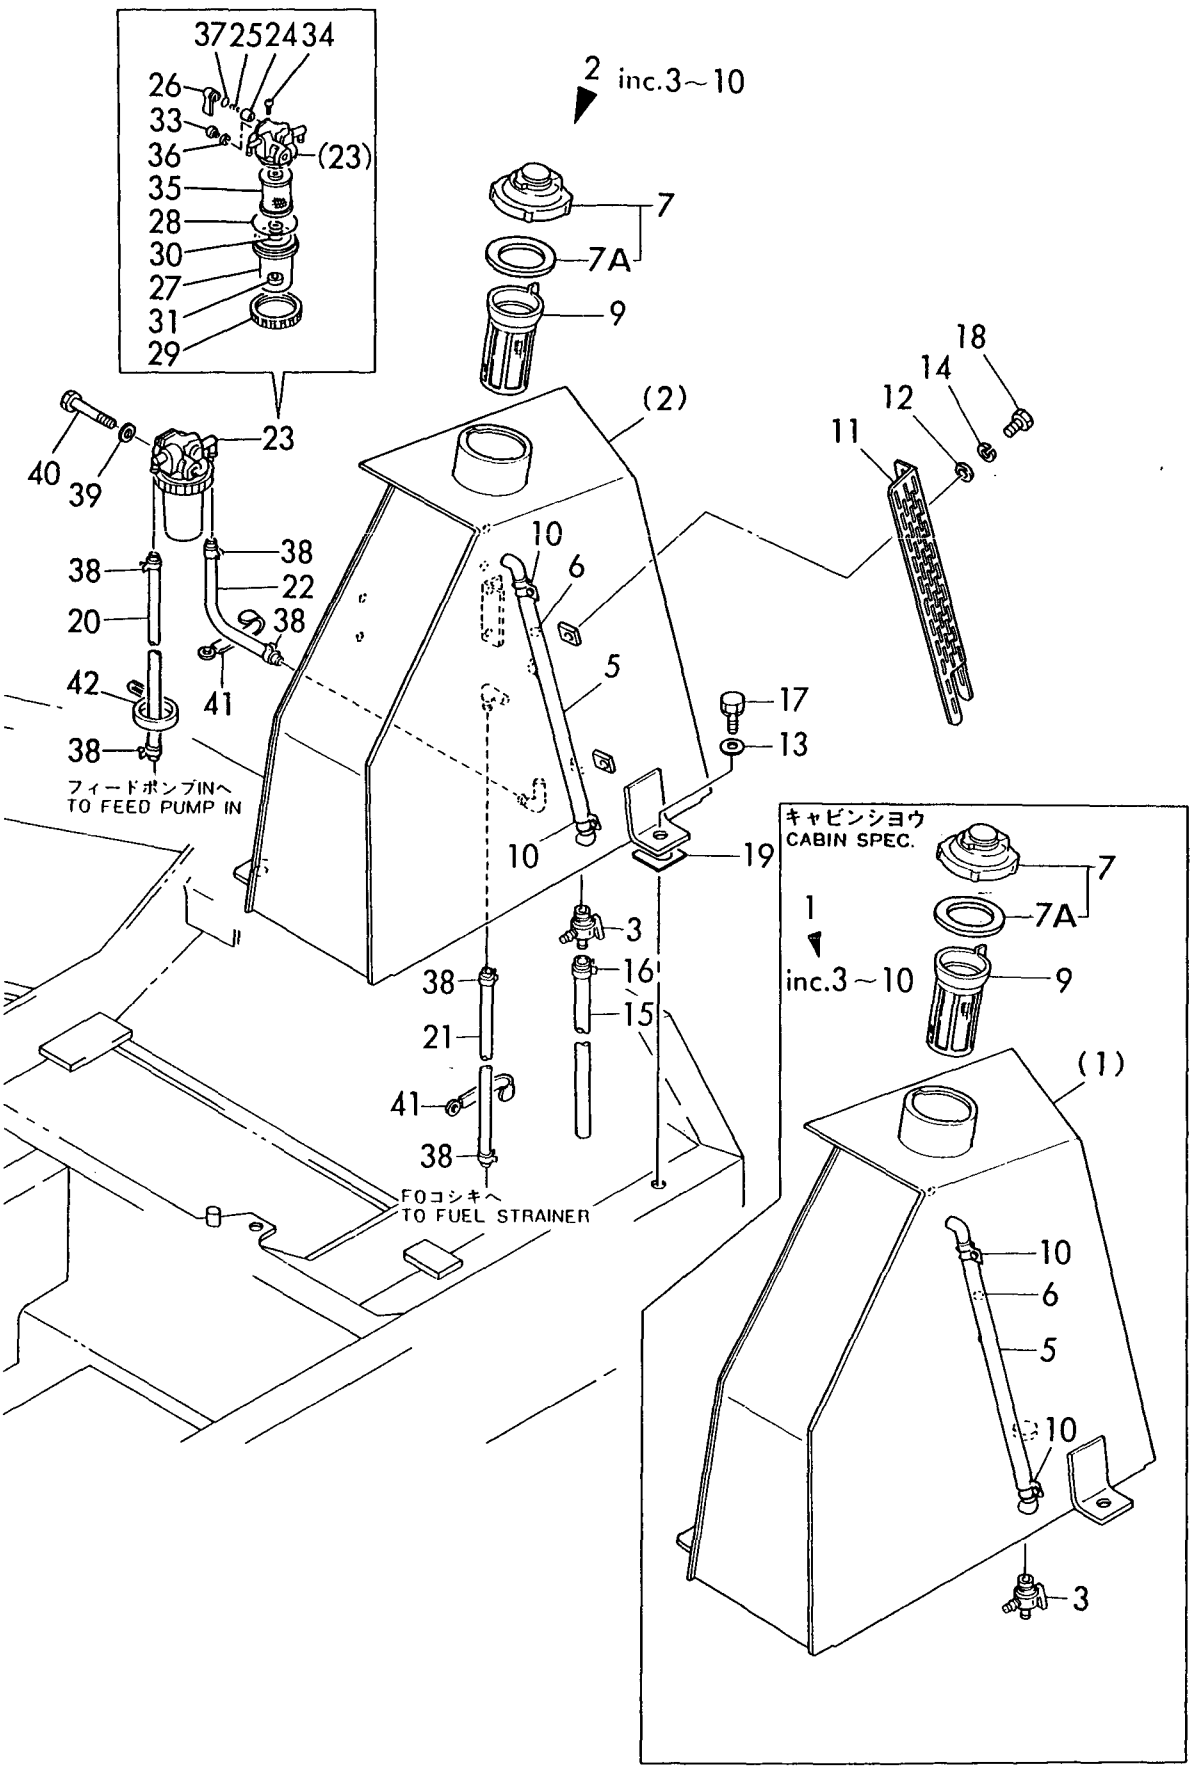

```
1,1,,172141-16140,,"HARNESS, BATTERY(-)",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-16160,,"HARNESS, BATTERY(+)",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,124550-77030,,"COVER, TERMINAL",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,933113-01500,,"BATTERY (N70Z)",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172310-16080,,"BOLT, BATTERY",2,2,2,2,2,2,,,,,,,,,,,,
6,1,,172141-16110,,"CLAMP, BATTERY",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-16130,,"COVER, BATTERY",1,1,1,1,1,1,,,,,,,,,,,,
8,1,,22217-080000,,"SPRING WASHER  8",2,2,2,2,2,2,,,,,,,,,,,,
9,1,,22217-080000,,"SPRING WASHER  8",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 10 バッテリ BATTERY

https://truckmanualshub.com/

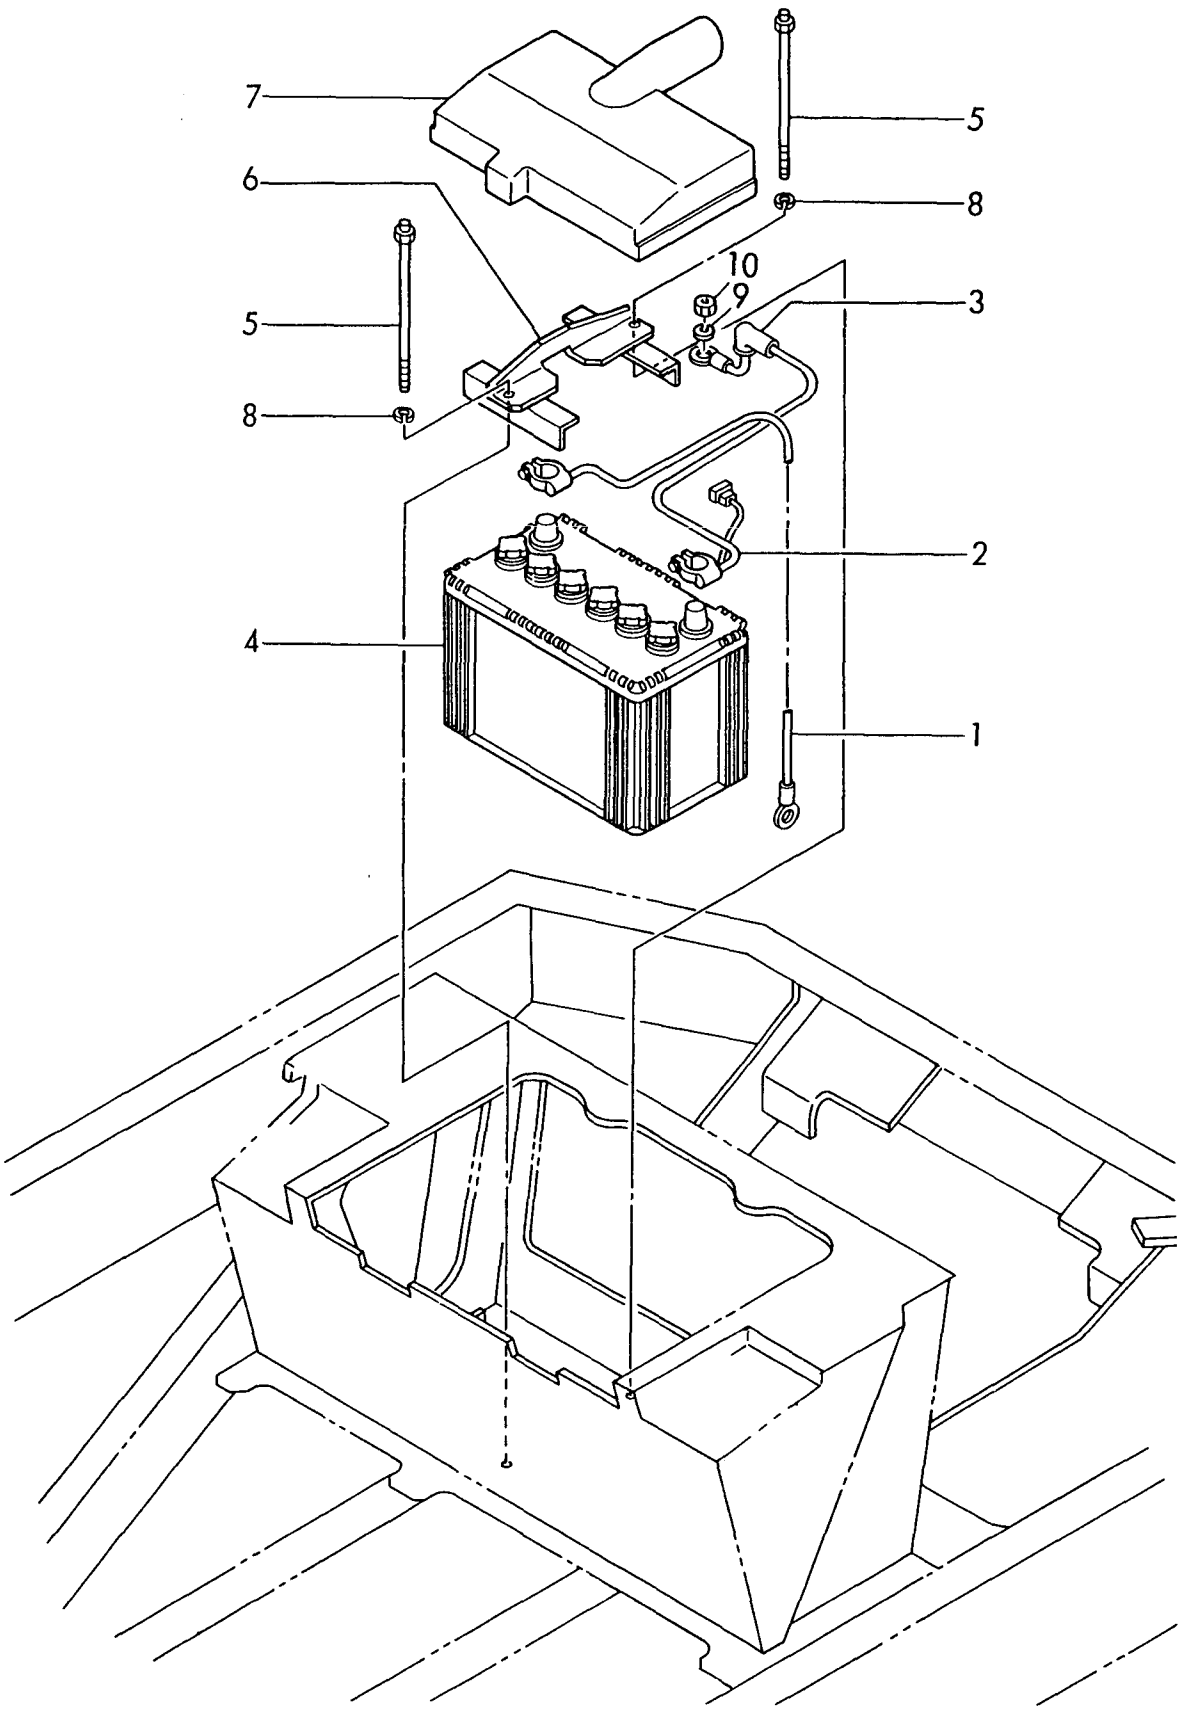

1,1,,172142-16500,,"HARNESS(A), WIRE",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-16521,,"HARNESS(B), WIRE",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-16541,,"HARNESS(D), WIRE",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-16550,,"HARNESS(E), WIRE",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172122-16570,,"LINK, FUSIBLE",1,1,1,1,1,1,,,,,,,,,,,,
6,1,,933168-55770,,"BAND 146",5,5,5,5,5,5,,,,,,,,,,,,
7,1,,933171-15801,,"WIRE, EARTH",1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172141-17110,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
9,1,,172141-17141,,"UNIT, CHECKER",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,172141-17150,,BUZZER,1,1,1,1,1,1,,,,,,,,,,,,
11,1,,172141-17160,,"BOX, FUSE",1,1,1,1,1,1,,,,,,,,,,,,
12,2,,29411-050000,,"FUSE ( 5A),CARTRIDGE",1,1,1,1,1,1,,,,,,,,,,,,
13,2,,29411-100000,,"FUSE (10A),CARTRIDGE",2,2,2,2,2,2,,,,,,,,,,,,
14,2,,29411-150000,,"FUSE (15A),CARTRIDGE",2,2,2,2,2,2,,,,,,,,,,,,
15,1,,172141-17171,,"BOX, PILOT",1,1,1,1,1,1,,,,,,,,,,,,
16,2,,933113-05120,,"BULB 12V 1.7W",3,3,3,3,3,3,,,,,,,,,,,,
17,1,,172141-17190,,"SWITCH, WORK LAMP",1,1,1,1,1,1,,,,,,,,,,,,
18,2,,933113-05120,,"BULB 12V 1.7W",1,1,1,1,,,,,,,,,,,,,,
18-1,2,,172141-17230,,"BULB 24V-
6W",1,1,1,1,1,1,N,,72141361,M11343,72141361,M11343,72141361,M11343,72141361,M113
43,,,,,I
19,1,,172147-17200,,"METER, HOUR",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,172147-17210,,"CASE, HOUR METER",1,1,1,1,1,1,,,,,,,,,,,,
21,2,,172147-17220,,"CAP, HOUR METER",1,1,1,1,1,1,,,,,,,,,,,,
22,2,,172147-17230,,NUT,2,2,2,2,2,2,,,,,,,,,,,,
23,2,,172147-17240,,SLEEVE,2,2,2,2,2,2,,,,,,,,,,,,
24,2,,172147-17250,,"WIRE,LEAD",1,1,1,1,1,1,,,,,,,,,,,,
25,2,,22217-050000,,"SPRING WASHER  5",2,2,2,2,2,2,,,,,,,,,,,,
26,1,,121522-77101,,RELAY,1,1,1,1,1,1,,,,,,,,,,,,
27,1,,119640-77711,,"LIMITER,CURRENT",1,1,1,1,1,1,,,,,,,,,,,,
28,1,,121522-77721,,"INDICATOR, CHARGING",1,1,1,1,1,1,,,,,,,,,,,,
29,1,,22217-060000,,"SPRING WASHER  6",4,4,4,4,4,4,,,,,,,,,,,,
30,1,,26116-060122,,"BOLT M 6X 12",2,2,2,2,2,2,,,,,,,,,,,,
31,1,,26116-100162,,"BOLT M10X 16 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
32,1,,26022-050162,,"SCREW M 5X 16",2,2,2,2,2,2,,,,,,,,,,,,
33,1,,26022-060122,,"SCREW M 6X 12",2,2,2,2,2,2,,,,,,,,,,,,
34,1,,26716-060002,,"NUT M 6",4,4,4,4,4,4,,,,,,,,,,,,
35,1,,933110-00100,,"SWITCH ASSY, STARTER",1,1,1,1,1,1,,,,,,,,,,,,
37,2,,933110-00301,,"KEY ASSY",1,1,1,1,1,1,,,,,,,,,,,,
38,1,,933110-05300,,HORN,1,1,1,1,1,1,,,,,,,,,,,,
39,1,,933113-15900,,"COVER, SWITCH TERMI.",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,172143-63100,,"PANEL ASSY",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,172143-63140,,"COVER, PANEL",,1,,1,,1,,,,,,,,,,,,
42,1,,22857-400100,,"SCREW 4X10",4,4,4,4,4,4,,,,,,,,,,,,
43,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
44,1,,172112-69790,,"PLUG 32X2",,1,,1,,1,,,,,,,,,,,,
45,1,,26716-100002,,"NUT M10",2,2,2,2,2,2,,,,,,,,,,,,
46,1,,22217-060000,,"SPRING WASHER  6",2,2,2,2,2,2,,,,,,,,,,,,
47,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
48,1,,933168-55770,,"BAND 146",4,4,4,4,4,4,,,,,,,,,,,,
49,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
50,1,,172111-16890,,"GROMMET  9",1,,1,,1,,,,,,,,,,,,
51,1,,172312-17260,,"GROMMET 22X2.3",1,,1,,1,,,,,,,,,,,,
52,1,,172143-63130,,"COVER, IN-PAME",1,,1,,1,,,,,,,,,,,,
53,1,,933171-15680,,"GROMMET 40X13",1,,1,,1,,,,,,,,,,,,
54,1,,172143-16590,,"HARNESS C",1,,1,,1,,,,,,,,,,,,
55,1,,172126-16540,,"CLAMP 10X70",2,2,2,2,2,2,,,,,,,,,,,,

# Fig. 11 デンソウヒン ELECTRIC PART

https://truckmanualshub.com/

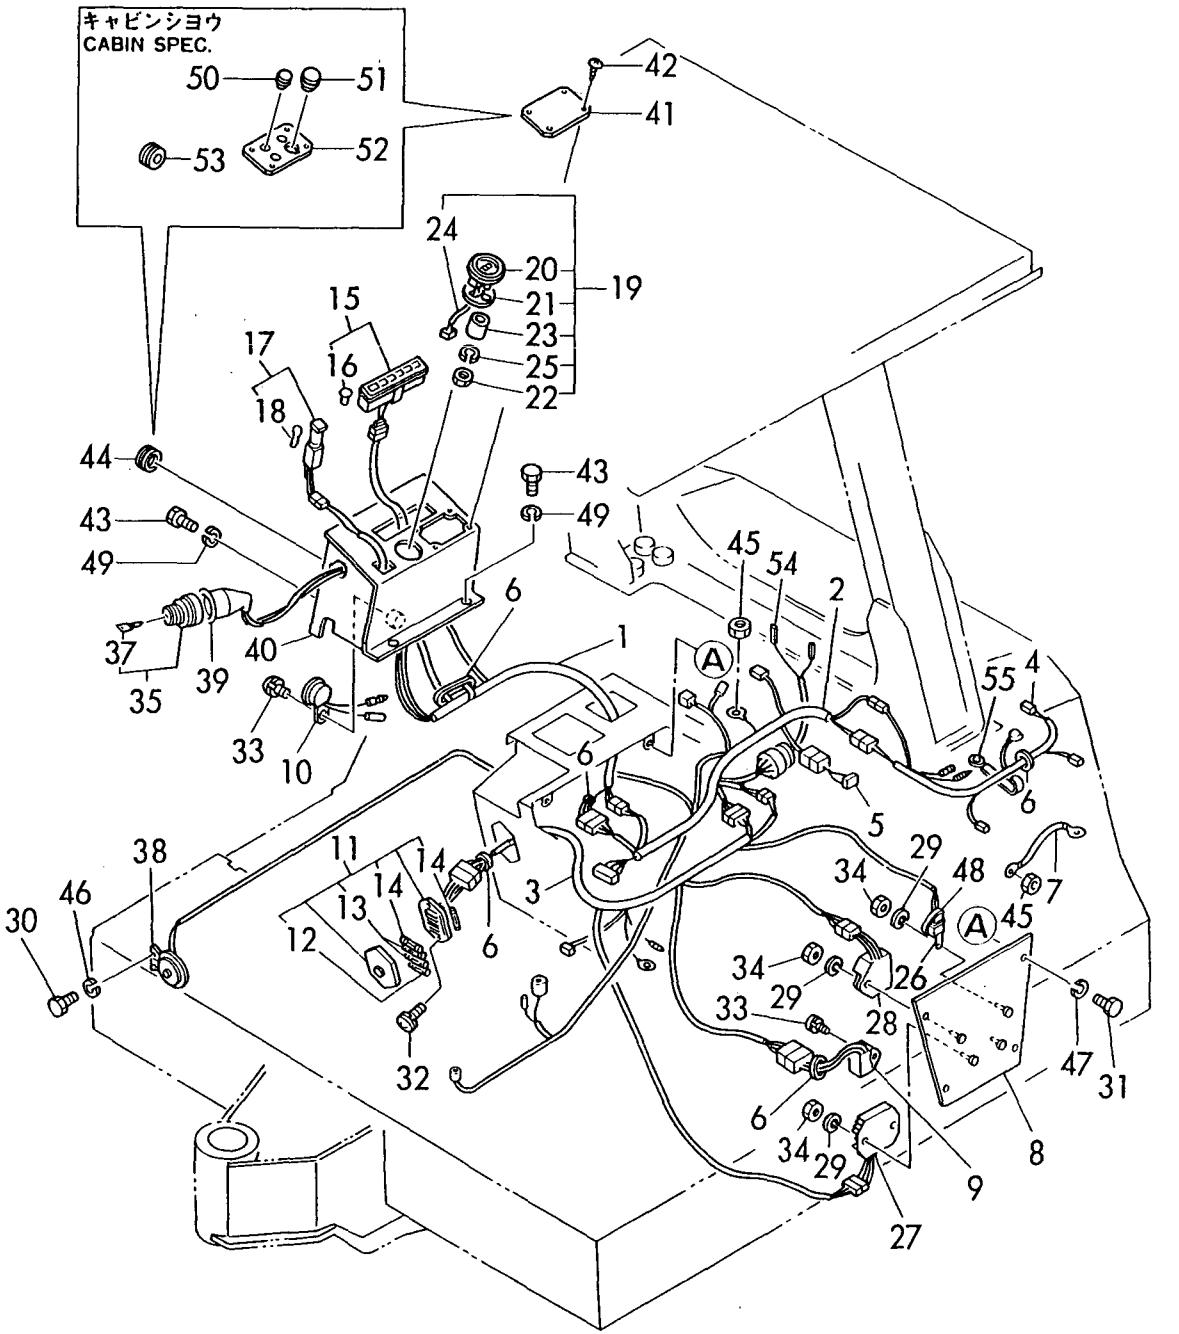

```
1,1,,172137-16560,,BAND,5,5,5,5,5,5,,,,,,,,,,,,
2,1,,172141-16560,,"WIRE, LAMP",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-17200,,"LAMP, WORK",1,1,1,1,1,1,,,,,,,,,,,,
4,2,,172141-17210,,"BULB 12V 60W",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172137-17400,,"STAY, BOOM LIGHT",1,1,1,1,1,1,,,,,,,,,,,,
6,1,,22217-120000,,"WASHER 12,SPRING",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,26116-120252,,"BOLT M12X 25 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 12 ワークランプ WORK LAMP

https://truckmanualshub.com/

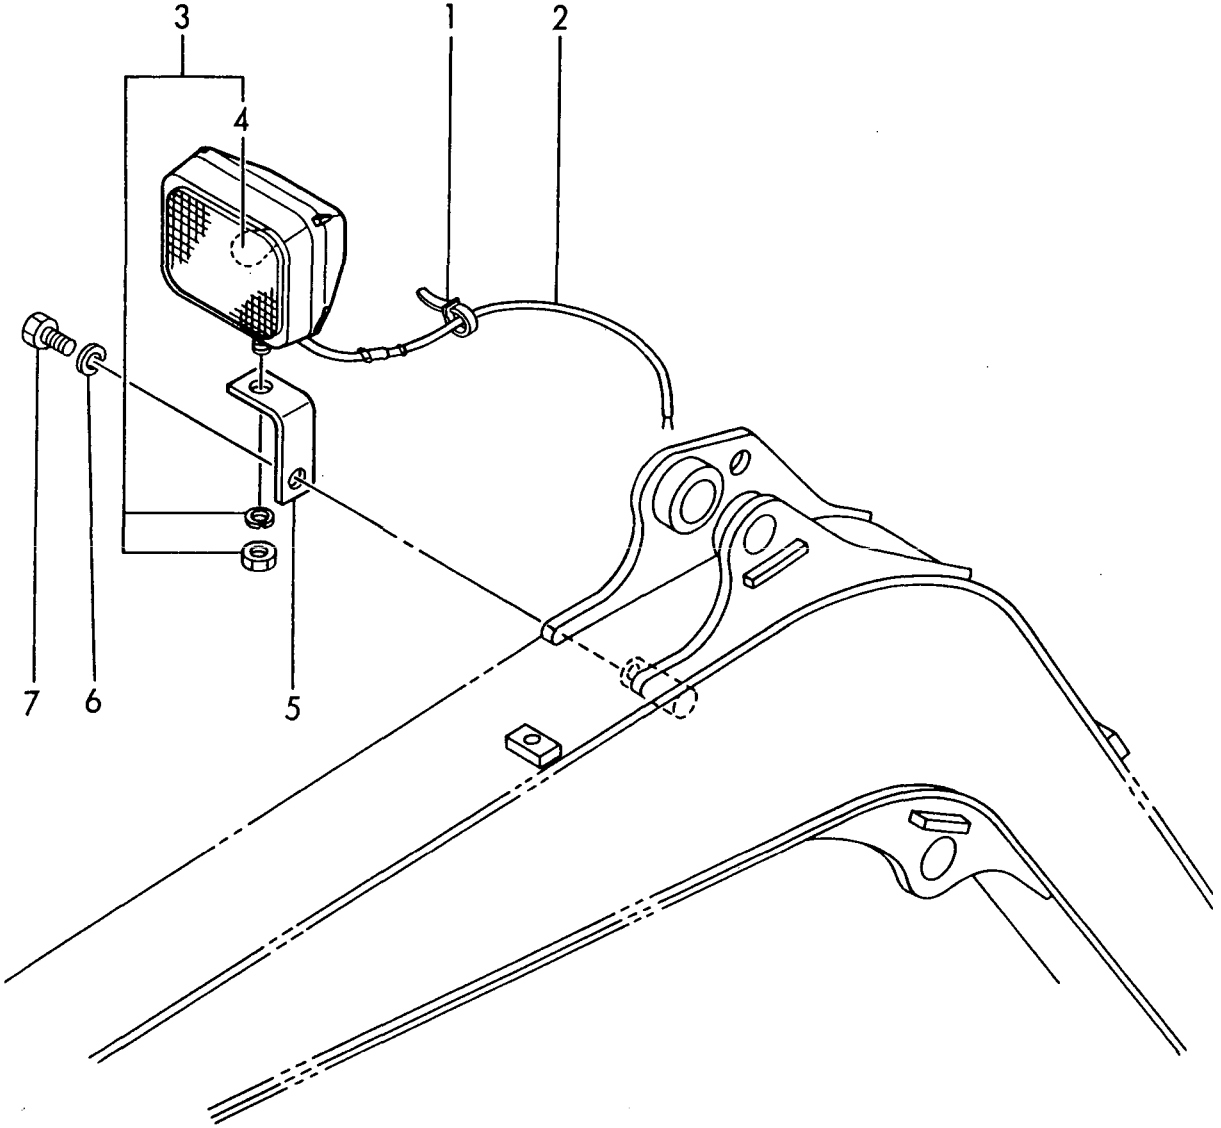

```
1,1,,772143-17600,,"HEATER ASSY",1,,1,,1,,,,,,,,,,,,
2,2,,172141-13470,,"PIPE(B,E), C.WATER",1,,1,,1,,,,,,,,,,,,
3,2,,172141-13480,,"PIPE(B,R), C.WATER",1,,1,,1,,,,,,,,,,,,
4,2,,172141-13490,,JOINT,1,,1,,1,,,,,,,,,,,,
5,2,,172124-17630,,"VALVE, MINIATURE",1,,1,,1,,,,,,,,,,,,
6,2,,172137-17630,,"JOINT, HEATER",1,,1,,1,,,,,,,,,,,,
7,2,,172124-17640,,"JOINT 3/8",2,,2,,2,,,,,,,,,,,,
8,2,,172141-17680,,"HOSE ASSY, HEATER",2,,2,,2,,,,,,,,,,,,
9,3,,172141-17690,,"HOSE, HEATER",2,,2,,2,,,,,,,,,,,,
10,3,,172141-17700,,"TUBE, CORRUGAT",2,,2,,2,,,,,,,,,,,,
11,2,,172119-47650,,"JOINT, HOSE",1,,1,,1,,,,,,,,,,,,
12,2,,23000-022000,,"CLAMP 22",4,,4,,4,,,,,,,,,,,,
13,2,,23010-038000,,"CLAMP 38",2,,2,,2,,,,,,,,,,,,
14,2,,933152-09280,,"BAND 170",2,,2,,2,,,,,,,,,,,,
15,2,,933166-24240,,"ELBOW, SWIVEL JOINT",1,,1,,1,,,,,,,,,,,,
```

# Fig. 13 ヒータ HEATER

https://truckmanualshub.com/

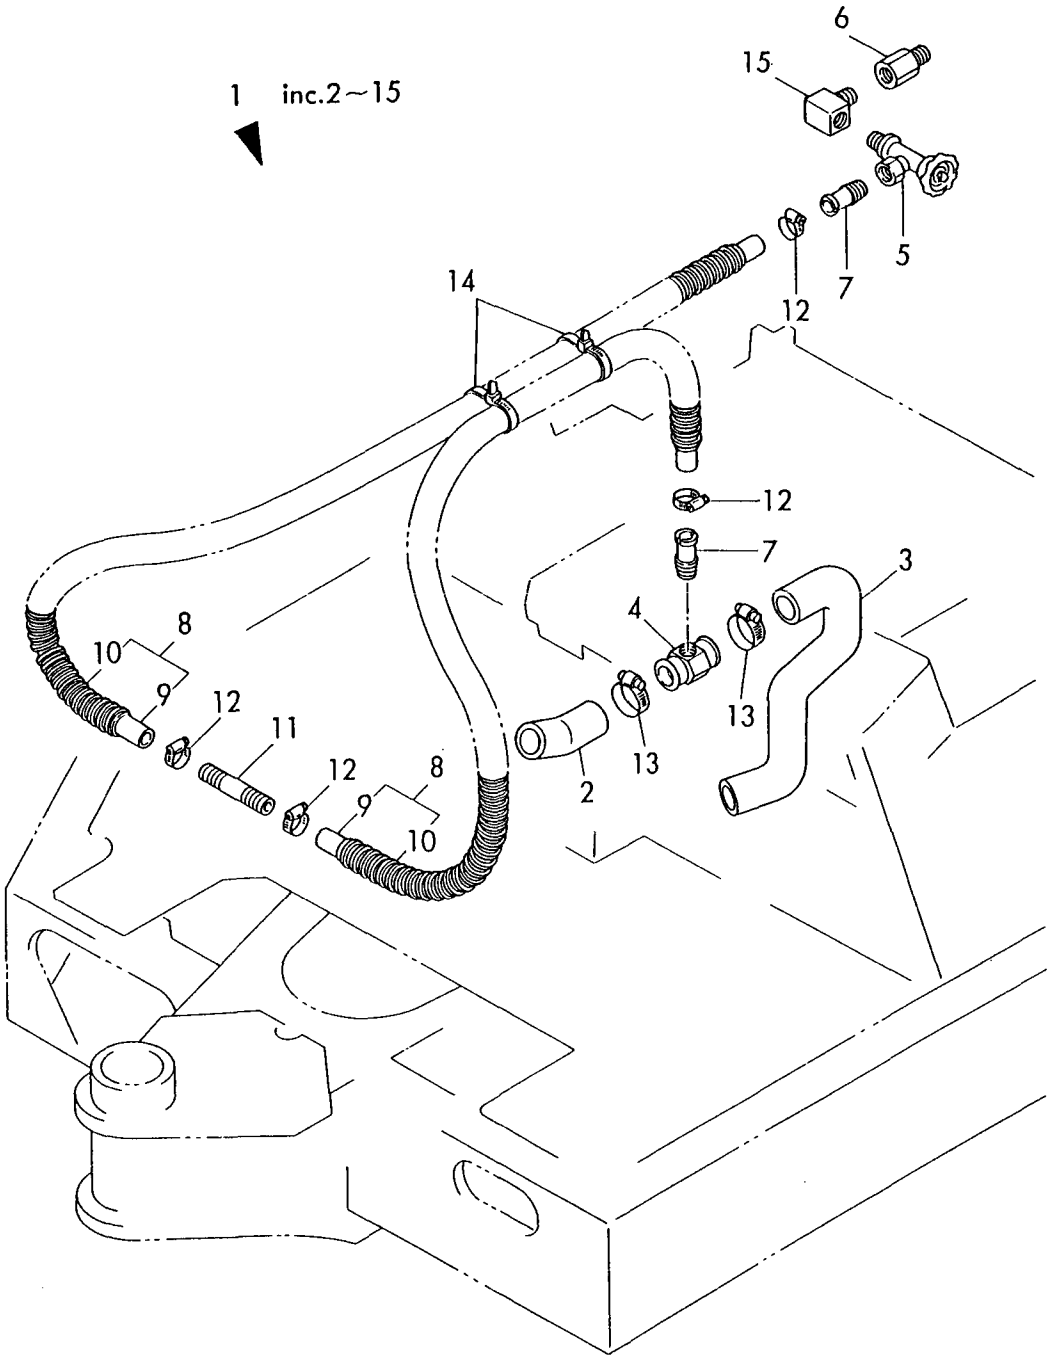

```
1,1,,772122-17810,,"RADIO ASSY (EC",1,,,,,,,,,,,,,,,,
2,2,,172122-16550,,"LEAD WIRE",1,,,,,,,,,,,,,,,,
3,2,,172119-16570,,"LEAD WIRE",1,,,,,,,,,,,,,,,,
4,2,,172119-16590,,"LEAD WIRE",1,,,,,,,,,,,,,,,,
5,2,,172122-16680,,CONNECTOR,1,,,,,,,,,,,,,,,,
6,2,,172122-16690,,"LEAD WIRE",1,,,,,,,,,,,,,,,,
7,2,,172119-17150,,"AM-FM RADIO 5PB",1,,,,,,,,,,,,,,,,
8,2,,172112-17171,,"SPEAKER (SPA-413)",1,,,,,,,,,,,,,,,,
9,2,,172112-17190,,"ANTENNA (NCP-314)",1,,,,,,,,,,,,,,,,
10,2,,172124-17812,,"STAY, SPEAKER",1,,,,,,,,,,,,,,,,
11,2,,172112-18230,,"PANEL, RADIO",1,,,,,,,,,,,,,,,,
12,2,,22857-400120,,"SCREW 4X12",3,,,,,,,,,,,,,,,,
13,2,,22857-500120,,"SCREW 5X12",2,,,,,,,,,,,,,,,,
14,2,,26557-040122,,"SCREW M 4X 12,PAN HD",2,,,,,,,,,,,,,,,,
15,2,,933168-56000,,"GROMMET 17X19",1,,,,,,,,,,,,,,,,
16,2,,933168-56000,,"GROMMET 17X19",1,,,,,,,,,,,,,,,,
```

# Fig. 14 ラジオ(EC) RADIO (EC)

https://truckmanualshub.com/

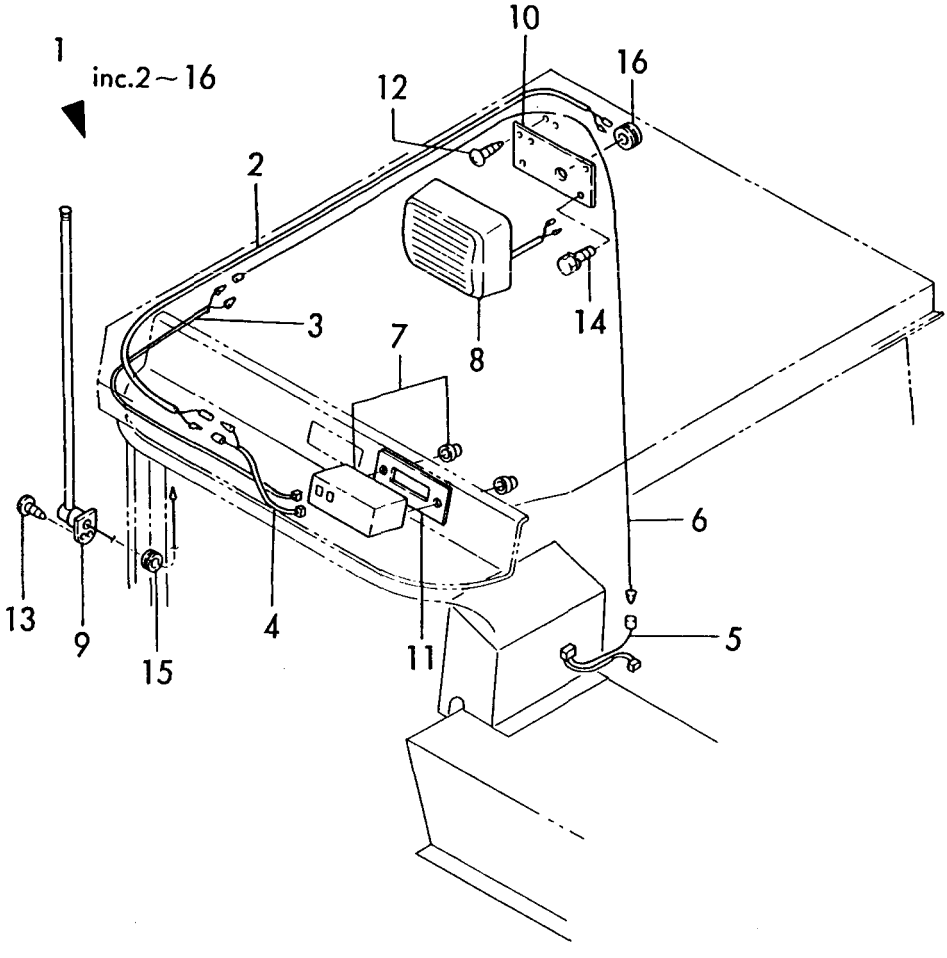

1,1,,172141-29110,,SPROCKET,2,2,2,2,2,2,,,,,,,,,,,,
2,1,,26013-120302,,"BOLT W/WASHER M12X30",18,18,18,18,18,18,,,,,,,,,,,,
3,1,,772142-37300,,"ROLLER ASSY, TRACK",6,6,6,6,6,6,,,,,,,,,,,,
5,2,,172146-37310,,"SHAFT, ROLLER",6,6,6,6,6,6,,,,,,,,,,,,
6,2,,172141-37320,,"SPACER 75X2.6",12,12,12,12,12,12,,,,,,,,,,,,
7,2,,1A1030-48250,,"SEAL QLF30621218,OIL",12,12,12,12,12,12,,,,,,,,,,,,
8,2,,22252-000620,,"CIRCLIP 62(H)",12,12,12,12,12,12,,,,,,,,,,,,
9,2,,22252-000750,,"CIRCLIP   75",12,12,12,12,12,12,,,,,,,,,,,,
10,2,,933111-73800,,BEARING,12,12,12,12,12,12,,,,,,,,,,,,
11,1,,172113-36050,,"BOLT, ROLLER ADJUST",6,6,6,6,6,6,,,,,,,,,,,,
12,1,,22217-160000,,"SPRING WASHER 16",6,6,6,6,6,6,,,,,,,,,,,,
13,1,,26657-160002,,"CAP NUT M16",6,6,6,6,6,6,,,,,,,,,,,,

# Fig. 15 トラック ローラ TRACK ROLLER

https://truckmanualshub.com/

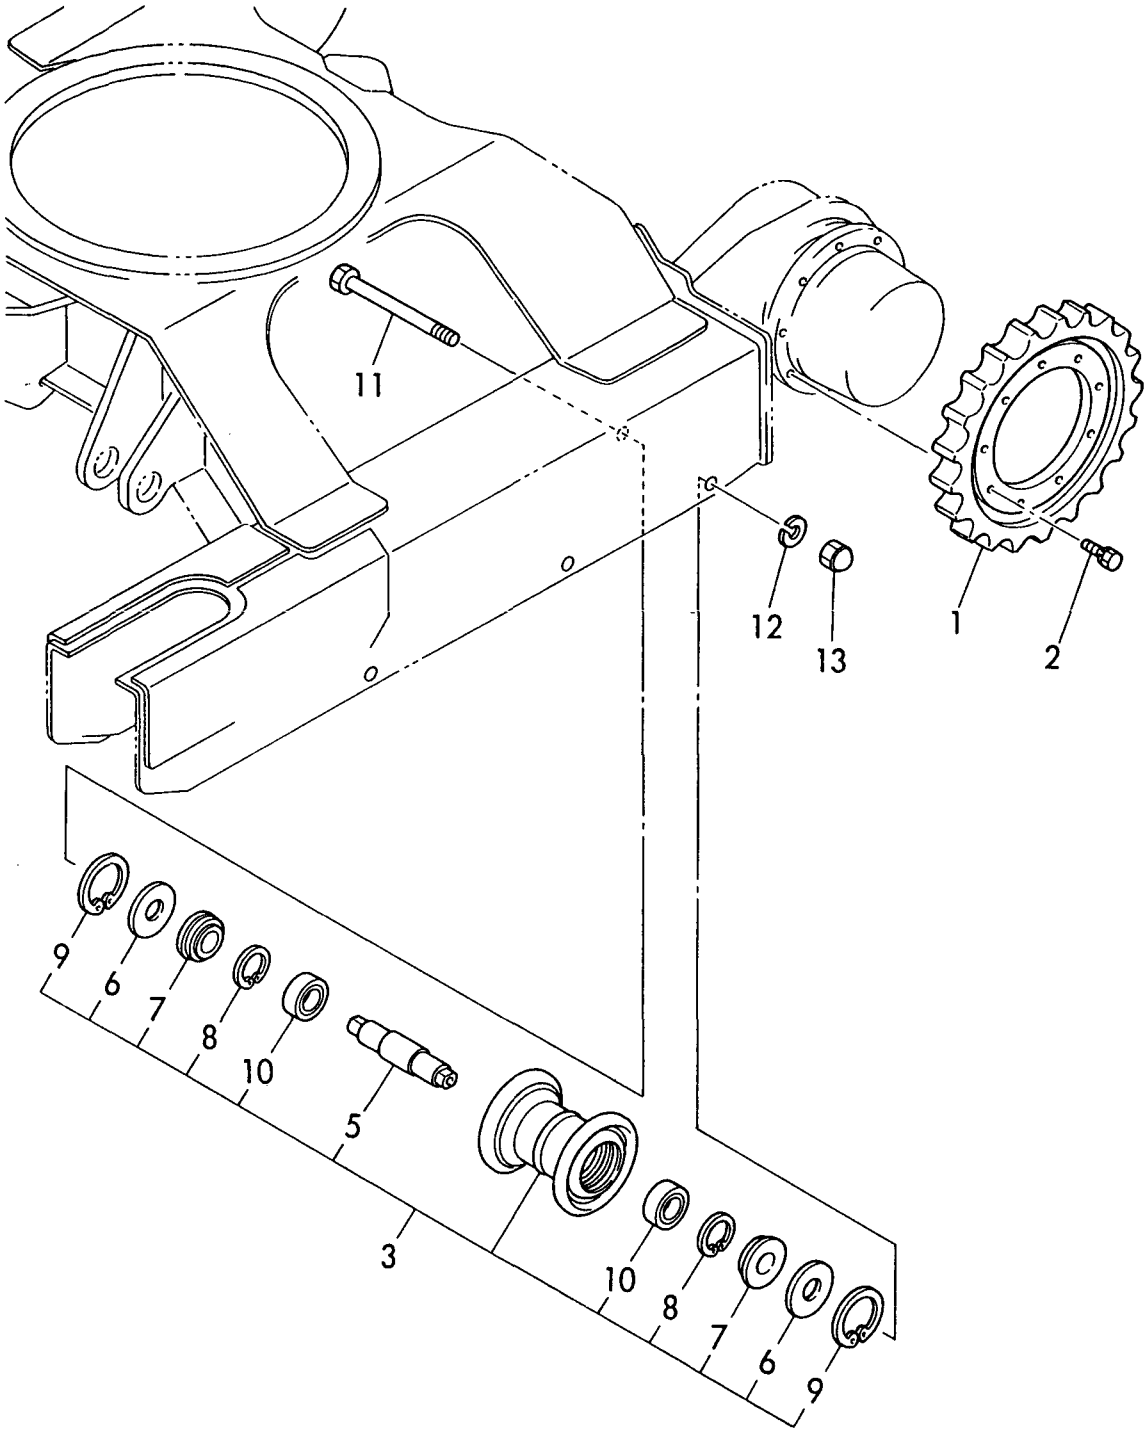

```
1,1,,772141-37100,,"IDLER 280 ASSY",2,2,2,2,2,2,,,,,,,,,,,,
3,2,,172141-37110,,"FORK(L), IDLER",2,2,2,2,2,2,,,,,,,,,,,,
4,2,,172141-37120,,"FORK(R), IDLER",2,2,2,2,2,2,,,,,,,,,,,,
5,2,,172141-37130,,"SHAFT, IDLER",2,2,2,2,2,2,,,,,,,,,,,,
6,2,,172141-37140,,"SEAL 357220",4,4,4,4,4,4,,,,,,,,,,,,
7,2,,22242-000300,,"CIRCLIP   30",2,2,2,2,2,2,,,,,,,,,,,,
8,2,,22252-000720,,"CIRCLIP   72",4,4,4,4,4,4,,,,,,,,,,,,
9,2,,24101-062074,,"BALL BEARING",4,4,4,4,4,4,,,,,,,,,,,,
10,1,,172141-37501,,PLATE,4,4,4,4,4,4,,,,,,,,,,,,
11,1,,26013-100302,,"BOLT M10X 30",8,8,8,8,8,8,,,,,,,,,,,,
12,1,,172146-37700,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
13,1,,172141-37800,,"PISTON, ADJUST",2,2,2,2,,,,,,,,,,,,,,
13-1,1,,172141-37801,,"PISTON,
ADJUST",2,2,2,2,2,2,S,,72149113,M11008,72149113,M11008,72149113,M11008,72149113,
M11008,,,,,I
14,1,,172122-37842,,"VALVE ASSY, NIPPLE",2,2,2,2,,,,,,,,,,,,,,
14-1,1,,172122-37843,,"VALVE ASSY,
NIPPLE",2,2,2,2,2,2,S,,72149113,M11008,72149113,M11008,72149113,M11008,72149113,
M11008,,,,,I
15,2,,24315-000120,,"O-RING 1B P-12.0",2,2,2,2,,,,,,,,,,,,,,
15-1,2,,24315-000140,,"O-RING 1B P-
14.0",2,2,2,2,2,2,S,,72149113,M11008,72149113,M11008,72149113,M11008,72149113,M1
1008,,,,,I
16,2,,24761-020000,,"NIPPLE PT1/8,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
17,1,,172141-37850,,"RING G35, BACK UP",2,2,2,2,2,2,,,,,,,,,,,,
18,1,,24325-000350,,"O-RING 1B G-35.0",2,2,2,2,2,2,,,,,,,,,,,,
19,1,,26013-100402,,"BOLT M10X 40",8,8,8,8,8,8,,,,,,,,,,,,
20,1,,933126-34300,,"SEAL 3547710",2,2,2,2,2,2,,,,,,,,,,,,
21,1,,933171-13691,,"PLUG PT1/8",2,2,2,2,2,2,,,,,,,,,,,,
22,1,,172141-50101,,"FRAME, LOWER",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172141-50750,,"COVER, MOTOR",2,2,2,2,2,2,,,,,,,,,,,,
24,1,,172141-50761,,"COVER, UNDER",1,1,1,1,1,1,,,,,,,,,,,,
25,1,,172141-50890,,GROMMET,2,2,2,2,2,2,,,,,,,,,,,,
26,1,,22217-100000,,"SPRING WASHER 10",6,6,6,6,6,6,,,,,,,,,,,,
27,1,,22217-120000,,"WASHER 12,SPRING",4,4,4,4,4,4,,,,,,,,,,,,
28,1,,26116-100202,,"BOLT M10X 20 PLATED",6,6,6,6,6,6,,,,,,,,,,,,
29,1,,26116-120252,,"BOLT M12X 25 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
30,1,,172730-05250,,"WASHER 12",12,12,12,12,12,12,,,,,,,,,,,,
31,1,,172141-50901,,"GUARD, SHOE",4,4,4,4,4,4,,,,,,,,,,,,
32,1,,26013-120452,,"BOLT M12X 45",12,12,12,12,12,12,,,,,,,,,,,,
33,1,,172122-50851,,"GUARD(L), SPROCKET",1,1,1,1,1,1,,,,,,,,,,,,
34,1,,172122-50861,,"GUARD(R), SPROCKET",1,1,1,1,1,1,,,,,,,,,,,,
35,1,,26013-120252,,"BOLT M12X 25",6,6,6,6,6,6,,,,,,,,,,,,
```

# Fig. 16 トラックフレーム&アイドラ TRACK FRAME & IDLER

https://truckmanualshub.com/

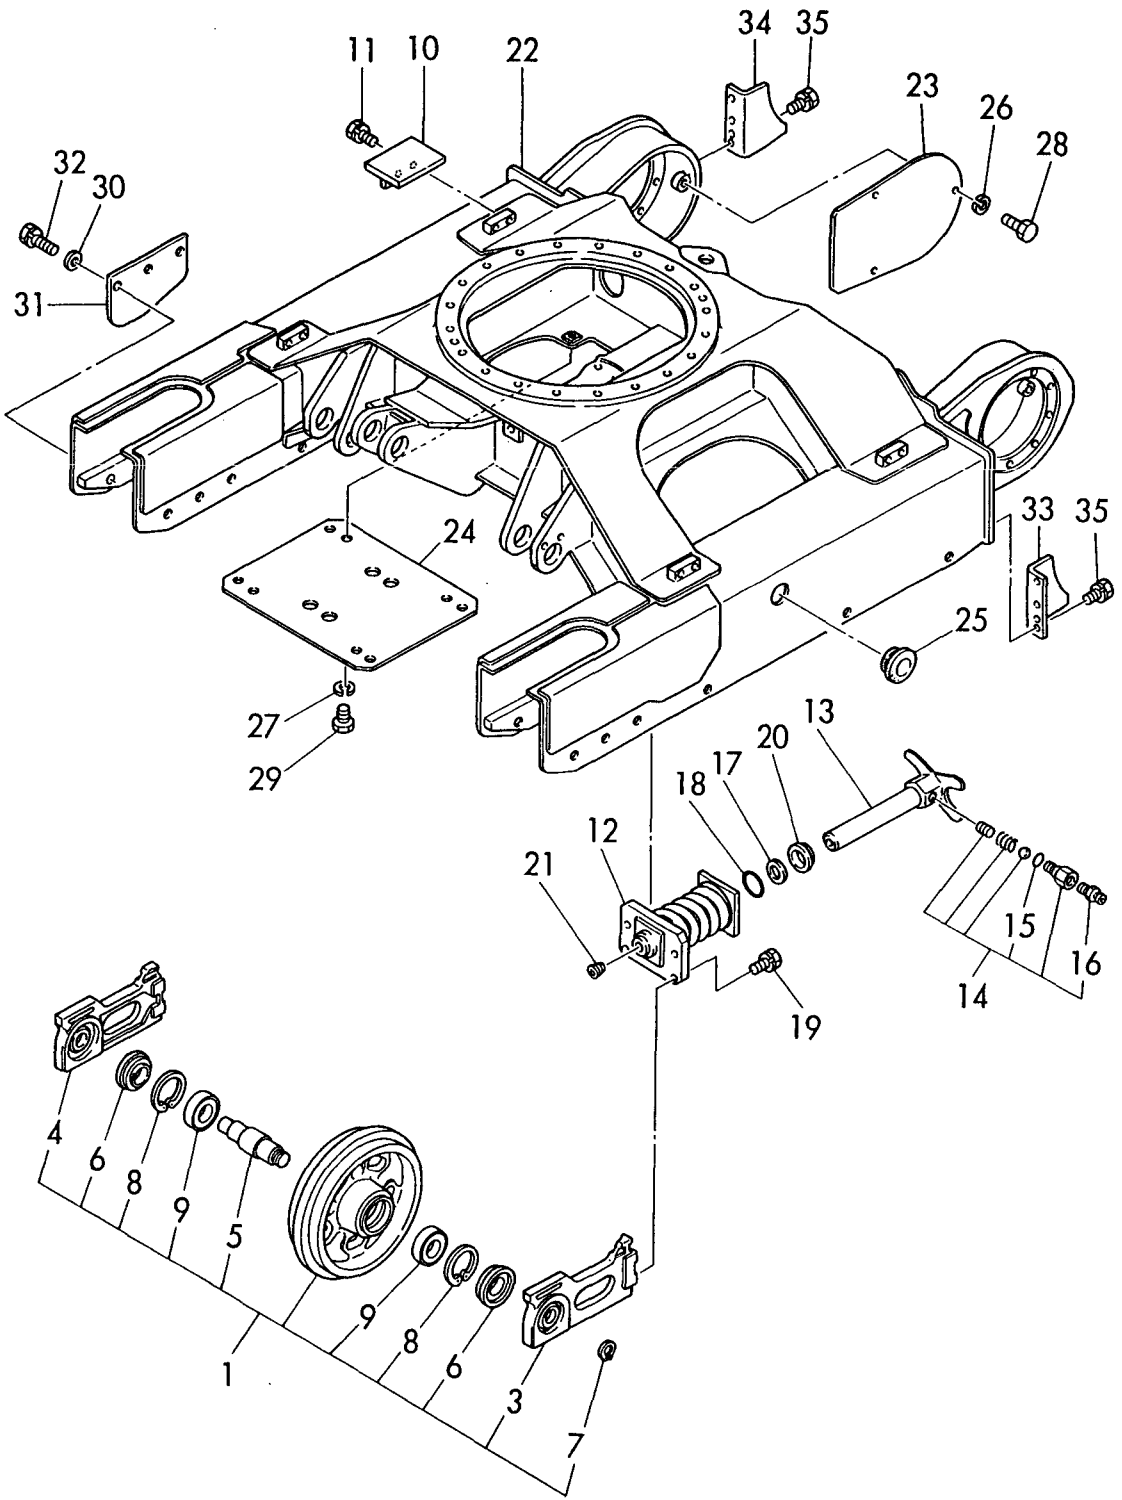

```
1,1,,772146-37100,,"IDLER 280 ASSY",2,2,2,2,2,2,,,,,,,,,,,,
2,2,,172146-37100,,"IDLER 280",2,2,2,2,2,2,,,,,,,,,,,,
3,2,,172141-37110,,"FORK(L), IDLER",2,2,2,2,2,2,,,,,,,,,,,,
4,2,,172141-37120,,"FORK(R), IDLER",2,2,2,2,2,2,,,,,,,,,,,,
5,2,,172141-37130,,"SHAFT, IDLER",2,2,2,2,2,2,,,,,,,,,,,,
6,2,,172141-37140,,"SEAL 357220",4,4,4,4,4,4,,,,,,,,,,,,
7,2,,22242-000300,,"CIRCLIP   30",2,2,2,2,2,2,,,,,,,,,,,,
8,2,,22252-000720,,"CIRCLIP   72",4,4,4,4,4,4,,,,,,,,,,,,
9,2,,24101-062074,,"BALL BEARING",4,4,4,4,4,4,,,,,,,,,,,,
10,1,,172141-37501,,PLATE,4,4,4,4,4,4,,,,,,,,,,,,
11,1,,26013-100302,,"BOLT M10X 30",8,8,8,8,8,8,,,,,,,,,,,,
12,1,,172146-37700,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
13,1,,172141-37800,,"PISTON, ADJUST",2,2,2,2,,,,,,,,,,,,,,
13-1,1,,172141-37801,,"PISTON,
ADJUST",2,2,2,2,2,2,S,,72149113,M11008,72149113,M11008,72149113,M11008,72149113,
M11008,,,,,I
14,1,,172122-37842,,"VALVE ASSY, NIPPLE",2,2,2,2,,,,,,,,,,,,,,
14-1,1,,172122-37843,,"VALVE ASSY,
NIPPLE",2,2,2,2,2,2,S,,72149113,M11008,72149113,M11008,72149113,M11008,72149113,
M11008,,,,,I
15,2,,24315-000120,,"O-RING 1B P-12.0",2,2,2,2,,,,,,,,,,,,,,
15-1,2,,24315-000140,,"O-RING 1B P-
14.0",2,2,2,2,2,2,S,,72149113,M11008,72149113,M11008,72149113,M11008,72149113,M1
1008,,,,,I
16,2,,24761-020000,,"NIPPLE PT1/8,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
17,1,,172141-37850,,"RING G35, BACK UP",2,2,2,2,2,2,,,,,,,,,,,,
18,1,,24325-000350,,"O-RING 1B G-35.0",2,2,2,2,2,2,,,,,,,,,,,,
19,1,,26013-100402,,"BOLT M10X 40",8,8,8,8,8,8,,,,,,,,,,,,
20,1,,933126-34300,,"SEAL 3547710",2,2,2,2,2,2,,,,,,,,,,,,
21,1,,933171-13691,,"PLUG PT1/8",2,2,2,2,2,2,,,,,,,,,,,,
22,1,,172141-50101,,"FRAME, LOWER",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172141-50750,,"COVER, MOTOR",2,2,2,2,2,2,,,,,,,,,,,,
24,1,,172141-50761,,"COVER, UNDER",1,1,1,1,1,1,,,,,,,,,,,,
25,1,,172141-50890,,GROMMET,2,2,2,2,2,2,,,,,,,,,,,,
26,1,,22217-100000,,"SPRING WASHER 10",6,6,6,6,6,6,,,,,,,,,,,,
27,1,,22217-120000,,"WASHER 12,SPRING",4,4,4,4,4,4,,,,,,,,,,,,
28,1,,26116-100202,,"BOLT M10X 20 PLATED",6,6,6,6,6,6,,,,,,,,,,,,
29,1,,26116-120252,,"BOLT M12X 25 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
```

# Fig. 17 トラックフレーム&アイドラ(R) TRACK FRAME & IDLER (R)

https://truckmanualshub.com/

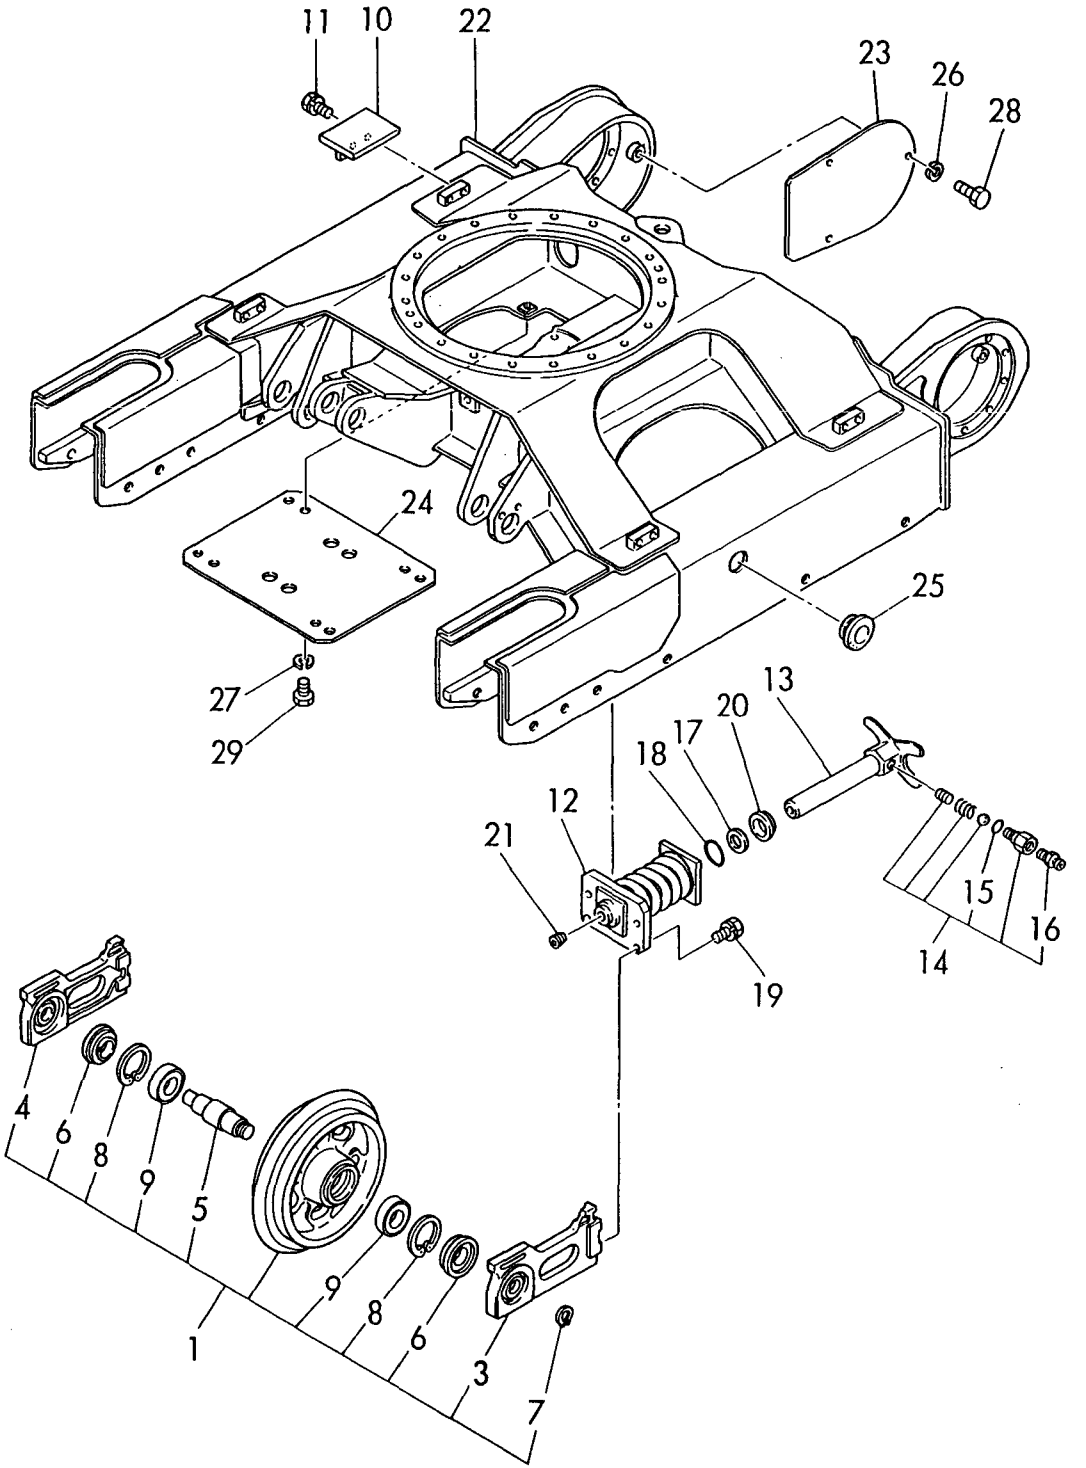

```
1,1,,172141-38100,,"CRAWLER 270 ASSY",2,2,2,2,2,2,,,,,,,,,,,,
2,2,,172141-38150,,"LINK ASSY, CRAWLER",2,2,2,2,2,2,,,,,,,,,,,,
3,3,,172141-38200,,BUSH,72,72,72,72,72,72,,,,,,,,,,,,
4,3,,172141-38210,,"PIN, CRAWLER",70,70,70,70,70,70,,,,,,,,,,,,
5,2,,172141-38230,,"SHOE 270, CRAWLER",72,72,72,72,72,72,,,,,,,,,,,,
6,1,,172141-38220,,"PIN, MASTER",2,2,2,2,2,2,,,,,,,,,,,,
7,1,,172614-38300,,"PIN 5X45, LOCK",2,2,2,2,2,2,,,,,,,,,,,,
8,1,,172141-38240,,"TRACK 270, MASTER",2,2,2,2,2,2,,,,,,,,,,,,
9,1,,172141-38610,,"CRAWLER, RUBBER",2,2,2,2,2,2,,,,,,,,,,,,
```

# Fig. 18 クローラ (270) CRAWLER (270)

https://truckmanualshub.com/

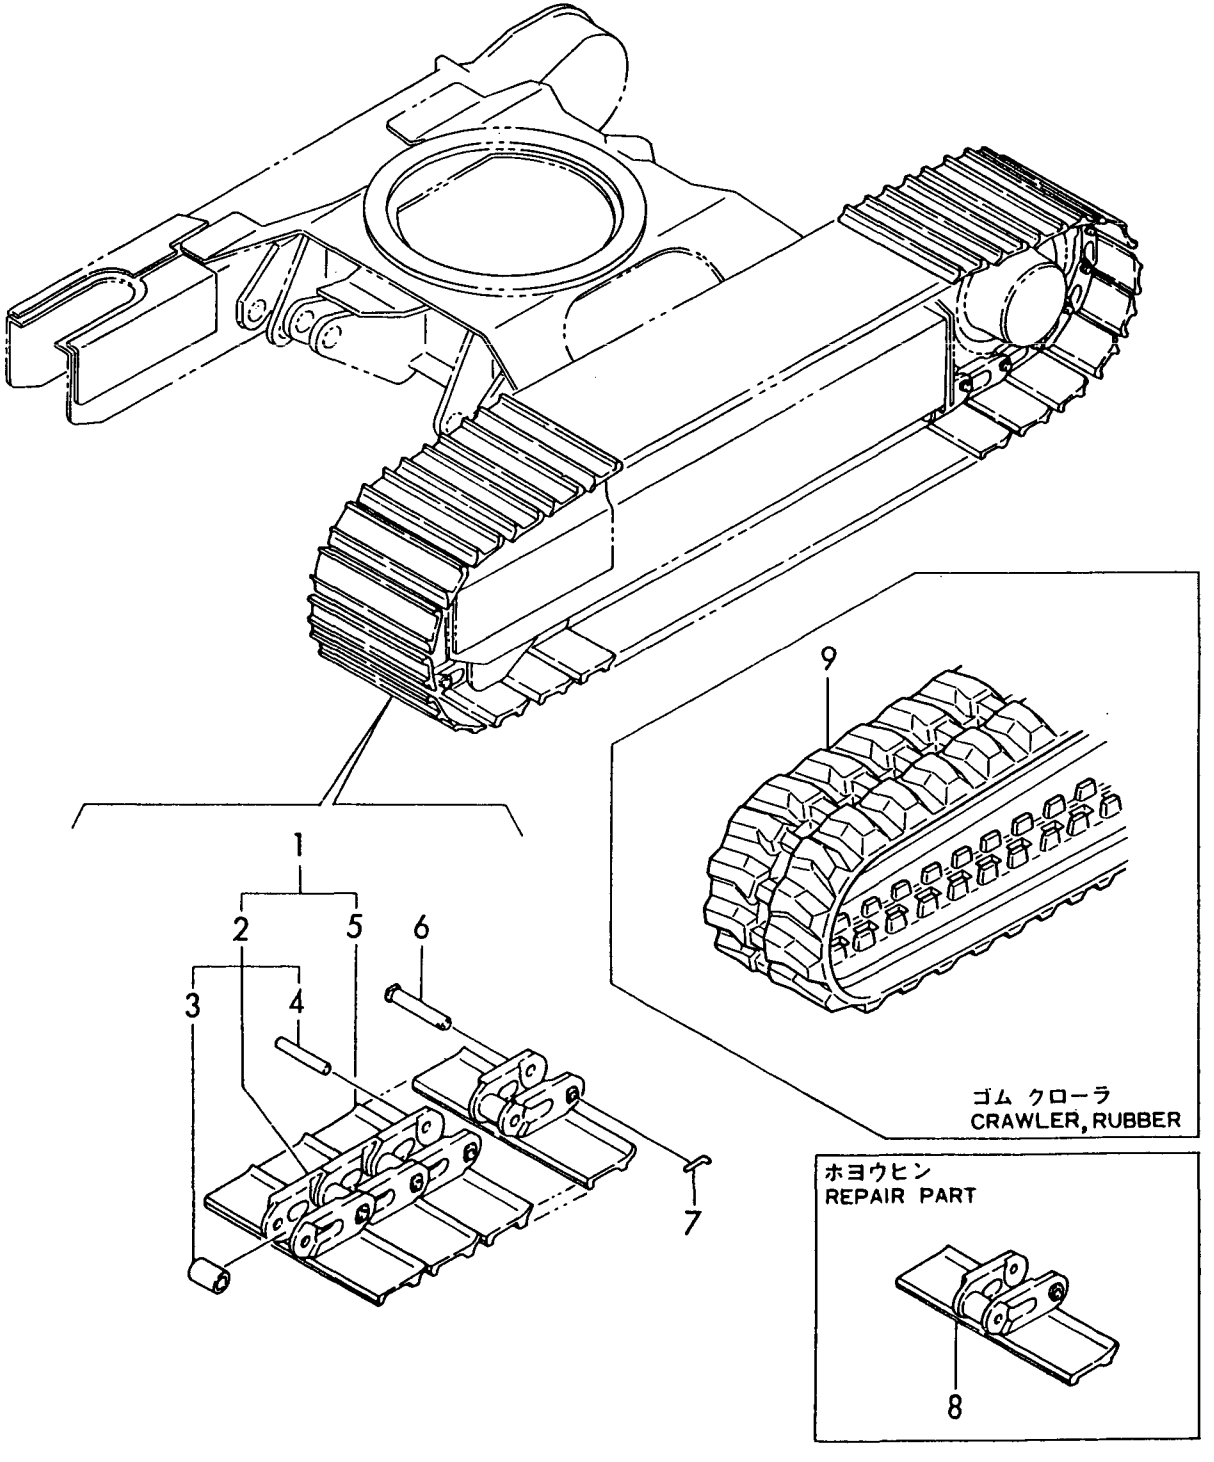

```
1,1,,172141-42300,,"PLATE, LINK",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-42390,,"COVER, UNDER",2,2,2,2,,,,,,,,,,,,,,
2-1,1,,172141-42390,,"COVER,
UNDER",1,1,1,1,1,1,K,,72141356,*1989.09,72141356,*1989.09,72141356,*1989.09,7214
1356,*1989.09,,,,,I
3,1,,172142-43300,,"SUPPORT,R",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172142-43330,,"SUPPORT,L",1,1,1,1,,,,,,,,,,,,,,,,
4-1,1,,172142-
43331,,SUPPORT(L),1,1,1,1,1,1,F,1,72143020,*1990.08,72143020,*1990.08,72143020,*
1990.08,72143020,*1990.08,,,,,I
5,1,,172142-43390,,"COVER, SUPPORT",2,2,2,2,2,2,,,,,,,,,,,,
6,1,,22217-080000,,"SPRING WASHER  8",3,3,3,3,3,3,,,,,,,,,,,,
7,1,,22217-080000,,"SPRING WASHER  8",3,3,3,3,3,3,,,,,,,,,,,,
8,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
9,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
10,1,,22217-100000,,"SPRING WASHER
10",8,8,8,8,,,Z,,72141356,*1989.09,72141356,*1989.09,72141356,*1989.09,72141356,
*1989.09,,,,,I
11,1,,26116-100202,,"BOLT M10X 20 PLATED",6,6,6,6,6,6,,,,,,,,,,,,
12,1,,26116-080202,,"BOLT M 8X 20 PLATED",3,3,3,3,3,3,,,,,,,,,,,,
13,1,,26116-080202,,"BOLT M 8X 20 PLATED",3,3,3,3,3,3,,,,,,,,,,,,
14,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
15,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
16,1,,26116-100202,,"BOLT M10X 20 PLATED",8,8,8,8,,,,,,,,,,,,,,
16-1,1,,26013-100202,,"BOLT W/WASHER
M10X20",4,4,4,4,4,4,S,,72141356,*1989.09,72141356,*1989.09,72141356,*1989.09,721
41356,*1989.09,,,,,I
17,1,,26716-100002,,"NUT
M10",4,4,4,4,,,Z,,72141356,*1989.09,72141356,*1989.09,72141356,*1989.09,72141356
,*1989.09,,,,,I
18,1,,22217-100000,,"SPRING WASHER 10",6,6,6,6,6,6,,,,,,,,,,,,
19,1,,172141-43820,,"COVER(A),
UNDER",1,1,1,1,1,1,W,,72141356,*1989.09,72141356,*1989.09,72141356,*1989.09,7214
1356,*1989.09,,,,,I
20,1,,26013-100252,,"BOLT M10X
25",2,2,2,2,2,2,W,,72141356,*1989.09,72141356,*1989.09,72141356,*1989.09,7214135
6,*1989.09,,,,,I
```

# Fig. 19 リンクダイ LINK STAND

https://truckmanualshub.com/

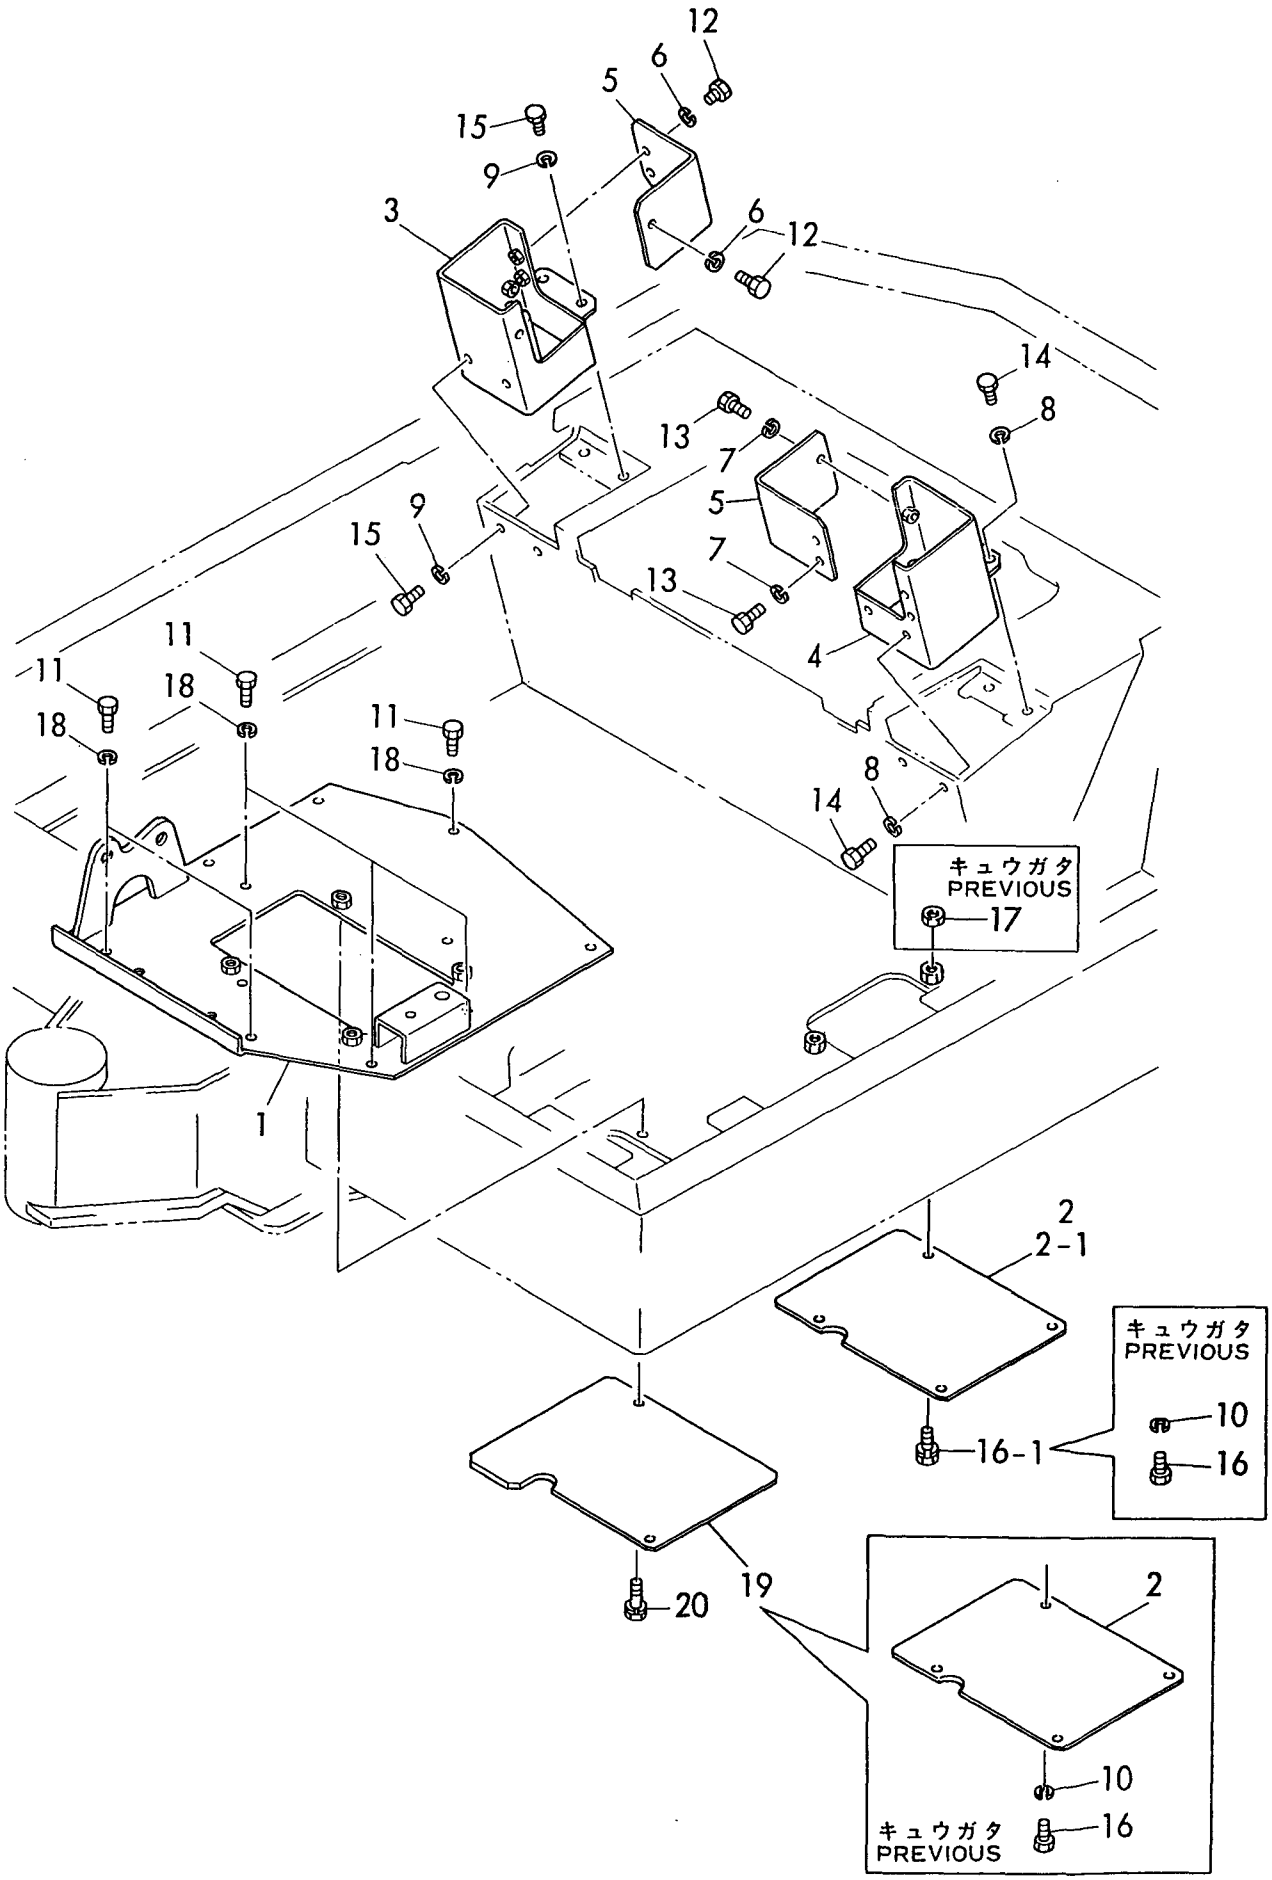

```
1,1,,172141-41150,,"LINK(L), LEVER",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-41160,,JOINT,1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-41330,,"BOOTS, LEVER",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172142-44170,,"JOINT, LEVER",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172143-45100,,LEVER,1,1,1,1,1,1,,,,,,,,,,,,
6,1,,172143-45130,,"ROD ASSY,CONNECTING",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172143-45800,,KNOB(A),1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172122-46590,,"ELBALL
8",2,2,2,2,,,Z,,72142352,*1990.08,72142352,*1990.08,72142352,*1990.08,72142352,*
1990.08,,,,,I
9,1,,22217-140000,,"SPRING WASHER 14",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,24311-000140,,"O-RING 1A P-14.0",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,26450-080202,,"BOLT M 8X 20",1,1,1,1,,,,,,,,,,,,,,
11-1,1,,26979-080162,,"SCREW M
8X16",1,1,1,1,1,1,N,,72143012,M11314,72143012,M11314,72143012,M11314,72143012,M1
1314,,,,,I
12,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,26716-100002,,"NUT M10",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,26736-140002,,"NUT M14",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,933168-55770,,"BAND 146",2,2,2,2,2,2,,,,,,,,,,,,
16,1,,172141-41810,,"SHAFT, LINK",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,172143-45200,,"LINK, BOOM",1,1,1,1,1,1,,,,,,,,,,,,
18,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
20,1,,172143-45290,,"LINK, BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172141-41460,,"LINK(A), BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172143-45580,,SCREW,1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172122-45720,,"ROD-END 14",2,2,2,2,2,2,,,,,,,,,,,,
24,1,,172124-46200,,"O-RING 27X5.7",4,4,4,4,4,4,,,,,,,,,,,,
25,1,,22157-120000,,"WASHER 12",2,2,2,2,2,2,,,,,,,,,,,,
26,1,,22217-140000,,"SPRING WASHER 14",3,3,3,3,3,3,,,,,,,,,,,,
27,1,,22351-050036,,"SPRING PIN 5X36",2,2,2,2,2,2,,,,,,,,,,,,
28,1,,24761-040000,,"NIPPLE B,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
29,1,,26716-100002,,"NUT M10",2,2,2,2,2,2,,,,,,,,,,,,
30,1,,172141-42970,,"PIN 6X15",2,2,2,2,2,2,,,,,,,,,,,,
31,1,,172143-45640,,"ROD, LINK",2,2,2,2,,,,,,,,,,,,,,
31-1,1,,172143-45641,,"ROD,
LINK",2,2,2,2,2,2,S,1,72142352,*1990.08,72142352,*1990.08,72142352,*1990.08,7214
2352,*1990.08,,,,,I
32,1,,172143-45660,,"ROD(B), SPOOL",1,1,1,1,1,1,,,,,,,,,,,,
33,1,,172122-46590,,"ELBALL 8",2,2,2,2,2,2,,,,,,,,,,,,
34,1,,172122-46590,,"ELBALL 8",1,1,1,1,1,1,,,,,,,,,,,,
35,1,,172122-46590,,"ELBALL 8",1,1,1,1,1,1,,,,,,,,,,,,
36,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",2,2,2,2,2,2,,,,,,,,,,,,
37,1,,22217-080000,,"SPRING WASHER  8",4,4,4,4,4,4,,,,,,,,,,,,
38,1,,26716-080002,,"NUT M 8",12,12,12,12,,,,,,,,,,,,,,
38-1,1,,26716-080002,,"NUT M
8",10,10,10,10,10,10,K,,72142352,*1990.08,72142352,*1990.08,72142352,*1990.08,72
142352,*1990.08,,,,,I
39,1,,26116-140352,,"BOLT M14X 35 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,172143-45650,,"ROD(A), SPOOL",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,172734-41300,,"BALL 8L,
LINK",2,2,2,2,2,2,W,1,72142352,*1990.08,72142352,*1990.08,72142352,*1990.08,7214
2352,*1990.08,,,,,I
42,1,,194200-37780,,"LS-NUT
8",2,2,2,2,2,2,W,1,72142352,*1990.08,72142352,*1990.08,72142352,*1990.08,7214235
2,*1990.08,,,,,I
```

# Fig. 20 ソウジュウソウチ（ブーム＆バケット）
# CONTROL EQUIPMENT（BOOM & BUCKET）

https://truckmanualshub.com/

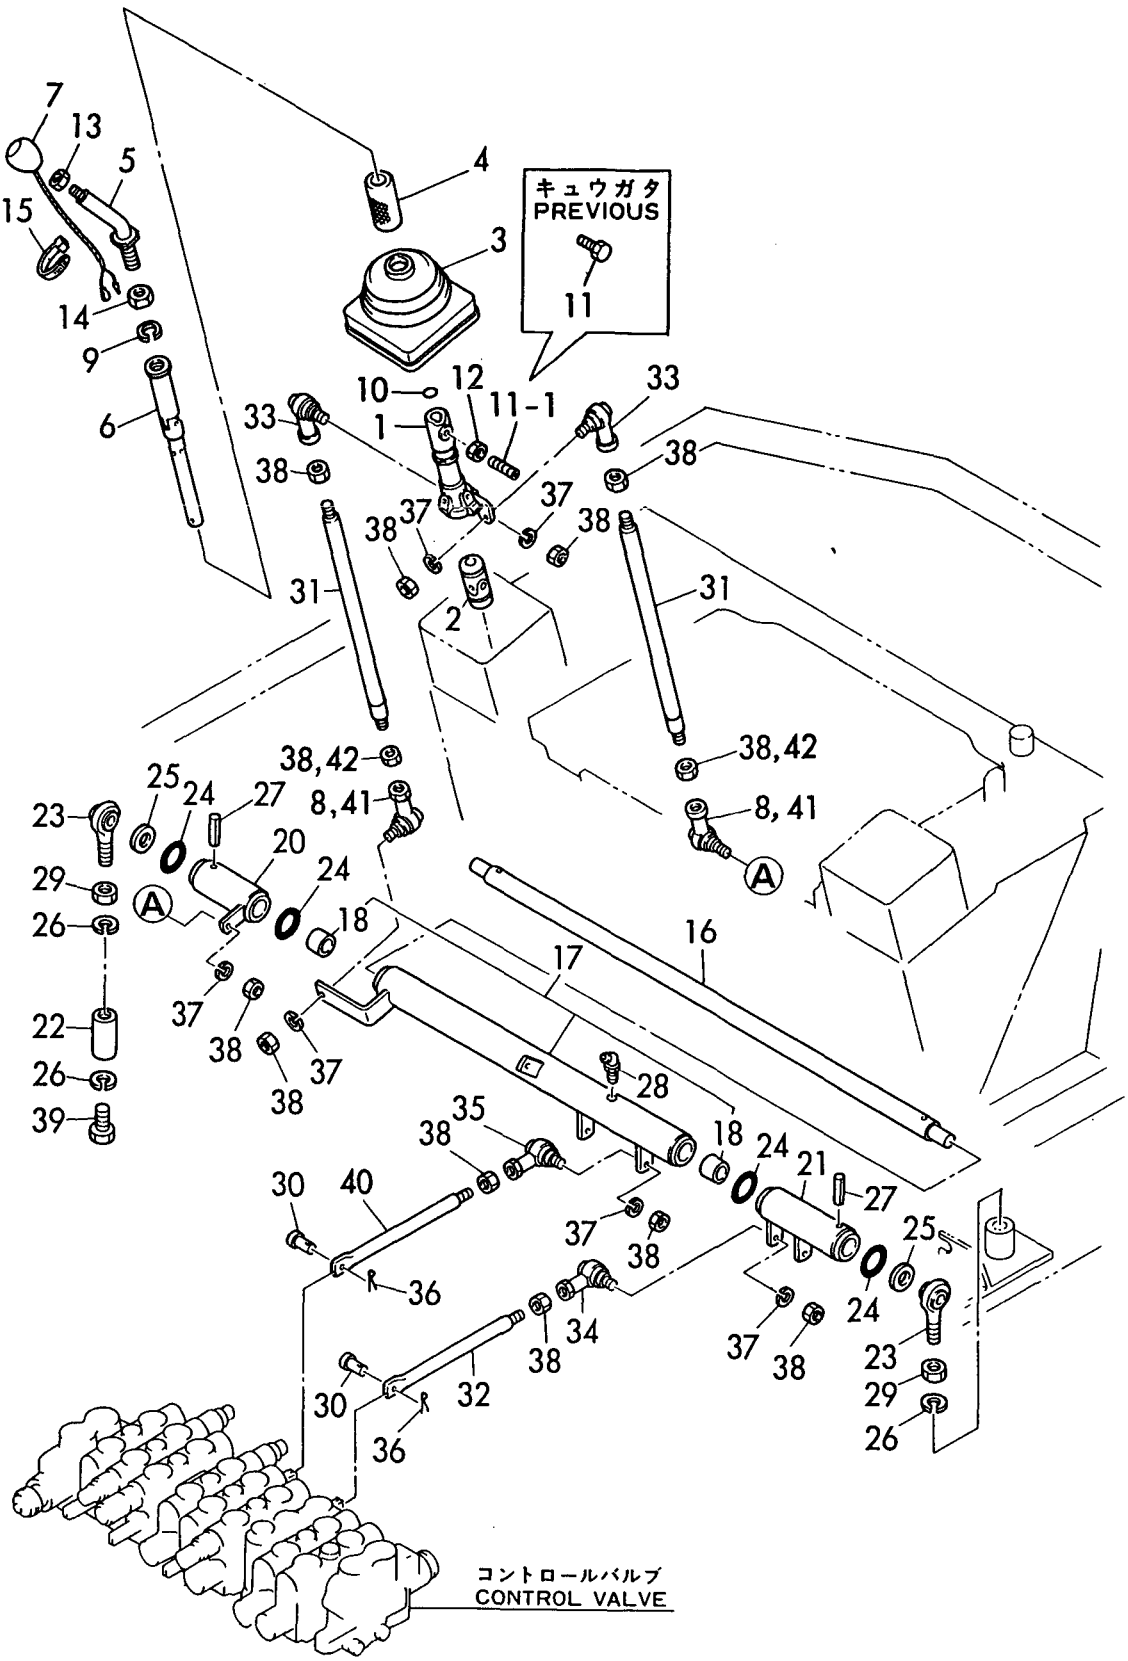

1,1,,172141-41150,,"LINK(L), LEVER",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-41160,,JOINT,1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-41330,,"BOOTS, LEVER",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172142-44170,,"JOINT, LEVER",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172143-45100,,LEVER,1,1,1,1,1,1,,,,,,,,,,,,
6,1,,172143-45130,,"ROD ASSY,CONNECTING",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172312-46321,,KNOB(B),1,1,1,1,1,1,,,,,,,,,,,,
8,1,,22217-140000,,"SPRING WASHER 14",1,1,1,1,1,1,,,,,,,,,,,,
9,1,,24311-000140,,"O-RING 1A P-14.0",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,26450-080202,,"BOLT M 8X 20",1,1,1,1,,,,,,,,,,,,,,
10-1,1,,26979-080162,,"SCREW M
8X16",1,1,1,1,1,1,N,,72143012,M11314,72143012,M11314,72143012,M11314,72143012,M1
1314,,,,,I
11,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,26716-100002,,"NUT M10",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,26736-140002,,"NUT M14",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,172143-45250,,"LINK(A), ARM",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,172143-45320,,"LINK W/BUSH,TURNING",1,1,1,1,1,1,,,,,,,,,,,,
16,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
18,1,,172143-45500,,STAY,1,1,1,1,1,1,,,,,,,,,,,,
19,1,,172143-45550,,STAY,1,1,1,1,1,1,,,,,,,,,,,,
20,1,,172122-45720,,"ROD-END 14",2,2,2,2,2,2,,,,,,,,,,,,
21,1,,172143-45720,,"LINK(B), ARM",2,2,2,2,2,2,,,,,,,,,,,,
22,1,,172143-45730,,"LINK W/BUSH",1,1,1,1,1,1,,,,,,,,,,,,
24,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
25,1,,172143-45770,,"SHAFT 433",1,1,1,1,1,1,,,,,,,,,,,,
26,1,,172124-46200,,"O-RING 27X5.7",7,7,7,7,7,7,,,,,,,,,,,,
27,1,,22137-100000,,"WASHER 10,POLISHED",3,3,3,3,3,3,,,,,,,,,,,,
28,1,,22157-120000,,"WASHER 12",2,2,2,2,2,2,,,,,,,,,,,,
29,1,,22217-100000,,"SPRING WASHER 10",3,3,3,3,3,3,,,,,,,,,,,,
30,1,,22217-140000,,"SPRING WASHER 14",2,2,2,2,2,2,,,,,,,,,,,,
31,1,,22351-050036,,"SPRING PIN 5X36",2,2,2,2,2,2,,,,,,,,,,,,
32,1,,24761-040000,,"NIPPLE B,GREASE",3,3,3,3,3,3,,,,,,,,,,,,
33,1,,26013-100252,,"BOLT M10X 25",2,2,2,2,2,2,,,,,,,,,,,,
34,1,,26116-100202,,"BOLT M10X 20 PLATED",3,3,3,3,3,3,,,,,,,,,,,,
35,1,,26716-140002,,"NUT M14",2,2,2,2,2,2,,,,,,,,,,,,
36,1,,172141-42970,,"PIN 6X15",2,2,2,2,2,2,,,,,,,,,,,,
37,1,,172143-45630,,"ROD, LINK(L)",2,2,2,2,2,2,,,,,,,,,,,,
38,1,,172143-45650,,"ROD(A), SPOOL",2,2,2,2,2,2,,,,,,,,,,,,
39,1,,172143-45670,,"ROD, END 8",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,172122-46590,,"ELBALL 8",2,2,2,2,2,2,,,,,,,,,,,,
41,1,,172122-46590,,"ELBALL 8",1,1,1,1,1,1,,,,,,,,,,,,
42,1,,172122-47250,,"BALL 8, LINK",2,2,2,2,2,2,,,,,,,,,,,,
43,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",2,2,2,2,2,2,,,,,,,,,,,,
44,1,,22217-080000,,"SPRING WASHER  8",4,4,4,4,4,4,,,,,,,,,,,,
45,1,,22217-080000,,"SPRING WASHER  8",2,2,2,2,2,2,,,,,,,,,,,,
46,1,,22217-080000,,"SPRING WASHER  8",2,2,2,2,2,2,,,,,,,,,,,,
47,1,,26116-080302,,"BOLT M 8X 30 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
48,1,,26716-080002,,"NUT M 8",9,9,9,9,9,9,,,,,,,,,,,,
49,1,,26716-080002,,"NUT M 8",4,4,4,4,4,4,,,,,,,,,,,,
50,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
51,1,,172122-46590,,"ELBALL 8",2,2,2,2,2,2,,,,,,,,,,,,

# Fig. 21 ソウジュウソウチ（アーム ＆ センカイ）
# CONTROL EQUIPMENT (ARM & TURNING)

https://truckmanualshub.com/

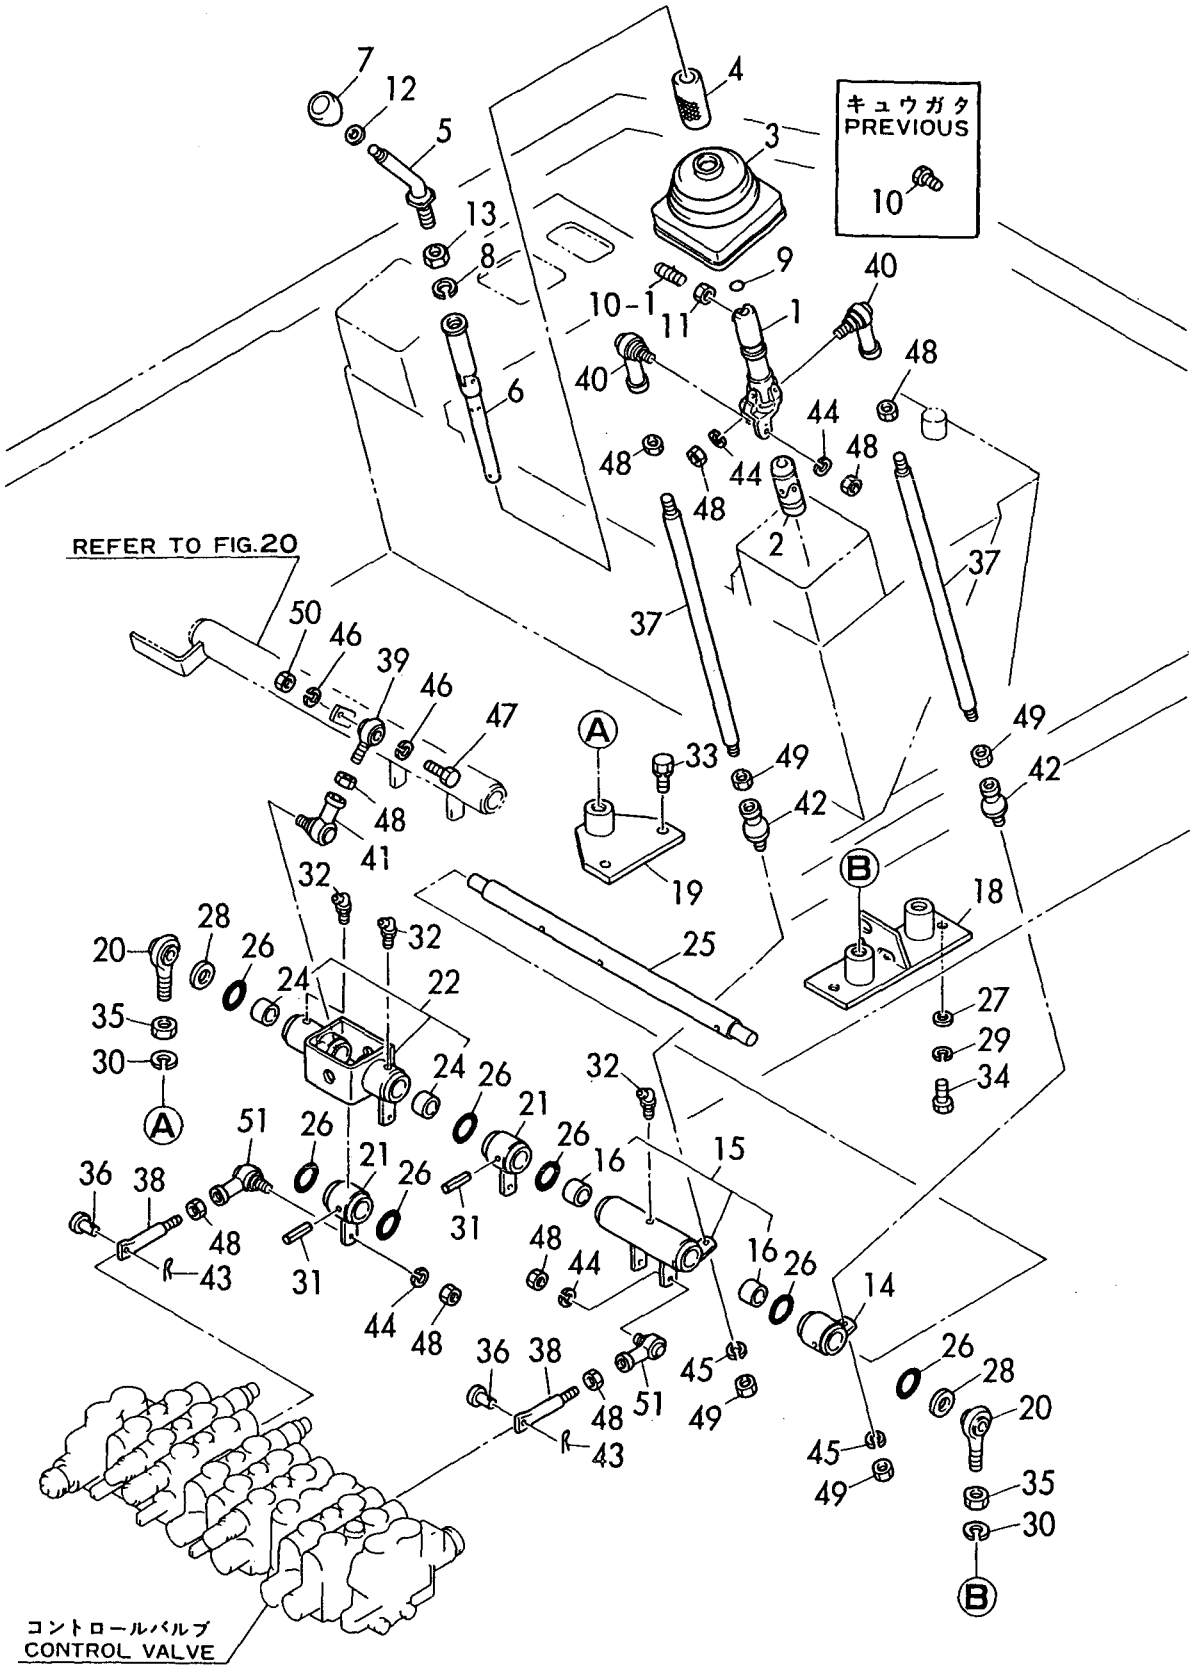

1,1,,172141-41170,,"LEVER(L) W/BUSH",1,1,1,1,,,,,,,,,,,,,
1-1,1,,172141-41171,,"LEVER(L)
W/BUSH",1,1,1,1,1,1,N,,72141357,M11438,72141357,M11438,72141357,M11438,72141357,
M11438,,,,,I
3,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
4,1,,172141-41230,,"LEVER(R) W/BUSH",1,1,1,1,,,,,,,,,,,,,
4-1,1,,172141-41231,,"LEVER(R)
W/BUSH",1,1,1,1,1,1,N,,72141357,M11438,72141357,M11438,72141357,M11438,72141357,
M11438,,,,,I
6,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
7,1,,172141-41340,,BOOTS,2,2,2,2,2,2,,,,,,,,,,,,
8,1,,172122-45050,,"KNOB (L)",1,1,1,1,1,1,,,,,,,,,,,,
9,1,,172122-45060,,"KNOB (R)",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,172124-46200,,"O-RING 27X5.7",3,3,3,3,3,3,,,,,,,,,,,,
11,1,,24761-050000,,"NIPPLE C,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
12,1,,26716-100002,,"NUT M10",2,2,2,2,2,2,,,,,,,,,,,,
13,1,,172141-41610,,"LINK W/BUSH, SWING",1,1,1,1,1,1,,,,,,,,,,,,
14,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
16,1,,172141-41760,,"SHAFT, TRACK",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,172143-45360,,"LINK, SWING",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,172143-45450,,"BRACKET ASSY",1,1,1,1,,,,,,,,,,,,,
18-1,1,,172151-45960,,"BRACKET,
PEDAL",1,1,1,1,1,1,N,,72148106,M11898,72148106,M11898,72148106,M11898,72148106,M
11898,,,,,I
19,2,,172141-41370,,"BUSH 2015",2,2,2,2,2,2,,,,,,,,,,,,
21,1,,1A1040-45890,,"WASHER 10 36 4.5",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172124-46200,,"O-RING 27X5.7",4,4,4,4,4,4,,,,,,,,,,,,
23,1,,22217-100000,,"SPRING WASHER 10",1,1,1,1,1,1,,,,,,,,,,,,
24,1,,22351-050036,,"SPRING PIN 5X36",1,1,1,1,1,1,,,,,,,,,,,,
25,1,,24761-050000,,"NIPPLE C,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
26,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
27,1,,26013-100252,,"BOLT M10X 25",3,3,3,3,3,3,,,,,,,,,,,,
28,1,,26116-100202,,"BOLT M10X 20 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
29,1,,172111-16890,,"GROMMET  9",1,1,1,1,1,1,,,,,,,,,,,,
30,1,,172141-41840,,"PEDAL(L), TRACK",1,1,1,1,1,1,,,,,,,,,,,,
31,1,,172141-41850,,"PEDAL(R), TRACK",1,1,1,1,1,1,,,,,,,,,,,,
32,1,,172141-41900,,"PEDAL, SWING",1,1,1,1,1,1,,,,,,,,,,,,
33,1,,172141-41940,,"LOCK, SWING",1,1,1,1,1,1,,,,,,,,,,,,
34,1,,22217-100000,,"SPRING WASHER 10",2,2,2,2,2,2,,,,,,,,,,,,
35,1,,22417-250200,,"COTTER PIN 2.5X20",1,1,1,1,1,1,,,,,,,,,,,,
36,1,,26013-060352,,"BOLT M 6X 35",4,4,4,4,4,4,,,,,,,,,,,,
37,1,,26116-100602,,"BOLT M10X 60 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
38,1,,26716-100002,,"NUT M10",2,2,2,2,2,2,,,,,,,,,,,,
39,1,,933171-18390,,"PIN, FOOT BAR",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,172141-42860,,"ROD, SWING",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,172141-42890,,"ROD(C), SPOOL",2,2,2,2,2,2,,,,,,,,,,,,
42,1,,172141-42910,,"ROD(D), SPOOL",1,1,1,1,1,1,,,,,,,,,,,,
43,1,,172141-42970,,"PIN 6X15",3,3,3,3,3,3,,,,,,,,,,,,
44,1,,172122-46590,,"ELBALL 8",3,3,3,3,3,3,,,,,,,,,,,,
45,1,,172122-46590,,"ELBALL 8",2,2,2,2,2,2,,,,,,,,,,,,
46,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",3,3,3,3,3,3,,,,,,,,,,,,
47,1,,22217-080000,,"SPRING WASHER  8",5,5,5,5,5,5,,,,,,,,,,,,
48,1,,26716-080002,,"NUT M 8",10,10,10,10,10,10,,,,,,,,,,,,
49,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
50,1,,24761-020000,,"NIPPLE PT1/8,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
51,1,,26116-100302,,"BOLT M10X 30 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
52,1,,26716-100002,,"NUT M10",1,1,1,1,1,1,,,,,,,,,,,,

# Fig. 22 ソウジュウソウチ（ソウコウ＆スイング） CONTROL EQUIPMENT (TRAVEL & SWING)

https://truckmanualshub.com/

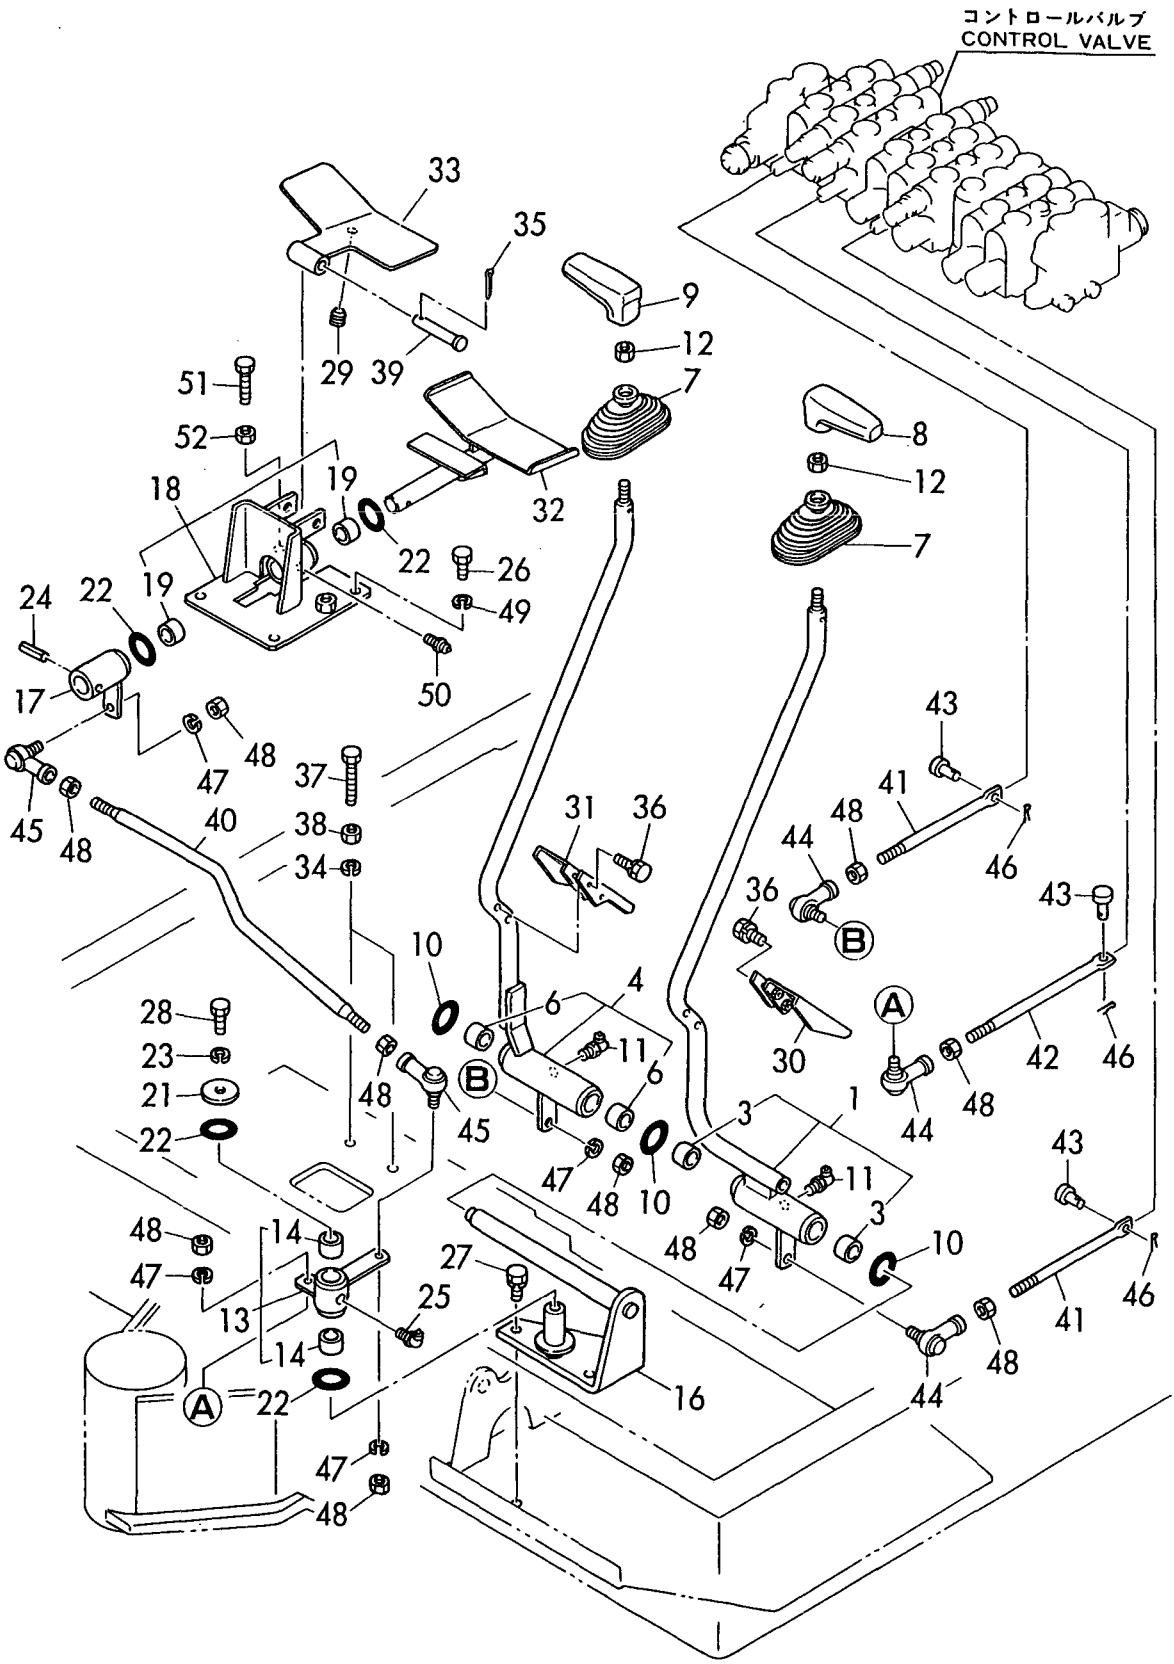

1,1,,172116-45940,,"KNOB (C), LEVER",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172142-46260,,"LEVER,BLADE",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,22351-050032,,"SPRING PIN 5X32",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172143-45400,,"ARM, BLADE",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172143-45420,,BRACKET,1,1,1,1,1,1,,,,,,,,,,,,
6,2,,172141-41360,,"BUSH 1415",2,2,2,2,2,2,,,,,,,,,,,,
8,1,,26116-100202,,"BOLT M10X 20 PLATED",3,3,3,3,3,3,,,,,,,,,,,,
9,1,,172141-42900,,ROD(P),1,1,1,1,1,1,,,,,,,,,,,,
10,1,,172141-42950,,"CABLE, BLADE",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,172141-42960,,"JOINT, CABLE",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172122-46590,,"ELBALL 8",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,22217-080000,,"SPRING WASHER  8",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,22217-100000,,"SPRING WASHER 10",3,3,3,3,3,3,,,,,,,,,,,,
16,1,,26116-100302,,"BOLT M10X 30 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,26716-100002,,"NUT M10",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,172141-42970,,"PIN 6X15",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",1,1,1,1,1,1,,,,,,,,,,,,
20,1,,22217-080000,,"SPRING WASHER  8",1,1,1,1,1,1,,,,,,,,,,,,

# Fig. 23 ソウジュウソウチ（ブレード）
# CONTROL EQUIPMENT ( BLADE )

https://truckmanualshub.com/

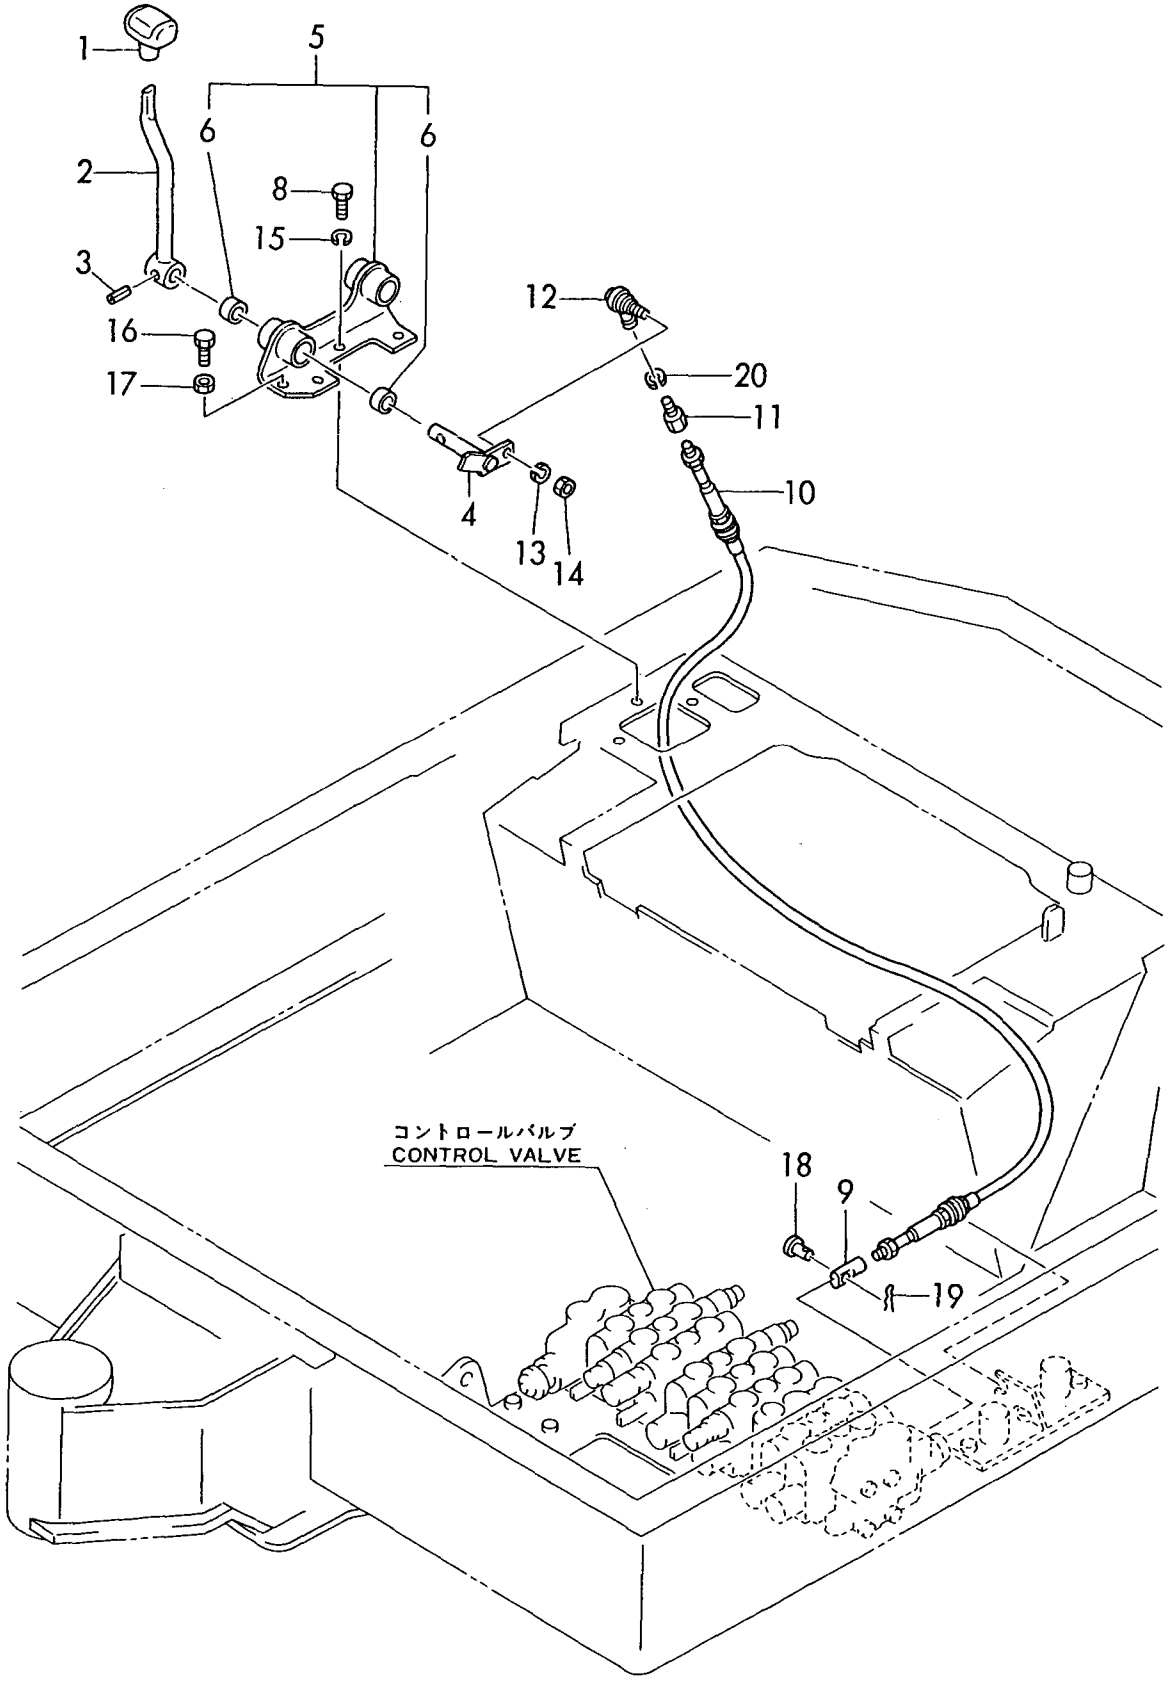

1,1,,194150-01190,,"KNOB, THROTTLE LEVER",2,2,2,2,2,2,,,,,,,,,,,,
2,1,,172141-42600,,"PIPE, LOCK",2,2,2,2,2,2,,,,,,,,,,,,
3,1,,172141-42700,,"LINK, LOCK",2,2,2,2,2,2,,,,,,,,,,,,
4,1,,172141-42750,,"BOLT, STOPPER",8,8,8,8,8,8,,,,,,,,,,,,
5,1,,172142-43440,,"BOSS ASY",1,1,1,1,1,1,,,,,,,,,,,,
7,2,,933171-23670,,BUSH,2,2,2,2,2,2,,,,,,,,,,,,
8,1,,172142-43490,,LINK,1,1,1,1,1,1,,,,,,,,,,,,
9,1,,172142-43530,,LINK,2,2,2,2,2,2,,,,,,,,,,,,
10,1,,172142-43910,,"SP,LOCK LEVER",2,2,2,2,2,2,,,,,,,,,,,,
11,1,,172142-43920,,"PLATE,LOCK",2,2,2,2,2,2,,,,,,,,,,,,
12,1,,172142-43980,,"LEVER, LOCK R",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,172143-45600,,"LEVER, LOCK",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,172143-45680,,"ARM, LOCK",1,1,1,1,,,,,,,,,,,,,,
14-1,1,,172143-45681,,"ARM,
LOCK",1,1,1,1,1,1,N,,72143009,M11093,72143009,M11093,72143009,M11903,72143009,M1
1093,,,,I
15,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",6,6,6,6,6,6,,,,,,,,,,,,
16,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
17,1,,22217-100000,,"SPRING WASHER 10",2,2,2,2,2,2,,,,,,,,,,,,
18,1,,22351-050020,,"SPRING PIN 5X20",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,26116-100202,,"BOLT M10X 20 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
20,1,,26116-100504,,"BOLT M10X 50 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
21,1,,26716-080002,,"NUT M 8",8,8,8,8,8,8,,,,,,,,,,,,
22,1,,26716-100002,,"NUT M10",4,4,4,4,4,4,,,,,,,,,,,,
23,1,,933110-54100,,"PIN 4.75X14",5,5,5,5,5,5,,,,,,,,,,,,

# Fig. 24 サギョウレバーストッパ OPERATION LEVER STOPPER

https://truckmanualshub.com/

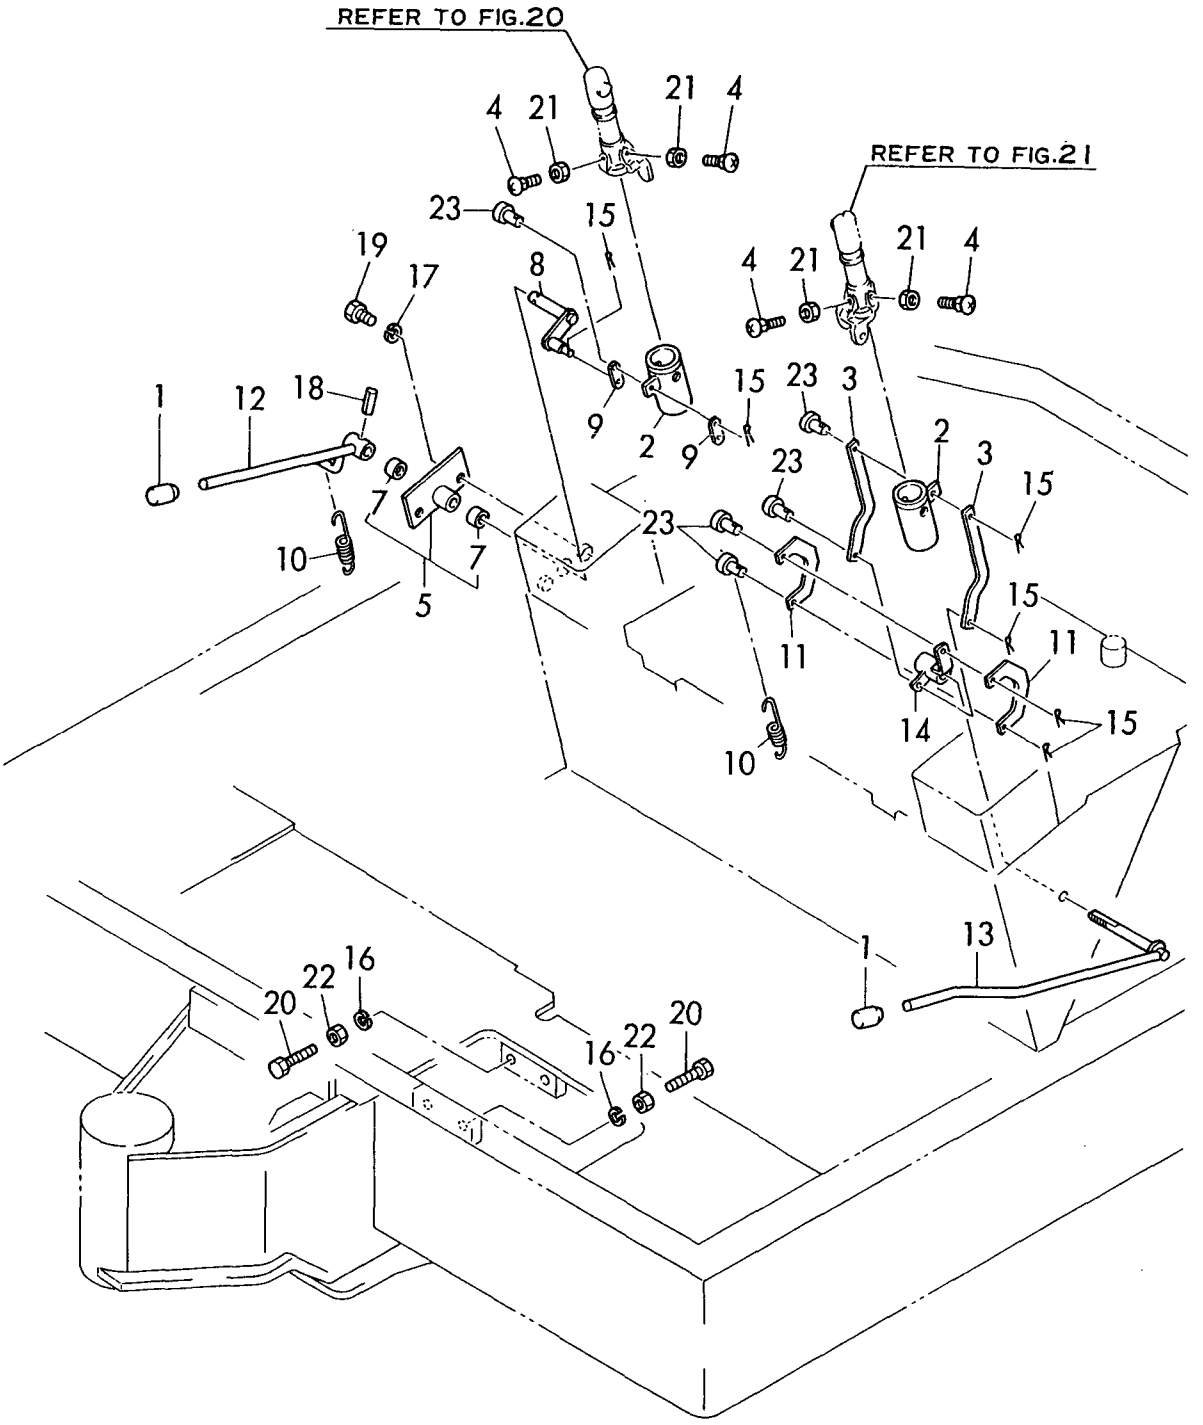

1,1,,172730-05250,,"WASHER 12",6,6,6,6,6,6,,,,,,,,,,,,
2,1,,172141-53201,,"PROTECTOR, REAR(L)",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-53251,,"PROTECTOR, REAR(R)",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-53350,,"GROMMET 26",6,6,6,6,6,6,,,,,,,,,,,,
5,1,,26013-120302,,"BOLT W/WASHER M12X30",6,6,6,6,6,6,,,,,,,,,,,,
6,1,,172141-54100,,"FRAME, TURNING",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-54980,,"PLATE, BUSH",1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172141-54990,,"BUSH 50",2,2,2,2,2,2,,,,,,,,,,,,
9,1,,26013-080202,,"BOLT W/WASHER M8X20",2,2,2,2,2,2,,,,,,,,,,,,
10,1,,172730-05250,,"WASHER 12",3,3,3,3,3,3,,,,,,,,,,,,
11,1,,172141-53300,,"WEIGHT. COUNTER",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172141-53350,,"GROMMET 26",3,3,3,3,3,3,,,,,,,,,,,,
13,1,,26116-120602,,"BOLT M12X 60 PLATED",3,3,3,3,3,3,,,,,,,,,,,,

# Fig. 25 センカイフレーム TURNING FRAME

https://truckmanualshub.com/

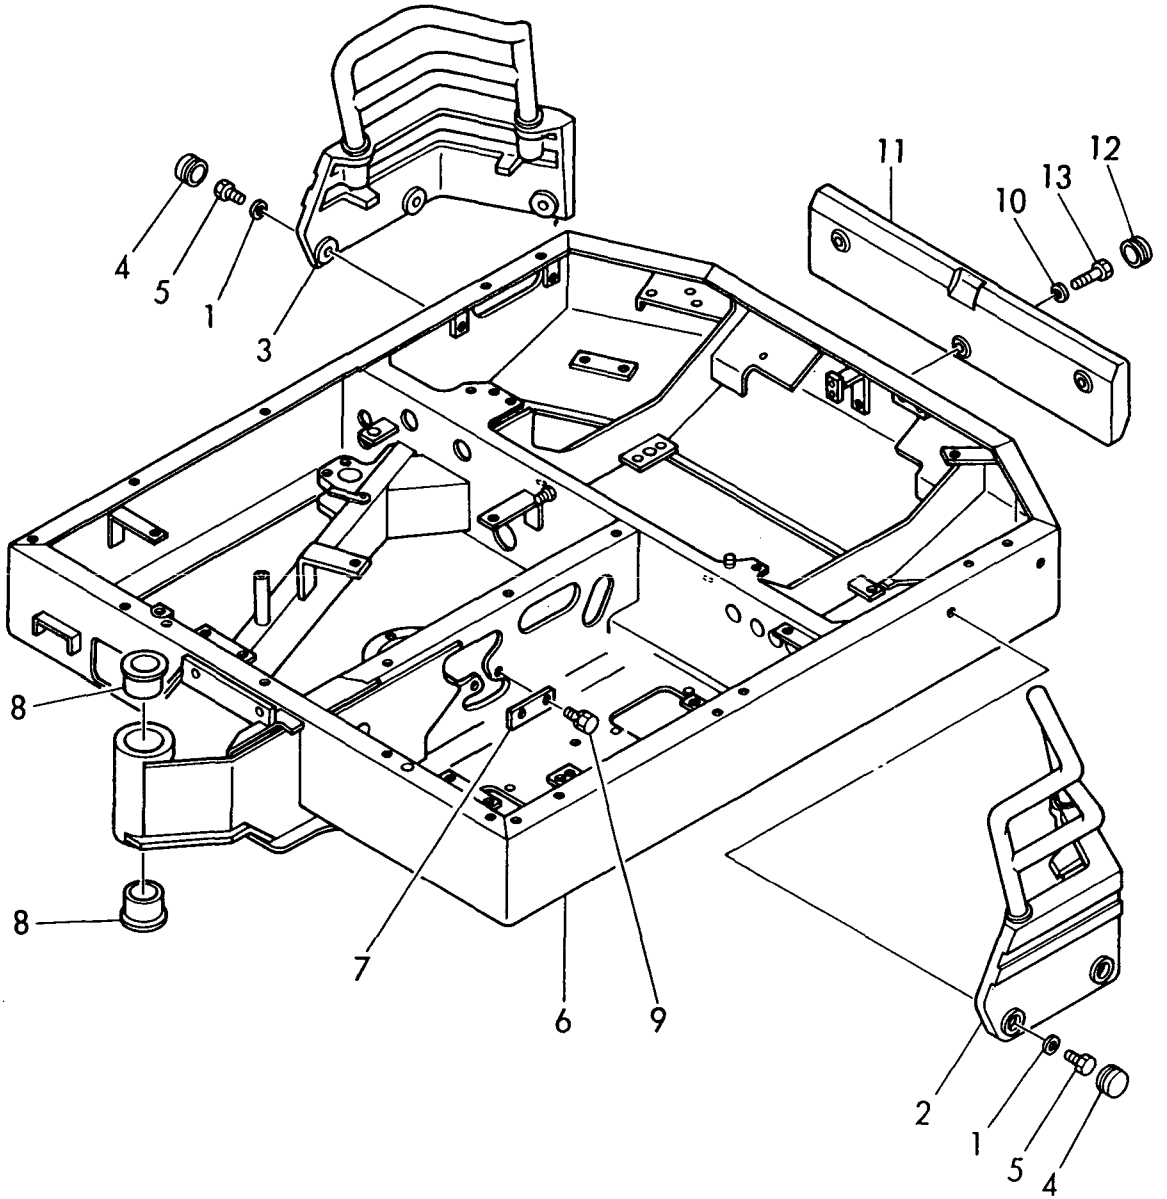

```
1,1,,172141-57600,,"BEARING, SWING",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172141-57610,,"SEAL KIT",1,1,1,1,1,1,,,,,,,,,,,,
3,3,,172141-57620,,"SEAL, UPPER",1,1,1,1,1,1,,,,,,,,,,,,
4,3,,172141-57630,,"SEAL,LOWER",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,22312-100280,,"PARALLEL PIN 10X28",4,4,4,4,,,,,,,,,,,,,,
5-1,1,,194940-24350,,"PIN
10X28,STRAIGHT",4,4,4,4,4,4,N,,72149117,M11082,72149117,M11082,72149117,M11082,7
2149117,M11082,,,,,I
6,1,,26116-120552,,"BOLT M12X 55 PLATED",38,38,38,38,,,,,,,,,,,,,,
6-1,1,,172141-57650,,"BOLT M12X 55
PLATED",38,38,38,38,38,38,R,,72141376,M11821,72141376,M11821,72141376,M11821,721
41376,M11821,,,,,I
```

# Fig. 26 センカイクドウソウチ TURNING DRIVING GEARS

https://truckmanualshub.com/

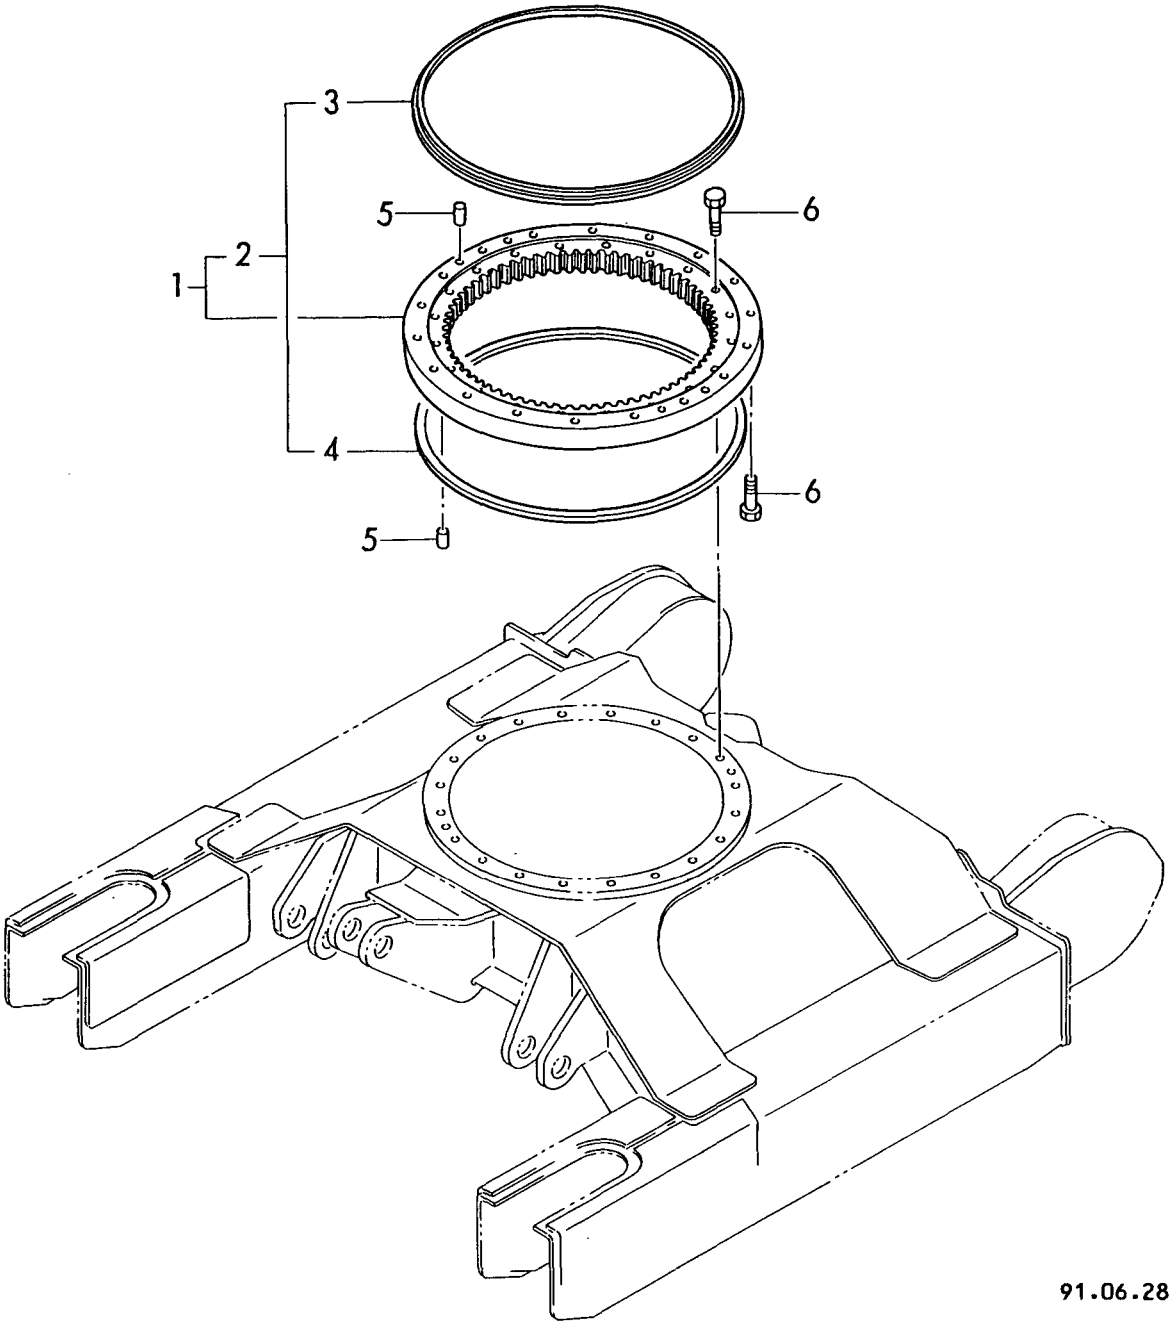


91.06.28

```
1,1,,172141-05300,,"BOX, TOOL",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172738-61630,,"RUBBER 150",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
4,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
5,1,,22137-100000,,"WASHER 10,POLISHED",2,2,2,2,2,2,,,,,,,,,,,,
6,1,,172116-46630,,"KNOB, LOCK LEVER",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-58800,,"PIN, LOCK",1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172141-61110,,"COVER, DUCT",1,1,1,1,1,1,,,,,,,,,,,,
9,1,,22217-100000,,"SPRING WASHER 10",2,2,2,2,2,2,,,,,,,,,,,,
10,1,,26116-100202,,"BOLT M10X 20 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
11,1,,172141-62500,,"COVER, UNDER(L)",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172141-62520,,"COVER, UNDER(R)",1,1,1,1,,,,,,,,,,,,,,
12-1,1,,172141-62530,,"COVER,
UNDER(R)",1,1,1,1,1,1,N,,72160005,*1990.05,72160005,*1990.05,72160005,*1990.05,7
2160005,*1990.05,,,,,I
13,1,,22137-100000,,"WASHER 10,POLISHED",10,10,10,10,10,10,,,,,,,,,,,,
14,1,,22217-100000,,"SPRING WASHER 10",10,10,10,10,10,10,,,,,,,,,,,,
15,1,,26116-100202,,"BOLT M10X 20 PLATED",10,10,10,10,10,10,,,,,,,,,,,,
16,1,,172141-65090,,COVER(R),1,1,1,1,1,1,,,,,,,,,,,,
17,1,,172734-65260,,"PIN, BONNET LEVER",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,172734-65270,,"SPRING, CATCH",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,172141-65390,,COVER(C),1,1,1,1,1,1,,,,,,,,,,,,
20,1,,172124-65450,,"LEVER, LOCK",1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172126-65460,,HOOK,1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172124-65480,,CATCHER,1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172124-65490,,"PLATE,CATCH",1,1,1,1,1,1,,,,,,,,,,,,
24,1,,172126-65500,,KEY,1,1,1,1,1,1,,,,,,,,,,,,
24A,2,,172126-65571,,"WASHER LOCK",1,1,1,1,1,1,,,,,,,,,,,,,I
24B,2,,26347-100002,,"U-NUT M10",1,1,1,1,1,1,,,,,,,,,,,,,I
25,1,,172141-65640,,COVER(B),1,1,1,1,1,1,,,,,,,,,,,,
26,1,,172142-65650,,"ROD, STOPPER",1,1,1,1,1,1,,,,,,,,,,,,
27,1,,172137-65700,,"RUBBER, CUSHION",2,2,2,2,2,2,,,,,,,,,,,,
28,1,,172141-65900,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
29,2,,172141-65970,,"RUBBER, PLATE",1,1,1,1,1,1,,,,,,,,,,,,
30,2,,172141-65980,,"PLATE, COVER(B)",1,1,1,1,1,1,,,,,,,,,,,,
31,1,,22137-100000,,"WASHER 10,POLISHED",2,2,2,2,2,2,,,,,,,,,,,,
32,1,,22137-100000,,"WASHER 10,POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
33,1,,22137-120000,,"WASHER 12,POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
34,1,,22417-200200,,"COTTER PIN 2.0X20",2,2,2,2,2,2,,,,,,,,,,,,
35,1,,22417-320200,,"COTTER PIN 3.2X20",4,4,4,4,4,4,,,,,,,,,,,,
36,1,,26013-080162,,"BOLT W/WASHER M8X16",2,2,2,2,2,2,,,,,,,,,,,,
37,1,,26013-100162,,"BOLT M10X 16",4,4,4,4,4,4,,,,,,,,,,,,
38,1,,26013-100252,,"BOLT M10X 25",4,4,4,4,4,4,,,,,,,,,,,,
39,1,,26013-100252,,"BOLT M10X 25",2,2,2,2,2,2,,,,,,,,,,,,
40,1,,26013-100252,,"BOLT M10X 25",2,2,2,2,2,2,,,,,,,,,,,,
41,1,,26013-120452,,"BOLT M12X 45",4,4,4,4,4,4,,,,,,,,,,,,
42,1,,933152-02900,,WASHER,2,2,2,2,2,2,,,,,,,,,,,,
43,1,,172141-65330,,RUBBER(R),1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 27 ボンネット BONNET

https://truckmanualshub.com/

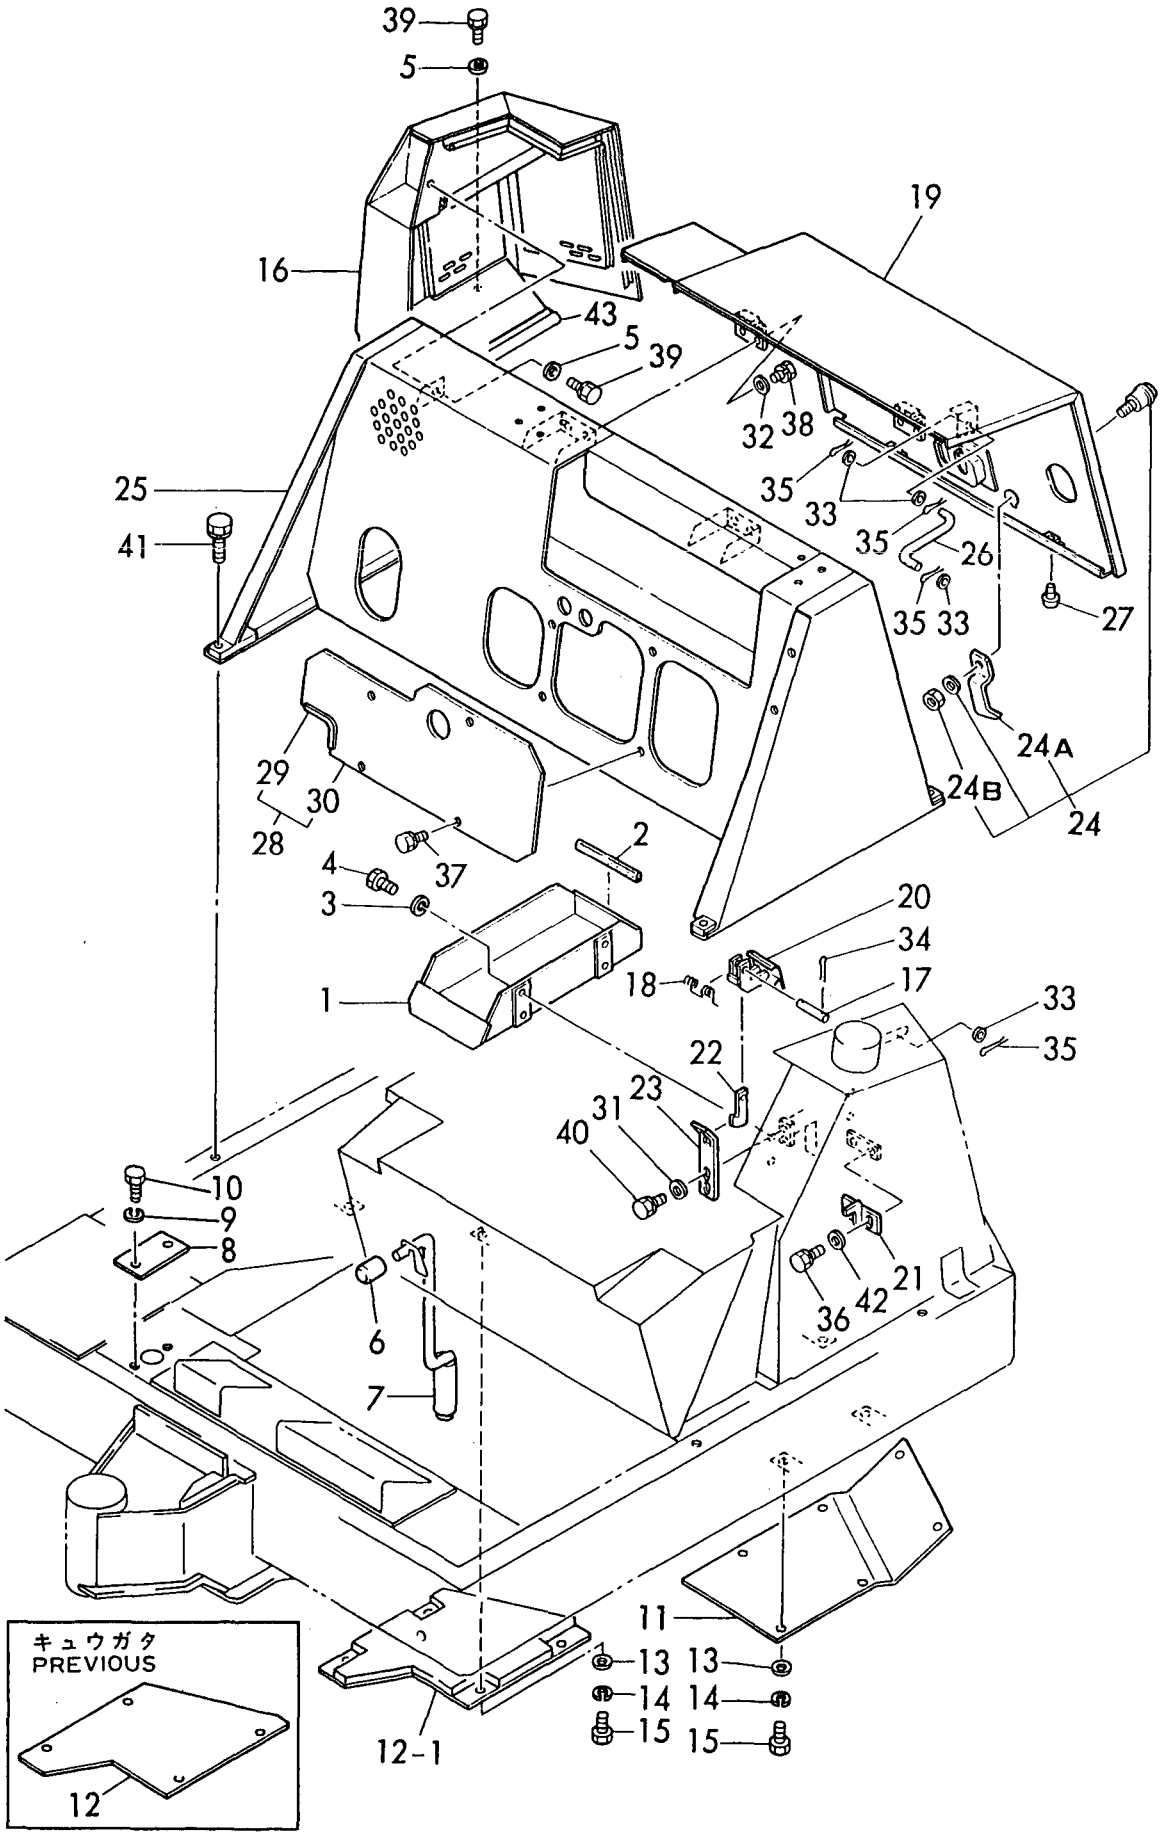

```
1,1,,172135-14250,,"CATCH,
MAGNT",1,1,1,1,,,Z,,72143005,M11082,72143005,M11082,72143005,M11082,72143005,M11
082,,,
3,1,,172141-62140,,"STEP(A), CENTER",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-62170,,"STEP(B), CENTER",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172143-62210,,"STEP(T), SIDE",1,1,1,1,1,1,,,,,,,,,,,,
6,1,,172142-62230,,"STEP CMP,FRONT T",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-62250,,"BASE, SUPPORT",1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172141-78790,,RUMMER,1,1,1,1,1,1,,,,,,,,,,,,
9,1,,22137-030000,,"WASHER
3",2,2,2,2,,,Z,,72143005,M11082,72143005,M11082,72143005,M11082,72143005,M11082,
,,,,I
10,1,,22137-100000,,"WASHER 10,POLISHED",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,22217-100000,,"SPRING WASHER 10",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,26013-100202,,"BOLT W/WASHER M10X20",5,5,5,5,5,5,,,,,,,,,,,,
13,1,,26013-100202,,"BOLT W/WASHER M10X20",7,7,7,7,7,7,,,,,,,,,,,,
14,1,,26013-100202,,"BOLT W/WASHER M10X20",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,26013-100202,,"BOLT W/WASHER M10X20",4,4,4,4,4,4,,,,,,,,,,,,
16,1,,26116-100202,,"BOLT M10X 20 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,26557-030122,,"SCREW M 3X
12",2,2,2,2,,,Z,,72143005,M11082,72143005,M11082,72143005,M11082,72143005,M11082
,,,,,I
18,1,,26717-030002,,"NUT M
3",2,2,2,2,,,Z,,72143005,M11082,72143005,M11082,72143005,M11082,72143005,M11082,
,,,,I
19,1,,1A1040-46460,,"WASHER 10X33X4.5",1,1,1,1,1,1,,,,,,,,,,,,
20,1,,172143-64200,,"MOUNT, SEAT",1,1,1,1,,,,,,,,,,,,,,
20-1,1,,172143-64201,,"MOUNT,
SEAT",1,1,1,1,1,1,F,1,72143020,*1990.08,72143020,*1990.08,72143020,*1990.08,7214
3020,*1990.08,,,,,I
21,1,,172143-64320,,"PLATE, SEAT",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172141-64350,,"SEAL, MOUNT",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172141-64370,,"CUSHION, SEAT",2,2,2,2,2,2,,,,,,,,,,,,
24,1,,172143-64400,,"MAT, FLOOR",1,,1,,,,,,,,,,,,,,,,
24-1,1,,172143-64401,,"MAT,
FLOOR",1,,1,,1,,N,,72148106,M11898,,,72148106,M11898,,,,,,I
25,1,,22117-100000,,"WASHER 10",2,2,2,2,2,2,,,,,,,,,,,,
26,1,,22137-080000,,"WASHER 8, POLISHED",4,4,4,4,4,4,,,,,,,,,,,,
27,1,,22217-080000,,"SPRING WASHER  8",4,4,4,4,4,4,,,,,,,,,,,,
28,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
29,1,,26064-080201,,"WING BOLT M 8X 20",1,1,1,1,1,1,,,,,,,,,,,,
30,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
31,1,,26716-080002,,"NUT M 8",4,4,4,4,4,4,,,,,,,,,,,,
32,1,,172141-68200,,GRIP,,1,,1,,1,,,,,,,,,,,,
33,1,,26013-100252,,"BOLT M10X 25",,2,,2,,2,,,,,,,,,,,,
34,1,,172116-64101,,"SEAT ASSY",,,1,1,,,,,,,,,,,,,,,
35,2,,172116-64140,,"SLIDER R",,,1,1,,,,,,,,,,,,,,,
36,2,,172116-64181,,"BACK(A), SEAT",,,1,1,,,,,,,,,,,,,,,
37,2,,172116-64190,,"SLIDER L",,,1,1,,,,,,,,,,,,,,,
38,2,,172116-64211,,"CUSHION, SEAT B",,,1,1,,,,,,,,,,,,,,,
39,2,,26013-060162,,"BOLT M 6X 16",,,4,4,,,,,,,,,,,,,,,
40,2,,26022-080162,,"SCREW M 8X 16",,,4,4,,,,,,,,,,,,,,,
41,1,,22217-080000,,"SPRING WASHER  8",,,4,4,,,,,,,,,,,,,,,
42,1,,26717-080002,,"NUT M 8",,,4,4,,,,,,,,,,,,,,,
43,1,,26647-100152,,"WING BOLT
M10X15",1,1,1,1,1,1,W,,72143005,M11082,72143005,M11082,72143005,M11082,72143005,
M11082,,,
```

# Fig. 28 シート＆ステップ SEAT & STEP

https://truckmanualshub.com/

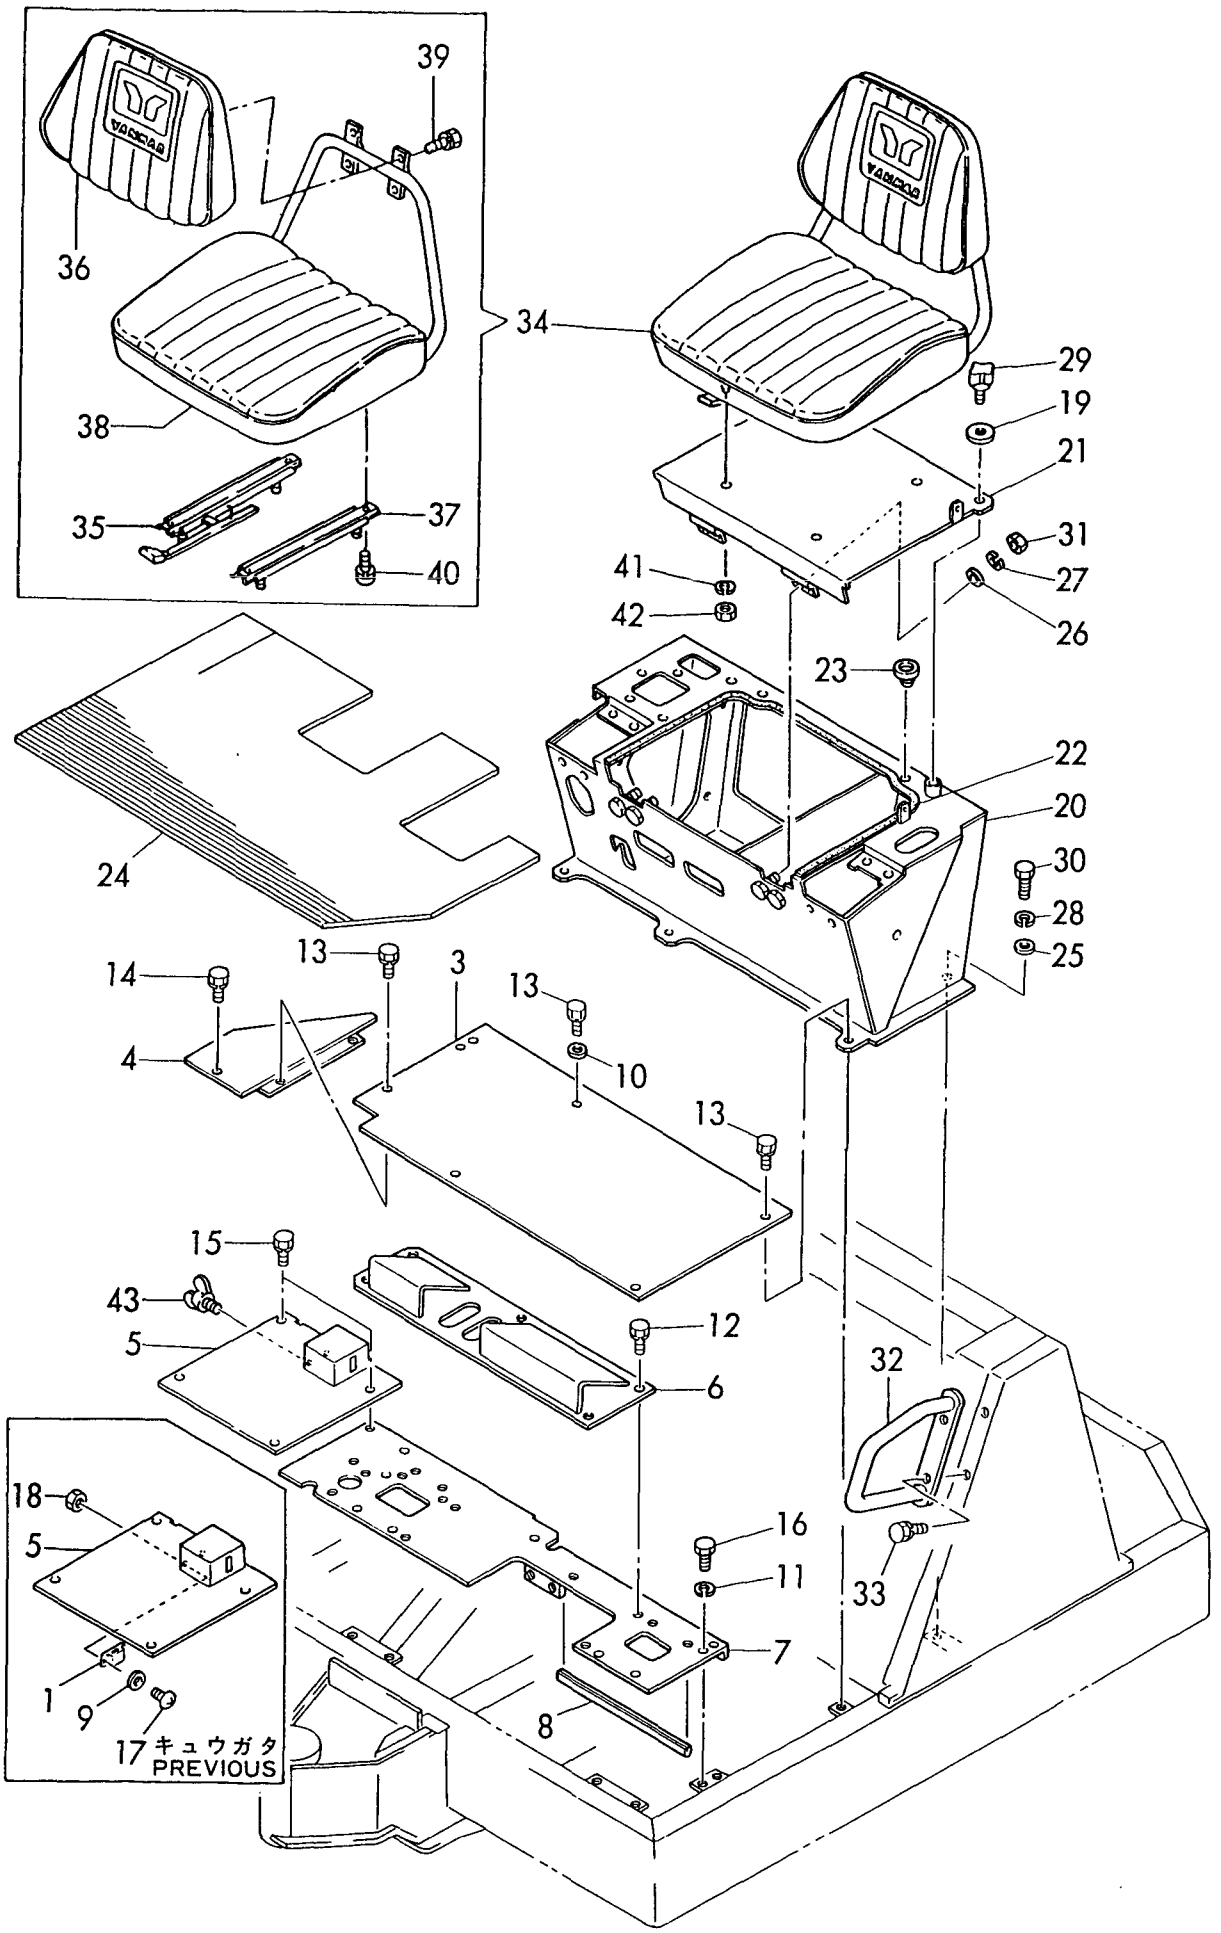

```
1,1,,772143-68100,,CANOPY,,1,,1,,1,,,,,,,,,,,,
2,2,,172143-66300,,"ROOF, CANOPY",,1,,1,,1,,,,,,,,,,,,
3,2,,172143-66400,,"COLUMN, CANOPY",,1,,1,,1,,,,,,,,,,,,
4,2,,26013-100202,,"BOLT W/WASHER M10X20",,6,,6,,6,,,,,,,,,,,,
5,2,,26013-120302,,"BOLT W/WASHER M12X30",,7,,7,,7,,,,,,,,,,,,
6,1,,172143-62250,,"SHEET, NON-SLIP",,1,,1,,1,,,,,,,,,,,,
7,1,,172141-68310,,CANOPY(F),,1,,1,,1,,,,,,,,,,,,
8,1,,172141-68360,,"COVER, FRONT",,1,,1,,1,,,,,,,,,,,,
9,1,,22217-100000,,"SPRING WASHER 10",,6,,6,,6,,,,,,,,,,,,
10,1,,26013-100252,,"BOLT M10X 25",,4,,4,,4,,,,,,,,,,,,
11,1,,26116-100202,,"BOLT M10X 20 PLATED",,6,,6,,6,,,,,,,,,,,,
```

# Fig. 29 ロプス ROPS

https://truckmanualshub.com/

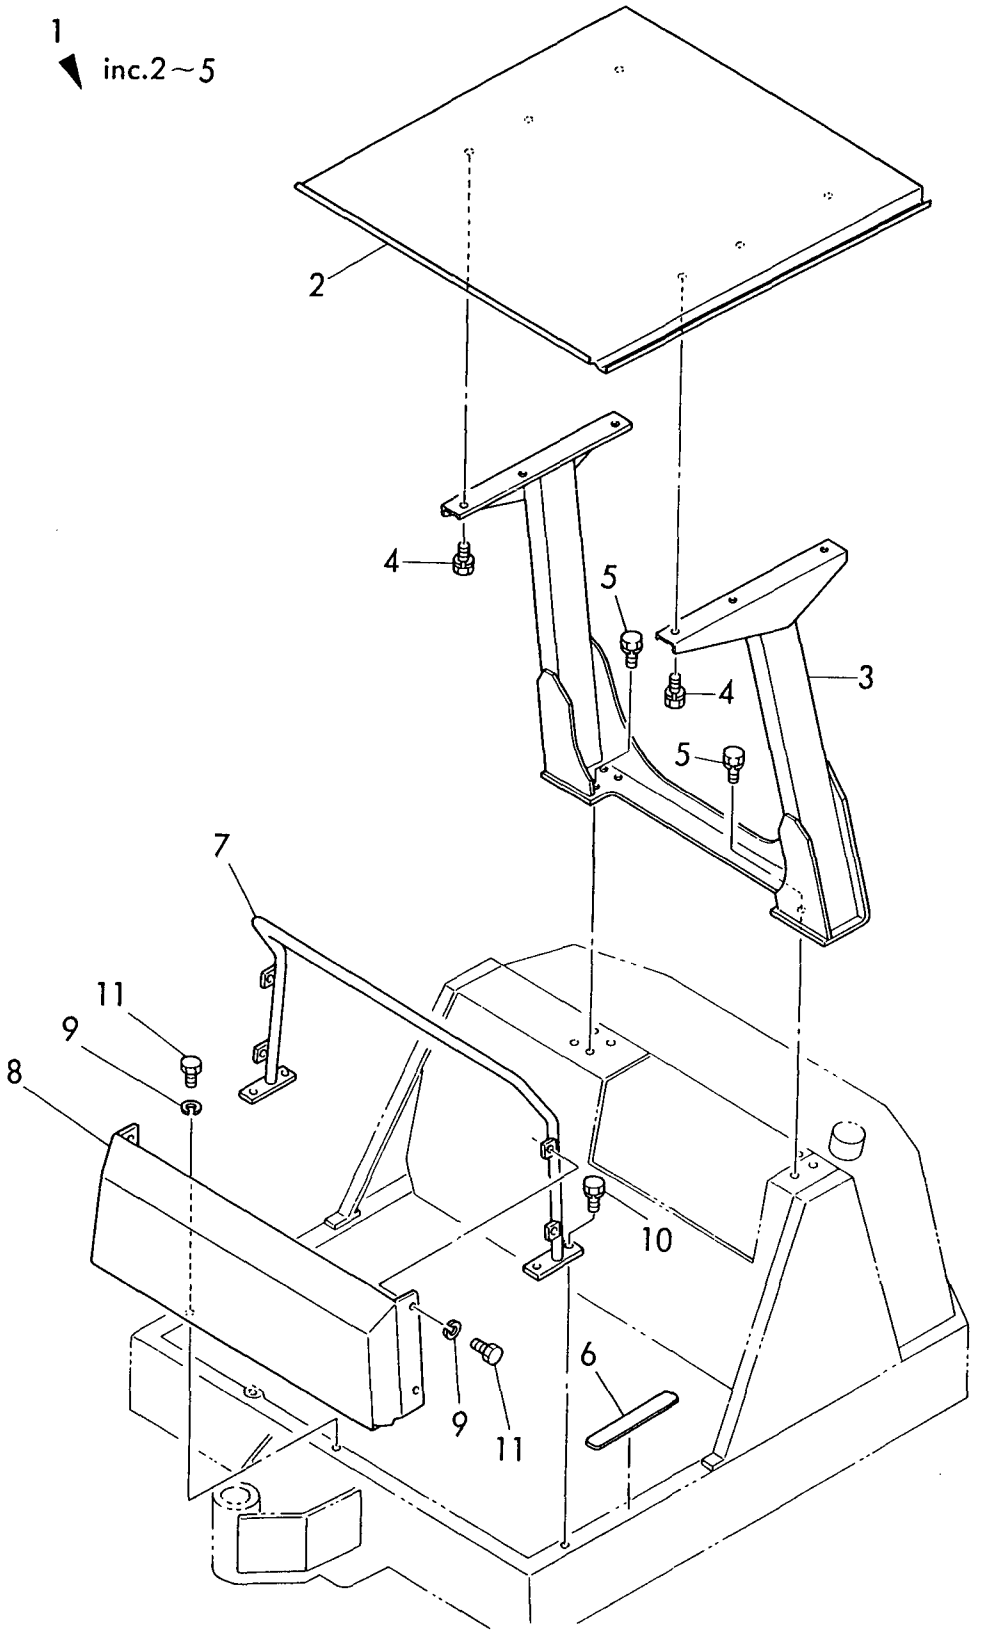

```
1,1,,172141-72272,,"CYLINDER ASSY,BOOM(Z",,1,,1,,1,,,,,,,,,,,,
2,2,,172141-72140,,"HEAD 75 40",,1,,1,,1,,,,,,,,,,,,
3,3,,933135-14600,,"BUSH 40 30, ROD",,1,,1,,1,,,,,,,,,,,,
4,2,,172141-71880,,"SEAL SET, HEAD",,1,,1,,1,,,,,,,,,,,,
10,2,,172141-72190,,"WASHER 75",,1,,1,,1,,,,,,,,,,,,
11,2,,172141-72220,,"PLUNGER 44C, CUSHION",,1,,1,,1,,,,,,,,,,,,
12,2,,172141-72250,,"U-NUT M27",,1,,1,,1,,,,,,,,,,,,
13,2,,172141-71771,,"TUBE(Z)W/BUSH, BOOM",,1,,1,,1,,,,,,,,,,,,
15,3,,172143-72330,,"BUSH, 38 50",,1,,1,,1,,,,,,,,,,,,
16,2,,172141-71781,,"ROD W/BUSH",,1,,1,,1,,,,,,,,,,,,
18,3,,172143-72330,,"BUSH, 38 50",,1,,1,,1,,,,,,,,,,,,
19,2,,172137-72730,,"RING 44B, CUSHION",,1,,1,,1,,,,,,,,,,,,
20,2,,172141-71911,,"SEAL SET, PISTON",,1,,1,,1,,,,,,,,,,,,
24,2,,172141-73051,,"PISTON 75 27 A",,1,,1,,1,,,,,,,,,,,,
25,2,,172141-73061,,"PISTON 75 27 B",,1,,1,,1,,,,,,,,,,,,
26,2,,22252-000561,,"CIRCLIP   56",,1,,1,,1,,,,,,,,,,,,
27,2,,24761-020000,,"NIPPLE PT1/8,GREASE",,2,,2,,2,,,,,,,,,,,,
28,2,,933111-26600,,"RING 55, SPRING",,1,,1,,1,,,,,,,,,,,,
29,1,,172141-72590,,"COVER, SLIDE",,1,,1,,,,,,,,,,,,,,,
29-1,1,,172141-72591,,"COVER,
SLIDE",,1,,1,,1,R,,,,72141393,*1990.11,,,72141393,*1990.11,,,,,I
30,1,,933147-03400,,"WASHER, BRAKE ARM",,1,,1,,1,,,,,,,,,,,,
31,1,,26116-100202,,"BOLT M10X 20 PLATED",,1,,1,,1,,,,,,,,,,,,
32,1,,22217-100000,,"SPRING WASHER 10",,1,,1,,1,,,,,,,,,,,,
33,1,,933168-14170,,"SPRING 16",,2,,2,,2,,,,,,,,,,,,
```

# Fig. 30 ブームシリンダ(UZ)(キャノピ) BOOM CYLINDER (UZ)(CANOPY SPEC.)

https://truckmanualshop.com/

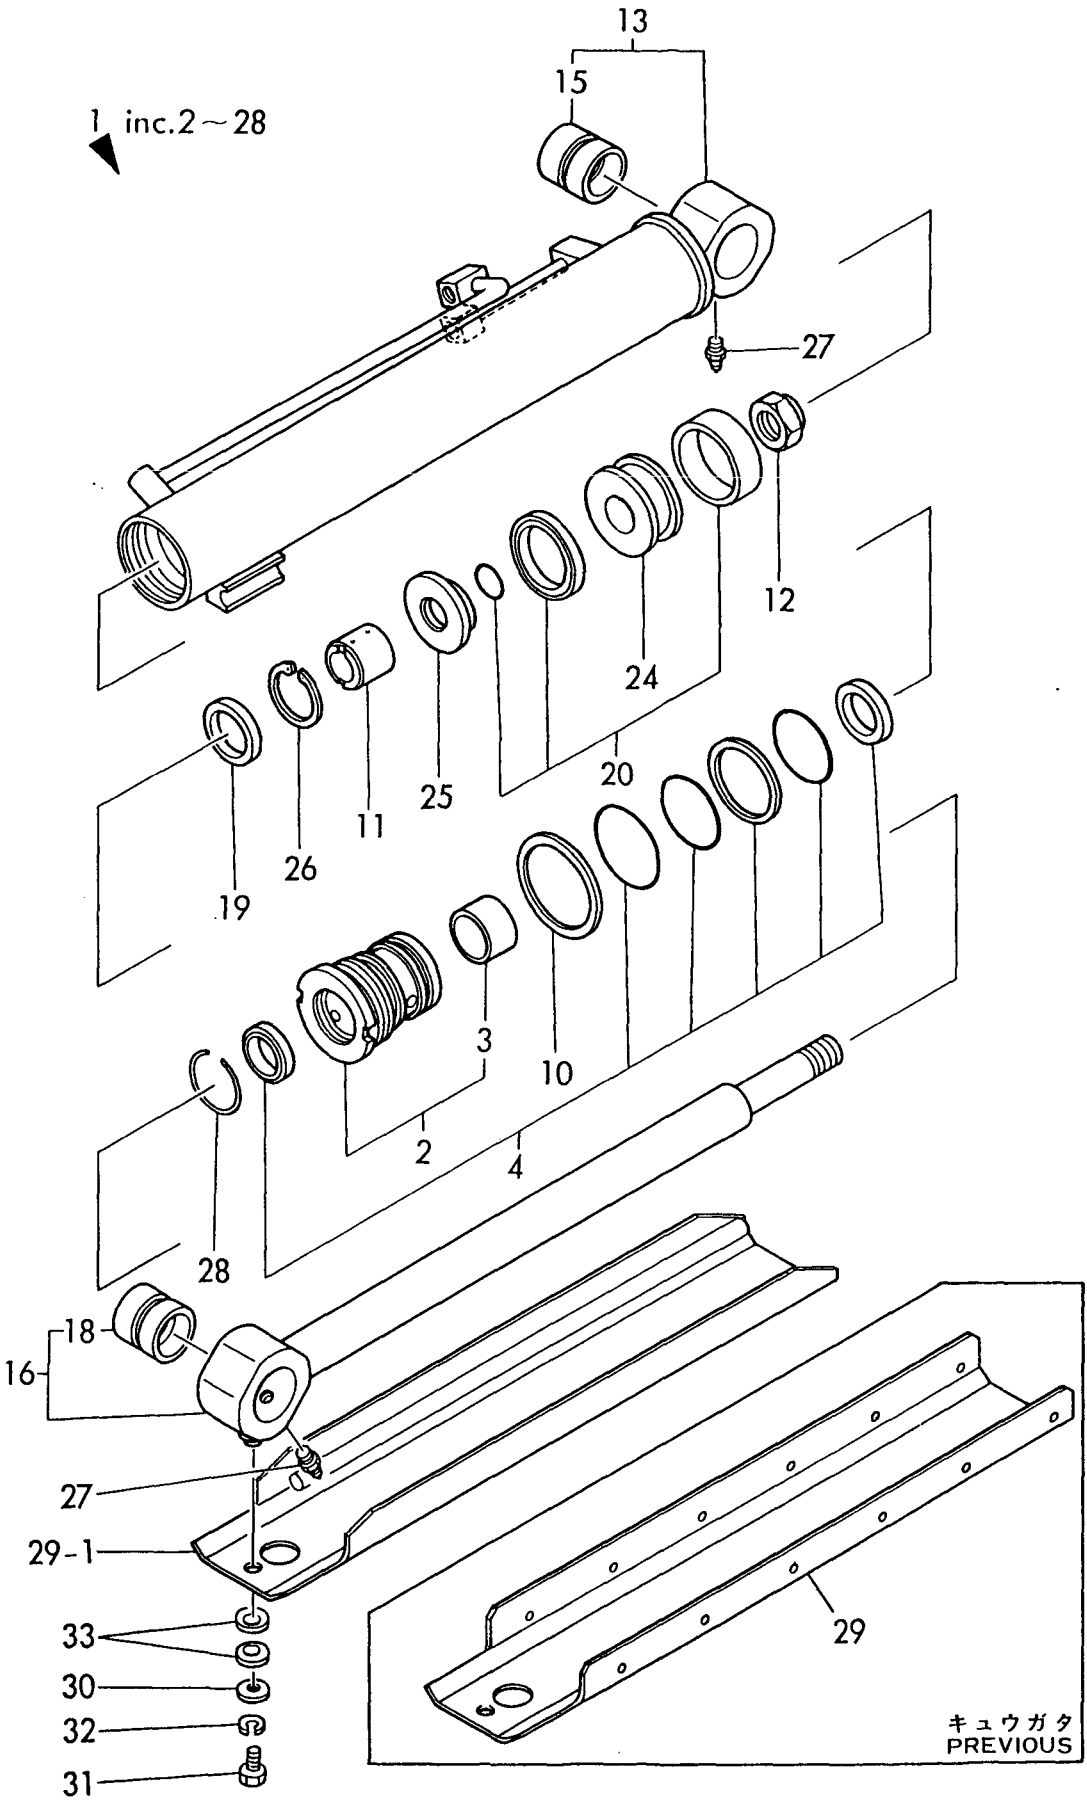

```
1,1,,172143-72270,,"CYLINDER ASSY, BOOM",1,,1,,1,,,,,,,,,,,,
2,2,,172141-72140,,"HEAD 75 40",1,,1,,1,,,,,,,,,,,,
3,3,,933135-14600,,"BUSH 40 30, ROD",1,,1,,1,,,,,,,,,,,,
4,2,,172141-71880,,"SEAL SET, HEAD",1,,1,,1,,,,,,,,,,,,
10,2,,172141-72190,,"WASHER 75",1,,1,,1,,,,,,,,,,,,
11,2,,172141-72220,,"PLUNGER 44C, CUSHION",1,,1,,1,,,,,,,,,,,,
12,2,,172141-72250,,"U-NUT M27",1,,1,,1,,,,,,,,,,,,
13,2,,172143-72020,,"TUBE(Z), BOOM",1,,1,,1,,,,,,,,,,,,
15,3,,172143-72330,,"BUSH, 38 50",1,,1,,1,,,,,,,,,,,,
16,2,,172141-71781,,"ROD W/BUSH",1,,1,,1,,,,,,,,,,,,
18,3,,172143-72330,,"BUSH, 38
50",1,,1,,1,,,,72171001,,72171001,,72171001,,72171001,,72171001,,72171001,,I
19,2,,172137-72730,,"RING 44B, CUSHION",1,,1,,1,,,,,,,,,,,,
20,2,,172141-71911,,"SEAL SET, PISTON",1,,1,,1,,,,,,,,,,,,
24,2,,172141-73051,,"PISTON 75 27
A",1,,1,,1,,,,72171067,,72171067,,72171067,,72171067,,72171067,,72171067,,I
25,2,,172141-73061,,"PISTON 75 27 B",1,,1,,1,,,,,,,,,,,,
26,2,,22252-000561,,"CIRCLIP   56",1,,1,,1,,,,,,,,,,,,
27,2,,24761-020000,,"NIPPLE PT1/8,GREASE",2,,2,,2,,,,,,,,,,,,
28,2,,933111-26600,,"RING 55, SPRING",1,,1,,1,,,,,,,,,,,,
29,1,,172141-72590,,"COVER, SLIDE",1,,1,,,,,,,,,,,,,,,
29-1,1,,172141-72591,,"COVER,
SLIDE",1,,1,,1,,R,,72141393,*1990.11,,,72141393,*1990.11,,,,,,I
30,1,,933147-03400,,"WASHER, BRAKE ARM",1,,1,,1,,,,,,,,,,,,
31,1,,26116-100202,,"BOLT M10X 20 PLATED",1,,1,,1,,,,,,,,,,,,
32,1,,22217-100000,,"SPRING WASHER 10",1,,1,,1,,,,,,,,,,,,
33,1,,933168-14170,,"SPRING 16",2,,2,,2,,,,,,,,,,,,
```

# Fig. 31 ブームシリンダ(UZ)(キャビン) BOOM CYLINDER (UZ)(CABIN SPEC.)

https://truckmanualshop.com/

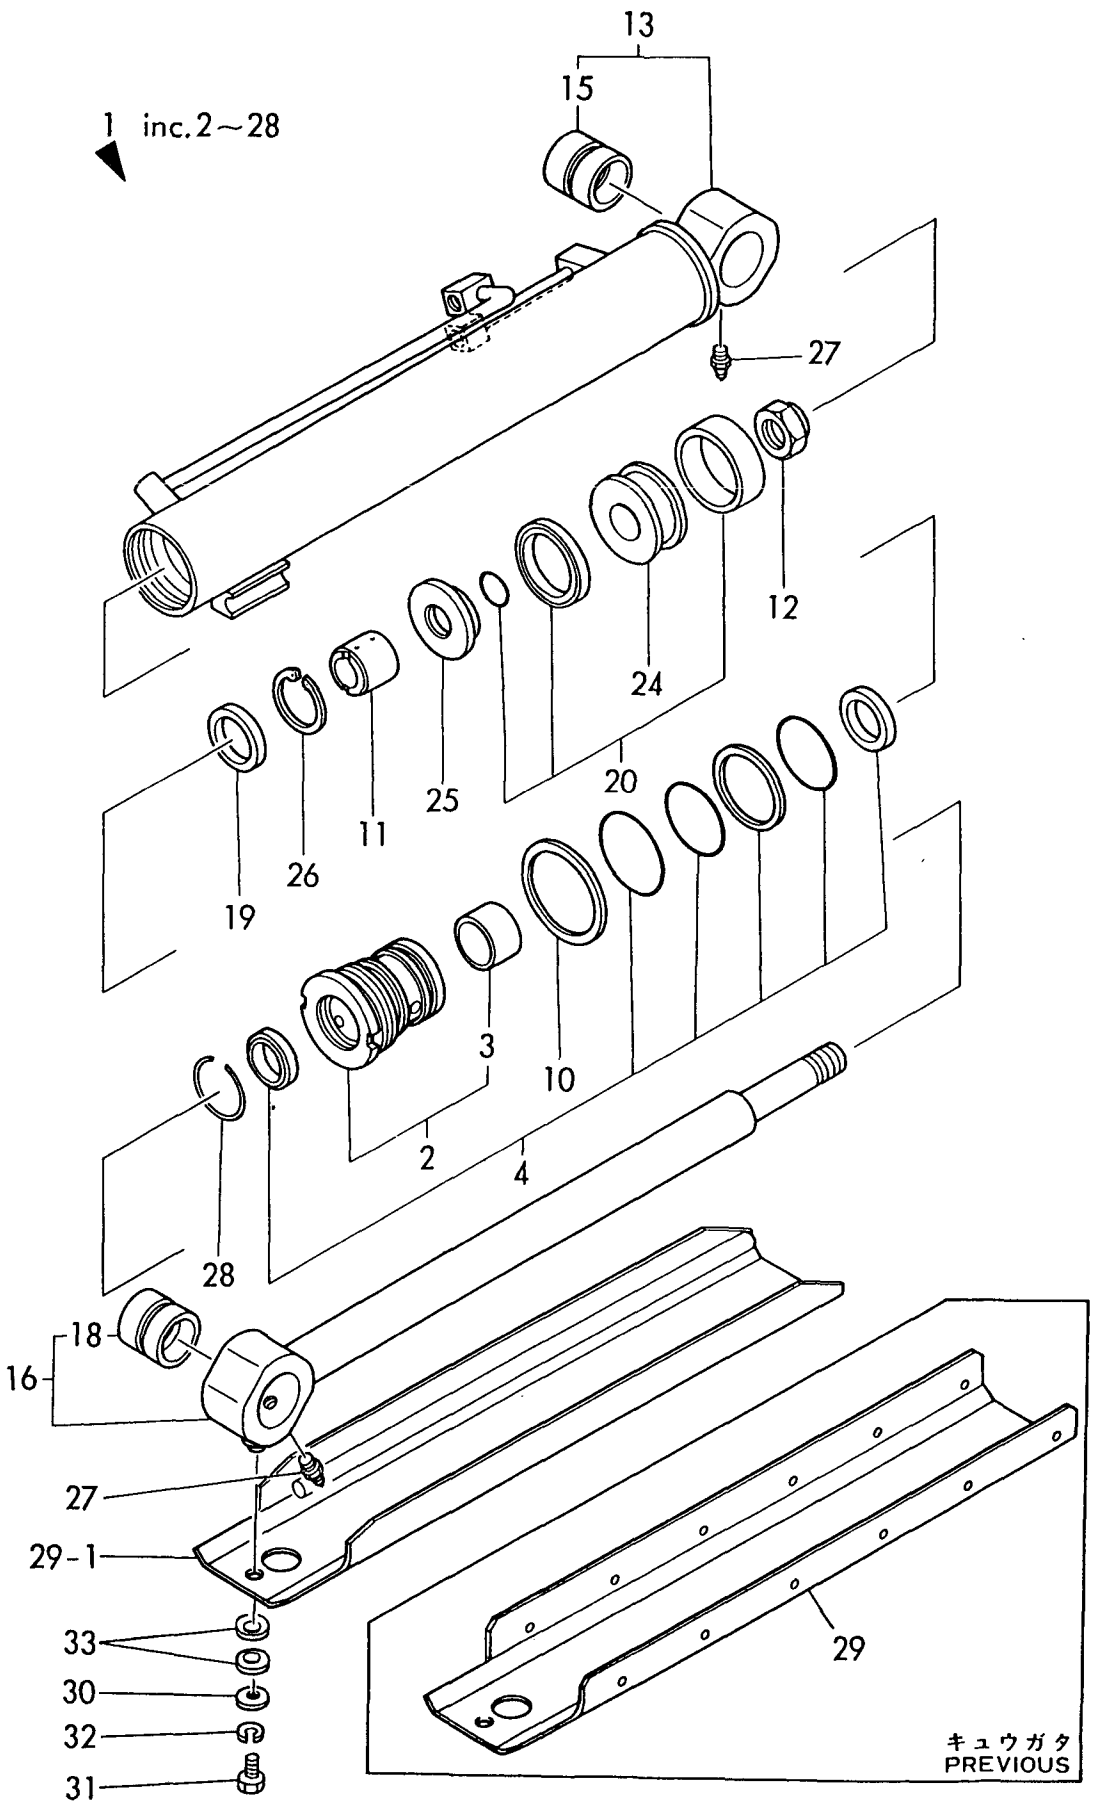

1,1,,172141-72350,,"CYLINDER ASSY, ARM",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172141-71890,,"SEAL SET, CYL.HEAD",1,1,1,1,1,1,,,,,,,,,,,,
7,2,,172141-72190,,"WASHER 75",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,172141-72250,,"U-NUT M27",1,1,1,1,1,1,,,,,,,,,,,,
9,2,,172141-71790,,"TUBE W/BUSH, ARM",1,1,1,1,1,1,,,,,,,,,,,,
11,3,,933125-12701,,"BUSH 38 50A",1,1,1,1,1,1,,,,,,,,,,,,
12,2,,172141-71800,,"ROD W/BUSH, ARM",1,1,1,1,1,1,,,,,,,,,,,,
14,3,,933125-12701,,"BUSH 38 50A",1,1,1,1,1,1,,,,,,,,,,,,
15,2,,172141-72690,,"HEAD 75 40 W/BUSH",1,1,1,1,1,1,,,,,,,,,,,,
16,3,,933135-14600,,"BUSH 40 30, ROD",1,1,1,1,1,1,,,,,,,,,,,,
17,2,,172148-72930,,"SEAL SET, PISTON",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,172141-73051,,"PISTON 75 27 A",1,1,1,1,1,1,,,,,,,,,,,,
21,2,,172141-73071,,"PISTON 75 27
C",1,1,1,1,1,1,,,72171067,,72171067,,72171067,,72171067,,72171067,,72171067,,I
22,2,,24761-040000,,"NIPPLE B,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
23,2,,933111-26600,,"RING 55, SPRING",1,1,1,1,1,1,,,,,,,,,,,,

# Fig. 32 アームシリンダ ARM CYLINDER

https://truckmanualshub.com/

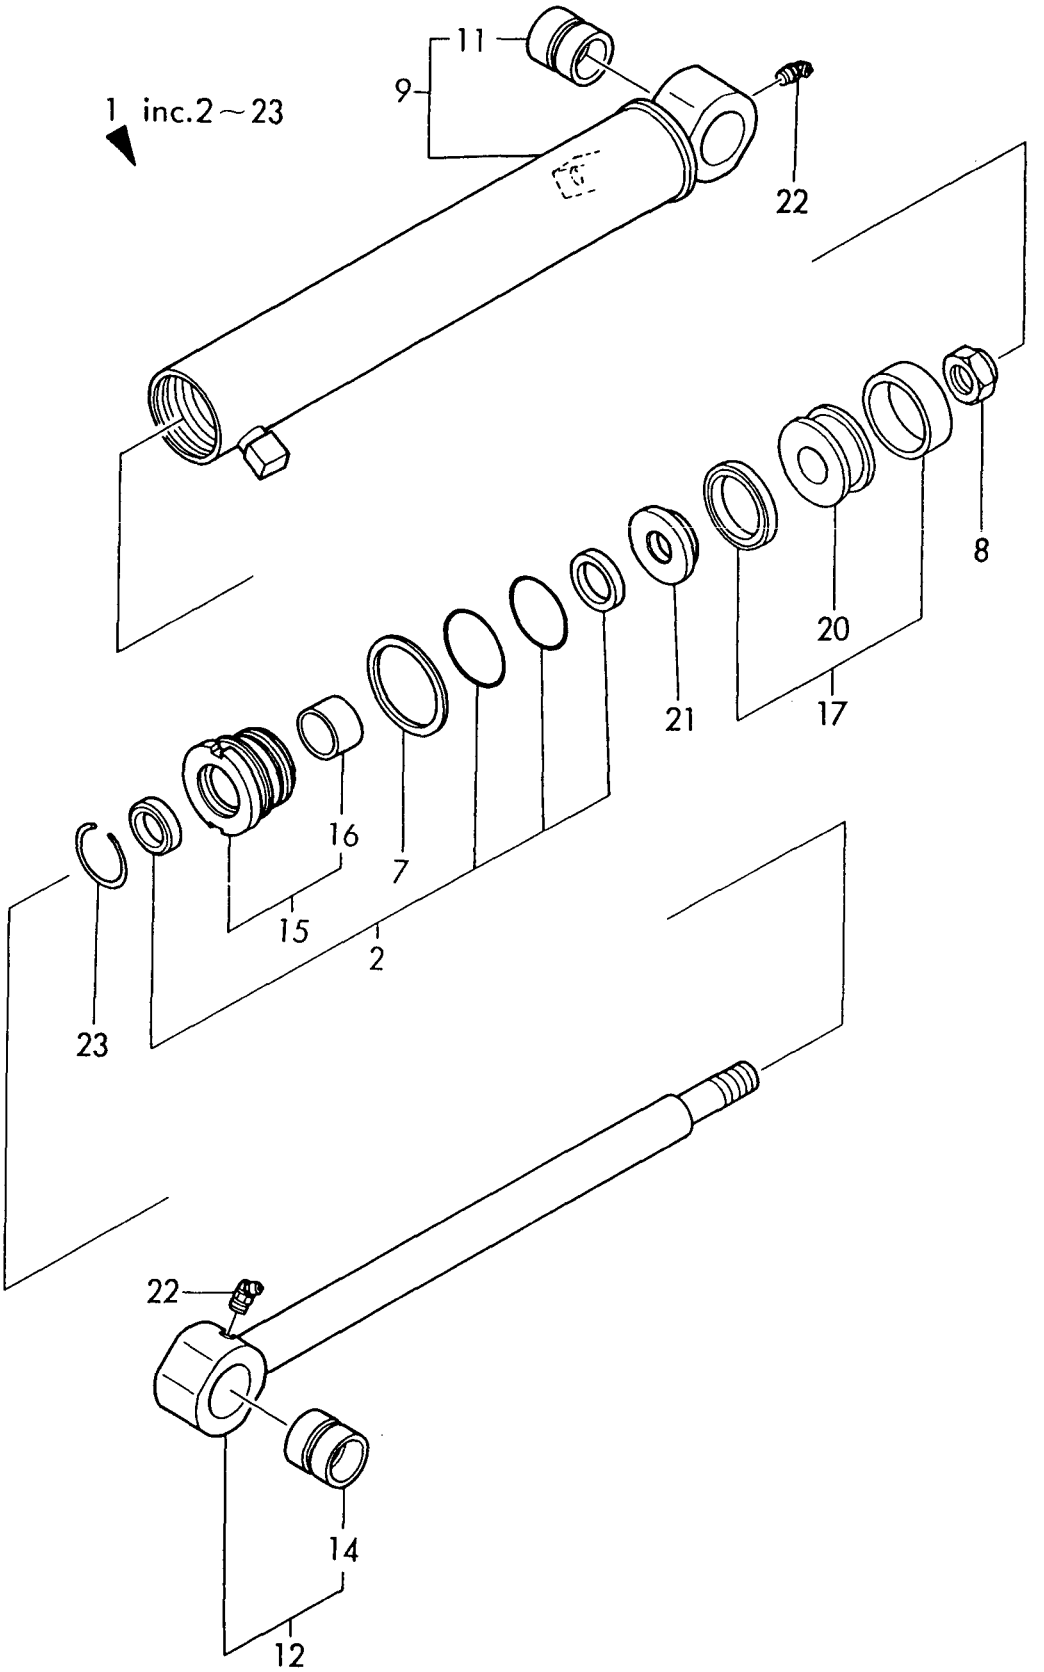

```
1,1,,172141-72450,,"CYLINDER ASSY,BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172141-71810,,"TUBE E/BUSH, BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
4,3,,172141-72560,,"BUSH 35 40 A, PIN",1,1,1,1,1,1,,,,,,,,,,,,
5,2,,172141-71820,,"ROD W/BUSH, BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
7,3,,172141-72560,,"BUSH 35 40 A, PIN",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,172141-72540,,"HEAD 6035, CYLINDER",1,1,1,1,1,1,,,,,,,,,,,,
9,3,,933111-01600,,"BUSH 35 30, ROD",1,1,1,1,1,1,,,,,,,,,,,,
10,2,,172137-72452,,"SEAL SET 60A, PISTON",1,1,1,1,1,1,,,,,,,,,,,,
13,2,,172137-72431,,"PISTON 60G",1,1,1,1,1,1,,,,,,,,,,,,
14,2,,172141-71900,,"SEAL SET, HEAD",1,1,1,1,1,1,,,,,,,,,,,,
19,2,,24761-040000,,"NIPPLE B,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,172141-72580,,"NUT M20",1,1,1,1,1,1,,,,,,,,,,,,
21,2,,933125-59600,,"WASHER 60 B, LOCK",1,1,1,1,1,1,,,,,,,,,,,,
22,2,,172141-73090,,"RING 50, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 33 バケットシリンダ BUCKET CYLINDER

https://truckmanualshub.com/

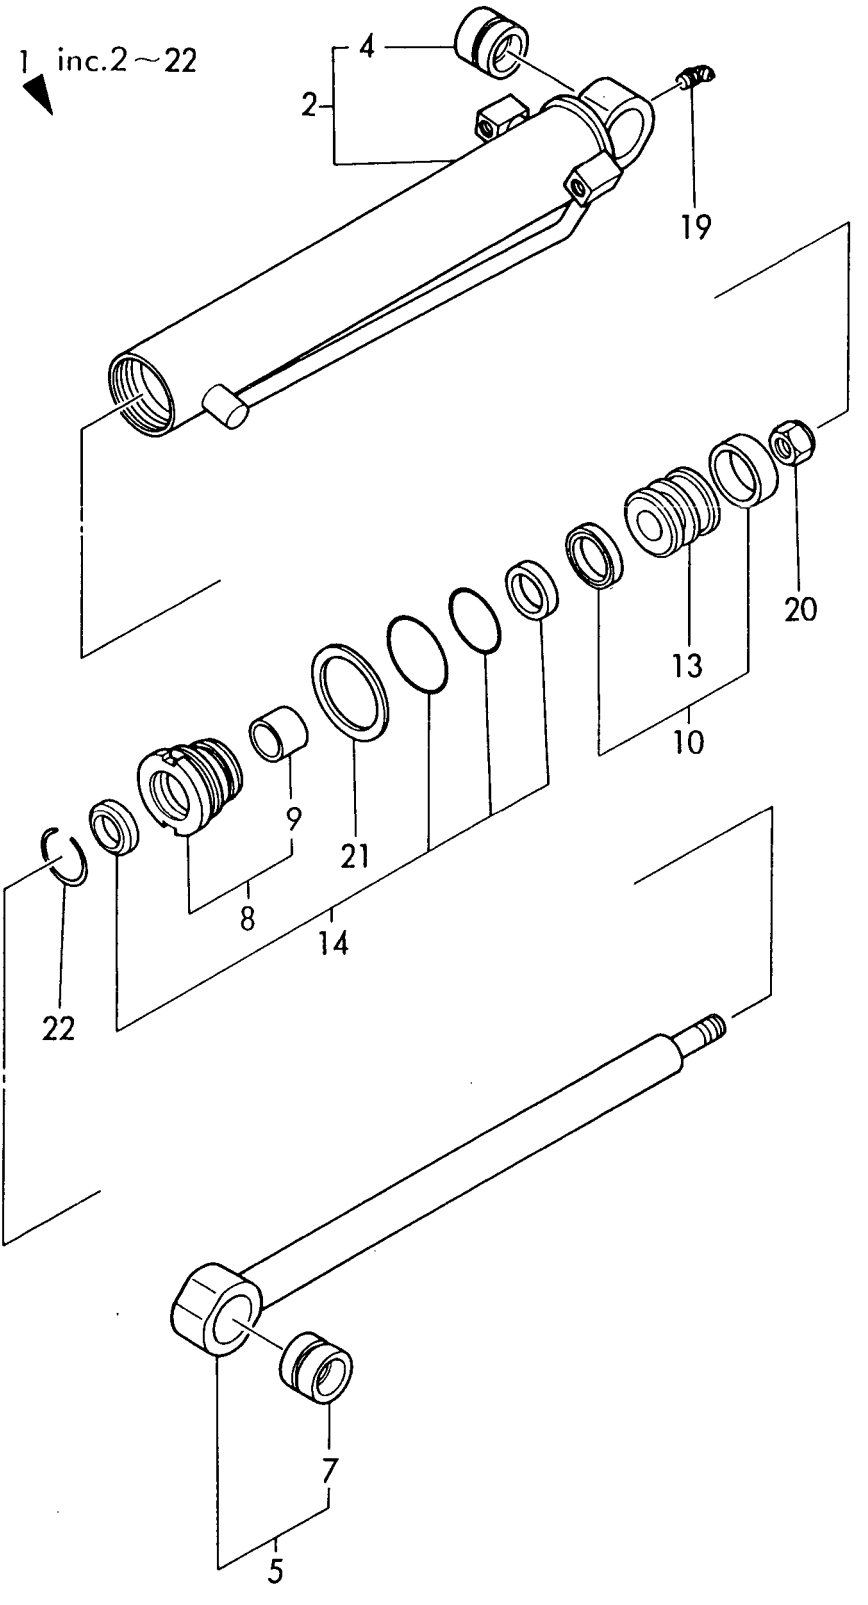

```
1,1,,172141-72730,,"CYL.ASSY(Z), SWING",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172141-71880,,"SEAL SET, HEAD",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,172141-72250,,"U-NUT M27",1,1,1,1,1,1,,,,,,,,,,,,
9,2,,172141-72190,,"WASHER 75",1,1,1,1,1,1,,,,,,,,,,,,
10,2,,172137-72710,,"COLLAR 40B, CUSHION",1,1,1,1,1,1,,,,,,,,,,,,
11,2,,172137-72720,,"COLLAR 40A, CUSHION",1,1,1,1,1,1,,,,,,,,,,,,
12,2,,172137-72730,,"RING 44B, CUSHION",1,1,1,1,1,1,,,,,,,,,,,,
13,2,,172141-71850,,"TUBE(Z) ASSY, SWING",1,1,1,1,1,1,,,,,,,,,,,,
15,2,,933125-12701,,"BUSH 38 50A",1,1,1,1,1,1,,,,,,,,,,,,
16,2,,172141-71921,,"SEAL SET,PISTON",1,1,1,1,1,1,,,,,,,,,,,,
21,2,,172141-71860,,"ROD W/BUSH, SWING",1,1,1,1,1,1,,,,,,,,,,,,
23,2,,933125-12701,,"BUSH 38 50A",1,1,1,1,1,1,,,,,,,,,,,,
24,2,,172141-72140,,"HEAD 75 40",1,1,1,1,1,1,,,,,,,,,,,,
25,3,,933135-14600,,"BUSH 40 30, ROD",1,1,1,1,1,1,,,,,,,,,,,,
26,2,,933111-26600,,"RING 55, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
27,2,,172141-72920,,"RING 40, CUSHION",1,1,1,1,1,1,,,,,,,,,,,,
28,2,,172141-72930,,"PLUGER 44, CUSHION",1,1,1,1,1,1,,,,,,,,,,,,
29,2,,172141-73051,,"PISTON 75 27
A",1,1,1,1,1,1,,,72171067,,72171067,,72171067,,72171067,,72171067,,72171067,,I
30,2,,172141-73061,,"PISTON 75 27 B",1,1,1,1,1,1,,,,,,,,,,,,
31,2,,22242-000220,,"CIRCLIP   22",1,1,1,1,1,1,,,,,,,,,,,,
32,2,,22252-000561,,"CIRCLIP   56",1,1,1,1,1,1,,,,,,,,,,,,
33,2,,24761-050000,,"NIPPLE C,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
34,1,,172141-72880,,"COVER, SWING",1,1,1,1,1,1,,,,,,,,,,,,
35,1,,933147-03400,,"WASHER, BRAKE ARM",1,1,1,1,1,1,,,,,,,,,,,,
36,1,,26116-100202,,"BOLT M10X 20 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
37,1,,22217-100000,,"SPRING WASHER 10",1,1,1,1,1,1,,,,,,,,,,,,
38,1,,933168-14170,,"SPRING 16",2,2,2,2,2,2,,,,,,,,,,,,
```

# Fig. 34 スイングシリンダ SWING CYLINDER

https://truckmanualshub.com/

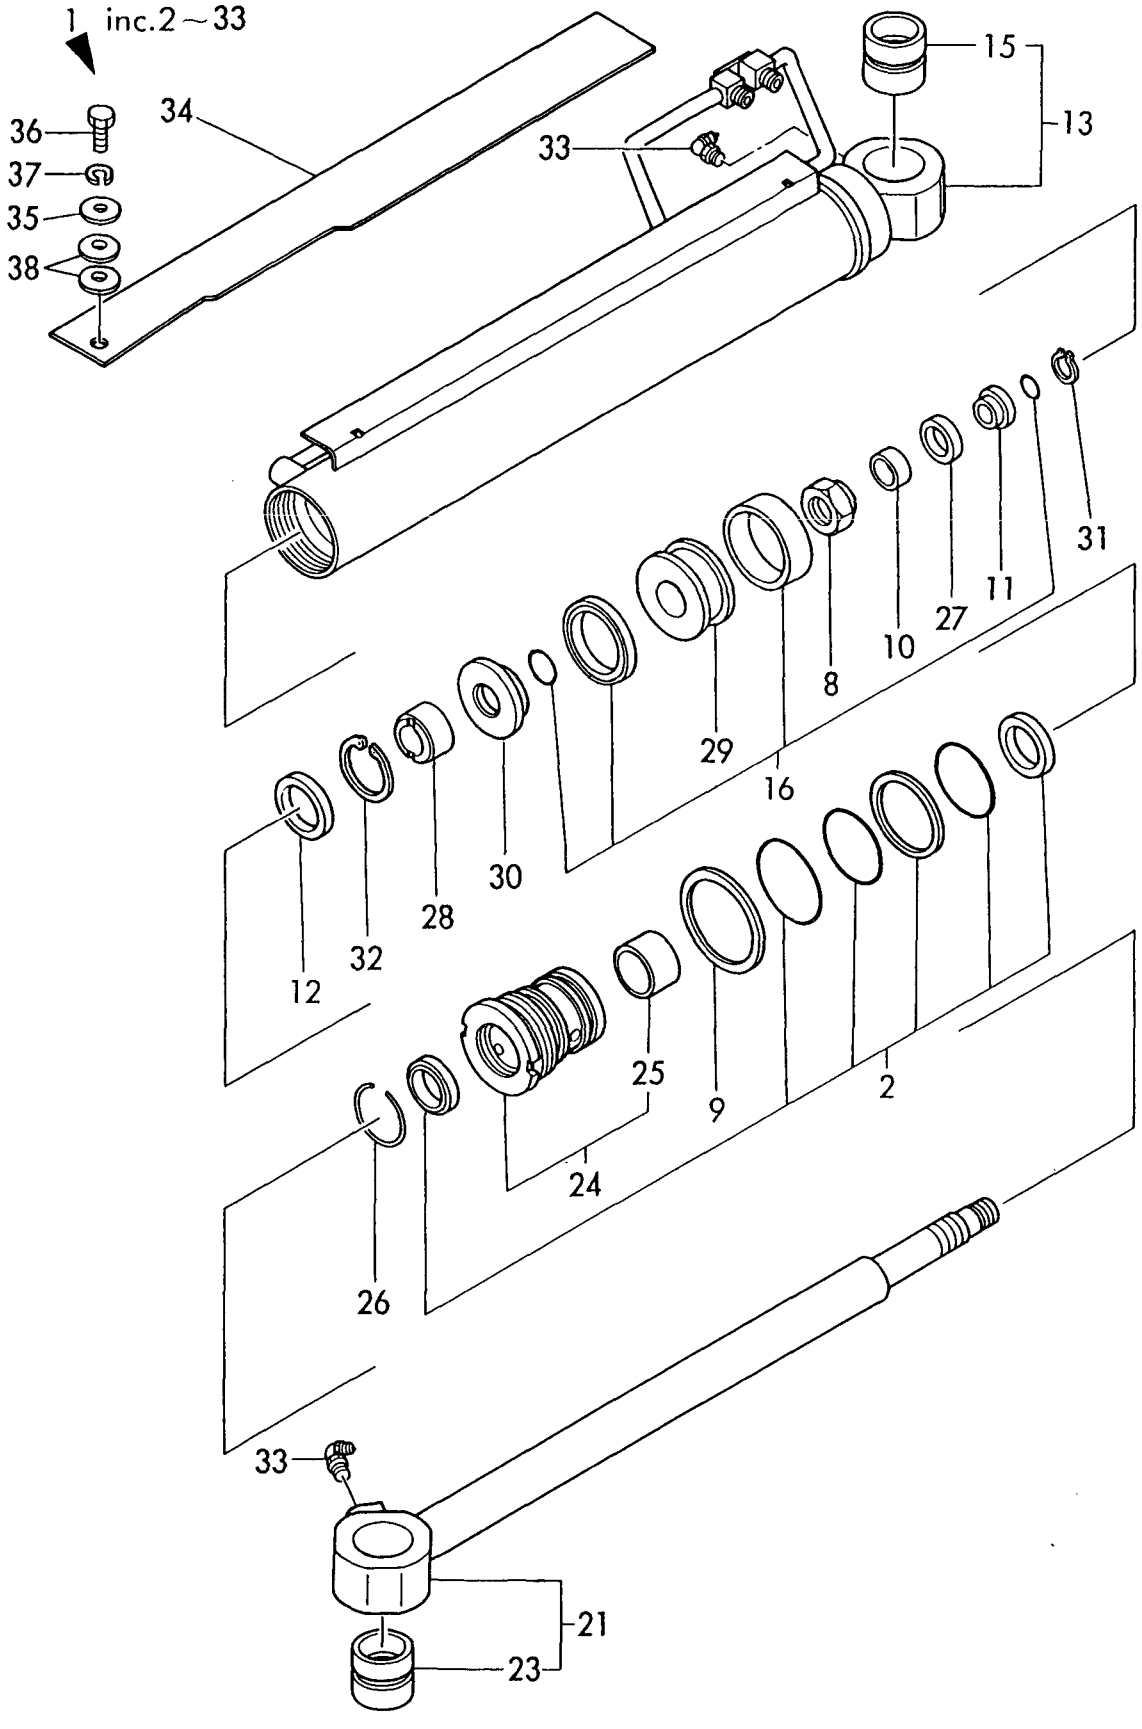

1,1,,172141-72600,,"CYLINDER ASSY, BLADE",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172141-71890,,"SEAL SET, CYL.HEAD",1,1,1,1,1,1,,,,,,,,,,,,
7,2,,172141-72190,,"WASHER 75",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,172141-72250,,"U-NUT M27",1,1,1,1,1,1,,,,,,,,,,,,
9,2,,172141-71830,,"TUBE W/BUSH, BLADE",1,1,1,1,1,1,,,,,,,,,,,,
11,3,,933125-12701,,"BUSH 38 50A",1,1,1,1,1,1,,,,,,,,,,,,
12,2,,172141-71840,,"ROD W/BUSH, BLADE",1,1,1,1,1,1,,,,,,,,,,,,
14,3,,933125-12701,,"BUSH 38 50A",1,1,1,1,1,1,,,,,,,,,,,,
15,2,,172141-72690,,"HEAD 75 40 W/BUSH",1,1,1,1,1,1,,,,,,,,,,,,
16,3,,933135-14600,,"BUSH 40 30, ROD",1,1,1,1,1,1,,,,,,,,,,,,
17,2,,172148-72930,,"SEAL SET, PISTON",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,172141-73051,,"PISTON 75 27
A",1,1,1,1,1,1,,,72171067,,72171067,,72171067,,72171067,,72171067,,72171067,,I
21,2,,172141-73071,,"PISTON 75 27
C",1,1,1,1,1,1,,,72171067,,72171067,,72171067,,72171067,,72171067,,72171067,,I
22,2,,933111-26600,,"RING 55, SPRING",1,1,1,1,1,1,,,,,,,,,,,,

# Fig. 35 ブレードシリンダ BLADE CYLINDER

https://truckmanualshub.com/

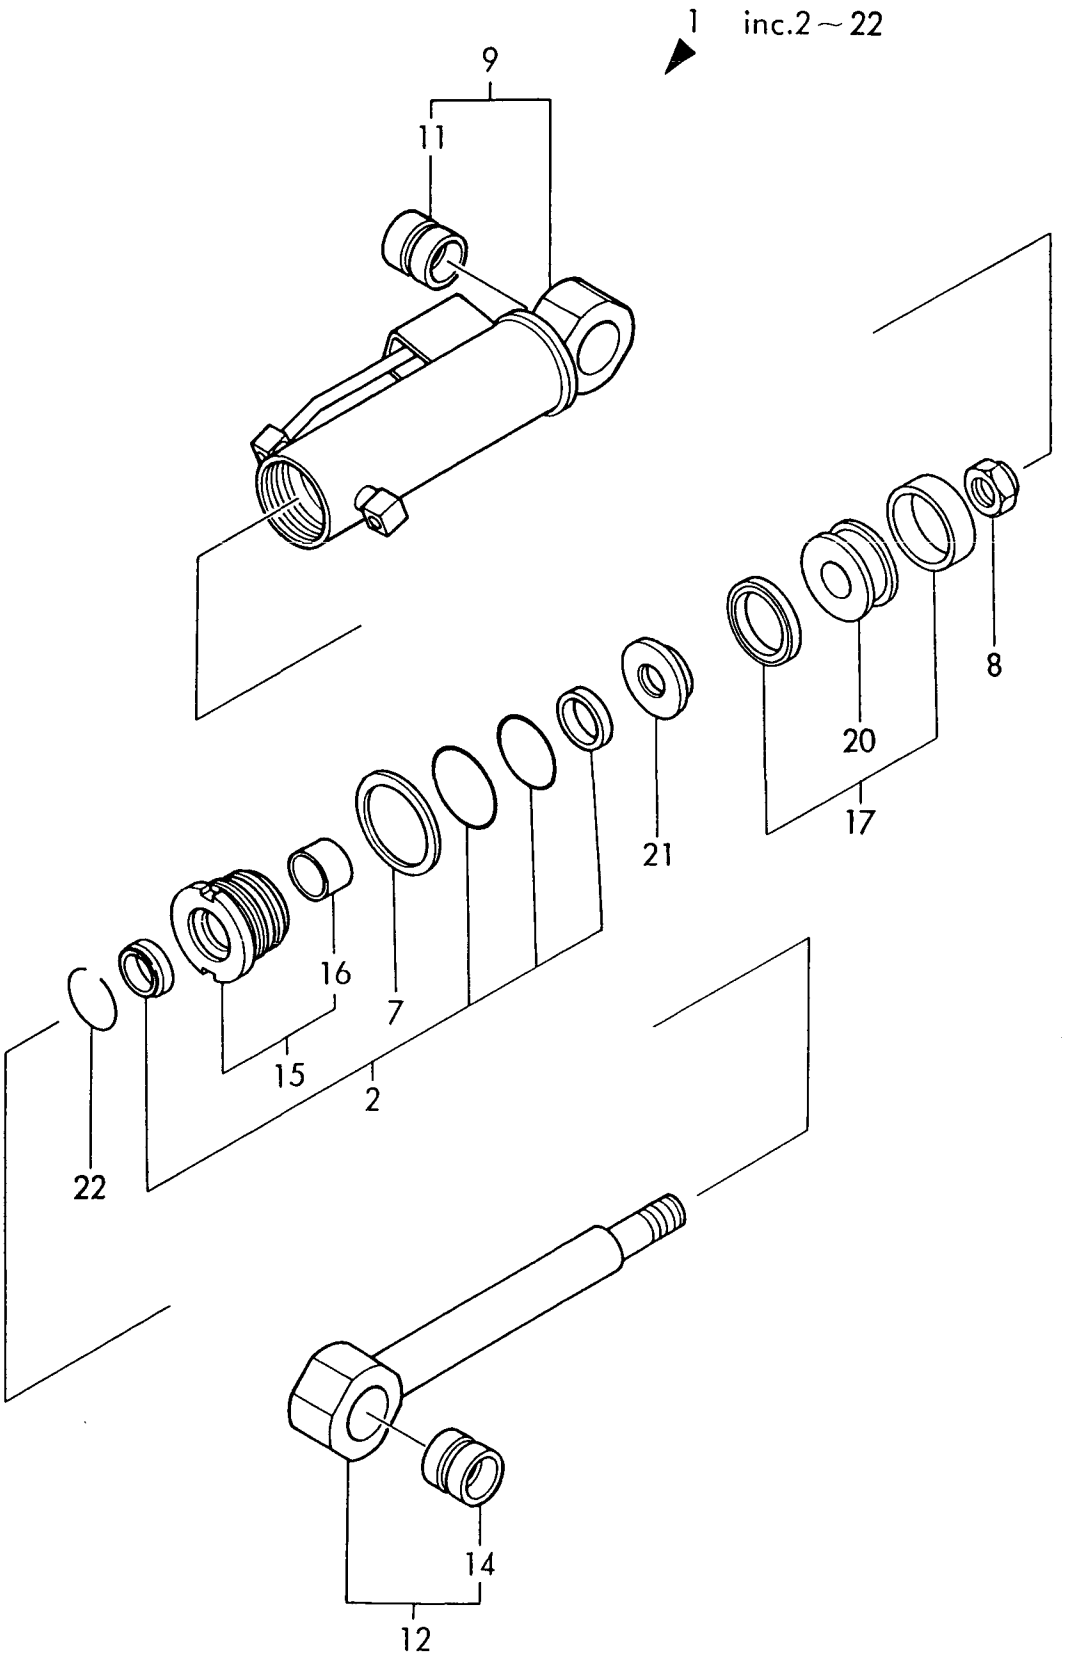

1,1,,172141-71100,,"COVER, FLYWHEEL",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,26013-100302,,"BOLT M10X 30",8,8,8,8,8,8,,,,,,,,,,,,
3,1,,172141-71210,,"COUPLING, PUMP",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,22351-050010,,"SPRING PIN 5X10",6,6,6,6,6,6,,,,,,,,,,,,
5,1,,26450-120402,,"BOLT M12X 40",6,6,6,6,6,6,,,,,,,,,,,,
6,1,,933171-23101,,"COUPLING CF16",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-73100,,"PUMP ASSY, HYD.OIL",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,172141-73110,,"PUMP, FRONT",1,1,1,1,1,1,,,,,,,,,,,,
9,3,,172141-73190,,FRAME,1,1,1,1,1,1,,,,,,,,,,,,
10,3,,172141-73220,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
11,3,,172141-73230,,GUIDE,2,2,2,2,2,2,,,,,,,,,,,,
12,3,,172141-73240,,"PIN, PARALLEL",10,10,10,10,10,10,,,,,,,,,,,,
13,2,,172141-73120,,"PUMP, CENTER",1,1,1,1,1,1,,,,,,,,,,,,
14,3,,172141-73220,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
15,3,,172141-73230,,GUIDE,2,2,2,2,2,2,,,,,,,,,,,,
16,2,,172141-73130,,"PUMP, REAR",1,1,1,1,1,1,,,,,,,,,,,,
17,3,,172141-73220,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
18,3,,172141-73230,,GUIDE,2,2,2,2,2,2,,,,,,,,,,,,
19,2,,172141-73140,,"SEAL SET",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,172141-73150,,"COVER, REAR",1,1,1,1,1,1,,,,,,,,,,,,
21,2,,172141-73160,,NUT,4,4,4,4,4,4,,,,,,,,,,,,
22,2,,172141-73170,,STUD,4,4,4,4,4,4,,,,,,,,,,,,
23,2,,172141-73180,,FRAME,2,2,2,2,2,2,,,,,,,,,,,,
24,2,,172141-73200,,C0UPLING,2,2,2,2,2,2,,,,,,,,,,,,
25,2,,172141-73210,,CIRCLIP,2,2,2,2,2,2,,,,,,,,,,,,
26,1,,26013-120352,,"BOLT M12X 35",4,4,4,4,4,4,,,,,,,,,,,,

# Fig. 36 ポンプ＆ジクツギテ HYD. OIL PUMP & JOINT

https://truckmanualshub.com/

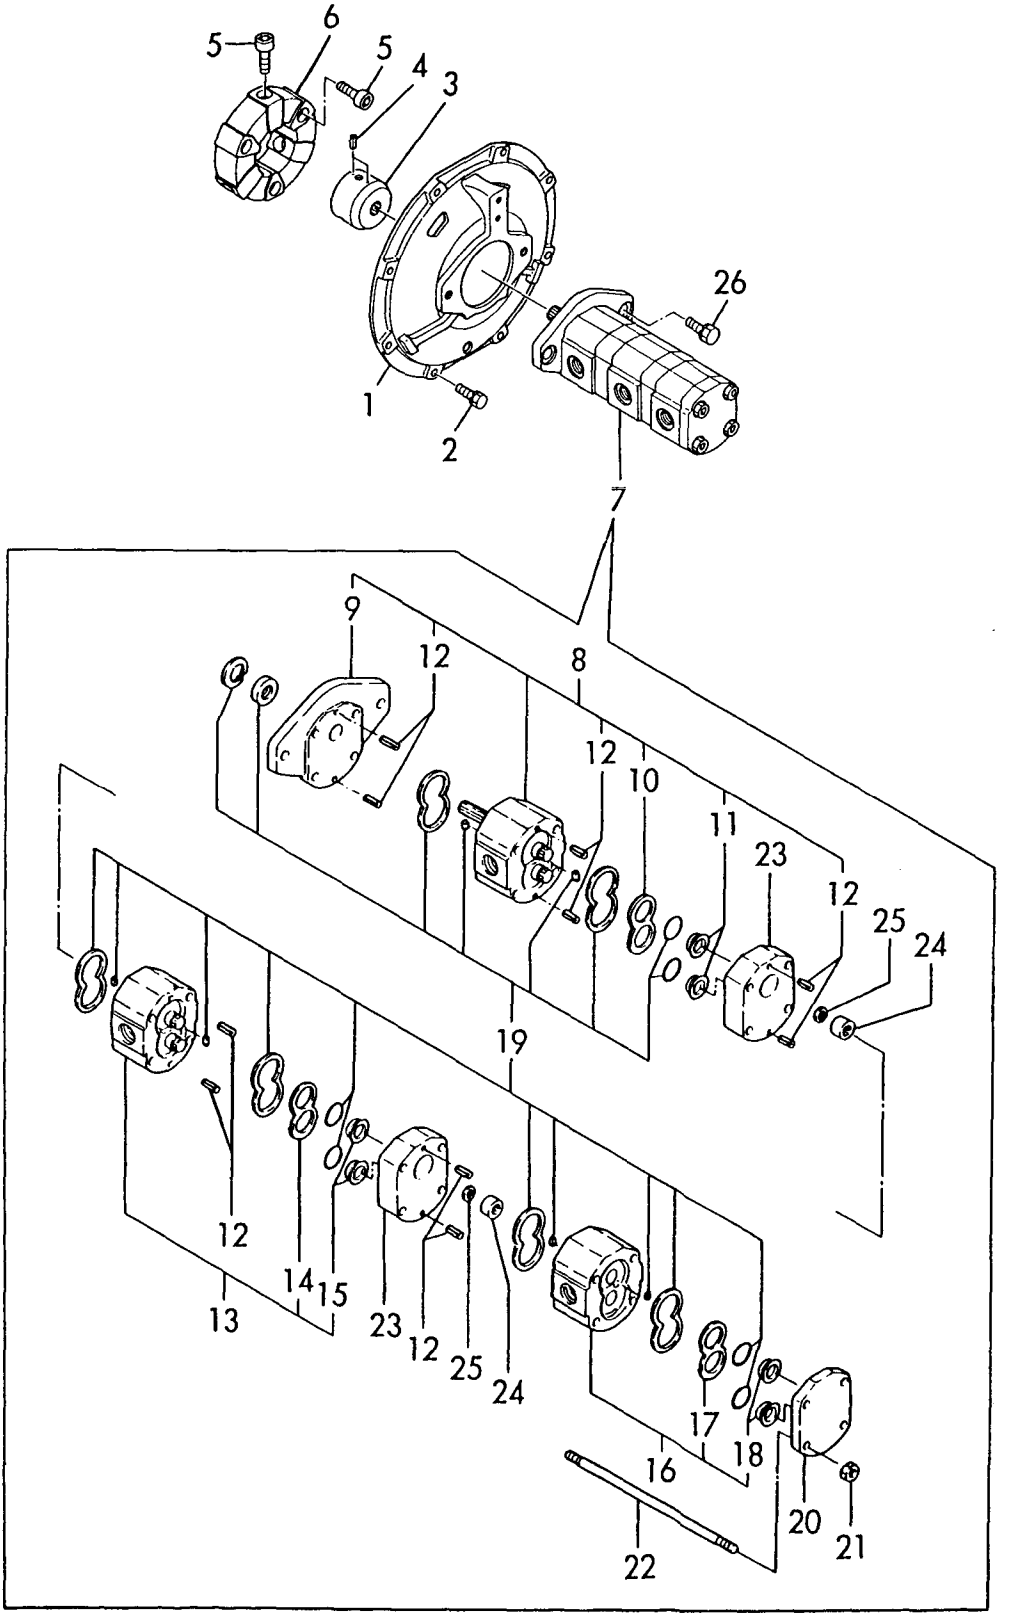

1,1,,172141-73300,,"MOTOR ASSY, TURNING",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172141-77000,,"MOTOR, TURNING",1,1,1,1,1,1,,,,,,,,,,,,
3,3,,172141-77410,,"GEAR ASSY, PINION",1,1,1,1,1,1,,,,,,,,,,,,
4,4,,172141-77010,,"HOUSING, BEARING",1,1,1,1,1,1,,,,,,,,,,,,
5,4,,172141-77030,,"BEARING, ROLLER",1,1,1,1,1,1,,,,,,,,,,,,
6,4,,172141-77040,,BEARING,1,1,1,1,1,1,,,,,,,,,,,,
7,4,,172141-77050,,"RING, RETAINING",1,1,1,1,1,1,,,,,,,,,,,,
8,4,,172141-77060,,"SPACER, BEARING",1,1,1,1,1,1,,,,,,,,,,,,
9,4,,172141-77070,,"SPACER, BEARING",1,1,1,1,1,1,,,,,,,,,,,,
10,4,,172141-77110,,BOLT,4,4,4,4,4,4,,,,,,,,,,,,
11,4,,172141-77460,,"GEAR SUB ASSY,PINION",1,1,1,1,1,1,,,,,,,,,,,,
12,4,,172141-77430,,"SEAL SET, PINION",1,1,1,1,1,1,,,,,,,,,,,,
13,3,,172141-77420,,MOTOR,1,1,1,1,1,1,,,,,,,,,,,,
14,4,,172141-77120,,PISTON,1,1,1,1,1,1,,,,,,,,,,,,
15,4,,172141-77130,,POPPET,2,2,2,2,2,2,,,,,,,,,,,,
16,4,,172141-77140,,SLEEVE,2,2,2,2,2,2,,,,,,,,,,,,
17,4,,172141-77160,,"PLATE, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
18,4,,172141-77180,,VALVE,1,1,1,1,1,1,,,,,,,,,,,,
19,4,,172141-77190,,"PLATE, BALANCING",1,1,1,1,1,1,,,,,,,,,,,,
20,4,,172141-77200,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
21,4,,172141-77220,,PIN,2,2,2,2,2,2,,,,,,,,,,,,
22,4,,172141-77240,,DRIVE,1,1,1,1,1,1,,,,,,,,,,,,
23,4,,172141-77250,,ROLLER,1,1,1,1,1,1,,,,,,,,,,,,
24,4,,172141-77260,,"VALVE DRIVE",1,1,1,1,1,1,,,,,,,,,,,,
25,4,,172141-77270,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
26,4,,172141-77280,,PLUG,2,2,2,2,2,2,,,,,,,,,,,,
27,4,,172141-77310,,BOLT,4,4,4,4,4,4,,,,,,,,,,,,
28,4,,172141-77340,,FLANGEMOUTING,1,1,1,1,1,1,,,,,,,,,,,,
29,4,,172141-77380,,PLUG,2,2,2,2,2,2,,,,,,,,,,,,
30,4,,172141-77390,,"HOUSING, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
31,4,,172141-77400,,"PLUG, BLIND",1,1,1,1,1,1,,,,,,,,,,,,
32,4,,172141-77450,,"SPRING, ORIFICE",1,1,1,1,1,1,,,,,,,,,,,,
33,4,,172141-77440,,"SEAL KIT, MOTOR",1,1,1,1,1,1,,,,,,,,,,,,
34,2,,172141-77500,,"VALVE, BRAKE",1,1,1,1,1,1,,,,,,,,,,,,
35,3,,172141-77510,,"BODY, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
36,3,,172141-77520,,FILTER,2,2,2,2,2,2,,,,,,,,,,,,
37,3,,172141-77530,,"SEAT, VALVE",2,2,2,2,2,2,,,,,,,,,,,,
38,3,,172141-77540,,"VALVE, NEEDLE",2,2,2,2,2,2,,,,,,,,,,,,
39,3,,172141-77550,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
40,3,,172141-77560,,"PUSH-ROD, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
41,3,,172141-77570,,"PLUG, ORIFICE",2,2,2,2,2,2,,,,,,,,,,,,
42,3,,172141-77580,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
43,3,,172141-77590,,"PLUG, CHECK",2,2,2,2,2,2,,,,,,,,,,,,
44,3,,172141-77600,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
45,3,,172141-77610,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
46,3,,172141-77620,,"SCREW M 6X 18",2,2,2,2,2,2,,,,,,,,,,,,
47,3,,172141-77650,,"VALVE FITTING",2,2,2,2,2,2,,,,,,,,,,,,
48,3,,172141-77660,,ADAPTER,2,2,2,2,2,2,,,,,,,,,,,,
49,3,,172141-77670,,"SEAL KIT,BRAKE VALVE",1,1,1,1,1,1,,,,,,,,,,,,
50,3,,26756-060002,,"LOCK NUT M 6 PLATED",2,2,2,2,2,2,2,2,,,,,,,,,,
51,3,,26657-060002,,"CAP NUT M 6",2,2,2,2,2,2,,,,,,,,,,,,
52,3,,24190-140001,,"BALL 7/16, STEEL",2,2,2,2,2,2,,,,,,,,,,,,
53,1,,26013-120402,,"BOLT M12X 40",4,4,4,4,4,4,,,,,,,,,,,,

# Fig. 37 センカイモータ TURNING MOTOR

https://truckmanualshub.com/

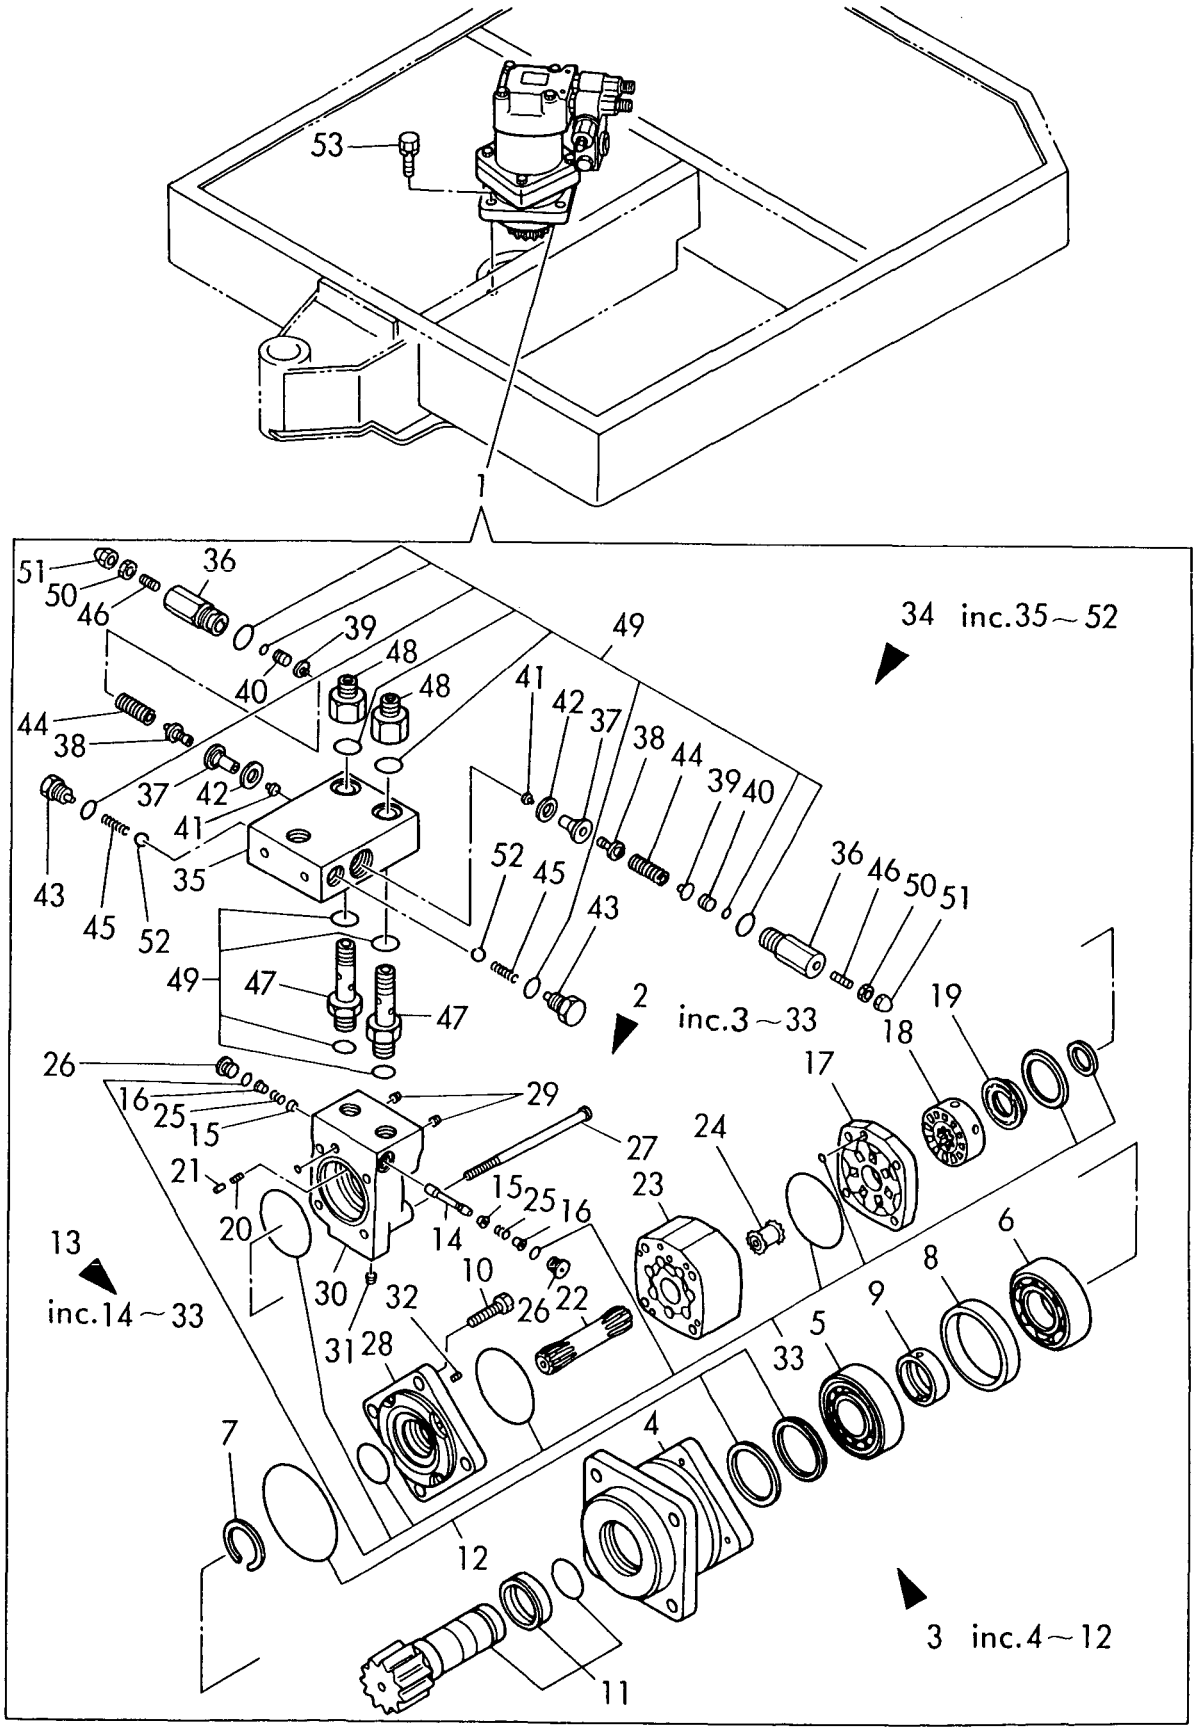

```
1,1,,172141-73350,,"MOTOR ASSY, DRIVE",2,2,2,2,2,2,,,,,,,,,,,,
4,3,,172141-70030,,"BEARING, ANGULAR",2,2,2,2,2,2,,,,,,,,,,,,
5,3,,172141-70040,,"NUT, RING",2,2,2,2,2,2,,,,,,,,,,,,
6,3,,172141-70060,,"GEAR(B), PLANETARY",8,8,8,8,8,8,,,,,,,,,,,,
7,3,,172141-70070,,"CAGE & ROLLER",8,8,8,8,8,8,,,,,,,,,,,,
8,3,,172141-70080,,COLLAR,8,8,8,8,8,8,,,,,,,,,,,,
9,3,,172141-70090,,"WASHER, THRUST",8,8,8,8,8,8,,,,,,,,,,,,
10,3,,172141-70100,,"PLATE, THRUST",2,2,2,2,2,2,,,,,,,,,,,,
11,3,,172141-70110,,SCREW,8,8,8,8,8,8,,,,,,,,,,,,
12,3,,172141-70120,,"GEAR, SUN",2,2,2,2,2,2,,,,,,,,,,,,
13,3,,172141-70130,,HOLDER,2,2,2,2,2,2,,,,,,,,,,,,
14,3,,172141-70140,,"GEAR(A), PLANETARY",6,6,6,6,6,6,,,,,,,,,,,,
15,3,,172141-70150,,"CAGE & ROLLER",6,6,6,6,6,6,,,,,,,,,,,,
16,3,,172141-70160,,"INNER LACE",6,6,6,6,6,6,,,,,,,,,,,,
17,3,,172141-70170,,"GEAR, DRIVE",2,2,2,2,2,2,,,,,,,,,,,,
18,3,,172141-70180,,"PLATE(T1.8), THRUST",2,2,2,2,2,2,,1,,,,,,,,,,
19,3,,172141-70190,,"PLATE(T2.3), THRUST",2,2,2,2,2,2,,1,,,,,,,,,,
20,3,,172141-70200,,"PLATE(T2.8), THRUST",2,2,2,2,2,2,,1,,,,,,,,,,
21,3,,172141-70210,,COVER,2,2,2,2,2,2,,,,,,,,,,,,
23,3,,172141-70230,,WIRE,2,2,2,2,2,2,,,,,,,,,,,,
24,3,,172122-73430,,PLUG,4,4,4,4,4,4,,,,,,,,,,,,
25,3,,22242-000350,,"CIRCLIP   35",2,2,2,2,2,2,,,,,,,,,,,,
26,3,,22351-050016,,"SPRING PIN 5X16",6,6,6,6,6,6,,,,,,,,,,,,
27,3,,23871-020000,,"PLUG PT1/4,SCREW",4,4,4,4,4,4,,,,,,,,,,,,
28,3,,23871-030000,,"PLUG PT3/8,SCREW",4,4,4,4,4,4,,,,,,,,,,,,
29,3,,24190-050001,,"BALL 5/32",62,62,62,62,62,62,,,,,,,,,,,,
30,2,,172142-73590,,"SHAFT W/OIL SEAL",2,2,2,2,2,2,,,,,,,,,,,,
30A,3,,172141-70240,,SHAFT,2,2,2,2,2,2,,,,,,,,,,,,
32,2,,172141-70260,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
33,2,,172141-70270,,PIN,2,2,2,2,2,2,,,,,,,,,,,,
34,2,,172141-70290,,"HOLDER, SPRING",4,4,4,4,4,4,,,,,,,,,,,,
35,2,,172141-70300,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
36,2,,172141-70310,,"SNAP RING",2,2,2,2,2,2,,,,,,,,,,,,
37,2,,172141-70320,,PIN,6,6,6,6,6,6,,,,,,,,,,,,
38,2,,172141-70330,,"HOLDER, RETAINER",2,2,2,2,2,2,,,,,,,,,,,,
39,2,,172141-70340,,"PLATE, RETAINER",2,2,2,2,2,2,,,,,,,,,,,,
40,2,,172141-70360,,"PLATE, VALVE",2,2,2,2,2,2,,,,,,,,,,,,
43,3,,172141-70400,,PLUNGER,2,2,2,2,2,2,,,,,,,,,,,,
44,3,,172141-70410,,"VALVE, CHECK",4,4,4,4,4,4,,,,,,,,,,,,
45,3,,172141-70420,,SPRING,4,4,4,4,4,4,,,,,,,,,,,,
46,3,,172141-70430,,PLUG,4,4,4,4,4,4,,,,,,,,,,,,
48,3,,172141-70450,,"SEAT, SPRING",4,4,4,4,4,4,,,,,,,,,,,,
49,3,,172141-70460,,SPRING,4,4,4,4,4,4,,,,,,,,,,,,
50,3,,172141-70470,,CAP,4,4,4,4,4,4,,,,,,,,,,,,
51,3,,172141-70480,,PIN,2,2,2,2,2,2,,,,,,,,,,,,
53,2,,172141-70490,,PIN,4,4,4,4,4,4,,,,,,,,,,,,
54,2,,172141-70540,,"CYLINDER BLOCK S/A",2,2,2,2,2,2,,,,,,,,,,,,
55,2,,23871-020000,,"PLUG PT1/4,SCREW",8,8,8,8,8,8,,,,,,,,,,,,
56,2,,24101-060024,,"BALL BEARING",2,2,2,2,2,2,,,,,,,,,,,,
57,2,,26450-080202,,"BOLT M 8X 20",12,12,12,12,12,12,,,,,,,,,,,,
58,2,,24101-060040,,"BALL BEARING",2,2,2,2,2,2,,,,,,,,,,,,
59,2,,172141-70500,,"SEAL ASSY",2,2,2,2,2,2,,,,,,,,,,,,
60,3,,172141-70510,,"SEAL SET, REDUCTION",2,2,2,2,2,2,,,,,,,,,,,,
61,3,,172141-70520,,"SEAL SET, MOTOR",2,2,2,2,2,2,,,,,,,,,,,,
62,3,,172141-70530,,"SEAL SET, BASE PLATE",2,2,2,2,2,2,,,,,,,,,,,,
63,1,,26013-120302,,"BOLT W/WASHER M12X30",18,18,18,18,18,18,,,,,,,,,,,,
```

# Fig. 38 ソウコウモータ TRAVEL MOTOR

https://truckmanualshub.com/

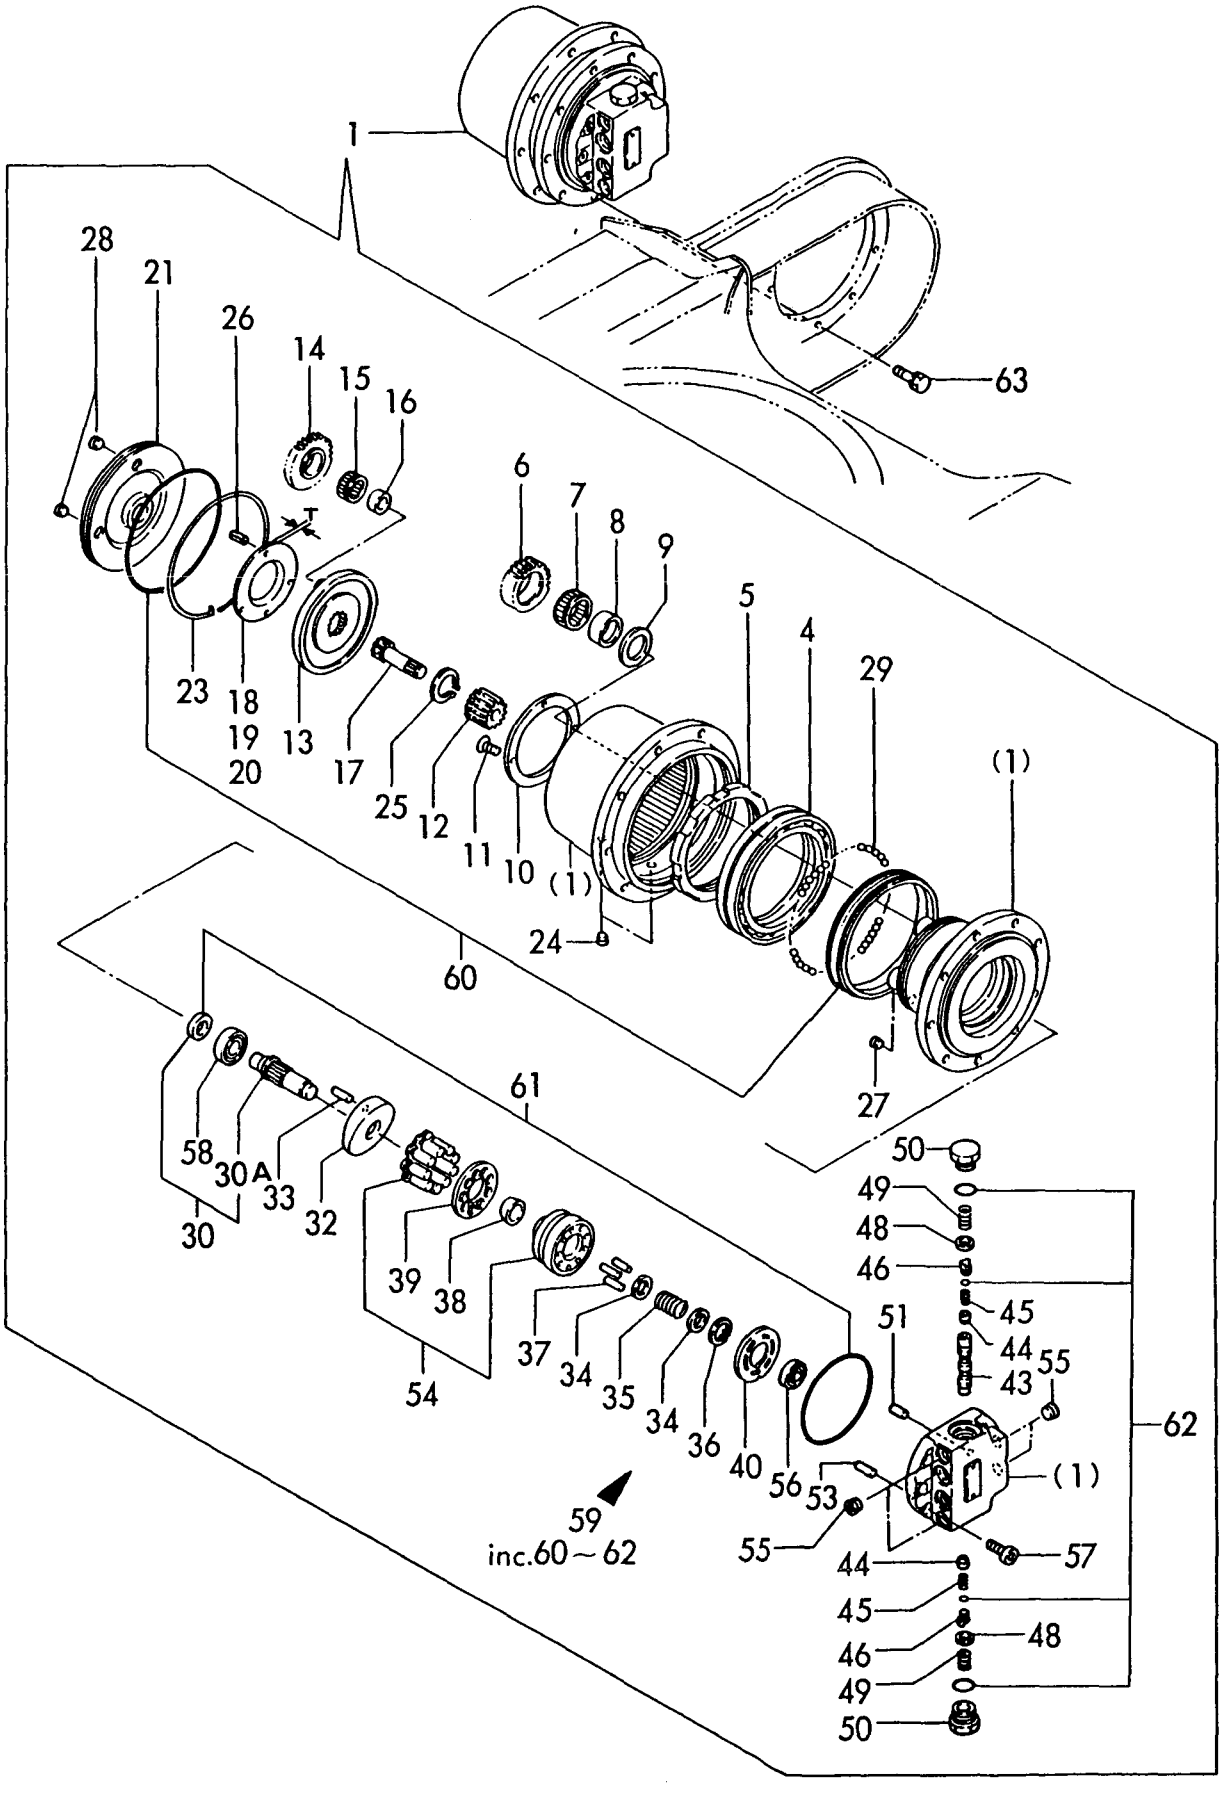

1,1,,172141-73800,,"JOINT, SWIVEL",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,194630-31910,,"LINER 22.5X40X2",1,1,1,1,1,1,,,,,,,,,,,,
3,2,,172141-73810,,"SHAFT, SWIVEL",1,1,1,1,1,1,,,,,,,,,,,,
4,2,,172131-73830,,"FLANGE,SWIVEL",1,1,1,1,1,1,,,,,,,,,,,,
5,2,,172141-73830,,"HUB, SWIVEL",1,1,1,1,1,1,,,,,,,,,,,,
6,2,,172137-73860,,"SPACER, SWIVEL",1,1,1,1,1,1,,,,,,,,,,,,
7,2,,172141-73890,,"SEAL SET, SWIVEL",1,1,1,1,1,1,,,,,,,,,,,,
8,3,,172142-73800,,"O-RING 55.76X5.7",8,8,8,8,8,8,,,,,,,,,,,,
9,3,,24311-000750,,"O-RING 1A P-75.0",1,1,1,1,1,1,,,,,,,,,,,,
10,3,,24321-000700,,"O-RING 1A G70",1,1,1,1,1,1,,,,,,,,,,,,
11,2,,22242-000451,,"CIRCLIP   45",1,1,1,1,1,1,,,,,,,,,,,,
12,2,,23871-020000,,"PLUG PT1/4,SCREW",6,6,6,6,6,6,,,,,,,,,,,,
13,2,,26013-100252,,"BOLT M10X 25",3,3,3,3,3,3,,,,,,,,,,,,
14,1,,26013-100302,,"BOLT M10X 30",4,4,4,4,4,4,,,,,,,,,,,,

# Fig. 39 スイベルジョイント SWIVEL JOINT

https://truckmanualshub.com/

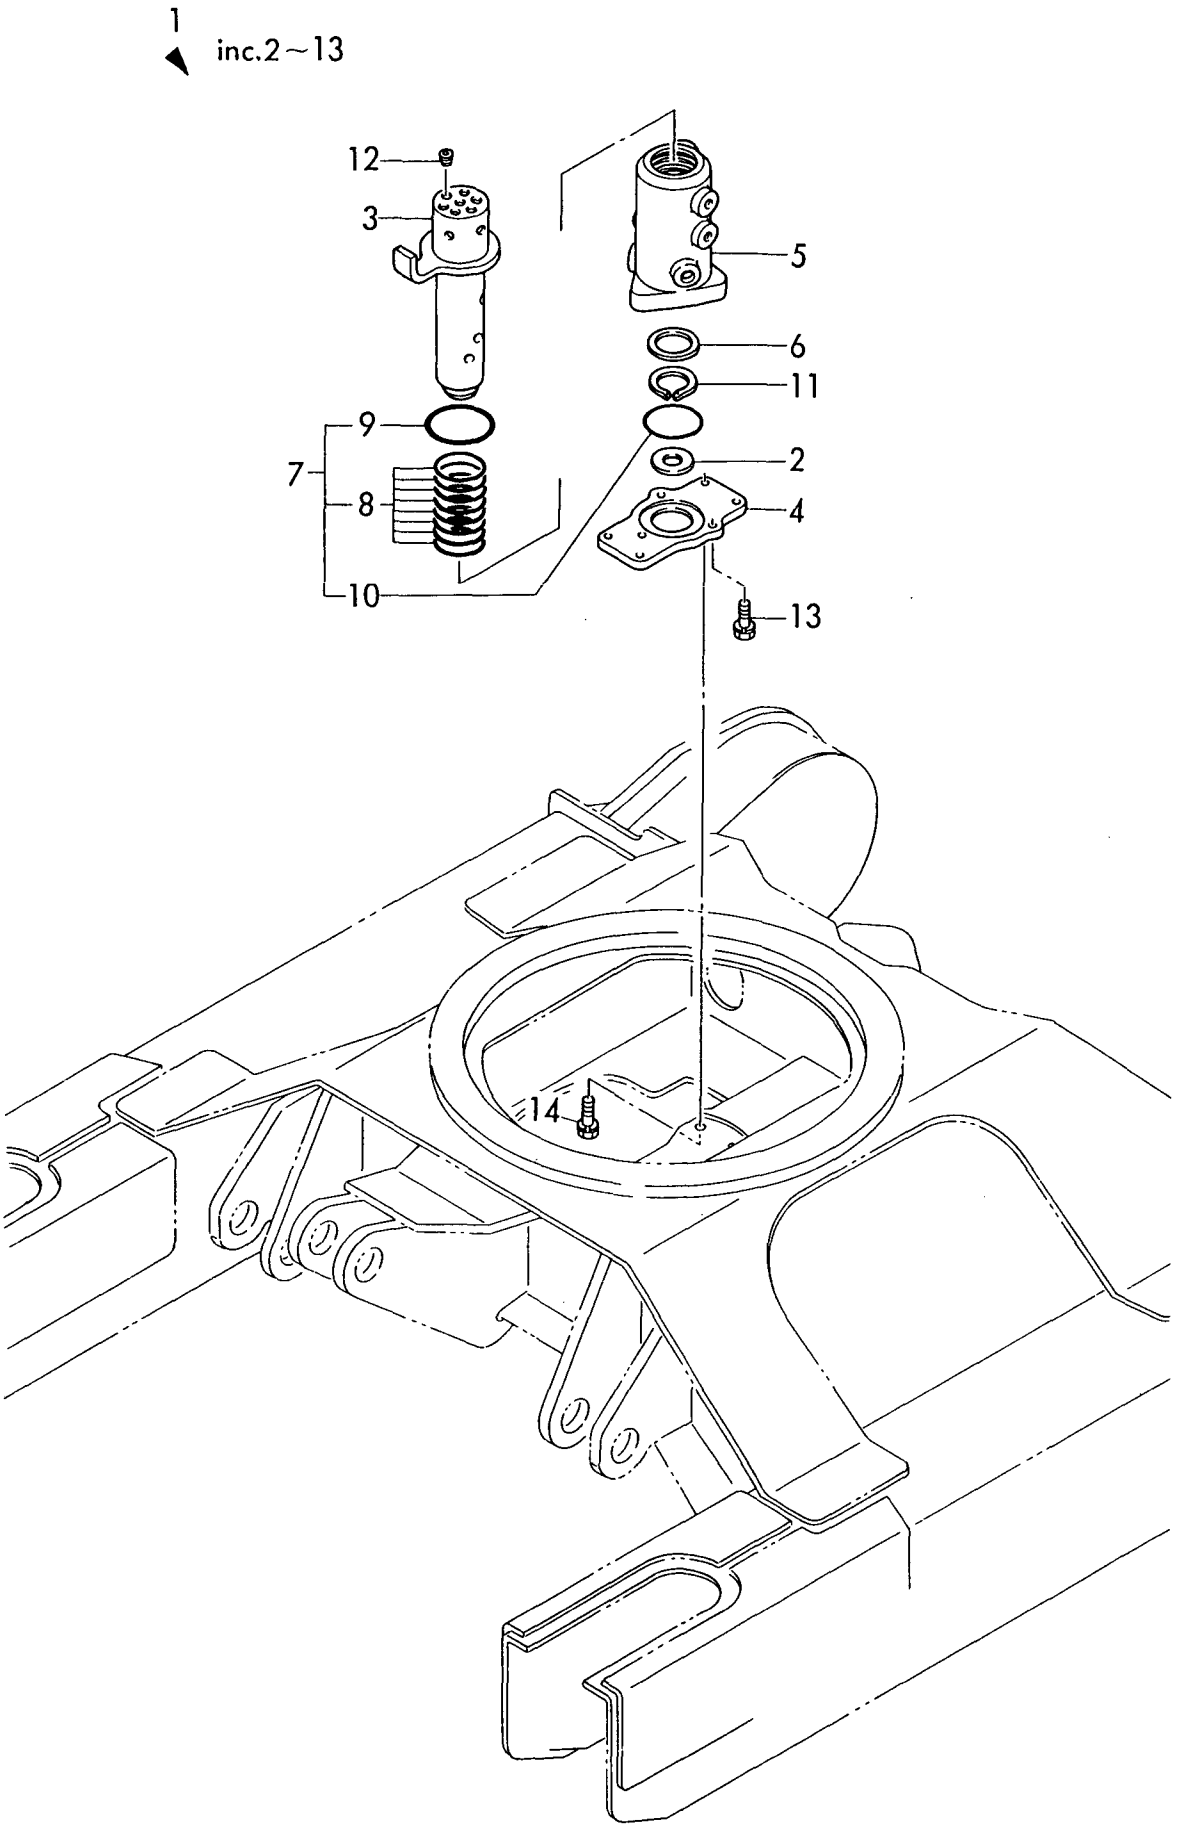

```
1,1,,172143-74100,,VALVE,1,1,1,1,1,1,,1,,,,,,,,,,
2,2,,172141-74150,,"BODY ASSY",2,2,2,2,2,2,,,,,,,,,,,,
5,3,,172141-74350,,COVER,2,2,2,2,2,2,,,,,,,,,,,,
6,3,,172141-74360,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
7,3,,172141-74370,,"SEAT, SPRING",4,4,4,4,4,4,,,,,,,,,,,,
8,3,,172141-74380,,SPRING,2,2,2,2,2,2,,,,,,,,,,,,
9,3,,172141-74390,,PLUG,2,2,2,2,2,2,,,,,,,,,,,,
10,3,,172141-74400,,PLATE,4,4,4,4,4,4,,,,,,,,,,,,
11,3,,172141-74410,,BOLT,4,4,4,4,4,4,,,,,,,,,,,,
12,3,,172141-74420,,BOLT,4,4,4,4,4,4,,,,,,,,,,,,
13,3,,172141-74430,,O-RING,2,2,2,2,2,2,,,,,,,,,,,,
14,3,,172141-74440,,RING,2,2,2,2,2,2,,,,,,,,,,,,
15,3,,172141-74450,,RING,2,2,2,2,2,2,,,,,,,,,,,,
16,3,,172141-74460,,RING,2,2,2,2,2,2,,,,,,,,,,,,
17,3,,172141-74470,,GASKET,4,4,4,4,4,4,,,,,,,,,,,,
18,3,,172141-74480,,SHIM,8,8,8,8,8,8,,,,,,,,,,,,
19,2,,172143-74350,,"BODY ASSY, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
20,3,,172141-74350,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
21,3,,172141-74360,,"SEAT, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
22,3,,172141-74370,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
23,3,,172141-74380,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
24,3,,172141-74390,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
25,3,,172141-74400,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
26,3,,172141-74410,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
27,3,,172141-74420,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
28,3,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
29,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
30,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
31,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
32,3,,172141-74470,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
33,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
34,3,,172141-74520,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
35,3,,172141-74530,,PLANGER,1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 40 コントロールバルブ(ソウコウ & センカイ)
# CONTROL VALVE (TRAVEL & TURNING)

https://truckmanualshub.com/

コントロールバルブ ASSY
CONTROL VALVE ASSY
(172143-74100)
Fig. 40 Ref. No. 1
INC Fig. 40 Ref. No. 2～35
Fig. 41 Ref. No. 1～44
Fig. 42 Ref. No. 1～50
Fig. 43 Ref. No. 1～17
Fig. 44 Ref. No. 1～29

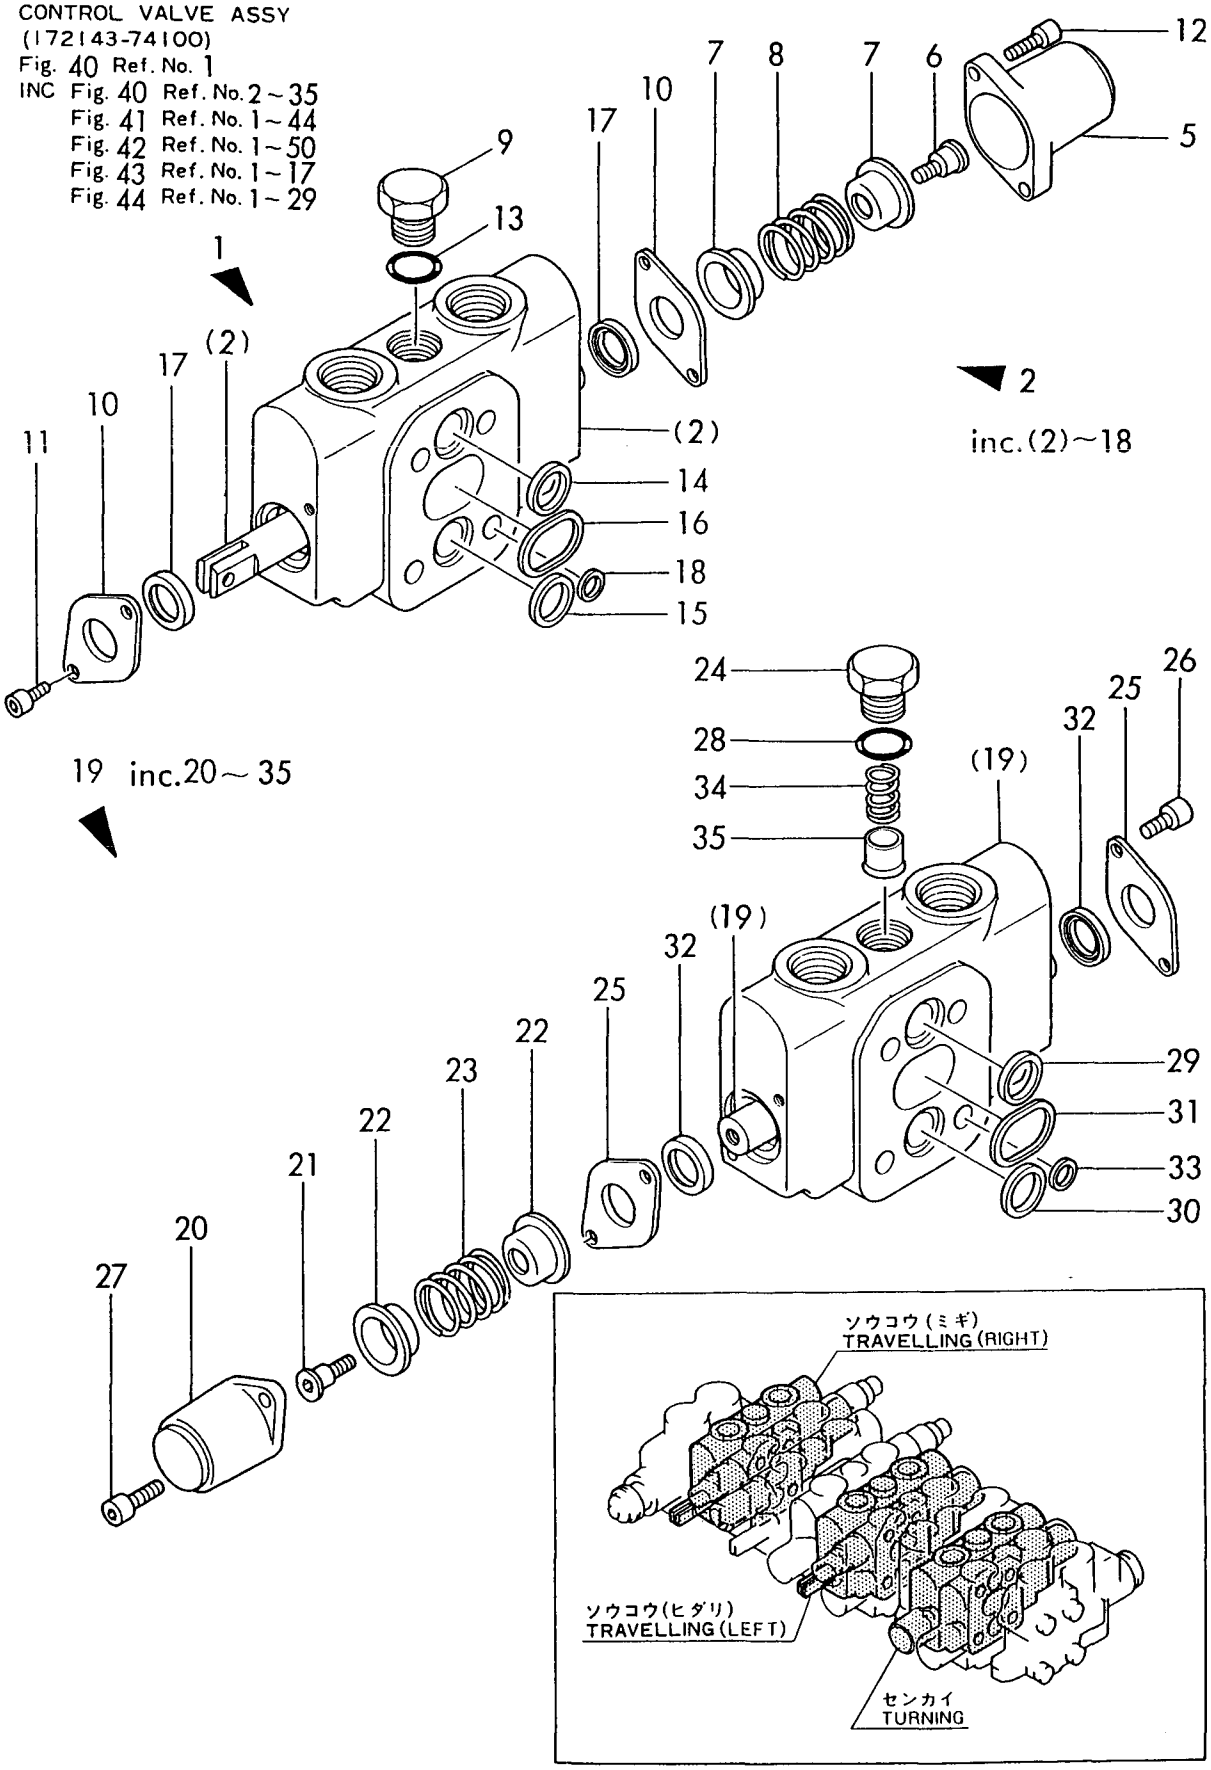

```
1,2,,172143-74150,,"BODY ASSY, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
2,3,,172141-74370,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
3,3,,172141-74570,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
4,3,,172141-74400,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
5,3,,172141-74410,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
6,3,,172141-74420,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
7,3,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
8,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
9,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
10,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
11,3,,172141-74470,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
12,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
13,3,,172141-74380,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
14,3,,172141-74520,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
15,3,,172141-74530,,PLANGER,1,1,1,1,1,1,,,,,,,,,,,,
16,3,,172141-74540,,"VALVE 190/22, RELIEF",2,2,2,2,2,2,,,,,,,,,,,,
19,3,,172141-74350,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
20,3,,172141-74360,,"SEAT, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
21,2,,172143-74300,,"BODY ASSY, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
22,3,,172141-74350,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
23,3,,172141-74360,,"SEAT, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
24,3,,172141-74370,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
25,3,,172141-74380,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
26,3,,172141-74390,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
27,3,,172141-74400,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
28,3,,172141-74410,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
29,3,,172141-74420,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
30,3,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
31,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
32,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
33,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
34,3,,172141-74470,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
35,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
37,3,,172141-74520,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
38,3,,172141-74530,,PLANGER,1,1,1,1,1,1,,,,,,,,,,,,
39,3,,172141-74540,,"VALVE 190/22, RELIEF",1,1,1,1,1,1,,,,,,,,,,,,
41,3,,172141-74570,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
42,3,,172141-74580,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
43,3,,172141-74590,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
44,3,,172141-74600,,"RING, BACK UP",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 41 コントロールバルブ(アーム＆バケット) CONTROL VALVE (ARM & BUCKET)

https://www.kmanualshub.com/

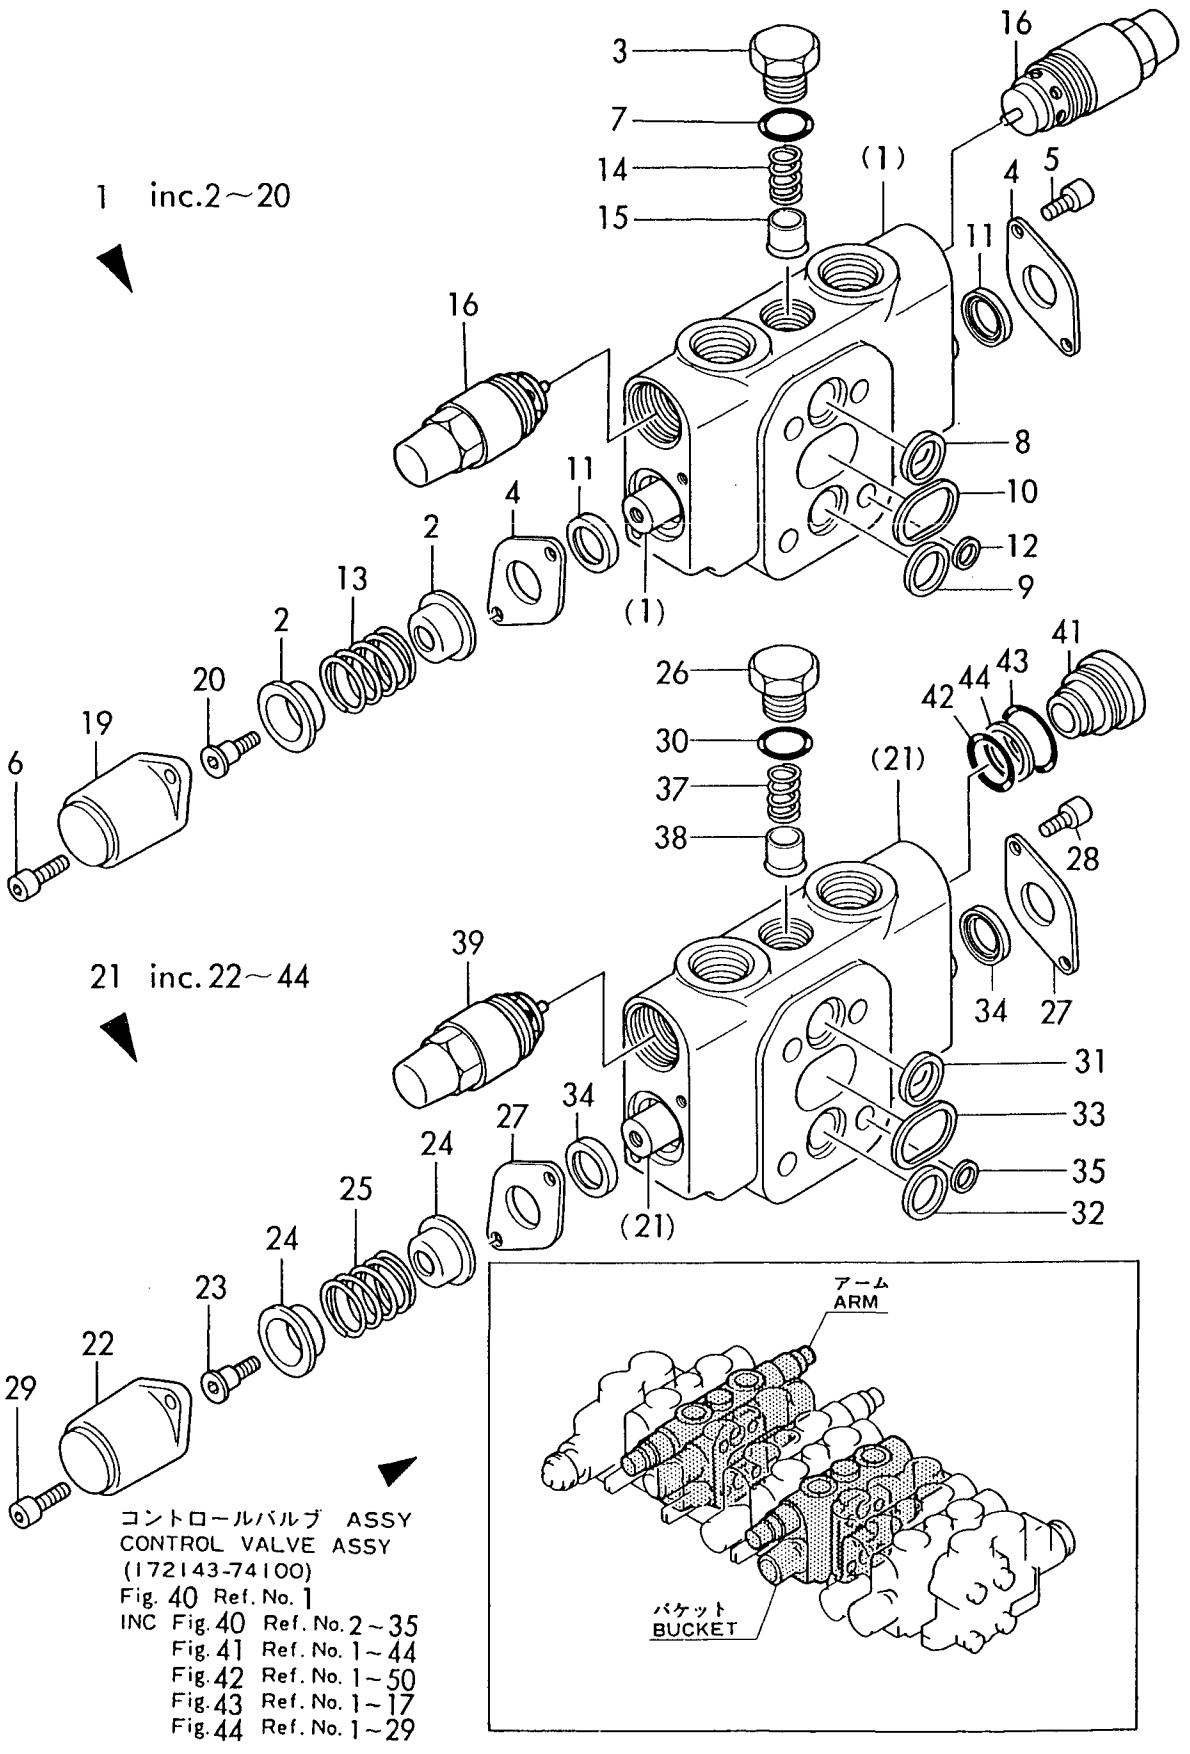


コントロールバルブ ASSY
CONTROL VALVE ASSY
(172143-74100)
Fig. 40 Ref. No. 1
INC Fig. 40 Ref. No. 2～35
Fig. 41 Ref. No. 1～44
Fig. 42 Ref. No. 1～50
Fig. 43 Ref. No. 1～17
Fig. 44 Ref. No. 1～29

```
1,2,,172143-74180,,"BODY ASSY, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
2,3,,172141-74350,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
3,3,,172141-74360,,"SEAT, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
4,3,,172141-74370,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
5,3,,172141-74380,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
6,3,,172142-74310,,NIPPLE,1,1,1,1,1,1,,,,,,,,,,,,
7,3,,172141-74400,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
8,3,,172141-74410,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
9,3,,172141-74420,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
10,3,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
11,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
12,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
13,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
14,3,,172141-74470,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
15,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
16,3,,172141-74520,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
17,3,,172143-74200,,PLUNGER,1,1,1,1,1,1,,,,,,,,,,,,
20,3,,172141-74570,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
21,3,,172141-74580,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
22,3,,172141-74590,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
23,3,,172141-74600,,"RING, BACK UP",1,1,1,1,1,1,,,,,,,,,,,,
24,3,,172143-74210,,RETAINER,1,1,1,1,1,1,,,,,,,,,,,,
25,3,,172141-74620,,"VALVE,ANTI-CAVITATI.",1,1,1,1,1,1,,,,,,,,,,,,
26,3,,172143-74220,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
27,2,,172143-74250,,"BODY ASSY, VALVE",1,1,1,1,1,1,,,,,,,,,,,,
28,3,,172141-74350,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
29,3,,172141-74360,,"SEAT, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
30,3,,172141-74370,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
31,3,,172141-74390,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
32,3,,172141-74400,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
33,3,,172141-74410,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
34,3,,172141-74420,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
35,3,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
36,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
37,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
38,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
39,3,,172141-74470,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
40,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
42,3,,172141-74380,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
43,3,,172141-74520,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
44,3,,172141-74530,,PLANGER,1,1,1,1,1,1,,,,,,,,,,,,
45,3,,172141-74540,,"VALVE 190/22, RELIEF",1,1,1,1,1,1,,,,,,,,,,,,
47,3,,172141-74570,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
48,3,,172141-74580,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
49,3,,172141-74590,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
50,3,,172141-74600,,"RING, BACK UP",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 42 コントロールバルブ(スイング & ブーム)
# CONTROL VALVE (SWING & BOOM)

https://truckmanuals.ub.com/

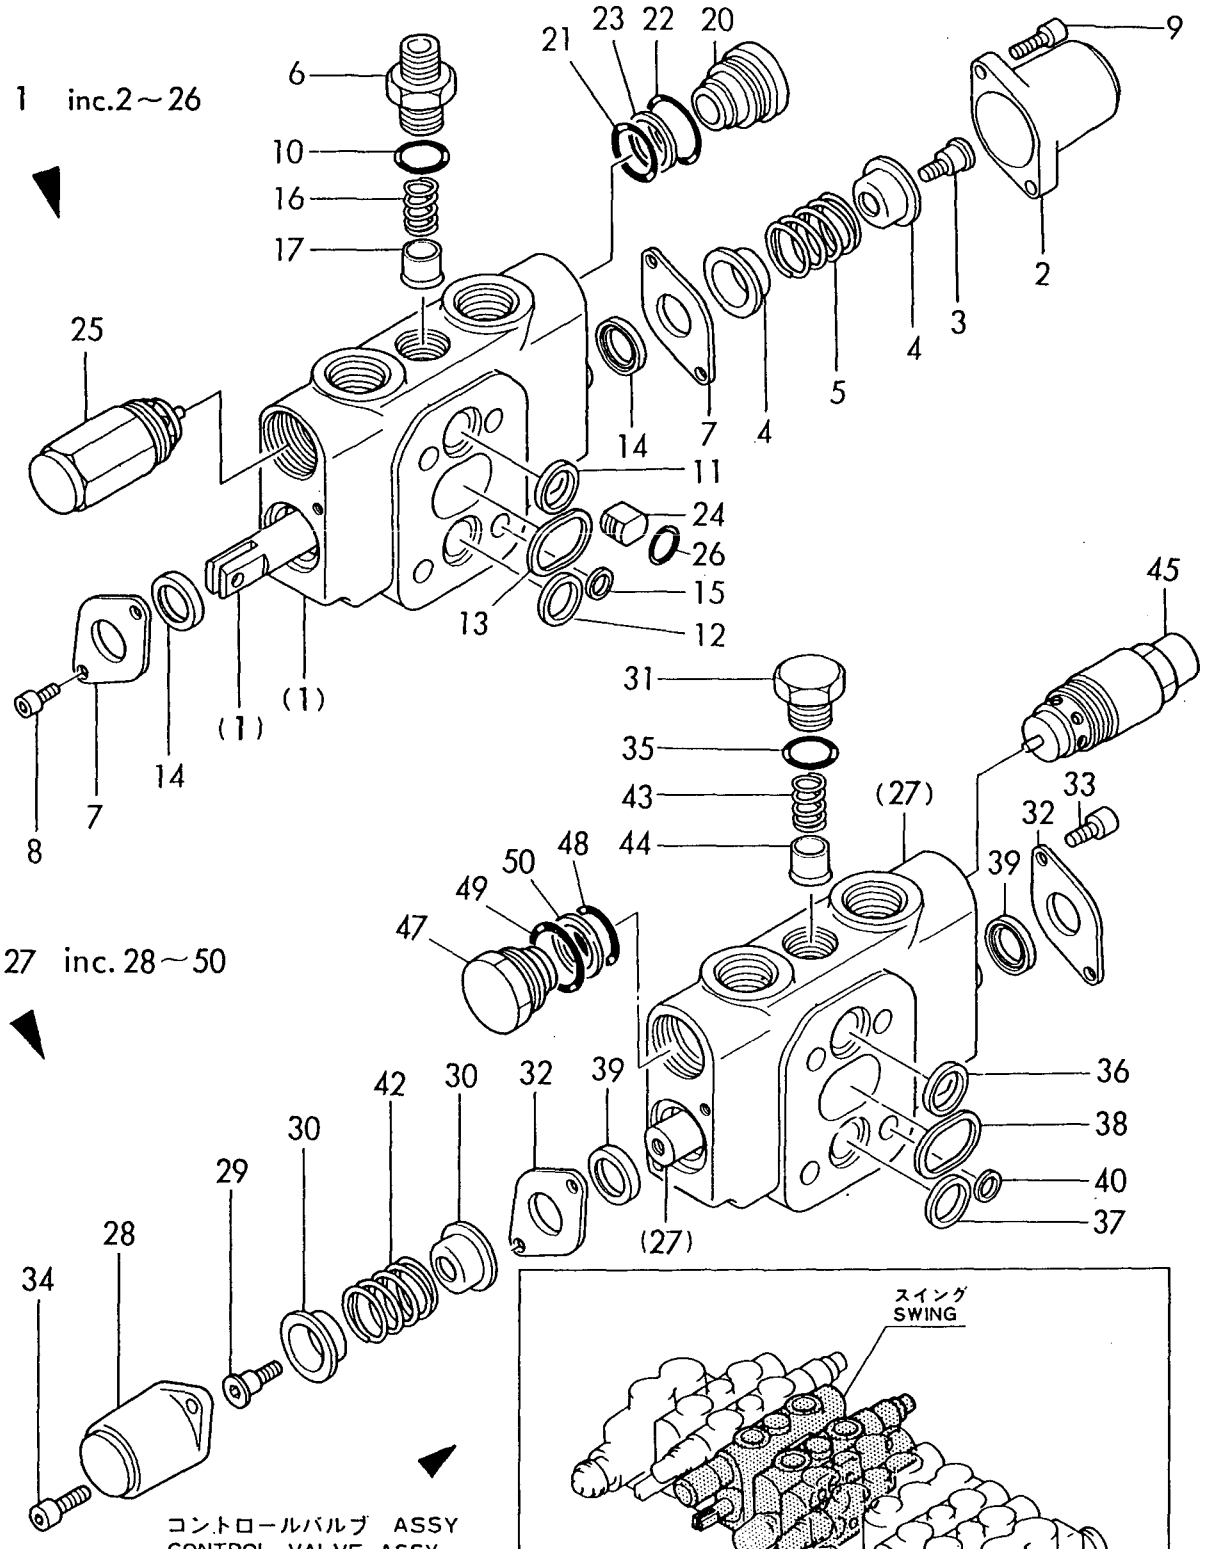


コントロールバルブ ASSY
CONTROL VALVE ASSY
(172143-74100)
Fig. 40 Ref. No. 1
INC Fig. 40 Ref. No. 2～35
Fig. 41 Ref. No. 1～44
Fig. 42 Ref. No. 1～50
Fig. 43 Ref. No. 1～17
Fig. 44 Ref. No. 1～29

```
1,2,,172141-74220,,"BODY ASSY",1,1,1,1,1,1,,,,,,,,,,,,
2,3,,172141-74350,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
3,3,,172141-74360,,"SEAT, SPRING",1,1,1,1,1,1,,,,,,,,,,,,
4,3,,172141-74370,,"SEAT, SPRING",2,2,2,2,2,2,,,,,,,,,,,,
5,3,,172141-74380,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
6,3,,172141-74390,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
7,3,,172141-74400,,PLATE,2,2,2,2,2,2,,,,,,,,,,,,
8,3,,172141-74410,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
9,3,,172141-74420,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
10,3,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
11,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
12,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
13,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
14,3,,172141-74470,,GASKET,2,2,2,2,2,2,,,,,,,,,,,,
15,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
16,3,,172141-74520,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
17,3,,172141-74530,,PLANGER,1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 43 コントロールバルブ(ブレード) CONTROL VALVE (BLADE)

https://truckmanualshub.com/

1 inc.2～17

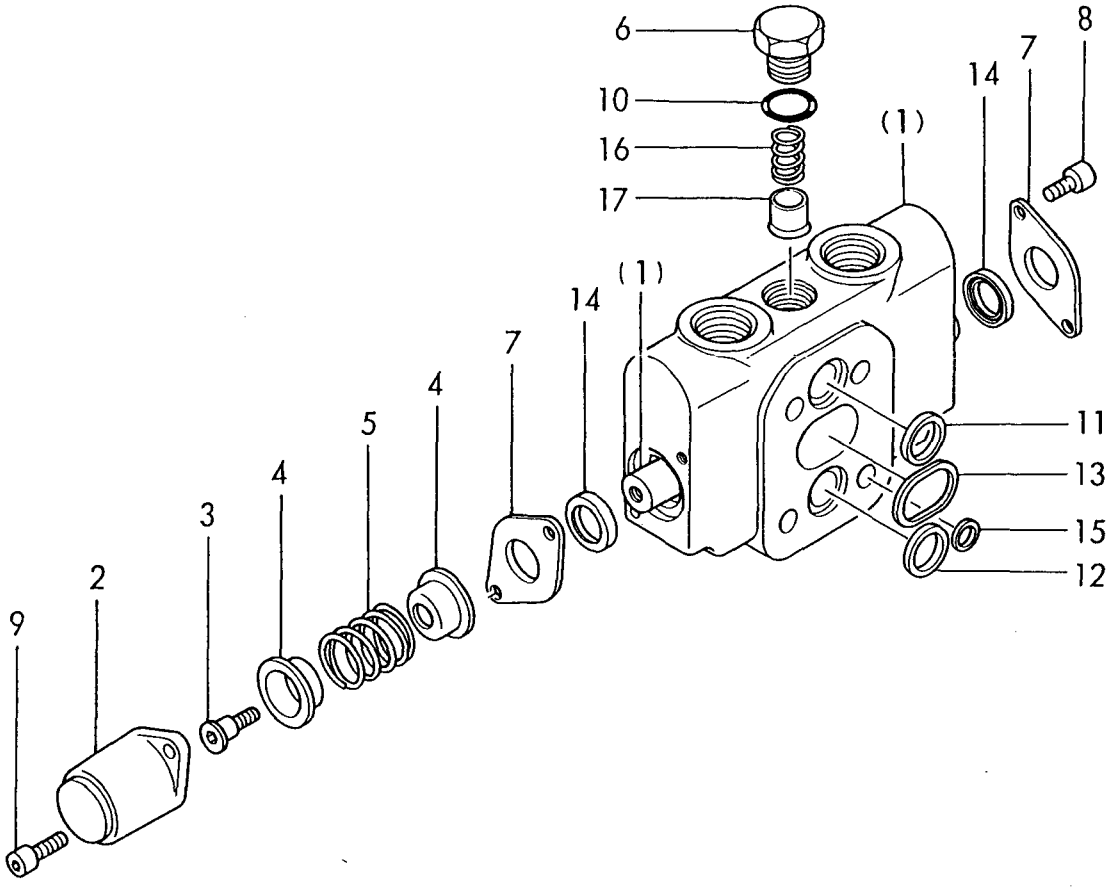


コントロールバルブ ASSY
CONTROL VALVE ASSY
(172143-74100)
Fig. 40 Ref. No. 1
INC Fig. 40 Ref. No. 2～35
Fig. 41 Ref. No. 1～44
Fig. 42 Ref. No. 1～50
Fig. 43 Ref. No. 1～17
Fig. 44 Ref. No. 1～29

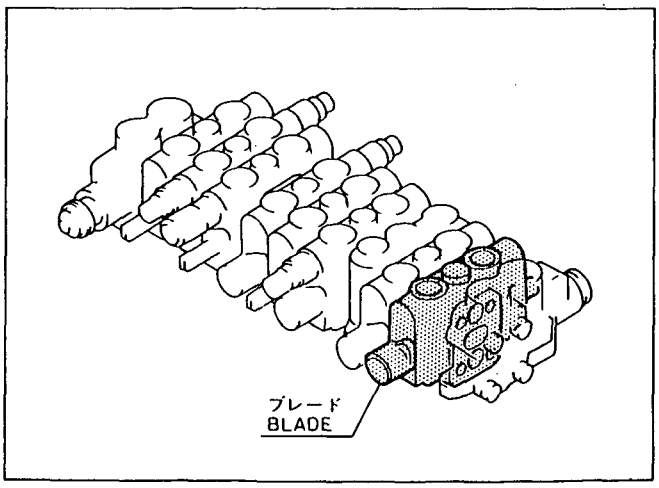

```
1,2,,172141-74230,,"COVER ASSY(PT)",1,1,1,1,1,1,,,,,,,,,,,,
2,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
3,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
4,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
5,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
7,3,,172141-74690,,"VALVE 175/22, RELIEF",1,1,1,1,1,1,,,,,,,,,,,,
8,3,,172141-74750,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
9,2,,172141-74240,,"COVER ASSY(PT)",1,1,1,1,1,1,,,,,,,,,,,,
10,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
11,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
12,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
13,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
15,3,,172141-74740,,"VALVE 160/22, RELIEF",1,1,1,1,1,1,,,,,,,,,,,,
16,3,,172141-74750,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
17,2,,172141-74260,,STUD,4,4,4,4,4,4,,,,,,,,,,,,
18,2,,172141-74270,,"NUT, LOCK",8,8,8,8,8,8,,,,,,,,,,,,
19,2,,172141-74280,,"SPRING WASHER",8,8,8,8,8,8,,,,,,,,,,,,
20,2,,172141-74290,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
21,2,,172143-74400,,"COVER ASSY(PL)",1,1,,,1,1,,,,,,,,,,,,
22,3,,172141-74440,,RING,1,1,1,1,1,1,,,,,,,,,,,,
23,3,,172141-74450,,RING,1,1,1,1,1,1,,,,,,,,,,,,
24,3,,172141-74460,,RING,1,1,1,1,1,1,,,,,,,,,,,,
25,3,,172141-74480,,SHIM,4,4,4,4,4,4,,,,,,,,,,,,
26,3,,172141-74690,,"VALVE 175/22, RELIEF",1,1,1,1,1,1,,,,,,,,,,,,
27,3,,172141-74750,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
29,3,,172141-74720,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
30,1,,26013-100202,,"BOLT W/WASHER M10X20",2,2,2,2,2,2,,,,,,,,,,,,
31,1,,26013-100302,,"BOLT M10X 30",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 44 コントロールバルブ(P1、P2、P3)
# CONTROL VALVE (P1、P2、P3)

https://tractormanuals.com/

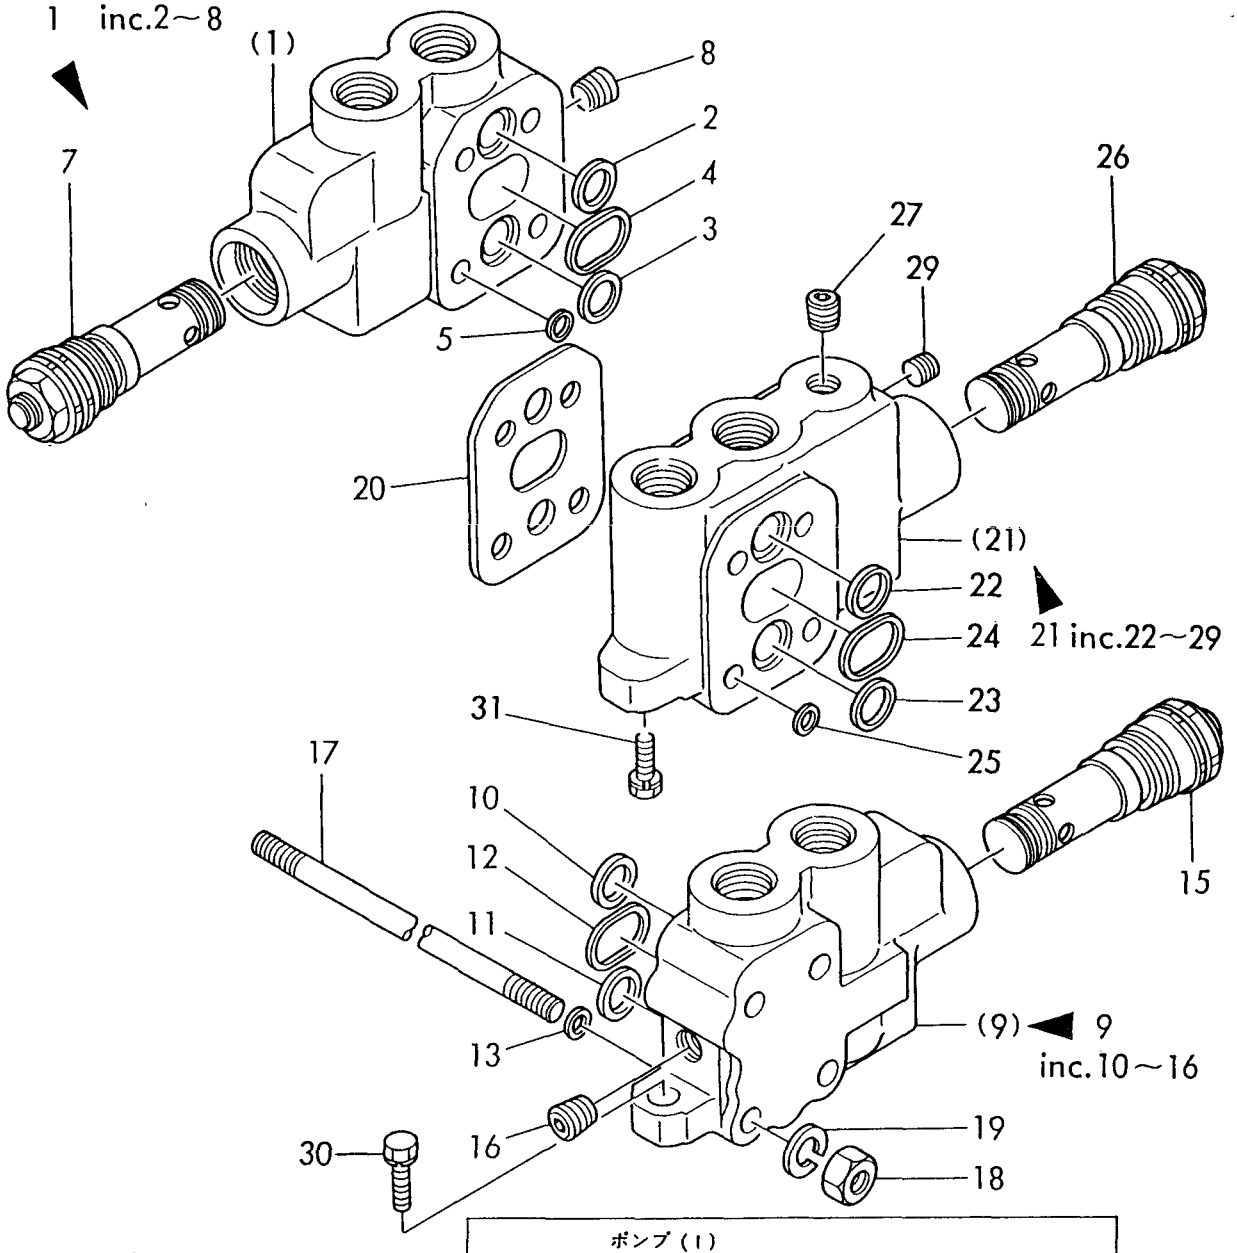


コントロールバルブ ASSY
CONTROL VALVE ASSY
(172143-74100)
Fig. 40 Ref. No. 1
INC Fig. 40 Ref. No. 2～35
Fig. 41 Ref. No. 1～44
Fig. 42 Ref. No. 1～50
Fig. 43 Ref. No. 1～17
Fig. 44 Ref. No. 1～29

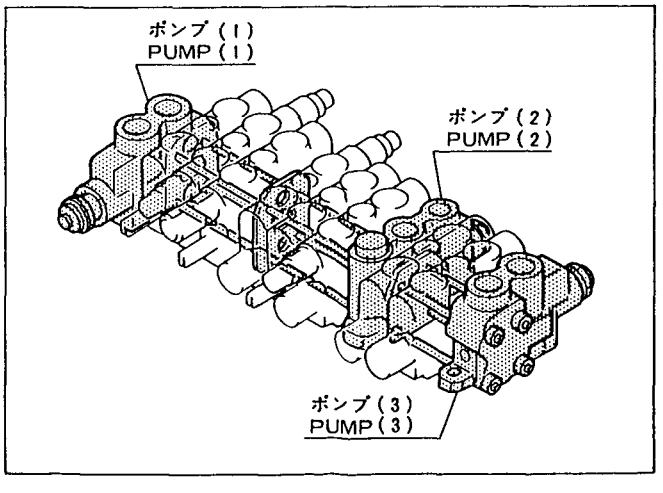

1,1,,772141-75100,,"RESERVER ASSY",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172137-73700,,"FILTER, SUCTION",1,1,1,1,1,1,,,,,,,,,,,,
3,2,,172141-73710,,"ROD, STRAINER",1,1,1,1,1,1,,,,,,,,,,,,
4,2,,172141-73750,,"FILTER ASSY, RETURN",1,1,1,1,1,1,,,,,,,,,,,,
5,3,,172141-73760,,ELEMENT,1,1,1,1,1,1,,,,,,,,,,,,
6,3,,172141-73770,,"VALVE ASSY, BYPASS",1,1,1,1,1,1,,,,,,,,,,,,
7,2,,172112-75780,,"SPRING, STRAINER",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,26716-100002,,"NUT M10",1,1,1,1,1,1,,,,,,,,,,,,
9,2,,933152-02710,,"SPRING, SIDE CLUTCH",1,1,1,1,1,1,,,,,,,,,,,,
11,2,,172141-75400,,"COVER, EXIT",1,1,1,1,1,1,,,,,,,,,,,,
12,2,,172141-75430,,"COVER, INTAKE",1,1,1,1,1,1,,,,,,,,,,,,
13,2,,172122-75600,,"GAUGE, OIL LEVEL",1,1,1,1,1,1,,,,,,,,,,,,
14,2,,172122-75620,,BOLT,2,2,2,2,2,2,,,,,,,,,,,,
15,2,,172122-75630,,GASKET,4,4,4,4,4,4,,,,,,,,,,,,
16,2,,172116-75850,,"PLUG, OIL FEED",1,1,1,1,1,1,,,,,,,,,,,,
17,2,,22134-240000,,"WASHER 24",1,1,1,1,1,1,,,,,,,,,,,,
18,2,,22417-200160,,"COTTER PIN 2.0X16",1,1,1,1,1,1,,,,,,,,,,,,
19,2,,24311-000380,,"O-RING 1A P-38.0",1,1,1,1,1,1,,,,,,,,,,,,
20,2,,24321-001050,,"O-RING 1A G-105.0",2,2,2,2,2,2,,,,,,,,,,,,
21,2,,26013-080202,,"BOLT W/WASHER M8X20",6,6,6,6,6,6,,,,,,,,,,,,
22,2,,933171-23042,,MAGNET,1,1,1,1,1,1,,,,,,,,,,,,
23,2,,933171-23062,,"PLUG 24, DRAIN",1,1,1,1,1,1,,,,,,,,,,,,
24,1,,26013-120302,,"BOLT W/WASHER M12X30",4,4,4,4,4,4,,,,,,,,,,,,
25,1,,933152-03700,,"WASHER, SIDE CLUTCH",4,4,4,4,4,4,,,,,,,,,,,,
26,1,,933169-22940,,"SPACER, RESERVOIR",1,1,1,1,1,1,,,,,,,,,,,,

# Fig. 45 サドウユタンク HYD. OIL TANK

https://truckmanualshub.com/

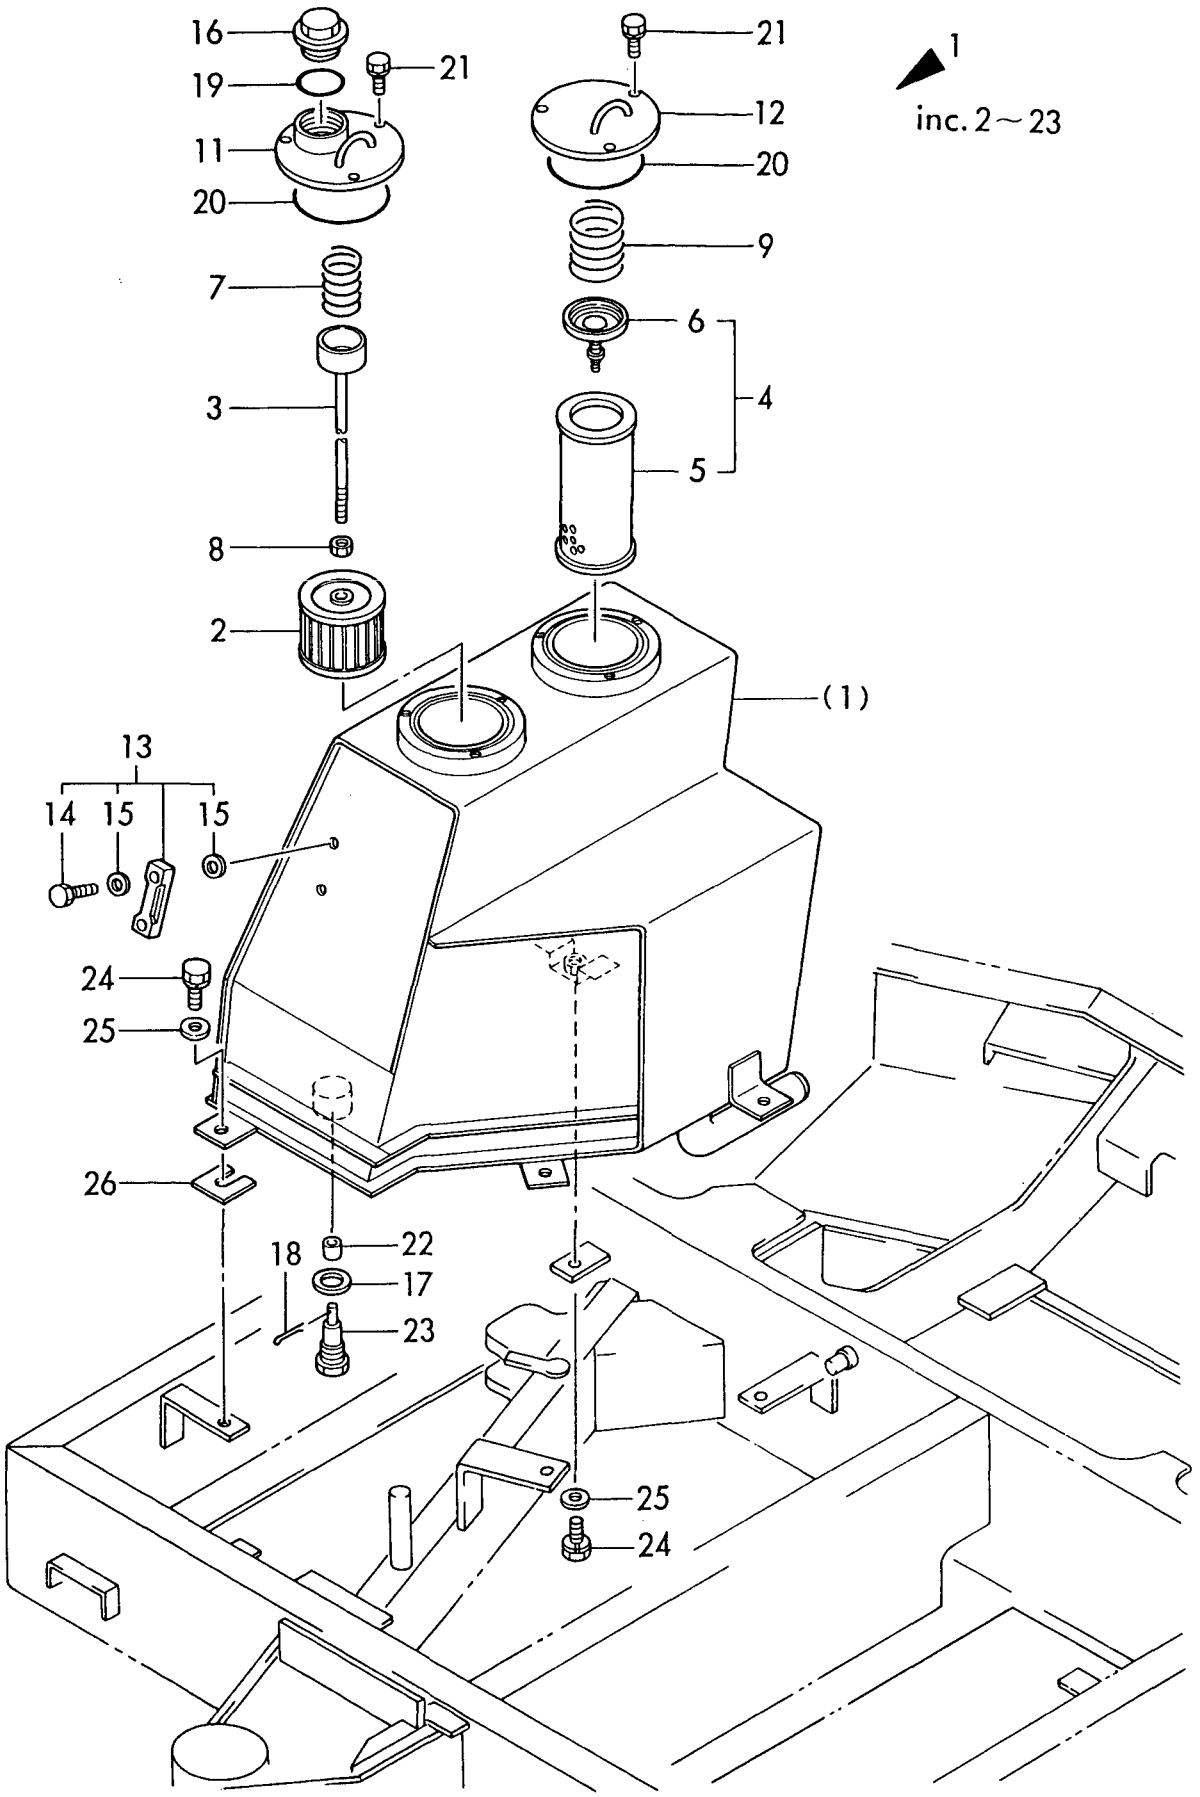

```
1,1,,172112-77580,,"JOINT 1/8",2,2,2,2,2,2,,,,,,,,,,,,
2,1,,172141-77800,,"JOINT, GREASE",4,4,4,4,4,4,,,,,,,,,,,,
3,1,,172141-77811,,"HOSE, GREASE",2,2,2,2,2,2,,,,,,,,,,,,
4,1,,172312-77820,,"FITTING, GREASE",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172135-78110,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
6,1,,24761-020000,,"NIPPLE PT1/8,GREASE",3,3,3,3,3,3,,,,,,,,,,,,
```

# Fig. 46 エンカクキュウシ GREASING

https://truckmanualshub.com/

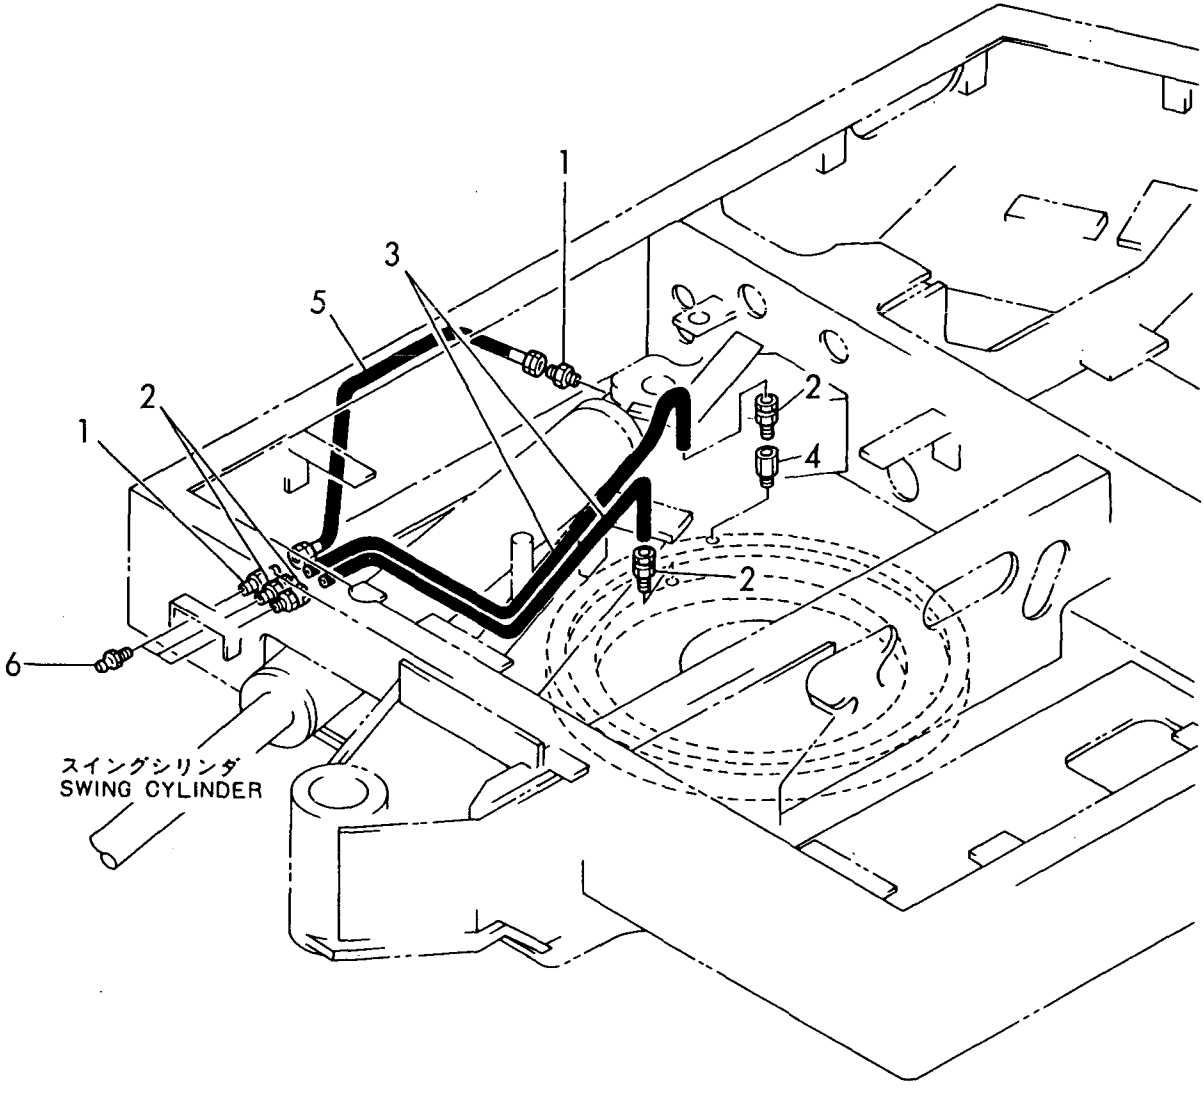

1,1,,172730-75140,,ADAPTOR,3,3,3,3,3,3,,,,,,,,,,,,
2,1,,172142-76100,,CONNECTOR,3,3,3,3,3,3,,,,,,,,,,,,
3,1,,172141-76110,,CONNECTOR,2,2,2,2,2,2,,,,,,,,,,,,
4,2,,933152-07400,,"O-RING (A)",2,2,2,2,2,2,,,,,,,,,,,,
5,1,,172141-76130,,CONNECTOR,1,1,1,1,1,1,,,,,,,,,,,,
6,2,,933152-07400,,"O-RING (A)",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-76260,,"CONNECTOR 12-14",1,1,1,1,1,1,,,,,,,,,,,,
8,2,,933160-03570,,"O-RING (B)",1,1,1,1,1,1,,,,,,,,,,,,
9,1,,23871-020000,,"PLUG PT1/4,SCREW",3,3,3,3,3,3,,,,,,,,,,,,
10,1,,24315-000140,,"O-RING 1B P-14.0",3,3,3,3,3,3,,,,,,,,,,,,
11,1,,24315-000240,,"O-RING 1B P-24.0",3,3,3,3,3,3,,,,,,,,,,,,
12,1,,933152-24410,,"CONNECTOR (A)",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,172141-76400,,"PIPE, INTAKE",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,172141-76440,,"JOINT, RETURN(A)",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,172141-76470,,"JOINT, RETURN(B)",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,172141-76490,,"JOINT, RETURN(C)",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,23871-060000,,"PLUG PT3/4,SCREW",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,172141-78090,,"HOSE(B), INTAKE",3,3,3,3,3,3,,,,,,,,,,,,
19,1,,172141-78100,,"HOSE(A), INTAKE",1,1,1,1,1,1,,,,,,,,,,,,
20,1,,172141-78120,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172141-78131,,"HOSE(A), RETURN",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172141-78200,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
23,2,,172141-78220,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
24,1,,172141-78230,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
25,2,,172141-78250,,"TUBE, SPIRAL",2,2,2,2,2,2,,,,,,,,,,,,
26,1,,172141-78510,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
27,1,,23000-035000,,"CLAMP 35",13,13,13,13,13,13,,,,,,,,,,,,
28,1,,23000-048000,,"CLAMP 48",8,8,8,8,8,8,,,,,,,,,,,,
29,1,,26013-100202,,"BOLT W/WASHER M10X20",4,4,4,4,4,4,,,,,,,,,,,,
30,1,,933171-15680,,"GROMMET 40X13",3,3,3,3,3,3,,,,,,,,,,,,

# Fig. 47 ユアツハイカン（タンクーバルブ）
# HYD. OIL PIPING ( TANK－VALVE )

https://truckmanualshub.com/

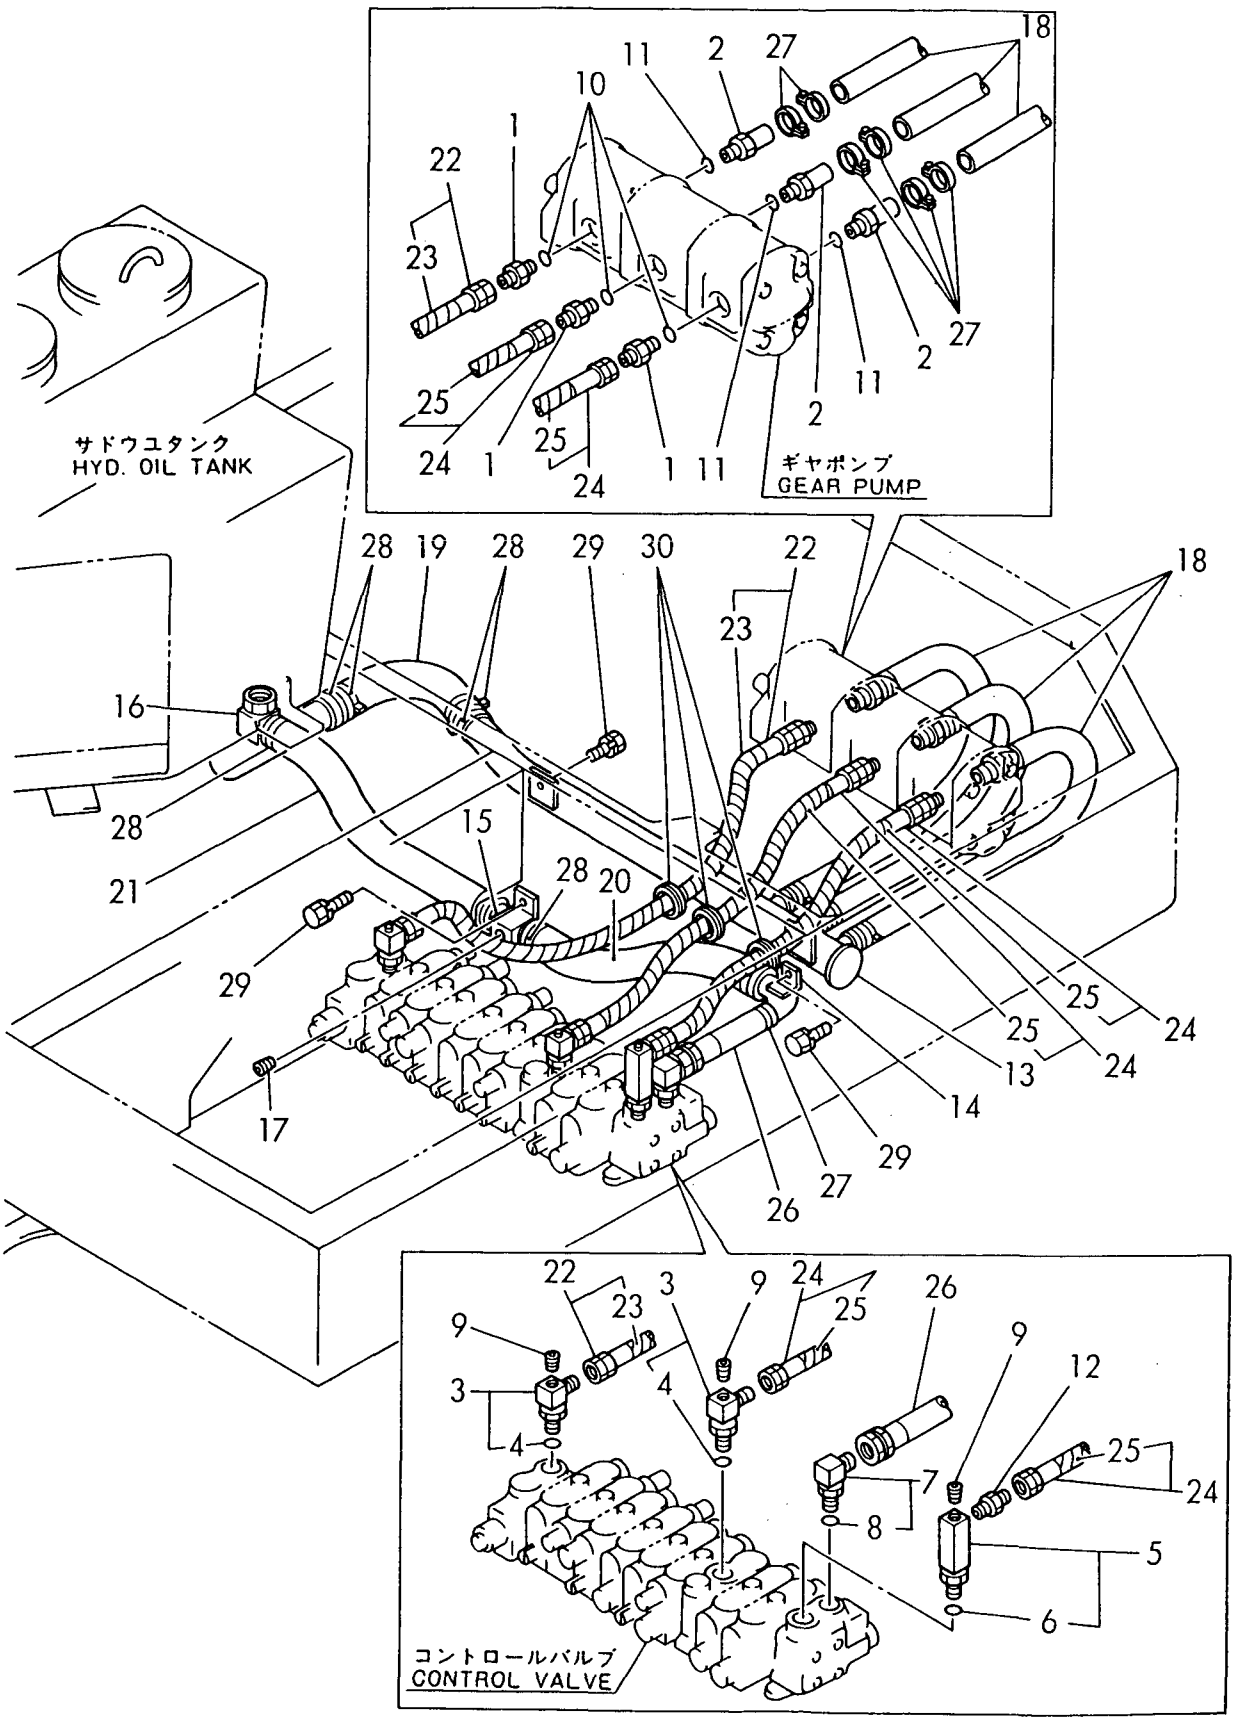

1,1,,172124-76150,,"NIPPLE 3/4U-PF1/4",2,2,2,2,2,2,,,,,,,,,,,,
2,1,,172110-76440,,ELBOW,1,1,1,1,,,,,,,,,,,,,
2-1,1,,23393-020000,,"JOINT
90RGI1/4",1,1,1,1,1,1,R,,72142283,M11082,72142283,M11082,72142283,M11082,7214228
3,M11082,,,,,I
3,1,,172141-76200,,CONNECTOR,1,1,1,1,1,1,,,,,,,,,,,,
4,2,,24315-000110,,"O-RING 1B P-11.0",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172141-76220,,NIPPLE,2,2,2,2,2,2,,,,,,,,,,,,
6,1,,172110-76440,,ELBOW,2,2,2,2,,,,,,,,,,,,,,
6-1,1,,23393-020000,,"JOINT
90RGI1/4",2,2,2,2,2,2,R,,72142283,M11082,72142283,M11082,72142283,M11082,7214228
3,M11082,,,,,I
7,1,,933152-22771,,"ELBOW (90ß)",4,4,4,4,,,,,,,,,,,,,,
7-1,1,,23393-020000,,"JOINT
90RGI1/4",4,4,4,4,4,4,R,,72142283,M11082,72142283,M11082,72142283,M11082,7214228
3,M11082,,,,,I
8,1,,933152-24120,,"O-RING (B)",2,2,2,2,2,2,,,,,,,,,,,,
9,1,,933152-24120,,"O-RING (B)",2,2,2,2,2,2,,,,,,,,,,,,
10,1,,933152-24120,,"O-RING (B)",2,2,2,2,2,2,,,,,,,,,,,,
11,1,,933152-24410,,"CONNECTOR (A)",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,933155-08481,,"CONNECTOR (A)",2,2,2,2,2,2,,,,,,,,,,,,
13,1,,933169-24091,,CONNECTOR,2,2,2,2,2,2,,,,,,,,,,,,
14,2,,933152-24120,,"O-RING (B)",2,2,2,2,2,2,,,,,,,,,,,,
15,1,,933169-24281,,CONNECTOR,1,1,1,1,1,1,,,,,,,,,,,,
16,2,,933152-07400,,"O-RING (A)",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,933171-24520,,"CONNECTOR 3/8-78",2,2,2,2,2,2,,,,,,,,,,,,
18,1,,172141-78040,,"BUSH 10140",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,172141-78110,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
20,1,,172141-78190,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172141-78260,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
22,1,,172141-78330,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
23,2,,172141-78820,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
24,1,,172141-78340,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
25,1,,172141-78350,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
26,2,,172141-78840,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
27,1,,172141-78360,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
28,1,,172141-78500,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
29,2,,172141-78900,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
30,1,,172141-78530,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
31,1,,23010-014000,,"CLAMP 14",2,2,2,2,2,2,,,,,,,,,,,,

# Fig. 48 ユアツハイカン(バルブースイベル、モータ)
# HYD. OIL PIPING(VALVE-SWIVEL、MOTOR)

https://truckmanualshub.com/

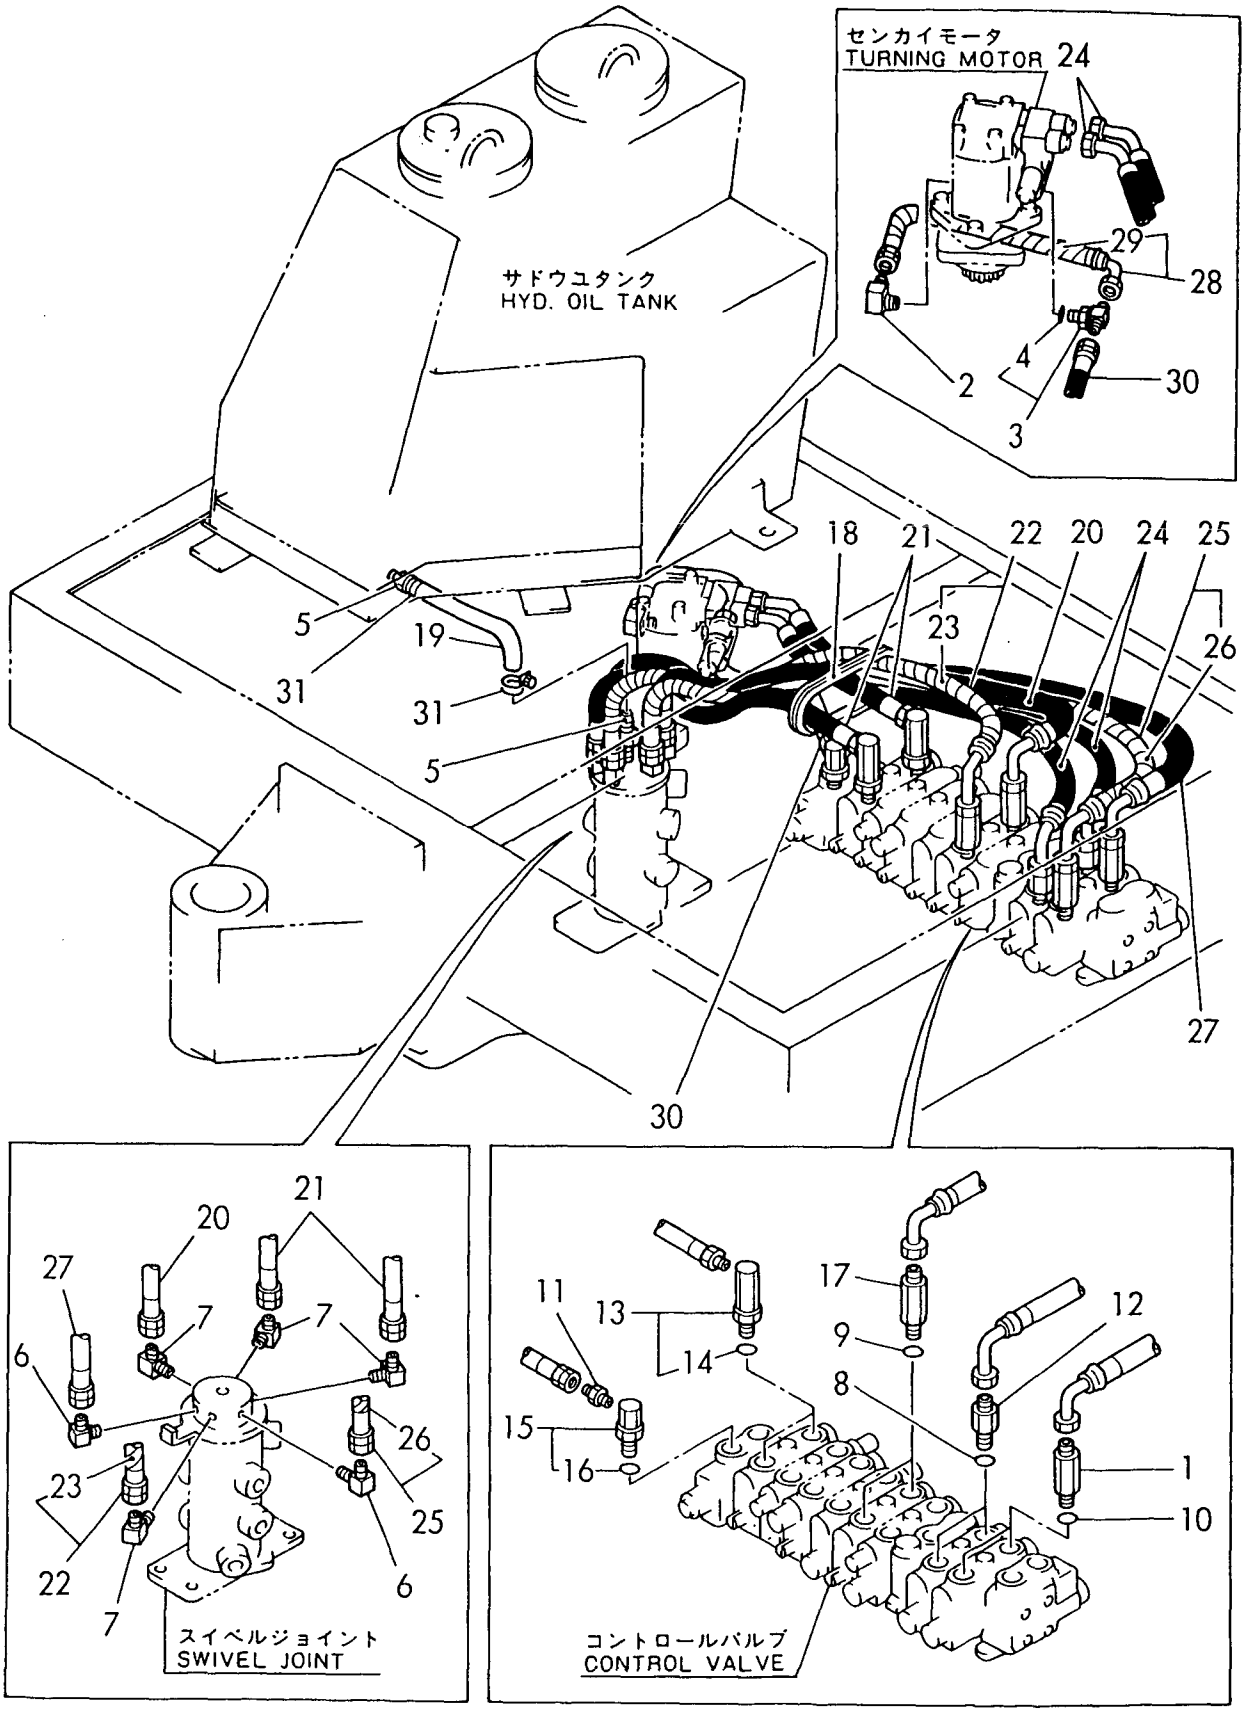

1,1,,172730-75140,,ADAPTOR,4,4,4,4,4,4,,,,,,,,,,,,
2,1,,172141-76230,,JOINT,2,2,2,2,2,2,,,,,,,,,,,,
3,1,,23391-020000,,"JOINT RGI1/4",4,4,4,4,4,4,,,,,,,,,,,,
4,1,,23391-020000,,"JOINT RGI1/4",2,2,2,2,2,2,,,,,,,,,,,,
5,1,,24315-000140,,"O-RING 1B P-14.0",4,4,4,4,4,4,,,,,,,,,,,,
6,1,,933152-22761,,"ELBOW (45ß)",2,2,2,2,,,,,,,,,,,,,,
6-1,1,,23393-020000,,"JOINT
90RGI1/4",2,2,2,2,2,2,R,,72142283,M11082,72142283,M11082,72142283,M11082,7214228
3,M11082,,,,,I
7,1,,933152-24410,,"CONNECTOR (A)",2,2,2,2,2,2,,,,,,,,,,,,
8,1,,172141-78450,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
9,1,,172141-78460,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
10,1,,172141-78470,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
11,1,,172141-78480,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
12,1,,172141-78490,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,

# Fig. 49 ユアツハイカン(ソウコウ) HYD. OIL PIPING(TRAVEL)

https://truckmanualshub.com/

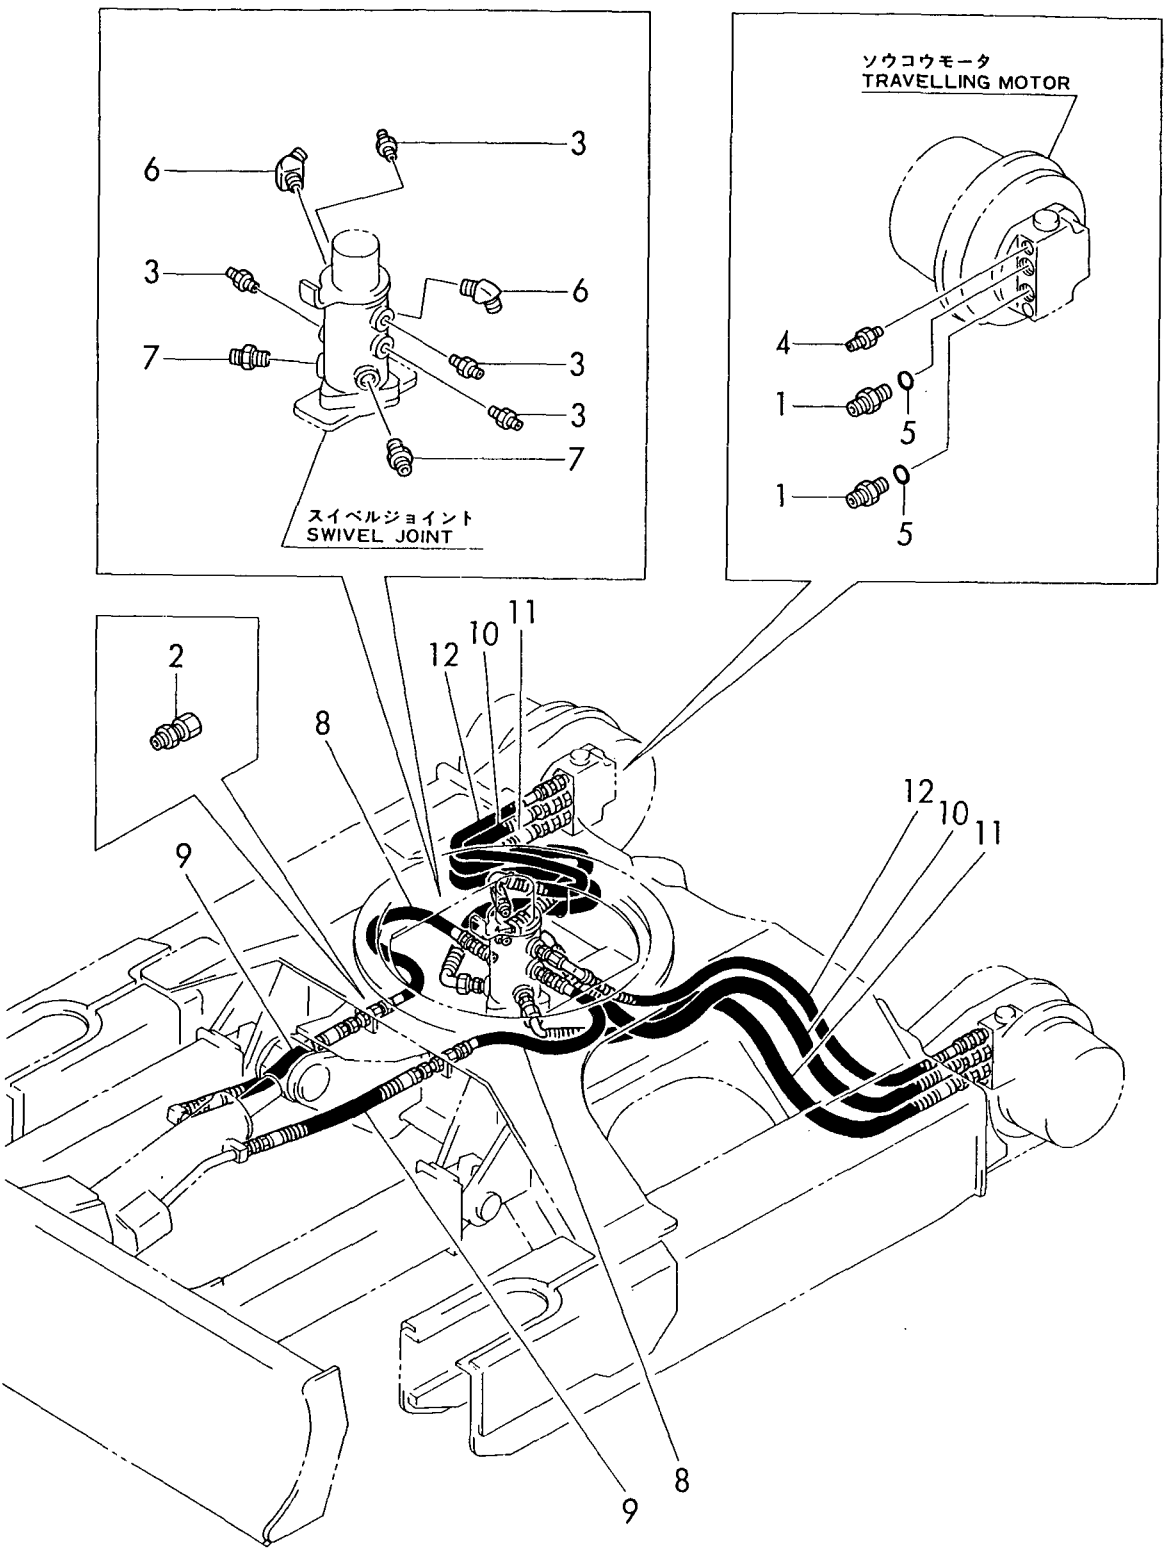

1,1,,172141-76990,,"BUSH 38-55, PIN",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172312-76220,,"CONNECTOR 1/4-3/4UN",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,933152-24062,,"CONNECTOR (C)",4,4,4,4,4,4,,,,,,,,,,,,
4,2,,933152-24120,,"O-RING (B)",4,4,4,4,4,4,,,,,,,,,,,,
5,1,,933152-24120,,"O-RING (B)",1,1,1,1,1,1,,,,,,,,,,,,
6,1,,933152-24410,,"CONNECTOR (A)",6,6,6,6,6,6,,,,,,,,,,,,
7,1,,933169-24091,,CONNECTOR,3,3,3,3,3,3,,,,,,,,,,,,
8,2,,933152-24120,,"O-RING (B)",3,3,3,3,3,3,,,,,,,,,,,,
9,1,,172141-76501,,"JOINT, BOOM",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,172141-76530,,"PIPE, ARM(L)",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,172141-76570,,"PIPE, ARM(R)",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172141-76600,,"PIPE, BUCKET(L)",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,172141-76630,,"PIPE, BUCKET(R)",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,172141-76670,,"CLAMP, PIPE(A)",5,5,5,5,5,5,,,,,,,,,,,,
15,1,,172141-76680,,"CLAMP, PIPE(B)",2,2,2,2,2,2,,,,,,,,,,,,
16,1,,22217-080000,,"SPRING WASHER  8",4,4,4,4,4,4,,,,,,,,,,,,
17,1,,26013-100202,,"BOLT W/WASHER M10X20",2,2,2,2,2,2,,,,,,,,,,,,
18,1,,26013-100352,,"BOLT M10X 35",5,5,5,5,5,5,,,,,,,,,,,,
19,1,,26716-080002,,"NUT M 8",4,4,4,4,4,4,,,,,,,,,,,,
20,1,,194250-51660,,"BAND  250",1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172141-78030,,"BUSH 10265",2,2,2,2,2,2,,,,,,,,,,,,
22,1,,172141-78060,,CLAMP,1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172141-78370,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
24,1,,172141-78380,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
25,1,,172141-78390,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
26,1,,172141-78400,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
27,1,,172141-78410,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
28,1,,172141-78420,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
29,1,,172141-78430,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
30,1,,172141-78440,,HOSE,2,2,2,2,2,2,,,,,,,,,,,,
31,1,,172141-78720,,SUPPORT,1,1,1,1,1,1,,,,,,,,,,,,
32,1,,172141-78750,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
33,1,,172141-78760,,STAY,1,1,1,1,1,1,,,,,,,,,,,,
34,1,,172141-78790,,RUMMER,1,1,1,1,1,1,,,,,,,,,,,,
35,1,,172141-78690,,RUBBER,1,1,1,1,1,1,,,,,,,,,,,,
36,1,,26116-060162,,"BOLT M 6X 16 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
37,1,,26116-100202,,"BOLT M10X 20 PLATED",4,4,4,4,4,4,,,,,,,,,,,,
38,1,,29321-405065,,"GROMMET 40X5.0",1,1,1,1,1,1,,,,,,,,,,,,
39,1,,172142-78760,,"COVER 16-650, HOSE",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,172143-79800,,"COVER, HOSE",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,172122-79880,,COVER,7,7,7,7,7,7,,,,,,,,,,,,
42,1,,172137-79970,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
43,1,,22217-060000,,"SPRING WASHER  6",2,2,2,2,2,2,,,,,,,,,,,,
44,1,,22217-100000,,"SPRING WASHER 10",4,4,4,4,4,4,,,,,,,,,,,,
45,1,,933168-56000,,"GROMMET 17X19",1,1,1,1,1,1,,,,,,,,,,,,
46,1,,23000-025000,,"CLAMP 25",20,20,20,20,20,20,,,,,,,,,,,,
47,1,,172732-76160,,ELBOW,1,1,1,1,1,1,,,,,,,,,,,,

# Fig. 50 ユアツハイカン（サギョウキブ） HYD. OIL PIPING (WORK EQUIPMENT)

https://truckmanualshub.com/

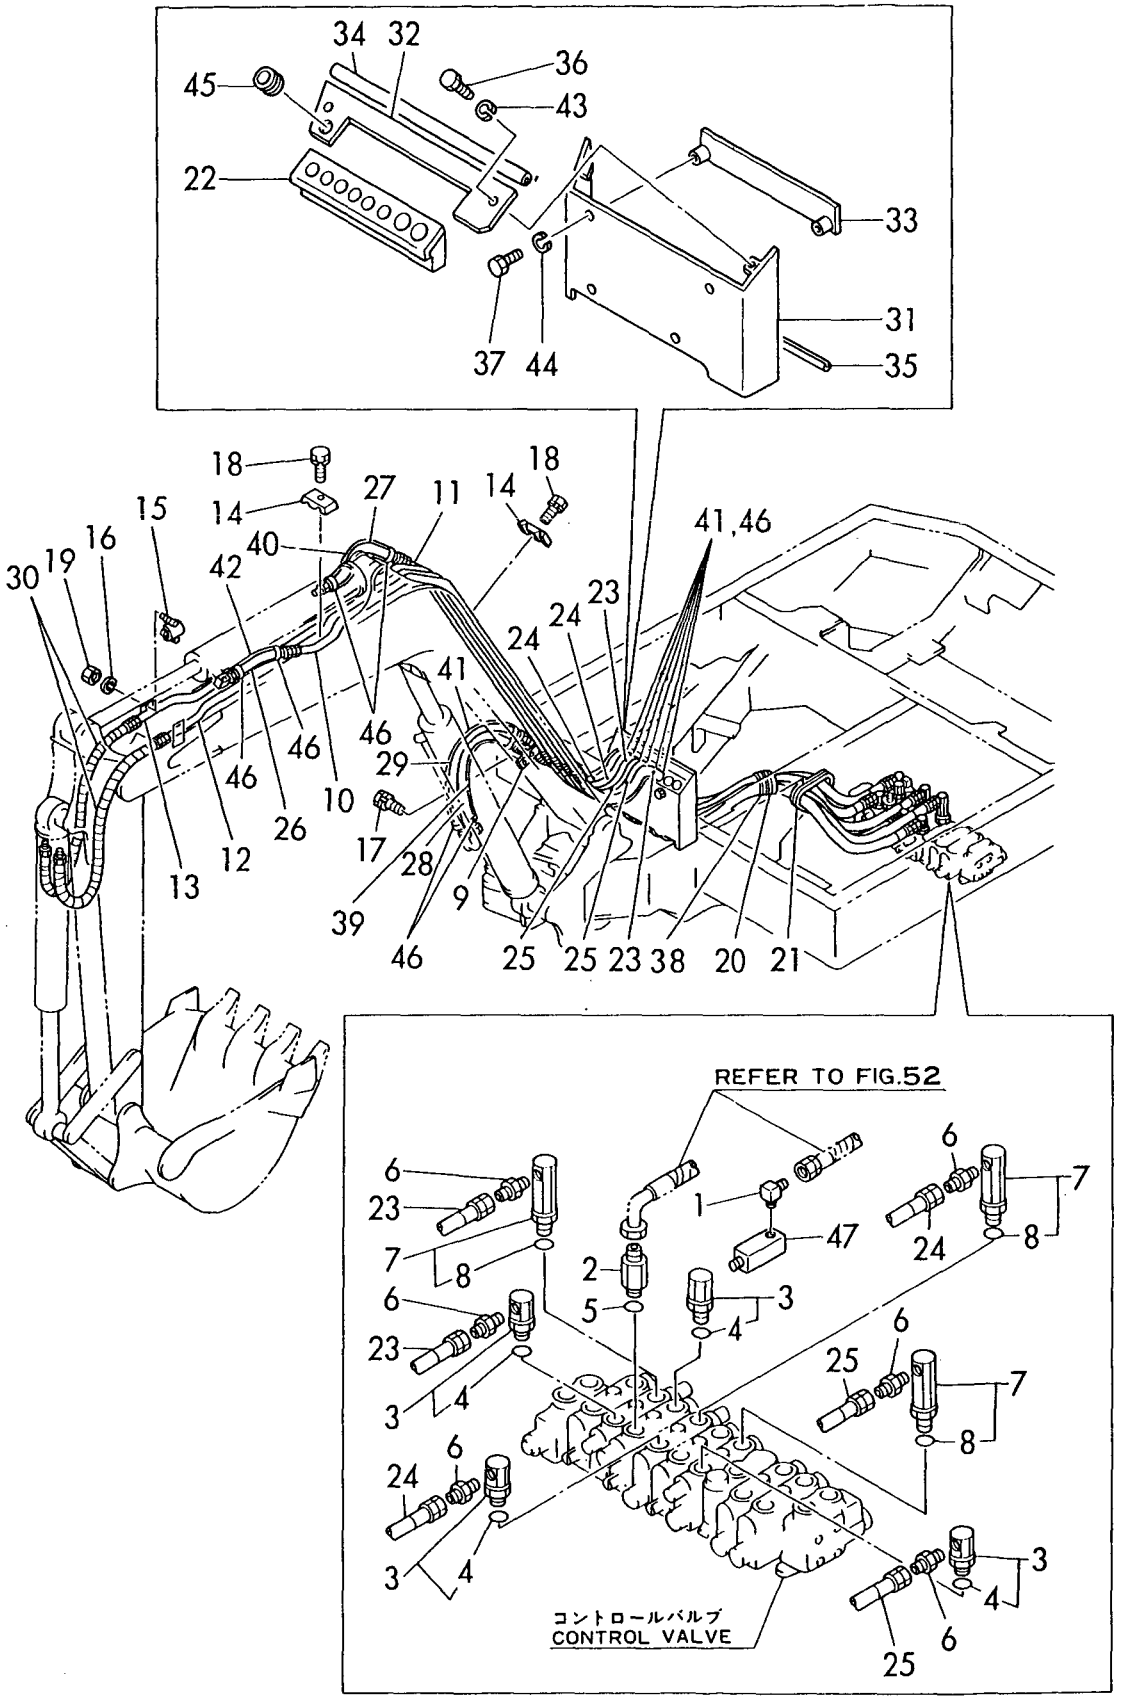

1,1,,172112-41960,,"PIN 8X25.5",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-42960,,"JOINT, CABLE",1,1,1,1,1,1,,,,,,,,,,,,
3,1,,172141-43150,,"HOOK, PEDAL",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-43160,,"BLACK, PEDAL LOCK",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172141-43200,,"BRACKET, CABLE",1,1,1,1,1,1,,,,,,,,,,,,
6,1,,172141-43210,,BRACKET,1,1,1,1,1,1,,,,,,,,,,,,
7,1,,172141-43220,,COLLAR,1,1,1,1,1,1,,,,,,,,,,,,
8,1,,172141-43230,,"LEVER, LOCK",1,1,1,1,1,1,,,,,,,,,,,,
9,1,,172116-45940,,"KNOB (C), LEVER",1,1,1,1,1,1,,,,,,,,,,,,
10,1,,1A1380-46061,,"SPRING,LEVER RETURN",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,172143-46100,,"LEVER, 3RDV",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172143-46120,,"CABLE, 3RDV",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,172143-46150,,"ARM, 3RDV",1,1,1,1,1,1,,,,,,,,,,,,
14,1,,172122-46590,,"ELBALL 8",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,172116-46910,,"JOINT, SPOOL",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,1C6281-52310,,"PIN 6,COME-OFF SNAP",1,1,1,1,1,1,,,,,,,,,,,,
18,1,,22137-080000,,"WASHER 8, POLISHED",1,1,1,1,1,1,,,,,,,,,,,,
19,1,,22217-080000,,"SPRING WASHER  8",1,1,1,1,1,1,,,,,,,,,,,,
20,1,,22217-100000,,"SPRING WASHER 10",2,2,2,2,2,2,,,,,,,,,,,,
21,1,,22217-100000,,"SPRING WASHER 10",3,3,3,3,3,3,,,,,,,,,,,,
22,1,,22351-050032,,"SPRING PIN 5X32",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,26013-100402,,"BOLT M10X 40",1,1,1,1,1,1,,,,,,,,,,,,
24,1,,26116-100202,,"BOLT M10X 20 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
25,1,,26116-100202,,"BOLT M10X 20 PLATED",3,3,3,3,3,3,,,,,,,,,,,,
26,1,,26116-100302,,"BOLT M10X 30 PLATED",1,1,1,1,1,1,,,,,,,,,,,,
27,1,,26716-080002,,"NUT M 8",1,1,1,1,1,1,,,,,,,,,,,,
28,1,,26757-100002,,"LOCK NUT M10 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
29,1,,933110-54100,,"PIN 4.75X14",1,1,1,1,1,1,,,,,,,,,,,,
30,1,,22137-100000,,"WASHER 10,POLISHED",2,2,2,2,2,2,,,,,,,,,,,,
31,1,,172141-74700,,"VALVE ASSY, SELECTOR",1,1,1,1,1,1,,,,,,,,,,,,
32,2,,172141-74790,,"PLATE, ADAPTER",1,1,1,1,1,1,,,,,,,,,,,,
33,2,,172141-74820,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
34,2,,172141-74830,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
35,2,,172141-74840,,SPRING,1,1,1,1,1,1,,,,,,,,,,,,
36,2,,172141-74850,,"RETAINER, BALL",1,1,1,1,1,1,,,,,,,,,,,,
37,2,,172141-74860,,"SLEEVE, DETENT",1,1,1,1,1,1,,,,,,,,,,,,
38,2,,172141-74870,,"SEAL KIT",1,1,1,1,1,1,,,,,,,,,,,,
39,2,,172141-74890,,WASHER,1,1,1,1,1,1,,,,,,,,,,,,
40,2,,172141-74900,,GUIDE,1,1,1,1,1,1,,,,,,,,,,,,
41,2,,172141-74910,,SPACER,1,1,1,1,1,1,,,,,,,,,,,,
42,2,,172141-74920,,"VALVE, RELIEF",1,1,1,1,1,1,,,,,,,,,,,,
43,2,,172141-74930,,STUD,2,2,2,2,2,2,,,,,,,,,,,,
44,2,,172141-74950,,"PLUG 1/16",3,3,3,3,3,3,,,,,,,,,,,,
45,2,,24190-050002,,"BALL 5/32",2,2,2,2,2,2,,,,,,,,,,,,
46,2,,26450-060162,,"BOLT M 6X 16",1,1,1,1,1,1,,,,,,,,,,,,
47,2,,26450-060202,,"BOLT M 6X 20",7,7,7,7,7,7,,,,,,,,,,,,
48,2,,26557-080502,,"SCREW M 8X 50",1,1,1,1,1,1,,,,,,,,,,,,
49,1,,26013-080202,,"BOLT W/WASHER M8X20",4,4,4,4,4,4,,,,,,,,,,,,

# Fig. 51 サードバルブコントロール 3RD VALVE CONTROL

https://trucknmanualshub.com/

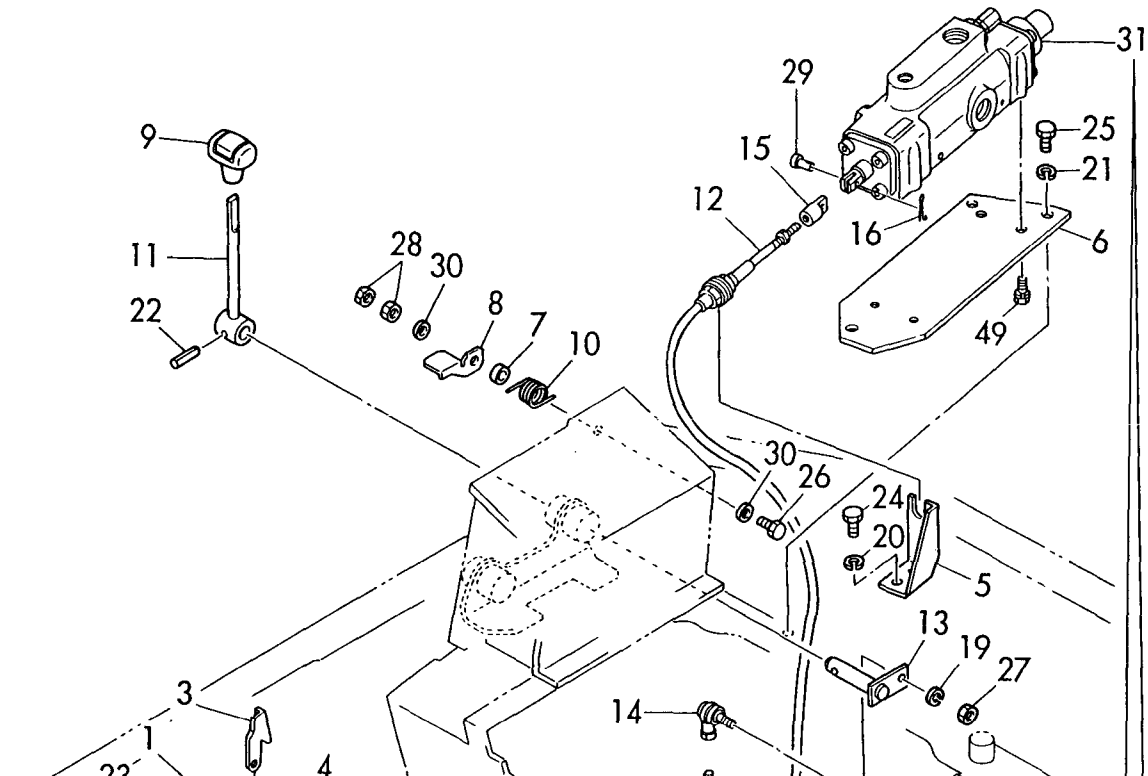

```
1,1,,172141-76090,,"CONNECTOR 3/4L",2,2,2,2,2,2,,,,,,,,,,,,
2,2,,24315-000240,,"O-RING 1B P-24.0",2,2,2,2,2,2,,,,,,,,,,,,
3,1,,172124-76160,,CONNECTOR,2,2,2,2,2,2,,,,,,,,,,,,
4,1,,933166-25360,,"ELBOW 3/4 (90ß)",1,1,1,1,1,1,,,,,,,,,,,,
5,1,,172141-76880,,"CONNECTOR 3/8L",2,2,2,2,2,2,,,,,,,,,,,,
6,2,,24315-000140,,"O-RING 1B P-14.0",2,2,2,2,2,2,,,,,,,,,,,,
7,1,,172141-76900,,"CONNECTOR 1/2L",2,2,2,2,2,2,,,,,,,,,,,,
8,2,,24315-000180,,"O-RING 1B P-18.0",2,2,2,2,2,2,,,,,,,,,,,,
9,1,,172141-76920,,"CONNECTOR 3/8-1/4L",1,1,1,1,1,1,,,,,,,,,,,,
10,2,,24315-000140,,"O-RING 1B P-14.0",1,1,1,1,1,1,,,,,,,,,,,,
11,1,,172143-76850,,"TUBE, 3RD",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,24315-000140,,"O-RING 1B P-14.0",2,2,2,2,2,2,,,,,,,,,,,,
13,1,,26013-100202,,"BOLT W/WASHER M10X20",2,2,2,2,,,,,,,,,,,,,,
13-1,1,,26013-100452,,"BOLT M10X
45",2,2,2,2,2,2,N,,72143010,M11082,72143010,M11082,72143010,M11082,72143010,M110
82,,,,I
14,1,,172141-76750,,"PIPE, 3RD V.(P)",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,172141-76800,,"PIPE, 3RD V.(T)",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,172141-76850,,"SPACER, CLAMP",3,3,3,3,3,3,,,,,,,,,,,,
17,1,,172125-76900,,CLAMP,3,3,3,3,3,3,,,,,,,,,,,,
18,1,,26013-120502,,"BOLT M12X 50",3,3,3,3,3,3,,,,,,,,,,,,
19,1,,172141-79100,,HOSE,1,1,1,1,,,,,,,,,,,,,,
19-1,1,,172143-
79100,,HOSE,1,1,1,1,1,1,N,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07
,72143019,*1990.07,,,,,I
20,2,,172141-79120,,"TUBE, SPIRAL",1,1,1,1,,,,,,,,,,,,,,
20-1,2,,172143-79120,,"TUBE,
SPIRAL",1,1,1,1,1,1,N,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07,721
43019,*1990.07,,,,,I
21,1,,172141-79130,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
22,2,,172141-79150,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
23,1,,172141-79160,,HOSE,1,1,1,1,,,,,,,,,,,,,,
23-1,1,,172143-
79130,,HOSE,1,1,1,1,1,1,N,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07
,72143019,*1990.07,,,,,I
24,2,,172141-79180,,"TUBE, SPIRAL",1,1,1,1,,,,,,,,,,,,,,
24-1,2,,172143-79150,,"TUBE,
SPIRAL",1,1,1,1,1,1,N,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07,721
43019,*1990.07,,,,,I
25,1,,172141-79190,,HOSE,1,1,1,1,,,,,,,,,,,,,,
25-1,1,,172143-
79160,,HOSE,1,1,1,1,1,1,N,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07
,72143019,*1990.07,,,,,I
26,2,,172141-79210,,"TUBE, SPIRAL",1,1,1,1,,,,,,,,,,,,,,
26-1,2,,172143-79180,,"TUBE,
SPIRAL",1,1,1,1,1,1,N,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07,721
43019,*1990.07,,,,,I
27,1,,172141-79220,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
28,2,,172141-79240,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
29,1,,172141-79250,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
30,2,,172141-79270,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
31,1,,172143-79280,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
32,2,,172143-79300,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
33,1,,172143-79310,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
34,2,,172143-79330,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
35,1,,172141-79340,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
36,2,,172141-79360,,"TUBE, SPIRAL",1,1,1,1,1,1,,,,,,,,,,,,
37,1,,172141-79370,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
38,1,,172141-79380,,HOSE,1,1,1,1,1,1,,,,,,,,,,,,
39,1,,933152-24410,,"CONNECTOR (A)",2,2,2,2,2,2,,,,,,,,,,,,
40,1,,23871-040000,,"PLUG PT1/2,SCREW",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,23871-060000,,"PLUG PT3/4,SCREW",1,1,1,1,1,1,,,,,,,,,,,,
42,1,,172142-74310,,NIPPLE,1,1,1,1,1,1,,,,,,,,,,,,
```

```
43,1,,172141-74430,,O-RING,1,1,1,1,1,1,,,,,,,,,,,,
44,1,,933160-03530,,"PORT, PUMP EXH.",1,1,1,1,1,1,,,,,,,,,,,,
45,1,,933152-07400,,"O-RING (A)",1,1,1,1,1,1,,,,,,,,,,,,
46,1,,172141-74750,,PLUG,1,1,1,1,1,1,,,,,,,,,,,,
47,1,,172142-78790,,"COVER 20-600, HOSE",1,1,1,1,1,1,,,,,,,,,,,,
48,1,,172137-79950,,COVER,1,1,1,1,1,1,,,,,,,,,,,,
49,1,,26013-100202,,"BOLT W/WASHER
M10X20",1,1,1,1,,,Z,,72143010,M11082,72143010,M11082,72143010,M11082,72143010,M1
1082,,,,,I
50,1,,23871-040000,,"PLUG PT1/2,SCREW",1,1,1,1,1,1,,,,,,,,,,,,
51,1,,23871-060000,,"PLUG PT3/4,SCREW",1,1,1,1,1,1,,,,,,,,,,,,
52,1,,23000-041000,,"CLAMP 41",2,2,2,2,2,2,,,,,,,,,,,,
53,1,,23000-025000,,"CLAMP 25",2,2,2,2,2,2,,,,,,,,,,,,
54,1,,933171-15680,,"GROMMET 40X13",2,2,2,2,2,2,,,,,,,,,,,,
55,1,,172143-76840,,"TUBE,
3RD",1,1,1,1,1,1,W,,72143010,M11082,72143010,M11082,72143010,M11082,72143010,M11
082,,,,,I
56,1,,172112-76300,,"RETAINER A,BOOM
PIPE",2,2,2,2,2,2,W,,72143010,M11082,72143010,M11082,72143010,M11082,72143010,M1
1082,,,,,I
57,1,,172143-79090,,"BUSH
10190",1,1,1,1,1,1,W,,72143019,*1990.07,72143019,*1990.07,72143019,*1990.07,7214
3019,*1990.07,,,,,I
```

# Fig. 52 サードバルブハイカン 3RD VALVE PIPING

https://truckmanualshub.com/

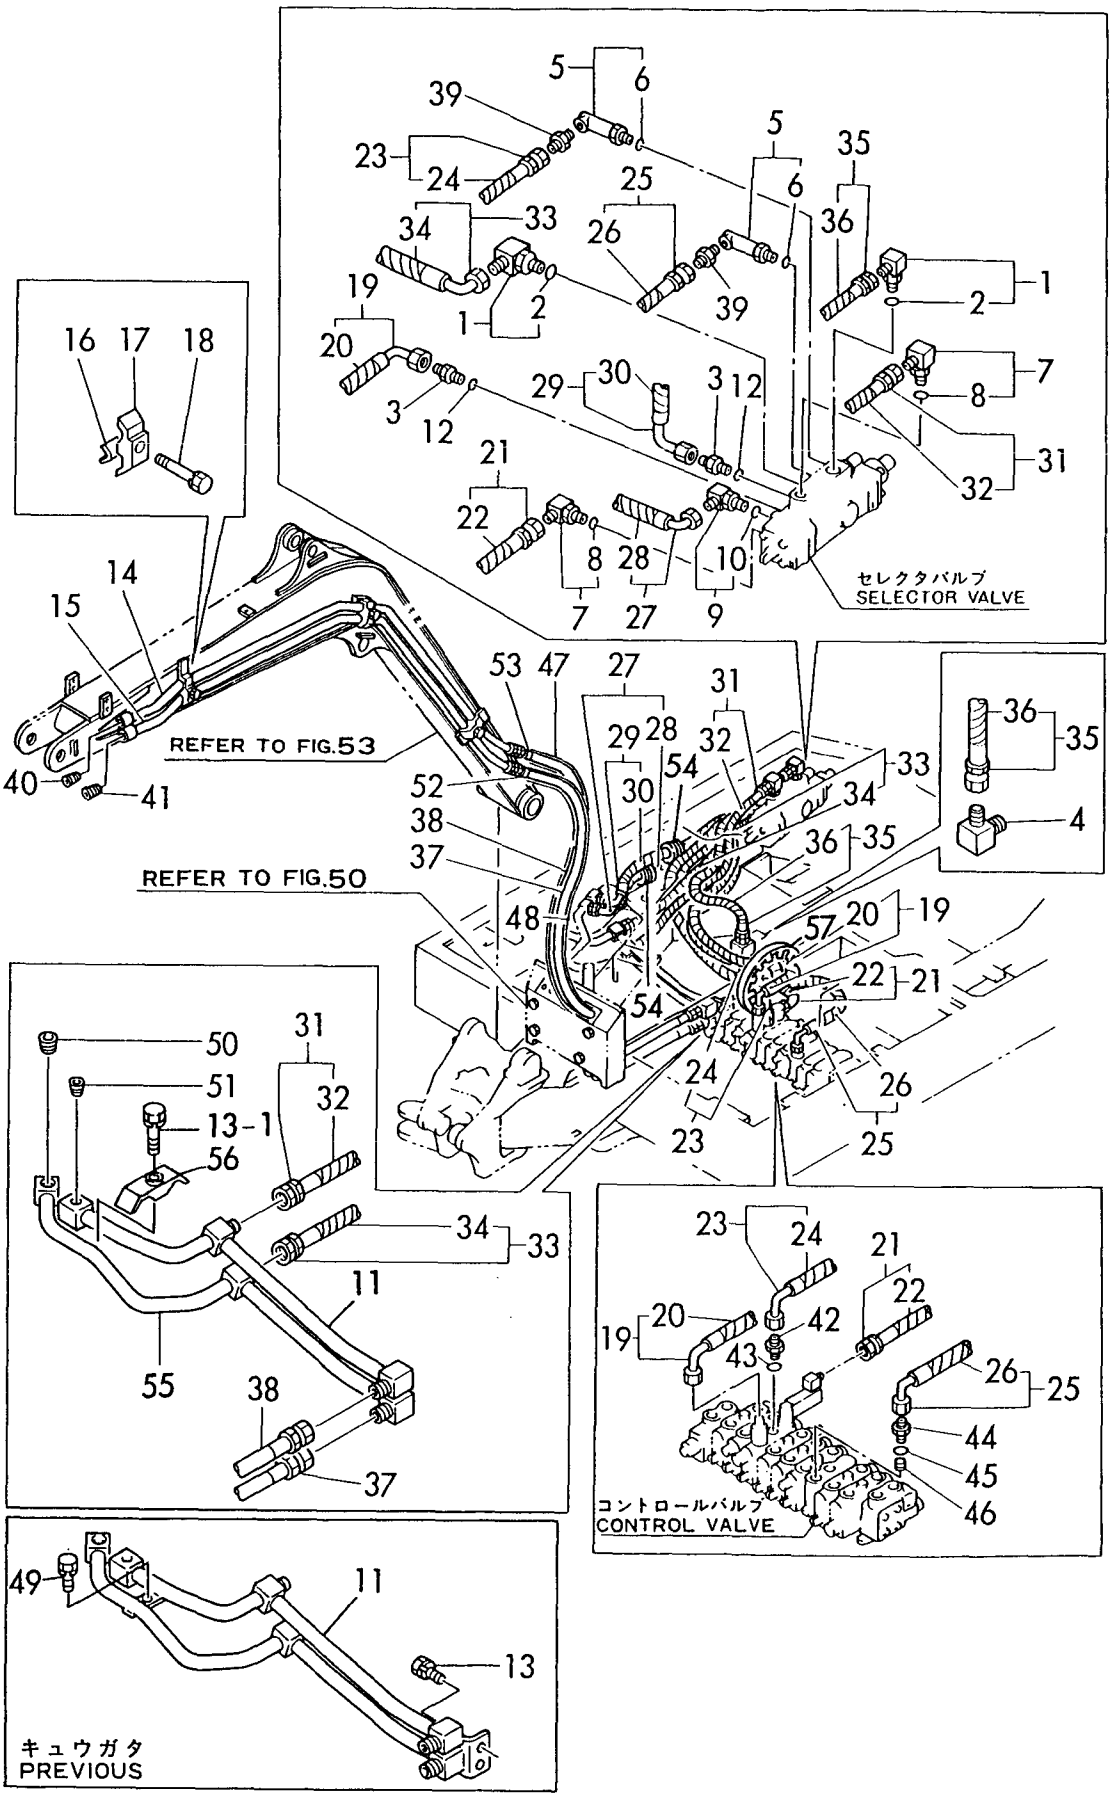

```
1,1,,172141-81500,,"BOOM W/BUSH, 3RD",1,1,1,1,1,1,,,,,,,,,,,,
2,2,,172116-82400,,"PIN BUSH 38X55",2,2,2,2,2,2,,,,,,,,,,,,
3,1,,172141-81400,,"PIN 38-160",1,1,1,1,1,1,,,,,,,,,,,,
4,1,,172141-81420,,"PIN 38-115",2,2,2,2,2,2,,,,,,,,,,,,
5,1,,22417-800500,,"COTTER PIN 8.0X50",3,3,3,3,3,3,,,,,,,,,,,,
6,1,,24761-040000,,"NIPPLE B,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
7,1,,933171-29750,,"SHIM SET, PIN 38",3,3,3,3,3,3,,,,,,,,,,,,
8,1,,172141-82100,,"ARM ASSY(1080)",1,1,1,1,1,1,,,,,,,,,,,,
9,2,,172141-82270,,"BUSH 38 45, PIN",4,4,4,4,4,4,,,,,,,,,,,,
10,2,,172141-82280,,"BUSH 38 45, PIN",2,2,2,2,2,2,,,,,,,,,,,,
11,1,,172141-82300,,"PIN 38-86",1,1,1,1,1,1,,,,,,,,,,,,
12,1,,172141-82330,,"PIN 38-86",1,1,1,1,1,1,,,,,,,,,,,,
13,1,,172141-84600,,"SHIM 35",2,2,2,2,2,2,,,,,,,,,,,,
14,1,,22417-800500,,"COTTER PIN 8.0X50",1,1,1,1,1,1,,,,,,,,,,,,
15,1,,24761-040000,,"NIPPLE B,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
16,1,,933171-29750,,"SHIM SET, PIN 38",1,1,1,1,1,1,,,,,,,,,,,,
17,1,,172141-84400,,"LINK W/BUSH, BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
18,2,,172141-82270,,"BUSH 38 45, PIN",2,2,2,2,2,2,,,,,,,,,,,,
19,2,,172141-72560,,"BUSH 35 40 A, PIN",2,2,2,2,2,2,,,,,,,,,,,,
20,1,,172141-84500,,"RAM(L), BUCKET",1,1,1,1,1,1,,,,,,,,,,,,
21,1,,172141-84510,,"PLATE, BUCKET ARM",1,1,1,1,1,1,,,,,,,,,,,,
22,1,,172141-84550,,"PIN 35-152",2,2,2,2,2,2,,,,,,,,,,,,
23,1,,24761-020000,,"NIPPLE PT1/8,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
24,1,,24761-040000,,"NIPPLE B,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
25,1,,933110-86600,,"NUT M24, NYLON",2,2,2,2,2,2,,,,,,,,,,,,
26,1,,933171-29760,,WASHER,2,2,2,2,2,2,,,,,,,,,,,,
27,1,,772141-81401,,"BUCKET 450",1,1,1,1,1,1,,,,,,,,,,,,
29,3,,172116-86240,,"SIDE CUTTER, BUCKET",2,2,2,2,2,2,,,,,,,,,,,,
30,2,,772141-86231,,"TEETH ASSY",4,4,4,4,4,4,,,,,,,,,,,,
31,3,,172141-86231,,TEETH,4,4,4,4,4,4,,,,,,,,,,,,
32,3,,172137-86710,,"TEETH SHIM 17 SET",4,4,4,4,4,4,,,,,,,,,,,,
33,3,,172137-86770,,BOLT,8,8,8,8,8,8,,,,,,,,,,,,
34,3,,172137-86780,,NUT,8,8,8,8,8,8,,,,,,,,,,,,
35,1,,172141-84600,,"SHIM 35",1,1,1,1,1,1,,,,,,,,,,,,
36,1,,172141-86251,,"PIN  35-188 CMP",2,2,2,2,2,2,,,,,,,,,,,,
37,1,,22417-800450,,"COTTER PIN 8.0X45",2,2,2,2,2,2,,,,,,,,,,,,
38,1,,24761-020000,,"NIPPLE PT1/8,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
39,1,,172141-81400,,"PIN 38-160",1,1,1,1,1,1,,,,,,,,,,,,
40,1,,172141-83301,,"BRACKET, BOOM",1,1,1,1,1,1,,,,,,,,,,,,
41,1,,172141-83322,,"PIN 50-303",1,1,1,1,1,1,,,,,,,,,,,,
42,1,,172141-83340,,"PIN 38-223",1,1,1,1,1,1,,,,,,,,,,,,
43,1,,172141-83371,,"PIN 38-97",1,1,1,1,1,1,,,,,,,,,,,,
44,1,,172141-83390,,"PLATE, PIN LOCK",1,1,1,1,1,1,,,,,,,,,,,,
45,1,,172141-94260,,"PIN 38-130",1,1,1,1,1,1,,,,,,,,,,,,
46,1,,22242-000500,,"CIRCLIP   50",1,1,1,1,1,1,,,,,,,,,,,,
47,1,,22417-800500,,"COTTER PIN
8.0X50",3,3,3,3,3,3,,,72171061,,72171061,,72171061,,72171061,,72171061,,72171061
,,I
48,1,,24761-040000,,"NIPPLE B,GREASE",1,1,1,1,1,1,,,,,,,,,,,,
49,1,,26013-100252,,"BOLT M10X 25",2,2,2,2,2,2,,,,,,,,,,,,
50,1,,26116-160402,,"BOLT M16X 40 PLATED",2,2,2,2,2,2,,,,,,,,,,,,
51,1,,933171-29750,,"SHIM SET, PIN 38",4,4,4,4,4,4,,,,,,,,,,,,
52,1,,172141-83400,,PLATE,1,1,1,1,1,1,,,,,,,,,,,,
53,1,,22417-800450,,"COTTER PIN
8.0X45",1,1,1,1,1,1,,,72171061,,72171061,,72171061,,72171061,,72171061,,72171061
,,I
54,1,,22217-160000,,"SPRING WASHER 16",2,2,2,2,2,2,,,,,,,,,,,,
```

# Fig. 53 ブーム&バケット BOOM & BUCKET

https://truckmanualshub.com/

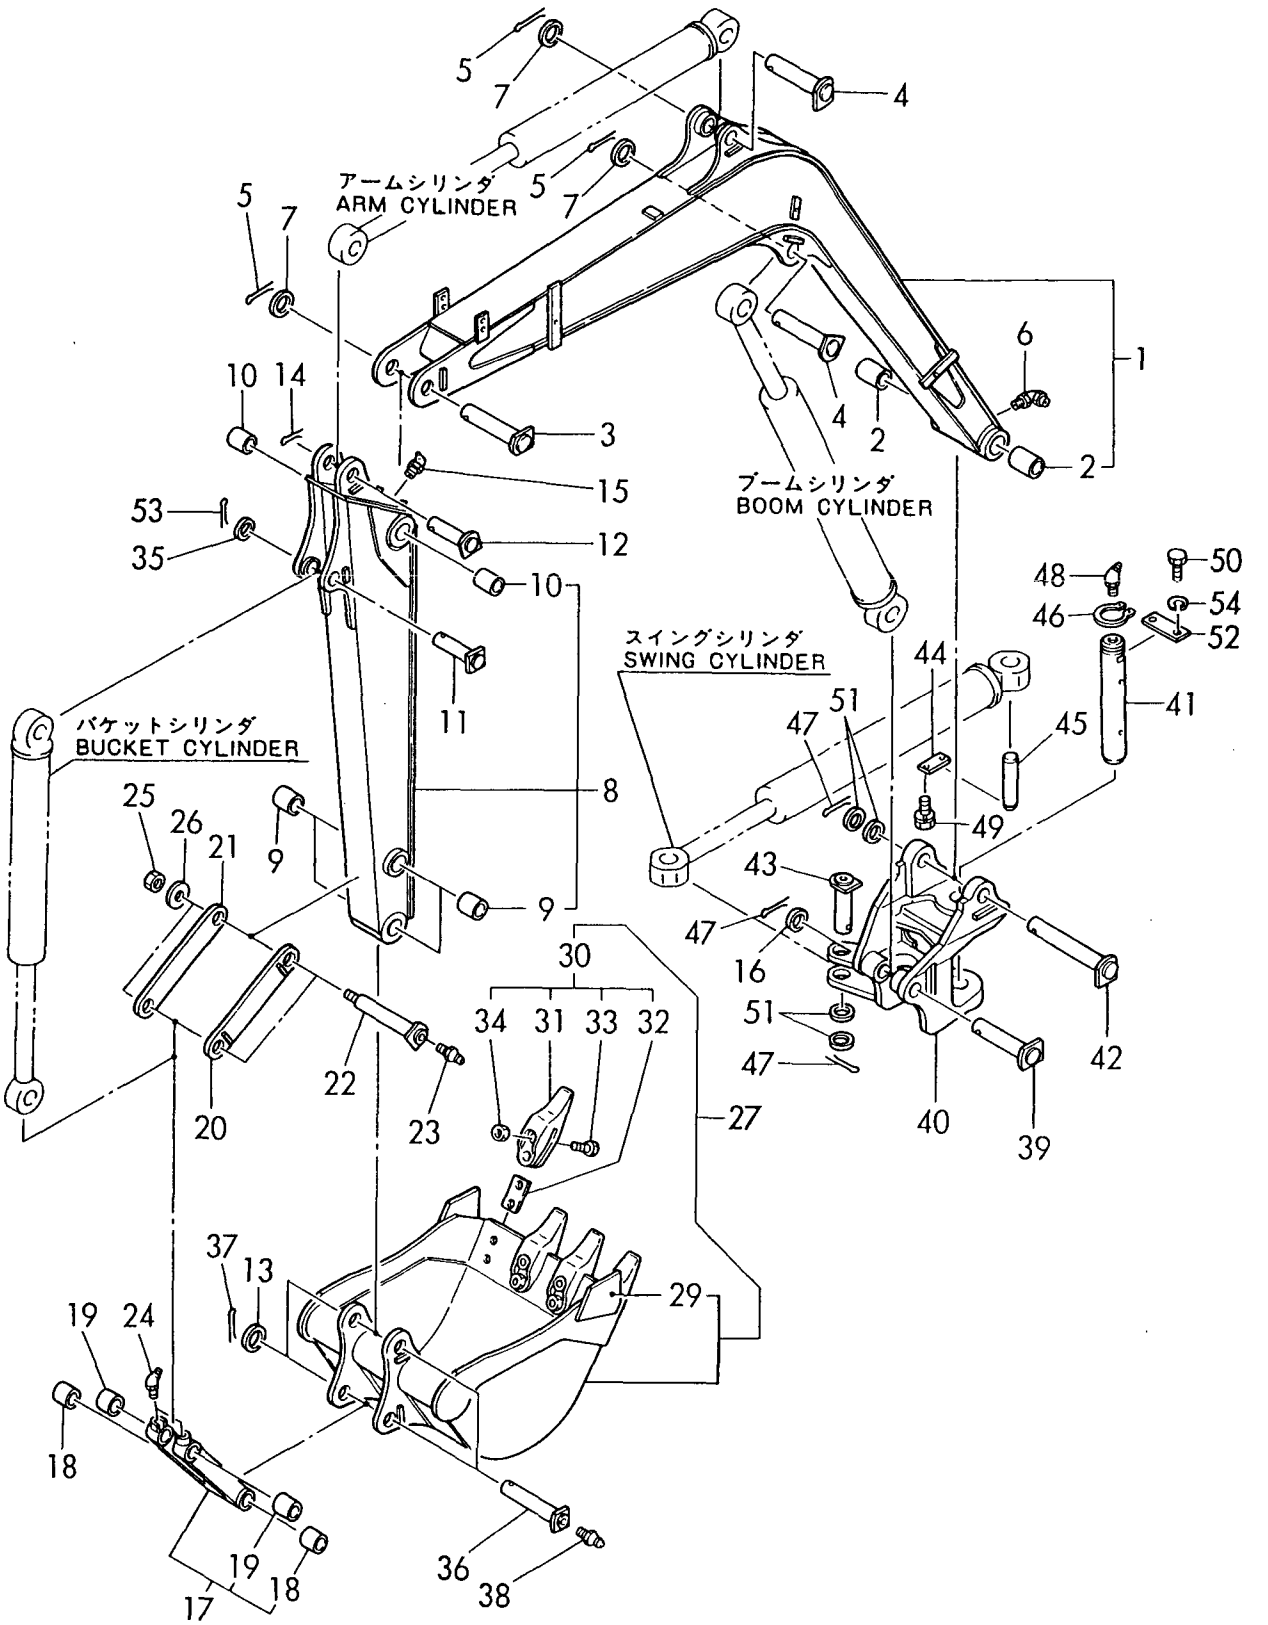

```
1,1,,172141-94100,,"BLADE ASSY, 850",1,1,1,1,1,1,,,,,,,,,,,,
2,1,,172141-94260,,"PIN 38-130",2,2,2,2,2,2,,,,,,,,,,,,
3,1,,172141-94270,,"PIN 38-90",2,2,2,2,2,2,,,,,,,,,,,,
4,1,,172124-94310,,"PLATE, LOCK",2,2,2,2,2,2,,,,,,,,,,,,
5,1,,22417-800560,,"COTTER PIN 8.0X 56",2,2,2,2,2,2,,,,,,,,,,,,
6,1,,24761-020000,,"NIPPLE PT1/8,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
7,1,,24761-040000,,"NIPPLE B,GREASE",2,2,2,2,2,2,,,,,,,,,,,,
8,1,,26013-100252,,"BOLT M10X 25",4,4,4,4,4,4,,,,,,,,,,,,
9,1,,933171-29750,,"SHIM SET, PIN 38",1,1,1,1,1,1,,,,,,,,,,,,
```

# Fig. 54 ブレード(850) BLADE (850)

https://truckmanualshub.com/

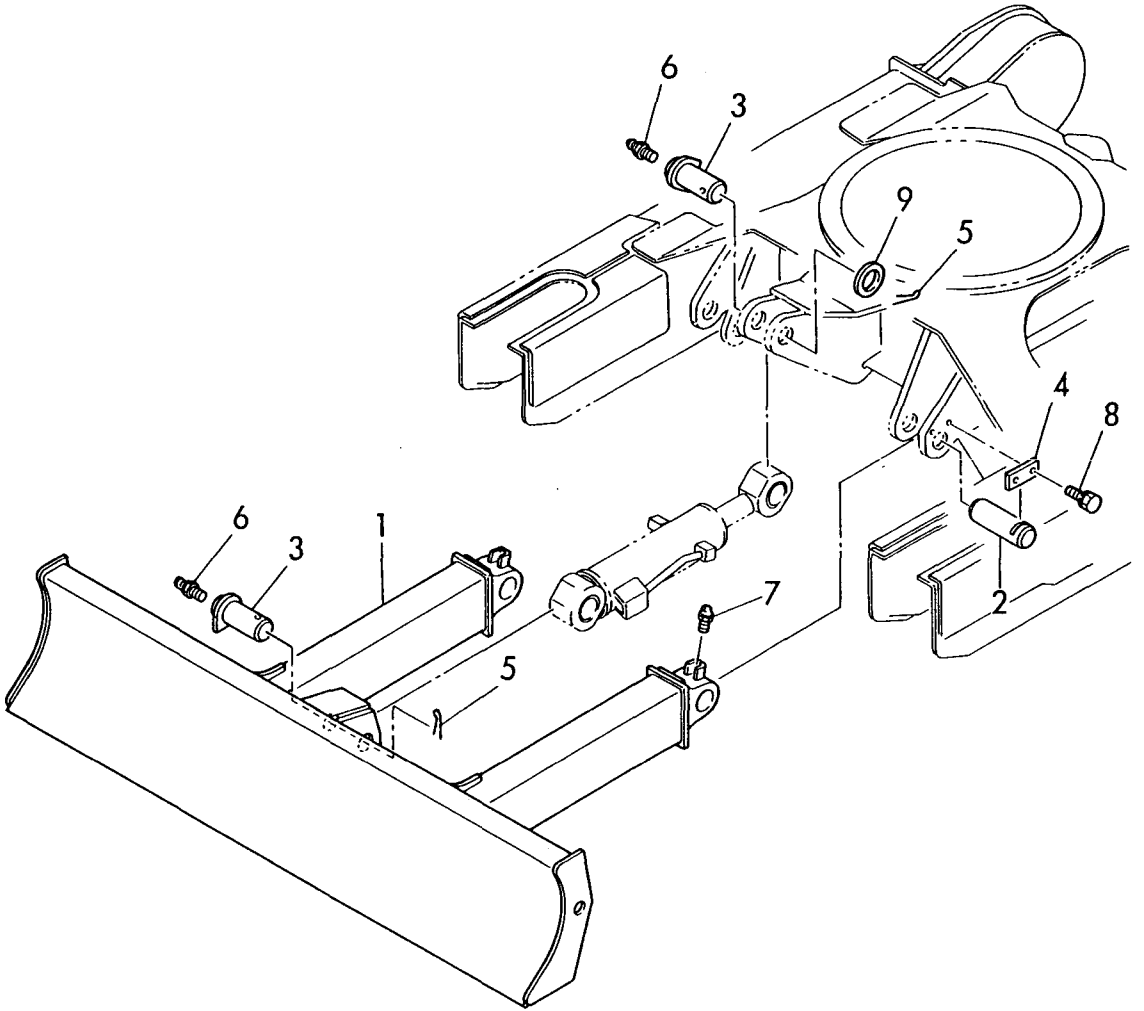

```
Y00S2901,"Construction equipment",Excavator,B
[Info]
PcNo=Y00S2901
PcName=B22(EUROPE)
JpnUse=0
JpnSec1=
JpnSec2=
JpnSec3=
JpnPreface=0
EngUse=1
EngSec1=CONSTRUCTION
EngSec2=EXCAVATOR (B)
EngSec3=B
EngPreface=1
```

```
0,Y00S2901
1,001,,"VEHICLE B22"
2,1,,"LABEL(CANOPY SPEC.)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,2,,"LABEL(CANOPY SPEC.)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,3,,"LABEL(UK REMODELING)(OPTIONAL)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,4,,TOOL,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,5,,TOOL,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,6,,"AIR CLEANER & SILENCER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,7,,ACCELERATOR,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,8,,"ENGINE MOUNT & RADIATOR","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,9,,"FUEL TANK & FUEL LINE","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,10,,BATTERY,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,11,,"ELECTRIC PART","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,12,,"WORK LAMP","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,13,,HEATER,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,14,,RADIO(EC),"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,15,,"TRACK ROLLER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,16,,"TRACK FRAME & IDLER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,17,,"TRACK FRAME & IDLER(R)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,18,,CRAWLER(270),"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,19,,"LINK STAND","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,20,,"CONTROL EQUIPMENT(BOOM&BACKET)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,21,,"CONTROL EQUIP.(ARM & TURNING)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,22,,"CONTROL EQUIP.(TRAVEL & SWING)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,23,,"CONTROL EQUIPMENT(BLADE)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,24,,"ORERATION LEVER STOPPER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,25,,"TURNING FRAME","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,26,,"TURNING DRIVING GEARS","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,27,,BONNET,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,28,,"SEAT & STEP","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,29,,ROPS,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,30,,"BOOM CYLINDER(UZ)(CANOPY SPEC.","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
```

```
2,31,,"BOOM CYLINDER(UZ)(CABIN SPEC.)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,32,,"ARM CYLINDER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,33,,"BUCKET CYLINDER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,34,,"SWING CYLINDER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,35,,"BLADE CYLINDER","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,36,,"HYD. OIL PUMP & JOINT","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,37,,"TURNING MOTOR","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,38,,"TRAVEL MOTOR","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,39,,"SWIVEL JOINT","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,40,,"CON. VALVE (TRAVEL & TURNING)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,41,,"CONTROL VALVE(ARM & BUCKET)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,42,,"CONTROL VALVE(SWING & BOOM)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,43,,"CONTROL VALVE(BLADE)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,44,,"CONTROL VALVE(P1,P2,P3)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,45,,"HYD. OIL TANK","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,46,,GREASING,"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
2,47,,"HYD. OIL PIPING(TANK-VALVE)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,48,,"HYD. OIL PIPING(VALVE-SWIVEL)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,49,,"HYD. OIL PIPING(TRAVEL)","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-
P(R) UK","B22(R)   EP","B22-P(R) EP"
2,50,,"HYD.OIL PIPING(WORK EQUIPMENT)","B22(R)   AY","B22-P(R) AY","B22(R)
UK","B22-P(R) UK","B22(R)   EP","B22-P(R) EP"
2,51,,"3RD VALVE CONTROL","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,52,,"3RD VALVE PIPING","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,53,,"BOOM & BUCKET","B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R)
UK","B22(R)   EP","B22-P(R) EP"
2,54,,BLADE(850),"B22(R)   AY","B22-P(R) AY","B22(R)   UK","B22-P(R) UK","B22(R)
EP","B22-P(R) EP"
```