


JT1220 Tier 4i

Parts Manual

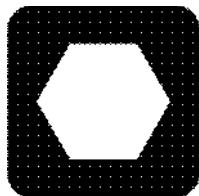

Ditch Witch®

JT1220 Tier 4i

ISSUE NO. 02PL-05/11

For Replacement Copy Order P/N 053-1263

This manual contains information concerning the following models:
JT1220 Tier 4i Directional Drilling System

Copyright 2009, 2011 by The Charles Machine Works, Inc.

 Ditch Witch®, Ditch Witch, CMW, AutoCrowd, Jet Trac, Roto Witch, Subsite, Fluid Miser, Power Pipe, Super Witch, Pierce Arrow, Zahn, The Underground, and The Underground Authority Worldwide are registered trademarks of The Charles Machine Works, Inc.

ID0238085

FOREWORD

This manual contains illustrated parts lists to help you select quality ProTech® Replacement parts for your Ditch Witch® equipment. Using other replacement parts will lessen the productivity of your equipment.

- ◆ Part numbers enclosed in a box are no longer available from The Charles Machine Works, Inc. Your local Ditch Witch dealer may be able to locate the part for you.
- ◆ Footnotes provide more information to help you identify parts shown in the manual.
- ◆ Assembly instructions and Tech Bits articles referenced in footnotes are available through your local Ditch Witch dealer.
- ◆ Description and specifications in this book were current at publication. However, The Charles Machine Works, Inc. reserves the right to improve equipment, so this manual might not reflect the most current improvements.
- ◆ Instructions on recommended equipment use and maintenance are in the Operator's Manual that was shipped with your equipment.

Keep the following in mind when ordering ProTech replacement parts:

- ◆ Specify parts you need by part number and description, not by illustration reference numbers.
- ◆ Have equipment model and serial number on hand to help ensure you get the right parts for your machine whether it's old or new.

Thank you for buying and using Ditch Witch equipment and ProTech replacement parts.

WARRANTY

DW WARRANTY Policy
July, 2005

POLICY 1: DITCH WITCH® EQUIPMENT AND REPLACEMENT PARTS LIMITED WARRANTY POLICY

Subject to the limitation and exclusions herein, free replacement parts will be provided at any authorized Ditch Witch dealership for any Ditch Witch equipment or parts manufactured by The Charles Machine Works, Inc. (CMW) that fail due to a defect in material or workmanship within one (1) year of first commercial use (Exception: 2 years for all SK500 Attachments). Free labor will be provided at any authorized Ditch Witch dealership for installation of parts under this warranty during the first year following "initial commercial" use of the serial numbered Ditch Witch equipment on which it is installed. The customer is responsible for transporting their equipment to an authorized Ditch Witch dealership for all warranty work.

EXCLUSIONS FROM PRODUCT WARRANTY

- All incidental or consequential damages.
- All defects, damages, or injuries caused by misuse, abuse, improper installation, alteration, neglect, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All engines and engine accessories (these are covered by original manufacturer's warranty).
- Tires, belts, and other parts which are subject to another manufacturer's warranty. (Such warranty will be available to purchaser.)
- ALL IMPLIED WARRANTIES NOT EXPRESSLY STATED HEREIN, INCLUDING ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY.

IF THE PRODUCTS ARE PURCHASED FOR COMMERCIAL PURPOSES, AS DEFINED BY THE UNIFORM COMMERCIAL CODE, THEN THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF AND THERE ARE NO IMPLIED WARRANTIES OF ANY KIND WHICH EXTEND TO A COMMERCIAL BUYER. ALL OTHER PROVISIONS OF THIS LIMITED WARRANTY APPLY INCLUDING THE DUTIES IMPOSED.

Ditch Witch products have been tested to deliver acceptable performance in most conditions. This does not imply they will deliver acceptable performance in all conditions. Therefore, to assure suitability, products should be operated under anticipated working conditions prior to purchase.

Defects will be determined by an inspection within thirty (30) days of the date of failure of the product or part by CMW or its authorized dealer. CMW will provide the location of its inspection facilities or its nearest authorized dealer upon inquiry. CMW reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate.

Extended warranties are available upon request from your local Ditch Witch dealer or CMW.

Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. Further, some states do not allow exclusion of or limitation of how long an implied warranty lasts, so the above limitation may not apply. This limited warranty gives product owner specific legal rights and the product owner may also have other rights which vary from state to state.

For information regarding this limited warranty, contact CMW's Product Support Department, P.O. Box 66, Perry, OK 73077-0066, or contact your local Ditch Witch dealer.

CONTENTS

Decals

| | |
|--|----|
| Decal Location - JT1220 Tier 4i | 8 |
| Decal Location - Pipe Box Loader | 12 |

Engine Components

| | |
|---|----|
| Battery | 40 |
| Cooling System - Cooler Mounts | 20 |
| Cooling System - Fan Assembly | 24 |
| Cooling System - Radiator Plumbing..... | 22 |
| Electrical Mounting..... | 34 |
| Engine Mounts | 18 |
| Engine Oil System..... | 30 |
| Engine Service Parts..... | 16 |
| Engine Skid..... | 38 |
| Engine Throttle..... | 26 |
| Exhaust System | 28 |
| Front Fixed Hood | 46 |
| Front Hood Support | 44 |
| Front Opening Hood | 48 |
| Glow Plug Controls | 36 |
| Intake System | 32 |
| Rear Controls..... | 42 |
| Rear Fixed Hood..... | 50 |
| Rear Opening Hood | 52 |

Frame Components

| | |
|---------------------------------------|----|
| Assisted Makeup - Begins w/..... | 64 |
| Carriage Spindle | 58 |
| Carriage | 56 |
| Frame Tilt..... | 86 |
| Front Idler Roller | 80 |
| Fuel Tank | 74 |
| Gearbox | 78 |
| Grease Cylinder | 82 |
| Ground Drive Tracks..... | 76 |
| Pipe Guide | 68 |
| Proximity Switches - Drill Pipe | 90 |
| Proximity Switches | 88 |
| Rotating Wrench - Begins w/ | 70 |
| Rotation Gear Box | 62 |
| Stabilizer | 84 |
| Stationary Wrench - Begins w/..... | 72 |
| Thrust Drive | 60 |
| Thrust Drive | 66 |

Operator's Station

| | |
|--------------------------------|-----|
| Electrical Strike System | 106 |
| ESID Module & Gauge Panel..... | 100 |
| Ground Drive Control | 108 |
| Left Console..... | 98 |
| Operator Seat | 96 |

| | |
|------------------------------|-----|
| Operator Station Floor | 94 |
| Right Console | 104 |
| Vandal Cover | 102 |

Hydraulics

| | |
|---|-----|
| Anchor Hydraulics..... | 132 |
| Auxiliary Hydraulics..... | 136 |
| Drilling Fluid Motor Hydraulics | 140 |
| Fan Drive Hydraulics | 138 |
| Filter And Reservoir Hydraulics | 116 |
| Frame Tilt Hydraulics..... | 154 |
| Front Thrust Hydraulics | 126 |
| Ground Drive Hydraulics..... | 130 |
| Hydraulic Cylinder (2.0" X 1.0") | 160 |
| Hydraulic Cylinder (3.0" X 1.5") | 162 |
| Hydraulic Cylinder (3.5" X 1.75") | 164 |
| Hydraulic Cylinder (3.5" X 1.75" X 2")..... | 166 |
| Hydraulic Valve Parts..... | 158 |
| Hydraulic Oil Cooler Plumbing..... | 118 |
| Lubricator Hydraulics | 134 |
| P.O.R. Hydraulics | 128 |
| Pipe Box Shift Hydraulics | 152 |
| Pipe Grip Hydraulics | 146 |
| Pipe Lift Hydraulics | 150 |
| Pump Stack Mounting | 112 |
| Pump Stack Supply & Return | 114 |
| Pump/ Selector Hydraulics | 122 |
| Rotating Wrench Hydraulics | 142 |
| Rotation Hydraulics..... | 120 |
| Selector Hydraulics | 124 |
| Shuttle Hydraulics | 148 |
| Stabilizer Hydraulics | 156 |
| Stationary Wrench Hydraulics | 144 |

Anchor Systems

| | |
|-------------------------------------|-----|
| Anchor System - Begins w/..... | 170 |
| Anchor Valve/Lubricator Mount | 172 |
| Auto-Luber Assembly | 180 |
| Grease Pump | 174 |
| Lubricator Nozzle & Applicator..... | 178 |
| Lubricator Valve | 176 |

Fluid System

| | |
|--|-----|
| Drilling Fluid Plumbing | 188 |
| Drilling Fluid Pump Plumbing - Begins w/ | 184 |
| Drilling Fluid Pump..... | 186 |
| Drilling Fluid Transfer..... | 190 |

Continued

CONTENTS

Pipe Loader Systems

| | |
|---------------------------------|-----|
| Lifters | 194 |
| Pipe Box..... | 206 |
| Pipe Loader Valve/ Covers | 202 |
| Pivot Arm | 204 |
| Shuttle Guard..... | 200 |
| Shuttle Mount..... | 198 |
| Shuttle | 196 |

Electrical

*See technical supplement for further
electrical information053-1350

Accessories

| | |
|--------------------------|-----|
| Antifreeze Tank..... | 212 |
| Canopy..... | 218 |
| Pipe Box Loader..... | 224 |
| Softcab..... | 220 |
| T18B Tie Down Kit | 222 |
| Transport Pipe Box | 226 |
| Umbrella..... | 214 |
| Heated Greaser | 216 |

Miscellaneous


| | |
|-----------------------------------|-----|
| Bolt/Nut Torque Chart | 230 |
| Filters | 234 |
| Optional Kits | 234 |
| Parts Manual Change Request | 235 |
| Related Publications | 234 |
| Replacement O-Ring Chart..... | 233 |
| Warranty Registration | 237 |

DECALS


ID0135069

DECAL LOCATION

JT1220T4i

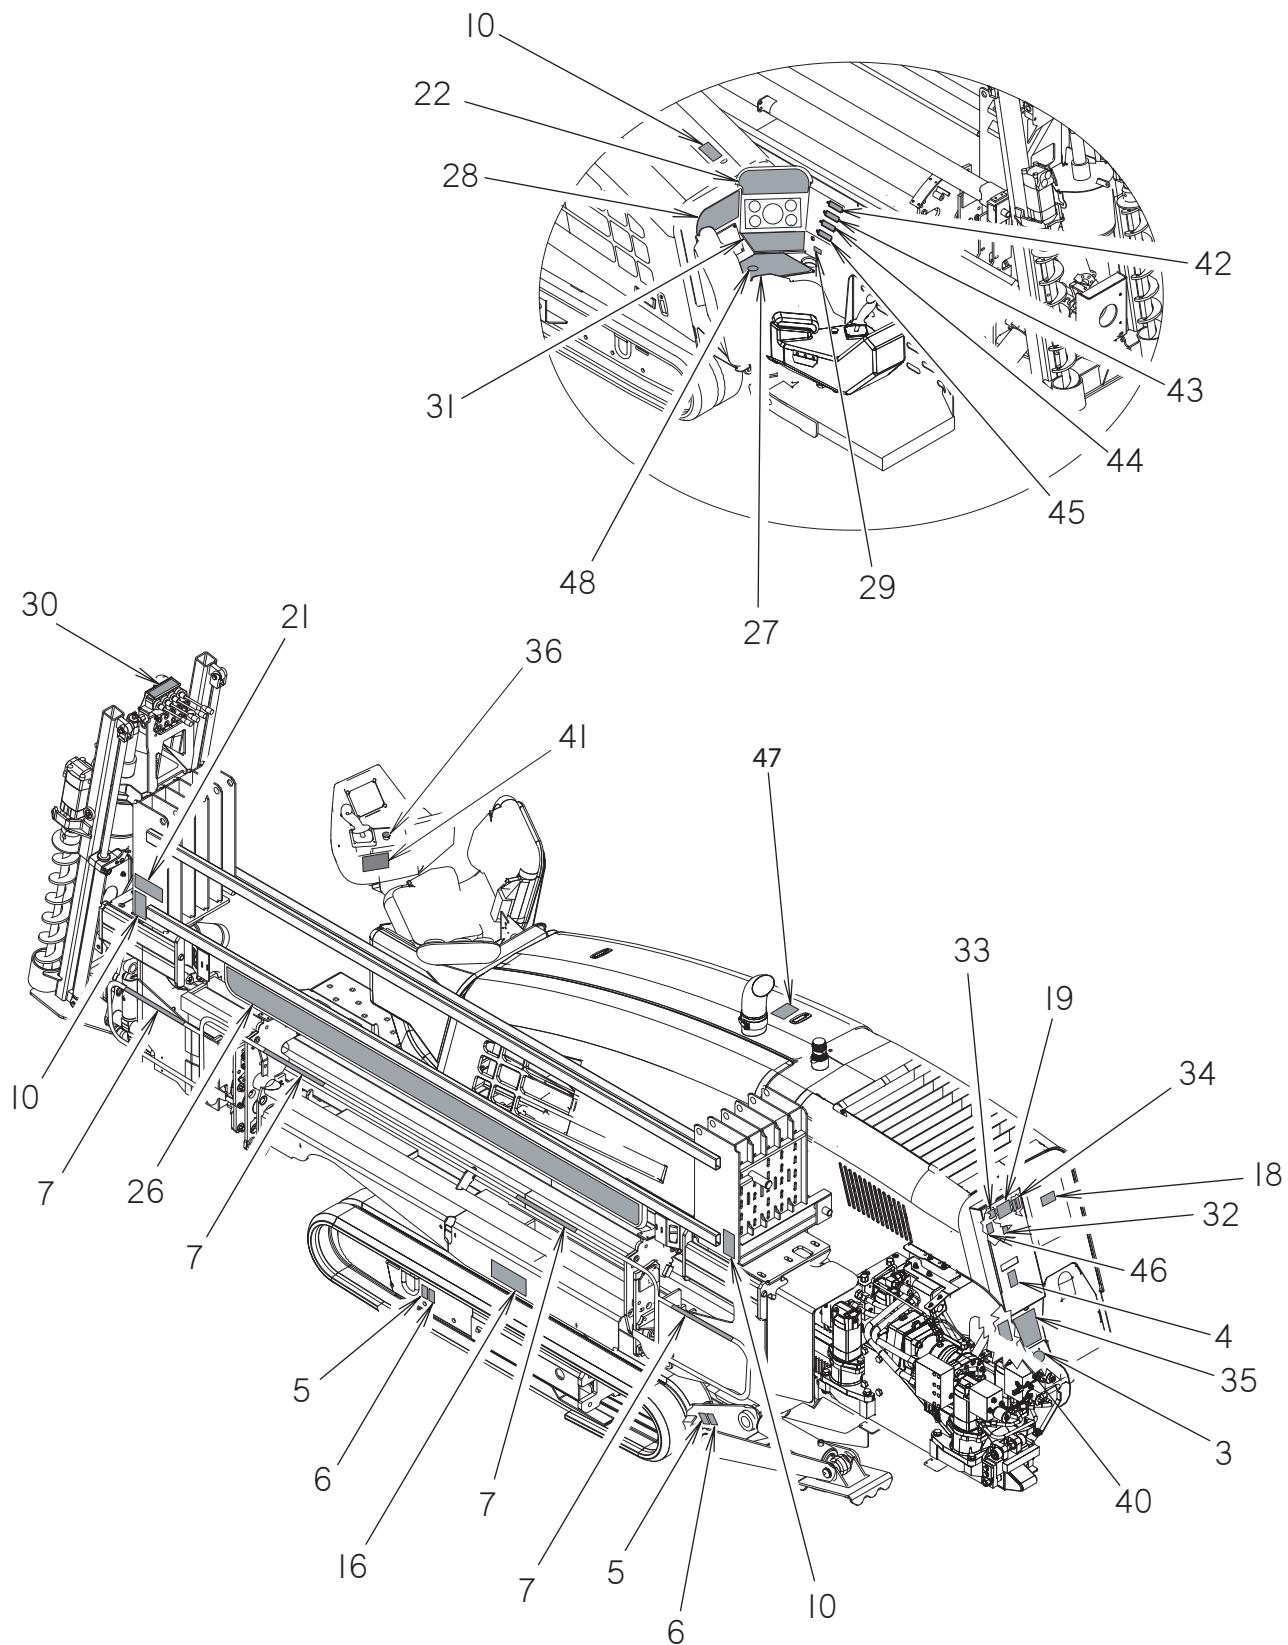

DECAL LOCATION JT1220T4i

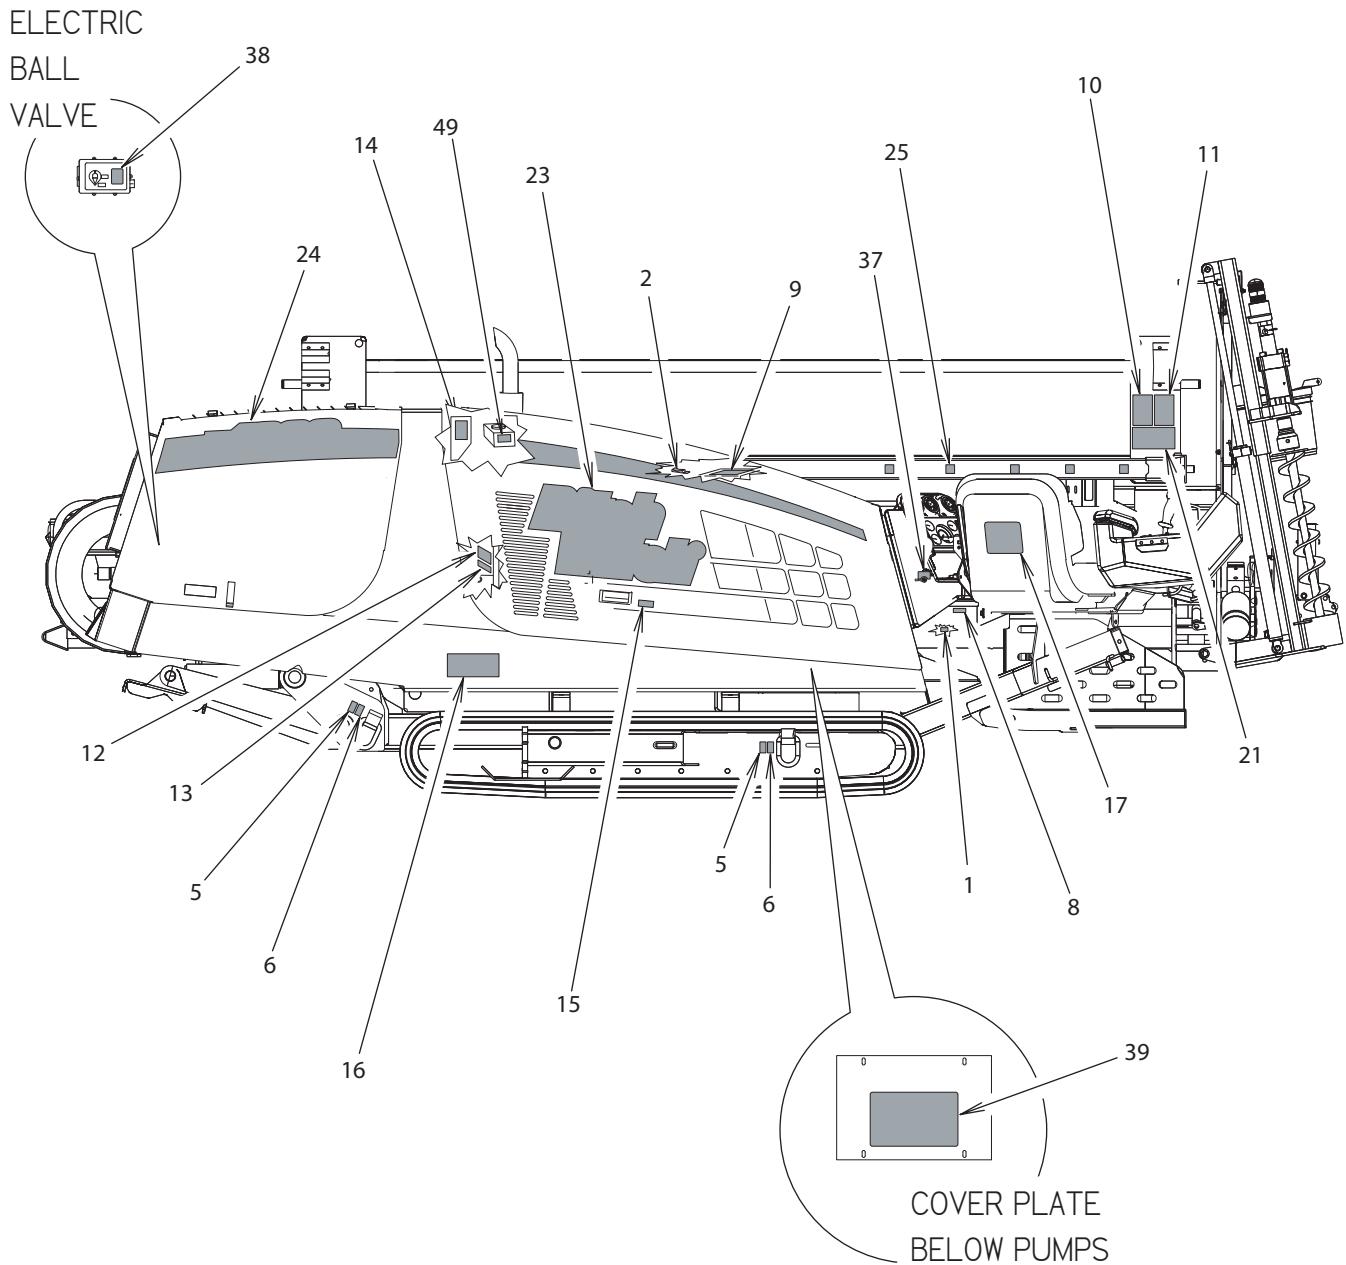

DECAL LOCATION


JT1220T4i

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------|-----------------|
| | 270-2400 | 1 | DECAL KIT - JT1220T4i | |
| I | 273-267 | 1 | DITCH WITCH BATTERY | |
| 2 | 270-2285 | 1 | FAN SWITCH | |
| 3 | 700-062 | 1 | DIESEL FUEL CAP | |
| 4 | 274-724 | 1 | ONE CALL NOTIFICATION | |
| 5 | 274-442 | 4 | LIFT LOCATION | |
| 6 | 274-318 | 4 | TIE DOWN LOCATION | |
| 7 | 275-230 | 4 | DANGER STRIPE 1.75" x 18" | |
| 8 | 275-203 | 1 | BATTERY | |
| 9 | 270-2286 | 1 | RELAY DECAL | |
| I0 | 275-184 | 4 | WARNING MOVING PARTS | |
| II | 273-278 | 1 | DANGER WRENCH | |
| I2 | 274-198 | 1 | NOTICE OIL LEVEL | |
| I3 | 275-120 | 1 | RESERVOIR (THF) | |
| I4 | 275-355 | 1 | CAUTION HOT PARTS | |
| I5 | 275-400 | 1 | NOTICE OIL LEVEL | |
| I6 | 274-049 | 2 | DANGER ELECTROCUTION | |
| I7 | 274-854 | 1 | LOGO PLACARD | |
| I8 | 275-048 | 1 | IMPORTANT SAFETY RULES | |
| I9 | 275-449 | 1 | DITCH WITCH LOGO PLACARD | |
| 20 | 274-291 | 1 | SOUND POWER IO | SEE FOOT NOTE I |
| 21 | 275-197 | 2 | DANGER ROTATING SHAFT | |
| 22 | 273-407 | 1 | GAUGE PANEL | |
| 23 | 273-434 | 1 | DITCH WITCH | |
| 24 | 273-435 | 1 | JT1220 W/ STRIPE | |
| 25 | 273-444 | 1 | PIPE BOX NUMBERS | |
| 26 | 273-445 | 1 | PIPE BOX STRIPE/MODEL ID | |
| 27 | 700-067 | 1 | CONTROL PANEL | |
| 28 | 700-068 | 1 | SWITCH PANEL | |
| 29 | 700-069 | 1 | IGNITION PANEL | |
| 30 | 700-071 | 1 | STAKE DRIVER | |
| 31 | 700-092 | 1 | SWITCH PANEL | |
| 32 | 273-198 | 1 | TRACKER CONTROL | |
| 33 | 273-482 | 1 | IGNITION SWITCH | |
| 34 | 700-146 | 1 | TRACK SWITCH | |
| 35 | 700-147 | 1 | FRAME TILT | |
| 36 | 275-222 | 1 | ENGINE STOP | |
| 37 | 700-191 | 1 | MASTER DISCONNECT SWITCH | |
| 38 | 273-567 | 1 | NOTICE NOT MANUAL SHUTOFF | |
| 39 | 273-569 | 1 | JTI220 TEST PORT LOCATIONS | |
| 40 | 274-780 | 1 | JET TRAC PATENT (S) | |
| 41 | 700-245 | 1 | RIGHT CONTROL | |
| 42 | 270-2332 | 1 | LED DISPLAY | |
| 43 | 270-1405 | 1 | LED DISPLAY | |
| 44 | 270-1406 | 1 | LED DISPLAY | |
| 45 | 270-2333 | 1 | LED DISPLAY | |
| 46 | 273-061 | 1 | START ASSIST | |
| 47 | 273-459 | 1 | WARNING EXPLOSION | |
| 48 | 274-940 | 1 | INDICATOR | |
| 49 | 270-1504 | 1 | NOTICE COMPLETE FILL | |

FOOTNOTES

1. NOT PART OF KIT.

PIPE BOX LOADER DECAL LOCATION

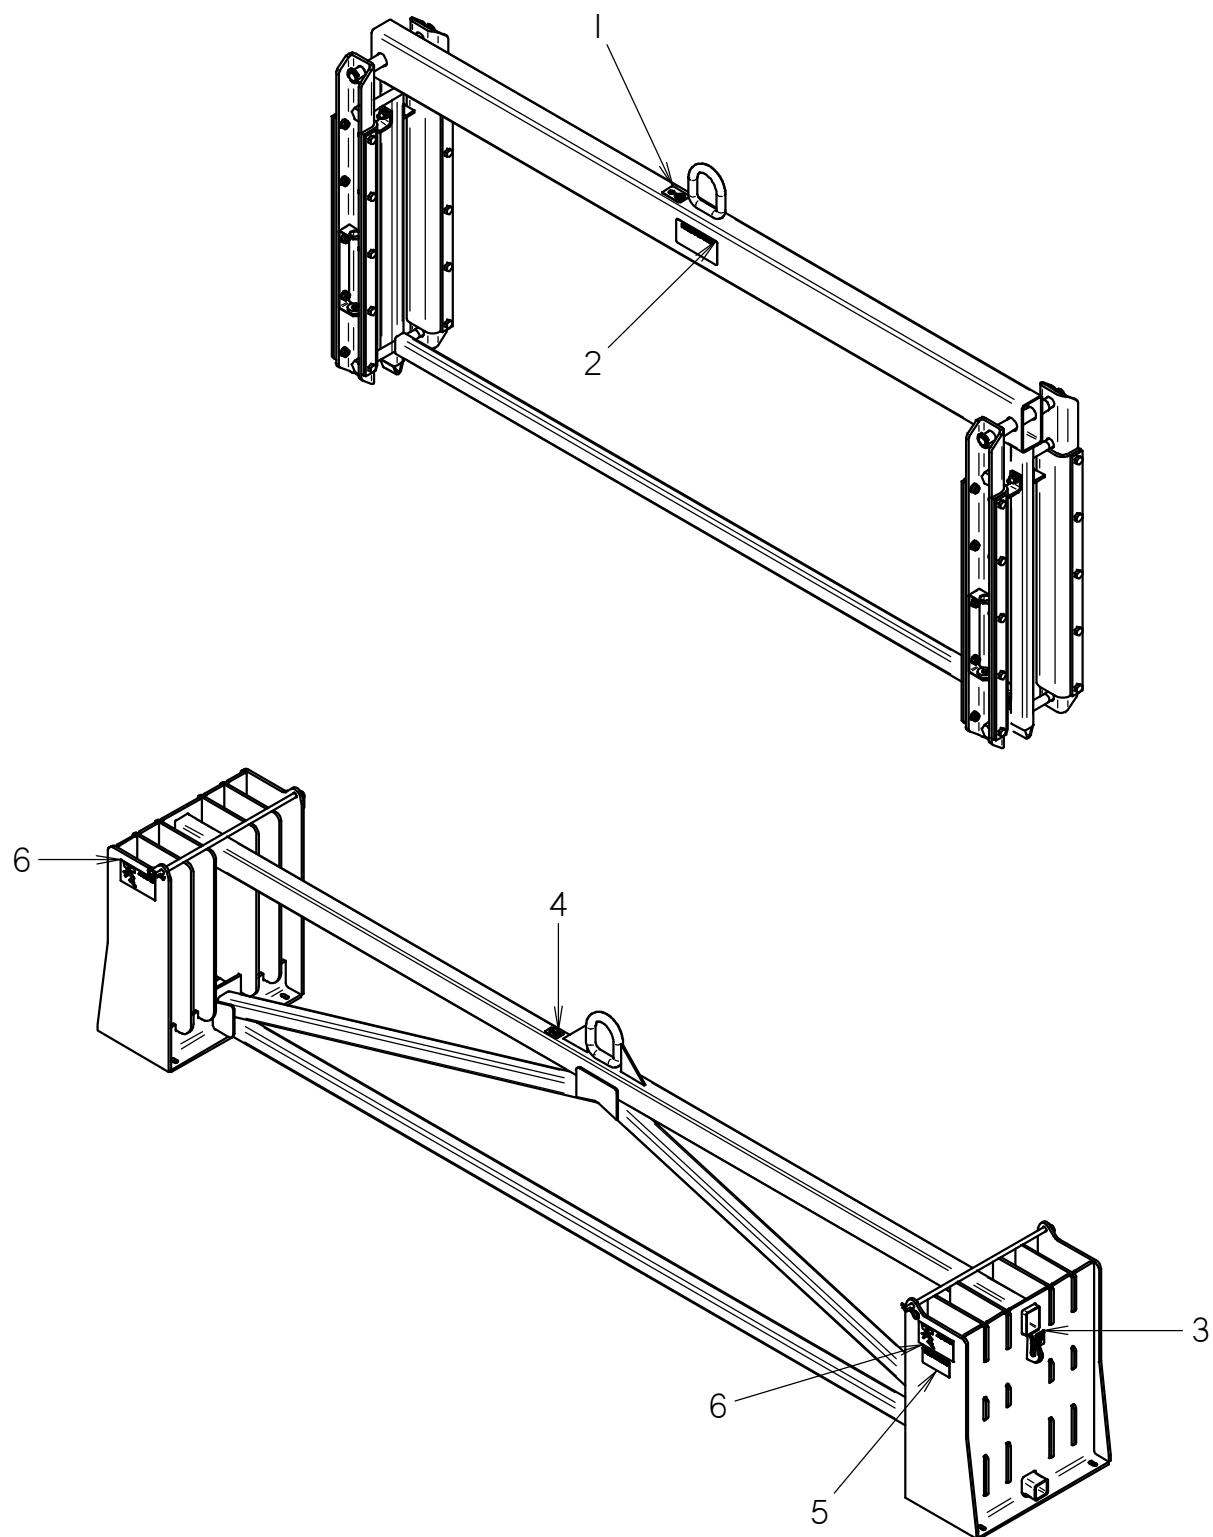

PIPE BOX LOADER DECAL LOCATION

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------|--|
| 1 | 274-442 | 1 | LIFT LOCATION | |
| 2 | 270-I018 | 1 | PIPE BOX LOADER WEIGHT | |
| 3 | 274-318 | 2 | TIE DOWN LOCATION | OPPOSITE ENDS |
| 4 | 274-442 | 1 | LIFT LOCATION | |
| 5 | 273-642 | 2 | TRANSPORT BOX WEIGHT | JT2020 ONLY. 270-I016 USED ON JTI220, OPPOSITE CORNERS |
| 6 | 275-326 | 4 | WARNING, CRUSHING WEIGHT | OPPOSITE SIDES |

NOT SHOWN:

FOOTNOTES:



NOTE:

NOTES:

ENGINE COMPONENTS

ID0134845

ENGINE SERVICE PARTS

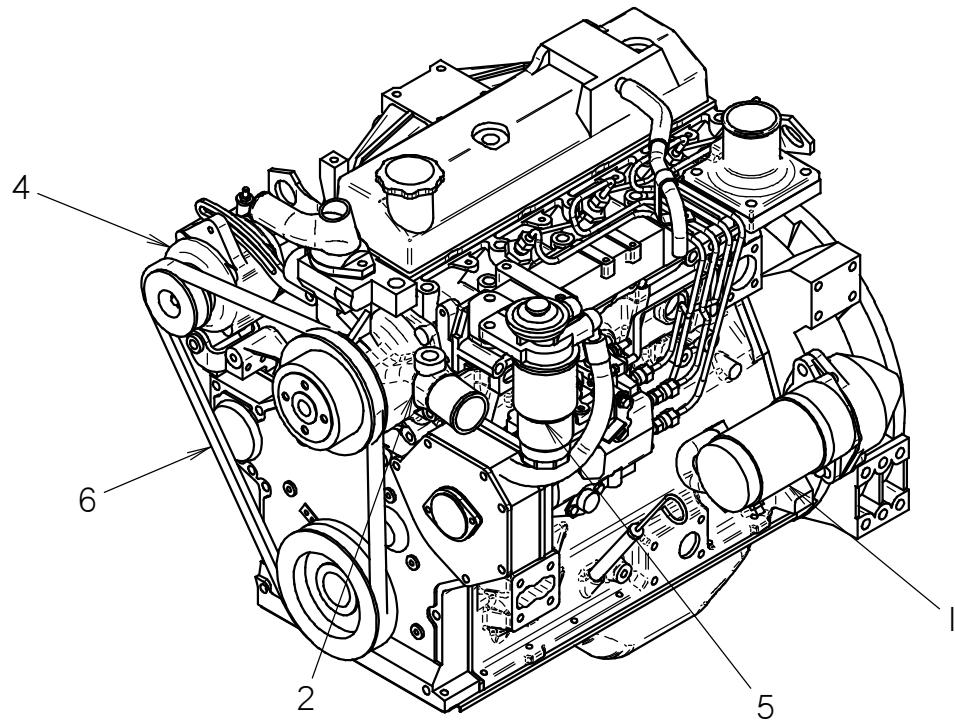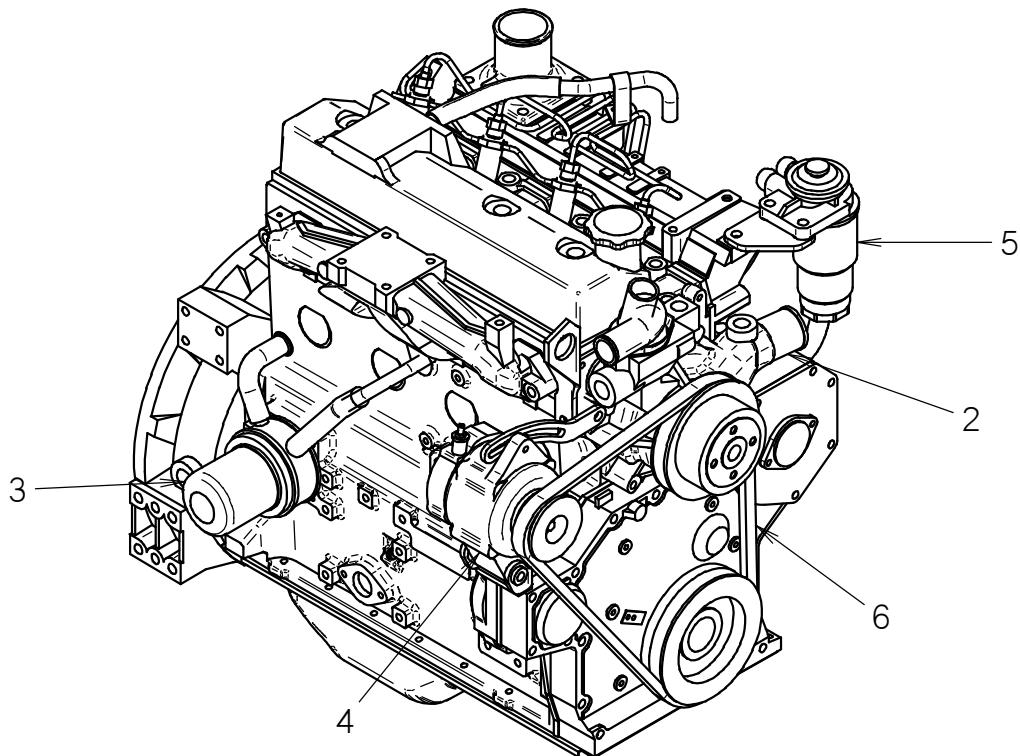

ENGINE SERVICE PARTS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------|---------|
| | I95-1320 | 1 | ENGINE CUMMINS B3.3NA | |
| 1 | I94-458 | 1 | STARTING MOTOR | |
| 2 | I94-459 | 1 | WATER PUMP (CUMMINS B3.3) | |
| 3 | I94-454 | 1 | ENGINE OIL FILTER | |
| 4 | I94-462 | 1 | ALTERNATOR 12V/160A (B3.3) | |
| 5 | I94-461 | 1 | FUEL FILTER ELEMENT (B3.3) | |
| 6 | I70-463 | 1 | FAN BELT | |


NOT SHOWN:

500-2084 FLUID LEVEL SENSOR

FOOTNOTES:

NOTE:

ENGINE MOUNTS

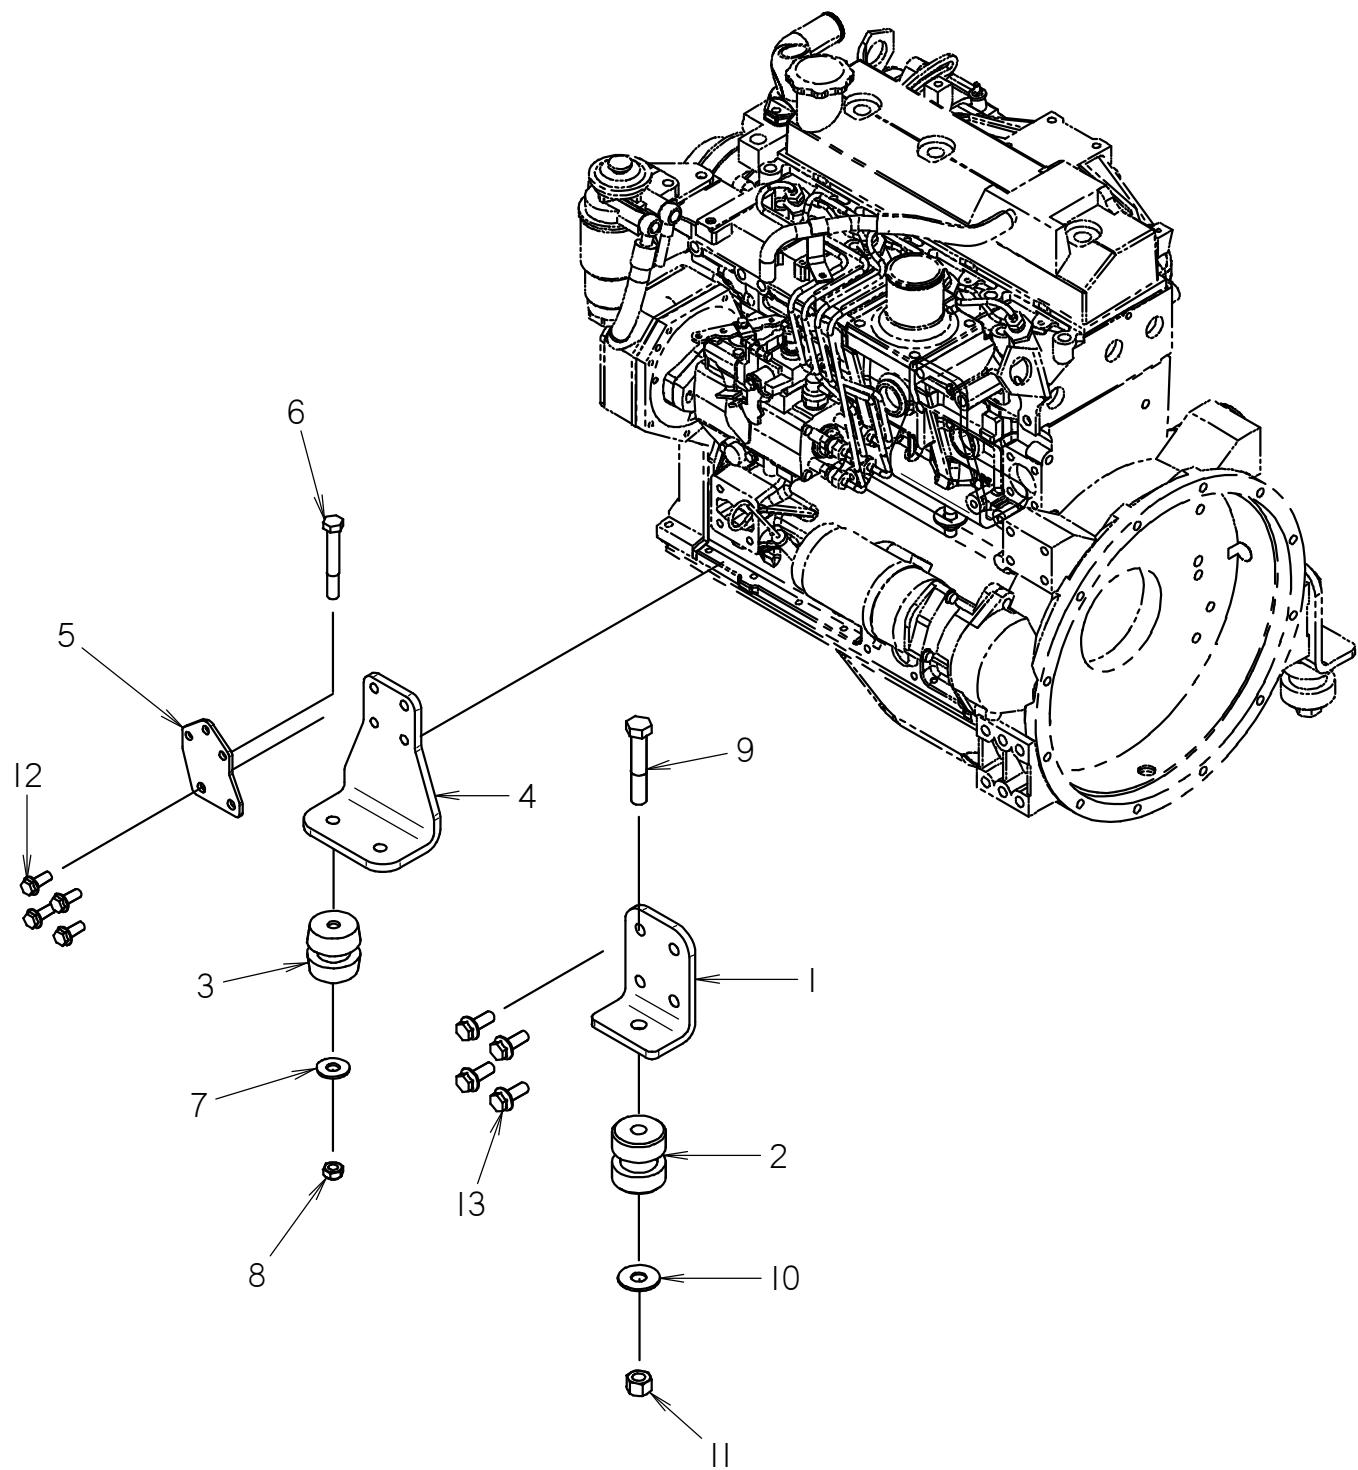

ENGINE MOUNTS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|-------------------------------|
| I | 314-764 | 2 | REAR ENGINE MOUNT | |
| 2 | I16-217 | 2 | SHOCK MOUNT (2-PIECE KIT) | |
| 3 | I17-559 | 2 | ISOLATOR | |
| 4 | 300-5374 | 2 | FRONT ENGINE MOUNT | |
| 5 | 300-5404 | 1 | BRACKET | |
| 6 | I06-336 | 2 | SCREW (M12-1.75 X 90MM) | |
| 7 | I05-071 | 2 | WASHER (1/2") | |
| 8 | I06-685 | 2 | LOCKNUT(M12-1.75,PRV TRQ,10.9) | |
| 9 | I06-810 | 2 | SCREW (M16-2.00 X 90MM, 10.9) | |
| I0 | I05-359 | 2 | WASHER (5/8) | |
| II | I06-545 | 2 | LOCKNUT (M16-2.0,PRV TRQ,10.9) | |
| I2 | I06-724 | 8 | FLG SCREW (M10-1.50 X 25MM) | USE LOCTITE 242 OR EQUIVALENT |
| I3 | I06-469 | 8 | FLG SCREW (M12-1.75 X 30MM) | USE LOCTITE 242 OR EQUIVALENT |

NOT SHOWN:

FOOTNOTES:

NOTE:

COOLING SYSTEM - COOLER MOUNTING

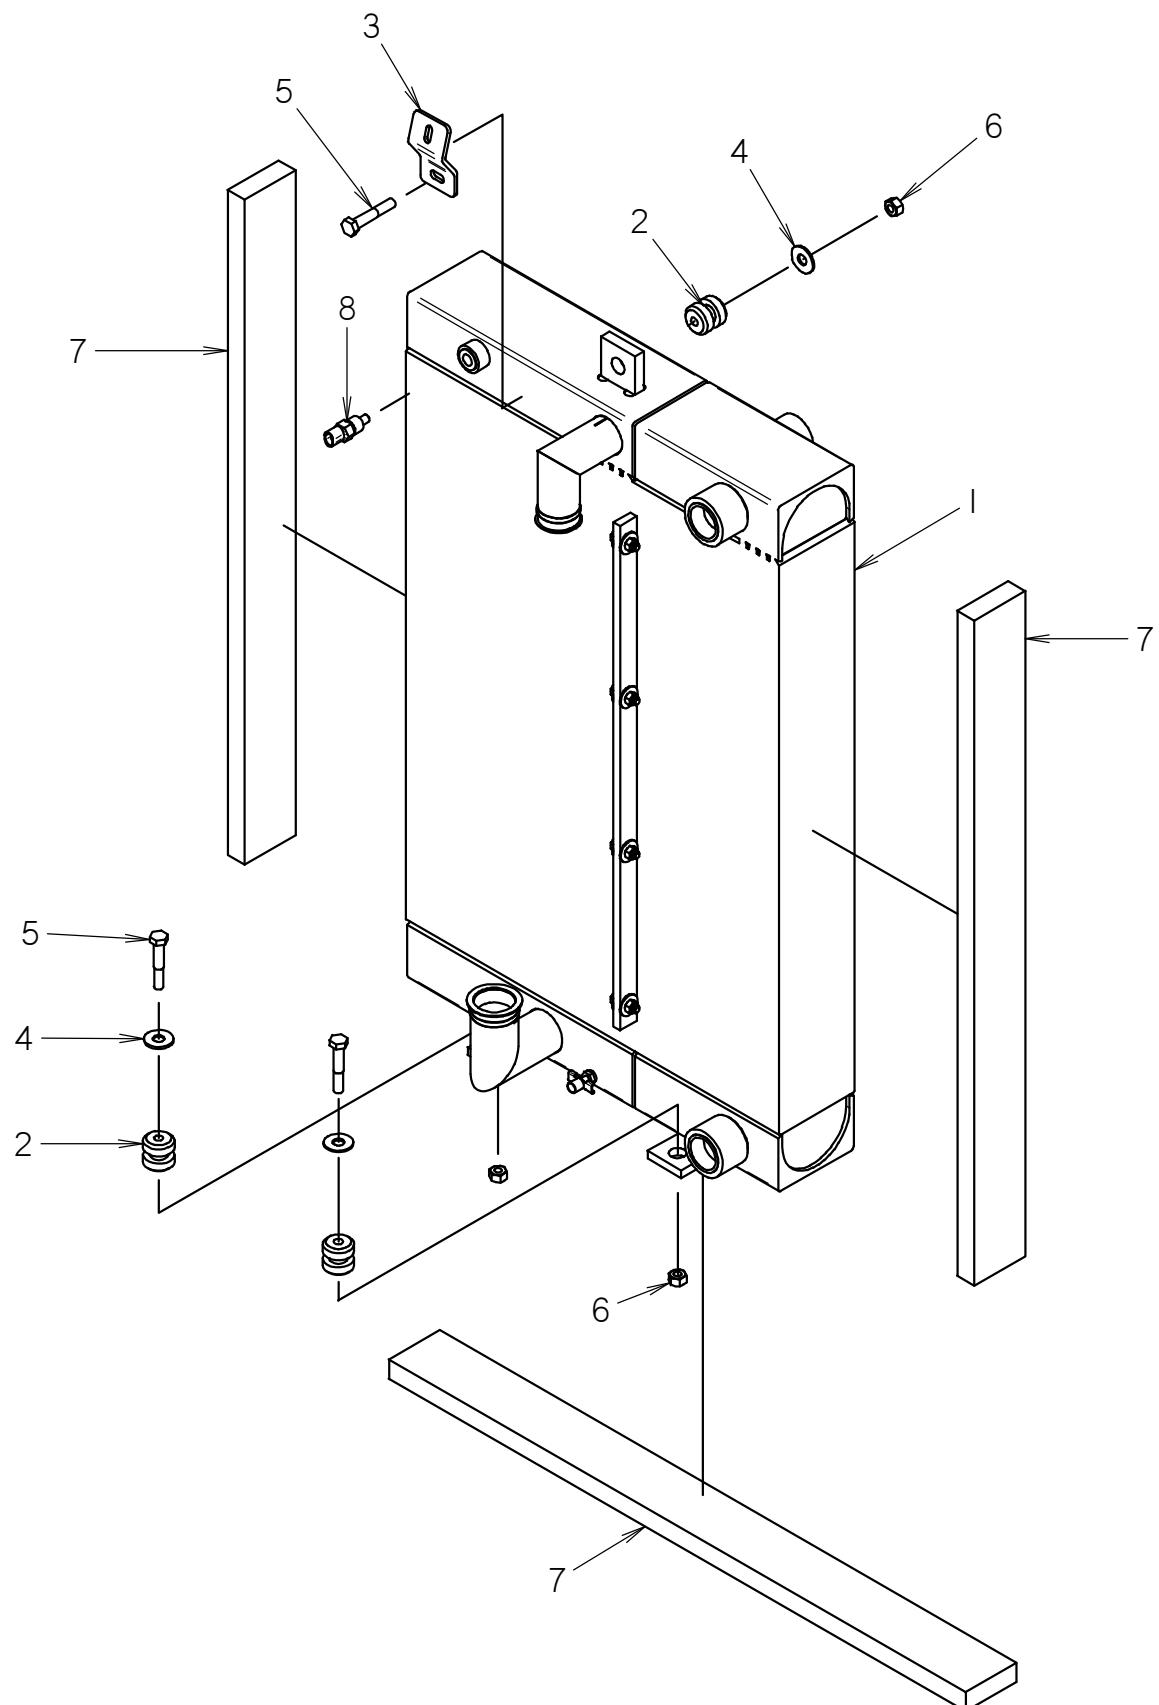

COOLING SYSTEM - COOLER MOUNTING

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------|
| 1 | I95-I359 | 1 | COOLER | |
| 2 | I16-I28 | 3 | SHOCK MOUNT | |
| 3 | 300-5380 | 1 | BRACKET | |
| 4 | I05-059 | 3 | WASHER (7/16") | |
| 5 | I06-628 | 3 | SCREW (M10-1.50 X 60MM) | |
| 6 | I05-894 | 3 | LOCKNUT(M10-1.50,PRV TRQ,10.9) | |
| 7 | I18-I68 | 3 | SOUND INSULATION | |
| 8 | I25-I434 | 1 | COOLANT TEMP SENSOR | |

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0226088

COOLING SYSTEM - RADIATOR PLUMBING

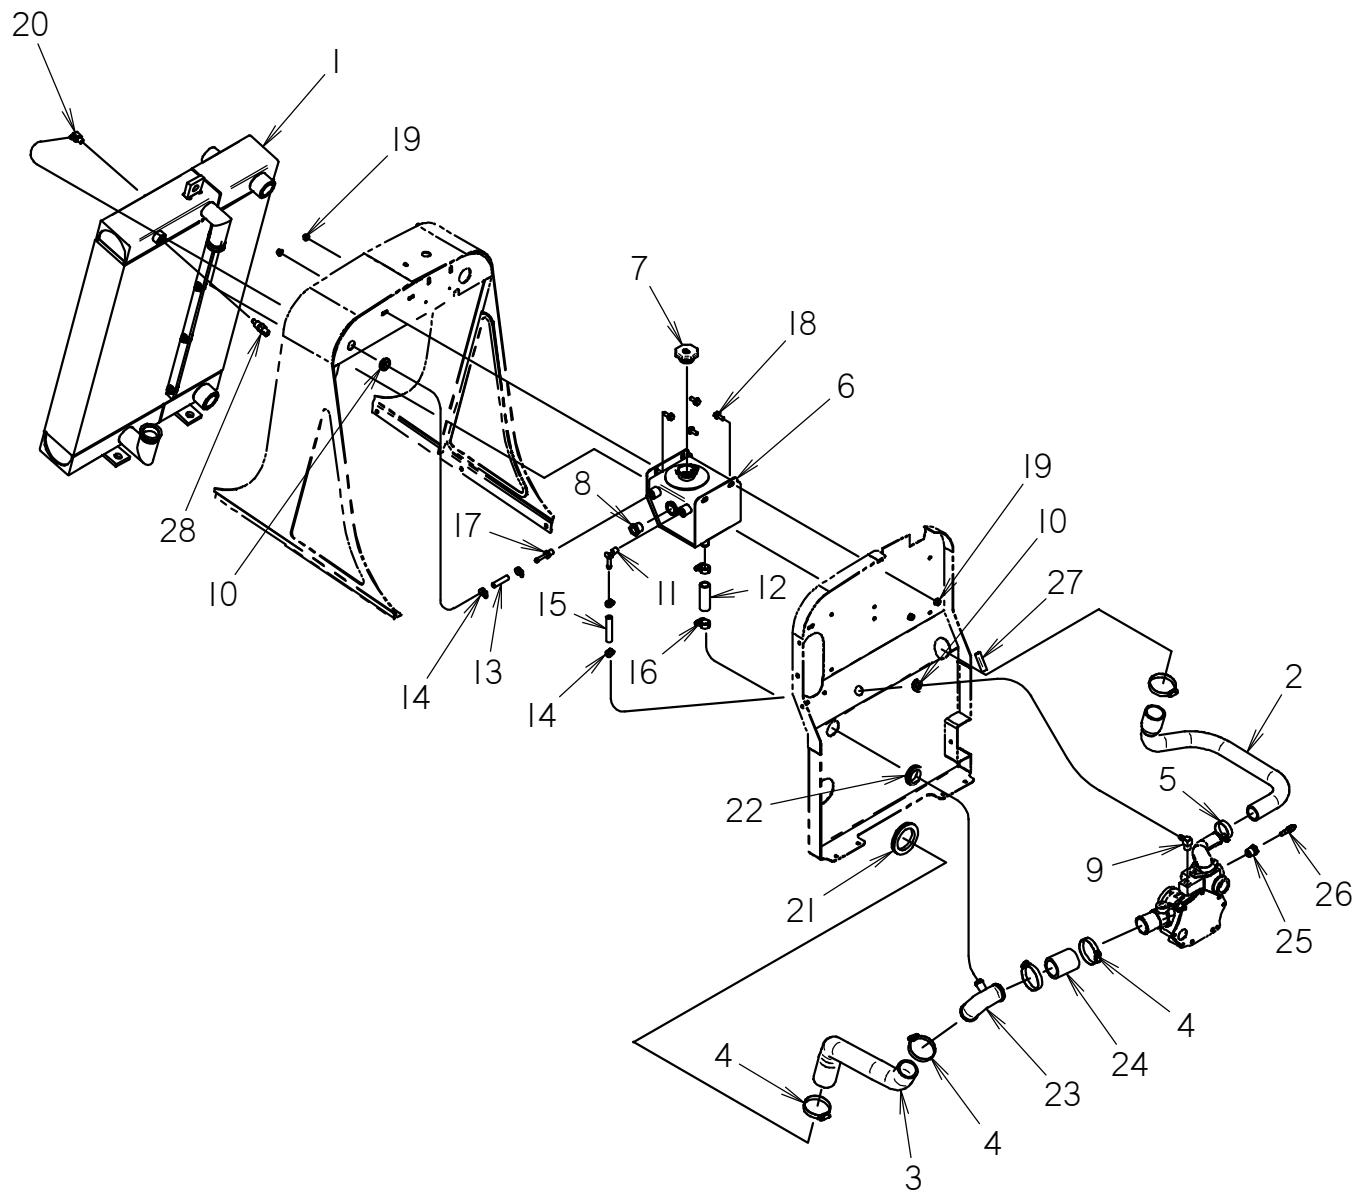

COOLING SYSTEM - RADIATOR PLUMBING


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------------|-------------------------------|
| 1 | 195-1359 | 1 | COOLER | |
| 2 | 195-1330 | 1 | RADIATOR HOSE - UPPER | |
| 3 | 195-1331 | 1 | RADIATOR HOSE - LOWER | |
| 4 | 110-134 | 5 | WORM CLAMP (2.062" TO 2.750") | |
| 5 | 110-133 | 1 | WORM CLAMP (1-1/16" TO 1-15/16") | |
| 6 | 300-5506 | 1 | EXPANSION TANK | |
| 7 | 111-084 | 1 | RADIATOR CAP (16 PSI) | |
| 8 | 110-549 | 1 | SIGHT GAUGE (12N) | |
| 9 | 153-871 | 1 | S/O COUPLER (06N-06H90, BRS) | |
| 10 | 115-069 | 2 | GROMMET (3/4") | |
| 11 | 115-288 | 1 | S/O COUPLER (04N-06H90) | |
| 12 | 116-751 | 19 | BULK HOSE (3/4", SOLD PER FT) | USE 1 @ 19" |
| 13 | 116-108 | 11 | BULK HOSE (5/16", SOLD PER FT) | |
| 14 | 110-249 | 4 | WORM CLAMP (1/4" TO 5/8") | |
| 15 | 116-881 | 15 | BULK HOSE (3/8", SOLD PER FT) | |
| 16 | 110-217 | 2 | WORM CLAMP (7/16" TO 1") | |
| 17 | 155-162 | 1 | S/O COUPLER (04N-05H) | |
| 18 | 106-162 | 4 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 19 | 106-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| 20 | 155-164 | 1 | S/O COUPLER (04N-05H90) | USE 567 LOCTITE OR EQUIVALENT |
| 21 | 105-1050 | 1 | GROMMET (2-1/2") | |
| 22 | 115-320 | 1 | GROMMET (1-1/2") | |
| 23 | 195-1448 | 1 | S/O COUPLER (28H-28H90-12H) | |
| 24 | 195-1452 | 3 | BULK HOSE (1-3/4 "SOLD PER FT) | USE 1 @ 3" |
| 25 | 217-247 | 1 | WATER TEMP ADAPTOR | |
| 26 | 217-565 | 1 | TEMPERATURE SENDER | |
| 27 | 115-686 | 8 | BULK EDGE (5/32", SOLD PER FT) | USE 1 @ 8" |
| 28 | 215-1434 | 1 | COOLANT TEMP SENSOR | |

NOT SHOWN:

FOOTNOTES:

NOTE:

COOLING SYSTEM - FAN ASSEMBLY

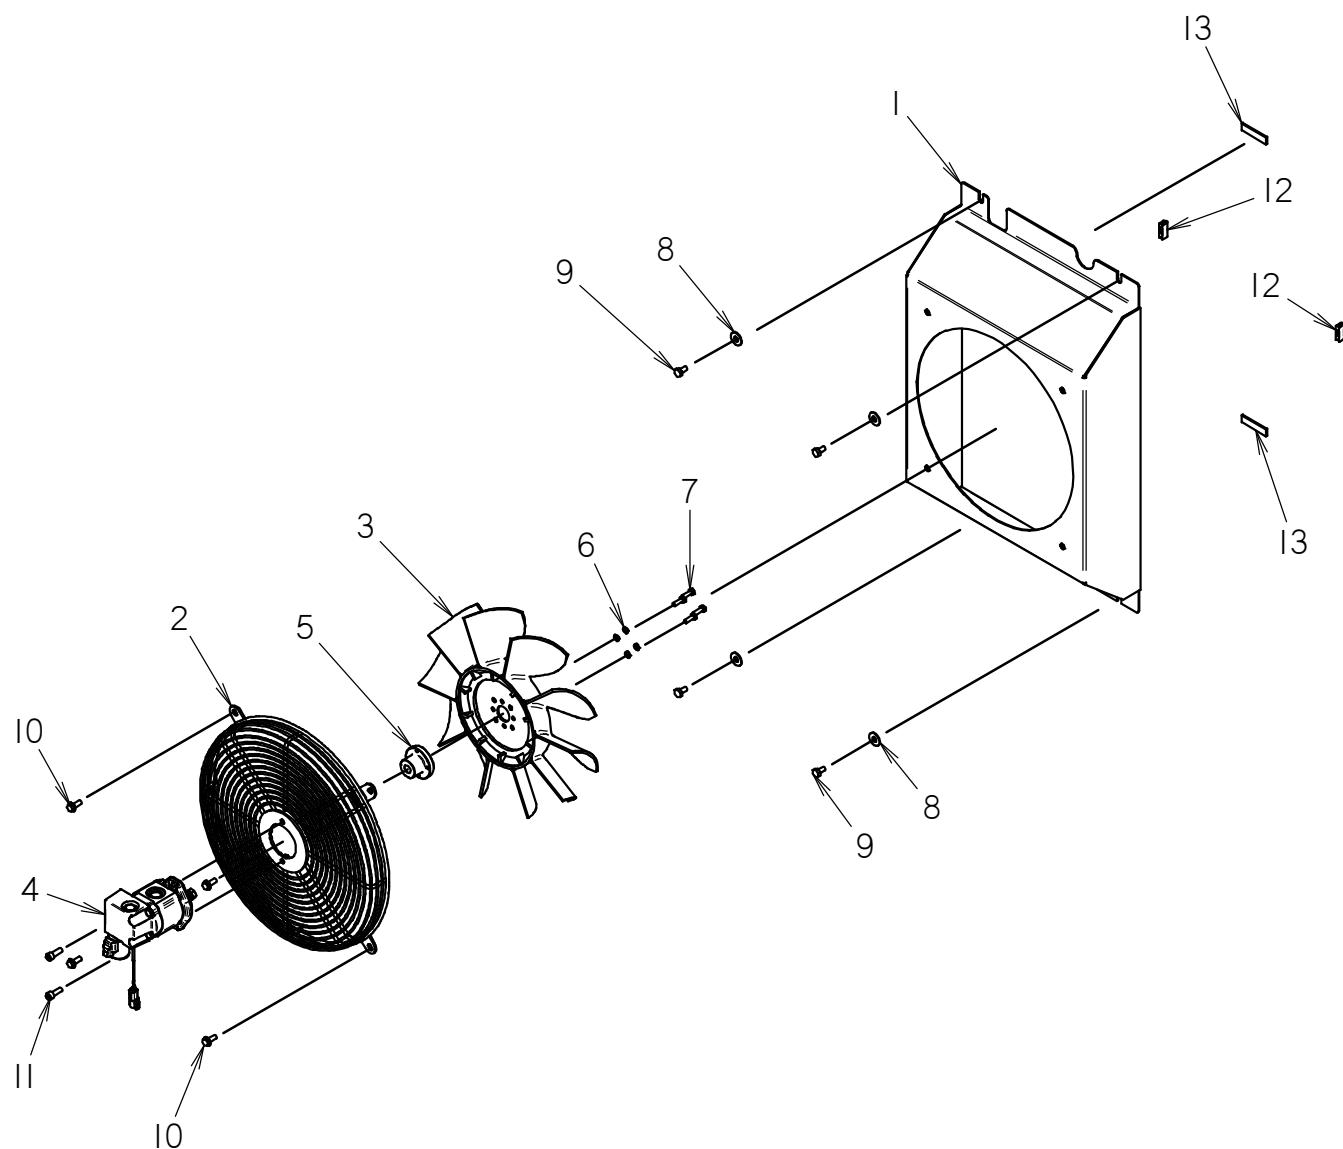

COOLING SYSTEM - FAN ASSEMBLY

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|-----------------------------------|
| 1 | 300-4822 | 1 | SHROUD | |
| 2 | I95-I355 | 1 | FAN GUARD | |
| 3 | I94-597 | 1 | FAN (I9") | |
| 4 | I50-2077 | 1 | HYDRAULIC GEAR MOTOR | SEE FOOTNOTE I FOR SERVICE PARTS. |
| 5 | I95-I358 | 1 | FAN HUB | SEE NOT SHOWN PARTS |
| 6 | I05-091 | 4 | LOCK WASHER (5/16") | |
| 7 | I05-806 | 4 | SCREW (M8-1.25 X 25MM) | TORQUE TO 20 FT-LBS |
| 8 | I05-059 | 4 | WASHER (7/16") | |
| 9 | I05-274 | 4 | SCREW (M10-1.50 X 20MM, I0.9) | |
| I0 | I06-724 | 4 | FLG SCREW (M10-1.50 X 25MM) | |
| I1 | I06-755 | 2 | SCREW (M10-1.50 X 30MM, SOC) | USE 242 LOCTITE OR EQUIVALENT |
| I2 | I16-421 | 60 | BULK EDGE (I/8", SOLD PER FT) | 2 @ 30" |
| I3 | I15-380 | 44 | WEATHER STRIP (3/8" X 3/4" IN) | 2 @ 22" |

NOT SHOWN:

I05-206 - NUT (I/2-NF)
 I05-070 - LOCKWASHER (I/2")


REPLACEMENT PART; TORQUE TO 80 FT-LBS
 REPLACEMENT PART

FOOTNOTES:

- I. 500-I316 - SEAL KIT
- 500-I317 - SOLENOID (PROPORTIONAL)
- 500-I318 - PROPORTIONAL RELIEF VALVE
- 500-I319 - SPEED SENSOR ASSEMBLY
- 500-2079 - SEAL WASHER

NOTE:

ENGINE THROTTLE

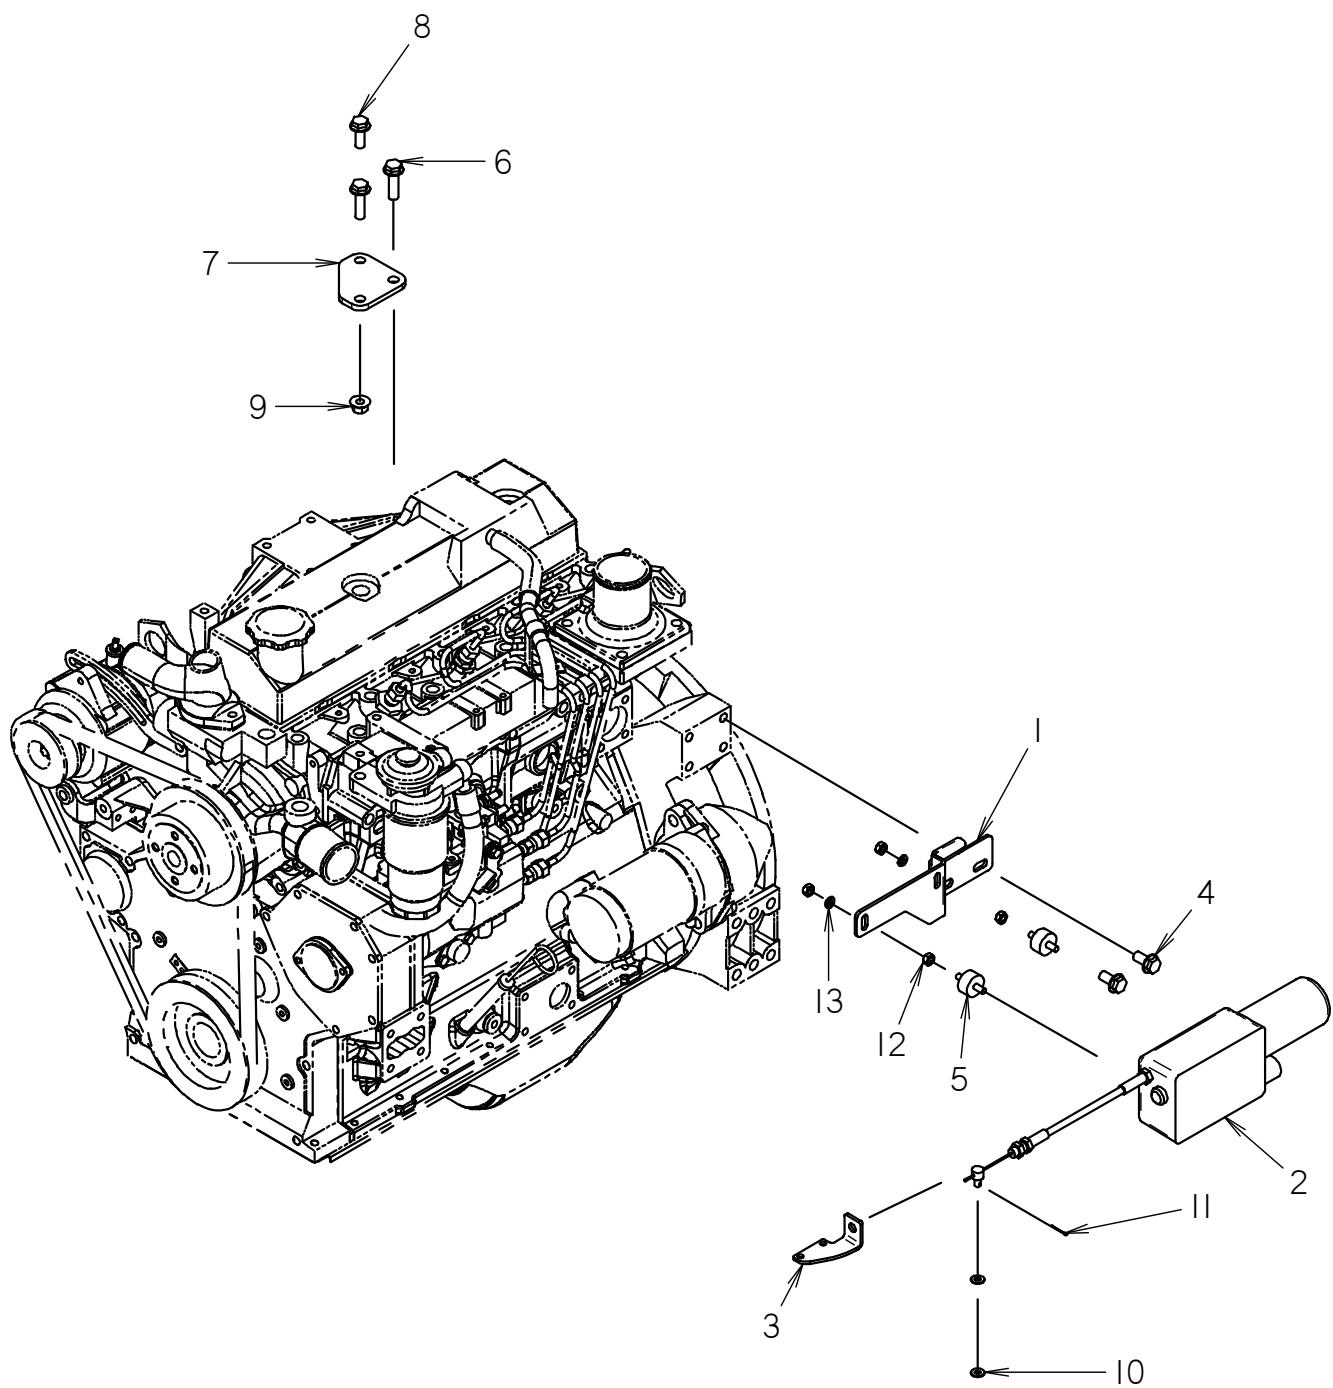

ENGINE THROTTLE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|-------------------------------|
| I | 300-5765 | 1 | MOUNT BRACKET | |
| 2 | 213-116 | 1 | LINEAR ACTUATOR | SEE FOOTNOTE I |
| 3 | 315-573 | 1 | THROTTLE BRACKET | |
| 4 | 106-382 | 2 | FLG LK SCREW (M10-1.50 X 20MM) | USE LOCTITE 242 OR EQUIVALENT |
| 5 | 300-5701 | 2 | MOUNT, RUBBER STOCK | USE LOCTITE 242 OR EQUIVALENT |
| 6 | 106-497 | 2 | FLG SCREW (M10-1.50 X 35MM) | |
| 7 | 300-7732 | 1 | SPACER | |
| 8 | 106-724 | 1 | FLG SCREW (M10-1.50 X 25MM) | |
| 9 | 106-387 | 1 | FLG LOCKNUT (M10-1.50) | |
| I0 | 105-284 | 2 | WASHER (3/16") | |
| I1 | 105-530 | 1 | COTTER PIN (1/16" X 3/4") | |
| I2 | 105-078 | 4 | NUT (1/4-NC) | |
| I3 | 105-079 | 2 | LOCK WASHER (1/4) | |


NOT SHOWN:

FOOTNOTES:

- I. 196-366 CABLE, LINEAR ACTUATOR

NOTE:

EXHAUST SYSTEM

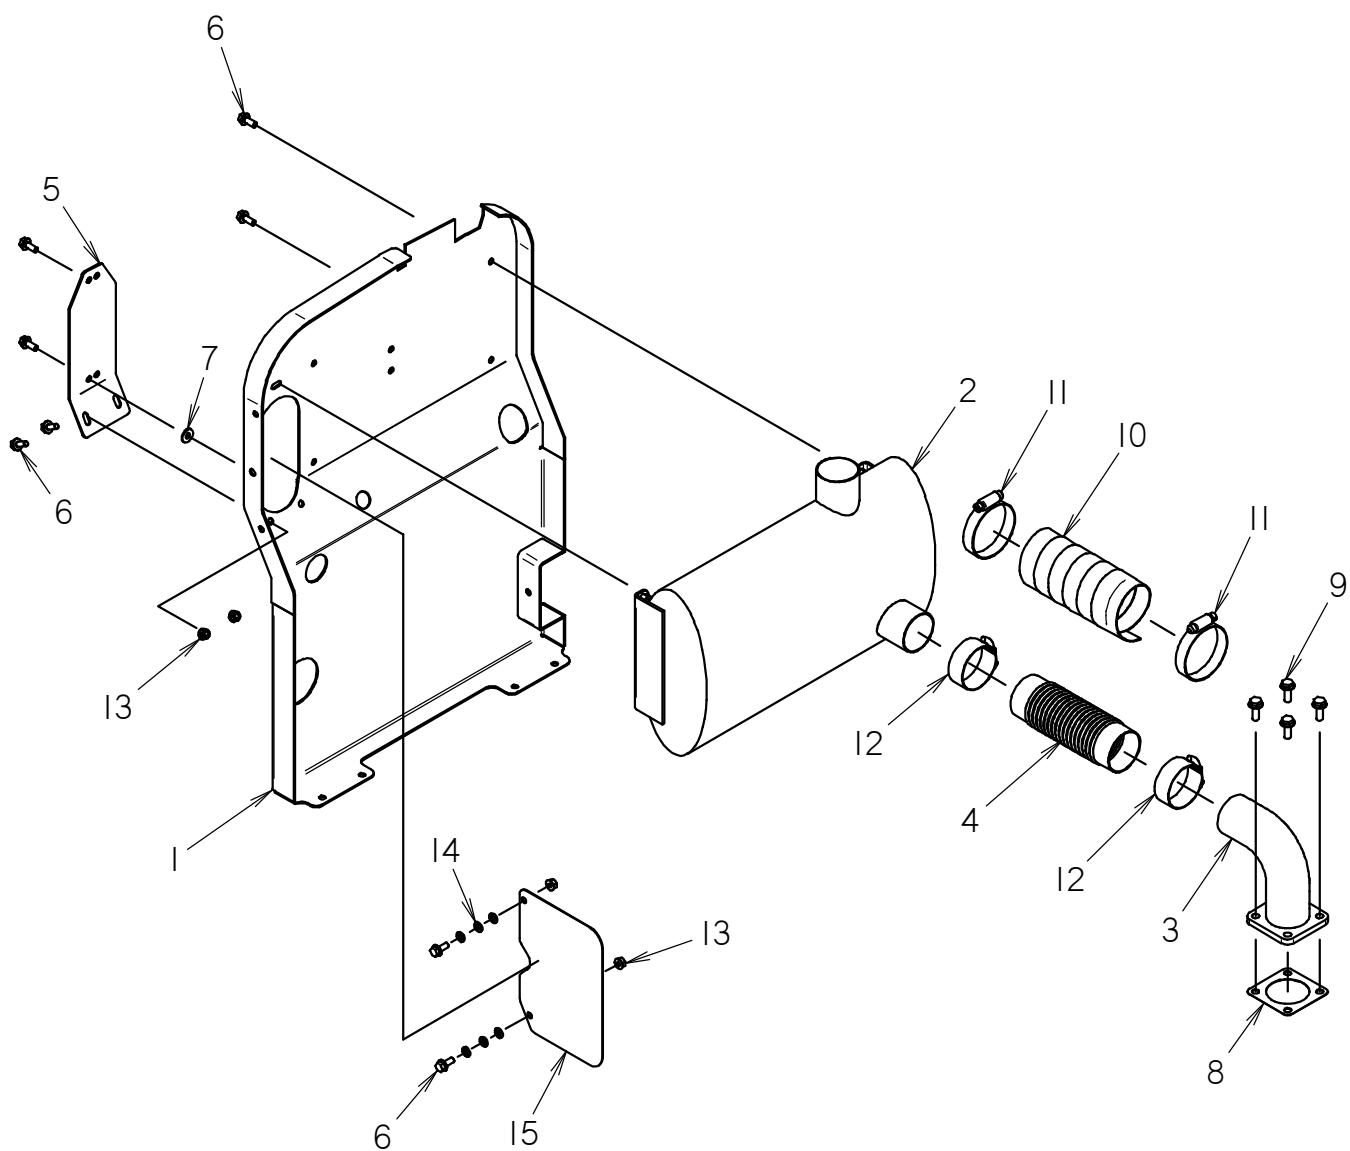

EXHAUST SYSTEM


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------------------|
| 1 | 300-5367 | 1 | MID FIREWALL | |
| 2 | I95-I360 | 1 | MUFFLER | |
| 3 | I95-I362 | 1 | EXHAUST ELBOW | |
| 4 | I95-I363 | 1 | EXHAUST FLEX TUBE | |
| 5 | 300-5400 | 1 | COVER PLATE | |
| 6 | I06-I62 | 8 | FLG SCREW M8-1.25 X 20MM, GD8 | |
| 7 | I05-I17 | 1 | WASHER (5/16") | |
| 8 | I94-446 | 1 | EXHAUST GASKET | |
| 9 | I06-724 | 4 | FLG SCREW M10-1.50 X 25MM | TORQUE TO 30 FT-LBS |
| I0 | I15-834 | 1 | EXHAUST WRAP (2", SOLD PER FT) | |
| I1 | I10-311 | 2 | WORM CLAMP (1-5/16" TO 3-1/4") | |
| I2 | I05-I350 | 2 | MUFFLER CLAMP (2.71") | |
| I3 | I06-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| I4 | I06-389 | 6 | WASHER (M8) | |
| I5 | 300-5751 | 1 | PLATE | |

NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE OIL SYSTEM

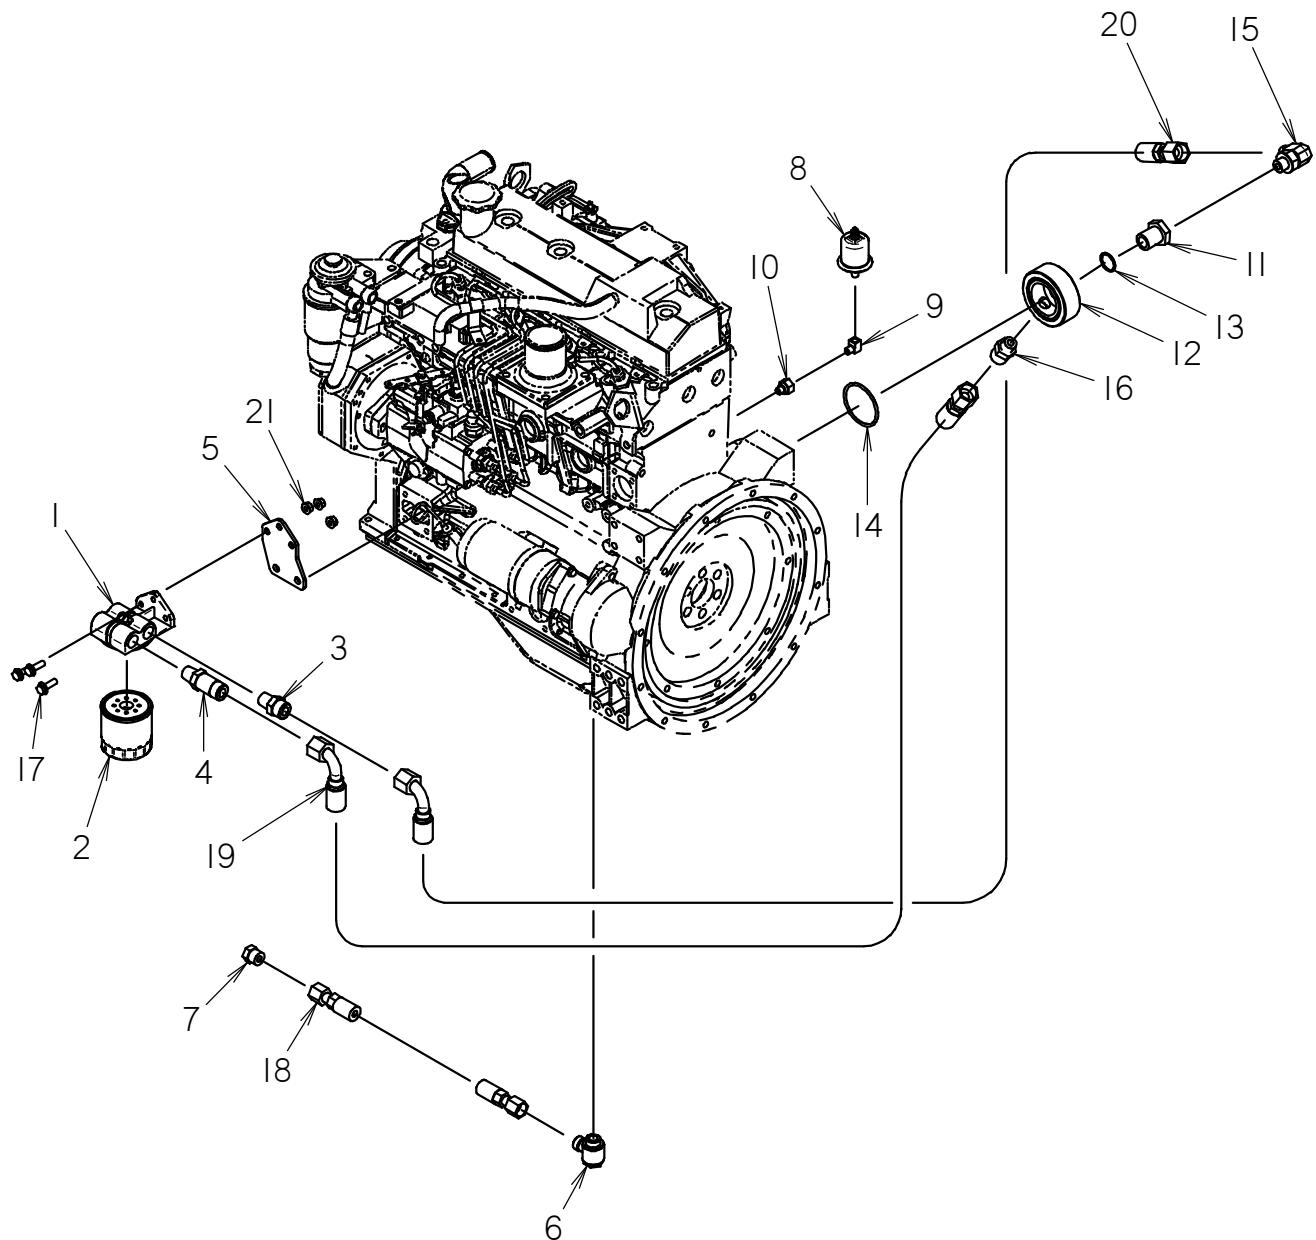

ENGINE OIL SYSTEM

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---|
| 1 | I94-514 | 1 | REMOTE FILTER HEAD | |
| 2 | I94-454 | 1 | ENGINE OIL FILTER | |
| 3 | I57-756 | 1 | CONNECTOR (I08N-100) | |
| 4 | I50-2080 | 1 | EXTENSION FITTING (I08N-100) | |
| 5 | 300-5404 | 1 | BRACKET | |
| 6 | I57-445 | 1 | BANJO FITTING (M22) | |
| 7 | I54-331 | 1 | PLUG (I80) | |
| 8 | I215-1583 | 1 | OIL PRESSURE SENDER (0-150 PSI) | BEGINS WITH S/N CMWJ2020HA0001165, SEE FOOTNOTE 1 & 2 |
| 9 | I56-241 | 1 | STREET ELBOW (I02N-02NF90) | SEE FOOTNOTE 2 |
| I0 | I14-033 | 1 | REDUCER (I10-I.00-02NF) | |
| I1 | I58-109 | 1 | FILTER MOUNT BOLT | |
| I2 | I58-108 | 1 | FILTER MOUNT FLANGE | |
| I3 | I58-110 | 1 | O-RING (I-120 D90) | |
| I4 | I57-020 | 1 | O-RING (I230 D90) | |
| I5 | I54-323 | 1 | CONNECTOR (I08S-I0090) | |
| I6 | I54-391 | 1 | CONNECTOR (I08S-100) | |
| I7 | I06-381 | 3 | FLG LK SCREW (M8-I.25 X 25MM) | |
| I8 | I54-711 | 1 | HOSE (I080FX-30"-3000) | |
| I9 | I50-2915 | 1 | HOSE (I000FX90S-32"-250) | |
| I20 | I50-2916 | 1 | HOSE (I000FX90S-36"-250) | |
| I21 | I06-386 | 3 | FLG LOCKNUT (M8-I.25) | |


NOT SHOWN:

FOOTNOTES:

- I. TO BE USED WITH 215-1582 OIL PRESSURE GAGE (0-150PSI). BEFORE S/N: CMWJ2020HA0001165 215-183 SENDER, OIL PRESSURE HD WAS USED WITH 215-1375 ANALOG OIL PRESSURE GAGE
2. USE LOCTITE 567 OR EQUIVALENT.

NOTE:

INTAKE SYSTEM

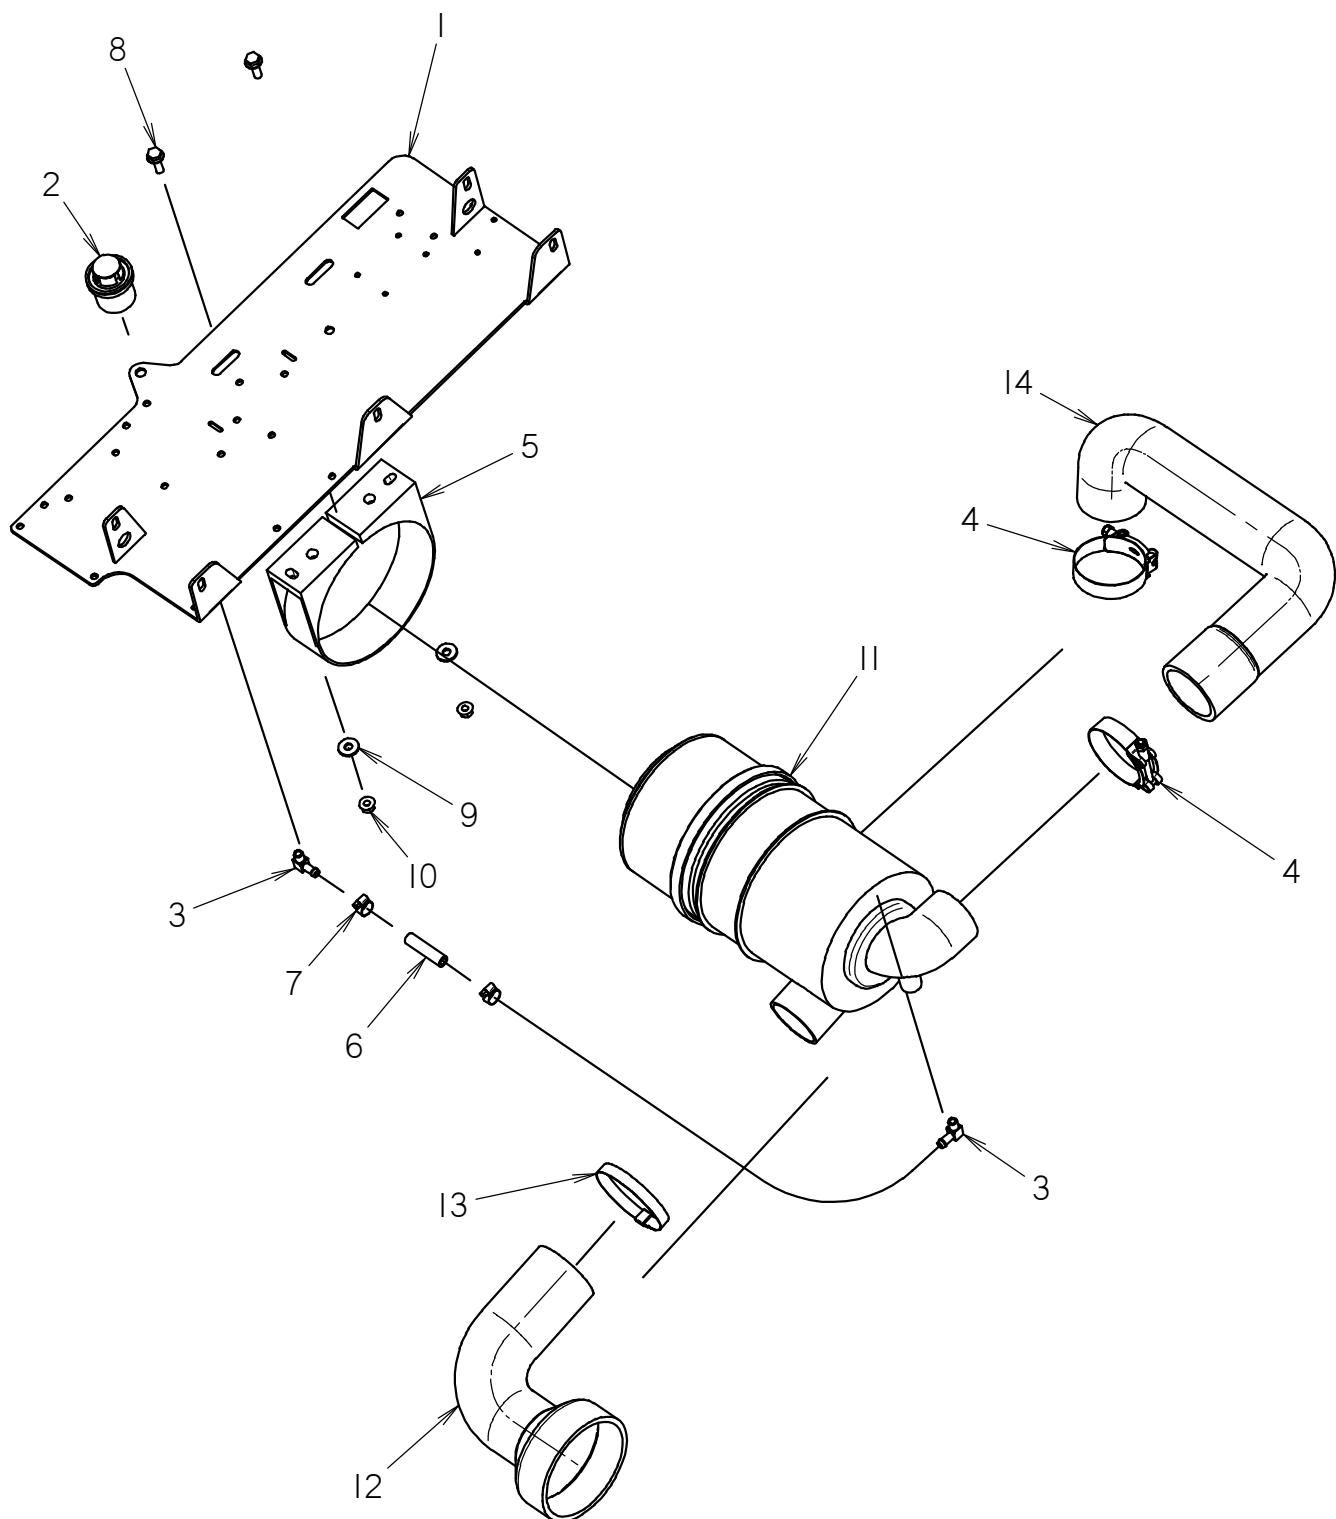

INTAKE SYSTEM


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--|---------|
| I | 300-7238 | 1 | CONTROLLER MOUNT | |
| 2 | I95-1345 | 1 | GRADUATED RESTRICTION INDICATOR (25"H20) | |
| 3 | I55-241 | 2 | S/O COUPLER (I02N-05H90) | |
| 4 | I57-908 | 2 | T-BOLT CLAMP (2.8125-3.187) | |
| 5 | I49-165 | 1 | MOUNTING CLAMP (6.79") | |
| 6 | I16-108 | 15 | BULK HOSE (5/16", SOLD PER 1") | |
| 7 | I10-249 | 2 | WORM CLAMP (1/4" TO 5/8") | |
| 8 | I06-381 | 2 | FLG LK SCREW (M8-1.25 X 25MM) | |
| 9 | I05-117 | 2 | WASHER (5/16") | |
| I0 | I06-386 | 2 | FLG LOCKNUT (M8-1.25) | |
| II | I94-297 | 1 | AIR FILTER | |
| I2 | I95-1365 | 1 | AIR INTAKE HOSE | |
| I3 | I10-169 | 1 | WORM CLAMP (2.812" TO 3.750") | |
| I4 | I17-851 | 1 | AIR INTAKE HOSE | |

NOT SHOWN:

FOOTNOTES:

NOTE:

ELECTRICAL MOUNTING

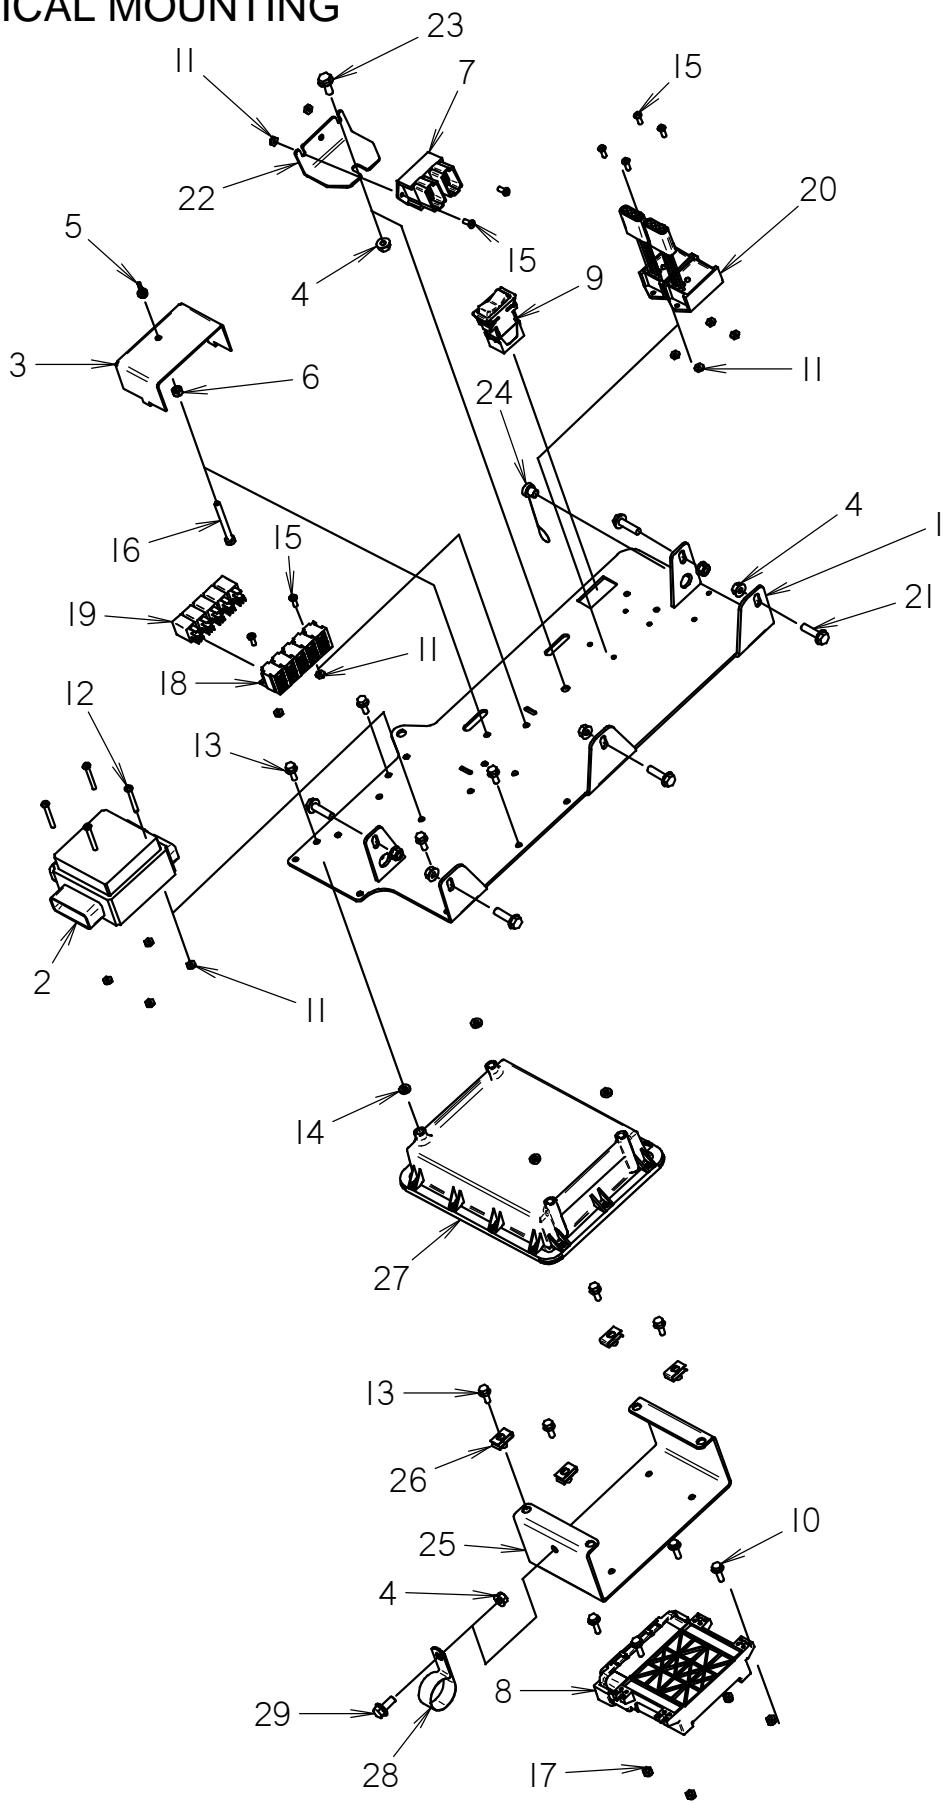

ELECTRICAL MOUNTING

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|--------------------------|
| 1 | 300-7238 | 1 | CONTROLLER MOUNT | |
| 2 | 214-905 | 1 | BUSSMAN V.E.C. | REPLACEMENT LID 500-1859 |
| 3 | 300-7593 | 1 | COVER | |
| 4 | I06-386 | 7 | FLG LOCKNUT (M8-1.25) | |
| 5 | I95-339 | 1 | WING NUT (1/4-NC) | |
| 6 | I05-078 | 1 | NUT (1/4-NC) | |
| 7 | 2II-026 | 1 | DIODE PACK (DEUTSCH) | |
| 8 | 220-1240 | 1 | I8-PIN CONTROLLER V3 | SEE FOOTNOTE I |
| 9 | 217-907 | 1 | ROCKER SWITCH (DPDT) ON-ON | |
| 10 | I06-161 | 4 | FLG SCREW (M6-1.00 X 20MM) | |
| 11 | I06-048 | 12 | LOCKNUT (#10-24) | |
| 12 | I05-816 | 4 | SCREW (#10-24 X 1-1/2" PAN SLT) | |
| 13 | I06-712 | 8 | FLG SCREW (M6-1.00 X 16MM) | |
| 14 | I55-751 | 4 | WASHER (1/4", NEOPRENE) | |
| 15 | I05-185 | 8 | BOLT (#10-24 X 1/2", RD SLT) | |
| 16 | I08-116 | 1 | SCREW (1/4-NC X 2-1/2", GD5) | |
| 17 | I06-237 | 4 | LOCKNUT (M6-1.00, PRV TRQ,NLK) | |
| 18 | 217-194 | 5 | MICRO RELAY BASE | |
| 19 | 217-710 | 5 | MICRO RELAY (SPDT) | |
| 20 | 217-184 | 2 | DELAY TIMER (2-SECOND) | |
| 21 | I06-163 | 5 | FLG SCREW (M8-1.25 X 30MM) | |
| 22 | 322-860 | 1 | DIODE BRACKET | |
| 23 | I06-991 | 1 | FLG LK SCREW (M8-1.25 X 20MM) | |
| 24 | 2II-078 | 1 | CONNECTOR CAP (TURCK RS-CC) | |
| 25 | 300-5681 | 1 | BRACKET | |
| 26 | I06-574 | 4 | CLIP NUT (M6-1.00) | |
| 27 | 220-I023 | 1 | JT CONTROLLER 2 | |
| 28 | I10-332 | 1 | BOLT-ON CLAMP (1-5/8") | |
| 29 | I06-162 | 1 | FLG SCREW (M8-1.25 X 20MM, GD8) | |


NOT SHOWN:

FOOTNOTES:

- I. BEGINS WITH S/N: CMW_____ FOR THE JTI220 AND S/N: CMW_____ FOR THE JT2020. OLDER UNITS CAN USE 220-1240 AS A REPLACEMENT FOR 220-I073.

NOTE:

GLOW PLUG CONTROLS

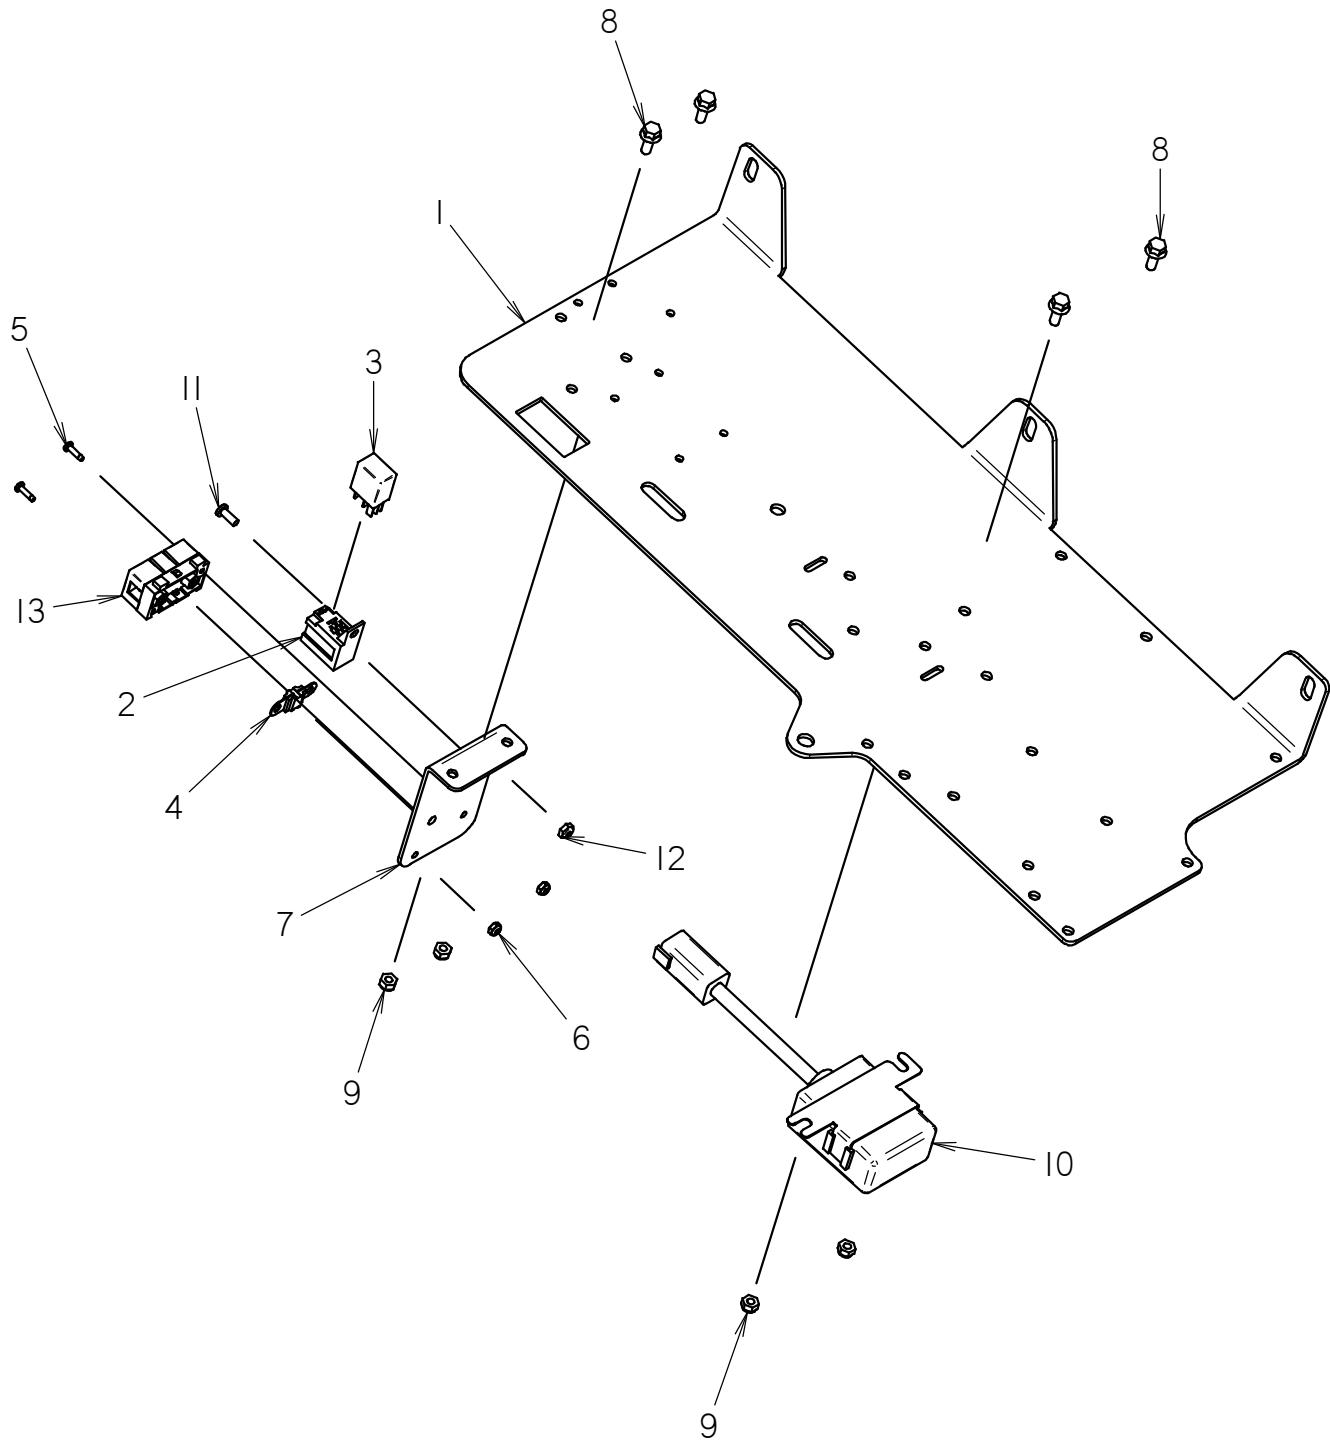

GLOW PLUG CONTROLS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------|
| I | 300-7238 | 1 | CONTROLLER MOUNT | |
| 2 | 217-194 | 1 | MICRO RELAY BASE | |
| 3 | 217-710 | 1 | MICRO RELAY (SPDT) | |
| 4 | 211-317 | 1 | BK/AMI 50 AMP FUSE | |
| 5 | I05-189 | 2 | SCREW (#6-32 X 1/2") | |
| 6 | I07-859 | 2 | NUT, LOCK, #6-32, NYLON INSERT | |
| 7 | 300-8794 | 1 | BRACKET | |
| 8 | I06-712 | 4 | FLG SCREW (M6-1.00 X 16MM) | |
| 9 | I06-237 | 4 | LOCKNUT (M6-1.00, PRV TRQ,NLK) | |
| I0 | I95-1473 | 1 | HEATER CONTROL MODULE | |
| II | I05-185 | 1 | BOLT (#10-24 X 1/2", RD SLT) | |
| I2 | I06-048 | 1 | LOCKNUT (#10-24) | |
| I3 | 363-714 | 1 | MODIFIED FUSE PANNEL ASSEMBLY | |

NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE SKID

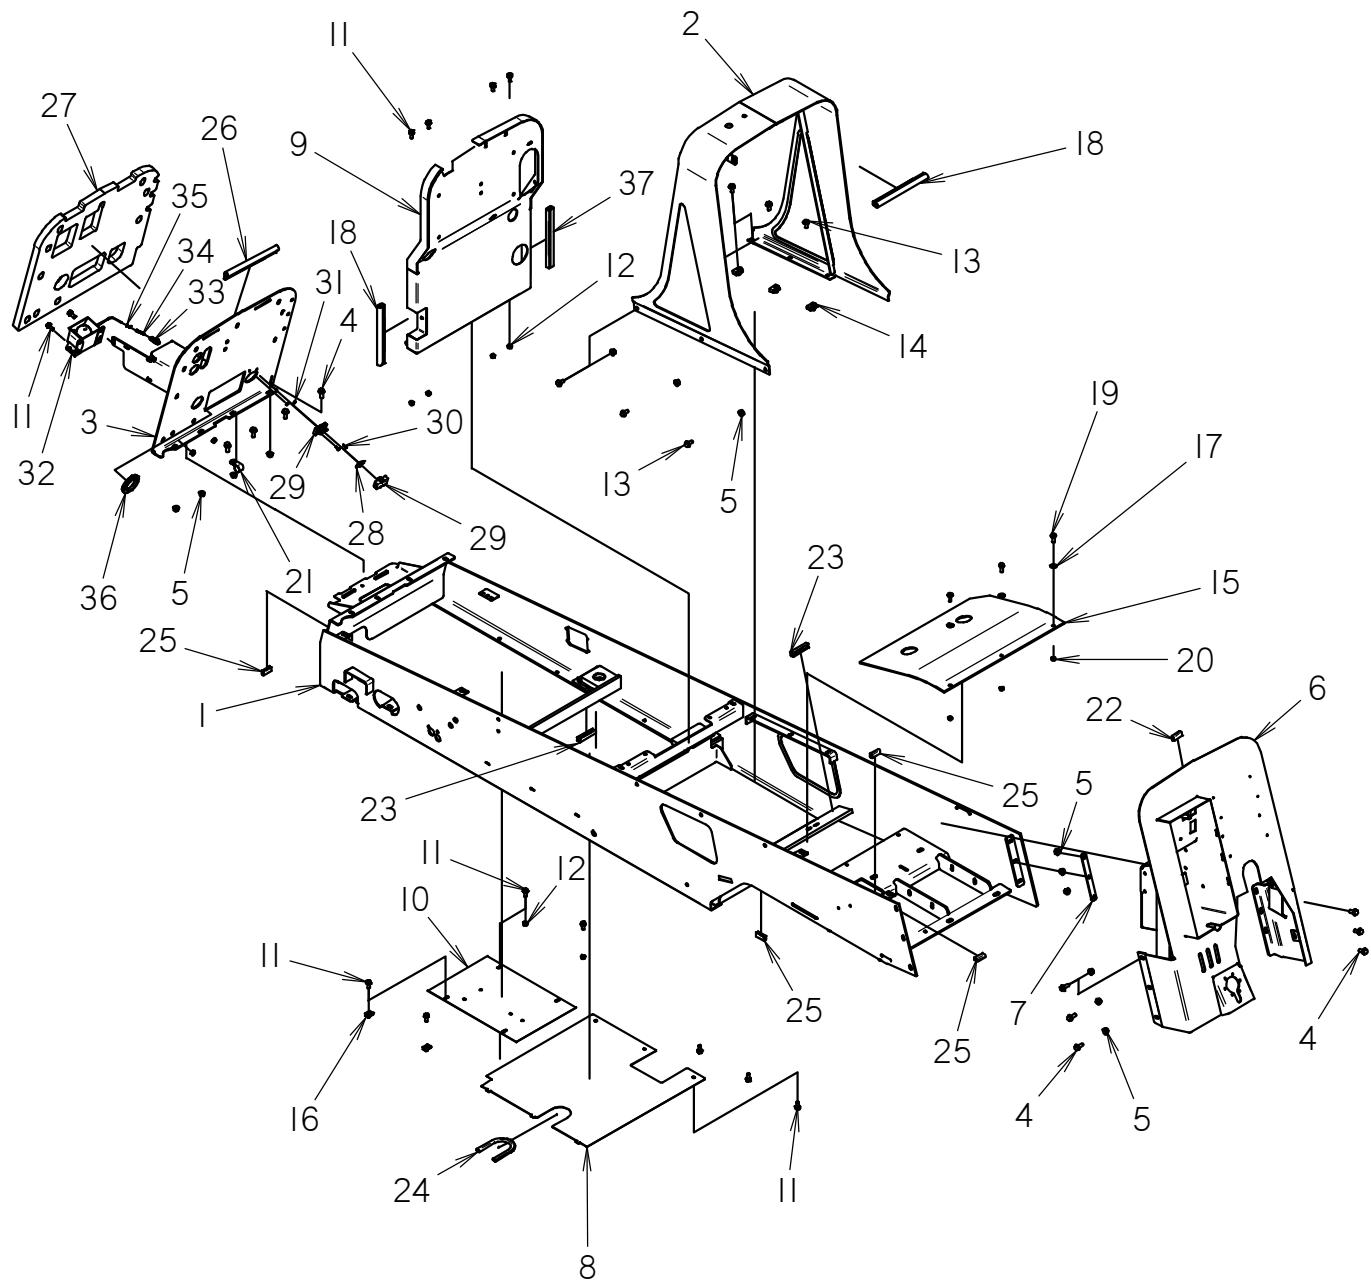

ENGINE SKID


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------------|--------------------------------|
| 1 | 300-4423 | 1 | ENGINE SKID | |
| 2 | 300-4434 | 1 | CENTER MOUNT | |
| 3 | 318-998 | 1 | FRONT MOUNT | |
| 4 | I06-724 | 10 | FLG SCREW (M10-1.50 X 25MM) | |
| 5 | I06-387 | 13 | FLG LOCKNUT (M10-1.50) | |
| 6 | 300-4441 | 1 | BACK PLATE | |
| 7 | 318-985 | 1 | SPACER | |
| 8 | 300-8452 | 1 | FLOOR PLATE | |
| 9 | 300-5367 | 1 | MID FIREWALL | |
| 10 | 320-405 | 1 | COVER PLATE | |
| 11 | I06-162 | 13 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 12 | I06-386 | 8 | FLG LOCKNUT (M8-1.25) | |
| 13 | I06-382 | 6 | FLG LK SCREW (M10-1.50 X 20MM) | |
| 14 | I07-287 | 3 | CLIP NUT (M10-1.50) | |
| 15 | 362-1346 | 1 | FLAP | |
| 16 | I06-551 | 2 | CLIP NUT (M8-1.25) | |
| 17 | I05-I17 | 3 | WASHER (5/16") | |
| 18 | I16-489 | 49 | BULK EDGE (1/8", SOLD PER FT) | VARIOUS QUANTITIES AND LENGTHS |
| 19 | I06-381 | 3 | FLG LK SCREW (M8-1.25 X 25MM) | |
| 20 | I07-096 | 3 | LOCKNUT (M8-1.25, NLK) | |
| 21 | I10-333 | 1 | BOLT-ON CLAMP (1") | |
| 22 | I16-421 | 69 | BULK EDGE (1/8", SOLD PER FT) | 1 @ 69" |
| 23 | I16-259 | 17 | BULK EDGE (1/2", SOLD PER FT) | VARIOUS QUANTITIES AND LENGTHS |
| 24 | I15-686 | 11 | BULK EDGE (5/32", SOLD PER 1") | 1 @ 11" |
| 25 | I15-704 | 52 | BULK EDGE (1/4", SOLD PER 1") | VARIOUS QUANTITIES AND LENGTHS |
| 26 | I16-978 | 61 | BULK EDGE (1/4", SOLD PER FT) | 1 @ 61" |
| 27 | I18-165 | 1 | SOUND INSULATION | |
| 28 | 211-305 | 1 | BK/AMI 125 AMP FUSE | |
| 29 | 363-714 | 1 | MODIFIED FUSE PANNEL ASSEMBLY | |
| 30 | I05-189 | 2 | SCREW (#6-32 X 1/2") | |
| 31 | I05-215 | 2 | NUT (#6-32) | |
| 32 | 306-602 | 1 | ALARM | |
| 33 | 214-103 | 1 | (2-WAY) MALE CONNECTOR | |
| 34 | 214-104 | 2 | PACKARD MALE TERMINAL | |
| 35 | I57-645 | 2 | WEATHER-PAC SEAL (2.80MM) | |
| 36 | I15-686 | 5 | BULK EDGE (5/32", SOLD PER 1") | 1 @ 5" |
| 37 | I17-978 | 77 | BULK EDGE (3/16 W/ 1" BULB) (FT) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

BATTERY

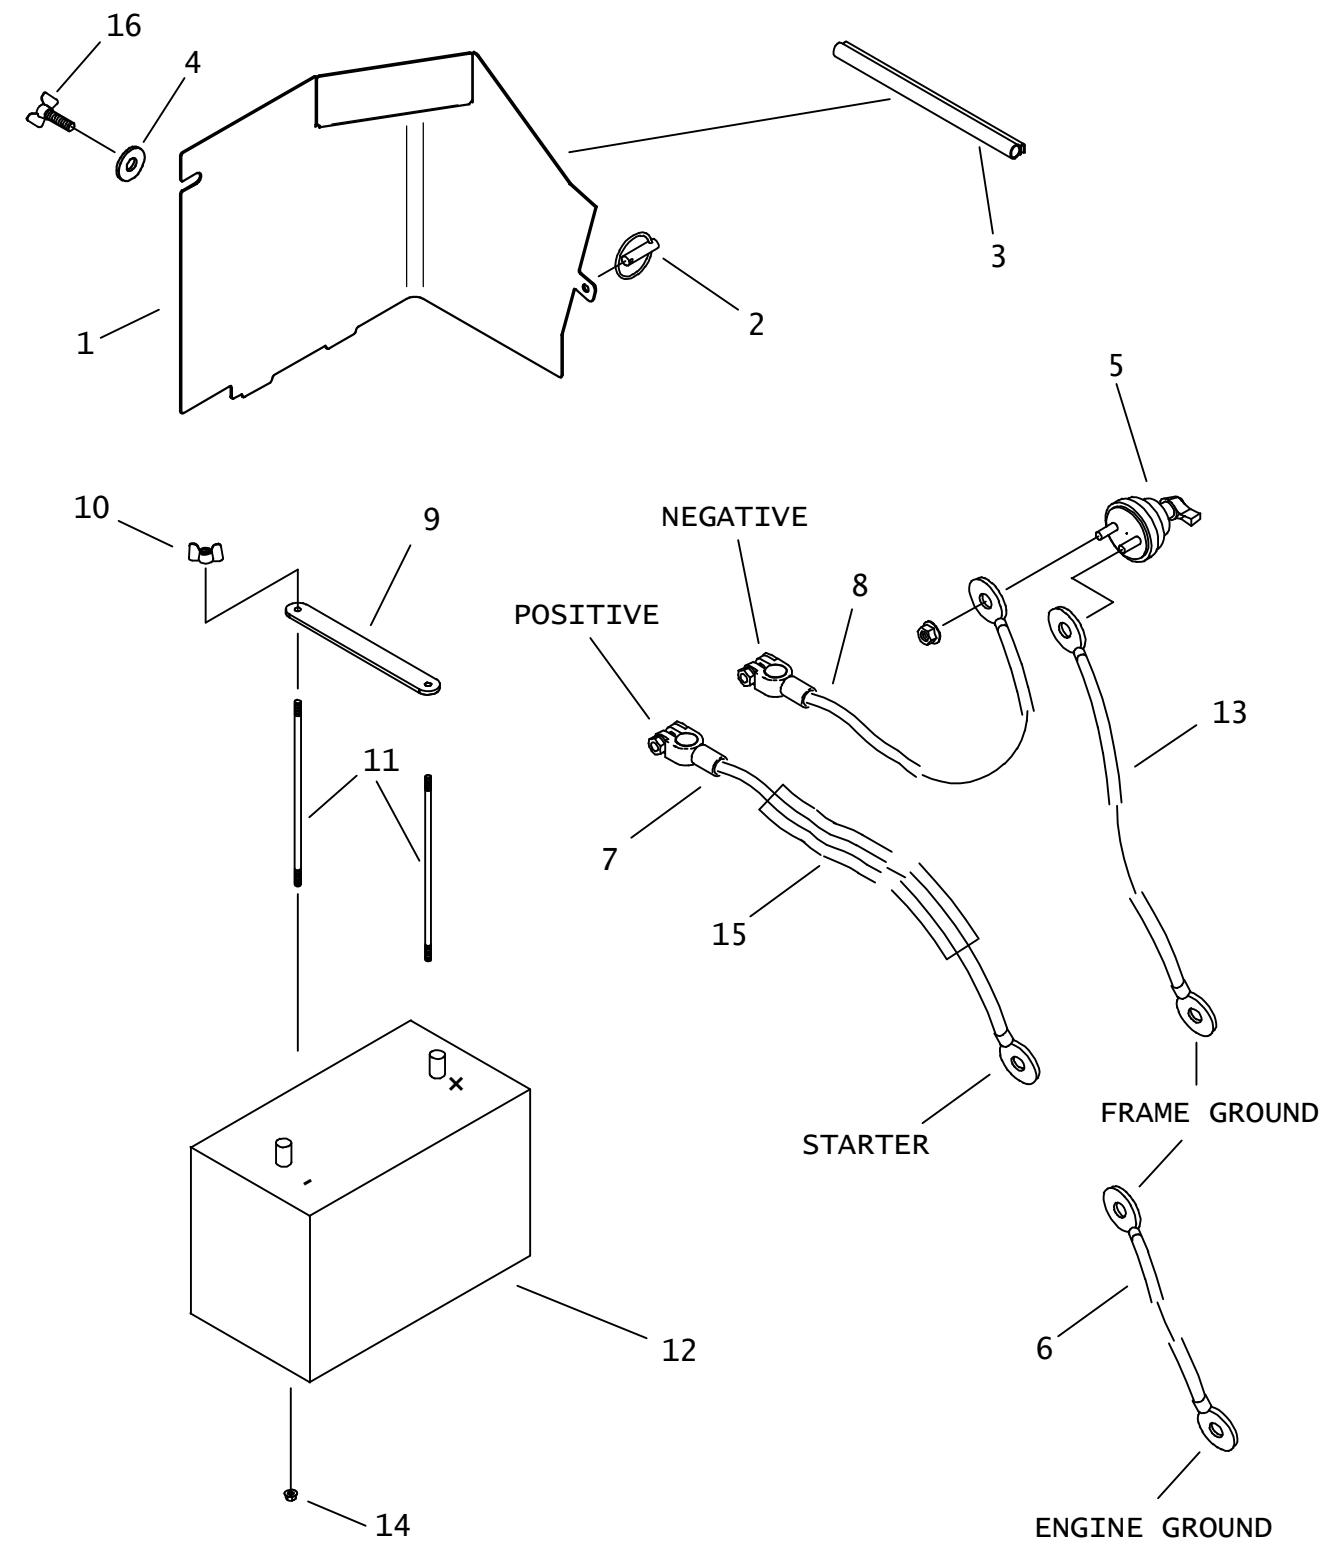

BATTERY


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|------------------------|
| 1. | 300-5418 | 1 | BATTERY COVER | |
| 2. | 110-737 | 1 | PULL PIN (5/16" X 2") | |
| 3. | 116-421 | AR | BULK EDGE (1/8", SOLD PER FT) | USE 1 @ 22" |
| 4. | 105-117 | 1 | WASHER (5/16") | |
| 5. | 217-819 | 1 | BATTERY DISCONNECT SWITCH | |
| 6. | 215-355 | 1 | BAT CABLE (2/0 GA X 36", BLK) | |
| 7. | 213-159 | 1 | BAT CABLE (2/0 GA X 63", RED) | |
| 8. | 215-337 | 1 | BAT CABLE (2/0 GA X 19", BLK) | |
| 9. | 108-189 | 1 | BATTERY HOLD DOWN | |
| 10. | 195-339 | 2 | WINGNUT (1/4-NC) | |
| 11. | 356-491 | 2 | TIE DOWN ROD (1/4-NC X 9.3") | |
| 12. | 215-262 | 1 | BATTERY (12V, 925 AMP) | |
| 13. | 215-1562 | 1 | BAT CABLE (2/0 GA X 28", BLACK) | |
| 14. | 105-832 | 2 | FLG LOCKNUT (1/4-NC) | |
| 15. | 116-389 | AR | BULK TUBING (3/4". SOLD PER FT) | INCLUDED WITH REF NO 7 |
| 16. | 106-795 | 1 | WING SCREW (M8-1.25 X 20MM) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

REAR CONTROLS

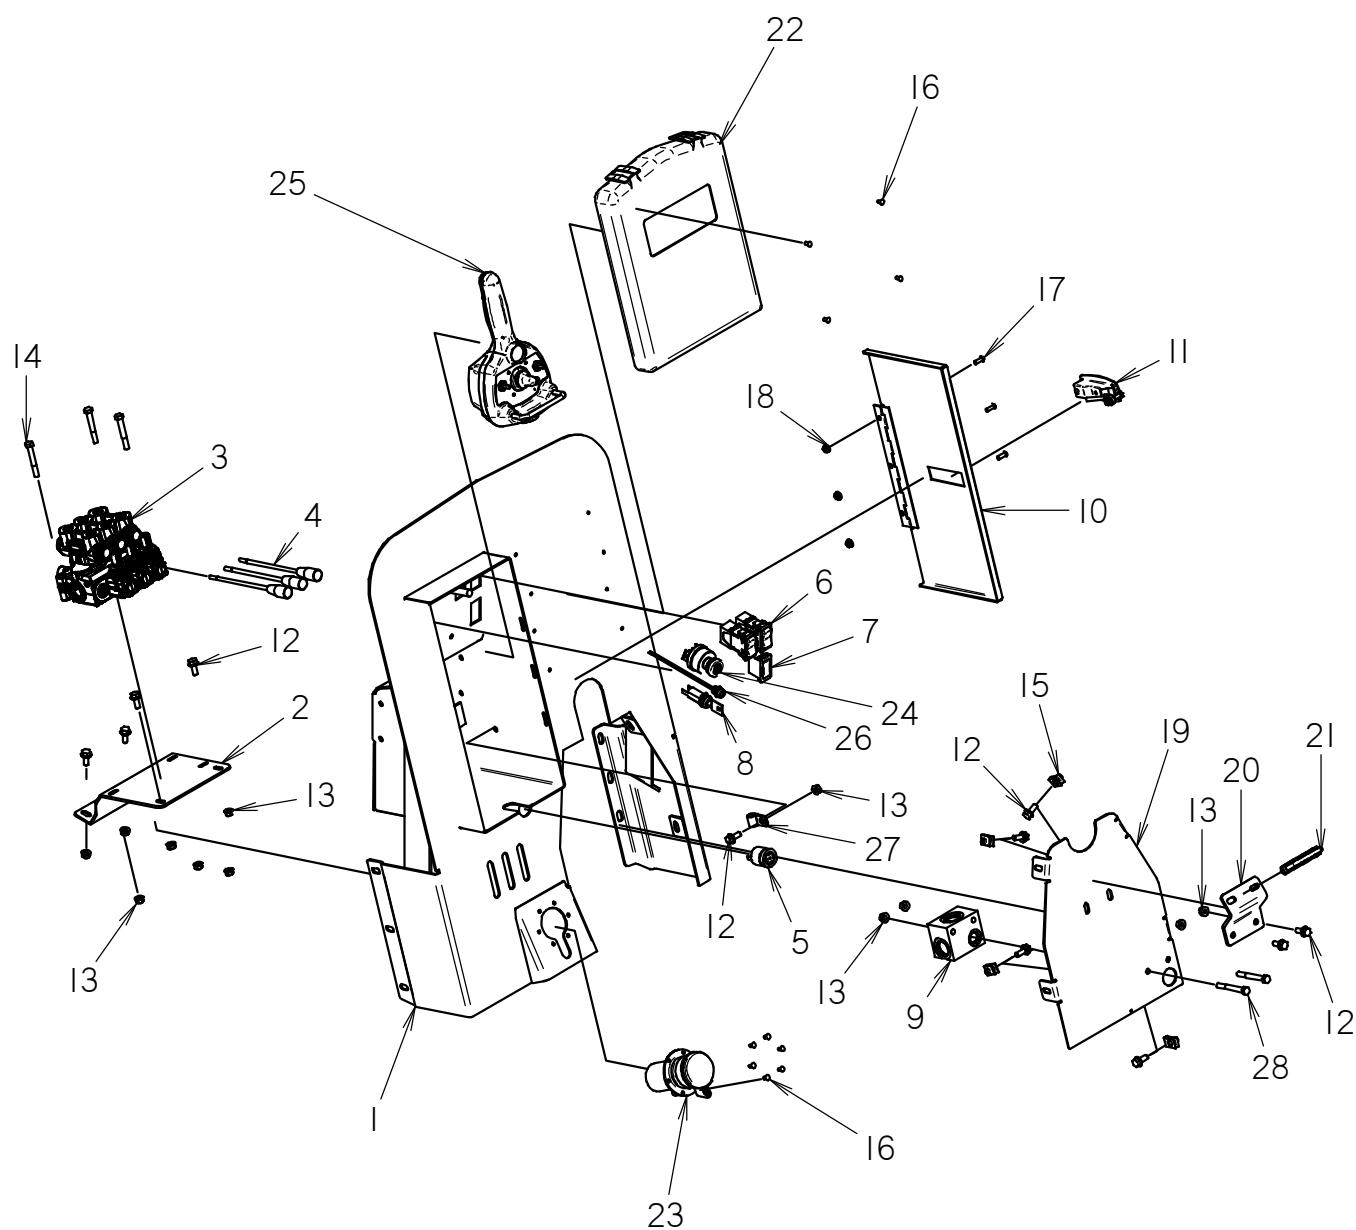

REAR CONTROLS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| 1 | 300-444I | 1 | BACK PLATE | |
| 2 | 318-476 | 1 | VALVE MOUNT | |
| 3 | I57-240 | 1 | SET UP VALVE | |
| 4 | 365-426 | 3 | LEVER (M8-1.25 X 200MM) | |
| 5 | 306-603 | 1 | AUDIO ALARM | |
| 6 | 214-489 | 2 | ROCKER SW (DPDT) (ON)-OFF-(ON) | |
| 7 | I10-962 | 1 | FILLER PLUG | |
| 8 | 214-908 | 1 | ON-OFF KEY SWITCH | |
| 9 | I59-79I | 1 | HYDRAULIC MANIFOLD BLOCK | |
| I0 | 318-736 | 1 | DOOR | |
| I1 | I17-558 | 1 | LATCH, ADJUST LEVER (LOCKING) | |
| I2 | I06-162 | 11 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| I3 | I06-386 | 12 | FLG LOCKNUT (M8-1.25) | |
| I4 | I06-570 | 3 | SCREW (M8-1.25 X 60MM) | |
| I5 | I06-551 | 4 | CLIP NUT (M8-1.25) | |
| I6 | I10-560 | 10 | POP RIVET (3/16" X 1/2", ALUM) | |
| I7 | I07-193 | 3 | SCREW (M6-1.00 X 16MM,BUT SOC) | |
| I8 | I06-385 | 3 | FLG LOCKNUT (M6-1.00) | |
| I9 | 324-959 | 1 | COVER PLATE | |
| I20 | 322-614 | 1 | CLAMP BRACKET | |
| I21 | I95-972 | 1 | U-BOLT CLAMP (1-3/4") | |
| I22 | 318-588 | 1 | MANUAL COMPARTMENT | |
| I23 | 364-66I | 1 | FILLER NECK | |
| I24 | 214-852 | 1 | IGNITION SWITCH | |
| I25 | 214-589 | 1 | GROUND DRIVE CONTROL | |
| I26 | 214-563 | 1 | RED LED (12V DC) | |
| I27 | I10-I26 | 1 | BOLT-ON CLAMP (1/2") | |
| I28 | I06-330 | 2 | SCREW (M8-1.25 X 70MM) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

FRONT HOOD SUPPORT

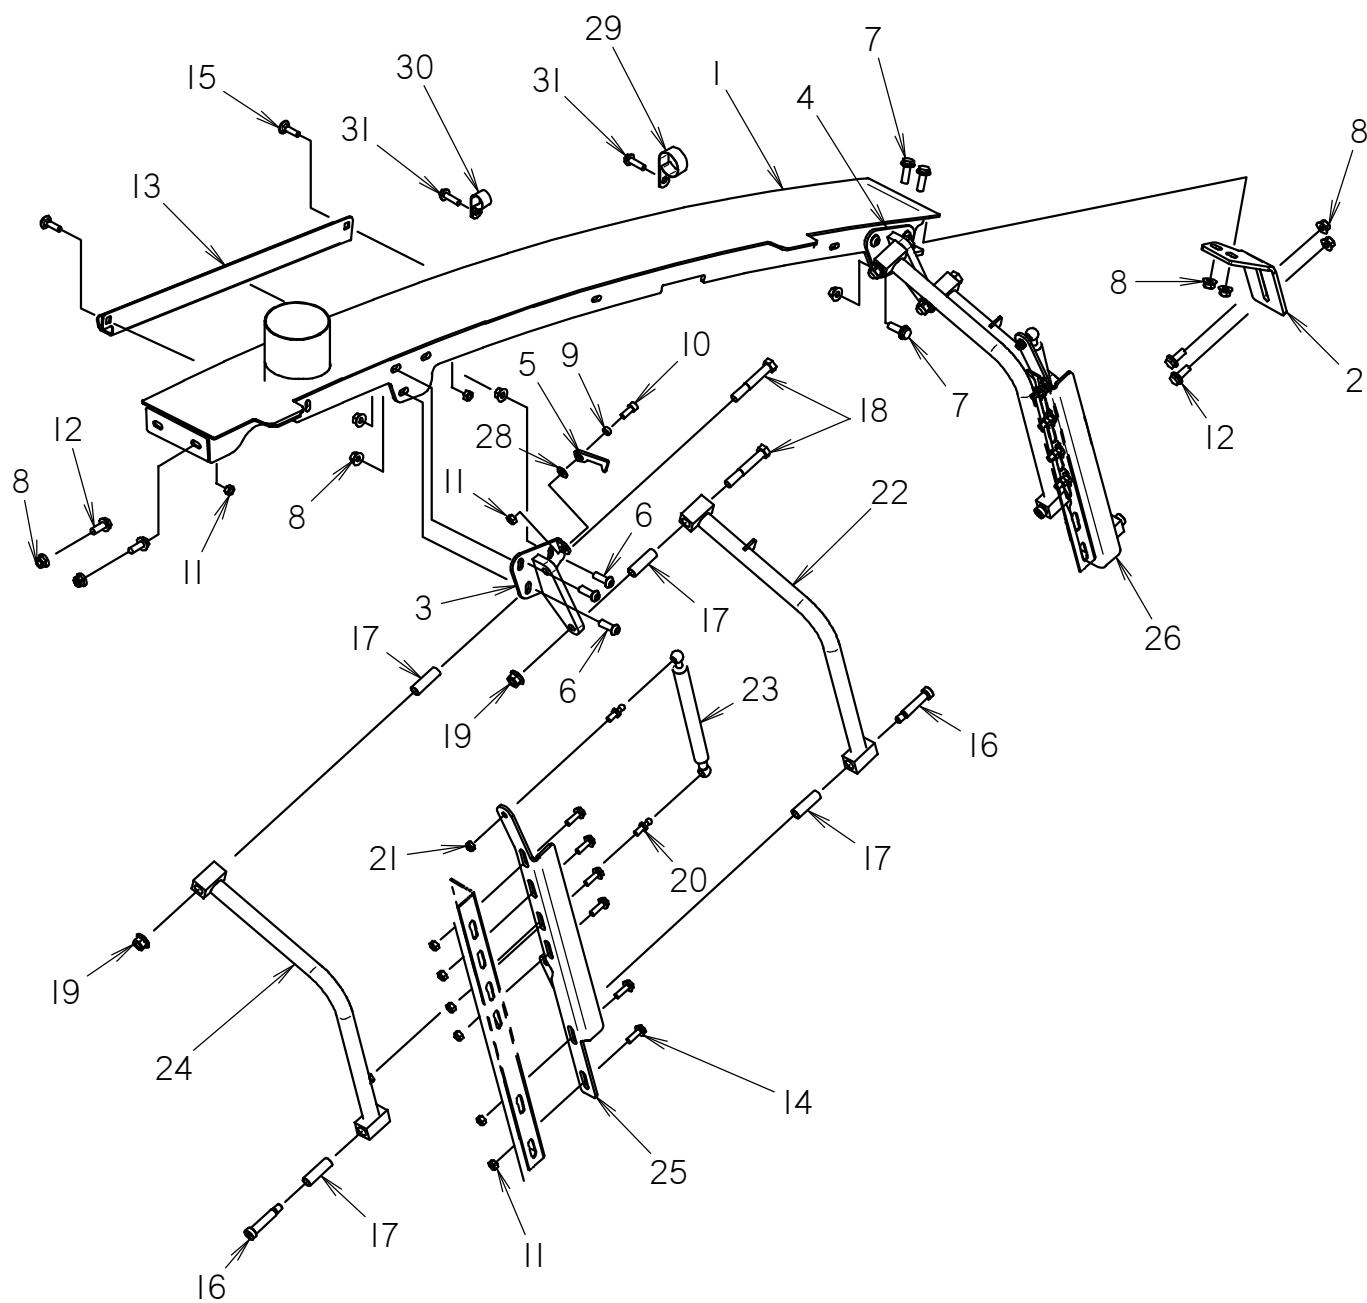

FRONT HOOD SUPPORT


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| 1 | 300-722I | 1 | MID HOOD | |
| 2 | 300-7230 | 1 | FRONT MOUNT | |
| 3 | 300-7233 | 1 | REAR ARM MOUNT | |
| 4 | 300-7236 | 1 | FRONT ARM MOUNT | |
| 5 | 300-7417 | 1 | LATCH | |
| 6 | I06-674 | 5 | BOLT (M10-I.50 X 30MM,BUT SOCI) | |
| 7 | I06-383 | 3 | FLG LK SCREW (M10-I.50 X 30MM) | |
| 8 | I06-387 | 12 | FLG LOCKNUT (M10-I.50) | |
| 9 | I79-593 | 1 | BUSHING | |
| 10 | I05-842 | 1 | SCREW (M8-I.25 X 20MM, SOC) | |
| 11 | I06-561 | 13 | LOCKNUT (M8-I.25,PRV TRQ,I.0.9) | |
| 12 | I06-724 | 4 | FLG SCREW (M10-I.50 X 25MM) | |
| 13 | 300-560I | 1 | BRACKET | |
| 14 | I06-381 | 10 | FLG LK SCREW (M8-I.25 X 25MM) | |
| 15 | I07-380 | 2 | CARRIAGE BOLT(M8-I.25X30MM,BX) | |
| 16 | I06-971 | 4 | SHLD BLT (M12 X 50MM,M10-I.50) | |
| 17 | I79-832 | 8 | SLEEVE | |
| 18 | I06-700 | 4 | SCREW (M12-I.75 X 80MM) | |
| 19 | I06-709 | 4 | FLG LK NUT (M12-I.75) | |
| 20 | I10-655 | 4 | BALL SCREW (5/16-NC X 1 1/2") | |
| 21 | I05-089 | 2 | LOCKNUT (5/16-NC) | |
| 22 | 319-706 | 2 | ARM | |
| 23 | I51-227 | 2 | GAS STRUT | |
| 24 | 319-707 | 2 | ARM | |
| 25 | 300-8533 | 1 | HOOD BRACKET | |
| 26 | 300-853I | 1 | HOOD BRACKET | |
| 28 | I05-095 | 1 | WASHER (1/4") | |
| 29 | I10-332 | 1 | BOLT-ON CLAMP (1-5/8") | |
| 30 | I10-333 | 1 | BOLT-ON CLAMP (1") | |
| 31 | I06-163 | 2 | FLG SCREW (M8-I.25 X 30MM) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

FRONT FIXED HOOD

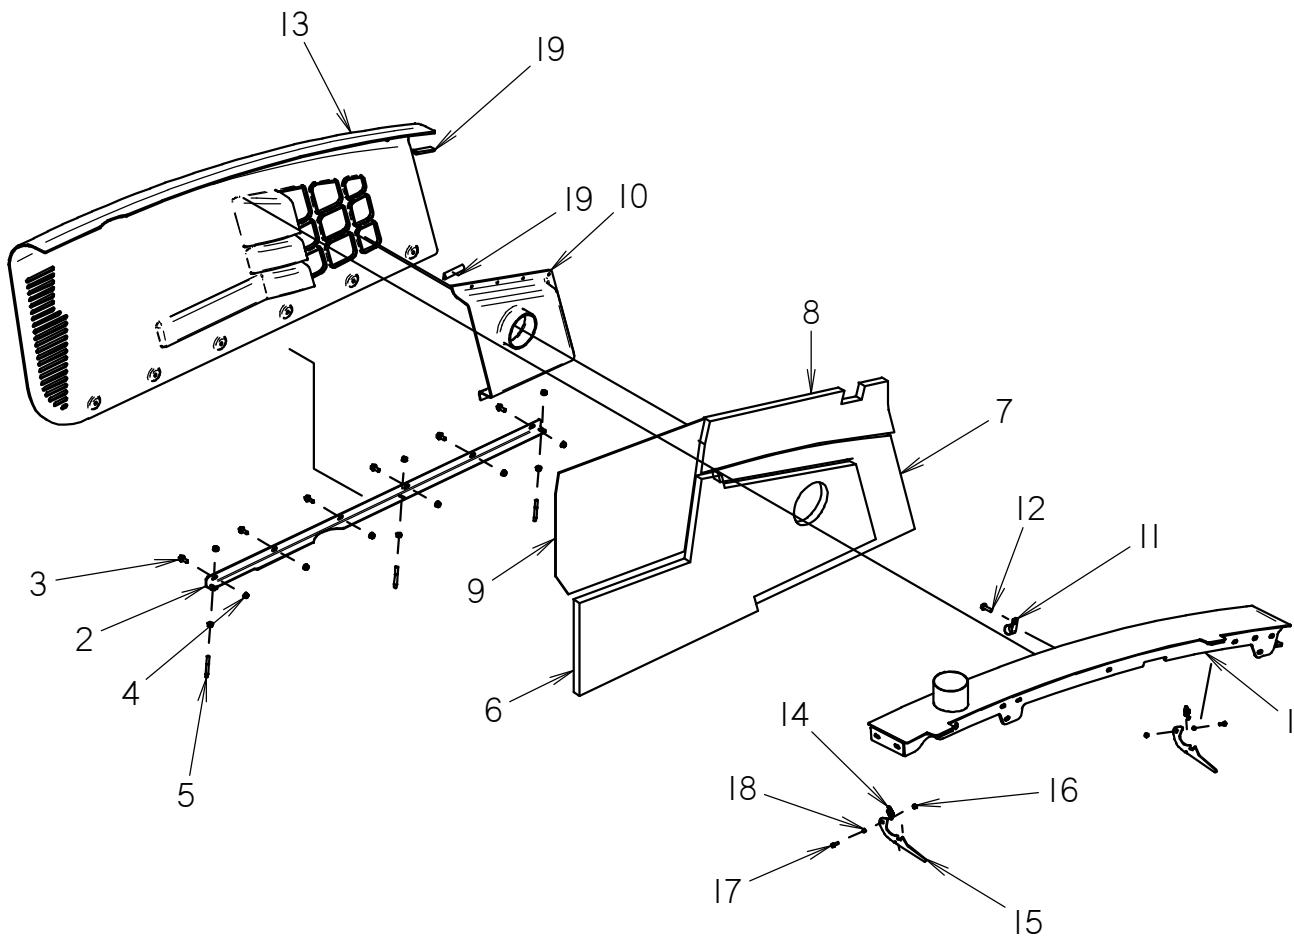

FRONT FIXED HOOD


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|--------------------------------|
| I | 300-722I | 1 | MID HOOD | |
| 2 | 300-5556 | 1 | BRACKET | |
| 3 | I06-I62 | 6 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 4 | I06-386 | 12 | FLG LOCKNUT (M8-1.25) | |
| 5 | I08-I12 | 3 | STUD BOLT (M8-1.25 X 70MM) | |
| 6 | 362-1297 | 1 | SOUND INSULATION | |
| 7 | 362-1296 | 1 | SOUND INSULATION | |
| 8 | 362-1298 | 1 | SOUND INSULATION | |
| 9 | 362-1303 | 1 | THERMAL INSULATION | |
| I0 | 362-1278 | 1 | AIR BAFFLE | |
| II | I10-333 | 1 | BOLT-ON CLAMP (I1') | |
| I2 | I06-163 | 1 | FLG SCREW (M8-1.25 X 30MM) | |
| I3 | 362-I28I | 1 | FRONT FIXED HOOD ASSY | SERVICE PART I9I-504 |
| I4 | I15-619 | 2 | EXTENSION SPRING | |
| I5 | 300-724I | 2 | LATCH | |
| I6 | I06-237 | 2 | LOCKNUT (M6-1.00, PRV TRQ, NLK) | |
| I7 | I05-797 | 2 | SCREW (M6-1.00 X 20MM, BX) | |
| I8 | 300-8326 | 2 | BUSHING | |
| I9 | I18-I83 | 167 | BULK EDGE (SOLD BY FOOT) | VARIOUS LENGTHS AND QUANTITIES |

NOT SHOWN:

FOOTNOTES:

NOTE:

FRONT OPENING HOOD

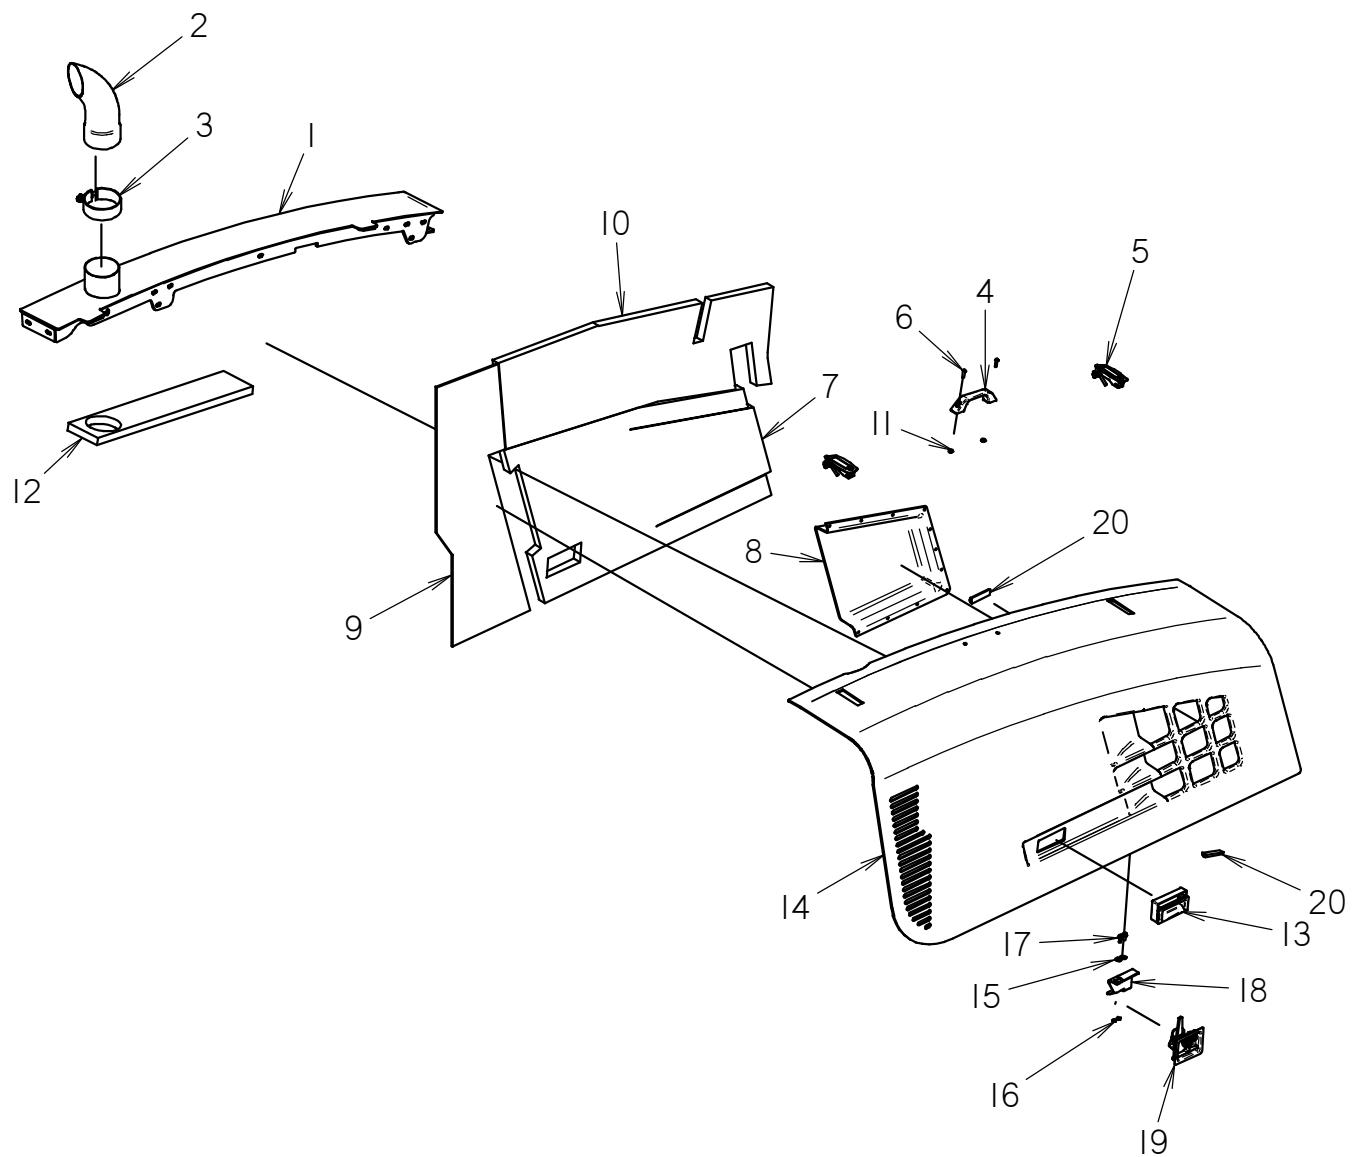

FRONT OPENING HOOD


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|--------------------------------------|
| 1 | 300-722I | 1 | MID HOOD | |
| 2 | I96-351 | 1 | EXHAUST TUBE (4" X 12") | |
| 3 | I94-027 | 1 | MUFFLER CLAMP | |
| 4 | I17-538 | 1 | GRAB HANDLE | |
| 5 | I17-558 | 2 | LATCH, ADJUST LEVER (LOCKING) | |
| 6 | I06-640 | 2 | SCREW (M6-1.00 X 20MM,BUT SOCI) | |
| 7 | 362-I30I | 1 | SOUND INSULATION | |
| 8 | 362-I307 | 1 | AIR BAFFLE | |
| 9 | 362-I405 | 1 | THERMAL INSULATION | |
| 10 | 362-I300 | 1 | SOUND INSULATION | |
| 11 | I06-237 | 2 | LOCKNUT (M6-1.00,PRV TRQ,NLK) | |
| 12 | 362-I299 | 1 | SOUND INSULATION | CUT AS REQUIRED TO FIT AROUND GUSSET |
| 13 | I17-427 | 1 | POCKET PULL HANDLE | |
| 14 | 362-I283 | 1 | FRONT HOOD ASSEMBLY | SEVICE PART I91-503 |
| 15 | I05-095 | 2 | WASHER (1/4") | |
| 16 | I06-048 | 2 | LOCKNUT (#10-24) | |
| 17 | I06-712 | 2 | FLG SCREW (M6-1.00 X 16MM) | |
| 18 | 300-8999 | 1 | LOCK PLATE | |
| 19 | I10-514 | 1 | LOCKING LATCH (ADJUSTABLE) | |
| 20 | I18-I83 | 177 | BULK EDGE (SOLD BY FOOT) | VARIOUS LENGTHS AND QUANITIES |

NOT SHOWN:

FOOTNOTES:

NOTE:

REAR FIXED HOOD

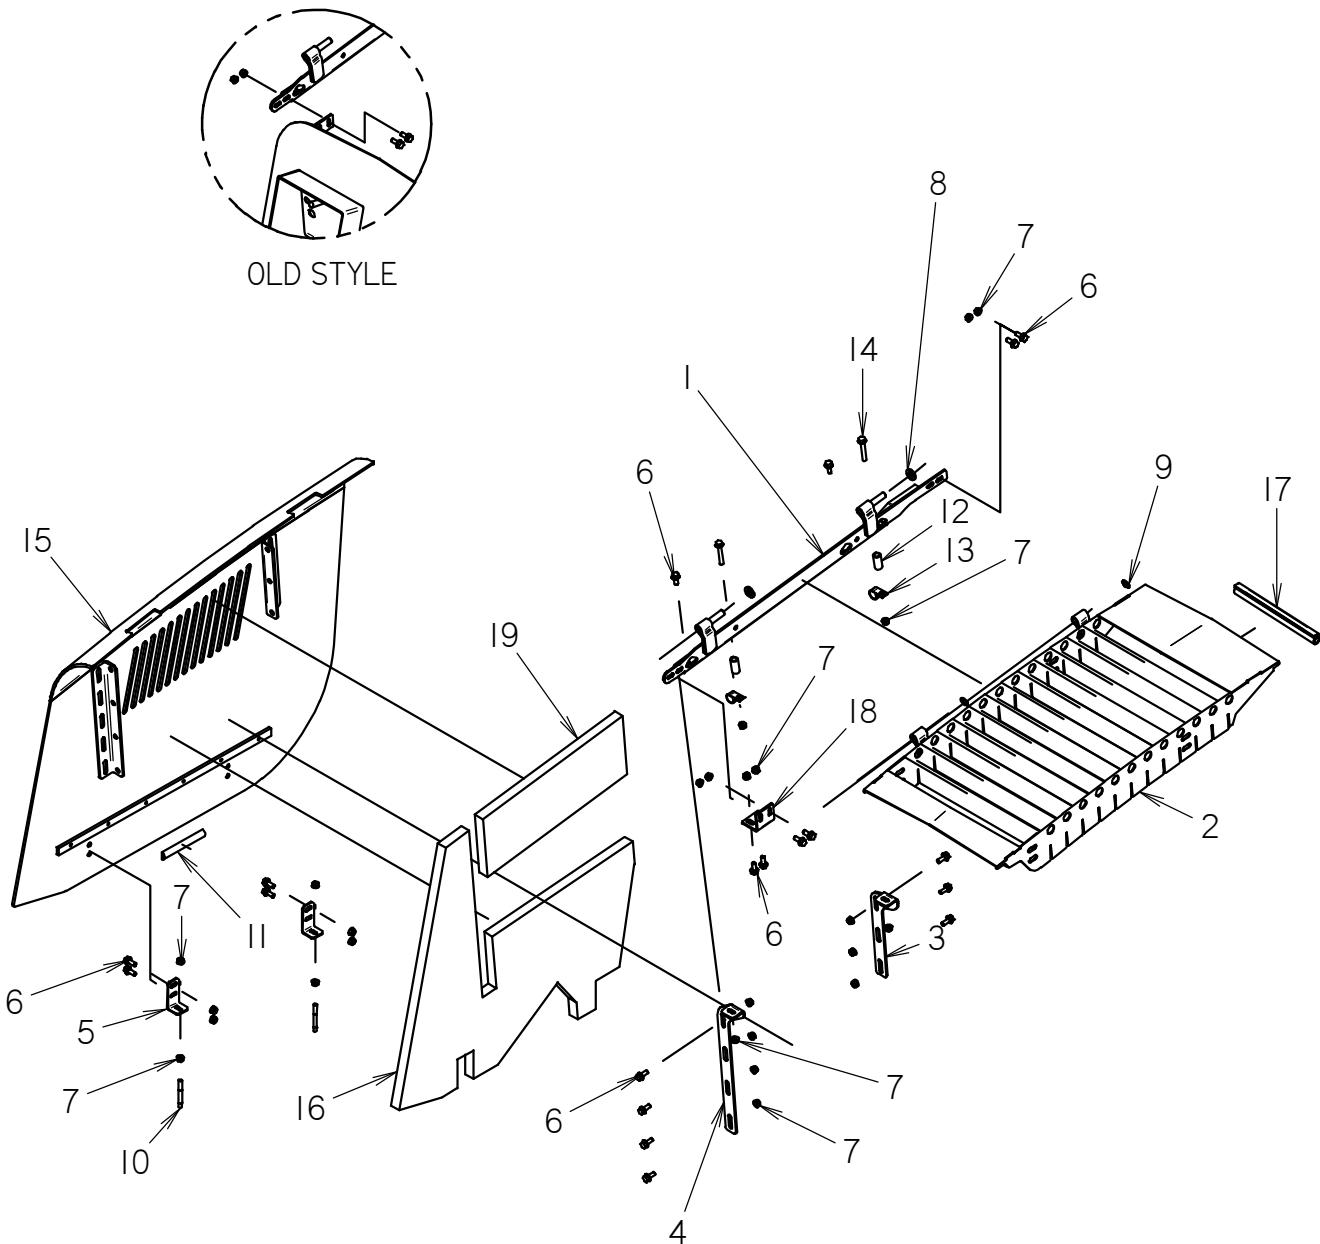

REAR FIXED HOOD


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| 1 | 319-801 | 1 | REAR HOOD SUPPORT | |
| 2 | 300-5371 | 1 | GRILLE | |
| 3 | 300-5379 | 1 | PANEL SUPPORT | |
| 4 | 319-804 | 1 | PANEL SUPPORT | |
| 5 | 319-394 | 2 | BRACKET | |
| 6 | I06-I62 | 19 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 7 | I06-386 | 25 | FLG LOCKNUT (M8-1.25) | |
| 8 | I06-397 | 2 | WASHER (M12, HARDENED) | |
| 9 | I15-482 | 2 | GRIP RING (1500") | |
| I0 | I08-I12 | 2 | STUD BOLT (M8-1.25 X 70MM) | |
| I1 | I18-I83 | 92 | BULK EDGE (SOLD BY FOOT) | |
| I2 | I8I-650 | 2 | SPACER (1.395") | |
| I3 | I10-373 | 2 | BOLT-ON CLAMP (13/16") | |
| I4 | I05-665 | 2 | FLG SCREW (M8-1.25 X 55MM) | |
| I5 | 362-I290 | 1 | REAR FIXED HOOD ASSY | |
| I6 | 362-I386 | 1 | SOUND INSULATION | |
| I7 | I16-489 | 16 | BULK EDGE (1/8", SOLD PER FT) | |
| I8 | 300-9448 | 1 | REAR MOUNT BRACKET | |
| I9 | 362-I445 | 1 | SOUND INSULATION | |

NOT SHOWN:

FOOTNOTES:

NOTE:

REAR OPENING HOOD

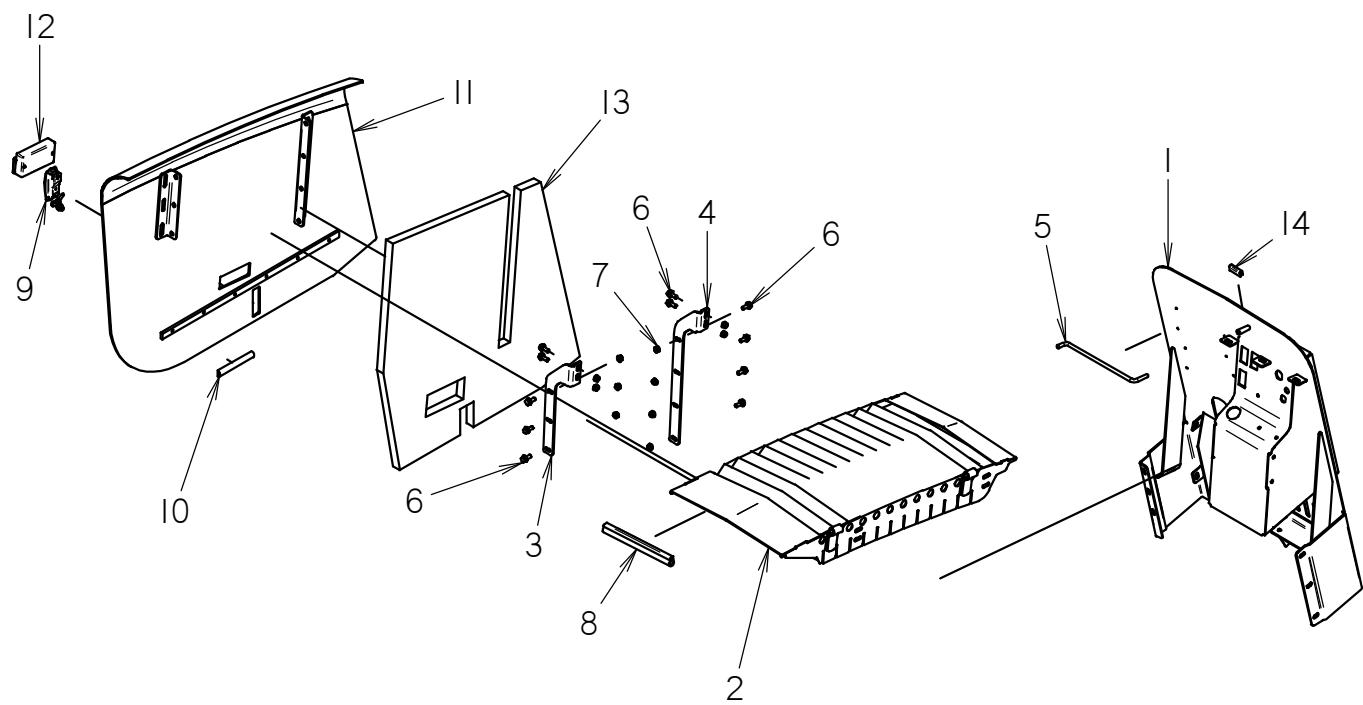

REAR OPENING HOOD

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| I | 300-444I | I | BACK PLATE | |
| 2 | 300-537I | I | GRILLE | |
| 3 | 300-5378 | I | HOOD BRACE | |
| 4 | 319-799 | I | HOOD BRACE | |
| 5 | I79-583 | I | PROP ROD | |
| 6 | I06-I62 | II | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 7 | I06-386 | II | FLG LOCKNUT (M8-1.25) | |
| 8 | I16-489 | I6 | BULK EDGE (1/8", SOLD PER FT) | |
| 9 | I17-558 | I | LATCH, ADJUST LEVER (LOCKING) | |
| I0 | I18-I83 | 92 | BULK EDGE (SOLD BY FOOT) | 2 @ 46" |
| II | 362-I29I | I | REAR HOOD ASSY | |
| I2 | I17-427 | I | POCKET PULL HANDLE | |
| I3 | 362-I387 | I | SOUNDS INSULATION | |
| I4 | I16-42I | 69 | BULK EDGE (1/8", SOLD PER FT) | |

NOT SHOWN:


FOOTNOTES:

NOTE:

NOTES:

FRAME COMPONENTS

CARRIAGE

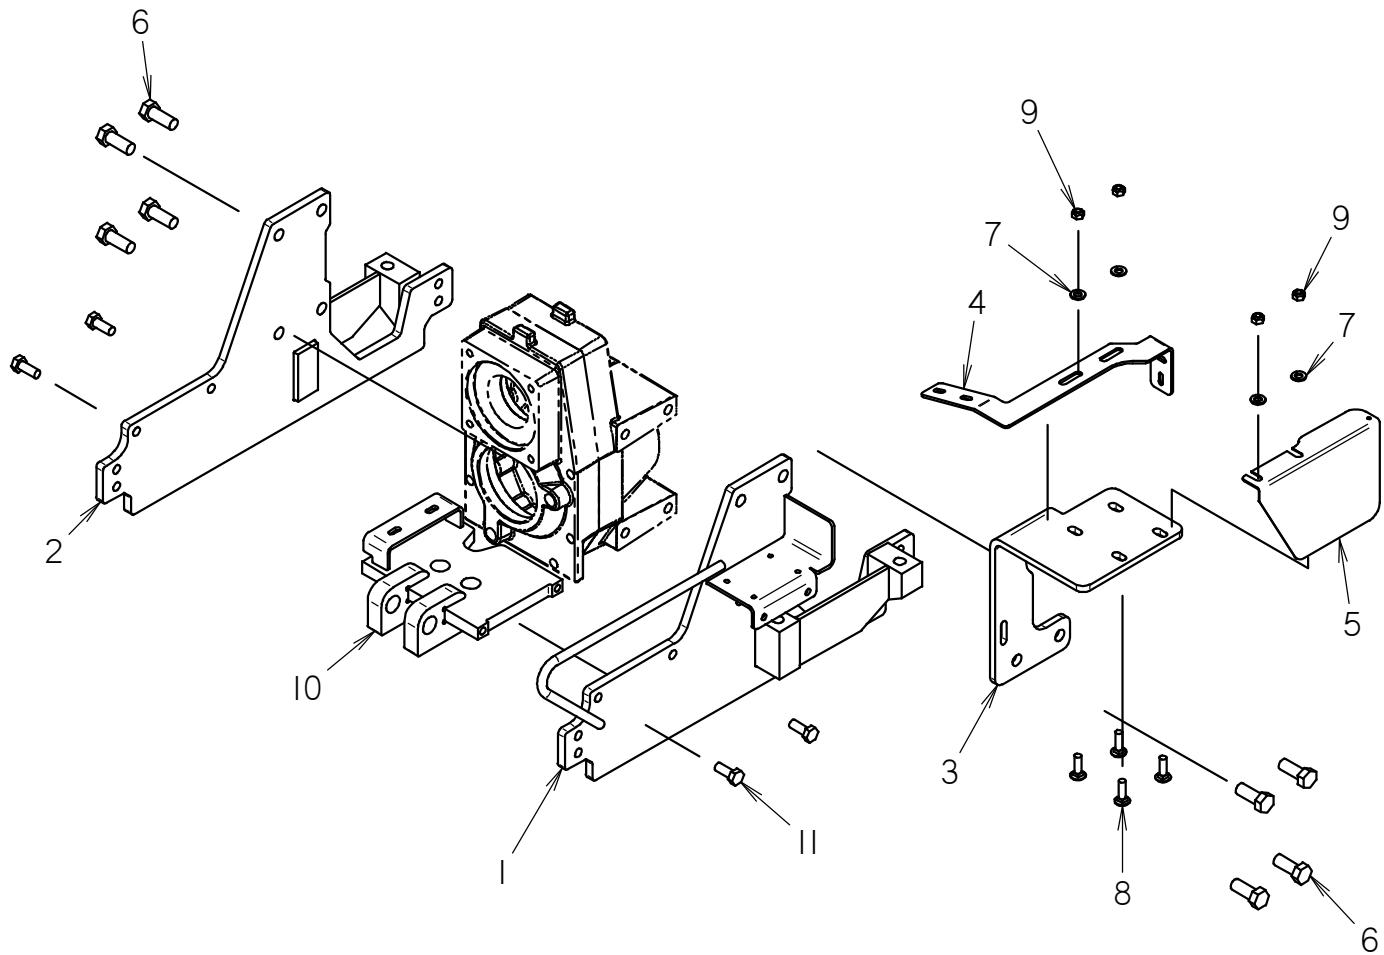

CARRIAGE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|-------------------------------------|
| I | 300-2816 | 1 | RIGHT SIDE PLATE | |
| 2 | 325-312 | 1 | LEFT SIDE PLATE | |
| 3 | 327-581 | 1 | HOSE CARRIER MOUNT | |
| 4 | 318-873 | 1 | BRACKET, TOP | |
| 5 | 327-618 | 1 | SHIELD | |
| 6 | I05-998 | 8 | SCREW (M16-2.00 X 40MM) | TORQUE TO 140 FT LBS SEE FOOTNOTE I |
| 7 | I06-390 | 4 | WASHER (M10) | |
| 8 | I05-249 | 4 | CARRIAGE BOLT(3/8-NC X 1-1/4") | |
| 9 | I05-047 | 4 | LOCKNUT (3/8-NC) | |
| I0 | 318-353 | 1 | REAR PLATE | |
| II | I05-273 | 4 | SCREW (M12-1.75 X 30MM) | TORQUE TO 55 FT LBS SEE FOOTNOTE I |


NOT SHOWN:

FOOTNOTES:

I. LOCTITE 242 OR EQUIV.

NOTE:

CARRIAGE SPINDLE

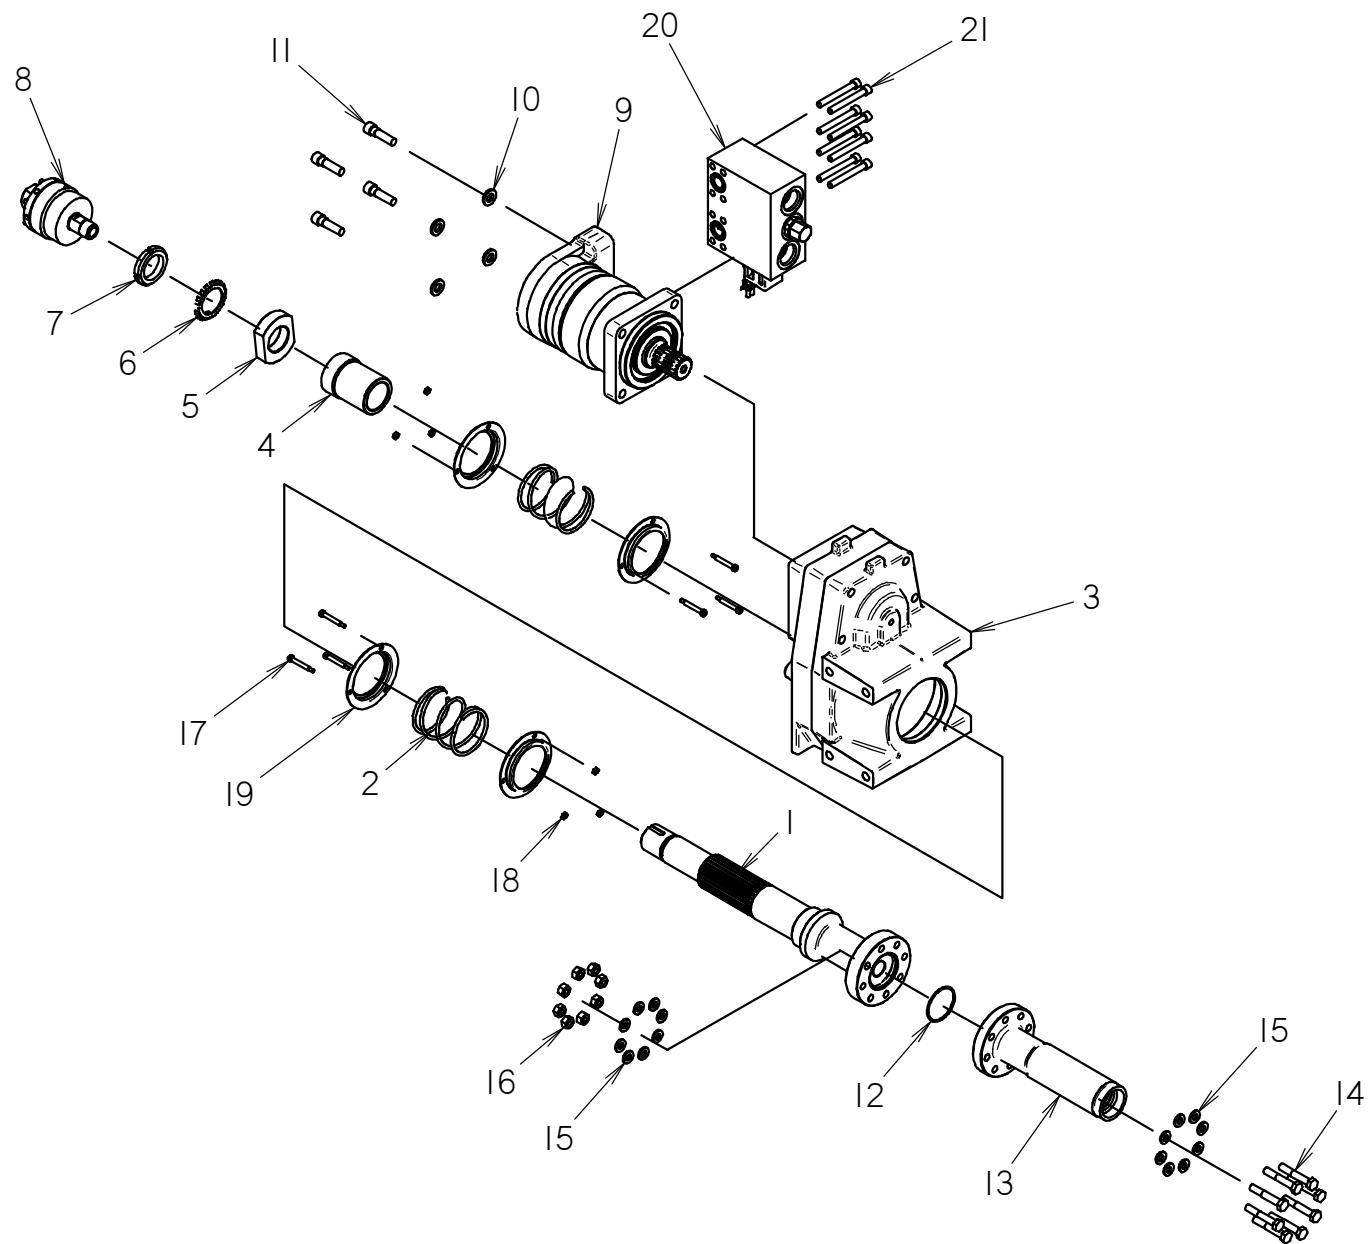

CARRIAGE SPINDLE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---|
| 1 | I66-426 | 1 | SLIDING OUTPUT SHAFT | APPLY 256-666 GREASE TO SPLINES |
| 2 | I18-292 | 2 | COMPRESSION SPRING | SEE FOOTNOTE 1 |
| 3 | I66-451 | 1 | GEAR BOX | |
| 4 | I77-034 | 1 | SHAFT SPACER | |
| 5 | I06-865 | 1 | NUT | |
| 6 | I85-074 | 1 | TANG LOCK WASHER (I.792") | |
| 7 | I85-067 | 1 | THRUST LOCKNUT (I.767-NF-18) | |
| 8 | I53-242 | 1 | WATER SWIVEL (I2N-I2NF) | SEE FOOTNOTE 2 |
| 9 | I50-1026 | 1 | ROTATION MOTOR | |
| 10 | I06-397 | 4 | WASHER (M12, HARDENED) | |
| 11 | I06-707 | 4 | SCREW (M12-I.75 X 45MM, SOC) | USE LOCTITE 242 |
| 12 | I57-019 | 1 | O-RING (I39 D90) | |
| 13 | I40-604 | 1 | SAVER SUB (I.47-4 F DS) | |
| 14 | I06-642 | 8 | SCREW (M10-I.50 X 65MM) | TORQUE TO 47 FT LBS |
| 15 | I06-396 | 16 | WASHER (M10, HARDENED) | |
| 16 | I05-894 | 8 | LOCKNUT(M10-I.50,PRV TRQ,I0.9) | |
| 17 | I08-120 | 6 | SHLD BLT(I/4" X I-I/2",#10-24) | |
| 18 | I06-048 | 6 | LOCKNUT (#10-24) | |
| 19 | I59-898 | 4 | SPRING CAP | |
| 20 | I59-577 | 1 | RELIEF MANIFOLD | SERVICE PARTS INCLUDE: I50-I326 HYDRAULIC VALVE |
| 21 | I05-857 | 8 | BOLT (3/8-NC X 3", SOC, GD8) | |


NOT SHOWN:

FOOTNOTES:

1. SUPERSEDES I17-921 COMPRESSION SPRING, I17-921 DOES NOT USE SPRING CAPS (REF 19)
2. INSTALL USING NICKLE THREAD SEALING TAPE (I17-555) ON MALE THREADS, I91-248 SEAL KIT

NOTE:

THRUST DRIVE

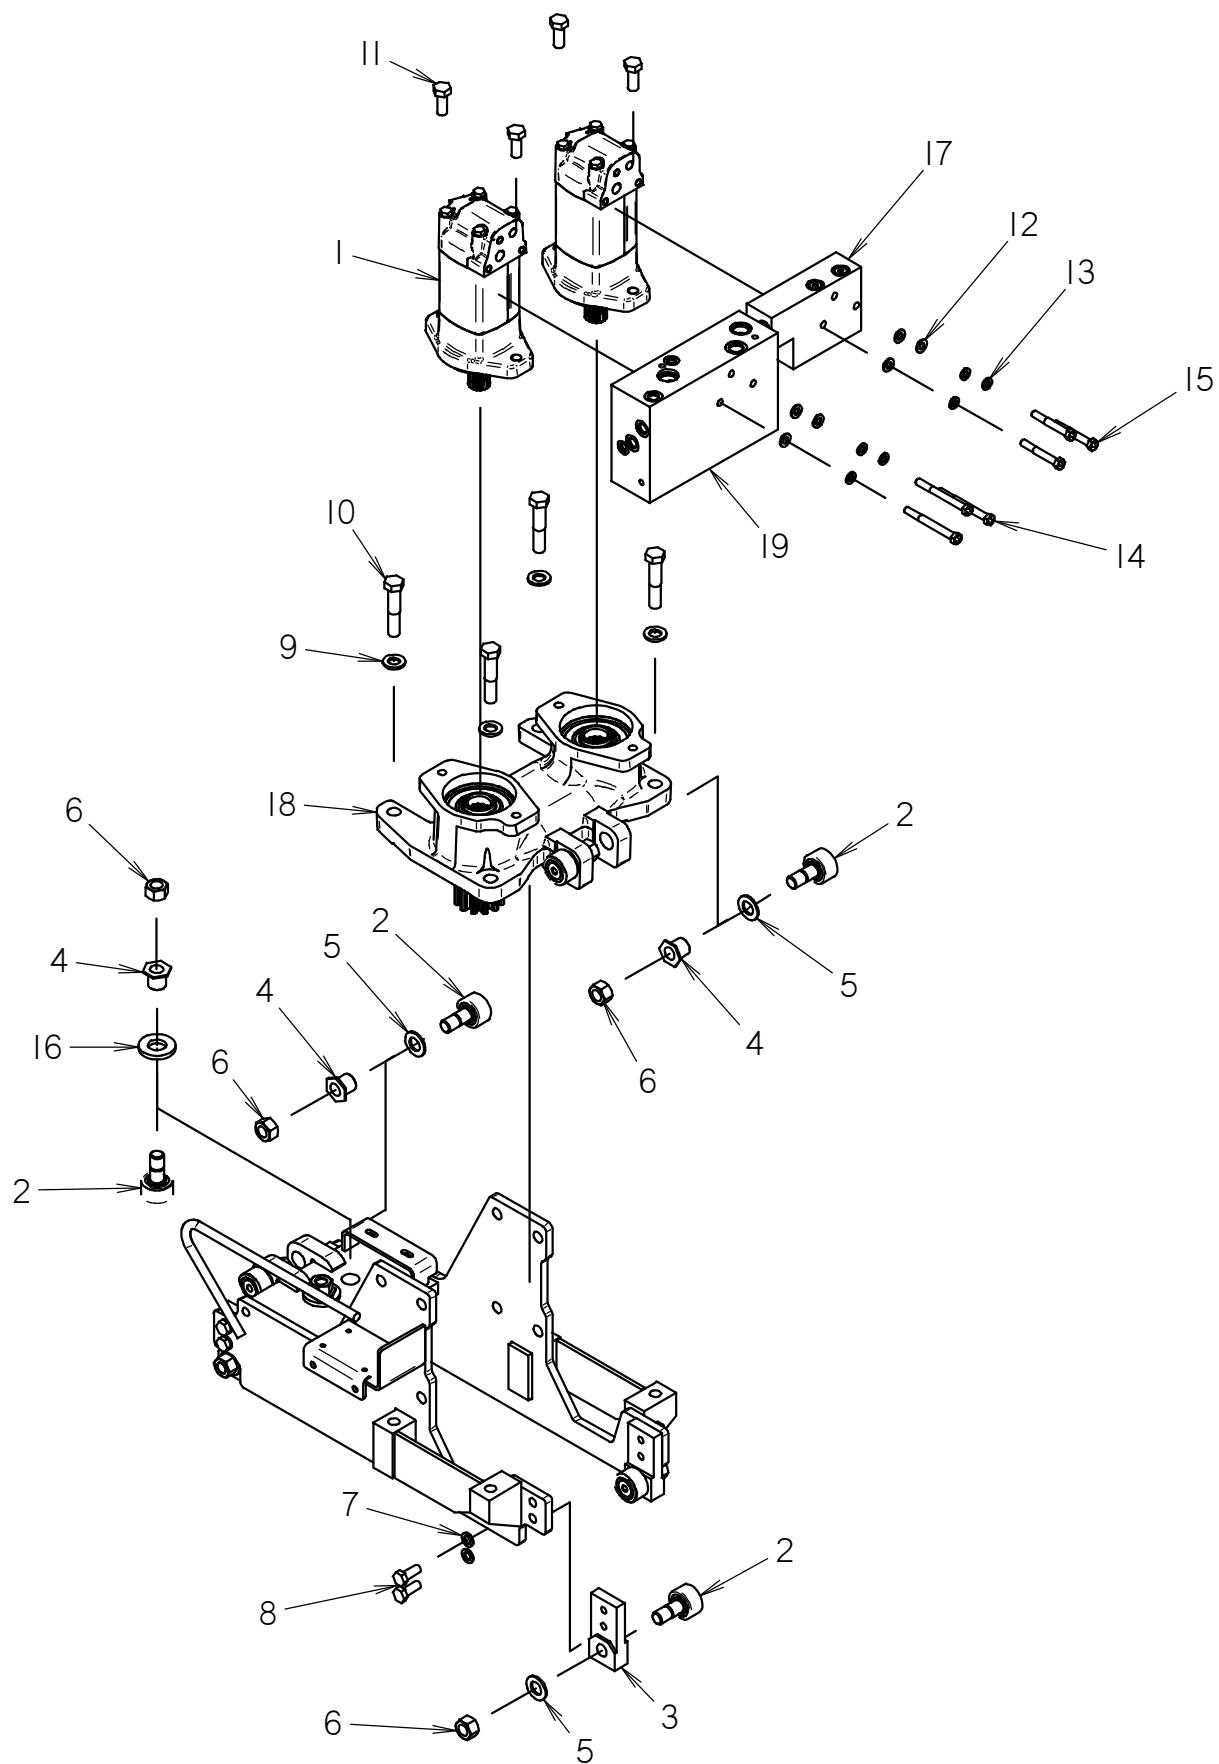

THRUST DRIVE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------------------------------------|
| 1 | I57-317 | 2 | MOTOR | |
| 2 | I41-730 | 10 | RBC ROLLER | |
| 3 | 318-344 | 4 | LOWER ROLLER MOUNT | |
| 4 | I79-704 | 6 | ECCENTRIC BUSHING | |
| 5 | I06-949 | 6 | WASHER (3/4", HARDENED) | |
| 6 | I05-388 | 10 | NUT (3/4-NF) | |
| 7 | I06-030 | 6 | LOCK WASHER (M12) | TORQUE TO 62 FT LBS |
| 8 | I05-273 | 8 | SCREW (M12-1.75 X 30MM) | TORQUE TO 55 FT LBS, USE 242 LOCTITE |
| 9 | I06-398 | 4 | WASHER (M16, HARDENED) | |
| I0 | I07-I97 | 4 | SCREW (M16-2.00 X 80MM, 10.9) | TORQUE TO 200 FT LBS, USE 242 LOCTITE |
| II | I06-472 | 4 | SCREW (M14-2.0 X 35MM) | |
| I2 | I06-390 | 6 | WASHER (M10) | TORQUE TO 88 FT LBS, USE 242 LOCTITE |
| I3 | I05-072 | 6 | LOCK WASHER (3/8") | |
| I4 | I05-258 | 3 | BOLT (3/8-NC X 3-3/4") | TORQUE TO 40 FT LBS, USE 242 LOCTITE |
| I5 | 500-003 | 3 | BOLT (3/8-NC X 2-3/4") | TORQUE TO 40 FT LBS, USE 242 LOCTITE |
| I6 | I79-422 | 2 | BOSS | |
| I7 | I50-2050 | 1 | MANIFOLD | SEE NOT SHOWN FOR SERVICE PARTS |
| I8 | I66-448 | 1 | THRUST DRIVE | |
| I9 | I50-2049 | 1 | MANIFOLD | SEE NOT SHOWN FOR SERVICE PARTS |


NOT SHOWN:

| | | |
|----------|-------------------------------------|----------------------------|
| 500-1649 | SOLENOID VALVE CARTRIDGE, 4W-2P, NC | USE ON I50-2050 |
| 500-1650 | SOLENOID COIL | USE ON I50-2049 & I50-2050 |
| 500-1647 | SOLENOID VALVE CARTRIDGE, 4W-2P | USE ON I50-2049 |
| 500-1727 | HYD PILOT LOGIC CARTRIDGE, -10 | USE ON I50-2049 |
| 500-1728 | HYD PILOT LOGIC CARTRIDGE, -20 | USE ON I50-2049 |

FOOTNOTES:

NOTE:

ROTATION GEAR BOX

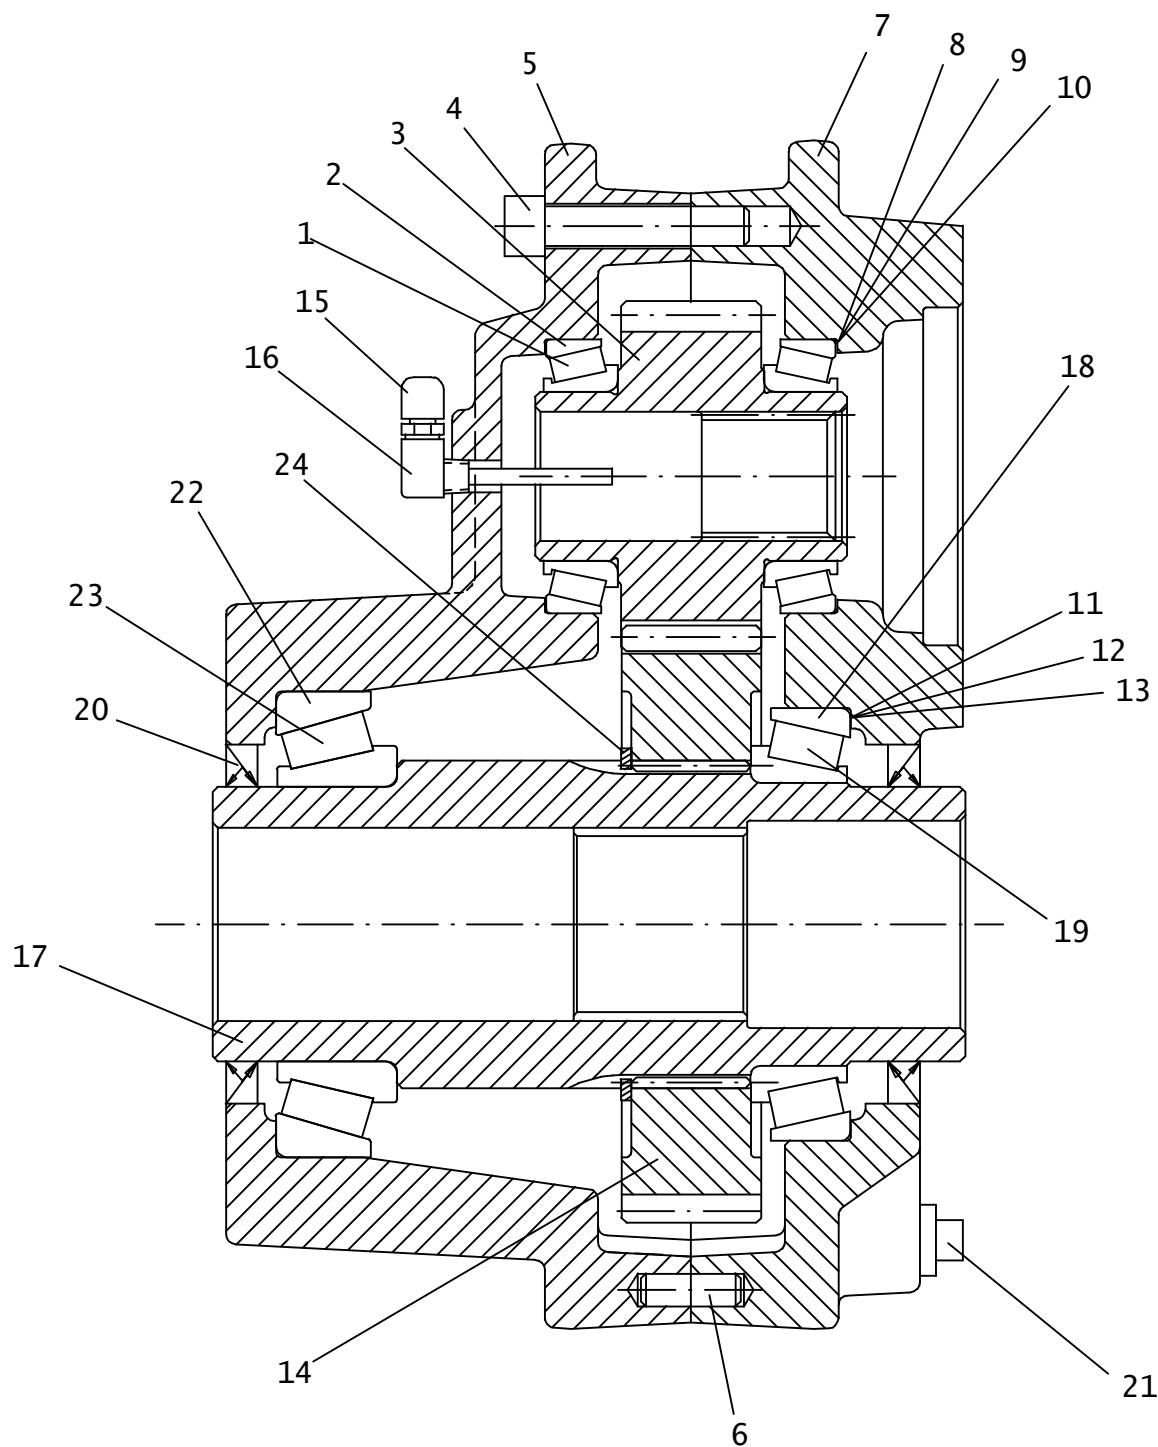

ROTATION GEAR BOX


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------|-----------------------|
| | 166-451 | 1 | GEAR BOX (1.78:1 ROTATION) | INCL REF NO.'S 1 - 24 |
| 1. | 126-100 | 2 | TAPERED BEARING (2") | |
| 2. | 126-099 | 2 | TAPERED RACE (3.25") | |
| 3. | 166-528 | 1 | INPUT PINION | |
| 4. | 106-771 | 10 | SCREW (M12-1.75 X 60MM, SOC) | |
| 5. | 162-027 | 1 | GEARBOX HOUSING | |
| 6. | 106-866 | 2 | DOWEL PIN (10MM X 30MM) | |
| 7. | 162-004 | 1 | GEARBOX COVER | |
| 8. | 165-800 | 5 | SHIM (.002") | |
| 9. | 165-801 | 5 | SHIM (.003") | |
| 10. | 165-802 | 5 | SHIM (.007") | |
| 11. | 165-829 | 5 | SHIM (.002") | |
| 12. | 165-830 | 5 | SHIM (.003") | |
| 13. | 165-828 | 5 | SHIM (.007") | |
| 14. | 160-1102 | 1 | OUTPUT GEAR | |
| 15. | 159-003 | 1 | AIR VENT (02N) | |
| 16. | 514-123 | 1 | PICKUP TUBE (02N-02NF90-2") | |
| 17. | 166-434 | 1 | OUTPUT SHAFT | |
| 18. | 126-076 | 1 | TAPERED RACE (5.118") | |
| 19. | 126-075 | 1 | TAPERED BEARING (3.346") | |
| 20. | 155-869 | 2 | INTERNAL SEAL (3.250") | |
| 21. | 115-211 | 2 | PLUG (08N,SQ, MAG) | |
| 22. | 126-157 | 1 | TAPERED RACE | |
| 23. | 126-156 | 1 | TAPERED BEARING | |
| 24. | 115-896 | 1 | EXTERNAL SNAP RING (3.875") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

ASSISTED MAKE-UP
BEGINS WITH S/N CMWJ1220C60000122

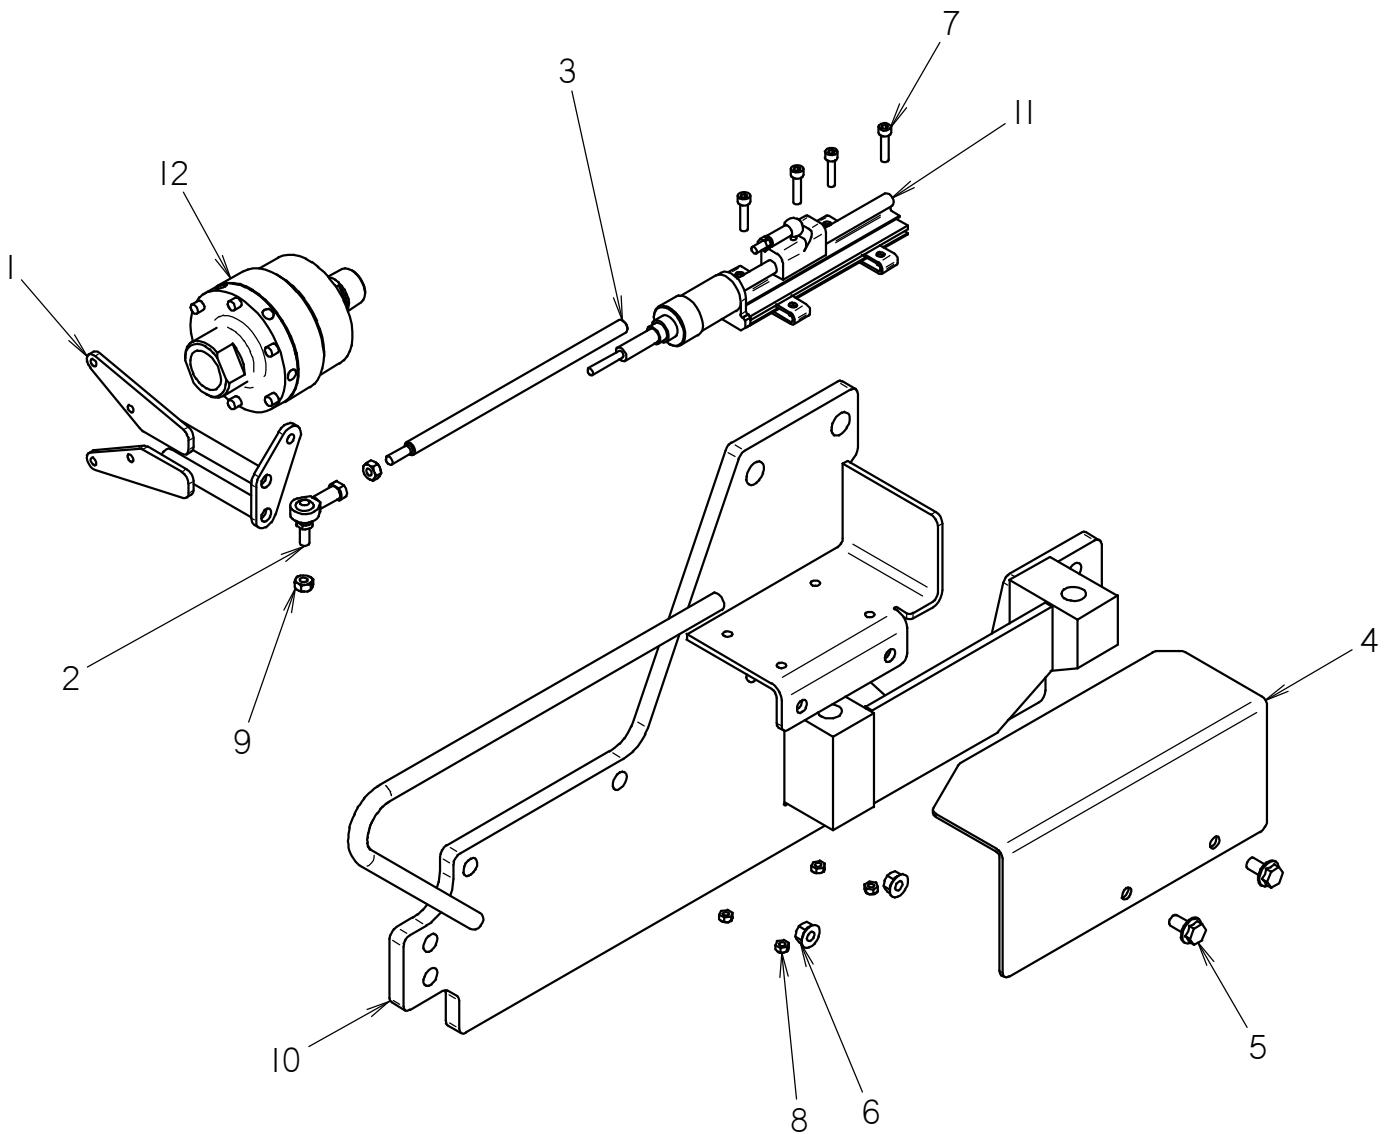

ASSISTED MAKE-UP
BEGINS WITH S/N CMWJ1220C60000122


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------|
| I | 300-2615 | 1 | SLIDER | |
| 2 | 110-774 | 1 | BALL JOINT (I/4-NF) | |
| 3 | 300-2620 | 1 | SENSOR ROD | |
| 4 | 300-2625 | 1 | COVER | |
| 5 | I06-380 | 2 | FLG LK SCREW (M8-1.25 X 16MM) | |
| 6 | I06-386 | 2 | FLG LOCKNUT (M8-1.25) | |
| 7 | I06-427 | 4 | SCREW (M5-0.80 X 22MM, SOC) | |
| 8 | I06-850 | 4 | LOCKNUT (M5-0.80) | |
| 9 | I05-152 | 2 | NUT (I/4-NF) | |
| I0 | 300-2816 | 1 | RIGHT SIDE PLATE | |
| II | 215-1002 | 1 | POSITION SENSOR | |
| I2 | 153-242 | 1 | WATER SWIVEL (I2N-I2NF) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PINION DRIVE ASSEMBLY

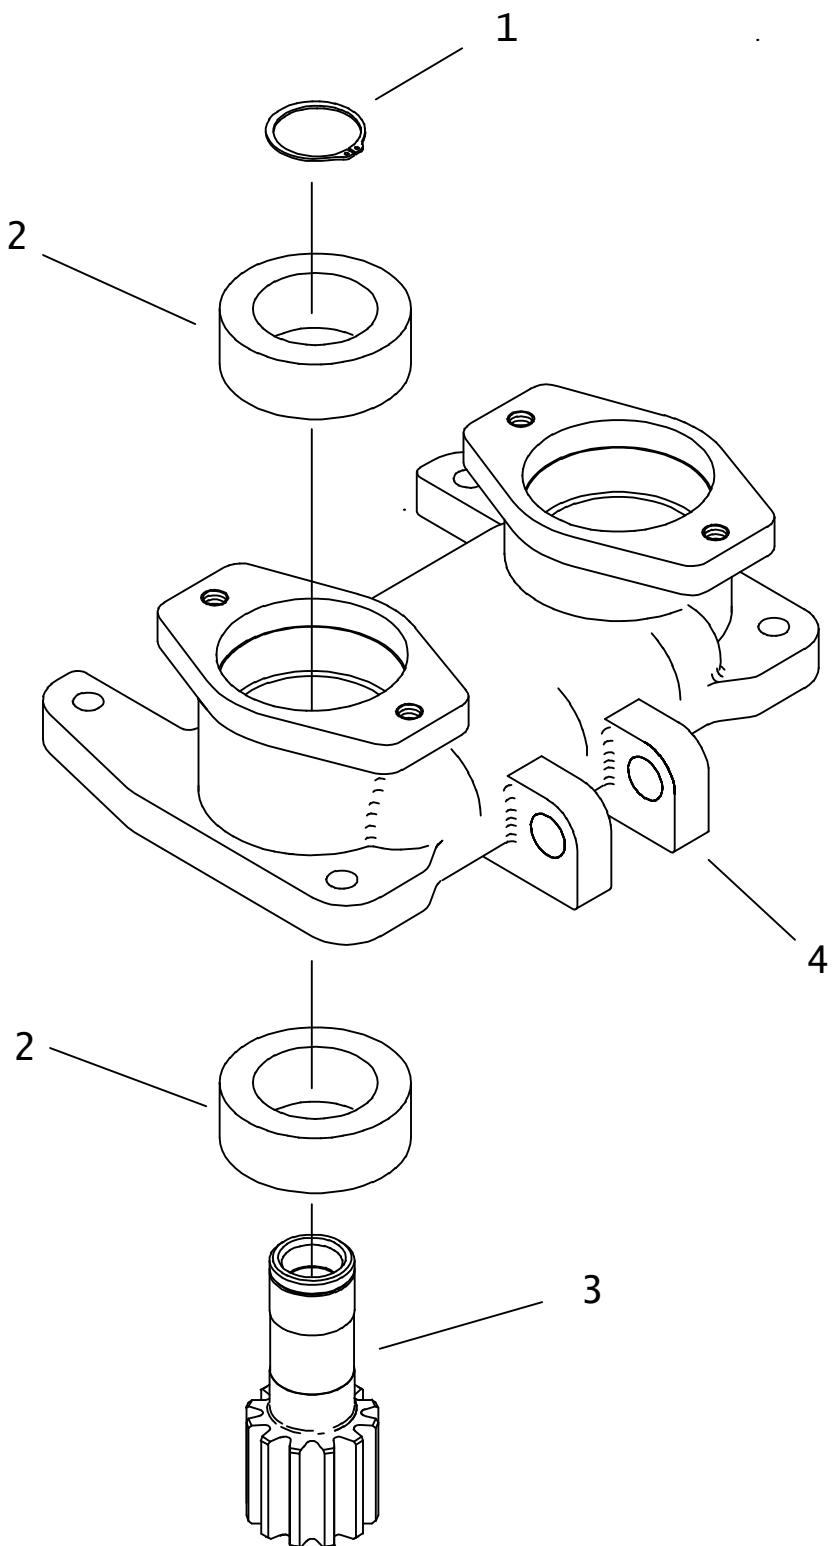

PINION DRIVE ASSEMBLY


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------|---------|
| | 166-448 | - | PINION DRIVE | |
| 1. | 115-456 | 2 | EXTERNAL SNAP RING | |
| 2. | 125-044 | 4 | BALLBEARING (1.717") | |
| 3. | 160-1019 | 2 | PINION | |
| 4. | 318-351 | 1 | MOTOR PLATE | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PIPE GUIDE

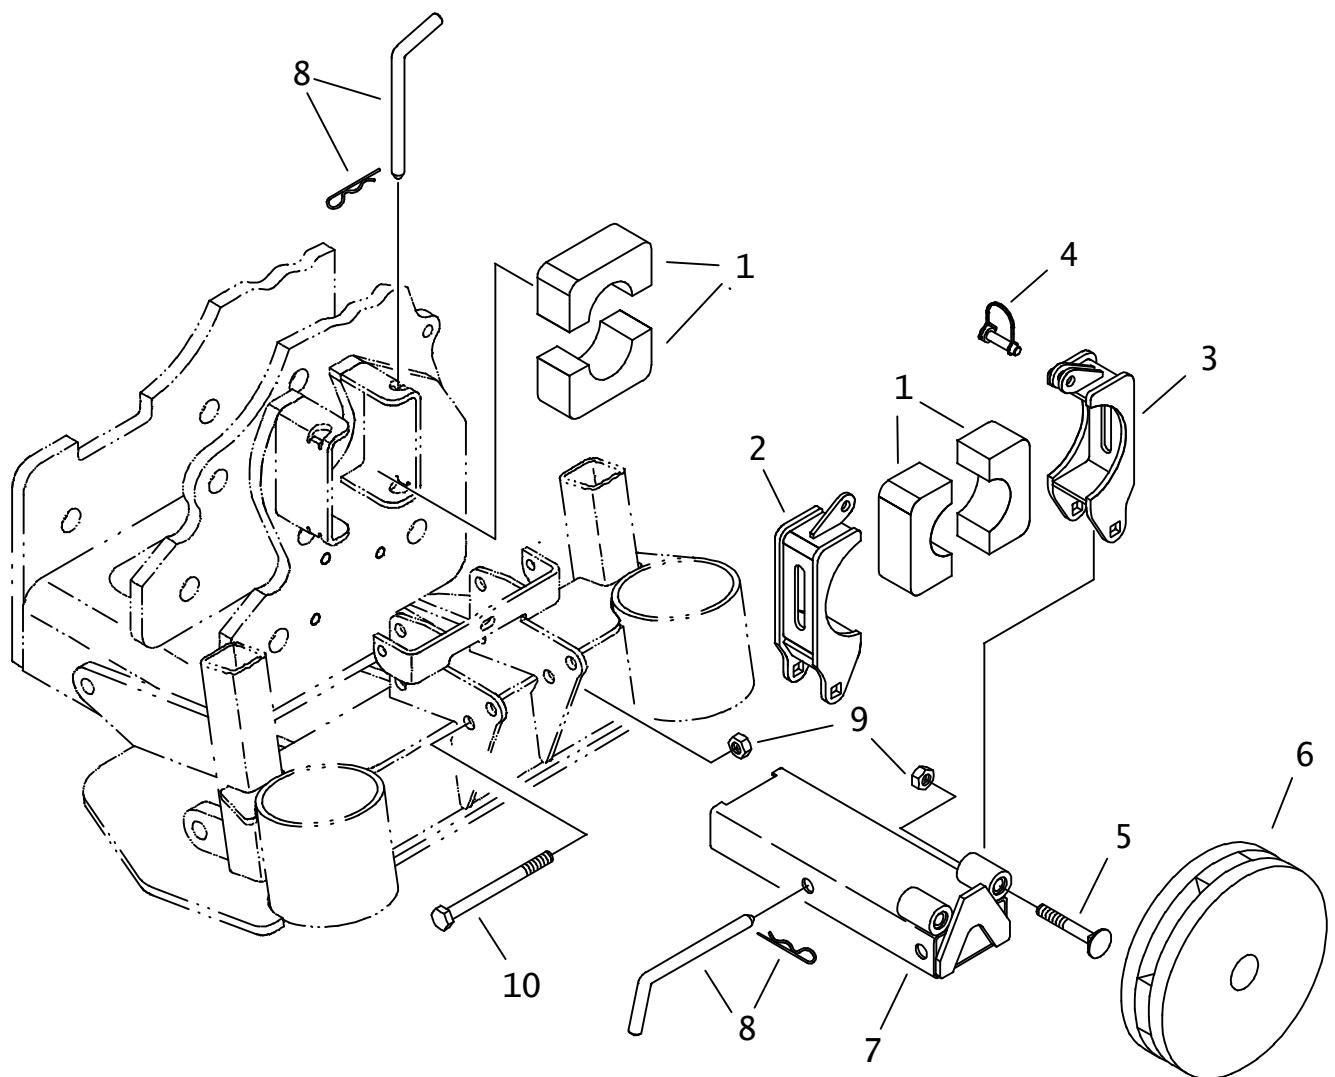


PIPE GUIDE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| 1. | 362-1060 | 4 | PIPE GUIDE | |
| 2. | 320-814 | 1 | RIGHT PIPE GUIDE RETAINER | |
| 3. | 320-802 | 1 | LEFT PIPE GUIDE RETAINER | |
| 4. | 110-368 | 1 | SNAPPER PIN (3/8" x 1-1/2") | |
| 5. | 107-590 | 2 | CARRIAGE BOLT (M12-1.75 x 80MM) | |
| 6. | 149-974 | 1 | SPLIT ROD WIPER (1.5" ID) | |
| 7. | 318-863 | 1 | PIPE GUIDE MOUNT | |
| 8. | 107-870 | 3 | PULL PIN (.5" x 5") | |
| | 110-033 | - | HAIR CLIP PIN (1/8" x 1/2") | |
| 9. | 106-685 | 5 | LOCKNUT(M12-1.75,PRV TRQ,10.9) | |
| 10. | 106-855 | 3 | SCREW (M12-1.75 x 140MM) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

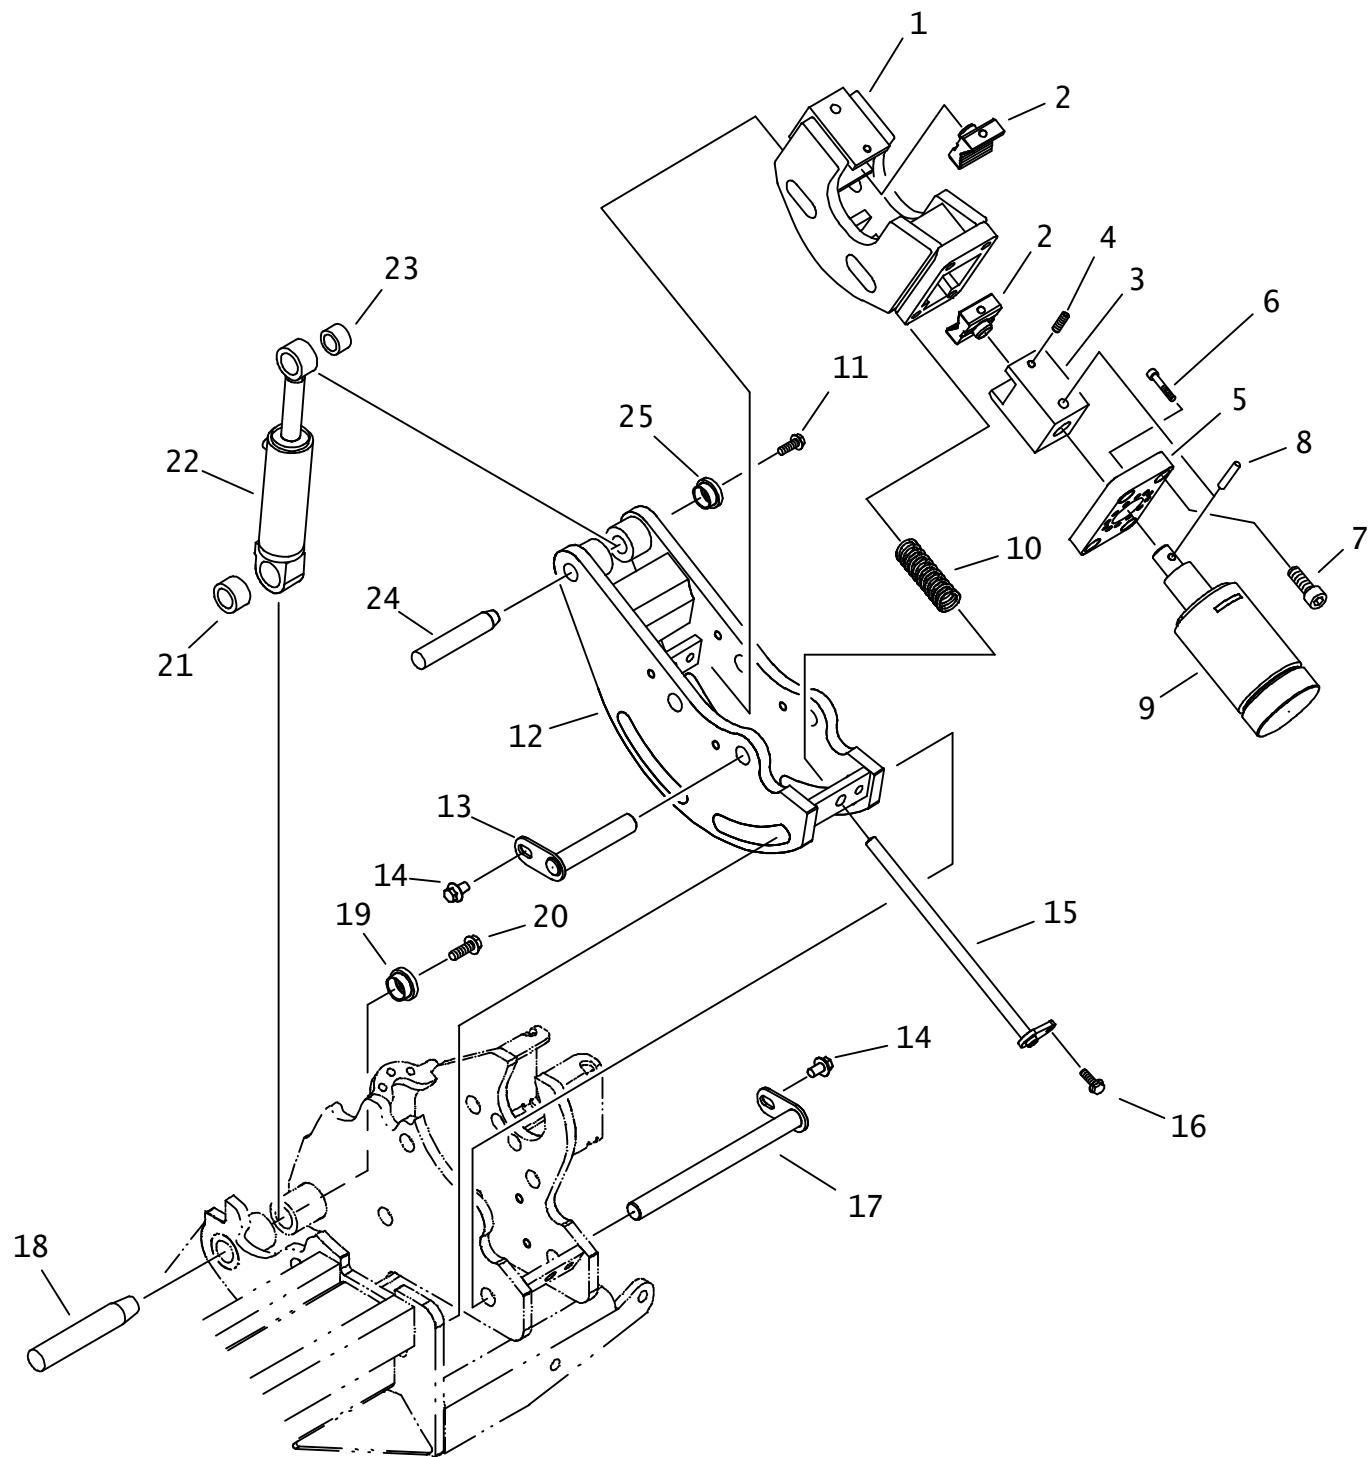ROTATING WRENCH
BEGINS WITH S/N:

ROTATING WRENCH


BEGINS WITH S/N:

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|------------------------------------|
| 1. | 300-2509 | 1 | REAR WRENCH | BEGINS WITH S/N: CMWJI220K60000126 |
| 2. | 357-222 | 2 | JAW INSERT | |
| 3. | 357-225 | 1 | JAW | |
| 4. | 106-529 | 2 | SET SCREW (M10-1.50 X 10MM) | LOCTITE 242 |
| 5. | 316-545 | 1 | CYL HEAD PLATE | |
| 6. | 107-894 | 10 | SCREW (M8-1.25 X 45MM, SOC) | LOCTITE 242 |
| 7. | 107-884 | 4 | SCREW (M16-2.00 X 45MM, SOC) | LOCTITE 242 |
| 8. | 105-561 | 1 | ROLL PIN (3/8" X 2-3/4") | |
| 9. | 151-213 | 1 | CYL (3.5 X 1.75 X 2.0) | |
| 10. | 118-115 | 1 | COMPRESSION SPRING | |
| 11. | 106-724 | 1 | FLG SCREW (M10-1.50 X 25MM) | |
| 12. | 324-918 | 1 | ROTATING WRENCH | |
| 13. | 318-511 | 2 | WRENCH PIN - SHORT | |
| 14. | 105-1012 | 4 | FLG LK SCREW (M12-1.75 X 20MM) | |
| 15. | 316-462 | 1 | CENTERING PIN | |
| 16. | 106-383 | 1 | FLG LK SCREW (M10-1.50 X 30MM) | |
| 17. | 318-512 | 2 | WRENCH PIN - LONG | |
| 18.. | 178-225 | 1 | TAPERED PIN (31.7MM X 181.6MM) | |
| 19. | 181-982 | 1 | TAPERED INSERT (1.25") | |
| 20. | 106-469 | 1 | FLG SCREW (M12-1.75 X 30MM) | |
| 21. | 125-771 | 1 | COMPOSITION BUSHING (1.25") | |
| 22. | 151-038 | 1 | CYL (2.0 X 1.0 X 4.0) | |
| 23. | 125-770 | 1 | COMPOSITION BUSHING (1") | |
| 24. | 179-987 | 1 | TAPERED PIN (1" X 5.50") | |
| 25. | 181-981 | 1 | TAPERED INSERT (1") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

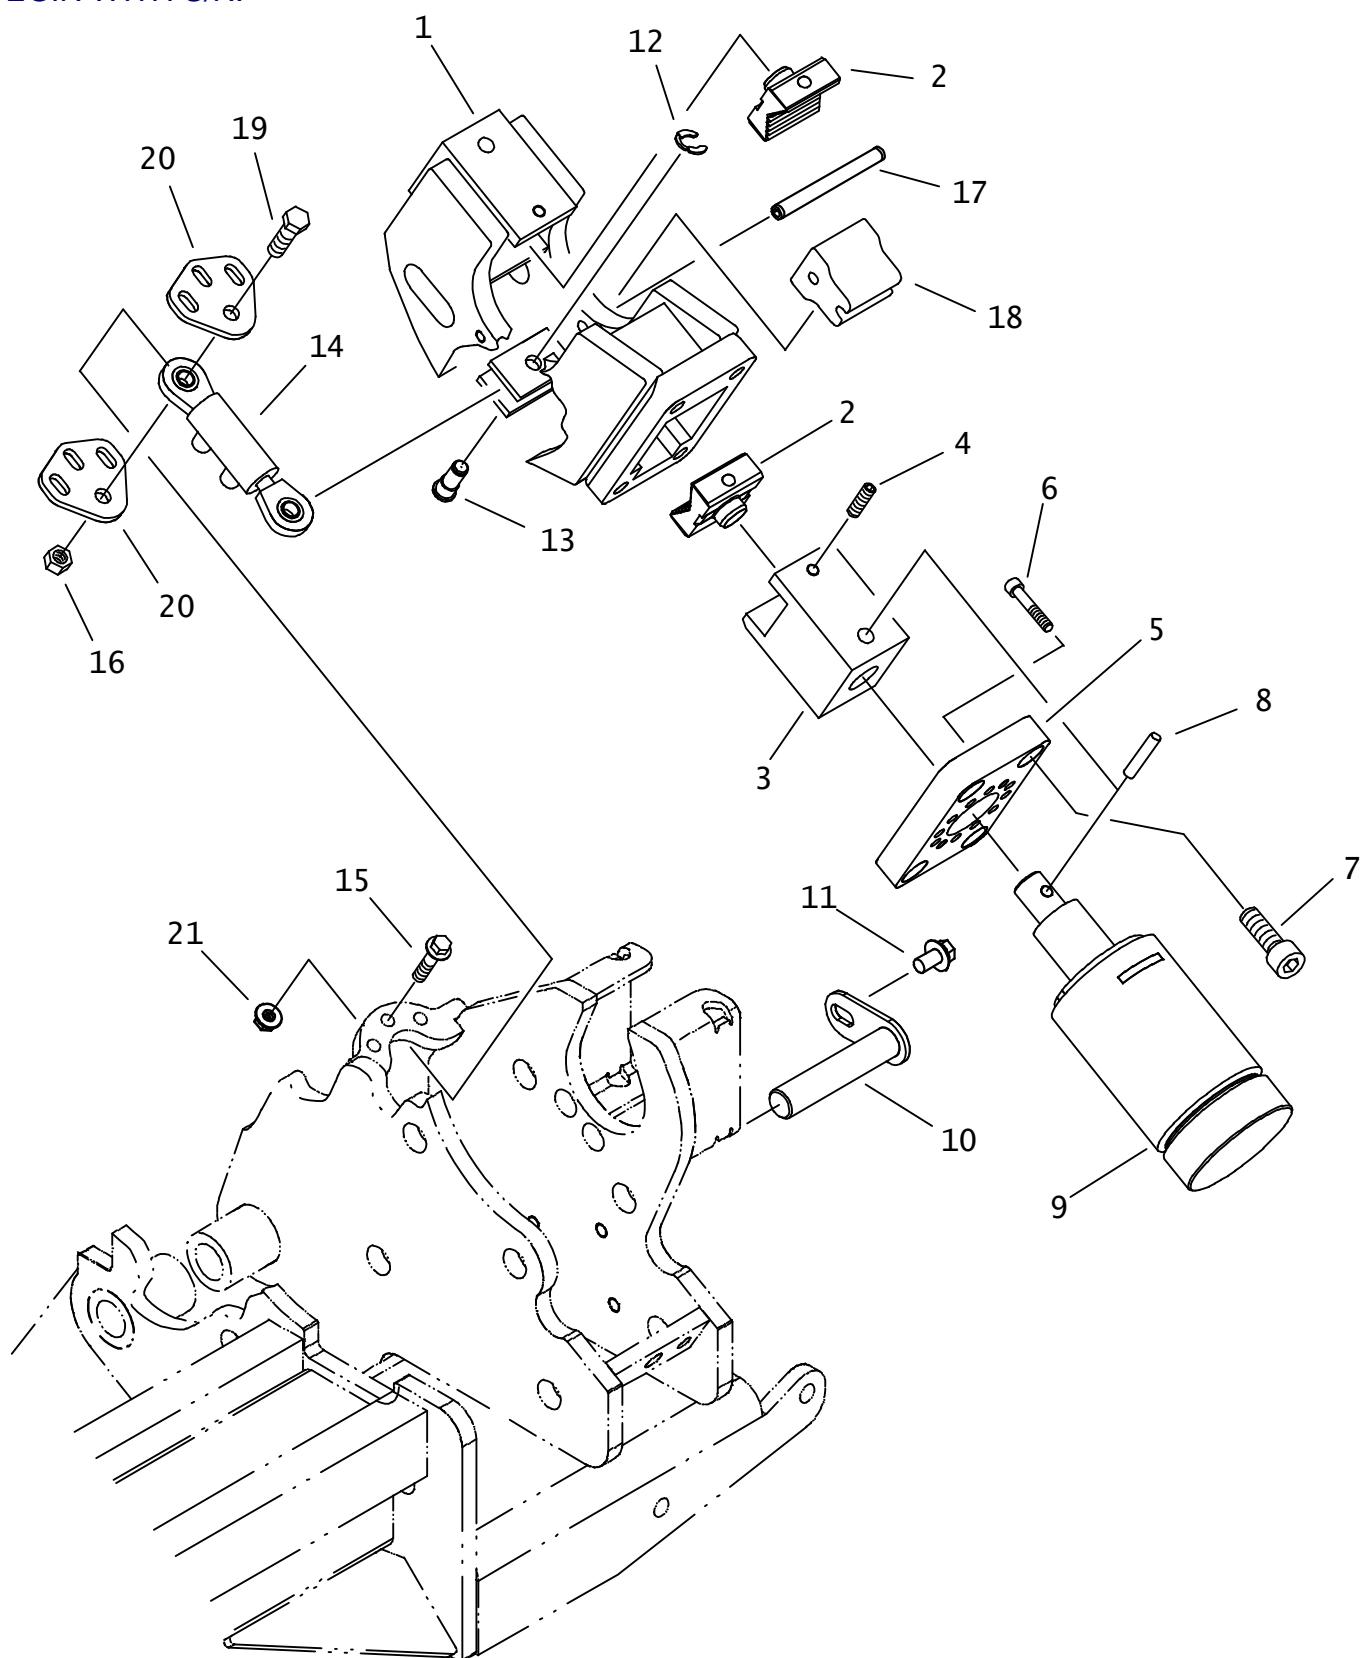STATIONARY WRENCH
BEGIN WITH S/N:

STATIONARY WRENCH

BEGIN WITH S/N:


| REF | PART NO. | NUMBER | QTY | DESCRIPTION | REMARKS |
|-----|-------------|--------|-----|----------------------------------|------------------------------------|
| 1. | 300-2510 | 1 | 1 | FRONT WRENCH | BEGINS WITH S/N: CMWJI220K60000126 |
| 2. | 357-222 | 2 | 2 | JAW INSERT | |
| 3. | 357-225 | 1 | 1 | JAW | |
| 4. | 106-529 | 2 | 2 | SET SCREW (M10-1.50 X 10MM) | LOCTITE 242 |
| 5. | 316-545 | 1 | 1 | CYL HEAD PLATE | |
| 6. | 107-894 | 10 | 10 | SCREW (M8-1.25 X 45MM, SOC) | LOCTITE 242 |
| 7. | 107-884 | 4 | 4 | SCREW (M16-2.00 X 45MM, SOC) | LOCTITE 242 |
| 8. | 105-561 | 1 | 1 | ROLL PIN (3/8" X 2-3/4") | |
| 9. | 151-213 | 1 | 1 | CYL (3.5 X 1.75 X 2.0) | |
| 10. | 318-511 | 2 | 2 | WRENCH PIN - SHORT | |
| 11. | 105-1012 | 2 | 2 | FLG LK SCREW (M12-1.75 X 20MM) | |
| 12. | 115-506 | 1 | 1 | KLIP RING (.500") | |
| 13. | 179-528 | 1 | 1 | PIN | |
| 14. | 151-220 | 1 | 1 | CYLINDER (1.0 X .50 X .90) | |
| 15. | 106-995 | 3 | 3 | .FLG LK SCREW (M10-1.50 X 45MM) | |
| 16. | 106-685 | 1 | 1 | LOCKNUT(M12-1.75, PRV TRQ, 10.9) | |
| 17. | 107-295 | 2 | 2 | ROLL PIN (.375" X 3.750") | |
| 18. | 322-677 | 1 | 1 | PIPE SUPPORT | |
| 19. | 106-477 | 1 | 1 | SCREW (M12-1.75 X 45MM, 10.9) | |
| 20. | 323-061 | 2 | 2 | MOUNT PLATE | |
| 21. | 106-387 | 3 | 3 | FLG LOCKNUT (M10-1.50) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

FUEL TANK

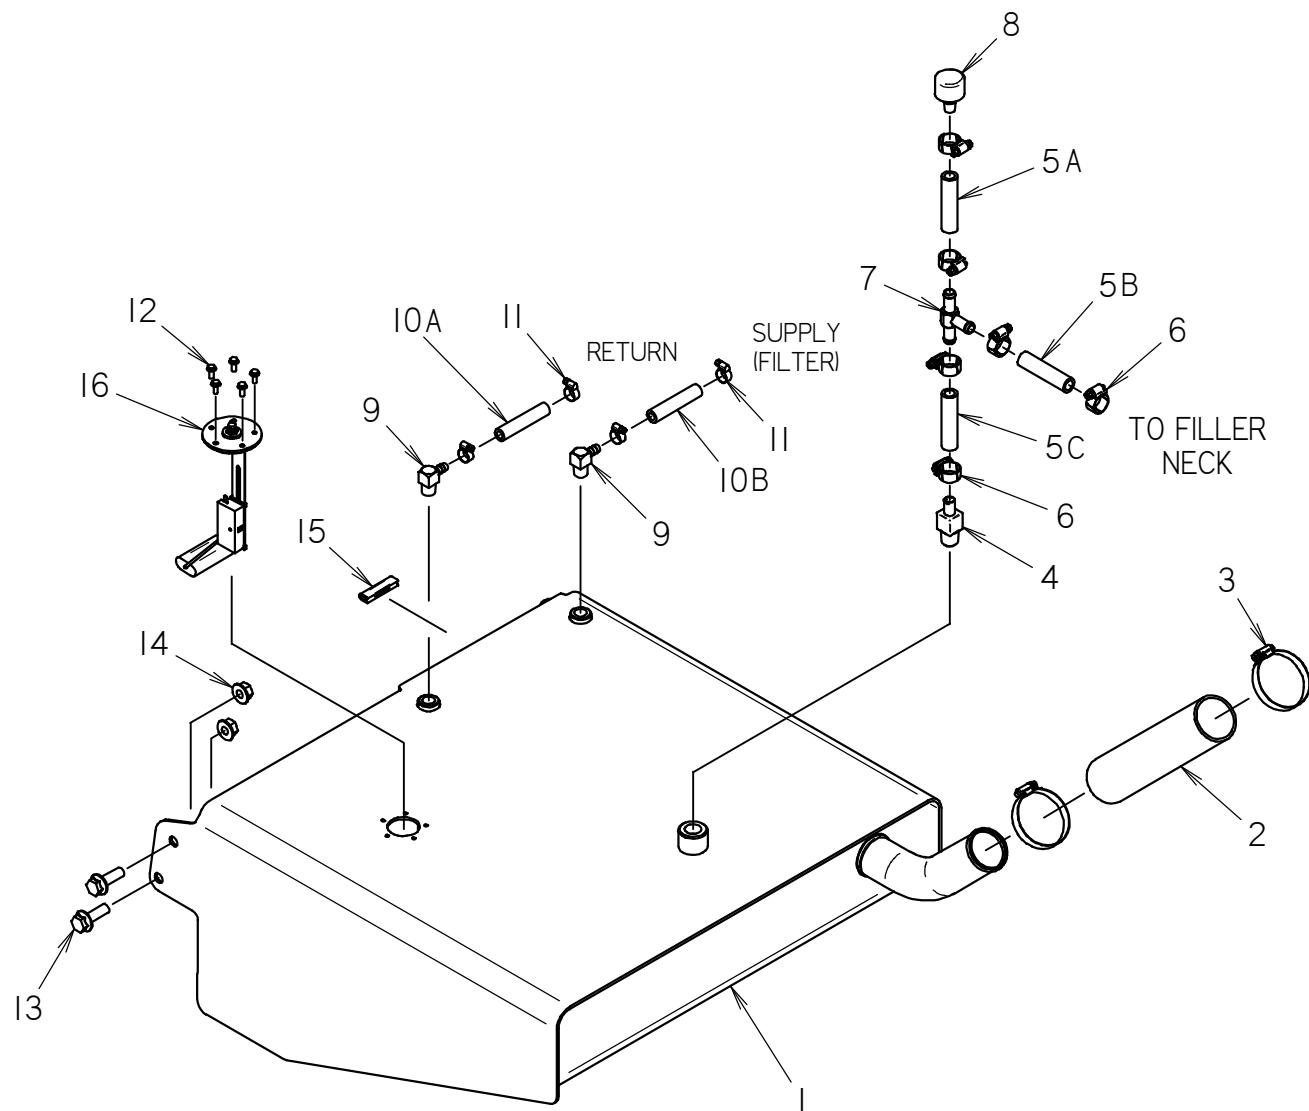

FUEL TANK

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---|
| 1 | 300-7774 | 1 | FUEL TANK | |
| 2 | I16-1003 | 10 | BULK HOSE (2", SOLD PER IN) | USE 1 @ 10" |
| 3 | I10-134 | 2 | WORM CLAMP (2.062" TO 2.750") | |
| 4 | 514-312 | 1 | S/O COUPLER (08N-08H) | |
| 5 | I16-322 | 27 | BULK HOSE (1/2", SOLD PER FT) | USE 1 @ 2" (5A), 1 @ 22" (5B) & 1 @ 3" (5C) |
| 6 | I10-217 | 6 | WORM CLAMP (7/16" TO 1") | |
| 7 | I56-729 | 1 | S/O TEE (08H-08H-08H) | |
| 8 | III-021 | 1 | BREATHER CAP (TANK) | |
| 9 | I53-871 | 2 | S/O COUPLER (06N-06H90, BRS) | |
| 10 | I16-881 | 163 | BULK HOSE (3/8", SOLD PER FT) | USE 1 @ 90" (10A) & 1 @ 73" (10B) |
| 11 | I10-249 | 4 | WORM CLAMP (1/4" TO 5/8") | |
| 12 | I05-214 | 5 | FLG SCREW (#10-24 X .5") | |
| 13 | I06-632 | 2 | FLG LK SCR (M12-1.75X35MM,SER) | |
| 14 | I06-709 | 2 | FLG LK NUT (M12-1.75) | |
| 15 | I15-686 | 12 | BULK EDGE (5/32", SOLD PER FT) | USE 1 @ 12" |
| 16 | 217-568 | 1 | FUEL SENDER | INCLUDES 165-704 GASKET |


NOT SHOWN:

FOOTNOTES:

NOTE:

ID0044338

GROUND DRIVE TRACKS

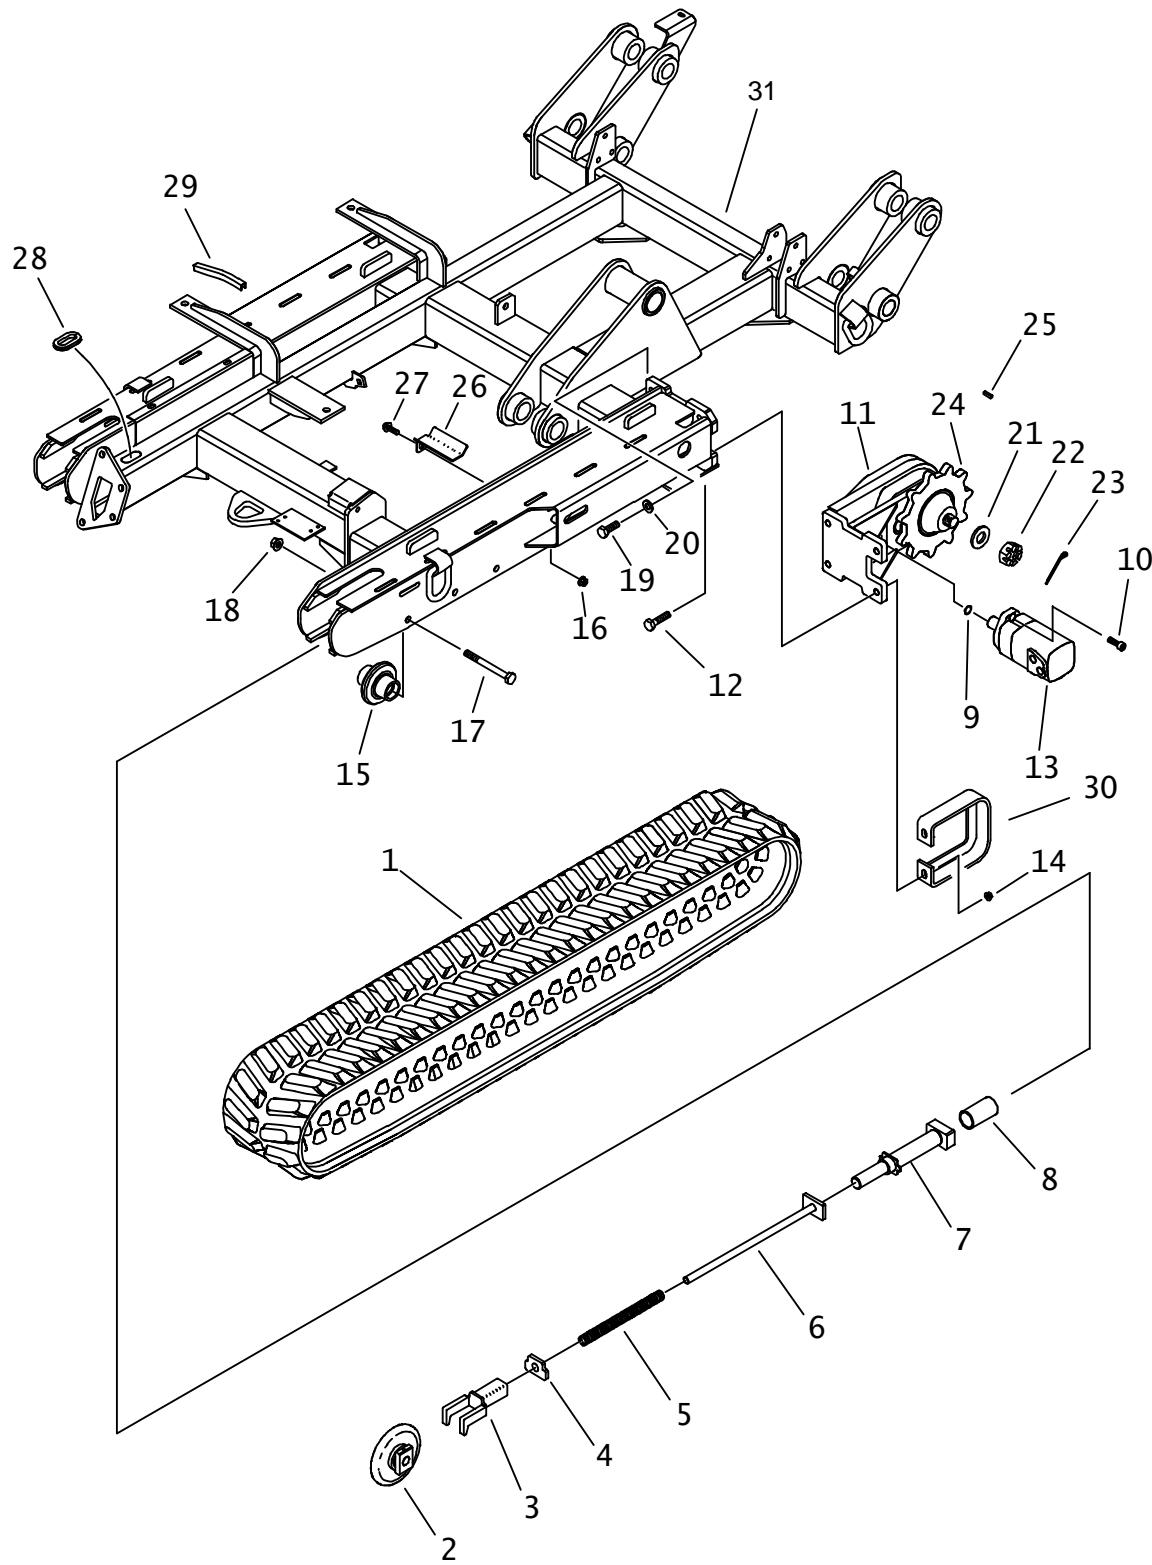


GROUND DRIVE TRACKS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|--------------------------------|
| 1. | 315-175 | 2 | GROUND DRIVE TRACK | |
| 2. | 170-336 | 2 | FRONT IDLER ROLLER | |
| 3. | 353-403 | 2 | YOKE | |
| 4. | 353-482 | 2 | SPRING PLATE | |
| 5. | 117-122 | 2 | COMPRESSION SPRING | |
| 6. | 353-402 | 2 | SPACER TUBE | |
| 7. | 151-161 | 2 | GREASE CYLINDER | |
| 8. | 353-473 | 2 | STOP TUBE | |
| 9. | 157-099 | - | O-RING (042 D70) | INCLUDED WITH 166-172 |
| 10. | 106-204 | 4 | BOLT (1/2-NC X 1-1/2", SOC) | TORQUE TO 100 FT-LB |
| 11. | 166-172 | 2 | GEAR BOX (5.44:1) | GROUND DRIVE. Includes item 13 |
| 12. | 106-341 | 4 | SCREW (M16-2.00 X 70mm) | TORQUE TO 159 FT-LB |
| 13. | 155-581 | - | HYD MOTOR | |
| | 500-658 | | SEAL REPAIR KIT | |
| 14. | 106-355 | 4 | FLG NUT (M16-2.00, 10.9) | |
| 15. | 170-335 | 14 | IDLER ROLLER | |
| 16. | 106-709 | 2 | FLG LOCKNUT (M12-1.75) | |
| 17. | 107-337 | 14 | SCREW (M16-2.00 X 150mm, 10.9) | |
| 18. | 106-442 | 14 | FLG LOCKNUT (M16-2.0, PRV TRQ) | |
| 19. | 106-340 | 4 | SCREW (M16-2.00 x 50mm) | TORQUE TO 159 FT-LB |
| 20. | 106-392 | 4 | WASHER (M16) | |
| 21. | 105-1352 | 2 | WASHER (1.265) | |
| 22. | 105-917 | 2 | CASTLE NUT (1-1/4-NF) | TORQUE TO 525-675 FT-LB |
| 23. | 105-501 | 2 | COTTER PIN (.125" X 2.0") | |
| 24. | [174-008] | 2 | SPROCKET (11T) | |
| | 140-1084 | 2 | SPROCKET (11T) | |
| 25. | 166-857 | 2 | KEY (.437" X 1.950") | |
| 26. | 348-962 | 2 | HOSE PROTECTOR | |
| 27. | 106-632 | 2 | FLG LK SCREW (M12-1.75 X 35mm) | |
| 28. | 115-663 AR | | GROMMET EDGE (1/4" X 12.7") | USE 6.35" |
| 29. | 116-259 AR | | BULK EDGE (1/2", SOLD PER FT) | USE 7" |
| 30. | 324-456 | 2 | TRACK SUPPORT | |
| 31. | 325-469 | - | FRAME | |

NOT SHOWN:

FOOTNOTES:

NOTE:

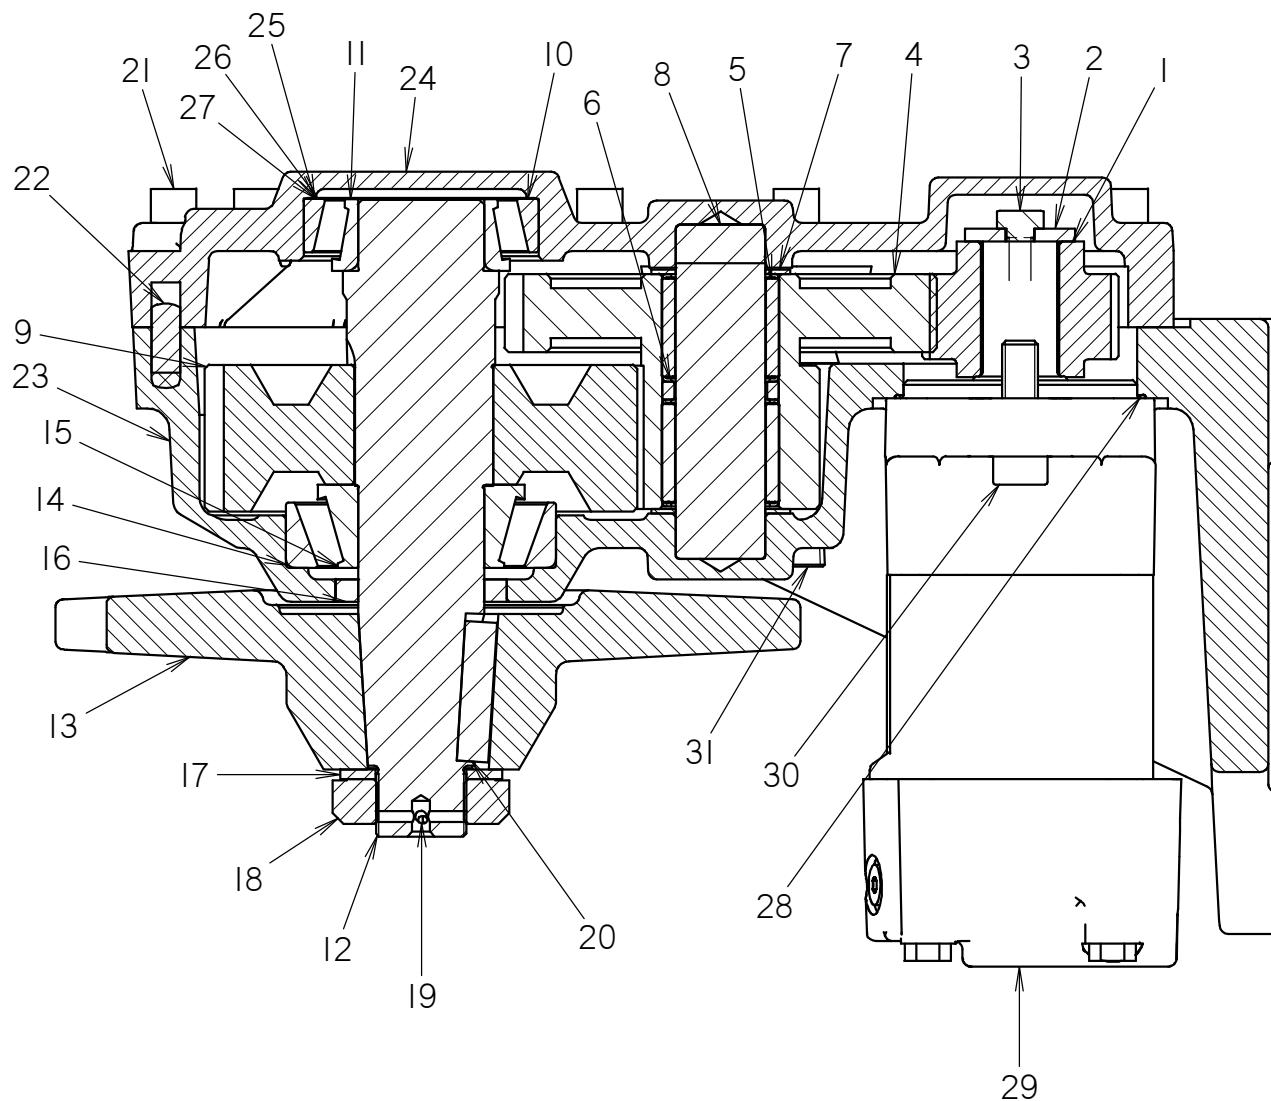**GEARBOX
GROUND DRIVE**

GEARBOX

GROUND DRIVE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---|
| | I66-172 | 1 | GEARBOX (5.44.I) | INCLUDES REF. NO'S I-I2, I4-I6, 2I-3I |
| I | I68-052 | 1 | INPUT PINION | |
| 2 | I05-069 | 1 | WASHER (.406") | |
| 3 | I05-024 | 1 | LK BOLT (3/8-NC X 3/4", NLK) | TORQUE TO 45 FT-LBS |
| 4 | I68-051 | 1 | CLUSTER GEAR | |
| 5 | I26-185 | 2 | BEARING CAGE (I.50 WD) | |
| 6 | I82-220 | 1 | SPACER | |
| 7 | I26-017 | 2 | BEARING RACE (I.25") | |
| 8 | I79-235 | 1 | PIN | |
| 9 | I68-053 | 1 | OUTPUT GEAR | |
| I0 | I25-270 | 1 | TAPERED RACE (3.265") | |
| I1 | I25-269 | 1 | TAPERED BEARING (I.75") | |
| I2 | I60-449 | 1 | SHAFT | |
| I3 | I40-1084 | 1 | II TOOTH SPROCKET | SUPERSEDES I74-008 |
| I4 | I25-326 | 1 | TAPERED RACE (3.75") | |
| I5 | I25-327 | 1 | TAPERED BEARING (I.750") | |
| I6 | I55-88I | 1 | INTERNAL SEAL (I.750") | |
| I7 | I05-1352 | 1 | WASHER (I.265) | |
| I8 | I05-9I7 | 1 | CASTLE NUT (I-I/4-NF) | TORQUE TO 525-675 FT-LBS |
| I9 | I05-50I | 1 | COTTER PIN (.I25" X 2.0") | |
| I0 | I66-857 | 1 | KEY (.437" X I.95") | |
| I1 | I06-857 | 14 | SCREW (M10-I.50 X 55MM, SOCI) | TORQUE TO 45 FT-LBS |
| I2 | I06-866 | 1 | DOWEL PIN (M10 X 30MM) | |
| I3 | I48-749 | 1 | HOUSING (MACHINED) | |
| I4 | I48-254 | 1 | CAST COVER, MACHINED | |
| I5 | I65-800 | 1 | SHIM (.002") | AS REQUIRED |
| I6 | I65-80I | 1 | SHIM (.003") | AS REQUIRED |
| I7 | I65-802 | 1 | SHIM (.007") | AS REQUIRED |
| I8 | I57-099 | 1 | O-RING (O42 D70) | |
| I9 | I55-58I | 1 | HYD MOTOR | |
| I0 | I06-204 | 2 | BOLT (I/2 - NC X I.50", SOCI) | USE LOCTITE 27I OR EQUIVALENT, TORQUE TO 100 FT-LBS |
| I1 | I15-025 | 4 | PLUG (08N, SQ FM, MAG) | |

NOT SHOWN:


FOOTNOTES:

NOTE:

FRONT IDLER

ENDS WITH S/N: CMWSK350P60000600
ENDS WITH S/N: CMWSK650A60000427

ENDS WITH S/N: CMWSK500H60000254
ENDS WITH S/N: CMWXT850C60000125

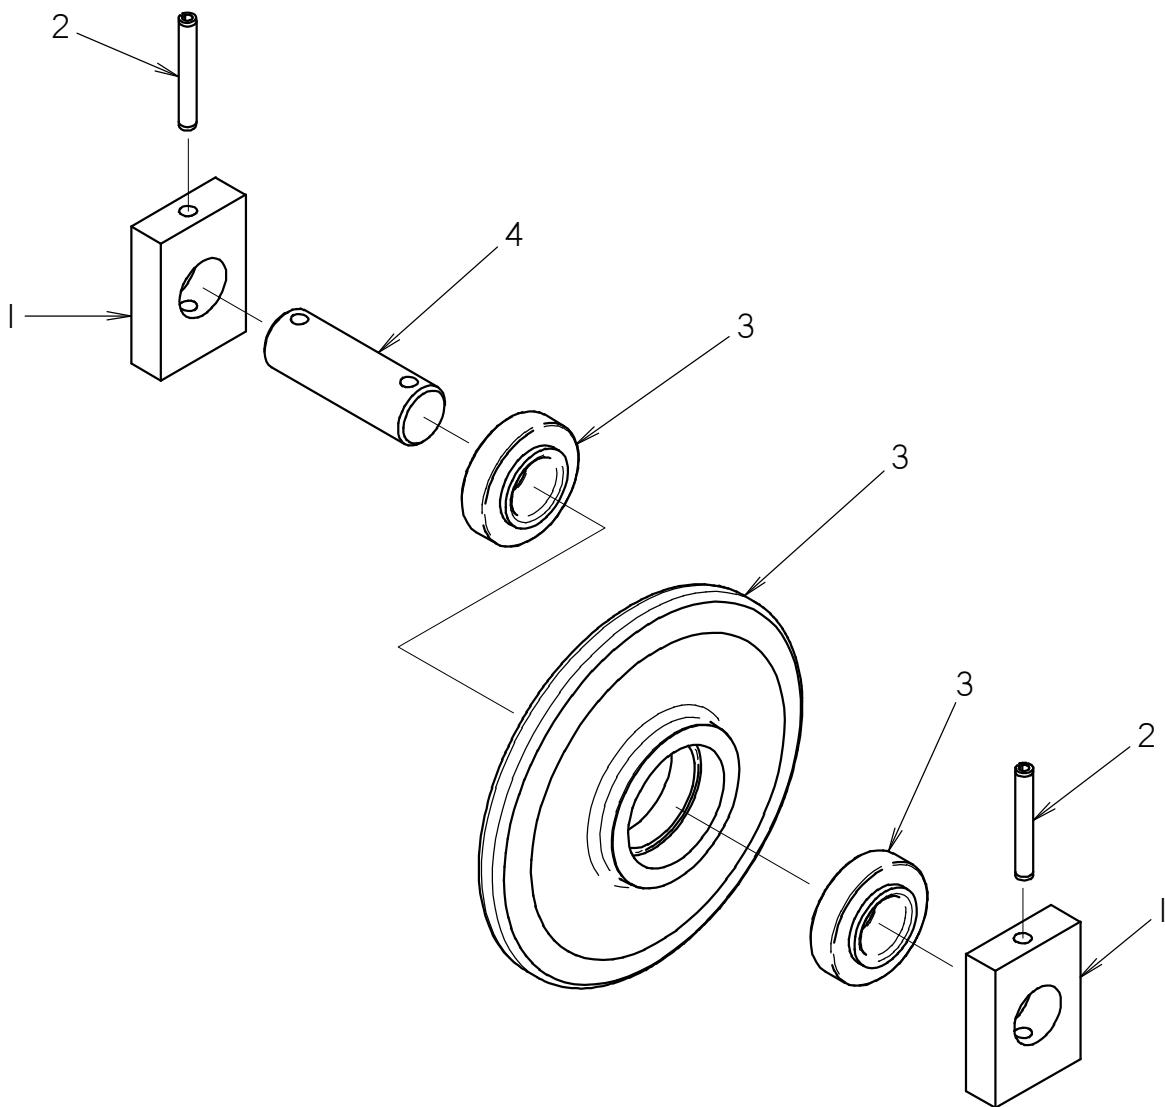

FRONT IDLER

ENDS WITH S/N: CMWSK350P60000600
 ENDS WITH S/N: CMWSK650A60000427

ENDS WITH S/N: CMWSK500H60000254
 ENDS WITH S/N: CMWXT850C60000125

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------|-----------------------|
| I | 170-336 | - | FRONT IDLER ROLLER | INCLUDES REF NO'S I-4 |
| I | 353-477 | 2 | BLOCK, PUSH | |
| 2 | 105-561 | 2 | ROLL PIN (3/8" X 2-3/4") | |
| 3 | 170-342 | 1 | IDLER ROLLER SUB | SEE FOOTNOTE I |
| 4 | 167-307 | 1 | SHAFT, IDLER | |


NOT SHOWN:

FOOTNOTES:

- I. FOR REPLACEMENT BEARINGS, USE PART NUMBER 125-005.

NOTE:

GREASE CYLINDER

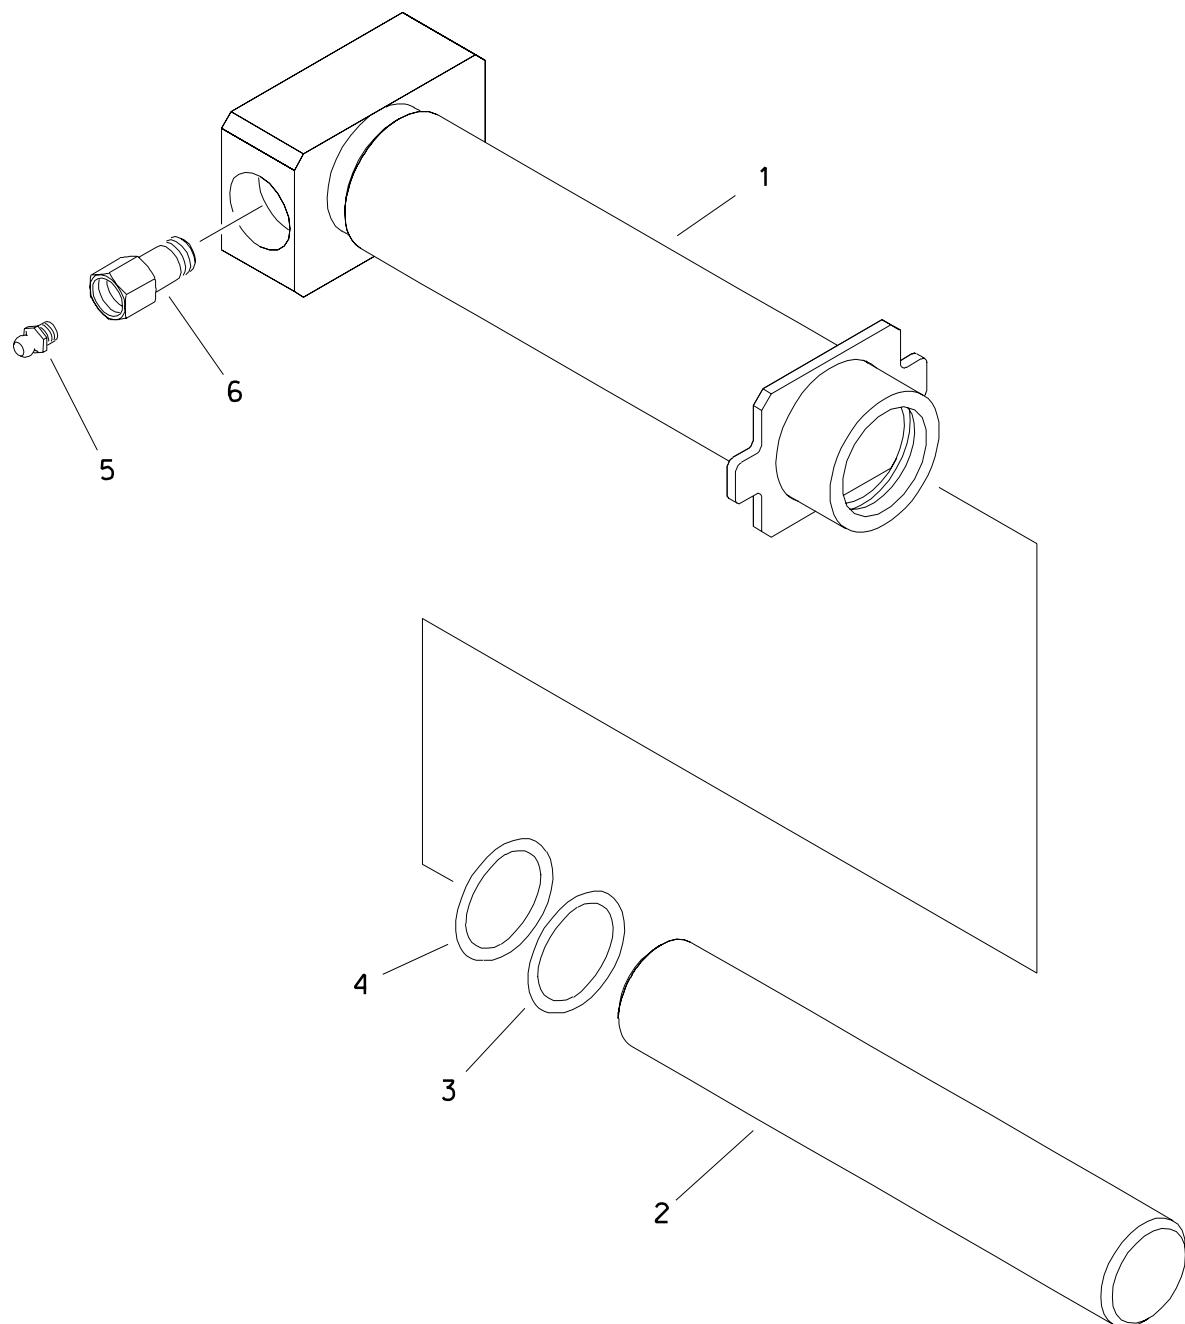


GREASE CYLINDER

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|----------------------------|----------------------|
| | 151-161 | 1 | GREASE CYLINDER | INCL REF NO.'S 1 - 4 |
| 1. | 353-404 | 1 | GREASE CYLINDER | |
| 2. | 153-501 | 1 | CYLINDER ROD | |
| 3. | 155-732 | 1 | BACKUP RING (224 D90) | |
| 4. | 155-704 | 1 | O-RING (224 D70) | |
| 5. | 115-019 | 1 | ZERK (02N) | |
| 6. | 159-093 | 1 | RELIEF VALVE (5/8-NF, 02N) | |

FOOTNOTES

STABILIZER

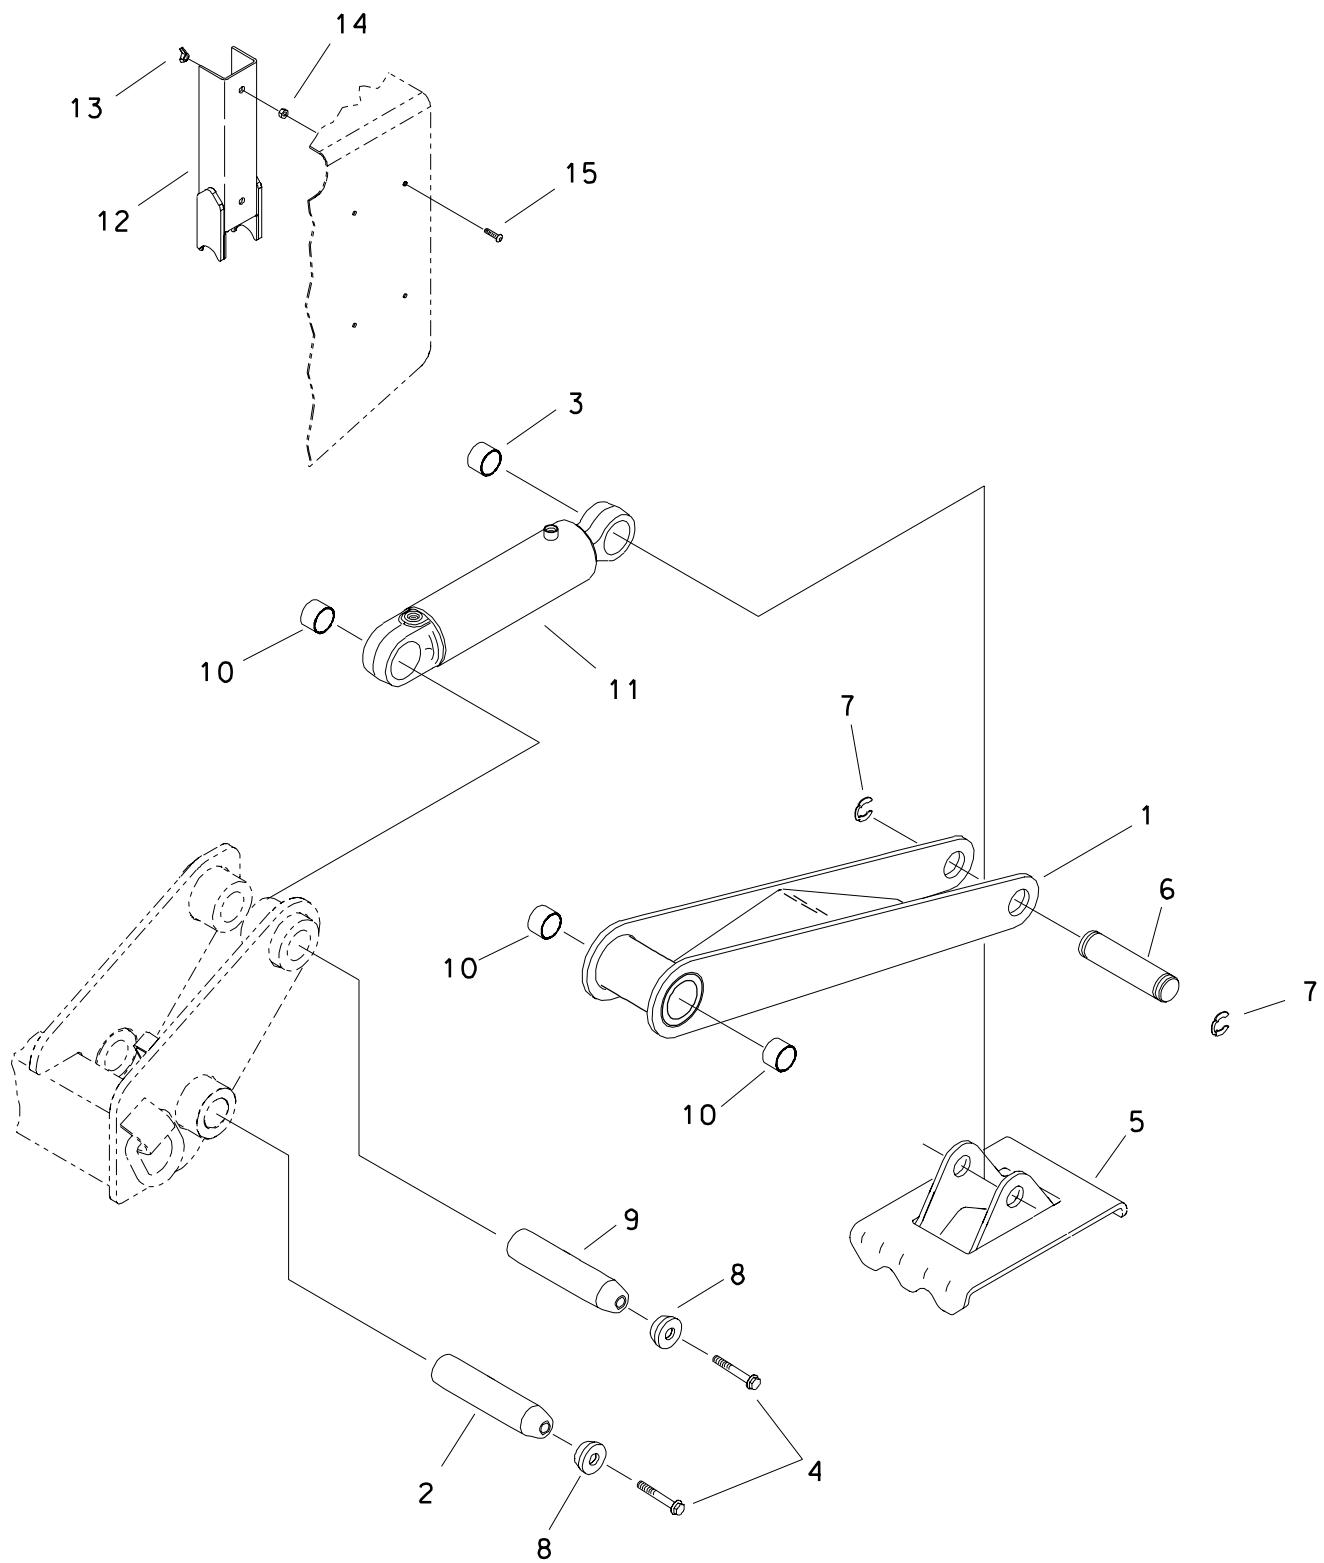


STABILIZER

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|--------------------------------|---------|
| 1. | 316-819 | 2 | STABILIZER ARM | |
| 2. | 183-882 | 2 | TAPERED PIN (44.4MM X 228.6MM) | |
| 3. | 178-884 | 2 | TENSION BUSHING (1.5") | |
| 4. | 106-470 | 4 | FLG SCREW (M16-2.00 X 40MM) | |
| 5. | 316-880 | 2 | STABILIZER PAD | |
| 6. | 183-209 | 2 | BARREL PIN | |
| 7. | 115-511 | 4 | KLIP RING (1-1/2") | |
| 8. | 181-975 | 4 | TAPERED INSERT (1.75") | |
| 9. | 179-242 | 2 | TAPERED PIN (44.45MM X 196MM) | |
| 10. | 125-773 | 6 | COMPOSITION BUSHING (1.75") | |
| 11. | 151-029 | 2 | CYL (3" X 1.5" X 10") | |
| 12. | 323-706 | 2 | CYLINDER LOCK | |
| 13. | 195-339 | 4 | WING NUT (1/4-NC) | |
| 14. | 105-078 | 4 | NUT (1/4-NC) | |
| 15. | 107-304 | 4 | SCREW (1/4-NC X 1", BUT SOC) | |

FOOTNOTES

FRAME TILT

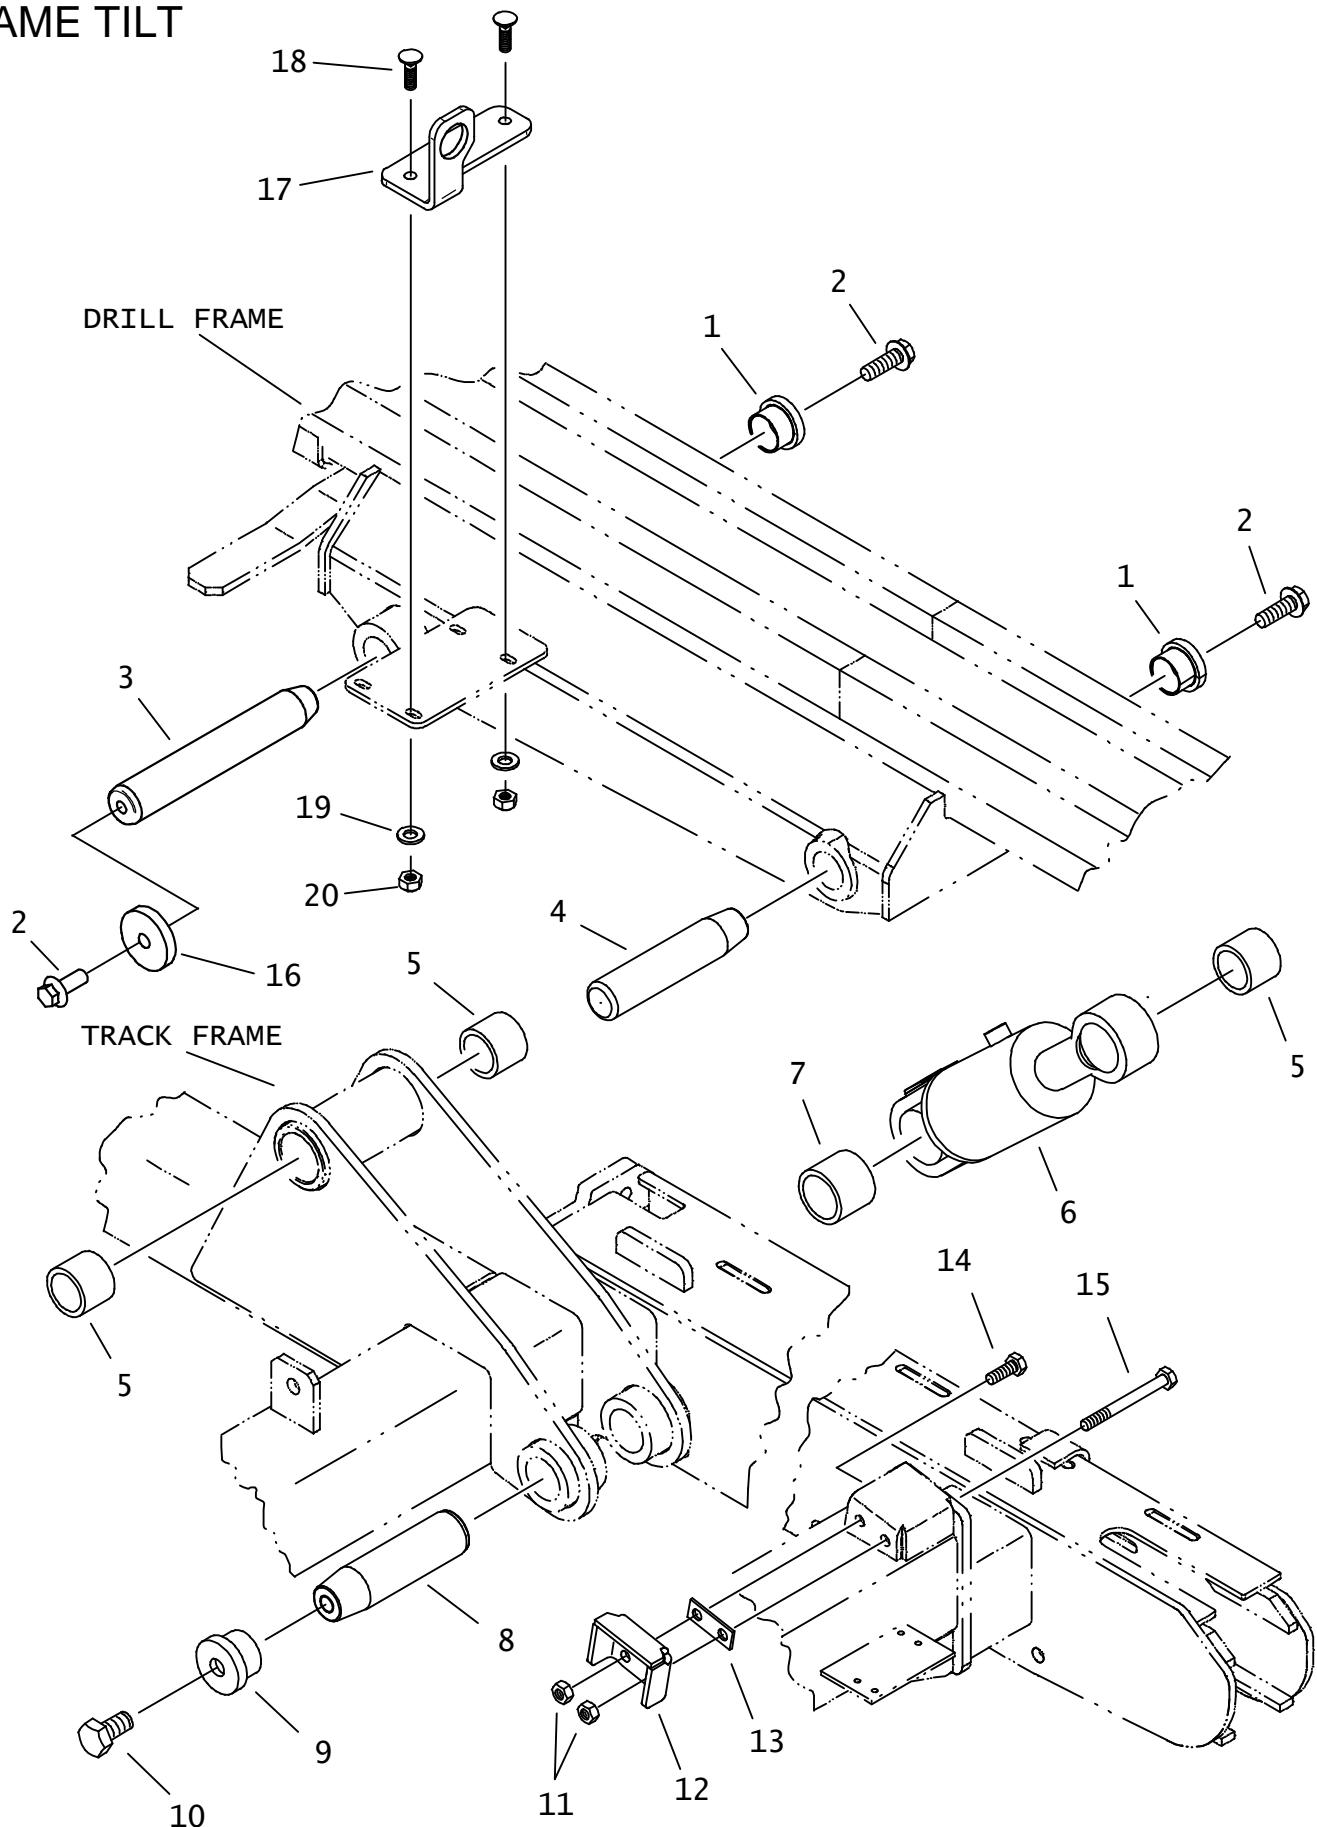

FRAME TILT


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|--------------------------------|
| 1. | 181-975 | 2 | TAPERED INSERT (1.75") | |
| 2. | 106-470 | 3 | FLG SCREW (M16-2.0 X 40MM) | USE #242 LOCTITE OR EQUIVALENT |
| 3. | 179-503 | 1 | TAPERED PIN (1.75" X 10.75") | |
| 4. | 183-768 | 1 | TAPERED PIN (44.4MM X 205MM) | |
| 5. | 125-773 | 3 | COMPOSITION BUSHING (1.75") | |
| 6. | 151-089 | 1 | CYL (3.5 X 1.75 X 3.0) | |
| 7. | 125-754 | 1 | COMPOSITION BUSHING (2") | |
| 8. | 183-919 | 1 | TAPERED PIN (50.8MM X 190MM) | |
| 9. | 184-064 | 1 | TAPERED INSERT (2") | |
| 10. | 106-344 | 1 | SCREW (M20-2.5 X 40MM) | |
| 11. | 106-685 | 2 | LOCKNUT(M12-1.75 ,PRV TRQ,10.9) | |
| 12. | 320-169 | 1 | FRAME STOP | |
| 13. | 320-170 | AR | SHIM PLATE | |
| 14. | 105-247 | 1 | SCREW (M12-1.75 X 35MM) | |
| 15. | 106-579 | 1 | SCREW (M12-1.75 X 120MM) | DO NOT USE |
| 16. | 107-660 | 1 | WASHER | |
| 17. | 327-579 | 1 | BULKHEAD BRACKET | |
| 18. | 105-249 | 2 | CARRIAGE BOLT | |
| 19. | 106-390 | 2 | WASHER (M10) | |
| 20. | 105-047 | 2 | LOCK NUT | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PROXIMITY SWITCHES

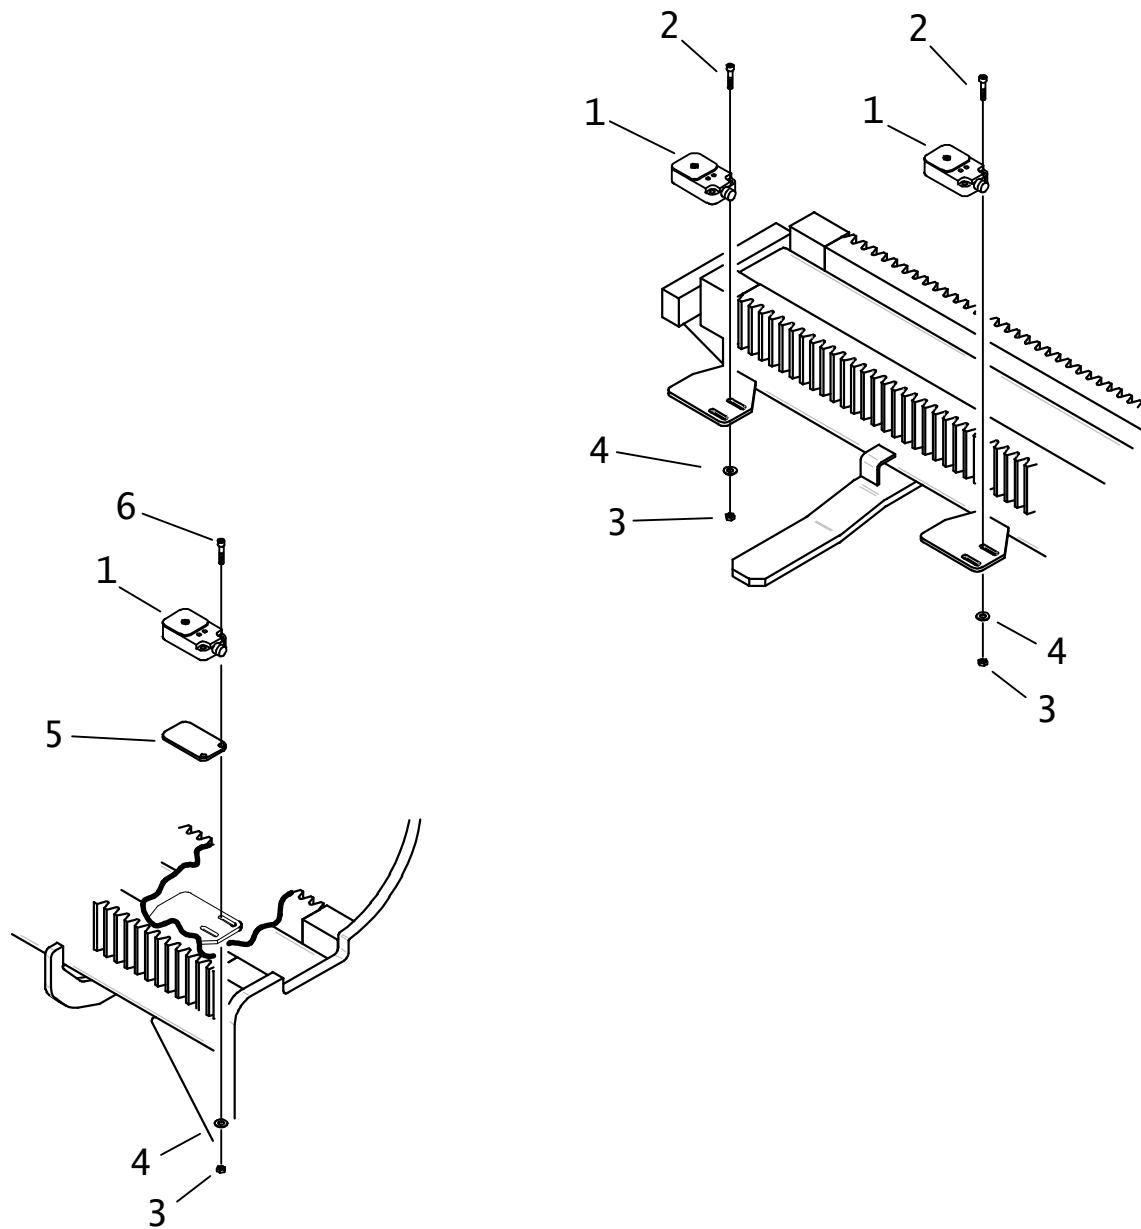

PROXIMITY SWITCHES


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------|---------|
| 1. | 215-1175 | 3 | PROXIMITY SWITCH | |
| 2. | 106-426 | 4 | SCREW (M5-0.80 X 25MM, SOC) | |
| 3. | 106-850 | 6 | LOCKNUT (M5-0.80) | |
| 4. | 105-284 | 6 | WASHER (3/16") | |
| 5. | 107-451 | 1 | SHIM | |
| 6. | 107-465 | 2 | SCREW (M5-0.80 X 30MM, SOC) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PROXIMITY SWITCHES DRILL PIPE

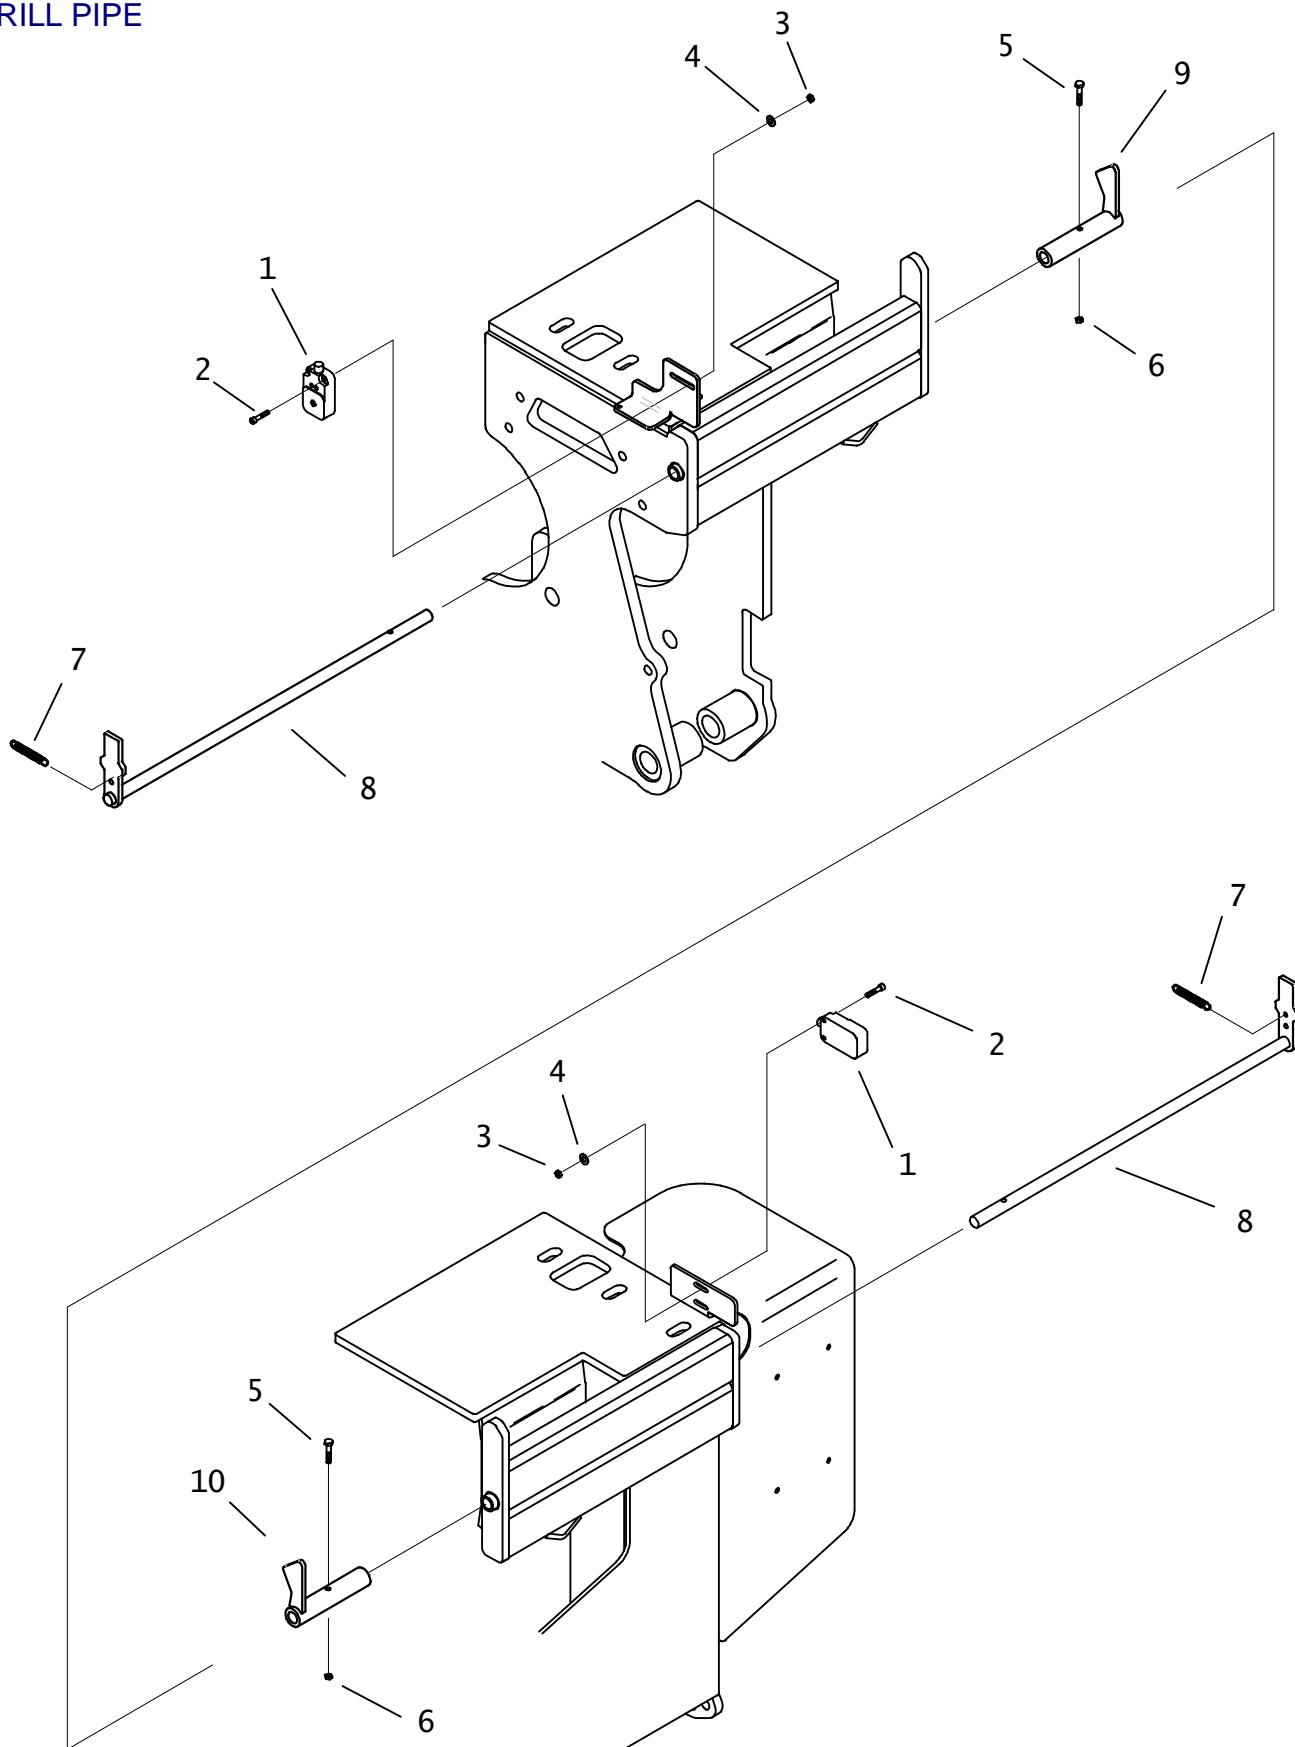

PROXIMITY SWITCHES DRILL PIPE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------|---------|
| 1. | 215-1175 | 2 | PROXIMITY SWITCH | |
| 2. | 106-426 | 4 | SCREW (M5-0.80 X 25MM, SOC) | |
| 3. | 106-850 | 4 | LOCKNUT (M5-0.80) | |
| 4. | 105-284 | 4 | WASHER (3/16") | |
| 5. | 105-818 | 2 | BOLT (1/4-NC X 1-1/2) | |
| 6. | 105-085 | 2 | LOCKNUT (1/4-NC) | |
| 7. | 115-601 | 2 | EXTENSION SPRING (4.062") | |
| 8. | 300-1890 | 2 | TARGET ARM | |
| 9. | 300-1889 | 1 | FOLLOWER ARM, FRONT | |
| 10. | 300-1888 | 1 | FOLLOWER ARM, REAR | |

NOT SHOWN:


FOOTNOTES:

NOTE:

NOTES:

OPERATOR'S STATION

OPERATOR STATION FLOOR

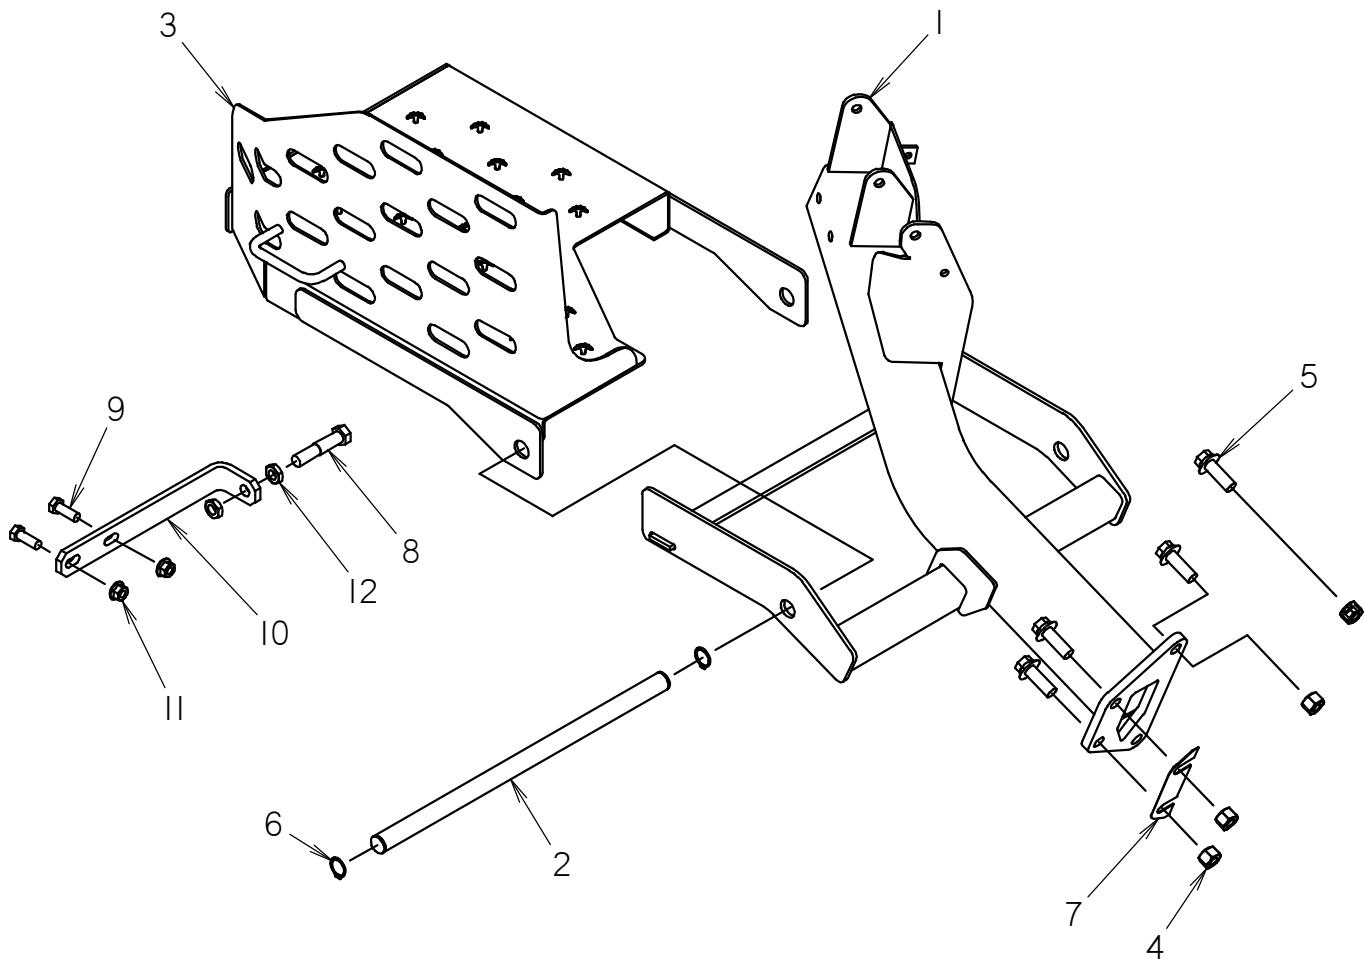

OPERATOR STATION FLOOR


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|-------------|-----|----------------------------------|---------|
| I 300-5390 | I | 1 | SEAT SUPPORT | |
| 2 I79-383 | I | 1 | PIN, GROOVED | |
| 3 300-5387 | I | 1 | FLOOR | |
| 4 I06-545 | 4 | 1 | LOCKNUT (M16-2.0, PRV TRQ, 10.9) | |
| 5 I07-336 | 4 | 1 | FLG SCREW (M16-2.00X45MM, 10.9) | |
| 6 I15-484 | 2 | 1 | EXTERNAL SNAP RING (1.000") | |
| 7 I19-008 | I | 1 | SHIM | |
| 8 I07-I97 | I | 1 | SCREW (M16-2.00 X 80MM, 10.9) | |
| 9 I05-247 | 2 | 1 | SCREW (M12-1.75 X 35MM) | |
| I0 I79-564 | I | 1 | STOW BAR | |
| I1 I06-709 | 2 | 1 | FLG LK NUT (M12-1.75) | |
| I2 I06-775 | 2 | 1 | JAM NUT (M16-2.00) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

OPERATOR SEAT

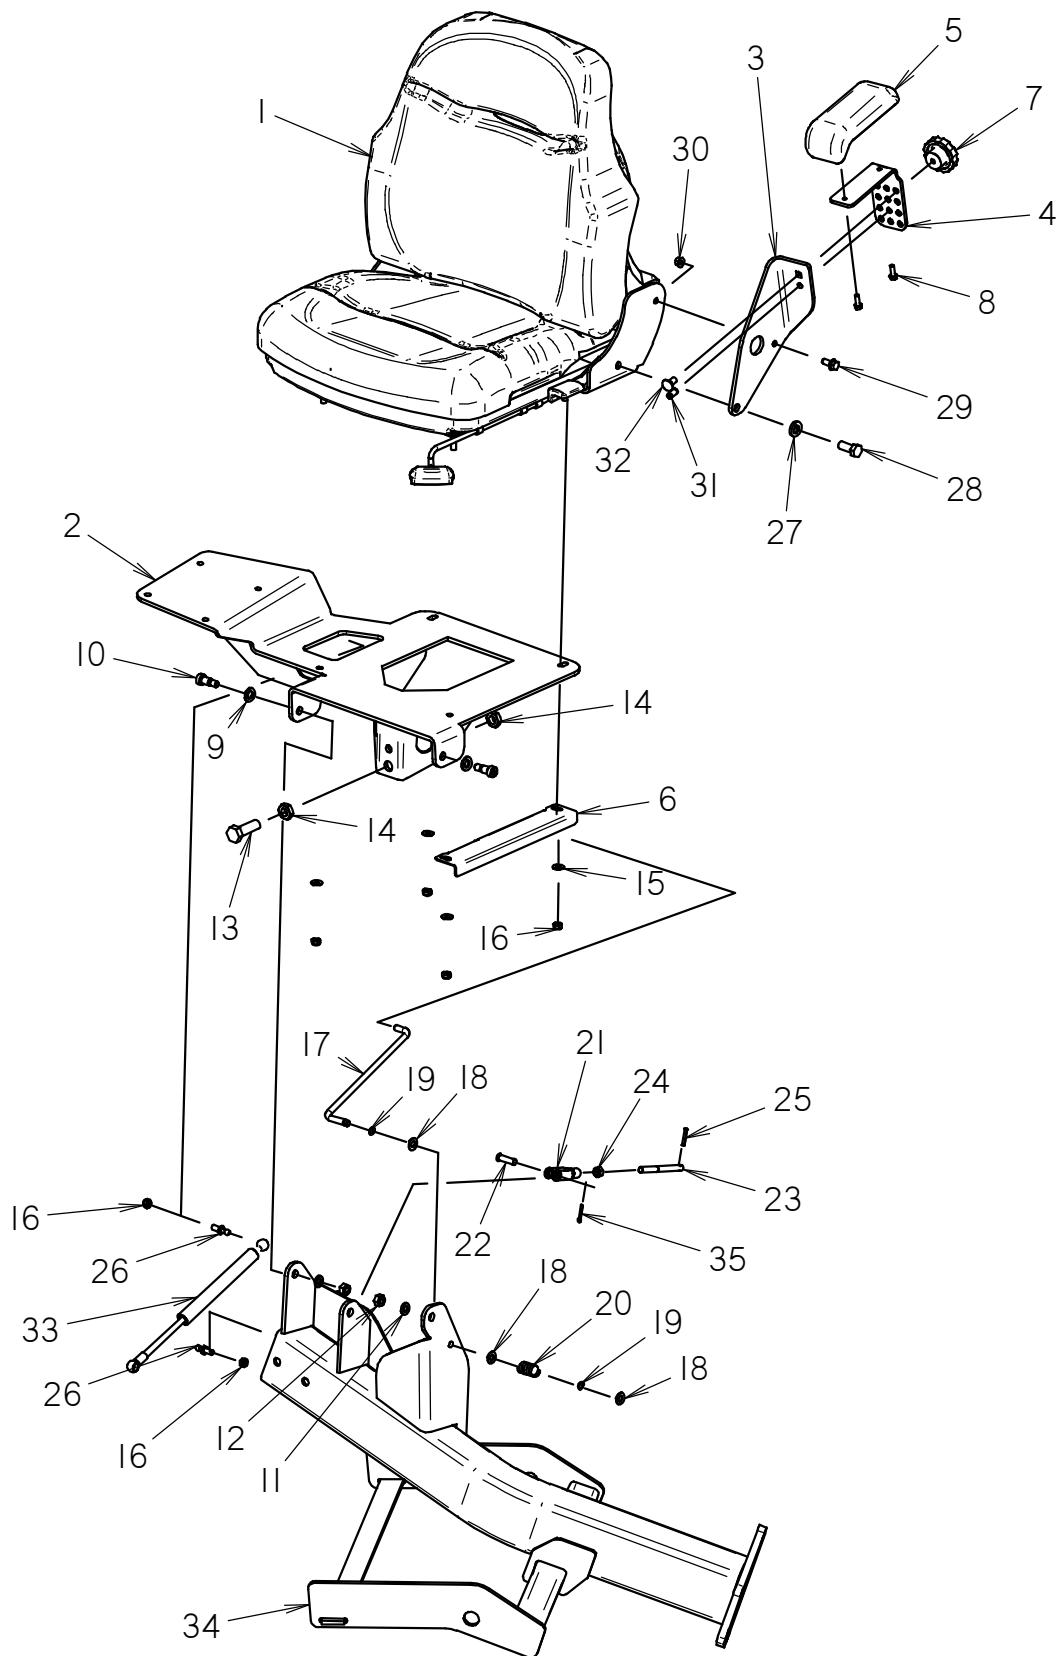

OPERATOR SEAT


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------------|---------|
| 1 | I17-631 | 1 | SEAT ASSEMBLY | |
| 2 | 300-5605 | 1 | SEAT MOUNT | |
| 3 | 324-426 | 1 | ARMREST LOWER BRACKET | |
| 4 | 318-611 | 1 | UPPER ARM BRACKET | |
| 5 | I17-314 | 1 | ARM REST | |
| 6 | I79-980 | 1 | ROD GUIDE | |
| 7 | I10-383 | 1 | KNOB (3/8-NC, BLACK) | |
| 8 | I06-159 | 2 | FLG SCREW (I/4-NC X 3/4") | |
| 9 | I06-391 | 2 | WASHER (M12) | |
| 10 | I07-802 | 2 | SHLD BLT (M12 X 16MM; M10-I.50) | |
| 11 | I06-390 | 2 | WASHER (M10) | |
| 12 | I05-894 | 2 | LOCKNUT (M10-I.50, PRV TRQ, I0.9) | |
| 13 | I06-340 | 1 | SCREW (M16-2.00 X 50MM) | |
| 14 | I06-775 | 2 | JAM NUT (M16-2.00) | |
| 15 | I05-095 | 4 | WASHER (I/4") | |
| 16 | I05-089 | 6 | LOCKNUT (5/16-NC) | |
| 17 | 329-049 | 1 | PROP BAR | |
| 18 | I06-255 | 3 | WASHER (.406") | |
| 19 | I15-477 | 2 | GRIP RING (.375") | |
| 20 | I15-563 | 1 | COMPRESSION SPRING | |
| 21 | I10-027 | 1 | CLEVIS (3/8-NF) | |
| 22 | I10-053 | 1 | CLEVIS PIN (3/8" X I.078") | |
| 23 | I79-782 | 1 | STOP ROD | |
| 24 | I05-093 | 1 | NUT (3/8-NF) | |
| 25 | I05-557 | 1 | ROLL PIN (3/16" X I-I/8") | |
| 26 | I10-655 | 2 | BALL SCREW (5/16-NC X I/2") | |
| 27 | I06-397 | 1 | WASHER (M12, HARDENED) | |
| 28 | I05-273 | 1 | SCREW (M12-I.75 X 30MM) | |
| 29 | I06-162 | 1 | FLG SCREW (M8-I.25 X 20MM, GD8) | |
| 30 | I06-386 | 1 | FLG LOCKNUT (M8-I.25) | |
| 31 | I08-I74 | 1 | ROLL PIN (3/8" X .750") | |
| 32 | I07-702 | 1 | CARRIAGE BOLT (3/8-NC X 3/4") | |
| 33 | I05-694 | 1 | STRUT (90 LB.) | |
| 34 | 300-5390 | 1 | SEAT SUPPORT | |
| 35 | I05-523 | 1 | COTTER PIN (.125" X .750") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

LEFT CONSOLE

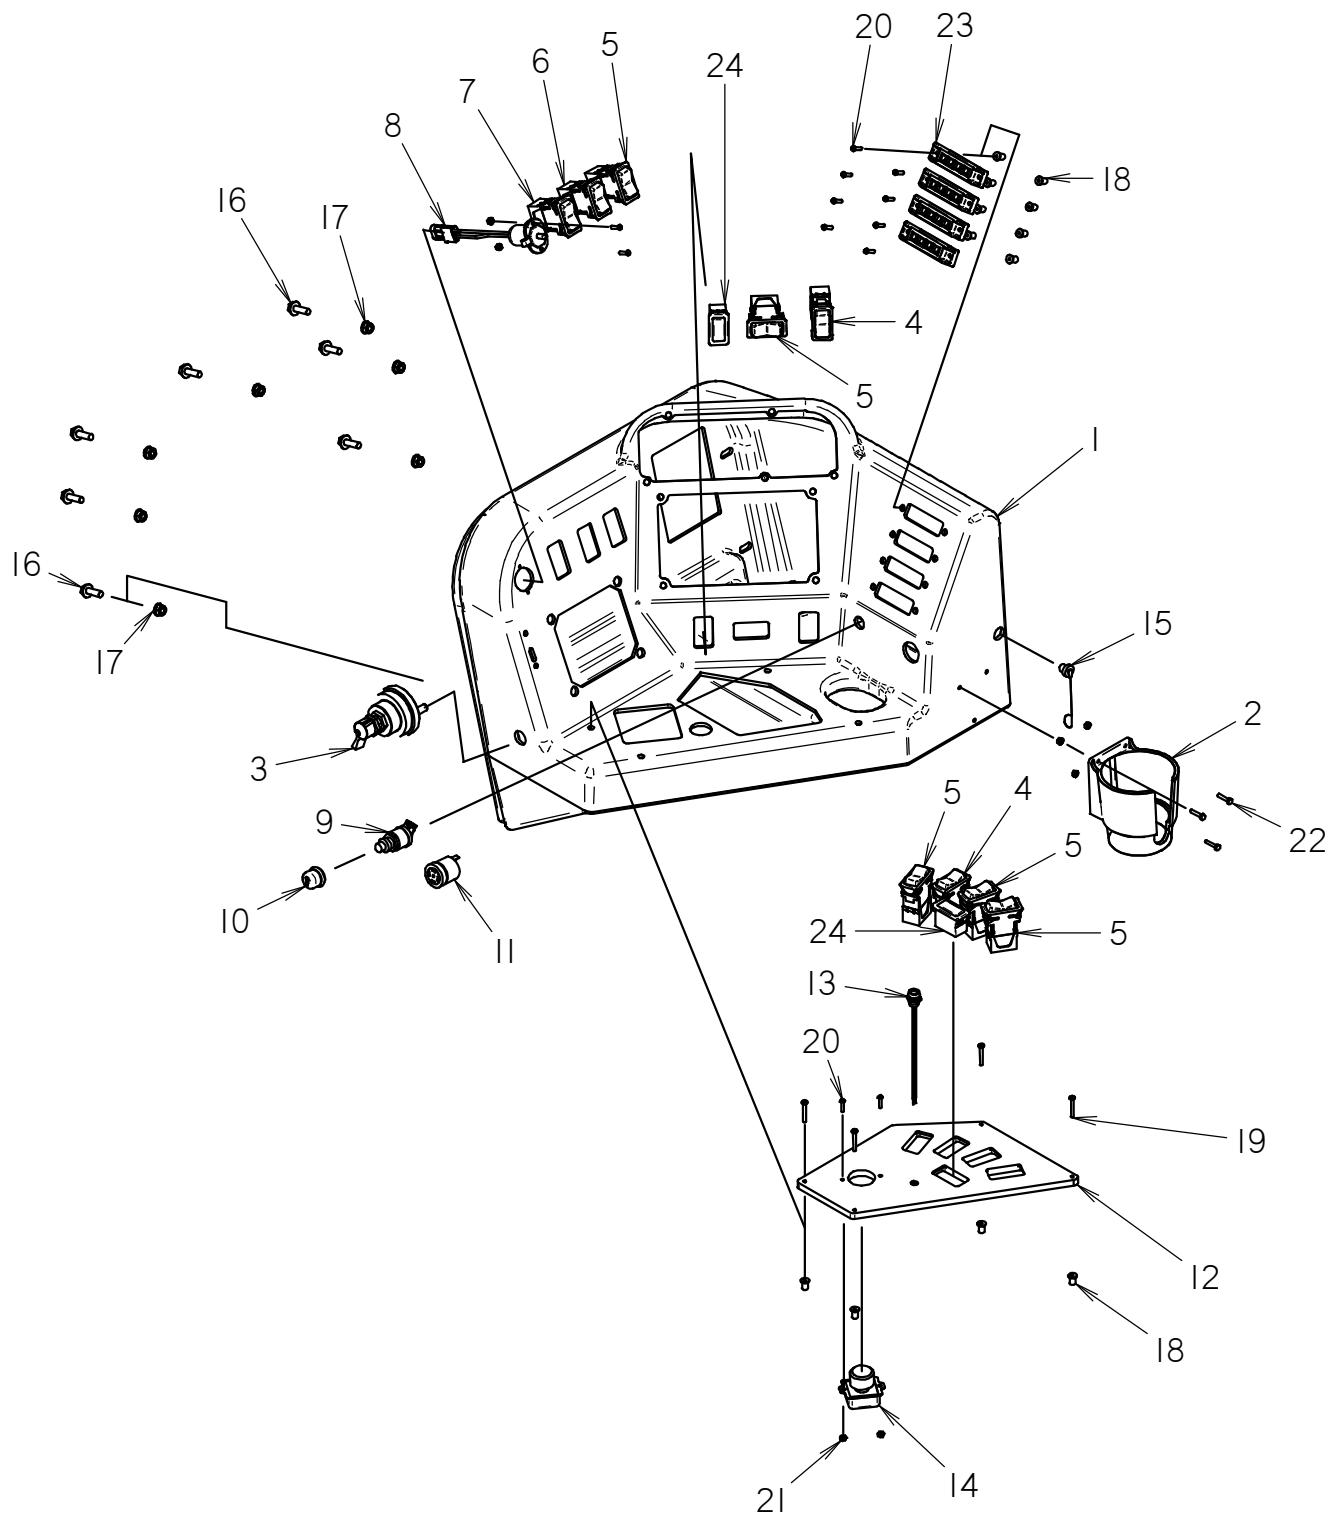

LEFT CONSOLE


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------|
| 1 | 362-I333 | 1 | LEFT CONSOLE | |
| 2 | I17-889 | 1 | CUP HOLDER | |
| 3 | 217-819 | 1 | BATTERY DISCONNECT SWITCH | |
| 4 | 217-907 | 2 | ROCKER SWITCH (DPDT) ON-ON | |
| 5 | 222-I45 | 5 | ROCKER SWITCH DPDT(ON)-ON-(ON) | |
| 6 | 217-916 | 1 | ROCKER SWITCH (DPDT) ON-OFF-ON | |
| 7 | 217-908 | 1 | ROCKER SWITCH DPDT ON-ON-(ON) | |
| 8 | 214-301 | 1 | ACCESSORY SOCKET | |
| 9 | 306-607 | 1 | HORN BUTTON | |
| 10 | 306-608 | 1 | BUTTON COVER | |
| 11 | 306-603 | 1 | AUDIO ALARM | |
| 12 | 318-953 | 1 | VALVE COVE PANEL | |
| 13 | 214-563 | 1 | RED LED (12V DC) | |
| 14 | 214-566 | 1 | POTENTIOMETER | |
| 15 | 211-078 | 1 | CONNECTOR CAP (TURCK RS-CC) | |
| 16 | I06-381 | 7 | FLG LK SCREW (M8-1.25 X 25MM) | |
| 17 | I06-386 | 7 | FLG LOCKNUT (M8-1.25) | |
| 18 | I07-358 | 12 | WELLNUT (M4-0.7 X 12.67MM LG) | |
| 19 | I07-414 | 4 | SCREW (M4-0.70 X 30MM,BUT SOC) | |
| 20 | I07-580 | 12 | SCREW (M4-0.70 X 16MM,BUT SOC) | |
| 21 | I05-680 | 7 | NUT (M4, W/LK WSHR) | |
| 22 | I06-556 | 3 | SCREW (M4-0.70 X 20MM) | |
| 23 | 220-664 | 4 | INDICATOR ASSEMLBY | |
| 24 | I10-962 | 2 | FILLER PLUG | |

NOT SHOWN:

FOOTNOTES:

NOTE:

ESID MODULE & GAUGE PANEL

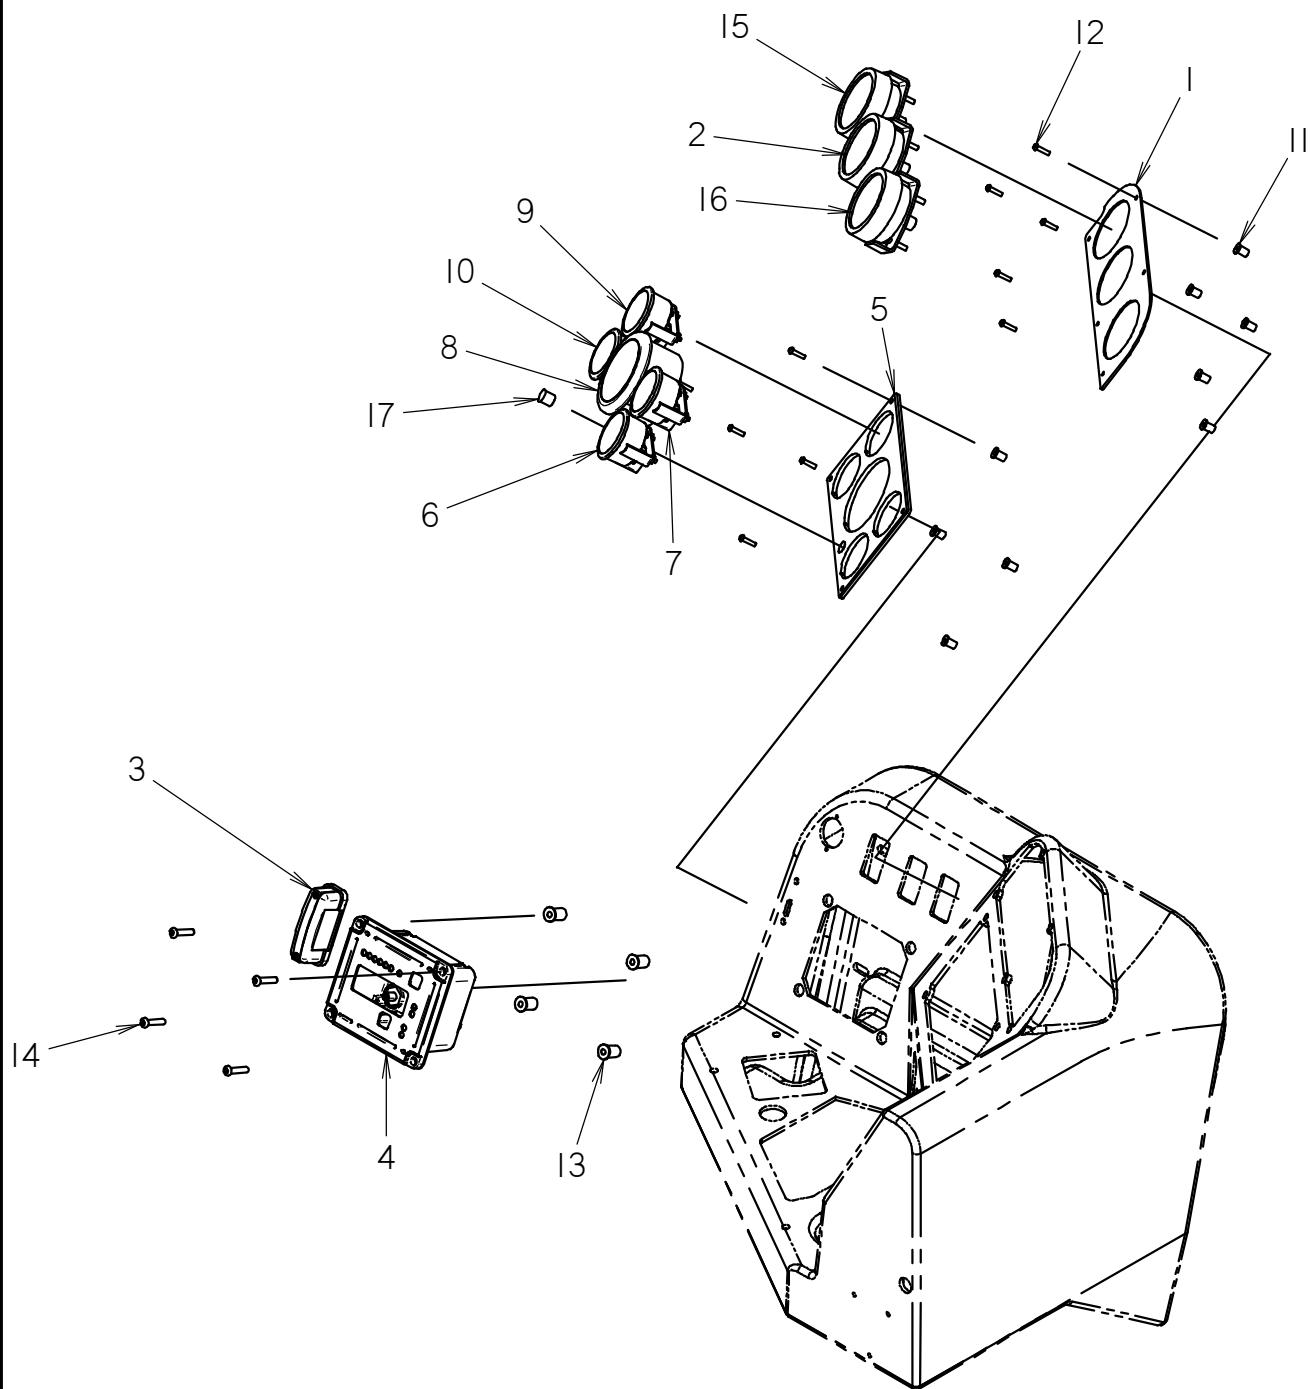

ESID MODULE & GAUGE PANEL

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---|
| 1 | 318-954 | 1 | GAUGE PANEL | |
| 2 | 217-294 | 1 | PRESSURE GAUGE (3000 PSI) | USE 258-095 ON JT2020 |
| 3 | 217-275 | 1 | CONSOLE LIGHT | |
| 4 | 220-1222 | 1 | ESID MODULE | |
| 5 | 363-696 | 1 | GAUGE CLUSTER PANEL | |
| 6 | 215-1582 | 1 | OIL PRESSURE GAUGE (0-150 PSI) | BEGINS WITH S/N CMWJ2020HA000I165; SEE FOOTNOTE I |
| 7 | 215-1465 | 1 | ANALOG WATER TEMP GAUGE | |
| 8 | 215-1373 | 1 | ANALOG TACH | |
| 9 | 211-328 | 1 | 2.06" VOLTMETER GAUGE | |
| 10 | 211-329 | 1 | 2.06" FUEL GAUGE | |
| II | 107-358 | 9 | WELLNUT (M4-0.7 X 12.67MM LG) | |
| I2 | 107-580 | 9 | SCREW (M4-0.70 X 16MM,BUT SOC) | |
| I3 | 107-871 | 4 | WELLNUT (M6-1.00 X 20.35MM LG) | |
| I4 | 108-184 | 4 | SCREW (M6-1.00 X 30MM, BUT SOC) | |
| I5 | 150-1444 | 1 | PRESSURE GAUGE (2000 PSI) | |
| I6 | 258-045 | 1 | PRESSURE GAUGE (4000 PSI) | USE 258-036 ON JT2020 |
| I7 | 362-1313 | 1 | HOLE PLUG | |


NOT SHOWN:

FOOTNOTES:

- I. TO BE USED WITH 215-1583 OIL PRESSURE SENDER (0-150PSI). BEFORE S/N: CMWJ2020HA000I165 215-1375 ANALOG OIL PRESSURE GAUGE WAS USED WITH 215-183 SENDER, OIL PRESSURE HD

NOTE:

VANDAL COVER

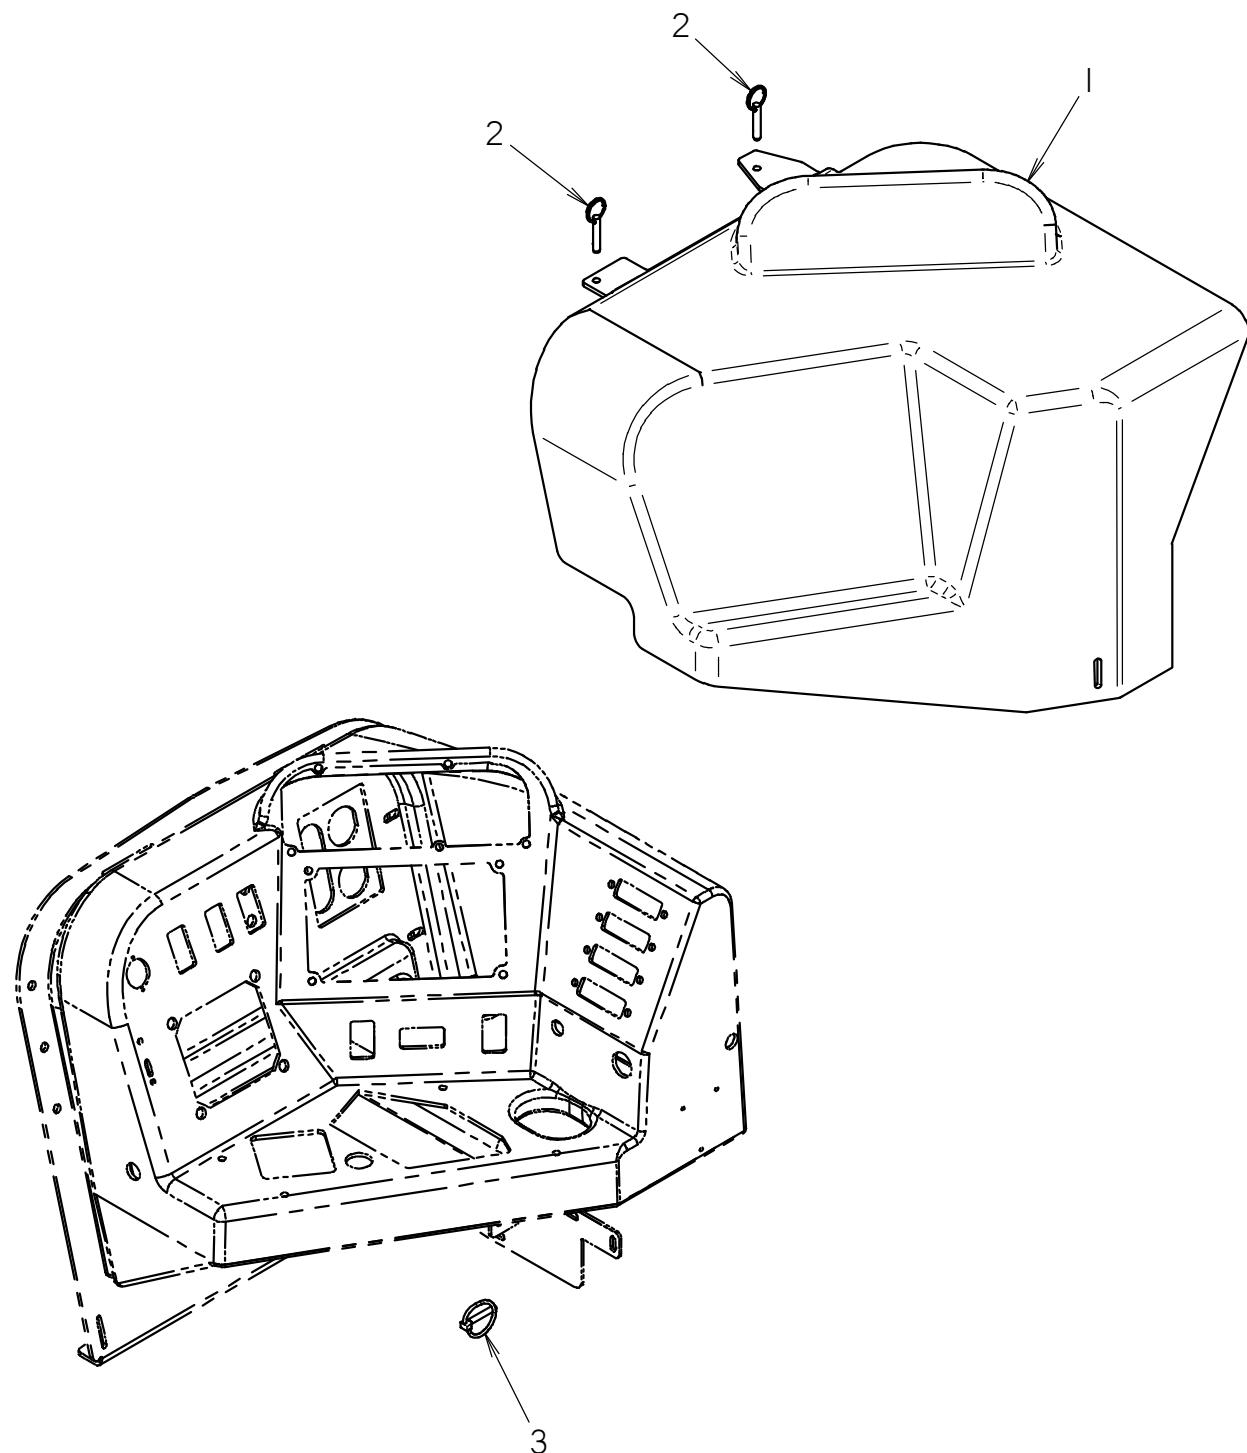

VANDAL COVER

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------|---------|
| 1 | 362-999 | 1 | VANDAL COVER | |
| 2 | 110-737 | 2 | PULL PIN (5/16" X 2") | |
| 3 | 105-1428 | 1 | LYNCH PIN (1/4 X 1-9/16) | |


NOT SHOWN:

FOOTNOTES:

- I. WHEN REMOVING VANDAL COVER, PLACE PINS IN MOUNT PLATE WELDED TO OUTSIDE FRAME RAIL OF ENGINE SKID, FOR SAFE STORAGE.

NOTE:

RIGHT CONSOLE

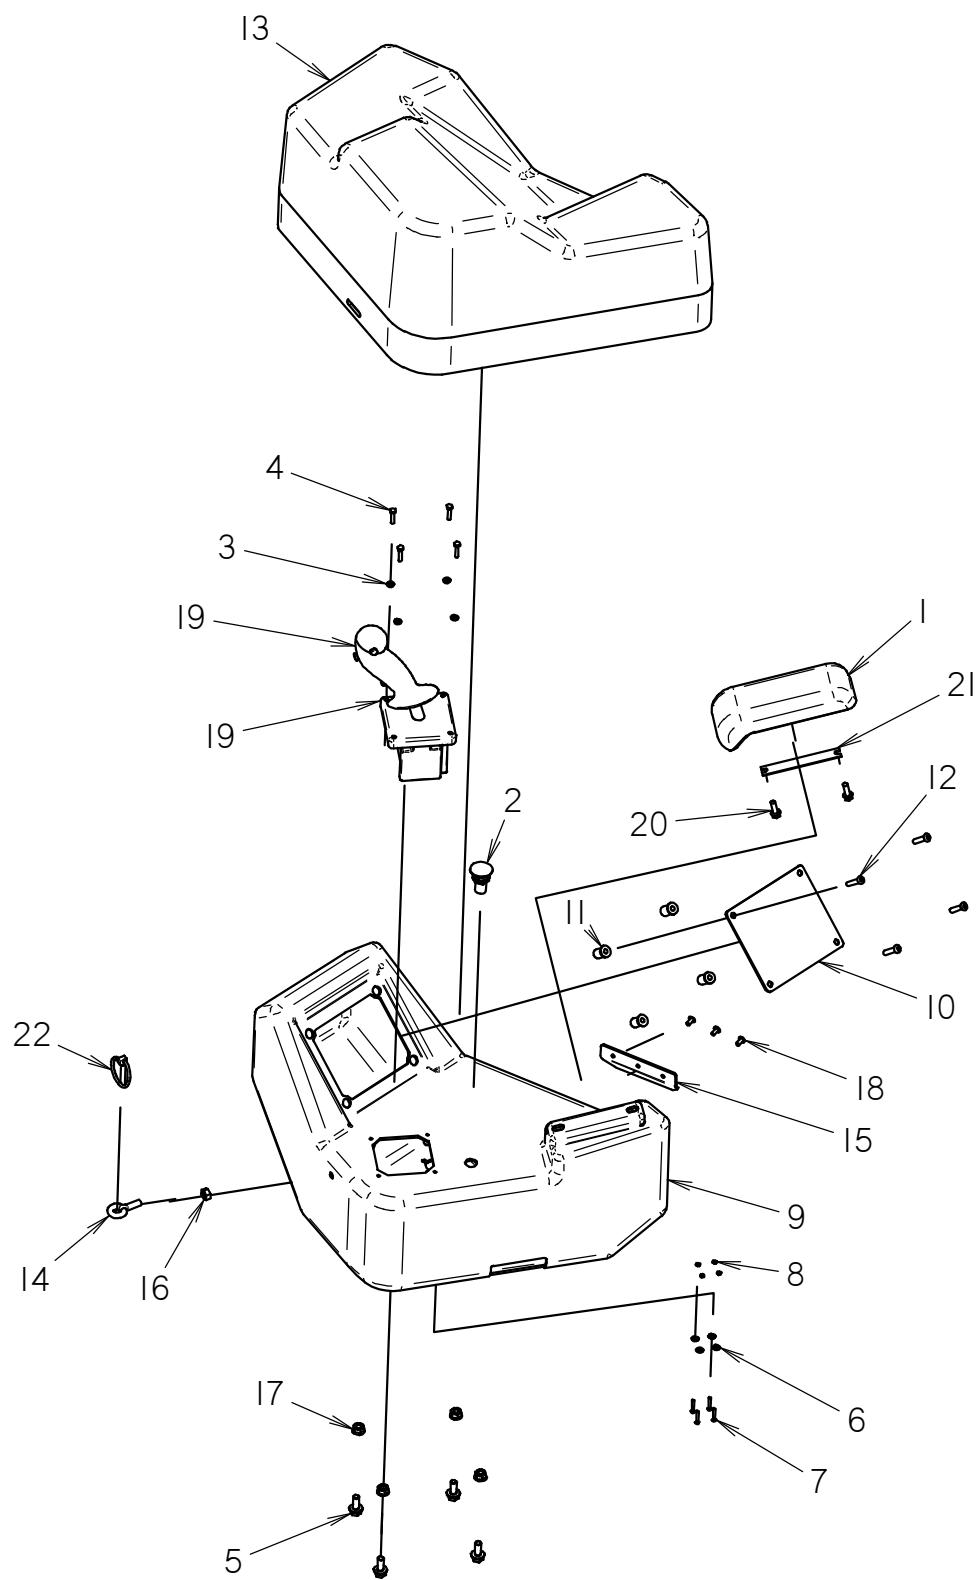

RIGHT CONSOLE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| 1 | I17-314 | 1 | ARM REST | |
| 2 | 217-206 | 1 | BUTTON SWITCH (SPST) | |
| 3 | I06-205 | 4 | WASHER (.191") | |
| 4 | I06-556 | 4 | SCREW (M4-0.70 X 20MM) | |
| 5 | I06-162 | 4 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 6 | I06-013 | 4 | WASHER (3/16") | |
| 7 | I07-269 | 4 | SCREW (#4-40 X 3/4", PAN) | |
| 8 | I05-662 | 4 | NUT (#4-40) | |
| 9 | 362-I331 | 1 | RIGHT CONSOLE | |
| 10 | 348-896 | 1 | COVER PLATE | |
| 11 | I07-871 | 4 | WELLNUT (M6-1.00 X 20.35MM LG) | |
| 12 | I08-184 | 4 | SCREW (M6-1.00 X 30MM, BUT SOC) | |
| 13 | 362-1336 | 1 | WEATHER COVER | |
| 14 | I07-570 | 1 | EYE BOLT (M8-1.25 X 20MM) | |
| 15 | 300-3589 | 1 | BRACKET | |
| 16 | I06-078 | 1 | NUT (M8-1.25) | |
| 17 | I06-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| 18 | I10-560 | 3 | POP RIVET (3/16" X 1/2", ALUM) | |
| 19 | 215-I224 | 1 | DUAL AXIS HALL EFFECT JOYSTICK | |
| 20 | I06-159 | 2 | FLG SCREW (1/4-NC X 3/4") | |
| 21 | 300-6573 | 1 | CLAMP PLATE | |
| 22 | I05-I428 | 1 | LYNCH PIN (1/4 X 1-9/16) | |


NOT SHOWN:

214-415 | 90D MODULE TO RIG CABLE

FOOTNOTES:

NOTE:

ELECTRICAL STRIKE SYSTEM

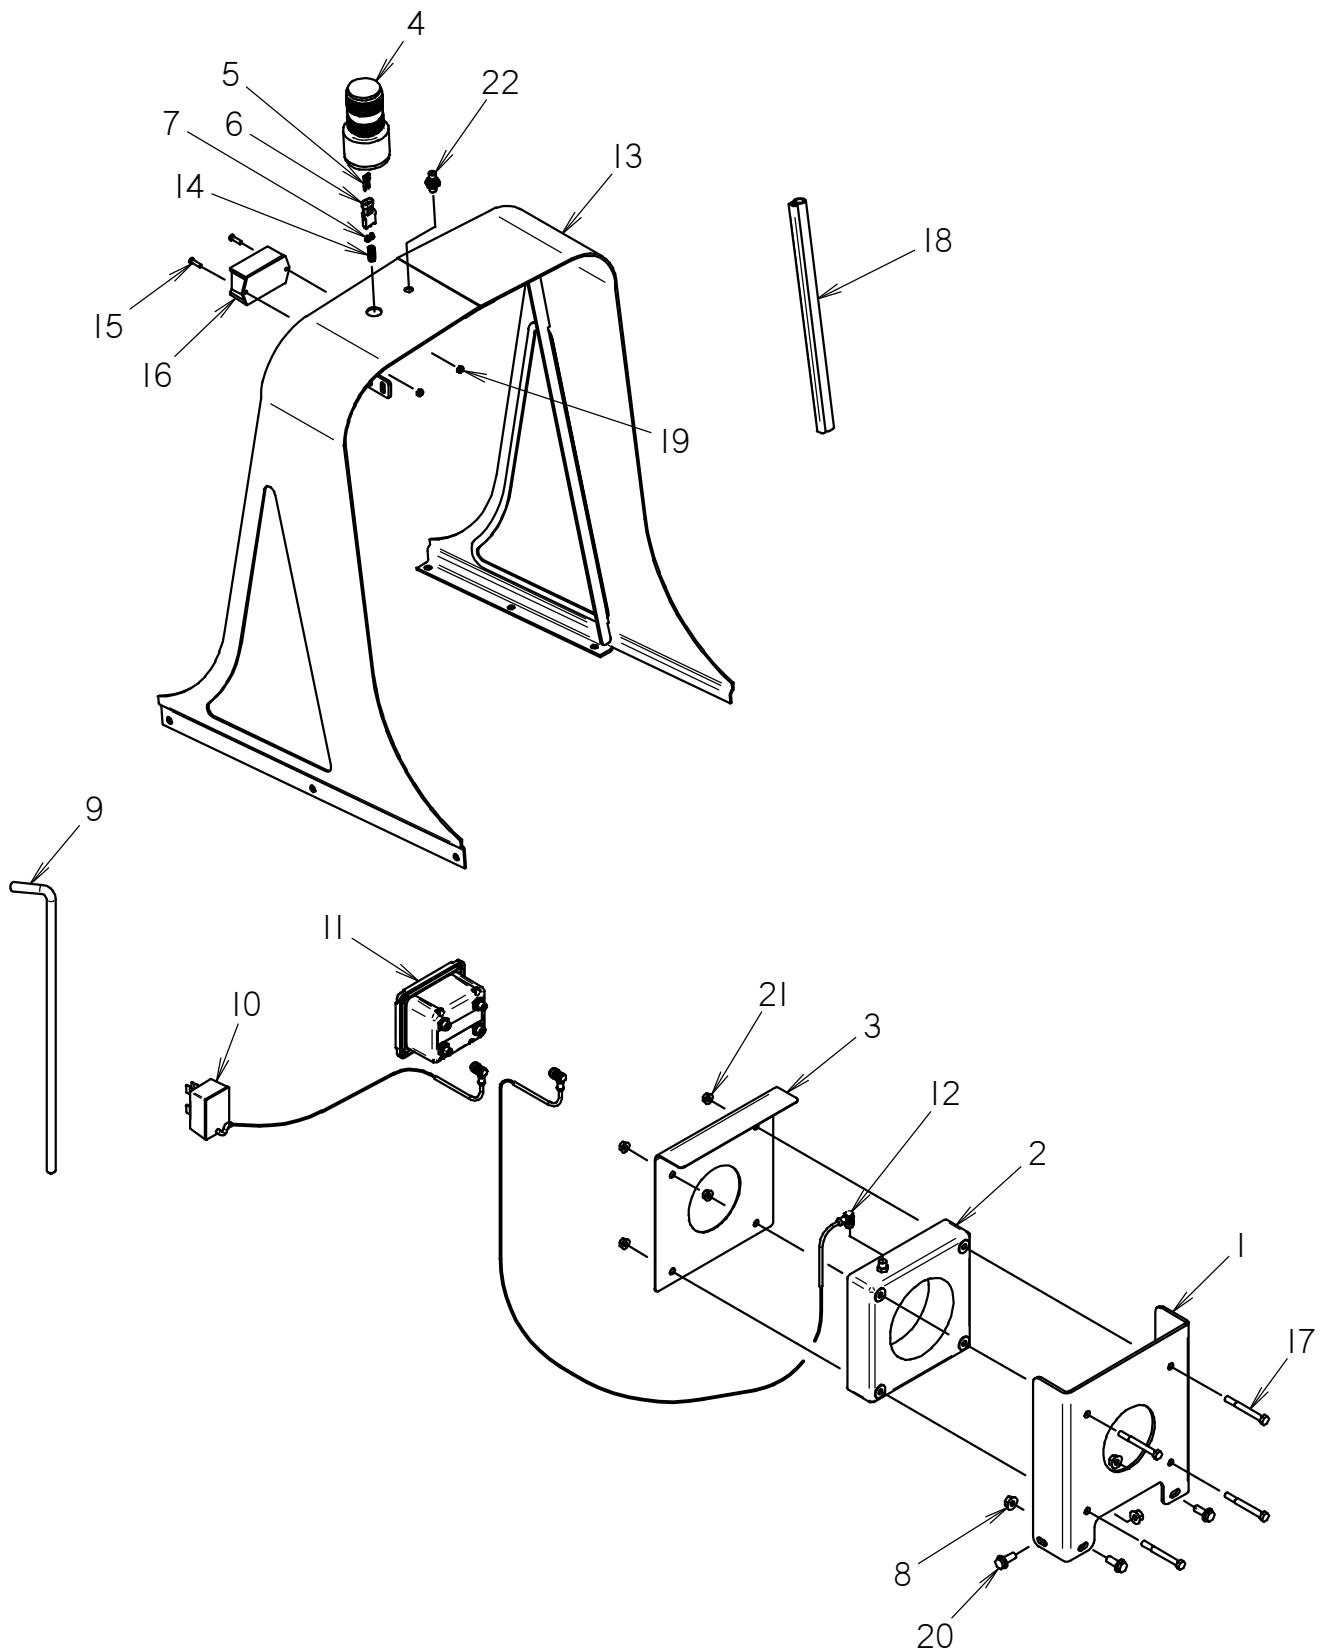

ELECTRICAL STRIKE SYSTEM

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---|
| 1 | 300-2131 | 1 | TRANSFORMER COVER | BEGINS WITH S/N: CMWJI220J60000130, & CMWJ2020E60000333 |
| 2 | 215-1081 | 1 | CURRENT TRANSFORMER | BEGINS WITH S/N: CMWJI220J60000130, & CMWJ2020E60000333 |
| 3 | 300-2168 | 1 | COVER | BEGINS WITH S/N: CMWJI220J60000130, & CMWJ2020E60000333 |
| 4 | 217-296 | 1 | STROBE LIGHT (AMBER) | INCLUDES REF NO'S 5, 6 & 7 |
| 5 | 214-104 | 2 | PACKARD MALE TERMINAL | |
| 6 | 214-103 | 1 | (2-WAY) MALE CONNECTOR | |
| 7 | I57-645 | 2 | WEATHER-PAC SEAL (2.80MM) | |
| 8 | I06-266 | 4 | FLG NUT (M10-1.50) | |
| 9 | 215-799 | 1 | VOLTAGE STAKE | |
| 10 | 211-042 | 1 | VOLTAGE LIMITER CABLE | |
| 11 | 220-1222 | 1 | ESID MODULE | |
| 12 | 214-554 | 1 | CURRENT COIL CABLE | |
| 13 | 300-4434 | 1 | CENTER MOUNT | |
| 14 | 216-026 | 1 | FLEX-GUARD (25") | USE 1 @ 13" |
| 15 | I06-049 | 2 | BOLT (#10-24 X 3/4", PLPS) | |
| 16 | 220-1120 | 1 | ENGINE SENSOR AMPLIFIER MODULE | |
| 17 | I06-602 | 4 | SCREW (M8-1.25 X 80MM) | |
| 18 | I16-489 | 1 | BULK EDGE (1/8", SOLD PER FT) | USE 1 @ 22" |
| 19 | I06-048 | 2 | LOCKNUT (#10-24) | |
| 20 | I06-724 | 4 | FLG SCREW (M10-1.50 X 25MM) | |
| 21 | I06-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| 22 | 211-055 | 1 | ANTENNA BULKHEAD CONNECTOR | |

NOT SHOWN:


318-993 1 TRANSFORMER COVER
 211-083 1 CURRENT TRANSFORMER
 309-758 1 COVER

ENDS WITH S/N: CMWJI220V60000129, & CMWJ2020L60000331
 ENDS WITH S/N: CMWJI220V60000129, & CMWJ2020L60000331
 ENDS WITH S/N: CMWJI220V60000129, & CMWJ2020L60000331


FOOTNOTES:

NOTE:

GROUND DRIVE CONTROL

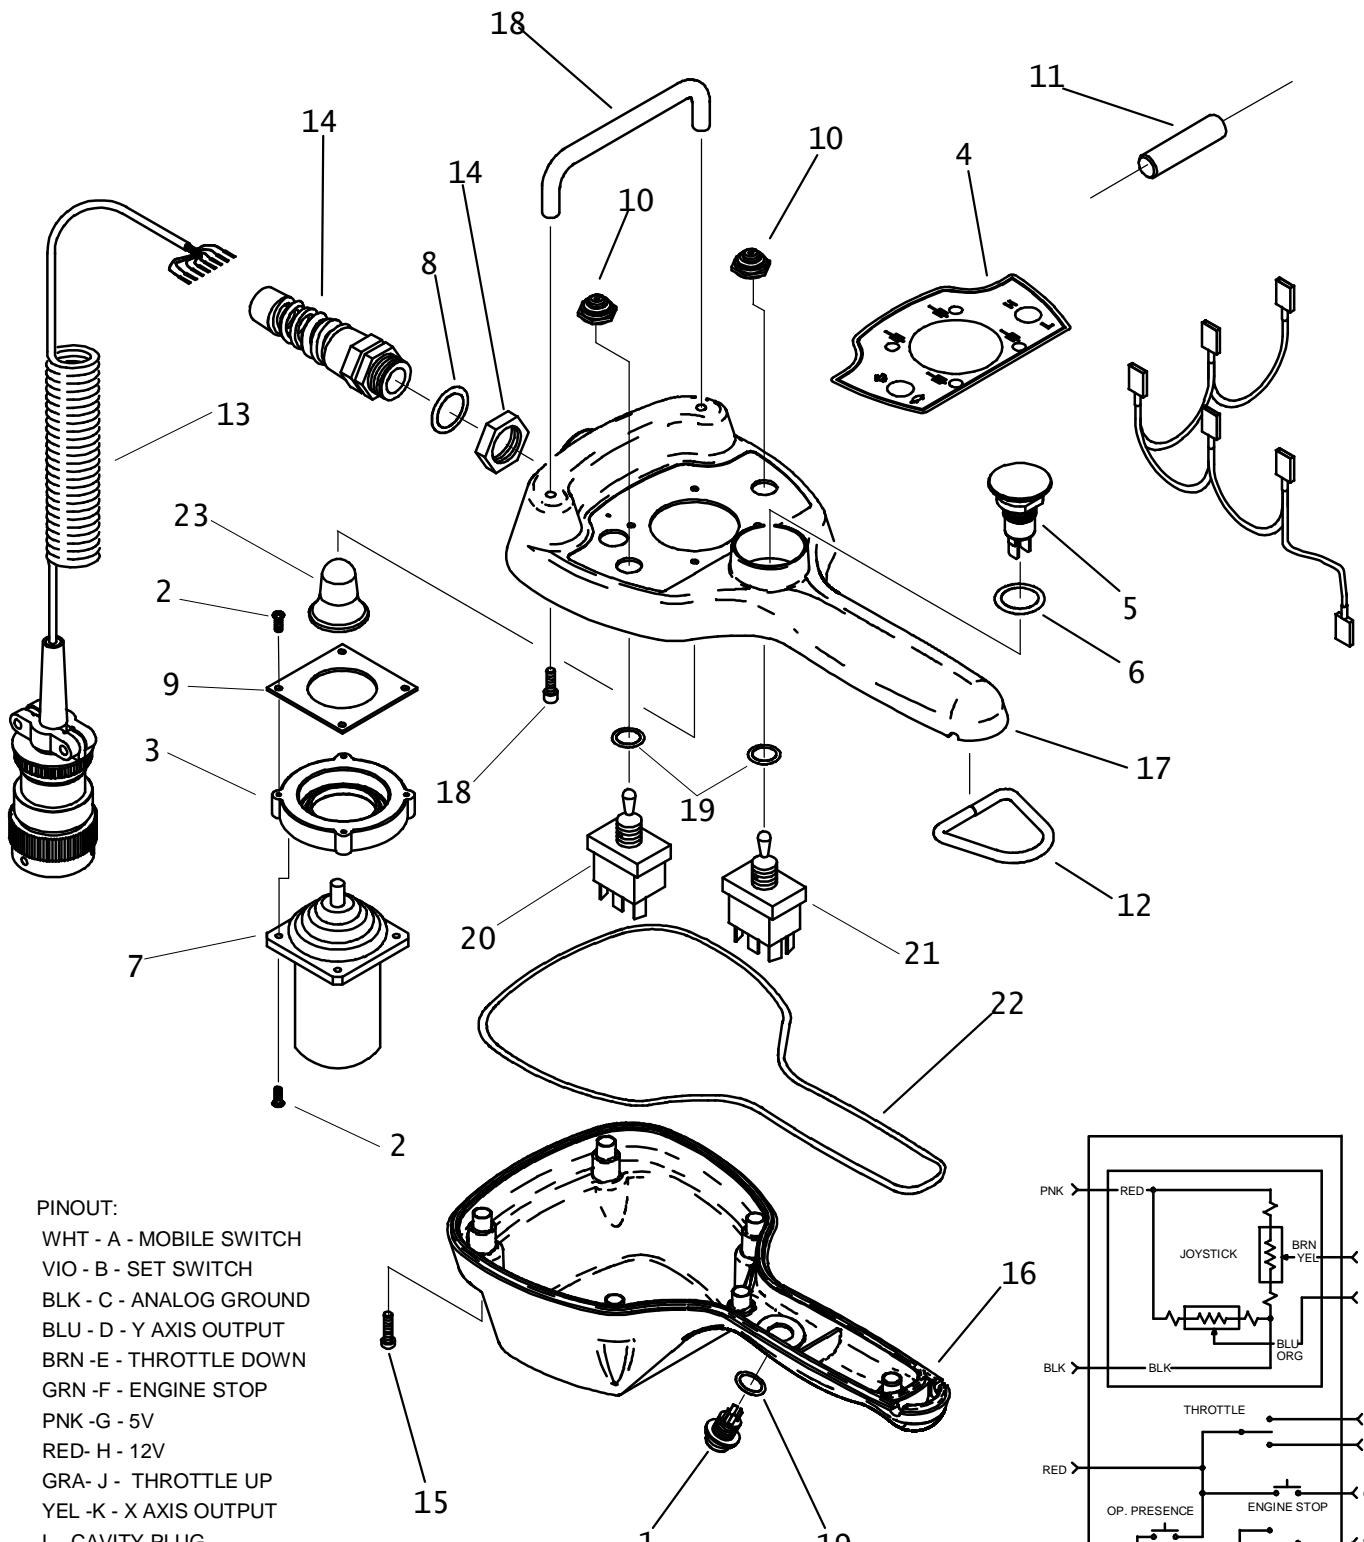
PINOUT:

WHT - A - MOBILE SWITCH
 VIO - B - SET SWITCH
 BLK - C - ANALOG GROUND
 BLU - D - Y AXIS OUTPUT
 BRN - E - THROTTLE DOWN
 GRN - F - ENGINE STOP
 PNK - G - 5V
 RED - H - 12V
 GRA - J - THROTTLE UP
 YEL - K - X AXIS OUTPUT
 L - CAVITY PLUG
 M - CAVITY PLUG
 N - CAVITY PLUG
 P - CAVITY PLUG

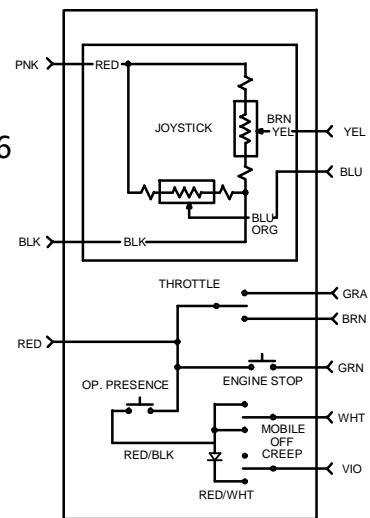

GROUND DRIVE CONTROL

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|----------------------------------|----------------|
| | 214-589 | | GROUND DRIVE CONTROL | |
| I. | 214-614 | 1 | PUSH BUTTON SWITCH (SPST) OFF-ON | |
| 2. | 106-820 | 8 | SCREW, SELF TAPPING (3.0 X 12MM) | |
| 3. | 305-664 | 1 | JOY STICK ADAPTER | |
| 4. | 274-998 | 1 | DECAL | |
| 5. | 214-615 | 1 | KILL SWITCH | |
| 6. | 157-040 | 1 | O-RING (016 D90) | |
| 7. | 214-613 | 1 | JOYSTICK ASSEMBLY | SEE FOOTNOTE 1 |
| | 215-1394 | 1 | JOYSTICK ASSEMBLY | SEE FOOTNOTE 1 |
| 8. | 157-017 | 1 | O-RING (018 D90) | |
| 9. | 149-558 | 1 | JOYSTICK GASKET | |
| 10. | 214-728 | 2 | TOGGLE SWITCH HALF BOOT (SEAL) | |
| 11. | 215-1720 | 1 | DIODE IN5402 | |
| 12. | 105-775 | 1 | D-RING | |
| 13. | 211-020 | 1 | COILED CORD-MALE | |
| 14. | 211-021 | 1 | STRAIN RELIEF | |
| 15. | 106-876 | 6 | SCREW | |
| 16. | 214-497 | 1 | LOWER HOUSING | |
| 17. | 214-498 | 1 | UPPER HOUSING | |
| 18. | 116-933 | 1 | HANDLE | |
| | 106-894 | 2 | SCREW (#8-32 X 1" PLPS SS) | SEE FOOTNOTE 2 |
| 19. | 157-039 | 2 | O-RING (014 D90) | |
| 20. | 217-896 | 1 | TOGGLE SWITCH | |
| 21. | 214-570 | 1 | TOGGLE SWITCH (DPDT) ON-OFF-ON | |
| 22. | 116-549 | AR | ROPE GASKET (USE 27") | |
| 23. | 116-932 | 1 | JOYSTICK KNOB | |

NOT SHOWN:

FOOTNOTES:

- I. JOYSTICK SHOULD BE ORIENTED WITH LABLE POINTING TOWARDS CABLE END. (REV G)
I. JOYSTICK SHOULD BE ORIENTED WITH X+ ON LABLE POINTING TOWARDS CABLE END. (REV H)
Y-AXIS OUTPUT: 3.75V FORWARD 1.25V BACK
X-AXIS OUTPUT: 3.75V LEFT 1.25V RIGHT
- 2. APPLY THREAD LOCKING COMPOUND TO BOTH HANDLE SCREWS.


NOTE:

NOTES:

HYDRAULICS

ID0135071

PUMP STACK MOUNTING

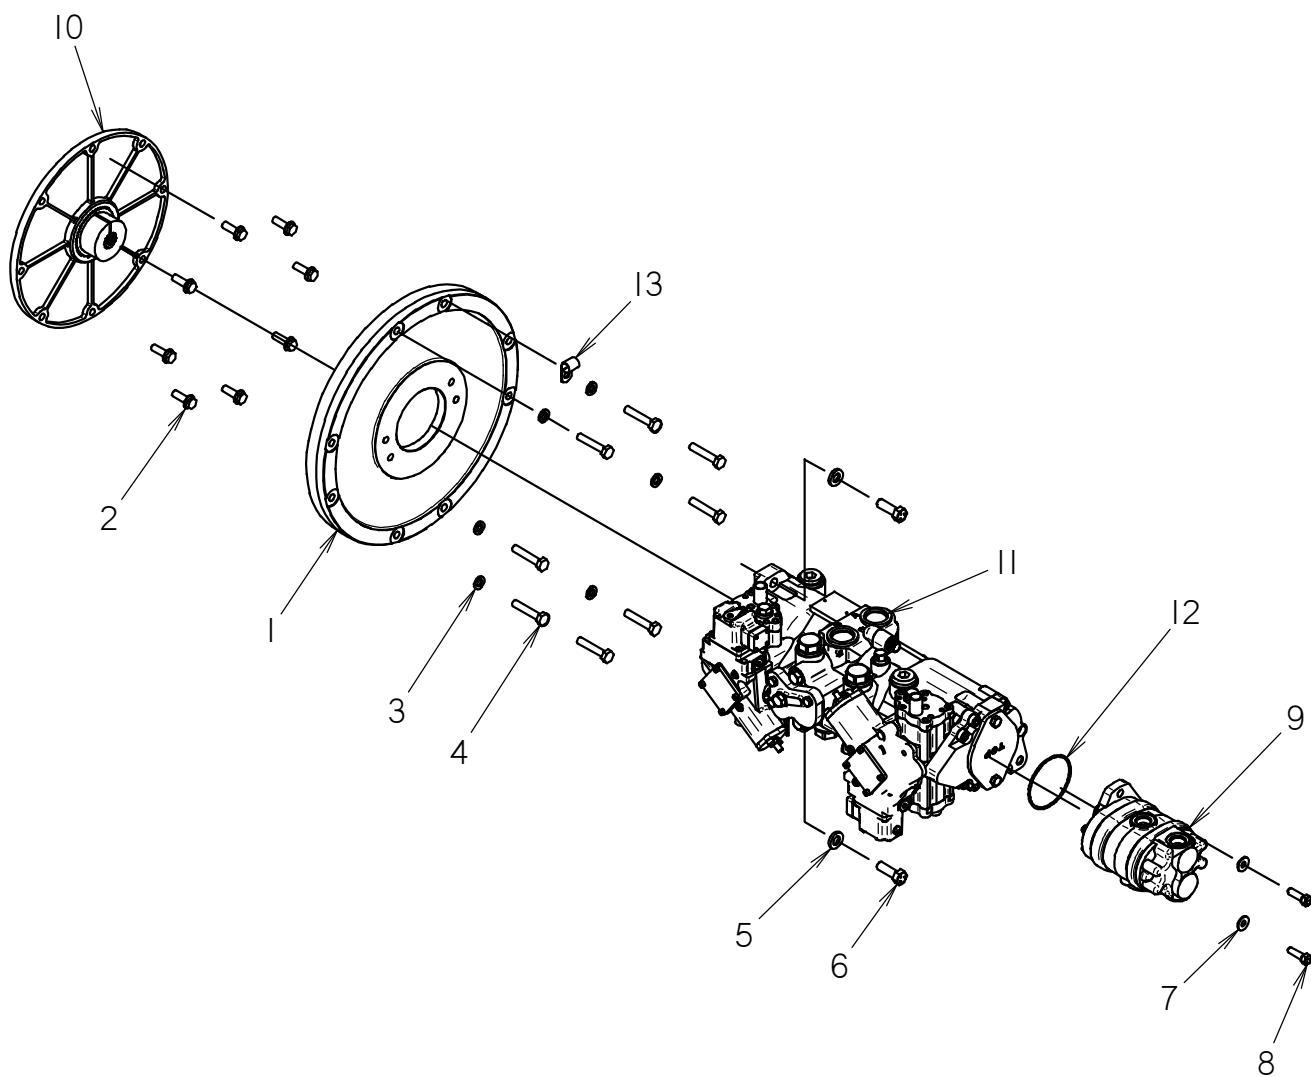

PUMP STACK MOUNTING


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|--|
| 1 | I94-763 | 1 | MOUNT PLATE | |
| 2 | I06-383 | 8 | FLG LK SCREW (M10-1.50 X 30MM) | USE LOCTITE 271 OR EQUIVALENT, TORQUE TO 33 FT-LBS |
| 3 | I05-073 | 8 | LOCK WASHER (7/16") | |
| 4 | I05-839 | 8 | SCREW (M10-1.50 X 55MM) | TORQUE TO 30 FT-LBS |
| 5 | I06-397 | 2 | WASHER (M12, HARDENED) | |
| 6 | I05-062 | 2 | BOLT (1/2-NC X 1-1/2", FER) | USE LOCTITE 242 OR EQUIVALENT |
| 7 | I05-I17 | 2 | WASHER (5/16") | |
| 8 | I05-052 | 2 | BOLT (3/8-NC X 1-1/4") | USE LOCTITE 242 OR EQUIVALENT |
| 9 | I57-860 | 1 | DOUBLE GEAR PUMP | |
| I0 | I94-704 | 1 | FLYWHEEL COUPLING | TORQUE TO 50 FT-LBS |
| II | I57-239 | 1 | DUAL HYDROSTAT | |
| I2 | I57-041 | 1 | O-RING (I152 D70) | |
| I3 | I10-259 | 1 | BOLT-ON CLAMP (.625") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PUMP STACK SUPPLY & RETURN

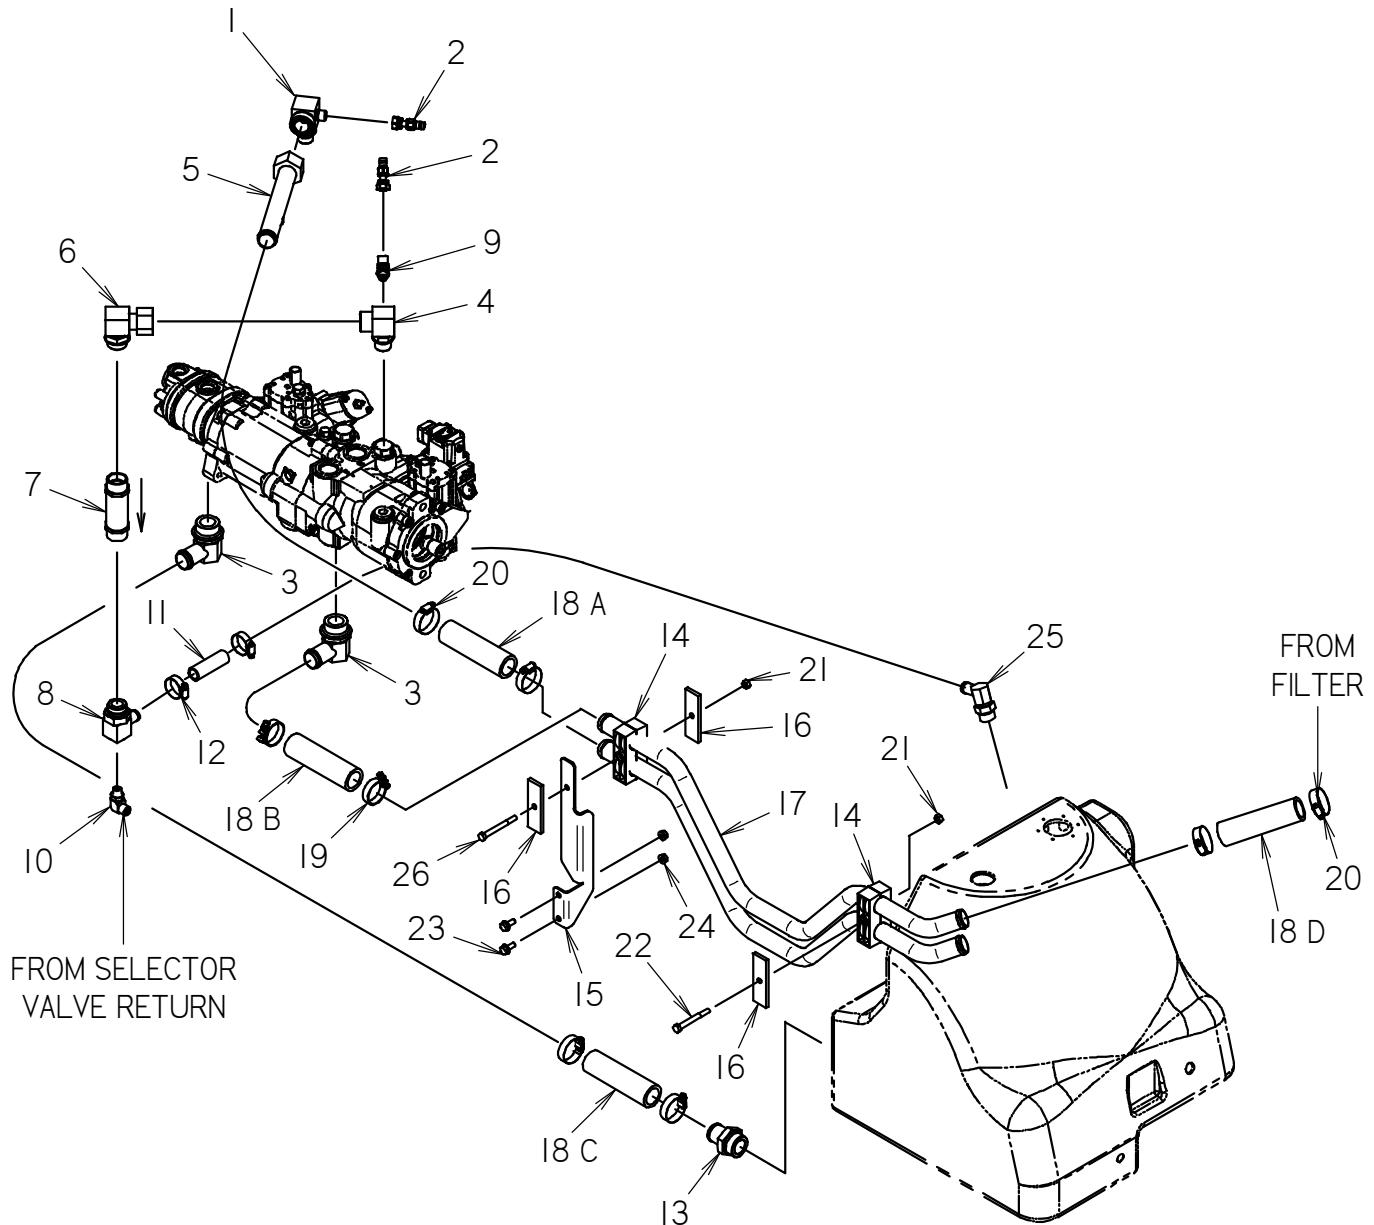

PUMP STACK SUPPLY & RETURN

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------------|----------------|
| 1 | I57-768 | 1 | CONNECTOR (I2S-200-060) | |
| 2 | I59-157 | 2 | QDC ADAPTER (02-060F) | |
| 3 | I55-168 | 2 | S/O COUPLER (20S-20H90) | |
| 4 | 514-425 | 1 | CONNECTOR (I2S-16090, 06SF) | |
| 5 | I50-2205 | 1 | HYD LINE | |
| 6 | I53-908 | 1 | UNION (I6S-160FX90) | |
| 7 | I58-248 | 1 | CHECK VALVE (I6SF-I6SF, 20 PSI) | |
| 8 | I50-2700 | 1 | CONNECTOR (I6S-I2H90-06SF) | |
| 9 | I54-224 | 1 | CONNECTOR (06S-06045) | |
| 10 | I54-342 | 1 | CONNECTOR (06S-06090) | |
| 11 | I16-636 | 40 | BULK HOSE (3/4", SOLD PER FT) | |
| 12 | I10-353 | 2 | WORM CLAMP (3/4" TO 1-1/2") | |
| 13 | I55-004 | 1 | S/O COUPLER (20S-20H) | |
| 14 | I10-274 | 2 | BOLT-ON CLAMP (1-1/4", PER SET) | |
| 15 | 300-5558 | 1 | BRACKET | |
| 16 | 300-5791 | 3 | BACKUP PLATE | |
| 17 | I50-2204 | 2 | HYD LINE | |
| 18 | I16-587 | 107 | BULK HOSE (1-1/4", SOLD PER FT) | SEE FOOTNOTE I |
| 19 | I49-342 | 2 | T-BOLT CLAMP (I.687") | |
| 20 | I10-133 | 6 | WORM CLAMP (1-1/16" TO 1-15/16") | |
| 21 | I06-561 | 2 | LOCKNUT (M8-I.25, PRV TRQ, I0.9) | |
| 22 | I05-292 | 1 | SCREW (M8-I.25 X 75MM) | |
| 23 | I06-162 | 2 | FLG SCREW (M8-I.25 X 20MM, GD8) | |
| 24 | I06-386 | 2 | FLG LOCKNUT (M8-I.25) | |
| 25 | I55-174 | 1 | S/O COUPLER (I2S-I2H90) | |
| 26 | I06-602 | 1 | SCREW (M8-I.25 X 80MM) | |


NOT SHOWN:

FOOTNOTES:

HOSE: A - I @ 28; B - I @ I2"; C - I @ 50; D - I @ I7"

NOTE:

FILTER AND RESERVOIR HYDRAULICS

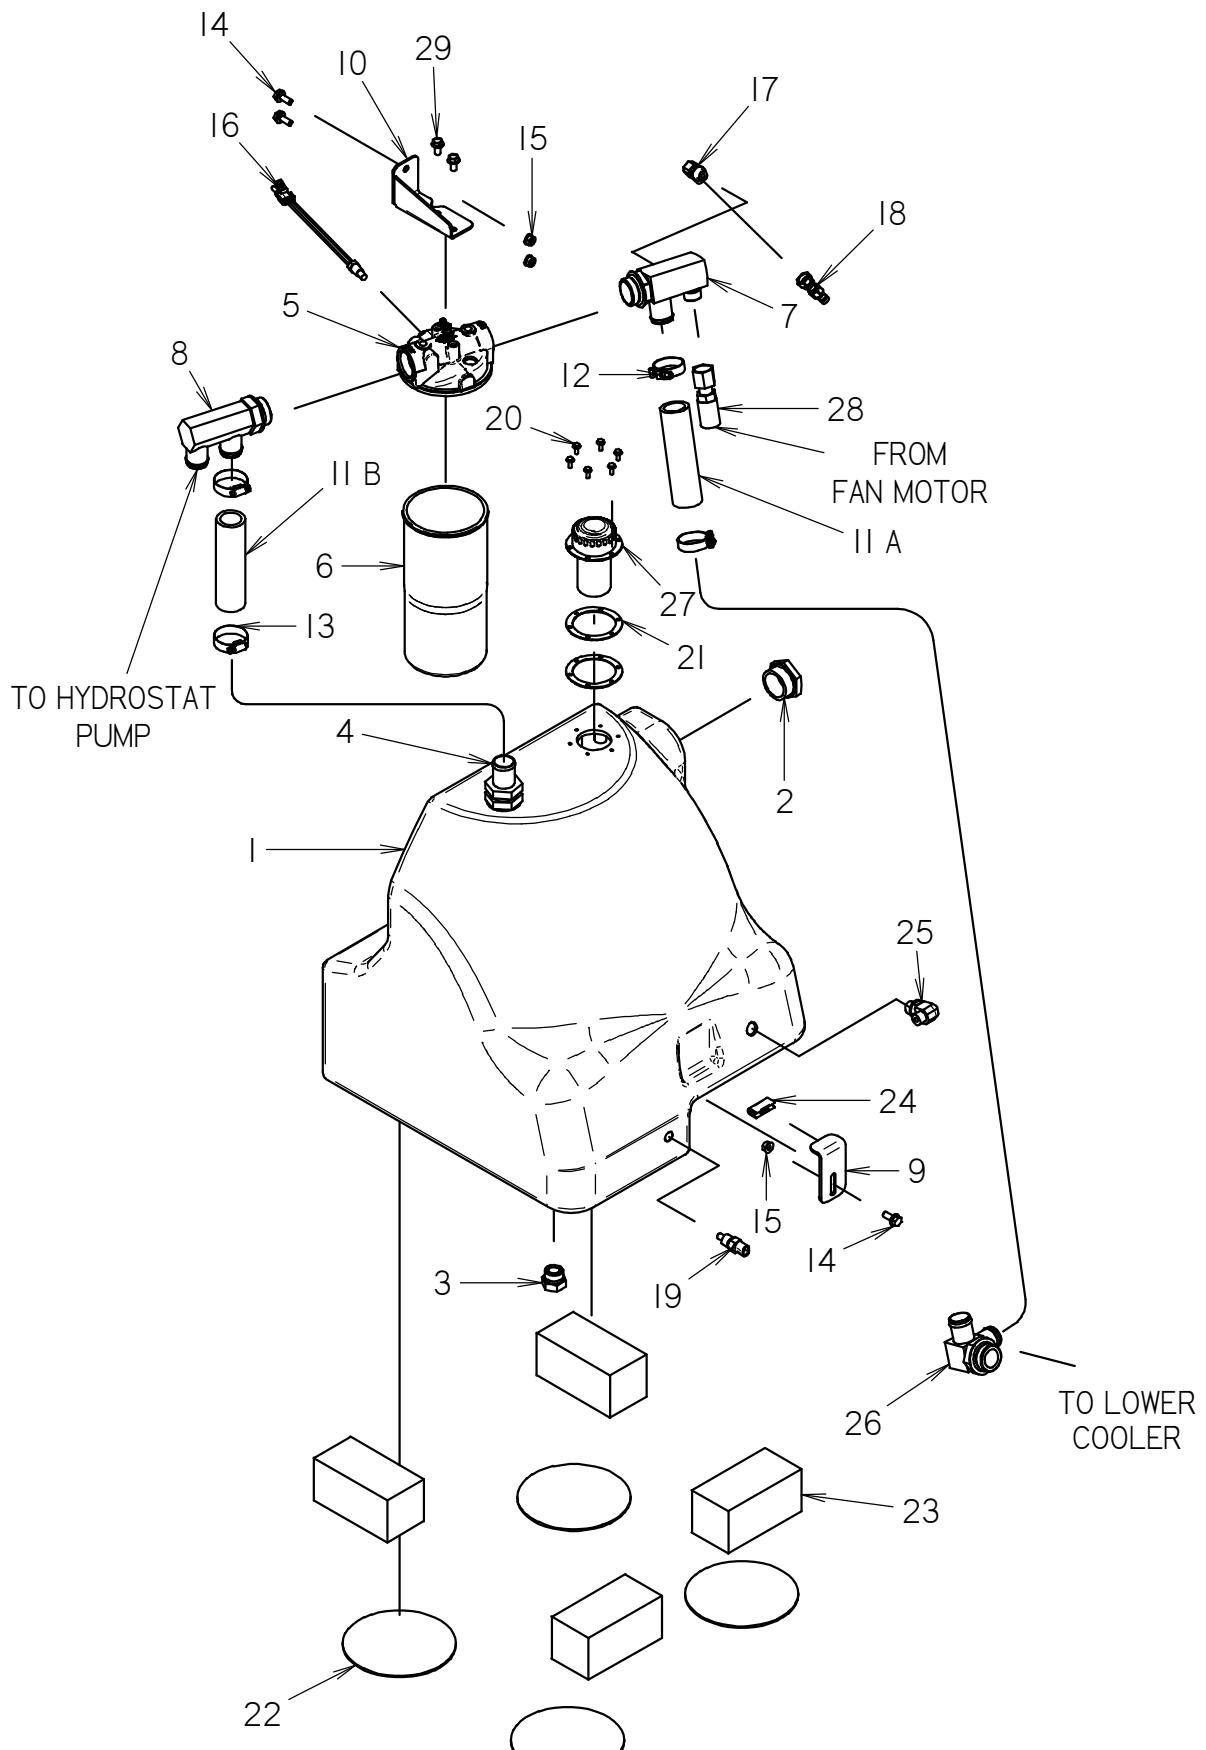

FILTER AND RESERVOIR HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------------|----------------|
| 1 | 150-2088 | 1 | HYDRAULIC TANK | |
| 2 | 121-059 | 1 | SIGHT GLASS (I-24) | |
| 3 | 500-302 | 1 | PLUG (I-2 S) | |
| 4 | 150-2079 | 1 | INLET FITTING (20S-20H) | |
| 5 | 157-458 | 1 | FILTER HEAD | |
| 6 | 153-792 | 1 | FILTER ELEMENT (10 MICRON) | |
| 7 | 150-2728 | 1 | CONNECTOR (20S-20H-100-06SF) | |
| 8 | 150-2239 | 1 | SPECIAL 90(20S-20H-20H) | |
| 9 | 300-5375 | 1 | BRACKET | |
| 10 | 300-5377 | 1 | MOUNT | |
| 11 | I16-587 | 46 | BULK HOSE (I-I/4", SOLD PER FT) | SEE FOOTNOTE I |
| 12 | I49-342 | 2 | T-BOLT CLAMP (I.687") | |
| 13 | I10-133 | 2 | WORM CLAMP(I-I/16" TO I-15/I/16") | |
| 14 | I06-162 | 3 | FLG SCREW (M8-1.25 X 20MM, GD8) | |
| 15 | I06-386 | 3 | FLG LOCKNUT (M8-1.25) | |
| 16 | 214-854 | 1 | TEMPERATURE SWITCH(I/4NPT,MALE) | |
| 17 | I54-342 | 1 | CONNECTOR (06S-06090) | |
| 18 | I59-157 | 1 | QDC ADAPTER (02-060F) | |
| 19 | 215-1434 | 1 | COOLANT TEMP SENSOR | |
| 20 | I05-214 | 6 | FLG SCREW (#10-24 X .5") | |
| 21 | I65-626 | 2 | FILLER NECK GASKET | |
| 22 | I17-425 | AR | LINER PAD (I2" THK) | |
| 23 | 362-I084 | 4 | AIR BARRIER | |
| 24 | I15-704 | 2 | BULK EDGE (I/4", SOLD PER I") | I @ 2" |
| 25 | I54-227 | 1 | CONNECTOR (060-08S90) | |
| 26 | 514-164 | 1 | S/O BR TEE (20S-20H-20H) | |
| 27 | I10-008 | 1 | FILLER BREATHER ASSY. | |
| 28 | I16-812 | 1 | HOSE (I00FX90S-71"-3000) | |
| 29 | 501-325 | 2 | FLG LK BOLT (5/16-NC X 5/8") | |


NOT SHOWN:

FOOTNOTES:

HOSE A: I @ 34", HOSE B: I @ 12"

NOTE:

HYDRAULIC OIL COOLER PLUMBING

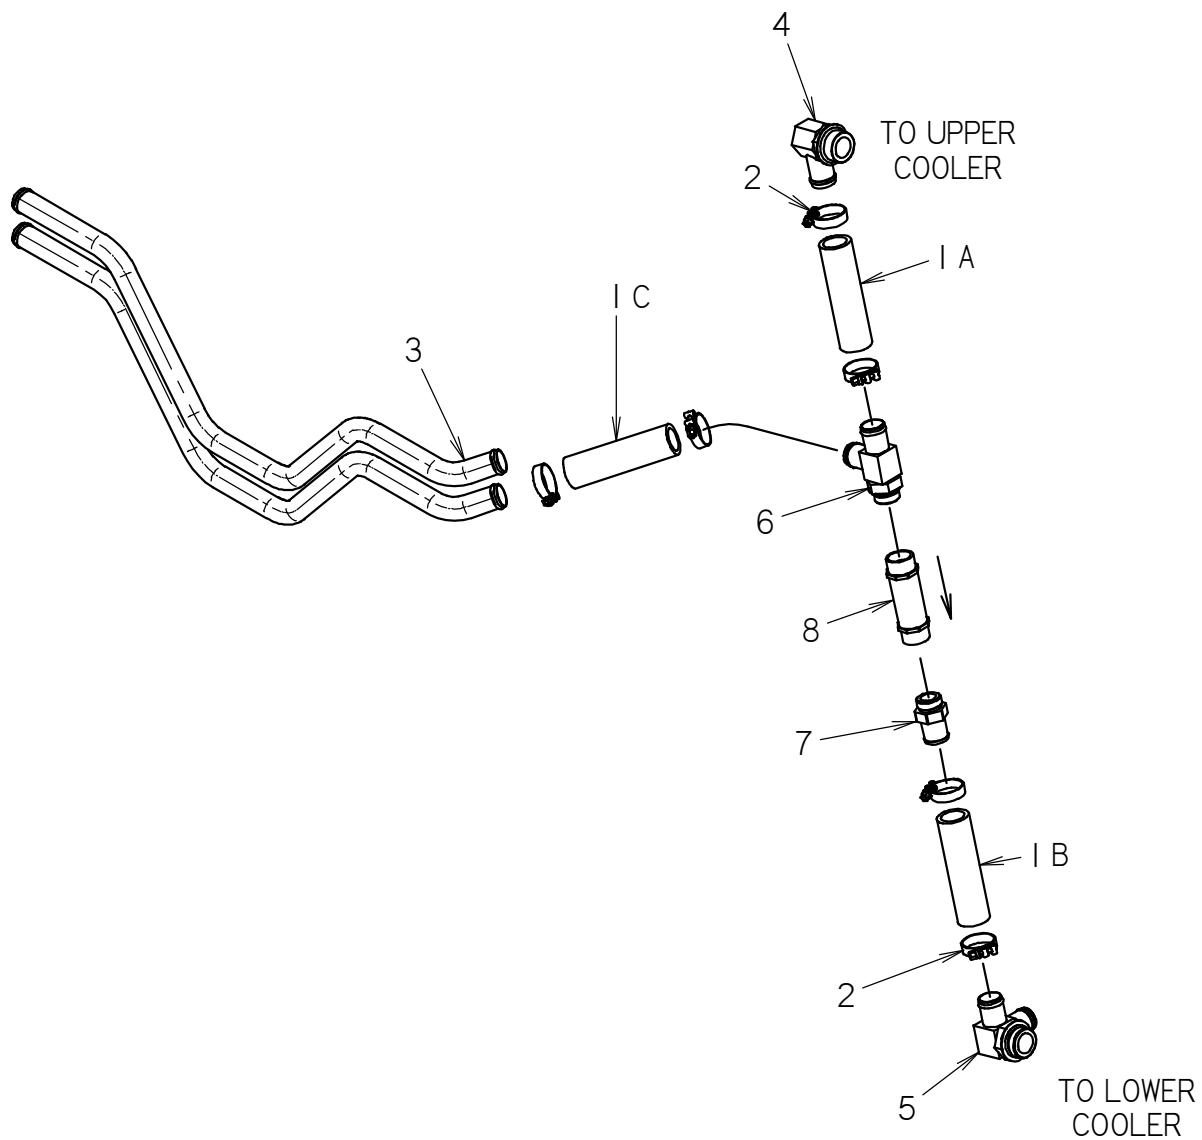

HYDRAULIC OIL COOLER PLUMBING

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|----------------|
| 1 | I16-587 | 32 | BULK HOSE (I-I/4", SOLD PER FT) | SEE FOOTNOTE 1 |
| 2 | I49-342 | 6 | T-BOLT CLAMP (I.687") | |
| 3 | I50-2204 | 2 | HYD LINE | |
| 4 | I55-168 | 1 | S/O COUPLER (20S-20H90) | |
| 5 | I54-164 | 1 | S/O BR TEE (20S-20H-20H) | |
| 6 | I50-2210 | 1 | S/O RUN TEE (I6S-20H-20H) | |
| 7 | I55-047 | 1 | S/O COUPLER (I6S-20H) | |
| 8 | I58-248 | 1 | CHECK VALVE (I6SF-I6SF,20 PSI) | |


NOT SHOWN:

FOOTNOTES:

- I. HOSE A: I @ 17"; HOSE B: I @ 6", HOSE C: I @ 9"

NOTE:

ROTATION HYDRAULICS

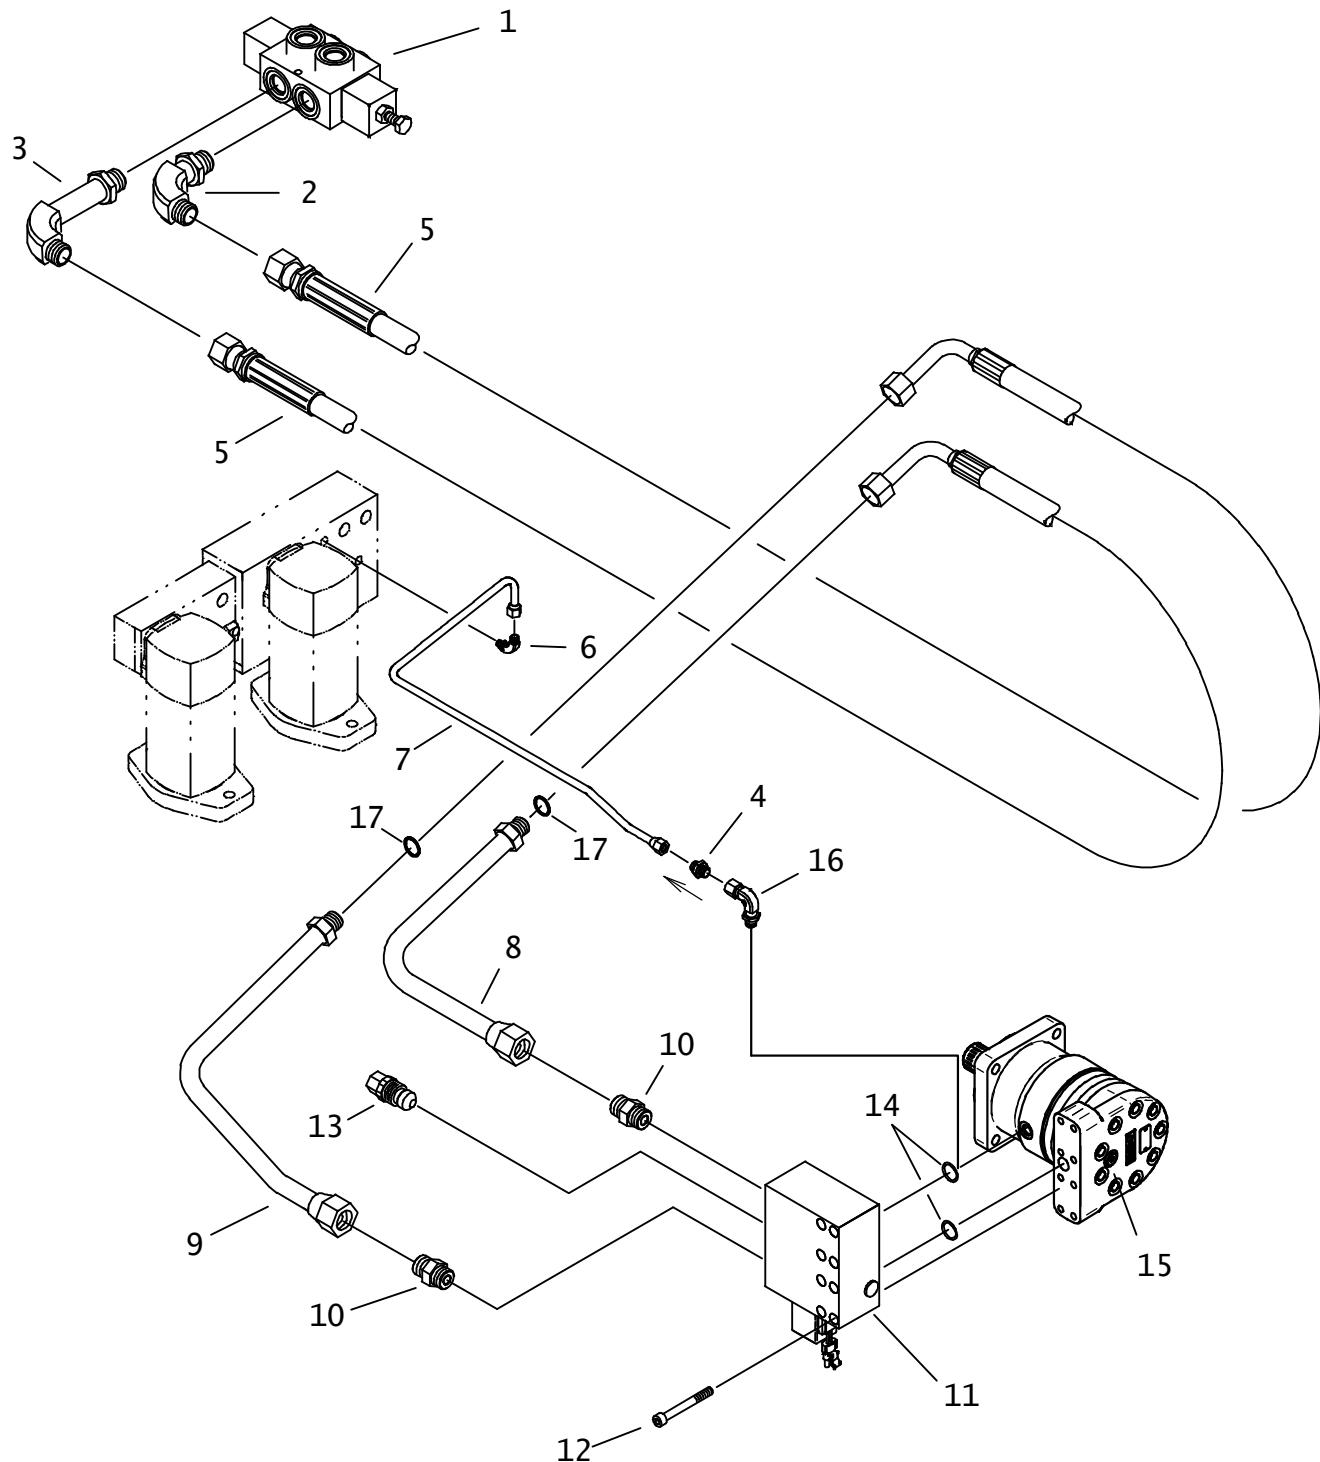

ROTATION HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------|---------|
| 1. | 159-912 | 1 | HYD CONTROL VALVE | |
| | 191-396 | 1 | SEAL KIT | |
| | 500-1942 | 1 | SEAL WASHER | |
| 2. | 154-270 | 1 | CONNECTOR (12S-12090) | |
| 3. | 154-338 | 1 | CONNECTOR (12S-12090, XL) | |
| 4. | 159-750 | 1 | FLOW CHECK VALVE(060-060) | |
| 5. | 157-368 | 2 | HOSE (120FX90L-149"-5000) | |
| 6. | 514-049 | 1 | CONNECTOR (04S-06090) | |
| 7. | 157-378 | 1 | HYD LINE (-06) | |
| 8. | 157-887 | 1 | HYD LINE (-16) | |
| 9. | 157-886 | 1 | HYD LINE (-16) | |
| 10. | 154-281 | 2 | CONNECTOR (16S-160) | |
| 11. | 159-577 | 1 | RELIEF MANIFOLD | |
| | 150-1326 | 1 | HYDRAULIC VALVE | |
| 12. | 105-857 | 8 | BOLT (3/8-NC X 3", SOC, GD8) | |
| 13. | 159-686 | 1 | HYD RELIEF VALVE, ADJ | |
| | 191-426 | 1 | SEAL REPAIR KIT | |
| 14. | 155-737 | 1 | O-RING (214 D70) | |
| 15. | 150-1026 | 1 | ROTATION MOTOR | |
| | 150-1041 | 1 | SEAL KIT | |
| 16. | 154-343 | 1 | UNION (06S-060FX90) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PUMP/ SELECTOR HYDRAULICS

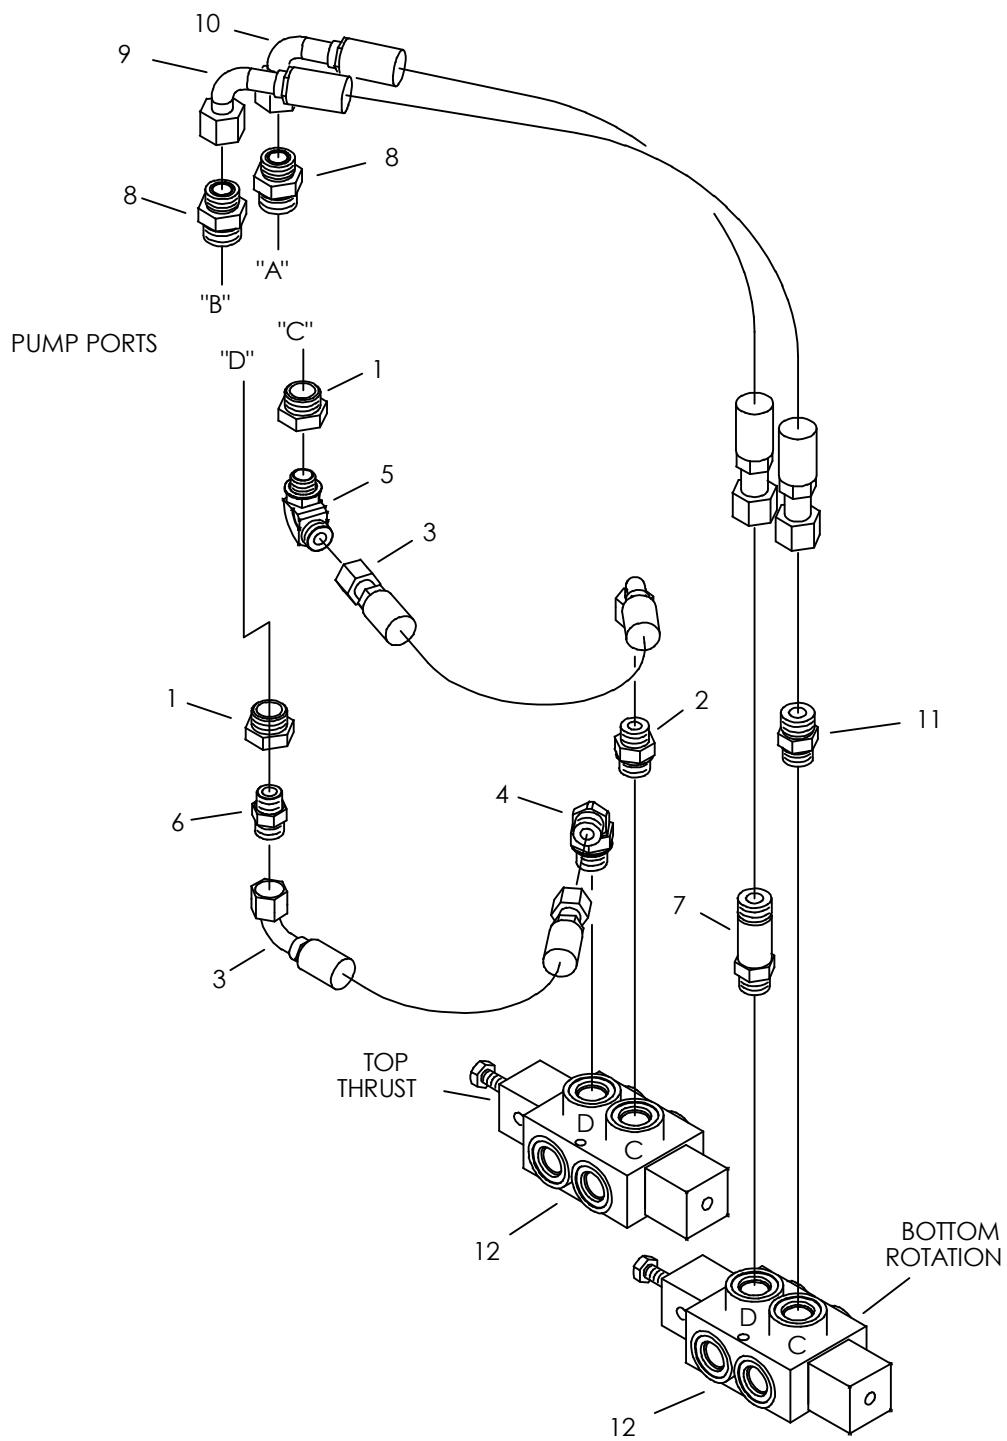

PUMP/ SELECTOR HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------|---------|
| 1. | 155-199 | 2 | REDUCER (16S-10SF) | |
| 2. | 154-308 | 1 | CONNECTOR (100-12S) | |
| 3. | 153-295 | 2 | HOSE (100FX90S-18"-3000) | |
| 4. | 154-300 | 1 | CONNECTOR (100-12S90) | |
| 5. | 154-298 | 1 | CONNECTOR (10S-10090) | |
| 6. | 154-301 | 1 | CONNECTOR (10S-100) | |
| 7. | 514-048 | 1 | CONNECTOR (12S-120, LG) | |
| 8. | 154-367 | 2 | CONNECTOR (120-16S) | |
| 9. | 153-077 | 1 | HOSE (120FX90S-32"-5000) | |
| 10. | 153-076 | 1 | HOSE (120FX90S-28"-5000) | |
| 11. | 154-269 | 1 | CONNECTOR (12S-120) | |
| 12. | 159-912 | - | HYD CONTROL VALVE | |
| | 191-396 | - | SEAL KIT | |
| | 500-1942 | - | SEAL WASHER | |

NOT SHOWN:

FOOTNOTES:

NOTE:

SELECTOR HYDRAULICS

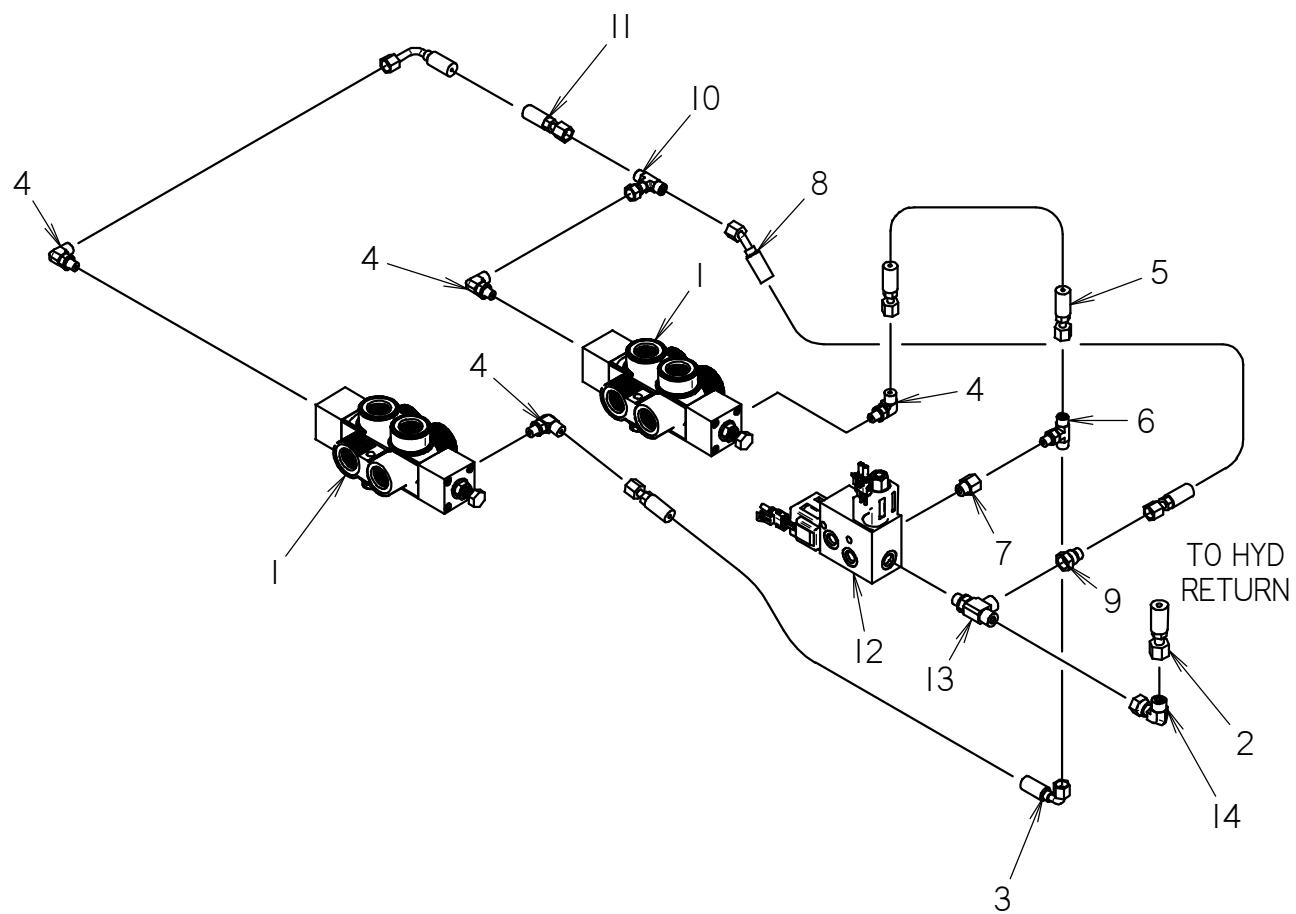

SELECTOR HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------|----------------------------------|
| I | 159-912 | 2 | HYD CONTROL VALVE | 500-I942 SEAL WASHER |
| 2 | 154-737 | 1 | HOSE I060FX90-17"-3000) | |
| 3 | 515-175 | 1 | HOSE I040FX90-16-3000) | |
| 4 | 154-252 | 4 | CONNECTOR I04S-04090) | |
| 5 | 154-825 | 1 | HOSE I040FX-12"-3000) | |
| 6 | 154-293 | 1 | BRANCH TEE I04S-040-040) | |
| 7 | 155-254 | 1 | REDUCER I06S-04SF) | |
| 8 | 515-331 | 1 | HOSE I040FX45-22"-3000-AR) | |
| 9 | 154-373 | 1 | REDUCER I040-060F) | |
| I0 | 154-379 | 1 | UN BR TEE I040FX-040-040) | |
| II | 159-889 | 1 | HOSE I040FX90L8"-3000) | |
| I2 | 157-776 | 1 | MANIFOLD | SEE NOT SHOWN FOR SERVICE PARTS. |
| I3 | 154-345 | 1 | RUN TEE I06S-060-060) | |
| I4 | 154-228 | 1 | UNION I060-060FX90) | |

NOT SHOWN:


| | | |
|----------|--------------------------|---------------------|
| 516-089 | SOLENOID VALVE WITH NUT | USED ON 4 WAY VALVE |
| 500-I541 | SOLENOID VALVE WITH NUT | USED ON 3 WAY VALVE |
| 213-216 | SOLENOID COIL WITH DIODE | USED ON 4 WAY VALVE |
| 213-I96 | SOLENOID COIL WITH DIODE | USED ON 3 WAY VALVE |

FOOTNOTES:

NOTE:

FRONT THRUST HYDRAULICS

JT1220

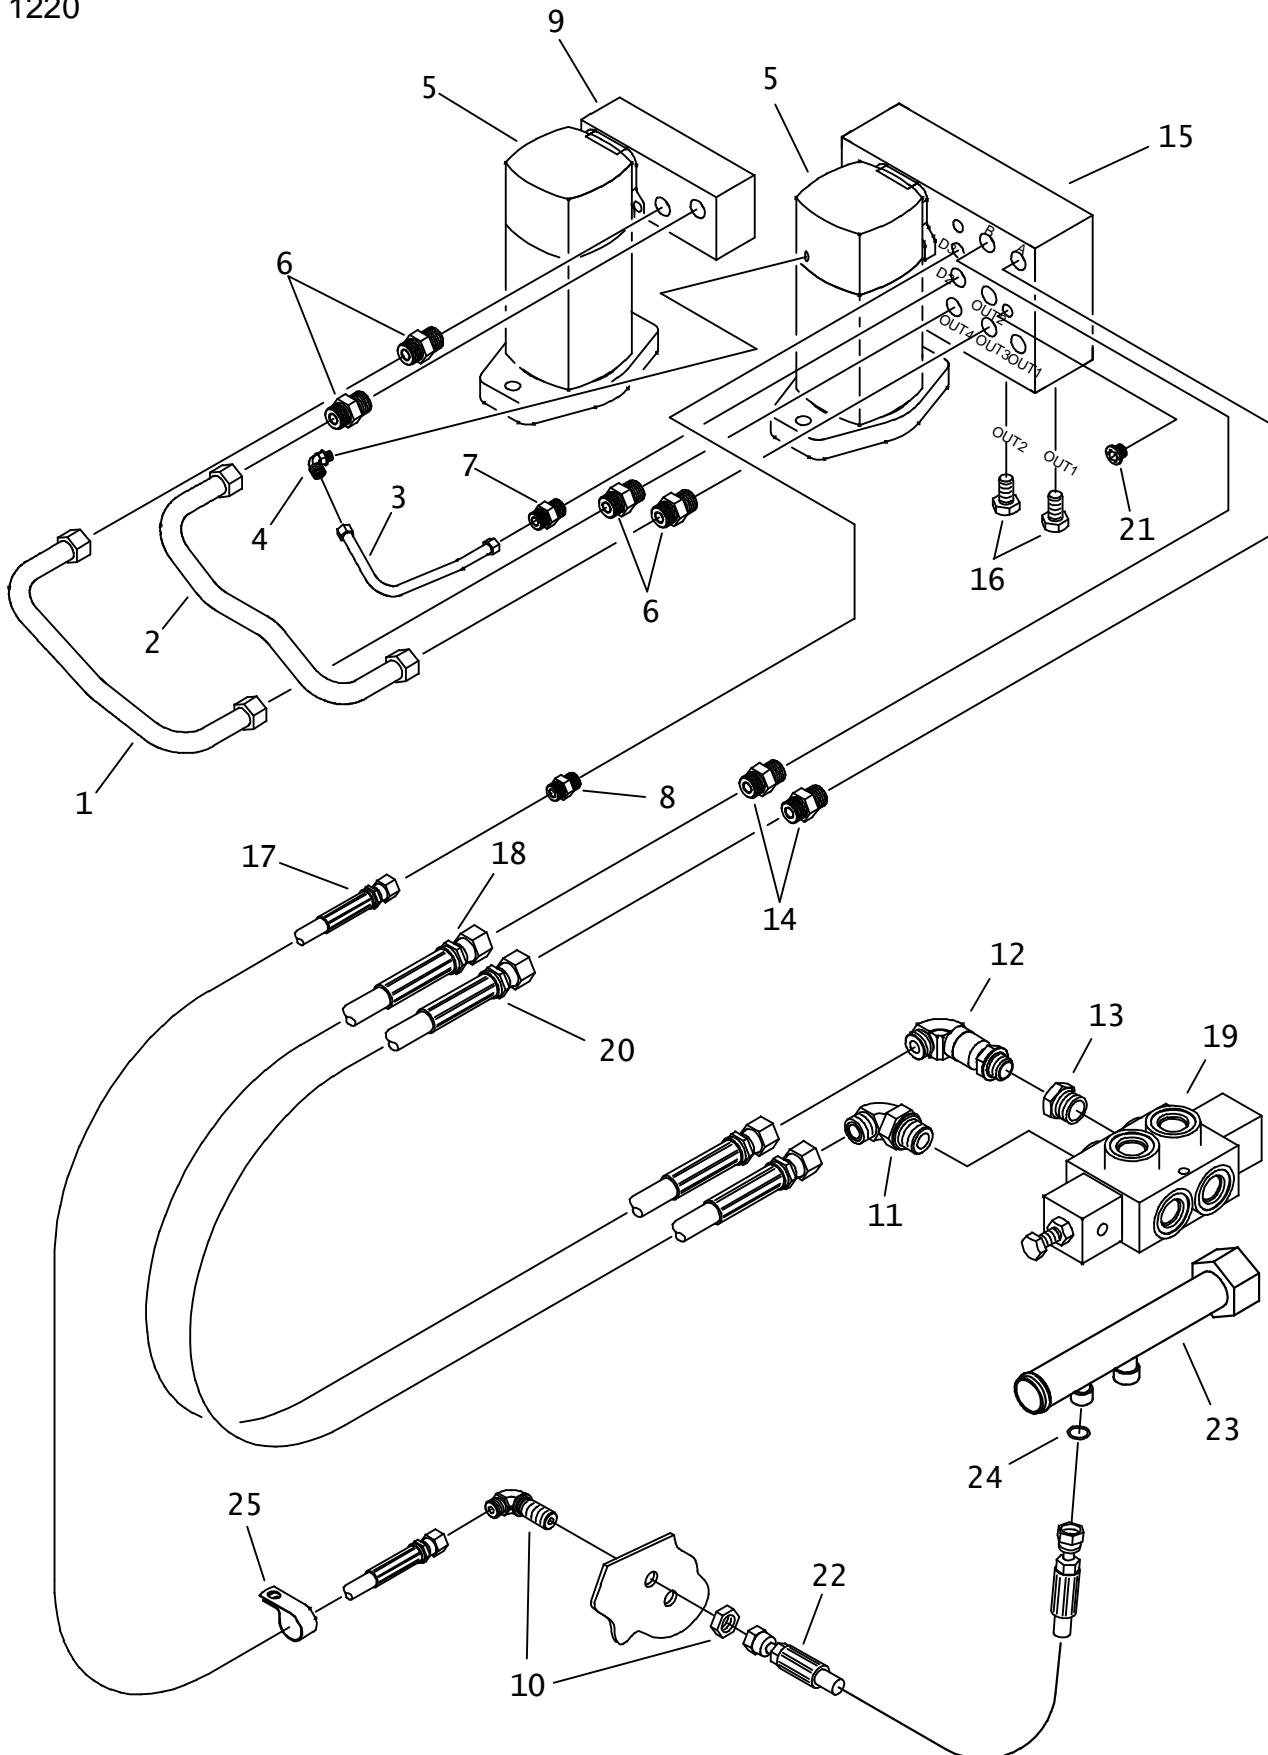

FRONT THRUST HYDRAULICS

JT1220


| REF | PART | | DESCRIPTION | REMARKS |
|-----|----------|-----|----------------------------|---------|
| NO. | NUMBER | QTY | | |
| 1. | 157-377 | 1 | HYD LINE (-12) | |
| 2. | 157-376 | 1 | HYD LINE (-12) | |
| 3. | 157-379 | 1 | HYD LINE (-06) | |
| 4. | 514-049 | 1 | CONNECTOR (04S-06090) | |
| 5. | 157-317 | - | MOTOR | |
| | 500-1269 | - | SEAL REPAIR KIT | |
| 6. | 154-247 | 4 | CONNECTOR (10S-120) | |
| 7. | 154-222 | 1 | CONNECTOR (060-08S) | |
| 8. | 154-221 | 1 | CONNECTOR (06S-060) | |
| 9. | 150-2050 | - | MANIFOLD | |
| 10. | 154-229 | 1 | BK CONNECTOR (060-06090BK) | |
| 11. | 154-300 | 1 | CONNECTOR (100-12S90) | |
| 12. | 154-288 | 1 | CONNECTOR (10S-10090, XL) | |
| 13. | 510-017 | 1 | REDUCER (12S-10SF) | |
| 14. | 154-301 | 2 | CONNECTOR (10S-100) | |
| 15. | 150-2049 | - | MANIFOLD | |
| 16. | 154-381 | 2 | PLUG (08S) | |
| 17. | 515-350 | 1 | HOSE (060FX-133"-3000) | |
| 18. | 159-784 | 1 | HOSE (100FX-141"-3000) | |
| 19. | 159-912 | - | HYD CONTROL VALVE | |
| | 191-396 | - | SEAL KIT | |
| | 500-1942 | - | SEAL WASHER | |
| 20. | 157-967 | 1 | HOSE (100FX-139"-3000) | |
| 21. | 154-383 | 1 | PLUG (04S) | |
| 22. | 515-089 | 1 | HOSE (060FX-15"-3000) | |
| 23. | 150-2205 | 1 | HYD LINE | |
| 24. | 157-039 | 1 | O-RING (014 D90) | |
| 25. | 110-333 | 1 | BOLT-ON CLAMP (1") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

P.O.R. HYDRAULICS

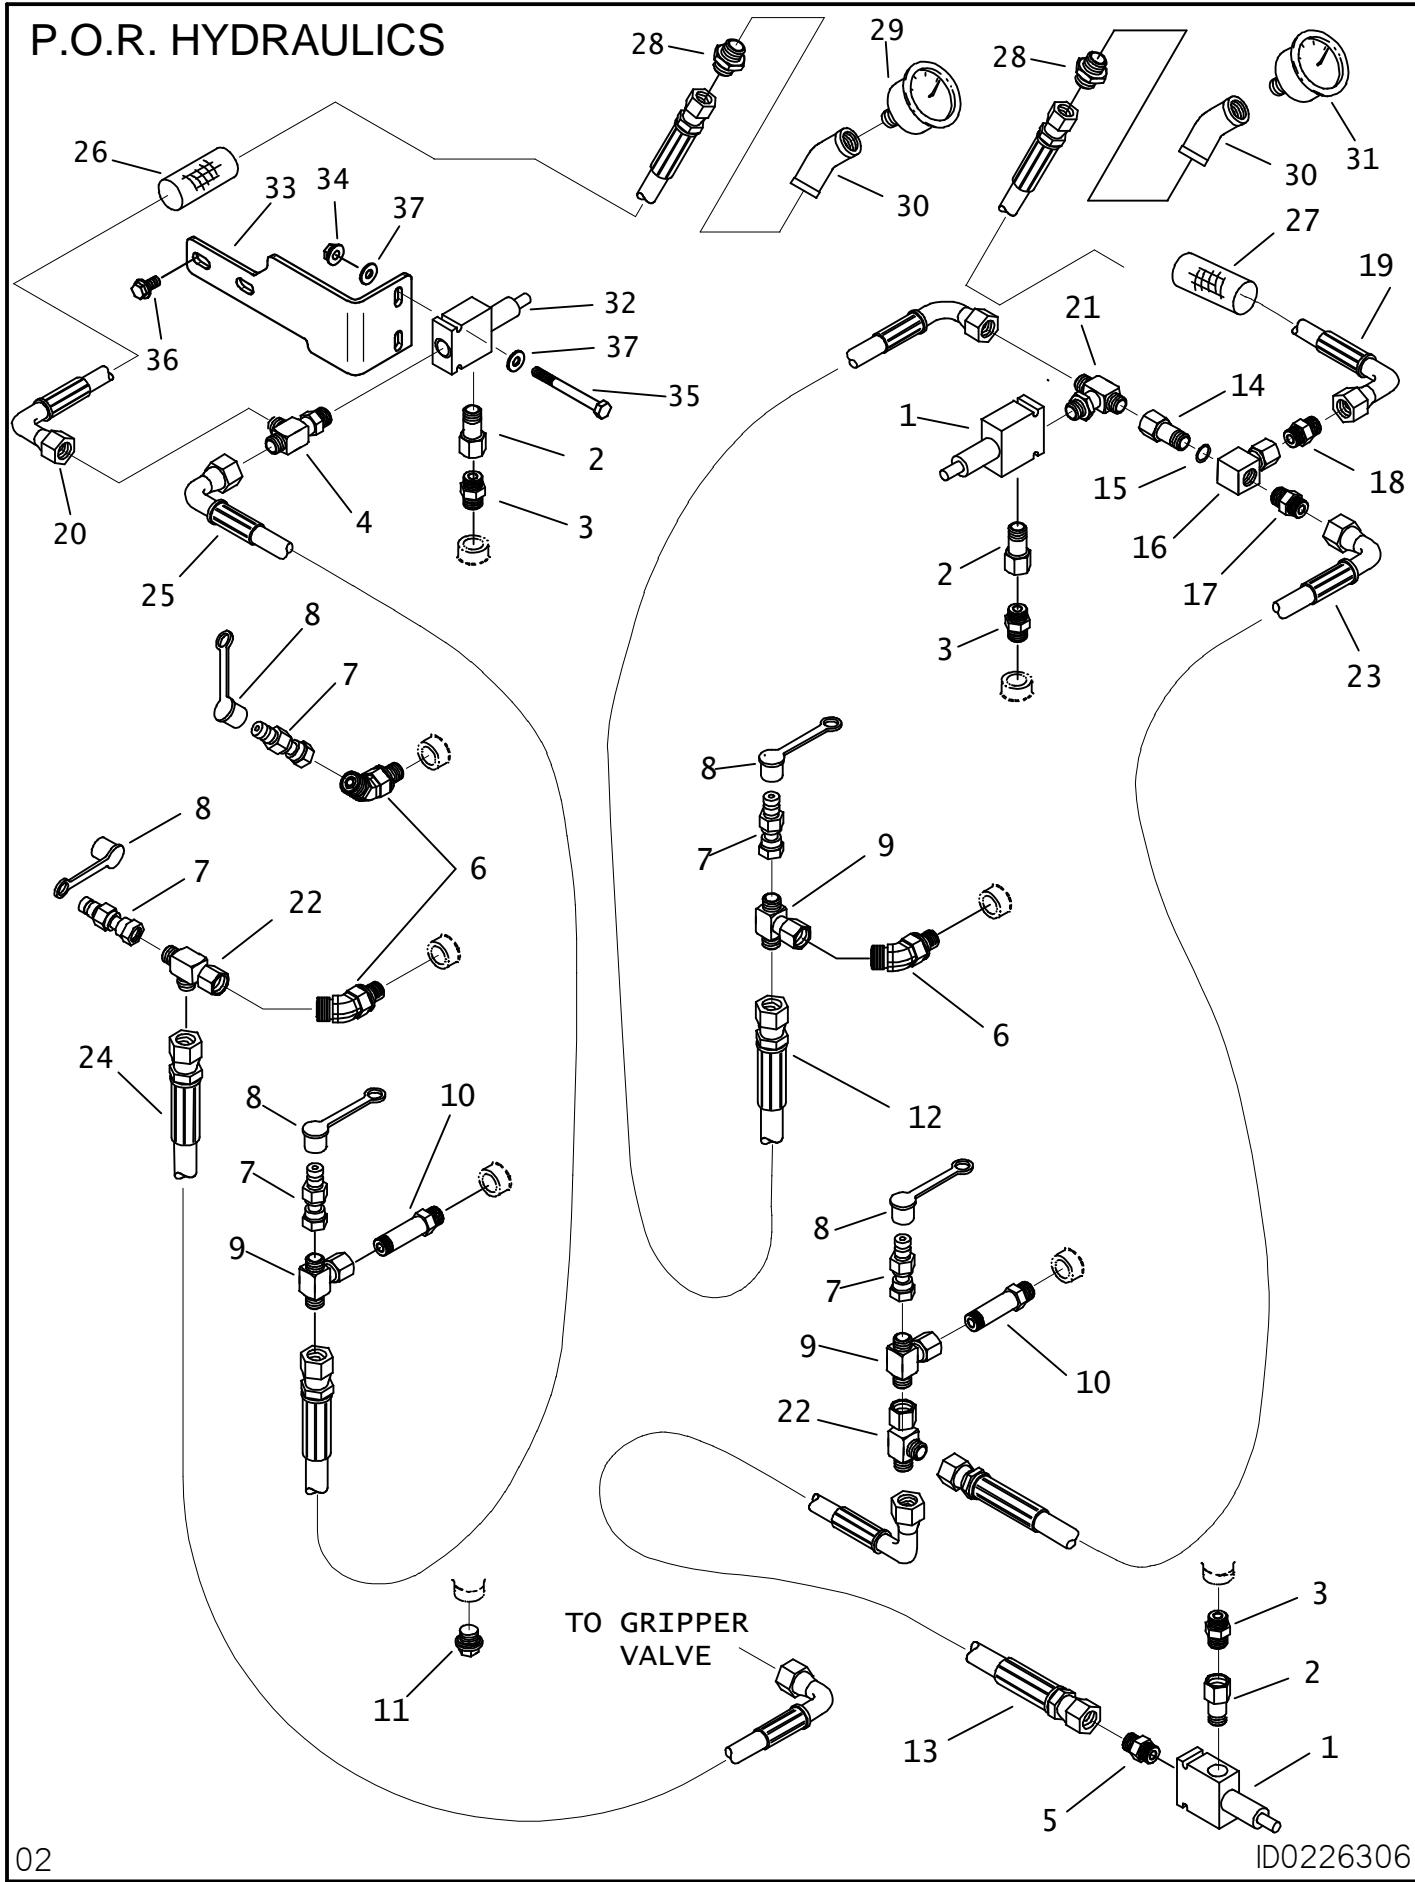

P.O.R. HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------------|---------|
| 1. | 158-681 | 2 | HYD RELIEF VALVE | |
| | 500-756 | - | SEAL REPAIR KIT | |
| 2. | 155-163 | 3 | REDUCER (08S-06SF) | |
| 3. | 155-153 | 3 | CONNECTOR (06S-06S) | |
| 4. | 159-744 | 1 | TEE (08S-060-040, .060 ORF) | |
| 5. | 159-743 | 1 | CONNECTOR (08S-060, ORF) | |
| 6. | 154-224 | 3 | CONNECTOR (06S-060 45) | |
| 7. | 159-157 | 5 | QDC ADAPTER (02-060FX) | |
| 8. | 159-148 | - | DUST CAP (1 / 8") | |
| 9. | 154-348 | 3 | UN BR TEE (060FX-060-060) | |
| 10. | 156-174 | 2 | CONNECTOR (06S-060) | |
| 11. | 155-130 | - | PLUG (06S) | |
| 12. | 157-822 | 1 | HOSE (060FX90-30"-3000) | |
| 13. | 153-320 | 1 | HOSE (060FX90L-17"-3000) | |
| 14. | 514-409 | 1 | UNION (06J-060FX) | |
| 15. | 155-705 | 1 | O-RING (906 D90) | |
| 16. | 158-600 | 1 | HYD SHUTTLE VALVE | |
| 17. | 154-221 | 1 | CONNECTOR (06S-060) | |
| 18. | 154-220 | 1 | CONNECTOR (040-06S) | |
| 19. | 515-072 | 1 | HOSE (040FX45-16"-3000) | |
| 20. | 154-991 | 1 | HOSE (040FX90S-36"-5000) | |
| 21. | 159-745 | 1 | TEE (08S-060-060, .060 ORF) | |
| 22. | 154-344 | 2 | UN RUN TEE (060FX-060-060) | |
| 23. | 153-768 | 1 | HOSE (060FX90S-18"-3000) | |
| 24. | 157-823 | 1 | HOSE (060FX90S-26"-3000) | |
| 25. | 153-877 | 1 | HOSE (060FX90M-26"-5500) | |
| 26. | 117-718 | 1 | ABRASION SLEEVE (1" x 36") | |
| 27. | 117-194 | 1 | ABRASION SLEEVE (1.00" x 16") | |
| 28. | 154-339 | 2 | CONNECTOR (04N-040) | |
| 29. | 258-045 | - | GAUGE (4000 PSI) | |
| 30. | 514-418 | 2 | ELBOW (04NF-04NF45) | |
| 31. | 217-036 | - | PRESSURE GAUGE (3000 PSI) | |
| 32. | 159-832 | 1 | HYD RELIEF VALVE | |
| | 500-756 | - | SEAL REPAIR KIT | |
| 33. | 300-4616 | 1 | P.O.R. SUPPORT BRACKET | |
| 34. | 106-385 | 2 | FLG LOCKNUT (M6-1.00) | |
| 35. | 106-893 | 2 | SCREW (M6-1.00 X 55MM) | |
| 36. | 106-382 | 2 | FLANGE LOCK SCREW (M10-1.5 X 20MM) | |
| 37. | 105-095 | 4 | WASHER (1/4") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

GROUND DRIVE HYDRAULICS

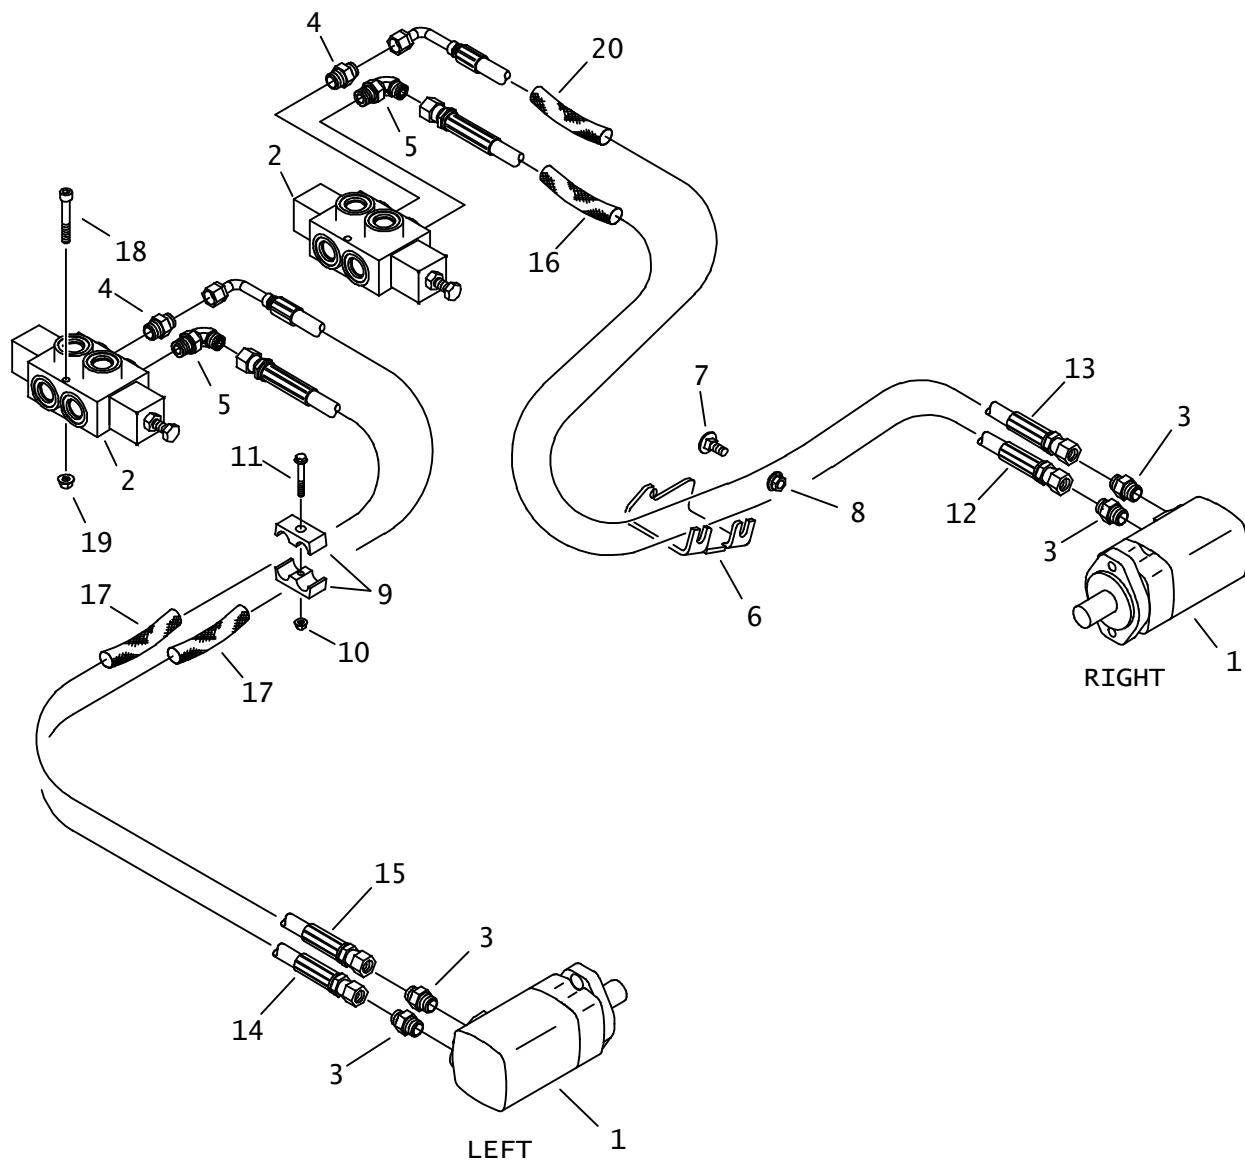

GROUND DRIVE HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------------|----------------|
| 1. | 155-581 | - | HYD MOTOR | |
| | 500-658 | - | SEAL REPAIR KIT | |
| 2. | 159-912 | 2 | HYD CONTROL VALVE | |
| | 191-396 | - | SEAL KIT | |
| | 500-1942 | - | SEAL WASHER | |
| 3. | 154-279 | 4 | CONNECTOR (080-10S) | |
| 4. | 154-234 | 2 | CONNECTOR (080-12S) | |
| 5. | 154-236 | 2 | CONNECTOR (080-12S90) | |
| 6. | 318-411 | 1 | HOSE PROTECTOR | |
| 7. | 107-683 | 2 | CARRIAGE BOLT(M12-1.75 X 30MM) | |
| 8. | 106-709 | 2 | FLG LK NUT (M12-1.75) | |
| 9. | 110-277 | 1 | CLAMP (.875", SOLD AS SET) | |
| 10. | 106-561 | 1 | LOCKNUT (M8-1.25, PRV TRQ, 10.9) | |
| 11. | 107-194 | 1 | FLG SCREW (M8-1.25 X 50MM) | |
| 12. | 154-677 | 1 | HOSE (080FX-62"-3000) | |
| 13. | 515-194 | 1 | HOSE (080FX90L-64"-3000) | |
| 14. | 157-902 | 1 | HOSE (080FX90M-83"-3000) | |
| 15. | 157-903 | 1 | HOSE (080FX-80"-3000) | |
| 16. | 117-980 | 1 | ABRASION SLEEVE (1.25" X 64") | |
| 17. | 117-981 | 2 | ABRASION SLEEVE (1.25" X 82") | |
| 18. | 106-725 | 4 | SCREW (M10-1.50 X 65MM, SOC) | |
| 19. | 105-894 | 4 | LOCKNUT (M10-1.50, PRV TRQ, 10.9) | SEE FOOTNOTE 1 |
| 20. | 117-391 | 1 | ABRASION SLEEVE (1.25" X 66") | |


NOT SHOWN:

FOOTNOTES:

- I. TIGHTEN ONLY ENOUGH TO HOLD PARTS IN PLACE, DO NOT OVERTIGHTEN.

NOTE:

ANCHOR HYDRAULICS

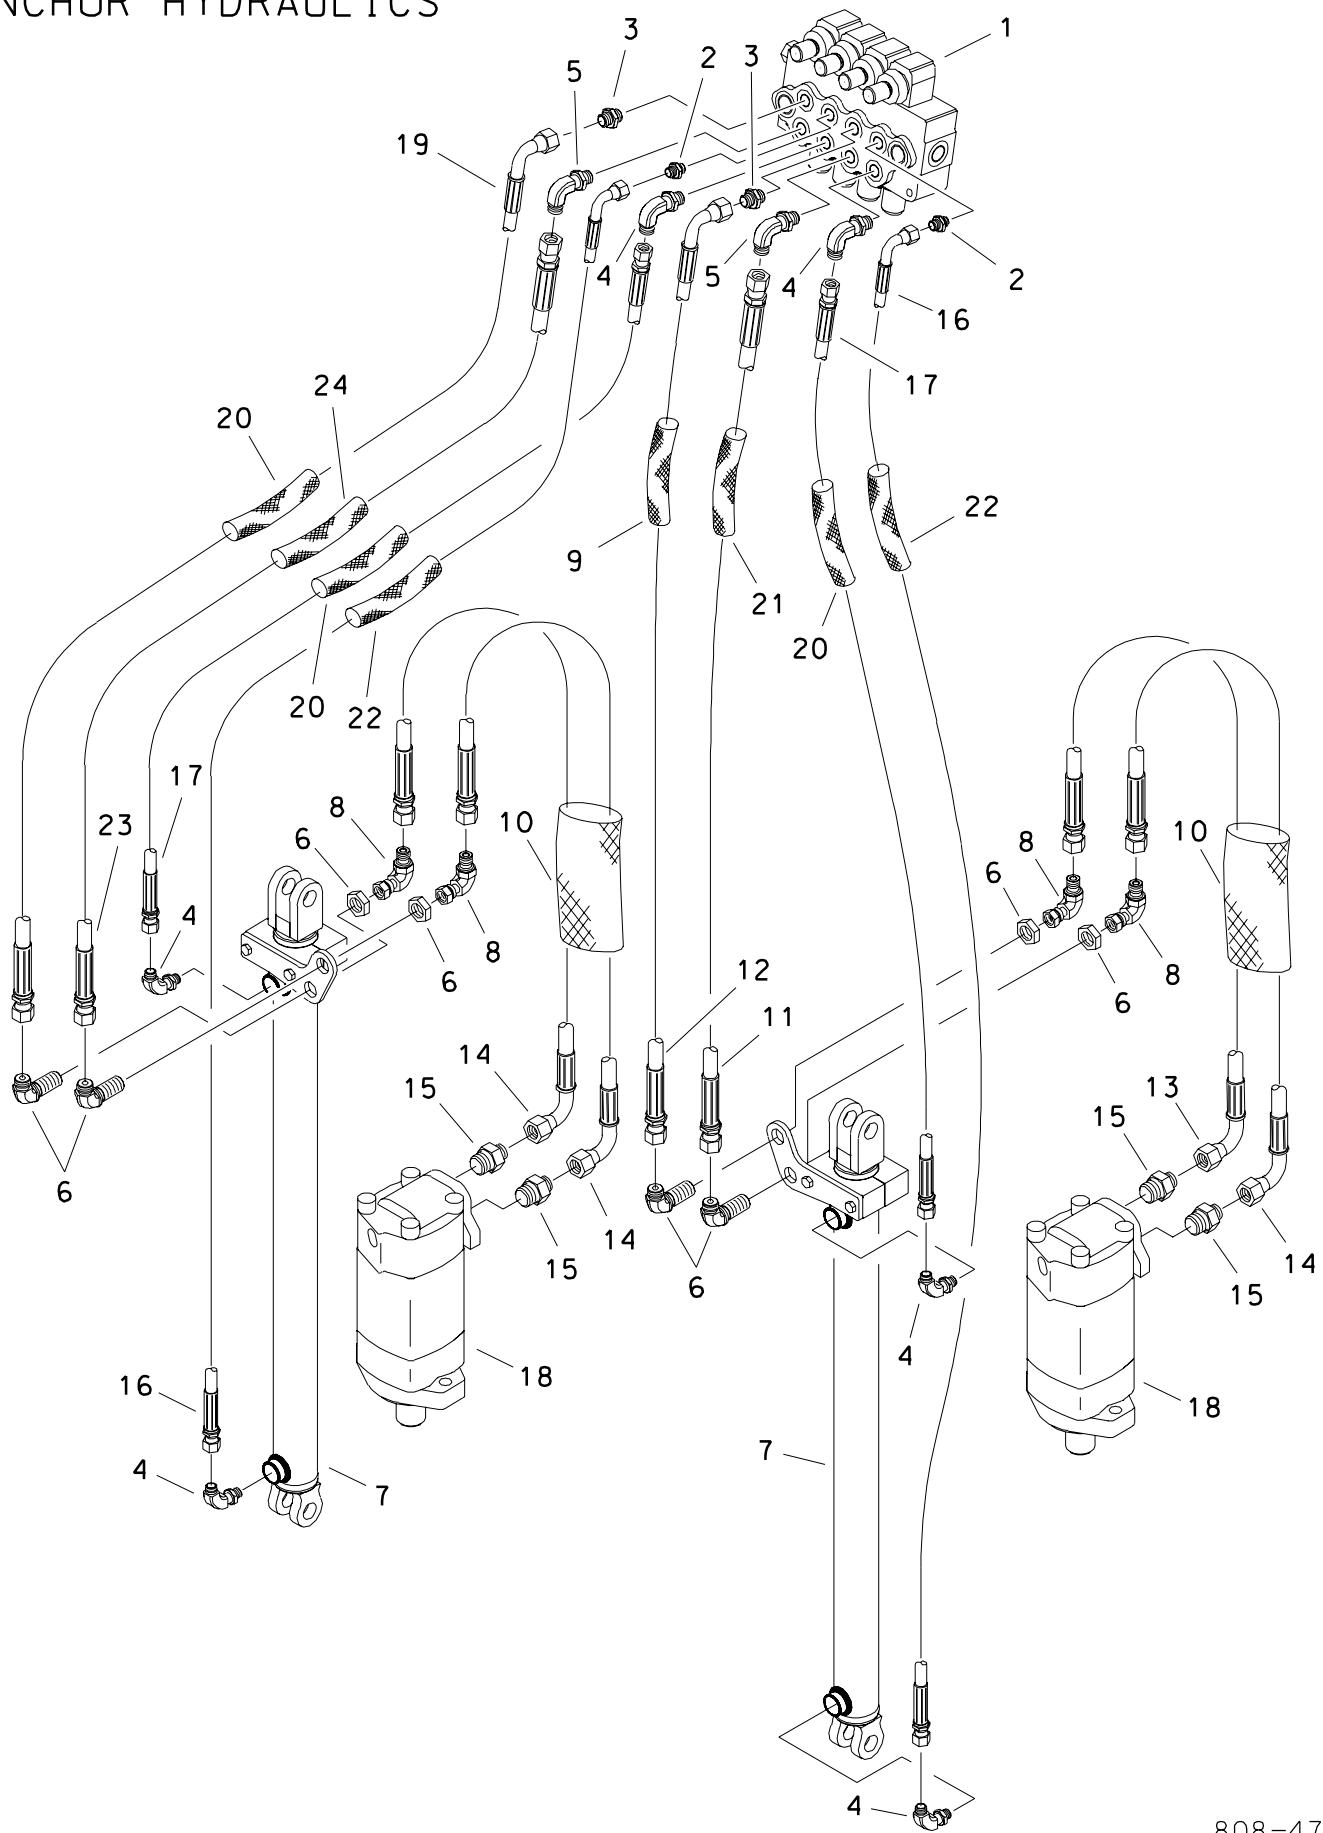


ANCHOR HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|-------------------------------|---------|
| 1. | 157-241 | - | ANCHOR VALVE | |
| 2. | 154-220 | 2 | CONNECTOR (040-06S) | |
| 3. | 154-221 | 2 | CONNECTOR (06S-06D) | |
| 4. | 154-226 | 6 | CONNECTOR (040-06S90) | |
| 5. | 154-342 | 2 | CONNECTOR (06S-06090) | |
| 6. | 154-229 | 4 | BK CONNECTOR (060-06090BK) | |
| 7. | 151-214 | - | HYD CYL | |
| 8. | 154-228 | 4 | UNION (060-060FX90) | |
| 9. | 117-409 | 1 | ABRASION SLEEVE (1.00" X 28") | |
| 10. | 117-679 | 2 | ABRASION SLEEVE (1.59" X 32") | |
| 11. | 515-711 | 1 | HOSE (060FX-25"-3000) | |
| 12. | 149-335 | 1 | HOSE (060FX90M-26"-3000) | |
| 13. | 157-822 | 1 | HOSE (060FX90-30"-3000) | |
| 14. | 515-707 | 3 | HOSE (060FX90-32"-3000) | |
| 15. | 154-369 | 4 | CONNECTOR (060-10S) | |
| 16. | 157-910 | 2 | HOSE (040FX90M-53"-3000) | |
| 17. | 515-755 | 2 | HOSE (040FX-25"-3000) | |
| 18. | 158-700 | - | HYD MOTOR | |
| | 500-658 | - | SEAL REPAIR KIT | |
| 19. | 157-951 | 1 | HOSE (060FX90M-25"-3000) | |
| 20. | 117-280 | 3 | ABRASION SLEEVE (1.00" X 25") | |
| 21. | 117-684 | 1 | ABRASION SLEEVE (1.00" X 26") | |
| 22. | 117-994 | 2 | ABRASION SLEEVE (1.00" X 53") | |
| 23. | 157-936 | 1 | HOSE (060FX-22"-3000) | |
| 24. | 117-611 | 1 | ABRASION SLEEVE (1.00" X 22") | |

FOOTNOTES

LUBRICATOR HYDRAULICS

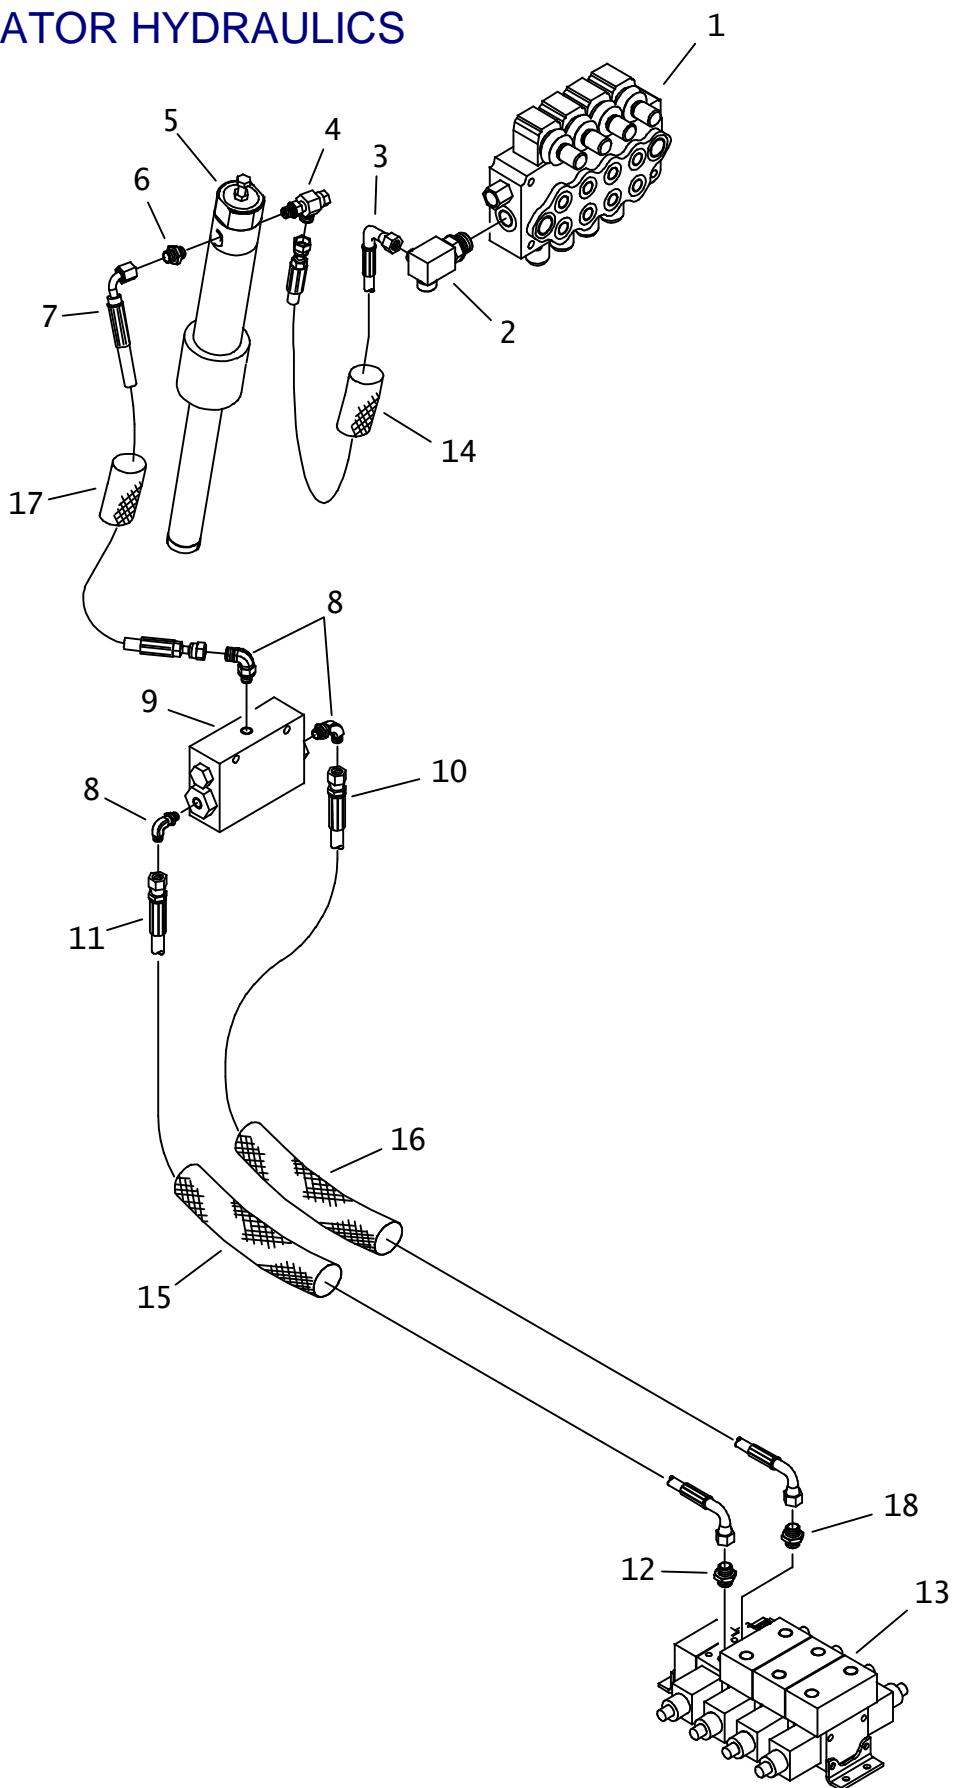

LUBRICATOR HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------|
| 1. | 157-241 | 1 | - ANCHOR VALVE | |
| 2. | 157-433 | 1 | CONNECTOR (10S-060-040) | |
| 3. | 515-175 | 1 | HOSE (040FX90-16"-3000) | |
| 4. | 159-797 | 1 | CONNECTOR (04S-04090, ORF/CHK) | |
| 5. | 350-398 | 1 | - GREASE PUMP PARTS | |
| 6. | 154-278 | 1 | CONNECTOR (04S-040) | |
| 7. | 515-284 | 1 | HOSE (040FX90-24"-3000) | |
| 8. | 154-252 | 3 | CONNECTOR (04S-04090) | |
| 9. | 310-591 | 1 | - VALVE | |
| 10. | 515-277 | 1 | HOSE (040FX90S-128"-3000) | |
| 11. | 154-916 | 1 | HOSE (040FX90S-120"-3000) | |
| 12. | 154-220 | 1 | CONNECTOR (040-06S) | |
| 13. | 157-778 | 1 | - HYDRAULIC VALVE | |
| 14. | 117-194 | 1 | ABRASION SLEEVE (1.00" x 16") | |
| 15. | 117-986 | 1 | ABRASION SLEEVE (1.00" x 120") | |
| 16. | 117-399 | 1 | ABRASION SLEEVE (1.00" x 130") | |
| 17. | 117-989 | 1 | ABRASION SLEEVE (1.00" x 24") | |
| 18. | 514-074 | 1 | CONNECTOR (06S-040, ORF) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

AUXILIARY HYDRAULICS

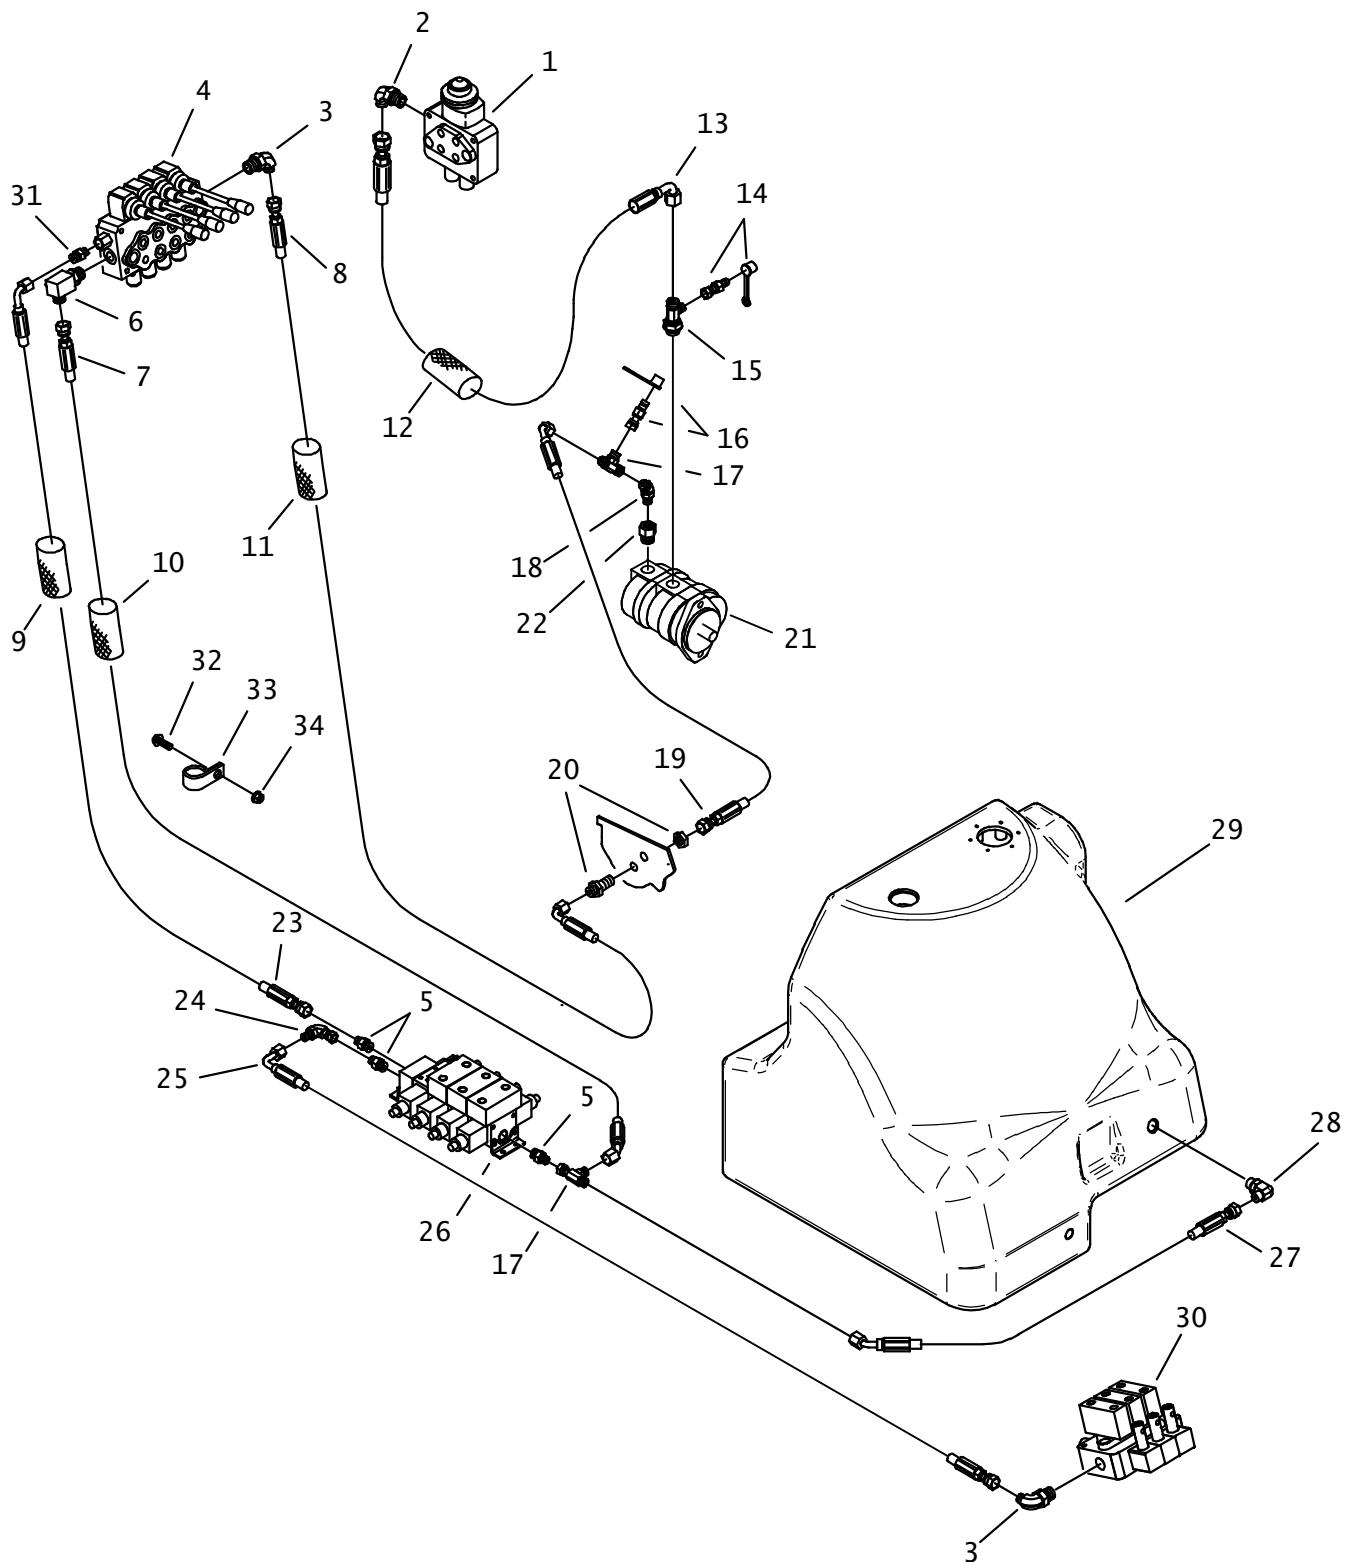

AUXILIARY HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---|---------|
| 1. | 153-988 | 1 | - VALVE, HYDRAULIC DIRECTIONAL | |
| 2. | 154-322 | 1 | CONNECTOR (080-10S90) | |
| 3. | 154-421 | 2 | CONNECTOR (060-10S90) | |
| 4. | 157-241 | 1 | - ANCHOR VALVE | |
| 5. | 154-221 | 3 | CONNECTOR (06S-060) | |
| 6. | 157-433 | 1 | - CONNECTOR (10S-060-040) | |
| 7. | 157-964 | 1 | HOSE (060FX45-158"-3000) | |
| 8. | 157-965 | 1 | HOSE (060FX90S-154"-3000) | |
| 9. | 117-997 | 1 | ABRASION SLEEVE (1.00" X 147") | |
| 10. | 117-998 | 1 | ABRASION SLEEVE (1.00" X 158") | |
| 11. | 117-999 | 1 | ABRASION SLEEVE (1.00" X 154") | |
| 12. | 117-388 | 1 | ABRASION SLEEVE (1.25" X 42") | |
| 13. | 515-025 | 1 | HOSE (080FX90-40"-3000) | |
| 14. | 159-156 | 1 | QDC ADAPTER (02-040F) | |
| 15. | 154-473 | 1 | RUN TEE (10S-080-040) | |
| 16. | 159-157 | 1 | QDC ADAPTER (02-060F) | |
| 17. | 154-344 | 2 | UN RUN TEE (060FX-060-060) | |
| 18. | 154-224 | 1 | CONNECTOR (06S-06045) | |
| 19. | 155-486 | 1 | HOSE (060FX90-31"-3000) | |
| 20. | 514-163 | 1 | BK CONNECTOR (060-060BK) | |
| 21. | 157-860 | 1 | - DOUBLE GEAR PUMP 500-967 SEAL KIT | |
| 22. | 155-171 | 1 | REDUCER (10S-06SF) | |
| 23. | 157-963 | 1 | HOSE (060FX90S-146"-3000) | |
| 24. | 154-228 | 1 | UNION (060-060FX90) | |
| 25. | 157-962 | 1 | HOSE (060FX90M-78"-3000) | |
| 26. | 157-778 | 1 | - HYDRAULIC VALVE 502-102 - 100 PSI DUAL PO CHECK | |
| 27. | 159-721 | 1 | HOSE (060FX45-52"-3000) | |
| 28. | 154-227 | 1 | CONNECTOR (060-08S90) | |
| 29. | 150-2088 | 1 | HYDRAULIC TANK | |
| 30. | 157-240 | 1 | - SET UP VALVE | |
| 31. | 154-222 | 1 | CONNECTOR (060-08S) | |
| 32. | 105-271 | 1 | SCREW (M10-1.5 X 40mm) | |
| 33. | 110-555 | 1 | CLAMP (1-7/8") | |
| 34. | 106-387 | 1 | FLG LOCKNUT (M10-1.50) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

FAN DRIVE HYDRAULICS

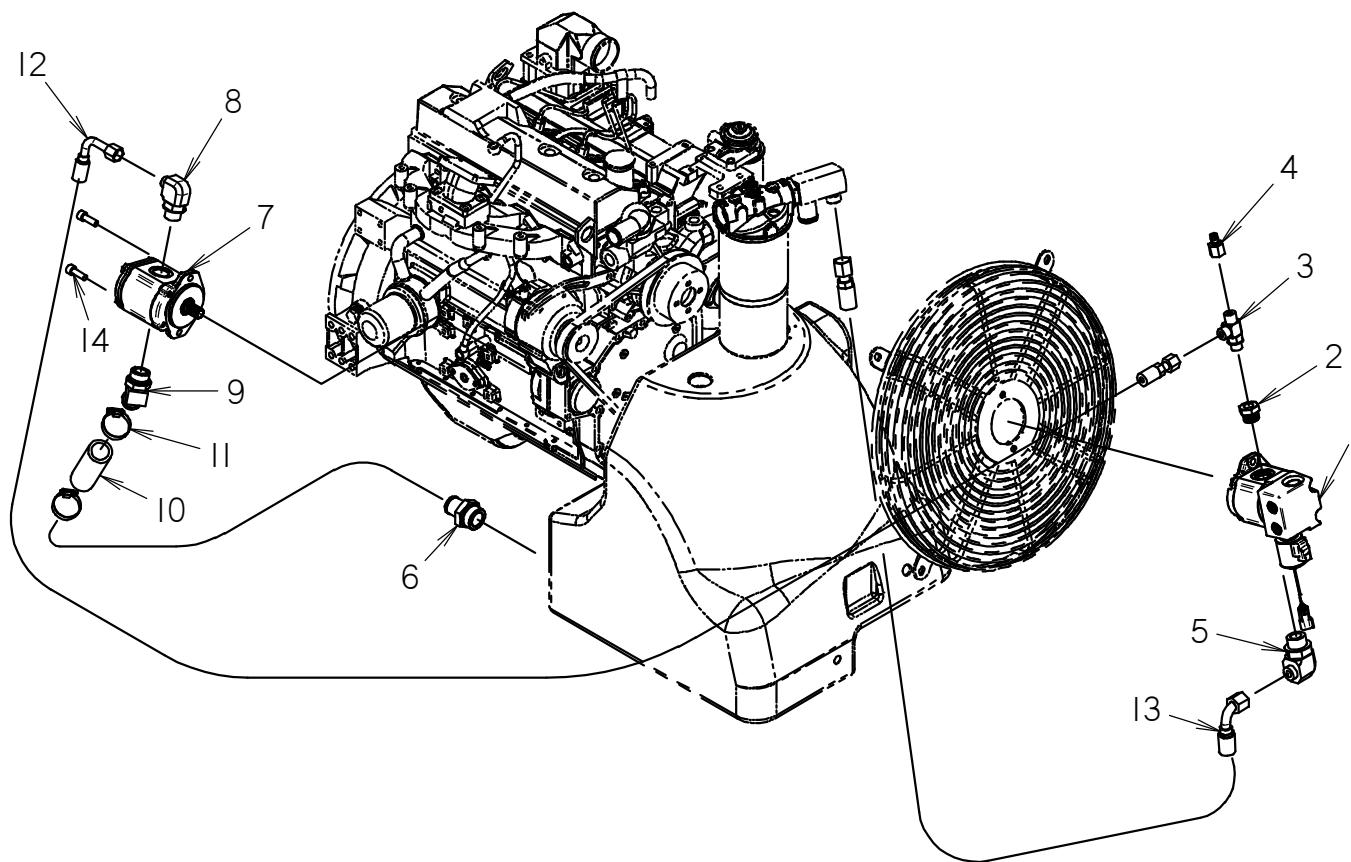

FAN DRIVE HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|--------------------------------|
| I | I50-2077 | I | HYDRAULIC GEAR MOTOR | |
| 2 | I53-770 | I | REDUCER (I2S-8SF) | |
| 3 | I54-299 | I | RUN TEE (08S-080-080) | |
| 4 | I59-158 | I | QDC ADAPTER (02-080FX) | |
| 5 | 514-153 | I | CONNECTOR (I00-I6S90) | |
| 6 | I55-004 | I | S/O COUPLER (20S-20H) | |
| 7 | I50-2078 | I | HYDRAULIC GEAR PUMP | |
| 8 | I54-236 | I | CONNECTOR (080-I2S90) | |
| 9 | I15-281 | I | S/O COUPLER (I6S-20H45) | |
| I0 | I16-587 | 27 | BULK HOSE (I-1/4", SOLD PER FT) | |
| I1 | I10-I33 | 2 | WORM CLAMP(I-1/16" TO I-15/16") | |
| I2 | I50-2757 | I | HOSE (080FX90L-92"-3000) | |
| I3 | I16-812 | I | HOSE (I00FX90S-71"-3000) | |
| I4 | I06-755 | 2 | SCREW (M10-I.50 X 30MM, SOC) | USE LOCTITE 242 OR EQUIVALENT. |

NOT SHOWN:

FOOTNOTES:

NOTE:

DRILLING FLUID HYDRAULICS

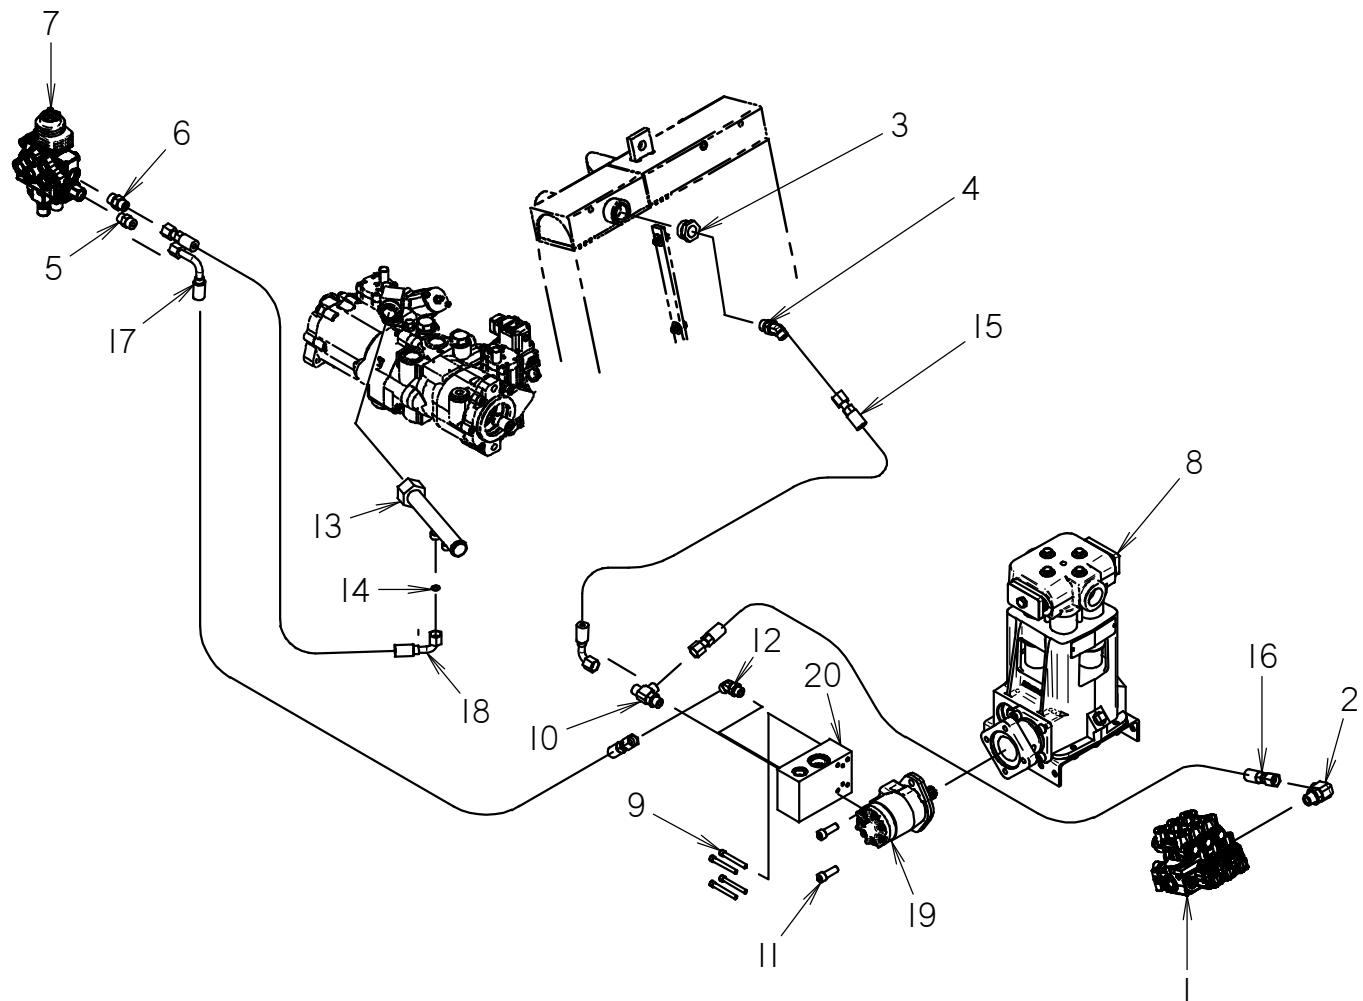

DRILLING FLUID HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---|
| 1 | I57-240 | 1 | SET UP VALVE | |
| 2 | I54-322 | 1 | CONNECTOR I080-I0S90) | |
| 3 | I55-199 | 1 | REDUCER (I16S-I0SF) | |
| 4 | I54-264 | 1 | CONNECTOR I080-I0S45) | |
| 5 | I54-233 | 1 | CONNECTOR I08S-080) | |
| 6 | I54-279 | 1 | CONNECTOR I080-I0S) | |
| 7 | I53-988 | 1 | VALVE, HYDRAULIC DIRECTIONAL | |
| 8 | I57-267 | 1 | DRILLING FLUID PUMP | |
| 9 | I08-056 | 4 | BOLT (5/I16-NC X 2-I/2", SOC) | |
| I0 | I54-299 | 1 | RUN TEE I08S-080-080) | |
| I1 | I06-204 | 2 | BOLT (I/2 - NC X I.50", SOC) | TORQUE TO 100 FT-LBS, USE LOCTITE 242 OR EQUIVALENT |
| I2 | I54-284 | 1 | CONNECTOR I08S-08045) | |
| I3 | I50-2205 | 1 | HYD LINE | |
| I4 | I57-039 | 1 | O-RING (O14 D90) | |
| I5 | I59-824 | 1 | HOSE I080FX90S-38"-3000) | |
| I6 | I54-720 | 1 | HOSE I080FX-20"-3000) | |
| I7 | I515-701 | 1 | HOSE I080FX90S-I22"-3000) | |
| I8 | I50-2758 | 1 | HOSE I080FX90S-28"-3000) | |
| I9 | I57-773 | 1 | HYDRAULIC MOTOR | |
| I0 | I57-774 | 1 | MANIFOLD | |

NOT SHOWN:

FOOTNOTES:

NOTE:

ROTATING WRENCH HYDRAULICS

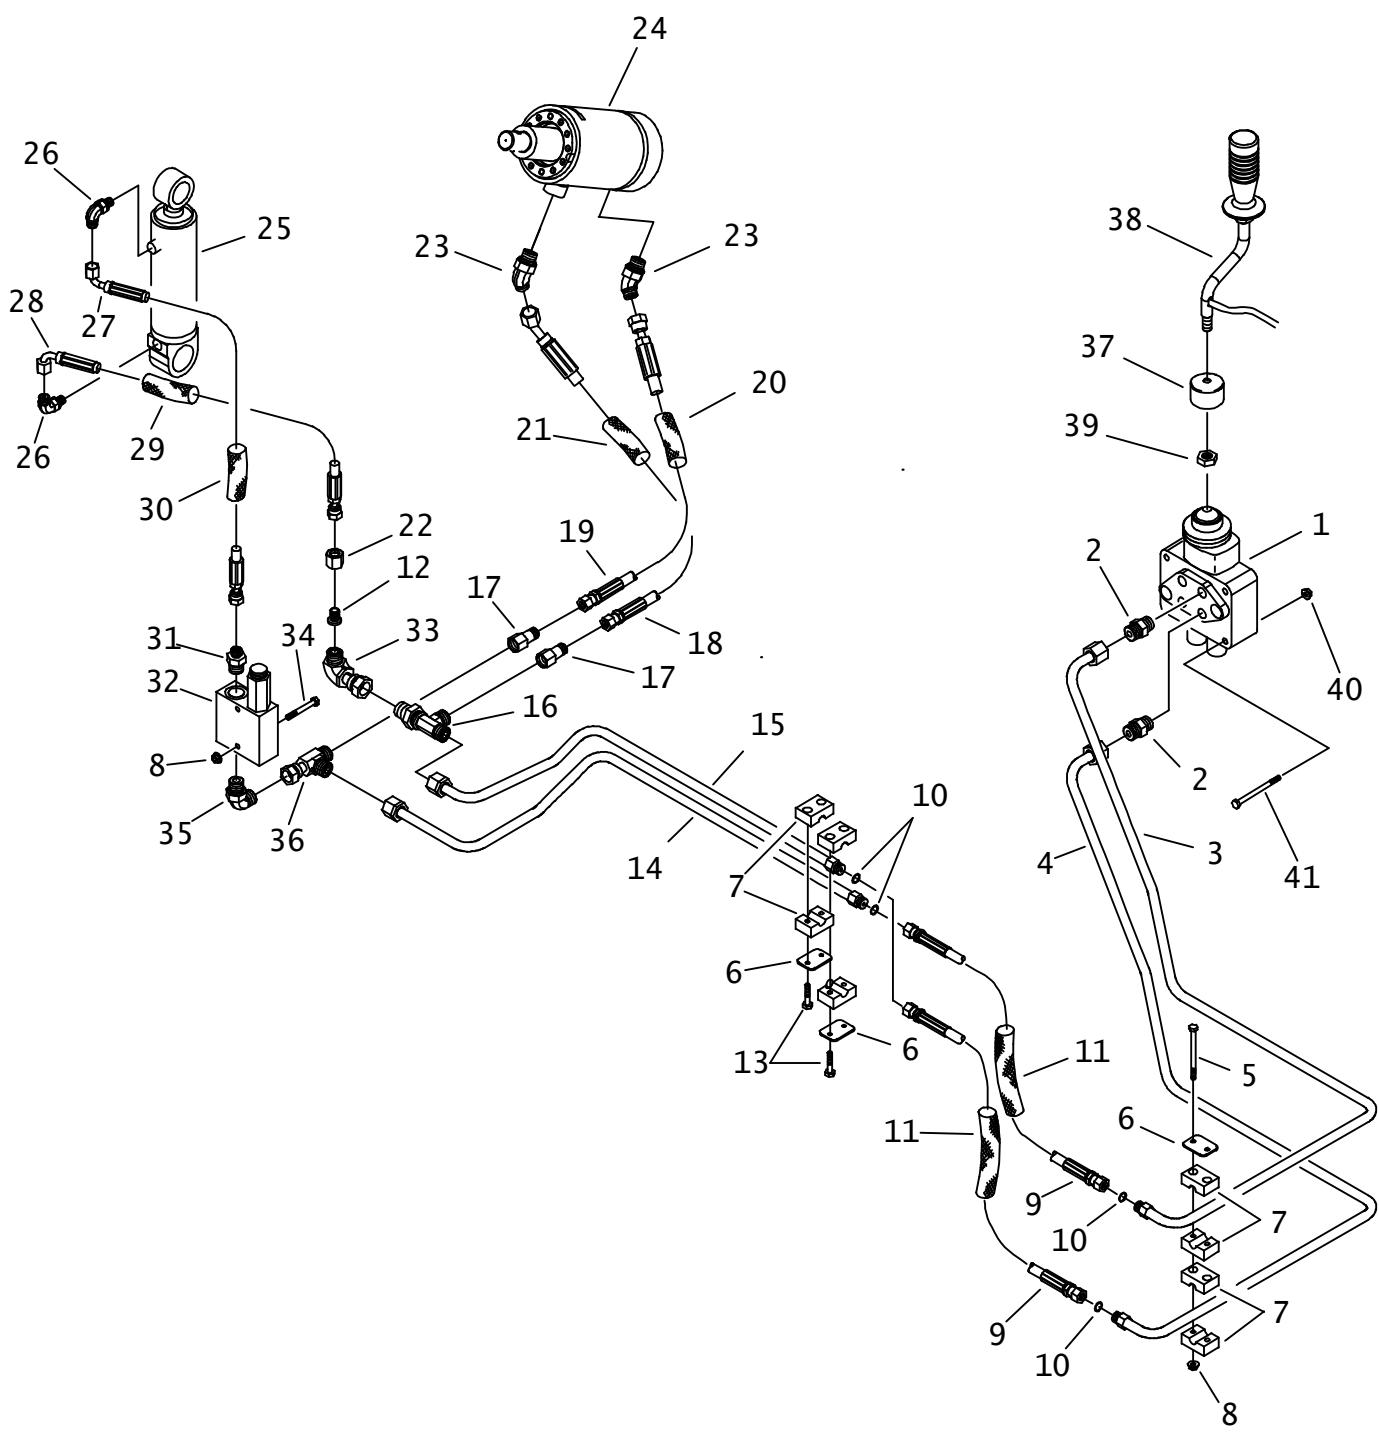

ROTATING WRENCH HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------|
| 1. | 153-988 | 1 | VALVE, HYDRAULIC DIRECTIONAL | |
| 2. | 154-233 | 2 | CONNECTOR (08S-080) | |
| 3. | 150-2221 | 1 | HYD LINE (-08) | |
| 4. | 150-2222 | 1 | HYD LINE (-08) | |
| 5. | 105-843 | 2 | SCREW (M6-1.00 X 80MM) | |
| 6. | 110-958 | 3 | BACKUP PLATE | |
| 7. | 110-866 | 4 | CLAMP SET (1/2") | |
| 8. | 106-385 | 4 | FLG LOCKNUT (M6-1.00) | |
| 9. | 154-807 | 2 | HOSE (060FX-24"-3000) | |
| 10. | 157-038 | 4 | O-RING (012 D90) | |
| 11. | 117-280 | 2 | ABRASION SLEEVE (1.00" X 25") | |
| 12. | 154-248 | 1 | REDUCER STEM (040) | |
| 13. | 105-818 | 4 | BOLT (1/4-NC X 1-1/2") | |
| 14. | 157-496 | 1 | HYD LINE (-08) | |
| 15. | 157-497 | 1 | HYD LINE (-08) | |
| 16. | 154-295 | 1 | BK RUN TEE (080-080-080BK) | |
| 17. | 154-262 | 2 | REDUCER (060-080F) | |
| 18. | 157-937 | 1 | HOSE (060FX45-29"-3000) | |
| 19. | 159-846 | 1 | HOSE (060FX-26"-3000) | |
| 20. | 117-684 | 1 | ABRASION SLEEVE (1.00" X 26") | |
| 21. | 117-409 | 1 | ABRASION SLEEVE (1.00" X 28") | |
| 22. | 154-272 | 1 | REDUCER NUT (080F) | |
| 23. | 154-225 | 2 | CONNECTOR (060-08S45) | |
| 24. | 151-213 | - | CYL (4.0" X 2.0" X 2.0") | |
| 25. | 151-038 | - | CYL (2.0 X 1.0 X 4.0) | |
| 26. | 154-252 | 2 | CONNECTOR (04S-04090) | |
| 27. | 515-598 | 1 | (040FX90-12"-3000) | |
| 28. | 515-599 | 1 | (040FX90-13"-3000) | |
| 29. | 117-671 | 1 | ABRASION SLEEVE (1.00" X 12") | |
| 30. | 117-278 | 1 | ABRASION SLEEVE (1.00" X 14") | |
| 31. | 154-261 | 1 | CONNECTOR (040-08S) | |
| 32. | 157-249 | 1 | SEQUENCE VALVE | |
| 33. | 154-256 | 1 | UNION (080-080FX90) | |
| 34. | 107-025 | 2 | SCREW (M6-1.00 X 50MM) | |
| 35. | 154-235 | 1 | CONNECTOR (08S-08090) | |
| 36. | 154-266 | 1 | UNION RUN TEE (080FX-080-080) | |
| 37. | 111-077 | 1 | VINYL CAP (1.625") | |
| 38. | 118-370 | 1 | HANDLE | |
| 39. | 107-669 | 1 | JAM NUT (M12-1.75) | |
| 40. | 106-386 | 3 | FLG LOCKNUT (M8-1.25) | |
| 41. | 106-570 | 3 | SCREW (M8-1.25 X 60MM) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

STATIONARY WRENCH HYDRAULICS

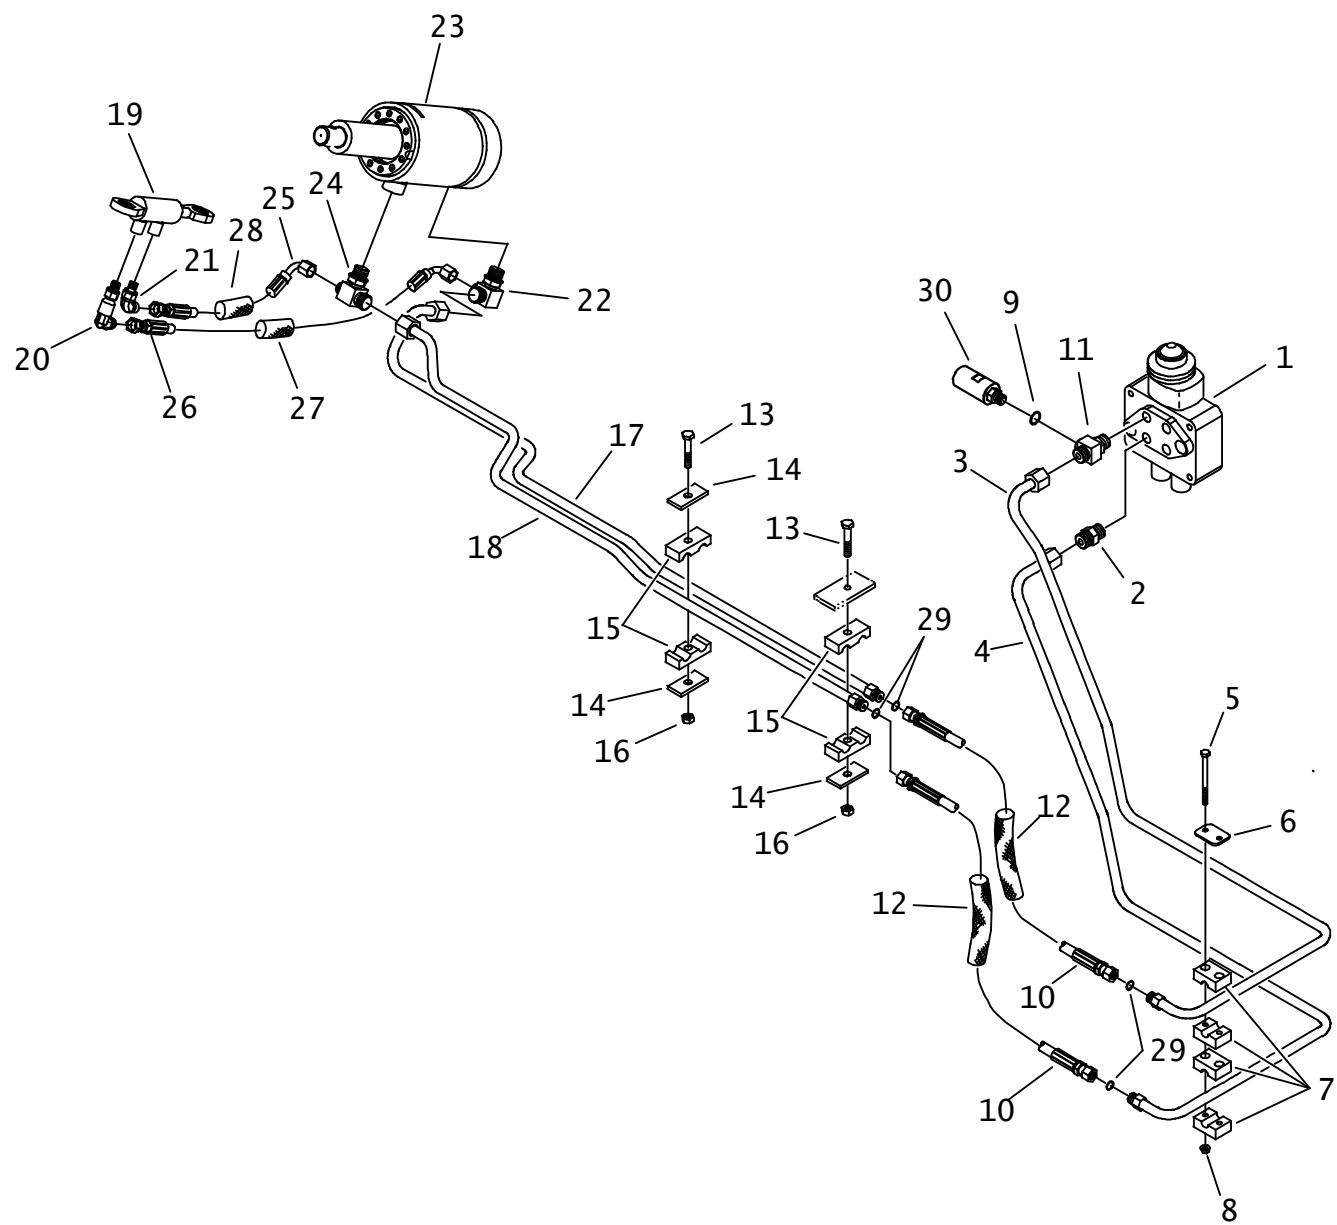

STATIONARY WRENCH HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------|
| 1. | 153-988 | 1 | - VALVE, HYDRAULIC DIRECTIONAL | |
| 2. | 154-233 | 1 | CONNECTOR (08S-080) | |
| 3. | 150-2223 | 1 | HYD LINE (-08) | |
| 4. | 150-2224 | 1 | HYD LINE (-08) | |
| 5. | 105-843 | 2 | SCREW (M6-1.00 X 80MM) | |
| 6. | 110-958 | 1 | BACKUP PLATE | |
| 7. | 110-866 | 2 | CLAMP SET (1/2") | |
| 8. | 106-385 | 2 | FLG LOCKNUT (M6-1.00) | |
| 9. | 155-705 | 1 | O-RING (906 D90) | |
| 10. | 154-807 | 2 | HOSE (060FX-24"-3000) | |
| 11. | 157-932 | 1 | RUN TEE (08S-080-06SF) | |
| 12. | 117-280 | 2 | ABRASION SLEEVE (1.00" X 25") | |
| 13. | 106-329 | 2 | SCREW (M8-1.25 X 50MM) | |
| 14. | 305-256 | 3 | BACKUP SPACER | |
| 15. | 110-270 | 4 | BOLT-ON CLAMP (9/16", HALF) | |
| 16. | 107-096 | 2 | LOCKNUT (M8-1.25, NLK) | |
| 17. | 157-494 | 1 | HYD LINE (-08) | |
| 18. | 157-495 | 1 | HYD LINE (-08) | |
| 19. | 151-220 | 1 | - CYLINDER (1.0 X .50 X .90) | |
| 20. | 154-474 | 1 | CONNECTOR (04S-04090, XL) | |
| 21. | 154-252 | 1 | CONNECTOR (04S-04090) | |
| 22. | 514-160 | 1 | BRANCH TEE (08S-080-040) | |
| 23. | 151-213 | 1 | - CYL (4.0" X 2.0" X 2.0") | |
| 24. | 157-769 | 1 | BRANCH TEE (08S-080-040) | |
| 25. | 153-364 | 1 | HOSE (040FX90S-13"-3000) | |
| 26. | 154-857 | 1 | HOSE (040FX90-19"-3000) | |
| 27. | 117-328 | 1 | ABRASION SLEEVE (1.00" X 18") | |
| 28. | 117-671 | 1 | ABRASION SLEEVE (1" X 12") | |
| 29. | 157-038 | 4 | O-RING (012 D90) | |
| 30. | 215-1204 | 1 | PRESSURE SWITCH (1850PSI) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PIPE GRIP HYDRAULICS

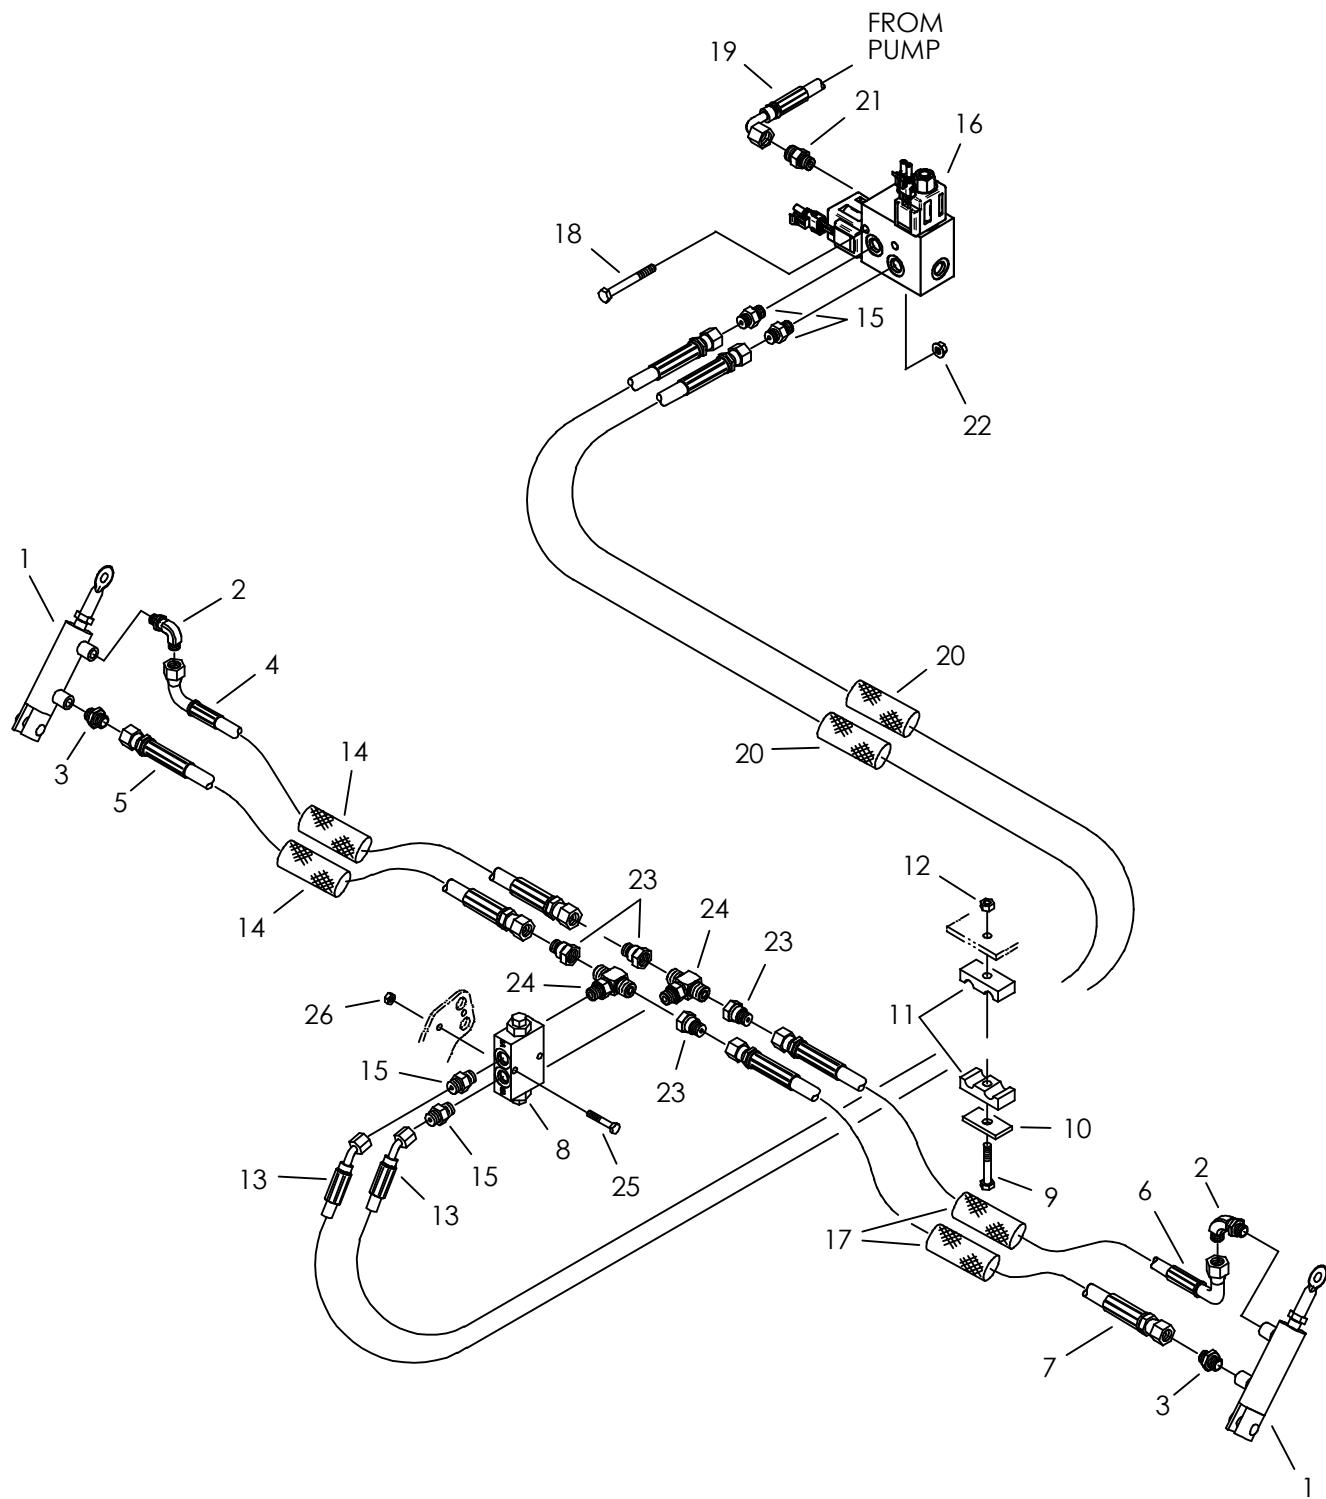

PIPE GRIP HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|----------------------------------|
| 1. | 151-150 | 1 | CYL (1.5" X .50" X 2") | |
| 2. | 154-252 | 2 | CONNECTOR (04S-04090) | |
| 3. | 154-278 | 2 | CONNECTOR (04S-040) | |
| 4. | 153-307 | 1 | (040FX90S-38"-3000) | |
| 5. | 154-695 | 1 | HOSE (040FX-38"-3000) | |
| 6. | 153-365 | 1 | HOSE (040FX90S-34"-3000) | |
| 7. | 515-229 | 1 | HOSE (040FX-34"-3000) | |
| 8. | 149-136 | 1 | HYD LOCKOUT VALVE | |
| 9. | 106-329 | 1 | SCREW (M8-1.25 X 50MM) | |
| 10. | 305-256 | 1 | BACKUP SPACER | |
| 11. | 110-270 | 2 | BOLT-ON CLAMP (9/16", HALF) | |
| 12. | 107-096 | 1 | LOCKNUT (M8-1.25, NLK) | |
| 13. | 515-425 | 2 | HOSE (040FX45-42"-3000) | |
| 14. | 117-717 | 2 | ABRASION SLEEVE (1.00" X 40") | |
| 15. | 154-220 | 4 | CONNECTOR (040-06S) | |
| 16. | 157-776 | 1 | MANIFOLD | SEE NOT SHOWN FOR SERVICE PARTS. |
| 17. | 117-718 | 2 | ABRASION SLEEVE (1" X 36") | |
| 18. | 106-330 | 2 | SCREW (M8-1.25 X 70MM) | |
| 19. | 157-823 | 1 | HOSE (060FX90S-26"-3000) | USE ON JT1220 |
| | 515-586 | 1 | HOSE (060FX90S-21"-3000) | USE ON JT2020 |
| 20. | 117-387 | 2 | ABRASION SLEEVE (1.00" X 42") | |
| 21. | 154-221 | 1 | CONNECTOR (06S-060) | |
| 22. | 106-386 | 2 | FLG LOCKNUT (M8-1.25) | |
| 23. | 154-373 | 4 | REDUCER (040-060F) | |
| 24. | 154-346 | 2 | BRANCH TEE (06S-060-060) | |
| 25. | 105-818 | 2 | BOLT (1/4-NC X 1-1/2") | |
| 26. | 105-085 | 2 | LOCKNUT (1/4-NC) | |


NOT SHOWN:

| | | |
|----------|--------------------------|---------------------|
| 516-089 | SOLENOID VALVE WITH NUT | USED ON 4 WAY VALVE |
| 500-I54I | SOLENOID VALVE WITH NUT | USED ON 3 WAY VALVE |
| 213-216 | SOLENOID COIL WITH DIODE | USED ON 4 WAY VALVE |
| 213-I96 | SOLENOID COIL WITH DIODE | USED ON 3 WAY VALVE |

FOOTNOTES:

NOTE:

SHUTTLE HYDRAULICS

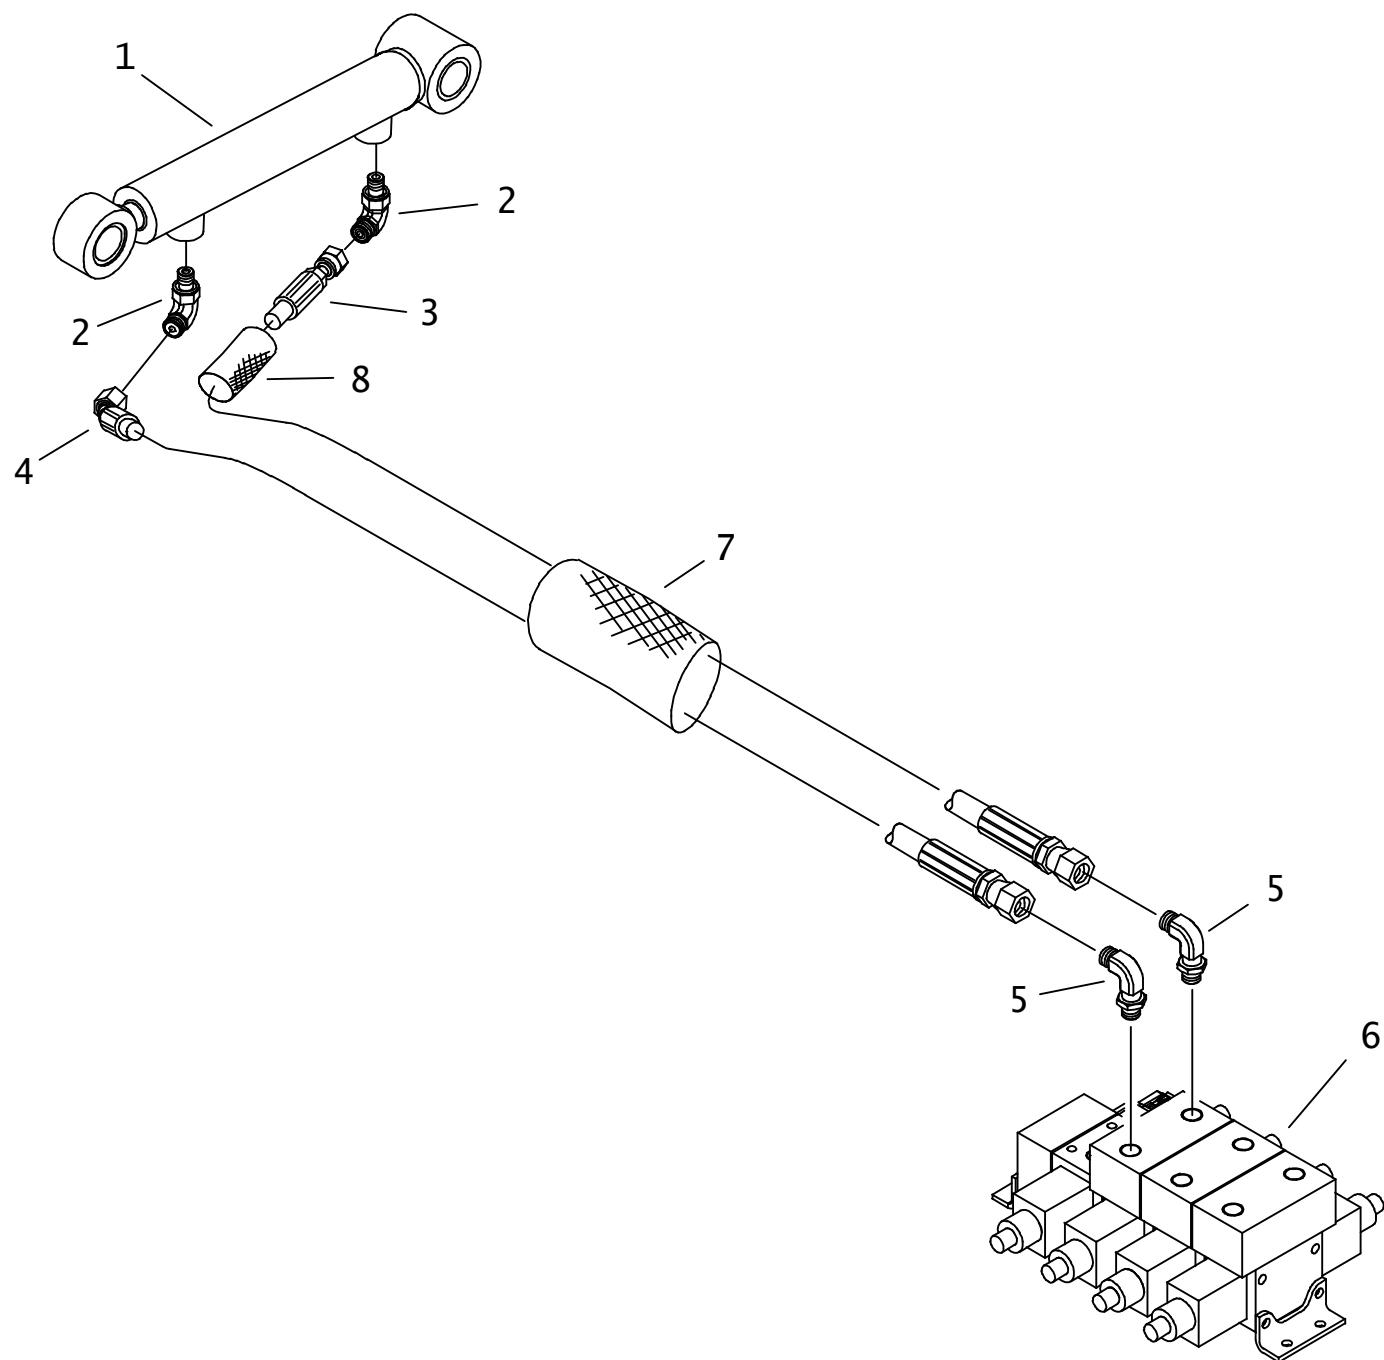

SHUTTLE HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------|
| 1. | 151-230 | - | CYL (1.25" x .75" x 6") | |
| 2. | 154-252 | 2 | CONNECTOR (04S-04090) | |
| 3. | 515-054 | 1 | HOSE (040FX-74"-3000) | |
| 4. | 515-120 | 1 | HOSE (040FX45-67"-3000) | |
| 5. | 154-226 | 2 | CONNECTOR (040-06S90) | |
| 6. | 157-778 | - | HYDRAULIC VALVE | |
| 7. | 117-391 | 1 | ABRASION SLEEVE (1.25" x 66") | |
| 8. | 117-670 | 1 | ABRASION SLEEVE (1" x 10") | |

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0138525

PIPE LIFT HYDRAULICS

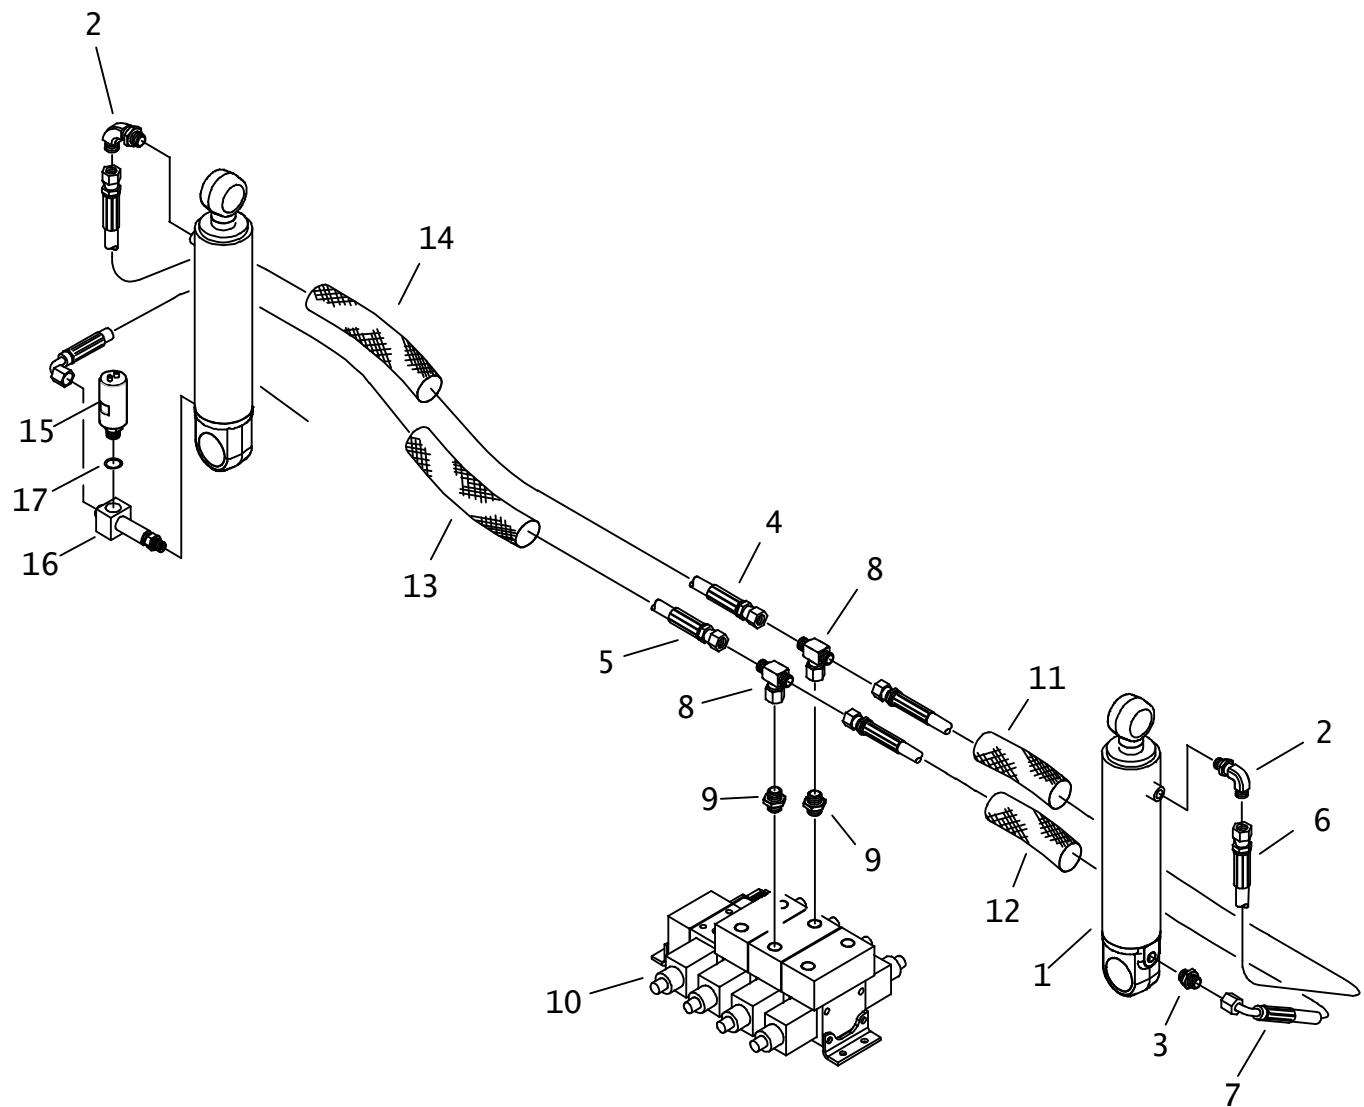

PIPE LIFT HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------|
| 1. | 151-044 | - | CYL (2.0 X 1.0 X 6.0) | |
| 2. | 154-252 | 2 | CONNECTOR (04S-04090) | |
| 3. | 154-278 | 1 | CONNECTOR (04S-040) | |
| 4. | 157-918 | 1 | HOSE (040FX-88"-3000) | |
| 5. | 157-911 | 1 | HOSE (040FX90S-85"-3000) | |
| 6. | 154-695 | 1 | HOSE (040FX-38"-3000) | |
| 7. | 515-011 | 1 | HOSE (040FX90-32"-3000) | |
| 8. | 154-379 | 2 | UN BR TEE (040FX-040-040) | |
| 9. | 154-220 | 2 | CONNECTOR (040-06S) | |
| 10. | 157-778 | - | HYDRAULIC VALVE | |
| 11. | 117-717 | 1 | ABRASION SLEEVE (1.00" X 40") | |
| 12. | 117-412 | 1 | ABRASION SLEEVE (1.00" X 34") | |
| 13. | 117-398 | 1 | ABRASION SLEEVE (1.00" X 86") | |
| 14. | 117-209 | 1 | ABRASION SLEEVE (1.00" X 90") | |
| 15. | 215-1204 | 1 | PRESSURE SWITCH (1850PSI) | |
| 16. | 157-933 | 1 | RUN TEE (04S-040-06SF) | |
| 17. | 155-705 | 1 | O-RING (906 D90) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

PIPE BOX SHIFT HYDRAULICS

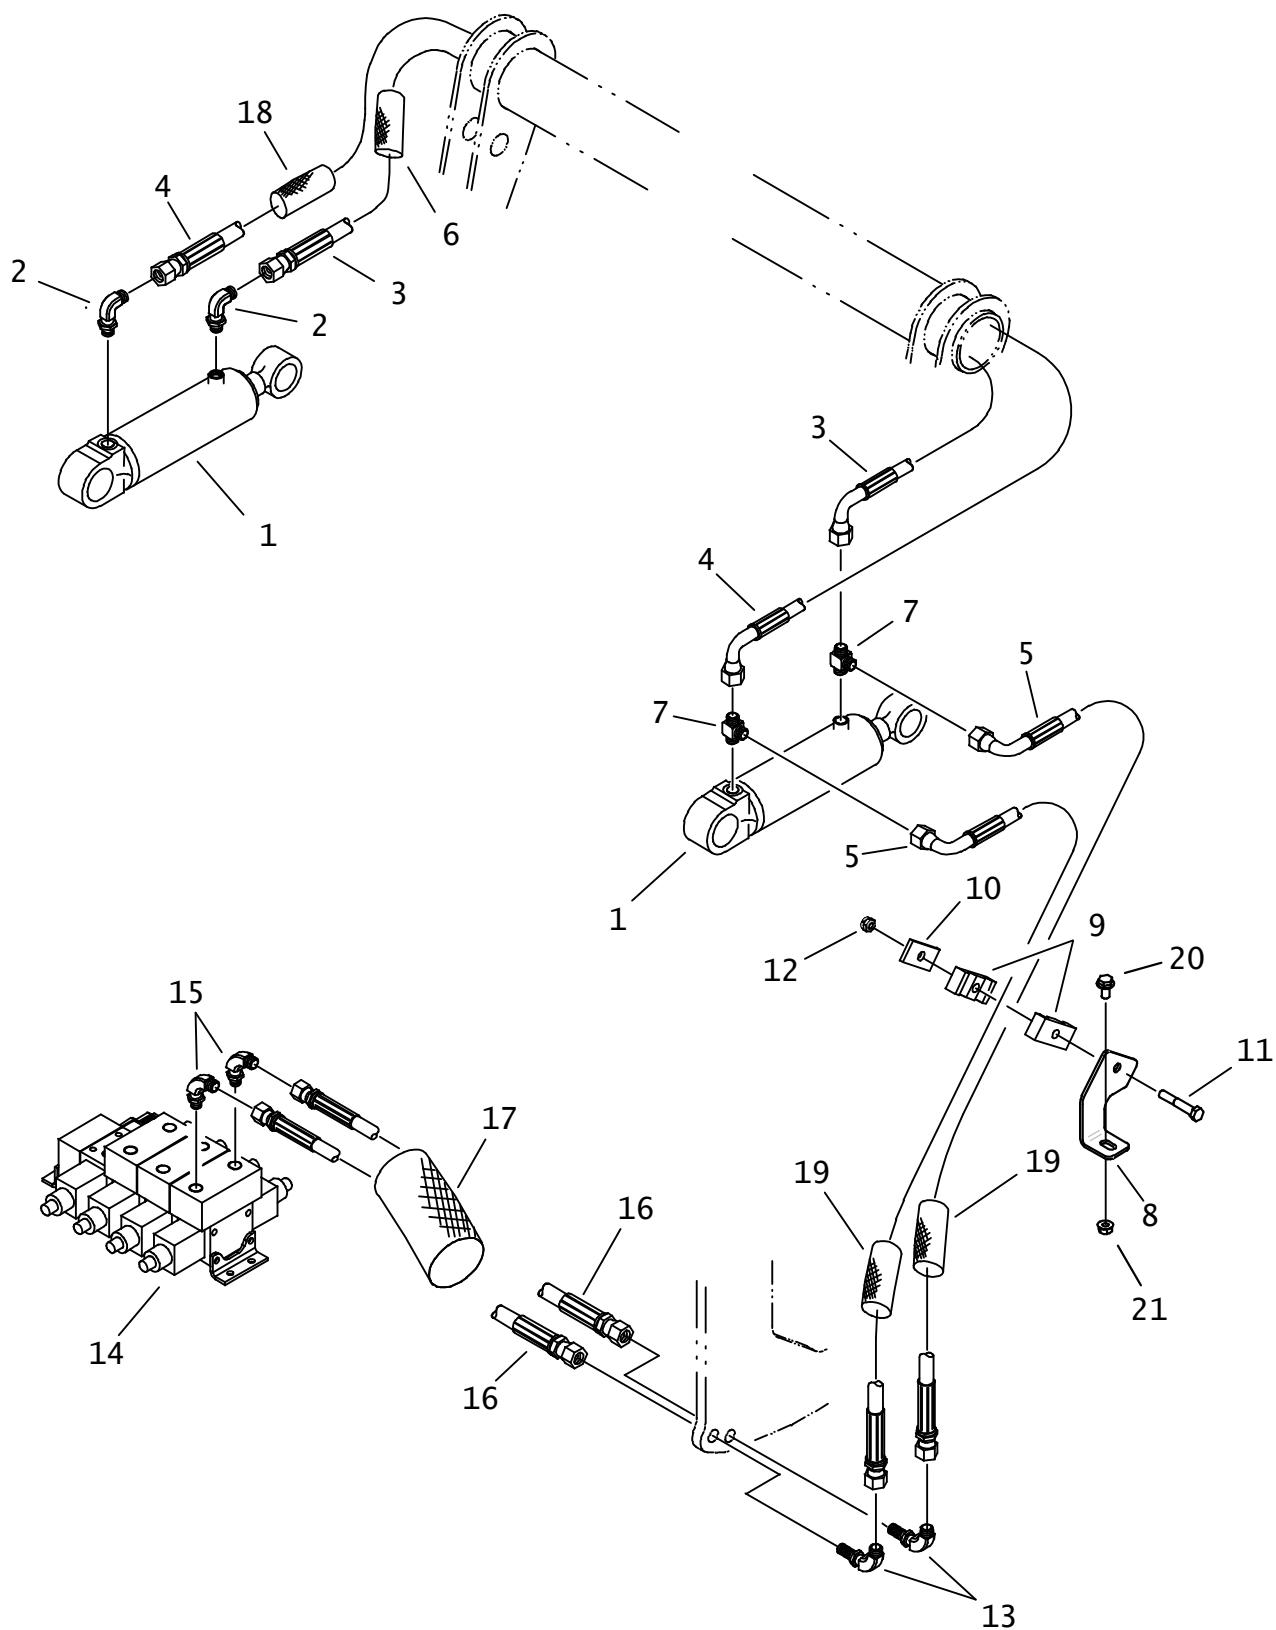


PIPE BOX SHIFT HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|--|
| 1. | 151-038 | 1 | CYL (2.0 X 1.0 X 4.0) | |
| 2. | 154-252 | 2 | CONNECTOR (04S-04090) | |
| 3. | 515-471 | 1 | HOSE (040FX90-147"-3000) | |
| 4. | 153-283 | 1 | HOSE (040FX90S-157"-3000) | |
| 5. | 515-447 | 2 | HOSE (040FX90S-48"-3000) | |
| 6. | 117-997 | 1 | ABRASION SLEEVE (1.00" X 147") | |
| 7. | 154-316 | 2 | RUN TEE (04S-040-040) | |
| 8. | 327-670 | 1 | CLAMP BRACKET | |
| | 319-520 | 1 | - CLAMP BRACKET | NOT SHOWN. BRACKET ON CYLINDER SIDE OF HOSES |
| 9. | 110-270 | 2 | BOLT-ON CLAMP (9/16", HALF) | |
| 10. | 305-256 | 1 | BACKUP SPACER | |
| 11. | 106-329 | 1 | SCREW (M8-1.25 X 50MM) | |
| 12. | 107-096 | 1 | LOCKNUT (M8-1.25, NLK) | |
| 13. | 154-355 | 2 | BK CONNECTOR (040-04090BK) | |
| 14. | 157-778 | 1 | HYDRAULIC VALVE | |
| 15. | 154-226 | 2 | CONNECTOR (040-06S90) | |
| 16. | 515-013 | 2 | HOSE (040FX-42"-3000) | |
| 17. | 117-388 | 1 | ABRASION SLEEVE (1.25" X 42") | |
| 18. | 117-998 | 1 | ABRASION SLEEVE (1.00" X 158") | |
| 19. | 117-416 | 2 | ABRASION SLEEVE (1.00" X 50") | |
| 20. | 106-380 | 1 | FLG LK SCREW (M8-1.25 X 16MM) | |
| 21. | 106-386 | 1 | FLG LOCKNUT (M8-1.25) | |

FOOTNOTES

NOTE:

FRAME TILT HYDRAULICS

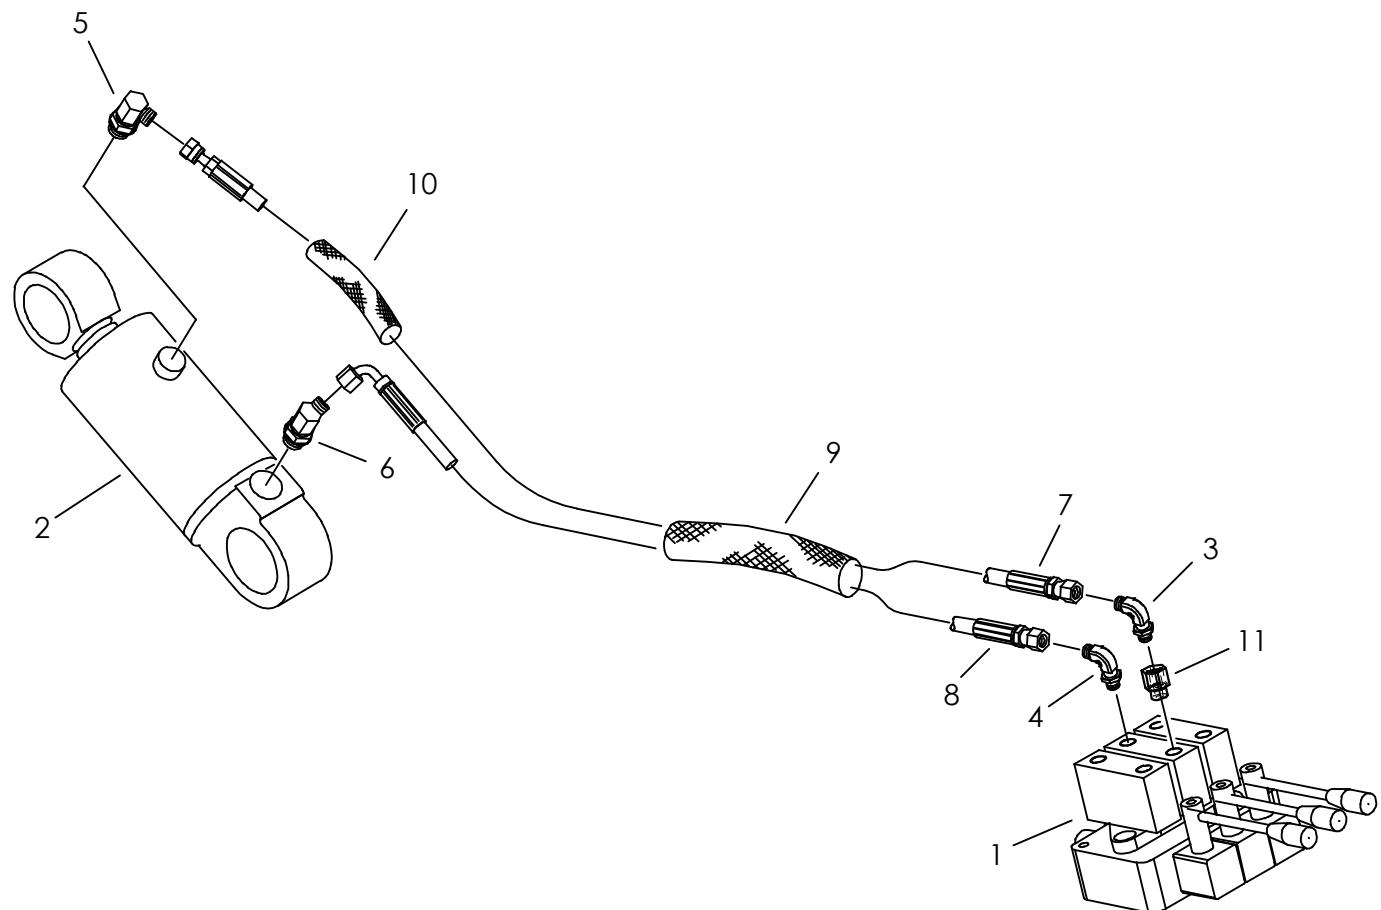

FRAME TILT HYDRAULICS


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------|
| 1. | 157-240 | - | SET UP VALVE | |
| 2. | 151-089 | - | CYL (3.5 X 1.75 X 3.0) | |
| 3. | 154-364 | 1 | CONNECTOR (040-06S90, ORF) | |
| 4. | 154-226 | 1 | CONNECTOR (040-06S90) | |
| 5. | 154-276 | 1 | CONNECTOR (040-08S90) | |
| 6. | 154-223 | 1 | CONNECTOR (040-08S45) | |
| 7. | 154-725 | 1 | HOSE (040FX-90"-3000) | |
| 8. | 515-075 | 1 | HOSE (040FX90S-82"-3000) | |
| 9. | 117-556 | 1 | ABRASION SLEEVE (1.25" X 80") | |
| 10. | 117-982 | 1 | ABRASION SLEEVE (1" X 6") | |
| 11. | 159-931 | 1 | CONNECTOR (06S-06SF) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

STABILIZER HYDRAULICS

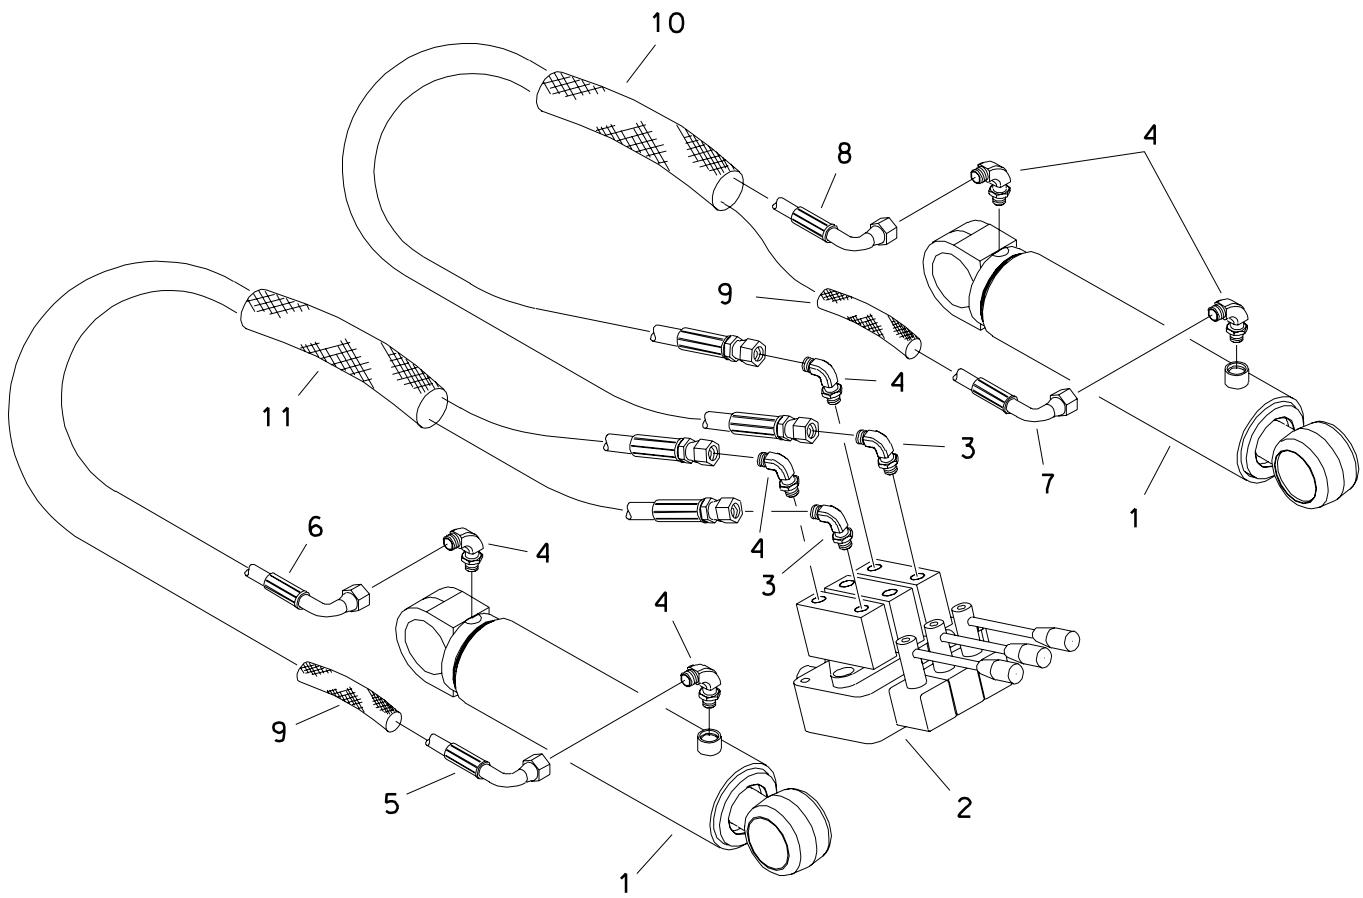


STABILIZER HYDRAULICS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|-------------------------------|---------|
| 1. | 151-029 | - | CYL (3.0 X 1.50 X 10.0) | |
| 2. | 157-240 | - | SET UP VALVE | |
| 3. | 154-364 | 2 | CONNECTOR (040-06S90,DRF) | |
| 4. | 154-226 | 6 | CONNECTOR (040-06S90) | |
| 5. | 515-190 | 1 | HOSE (040FX90S-88"-3000) | |
| 6. | 515-074 | 1 | HOSE (040FX90S-77"-3000) | |
| 7. | 515-447 | 1 | HOSE (040FX90S-48"-3000) | |
| 8. | 154-728 | 1 | HOSE (040FX90S-36"-3000) | |
| 9. | 117-608 | 2 | ABRASION SLEEVE (1.00" X 15") | |
| 10. | 117-323 | 1 | ABRASION SLEEVE (1.25" X 37") | |
| 11. | 117-244 | 1 | ABRASION SLEEVE (1.25"X 78") | |

FOOTNOTES

HYDRAULIC VALVE PARTS

157-778

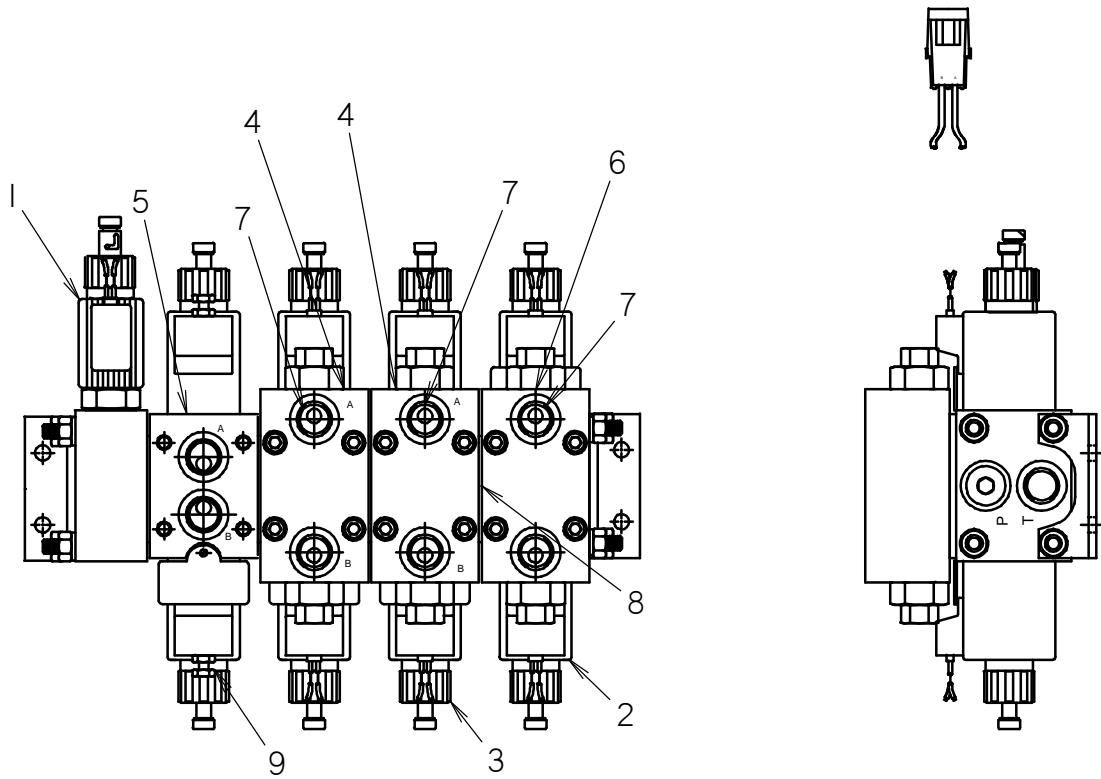

HYDRAULIC VALVE PARTS

157-778



| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|------------------------------|---------------------------|
| 1. | 500-1034 | 1 | UNLOADING INLET SUB ASSEMBLY | 500-2112 - Cartridge only |
| 2. | 217-948 | 8 | COIL, 12VDC | |
| 3. | 149-616 | 8 | CAP NUT | |
| 4. | 500-1036 | 2 | BV06 CONTROL VALVE SECTION | |
| 5. | 500-1037 | 1 | BV06 CONTROL VALVE SECTION | |
| 6. | 500-1038 | 1 | BV06 CONTROL VALVE SECTION | |
| 7. | 502-102 | 3 | 100 PSI DUAL PO CHECK | |
| 8. | 190-997 | 3 | STACKING KIT | |
| 9. | 500-2004 | 4 | BV06 CORE TUBE | |

NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC CYLINDERS (2.0" X 1.0")

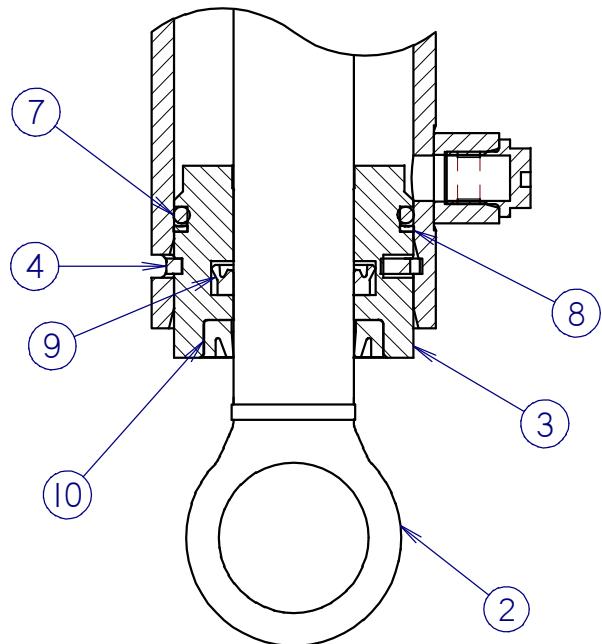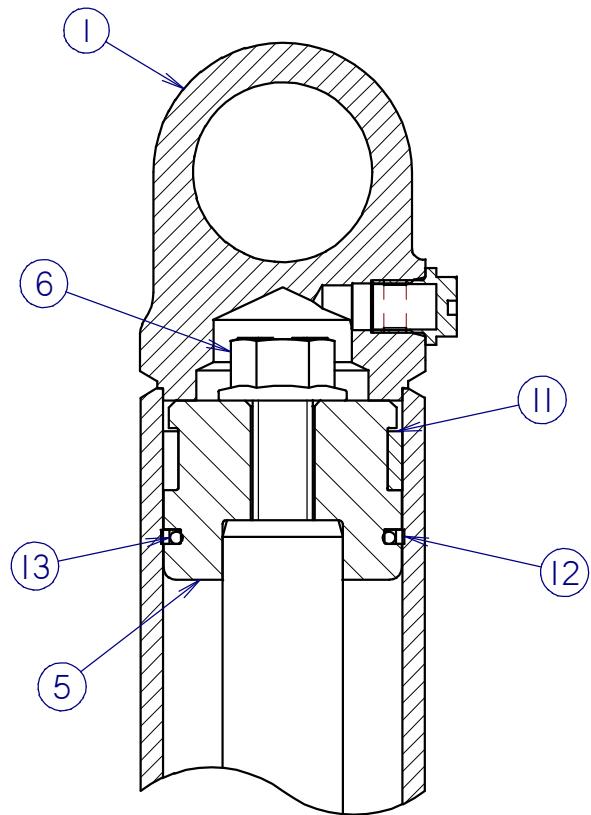

HYDRAULIC CYLINDERS (2.0" X 1.0")

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------------------|
| | I5I-094 | - | CYL (2.0 X 1.0 X 2.0) | SEE FOOTNOTES I & 2 |
| I | I52-029 | 1 | CYLINDER BARREL (2.0 X 2.0) | |
| 2 | I53-007 | 1 | CYLINDER ROD (1.00 X 2.0) | |
| | I49-667 | - | CYL (2.0 X 1.0 X 2.5) | SEE FOOTNOTES I & 2 |
| I | I49-761 | 1 | CYLINDER BARREL (2.0 X 2.5) | |
| 2 | I49-728 | 1 | CYLINDER ROD (1.00 X 2.5) | |
| | I5I-027 | - | CYL (2.0 X 1.0 X 3.0) | SEE FOOTNOTES I & 2 |
| I | I50-282 | 1 | CYLINDER BARREL (2.0 X 3.0) | |
| 2 | I50-414 | 1 | CYLINDER ROD (1.00 X 3.0) | |
| | I5I-038 | - | CYL (2.0 X 1.0 X 4.0) | SEE FOOTNOTES I & 2 |
| I | I50-290 | 1 | CYLINDER BARREL (2.0 X 4.0) | |
| 2 | I50-421 | 1 | CYLINDER ROD (1.00 X 4.0) | |
| | I5I-039 | - | CYL (2.0 X 1.0 X 5.0) | SEE FOOTNOTES I & 2 |
| I | I50-291 | 1 | CYLINDER BARREL (2.0 X 5.0) | |
| 2 | I50-422 | 1 | CYLINDER ROD (1.00 X 5.0) | |
| | I5I-044 | - | CYL (2.0 X 1.0 X 6.0) | SEE FOOTNOTES I & 2 |
| I | I50-294 | 1 | CYLINDER BARREL (2.0 X 6.0) | |
| 2 | I50-424 | 1 | CYLINDER ROD (1.00 X 6.0) | |
| | I5I-031 | - | CYL (2.0 X 1.0 X 8.0) | SEE FOOTNOTES I & 2 |
| I | I50-285 | 1 | CYLINDER BARREL (2.0 X 8.0) | |
| 2 | I50-417 | 1 | CYLINDER ROD (1.00 X 8.0) | |
| | I5I-076 | - | CYL (2.0 X 1.0 X 10.0) | SEE FOOTNOTES I & 2 |
| I | I52-017 | 1 | CYLINDER BARREL (2.0 X 10.0) | |
| 2 | I50-444 | 1 | CYLINDER ROD (1.00 X 10.0) | |
| | I49-668 | - | CYL (2.0 X 1.0 X 12.0) | SEE FOOTNOTES I & 2 |
| I | I50-286 | 1 | CYLINDER BARREL (2.0 X 12.0) | |
| 2 | I49-729 | 1 | CYLINDER ROD (1.00 X 12.0) | |
| | | | | . |
| 3 | I50-772 | 1 | CYLINDER HEAD (2.0 X 1.00) | |
| 4 | I50-778 | 1 | LOCK RING (2.0) | |
| 5 | I50-775 | 1 | CYLINDER PISTON (2.0 X 1.00) | |
| 6 | I06-096 | 1 | FLG BOLT (1/2-NC X 1-3/4",GD8) | SEE FOOTNOTE 3 |
| 7 | I57-022 | 1 | O-RING (224 D90) | |
| 8 | I55-732 | 1 | BACKUP RING (224 D90) | |
| 9 | I57-540 | 1 | U-SEAL (1.000") | |
| 10 | I57-537 | 1 | WIPER SEAL (1.000") | |
| 11 | I25-774 | 1 | WEAR RING | |
| 12 | I57-534 | 1 | BACKUP RING (131 D90) | |
| 13 | I57-018 | 1 | O-RING (131 D90) | |

NOT SHOWN:


- 259-100 U-SEAL INSTALLER (1" - 1.499")
- 259-235 1.00 ROD WIPER TOOL
- 259-239 WIPER/SEAL INSTALLER (2")
- 259-241 PISTON INSTALLER (2")
- 259-188 CYL HEAD SPANNER - TWO PIN

FOOTNOTES:

1. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #13 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS
2. SEAL REPAIR KIT P/N: I90-165
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 90-100 FT-LBS

NOTE:

HYDRAULIC CYLINDERS (3.0" X 1.5")

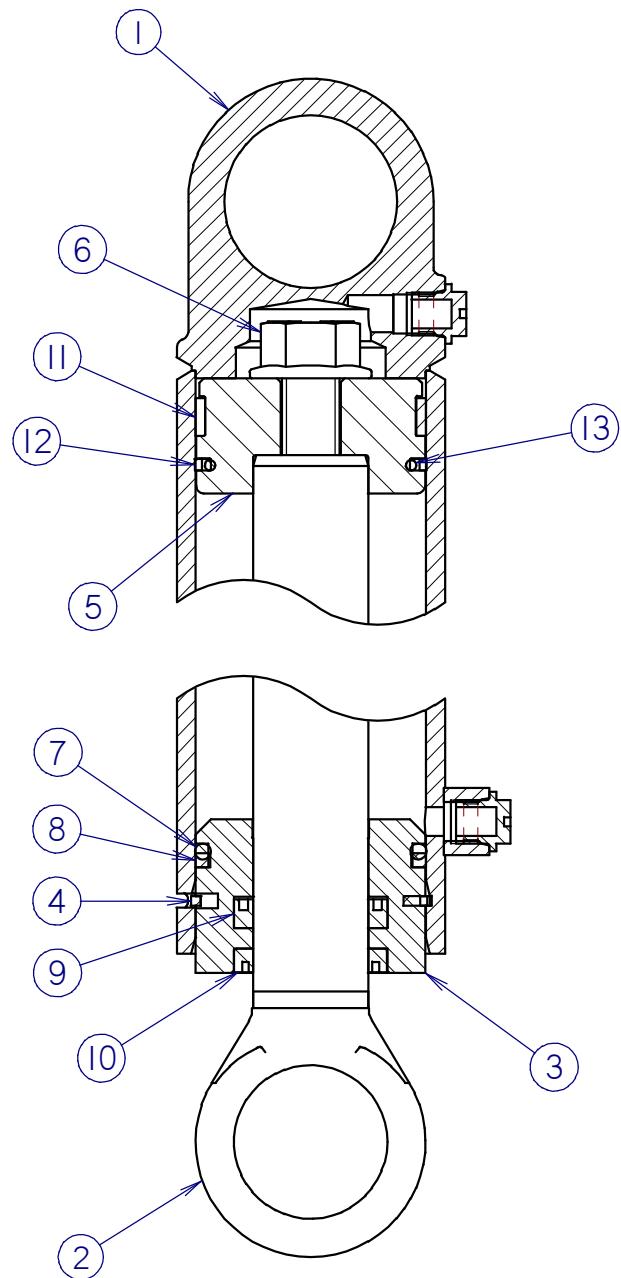

HYDRAULIC CYLINDERS (3.0" X 1.5")

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------|---------------------|
| | I49-682 | - | CYL (3.0 X 1.5 X 2.5) | SEE FOOTNOTES I & 2 |
| I | I49-804 | 1 | CYLINDER BARREL (3.0 X 2.5) | |
| 2 | I49-731 | 1 | CYLINDER ROD (1.50 X 2.5) | |
| | I51-049 | - | CYL (3.0 X 1.5 X 3.0) | SEE FOOTNOTES I & 2 |
| I | I50-299 | 1 | CYLINDER BARREL (3.0 X 3.0) | |
| 2 | I50-431 | 1 | CYLINDER ROD (1.50 X 3.0) | |
| | I51-054 | - | CYL (3.0 X 1.5 X 4.0) | SEE FOOTNOTES I & 2 |
| I | I52-004 | 1 | CYLINDER BARREL (3.0 X 4.0) | |
| 2 | I50-434 | 1 | CYLINDER ROD (1.50 X 4.0) | |
| | I51-I79 | - | CYL (3.0 X 1.5 X 5.0) | SEE FOOTNOTES I & 2 |
| I | I52-068 | 1 | CYLINDER BARREL (3.0 X 5.0) | |
| 2 | I53-038 | 1 | CYLINDER ROD (1.50 X 5.0) | |
| | I51-086 | - | CYL (3.0 X 1.5 X 6.0) | SEE FOOTNOTES I & 2 |
| I | I52-008 | 1 | CYLINDER BARREL (3.0 X 6.0) | |
| 2 | I53-003 | 1 | CYLINDER ROD (1.50 X 6.0) | |
| | I51-I36 | - | CYL (3.0 X 1.5 X 8.0) | SEE FOOTNOTES I & 2 |
| I | I52-014 | 1 | CYLINDER BARREL (3.0 X 8.0) | |
| 2 | I53-027 | 1 | CYLINDER ROD (1.50 X 8.0) | |
| | I51-029 | - | CYL (3.0 X 1.5 X 10.0) | SEE FOOTNOTES I & 2 |
| I | I50-284 | 1 | CYLINDER BARREL (3.0 X 10.0) | |
| 2 | I50-416 | 1 | CYLINDER ROD (1.50 X 10.0) | |
| | I51-043 | - | CYL (3.0 X 1.5 X 12.0) | SEE FOOTNOTES I & 2 |
| I | I50-293 | 1 | CYLINDER BARREL (3.0 X 12.0) | |
| 2 | I50-426 | 1 | CYLINDER ROD (1.50 X 12.0) | |
| | I51-034 | - | CYL (3.0 X 1.5 X 16.0) | SEE FOOTNOTES I & 2 |
| I | I50-288 | 1 | CYLINDER BARREL (3.0 X 16.0) | |
| 2 | I50-419 | 1 | CYLINDER ROD (1.50 X 16.0) | |
| | I51-I17 | - | CYL (3.0 X 1.5 X 20.0) | SEE FOOTNOTES I & 2 |
| I | I52-054 | 1 | CYLINDER BARREL (3.0 X 20.0) | |
| 2 | I50-669 | 1 | CYLINDER ROD (1.50 X 20.0) | |
| | | | . | |
| 3 | I50-774 | 1 | CYLINDER HEAD (3.0 X 1.50) | |
| 4 | I50-911 | 1 | LOCK RING (3.0) | |
| 5 | I50-777 | 1 | CYLINDER PISTON (3.0 X 1.50) | |
| 6 | I06-098 | 1 | FLG BOLT (3/4-NC X 2", GD8) | SEE FOOTNOTE 3 |
| 7 | I55-734 | 1 | O-RING (334 D90) | |
| 8 | I55-733 | 1 | BACKUP RING (334 D90) | |
| 9 | I57-542 | 1 | U-SEAL (1.500") | |
| 10 | I57-539 | 1 | WIPER SEAL (1.500") | |
| 11 | I25-776 | 1 | WEAR RING | |
| 12 | I57-536 | 1 | BACKUP RING (230 D90) | |
| 13 | I57-020 | 1 | O-RING (230 D90) | |

NOT SHOWN:



259-040 U-SEAL INSTALLER (1.5" - UP)
 259-237 ROD WIPER INSTALLER (1.5")
 259-065 PISTON SEAL INSTALLER (3")
 259-066 PISTON INSTALLER (3")
 259-188 CYL HEAD SPANNER - TWO PIN

FOOTNOTES:

- I. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #13 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS.
2. SEAL REPAIR KIT P/N: I90-167
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 290-325 FT-LBS

NOTE:

HYDRAULIC CYLINDERS (3.5" X 1.75")

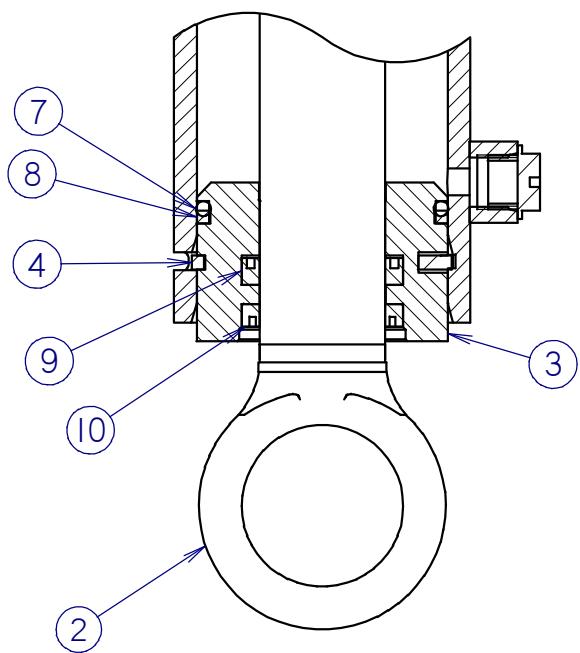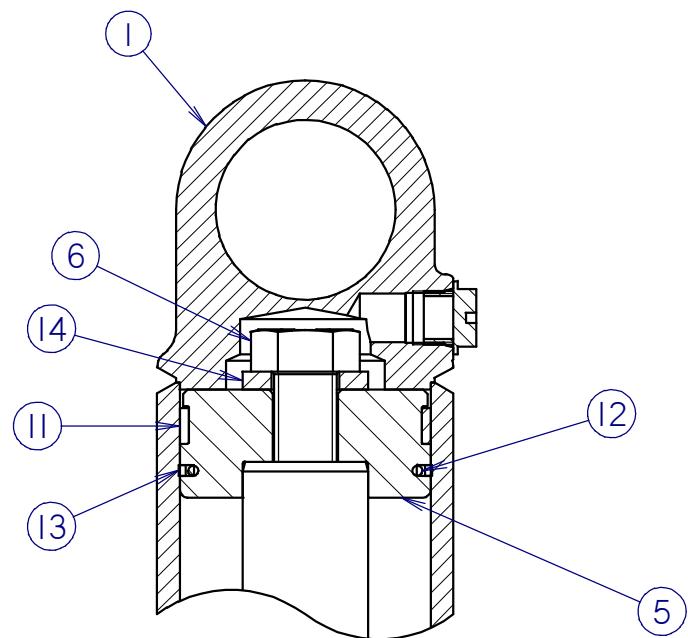

HYDRAULIC CYLINDERS (3.5" X 1.75")

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------|---------------------|
| | 151-089 | - | CYL (3.5 X 1.75 X 3.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 152-025 | 1 | CYLINDER BARREL (3.5 X 3.0) | |
| 2 | 150-446 | 1 | CYLINDER ROD (1.75 X 3.0) | |
| | 151-112 | - | CYL (3.5 X 1.75 X 4.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 152-037 | 1 | CYLINDER BARREL (3.5 X 4.0) | |
| 2 | 153-015 | 1 | CYLINDER ROD (1.75 X 4.0) | |
| | 151-050 | - | CYL (3.5 X 1.75 X 5.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 150-300 | 1 | CYLINDER BARREL (3.5 X 5.0) | |
| 2 | 150-432 | 1 | CYLINDER ROD (1.75 X 5.0) | |
| | 151-046 | - | CYL (3.5 X 1.75 X 6.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 150-296 | 1 | CYLINDER BARREL (3.5 X 6.0) | |
| 2 | 150-428 | 1 | CYLINDER ROD (1.75 X 6.0) | |
| | 151-056 | - | CYL (3.5 X 1.75 X 8.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 152-006 | 1 | CYLINDER BARREL (3.5 X 8.0) | |
| 2 | 150-436 | 1 | CYLINDER ROD (1.75 X 8.0) | |
| | 149-689 | - | CYL (3.5 X 1.75 X 10.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 152-040 | 1 | CYLINDER BARREL (3.5 X 10.0) | |
| 2 | 149-732 | 1 | CYLINDER ROD (1.75 X 10.0) | |
| | 151-069 | - | CYL (3.5 X 1.75 X 12.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 150-297 | 1 | CYLINDER BARREL (3.5 X 12.0) | |
| 2 | 150-425 | 1 | CYLINDER ROD (1.75 X 12.0) | |
| | 149-799 | - | CYL (3.5 X 1.75 X 16.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 149-805 | 1 | CYLINDER BARREL (3.5 X 16.0) | |
| 2 | 153-004 | 1 | CYLINDER ROD (1.75 X 16.0) | |
| | 149-690 | - | CYL (3.5 X 1.75 X 20.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 149-765 | 1 | CYLINDER BARREL (3.5 X 20.0) | |
| 2 | 153-020 | 1 | CYLINDER ROD (1.75 X 20.0) | |
| | 149-691 | - | CYL (3.5 X 1.75 X 24.0) | SEE FOOTNOTES 1 & 2 |
| 1 | 149-766 | 1 | CYLINDER BARREL (3.5 X 24.0) | |
| 2 | 149-733 | 1 | CYLINDER ROD (1.75 X 24.0) | |
| | | | . | |
| 3 | 150-761 | 1 | CYLINDER HEAD (3.5 x 1.75) | |
| 4 | 149-302 | 1 | LOCK RING (3.5) | |
| 5 | 149-301 | 1 | CYLINDER PISTON (3.5 X 1.75) | |
| 6 | 106-122 | 1 | BOLT (7/8-NC X 2-1/4", GD8) | SEE FOOTNOTE 3 |
| 7 | 157-030 | 1 | O-RING (338 D90) | |
| 8 | 157-032 | 1 | BACKUP RING (338 D90) | |
| 9 | 157-550 | 1 | U-SEAL (1.750") | |
| 10 | 157-549 | 1 | WIPER SEAL (1.750") | |
| 11 | 125-784 | 1 | WEAR RING | |
| 12 | 157-031 | 1 | O-RING (234 D90) | |
| 13 | 157-554 | 1 | BACKUP RING (234 D90) | |
| 14 | 105-363 | 1 | WASHER (7/8") | |

NOT SHOWN:


- 259-040 U-SEAL INSTALLER (1.5" - UP)
- 259-238 WIPER INSTALLER (1.75")
- 259-244 PISTON SEAL INSTALLER (3.5")
- 259-245 PISTON INSTALLER (3.5")
- 259-188 CYL HEAD SPANNER - TWO PIN

FOOTNOTES:

- 1. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #14 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS.
- 2. SEAL REPAIR KIT P/N: 190-174
- 3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 410-460 FT-LBS

NOTE:

HYDRAULIC CYLINDER 3.5" x 1.75" x 2.0"

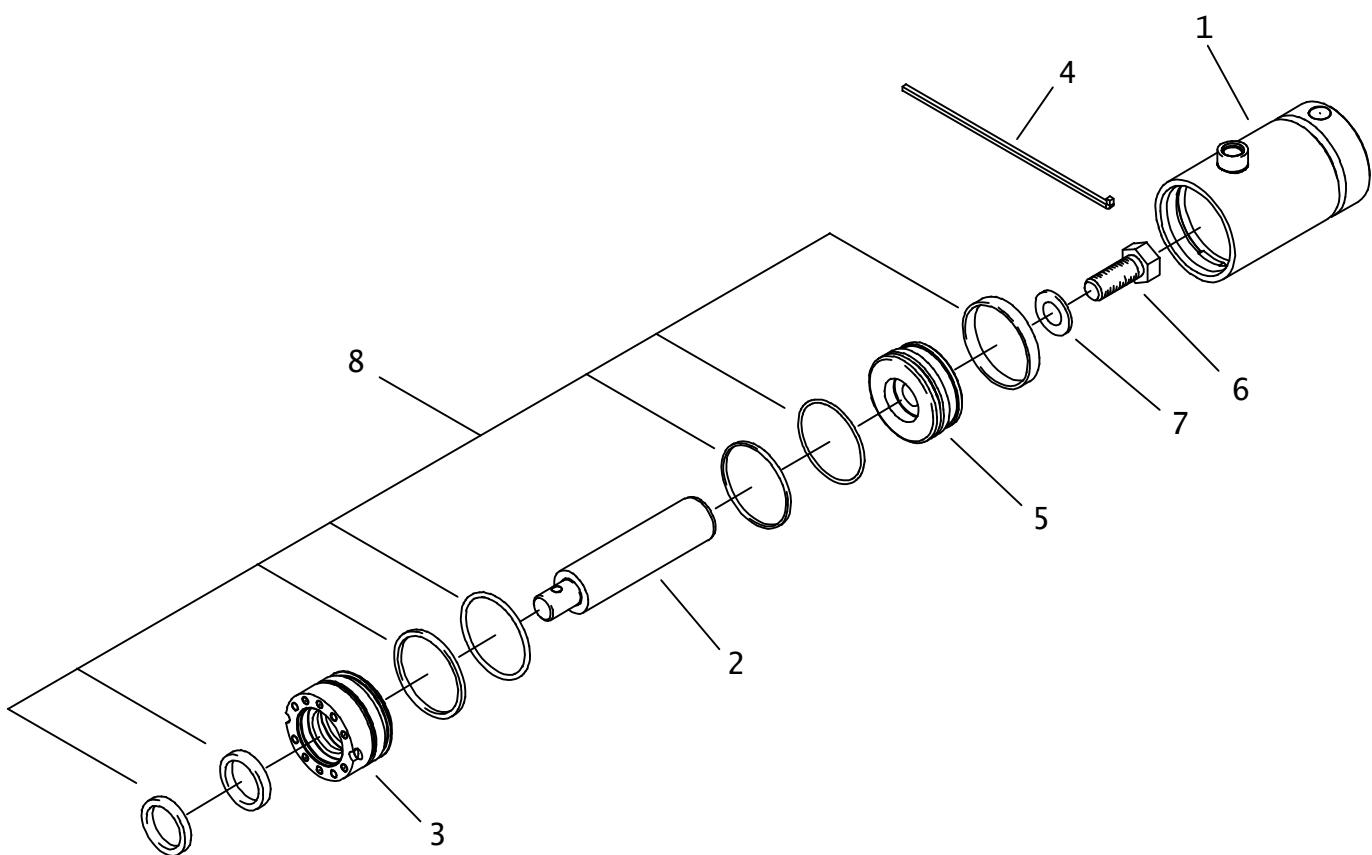

HYDRAULIC CYLINDER

3.5" X 1.75" X 2.0"

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------|--------------------------|
| | 151-213 | - | CYL (3.5 X 1.75 X 2.0) | INCL REF NO.'S 1 THRU 15 |
| 1. | 153-849 | 1 | BARREL | |
| 2. | 153-845 | 1 | CYL ROD | |
| 3. | 153-846 | 1 | CYLINDER GLAND | |
| 4. | 149-302 | 1 | LOCK RING (3.5") | |
| 5. | 149-301 | 1 | CYL PISTON (3.5" X 1.75") | |
| 6. | 106-122 | 1 | BOLT (7/8-NC X 2-1/4", GD8) | SEE FOOTNOTE 1 |
| 7. | 105-363 | 1 | WASHER (7/8") | |
| 8. | 190-174 | 1 | SEAL REPAIR KIT | |

NOT SHOWN:

FOOTNOTES:

- I. LUBRICATE WITH WD-40 OR EQUAL TORQUE TO 410-460 FT LBS (566-624 NM.)


NOTE:

NOTES:

ANCHOR SYSTEMS

ANCHOR SYSTEM

BEGINS WITH S/N: CMWJ1220E60000136

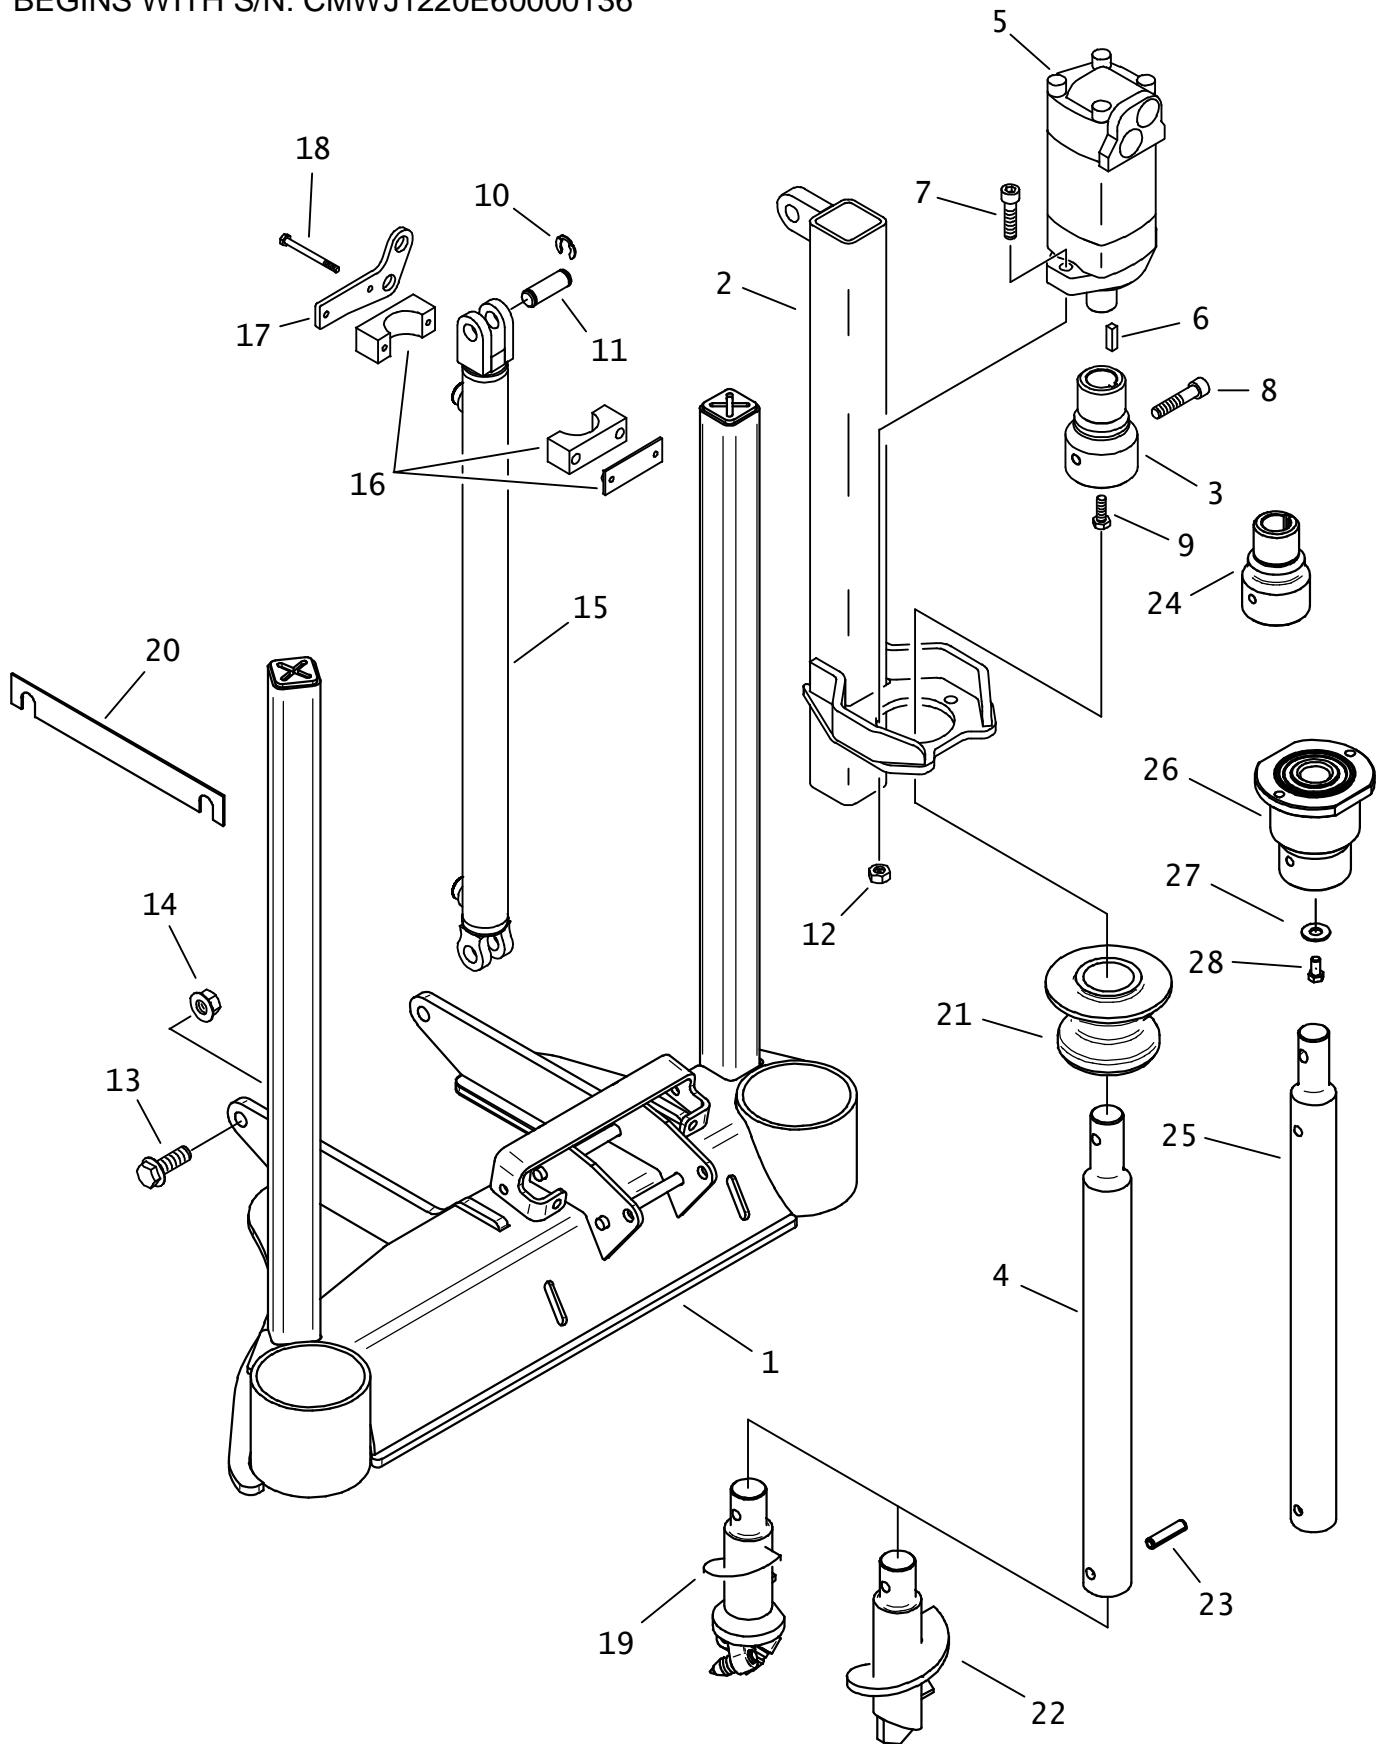

ANCHOR SYSTEM

BEGINS WITH S/N: CMWJ1220E60000136


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|-------------------------------------|
| 1. | 300-2951 | 1 | ANCHOR FRAME | |
| 2. | 316-767 | 2 | UPPER TUBE | |
| 3. | [316-801] | 2 | ANCHOR DRIVER | SUPERSEDED WITH: 327-499; ITEM #24 |
| 4. | 166-605 | 2 | SHAFT (OLD STYLE) | SUPERSEDED WITH: 166-617; ITEM #25 |
| 5. | 158-700 | 2 | HYD MOTOR | INCL. REF #6 |
| | 500-658 | - | SEAL REPAIR KIT | |
| | 166-278 | - | SHAFT ASSEMBLY | |
| 6. | 165-909 | - | KEY (5/16" X 1-1/8") | |
| 7. | 106-707 | 4 | SCREW (M12-1.75 X 45MM, SOC) | |
| 8. | 106-771 | 2 | SCREW (M12-1.75 X 60MM, SOC) | |
| 9. | 105-156 | 2 | BOLT (3/8-NC X 1-1/2") | NOT USED WITH 350-2174 |
| 10. | 115-503 | 8 | KLIP RING (.750") | |
| 11. | 179-736 | 4 | PIN | |
| 12. | 106-685 | 4 | LOCKNUT(M12-1.75 ,PRV TRQ,10.9) | NOT USED WITH 350-2174 |
| 13. | 107-336 | 6 | FLG SCREW (M16-2.00X45MM,10.9) | |
| 14. | 106-355 | 6 | FLG NUT (M16-2.00, 10.9) | |
| 15. | 151-214 | 2 | HYD CYL | |
| | 500-1542 | - | SEAL KIT | |
| 16. | 318-631 | 2 | BOLT-ON CLAMP (1.88") | |
| 17. | 318-658 | 2 | BULKHEAD BRACKET | |
| 18. | 107-196 | 4 | BOLT (1/4-NC X 3") | |
| 19. | 327-457 | - | ROCK ANCHOR | |
| | 131-259 | - | INSERT BIT - CARBIDE TIPPED | |
| 20. | 118-386 | AR | SHIM | |
| 21. | 158-238 | 2 | CENTERING CAP | |
| 22. | 327-460 | - | AUGER (4") | |
| 23. | 107-331 | 2 | ROLL PIN (M12 X 50MM) | |
| 24. | [327-499] | 2 | ANCHOR DRIVER (NEW STYLE) | SUPERSEDED WITH: 350-2174; ITEM #26 |
| 25. | 166-617 | 2 | ANCHOR SHAFT | |
| 26. | 350-2174 | 2 | ANCHOR DRIVE COUPLER | |
| 27. | 105-794 | 2 | WASHER (M12) | USED WITH 350-2174 |
| 28. | 105-825 | 2 | FLG LK BOLT (3/8-NC X 3/4") | USED WITH 350-2174 |

NOT SHOWN:

FOOTNOTES:

NOTE:

ANCHOR VALVE/LUBRICATOR MOUNT

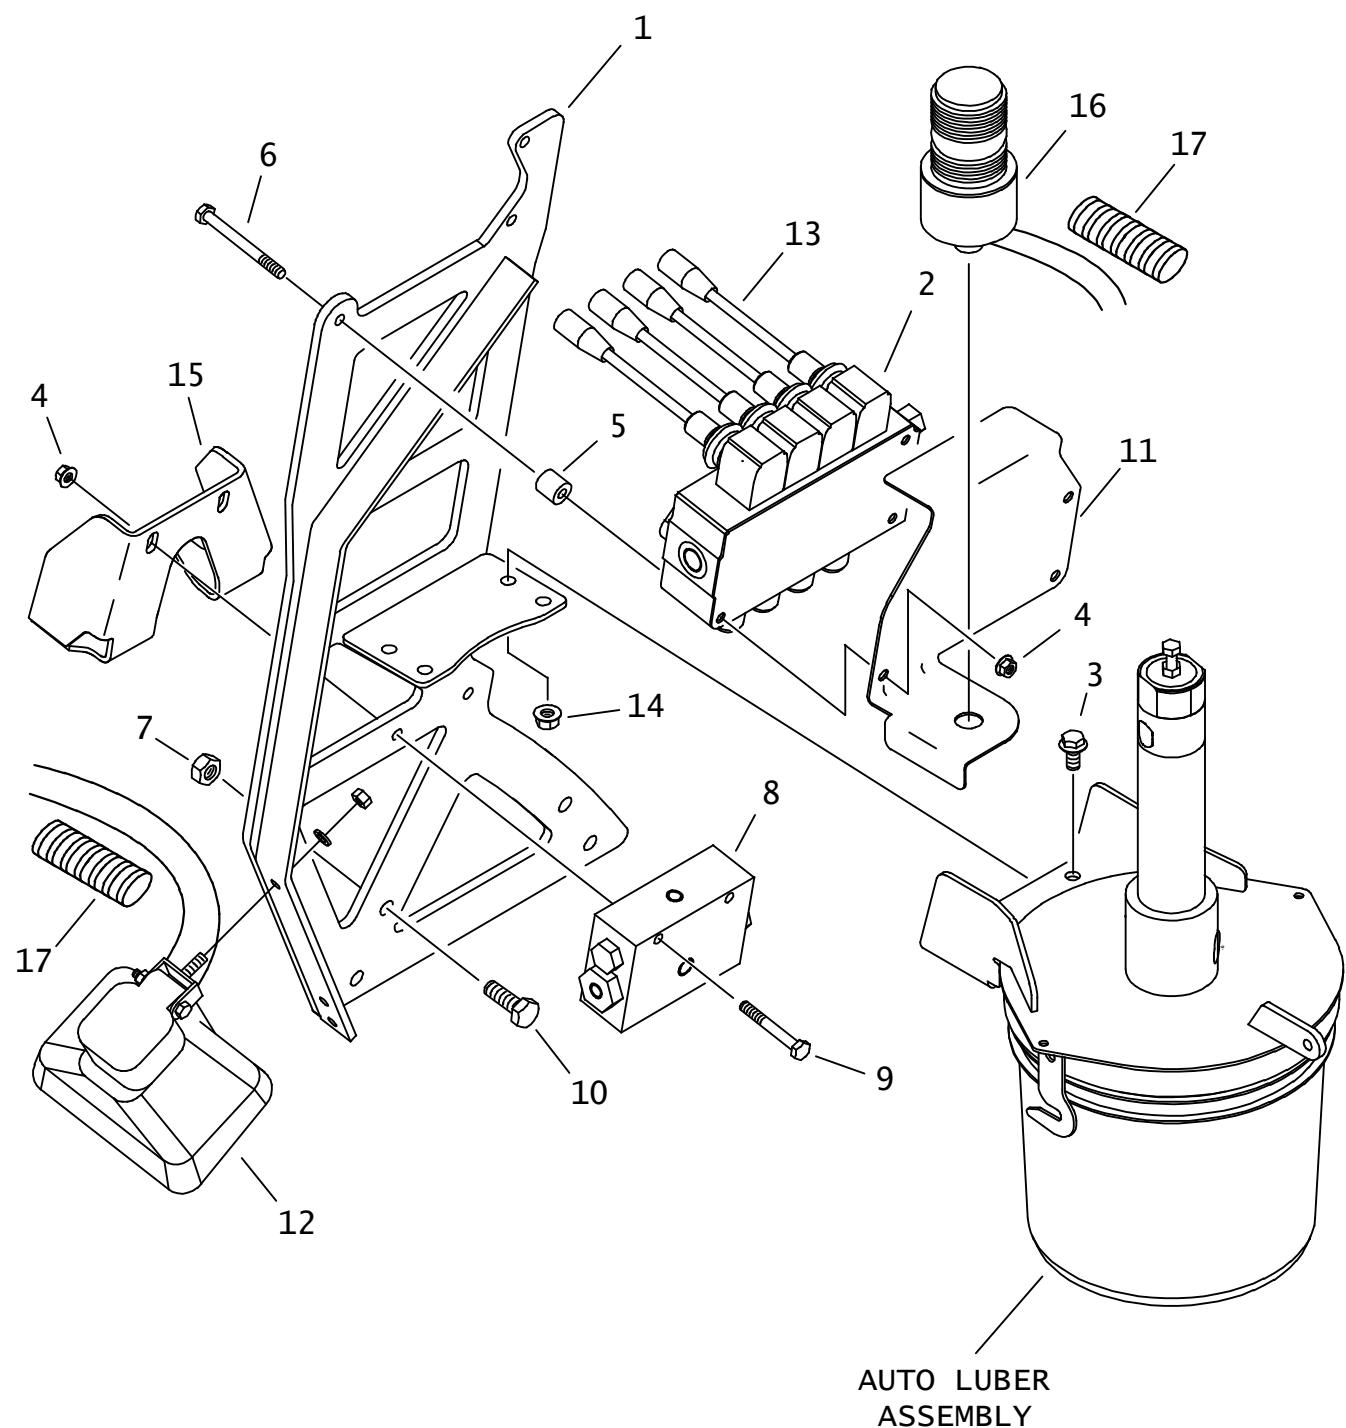

ANCHOR VALVE/LUBRICATOR MOUNT


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|--------------------------------|---------------------------------|
| 1. | 316-861 | 1 | MOUNT | |
| 2. | 157-241 | 1 | ANCHOR VALVE | |
| 3. | 106-382 | 4 | FLG LK SCREW (M10-1.50 X 20MM) | |
| 4. | 106-386 | 5 | FLG LOCKNUT (M8-1.25) | |
| 5. | 179-501 | 3 | SPACER | |
| 6. | 107-078 | 3 | SCREW (M8-1.25 X 90MM) | |
| 7. | 106-709 | 4 | FLG LK NUT (M12-1.75) | |
| 8. | 310-591 | 1 | VALVE | |
| 9. | 106-330 | 2 | SCREW (M8-1.25 X 70MM) | |
| 10. | 106-333 | 4 | SCREW (M12-1.75 X 40MM, 8.8) | |
| 11. | 319-330 | 1 | LIGHT MOUNT | |
| 12. | 217-057 | 1 | WORKING LIGHT - CLEAR | |
| | 157-645 | 2 | WEATHER-PAC SEAL (2.80MM) | |
| | 214-103 | 1 | (2-WAY) MALE CONNECTOR | |
| | 214-104 | 2 | PACKARD MALE TERMINAL | |
| 13. | 500-908 | 4 | LEVER (M8-1.25, BLACK) | |
| 14. | 106-387 | 4 | FLG LOCKNUT (M10-1.50) | |
| 15. | 323-513 | 1 | BRACE | FOR USE ON JT1220 |
| | 325-281 | 1 | BRACE | FOR USE ON JT2020 |
| 16. | 217-297 | 1 | STROBE LIGHT GREEN MED PROFILE | |
| | 214-103 | 1 | (2-WAY) MALE CONNECTOR | |
| | 214-104 | 2 | PACKARD MALE TERMINAL | |
| | 157-645 | 2 | WEATHER-PAC SEAL (2.80MM) | |
| 17. | 216-026 AR | | FLEX-GUARD (.25") | SOLD PER IN. & USE 2 @ 15" EACH |

NOT SHOWN:

FOOTNOTES:

NOTE:

GREASE PUMP

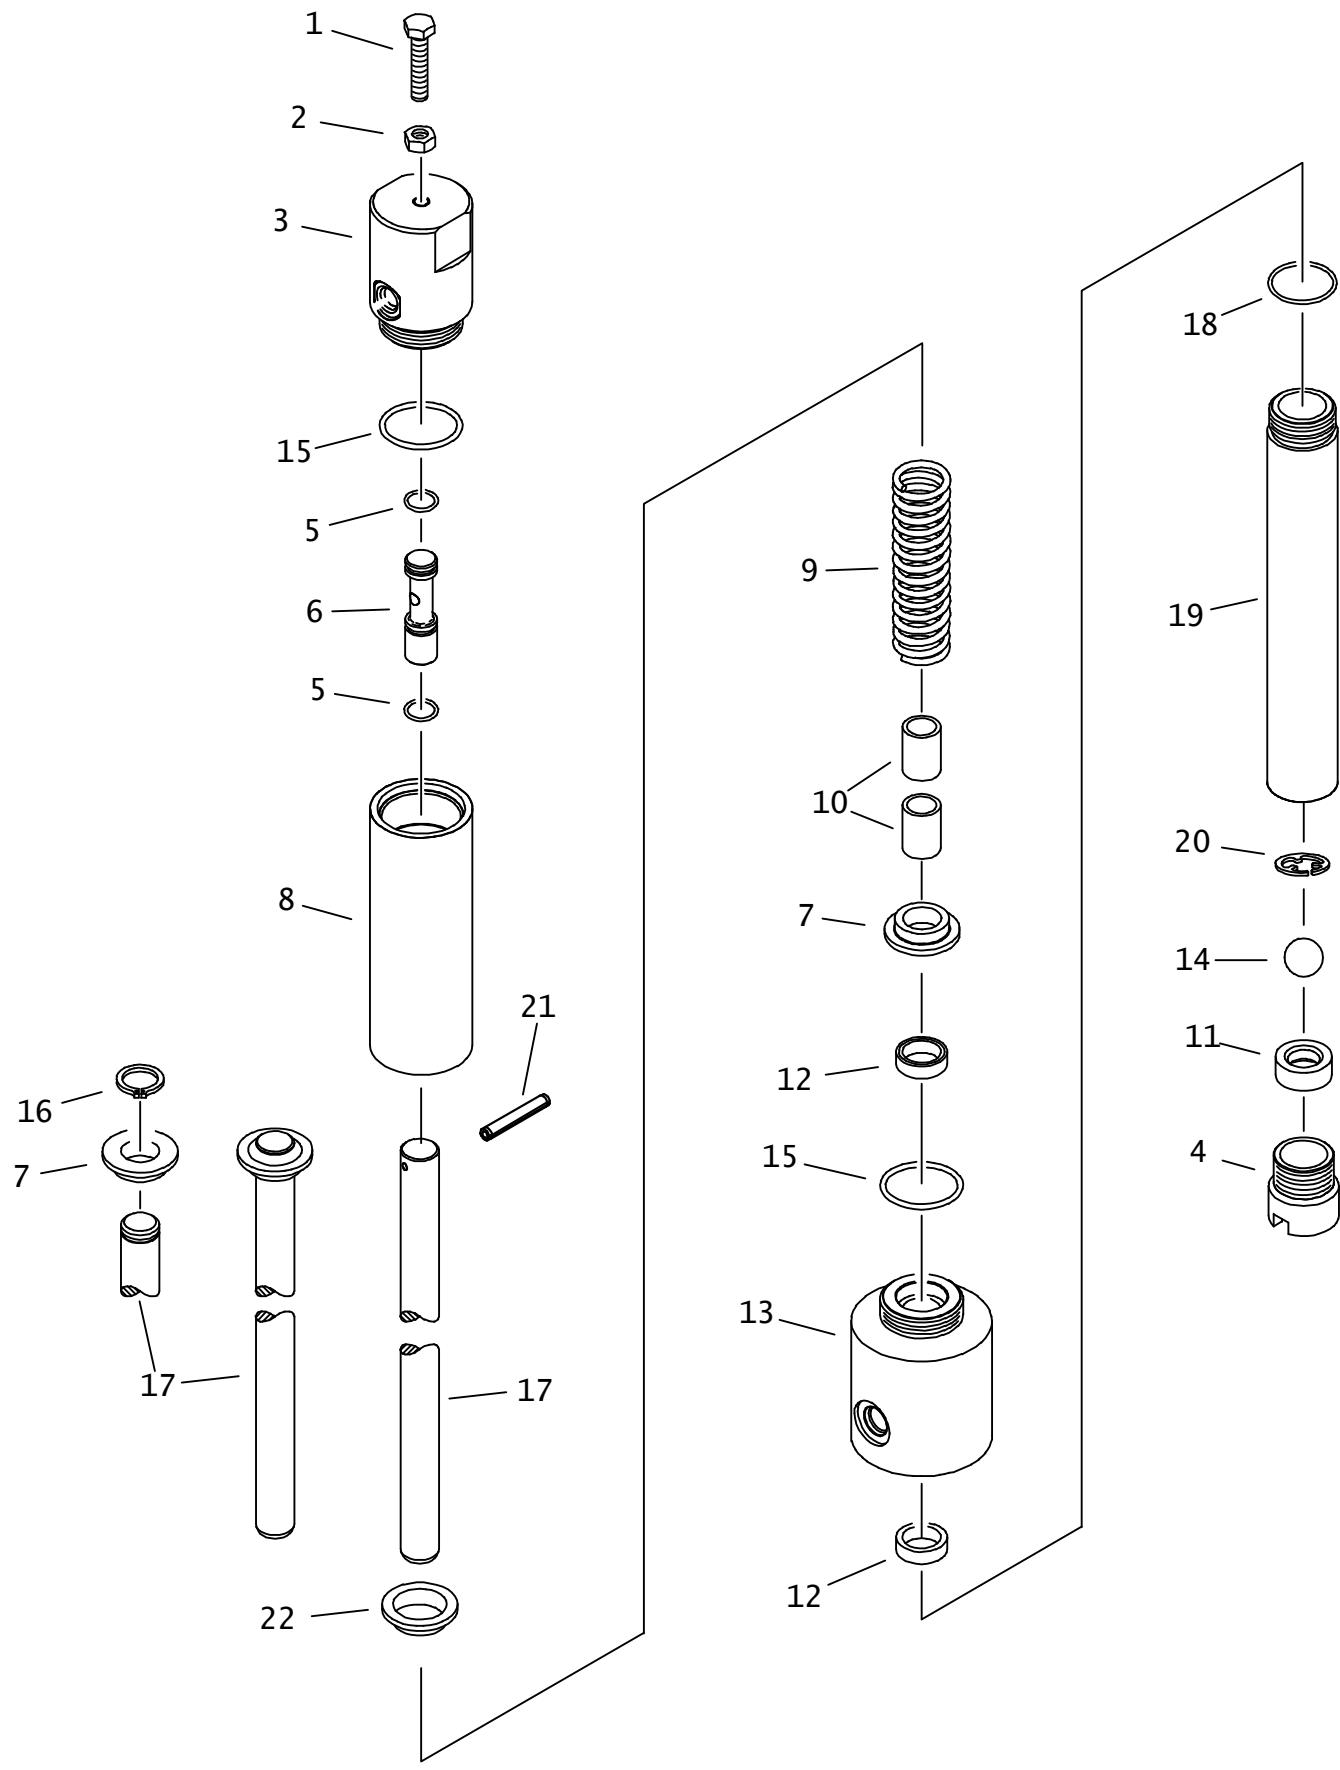

GREASE PUMP

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|--------------------|
| | 350-398 | | GREASE PUMP PARTS | INCL REF NO'S 1-20 |
| 1. | 107-492 | 1 | SCREW (M8-1.25 X 35MM, ALL THD) | |
| 2. | 106-078 | 1 | NUT (M8-1.25) | |
| 3. | 350-686 | 1 | CYLINDER CAP | |
| 4. | 350-692 | 1 | INLET TUBE | |
| 5. | 157-049 | 2 | O-RING (113 D70) | |
| 6. | 350-421 | 1 | ADJUSTING SPOOL | |
| 7. | 350-671 | 1 | ROD GUIDE | SEE FOOTNOTE 2 |
| 8. | 350-682 | 1 | BARREL | |
| 9. | 117-228 | 1 | COMPRESSION SPRING | |
| 10. | 125-424 | 2 | BRONZE BUSHING (.750") | |
| 11. | 350-691 | 1 | VALVE SEAT | SEE FOOTNOTE 1 |
| 12. | 117-227 | 2 | SEAL (POLY PAK) | |
| 13. | 350-687 | 1 | PUMP BODY | |
| 14. | 125-125 | 1 | DETENT BALL (.750") | |
| 15. | 155-702 | 2 | O-RING (920 D90) | |
| 16. | 117-226 | - | EXTERNAL SNAP RING (.750") | SEE FOOTNOTE 2 |
| | 115-545 | - | EXTERNAL SNAP RING (.75") | |
| 17. | 350-689 | - | PLUNGER | SEE FOOTNOTE 2 |
| | 308-603 | - | PLUNGER | SEE FOOTNOTE 3 |
| | 166-280 | 1 | PLUNGER | |
| 18. | 155-748 | 1 | O-RING (916 D90) | |
| 19. | 350-693 | 1 | PUMP BARREL | |
| 20. | 301-0196 | 1 | RETAINER CLIP | SEE FOOTNOTE 4 |
| 21. | 105-525 | 1 | ROLL PIN (3/16" X 1/4") | SEE FOOTNOTE 3 |
| 22. | 178-467 | 1 | ROD CAP | SEE FOOTNOTE 3 |


NOT SHOWN:

FOOTNOTES:

1. INSTALL WITH SMALLER BEVEL TOWARD INSIDE OF PUMP
2. 308-603 PLUNGER IS A DIRECT REPLACEMENT OF 350-689 PLUNGER, 117-226 RETAINER RING, AND AN ADDITIONAL 350-671 ROD GUIDE.
3. USE 166-280, 178-467 & 105-525 TO SUPERSEDE 308-603
4. RETAINER CLIP 301-0196 SUPERSEDES CLIP 105-653

NOTE:

LUBRICATOR VALVE

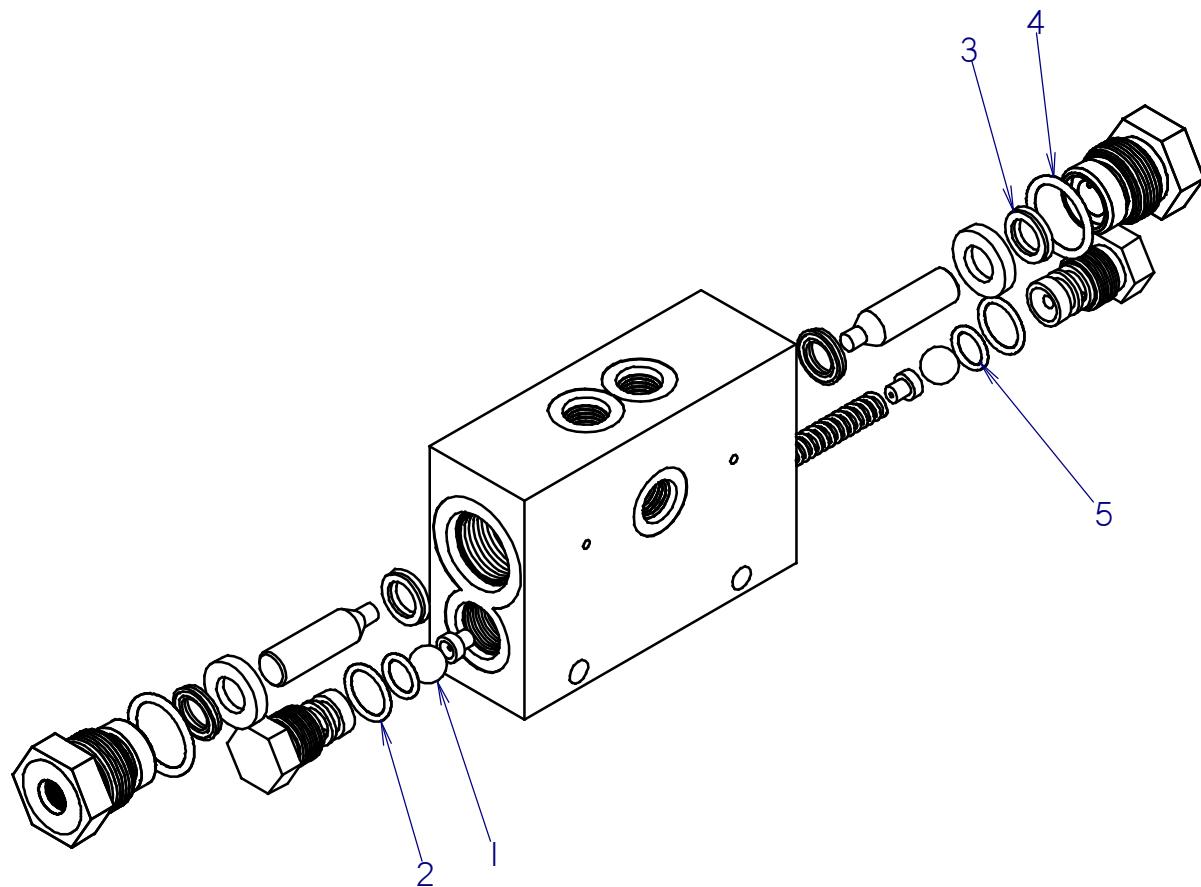

LUBRICATOR VALVE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------|---------|
| | 310-591 | 1 | VALVE | |
| 1 | I25-084 | 2 | DETENT BALL (.500) | |
| 2 | I55-706 | 2 | O-RING (908 D90) | |
| 3 | I16-880 | 2 | SEAL (POLY PAK) | |
| 4 | I55-709 | 2 | O-RING (912 D90) | |
| 5 | I57-098 | 2 | O-RING (III D70) | |


FOOTNOTES

NOTE:

A

809-011

LUBRICATOR NOZZLE AND APPLICATOR

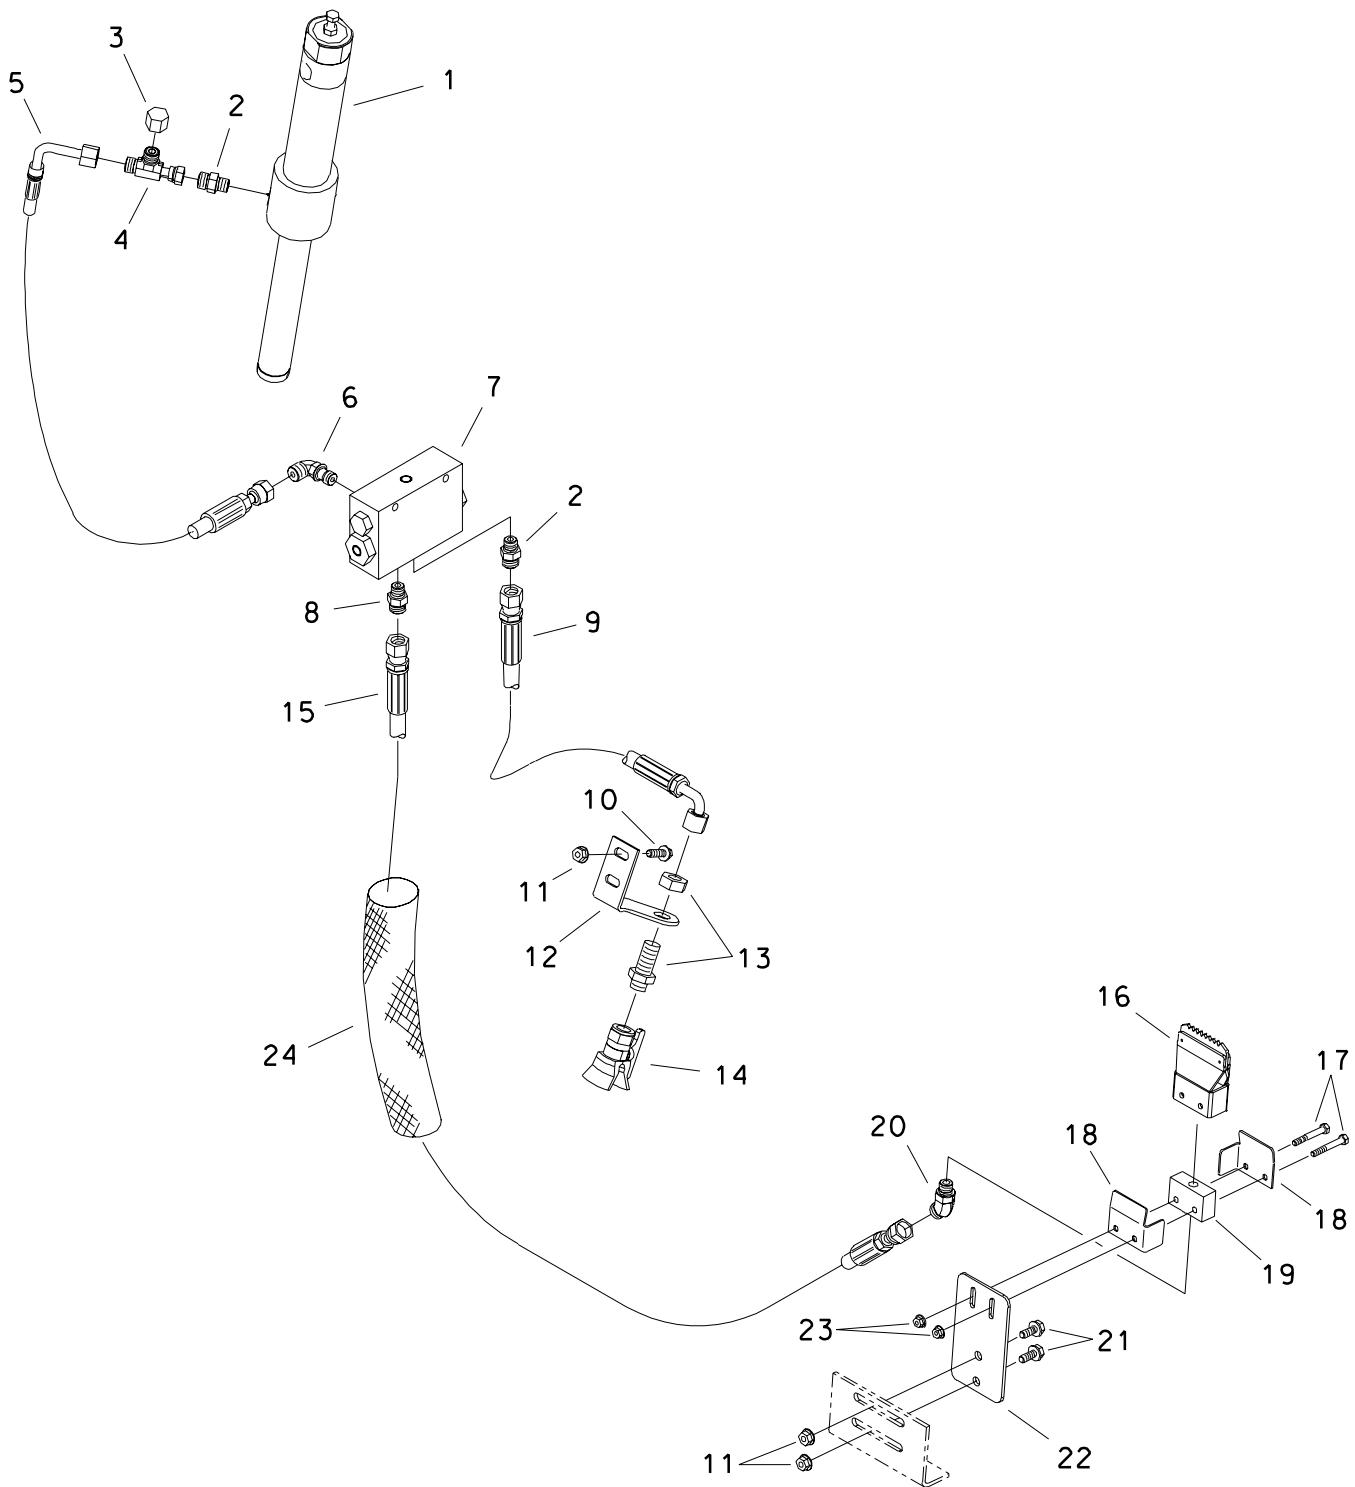


LUBRICATOR NOZZLE AND APPLICATOR

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|--------------------------------|----------------|
| 1. | 350-398 | - | GREASE PUMP PARTS | |
| 2. | 154-221 | 2 | CONNECTOR (06S-060) | |
| 3. | 154-326 | 1 | CAP (06OF) | |
| 4. | 154-344 | 1 | UN RUN TEE (060FX-060-060) | |
| 5. | 157-928 | 1 | HOSE (060FX90L-19"3000) | |
| 6. | 154-342 | 1 | CONNECTOR (06S-06090) | |
| 7. | 310-591 | - | VALVE | |
| 8. | 514-165 | 1 | CONNECTOR (06S-060, ORF .078") | |
| 9. | 515-376 | 1 | HOSE (060FX90-13"-3000) | |
| | 153-585 | - | HOSE (060FX-18"-3000,SPCL) | SEE FOOTNOTE 1 |
| 10. | 106-381 | 2 | FLG LK SCREW (M8-1.25 X 25MM) | |
| 11. | 106-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| 12. | 318-409 | 1 | NOZZLE BRACKET | |
| 13. | 514-163 | 1 | BK CONNECTOR (060-060BK) | |
| 14. | 149-399 | 1 | SPRAY NOZZLE (65) | |
| 15. | 157-929 | 1 | HOSE (060FX-174"3000) | |
| 16. | 306-423 | 1 | WIPER PARTS ASS'Y | |
| | 116-937 | 1 | APPLICATOR | |
| | 107-394 | 4 | WASHER (.375", ALUMINUM) | |
| | 107-395 | 2 | RIVET (.156 X .500) SEMI-TUBUL | |
| 17. | 106-093 | 2 | SCREW (M6-1.00 X 45MM) | |
| 18. | 305-911 | 2 | BRACKET, APPLICATOR | |
| 19. | 305-912 | 1 | BASE, APPLICATOR | |
| 20. | 514-414 | 1 | CONNECTOR (04S-06045) | |
| 21. | 106-162 | 2 | FLG SCREW (M8-1.25 X 20MM) | |
| 22. | 316-954 | 1 | APPLICATOR MOUNT PLATE | |
| 23. | 106-385 | 2 | FLG LOCKNUT (M6-1.00) | |
| 24. | 117-987 | 1 | ABRASION SLEEVE (1.00" X 174") | |

FOOTNOTES

1- HEATED HOSE, REQUIRES 154-228 UNION (060-060FX90)

AUTO-LUBER ASSEMBLY

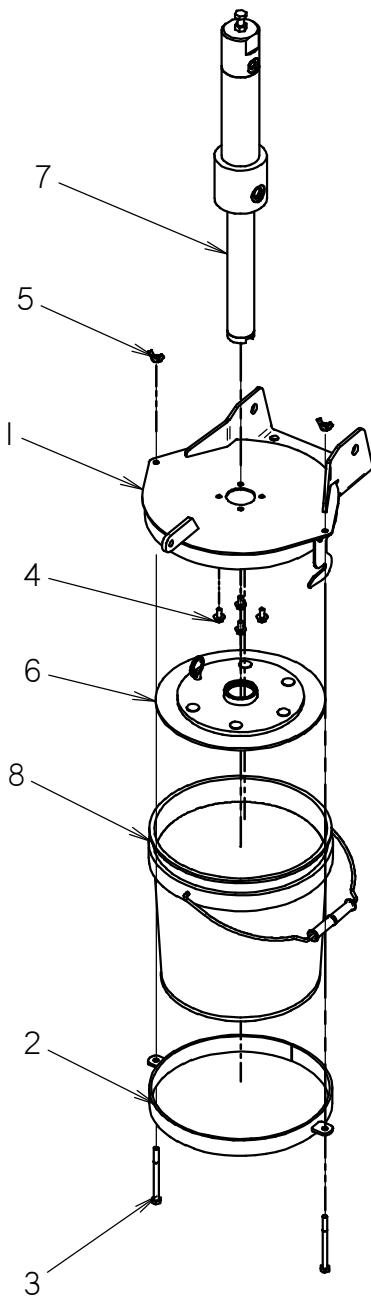

AUTO-LUBER ASSEMBLY

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|---------|
| 1 | 350-400 | 1 | COVER WELDMENT | |
| 2 | 350-399 | 1 | BASE | |
| 3 | I05-297 | 2 | BOLT (1/4-NC X 3-1/4") | |
| 4 | I06-378 | 4 | FLG LK SCREW (M6-1.00 X 12MM) | |
| 5 | I95-339 | 2 | WING NUT (1/4-NC) | |
| 6 | 350-1932 | 1 | TOOL JOINT LUBE FOLLOWER | |
| 7 | 350-398 | 1 | GREASE PUMP PARTS | |
| 8 | 259-858 | 1 | TOOL JNT LUBE, STD SPRY 2 GAL | |
| | 256-031 | - | TOOL JNT LUBE, SUMR SPRY 2 GAL | |

NOT SHOWN:

FOOTNOTES:


NOTE:

NOTES:

FLUID SYSTEMS

ID0135021

DRILLING FLUID PUMP PLUMBING

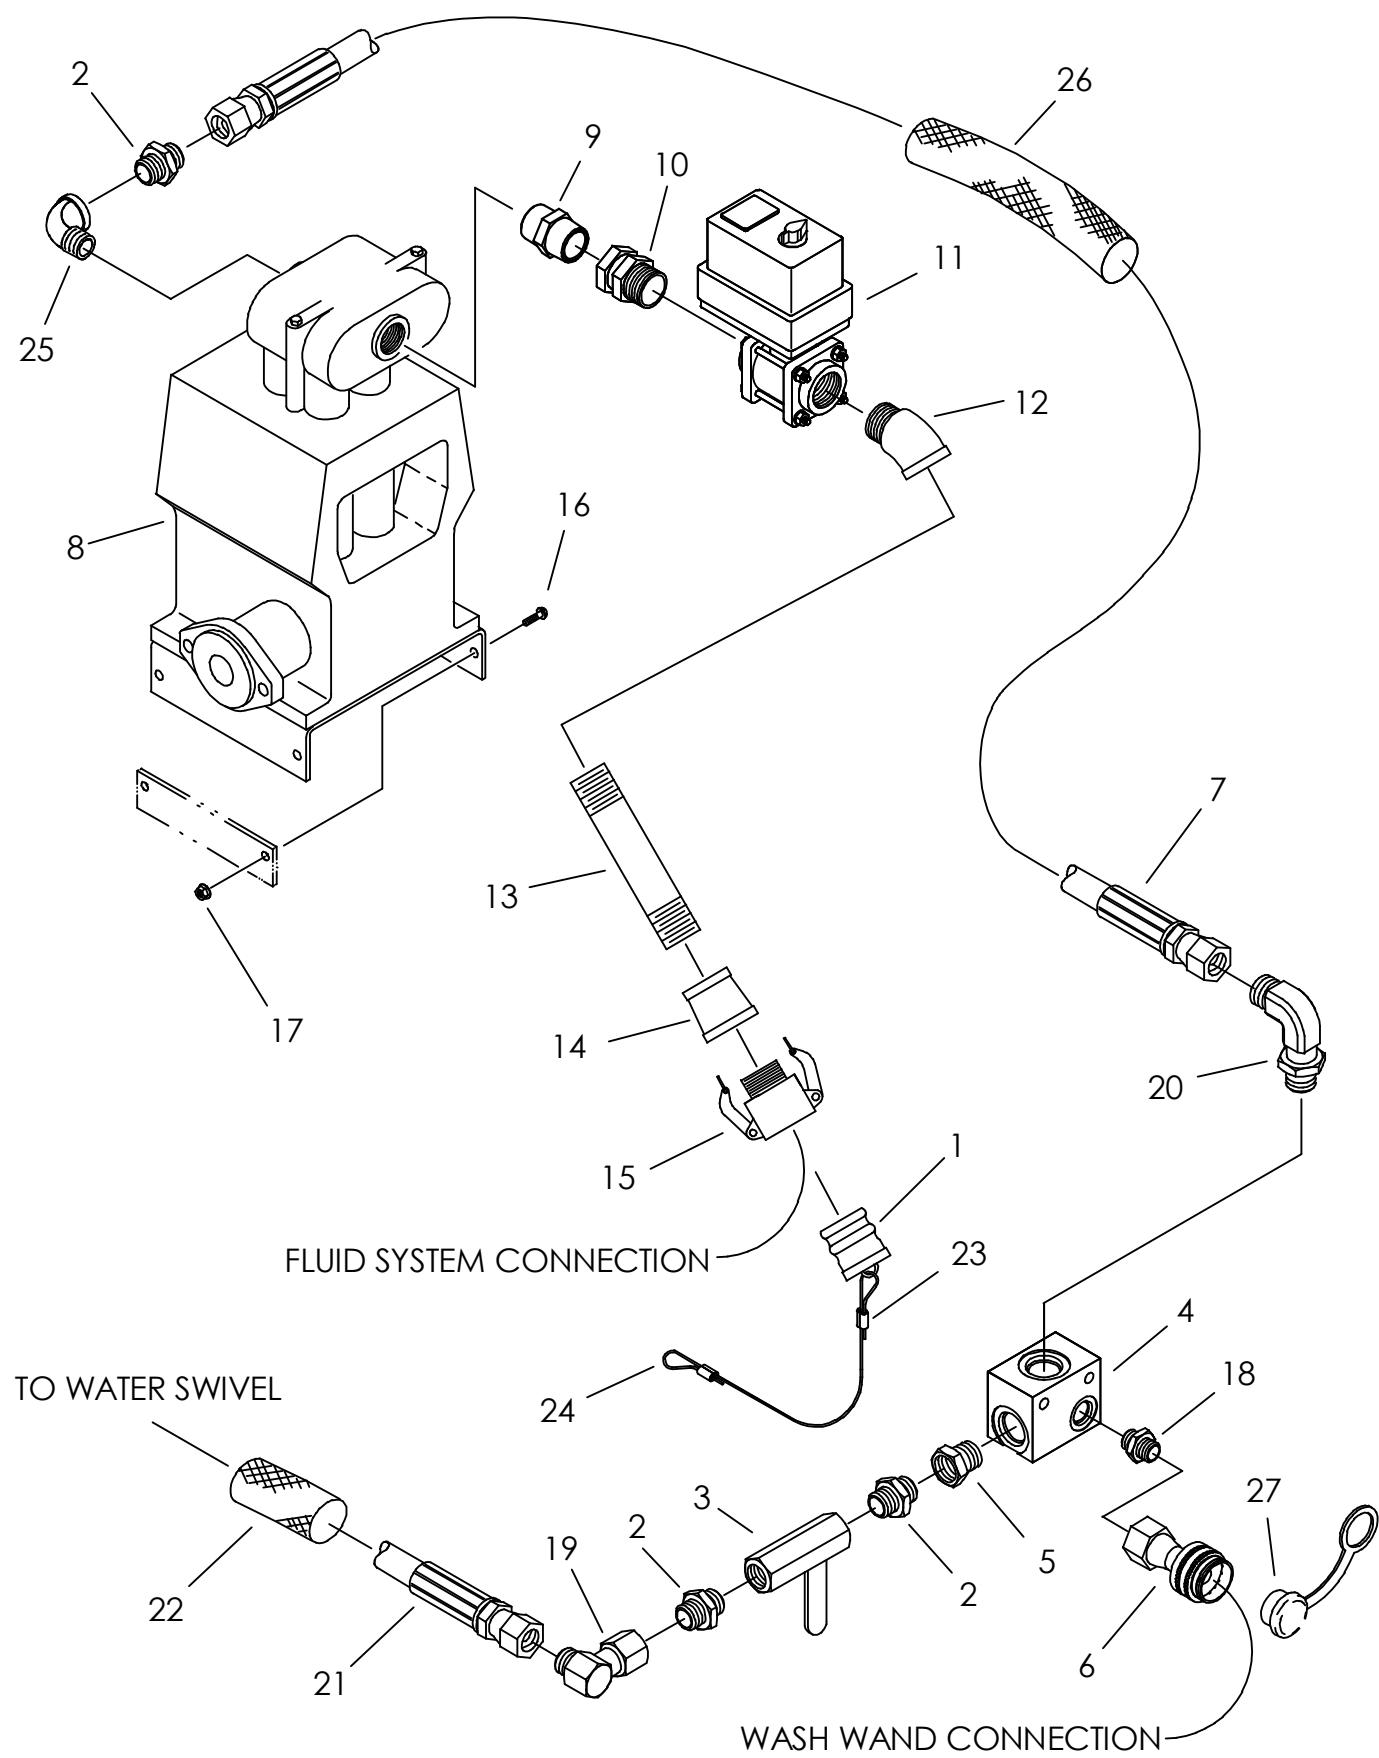

DRILLING FLUID PUMP PLUMBING

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------------|----------------|
| 1. | 110-630 | 1 | DUST PLUG (1-1/2") | |
| 2. | 154-102 | 3 | CONNECTOR (12N-12J) | |
| 3. | 120-073 | 1 | SHUT OFF (12NF-12NF) | |
| 4. | 159-791 | 1 | HYDRAULIC MANIFOLD BLOCK | |
| 5. | 154-144 | 1 | UNION (12S-12JFX) | |
| 6. | 159-088 | 1 | QDC BODY (08-08SF) | |
| | 155-936 | 1 | DUST PLUG (1/2" - 3/4") | |
| 7. | 159-579 | 1 | HOSE (12JFX-30"-1500) | |
| 8. | 157-267 | 1 | DRILLING FLUID PUMP | |
| 9. | 105-1558 | 1 | PIPE NIPPLE -20 NPT | |
| 10. | 155-185 | 1 | UNION (20NF-20N) | |
| 11. | 159-522 | 1 | BALL VALVE, ELECTRIC (1-1/4") | SEE FOOTNOTE I |
| | 190-1068 | - | SEAT/O-RING REPAIR KIT | |
| | 215-224 | 1 | 3 WAY WP MALE CONNECTOR | |
| | 214-104 | 3 | PACKARD MALE TERMINAL | |
| | 157-645 | 3 | WEATHER-PACK SEAL (2.80mm) | |
| | 500-1337 | 1 | 1" FLANGE CLAMP | |
| | 500-1339 | 1 | EV MOTOR | |
| | 500-1340 | 1 | WEEP HOLE FILTER | |
| | 159-575 | 1 | STREET ELBOW (20N-20NF45) | |
| 13. | 150-2200 | 1 | NIPPLE (20N-10") | |
| 14. | 514-124 | 1 | SWAGE COLLAR (24NF-20NF, 4.5") | |
| 15. | 159-500 | 1 | FHC BODY (24-24N) | |
| 16. | 106-383 | 4 | FLG LK SCREW (M10-1.50 X 30mm) | |
| 17. | 106-387 | 4 | FLG LOCKNUT (M10-1.50) | |
| 18. | 154-466 | 1 | CONNECOTR (08S-08S) | |
| 19. | 154-026 | 1 | UNION (12J-12JFX90) | |
| 20. | 154-014 | 1 | CONNECTOR (12J-12S90) | |
| 21. | 154-617 | - | HOSE (12JFX-95"-2250) | |
| 22. | 117-655 | 1 | ABRASION SLEEVE (1.59" X 38") | |
| 23. | 350-275 | 2 | ALUMINUM SLEEVE (1/16") | |
| 24. | 110-981 | - | AR BULK CABLE (1/16", SOLD PER FT) | USE 12" |
| 25. | 115-120 | 1 | STR ELB (12N-12NF90-2000PSI) | |
| 26. | 115-754 | 1 | ABRASION SLEEVE (1.59" X 30") | |
| 27. | 155-936 | 1 | DUST PLUG (1/2" - 3/4") | |

NOT SHOWN:


FOOTNOTES:

- I. ORDER P/N 500-1338 FOR BALL VALVE REPLACEMENT.

NOTE:

REFER TO O-RING CHART 800-301 FOR REPLACEMENT O-RINGS.

DRILLING FLUID PUMP

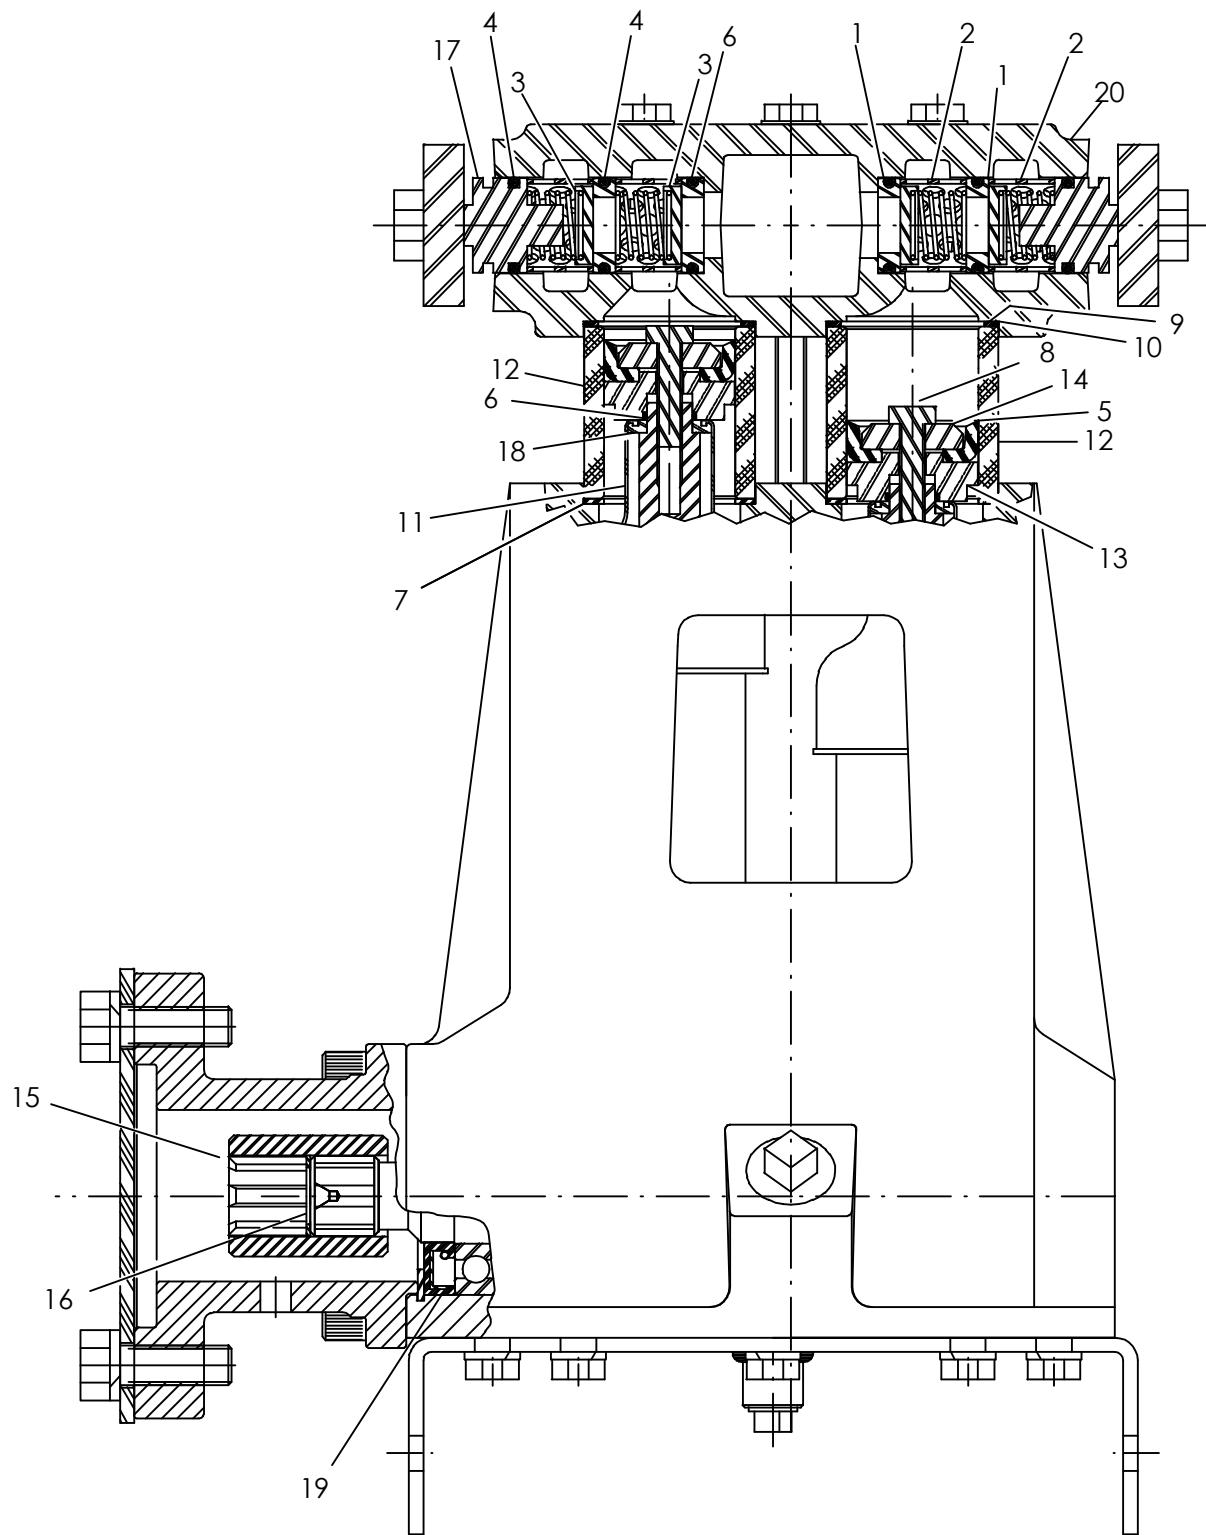

DRILLING FLUID PUMP


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--|------------------------|
| | 157-267 | 1 | DRILLING FLUID PUMP | |
| | 197-115 | - | REMANUFACTURED 157-267 PUMP | |
| | 191-023 | 1 | VALVE REPAIR KIT | INCLUDES REF NO'S 1-4 |
| | 191-034 | 1 | PACKING REPAIR KIT | INCLUDES REF NO'S 5-10 |
| 1. | N/A | 8 | VALVE SEAT | |
| 2. | N/A | 8 | CAGE | |
| 3. | N/A | 8 | DISC AND SPRING | |
| 4. | N/A | 12 | O-RING | |
| 5. | N/A | 4 | CUP | |
| 6. | N/A | 4 | O-RING | |
| 7. | N/A | 4 | CYLINDER GASKET | |
| 8. | N/A | 4 | HEX HD CAP SCREW (5/16-18 X 1 1/2" LG) | |
| 9. | N/A | 4 | SEAL RING | |
| 10. | 157-159 | 4 | O-RING (033 D90) | |
| 11. | 499-045 | 4 | UMBRELLA SEAL | |
| 12. | 499-058 | 4 | CERAMIC CYLINDER (1-3/8") | |
| 13. | 499-059 | 4 | PACKING HOLDER | |
| 14. | 499-060 | 4 | PACKING WASHER | |
| 15. | 499-066 | 1 | COUPLER | PUMP TO DRIVE MOTOR |
| 16. | 499-067 | 1 | RETAINING RING | USED ON EARLIER MODELS |
| | 500-2012 | 1 | SPRING PIN 3/32" X 1.5" | |
| 17. | 499-086 | 4 | VALVE COVER | |
| 18. | 499-087 | 4 | UMBRELLA WASHER | |
| 19. | 157-751 | 4 | SEAL, CRANKSHAFT | |
| 20. | 499-825 | 1 | FLUID CYLINDER | |

NOT SHOWN:

FOOTNOTES:

NOTE:

DRILLING FLUID PLUMBING

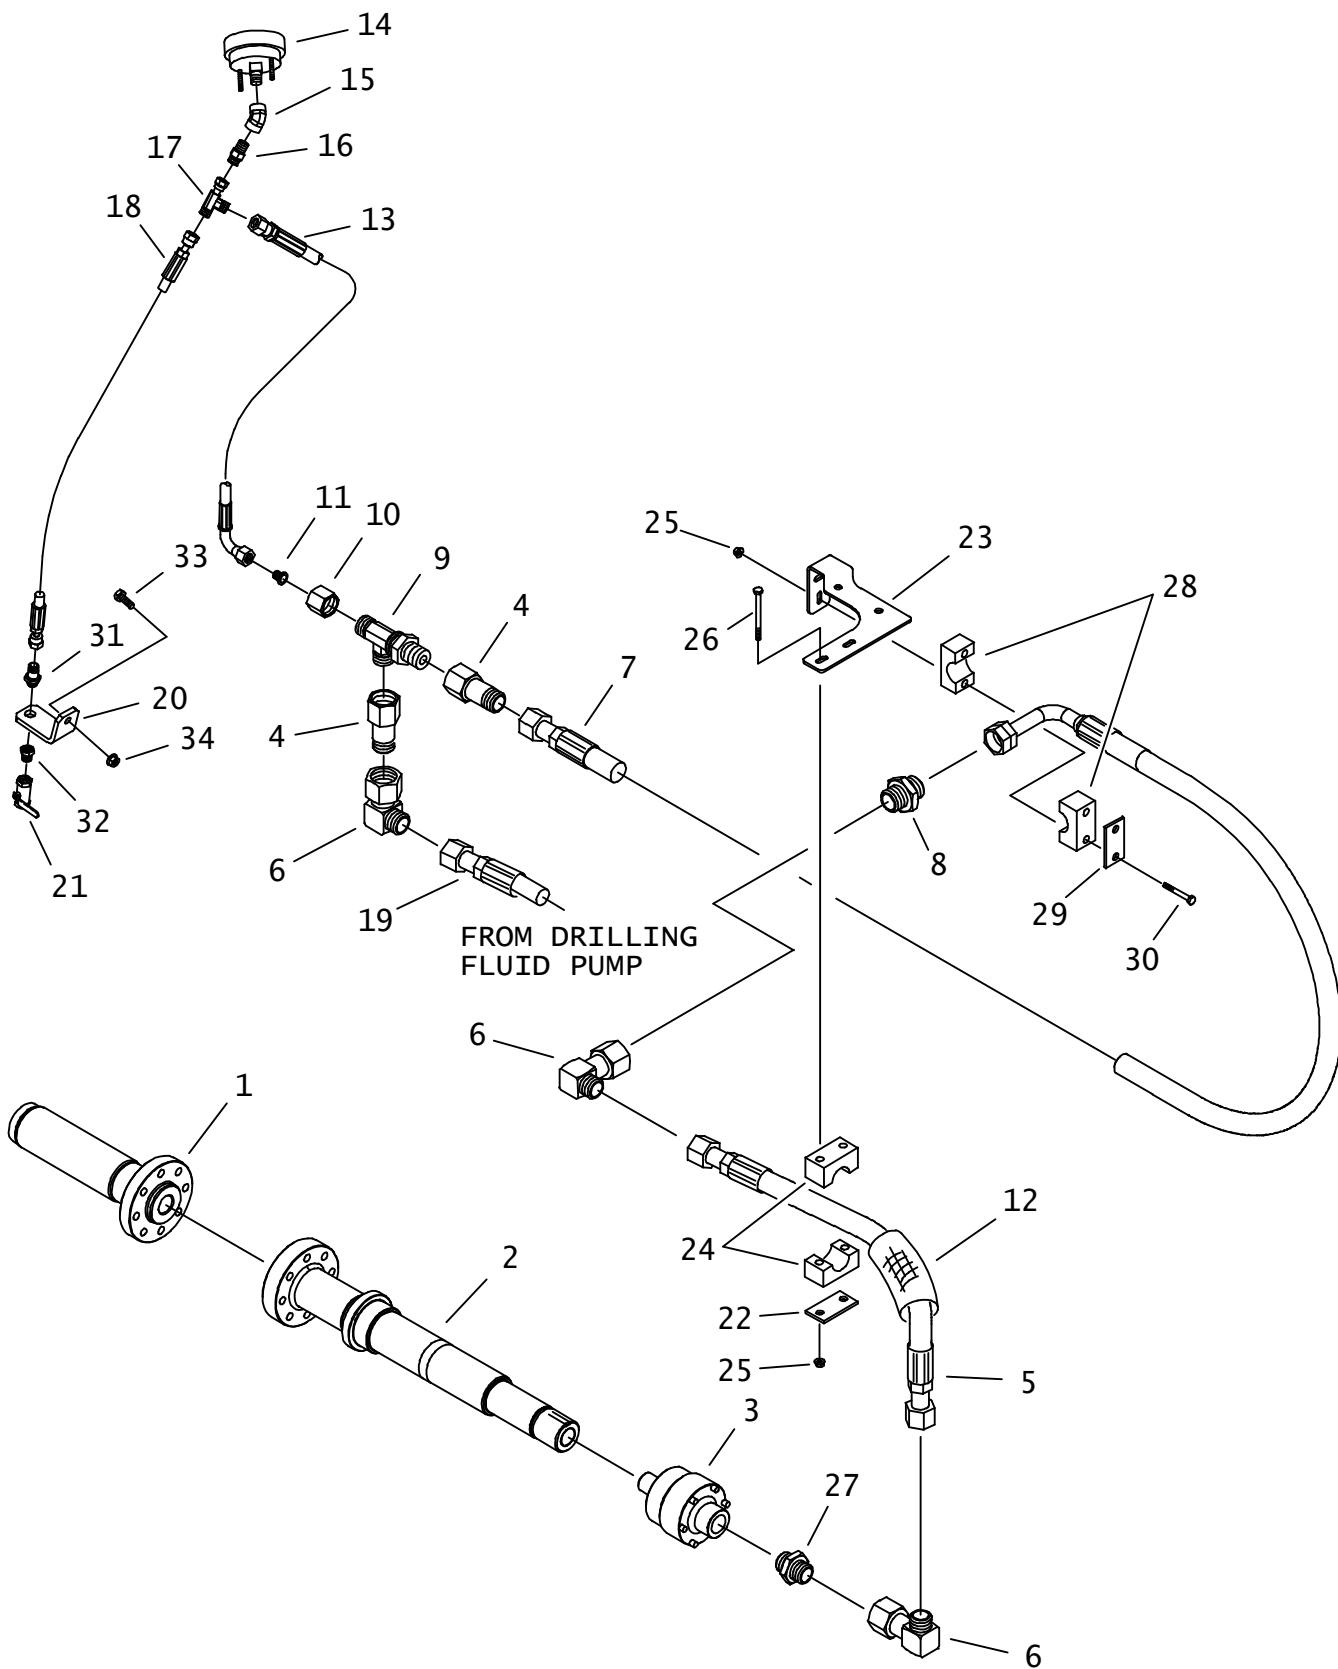

DRILLING FLUID PLUMBING


| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|------------------------------------|---------|
| 1. | 400-604 | - | SAVER SUB 1.73-4F DS | |
| 2. | 166-426 | - | SLIDING OUTPUT SHAFT | |
| 3. | 153-242 | - | WATER SWIVEL (12NF-12NF) | |
| | 191-248 | | SEAL KIT | |
| 4. | 514-047 | 2 | UNION (12J-120FX) | |
| 5. | 159-579 | 1 | HOSE (12JFX-30"-1500) | |
| 6. | 154-026 | 3 | UNION (12J-12JFX90) | |
| 7. | 157-969 | 1 | HOSE (12JFX90L-119"-1500) | |
| 8. | 154-101 | 1 | CONNECTOR (12J) | |
| 9. | 514-002 | 1 | BK RUN TEE (120) | |
| 10. | 154-271 | 1 | REDUCER NUT (120F) | |
| 11. | 154-282 | 1 | REDUCER STEM (040) | |
| 12. | 115-754 | 1 | ABRASION SLEEVE (1.59" X 30") | |
| 13. | 515-030 | 1 | HOSE (040FX90S-64"-3000) | |
| 14. | 258-046 | - | PRESSURE GAUGE (1500PSI) | |
| | 150-1444 | - | PRESSURE GAUGE (2000PSI) | |
| 15. | 514-418 | 1 | ELBOW (04NF-04NF45) | |
| 16. | 154-339 | 1 | CONNECTOR (04N-040) | |
| 17. | 154-265 | 1 | UNION RUN TEE (040FX-040-040) | |
| 18. | 515-072 | 1 | HOSE (040FX45-16"-3000) | |
| 19. | 154-617 | 1 | HOSE (12JFX-95"-2250) | |
| 20. | 320-599 | 1 | VALVE BRACKET | |
| 21. | 120-071 | 1 | SHUT-OFF (04NF-04NF) | |
| 22. | 322-362 | 1 | BACKUP SPACER | |
| 23. | 318-873 | - | BRACKET, TOP | |
| 24. | 110-852 | 1 | BOLT-ON CLAMP(1.25", SOLD PER SET) | |
| 25. | 105-832 | 4 | FLG LOCKNUT (1/4-NC) | |
| 26. | 107-196 | 2 | BOLT (1/4-NC X 3") | |
| 27. | 154-102 | 1 | CONNECTOR (12N-12J) | |
| 28. | 110-411 | 1 | BOLT-ON CLAMP (3/4", SET) | |
| 29. | 322-289 | 1 | BACKUP (BOLT-ON) | |
| 30. | 105-106 | 2 | BOLT (1/4-NC X 2") | |
| 31. | 153-238 | 1 | BK CONNECTOR (040-06S) | |
| 32. | 153-264 | 1 | REDUCER (04N-06SF) | |
| 33. | 106-381 | 1 | FLG LK SCREW(M8-1.25 X 25mm) | |
| 34. | 106-386 | 1 | FLG LOCKNUT (M8-1.25) | |

NOT SHOWN:

FOOTNOTES:

NOTE:

DRILLING FLUID TRANSFER

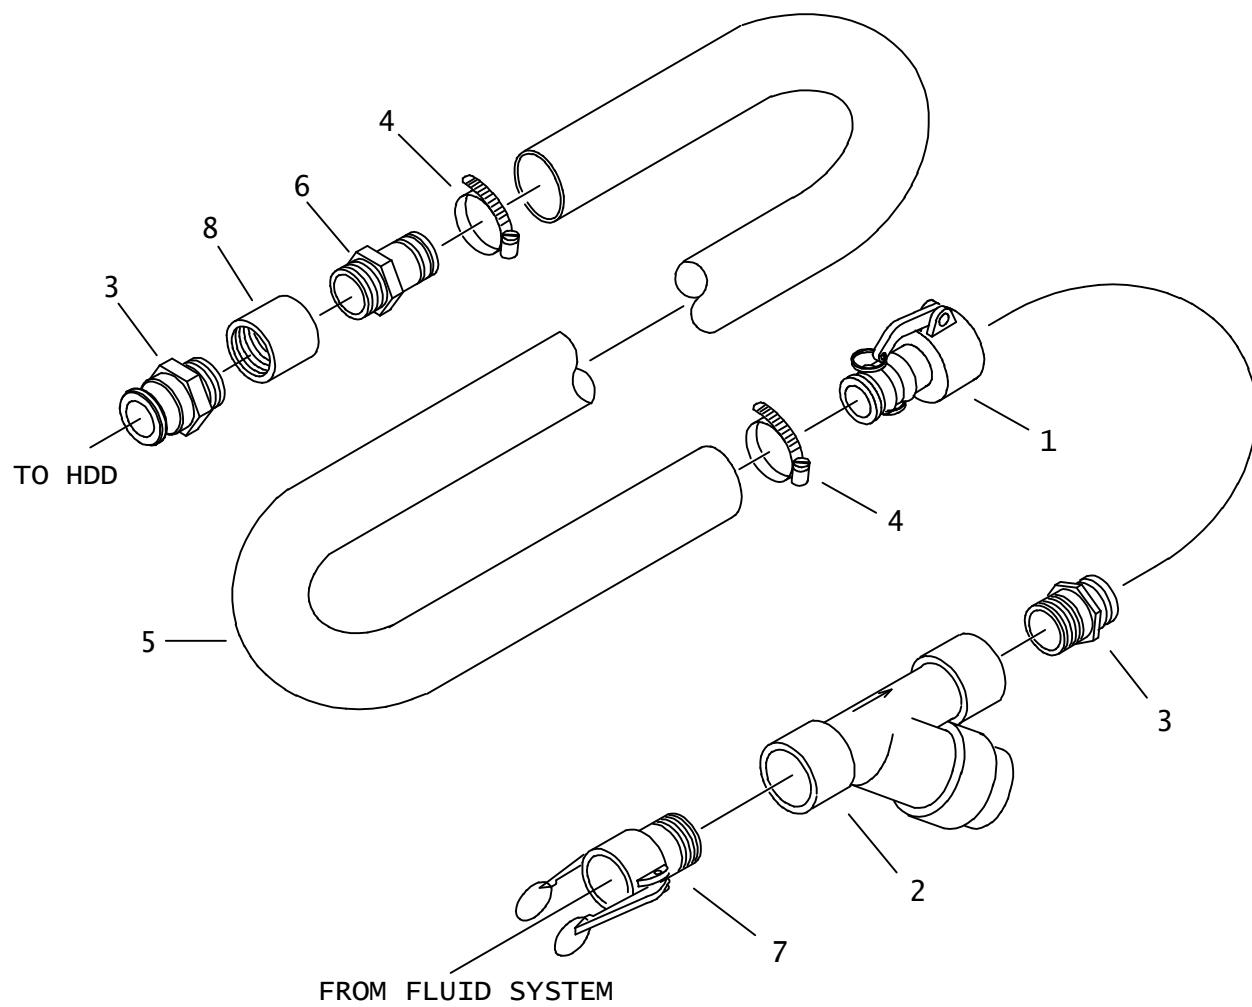

DRILLING FLUID TRANSFER

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|------------------------|
| | 159-587 | | TRANSFER HOSE ASSEMBLY | |
| 1. | 155-205 | 1 | FHC BODY (20-24N) | |
| 2. | 159-476 | 1 | Y-STRAINER (24NF) | |
| | 159-503 | | SCREEN, Y-STRAINER (12 MESH) | |
| | 500-2080 | | O-RING | USED ON Y STRAINER CAP |
| 3. | 155-204 | 2 | FHC ADAPTER (24-24N) | |
| 4. | 110-250 | 2 | WORM CLAMP (1," TO 2,,") | |
| 5. | 116-782 AR | | BULK HOSE (1.50", SOLD PER 1") | USE 1 @ 300" |
| 6. | 155-188 | 1 | S/O COUPLER (24N-24H) | |
| 7. | 159-500 | 1 | FHC BODY (24-24N) | |
| 8. | 115-134 | 1 | COLLAR (24NF) | |

NOT SHOWN:

FOOTNOTES:


NOTE:

NOTES:

PIPE LOADER SYSTEMS

ID0135289

LIFTERS

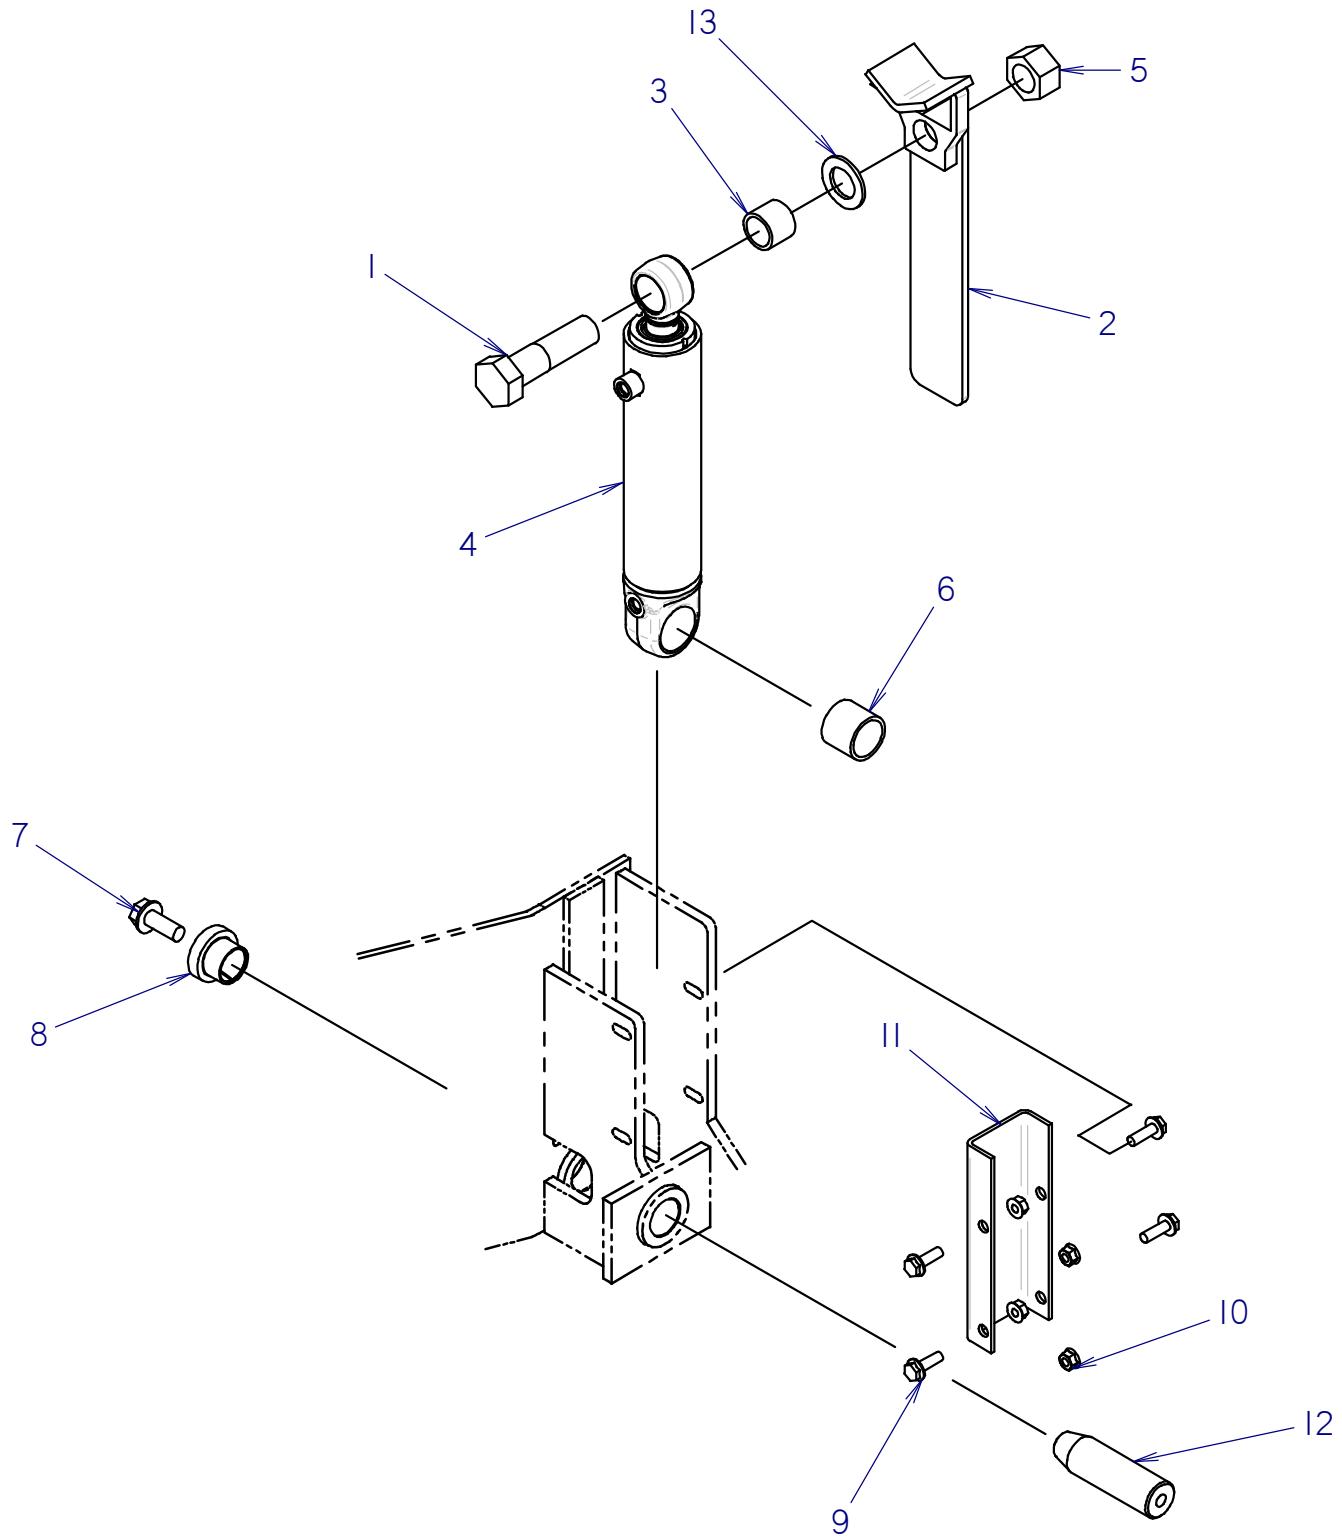

LIFTERS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|--|
| 1 | I06-664 | 1 | SCREW (M24-3.00 X 90MM, I0.9) | |
| 2 | 300-I06I | 1 | LIFTER PLATE | USE ON JT2020 FOOTNOTE 1 (SEE FOOTNOTE 2 FOR JTI220) |
| 3 | I25-770 | 1 | COMPOSITION BUSHING (I.000") | |
| 4 | I51-044 | 1 | CYL (2.0 X I.0 X 6.0) | |
| 5 | I06-352 | 1 | NUT (M24-3.00) | |
| 6 | I25-771 | 1 | COMPOSITION BUSHING (I.25") | |
| 7 | I05-830 | 1 | FLG LK BOLT (I/2-NC X I-I/4") | |
| 8 | I81-982 | 1 | TAPERED INSERT (I.25") | |
| 9 | I06-38I | 4 | FLG LK SCREW (M8-I.25 X 25MM) | |
| I0 | I06-386 | 4 | FLG LOCKNUT (M8-I.25) | |
| I1 | 324-482 | 1 | CHANNEL | |
| I2 | I78-394 | 1 | TAPERED PIN (I.250" X 4.25") | |
| I3 | I06-016 | 1 | SPINDLE WASHER (I.062") | |


NOT SHOWN:

FOOTNOTES:

1. 300-I06I | LIFTER PLATE, BEGINS WITH S/N: CMWJ2020H60000346 ; USE ON JT2220
2. 316-569 | LIFTER PLATE, BEGINS WITH S/N: CMWJ1220J60000130 ; USE ON JTI220

NOTE:

SHUTTLE

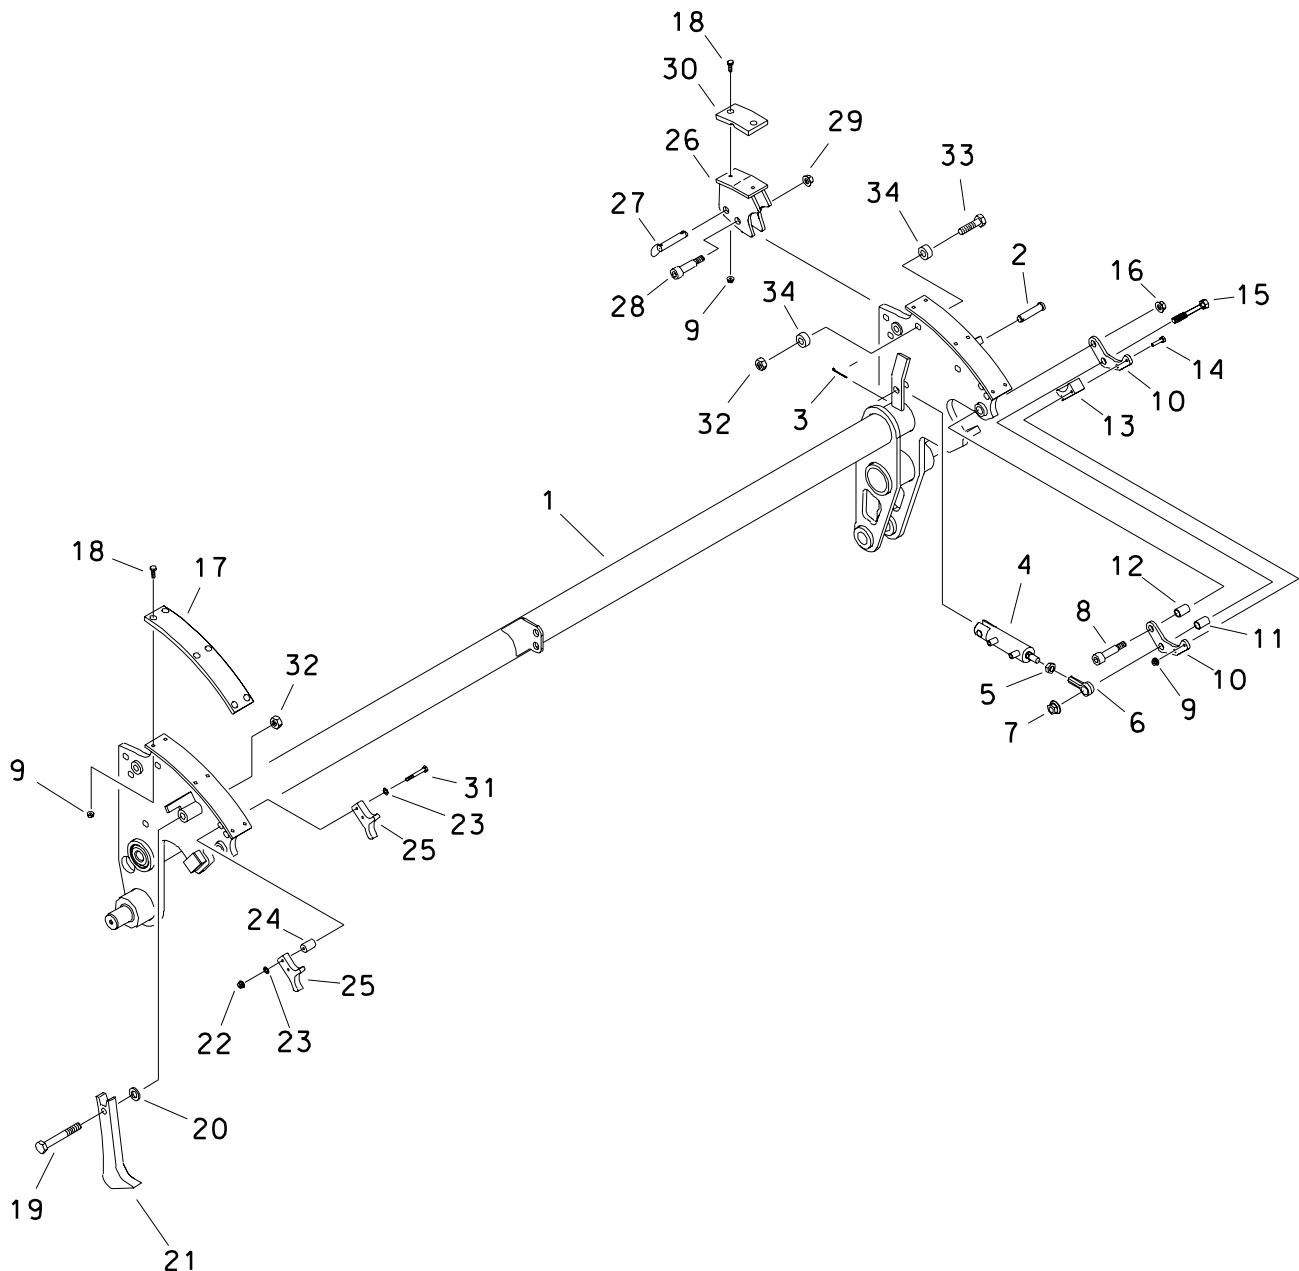


SHUTTLE

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|-----------------------------------|---------|
| 1. | 316-508 | 1 | SHUTTLE | |
| 2. | 108-057 | 2 | CLEVIS PIN (1/2" X 2-1/4") | |
| 3. | 105-509 | 2 | COTTER PIN (1/8" X 1") | |
| 4. | 151-150 | 2 | CYL (.15" X .50" X 2") | |
| 5. | 105-920 | 2 | JAM NUT (7/16-NF) | |
| 6. | 110-983 | 2 | ROD END (7/16" NF-20, FM) | |
| 7. | 106-758 | 2 | LOCKNUT (M10-1.5) | |
| 8. | 106-132 | 2 | SHLD BLT (1/2" X 1-1/2", 3/8-NC) | |
| 9. | 106-385 | 20 | FLG LOCKNUT (M6-1.00) | |
| 10. | 316-502 | 4 | PLATE | |
| 11. | 179-387 | 2 | GRIPPER SPACER | |
| 12. | 125-430 | 2 | BRONZE BUSHING (.502") | |
| 13. | 315-740 | 2 | SHUTTLE GRIPPER PAD | |
| 14. | 106-093 | 4 | SCREW (M6-1.00 X 45MM) | |
| 15. | 106-142 | 2 | SCREW (M10-1.50 X 65MM) | |
| 16. | 105-047 | 2 | LOCKNUT (3/8-NC) | |
| 17. | 323-206 | 2 | SHUTTLE WEAR PAD | |
| 18. | 106-640 | 16 | SCREW (M6-1.00 X 20MM, BUT SOC) | |
| 19. | 106-584 | 2 | SCREW (M12-1.75 X 100MM) | |
| 20. | 106-391 | 2 | WASHER (M12) | |
| 21. | 316-495 | 2 | CATCH ARM | |
| 22. | 106-237 | 4 | LOCKNUT (M6-1.00, PRV TRQ, NLK) | |
| 23. | 106-388 | 8 | WASHER (M6) | |
| 24. | 179-531 | 4 | BUSHING | |
| 25. | 315-739 | 4 | GRIPPER PAD | |
| 26. | 323-204 | 2 | SWIVEL BODY | |
| 27. | 183-411 | 2 | PULL PIN (1/2" X 2") | |
| 28. | 107-043 | 2 | SHLD BLT (M12 X 35MM, M10-1.50) | |
| 29. | 105-894 | 2 | LOCKNUT (M10-1.50, PRV TRQ, 10.9) | |
| 30. | 323-205 | 2 | WEAR PAD | |
| 31. | 107-025 | 4 | SCREW (M6-1.00 X 50MM) | |
| 32. | 106-685 | 4 | LOCKNUT (M12-1.75, PRV TRQ, 10.9) | |
| 33. | 106-334 | 2 | SCREW (M12-1.75 X 50MM) | |
| 34. | 179-831 | 4 | BUSHING | |

FOOTNOTES

SHUTTLE MOUNT

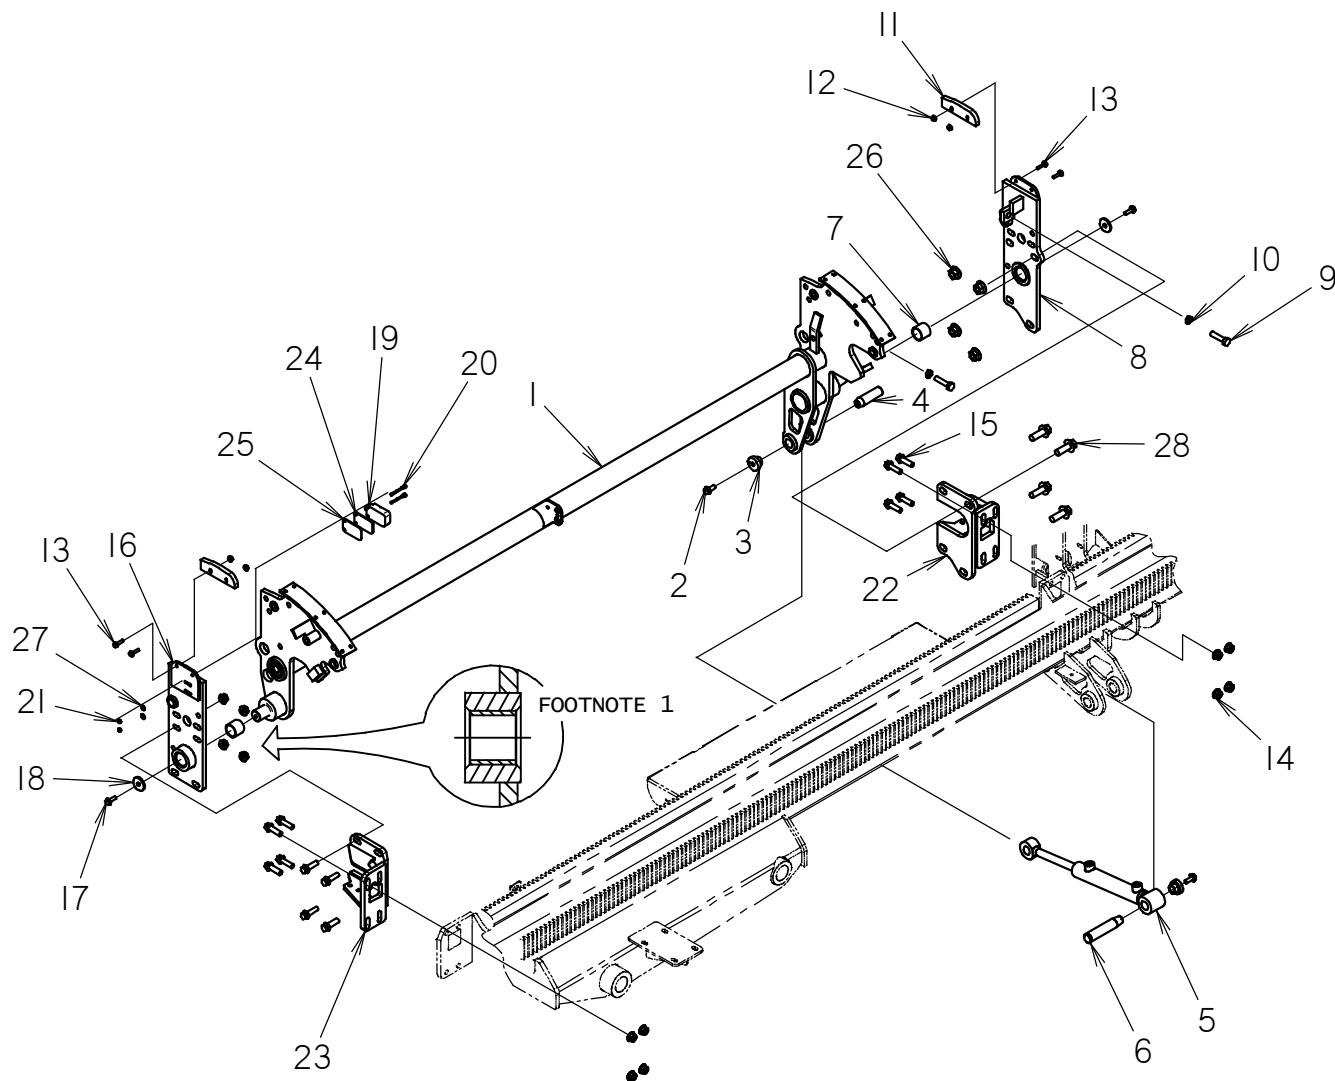

SHUTTLE MOUNT

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|----------------|
| 1 | 316-508 | 1 | SHUTTLE | |
| 2 | I06-724 | 2 | FLG SCREW (M10-1.50 X 25MM) | |
| 3 | I81-98I | 2 | TAPERED INSERT (1") | |
| 4 | I83-820 | 1 | TAPERED PIN (25.4MM X 86MM) | |
| 5 | I51-230 | 1 | CYL (1.25" X .75" X 6") | |
| 6 | I83-764 | 1 | 25.4 X I26 TAPERED PIN | |
| 7 | I25-771 | 2 | COMPOSITION BUSHING (1.25") | |
| 8 | 316-696 | 1 | MOUNT PLATE | |
| 9 | I06-334 | 2 | SCREW (M12-1.75 X 50MM) | |
| 10 | I07-669 | 2 | JAM NUT (M12-1.75) | |
| 11 | I19-004 | 2 | CATCH ARM WIRE PAD | |
| 12 | I06-385 | 4 | FLG LOCKNUT (M6-1.00) | |
| 13 | I06-848 | 4 | FLG SCREW (M6-1.00 X 25MM) | |
| 14 | I06-709 | 12 | FLG LK NUT (M12-1.75) | |
| 15 | I07-565 | 12 | FLG LK SCREW (M12-1.75 X 40MM) | |
| 16 | 319-530 | 1 | MOUNT PLATE | |
| 17 | I06-38I | 2 | FLG LK SCREW (M8-1.25 X 25MM) | |
| 18 | I05-069 | 2 | WASHER (406") | |
| 19 | I25-I175 | 1 | PROXIMITY SWITCH | |
| 20 | I08-09I | 2 | SCREW (M5-0.80 X 50MM, SOC) | |
| 21 | I06-850 | 2 | LOCKNUT (M5-0.80) | |
| 22 | 320-234 | 1 | FRONT MOUNT BRACKET | |
| 23 | 320-235 | 1 | REAR MOUNT BRACKET | |
| 24 | I07-45I | 1 | SHIM (.135") | SEE FOOTNOTE 2 |
| 25 | I07-450 | 1 | SHIM (.075") | SEE FOOTNOTE 2 |
| 26 | I06-355 | 4 | FLG NUT (M16-2.00, I0.9) | |
| 27 | I05-284 | 2 | WASHER (3/16") | |
| 28 | I07-336 | 4 | FLG SCREW (M16-2.00X45MM,I0.9) | |

NOT SHOWN:

I16-259

BULK EDGING (1/2" SOLD PER FT)

VARIOUS QUANTITIES & LENGTHS USED


FOOTNOTES:

1. ASSEMBLY BUSHING (REF 7) IN CENTER OF BOSS AS SHOWN
2. USE AS REQUIRED

NOTE:

200

SHUTTLE GUARD

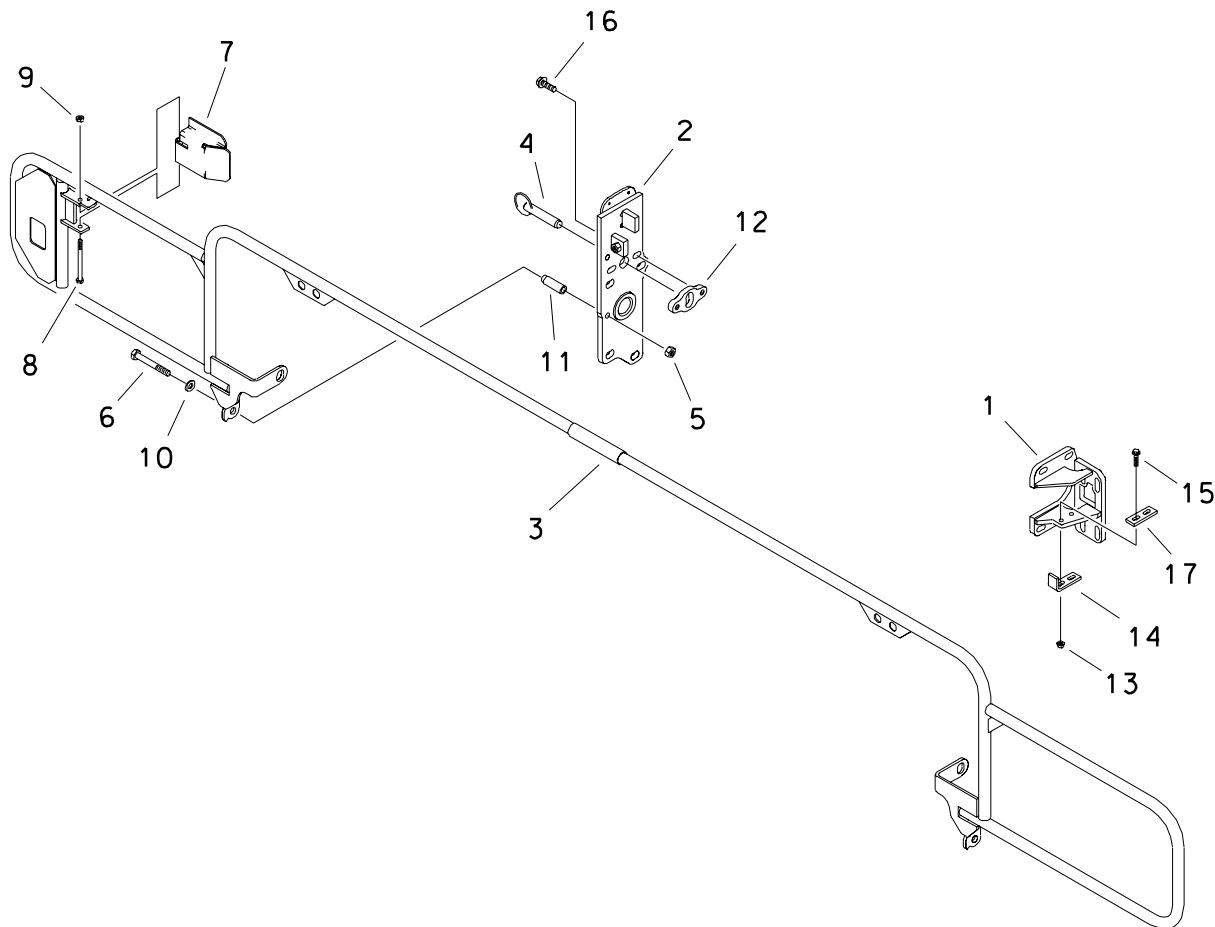


SHUTTLE GUARD

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|----------------------------------|---------|
| 1. | 320-235 | - | REAR MOUNT BRACKET | |
| 2. | 316-696 | - | MOUNT PLATE | |
| 3. | 319-823 | 1 | SHUTTLE GUARD | |
| 4. | 107-877 | 2 | PIN | |
| 5. | 106-089 | 2 | NUT (M12-1.75, 10.9) | |
| 6. | 106-336 | 2 | SCREW (M12-1.75 X 90MM) | |
| 7. | 319-832 | 1 | PIPE STOP | |
| 8. | 107-078 | 1 | SCREW (M8-1.25 X 90MM) | |
| 9. | 106-561 | 1 | LOCKNUT (M8-1.25, PRV TRQ, 10.9) | |
| 10. | 106-391 | 2 | WASHER (M12) | |
| 11. | 179-756 | 2 | PIVOT TUBE | |
| 12. | 322-648 | 2 | PIN PLATE | |
| 13. | 106-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| 14. | 322-498 | 2 | STOP BRACKET | |
| 15. | 106-989 | 4 | FLG LK SCREW (M8-1.25 X 35MM) | |
| 16. | 107-010 | 4 | FLG LK SCREW (M12-1.75 X 30MM) | |
| 17. | 325-514 | 2 | STOP BAR | |

FOOTNOTES

PIPE LOADER VALVE/COVERS

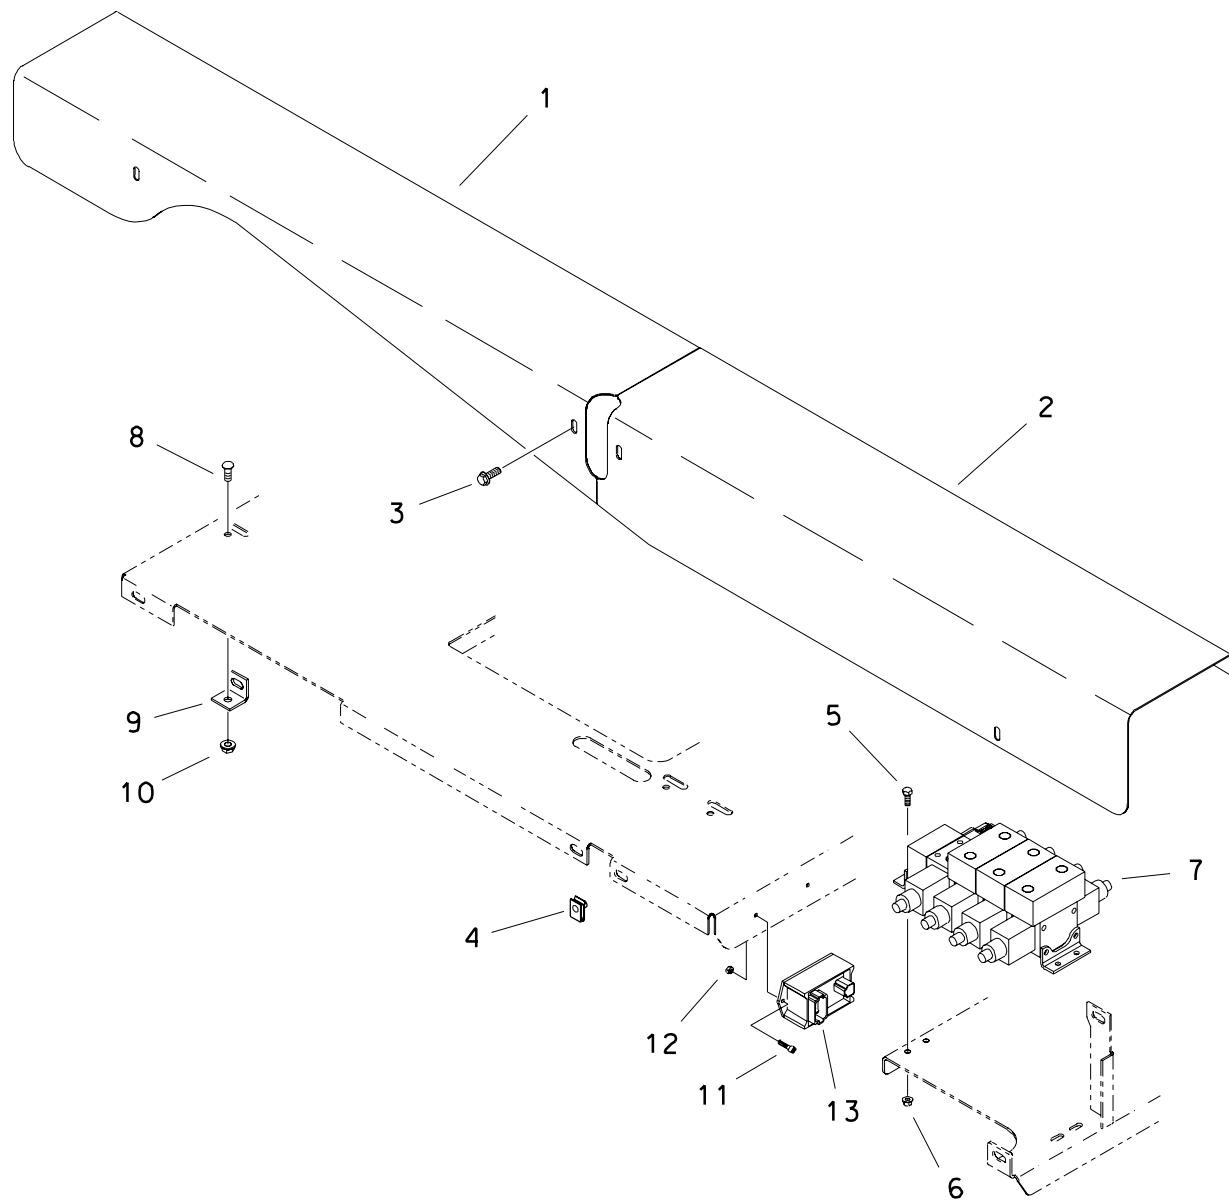


PIPE LOADER VALVE/COVERS

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|------------|----------------|-----|---------------------------------------|---------|
| 1. | 319-506 | 1 | FRONT COVER | |
| 2. | 319-507 | 1 | REAR COVER | |
| 3. | 106-380 | 8 | FLG SCREW(M8-1.25 X 16MM) | |
| 4. | 106-551 | 8 | CLIP NUT (M8-1.25) | |
| 5. | 106-231 | 4 | SCREW (M6-1.00 X 16MM) | |
| 6. | 106-385 | 4 | FLG LOCKNUT (M6-1.00) | |
| 7. | 157-778 | 1 | HYDRAULIC VALVE | |
| 8. | 107-032 | 3 | SCREW (M8-1.25 X 20MM,BUT SOC) | |
| 9. | 320-656 | 3 | CLIP NUT TAB | |
| 10. | 106-386 | 3 | FLG LOCKNUT (M8-1.25) | |
| 11. | 106-049 | 2 | BOLT (#10-24 X $\frac{3}{4}$ ", PLPS) | |
| 12. | 106-048 | 2 | LOCKNUT (#10-24) | |
| 13. | 211-025 | 1 | IN-LINE DIODE PACK | |

FOOTNOTES

PIVOT ARM

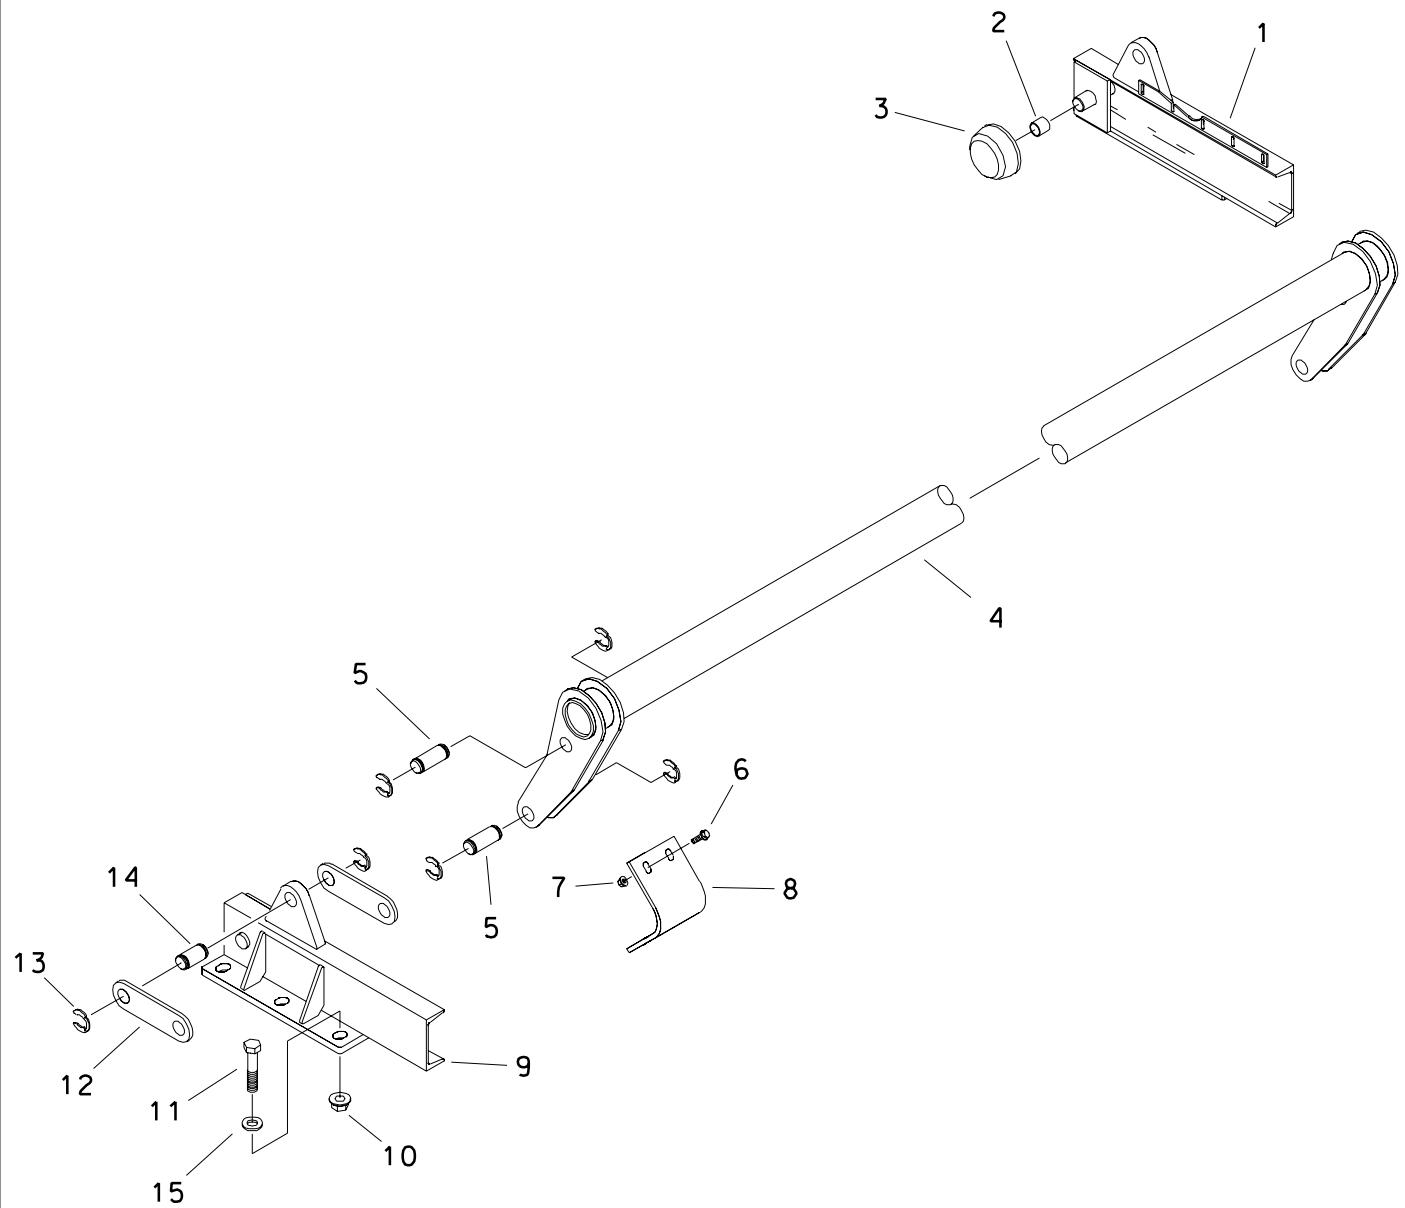


PIVOT ARM

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|---------------------------------|---------|
| 1. | 316-528 | 1 | FRONT ROLLER GUIDE | |
| 2. | 125-770 | 2 | COMPOSITION BUSHING (1") | |
| 3. | 184-084 | 2 | CARRIAGE ROLLER | |
| 4. | 318-785 | 1 | PIVOT ARM | |
| 5. | 179-451 | 4 | TRAVERSE PIN | |
| 6. | 106-383 | 8 | FLG LK SCREW (M10-1.50 X .30MM) | |
| 7. | 106-387 | 8 | FLG LOCKNUT (M10-1.50) | |
| 8. | 318-678 | 2 | PIVOT ARM BRACKET | |
| 9. | 316-529 | 1 | REAR ROLLER GUIDE | |
| 10. | 106-355 | 6 | FLG NUT (M16-2.00, 10.9) | |
| 11. | 106-616 | 6 | SCREW (M16-2.00 X 55MM) | |
| 12. | 319-191 | 4 | LINK | |
| 13. | 115-499 | 12 | KLIP RING (1.000") | |
| 14. | 179-483 | 2 | PIN | |
| 15. | 106-398 | 6 | WASHER (M16, HARDENED) | |

FOOTNOTES

PIPE BOX

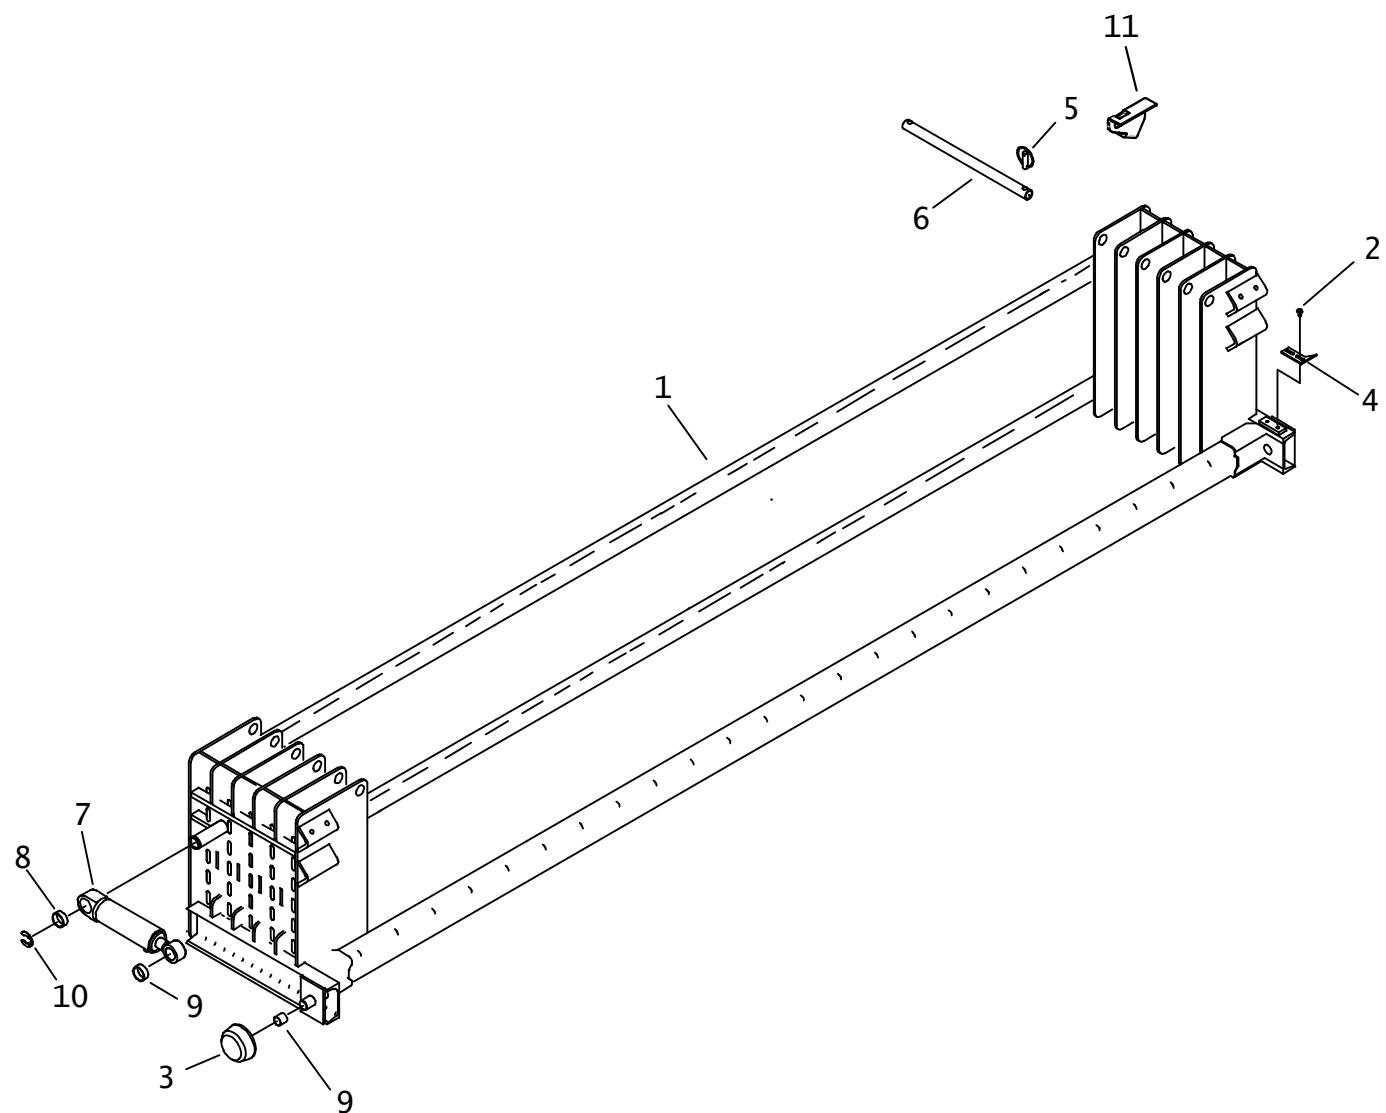

PIPE BOX

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------|---------|
| 1. | 316-530 | 1 | PIPE BOX | |
| 2. | 106-224 | 2 | FLG SCREW (M6-1.00 X 10MM) | |
| 3. | 184-084 | 2 | CARRIAGE ROLLER | |
| 4. | 316-979 | 1 | INDICATOR | |
| 5. | 110-228 | 4 | LYNCH PIN (7/16" X 2") | |
| 6. | 107-882 | 2 | PIN | |
| 7. | 151-038 | 2 | CYL (2.0 X 1.0 X 4.0) | |
| 8. | 125-771 | 2 | COMPOSITION BUSHING (1.25") | |
| 9. | 125-770 | 4 | COMPOSITION BUSHING (1") | |
| 10. | 115-483 | 2 | KLIP RING (1.250") | |
| 11. | 327-734 | 4 | INDICATOR | |

FOOTNOTES

NOTE:

C

808-436

NOTES:


ELECTRICAL

**SEE TECHNICAL SUPPLEMENT FOR FURTHER
ELECTRICAL INFORMATION**

NOTES:

ACCESSORIES

ANTIFREEZE TANK

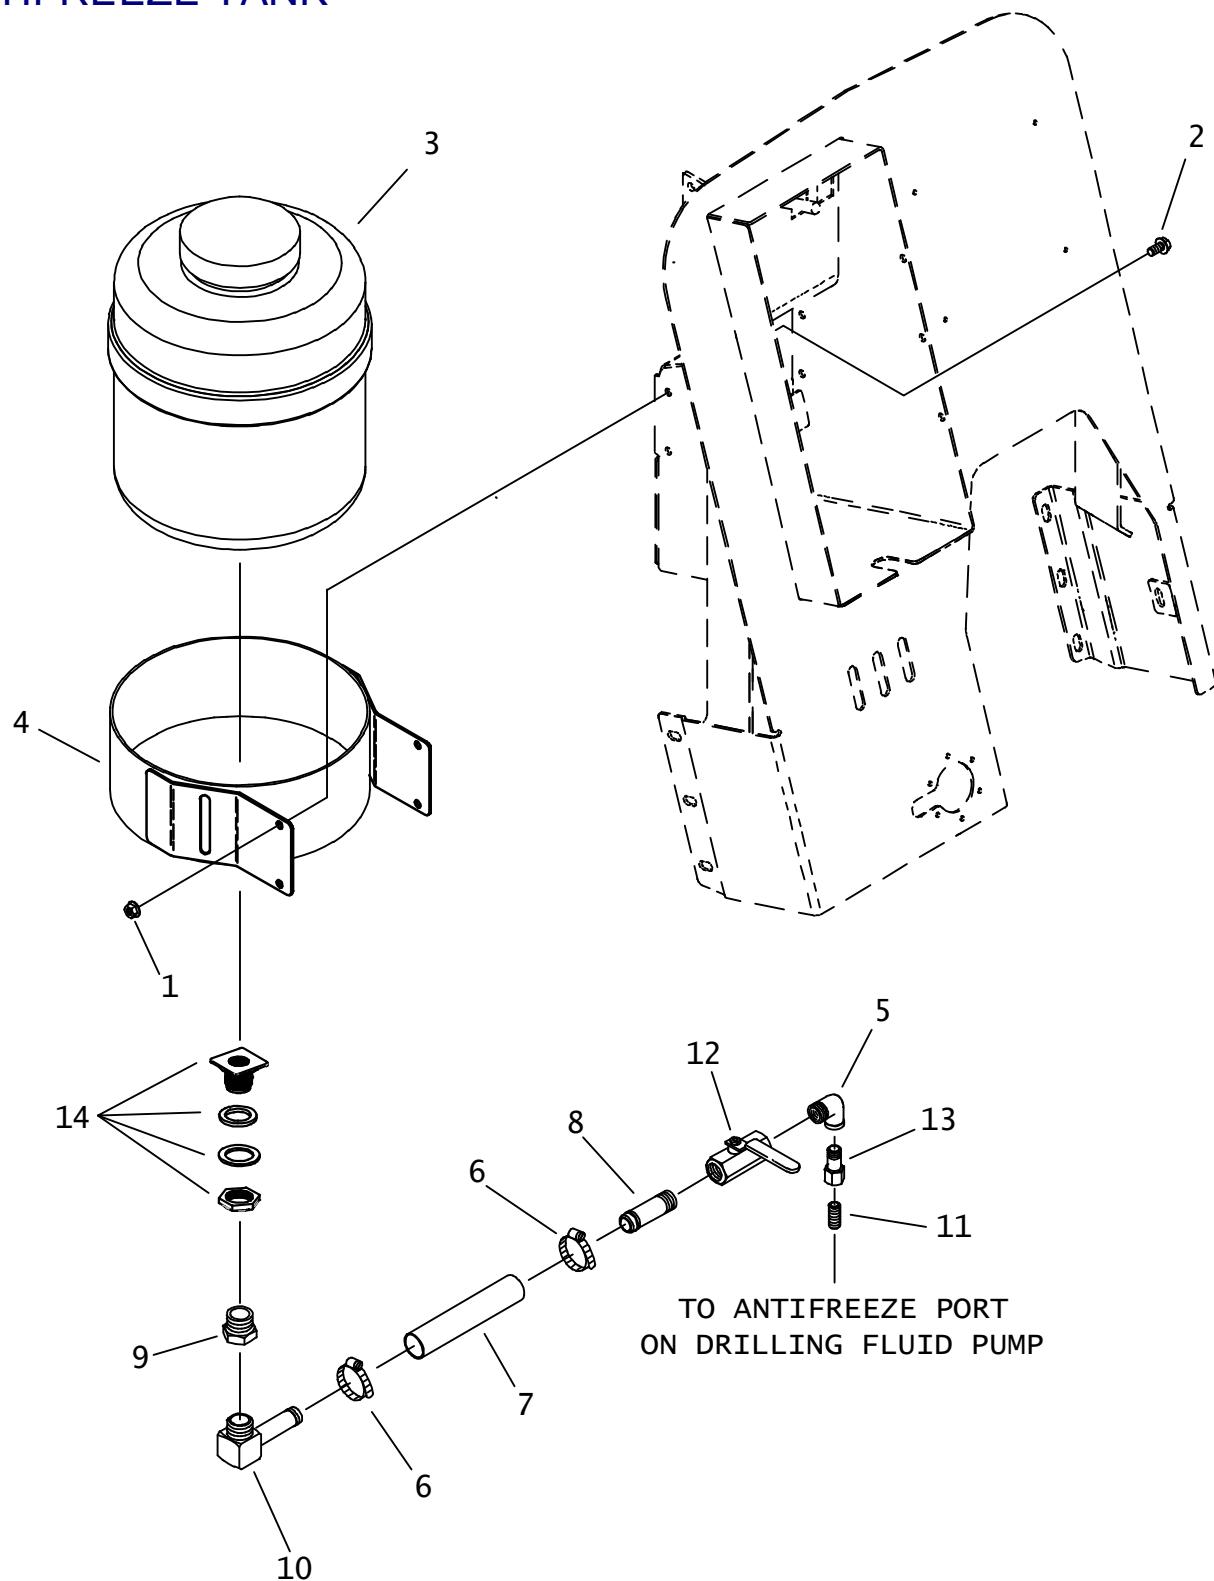

ANTIFREEZE TANK

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|----------------------|
| | 101-140 | 1 | ANTIFREEZE TANK OPTION | INCL REF #1 THRU #14 |
| 1. | 106-386 | 4 | FLG LOCKNUT (M8-1.25) | |
| 2. | 106-380 | 4 | FLG LK SCREW (M8-1.25 X 16MM) | |
| 3. | 364-325 | 1 | ANTIFREEZE TANK (3 GAL) | SEE FOOTNOTE I |
| | 110-707 | 1 | TANK CAP (96NF) | |
| 4. | 315-125 | 1 | TANK MOUNT | |
| 5. | 115-141 | 1 | PIPE ELBOW (3/8NPT) | |
| 6. | 110-217 | 2 | WORM CLAMP (7/16" TO 1") | |
| 7. | 116-881 | AR | BULK HOSE (3/8", SOLD PER FT) | USE 1 @ 20" |
| 8. | 514-369 | 1 | S/O COUPLER (06N-06H) | |
| 9. | 115-219 | 1 | REDUCER (12N-06NF) | |
| 10. | 153-871 | 1 | S/O COUPLER (06N-06H90, BRS) | |
| 11. | 115-129 | 1 | ALL THREAD (04N) SCH 80 | |
| 12. | 153-701 | 1 | SHUT OFF (06NF-06NF) | |
| 13. | 115-106 | 1 | REDUCER (06N-04NF) | |
| 14. | 500-1289 | 1 | BK CONNECTOR (12NF, POLY) | |


NOT SHOWN:

FOOTNOTES:

I. INCLUDES REFERENCE NO. 14

NOTE:

UMBRELLA

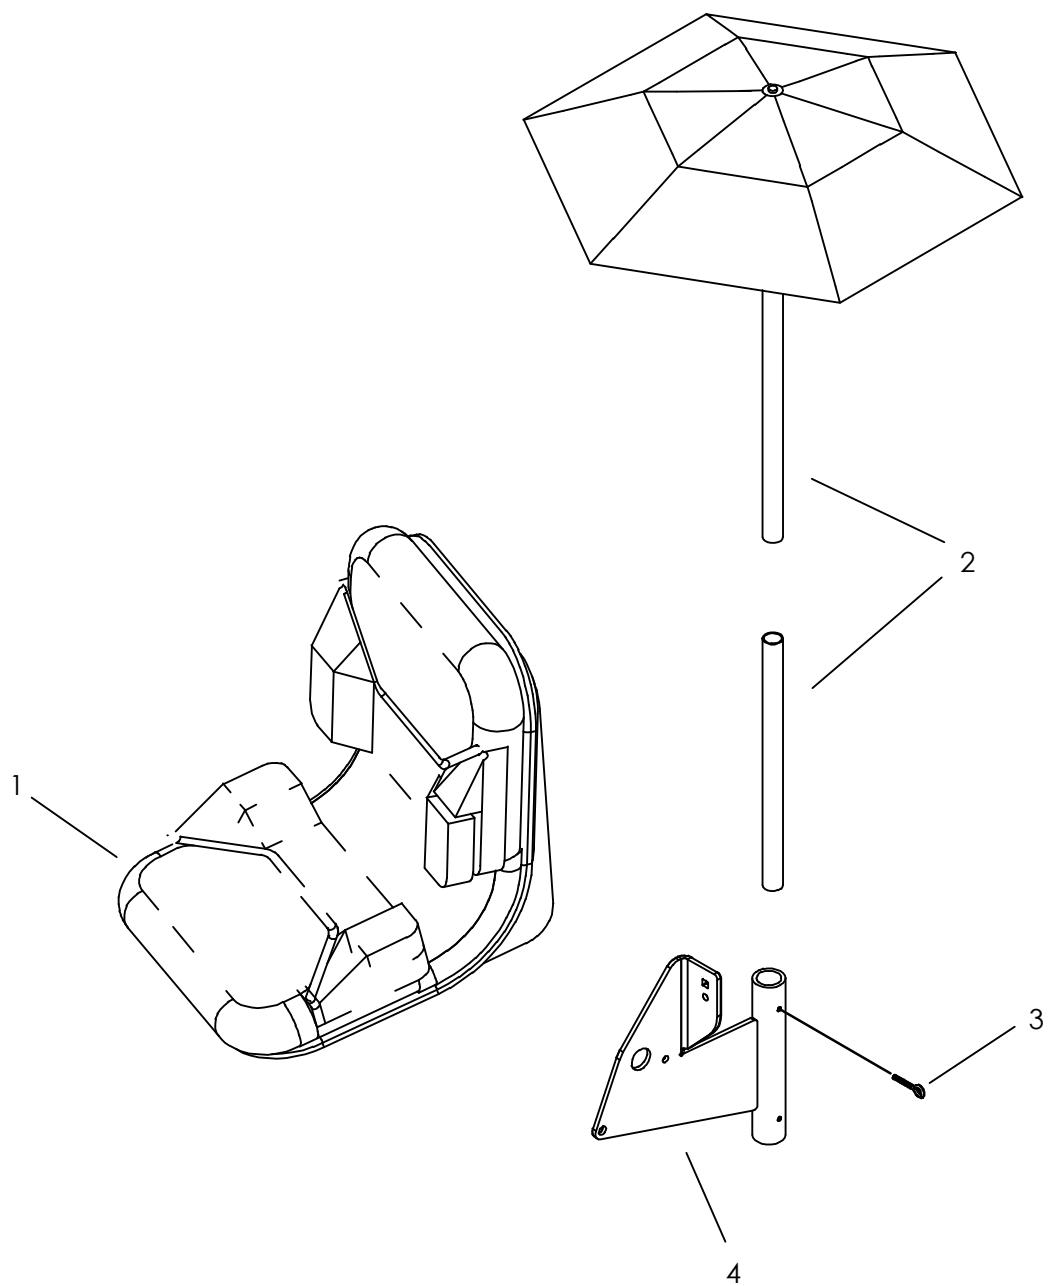

UMBRELLA

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|----------------------------|---|
| 1. | 117-631 | - | SEAT | |
| 2. | 344-700 | 1 | UMBRELLA | |
| | 308-652 | - | UMBRELLA POLE | |
| 3. | 105-204 | 2 | EYE BOLT (1/4-NC X 1 1/2") | |
| 4. | 324-500 | 1 | ARMREST | USE EXISTING HARWARE FOR MOUNTING (REF PARTS PAGE ID0039911) |


NOT SHOWN:

FOOTNOTES:

UMBRELLA KIT (101-160) CONTAINS ITEMS 2, 3 AND 4.

NOTE:

HEATED GREASER

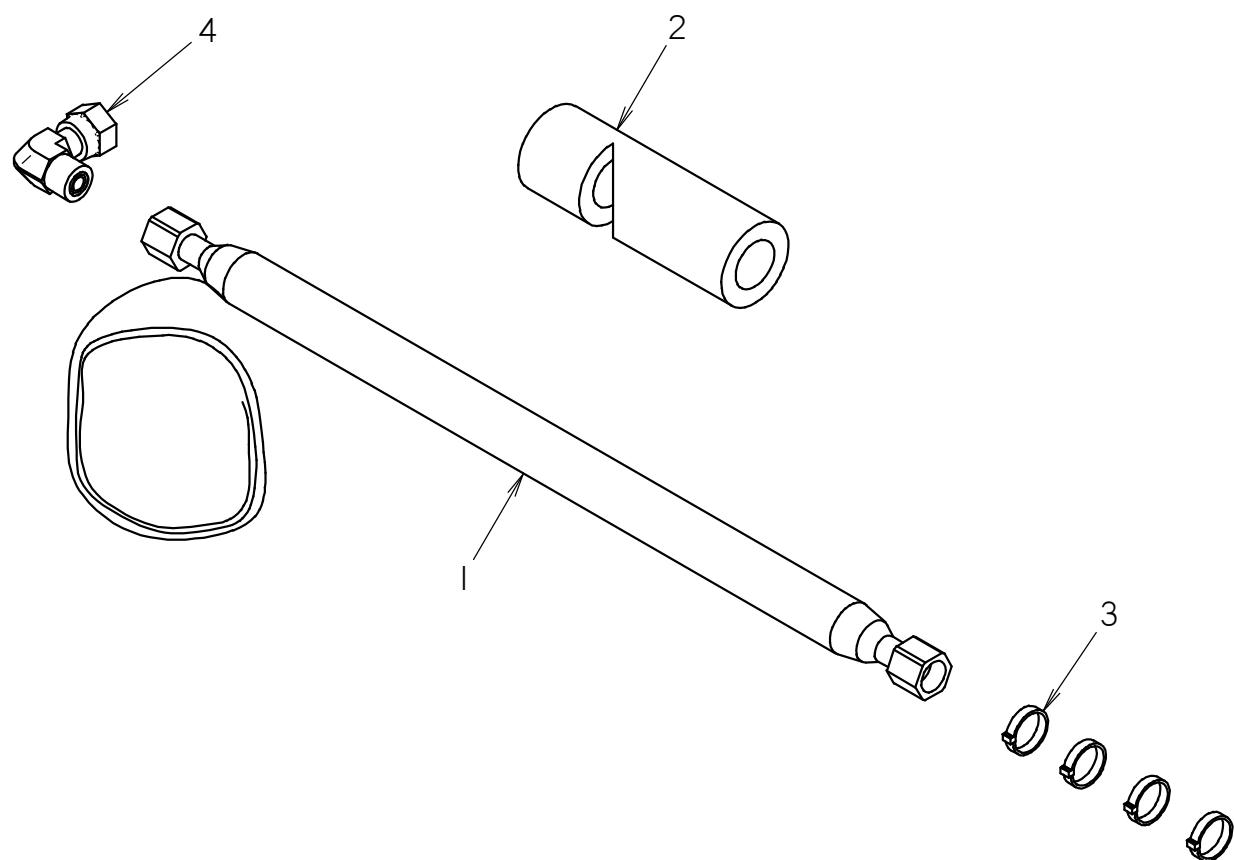

HEATED GREASER

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------|-----------------------|
| | 101-089 | 1 | HEATED HOSE KIT | INCLUDES REF NO'S 1-4 |
| 1 | I53-585 | 1 | HOSE (060FX-18'-3000, SPCL) | |
| 2 | I17-549 | 1 | INSULATOR (1" ID X 5.00") | |
| 3 | I10-030 | 4 | CABLE TIE (1/16" TO 4") | |
| 4 | I54-228 | 1 | UNION (060-060FX90) | |

NOT SHOWN:


FOOTNOTES:

NOTE:

OI

ID0266374

CANOPY

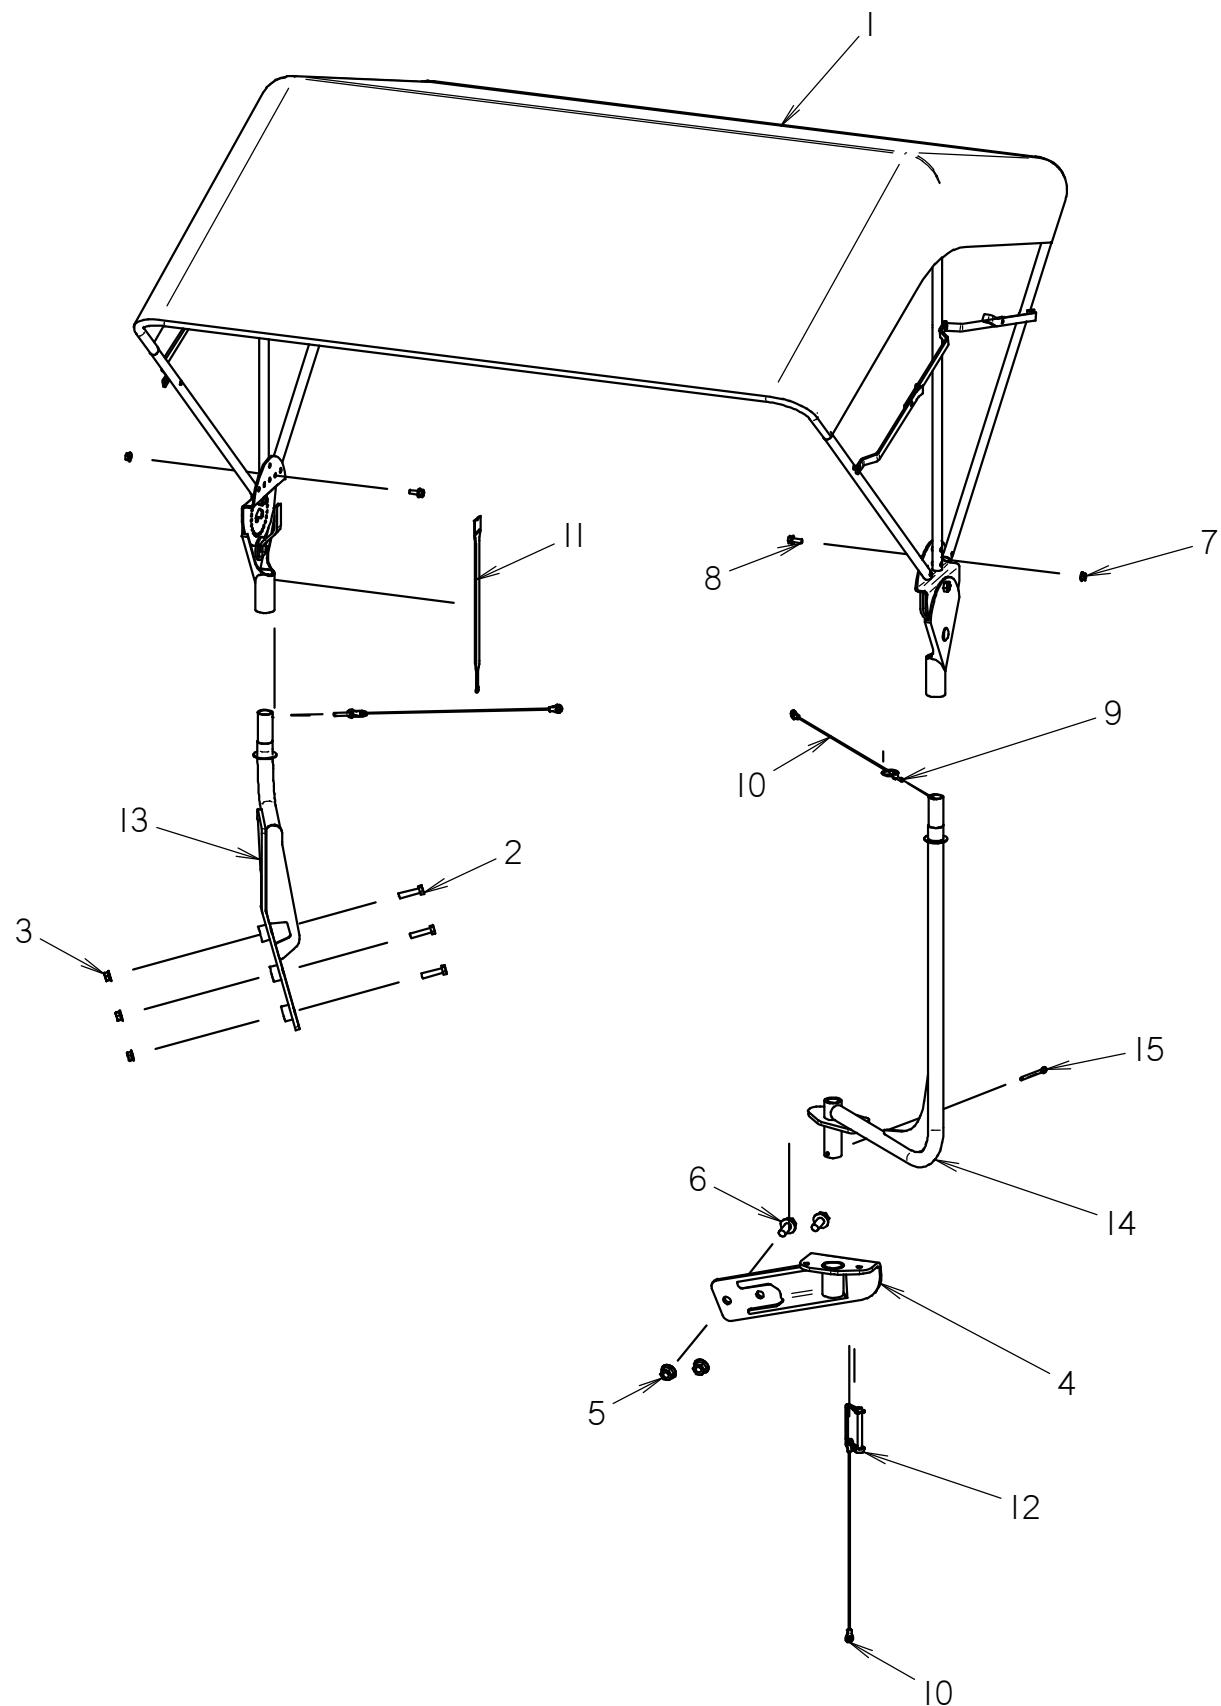


CANOPY

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|--------------------------|
| | I90-1464 | 1 | CANOPY KIT | INCLUDES REF #1 THRU #15 |
| 1 | I90-1286 | 1 | CANOPY | |
| 2 | I06-267 | 3 | SCREW (M8-1.25 X 35MM) | |
| 3 | I06-386 | 3 | FLG LOCKNUT (M8-1.25) | |
| 4 | 300-5729 | 1 | PEDESTAL MOUNT | |
| 5 | I06-709 | 2 | FLG LK NUT (M12-1.75) | |
| 6 | I06-806 | 2 | FLG LK SCREW (M12-1.75 X 25MM) | |
| 7 | I06-385 | 2 | FLG LOCKNUT (M6-1.00) | |
| 8 | I06-712 | 2 | FLG SCREW (M6-1.00 X 16MM) | |
| 9 | I10-284 | 2 | PULL PIN (3/16" X 13/16") | |
| I0 | I10-239 | 3 | LANYARD CABLE (13.5") | |
| II | I18-341 | 1 | VELCRO STRAP | |
| I2 | I10-032 | 1 | SNAPPER PIN (5/16" X 2-1/2") | |
| I3 | 324-515 | 1 | CONSOLE MOUNT WELDMENT | |
| I4 | 324-508 | 1 | OUTER MOUNT | |
| I5 | I05-502 | 1 | COTTER PIN (3/16" X 2") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

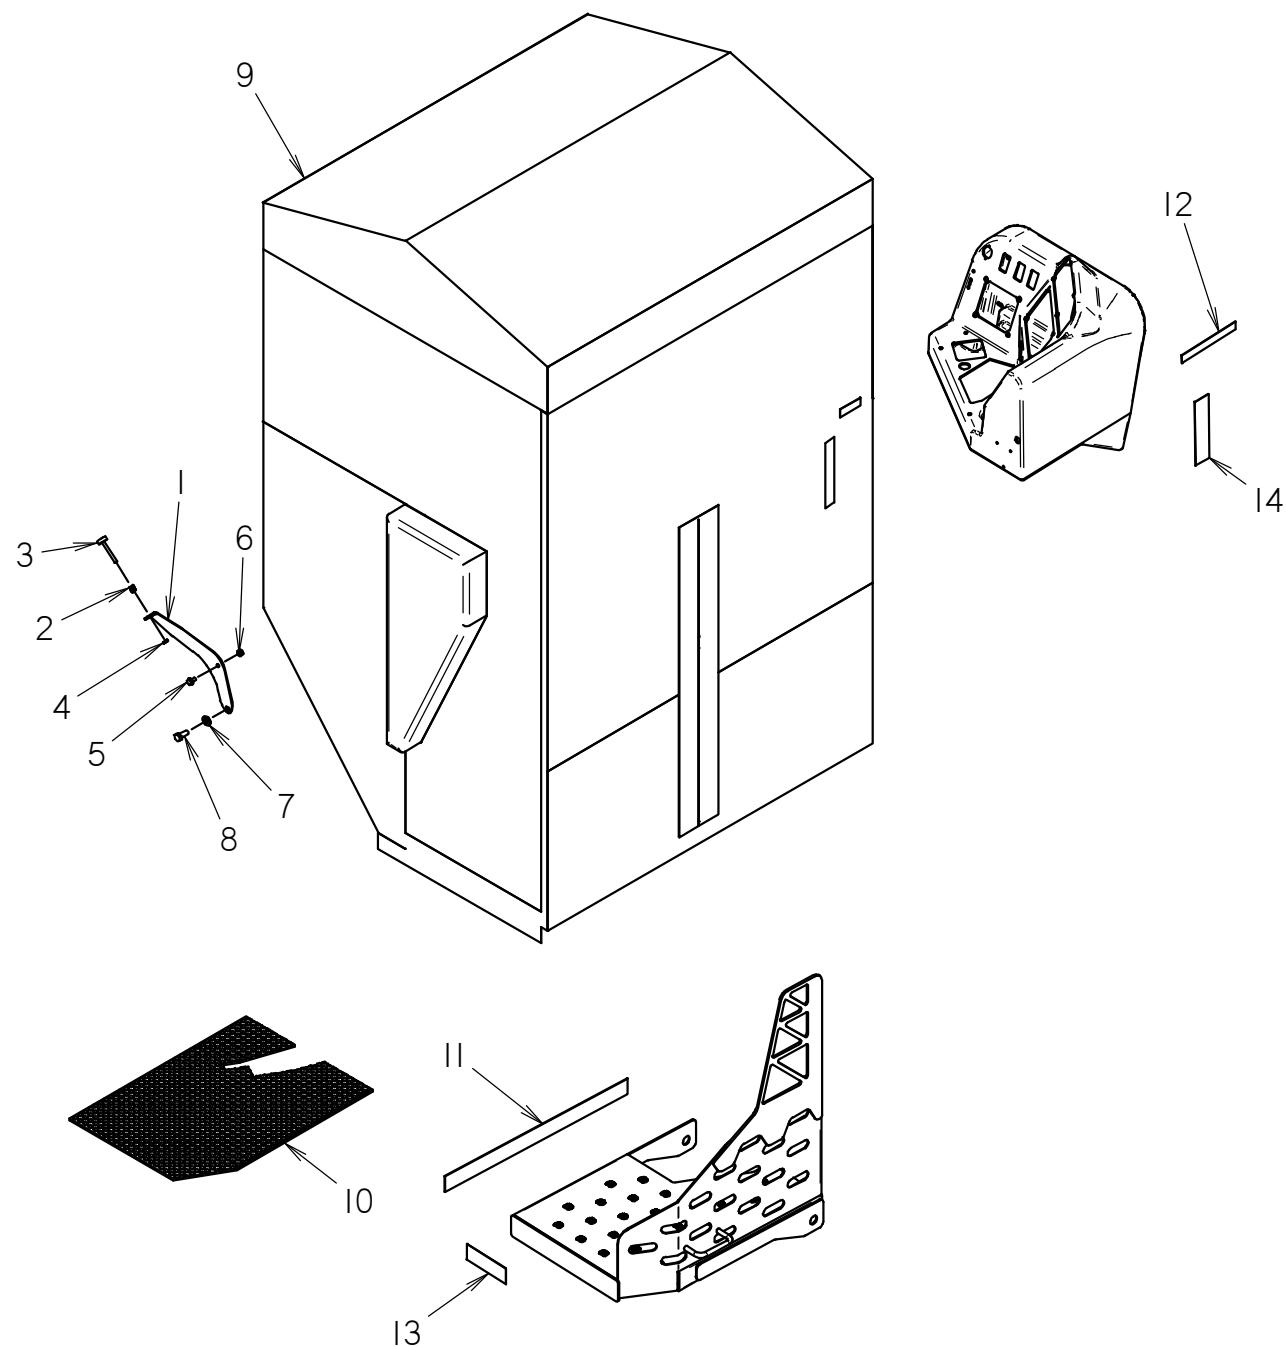SOFTCAB

SOFTCAB

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-------------------------------|---------|
| | I90-I506 | 1 | SOFTCAB KIT (JT1220/JT2020) | |
| 1 | 327-358 | 1 | SUPPORT PLATE | |
| 2 | I06-038 | 1 | NUTSERT 5/16 | |
| 3 | I18-337 | 1 | BUMPER (2.5") | |
| 4 | I06-252 | 1 | JAM NUT (5/16-NC) | |
| 5 | I06-380 | 1 | FLG LK SCREW (M8-1.25 X 16MM) | |
| 6 | I06-386 | 1 | FLG LOCKNUT (M8-1.25) | |
| 7 | I06-397 | 1 | WASHER (M12, HARDENED) | |
| 8 | I05-273 | 1 | SCREW (M12-1.75 X 30MM) | |
| 9 | 362-I454 | 1 | SOFTCAB (JT1220T4i/JT2020T3i) | |
| I0 | 362-I455 | 1 | FLOOR MAT | |
| I1 | I18-411 | 1 | VELCRO STRIP (2" X 26") | |
| I2 | I05-1472 | 1 | VELCRO STRIP (1" X 8") | |
| I3 | I05-1471 | 1 | VELCRO STRIP (2" X 6") | |
| I4 | I05-1470 | 1 | VELCRO STRIP (2" X 8") | |

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0242565

T18B TIE DOWN KIT

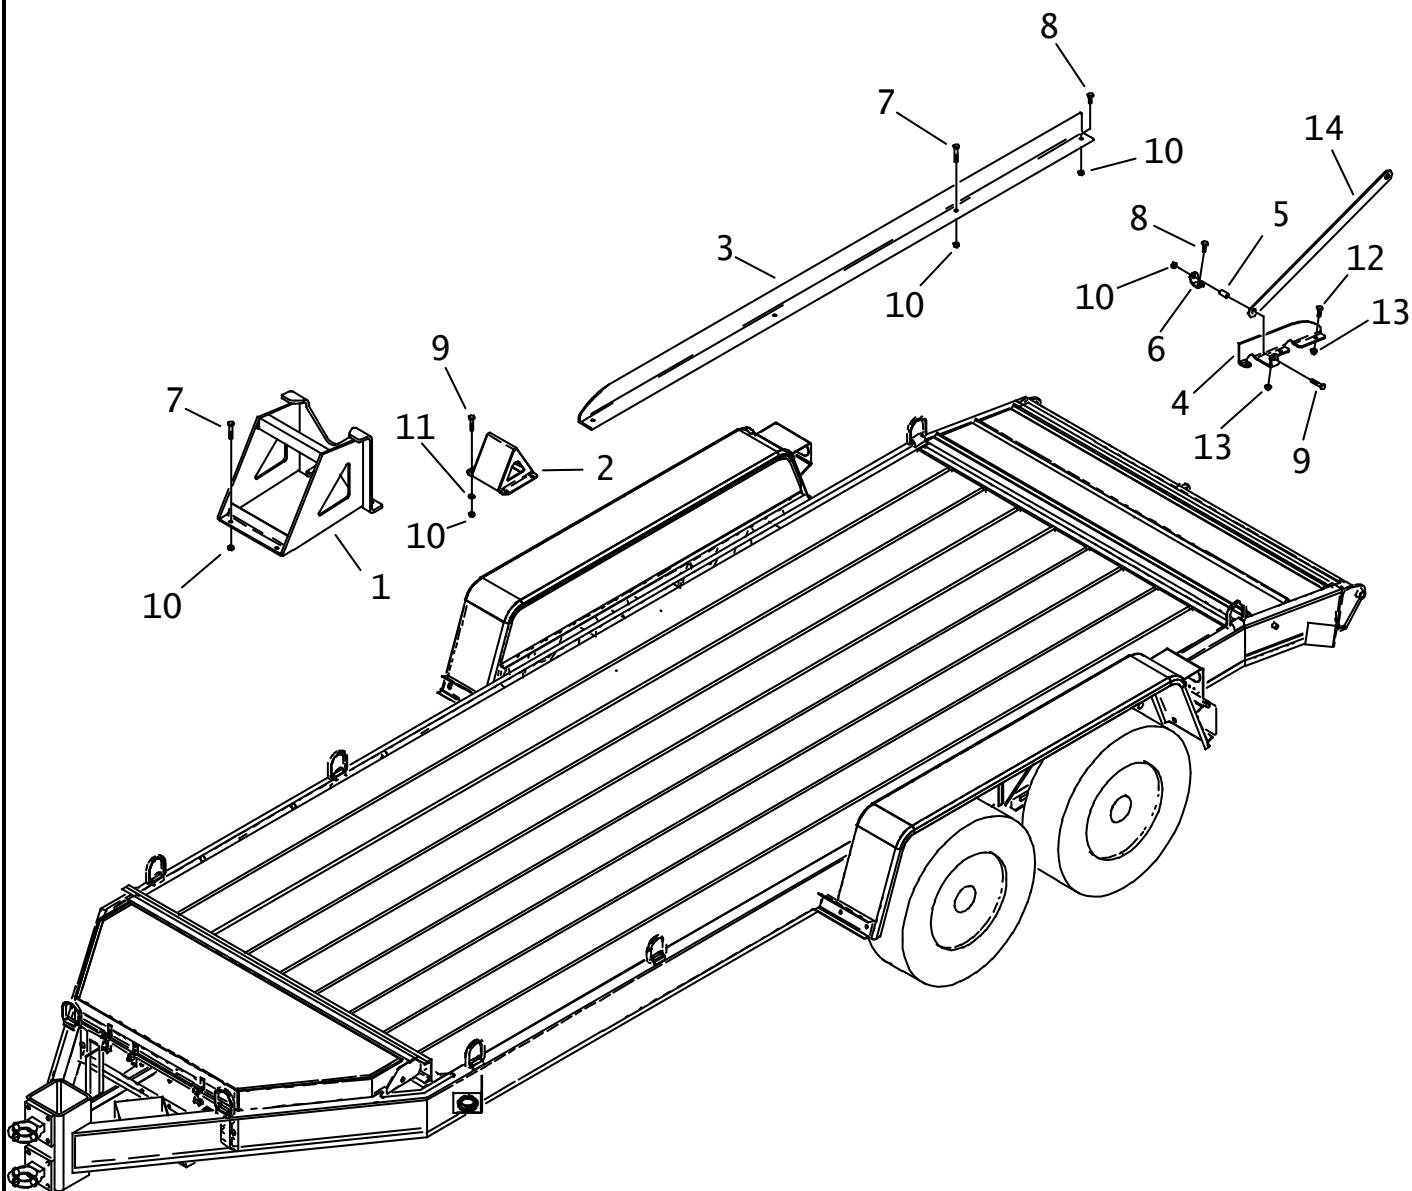

T18B TIE DOWN KIT

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|----------------|
| | 104-065 | - | T18B TIE DOWN KIT | SEE FOOTNOTE 1 |
| 1. | 323-705 | 1 | FRONT MOUNT | |
| 2. | 323-951 | 2 | STOP | |
| 3. | 323-737 | 1 | GUIDE RAIL | |
| 4. | 323-738 | 1 | GUIDE PLATE | |
| 5. | 178-351 | 1 | BUSHING | |
| 6. | 323-739 | 1 | BRACKET | |
| 7. | 107-308 | 7 | SCREW (M12-1.75 X 75MM) | |
| 8. | 106-333 | 2 | SCREW (M12-1.75 X 40MM, 8.8) | |
| 9. | 107-507 | 9 | SCREW (M12-1.75 X 65MM) | |
| 10. | 106-685 | 17 | LOCKNUT(M12-1.75,PRV TRQ,10.9) | |
| 11. | 106-391 | 8 | WASHER (M12) | |
| 12. | 105-273 | 3 | SCREW (M12-1.75 X 30MM) | |
| 13. | 106-709 | 4 | FLG LK NUT (M12-1.75) | |
| 14. | 308-917 | - | STOW BAR ASSEMBLY | |

NOT SHOWN:


324-465 1 RIGHT TIE DOWN ASSEMBLY
 324-466 1 LEFT TIE DOWN ASSEMBLY

FOOTNOTES:

I. INCLUDES REF. NO.'S 1 THRU 13, 051-384 INSTRUCTIONS, AND TIE DOWN ASSEMBLIES (NOT SHOWN)

NOTE:

PIPE BOX LOADER

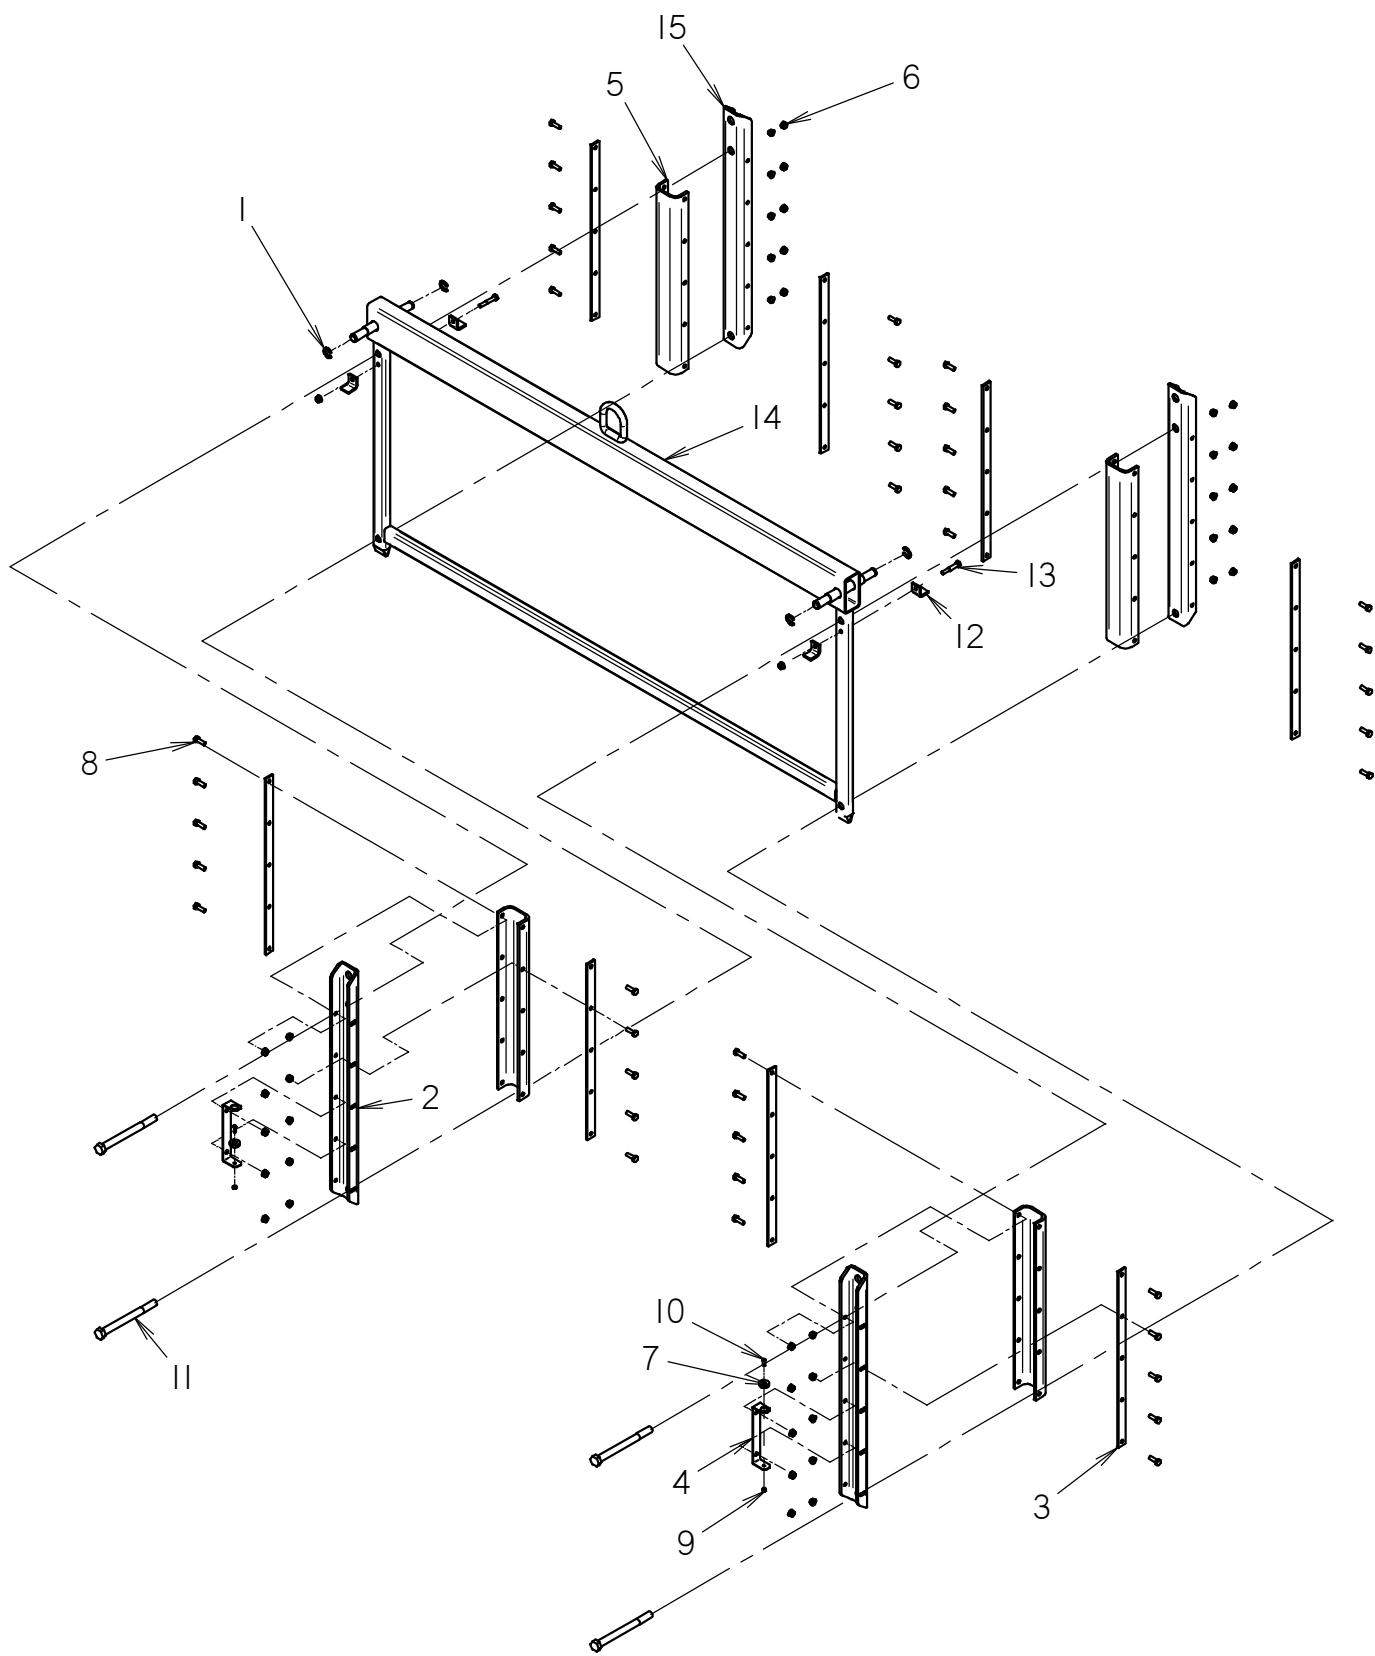

PIPE BOX LOADER

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|--------------------------------|-----------------------------|
| | 101-167 | - | PIPE BOX LOADER | INCLUDES REF NO'S 1 THRU 15 |
| 1 | I15-503 | 4 | KLIP RING (.750") | |
| 2 | 325-857 | 2 | CHANNEL | |
| 3 | I18-380 | 8 | CLAMP BAR | |
| 4 | I77-090 | 2 | STOW BAR | |
| 5 | 325-856 | 4 | RUBBER STRIP | SEE FOOTNOTE I |
| 6 | I06-386 | 42 | FLG LOCKNUT (M8-1.25) | |
| 7 | I08-182 | 2 | MAGNET (25 MM) | |
| 8 | I05-806 | 40 | SCREW (M8-1.25 X 25MM) | |
| 9 | I06-850 | 2 | LOCKNUT (M5-0.80) | |
| I0 | I08-183 | 2 | SCREW (M5-0.8 X 16MM,CSK PLPS) | |
| I1 | I06-612 | 4 | SCREW (M16-2.00 X 180MM, 10.9) | |
| I2 | 363-317 | 4 | PROP BAR MOUNT TAB | USE WITH JTI220 ONLY |
| I3 | I06-329 | 2 | SCREW (M8-1.25 X 50MM) | USE WITH JTI220 ONLY |
| I4 | 325-907 | 1 | LIFT TUBE | |
| I5 | 325-867 | 2 | INSIDE CHANNEL | |


NOT SHOWN:

FOOTNOTES:

- I. APPLY 256-665 ADHESIVE TO FRONT FACE OF CHANNELS (REF. 2 & 15) BEFORE ASSEMBLING RUBBER STRIP (REF. 5)

NOTE:

TRANSPORT PIPE BOX

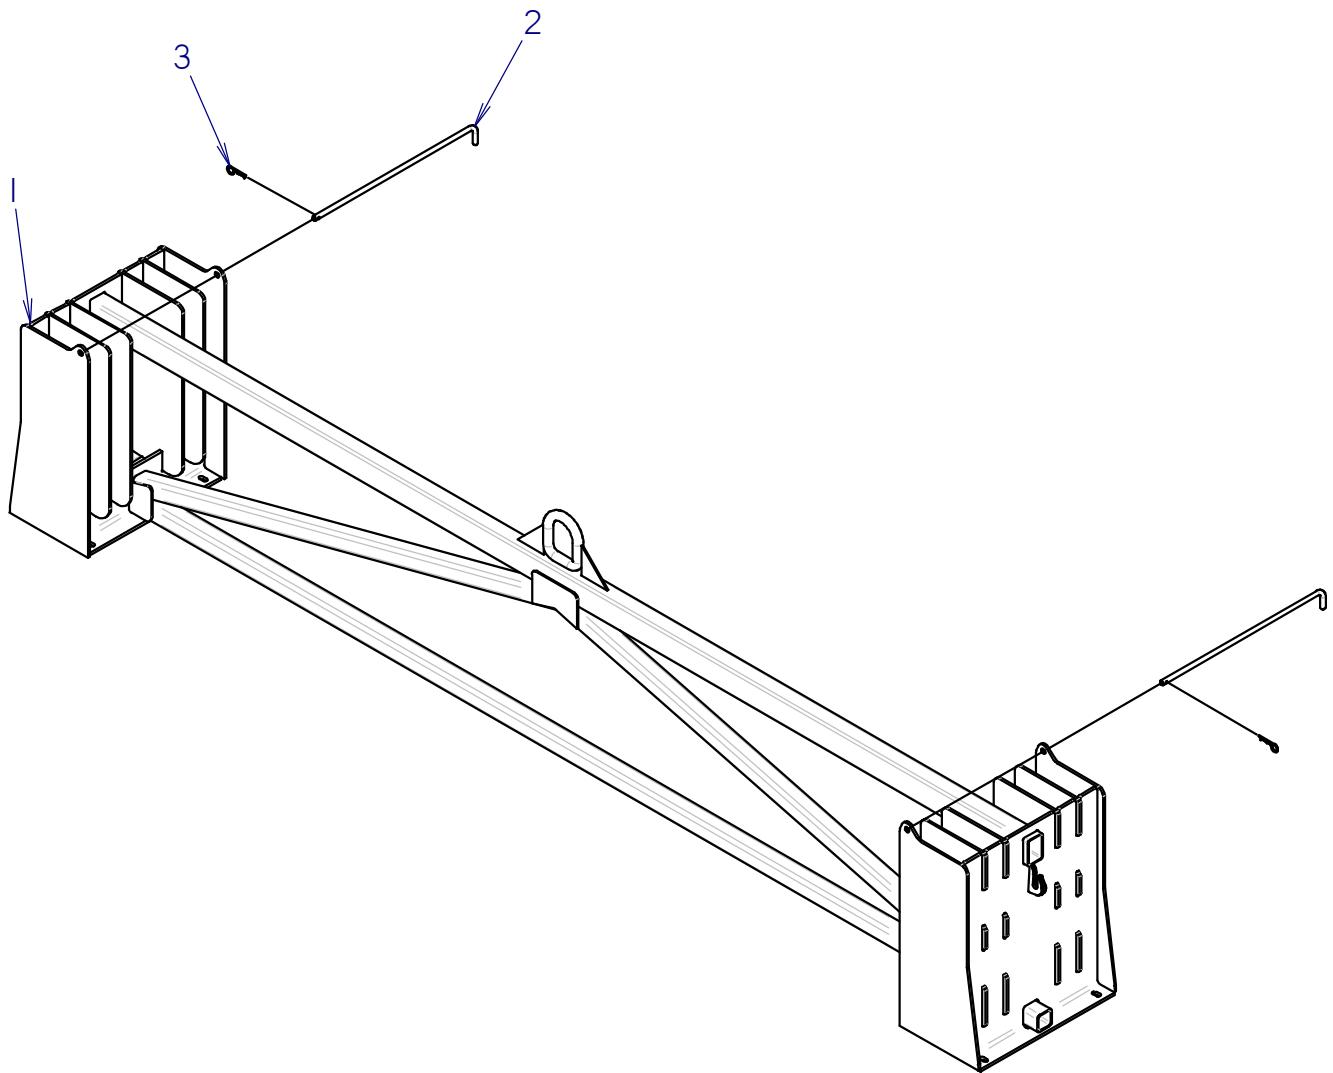

TRANSPORT PIPE BOX

| REF NO. | PART NUMBER | QTY | DESCRIPTION | REMARKS |
|---------|-------------|-----|-----------------------------|---------------------------|
| | 329-873 | - | AUXILIARY PIPE BOX | INCLUDES REF NOS 1 THRU 3 |
| 1 | 329-857 | 1 | TRANSPORT PIPE BOX | |
| 2 | I77-028 | 2 | TOP PIN | |
| 3 | II0-033 | 2 | HAIR CLIP PIN (1/8" X 1/2") | |

NOT SHOWN:

FOOTNOTES:

NOTE:

NOTES:

MISCELLANEOUS

ID0135063

SAE Bolt and Nut Torque Value Chart

Grade 5: UNC or UNF Thread

| Size | Hex nut, or bolt tapped into hex nut, or d&t hole | | Hex top deformed locknut | | Flange nut, locknut, or bolt tapped into flange nut or d&t* hole | |
|-------|---|------|--------------------------|------|--|------|
| | ft•lb | N•m | ft•lb | N•m | ft•lb | N•m |
| 1/4 | 12 | 16 | 8 | 11 | 20 | 27 |
| 5/16 | 25 | 34 | 15 | 20 | 45 | 60 |
| 3/8 | 40 | 54 | 25 | 34 | 75 | 100 |
| 7/16 | 65 | 90 | 40 | 55 | 125 | 170 |
| 1/2 | 100 | 135 | 60 | 80 | 190 | 260 |
| 9/16 | 150 | 200 | 90 | 125 | 270 | 370 |
| 5/8 | 200 | 270 | 120 | 165 | 370 | 500 |
| 3/4 | 350 | 475 | 210 | 285 | 650 | 880 |
| 7/8 | 560 | 760 | 340 | 460 | 1250 | 1425 |
| 1 | 840 | 1140 | 500 | 680 | 1580 | 2145 |
| 1-1/8 | 1030 | 1400 | 320 | 840 | 1950 | 3645 |
| 1-1/4 | 1460 | 1980 | 880 | 1195 | 2760 | 3475 |

Grade 8: UNC or UNF Thread

| Size | Hex nut, or bolt tapped into hex nut, or d&t hole | | Hex top deformed locknut | | Flange nut, locknut, or bolt tapped into flange nut or d&t* hole | |
|-------|---|------|--------------------------|------|--|------|
| | ft•lb | N•m | ft•lb | N•m | ft•lb | N•m |
| 1/4 | 14 | 19 | 10 | 14 | 24 | 33 |
| 5/16 | 30 | 40 | 18 | 25 | 50 | 70 |
| 3/8 | 55 | 73 | 35 | 50 | 90 | 125 |
| 7/16 | 85 | 115 | 50 | 70 | 140 | 190 |
| 1/2 | 130 | 175 | 80 | 110 | 220 | 300 |
| 9/16 | 190 | 260 | 110 | 150 | 310 | 420 |
| 5/8 | 260 | 355 | 160 | 245 | 430 | 585 |
| 3/4 | 450 | 610 | 270 | 365 | 750 | 1015 |
| 7/8 | 730 | 990 | 440 | 600 | 1210 | 1640 |
| 1 | 1090 | 1480 | 650 | 880 | 1320 | 2465 |
| 1-1/8 | 1550 | 2100 | 930 | 1260 | 2580 | 3500 |
| 1-1/4 | 2180 | 2955 | 1310 | 1780 | 3640 | 4935 |

*drilled and tapped

Metric Bolt and Cap Screw Torque Values

| Size | Class 4.8 | | | | Class 8.8 and 9.8 | | | | Class 10.9 | | | | Class 12.9 | | | |
|------|------------|-------|------|-------|-------------------|-------|------|-------|------------|-------|------|-------|------------|-------|------|-------|
| | Lubricated | | Dry | | Lubricated | | Dry | | Lubricated | | Dry | | Lubricated | | Dry | |
| | N·m | ft·lb | N·m | ft·lb | N·m | ft·lb | N·m | ft·lb | N·m | ft·lb | N·m | ft·lb | N·m | ft·lb | N·m | ft·lb |
| M6 | 4.8 | 3.5 | 6 | 4.5 | 9 | 6.5 | 11 | 8.5 | 13 | 9.5 | 17 | 12 | 15 | 11.5 | 19 | 14.5 |
| M8 | 12 | 8.5 | 15 | 11 | 22 | 16 | 28 | 20 | 32 | 24 | 40 | 30 | 37 | 28 | 47 | 35 |
| M10 | 23 | 17 | 29 | 21 | 43 | 32 | 55 | 40 | 63 | 47 | 80 | 60 | 75 | 55 | 95 | 70 |
| | | | | | | | | | | | | | | | | |
| M12 | 40 | 29 | 50 | 37 | 75 | 55 | 95 | 70 | 110 | 80 | 140 | 105 | 130 | 95 | 165 | 120 |
| M14 | 63 | 47 | 80 | 60 | 120 | 88 | 150 | 110 | 175 | 130 | 225 | 165 | 205 | 150 | 260 | 190 |
| M16 | 100 | 73 | 125 | 92 | 190 | 140 | 240 | 175 | 275 | 200 | 350 | 225 | 320 | 240 | 400 | 300 |
| | | | | | | | | | | | | | | | | |
| M18 | 135 | 100 | 175 | 125 | 260 | 195 | 330 | 250 | 375 | 275 | 475 | 350 | 440 | 325 | 560 | 410 |
| M20 | 190 | 140 | 240 | 180 | 375 | 275 | 475 | 350 | 530 | 400 | 675 | 500 | 625 | 460 | 800 | 580 |
| M22 | 260 | 190 | 330 | 250 | 510 | 375 | 650 | 475 | 725 | 540 | 925 | 675 | 850 | 625 | 1075 | 800 |
| | | | | | | | | | | | | | | | | |
| M24 | 330 | 250 | 425 | 310 | 650 | 475 | 825 | 600 | 925 | 675 | 1150 | 850 | 1075 | 800 | 1350 | 1000 |
| M27 | 490 | 360 | 625 | 450 | 950 | 700 | 1200 | 875 | 1350 | 1000 | 1700 | 1250 | 1600 | 1150 | 2000 | 1500 |
| M30 | 675 | 490 | 850 | 625 | 1600 | 950 | 1650 | 1200 | 1850 | 1350 | 2300 | 1700 | 2150 | 1600 | 2700 | 2000 |
| | | | | | | | | | | | | | | | | |
| M33 | 900 | 675 | 1150 | 850 | 1750 | 1300 | 2200 | 1650 | 2500 | 1850 | 3150 | 2350 | 2900 | 2150 | 3700 | 2750 |
| M36 | 1150 | 850 | 1450 | 1075 | 2250 | 1650 | 2850 | 2100 | 3200 | 2350 | 4050 | 3000 | 3750 | 2750 | 4750 | 3500 |

Do not use these values if a different torque value or tightening procedure is given for specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class fasteners.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to strength of original.

Make sure fastener threads are clean and that the threads are properly started. This will prevent them from cross threading or galling when tightened.

Tighten plastic insert or crimped type steel locknuts to approximately 50% of dry torque indicated on chart. Apply torque to the nut - not the bolt head. Tighten toothed or serrated type locknuts to full torque value.

LUBRICATED means coated with lubricant. DRY means plain or zinc plated without any type of lubricant.

Hydraulic Cylinder Bolt Torque Chart

| Bolt Size (inch) | Bolt Part No. | Cylinder Repair Kit Part No. | Torque (ft•lb) | Torque (N•m) |
|------------------|---------------|------------------------------|----------------|--------------|
| 1/2 | 106-096 | 190-165 | 90-100 | 120-135 |
| 5/8 | 106-097 | 190-166 & 190-169 | 180-200 | 245-270 |
| 3/4 | 106-098 | 190-167 & 190-170 | 290-325 | 395-440 |
| 7/8 | 106-122 | 190-172 & 190-174 | 410-640 | 550-625 |
| 1 | 106-145 | 190-175 & 190-189 | 630-700 | 855-950 |
| 1-1/8 | 106-146 | 190-177 | 770-850 | 1045-1170 |

As a general rule:

- 1/2-inch bolts are used in cylinders with 1-inch rods
- 5/8-inch bolts are used in cylinders with 1 1/4-inch rods
- 3/4-inch bolts are used in cylinders with 1 1/2-inch rods
- 7/8-inch bolts are used in cylinders with 1 3/4-inch rods
- 1-inch bolts are used in cylinders with 2-inch rods (one with 1 3/4-inch)
- 1-1/8-inch bolts are used in cylinders with 2-1/4-inch rods

IMPORTANT: Do not reuse cylinder piston bolts when rebuilding a hydraulic cylinder. Each cylinder repair kit contains a new bolt. Use it. Lubricate lightly and torque to value shown on chart.

SAE & ORS Hydraulic Fitting Replacement O-Ring Chart

| Fraction Size | Dash Size | SAE (Port Seal O-Ring) | | ORS (Face Seal O-Ring) | |
|---------------|-----------|---------------------------|------------|---------------------------|------------|
| | | Thread Size | O-Ring P/N | Thread Size | O-Ring P/N |
| 1/16 | 1 | NA | NA | NA | NA |
| 1/8 | 2 | 5/16 - 24 | NA | NA | NA |
| 3/16 | 3 | 3/8 - 24 | NA | NA | NA |
| 1/4 | 4 | 7/16 - 20 | 155-760 | 9/16 - 18 | 157-037 |
| 5/16 | 5 | 1/2 - 20 | NA | NA | NA |
| 3/8 | 6 | 9/16 - 18 | 155-705 | 11/16 - 16 | 157-038 |
| 1/2 | 8 | 3/4 - 16 | 155-706 | 13/16 - 16 | 157-039 |
| 5/8 | 10 | 7/8 - 14 | 155-707 | 1 - 14 | 157-040 |
| 3/4 | 12 | 1-1/16 - 12 | 155-709 | 1-3/16 - 12 | 157-017 |
| 7/8 | 14 | 1-3/16 - 12 | 155-747 | NA | NA |
| 1 | 16 | 1-5/16 - 12 | 155-748 | 1-7/16 - 12 | 155-714 |
| 1-1/4 | 20 | 1-5/8 - 12 | 155-702 | 1-11/16 - 12 | NA |
| 1-1/2 | 24 | 1-7/8 - 12 | 157-001 | 2 - 12 | NA |
| 2 | 32 | 2-1/2 - 12 | NA | NA | NA |
| 2-1/2 | 40 | 3 - 12 | NA | NA | NA |
| 3 | 48 | 3-1/2 - 12 | NA | NA | NA |

Thread size indicates the diameter of the threaded area in fractions of an inch and number of threads per inch.

NA = not a current CMW part numbered o-ring, or dash size does not occur in current CMW applications

SAE = straight thread fitting that seals by sandwiching a hard o-ring between a shoulder on the male part and an angular surface at the mouth of the female port.

ORS = o-ring face seal; a type of fitting that seals by compressing a hard, captive o-ring between two flat parallel faces, one grooved for the o-ring and the other plain to act as the sealing surface

JT1220 T4i

Related Publications

| Component | Ass'y | P/N |
|---------------|-------------------------------------|----------|
| Model: | | |
| JT1220 | Parts Manual | 053-1263 |
| JT1220 | Operators Manual | 053-1383 |
| JT1220 | Repair Guide (Service Manual) | N/A |
| JT1220 | Technical Supplement..... | 053-1350 |

Engine:

| | | | |
|--------------------|-------------------------------|---------------|---------|
| Cummins 60HP. | Parts Manual – B3.3. | 195-1320 | 053-103 |
| Cummins..... | Operators Manual – B3.3. | | 055-069 |
| Cummins... | Repair Manual – B3.3..... | | 055-070 |

Filters

Engine:

| | |
|--|---------|
| Air Filter Parts Ass'y | 194-297 |
| Element (primary) | 194-759 |
| Element (secondary)..... | 194-758 |
| Oil Filter Element (spin-on) – Cummins B3.3..... | 194-454 |
| Fuel Filter Element (spin-on) – Cummins B3.3 | 194-461 |

Hydraulic:

| | |
|--|---------|
| Oil Filter Element (1-1/2-UNF, spin-on, Replacement) | 153-792 |
|--|---------|

Optional Kits

| | |
|---|---------|
| O-ring Repair Kit - FLG, ORS & SAE (15 different O-rings) | 190-051 |
| O-ring Repair Kit - Field Service (46 different O-rings) | 190-052 |



**Ditch
Witch®**

Parts Manual Change Request

(Please print clearly)

Date: _____

Dealer No. (required): _____

Your Name: _____

Position: _____

Phone: _____

Fax: _____

E-mail: _____

Publication Information:

Parts Manual No.: _____ - _____

Model: _____

Illustration Part No.:

Manual Page No.:

- | | |
|------------------------|----------|
| 1. _____ - _____ | 1. _____ |
| 2. _____ - _____ | 2. _____ |
| 3. _____ - _____ | 3. _____ |

Nature of Change Request:

Text

Graphics

Missing Information

Describe change requested (*if possible, include copy of publication page with changes marked.*):

**Please fax completed form to
Parts Manual Department (580) 572-3525**

Thank you for taking the time to submit this request. We will contact you if further information is needed to process your request.

A Note To Ditch Witch Equipment Owners:

If your equipment was purchased through a Ditch Witch dealer, there is no need to read further.

However, if you purchased from any other source, please fill out the form on the reverse side and return it to us.

This will enable you to receive updates on this equipment as well as information on new products of interest.

Thanks for using Ditch Witch equipment.

(Please Fold Along This Line And Seal At Bottom With Tape)

.....




NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS

PERMIT NO 23 PERRY OKLAHOMA

POSTAGE WILL BE PAID BY

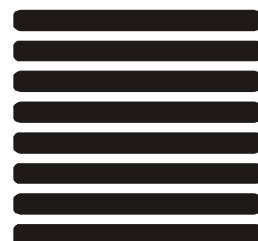

**The Charles Machine Works, Inc.
P.O. Box 66
Perry, Oklahoma 73077-9989**



ID0040564

Ditch Witch® Registration Card

Please Type or Print All Information

Purchaser's Company Name

Attention

Street Address or P.O. Box

City

County

State

Zip

Nation

()

Phone Number With Area Code

Model

Serial Number

Attachments/Accessories

Serial Numbers

Attachments/Accessories

Serial Numbers

Attachments/Accessories

Serial Numbers

Name of Ditch Witch Dealership

Your Signature