

## Operating instructions

Hydraulic excavator / Material handler  
R 914 Litronic

from serial number 11229

### Document identification

**Order number:** 10024212  
**Edition:** 5 / 2006  
**Valid for:** R 914 Litronic from serial number 11229  
**Author:** LFR - Technical documentation department

### Product identification

**Manufacturer:** LIEBHERR France SAS  
**Type:** R 914 Litronic  
**Type no.:** 960 / 961 / 962 / 963 / 964 / 965 / 966 / 1019 / 1061  
**Conformity:** CE

### Address

Liebherr France SAS  
2 avenue Joseph Rey  
B.P. 90287 F - 68005 Colmar Cedex

## Machine data

Please fill in the following data when you receive your machine.  
This will also be of use to you when ordering replacement parts.

### Vehicle ident. number:

WLHZ . . . . . ZK . . . . .

### Construction year:

. . . . .

### First start-up date:

. . / . . / . .

# Preface

These operating instructions have been written for the **machine operator** and for the **maintenance personnel** of the machine.

They contain:

- the technical data.
- the safety requirements.
- the operating instructions.
- the maintenance instructions.

**The operating instructions are to be read and used carefully by all persons who carry out work with or on the machine before putting the machine into service for the first time and later, at regular intervals.**

Work with or on the machine includes, for example:

- **Operation** including setting up and equipping, rectifying malfunctions during the course of work, resolving production dropouts, care, disposal of operating and process materials.
- **Maintenance**, including maintenance, inspection and repair work.
- **Transportation** or loading the machine.

The operating instructions allow the machine operator to familiarize himself with the machine more easily and prevent malfunctions occurring due to improper operation.

The observance of the operating and maintenance instructions by maintenance personnel:

- increases reliability in use.
- extends the service life of your machine.
- reduces repair costs and downtime.

**The operating instructions belong with the machine. Place a copy in an easily reached position on the cab storage shelf.**

The operating and maintenance instructions should also incorporate information on current national regulations for accident prevention and protection. In addition to the operating instructions and legally binding regulations on accident prevention which apply in the user country and at point of use, authorized specialist rules for safe and correct working procedures are also to be observed.

These operating and maintenance instructions contain all the information required for operating and maintaining your machine.

- Some illustrations in these operating instructions may depict details and working devices which differ to your machine.
- In some illustrations, protective devices and covers have been removed in the interests of better presentation.
- Improvements, which are always being incorporated into our machines, may result in changes to your machine which are not yet indicated in these operating instructions.

However, should you require any further explanations or information, LIEBHERR's technical documentation, sales school and customer service departments are avail-

able for your convenience.

You will appreciate that LIEBHERR warranty claims made on the basis of improper operation, unsatisfactory maintenance, use of unauthorized operating materials or non-adherence to safety regulations cannot be recognized.

LIEBHERR will annul any and all obligations incurred by LIEBHERR and / or its dealerships, such as guarantee commitments, service contracts etc. without prior notice in the event that replacement parts other than original LIEBHERR parts or parts purchased from LIEBHERR are used for maintenance or repair work.

## **Modifications, conditions, copyright**

We reserve the right to make modifications without prior notice in the course of technical developments.

The information and illustrations contained in these operating instructions may neither be copied and distributed, nor used for the purposes of competition. All rights are expressly reserved in accordance with copyright laws.

The warranty and liability conditions of LIEBHERR's general business conditions will not be enlarged upon through the above information.

# Content

<b>1</b>	<b>Product description</b> .....	<b>1-1</b>
1.1	Assembly - overview .....	1-1
1.1.1	Machine with backhoe attachment .....	1-1
1.1.2	Uppercarriage .....	1-2
1.1.3	Undercarriage .....	1-3
1.2	Technical data .....	1-3
<b>2</b>	<b>Safety information, signs</b> .....	<b>2-1</b>
2.1	Symbols in the operating instructions .....	2-1
2.2	Use in accordance with the regulations .....	2-2
2.3	Safety instructions .....	2-2
2.3.1	General safety instructions .....	2-2
2.3.2	Avoidance of crushing and burns .....	2-3
2.3.3	Avoidance of fire and explosions .....	2-4
2.4	Signs on the machine .....	2-5
2.4.1	Introduction .....	2-5
2.4.2	Arrangement of signage .....	2-6
2.4.3	Explanation of signage .....	2-7
2.4.4	Nameplates on the machine .....	2-11
<b>3</b>	<b>Control and operation</b> .....	<b>3-1</b>
3.1	Operating and control elements .....	3-1
3.1.1	Overview of the operator's standing position .....	3-1
3.1.2	Arrangement of joystick .....	3-3
3.1.3	Keypad .....	3-4
3.1.4	Monitoring display .....	3-8
3.1.5	Main screen .....	3-11
3.2	Access and equipment of the cab .....	3-27
3.2.1	<a href="#">Safely getting up</a> .....	<a href="#">3-27</a>
3.2.2	<a href="#">Safely getting down</a> .....	<a href="#">3-28</a>
3.2.3	Entering or leaving the cab .....	3-29
3.2.4	Height adjustable cab (optional extra) .....	3-31
3.2.5	Safety lever .....	3-33
3.2.6	Operator's seat .....	3-34
3.2.7	Windscreen .....	3-38
3.2.8	Sun visor .....	3-38
3.2.9	Sun visor on left door glass (optional extra) .....	3-38
3.2.10	Interior lighting - Safety hammer .....	3-39
3.2.11	Fire extinguisher* .....	3-39
3.2.12	Windscreen wiper .....	3-40
3.2.13	Lighting .....	3-42
3.2.14	Heater and air conditioner .....	3-43
3.3	Operation .....	3-47
3.3.1	Safety instructions .....	3-47
3.3.2	Stopping the machine safely .....	3-48
3.3.3	Starting / stopping the machine .....	3-48
3.3.4	Delay engine cut-out 5 min. (option) .....	3-54
3.3.5	indicatorStarting aids .....	3-56
3.3.6	Jump start procedure .....	3-58
3.3.7	Emergency operations .....	3-58
3.3.8	Driving .....	3-61
3.3.9	Drive warning device (optional extra) .....	3-64
3.3.10	Towing the machine .....	3-64
3.4	Working with the machine .....	3-65

3.4.1	Safely getting up or down .....	3-65
3.4.2	Working safely with the machine .....	3-66
3.4.3	Low idle automatic .....	3-70
3.4.4	Operating the swing gear .....	3-71
3.4.5	Working position .....	3-74
3.4.6	Joystick functions when setting up the machine .....	3-74
3.4.7	Lowering the work equipment when the engine is not running .....	3-76
3.4.8	Turning, rotating, bolting and unbolting the add-on unit .....	3-77
3.4.9	Magnetic system (special equipment) .....	3-78
3.4.10	Add-on kits AHS 1, AHS 11 and AHS 12 (optional extra) .....	3-79
3.4.11	Add-on kits Tool Control AHS 1, AHS 11 and AHS 12 (optional extra) .....	3-82
3.4.12	Foot pedals travel control with add on kits AHS (optional extra) .....	3-84
3.4.13	Adjust boom to side .....	3-85
3.4.14	Adjust boom to side (Tool Control) .....	3-87
3.4.15	Transferring controls (optional extra) .....	3-91
3.4.16	Transferring controls PCSA - LH (optional extra) .....	3-92
3.4.17	Transferring controls PCSA - J.Deere (optional extra) .....	3-93
3.4.18	Transferring AHS controls (optional extra) .....	3-94
3.4.19	Dozer blade (only for type 1061) .....	3-95
3.4.20	Mechanical stanchion cylinder shut-down (option) .....	3-96
3.4.21	Overload warning device .....	3-98
3.4.22	Overload warning device .....	3-99
3.5	Attaching and dismounting equipment parts .....	3-104
3.5.1	Attaching and removing equipment parts safely .....	3-104
3.5.2	Removing and installing equipment bolts safely .....	3-104
3.5.3	Attaching and dismounting the bucket .....	3-105
3.5.4	Attaching and dismounting the bucket with improved sealing .....	3-107
3.5.5	Attaching and dismounting the grab on stick .....	3-110
3.5.6	Attaching and dismounting the grab on stick .....	3-113
3.5.7	Attaching and dismounting the grab on the industrial stanchion .....	3-115
3.5.8	Attaching and dismounting the stick to the boom .....	3-118
3.5.9	Mechanical quick-change adapter (optional extra) .....	3-120
3.5.10	Hydraulic quick-change adapter (optional extra) .....	3-125
3.5.11	LIKUFIX – hydraulic coupling system (optional extra) .....	3-131
3.6	General working methods .....	3-134
3.6.1	Minimum impact working methods for your machine .....	3-134
3.6.2	Preparatory activities .....	3-134
3.6.3	Working with the backhoe bucket .....	3-135
3.6.4	Loading the transport vehicle .....	3-137
3.6.5	Working with the clamshell bucket (construction equipment) .....	3-138
3.6.6	Hoisting work .....	3-140
3.6.7	Working with the hydraulic hammer .....	3-140
3.6.8	Working with the grapple (industrial equipment) .....	3-142
3.6.9	Skimming .....	3-143
3.7	Transport .....	3-144
3.7.1	Transporting the machine safely .....	3-144
3.7.2	Transporting the machine on a low loader .....	3-145
3.7.3	Loading the machine with a crane .....	3-147
<b>4</b>	<b>Malfunctions .....</b>	<b>4-1</b>
4.1	Error code charts .....	4-2
4.1.1	Sensors .....	4-2
4.1.2	Regulating circuit .....	4-3
4.1.3	Stanchion cylinder shut-down (only for machines which handle material or for machines with optional extras) .....	4-3
4.1.4	Keypad .....	4-4
4.1.5	Display .....	4-4
4.1.6	Coding error .....	4-4

4.1.7	Other errors .....	4-5
4.1.8	Error due to warning symbols in SY field.....	4-5
4.2	Faults and remedies .....	4-6
4.2.1	Diesel engine and fuel system.....	4-6
4.2.2	Hydraulic system .....	4-7
4.2.3	Transmission .....	4-8
4.2.4	Electrical system.....	4-8
4.2.5	Heating/air-conditioning system .....	4-9
4.2.6	Work equipment .....	4-9
4.3	Fuses and relays .....	4-9
4.3.1	Fuse box E50 .....	4-9
4.3.2	ESP02 board .....	4-11
4.3.3	A1001 board.....	4-13
<b>5</b>	<b>Maintenance .....</b>	<b>5-1</b>
5.1	Servicing the machine safely .....	5-1
5.1.1	General safety instructions .....	5-1
5.1.2	Cleaning .....	5-1
5.1.3	Crack testing.....	5-2
5.1.4	<a href="#">Welding, drilling, firing and grinding work.....</a>	<a href="#">5-3</a>
5.1.5	Process materials .....	5-3
5.1.6	Repair work .....	5-3
5.1.7	Electrical system.....	5-4
5.1.8	Hydraulic accumulator .....	5-5
5.1.9	Hydraulic hoses and sheathed cables .....	5-5
5.2	Maintenance access doors .....	5-6
5.2.1	Overview of access doors .....	5-6
5.2.2	Door lock .....	5-7
5.2.3	Engine hood lock.....	5-8
5.3	Lubricating and operating materials.....	5-8
5.3.1	General information on changing lubricating and operating materials .....	5-8
5.3.2	Lubrication chart .....	5-10
5.3.3	Lubricant chart.....	5-11
5.3.4	Operating material chart.....	5-12
5.4	Lubricating and operating material specifications.....	5-12
5.4.1	Lubrication oil for the diesel engine .....	5-12
5.4.2	Fuel.....	5-13
5.4.3	Transmission oil.....	5-18
5.4.4	Lubricating grease and other lubricants .....	5-18
5.4.5	Coolant .....	5-18
5.5	Diesel engine .....	5-25
5.5.1	Checking the oil level in the diesel engine.....	5-25
5.5.2	Changing the diesel engine oil .....	5-25
5.5.3	Ribbed V-belt for the A/C compressor and alternator installation.....	5-26
5.5.4	Oil separator .....	5-27
5.6	Cooling system .....	5-28
5.6.1	Checking and cleaning the cooling system .....	5-28
5.6.2	Checking the coolant level.....	5-29
5.6.3	Coolant antifreeze and anti-corrosion fluid .....	5-29
5.6.4	Changing water filters .....	5-29
5.6.5	Changing the coolant.....	5-30
5.6.6	Reversible fan drive (option).....	5-33
5.7	Fuel system .....	5-34
5.7.1	Refuelling.....	5-34
5.7.2	Electrical refuelling pump (optional extra) .....	5-35
5.7.3	Draining the fuel tank.....	5-36
5.7.4	Emptying and cleaning the fuel tank.....	5-36
5.7.5	Draining and changing fuel filter cartridges .....	5-37

5.7.6	Venting the fuel system .....	5-38
5.8	Dry air filter.....	5-39
5.8.1	Changing the main element.....	5-39
5.8.2	Changing the safety element.....	5-40
5.8.3	Monitoring the filtered air line.....	5-41
5.8.4	Bleeding the hydraulic cylinders .....	5-41
5.8.5	Bypass oil filter for hydraulic circuit (option) .....	5-42
5.8.6	Return oil filter for hydraulic hammer (option).....	5-43
5.8.7	Servicing the hydraulic cylinder .....	5-45
5.8.8	Replacing hydraulic hoses.....	5-46
5.9	Oil changes on components .....	5-47
5.9.1	General information .....	5-47
5.9.2	Slewing gear transmission – oil change .....	5-48
5.9.3	Travelling gear - changing the oil.....	5-49
5.10	Running gear .....	5-49
5.10.1	Checking the running gear component mountings .....	5-50
5.10.2	Monitoring the crawler tension.....	5-50
5.10.3	Retensioning the crawler .....	5-51
5.10.4	Releasing the crawler tension.....	5-51
5.10.5	Cleaning the running gear .....	5-52
5.11	Electrical system .....	5-52
5.11.1	Notes on the electrical system.....	5-52
5.11.2	Main battery switch.....	5-53
5.11.3	Battery care .....	5-54
5.11.4	Slip ring assembly (optional extra).....	5-55
5.12	Heating/air-conditioning system.....	5-55
5.12.1	Recirculated and fresh air filters .....	5-56
5.12.2	Heating system .....	5-57
5.12.3	Air-conditioning system.....	5-57
5.13	Greasing the machine.....	5-59
5.13.1	Changes in the lubrication circuit.....	5-59
5.13.2	Centralised lubrication system for uppercarriage and attachment.....	5-60
5.13.3	Standard manual lubrication .....	5-62
5.13.4	Semi-automatic greasing (optional extra) .....	5-64
5.13.5	Automatic greasing (optional extra) .....	5-66
5.13.6	Greasing buckets / shovel tilting device.....	5-67
5.13.7	Greasing the grab (optional extra) .....	5-68
5.14	Quick-change systems.....	5-69
5.14.1	Greasing the mechanical quick-change adapter (optional extra) .....	5-69
5.14.2	Hydraulic quick-change adapter (optional extra) .....	5-69
5.14.3	LIKUFIX (optional extra) .....	5-71
5.14.4	Checking and maintenance of quick change coupler .....	5-72
5.15	Drive unit brakes and swing gear brakes.....	5-73
5.16	General maintenance points .....	5-73
5.16.1	Replacing working parts .....	5-73
5.16.2	Replacing the teeth on the bucket .....	5-74
5.16.3	Welding work on the machine.....	5-75
5.17	Control and maintenance chart.....	5-76




# 1 Product description

## 1.1 Assembly - overview

This section comprises an overview of the machine and descriptions of the components shown.


### 1.1.1 Machine with backhoe attachment

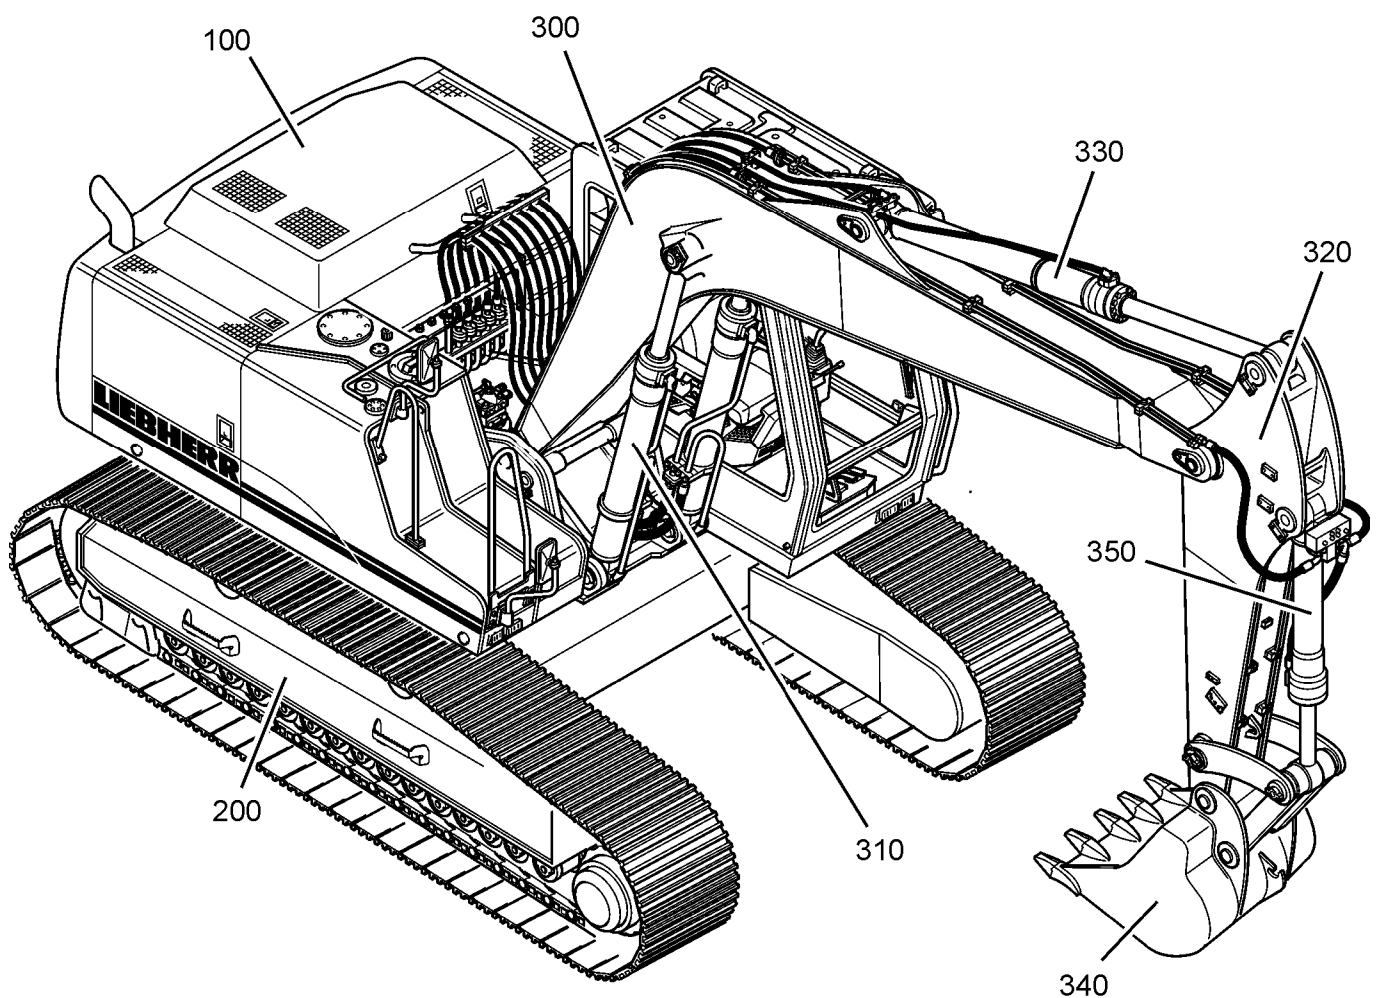

*Fig. 1-1 Machine with backhoe attachment*

100	Uppercarriage	310	Boom cylinder	330	Bucket
200	Undercarriage	320	Stiel	340	Bucket cylinder
300	Boom	320	Stiel cylinder		


## 1.1.2 Uppercarriage

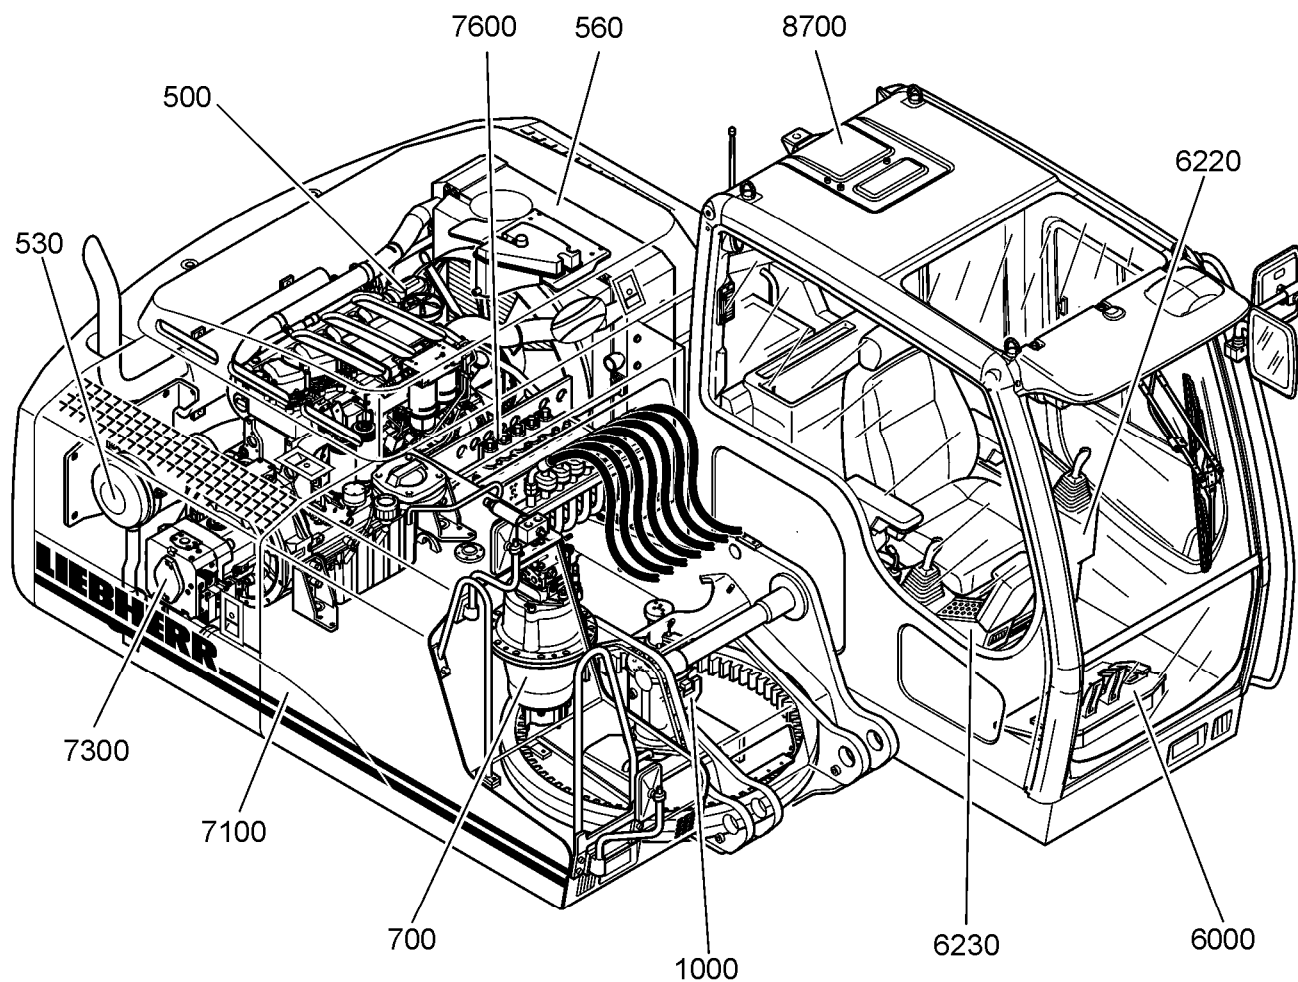

**Fig. 1-2** Uppercarriage

<b>500</b>	Diesel engine	<b>6220</b>	Control panel, left
<b>530</b>	Dry air filter	<b>6230</b>	Control panel, right
<b>560</b>	Radiator	<b>7100</b>	Hydraulic oil and fuel tank
<b>700</b>	Swing gear	<b>7300</b>	Hydraulic pump
<b>1000</b>	Rotary connection	<b>7600</b>	Control valve block
<b>6000</b>	Control cab	<b>8700</b>	Cab

### 1.1.3 Undercarriage

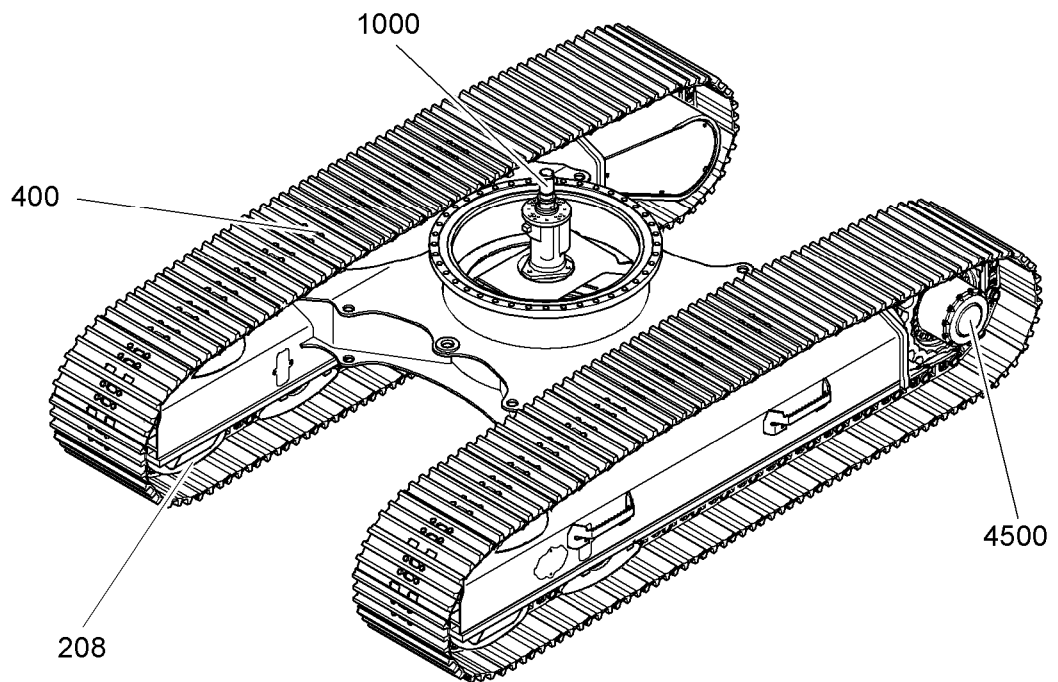

**Fig. 1-3** Undercarriage

**208** Idler  
**400** Track

**1000** Rotary connection  
**4500** Travel gear and sprocket

## 1.2 Technical data

This should be taken from the accompanying technical description.

# The crawler excavator.

# R 914 B

Litronic®

Operating Weight: 23.600 - 25.100 kg

Engine Output: 112 kW / 152 HP

Bucket Capacity: 0,30 - 1,40 m<sup>3</sup>



# LIEBHERR

# R 914 B

Litronic

## Technical Data:

---

Operating Weight: 23.600 - 25.100 kg  
Engine Output: 112 kW / 152 HP  
Bucket Capacity: 0,30 - 1,40 m<sup>3</sup>



## **Performance**

Liebherr crawler excavators feature state-of-the-art technology and high-quality workmanship. The most important components of the drive system are all produced by Liebherr factories and are perfectly coordinated to each other. This assures an effective performance, a high efficiency and longevity.

## **Reliability**

The high demand for performance and quality is consequently converted into landmark solutions to achieve the highest level of dependability and availability. Liebherr has 50 years experience in the production of hydraulic excavators and has an unparalleled competence in design and know-how.

## **Comfort**

Liebherr crawler excavators are particularly service-friendly: maintenance work is simply and quickly accomplished due to well accessible service points. The operator station is designed according to the latest ergonomic know-how and is comfortably furnished and the machine is easy and accurately to operate due to the electric-over-hydraulic controls.

## **Economy**

Liebherr crawler excavators stand for a maximum of productivity. The Litronic system assures an optimal efficiency in the interaction of excavator hydraulics with the electronic functions. A wide selection of attachments, accessory tools and varied dimensioned undercarriages provide the correct choice for each application.





#### Liebherr diesel engine

- Especially created and designed for construction equipment
- High performance reserves
- Long life expectancy
- Lubrication supply capability on up to 100% incline
- Maximum performance at low engine speed
- Complies with emission standards 97/68/CEE and Tier 2





# Performance

Typical for the R 914 B are excellent digging- and loading performances, high lift capacities and short cycle times. The drive system as designed and manufactured by Liebherr is known for high output reserves.

## High Loading Performance

### High bucket fill factor

The digging tools as manufactured by Liebherr are especially designed to provide high fill factors. The bucket shape provides good material penetration and assures excellent production.

### High digging- and breakout forces

Due to the optimized attachment geometry, the R 914 B provides high digging- and breakout forces. These exceptional forces are particularly made possible by the largely dimensioned stick- and bucket hydraulic cylinders.

### Short cycle times

High displacement hydraulic pumps make short cycle times possible. The perfectly coordinated and simultaneous functions are a result of the exactly matched Liebherr components such as engine, pumps, swing drive and control unit.

## Solid footing

### Stability

An effective implementation of the digging forces is achieved due to the weight concentration in the undercarriage. The excellent stability under all ground conditions is one of the outstanding features of the R 914 B.

### Outstanding lift capacities

The deciding factor for the high lift capacities is the low center of gravity of the machine combined with the wide base of the undercarriage.

### Large ground clearance

The large distance between carbody and the ground assures an extensive protection of the undercarriage components as well as easy traveling even under difficult ground conditions.

### Heavy-duty undercarriage

- The combination of high-tensile strength steel plates and steel castings to minimize tension
- Depending on the application, a range of various undercarriage sizes is available



### Multi-function tool carrier

- For every material and application the correct digging tool
- Change-over of mechanical and hydraulic tool in a matter of seconds due to a modular quick coupler system designed and manufactured by Liebherr:
  - Likufix for the change-over of all hydraulic and mechanical tools from the dash board in the operator station
  - Liebherr quick coupler adapter for the change-over of mechanical tools





#### Key technologies made by Liebherr

- Decades of experience with the development, design and manufacturing of components
- Engines, hydraulic pumps and – motors, swing- and travel gear-boxes as well as electronic elements from in-house production
- Manufacturing centers for components in Germany and Switzerland produce according to the latest production methods



# Reliability

Liebherr crawler excavator proof every day at construction sites all over the world their high availability. Longstanding design experience in building excavators, continuous further development and the utilization of the latest technologies make the R 914 B to be one of the most powerful and dependable excavators.

## Quality to the last detail

### Power package

The individual components of the drive system, made by Liebherr, e.g. construction equipment engine, travel- and swing gearboxes, hydraulic pumps, motors and cylinders are perfectly matched to each other. As elements of a total system that is designed to produce long life expectancy, the highest degree of dependability is accomplished.

### Generously dimensioned hydraulic system

The large fluid capacity of the hydraulic system and reservoir assures continuously good fluid properties over the entire interval. The hydraulic components are less strained and provide consequently a longer life expectancy.

## Heavy-duty attachments with long-term advantage

### Robust attachment concept

Due to the utilization of steel castings at every pivot point, the attachment is consistently able to withstand the most server demands.

### Optimized stress flow

The swing ring tower is a one-piece, cold-rolled item, which transfers the forces – following the principal of “stress flow design” - into the undercarriage. As lasting protection against dirt and damage, Liebherr swing rings are sealed and have internal teeth.

## Safety of functionality

### Automatic control of functionality

The operator can pay full attention to the job on hand because the integrated on-board electronic system balances continuously the actual with pre-determined rated data. Discrepancies of the actual operational parameter are shown on the display.

### Data storage

The on-board computer stores eventual abnormalities from the rated data. The data can be readily recalled and transferred by radio transmission to a service center.

### Liebherr hydraulic cylinders

- Cylinder sizes matched to each model
- High-quality coating of piston rod
- Special gasket packages for piston rod and piston
- Sealed special bushings for pin mountings
- End-cushion at each end



### Unique design for hoist cylinder mounting

- The R 914 B is the only machine in this class with two separate pins at the upper deck end
- A maximum of strength even at high load factor
- Design with bell-house castings, therefore minimized effort with assembly and dis-assembly



#### Hydraulic reservoir stop valve

- The oil flow to the hydraulic system can be turn-off with a flick of the wrist
- No drainage of fluid necessary for service or repair work on the hydraulic system



# Comfort

All service points on the upper deck are easy accessible and allow a quick and comfortable execution of all maintenance work. The operator station is designed according to the latest ergonomic know-how and provides excellent visibility to the entire work area. This helps to maintain concentration and productivity over a long workday.

## Standard maintenance advantage

### Easy accessibility

All service points are easy accessible and the R 914 B features a central lubrication point as standard feature. The daily preventive maintenance can be completed in a short period of time.

### Maintenance friendly track components

Top rollers, track rollers and track link pins are lubricated for lifetime. The grease cylinder of the idler tensioner is sealed against dirt.

## Workplace with a comfortable atmosphere

### Operator station

The generously large windows provide excellent visibility to the work- as well as surrounding area.

### Comfortable operator seat

Design and layout of seat, console and display are perfectly coordinated in a total concept.

### Comfortable operation

The clearly arranged indicator display with all-important parameters of the machine's condition is within easy view of the operator.

## Effective modes for top performance

### 4 Modes

Four fixed working modes for output discharge facilitate an effective and efficient operation.

### Eco-Mode

For high output at big fuel savings.

### Power-Mode

For heavy-duty digging-and loading performance under severe conditions.

### Lift-Mode

For precise handling of heavy loads.

### Fine-Mode

For fine control at precision work.

### Easy entrance

- Access steps on both sides allow comfortable access to all service points
- Handrails are ergonomically correct positioned for safe access



### Liebherr operator station

- Optimized visibility with large, wide windows
- Operator seat individually adjustable and cushioned
- Air conditioner standard equipment



#### Ideal hauling conditions

- Practical shipping dimension due to optimal attachment geometry
- The machine can be transported on a standard low-boy
- No road restrictions



# Economy

The R 914 B is a multi-purpose tool carrier due to the attachment variety and the modular quick coupler system – ideally suitable for all application.

## Top technology for maximum profitability

### Electronic engine speed sensing control

This regulating system causes an efficient conversion of the engine output in hydraulic performance – which brings a better utilization of the available engine power. The result: higher digging forces, shorter cycle times and lower fuel consumption.

### Liebherr Tool Control

Immediately after the changeover of a hydraulic tool, the necessary pressure and oil flow values can be selected with a push of a button. Up to 10 combinations can be programmed. A tool change-over cannot be simpler and time saving.

## Outstanding parts availability

### Quick spare parts supply

80,000 line items are always in stock for the global parts requirements. Emergency parts orders are shippable within 24 hours.

### Professional help on-call

Liebherr's customer service is accessible on a 24/7 basis. Qualified professionals are available around the clock for in order to respond to all questions from parts supplies to repair advise.

### Extensive service packages

Custom-tailored service packages guarantee service with individually focused, technical and logistical attention. Liebherr provides solutions with components from the remanufactured repair or rebuild programs for every requirement – manufactured to maintain genuine quality.

## Pre-owned machines in demand

### Investment in the future

Liebherr crawler excavators are noted for a very stable value.

### Outstanding perspective

Liebherr crawler excavators assure a high re-sale value due to state-of-the-art technology and longevity.



### Hydrostatic fan drive

- Thermostatically regulated fan speed via engine oil and coolant temperature
- Accelerated warm-up period
- Assurance of steady fluid quality due to constant temperature
- Increased longevity of drive components
- Fan only takes-off the needed power, reducing fuel consumption



### Minimum effort for lubrication

- One grease point provides one type of lubricant to all lubrication points
- All lubrication lines to the attachment, swing ring ball races and –teeth as well as the lubricant manifold are standard
- All lubrication points are supported at the same time, no point is left out
- Tremendous time saving

# Technical Data



## Engine

Rating per ISO 9249	112 kW (152 HP) at 2000 RPM
Model	Liebherr D 924 TI-E
Type	4 cylinder in-line
Bore/Stroke	122/142 mm
Displacement	6,6 l
Engine operation	4-stroke diesel direct injection turbo-charged after-cooled reduced emissions
Cooling	water-cooled and integrated motor oil cooler
Air cleaner	dry-type air cleaner with pre-cleaner, primary and safety elements
Fuel tank	360 l
Standard	sensor controlled engine idling
Electrical system	
Voltage	24 V
Batteries	2 x 110 Ah/12 V
Starter	three phase current 24 V/5,4 kW
Alternator	24 V/55 A



## Hydraulic System

Hydraulic pump	LSC control system (Liebherr-Synchron-Comfort), regulation with Liebherr variable flow swash plate double pump
Max. flow	2 x 200 l/min.
Max. pressure	350 bar
Pump regulation	electro-hydraulic with electronic engine speed sensing regulation, pressure compensation, flow compensation, automatic oil flow optimizer, swing circuit with priority and torque control
Hydraulic tank	230 l
Hydraulic system	max. 440 l
Hydraulic oil filter	1 full flow filter (20 µm) in return line with integrated fine filter area (5 µm)
Hydraulic oil cooler	compact cooler, consisting of a water cooler, sandwiched with hydraulic oil cooler and after-cooler cores and hydrostatically driven fan
MODE selection	adjustment of machine performance and the hydraulics via a mode selector to match application
ECO	for especially economical and environmentally friendly operation
POWER	for maximum digging power and heavy duty jobs
LIFT	for lifting
FINE	for precision work and lifting through very sensitive movements
Super-Finish	adjustable working speed for precision work
R.P.M. adjustment	stepless adjustment of engine output via the r.p.m. at each selected mode
Additional menu	4 adjustable oil flows, for optional accessories



## Hydraulic Controls

Power distribution	via control valve with integrated safety valves, simultaneous and independent operation of travel drive, swing drive and work attachment
Servo circuit	
Attachment and swing	proportional via joystick levers
Travel	proportional via foot pedals or removable hand levers
Additional functions	via foot pedals or joystick toggle switch



## Swing Drive

Drive by	swash plate motor with integrated control valve and torque control
Transmission	Liebherr compact planetary reduction gear
Swing ring	Liebherr, sealed single race ball bearing swing ring, internal teeth
Swing speed	0-9 RPM stepless
Swing torque	66,0 kNm
Holding brake	wet multi-disc (spring applied, pressure released)
Option	pedal controlled positioning brake



## Operator's Cab

Cab	built from deep drawn components, resiliently mounted, sound insulated, tinted windows, front window stores overhead, door with sliding window
Operator's seat	shock absorbing suspension, adjustable to operator's weight, 6-way adjustable seat
Joysticks	integrated into adjustable seat consoles
Monitoring	menu driven query of current operating conditions via the LCD display. Automatic monitoring, display, warning (acoustical and optical signal) and saving machine malfunction data, for example, engine overheating, low engine oil pressure or low hydraulic oil level
Heating system	standard air conditioning, combined cooler/heater, additional dust filter in fresh air/recirculated
Noise emission	
ISO 6396	$L_{pA}$ (inside cab) = 76 dB(A)
2000/14/EC	$L_{wA}$ (surround noise) = 106 dB(A)



## Undercarriage


Versions	
HD-S	heavy duty, narrow gauge
HD-SL	heavy duty, wide gauge (2250 mm or 2400 mm)
Drive	Liebherr swash plate motors with integrated brake valves on both sides
Transmission	Liebherr planetary reduction gears
Travel speed	HD-S: low range -3,2 km/h high range -5,3 km/h HD-SL: low range -3,1 km/h high range -5,2 km/h
Drawbar pull max.	HD-S: 260 kN HD-SL: 264 kN
Track components	HD-S: D 6 C, maintenance-free HD-SL: B 60, maintenance-free
Track rollers/	HD-S: 7/2
Carrier rollers	HD-SL: 8/2
Tracks	sealed and greased
Track pads	triple grouser
Digging locks	wet multi-discs (spring applied, pressure released)
Brake valves	integrated into travel motor



## Attachment

Type	combination of resistant steel plates and cast steel components
Hydraulic cylinders	Liebherr cylinders with special seal-system, shock absorbed
Pivots	sealed, low maintenance
Lubrication	via grease distributor and a grease nipple installed on the uppercarriage
Hydraulic connections	pipes and hoses equipped with SAE split-flange connections
Bucket	standard equipped with 12 t safety hook for lifting

# Dimensions

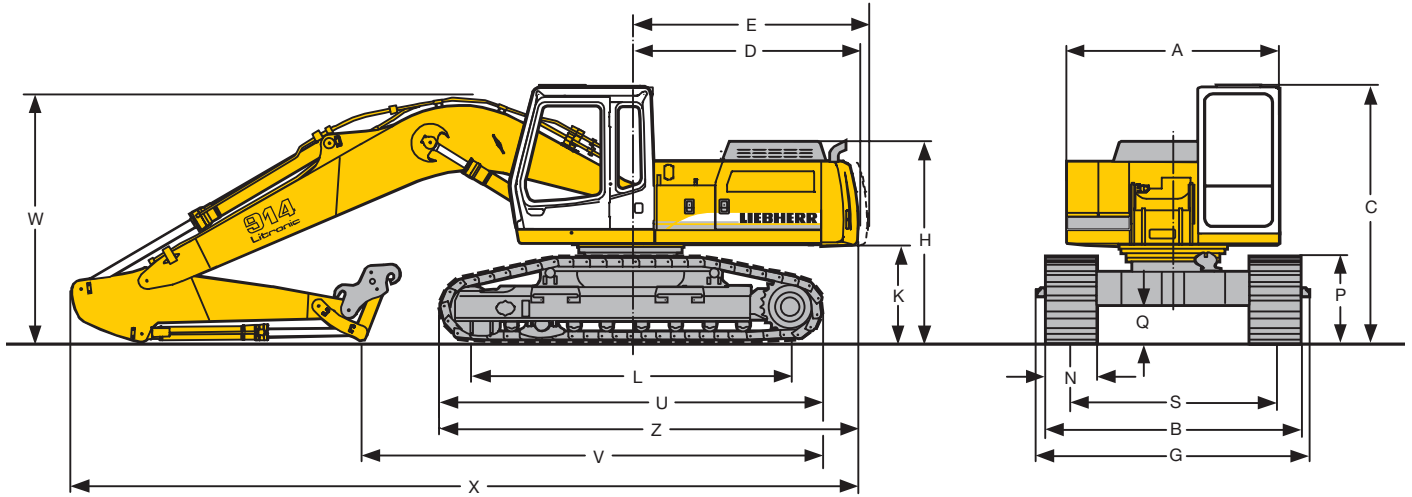


	<b>HD-S 2000</b>	mm	<b>HD-SL 2250</b>	mm	<b>HD-SL 2400</b>	mm			
A		2500		2500		2500			
C		3080		3065		3065			
D		2750		2750		2750			
E		2850		2850		2850			
H		2400		2385		2385			
K		1170		1155		1155			
L		3432		3748		3748			
P		1030		995		995			
Q		475		470		470			
S		2000		2250		2400			
U		4265		4555		4555			
N	500	600	750	500	600	750	500	600	750
B	2505	2600	2750	-	2850	3000	-	3000	3150
G	2765	2765	2765	-	3010	3010	-	3160	3160
Z		4825		4970		4970			

E = Tail radius  
G = Width with removable catwalks

<b>Gooseneck Boom 5,70 m with HD-S- or HD-SL-Undercarriage</b>					
Stick length	m	1,80	2,40	3,00	3,70
V for HD-S-Undercarriage	mm	6300	5450	4850	4300
V for HD-SL-Undercarriage	mm	6450	5600	5000	4600
W	mm	3100	3000	3000	3100
X	mm	9500	9400	9400	9450

<b>Hydraulically Adjustable Boom 4,00 m with HD-S- or HD-SL-Undercarriage</b>					
Stick length	m	1,80	2,40	3,00	3,70
V for HD-S-Undercarriage	mm	6950	6050	5600	5150
V for HD-SL-Undercarriage	mm	7100	6200	5750	5300
W	mm	2900	2850	2950	3150
X	mm	10000	10000	10000	10050


<b>Straight Gooseneck Boom 6,00 m with HD-S- or HD-SL-Undercarriage</b>					
Stick length	m	1,80	2,40	3,00	3,70
V for HD-S-Undercarriage	mm	6800	5950	5450	5050
V for HD-SL-Undercarriage	mm	6950	6100	5600	5200
W	mm	2850	2800	2900	3150
X	mm	9850	9800	9800	9850

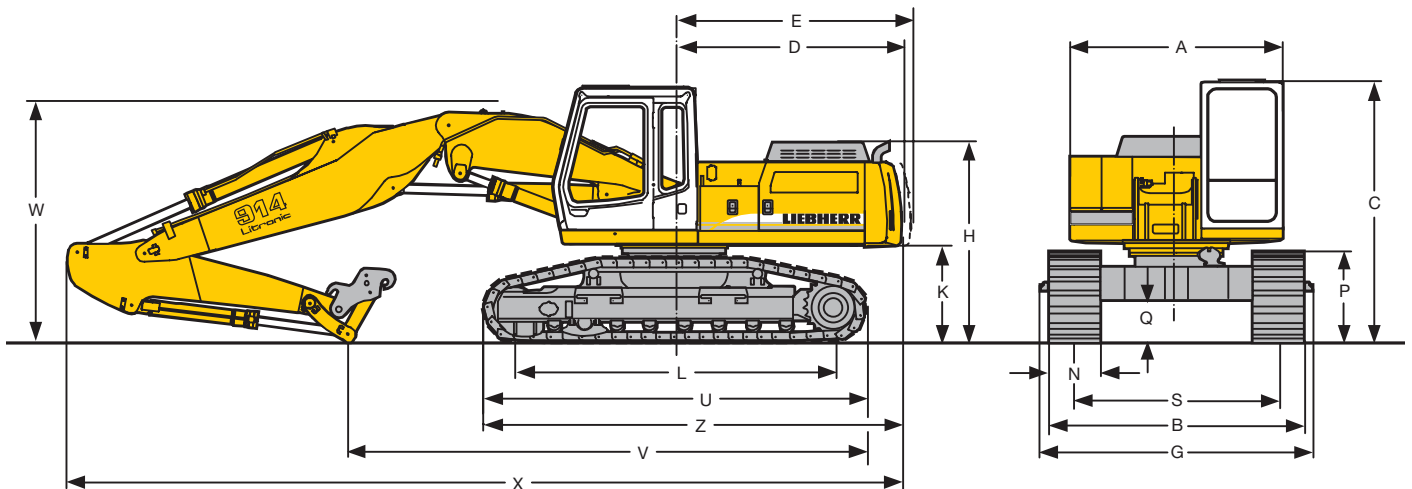



# Backhoe Attachment

with Gooseneck Boom 5,70 m

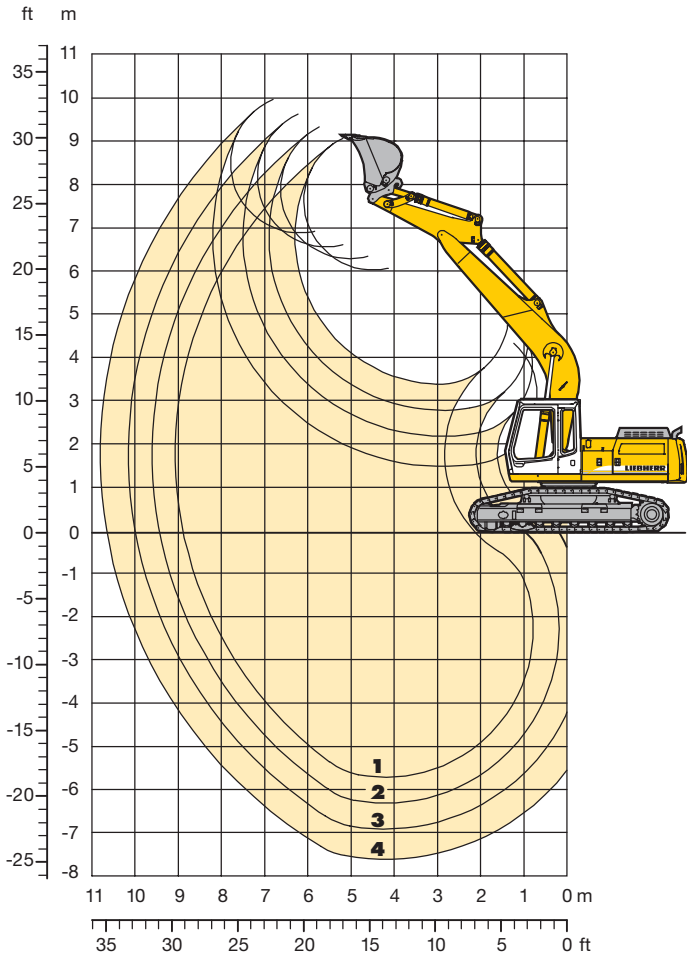

## Digging Envelope with Quick Change Adapter

		1	2	3	4
Stick lengths	m	1,80	2,40	3,00	3,70
Max. digging depth	m	5,65	6,25	6,85	7,55
Max. reach at ground level	m	8,85	9,40	9,95	10,65
Max. dump height	m	6,05	6,35	6,60	6,95
Max. teeth height	m	9,10	9,40	9,70	10,00

## Digging Forces without Quick Change Adapter

		1	2	3	4
Digging force ISO	kN	155	121	103	88
	t	15,8	12,3	10,5	9,0
Breakout force ISO	kN	178	165	165	165
	t	18,2	16,8	16,8	16,8

## with Quick Change Adapter

Digging force ISO	kN	142	113	98	85
	t	14,5	11,5	10,0	8,7
Breakout force ISO	kN	153	142	142	142
	t	15,6	14,5	14,5	14,5

Max. breakout force with ripper bucket

204 kN (20,8 t)

## Operating Weight and Ground Pressure

Operating weight includes basic machine with gooseneck boom 5,70 m, stick 2,40 m, quick change adapter 48 and bucket 1,00 m<sup>3</sup>.

Undercarriage		HD-S 2000	HD-SL 2250	HD-SL 2400
Pad width	mm	500 600	600 750	600 750
Weight	kg	23805 24160	23975 24190	23850 24265
Ground pressure	kg/cm <sup>2</sup>	0,64 0,54	0,49 0,40	0,49 0,40

Optional: heavy duty counterweight

(Heavy duty counterweight increases the operating weight by 900 kg and ground pressure by 0,02 kg/cm<sup>2</sup>)

## Buckets

		without Quick Change Adapter					with Quick Change Adapter			
Cutting width SAE	mm	650 <sup>1)</sup>	1050	1250	1400	1400	1050	1250	1400	1400
Capacity ISO 7451	m <sup>3</sup>	0,30	0,80	1,00	1,20	1,40	0,80	1,00	1,20	1,40
Max. possible material weight	t/m <sup>3</sup>	1,8	1,8	1,8	1,8	1,5	1,8	1,8	1,5	1,2
Weight with Liebherr teeth Z 13 <sup>2)</sup>	kg	–	720	805	870	925	710	805	860	–
Weight with Liebherr teeth Z 16 <sup>3)</sup>	kg	890	830	950	1040	–	825	945	1010	1065
<b>Max. stick length for machine stability per ISO 10567:</b>										
HD-S-Undercarriage	m	3,70	3,70	3,70	2,40	2,40	3,70	3,00	2,40	2,40
HD-SL-Undercarriage	m	3,70	3,70	3,70	3,00	3,00	3,70	3,70	3,00	3,00

<sup>1)</sup> Ripper bucket with teeth size Z 16 P

<sup>2)</sup> Bucket with Liebherr teeth Z 13 (for applications up to surface class 5, heavy soils)

<sup>3)</sup> Bucket with Liebherr teeth Z 16 (for applications over surface class 6, easy diggable material)

When digging in highly abrasive materials, buckets must be protected by appropriate wear material.

Optional side cutters with teeth 13 or 16 increase cutting width by approx. 120 mm.

- Weld-on set of adapters
- Set of bolt-on side cutters

# Lift Capacities

with Gooseneck Boom 5,70 m

## Stick 1,80 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
6,0	HD-S 2000			4,5 (5,8#)		
	HD-SL 2250			5,0 (5,8#)		
	HD-SL 2400			5,4 (5,8#)		
4,5	HD-S 2000	10,9# (10,9#)	6,7 (7,5#)	4,3 (6,2#)		
	HD-SL 2250	10,9# (10,9#)	7,5# (7,5#)	4,8 (6,2#)		
	HD-SL 2400	10,9# (10,9#)	7,5# (7,5#)	5,2 (6,2#)		
3,0	HD-S 2000		6,0 (9,2#)	4,0 (6,9#)	2,9 (5,1)	
	HD-SL 2250		6,8 (9,2#)	4,5 (6,9#)	3,2 (5,6)	
	HD-SL 2400		7,4 (9,2#)	4,9 (6,9#)	3,5 (5,6)	
1,5	HD-S 2000		5,5 (10,4#)	3,7 (6,9)	2,7 (5,0)	
	HD-SL 2250		6,3 (10,4#)	4,2 (7,5#)	3,1 (5,4)	
	HD-SL 2400		6,8 (10,4#)	4,6 (7,5#)	3,3 (5,5)	
0	HD-S 2000		5,2 (10,6)	3,6 (6,7)		
	HD-SL 2250		6,0 (10,6#)	4,1 (7,4)		
	HD-SL 2400		6,6 (10,6#)	4,4 (7,4)		
-1,5	HD-S 2000	10,0 (12,8#)	5,2 (10,0#)	3,5 (6,7)		
	HD-SL 2250	11,8 (12,8#)	6,0 (10,0#)	4,0 (7,4)		
	HD-SL 2400	12,8# (12,8#)	6,6 (10,0#)	4,4 (7,4)		
-3,0	HD-S 2000	10,2 (11,2#)	5,4 (8,6#)			
	HD-SL 2250	11,3# (11,3#)	6,2 (8,6#)			
	HD-SL 2400	11,3# (11,3#)	6,7 (8,6#)			
-4,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

## Stick 2,40 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
6,0	HD-S 2000			4,6 (5,3#)		
	HD-SL 2250			5,2 (5,3#)		
	HD-SL 2400			5,3# (5,3#)		
4,5	HD-S 2000			4,4 (5,8#)	3,0 (4,5#)	
	HD-SL 2250			4,9 (5,8#)	3,4 (4,5#)	
	HD-SL 2400			5,3 (5,8#)	3,7 (4,5#)	
3,0	HD-S 2000	10,2# (10,2#)	6,2 (8,5#)	4,1 (6,5#)	2,9 (5,2)	
	HD-SL 2250	10,5# (10,5#)	7,1 (8,5#)	4,6 (6,5#)	3,3 (5,6#)	
	HD-SL 2400	10,5# (10,5#)	7,7 (8,5#)	5,0 (6,5#)	3,5 (5,6#)	
1,5	HD-S 2000		5,6 (10,0#)	3,8 (7,0)	2,7 (5,0)	
	HD-SL 2250		6,4 (10,0#)	4,3 (7,2#)	3,1 (5,5)	
	HD-SL 2400		7,0 (10,0#)	4,7 (7,2#)	3,4 (5,5)	
0	HD-S 2000	7,5# (7,5#)	5,3 (10,6#)	3,6 (6,8)	2,6 (4,9)	
	HD-SL 2250	7,4# (7,4#)	6,1 (10,6#)	4,1 (7,4)	3,0 (5,3)	
	HD-SL 2400	7,4# (7,4#)	6,6 (10,6#)	4,4 (7,5)	3,2 (5,3)	
-1,5	HD-S 2000	9,8 (11,5#)	5,2 (10,3#)	3,5 (6,7)		
	HD-SL 2250	11,5# (11,5#)	6,0 (10,3#)	4,0 (7,3)		
	HD-SL 2400	11,5# (11,5#)	6,6 (10,3#)	4,3 (7,4)		
-3,0	HD-S 2000	10,0 (12,8#)	5,3 (9,3#)	3,5 (6,7)		
	HD-SL 2250	11,8 (12,8#)	6,1 (9,3#)	4,0 (6,9#)		
	HD-SL 2400	12,8# (12,8#)	6,6 (9,3#)	4,4 (6,9#)		
-4,5	HD-S 2000	9,4# (9,4#)	5,6 (6,9#)			
	HD-SL 2250	9,4# (9,4#)	6,4 (7,0#)			
	HD-SL 2400	9,4# (9,4#)	6,9 (7,0#)			
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

## Stick 3,00 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
6,0	HD-S 2000				3,2 (3,2#)	
	HD-SL 2250				3,2# (3,2#)	
	HD-SL 2400				3,2# (3,2#)	
4,5	HD-S 2000			4,5 (5,2#)	3,1 (4,8#)	
	HD-SL 2250			5,0 (5,2#)	3,5 (4,8#)	
	HD-SL 2400			5,2# (5,2#)	3,7 (4,8#)	
3,0	HD-S 2000	11,9# (11,9#)	6,5 (7,7#)	4,2 (6,0#)	2,9 (5,2#)	
	HD-SL 2250	11,8# (11,8#)	7,3 (7,7#)	4,7 (6,0#)	3,3 (5,2#)	
	HD-SL 2400	11,8# (11,8#)	7,7# (7,7#)	5,1 (6,0#)	3,5 (5,2#)	
1,5	HD-S 2000	7,6# (7,6#)	5,8 (9,4#)	3,8 (6,9#)	2,7 (5,0)	
	HD-SL 2250	7,6# (7,6#)	6,6 (9,4#)	4,4 (6,9#)	3,1 (5,5)	
	HD-SL 2400	7,6# (7,6#)	7,2 (9,4#)	4,7 (6,9#)	3,4 (5,5)	
0	HD-S 2000	7,9# (7,9#)	5,3 (10,3#)	3,6 (6,8)	2,6 (4,8)	
	HD-SL 2250	7,8# (7,8#)	6,1 (10,3#)	4,1 (7,5)	3,0 (5,3)	
	HD-SL 2400	7,8# (7,8#)	6,7 (10,3#)	4,4 (7,5)	3,2 (5,3)	
-1,5	HD-S 2000	9,6 (10,5#)	5,2 (10,5)	3,4 (6,6)	2,5 (4,8)	
	HD-SL 2250	10,4# (10,4#)	6,0 (10,5#)	3,9 (7,3)	2,9 (5,2)	
	HD-SL 2400	10,4# (10,4#)	6,5 (10,5#)	4,3 (7,3)	3,1 (5,2)	
-3,0	HD-S 2000	9,8 (14,1#)	5,2 (9,8#)	3,4 (6,6)		
	HD-SL 2250	11,5 (14,1#)	6,0 (9,8#)	3,9 (7,2#)		
	HD-SL 2400	12,8 (14,1#)	6,5 (9,8#)	4,3 (7,2#)		
-4,5	HD-S 2000	10,1 (11,2#)	5,3 (8,1#)	3,6 (5,7#)		
	HD-SL 2250	11,3# (11,3#)	6,1 (8,1#)	4,1 (5,8#)		
	HD-SL 2400	11,3# (11,3#)	6,7 (8,1#)	4,4 (5,8#)		
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					


## Stick 3,70 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000				2,1# (2,1#)	
	HD-SL 2250				2,1# (2,1#)	
	HD-SL 2400				2,1# (2,1#)	
6,0	HD-S 2000				3,3 (3,6#)	
	HD-SL 2250				3,6# (3,6#)	
	HD-SL 2400				3,6# (3,6#)	
4,5	HD-S 2000				3,2 (4,3#)	2,2# (2,2#)
	HD-SL 2250				3,5 (4,3#)	2,2# (2,2#)
	HD-SL 2400				3,8 (4,3#)	2,2# (2,2#)
3,0	HD-S 2000			4,3 (5,4#)	3,0 (4,8#)	2,1 (3,2#)
	HD-SL 2250			4,8 (5,4#)	3,4 (4,8#)	2,4 (3,1#)
	HD-SL 2400			5,2 (5,4#)	3,6 (4,8#)	2,6 (3,1#)
1,5	HD-S 2000	10,9 (12,4#)	6,0 (8,6#)	3,9 (6,4#)	2,8 (5,1)	2,0 (3,7#)
	HD-SL 2250	12,6# (12,6#)	6,8 (8,5#)	4,5 (6,4#)	3,2 (5,3#)	2,3 (3,7#)
	HD-SL 2400	12,6# (12,6#)	7,4 (8,5#)	4,8 (6,4#)	3,4 (5,3#)	2,5 (3,7#)
0	HD-S 2000	8,5# (8,5#)	5,4 (9,9#)	3,6 (6,8)	2,6 (4,9)	2,0 (3,6#)
	HD-SL 2250	8,5# (8,5#)	6,3 (9,9#)	4,1 (7,2#)	3,0 (5,3)	2,2 (3,6#)
	HD-SL 2400	8,5# (8,5#)	6,8 (9,9#)	4,5 (7,2#)	3,2 (5,3)	2,4 (3,6#)
-1,5	HD-S 2000	9,5 (9,7#)	5,2 (10,4#)	3,4 (6,6)	2,5 (4,7)	
	HD-SL 2250	9,7# (9,7#)	6,0 (10,4#)	3,9 (7,3)	2,9 (5,2)	
	HD-SL 2400	9,7# (9,7#)	6,5 (10,4#)	4,3 (7,3)	3,1 (5,2)	
-3,0	HD-S 2000	9,6 (12,4#)	5,1 (10,2#)	3,4 (6,5)	2,5 (4,7)	
	HD-SL 2250	11,3 (12,3#)	5,9 (10,2#)	3,9 (7,2)	2,8 (5,2)	
	HD-SL 2400	12,3# (12,3#)	6,4 (10,2#)	4,2 (7,2)	3,1 (5,2)	
-4,5	HD-S 2000	9,8 (13,0#)	5,2 (9,0#)	3,4 (6,6#)		
	HD-SL 2250	11,6 (13,0#)	6,0 (9,0#)	3,9 (6,6#)		
	HD-SL 2400	12,9 (13,0#)	6,5 (9,0#)	4,3 (6,6#)		
-6,0	HD-S 2000	9,0# (9,1#)	5,5 (6,3#)			
	HD-SL 2250	9,1# (9,1#)	6,3 (6,4#)			
	HD-SL 2400	9,1# (9,1#)	6,4# (6,4#)			

The lift capacities on the load hook of the Liebherr quick change adapter 48 without attachment are stated in metric tonnes (t), and can be lifted 360° on firm, level supporting surface. Values quoted in brackets are valid for the undercarriage when in longitudinal position. Capacities are valid for 600 mm wide triple grouser pads. Indicated loads are based on ISO 10567 standard and do not exceed 75 % of tipping or 87 % of hydraulic capacity (indicated via #). Maximum load for the quick change adapter's load hook is 12 t. Without quick change adapter the lift capacities will increase by 245 kg, without bucket cylinder, link and lever they increase by an additional 340 kg. Lifting capacity of the excavator is limited by machine stability, hydraulic capacity and maximum permissible load of the load hook. When lifting loads, the hydraulic excavator must be equipped with automatic check valve on its hoist cylinders and overload warning device according to European Standard, EN 474-5.

# Backhoe Attachment

with Hydr. Adjustable Main Boom 4,00 m

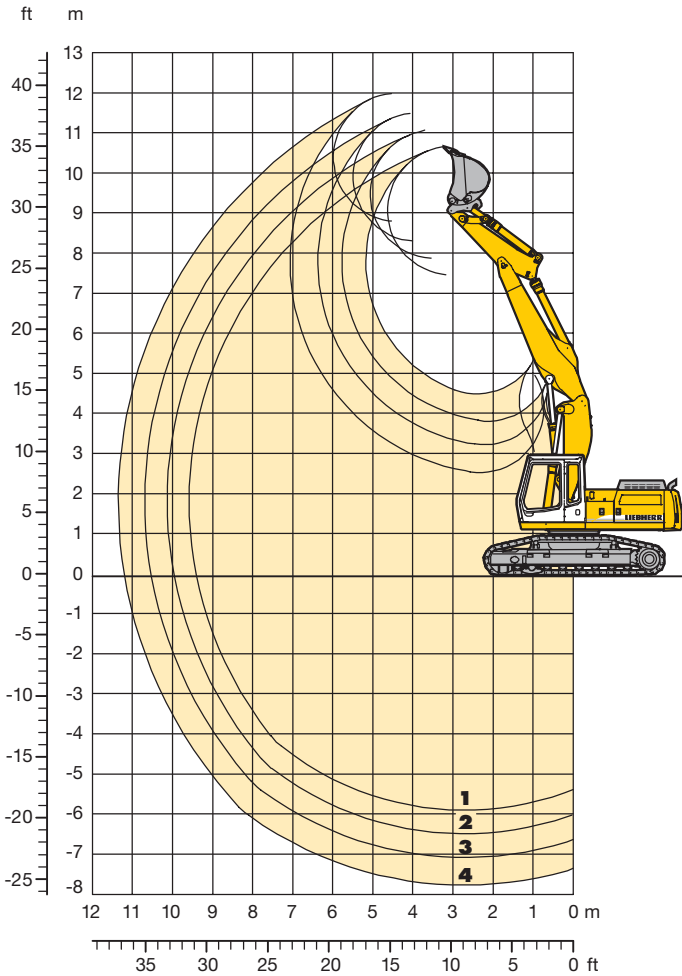

## Digging Envelope with Quick Change Adapter

		1	2	3	4
Stick lengths	m	1,80	2,40	3,00	3,70
Max. digging depth	m	5,90	6,50	7,10	7,80
Max. reach at ground level	m	9,40	10,00	10,55	11,20
Max. dump height	m	7,50	7,90	8,30	8,80
Max. teeth height	m	10,70	11,10	11,50	12,00

## Digging Forces without Quick Change Adapter

		1	2	3	4
Digging force ISO	kN	155	121	103	88
	t	15,8	12,3	10,5	9,0
Breakout force ISO	kN	178	165	165	165
	t	18,2	16,8	16,8	16,8

## with Quick Change Adapter

Digging force ISO	kN	142	113	98	85
	t	14,5	11,5	10,0	8,7
Breakout force ISO	kN	153	142	142	142
	t	15,6	14,5	14,5	14,5

Max. breakout force with ripper bucket

204 kN (20,8 t)

## Operating Weight and Ground Pressure

Operating weight includes basic machine with hydraulically adjustable main boom 4,00 m, stick 2,40 m, quick change adapter 48 and bucket 1,00 m<sup>3</sup>.

Undercarriage		HD-S 2000	HD-SL 2250	HD-SL 2400
Pad width	mm	500 600	600 750	600 750
Weight	kg	24805 25160	24975 25190	24850 25265
Ground pressure	kg/cm <sup>2</sup>	0,66 0,56	0,51 0,42	0,51 0,42

Optional: heavy duty counterweight

(Heavy duty counterweight increases the operating weight by 900 kg and ground pressure by 0,02 kg/cm<sup>2</sup>)

## Buckets

		without Quick Change Adapter					with Quick Change Adapter			
Cutting width SAE	mm	650 <sup>1)</sup>	1050	1250	1400	1400	1050	1250	1400	1400
Capacity ISO 7451	m <sup>3</sup>	0,30	0,80	1,00	1,20	1,40	0,80	1,00	1,20	1,40
Max. possible material weight	t/m <sup>3</sup>	1,8	1,8	1,8	1,8	1,5	1,8	1,8	1,5	1,2
Weight with Liebherr teeth Z 13 <sup>2)</sup>	kg	–	720	805	870	925	710	805	860	–
Weight with Liebherr teeth Z 16 <sup>3)</sup>	kg	890	830	950	1040	–	825	945	1010	1065
<b>Max. stick length for machine stability per ISO 10567:</b>										
HD-S-Undercarriage	m	3,70	3,70	3,70	2,40	2,40	3,00	2,40	1,80	1,80
HD-SL-Undercarriage	m	3,70	3,70	3,70	3,00	3,00	3,70	3,00	2,40	2,40

<sup>1)</sup> Ripper bucket with teeth size Z 16 P

<sup>2)</sup> Bucket with Liebherr teeth Z 13 (for applications up to surface class 5, heavy soils)

<sup>3)</sup> Bucket with Liebherr teeth Z 16 (for applications over surface class 6, easy diggable material)

When digging in highly abrasive materials, buckets must be protected by appropriate wear material.

Optional side cutters with teeth 13 or 16 increase cutting width by approx. 120 mm.


– Weld-on set of adapters

– Set of bolt-on side cutters



# Backhoe Attachment

with Straight Gooseneck Boom 6,00 m

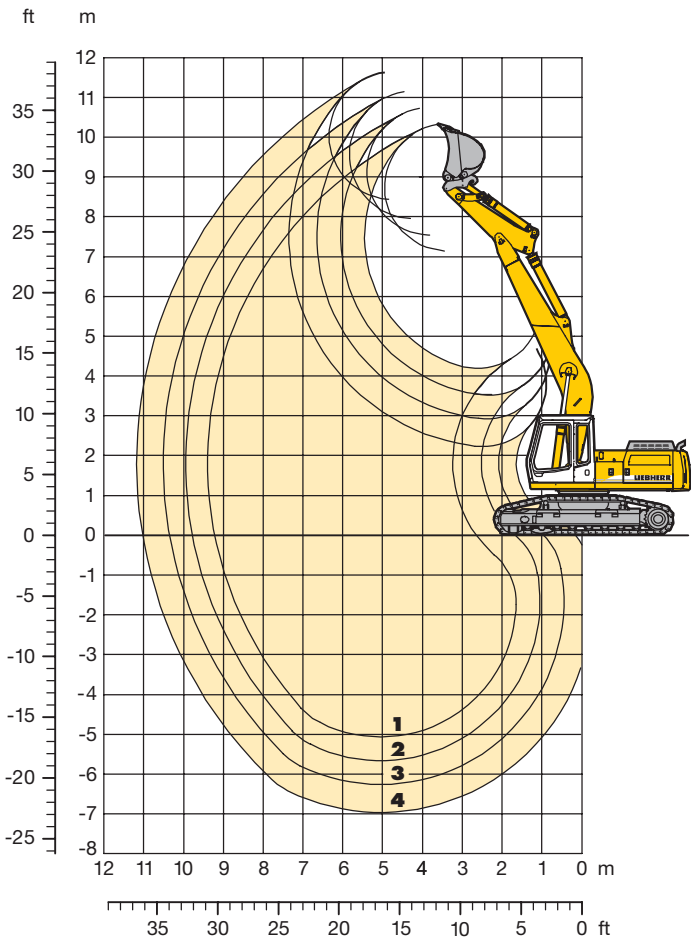

## Digging Envelope with Quick Change Adapter

		1	2	3	4
Stick lengths	m	1,80	2,40	3,00	3,70
Max. digging depth	m	5,05	5,65	6,25	6,95
Max. reach at ground level	m	9,25	9,80	10,40	11,05
Max. dump height	m	7,15	7,55	7,95	8,45
Max. teeth height	m	10,35	10,75	11,15	11,65

## Digging Forces without Quick Change Adapter

		1	2	3	4
Digging force ISO	kN	155	121	103	88
	t	15,8	12,3	10,5	9,0
Breakout force ISO	kN	178	165	165	165
	t	18,2	16,8	16,8	16,8

## with Quick Change Adapter

Digging force ISO	kN	142	113	98	85
	t	14,5	11,5	10,0	8,7
Breakout force ISO	kN	153	142	142	142
	t	15,6	14,5	14,5	14,5

Max. breakout force with ripper bucket

204 kN (20,8 t)

## Operating Weight and Ground Pressure

Operating weight includes basic machine with gooseneck boom 6,00 m, stick 2,40 m, quick change adapter 48 and bucket 1,00 m<sup>3</sup>.

Undercarriage		HD-S 2000	HD-SL 2250	HD-SL 2400
Pad width	mm	500 600	600 750	600 750
Weight	kg	23830 24185	23800 24215	23875 24290
Ground pressure	kg/cm <sup>2</sup>	0,64 0,54	0,49 0,40	0,49 0,40

Optional: heavy duty counterweight

(Heavy duty counterweight increases the operating weight by 900 kg and ground pressure by 0,02 kg/cm<sup>2</sup>)

## Buckets

		without Quick Change Adapter					with Quick Change Adapter			
Cutting width SAE	mm	650 <sup>1)</sup>	1050	1250	1400	1400	1050	1250	1400	1400
Capacity ISO 7451	m <sup>3</sup>	0,30	0,80	1,00	1,20	1,40	0,80	1,00	1,20	1,40
Max. possible material weight	t/m <sup>3</sup>	1,8	1,8	1,8	1,8	1,5	1,8	1,8	1,5	1,2
Weight with Liebherr teeth Z 13 <sup>2)</sup>	kg	–	720	805	870	925	710	805	860	–
Weight with Liebherr teeth Z 16 <sup>3)</sup>	kg	890	830	950	1040	–	825	945	1010	1065
<b>Max. stick length for machine stability per ISO 10567:</b>										
HD-S-Undercarriage	m	3,70	3,70	3,70	2,40	2,40	3,70	3,00	2,40	2,40
HD-SL-Undercarriage	m	3,70	3,70	3,70	3,00	3,00	3,70	3,70	3,00	3,00

<sup>1)</sup> Ripper bucket with teeth size Z 16 P

<sup>2)</sup> Bucket with Liebherr teeth Z 13 (for applications up to surface class 5, heavy soils)

<sup>3)</sup> Bucket with Liebherr teeth Z 16 (for applications over surface class 6, easy diggable material)

When digging in highly abrasive materials, buckets must be protected by appropriate wear material.

Optional side cutters with teeth 13 or 16 increase cutting width by approx. 120 mm.

- Weld-on set of adapters
- Set of bolt-on side cutters

# Lift Capacities

## with Straight Gooseneck Boom 6,00 m

### Stick 1,80 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000		7,3 (7,4#)			
	HD-SL 2250		7,4# (7,4#)			
	HD-SL 2400		7,4# (7,4#)			
6,0	HD-S 2000		7,0 (7,8#)	4,4 (6,5#)		
	HD-SL 2250		7,7# (7,7#)	4,9 (6,5#)		
	HD-SL 2400		7,7# (7,7#)	5,3 (6,5#)		
4,5	HD-S 2000		6,4 (8,8#)	4,2 (6,9#)	2,9 (5,2)	
	HD-SL 2250		7,3 (8,8#)	4,7 (6,9#)	3,3 (5,6)	
	HD-SL 2400		7,9 (8,8#)	5,1 (6,9#)	3,5 (5,7)	
3,0	HD-S 2000		5,7 (10,1#)	3,9 (7,1)	2,8 (5,0)	
	HD-SL 2250		6,5 (10,1#)	4,4 (7,4#)	3,1 (5,5)	
	HD-SL 2400		7,1 (10,1#)	4,7 (7,4#)	3,4 (5,5)	
1,5	HD-S 2000		5,2 (10,5)	3,6 (6,8)	2,6 (4,9)	
	HD-SL 2250		6,0 (10,6#)	4,1 (7,5)	3,0 (5,3)	
	HD-SL 2400		6,6 (10,6#)	4,5 (7,5)	3,3 (5,4)	
0	HD-S 2000		5,1 (10,0#)	3,5 (6,6)	2,6 (4,8)	
	HD-SL 2250		5,9 (10,0#)	4,0 (7,3)	2,9 (5,3)	
	HD-SL 2400		6,4 (10,0#)	4,3 (7,3)	3,2 (5,3)	
-1,5	HD-S 2000	9,3# (9,3#)	5,1 (8,7#)	3,4 (6,6)		
	HD-SL 2250	9,3# (9,3#)	5,9 (8,8#)	3,9 (6,8#)		
	HD-SL 2400	9,3# (9,3#)	6,5 (8,8#)	4,3 (6,8#)		
-3,0	HD-S 2000		5,3 (6,7#)	3,6 (5,2#)		
	HD-SL 2250		6,1 (6,8#)	4,1 (5,2#)		
	HD-SL 2400		6,7 (6,8#)	4,4 (5,2#)		
-4,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

### Stick 2,40 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000			4,6 (4,9#)		
	HD-SL 2250			4,9# (4,9#)		
	HD-SL 2400			4,9# (4,9#)		
6,0	HD-S 2000			4,5 (6,1#)	3,0 (3,5#)	
	HD-SL 2250			5,1 (6,1#)	3,4 (3,5#)	
	HD-SL 2400			5,4 (6,1#)	3,5# (3,5#)	
4,5	HD-S 2000	11,9# (11,9#)	6,7 (8,2#)	4,3 (6,6#)	3,0 (5,2)	
	HD-SL 2250	11,8# (11,8#)	7,6 (8,2#)	4,8 (6,6#)	3,3 (5,6#)	
	HD-SL 2400	11,8# (11,8#)	8,1 (8,2#)	5,2 (6,6#)	3,6 (5,6#)	
3,0	HD-S 2000		6,0 (9,6#)	4,0 (7,2#)	2,8 (5,1)	
	HD-SL 2250		6,8 (9,6#)	4,5 (7,2#)	3,2 (5,5)	
	HD-SL 2400		7,4 (9,6#)	4,8 (7,2#)	3,4 (5,6)	
1,5	HD-S 2000		5,4 (10,5#)	3,7 (6,8)	2,7 (4,9)	
	HD-SL 2250		6,2 (10,5#)	4,2 (7,5)	3,0 (5,4)	
	HD-SL 2400		6,7 (10,5#)	4,5 (7,6)	3,3 (5,4)	
0	HD-S 2000	4,8# (4,8#)	5,1 (10,4#)	3,5 (6,6)	2,6 (4,8)	
	HD-SL 2250	4,8# (4,8#)	5,9 (10,4#)	4,0 (7,3)	2,9 (5,2)	
	HD-SL 2400	4,8# (4,8#)	6,5 (10,4#)	4,3 (7,3)	3,2 (5,3)	
-1,5	HD-S 2000	9,3# (9,3#)	5,1 (9,4#)	3,4 (6,6)	2,5 (4,8)	
	HD-SL 2250	9,2# (9,2#)	5,9 (9,4#)	3,9 (7,2#)	2,9 (5,2)	
	HD-SL 2400	9,2# (9,2#)	6,4 (9,4#)	4,2 (7,2#)	3,1 (5,2)	
-3,0	HD-S 2000	9,3# (9,3#)	5,2 (7,7#)	3,5 (5,9#)		
	HD-SL 2250	9,4# (9,4#)	6,0 (7,7#)	4,0 (6,0#)		
	HD-SL 2400	9,4# (9,4#)	6,5 (7,7#)	4,3 (6,0#)		
-4,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

### Stick 3,00 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000			4,7 (4,8#)		
	HD-SL 2250			4,7# (4,7#)		
	HD-SL 2400			4,7# (4,7#)		
6,0	HD-S 2000			4,6 (5,5#)	3,1 (4,4#)	
	HD-SL 2250			5,2 (5,5#)	3,5 (4,4#)	
	HD-SL 2400			5,5# (5,5#)	3,8 (4,4#)	
4,5	HD-S 2000		6,9 (7,5#)	4,4 (6,1#)	3,0 (5,3)	
	HD-SL 2250		7,5# (7,5#)	4,9 (6,1#)	3,4 (5,3#)	
	HD-SL 2400		7,5# (7,5#)	5,3 (6,1#)	3,6 (5,3#)	
3,0	HD-S 2000	11,2 (13,0#)	6,2 (9,0#)	4,0 (6,8#)	2,8 (5,1)	2,1 (3,4#)
	HD-SL 2250	13,1 (13,4#)	7,0 (9,0#)	4,6 (6,8#)	3,2 (5,6)	2,3 (3,4#)
	HD-SL 2400	13,4# (13,4#)	7,6 (9,0#)	4,9 (6,8#)	3,5 (5,6)	2,5 (3,4#)
1,5	HD-S 2000		5,5 (10,2#)	3,7 (6,9)	2,7 (4,9)	2,0 (3,7)
	HD-SL 2250		6,3 (10,2#)	4,2 (7,4#)	3,0 (5,4)	2,3 (4,0#)
	HD-SL 2400		6,9 (10,2#)	4,6 (7,4#)	3,3 (5,4)	2,5 (4,0#)
0	HD-S 2000	5,6# (5,6#)	5,1 (10,4)	3,5 (6,6)	2,5 (4,8)	1,9 (3,5#)
	HD-SL 2250	5,6# (5,6#)	5,9 (10,5#)	4,0 (7,3)	2,9 (5,2)	2,2 (3,5#)
	HD-SL 2400	5,6# (5,6#)	6,5 (10,5#)	4,3 (7,3)	3,1 (5,2)	2,4 (3,5#)
-1,5	HD-S 2000	8,4# (8,4#)	5,0 (9,9#)	3,3 (6,5)	2,5 (4,7)	
	HD-SL 2250	8,4# (8,4#)	5,8 (9,9#)	3,8 (7,2)	2,8 (5,1)	
	HD-SL 2400	8,4# (8,4#)	6,4 (9,9#)	4,2 (7,2)	3,1 (5,2)	
-3,0	HD-S 2000	9,6 (11,2#)	5,1 (8,5#)	3,4 (6,5#)	2,5 (4,7)	
	HD-SL 2250	11,2# (11,2#)	5,9 (8,5#)	3,9 (6,5#)	2,8 (4,8#)	
	HD-SL 2400	11,2# (11,2#)	6,4 (8,5#)	4,2 (6,5#)	3,1 (4,8#)	
-4,5	HD-S 2000		5,3 (6,2#)	3,5 (4,6#)		
	HD-SL 2250		6,1 (6,2#)	4,0 (4,6#)		
	HD-SL 2400		6,2# (6,2#)	4,4 (4,6#)		
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

### Stick 3,70 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000				3,2# (3,2#)	
	HD-SL 2250			3,5# (3,5#)		
	HD-SL 2400			3,5# (3,5#)		
6,0	HD-S 2000			4,4# (4,4#)	3,2 (4,1#)	
	HD-SL 2250				3,2# (3,2#)	
	HD-SL 2400				3,2# (3,2#)	
4,5	HD-S 2000			4,5 (5,2#)	3,1 (4,8#)	2,2 (3,3#)
	HD-SL 2250			4,4# (4,4#)	3,6 (4,1#)	
	HD-SL 2400			4,4# (4,4#)	3,9 (4,1#)	
3,0	HD-S 2000	12,3# (12,3#)	6,5 (8,1#)	4,2 (6,3#)	2,9 (5,2)	2,1 (3,8)
	HD-SL 2250			5,1 (5,2#)	3,5 (4,8#)	2,5 (3,3#)
	HD-SL 2400			5,2# (5,2#)	3,7 (4,8#)	2,7 (3,3#)
1,5	HD-S 2000	7,2# (7,2#)	5,7 (9,6#)	3,8 (7,0)	2,7 (5,0)	2,0 (3,7)
	HD-SL 2250	12,2# (12,2#)	7,4 (8,1#)	4,7 (6,3#)	3,3 (5,3#)	2,4 (4,1#)
	HD-SL 2400	12,2# (12,2#)	8,0 (8,1#)	5,1 (6,3#)	3,5 (5,3#)	2,6 (4,1#)
0	HD-S 2000	6,2# (6,2#)	5,2 (10,4#)	3,5 (6,7)	2,5 (4,8)	1,9 (3,6)
	HD-SL 2250	7,3# (7,3#)	6,6 (9,6#)	4,3 (7,1#)	3,1 (5,4)	2,3 (4,1)
	HD-SL 2400	7,3# (7,3#)	7,1 (9,6#)	4,7 (7,1#)	3,3 (5,4)	2,5 (4,1)
-1,5	HD-S 2000	7,8# (7,8#)	5,0 (10,2#)	3,3 (6,5)	2,4 (4,6)	1,8 (3,6)
	HD-SL 2250	6,2# (6,2#)	6,0 (10,4#)	4,0 (7,4)	2,9 (5,2)	2,2 (4,0)
	HD-SL 2400	6,2# (6,2#)	6,6 (10,4#)	4,4 (7,4)	3,1 (5,2)	2,4 (4,0)
-3,0	HD-S 2000	9,4 (10,5#)	5,0 (9,3#)	3,3 (6,4)	2,4 (4,6)	
	HD-SL 2250	7,8# (7,8#)	5,8 (10,2#)	3,8 (7,2)	2,8 (5,1)	2,1 (3,9)
	HD-SL 2400	7,8# (7,8#)	6,3 (10,2#)	4,2 (7,2)	3,0 (5,1)	2,3 (3,9)
-4,5	HD-S 2000	9,7 (9,9#)	5,1 (7,4#)	3,4 (5,6#)	2,5 (3,8#)	
	HD-SL 2250	10,4# (10,4#)	5,8 (9,3#)	3,8 (6,9#)	2,8 (5,1)	
	HD-SL 2400	10,4# (10,4#)	6,3 (9,3#)	4,1 (6,9#)	3,0 (5,1)	
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

The lift capacities on the load hook of the Liebherr quick change adapter 48 without attachment are stated in metric tonnes (t), and can be lifted 360° on firm, level supporting surface. Values quoted in brackets are valid for the undercarriage when in longitudinal position. Capacities are valid for 600 mm wide triple grouser pads. Indicated loads are based on ISO 10567 standard and do not exceed 75 % of tipping or 87 % of hydraulic capacity (indicated via #). Maximum load for the quick change adapter's load hook is 12 t. Without quick change adapter the lift capacities will increase by 245 kg, without bucket cylinder, link and lever they increase by an additional 340 kg. Lifting capacity of the excavator is limited by machine stability, hydraulic capacity and maximum permissible load of the load hook. When lifting loads, the hydraulic excavator must be equipped with automatic check valve on its hoist cylinders and overload warning device according to European Standard, EN 474-5.

# Lift Capacities

with Gooseneck Boom 5,70 m and Heavy Counterweight

## Stick 1,80 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
6,0	HD-S 2000			5,0 (5,8#)		
	HD-SL 2250			5,5 (5,8#)		
	HD-SL 2400			5,8# (5,8#)		
4,5	HD-S 2000	10,9# (10,9#)	7,4 ( 7,5#)	4,8 (6,2#)		
	HD-SL 2250	10,9# (10,9#)	7,5# ( 7,5#)	5,3 (6,2#)		
	HD-SL 2400	10,9# (10,9#)	7,5# ( 7,5#)	5,7 (6,2#)		
3,0	HD-S 2000		6,7 ( 9,2#)	4,5 (6,9#)	3,2 (5,6 )	
	HD-SL 2250		7,6 ( 9,2#)	5,0 (6,9#)	3,6 (5,8#)	
	HD-SL 2400		8,2 ( 9,2#)	5,4 (6,9#)	3,9 (5,8#)	
1,5	HD-S 2000		6,1 (10,4#)	4,2 (7,5#)	3,1 (5,5 )	
	HD-SL 2250		7,0 (10,4#)	4,7 (7,5#)	3,5 (5,9 )	
	HD-SL 2400		7,6 (10,4#)	5,1 (7,5#)	3,7 (6,0 )	
0	HD-S 2000		5,9 (10,6#)	4,0 (7,4 )		
	HD-SL 2250		6,8 (10,6#)	4,6 (7,8#)		
	HD-SL 2400		7,4 (10,6#)	4,9 (7,8#)		
-1,5	HD-S 2000	11,2 (12,8#)	5,9 (10,0#)	4,0 (7,4 )		
	HD-SL 2250	12,8# (12,8#)	6,8 (10,0#)	4,5 (7,5#)		
	HD-SL 2400	12,8# (12,8#)	7,4 (10,0#)	4,9 (7,5#)		
-3,0	HD-S 2000	11,2# (11,2#)	6,1 ( 8,6#)			
	HD-SL 2250	11,3# (11,3#)	6,9 ( 8,6#)			
	HD-SL 2400	11,3# (11,3#)	7,5 ( 8,6#)			
-4,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

## Stick 2,40 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
6,0	HD-S 2000			5,1 (5,3#)		
	HD-SL 2250			5,3# (5,3#)		
	HD-SL 2400			5,3# (5,3#)		
4,5	HD-S 2000			4,9 (5,8#)	3,4 (4,5#)	
	HD-SL 2250			5,4 (5,8#)	3,8 (4,5#)	
	HD-SL 2400			5,8# (5,8#)	4,1 (4,5#)	
3,0	HD-S 2000	10,2# (10,2#)	6,9 ( 8,5#)	4,6 (6,5#)	3,3 (5,6#)	
	HD-SL 2250	10,5# (10,5#)	7,8 ( 8,5#)	5,1 (6,5#)	3,7 (5,6#)	
	HD-SL 2400	10,5# (10,5#)	8,4 ( 8,5#)	5,5 (6,5#)	3,9 (5,6#)	
1,5	HD-S 2000		6,3 (10,0#)	4,3 (7,3#)	3,1 (5,5 )	
	HD-SL 2250		7,2 (10,0#)	4,8 (7,2#)	3,5 (5,9#)	
	HD-SL 2400		7,8 (10,0#)	5,2 (7,2#)	3,8 (5,9#)	
0	HD-S 2000	7,5# ( 7,5#)	6,0 (10,6#)	4,1 (7,4 )	3,0 (5,4 )	
	HD-SL 2250	7,4# ( 7,4#)	6,8 (10,6#)	4,6 (7,7#)	3,4 (5,8 )	
	HD-SL 2400	7,4# ( 7,4#)	7,4 (10,6#)	5,0 (7,7#)	3,6 (5,9 )	
-1,5	HD-S 2000	11,0 (11,5#)	5,9 (10,3#)	4,0 (7,3 )		
	HD-SL 2250	11,5# (11,5#)	6,7 (10,3#)	4,5 (7,6#)		
	HD-SL 2400	11,5# (11,5#)	7,3 (10,3#)	4,9 (7,6#)		
-3,0	HD-S 2000	11,2 (12,8#)	6,0 ( 9,3#)	4,0 (6,9#)		
	HD-SL 2250	12,8# (12,8#)	6,8 ( 9,3#)	4,6 (6,9#)		
	HD-SL 2400	12,8# (12,8#)	7,4 ( 9,3#)	4,9 (6,9#)		
-4,5	HD-S 2000	9,4# ( 9,4#)	6,2 ( 6,9#)			
	HD-SL 2250	9,4# ( 9,4#)	7,0# ( 7,0#)			
	HD-SL 2400	9,4# ( 9,4#)	7,0# ( 7,0#)			
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

## Stick 3,00 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
6,0	HD-S 2000				3,2# (3,2#)	
	HD-SL 2250				3,2# (3,2#)	
	HD-SL 2400				3,2# (3,2#)	
4,5	HD-S 2000			5,0 (5,2#)	3,4 (4,8#)	
	HD-SL 2250			5,2# (5,2#)	3,8 (4,8#)	
	HD-SL 2400			5,2# (5,2#)	4,1 (4,8#)	
3,0	HD-S 2000	11,9# (11,9#)	7,1 ( 7,7#)	4,7 (6,0#)	3,3 (5,2#)	
	HD-SL 2250	11,8# (11,8#)	7,7# ( 7,7#)	5,2 (6,0#)	3,7 (5,2#)	
	HD-SL 2400	11,8# (11,8#)	7,7# ( 7,7#)	5,6 (6,0#)	3,9 (5,2#)	
1,5	HD-S 2000	7,6# ( 7,6#)	6,4 ( 9,4#)	4,3 (6,9#)	3,1 (5,5 )	
	HD-SL 2250	7,6# ( 7,6#)	7,3 ( 9,4#)	4,9 (6,9#)	3,5 (5,6#)	
	HD-SL 2400	7,6# ( 7,6#)	7,9 ( 9,4#)	5,2 (6,9#)	3,8 (5,6#)	
0	HD-S 2000	7,9# ( 7,9#)	6,0 (10,3#)	4,1 (7,4 )	3,0 (5,3 )	
	HD-SL 2250	7,8# ( 7,8#)	6,9 (10,3#)	4,6 (7,5#)	3,4 (5,8 )	
	HD-SL 2400	7,8# ( 7,8#)	7,5 (10,3#)	5,0 (7,5#)	3,6 (5,8 )	
-1,5	HD-S 2000	10,5# (10,5#)	5,8 (10,5#)	3,9 (7,3 )	2,9 (5,2 )	
	HD-SL 2250	10,4# (10,4#)	6,7 (10,5#)	4,5 (7,6#)	3,3 (5,7 )	
	HD-SL 2400	10,4# (10,4#)	7,3 (10,5#)	4,8 (7,6#)	3,5 (5,7 )	
-3,0	HD-S 2000	11,0 (14,1#)	5,8 ( 9,8#)	3,9 (7,2#)		
	HD-SL 2250	12,9 (14,1#)	6,7 ( 9,8#)	4,4 (7,2#)		
	HD-SL 2400	14,1# (14,1#)	7,3 ( 9,8#)	4,8 (7,2#)		
-4,5	HD-S 2000	11,2# (11,2#)	6,0 ( 8,1#)	4,1 (5,7#)		
	HD-SL 2250	11,3# (11,3#)	6,9 ( 8,1#)	4,6 (5,8#)		
	HD-SL 2400	11,3# (11,3#)	7,5 ( 8,1#)	5,0 (5,8#)		
-6,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					

## Stick 3,70 m

Height (m)	Under-carriage	Radius of load from centerline of machine (m)				
		3,0	4,5	6,0	7,5	9,0
9,0	HD-S 2000					
	HD-SL 2250					
	HD-SL 2400					
7,5	HD-S 2000				2,1# (2,1#)	
	HD-SL 2250				2,1# (2,1#)	
	HD-SL 2400				2,1# (2,1#)	
6,0	HD-S 2000				3,6# (3,6#)	
	HD-SL 2250				3,6# (3,6#)	
	HD-SL 2400				3,6# (3,6#)	
4,5	HD-S 2000				3,5 (4,3#)	2,2# (2,2#)
	HD-SL 2250				3,9 (4,3#)	2,2# (2,2#)
	HD-SL 2400				4,2 (4,3#)	2,2# (2,2#)
3,0	HD-S 2000			4,8 (5,4#)	3,4 (4,8#)	2,4 (3,2#)
	HD-SL 2250			5,4 (5,4#)	3,8 (4,8#)	2,7 (3,1#)
	HD-SL 2400			5,4# (5,4#)	4,0 (4,8#)	3,0 (3,1#)
1,5	HD-S 2000	12,1 (12,4#)	6,7 ( 8,6#)	4,4 (6,4#)	3,2 (5,3#)	2,3 (3,7#)
	HD-SL 2250	12,6# (12,6#)	7,6 ( 8,5#)	5,0 (6,4#)	3,5 (5,3#)	2,6 (3,7#)
	HD-SL 2400	12,6# (12,6#)	8,2 ( 8,5#)	5,3 (6,4#)	3,8 (5,3#)	2,9 (3,7#)
0	HD-S 2000	8,5# ( 8,5#)	6,1 ( 9,9#)	4,1 (7,2#)	3,0 (5,3 )	2,2 (3,6#)
	HD-SL 2250	8,5# ( 8,5#)	7,0 ( 9,9#)	4,7 (7,2#)	3,4 (5,7#)	2,6 (3,6#)
	HD-SL 2400	8,5# ( 8,5#)	7,6 ( 9,9#)	5,0 (7,2#)	3,6 (5,7#)	2,8 (3,6#)
-1,5	HD-S 2000	9,7# ( 9,7#)	5,8 (10,4#)	3,9 (7,3 )	2,9 (5,2 )	
	HD-SL 2250	9,7# ( 9,7#)	6,7 (10,4#)	4,4 (7,6#)	3,2 (5,7 )	
	HD-SL 2400	9,7# ( 9,7#)	7,3 (10,4#)	4,8 (7,6#)	3,5 (5,7 )	
-3,0	HD-S 2000	10,8 (12,4#)	5,8 (10,2#)	3,8 (7,2 )	2,8 (5,2 )	
	HD-SL 2250	12,3# (12,3#)	6,6 (10,2#)	4,4 (7,4#)	3,2 (5,7 )	
	HD-SL 2400	12,3# (12,3#)	7,2 (10,2#)	4,7 (7,4#)	3,5 (5,7 )	
-4,5	HD-S 2000	11,0 (13,0#)	5,9 ( 9,0#)	3,9 (6,6#)		
	HD-SL 2250	13,0# (13,0#)	6,7 ( 9,0#)	4,4 (6,6#)		
	HD-SL 2400	13,0# (13,0#)	7,3 ( 9,0#)	4,8 (6,6#)		
-6,0	HD-S 2000	9,0# ( 9,0#)	6,2 ( 6,3#)			
	HD-SL 2250	9,1# ( 9,1#)	6,4# ( 6,4#)			
	HD-SL 2400	9,1# ( 9,1#)	6,4# ( 6,4#)			

The lift capacities on the load hook of the Liebherr quick change adapter 48 without attachment are stated in metric tonnes (t), and can be lifted 360° on firm, level supporting surface. Values quoted in brackets are valid for the undercarriage when in longitudinal position. Capacities are valid for 600 mm wide triple grouser pads. Indicated loads are based on ISO 10567 standard and do not exceed 75 % of tipping or 87 % of hydraulic capacity (indicated via #). Maximum load for the quick change adapter's load hook is 12 t. Without quick change adapter the lift capacities will increase by 245 kg, without bucket cylinder, link and lever they increase by an additional 340 kg. Lifting capacity of the excavator is limited by machine stability, hydraulic capacity and maximum permissible load of the load hook. When lifting loads, the hydraulic excavator must be equipped with automatic check valve on its hoist cylinders and overload warning device according to European Standard, EN 474-5.







# Equipment



## Undercarriage

	S	O
Two-stage travel motors	•	
Lifetime lubricated track rollers	•	
Idler protection	•	
Track guide at each track frame	•	
Tracks sealed and greased	•	
Track guides at sprocket and in center		•
Conversion kit – Track B 60 to D 6 C		•
Sprocket with dirt ejector		•
Reinforced base-plate center-piece		•



## Uppercarriage

	S	O
Engine hood with lift help	•	
Lockable tool box	•	
Handrails, non slip surfaces	•	
Tool kit	•	
Maintenance free swing brake lock	•	
Maintenance-free HD-batteries	•	
Sound insulation	•	
Electric fuel tank filler pump		•
Foot pedal swing positioning brake		•
Extended tool kit		•
Customized colors		•



## Hydraulics

	S	O
Electronic pump regulation	•	
Stepless work mode selector	•	
Pressure storage for controlled lowering of attachments with engine turned off	•	
Hydraulic tank shut-off valve	•	
LSC control system (Liebherr-Synchron-Comfort)	•	
Filter with integrated fine filter area (5 µm)	•	
Pressure test ports	•	
Additional hydraulic circuits		•
Bio-degradable hydr. oil		•
Filter for secondary circuit		•



## Engine

	S	O
Direct injection	•	
Turbo charger	•	
After-cooled	•	
Dry-type air cleaner w/pre-cleaner, main and safety element	•	
Sensor controlled engine idling	•	
Engine cold starting aid		•



## Operator's Cab

	S	O
Deep drawn cab shell components	•	
All tinted windows	•	
Door with sliding window	•	
All-round adjustable roof flap	•	
Rain protective shade for front window	•	
Washer and wiper	•	
6-way adjustable cloth suspension seat	•	
Seat and consoles independently adjustable	•	
Removable handle for travel pedals	•	
Air conditioner	•	
Coat hook	•	
Dome light	•	
Sun visor	•	
Inside rear mirrors	•	
Radio installation prep-kit	•	
Cigar lighter and ashtray	•	
Removable custom floor mat	•	
Storage and literature tray	•	
Digital instrumentation	•	
Digital instruments for oil temp. engine RPM and oil pressure	•	
Digital hour meter visible from outside	•	
Removable lower section of front window		•
AM/FM stereo radio w/cassette		•
Air power seat adjustment with heating and mountable head rest		•
Warning beacon		•
Additional flood lights		•
Armored glass		•



## Attachment

	S	O
Cylinders with shock absorber	•	
Sealed pivots	•	
Grease distributor and lubrication lines fitted on attachment with central lubrication point on uppercarriage	•	
Y sealant between bucket and stick	•	
Protective plate for lubrication lines and distributor on the connecting plate	•	
SAE split flanges on all high pressure lines	•	
Safety hook on bucket	•	
Safety check valves for hoist cylinder		•
Two-way selector valves for bucket/clam		•
Overload warning device		•
Hydr. or mechanical quick change coupler		•
Liebherr line of clams and grapples		•
Quick disconnect hose couplers		•
Special application buckets		•
Hydr. lines, on stick, for clam operation, bucket link holder for clam application		•
Lines for auxiliary control circuit		•
Liebherr automatic lubrication system for attachment and swing ring		•
Customized colors		•

S = Standard, O = Option

**Options and/or special attachments, supplied by vendors other than Liebherr, are only to be installed with the knowledge and approval of Liebherr to retain warranty.**

All illustrations and data may differ from standard equipment. Subject to change without notice. All indicated loads are based in accordance with ISO 9248.



# The entire world of earthmoving equipment.



For your success with earthmoving equipment, Liebherr provides an extensive product range of hydraulic excavators, crawler tractors and -loaders, wheel loaders and dump trucks. Please, visit our website for all news as well as technical information regarding the earthmoving equipment program from Liebherr.

**[www.liebherr.com](http://www.liebherr.com)**



**Liebherr-France SAS**  
2, Avenue Joseph Rey, B.P. 287, F-68005 Colmar Cedex  
☎ +33 (0)389 21 35 10, Fax +33 (0)389 21 37 93  
[www.liebherr.com](http://www.liebherr.com), E-Mail: [info@lfr.liebherr.com](mailto:info@lfr.liebherr.com)

## 2 Safety information, signs

Working with the machine holds dangers to which you as the owner, machine operator or maintenance expert could be exposed. If you regularly read and note the safety information, however, you can prevent danger and accidents. This is particularly true for those who are only occasionally in contact with the machine, eg. for maintenance work. The following information comprises safety regulations which, if followed conscientiously, will guarantee your safety and that of other persons, as well as avoiding damage to the machine.

Following these precautions does not release you from the responsibility to take note of safety regulations which apply on site or of guidelines given by legal bodies or professional associations.

For EU countries, guideline 89 / 655 / EEC contains the minimum safety information applicable to the owner.

### 2.1 Symbols in the operating instructions

Work processes and actions that could cause danger are accompanied by safety information in these operating instructions. This safety information describes various dangers which are emphasized by the terms **Danger**, **Caution** and **Note**.

These terms are identified by symbols in the operating instructions and have the following significance:



#### **Danger!**

Warning relating to a danger that carries with it a high risk of death or serious injury if the appropriate preventative measures are not taken.

---



#### **Caution!**

Warning relating to dangers that could result in physical injury and/or damage to the machine if the appropriate preventative measures are not taken.

---



#### **Note!**

This symbol identifies user tips and operating and maintenance procedures whose use will guarantee a high degree of user-friendliness and longevity to the machine or which will considerably simplify working procedures.

---

- This symbol identifies a listing.
  - This symbol identifies a sub-listing.
- This symbol signifies the following: “The precondition must be fulfilled”.  
The machine operator or the maintenance personnel must first fulfil the precondition described, i e. the machine must be brought into a particular work position in order to be able to carry out the actions subsequently described.
- ▶ This symbol identifies an action.  
The machine operator or the maintenance personnel should be active at this location and carry out the action described.

✎ This symbol means "Carry out an activity".

If the machine operator or maintenance personnel have carried out the activities described in an action, the result of this action will be described here.

**Following these notes does not relieve you of responsibility for following additional rules and guidelines!**

Additional points that should be noted are:

- the safety regulations which apply on site,
- statutory road traffic regulations,
- the guidelines provided by professional associations.

## 2.2 Use in accordance with the regulations

- The hydraulic excavator is a machine with work equipment (eg. hoe type bucket, grab, bucket attachment) designed to detach, lift, transport and shake off earth, stones and other materials, while the transportation of the load itself usually takes place without moving the machine. Moving the machine when it is carrying a load must be carried out while observing the appropriate safety measures (see section "Notes for safe working").
- Machines used for hoisting are subject to specific conditions and must be fitted with the stipulated safety devices (see section "Hoisting work").
- Other or additional usage, eg. for demolition work or transfer work, requires special equipment and may also require special safety devices. These devices (eg. tree grab, demolition hammer, concrete cutter etc.) may only be attached and used with approval and in accordance with the original manufacturer of the device.
- Transporting persons is not deemed to be in accordance with regulations. The manufacturer is not liable for damage resulting from this action. The user is solely responsible for the risk incurred.
- Observing the operating instructions and the inspection / maintenance instructions is also deemed to be appropriate use in accordance with regulations.

## 2.3 Safety instructions

### 2.3.1 General safety instructions

- Please familiarize yourself with the operating instructions before starting up the machine.
- Ensure that you have obtained, read and understood any additional instructions relating to special accessories for the machine.
- Only specifically authorized persons may operate, maintain or repair the machine. The legal minimum age is to be adhered to.
- Only employ trained or appropriately instructed personnel. Clearly establish which personnel are responsible for operating, setting up, maintaining and repairing the machine. Give personnel the power to refuse to carry out unsafe instructions by third parties. This also applies in relation to traffic regulations.
- Only permit apprentices and personnel who are in training or who have only general training to operate on the machine under the constant supervision of an ex-

- perienced member of staff.
- As far as possible, monitor personnel to ensure that they are adhering to safe working practices, are aware of risks and are observing the operating instructions.
  - Wear safe work clothes when you are working on or with the machine. Avoid wearing rings, watches, ties, scarves, open jackets and loose clothing. There is a risk of injury from, for example, becoming stuck or being drawn in.
  - Protective goggles, safety helmets, safety shoes and gloves, reflective vests and ear protection etc. are required for specific jobs.
  - Ensure that you obtain information on any special safety regulations for the job site from the site foreman.
  - Always tilt up the safety lever before leaving the operator's seat.
  - When getting in and out, do not hold on to the steering column, control panel or joystick. Doing this could cause unintentional movement, which could result in an accident.
  - Never jump from the machine; use the steps, ladders, gangplanks and supporting straps provided for this purpose.
  - **Face the machine when getting in or out and always use three-point support, i.e. two hands and one foot or two feet and one hand must always be in contact with the access system at the same time.**
  - Familiarize yourself with the location of the emergency exit through the front window.
  - In the absence of any other instructions, proceed as follows for all maintenance and repair work:
    - switch off the machine on firm, level ground and anchor the grab in the ground.
    - place all operating levers into neutral and tilt the safety lever up.
    - switch off the engine and remove the start key.
  - Before touching any parts of the hydraulic circuits, you must also operate all pilot control devices (joystick and pedals) in all directions with the start key in contact position in order to reduce the actuating and dynamic pressures in the work circuits. You must then reduce the internal tank pressure as described in these operating instructions.
  - Secure all loose parts on the machine.
  - Never operate a machine before carrying out a careful inspection tour and checking whether any warning signs are missing or illegible.
  - **Respect all danger and safety instructions.**
  - **For special applications the machine must be equipped with specific safety equipments. Work only if they are mounted and functional.**
  - Do not carry out any modifications, alterations or conversions to the machine which may affect safety without the express permission of the manufacturer. This also applies for the installation of safety devices and valves and for welding work on load-bearing parts.
  - It is forbidden to repair the cab.
  - **Not original equipment and component parts or such kind, which has generally not been validated by LIEBHERR for installation or extension, has not to be installed or added onto the excavator without previous written agreement of LIEBHERR. Wherefore the necessary technical documentations has to be at LIEBHERR's disposal.**

### 2.3.2 Avoidance of crushing and burns

- Do not work beneath the equipment if it is not safely positioned on the ground or supported.

- Do not use any damaged or insufficient load-bearing take-up materials, such as ropes or chains.
- Wear work gloves when working with wire cables.
- When working on the equipment, never use your fingers to locate bores; use the correct punch for the procedure.
- Ensure that no objects enter the fan when the engine is on. The fan will eject or destroy these objects and will itself be damaged.
- The engine cooling system is hot and pressurized when near operating temperature. Avoid coming into contact with coolant carrying parts. There is a risk of sustaining burns.
- Only check the coolant when the sealing cap of the expansion container has cooled to a point where it is possible to touch it. Then turn the cap carefully to let off the overpressure.
- Engine and hydraulic oil are hot when near operating temperature. Avoid coming into contact with hot oil or oil-bearing parts.
- Wear protective goggles and gloves when working on the battery. Avoid sparks and naked flames.
- Never permit the grab to be guided by hand by auxiliary personnel.
- When reaching into the engine compartment, always secure the side doors against unintentional closing by positioning the supports provided for this purpose.
- Never lay under the machine if it is raised with work equipment and has not been correctly and securely supported with hardwood beams.

### 2.3.3 Avoidance of fire and explosions

- Switch off the engine when refuelling.
- Do not smoke or use a naked flame when refuelling and charging the batteries.
- Always start the engine in accordance with the operating instructions.
- Check the electrical system regularly.
- Have all faults, such as loose connections, blown fuses and lamps and clogged or abraded cables rectified by personnel.
- Do not transport any combustible liquids anywhere on the machine other than in the tanks provided for this purpose.
- Check all lines, hoses and screwed joints regularly for leakage and damage.
- Rectify leakages immediately and replace damaged components.
- Oil spraying out of leaking areas can easily cause a fire.
- Ensure that all holds and shields are correctly installed to guard against vibration, abrasion and heat accumulation.
- Do not use cold start materials (ether) in the vicinity of heat sources, naked flames or in inadequately ventilated areas.
- Do not use any starting aids containing ether to start diesel engines with preheating or flame glow systems. There is a risk of EXPLOSION.
- Familiarize yourself with the location and operation of fire extinguishers on the machine and with local fire warning and fire abatement options.
- **The possibility exists to install an extinguisher into the driver's cab.**
- **Covers and boxes locks have to be unlocked, to facilitate the fight against fire in case of.**

## 2.4 Signs on the machine

### 2.4.1 Introduction

The machine displays several types of signs:

- **Safety plates** provide warnings relating to dangers of accidents which could result in serious injury or death.
- **Information plates** indicate specific points relating to the operation, maintenance and characteristics of the machine.
- **Nameplates** are attached to components for which the machine number must be provided when ordering spare parts.



---


#### **Danger!**

Non-observance of **safety plates** can result in serious injury or death.

- ▶ Check warning plates regularly to ensure that they are complete and clearly legible.
  - ▶ Replace missing or illegible safety plates immediately.
-



## 2.4.2 Arrangement of signage

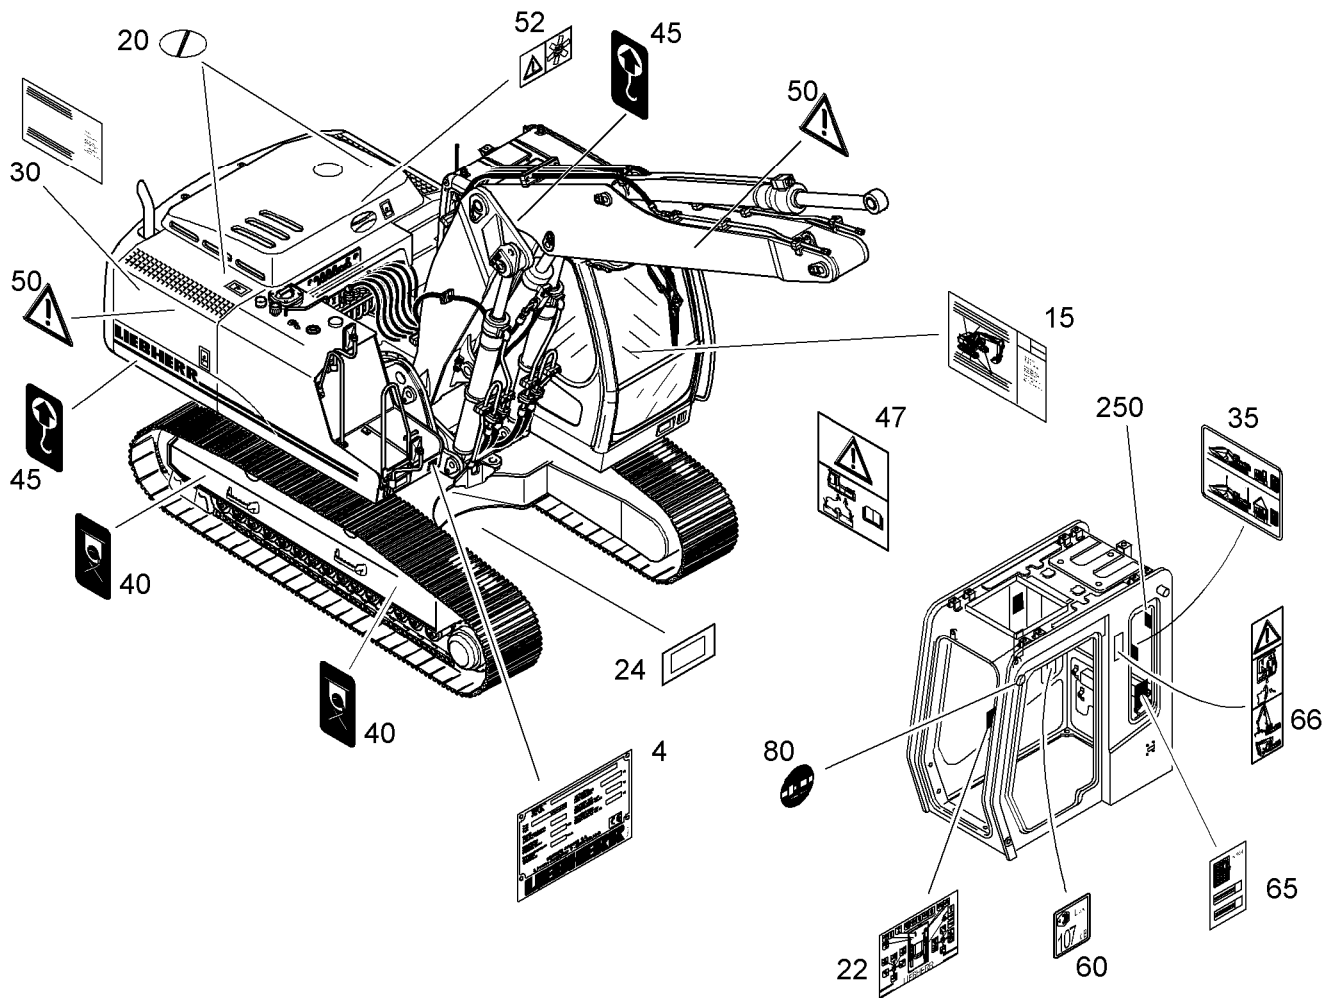

**Fig. 2-1** Arrangement of signage on the machine

4	Nameplate	47	Safety plate, external start
15	Lubrication chart	50	Obstruction safety plate
20	Prohibiting sign	52	Engine-off safety plate
22	Operating symbols plate	60	Information plate – sound / power level [truck]
24	Plan number plate	65	Load chart
30	Lubrication chart, engine	66, part 1	Accident prevention safety plate
35	Information plate, load and anchoring points	66, part 2	Safety lever
40	Information plate, lashing points	66, part 3	Safety plate work equipment
45	Information plate, stop-lift point	80	Information plate, safety belt
		250	Information plate, rear window


### 2.4.3 Explanation of signage



**Plate 4: Machine nameplate**

The nameplate displays the following information:

- Vehicle identification number
- Type
- Construction year
- Engine output
- Top speed
- Permissible overall weight
- Permissible axle load, front
- Permissible axle load, rear

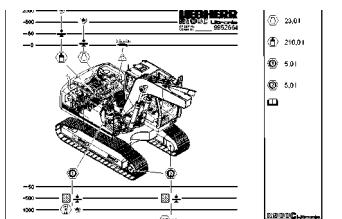


**Plate 15: Lubrication chart**

Displays the relevant capacities and the change intervals, grease quality, fill and lubrication positions.




**Plate 20: Prohibiting sign**

Entering the marked area is forbidden.

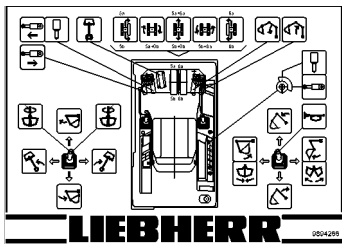

**Plate 22: Operating symbols**

Describes the functions of the operating devices which are not labelled.



**Schild 24: Plan number**


Indicates the plan number.

Signs on the machine



**Plate 30: Lubrication chart, engine**

Indicates the maintenance intervals for the diesel engine.

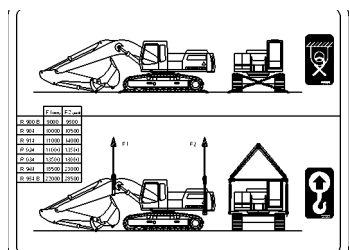


**Plate 35: Loading and anchoring points**

Identifies the positions of the loading and anchoring points, as well as the relevant weight of the machine.




**Plate 40: Lashing point**

Indicates the machine's lashing points.

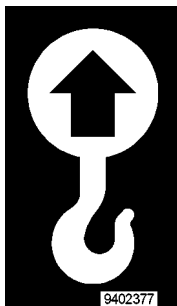

**Plate 45: Stop-lift point**

Indicates the machine's stop-lift points.

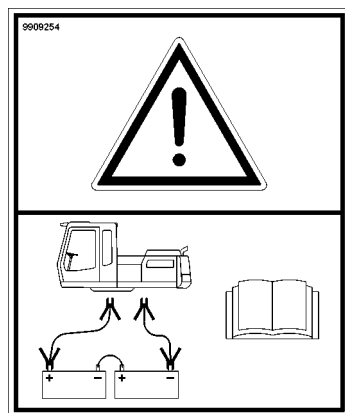


**Plate 47: External starting**

The information in the operating instructions must be carefully noted when starting externally.




**Plate 50: Obstruction**

It is forbidden to stand in the danger zone.

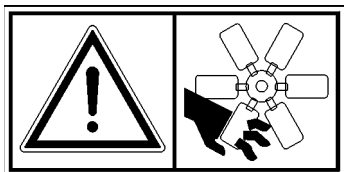

**Plate 52: Engine-off**


The engine hood may only be opened when the engine is switched off.

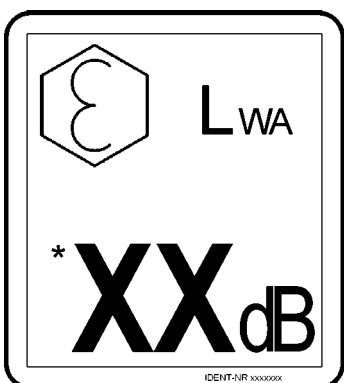

**Plate 60: Sound/power level [truck]**


Indicates the sound/power level of the machine to the environment in dB(A).

\*XX = The applicable weight for the machine is provided on the operator's cab.

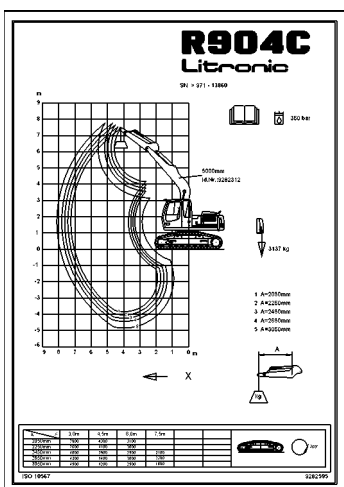


**Plate 65: Load chart**

Shows the permissible loads dependent on the working radius.

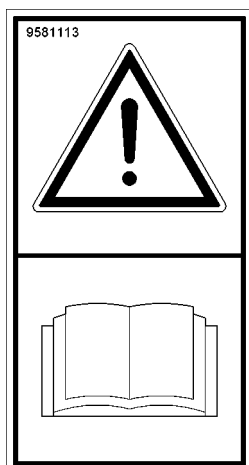


**Plate 66, Part 1: Accident prevention**

The accident prevention regulations given in the operating instructions must be carefully noted when operating the machine.

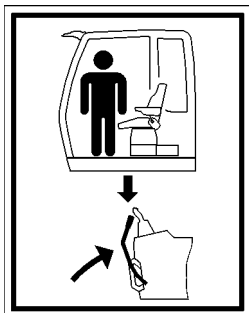


**Plate 66, Part 2: Safety lever**

Pull safety lever up fully before leaving the operator's seat.

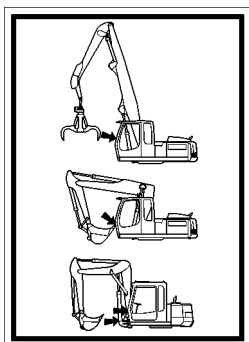


**Plate 66, Part 3: Equipment**

Work equipment reaches as far as the cab! Caution – work equipment retracted.

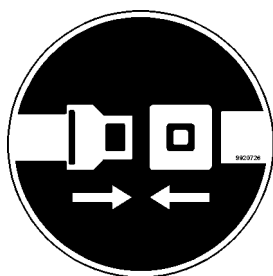

**Plate 80: Safety belt**


The safety belt must be fastened before starting the machine.

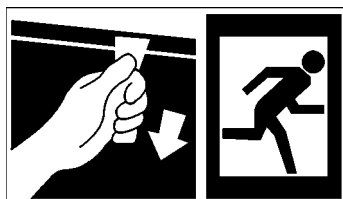

**Plate 250: Emergency exit – rear window**

The rubber weatherstrip can be loosened and removed and the rear window pushed out by pulling the clip on the inside of the rear window.

### 2.4.4 Nameplates on the machine

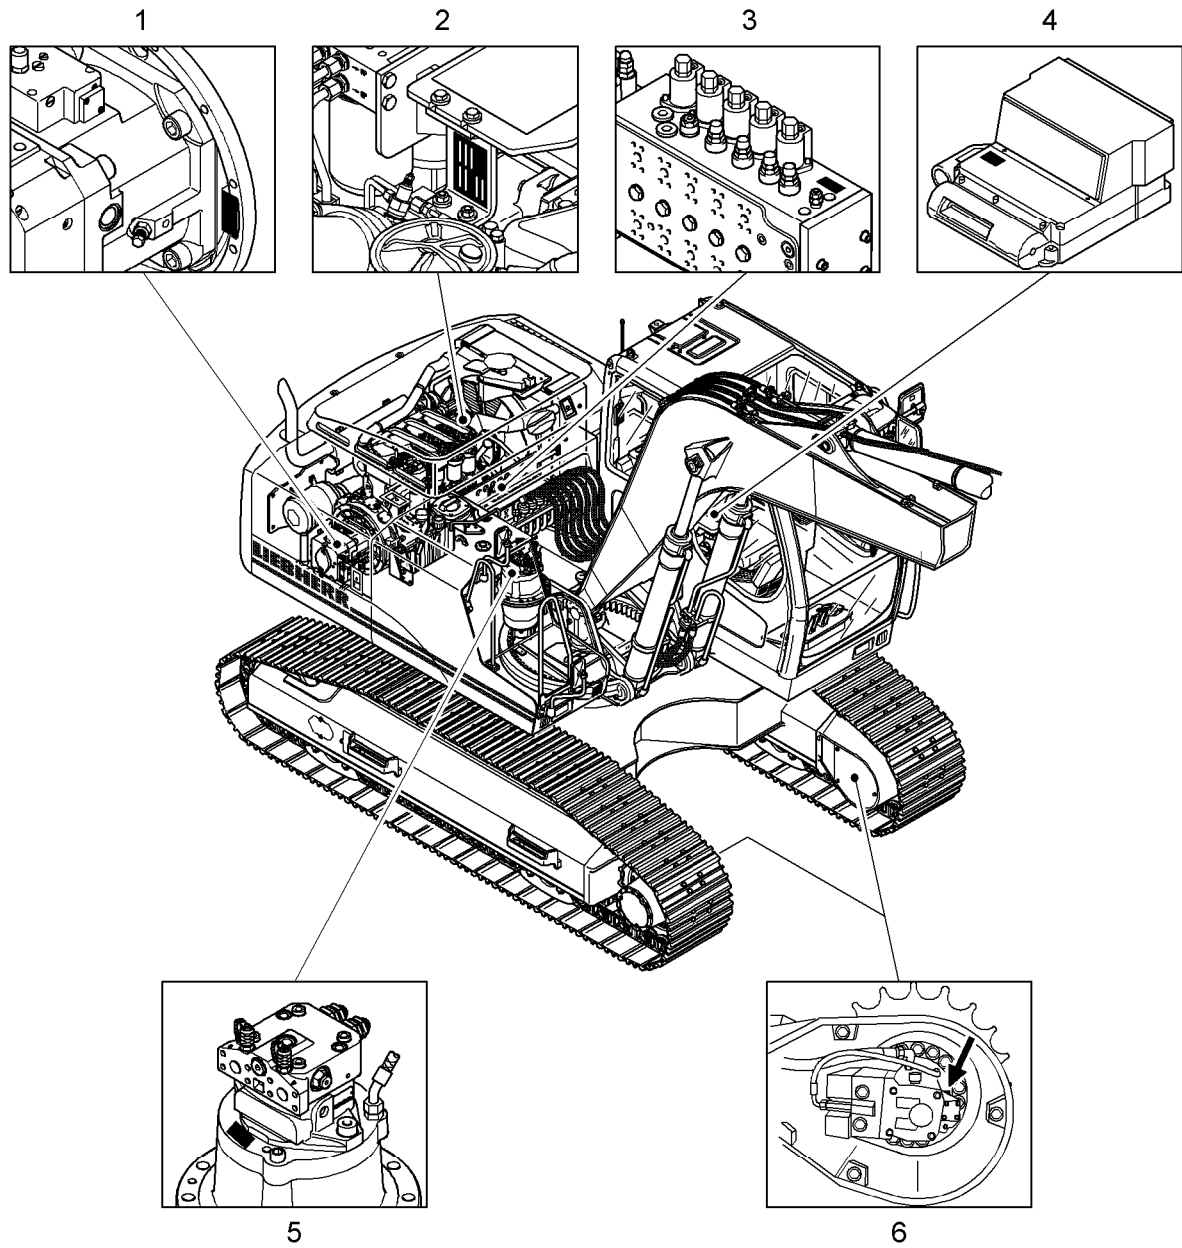


**Fig. 2-2** Important nameplates on the machine

- |   |                |   |                                   |
|---|----------------|---|-----------------------------------|
| 1 | Hydraulic pump | 4 | Heating/air conditioning device   |
| 2 | Diesel engine  | 5 | Slewing gear transmission         |
| 3 | Control block  | 6 | Drive transmission with oil motor |

# 3 Control and operation


## 3.1 Operating and control elements

### 3.1.1 Overview of the operator's standing position

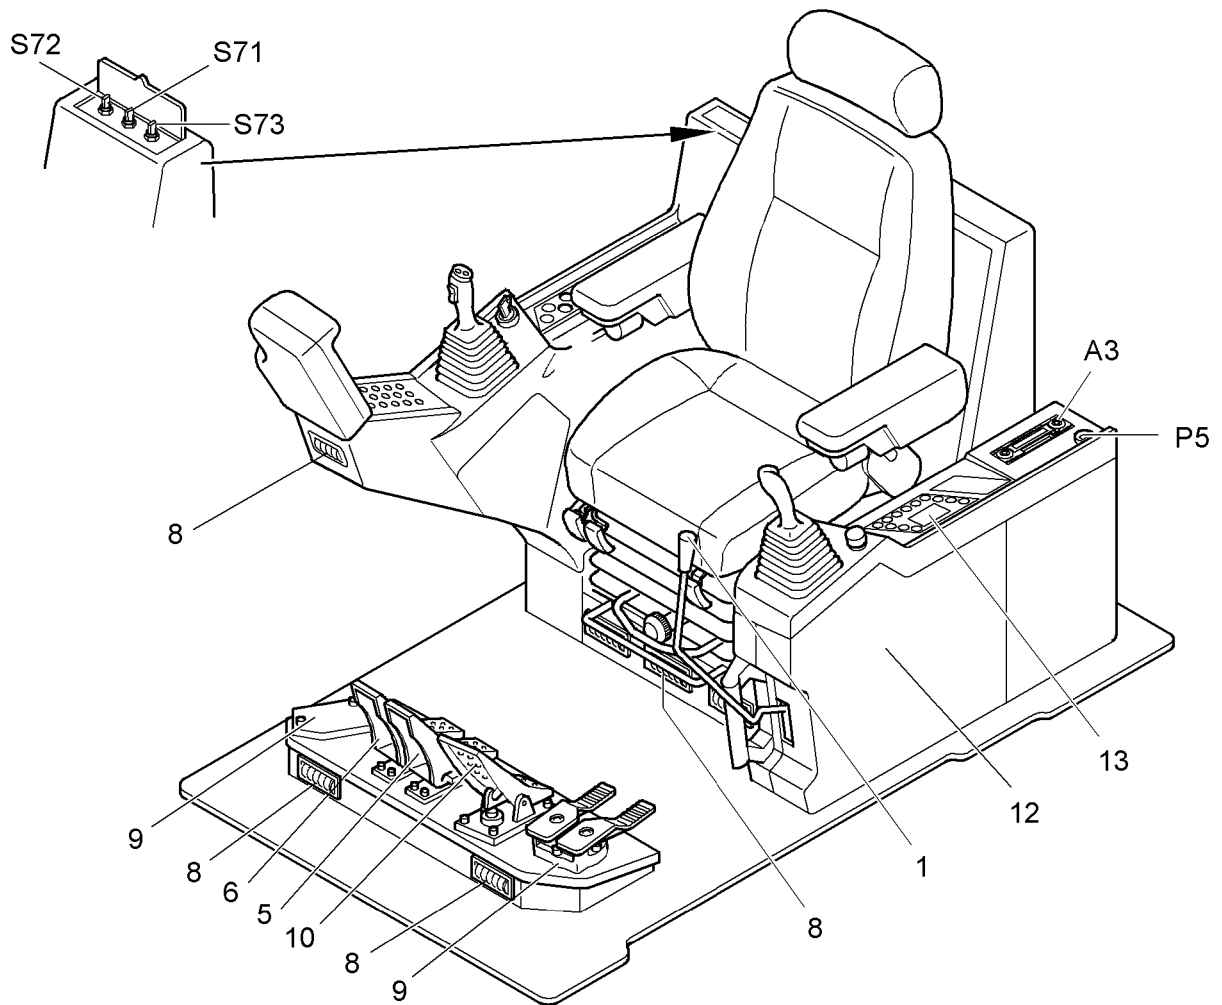


**Fig. 3-1** Operator's standing position

- |           |   |            |  |
|-----------|---|------------|--|
| <b>1</b>  | Servo control safety lever                | <b>13</b>  | Heating/air-conditioning system            |
| <b>5</b>  | Pedal for left drive unit                 | <b>A3</b>  | Radio (optional extras)                    |
| <b>6</b>  | Pedal for right drive unit                | <b>P5</b>  | Operating hours counter                    |
| <b>8</b>  | Air vent, heating                         | <b>S71</b> | Automatic / manual speed adjustment switch |
| <b>9</b>  | Equipment operation (optional extras)     | <b>S72</b> | + / - speed switch                         |
| <b>10</b> | Positioning swing brake (optional extras) | <b>S73</b> | Emergency operation switch                 |
| <b>12</b> | Fuse box                                  |            |  |

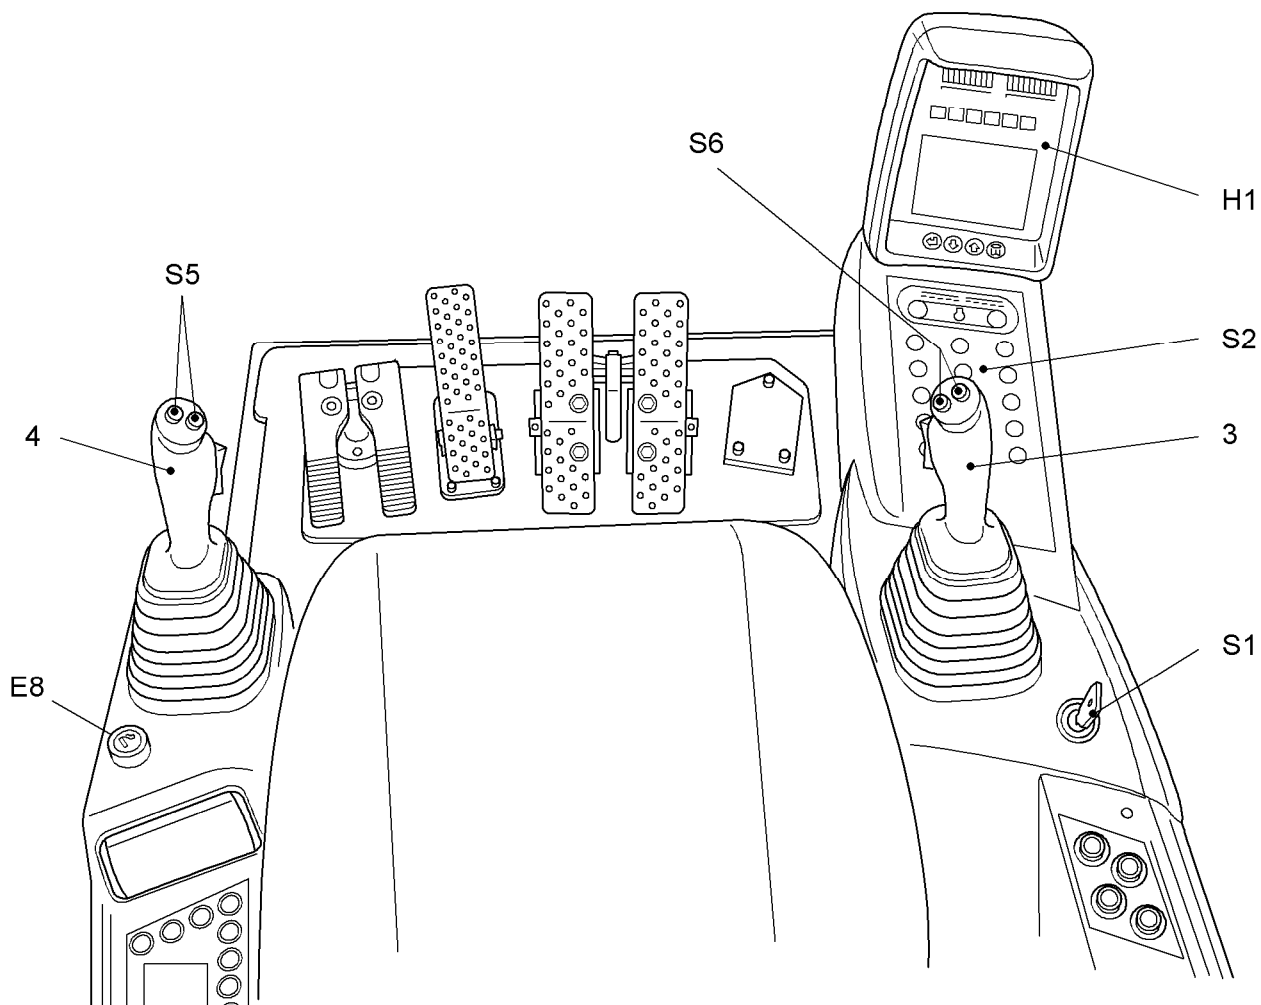

**Fig. 3-2** Operator's standing position, seen from the operator's point of view

- |           |                   |           |                       |
|-----------|-------------------|-----------|-----------------------|
| <b>3</b>  | Joystick, right   | <b>S1</b> | Ignition switch       |
| <b>4</b>  | Joystick, left    | <b>S2</b> | Keypad                |
| <b>E8</b> | Cigarette lighter | <b>S5</b> | Turn grab pushbuttons |
| <b>H1</b> | Monitoring screen | <b>S6</b> | Horn                  |

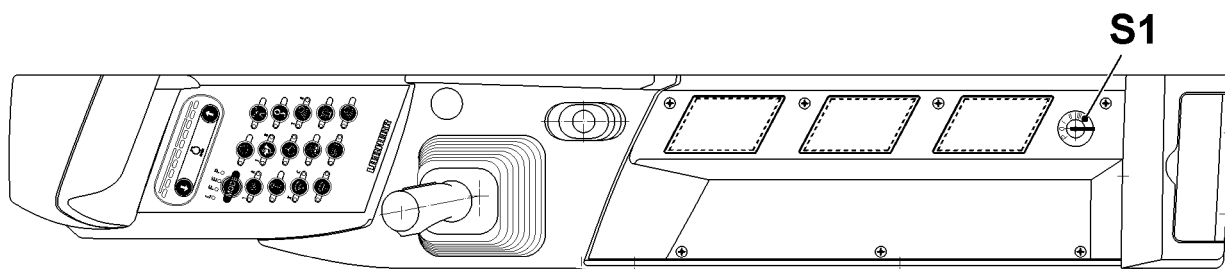


**Fig. 3-3** Ignition key position (only for R914B type 1061)

LFR/en/Edition: 5 / 2006



### 3.1.2 Arrangement of joystick

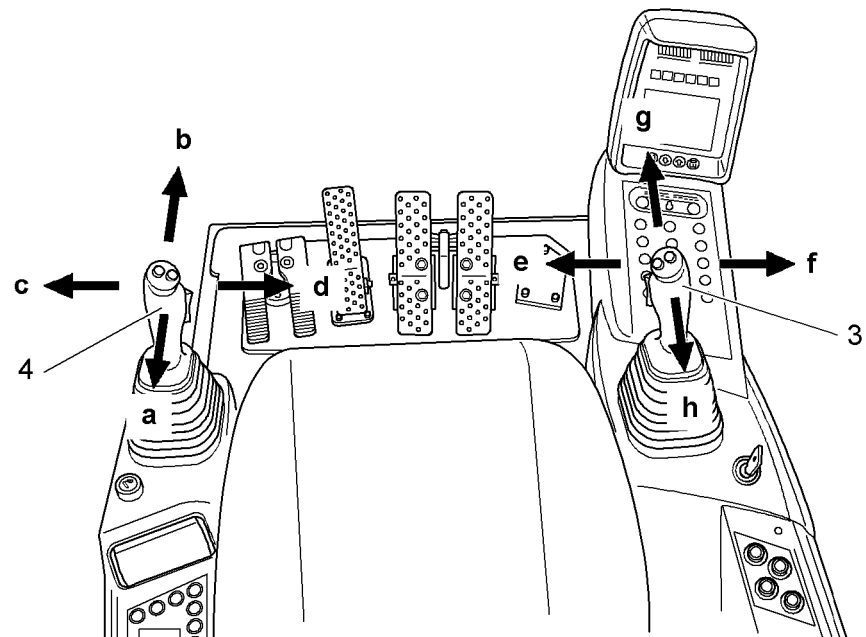

**Fig. 3-4** Joystick, right (3) and left (4)

#### Standard control

The left joystick (4) controls the stick and slewing movements.

- Direction of movement **a** and **b**: Stick is drawn in or out.
- Direction of movement **c** and **d**: Upper carriage is rotated to the left or to the right.

The right joystick (3) controls the boom or bucket and grab movements.

- Direction of movement **e** and **f**: Bucket will be tilted up or down, grab will close or open.
- Direction of movement **g** and **h**: Boom will be raised or lowered.



#### Note !

From delivery, the machine is equipped with the standard control system corresponding to the norm ISO. Nevertheless, the machine can be equipped with a commutation circuit allowing the use of a special control system (for example LIEBHERR control system).

### 3.1.3 Keypad

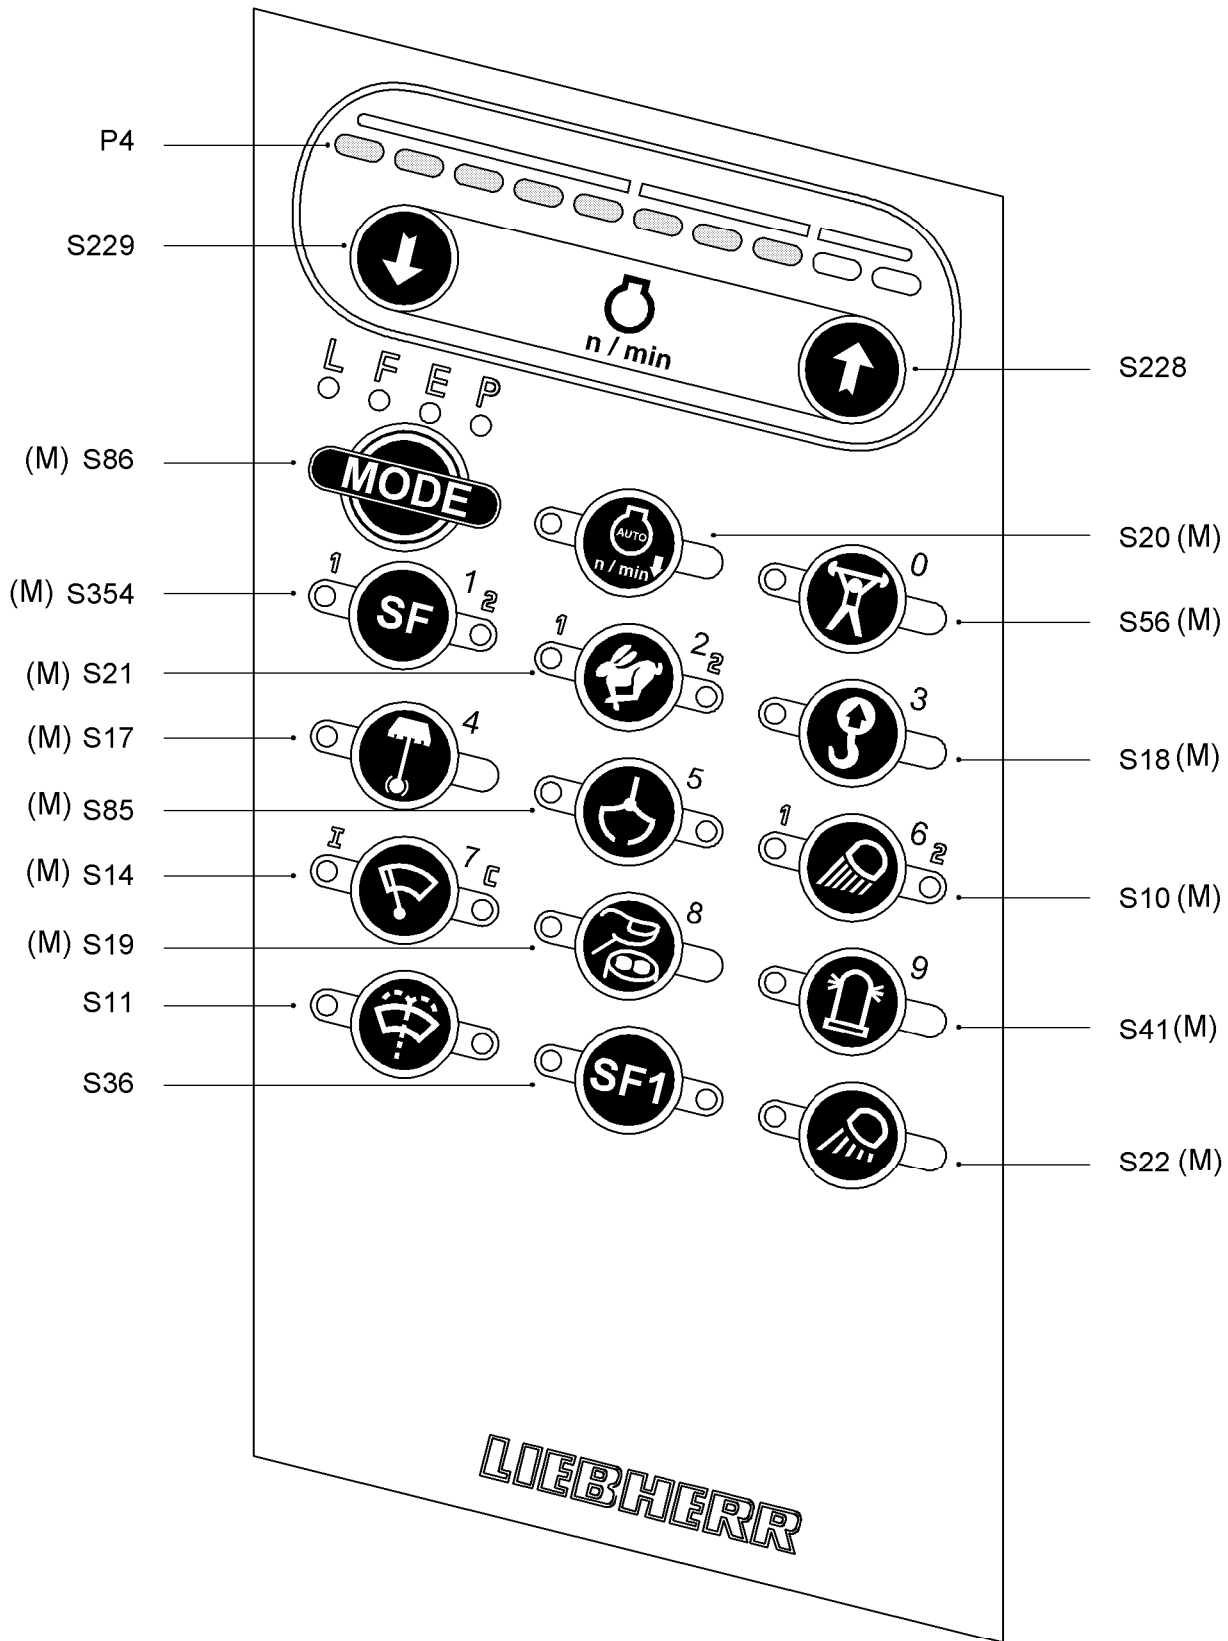


Fig. 3-5 Excavator keypad

**Note !**

The function of the push buttons marked with (M) are memorized when stopping the excavator. This means that the controlled function recovers the previous state (on, off, 1/2, L/H,...) before the machine had been turned off

**S10 - Driving light / Equipment headlight**

- ▶ Press the switch.
  - ↖ Driving light is activated.
  - ↖ LED 1 in the switch illuminates.
- ▶ Press switch again.
  - ↖ Driving light is deactivated.
  - ↖ LED 1 in the switch goes out.
  - ↖ Equipment headlight is activated.
  - ↖ LED 2 in the switch illuminates.
- ▶ Press switch again.
  - ↖ Driving light and equipment headlight are switched on.
  - ↖ LEDs 1 and 2 in the switch illuminate.
- ▶ Press switch again.
  - ↖ Driving light and equipment headlight are switched off.
  - ↖ LEDs 1 and 2 in the switch go out.

**S11 – Windscreen washing unit**

- ▶ Press and hold button.
  - ↖ Washing water will be sprayed onto the windscreen through the outlet nozzles.
  - ↖ The windscreen washer runs continuously.
- ▶ Release the button.
  - ↖ Washing water will be stopped.
  - ↖ Windscreen washer will run continuously for approx. another 3 seconds.

**S14 – Windscreen washer**

- ▶ Press switch.
  - ↖ Intermittent setting is activated.
  - ↖ LED I in the switch illuminates.
- ▶ Press switch again.
  - ↖ Continuous operation is activated.
  - ↖ LED C in the switch illuminates.
  - ↖ LED I in the switch goes out.
- ▶ Press switch again.
  - ↖ Windscreen washer is switched off.
  - ↖ LED C in the switch goes out.

**S17 – Slewing gear brake**

- ▶ Press switch.
  - ↖ Slewing gear brake is engaged.
  - ↖ Upper carriage is locked.
  - ↖ LED in the switch illuminates.
- ▶ Press switch again.
  - ↖ Slewing gear brake is released.
  - ↖ LED in the switch goes out.



### S18 – Overload warning device (optional)

- ▶ Press switch.
  - ↗ Overload warning device is activated.
  - ↗ LED in the switch illuminates.
- ▶ Press switch again.
  - ↗ Overload warning device is deactivated.
  - ↗ LED in the switch goes out.
- No overload warning device is built in.
- ▶ Press switch.
  - ↗ The symbol for "No overload warning device is present" appears on the monitoring screen.



- ↗ LED in the switch illuminates.
- ▶ Press switch again.
  - ↗ The symbol for "No overload warning device is present" goes out.
  - ↗ LED in the button goes out.



### S19 – Additional function release (optional)

- ▶ Press switch.
  - ↗ Additional function (eg. rotating grab) is activated.
  - ↗ LED in the switch illuminates.
- ▶ Press switch again.
  - ↗ Additional function is deactivated.
  - ↗ LED in the switch goes out.



### S20 – Automatic idling

- ▶ Press switch.
  - ↗ Automatic idling is activated.
  - ↗ LED in the switch illuminates.
- ▶ Press switch again.
  - ↗ Automatic idling is deactivated.
  - ↗ LED in the switch goes out.



### S21 - High speed gear

- ▶ Press the switch.
  - ↗ Transfer from normal drive to fast drive is activated.
  - ↗ LED 1 in the switch illuminates.

While driving, the machine will automatically transfer from normal drive to fast drive. LED 2 illuminates after transfer to fast drive.

- ▶ Press switch again.
  - ↗ Transfer from normal drive to fast drive is deactivated.
  - ↗ LED 1 in the switch goes out.



**S22 - Additional headlight (optional)**

- ▶ Press the switch.
  - ↖ Additional headlight is switched on.
  - ↖ LED in switch illuminates.
- ▶ Press switch again.
  - ↖ Additional headlight is switched off.
  - ↖ LED in the switch goes out.



**S36 – Special function 1 (optional)**

Configuration and activation according to kit.



**S41 – Rotating beacon (optional)**

- ▶ Press switch.
  - ↖ Rotating beacon is switched on.
  - ↖ LED in the switch illuminates.
- ▶ Press switch again.
  - ↖ Rotating beacon is switched off.
  - ↖ LED in the switch goes out.



**S56– Primary pressure increase (optional)**

- ▶ Press switch.
  - ↖ The opening pressure of the primary relief valve is higher.
  - ↖ The force on the working attachment is increased and simultaneously, the movements of the machine become slow.
  - ↖ LED in the switch illuminates.
- ▶ Press switch again.
  - ↖ The opening pressure of the primary relief valve is set back at its initial value.
  - ↖ LED in the switch goes out.



**S85 – Grapple operation (optional)**


This button must be turned on each time when a grapple is operated.



**S86– Mode selection, speed adjustment**

Four different modes can be selected by pressing the switch. The currently active mode will be displayed under the letter on the LED.

- L: LIFT mode (speed level 5)
- F: FINE mode (speed level 10)
- E: ECO mode (speed level 8)
- P: POWER mode (speed level 10)



**P4– Engine speed display**

The speed range of the diesel engine is displayed in 10 levels.



**S228 – Increase speed**


- ▶ Press switch.
  - ↖ Speed will be increased by one level.
  - ↖ A second LED to the right illuminates in display P4.

**S229 – Decrease speed**

- ▶ Press switch.
  - ↗ Speed will be decreased by one level.
  - ↗ A second LED from the right goes out in display P4.

**S354– Super Finish (quantity reduction)**

- ▶ Press switch.
  - ↗ The quantity reduction set using the operator's menu is active.
  - ↗ LED 1 in the switch illuminates.
  - ↗ The symbol ® appears in the TI field, if quantity reduction <= 99%
- ▶ Press switch again.
  - ↗ Quantity reduction is deactivated.
  - ↗ LED 1 in the switch goes out.
  - ↗ If the symbol turns black ☐ = 100%

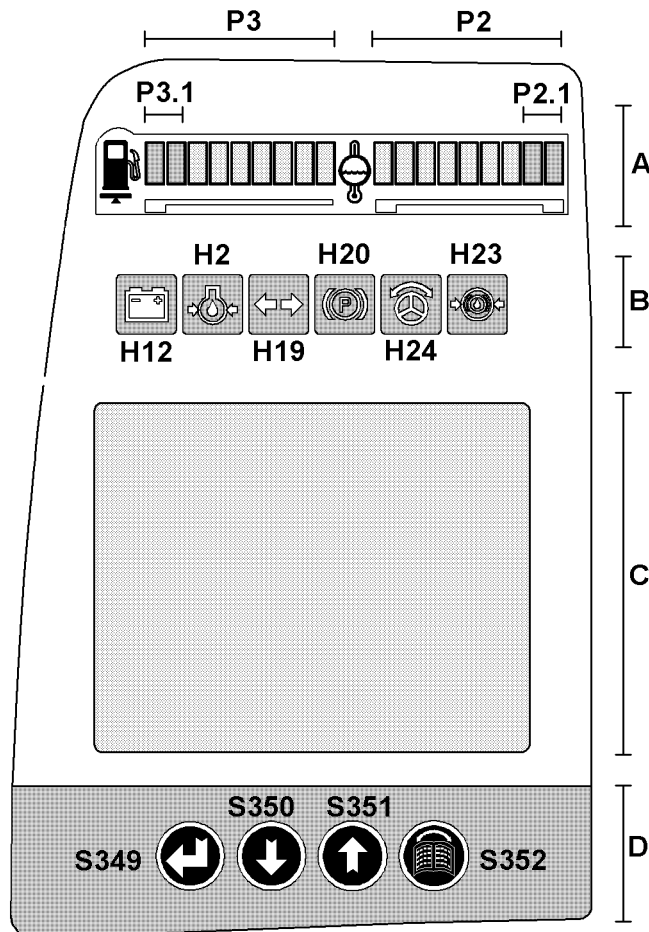**3.1.4 Monitoring display****Fig. 3-6** Monitoring display

- |          |                      |            |                             |
|----------|----------------------|------------|-----------------------------|
| <b>A</b> | Analog-value display | <b>H24</b> | Telltale light steering     |
| <b>B</b> | Indicator lights     | <b>P2</b>  | Coolant temperature display |

<b>C</b>	LCD screen	<b>P2.1</b>	Coolant temperature display red area
<b>D</b>	Menu control buttons	<b>P3</b>	Fuel level display
<b>H2</b>	Telltale light, engine oil pressure	<b>P3.1</b>	Fuel level display red area
<b>H12</b>	Telltale light, battery	<b>S349</b>	Back button
<b>H19</b>	Telltale light indicator	<b>S350</b>	Down button
<b>H20</b>	Telltale light parking brake	<b>S351</b>	Up button
<b>H23</b>	Telltale light service brake accumulator pressure	<b>S352</b>	Menu button

### Area A : Analog-value display



#### P2 – Diesel engine coolant temperature display

The display must be in the green area when operating the machine.

In the event of overheating (over 100 °C during more as 3 seconds), the red LEDs **P2.1** at the end of indicator **P2** light up.

Simultaneously, the buzzer in the cab also sounds and the error will be saved as error code **E 503**.

The engine power is automatically reduced.

- ▶ Stop working as soon as possible.
- ▶ Allow the engine to continue to idle high.
- If the alarm warning exceeds 60 seconds.
- ▶ Allow the engine to low idle for another 3 to 5 minutes.
- ▶ Switch off the engine.
- ▶ Find and correct the cause of the problem.
- If the overheating is stronger (over 104 °C during more as 7 seconds), the corresponding symbol is displayed on the main screen and the error will be saved as error code **E 523**.
- ▶ Switch off the engine immediately.



#### P3 – Fuel level display



The display's illuminating LEDs indicate the amount of fuel remaining in the tank.

When the red LEDs **P3.1** illuminate, a reserve quantity of 10-20% is still in the tank, depending on the type of machine.

## Area B :Indicator lights



### H2 – Indicator light, low engine oil pressure

The indicator light illuminates if the engine oil pressure drops below a given value during more than 3 seconds when the machine is operating.

The buzzer in the cab also sounds.

When this indicator light illuminates, the error will be saved as error code **E 501**.

- ▶ Bring the engine to a low idle immediately.
- ▶ Switch off the engine immediately.

□ If the pressure remains too low for 5 other seconds, the corresponding symbol is displayed on the main screen and the error will be saved as error code **E 522**.

- ▶ Find and correct the cause of the problem.



### H12 –Indicator light, battery charge

The indicator light illuminates if the ignition key is placed in the contact position.

The indicator light goes out as soon as the engine is started.

When the machine is operating, this indicator light illuminates if the alternator belt or the electrical charging system are defective.

- ▶ Bring the engine to a low idle immediately.
- ▶ Allow the engine to idle for approximately 5 seconds.
- ▶ Switch off the engine.
- ▶ Find and correct the cause of the problem.



### H19 – No function



### H20 –No function



### H23 – No function



### H24 – No function



## Area B : Menu control buttons



S349



S350



S351



S352

**Fig. 3-7** Menu control buttons

The screen can be operated using the following 4 buttons:

- **S349: Back** button
- **S350: Down** button



- **S351: Up** button
  - **S352: Menu\*** button
- \* = Change from main to submenus

These buttons can be used to jump from the main menu to the submenus or to move from page to page.

### Area C: LCD Screen

#### To change the screen contrast:

- ▶ Press button **Menu** and arrow button **Up** (higher contrast) or **Down** (lower contrast) simultaneously.
- ↳ The value set will be saved.

#### To alter the brightness of the main screen:

- ▶ Press button **Back** and arrow button **Up** (brighter) or **Down** (darker) simultaneously.
- ↳ The value set will be saved.



#### Note!

A light sensor built in to the top left of the monitoring screen adapts the illumination on the main screen to the brightness of the environment. The adaptation is done from saved set value. Illumination will be automatically reduced in conditions of low environmental brightness and inversely.

#### To change the brightness and the contrast setting to the initial setting:

- ▶ Turn off the ignition.
- ▶ Press and hold the **Up** and **Down** buttons simultaneously.
- ▶ Turn on the ignition again.
- ▶ Release the buttons once the automatic check is completed.

### 3.1.5 Main screen

The main screen appears when the machine has been switched on and remains on display until the screen is changed over to the menu selection screen using the **Menu** button.

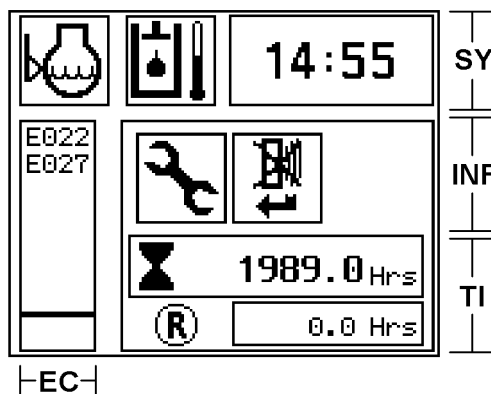
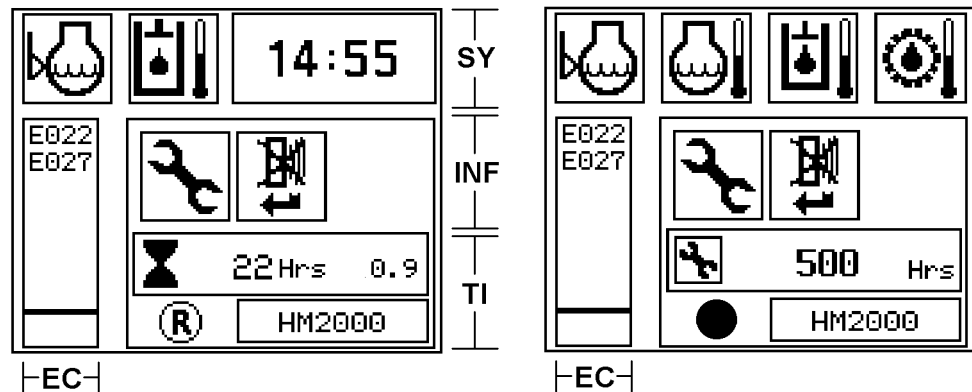


Fig. 3-8 Main screen (from software version 5.6.1)

**EC** Cable error display**INF** Information**SY** Symbols**TI** Operating times**Fig. 3-9** Tool Control main screen (optional equipment)**EC** Cable error display**INF** Information**SY** Symbols**TI** Operating hours, daily operating hours, current work equipment (Tool Control)

## Main screen design

### SY field

The upper field of the monitor shows, on the one hand warning and indicator symbols, on the other hand a clock, if no more than 2 warning symbols are shown. Should more than two symbols be shown, so the clock is no more displayed and up to four symbols can be displayed simultaneously in the field SY

If more than 4 symbols must be displayed, the symbols will be shifted to the left by one symbol every 10 seconds (siehe Kap. , "Warning symbols in the SY field" auf Seite 13).

### EC field

The EC window displays the error codes for electrical faults which occur in the excavator's electronics system (line errors, sensor errors etc.). A maximum of 7 error codes are displayed simultaneously. If there are more than these 7 errors present, an arrow which points to where the other error codes are located will be displayed next to the error code window.

- ▶ Press the **Up** or **Down** button.
  - ↳ The error code window will be shifted in the direction selected in the error code list.

### INF field

The INF field displays information temporarily, in both text and graphic form.

If more than 3 symbols are to be displayed, the symbols will shift one symbol to the left approx. every 10 seconds.

The information is displayed in graphic or text form and indicates specific operating states on the machine. (siehe Kap. , "Information symbols in the INF field" auf Seite 14).

**TI field**

The machine operating hours and the daily operating hours counter are displayed bottom right in this field.



The ® symbol indicates that a quantity limitation is active for the pumps (siehe "Status of hydraulic pumps and electrical inputs and outputs menu" auf Seite 23).

**TI field (optional equipment Tool Control)**

The machine operating hours and the daily operating hours counter are displayed bottom right in this field. During the start-up phase, the operator will be alerted about a possible up-coming service interval, by a graphic symbol displayed instead of the machine hour-meter.



The symbol ® is displayed when an external flow limitation (function "set option") is activated (siehe "Status of hydraulic pumps and electrical inputs and outputs menu" auf Seite 23).



The symbol "●" appears when no external flow limitation is activated. But an internal flow limitation (travel, swing,...) may be activated.

After having selected a tool (siehe Kap. , "Menu "Tool Control" Setting choice for work equipment (optional equipment)" auf Seite 20), the name of the tool is displayed (for example HM200)

**Menu navigation in the event of an error display**


If an error is recognized as "new" in the SY field, the user is returned to the main screen. The relevant error display is activated.



Depending on the error (level of urgency), the buzzer will sound either continuously or in short consecutive bursts. This symbol will be displayed in the INF field.

**Danger!**

If the error displayed is not rectified immediately, this could lead to persons sustaining injury or the machine being damaged.

- ▶ Rectify / have the error rectified immediately.
- ▶ To switch off the buzzer, press the **Back** button.  
 The error will be acknowledged and stored.

**Warning symbols in the SY field**

Each of the symbols which follow will be assigned an error code in the form "E 5xx". Each error which occurs will be stored via the relevant error code.

**E 502–Coolant low**

This symbol appears if the coolant level drops below the water sensor level.

The buzzer sounds simultaneously.

- ▶ Bring the engine to a low idle immediately.
- ▶ Switch the engine off as quickly as possible.
- ▶ Localise the leak and carry out repairs.

**Caution!**

This monitoring device acts as an increased level of security in case of larger amounts of water loss (eg. hose rupture). It does not relieve the operator or maintenance personnel from the responsibility of regularly checking the coolant level in the equalizing reservoir.

**E 503 –Coolant overheat**

This symbol appears simultaneously with the **P2** coolant temperature display.

**E 504–Hydraulic oil level low**

This symbol appears if the oil level in the hydraulic tank drops below the minimum level.

The buzzer sounds simultaneously.

- ▶ Bring the engine to a low idle immediately.
- ▶ Switch the engine off as quickly as possible.
- ▶ Find the leak and carry out repairs.
- ▶ Reduce the tank prestress.
- ▶ Only refill the hydraulic oil using the return-line filter.

**E 505 –Hydraulic oil overheat**

This symbol appears if the hydraulic oil temperature in the tank exceeds 98 °C.

- ▶ Bring the engine to a low idle immediately.
- ▶ Switch the engine off as quickly as possible.
- ▶ Localise and rectify the error (radiator dirty etc.).

**E 506 – Splitterbox oil overheat**

This symbol appears if the oil temperature in the splitterbox exceeds 100 °C.

- ▶ Bring the engine to a low idle immediately.
- ▶ Switch the engine off as quickly as possible.
- ▶ Localise and rectify the error.

**E 511 –Overvoltage**

This symbol appears if the operating voltage exceeds 30 volts for at least 0.5 seconds.

**Quick changer (optional extra)**

This symbol appears during the unlocking process or when the locking pins are retracted. No error codes are displayed.

**Information symbols in the INF field****Preheating on**

This symbol appears while preheating is taking place.

**Preheating off**

Preheating will stop automatically after about 20 seconds and the symbol **Pre-heat off** appears for approx. 2 seconds on the main screen.

**Manual diesel speed adjustment**

This symbol appears if toggle switch **S71** for manual speed adjustment is toggled to the **Manu** position.

**Service due**

This symbol appears if a service interval is due.

- ▶ Switch on the ignition.
  - ↳ The service interval to be carried out will be displayed for approx. 10 seconds in place of the overall operating hours.

**Acknowledge error**

This symbol appears if a machine error (**E5xx**) has occurred and the buzzer sounds simultaneously.

**Parking brake and slewing gear brake operation changed.**

This symbol appears if switch **S73** is in the emergency position.

**“Increased care required” note: Operation changed**

This symbol appears if switch **S73** is in the emergency position.

**Servo control operation changed**

This symbol appears if switch **S73** is in the emergency position.

**Overload warning device (optional extra)**

This symbol appears if the maximum permitted load capacity of the machine has been reached.


**No overload warning device present**

This symbol appears if switch **S18** (overload warning device) is operated, but either no overload warning device is present on the machine or the switch is not cleared.

**Getting information from the operator's menu on the main**

**screen**

**Main screen menu selection**

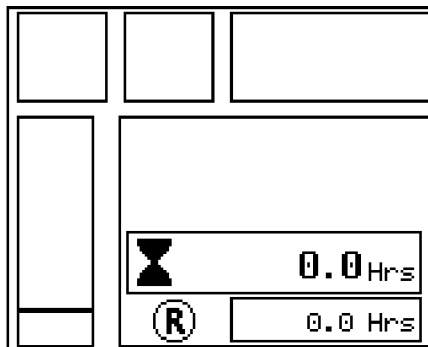


**Fig. 3-10** Main screen

☐ To change to the operator’s menu, the main screen must be visible.



- ▶ Press the **Menu** button on the main screen.
  - ↪ The list of accessible menus is displayed.

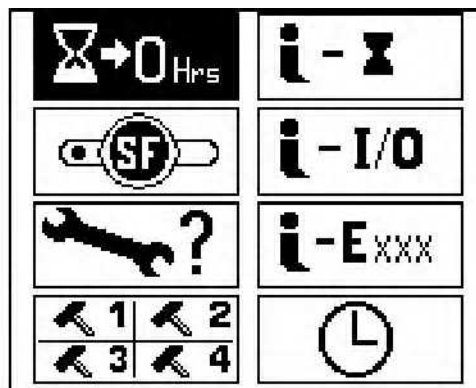

**Fig. 3-11** Menu selection in the operator’s menu.

**To select the operator’s menu:**



- ▶ Press arrow key **Down** or **Up**.
  - ↪ The following or previous operator’s menu will be displayed on screen with a black background.

☐ The selected menu is displayed with a black background, the **Reset daily operating hours** menu is used here as an example.










- ▶ Press the **Menu** button again.
  - ↪ The submenu for the function selected is displayed.



- ▶ Press the **Back** button again.
  - ↪ The submenu will be aborted.


Symbol	Description
	Reset daily operating hours counter

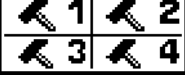**Tab. 3-1**

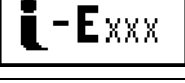Symbol	Description
	Change work speed to SF mode
	Confirm service interval
	Select quantity limitation relating to attachments (eg. hammer)
	Operating hours and device data
	Status of hydraulic pumps and electrical inputs and outputs
	Recorded and stored errors
	Time set

Tab. 3-1

Tab. 3-2 Overview of menu options



**Reset daily operating hours counter menu**

The daily operating hours counter can be reset to 0 using this menu.

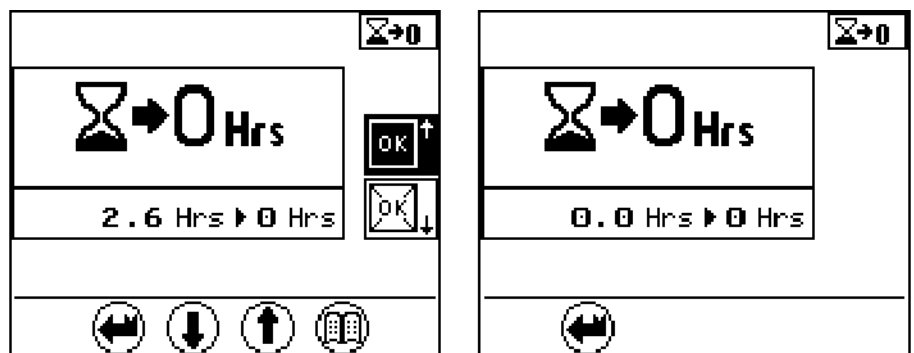


Fig. 3-12 Resetting the daily operating hours counter

**To set the daily operating hours counter to 0:**


- ▶ Press the **Up** arrow key.
  - ↪ The OK which is not crossed out will be displayed with a black background.
- ▶ Press the **Menu\*** button.
  - ↪ The operating hours will be reset to 0.
  - ↪ The arrow key symbols **Up** and **Down** and the **Menu** symbol will no longer be displayed.

**To exit the menu:**

- ▶ Press the **Back** button.
  - ↪ The submenu will be aborted.

**Change work speed to SF mode menu**

The work speed of the excavator equipment can be set using this menu.

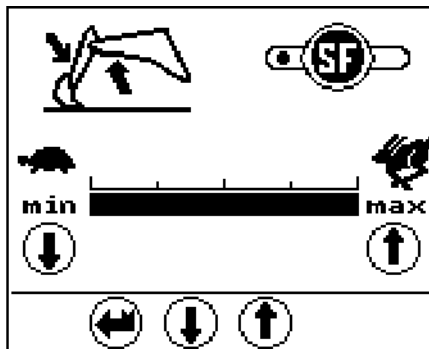

**Fig. 3-13** Work speed to SF mode menu

As soon as this menu is visible on the main screen:

- Switch **S354 (Super Finish)** is activated.
- The work speed can be tested immediately using the joystick.


**To set the work speed:**

- Press switch **S354**.
- ▶ Press the **Up** or **Down** arrow key.
  - ↪ Set the desired work speed. The quantity can be limited to up to 50 % of the maximum capacity.
- ▶ Press the **Back** button.
  - ↪ The submenu will be aborted.
  - ↪ The selected work speed is activated.
  - ↪ LED 1 in switch **S354** illuminates.
  - ↪ The symbol @ appears in the S1 field on the main screen (siehe Fig. 3-10)
- ▶ Press switch **S354**.
  - ↪ Quantity reduction is deactivated.
  - ↪ LED 1 in the switch goes out.
  - ↪ The symbol turns black ● = 100%

**Confirm service interval menu**

This menu is used for information on service intervals and to confirm service work which has been carried out.



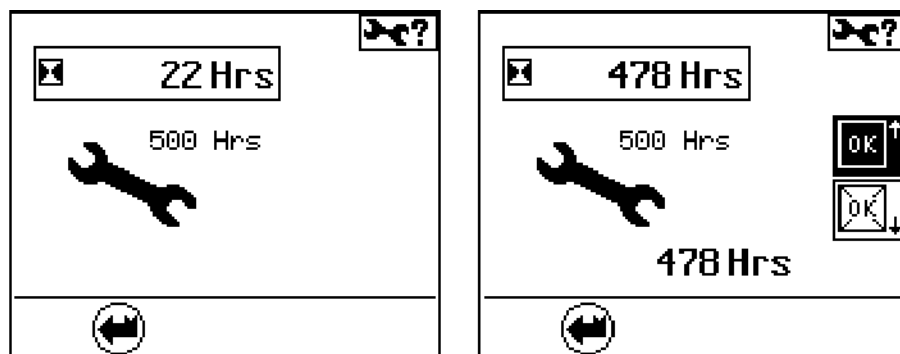


**Fig. 3-14** Service intervals menu

The operating hours of the next service interval (in this example, “500 Hrs”) and the current operating hours (“478 Hrs”) are displayed in the menu.

A pending service interval can be confirmed a maximum of 50 operating hours before the service interval is due.

When this time period has been reached a query will appear to ask whether the service work has been carried out.

- Service work carried out.
  - ▶ Press the **Up** arrow key.
    - ↳ The OK which is not crossed out will be displayed with a black background.
  - ▶ Press the **Menu** button.
    - ↳ The current operating hour will be confirmed as the last service interval carried out.
- Service work not carried out.
  - ▶ Press the **Back** button.
    - ↳ The submenu will be aborted.




**Allocation of quantity limitation options to external input I1 menu**

(Kit input; for example, activation of the hammer pedal)

Predefined quantity limitations have been assigned in this menu.

The arrow opposite the symbol represents the current selection.

In the example(siehe Fig. 3-15), quantity 2 is active if the specified attachment is serviced.

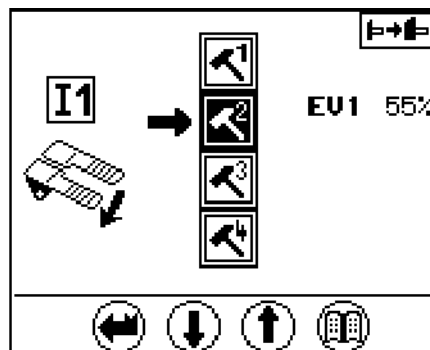

**Fig. 3-15** Work equipment quantity limitation menu

- ▶ Press the **Up** or **Down** arrow key.
  - ↳ A different, predefined quantity (1-4) can be assigned (e.g. when work equip-

ment is changed).

- ▶ Press the **Menu** button.
  - ↪ The selection is confirmed. The arrow displays the current selection.

#### To exit the menu:

- ▶ Press the **Back** button.
  - ↪ The submenu will be aborted.



### Menu "Tool Control" Setting choice for work equipment (optional equipment)


Allocation of flow and pressure limitation options to external input I1

In this menu, the user can choose between predefined options. For each option a pressure limitation and a flow limitation is assigned. When an option is chosen, the limitation values assigned to this option are effective as soon as the command of the optional tool is actuated (actuation of the foot pedal for hammer or grapple for example).



#### Danger!

A wrong option can cause damage to the tool (for example: hydraulic hammer) or restrict its capacity (for example: milling tool)

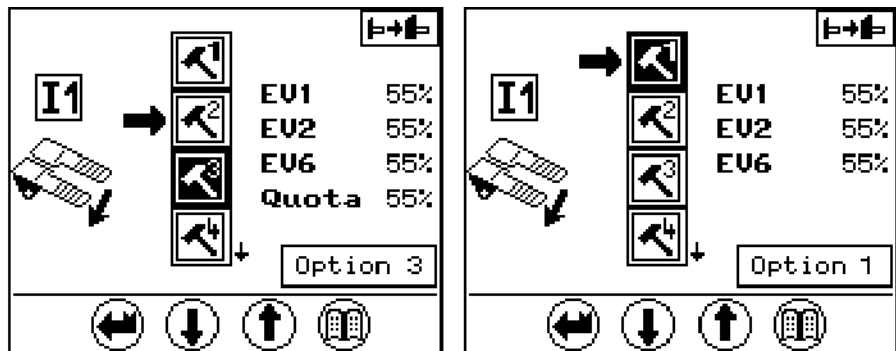

**Fig. 3-16** "Tool Control" menu

**EV1** = Oil flow limitation valve 1

**EV2** = Oil flow limitation valve 2 (from R934)

**EV6** = Pressure limitation valve

**Quota** = not used

The black field shows the activated option. Moving the arrow permits to choose a new option and to activate it using the Menu button.


In the example (siehe Fig. 3-16), quantity 3 is active.

- ▶ Press the **Up** or **Down** arrow key.
  - ↪ A different, predefined quantity (1-10) can be assigned (e.g. when work equipment is changed).
- ▶ Press the **Menu** button.
  - ↪ The selection is confirmed.
  - ↪ The arrow displays the current selection (i.e. the option 1).

#### To exit the menu:

- ▶ Press the **Back** button.
  - ↪ The submenu will be aborted.

- ↖ On main screen the specified attachment is shown (i. e. "Option 1"), the chosen pressure/flow combination is available.
- ↖ The equipment will be operated with reduced hydraulic pressure and flow.

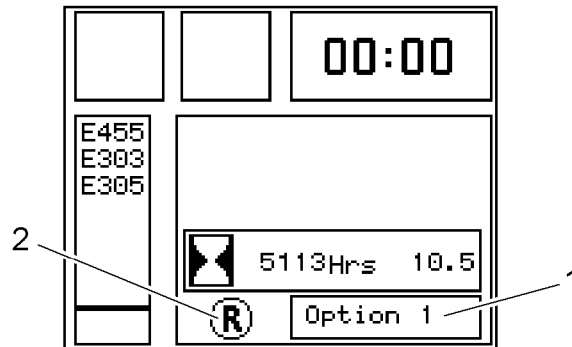

**Fig. 3-17** Main screen, *showing the chosen attachment*

- 1 chosen Option (Work equipment)
- 2 Symbol "R" appears, while the attachment is operated with reduced fow and pressure.




**Note !**

Liebherr as his client service can, as requested, deposit concret names for the work equipment, for ex. "Hammer" oder "Grabber".



**Operating hours menu**


Pages 1 to 3 provide an overview of the operating hours of individual units, proceses and operating types.

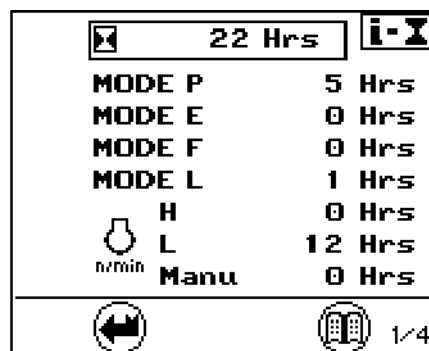

**Fig. 3-18** Engine service life menu (example)

Page 1 provides the service life in hours for:

- Diesel engine in P mode
- Diesel engine in E mode
- Diesel engine in F mode
- Diesel engine in L mode
- Diesel engine at maximum nominal speed H
- Diesel engine in low idle L
- Diesel engine operating in manual, Manu speed adjustment

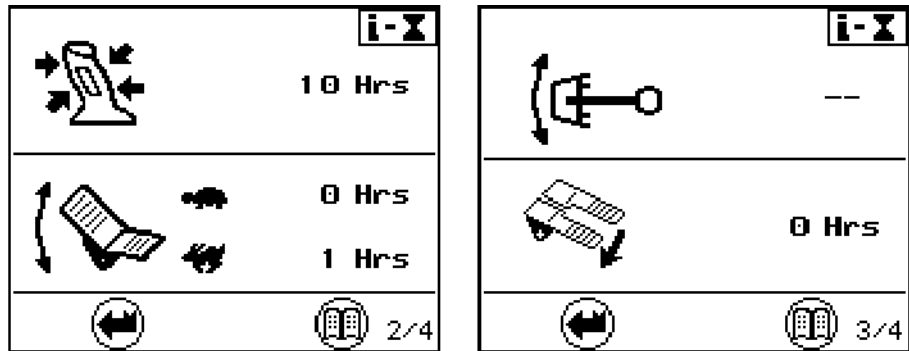

**Fig. 3-19** Service life for travelling motion menu

- ▶ Press the **Menu** button.
  - ↳ Page 2 is displayed.


Page 2 provides the service life in hours for:

- Equipment movements using the joystick
- Travelling motion using the accelerator pedal in crawling and fast modes


- ▶ Press the **Menu** button again.
  - ↳ Page 3 is displayed.

Page 3 provides the service life in hours for:

- Slewing movements of the slewing gear (no activation from device type A 934).
- Additional attached equipment operated via the foot pedals

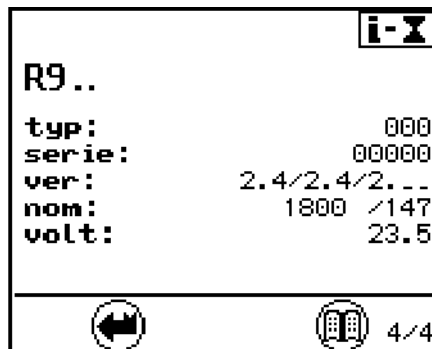

**Fig. 3-20** Technical data display

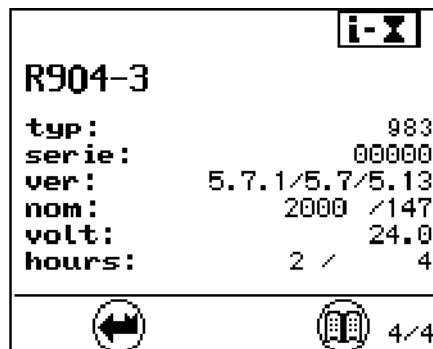

**Fig. 3-21** Technical data display - Tool Control (optional equipment)

- ▶ Press the **Menu** button again.
  - ↳ Page 4 is displayed.


The technical data menu, page 4, provides information on:

- The excavator type, including type and serial number (type, series)
- The design condition of the control which is currently built in (ver)
- The rated speed and the number of teeth on the starter crown (nom)
- The current operating voltage (volt)

- ▶ Press the **Menu** button again.
  - ↳ Page 1 is displayed.


**To exit the menu:**

- ▶ Press the **Back** button.
  - ↳ The submenu will be aborted.



**Status of hydraulic pumps and electrical inputs and outputs menu**


Pages 1 to 3 provide information on the operating position of the hydraulic pumps.

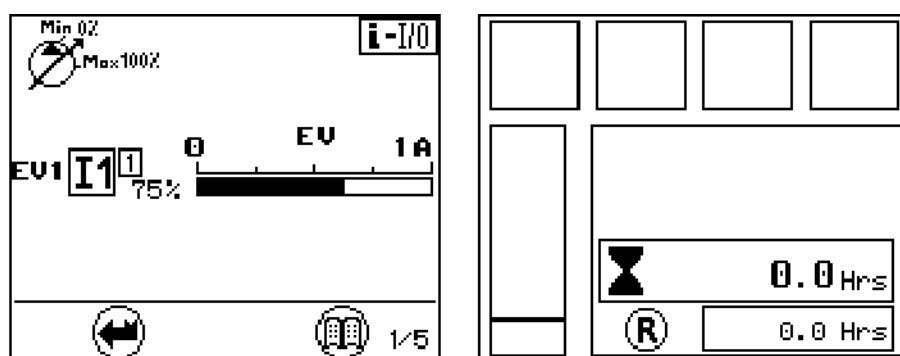

**Fig. 3-22** Quantity limitation menu

Page 1 shows the following for the work hydraulics:

- Whether a quantity limitation signal is active for the pump: if yes, the symbol **R** will be displayed in the TI field on the main screen. Here, for example, Option 1 quantity limitation for attachments is active, which limits the oil flow to the consumer to 75 %.
- When several quantity limitations are activated at the same time, the one with the smallest value is decisive for the hydraulic pump.
- A bar chart containing the current value, which represents the current work speed of the pump.

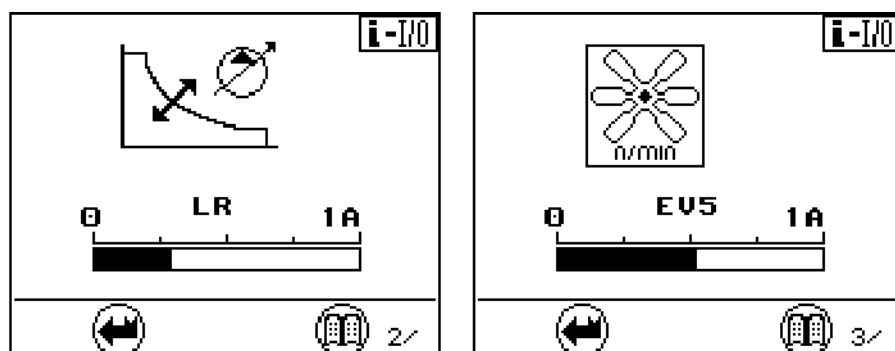

**Fig. 3-23** LR magnet and fan speed current values menu


- ▶ Press the **Menu** button again.
  - ↳ Page 2 is displayed.

The current power of the LR magnet (current value for power setting) is displayed on

page 2.

- ▶ Press the **Menu** button again.
  - ↳ Page 3 is displayed.

The current power of proportional valve EV5 for fan speed control at the hydrostatic fan drive is displayed on page 3.

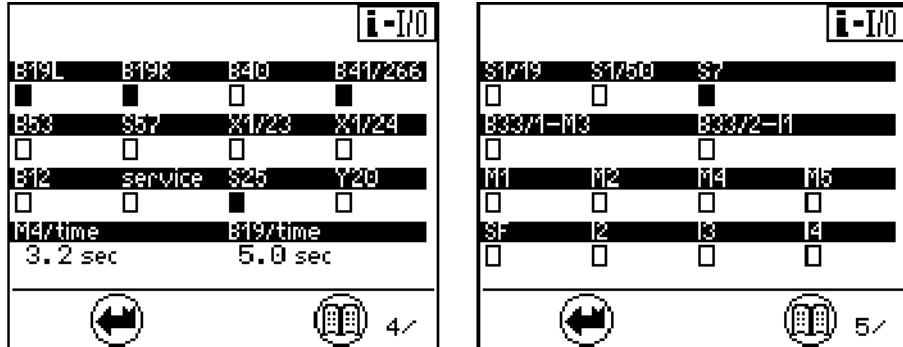

**Fig. 3-24** Electrical inputs

- ▶ Press the **Menu** button again.
  - ↳ Page 4 is displayed.
- ▶ Press the **Menu** button again.
  - ↳ Page 5 is displayed.

Pages 4 and 5 provide an overview of the status of different electrical inputs.

A “□” means "Input not active".


A “■” means "Input active".

An “NC” beneath the terminal designation means that the software for the relevant input has been deactivated.

M4 / Time (and B19 / Time) on the last line of pages 4 / 5 refers to the delay times set for the windscreen’s intermittent switching and to automatic idling.

**To exit the menu:**

- ▶ Press the **Back** button.
  - ↳ The submenu will be aborted.



**Error menu (operating errors and electrical system errors)**



**Fig. 3-25** Recorded errors menu

There are 3 selection options in this menu:

- By selecting **list Exxx**, machine errors recorded by the sensors are listed.
- By selecting **list E-elec**, all main screen cable errors stored when operating are


listed.

- By selecting **list S-Exxx**, all errors which appeared when the service connector was connected are listed.

**To select the desired error type:**

- ▶ Press the **Down** or **Up** arrow key.
  - ↳ The following or preceding error type will be displayed with a black background.
- ▶ Press the **Menu** button.
  - ↳ The submenu on a black background will be displayed.
  - ↳ If more than 6 error codes are present, arrow key **Down** or **Up** can be used to scroll to the next page.

**Machine error list Exxx:**

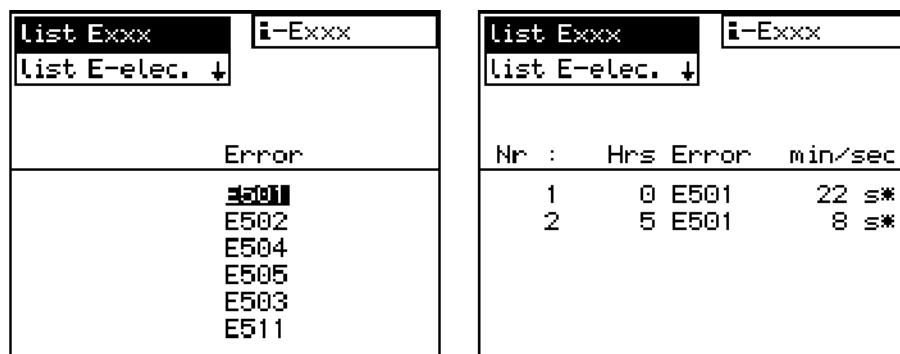

**Fig. 3-26** Error list (Fig. left) and Error occurrence (Fig. right) menu

- ▶ Select **list Exxx**.
- ▶ Press the **Menu** button.
  - ↳ The first page of the submenu appears.

All errors and their error codes are listed on the first page.

- ▶ Use the **Down** or **Up** arrow key to select the error code desired.
- ▶ Press the **Menu** button again.
  - ↳ The second page of the submenu appears.

Operating hours and the duration of the first and last ten occurrences of the error selected will be listed on the second page.

- ▶ Press the **Back** button.
  - ↳ The first page of the submenu appears.
- ▶ Press the **Back** button again to select another error type or press the **Down** or **Up** arrow key to select a new error code.


s\*: Error was indicated by a buzzer and was acknowledged using the **Back** button. The duration is given in seconds.

m\*: Error was indicated by a buzzer and was acknowledged using the **Back** button. The duration is given in minutes.



**Note!**

Only operating errors with an error code **E 5xx** will be displayed in the **list Exxx** menu.

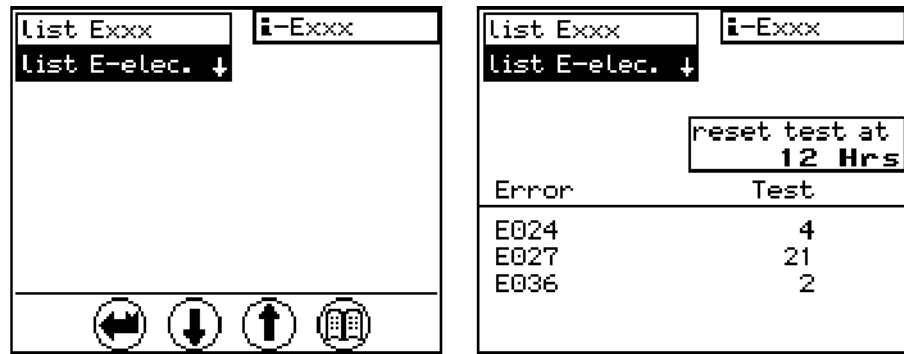**Cable error list E-elec.:**

**Fig. 3-27** Occurrence of electrical error (Fig. left) and Error statistics (Fig. right)

► Select **Cable error list E-elec.**:


- Press the **Menu** button.  
 ↳ The submenu appears.

All electrical errors and their error code are listed.

The "Test" column displays the number of errors which have occurred since the last deletion.

The hour information "reset test at x Hrs" (e g. 12 Hrs) indicates the operating hour in which the "Test" column was deleted.


- Press the **Back** button.  
 ↳ A different error type may be selected.

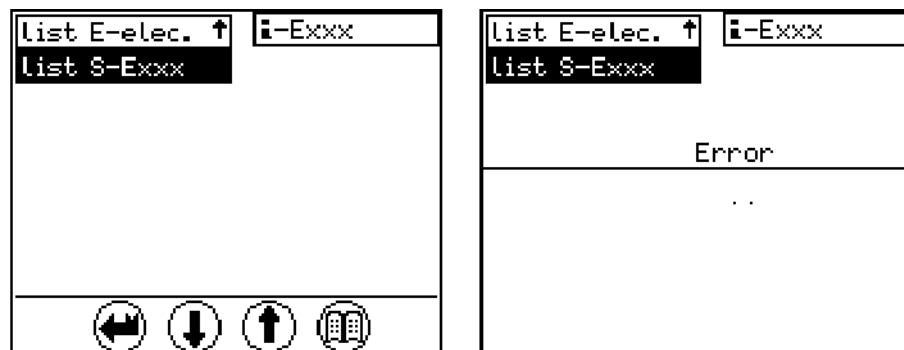**Other errors list S-Exxx:**

**Fig. 3-28** Call up service operation error list menu

No information will be displayed in this menu if the service connector is not connected.



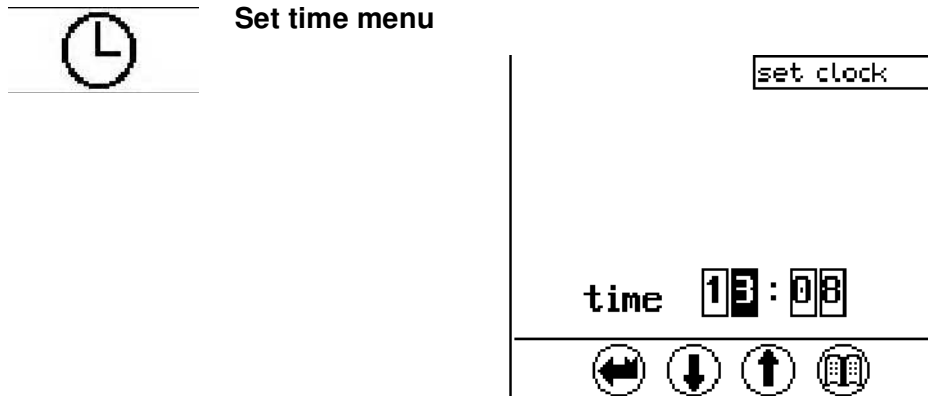

**Fig. 3-29** Set time menu

- ▶ After selection of the function the digit completely right is inversely displayed.
- ▶ Press key **UP** or **DOWN** to adjust the selected digit.
- ▶ Press **MENU** key
  - ↪ The marking jumps one position to the left.
- ▶ Repeat proceeding until the time is adjusted
- ▶ Press the **Enter** key.
  - ↪ The new time is confirmed, and the driver display appears again.

## 3.2 Access and equipment of the cab

### 3.2.1 Safely getting up.

- Proceed with the the same precautions to climb up or down onto the machine, as to instal yourself.
- When getting up or down, position the machine on even, horizontal ground. The upper structure should be positioned with the chassis in such a way that the steps and ladders are aligned with each other.
- Ensure that steps, ladders and hand-rails (grips) are in good condition. In particular, you should ensure that they are free of dirt, oil, ice and snow.
 

**NOTE:** To ensure that the doors open properly in all weather conditions, the door seals must be dusted with talc or silicon at least every two months or more often if required. The door hinges and locks should be greased regularly.
- Face the machine when getting in or out and always use three-point support, i.e. two hands and one foot or two feet and one hand must always be in contact with the access system at the same time.
- If you are able to reach the door handle with your free hand, open the doors before you climb any higher. External influences, such as wind, can make it more difficult to open doors. Because of this, always use your hand for control when opening doors. Ensure that the door is latched open to prevent it slamming open and shut.
- In case of bad weather conditions, be particulary vigilant to realise the climbing and descent from the cab with the best safety conditions, and do or give the instructions to the execution of prior preparations to be accomplished, as enunciated above, in order to displace yourself safely.
- Be particulary vigilant with those prerequisites conditions.

- Now continue to climb up, still using the three-point support and sit down in the operator's seat as soon as you enter the cab.
- Close the doors and fasten the safety belt (if available), unlock the door, using the planned lever, and close it immediately using the door handle, before tilting down the safety lever, and start the machine.
- If you wish to work with the door open, it is necessary to fasten your safety belt. If unavailable, let it be installed before working with the door open.

### 3.2.2 Safely getting down.

- Proceed with the same precautions to climb up or down onto the machine, as to install yourself.
- Stop the machine on level, horizontal ground. The upper structure should be positioned with the chassis in such a way that the steps and ladders are aligned with each other.
- Open and lock the door. Be sure of its locking. Take care of weather conditions ! Unfasten the safety belt.
- Position yourself with your face toward the machine when getting out and use three-point support, i.e. two hands and one foot or two feet and one hand must always be in contact with the access system at the same time. Climb down until you can close the doors safely. Always use your hand for control when closing the doors. Lock the door.
- Now climb down to the ground.

### Protection from vibration - seat adjusting.

- Keep the seat in good condition and adjust it as follows:
  - The seat and its damping action should be adjusted depending on the weight and height of the operator.
  - Check the seat's damping action and adjustment mechanisms regularly and ensure that these seat characteristics remain as per the seat manufacturer's instructions.

### 3.2.3 Entering or leaving the cab

#### Climbing up




**Caution!**

Entering or leaving the cab incorrectly could lead to injury.


- ▶ Proceed with the same attention on exit or entry of the cab, as while climbing the machine.
- ▶ Ensure that the safety lever is always in its highest position when entering or leaving the cab.
- ▶ Always use the handholds provided for the purpose when entering or leaving the machine.
- ▶ Face the machine when getting in or out and always use three-point support, i.e. two hands and one foot or two feet and one hand must always be in contact with the access system at the same time.
- ▶ Do not hold onto the controls to steady yourself.
- ▶ Never jump from the machine.

**Cab:**

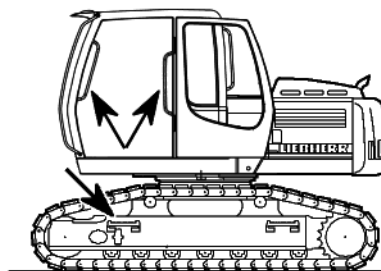

*Fig. 3-30 Climb up using the handholds*

#### Getting in

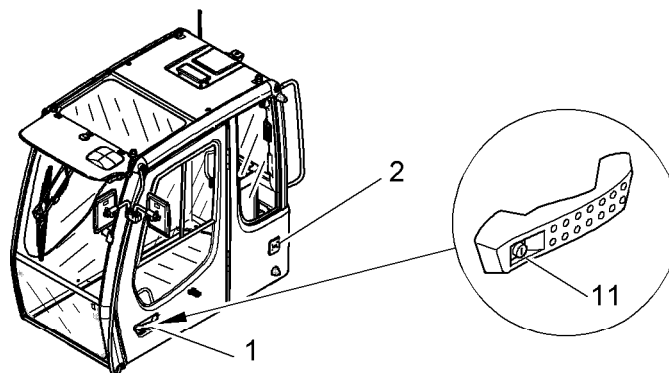

*Fig. 3-31 Door - exterior*

- 1 Door handle                      2 Latch                                      11 Door lock

- ▶ Press the door lock **11** on the door handle **1** and open the door.

LFR/en/Edition: 5 / 2006

- ▶ If the door is to remain open during operations, swing the door back 180° and secure in the latch **2**.
- ▶ Climb in with your face towards the machine and sit in the operator's seat.
- ▶ Adjust the seat and steering column if necessary.


## Getting out



### Caution!

Entering or leaving the cab incorrectly could lead to injury.

- ▶ Proceed with the same attention on exit or entry of the cab, as while climbing the machine.
- ▶ Ensure that the safety lever is always in its highest position when entering or leaving the cab.
- ▶ Always use the handholds provided for the purpose when entering or leaving the machine.
- ▶ Face the machine when getting in or out and always use three-point support, i.e. two hands and one foot or two feet and one hand must always be in contact with the access system at the same time.
- ▶ Do not hold onto the controls to steady yourself.
- ▶ Never jump from the machine.

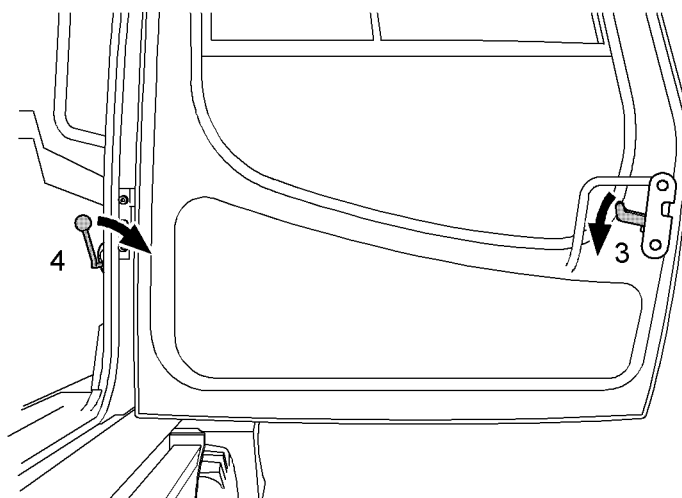

**Fig. 3-32** Door - interior

- 3** Door handle on door lock                      **4** Lever for the latch

- ▶ Switch off the machine and push the safety lever up.
- ▶ Push the door handle **3** on the lock down.
- ▶ Open the door fully and secure it in the latch **2**.
- ▶ Climb out with your face towards the machine.

### To release the door latch:

- The door is secured in latch **2**.
- ▶ Move the lever **4** next to the cab frame outwards.
  - ↪ The door is now unlocked.

- ▶ Close the door.

### 3.2.4 Height adjustable cab (optional extra)

A hydraulically adjustable cab is an auxiliary device enabling the cab to be variably height adjusted.



**Danger!**

When the cab is raised, the route the machine will be traveling must be even, free of all obstructions and must not have a gradient that could affect the stability of the machine.

- ▶ Only adjust the cab when the machine is stationary.
- ▶ Ensure that no persons are within the machine's danger area when carrying out the cab adjustment.



**Danger!**

The safety belt is designed to protect the operator.

- ▶ Before starting the machine, always put on the safety belt.
- ▶ Ensure that the safety belt is not twisted when it is secured.
- ▶ To ensure your safety, check the condition, function and fastening of the belt regularly and replace any damaged parts without delay.

### Adjusting the height of the cab

The height of the cab is controlled using the switches **S200**, **S201** and **S78** in the left control panel.

- The machine is ready to operate.
  - ↙ The safety lever is pushed up.
  - ↙ The engine is running.



**To raise the cab:**

- ▶ Press and hold switch **S200**.
  - ↙ The cab travels upwards as long as switch **S200** is being pressed.



**To lower the cab:**

- ▶ Press and hold switch **S201**.
  - ↙ The cab travels downwards as long as switch **S201** is being pressed.

### Emergency operations


If control of the height adjustable cab should be lost due to a fault in the diesel engine or another defect, there is an emergency cab lowering function.

There are two ways to lower the cab in an emergency:



**Emergency cab lowering inside the cab:**

- ▶ Press and hold switch **S78**.
  - ↙ The cab travels downwards as long as switch **S78** is being pressed.

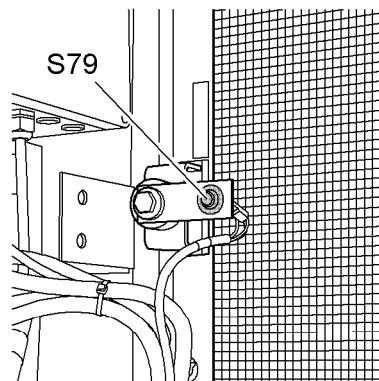**Emergency cab lowering from outside the cab:****Fig. 3-33** Emergency cab lowering button in the battery room.

It is possible to lower the cab using an emergency lowering button on the outside of the machine.

**Danger!**

Danger of crushing.

- ▶ Ensure that no one is standing in the vicinity of the lifting frame when lowering the cab from the outside in an emergency.

Ensure that you do not place any part of the body in the area of the moving parts when lowering the cab in an emergency.


- ▶ Open the rear left side door (battery room).
- ▶ Press and hold emergency lowering button **S79**.
  - ↳ The cab travels downwards as long as switch **S79** is being pressed.

**Repair and maintenance****Danger!**

Repair and maintenance work on the cab, lifting frame or on the related hydraulics system should be carried out – as far as possible – with the cab lowered.

- ▶ For repair and maintenance work which can only be carried out when the cab is raised, the cab should be supported by equipment which is suitable for this purpose.

### 3.2.5 Safety lever

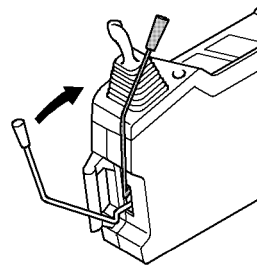

**Fig. 3-34** Safety lever

For safety purposes, the left control panel is provided with a safety lever.



---

**Caution!**

The safety lever must always be pushed up into its highest position (see arrow) when entering or exiting the cab.

---


When the safety lever is pushed up, the pilot control circuit is disconnected. This means that:

- No work movements can be carried out when pilot control devices, e.g. the joystick or foot pedals, are operated.
- The slewing gear brake is locked (LED in switch **S17** illuminates).
- It is not possible to release the slewing gear brake using switch **S17**.

When the safety lever is pushed (push up / push down) to its lowest position, the slewing gear brake and the LED in switch **S17** will return to their original states and the pilot control devices will be active.

- ▶ Before the operator starts working, he must push the safety lever down into its lowest position while seated in the operator's seat.

### 3.2.6 Operator's seat

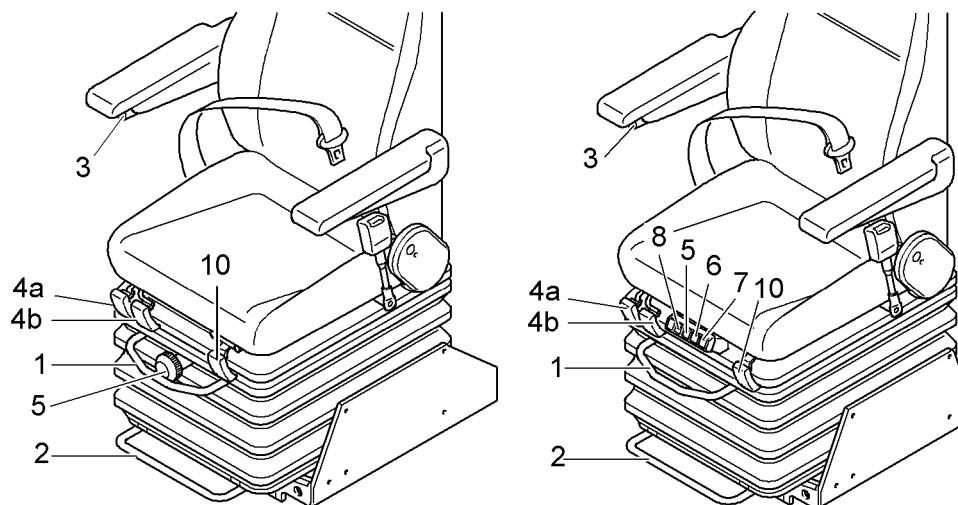

**Fig. 3-35** Standard operator' seat (Fig. left) and air-cushioned (Fig. right, optional extra)


- |    |                             |    |                            |    |                    |
|----|-----------------------------|----|----------------------------|----|--------------------|
| 1  | Set horizontal, upper       | 4b | Set seat inclination, rear | 7  | Set lumbar support |
| 2  | Set horizontal, lower       | 5  | Set seat springs           | 8  | Seat heating       |
| 3  | Adjust armrests             | 6  | Set lumbar support         | 10 | Set backrest       |
| 4a | Set seat inclination, front |    |                            |    |                    |

The operator's seat should be set up before starting the machine; this means that:

- The diesel engine may not be started.
- The safety lever must be pushed up.

This will avoid unexpected movement of the machine.

#### Setting the armrests

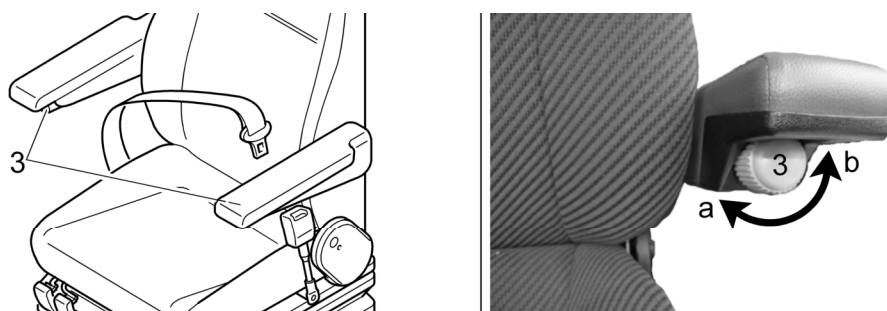


**Fig. 3-36** Setting the armrests

- ▶ Turn the knurled head screw **3** on the armrest in direction **a**.  
↙ The armrests incline upwards.
- ▶ Turn the knurled head screw **3** on the armrest in direction **b**.  
↘ The armrests incline downwards.




## Setting the seat and backrest

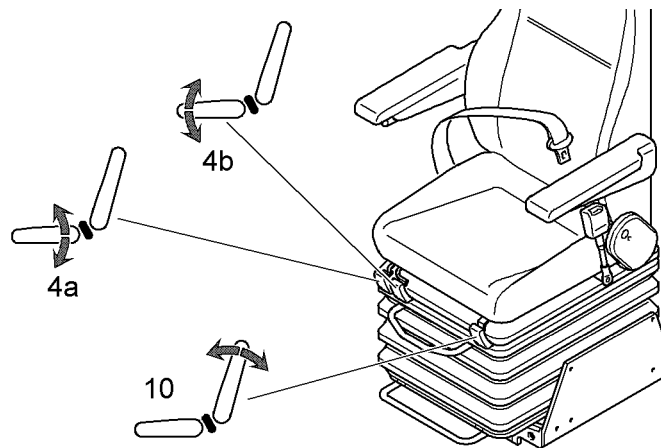

**Fig. 3-37** *Setting the seat and backrest*

- ▶ Rear seat inclination: Pull lever **4a** up, set the inclination and release the lever.
- ▶ Front seat inclination: Pull lever **4b** up, set the inclination and release the lever.
- ▶ Backrest: Pull lever **10** up, set the inclination and release the lever.


## Setting the horizontal seat position

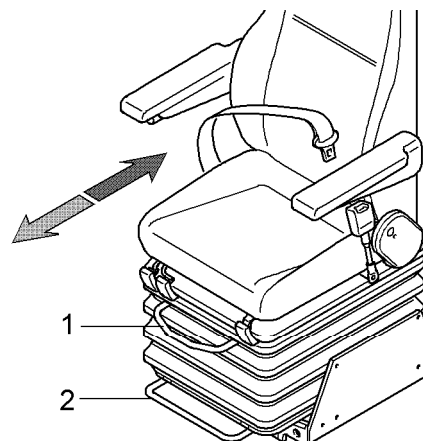

**Fig. 3-38** *Setting the horizontal*

- ▶ Pull up the lever **1** to push the operator's seat in the horizontal direction.
- ▶ Pull up the lever **2** to push the operator's seat and control panels in the horizontal direction.


## Setting the seat springs

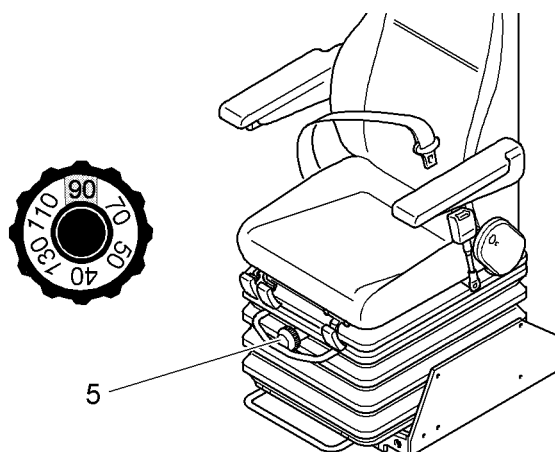

**Fig. 3-39** Setting the seat springs

- ▶ Use the rotary knob **5** to set the seat springs to match the body weight.

## Options setting (optional extras)

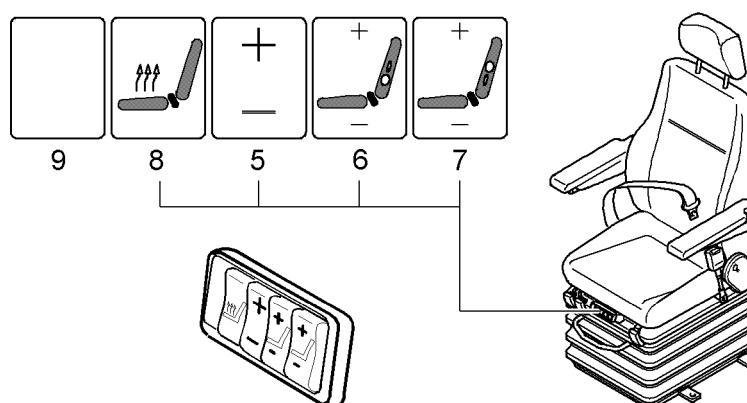

**Fig. 3-40** Switch bar on the air-cushioned operator's seat

### To set the vibration damping:

- ▶ Press button **5** (+ or -) and set the vibration system according to body weight.

### To set the lumbar support:


- ▶ Press button **6** (+ or -) to inflate or deflate the lower lumbar chamber.
- ▶ Press button **7** (+ or -) to inflate or deflate the upper lumbar chamber.

### To set the seat heating:

- ▶ Use switch **8** to switch the seat heating on or off.

The seat heating switches off automatically when the temperature set is reached.

## Putting on / releasing the safety belt

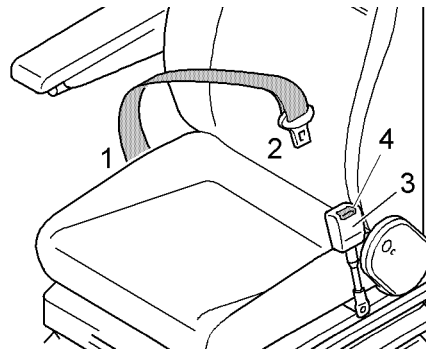

**Fig. 3-41** Safety belt

The safety belt is automatic. It is not necessary to adjust the length of the belt.

- ▶ Pull the belt and buckle **2** out of the roller mount **1**.
  - ↳ If pulled out of the roller mount sharply, the belt may lock.
- ▶ Push the buckle into the belt lock **3** until it fastens.



### Danger!

The safety belt is designed to protect the operator.

- ▶ Before starting the machine, always fasten the safety belt.
  - ▶ Ensure that the safety belt is not twisted when it is fastened.
  - ▶ To ensure your safety, check the condition, function and fastening of the belt regularly and replace any damaged parts without delay.
- 
- ▶ To open lock **4**, push down on the belt lock using your thumbs.
    - ↳ The safety belt will slide automatically back into the roller mount **1**.


## Vibration damping

The seat complies with ISO 7096.

If the machine is used in accordance with regulations, the values of the vibration damping transferred by the operator's seat are less than or equal to the tested excitation vibration for the relevant machine class in accordance with ISO 7096.

The values for vibration accelerations  $a_{zw}$ , measured in accordance with ISO 2631-1, therefore comply with the requirements for protection against whole body vibration set out in EN 474-1 («acceleration»  $a_{zw}$  between 0,5 and 2,5  $\text{ms}^{-2}$ ).

### 3.2.7 Windscreen

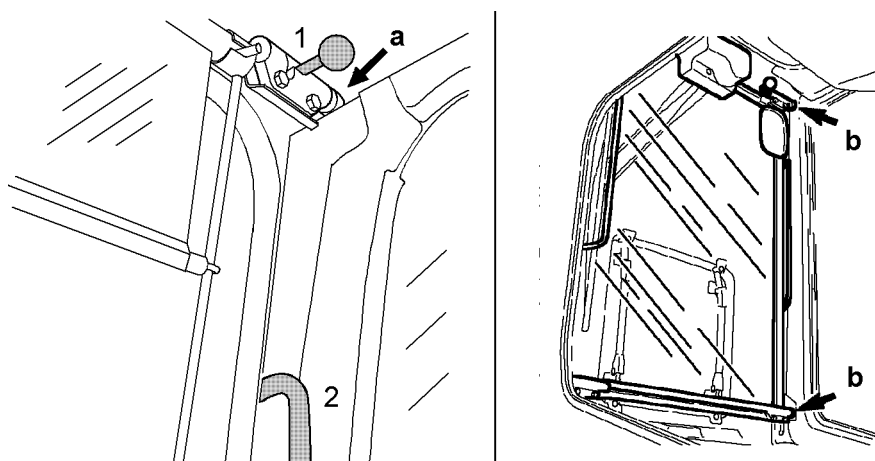

**Fig. 3-42** Windscreen

The windscreen can be positioned in two ways.

- Position **a**: Window closed.
- Position **b**: Window fully opened (locked in place on the roof of the cab).
- ▶ Pull bar **1** in and down.
  - ↪ The window is unlocked.
- ▶ Move the windscreen with the bracket **2**, secure in one of the two window positions (**a** or **b**) and relock using bar **1**.


### 3.2.8 Sun visor

The cab is provided with a sun visor, which can be opened on the windscreen as on the door glass right.

#### Windscreen - door glass right

- ▶ Using the arm, open the sun visor on the windscreen or on the door glass right.
  - ↪ The sun visor can be set for individual use.

### 3.2.9 Sun visor on left door glass (optional extra)

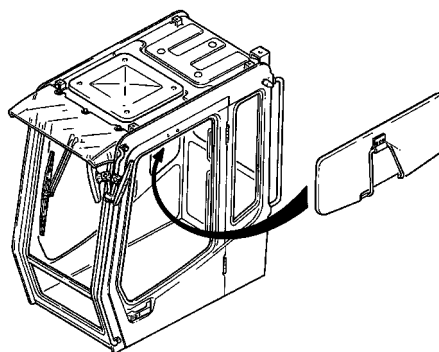


**Fig. 3-43** Sun visor on left door glass

The cab can be provided with a sun visor which can be opened on the left door glass.

#### Door glass left

- ▶ Open the sun visor on left door glass.
  - ↪ The sun visor can be set for individual use.

### 3.2.10 Interior lighting - Safety hammer

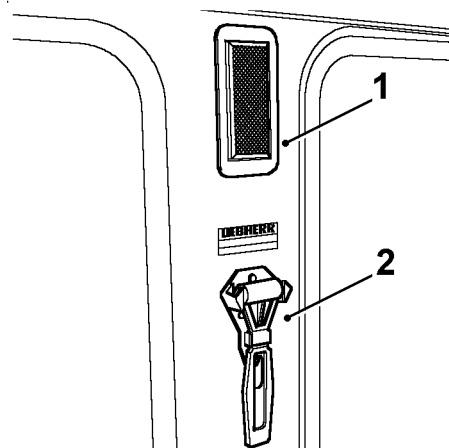

**Fig. 3-44** Interior lighting - safety hammer

The interior lighting **1** and the safety hammer **2** are located on the cab glass right beam.


#### Interior lighting

- ▶ One push onto the light glass.
  - ↪ The light is switched on / off.

#### Safety hammer

- ▶ On emergency case, the safety hammer **2** can be used to break one of the cab's glass

### 3.2.11 Fire extinguisher\*

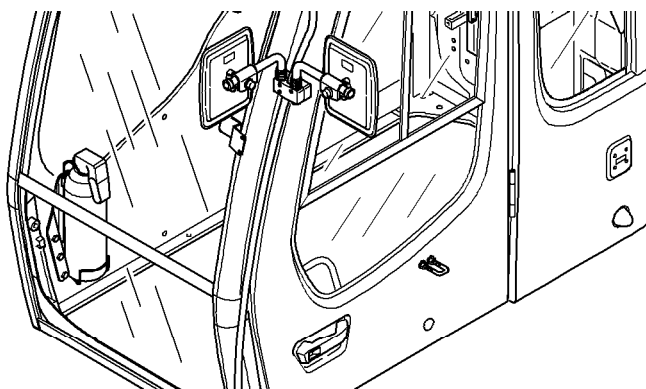

**Fig. 3-45** Fire extinguisher / First-aid box

The stowing compartment for the fire extinguisher is located on the lower right in the cab.

\*Owner regulations

### 3.2.12 Windscreen wiper

#### Windscreen wiper



When the ignition is switched on, pressing switch **S14** will activate the windscreen wiper.

- ▶ Press switch.
  - ↵ Intermittent switching
  - ↵ LED I in the switch illuminates.
- ▶ Press switch again.
  - ↵ Continuous operation.
  - ↵ LED C in the switch illuminates.
  - ↵ LED I in the switch goes out.
- ▶ Press switch again.
  - ↵ Windscreen wiper is switched off.
  - ↵ LED C in the switch goes out.

#### Setting the interval time for the intermittent switching

The interval time can be set when the ignition is on by pressing switch **S14**.

- Press the switch until the windscreen wiper is switched off (LED I in switch goes out)
- ▶ Press and hold switch.
  - ↵ LED I in the switch flashes.
- ▶ Release the switch when the desired interval time has been reached.
  - ↵ The interval time can be set to between 2 and 10 seconds.


#### Windscreen washing system



When the ignition is switched on, pressing button **S11** will activate the electric windscreen washing system.

- ▶ Press and hold button.
  - ↵ Washing water will be sprayed onto the windscreen through the outlet nozzles.
  - ↵ The windscreen washer runs continuously.
- ▶ Release the button.
  - ↵ Washing water will be stopped.
  - ↵ Windscreen washer will run continuously for approx. another 3 seconds.


### Windscreen washing fluid container

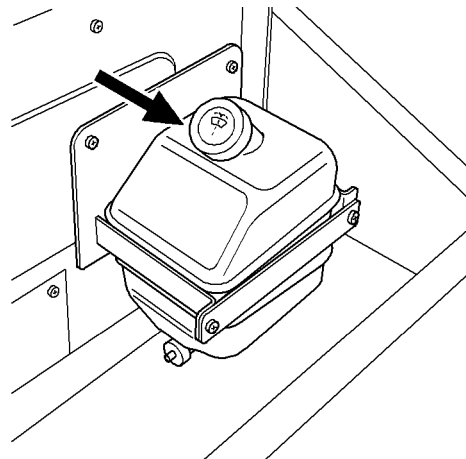

**Fig. 3-46** Windscreen washing fluid container

The container for the windscreen washing fluid is located at the rear of the cab. Once the cover (see arrow) has been opened, the container can be refilled with ordinary windscreen washing fluid.  
Volume: see lubricant chart


### Window washer on the cab roof (optional extra)

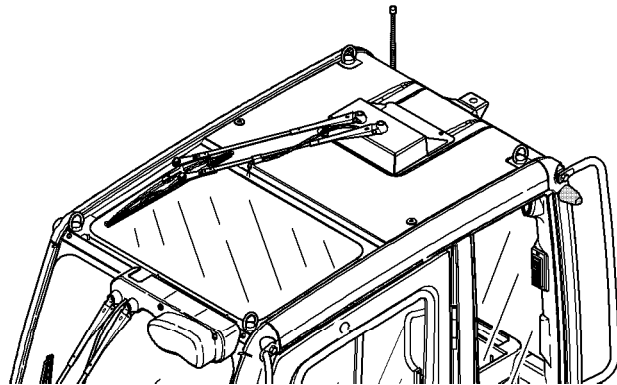


**Fig. 3-47** Window washer on cab roof

Pressing switch **S218** on the right control panel when the ignition is switched on activates the cab roof window washer.

- ▶ Press switch **S218**.  
↻ Cab roof window washer runs continuously.
- ▶ Press switch **S218**.  
↻ Cab roof window washer is switched off.

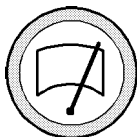

### 3.2.13 Lighting

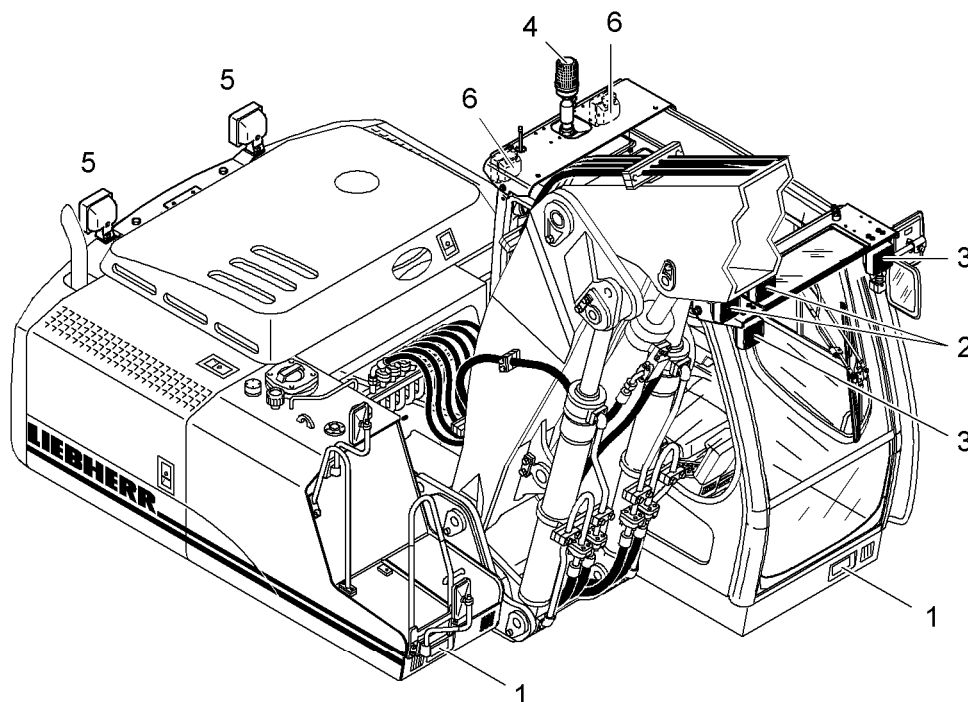

**Fig. 3-48** Arrangement of lighting

- |   |                                       |   |  |
|---|---------------------------------------|---|--|
| 1 | Driving light                         | 4 | Rotating beacon (optional extra)               |
| 2 | Equipment headlights                  | 5 | Headlights on ballast weight (optional extras) |
| 3 | Front roof headlight (optional extra) | 6 | Roof headlights, rear (optional extra)         |

#### Driving light, equipment headlight



The driving light and the equipment headlight are switched on by pressing switch **S10**.

- ▶ Press the switch.
  - ↗ Driving light is activated.
  - ↗ LED 1 in the switch illuminates.
- ▶ Press switch again.
  - ↗ Driving light is deactivated.
  - ↗ LED 1 in the switch goes out.
  - ↗ Equipment headlight is activated.
  - ↗ LED 2 in the switch illuminates.
- ▶ Press switch again.
  - ↗ Driving light and equipment headlight are switched on.
  - ↗ LEDs 1 and 2 in the switch illuminate.
- ▶ Press switch again.
  - ↗ Driving light and equipment headlight are switched off.
  - ↗ LEDs 1 and 2 in the switch go out.

#### Additional headlight (optional extra)



Pressing switch **S22** when the ignition is on switches on the additional headlights.



- ▶ Press the switch.
  - ↖ Additional headlights are switched on.
  - ↖ LED in switch illuminates.
- ▶ Press switch again.
  - ↖ Additional headlights are switched off.
  - ↖ LED in the switch goes out.

### Rotating beacon (optional extras)



Pressing switch **S41** switches on the rotating beacon when the ignition is on.

- ▶ Press switch.
  - ↖ Rotating beacon flashes.
  - ↖ LED in switch illuminates.
- ▶ Press switch again.
  - ↖ Rotating beacon is switched off.
  - ↖ LED in the switch goes out.

### Roof headlights, rear (optional extras)




Pressing switch **S275** on the right control panel switches on the roof headlights at the rear on the cab.

- ▶ Press switch.
  - ↖ Rear headlights on roof cab are switched on.
  - ↖ LED in switch illuminates.
- ▶ Press switch again.
  - ↖ Rear headlights on roof cab are switched off.
  - ↖ LED in the switch goes out.

## 3.2.14 Heater and air conditioner


### Overview

The cab is fitted with a heater and air conditioner as standard equipment which can be used for heating, cooling off, and also as a fan ventilation.

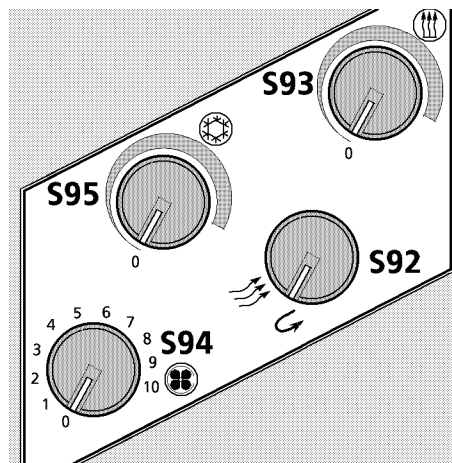

**Fig. 3-49** Overview of the heater - air conditioner command

**S92** On - Off of fresh air admission      **S94** Ventilation regulation

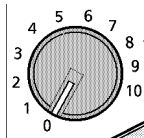**S93** Heating regulation**S95** Air conditioner thermostat**Cab ventilation**

The ventilation RPM is adjustable using 10 positions rotating knob **S94**. (siehe Fig. 3-50)

Position **0**: blower fan is turned off.

Position **1** to **10**: ventilation motor adjusts its RPM according 10 different power positions.

The fresh air enters the cab via louvers **3** at the seat console, **2** at the instrument panel and **1** at the rear wall of the cab.


**Recirculated air and fresh air circulation**

The heater and air conditioner can be operated with 100% recirculated air, but also with a mixing of fresh air (F) and recirculated air (R) (siehe Fig. 3-50).

The air flow regulation is done via rotating and/or adjustable louvers.

The fresh air flow is regulated using rotating knob **S92**:

- ▶ Position "Recirculated air"
  - ↪ the fresh air flap **7** is closed.
- ▶ Position "Fresh air"
  - ↪ the fresh air flap **7** is open, and the part of fresh air is about 10% (depending of the contamination of the filters **4** and **5**).

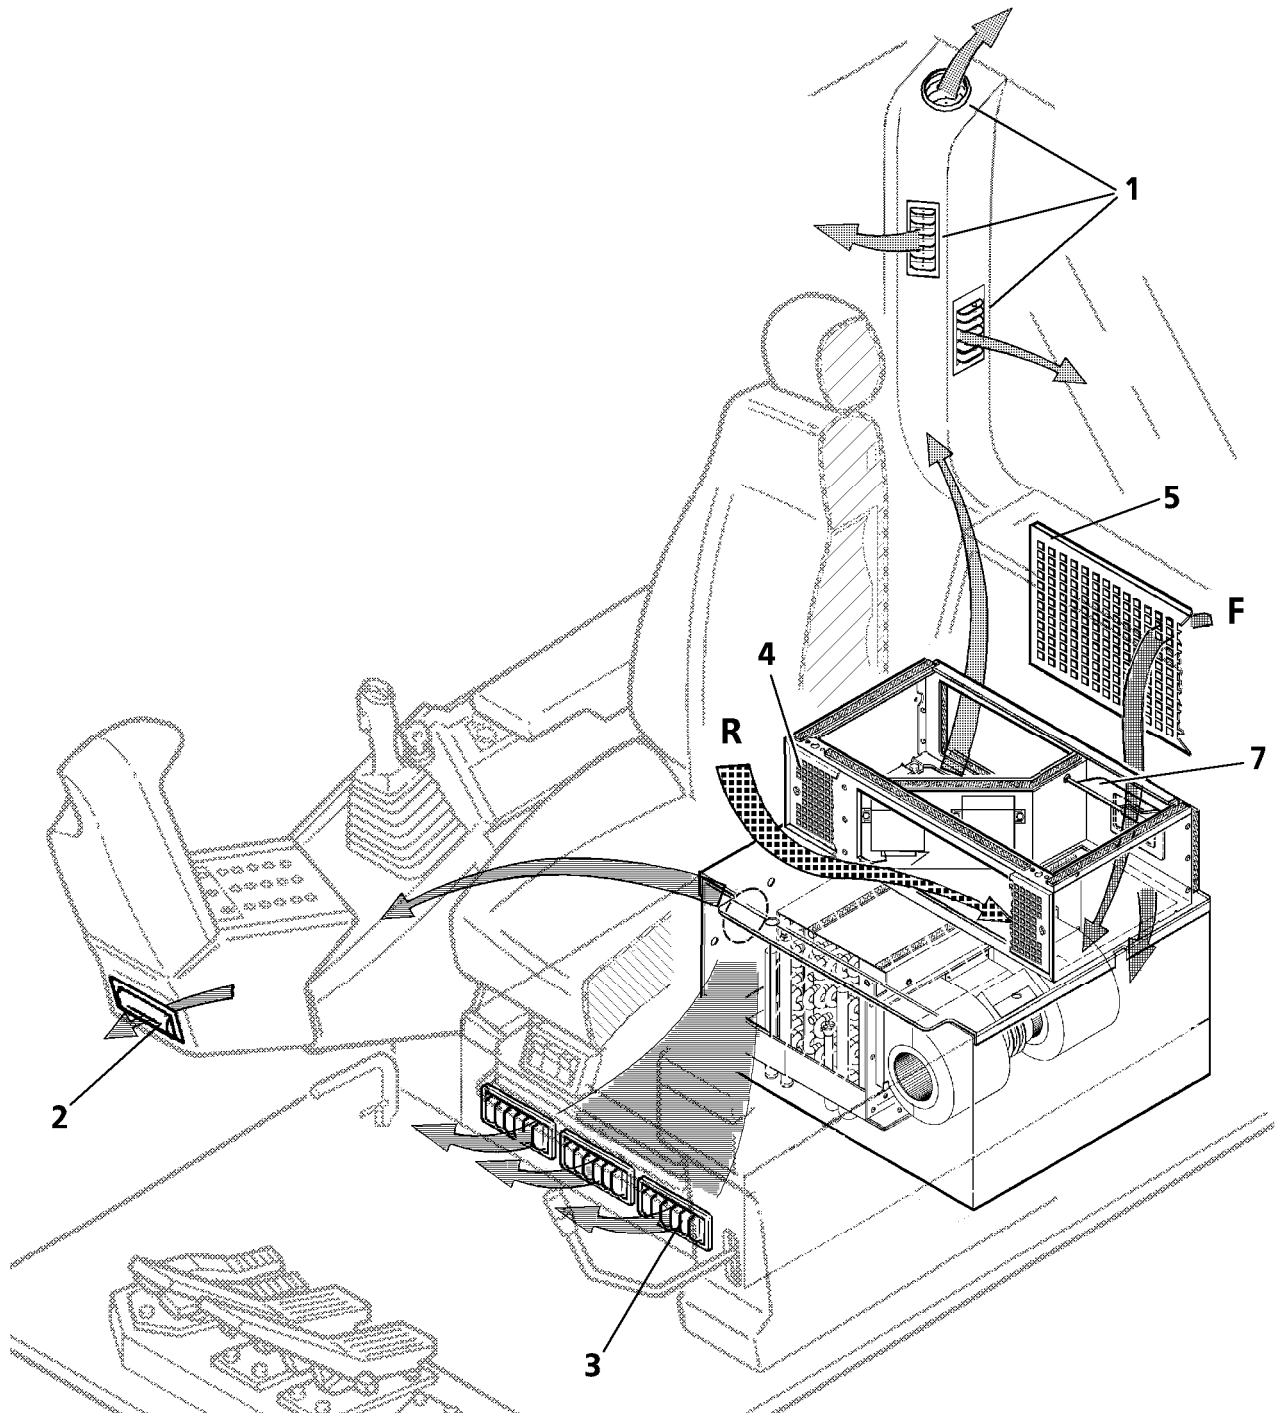

**Fig. 3-50** Front positions of louvers and into the rear wall of the cab. Recirculated air flow (R) and fresh air flow (F)

### Heater operation

The regulator **S93** into position "0", the heating is off.

- ▶ Rotation of the regulation knob onto desired heating power.
  - ↙ The heating is on.

If the ventilation regulator **S94** is in position "0", on heating start, the ventilation will automatically starts in position 1.

**Remark !**

For an optimal comfort while heating, use louvers **3** (feet level) and **2** (front windshield).

**Air conditioner operation**

□ The diesel motor must be started.

In position 0 of thermostat **S95** the air conditioner is off.

▶ Rotation of the regulation knob to the desired room temperature (regulation range between 14 °C and 27 °C).

↔ the air conditioner is started.

↔ If required the electronic control system will turn the compressor on and off.

If the ventilation regulator **S94** is in position "0", on air conditioner start, the ventilation will automatically starts in position 1.

▶ In case of high external temperatures, or the cab overheated true the sun, lower the temperature into the cab before turning on the air conditioner.

↔ Open windows and the door a few minutes, with ventilation on maximal level

↔ Preferably close louver **2** to avoid to warm up the inside air along the windshield.

**Remark !**


For an optimal comfort while using the air conditioner, use louvers on the rear side of the cab **1** and on the windshield **2**.

**Remark !**

The air conditioner can be used during the winter season to dehumidify the cab, even with the heating turned on.

**Switch on the air conditioner for the necessary time until the cab is free of condensation.**

The best heating or cooling effectiveness is gained with the knob **S92** in position "Recirculated air".

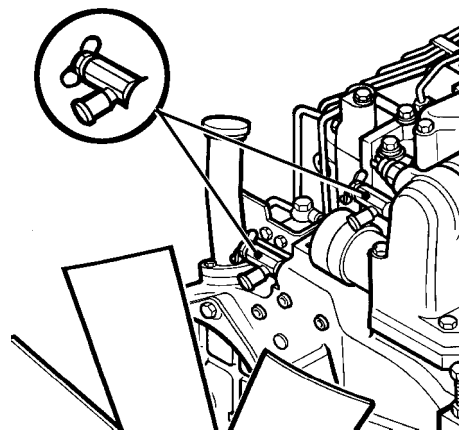**Recommandations while prolonged stays**

**Fig. 3-51** Water circuit valves on diesel engine.

While prolonged period of stop, the shaft sealing of the compressor can be damaged true vibrations.

- ▶ If the air conditioner is stopped for a longer period
  - ↪ Use the compressor for a short time every 2 weeks using thermostat **S95**.
- ▶ If the heating id stopped for a longer period (on summer time),
  - ↪ Shut off the warm water circuit valves on the diesel engine (siehe Fig. 3-51) .

## 3.3 Operation

### 3.3.1 Safety instructions

#### Bringing the machine safely into service

- Carry out a careful inspection tour around the machine each time before starting it.
- Check the machine for loose bolts, cracks, wear, leakage and damage.
- Never attempt to operate a damaged machine.
- Ensure that any damage is immediately rectified.
- Ensure that all hoods and covers are closed, but that locks are unlocked, **to facilitate the fight against fire in case of.**
- Ensure that all warning signs are present.
- Keep windows and interior and exterior mirrors clean. Secure doors and windows against unintended movement.
- Ensure that no one is working on or under the machine and warn personnel in the vicinity of the machine that it is about to start by sounding the horn.
- Before starting the machine, adjust the seat, mirrors, armrests and operator's controls in such a way that you are able to work comfortably and safely.
- Acoustic insulation devices on the machine must be set to the insulation position throughout operation.
- Only operate combustion engines and fuel-operated heaters in adequately ventilated spaces. Before starting in closed areas, ensure adequate ventilation. Follow the regulations which apply for the particular area of use.

#### Starting the machine safely

- Before starting, check all control lamps and instruments for correct function, place all operator's controls in Neutral and tilt the safety lever up.
- Before starting, sound the horn briefly to alert people in the vicinity of the machine.
- Only start the machine from the driver's seat.
- In the absence of any other instructions, start the engine in accordance with the regulations given in the operating instructions.
- Tilt the safety lever down and then test all display and checking devices.
- In enclosed spaces, only allow the engine to run when there is adequate ventilation. If necessary, open doors and windows to ensure sufficient fresh air supplies.
- Bring the engine and hydraulic oil to operating temperature. Low oil temperatures make the control unit react sluggishly.
- Check that the equipment is operating correctly.
- Move the machine carefully to an open area and then check the function of the

running and slewing gear brakes, the steering and the signaling and lighting devices.

### 3.3.2 Stopping the machine safely

- Only stop the machine on level, firm ground.
- If the machine has to be stopped on an incline, chocks should be used to secure it from rolling away.
- Use the stop bolts to secure the upper structure facing the chassis, **if available**.
- Lower the equipment and anchor the grab lightly in the ground.
- **Position every control lever into neutral position and** depress the parking and slewing brakes.
- Stop the engine in accordance with the operating instructions and tilt the safety lever up before leaving the cab.
- Lock the machine, **included hoods and covers**, and remove all keys and secure it against unauthorized use.

### Towing the machine safely

- Always follow the correct procedure: see chapter “Towing the machine” in these operating instructions.
- The machine may only be towed in exceptional circumstances, e.g. in order to move the machine away from an area where it is at risk.
- Before towing, check all attachments and towing devices for safety and stability.
- Towing devices such as bars must have adequate tensile strength and should be secured **around the undercarriage tower or** the towing hook provided on the undercarriage chassis.  
Any damage or accidents which occur while towing the machine are not covered by the manufacturer’s guarantee.
- Ensure that there is no one in the vicinity of the towing devices when towing.
- **Stretch safely and hold the towing devices. Avoid kinks on cables or ropes.**
- When towing, maintain the correct transport position, permitted speed and route, **and avoid yanks.**
- After towing, return the machine to correct operational status.
- When restarting the machine, be sure only to proceed in accordance with the operating instructions.

### 3.3.3 Starting / stopping the machine

#### General information



#### Note!

When using the machine at a specific height above sea level and in connection with certain outside temperatures, the performance and service life of the diesel engine with turbocharging is decisively affected. Under these conditions, there is also an increased risk of the coolant circuit and the hydraulic oil overheating.

To avoid damaging LIEBHERR diesel engines, the engine’s power must be reduced when operating in the following environmental conditions (sea level and exterior tem-

perature):

- 3,000 m generally
- 2,700 m and exterior temperature up to 30 °C
- 2,000 m and exterior temperature up to 40 °C
- 1,200 m and exterior temperature up to 50 °C

Pay attention to both the coolant circuit and the hydraulic oil cooling simultaneously.

### Activities before starting



**Caution!**

It is only possible to extinguish a source of fire if it is accessible.

- ▶ Before starting, unlock all locks on the panelling of the hydraulic excavator.
  - ↳ In the event of fire, the doors can be opened immediately and the fire extinguished.

Arrangement of locks: see Maintenance chapter



**Caution!**

With the activities referred to below, a machine that is already warm from operating, there is a risk of scalding or burning from hot coolant or oil.

- ▶ Please ensure that you read the information provided in the Maintenance chapter on carrying out these activities.


Before starting the machine, the following activities should be carried out on a daily basis:

- Check the oil level in the engine\*.
- Check the coolant level in the diesel engine\*.
- Check the oil level in the hydraulic tank\*.
- Drain the fuel system, if required\*.
- If required, remove any ice and snow from the engine hood in the area of the cooling and combustion air intake.

\* For how to carry out the activities, see the Maintenance chapter.

### Starting the diesel engine


#### Ignition key switching positions

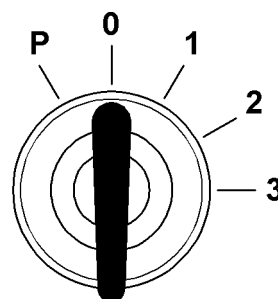

**Fig. 3-52** Ignition switch

- |                           |                         |                        |
|---------------------------|-------------------------|------------------------|
| <b>0</b> Neutral          | <b>2</b> not used       | <b>P</b> Park position |
| <b>1</b> Contact position | <b>3</b> Start position |                        |

## Switching on the electrical system

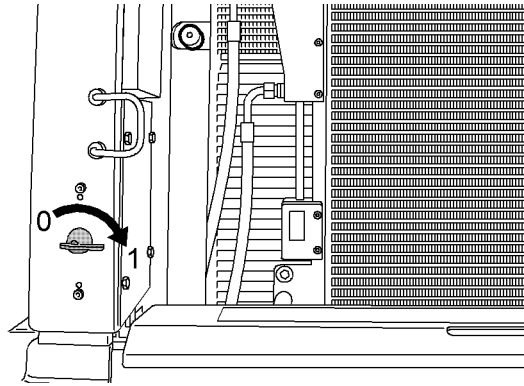

- The main battery switch must be in position 1 (on).
- ▶ Turn the ignition key to contact position 1.
  - ↪ As soon as the ignition is switched on, an automatic check of the keypad and the monitoring display takes place.




### Note!

If no automatic check of the keypad and monitoring screen is carried out when the ignition key is in the contact position, check that the main battery switch is set to "on".



- ▶ Check the function of display and indicator lights when you switch on the ignition.
  - ↪ All control lights must illuminate for a brief period with the exception of the LED of switch **S22** (Additional headlight).
  - ↪ The LIEBHERR logo appears on the LCD screen.

## Service interval display

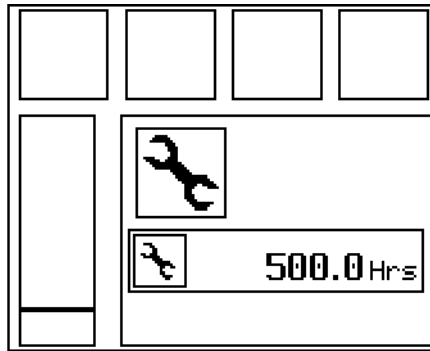

**Fig. 3-53** Service interval request

After the automatic check, any service interval that may be due will be indicated by a graphic symbol.


In place of the operating hours information, the number of hours relating to the service interval required will now be displayed.

The service interval request will go out after approx. 8 seconds.

## Electronic immobilizer (optional extra)

In addition to the standard immobilizer, the machine can be fitted with an electronic immobilizer. The electronic immobilizer acts as an anti-theft device.



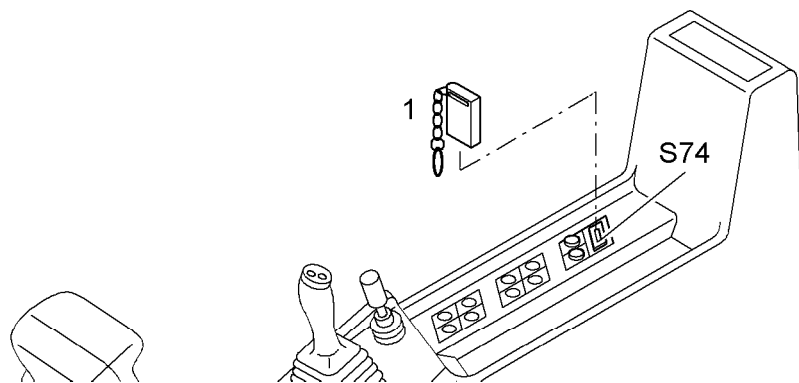

**Fig. 3-54** Electronic immobilizer

- ▶ Insert the code key **1** in the code lock **S74** and then remove.
  - ↪ The LED goes out.
  - ↪ A signal tone sounds.
- ▶ Switch on the electrical system.
- ▶ Use the ignition key to start the electrical system within 9 seconds.

If the ignition is not switched on within 9 seconds, the code key will have to be reinserted in the code lock.

When the ignition is switched off, the immobilizer activates itself automatically after 30 seconds.

- ▶ To reorder the code key, give the code number entered on the accompanying code card (cheque card format).

### Starting the engine



**Note!**

Only operate the starter motor when the diesel engine is off.

- ▶ Operate the starter motor continuously for no longer than 10 seconds.
- ▶ If the engine does not start, turn the ignition key back to contact position **1**.
- ▶ Wait at least 1 minute before trying to start the engine again.
- ▶ Turn the ignition key back to position **0** before restarting the engine.

### Starting procedure when the exterior temperature is above 0 °C.

If the engine and batteries are in good condition, the engine can be started without preheating.

- ▶ Turn the ignition key to start position **3**.
- ▶ Release the ignition key as soon as the engine starts.
  - ↪ Control lamps H2, H12 and H24 must go out (H23 goes out after a short delay).
  - ↪ The buzzer will sound briefly when the engine starts until the engine oil pressure builds up.

### Starting procedure when the exterior temperature is below 0 °C.

Preheating improves the starting procedure of the diesel engine at low temperatures.



- ▶ Turn the ignition key to position **2**.
  - ↪ The symbol Preheating ON appears on screen.



↪ The symbol is displayed on the main screen for approx. 20 seconds.

- ▶ When the symbol Preheating END (2 seconds) appears, turn the ignition key to start position **3**.
- ▶ Release the ignition key as soon as the engine is running.

### Engine afterignition

At low temperatures, this action allows to the engine to reach faster its operating temperature.

- ▶ Turn the ignition key to position **2** as soon as the engine is running after the starting procedure.
  - ↪ Symbol appears on the main screen.
- ▶ Release the ignition key.



### Note!


Do not preheat an engine which is at operating temperature.

### Starting procedure when the exterior temperature is below -18 °C.

For starting at temperatures below -18 °C, it is recommended to equip the machine with the original LIEBHERR cold start aid (see Starting aids)

The cold start aid can be operated from the cab and replaces preheating.

### Speed adjustment and mode functions

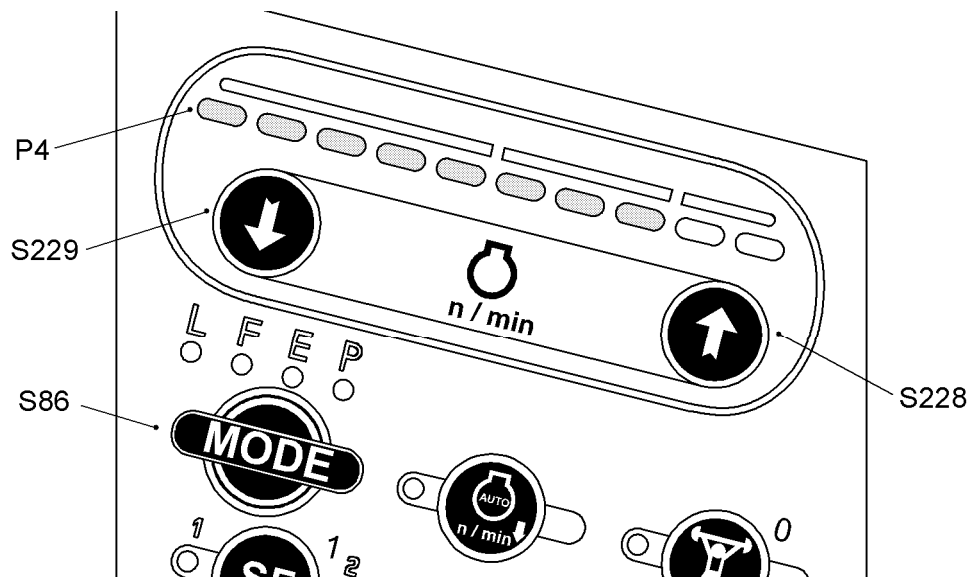

**Fig. 3-55** Speed adjustment and mode functions

The previously selected engine speed will be displayed on the LED chain **P4**. It is divided into 10 speed levels.

- ▶ To adjust the engine speed, press arrow keys **S228** or **S229**.
- or -
- ▶ Press the mode switch **S86**.

### Performance selection (adjustment) using the mode button

Four different modes can be selected by pressing switch **S86**.



- **L**: LIFT mode (speed level 5 – sensitive lifting of loads)
- **F**: FINE mode (speed level 10 – skimming work)
- **E**: ECO mode (speed level 8 – economical work)
- **P**: POWER mode (speed level 10)

### Using the arrow keys to adjust speed



#### To increase the speed:

- ▶ Press switch **S228**.
  - ↪ Speed will be increased by one level.
  - ↪ A second LED to the right illuminates in the **P4** display.



#### To reduce the speed:

- ▶ Press switch **S229**.
  - ↪ Speed will be decreased by one level.
  - ↪ A second LED from the right goes out in display **P4**.

A flashing LED above switch **S86** identifies an intermediate stage of the mode selected.

The currently active mode will be displayed under the letter on the LED. The mode selected will be saved when the engine is switched off and will be displayed by a flashing LED above switch **S86** the next time the engine is started.


The speed preselected after the diesel engine has been started will either be at level 1 (low idle on the diesel engine) or at level 3, if a warm-up phase is required for the diesel engine.

- ▶ Press the mode switch **S86**.
  - ↪ The mode selected will be used, with the corresponding speed and power.
  - ↪ The appropriate LED will illuminate permanently.

In mode **E** (maximum torque) and **P**, the diesel engine works at maximum power. In mode **L** and **F**, the hydraulic power is reduced.

### Warm-up phase for diesel engine and hydraulic circuit

#### Diesel engine



With cold engine coolant (temperature below 20 °C), the speed is automatically set at level 3.

This procedure lasts until the coolant has reached 20 °C, but for a maximum of 3 minutes.

- ▶ Increase the engine strain slowly until the second green LED (from left) illuminates on display unit **P2**.



#### Note!

Low idling for an extended period of time damages the engine.

- ▶ Switch off the diesel engine if the machine is not being used.

#### Hydraulic oil

The pump power is automatically limited when the hydraulic oil is cold (temperature below 8 °C).

As soon the hydraulic oil temperature rises above 8 °C, the machine can attain full power.

## Notes after starting the engine



### Danger!

Danger of suffocation.

- ▶ When operating in enclosed spaces, only run the engine in areas with sufficient ventilation.
- ▶ Open doors and windows to ensure sufficient supplies of fresh air.



### Caution!

- ▶ Bring the engine and hydraulic oil up to operating temperature. The controls operate sluggishly at low oil temperatures.
- ▶ Move the machine carefully in an open space to test the function of the chassis and slewing gear brakes.
- ▶ Check that the equipment is operating perfectly.

## Switching off the diesel engine



### Caution!

The engine could be damaged.

- ▶ Do not switch off the engine suddenly from full throttle.



- ▶ First use arrow key **S229** to set the engine speed to low idle.
  - ↪ Only the LED on the furthest left is now lit on display **P4** (engine speed).
- ▶ Allow the diesel engine to run continuously in low idle for another 2-3 minutes.
- ▶ Now turn the ignition key to position **0** in order to switch off the engine.
- ▶ Remove the ignition key.

### 3.3.4 Delay engine cut-out 5 min. (option)

## Switching off the diesel engine



### Caution !

The engine could be damaged.

- ▶ Do not switch off the engine suddenly from full throttle.

On request the machine can be equipped with the option "delay engine cut-out 5 min." It preserves the diesel engine turbo and the engine itself.

The sequence is engaged using the ignition key **S1** on right control panel.



- ▶ First use arrow key **S229** to set the engine speed to low idle.
  - ↪ Only the LED on the furthest left is now lit on display **P4** (engine speed).
- ▶ Now turn the ignition key to position **0** in order to engage the delay cut-out engine.
- ▶ Remove the ignition key.
  - ↪ The engine remains into the low idle speed about approx. 5 minutes.
  - ↪ And switches off automatically after.

## Emergency engine shutdown


On emergency the engine can be shutdown immediately.



### Caution !

The engine could be damaged.

- ▶ Use the shutdown devices only in case of emergency.
- ▶ Push on emergency shutdown button **S2-1** on the right control panel into the cab, or **S34** on the left side of the uppercarriage back.
  - ↪ Engine is shutdown immediately.

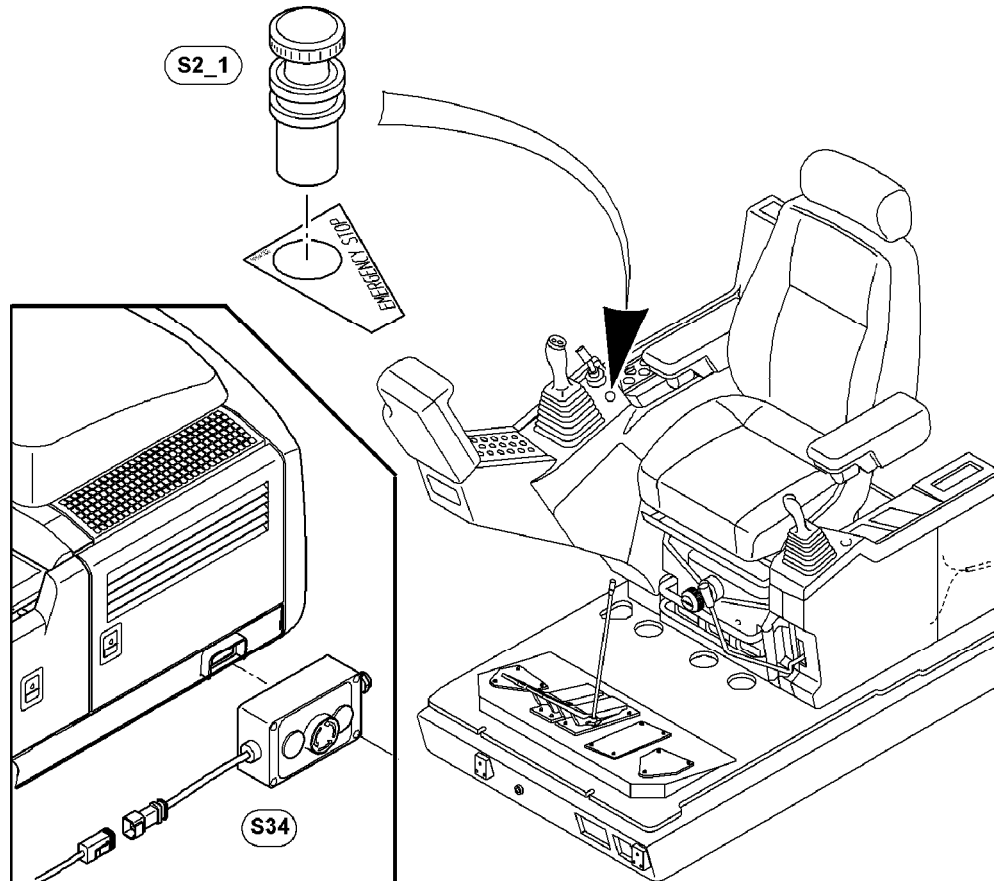

**Fig. 3-56** Emergency shutdown devices for the delay engine cut-out.



### Danger !

The activation of the emergency switch off will shutdown the diesel engine and demagnetize the rising plate that will cause the fall of the load.

- ▶ In cas of optional generator mounted, the automatic engine stop or emergency shutdown are not allowed. Before mounting a generator device, contact your Liebherr support of customer service.

## Restart the engine

Unlock the emergency switch off before attempting to restart.

- ▶ Turn / pull the emergency switches off **S2-1** on right control panel into the cab, or **S34** on uppercarriage back left side.
- ▶ Proceed with the engine ignition.

## Notices

Malfunctions :

- ▶ Check / change the fuse **F12** (15 A) on A1010 plate into the left control panel (siehe Kap. 0.1.2, "ESP02 board" auf Seite 1).

Signage arrangement of :

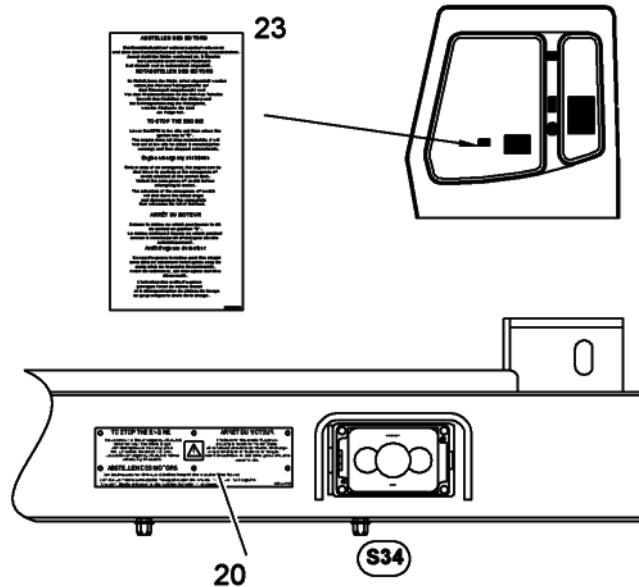



Fig. 3-57 Delay engine cut out signs

20 Emergency shutdown instructions 23 Engine cut-out instructions

### 3.3.5 indicator Starting aids

#### Cold start device (optional extra)

The cold start device supports the cold starting procedure at temperatures below -18°C.

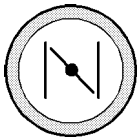

- ▶ When starting, press and hold switch **S210** in the right control panel.
  - ↗ A gas which aids the cold starting procedure will be injected into the intake pipe.
  - ↗ The light in the switch remains on while the gas is injected.
  - ↗ As soon as the diesel engine is running, the gas supply will be interrupted.
  - ↗ No gas will be injected if the diesel engine is warm.

#### Fuel preheating S26 (optional extra)

The fuel filter will be electrically heated using fuel preheating. This will prevent the fuel filter salting up at low temperatures.




- Fuel preheating should be activated at least 5 minutes before starting in conditions of low outside temperatures.
- ▶ Press switch **S26** on the right control panel before starting and with the ignition switched on.
  - ↗ The fuel filter will be heated electrically.

- ↖ LED in switch illuminates.
- ↖ This will prevent the fuel filter salting up at low temperatures.

### Coolant / engine oil / hydraulic oil preheating (optional extra)

The coolant, the engine oil and the hydraulic oil can be preheated before starting using coolant / engine oil / hydraulic oil preheating. In particular, this will considerably shorten the diesel engine's cold running phase at low temperatures. This will protect the diesel engine and reduce fuel consumption.

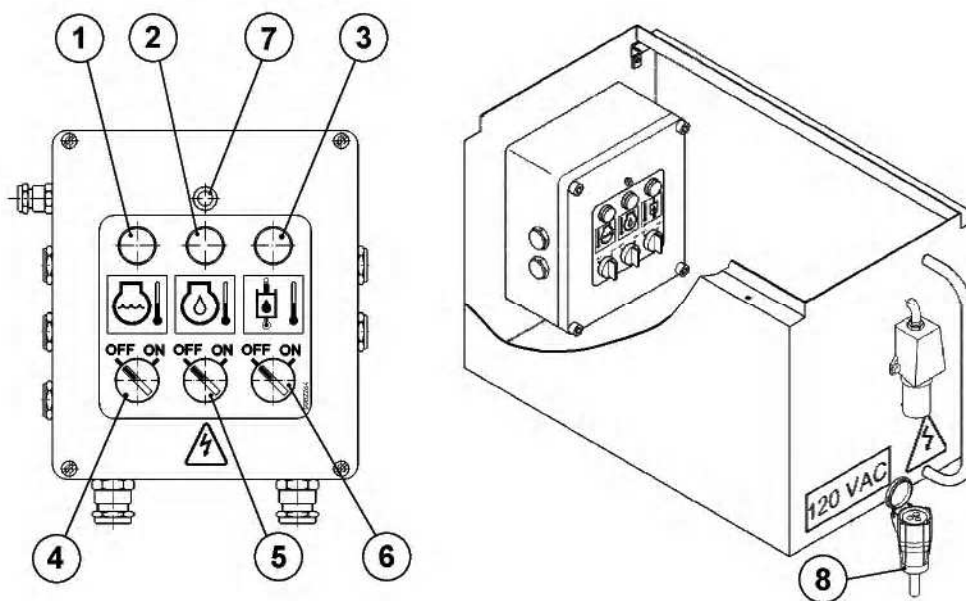

**Fig. 3-58** Coolant / motor oil / hydraulic oil preheating

- |  |  |
|--|--|
| <b>1</b> Coolant preheating indicator light            | <b>5</b> On / off toggle switch for engine oil preheating    |
| <b>2</b> Engine oil preheating indicator light         | <b>6</b> On / off toggle switch for hydraulic oil preheating |
| <b>3</b> Hydraulic oil preheating indicator light      | <b>7</b> fuse  |
| <b>4</b> On / off toggle switch for coolant preheating | <b>8</b> Power cable   |

The electrical box for the coolant / engine oil / hydraulic oil preheating is located behind the right-hand side door.

- ▶ Connect power cable **8** to stationary connection (110 - 120 V / 220 - 240 V AC).
- ▶ Tip toggle switch **4**, Coolant / preheating.
  - ↖ The coolant preheating is switched on.
  - ↖ Indicator light **1** illuminates.
- ▶ Tip toggle switch **5**, engine oil preheating.
  - ↖ The engine oil preheating is switched on.
  - ↖ Indicator light **2** illuminates.
- ▶ Tip toggle switch **6** hydraulic oil preheating.
  - ↖ The hydraulic oil preheating is switched on.
  - ↖ Indicator light **3** illuminates
- ▶ After starting the engine, disconnect the power cable **8** on the machine.

### 3.3.6 Jump start procedure



#### Danger!

When connecting to exterior batteries, old batteries can be subject to increased gas formation.

- ▶ Wear protective goggles and gloves whenever jump starting, avoid naked flame and creating any sparks in the vicinity of the flat vehicle battery. RISK OF EXPLOSION!
- ▶ Only use jump starting cables with a sufficient cross section. Always follow the established jump starting procedure.

#### Connecting the batteries

- ▶ First connect the cable to the positive terminal (+) of the flat battery and then to the positive terminal (+) of the exterior battery.
- ▶ Connect the second cable to the negative terminal (-) of the flat battery and then to the negative terminal (-) of the exterior battery.
- ▶ Start the engine as described above.



#### Caution!

- ▶ Before removing the jump start cable, be sure to place the diesel engine of the jump started machine into low idle.
- ▶ For safety reasons, switch on large consumers such as work headlights, upper carriage lighting etc. to avoid overvoltage. The electronics could otherwise be damaged.

#### Disconnecting the batteries

- ▶ First remove the cable from the negative terminal (-) of the exterior battery and then from the negative terminal (-) of the flat battery.
- ▶ Remove the second cable from the positive terminal (+) of the exterior battery and then from the positive terminal (+) of the flat battery.
- ▶ Check the electrical function of the machine.


For battery care and maintenance, see the chapter "Battery care".

### 3.3.7 Emergency operations

#### Emergency control speed adjustment

In normal operation, the desired speed is entered using arrow keys **S228** and **S229** or using mode switch **S86** and the engine speed is controlled correspondingly using the excavator electronics.



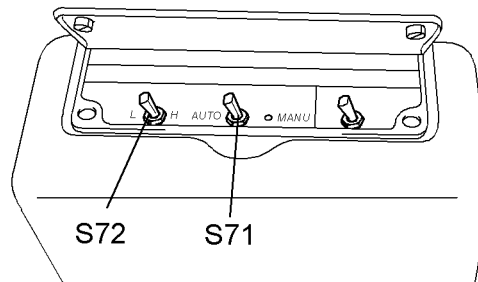

**Fig. 3-59** Emergency control speed adjustment

This automatic system can be switched off in problem cases.




- ▶ Move toggle switch **S71** to the **MANU** position.
  - ↖ The telltale light illuminates.
  - ↖ The symbol **MANU** appears on the display.
- ▶ Control the speed manually.

The speed will be controlled using toggle switch **S72**:

- Pos. **L** signifies: Speed reduction
- Pos. **H** signifies: Speed increase

### Emergency operation

If the function of the servo control and of the parking and slewing gear brakes can no longer be activated due to a defect in the electronics, it is possible to bypass the electronics.

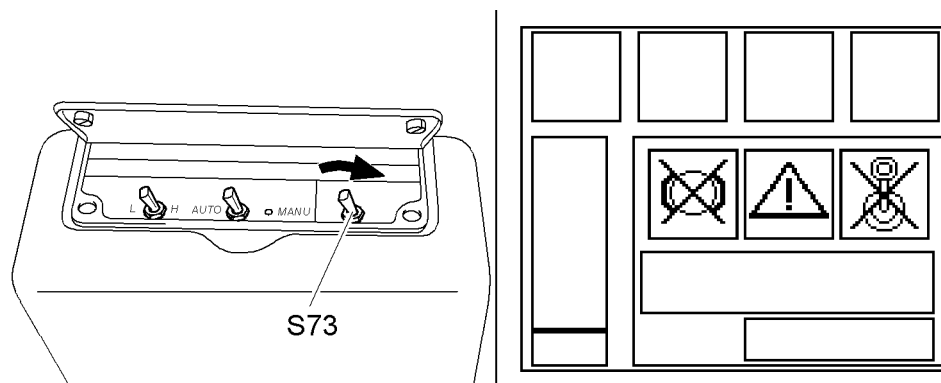

**Fig. 3-60** Emergency operation (Fig. left) and emergency switching screen display (Fig. right)

- ▶ Push the safety lever down.
- ▶ Move the toggle switch **S73** into the emergency position.
  - ↖ The symbols appear on screen.
  - ↖ The servo control will be activated when the slewing gear motor is running.
  - ↖ When the hydraulics are ready to operate, the slewing gear motor runs and the parking and slewing gear brakes are released.

**Danger!**

In this toggle switch position, **S73**, the servo control and slewing gear brakes can no longer be activated using the switches for this purpose on the keypad.


All three functions can only be activated or deactivated using the safety lever.

- ▶ Inform all personnel who are involved in the operation or maintenance of the machine about the emergency switching and of the changed operation.
- ▶ Rectify the damage to the machine which caused the emergency functions to be used as quickly as possible.

**Emergency operation of operating pumps**

When a fault occurs in the electrical power or regulating circuits, pump efficiency is reduced to a minimum.

In this case, however, it is still possible to continue to work with reduced pump efficiency.

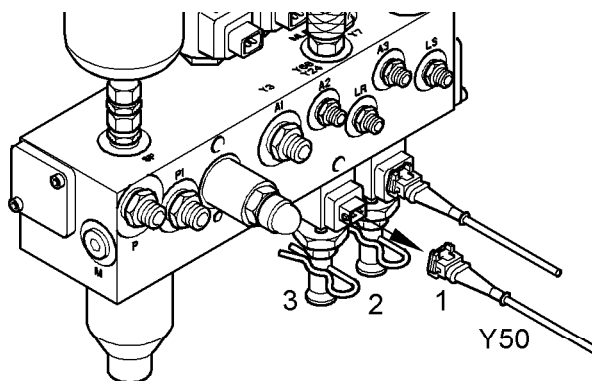


**Fig. 3-61** Preparing emergency operation of operating pumps

- Toggle the lever **3** on the control oil unit on the back of the hydraulic tank and:
  - ▶ pull out the plug connector **1** (Y50).
  - ▶ pull out the cotter pin **2**.
  - ▶ toggle the lever **3** to a horizontal position (emergency position).
    - ↳ Emergency operation is prepared.

### 3.3.8 Driving

#### Driving straight ahead

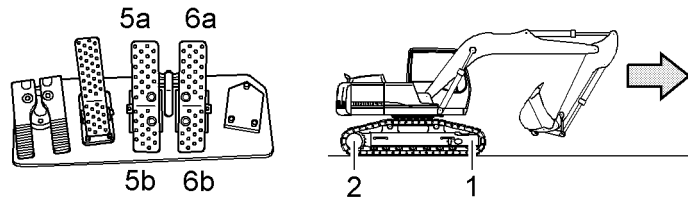

**Fig. 3-62** Driving straight ahead

- |   |               |         |                            |
|---|---------------|---------|----------------------------|
| 1 | Leading wheel | 5a / 5b | Pedal for left drive unit  |
| 2 | Tumbler wheel | 6a / 6b | Pedal for right drive unit |



**Caution!**

When driving, the upper carriage must be rotated to the chassis in such a way that when driving forwards, the leading wheel **1** is in front and the tumbler wheel **2** is at the rear.

**Driving forwards:**

- ▶ Push both pedals forward (**5a** and **6a**).

**Reversing:**




**Caution!**

Before reversing, ensure that the area behind you can be safely entered.

- ▶ Push both pedals down (**5b** and **6b**).

#### Turning on the spot

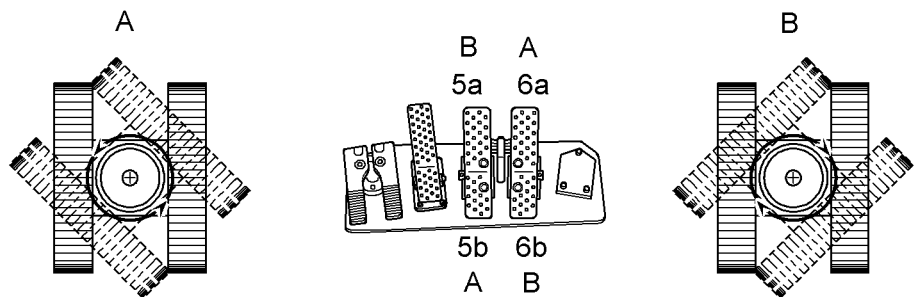


**Fig. 3-63** Turning on the spot

**Turning left (A):**

- ▶ Push the left pedal down (5b).
- ▶ Push the right pedal forwards at the same time (6a).

**Turning right (B):**

- ▶ Push the right pedal down (6b).
- ▶ Push the left pedal forwards at the same time (5a).

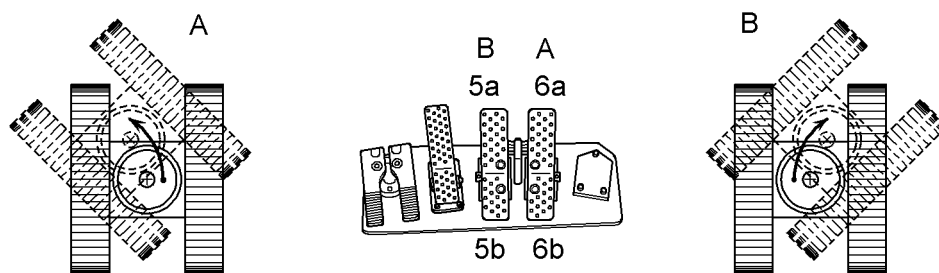**Turning with a crawler****Fig. 3-64** Turning with a crawler**Turning to the left (A):**

Push the right pedal forwards (6a).


**Turning to the right (B):**

Push the left pedal forwards (5a).

**Note!**

If possible, avoid turning backwards in order to preserve the running gear parts.

## Controlling the drive unit manually

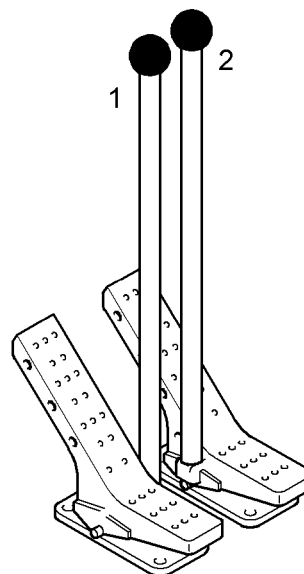

**Fig. 3-65** Manual drive unit control

- Particularly careful driving is required here.
- ▶ Insert the hand levers (1 and 2) available in the tool kit into the pedals for the drive units.
  - ↪ The drive units can be operated manually.



### Note!

When driving the machine onto or off a low loader, the drive unit must be controlled manually for safety reasons.

## Controlling the speed



The driving speed is influenced by switch **S21**. The travel motors can be operated in two different positions:

- **Normal drive** (position 1):  
Maximum tensile force of both drive units at moderate speed.
  - **Fast drive** (position 2):  
Reduced tensile force of both drive units at maximum speed.
- ▶ Press switch **S21**.
    - ↪ Transfer from normal drive to fast drive is activated.
    - ↪ LED 1 in the switch illuminates.

While driving, the machine will automatically switch from normal drive to fast drive as the ground conditions permit. After transferring to fast drive, LED 2 illuminates. If the ground conditions become more difficult again, the system will automatically switch from fast drive to normal drive. LED 1 illuminates.

- ▶ Press switch **S21**.
  - ↪ Transfer from normal drive to fast drive is deactivated.
  - ↪ LED 1 in the switch goes out.

When switch **S21** is switched off, the travel motors remain continually in position 1.

## Braking the machine

The hydrostatic travelling mechanism of the machine also functions as a service brake.

- ▶ Disengage the pedals for the drive units.
  - ↪ The pedals will return to the neutral position.
  - ↪ The travelling mechanism will be stopped.
  - ↪ The machine will be braked.

When the pedals for the drive units are in the neutral position, the hydrostatic drive prevents the machine from rolling off.

In the neutral position, the parking brake will be applied automatically after approx. 5 seconds. The work equipment can, however, still be moved.




### Caution!

Disengaging the pedals quickly causes the machine to halt abruptly.

- ▶ Before starting the machine, always fasten the safety belt.

### 3.3.9 Drive warning device (optional extra)

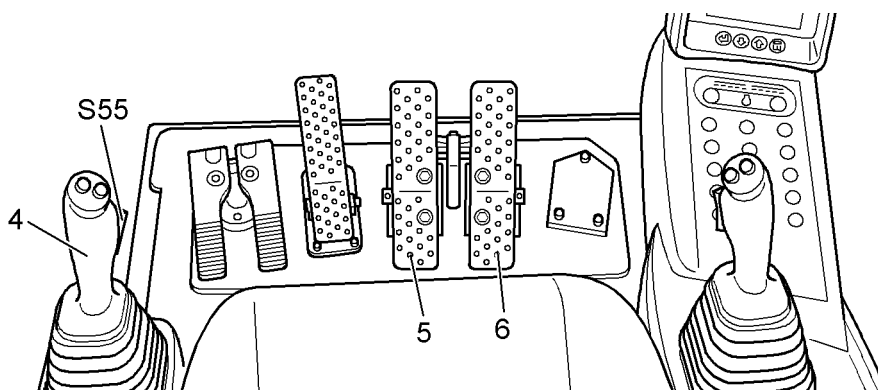

**Fig. 3-66** Drive warning device

- ▶ Press accelerator pedal **5** or **6**.
  - ↪ The drive warning device switches on automatically.
  - ↪ An acoustic signal (warning tone) will be emitted.

#### Deactivating the drive warning device:

- ▶ Press toggle switch **S55** on left-hand joystick **4**.
  - ↪ The drive warning device will switch off.



### Note!

The drive warning device can only be switched off 10 seconds after starting to drive. If the accelerator pedal is engaged once more, the drive warning device will reactivate.

### 3.3.10 Towing the machine

Towing the machine is problematic and is always carried out at the owner's risk.

The machine may only be towed in exceptional circumstances, eg. in order to move the machine away from a dangerous place for repair.

Damage or accidents which occur during towing of the machine cannot be covered by the manufacturer's guarantee under any circumstances.



### Danger!

Danger of injury due to a torn rope. Staying near the rope is forbidden

- ▶ When towing the machine, only use a tow-bar that has the correct dimensions.




### Caution!

When towing the machine, the multi-plate brake in the drive transmissions must be released.

This means that the engine will have to be started so that the pressure in the hydraulic lines can be removed.

If the engine cannot be restarted or if there is a defect in the hydraulic system, the drive transmissions can also be manually depressurized. For more information on this, consult LIEBHERR customer service.

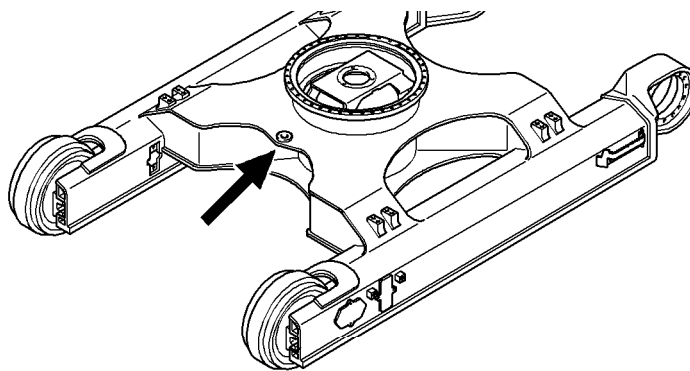

**Fig. 3-67** Towing the machine

- The tow-bar for towing the machine must have sufficient tensile strength.
- ▶ Fasten the tow-bar to the clevis type eyelet on the chassis.
- ▶ Tight the rope / bar carefully and hold it. Avoid kinks
- ▶ Tow the machine without shocks. Risks of breaches.

## 3.4 Working with the machine

### 3.4.1 Safely getting up or down.

- When getting up or down, position the machine on even, horizontal ground. The upper structure should be positioned with the chassis in such a way that the steps and ladders are aligned with each other.
- Ensure that steps, ladders and hand-rails (grips) are in good condition. In particular, you should ensure that they are free of dirt, oil, ice and snow.
 

**NOTE:** To ensure that the doors open properly in all weather conditions, the door seals must be dusted with talc or silicon at least every two months or more often if required. The door hinges and locks should be greased regularly.
- Face the machine when getting in or out and always use three-point support, i.e. two hands and one foot or two feet and one hand must always be in contact with

the access system at the same time.

- If you are able to reach the door handle with your free hand, open the doors before you climb any higher. External influences, such as wind, can make it more difficult to open doors. Because of this, always use your hand for control when opening doors. Ensure that the door is latched open to prevent it slamming open and shut.
- Now continue to climb up and sit down in the operator's seat as soon as you enter the cab. Close the doors and fasten the safety belt.
- When getting out of the machine, proceed as carefully as when you climbed into the machine.
- Stop the machine on level, horizontal ground. The upper structure should be positioned with the chassis in such a way that the steps and ladders are aligned with each other.
- Unfasten the safety belt. Position yourself with your face toward the machine when getting out and use three-point support. Climb down until you can close the doors safely. Always use your hand for control when closing the doors.
- Now climb down to the ground.

### 3.4.2 Working safely with the machine

- Before you start working, acquaint yourself with the special features of the job site and any special precautions and warning signals. Examples of particular work environments would be on-site or traffic obstructions, the load-carrying capacity of the ground and any requirements to make the job site safe from public use.
- Always maintain a safe distance from overhangs, edges, slopes and unsafe ground.
- Be particularly careful in conditions of reduced visibility and changeable ground conditions.
- Familiarize yourself with the location of power lines on the job site and take particular care when working near them. If necessary, inform the responsible authorities.
- Maintain a safe distance from electrical aerial lines. Do not allow the equipment to come near cables when working near electrical aerial lines. Risk of fatality! Inform yourself about required safety distances.
- The following actions must be carried out in the event of any transfer of electricity:
  - do not move the machine or its equipment,
  - do not leave the driver's cab,
  - warn any personnel in the vicinity not to come close to the excavator and not to touch it,
  - instruct or initiate that someone turns off the voltage.
  - **move the machine, if possible, from the danger zone to a sufficient distance,**
  - **Do not leave the machine until you are absolutely sure that voltage in the line, which had been touched or damaged, has been turned off !**
- Before moving the machine, always ensure that any attachments are safely secured.
- When driving onto public roads, paths and squares, observe current traffic regulations and if necessary, ensure that the machine has been made safe as per regulations beforehand.
- Always turn on the lights in conditions of poor visibility or darkness.
- Do not permit any passengers in the machine.
- Only work when seated properly and with the safety belt securely fastened (if available).



- Report all function faults and ensure that all necessary repairs are carried out immediately.
- Assure yourself that no one is endangered when you start the machine moving.
- Before you start working, test the brake system in accordance with the regulations given in the operating instructions.
- Never leave the driver's seat while the machine is moving.
- Never leave the machine unattended while the engine is running.
- The machine must be positioned, moved and operated in such a way that it is stable and that there is no danger of overturning. Only known loads may be moved with the equipment; this applies particularly when using the grab.
- Position the upper structure in the longitudinal direction when moving and hold the load as close to the ground as possible.  
EXCEPTION: see USE WHEN LOADING AND UNLOADING
- Adjust your driving speed to suit local conditions.
- Avoid any working movements which may tip the machine. Should the machine start to tip or slide sideways, however, turn the upper structure to face downhill and lower the equipment at the same time.
- As far as possible, work downhill or uphill and not side on to the slope.
- **Drive safely on stony, sleepy or inclined ground**
- Only drive downhill at the permitted speed or you could lose control of the machine.
- Always shift down to a lower running step before a slope. When doing this, the diesel engine must run at **nominal** speed and the speed may only be reduced using the accelerator pedals.
- **Load an occupied truck only if all safety requirements are fulfilled, notably in order to protect the truck operator.**
- For demolition work, digging and crane operations etc., always use protective devices specifically designed for the purpose.
- For terrain which is difficult to gain an overview of and whenever necessary, ask for the assistance of a spotter. Only permit one person to give you signals.
- Only permit experienced personnel to attach loads and give signals to the machine operator. The spotter must be positioned within the visual range of the operator or be in voice contact with him.
- Depending on the equipment combination, there is a risk of collision between the work tool and the cab, the cab protection or the boom cylinders. The greatest degree of care must be taken to avoid damage when the hoe teeth come within this area.
- **In case of a thunderstorm :**
  - lower the attachment to the ground and if possible anchor the digging tool into the soil.
  - leave the cab and move away from the machine before the storm breaks out. Otherwise, you must stop the excavator, turn off the radio and keep inside the closed cab until the end of the storm.
- **Auxiliary control units can have various functions. Always check their functions when starting up the machine.**
- **Stop the swinging motion of the uppercarriage when lowering the attachment into a ditch without striking the attachment on the ditch walls.**
- **Inspect the machine for damage if the attachment has been swung into a wall or any other obstacles.**
- **Applications in which the attachment is to be used to strike the material being extracted are not permitted, even when working in a longitudinal direction.**
- **Repeated strikes against an object leads to damage to the steel structures and**

machine components.

- Please refer to your LIEBHERR dealer if special teeth for heavy-duty or special applications are required.
- Do not attach too large bucket or bucket with side cutters or that are during operations with rocky material. This would prolong the work cycles and may lead to damage to the bucket as well as further machine components.
- With the 2x45° offset articulation, the offset position may only be employed if the working tool or the attachment does not touch the material.
- Operation of the offset articulation to drill into the material is not permitted.
- Do not lift the machine during operation. Should this happen, lower the machine slowly back to the ground.
- Do not let the machine fall heavily on the ground and do not hold it back with the hydraulics. This would damage the machine.
- During operation with the attachment it is forbidden to raise the machine with the dozing blade (e.g. carving at the ceiling when tunnelling).

### Safe use with a hydraulic hammer

- The hydraulic hammer must be selected with particular care. When using a hydraulic hammer not permitted by LIEBHERR, steel structures or the other machine components can become damaged.
- Before beginning breaking tasks, position the machine on firm and level ground.
- Use a hydraulic hammer designed exclusively for breaking stone, concrete and other breakable materials.
- Only operate the hydraulic hammer in the longitudinal direction of the machine and with the windshield closed or with a front protective grid.
- Ensure during hammer operation that no cylinder is entirely extended or retracted and that the stick is not in the vertical position.
- In order to avoid damages to the machine, try not to break stone or concrete while performing retraction and extension motions of the hydraulic hammer.
- Do not apply the hydraulic hammer uninterrupted for more than 15 secs. at a time to the same place. Change the breaking point. Too long uninterrupted operation of the hydraulic hammer leads to an unnecessary overheating of the hydraulic oil.
- Do not use the drop force of the hydraulic hammer to break stone or other materials. Do not move obstacles with the hydraulic hammer. Misuse of this nature would damage both the hammer and the machine.
- Do not use the hydraulic hammer to lift objects.

### Safe use when loading and unloading (particularly when loading and unloading wood)

- According to use, it can be necessary when working with a grab to move with the equipment raised and the load lifted up; this applies, for example, when loading and unloading wood.
- Here, the centre of gravity of the machine will be displaced upwards in the vertical direction. The driving characteristics of the machine will thus be influenced persistently, e.g. through reduction of the dynamic stability.  
The following instructions are therefore to be observed at all times:
  - Adjust vehicle handling to suit the altered machine characteristics and environmental conditions.
  - Reduce your speed to prevent the need for sudden braking and steering manoeuvres.
  - Avoid sudden speed changes, such as braking, accelerating and changing direction.

- Only rotate the upper structure when the chassis is stationary.
  - Only rotate the upper structure after you have picked up the load.
  - Only move the machine when you have picked up and lifted the load and rotated the upper structure to the driving position.
  - There is a danger of possible swinging movement and dropping of the load when the equipment is raised.
  - A protective grid (FOPS) in accordance with ISO 10262 must be attached to the cab.
  - A protective roof (FOPS) in accordance with ISO 10262 must be attached if there is a risk of objects falling from above.
  - Only the maximum permissible load may be taken up using the grab.
- NOTE: The weight of absorbent materials, such as logs, is dependent on length, diameter and specific weight. The influencing variables present in a natural product, such as moisture, must be noted.
  - Working procedures when using machines with grabs require the machine operator to receive special instruction and training.
  - Use as part of the work process is only permitted when the machine operator has sufficient training and practical experience.

### Safe use of machines with tower elevation

- Due to the tower elevation, the centre of gravity of the machine will be displaced upwards in the vertical direction. The driving and work characteristics of the machine will thus be influenced persistently, e.g. through reduction of the dynamic stability.
- Due to the heightened centre of gravity, the machine must be aligned horizontally before use. In horizontal alignment, the centre of gravity of the upper structure is over the centre of the chassis, which reduces the risk of tilting.
- The machine can still sway and tilt despite being aligned!  
The following instructions are therefore to be observed at all times:

#### When moving the machine:

- Rotate the upper structure parallel to the undercarriage chassis (transport position).
- Draw the equipment as close as possible to the machine.
- Only at this point may the support feet be retracted and the machine moved.
- Moving with loads is not permitted.
- Check the terrain to be covered to ensure that the ground is solid and even. Potholes and uneven surfaces jeopardize the stability of the machine.
- Adjust vehicle handling to suit the altered machine characteristics (high centre of gravity) and environmental conditions.
- Reduce your speed to prevent the need for sudden braking and steering manoeuvres.
- Avoid sudden speed changes, such as braking, accelerating and changing direction.
- Ascending gradients and obstacles may only be approached in the longitudinal direction in order to prevent unacceptable banking of the machine.
- Special care should be taken when driving through narrow passages - drive slowly!

#### When loading and unloading:

- The machine must be supported and aligned horizontally before moving (slewing) the upper structure out of the transport position.
- It is imperative that you check the contact surface of the support (load carrying capacity of the substrate). A support subsiding would have disastrous consequences!
- Carry out all movements with increased care.
- To slew the load, move the equipment as close as possible to the machine

**(Caution! swinging grab)** and hold the load close to the chassis and above the substrate.

- Avoid braking or accelerating the equipment or upper structure abruptly.
- Do not lift any loads which are heavier than those given in the load chart.

### Protection from vibration


- Vibrational loads on mobile building machinery are mainly the result of the type and method of use. The following parameters in particular are decisive influences:
  - Terrain conditions: Uneven areas and potholes;
  - Operational techniques: Speed, steering, brakes, controlling the machine's control elements when driving and working.
- To a large extent, the machine operator determines the vibrational loads since he selects the speed, gearbox ratio, working method and route himself. This means that there is a wide range of different vibrational loads for the same machine type.

Whole-body vibrational load for the machine operator can be reduced if the following recommendations are observed:

- Select suitable machines, equipment parts and auxiliary devices for each part of the job.
- Use a machine that has a suitable seat (i.e. for earth-moving machinery such as hydraulic excavators, this should be a seat which corresponds with EN ISO 7096).
- Keep the seat in good condition and adjust it as follows:
  - The seat and its damping action should be adjusted depending on the weight and height of the operator.
  - Check the seat's damping action and adjustment mechanisms regularly and ensure that these seat characteristics remain as per the seat manufacturer's instructions.
- Check the maintenance status of the machine, particularly with respect to: tyre pressure, brakes, steering, mechanical connections etc.
- Do not steer, brake, accelerate, shift gears, move or load the machine's equipment jerkily.
- To reduce vibrational load, adjust the machine speed to suit the route as follows:
  - Reduce speed when driving on difficult terrain;
  - Drive around obstacles and avoid driving on very difficult terrain.
- Keep the terrain on which the machine is working and driving in good condition:
  - Remove large stones and obstacles;
  - Fill in ruts and holes;
  - Have machines ready to prepare and maintain suitable ground conditions and calculate in sufficient time to carry out any work required.
- Drive longer distances (e.g. on public roads) at an appropriate (medium) speed.
- Use special auxiliary systems (if available) which reduce vibration for machines that are driven frequently.  
If such auxiliary systems are not available, regulate speed to avoid "oscillating" the machine.

### 3.4.3 Low idle automatic

This device automatically reduces the engine speed to idle after several seconds if no hydraulic functions are activated by the joystick or the pedals. This saves fuel and reduces the amount of noise. Touching the joystick or operating the pedals takes the engine speed back to its original level.



Automatic idling is started by pressing switch **S20**.

- ▶ Press switch.
  - ↖ Low idle automatic is activated.
  - ↖ LED in switch illuminates.
- ▶ Press switch again.
  - ↖ Low idle automatic is deactivated.
  - ↖ LED in the switch goes out.

**To set the time within which the engine is set back to idle after the joystick has been released:**

- ▶ Press and hold switch.
  - ↖ LED in the switch flashes.
- Desired time span is reached.
- ▶ Release the switch.
  - ↖ LED in switch illuminates.
  - ↖ Low idle automatic is activated.

In each case, when a hydraulic function is activated, the speed which was previously set using the electrical speed adjustment function will be reset automatically.



**Caution!**

Low idle automatic must be switched off when starting the diesel engine and when driving on gradients. The LED in the switch must not illuminate.

### 3.4.4 Operating the swing gear




**Caution!**

The machine is dispatched as standard with **normal control**. On request, the machine can be equipped with a control system that deviates from the norm (eg. with LIEBHERR control). The additional operating instructions for this control system apply in this case.

The joystick functions described here refer exclusively to **normal control**.

### Rotating the uppercarriage

The uppercarriage is rotated using the left joystick.

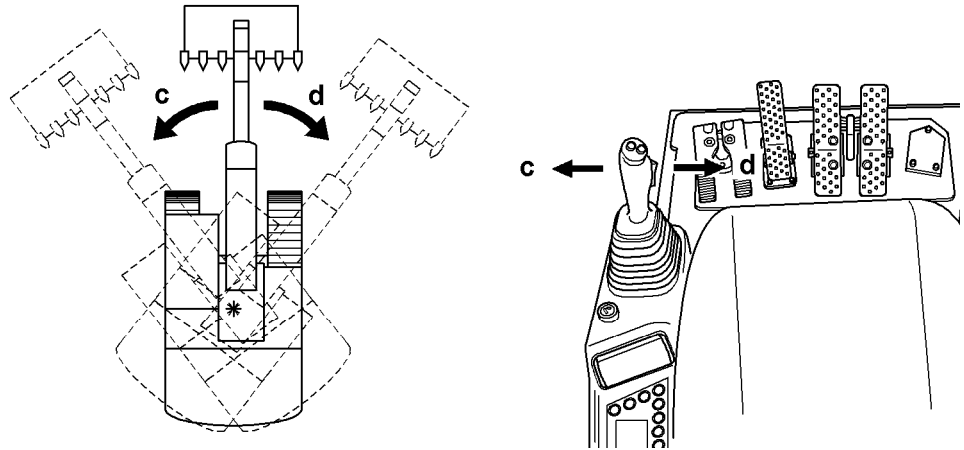

**Fig. 3-68** Rotating the uppercarriage

- ▶ Push the joystick to the left **c**.
  - ↪ Upper carriage rotates to the left.
- ▶ Push the joystick to the right **d**.
  - ↪ Upper carriage rotates to the right.

### Braking the uppercarriage

The machine is equipped with a hydraulic and a mechanical swing gear brake.

#### Hydraulic swing gear brake

- ▶ Move the left joystick **4** to neutral.
  - ↪ Uppercarriage will be adequately hydraulically braked.
- ▶ Move the left joystick **4** in the opposite direction.
  - ↪ Maximum hydraulic braking action of the uppercarriage is achieved.

#### Mechanical swing gear brake

The uppercarriage can be locked in any position using this brake

The brake is negatively acting, hydraulically actuated and serves as a holding or parking brake.




#### Caution!

Damage to the machine.

- ▶ Only lock the mechanical swing gear brake when the upper carriage is stationary.



- ▶ Press switch **S17**.
  - ↪ Swing gear brake is engaged.
  - ↪ LED in switch illuminates.
- ▶ Press switch **S17** again.
  - ↪ Swing gear brake is in mode semi-automatic.
  - ↪ LED in the switch goes out.

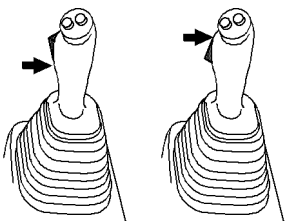

- ▶ Tilt down the rocker switch **S57**.
  - ↪ Slewing gear brake is applied as soon as the uppercarriage speed gets lower than a limit value.
- ▶ Tilt up the rocker switch **S57**.
  - ↪ Swing gear brake remains released.

**Note!**

The red control light in the button S17 lights up each time the brake is applied. If this light does not go out when the rocker switch S57 is tilted up, the button S17 must first be pushed to pre-select the semi-automatic mode.

**Caution!**

The brake only applies when the uppercarriage is near standstill and if no swing motion is actuated via the joystick!

In order to stop the uppercarriage when working on a slope, tilt the switch S57 down and reduce the uppercarriage speed by braking with joystick 4.

Move the joystick 4 back to «0» position only when the uppercarriage is quite immobile, the brake will apply.

**Emergency stop of the uppercarriage swing motion**

The swing brake can be applied independently of the uppercarriage RPM by switching the button S17 from position «semi-automatic» into position «applied».

**Caution**


Perform this braking via button S17 only in emergency cases, since it causes fast abrasion of the brake discs.

**To check the mechanical swing gear brake:**

- Upper carriage must be stationary.
- ▶ Press switch **S17**.
  - ↖ Swing gear brake is engaged.
  - ↖ LED in switch illuminates.
- ▶ Push the left joystick **4** to the right and then to the left as far as the stop.
  - ↖ Upper carriage may not rotate.
  - ↖ Slewing gear brake function is OK.

**Positioning swing brake (optional extras)**

The positioning swing brake is used for progressive and sensitive braking of the upper carriage.

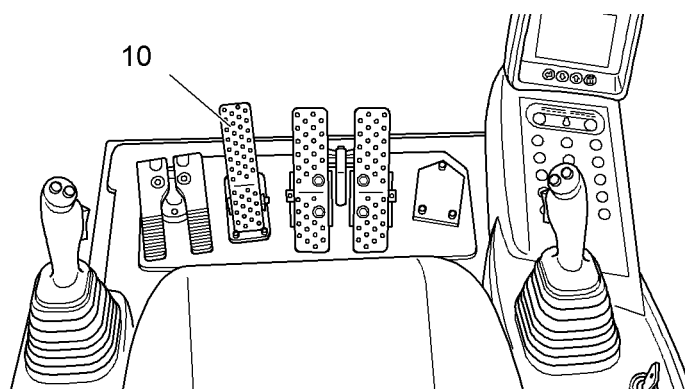

**Fig. 3-69** Positioning swing brake


**Note!**

Increased wear.

- ▶ Do not use the positioning swing brake purely as a service brake, but only as a stop and parking brake for the swing gear.
- ▶ Brake the upper carriage hydraulically for preference (by countering).

- ▶ Engage pedal 10.
  - ↳ Upper carriage is located in the desired position after sensitive braking.

### 3.4.5 Working position

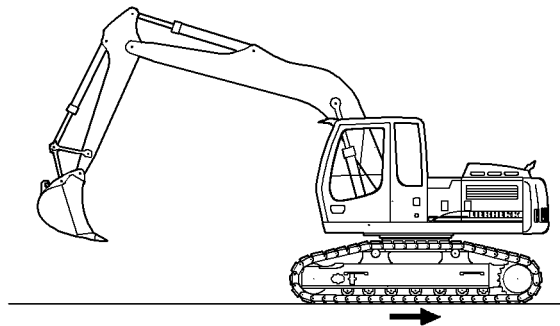

*Fig. 3-70 Working position – machine*

- Work with the machine is generally to be carried out over the leading wheel.

**Note**

- ▶ Drive backwards when you are working lengthwise with the hoe type bucket.

### 3.4.6 Joystick functions when setting up the machine

**Caution!**

The machine is dispatched as standard with **normal control**.


On request, the machine can be equipped with a control system that deviates from the norm (eg. with LIEBHERR control). The additional operating instructions for this control system apply in this case.

The joystick functions described here refer exclusively to **normal control**.

#### Operating the stanchion cylinder

The stanchion cylinder is operated using the left joystick 4.



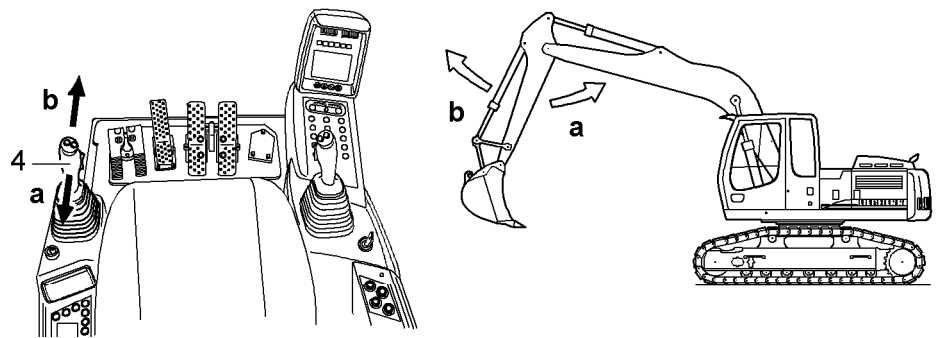


**Fig. 3-71** Operating the stanchion cylinder

- ▶ Push the joystick back **a**.  
↪ Stanchion will be drawn in.
- ▶ Push the joystick forwards **b**.  
↪ Stanchion will be extended.

### Operating the boom cylinder

The boom cylinder is operated using the right joystick **3**.

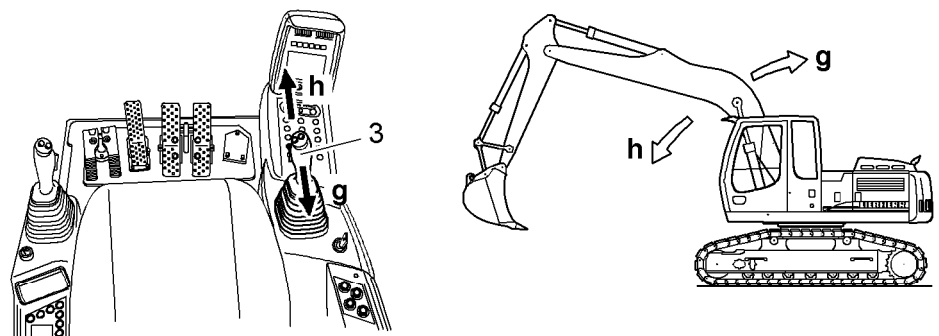


**Fig. 3-72** Operating the boom cylinder

- ▶ Push the joystick back **g**.  
↪ Equipment will be raised.
- ▶ Push the joystick forwards **h**.  
↪ Equipment will be lowered.

### Operating the shovel cylinder

The shovel cylinder is operated using the right joystick **3**.

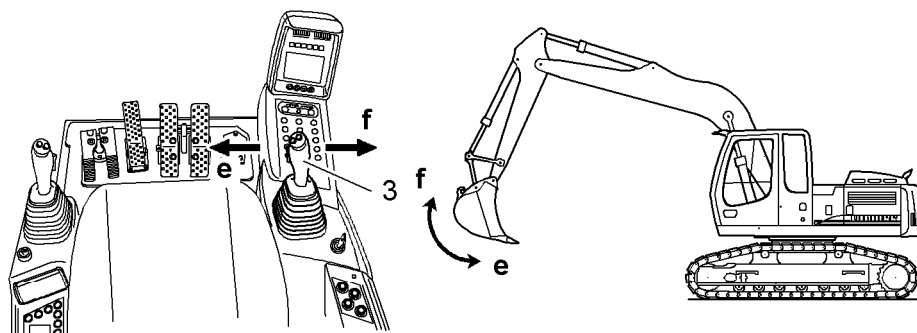


**Fig. 3-73** Operating the shovel cylinder

- ▶ Push the joystick to the left **e**.  
↪ Shovel will be tilted inwards.
- ▶ Push the joystick to the right **f**.  
↪ Shovel will be tilted outwards.

### Operating the grab cylinder

The grab cylinder is operated using the right joystick **3**.

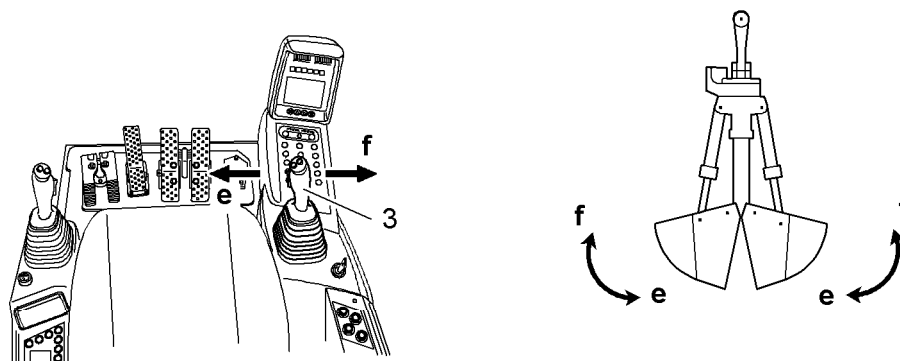

**Fig. 3-74** Operating the grab cylinder



#### **Danger!**

The grab must never be guided by hand by auxiliary staff!

- ▶ Push the joystick to the left **e**.  
↪ Grab will close.
- ▶ Push the joystick to the right **f**.  
↪ Grab will open.


### Combined movements

Moving a joystick diagonally results in the work functions concerned being combined. This allows different equipment movements to be activated at the same time.

## 3.4.7 Lowering the work equipment when the engine is not run-

### ning

In an emergency, the equipment can be lowered when the diesel engine is not running.

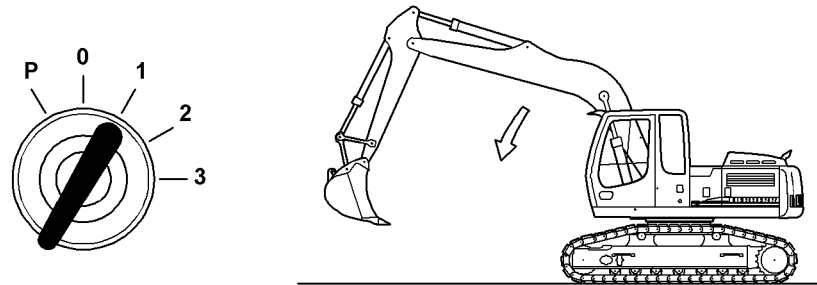

**Fig. 3-75** Lowering the equipment when engine is not running

- ▶ Turn the ignition key to contact position **1**.
- ▶ Operate the joystick or the foot pedals until the equipment has lowered.



**Note**

The equipment can be lowered because of the control oil unit's pressure reserve. This reserve is limited and is only sufficient for small movements of the pilot control devices.


- ▶ Only operate the joystick in the directions for lowering the equipment.

### 3.4.8 Turning, rotating, bolting and unbolting the add-on unit




Switch **S19** is used to activate an additional function:

- rotating grab (A)
- slewing ditcher bucket (B)
- locking pin of a hydraulic quick change adapter (C)

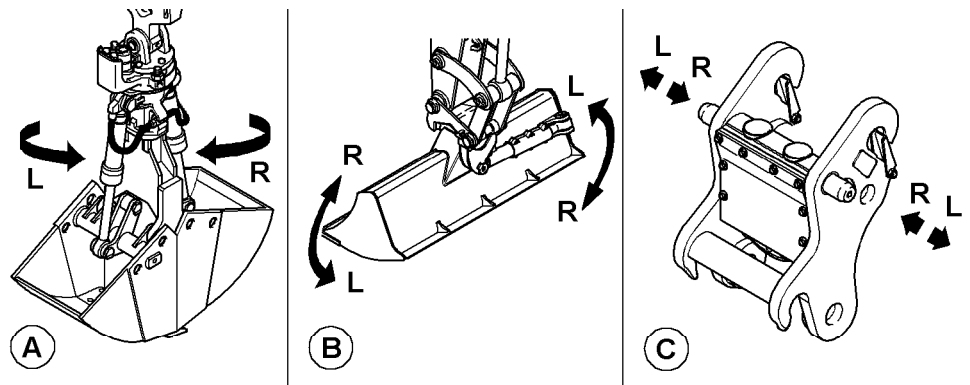

**Fig. 3-76** Add-on units example

To operate, press the pushbutton. The pushbutton is located on the right and/or left joystick (depending on the machine's equipment):

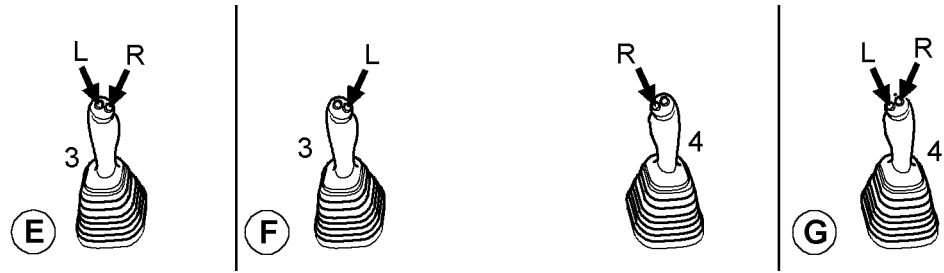

**Fig. 3-77** Pushbutton on the joystick

- E** Operation with left joystick (optional extras)  
**F** Operation with left and right joystick (optional extras)  
**G** Operation with right joystick (standard)



### Danger!

The grab must never be guided by hand by auxiliary staff!



- ▶ Press switch **S19**.
  - ↪ Additional function (eg. rotating grab) is activated.
- ▶ LED in switch illuminates.
- ▶ Press and hold left pushbutton **L**.
  - ↪ Grab will rotate left (anticlockwise).
  - or -
  - ↪ Slewing bucket will slew left (anticlockwise), i e. it moves down to the left.
  - or -
  - ↪ Locking pins will be drawn out.
- ▶ Press and hold right pushbutton **R**.
  - ↪ Grab will rotate right (clockwise).
  - or -
  - ↪ Slewing bucket will slew right (clockwise), i e. it moves down to the right.
  - or -
  - ↪ Locking pins will be inserted.

### 3.4.9 Magnetic system (special equipment)

Special equipment such as magnets for transferring scrap are operated using a magnetic system. The magnetic system is switched on by pressing switch **S46** on the right-hand control panel and is operated electronically using a pushbutton in the right-hand joystick.

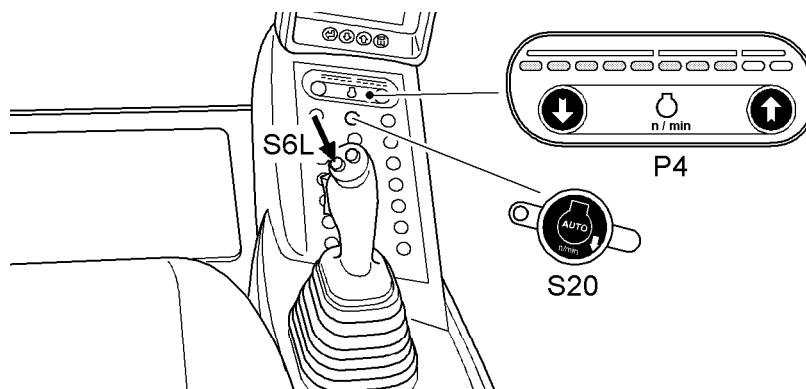


Fig. 3-78 Activating the magnetic system



- ▶ Press switch **S46**.
  - ↳ The magnetic system starts to function.
  - ↳ The engine speed **P4** increases to level 8.
  - ↳ Low idle automatic **S20** no longer functions.



**Danger!**  
The magnet can lose its load in the event of a loss of current.

- ▶ Always ensure that no one is standing beneath the load.
- ▶ Do not press pushbutton **S6L** unintentionally.


- ▶ Press left-hand pushbutton **S6L**.
  - ↳ The magnet is activated.
- ▶ Press left-hand pushbutton **S6L** again.
  - ↳ The magnet is no longer activated.

### 3.4.10 Add-on kits AHS 1, AHS 11 and AHS 12 (optional extra)

Using add-on kits AHS 1, AHS 11 and AHS 12, additional loads can also be operated with different pressure and quantity settings.



**Caution!**  
Incorrect preselection of the pressure and quantity setting can result in damage to the work tool (eg. hydraulic hammer) or to limited function (eg. boom adjustment cylinder).



The add-on kit is activated using two foot pedals and also using a key switch **S88** (AHS 11 and AHS 12) as well as switch **S38** (only on AHS 12).

Key switch **S88** has two positions.

- **Hammer** position: reduced pressure on the additional load (flow volume can be set using the operator's menu).
- **Cylinder** position: full pressure (quantity limitation = 100 %).

The position of key switch **S88** does not influence the layout of the foot pedals and none of the positions result in the foot pedal function being shut down.

**Danger!**

If a large or wide work tool (eg. grab) is made to vibrate in the vicinity of the cab, the cab could be knocked or buckled, which would expose the operator of the machine to danger.


**Note!**

If the machine is generally being used for hammer work, there is a risk that the hydraulic oil may be dirtier than usual.

- ▶ Adjust maintenance intervals for hydraulic oil and filter cartridge changes to suit heavy dust usage.

**Add-on kit AHS 1**

Add-on kit AHS 1 is used to operate the boom adjustment cylinder for a hydraulic boom adjustment or for a side adjustable gooseneck boom.

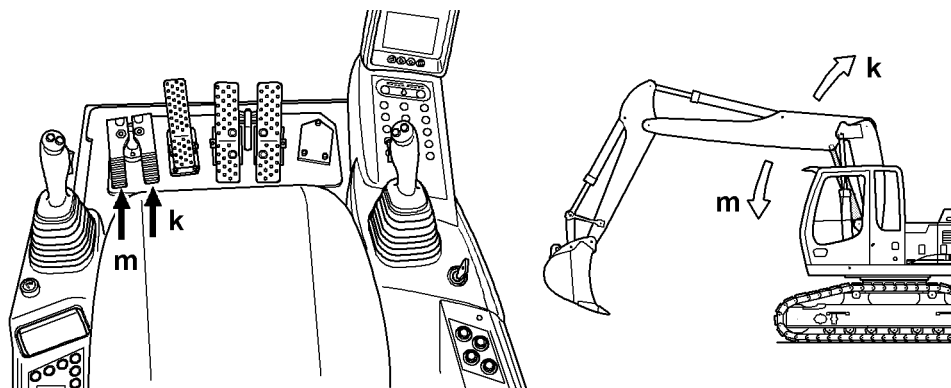

**Fig. 3-79** Add-on kit AHS 1

**To operate the boom adjustment cylinder:**

- ▶ Push down foot pedal **k**.
  - ↪ Boom adjustment cylinder will be extended, ie. the equipment moves up.
- ▶ Push down foot pedal **m**.
  - ↪ Boom adjustment cylinder will be drawn in, ie. the equipment moves down.

**Add-on kit AHS 11**

Using add-on kit AHS 11, only **one** additional load can be operated, i e. one work tool (eg. hydraulic hammer) can be operated for the gooseneck boom.

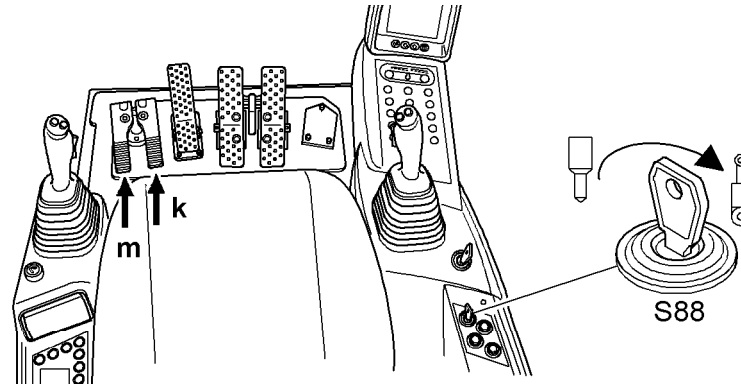


Fig. 3-80 Add-on kit AHS 11

**To operate a work tool with reduced pressure:**

Example: Hydraulic hammer



- ▶ Turn the key switch to the **Hammer** position in order to be able to activate quantity limitation and pressure reduction.
- ▶ Select quantity reduction on the operator's menu.
- ▶ Push down foot pedal **k**.
  - ↳ Hydraulic hammer is activated.

**To operate a work tool with cylinder movement:**

Example: Scrap cutter



- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Push down foot pedal **k**.
  - ↳ Cylinder will be extended, i.e. the scrap cutter will close.
- ▶ Push down foot pedal **m**.
  - ↳ Cylinder will be drawn in, i.e. the scrap cutter will open.

**Add-on kit AHS 12**

Using add-on kit AHS 12, **two** additional loads can be operated, i.e. the boom adjustment cylinder and one work tool (eg. hydraulic hammer) can be operated.

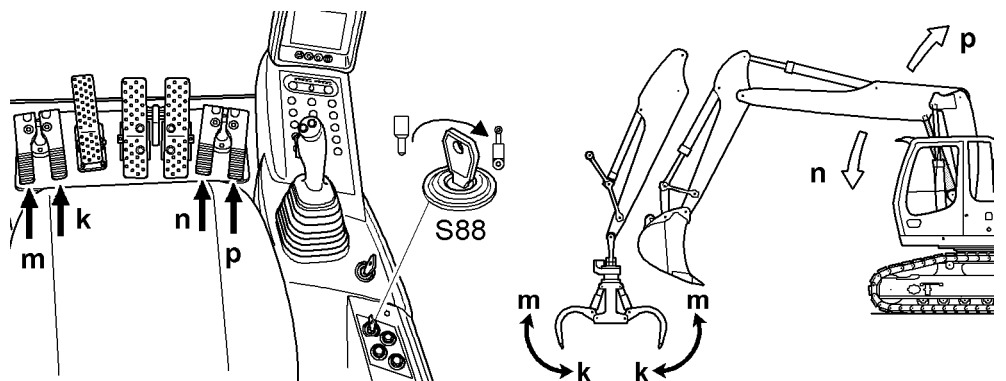


Fig. 3-81 Multi-function kit AHS 12

**To operate the boom adjustment cylinder:**



- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Push down foot pedal **n**.

↵ Boom adjustment cylinder will be extended, i.e. the equipment moves up.

▶ Push down foot pedal **p**.

↵ Boom adjustment cylinder will be drawn in, i.e. the equipment moves down.

#### To operate a work tool with reduced pressure:

Example: Hydraulic hammer



▶ Turn the key switch to the **Hammer** position in order to be able to activate quantity limitation and pressure reduction.

▶ Select quantity reduction on the operator's menu.

▶ Push down foot pedal **k**.

↵ Hydraulic hammer is activated.

#### To operate a work tool with cylinder movement:

Example: Scrap cutter



▶ Turn the key switch to the **Cylinder** position.

▶ Push down foot pedal **k**.

↵ Cylinder will be extended, i.e. the scrap cutter will close.

▶ Push down foot pedal **m**.

↵ Cylinder will be drawn in, i.e. the scrap cutter will open.

### 3.4.11 Add-on kits Tool Control AHS 1, AHS 11 and AHS 12 (optional extra)

Using add-on kits AHS 1, AHS 11 and AHS 12, additional loads can also be operated with different pressure and quantity settings.



#### Caution!

Incorrect preselection of the pressure and quantity setting can result in damage to the work tool (eg. hydraulic hammer) or to limited function (eg. boom adjustment cylinder).



#### Danger!

If a large or wide work tool (eg. grab) is made to vibrate in the vicinity of the cab, the cab could be knocked or buckled, which would expose the operator of the machine to danger.



#### Note!

If the machine is generally being used for hammer work, there is a risk that the hydraulic oil may be dirtier than usual.

▶ Adjust maintenance intervals for hydraulic oil and filter cartridge changes to suit heavy dust usage.

The add-on kit is activated using two foot pedals and also using switch **S36** (only on AHS 12).

#### Add-on kit AHS 1 (Tool Control)

Add-on kit AHS 1 is used to operate the boom adjustment cylinder for a hydraulic



boom adjustment or for a side adjustable gooseneck boom.

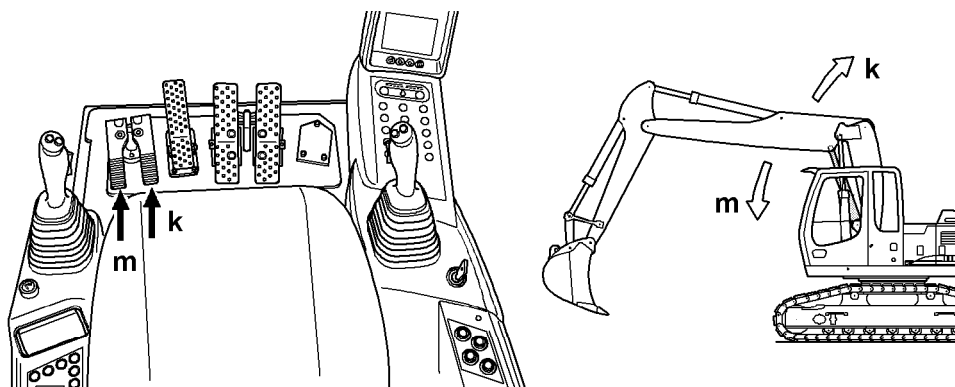


Fig. 3-82 Add-on kit AHS 1

#### To operate the boom adjustment cylinder:

- ▶ Push down foot pedal **k**.  
↳ Boom adjustment cylinder will be extended, i.e. the equipment moves up.
- ▶ Push down foot pedal **m**.  
↳ Boom adjustment cylinder will be drawn in, i.e. the equipment moves down.

#### Add-on kit AHS 11 (Tool Control)

Using add-on kit AHS 11, only **one** additional load can be operated, i.e. one work tool (eg. hydraulic hammer) can be operated for the gooseneck boom.

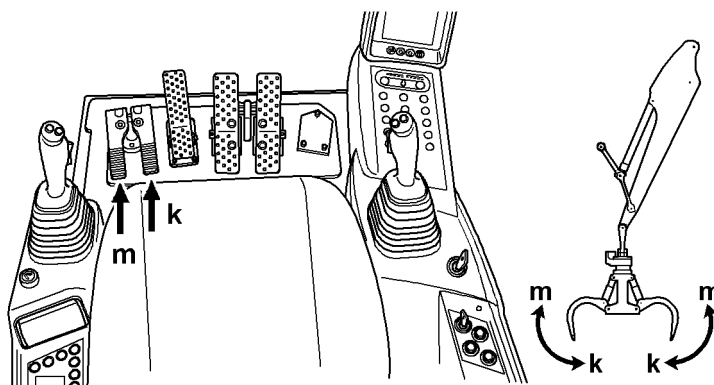


Fig. 3-83 Add-on kit AHS 11

#### To operate a work tool :

- ▶ Choose the predefined pressure and flow limitations assigned to the work tool in the operator's menu (see chapter "Tool Control")

Example: Hydraulic hammer

- ▶ Push down foot pedal **k**.  
↳ Hydraulic hammer is activated.

Example: Scrap cutter

- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Push down foot pedal **k**.  
↳ Cylinder will be extended, i.e. the scrap cutter will close.
- ▶ Push down foot pedal **m**.  
↳ Cylinder will be drawn in, i.e. the scrap cutter will open.

## Add-on kit AHS 12 (Tool Control)

Using add-on kit AHS 12, **two** additional loads can be operated, i.e. the boom adjustment cylinder and one work tool (eg. hydraulic hammer) can be operated.

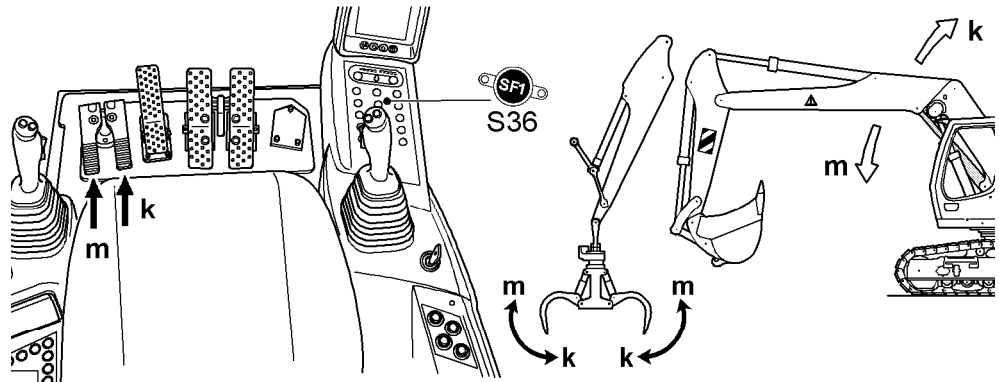


Fig. 3-84 Multi-function kit AHS 12



- ☐ Switch S36 is not activated
  - ↪ LED into the switch does not light on
- ▶ Push down foot pedal **k**.
  - ↪ Boom adjustment cylinder will be extended, i.e. the equipment moves up.
- ▶ Push down foot pedal **m**.
  - ↪ Boom adjustment cylinder will be drawn in, i.e. the equipment moves down.

### To operate a work tool :



- ▶ Choose the predefined pressure and flow limitations assigned to the work tool in the operator's menu (see chapter "Tool Control")

Example: Hydraulic hammer



- ▶ Press Switch S36
  - ↪ LED into the switch lights on.
- ▶ Push down foot pedal **k**.
  - ↪ Hydraulic hammer is activated.

Example: Scrap cutter

- ▶ Press Switch S36
  - ↪ LED into the switch lights on.
- ▶ Push down foot pedal **k**.
  - ↪ Cylinder will be extended, i.e. the scrap cutter will close.
- ▶ Push down foot pedal **m**.
  - ↪ Cylinder will be drawn in, i.e. the scrap cutter will open.

### 3.4.12 Foot pedals travel control with add on kits AHS (optional ex-

tra)


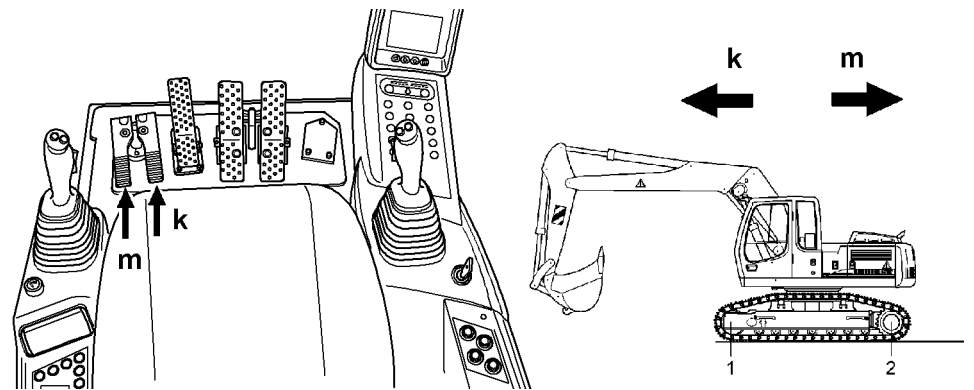


Fig. 3-85 travel control with foot pedals

On request, the machine can be equipped with the option "Foot pedals travel control". With it, it is possible to switch between the optional load AHS control **m** and **k** and the travel movement direction function **m** and **k**.

The control is switched using switch **S159** into the right control bracket.

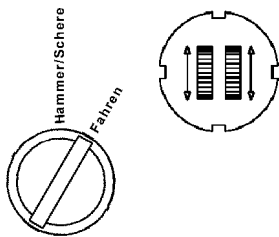

- ▶ Turn switch **S159** into position **Travel**.
- ↙ Control light **H66** into right control bracket lights on.
- ↙ Control functions are switched.
- ↙ Using foot pedal **m** allows to drive back,
- ↙ Using foot pedal **k** allows to drive up.

### 3.4.13 Adjust boom to side

#### Height and laterally adjustable gooseneck boom

The height and laterally adjustable gooseneck boom is operated using the two foot pedals of the AHS add-on kit.

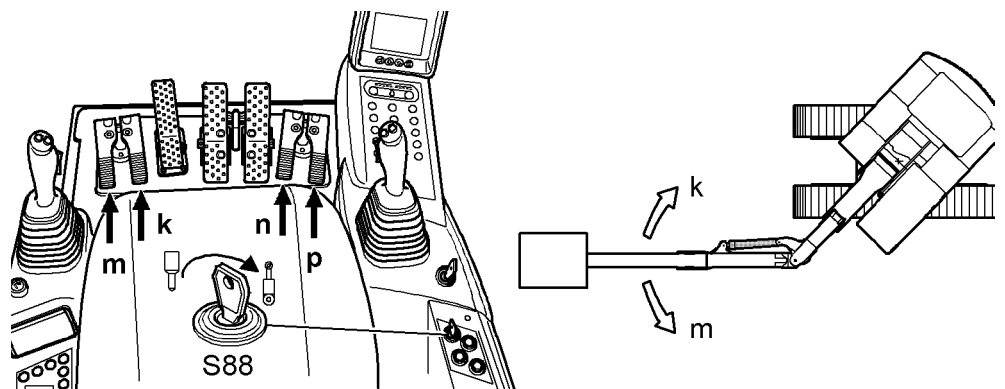


Fig. 3-86 Adjust the height and laterally adjustable gooseneck boom.

#### Add-on kit AHS 1 available:

- ▶ Push down foot pedal **k**.
  - ↙ Boom will be slewed to the right.
- ▶ Push down foot pedal **m**.
  - ↙ Boom will be slewed to the left.

**Add-on kit AHS 12 available:**


- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Push down foot pedal **k**.
  - ↙ Boom will be slewed to the right.
- ▶ Push down foot pedal **m**.
  - ↙ Boom will be slewed to the left.

**Height and laterally adjustable boom**

The height and laterally adjustable boom is operated using the two foot pedals of the AHS add-on kit.

**Add-on kit AHS 12 available**

This variation is only possible if no add-on unit, such as a hydraulic hammer or scrap cutter, is attached.

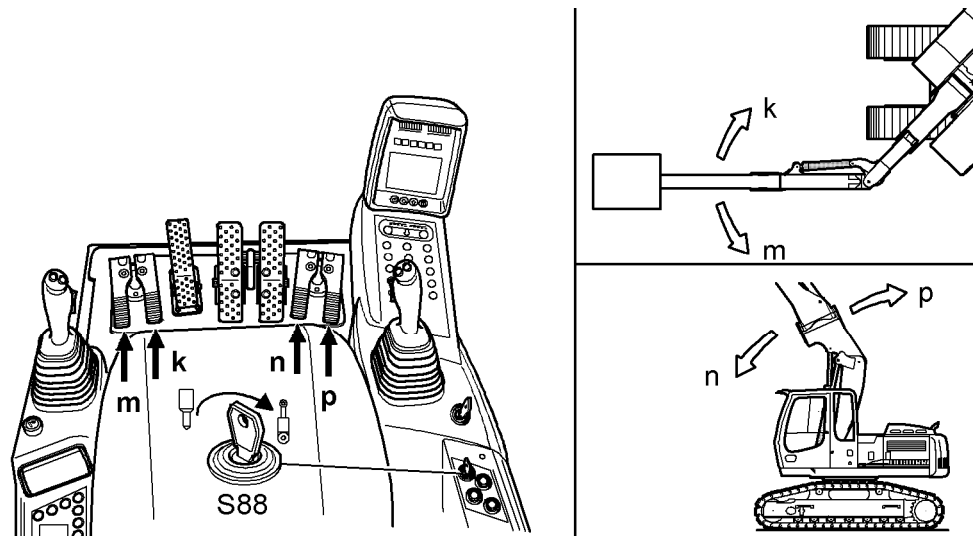

**Fig. 3-87** Adjust the height and laterally adjustable adjusting equipment.

**To adjust the height of the boom:**


- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Push down foot pedal **n**.
  - ↙ Boom adjustment cylinder will be extended, ie. the equipment moves up.
- ▶ Push down foot pedal **p**.
  - ↙ Boom adjustment cylinder will be drawn in, ie. the equipment moves down.

**To adjust boom to side:**

- ▶ Turn the key switch **S88** to the **Cylinder** position.
- ▶ Push down foot pedal **k**.
  - ↙ Boom will be slewed to the right.
- ▶ Push down foot pedal **m**.
  - ↙ Boom will be slewed to the left.



**Add-on kit AHS 12 and changeover slide available**

This variation is required if an add-on unit such as a hydraulic hammer or a scrap cutter is to be operated in addition to adjusting the boom.

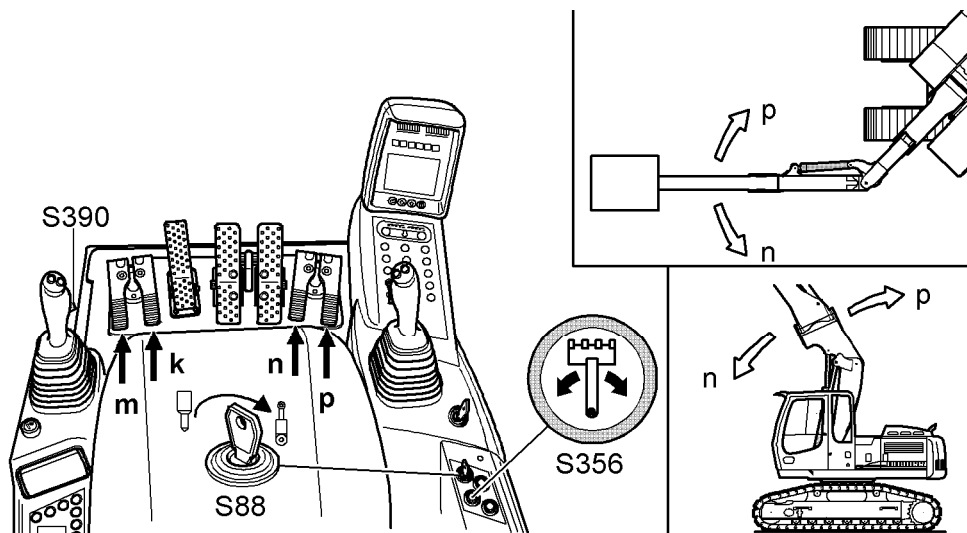


**Fig. 3-88** Adjust the height and laterally adjustable adjusting equipment.

**To adjust the height of the boom:**

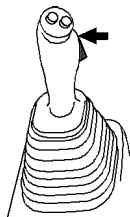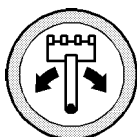

- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Press switch **S356**.  
↪ Telltale light in the switch illuminates.
- ▶ Press up switch **S390**.  
↪ Boom adjusting cylinder is activated.
- ▶ Push down foot pedal **n**.  
↪ Boom adjustment cylinder will be extended, ie. the equipment moves up.
- ▶ Push down foot pedal **p**.  
↪ Boom adjustment cylinder will be drawn in, ie. the equipment moves down.

**To adjust boom to side:**

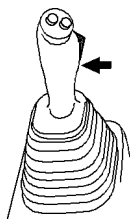


- ▶ Turn the key switch to the **Cylinder** position.
- ▶ Press switch **S356**.  
↪ Telltale light in the switch illuminates.
- ▶ Press switch **S390** down.  
↪ Lateral adjustment is activated.
- ▶ Push down foot pedal **n**.  
↪ Boom will be slewed to the right.
- ▶ Push down foot pedal **p**.  
↪ Boom will be slewed to the left.

**3.4.14 Adjust boom to side (Tool Control)**

**Height and laterally adjustable gooseneck boom**

The height and laterally adjustable gooseneck boom is operated using the two foot pedals of the AHS add-on kit.

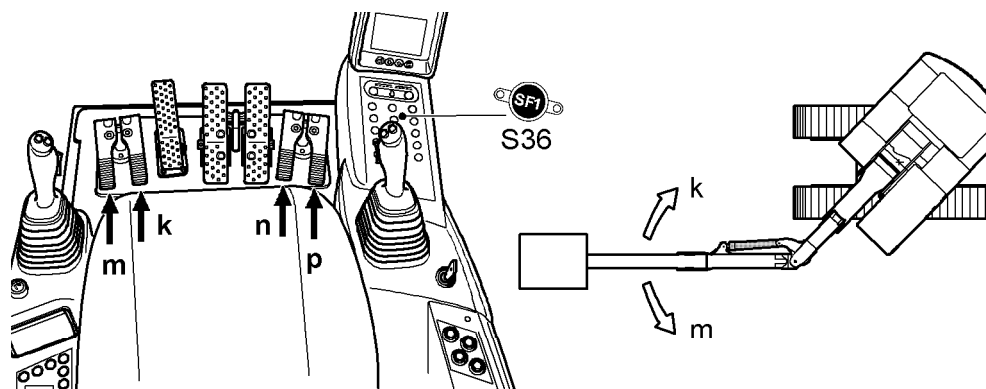

**Fig. 3-89** Adjust the height and laterally adjustable gooseneck boom.

**Add-on kit AHS 1 available:**

- ▶ Push down foot pedal **k**.
  - ↪ Boom will be slewed to the right.
- ▶ Push down foot pedal **m**.
  - ↪ Boom will be slewed to the left.

**Add-on kit AHS 12 available:**




- Switch S36 is not activated
  - ↪ LED into the switch does not lights on
- ▶ Push down foot pedal **k**.
  - ↪ Boom will be slewed to the right.
- ▶ Push down foot pedal **m**.
  - ↪ Boom will be slewed to the left.

## Height and laterally adjustable boom

The height and laterally adjustable boom is operated using the two foot pedals of the AHS add-on kit.

**Add-on kit AHS 12 available**

This variation is only possible if no add-on unit, such as a hydraulic hammer or scrap cutter, is attached.

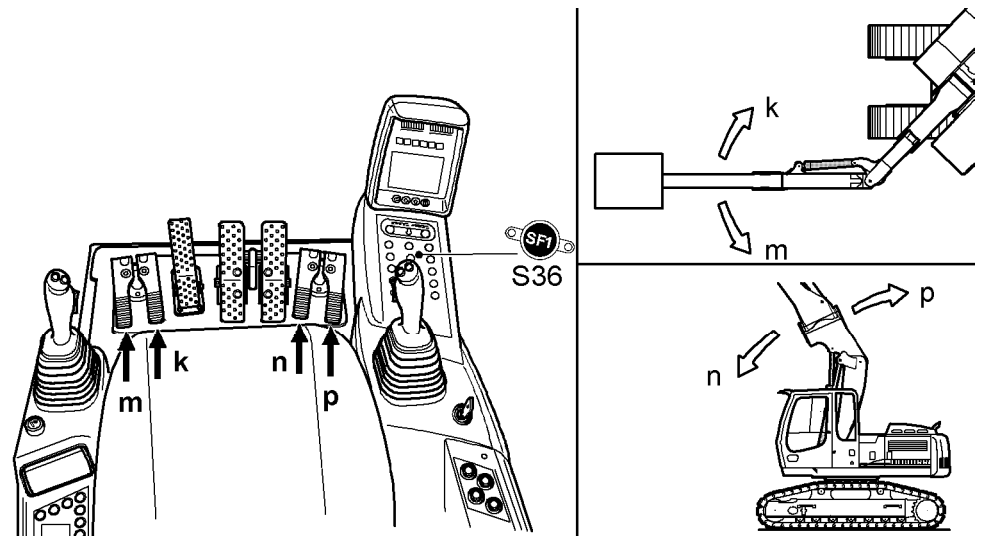

**Fig. 3-90** Adjust the height and laterally adjustable adjusting equipment.

**To adjust the height of the boom:**



- ❑ Switch S36 is not activated
  - ↪ LED into the switch does not lights on
- ▶ Push down foot pedal **p**.
  - ↪ Boom adjustment cylinder will be extended, ie. the equipment moves up.
- ▶ Push down foot pedal **n**.
  - ↪ Boom adjustment cylinder will be drawn in, ie. the equipment moves down.


**To adjust boom to side:**



- ▶ Press Switch S36
  - ↪ LED into the switch lights on.
- ▶ Push down foot pedal **k**.
  - ↪ Boom will be slewed to the right.
- ▶ Push down foot pedal **m**.
  - ↪ Boom will be slewed to the left.

**Add-on kit AHS 12 and changeover slide available**

This variation is required if an add-on unit such as a hydraulic hammer or a scrap cutter is to be operated in addition to adjusting the boom.

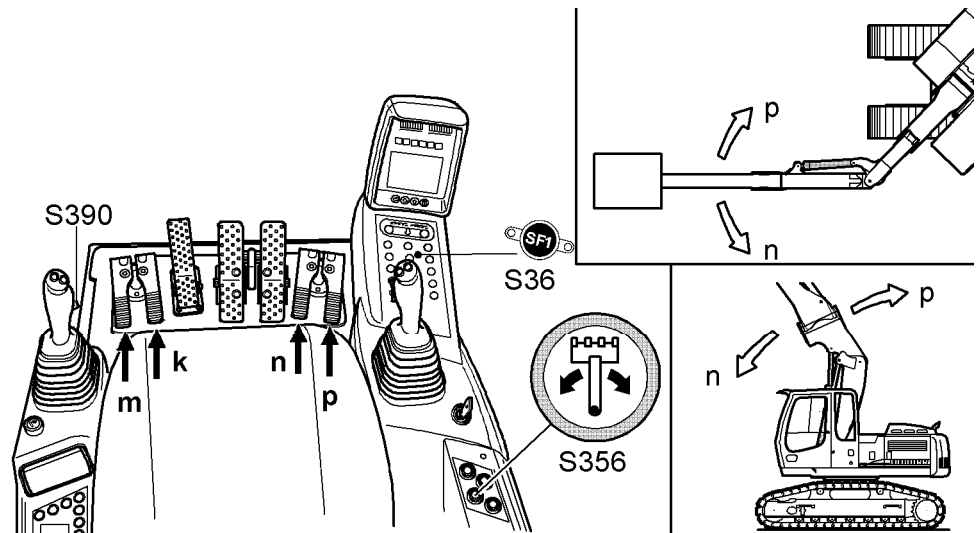


**Fig. 3-91** Adjust the height and laterally adjustable adjusting equipment.

#### To adjust the height of the boom:



- ❑ Switch S36 is not activated
  - ↪ LED into the switch does not lights on

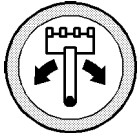


- ▶ Press switch **S356**.
  - ↪ LED in the switch lights on.

- ▶ Press up switch **S390**.
  - ↪ Boom adjusting cylinder is activated.

- ▶ Push down foot pedal **p**.
  - ↪ Boom adjustment cylinder will be extended, ie. the equipment moves up.

- ▶ Push down foot pedal **n**.
  - ↪ Boom adjustment cylinder will be drawn in, ie. the equipment moves down.

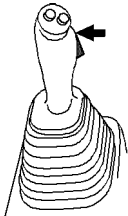

#### To adjust boom to side:


- ❑ Switch S36 is not activated
  - ↪ LED into the switch does not lights on

- ▶ Press switch **S356**.
  - ↪ LED in the switch lights on.

- ▶ Press switch **S390** down.
  - ↪ Lateral adjustment is activated.


- ▶ Push down foot pedal **p**.
  - ↪ Boom will be slewed to the right.

- ▶ Push down foot pedal **n**.
  - ↪ Boom will be slewed to the left.

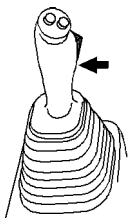




### 3.4.15 Transferring controls (optional extra)

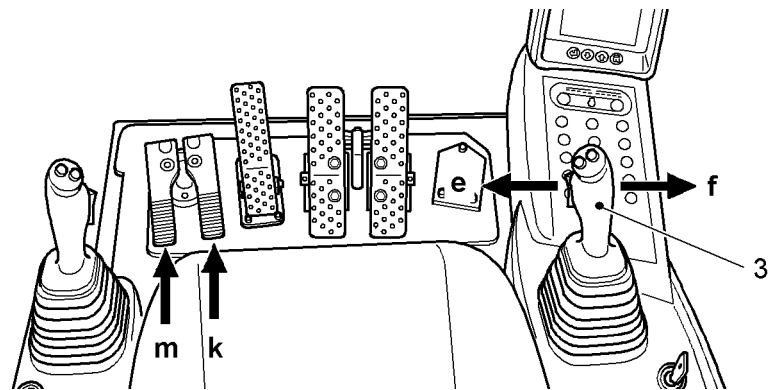

**Fig. 3-92** Transferring controls


On request, the machine can be equipped with the “Transfer controls” kit. This enables the operator to transfer the function “Tilt bucket” (directions of movement **e** and **f**) on the right joystick **3** to the additional load’s operation **m** and **k**.

Control is transferred using key switch **S405** on the right control panel.

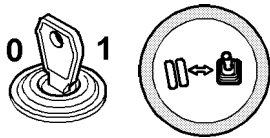


- ▶ Turn the key switch **S405** to position 1.
  - ↪ Telltale light **H322** on the right control panel illuminates.
  - ↪ The control functions are transferred.
  - ↪ Foot pedal function does not operate.
- ▶ Push the right joystick **3** to the left **e**.
  - ↪ The same function will be carried out as if the left foot pedal **m** were being operated.
- ▶ Push the right joystick **3** to the right **f**.
  - ↪ The same function will be carried out as if the right foot pedal **k** were being operated.

### 3.4.16 Transferring controls PCSA - LH (optional extra)

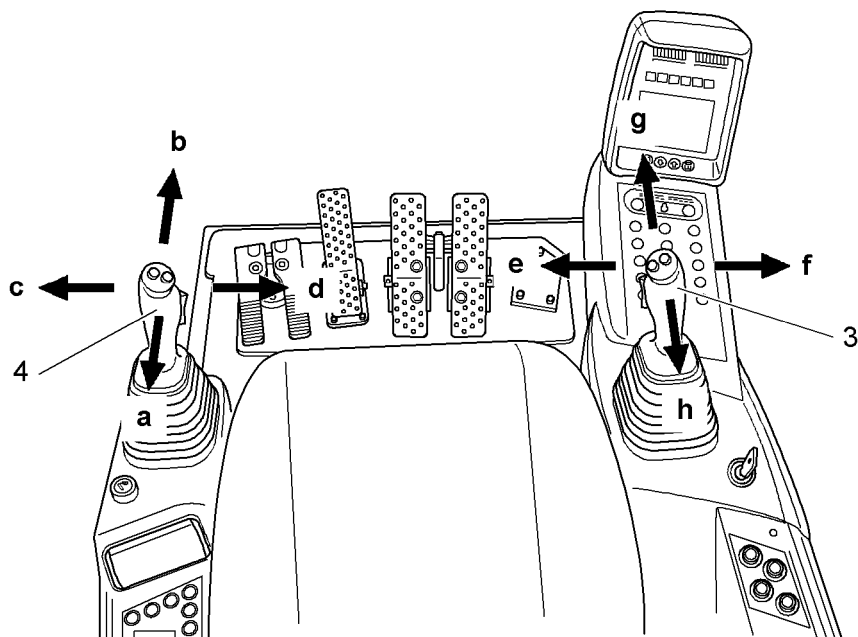

**Fig. 3-93** Transferring controls between joystick right (3) and left (4)

On request, the machine can be equipped with the “Transfer controls” kit. This enables the operator to transfer the functions of the right joystick **3** and the left joystick **4**. Control is transferred using key switch **S247** on the right control panel.



- ▶ Turn the key switch **S247** to position 1.
  - ↗ Telltale light **H292** on the right control panel illuminates.
  - ↗ The control functions are transferred.

The left joystick (**3**) controls the stanchion and slewing movements.

- Direction of movement **h** and **g**: Stanchion is drawn in or out.
- Direction of movement **e** and **f**: Upper carriage is rotated to the left or to the right.

The right joystick (**4**) controls the boom or bucket and grab movements.

- Direction of movement **c** and **d**: Bucket will be tilted up or down, grab will close or open.
- Direction of movement **a** and **b**: Boom will be raised or lowered.




#### Caution!

The machine is dispatched as standard with **normal control**.

On request, the machine can be equipped with a control system that deviates from the norm (eg. with LIEBHERR control). The additional operating instructions for this control system apply in this case.


### 3.4.17 Transferring controls PCSA - J.Deere (optional extra)

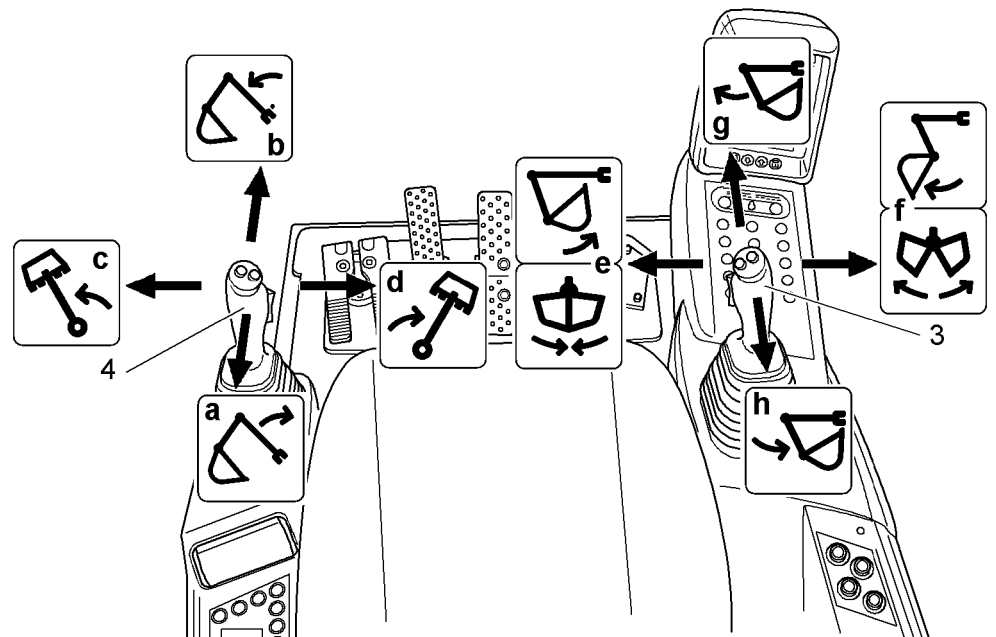

**Fig. 3-94** Transferring controls PCSA - J.Deere

On request, the machine can be equipped with the “Transfer controls” kit. This enables the operator to transfer the functions of the right joystick (3) directions of movement **g** and **h** and the left joystick (4) directions of movement **a** and **b**.

Control is transferred using key switch **S247** on the right control panel.



► Turn the key switch **S247** to position 1.

- ☞ Telltale light **H292** on the right control panel illuminates.
- ☞ The control functions are transferred.

The right joystick (4) controls the boom or slewing movements.

- Direction of movement **a** and **b**: Boom will be raised or lowered
- Direction of movement **c** and **d**: Upper carriage is rotated to the left or to the right.

The left joystick (3) controls the stanchion or bucket and grab movements.

- Direction of movement **e** and **f**: Bucket will be tilted up or down, grab will close or open.
- Direction of movement **g** and **h**: Stanchion is drawn in or out.



**Caution!**

The machine is dispatched as standard with **normal control**.

On request, the machine can be equipped with a control system that deviates from the norm (eg. with LIEBHERR control). The additional operating instructions for this control system apply in this case.

### 3.4.18 Transferring AHS controls (optional extra)

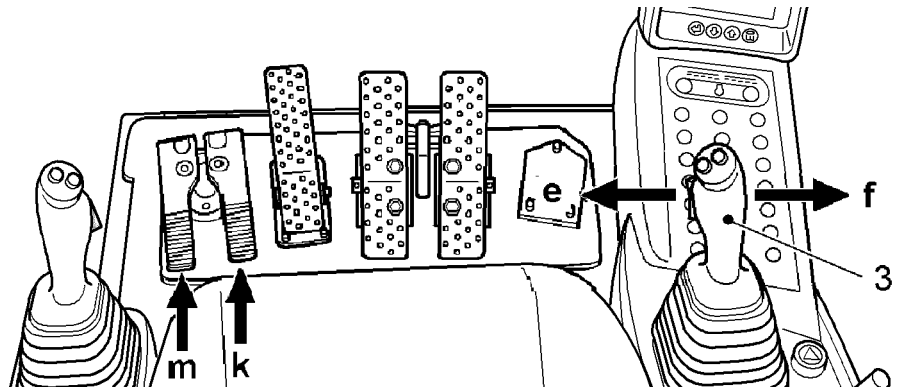


Fig. 3-95 Transferring AHS controls

On request, the machine can be equipped with the "Transfer controls" kit. This enables the operator to transfer the function "Tilt bucket" (directions of movement **e** and **f**) on the right joystick **3** to the additional load's operation **m** and **k**.



#### Note

Requisite : Option AHS 1, AHS11 or AHS12 must be available, and being adjustable. See corresponding chapter.



#### Caution!

Additional equipment can have several functions. Always check out its functions on each machine starting


Incorrect preselection of the pressure and quantity setting can result in damage to the work tool (eg. hydraulic hammer) or to limited function (eg. boom adjustment cylinder).



Control is transferred using key switch **S114** on the right control panel.

- ▶ Turn the key switch **S114** to **position foot pedal**.
- ▶ Operate foot pedal **k**.
  - ↗ The additional equipment / cylinder will be extended.
- ▶ Operate foot pedal **m**.
  - ↗ The additional equipment / cylinder will be drawn in.
- ▶ Turn the key switch **S114** to **position joystick**.
- ▶ Push the right joystick **3** to the left **e**.
  - ↗ The same function will be carried out as if the right foot pedal **k** were being operated.
- ▶ Push the right joystick **3** to the right **f**.
  - ↗ The same function will be carried out as if the left foot pedal **m** were being operated.

### 3.4.19 Dozer blade (only for type 1061)

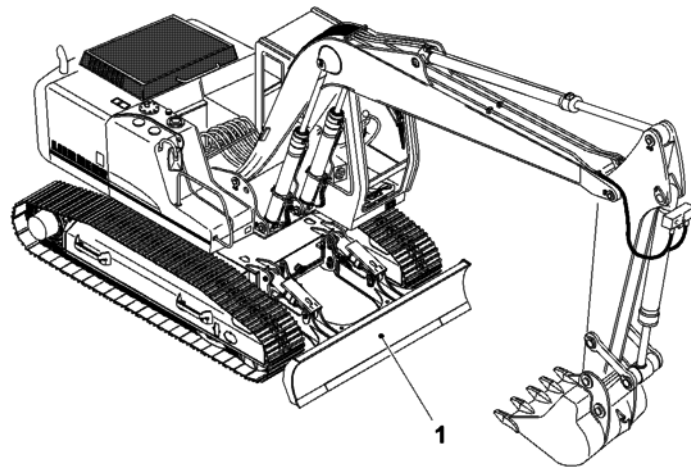

**Fig. 3-96** Dozer blade

The machine is equipped with a dozer blade mounted on the front side :

- 1 Dozer blade




**Danger !**

A dozer blade is not destined for machine shoring. It's lowering does not cause any elevation of the immobilization point, and so any elevation of the admissible charge values.

The dozer blade has to be used exclusively for levelling tasks and **not** to shore the machine.


### Activating the dozer blade

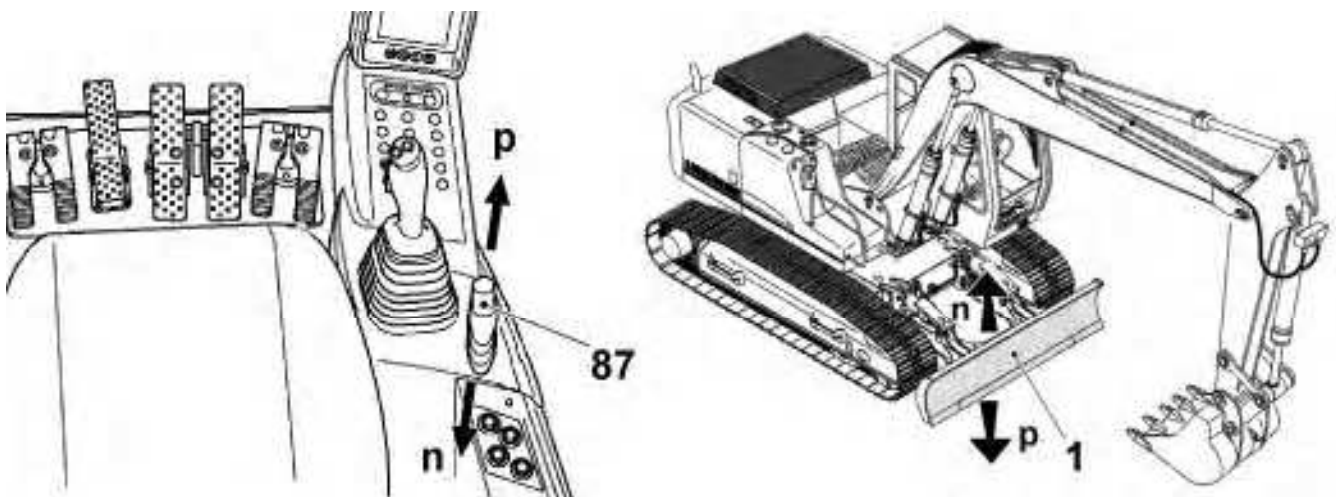

**Fig. 3-97** Dozer blade use

**Dozer blade height regulation :**

- ▶ Push lever **87** forward.
  - ↪ The dozer blade regulation cylinder extends, the equipment is lowered.
- ▶ Push lever **87** backward.
  - ↪ The dozer blade regulation cylinder shortens, the equipment is moved up.

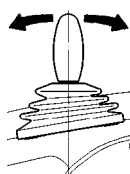

### 3.4.20 Mechanical stanchion cylinder shut-down (option)


#### Mode of operation

The movements of an industrial boom cover considerable heights and breadths.

When moving the industrial stanchion, both the stanchion and its suspended load can come close to the cab or an object in the vicinity.

If the operator does not take due care, this could be dangerous for the operator himself, the cab, the surrounding area and for the equipment and the suspended load.

To prevent this happening, the movement area of the industrial stanchion is limited on its minimum angle by the stanchion cylinder shut-down using an inductive sensor.

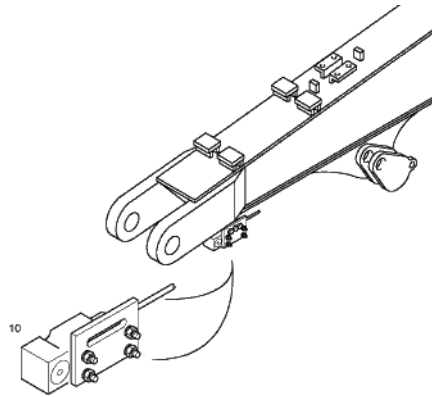

**Fig. 3-98** Sensor stanchion cylinder shut-down



#### **Danger!**

Electronic stanchion cylinder shut-down is **not** a safety device. The shut-down is only intended as an aid to the operator of the machine!



#### **Danger!**

There is a risk that the equipment may come too close to the cab due to:

- A work tool shifting (eg. grab) and due to different dimensions of the work tool when opened and closed.
- A delay in the shut-down process. The shut-down route can, depending on oil temperature and equipment type, be extended by up to 0.5 m and dependent on speed of inward travel and grab contents by up to 1.0 m.

**A minimum safety distance of at least 1.5 m to the danger object should be maintained.** The machine operator is responsible for entering the correct settings!



#### **Caution !**

Risk of damage! The machine could rock!

Avoid moving the industrial stanchion quickly when moving it in the vicinity of the shut-down points.

#### The stanchion cylinder shut-down point

The stanchion cylinder shut-down has one shut-down point:

- Drawing in shut-down point (**min. limit**)

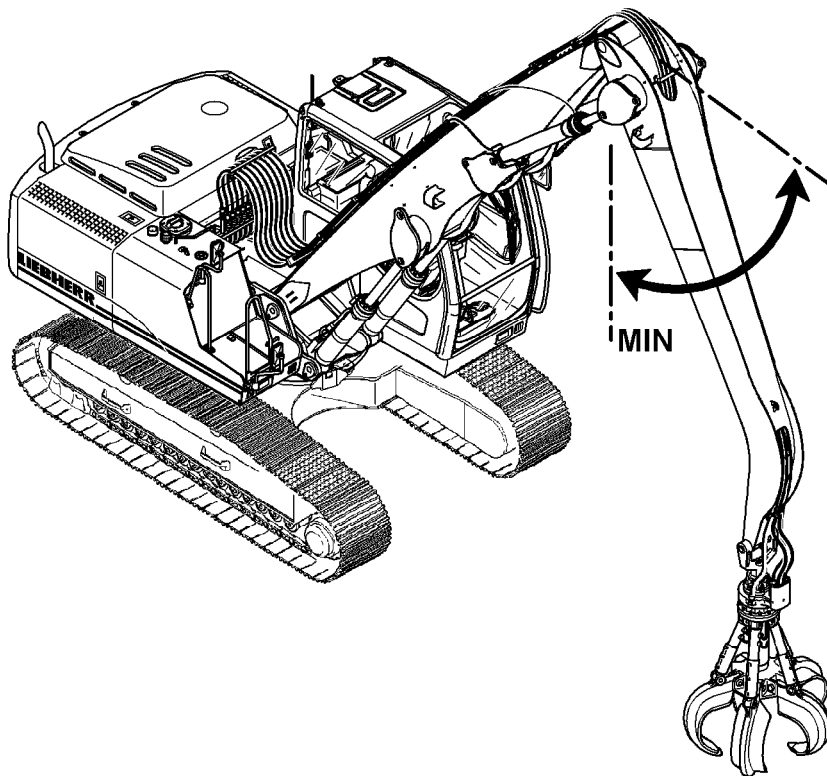


Fig. 3-99 Stanchion cylinder shut-down - shut-down point

### Bypassing stanchion cylinder shut-down

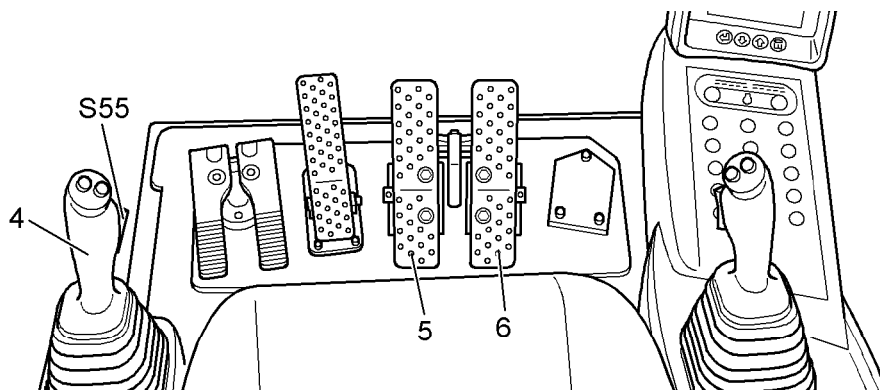


Fig. 3-100 Kippschalter am Linken Handgriff

If the industrial stanchion is to be moved beyond a shut-down point, the stanchion cylinder shut-down can be bypassed.

- Bypassing can only be activated if the movement of the industrial stanchion has already been shut down using the stanchion cylinder shut-down.




**Danger!**

Risk of injury and of damage!

When switch **S54** is being pressed, there is a risk that the equipment may come either too close to the cab or, if it has been extended too far, cause injury to other people or damage objects.

Pressing switch **S54** on the right control panel allows to bypass the stanchion cylinder shut-down.



- ▶ Turn the key-switch **S54** to the right (Position **I**).
  - ↪ Using the flip-switch **S55**, integrated on side of the left grip, up or down, bypasses the stanchion cylinder shut-down.
- ▶ Turn the key-switch **S54** into neutral position (Position **0**).
  - ↪ No bypass of the stanchion cylinder shut-down can be allowed true flip switch **S55**.

### 3.4.21 Overload warning device

#### General



The overload warning device shows the machine operator when the permissible load carrying capacity has been reached both optically, via the warning symbol and acoustically, via a buzzer.

The overload warning device is designed to prevent the permissible load torque being exceeded unintentionally. In this event, the working radius will have to be reduced or the load set down without enlarging the working radius.

The overload warning device does not relieve the operator of the responsibility of lifting loads which are either known or are permitted on the basis of the load carrying capacity of the machine.

The permissible load carrying capacity is dependent on the condition of the machine (chassis, equipment) and should be taken from the load chart in the cab.

The load carrying capacity values attain a maximum of 75% of the tipping capacity or 87 % of the hydraulic lifting power in accordance with ISO 10567.



#### Note!

The load values are subject to change if equipment parts and work tools are attached or dismantled.

For hoe type bucket equipment (including shovel cylinder, reversing lever and connecting clip) the values on the stanchion tip apply. The machine can be rotated 360° on solid, level subsoil when the full floating axle is engaged. If the shovel cylinder, reversing lever and connecting clip are dismantled, the values increase by an additional 300 kg. If a quick-change adapter is used, the values are reduced by 235 kg (QCA 48).

For industrial equipment, the values on the lifting hook apply. The machine can be rotated 360° on solid, level subsoil when the full floating axle is engaged.

#### “Simple” overload warning device



#### Danger!

When carrying out load hoisting work with the machine, the relevant accident prevention precautions are to be observed.

The overload warning device does not shut down the machine if the permissible load torque is exceeded. The operator of the machine will only be informed of the situation.

#### Mode of operation

The overload warning device comprises a constant pressure switch which is connected to the piston of the hydraulic jack.





If the load pressure in the hydraulic jack reaches the level of the shift pressure, the pressure switch emits a signal, the warning symbol appears on screen and the buzzer sounds.

The shift pressure in the pressure switch is selected in such a way that the stability factors can be maintained even if in an unsupported state (small stationary torque).

### Starting



#### Danger!

No load hoisting work may be carried out if the overload warning device is defective.

- ▶ Have the overload warning device repaired by a professional.



- ▶ Press switch **S18**.

- ↳ Overload warning device is activated.
- ↳ LED in switch illuminates.



#### Note!

The overload warning device must be checked before first use and annually by a professional in accordance with the testing and setting information provided in the service manual.

#### The operator must check the function of the overload warning device before each work shift.

- ▶ To check the overload warning device, extend the hydraulic jack to the stop.
- ▶ Push the joystick further in the direction Raise boom.
  - ↳ The warning symbol must illuminate.
  - ↳ The buzzer must sound.



#### Note!

For work using a bucket, deactivate the overload warning device, since the increased effort of the machine will cause the overload warning device to be permanently active.

- ▶ Press switch **S18** again.
  - ↳ Overload warning device is deactivated.
  - ↳ LED in the switch goes out.

## 3.4.22 Overload warning device

### General



The overload warning device shows the machine operator when the permissible load carrying capacity has been reached both optically, via the warning symbol and acoustically, via a buzzer.

The overload warning device is designed to prevent the permissible load torque being exceeded unintentionally. In this event, the working radius will have to be reduced or the load set down without enlarging the working radius.

The overload warning device does not relieve the operator of the responsibility of lifting loads which are either known or are permitted on the basis of the load carrying capacity of the machine.

The permissible load carrying capacity is dependent on the condition of the machine (chassis, equipment) and should be taken from the load chart in the cab.

In principle lift up only loads with known weights.

The overload warning device may only be used for lifting operation. For digging operation, the overload warning device must be turned off

The load carrying capacity values attain a maximum of 75% of the tipping capacity or 87 % of the hydraulic lifting power in accordance with ISO 10567.



---

**Note!**

The load values are subject to change if equipment parts and work tools are attached or dismantled.

---

For hoe type bucket equipment (including shovel cylinder, reversing lever and connecting clip) the values on the stanchion tip apply. The machine can be rotated 360° on solid, level subsoil when the full floating axle is engaged. If the shovel cylinder, reversing lever and connecting clip are dismantled, the values increase by an additional 300 kg. If a quick-change adapter is used, the values are reduced by 235 kg (QCA 48).

For industrial equipment, the values on the lifting hook apply. The machine can be rotated 360° on solid, level subsoil when the full floating axle is engaged.

---

**Mode of operation**

---

**Danger!**

When carrying out load hoisting work with the machine, the relevant accident prevention precautions are to be observed.

The overload warning device does not shut down the machine if the permissible load torque is exceeded. The operator of the machine will only be informed of the situation.

---

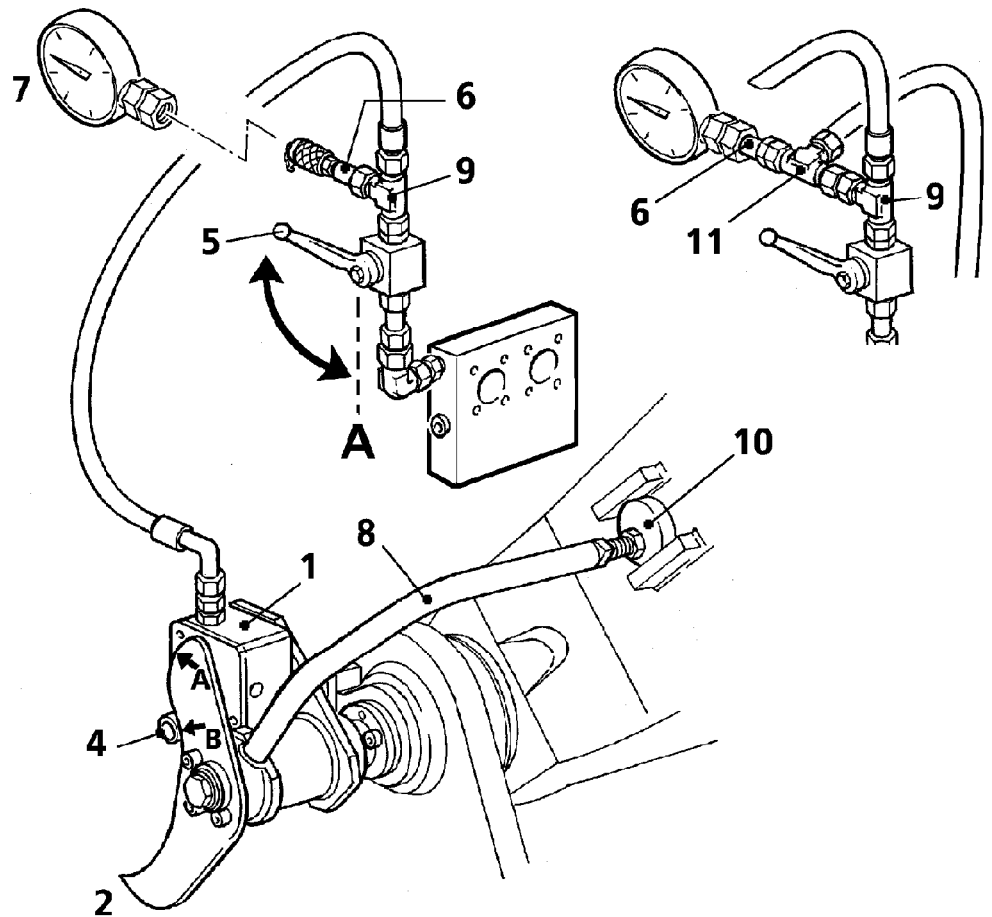


Fig. 3-101 Overload warning device

- |   |                 |    |                 |
|---|-----------------|----|-----------------|
| 1 | pressure switch | 7  | pressure gauge  |
| 2 | cam plate       | 8  | bracket         |
| 3 | lever           | 9  | fitting         |
| 4 | roller          | 10 | eccentric plate |
| 5 | shut off valve  | 11 | fitting         |
| 6 | test point      |    |                 |

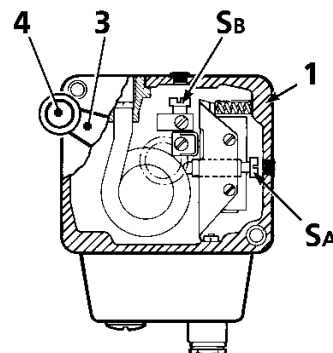


Fig. 3-102 pressure switch overload warning device

The overload warning device comprises a constant pressure switch 1 provided with a lever 3 and a cam plate 2, connected to the equipment via bracket 8. The switching pressure in the overload warning device is proportionally adjusted to the equipment

dynamic true the cam plate.



The pressure switch **1** which is connected to the piston of the hydraulic jack. If the load pressure in the hydraulic jack reaches the level of the shift pressure, the pressure switch emits a signal, the warning symbol appears on screen and the buzzer sounds.

Appropriate comes can be mounted depending of machine's characteristics ( with or without outriggers, way width and wheel's position of the chassis, equipment).

## Starting



### Note!

The overload warning device must be checked before first use and annually by a professional in accordance with the testing and setting information provided in the service manual.

**The operator must check the function of the overload warning device before each work shift.**

- ▶ Check the function of the system by extending the boom cylinder all the way.
- ▶ Push the joystick further in the direction Raise boom.
  - ↔ The warning symbol must illuminate.
  - ↔ The buzzer must sound.
- ▶ Check all moving parts regularly for easy movement and lubricate them.
- ▶ Lever **3** should not be fastened

## For lifting operation



### Danger!

No load hoisting work may be carried out if the overload warning device is defective.

- ▶ Have the overload warning device repaired by a professional.



- ▶ Bring lever **3** into working position.
- ▶ Open shutt off valve **5** (position **A**)
- ▶ Press switch **S18**.
  - ↔ Overload warning device is activated.
  - ↔ LED in switch illuminates.

## For digging operation



### Note!

For work using a bucket, deactivate the overload warning device, since the increased effort of the machine will cause the overload warning device to be permanently active.

- ▶ Press switch **S18**.
  - ↔ Overload warning device is deactivated.
  - ↔ LED in the switch goes out.
- ▶ Close shutt off valve **5**
- ▶ Push roller lever **3** on pressure switch **1** up (position **B**).

## Test and adjustment of the overload warning device.

Adjusting high position (Point A)

- ▶ Remove the cap on test point **6**.
- ▶ mount a pressure gauge **7** (0-400 bar) so the gauge is visible from the cab.
- ▶ Move the boom up all the way.  
if necessary, adjust bracket **8** via eccentric **10** until roller **4** is exactly on the mark for point A on cam plate **2**.
- ▶ Press push button **S18**.
- ▶ open the shut off valve **5** (Position **A**).
- ▶ extend the boom all the way.
  - ↳ the pressure set on point A on cam plate **2** is build up
  - ↳ the warning device is actuated.

If the warning device does not turn on :

- ▶ Remove side cap.
- ▶ Turn screw **S<sub>A</sub>** clockwise
  - ↳ increase shifting point of pressure switch **1**.
- ▶ Turn screw **S<sub>A</sub>** counter clockwise
  - ↳ lower shifting point of pressure switch **1**



### Note!

A lower shifting point is permissible.

- ▶ remove measuring systems, mount caps.
- ▶ check all moving parts of the overload warning device for easy movement.

### Adjusting low position (Point B)

- ▶ Remove the cap on test point **6**.
- ▶ mount a pressure gauge **7** (0-400 bar) so the gauge is visible from the cab.
- ▶ Close shutt off valve **5**
- ▶ Mount fitting **11** between pressure gauge **7** and fitting **9**.
- ▶ Lower the boom until point B on the cam plate is reached.
- ▶ Build up pressure as set on point B, as follows  
either with a separate hand pump  
or via a mini test hose, connected to a pressure test point of the main control valve block for high pressure. The pressure is increased through this hose as soon as any movement is selected.
  - ↳ the overload warning device is actuated.

If this is not the case :

- ▶ take off the upper cap.
- ▶ Turn screw **S<sub>B</sub>** clockwise
  - ↳ increase shifting point of pressure switch **1**.
- ▶ Turn screw **S<sub>B</sub>** counter clockwise.

↘ lower shifting point of pressure switch 1



**Note!**

A lower shifting point is permissible.

- ▶ remove measuring systems, reinstall caps.
- ▶ check all moving parts of the overload warning device for easy movement.

## 3.5 Attaching and dismantling equipment parts

### 3.5.1 Attaching and removing equipment parts safely

- Equipment or attachments made by other manufacturers or those which do not have general approval from LIEBHERR for installation or attachment may not be installed or attached to the machine without LIEBHERR's prior written consent.
- LIEBHERR must be provided with the appropriate technical documentation necessary for this purpose.
- Before carrying out any major repair work on the equipment, position the machine on level, firm ground.
- Do not work beneath the equipment if it is not safely positioned on the ground or supported with wooden blocks.
- Before loosening lines or unscrewing bolts, you must store the equipment, switch off the engine and press the start key to the contact position and both joysticks and the pushbuttons to "Turn grab" in order to reduce the pressure in the hydraulic system.
- Do not attempt to lift heavy parts. Use devices which are suitable for this purpose and which have sufficient load carrying capacity.
- Do not use cable which is damaged or does not have sufficient load carrying capacity. Wear work gloves when working with wire cables.
- When working on the equipment: switch off the engine and keep the safety lever tilted up. Never use your fingers to locate bores; use the correct punch for the procedure.
- During repair work: ensure that the hydraulic lines are secured correctly and that all bolts and connections are tight.
- When you have removed and chocked an equipment part, close open areas of the hydraulic circuit to stop dirt entering. Only allow authorized persons in the vicinity of the machine or the lifting device used.

### 3.5.2 Removing and installing equipment bolts safely

- If possible, always use a hydraulic bolt press to press out the equipment's bolts.
- If you have to remove a bolt using a sledge-hammer, a driving punch and a bore hole conductor held by another person must be used.
- To drive in a bolt, screw the drive screws provided in the toolbox into the bolt's threaded hole and only hammer these screws.
- When installing bolts locked by means of castle nuts and cotter pins, first drive the bolt to the stop, then screw the castle nut by hand until contact and then only pull

it far enough to push in the cotter pin.

### 3.5.3 Attaching and dismantling the bucket

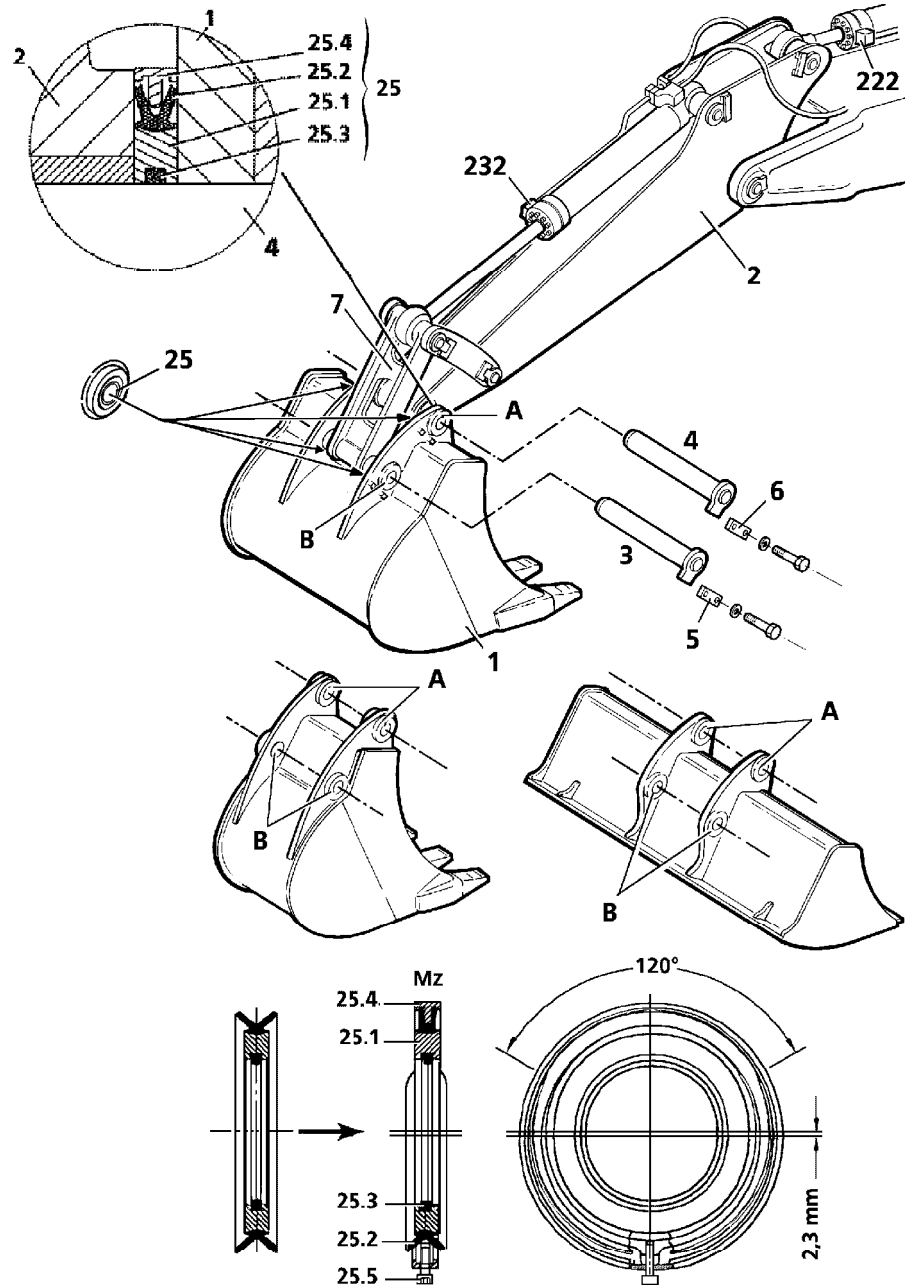


Fig. 3-103 Attaching and dismantling the bucket

- |     |                 |      |                                  |
|-----|-----------------|------|----------------------------------|
| 1   | Digging bucket  | 25   | Complete pin bearing sealing     |
| 2   | Stick           | 25.1 | Sealing ring                     |
| 3-4 | Pin             | 25.2 | Lip seal ring                    |
| 5-6 | Locking plate   | 25.3 | O-Ring                           |
| 7   | Connecting link | 25.4 | Protection and installation ring |

LFR/en/Edition: 5 / 2006

**222** Restrictor check valve**25.5** Assembly screw**232** Restrictor check valve

The following is a description of how to attach and dismount buckets. Buckets are, for example, hoe type buckets, ditcher buckets or breaker teeth.

### Dismounting a bucket

- ▶ Position the attachment in such a way that the entire lower part of the bucket is laying on the ground.
- ▶ Unscrew locking plate **5** and locking plate **6**.
- ▶ Knock out pin **3** and pin **4** and remove the complete pin bearing sealing **25**.
- ▶ If necessary, raise the equipment slightly when knocking out pin **4** to relieve it.

### Attaching a new bucket

- ▶ Position the bucket to be attached in such a way that its entire lower part is laying on the ground.
- ▶ Start the engine and move the equipment until the stick mount and the bearing points **A** of the bucket are squared.
- ▶ Engage the pin **4** in its bore and push it in the complete bearing sealing rings **25** with protection ring, between bucket and stick while pressing in the pin.
- ▶ Secure the pin **4** with the locking plate **6**.
- ▶ Extend the shovel cylinder slowly until the bore hole in connecting clip **7** is located precisely between the bearing points **B**.
- ▶ Engage the pin **3** in its bore and push it in the complete bearing sealing rings **25** with protection ring, between bucket and stick while pressing in the pin.
- ▶ Secure the pin **3** with the locking plate **5**.
- ▶ Lubricate all greasing points of pins **3** and **4** directly or with the automatic grease system (if mounted) until clean grease comes out of the greasing points.

### Description and installation of a pin bearing sealing

#### Function description

A pin bearing sealing **25** is loosely mounted on each side between the bearing limbs of the digging bucket **1**, facing the stick **2** and the connecting link **7**, in such a way that an axial play is produced.

The pin bearing sealings **25** are held in place by the bearing pins **3** and **4**.

The pin bearing sealing **25** protects the bearing from the penetration of dirt, water and corrosive media.

The pin bearing sealing **25** is a pre-assembled delivery component.

The lip seal ring **25.2** is vulcanised onto the sealing ring **25.1**.

The sealing lips on the lip seal ring **25.2** have a V-form profile.

The lip seal ring **25.2** is housed in a protection and installation ring **25.4**.

The protection and installation ring, which houses the sealing lips radially, is made of plastic and protects the sealing lips from external mechanical damage.

The metallic sealing ring **25.1** is able to absorb the forces acting on the rotating part,



so that these cannot destroy the lip seal ring.

### Installation of a pin bearing sealing

- ▶ The inner face of the protection and installation ring **25.4** comprises two circular grooves which allow the installation of the pin bearing sealing.
- ▶ Before insertion of the complete pin bearing sealing **25** between the facing bearing limbs, the lips of the seal ring **25.2** must be fold together and inserted in the grooves of the installation ring in an angular sector of approx. 120°.
- ▶ Fill the interspace between installation ring and lips with grease before installation.
- ▶ The assembly screw **25.5** is only designed to hold the sealing lips together on the lip seal ring during basic assembly of the pin bearing sealing.
- ▶ The assembly screw must be removed after assembly.



---

#### Note!


After installation of a new digging bucket, the restrictor check valves **222** and **232** for stick, respectively bucket tilt cylinders must be eventually readjusted so to have the correct velocity of the working attachment (due to weight differences of the digging bucket). If necessary, consult a LIEBHERR mechanic.

In particular on machines, which are delivered without digging bucket or grapple, this restrictor check valves must be (if mounted) adjusted after installation of the digging tool, so to avoid uneven or jerky movements of the attachment parts.

---

## 3.5.4 Attaching and dismantling the bucket with improved

## sealing

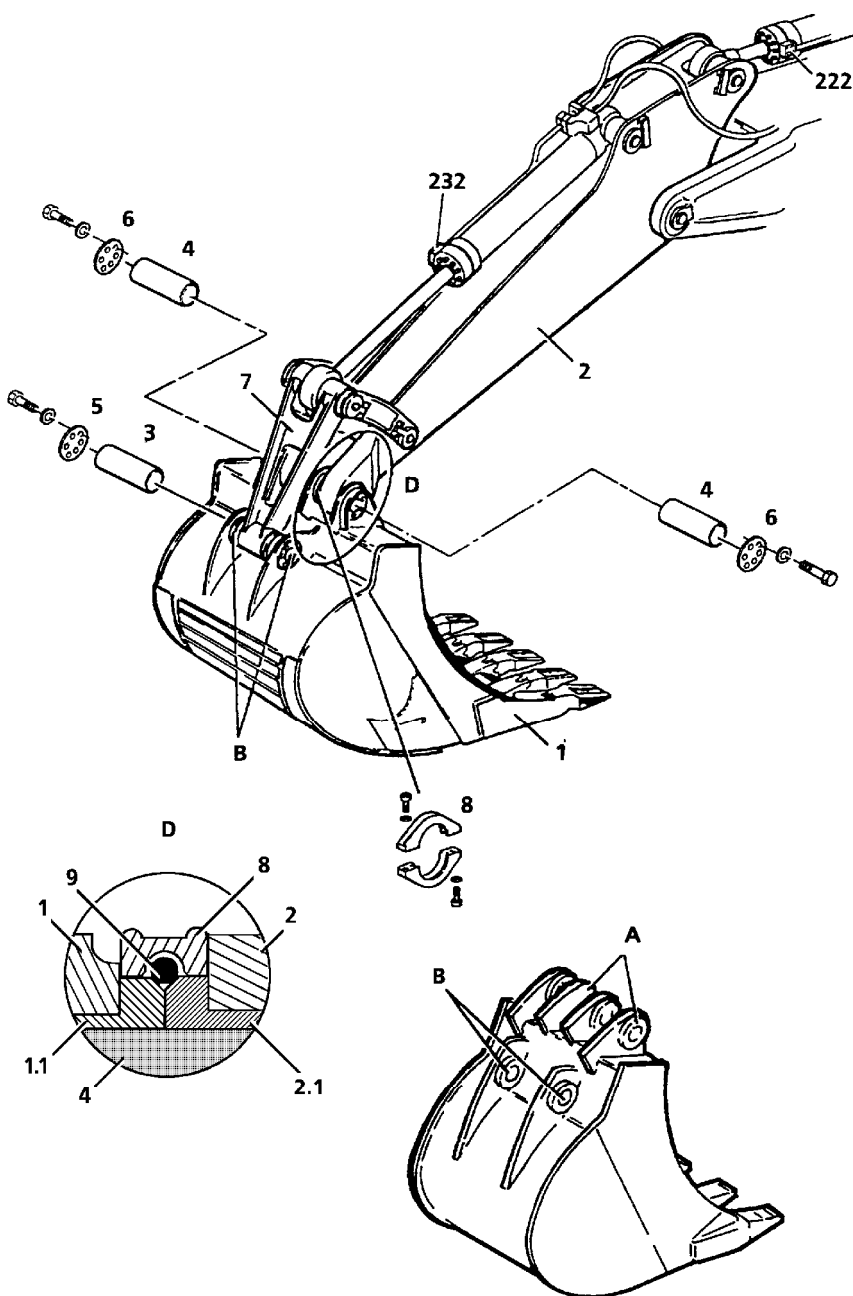

**Fig. 3-104** Attaching and dismantling the bucket

1	Digging bucket	7	Connecting link
2	Stick	8	Protection ring
1.1	Bushing	9	O-ring
2.1	Bushing	222	Restrictor check valve
3-4	Pin	232	Restrictor check valve
5-6	Cover		

The following is a description of how to attach and dismantle buckets with improved sealing.

## Dismounting a bucket

- ▶ Position the bucket to be attached in such a way that its entire lower part is laying on the ground.
- ▶ Remove the covers **5** and **6**.
- ▶ Remove the protection rings **8** of all the bearing points and draw the O-rings **9** up onto the bushing **1.1** on the bucket side.
- ▶ Drive out the pins **3** and **4**.
- ▶ If necessary, lift the attachment slightly to remove the pin **4**.
- ▶ Take off the O-rings **9** and if necessary replace them.

## Attaching a new bucket

- ▶ Position the bucket **1** so that the flat part of the bucket rests on the ground.
- ▶ Draw the O-rings **9** up onto the bushing **1.1** of the digging bucket, as well on bearings bucket to stick as on bearings bucket to connecting link **7**.
- ▶ Start the engine and move the attachments until the stick and bucket bore holes **A** align.
- ▶ Insert pin **4** and reinstall the covers **6** with O-rings.
- ▶ Slowly extend the stick cylinder until the bore of the connecting link **7** is exactly between bore holes **B**.
- ▶ Insert pin **3** and reinstall the covers **5** with O-rings.
- ▶ Slip the O-rings **9** laterally until they are in the grooves between bushings **1.1** and **2.1** (see detail **D**) and install the two piece protection rings **8**.
- ▶ Lubricate all greasing points of pins **3** and **4** directly or with the automatic grease system (if mounted) until clean grease comes out of the greasing points.



---


### Note!

After installation of a new digging bucket, the restrictor check valves **222** and **232** for stick, respectively bucket tilt cylinders must be eventually readjusted so to have the correct velocity of the working attachment (due to weight differences of the digging bucket). If necessary, consult a LIEBHERR mechanic.

In particular on machines, which are delivered without digging bucket or grapple, this restrictor check valves must be (if mounted) adjusted after installation of the digging tool, so to avoid uneven or jerky movements of the attachment parts.

---

### 3.5.5 Attaching and dismantling the grab on stick

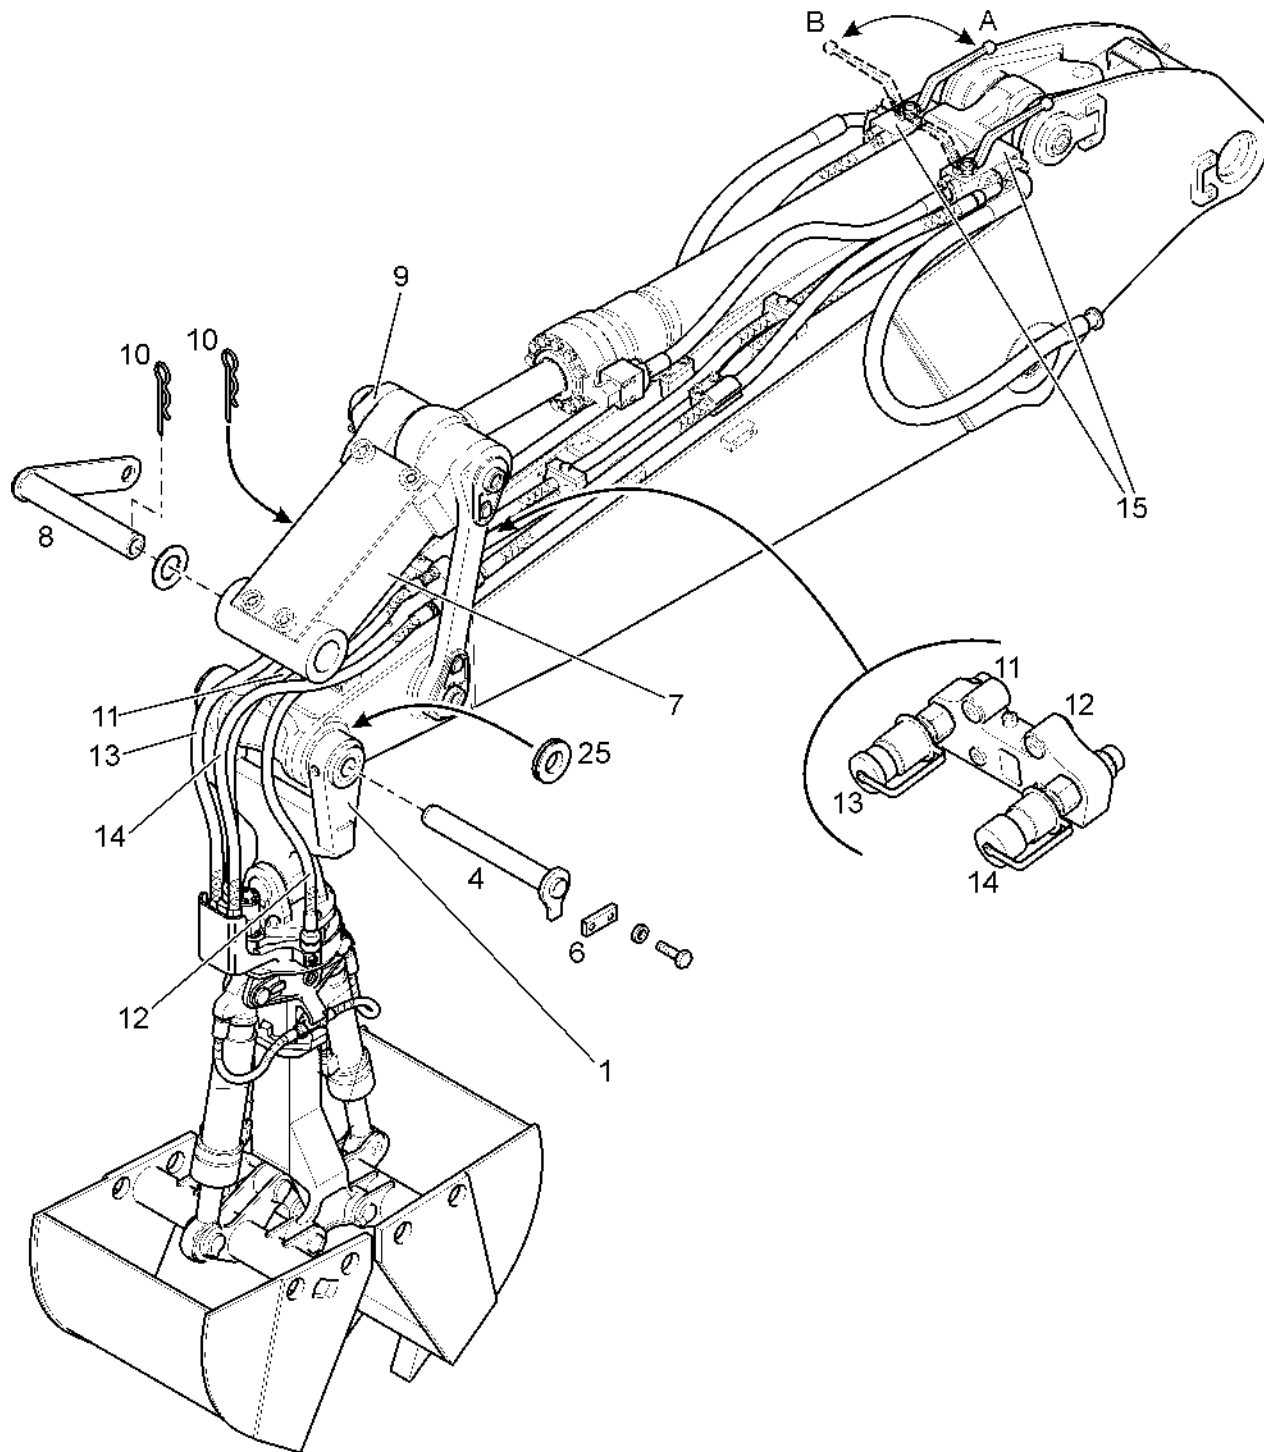

**Fig. 3-105** Attaching and dismantling the grab on the stick

1	Grab mounting	11	Hose
4	Pin	12	Hose
6	Locking plate	13	Hose
7	Connecting link	14	Hose
8	Carrier bracket	15	Valve blocks
9	Reversing lever	25	Pin bearing sealing
10	Cotter pin		

- Before attaching a clamshell bucket or grapple, ensure that the required hydraulic lines for operating the grab are built into the stick.
- Attaching and dismantling a grab should be carried out by two people.

**Danger!**

Risk of injury.

- ▶ Ensure that the machine's operator follows the signaller's hand signals when moving the attachment.

**Attaching the grab**

- ▶ If necessary, dismantle the bucket.
- ▶ Retract the bucket cylinder as far as the stop.
- ▶ Fix the connecting link **7** to the right reversing lever **9** with carrier bracket **8**. Secure with cotter pin **10**.
- ▶ Position the grapple with the shells fully opened.
- ▶ Move the equipment until the lower mount of the stick is between the bearing points of the grab mounting **1**.
- ▶ Guide in the pin **4** in its bore and push in the pin bearing sealings **25** complete with protection ring while pressing in the pin (see also the corresponding section on page "Installation of a digging tool").
- ▶ Secure the pin **4** with plate **6**.
- ▶ Connect the hydraulic hoses **11** and **12** for the shell cylinder to the hydraulic lines of the bucket cylinder circuit.
- ▶ For grapple with hydraulic rotator, hoses **13** and **14** must be connected to the hydraulic lines for added functions on the stick.

**Operating the grab**

Two hydraulic lines on the shovel arm are set in for operating either the tilting cylinder or the grab.

The lines are reversible via two valve blocks **15**:

- **A** - Tilting cylinder operation (for buckets)
- **B** - grab operation (for grab, scrap cutter etc.)
- ▶ Turn the lever of the valve blocks **15** in position **B** (Position **B**, Grab operation).

**Note**


If the machine is equipped with a hydraulic quick-change adapter and LIKUFIX, there is no need to switch between tilt cylinder operation and grab operation. There is no valve block **15**.

- ▶ Lubricate all greasing points of the pin **4** and of the grab directly or with the automatic grease system (if mounted) until clean grease comes out of the greasing points.
- ▶ Carry out all work movements several times without a load (open and close the shell or move the grab to the left and to the right) so that any air that may be present in the hydraulic circuits can escape.

## Dismounting the grab

- ▶ Set the grab down onto level ground with the shells fully opened.
- ▶ Turn off the engine and, with the ignition key in the contact position, push the right joystick briefly to the left and then to the right in order to remove the pressure in the hydraulic circuits.
- ▶ To relieve the grab's torsional mechanism, press the two push buttons in the left (or left and right – optional extras) joystick for "Turn grab".
- ▶ Turn the lever of each valve block **15** in position **A** (Position **A**, bucket operation) and push the right joystick briefly to the left and then to the right in order to remove the pressure in the hydraulic circuits.
- ▶ Push the safety lever up.
- ▶ Separate hydraulic hose **11**, hydraulic hose **12** and, if present, hydraulic hoses **13** and **14** from the pipes on the stick.
- ▶ Close open lines immediately to prevent any dirt entering.
- ▶ Support the grab so that it is stable.
- ▶ Remove the plate **6**. Drive out the pin **4** and remove the pin bearing sealings **25**. If necessary, start the engine and lift the attachment slightly to remove the pin **4**.

### 3.5.6 Attaching and dismantling the grab on stick

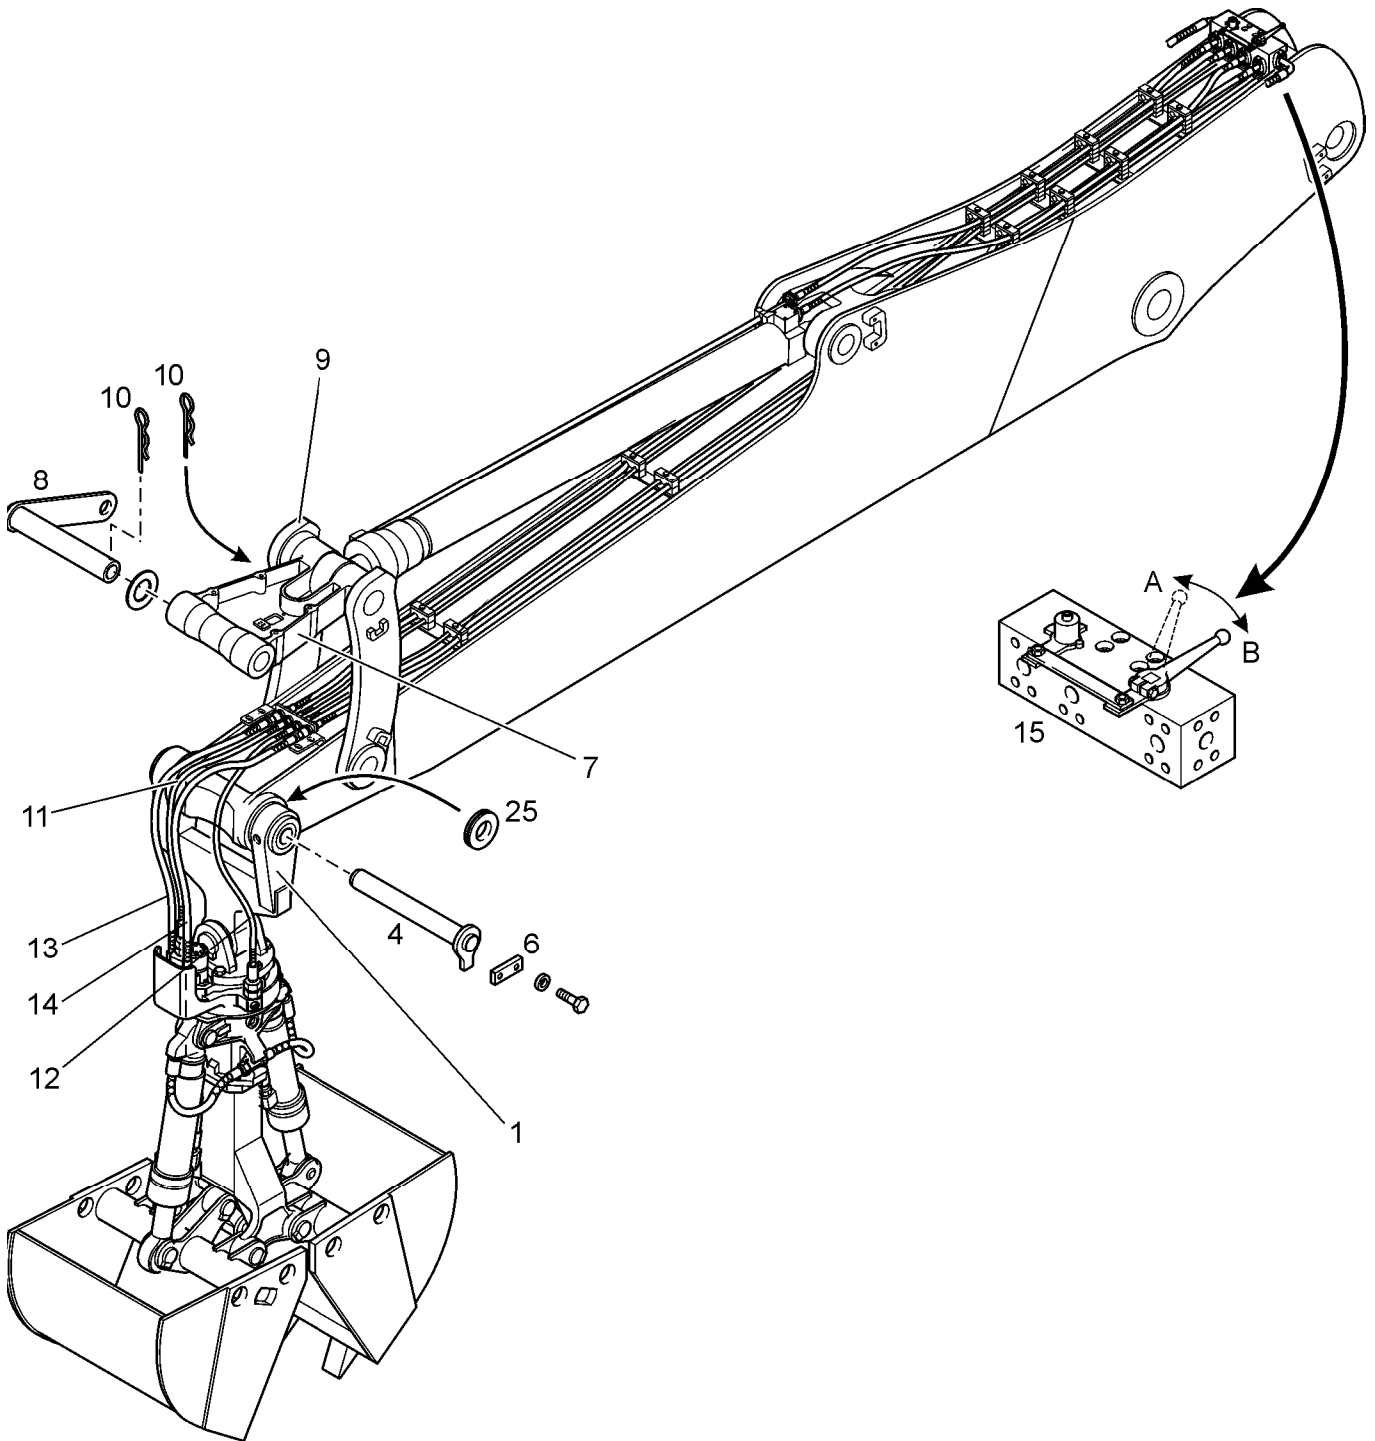

**Fig. 3-106** Attaching and dismantling the grab on the stick

- |           |                 |           |                     |
|-----------|-----------------|-----------|---------------------|
| <b>1</b>  | Grab mounting   | <b>11</b> | Hose                |
| <b>4</b>  | Pin             | <b>12</b> | Hose                |
| <b>6</b>  | Locking plate   | <b>13</b> | Hose                |
| <b>7</b>  | Connecting link | <b>14</b> | Hose                |
| <b>8</b>  | Carrier bracket | <b>15</b> | Valve block         |
| <b>9</b>  | Reversing lever | <b>25</b> | Pin bearing sealing |
| <b>10</b> | Cotter pin      |           |                     |

- ❑ Before attaching a clamshell bucket or grapple, ensure that the required hydraulic lines for operating the grab are built into the shovel arm.
- ❑ Attaching and dismantling a grab should be carried out by two people.

**Danger!**

Risk of injury.

- ▶ Ensure that the machine's operator follows the signaller's hand signals when moving the attachment.

**Attaching the grab**

- ▶ If necessary, dismantle the bucket.
- ▶ Retract the bucket cylinder as far as the stop.
- ▶ Fix the connecting link **7** to the right reversing lever **9** with carrier bracket **8**. Secure with cotter pin **10**.
- ▶ Position the grapple with the shells fully opened.
- ▶ Move the equipment until the lower mount of the stick is between the bearing points of the grab mounting **1**.
- ▶ Guide in the pin **4** in its bore and push in the pin bearing sealings **25** complete with protection ring while pressing in the pin (see also the corresponding section on page "Installation of a digging tool").
- ▶ Secure the pin **4** with plate **6**.
- ▶ Connect the hydraulic hoses **11** and **12** for the shell cylinder to the hydraulic lines of the bucket cylinder circuit.
- ▶ For grapple with hydraulic rotator, hoses **13** and **14** must be connected to the hydraulic lines for added functions on the stick.

**Operating the grab**

Two hydraulic lines on the shovel arm are set in for operating either the tilting cylinder or the grab.

The lines are reversible via a valve block **15**:

- **A** - Tilting cylinder operation (for buckets)
- **B** - grab operation (for grab, scrap cutter etc.)
- ▶ Turn the lever of the valve block **15** in position **B** (Position **B**, Grab operation).

**Note**

If the machine is equipped with a hydraulic quick-change adapter and **LIKUFIX**, there is no need to switch between tilt cylinder operation and grab operation. There is no valve block **15**.

- ▶ Lubricate all greasing points of the pin **4** and of the grab directly or with the automatic grease system (if mounted) until clean grease comes out of the greasing points.
- ▶ Carry out all work movements several times without a load (open and close the shell or move the grab to the left and to the right) so that any air that may be present in the hydraulic circuits can escape.

**Dismounting the grab**


- ▶ Set the grab down onto level ground with the shells fully opened.



- ▶ Turn off the engine and, with the ignition key in the contact position, push the right joystick briefly to the left and then to the right in order to remove the pressure in the hydraulic circuits.
- ▶ To relieve the grab's torsional mechanism, press the two push buttons in the left (or left and right – optional extras) joystick for "Turn grab".
- ▶ Turn the lever of each valve block **15** in position **A** (Position **A**, bucket operation) and push the right joystick briefly to the left and then to the right in order to remove the pressure in the hydraulic circuits.
- ▶ Push the safety lever up.
- ▶ Separate hydraulic hose **11**, hydraulic hose **12** and, if present, hydraulic hoses **13** and **14** from the pipes on the stick.
- ▶ Close open lines immediately to prevent any dirt entering.
- ▶ Support the grab so that it is stable.
- ▶ Remove the plate **6**. Drive out the pin **4** and remove the pin bearing sealings **25**. If necessary, start the engine and lift the attachment slightly to remove the pin **4**.

### 3.5.7 Attaching and dismantling the grab on the industrial stan-

## chion

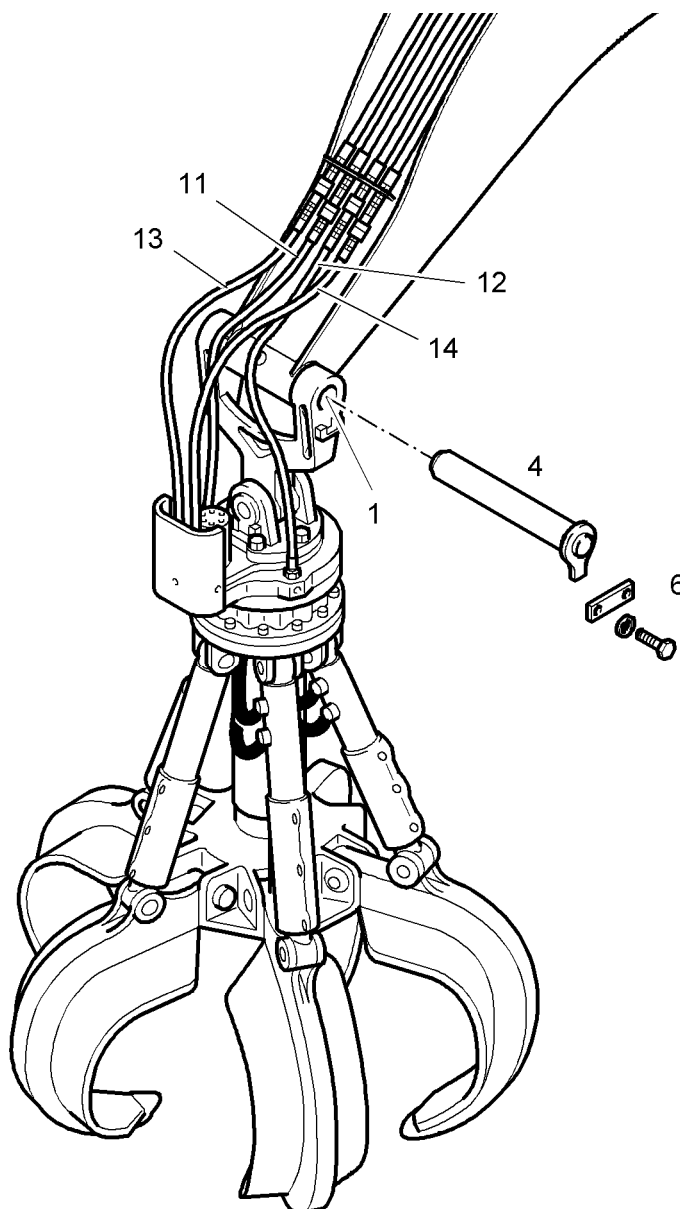

**Fig. 3-107** Attaching and dismantling the grab on the industrial stanchion

- Before attaching a clamshell bucket or grapple, ensure that the required hydraulic lines for operating the grab are attached to the industrial stanchion.
- Attaching and dismantling a grab should be carried out by two people.

**Danger!**

Risk of injury.

- ▶ Ensure that the machine's operator follows the signaller's hand signals when moving the equipment.

**Attaching the grab**

- ▶ Position the grab with the shell fully open.
- ▶ Move the equipment until the lower mount of the industrial stanchion is between the bearing points of the grab mounting **1**.

- ▶ Guide in bolt **4** and secure using disk **6**.
- ▶ Connect hydraulic hose **11** and hydraulic hose **12** for the shell cylinder supply to the pipes for the shovel tilting cylinder.
- ▶ For a grab with a hydraulic torsional mechanism, also connect hoses **13** and **14** to the pipes for this auxiliary device.


### Operating the grab

- ▶ Carry out all work movements several times without a load (open and close the shell or move the grab to the left and to the right) so that any air that may be present in the hydraulic circuits can escape.

### Dismounting the grab

- ▶ Set the grab down onto level ground with the shell fully opened.
- ▶ Turn off the engine and, with the ignition key in the contact position, push the right joystick (for Open and Close grab) briefly to the left and then to the right in order to remove the pressure in the hydraulic circuits.
- ▶ To relieve the grab's torsional mechanism, press the two pushbuttons in the left (or left and right – optional extras) joystick for "Turn grab".
- ▶ Separate hydraulic hose **11**, hydraulic hose **12** and, if present, hydraulic hoses **13** and **14** from the pipes on the shovel arm.
- ▶ Close open lines immediately to prevent any dirt entering.
- ▶ Support the grab so that it is stable.
- ▶ Unscrew disk **6** and knock bolt **4** carefully out. You may have to start the engine and raise the equipment slightly to do this.

### 3.5.8 Attaching and dismantling the stick to the boom

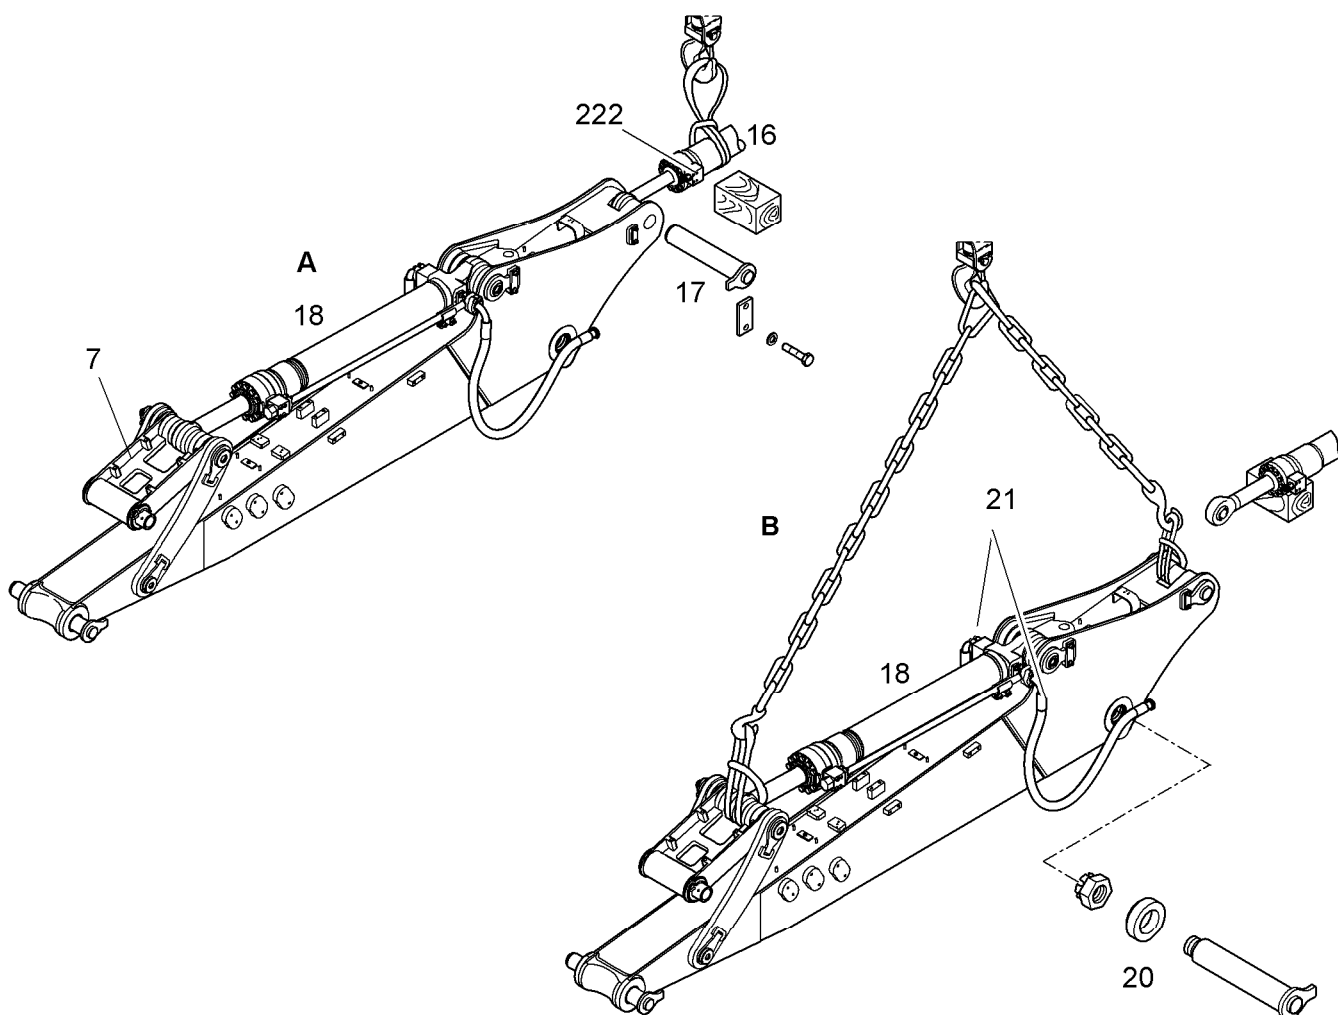

**Fig. 3-108** Attaching and dismantling the stick to the boom

7	Connecting link	20	Pin
16	Stick cylinder	21	Hoses
17	Pin	222	Restrictor check valve
18	Bucket cylinder		

#### Dismounting the stick

##### Figure A

- ▶ If necessary, remove the bucket.
- ▶ Retract the bucket and stick cylinder as far as the stop, position the attachment on the ground.
- ▶ If necessary, tie the connector bracket 7 to the bucket cylinder so it can not slip out.
- ▶ Turn the engine off.
- ▶ Release the pressure in bucket and stick cylinder circuit by turning the ignition

key to contact position, tilting the safety lever down, and moving the right joystick to the left and right, the left joystick forward and backward.

- ▶ Release the pressure in the hydraulic tank.
- ▶ Attach the lower part of the stick cylinder **16** to the lift with a strap.
- ▶ Position a wooden block under the stick cylinder, remove the plate of pin **17**, lightly lift the the cylinder, drive out the pin **17** and position the stick cylinder **16** on wooden blocks.

### Figure B

- ▶ Insert the pin **17** in the rear bearing of the stick and secure it with the plate, then attach the pin **17** to the lifting device with a strap.
- ▶ Attach the head of the bucket cylinder **18** (or to the hook of the bucket, if the stick is removed with the bucket in place), to the lift with a strap.
- ▶ Disconnect both hoses **21** from the tilt cylinder **18** and close them off to prevent contamination.
- ▶ Remove the cotter pin and the castle nut on pin **20** and drive the pin out. If necessary, start the engine and slightly lift the attachment to reduce the weight of the boom on pin **20**.
- ▶ Raise the stick (or the stick with the bucket) with a lift, pull the stick from the boom and position it on the ground, supported by wooden blocks and remove the lift.

## Attaching the stick (or stick with bucket)

### Figure B

- ▶ Insert the pin **17** in the rear bearing of the stick and secure it with the plate, then attach the pin **17** to the lifting device with a strap.
- ▶ Attach the top of the bucket cylinder **18** (or the hook of the bucket, if the stick is removed with the bucket in place), to the lifting device with a strap.
- ▶ Raise the stick (or the stick with the bucket) with a lift inside the bore holes of the boom so that the pin **20** can be inserted.
- ▶ Insert pin **20** and fix the castle nut and the cotter pin to the pin **20**.
- ▶ Remove the pin **17**.
- ▶ Reconnect both hoses **21** to the tilt cylinder **18**.

### Figure A

- ▶ Attach the lower part of the stick cylinder **16** to the lift.
- ▶ Slightly lift the stick cylinder and if necessary run engine to extend or retract cylinder so that cylinder head fits between the bore holes of the stick.
- ▶ Insert the pin **17** and secure it with the plate.
- ▶ If necessary, install the bucket.
- ▶ Lubricate all greasing points between stick and boom and between bucket and stick directly or with the automatic grease system (if mounted) until clean grease comes out of the greasing points.
- ▶ Lift the attachment and tilt the bucket out and in several times to release the air from the hydraulic system.

**Note**

After installation of a new stick and digging bucket combination, the restrictor check valve **222** for stick cylinder must be eventually readjusted so to have the correct velocity of the working attachment (due to weight difference of the attachment parts).


If necessary, consult a LIEBHERR mechanic.

### 3.5.9 Mechanical quick-change adapter (optional extra)

#### Safety information

- Ensure that nobody is located in the working area of the equipment when attaching and dismounting work tools. Move the work equipment as slowly as possible when attaching and dismounting a work tool. Get to know the mode of operation of the quick-change adapter before attaching or dismounting work tools.
- Always keep the work tool as close to the ground as possible when locking and unlocking to avoid creating conditions which may lead to danger.
- If necessary, use a platform to reach the locking pins and connections. Never stand on the work tool.
- Each time a work tool is changed, the machine's operator must ensure that the locking pin for the quick-change adapter inserts in the bore holes on the work tool which are designed for the purpose and that the work tool raises correctly. A direct visual check must be made to ensure that the work tool is correctly positioned.
- A working cycle should also be carried out with the work tool, where the work tool is only raised to the point where the correct position of, for example, the pin in the pin eye can be tested by tilting in and out.
- The correct positioning of the locking screw must be checked daily.
- The load carrying capacity of the quick-change adapter or the integrated lifting hook can exceed or fall short of the load carrying capacity of the carrier device. When operating, it should be ensured that the values provided in the load chart and the technical data for the carrier device are adhered to.

#### Overview

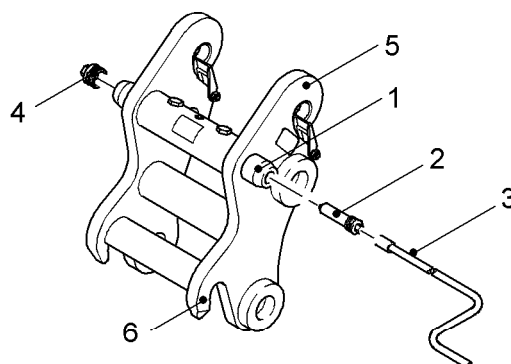


**Fig. 3-109** Mechanical quick-change adapter

- |   |                       |   |              |   |                            |
|---|-----------------------|---|--------------|---|----------------------------|
| 1 | Locking pin (removed) | 3 | Crank        | 5 | Lifting hook               |
| 2 | Locking screw         | 4 | Sealing plug | 6 | Take-up hook for work tool |

### Attaching the work tool

To move the equipment into position:

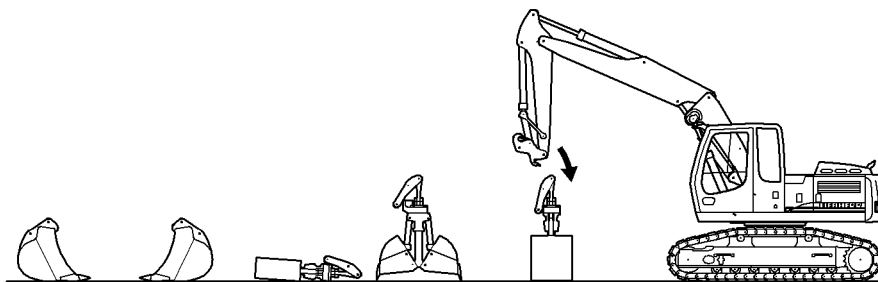

**Fig. 3-110** Positioning the equipment

- ❑ The equipment must be standing stable or lay loose on the ground.
- ▶ Move the stanchion and work tool into position.
- ▶ Insert the shovel tilting cylinder fully.


To unlock the quick-change adapter:



**Danger!**  
Risk of injury.


- ▶ Ensure that the work equipment cannot be moved by others when this action is being carried out.
- ▶ Approach the quick-change adapter from the side and unscrew the locking screw **2** using the crank **3** from the locking pin **1** (siehe Fig. 3-109).
- ▶ Insert the crank **3** in the locking pin **1** and turn to the left (anti-clockwise), until both locking pins **1** are inserted as far at the stop.

Taking up the work tool:

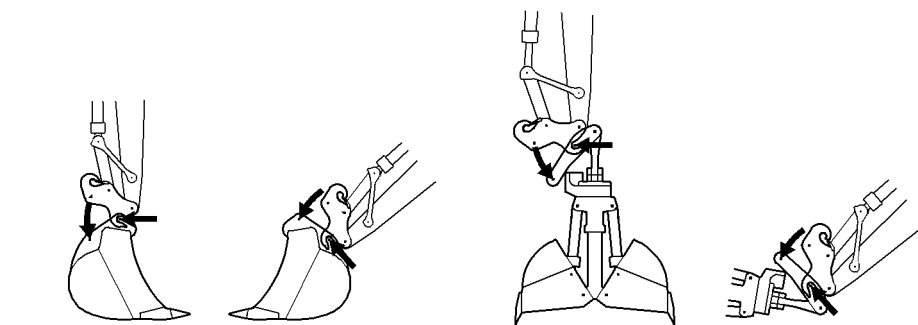

**Fig. 3-111** Taking up the work tool

- ▶ Move the quick-change adapter into a position that allows the work tool to be picked up using the take-up hook.
- ▶ Raise the work tool from the ground and extend the shovel tilting cylinder fully until the bearing panel for the work tool is laying on the quick-change adapter stop.
  - ↪ The bore holes of the work tool and the locking pins of the quick-change adapter must form a row.

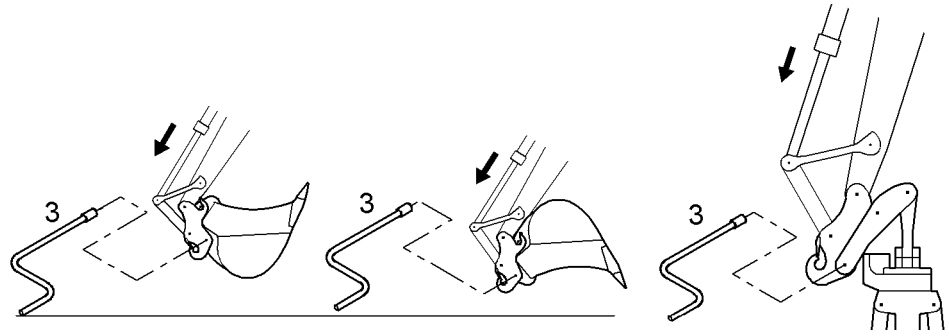**To lock the quick-change adapter:****Fig. 3-112** Locking the quick-change adapter**Danger!**

Before locking, there is no fixed connection between the work tool and the quick-change adapter. The work tool could under certain circumstances fall out and injure people.

- ▶ Approach the quick-change adapter with the utmost care.
- ▶ Push the safety lever up to secure the work equipment against unintentional movement.
  - ↳ No work movements can be carried out when pilot control devices, eg. the joystick or foot pedals, are operated.

- ▶ Insert the crank **3** in the locking pin **1** and turn to the right (clockwise), until both locking pins **1** are extended as far as the stop.
  - ↳ The work tool is bolted on when taking up normally.
- ▶ Screw the locking screw **2** into the locking pin.

**Danger!**

An incorrectly locked quick-change adapter could open when operating!

- ▶ Ensure that the locking pins are always locked by the sealing plug **4** on the one side and by the locking screw **2** on the other side.
- ▶ Check daily to ensure that the locking screw **2** is correctly positioned.

**Caution!**

Hydraulic lines are pressurized!

- ▶ Remove the pressure using the joystick before connecting the hydraulic lines (switch off the diesel engine, turn the ignition key into the contact position, operate the joystick).
- ▶ Connect hydraulic lines or electrical lines, if necessary (eg. when attaching a grab).



## Detaching a work tool

### To move the equipment into position:




#### Caution!

Hydraulic lines are pressurized!

- ▶ Remove the pressure using the joystick before removing the hydraulic lines (switch off the diesel engine, turn the ignition key into the contact position, operate the joystick).
- ▶ Disconnect hydraulic lines or electrical lines, if necessary (eg. when dismantling a grab).
- ▶ Extend the shovel tilting cylinder fully.

### To unlock the quick-change adapter:

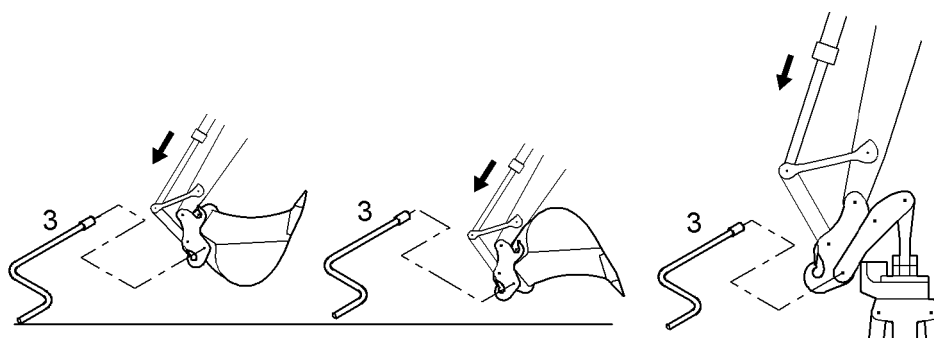

**Fig. 3-113** Unlocking the quick-change adapter




#### Danger!


Risk of injury.

Once unlocked, there is no fixed connection between the adapter and the work tool. The work tool could work itself out independently.

- ▶ Ensure that the work equipment cannot be moved by others when this action is being carried out.
- ▶ Always keep the work tool as close to the ground as possible when unlocking to avoid creating conditions which may lead to danger.
- ▶ Approach the quick-change adapter from the side and unscrew the locking screw **2** using the crank **3** from the locking pin **1**.
- ▶ Insert the crank **3** in the locking pin **1** and turn to the left (anti-clockwise), until both locking pins **1** are inserted as far at the stop.

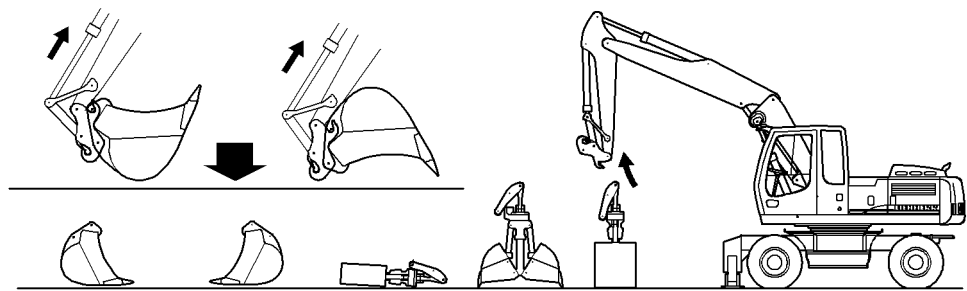**To put down the work tool:****Fig. 3-114** Putting down the work tool

- ▶ Slowly insert the shovel tilting cylinder and lay the work tool on the ground.
- ▶ The new work tool can be taken up.

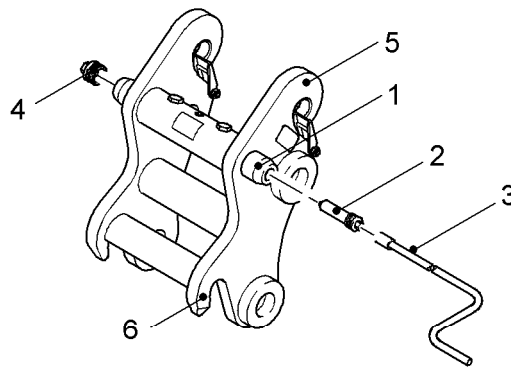**Using the quick-change adapter for hoisting work****Fig. 3-115** Mechanical quick-change adapter

The quick-change adapter has two integrated lifting hooks. The machine may only be used for hoisting work if the safety devices required for the purpose are present and functioning correctly (see chapter "Hoisting work" or "Overload warning device").

The maximum load carrying capacity of each individual lifting hook is given on the quick-change adapter. The load carrying capacity of the quick-change adapter or the integrated lifting hook can exceed or fall short of the load carrying capacity of the carrier device.

When operating, it should be ensured that the values for the carrier device / quick-change adapter given in the load chart and the technical data are adhered to.

Load hoisting work can be carried out with attached or dismantled work tools. With dismantled work tools, it is sensible to fully insert the locking pins when carrying out hoisting work. This prevents the load take-up device being turned round too strongly by the locking pins and damaged.

**Danger!**


- ▶ Never use the take-up hook **6** to fasten a load because there is no secure hold for the load take-up device, eg. rope or chains, in the take-up hook.
- ▶ Fasten the load on the lifting hook as described in the chapter "Hoisting work".

### 3.5.10 Hydraulic quick-change adapter (optional extra)

#### Safety information

- Ensure that nobody is standing in the working area of the equipment when attaching or dismantling work tools. Move the work equipment as slowly as possible when attaching and dismantling a work tool. Familiarize yourself with the mode of operation of the quick-change adapter without attached work tools if possible.
- The proper functioning of the quick-change adapter is monitored by a visual and acoustic warning device (buzzer and telltale light). The function of the warning device should be checked daily by operating the quick-change adapter.
- If the buzzer and telltale light are activated without a deliberate locking or unlocking procedure being carried out, stop all work at once. If the buzzer and telltale light are not activated while a deliberate locking or unlocking procedure is being carried out, stop all work at once. This could be caused by an unmonitored position change of the locking pins or by mechanical or hydraulic damage. A defect may also be present in the electrical system (eg. proximity switch or buzzer). Only resume working once defective parts have been repaired or replaced.
- The quick-change adapter unlocks as soon as the switch / button designed for the purpose is pressed. Always keep the work tool as close to the ground as possible when unlocking to avoid creating conditions which may lead to danger. Only activate the quick-change adapter to carry out a deliberate locking or unlocking procedure.
- Each time a work tool is changed, the machine's operator must ensure that the locking pins for the quick-change adapter insert in the bore holes on the work tool which are designed for the purpose and that the work tool raises correctly. A direct visual check must be made to ensure that the work tool is correctly positioned.
- A working cycle should also be carried out with the work tool, where the work tool is only raised to the point where the correct position of, for example, the pin in the pin eye can be tested by tilting in and out.
- The load carrying capacity of the quick-change adapter or the integrated lifting hook can exceed or fall short of the load carrying capacity of the carrier device. When operating, it should be ensured that the values provided in the load chart and the technical data for the carrier device are adhered to.

#### Overview

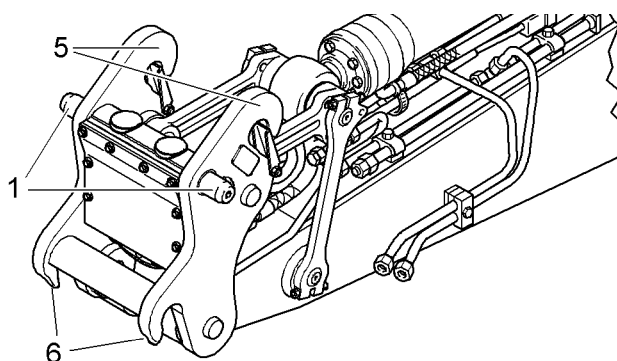

**Fig. 3-116** Hydraulic quick-change adapter

- |                         |                |                              |
|-------------------------|----------------|------------------------------|
| 1 Locking pin (removed) | 5 Lifting hook | 6 Take-up hook for work tool |
|-------------------------|----------------|------------------------------|

## Operating elements

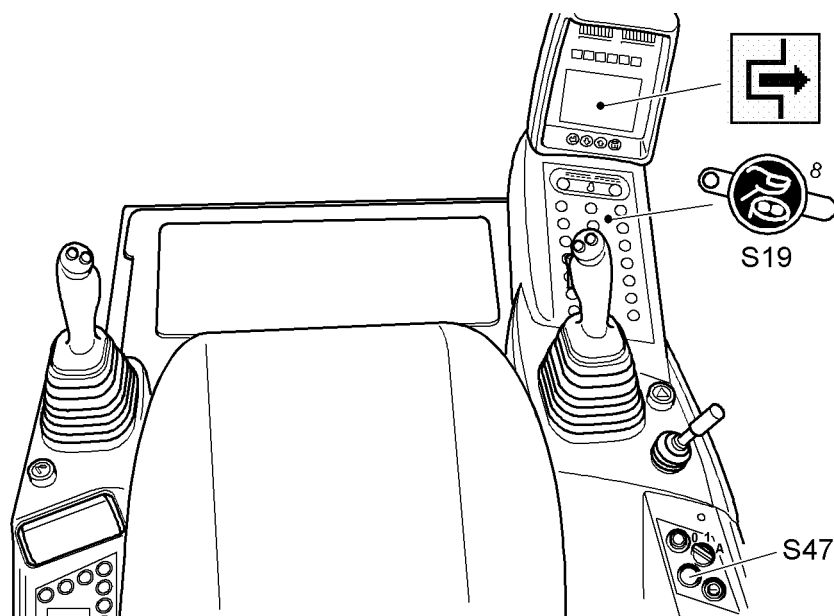


Fig. 3-117 Operating elements for the hydraulic quick-change adapter



### Switch S19

Use switch **S19** to activate the auxiliary hydraulic device for the grab torsional mechanism and quick-change adapter.

- ▶ Press switch.
  - ↔ Auxiliary device is activated.
  - ↔ LED in switch illuminates.
- ▶ Press switch again
  - ↔ Auxiliary device is deactivated.
  - ↔ LED in the switch goes out.




### Button S47 (2 versions)

#### Key switch S47 (old version):

Key switch **S47** has two positions:

- Position **0**: It is not possible to operate the locking pins.
- Position **1**: The key switch can be pressed down. This activates the quick-change adapter – it is possible to operate the locking pins.

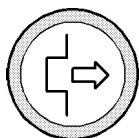

#### Key switch S47 (new version):

Pressing the button activates the quick-change adapter – it is possible to operate the locking pins.

### Pushbuttons L and R

Pushbutton **L** = remove locking pin (lock)  
 Pushbutton **R** = insert locking pin (unlock)

The pushbuttons are located on the right and/or left joystick (depending on the machine's equipment):

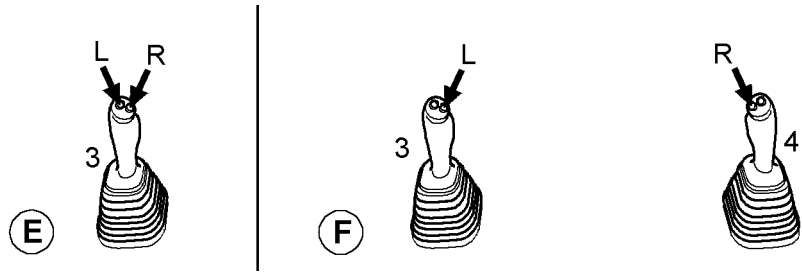


Fig. 3-118 Pushbutton on the joystick

E Operation with left joystick (standard)

F Operation with left and right joystick (optional extras)



**Bildschirmsymbol "Schnellwechsler"**

Das Symbol erscheint:

- während des Entriegelungsvorgangs oder
- bei zurückgefahrenen Verriegelungsbolzen.

**Two-hand operation**

The quick-change adapter is activated using two-hand operation. The locking pins can only be moved at first if button **S47** and one of the pushbuttons **L** or **R** are pressed.

The control has a hold function which allows both joysticks to be operated simultaneously when attaching and dismantling work tools. If one of the pushbuttons, **L** or **R** is continued to be pressed, button **S47** can be released and the direction of movement of the locking pins is retained.

If the direction of movement is to be changed, button **S47** and the relevant pushbutton **L** or **R** must be pressed.

**Attaching the work tool**

To move the equipment into position:

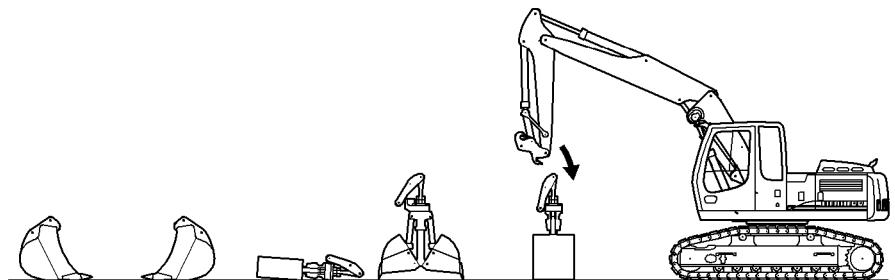


Fig. 3-119 Positioning the equipment

- The equipment must be standing stable or lay loose on the ground.
- ▶ Move the stanchion and work tool into position.
- ▶ Insert the shovel tilting cylinder fully.

To unlock the quick-change adapter:


- ▶ Press switch **S19**.



LFR/en/Edition: 5 / 2006

- ↵ Quick-change adapter is activated.
- ↵ LED in switch illuminates.
- ▶ Press and hold button **S47**.
  - ↵ Quick-change adapter is activated.
- ▶ Press and hold pushbutton **R** until the locking pins are fully inserted.
  - ↵ The buzzer sounds.
  - ↵ The symbol “Quick changer” appears on screen.
  - ↵ The quick-change adapter is unlocked.

#### Taking up the work tool:

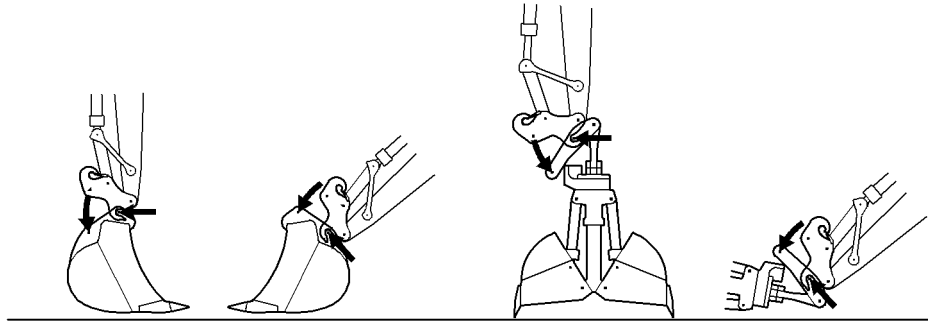

**Fig. 3-120** Taking up the work tool

- ▶ Move the quick-change adapter into a position that allows the work tool to be picked up using the take-up hook.
- ▶ Raise the work tool from the ground and extend the shovel tilting cylinder fully until the bearing panel for the work tool is laying on the quick-change adapter stop.
  - ↵ The bore holes of the work tool and the locking pins of the quick-change adapter must align.

#### To lock the quick-change adapter:



- ▶ Press switch **S19**.
  - ↵ Quick-change adapter is activated.
  - ↵ LED in switch illuminates.
- ▶ Press and hold button **S47**.
  - ↵ Quick-change adapter is activated.
- ▶ Press and hold pushbutton **L** until the locking pins are fully removed.
  - ↵ The buzzer goes off.
  - ↵ The symbol “Quick changer” disappears from the screen.
  - ↵ The quick-change adapter is locked.
  - ↵ The work tool is bolted on when taking up correctly.
- ▶ Release button **S47**.
- ▶ Press switch **S19**.
  - ↵ Quick-change adapter is deactivated.
  - ↵ LED in the switch goes out.



#### Caution!

Hydraulic lines are pressurized!

- ▶ Remove the pressure using the joystick before connecting the hydraulic lines (switch off the diesel engine, turn the ignition key into the contact position, operate the joystick).
- ▶ Connect hydraulic lines or electrical lines, if necessary. (eg. when attaching a

grab).

- ▶ A direct visual check must be made to ensure that the work tool is correctly positioned.

A “working cycle” should also be performed with the work tool. This means that the work tool should be raised before use to the point at which the correct positioning of, for example, the pin in the pin eye, can be checked by tilting in and out.



**Danger!**

The electronic monitoring system for the quick-change adapter displays defective functions. These could be caused by an unmonitored position change of the locking pins or by mechanical or hydraulic damage. A defect may also be present in the electrical system (eg. proximity switch or buzzer).

- ▶ If the buzzer and telltale light are activated without a deliberate locking or unlocking procedure being carried out, stop all work at once.
- ▶ If the buzzer and telltale light are not activated while a deliberate locking or unlocking procedure is being carried out, stop all work at once.
- ▶ Only resume working once defective parts have been repaired or replaced.

- ▶ Performing the working cycle
- ▶ Before starting to use the work tool (eg. grab, ditcher bucket), the special installation information in the chapter “Attaching and dismantling equipment parts” is also to be noted.

**Detaching a work tool**

**To move the equipment into position:**



**AchtCaution!**

Hydraulic lines are pressurized!

- ▶ Remove the pressure using the joystick before removing the hydraulic lines (switch off the diesel engine, turn the ignition key into the contact position, operate the joystick).

- ▶ Disconnect hydraulic lines or electrical lines, if necessary (eg. when dismantling a grab).
- ▶ Extend the shovel tilting cylinder fully.

**To unlock the quick-change adapter:**



**Danger!**

Risk of injury!

Once unlocked, there is no fixed connection between the adapter and the work tool. The work tool could work itself out independently.

- ▶ Always keep the work tool as close to the ground as possible when unlocking to avoid creating conditions which may lead to danger.




- ▶ Press switch **S19**.
  - ↙ Quick-change adapter is activated.
  - ↙ LED in switch illuminates.
- ▶ Press and hold button **S47**.
  - ↙ Quick-change adapter is activated.

LFR/en/Edition: 5 / 2006

- ▶ Press and hold pushbutton **R** until the locking pins are fully inserted.
  - ↪ The buzzer sounds.
  - ↪ The symbol “Quick changer” appears on screen.
  - ↪ The quick-change adapter is unlocked.


#### To put down the work tool:

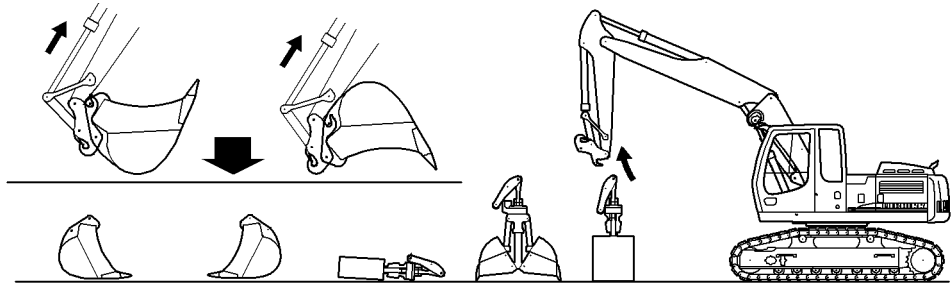

**Fig. 3-121** Putting down the work tool

- ▶ Slowly insert the shovel tilting cylinder and lay the work tool on the ground.
- ▶ The new work tool can be taken up.

#### Using the quick-change adapter for lifting work

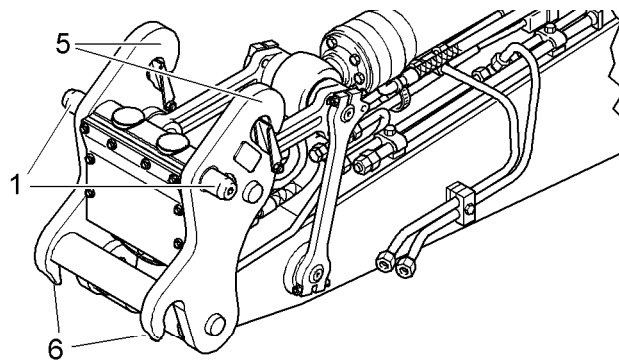

**Fig. 3-122** Hydraulic quick-change adapter

The quick-change adapter has two integrated lifting hooks. The machine may only be used for hoisting work if the safety devices required for the purpose are present and functioning correctly (see chapter “Hoisting work” or “Overload warning device”).

The maximum load carrying capacity of each individual lifting hook is given on the quick-change adapter. The load carrying capacity of the quick-change adapter or the integrated lifting hook can exceed or fall short of the load carrying capacity of the carrier device.

When operating, it should be ensured that the values for the carrier device / quick-change adapter given in the load chart and the technical data are adhered to.

Load hoisting work can be carried out with attached or dismantled work tools. With dismantled work tools, it is sensible to fully insert the locking pins when carrying out hoisting work. This prevents the load take-up device being turned round too strongly by the locking pins and damaged.



**Danger!**

- ▶ Never use the take-up hook **6** to fasten a load because there is no secure hold for the load take-up device, eg. rope or chains, in the take-up hook.
- ▶ Before using for hoisting work, deactivate the quick-change adapter.
  - ↖ LED in switch **S19** has gone out.
  - ↖ Release button **S47**.
  - ↖

**To cancel the buzzer (warning tone)**

The symbol "Quick changer" on screen and the buzzer (warning tone) indicate that the quick-change adapter is not locked or is incorrectly locked.

After putting down the work tool, the buzzer (warning tone) continues to sound if the locking pins are not removed.

When the overload warning device is switched on, the warning tone for the quick-change adapter can be cancelled.

If no new work tool is to be taken up, it is sensible to switch off the warning tone so avoid constant noise disturbance. Also, another buzzer (overload warning device) can be heard more easily.




- ▶ Press switch **S349**.
  - ↖ The buzzer will switch off.
  - ↖ The symbol "Quick changer" on screen will continue to be displayed.
  - ↖ The acoustic warning device will only activate automatically once the locking pins have been removed again.
- ▶ To reactivate the warning tone for the quick-change adapter, remove the locking pins fully once until the "Quick changer" symbol goes out on screen.
  - ↖ The buzzer (warning tone) for monitoring the quick-change adapter is reactivated.

**3.5.11 LIKUFIX – hydraulic coupling system (optional extra)**

LIKUFIX enables automatic coupling of hydraulic lines in connection with the hydraulic quick-change adapter. The machine operator does not have to connect or separate hydraulic lines for work tools himself.

## Overview

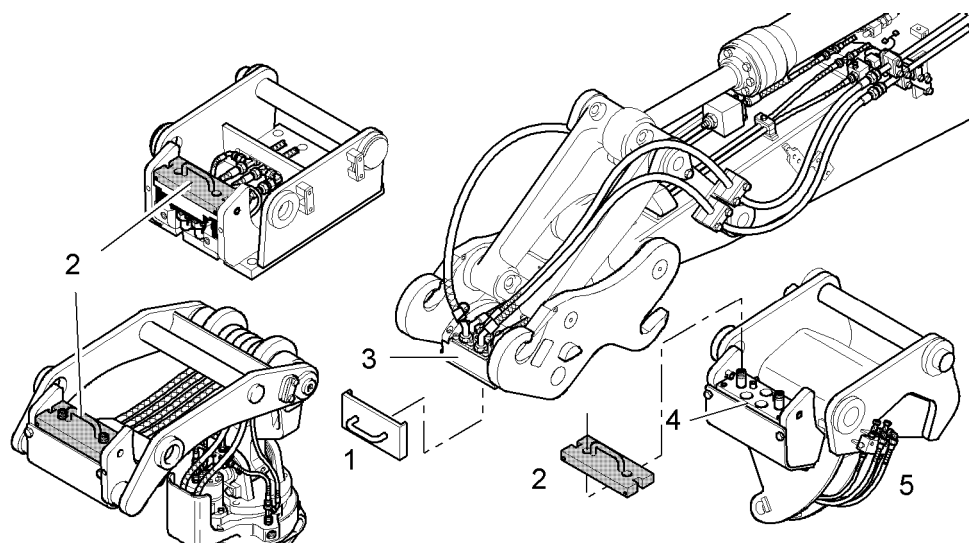


**Fig. 3-123** LIKUFIX

- |  |   |
|--|---|
| 1 Protective cover on quick-change adapter           | 4 LIKUFIX hydraulic coupling on work tool     |
| 2 Protective covering on work tool                   | 5 Alternative hydraulic coupling on work tool |
| 3 LIKUFIX hydraulic coupling on quick-change adapter |   |

## Attaching and dismantling work tools

Attaching and dismantling is carried out as described in the chapter “Hydraulic quick-change adapter”.

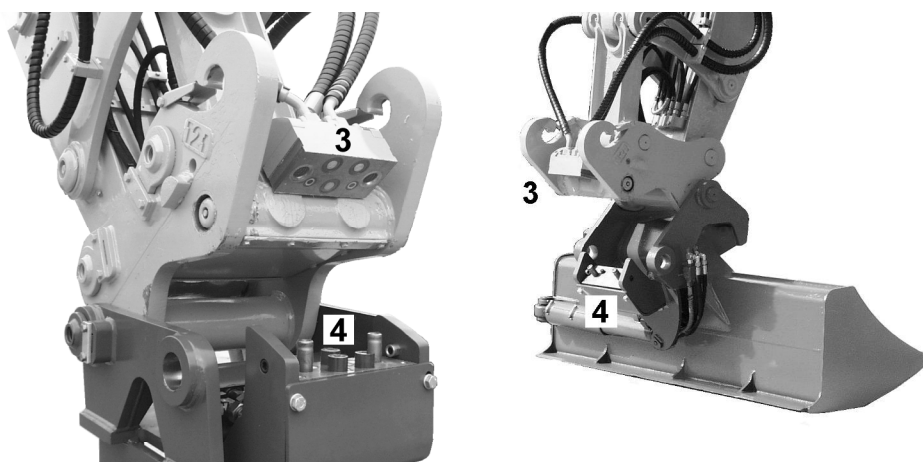

**Fig. 3-124** Connecting LIKUFIX


Please also note:

- ▶ Before attaching, remove the protective coverings on the quick-change adapter 1 and the work tool 2.
- ▶ Always keep hydraulic couplings 3 and 4 clean.
- ▶ Perform a visual check for cleanliness before attaching. If necessary, clean all coupling parts and the sealing surfaces with a clean, oil-soaked cloth.

- ▶ Connect or separate the hydraulic coupling slowly as with any change of work tool.
- ▶ When attaching the quick-change adapter, tilt until the coupling disks are connected as a result of the self weight of the work tool.
- ▶ Remove the locking pins.
- ▶ If the disks do not connect as a result of self weight, foreign matter (such as stones) may be the cause. In this case, clean all coupling parts to prevent damage occurring when connecting.
- ▶ Oil quantity and pressure must be adapted to suit the work device concerned.
- ▶ When the work is completed, and particularly before transportation, put the protective coverings **1** and **2** back on.

### Attaching LIKUFIX work tools to a quick-change adapter without LIKUFIX

It is possible to attach a work tool with a LIKUFIX hydraulic coupling to a machine with a quick-change adapter (mechanical or hydraulic) at any time.

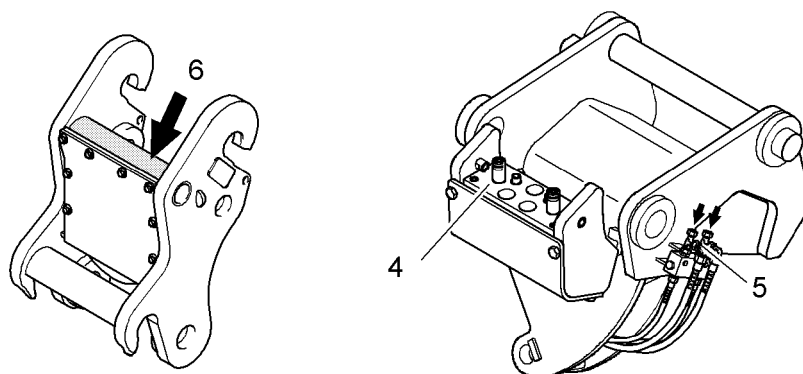

**Fig. 3-125** LIKUFIX work tool on quick-change adapter without LIKUFIX



#### Caution!

The LIKUFIX hydraulic coupling could be damaged.

- ▶ Do not use a quick-change adapter with a reinforcement kit since the reinforced steel part **6** could damage the LIKUFIX hydraulic coupling on the work tool.
- ▶ In this case, ensure that you have the quick-change adapter reworked at the LIEBHERR customer service centre.

For attachment without LIKUFIX hydraulic coupling, LIEBHERR work tools usually have an alternative connection option.

Example:

On the ditcher bucket, hydraulic lines are either connected using LIKUFIX **4** or using an auxiliary hydraulic connection **5**.

## 3.6 General working methods

### 3.6.1 Minimum impact working methods for your machine

To increase the service life of the machine and avoid unnecessary damage and the resulting repairs, please note the following points:

- Do not stop the rotary motion of the upper carriage when slewing into a ditch by stopping the equipment on the walls of the ditch.
- Using the machine for applications where the equipment is knocked against the material to be removed, in the longitudinal direction too, is not permitted. Repeatedly hitting the work equipment against rock or other hard material will damage steel parts and machine components.
- With specific combinations of boom, stick and work tool, the work tool could hit or break through into the cab. This could damage the cab and injure the machine's operator.
- Do not attach buckets which are too big or side cutters when using the machine in rocky material. This will extend the work cycles and could result in damage to the bucket and other machine components.
- Please contact your LIEBHERR contractual partner if special teeth are required for heavy or special applications.
- Operating the drag bearing to bore into material is not permitted.
- Do not raise the machine when working. If this should occur, slowly lower the machine to the ground.
- Do not permit the machine to lower quickly and do not intercept the falling movement using the hydraulics, since this could result in damage to the machine.


### 3.6.2 Preparatory activities



#### **Danger!**

Risk of fatal injury and damage to the machine when working.

- ▶ Observe the safety information "Notes for safe working" at the start of these operating instructions.

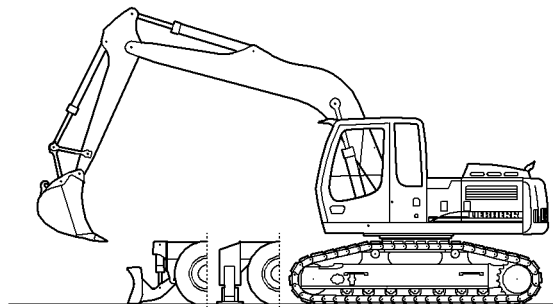


**Fig. 3-126** Working position – machine

- ▶ Position the machine so that the load or grab material can be taken up above the rigid axle or the leading wheel.

- ▶ For mobile devices, lower the support when possible and lock the full floating axle.



**Danger!**  
 Insufficient support and machine damage.  
 Do **not** use a skimming shield to support the machine.

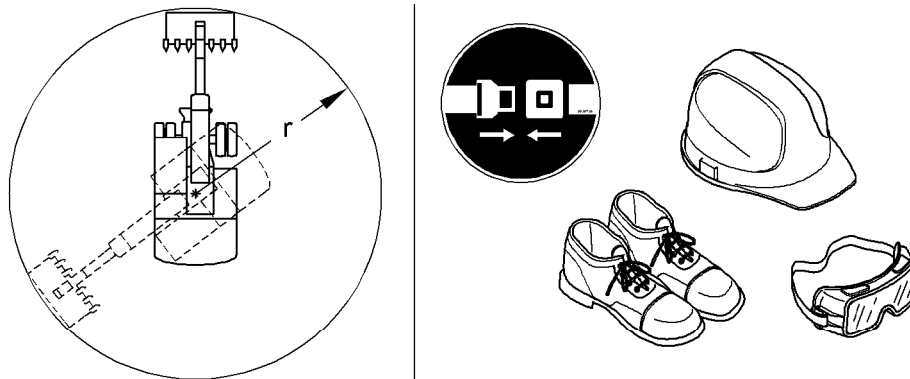

*Fig. 3-127 Safe working*



**Danger!**  
 Risk of fatal injury due to rotating the machine.

- ▶ Ensure that nobody stands within the danger area *r* of the machine.



**Caution!**  
 Risk of injury when working.

- ▶ Always wear safety shoes and, particularly when leaving the cab when demolition work is going on, a protective helmet and goggles.
- ▶ Always wear the seat belt.
- ▶ Use the horn to give a short warning signal before starting work.


### 3.6.3 Working with the backhoe bucket



**Danger!**  
 Risk of fatal injury and damage to the machine when moving the backhoe bucket.


- ▶ Ensure that the backhoe bucket is not slewed too close to the cab.
  - ↳ The backhoe bucket could damage the cab and injure the machine's operator.
- ▶ Ensure that nobody is standing within the danger area of the backhoe bucket.

The machine must be in the working position.

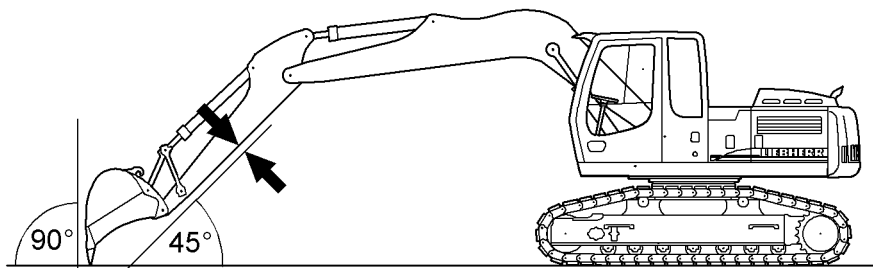


**Fig. 3-128** Aligning the stick and backhoe bucket

- ▶ Align the stick in such a way that its underside is at an angle of approx. 45° to the ground.
- ▶ Align the backhoe bucket in such a way that its ground side can enter the ground at an angle of approx. 90°.

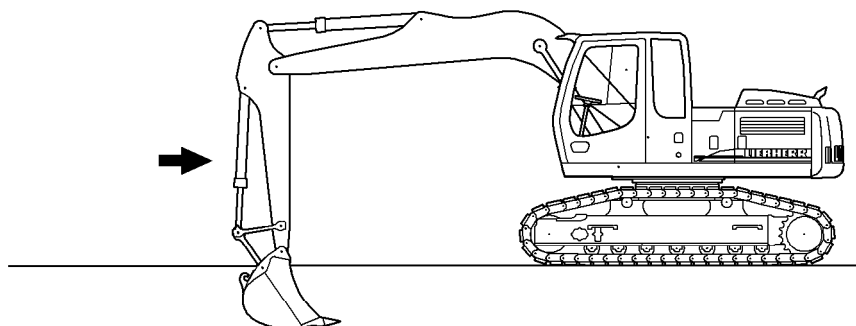

**Fig. 3-129** Taking up grab material

- ▶ To lift out the grab material, slowly and evenly slew in the stick and slowly and evenly slew in the backhoe bucket simultaneously.
- ▶ As soon as the stick is perpendicular to the ground, raise the boom slowly and evenly in addition to slewing in the stick and the backhoe bucket. Stopping suddenly will result in impact loads and vibrations.

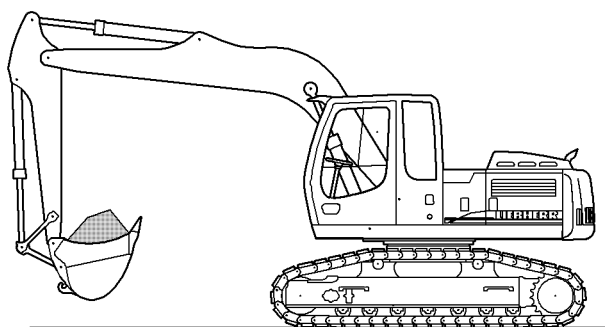

**Fig. 3-130** Raising grab material


- ▶ When the backhoe bucket is full or the stick can no longer be slewed in, raise the boom and backhoe bucket until the filled surface is parallel to the ground.

### 3.6.4 Loading the transport vehicle

**Danger!**

Risk of fatal injury due to falling grab material.

- ▶ Do not load the transport vehicle so high that the grab material could drop out over the walls of the vehicle.
- ▶ Ensure that nobody is standing in the danger area or in the transport vehicle when loading.
- ▶ Do not slew the equipment over the driver's cab.

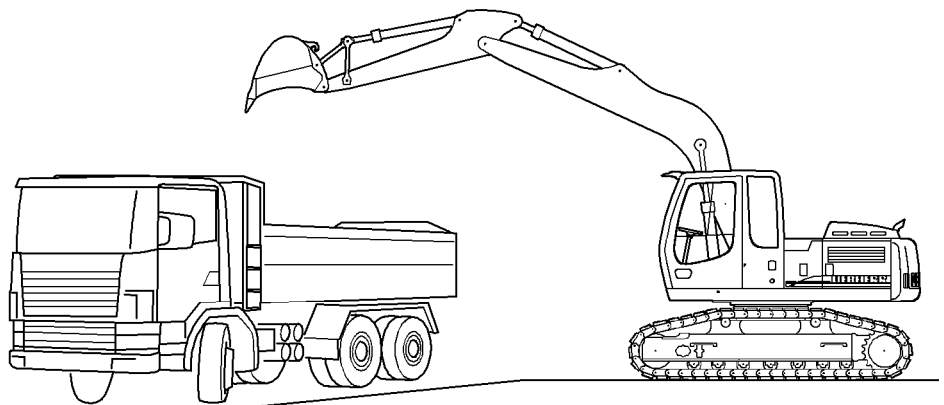

**Fig. 3-131** Emptying grab material

- If possible, the machine should stand higher than the transport vehicle to avoid having to lift the grab material unnecessarily.
- ▶ Stop the transport vehicle in a position that allows it to be loaded from the rear or the side.
- ▶ Slew the machine's equipment above the loading area of the transport vehicle.
- ▶ Distribute the grab material evenly over the loading area of the transport vehicle by slewing the backhoe bucket and the stick out, slewing the upper carriage and possibly also moving the boom.
- ▶ If the backhoe bucket is not sufficiently emptied or there is still grab material in the backhoe bucket, slew the backhoe bucket in and out several times to loosen the grab material.

### 3.6.5 Working with the clamshell bucket (construction equipment)




#### Danger!

Risk of fatal injury and damage to the machine due to a swinging shell type bucket.


- ▶ Ensure that the shell type bucket does not swing too close to the cab.
  - ↪ The shell type bucket could damage the cab when swinging and injure the machine's operator.
- ▶ Ensure that the shell type bucket does not swing towards anyone in the working area.
  - ↪ The shell type bucket could injure people standing in the vicinity when swinging.
- ▶ Move the joystick slowly and evenly to prevent the shell type bucket swinging.
- ▶ Hold the stick in such a way that the shell type bucket cannot swing towards the machine when driving or braking.
- ▶ Do not lift a load with the boom and stick extended too far and do not slew a heavy load too far to the left or right.
  - ↪ The stability of the machine could be affected.

- The machine must be in the working position.

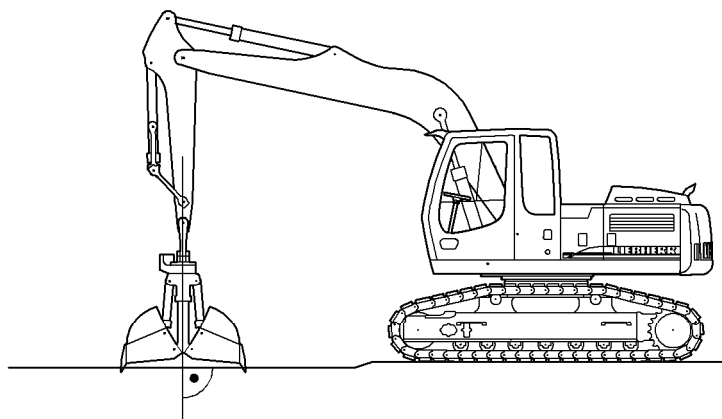

**Fig. 3-132** Straightening the stick

- ▶ Open the grab shells fully.
- ▶ Lower the stick perpendicular to the excavation area.

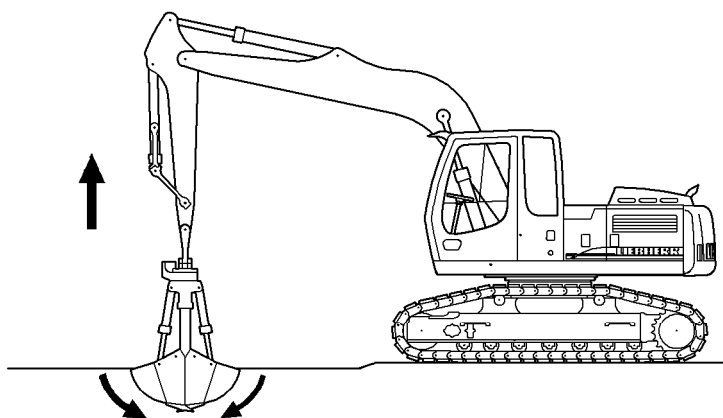

**Fig. 3-133** Closing the grab shells




- ▶ Close the grab shells.
- ▶ Raise the stick slightly when doing this in order to reduce ground pressure.




**Danger!**

The device could lift out when closing the shell type bucket.

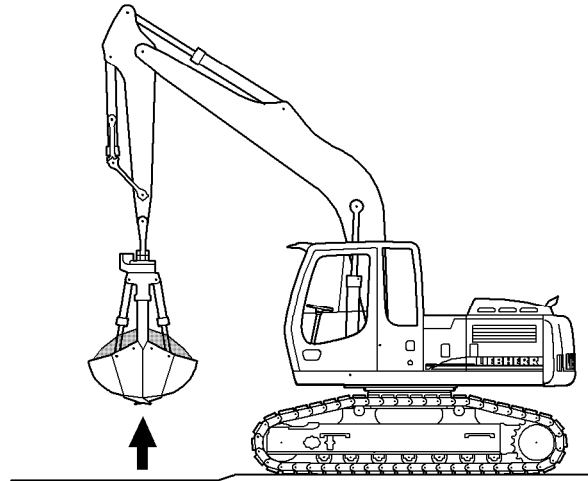

**Fig. 3-134** Raising grab material

- ▶ Close the grab shells fully.
- ▶ Raise the boom.
- ▶ Move the machine to the unloading area (eg. transport vehicle).

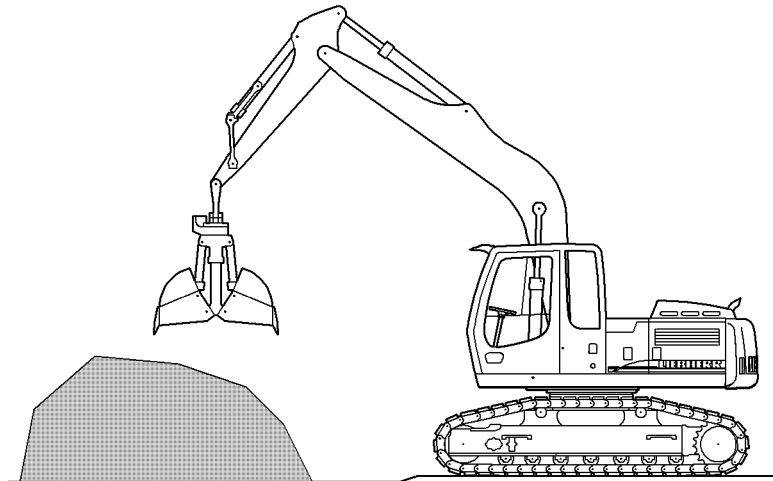

**Fig. 3-135** Emptying grab material

- ▶ Slew the stick out as far as possible to prevent any risk due to the swinging grab.
- ▶ Open the grab shells, empty the grab material.

### 3.6.6 Hoisting work

Hoisting work is understood as being lifting, transporting and unloading loads using a securing method (rope, chain etc.) and where personnel are required to assist in securing and unloading the load. This includes, for example, the lifting and unloading of pipes, shaft-top supporting rings or containers.



---

**Danger!**

The machine may only be operated for hoisting work if the prescribed safety devices are present and functioning correctly.

---

Machines used for hoisting work must be equipped with the following safety devices, in accordance with European standard EN 474-5:

- **Load take-up device for safe securing of a load (optional extra)**  
Safe take-up devices include for example lifting hooks which are mounted in place of the bucket. Lifting hooks can also be replaced with safety hooks welded to the bucket.
- **Overload warning device (optional extra)**  
The overload warning device must alert the machine operator visually or acoustically if the permitted load value according to the load chart has been reached or exceeded.
- **Line break fuse on the hydraulic jacks (optional extra)**  
The line break fuse must correspond with the requirements of ISO 8643.
- **Load chart inside the cab.**

**If the points referred to above are not or are only partially fulfilled, the machine may not be used for hoisting work.**


### 3.6.7 Working with the hydraulic hammer

Please also refer to the operating instructions provided by the manufacturer of the hydraulic hammer.

**Danger!**


The hydraulic hammer must be selected very carefully. Operating requires increased care and attention.

- ▶ Only use hydraulic hammers approved by LIEBHERR.
  - ↳ The use of a hydraulic hammer not approved by LIEBHERR could damage steel parts or other machine components.
- ▶ Only use the hydraulic hammer to break up rocks, concrete and other breakable objects.
- ▶ To avoid damaging the machine, do not try to break up rocks or concrete by moving the lever on the work equipment or by the hydraulic hammer.
- ▶ Do not use the drop power of the hydraulic hammer to break up rocks or other objects. Do not move objects with the hydraulic hammer. Do not lift the machine when using the hydraulic hammer.
  - ↳ This could damage both the hydraulic hammer and the machine.
- ▶ Do not use the hydraulic hammer to lift objects.
- ▶ Only use the hydraulic hammer in the machine's longitudinal direction.
- ▶ Do not operate the hydraulic hammer in the direction of the machine, since exploding rocks or concrete could damage the machine and / or injure the driver.
- ▶ Close all windows in the cab before working.

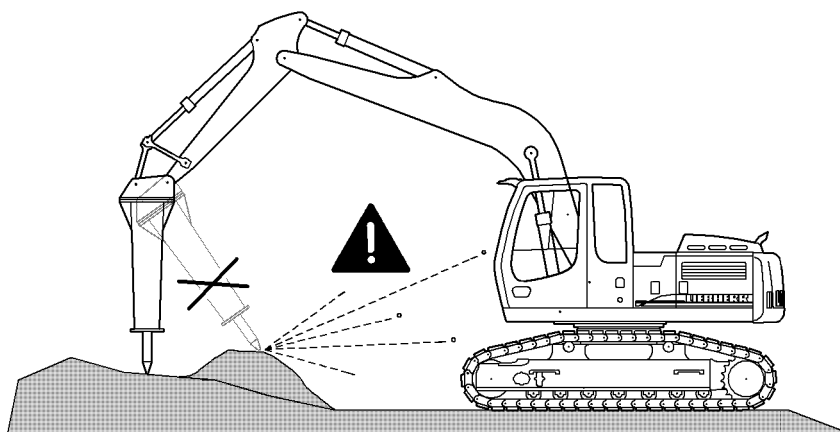

**Fig. 3-136** Hydraulic hammer

- The machine must be positioned in the working position on level, solid ground.
- The stick may not stand vertically.
- No cylinder may be fully taken in or extended.
- ▶ Do not operate the hydraulic hammer on the same spot continually or for longer than 15 seconds.
  - ↳ Overly continual operation of the hydraulic hammer leads to the hydraulic oil overheating unnecessarily.
- ▶ Change the position of the machine and resume hammering work.

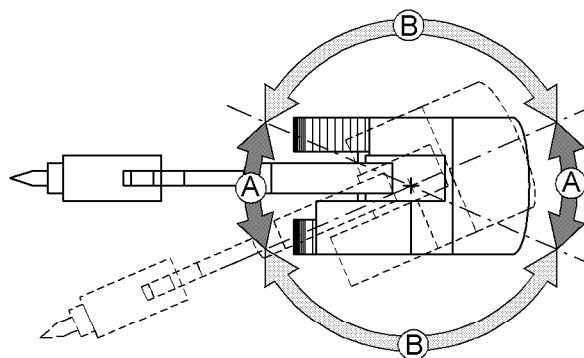

**Fig. 3-137** Permissible **A** and not permissible **B** work areas of the machine with hydraulic hammer




**Danger!**

The stability of the machine could be affected.  
When using a hydraulic hammer, only work with the machine in area **A**.


### 3.6.8 Working with the grapple (industrial equipment)

- The machine must be in the working position.

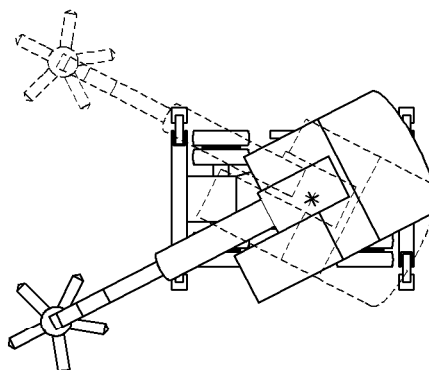

**Fig. 3-138** Taking up the load

- ▶ Take the load up above the supported corners of the machine to attain maximum stability.
- ▶ The maximum lifting capacity is attained when the load is taken up as close to the chassis as possible.

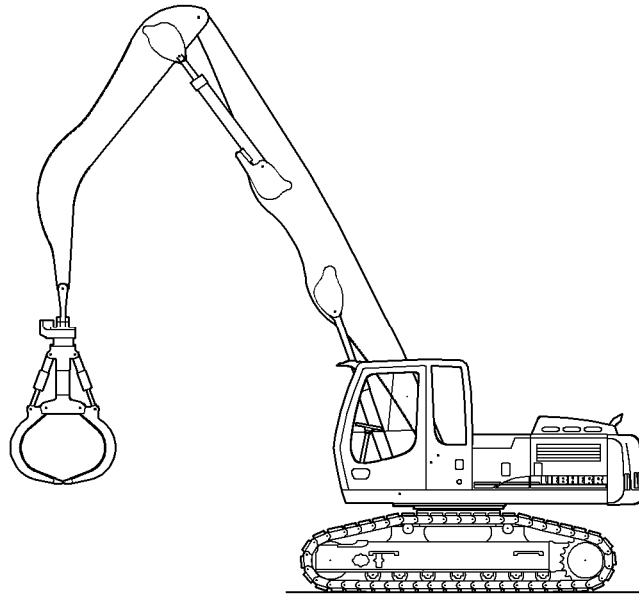

**Fig. 3-139** Transporting a load

- ▶ Transport the load close to the chassis, but with sufficient safety distance to the cab (swinging grab!) and as close to the ground as possible.




**Caution!**

Particularly when loading wood, it can be necessary when working with a grab to move with the working equipment raised and the load taken up. This will shift the centre of gravity of the machine upwards. The way the machine drives will be negatively affected because of this.

- ▶ Please note the safety information “Use for loading work” at the beginning of these operating instructions.

### 3.6.9 Skimming

Skimming work can either be carried out using the bucket or with a skimming shield (optional extra).

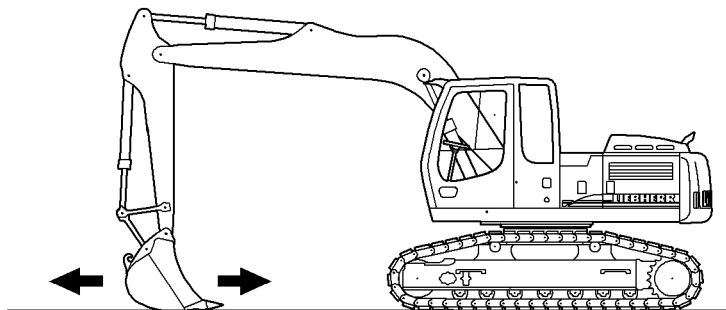

**Fig. 3-140** Skimming

- The machine must be in the working position.
- The support should be raised.

**Danger!**

Serious risk of injury when moving the machine.

- ▶ Ensure that nobody is standing within the working area of the machine.

**Caution!**

The machine could be damaged.

- ▶ Never move the machine while the work equipment is touching the ground.
- ▶ To skim with a backhoestick bucket, lay this on the ground (siehe Fig. 3-140) and move the stick slowly forwards and backwards. Move the boom steadily up and down while the stick is moving.
- ▶ If a skimming shield is present (optional extra), lower it to the ground and move slowly forwards and backwards with the machine.

## 3.7 Transport

### 3.7.1 Transporting the machine safely

- Due to transport restrictions, use only suitable means of transport and lifting devices with sufficient load-carrying capacity.
- Park the machine on a flat surface and wedge the crawler or wheels securely.
- If required, detach a part of the machine's working equipment during transportation.
- The ramp used to drive the machine up onto the flatbed trailer should not exceed an inclination of 30° and should have a wooden cover to prevent sliding back.
- The undercarriage chassis should be swept clean, i.e. before driving up the ramp, clean any snow, ice and mud from the crawler / wheels of the machine.
- Align the machine precisely with the loading ramp.
- Attach the hand lever for fine-tune driving (crawler excavator) onto the accelerator pedals.
- Ensure that a spotter gives the machine operator the required signal.
- Prepare the placing block to ensure against rolling back when the machine is driving up onto the flatbed.
- Tilt the equipment up and drive up the loading ramp. While doing this, always hold the equipment securely over the loading area, drive very carefully up the ramp and onto the transportation vehicle.
- Rotate the upper structure carefully to the rear and lower the equipment. Due to restrictions during transport on hoe equipment, tilt the arm in and dismantle the bucket during transportation.
- After loading the machine onto the flatbed trailer, the upper structure must be secured facing the chassis using the stop bolts (only A devices).
- Secure the chassis and the remaining individual parts using chains and blocks to prevent slipping.
- Before you leave the machine, reduce pressure on all pressure lines, remove the ignition key and tilt up the safety lever.
- Lock all cab and panel doors.

- Before transportation, find out all details about the route to be travelled, particularly as they relate to width, height and weight restrictions.
- Pay particular attention when driving under electrical lines and bridges and through tunnels.
- When unloading the machine, take the same amount of care as was taken when it was loaded. Remove all chains and blocks. Start the engine as per the operating instructions. Drive carefully off the trailer's loading area and down the ramp. Hold the working equipment as securely as possible over the ground while doing this. Have a spotter guide you.

### 3.7.2 Transporting the machine on a low loader



#### Hinweis

Respect the respective local legal circulation rules and safety instructions of profession corporations and in case adapt the machine, its transportation means, loading and fasten materials before into the local legal permitted state.

#### Preparatory activities

Before driving onto the low loader, the following arrangements must be made:



Fig. 3-141 Loading ramp

- The ramp inclination must be flatter than the machine's given hill climbing ability. Ramp inclination angle  $W \leq 30^\circ$ .
- Have the chocks ready.
- ▶ Lay down and secure wooden planks carefully on the steel surface of the ramp.
- ▶ Clean any ice, snow or mud off the crawlers before starting to drive up the ramp.

#### Loading the machine onto the low loader

To drive the machine up onto the low loader:

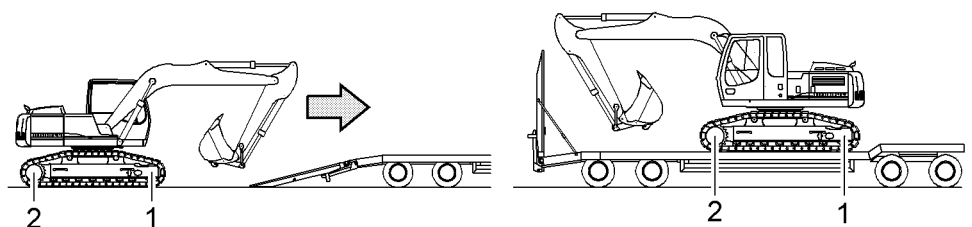


Fig. 3-142 Driving up onto the low loader

- 1 Leading wheel
- 2 Tumbler wheel

- ▶ The machine must be driven up on to the low loader with the leading wheel 1 leading. For this, the upper carriage must be rotated 180°.

**Danger!**


If the upper carriage is rotated 180° to the chassis, the driving and steering directions are reversed.

- ▶ Drive and steer with increased caution.
- 
- ▶ For sensitive driving, insert the lever which is found in the tool kit into the pedals for the drive units.
  - ▶ Align the machine precisely to the loading ramp.
  - ▶ Drive the machine onto the low loader.

**Note**

Have a signaller provide the necessary signs.

- ▶ Rotate the upper carriage carefully 180° (direction of travel over leading wheel) and lower the equipment (siehe Fig. 3-143).

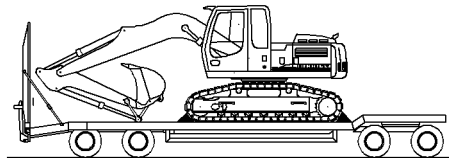


**Fig. 3-143** Transport position - machine

- ▶ Switch off the engine.
- ▶ Turn the ignition key to the contact position and relieve pressure lines by moving the joystick carefully several times.
- ▶ Remove the ignition key and push the safety lever up.
- ▶ Close and lock all doors, covers and panels on the machine.

**To secure the machine:**

The machine must be secured against slipping before starting the journey.

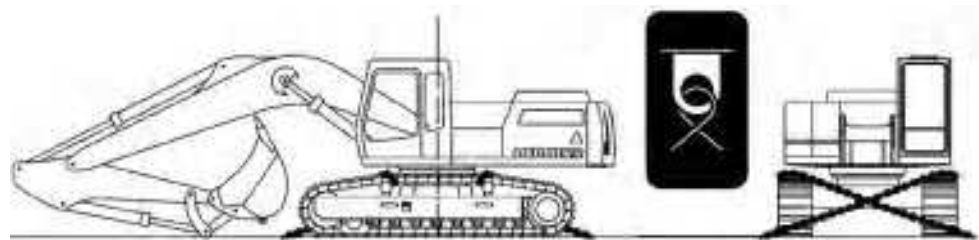

**Fig. 3-144** To secure the machine

**Danger!**

Serious accidents can happen if the machine is allowed to slip on the loading ramp.

- ▶ Secure the machine against slipping.
  - ▶ To do this, use chocks and a tension cable or tension chains.
- 
- ▶ Secure the machine at the points provided for the purpose using tension cables or tension chains (siehe Fig. 3-144). The loading points are identified on plate 45



on the chassis.

- ▶ Secure tension cables and tension chains on the low loader according to type.

## Transport route



### Danger!

Driving beneath obstacles which are too low can cause serious accidents.

- ▶ Drive under obstacles, particularly electrical lines, with increased caution.
- ▶ Find out about the route to be travelled before starting the journey.

### 3.7.3 Loading the machine with a crane

If the machine is to be loaded using a crane (eg. onto ships or rail freight cars), the type of suspension should be selected according to the equipment.




### Danger!

The load could slip or fall if incorrectly loaded.

- ▶ Only permit experienced personnel to secure loads and signal the crane driver.
- ▶ The signaller must position himself within the view of the operator or be in voice contact with him.
- ▶ Ensure that the length of the suspension gear is sufficient.

#### Loading a machine with a gooseneck boom:

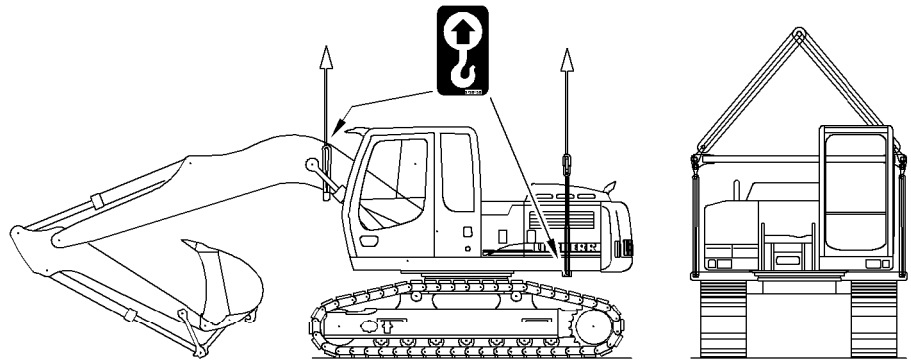


**Fig. 3-145** Suspending the machine with gooseneck boom

- Only use cargo handling gear which is sufficiently dimensioned or which has been specially developed by LIEBHERR for this purpose.
- ▶ Lower the equipment, draw in the stanchion and tip the bucket as far as the stop.
- ▶ Switch off the engine.
- ▶ Turn the ignition key to the contact position and relieve pressure lines by moving the joystick carefully several times.
- ▶ Remove the ignition key and push the safety lever up.
- ▶ Close and lock all doors, covers and panels on the machine.
- ▶ Attach the cargo handling gear to the points provided for the purpose.

**Danger!**

Standing under the raised machine is not permitted!

- ▶ Raise the machine carefully with the crane and load.
- ▶ When restarting the machine, proceed only in accordance with the operating and maintenance instructions.

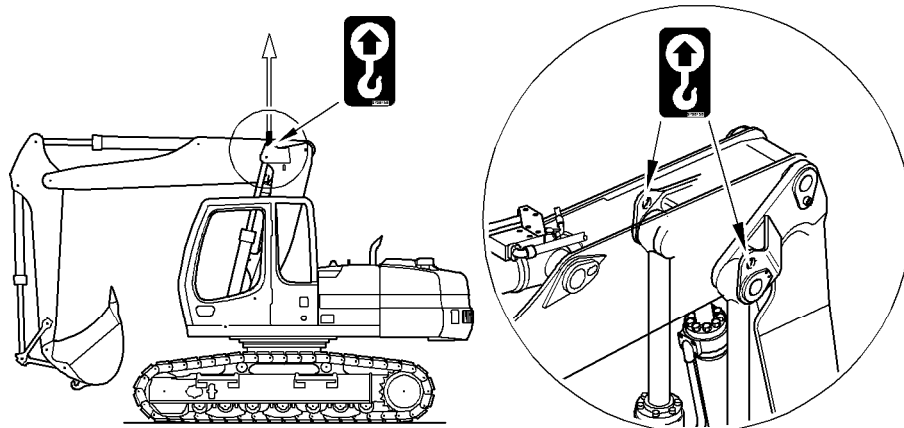**Loading a machine with adjusting equipment:**

**Fig. 3-146** Loading a machine with adjusting equipment

- Only use cargo handling gear which is sufficiently dimensioned or which has been specially developed by LIEBHERR for this purpose.
- ▶ Extend the hydraulic jack, draw the boom adjusting cylinder in and position the shovel arm more or less vertically.
- ▶ Switch off the engine.
- ▶ Turn the ignition key to the contact position and relieve pressure lines by moving the joystick carefully several times.
- ▶ Remove the ignition key and push the safety lever up.
- ▶ Close and lock all doors, covers and panels on the machine.
- ▶ Attach the cargo handling gear to the points provided for the purpose.
- The machine must be suspended in as horizontal a position as possible on the crane.

**Danger!**

Standing under the raised machine is not permitted!

- ▶ Raise the machine carefully with the crane and load.
- ▶ When restarting the machine, proceed only in accordance with the operating and maintenance instructions.

## 4 Malfunctions

### Warning messages and fault messages:

- Various faults are displayed on screen in the form of indicator lights or symbols (see chapter “Control and operating elements”).
- Warning functions can also be supported acoustically (buzzer).

### Identifying and rectifying faults and errors:

- Faults can very often be traced back to incorrect operating or maintenance of the machine.

**For each fault, therefore, read the relevant chapter in the operating instructions carefully once more.**

- Analyse the cause of the fault and rectify it immediately.
- Describe the fault and all accompanying circumstances as precisely as possible if you contact LIEBHERR customer service.

Precise information makes it possible to find and rectify the cause of the fault quickly. Additionally, therefore, precise information on the type and serial number of the machine is also required.

- Do not carry out any work which you have not been trained to do.



*Fig. 4-1 LIEBHERR service*

**If the cause of the fault cannot be recognised or rectified using the error codes and fault charts, please consult LIEBHERR customer service.**

## 4.1 Error code charts



### Danger!

When switching over to emergency operation, the speed can no longer be changed using the arrow keys on the monitoring screen. The servo control, parking brake and slewing gear brake can no longer be activated.

- ▶ Please also note the subheading “Emergency operations” in the chapter “Operating the machine” in this regard.

### 4.1.1 Sensors

Error code	Effect	Cause	Measure / remedy
E 001	Engine oil not being monitored.	Short circuit to earth	Check engine oil level, consult LIEBHERR customer service.
E 002		Short circuit + 24 V	
E 003		Cable break	
E 004	Coolant level not being monitored.	Short circuit to earth	Check coolant level, consult LIEBHERR customer service.
E 005		Short circuit + 24 V	
E 006		Cable break	
E 007	Coolant temperature not being monitored.	Short circuit to earth	Check coolant for contamination, consult LIEBHERR customer service.
E 008		Short circuit + 24 V	
E 009		Cable break	
E 010	Hydraulic oil level not being monitored.	Short circuit to earth	Check hydraulic oil level, consult LIEBHERR customer service.
E 011		Short circuit + 24 V	
E 012		Cable break	
E 013	Hydraulic oil temperature not being monitored.	Short circuit to earth	Check coolant for contamination, consult LIEBHERR customer service.
E 014		Short circuit + 24 V	
E 015		Cable break	
E 016	Transmission oil temperature not being monitored. (from R954)	Short circuit to earth	Check oil level,, consult LIEBHERR customer service.
E 017		Short circuit + 24 V	
E 018		Cable break	
E 019	Engine oil pressure not being monitored. (from R954)	Short circuit to earth	Check engine oil level, consult LIEBHERR customer service.
E 020		Short circuit + 24 V	
E 021		Cable break	
E 022	Diesel engine speed not being monitored, diesel engine speed cannot be adjusted using keypad, reduced hydraulic power.	Short circuit to earth	Switch to emergency control speed adjustment <b>S71</b> and <b>S72</b> and emergency operation work pumps <b>Y50</b> , consult LIEBHERR customer service.
E 023		Short circuit + 24 V	
E 024		Cable break	

### 4.1.2 Regulating circuit

Error code	Effect	Cause	Measure / remedy
E 027	Faulty hydraulic power	LR cable error at output stage for power control of hydraulic pump	Switch to emergency control speed adjustment <b>S71</b> and <b>S72</b> and emergency operation work pumps <b>Y50</b> , consult LIEBHERR customer service.
E 033	Maximum fan speed	EV 5 cable error at output stage of electric valve for hydraulic fan control	Consult LIEBHERR customer service.
E 036	Quantity reduction for hydraulic add-on units not being carried out.	EV 1 cable error at the output stage for quantity regulation of hydraulic pump	Do not operate quantity reduced add-on units, consult LIEBHERR customer service.
E 039	Quantity reduction for hydraulic add-on units not being carried out. (only A954, optional extra)	EV 2 cable error at the output stage for quantity regulation of second hydraulic pump	Do not operate quantity reduced add-on units, consult LIEBHERR customer service.
E 042	Operating temperature of hydraulic system not reached for positive short (only A900 – A924)	EV 3 cable error at output stage of fan shift valve	Consult LIEBHERR customer service.
E 046	Diesel engine speed cannot be adjusted using keypad	Diesel engine speed servomotor faulty.	Switch to emergency control speed adjustment <b>S71</b> and <b>S72</b> and emergency operation work pumps <b>Y50</b> , consult LIEBHERR customer service.

### 4.1.3 Stanchion cylinder shut-down (only for machines which handle material or for machines with optional extras)

Error code	Effect	Cause	Measure / remedy
E 049	Stanchion does not move	Short circuit to earth	Plug in potentiometer, consult LIEBHERR customer service.
E 050		Short circuit + 24 V or cable break, potentiometer not plugged in	

### 4.1.4 Keypad

Error code	Effect	Cause	Measure / remedy
E 302	No entry possible using keypad	No coding plug	Consult LIEBHERR customer service.
E 303	Dieselmotordrehzahl kann nicht mehr über Tastatur verstellt werden, reduzierte hydraulische Leistung.	No CAN bus connection between keypad and bus arbiter board (message also appears if bus arbiter not operating, e.g. if no power supply is present).	Switch to emergency control speed adjustment <b>S71</b> and <b>S72</b> and emergency operation work pumps <b>Y50</b> , consult LIEBHERR customer service.
E 305	Malfunctions, e.g. slewing gear brake, servo control	No CAN bus connection between keypad and ESP01 board (message also appears if ESP01 not operating).	Switch to emergency switching of servo pressure circuits <b>S73</b> , consult LIEBHERR customer service.
E 306	Malfunctions, e.g. secondary valve, transmission shifting, add-on kits	No CAN bus connection between keypad and ESP02 board (message also appears if ESP02 not operating).	Consult LIEBHERR customer service.
E 307	Malfunctions (for add-on kits)	No CAN bus connection between keypad and ESP03 board (message also appears if ESP03 not operating).	Consult LIEBHERR customer service.

### 4.1.5 Display

Error code	Effect	Cause	Measure / remedy
E 308	No display or incorrect display on screen	No connection keypad / screen or keypad not operating	Consult LIEBHERR customer service.
E 309	No display or incorrect display on screen	Hardware / Software encoding incompatibility	Consult LIEBHERR customer service.

### 4.1.6 Coding error

Error code	Effect	Cause	Measure / remedy
E 319	Diesel engine speed cannot be adjusted using keypad, reduced hydraulic power.	Hardware coding not suited to software coding	Switch to emergency control speed adjustment <b>S71</b> and <b>S72</b> and emergency operation work pumps <b>Y50</b> , consult LIEBHERR customer service.
E 321		Keypad has not received a recognised machine type.	
E 322		Unknown hardware coding	

### 4.1.7 Other errors

Error code	Effect	Cause	Measure / remedy
E 437	Travel use cannot be recorded	Short circuit + 24 V	consult LIEBHERR customer service.
E 440		Short circuit to earth or cable break	
E 442	Automatic idling on left joystick does not function, ie. the engine remains at low speed.	Short circuit + 24 V	Deactivate automatic idling <b>S20</b> , consult LIEBHERR customer service.
E 443		Short circuit to earth or cable break	
E 445	Automatic idling on right joystick does not function, ie. the engine remains at low speed.	Short circuit + 24 V	Deactivate automatic idling <b>S20</b> , consult LIEBHERR customer service.
E 446		Short circuit to earth or cable break	
E 454	Rotation use cannot be recorded.	Short circuit + 24 V	consult LIEBHERR customer service.
E 455		Short circuit to earth or cable break	
E 456	Incorrect fuel gauge.	Short circuit + 24 V	Deactivate automatic idling <b>S20</b> , consult LIEBHERR customer service.
E 458		Short circuit to earth or cable break	




### 4.1.8 Error due to warning symbols in SY field

These error codes will not be displayed in the EC field of the operator's menu. They can only be read off the S-Exxx menu list.




Error code	Effect	Cause	Measure / remedy
E 501	H2 telltale light illuminates	Diesel engine pressure too low	See telltale light description.
E 502	Symbol appears	Coolant level low	See symbol description
E 503	Symbol appears	Coolant overheating	See symbol description
E 504	Symbol appears	Hydraulic oil level low	See symbol description
E 505	Symbol appears	Hydraulic oil overheating	See symbol description
E 506	Symbol appears	Transfer box oil temperature too high	See symbol description
E 511	Symbol appears	Overvoltage	See symbol description

## 4.2 Faults and remedies




### 4.2.1 Diesel engine and fuel system

 Fault / error	 Cause	 Solution
Diesel engine does not start	Fuel tank almost or completely empty	Fill tank and vent fuel system
	Low pressure in tank	Remove fuel filler cap
	Fuel filter dirty	Clean or change filter and vent fuel system, drain fuel / clean tank
	Outside temperature below 0 °C	For operation under specific climatic conditions, see operating instructions
	Starter motor not drawing through	Check line connections, overhaul starter motor
	Batteries have no power	Charge / replace
Engine starts but stops immediately after or runs irregularly	Fuel tank empty (low pressure in tank)	Fill tank and vent fuel system
	Fuel filter dirty	Clean or change filter and vent fuel system (tank)
	Particularly in winter: too viscous engine oil used	Use engine oil suitable for the outside temperature
	Dry-air filter dirty	Clean or change main filter element
	Air in fuel system	Vent fuel system
	Ventilation in fuel tank obstructed	Clean
	Fuel line bent	Check line and repair if required
Diesel engine emitting grey or black smoke	Dry-air filter dirty	Clean or change filter
Diesel engine continually emitting white smoke (steam)	Water in combustion chamber	Consult customer service
Diesel engine does not reach full speed	Speed adjustment not set to maximum value	Set speed adjustment to maximum value
	Injection system is set incorrectly	Consult customer service
	Dry-air filter dirty	Clean or replace filter
	Bad fuel supply	Clean or change fuel filter, check lines, drain water from tank
Diesel engine becomes too hot	Too little coolant	Fill coolant, check for leaks
	Water pump defective	Repair
	Thermostats do not work	Change thermostats
	Coolant contaminated	Clean coolant
Diesel engine has insufficient oil pressure <b>Note!</b> Switch off diesel engine immediately	Oil level too low	Correct oil level
	Oil pressure display faulty	Change oil pressure switch



 <b>Fault / error</b>	 <b>Cause</b>	 <b>Solution</b>
Diesel engine consumes too much oil	External leak on diesel engine	Retighten screws, replace seals if required
Oil in coolant or coolant in oil		Consult customer service
Unusual noise / sounddevelopment on exhaust side	Exhaust system leaking	Check exhaust system / repair

### 4.2.2 Hydraulic system

 <b>Fault / error</b>	 <b>Cause</b>	 <b>Solution</b>	
Unusual noise / sounddevelopment at hydraulic pumps <b>Note!</b> Switch off diesel engine immediately	Shutoff valve on hydraulic tank closed	Open stop cock	
	Hydraulic pumps taking in air	Check oil level in hydraulic tank, check intake lines for leaks	
Modes E and P showing lack of power	No power adjustment via proportional solenoid valve Y50	Unplug cable of Y50 connection, remove safety cotter pin, move lever to emergency setting	
Hydraulic oil temperature too high	Coolant contaminated	Clean coolant	
	Fan or fan control defective	Rectify error / consult customer service	
Hydraulic oil level too low	Oil loss	Repair leaks, exchange hoses, refill oil via return-line filter	
Cannot drive	Push the safety lever up	Push the safety lever down	
	No direction of travel preselected	Use drive selection switch in right joystick to determine direction of travel	
	Parking brake pressure switch defective	Consult customer service	
	Parking brake not released	Release parking brake using switch	
	Parking brake will not release despite switch being operated	Servo pressure present:	Operate emergency function Y6
		Servo pressure not present:	Consult customer service
Service brake engaged	Release service brake		
Slewing gear not functioning	No servo control	Push the safety lever down	
		Switch on servo control	
	Slewing gear brake activated	Push the safety lever down	
Release slewing gear brake			
No working movement	No servo control	Push the safety lever down	
		Switch on servo control	
	No servo pressure present	Consult customer service	
	No pump high pressure present	Consult customer service	

LFR/en/Edition: 5 / 2006

### 4.2.3 Transmission

<b>!</b> Fault / error	<b>?</b> Cause	<b>✓</b> Solution
Oil flowing out on track rollers, support rollers or leading wheel	Seal defective	Replace seal
Insufficient crawler tracking on leading wheel	Leading wheel tracking on track roller mounting has too much play	Adjust the leading wheel tracking play
Crawler jumps off or over	Crawler tension too low / crawler wheel worn	Adjust crawler tension
Correctly tensioned crawler losing tension quickly during use	Crawler tensioning cylinder defective	Check crawler tensioning cylinder, change if required or seal (only authorized specialist personnel)
Track roller or support roller sticking	Running gear extremely dirty	Clean running gear

### 4.2.4 Electrical system

<b>!</b> Fault / error	<b>?</b> Cause	<b>✓</b> Solution
Battery charge telltale light does not go out	Drive belt for alternator loose or torn	Tension or replace drive belt
	Alternator defective	Replace alternator
Batteries do not charge or charge poorly	Batteries defective	Replace batteries
	Battery connections dirty / oxidised	Clean battery connections
	Cable loose or damaged	Connect or replace cable
Telltale light or display instrument not functioning or functioning incorrectly	Bulb burnt out, display instrument defective	Replace defective part
Some or all functions on instrument panel drop out	Plug connector separated or damaged, earth lead interrupted, short circuit fuse defective	Mount plug connector correctly or change, rectify short circuit, replace fuse or activate overload cut-outs
Diesel speed adjustment via operating keypad (mode and arrow keys) not functioning	Automatic idling switch S20 is activated	Touch the joystick or deactivate automatic idling switch S20.
	Excavator speed adjustment electronics do not function	Switch the emergency function over from "AUTO" to "MANU" using switch S71 in the right control panel. Set speed using switch S72. Emergency function display appears on monitoring screen. Consult customer service.
	No signal emits from speed sensor B12	
Automatic idling not functioning, speed does not reduce	Permanent sensor signal	Consult customer service
	Switch S20 is deactivated	Activate switch S20
Servo control cannot be activated using switch	Excavator electrics faulty	Switch on emergency function using switch S73 in the right control panel Caution: Servo circuit and brake circuit can only be switched off using the safety lever. Keypad not functioning. Consult customer service.
Parking brake cannot be released using switch		
Slewing gear brake cannot be released using switch		

### 4.2.5 Heating/air-conditioning system

<b>!</b> Fault / error	<b>?</b> Cause	<b>✓</b> Solution
Heating not giving out warm air	Shutoff valves for coolant line on diesel engine closed	Open shutoff valve
	Engine not at operating temperature	Bring engine to operating temperature
Heating fan does not operate	No power supply	Check fuse and wiring / repair
	Fan motor defective	Change fan motor
Only low air flow in cab	Outside air filter / recirculated air filter dirty	Clean air intake opening, replace outside air filter
	Air vent closed	Open air vent

### 4.2.6 Work equipment

<b>!</b> Fault / error	<b>?</b> Cause	<b>✓</b> Solution
Cylinder stretches when loaded	Piston seal in cylinder defective	Overhaul cylinder
Bearing clearance too high on equipment	Bearing points worn out	Replace bearing parts
Grab / bucket does not move	Valve block on tilting cylinder incorrectly switched	Switch over valve block
Add-on unit cannot be turned / rotated / operated	Auxiliary function has not been released	Release auxiliary function using switch S19
	Lines are not connected	Connect lines

## 4.3 Fuses and relays

### 4.3.1 Fuse box E50

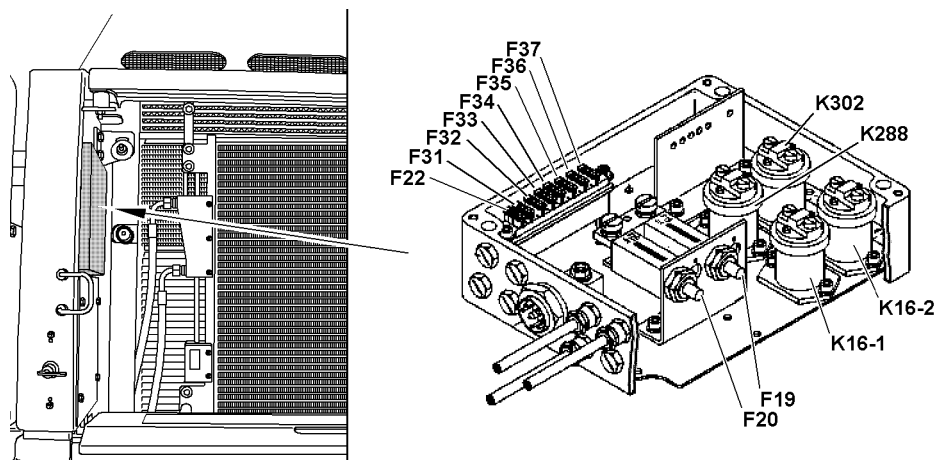


Fig. 4-2 Fuse box E50

Fuse box E50 is located behind the right side door, above the batteries.

<b>F19</b>	70 A	Preheating, injection solenoid valve, refuelling pump*
<b>F20</b>	50 A	Main fuse, shutoff solenoid
<b>F22</b>	7,5 A	Hazard warning system
<b>F31</b>	7,5 A	Heating and air conditioning system terminal 15
<b>F32</b>	15 A	Heating and air conditioning system terminal 30
<b>F33 à F37</b>	15 A	Relays for options
<b>K16-1</b>		Relay engine starter
<b>K16-2</b>		Relay shutoff solenoid
<b>K288</b>		Main relay terminal 15
<b>K302</b>		Preheating relay terminal 19

\* optional extra

### 4.3.2 ESP02 board

All other fuses are situated in the left control panel of the operator's standing position.




**Danger**

Incorrect or bypassed fuses do not offer the machine's operator or the electrical system the required degree of protection.

- ▶ Only use original fuses.
- ▶ Never bypass electrical fuses.

If required, order replacement fuses from LIEBHERR.

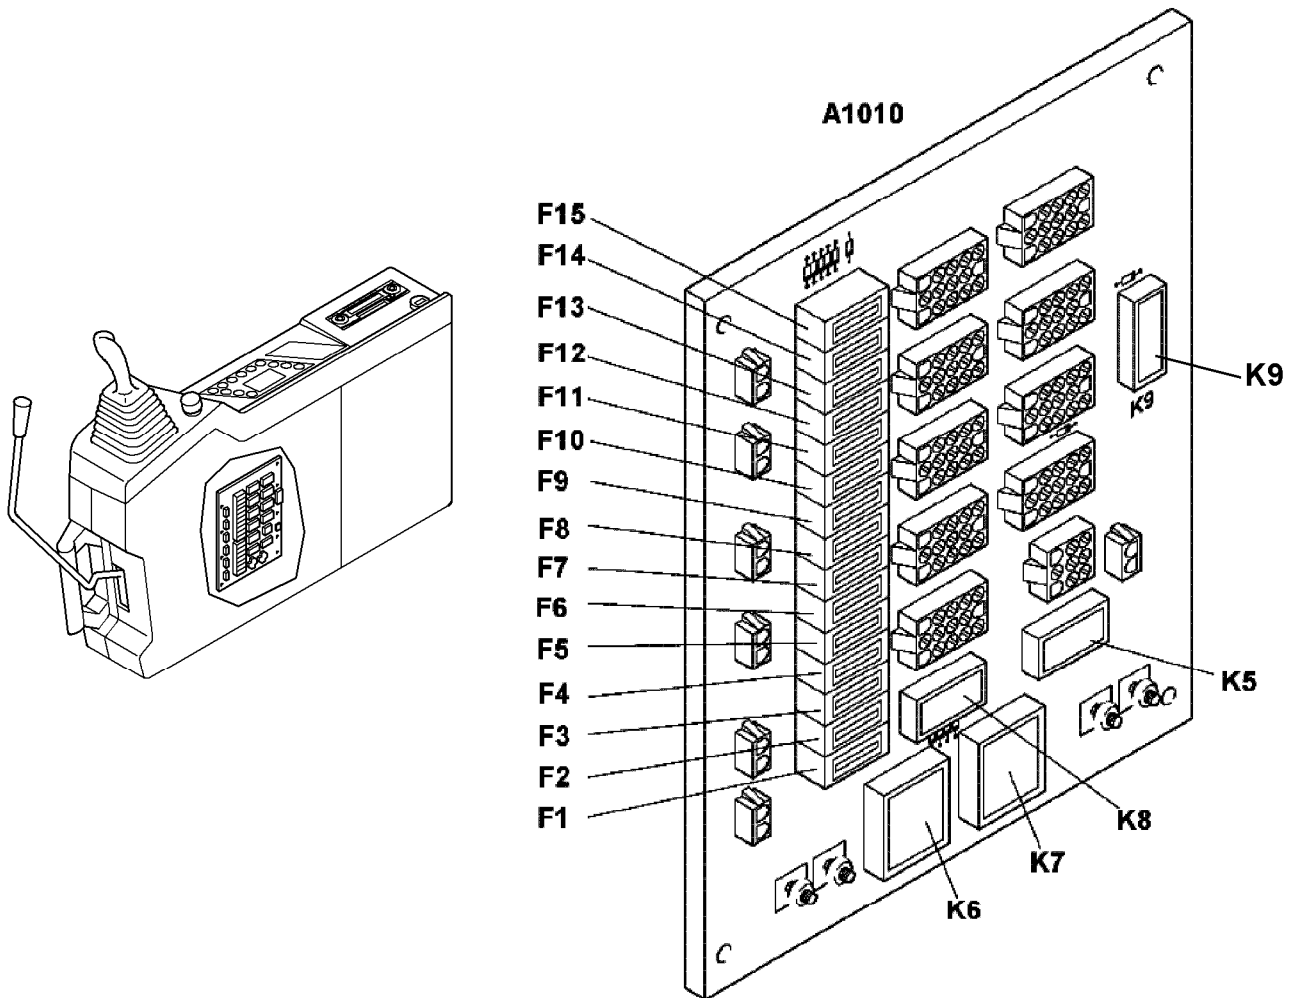

**Fig. 4-3** Fuses and relays, ESP02 board

<b>F1</b>	15 A	Reserve
<b>F2</b>	15 A	Reserve
<b>F3</b>	15 A	Reserve
<b>F4</b>	15 A	Windscreen washing system, windscreen wiper system, relay preheating terminal 19, grab disconnection*, slewing grab*, rotating beacon*, additional cab head light*
<b>F5</b>	7,5 A	Windscreen wiper motor
<b>F6</b>	7,5 A	Speed adjustment in "MANU" control
<b>F7</b>	7,5 A	Keyboard and display
<b>F8</b>	15 A	Safety lever, solenoid valve for servo control, slewing gear brake, fast drive
<b>F9</b>	15 A	Engine throttle control, Bus arbiter supply
<b>F10</b>	25 A	Working equipment light, travel head light left and right, additional headlights*
<b>F11</b>	15 A	Reserve
<b>F12</b>	15 A	Reserve
<b>F13</b>	7,5 A	Contact key, starting circuit, transformer, engine stop*, radio*, loudspeaker*
<b>F14</b>	15 A	Interior lighting, cigarette lighter, signal horn
<b>F15</b>	15 A	Reserve
<b>K5 / A1010</b>		Relay engine stop
<b>K6</b>		Horn relay
<b>K7</b>		Relay, additional headlights, cab roof
<b>K8</b>		Floating position relay
<b>K9</b>		Solenoid valve relay LR, EV1, EV2, EV3

\* Optional extras

### 4.3.3 A1001 board

All other fuses are situated in the left control panel of the operator's standing position.




**Danger**

Incorrect or bypassed fuses do not offer the machine's operator or the electrical system the required degree of protection.

- ▶ Only use original fuses.
- ▶ Never bypass electrical fuses.

If required, order replacement fuses from LIEBHERR

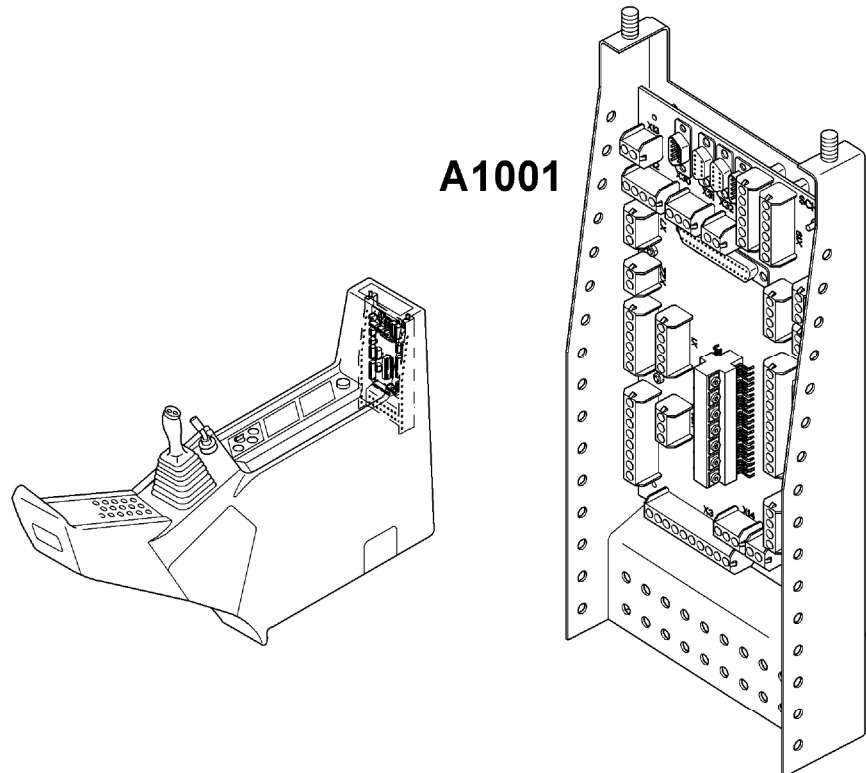

**Fig. 4-4** Fuses and relays, A1001 board

<b>K1</b>	Relay windscreen wiper system
<b>K2</b>	Additional relay
<b>K3</b>	Additional relay
<b>K4</b>	Additional relay
<b>K5 / A1001</b>	Relais emergency control

# 5 Maintenance

## 5.1 Servicing the machine safely

### 5.1.1 General safety instructions

- Maintenance and repair work may only be carried out by specially trained personnel.
- Observe statutory timetables or intervals given in the operating instructions for repeat tests / inspections. It is imperative that a suitably equipped workshop is available in order to carry out maintenance work.
- The inspection and maintenance schedule given at the end of these operating instructions defines precisely who is required / permitted to carry out what work. Jobs listed as daily / weekly work may be carried out by the machine's driver or maintenance personnel when they have received appropriate instruction. The remaining work may only be carried out by specialist personnel with appropriate training.
- Replacement parts must correspond to the technical requirements determined by the manufacturer. Original replacement parts are always guaranteed to meet these criteria.
- Wear safe work clothes when carrying out maintenance work. Protective glasses and gloves are required in addition to a hardhat and safety shoes for some work.
- Do not permit unauthorised persons to approach the machine during maintenance work.
- Cordon off a wide maintenance area if required.
- Inform operational personnel before starting to carry out any special work and repair work. Designate persons in charge of supervision.
- In the absence of any other information in the operating instructions, carry out all maintenance work on the machine on level, firm ground with the working equipment set aside and the engine switched off.
- Pull out the ignition key and shut off the main battery switch.
- Always tighten any loose screw connections during maintenance and repair work.
- If safety devices have to be dismantled during set-up, maintenance and repair work, they must be immediately reinstalled and checked at the end of the work.
- When carrying out repair work, particularly when working under the machine, hang a "Do not start" warning sign in a clearly visible position on the starting lock. Pull out the start key and shut off the main battery switch.
- Operate combustion motors and fuel operated heaters only in well ventilated areas. Before operating these units, check ventilation.
- In addition, always follow applicable local regulations.

### 5.1.2 Cleaning

- Clean oil, fuel or care products off the machine before starting maintenance or repair work and pay particular attention to connections and screw fittings. Do not use aggressive cleaning products and use lint-free cleaning cloths.
- Do not use aggressive cleaning products or steam jet devices to clean the machine for the first two months after initial set-up of the machine (or after repainting).



- Do not use combustible liquids to clean the machine.
- Before cleaning the machine with water or steam jets (high pressure cleaner) or other cleaning materials:
  - lubricate all bearing points, bolt connections and the rim bearing to prevent water or steam entering the bearing points.
  - cover or glue shut all openings into which for safety or functional reasons water or steam may not be permitted to enter.  
Electric motors, electrical components, control boxes, plug connections and air filters are particularly at risk.
- Ensure that the fire warning systems and fire extinguishers of the engine compartment's temperature sensor do not come into contact with hot cleaning products during cleaning work.  
The fire extinguisher could start.
- If you use a high pressure cleaner with steam or hot water to clean the machine, observe following recommendations :
- the distance between the nozzle and the surface to be cleaned must be no lower than 20 inches
- the water temperature should not exceed 60 °C (140 °F)
- limit the water pressure to 80 bar maximum (11500 PSI)
- if you employ cleaning fluid, only use neutral cleaning agents such as customary car shampoos diluted to 2 or 3 percent maximum
- After cleaning:
  - remove all covers completely.
  - check all fuel, engine oil and hydraulic lines for leakage, loosened connections, chafing and damage.
  - rectify any defects found immediately.
  - lubricate all bearing points, bolt connections and the rim bearing to displace any water or cleaning products that may have entered.

### 5.1.3 Crack testing

- Even when the machine is operated carefully, there is a possibility of individual cases of overloading occurring, which could lead to cracks or loose connections. The machine should therefore be checked regularly for cracks, loose connections or other visible damage to maintain operational safety.
- In order to be able to check for cracks, it is essential that the machine is kept clean and cleaned regularly.
- The tests should be carried out in accordance with the monitoring and maintenance plan:
  - every 250 operating hours by the machine owner's maintenance personnel.
  - every 500 operating hours by authorised specialist personnel.
- It is advisable to carry out these tests: supported, on firm, horizontal substrate, with the equipment in longitudinal and cross direction for variable loads. Current accident prevention regulations must be adhered to.
- Special care must be taken when testing load-bearing components, particularly:
  - the steel chassis members and axle and transmission mountings, the support, the lower rim bearing support and tower and ball rim bearing.
  - the steel upper structure members and bearing block for boom and boom cylinder, the upper rim bearing support, the cab mount and the mount for swing gear and ballast.
  - the steel components of the working equipment, e. g. the boom, stay, quick change adaptor, and bucket.
  - hydraulic cylinders, axles, steering, bolts and bolt connections, steps, ladders and mounting elements.

- The crack test should be carried out visually. If a crack is suspected, the dye penetration test should be carried out as a crack test on areas which do not have good visibility, such as the rim bearing support, in order to increase testing safety.
- Any damage found must be rectified immediately. Welding work on load-bearing parts of the earth-moving machinery, loading devices and transport devices may only be carried out by trained specialist personnel and only in accordance with the accepted rules of welding engineering. In case of doubt, contact the LIEBHERR customer support service to discuss suitable remedies.

#### 5.1.4 Welding, drilling, firing and grinding work

- Any welding on structural parts (as undercarriage, uppercarriage, equipment parts,...) may only be done the manufacturer, or authorized official dealer. If this rule is neglected, the warranty is voided.
- Only carry out welding, drilling, firing and grinding work on the machine with express authorization. Clean dust and combustible materials off the machine and its surrounding areas before welding, drilling, firing or grinding. Ensure adequate ventilation. Risk of fire or explosion.
- Before welding repairs on other parts, always disconnect the battery. Always remove the negative terminal first and reconnect it last.
- Nevertheless if welding repair should be done on components which may contain inflammable gases (welded counterweight, hydraulic tank, fuel tank, ...), these components must be previously and sufficiently ventilated with pressurized air to avoid all fire or explosion hazard
- Before welding, connect the ground cable as close as possible to the welding point, so the welding current will not run through the swing ring, joints, gears, bushings, rubber parts and seals

#### 5.1.5 Process materials

- When working with oils, greases and other chemical substances, observe the appropriate current safety regulations for the product.
- Ensure that process materials and replacement parts are disposed of in a safe and environmentally acceptable manner.
- Take care when handling hot process materials (Risk of burning and scalding).

#### 5.1.6 Repair work

- Do not attempt to lift heavy parts. Use devices which are suitable for this purpose and which have sufficient load capacity. When replacing single parts and larger subassemblies, carefully secure them on lifting devices so that they do not present a risk. Only use suitable and correctly functioning lifting devices and load take-up devices with adequate load capacity. Do not stand or work under swinging loads.
- Do not use lifting devices which are damaged or do not have sufficient load carrying capacity. Wear work gloves when working with wire cables.
- Only permit experienced personnel to attach loads and give signals to the crane operator. The spotter must be positioned within the visual range of the operator or be in voice contact with him.

- When working above body height, use safe climbing devices and working platforms which are appropriate for the job.  
Do not use machine parts as climbing devices if they are not designed for this purpose.  
When working at height, wear a harness to prevent falling.  
Ensure that all grips, steps, rails, platforms and ladders are free of dirt, snow and ice.
- Be sure to support yourself safely when working on the equipment (e.g. replacing teeth). Prevent metal touching metal when doing this.
- **For safety reasons, never open and remove a track chain unless having previously totally released the pretension of the chain tensioning unit.**
- Never lay under the machine if it is raised with work equipment and has not been securely supported with wooden beams.
- Always jack the machine up in such a way that any weight displacement does not jeopardize stability and prevent metal touching metal while doing this.
- Work on the suspension, brake and steering systems may only be carried out by trained specialist personnel.
- If the machine has to be repaired on a slope, secure the crawler with chocks and connect the upper structure to the chassis using stop bolts.
- Only personnel with special training and experience may work on hydraulic equipment.
- When searching for leakage, wear protective gloves. A fine jet of liquid under pressure can penetrate the skin.
- Do not unscrew any lines or connections before you have set aside the equipment, switched off the engine and depressurized the hydraulic system. After switching off the engine, you must operate all pilot control devices (joystick and pedals) in all directions with the start key in contact position in order to reduce the actuating and dynamic pressures in the work circuits. You must then reduce the internal tank pressure as described in these operating instructions.

### 5.1.7 Electrical system

- Check the electrical system regularly.  
Have all faults, such as loose connections, blown fuses and lamps and clogged or abraded cables rectified by personnel.
- Only use original fuses with approved current strength.
- For machines with electrical neutral and high tension leads:
  - switch the machine off immediately in the event of malfunctions in the power supply.
- Work on the machine's electrical equipment may only be carried out by skilled electrical personnel or by trained personnel under the supervision of an electrician in accordance with electrical regulations.
- When working on live parts, ensure that a second person is available to operate the emergency-off or the main switch and overvoltage release. Cordon off the working area with a red and white safety chain and a warning sign. Only use insulated tools.
- When working on neutral and high tension subassemblies, after releasing the voltage, briefly disconnect the supply cable at earth and electronic devices such as capacitors using an earthing rod.
- First test the released parts to make sure that they are off circuit, earth them and then disconnect them briefly. Insulate adjacent live parts.
- Disconnect the battery before working on the electrical system or carrying out any electric arc welding on the machine.

First disconnect the negative, then the positive pole. When reconnecting, proceed in the reverse order.

### 5.1.8 Hydraulic accumulator

- All work on the hydraulic accumulators must be carried out by trained specialist personnel.
- Inexpert assembly and handling of hydraulic accumulators can cause serious accidents.
- Do not operate damaged hydraulic accumulators.
- Before working on a hydraulic accumulator, you must reduce the pressure in the hydraulic system (hydraulic system including hydraulic tank), as described in these operating instructions.
- Do not carry out welding or soldering or do any mechanical work on the hydraulic accumulator.  
The hydraulic accumulator can be damaged by heat penetration and can be made to rupture by mechanical working. RISK OF EXPLOSION!
- Only charge the hydraulic accumulator with nitrogen. There is a RISK OF EXPLOSION if oxygen or air is used.
- The accumulator body can become hot during operation; there is a risk of burning.
- New hydraulic accumulators must be charged with the pressure required for the purpose of use before installation.
- The operating data (minimum and maximum pressure) are marked permanently on hydraulic accumulators. Ensure that this marking remains visible.


### 5.1.9 Hydraulic hoses and sheathed cables.

- It is forbidden to carry out repair work on hydraulic hoses and sheathed cables!
- All hoses, sheathed cables and bolt connections must be checked regularly every 2 weeks for externally visible damage and any possible damage must be immediately checked for leakage.  
**Never check for leaks with your bare hands, use a sheet of paper or something else.**  
Any damaged parts must be removed immediately! Spurting oil can lead to injury and burns.
- Even with correct storage and permitted load, hoses and sheathed cables are subject to the natural aging process. This restricts their duration of use.
  - Incorrect storage, mechanical damage and unauthorized load are the most common causes of failure.
  - In relation to duration of use, current norms, regulations and guidelines pertaining to hoses and sheathed cables at place of use must be adhered to.
  - Use at the limit range of permissible load can shorten duration of use (e.g. high temperatures, frequent movement cycles, extremely high pulse frequencies, multiple shift usage).
- Hoses and sheathed cables should be replaced if the following are found during inspection:
  - Damage to the outer sheath as far as the liner (e.g. chafing, cuts and cracks);
  - Brittleness of the outer sheath (fracture formation in hose material);
  - Deformations which do not correspond to the natural form of the hose or sheathed cable, whether in a unpressurized or pressurized state or on bends e.g. sheath separation, blistering;
  - Unsealed areas;

- Non-adherence to requirements during installation;
  - Damage or deformations to the hose fittings which reduce the tightness of the fittings or the hose / fitting connection;
  - Hoses working themselves out of the fittings;
  - Corrosion of the fittings which reduces function and tightness;
- When replacing hoses and sheathed cables, use only original replacement parts.
  - Install and mount hoses and sheathed cables correctly. Do not mix up the connections.
  - The following is to be noted when replacing hoses and sheathed cables:
    - Always ensure that the hoses and sheathed cables are installed free of torsion. For high-pressure hoses, the screws from the half-clamps or full flange must always be attached to both hose ends and should only be tightened afterwards.
    - When tightening the flange on high-pressure hoses and sheathed cables with bent fittings, the side with the bent fitting must always be tightened first and then the side with the straight fitting tightened afterwards.
    - Any mounting clamps which are located in the centre of the hose may only be attached and tightened subsequently.
    - Check daily to ensure that all clamps, covers and protective devices are properly fastened. Doing this will prevent vibration and damage during operation.
    - Install the hoses and sheathed cables in such a way that they cannot chafe on other hoses, sheathed cables or parts.
    - A minimum distance from other parts of approx. half the exterior diameter of the hose is recommended. The distance should not, however, be less than 10 to 15 mm.
    - When replacing the hoses or sheathed cables on moving parts (e.g. from the boom to the stay), check before initial start-up that there are no chafing areas in the entire area of movement.

## 5.2 Maintenance access doors

### 5.2.1 Overview of access doors

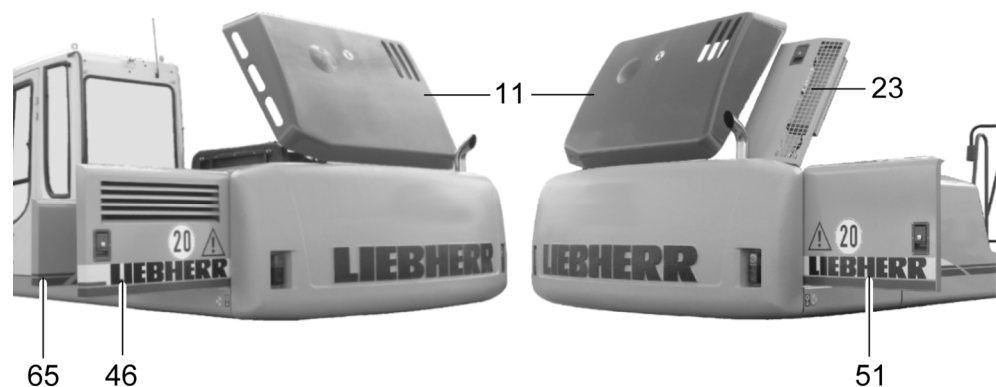

**Fig. 5-1** Access doors on the machine

<b>11</b>	Centre cover	<b>51</b>	Side door, right
<b>23</b>	Right cover	<b>65</b>	Side door, front left
<b>46</b>	Side door, left		

The machine has 5 access doors for maintenance. The locks integrated in the handles must be unlocked before starting to drive.



**Caution!**

Access doors can close accidentally and trap the operator or maintenance personnel.


- ▶ When you have opened the access doors, latch them using the retainer.

Access door	Lock	Access to:
Centre cover	Gas pressure spring, auxiliary mechanical retainer	<ul style="list-style-type: none"> <li>- Diesel engine</li> <li>- Radiator</li> </ul>
Right cover	Gas pressure spring	<ul style="list-style-type: none"> <li>- Diesel engine</li> <li>- Control oil unit</li> </ul>
Side door, left	Mechanical retainer	<ul style="list-style-type: none"> <li>- Radiator</li> <li>- Electrics box E50</li> <li>- Batteries</li> <li>- Main battery switch</li> </ul>
Side door, right	Mechanical retainer	<ul style="list-style-type: none"> <li>- Dry air filter</li> <li>- Control oil unit</li> <li>- Hydraulic pump</li> </ul>
Side door, front left	Mechanical retainer	<ul style="list-style-type: none"> <li>- Toolbox</li> <li>- Stowing compartment</li> </ul>

**Tab. 5-1**

**Tab. 5-2** Access doors


**5.2.2 Door lock**

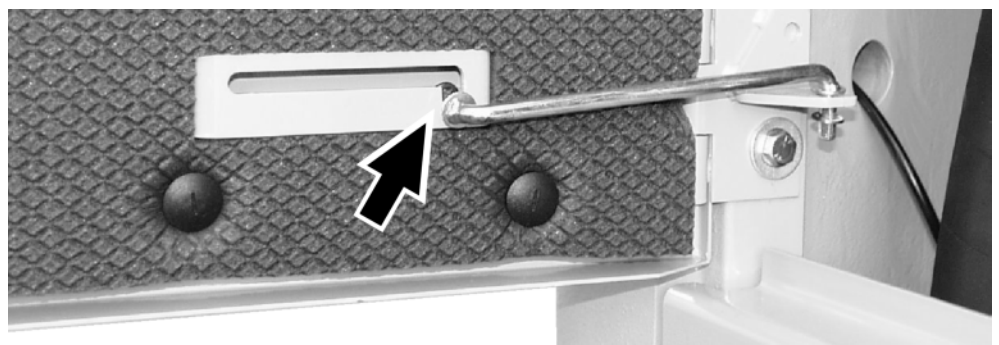

**Fig. 5-2** Door lock

- ▶ To stop the access doors from moving unintentionally (eg. due to wind), open them fully and allow the door lock (see arrow) to latch in.

### 5.2.3 Engine hood lock

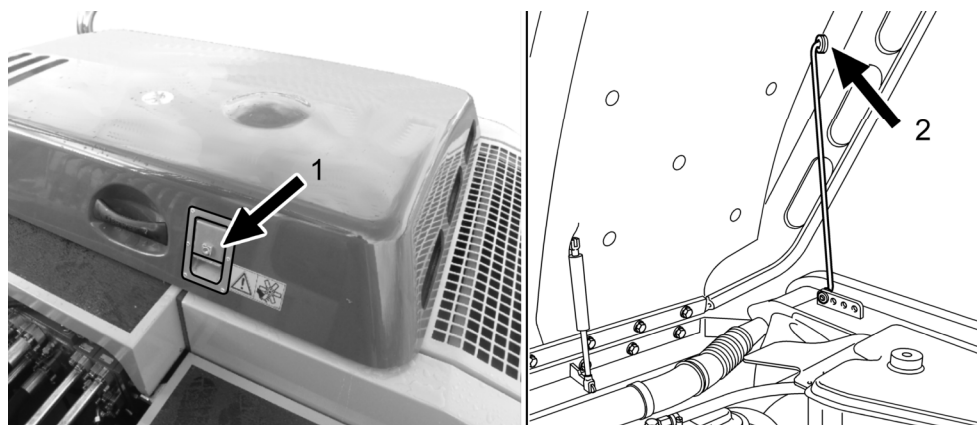

**Fig. 5-3** Engine hood lock

- ▶ Unlock the engine hood using door lock **1** and push back.



#### Caution!

The engine hood moves with the assistance of two gas pressure springs. These hold the engine hood open. With older gas pressure springs, the retaining power can drop off and the engine hood could lower accidentally.

- ▶ Always secure the engine hood additionally using mechanical retainer **2**.

## 5.3 Lubricating and operating materials

### 5.3.1 General information on changing lubricating and operating materials



#### Note

The quantities given in the lubrication and operating material chart and on the lubrication chart in the cab are only guide values.

- ▶ After each oil change or refill, check the level in the relevant unit.



#### Note!

Adhering to regulations for lubrication, level checks and operating material changes guarantees a high degree of reliability and a long service life for the machine. It is particularly important to adhere to the intervals for oil changes and use the lubricant quality indicated.

**Note!**

Cleanliness is of the utmost importance when changing oil.

- ▶ Clean all filler plugs, filler covers and drain plugs and their surroundings before opening.
  - ▶ For preference, drain off oil when it is at operating temperature.
  - ▶ Ensure that old oils are collected and disposed of in an environmentally acceptable manner using the removable oil filter cartridges.
- 

**Danger!**

When checking and changing lubrication and operating materials, ensure that the following precautions are adhered to:

- ▶ Unless otherwise indicated, carry out all work on the machine on level, solid ground and with the engine switched off.
  - ▶ Whenever you reach into the engine compartment, always secure the cover and side doors against accidentally falling back or closing.
  - ▶ Only refuel the machine when the engine is switched off, do not smoke and avoid naked flame.
  - ▶ Turn the main battery switch to position **0** (off) and remove the ignition key.
-



5.3.2 Lubrication chart

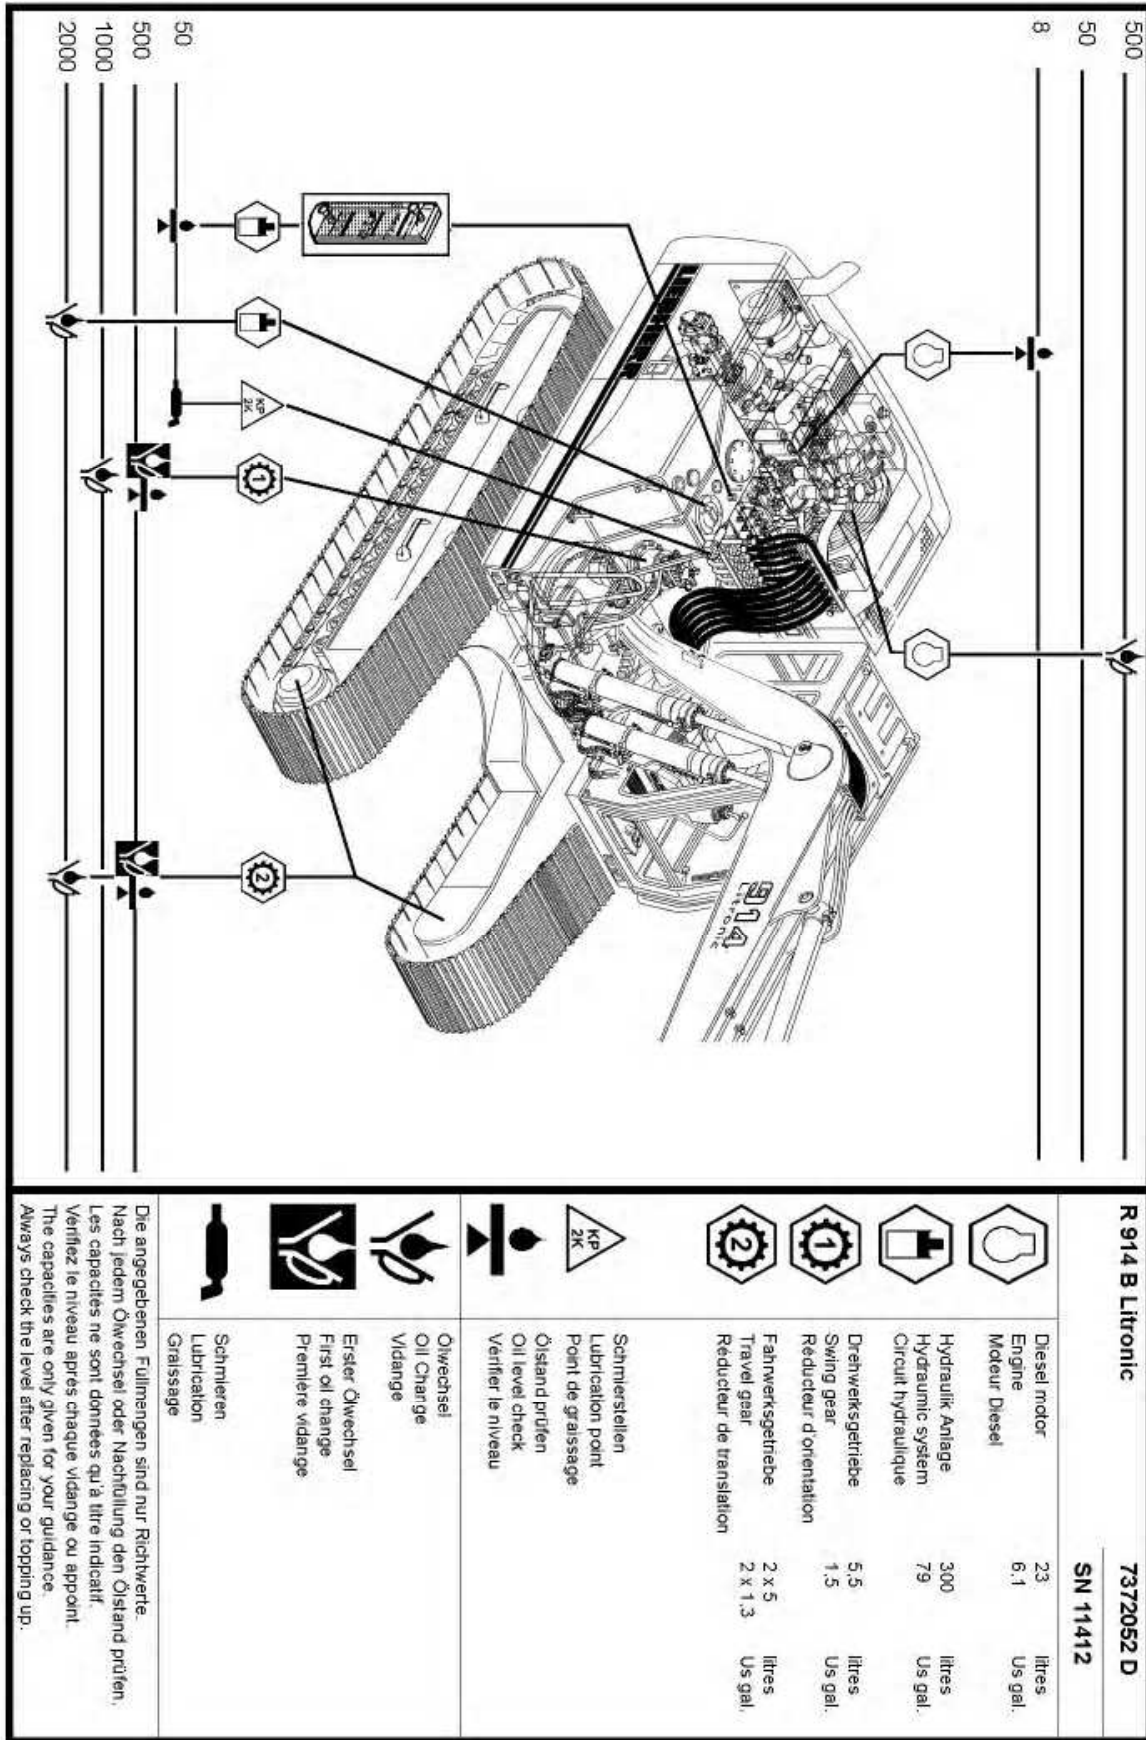








Fig. 5-4 Lubrication chart - R 914B Litronic



### 5.3.3 Lubricant chart

Designation	Medium	Symbol	Classification	Viscosity	CI *	Quantity (litres)**
Diesel engine	Engine oil		API-CG-4, CF-4, ACEA E2-96, E3-96, E4-98, E5-99 CCMC D4, D5	SAE 5W40 SAE 10W30 SAE 10W40 SAE 15W30 SAE 15W40	EO 0540 EO 1030 EO 1040 EO 1540	(SN9817) 18,5 (SN9818) 23
Hydraulic tank	Engine oil		API-CD, CD + SF ACEA E1, E3 CCMC D4, D5 Mercedes Benz 226 und 227 227.5, 228.1 und 228.3	SAE 10W SAE 10W-30 SAE 10W-40 SAE 15W-40 SAE 20W-20 SAE 30W	EO 10 EO 1030 EO 1040 EO 1540 EO 20 EO 30	300 into tank 440 total
Slewing gear transmission (as stop and parking brake)	Transmission oil		API-GL-5 MIL-L 2105 B, Cor D	SAE 90	GO 90	5,5
Slewing gear transmission (as positioning slewing brake pedal)	Transmission oil		API-GL-5 MIL-L 2104 C or D MIL-L 2105 B	SAE90 LS	GO 90 LS	5,5
Travelling gear transmission	Transmission oil		API-GL-5 MIL-L 2105 B, C or D	SAE 90	GO 90	2x5
Tracks and corresponding gearing of slewing ring, equipment mounting	Lubricating grease		High pressure grease KP2k or EP2	Consistency 2 NLGI classification	MPG-A	-
Hinges, joints, locks	Engine oil	-	-	-	-	-
Rubber seal on doors and trim panels	Silicon spray or talc	-	-	-	-	-

**Tab. 5-3** Lubricant chart

\*CI = regulation lubricant for construction machines and vehicles according to the national German construction industry federation (see brochures in Bauverlag GmbH – Wiesbaden and Berlin, Notes on lubrication and operating materials charts).

### 5.3.4 Operating material chart

Designation	Medium	Symbol	Quantity (litres)*
Fuel tank	Commercially available diesel fuel with sulphur content $\leq 0.5\%$		320
Coolant	Anti-corrosion fluid and antifreeze Fill with DCA 4 CI = SP-C		28,0
Windscreen washing system	Commercially available windscreen washing fluid or methylated alcohol	-	5,0
Air conditioning system refrigerant	R 134 a	-	1,9 kg
Refrigerant oil in A/C compressor	PLANETELF PAG SP 20	-	0,21

Tab. 5-4 Operating material chart

## 5.4 Lubricating and operating material specifications

### 5.4.1 Lubrication oil for the diesel engine



Lubricating oil requirements for diesel engines are based on the following classifications:

Classification	Specification
API classification (American Petrol Institute)	CG-4, CF-4, CH-4, CI-4 oil change interval reduced
ACEA (CCMC) - classification (Association des Constructeurs Européens de l'Automobile)	E2-96 (D4), E3-96 (D5), E4-98, E5-99

Tab. 5-5 Lubricating oil for the diesel engine

#### Viscosity of lubricating oil

Excessive viscosity can lead to starting problems, insufficient viscosity endangers the lubrication function.


Refer to the SAE classification (Society of Automotive Engineers) when selecting a lubricating oil in terms of its viscosity. The ambient temperature is a decisive factor when selecting the SAE class.



**Note!**

A selection based on the SAE class does not provide any indication on the quality of the lubricating oil.

The engine oil for the diesel engine can be selected according to the following figure.

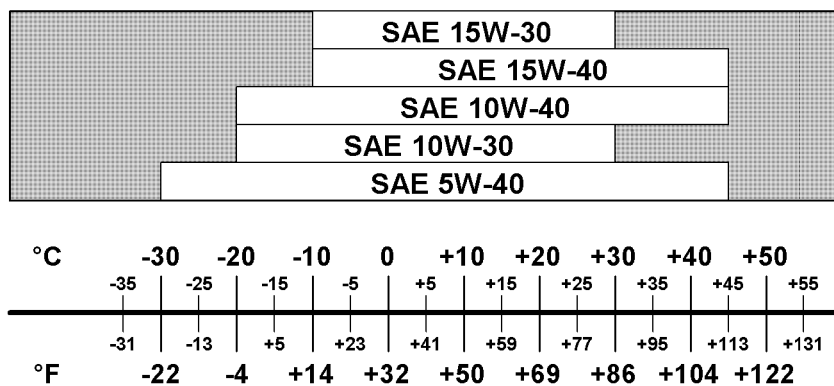

**Fig. 5-5** Engine oil for use as lubricating oil for the diesel engine

**Oil change intervals for the turbocharged engine**

Conditions of use	Sulphur content in fuel	Oil change interval dependent on oil quality:	
		CF-4 CG-4 CH-4 CI-4	E3 E4 E5
Climate normal to -10 °C	up to 0.5 % above 0.5 %	250 h 125 h	500 h 250 h
below -10 °C	up to 0.5 % above 0.5 %	125 h -	250 h 125 h

**Tab. 5-6** Oil change intervals for the turbocharged engine

Oil change intervals for the diesel engine depend on the following criteria:

- First oil and filter change at 500 operating hours when using initial fill oil of quality E4 or E5.
- Further filter changes every 500 operating hours.
- Further oil changes dependent on climatic zone, sulphur content in fuel and oil quality (siehe Tab. 5-6)
- If the operating hours given are not attained within one year, the engine oil and oil filter must be changed at least once a year.

**5.4.2 Fuel**



Diesel fuels should comply with the minimum requirements of the permitted fuel specifications given below.

The sulphur content should not exceed 0.5 weight percent. A higher sulphur content will affect the oil change intervals and engine life.

Diesel fuels with a sulphur content > 1 % are not permitted.

### **Permitted fuel specifications**

DIN EN 590

ASTM D 975 - 89a 1 D and 2 D

Diesel fuels acc. to DIN EN 590 with up to 5% Vol. FAME

Only use other fuel specifications after consulting LIEBHERR diesel engine development.

### Lubricating value

The reduction of sulphur content has raised the problem of diesel fuel lubrication characteristics. It has been shown that diesel fuels containing the maximum permitted European sulphur limit of 0.05 weight per cent can cause the fuel injection system to wear (particularly applicable to distributor-type injection pumps).

'Branded' fuels in Germany contain lubrication additives in their additive package. The fuel lubricating value must be 460 µm according to the HFFR(60°) test.

Suppliers should supply the additives as they are responsible for ensuring fuel quality. It is not recommended that clients add secondary lubrication additives.

A cetane number of at least 45 is required for fuels in accordance with ASTM D 975. A cetane number above 50 is preferred, particularly at temperatures below 0 °C.

### Diesel fuels at low temperatures

When outside temperatures are below approx. 0 °C, the flow characteristics of summer diesel fuels may become insufficient due to the effects of paraffin dissipation.

The same effect occurs with winter diesel fuels at below approx. -15 °C. Frequently, diesel fuel is also available with additives that allows operation at temperatures down to -20 °C.

The use of a fuel filter heating system is recommended when the cold flow characteristics of the fuel are inadequate or temperatures are below -20 °C.



**Caution!**

Flow improvement additives will damage the engine as they provide insufficient lubrication.

- ▶ Never add petroleum or normal petrol.
- ▶ Never use generally available flow improvement additives.




### Engine oil

Engine oils corresponding to the following specifications and regulations are stipulated:

<b>Single-grade oils:</b>	API - CD / CCMC - D4 / ACEA - E1 Mercedes-Benz regulations, sheet no. 226.0 and 227.0
<b>Multigrade oils</b>	API - CD + SF / CCMC - D5 / ACEA - E3 Mercedes-Benz regulations, sheet no. 227.5, 228.1 and 228.3

**Tab. 5-7** Stipulated engine oils for use as hydraulic oil

The engine oil for use as a hydraulic oil can be selected according to the following graphic.

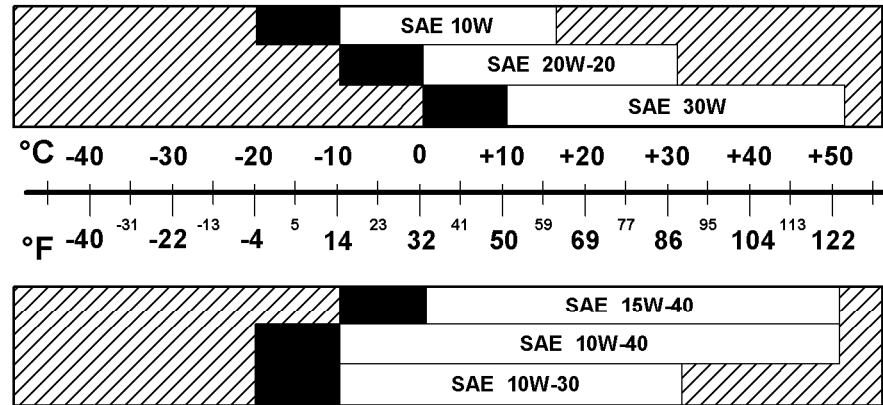

**Fig. 5-6** Engine oils for use as hydraulic oil

### Warm-up specification

At temperatures up to 10 °C below the given limit (black bar), the following warm-up specification applies:

Only adjust the diesel engine after starting to approx. 1 / 2 rated speed. Operate the hydraulic cylinder and motors, move cylinder briefly to the stop. Warm-up duration approx. 10 minutes.

At even lower temperatures: Prewarm the oil reservoir before starting the engine.

### Environmentally-friendly hydraulic oils



#### Note!

Never mix environmentally-friendly hydraulic oils from different manufacturers and do not mix in any mineral oils.

The environmentally acceptable hydraulic oils recommended by LIEBHERR are limited to oils with a synthetic ester basis with a viscosity equivalent to ISO VG 46.

The initial oil fill is carried out at the works using an approved list. Any use of an environmentally acceptable hydraulic oil must first be agreed with LIEBHERR.

Plant-based oils are not to be used due to their insufficient temperature properties.

The use of partial flow filters is required.

### Hydraulic oil monitoring



#### Note!

**Environmentally acceptable hydraulic fluids should generally be checked** at regular intervals by oil analysis.


**Oil analysis is recommended for mineral oils.**

▶ Machines in normal use: at least every 500 operating hours

▶ Machines in heavy dust use: at least every 250 operating hours

LIEBHERR recommends that oil analyses be carried out by the company WEAR CHECK and that oil changes are performed on the basis of the lab report (see also customer service and product information).

### Hydraulic oil monitoring in normal use

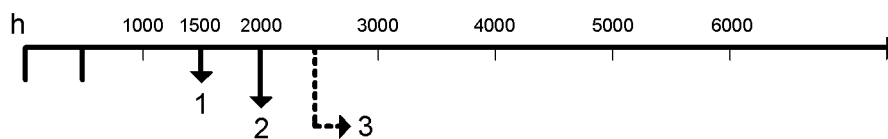


**Fig. 5-7** Taking oil samples and changing filters under normal operating conditions

- Taking oil samples                    1 First oil sample
- Filter change                            2 Second oil sample
- h Operating hours                        3 Further oil samples every 500 operating hours

Oil change according to analysis and lab report.

Change intervals for hydraulic oil return-line filter (20.5 µm): initially after 500 operating hours, further changes every 1000 operating hours.

### Hydraulic oil monitoring in heavy dust use

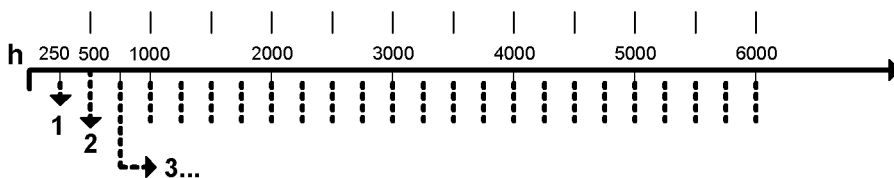

**Fig. 5-8** Taking oil samples and changing filters in heavy dust environments

- Taking oil samples                    1 First oil sample
- Filter change                            2 Second oil sample
- h Operating hours                        3 Further oil samples every 250 operating hours

Oil change according to analysis and lab report.

Change intervals for hydraulic oil return-line filter (10 µm): initially after 500 operating hours, further changes every 500 operating hours.

### Notes on reducing hydraulic oil contamination in heavy dust use

If the machine is generally operated with the hydraulic hammer, or is used under similar circumstances (heavy dust occurrence), there is a risk that the hydraulic oil will become more than usually contaminated.

To prevent early wear of hydraulic components, the oil change intervals (and intervals between oil samples) should be reduced and the following regulations should also be noted:

- The filter cartridge(s) must be replaced every 500 operating hours.
- For the return-line filter, 10 µm filter cartridges must be used instead of the usual 20 / 5 µm filter cartridges.
- The vent filter on the hydraulic tank is to be replaced with a 2 µm fine filter (finesness of standard filter is 7 µm).
- The 2 µm vent filter must be replaced each time the hydraulic oil is changed (every 500 operating hours).

LFR/en/Edition: 5 / 2006





**Note!**

Machines fitted with a hydraulic hammer at the works and retrofitted hydraulic hammer kits possess these 10-µm filter cartridges and 2-µm vent filters.

**5.4.3 Transmission oil**




Transmission oils must correspond to the specifications

- API-GL-5 and MIL-L-2105 B or C or D for viscosity class SAE 90

For viscosity classes SAE 80 and SAE 90 in accordance with MIL-L-2105 D, an oil of viscosity class SAE 80W90 can be used.

**5.4.4 Lubricating grease and other lubricants**

Lubricant	Description / manufacturer
Lubricating grease for the slewing ring / general oiling points  	The grease must correspond with the specification <b>KP2k</b> , consistency 2 or NLGI grade in accordance with DIN 51818 and DIN 51825 or EP 2 in accordance with NF-T-60 132. The grease must consist of a lithium complex and have a four ball tester value of at least 2300 N in accordance with DIN 51350 and ASTM D 2596.
Contact spray for slip rings	Cramolin
Lubricant for pistons, piston nuts and piston bearing installations on the hydraulic cylinders	Gleitmo 800
Special anti-corrosive material for installation areas of sealingelements on hydraulic cylinders	Castrol-Tarp
Anti-corrosion grease for open piston rods (cylinders that do not move often or transportation)	Liebherr special grease CTK

**Tab. 5-8** Lubricating grease and other lubricants

**5.4.5 Coolant**



Coolants which contain inadequate anti-corrosion/anti-frost additives or which have been inadequately or incorrectly prepared may cause cavity or corrosion damage . This could result in the failure of cooling circuit equipment or components. Furthermore heat-insulating deposits may accumulate on components which are designed to transfer heat. This could lead to overheating and ultimately engine failure.

### Mixture ratio water : anti-corrosion / anti-freeze fluid

Outside temperature up to	Water content in %	Anti-corrosion / anti-freeze fluid content in %
-37 °C / -34 °F	50	50
-50 °C / -58 °F	40	60

**Tab. 5-9** Mixture ratio water / anti-corrosion fluid / antifreeze

### Refilling the cooling system

- ▶ Before refilling new coolant check that the coolant system is clean and wash out if necessary.
- ▶ When filling for the first time or refilling the cooling system after repair work, DCA 4 in liquid form must be mixed with the coolant in addition to the DCA 4 concentration contained in the water filters.

Cooling system contents (litres)	Required amount of liquid DCA 4 (bundle* or litres)	DCA 4 water filter description
24 - 39	3 or 1,4	WF 2071
40 - 59	4 or 1,9	WF 2072
60 - 79	5 or 2,4	WF 2073
80 - 115	8 or 3,8	WF 2073

**Tab. 5-10** Cooling system quantities.

\* = about 0,5 liter each

### Change intervals for the DCA 4 water filter

The DCA 4 water filter must be changed every 500 operating hours.

If there is no coolant loss in the cooling system, this means that at change intervals of 500 operating hours there is sufficient DCA 4 concentration in the cooling system.

### Checking and replacing the coolant

The coolant must contain a minimum of 50 percent by volume of anti-corrosion /anti-freeze fluid all year round. This provides anti-freeze protection up to -37 °C and also ensures sufficient anti-corrosion protection.

When maintenance work is being carried out, the mixture ratio of the coolant and the DCA 4 concentration must be checked.

In certain cases it is possible to use anti-corrosion products (inhibitors). The use of emulsible corrosion protection oils is not permitted.



**Note !**

- The coolant must be changed every **2 years**.
- The DCA 4 concentration must be between **0.3** and **0.8** units per litre.
- To test this, testing kit CC 2602 M by Fleetguard is recommended.


**Note !**

Always replace any lost coolant with a mixture of water and min. 50 Vol.% anti-corrosion/anti-freeze fluid.

Never let the anti-corrosion/anti-freeze content drop below 50 Vol.%.

Do not use more than 60% anti-corrosion / anti-freeze fluid!

The cooling properties and frost protection will reduce at higher content levels.

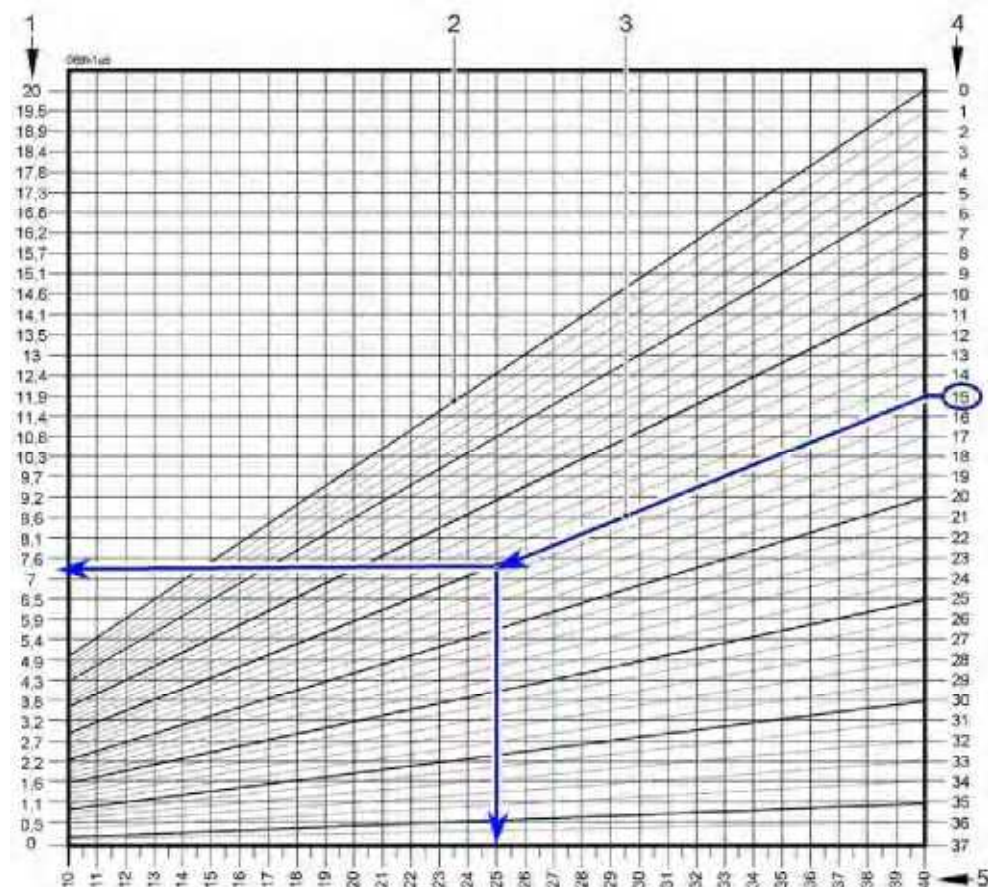

**Fig. 5-9** Select the anti-freeze concentration level

### Determining the top-up quantity - example -15 °C:

Refer to the diagram in (siehe Fig. 5-9) to determine the anti-corrosion/anti-freeze top-up quantity required for protection down to -37 °C.

The measured anti-freeze protection provided by the coolant was -15 °C:

- Determine the intersection point between the auxiliary line for the measured temperature (**3**) and the vertical line representing the fill capacity of the cooling system.
- Read off the required top-up quantity on the left scale at the height of the intersection point.

### Correct the mixing ratio

- Required top up quantity has been determined.
- ▶ Drain the same amount of coolant as required for the top up.
- ▶ Top up with the required amount of anti-corrosion/anti-freeze.
- ▶ Adjust the coolant level with the previously drained coolant.

### Anti-corrosion products

In **exceptional circumstances** and at temperatures which are continually above freezing, e.g. in tropical areas, where there is clearly **no anti-corrosion / anti-freeze fluid available**, a mixture of **water and water soluble anti-corrosion fluid** may be used as **coolant**.



#### Note!

Completely drain the coolant when changing from anti-corrosion / anti-freeze fluids to anti-corrosion products or vice-versa.

### Using DCA 4 without anti-corrosion / anti-freeze fluid

Check and (if necessary) correct the DCA 4 concentration level during maintenance.



#### Note!

- The coolant must be changed **annually**.
- The DCA 4 concentration must be between **0.6** and **1.06** units per litre.
- It is recommended that testing kit CC 2602 M by Fleetguard is used.

### Using other water soluble anti-corrosion fluids

When using Caltex / Chevron Texaco / Havoline / Total, check and (if necessary) correct the mixing ratio as part of the regular maintenance.



#### Note!

- The coolant must be changed **annually**.
- The mixture ratio must consist of **7.5 %** anti-corrosion fluid and **92.5 %** water.
- It is recommended that refractometer type Gefo 2710 is used for testing.

### Use a refractometer to check the mixing ratio



**Fig. 5-10** Refractometer Gefo 2710

#### Refractometer:

- Adjustment screw for setting the 0-line (water line)
- Adjust the focus by turning the eyepiece

- soft eye guard on eyepiece
- rigid metal housing
- good grip provided by rubber casing

**Measurement procedure:**


- ▶ Carefully clean the cover and prism
- ▶ Apply 1 or 2 drops of testing fluid to the prism
- ▶ Close the flap
  - ↳ The fluid will distribute itself.
- ▶ Look at a light background through the eyepiece.
- ▶ Focus the scale and read off the value on the blue line.

**Conversion diagram:**



**Note!**

Concentration measured using a Brix refractometer for Caltex / Chevron Texaco / Havoline / Total.

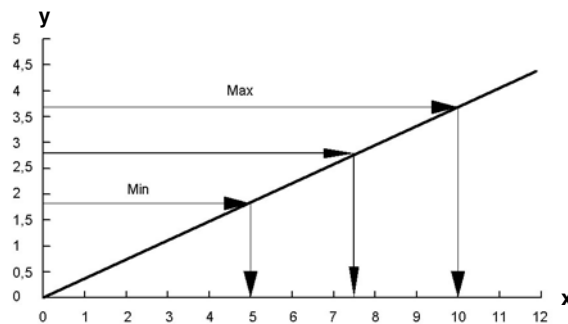

**Fig. 5-11** Conversion diagram

- x Concentration (vol%)
- y Read off refractometer in 0-10% Brix

**Overview of approved water soluble anti-corrosion fluids**

Product description	Manufacturer
DCA 4 Diesel Coolant Additives	Fleetguard
Caltex CL Corrosion Inhibitor Concentrate	Caltex
Chevron Texaco Heavy Duty Extended Life Corrosion Inhibitor Nitrite Free	Chevron Texaco
Havoline Extended Life Corrosion Inhibitor (XLI)	Arteco
Total WT Supra	Total

**Tab. 5-11** approved water-soluble anti-corrosion fluids

**Disposal**

Undiluted anit-corrosion/anti-freeze fluids should be treated as special waste. Observe the local regulations when disposing of used coolant.

LFR/en/Edition: 5 / 2006

## Regulations on fresh water quality

Drinking water, clear, without colouring, without mechanical impurities and within values tolerances of following analysis is appropriate.

The drinking water analysis has to be asked to the competent communal authorities

**Sea water, brackish water, brine and industrial wastewater are not suitable.**

Contents	Quantity
Total earth alkaline content (water hardness)	0.6 bis 2.7 mmol/l (3 to 15 °d)
ph value at 20 °C	6.5 to 8.0
Chloride-ion content	max. 80 mg / l
Total chloride + sulphate	max. 80 mg / l

## Approved anti-corrosion fluid / antifreeze

### Concentrate, undiluted

Product description	Manufacturer	Country
Agip Antifreeze Plus	Agip Petrol S.p.A., Rome	I
Agip long-term anti-freeze protection	Autol-Werke GmbH, Würzburg	D
Antigel DB 486	Sotragal S.A., St. Priest	F
Aral radiator anti-freeze protection A	Aral AG, Bochum	D
Avia anti-freeze protection APN (G48-00)	Deutsche Avia-Mineralöl GmbH, Munich	D
BP Antifrost X 2270 A	Deutsche BP AG, Hamburg	D
BP Nappgel C 2270 / 1	BP Chemicals LTD., London	GB
Caltex Engine Coolant DB	Caltex UK Ltd, London	GB
Caltex Extended Life Coolant	Caltex UK Ltd, London	GB
Castrol Anti-Freeze O	Deutsche Castrol Vertriebs GmbH, Hamburg	D
Century F.L. Anti-Freeze	Century Oils, Hanley, Stoke-on-Tent	GB
Chevron DEX-COOL Extended Life Anti-Freeze / Coolant	Chevron Texaco, San Ramon, CA	USA
DEUTZ anti-freeze protection 0101 1490	Deutz Service International GmbH, Cologne	D
Esso anti-freeze protection	Esso AG, Hamburg	D
Fircofin	Fuchs Mineralölwerke GmbH, Mannheim	D
Frostschutz Motorex (G48-00)	Bucher & Cie, Langenthal	CH
Anti-freeze 500	Mobil Oil AG, Hamburg	D
Glacelf Auto Supra	Total Nederland N.V., Den Haag	NL
Glycoshell AF 405	Shell Deutschland GmbH, Hamburg	D
Glycoshell N	Shell Deutschland GmbH, Hamburg	D

Product description	Manufacturer	Country
Glysantin (G 48-00)	BASF AG, Ludwigshafen	D
Havoline XLC	Arteco, Gent	B
Havoline DEX-COOL Extended Life Anti-Freeze/ Coolant	Chevron Texaco, San Ramon, CA	USA
Igol Antigel Type DB	Igol France, Paris	F
Labo FP 100	Labo Industrie, Nanterre	F
Motul Anti-Freeze	Motul SA, Aubervilles	F
OMV anti-freeze protection	OMV AG, Schwechat	A
Organifreeze	Total Deutschland GmbH, Düsseldorf	D
OZO anti-freeze protection S	Total Deutschland GmbH, Düsseldorf	D
Total Antigel S-MB 486	Total Deutschland GmbH, Düsseldorf	D
Total Frostfrei	Total Deutschland GmbH, Düsseldorf	D
Veedol Anti-Freeze O	Deutsche Veedol GmbH, Düsseldorf	D
Wintershall anti-freeze	Wintershall Mineralöl GmbH, Düsseldorf	D

**Tab. 5-12** Approved anti-corrosion / antifreeze fluid (concentrate, undiluted)

**50:50 premix (water:anti-corrosion / anti-freeze fluid)**

Product description	Manufacturer	Country
Liebherr Anti-Freeze APN Mix + DCA4 Ident-No. 10005347 - 20 liters barrels	Liebherr	D
Caltex Extended Life Coolant Pre-Mixed 50/50 (ready-to-use-version)	Caltex UK Ltd, London	GB
Chevron DEX-COOL Extended Life Prediluted 50/50 Anti-Freeze/Coolant	Chevron Texaco, San Ramon, CA	USA
Havoline XLC, 50/50	Arteco, Gent	B
Havoline DEX-COOL Extended Life Prediluted 50/50 Anti-Freeze/Coolant	Chevron Texaco, San Ramon, CA	USA
Organicool 50/50	Total Deutschland GmbH, Düsseldorf	D

**Tab. 5-13** Approved anti-corrosion / anti-freeze fluid / 50:50 premix

## 5.5 Diesel engine

### 5.5.1 Checking the oil level in the diesel engine

**Danger!**

Risk of burning.


The engine oil is hot when it is at operating temperature.

- ▶ Do not allow the hot oil or oil-bearing parts to touch the skin.

The machine must be standing level.

- ▶ Switch off the engine.

- ▶ Wait until the oil has collected in the oil sump.

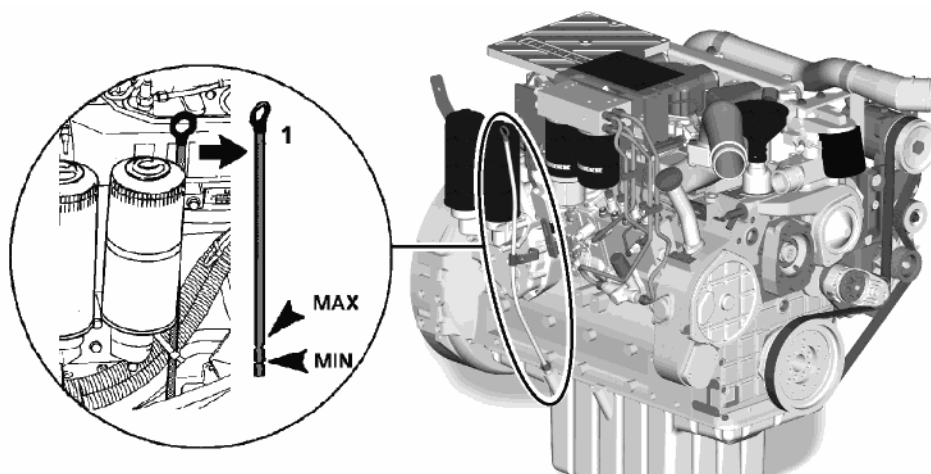

*Fig. 5-12 Oil level markings on the dipstick*


- ▶ Check the oil level in the engine.
  - ↳ The oil must leave a mark between the **min** and **max** marks on the dipstick.

### 5.5.2 Changing the diesel engine oil

**Note!**

- ▶ Only carry out the oil change when the engine is warm.



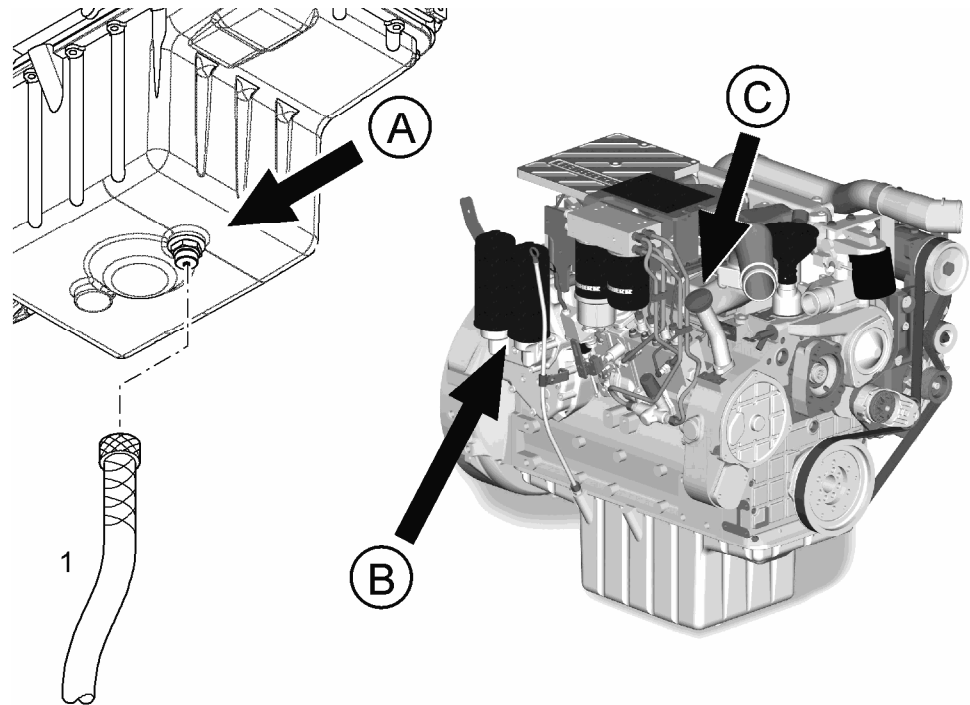

**Fig. 5-13** Drain valve on the oil sump, oil filter cartridges, oil filler cap

**To drain the oil (A):**

- ▶ Screw the oil drain hose supplied **1** onto the oil sump's drain valve.
- ▶ Collect the oil in a suitable container.

**To change the oil filter cartridges (B):**

- ▶ Unscrew the oil filter cartridges.
- ▶ Clean the sealing surface on the filter bracket.



**Danger!**

Risk of burning.

- ▶ Avoid skin contact with the hot oil when unscrewing the oil filter cartridges.

- ▶ Oil the rubber sealing ring on the new oil filter cartridges.

- ▶ Screw the new filter element on until the sealing ring is laying on the filter head.

- ▶ Use the oil filter key to tighten the oil filter cartridges by a half turn **by hand**.

**To add the oil (C):**


- ▶ Add the oil to the oil filler cap until the level reaches the upper marking of the dipstick.

Quantity, oil quality and oil change intervals: see lubrication and maintenance chart.

### 5.5.3 Ribbed V-belt for the A/C compressor and alternator installation

The diesel engine is fitted with a tensioning device for the ribbed V-belt. This is self-

tensioning and is therefore maintenance-free. The ribbed V-belt should be checked regularly for wear and replaced if necessary.

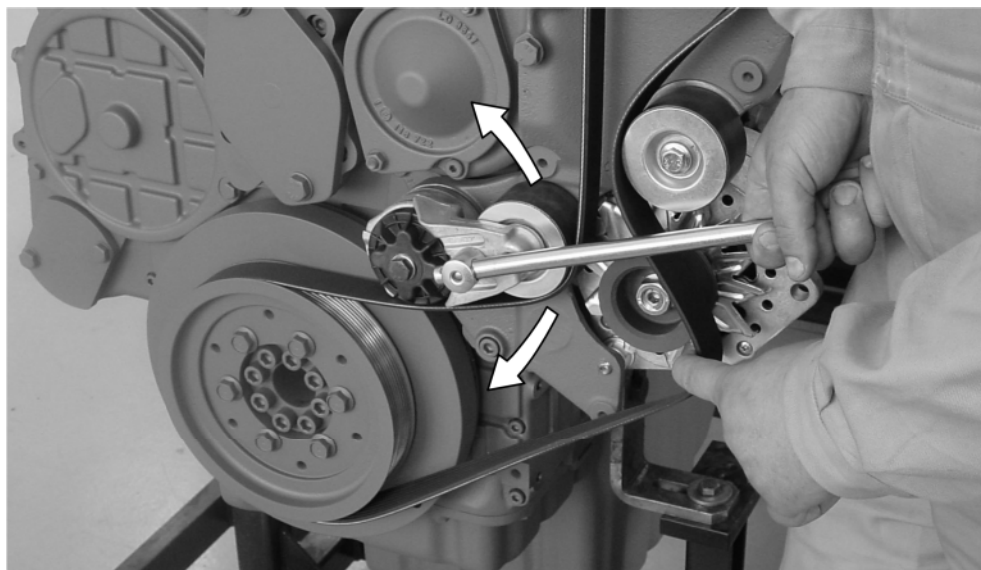

**Fig. 5-14** Replacing the ribbed V-belt

**To replace the ribbed V-belt:**


- ❑ To replace the ribbed V-belt, you will need a ratchet equivalent to DIN 3122 D12.5 (1/2").
- ▶ Rotate the tensioning device back counter-clockwise against the spring force as far as the stop.
- ▶ Remove the ribbed V-belt.
- ▶ Lay the new ribbed V-belt on the belt pulleys for the crankshaft, A/C compressor, alternator and deflection pulley with the tensioning device rotated back.
- ▶ Move the tensioning device clockwise back into the tensioned position.



**Note!**

When replacing the ribbed V-belt, check the tensioning pulley and deflection pulley for ease of movement. Replace defective tensioning pulleys and deflection pulleys immediately.

**5.5.4 Oil separator**

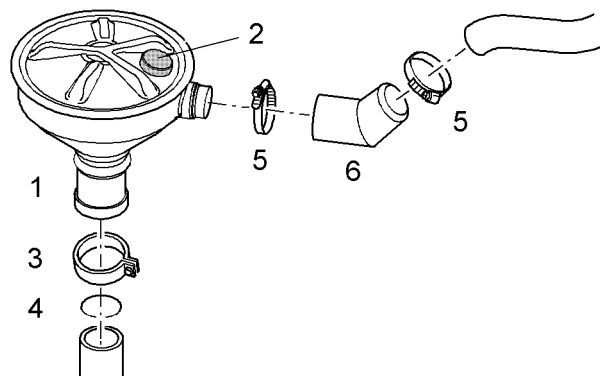

**Fig. 5-15** Replacing the oil separator

- |                  |              |
|------------------|--------------|
| 1 Oil separator  | 4 O-ring     |
| 2 Vent hole      | 5 Hose clamp |
| 3 Mounting clamp | 6 Hose       |

A damaged oil separator (eg. indented cover) may not function correctly.


- ▶ In the event of damage or when oil vapour emits from the vent hole **2**, replace the oil separator.
- ▶ Replace the oil separator every two years.

**To replace the oil separator:**

- ▶ Unscrew the mounting clamp **3**.
- ▶ Unscrew the hose clamp **5**.
- ▶ Push the hose **6** back.
- ▶ Remove the oil separator **1**.
- ▶ Insert a new O-ring **4** in the oil separator.
- ▶ Place the oil separator **1** on top and tighten the mounting clamp **3**.
- ▶ Push the hose **6** up.
- ▶ Tighten the hose clamp **5**.

## 5.6 Cooling system

### 5.6.1 Checking and cleaning the cooling system

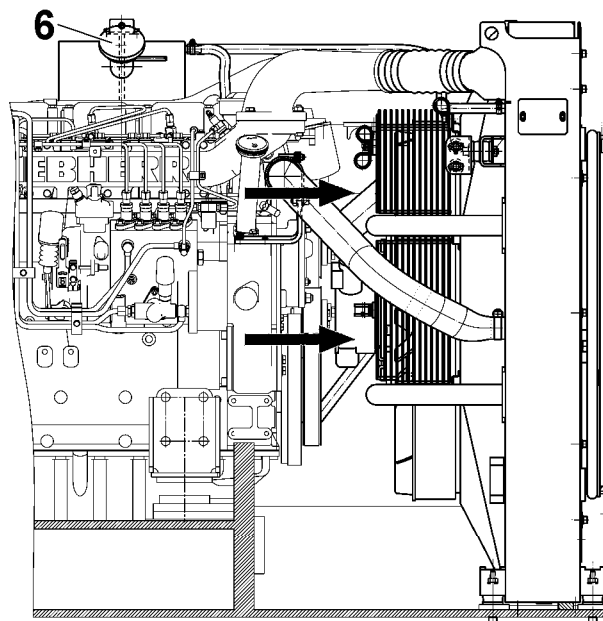

**Fig. 5-16** Cleaning the cooling fins

The machine has a combined oil-water cooler.

Optimal cooling can only be achieved when the cooler is kept clean.

- ▶ Check the engine, fan and cooler for damage and clean if necessary.
- ▶ If required, clean the cooling fins with compressed air or a steam jet (from inside out, see arrow).
- ▶ In case of leaks, change the pressure relief valve **6** (equalizing reservoir lock ring).
- ▶ Check the condition and seals on the connecting clips between the coolant cooler and engine as well as on the coolant hoses regularly.

## 5.6.2 Checking the coolant level



### **Danger!**

Risk of burning due to hot coolant.

The engine cooling system is hot and pressurized when at operating temperature.

- ▶ Avoid touching coolant or coolant-bearing parts.
- ▶ Only check the coolant level when the engine has cooled sufficiently.

- ▶ Turn the cover **6** a half turn.
- ▶ Relieve any pressure that may be present in this position. After balancing the pressure, slowly turn fully.

The coolant surface must always reach the bottom side of the plunged hose under the cover **6** of the top tank.

- ▶ Add coolant if necessary.
- ▶ Close the lid.
- ▶ After adding coolant, allow the engine to run for a short time with the heating switched on and monitor the coolant level once again.

## 5.6.3 Coolant antifreeze and anti-corrosion fluid

The system must be filled with antifreeze all year round.


Upon dispatch, the coolant contains antifreeze for temperatures up to -37 °C (this is equal to approx. 50 % antifreeze).

Volume: see lubricant chart

- ▶ Keep the concentration of anti-corrosion additive contained in the cooling system constant, particularly when refilling.
- ▶ Check this concentration each time larger amounts of coolant are lost or at regular intervals. If necessary, add anti-corrosion additives to the coolant.
- ▶ If, however, no coolant is lost, only change the coolant filter regularly.

## 5.6.4 Changing water filters

The water filter contains an anti-corrosion additive in paste form which assures the coolant's correct anti-corrosive characteristics.

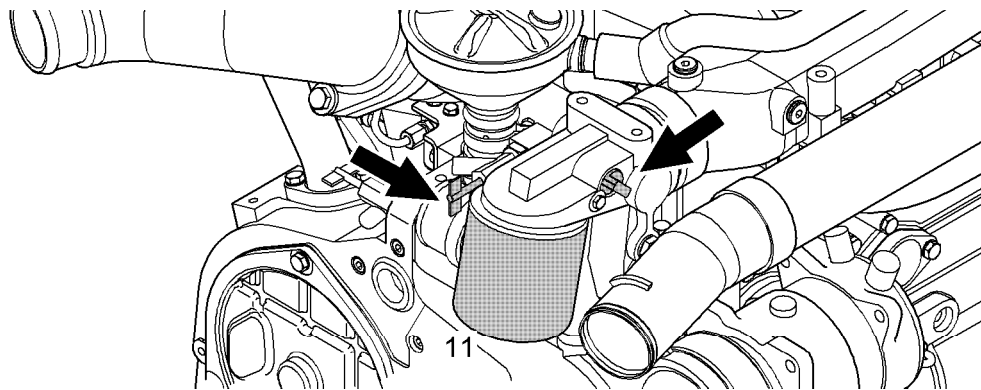

**Fig. 5-17** Water filter

**The water filter must be replaced every 500 operating hours:**

- ▶ Close the shutoff valves (arrows) on the filter housing.
- ▶ Unscrew the filter element.
- ▶ Oil the sealing ring on the new filter element lightly.
- ▶ Screw the new filter element on until the sealing ring is laying on the filter head.



**Note**

The filter element could be damaged.

- ▶ Do not use tools to tighten the filter element.
- ▶ Tighten the filter element **by hand** with a half turn.
- ▶ Open the shutoff valves again.


### 5.6.5 Changing the coolant



**Danger!**

Risk of burning due to hot coolant.

- ▶ Only change the coolant when the engine is cold.

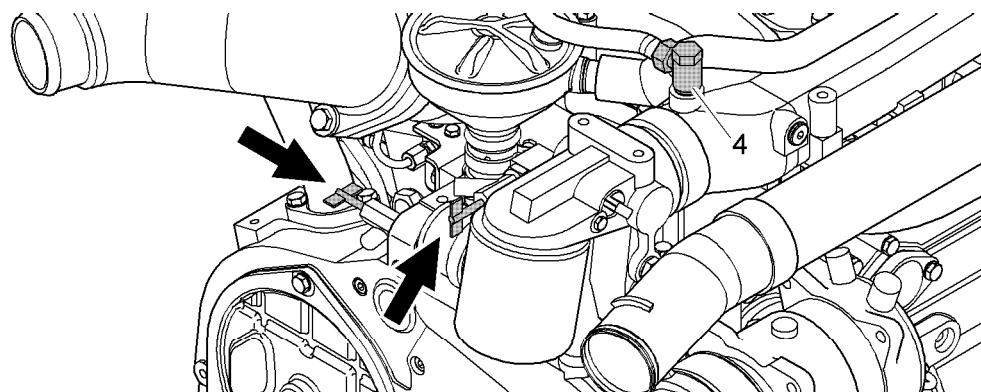

**Fig. 5-18** Cooling circuit shutoff valves


The following points should be noted when changing the coolant:

- Change the coolant in the entire coolant circuit at least every two years.
- For preference, change the coolant with the shutoff valves for the coolant circuit

closed.

- Bleed the coolant circuit when refilled.
- Coolant flow in the coolant circuit can only take place with the ignition key in the contact position.

## Draining the coolant

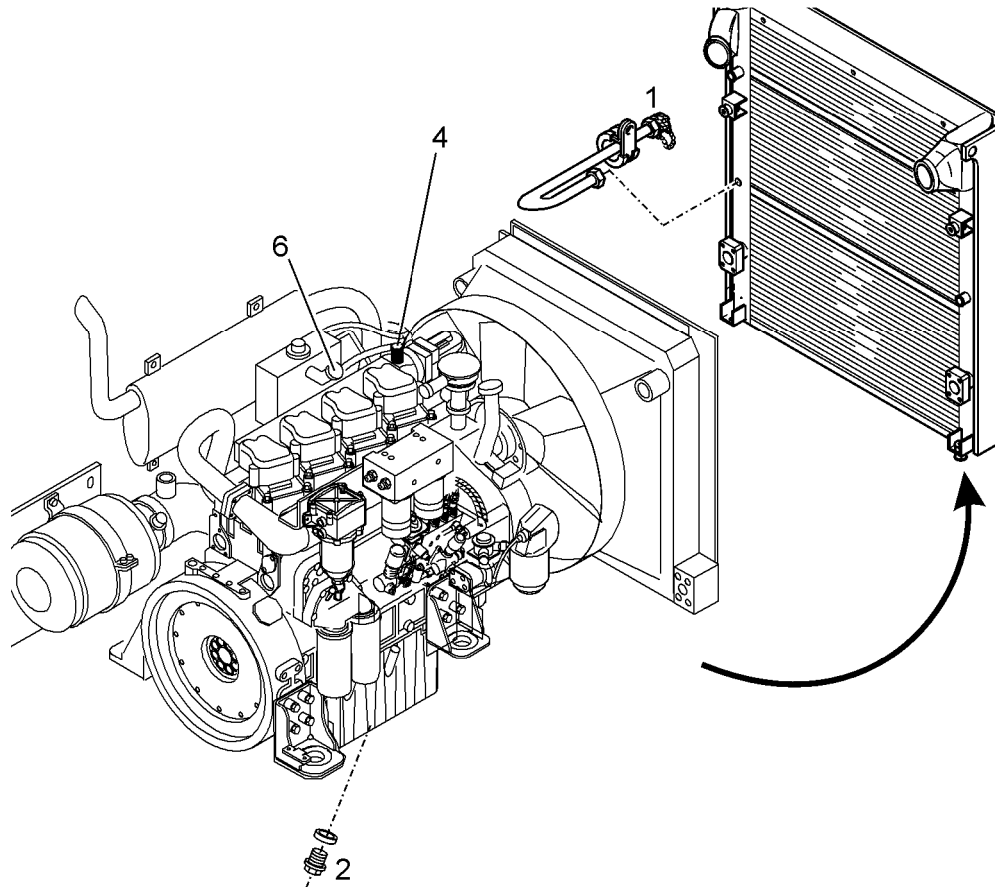


**Fig. 5-19** Draining the coolant

### To drain the coolant at the cooler:

- ▶ Open sealing cap **6** and drain valve **1** on the coolant cooler.
- ▶ Screw the drain hose supplied to the drain valve.
- ▶ Allow the coolant to drain into a suitable container.

### To drain the coolant at the diesel engine:

- ▶ Unscrew the drain valve **2** on the engine's oil cooler plate.
- ▶ Allow the coolant to drain into a suitable container.

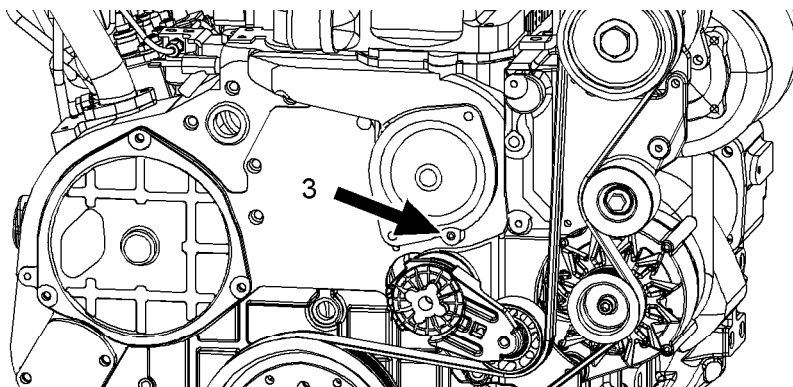

**Fig. 5-20** Cooling circuit drain plugs



### Caution!

To completely empty the engine (when deactivating the machine for a longer period etc.), the coolant must also be drained at the water pump.

- ▶ Unscrew the drain plug **3** on the water pump.
- ▶ Allow the coolant to drain into a suitable container.

### Refilling the coolant and bleeding the coolant circuit

- ▶ Close drain valve **1** on the coolant cooler.
- ▶ Close drain valve **2** on the engine.
- ▶ Close drain valve **3** on the water pump.
- ▶ Open the shutoff valves for the coolant circuit (siehe Fig. 5-18).
- ▶ Fully open the control valve on the heating unit.
- ▶ Open the fitting **4** on the water collecting line.
- ▶ Use the filler neck **6** to add coolant up to the bottom side of the plunged hose under the cover of the top tank.
- ▶ Close the bolt connection **4** as soon as coolant starts to flow out.
- ▶ Close the sealing cap again.
- ▶ Allow the engine to run loaded for approx. 20 minutes.
- ▶ If necessary, cover the cooling system partially so that the opening temperature of the thermostats is exceeded.
  - ↖ The overheating display must not actuate here.
  - ↖ The water temperature display on the monitoring screen must remain below the red area.
- ▶ The cooling system cover should be removed again if necessary.
- ▶ Allow the engine to continue to run at a low idle for approx. one minute.
- ▶ Check the coolant level in the equalizing reservoir again and refill with coolant if necessary.
- ▶ Open the sealing cap.
- ▶ Use the filler neck **6** to add coolant up to the bottom side of the plunged hose under the cover of the top tank.
- ▶ Close the sealing cap again.
- ▶ If the coolant level sensor actuates, check the coolant level (refill if necessary).


- ▶ Bleed as described above.

**Caution!**

The engine could be damaged.

- ▶ If the temperature or level display for the coolant level illuminates, bring the engine to a low idle immediately.
- ▶ Switch off the engine.
- ▶ Check the coolant level and refill with coolant if necessary.

### 5.6.6 Reversible fan drive (option).

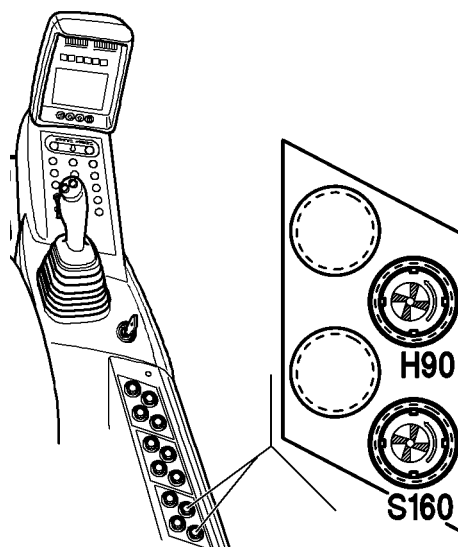

**Fig. 5-21** Reversible fan drive

On request, the machine can be equipped with the “*Reversible fan drive*” kit. This enables, at heavy dust use, to invert the direction of revolution of the cooler fan and allows an easy cleaning of the radiator core and of suction area of the fan.

Control is set using push button **S160**, and indicated true control light **H90** on the right control panel.

- With running diesel engine :
  - ▶ Depress push button **S160** and keep it depressed.
    - ↪ fan will be progressively stopped (duration : ~15 s.).
    - ↪ the fan will start rotating in opposite direction.
    - ↪ control light **H90** lights up.
  - ▶ bring the diesel engine to high idle while keeping the push button **S160** depressed.
  - ▶ let the engine run at high idle for approx. one minute, (three minutes at the maximum).
  - ▶ release the push button **S160**.
    - ↪ control light **H90** switches off.
    - ↪ fan will be progressively stopped (duration : ~15 s).
    - ↪ the fan will rotate in normal direction.
  - ▶ check the condition of the cooler. If necessary repeat the cleaning procedure.



**Danger !**

Risk of injury !

- ▶ To check the condition of the cooler, the diesel engine must be shut down.
- ▶ Check the cooler only if the diesel engine is sufficiently cold.

## 5.7 Fuel system


**Danger!**

Risk of explosion!

- ▶ Avoid naked flame when working on the fuel system and when refuelling.
- ▶ Do not smoke.
- ▶ Only work on the diesel engine when it is switched off.

### 5.7.1 Refuelling



#### Fuel filler cap

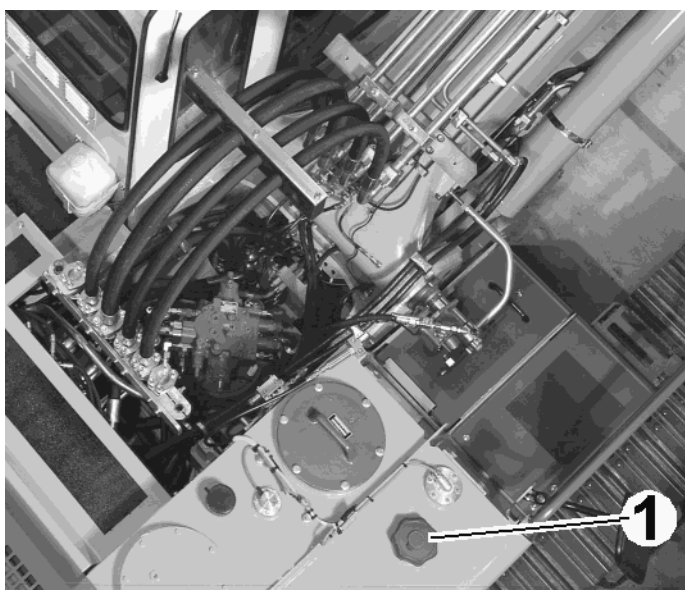

**Fig. 5-22** Fuel filler cap

- ▶ Unscrew fuel filler cap 1
- ▶ Add fuel via the filler sieve.

## 5.7.2 Electrical refuelling pump (optional extra)

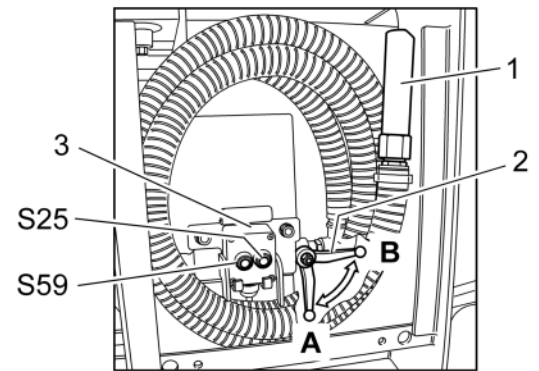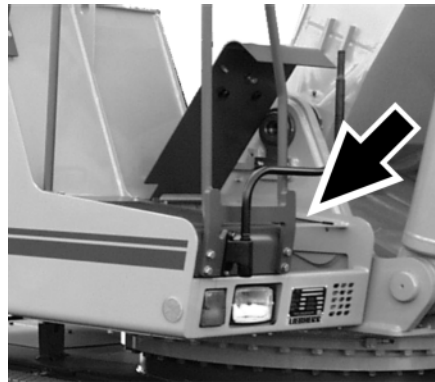

**Fig. 5-23** Electrical refuelling pump

The electrical refuelling pump is used to put fuel into the machine's fuel tank.

It is located under the hatch on the front end of the hydraulic oil and fuel tank. The operating unit **3** is removable.

### Proceed as follows when refuelling and stowing the hoses:

- ▶ Insert the free end of the intake hose **1** in the fuel supply tank.
- ▶ Open stop cock **2** (position **B**).
- ▶ Use switch **S25** (green) to switch on the refuelling pump in order to pump fuel into the machine's tank.
  - ↪ The pump switches off automatically as soon as the maximum fill level is reached.
  - ↪ The refuelling pump can be switched off at any time using switch **S59** (red).




### Caution!

The pump must not be permitted to run dry.

- ▶ Ensure that the fuel level does not drop below the intake level of the intake hose.
- ▶ Close stop cock **2** (position **A**).
- ▶ Ensure that no fuel remains in the intake hose **1** before stowing.
- ▶ Roll up the intake hose **1** and place it in the stowing compartment.
- ▶ Close the hatch again.

### 5.7.3 Draining the fuel tank

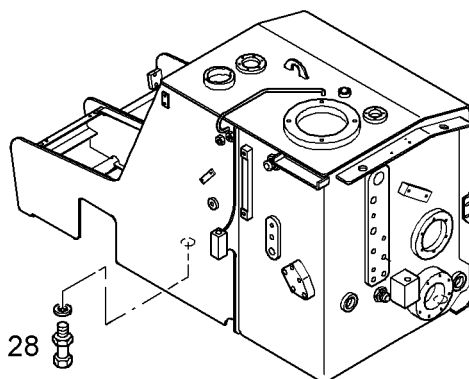

**Fig. 5-24** Draining the fuel tank

#### To drain the fuel tank and the fuel system daily:


- ▶ Place a suitable container underneath.
- ▶ Unscrew the drain valve **28** found on the underside of the fuel tank.
- ▶ Drain off the water until fuel starts to come out.
- ▶ Screw drain valve **28** closed again.

If conditions of use and fuel quality permit, the maintenance interval can be increased to one week.



#### Note!

To reduce the formation of condensate in the tank, keep the fuel level as high as possible.




Display **P3** indicates the fuel level.

When the red bar **P3.1** illuminates, a low reserve quantity is still in the tank.

- ▶ In the event of a low fuel level, refill the tank before starting to work.

### 5.7.4 Emptying and cleaning the fuel tank

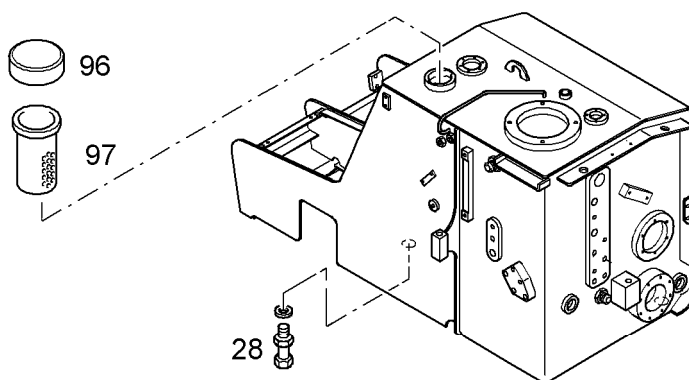


**Fig. 5-25** Fuel tank

The tank floor is fitted with a drain valve **28**.

- ▶ Place a suitable container underneath.

- ▶ To drain off the water, unscrew the drain plug on the drain valve **28** by two turns until fuel which contains no water comes out.
- ▶ Retighten the plug.
- ▶ To empty, remove the fuel filler cap **96** and the drain valve **28** and collect the fuel in a suitable container.
- ▶ Check the fuel tank and fill strainer **97** regularly for contamination.
- ▶ If necessary, replace the fill strainer **97** and / or wash out the fuel tank.

### 5.7.5 Draining and changing fuel filter cartridges

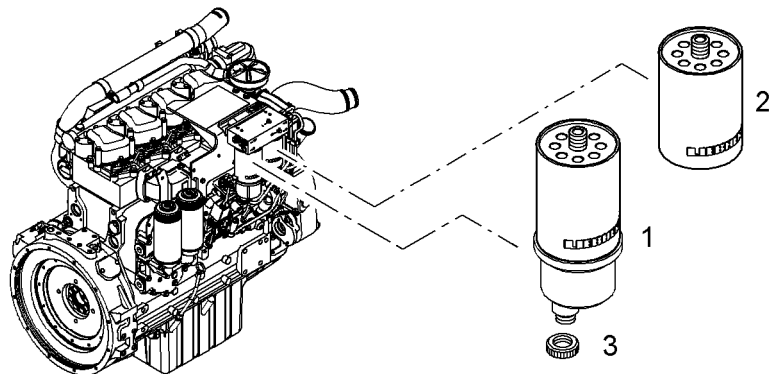

**Fig. 5-26** Fuel filter cartridges

1 Fuel preliminary filter    2 Fuel fine filter    3 Screw cap

#### To empty the fuel filter cartridge water separator:


- ▶ Place a suitable container underneath.
- ▶ Unscrew the screw cap **3** of the fuel preliminary cartridge **1** daily.
- ▶ Drain off the water until fuel starts to flow out.
- ▶ Tighten the plug.

#### To change fuel filter cartridges:

- ▶ Unscrew fuel filter cartridge.
- ▶ Oil the rubber sealing ring on the new fuel filter cartridge.
- ▶ Screw fuel filter cartridge on.
- ▶ Bleed the fuel system.

Intervals: see control and maintenance chart.

## 5.7.6 Venting the fuel system

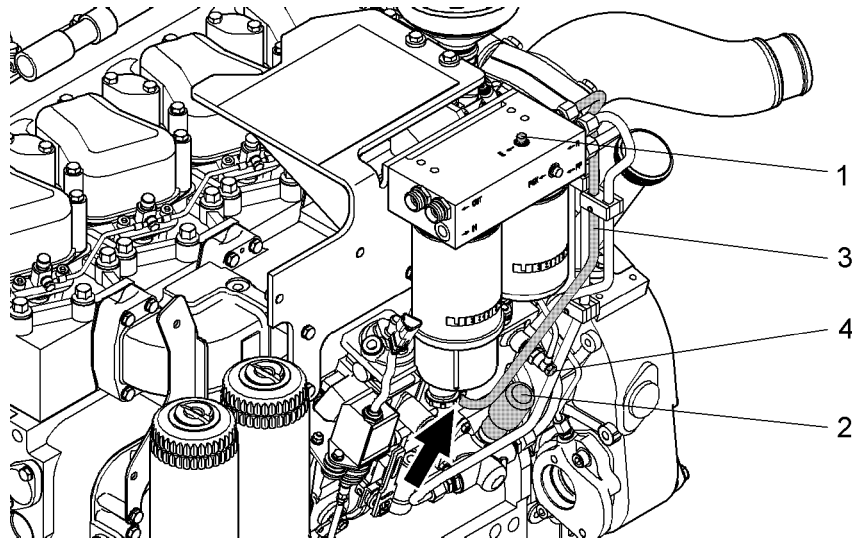

**Fig. 5-27** Venting the fuel system

### To vent the fuel system filter:

- ▶ Unscrew vent screw **1** (E ←) on the filter panel and unscrew 2-3 thread pitches.
- ▶ Operate hand pump **2** until fuel flows out densely.
- ▶ Tighten the vent screw **1** on the filter panel.

### To vent the fuel lines:


- ▶ Place a suitable container underneath.
- ▶ Unscrew fuel line **3** from the fuel filter on the injection pump (see arrow).
- ▶ Operate hand pump **2** until fuel flows out densely.
- ▶ Retighten fuel line **3**.

### To vent the overflow valve:

- ▶ Place a suitable container underneath.
- ▶ Unscrew overflow valve **4**.
- ▶ Operate hand pump **2** until fuel flows out densely.
- ▶ Retighten overflow valve **4**.

### To vent injection lines:

- ▶ Place a suitable container underneath.
- ▶ Unscrew the union nuts of the injection lines at the injection valves.
- ▶ Operate the starter until fuel flows out densely.
- ▶ Tighten union nuts.
- ▶ Start the engine.
- ▶ If the engine does not start, repeat the venting procedure.

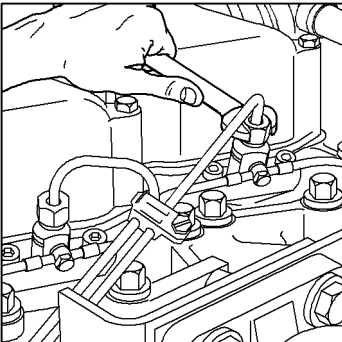


## 5.8 Dry air filter

Maximum engine protection against early wear due to dust is only possible if the air filter is serviced at regular intervals.

The dry air filter is designed in such a way that it offers maximum protection and long maintenance intervals.

It is not recommended that filter elements be washed out for safety reasons.

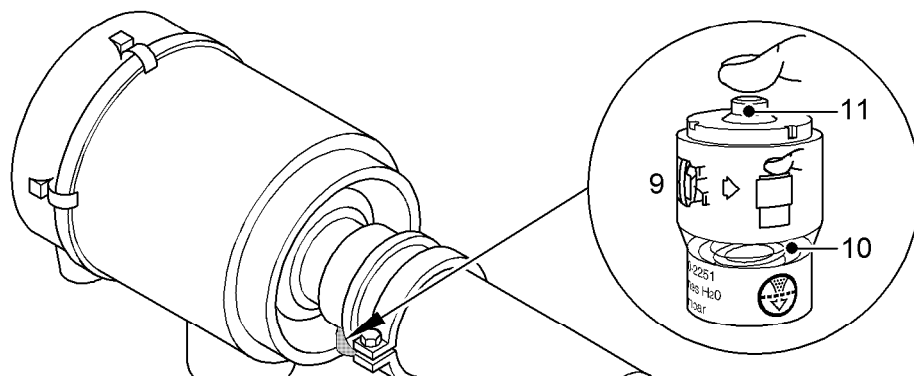


**Fig. 5-28** Vacuum gauge

The vacuum gauge **9** stores the maximum intake low pressure reached on the filter outlet while the diesel engine is operating.

The appearance of the red display strip in alarm window **10** indicates that the maximum permissible low pressure of 50 mbar has been reached.

- ▶ Replace the main element.
- ▶ Press the reset button **11** to clear the stored low pressure reading.

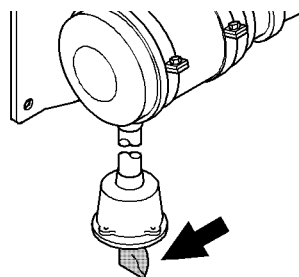

**Fig. 5-29** Dust discharge valve extractor slot

- ▶ Push the extractor slot on the dust discharge valve up by hand once a week to ensure that it does not stick due to humidity and dust.

### 5.8.1 Changing the main element




**Caution!**

Only replace the main element when the maximum permissible intake low pressure has been reached, or at least once a year.

Installing and removing the main element too often could damage the seals between the filter element and the filter housing.

- ▶ Only replace the safety insert after every third change of the main element, or at least once a year.
- ▶ Before installing a new insert, clean the seal and the seal contact face in the housing carefully.

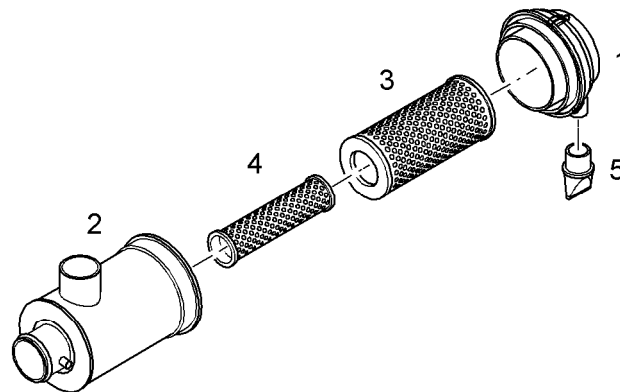

**Fig. 5-30** Changing the filter cartridges

- |   |                      |   |                      |
|---|----------------------|---|----------------------|
| 1 | Filter housing cover | 4 | Safety element       |
| 2 | Filter housing       | 5 | Dust discharge valve |
| 3 | Main element         |   |                      |

- ▶ Remove the cover **1** with the engine switched off.
- ▶ Remove the contaminated main element **3**.
- ▶ Clean the interior of the air filter housing and the sealing surface in the housing using a damp cloth.



**Caution!**

Dirt could enter the engine intake!

- ▶ Do not clean the housing by blasting out with compressed air.
- ▶ Insert the new main element and ensure that it is sealed and positioned correctly.
- ▶ Close the filter housing **2** with cover **1**.

## 5.8.2 Changing the safety element



**Note!**


Replace the safety element after replacing the main filter cartridge three times or at least once a year.

Replace the safety element immediately in the event that a visual check has shown that the safety element is very dirty.

- ▶ Remove the main element **3**.
- ▶ Remove the safety element **4**.
- ▶ Clean the interior of the air filter housing carefully using a damp cloth.
- ▶ Clean sealing surfaces in the housing and inspect for any damage.
- ▶ Insert the new safety element **4** carefully.

- ▶ Insert the main filter cartridge **3** and ensure that it is sealed and positioned correctly.
- ▶ Close the filter housing **2** with cover **1**.

### 5.8.3 Monitoring the filtered air line

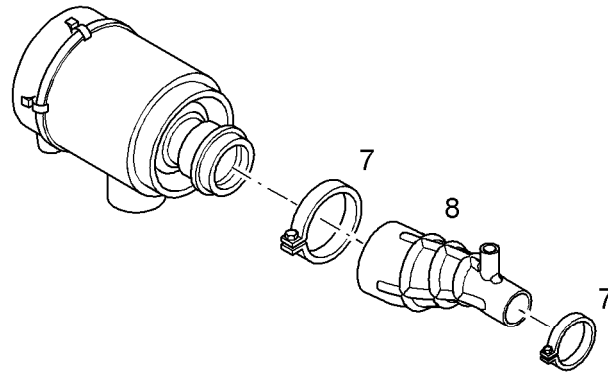


**Fig. 5-31** Monitoring the filtered air line

- ▶ Monitor the filtered air line between the filter outlet and the engine intake pipe **8** for damage and leaks each time the filter element is replaced.
- ▶ If necessary, retighten the tensioning clamp screws **7**.

### 5.8.4 Bleeding the hydraulic cylinders

A cylinder must be bled after having changed the cylinder or after having worked on the cylinder (Sealing change,...) or after having worked on the cylinder hydraulic circuit (Hose change, ...).

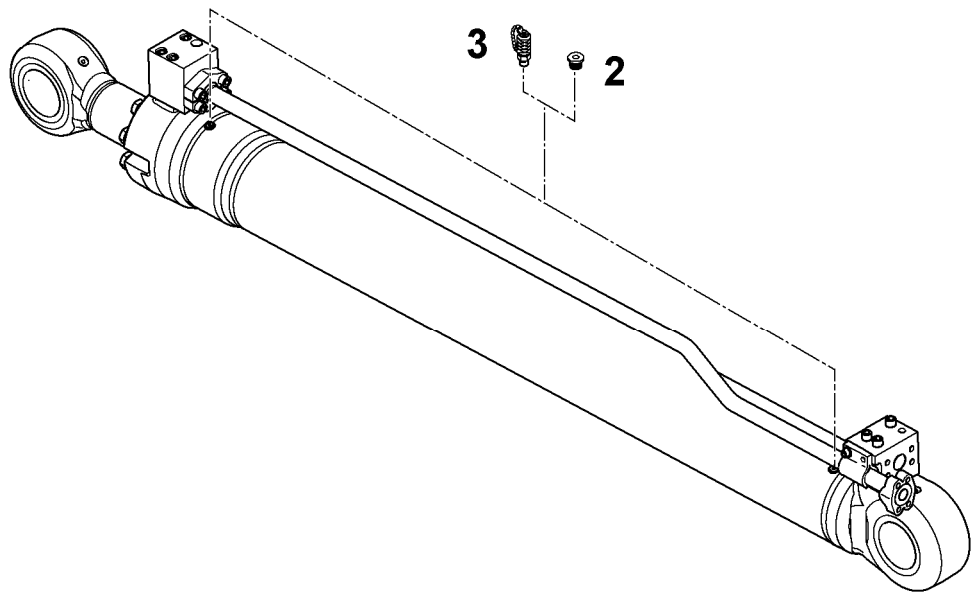

**Fig. 5-32** Hydraulic cylinder

- 2** Locking screw for bleeding
- 3** Test point



Hydraulic cylinders equipped with locking screws for bleeding **2** must be bled following the procedure 1 and Hydraulic cylinders, which are not equipped with these locking screws for bleeding must be bled following the procedure 2.

#### Procedure 1

- ▶ Unscrew the locking screws for bleeding **2** both side.
- ▶ Screw two test points **3** instead of the locking screws and attach an test hose on each test point.
- ▶ Make the the engine run at low idle (800-900 tr/mn).
- ▶ If possible, make the attachment move in order to have the side to be bled in the higher position.
- ▶ Lightly actuate the cylinder. It is recommended to bleed first the side, which does not necessitate a displacement of the cylinder (for example, if the cylinder is already retracted, first actuate the cylinder retraction in order to bleed the cylinder rod side).
- ▶ Redo this action until oil without air flows out of the test hose.
- ▶ Supply the other side of the cylinder and bleed it.
- ▶ Switch off the engine, remove the test hoses and replace the test points **3** by the locking screws **2**.
- ▶ Perform the procedure 2.

#### Procedure 2


- ▶ Make the the engine run at low idle (800-900 tr/mn).
- ▶ Retract slowly the cylinder until stop and do not actuate the movement any more. Then extend slowly the cylinder until stop and do not actuate the movement any more. Repeat the operation 5 times.



#### Danger!

If you do not follow this procedure, it can cause diesel effect (explosion of air bubbles) in the cylinder.

### 5.8.5 Bypass oil filter for hydraulic circuit (option)

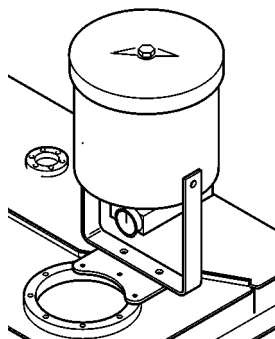

**Fig. 5-33** Bypass oil filter for hydraulic circuit

The machine can be equipped with an additional oil filter. This filter can be mounted in the bypass of the hydraulic circuit between control valve block - return and the hydraulic tank. This filter can although be mounted in lubrication circuit of the engine. This additional oil filter is fixed on the hydraulic tank. During operation a small quan-

tity of oil flows threw this filter in the bypass of the main return filter.

This filter is designed to drain water by absorbing the water contained in the oil. Monting bypass oil filter is especially recommended when using environmentally acceptable hydraulic fluids because these fluids have a greater capacity to absorb water than mineralhydraulic fluids.



**Note !**

!Using this filter does not relieve the operator of the responsibility of draining the water condensation from the hydraulic tank.


The filter element must be replaced every time the return filter element is changed. , but at least every six months.



**Danger!**

A fine stream of liquid can penetrate the skin when under high pressure and cause serious injury.

► Before working on the hydraulic system, always remove the pressure.

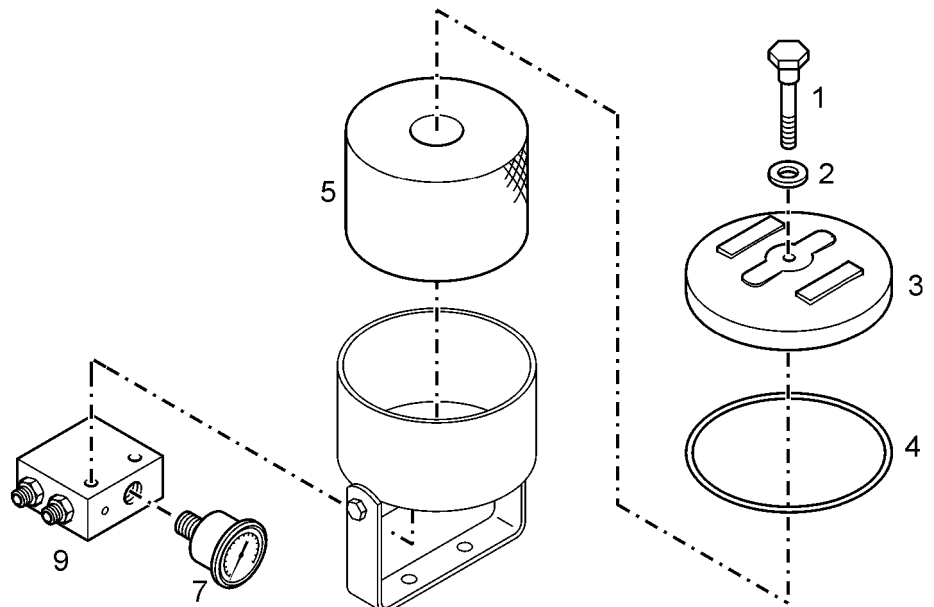


**Fig. 5-34** Change of the filter element

- |                  |               |
|------------------|---------------|
| 1 Screw          | 2 Washer      |
| 3 Cover          | 4 Gasket ring |
| 5 Filter element |               |

- Loosen the screw 1, remove the cover 3 and pull out the old filter element 5.
- Insert a new filter element, clean the cover 3 and put in a new gasket ring 4.
- Put on the cover 3 eand retighten the screw 1.

**5.8.6 Return oil filter for hydraulic hammer (option)**

In case of use of an hydraulic hammer, it is strongly advised to install an extra return oil filter.

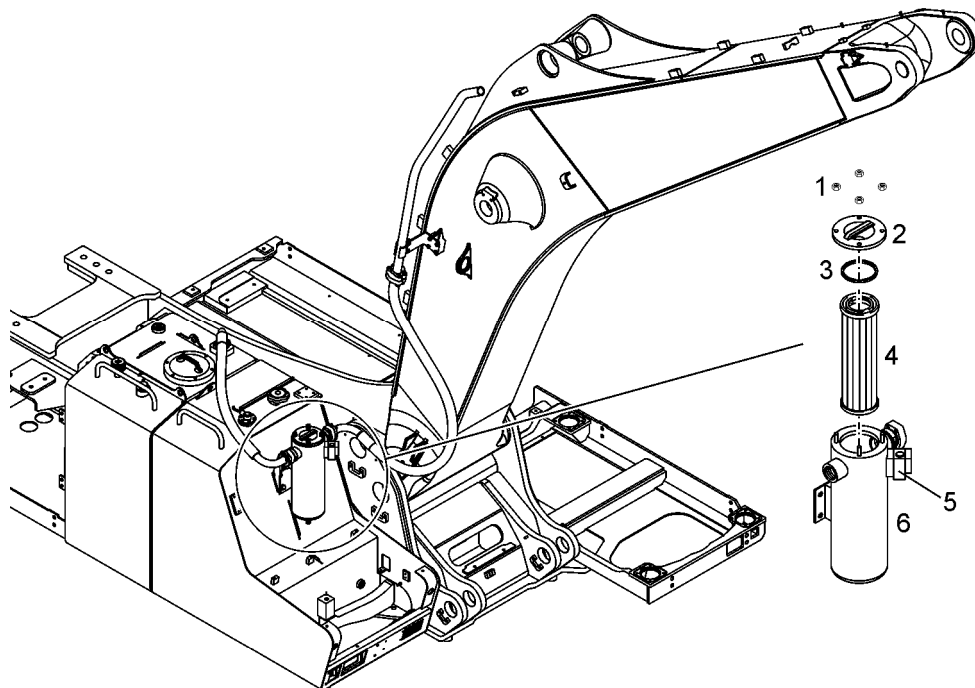

**Fig. 5-35** Return oil filter for hydraulic hammer

- |                  |                    |                           |
|------------------|--------------------|---------------------------|
| 1 Nuts           | 3 Seal kit         | 5 Contamination indicator |
| 2 complete cover | 4 Filter cartridge | 6 Filter housing          |

The return oil filter for hydraulic hammer is mounted on the fuel tank. The interval of maintenance depends on the indication given by the contamination indicator **5**.

If the indicator is green, the filter works correctly.


If the indicator is red, the filter is clogged and the filter unit has to be replaced.

#### Replacement of the filter cartridge

- The hydraulic system must be depressurized.
- ▶ Unscrew the four nuts **1** on the filter cover and lift out cover **2**.
- ▶ Remove the used filter cartridge **4**.
- ▶ Check the seal **3** and replace it if necessary.
- ▶ Carefully clean off any dirt sticking to the magnetic plug.
- ▶ Insert a new filter cartridge **4**.
- ▶ Put the seal **3** and the cover **2**.
- ▶ Coat the stud bolts of the filter housing **6** with anti-corrosion grease and tighten the nuts **1**.

## 5.8.7 Servicing the hydraulic cylinder

### Checking the condition of the piston rod mount

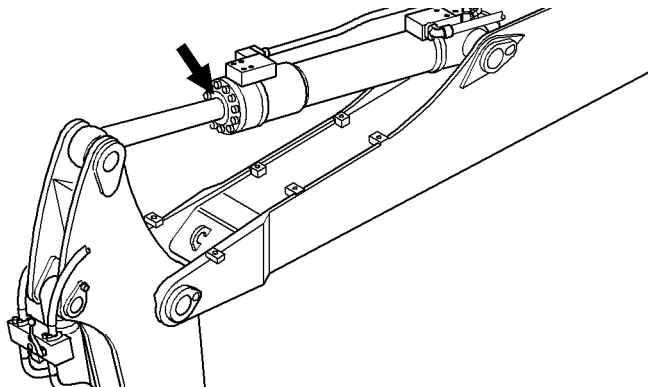


**Fig. 5-36** Piston rod mount



#### Note

When a leak appears on the piston rod mount of a hydraulic cylinder (see arrow), the sealing kit must be replaced by a LIEBHERR fitter.

### Protecting the piston rods

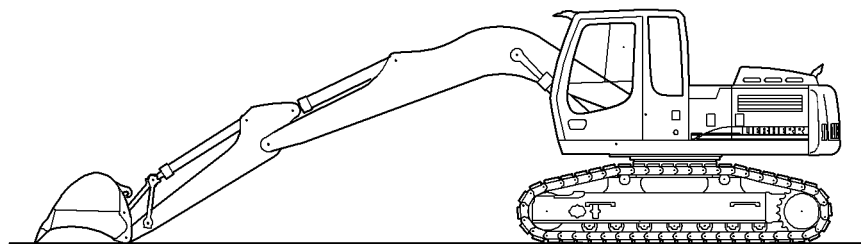


**Fig. 5-37** Machine with piston rods drawn in

When the machine is out of service for more than 4 weeks and particularly for transportation by sea, the following measures must be taken:

- ▶ Position or transport the machine in such a way that the piston rods are fully drawn into the cylinders.
- ▶ Cover any loose piston rods with a thick layer of non-corrosive anti-corrosion fluid.  
Grease quality: see "Lubricating and operating materials"
- ▶ For sea transportation, check the condition of the piston rods once more after loading.
- ▶ Additionally, cover piston rods with anti-corrosion fluid if a cylinder only has a low stroke for certain work, meaning that the piston rod is not regularly moistened with hydraulic oil (eg. cylinder on slewing arm when working over ground).
- ▶ Check the condition of hydraulic cylinders which are not moved a great deal regularly.

### 5.8.8 Replacing hydraulic hoses

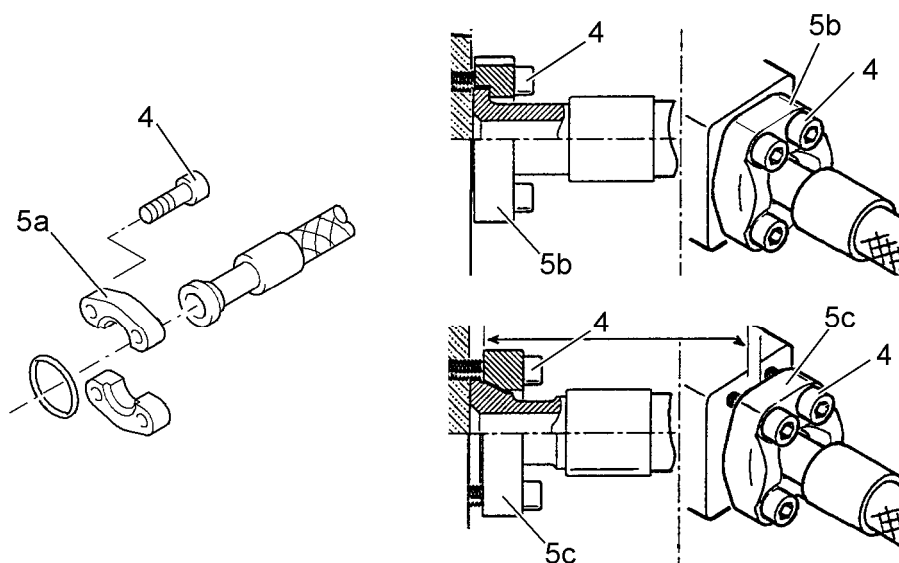

**Fig. 5-38** High pressure hose with SAE fitting



**Danger!**

A defective hydraulic hose can cause accidents and injuries.

- ▶ Replace defective hydraulic hoses (bubbles, moisture, damaged top edge etc.) immediately.
- ▶ Install new hoses in such a way that torsion loading is avoided.
- ▶ Ensure that the hydraulic hose is not twisted when mounting.

Installed high pressure hoses with SAE connections have a nominal diameter of 16, 20, 25, 32 or 40 (5/8", 3/4", 1", 1"1/4, or 1"1/2).

You must tighten the mounting screws of the SAE fittings with the following tightening torques.:

Size of screw 4	Torque value in Nm - Quality 10.9		
	Half flanges 5a	Flat flange 5b	Conical flange 5c
M8	31	/	/
M10	62	45	65
M12	108	70	110
M14	172	120	180
M16	264	170	250
M20	350	250	450

**Tab. 5-14** Tightening torques for SAE fittings - Quality 10.9

Size of screw 4	Torque value in Nm - Quality 8.8
	Half flanges 5a
M8	22
M10	44
M12	76
M14	122
M16	187

**Tab. 5-15** Tightening torques for SAE fittings - Quality 8.8

## 5.9 Oil changes on components


### 5.9.1 General information

- The machine must be standing level.
- ▶ Switch off the engine.
- ▶ Wait briefly until the oil has collected in the oil sump.
- ▶ Drain off the oil (preferably when oil is at operating temperature)
- ▶ Add the oil.
- ▶ Check the oil level.

Oil quality and quantity: see lubricant chart.

Change intervals: see lubrication and maintenance chart.

## 5.9.2 Slewing gear transmission – oil change

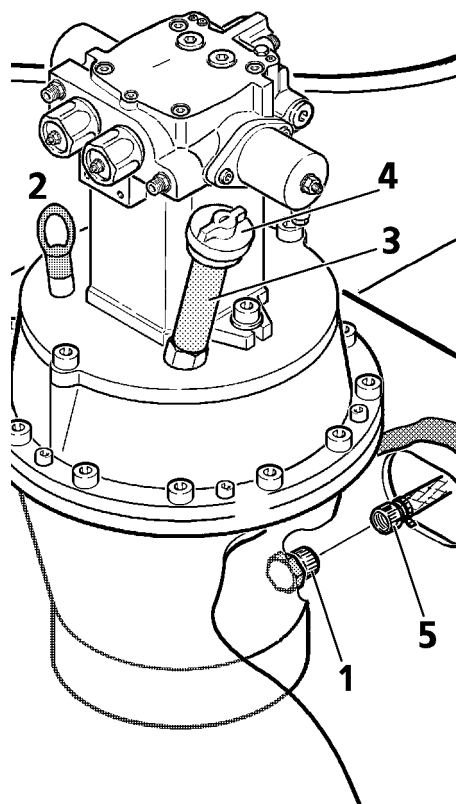

**Fig. 5-39** Changing the oil on the slewing gear transmission

- |   |               |   |              |
|---|---------------|---|--------------|
| 1 | Drain valve   | 3 | Fulling pipe |
| 2 | Control gauge | 4 | Sealing cap  |
|   |               | 5 | Drain hose   |


### To drain the oil:

- ▶ Remove the sealing cap 4.
- ▶ Unscrew the cover of the drain valve 1 via the opening on the revolving platform's base plate.
- ▶ Screw the drain hose provided 5 to the drain valve and let the oil flow out into a suitable container.
- ▶ Remove the hose 5.
- ▶ Screw the cover of the drain valve 1 back on.

### To add the oil:

- ▶ Add the oil via the fulling pipe 3 until the level reaches the highest marking of control gauge 2.
- ▶ Screw the cover 4 back on.

### 5.9.3 Travelling gear - changing the oil

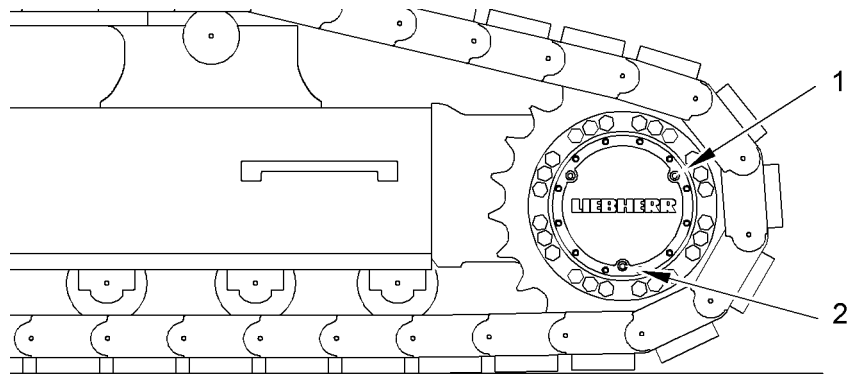

**Fig. 5-40** Travelling gear - adding and draining oil

- Before draining the oil, the drive unit must be operated until one sealing plug is positioned exactly vertical to the centre axle of the transmission (position 2).

#### To drain the oil:

- Ensure that you have a suitable oil drainage container to hand.
- ▶ Place the container beneath the drive unit.
- ▶ Remove sealing plug 1.
- ▶ Remove sealing plug 2.
- ↳ The oil drains into the container.

#### To add the oil:

- ▶ Screw in sealing plug 2.
- ▶ Add the oil until the level reaches the bore hole 1.
- ▶ Screw in sealing plug 1.


## 5.10 Running gear

The running gear is maintenance-free until the regeneration of the treads or the cylinder or until all running gear parts are completely worn.

The lifetime design of the support rollers, track rollers and leading wheels increases the running gear's lifetime and metal gaskets make it insensitive to dirt.




### 5.10.1 Checking the running gear component mountings

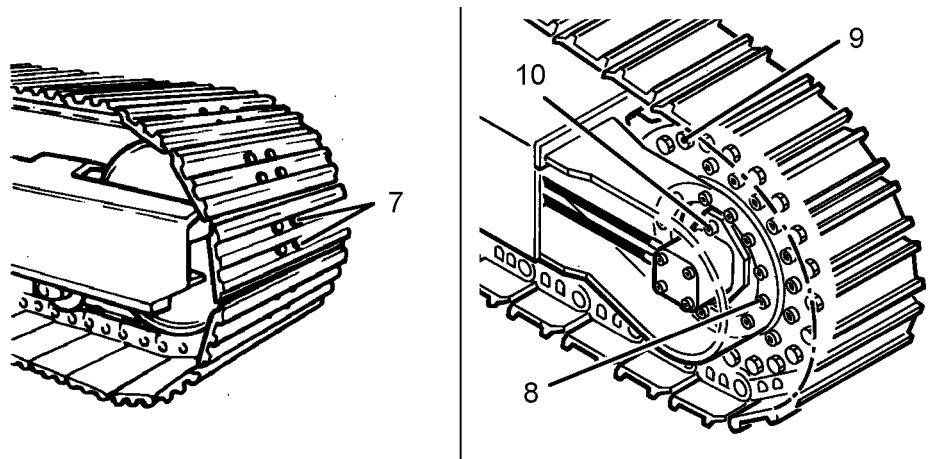

**Fig. 5-41** Running gear component mountings

- ▶ Carry out regular checks for loose mounting screws on the base plates and travelling mechanisms.
- ▶ Monitor tightening torques.
  - Mounting screws **7** on base plates: **520 Nm**
  - Mounting screws **8** on the travelling mechanism: **560 Nm**
  - Mounting screws **9** on the tumbler wheel: **560 Nm**
  - Mounting screws **10** on the hydraulic motor: **280 Nm**


### 5.10.2 Monitoring the crawler tension

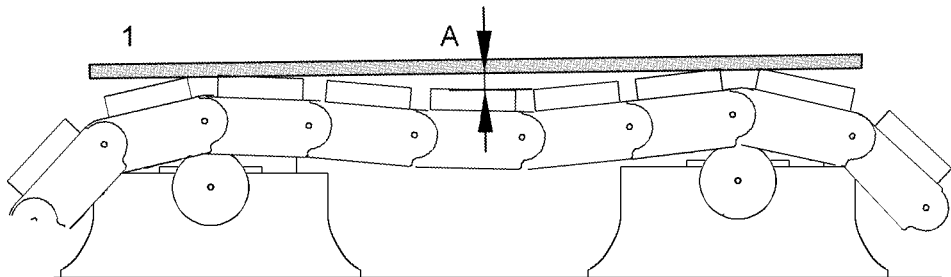

**Fig. 5-42** Monitoring the crawler tension


- ▶ Relieve the crawlers by driving the machine forwards and backwards.
- ▶ Place the measuring rod **1** in the area between the support rollers
- ▶ Measure distance **A** between the measuring rod lower edge.
  - ↪ The crawler should, under operating conditions, sag **15 to 20 mm** between the support rollers.
  - ↪ Retension the crawlers if necessary.

### 5.10.3 Retensioning the crawler

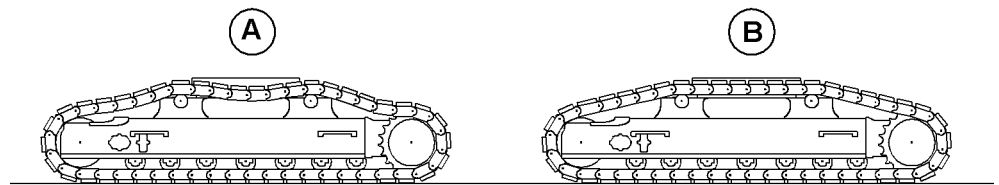

**Fig. 5-43** Crawler when insufficiently (A) and correctly (B) tensioned.

With normal wear on the running gear, it is necessary to check the crawler tension regularly and retension the crawler if necessary.

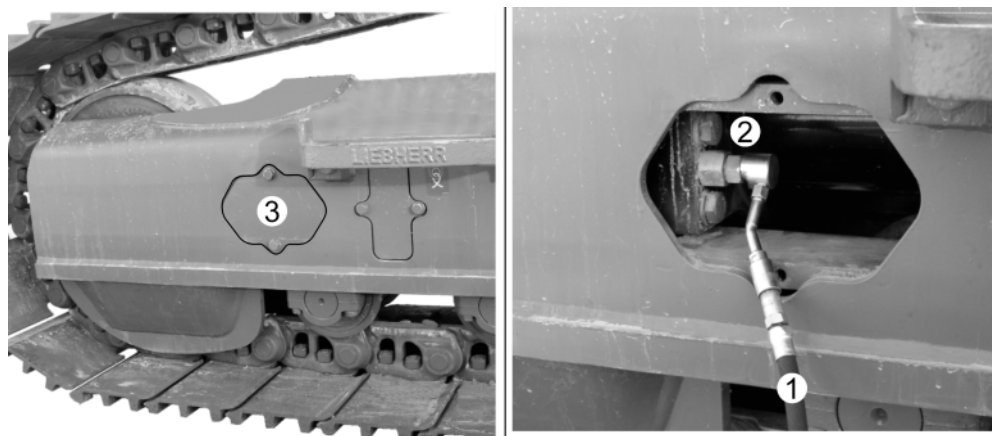

**Fig. 5-44** Retensioning the crawler

- ▶ Remove the cover **3** on the longitudinal beam of the chassis.
- ▶ Screw high pressure hose **1** onto the manual grease gun.
- ▶ Through the opening, connect the high pressure hose **1** with the lubricating nipple **2** of the grease tension jack.
- ▶ Inject grease until the crawler is sufficiently tensioned.
- ▶ Monitoring the crawler tension

### 5.10.4 Releasing the crawler tension



**Danger!**

Risk of injury due to sudden dropping of the crawler and spraying grease.

- ▶ When releasing the tension on the crawler, keep your head away from the track roller frame.
- ▶ Carefully unscrew lubricating nipple **2** (siehe Fig. 5-44) by several thread pitches until the grease oozes out of the nipple's annular groove.
- ▶ Tighten lubricating nipple **2** as soon as the desired crawler tension is attained.
- ▶ After the adjustment procedure, drive the machine forwards and backwards and monitor the crawler tension once again.

### 5.10.5 Cleaning the running gear

Do not operate the machine if larger stones, pieces of wood or metal, wires or cables are trapped in the running gear.

Dried or frozen mud and stones or other foreign bodies in the running gear parts could result in considerable damage to the machine if the machine is operated or an attempt is made to free the machine using engine power.


- ▶ In sub zero temperatures, set the machine on boards to prevent the crawlers becoming frozen to the subsoil.



#### Caution!

To avoid causing considerable damage to the frozen machine, never use force to tear it free.

- ▶ A frozen crawler can be freed by carefully heating the base plates.

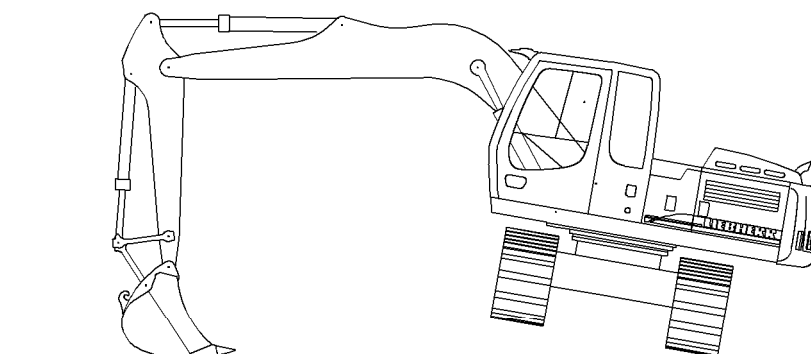

*Fig. 5-45 Raising the machine*



#### Caution!

The machine could slide away or back.

- ▶ Once you have supported the machine, prop it securely with wooden beams.
- ▶ Before setting down the machine, clean any very dirty parts of the running gear.
- ▶ Clean sand and dirt off the sliding surfaces on the tensioning units and grease.
- ▶ By using the work equipment to support the machine at the side, one side of the chassis can be raised to clean the running gear (siehe Fig. 5-45).

## 5.11 Electrical system

### 5.11.1 Notes on the electrical system



#### Danger!

Risk of injury due to formation of sparks.

- ▶ Avoid sparks and naked flame when charging batteries or working on the batteries.
- ▶ Always wear protective goggles and gloves.

- ▶ Check that the machine's electrical system is functioning correctly at regular intervals.
- ▶ Burnt-out fuses and bulbs should be replaced immediately once the cause of the defect has been rectified.
- ▶ Rectify defects such as loose connections, abraded cables or badly fastened clamps immediately.
- ▶ Disconnect the batteries when working on the electrical system or when carrying out electric arc welding on the machine.



**Danger!**

Risk of injury due to formation of sparks.

- ▶ Disconnect the negative terminal (-) first and connect it last.


### 5.11.2 Main battery switch



**Caution!**

Take particular care with machines with built-in independent heating.

- ▶ Only switch off the main battery switch when the independent heating's run-on is over.

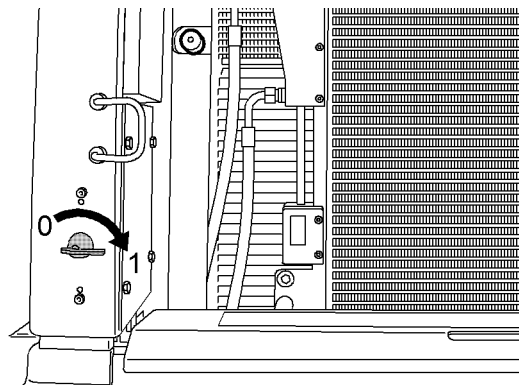

**Fig. 5-46** Main battery switch

- ▶ Before starting any work on the electrical system, including welding work on the machine, switch the main battery switch to position **0**.
- ▶ When washing the machine, cover the electrical units (particularly the alternator, generator, cabling, electronic components and measured value sensor) to prevent water penetrating.
- ▶ When cleaning the engine with a water / steam jet, do not subject electrical measured value sensors such as oil pressure switches to any direct jets.
  - ↪ If this happens, moisture could penetrate and lead to contact corrosion and the failure of the measuring function.
  - ↪ Oil pressure switches are not watertight due to the necessary presence of membrane ventilation.



**Note!**

Batteries can become flat if the machine is out of service for longer periods.

- ▶ Before laying up the machine for longer periods, switch the main battery switch to position **0** (off).

### 5.11.3 Battery care

The battery must always be kept clean to ensure that it is able to function perfectly.

- ▶ Particular care should be taken to clean the pole ends and cable terminals **A** regularly and to then cover them with a thick layer of acidproof grease (siehe Fig. 5-47).




#### Danger!

Bent rubber hoses on the central gas outlet increase the risk of explosion! The hydrogen contained in the batteries should not be allowed to build up in the accumulator box and must be able to escape via the rubber hoses. The central gas outlet hoses must be routed without kinks.

- ▶ Check the condition of the hoses **B** regularly, particularly after installing a battery (siehe Fig. 5-47).


The fluid level in the cells should be 10 to 15 mm above the top of the plate. Only distilled water is to be used for any refilling.

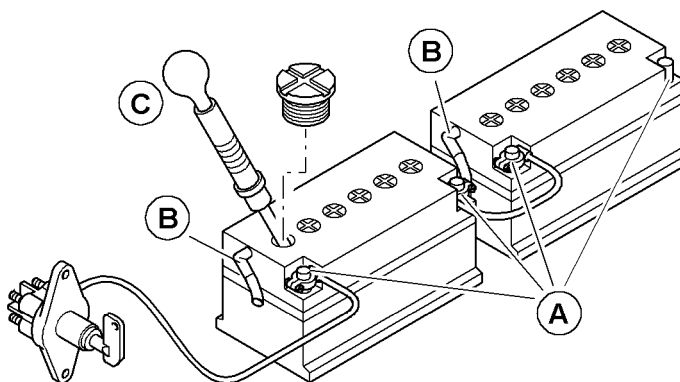

**Fig. 5-47** Battery care

- ▶ From time to time, measure the acid concentration **C** using an acid tester. When the battery is fully charged, the **unit weight is 1.28 kg/l (31.5° Bé)**.
- ▶ If the acid tester displays a lower value, the batteries is virtually flat and should be charged if necessary.

### 5.11.4 Slip ring assembly (optional extra)

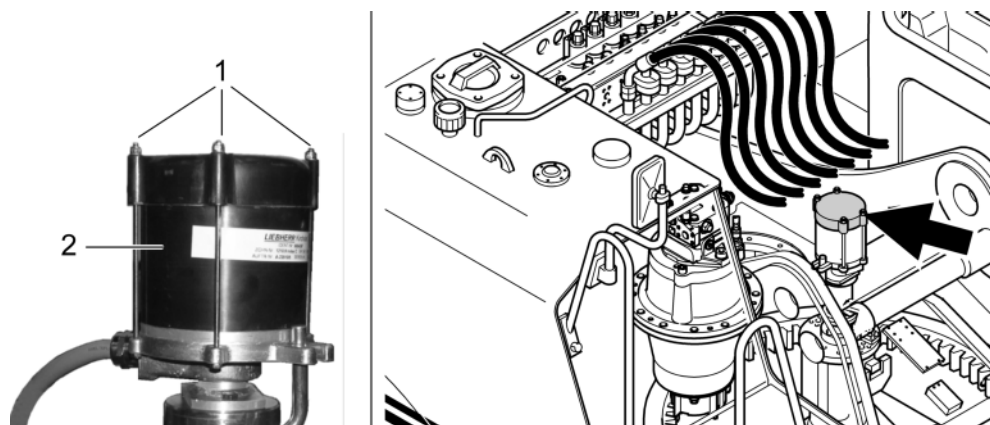

**Fig. 5-48** Slip ring assembly

Slip ring assemblies are sensitive to moisture. An oxide layer can form on the conductive surfaces, which restricts the flow of current. Electrical consumers in the chassis will no longer be supplied with sufficient current, which can lead to malfunctions.


To prevent this, it is recommended that the following work is carried out every 500 operating hours.

- ▶ Unscrew the lock nuts **1**.
- ▶ Remove the housing **2** of the slip ring.
- ▶ Clean the oxidation off the slip ring assembly (use cleaning spray if necessary).
- ▶ Replace the damaged (corroded) cable lugs.
- ▶ Spray “Cramolin” contact spray on all slip ring elements.
- ▶ Replace the housing **1**.
- ▶ Fasten the housing **1** evenly using lock nuts **2**.


## 5.12 Heating/air-conditioning system

The machine has a combined heating / air-conditioning system as standard.

### 5.12.1 Recirculated and fresh air filters

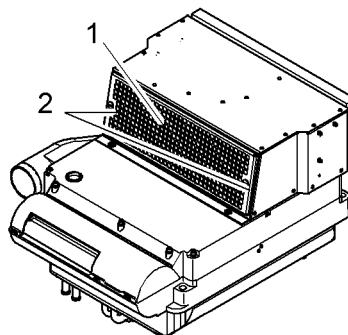

**Fig. 5-49** Recirculated air filter

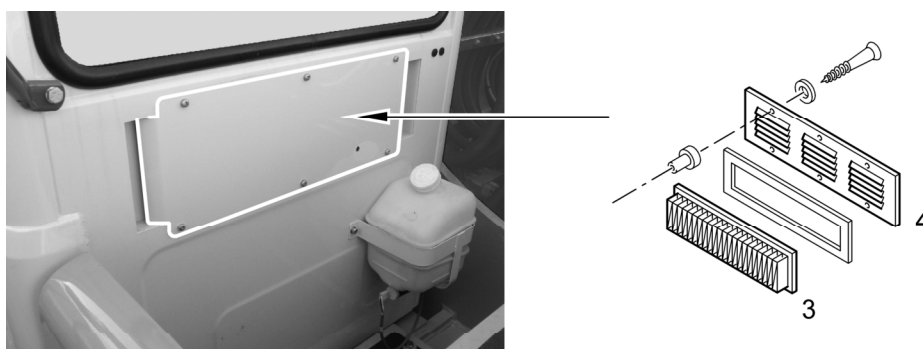

**Fig. 5-50** Fresh air filter

The air flow in the heating / air-conditioning system is reduced when the filters are dirty and this frequently results in the system icing up or shutting down.

- Remove and clean the recirculated and fresh air filter **1** and **3** every 500 operating hours.
- Shorten cleaning intervals when working in heavy dust conditions.
- Do not operate the machine, even briefly, without these filters, since the heat exchanger **6** will otherwise quickly become blocked (siehe Fig. 5-51).

#### To clean and change the recirculated and fresh air filters:

- ▶ Push the backrest of the operator's seat forwards to remove the recirculated air filter **1**.
- ▶ Open the quick-release fasteners **2** by a quarter turn.
- ▶ Remove the recirculated air filter **1**.
- ▶ Remove the deflector **4**.
- ▶ Remove the fresh air filter **3**.




#### Note!

- ▶ Never wash the filter elements with hot water or a steam jet.
  - ▶ If damaged or in a bad condition, replace the filter elements.
- 
- ▶ Blow out the filter elements **1** and **3** using compressed air or clean in cold or luke-warm water.

### 5.12.2 Heating system

Carry out the following maintenance work on the heating system each year before the start of the heating period:

- Check the entire coolant circuit for leaks.
- Retighten the connection points for the coolant circuit, the hose connections on the heat exchanger, the seals on the shutoff valves and the hose clamps.
- Only operate the system with DCA 4 anti-corrosion fluid / antifreeze in the coolant.

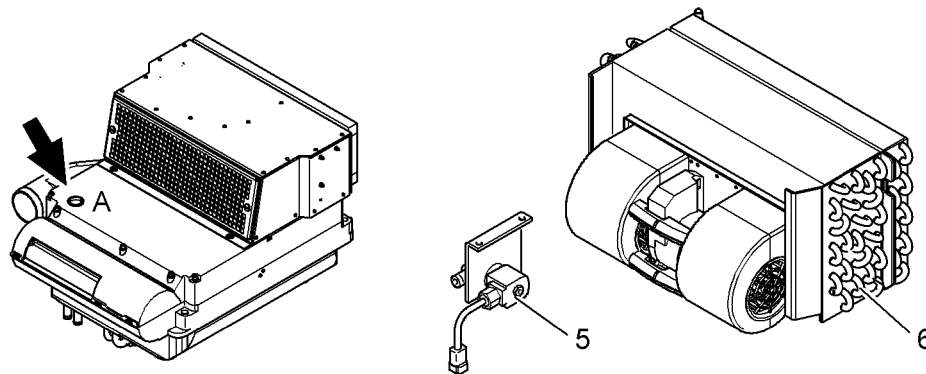

**Fig. 5-51** Heating unit with solenoid valve

#### To vent the heating system:

- ▶ To vent, unscrew the red cap of the vent valve over opening **A** (see arrow).
- ▶ Push in the valve to allow the air to escape.

#### To clean solenoid valve 5:

- ▶ Annually, before the start of the heating period, remove and clean solenoid valve **5** (Y46) for the hot water supply.
- ▶ Also clean the solenoid valve if heating performance is not sufficient.
- ▶ Rinse out the solenoid valve membrane with water.
- ▶ Also ensure that the equalizing hole on the membrane is not blocked with dirt.

#### To check the heat exchanger:

- ▶ Check the heat exchanger plates **6** annually for damage.
- ▶ Blow out with compressed air if dirty.
- ▶ Align the plates if necessary.

### 5.12.3 Air-conditioning system

Switch on the air-conditioning system for approx. 10 minutes every 2 or 3 weeks, regardless of the season.

During the operating period, the following maintenance work is to be carried out every 500 operating hours:



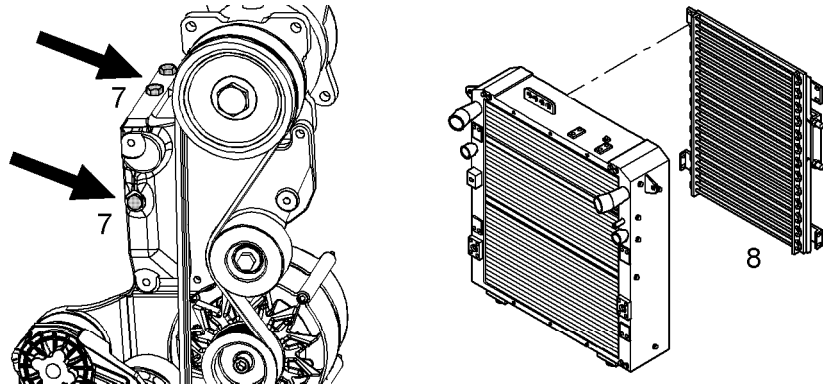


Fig. 5-52 A/C compressor (left) and capacitor (right)

**To check the capacitor:**

- ▶ Check the capacitor **8** for contamination.
- ▶ If necessary, fold down the capacitor **8** and blow out with compressed air from the inside (blower end) out.
- ▶ Ensure that the capacitor plates are clean.

If heavily contaminated, overpressure forms in the chiller circuit and the air-conditioning system switches off automatically.

**To check the A/C compressor:**

- ▶ Tighten the mounting screws **7** on the A/C compressor and the bracket on the engine.
- ▶ Check the condition of the compressor drive belt.

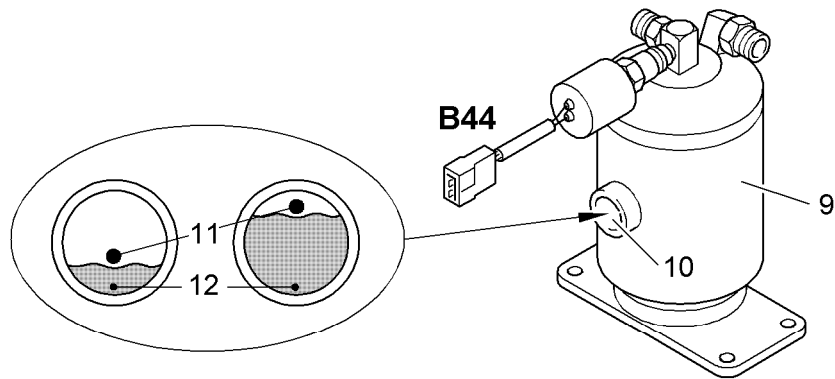


Fig. 5-53 Dryer-accumulator unit

**To check the dryer-accumulator unit:**

- ▶ With the diesel engine running and the air-conditioning system switched on, check the refrigerant level in the inspection glass **10** of dryer-accumulator unit **9**.



**Note!**

If there is insufficient refrigerant, the white float **11** lays at the bottom of the inspection glass.

- ▶ If the cooling effect is diminishing, have the system refilled by a refrigeration engineer.


- ▶ Determine the degree of moisture of the desiccant in dryer-accumulator unit **9**.
- ▶ To do this, observe the colour of the indicator pearl **12** in the inspection glass.

If the pearl is orange, the degree of moisture in the coolant circuit is OK. If, however, the pearl is not coloured, the dryer-accumulator unit is saturated with moisture.

- ▶ Change dryer-accumulator unit **9** immediately.
- ▶ Perform a visual check on the condition of dryer-accumulator unit **9**.
- ▶ If it is observed that dryer-accumulator unit **9** is rusted or damaged (e.g. on the panel fastening or on the hose connection), replace dryer-accumulator unit **9** (pressure tank).

In the two cases referred to above and at least once a year, have the dryer-accumulator unit **9** replaced by a fitter trained in refrigeration engineering.

The coolant circuit must be emptied, checked for leaks and refilled. Check for abrasion, replace and if necessary retighten the hose connections on the hoses.

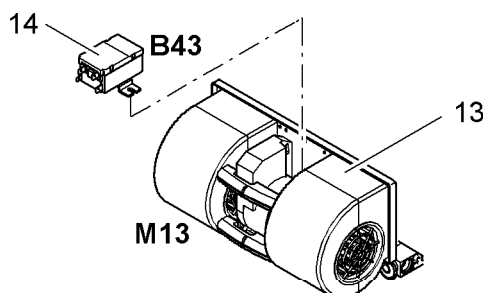

**Fig. 5-54** Fan motor on the heating/air-conditioning device

#### Additional maintenance work:

The following maintenance work must also be carried out at least once a year by a fitter trained in refrigeration engineering:

- ▶ Check the function of the fan motor **13** (M13).
- ▶ Check the function of the ventilation flaps on the heating / air-conditioning system.
- ▶ Check the electrical connections for correct positioning (good contact).
- ▶ Check the electrical lines for abrasions.
- ▶ Check the defrost thermostat **14** (B43) in the evaporator (function, correct positioning and for damage).
- ▶ Check the function of the pressure switch **B44** on the dryer-accumulator unit **9** (siehe Fig. 5-53).

## 5.13 Greasing the machine

### 5.13.1 Changes in the lubrication circuit

Before you make any changes to the lubrication system (for example when changing the attachment configuration), always check with a LIEBHERR mechanic first.

Never remove a line and close off an outlet, which is not being used, or the whole lubrication system would be blocked.

Only plug an outlet after the line has been removed from the distributor and the necessary changes have been achieved at the corresponding distribution elements.

This applies as well for main distributor X as for secondary distributors Z.


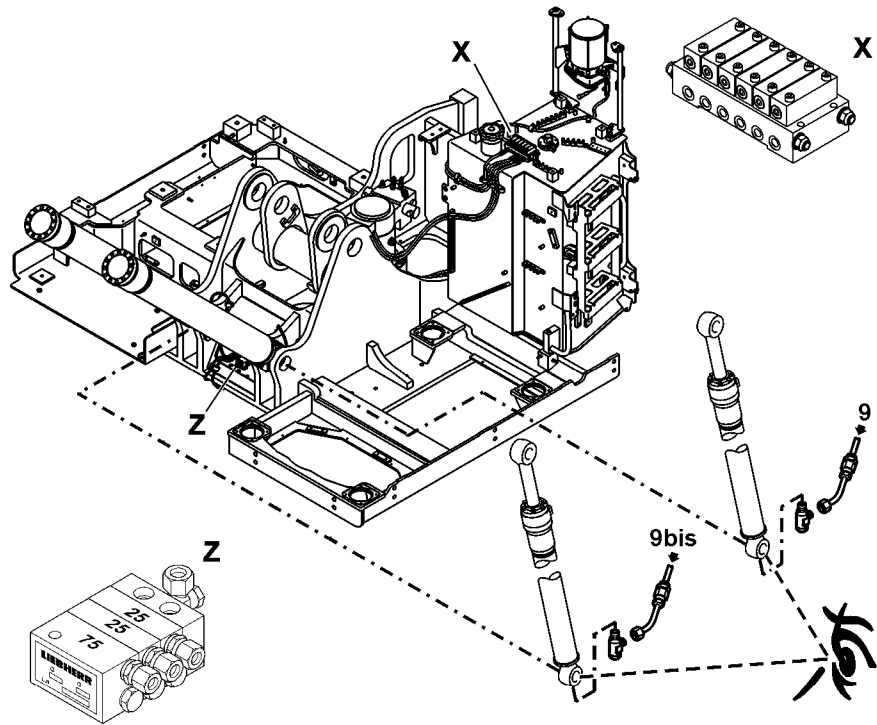


Fig. 5-55 Centralized lubrication circuit

### 5.13.2 Centralised lubrication system for uppercarriage and attachment

The machine is equipped with a central greasing system which saves considerable time during daily greasing. All oiling points on the upper carriage (ball rim bearing, slewing gear pinion) and all bearing points on the equipment up to and including the ground-end tilting cylinder are connected to the greasing system.

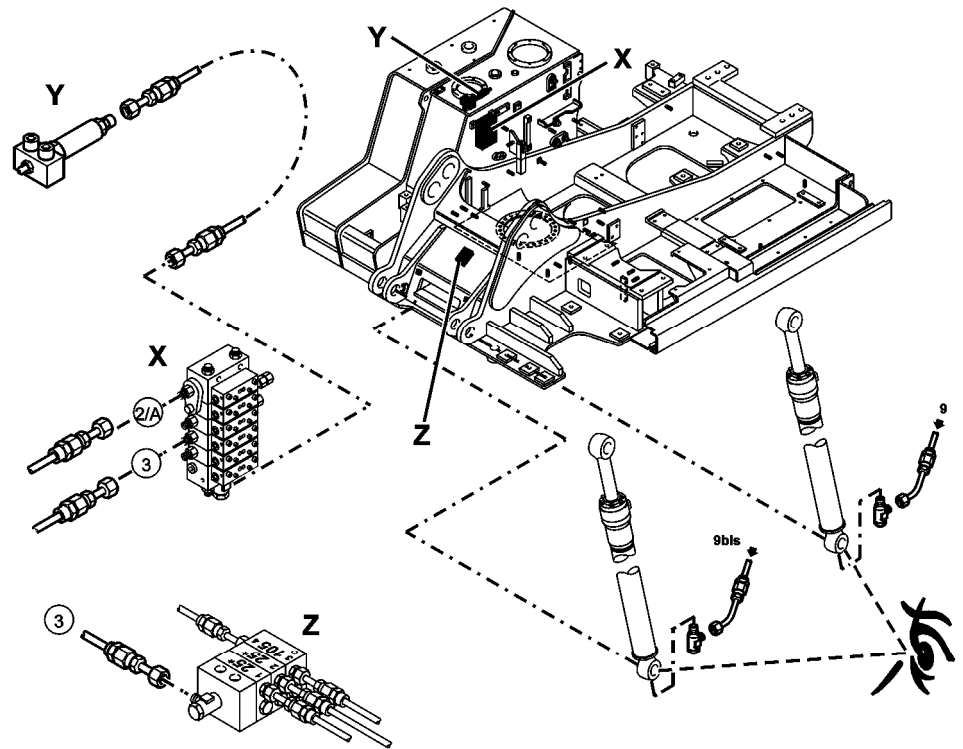

**Fig. 5-56** Centralised lubrication system


The central lubricating nipple **Y** is located on the side of the fuel tank.

- ▶ Press in on the central lubricating nipple **Y** using the manual grease gun provided in the toolbox to lubricate until clean grease runs out the bearing points **9** and **9bis**.

In normal use, each oiling point must be greased weekly.

When the machine is working hard, eg. in material that causes wear, underwater or on multiple shifts, greasing must be carried out on a daily / per shift basis.

Grease quality: see lubrication chart

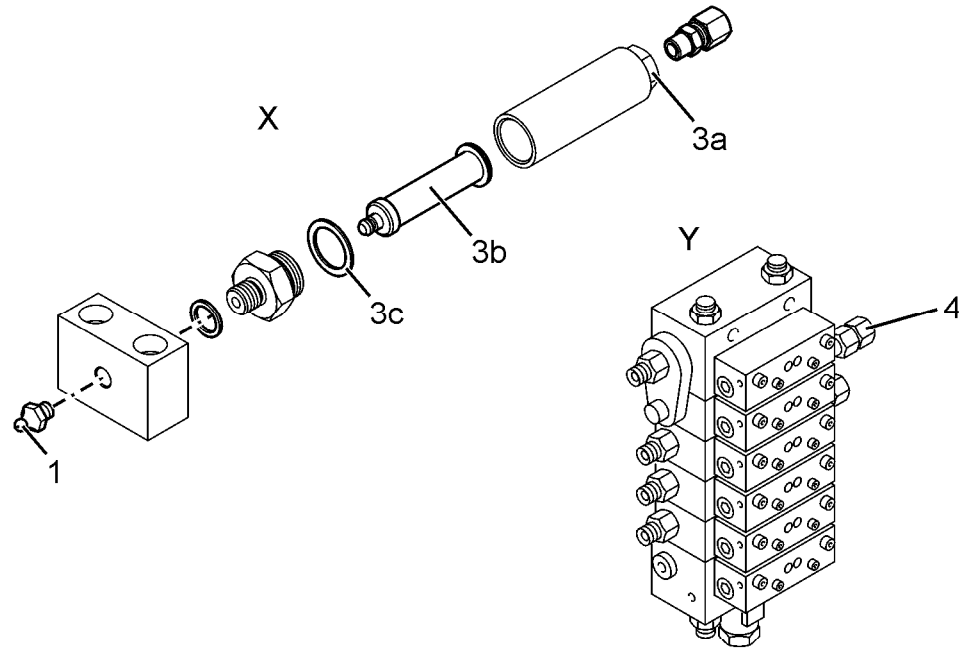

**Fig. 5-57** Monitoring pin on the main distributor and grease filter

When greasing, the grease delivery can be checked with the continual up and down movement of the monitoring pin 4. If the monitoring pin 4 is not moving, the following defects are possible:

- Blockage or pinching of a supply line.
- When very cold, the use of a grease which is too viscous.
- Grease filter on the central lubricating nipple is contaminated.

▶ Find and rectify the cause of the problem immediately.

Cleaning of the grease filter

- ▶ Disconnect the grease line at filter output
- ▶ Unscrew the filter housing using the hexagon area 3a and pull out the filter element 3b.
- ▶ Clean the filter element and reinstall the filter parts.
- ▶ Make sure the gasket ring 3c is seated correctly and tighten the filter housing to 80 N.m.

### 5.13.3 Standard manual lubrication

The machine is equipped with several lubrication points : swing ring teeth and ball

bearing race, attachment .

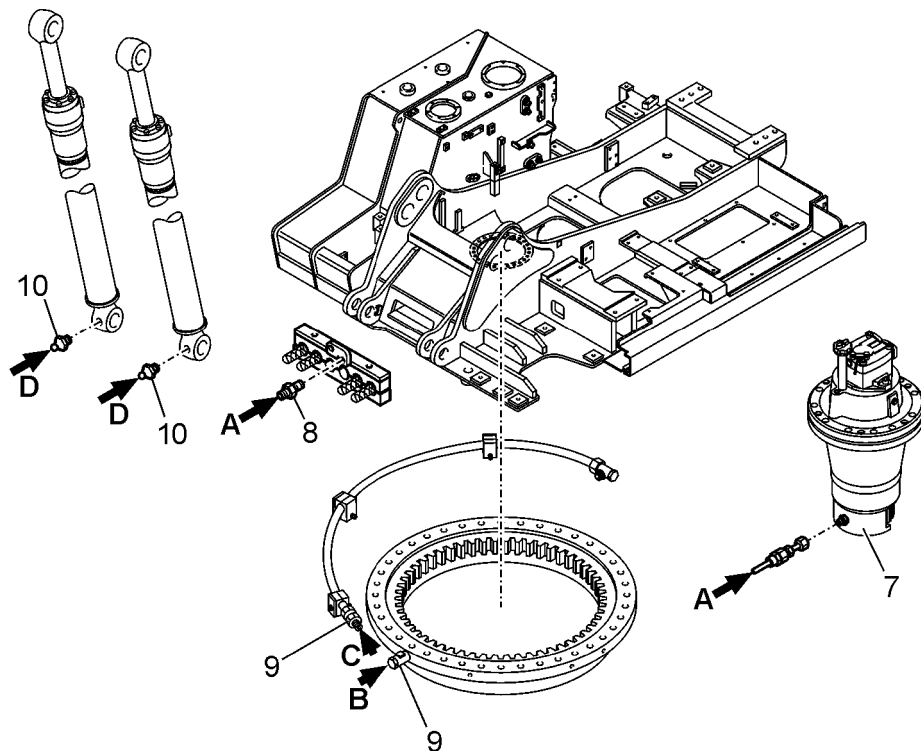


Fig. 5-58 Standard manual lubrication

### Lubrication of the swing ring teeth

The housing 7 around the pinion of the swing gear contains all the necessary lubrication reserves for the swing ring teeth lubrication.

The line A feeds the greasing point.

- ▶ To lubricate, connect a grease gun to the grease point 8 on the right side of the upperdeck, pump the grease gun about 20 times and then turn the uppercarriage by 360°.

In normal use, each oiling point must be greased weekly.

When the machine is working hard, eg. in material that causes wear, underwater or on multiple shifts, greasing must be carried out on a daily / per shift basis.

Grease quality: see lubrication chart

### Lubrication of the ball bearing race

The lubrication of the ball bearing race is done via the lines B and C.


- ▶ To lubricate, connect a grease gun to the two grease points 9 fixed on the swing ring and pump the grease gun about 10 times on each grease point.

In normal use, each oiling point must be greased weekly.

When the machine is working hard, eg. in material that causes wear, underwater or on multiple shifts, greasing must be carried out on a daily / per shift basis.

Grease quality: see lubrication chart

## Lubrication of attachment bearing points

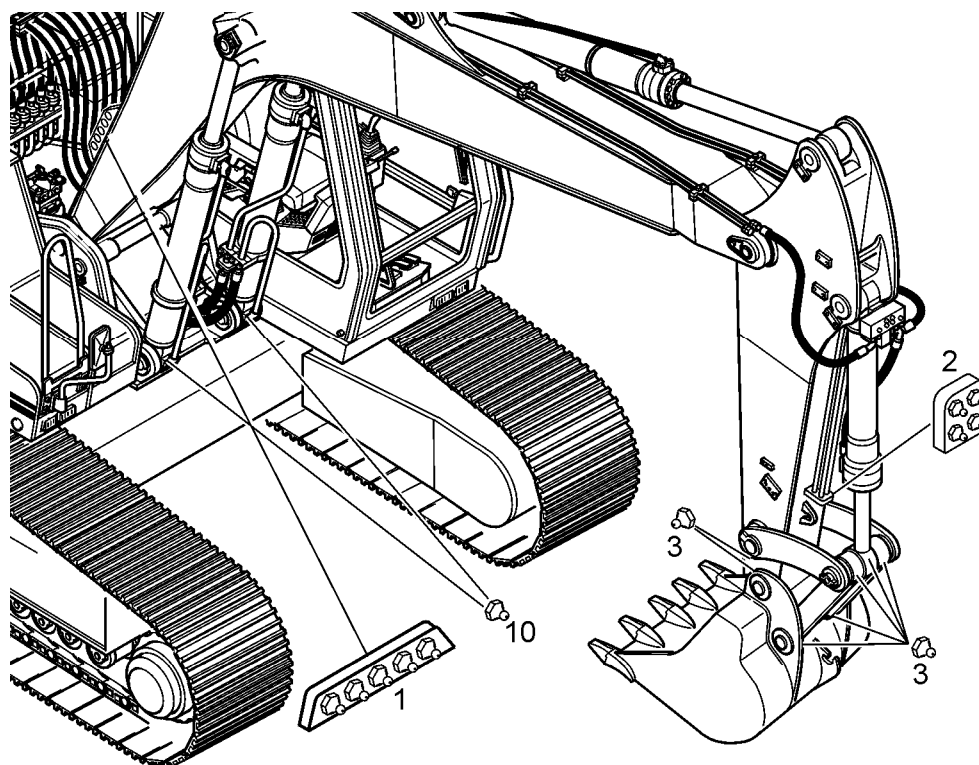

**Fig. 5-59** Lubrication of attachment bearing points

The boom and stick bearing points are either combined into easily accessible plates (plates **1** and **2**) on the bottom and stick, or, if accessible from the ground level, greased directly via lubrication points (positions **3** et **10**).

- For a complete attachment lubrication, connect a grease gun to the each grease point and pump the grease gun until clean grease flows out at the relevant bearing point.

In normal use, each oiling point must be greased weekly.


When the machine is working hard, eg. in material that causes wear, underwater or on multiple shifts, greasing must be carried out on a daily / per shift basis.

Grease quality: see lubrication chart

### 5.13.4 Semi-automatic greasing (optional extra)


On request, the central greasing system of the machine can be equipped with an electrical pump. This electrical pump means that no manual greasing of the lubricating oil and equipment is necessary; all bearing points connected to the greasing system can be greased when working with the machine. The chassis cannot be connected to the automatic greasing system.

## Operating the greasing system

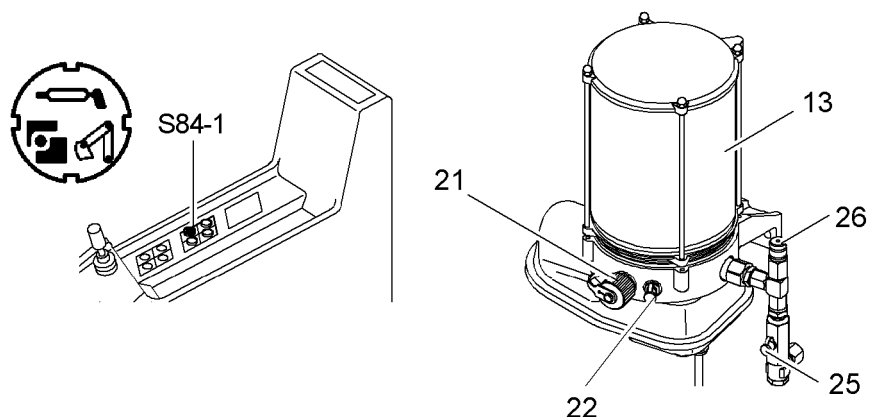

**Fig. 5-60** Central greasing pump

- |              |  |           |   |
|--------------|--|-----------|---|
| <b>13</b>    | Grease container                           | <b>21</b> | Adapter   |
| <b>22</b>    | Lubricating nipple – fill grease container | <b>25</b> | Lubricating nipple - fill central greasing system |
| <b>S84-1</b> | Greasing                                   | <b>26</b> | Safety valve                                      |

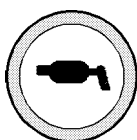

- After switching on the machine,
- ▶ Press button S84-1
  - ↪ the telltale light in button blinks.
  - ↪ The greasing operation starts.
- ▶ By formation of grease bulges on bearings of boomcylinder, on piston's frontal surface side, press button S84-1.
  - ↪ the telltale light in button lights off.
  - ↪ The greasing operation is finished.

The following defects are possible:

- Blockage or pinching of a supply line (grease flows out of safety valve **26**) or blockage in an oiling point.
- Defective proximity switch or defect in its supply cable.
- When very cold, the use of a grease which is too viscous.
- Lack of lubricant in the grease container.
- Breakdown in drive motor's supply circuit.
- ▶ Find and rectify the cause of the problem immediately.

When the greasing system is functioning, additional greasing with the greasing pump can be carried out at any time by pressing button **S84-1** on the right control panel.

If the greasing pump is defective, the attached greasing points can be greased centrally with a greasing pump via lubricating nipple **25**.

### Refilling the grease container

The level of grease in the grease container is to be checked once weekly and refilled if necessary. Refilling the grease container is usually carried out via the special adapter **21**.

- ▶ Insert a grease cartridge in the hand pump supplied, connect the pump to the adapter **21** and press the contents of the grease cartridge into the container.



If the hand pump or grease cartridge are not available, a grease pump can be used to fill the grease container using lubricating nipple **22**.

After filling the grease container, intermediate greasing must be started using button **S84-1** in the armrest.

### 5.13.5 Automatic greasing (optional extra)

On request, the semi-automatic central greasing system of the machine can be equipped with an electrical modul. This modul allows a complete automatic greasing.

#### Operating the greasing system


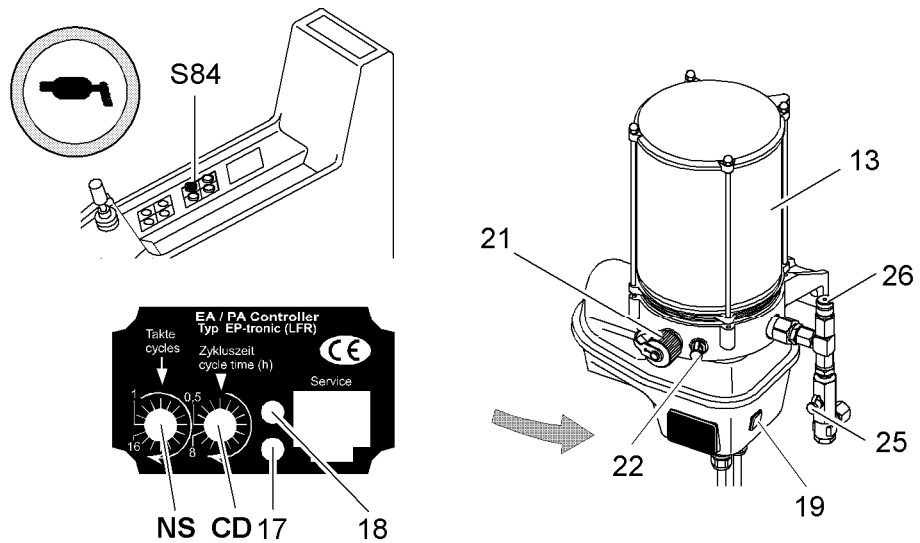


Fig. 5-61 Central greasing pump

- |                 |  |           |   |
|-----------------|--|-----------|---|
| <b>13</b>       | Grease container                       | <b>21</b> | Adapter   |
| <b>17</b>       | LED, green                             | <b>22</b> | Lubricating nipple – fill grease container        |
| <b>18</b>       | LED, red                               | <b>25</b> | Lubricating nipple - fill central greasing system |
| <b>19 / S84</b> | Reset button and Intermediate greasing | <b>26</b> | Safety valve                                      |
| <b>NS /</b>     | Number of Strokes                      | <b>CD</b> | Cycle duration                                    |

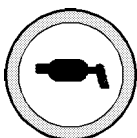

After switching on the machine, the telltale light in button **S84** illuminates on the right control panel and the green LED **17** illuminates on the greasing pump for approx. 1.5 seconds. This indicates that the electrical pump is ready to operate.

The greasing process begins automatically after a pause and stops when all bearing points have been greased without the operator having to become involved.

Throughout the greasing process, button **S84** and green LED **17** are continuously illuminated. If there is a malfunction, both button **S84** and LEDs **17** and **18** flash simultaneously. The following defects are possible:

- Blockage or pinching of a supply line (grease flows out of safety valve **26**) or blockage in an oiling point.

- Defective proximity switch or defect in its supply cable.
  - When very cold, the use of a grease which is too viscous.
  - Lack of lubricant in the grease container.
  - Breakdown in drive motor's supply circuit.
  - Grease filter on the central lubricating nipple is contaminated.
- Find and rectify the cause of the problem immediately.

When the greasing system is functioning, additional greasing with the greasing pump can be carried out at any time by pressing button **S84** on the right control panel or by pressing button **19** on the greasing pump.

If the greasing pump is defective, the attached oiling points can be greased centrally with a greasing pump via lubricating nipple **25**.

In this case, press daily or per working shift approx. 80 cm<sup>3</sup> grease into the fitting **25**

### Adjustement and grease consumption

The Cycle Duration can be adjusted between 0,5 and 8 hours via the rotary switch **CD** (Cycle Duration) after removal of the transparent protection cover.

From factory, the Cycle Duration is adjusted to 1 hour.

The Number of Strokes to be carried out at main distributor for a complete lubricating procedure can be adjusted between 1 and 16 via the rotary switch **NS** (Number of Strokes) after removal of the transparent protection cover.

From factory, the number of strokes is adjusted to 5 (except "counterthumb for timber" equipement on 2 strokes).

The factory adjusted values for cycle duration and number of strokes determine a lubricant consumption of approx. 11 cm<sup>3</sup> grease per lubrication cycle, it equals approx. 1 kg (5.1 lbs) grease every 100 working hours.

### Refilling the grease container

The level of grease in the grease container is to be checked once weekly and refilled if necessary. Refilling the grease container is usually carried out via the special adapter **21**.


- Insert a grease cartridge in the hand pump supplied, connect the pump to the adapter **21** and press the contents of the grease cartridge into the container.

If the hand pump or grease cartridge are not available, a grease pump can be used to fill the grease container using lubricating nipple **22**.

After filling the grease container, intermediate greasing must be started using button **19** on the greasing pump or button **S84** in the armrest.

### 5.13.6 Greasing buckets / shovel tilting device

Buckets and the shovel tilting device are not greased via the central greasing system. The oiling points on the bucket and reversing lever / connecting clip must be greased manually. The relevant oiling points are marked in red.

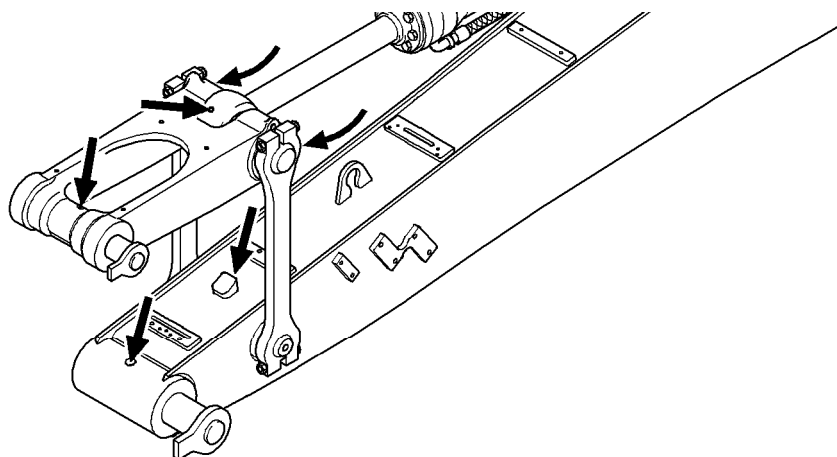

**Fig. 5-62** Greasing buckets


In normal use, each oiling point must be greased weekly until clean grease flows out at the relevant bearing point.

When the machine is working hard, eg. in material that causes wear, underwater or on multiple shifts, greasing must be carried out on a daily / per shift basis.

Grease quality: see lubrication chart

### 5.13.7 Greasing the grab (optional extra)

The grab is not lubricated via the central greasing system. It must be regularly greased manually. The relevant oiling points are marked in red.

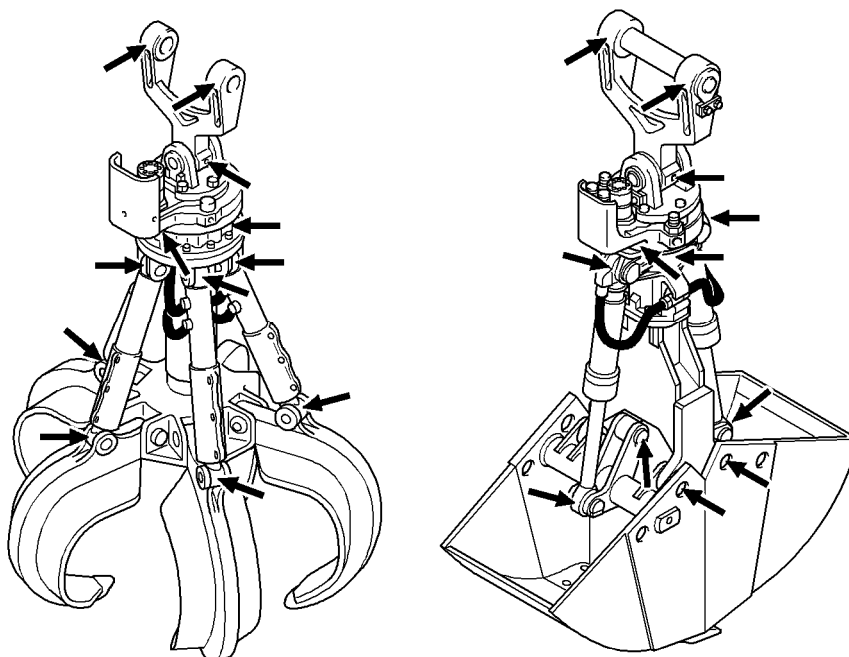

**Fig. 5-63** Greasing the grab

In normal use, each oiling point must be greased daily or per shift until clean grease flows out at the relevant bearing point.

When the machine is working hard, the greasing interval should be shortened accor-


dingly.

Grease quality: see lubrication chart

## 5.14 Quick-change systems

### 5.14.1 Greasing the mechanical quick-change adapter (optional extra)

The mechanical quick-change adapter is not lubricated via the central greasing system. The bearing points must be greased using the grease gun.

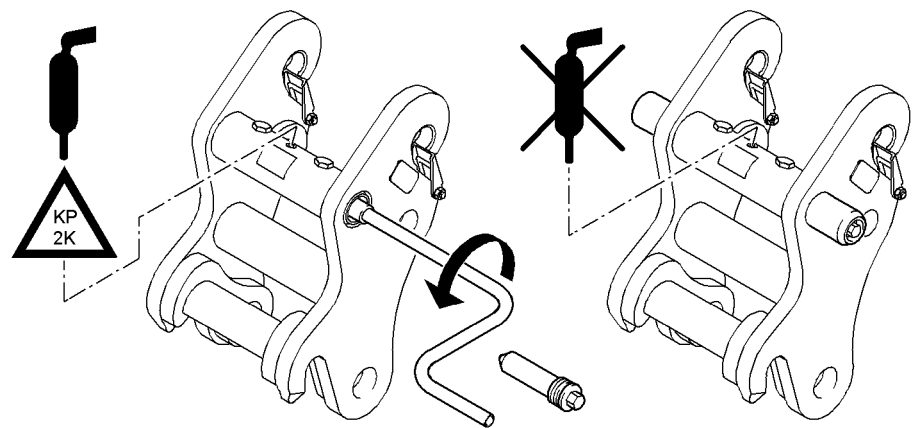

**Fig. 5-64** Greasing the mechanical quick-change adapter

- ▶ Grease the bearing points via the lubricating nipple using a grease gun.  
Grease quality: see “Lubricating and operating materials”



#### Note!


If the mechanical quick-change adapter is greased when the pin is drawn out, the hollow area between the locking pins fills with grease and the pins can no longer be reinserted.

- ▶ Ensure that the locking pins are inserted when greasing.

### 5.14.2 Hydraulic quick-change adapter (optional extra)

#### Greasing the quick-change adapter

The hydraulic quick-change adapter is not lubricated via the central greasing system. The bearing points must be greased using the grease gun.

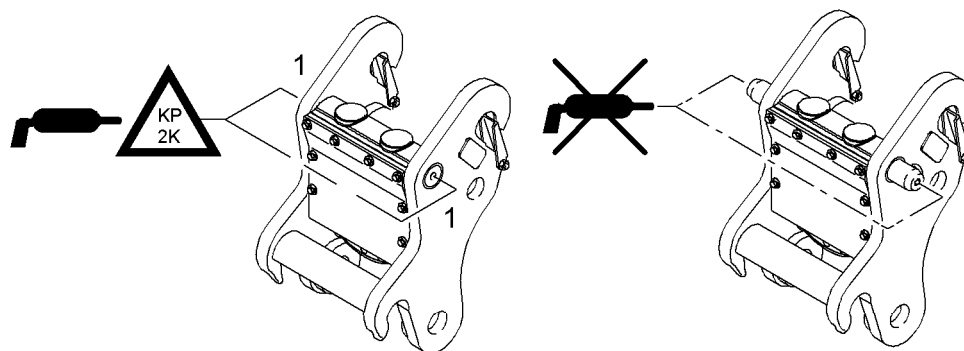

**Fig. 5-65** Greasing the quick-change adapter

- ▶ Grease the locking pins **1** via the lubricating nipple using a grease gun.




**Note!**

The hydraulic quick-change adapter cannot be sufficiently greased if the locking pins are drawn out.

- ▶ Ensure that the locking pins are inserted when greasing.

**Cleaning the sieve filter**

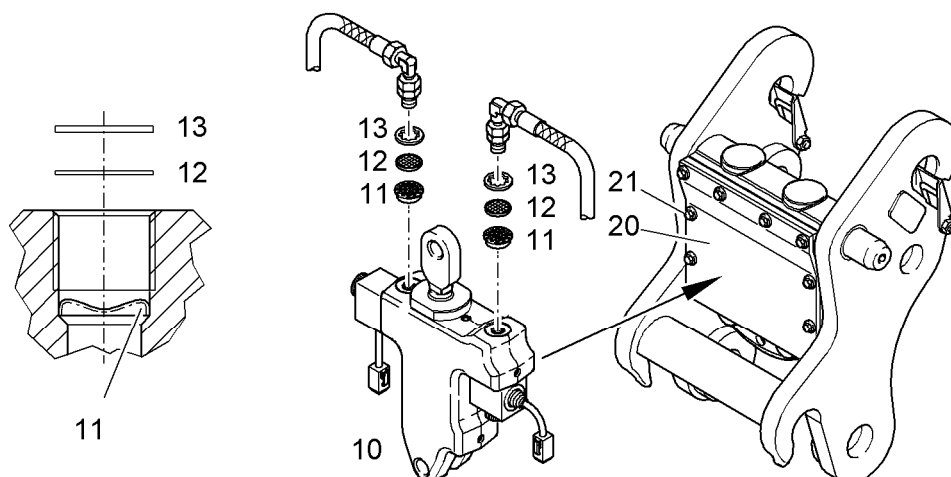

**Fig. 5-66** Cleaning the sieve filter

The filter disc **12** in the bolt connections between the connecting hoses and the hydraulic cylinder must be checked for blockages and, if necessary, cleaned every 2000 operating hours.

- ▶ Remove the cover **20** and the screws **21** from the quick-change adapter.
- ▶ Remove bolt connections and hydraulic hoses from the hydraulic cylinder **10**.
- ▶ Screw out the outer mounting assembly **13** using a suitable tool (e.g. a scribe).
- ▶ Remove the filter disc **12**, check and if necessary clean or replace it.
- ▶ Place the filter disc **12** on the inner mounting assembly **11** and mount the outer mounting assembly **13**.
- ▶ Connect bolt connections and hydraulic hoses to hydraulic cylinder **10**.
- ▶ Fasten the cover **20** with the screws **21** on the quick-change adapter.

### 5.14.3 LIKUFIX (optional extra)


#### Cleaning LIKUFIX

The LIKUFIX hydraulic coupling system is mostly maintenance-free.

It is recommended that the system is cleaned at regular intervals and sprayed with lubricating varnish (see Workshop manual). This will prevent dirt adhering and icing up.

If the system is kept properly clean, the seals are very durable.

#### Replacing the sealing ring

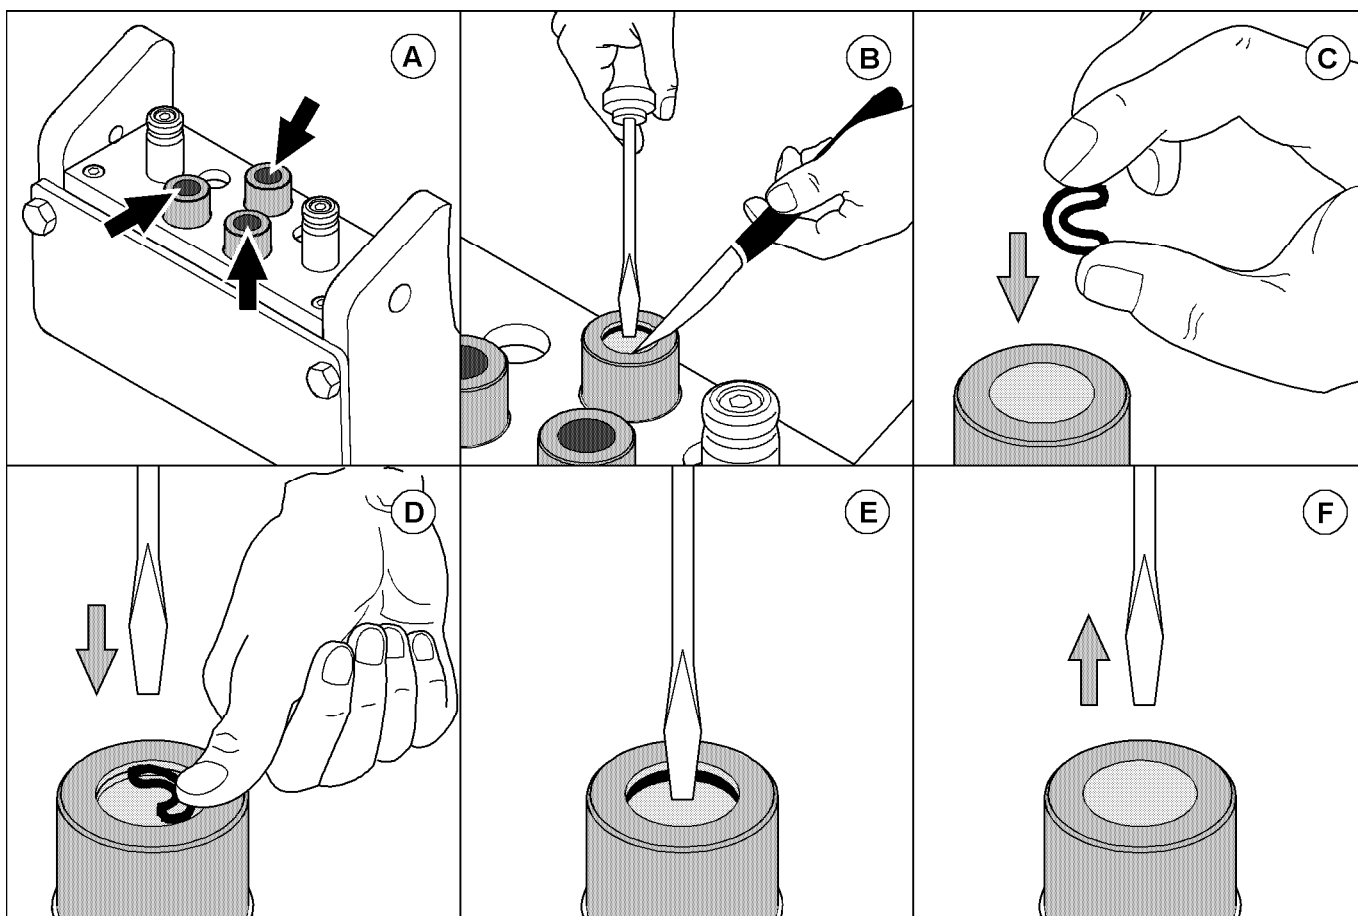

**Fig. 5-67** Replacing the sealing ring

If leaks occur at the coupler plugs (A, see arrows), the sealing rings should be replaced.


- ▶ Use a screwdriver to push down the sealing washer and lever out the defective sealing ring using a pointed object (B).
  - ▶ Press the new sealing ring together and place it on the sealing washer with the open side down (C).
  - ▶ Press down the washer as far as the groove, place the screwdriver in the middle of the sealing ring and move your hand away (D).
  - ▶ Allow the sealing ring to jump into the groove (E).
  - ▶ Remove the screwdriver (F).
- ↙ The sealing washer must move upwards. If necessary, press the sealingring

again until the sealing washer is flexible.

## 5.14.4 Checking and maintenance of quick change coupler

### Functional check out of quick change coupler

Daily, at machines operating start, check out the quick change coupler functions as well as its warning light and buzzer in the cab. This verification can also be done at the first daily tool change.

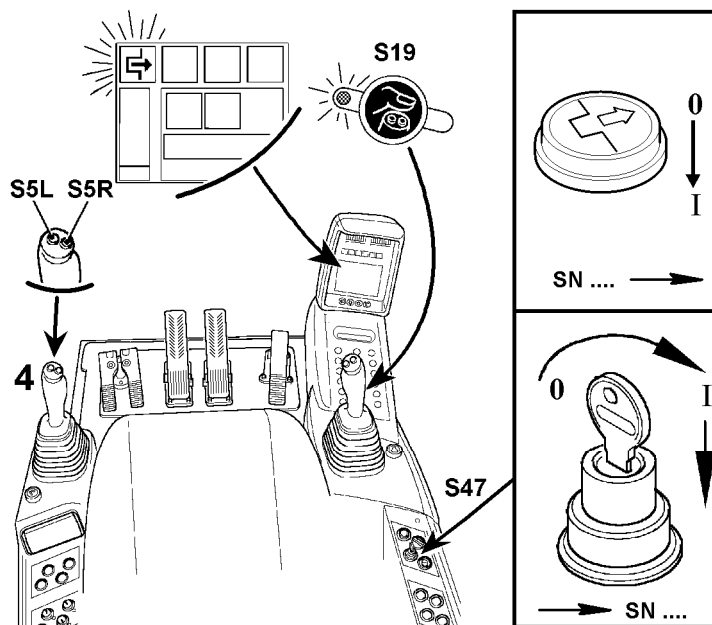

**Fig. 5-68** Functional check out of quick change coupler

Proceed as below :

- ▶ Start the Diesel engine and let it run on low idle.

#### Opening the quick change coupler :


- ▶ Move the equipment so that the tool is lying on the ground, with the bucket cylinder fully extended.
- ▶ Press touch S19.
  - ↗ Warning light integrated in the touch must light up.
- ▶ Depress the push button switch S47 (or turn the key switch S47 to the right, and push down the key) into position 1.
- ▶ Keep switch S47 depressed, press right push button S5R
  - ↗ The quick change coupler locking pins must retract .
  - ↗ The symbol "Locking pins retracted" appears on the screen .
  - ↗ The buzzer in the cab must sound.
- ▶ Release the key and turn the switch S47 back to position 0.

#### Closing the quick change coupler :

- ▶ Depress the push button switch S47 (or turn the key switch S47 to the right, and press the key) into position 1.
- ▶ Keep S47 depressed, press left button S5L.

- ↪ The quick change coupler locking pins must come out.
- ☐ Befor the locking pins are fully out :
  - ↪ Symbol "Locking pins retracted" must light off at the display.
  - ↪ The buzzer in the cab must stop.
- ▶ Press touch S19,
  - ↪ The warning light integrated in the touch must light off.
- ▶ Stop the Diesel engine.

### Daily visual check out

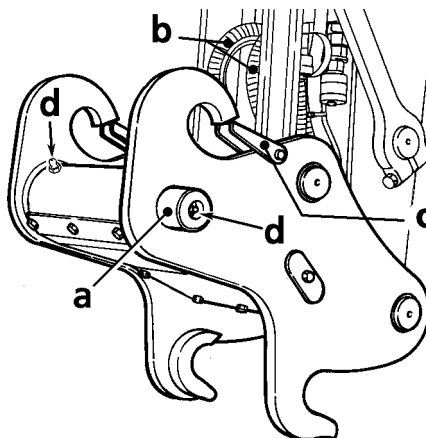

**Fig. 5-69** Functional check out of quick change adapter

- ☐ After above described function verification,
  - ▶ Control if locking pins **A** are in fully extended position, that means the tool's attachment bore holes must be flush with locking pins.
  - ▶ Check also the good condition of the hydraulic hoses **B** and of the electrical supply bundle between end of stick and quick change coupler.
  - ▶ Check that the safety latches **C** on the load hooks are in good working order.

## 5.15 Drive unit brakes and swing gear brakes

Both the drive unit brakes and the swing gear brakes are spring-applied, pressure-released multi-plate brakes. They are ventilated hydraulically and are fully sealed and integrated in the travel gear or swing gear transmission.

Their usage purely as parking brakes makes them wear-free and therefore maintenance free.

## 5.16 General maintenance points

### 5.16.1 Replacing working parts

In addition to the normal maintenance and repair work that is to be carried out at the given intervals, the machine operator and maintenance personnel can also carry out



the repairs referred to below:

- Replacing worn teeth on the bucket.
- Replacing defective sealing material on the pipe and hose system and on the hydraulic unit connections (not, however, on pressure relief valves which are lead sealed at the works).
- In addition, high pressure hoses, hydraulic lines and bolt connections on the hydraulic system can be replaced.

It should be noted that only original LIEBHERR replacement parts are to be used.

This is particularly relevant for hoses and hydraulic lines, which must be preassembled at the works. For all other repairs, particularly when dismantling the ballast weight, works and dealership fitters are to be consulted.

### 5.16.2 Replacing the teeth on the bucket

Determine the degree of wear of the teeth visually.

With heavily worn teeth, considerably greater force will be required when using the bucket to penetrate the material to be excavated. The teeth must be replaced in good time to prevent any damage occurring to the tooth fitting piece.

Do not work with the machine if teeth on the bucket are missing or are heavily worn.

#### To attach and dismantle the teeth:

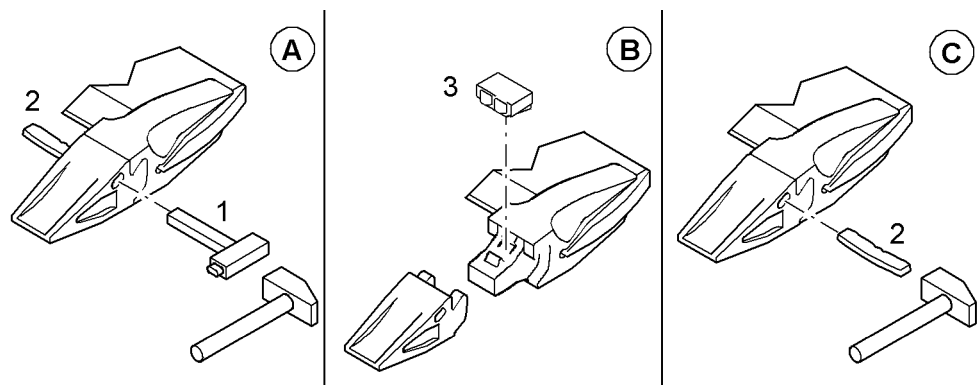


Fig. 5-70 Replacing the teeth

- ▶ Use a hammer and ejector drift 1 to knock out the wedge 2 (A).
- ▶ Remove the old tooth.
- ▶ Place a new rubber wedge holder 3 onto the tooth holder (B).
- ▶ Push the new tooth onto the fitting piece.
- ▶ Use the hammer to knock in the wedge 2 (C).

Teeth system sizes : Machine :	ST 13 914 - 934	ST 16 914 - 944	ST 20 934 - 944	ST 25 944 - 964
Wedge K	K13 3001157	K16 3001114	K20 3001158	K25 3001159
Wedge holder G	G13 9335853	G16 9329709	G20 9351304	G25 9351306

Tab. 5-16 Designation and ordering n° of elements

Teeth system sizes : Machine :	ST 13 914 - 934	ST 16 914 - 944	ST 20 934 - 944	ST 25 944 - 964
Tooth C	Z13C 3001288	Z16C 3001318	Z20C 3001319	Z25C 3001130
Tooth CL	Z13CL 3001579	Z16CL 3001132	Z20CL 3001588	Z25CL 3001589
Tooth L	Z13L 3001262	Z16L 3001216	Z20L 3001232	Z25L 3001235
Tooth SL	Z13SL 3001554	Z16SL 3001556	Z20SL 3001556	
Tooth R	Z13R 3001263	Z16R 3001217	Z20R 3001233	Z25R 3001236
Tooth P	Z13P 3001264	Z16P 3001218	Z20P 3001234	Z25P 3001237
Tooth PF	Z13PF	Z16PF 3001440	Z20PF 3001443	Z25PF

Tab. 5-16 Designation and ordering n° of elements




Fig. 5-71 Thooth types

### 5.16.3 Welding work on the machine

Welding work on all main components serving the power transmission (such as the chassis frame, rotating platform, equipment parts etc.) may only be carried out by the manufacturer or by an authorized workshop.

- ▶ Disconnect the batteries before starting any electric arc welding work on the machine.
- ▶ Always disconnect the negative terminal (-) first and reconnect it last.
- ▶ Switch off the main battery switch!



**Caution!**

If high currents flow through the bearings or sealing elements, these could be burnt.

- ▶ Move the earthing cable of the welding tool as close as possible to the welding surface so that the welding current cannot flow over parts like the slewing ring, hinges, bearings, sockets, rubber elements or seals.

## 5.17 Control and maintenance chart



**Caution!**

Careful maintenance can only be carried out when the machine is clean. In particular, visual checks such as crack testing are only possible on a clean machine.

- ▶ Clean the machine before you start maintenance work (see also the chapter "Safe maintenance of the machine", subheading "Cleaning and crack testing").



**Note**

The daily maintenance work that the device operator has to carry out comprises a function check of the brakes (slewing gear, service and parking brake), steering and the electrical and hydraulic systems.

Additionally, a visual check must be made for leaks on the engine, hydraulic system, transmission and axles.

Maintenance / inspection at operating hours							WORK TO BE CARRIED OUT R 914 Litronic			
On delivery	Every 8 - 10	Every 10 -50	At 500, 1500	At 1000, 3000	At 2000, 4000	By maintenance personnel (machine owner)	By authorized specialist personnel	Note		
						■ First and only interval ● Repeat interval ◆ Special interval every 250 hours	<input type="checkbox"/> First and only interval <input type="checkbox"/> Repeat interval			
<b>DIESEL ENGINE</b>										
<input type="checkbox"/>	<input checked="" type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check oil level and oil pressure in engine				
<input type="checkbox"/>	<input checked="" type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check coolant level and coolant temperature				
<input type="checkbox"/>	<input checked="" type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check air filter on maintenance display				
	<input checked="" type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check and drain water separator and fuel filter				
		<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Drain off water and sediment at fuel tank				
		<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Empty dust collecting container on air filter (shorten or extend interval as required)				
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check and clean cooler, pressure relief valve, coolant hose, ventilator				
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check condition of ribbed V-belt				
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Replace lubricating oil filter cartridge				
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Replace engine oil			1)	
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check oil, cooling and fuel system for leaks and condition				
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Replace water filter cartridge (at least 1 x yearly)				
			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Check anti-corrosion fluid / antifreeze in coolant (replace coolant every 2 years)				

LFR/en/Edition: 5 / 2006

Maintenance / inspection at operating hours						WORK TO BE CARRIED OUT R 914 Litronic		
On delivery	Every 8 - 10	Every 10 -50	At 500, 1500	At 1000, 3000	At 2000, 4000	By maintenance personnel (machine owner) ■ First and only interval ● Repeat interval ◆ Special interval every 250 hours	By authorized specialist personnel □ First and only interval ○ Repeat interval	Note
			□	○	○	Check intake and emission system for leaks and condition (first time at 500 op. hours)		
				○	○	Check and adjust speed adjustment		
				○	○	Check / adjust valve clearance		
				○	○	Check engine console and oil sump mounts		
				○	○	Grease flywheel tooth		
				○	○	Check flame glow system (before start of winter)		
				○	○	Replace fuel fine filter cartridge (or as required)		4)
				○	○	Replace fuel preliminary filter cartridge (or as required)		4)
						Replace air filter main element (according to maintenance display / annually)		
						Replace air filter safety element (every third change of main element / annually)		Never clean!
						Check air hoses btween air filter and engine (at filter maintenance)		
						Replace oil separator (every 2 years)		
						Replace antifreeze and anticorrosive coolant mixture (every 2 years) (only for authorized specialist personnel)		
						Check / adjust injection valve (every 3000 op. hours or when performance diminishes)		
						Check the axial play of the water pump (first at 6000, then every 3000 hours)		
<b>HYDRAULIC SYSTEM</b>								
○		●	○	○	○	Check oil level in hydraulic tank		
○	■	●	○	○	○	Clean magnetic bar in return-line filter (daily during first 300 op. hours)		
			□	○	○	Replace filter unit in return-line filter (first time at 500 op. hours)		2)
			□	○	○	If mounted, replace bypass oil filter element (first 500 hours, and at least every 6 months)		2)
			○	○	○	Replace filter unit on control oil unit		
			○	○	○	Check unit mounts		
			○	○	○	Clean hydraulic oil cooler (and as required)		
			○	○	○	Drain off water in hydraulic tank (when using environmentally acceptable fluids, max. 0.1 % water proportion permissible, insert partial flow filter, take oil sample)		

LFR/en/Edition: 5 / 2006

Maintenance / inspection at operating hours						WORK TO BE CARRIED OUT R 914 Litronic		
On delivery	Every 8 - 10	Every 10 -50	At 500, 1500	At 1000, 3000	At 2000, 4000	By maintenance personnel (machine owner)	By authorized specialist personnel	Note
						<ul style="list-style-type: none"> <li>■ First and only interval</li> <li>● Repeat interval</li> <li>◆ Special interval every 250 hours</li> </ul>	<ul style="list-style-type: none"> <li>□ First and only interval</li> <li>○ Repeat interval</li> </ul>	
			○	○	○	If mounted check return filter for hydraulic hammer for cleanliness, replace element if necessary		
				○	○	Check hydraulic system for leaks and function		
				○	○	Check / adjust servo, primary and secondary pressures		
				○	○	Bleed servo system and hydraulic pumps		
				○	○	Replace hydraulic oil in tank (or optimise interval with oil analyses)		2), 3)
				○	○	Replace ventilation and vent filters on hydraulic tank		2)
<b>ELECTRICAL SYSTEM</b>								
○	●		○	○	○	Check telltale lights and display devices		
○				○	○	Check lighting		
			○	○	○	Check acid concentration and level and cable terminals and pole ends on batteries		
			○	○	○	Spray slip rings on slewing gear connection (if present) with Cramolin contact spray		
○				○	○	Check function of entire system and units		
<b>SLEWING GEAR TRANSMISSION</b>								
○			○	○	○	Check oil level and look for leaks		
			□	○	○	Check function and operation of slewing gear brake		
				○	○	Check transmission and oil motor mounts		
			□	○	○	Replace transmission oil (first time at 500 op. hours). <b>Not by R924 Kompakt</b>		
<b>BALL SLEWING RING</b>								
	○	○	○	○	○	Lube swing ring bearing		
	○	○	○	○	○	Lube swing ring teeth		
				○	○	Check mounting screws for correct positioning and slewing gear pinion contact		
				○	○	Check pinion gear mesh		
<b>TRAVELLING GEAR</b>								
○			○	○	○	Check oil level and look for leaks		

Maintenance / inspection at operating hours						WORK TO BE CARRIED OUT R 914 Litronic		
On delivery	Every 8 - 10	Every 10 -50	At 500, 1500	At 1000, 3000	At 2000, 4000	By maintenance personnel (machine owner)	By authorized specialist personnel	Note
			<input type="checkbox"/>	<input type="radio"/>	<input type="radio"/>	■ First and only interval ● Repeat interval ◆ Special interval every 250 hours	<input type="checkbox"/> First and only interval <input type="radio"/> Repeat interval	
						<input type="radio"/>	Check function and operation of drive unit brake	
						<input type="radio"/>	Check transmission and oil motor mounts	
						<input type="radio"/>	Replace transmission oil (first time at 500 op. hours)	
<b>DRIVE UNIT</b>								
<input type="radio"/>	<input checked="" type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Visual check on crawler tension, retension if necessary	
	<input checked="" type="radio"/>						Clean crawler (when work is finished)	
		<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Check mounts on base plates and tumbler wheels	
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Clean and grease sliding surfaces of tensioning device	
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Check for leaks on leading wheels, support rollers and track rollers	
<b>CAB + HEATING</b>								
		<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Check / refill washing fluid in windscreen washer system container	
<input type="checkbox"/>				<input type="radio"/>	<input type="radio"/>		Check heating function (before start of winter)	
				<input type="radio"/>	<input type="radio"/>		Check heating system for leaks	
				<input type="radio"/>	<input type="radio"/>		Check door and window hinges and locks	
					<input type="radio"/>		Check water inlet valve for function and dirt, clean if necessary	
<b>AIR-CONDITIONING SYSTEM</b>								
		<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Switch on air-conditioning system regularly (at least 1 x every 14 days)	
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Check capacitor for contamination, blow out if required	
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Clean recirculated / fresh air filter, replace if required, shorten maintenance interval for heavy dust use	
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Check mounting screws and compressor drive belt	
			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		Check dryer-collector unit (moisture, fill and condition), replace if required	
					<input type="radio"/>		Check evaporator unit, clean if required	
					<input type="radio"/>		Check electrical lines for abrasions and plug connections for correct positioning	
					<input type="radio"/>		Check overpressure switch for function	
					<input type="radio"/>		Check refrigerating capacity after opening or repair, or as required	

LFR/en/Edition: 5 / 2006

Maintenance / inspection at operating hours						WORK TO BE CARRIED OUT R 914 Litronic		
On delivery	Every 8 - 10	Every 10 -50	At 500, 1500	At 1000, 3000	At 2000, 4000	By maintenance personnel (machine owner)	By authorized specialist personnel	Note
						<ul style="list-style-type: none"> <li>■ First and only interval</li> <li>● Repeat interval</li> <li>◆ Special interval every 250 hours</li> </ul>	<ul style="list-style-type: none"> <li>□ First and only interval</li> <li>○ Repeat interval</li> </ul>	
						Replace dryer-collector unit annually, check coolant circuit for leaks and re- place refrigerant and refrigerant oil		
						Have function of ventilation flaps and defrost thermostat checked annually by a refrigeration engineer		
<b>CHASSIS + UPPER CARRIAGE + WORK EQUIPMENT</b>								
		●	○	○	○	Grease bearing points via central greasing point		
		●	○	○	○	Grease bearing points (chassis and add-on units) (depending on use and daily for multiple shift operation)		
		●	○	○	○	Visually check wear condition of teeth		
		◆	○	○	○	Check parts for cracks		
		◆	○	○	○	Check ballast weight and tank mounts		
			○	○	○	Check line and screw connections for correct positioning		
				○	○	Check trim panel hinges, quick-release fasteners and gas pressure springs of hatches		
○				○	○	Check the lowering speed of the attachment		~4 sec.
○						Indicate appropriate use of equipment		
○						Have device lubricated according to lubrication chart by device operator and indicate any operating errors.		
	●					The daily maintenance work of the driver include the check of the proper func- tion of hydraulic, electric and brakes systems before starting operation. He must also perform daily a visual check of engine, hydraulic system, gears and track pads for leaks.		
<b>HYDRAULIC QUICK-CHANGE ADAPTER</b>								
○	●		○	○	○	Check function of visual and acoustic warning devices		
	●		○	○	○	Visually check drawn out position of locking pins		
	●		○	○	○	Check condition of hydraulic hoses and of cable kit		
		●	○	○	○	Lubricate locking pins		

Maintenance / inspection at operating hours						WORK TO BE CARRIED OUT R 914 Litronic		
On delivery	Every 8 - 10	Every 10 -50	At 500, 1500	At 1000, 3000	At 2000, 4000	By maintenance personnel (machine owner)	By authorized specialist personnel	Note
					<input type="radio"/>	■ First and only interval ● Repeat interval ◆ Special interval every 250 hours	<input type="checkbox"/> First and only interval <input type="checkbox"/> Repeat interval	
					<input type="radio"/>	Clean sieve filter in bolt connections of hydraulic hoses		
<b>MECHANICAL QUICK-CHANGE ADAPTER</b>								
	●		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Visually check drawn out position of locking pins		
		●	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Lubricate locking pins		

**Tab. 5-17** Control and maintenance chart

- 1 Engine oil change intervals can be shortened dependent on temperature, fuel and oil quality.
- 2 Note shortened maintenance intervals for heavy dust use.
- 3 When using environmentally acceptable hydraulic fluids, the maintenance interval is to be determined by regular analyses.
- 4 Shorten the maintenance interval dependent on conditions of use (eg. heavy dust use, barrel re-fuelling).