

Operation & Maintenance Manual

UEAM007200

PC450-8

PC450LC-8

HYDRAULIC EXCAVATOR

SERIAL NUMBER

PC450-8 - K50001 and up

PC450LC-8 - K50001 and up

PC450LCD-8 - K50001 and up

PC450LCHD-8 - K50001 and up



WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept inside the cab for reference and periodically reviewed by all personnel who will come into contact with the machine.

KOMATSU

FOREWORD

FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. The precautions in this manual must be followed at all times when performing operation and maintenance. Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines. Accidents can be prevented by knowing beforehand conditions that may cause a hazard when performing operation and maintenance.

WARNING

Before beginning operation or maintenance, operators and maintenance personnel must always observe the following points.

Read this manual thoroughly and understand its contents fully.

Read the safety messages and safety labels given in this manual carefully so that they should be understood fully.

Keep this manual at the storage location for the Operation and Maintenance Manual given below so that all personnel involved in working on the machine can consult it periodically.


In case this manual should be lost or damaged, immediately contact Komatsu or your Komatsu distributor to obtain a new copy.

When you sell the machine, make sure that this manual should be provided to the new owner together with the machine.

In this manual, measurements are expressed in international standard units (SI). For the reference purpose, weight units used in the past are also displayed in ().

Storage location for the Operation and Maintenance Manual:

magazine box on the left side of the operator's seat.

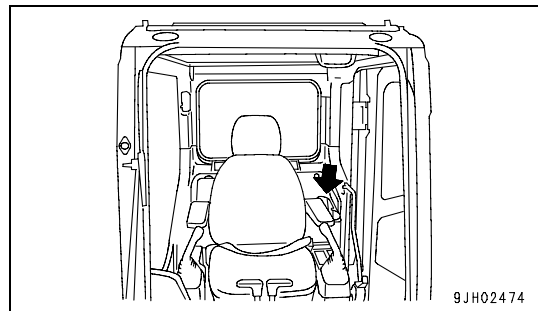

SAFETY INFORMATION

To enable you to use this machine safely, safety precautions and labels are given in this manual and affixed to the machine to give explanations of situations involving potential hazards and of the methods of avoiding such situations.

Signal words

The following signal words are used to inform you that there is a potential hazardous situation that may lead to personal injury or damage.

In this manual and on machine labels, the following signal words are used to express the potential level of hazard.



Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. This word is used also to alert against unsafe practices that may cause property damage.

Example of safety message using signal word



When standing up from the operator's seat, always place the lock lever in the LOCK position. If you accidentally touch the control levers when they are not locked, this may cause a serious injury or death.

Other signal words

In addition to the above, the following signal words are used to indicate precautions that should be followed to protect the machine or to give information that is useful to know.

NOTICE

This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.

REMARKS


This word is used for information that is useful to know.

● Safety labels

Safety labels are affixed to the machine to inform the operator or maintenance worker on the spot when carrying out operation or maintenance of the machine that may involve hazard.

This machine uses “Safety labels using words” and “Safety labels using pictograms” to indicate safety procedures.

Example of safety label using words

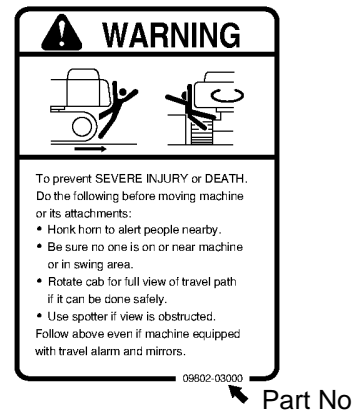

Safety labels using pictogram

Safety pictograms use a picture to express a level of hazardous condition equivalent to the signal word. These safety pictograms use pictures in order to let the operator or maintenance worker understand the level and type of hazardous condition at all times.

Safety pictograms show the type of hazardous condition at the top or left side, and the method of avoiding the hazardous condition at the bottom or right side. In addition, the type of hazardous condition is displayed inside a triangle and the method of avoiding the hazardous condition is shown inside a circle.



Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore, the safety messages in this manual and on the machine may not include all possible safety precautions.

If any procedures or actions not specifically recommended or allowed in this manual are used, it is your responsibility to take the necessary steps to ensure safety.

In no event should you engage in prohibited uses or actions described in this manual.



The explanations, values, and illustrations in this manual were prepared based on the latest information available at that time. Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information of your machine or for questions regarding information in this manual.

The numbers in circles in the illustrations correspond to the numbers in () in the text. (For example: ① → (1))

Noise emission levels

Two labels indicating the machine noise level are affixed on the machine.

- Sound pressure level at the operator's station, measured according to ISO6396 (Dynamic test method, simulated working cycle).
- Sound power level emitted by the machine, measured according to ISO 6395 (Dynamic test method, simulated working cycle). This is the guaranteed value as specified in European directive 2000/14/EC.

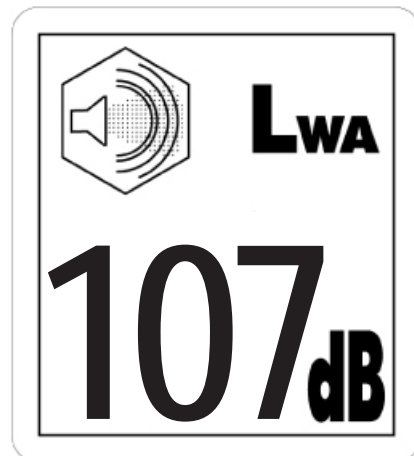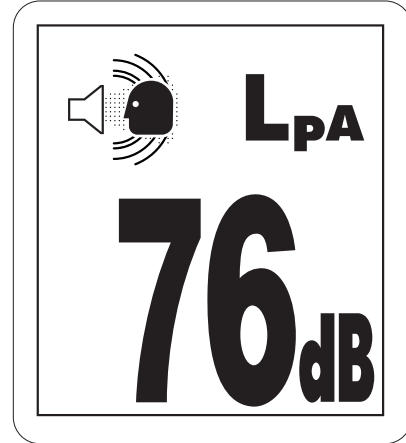

Vibration levels

When used for its intended purpose, levels of vibration for the earth-moving machine transmitted from the operator's seat are lower than or equal to the tested vibrations for the relative machinery class in compliance with ISO 7096.

The actual acceleration value for the hands and arms is less than or equal to 2.5 m/s². The actual acceleration value for the body is less than or equal to 0.5 m/s².

These values were determined using a representative machine and measured during the typical operating condition indicated below according to the measurement procedures that are defined in the standards ISO 2631/1 and ISO 5349.

Operating condition:

Excavating (Digging-loading-rotating-unloading-rotating)

Guide to Reduce Vibration Levels on Machine

The following guides can help an operator of this machine to reduce the whole body vibration levels:

1. Use the correct equipment and attachments.
2. Maintain the machine according to this manual
 - Tension of crawler (for crawler machines)
 - Brake and steering systems
 - Controls, hydraulic system and linkages
3. Keep the terrain where the machine is working and traveling in good condition
 - Remove any large rocks or obstacles
 - Fill any ditches and holes
 - Site manager should provide machine operators with machine and schedule time to maintain terrain conditions
4. Use a seat that meets ISO 7096 and keep the seat maintained and adjusted
 - Adjust the seat and suspension for the weight and size of the operator
 - Wear seat belt
 - Inspect and maintain the seat suspension and adjustment mechanisms
5. Steer, brake, accelerate, and move the attachment levers and pedals slowly so that the machine moves smoothly
6. Adjust the machine speed and travel path to minimize the vibration level
 - When pushing with bucket or blade, avoid sudden loading; load gradually
 - Drive around obstacles and rough terrain conditions
 - Slow down when it is necessary to go over rough terrain
 - Make the curve radius of traveling path as large as possible
 - Travel at low speed when traveling around sharp curves

7. Minimize vibrations for long work cycle or long distance traveling
 - Reduce speed to prevent bounce
 - Transport machines long distances between work sites
8. The following guidelines can be effective to minimize risks of low back pain
 - Operate the machine only when you are in good health.
 - Provide breaks to reduce long periods of sitting in the same posture
 - Do not jump down from the cab or machine
 - Do not repeatedly handle and lift loads


INTRODUCTION

This Komatsu machine is designed to be used mainly for the following work:

- Digging work
- Leveling work
- Ditching work
- Loading work
- Demolition work

See the section "RECOMMENDED APPLICATIONS (3-162)" for further details.

DIRECTIONS OF MACHINE

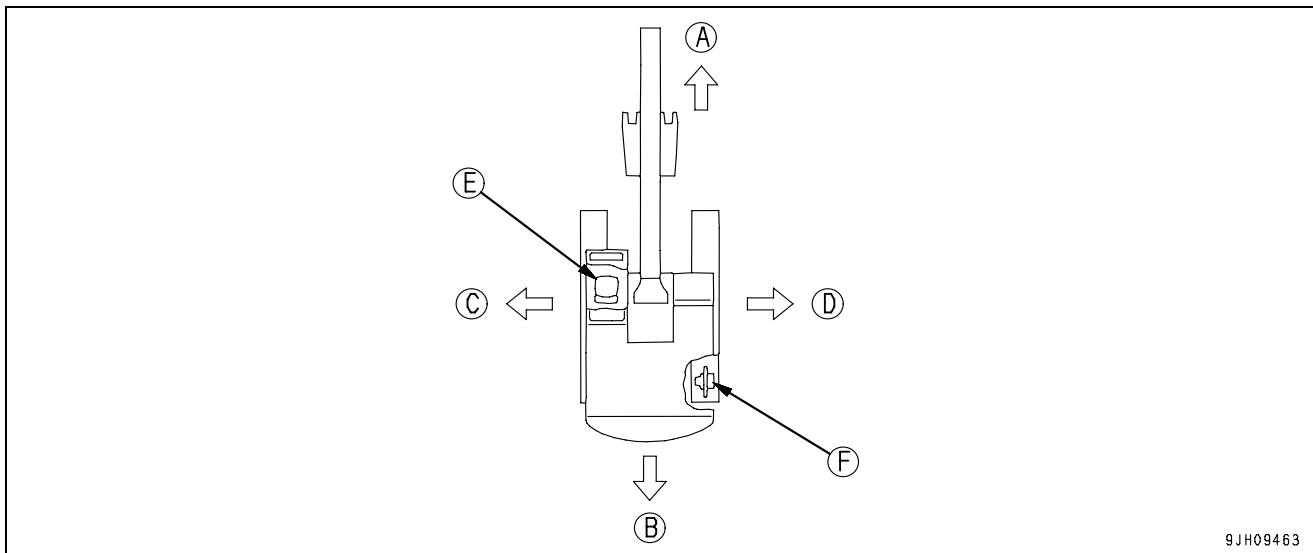

- | | |
|-----------|---------------------|
| (A) Front | (E) Operator's seat |
| (B) Rear | (F) Sprocket |
| (C) Left | |
| (D) Right | |


In this manual, the terms front, rear, left, and right refer to the travel direction as seen from the operator's seat when the operator's seat is facing the front and the sprocket is at the rear of the machine.

VISIBILITY FROM OPERATOR'S SEAT

The visibility standards (ISO 5006) for this machine require a view shown in the diagram below.


PROXIMITY VISIBILITY

The visibility of this machine in the area 1 m from the outside surface of the machine at a height of 1.5 m is shown in the diagram below. The hatched area (A) shows the area where the view is blocked by part of the machine when mirrors or other aids to visibility are installed as standard. Please be fully aware that there are places that cannot be seen when operating the machine.

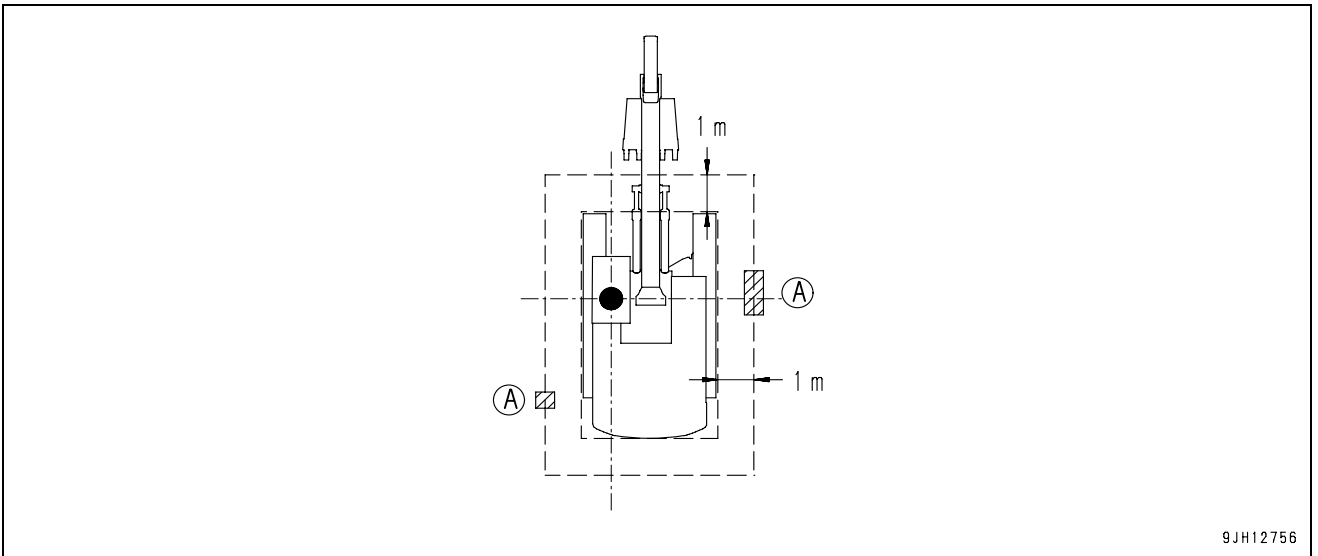

12M CIRCUMFERENCE VISIBILITY

The visibility at a radius of 12 m from the machine is as shown in the diagram below. The hatched areas (B) show the areas where the view is blocked when mirrors or other aids to visibility are installed as standard. Please be fully aware that there are places that cannot be seen when operating the machine.

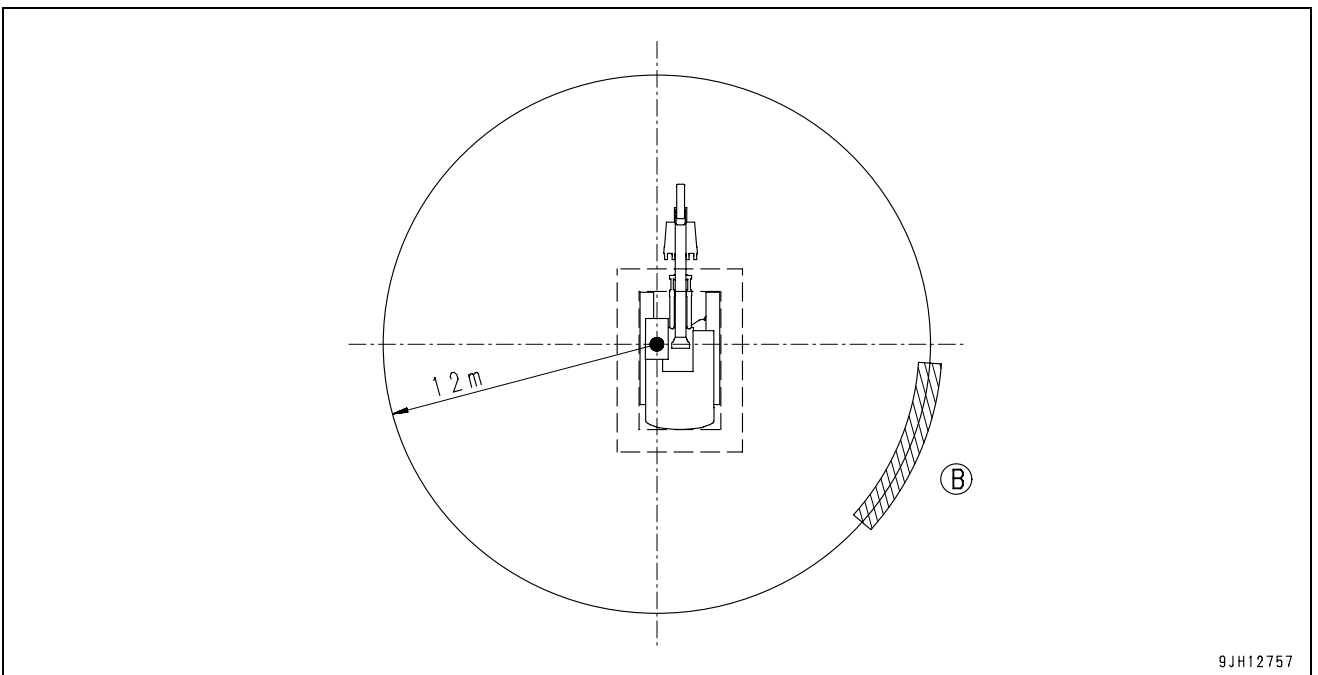

BREAKING-IN THE NEW MACHINE

NOTICE

Your Komatsu machine has been thoroughly adjusted and tested before shipment from the factory. However, operating the machine under full load before breaking the machine in can adversely affect the performance and shorten the machine life.

Be sure to break in the machine for the initial 100 hours (as indicated on the service meter).

Make sure that you fully understand the content of this manual, and pay careful attention to the following points when breaking in the machine.

- Run the engine at idle for 15 seconds after starting it. During this time, do not operate the control levers or fuel control dial.
- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Immediately after starting the engine, avoid sudden starts, sudden acceleration, unnecessary sudden stops, and sudden changes in direction.


PRODUCT INFORMATION

When requesting service or ordering replacement parts, please inform your Komatsu distributor of the following items.

PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE


On the bottom right of the operator's cab

The design of the nameplate differs according to the territory.

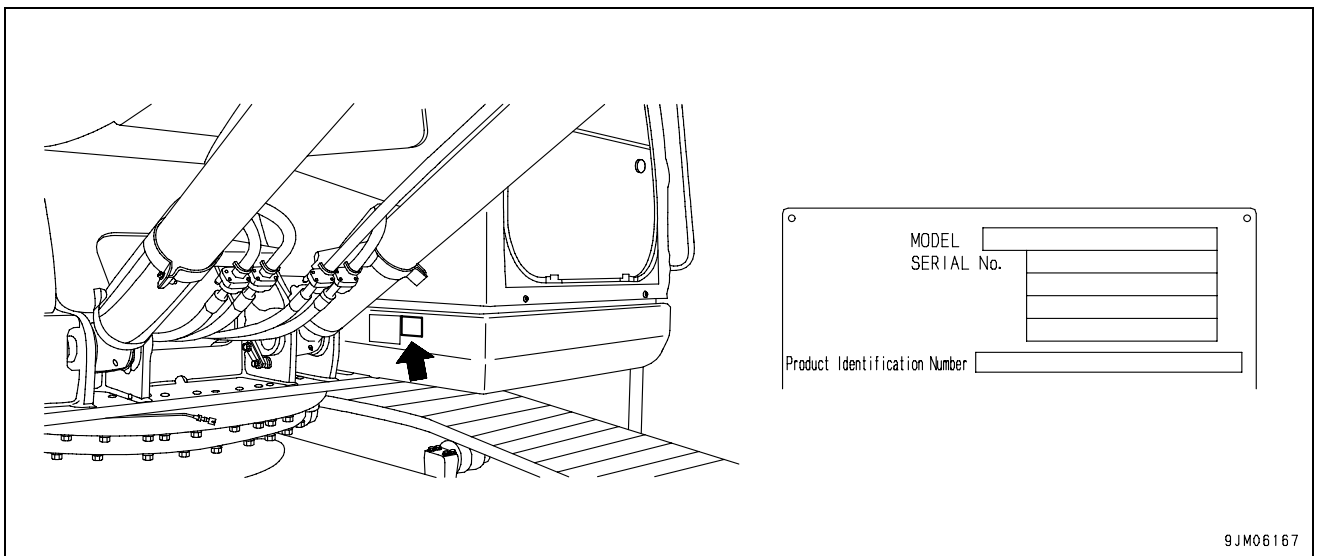

EPA REGULATIONS, ENGINE NUMBER PLATE


On the upper side of the engine cylinder head cover.

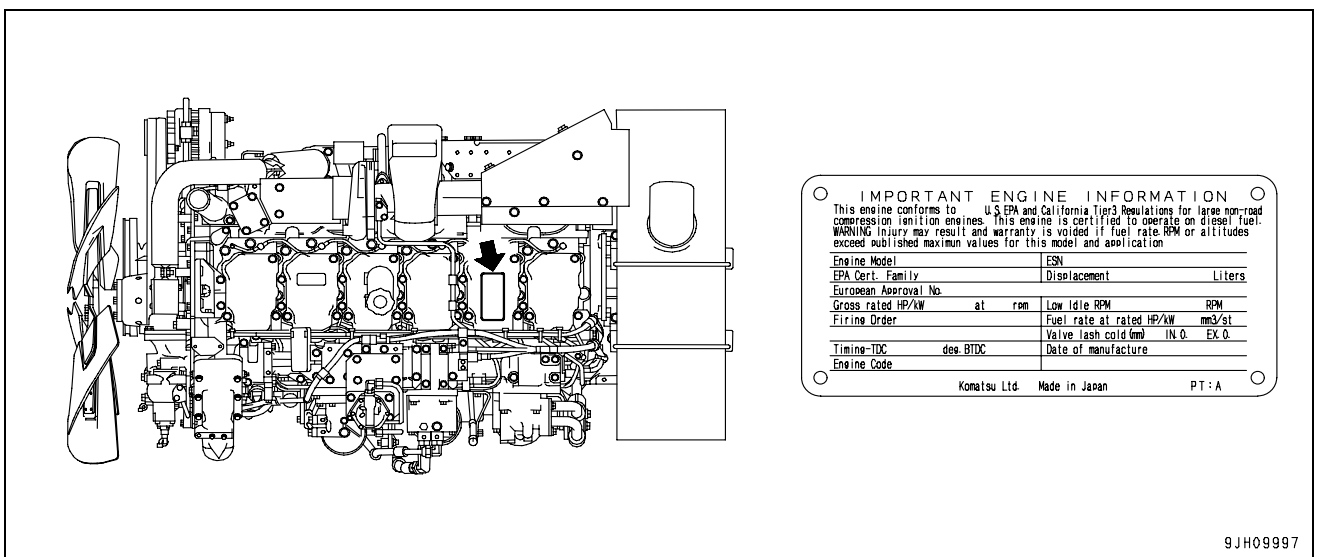

EPA: Environmental Protection Agency, U.S.A.

SERVICE METER LOCATION


On top of the machine monitor

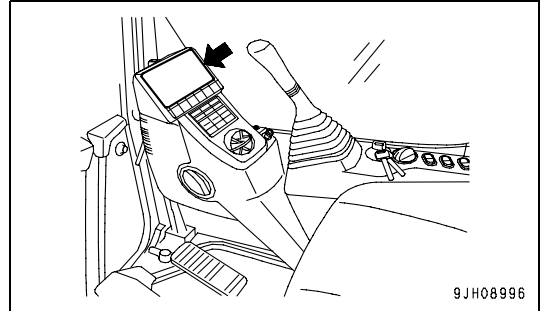

YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR

Machine serial No.	
Engine serial No.	
Product identification number (PIN)	
Manufacturers name	KOMATSU UK LTD.
Address	Durham Road
	Birtley
	Chester-Le Street
	County Durham DH32QX
	United Kingdom
Distributor name	
Address	
Service Personnel	
Phone/Fax	

MACHINE SERIAL PLATE

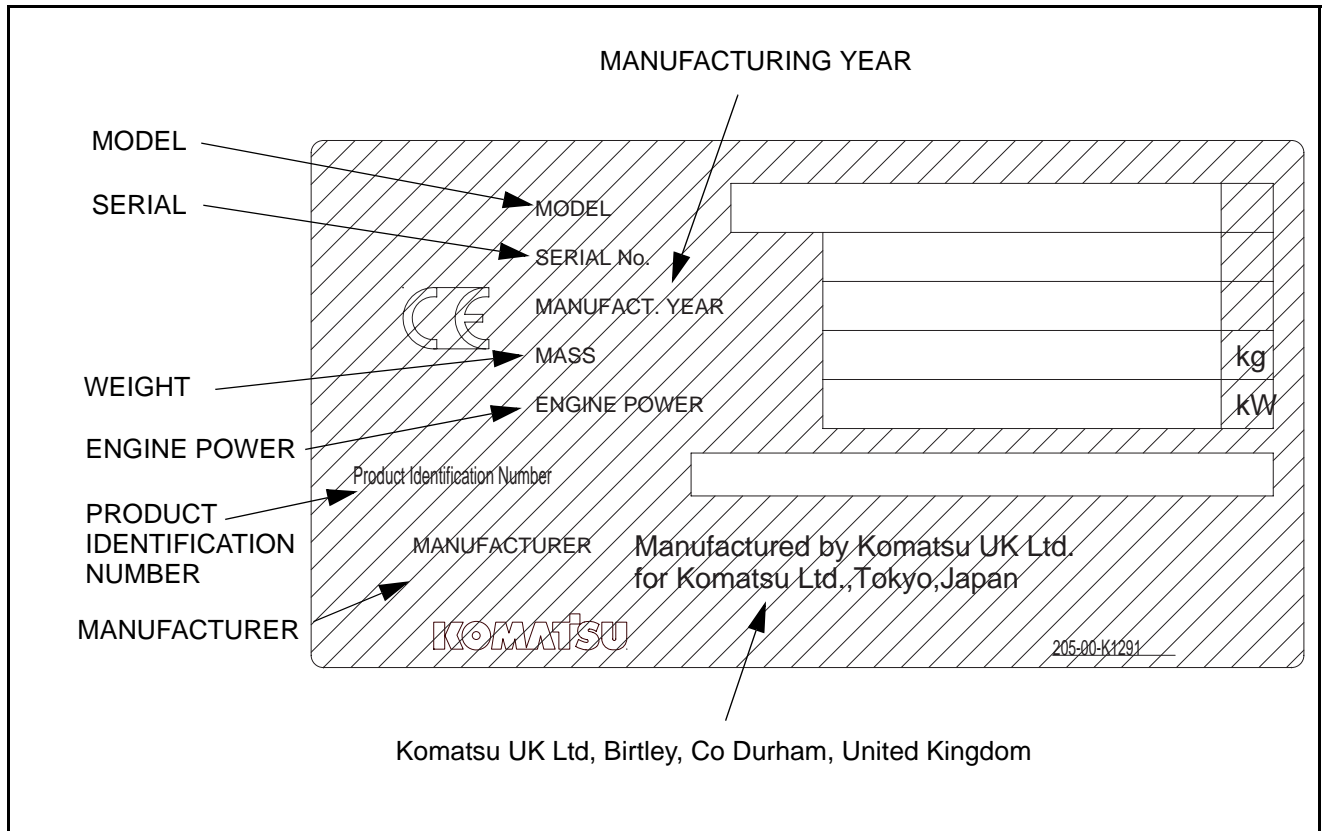

CONTENTS

FOREWORD

FOREWORD 1-2

SAFETY INFORMATION 1-3

 Noise emission levels 1-5

 Vibration levels 1-6

 Guide to Reduce Vibration Levels on Machine 1-6

INTRODUCTION 1-8

 DIRECTIONS OF MACHINE 1-8

 VISIBILITY FROM OPERATOR'S SEAT 1-9

 PROXIMITY VISIBILITY 1-9

 12M CIRCUMFERENCE VISIBILITY 1-9

 BREAKING-IN THE NEW MACHINE 1-10

PRODUCT INFORMATION 1-11

 PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE 1-11

 EPA REGULATIONS, ENGINE NUMBER PLATE 1-11

 SERVICE METER LOCATION 1-12

 YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR 1-12

 MACHINE SERIAL PLATE 1-13

SAFETY

SAFETY INFORMATION 2-2

SAFETY LABELS 2-4

 LOCATION OF SAFETY LABELS 2-4

 SAFETY LABELS 2-5

SAFETY INFORMATION 2-13

SAFETY MACHINE OPERATION 2-22

 STARTING ENGINE 2-22

 OPERATION 2-24

 TRANSPORTATION 2-30

 BATTERY 2-31

 TOWING 2-33

 LIFTING OBJECTS WITH BUCKET 2-34

SAFETY MAINTENANCE INFORMATION 2-35

OPERATION

MACHINE VIEW ILLUSTRATIONS	3-2
OVERALL MACHINE VIEW.....	3-2
CONTROLS AND GAUGES.....	3-3
Machine Monitor	3-4
DETAILED CONTROLS AND GAUGES	3-5
MONITORING SYSTEM.....	3-5
Basic Operation of Machine Monitor.....	3-6
Emergency Monitors.....	3-11
Caution Monitors.....	3-13
Basic Check Monitors	3-16
Meter Display Portion	3-18
Monitor Switches Portion	3-25
Handling Function Switches	3-33
Attachment 2 Setting	3-54
SWITCHES	3-69
CONTROL LEVERS AND PEDALS	3-75
SUN ROOF	3-78
WINDSHIELD	3-79
EMERGENCY ESCAPE HAMMER	3-84
DOOR LOCK	3-85
CAP WITH LOCK.....	3-85
DRINK BOX	3-87
MAGAZINE BOX.....	3-87
ASHTRAY	3-87
AIR CONDITIONER CONTROLS.....	3-88
Air Conditioner Control Panel	3-88
Method of Operation.....	3-92
Use Air Conditioner with Care	3-98
Inspection and maintenance of Air Conditioner Equipped Machine	3-99
RADIO.....	3-100
Control Panel.....	3-100
Controls of Radio	3-102
Use Radio with Care.....	3-104
Space for radio cassette	3-104
AUXILIARY ELECTRIC POWER.....	3-105
24V Power Source.....	3-105
12V Power Source.....	3-105
FUSE	3-106
FUSIBLE LINK	3-107
CONTROLLER	3-107
TOOL BOX.....	3-108
GREASE PUMP HOLDER.....	3-108
FIRE EXTINGUISHER.....	3-108
REFUELLING PUMP	3-109
ACCUMULATOR	3-110

CONTENTS

Releasing Hydraulic Pressure With Accumulator 3-110

MACHINE OPERATIONS AND CONTROLS..... 3-111

BEFORE STARTING ENGINE 3-111

 Walk-around Checks 3-111

 Checks Before Starting..... 3-112

 Adjustment..... 3-119

 Seat Belt 3-125

 Operations Before Starting Engine 3-126

STARTING ENGINE 3-128

AFTER STARTING ENGINE 3-131

 Engine Warm Up 3-131

 Hydraulic Equipment Warm Up 3-133

 Operation After Completion Of Warm-Up Operation 3-139

STOPPING THE ENGINE 3-141

MACHINE OPERATION 3-142

 Preparations for Moving the Machine 3-142

 Moving Machine Forward 3-143

 Moving Machine Backward..... 3-144

 Stopping Machine 3-145

STEERING THE MACHINE 3-146

 Steering 3-146

SWINGING 3-148

WORK EQUIPMENT CONTROLS AND OPERATIONS 3-149

WORKING MODE..... 3-151

PROHIBITED OPERATIONS 3-153

GENERAL OPERATION INFORMATION 3-157

TRAVELING ON SLOPES..... 3-159

ESCAPE FROM MUD..... 3-161

 Track on One Side Stuck..... 3-161

 Tracks on Both Sides Stuck..... 3-161

RECOMMENDED APPLICATIONS 3-162

 Backhoe Work 3-162

 Shovel Work 3-162

 Ditching Work 3-162

 Loading Work..... 3-163

BUCKET REPLACEMENT AND INVERSION 3-164

 Replacement..... 3-164

 Inversion 3-165

PARKING MACHINE 3-166

MACHINE INSPECTION AFTER DAILY WORK 3-168

LOCKING..... 3-168

TRANSPORTATION..... 3-169

TRANSPORTATION PROCEDURE 3-169

LOADING AND UNLOADING WITH TRAILER 3-170

 Loading 3-171

 Securing Machine 3-173

Unloading.....	3-176
LIFTING MACHINE.....	3-178
TRANSPORTATION POSTURE	3-180
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE.....	3-182
COLD WEATHER OPERATION	3-184
COLD WEATHER OPERATION INFORMATION.....	3-184
Fuel and Lubricants	3-184
Cooling System Coolant	3-184
Battery	3-185
AFTER DAILY WORK COMPLETION.....	3-186
AFTER COLD WEATHER SEASON	3-186
LONG TERM STORAGE.....	3-187
BEFORE STORAGE.....	3-187
DURING STORAGE	3-187
AFTER STORAGE.....	3-188
STARTING MACHINE AFTER LONG-TERM STORAGE	3-188
TROUBLES AND ACTIONS	3-189
RUNNING OUT OF FUEL	3-189
PHENOMENA THAT ARE NOT FAILURES.....	3-190
TOWING THE MACHINE	3-190
LIGHTWEIGHT TOWING HOLE	3-191
SEVERE JOB CONDITION	3-191
DISCHARGED BATTERY	3-192
Battery Removal and Installation.....	3-192
Battery Charges.....	3-193
Starting Engine with Booster Cables	3-194
OTHER TROUBLE	3-196
Electrical System	3-196
Chassis.....	3-197
Engine.....	3-198
Electronic Control System	3-199
Point of Contact to Telephone when Error Occurs	3-200

MAINTENANCE

MAINTENANCE INFORMATION	4-2
OUTLINE OF SERVICE.....	4-4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC	4-4
OIL.....	4-4
FUEL.....	4-5
COOLANT AND WATER FOR DILUTION	4-5
GREASE.....	4-6
CARRYING OUT KOWA (Komatsu Oil Wear Analysis)	4-6
STORING OIL AND FUEL.....	4-7

CONTENTS

FILTERS	4-7
EXPLANATION OF LUBRICATION CHART DECAL	4-8
ELECTRIC SYSTEM MAINTENANCE	4-10
WEAR PARTS	4-11
WEAR PARTS LIST	4-11
RECOMMENDED FUEL, COOLANT, AND LUBRICANT	4-12
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL	4-14
TIGHTENING TORQUE SPECIFICATIONS	4-15
TIGHTENING TORQUE LIST	4-15
SAFETY CRITICAL PARTS	4-16
SAFETY CRITICAL PARTS LIST	4-16
MAINTENANCE SCHEDULE	4-17
MAINTENANCE SCHEDULE CHART	4-17
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER	4-19
MAINTENANCE PROCEDURE	4-20
INITIAL 1000 HOURS MAINTENANCE (ONLY AFTER THE FIRST 1000 HOURS)	4-20
WHEN REQUIRED	4-21
CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT	4-21
CLEAN INSIDE OF COOLING SYSTEM	4-27
CHECK AND TIGHTEN TRACK SHOE BOLTS	4-30
CHECK AND ADJUST TRACK TENSION	4-31
REPLACE BUCKET TEETH (VERTICAL PIN TYPE)	4-33
REPLACE BUCKET TEETH (HORIZONTAL PIN TYPE)	4-36
REPLACE BUCKET SIDE CUTTER, SHROUD	4-38
ADJUST BUCKET CLEARANCE	4-39
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID	4-40
CHECK AND MAINTENANCE AIR CONDITIONER	4-41
WASH WASHABLE FLOOR	4-42
BLEEDING AIR FROM HYDRAULIC SYSTEM	4-45
CHECK BEFORE STARTING	4-47
EVERY 50 HOURS MAINTENANCE	4-48
LUBRICATING	4-48
EVERY 250 HOURS MAINTENANCE	4-49
LUBRICATE SWING CIRCLE	4-49
CHECK LEVEL OF BATTERY ELECTROLYTE	4-50
CHECK FAN BELT, ALTERNATOR BELT TENSION, ADJUST	4-52
CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST	4-53
EVERY 500 HOURS MAINTENANCE	4-54
LUBRICATING	4-54
REPLACE FUEL PRE-FILTER CARTRIDGE	4-55
CHECK SWING PINION GREASE LEVEL, ADD GREASE	4-58
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE	4-59

CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTERCOOLER FINS AND CONDENSER FINS.....	4-61
CLEAN AIR CONDITIONER FRESH/RECIRC FILTERS.....	4-62
REPLACE BREATHER ELEMENT IN HYDRAULIC TANK	4-64
CHECK OIL LEVEL IN SWING MACHINERY CASE, ADD OIL.....	4-65
CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL	4-66
EVERY 1000 HOURS MAINTENANCE.....	4-67
REPLACE FUEL MAIN FILTER CARTRIDGE	4-67
REPLACE HYDRAULIC OIL FILTER ELEMENT	4-70
CHANGE OIL IN SWING MACHINERY CASE	4-71
CHECK OIL LEVEL IN DAMPER CASE, ADD OIL.....	4-72
CHECK ALL TIGHTENING POINTS OF ENGINE EXHAUST PIPE CLAMPS	4-72
REPLACE HYDRAULIC TANK ADDITIONAL BREATHER ELEMENT	4-73
CHECK NITROGEN GAS CHARGE PRESSURE IN ACCUMULATOR (for breaker)	4-73
REPLACE CORROSION RESISTOR CARTRIDGE	4-74
EVERY 2000 HOURS MAINTENANCE.....	4-75
CHANGE OIL IN FINAL DRIVE CASE	4-75
CLEAN HYDRAULIC TANK STRAINER	4-76
CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT).....	4-76
CHECK ALTERNATOR.....	4-79
CHECK ENGINE VALVE CLEARANCE, ADJUST.....	4-79
CHECK VIBRATION DAMPER	4-79
EVERY 4000 HOURS MAINTENANCE.....	4-80
CHECK WATER PUMP	4-80
CHECK STARTING MOTOR.....	4-80
REPLACE ACCUMULATOR (FOR CONTROL CIRCUIT).....	4-80
CHECK FOR LOOSENESS OF HIGH-PRESSURE PIPING CLAMP, HARDENING OF RUBBER.....	4-81
CHECK FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER.....	4-81
EVERY 5000 HOURS MAINTENANCE.....	4-82
CHANGE OIL IN HYDRAULIC TANK.....	4-82
EVERY 8000 HOURS MAINTENANCE.....	4-84
REPLACE HIGH-PRESSURE PIPING CLAMP	4-84
REPLACE FUEL SPRAY PREVENTION CAP.....	4-84

SPECIFICATIONS

SPECIFICATIONS.....	5-2
---------------------	-----

ATTACHMENTS ANDD OPTIONS

GENERAL PRECAUTIONS FOR SAFETY.....	6-2
PRECAUTIONS WHEN SELECTING.....	6-2
READ THE INSTRUCTION MANUAL THOROUGHLY	6-2
PRECAUTIONS WHEN REMOVING OR INSTALLING	6-2
PRECAUTIONS WHEN USING.....	6-3

CONTENTS

HYDRAULIC QUICK COUPLER PIPING	6-4
LOCATIONS	6-4
OPERATION	6-5
BUCKET WITH HOOK	6-7
HOOK CONDITION	6-7
PROHIBITED OPERATIONS	6-7
MACHINE READY FOR ATTACHMENT	6-8
LOCATIONS	6-8
HYDRAULIC CIRCUIT	6-12
Switching Hydraulic Circuit	6-12
Adjusting Oil Flow	6-12
Switching Between Breaker and General Attachment	6-12
Hydraulic Circuit Connection	6-13
Oil Flow Path	6-14
Replace Additional Breaker Filter Element	6-15
ATTACHMENT REMOVAL AND INSTALLATION	6-17
Attachment Removal	6-17
Attachment Installation	6-19
ATTACHMENT OPERATIONS	6-21
Operation When Using Breaker	6-21
Operation When Using General Attachment 1 (e.g. Crusher)	6-23
Working Mode Selection	6-24
Operation When Using Attachment 2 (e.g clamshell rotation, crusher rotation)	6-25
LONG TERM STORAGE	6-25
SPECIFICATIONS	6-25
ATTACHMENT GUIDE	6-26
ATTACHMENT COMBINATIONS	6-26
SELECTION OF TRACK SHOES	6-28
METHOD OF SELECTING SHOES	6-28
RECOMMENDED ATTACHMENT OPERATIONS	6-29
HYDRAULIC BREAKER	6-29
HANDLING MACHINES EQUIPPED WITH KOMTRAX	6-33
BASIC PRECAUTIONS	6-33
SUPER LONG FRONT BOOM AND ARM	6-34
OPERATION INSTRUCTION	6-34
WORKING MODES	6-35
CHECKS BEFORE STARTING	6-36
USING SUPER LONG FRONT	6-36
METHOD OF WORK	6-38
WHEN TRAVELLING	6-38
CONTROL LEVERS, PEDALS	6-39
TRANSPORT & STORAGE OF SUPER LONG FRONT MACHINE	6-42
INSTALLATION OF SUPPORTING LINK	6-42

TRANSPORTATION OF SUPER LONG FRONT MACHINE	6-43
WORKING RANGE OF SUPER LONG FRONT	6-44
LIFTING CAPACITY PC450 LC 20m SUPER LONG FRONT	6-45
MAINTENANCE	6-46
SPECIAL SERVICE REQUIREMENTS FOR SUPER LONG FRONT WORK EQUIPMENT	6-46
EVERY 50 HOURS SERVICE	6-47
EVERY 100 HOURS SERVICE	6-48

HIGH REACH DEMOLITION EQUIPMENT 27M

GENERAL VIEW OF MACHINE	7-2
CAUTION ITEMS	7-3
POSITION FOR ATTACHING SAFETY LABELS	7-4
POSITION FOR ATTACHING SAFETY LABELS	7-4
SAFETY LABELS	7-5
CONTROL LEVERS AND SWITCHES	7-6
SAFETY LOCK LEVER	7-6
TRAVEL LEVERS	7-7
WORK EQUIPMENT CONTROL LEVERS	7-8
ATTACHMENT ROTATION (with auto-deceleration)	7-9
INTERMEDIATE LINK CONTROL PEDAL (with auto-deceleration)	7-10
CRUSHER CONTROL FOR OPENING AND CLOSING	7-11
TILTING CAB MECHANISM OPERATION	7-12
BOOM ANGLE ALARM BUZZER CANCEL SWITCH	7-13
CEILING WINDOW WIPER SWITCH	7-14
MACHINE OPERATIONS AND CONTROLS	7-15
BEFORE STARTING ENGINE	7-15
FUNCTION CHECK	7-16
PRECAUTIONS WHEN OPERATING	7-16
PROHIBITION OF WORK OUTSIDE SPECIFIED WORKING RANGE	7-17
PROHIBITION OF WORK AT THE STROKE END OF A CYLINDER	7-20
PROHIBITION OF WORK WITH HYDRAULIC BREAKER	7-21
WHEN WORKING IN MEDIUM REACH CONFIGURATION	7-21
OPERATION	7-22
ADJUSTMENT OF HYDRAULIC VARIABLE GAUGE UNDERCARRIAGE, (Where Fitted)	7-22
OPERATING WORK EQUIPMENT	7-23
ATTACHMENT CONTROL	7-24
RAISING WORK EQUIPMENT	7-25
WORKING RANGE AND USING RANGE OF BOOM	7-27
POSTURE WHEN LEAVING MACHINE	7-30
DEMOLITION DIGGING BOOM INSTALLATION AND REMOVAL	7-31
PROCEDURE FOR INSTALLATION AND REMOVAL OF DEMOLITION DIGGING EQUIPMENT	7-31
REMOVAL OF HIGH REACH WORK EQUIPMENT	7-31

CONTENTS

FITTING DEMOLITION DIGGING EQUIPMENT.....	7-35
REMOVAL OF DEMOLITION DIGGING EQUIPMENT.....	7-39
CONNECTING DIGGING ARM TO DEMOLITION DIGGING BOOM	7-39
MEDIUM REACH.....	7-40
PURGING AIR PROCEDURES	7-41
PURGING PROCEDURE TO REMOVE AIR FROM HYDRAULIC CYLINDER LINES.....	7-41
PROCEDURE FOR PURGING AIR FROM BOOM LOCK VALVE PPC CIRCUIT.....	7-41
PURGING AIR FROM HYDRAULIC DRIFT PREVENTATIVE VALVE PPC CIRCUITS OF MID LINK AND ARM CYLINDER.....	7-43
TRANSPORTATION	
(high reach demolition equipment fitted)	7-45
PROCEDURE FOR LOADING ON TO TRAILER.....	7-45
TRANSPORTATION (demolition digging equipment fitted).....	7-46
PROCEDURE FOR LOADING ON TO TRAILER.....	7-46
TRANSPORTATION (high reach demolition equipment alone).....	7-46
PROCEDURE FOR LOADING ON TO TRAILER.....	7-46
SPECIFICATIONS	7-51
WORKING RANGE (PC450LCD HIGH REACH)	7-51
WORKING RANGE (PC450LCD MEDIUM REACH).....	7-52
WORKING RANGE (PC450LCD LOW REACH)	7-53
WORKING RANGE (PC450LCD DIGGING)	7-54
WEIGHTS AND DIMENSIONS.....	7-55
TRANSPORTATION (High and Medium Reach work equipment) - PC450LCD	7-56
TRANSPORTATION (Digging equipment) - PC450LCD	7-57
EXPLANATION OF LIFTING CAPACITY CHART.....	7-58

INDEX

COLOPHON

SAFETY



WARNING

Please read and make sure that you fully understand the precautions described in this manual and the safety labels on the machine. When operating or servicing the machine, always follow these precautions strictly.

SAFETY INFORMATION

SAFETY LABELS.....	2-4
LOCATION OF SAFETY LABELS	2-4
SAFETY LABELS.....	2-5
SAFETY INFORMATION	
Safety rules	2-13
If problems are found	2-13
Working wear and personal protective items	2-13
Fire extinguisher and first aid kit	2-13
Safety equipment	2-14
Keep machine clean.....	2-14
Keep operator's compartment clean	2-14
Leaving operator's seat with lock	2-14
Handrails and steps	2-15
Precautions when working in high place	2-15
Mounting and dismounting	2-15
No persons on attachments	2-15
Do not get caught in articulated portion	2-15
Burn prevention.....	2-16
Fire prevention and explosion prevention	2-16
Action if fire occurs.....	2-17
Windshield washer fluid	2-17
Falling objects, flying objects and intruding objects prevention	2-18
Attachment installation	2-18
Attachment combinations.....	2-18
Cab window glasses	2-18
Unauthorized modifications.....	2-19
Safety at jobsite.....	2-19
Working on loose ground	2-19
Distance to high voltage cables	2-20
Ensure good visibility	2-20
Ventilation for enclosed area.....	2-21
Signalman's signal and signs.....	2-21
Emergency exit from operator's cab	2-21
Asbestos dust hazard prevention.....	2-21
SAFETY MACHINE OPERATION	2-22
STARTING ENGINE	2-22
Checks before starting engine	2-22
Safety rules for starting engine	2-23
Starting engine in cold weather.....	2-23
OPERATION	2-24
Checks before operation.....	2-24
Safety rules for changing machine directions	2-24
Safety rules for traveling	2-25
Traveling on slopes.....	2-25
Operations on slopes	2-26
Prohibited operations	2-27
Operations on snow	2-28
Parking machine	2-29
TRANSPORTATION	2-30
Loading and unloading.....	2-30
Shipping the machine	2-30
BATTERY.....	2-31


Battery hazard prevention	2-31
Starting engine with booster cables	2-32
TOWING	2-33
Safety rules for towing	2-33
LIFTING OBJECTS WITH BUCKET	2-34
Safety rules for lifting objects	2-34
SAFETY MAINTENANCE INFORMATION	2-35
Warning Tag	2-35
Keep Work Place Clean and Tidy	2-35
Appoint Leader when Working with Others	2-35
Stop Engine Before Carrying Out Maintenance	2-36
Two Workers for Maintenance when Engine is Running	2-36
Proper Tools	2-37
Accumulator, Gas spring	2-37
Personnel	2-37
Attachments	2-38
Work Under the Machine	2-38
Noise	2-38
When Using Hammer	2-38
Welding Works	2-38
Removing Battery Terminals	2-39
Safety First when Using High-pressure Grease to Adjust Track Tension	2-39
Do Not Disassemble Recoil Springs	2-39
Safety Rules for High-pressure Oil	2-39
Precaution for High Fuel Pressure	2-40
Safety Handling High-pressure Hoses	2-40
Precaution for High Voltage	2-40
Waste Materials	2-41
Air Conditioner Maintenance	2-41
Compressed Air	2-41
Periodic Replacement of Safety Critical Parts	2-41

SAFETY LABELS

The following warning signs and safety labels are used on this machine.

- Be sure that you fully understand the correct position and content of labels.
- To ensure that the content of labels can be read properly, be sure that they are in the correct place and always keep them clean. When cleaning them, do not use organic solvents or gasoline. These may cause the labels to peel off.
- There are also other labels in addition to the warning signs and safety labels. Handle those labels in the same way.
- If the labels are damaged, lost, or cannot be read properly, replace them with new ones. For details of the part numbers for the labels, see this manual or the actual label, and place an order with Komatsu distributor.

LOCATION OF SAFETY LABELS

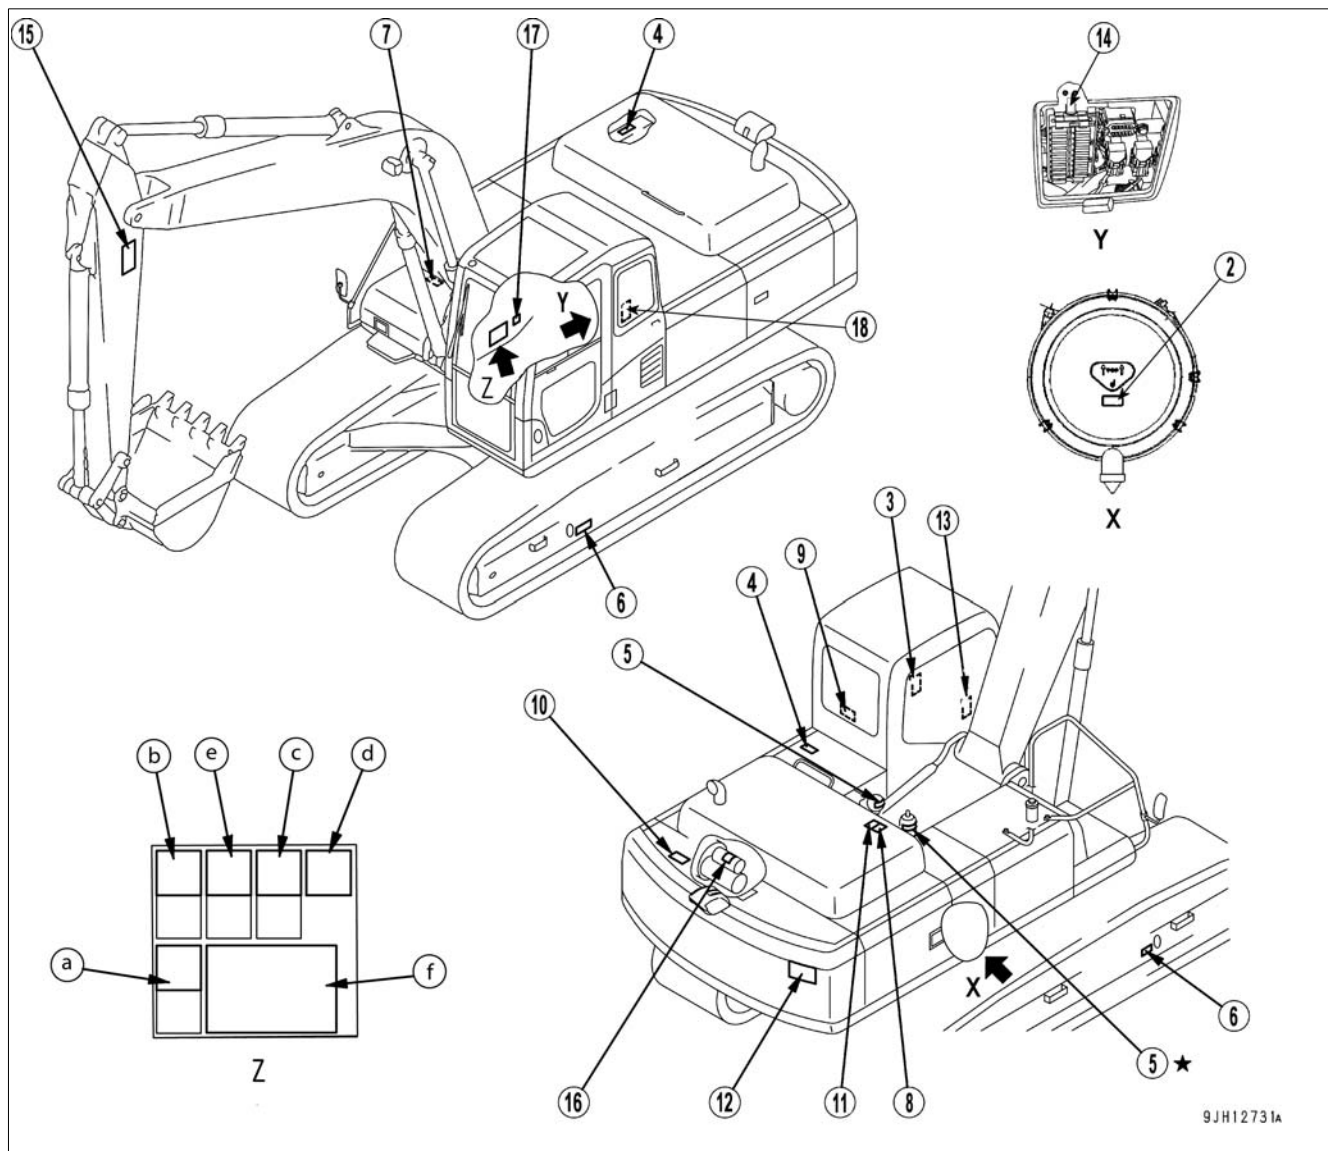


★ : if equipped

SAFETY LABELS


1. (20Y-00-K2020)

- Warnings for operation, inspection and maintenance
- Improper operation and maintenance can cause serious injury or death.
- Read the manual and labels before operation and maintenance.
Follow instructions and warnings in manual and in labels on machine.

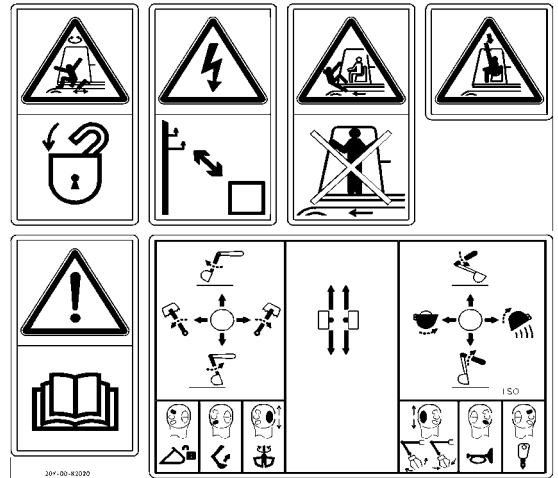


- Warning!

- a. Read the manual before operating, maintenance, disassembly, assembly and transportation.

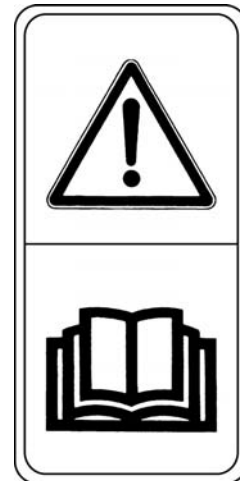

- b. Always apply lock when leaving operator's seat.

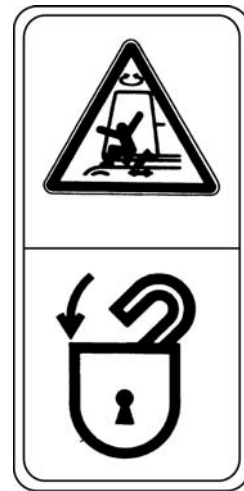

- c. WARNING - No passengers
No passengers allowed to ride on machine while it is moving




- d. WARNING - DANGER OF FALLING OBJECTS
Do not operate where a danger of falling objects exists.
Consult your dealer for fitting of FOPS protection



- e. Caution for going close to electric cables.
- An electrocution hazard if the machine is brought too near to electric power lines


- Keep a safe distance from electric power lines.

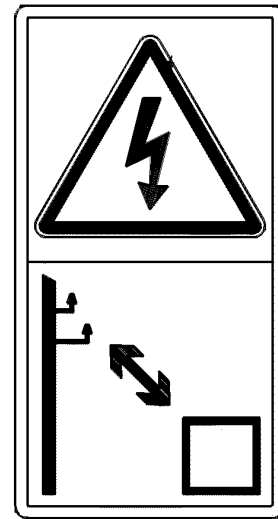

- f. Control levers operational function diagram.


⚠ WARNING

In order to prevent an accident resulting in injury or death caused by error-operation, confirm the machine motion and indicated operating pattern, when operating machines. Pay attention to the circumference and operate slowly when confirming the machine motion.

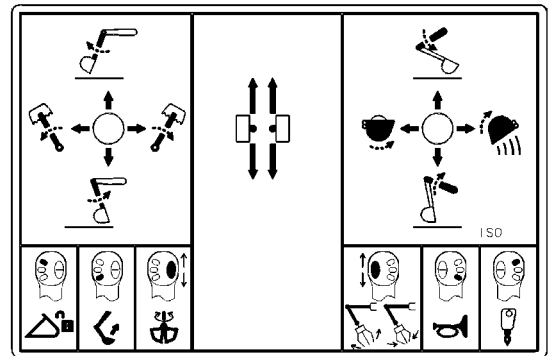

(2) Caution for operation, inspection and maintenance (20E-00-K1120.)

- Read the manual before operation, maintenance, disassembly, assembly and transportation.

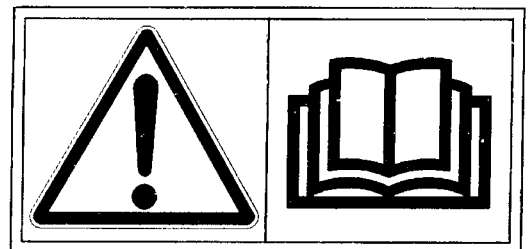

(3) Caution when stowing front window (09803-A0481)

- Sign indicates a hazard from falling window.
- After raising window, be sure to lock it in place with lock pins.



(4) Caution for high-temperature coolant and hydraulic oil

(09653-A0481)


- Never remove the cap when the engine is at operating (high) temperature. Steam or high temperature oil blowing up from the radiator or hydraulic tank, will cause personal injury and/or burns.
- Never remove the radiator cap or hydraulic tank oil filler when cooling water or hydraulic oil is at high temperature.



(5) Caution for handling accumulator.


(09659-A057B)

- There is the hazard of explosion causing injury.
- Do not disassemble the accumulator, make holes in it, weld it cut it, hit it, roll it or bring it near flame.

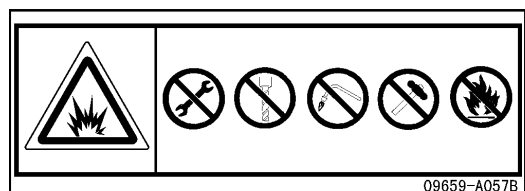


(6) Caution when adjusting track tension (09657-A0881)

- Sign indicates a hazard of flying plug from track adjuster that could cause injury.
- Read manual and adjusting track for safe and proper handling.

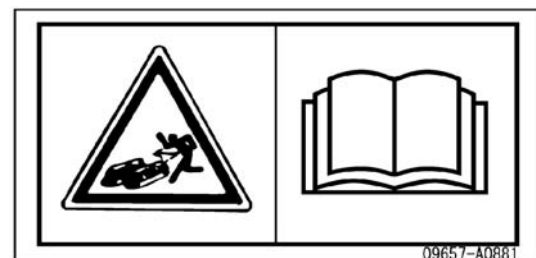


(7) Caution for handling cable (09808-A0881)

- Sign indicates an electric hazard from handling the cable.
- Read manual for safe and proper handling.

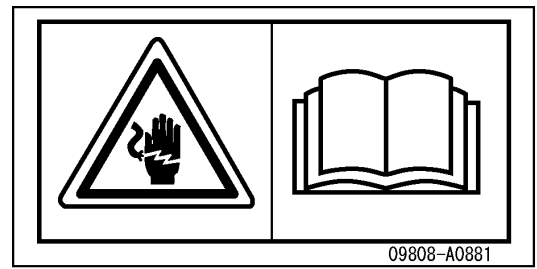


(8) Stop rotating parts when inspection and maintenance (09667-A0481)

- Sign indicates a hazard of rotating parts, such as belt.
- Turn off before inspection and maintenance.

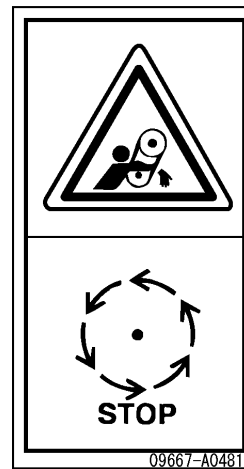

(9) Emergency escape (09844-00050)

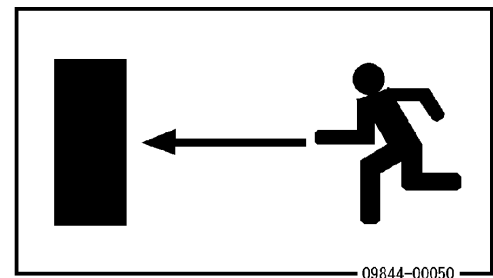


(10) Caution against falling (09805-A0881)

- There is the hazard of falling down.
- Do not go close to the edge of the machine by mistake.



(11) Caution against falling (09805-C0481)

- Sign indicates a hazard of falling.
- Do not step here!.

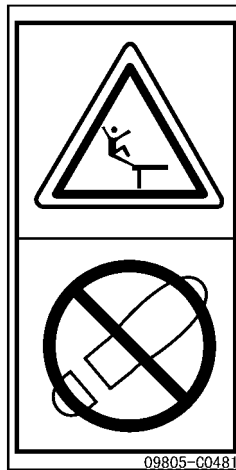


(12) Prohibited to enter within swing range (20E-00-K1150)

- There is danger of getting caught when upper structure swings.
- Do not enter range of swing.




(13) Caution for use of hydraulic quick coupler piping system (20J-00-11271)

- There is a danger of an exposed person being killed by falling attachment.
- Read the manual for safe operation.

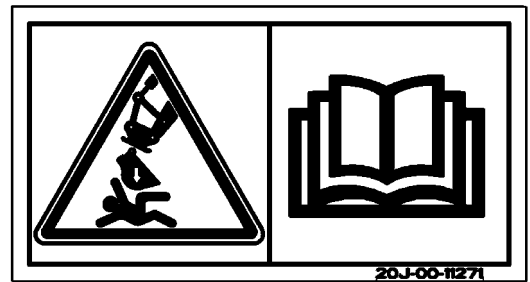

14) (206-00-K1010)

- Pump Control override switch and swing lock override switch
- Read the operation manual before operation

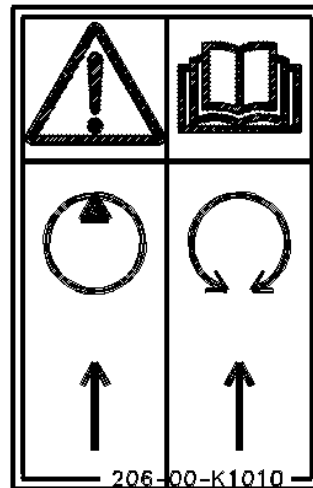

(15) Keeping out of working range area (20E-00-K1140)

- Sign indicates a hazard of being hit by the working device of the machine.
- Keep away from the machine during operation.



(16) Prohibition of jump start (09842-A0481)


- Start the engine only after sitting down in the operator's seat.
- Do not attempt to start the engine by short-circuiting the engine starting circuit. Such an act may cause a serious bodily injury or fire.



(17) Caution when swinging or traveling in reverse

⚠ WARNING

When swinging or backing up excavator, press button to change display mode on monitor so you can see rear and side of machine. Before moving, look around and at mirror and monitor to confirm that no one is around the machine. Failure to do so can result in serious injury or death.

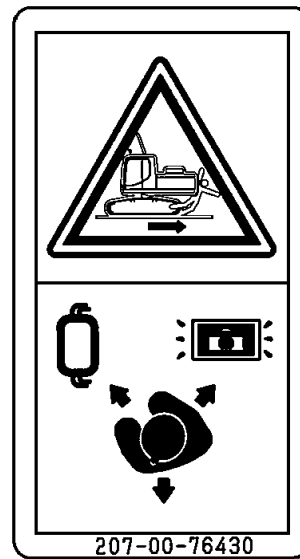

(18) Overload caution (208-00-76910).

- Do not exceed the safe lifting loads.

PC450-8
PC450LC-8

The label includes a diagram of an excavator with dimensions A and B, a warning triangle, and an open book icon. A table provides safe lifting loads in kg.

		kg			
B	A	7.5m	6.0m	4.5m	3.0m
6.0m		2850			
4.5m		3180	4220		
3.0m		3530	4850	7300	
1.5m		3800	5310	8000	
0.0m		3930	5490	8010	

208-00-76910

SAFETY INFORMATION

SAFETY RULES


- Only trained and authorized personnel can operate and maintain the machine.
- Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.
- If you are under the influence of alcohol or medication, your ability to safely operate or repair your machine may be severely impaired putting yourself and everyone else on your job site in danger.
- When working with another operator or with a person on work site traffic duty, be sure that all personnel understand all hand signals that are to be used.

IF PROBLEMS ARE FOUND

If you find any problems in the machine during operation or maintenance (noise, vibration, smell, incorrect gauges, smoke, oil leakage, etc., or any abnormal display on the warning devices or monitor), report to the person in charge and have the necessary action taken. Do not operate the machine until the problem has been corrected.

WORKING WEAR AND PERSONAL PROTECTIVE ITEMS


- Do not wear loose clothing and accessories. There is a hazard that they may catch on control levers or other protruding parts.
- If you have long hair and it hangs out from your hard hat, there is a hazard that it may get caught up in the machine, so tie your hair up and be careful not to let it get caught.
- Always wear a hard hat and safety shoes. If the nature of the work requires it, wear safety glasses, mask, gloves, ear plugs, and safety belt when operating or maintaining the machine.
- Check that all protective equipment functions properly before using it.

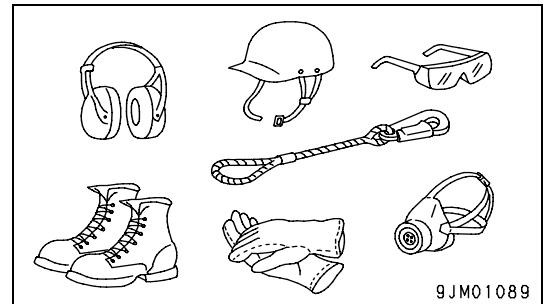

FIRE EXTINGUISHER AND FIRST AID KIT

Always follow the precautions below to prepare for action if any injury or fire should occur.

- Be sure that fire extinguishers have been provided and read the labels to ensure that you know how to use them in emergencies.
- Carry out periodic inspection and maintenance to ensure that the fire extinguisher can always be used.
- Provide a first aid kit in the storage point. Carry out periodic checks and add to the contents if necessary.

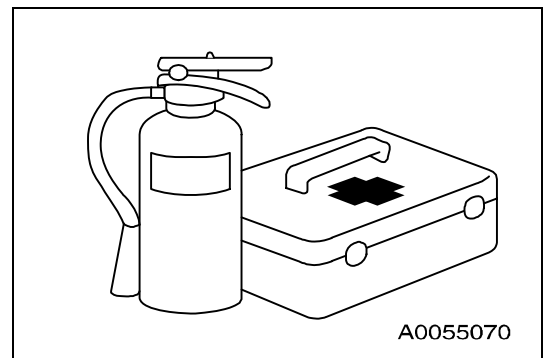


SAFETY EQUIPMENT

- Be sure that all guards and covers are in their proper position. Have guards and covers repaired immediately if they are damaged.
- Understand the method of use of safety features and use them properly.
- Never remove any safety features. Always keep them in good operating condition.

KEEP MACHINE CLEAN

- If water gets into the electrical system, there is a hazard that it will cause malfunctions or incorrect operation. Do not use water or steam to wash the electrical system (sensors, connectors).
- If inspection and maintenance is carried out when the machine is still dirty with mud or oil, there is a hazard that you will slip and fall, or that dirt or mud will get into your eyes. Always keep the machine clean.


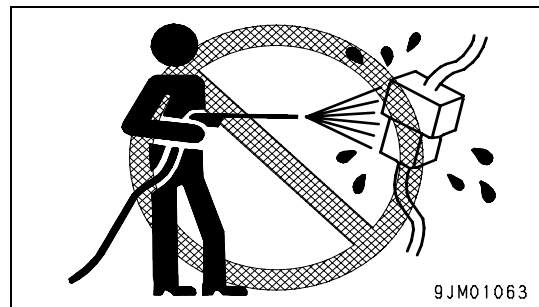


KEEP OPERATOR'S COMPARTMENT CLEAN

- When entering the operator's compartment, always remove all mud and oil from the soles of your shoes. If you operate the pedal with mud or oil affixed to your shoes, your foot may slip and this may cause a serious accident.
- Do not leave parts or tools lying around the operator's compartment.
- Do not stick suction pads to the window glass. Suction pads act as a lens and may cause fire.
- Do not use cellular telephones inside the operator's compartment when driving or operating the machine.
- Never bring any dangerous objects such as flammable or explosive items into the operator's compartment.

LEAVING OPERATOR'S SEAT WITH LOCK



- Before standing up from the operator's seat (such as when opening or closing the front window or roof window, or when removing or installing the bottom window, or when adjusting the operator's seat), always lower the work equipment completely to the ground, set lock lever (1) securely to the LOCK position (L), then stop the engine. If you accidentally touch the control levers or control pedals when they are not locked, there is a hazard that the machine may suddenly move and cause serious injury or property damage.
- When leaving the machine, always lower the work equipment completely to the ground, set lock lever (1) securely to the LOCK position (L), then stop the engine. Use the key to lock all the equipment. Always remove the key, take it with you, and keep it in the specified place.

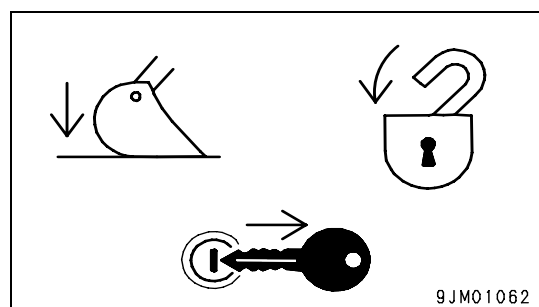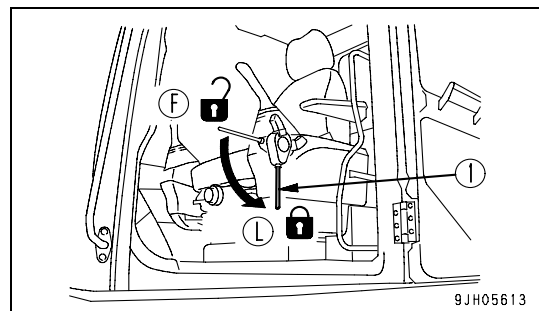


HANDRAILS AND STEPS

To prevent personal injury caused by slipping or falling off the machine, always do as follows.

- Use the handrails and steps marked by arrows in the diagram on the right when getting on or off the machine.

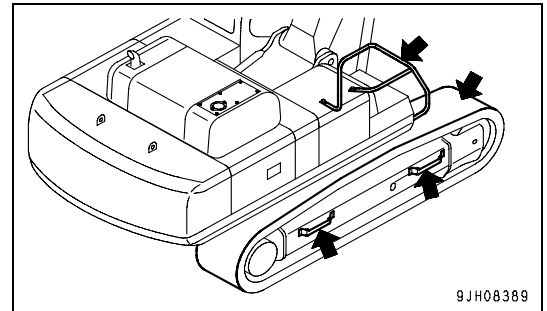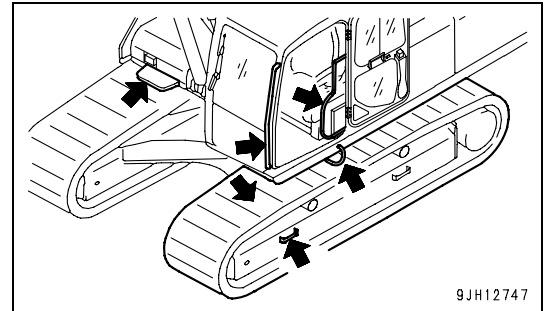

- To ensure safety, always face the machine and maintain three-point contact (both feet and one hand, or both hands and one foot) with the handrails and steps (including the track shoe) to ensure that you support yourself.
- Do not grip the control levers or lock lever when getting on or off the machine.
- Never climb on the engine hood or covers where there are no non-slip pads.
- Before getting on or off the machine, check the handrails and steps (including the track shoe). If there is any oil, grease, or mud on the handrails or steps (including the track shoe), wipe it off immediately. Always keep these parts clean. Repair any damage and tighten any loose bolts.
- Do not get on or off the machine while holding tools in your hand.

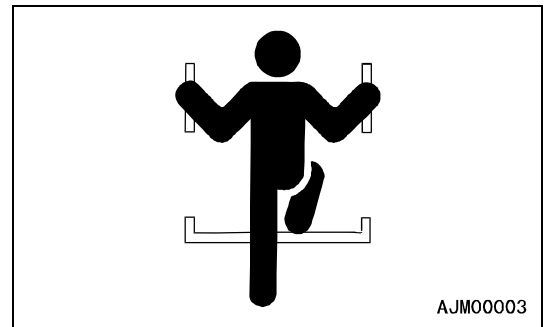

PRECAUTIONS WHEN WORKING IN HIGH PLACES

When working at high places, use a step ladder or other stand to ensure that the work can be carried out safely.

MOUNTING AND DISMOUNTING

- Never jump on or off the machine. Never get on or off a moving machine.
- If the machine starts to move when there is no operator on the machine, do not jump on to the machine and try to stop it.

NO PERSONS ON ATTACHMENTS

Never let anyone ride on the work equipment, or other attachments. There is a hazard of falling and suffering serious injury.

DO NOT GET CAUGHT IN ARTICULATED PORTION



The clearance around the work equipment will change according to the movement of the link. If you get caught, this may lead to serious personal injury. Do not allow anyone to approach any rotating or telescoping part.

BURN PREVENTION**Hot coolant**

- To prevent burns from hot water or steam spurting out when checking or draining the coolant, wait for the water to cool to a temperature where it is possible to touch the radiator cap by hand before starting the operation. Even when the coolant has cooled down, loosen the cap slowly to relieve the pressure inside the radiator before removing the cap.


Hot oil

- To prevent burns from hot oil spurting out when checking or draining the oil, wait for the oil to cool to a temperature where it is possible to touch the cap or plug by hand before starting the operation. Even when the oil has cooled down, loosen the cap or plug slowly to relieve the internal pressure before removing the cap or plug.

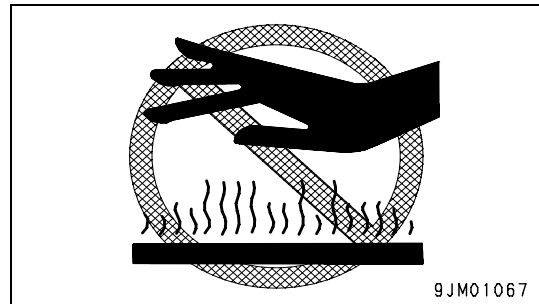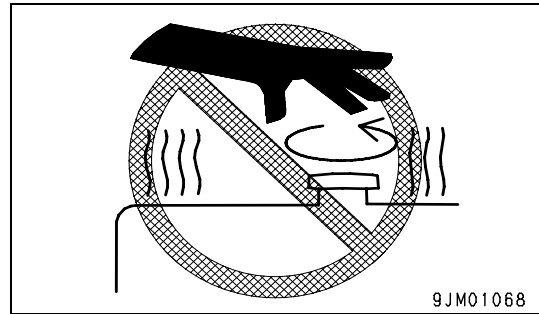**FIRE PREVENTION AND EXPLOSION PREVENTION****● Fire caused by fuel or oil**

Fuel, oil, antifreeze, and window washer liquid are particularly flammable and can be hazardous. To prevent fire, always observe the following:

- Do not smoke or use any flame near fuel or oil.
- Stop the engine before refueling.
- Do not leave the machine while adding fuel or oil.
- Tighten all fuel and oil caps securely.
- Do not spill fuel on overheated surfaces or on parts of the electrical system.
- Use well-ventilated areas for adding or storing oil and fuel.
- Keep oil and fuel in the determined place and do not allow unauthorized persons to enter.
- After adding fuel or oil, wipe up any spilled fuel or oil.
- When carrying out grinding or welding work on the chassis, move any flammable materials to a safe place before starting.
- When washing parts with oil, use a non-flammable oil. Diesel oil and gasoline may catch fire, so do not use them.
- Put greasy rags and other flammable materials into a safe container to maintain safety at the work place.
- Do not weld or use a cutting torch to cut any pipes or tubes that contain flammable liquids.

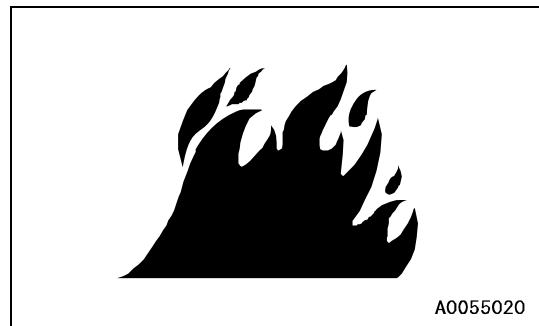

- **Fire caused by accumulation of flammable material.**

Remove any dry leaves, chips, pieces of paper, dust, or any other flammable materials accumulated or affixed around the engine, exhaust manifold, muffler, or battery, or inside the undercovers.

- **Fire coming from electric wiring**

Short circuits in the electrical system can cause fire.

- Always keep electric wiring connections clean and securely tightened.
- Check the wiring every day for looseness or damage. Tighten any loose connectors or wiring clamps. Repair or replace any damaged wiring.

- **Fire coming from hydraulic line**

Check that all the hose and tube clamps, guards, and cushions are securely fixed in position.

If they are loose, they may vibrate during operation and rub against other parts. This may lead to damage to the hoses, and cause high-pressure oil to spurt out, leading to fire damage or serious injury.

- **Explosion caused by lighting equipment**

When checking fuel, oil, battery electrolyte, window washer fluid, or coolant, always use lighting with anti explosion specifications. If such lighting equipment is not used, there is danger of explosion that may cause serious injury.

When taking the electrical power for the lighting from the machine itself, follow the instructions in of "AUXILIARY ELECTRIC POWER (3-105)".

ACTION IF FIRE OCCURS

If a fire occurs, escape from the machine as follows.

- Turn the start switch OFF to stop the engine.
- Use the handrails and steps to get off the machine.

WINDSHIELD WASHER FLUID



Use an ethyl alcohol base washer liquid.

Methyl alcohol base washer liquid may irritate your eyes, so do not use it.

FALLING OBJECTS, FLYING OBJECTS AND INTRUDING OBJECTS PREVENTION

On job sites where there is a hazard that falling objects, flying objects, or intruding objects may hit or enter the operator's cab, consider the operating conditions and install the necessary guards to protect the operator.

- When carrying out demolition or breaker operations, install a front guard and use a laminated coating sheet on the front glass.
- When working in mines or quarries where there is a hazard of falling rock, install FOPS (Falling Objects Protective Structure) and a front guard, and use a laminated coating sheet on the front glass.
- When carrying out the above operations, always close the front window. In addition, always ensure that bystanders are a safe distance away and are not in hazard from falling or flying objects.
- The above recommendations assume that the conditions are for standard operations, but it may be necessary to add additional guards according to the operating conditions on the job site. Always contact your Komatsu distributor for advice.

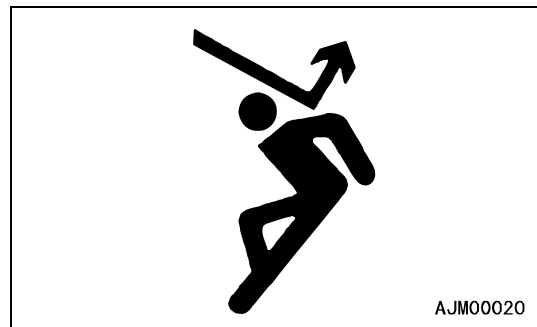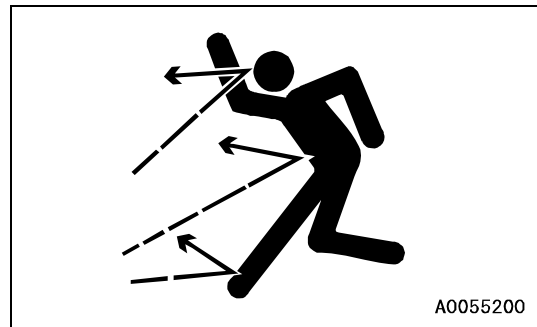

ATTACHMENT INSTALLATION

- When installing optional parts or attachments, there may be problems with safety or legal restrictions. Therefore contact your Komatsu distributor for advice.
- Any injuries, accidents, or product failures resulting from the use of unauthorized attachments or parts will not be the responsibility of Komatsu.
- When installing and using optional attachments, read the instruction manual for the attachment, and the general information related to attachments in this manual.

ATTACHMENT COMBINATIONS

Depending on the type or combination of work equipment, there is a hazard that the work equipment may hit the cab or other parts of the machine. Before using unfamiliar work equipment, check if there is any hazard of interference, and operate with caution.

CAB WINDOW GLASSES

- If a pane of the cab window on the work equipment side is broken, the work equipment may directly hit the operator. In that case, stop the machine immediately and replace the broken pane with new one.
- The ceiling window is made of organic glass (poly carbonate), and as such it is apt to break easily when receiving damage on the surface, thereby deteriorating its protective characteristic. If there is a crack or damage caused by a fallen rock, or when any sign of them is noticed, replace it with a new window.

UNAUTHORIZED MODIFICATIONS

If this machine is modified without permission from Komatsu, there is danger that problems may occur with safety and that this may lead to serious personal injury. Modifications may have an adverse effect on items such as machine strength and visibility. Before making any modifications, please consult your Komatsu distributor. Komatsu cannot take any responsibility for accidents, failures, or damage caused by modifications not authorized by Komatsu.

SAFETY AT JOBSITE


Before starting operations, thoroughly check the area for any unusual conditions that could be dangerous.

- When carrying out operations near combustible materials such as thatched roofs, dry leaves or dry grass, there is a hazard of fire, so be careful when operating.
- Check the terrain and condition of the ground at the work site, and determine the safest method of operation. Do not operate where there is a hazard of landslides or falling rocks.
- If water lines, gas lines, or high-voltage electrical lines may be buried under the work site, contact each utility and identify their locations. Be careful not to sever or damage any of these lines.

- Take action to prevent unauthorized people from approaching the job site.

When working on public roads, position flagmen and erect barriers to ensure the safety of passing traffic and pedestrians.

- When traveling or operating in shallow water or on soft ground, check the shape and condition of the bedrock, and the depth and speed of flow of the water before starting operations.

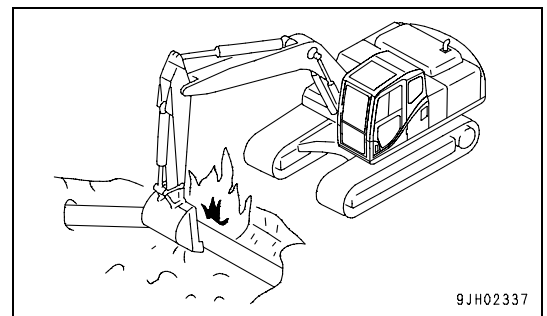

WORKING ON LOOSE GROUND


- Avoid traveling or operating your machine too close to the edge of cliffs, overhangs, and deep ditches. The ground may be weak in such areas. If the ground should collapse under the weight or vibration of the machine, there is a hazard that the machine may fall or tip over. Remember that the soil after heavy rain or blasting or after earthquakes is weak in these areas.
- When working on embankments or near excavated ditches, there is a hazard that the weight and vibration of the machine will cause the soil to collapse. Before starting operations, take steps to ensure that the ground is safe and to prevent the machine from rolling over or falling.

DISTANCE TO HIGH VOLTAGE CABLES

Do not travel or operate the machine near electric cables. There is a hazard of electric shock, which may cause serious injury or property damage. On job sites where the machine may go close to electric cables, always do as follows.

- Before starting work near electric cables, inform the local power company of the work to be performed, and ask them to take the necessary action.
- Even going close to high-voltage cables can cause electric shock, which may cause serious burns or even death. Always maintain a safe distance (see the table on the right) between the machine and the electric cable. Check with the local power company about safe operating procedure before starting operations.
- To prepare for any possible emergencies, wear rubber shoes and gloves. Lay a rubber sheet on top of the seat, and be careful not to touch the chassis with any exposed part of your body.
- Use a signalman to give warning if the machine approaches too close to the electric cables.
- When carrying out operations near high voltage cables, do not let anyone near the machine.
- If the machine should come too close or touch the electric cable, to prevent electric shock, the operator should not leave the operator's compartment until it has been confirmed that the electricity has been shut off.

Also, do not let anyone near the machine.

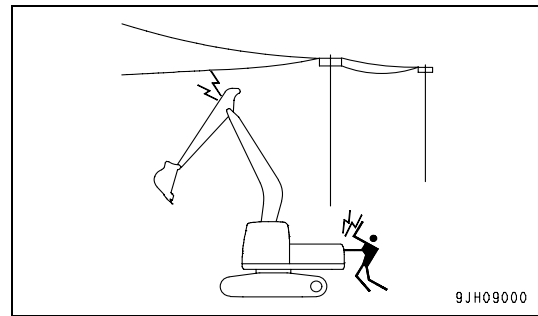

Voltage of Cables	Safety Distance
100 V - 200 V	Over 2 m
6,600 V	Over 2 m
22,000 V	Over 3 m
66,000 V	Over 4 m
154,000 V	Over 5 m
187,000 V	Over 6 m
275,000 V	Over 7 m
500,000 V	Over 11 m

ENSURE GOOD VISIBILITY

This machine is equipped with mirrors to improve the visibility, but even with mirrors, there are places, which cannot be seen from the operator's seat, so always be careful when operating.


When operating or traveling in places with poor visibility, if it is impossible to confirm the condition of the job side or obstacle is in the area around the machine, there is danger that the machine may suffer damage or the operator may suffer serious personal injury. When operating or traveling in places with poor visibility, always observe the following items strictly.

- If the visibility cannot be sufficiently assured, position a flagman if necessary. The operator should pay careful attention to the signs and follow the instructions of the flagman.
- The signals should be given only by one flagman.
- When working in dark places, turn on the working lamps and front lamps of the machine, and if necessary, set up additional lighting in the area.
- Stop operations if there is poor visibility, such as in fog, snow, rain, or sand storms.
- Check the mirrors on the machine before starting operations every day. Clean off any dirt and adjust the view to ensure good visibility.
- In areas where it is impossible to confirm the area behind the machine and observation cameras have been set up, clean off any dirt from the lens and make sure that the camera gives a clear view of the rear. If there is any problem with the camera and the rear view cannot be displayed, contact your Komatsu distributor immediately and ask for repairs to be carried out.

VENTILATION FOR ENCLOSED AREA

Exhaust fumes from the engine can kill.

- If it is necessary to start the engine within an enclosed area, or when handling fuel, flushing oil, or paint, open the doors and windows to ensure that adequate ventilation is provided to prevent gas poisoning.

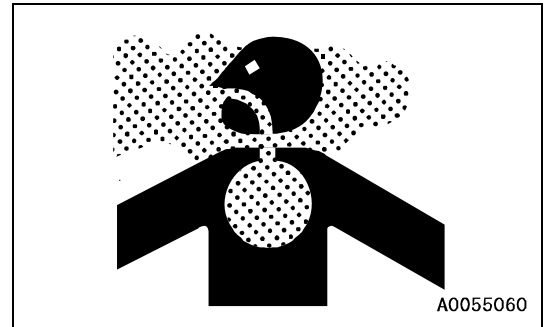

SIGNALMAN'S SIGNAL AND SIGNS

- Set up signs to inform of road shoulders and soft ground. If the visibility is not good, position a signalman if necessary. Operators should pay careful attention to the signs and follow the instructions from the signalman.
- Only one signalman should give signals.
- Make sure that all workers understand the meaning of all signals and signs before starting work.

EMERGENCY EXIT FROM OPERATOR'S CAB

- If it should be impossible to open the door of the cab, break the window glass with the hammer supplied and use the window as an emergency escape.


For details, see "EMERGENCY ESCAPE HAMMER (3-84)" in this volume.

- When escaping, remove all the pieces of glass from the window frame first and be careful not to cut yourself on the glass. Be careful also not to slip on the broken pieces of glass on the ground.

ASBESTOS DUST HAZARD PREVENTION

Asbestos dust in the air can cause lung cancer if it is inhaled. There is danger of inhaling asbestos when working on job sites handling demolition work or work handling industrial waste. Always observe the following.

- Spray water to keep down the dust when cleaning. Do not use compressed air for cleaning.
- If there is danger that there may be asbestos dust in the air, always operate the machine from an upwind position. All workers should use an approved respirator.
- Do not allow other persons to approach during the operation.
- Always observe the rules and regulations for the work site and environmental standards.

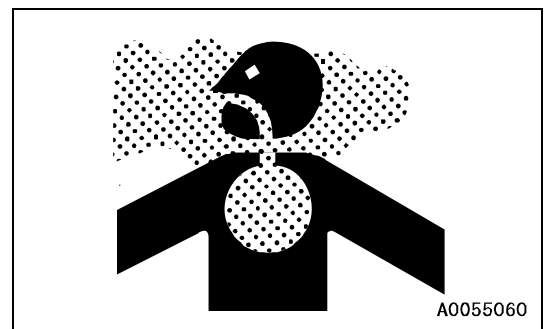

This machine does not use asbestos, but there is a danger that imitation parts may contain asbestos, so always use genuine Komatsu parts.

ELECTROMAGNETIC INTERFERENCE

When this machine is operating close to a source of high electromagnetic interference, such as a radar station, some abnormal phenomena may be observed.


- The display on the monitor panel may behave erratically.
- The warning buzzer may sound.

These effects do not signify a malfunction and the machine will return to normal as soon as the source of interference is removed.

SAFETY MACHINE OPERATION

STARTING ENGINE


If there is a warning tag hanging from the work equipment control lever, do not start the engine or touch the levers.

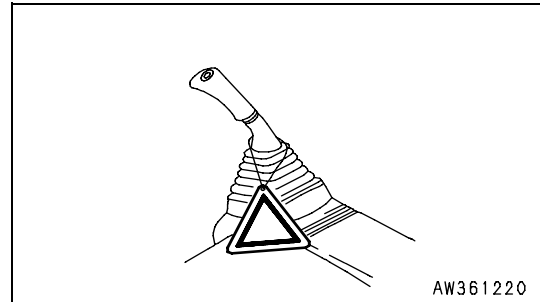

CHECKS BEFORE STARTING ENGINE

Carry out the following checks before starting the engine at the beginning of the day's work.

- Remove all dirt from the surface of the window glass to ensure a good view.
- Remove all dirt from the surface of the lens of the working lamps, and check that they light up correctly.
- Check the coolant level, fuel level, and oil level in engine oil pan, check for clogging of the air cleaner, and check for damage to the electric wiring.
- Adjust the operator's seat to a position where it is easy to carry out operations, and check that there is no damage or wear to the seat belt or mounting clamps.
- Check the operation of the instruments and gauges, check the angle of the mirror, and check that the control levers are all at the Neutral position.
- Before starting the engine, check that lock lever (1) is in LOCK position (L).
- Adjust the mirrors so that the rear of the machine can be seen clearly from the operator's seat.
 - When adjusting, see "Rear View Mirrors (3-122)".
- Adjust the rear-view camera so that the area to the rear of the machine can be seen clearly from the operator's seat.
 - For details of the method of adjustment, see "Adjusting Angle of Rear View Camera (3-121)".
- Check that there are no persons or obstacles above, below, or in the area around the machine.

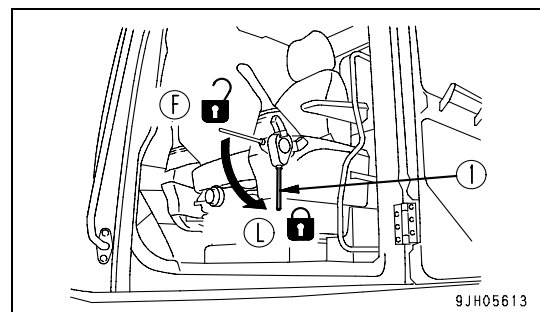

SAFETY RULES FOR STARTING ENGINE

- Start and operate the machine only while seated.
- Do not attempt to start the engine by short-circuiting the engine starting circuit. Such an act may cause a serious bodily injury or fire.
- When starting the engine, sound the horn as a warning.
- Do not allow anyone apart from the operator to ride on the machine.

STARTING ENGINE IN COLD WEATHER

- Carry out the warming-up operation thoroughly. If the machine is not thoroughly warmed up before the control levers or control pedals are operated, the reaction of the machine will be slow or the machine may move in a way not expected by the operator. Particularly in cold weather, be sure to carry out the warming-up operation thoroughly.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is a hazard that this will ignite the battery and cause the battery to explode.

Before charging or starting the engine with a different power source, melt the battery electrolyte and check that there is no leakage of electrolyte before starting.

OPERATION

CHECKS BEFORE OPERATION

When carrying out the checks, move the machine to a wide area where there are no obstructions, and operate slowly. Do not allow anyone near the machine.

- Always fasten your seat belt.
- Check that the movement of the machine matches the display on the control pattern card. If it does not match, replace it immediately with the correct control pattern card.
- Check the operation of the work equipment, travel system and swing system.
- Check for any problem in the sound of the machine, vibration, heat, smell, or gauges; check also that there is no leakage of oil or fuel.
- If any problem is found, carry out repairs immediately.

SAFETY RULES FOR CHANGING MACHINE DIRECTIONS




- Always operate the machine only when seated.
- Do not allow anyone apart from the operator to ride on the machine.
- Check that the travel alarm works properly.
- Always lock the door and windows of the operator's compartment in position (open or closed).

On job sites where there is a hazard of flying objects or of objects entering the operator's compartment, check that the door and windows are securely closed.

- If there is an area to the rear of the machine which cannot be seen, position a signal person. Take special care not to hit other machines or people when turning or swinging the machine.
- Before travelling, sound the horn to warn people in the area.
- Before travelling, check again that there is no one in the surrounding area, and that there are no obstacles.



- Before traveling, set the machine so that sprocket (1) is behind the operator's seat.

If sprocket (1) is in front of the operator's cab, the machine moves in the opposite direction from the operation of the lever (front and rear travel is reversed, left and right steering is reversed). Be extremely careful when operating the machine in this situation.

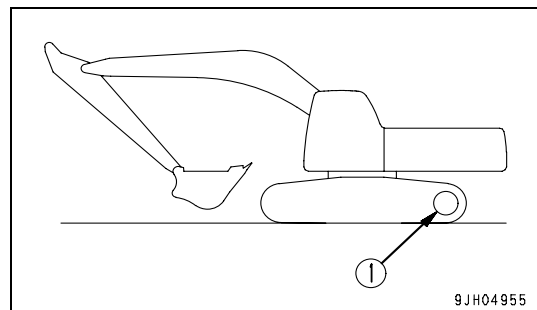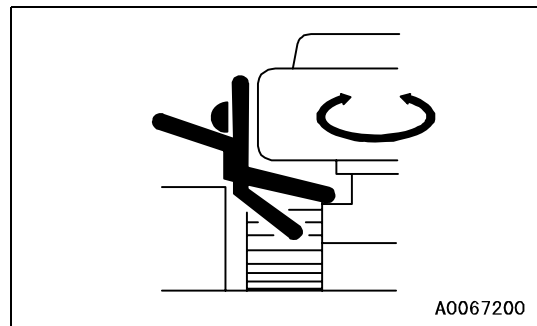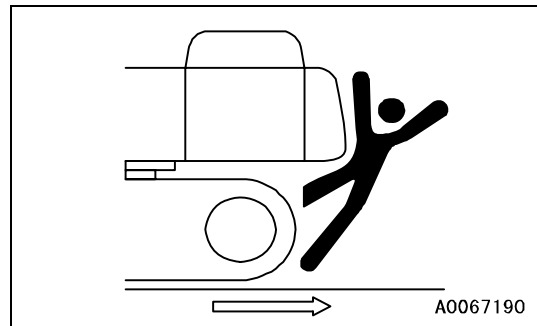

SAFETY RULES FOR TRAVELING



- When traveling on level ground, keep the work equipment at a height of 40 to 50 cm from the ground.
- If the work equipment blocks the view and it is difficult to travel in safety, raise the work equipment to a greater height.
- When traveling on rough ground, travel at low speed and do not operate the steering suddenly. There is danger that the machine may turn over. The work equipment may hit the ground surface and cause the machine to lose its balance, or may damage the machine or structures in the area.
- When traveling on rough ground or steep slopes, if the machine is equipped with auto-deceleration, always turn the auto-deceleration switch OFF (cancel).
- Avoid traveling over obstacles when possible. If the machine has to travel over an obstacle, keep the work equipment close to the ground and travel at low speed. Never travel over obstacles which make the machine tilt strongly to one side.
- When traveling or carrying out operations, always keep a safe distance from people, structures, or other machines to avoid coming into contact with them.
- When passing over bridges or structures, check first that the structure is strong enough to support the weight of the machine.
- When operating in tunnels, under bridges, under electric wires, or other places where the height is limited, operate slowly and be extremely careful not to let the work equipment hit anything.

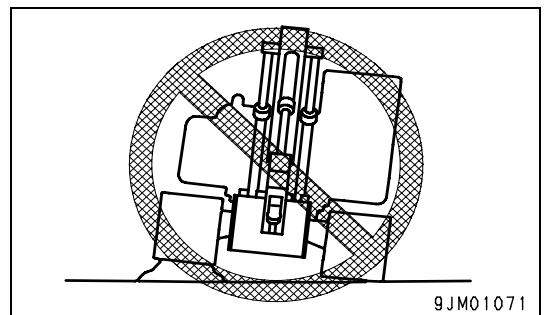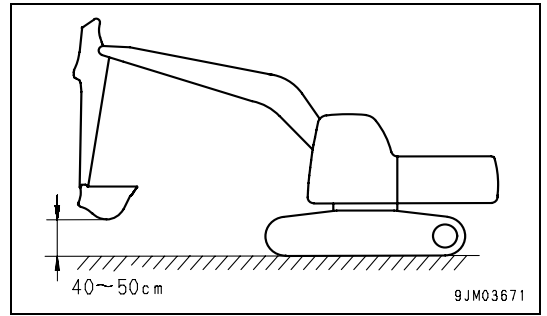



TRAVELING ON SLOPES

To prevent the machine from tipping over or slipping to the side, always do as follows.

- Keep the work equipment approx. 20 to 30 cm above the ground. In case of emergency, lower the work equipment to the ground immediately to help stop the machine.
- When traveling uphill, set the machine with the operator's seat on the uphill side; when traveling downhill, set the operator's seat on the downhill side. Check that the ground under the machine is safe when traveling.

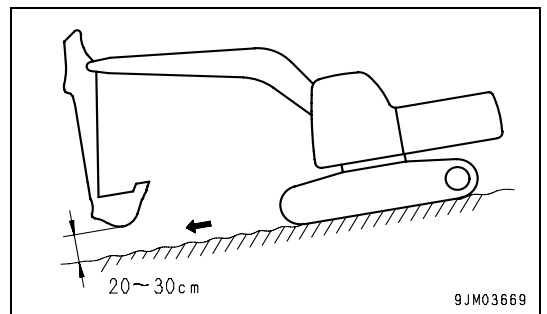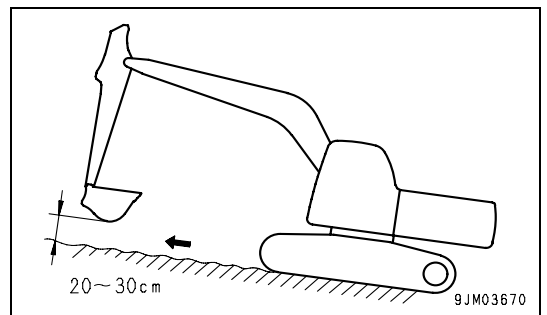


- When traveling up a steep slope, extend the work equipment to the front to improve the balance, keep the work equipment approximately 20 to 30 cm above the ground, and travel at low speed.
- When traveling downhill, lower the engine speed, keep the travel lever close to the neutral position, and travel at low speed.
- Always travel straight up or down a slope. Traveling at an angle or across the slope is extremely dangerous.
- Do not turn on slopes or travel across slopes. Always go down to a flat place to change the position of the machine, then travel on to the slope again.
- Travel on grass, fallen leaves, or wet steel plates with low speed. Even with slight slopes there is a hazard that the machine may slip.

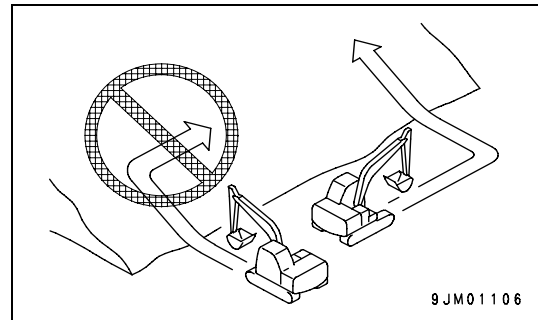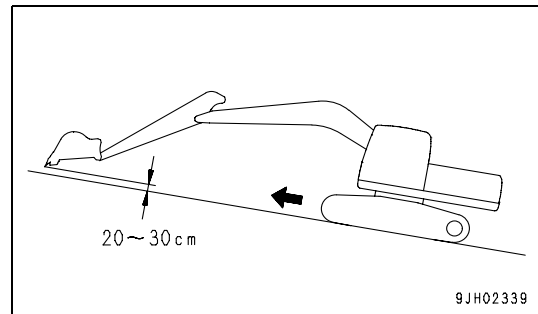






OPERATIONS ON SLOPES

- When working on slopes, there is a hazard that the machine may lose its balance and turn over when the swing or work equipment are operated. This may lead to serious injury or property damage, so always provide a stable place when carrying out these operations, and operate carefully.
- Do not swing the work equipment from the uphill side to the downhill side when the bucket is loaded. This operation is dangerous, and may cause the machine to tip over.
- If the machine has to be used on a slope, pile the soil to make a platform (A) that will keep the machine as horizontal as possible.

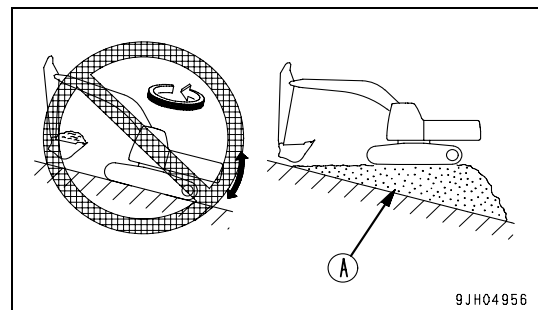


PROHIBITED OPERATIONS

- Never dig the work face under an overhang. There is a hazard that rocks may fall or that the overhang may collapse and fall on top of the machine.
- Do not excavate too deeply under the front of the machine. The ground under the machine may collapse and cause the machine to fall.
- To make it easier to escape if there is any problem, set the tracks at right angles to the road shoulder or cliff with the sprocket at the rear when carrying out operations.
- Do not carry out demolition work under the machine. There is a hazard that the machine may become unstable and tip over.
- When working on or from the top of buildings or other structures, check the strength and the structure before starting operations. There is a hazard of the building collapsing and causing serious injury or damage.
- When carrying out demolition work, do not carry out demolition above your head. There is a hazard of broken parts falling or of the building collapsing and causing serious injury or property damage.

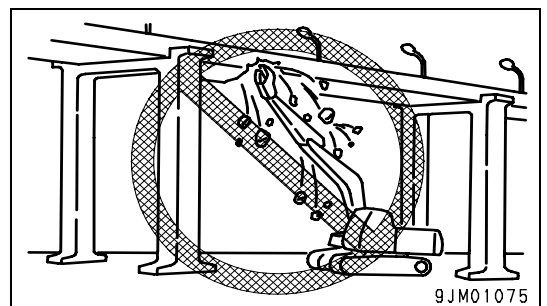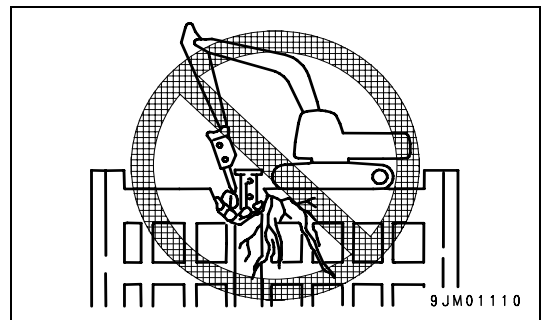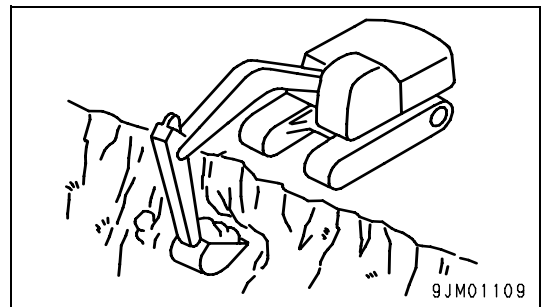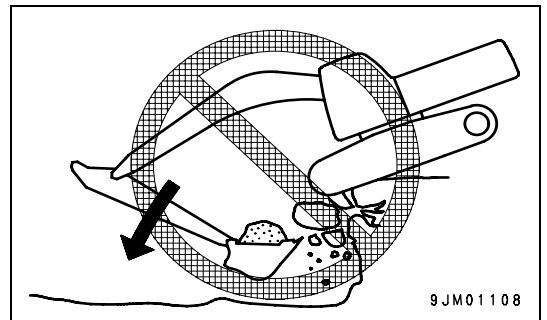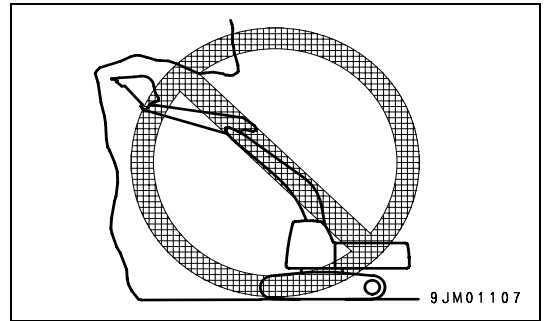


- In the operation using the fork or grapple, do not attempt to pick up an object with their tips.

There is a danger of damage to the machine or personal injury, as the picked - up object can easily slip off.

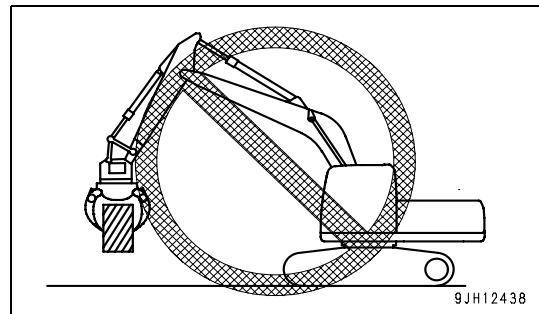

- Do not use the impact force of the work equipment for breaking work. There is a hazard of damage to the work equipment, or a hazard of serious personal injury being caused by flying pieces of broken materials, or of the machine tipping over due to reaction from the impact.
- Generally speaking, the machine is more liable to overturn when the work equipment is at the side than when it is at the front or rear.

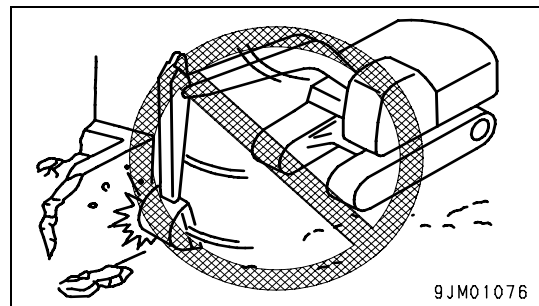


- When using a breaker or other heavy work equipment, there is a hazard of the machine losing its balance and tipping over. When operating on flat ground as well as on slopes.
 - Do not suddenly lower, swing, or stop the work equipment.
 - Do not suddenly extend or retract the boom cylinder. There is a hazard that impact will cause the machine to tip over.
- Do not pass the bucket over the head of other workers or over the operator's seat of dump trucks or other hauling equipment. The load may spill or the bucket may hit the dump truck and cause serious injury or property damage.

OPERATIONS ON SNOW



- Snow-covered or frozen surfaces are slippery, so be extremely careful when traveling or operating the machine, and do not operate the levers suddenly. Even a slight slope may cause the machine to slip, so be particularly careful when working on slopes.
- With frozen ground surfaces, the ground becomes soft when the temperature rises, and this may cause the machine to tip over.
- If the machine enters deep snow, there is a hazard that it may tip over or become buried in the snow. Be careful not to leave the road shoulder or to get trapped in a snow drift.
- When clearing snow, the road shoulder and objects placed beside the road are buried in the snow and cannot be seen. There is a hazard of the machine tipping over or hitting covered objects, so always carry out operations carefully.

PARKING MACHINE

- Park the machine on firm, level ground.
- Select a place where there is no hazard of falling rocks or landslides, or of flooding if the land is low.
- Lower the work equipment completely to the ground.

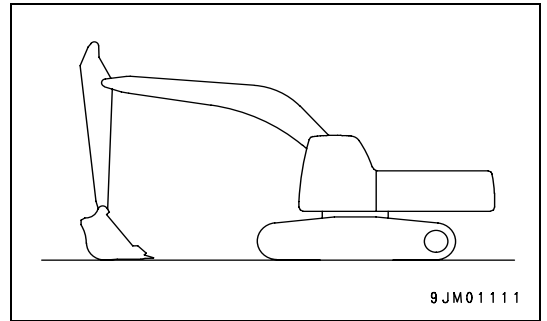

- When leaving the machine, set lock lever (1) to the LOCK position (L), then stop the engine.
- Always close the operator's cab door, and use the key to lock all the equipment in order to prevent any unauthorized person from moving the machine. Always remove the key, take it with you, and leave it in the specified place.
- If it is necessary to park the machine on a slope, always do as follows.
 - Set the bucket on the downhill side, then dig it into the ground.
 - Put blocks under the tracks to prevent the machine from moving.

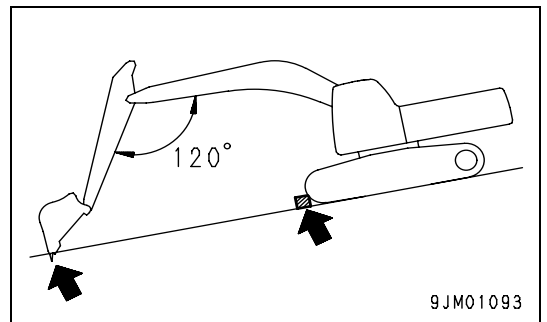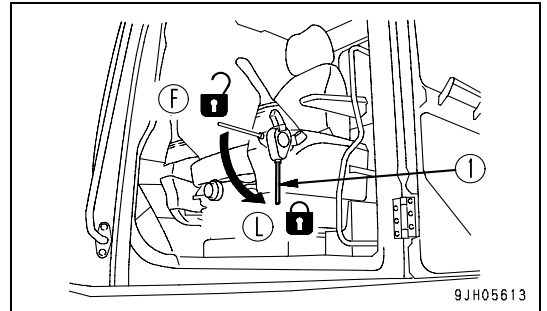

TRANSPORTATION


The machine can be divided into parts for transportation, so when transporting the machine, please contact your Komatsu distributor to have the work carried out.

LOADING AND UNLOADING

When loading or unloading the machine, mistaken operation may bring the hazard of the machine tipping over or falling, so particular care is necessary. Always do as follows.

- Perform loading and unloading on firm, level ground only. Maintain a safe distance from the edge of the road or cliff.
- Never use the work equipment to load or unload the machine. There is danger that the machine may fall or tip over.
- Always use ramps of adequate strength. Be sure that the ramps are wide, long, and thick enough to provide a safe loading slope. Take suitable steps to prevent the ramps from moving out of position or coming off.
- Be sure the ramp surface is clean and free of grease, oil, ice and loose materials. Remove dirt from machine-tracks. On a rainy day, in particular, be extremely careful since the ramp surface is slippery.
- Turn the auto-decelerator switch OFF (auto-deceleration function released).
- Run the engine at low speed and travel slowly.
- When on the ramps, do not operate any lever except for the travel lever.
- Never correct your steering on the ramps. If necessary, drive off the ramps, correct the direction, then enter the ramps again.
- The center of gravity of the machine will change suddenly at the joint between the ramps and the track or trailer, and there is danger of the machine losing its balance. Travel slowly over this point.
- When loading or unloading to an embankment or platform, make sure that it has suitable width, strength, and grade.
- When swinging the upper structure on the trailer, the trailer is unstable, so pull in the work equipment and swing slowly.
- For machines equipped with a cab, always lock the door after boarding the machine. If this is not done, the door may suddenly open during transportation.

Refer to "TRANSPORTATION (3-169)".

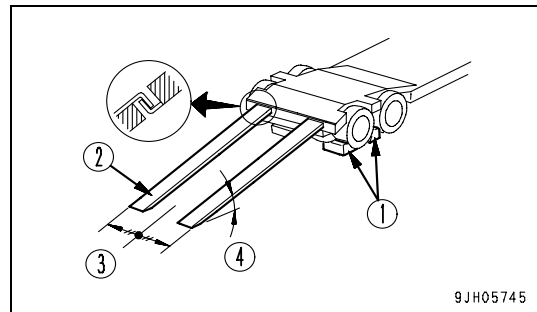

- (1) Blocks
- (2) Ramp
- (3) Centerline of trailer
- (4) Angle of ramps: Max. 15°

SHIPPING THE MACHINE

When shipping the machine on a trailer, do as follows.


- The weight, transportation height, and overall length of the machine differ according to the work equipment, so be sure to confirm the dimensions.
- When passing over bridges or structures on private land, check first that the structure is strong enough to support the weight of the machine. When traveling on public roads, check first with the relevant authorities and follow their instructions.
- For details of the shipping procedure, see "TRANSPORTATION (3-169)" in the OPERATION section.

BATTERY


BATTERY HAZARD PREVENTION

Battery electrolyte contains sulphuric acid, and batteries generate flammable hydrogen gas, which may explode. Mistaken handling can lead to serious injury or fire. For this reason, always observe the following precautions.

- Do not use or charge the battery if the battery electrolyte level is below the LOWER LEVEL line. This may cause an explosion. Check the battery electrolyte level periodically and add distilled water to bring the electrolyte level to the UPPER LEVEL line.
- When working with batteries, always wear safety glasses and rubber gloves.
- Never smoke or use any flame near the battery.

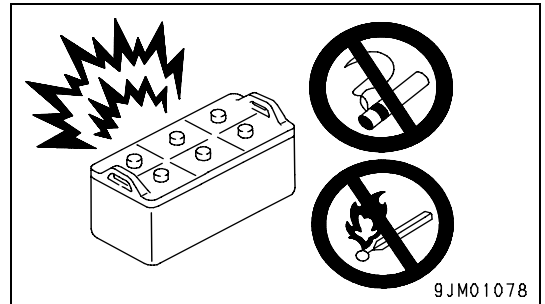

- If you spill acid on your clothes or skin, immediately flush the area with large amount of water.
- If acid gets into your eyes, flush them immediately with large amount of water and seek medical attention.

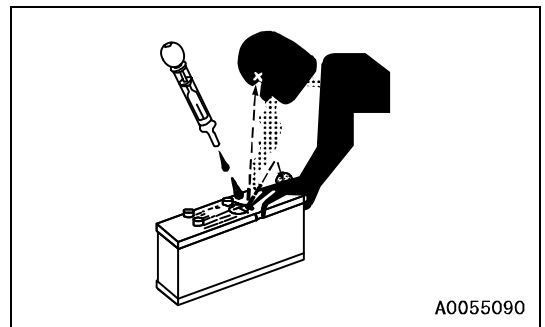

- Before working with batteries, turn the starting switch to the OFF position.



As there is a hazard that sparks will be generated, always do as follows.

- Do not let tools or other metal objects make any contact between the battery terminals. Do not leave tools or other metal objects lying around near the battery.
- When disconnecting the battery terminals, wait for approx. one minute after turning off the engine starting switch key, and be sure to disconnect the grounding terminal (negative (-) terminal) first. Conversely, when connecting them, begin with the positive (+) terminal and then the grounding (-) terminal. Make sure that all the terminals are connected securely.
- Flammable hydrogen gas is generated when the battery is charged, so remove the battery from the chassis, take it to a well-ventilated place, and remove the battery caps before charging it.
- Tighten the battery caps securely.
- Install the battery securely to the determined place.

STARTING ENGINE WITH BOOSTER CABLES

If any mistake is made in the method of connecting the booster cables, it may cause the battery to explode, so always do as follows.

- When starting with a booster cable, carry out the starting operation with two workers (one worker sitting in the operator's seat and the other working with the battery).
- When starting from another machine, do not allow the two machines to touch.
- When connecting the booster cables, turn the starting switch OFF position for both the normal machine and problem machine. There is a hazard that the machine will move when the power is connected.
- Be sure to connect the positive (+) cable first when installing the booster cables. Disconnect the negative (-) cable (ground side) first when removing them.
- When removing the booster cables, be careful not to let the booster cable clips touch each other or to let the clips touch the machine.
- Always wear safety glasses and rubber gloves when starting the engine with booster cables.
- When connecting a normal machine to a problem machine with booster cables, always use a normal machine with the same battery voltage as the problem machine.
- For details of the starting procedure when using booster cables, see "Starting Engine with Booster Cables (3-194)" in the OPERATION section.

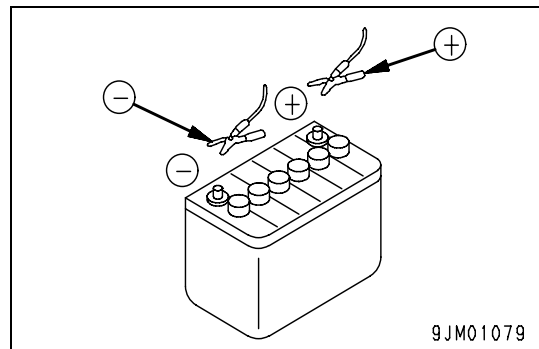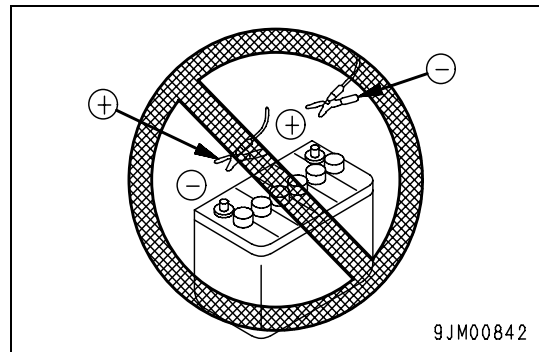



TOWING

SAFETY RULES FOR TOWING


Serious injury or death could result if a disabled machine is towed incorrectly or if there is a mistake in the selection or inspection of the wire rope.

For towing, see "TOWING THE MACHINE (3-190)".

- Always check that the wire rope used for towing has ample strength for the weight of the machine being towed.
- Always wear leather gloves when handling wire rope.
- Fix the wire rope to the track frame.
- During the towing operation, never stand between the towing machine and the machine being towed.
- Never tow a machine on a slope.
- Operate the machine slowly and be careful not to apply any sudden load to the wire rope.

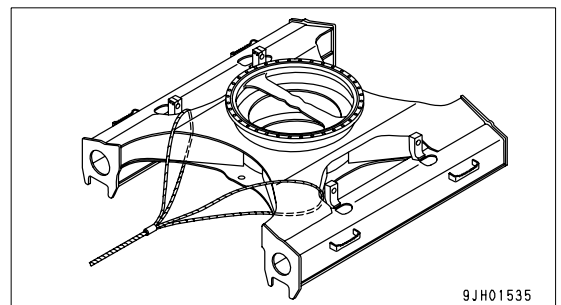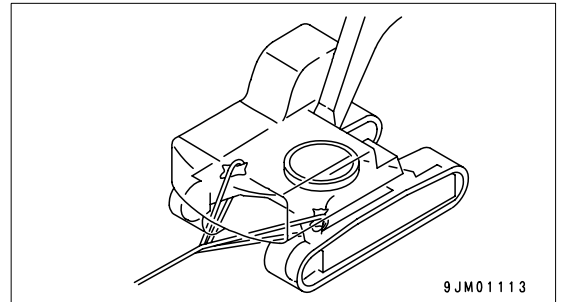



- Never use a wire rope which has cut strands (A), reduced diameter (B), or kinks (C). There is danger that the rope may break during the towing operation.

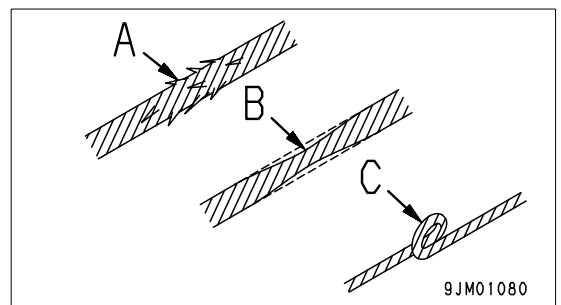

LIFTING OBJECTS WITH BUCKET

SAFETY RULES FOR LIFTING OBJECTS

- Determine the signals to be used and place a signalman in position.
- To prevent the machine from tipping over or falling, carry out the operation on flat ground.
- To prevent the danger of contact with a raised load or the danger from a falling load, do not allow any worker inside the area.
- It is dangerous if the raised load hits any person or structure. When swinging or operating the work equipment, check carefully that the surrounding area is safe.
- Do not swing or operate the work equipment suddenly. There is danger that this may cause the load to sway and the machine to tip over.
- Do not leave the operator's seat when there is a raised load.
- Do not use the work equipment or swing to pull the load in any direction. There is danger that the hook may break and the load come off, causing the work equipment to move suddenly and cause personal injury.

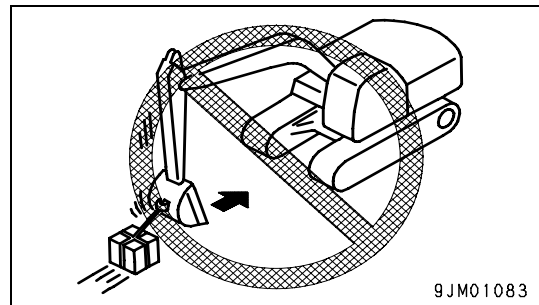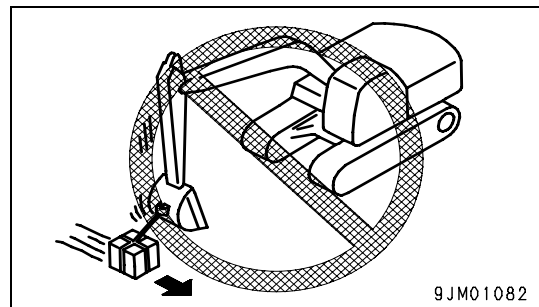

SAFETY MAINTENANCE INFORMATION


WARNING TAG

- Always attach the “DO NOT OPERATE” warning tag to the work equipment control lever in the operator's cab to alert others that you are performing service or maintenance on the machine. Attach additional warning tags around the machine if necessary.

Warning tag Part No. 09963-A1640

Keep this warning tag in the tool box while it is not used. If there is not the tool box, keep the tag in the operation manual pocket.

- If any other person starts the engine, or touches or operates the control levers or control pedals while you are performing service or maintenance, you may suffer serious injury.

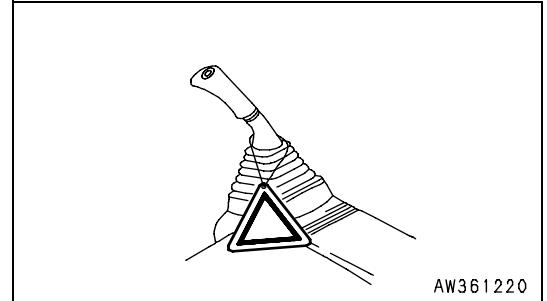

KEEP WORK PLACE CLEAN AND TIDY

- Do not leave hammers or other tools lying around in the work place. Wipe up all grease, oil, or other substances that will cause you to slip. Always keep the work place clean and tidy to enable you to carry out operations safely.

If the work place is not kept clean and tidy, there is the danger that you will trip, slip, or fall over and injure yourself.




- When cleaning the ceiling window which is made of organic glass (poly carbonate), use tap water and avoid use of organic solvents for cleaning. An organic solvent like benzene, toluene or methanol can invite a chemical reaction like dissolution and decomposition on the window glass, deteriorating poly carbonate in use.

APPOINT LEADER WHEN WORKING WITH OTHERS

When repairing the machine or when removing and installing the work equipment, appoint a leader and follow his instructions during the operation.


STOP ENGINE BEFORE CARRYING OUT MAINTENANCE

- Stop the machine on firm, level ground.
- Select a place where there is no hazard of falling rocks or landslides, or of flooding if the land is low.
- Lower the work equipment completely to the ground and stop the engine.
- Turn the starting switch to the ON position. Operate the work equipment control lever back and forth, left and right at the full stroke 2 to 3 times to eliminate the remaining internal pressure in the hydraulic circuit, and then push up lock lever (1) to the LOCK position (L).
- Check that the battery relay is off and main power is not conducted. (Wait for approx. one minute after turning off the engine starting switch key and press the horn switch. If the horn does not sound, it is not activated.)
- Put blocks under the track to prevent the machine from moving.

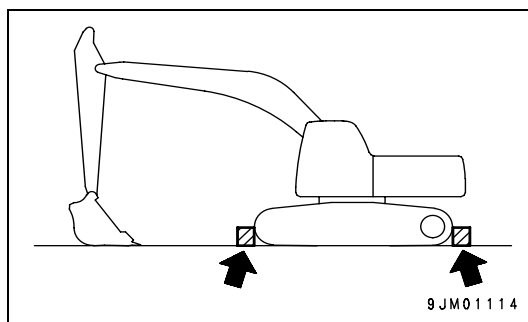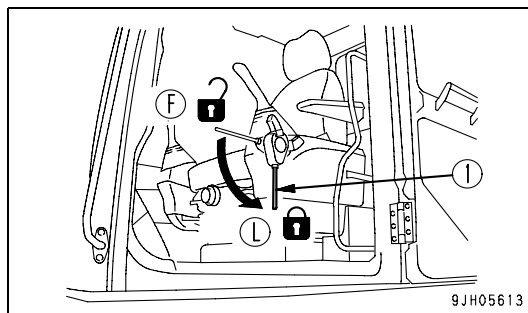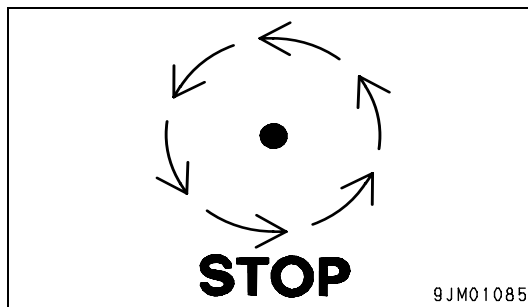
**TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING**

To prevent injury, do not carry out maintenance with the engine running. If maintenance must be carried out with the engine running, carry out the operation with at least two workers and do as follows.

- One worker must always sit in the operator's seat and be ready to stop the engine at any time. All workers must maintain contact with the other workers.
- When carrying out operations near the fan, fan belt, or other rotating parts, there is a hazard of being caught in the parts, so be careful not to come close.
- Never drop or insert tools or other objects into the fan or fan belt. Parts may break or be sent flying.

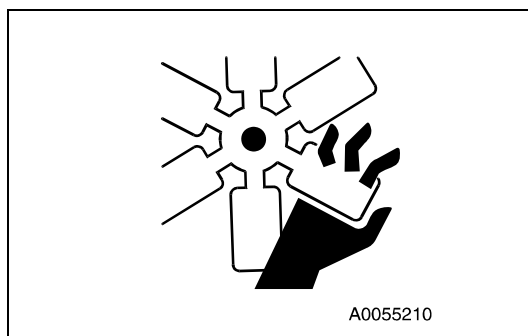


- Set lock lever (1) to the LOCK position (L) to prevent the work equipment from moving.
- Do not touch any control levers or control pedals. If any control levers or control pedals must be operated, always give a signal to the other workers to warn them to move to a safe place.

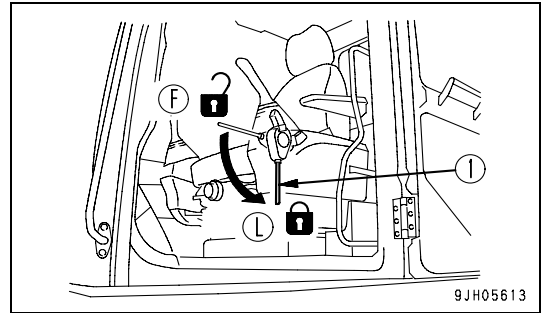

PROPER TOOLS

Use only tools suited to the task and be sure to use the tools correctly. Using damaged, low quality, faulty, makeshift tools or improper use of the tools could cause serious personal injury.

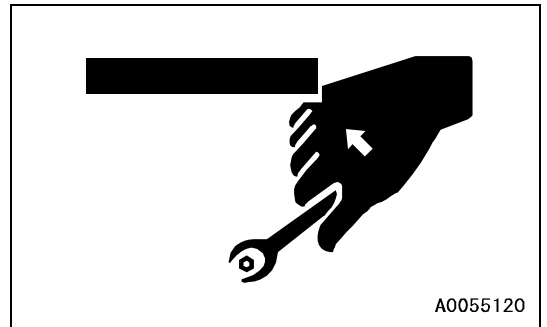

ACCUMULATOR, GAS SPRING

The accumulator and gas springs is charged with high-pressure nitrogen gas. When handling the accumulator, careless procedure may cause an explosion which could lead to serious injury or property damage. For this reason, always observe the following precautions.

- Do not disassemble the accumulator.
- Do not bring it near flame or dispose of it in fire.
- Do not make holes in it, weld it, or use a cutting torch.
- Do not hit or roll the accumulator, or subject it to any impact.
- When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work performed.




PERSONNEL

Only authorized personnel can service and repair the machine. Do not allow unauthorized personnel into the area. If necessary, employ an observer.


ATTACHMENTS

- Appoint a leader before starting removal or installation operations for attachments.
- Place attachments that have been removed from the machine in a stable condition so that they do not fall. And take steps to prevent unauthorized persons from entering the storage area.

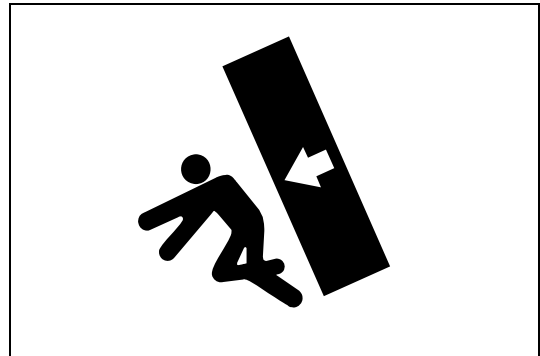

WORK UNDER THE MACHINE

- If it is necessary to go under the work equipment or the machine to carry out service and maintenance, support the work equipment and machine securely with blocks and stands strong enough to support the weight of the work equipment and machine.
- It is extremely dangerous to work under the machine if the track shoes are lifted off the ground and the machine is supported only with the work equipment. If any of the control levers is touched by accident, or there is damage occurring to the hydraulic piping, the work equipment or the machine will suddenly drop. This is extremely dangerous. Never work under the work equipment or the machine.

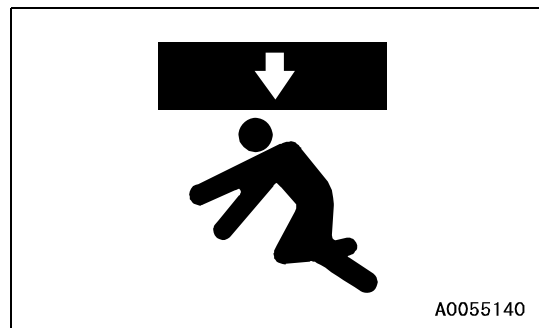

NOISE


When carrying out maintenance of the engine and you are exposed to noise for long periods of time, wear ear covers or ear plugs while working.

If the noise from the machine is too loud, it may cause temporary or permanent hearing problems.

WHEN USING HAMMER

When using a hammer, pins may fly out or metal particles may be scattered. This may lead to serious injury. Always do as follows.

- If hard metal parts such as pins, bucket teeth, cutting edges, or bearings are hit with a hammer, there is a hazard that pieces might be scattered and cause injury. Always wear safety glasses and gloves.
- When hitting pins or bucket teeth, there is a hazard that broken pieces might be sent flying and injure people in the surrounding area. Always check that there is no one in the surrounding area.
- There is a hazard that the pin hit with strong force may fly out and injure people in the surrounding area.

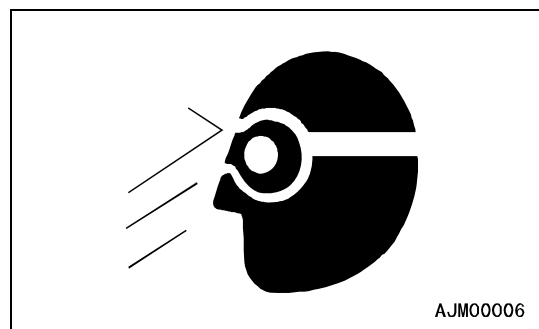

WELDING WORKS



Welding operations must always be carried out by a qualified welder and in a place equipped with proper equipment. There is a hazard of gas, fire, or electrocution when carrying out welding, so never allow any unqualified personnel to carry out welding.

REMOVING BATTERY TERMINALS

When repairing or welding the electrical system, wait for approx. one minute after turning off the engine starting switch key, and then disconnect the negative (-) terminal of the battery to stop the flow of electricity.


SAFETY FIRST WHEN USING HIGH-PRESSURE GREASE TO ADJUST TRACK TENSION

- Grease is pumped into the track tension adjustment system under high pressure.
If the specified procedure for maintenance is not followed when making adjustment, grease drain plug (1) may fly out and cause serious injury or property damage.
- When loosening grease drain plug (1) to loosen the track tension, never loosen it more than one turn. Loosen the grease drain plug slowly.
- Never put your face, hands, feet, or any other part of your body close to grease drain plug (1).

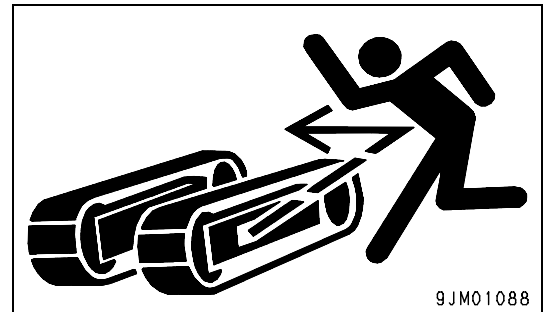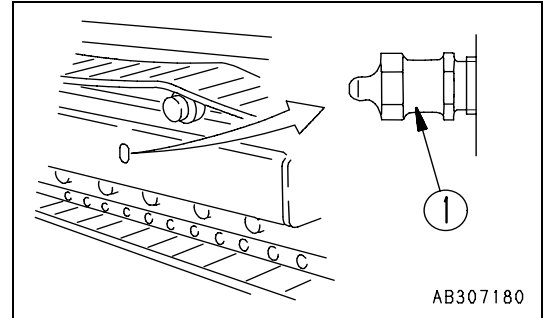

DO NOT DISASSEMBLE RECOIL SPRINGS

Never attempt to disassemble the recoils spring assembly. It contains a spring under high pressure which serves as a shock absorber for the idler. If it is disassembled by mistake, the spring will fly out and cause serious injury. When it becomes necessary to disassemble it, ask your Komatsu distributor to do the work.

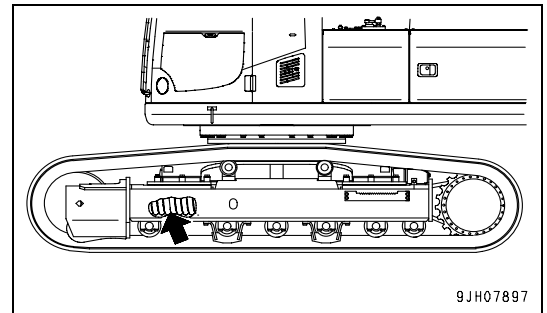


SAFETY RULES FOR HIGH-PRESSURE OIL

The hydraulic system is always under internal pressure. When inspecting or replacing piping or hoses, always check that the pressure in the hydraulic circuit has been released. If the circuit is still under pressure, it will lead to serious injury, so always do as follows.

- Release the pressure in the hydraulic circuit. For details, see "METHOD OF RELEASING PRESSURE IN HYDRAULIC CIRCUIT (4-78)". Do not carry out any inspection or replacement work when the hydraulic system is under pressure.
- If there is any leakage from the piping or hoses, the surrounding area will be wet, so check for cracks in the piping and hoses and for swelling in the hoses.

When carry out inspection, wear safety glasses and leather gloves.

- There is a hazard that high-pressure oil leaking from small holes may penetrate your skin or cause blindness if it contacts your eyes directly. If you are hit by a jet of high-pressure oil and suffer injury to your skin or eyes, wash the place with clean water, and consult a doctor immediately for medical attention.

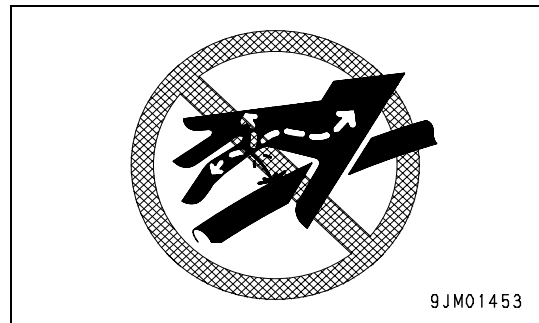

PRECAUTION FOR HIGH FUEL PRESSURE

High pressure is generated inside the engine fuel piping when the engine is running. When carrying out inspection or maintenance of the fuel piping system, wait for at least 30 seconds after stopping the engine to let the internal pressure go down before starting inspection or maintenance.

SAFETY HANDLING HIGH-PRESSURE HOSES

- If oil or fuel leaks from high-pressure hoses, it may cause fire or defective operation, which may lead to serious injury. If any loose bolts are found, stop work and tighten to the specified torque. If any damaged hoses are found, stop operations immediately and contact your Komatsu distributor.


Replace the hose if any of the following problems are found.

- Damaged or leaking hydraulic fitting.
- Frayed or cut covering or exposed reinforcement wire layer.
- Covering swollen in places.
- Twisted or crushed movable portion.
- Foreign material embedded in covering.

PRECAUTION FOR HIGH VOLTAGE

When the engine is running or immediately after it has stopped, high voltage is generated at the injector terminal and inside the engine controller, so there is danger of electrocution. Never touch the injector terminal or the inside of the engine controller.


If it is necessary to touch the injector terminal or the inside of the engine controller, please contact your Komatsu distributor.

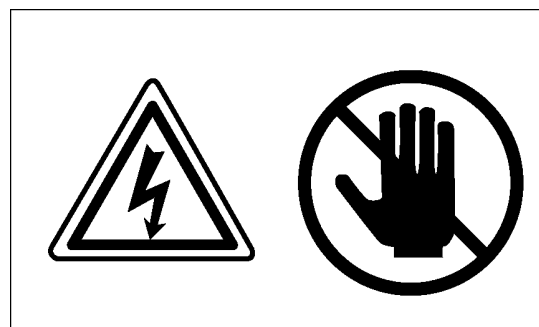

WASTE MATERIALS

To prevent pollution, pay careful attention to the method of disposing of waste materials.

- Always put oil drained from your machine in containers. Never drain oil directly onto the ground or dump into the sewage system, rivers, the sea, or lakes.
- Obey appropriate laws and regulations when disposing of harmful objects such as oil, fuel, coolant, solvent, filters, and batteries.

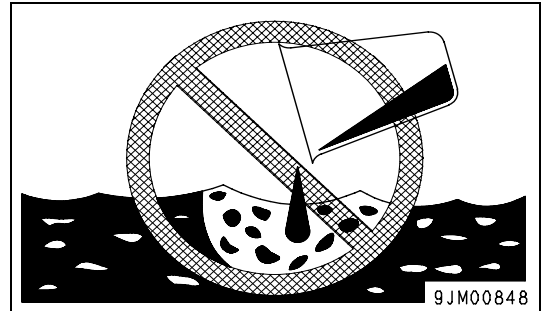**AIR CONDITIONER MAINTENANCE**

If air conditioner refrigerant gets into your eyes, it may cause blindness; if it touches your skin, it may cause frost-bite.

Never touch refrigerant.

COMPRESSED AIR

- When carrying out cleaning with compressed air, there is a hazard of serious injury caused by flying particles.
- When using compressed air to clean elements or the radiator, always wear safety glasses, dust mask, gloves, and other protective equipment.

PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS

- For using the machine safely for an extended period of time, replace safety-critical parts like hoses and seat belts periodically.

Replacement of safety-critical parts: See "SAFETY CRITICAL PARTS (4-16)".

- The material of these components naturally changes over time, and repeated use causes deterioration, wear, and fatigue. As a result, there is a hazard that these components may fail and cause serious injury or death. It is difficult to judge the remaining life of these components from external inspection or the feeling when operating, so always replace them at the specified interval.
- Replace or repair safety-critical parts if any defect is found, even when they have not reached the time specified interval.

OPERATION




WARNING

Please read and make sure that you understand the SAFETY section before reading this section.

MACHINE VIEW ILLUSTRATIONS


OVERALL MACHINE VIEW

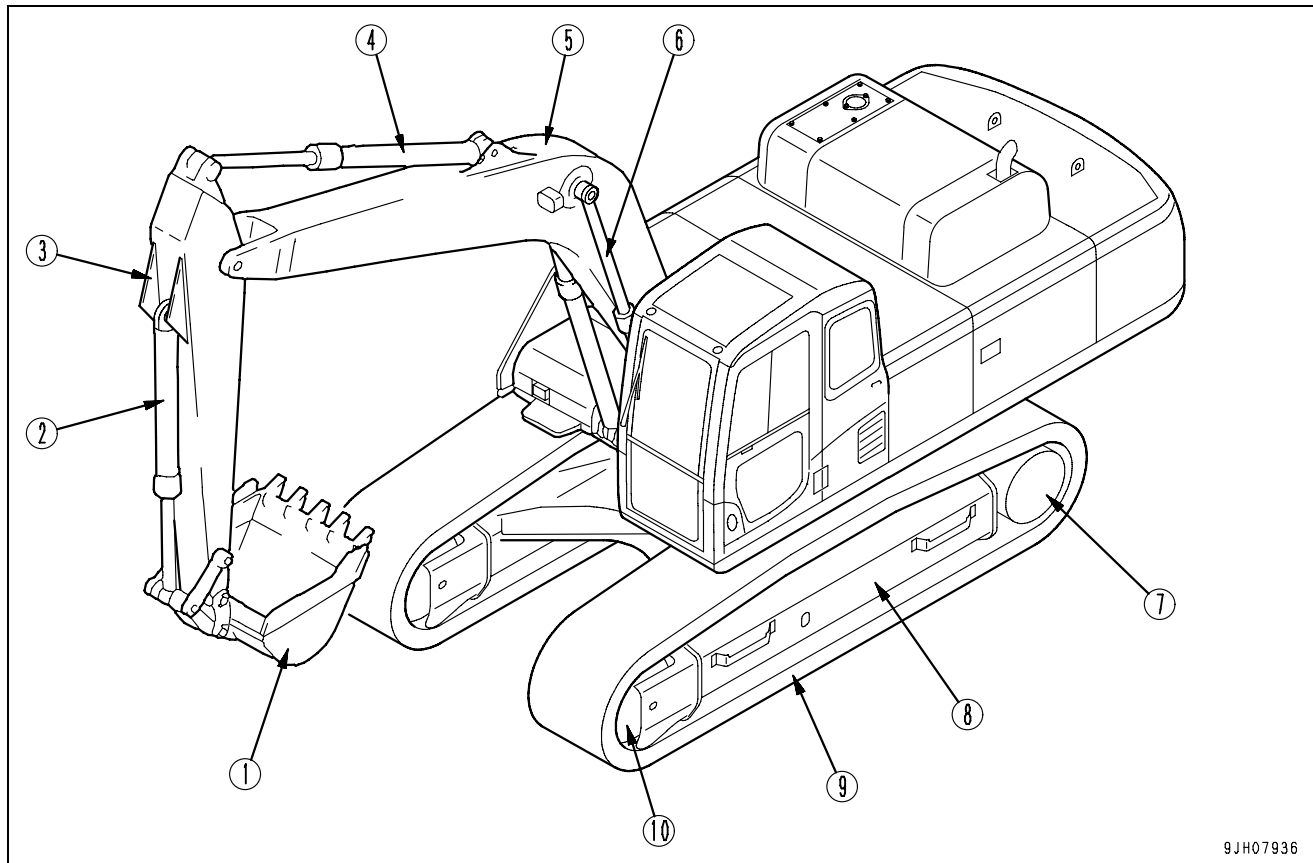

9JH07936

- | | |
|---------------------|-------------------|
| (1) Bucket | (6) Boom cylinder |
| (2) Bucket cylinder | (7) Sprocket |
| (3) Arm | (8) Track frame |
| (4) Arm cylinder | (9) Track shoe |
| (5) Boom | (10) Idler |


CONTROLS AND GAUGES

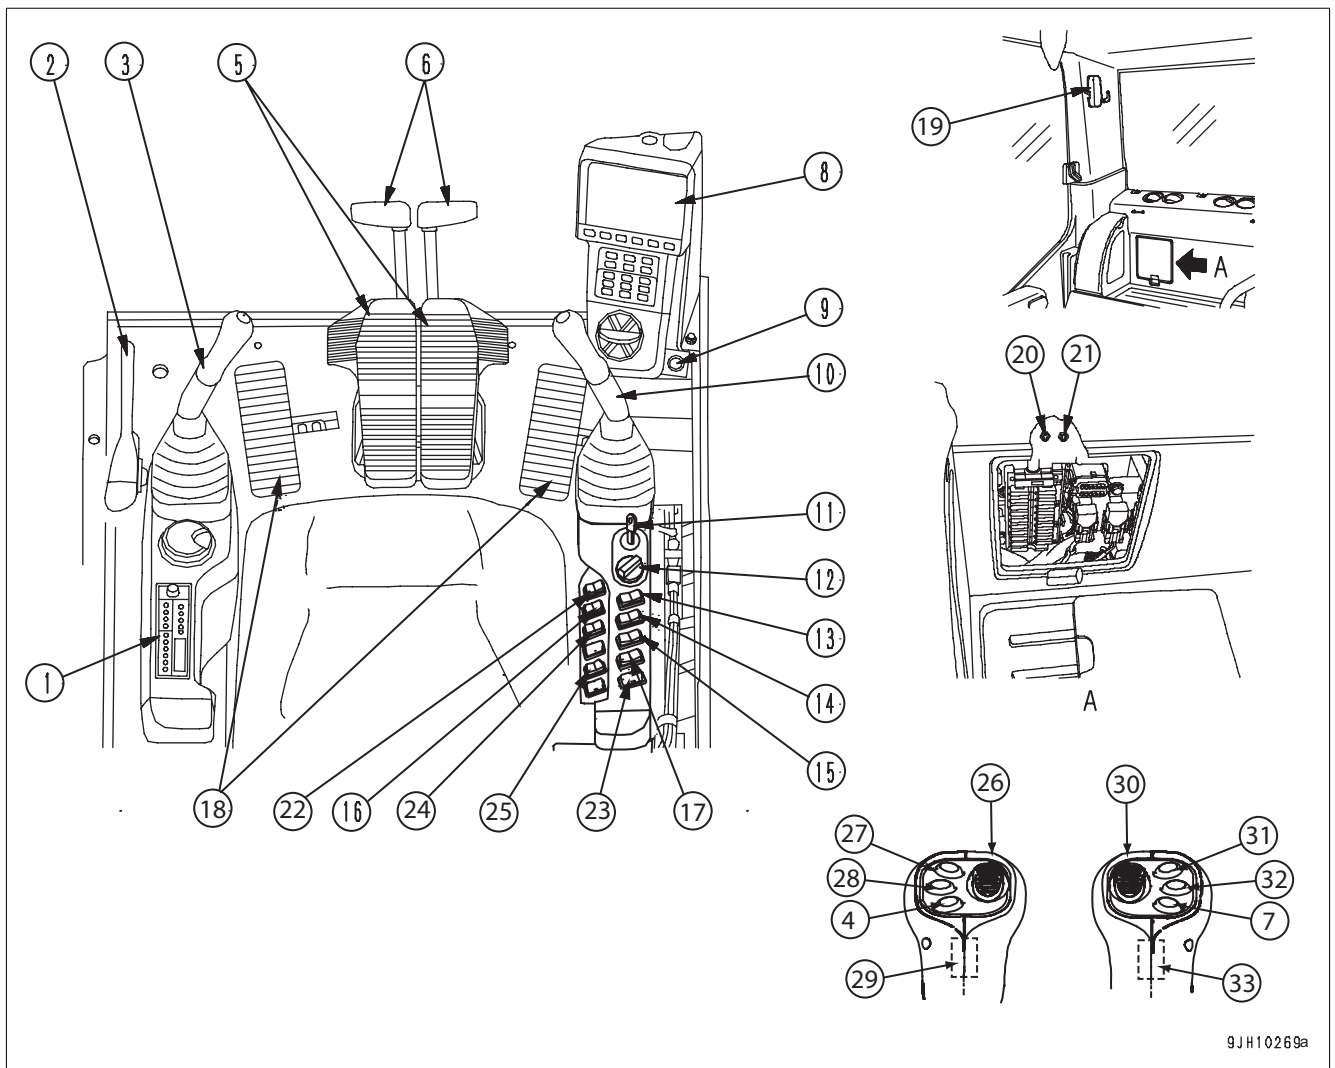

9JH10269a

- | | |
|--|---|
| (1) Radio | (18) Attachment control pedal (if equipped) |
| (2) Lock lever | (19) Room lamp switch |
| (3) Left work equipment control lever | (20) Emergency pump drive switch |
| (4) One-touch power max. switch | (21) Swing parking brake release switch |
| (5) Travel pedals | (22) Lower wiper switch |
| (6) Travel levers | (23) Roof wiper switch (if equipped) |
| (7) Horn switch | (24) Quick coupler switch |
| (8) Machine monitor | (25) Additional lamp switch |
| (9) Cigarette Lighter | (26) 2nd attachment proportional control switch |
| (10) Right work equipment control lever | (27) Quick coupler switch |
| (11) Starting switch | (28) Spare |
| (12) Fuel control dial | (29) Spare (back of lever) |
| (13) Lamp switch | (30) 1st attachment proportional control switch |
| (14) Swing lock switch | (31) Breaker |
| (15) Machine push-up switch | (32) Spare |
| (16) Heated operator seat switch | (33) Spare (back of lever) |
| (17) Revolving warning lamp switch (if equipped) | |

Machine Monitor

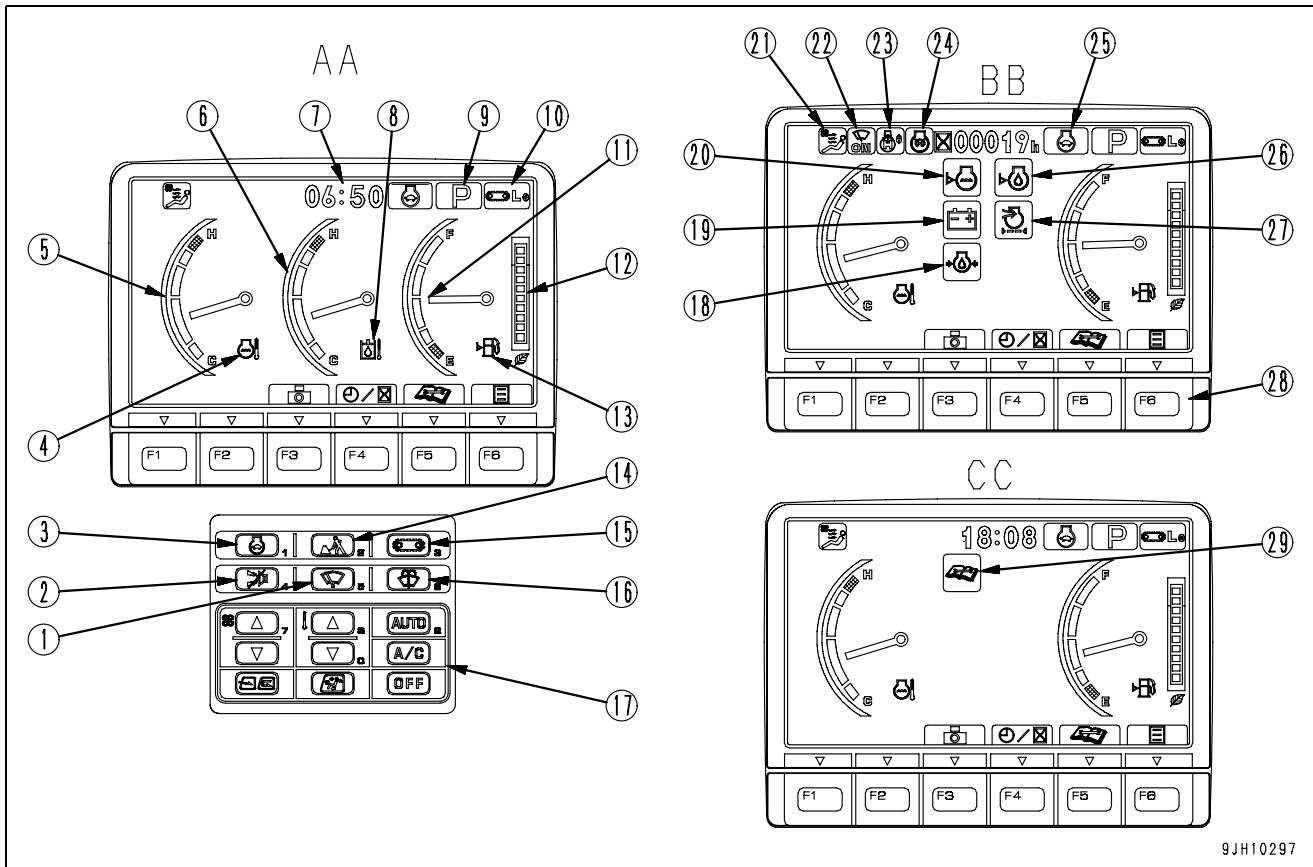

AA: Screen for standard

BB: Screen with all lamps lighted up

CC: Maintenance time warning screen


- | | |
|--|---|
| (1) Wiper switch | (16) Window washer switch |
| (2) Buzzer cancel switch | (17) Air conditioner control switch |
| (3) Auto-deceleration switch | (18) Engine oil pressure monitor |
| (4) Engine coolant temperature monitor | (19) Charge level monitor |
| (5) Engine coolant temperature gauge | (20) Radiator coolant level monitor |
| (6) Hydraulic oil temperature gauge | (21) Air conditioner monitor |
| (7) Service meter, Clock | (22) Wiper monitor |
| (8) Hydraulic oil temperature monitor | (23) Swing lock monitor |
| (9) Working mode monitor | (24) Engine pre-heating monitor or One-touch power max. monitor |
| (10) Travel speed monitor | (25) Auto-deceleration monitor |
| (11) Fuel gauge | (26) Engine oil level monitor |
| (12) ECO gauge | (27) Air cleaner clogging monitor |
| (13) Fuel level monitor | (28) Function switches (F1 to F6) |
| (14) Working mode selector switch | (29) Maintenance interval monitor |
| (15) Travel speed selector switch | |

DETAILED CONTROLS AND GAUGES

The following is an explanation of devices needed for operating the machine.

To perform suitable operations correctly and safely, it is important to completely understand methods of operating the equipment, and the meanings of the displays.

MONITORING SYSTEM

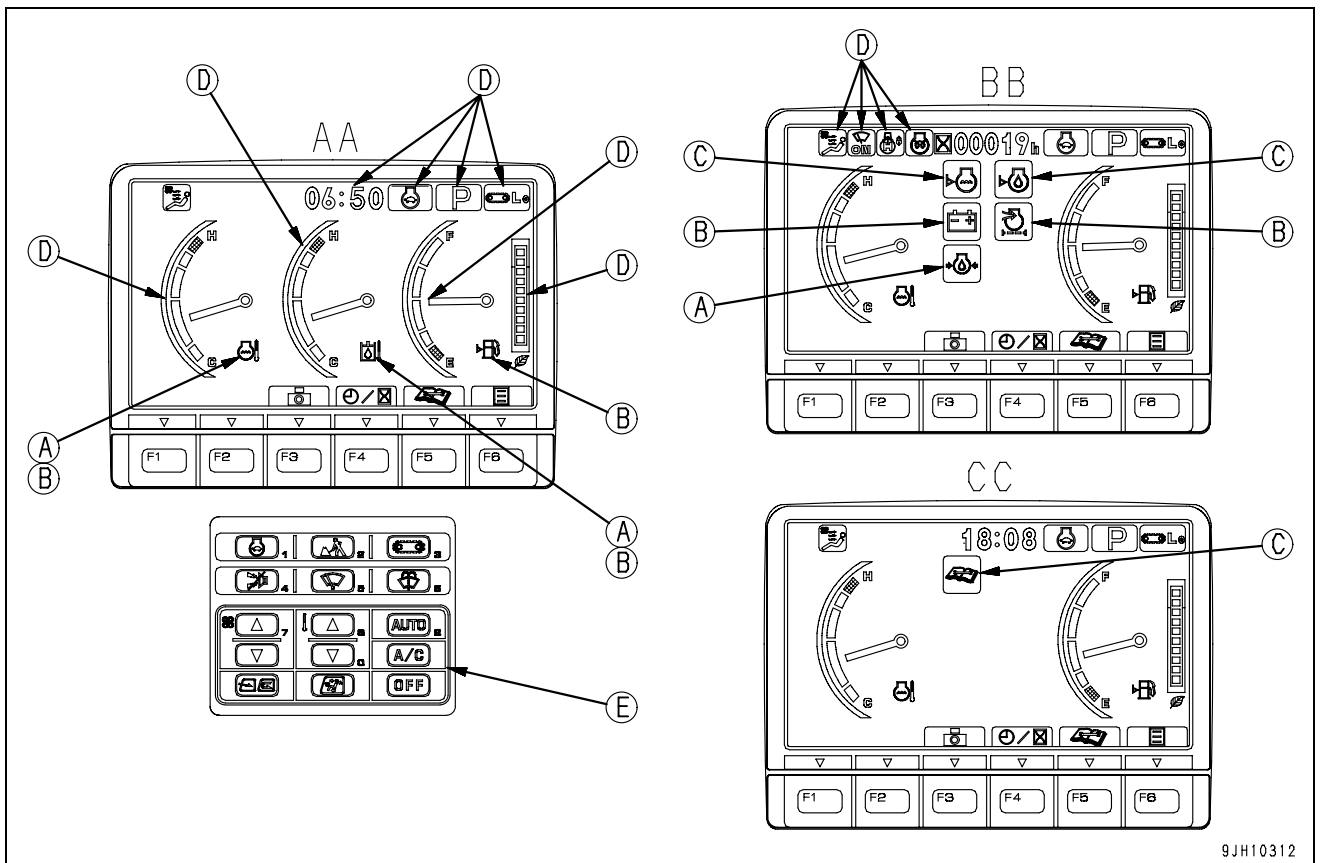

9JH10312

AA: Screen for standard

BB: Screen with all lamps lighted up

CC: Maintenance time warning screen


- (A) Emergency monitors
- (B) Caution monitors
- (C) Basic check monitors
- (D) Meter display portion, pilot display
- (E) Monitor switches portion

REMARK

One of the features of liquid crystal display panels is that there may be black spots (spots that do not light up) or white spots (spots that stay lighted up) on the screen. If there are fewer than 10 black or white spots, this is not a failure or a defect.

Basic Operation of Machine Monitor


Starting Engine When Situation is Normal

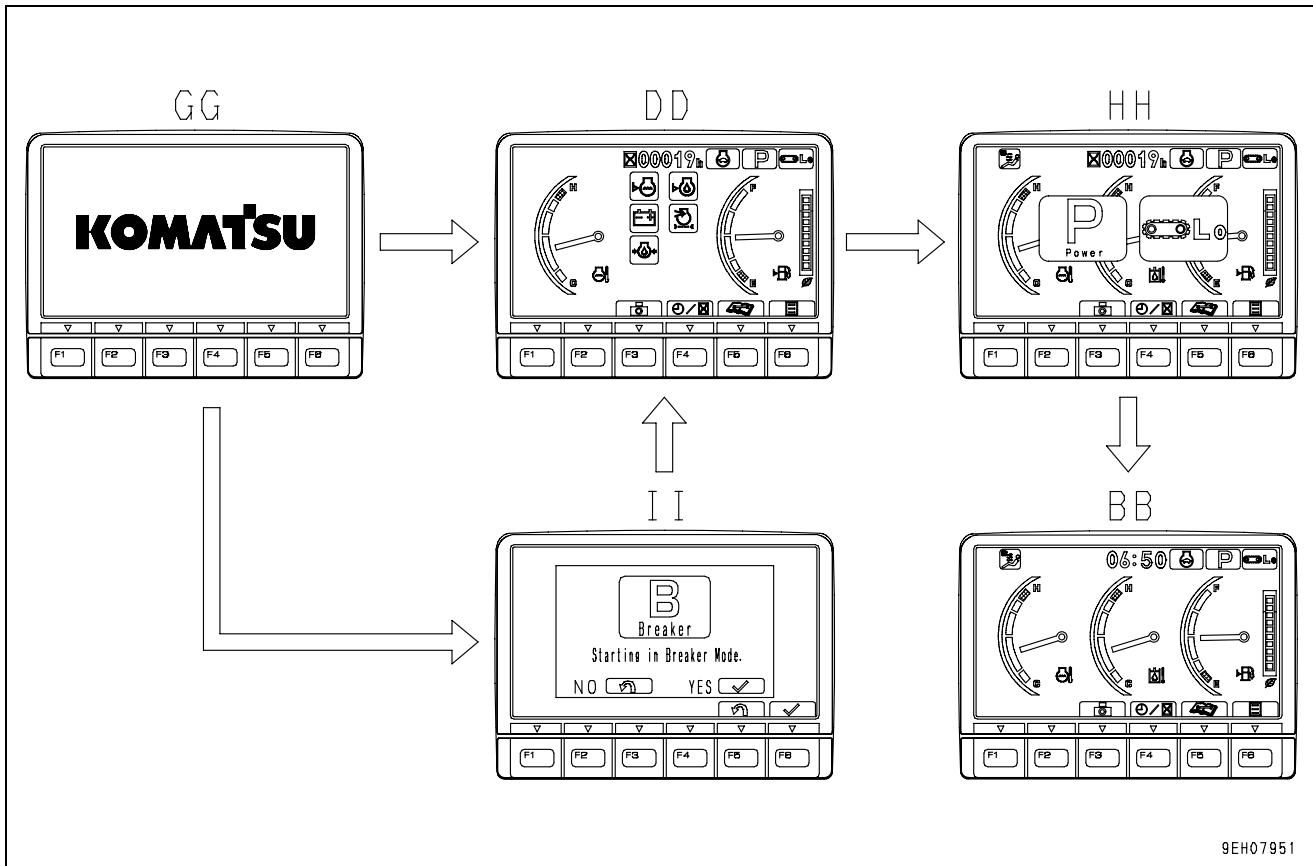

9EH07951

- When the starting switch is turned to the ON position, the opening screen GG is displayed.
- After the opening screen GG is displayed for 2 seconds, the screen switches to the check before starting screen DD.
- After the check before starting screen DD is displayed for 2 seconds, the screen switches to the working mode/travel mode display screen HH.
- After the working mode/travel mode display screen HH is displayed for 2 seconds, the screen switches to standard screen BB.
- If the working mode when the engine is started is B mode, the opening screen GG is displayed for 2 seconds, and the screen then switches to the breaker mode confirmation screen II.


When starting in B mode, press switch F6. If you do not want to start B mode, press switch F5. In this case, the system starts with E mode.

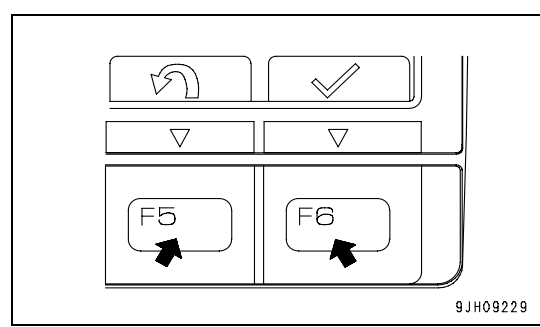

9JH09229


REMARK

When the engine is started, the battery voltage may suddenly drop depending on the temperature and the battery condition. If this happens, the display on the machine monitor may momentarily go out, but this does not indicate any abnormality.

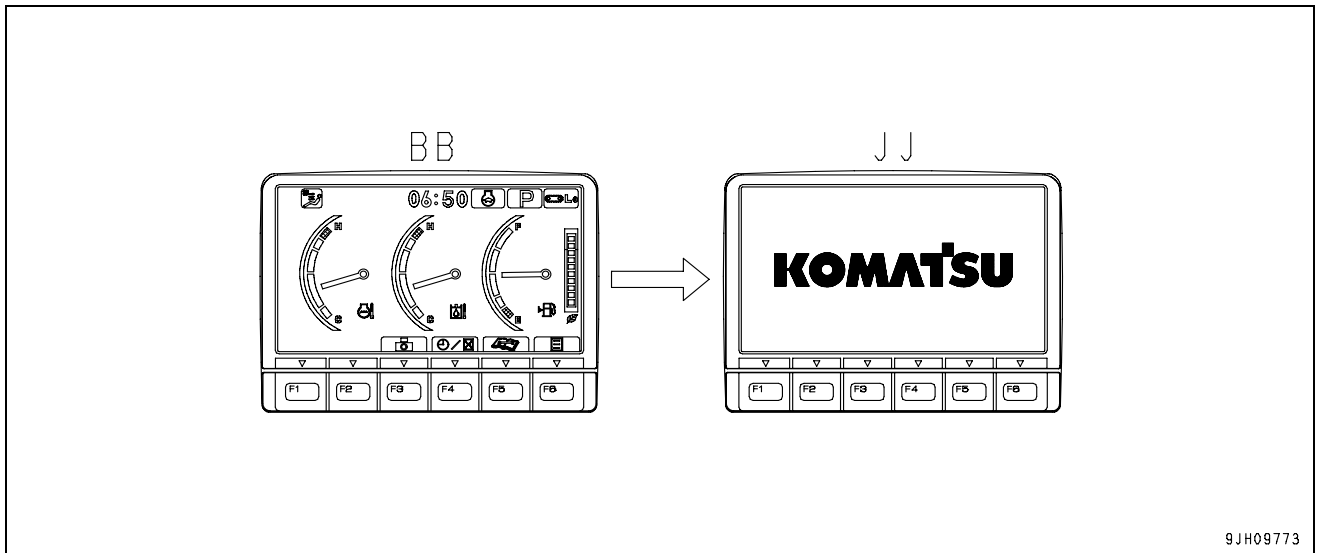Stopping Engine When Situation is Normal

- When the starting switch is turned to the ON position, ending screen JJ is displayed for 5 seconds, then on the display goes out.


If There Is Abnormality When Starting Engine

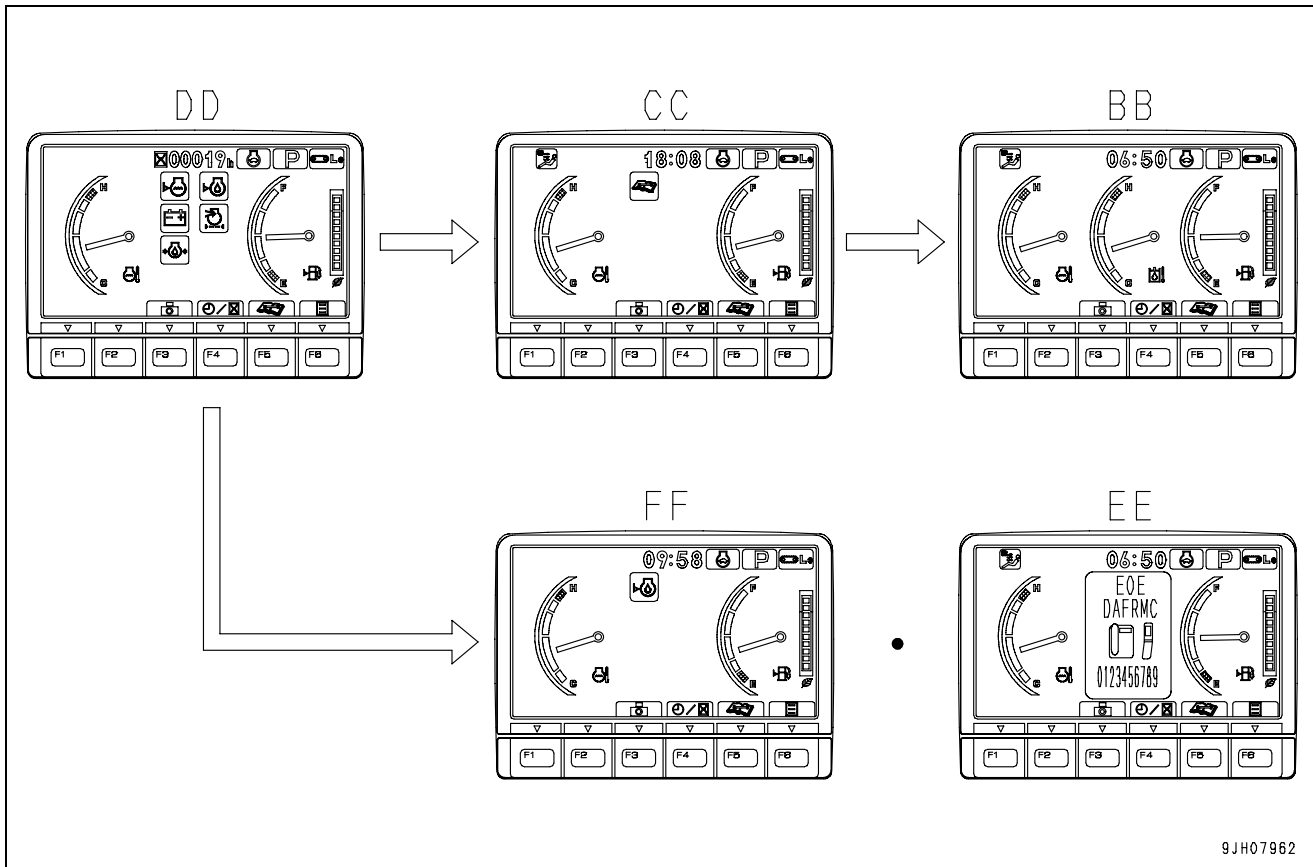

9JH07962

- If there is any abnormality when starting the engine, the check before starting screen DD changes to the maintenance interval warning screen CC, warning screen FF, or error screen EE.
- After displaying the check before starting screen DD for 2 seconds, the screen changes to the maintenance interval warning screen CC.
- After displaying the maintenance interval warning screen CC for 30 seconds, the screen returns to the standard screen BB.
- After displaying the check before starting screen DD for 2 seconds, the screen changes to the warning screen FF or error screen EE.


If Any Abnormality Occurs During Operation

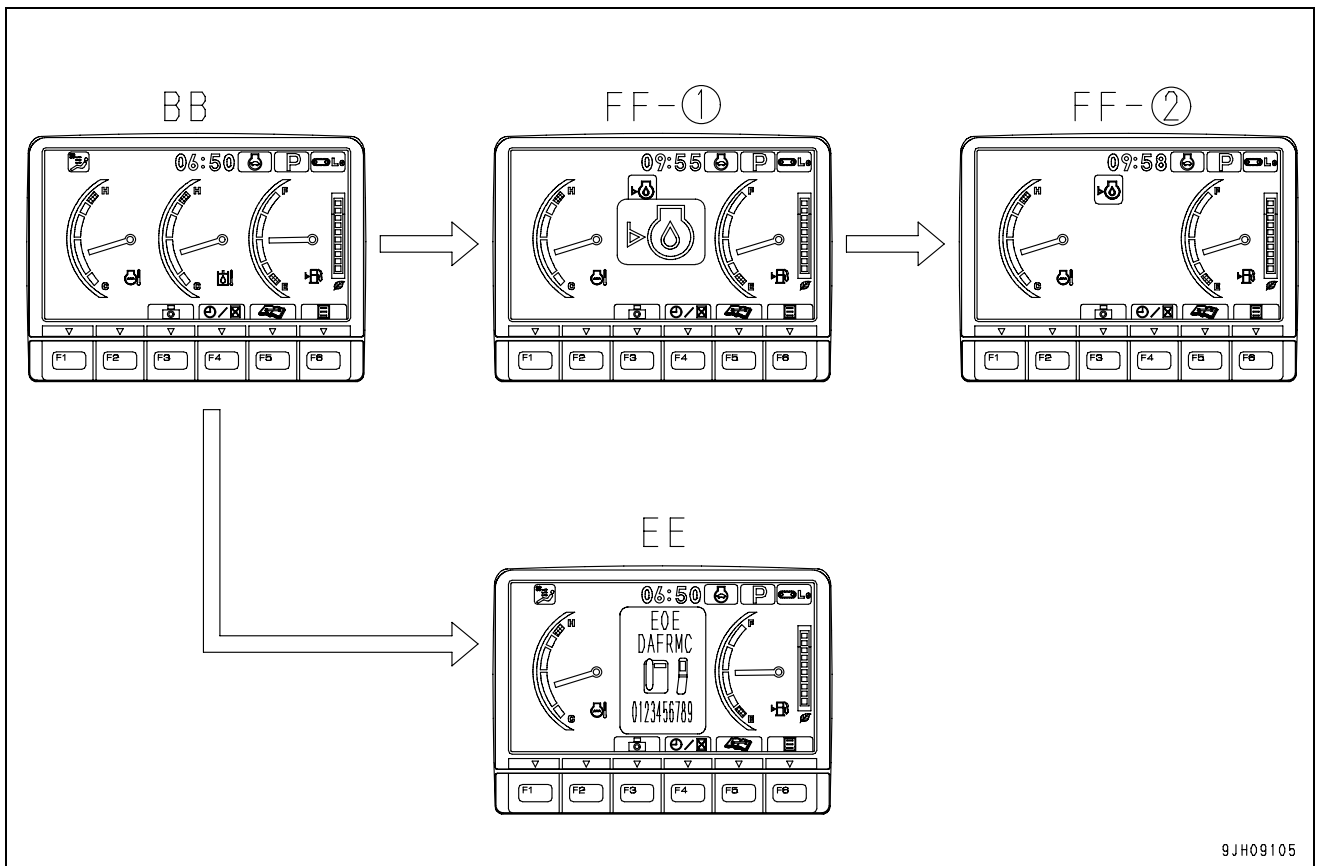

- If any abnormality occurs during operation, the standard screen BB changes to warning screen FF-(1) or the error screen EE.
- After displaying warning screen FF-(1) for 2 seconds, the screen automatically changes to warning screen FF-(2).

REMARK

The colors lighting up the monitors related to the emergency stop items, caution items, and basic check items are as follows.

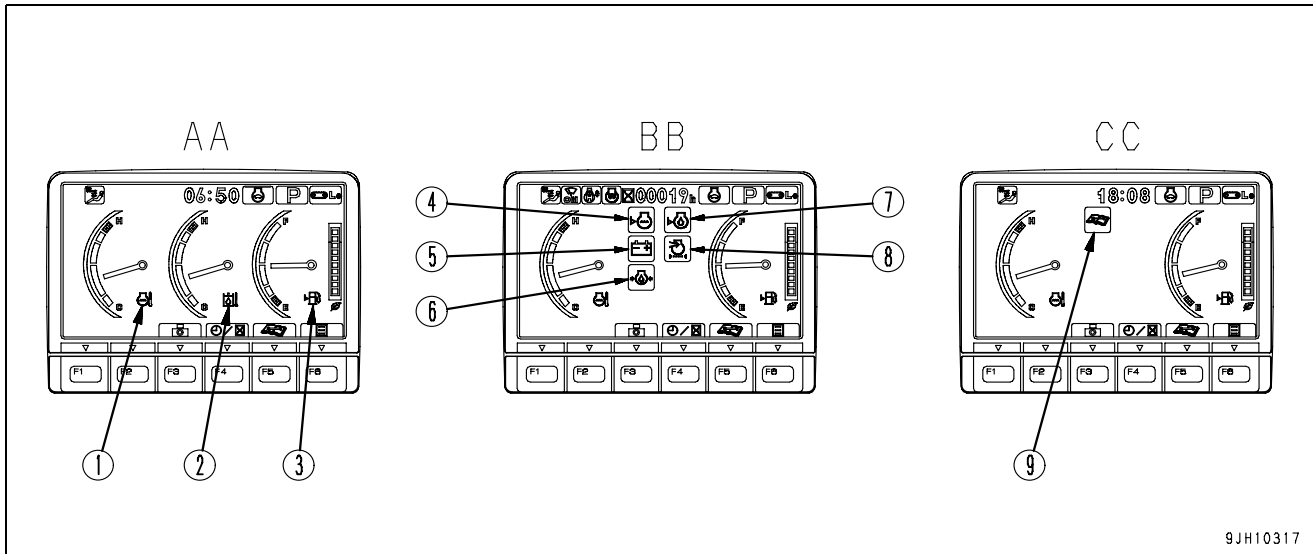

AA: Screen for standard

BB: Screen with all lamps lighted up

CC: Maintenance time warning screen


	Type of monitor	Color when monitor lights up		
		When normal	When abnormal	At low temperature
(1)	Engine coolant temperature monitor	Blue	Red	White
(2)	Hydraulic oil temperature monitor	Blue	Red	White
(3)	Fuel level monitor	Blue	Red	-
(4)	Radiator coolant level monitor	OFF	Red	-
(5)	Charge level monitor	OFF	Red	-
(6)	Engine oil pressure monitor	OFF	Red	-
(7)	Engine oil level monitor	OFF	Red	-
(8)	Air cleaner clogging monitor	OFF	Red	-
(9)	Maintenance interval monitor	OFF	Red	-

Emergency Monitors

⚠ CAUTION

If the monitor lights up red, stop the engine immediately or run at low idle, check applicable location, then perform necessary actions.

These items should be observed while the engine is running. If there is a problem, the monitor for the abnormal location lights up red and buzzer sounds, perform action immediately.

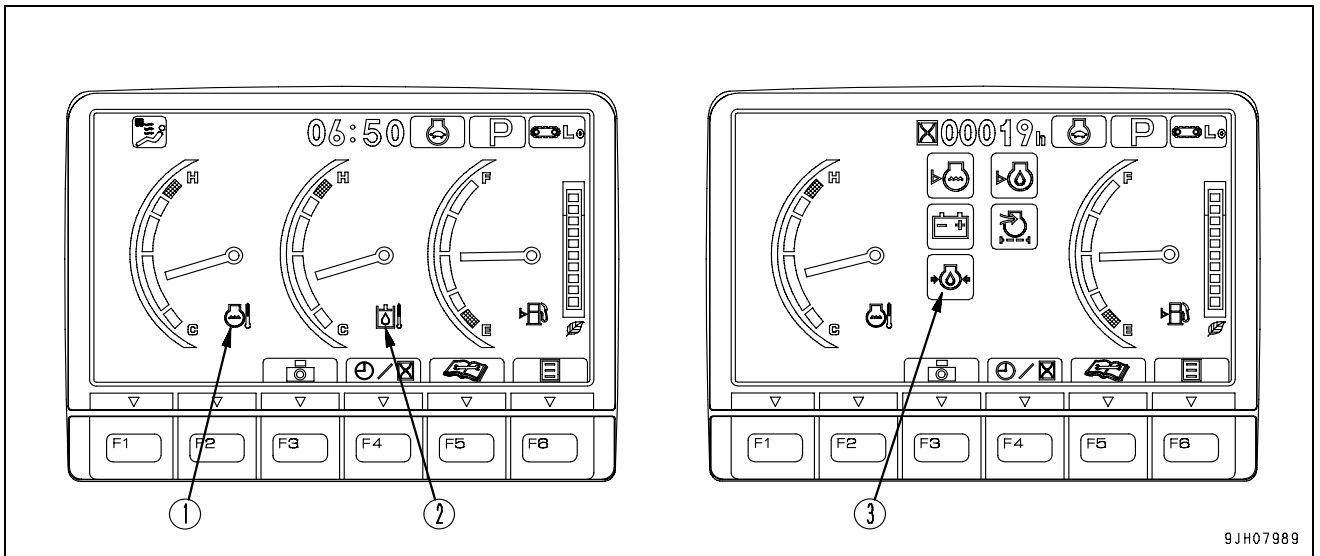

- (1) Engine coolant temperature monitor
- (2) Hydraulic oil temperature monitor


- (3) Engine oil pressure monitor

Engine Coolant Temperature Monitor

Monitor (1) warns operator that the engine coolant temperature has risen.

If the engine coolant temperature becomes abnormally high, the monitor shows abnormal display (C). The overheat prevention system is automatically actuated and the engine speed drops.

Stop operations and run the engine at low idling until monitor (1) shows normal display (B).

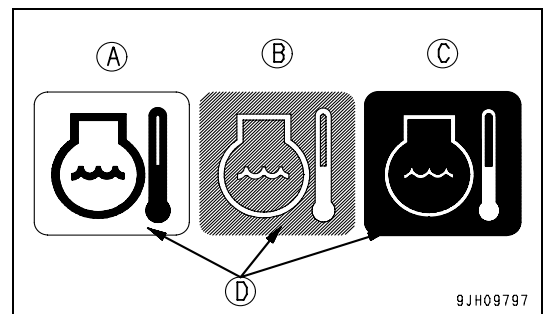

Display (A) at low temperatures: Monitor background (D) is white

Display (B) at correct temperatures: Monitor background (D) is blue

Display (C) when condition is abnormal: Monitor background (D) is red

Hydraulic Oil Temperature Monitor

This monitor (2) warns the operator that the hydraulic oil temperature has risen.


If the hydraulic oil temperature becomes abnormally high, abnormality display (C) is shown.

Stop operations and stop the engine or run it at low idling until the monitor changes to normal display (B).

Display (A) at low temperatures: Monitor background (D) is white


Display (B) at correct temperatures: Monitor background (D) is blue

Display (C) when condition is abnormal: Monitor background (D) is red

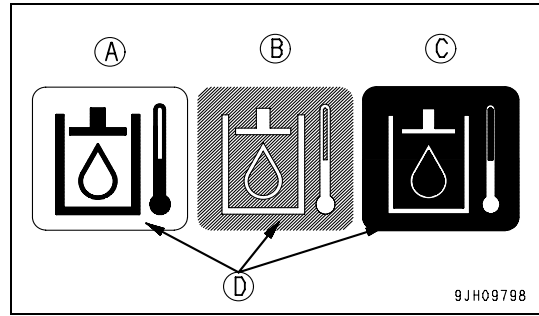

Engine Oil Pressure Monitor

Monitor (3) lights up red if the engine lubrication oil pressure goes below normal level. If monitor lights up red, stop the engine immediately, check the lubrication system and level of oil in the engine oil pan.

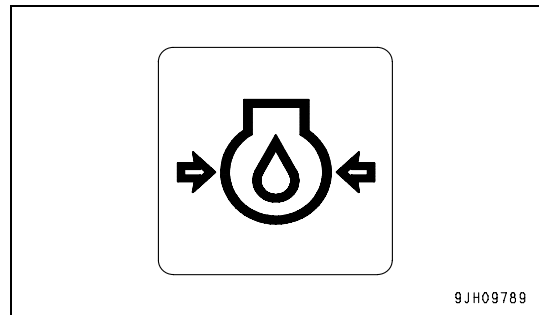


Caution Monitors

⚠ CAUTION

If the warning monitor lights up red, stop operations as soon as possible and perform inspection and maintenance of the applicable location. If the warning is ignored, it may lead to failure.

These are items that should be observed while the engine is running. If any abnormality occurs, the screen displays the item that needs immediate action.

If there is an abnormality, the monitor for the abnormal location lights up red.

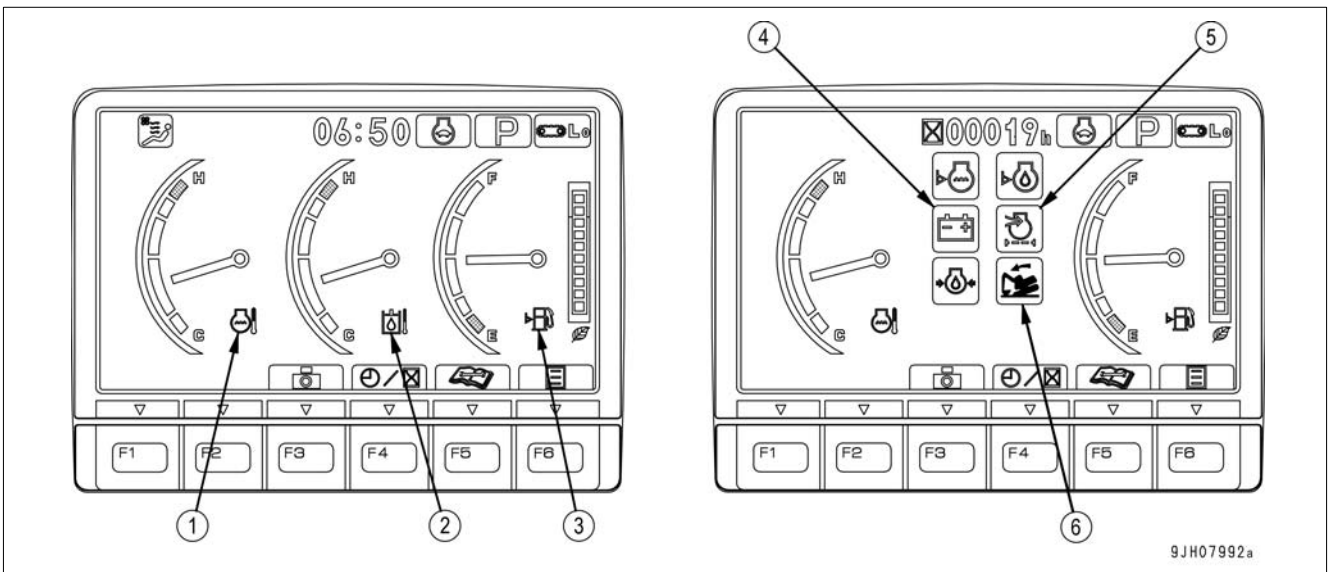

- (1) Engine coolant temperature monitor
- (2) Hydraulic oil temperature monitor
- (3) Fuel level monitor
- (4) Charge level monitor
- (5) Air cleaner clogging monitor
- (6) Overload caution

Engine Coolant Temperature Monitor


If this monitor (1) shows low-temperature display (A), carry out the warm-up operation. For details, see “Engine Warm Up (3-131)”.

Monitor (1) will show normal display (B), so carry out the warm-up operation for the engine.

Display (A) at low temperatures: Monitor background (D) is white

Display (B) at correct temperatures: Monitor background (D) is blue

Display (C) when condition is abnormal: Monitor background (D) is red

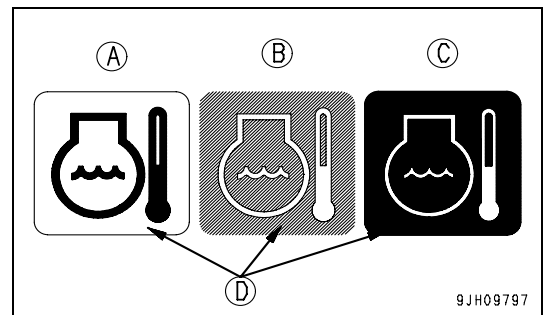

Hydraulic Oil Temperature Monitor


If this monitor (2) shows low-temperature display (A), carry out the warm-up operation. For details, see “Hydraulic Equipment Warm Up (3-133)”.

Carry out the warm-up operation for the hydraulic equipment until monitor (2) shows normal display (B).

Display (A) at low temperatures: Monitor background (D) is white

Display (B) at correct temperatures: Monitor background (D) is blue


Display (C) when condition is abnormal: Monitor background (D) is red

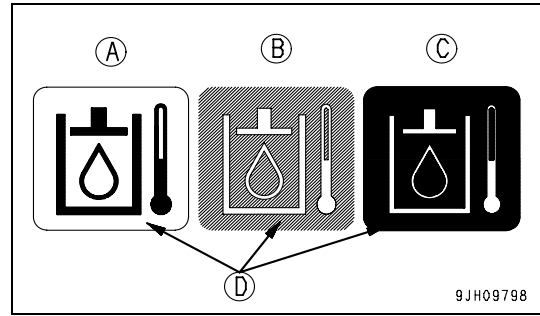

Fuel Level Monitor

This monitor (3) lights up to warn that the operator that the level in the fuel tank is low.

When the remaining fuel level reaches approx. 80 liters, the monitor lamp lights up red, so add fuel as soon as possible.

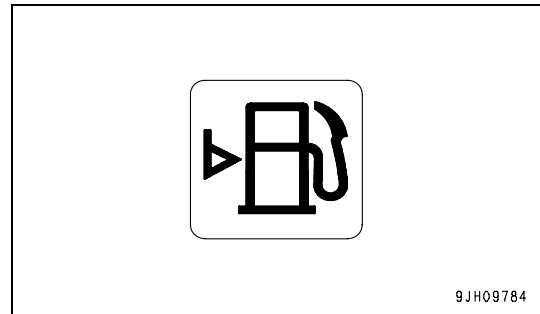


Charge Level Monitor

This monitor (4) warns the operator that there is an abnormality in the charging system when the engine is running.

If the battery is not being charged properly while the engine is running, monitor (1) lights up red.

If monitor lights up red, check the V-belt for looseness. If any abnormality is found, perform the necessary actions. For details, see “OTHER TROUBLE (3-196)”.

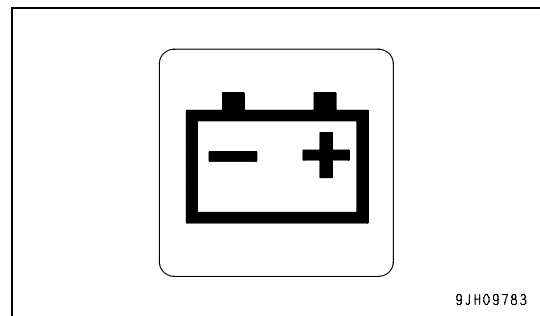


Air Cleaner Clogging Monitor

This monitor (5) warns the operator that the air cleaner is clogged.


If it lights up red, stop the engine and inspect and clean the air cleaner.

For details of checking and cleaning the air cleaner, see “CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT (4-21)”.

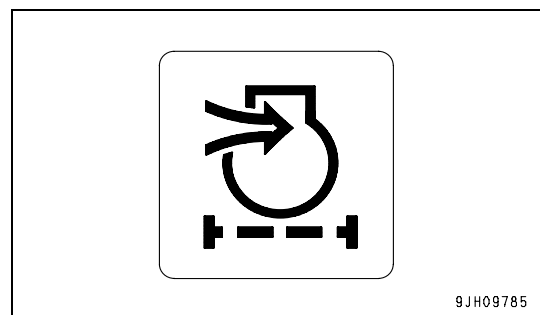

OVERLOAD CAUTION (When lifting)

This monitor (7) warns that the machine is close to tipping due to the load (an audible warning is also given), if the warning is given, lower the load. Refer the lifting capacity chart for safe load.

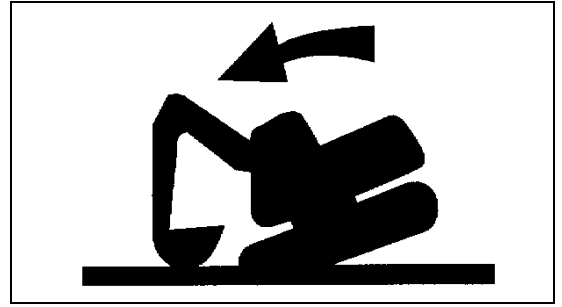


Basic Check Monitors

⚠ CAUTION

These monitors do not guarantee the condition of the machine. Do not simply rely on the monitor when carrying out checks before starting (daily inspection). Always get off the machine and check each item directly.

Displays basic items among the check before starting items that must be checked before starting the engine. If there is any abnormality, monitor for the location of abnormality will light up.

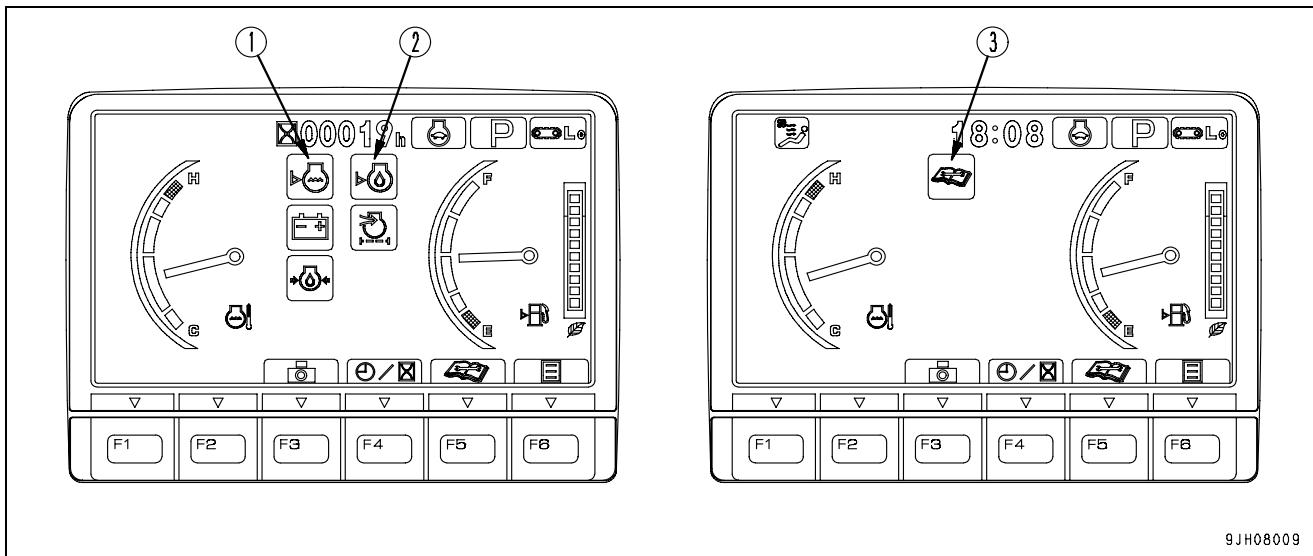


- (1) Radiator coolant level monitor
- (2) Engine oil level monitor
- (3) Maintenance interval monitor

Radiator Coolant Level Monitor

Monitor (1) warns the operator that there has been a drop in the radiator coolant level.


If the radiator coolant is low, the lamp lights up red, so check coolant level in the radiator and subtank, and add coolant.

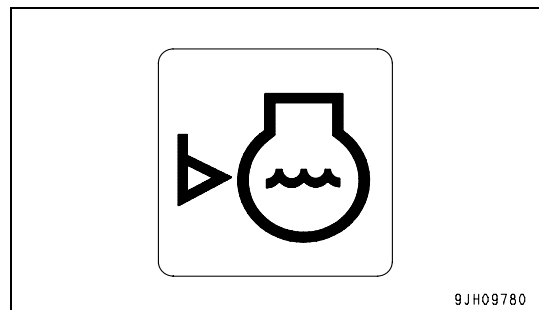

Engine Oil Level Monitor

Monitor (2) warns the operator that the oil level in the engine oil pan has dropped.

If oil level in the engine oil pan is low, the lamp lights up red, so check the oil level, and add oil.

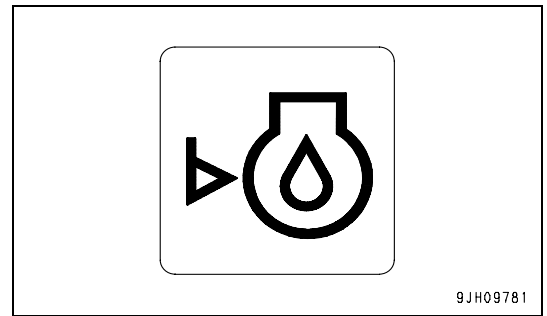


Maintenance Interval Monitor

This monitor (3) lights up when the maintenance time gets close and remains lighted after the maintenance time has already passed.

- Lighted yellow: The maintenance time is due within 30 hours.
- Lighted red: The maintenance time has already passed.

This monitor lights up when the starting switch is turned to the ON position. It goes off after 30 seconds and the display changes to the normal screen.

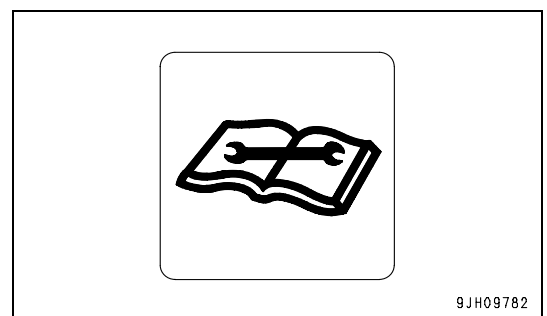


REMARK

For details of the method of confirming the maintenance interval, see "Maintenance Selector Switch (3-39)".

If it is desired to change settings for the maintenance interval, have your Komatsu distributor change the settings.

Meter Display Portion

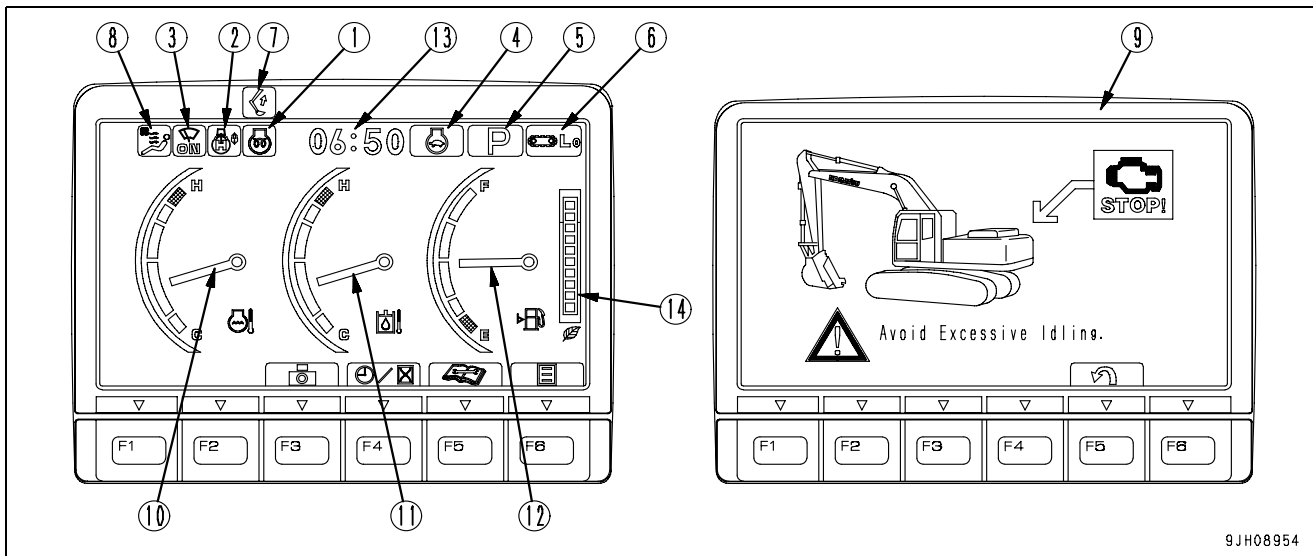

9JH08954

Pilot display

- (1) Engine pre-heating monitor
- (2) Swing lock monitor
- (3) Wiper monitor
- (4) Auto-deceleration monitor
- (5) Working mode monitor
- (6) Travel speed monitor
- (7) One-touch power max. monitor
- (8) Air conditioner monitor
- (9) Idle stop guidance

Gauge and Meter

- (10) Engine coolant temperature gauge
- (11) Hydraulic oil temperature gauge
- (12) Fuel gauge
- (13) Service meter, clock
- (14) ECO gauge


Pilot Display

- The pilot display at the top of the screen consists of the pilot lamps to confirm the actuation of each function.
- When the starting switch is turned ON, the pilot lamp lights up when the display items are functioning.

Engine Pre-heating Monitor

This monitor (1) lights up when the engine preheating electric heater is actuated. When the ambient temperature is low and the starting switch is set to the ON position, the lamp lights up, and when the preheating is completed, it goes out.

The preheating time differs according to the ambient temperature.

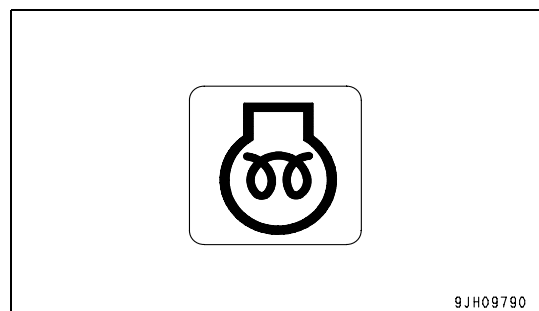

9JH09790

Swing Lock Monitor


This monitor (2) informs the operator that the swing lock is being actuated.

Actuated: Lights up

When the swing lock switch is turned ON (ACTUATED), the monitor lamp lights up.

This lamp lights up when the swing parking brake release switch is set to the FREE position.

- For details of the positions of the swing holding brake release switch, see “CONTROLS AND GAUGES (3-3)“.

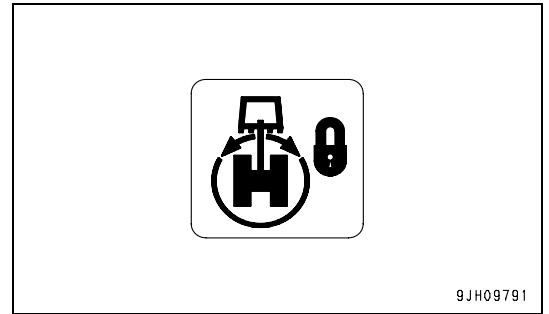

REMARK

The swing motor is equipped with a disc brake that mechanically stops the rotation. When the swing lock monitor is lighted up, the brake remains applied.

Wiper Monitor

Monitor (3) indicates operating status of the wiper.

The monitor display when wiper switch is operated, as follows.

When ON lights up: Wiper moves continuously

When INT lights up: Wiper moves intermittently

OFF: Wiper stops

- For details of the positions of the wiper switch, see “CONTROLS AND GAUGES (3-3)“.



Auto-deceleration Monitor


Monitor (4) shows if the auto-deceleration is being actuated.

The monitor display when auto-deceleration switch is operated, as follows.

Auto-deceleration monitor ON: Auto-deceleration actuated

Auto-deceleration monitor OFF: Auto-deceleration canceled

- For details of the positions of the auto-deceleration switch, see “CONTROLS AND GAUGES (3-3)“.

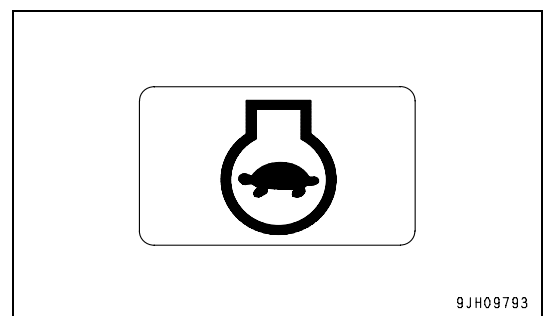


Working Mode Monitor

This monitor (5) displays the setting of the working mode.

The monitor display is as follows according to the operation of the working mode switch.

- P: P mode (for heavy-load operations)
- E: E mode (for operations with emphasis on fuel consumption)
- L: L mode (for fine control operations)
- B: B mode (for breaker operations)
- ATT: ATT mode (for crusher operations)

- For details of the positions of the working mode switch, see "CONTROLS AND GAUGES (3-3)".

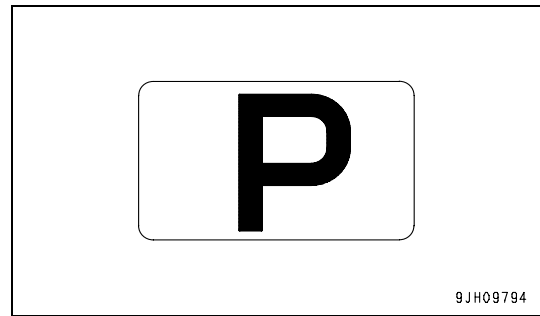


Travel Speed Monitor

This monitor (6) shows the setting for the travel speed.

The monitor display is as follows according to the operation of the travel speed selector switch.

- Lo: Low-speed travel
- Mi: Mid-range speed travel
- Hi: High-speed travel

- For details of the positions of the travel speed selector switch, see "CONTROLS AND GAUGES (3-3)".

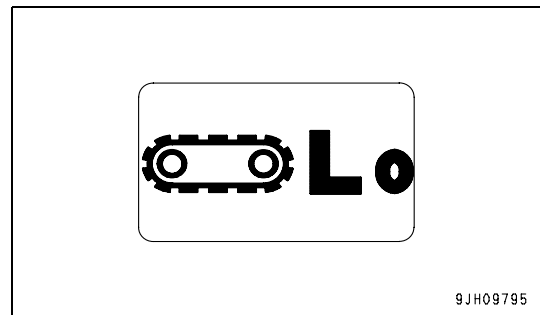


One-Touch Power Max. Monitor

This monitor (7) shows if the one-touch power max. function is being actuated.

The monitor display when the knob switch on the left control lever is operated is as follows. (The actual monitor display is shown at the position of preheating monitor (1).)

Monitor lights up: Digging power is increased while knob switch is kept pressed.

- For details of the positions of the knob switch, see "CONTROLS AND GAUGES (3-3)".

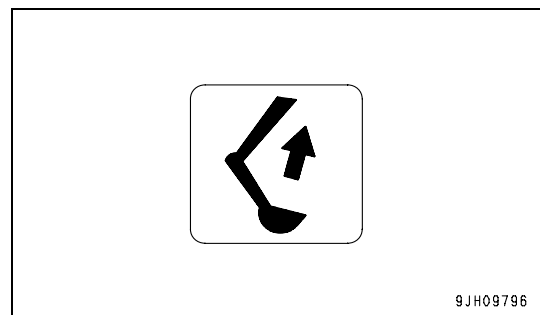

REMARK

Only when the working mode is P or E mode, the power is increased while the knob switch is being pressed. Even if the knob switch continues to be pressed, the power increase is finished after 8.5 seconds.


Monitor goes out: Power max function stopped

Air Conditioner Monitor

This monitor (8) displays the working status of the air conditioner.

Monitor lighted up: Air conditioner ON

Monitor off: Air conditioner OFF

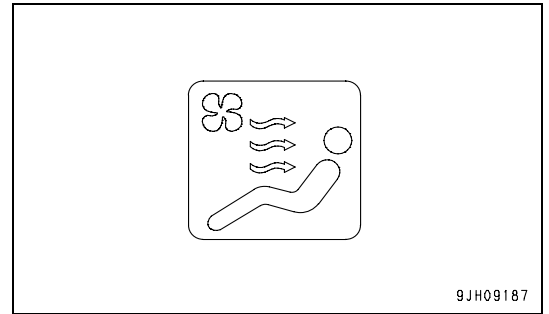


9JH09187

Idle Stop Guidance

If the levers are not operated for more than five minutes, and the engine is idling, the idling stop message is displayed on the monitor. When waiting for work or stopping work for a short periods, stop the engine to reduce unnecessary fuel consumption.

- The idling stop message screen returns to the standard screen any lever is operated again or when function switch F5 (Back) is pressed.

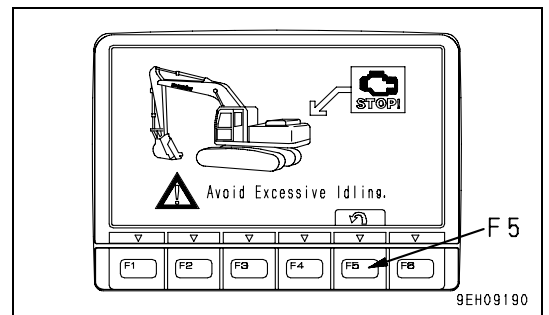

9EH09190


Gauges and Meter

Engine Coolant Temperature Gauge

This meter (10) shows the engine coolant temperature.

During normal operations, the indicator should be in the green range. If the indicator goes beyond red range (A) during operations, the overheating prevention system is actuated.

- (A) - (B): Red range
- (A) - (C): Green range
- (C) - (D): White range

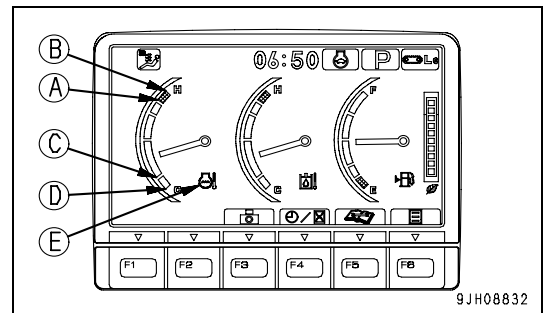

9JH08832

The overheating prevention system is actuated as follows.

Red range (A) position: Engine coolant temperature monitor (E) shows abnormality display

Red range (B) position: Engine speed changes to low idling, engine coolant temperature monitor (E) shows abnormality display, alarm buzzer sounds at same time

The overheating prevention system continues to work until the indicator enters the green range.


When the engine is started, if the indicator is at position (C), engine coolant temperature monitor (E) shows the low-temperature display.

If this happens, carry out the warm-up operation. For details, see "Engine Warm Up (3-131)".

Display (G) at low temperatures: Monitor background (K) is white

Display (H) at correct temperatures: Monitor background (K) is blue

Display (J) when condition is abnormal: Monitor background (K) is red

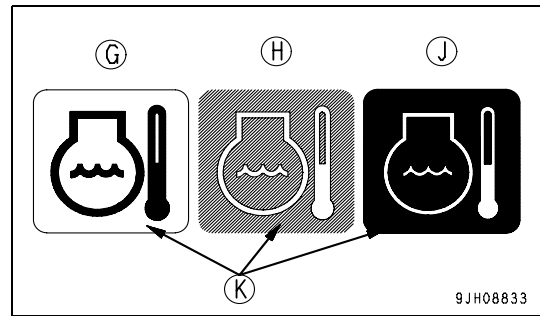


Hydraulic Oil Temperature Gauge

This meter (11) shows the hydraulic oil temperature.

During normal operations, the indicator should be in the green range.

If the indicator enters the red range (A) during operations, the hydraulic oil temperature is 102°C or more. Run the engine at low idling or stop it and wait for the hydraulic oil temperature to go down.

- (A) - (B): Red range
- (A) - (D): Green range
- (D) - (C): White range

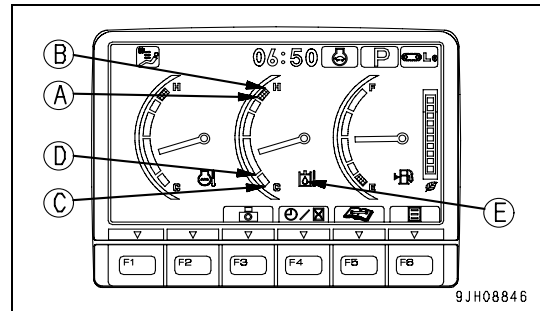

REMARK

When the indicator reaches red range (A), the hydraulic oil temperature is as follows.

Red range (A) position: 102°C or more


Red range (B) position: 105°C or more

When the indicator is in red range (A) - (B), hydraulic oil temperature monitor (E) shows the abnormality display. When the engine is started, if the indicator is at position (C) and the hydraulic oil temperature is 20°C, hydraulic oil temperature monitor (E) shows the low-temperature display. If this happens, carry out the warm-up operation. For details, see "Hydraulic Equipment Warm Up (3-133)".

Display (G) at low temperatures: Monitor background (K) is white

Display (H) at correct temperatures: Monitor background (K) is blue

Display (J) when condition is abnormal: Monitor background (K) is red

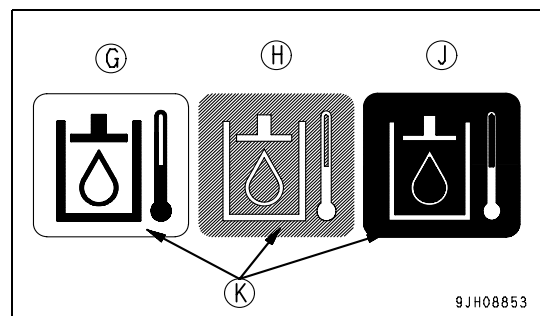


Fuel Gauge

This meter (12) shows the amount of fuel remaining in the fuel tank.

During normal operations, the indicator should be in the green range.

If the indicator starts to enter red range (A) during operation, there is less than 110 liters of fuel remaining, so carry out inspection and add fuel.

- (A) - (B): Indicates red range
- (A) - (C): Indicates green range

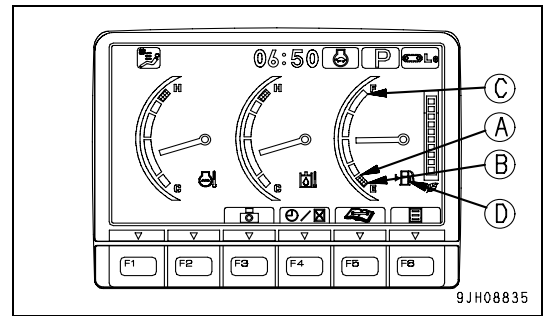

REMARK

When the indicator reaches red range (B), there is less than 80 liters of fuel remaining.


When the indicator is in the red range (B), fuel level monitor (D) lights up red.

The correct fuel level may not be displayed for a short time when the starting switch is turned ON, but this is not an abnormality.


Service Meter, Clock

This meter (13) shows the total hours of operation of the machine or the present time.


When the engine is running, the service meter advances even if the machine is not moving. The service meter advances 1 for every hour that the machine is working, regardless of the engine speed.

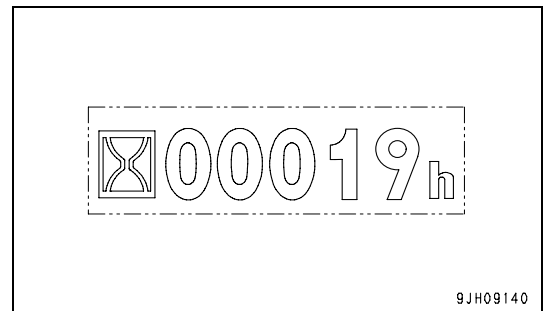

9JH09140

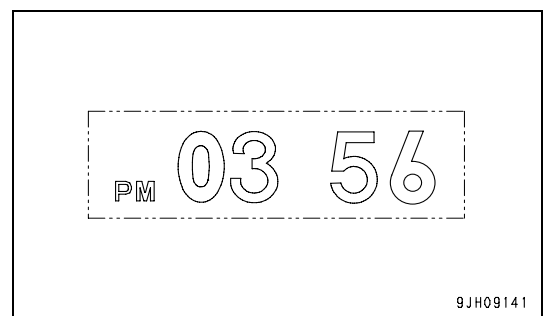


9JH09141

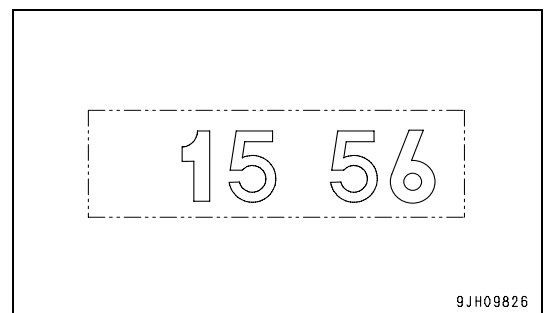

9JH09826

- When the standard screen is being displayed, if function switch F4 is pressed, it is possible to switch between the clock display and the service meter display.
- Clock display (12-hour or 24-hour displays are available)
To set or correct the time, press function switch F6 (user mode switch).

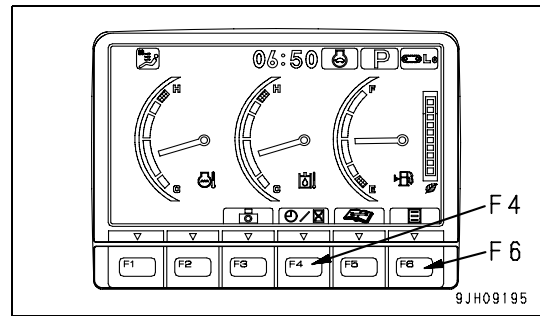


ECO Gauge


This gauge (14) shows the working load status.

When the gauge is in green range A, the work load is light to medium. When the gauge is in orange range B), the load is heavy.

- When the gauge enters the orange range, there is no abnormality on the machine, but to protect the environment, reduce the engine output to a point where there is no adverse effect on the operation. Generally, carry out energy-saving operations in the green range. Reducing the frequency of travel also helps to save energy. Consider the best way of saving energy.

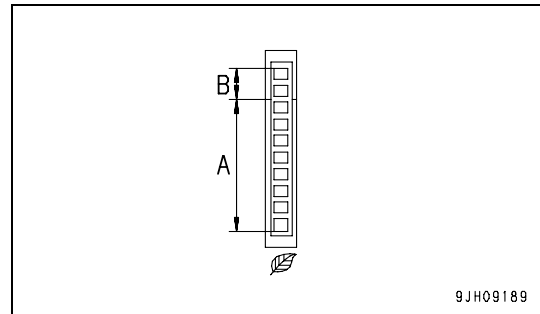

Monitor Switches Portion

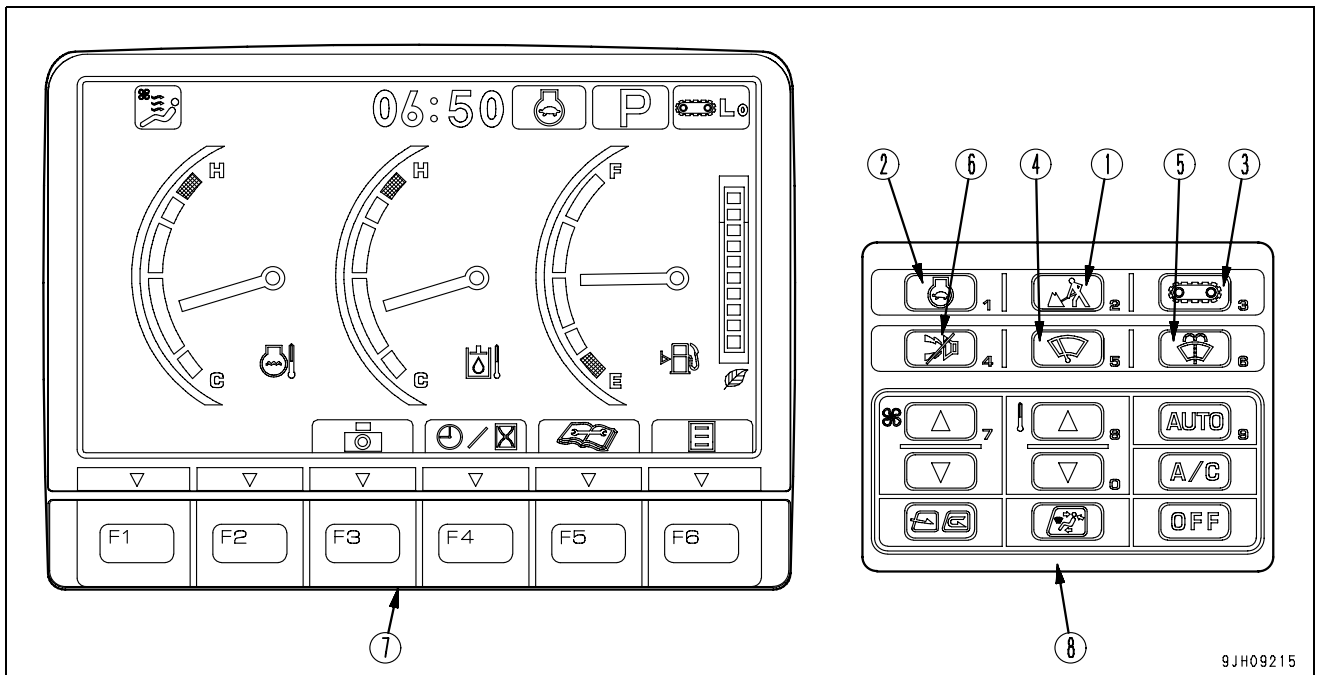

- (1) Working mode selector switch
- (2) Auto-deceleration switch
- (3) Travel speed selector switch
- (4) Wiper switch
- (5) Window washer switch
- (6) Buzzer cancel switch
- (7) Function switches
- (8) Air conditioner switch

Working Mode Selector Switch

Use this switch (1) to set the movement or power of the work equipment.

The operation becomes easier if the mode is selected to match the content of the operation.

P mode: For heavy-load operations

E mode: For operation with emphasis on fuel consumption


L mode: For fine control operations

B mode: For breaker operations



ATT mode: For double-acting circuit attachment, such as crusher (attachment-ready machines)

- When the monitor first appears, it is automatically set to the mode in use when it was started the previous time.
- Press switch (1) to display the working mode selection screen. For each set mode, the pilot monitor at the top right of the monitor display shows P, E, L, B, ATT.
- For machines ready for attachment, the attachment mode is added to the display.

For details of the method for handling machines ready for attachment, see the ATTACHMENTS AND OPTIONS Section.

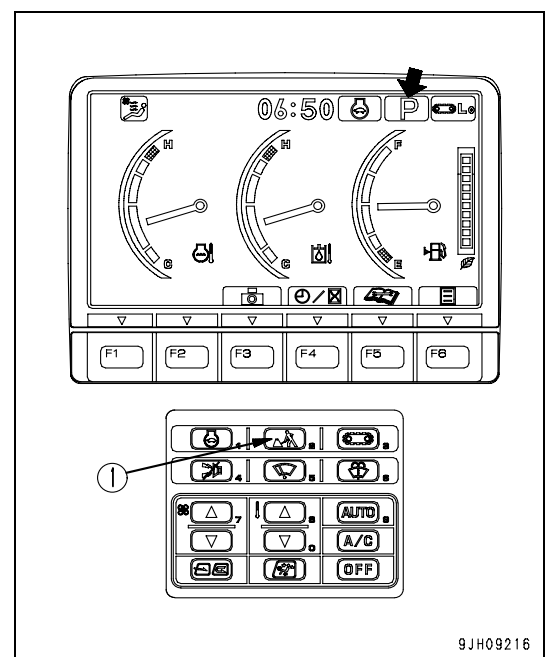



- When the monitor starts up, if the working mode setting is B mode, the confirmation message on the right is displayed and the buzzer sounds.
- When starting up and staying in B mode, always press function switch F6 (Yes).
If you press F5 (No), the system starts up in E mode.

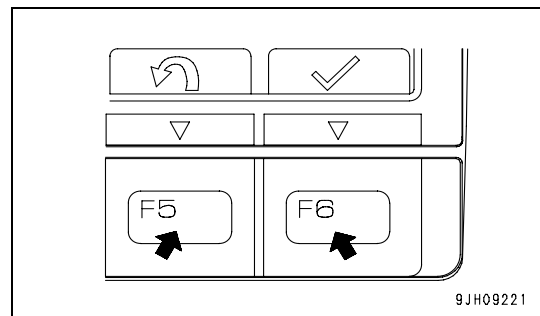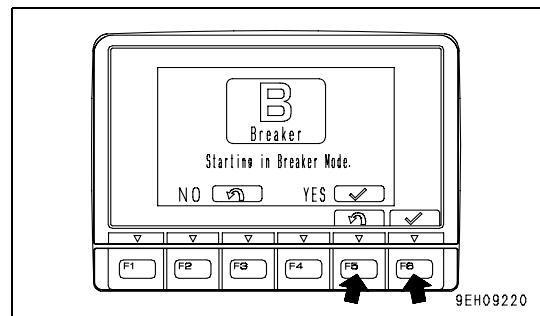

- If you want to have automatic setting of the P, E, L, B or ATT mode when starting (optional default setting), please ask your Komatsu distributor to change the setting.


Procedure for operation

1. If working mode selector switch (1) is pressed, the Working Mode screen is displayed on the monitor.
 2. Press function switches F3 or F4 at the bottom of the screen or working mode selector switch (1) to change the mode selection one at a time.
- If no switch is touched for more than five seconds, the selected working mode is automatically set as the working mode and the screen changes to Steps 3 and Steps 4.

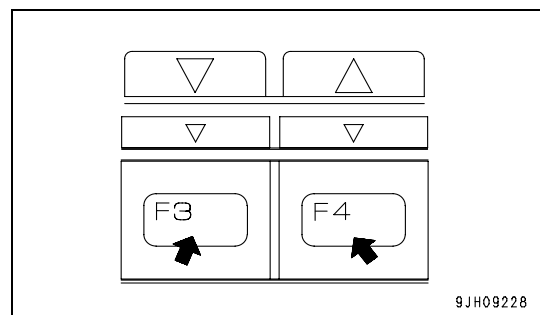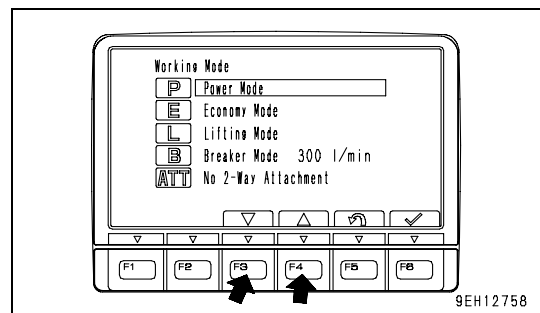

REMARK


To return to the standard screen without changing the working mode, press function switch F5.

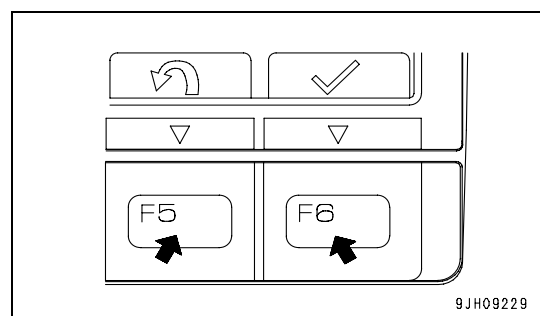

- After selecting the desired mode, press function switch F6 and the mode is displayed in the center of the monitor display.


(Example: If power mode is selected: P)

- After two seconds, the pilot monitor display at the top right of the screen is highlighted in orange.

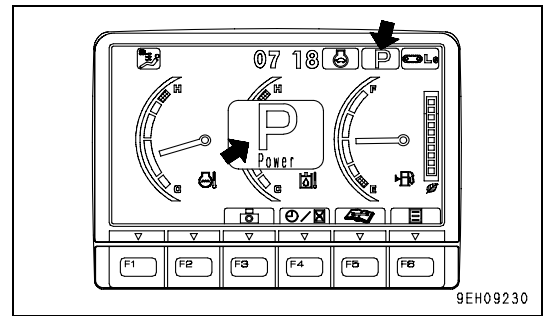

- After two seconds, the screen returns to the standard screen.



The monitor display highlighted in orange in Steps 4 returns to blue.

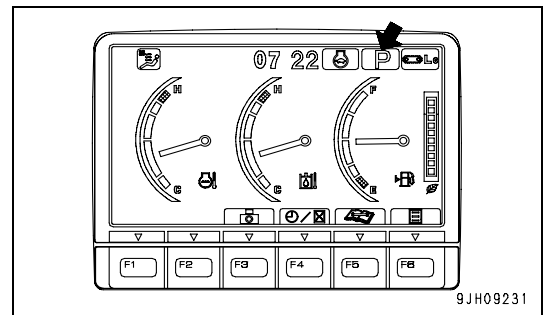

REMARK

When setting the working mode to B mode, to ensure safety, the buzzer sounds and at the same time, the message in the illustration on the right is displayed. When setting to the breaker mode, always press function switch F6.

- If function switch F5 is pressed, the breaker mode is not set, and the screen returns to working mode selection screen.

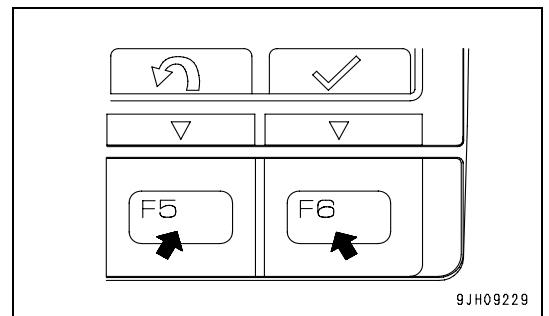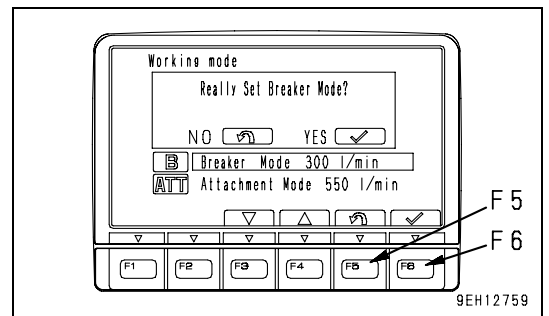

NOTICE

When using the breaker, set to B mode. If B mode is not used, there is danger that the breaker may break.

Auto-deceleration Switch

If the control levers are at neutral, this switch (2) automatically lowers the engine speed and turns on the function to reduce fuel consumption.

Auto-deceleration monitor ON: Auto-deceleration ON

Auto-deceleration monitor OFF: Auto-deceleration OFF

Each time the switch is pressed, the auto-deceleration is switched between ON and OFF.

● Auto-deceleration function

When the auto-deceleration function is ON, if the work equipment and travel levers are returned to the N position, the engine speed will drop after 4 seconds from the operating speed to idling speed.


This makes it possible to reduce fuel consumption.

If any lever is operated when the machine is in this condition, engine speed will return to the previous operating speed to make it possible to perform operations.


1. When auto-deceleration switch (2) is pressed and the auto-deceleration function is turned ON, the mode is displayed in the center of the monitor display, and after two seconds, the screen returns to the standard screen.

2. On the standard screen, the Auto-deceleration monitor lights up.


(When the auto-deceleration is OFF, it does not light up.)

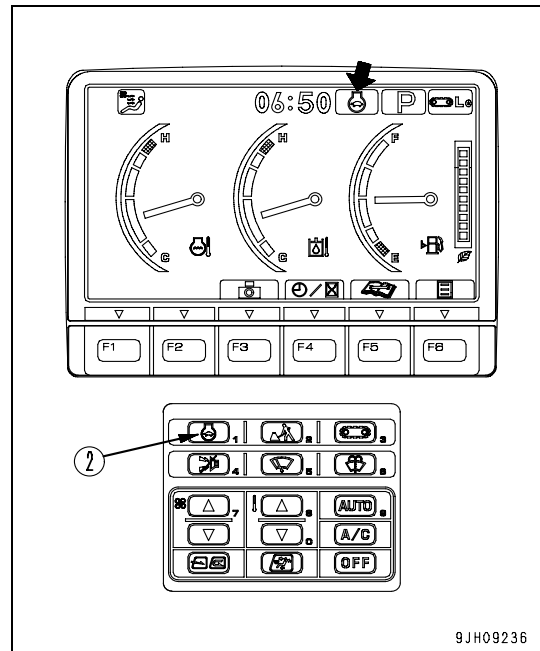

9JH09236

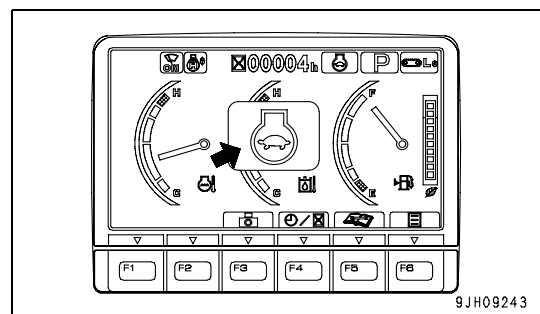

9JH09243

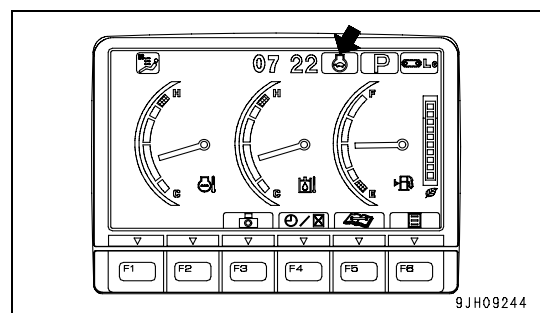

9JH09244

Travel Speed Selector Switch

⚠ WARNING

- When loading or unloading from a trailer, always travel at low speed (with travel speed selector switch (3) at the Lo position). Never operate travel speed selector switch (3) while loading or unloading.
- If the travel speed is switched between Hi and Lo when the machine is traveling, the machine may deviate to one side, even when traveling in a straight line. Stop the machine before switching the travel speed.

Switch (3) is used to set the travel speed to 3 stages.

Lo lights up : Low-speed travel

Mi lights up : Medium-speed travel

Hi lights up : Hi-speed travel




When the engine is started, the speed is automatically set to Lo.

Each time that the switch is pressed, the display changes Lo → Mi → Hi → Lo in turn.

Even if the travel speed is set to high-speed (Hi) or a mid-range speed (Mi), when traveling on soft ground or uphill, and travel power is needed, the system automatically shifts down to low speed travel (Lo). There is no need to operate the switch. In this case, the pilot monitor on the monitor display stays lighted up at Hi (high-speed) or Mi (mid-range speed).

REMARK

Each time travel speed selector switch (3) is switched, the mode is displayed on the monitor display, and after two seconds, the screen returns to the standard screen.

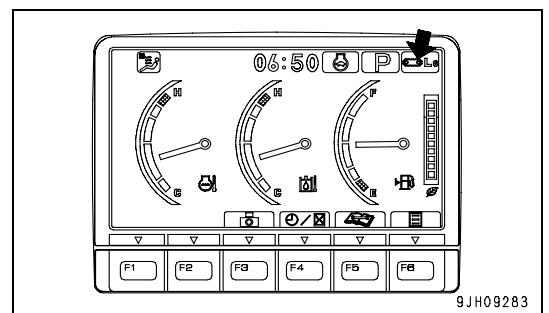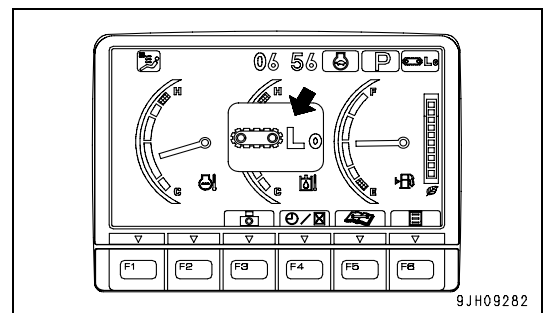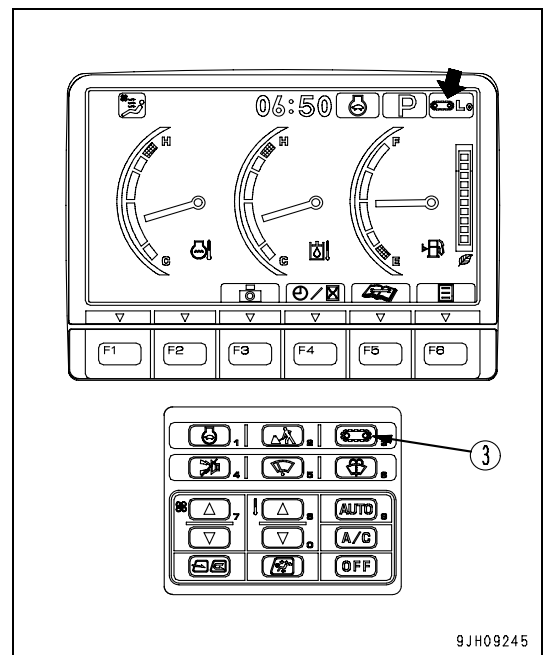

Wiper Switch


This switch (4) actuates the front window wiper.

Each time the switch is pressed, it changes ON → INT → stop (OFF).

Wiper monitor INT lighted up: Wiper operates intermittently



Wiper monitor ON lighted up: Wiper operates continuously

Wiper monitor OFF: Wiper stops

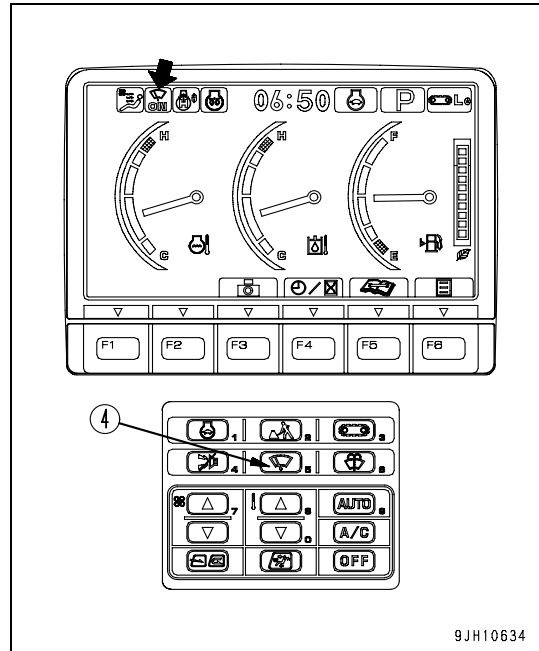

REMARK


Each time wiper switch (4) is pressed, the mode is displayed in the center of the monitor display, and after two seconds, the screen returns to the standard screen.

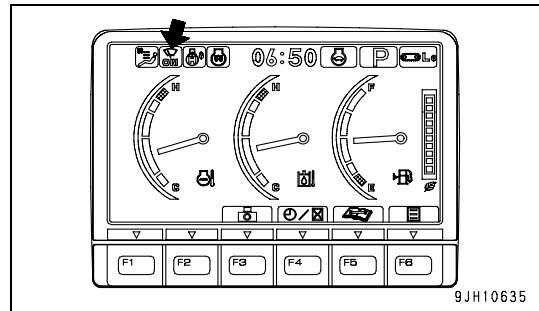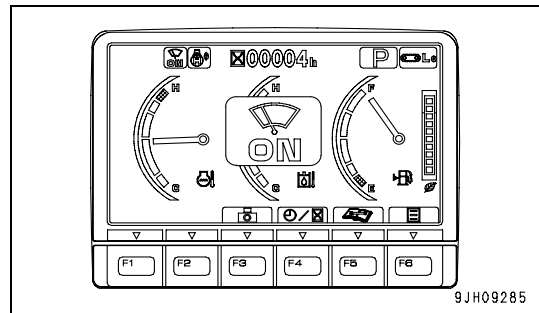

Window Washer Switch


This switch (5) is kept continuously pressed, window washer fluid is sprayed out on the front glass. When the switch is released, the spray stops.

- If switch (5) is kept pressed when the wiper is stopped, the window washer fluid will spray, and at the same time, the wiper will be actuated continuously. When switch (5) is released, the wiper will continue to operate for 2 cycles, then stop.
- If the wiper is moving intermittently and switch (5) is kept pressed continuously, window washer fluid will spray, and at the same time, the wiper will be actuated continuously. When switch (5) is released, the wiper will continue to operate for 2 cycles, then return to intermittent operation.

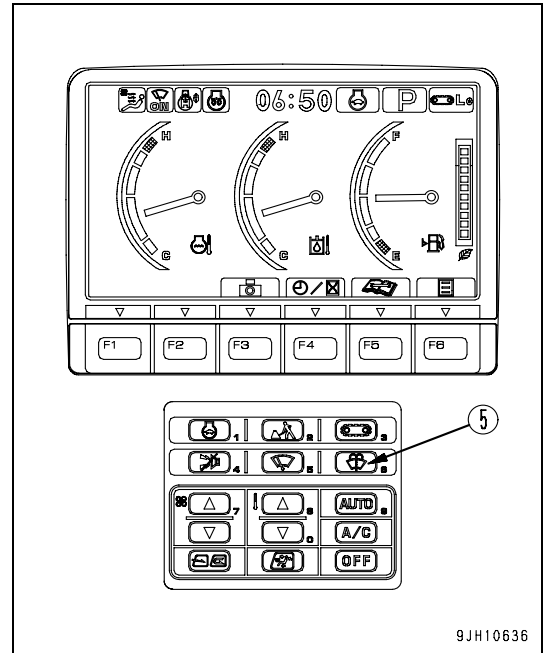

Buzzer Cancel Switch

When this switch (6) is pressed, the warning buzzer for the abnormal warning item stops.

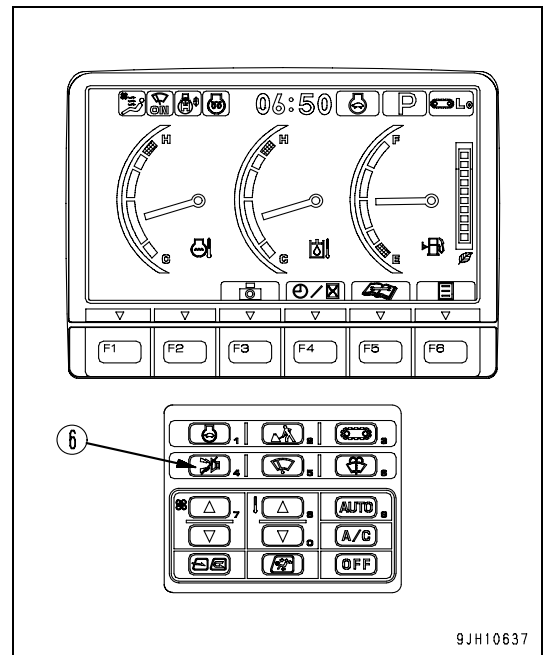


Function Switches

Function switches (7) consist of 6 switches (F1 to F6). The function of each switch differs according to the content of each screen.

When the monitor display shows the standard screen, the functions are displayed as follows.

- F3: Camera screen selector switch (if equipped)
- F4: Service meter/time display selector switch
- F5: Maintenance mode switch
- F6: User mode switch
- F1 and F2 are auxiliary switches for expanded functions.

For explanation of each switch, see "Handling Function Switches (3-33)".

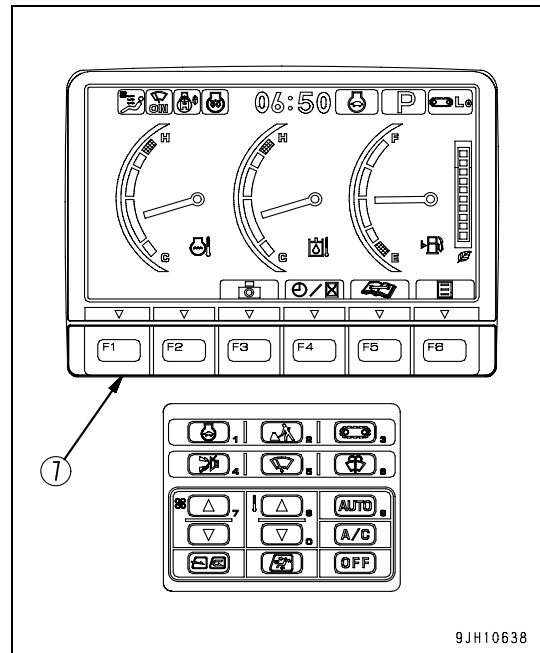


9JH10638

Air Conditioner Switch

The air conditioner switches (8) consist of 9 switches.


For explanation of each switch, see "AIR CONDITIONER CONTROLS (3-88)".

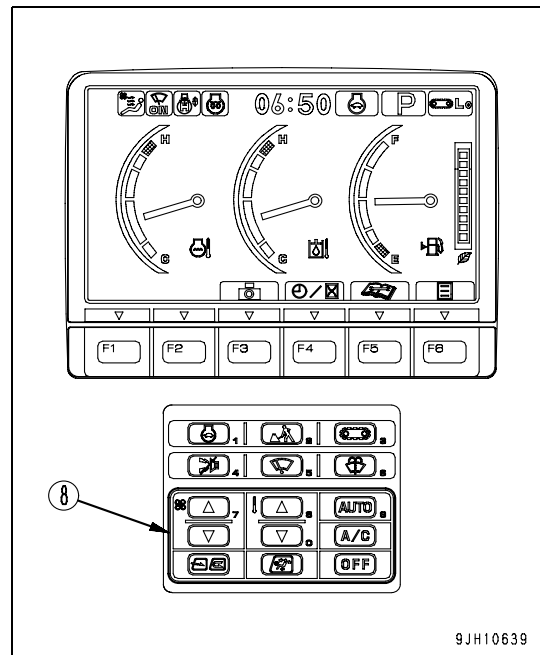

9JH10639

Handling Function Switches

- The function switches (A) at the bottom of the monitor display consist of 6 switches (F1 - F6). The function of each switch differs according to the content of each screen.
- The function of switches (A) on each screen can be confirmed by guidance icons (B) displayed on top of each switch.
- If there is no display in guidance icon (B), even if switch (A) is pressed, it will not function.
- Even if guidance icon (B) is pressed, it will not function. Press switch (A) immediately below the guidance icon display to operate the function.

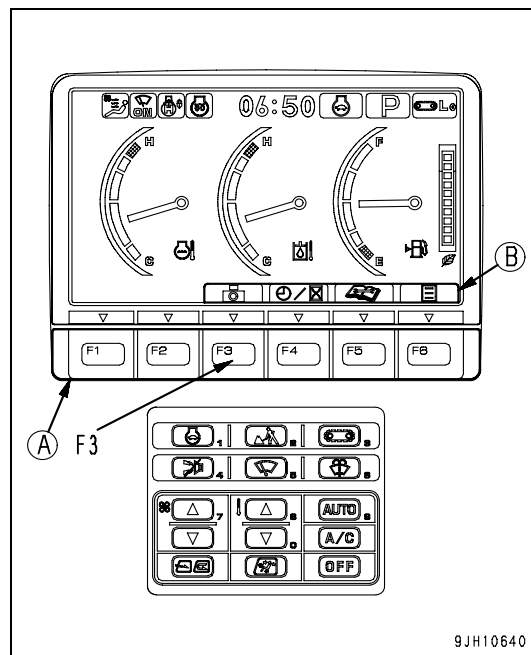


9JH10640

The operation of the function switches if the initial screen is the standard screen is as follows.

Camera Screen Selector Mode Switch

On machines with a camera, press switch F3 to switch to the camera screen display.

- On machines not equipped with a camera, the guidance icon on top of switch F3 is not displayed.
Even if switch F3 is pressed, the screen will not switch to the camera screen display.
- A maximum of three cameras can be installed.
- If you want to install a camera, please consult your Komatsu distributor.

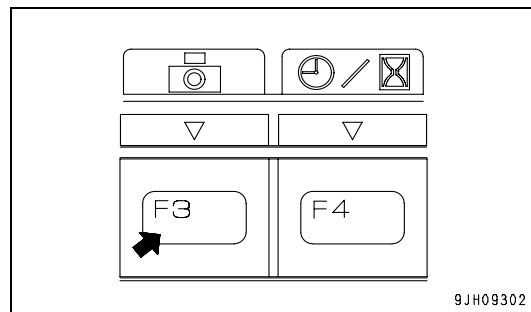


9JH09302


Operations on Camera 1 Image Display Screen

The following explanation describes the method of operation when it is desired to display only one camera screen on the monitor.

- On the standard screen, if switch F3 is pressed, the image display screen is displayed.

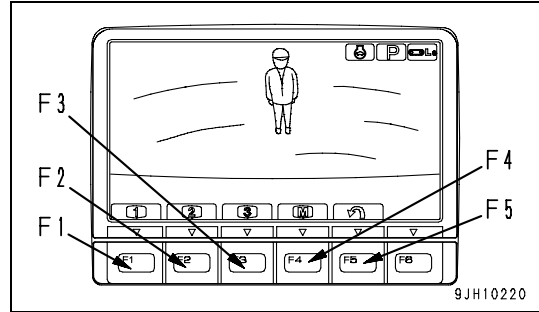


- Press switch F1 to display all the screens for images from the No. 1 camera.
- Press switch F2 to display all the screens for images from the No. 2 camera.

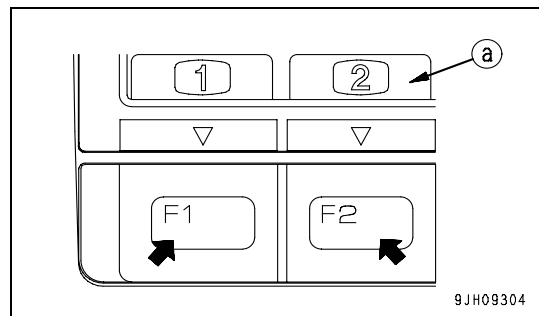


- Press switch F3 to display all the screens for images from the No. 3 camera.

REMARK

If the machine is not equipped with a No. 2 camera or No. 3 camera, guidance icons (a), (b) and (c) are not displayed.

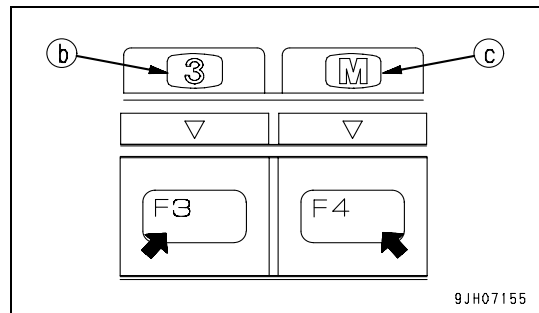



- Press switch F5 to return to the standard screen.

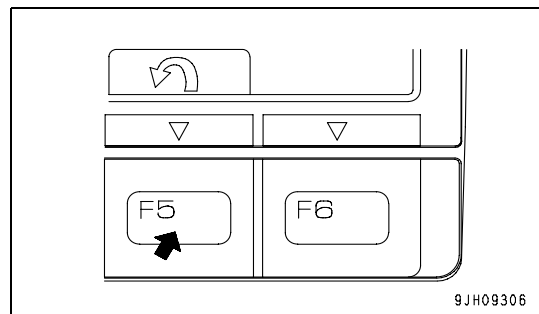

Operation of Image Display Screen When Two Camera Screens are Shown Simultaneously.

The following explanation describes the method of operation when it is desired to display two camera screens at the same time on the monitor.

- On the No. 1 camera image display screen, if switch F4 is pressed, No. 1 camera image (d) and No. 2 camera image (e) are displayed.
- Even if three cameras are installed, only the images from the No. 1 camera and No. 2 camera can be displayed at the same time.
- When two screens are displayed at the same time, the display changes more slowly than when only one screen is displayed.
- Press switch F5 to return to the standard screen.

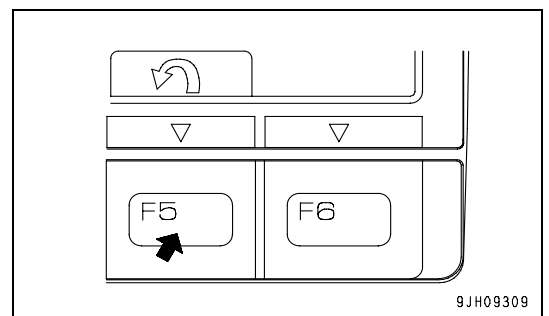
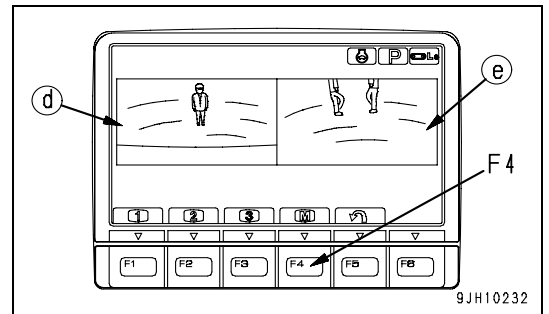


Other Mode Operations When Displaying Camera Image

- Even during the camera display, it is possible to operate other modes.
- The air conditioner can be operated.


If the air conditioner switch is operated, the screen switches to the air conditioner control screen. If the screen switches to the air conditioner control screen, press switch F6 to return to the camera image screen. In addition, if no operation is carried out for 5 seconds after the screen switches to the air conditioner control screen, the screen automatically returns to the camera image screen.

For details of the operation of the air conditioner, see “AIR CONDITIONER CONTROLS (3-88)”.

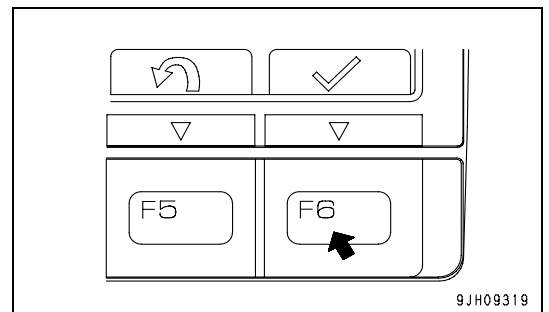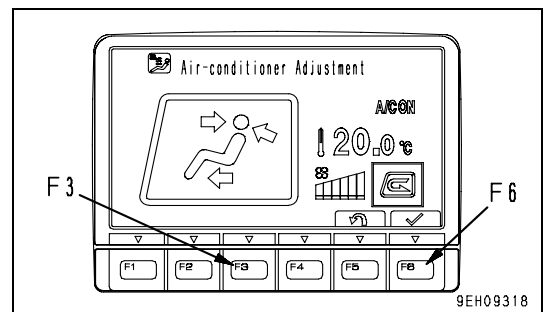


- It is possible to change the working mode by pressing the working mode selector switch.

For details of the working mode selector switch, see “Working Mode Selector Switch (3-25)”.

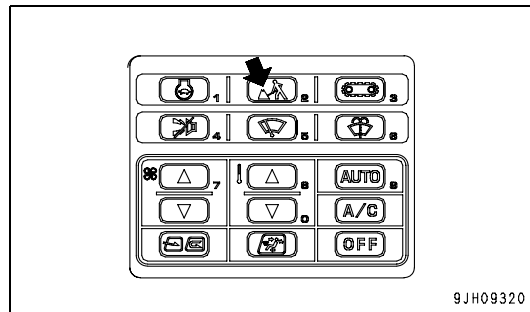


If the working mode is changed, the screen returns to the standard screen.

Press switch F3 again to return to the camera image display.

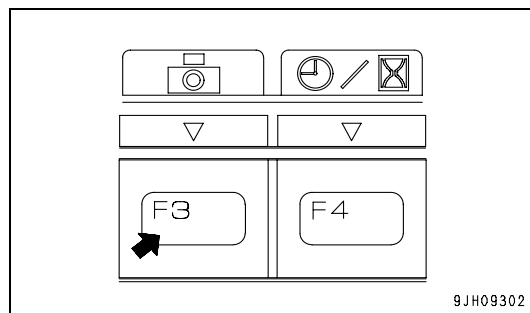


- Press the travel speed selector switch to change the travel speed mode.

For details of the travel speed selector switch, see “Travel Speed Selector Switch (3-29)”.

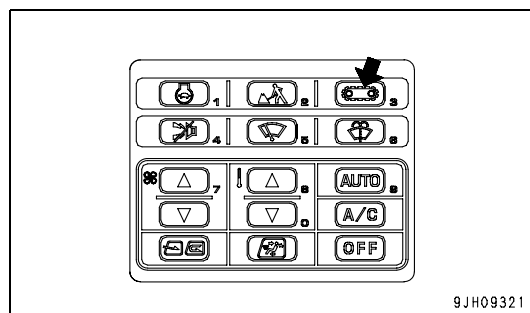


When the travel speed mode is changed, the screen returns to the standard screen. To display the camera image, press switch F3 again.

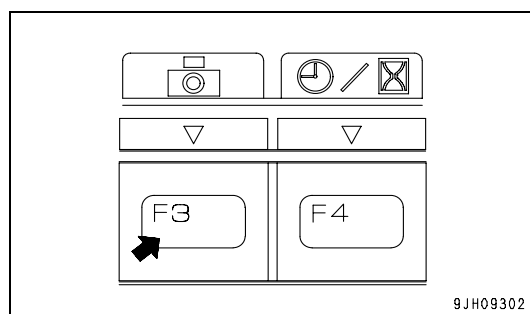


- Press the auto-deceleration switch to turn the auto-deceleration function ON/OFF.

Even if the auto-deceleration switch is pressed, the camera image display screen does not switch to another screen.

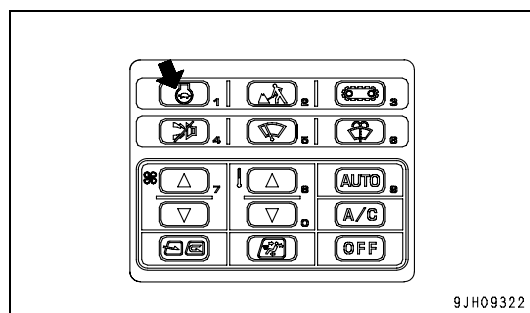


- It is possible to press the buzzer cancel switch to stop the alarm buzzer for the warning item where there is an abnormality.

Even if the buzzer cancel switch is pressed, the camera image display screen does not switch to another screen.

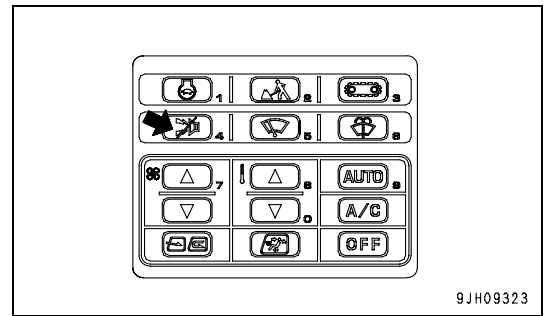



- Press the wiper switch and washer switch to operate the wipers and washer.

Even if the wiper switch or washer switch is pressed, the camera image display screen does not switch to another screen.

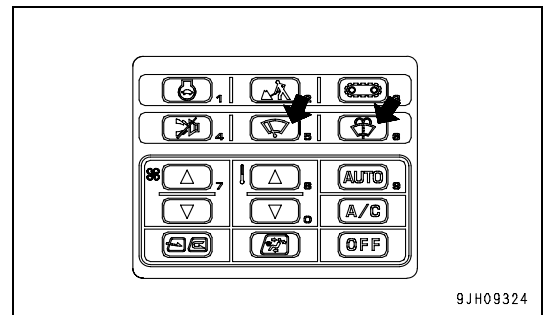

Action When Warning is Generated When Displaying Camera Image


- If an error or alarm occurs while the camera image is being displayed, the error monitor or alarm monitor is displayed at the top left of the screen and flashes.

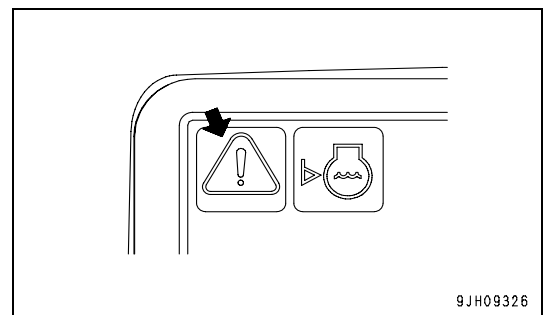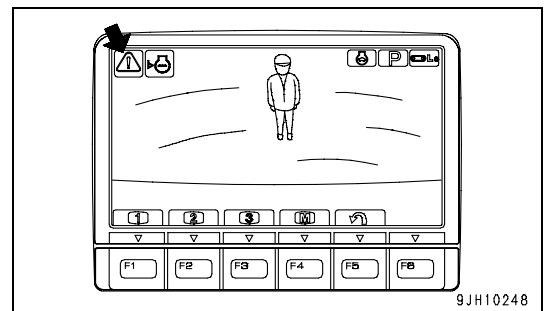

- If the error monitor or alarm monitor is displayed, press switch F6, return to the standard display, and check the content of the error or alarm display.


When the error monitor is flashing, if no lever is operated for more than 10 seconds, the screen automatically returns to the standard screen.

When the screen returns to the standard screen, the error monitor at the top left of the screen goes out and the error or alarm is displayed in the center of the screen.

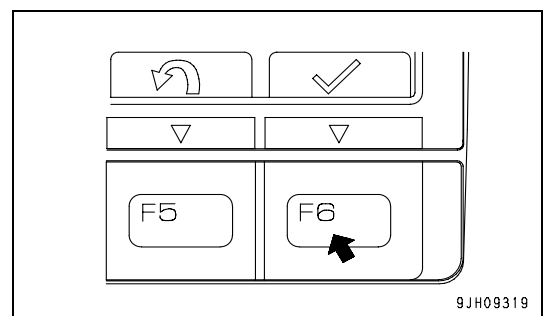



- If an error monitor is displayed, move the machine, set it in a safe posture, then have inspection carried out immediately.

For details of the content of the warning displays, see “Basic Check Monitors (3-16)”, “Caution Monitors (3-13)”, “Emergency Monitors (3-11)” and “TROUBLES AND ACTIONS (3-189)”.

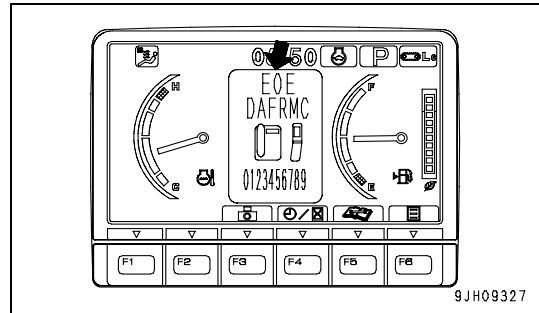


Service Meter/Clock Display Selector Switch

On the standard screen, it is possible to press switch F4 to switch the service meter and clock display at the top of the monitor display.

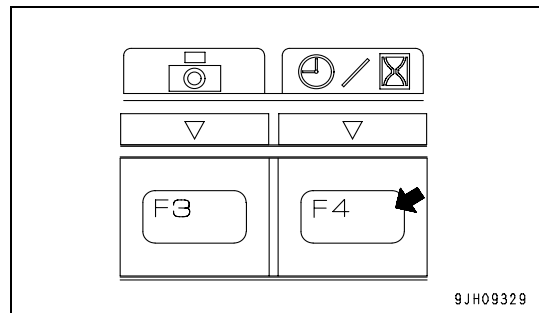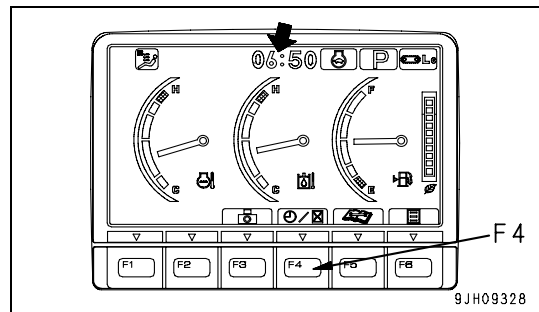



- When the time is being displayed, press switch F4 to switch to the service meter display.

When the service meter is being displayed, press switch F4 to switch to the time display.

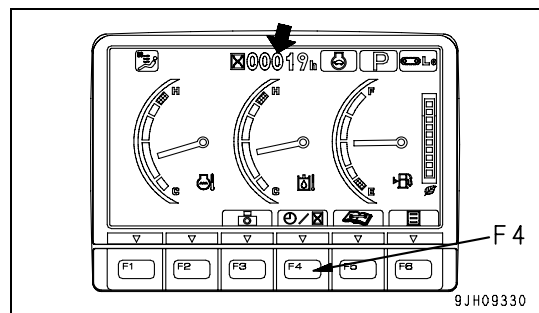


Maintenance Selector Switch

When switch F5 is pressed on the standard screen, the monitor display screen switches to the maintenance mode screen.

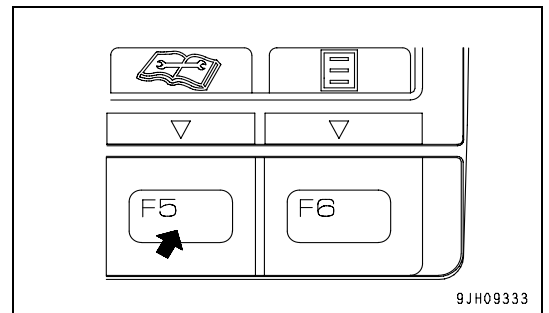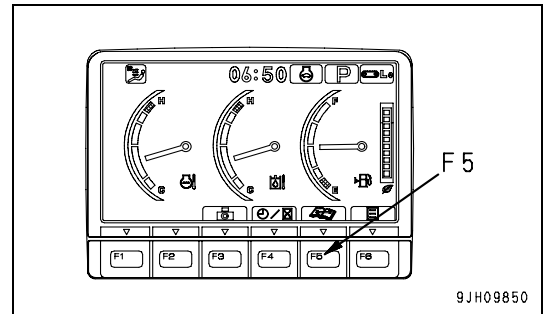

The items on the maintenance display are as follows.

a	b
Engine oil change	500
Engine oil filter change	500
Fuel main filter change	1000
Fuel pre-filter change	500
Hydraulic oil filter change	1000
Hydraulic tank breather change	500
Corrosion resistor change (Machines equipped with corrosion resistor)	1000
Damper case service	1000
Final drive oil change	2000
Swing machinery oil change	1000
Hydraulic oil change	5000

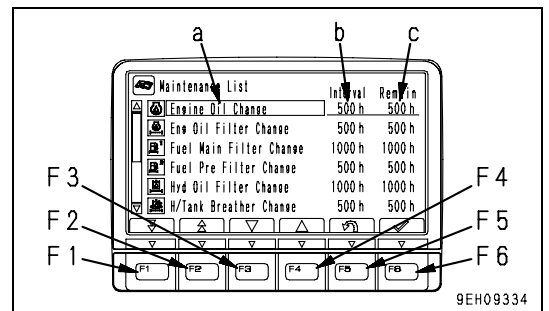

a: Maintenance items

b: Default maintenance interval settings (h)

c: Time remaining until maintenance (h)

Operations on Maintenance List Screen

On the maintenance list screen, it is possible to carry out the following operations with switches F1 to F6.

F1: Displays next page. When on the last page, it displays the first page.





F2: Displays previous page. When on the first page, it displays the last page.

F3: Moves to next item (1 line down). When on the last line, it moves to the first line on the next page.

F4: Moves to previous item (1 line up). When on the first line, it moves to the last line on the previous page.

F5: Returns to standard screen.

F6: If this switch is kept pressed, the screen changes to the screen for resetting the remaining time for the selected item (item highlighted in yellow).

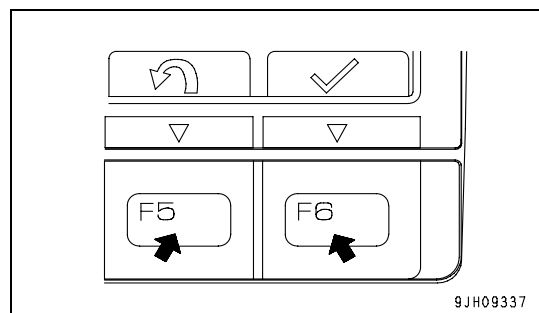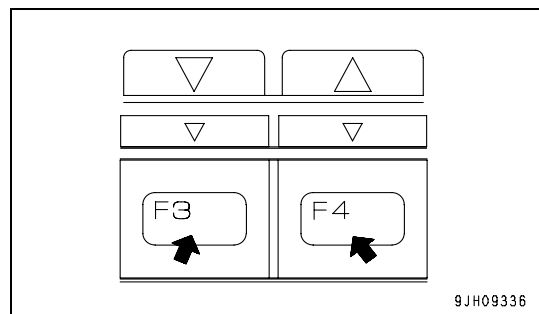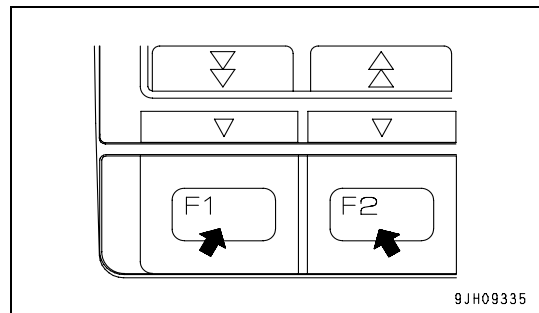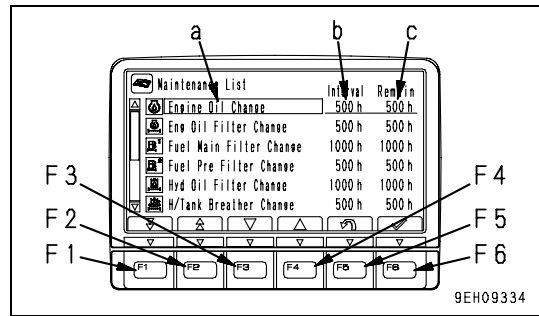

REMARK

When resetting the remaining time, keep switch F6 pressed for at least 1.5 seconds. If switch F6 is not kept pressed for at least 1.5 seconds, the switch operating sound can be heard, but the screen does not switch to the screen for resetting the remaining time.

- If no switch is operated for 30 seconds on the maintenance list screen, the screen automatically returns to the standard screen.
- On the maintenance list screen, if the time remaining until maintenance for any item is less than 30 hours, the remaining time display is highlighted in yellow. If the time remaining until maintenance becomes 0 hours, the remaining time display is highlighted in red.
- If you want to change the setting for the maintenance interval, please consult your Komatsu distributor.

Operations on Maintenance Interval Reset Screen

On the maintenance list screen, if switch F6 is kept pressed for at least 1.5 seconds, the screen changes to the maintenance time reset screen.


Reset the remaining time on this screen.

1. Press switch F6 when the reset screen is in the condition shown in the diagram on the right. The screen switches to the reconfirmation screen.

REMARK

It is desired to cancel the reset, press switch F5. The screen returns to the maintenance list screen.

On the reset screen, if no switch is operated for more than 30 seconds, the screen automatically switches to the maintenance list screen.

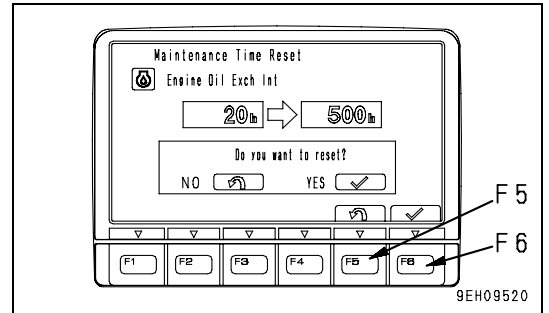


2. The reconfirmation screen shown on the right is displayed.
3. If switch F6 is pressed again, the remaining time is reset and the screen switches to the maintenance list screen.

REMARK

It is desired to cancel the reset, press switch F5. The screen returns to the maintenance list screen.




On the reconfirmation screen, if no switch is operated for more than 30 seconds, the screen automatically switches to the maintenance list screen.

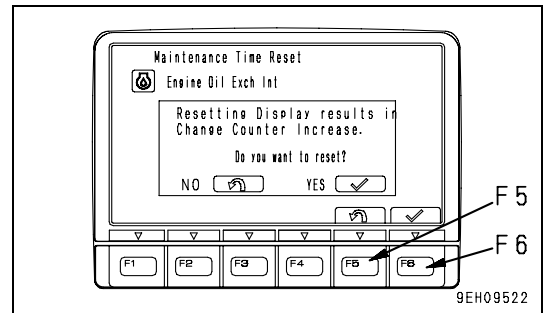

User Mode Selector Switch


When the switch F6 is pressed, the monitor display screen switches to the setting mode screen for the machine.

- On the User Menu screen, it is possible to carry out the following operations with switches F3 to F6.

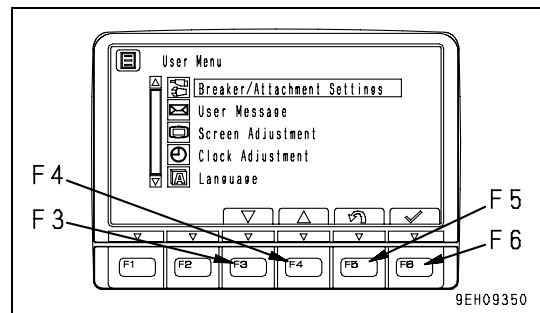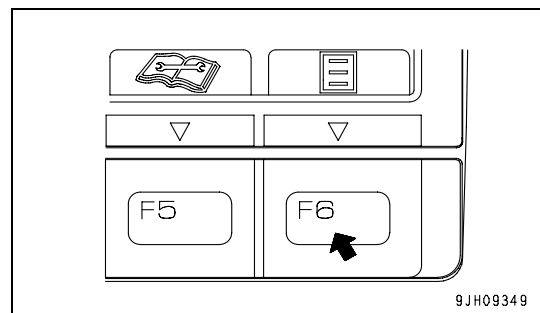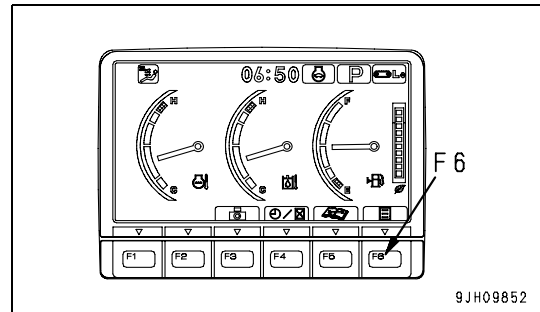

F3: Moves to next item (1 line down). When on the last line, it moves to the first line on the next page.


F4: Moves to previous item (1 line up). When on the first line, it moves to the last line on the previous page.

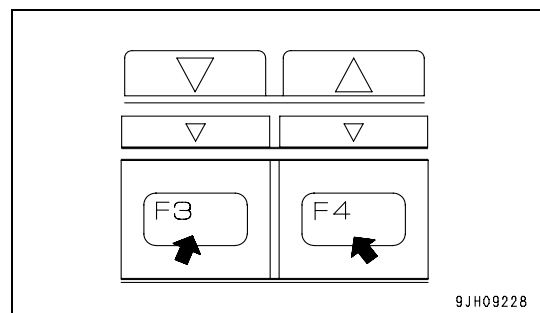

F5: Returns to standard screen.


F6: Switches to setting screen for selected item.

- If no switch is operated for 30 seconds on the user menu screen, the screen automatically returns to the previous screen.

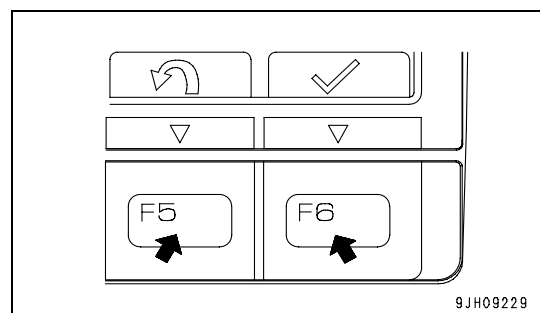

- The following items can be set.

- a: Breaker/attachment setting
(machines ready for installation of attachment)
- b: Message display
(machines equipped with KOMTRAX)
- c: Screen adjustment
- d: Clock adjustment
- e: Language selection
- f: Economy mode adjustment

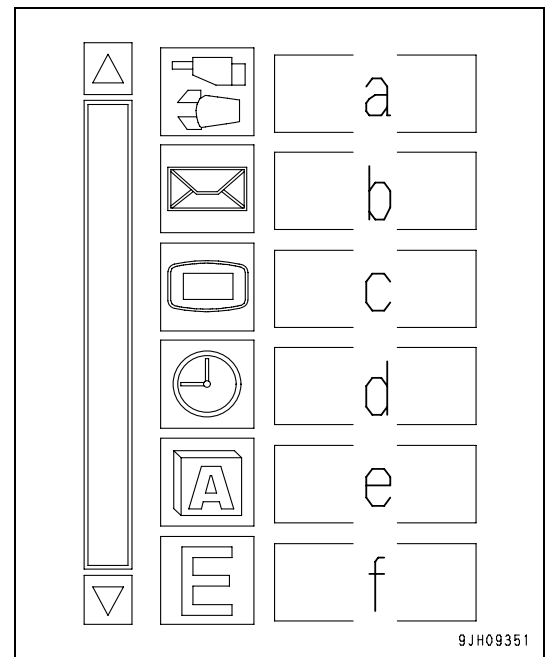


The operation for setting a to f is as follows.

Breaker/Attachment 1 Setting


- On machines ready for attachment, it is possible on the breaker/attachment setting menu to adjust the oil flow in B mode and ATT mode to match the attachment.

For machines that have no attachment, the breaker/attachment setting mode is not displayed.

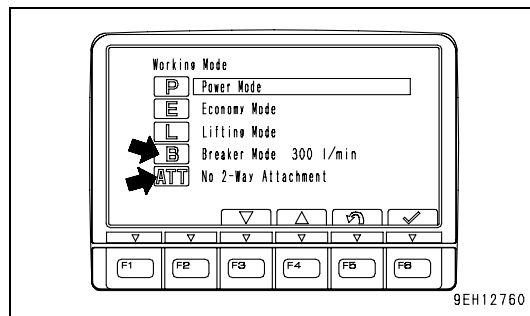


Changing Breaker Mode Setting

1. On the standard screen, press switch F6.


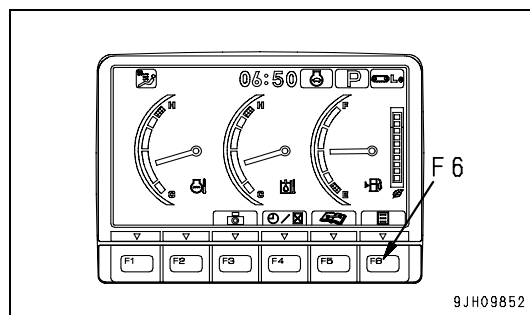


2. Select Breaker/Attachment Settings on the user menu, then press switch F6.

Screen for machine with 1 Attachment Line

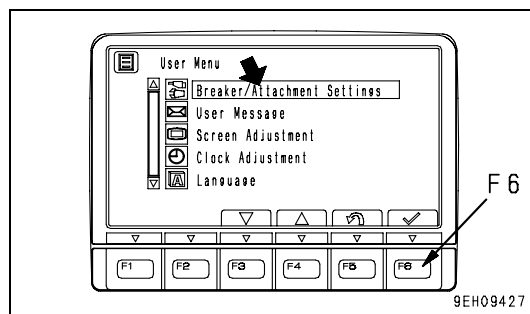

Screen for machine with 2 Attachment Lines

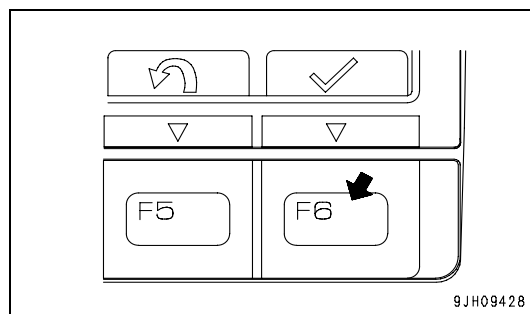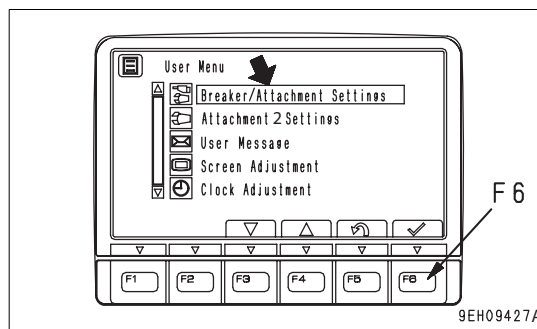

3. On the working mode selection screen shown on the right, select B Breaker and press switch F6.




- On the working mode selection screen shown on the right, it is possible to carry out the following operations with switches F3 to F6.

F3: Moves to next item (1 line down).

F4: Moves to previous item (1 line up).


F5: Returns to user menu screen.

F6: Switches to setting screen for selected item.

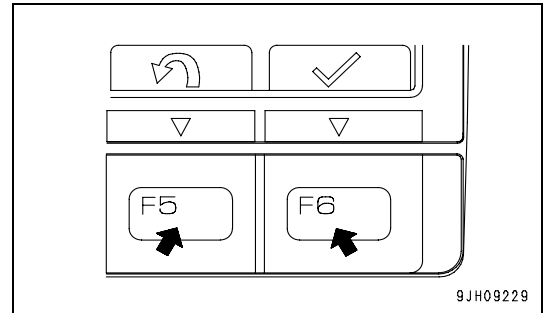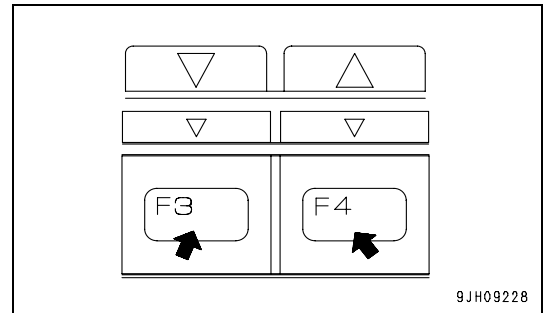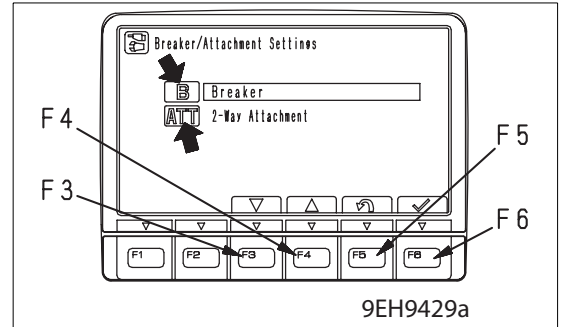


4. The screen switches to the Breaker Select Menu.

- Breaker setting selection menu
In breaker Select (a), the oil flow to be set in B mode can be set to one of two set values.
- Breaker flow setting menu
In the breaker flow setting (b), the oil flow to be set in B mode can be changed.

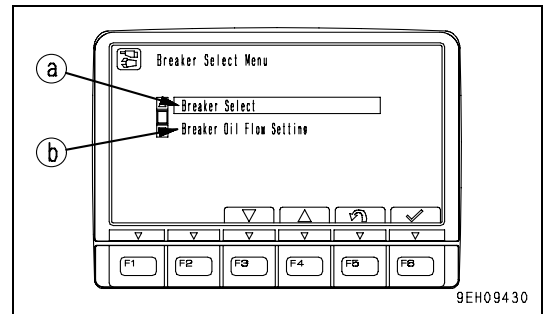


On the Breaker Select Menu screen, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to previous screen.
- F6: Switches to setting screen for selected item.

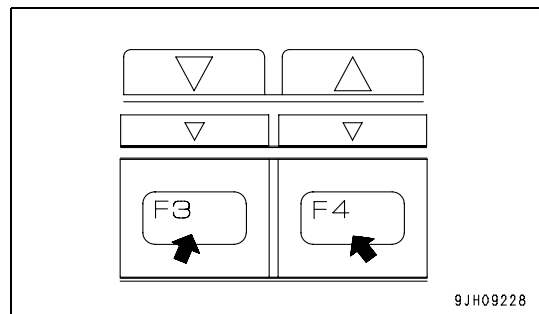


9JH09228

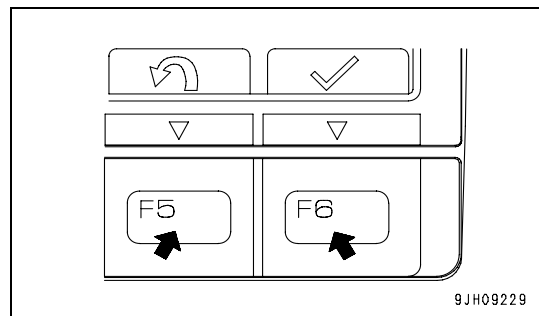


9JH09229

Changing breaker setting selection

1. Select breaker setting selection (a) on the breaker setting menu screen, then press switch F6.

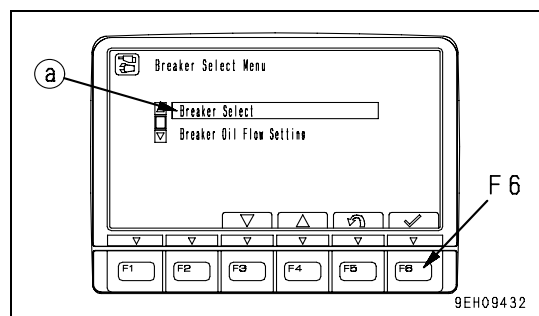


9EH09432

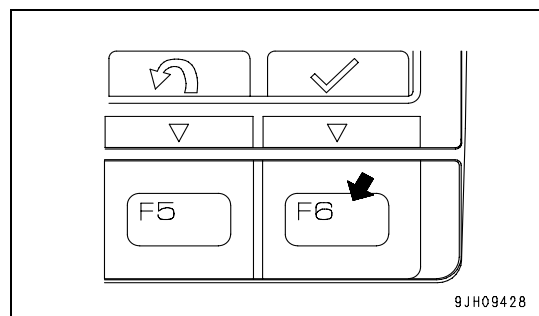

9JH09428

2. On the Breaker Select screen, select one of the two set values for the oil flow, then press switch F6.



- The default values for the flow setting are both set to 300 liter/min, as shown in the illustration on the right. To select the oil flow setting, follow the procedure given in "Changing breaker flow setting (3-47)".
- The present oil flow set for B mode is marked with a B in front of the item name as shown in the illustration on the right.

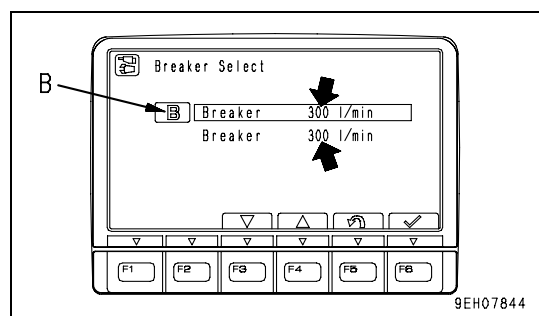

9EH07844



- On the Breaker Select Menu and breaker setting selection menu, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to previous screen.
- F6: Switches to setting screen for selected item.

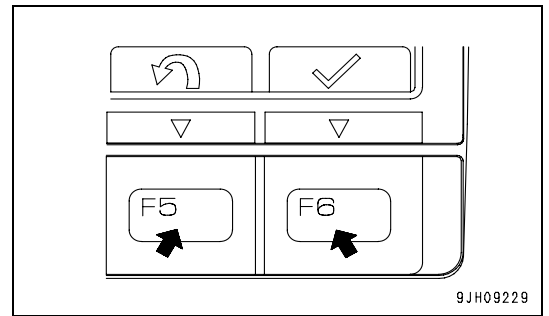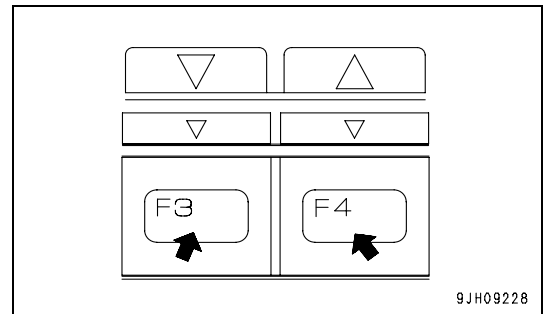


Changing breaker flow setting

- Select breaker flow setting (b) on the Breaker Select Menu screen, then press switch F6.

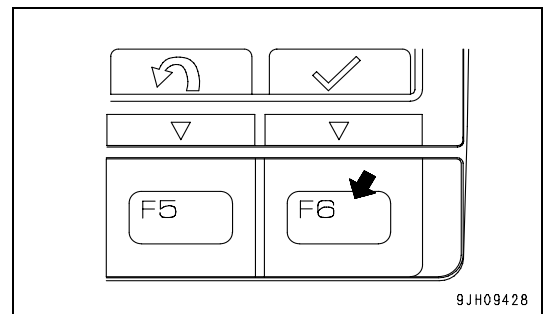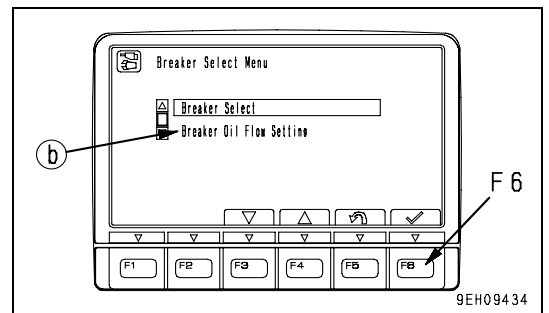



- On the Breaker Oil Flow Setting screen, select one of the two set values for the oil flow, then press switch F6.

- The default values for the oil flow setting are both set to 300 liter/min, as shown in the illustration on the right. The present oil flow set for B mode is marked with B in front of the item name as shown in the illustration on the right.

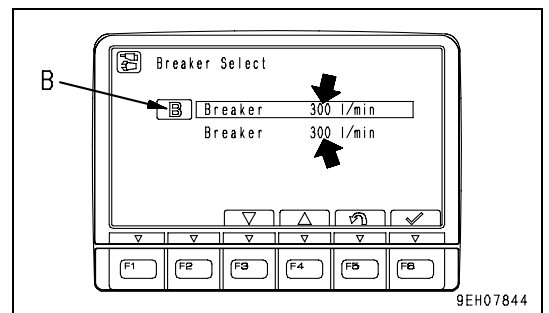


- On the Breaker Select Menu and Breaker Oil Flow Setting screen, it is possible to carry out the following operations with switches F3 - F6.



- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to previous screen.
- F6: Switches to setting screen for selected item.

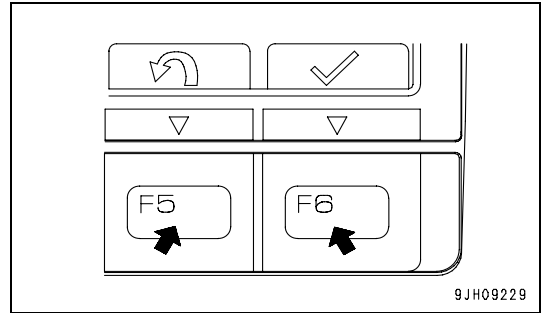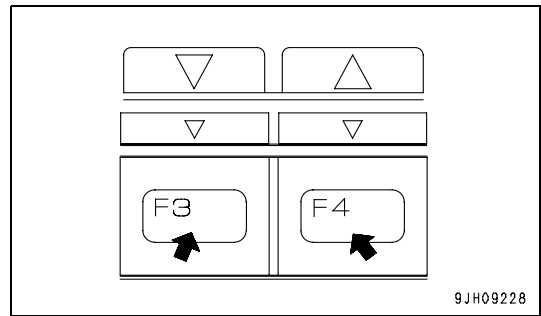

3. On the Breaker Oil Flow Setting screen, change the set oil flow.
 - After using switches F3 or F4 to change to a suitable oil flow, press switch F6 to accept the change in the oil flow and return to the previous screen.
 - When switch F5 is pressed, no change is made in the oil flow and the screen returns to the previous screen.

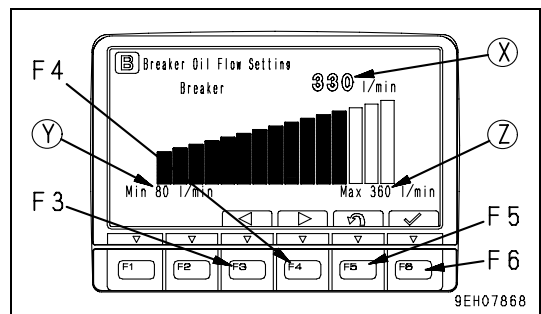


- (X): Present oil flow setting
- (Y): Min. adjusted oil flow
- (Z): Max. adjusted oil flow

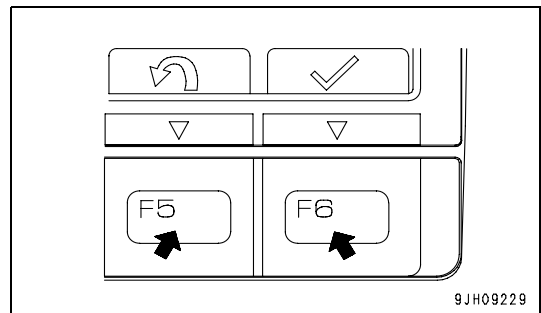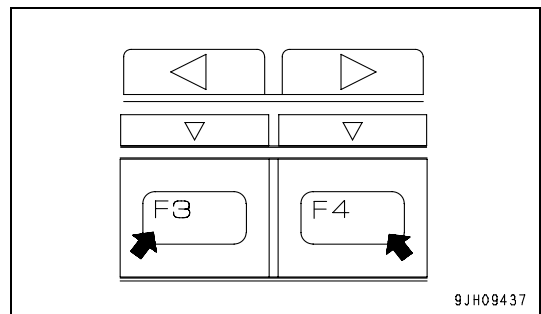


Changing Attachment Mode Setting

- 1. On the standard screen, press switch F6.


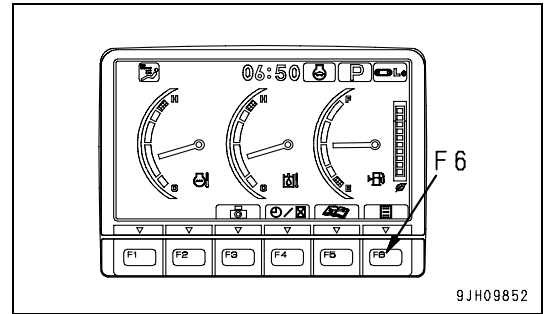


- 2. Select Breaker/Attachment Settings on the user menu, then press switch F6.

Screen for machine with 1 Attachment Line

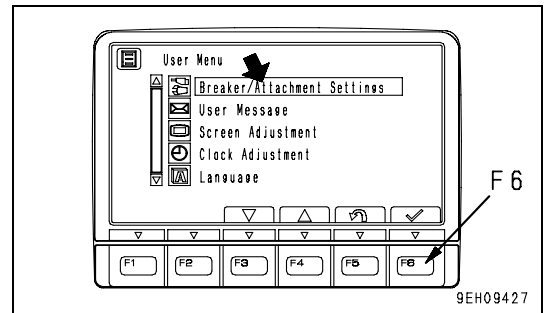

Screen for machine with 2 Attachment Lines

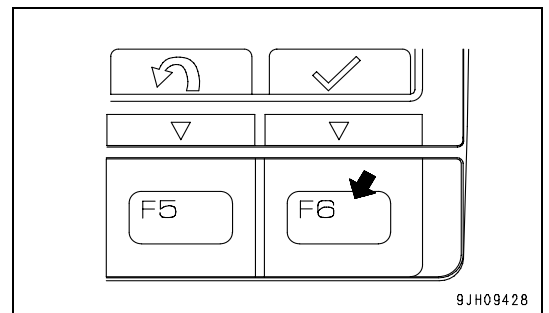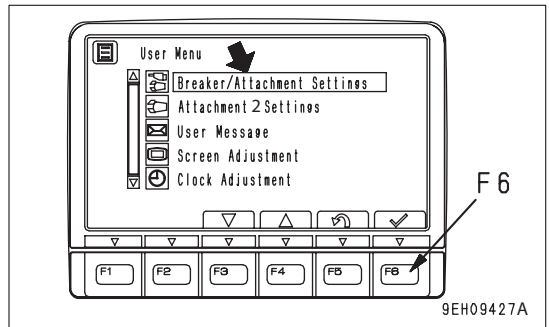

3. On the working mode selection screen shown on the right, select ATT 2-Way Attachment, then press switch F6.




- On the working mode selection screen shown on the right, it is possible to carry out the following operations with switches F3 to F6.

F3: Moves to next item (1 line down).

F4: Moves to previous item (1 line up).


F5: Returns to user menu screen.

F6: Switches to setting screen for selected item.

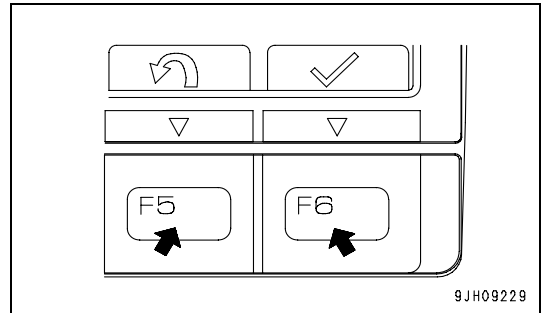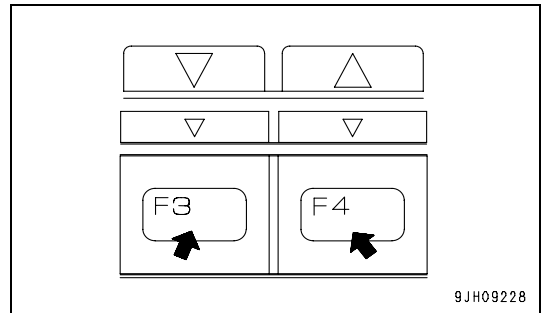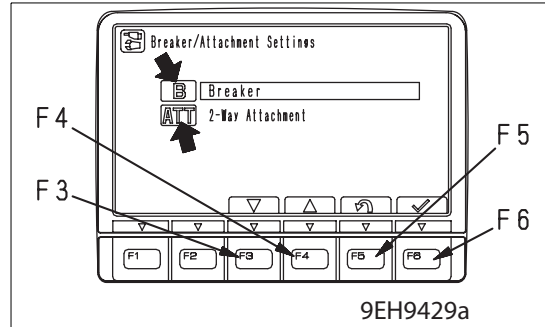



4. The screen switches to the 2-Way Attachment Select menu.

- 2-Way Attachment Select
In 2-Way Attachment Select (a), the oil flow to be set in ATT mode can be set to one of two set values.
- 2-Way Attachment Oil Flow Setting menu
In 2-Way Attachment Oil Flow Setting (b), it is possible to change the oil flow set for the ATT mode.
- In case of machine with 2 attachment lines, this symbol (c) is displayed to show attachment 1 setting mode.

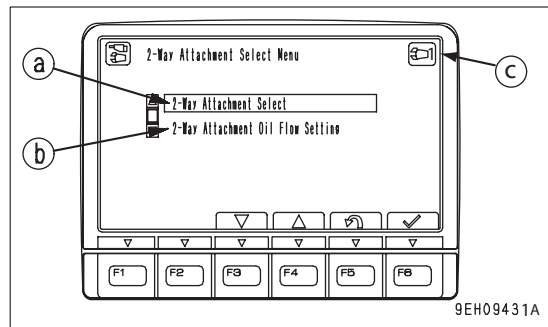



On the 2-Way Attachment Select Menu screen, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to previous screen.
- F6: Switches to setting screen for selected item.

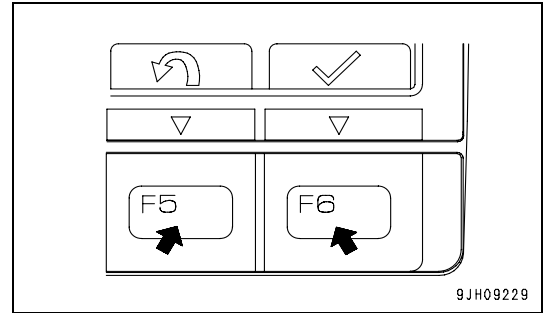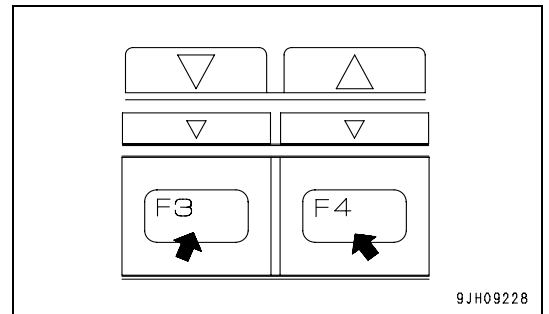


Changing attachment setting selection

1. Select attachment setting selection (a) on the attachment setting menu screen, then press switch F6.

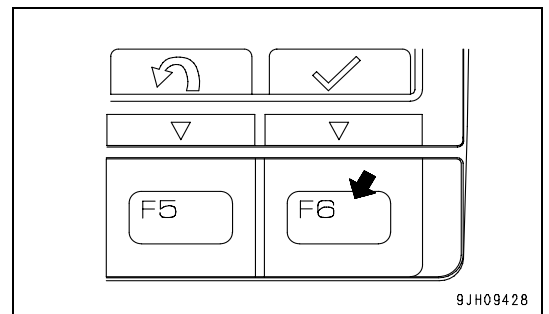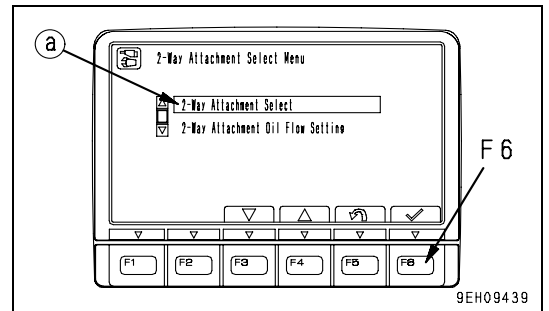


2. On the 2-Way Attachment Select Menu, select one of the two set values for the oil flow, then press switch F6.


- The default values for the oil flow setting are both set to 550 liters/min, as shown in the illustration on the right.
To change the oil flow setting, follow the procedure given in "Changing attachment flow setting (3-53)".
- The present oil flow set for ATT mode is marked with ATT in front of the item name as shown in the illustration on the right.

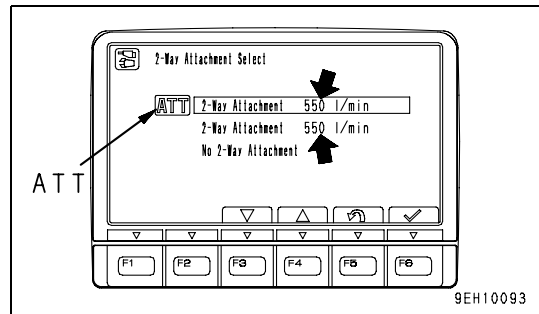

- If No 2-Way Attachment is selected, it becomes impossible to select the attachment mode on the working mode selection screen.


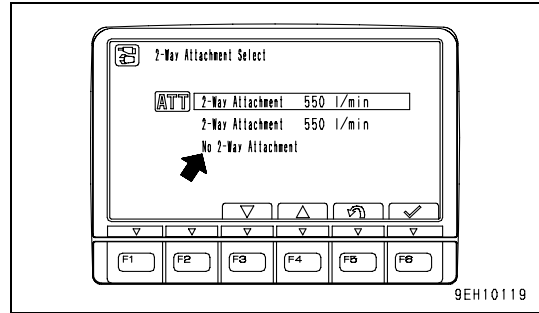


On the working mode selection screen, it is not possible to select No 2-Way Attachment.

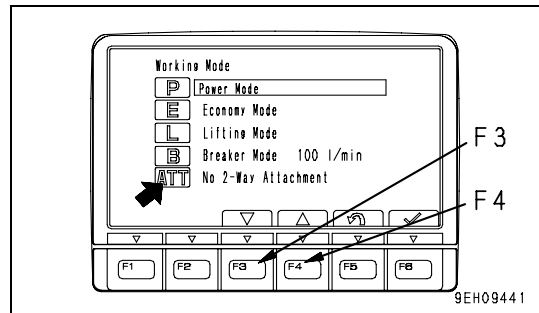



- On the 2-Way Attachment Select Menu screen and 2-way attachment select menu, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to previous screen.
- F6: Switches to setting screen for selected item.

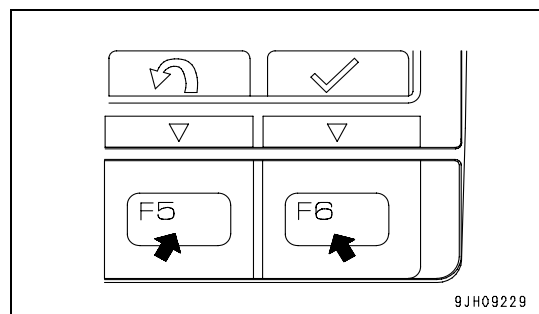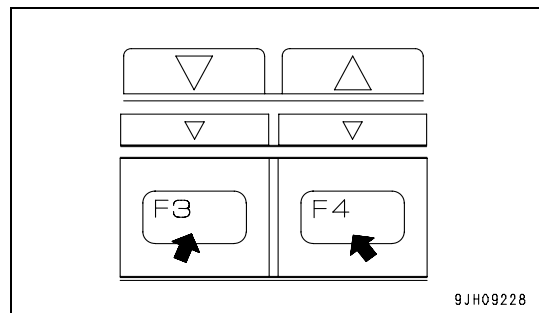


Changing attachment flow setting

1. Select 2-Way Attachment Oil Flow Setting (b) on the 2-Way Attachment Select menu screen, then press switch F6.

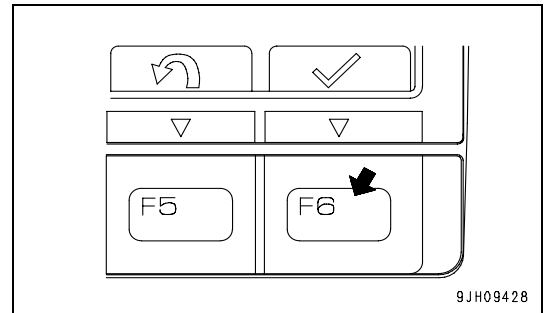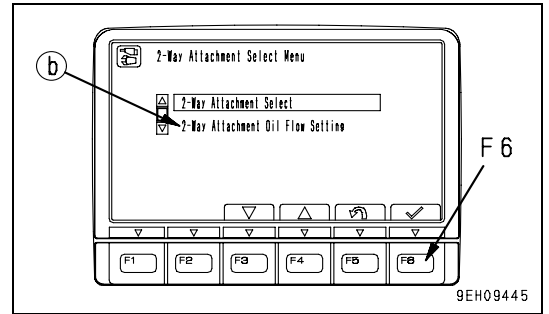



2. On the 2-Way Attachment Select Oil Flow Setting screen, select one of the two set values for the oil flow, then press switch F6.

- The default values for the oil flow setting are both set to 550 liters/min, as shown in the illustration on the right. The present oil flow set for ATT mode is marked with ATT in front of the item.
- “No 2-Way Attachment” cannot be selected

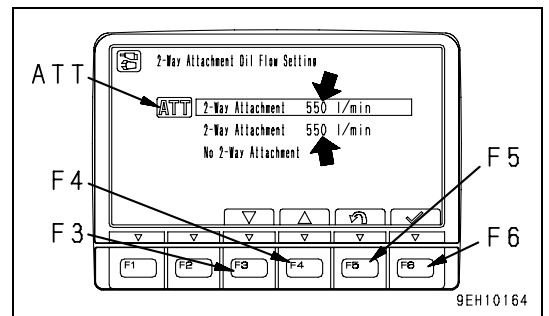




- On the 2-Way Attachment Select Menu screen and 2-Way Attachment Select Menu screen, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to previous screen.
- F6: Switches to setting screen for selected item.

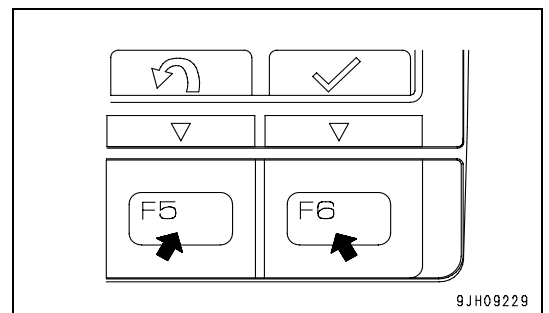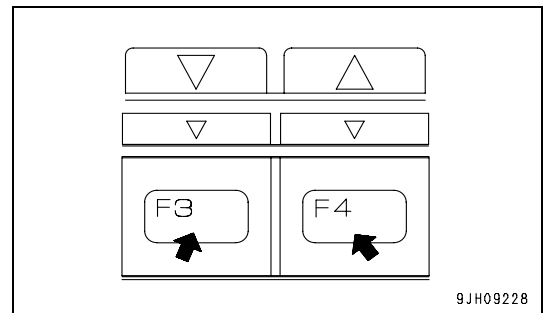

3. On the 2-Way Attachment Oil Flow Setting menu, it is possible to change the oil flow setting.
 - After using switches F3 or F4 to change to a suitable oil flow, press switch F6 to accept the change in the oil flow and return to the previous screen.
 - When switch F5 is pressed, no change is made in the oil flow and the screen returns to the previous screen.

(X): Present oil flow setting
 (Y): Min. adjusted oil flow
 (Z): Max. adjusted oil flow

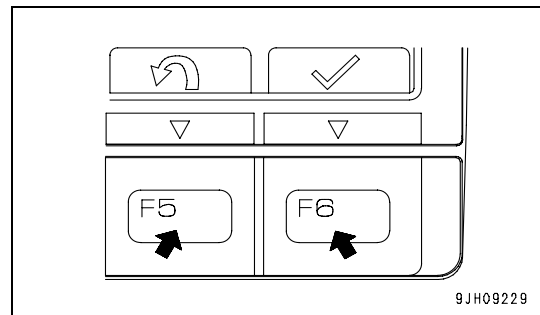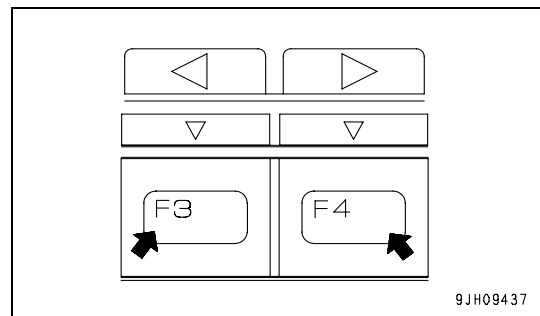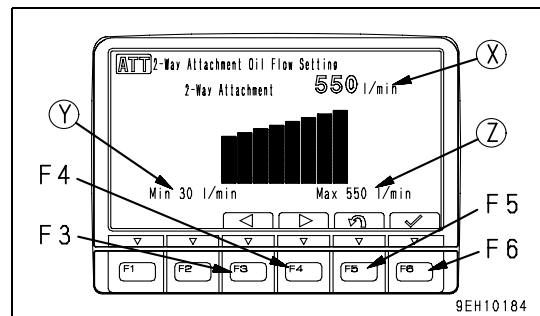


Attachment 2 Setting

Note - If installing 2nd attachment line as a field kit ask distributor to change monitor setting to allow 2 attachments (as shown below).

On machines equipped with 2 attachment lines it is possible on the attachment 2 settings menu to adjust the oil flow in ATT mode to match the attachment installed.



Changing Attachment 2 Mode Setting

1. On the standard screen, press switch F6.
2. Select Attachment 2 settings on the user menu, then press switch F6.
3. The screen switches to the 2-Way Attachment Select menu.
 - 2-Way Attachment Select
In 2-Way Attachment Select (a), the oil flow to be set in ATT mode can be set to one of two set values.
 - 2-Way Attachment Oil Flow Setting menu
In 2-Way Attachment Oil Flow Setting (b), it is possible to change the oil flow setting for the ATT mode.

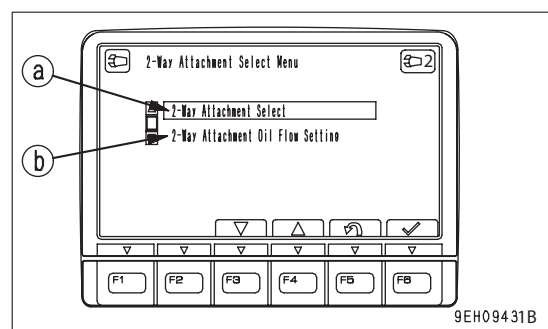



On the 2-Way Attachment Select Menu screen, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to user menu screen.
- F6: Switches to setting screen for selected item.

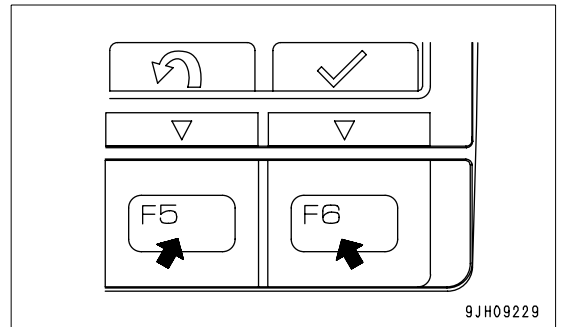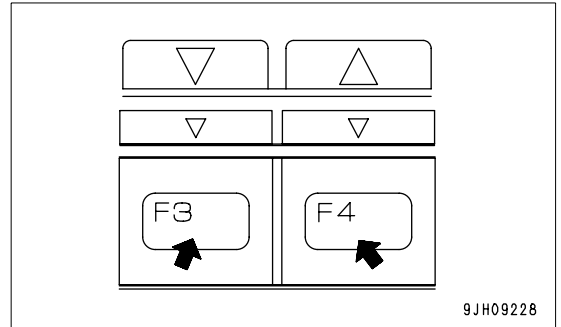


Changing attachment setting 2 selection

1. Select attachment setting selection (a) on the attachment setting menu screen, then press switch F6.

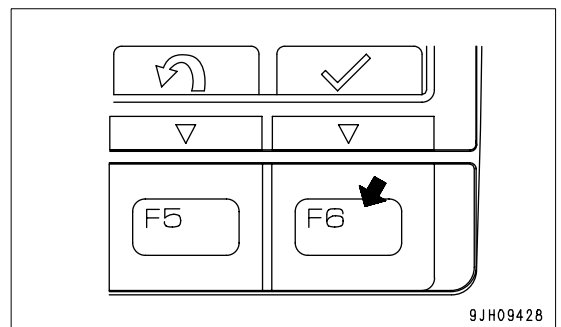
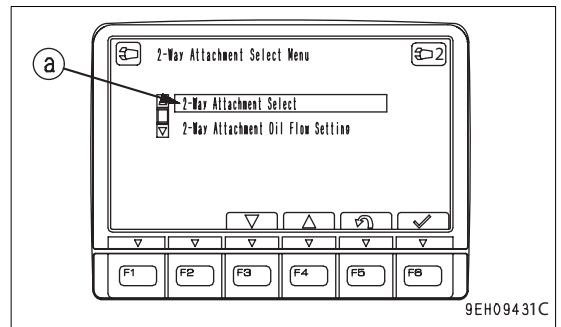


2. On the 2-Way Attachment Select Menu, select one of the two set values for the oil flow, then press switch F6.
 - The default values for the oil flow setting are both set to 40 l/min, as shown in the illustration on the right. To change the oil flow setting, follow the procedure given in "See "Changing attachment 2 flow setting" on page 56."
 - The present oil flow set for ATT mode is marked with ATT in front of the item name as shown in the illustration on the right.

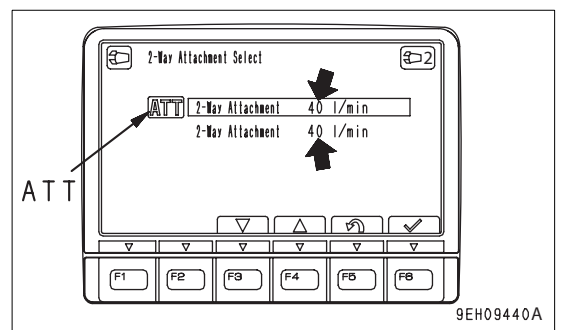

Changing attachment 2 flow setting


1. Select 2-Way Attachment Oil Flow Setting (b) on the 2-Way Attachment Select menu screen, then press switch F6.

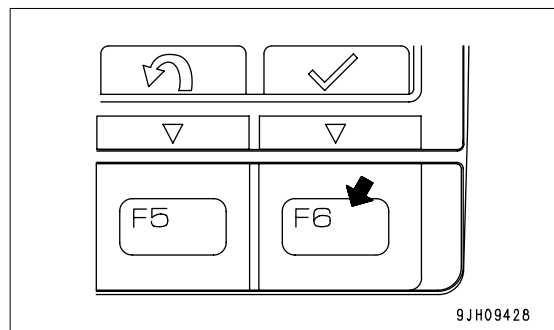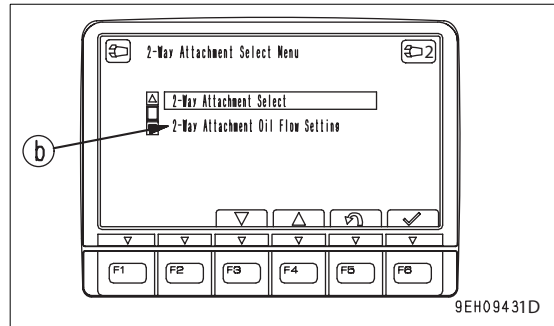

2. On the 2-Way Attachment Select Oil Flow Setting screen, select one of the two set values for the oil flow, then press switch F6.



- The default values for the oil flow setting are both set to 40 l/min, as shown in the illustration on the right.

The present oil flow set for ATT mode is marked with ATT in front of the item.

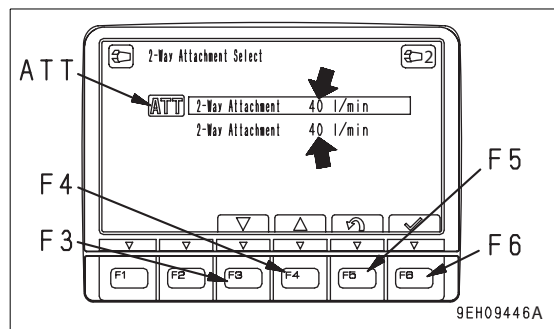

- On the 2-Way Attachment Select Menu screen and 2-Way Attachment Select Menu screen, it is possible to carry out the following operations with switches F3 - F6.

- F3: Moves to next item (1 line down).
- F4: Moves to previous item (1 line up).
- F5: Returns to user menu.
- F6: Switches to setting screen for selected item.


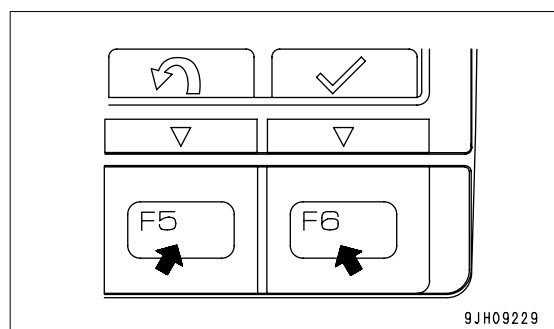
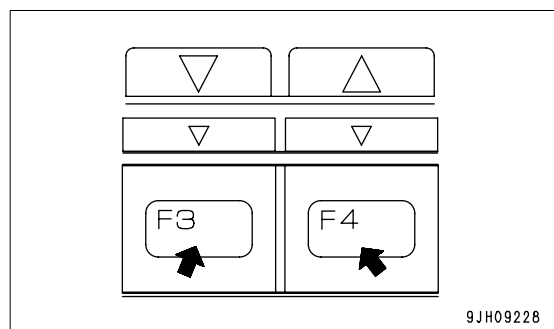


3. On the 2-Way Attachment Oil Flow Setting menu, it is possible to change the oil flow setting.
 - After using switches F3 or F4 to change to a suitable oil flow, press switch F6 to accept the change in the oil flow and return to the previous screen.
 - When switch F5 is pressed, no change is made in the oil flow and the screen returns to the previous screen.

(X): Present oil flow setting

(Y): Min. adjusted oil flow

(Z): Max. adjusted oil flow

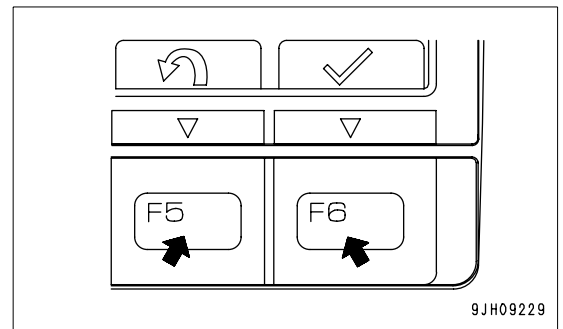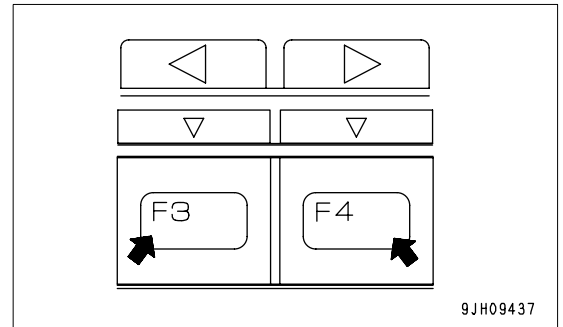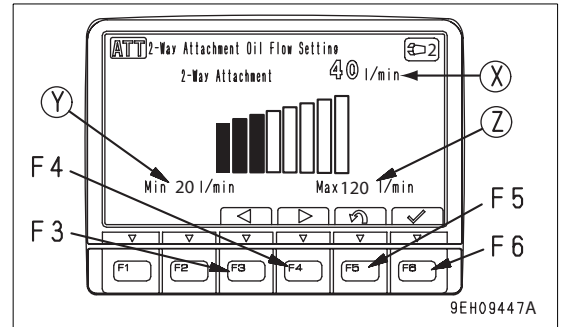

Message Display

(Machines equipped with KOMTRAX)


On machines equipped with KOMTRAX, it is possible to see the messages from your Komatsu distributor on this message display menu.

REMARK

At present, there is no territory where it is possible to use the message service.



In territories where it is not possible to use the message service, the message display menu functions as follows.

1. On the standard screen, press switch F6.

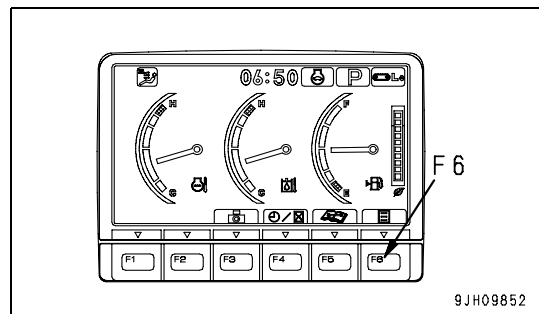


2. Select "User Message" on the User Menu, then press switch F6.

- If you press switch F5, the screen returns to the user menu screen.

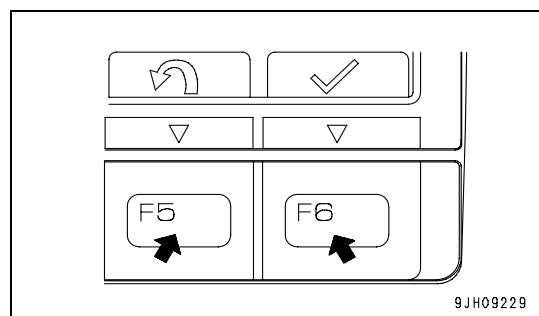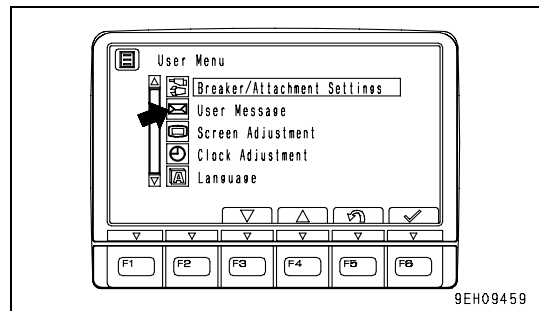


3. "No message" is displayed on the screen.
Press switch F5 to return to the standard screen.

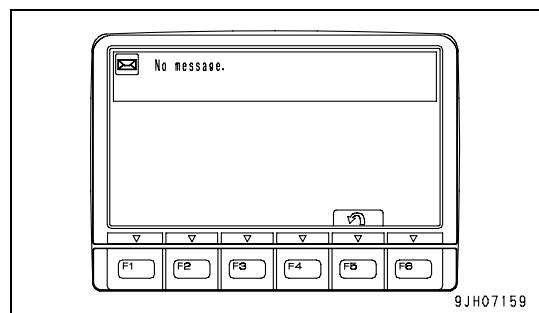


Adjusting Screen

Use this screen adjustment menu to adjust the brightness, contrast, and back light of the screen.

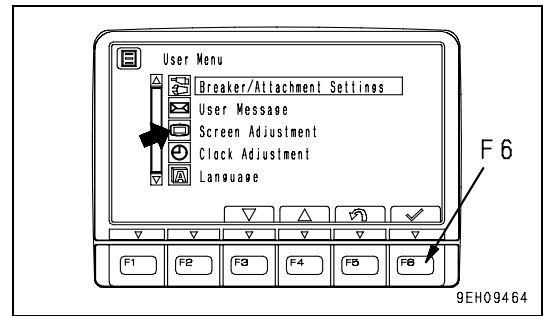


1. On the standard screen, press switch F6.

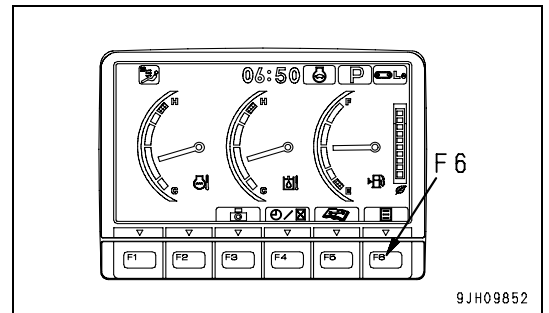

2. Select screen adjustment on the user menu, then press switch F6. The screen switches to the selection menu screen for screen adjustment.

- On machines equipped with cameras, it is possible to adjust the brightness, contrast, and back light of the cameras screen on this menu.

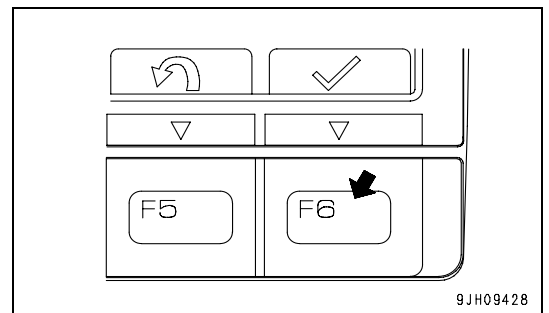

3. Select item to be adjusted (a) or (b) from the selection menu screen for screen adjustment, then press switch F6. The screen switches to the setting screen for the selected item.

(a): Standard screen adjustment

(b): Camera screen adjustment

- On the mode selection screen shown on the right, it is possible to carry out the following operations with switches F3 to F6.

F3: Moves to next item (1 line down).

F4: Moves to previous item (1 line up).

F5: Returns to user menu screen.

F6: Switches to setting screen for selected item.

REMARK

If the machine is not equipped with a camera, the selection menu for screen adjustment is not displayed.

If screen adjustment is selected from the user menu, the adjustment screen in Step 4 is displayed.






4. Use switches F2 to F6 to adjust the brightness, contrast, and back light of the selected screen.

1) Adjustment screen for standard screen

- If the light switch is at night mode ON, and the standard screen is adjusted, it is possible to adjust the brightness of the monitor screen (night mode).
- If the light switch is at day mode ON or OFF, and the standard screen is adjusted, it is possible to adjust the brightness of the monitor screen (day mode).




2) Adjusting camera screen

- The background when adjusting the camera image is the image for the No. 1 camera.
- When displaying the camera screen, the screen may become dark if the image is on snow. In such cases, we recommend adjustment of the screen.

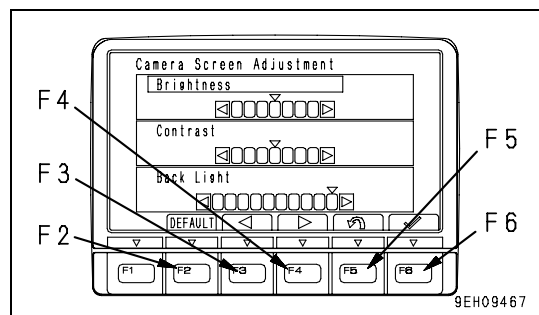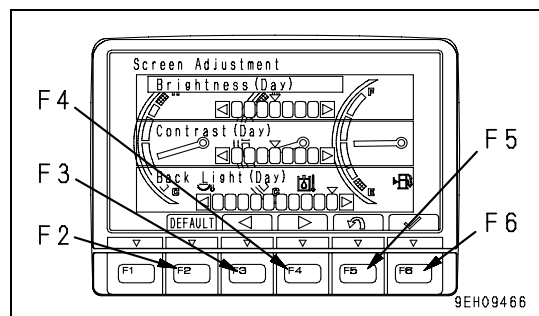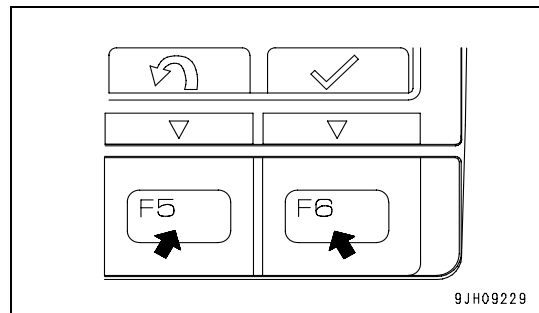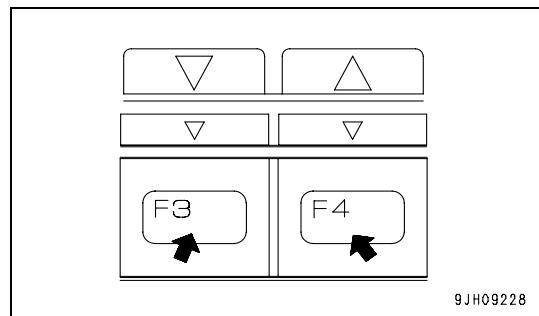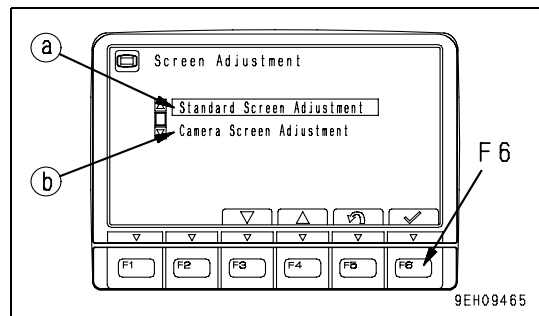



On the screen for Items 1) and 2), it is possible to carry out the following operations with switches F2 to F6.

- F2: Resets all adjusted values to default value
- F3: Indicator of selected item moves 1 segment to left.
- F4: Indicator of selected item moves 1 segment to right.
- F5: Returns to user menu.
- F6: Accepts change and switches to next item setting.

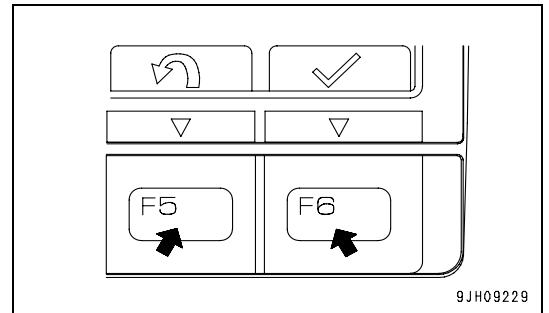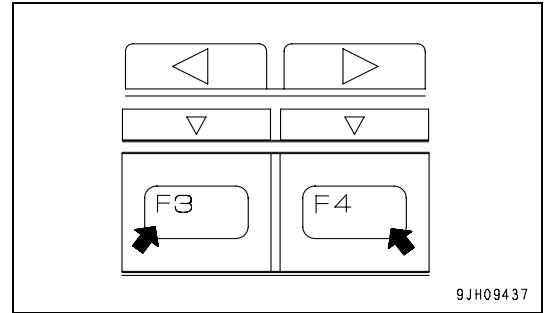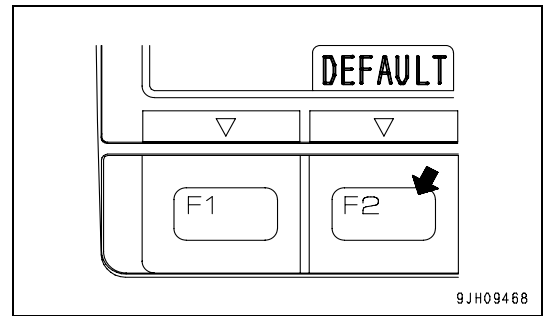


Clock Adjustment

On this clock adjustment menu, it is possible to change the setting of the clock displayed on the pilot monitor of the standard display.


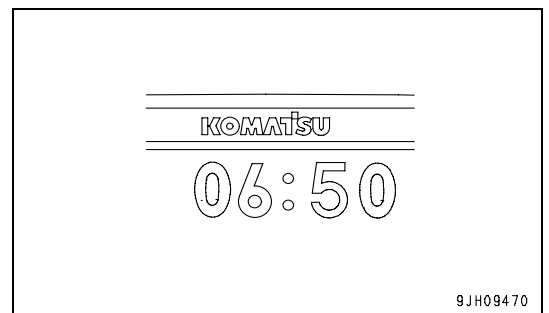
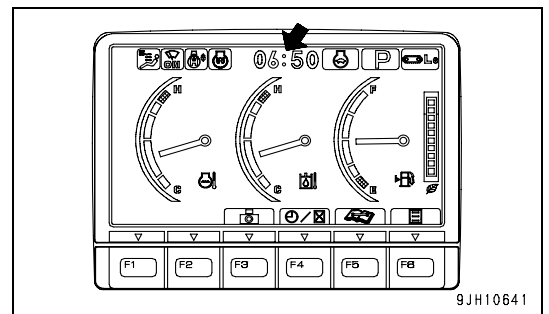


1. On the standard screen, press switch F6.

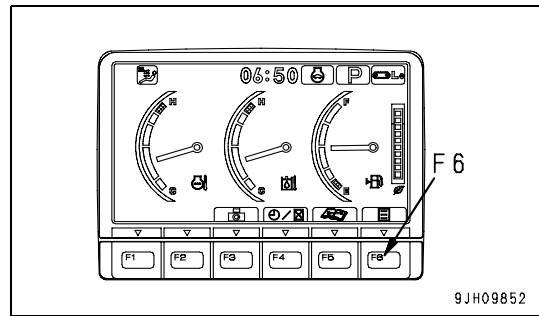

2. Select "Clock Adjustment" on the user menu, then press switch F6. The screen switches to the time adjustment selection menu screen.

- The following three items can be changed.
 - (a) Clock setting
 - (b) 12/24 hour display mode
 - (c) Daylight saving time

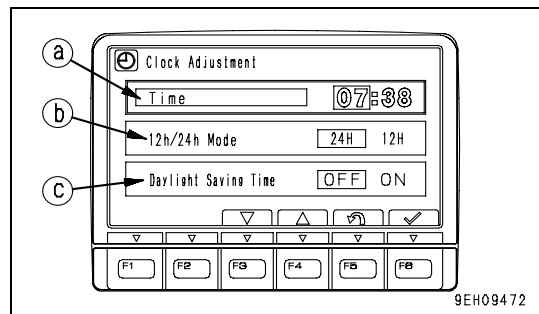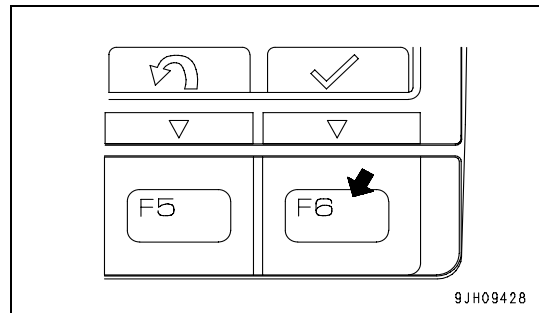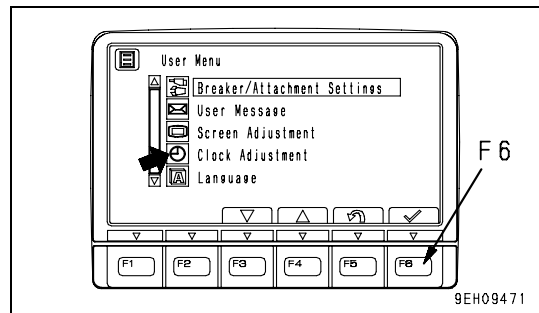

3. On the clock adjustment selection screen, it is possible to carry out the following operations with switches F3 to F6.

● Time

Adjust the hour setting.

1) If "Time" (a) is not highlighted in yellow, press switch F6 to highlight "Time" (a) in yellow. When this is done, hour display (b) changes to orange.




Adjust hour display (b) with the switches as follows. If it is not necessary to change the hour setting, press switch F6.

F3: Time advances 1 hour.

F4: Time goes back 1 hour.

F5: Cancels change and returns to user menu.

F6: Accepts change and goes to setting for minutes.

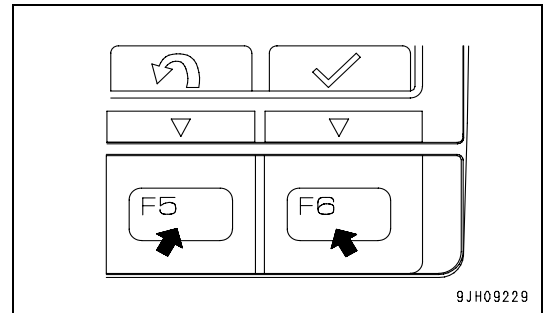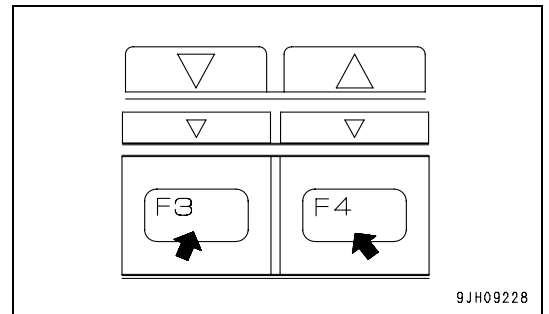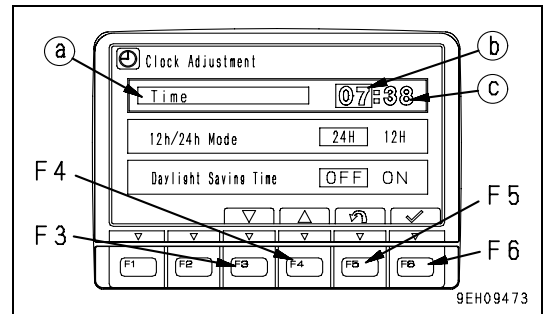

2) When minute display (c) is highlighted in orange, operate the switches as follows to adjust minute display (c).



If it is not necessary to change the minute setting, press switch F6. If the time has been changed, always press switch F6.

F3: Time advances 1 minute.

F4: Time goes back 1 minute.

F5: Cancels change and returns to user menu.

F6: Accepts change and goes to setting for 12/24 hour display mode.

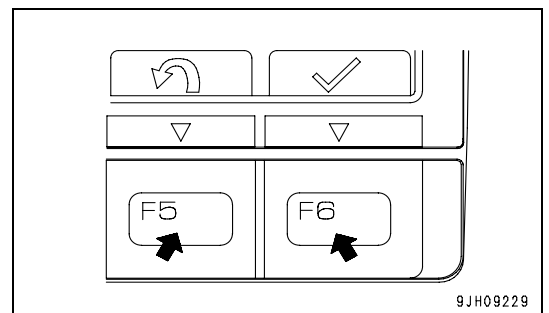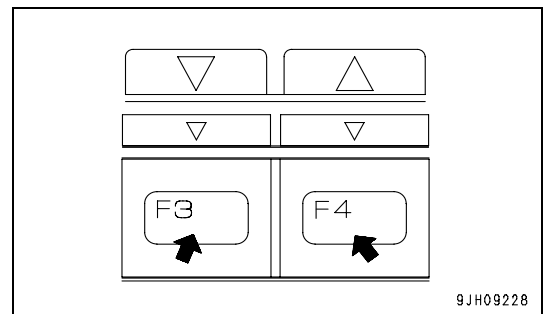

● 12h/24h Mode

Choose either a 12-hour display (am/pm) or a 24-hour display.

(b): 24-hour display

(c): 12-hour display (am/pm)

1) If “12h/24h Mode“ (a) is not highlighted in yellow, press switch F6 to highlight “12h/24h Mode“ (a) in yellow.

2) Change the “12h/24h mode“ with the switches as follows.

The selected display mode (b) or (c) is highlighted in green.




F3: Moves 1 item to left.

F4: Moves 1 item to right.

F5: Cancels change and returns to user menu.

F6: Accepts change and goes to setting for “Daylight Saving Time“.

If the setting has been changed, always press switch F6.

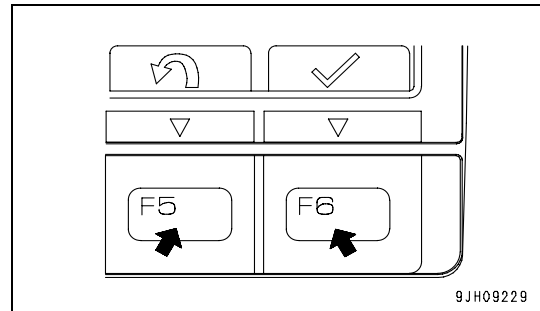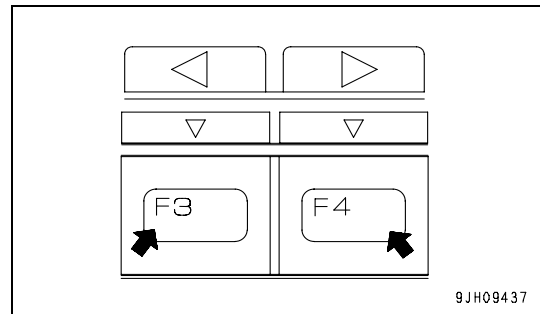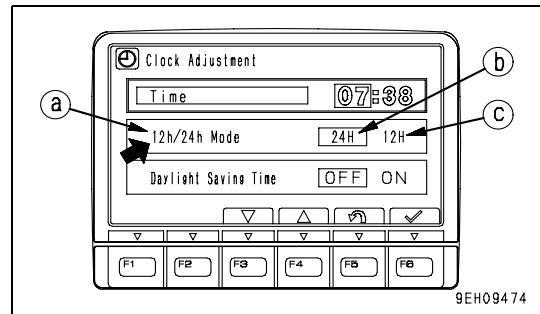

● Daylight Saving Time (Summer time)

1) If daylight saving time is turned ON (a), the clock display becomes 1 hour earlier. If daylight saving time is turned OFF (b), the clock display returns to the set time.

The selected display mode is highlighted in green.

2) Change the daylight saving time with the switches as follows.

F3: Moves 1 item to left.

F4: Moves 1 item to right.




F5: Cancels change and returns to user menu.

F6: Accepts change and goes to setting for "Time".

If the setting has been changed, always press switch F6.

REMARK

Daylight saving time or summer time means moving the clock forward 1 hour to take advantage of the fact that the sun rises early in summer. This system is used in many countries during the summer.

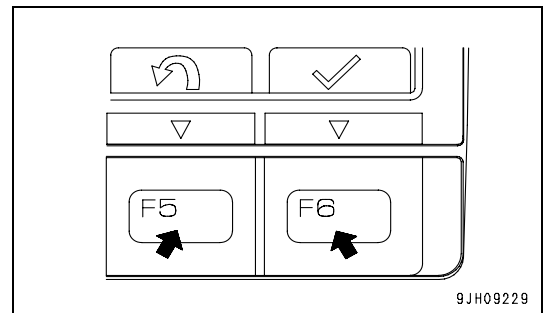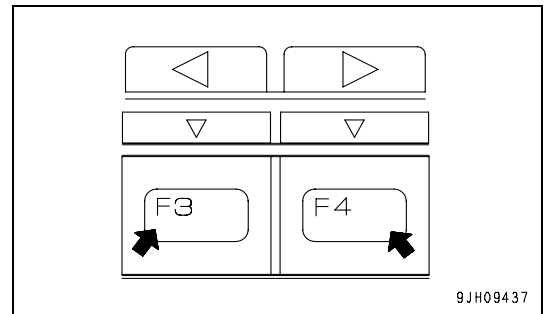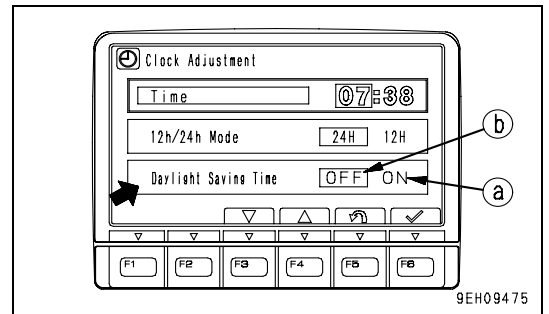


Language Selection

On this language selection menu, it is possible to select the language used on the monitor display.

● The languages that can be selected are as follows.



Japanese, English, Chinese, French, Spanish, Portuguese, Italian, German, Russian, Turkish, Indonesian, Thai

1. On the standard screen, press switch F6.

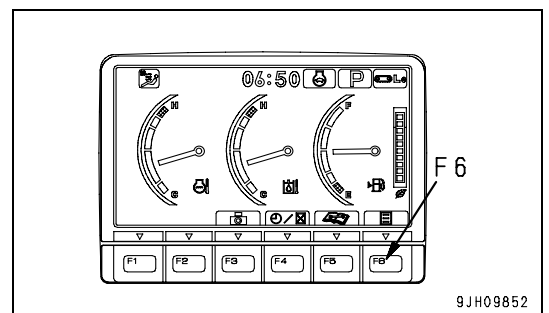

2. Select "Language" on the user menu, then press switch F6.

The screen switches to the language selection menu screen.

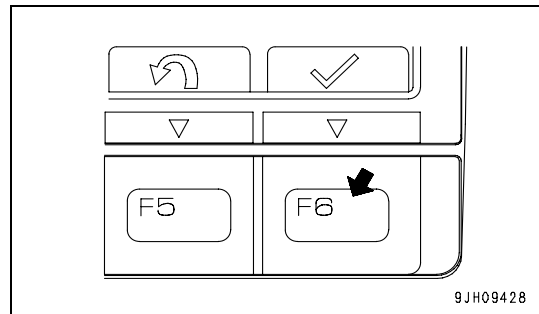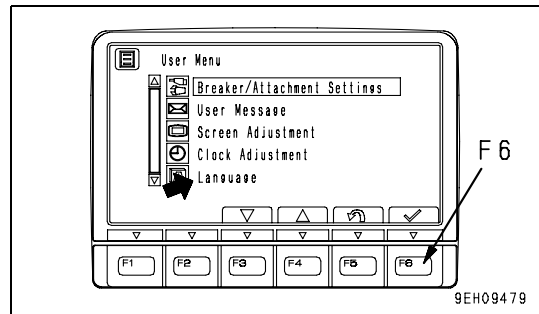

3. Select the language to use for the display, then press switch F6. The screen display changes to the selected language.




- On the language selection screen, it is possible to carry out the following operations with switches F3 to F6.

F3: Moves to item below.

F4: Moves to item above.

F5: Cancels change and returns to user menu screen.


F6: Accepts change and returns to user menu screen.

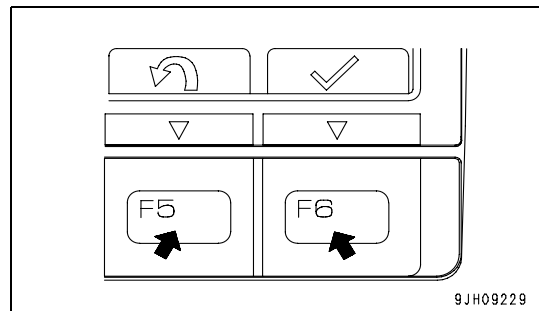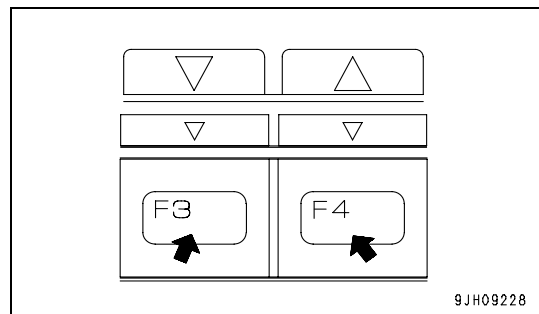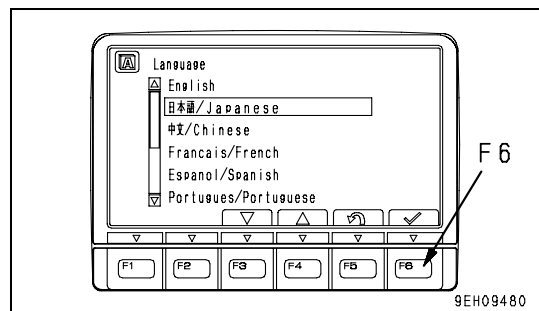

Adjusting Economy Mode



With this economy mode, the engine output can be adjusted to improve the fuel consumption in E mode.

1. On the standard screen, press switch F6.

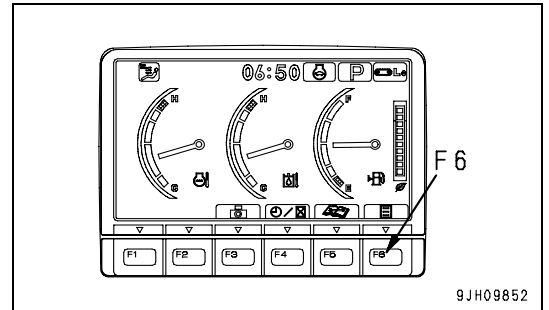

2. Select "Economy Mode Adjustment" on the user menu, then press switch F6.

The screen switches to the economy mode adjustment selection menu screen.

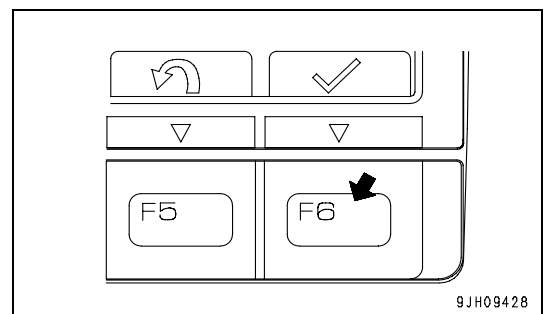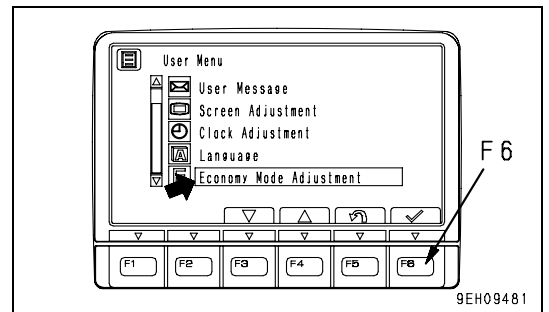

3. Select the desired E mode from the economy mode adjustment selection menu.

The levels that can be set are as follows.

E0: Default

E1: Economy Adjustment 1

E2: Economy Adjustment 2

E3: Economy Adjustment 3


- The higher the selection is made from E0 to E3, the better the fuel consumption becomes, but the production is reduced accordingly.
- When the machine is shipped, it is set to E0.
- On the Economy Mode Adjustment menu screen, it is possible to carry out the following operations with switches F3 - F6.

F3: Moves to item below.


F4: Moves to item above.

F5: Cancels change and returns to user menu screen.


F6: Accepts change and returns to user menu screen.

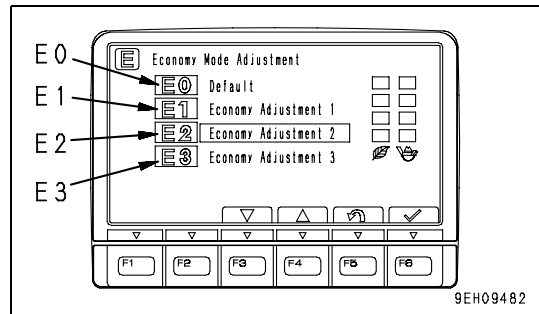

9EH09482

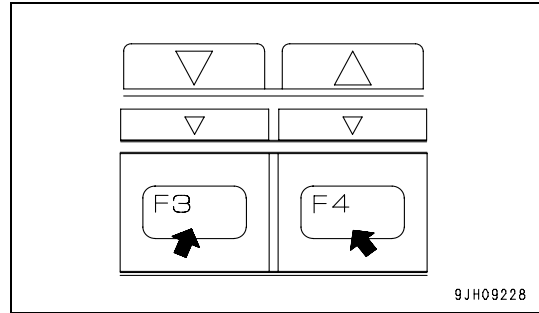


9JH09228

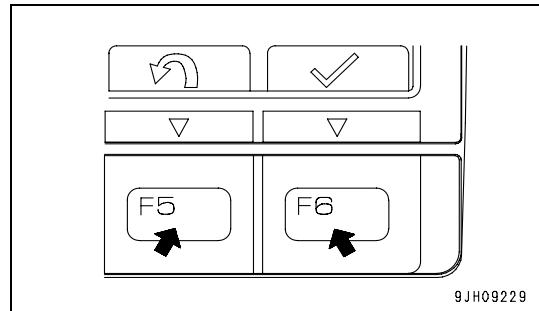

9JH09229

SWITCHES

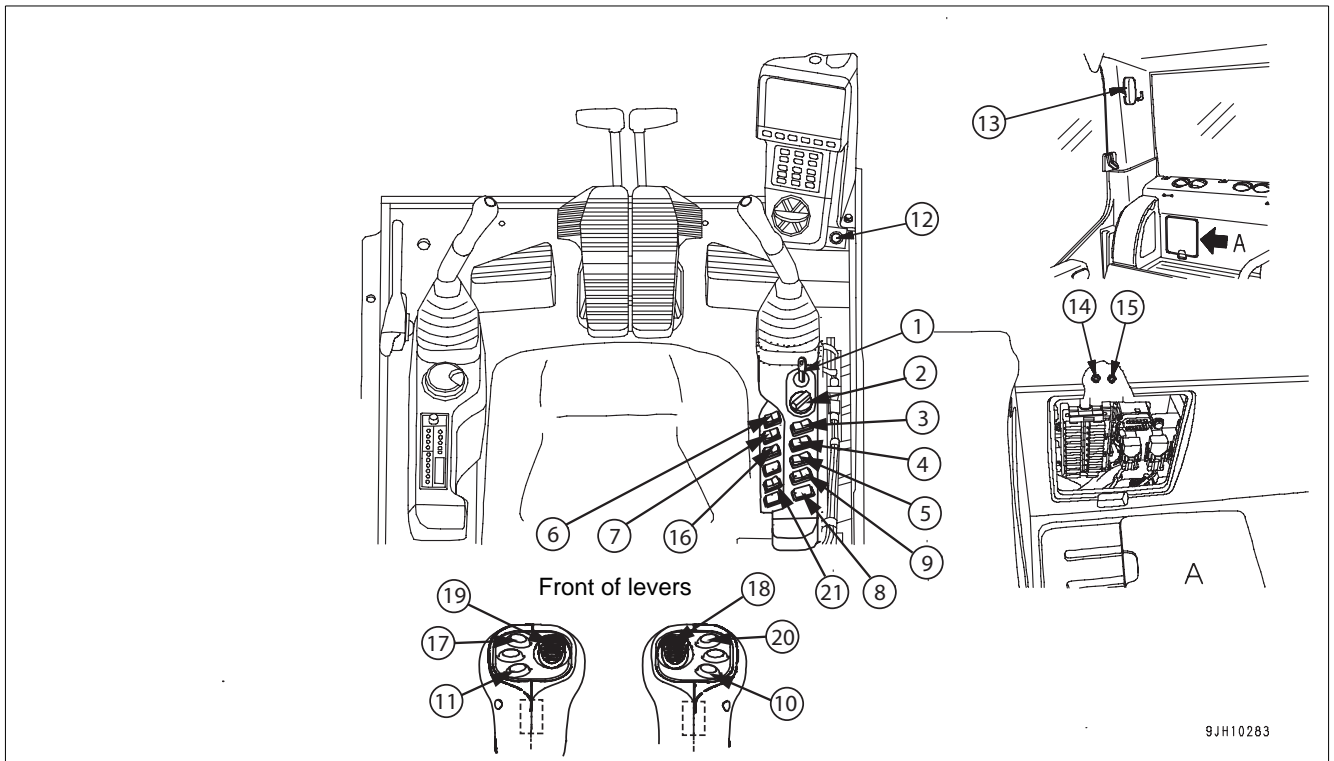

- | | |
|-----------------------------------|---|
| (1) Starting switch | (12) Cigarette lighter |
| (2) Fuel control dial | (13) Room lamp |
| (3) Lamp switch | (14) Emergency pump drive switch |
| (4) Swing lock switch | (15) Swing parking brake release switch |
| (5) Machine push-up switch | (16) Quick coupler switch |
| (6) Lower wiper | (17) Quick coupler switch |
| (7) Heated seat | (18) 1st attachment proportional control switch |
| (8) Roof wiper | (19) 2nd attachment proportional control switch |
| (9) Revolving warning lamp switch | (20) Breaker switch |
| (10) Horn switch | (21) Additional lamp |
| (11) One-touch power max switch | |

Starting Switch

Starting switch (1) is used to start or stop the engine.

(A): OFF position


The key can be inserted or withdrawn. Switches for the electrical system (except room lamp), are all turned off and the engine is stopped.

(B): ON position

Electric current flows through the charging and lamp circuits. Keep starting switch key in the ON position while the engine is running.

(C): START position


This is the engine-start position. Keep the key at this position during cranking. Immediately after starting the engine, release the key. It will automatically return to the ON position (B).

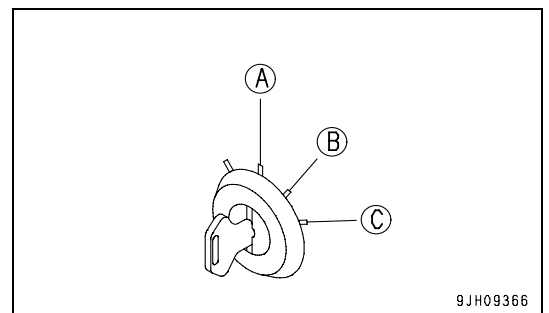

Fuel Control Dial

Dial (2) adjusts the engine speed and output.


- (a) Low idling (MIN): Turned fully to the left
- (b) Full speed (MAX): Turned fully to the right

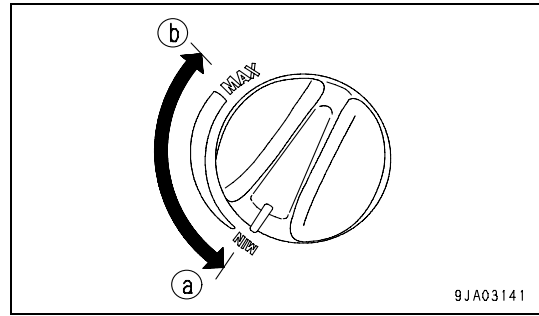

Lamp Switch

Switch (3) is used to turn on the LH deck lamp, RH deck lamp, Boom LH lamp, Boom RH lamp (if equipped), CW lamp (if equipped) and monitor lighting.

- (a) Night position: Lamps light up and monitor illumination is set to night mode
- (b) Day position: Lamps light up and monitor illumination is set to day mode
- (c) OFF position: Lamps go out.
(The monitor illumination is set to day mode.)

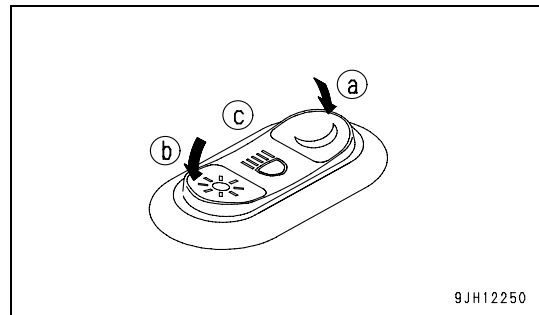


Swing Lock Switch

⚠ WARNING

- When not using the swing operation, e.g. when traveling, put the swing lock switch to the OFF position.
- On slopes, even when the swing lock switch is at the ON position, the weight of the work equipment may cause the upper structure to swing if the swing control lever is operated in the downhill direction.

This switch (4) is used to lock the upper structure so that it cannot swing.

- (a) ON position (actuated): The swing lock is always applied, and the upper structure will not swing even if the swing is operated. In this condition, the swing lock lamp lights up.
- (b) OFF position (canceled): The swing lock is released, when operating the swing control lever, allowing the upper structure to swing.

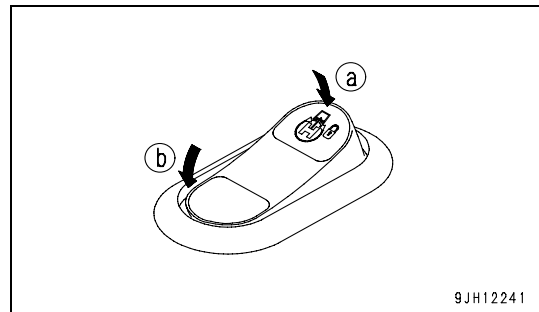


Machine Push-up Switch

This switch (5) is used to switch the safety valve set pressure at the head end of the boom cylinder to two levels.

(a) Low-pressure setting: The boom thrust force is weak, so the swaying of the chassis is small during digging operations, and digging operations can be carried out smoothly.

This is used for general digging operations on normal ground, soft rock, or blasted rock.

(b) High-pressure setting: The thrusting force of the boom becomes more powerful, so it is easy to escape from soft ground.

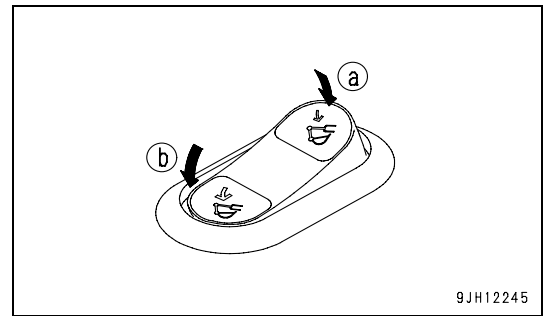


Lower Wiper Switch

When this switch (6) is pressed, the lower wiper is turned on.

(a) ON: Lower wiper operates.

(b) OFF: Lower wiper stops.

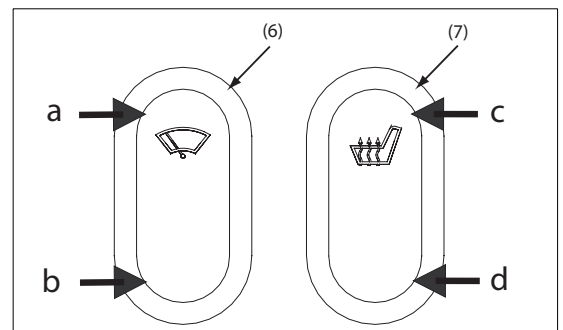

Heated Seat

When the switch (7) is pressed, the heater will operate provided the ambient temperature is sufficiently low.

(c) ON: Heater operates. (see Note below)

(d) OFF: Heater stops.

Note: There is a temperature thermostat fitted in the seat cushion, the heater only operates when the temperature is low (approx. 7° C or below).


Roof Wiper Switch

This switch (8) is used to turn on the roof wiper and to operate the washer. The switch has 3 positions:


(a) ON: Is with the rear end of the switch down. The wiper is on.

(b) ON: Is with the rear end of the switch pressed and held down. The wash/wipe is on.

(c) OFF: The wiper/washer system is off.

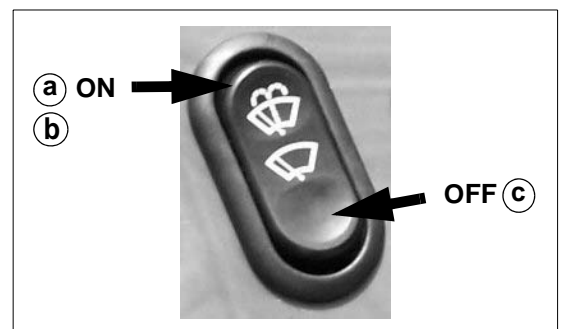

- 1. Nozzle
- 2. Ceiling window
- 3. Ceiling wiper

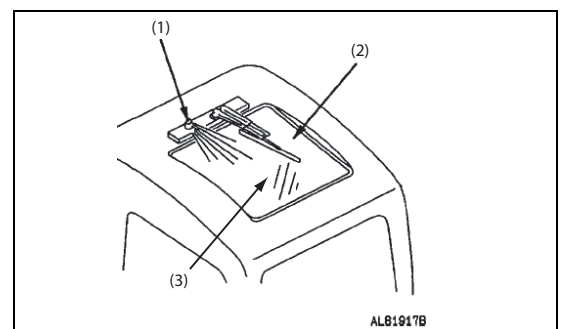


Revolving Warning Lamp Switch

(If equipped)

Use this switch (8) to light up the yellow rotating lamp on top of the cab.


- (a) ON: Lamps light up
- (b) OFF: Lamps go off

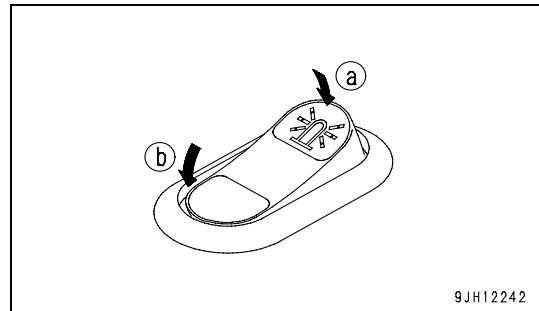

Horn Switch

Use this switch (9) to sound the horn.

Press the switch on the right work control lever to sound the horn.

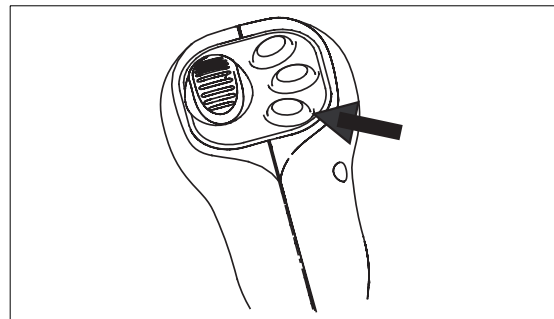


One-touch Power Max Switch

Use this switch (11) on the left control lever to actuate the power max. system

Press it once (single click) and keep it pressed. In P and E modes, the power max function can be actuated for a maximum of only 8.5 seconds.

- This function is not activated when the working mode is set to L mode, B mode or ATT mode.

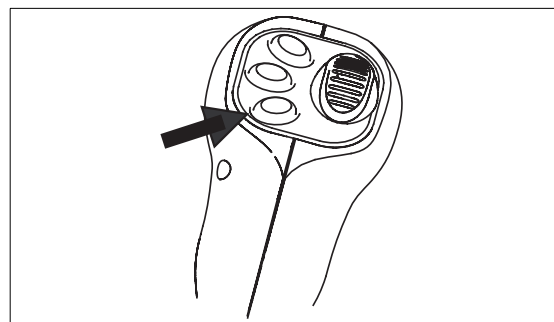


Cigarette Lighter

This switch (11) is used when lighting cigarettes.

When the cigarette lighter is pushed in, it will return to its original position after several seconds, so pull it out to use it.

If the cigarette lighter is removed, the socket can be used as an 85W (24V x 3.5A) power source.

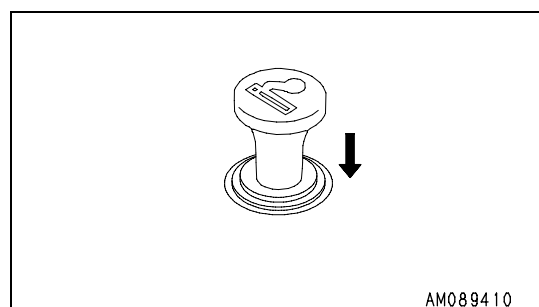

NOTICE

This cigarette lighter is for 24V. Do not use it as the power source for 12V equipment.

Room Lamp Switch


NOTICE

It is possible to turn on the interior cab room lamp even when starting switch is in the OFF position, do not forget to turn it off.

Use this switch (12) to light up the room lamp.

- (a) ON position: Lamp lights up
- (b) OFF position: Lamp goes out

The room lamp lights up even when the starting switch is at the OFF position

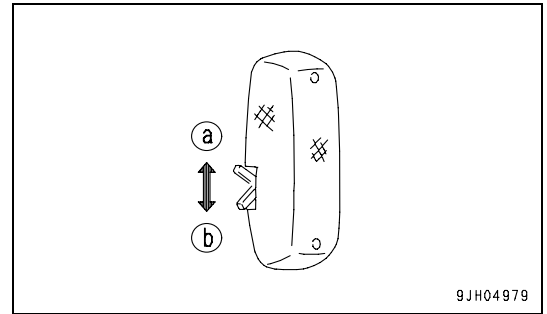

Emergency Pump Drive Switch


NOTICE

- This switch is provided to enable you to carry out operation temporarily, when any problem occurs on the pump control system. Do not use it except in emergency. Furthermore, remove the cause of the problem immediately.
- If this switch is depressed and moved to the EMERGENCY position by mistake, thereby engaging the machine in the work, while the machine is in normal condition, an “E02” mark is shown in the display. If “E02” is displayed during the work, check that the switch is in the NORMAL position.

This switch (13) is used to make it possible to carry out operations temporarily if any problem should occur in the pump control system (when the display shows “E02”).

- (a) EMERGENCY: When abnormal (move switch up)
- (b) NORMAL: When normal (move switch down)

If the display shows “E02”, move the switch up to make it possible to carry out work.

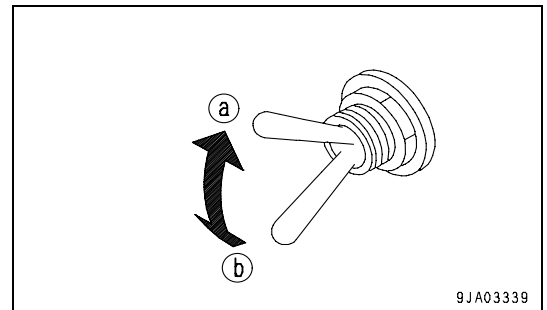

Swing Parking Brake Release Switch

NOTICE


This switch makes it possible to perform swing operations for a short even when there is a problem in the swing parking brake electric system. **DO NOT** use this switch except in emergencies. Repair the problem as soon as possible.

This switch (14) is used to make it possible to carry out operations temporarily if any problem should occur in the swing parking brake system (when the display shows "E03").

- (a) FREE: When abnormal (move switch up)
- (b) NORMAL: When normal (move switch down)

- If the display shows "E03", move the switch up to the FREE position, to make it possible to carry out work.

When pushing this switch up to the FREE position, the swing lock monitor lamp begins to flash.

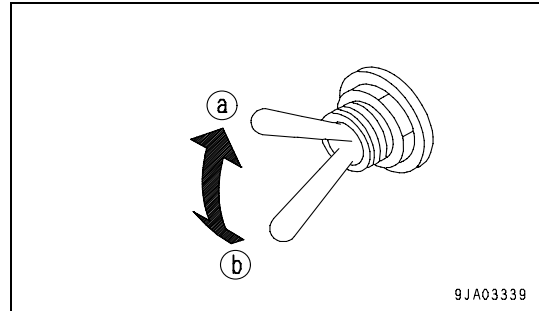

Quick Coupler Switches

To operate the Quick Coupler circuit switches (16) on the RHS console and (17) on the LH PPC lever must be operated together. Refer to "Hydraulic Quick Coupler OPERATION (6-5)" for an explanation of these switches operation.

1st Attachment Proportional Control Switch

This switch (18) is a roller proportional control switch used to operate the 1st attachment circuit (e.g. crusher, clamshell open/close). Refer to "MACHINE READY FOR ATTACHMENT 6-9" for warnings and explanation of operation.

2nd Attachment Proportional Control Switch

This switch (19) is a roller proportional control switch used to operate the 2nd attachment circuit (e.g. clamshell rotation). Refer to "See "MACHINE READY FOR ATTACHMENT" on page 8." for warnings and explanation of operation.

Breaker switch


Switch (20) operates the breaker, refer to "MACHINE READY FOR ATTACHMENT, Attachment 2 Control (if equipped). (6-10)" for warnings and explanation of operation.

Additional Lamps Switch


(if equipped)

Switch (21) is used to turn on the cab front lamps, cab rear lamps and extra boom lamps (NB If fitted by customer).

- (a) ON: Lamps light up.
- (b) OFF: Lamps go out.

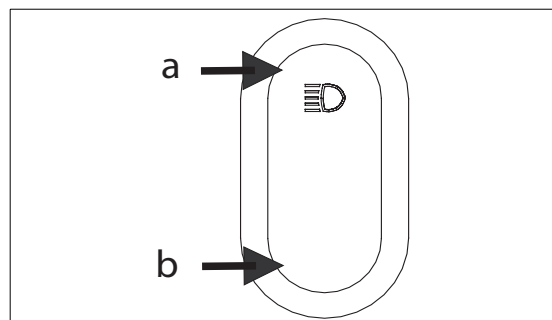

CONTROL LEVERS AND PEDALS

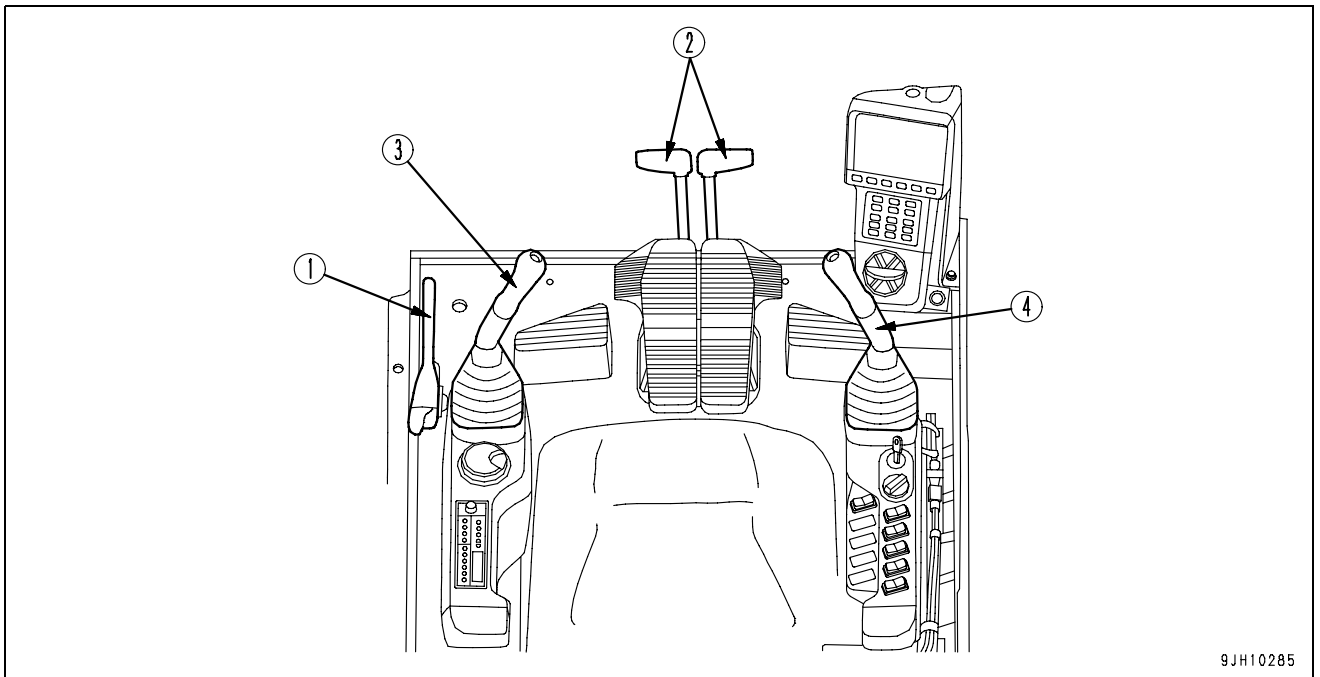

9JH10285

- | | |
|--|---|
| (1) Lock lever | (3) Left work equipment control lever
(with auto-deceleration system) |
| (2) Travel levers
(with pedal and auto-deceleration system) | (4) Right work equipment control lever
(with auto-deceleration system) |

Lock Lever


⚠ WARNING

- When leaving the operator's compartment, set the lock lever securely to the LOCK position. If the lock lever is not at the LOCK position and the control levers or control pedals are touched by mistake, it may lead to serious personal injury.
- Check that the condition of the lever is as shown in the diagram.
- When pulling the lock lever up, be careful not to touch the work equipment control lever. When pushing the lock lever down, be careful not to touch the work equipment control lever.

This lever (1) is a device to lock the work equipment, swing, travel, and attachment (if equipped) control levers.

(L) LOCK position: Even when levers or attachment control pedal (if equipped) are operated, machine does not move

(F) FREE position: Machine moves according to operation of levers or attachment control panel (if equipped)

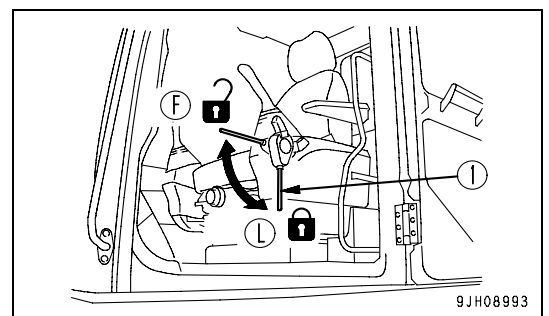

9JH08993

REMARK

This lock lever is of hydraulic lock type. Accordingly, when it is in the lock position (L), the control levers or control pedals move but the machine does not move.

Travel Levers

WARNING

- Do not rest your foot on the pedal during operations. If the pedal is depressed by mistake, the machine may suddenly move and cause a serious accident. Be extremely careful when operating the pedal for travel or steering operations. When you are not using the pedal, do not rest your foot on it.
- If the track frame is facing the rear, the direction of travel operations will be reversed when the travel lever is operated. (The machine will travel forward when operated in reverse, and in reverse when operated forward; the left and right directions will also be reversed.)
- When operating the travel levers, check if the track frame is facing the front or the rear. (If the sprocket is at the rear, the track frame is facing the front.)

This lever (2) is used to change the direction of travel between forward and reverse. () shows the pedal operation.

(a) FORWARD: The lever is pushed forward

(The pedal is angled forward)


(b) REVERSE: The lever is pulled back

(The pedal is angled back)

N (Neutral): The machine stops

REMARK

If the lever is shifted to the FORWARD or REVERSE position from the Neutral position, the alarm sounds to warn that the machine is starting to move.

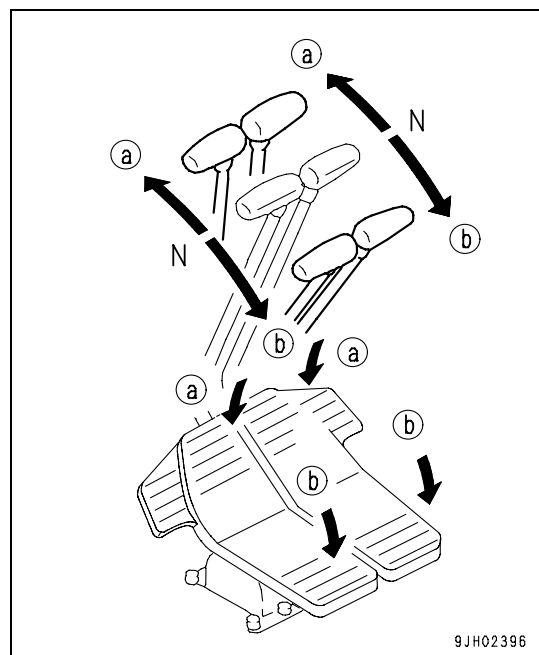

Work Equipment Control Lever

Left work equipment control lever (3) is used to operate the arm and upper structure.

Arm operation

(a) Arm OUT


(b) Arm IN

Swing operation

(c) Swing to right

(d) Swing to left

N (Neutral) : The upper structure and arm are held in position and do not move.

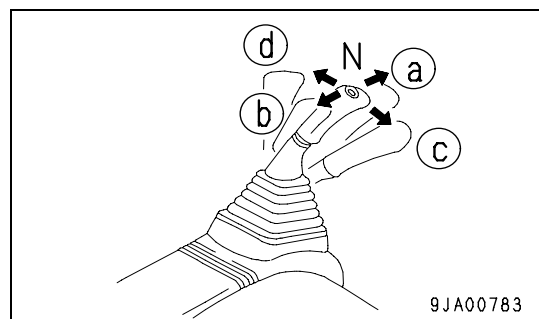

Right work equipment control lever (4) is used to operate the boom and bucket.


Boom operation

- (a) RAISE
- (b) LOWER

Bucket operation

- (c) DUMP
- (d) CURL

N (Neutral) : The boom and bucket are held in position and do not move.

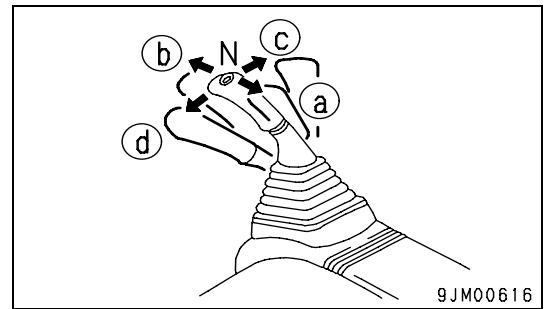

SUN ROOF


PC450, PC450LC only)

WARNING


When leaving the operator's seat, set the lock lever securely to the LOCK position. If the lock lever is at the FREE position and the control levers or control pedals is touched by mistake, this may lead to a serious accident.

Opening

1. Set the lock lever (1) securely to the LOCK position (L).

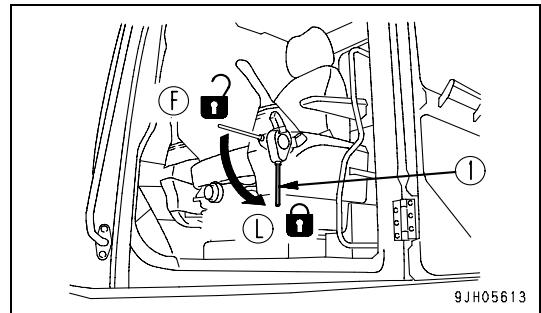

2. Push up lock (A) in the front center of the roof window and check that the lock is released. Then hold grip (B) and push up the roof window.

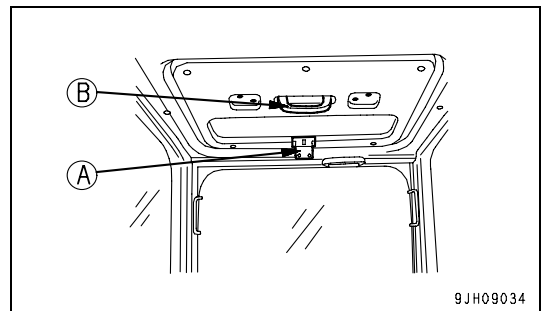

Closing

Hold grasping grip (B), lower the ceiling window, and apply lock (A). If the lock cannot be applied, open the ceiling window, then pull it in again and apply the lock.

WINDSHIELD


 **WARNING**

- When opening or closing the front window, bottom window, or door, always set the lock lever to the LOCK position.
If the lock lever is at the FREE position and the control levers or control pedals is touched by mistake, this may lead to a serious accident.
- When opening or closing the front window, stop the machine on horizontal ground, lower the work equipment completely to the ground, stop the engine, then carry out the operation.
- When opening the front window, hold the grip securely with both hands, pull up, and do not let go until the automatic lock catch is locked.
- When closing the front window, the window will move quicker under its own weight. Hold the grips securely with both hands when closing it.


It is possible to stow (pull up) the front window in the roof of the operator's compartment.

Opening


1. Stop the machine on level ground, lower the work equipment completely to the ground, then stop the engine.
2. Set the lock lever (1) securely to the LOCK position (L).

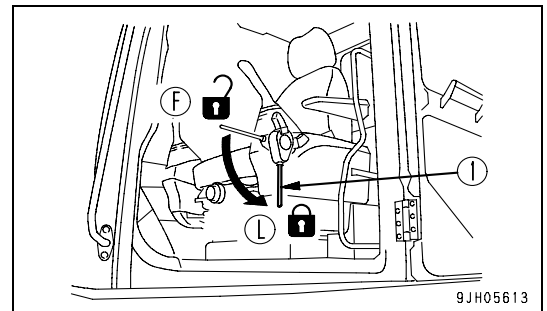


3. Check that the wiper blade is stowed in the right stay.

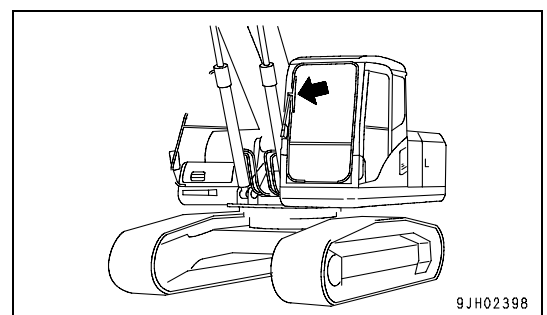

4. Hold 2 grips (A) on the left and right top sides of the front window, and pull the 2 levers (B) to release the locks at the top of the front window. The top of the front window will come out.



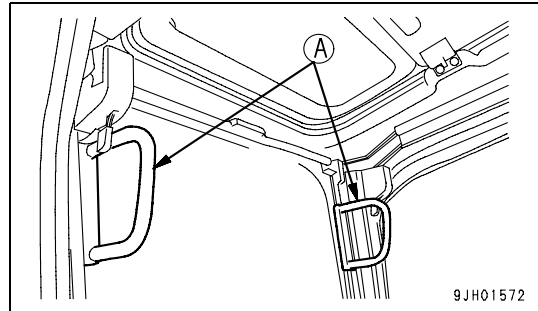


9JH01572

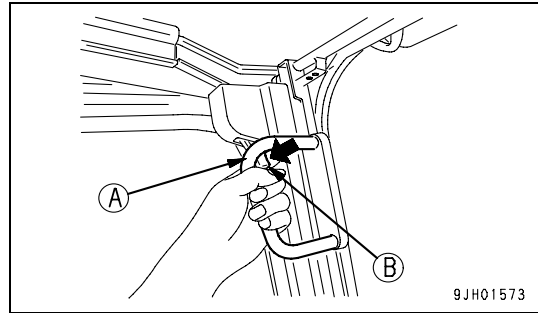


9JH01573

5. Hold lower knob (C) with your left hand from inside the operator's cab, and with your right hand, grip top knob (D), pull it up, and push it against lock catch (E) at the rear of the cab securely to lock the window.

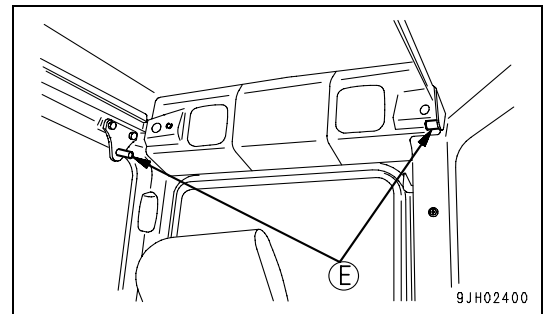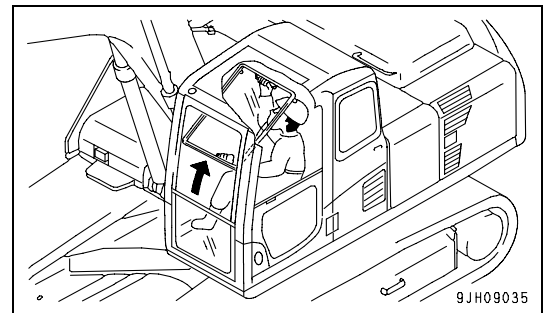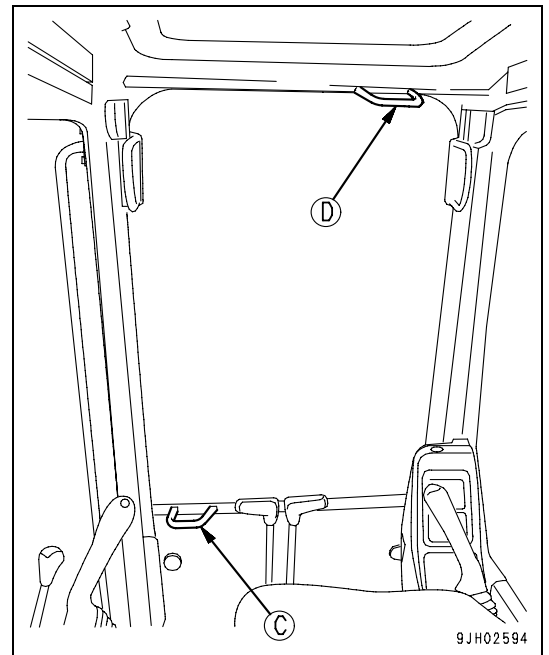

6. Check that lever (B) is securely at the LOCK position.
 - The lock is engaged if the arrow on lock case (F) matches the position of the arrow on lever (B). Check visually.
 - If the arrow on lock case (F) does not match the position of the arrow on lever (B), the lock is not engaged. Repeat the operation in Step 5 to engage the lock.

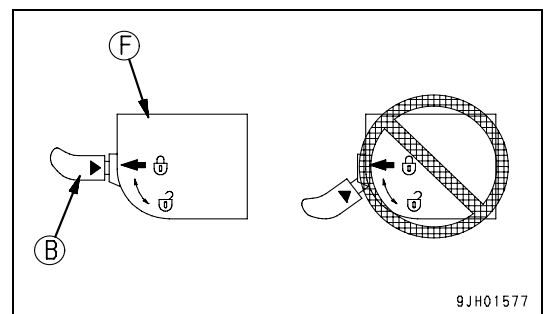


Closing


⚠ WARNING

When closing the window, lower it slowly and be careful not to get your hand caught.



1. Stop the machine on level ground, lower the work equipment completely to the ground, then stop the engine.
2. Set the lock lever (1) securely to the LOCK position (L).

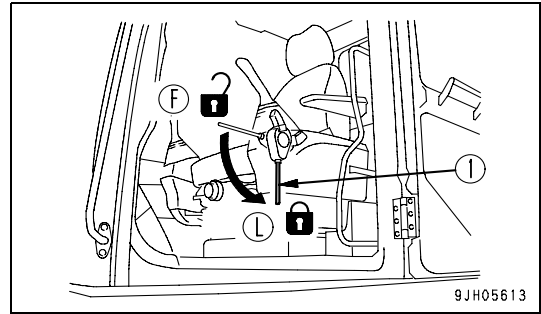


3. Grip left and right handles (A), and pull down lever (B) to release the lock.

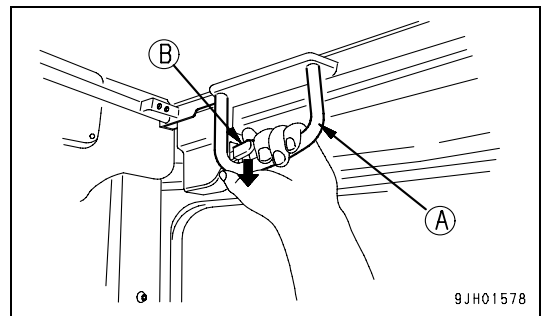


4. Grip handle (C) at the bottom of the front window with your left hand and handle (D) at the top with your right hand, push to the front, then lower slowly.

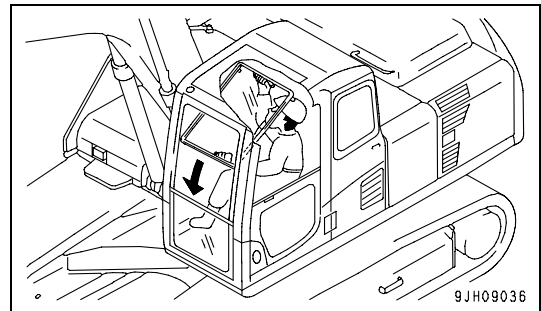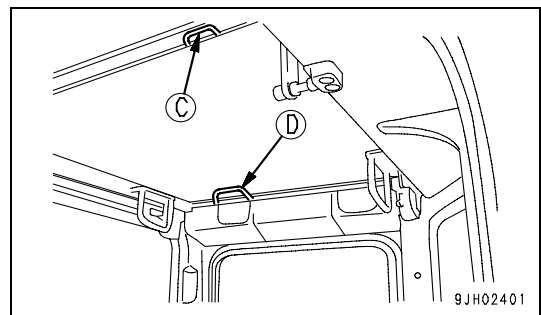

5. When the bottom of the window reaches the top of the bottom window, push the top of the window to the front to push it against left and right lock catches (G) and engage the lock.

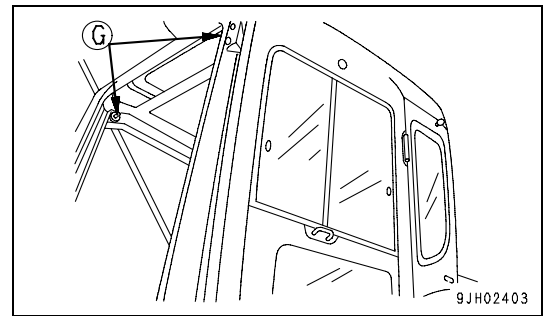


6. Check that lever (B) is securely at the LOCK position.
 - The lock is engaged if the arrow on lock case (F) matches the position of the arrow on lever (B). Check visually.
 - If the arrow on lock case (F) does not match the position of the arrow on lever (B), the lock is not engaged. Repeat the operation in Step 5 to engage the lock.

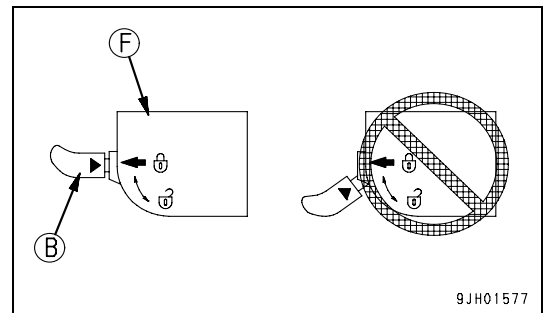


Removing Lower Windshield


1. Open the front window, then hold grip (1), pull up, and remove the bottom window.

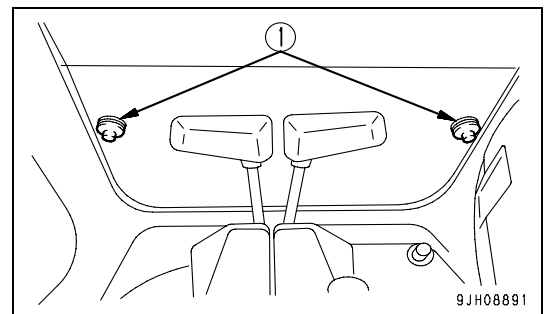

- If sand or dust is collected at the bottom of the front window, it will be difficult to remove the window. In addition, when stowing, the sand and dust stuck to the glass will be carried inside the cab. To prevent this, clean area (A) before removing.

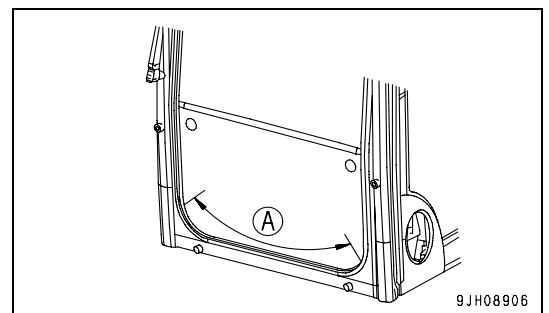

2. After removing the lower windshield, store it at the right rear of the operator's cab, and set lever (2) to lock position (B) to hold it securely in position.
3. When removing it, set lever (2) to release position (C), hold the glass with both hands, and pull it up.

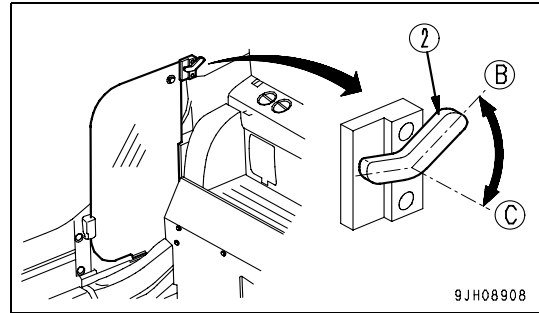


EMERGENCY ESCAPE HAMMER

CAUTION


If it is necessary to break the window glass with the hammer, be extremely careful not to injure yourself on the flying pieces of broken glass.

To prevent injury, remove the broken pieces of glass remaining in the frame before escaping through the window. Be careful also not to slip on the broken pieces of glass.

If it should become impossible to open the cab door for any reason, and it is necessary to make an emergency escape from the operator's compartment, use hammer (A) to escape.

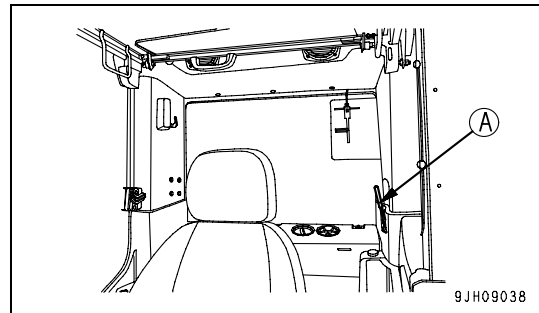

To escape from the operator's cab, use hammer (A) to break the glass and escape through the window.

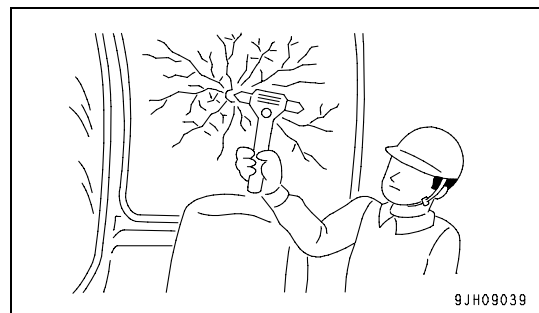


DOOR LOCK

WARNING

- Before releasing the door lock, always stop the machine on flat ground.
- Never release the door lock on a slope. The door may suddenly close and cause injury.
- When releasing the door lock, do not extend your body or hands outside the machine and do not put your hands on the door frame. The door may suddenly close and cause injury.

Use the door lock to fix the door in position after opening it.

1. Push the door against catch (1) to lock it in position.
2. When closing the door, push down the lever (2) on the left of the operator's seat to release the catch.
3. When attaching the door in position, lock it firmly to the catch.

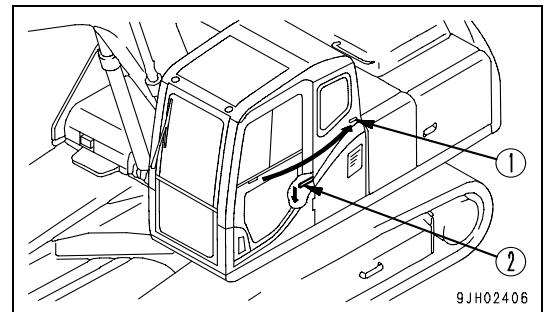


CAP WITH LOCK

Use the starting switch key to open and close the locks on the caps and covers.

For details of the locations of the caps and covers with locks, see "LOCKING (3-168)".

Insert the key as far as it will go to the shoulder (A). If the key is turned before it is inserted all the way, it may break.

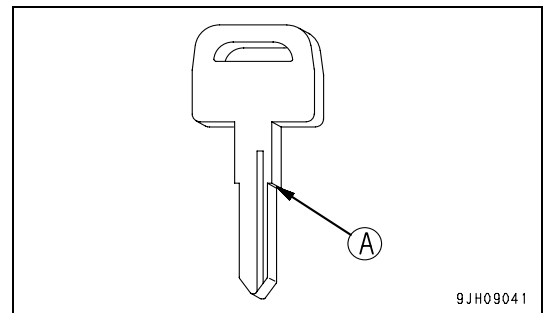



Opening and Closing Caps with Lock

Opening the Cap

1. Insert the key into the key slot.
2. Turn the key clockwise, align the key groove with mark (1) on the cap, then open the cap.

Position (A): OPEN

Position (B): LOCK

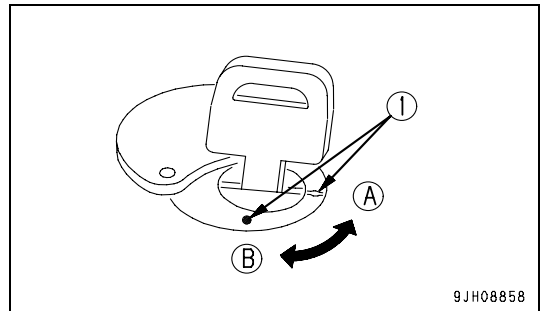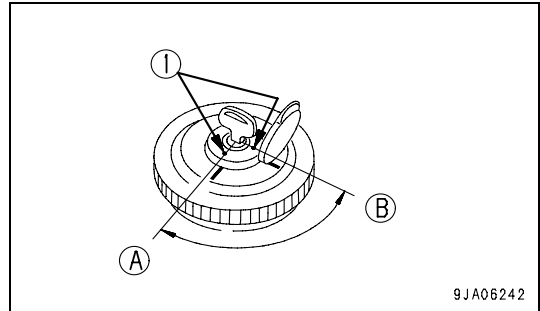

Locking the Cap

1. Turn the cap until tight, then insert the key into the key slot.
2. Turn the starting switch key to LOCK position (B), then remove the key.


Opening and Closing Cover with Lock

Opening the Cover (Locked Cover)

1. Insert the key into the key slot.
2. Turn the key counterclockwise and open the cover by pulling the cover grip.

(A): Open

(B): Lock

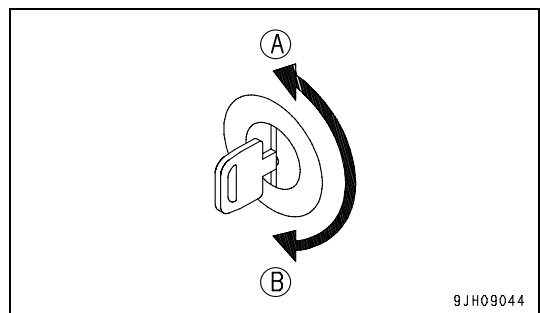


Locking the Cover

1. Close the cover and insert the key into the key slot.
2. Turn the key clockwise and take the key out.

DRINK BOX

- This is on the right side at the rear of the operator's seat. It keeps drinks and other things hot or cold.
- Hot or cold air blows into the box according to the setting of the air conditioner.

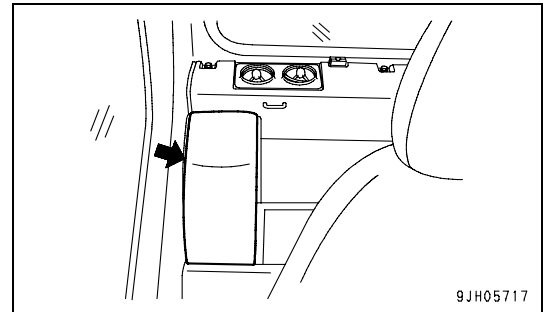


MAGAZINE BOX

(The cup holder is provided separately at the front of the magazine box.)

Located on left side of the operator's seat.


Keep the Operation and Maintenance Manual in this box so that it can be taken out and read whenever necessary.

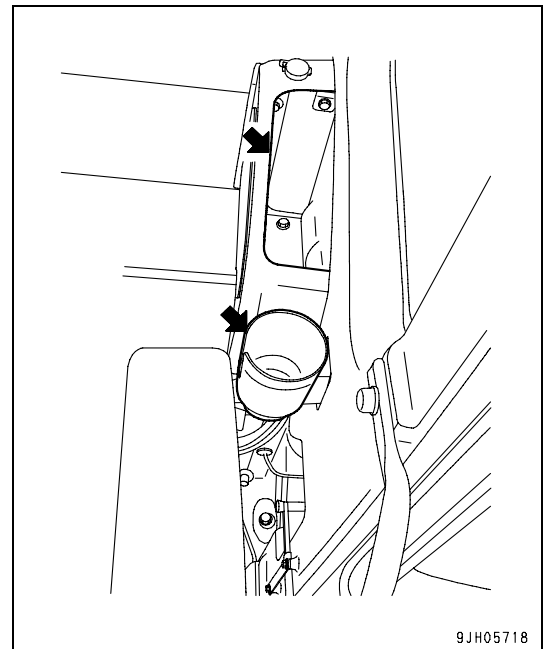

ASHTRAY


This is on top of the console box on the left side of the operator's seat.

Always put out your cigarette before putting it in the ashtray and be sure to close the lid.

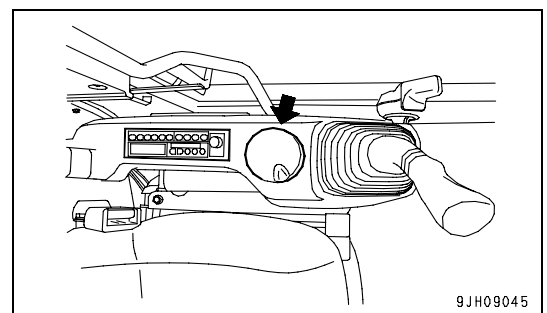

AIR CONDITIONER CONTROLS

Air Conditioner Control Panel

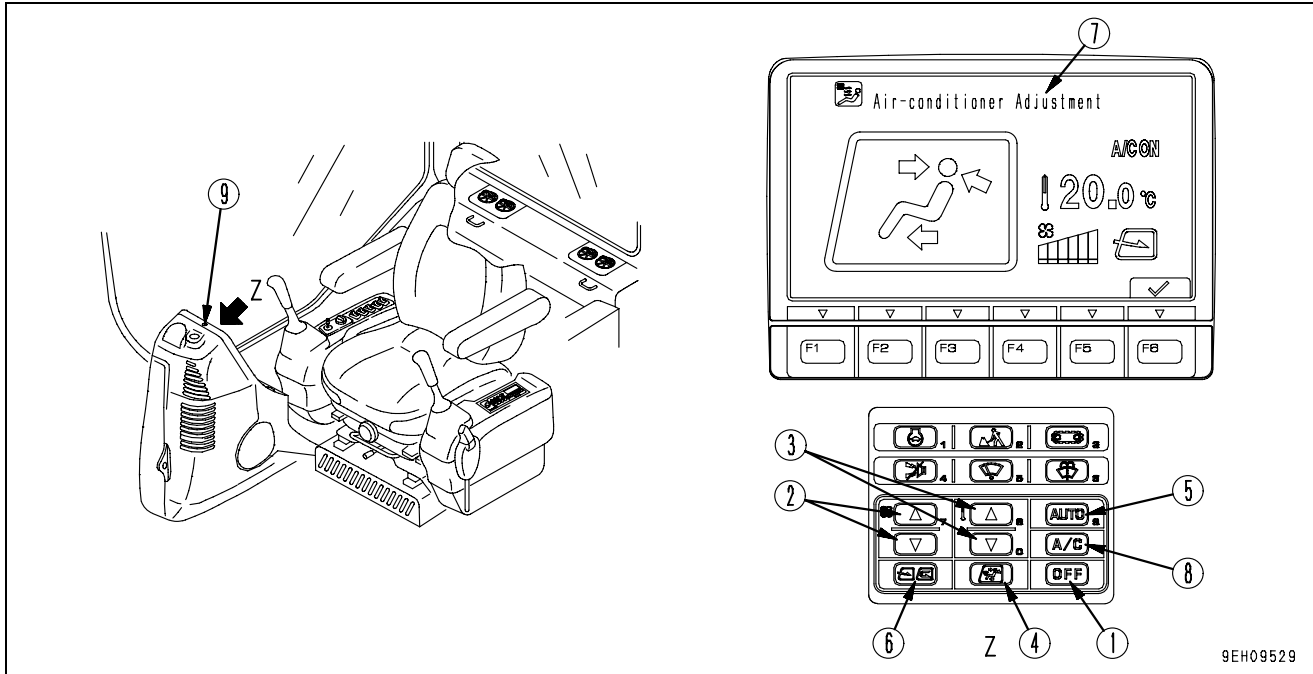


- (1) OFF switch
- (2) Fan switch
- (3) Temperature control switch
- (4) Vent selector switch
- (5) Auto switch
- (6) FRESH/RECIRC selector switch
- (7) Display monitor
- (8) Air conditioner switch
- (9) Sunlight sensor

OFF Switch

Switch (1) is used to stop the fan and air conditioner.

REMARK

Even if this switch (1) is pressed, the monitor screen does not switch to the air conditioner adjustment screen.

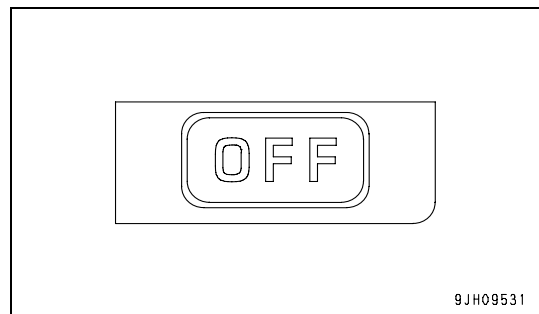


Fan Switch

Switch (2) is used to adjust the air flow.

The air flow can be adjusted to six levels.

- Press the \triangle switch to increase the air flow; press the ∇ switch to decrease the air flow.
- During auto operation, the air flow is automatically adjusted.

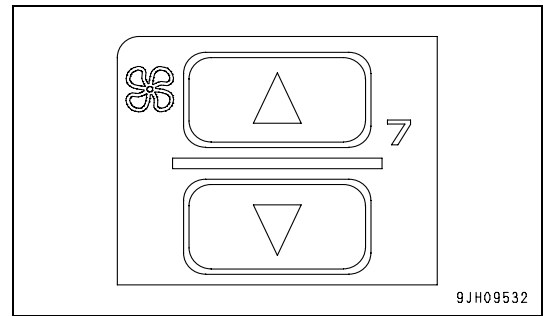

Monitor display and air flow

A: Liquid crystal display

B: Air flow

a: Air flow "low"

b: Air flow "medium 1"

c: Air flow "medium 2"

d: Air flow "medium 3"

e: Air flow "medium 4"


f: Air flow "high"

A	B
	a
	b
	c
	d
	e
	f

Temperature Control Switch

Switch (3) is used to control temperature inside the cab. The temperature can be set between 18°C and 32°C.

- Press the \triangle switch to raise the set temperature; press the ∇ switch to lower the set temperature.
- The temperature is generally set at 25°C.
- The temperature can be set in stages of 0.5°C.

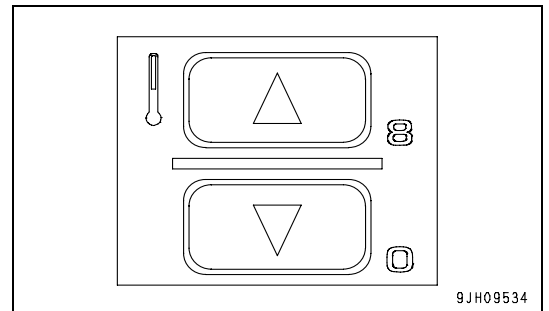

<Monitor display and the function>

Monitor display (°C)	Set temperature
18.0	Max. cooling
18.5 to 31.5	Adjusts temperature inside cab to set temperature
32.0	Max. heating


REMARK

If the mode is set to auto mode and the temperature setting is set to 18.0 °C or 32.0 °C, the air flow from the fan is always set to HIGH and does not change even when the set temperature is reached.

Vent Selector Switch

Switch (4) is used to select the vents.

- When switch (4) is pressed, the display on monitor display (7) switches and air blows out from the vents displayed.
- During automatic operation, the vents are automatically selected.

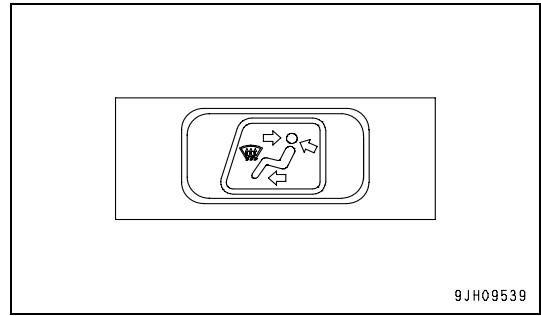


(A): Rear vent (4 places)

(B1): Face vent (1 place)

(C): Foot vent (1 place)

(D): Front window glass vent (2 place)

(B2): Front window glass vent (1 place)

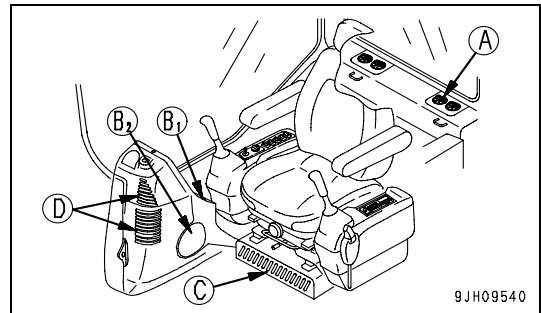


Liquid crystal display	Vent mode	Vent				Remarks
		(A)	(B)	(C)	(D)	
	Front vents		○			Cannot be selected for automatic operation
	Front and rear vents	○	○			-
	Front, rear and foot vents	○	○	○		-
	Foot vent			○		-
	Foot vent Defroster vent)			○	○	Cannot be selected for automatic operation
	Defroster vent				○	Cannot be selected for automatic operation

Note 1: Air blows from vents marked ○

Auto Switch

With switch (5), the air flow, vents, and air source (RECIRC/FRESH) are automatically selected according to the set temperature.

- Press switch (5), then use temperature control switch (3) to set the temperature, and run the air conditioner under automatic control.
- When switching from automatic operation to manual operation, it is possible to use the switches to select the vents and air source (RECIRC/FRESH).

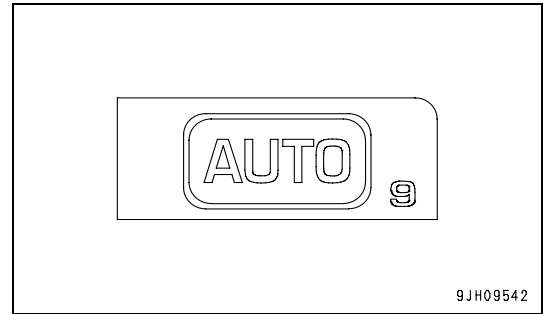


REMARK

When Auto Mode is selected, if the set temperature is set to 18.0 °C or 32.0 °C, the air flow is always set to High, but this is not a problem.

FRESH/RECIRC Selector Switch

Switch (6) is used to switch the air source between recirculation of the air inside the cab and intake of fresh air from the outside.

- During automatic operation, the selection of inside air (RECIRC) and outside air (FRESH) is performed automatically.

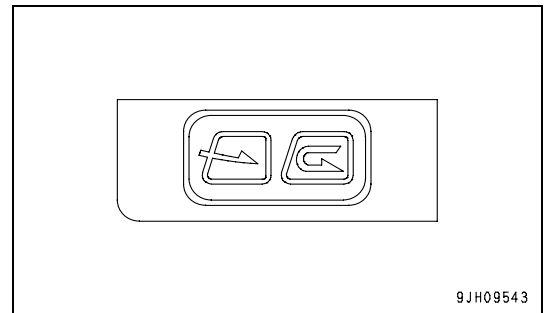


RECIRC	Outside air is shut off and only air inside the cab is circulated. Use this setting to perform rapid cooling of the cab or when outside air is dirty.
FRESH	Outside air is taken into the cab. Use this setting to take in fresh air when performing de misting.

Display Monitor

Monitor (7) displays the status of temperature setting (a), air flow (b), and vents (c).


- When OFF switch (1) is pressed, the display of temperature setting (a) and air flow (b) goes out, and operation stops.

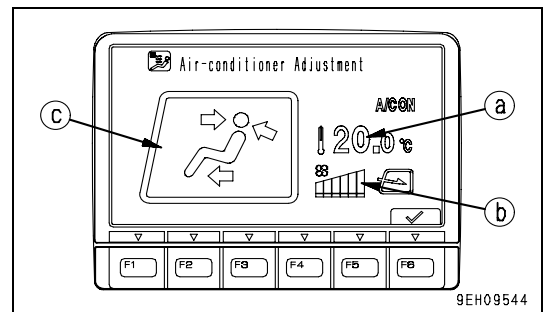

Air Conditioner Switch


Switch (8) is used to turn the air conditioner (cooling, dehumidifying, heating) ON or OFF.

- Press air conditioner switch (8) when the fan is operating (when display (b) is shown on the display monitor). The air conditioner is switched ON and starts to work. Press the switch again to stop the air conditioner.
- Air conditioner cannot be operated while the fan is off.

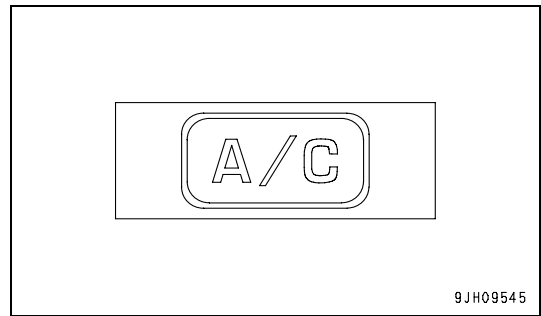

Sunlight Sensor

This sensor (9) automatically adjusts the flow of air from the vents to match the strength of the sun's rays. In addition, it automatically detects changes in the temperature inside the cab caused by changes in the strength of the sun's rays beforehand and automatically adjusts the temperature.


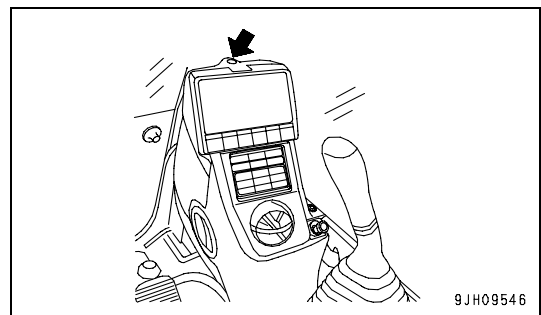


Method of Operation


The air conditioner can be operated automatically or manually. Select the method of operation as desired.

Automatic Operation

1. Turn auto switch (5) ON.
 - The monitors for the set temperature (a) and air flow (b) are also displayed.

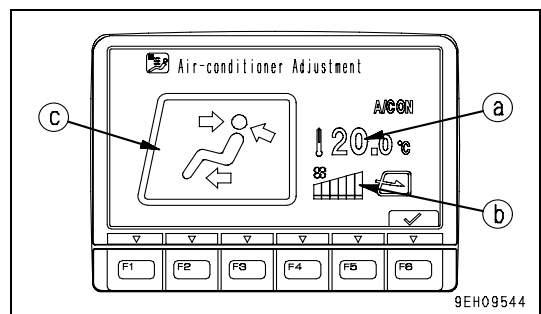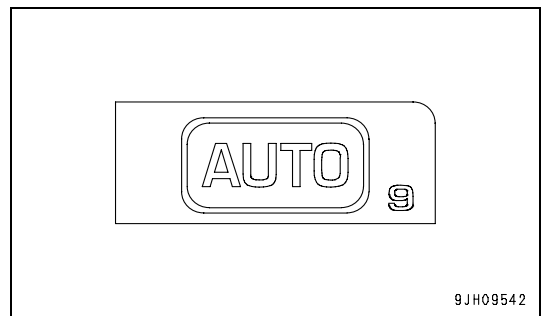


- 2. Use temperature set switch (3) to set to the desired temperature. The air flow, combination of vents, and selection of fresh or recirculated air is automatically selected according to the set temperature, and the air conditioner is operated automatically to provide the set temperature.

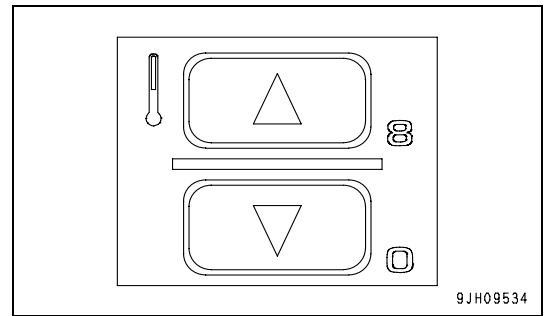


REMARK

When vent display monitor (c) displays (d) or (e), and engine coolant temperature is low, the air flow is automatically limited to prevent cold air from blowing out.

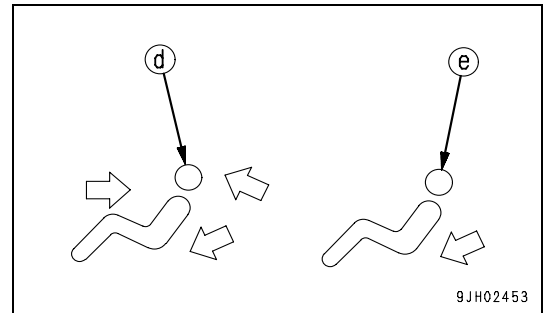



Stopping Automatic Operation

Press OFF switch (1). Operation stops.

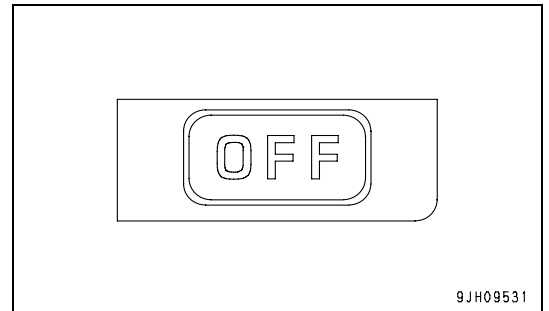


Manual Operation


1. Press fan switch (2) and adjust the air flow. When doing this, check that temperature setting (a) and air flow (b) are displayed on monitor (7).

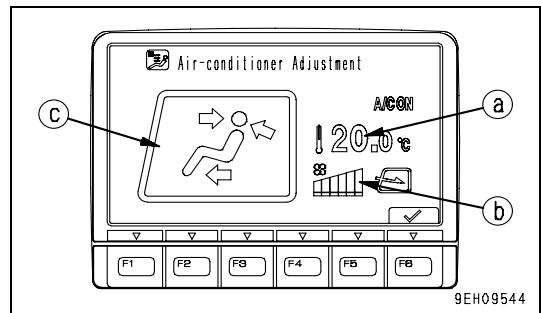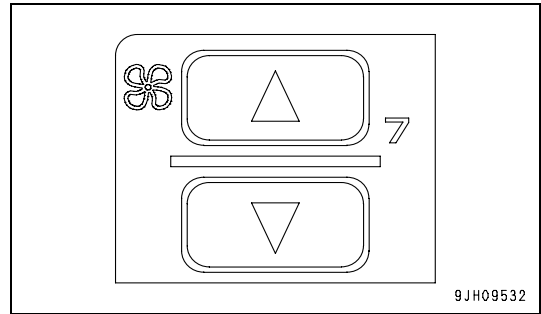

2. Turn air conditioner switch (8) ON.


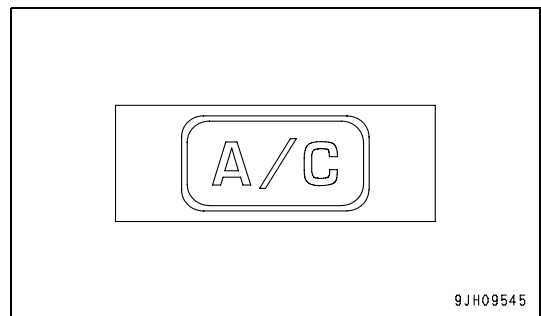


3. Press temperature setting switch (3) and adjust temperature inside the cab.

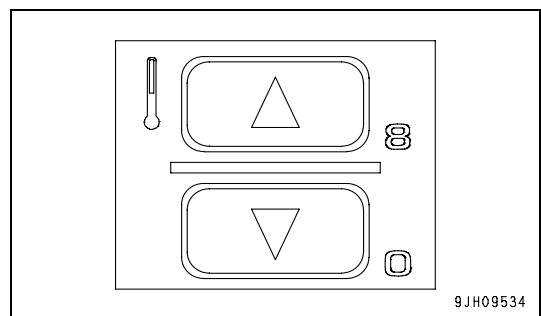


- Press vent selector switch (4) and select the desired vents.

When this is done, the display for vent (c) of the display monitor changes according to the selection.

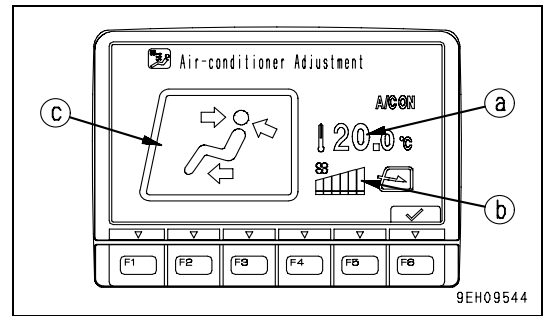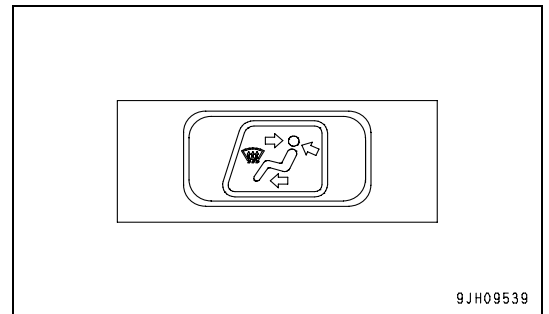


- Press RECIRC/FRESH selector switch (6) and select recirculation of the air inside the cab (RECIRC) or intake of fresh air from outside (FRESH).

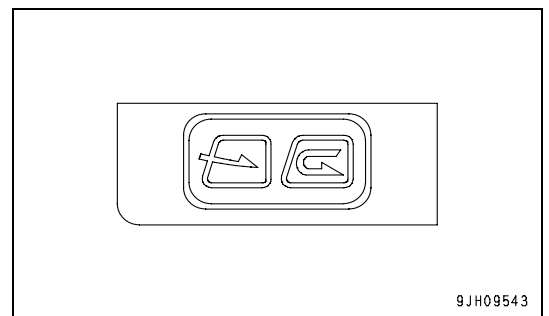

Stopping Manual Operation



Press OFF switch (1). Operation stops.

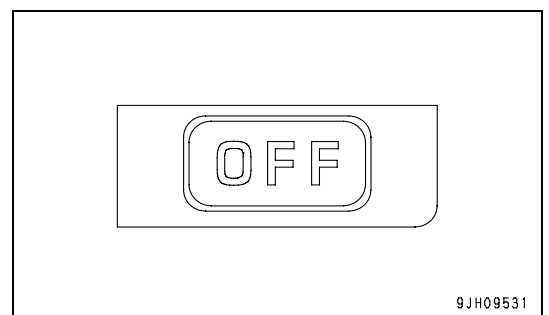


Operation with Cold Air to Face and Warm Air to Feet

To operate with cold air blowing to the face and warm air blowing to the feet, set as follows.


1. Press fan switch (2) and adjust the air flow. When doing this, check that temperature setting (a) and air flow (b) are displayed on monitor (7).

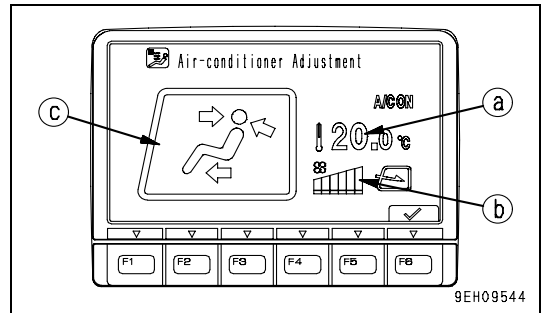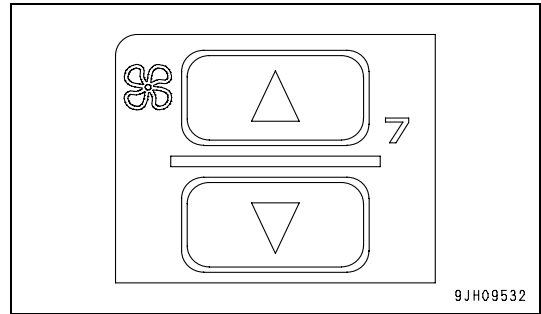


2. Press vent selector switch (4) and set the vent display on the display monitor to the display shown in the diagram on the right.

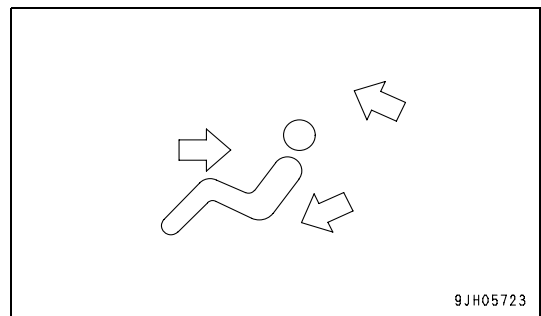

3. Turn air conditioner switch (8) ON.


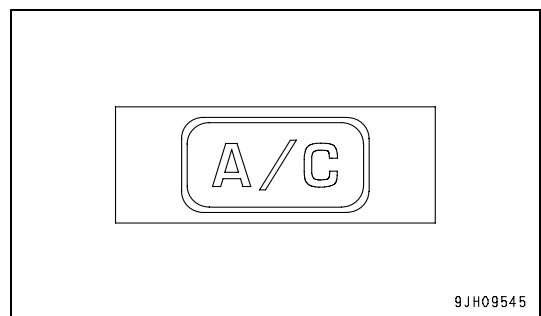


4. Adjust fan switch (2), temperature setting switch (3) and RECIRC/FRESH selector switch (6) to the desired positions.


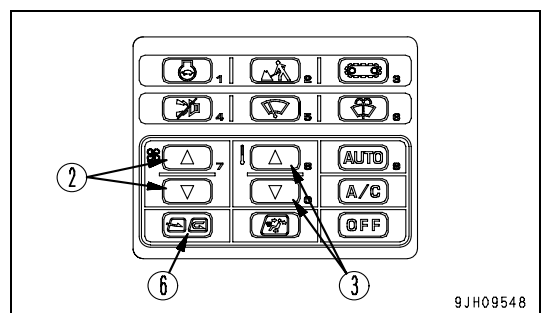


Defroster Operation


1. Press fan switch (2) and adjust the air flow. When doing this, check that temperature setting (a) and air flow (b) are displayed on monitor (7).

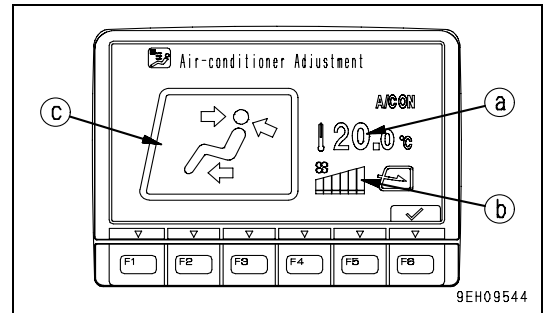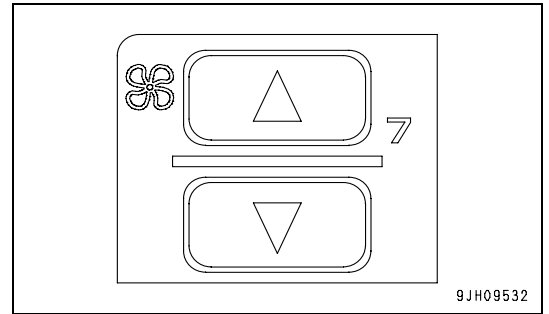


2. Press vent selector switch (4) and set vent display on the display monitor to (f) or (g) as shown in diagram on the right.

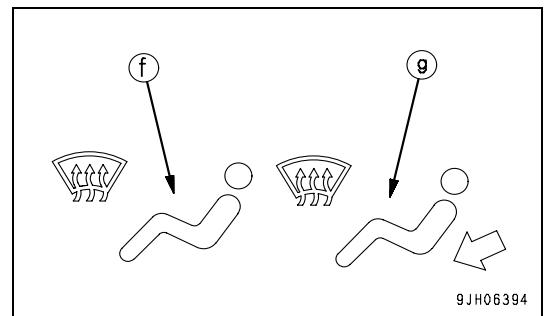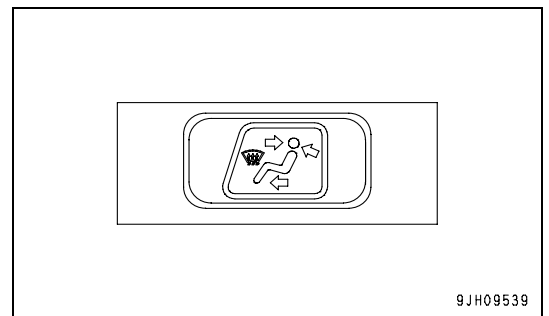

3. Press RECIRC/FRESH selector switch (6) and set it to take in fresh air.

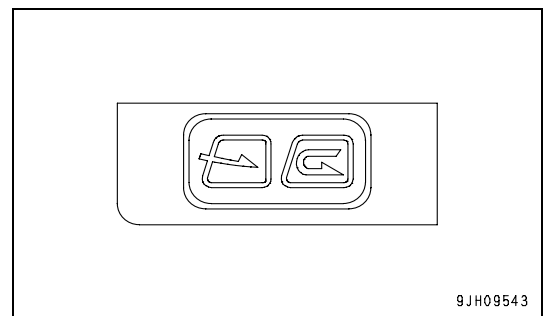


4. Press temperature setting switch (3) and set temperature on the display (7) monitor to maximum heating.

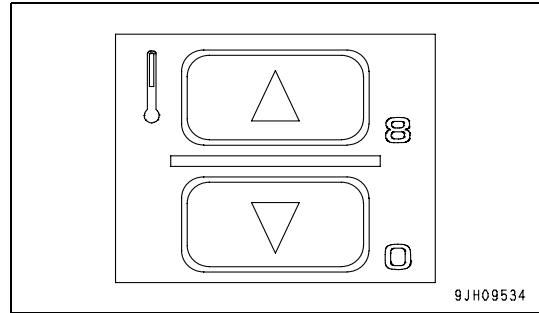


5. Adjust vents (A), (B1), and (B2) so that the air blows onto the window glass.

(Vents (C) and (D) are fixed and cannot be adjusted.)

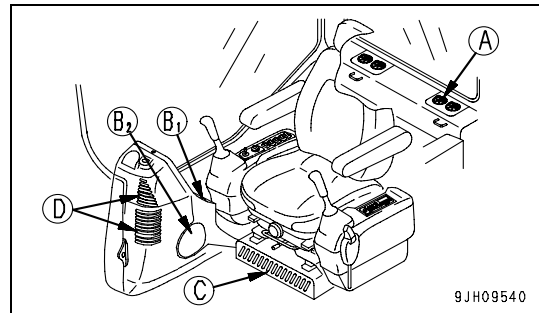

When operating in the rainy season or when it is desired to remove the mist from the window glass or to dehumidify the air, turn air conditioner switch (8) ON.

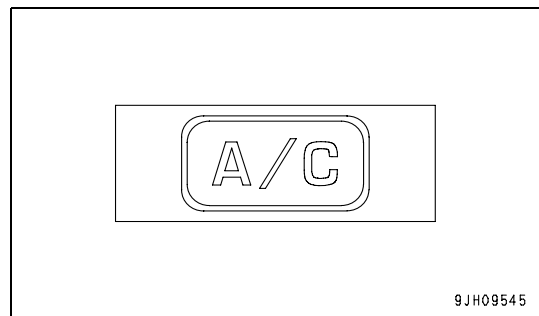

Use Air Conditioner with Care

NOTICE

- When running the air conditioner, always start with the engine running at low speed. Never start the air conditioner when the engine is running at high speed. It will cause failure of the air conditioner.
- If water gets into the control panel or sunlight sensor, it may lead to unexpected failure, be careful not to let water get on these parts. In addition, never bring any flame near these parts.
- For the auto function of the air conditioner to work properly, always keep the sunlight sensor clean and do not leave anything around the sunlight sensor that may interfere with its sensor function.

Ventilation


- When running the air conditioner for a long time, turn the lever to the FRESH position once an hour to carry out ventilation and cooling.
- If you smoke when the air conditioner is on, the smoke may start to hurt your eyes, so open the window and turn the lever to FRESH for a while to remove the smoke while continuing the cooling.

Temperature Control

When the cooler is on, set the temperature so that it feels slightly cool when entering the cab (5 or 6 °C) lower than the outside temperature). This temperature difference is considered to be the most suitable for your health, so always be careful to adjust the temperature properly.


Inspection and maintenance of Air Conditioner Equipped Machine

- When carrying out inspection and maintenance on machines equipped with an air conditioner, carry out the inspection and maintenance according to the chart. For details, see “CHECK AND MAINTENANCE AIR CONDITIONER (4-41), CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST (4-53), CLEAN AIR CONDITIONER FRESH/RECIRC FILTERS (4-62)”.
- When the air conditioner is not being used every day, to prevent loss of the film of oil at various parts, run at the engine at low speed from time to time and carry out cooling or dehumidifying heating for several minutes.
- If the temperature inside the cab is low, the air conditioner may not work. In this case, circulate fresh air to warm the inside of the cab. When the air conditioner switch is turned ON, the air conditioner will work.
- If any abnormality is detected in any equipment or sensor used on the air conditioner, “A/C Controller Error” is displayed on the air conditioner monitor screen. If “A/C Controller Error” is displayed, please ask your Komatsu distributor to carry out inspection and repair.

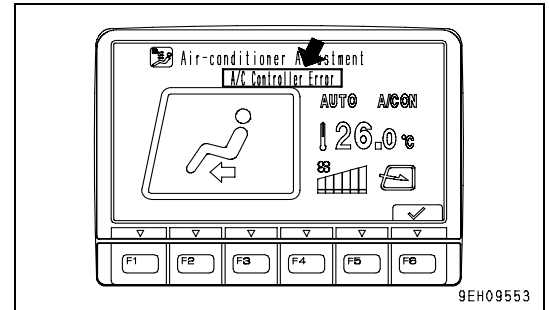

RADIO

Control Panel

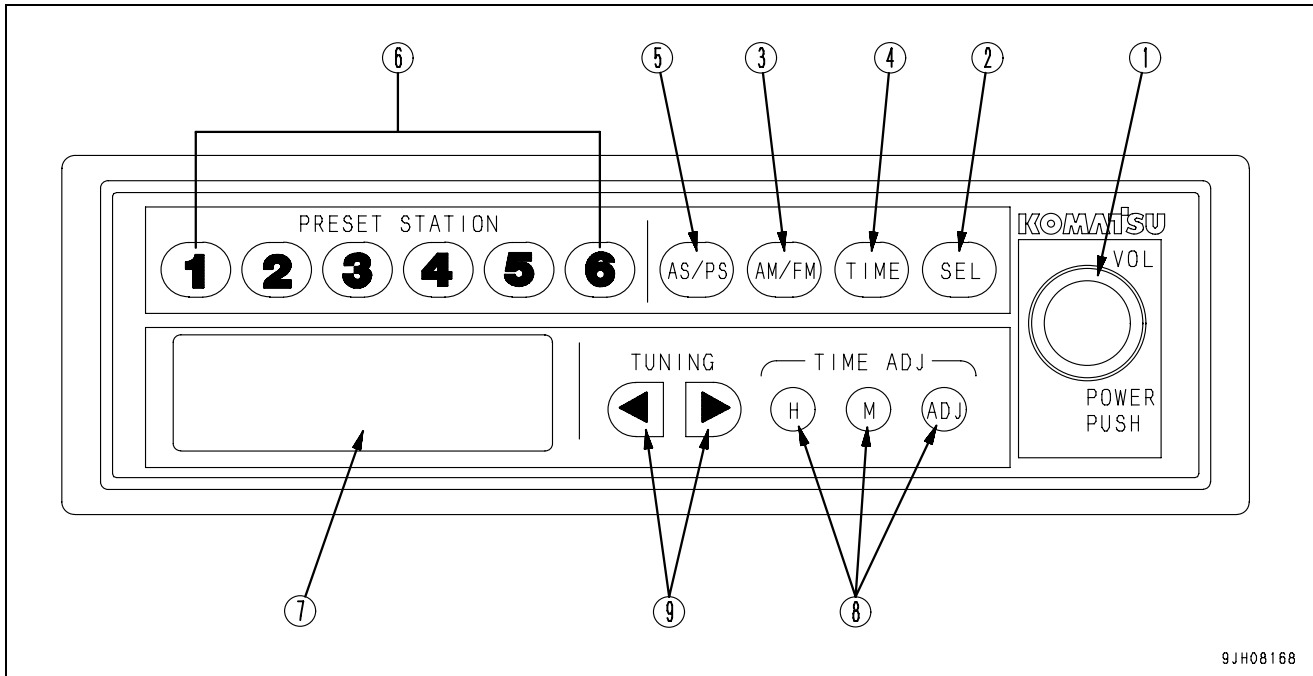

9JH08168

- | | |
|---|--|
| (1) Power switch, Volume control knob, Balance control knob | (5) AS/PS button |
| (2) SEL button | (6) Preset station buttons (1,2,3,4,5,6) |
| (3) FM/AM selection button | (7) Display |
| (4) Display selection button | (8) Time reset button |
| | (9) Tuning button |

Power switch, Volume control knob, Balance control knob

Press this knob (1) to turn the power for the radio on. The frequency is displayed on display (7). Press the knob again to turn the power off.

Turn the knob clockwise to increase the volume; press counterclockwise to reduce the volume. The range for the volume is VOL 0 - VOL 40.

SEL button

Each time this button (2) is pressed, the mode changes as follows: VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance). The mode is displayed on display (7). For details of each mode, see "Method of Operating Mode (3-103)".

FM/AM Selection Button (AM/FM)

Press this button (3) to select the desired band.

Each time the button is pressed, the band changes FM → AM → FM . . .

Display Selection Button (TIME)

On this machine, priority is given to the frequency display. When the frequency is being displayed, press button (4) and the display will show the present time for 5 seconds. After 5 seconds pass, the display returns automatically to the frequency display. If any button other than TIME ADJ (H, M, ADJ) is pressed within 5 seconds, the display returns to the frequency display. For details of the method of adjusting the time, see "Setting Correct Time (3-103)".

AS/PS button

This button (5) actuates the auto store and preset scan functions.

- Auto store
If this button is kept pressed for at least 2 seconds during radio reception, it will automatically search for six available AM and FM stations each, starting with the lowest frequency and going up to the highest frequency. These frequencies can then be saved in the preset memory.
- Preset scan
If this button is pressed within 2 seconds, it is possible to select one of the already preset stations. Wait for 6 sec. after pressing the button and then press the button again to select the next preset station. If it is impossible to receive the preset frequency, the selection advances after 1 second to the next preset station.

Preset Station Buttons (1, 2, 3, 4, 5, 6)

If this button (6) has been used to decide which stations to preset, it is possible to select the desired station at a touch. It is possible to preset 6 stations each for both AM and FM.

For details of the method of presetting the stations, see "Method of Setting with Preset Button (3-102)".

REMARK

The preset button can be used to save the frequency manually. To save the frequency automatically, use the Auto store button.

Display

This display (7) shows the reception band, frequency, preset No., and time.

Time Reset Button

Use this button (8) when adjusting the time. For details of the method of adjusting the time, see "Setting Correct Time (3-103)".

H: Hour

M: Minute

ADJ: Sets to 00 minutes

Tuning Button (TUNING)


Use this button (9) to change the frequency.

For further details, see "Method of Tuning (3-102)".

Controls of Radio

Method of Setting with Preset Button

1. Press power switch (1) and display the frequency on display (7).
2. Use tuning button (9) to set to the desired frequency. There are two methods for tuning: auto tuning and manual tuning.
3. With the display (7) showing the desired frequency, keep the desired Preset button No pressed for at least 1.5 seconds. The reception sound will disappear, but when the presetting operation (saving to memory) is completed, the sound will appear again and the Preset No and frequency will be shown on the display to show that the presetting operation has been completed.

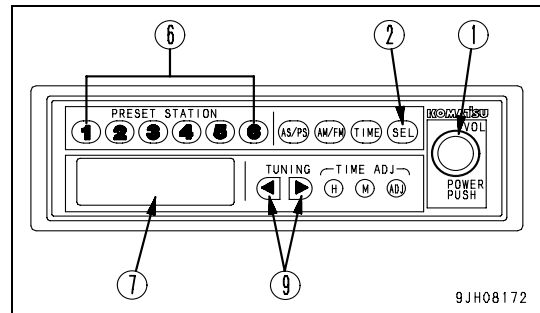

After completing the presetting, press Preset button (6) and release it within approx. 1.5 seconds. This will make it possible to receive the channel preset to that button. One channel each for AM and FM can be preset to each Preset button.

REMARK

It is also possible to save to the Preset button by using the auto store button.

Method of Tuning

1. Press power switch (1) and display the frequency on display (7).
2. Use tuning button (9) to set to the desired frequency. There are two methods for tuning: auto tuning and manual tuning.

- Manual tuning

Press tuning button (9) until the frequency is displayed on display (7).

< button: Frequency moves down

> button: Frequency moves up

When the frequency reaches the top or bottom frequency, it automatically continues as follows: Top → Bottom, or Bottom → Top.

- Auto tuning

Press tuning button (9) for at least 3 seconds. When a station is picked up, the tuning automatically stops. To search for the next station, press the tuning button again for at least 3 seconds.

< button: Frequency moves down

> button: Frequency moves up

If this button is pressed during auto tuning, the auto tuning will be cancelled and the setting will return to the frequency in use before the button was pressed.

Method of Operating Mode

- (BAS) Bass adjustment: When button (2) is pressed, BAS is displayed on display (7). If knob (1) is turned clockwise within 5 seconds, the bass sound is emphasized. If the knob is turned counterclockwise, the bass sound is reduced.
- (TRE) Treble adjustment: When button (2) pressed, TRE is displayed on display (7). If knob (1) is turned clockwise within 5 seconds, the treble sound is emphasized. If the knob is turned counterclockwise, the treble sound is reduced.
- (BAL) Balance adjustment: When button (2) is pressed, BAL is displayed on display (7). If knob (1) is turned clockwise within 5 seconds, the sound from the right speaker is increased. If the knob is turned counterclockwise, the sound from the left speaker is increased. When it is set to BAL 0, the sound from the left and right speakers is balanced.

REMARK

With each mode, the display is returned automatically to its original setting after 5 seconds.

Setting Correct Time

1. Press display selector button (4) to display the time.

After 5 seconds, the display will return to the frequency display and the time cannot be corrected. If this happens, press display selector button (4) again.

2. Press time adjustment button (8) to select Hour or Minute.

H button: Adjusts the hour (each time the button is pressed, the time advances by one hour)

M button: Adjusts the minute (each time the button is pressed, the time advances by one minute)

If the H or M button is kept pressed, the time will advance continuously until the button is released.

ADJ button: When the ADJ button is pressed, the time is reset as follows.

When display is 00 - 05 minutes, time is returned to 00 min. 00 sec. (No change in hour)

When display is 55 - 59 minutes, time is advanced to 00 min. 00 sec. (Hour advances)

When display is 06 - 54 minutes, time cannot be reset. (Time stays same)


Example

10:05 → 10:00

10:59 → 11:00

10:26 → 10:26

Use the H, M, and ADJ buttons to set to the correct time.

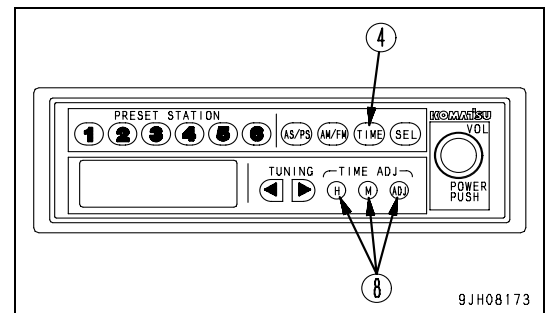


Antenna

Before transporting the machine putting it inside a building, stored the antenna to prevent any interference.

Stow the antenna as follows.

1. Loosen antenna mounting bolt (1) and store the antenna at position (A).
2. Tighten bolt (1).

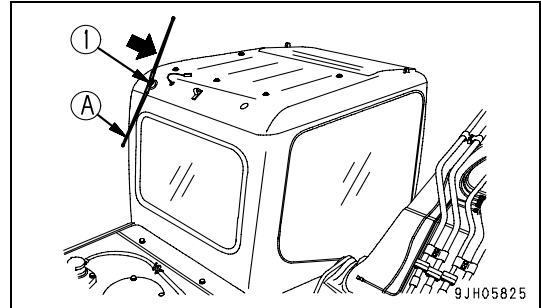

Use Radio with Care

- To ensure safety, always keep the sound to a level where it is possible to hear outside sounds during operation.
- If water gets into the speaker case or radio, it may lead to an unexpected failure, so be careful not to get water on the equipment.
- Do not wipe the scales or buttons with solvent such as benzene or thinner. Wipe with a dry soft cloth. If the dirt cannot be removed easily, soak the cloth with alcohol.
- When the battery is replaced, the settings for the preset buttons are all cleared, so set them again.

Space for radio cassette

The radio cassette is not factory fitted. If fitment is required then remove front cover and connect speaker wires and aerial to radio cassette.

Please contact your distributor for a fitting instruction.

NOTE: If radio is fitted in this location, do not operate radio in LH console.



AUXILIARY ELECTRIC POWER


24V Power Source

NOTICE

Do not use this as the power supply for 12V equipment.
It will cause failure of the equipment.

Pull out the connector plug for taking out electric power from the rear side of the panel.


Maximum usable electric power is 85 W (24 V x 3.5 A).

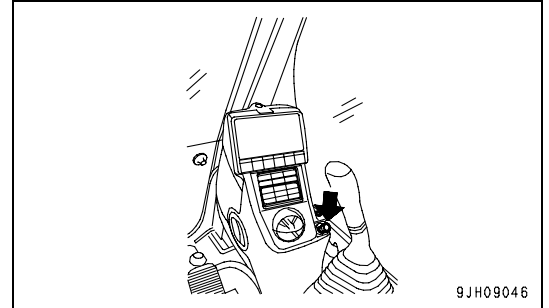

12V Power Source

(If equipped)

This power source can be used up to a capacity of 60W (12V x 5A).

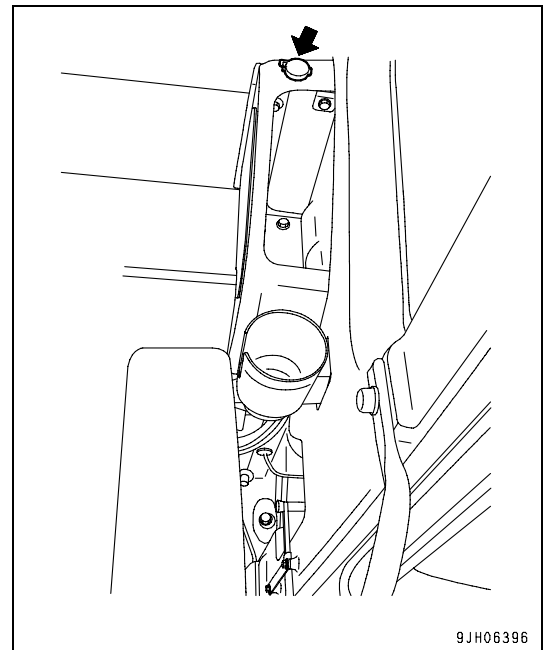


FUSE

NOTICE

Before replacing a fuse, be sure to turn off the starting switch.


- The fuse holder is at the rear right of the operator's seat.
- The fuses protect the electrical equipment and wiring from burning out.
- If the fuse becomes corroded, or white powder can be seen, or the fuse is loose in the fuse holder, replace the fuse.
- Replace the fuse with another of the same capacity.

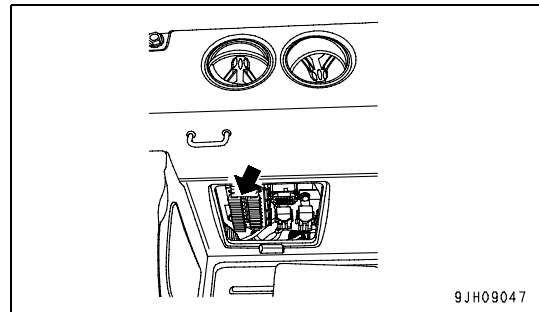

9JH09047

Fuse Capacities and Circuit Names

No.	Fuse capacity	Name of circuit
(1)	10A	Working lamp relay, hazard switch
(2)	30A	Solenoid valve
(3)	10A	PPC hydraulic lock solenoid
(4)	10A	Window washer, cigarette lighter
(5)	10A	Horn
(6)	10A	Auto pre heater, lower wiper
(7)	10A	Rotating lamp, heated mirror (if fitted)
(8)	20A	Working lamp, rear lamp
(9)	10A	Radio, speaker, L.H. lever (power max, quick coupler switch), hydraulic ladder, quick coupler solenoid.
(10)	10A	Refuel pump.
(11)	20A	Air conditioner unit
(12)	20A	Rear worklamp
(13)	20A	Work lamp relay, cab lamp
(14)	30A	Optional power source (1), auto grease.
(15)	20A	Optional power source (2), travel alarm, 12V power supply, heated air suspension seat
(16)	10A	Radio backup, room lamp
(17)	20A	Monitor (normal power source), pump controller, starter switch
(18)	10A	Spare
(19)	30A	Engine controller
(20)	5A	Engine controller ACC

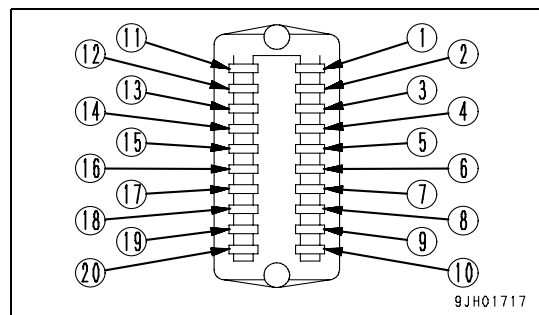

9JH01717


FUSIBLE LINK

If the starting motor does not turn when the starting switch is turned to the START position, there is probably a disconnection in fusible link (1) or (2). Open the battery box cover on the right side of the chassis, then check and replace the fusible link.

(1): Fusible link for 24V power supply

(2): Fusible link for 24V permanent power supply

Fusible link (2) is taped to the nearby wiring harness. When carrying out inspection or replacement, check the wiring harness number.

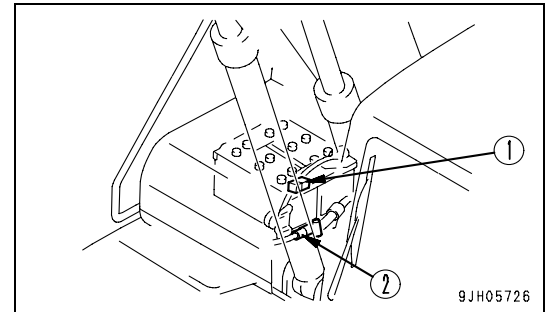

REMARK

A fusible link refers to the large-sized fuse wiring installed in the high current flow portion of the circuit to protect electrical components and wiring from burning, in the same way as an ordinary fuse.

CONTROLLER


Controller installed.

NOTICE

- **Be careful not to get water, mud, or juice on the controller. This will cause failure.**
- **The engine controller has been given moisture prevention treatment, so there is no problem if rain gets on it, but do not spray it with water when washing the machine.**
- **If any abnormality occurs in the controller, do not disassemble it yourself. Contact your Komatsu distributor for repairs.**


- Engine controller

Open the front engine hood. It is under the fuel pre-filter.

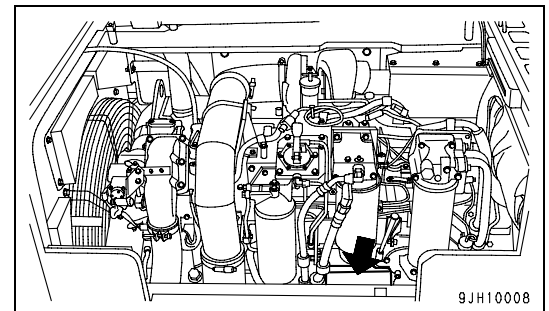

- Pump controller

This is on the right side at the rear of the operator's seat.

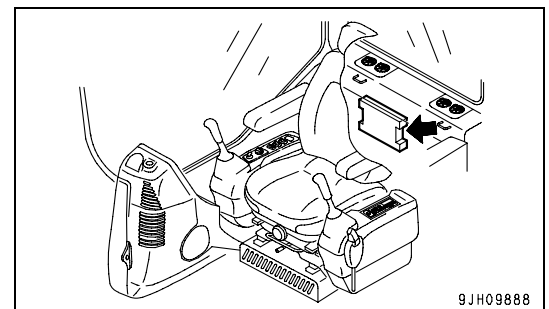


TOOL BOX

Store the tools in this box.

This is inside of the battery box cover on the right side of the machine.


NOTICE

When putting large objects in the toolbox, make sure that they do not contact the battery. This may cause damage to the battery.

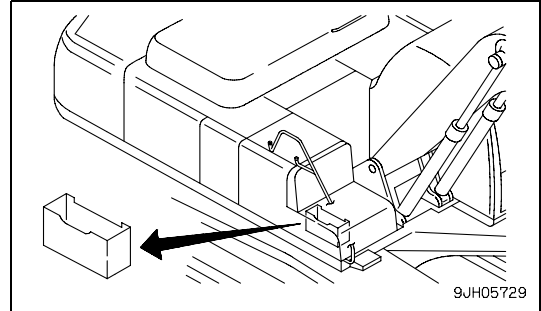

GREASE PUMP HOLDER

This is inside the door at the rear right of the machine. When not using the grease gun, fit it in this holder.

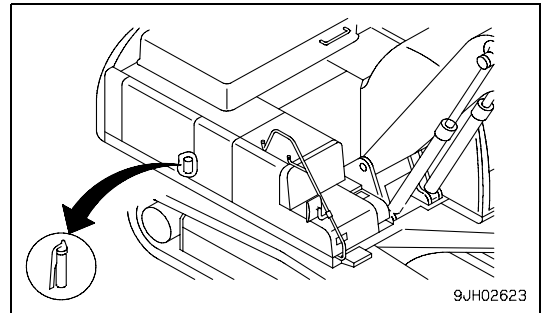


FIRE EXTINGUISHER

(If equipped)

A fire extinguisher is prepared at the rear part inside the operator's cab.

The directions are described on the nameplate affixed to it. Just in case, carefully read and grasp them beforehand.

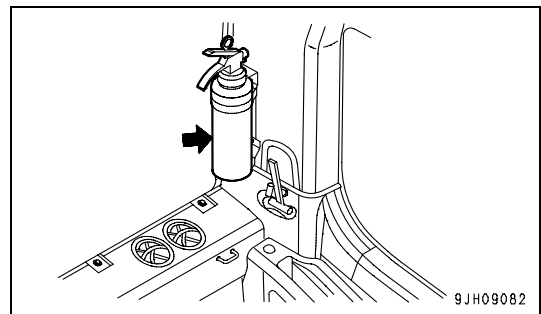

REFUELLING PUMP



WARNING

Do not bring fire or sparks near the fuel.

1. When the machine is operated on sites with no fuel container and pump, the machine may be refuelled using the refuelling pump (if fitted) from fuel barrels. The refuelling pump is located under the air cleaner at the right hand side of the machine.
2. Place the fuel hose (2), which is stored in tray (3) into the fuel barrel placed next to the fuel tank.
3. Switch on refuelling pump using switch (1) on the pump assembly when adding fuel, never let the fuel overflow. This may cause a fires.

NOTICE

- This pump is protected by a fuse (2). If pump fails to function check fuse (10A).
- Ensure strainer on hose end is clean.

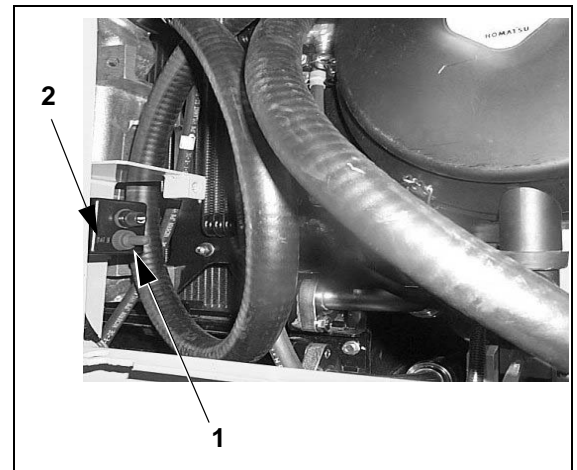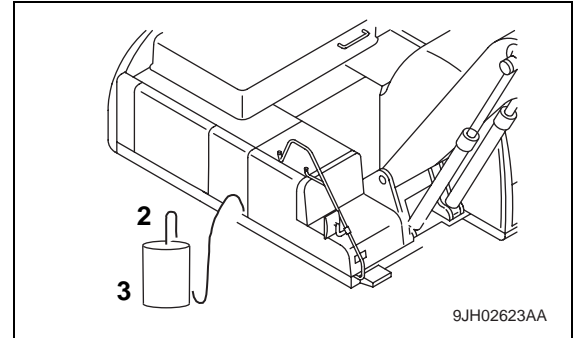

ACCUMULATOR

WARNING

The accumulator is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion which will lead to serious injury or damage. When handling the accumulator, always do as follows. The pressure in the control circuit cannot be completely removed. When removing the hydraulic equipment, do not stand in the direction that the oil spurts out when carrying out the operation.

Loosen the bolts slowly.

Do not disassemble the accumulator.

Do not bring it near flame or dispose of it in fire.

Do not make holes in it or weld it.

Do not hit it, roll it, or subject it to any impact.


When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

This machine is equipped with an accumulator in the control circuit. The accumulator is a device to store oil pressure for the control circuit, and when it is installed, the control circuit can be actuated for a short time even after the engine is stopped. Due to this device, the work equipment lowers under its own weight, if the control lever is moved in the lowering direction.

The accumulator is installed to the position shown in the diagram on the right.

Releasing Hydraulic Pressure With Accumulator

1. Place the work equipment on the ground. Close the crusher attachment jaws, etc.
2. Stop the engine.
3. Turn the key in starting switch to the ON position.
4. Move the safety lock lever to the free position. Move the work equipment control lever and the attachment control pedal to full stroke back and forth, right and left so as to release the pressure in the control circuit.
5. Move the safety lock lever to the lock position. Lock the control lever and attachment control pedal.
6. Turn the key in starting switch to the OFF position.

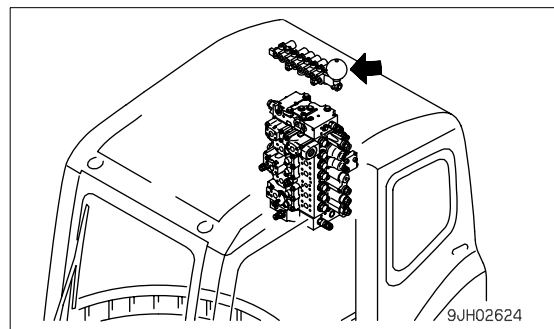

MACHINE OPERATIONS AND CONTROLS

BEFORE STARTING ENGINE

Walk-around Checks

Before starting the engine, walk around the machine and look at the underside of chassis for anything unusual like loose bolts and nuts, leakage of fuel, oil and coolant. Also check the condition of the work equipment and the hydraulic system.

Also check for loose wiring, play, and collection of dust at places that reach high temperature.



WARNING

Remove any flammable materials from around the battery, engine, muffler, turbocharger, or other high temperature engine parts.

Leakage of fuel or oil will cause the machine to catch fire. Check carefully, be sure to repair any problem, or contact your Komatsu distributor.

Perform the following inspections and cleaning every day before starting engine for the day's work.

1. Check for damage, wear, play in work equipment, cylinders, linkage, hoses

Check for cracks, excessive wear, play in work equipment, cylinders, linkage, and hoses. If any problem is found, repair it.

2. Remove dirt and debris from around the engine, battery, and radiator.

Check for dirt accumulated around the engine and radiator. Also check for flammable material (dry leaves, twigs, etc.) around the battery, engine muffler, turbocharger, or other high temperature engine parts. If any dirt or flammable materials are found, remove them.

For the method of removing dirt from the radiator, see "CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTERCOOLER FINS AND CONDENSER FINS (4-61)".

3. Check for coolant and oil leakage around the engine

Check for oil leakage from the engine and coolant leaks from the cooling system. If any problem is found, repair it.

4. Check for oil leakage from hydraulic equipment, hydraulic tank, hoses, and joints

Check for oil leakage. If any problem is found, repair the area where oil is leaking.

5. Check the undercarriage (track, sprocket, idler, guard) for damage, wear, loose bolts, or leakage of oil from rollers.

If any problem is found, repair it.

6. Check for problems in handrails, steps, loose bolts.

If any problem is found, repair it. Tighten any loose bolts.

7. Check for problem in gauges, monitor.

Check for problem in the gauges and monitor in the operator's cab. If any problem is found, replace the parts. Clean off any dirt from the surface.

8. Clean, check rear view mirror

Check that there is no damage to the rear view mirror. If it is damaged repair. Clean the surface of the mirror and adjust the angle so that the area at the rear can be seen from the operator's seat.

9. Seat belt and mounting clamps

Check for damage or wear to the seat belt and mounting clamps. If there is any damage, replace with new parts.

10. Check bucket with hook (if equipped) for damage.

Check for damage to the hook, guide, and hook mount. If any problem is found, contact your Komatsu distributor for repairs.

11. Check, clean rear-view monitor


Check that there is no problem with the rear-view monitor. If any problem is found, contact your Komatsu distributor and ask for repairs to be carried out.

Checks Before Starting

Always check the items in this section before starting the engine each day.

Drain Water And Sediment from Fuel Tank

1. Set a container under the drain hose to catch the drained fuel.
2. Turn drain valve (1) to the OPEN (O) position and drain all the sediment and water accumulated at the bottom together with the fuel.
3. When clean fuel comes out, turn drain valve (1) to the CLOSE (S) position.



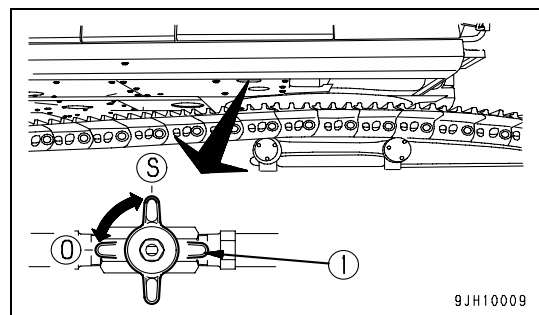


Check Oil Level in Hydraulic Tank, Add Oil

⚠ WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Set the work equipment in the posture shown in the diagram on the right, then check the oil level and add oil if necessary.
2. If the work equipment is not in the condition shown in the diagram on the right, start the engine, run the engine at low speed, retract the arm and bucket cylinder rods fully, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.
3. Within 15 seconds after stopping the engine, move each control lever (for work equipment and travel) to the full stroke in all directions to release the internal pressure.
4. Check sight gauge (G). The oil level should be between the H and L marks.
5. If the level is below the L mark, add oil through oil filler (F) at the top of the hydraulic tank.

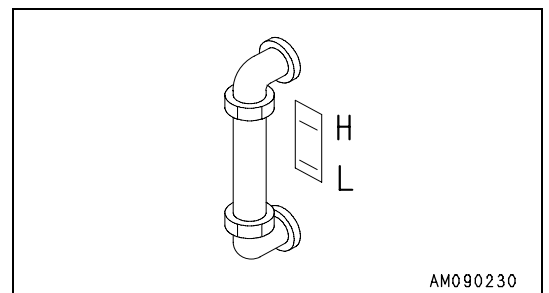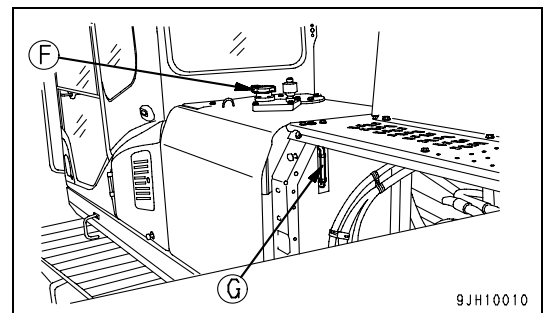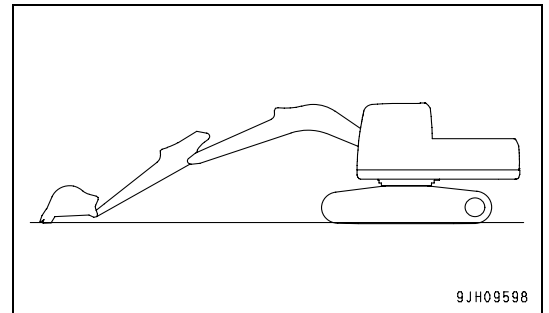


REMARK

The oil level will vary depending upon the oil temperature. Accordingly, use the following as a guide:
 Before starting operation: Between H and L levels (Oil temperature 10 to 30°C)
 Normal operation: Around H level (Oil temperature 50 to 80°C)

NOTICE


Do not add oil above the H line. This will damage the hydraulic circuit or cause the oil to spurt out. If oil has been refilled, exceeding the H level, swing the upper structure until drain plug (P) beneath the hydraulic tank comes between the right and left track shoes and stop the engine. Wait for the oil to cool down sufficiently, then remove cover (1) and drain the excess oil through drain plug (P).

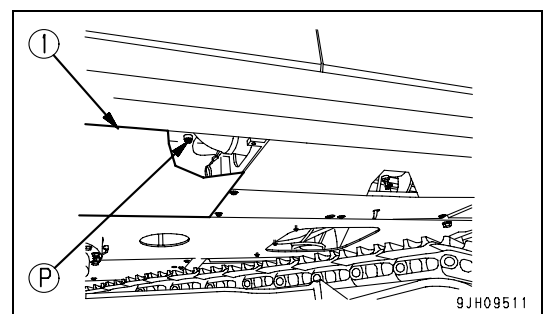

Check Oil Level in Engine Oil Pan, Add Oil**⚠ WARNING**


Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

1. Open the front engine hood.
2. Remove dipstick (G), and wipe the oil off with a cloth.
3. Fully insert dipstick (G) into filler pipe (F), then remove it.

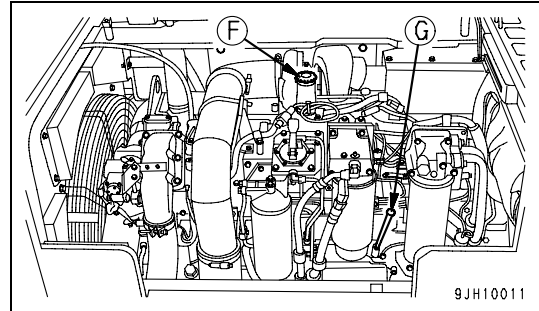

4. The oil level should be between the H and L marks on dipstick (G).

If the oil level is below the L mark, add oil through oil filler (F).

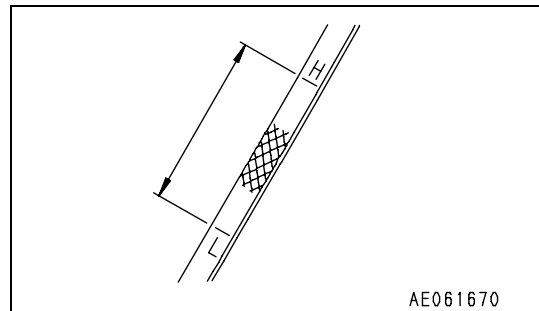


5. If the oil is above the H mark on the gauge, remove cover (1), drain the excess oil from drain valve (P) at the bottom of the engine oil pan, then check the oil level again.

6. If oil level is correct, securely tighten the oil filler cap and close the engine hood.

REMARK


When checking the oil level after the engine has been operated, wait for at least 15 minutes after stopping the engine before checking.

If the machine is at an angle, make it horizontal before checking.

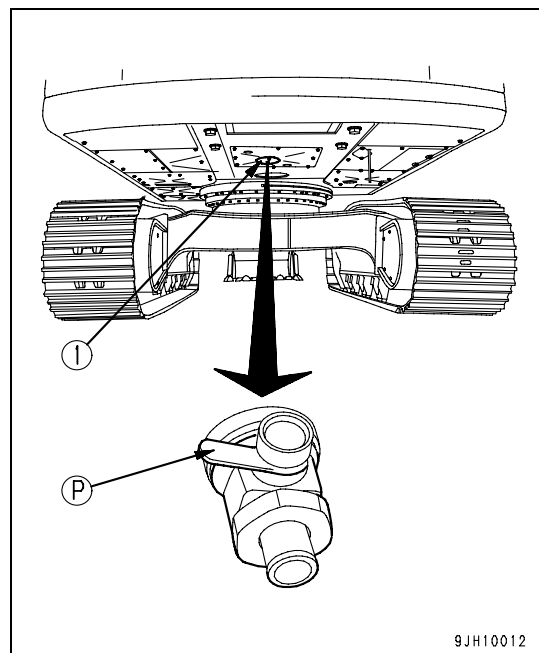


Check for Water and Sediment in Water Separator, Drain Water

1. Open the front engine hood.
2. The water separator forms one unit with fuel pre-filter (1).

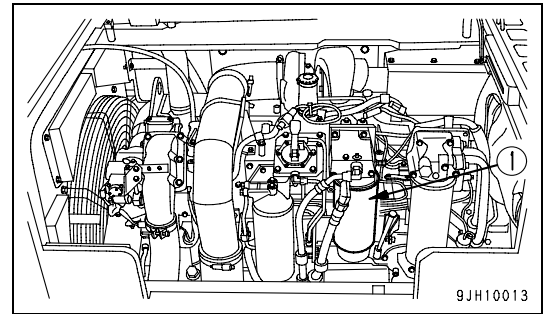

3. It is possible to judge the water level and amount of sediment by looking through transparent cap (2). If there is any water or sediment collected at the bottom, set a container to catch the drain water under drain hose (3).
4. Loosen drain valve (4) and drain the water.
5. When fuel starts to drain from drain hose (3), tighten drain valve (4) immediately.



Tightening torque: 0.2 to 0.45 Nm (0.02 to 0.046 kgm)

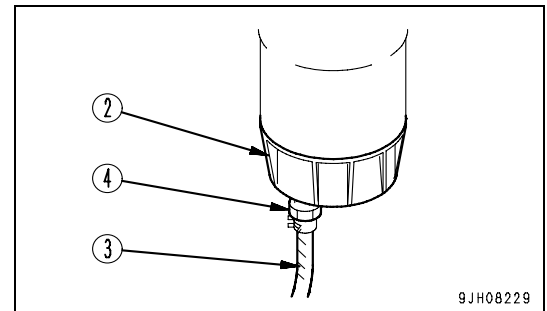

Check Coolant Level, Add Coolant**⚠ WARNING**

- Do not open the radiator cap unless necessary. When checking the coolant, always wait for the engine to cool down and check the sub tank.
- Immediately after the engine is stopped, the coolant is at a high temperature and the radiator is under high internal pressure. If the cap is removed to check the coolant level in this condition, there is a hazard of burns. Wait for the temperature to go down, then turn the cap slowly to release the pressure and remove it carefully.

1. Open the rear engine hood and check that the cooling water level is between the FULL and LOW marks on the sub-tank (1). If the water level is low, add water through the water filler of sub-tank (1) to the FULL level.
2. After adding coolant, tighten the cap securely.
3. If the sub-tank (1) is empty, there is probably leakage of coolant. After inspecting, repair any problem immediately. If there is no problem, check the coolant level in the radiator. If the coolant level is low, add coolant to the radiator, then fill the sub-tank (1).

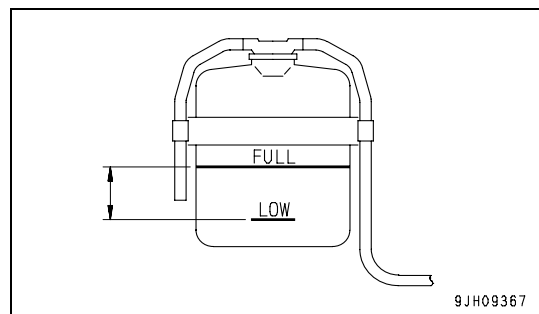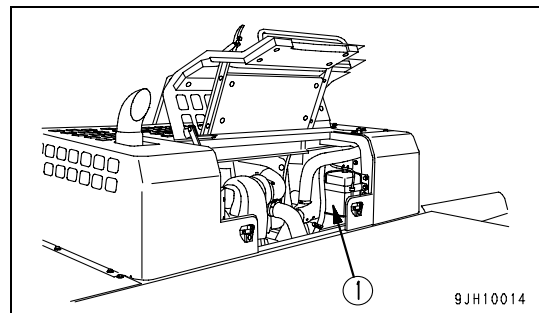

Check Electric Wiring

CAUTION

If fuses are frequently blown or if there are traces of short-circuiting on the electrical wiring, promptly ask your Komatsu distributor to locate the cause and make the repair.

Keep the top surface of the battery clean and check the breather hole in the battery cap. If it is clogged with dirt or dust, wash the battery cap to clear the breather hole.

Check that there is no damage to the fuses; that fuses of the specified capacity are used; that there is no disconnection or trace of short-circuiting in the electric wiring and no damage to the covering. Check also that there is no loosened terminals. If any, tighten them.

Moreover, pay particular attention to the electric wiring when checking the battery, engine starting motor and alternator.

Be sure to check that there is no inflammable material accumulated around the battery. If any is found, remove immediately.

Check Fuel Level, Add Fuel

WARNING


When adding fuel, never spill the fuel or let it overflow. It will cause fire.

If any fuel has spilled, wipe it up completely. If fuel has spilled over soil or sand, remove that soil or sand.

Fuel is highly flammable and dangerous. Never bring flames near fuel.

1. Turn the engine starting switch to the ON position and check the fuel level gauge (1) on the monitor panel for fuel level.

After checking, turn the switch back to the OFF position.


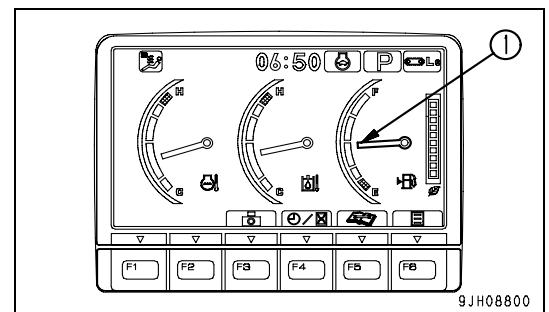


- If fuel is found to be low, unscrew fuel filler cap (F) on the fuel tank and add fuel through the filler port until float gauge (G) comes up to the highest point.

Fuel tank capacity: 650 liters


Position of tip (a) of float gauge (G) when fuel tank is full:
Approx 50 mm

- After adding fuel, push float gauge (G) straight down with fuel filler cap (F). Be careful not to get float gauge (G) caught in the tab of fuel filler cap (F), and tighten fuel filler cap (F) securely.

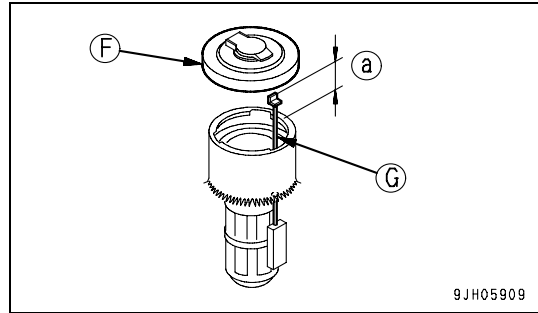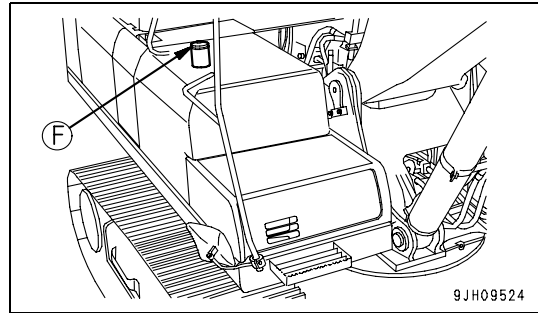

REMARK

If breather hole (3) on the cap is clogged, the pressure in the tank will drop and fuel will not flow. Clean the hole from time to time.

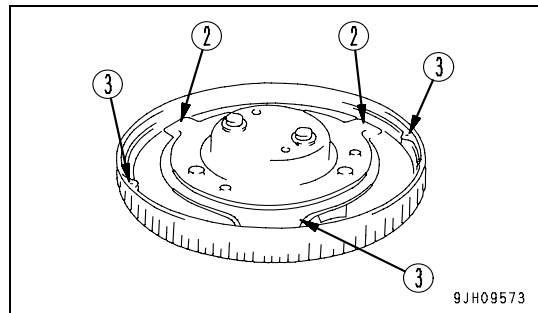


Check Working Lamp Switch

Check that the working lamps and lamps inside the instruments light up properly. Check also that there is no dirt or damage.

If any lamp does not light up, the bulb is probably blown up or there is a disconnection, so ask your Komatsu distributor to carry out repairs.


- Turn the starting switch to the ON position.
- Turn the lamp switch ON (night mode (a), and day mode (b)) and check that the working lamp lights up.

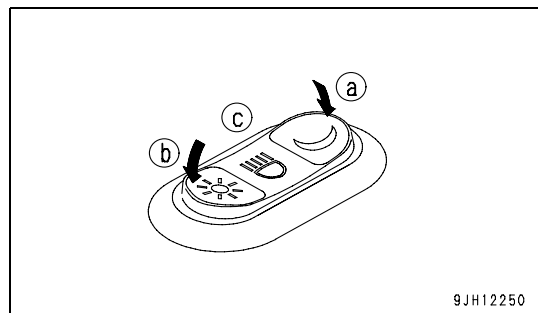

Check Function of Horn

1. Turn the starting switch to the ON position.
2. Confirm that the horn sounds immediately when the horn button is pressed.

If the horn does not sound, contact your Komatsu distributor for repair.

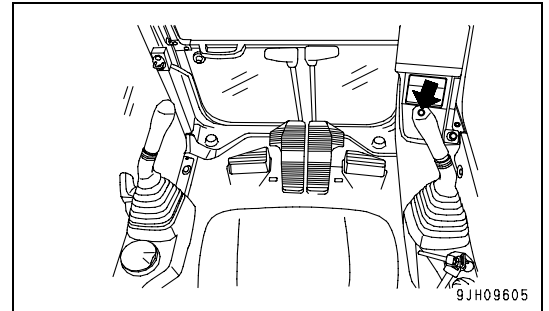

Adjustment

Seat Adjustment



WARNING

When adjusting the position of the operator's seat, always set the lock lever to the LOCK position to prevent any accidental contact with the control levers.

- Always adjust the operator's seat before starting each operation or when the operators change shift.
- Adjust the operator's seat so control levers and switches can be operated freely and easily with the operator's back against the backrest.

(A) Fore-and-aft adjustment

Pull lever (1) up, set the seat to the desired position, then release the lever.

Fore-and-aft adjustment: 160 mm (16 stages)


(B) Adjusting reclining

REMARK

The seat can be reclined more when the seat is pushed to the front. The amount of reclining decreases as the seat is pushed back, so when moving the seat back, return the seat back to the upright position.

Pull up lever (2) and set the backrest to a position that is comfortable for operation, then release the lever.

Sit with your back against the seat backrest when adjusting. If your back is not against the backrest, the backrest may suddenly move forward.

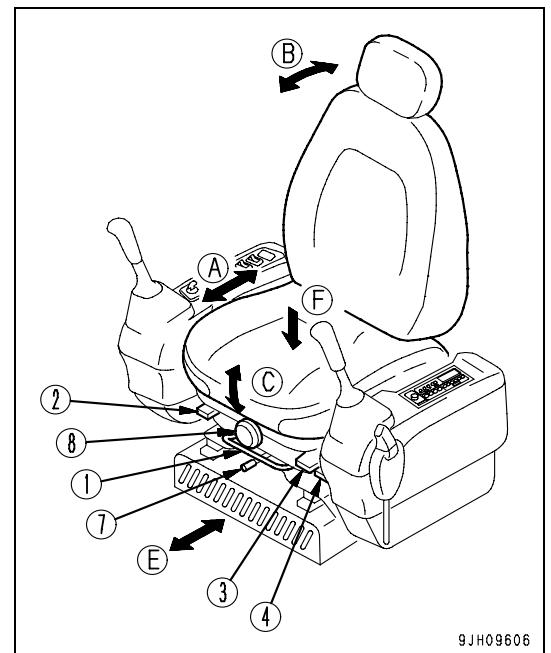

(C) Adjusting seat tilt

- Forward tilt

Push lever (3) down to adjust angle of the front of seat. (4 stages)

- To raise the angle at front of the seat, keep the lever pushed down and apply your weight to the rear of seat.
- To lower the angle at front of the seat, keep the lever pushed down and apply your weight to the front of seat.

- Rear tilt

Pull lever (4) up to adjust angle of the rear of seat. (4 stages)

- To raise the angle at rear of the seat, keep lever (3) pulled up, and stand up slightly to remove your weight from the seat.
- To lower the angle at rear of the seat, keep lever (3) pulled up, and apply your weight to the seat.

Amount of tilt: Up 13°, down 13°

- Adjusting seat height

It is possible to move the seat up or down by combining adjustments forward tilt and rear tilt.


After setting the forward tilt or rear tilt to the desired height, operate the opposite part to set the seat horizontal then secure in position.

Height adjustment: 60 mm

(D) Adjusting armrest height

The height of armrest (5) can be adjusted up or down by changing the position of adjustment bolt (6) at the rear of the armrest.

Armrest height adjustment: 33 mm

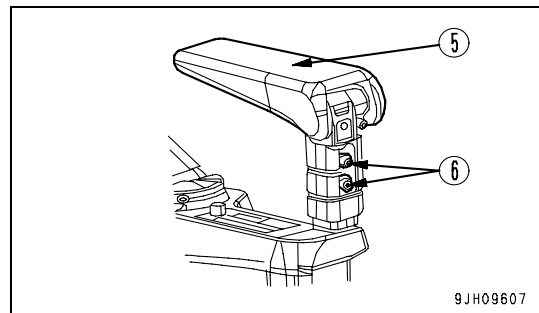

(E) Overall fore-and-aft adjustment of seat

Move lever (7) to right, set to the desired position, then release the lever. In this case, the operator's seat, left and right control levers, and lock lever all slide together.

Fore-and-aft adjustment: 180 mm (9 stages)

(F) Adjusting suspension


Turn knob (8) to the right to make the suspension harder, or to the left to make the suspension softer. Adjust the reading of the dial to match the operator's weight and select the optimum suspension.

REMARK

To obtain the optimum adjustment, turn the knob (8) so that the indicator of the weight display (kg) in the transparent portion of knob (8) is the same as the operator's weight.

(G) Adjusting suspension
(air suspension seat (if equipped))

Push switch (9) to make the suspension harder.
Pull switch (9) to release the air and make the suspension softer. (The sound of air being released can be heard.)
Range of adjustment for operator's weight: 60-150 kg

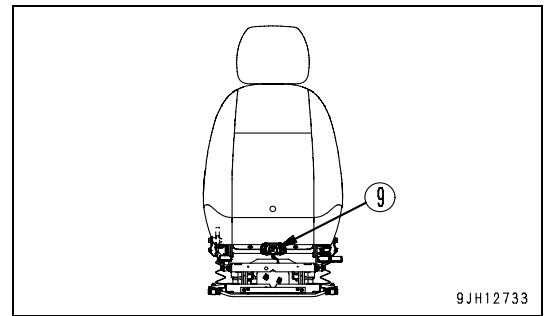



(H) Heated seat

Turn the heated seat switch ON to warm the seat cushion and the seat back.


Adjusting Angle of Rear View Camera

If the image on the monitor is not aligned correctly, remove cover (1) and adjust the mounting angle (A) of the rear view camera.

Amount of adjustment of angle (A): Within a range of 35°-80°

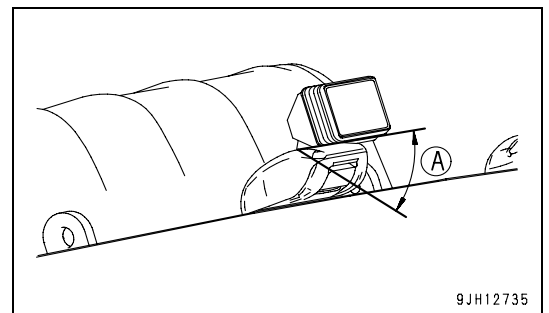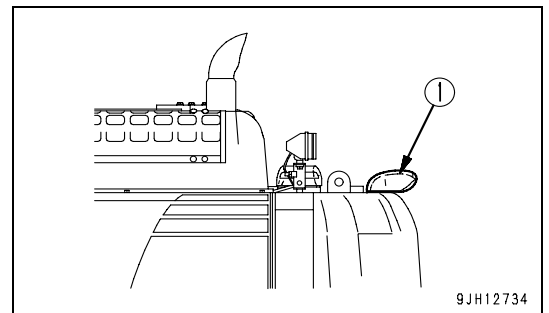

1. When removing cover (1), insert a flat-headed screwdriver into the hole of cover (2), push the tooth on the inside, and remove the cover.
2. Remove 2 bolts (3).
3. Remove cover (1).

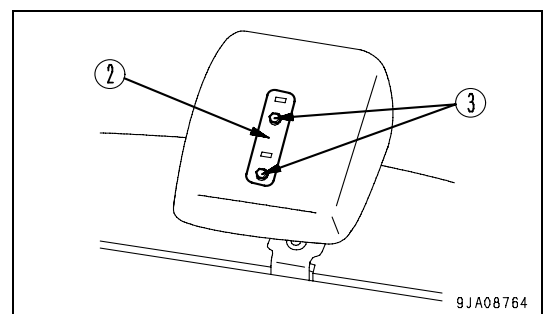



- Loosen mounting bolt (4) of the camera and adjust mounting angle (A) of the camera so that the center line of mounting bolt (4) is aligned with fourth-from-bottom scale (B).

REMARK

Part of the machine is shown on the monitor screen.

- After adjusting, tighten bolt (4).


Tightening torque: 3-5 Nm (0.3-0.5 kgm)

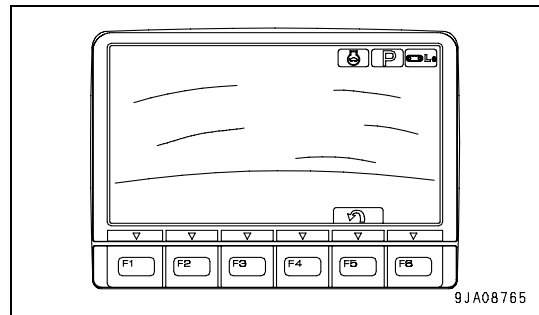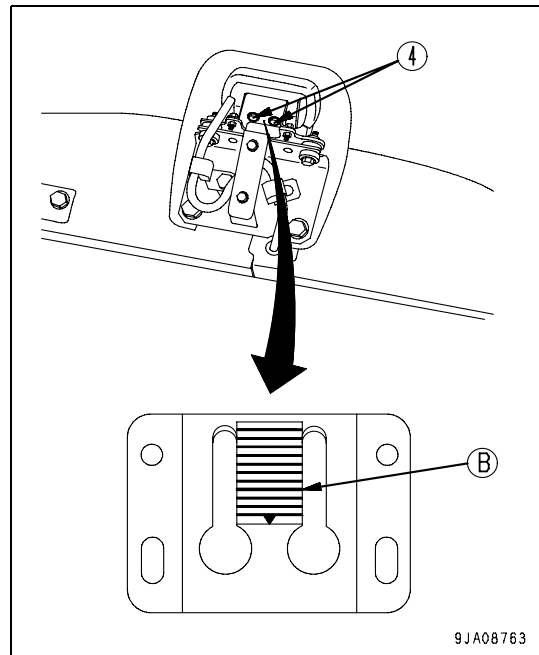

Rear View Mirrors

WARNING



Be sure to adjust the mirrors before starting work. If they are not adjusted properly, you cannot secure the visibility and may be injured or may injure someone seriously.

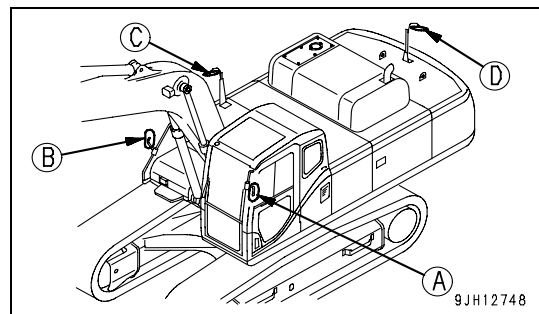

Mirror (A)

Adjust the mirror mount so that it is possible to see people at the rear left of the machine.



- Install the side view mirror in the location indicated in the figure at right.
(L): 60 mm
- Fix mirror securing stay (1) the way the side view mirror stretches outward to the maximum.
- If the side view mirror does not move smoothly when adjusting its angle, loosen mirror securing bolt (2) and mirror securing stay bolt (3).
Tightening torque of bolt (2): 7.85 - 9.81 Nm (0.8 - 1.0 kgm)
- When adjusting the side view mirror angle, make an adjustment so that the side of the machine comes into view on the mirror as shown in the figure at right.

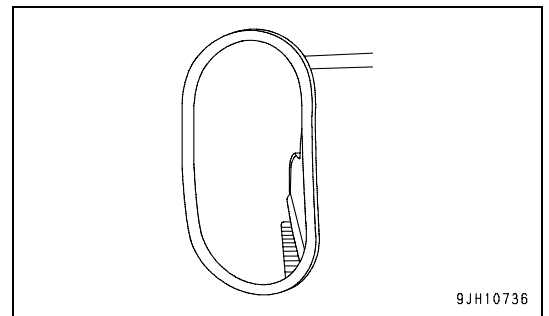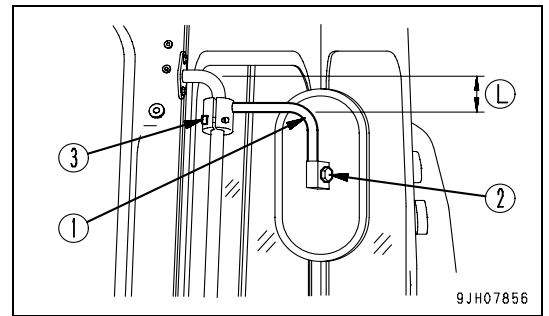

Mirror (B)

Adjust the mirror mount so that it is possible to see people at the rear right of the machine.

- Install the side view mirror in the location indicated in the figure at right.
(M): 40 mm
- If the side view mirror does not move smoothly when adjusting its angle, loosen mirror securing screw (4) and mirror securing stay bolt (5).
Tightening torque of screw (4): 1.96 - 2.94 Nm (0.2 - 0.3 kgm)
- When adjusting the side view mirror angle, make an adjustment so that the side of the machine comes into view on the mirror as shown in the figure at right.

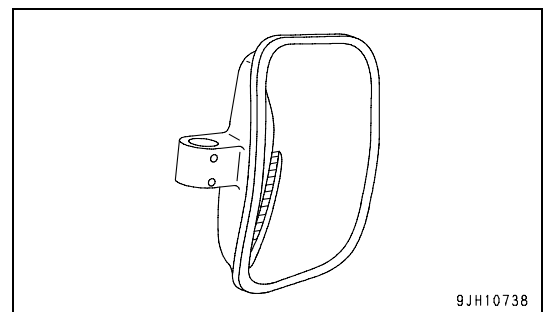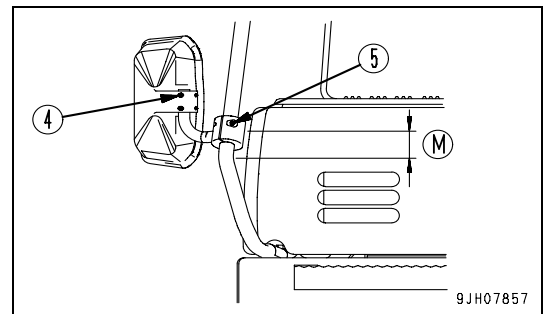


Mirrors (C), (D)

(If equipped)


Adjust the side view mirrors so that people around 1 m away from the machine can be seen.

(W): 1 m

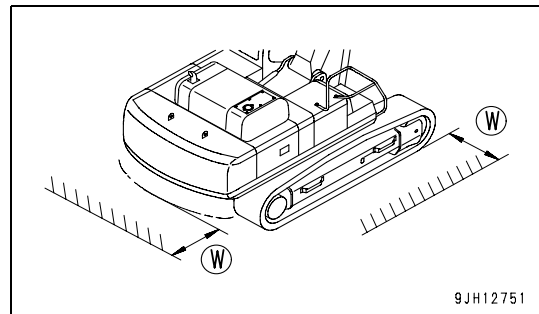


- If side view mirror (C), (D) does not move smoothly when adjusting its angle, loosen mirror securing screw (6).

Tightening torque of screw (6): 0.98 - 1.47 Nm (0.10 - 0.15 kgm)

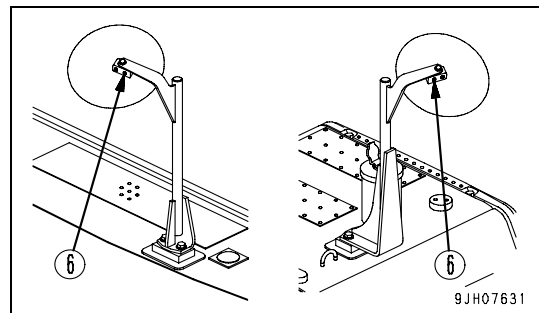

- When installing mirrors (C) and (D), make sure to leave clearance (V) to prevent contact between the mirror and mirror stay.

(V): Min. 10 mm

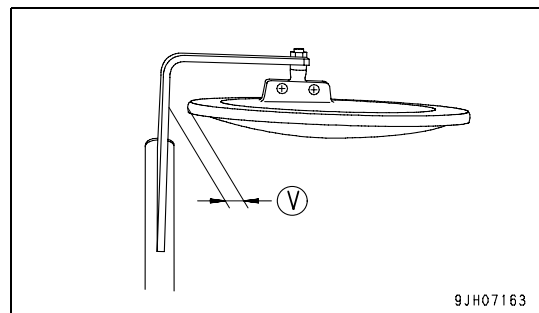

Seat Belt

WARNING

- Before fitting the seat belt, check that there is no problem in the belt mount bracket or mounting belt. If it is worn or damaged, replace the seat belt.
- Even if no problem can be seen in the belt, replace the seat belt every 3 years. The date of manufacture of the belt is shown on the back of the belt.
- Always wear the seat belt during operations.
- Fit the seat belt so that it is not twisted.


Fastening and Removing

This seat belt has a wind-in device, so it is not necessary to adjust the length.

Fastening Seat Belt

Hold grip (2) and pull the belt out from wind-in device (1), check that the belt is not twisted, then insert tongue (3) into buckle (4) securely.

When doing this, pull the belt lightly to check that it is properly locked.

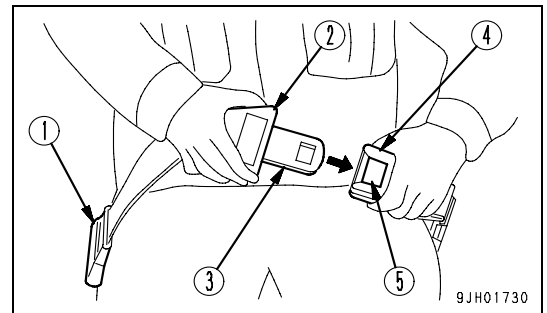

Removing Belt

Press button (5) in buckle (4), and remove tongue (3) from buckle (4).

The belt is automatically wound in, hold grip (2) and return the belt slowly to wind-in device (1).



Operations Before Starting Engine

⚠ WARNING


When starting the engine, check that the lock lever is securely at the LOCK position. If the lock lever is not locked securely and the control levers or control pedal are touched when the engine is started, the machine may move unexpectedly, and this may lead to serious personal injury.

1. Check that lock lever (1) is at the LOCK position (L).
2. Check that each control lever and control pedal is at the Neutral position.

If the control levers and control pedal are not being touched, they will be at the Neutral position.

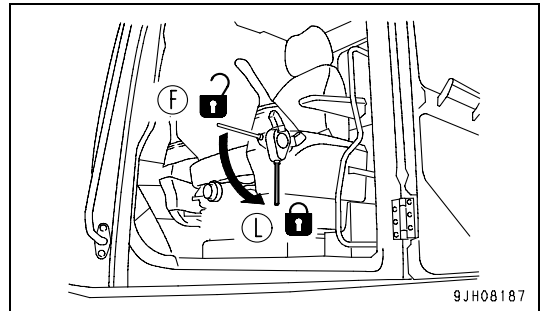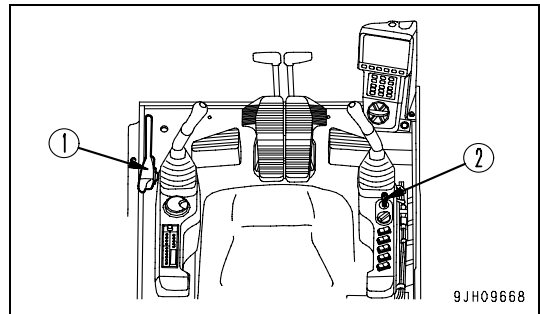

3. Insert the key in starting switch (2), turn the key to the ON position (B), then carry out the following checks.

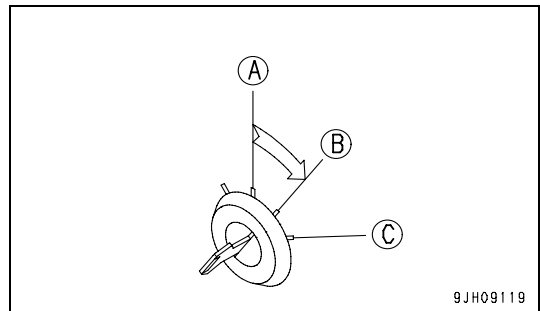


- If a password has been set, the input display screen will be displayed on the monitor screen.

After inputting the password, press Enter switch F6 (3).

REMARK


For details of the method of setting, changing, or canceling the password, see separate "PROCEDURE FOR SETTING, CHANGING, OR CANCELING PASSWORD".

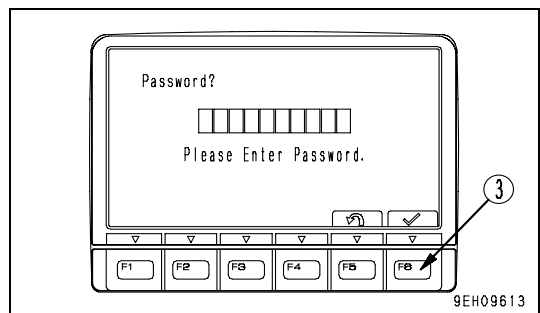

1) The buzzer sounds for approx. 2 seconds, then the monitor or meter lights up for approx. 2 seconds.


- Radiator coolant level monitor (4)
- Charge level monitor (5)
- Engine oil pressure monitor (6)
- Engine oil level monitor (7)
- Air cleaner clogging monitor (8)
- Engine coolant temperature gauge (9)
- Engine coolant temperature monitor (10)
- Fuel gauge (11)
- Fuel level monitor (12)

If any monitor does not light up or the buzzer does not sound, there is probably a failure in the monitor, so please contact your Komatsu distributor for repairs.

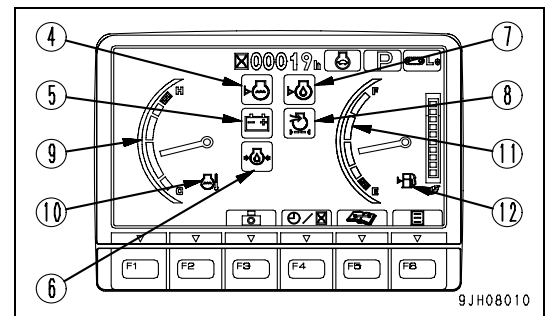


2) After approx. 2 seconds, the screen will change to the working mode/travel speed display monitor. Next, it will switch to the standard screen.


- Engine coolant temperature gauge (9)
- Engine coolant temperature monitor (10)
- Fuel gauge (11)
- Fuel level monitor (12)
- Hydraulic oil temperature gauge (13)
- Hydraulic oil temperature monitor (14)

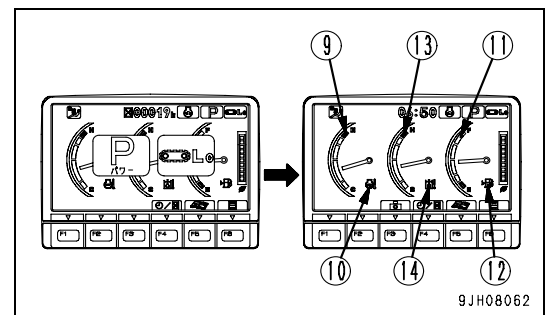

3) If the hydraulic oil temperature gauge goes out and caution lamp (15) stays lighted up red, perform inspection immediately for the item which is lighted up red.

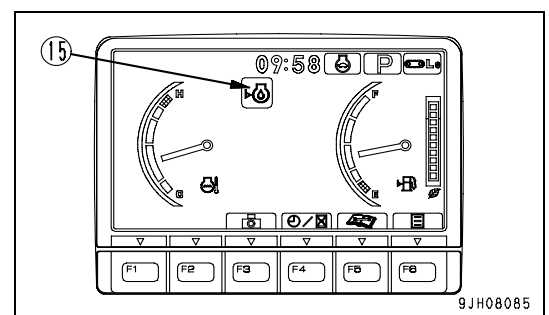

4) If the maintenance interval has passed, maintenance interval monitor (16) lights up for 30 seconds. Press maintenance switch F5 (17), check the item, and carry out maintenance immediately.

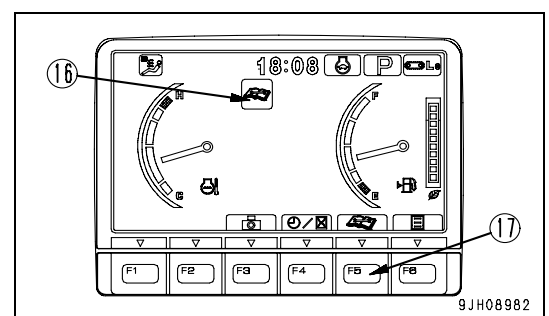

For details of the method of checking the maintenance interval, see "Maintenance Selector Switch (3-39)" in the explanation for each component.


STARTING ENGINE

WARNING

- Start the engine only after sitting down in the operator's seat.
- Do not attempt to start the engine by short-circuiting the engine starting circuit. Such an act may cause a serious bodily injury or fire.
- Check that there are no persons or obstacles in the surrounding area, then sound the horn and start the engine.
- Never use starting aid fluids as they may cause explosions.
- Exhaust gas is toxic. When starting the engine in confined spaces, be particularly careful to ensure good ventilation.

NOTICE


- Before starting the engine, check that fuel control dial (2) is at the low idling (MIN) position. If the fuel control dial is at the full speed (MAX) position, the engine will accelerate suddenly and cause damage to the engine parts.
- Do not keep the key in starting switch (3) at the START position continuously for more than 20 seconds. If the engine does not start, wait for at least 2 minutes, then start again from the beginning.
- After the engine starts, wait for the engine oil pressure monitor to go out. Do not touch the control levers or control pedal while the engine oil pressure monitor is lighted up.

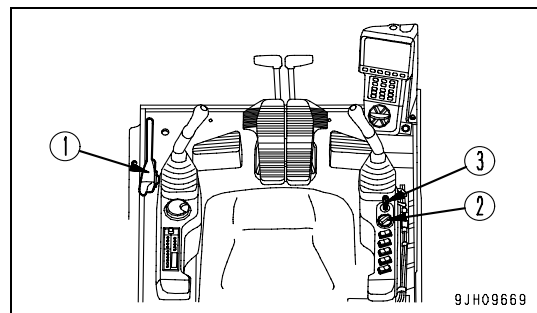


This machine is equipped with an engine automatic preheating device that functions to start the engine preheating automatically.

If the ambient temperature is low, the preheating monitor will light up when the key in starting switch (3) is turned to the ON position to inform the operator that preheating has been started automatically.

1. Check the lock lever (1) is in the LOCK position (L). If the lock lever is in the FREE position (F), the engine does not start.

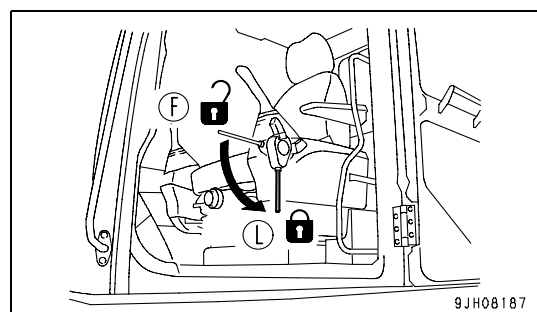


- Set fuel control dial (2) to the low idling (MIN) position.

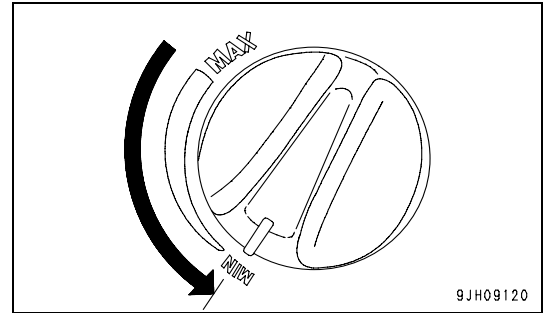

- Turn the key in starting switch (3) to ON position (B).

If the ambient temperature is low, the preheating monitor lights up and automatic preheating is carried out. Keep the key in starting switch (3) at the ON position until the preheating monitor goes out.

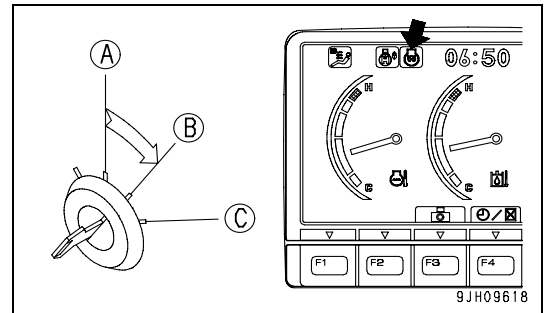


The time that the preheating monitor stays lighted up depends on the ambient temperature as shown in the table on the right.

Ambient temperature	Lighting time
-4 °C to -20 °C	5 seconds to 40 seconds
-20 °C or less	40 seconds


- If the preheating monitor does not light up, or it lights up and then goes out to inform that the engine preheating has been completed, turn the key in starting switch (3) to the START position (C) and start the engine.

REMARK

If the ambient temperature is low, the engine may not start even when the key in the starting switch (3) is kept at the START position for 20 seconds. If this happens, wait for at least 2 minutes, then start again from the beginning.

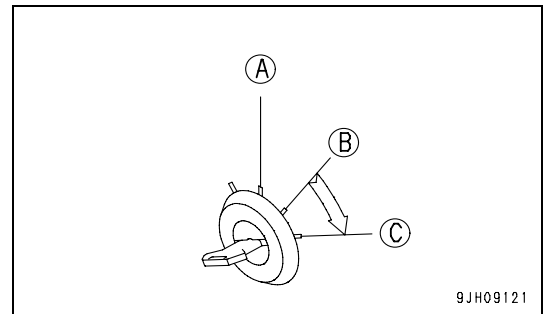


- After the engine starts, release the key in starting switch (3). The key will automatically return to the ON position (B).

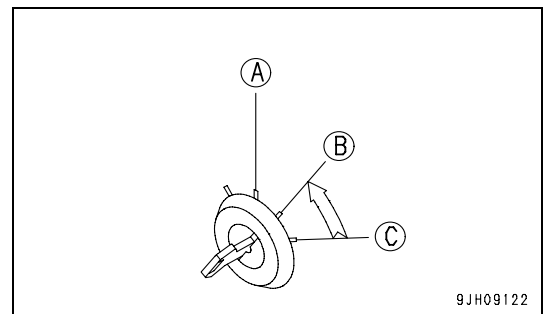

- Even if the engine starts, wait for the engine oil pressure monitor to go out. Do not touch the control levers or control pedal while the engine oil pressure monitor is lighted up.

NOTICE

If the engine oil pressure monitor does not go out even after 4 to 5 seconds have passed, stop the engine immediately. Check the oil level, check for leakage of oil, and take the necessary action.


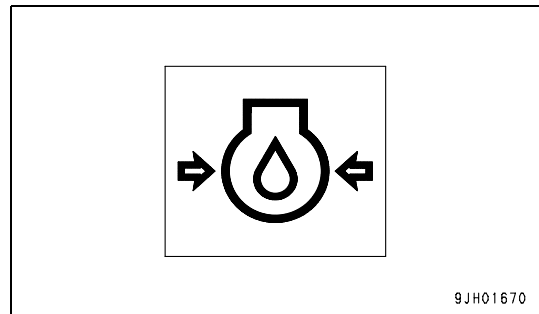


REMARK

Regardless of the ambient temperature, it is possible to start the engine preheating manually.

- Turn the key in starting switch (3) to the left from OFF position (A). The preheating monitor lights up and engine preheating starts. (Preheating continues while the key in starting switch (3) is held at the left position.)
- The preheating monitor starts lighting about 30 seconds after preheating starts and then goes off in about 10 seconds.
- After the preheating monitor goes off, turn the key in starting switch (3) to START position (C). The engine will start.

If the engine cannot be started with the above procedure, wait for at least two minutes, then start again from Step 1.

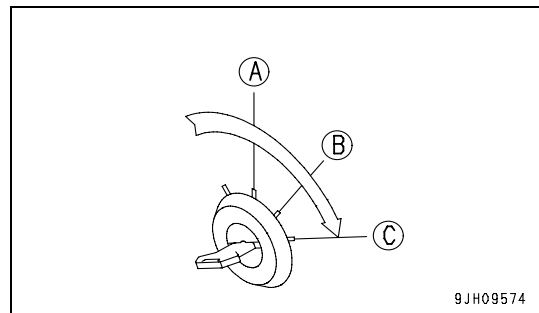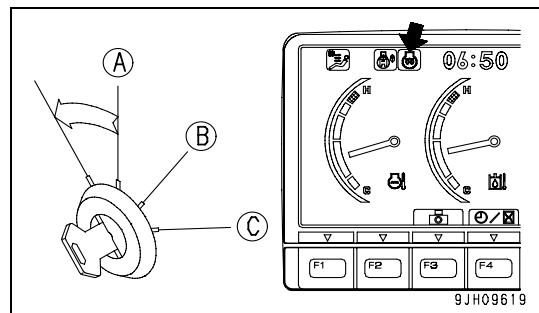

Turbo protect function

The turbo protect function is a function to protect the turbocharger by keeping the engine speed at less than 1000 rpm immediately after the engine is started.


- When the turbo protect function is actuated, the engine speed is held at less than 1000 rpm, regardless of the position of the fuel control dial.
- When the turbo protect function is actuated, the engine speed is held at less than 1000 rpm, even if the fuel control dial is operated.
- When the turbo protect function is canceled, the engine speed is set to the speed for the position of the fuel control dial.
- The relationship between the length of time of actuating the turbo protect function and the temperature of the engine coolant is as shown in the table.

Coolant temperature	Turbo protect time (sec.)
Above 10°C	0
10 to -10°C	Change 0 to 20
below -10°C	20

AFTER STARTING ENGINE

⚠ WARNING

- To stop the engine in emergencies or when the actuation of the engine is abnormal or there is any other trouble, turn the key in the starting switch to the OFF position.
- Do not carry out operations or operate the levers or pedal suddenly while the hydraulic oil is at low temperature. Always carry out the warm-up operation for the hydraulic equipment until the hydraulic oil temperature monitor displays the correct temperature. (When the hydraulic oil temperature is low, the low temperature display shown on the right is given.)
(A) Display when temperature is correct: Monitor background (C) is blue
(B) Display when temperature is low: Monitor background (C) is white)
- If the warm-up operation for the hydraulic equipment is not carried out thoroughly, and the machine is moved, the reaction of the control levers and pedals will be slow and the movement may not be what the operator intended. Always warm up the hydraulic equipment. In particular, in cold areas, always warm up the hydraulic equipment thoroughly.

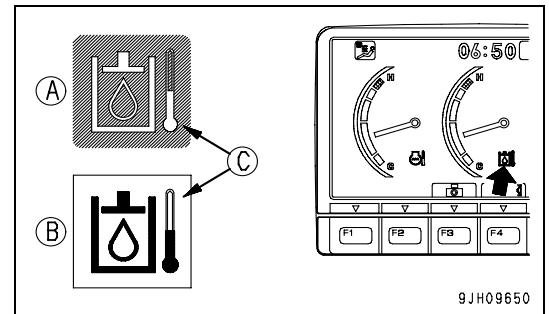


There are two types of warm-up operation: warm up the engine and warm up the hydraulic equipment. In addition, depending on the environment, the method of carrying out the warm-up operation may differ, so carry out the warm-up operation according to the items given in the appropriate section.

(When only the engine is warmed up, the hydraulic equipment is not warmed up, so always carry out the warm-up operation for the hydraulic equipment separately from the warm-up operation for the engine. Warm up the hydraulic equipment thoroughly ensures that the hydraulic oil is warmed up and that warm hydraulic oil circulates in all the control circuits.)

Engine Warm Up**NOTICE**

- Do not accelerate the engine suddenly until the warm-up operation has been completed.
- Do not run the engine at low idling or high idling under no load for more than 20 minutes. This will have an adverse effect on the environment, and will also have an adverse effect on the internal structure of the engine. If it is necessary to run the engine at idling for more than 20 minutes, apply a load from time to time or run at a mid-range speed.

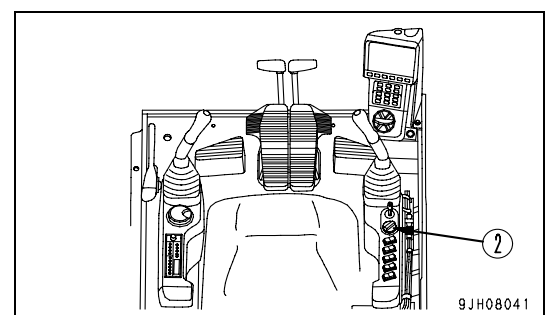

After the engine starts, do not start operating the machine immediately. First, carry out the following operations and checks.

1. This machine is equipped with an automatic engine warm-up system, so if the engine water temperature is below 30 °C after the engine is started, the engine warm-up operation starts automatically. When the engine automatic warm-up operation starts, the engine speed is maintained at a speed higher than the normal low idling speed.


If the engine water temperature goes above 30 °C or if the warm-up operation has been continued for more than 10 minutes, the automatic warm-up operation is cancelled and the engine speed drops to the normal low idling speed.

2. Check that engine coolant temperature monitor (1) displays the correct temperature.


If it displays low temperature, use the procedure in Step 3 to carry out additional warm up of the engine until the monitor displays the correct temperature.

(A) Display when temperature is correct: Monitor background (C) is blue

(B) Display when temperature is low: Monitor background (C) is white

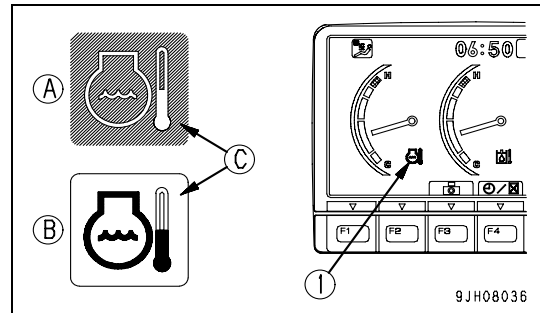


3. Turn fuel control dial (2) to a point midway between low idling (MIN) and full speed (MAX), run the engine under no load at a mid-range speed until engine coolant temperature monitor (1) displays the correct temperature.

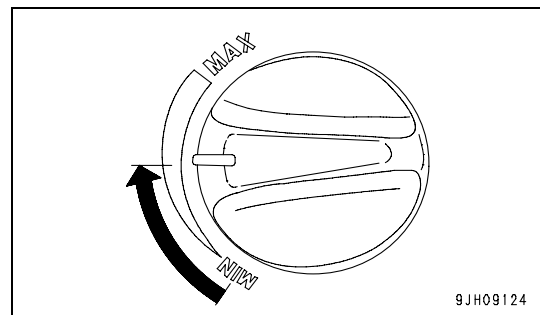

(A) Display when temperature is correct: Monitor background (C) is blue

(B) Display when temperature is low: Monitor background (C) is white

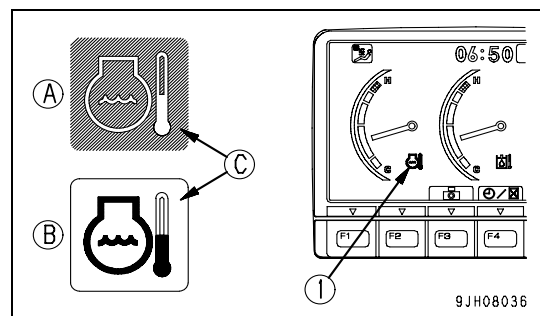

If the engine coolant temperature monitor displays the correct temperature, the engine warm-up operation is completed.


After checking that the engine coolant temperature monitor displays the correct temperature, carry out the warm-up operation for the hydraulic equipment.

NOTICE


Canceling automatic warm-up operation

If it becomes necessary in an emergency to cancel the automatic warm-up operation or to lower the engine speed to low idle, do as follows.

1) Turn fuel control dial (2) to the full speed (MAX) position and hold it for 3 seconds.

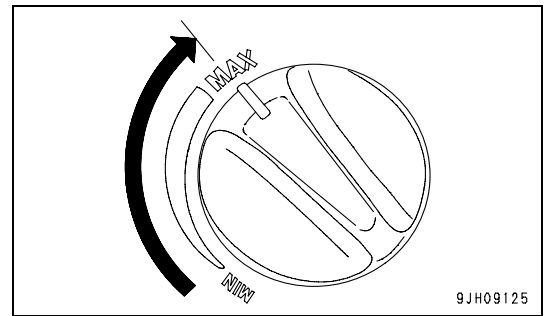


2) When fuel control dial (2) is returned to the low idle (MIN) position, the engine speed will drop.

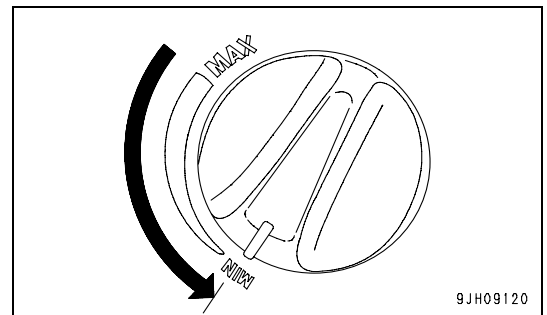

Hydraulic Equipment Warm Up

⚠ WARNING

- Before carrying out the warming-up operation for the hydraulic equipment, turn the swing lock switch ON, check on the monitor that the swing lock is actuated, then start the warming-up operation.
- When warming up the hydraulic equipment, check that there is no person or obstacle in the surrounding area, then sound the horn and start the operation.
- Carry out the warming-up operation for the hydraulic equipment until the hydraulic oil temperature monitor displays the correct temperature.
 (When the hydraulic oil temperature is low, the low temperature display shown in the diagram on the right is given.)
 (A) Display when temperature is correct: Monitor background (C) is blue
 (B) Display when temperature is low: Monitor background (C) is white
- The warming-up operation for the hydraulic equipment is necessary not only for the circuit between the pump and cylinders and between the pump and motor, but also for the control circuits. Do not carry out the operation just for one cylinder or motor, or the operation just in one direction. Carry out the operation in all directions for all the work equipment (boom, arm, bucket), swing, travel, and attachment (if equipped).

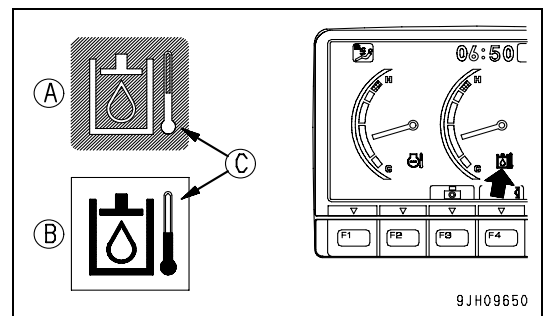

1. Check that engine coolant temperature monitor (1) displays the correct temperature.

(A) Display when temperature is correct: Monitor background (C) is blue

(B) Display when temperature is low: Monitor background (C) is white

If it displays low temperature, carry out additional warm up of the engine until engine coolant temperature monitor (1) displays the correct temperature.


For details of the procedure, see “Engine Warm Up (3-131)”.

2. Turn swing lock switch (2) ON and check that the swing lock monitor lights up.


3. To complete the warm-up operation of the hydraulic equipment more quickly, set the working mode to P mode (heavy-duty mode).

For details of the procedure for setting the working mode, see “Working Mode Selector Switch (3-25)”.


4. Move lock lever (3) slowly to the FREE position (F), then raise the bucket from the ground.

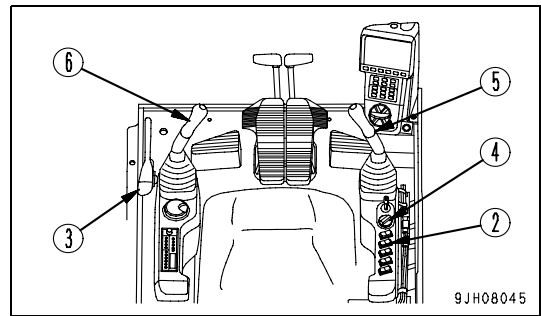


9JH08045

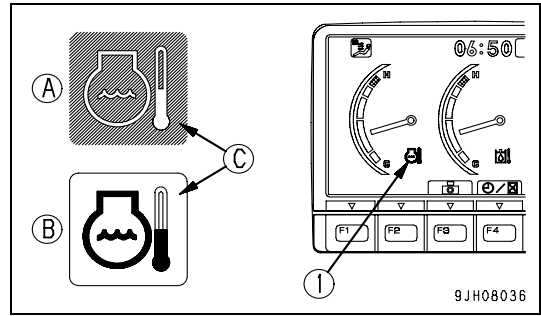


9JH08036

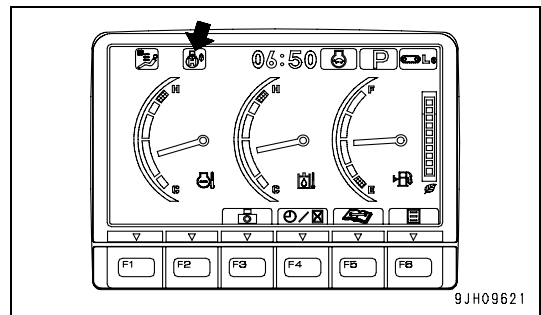

9JH09621

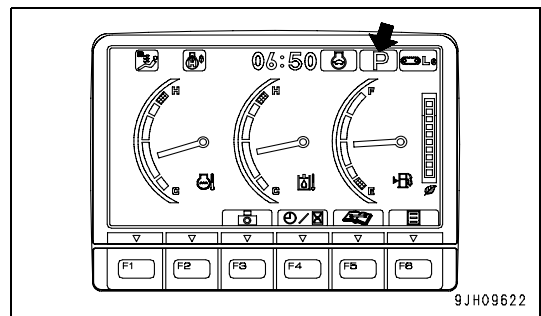


9JH09622

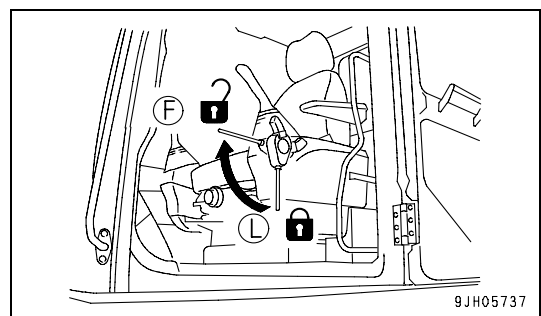

9JH05737


- Turn fuel control dial (4) to a point midway between low idling (MIN) and full speed (MAX).

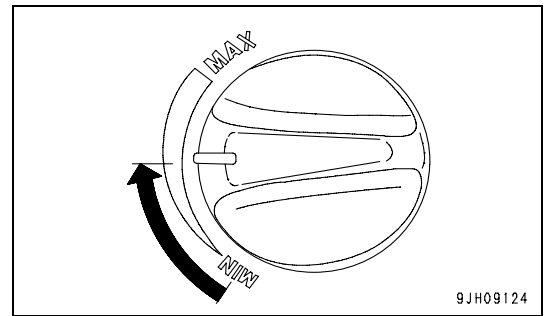

NOTICE

When the work equipment is retracted, take care that it does not interfere with the machine body or ground.

- Move right work equipment control lever (5) slowly in the direction to pull in the bucket (D). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Move right work equipment control lever (5) slowly in the direction to push out the bucket (C). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Next, move left work equipment control lever (6) slowly in the direction to pull in the arm (B). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Move left work equipment control lever (6) slowly in the direction to push out the arm (A). Operate the lever to the end of its travel and hold it in position for 30 seconds.
- Repeat the operation in Steps 6 to 9 for 5 minutes.

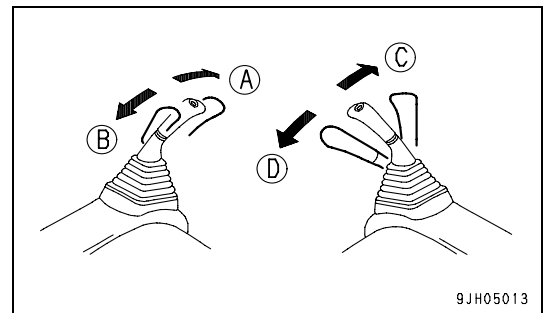


- Check that hydraulic oil temperature monitor (7) is displaying the correct temperature.

If the hydraulic oil temperature monitor is not displaying the correct temperature (it is displaying low temperature), repeat Steps 6 to 10 until the display is the correct temperature.

(A) Display when temperature is correct: Monitor background (C) is blue

(B) Display when temperature is low: Monitor background (C) is white

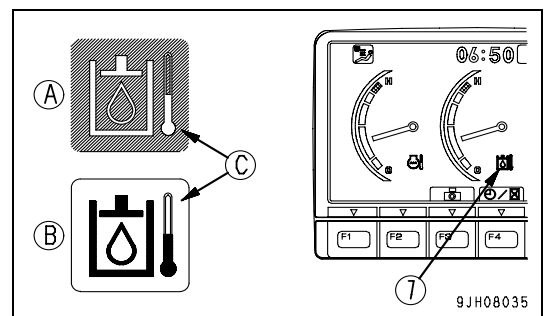


- Check that engine coolant temperature monitor (1) displays the correct temperature.

(A) Display when temperature is correct: Monitor background (C) is blue

(B) Display when temperature is low: Monitor background (C) is white


If it displays low temperature, carry out additional warm up of the engine until engine coolant temperature monitor (1) displays the correct temperature.

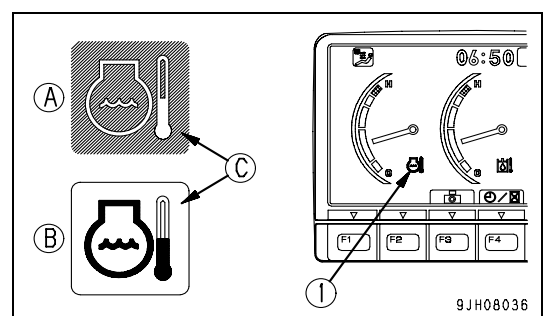

For details of the procedure, see “Engine Warm Up (3-131)”.

13. Check that the hydraulic oil temperature monitor and engine coolant temperature monitor are displaying the correct temperature, then check that all the gauges and caution monitors on the machine monitor are in the following status.

- Radiator coolant level monitor (8): OFF
- Charge level monitor (9): OFF
- Engine oil pressure monitor (10): ON
- Engine oil level monitor (11): OFF
- Air cleaner clogging monitor (12): OFF
- Engine preheating lamp (13): OFF
- Engine water temperature gauge (14): Indicator in green range
- Engine coolant temperature monitor (1): Displays correct temperature
- Hydraulic oil temperature gauge (15): Displays green range
- Hydraulic oil temperature monitor (7): Displays correct temperature
- Fuel gauge (16): Displays green range
- Fuel level monitor (17): Display is correct level

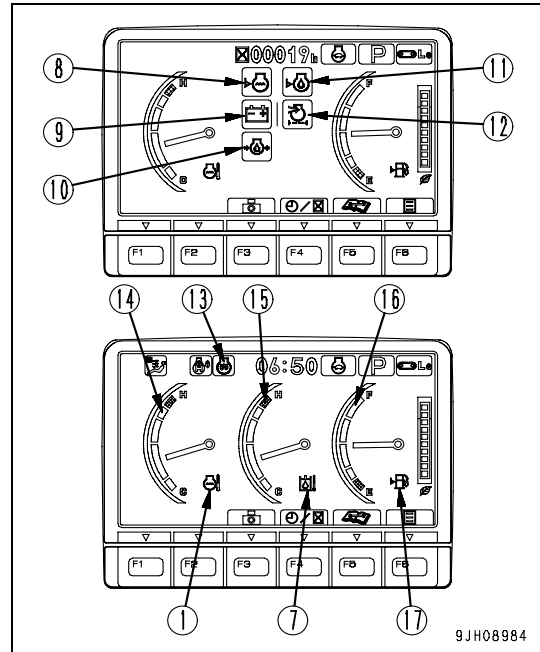

9JH08984

14. Check for abnormal exhaust gas color, noise, or vibration. If any problem is found, contact your Komatsu distributor.



In cold temperatures (ambient temperature below 0 °C, even when the hydraulic oil temperature monitor displays the correct temperature, carry out additional Step 15 to warm up all the hydraulic equipment.

15. Turn fuel control dial (4) to the full speed (MAX) position, repeat Steps 6 to 9 for 3 to 5 minutes, then check again that the hydraulic oil temperature monitor is displaying the correct temperature.

If it is not displaying the correct temperature, repeat Steps 6 to 9 for 3 to 5 minutes until hydraulic oil temperature monitor (7) displays the correct temperature.

(A) Display when temperature is correct: Monitor background (C) is blue


(B) Display when temperature is low: Monitor background (C) is white

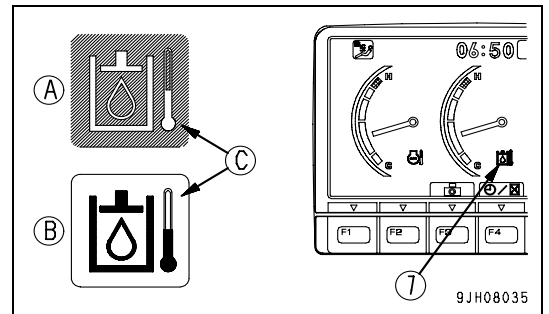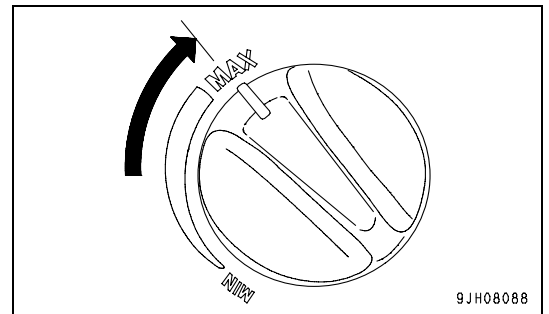

For both normal temperatures and cold temperatures, carry out the following operation.


16. Check that fuel control dial (4) is at a point midway between low idling (MIN) and full speed (MAX).

If it is not at the midway position, set it to the midway position and run the engine at a mid-range speed before operating.

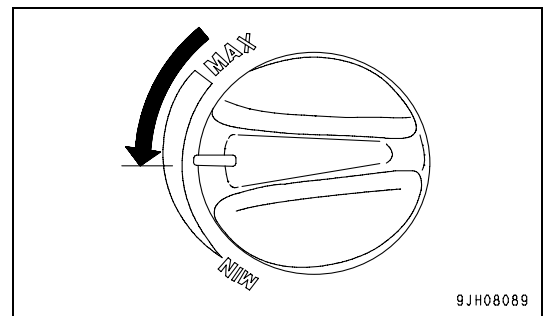


17. Before starting operations, repeat the following operations slowly 3 to 5 times to circulate warm oil through the control circuits.

- Boom operation RAISE (E) ↔ LOWER (F)
- Arm operation IN (B) ↔ OUT (A)
- Bucket operation CURL (D) ↔ DUMP (C)

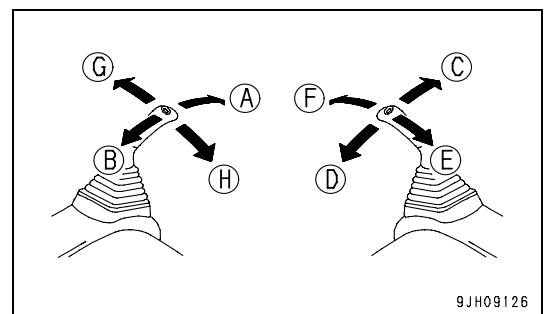


When carrying out swing operations, release swing lock switch (2), check that swing lock monitor (19) goes out, then operate the swing.


- Swing operation Left (G) ↔ Right (H)

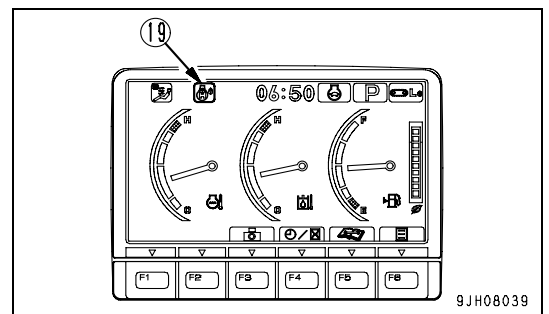


- Travel (Lo) operation FORWARD (A) ←→ REVERSE (B)

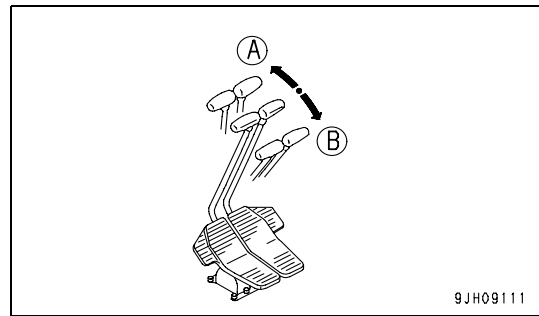

For attachment operations (if equipped), change the working mode to the attachment mode.

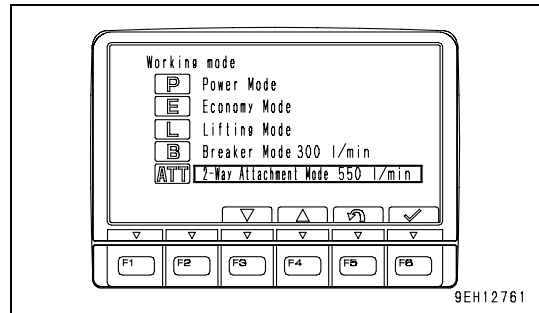


- Attachment operation One way (A) ←→ Other way (B)

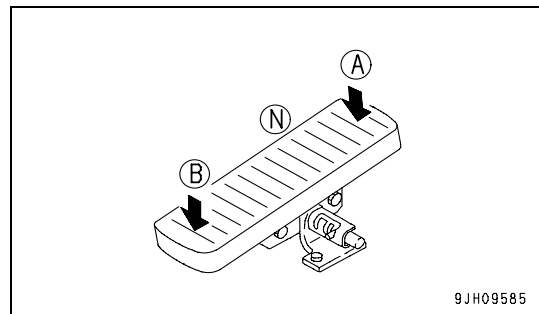

18. Check that hydraulic oil temperature monitor (7) is displaying the correct temperature.

If the hydraulic oil temperature monitor is not displaying the correct temperature (it is displaying low temperature), repeat Steps 6 to 10 until the display is the correct temperature.

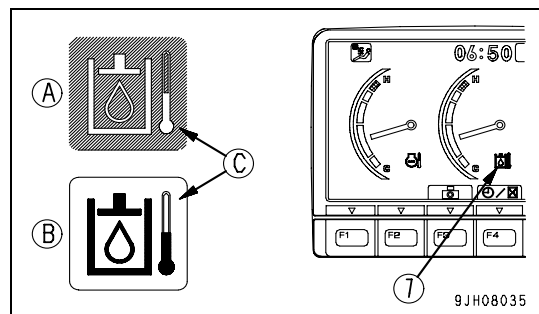

(A) Display when temperature is correct: Monitor background (C) is blue

(B) Display when temperature is low: Monitor background (C) is white


If the hydraulic oil temperature monitor displays the correct temperature, the hydraulic equipment warm-up operation is completed.

After confirming that the hydraulic oil temperature monitor displays the correct temperature, carry out the following procedure.

Operation After Completion Of Warm-Up Operation


1. Check that hydraulic oil temperature monitor (7) displays the correct temperature.

- (A) Display when temperature is correct: Monitor background (C) is blue
- (B) Display when temperature is low: Monitor background (C) is white

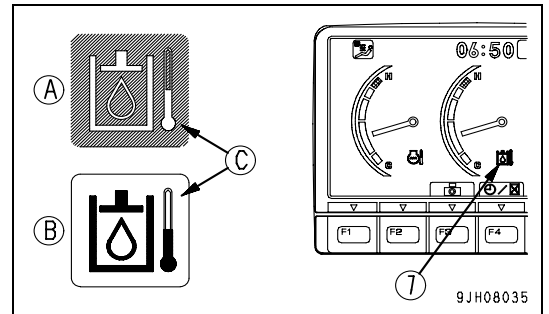

2. Push working mode selector switch (20) of the machine monitor to select the working mode to be used.


For details of the procedure for selecting the working mode, see “Working Mode Selector Switch (3-25)“.

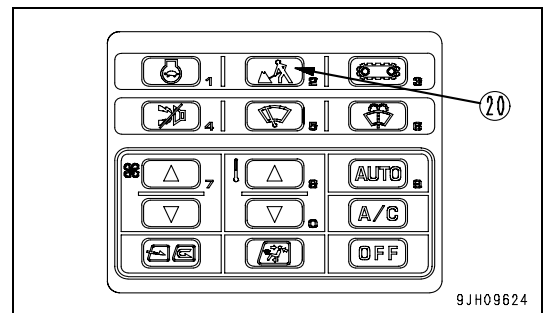

● Working mode monitor display


1) P mode

For heavy-duty operations

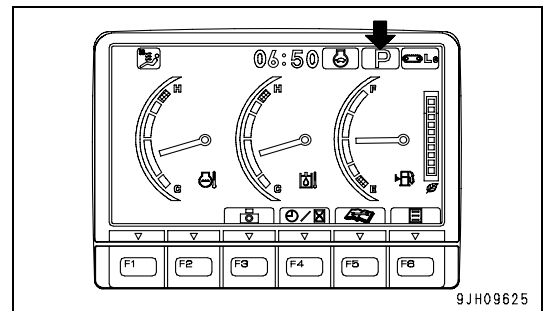


2) E mode

For operations with emphasis on fuel economy

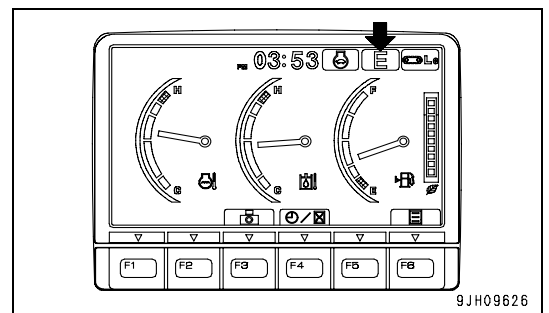


3) L mode

For operations requiring fine control

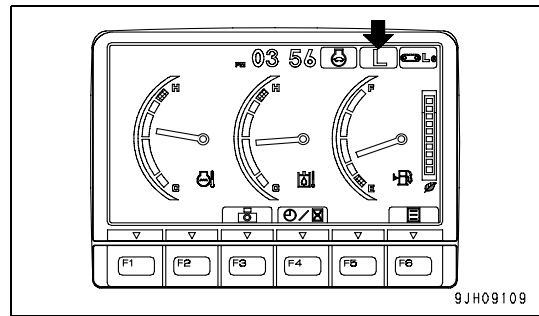


4) B mode

For breaker operations

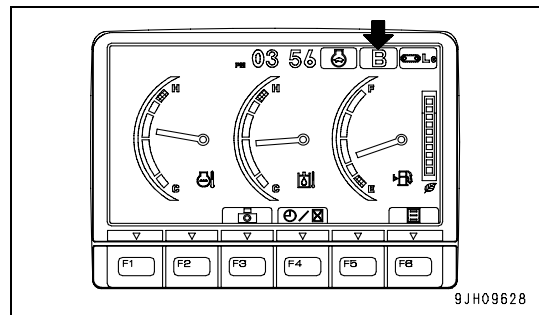

5) ATT mode


For operations with crusher or other double-acting action attachment

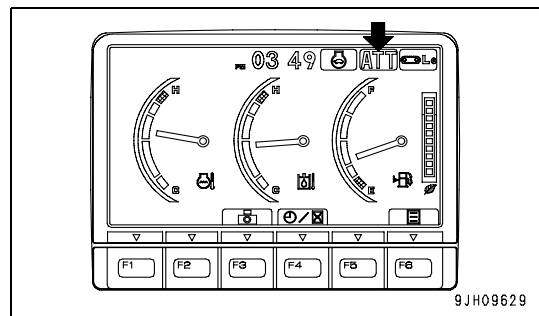


STOPPING THE ENGINE

NOTICE

If the engine is stopped abruptly, service life of component parts of the engine may be considerably reduced. Do not stop the engine abruptly except in an emergency. If the engine has overheated, do not try to stop it abruptly but run it at medium speed to allow it to cool down gradually, and then stop it.

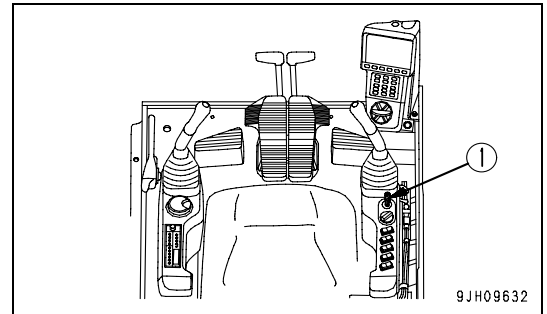


1. Run the engine at low idle for about 5 minutes to cool down gradually.
2. Turn the key in starting switch (1) to the OFF position (A) and stop the engine.
3. Remove the key from starting switch (1).

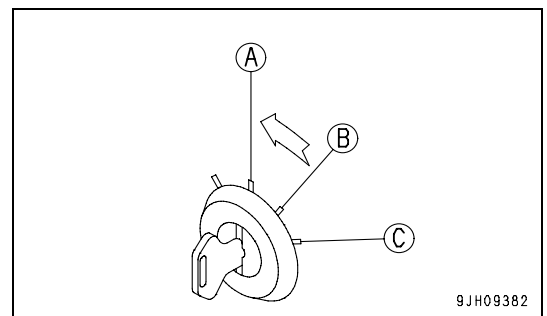

MACHINE OPERATION

⚠ WARNING


- Before operating the travel levers or travel pedals, check the direction of the track frame. If the track frame is facing the rear (if the sprocket is at the front), the machine moves in the opposite direction from the operation of the travel levers or travel pedals (front and rear travel is reversed, left and right steering is reversed).
- Before starting the machine off, check that the area around the machine is safe, and sound the horn.
- Do not allow anyone to enter the area around the machine.
- Clear any obstacles from the travel path.
- There is a blind spot at the rear of the machine, so be particularly careful when traveling in reverse.
- If the travel levers or travel pedals is operated when the auto deceleration is being actuated, the engine speed will suddenly rise, so be careful when operating.
- When traveling, check that the alarm sounds normally.

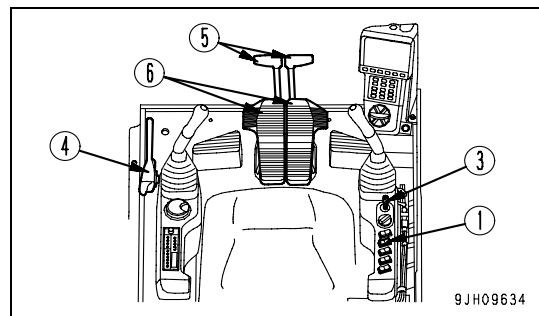


Preparations for Moving the Machine

1. Set swing lock switch (1) to the ON (actuated) position and confirm that swing lock monitor lamp (2) lights up.

- (a): ON position
- (b): OFF position

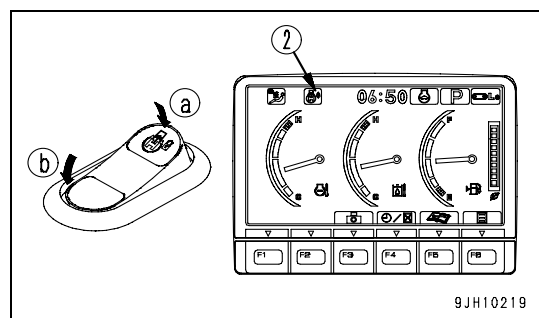


2. Turn fuel control dial (3) towards the full speed (MAX) position to increase the engine speed.

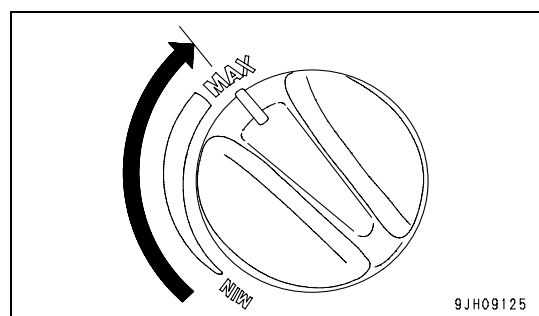


Moving Machine Forward

1. Set lock lever (4) in the FREE position (F), fold the work equipment, and raise it 40 to 50 cm from the ground.
 - If the work equipment blocks the view and it is difficult to travel in safety, raise the work equipment to a greater height.

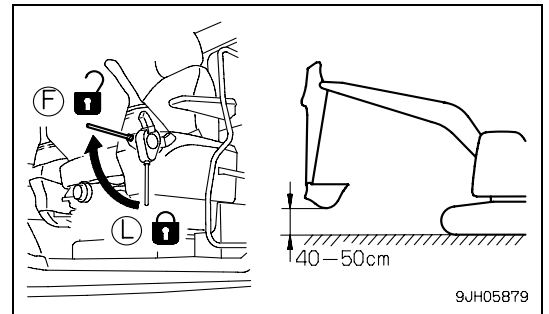


2. Operate the right and left travel levers (5), or the right or left travel pedals (6) as follows:
 - When sprocket (A) is situated at the rear of the machine:

Start the machine either by pushing lever (5) forward slowly or by stepping on the front part of pedal (6) slowly.

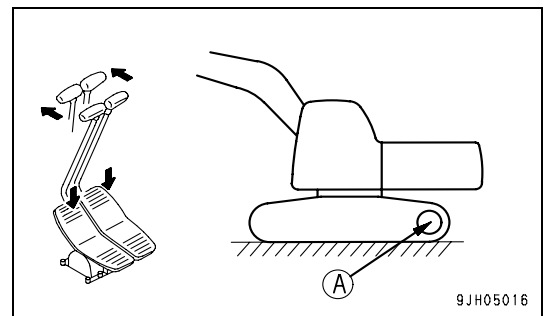

- When sprocket is situated at the front of the machine:

Start the machine either by pulling lever (5) back slowly or by stepping on the rear part of pedal (6) slowly.

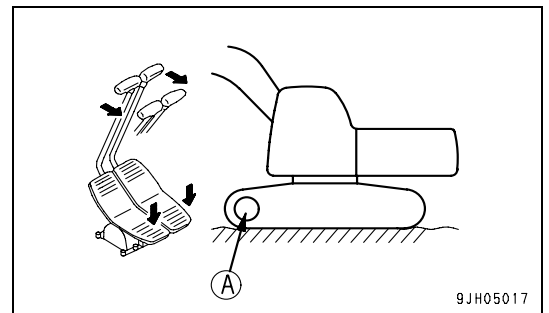


3. Check that the travel alarm sounds properly. If the travel alarm does not sound, please contact your Komatsu distributor for repair.

REMARK

In cold temperatures, if the machine travel speed is not normal, thoroughly perform the warming-up operation. In addition, if the undercarriage is clogged with mud and the machine travel speed is not normal, remove the soil and mud from the undercarriage.


Moving Machine Backward

1. Set lock lever (4) in the FREE position (F), fold the work equipment, and raise it 40 to 50 cm from the ground.
 - If the work equipment blocks the view and it is difficult to travel in safety, raise the work equipment to a greater height.

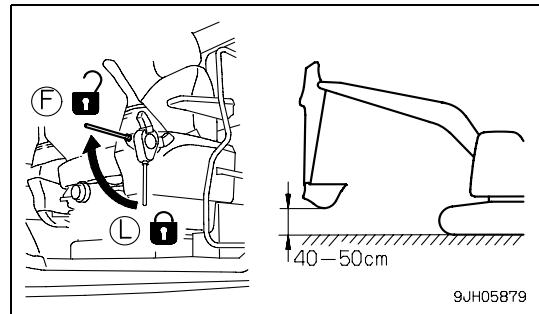


2. Operate the right and left travel levers (5), or the right or left travel pedals (6) as follows:

- When sprocket (A) is at the rear of the machine:
Slowly pull the levers (5) backward, or slowly depress the rear part of the pedals (6) to move the machine backward.

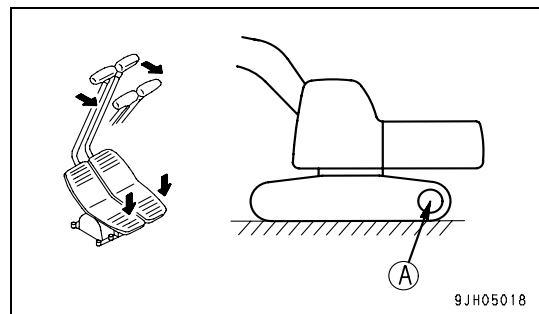

- When sprocket (A) is at the front of the machine:
Slowly push the levers (5) forward, or slowly depress the front part of the pedals (6) to move the machine backward.

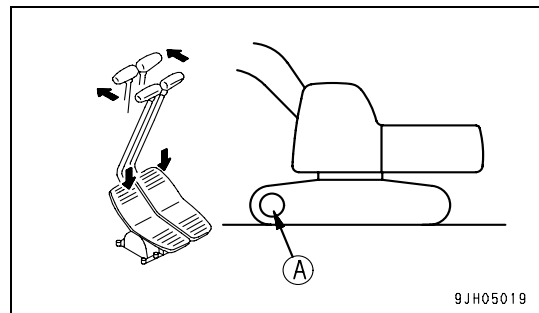

3. Check that the travel alarm sounds properly. If the travel alarm does not sound, please contact your Komatsu distributor for repair.



REMARK

In cold temperatures, if the machine travel speed is not normal, thoroughly perform the warming-up operation. In addition, if the undercarriage is clogged with mud and the machine travel speed is not normal, remove the soil and mud from the undercarriage.

Stopping Machine

Avoid stopping suddenly. Give yourself ample room when stopping.

1. Put the left and right travel levers (1) in the neutral position, then stop the machine.

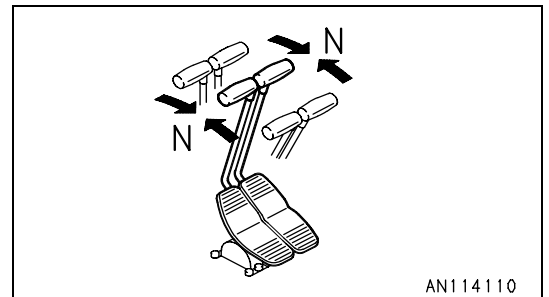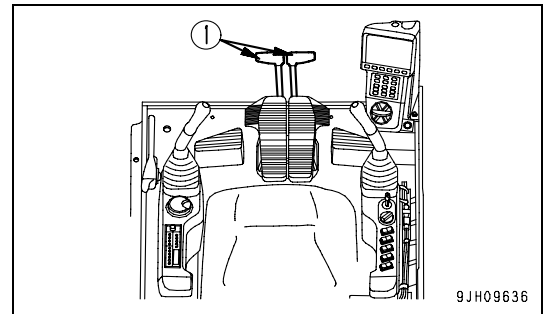

STEERING THE MACHINE

Steering


WARNING

Before operating the travel levers or travel pedals, check the direction that the track frame is facing (the position of the sprocket).
When the sprocket is at the front, the direction of operation of the travel levers or control pedals is the opposite from the direction of movement of the machine.

Use the travel levers to change direction.

Avoid sudden changes of direction as much as possible. Especially when performing counter-rotation (spin turn), stop the machine before turning.

Operate two travel levers (1) as follows.

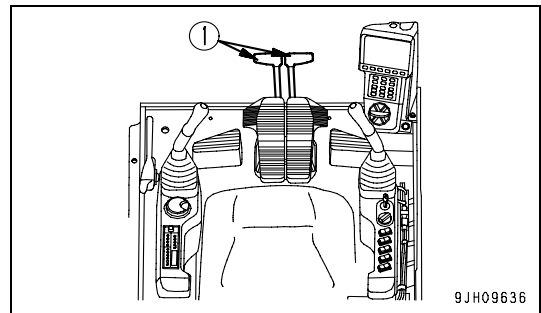


Steering the Machine when Stopped

When turning to the left:

Push the right travel lever forward to turn to the left when traveling forward; and pull it back to turn left when traveling in reverse.

- (A): Forward left turn
- (B): Reverse left turn

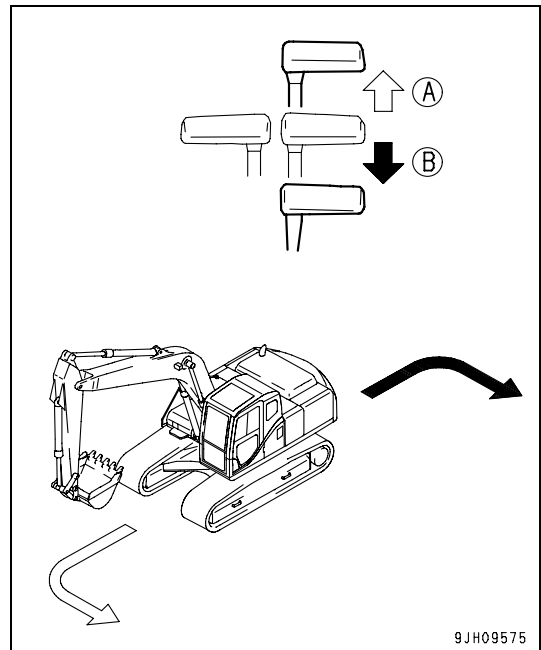

REMARK

When turning to the right, operate the left travel lever in the same way.

Changing Direction of the Machine

When turning to the left:


If the left travel lever is returned to the neutral position, the machine will turn to the left.

(A): Forward left turn

(B): Reverse left turn

REMARK

When turning to the right, operate the right travel lever in the same way.

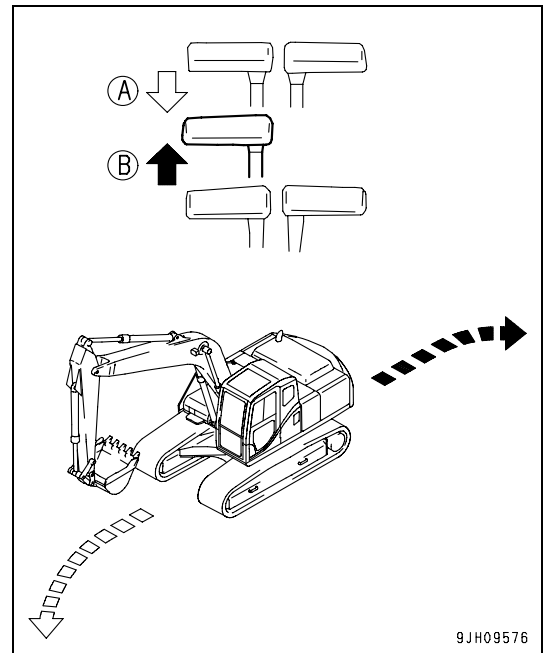


Counter-rotation Turn (Spin Turn)

When using counter-rotation (spin turn) to turn left, pull the left travel lever back and push the right travel lever forward.

REMARK

When using counter-rotation to turn right, pull the right travel lever back and push the left travel lever forward.

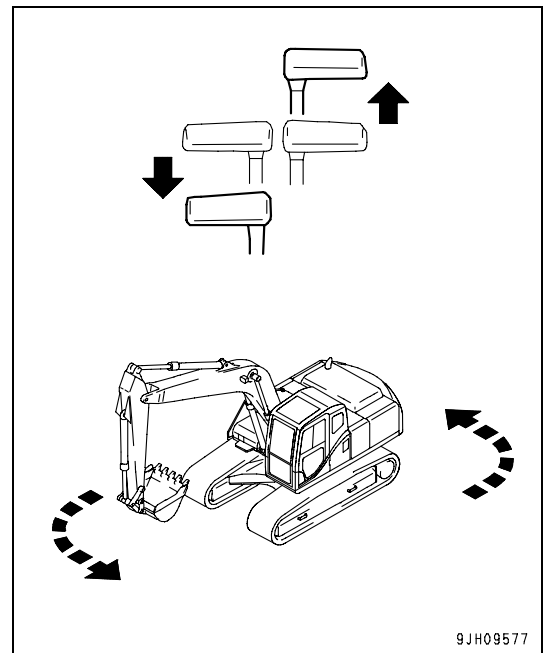



SWINGING

⚠ WARNING

- The tail of the machine extends outside the tracks. Before operating the swing, check that the area around the machine is safe.
- If the lever is operated when the engine speed has been lowered by the auto-deceleration function, the engine speed will suddenly rise, operate the levers carefully.


1. Before starting the swing operation, turn swing lock switch (1) OFF and check that swing lock monitor (2) has gone out.

- (a): ON position
- (b): OFF position

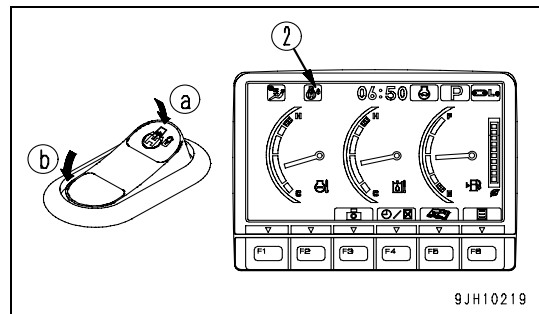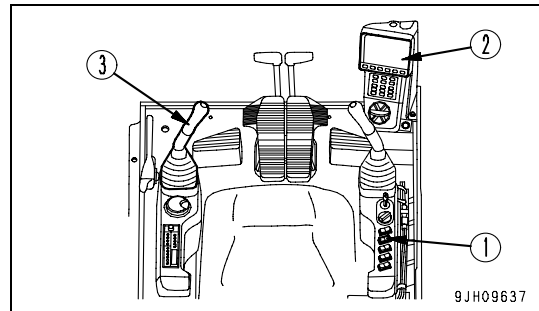


2. Operate left work equipment control lever (3) to swing the upper structure.

- (A): Left swing
- (B): Right swing

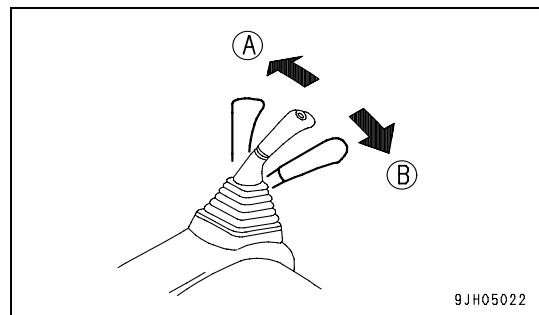

3. When not using the swing, turn swing lock switch (1) ON. Check that swing lock monitor (2) lights up.

- (a): ON position
- (b): OFF position

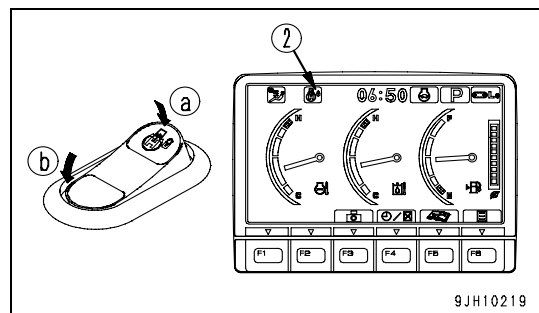

WORK EQUIPMENT CONTROLS AND OPERATIONS**⚠ WARNING**


If the lever is operated when the engine speed has been lowered by the auto-deceleration function, the engine speed will suddenly rise, operate the levers carefully.

Use the control levers to operate the work equipment.

Note that when the levers are released, they return to the HOLD position and the work equipment is held in that position.


- Arm control

Move the left work equipment control lever to the front or rear to operate the arm.

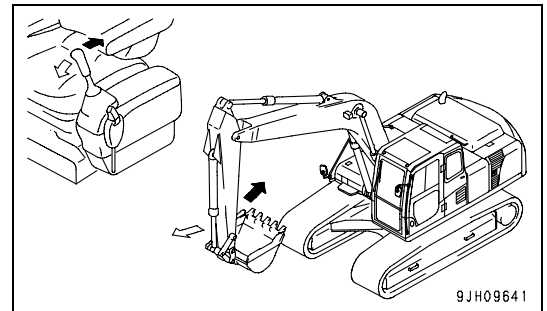


- Swing control

Move the left work equipment control lever to the left or right to swing the upper structure.

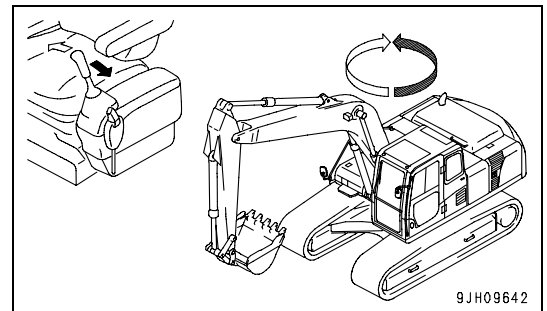


- Boom control

Move the right work equipment control lever to the front or rear to operate the boom.

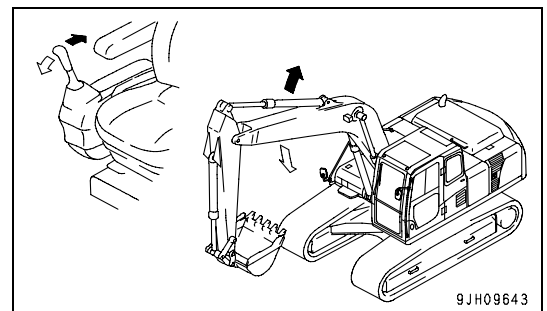

- Bucket control

Move the right work equipment control lever to the left or right to operate the bucket.

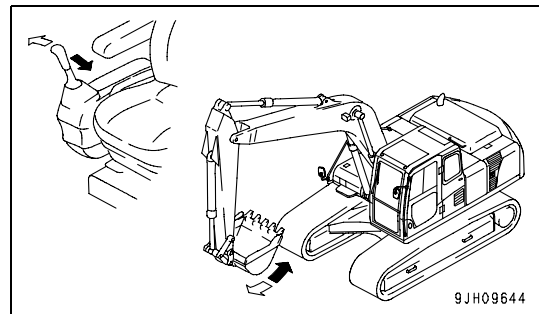

If the work equipment control levers are returned to the neutral position when the machine is stopped, even if the fuel control dial is set to FULL, the auto-deceleration mechanism will act to reduce the engine speed to a mid-range speed.

REMARK

The control circuit on this machine is equipped with an accumulator. Even if the engine is stopped, if the starting switch key is turned to the ON position within 15 seconds after stopping the engine, and the lock lever is set to the FREE position, it is possible to use the lever operation to lower the work equipment to the ground.

This procedure can also be used for releasing the remaining pressure in the hydraulic cylinder circuits or for lowering the boom after loading the machine onto a trailer.

WORKING MODE


Working Mode

Use working mode selector switch (1) to select the working mode that matches the operating conditions or purpose. This will make it possible to carry out operations efficiently.


Use the following procedure to select the most efficient working mode.

When the starting switch is turned ON, the working mode is set to the mode that was in operation when the starting switch was last turned OFF.

Use the working mode switch to set the mode to the most efficient mode to match the type of work.

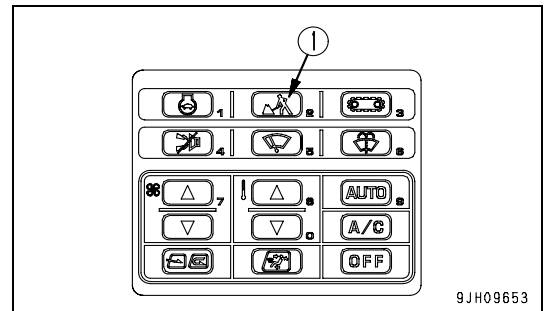


Working mode	Applicable operations
P mode	Normal digging or loading operations (operations with emphasis on production)
E mode	Normal digging or loading operations (operations with emphasis on fuel consumption)
L mode	Aligning position (fine control operations)
B mode	Breaker operations
ATT mode	Operations with the crusher or other double-acting action attachment

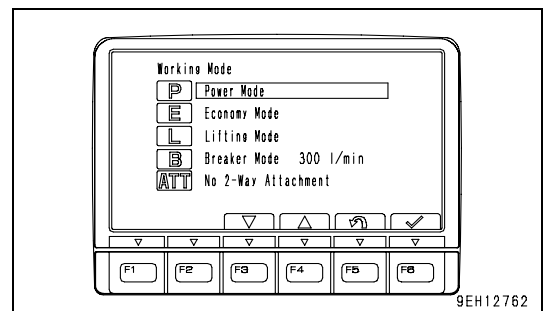


NOTICE

If breaker operations are carried out in a mode other than the breaker mode, there is danger of breakage of the hydraulic equipment. Do not carry out breaker operations in any mode except the breaker mode.

1. If working mode selector switch (1) is pressed, the working mode selection screen is displayed on the monitor.

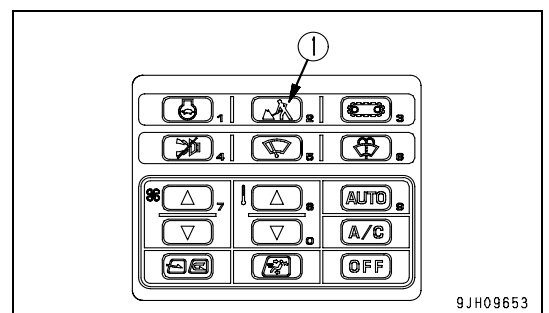


- Press switches F3 or F4 at the bottom of the screen or the working mode selector switch to select the appropriate mode.

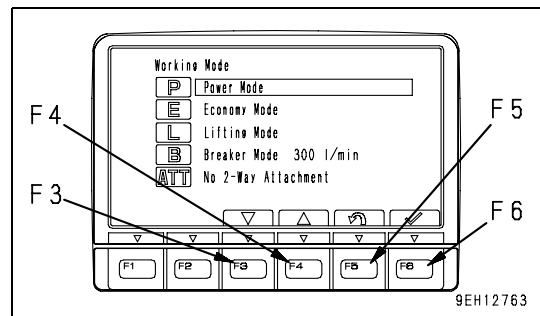

- After selecting the desired mode, press switch F6 to accept the change. The screen returns to the standard screen.


If switch F5 is pressed, the screen returns to the standard screen without changing the mode.

- If a working mode is selected, and nothing is done for 5 seconds, the selected working mode is automatically accepted and the screen returns to the standard screen.
- If a working mode is selected and working mode switch (1) is kept pressed, the selected mode is accepted and the screen returns to the standard screen.

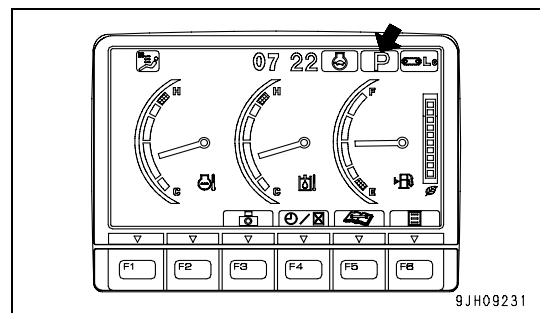

- If the breaker mode is selected, "Really Set Breaker Mode?" is displayed on the screen. To set to the breaker mode, press switch F6.


If switch F5 is pressed, the screen returns to the working mode selection screen.

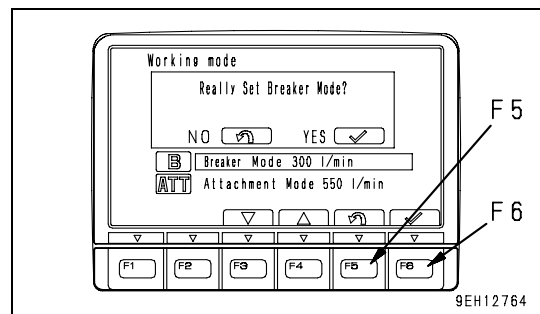

One-Touch Power Max. Switch

The one-touch power max. Switch can be used during operations to increase the power. Make effective use of this function whenever necessary in combination with the working mode.

- Press the left switch and keep it pressed. The power (P & E modes) is increased as long as the switch is being pressed. However, the increased power is automatically canceled after 8.5 seconds.
- This function is not actuated when the working mode is set to L mode, B mode, or ATT mode.

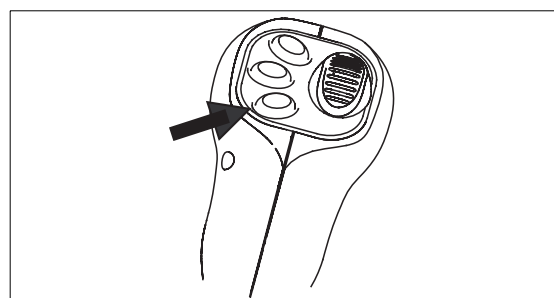


PROHIBITED OPERATIONS

WARNING

- If it is necessary to operate the work equipment control lever when the machine is traveling, stop the machine, then operate the control lever.
- If any lever is operated when the auto-deceleration is being actuated, the engine speed will suddenly increase, so be careful when operating.


Operations Using Swing Force

Do not use the swing force to compact soil or break objects. This is not only dangerous, but will also drastically reduce the life of the machine.

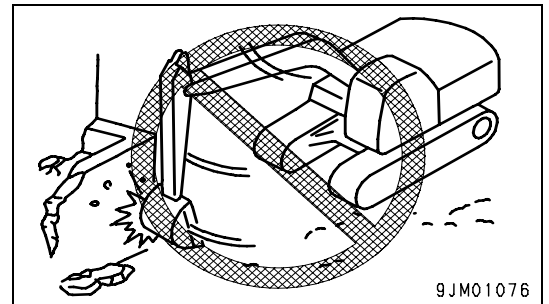


Operations Using Travel Force

Do not dig the bucket into the ground and use the travel force to carry out excavation. This will damage the machine or work equipment.

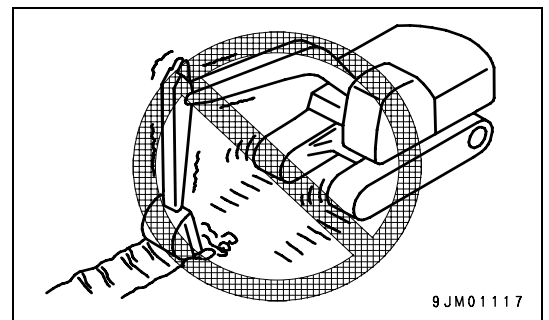


Prohibited to Extend Hydraulic Cylinder to End of Stroke

If the work equipment is used with the cylinder rod operated to its stroke end, and given impact by some external force, the hydraulic cylinders will be damaged, causing personal injury. Avoid operations with the hydraulic cylinder fully retracted or fully extended.

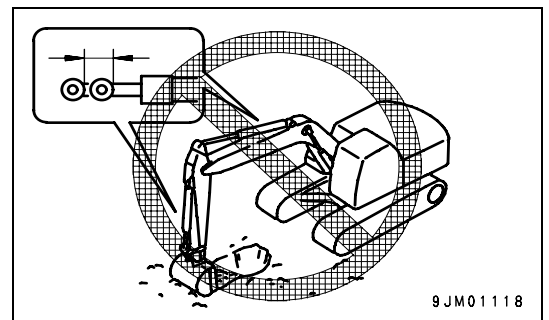

Operations Using Bucket Dropping Force


Do not use the dropping force of the machine for digging, or use the dropping force of the bucket as a pickaxe, breaker, or pile driver. This will drastically reduce the life of the machine.

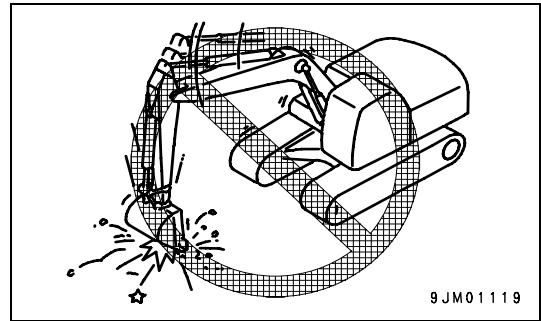

Operations Using Bucket as Lever



Do not use the bucket to lever rocks out. If the back of the bucket contacts the rock behind, the principle of the lever will bring excessive force to bear on the machine or work equipment, and there is danger that this may lead to breakage or damage of the machine.

In such situations, use only the force of the arm and bucket to carry out the digging operation. If any excessive force is brought to bear, the safety valve in the hydraulic system automatically controls the force within the specified range, and this prevents damage to the machine.

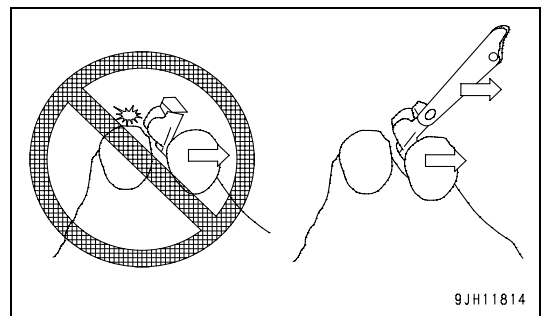

Operations Using Machine Dropping Force


Do not use the dropping force of the machine for digging.

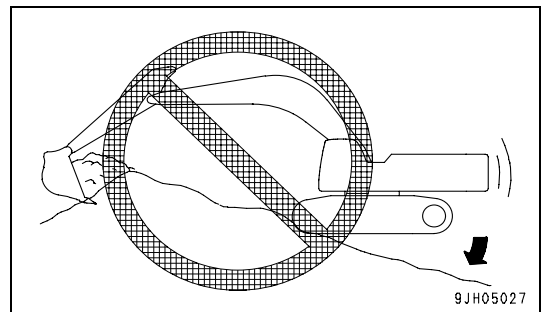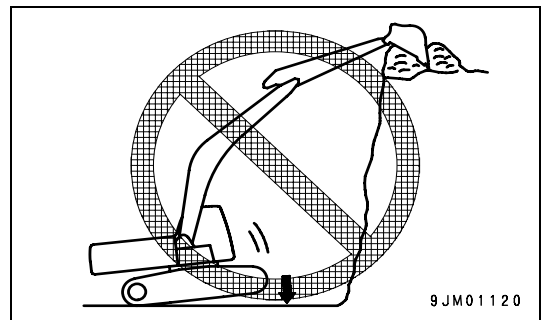

Operations Digging at an Angle without Engaging Teeth

Do not swing the upper structure when digging hard rock at a position higher than the machine if the bucket teeth will not penetrate the rock. The teeth will slip on the rock surface and generate excessive vibration of the machine, and this will lead to cracking of the work equipment or frame.

In addition, if the bucket teeth slip and hit the rock, there will be excessive impact load on the work equipment and frame, and this will reduce the service life of the machine.

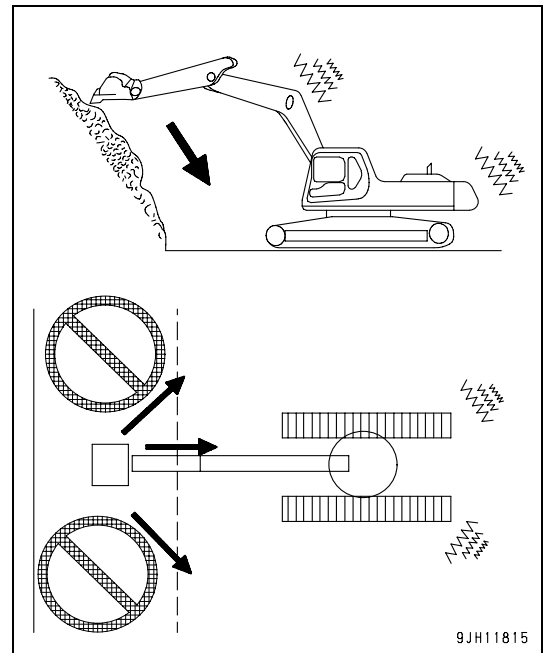


Digging Hard Rocky Ground


Do not attempt to directly excavate hard rocky ground with the work equipment. It is better to excavate it after breaking up by some other means. This will not only save the machine from damage but will make for better economy.

Operations When Machine is Not Stable

Do not carry out operations when the machine is not in a stable position. This will generate a twisting load on the frame and other parts and will reduce the service life of the machine.

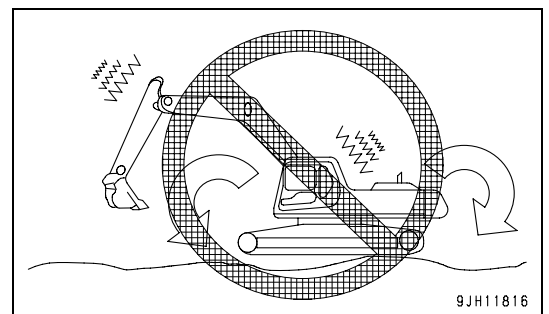


When carrying out operations in such a place, pile soil under the front of the track or take other measures to stabilize the machine before starting the operation.

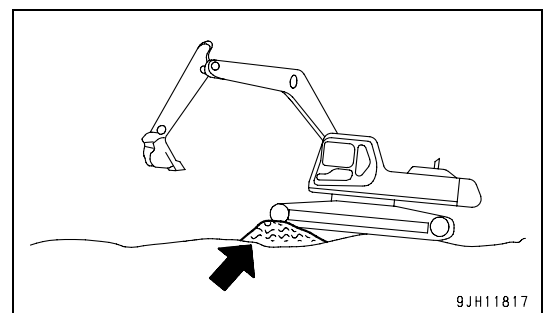

Swinging or Traveling When Rock Is on Top of Track Assembly

Do not swing the upper structure or travel if there is in the rock on top of the track assembly. It will contact the undercover or frame and cause damage. In the worst case, it may cause damage to the hydraulic equipment and result in a serious breakdown.

During operations, always check that there is no rock, pieces of rock, or mud on top of the track assembly.

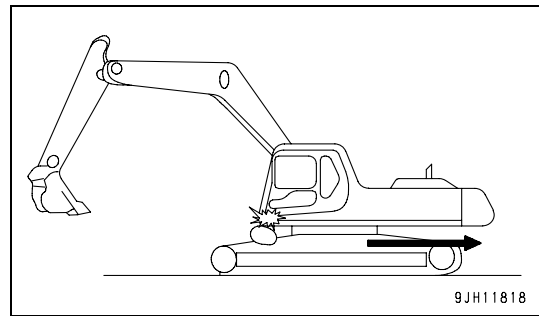


Sudden Lever or Pedal Shifting High Speed Travel

(1) Do not operate the levers and pedals suddenly or take any other action to move the machine quickly.


(2) Do not operate the levers or pedals suddenly from FORWARD (A) to REVERSE (B) (or from REVERSE (B) to FORWARD (A)).

(3) Do not operate the levers or pedals suddenly (do not release them suddenly) to stop the machine when traveling at high speed.

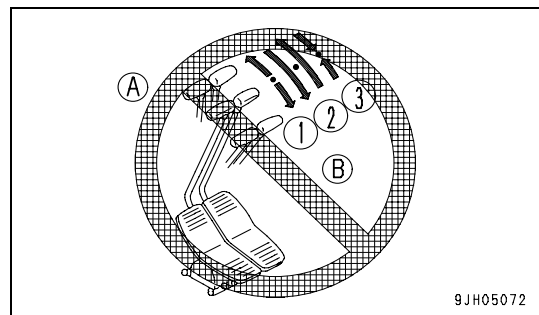


High-Speed Travel Operations on Rough Ground

Do not travel at high speed on rough ground or rocks. Each time the machine travels over rough parts of the ground surface, the thrusting load on the machine will increase and reduce the service life of the machine.

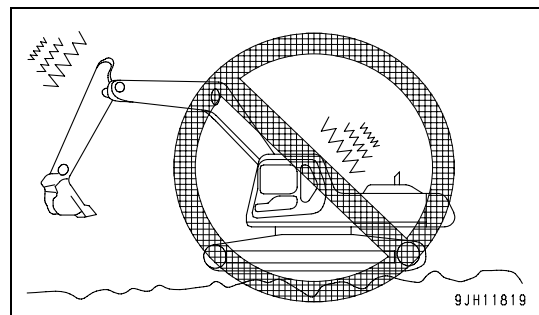


To protect the machine when traveling on rough ground or on rocks, there is a cushion structure in the idler (1), so set the idler facing in the direction of travel and travel at low speed.

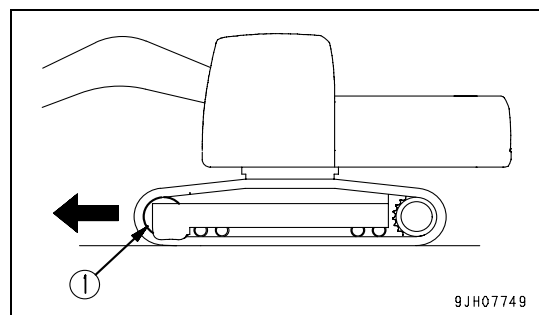

Long-Time Continuous Travel Operations

Do not travel continuously at high speed for two hours or more. The lubricating oil inside the track rollers will rise to a high temperature, and there is danger that this will cause damage to the oil seal or leakage of oil.

When traveling continuously for a long time, stop the machine for 15 minutes every 2 hours to allow the lubricating oil inside the track rollers to cool down.

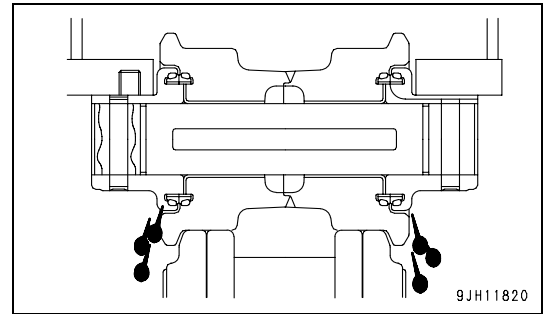


GENERAL OPERATION INFORMATION

Traveling

Traveling over boulders, tree stumps, or other obstacles will cause a big shock to the chassis (and in particular to the tracks), and this will cause damage to the machine. For this reason, always remove any obstacles or travel around them, or take other steps to avoid traveling over such obstacles as far as possible.



If there is no way to avoid traveling over an obstacle, reduce the travel speed, keep the work equipment close to the ground, and try to travel so that the center of the track passes over the obstacle.

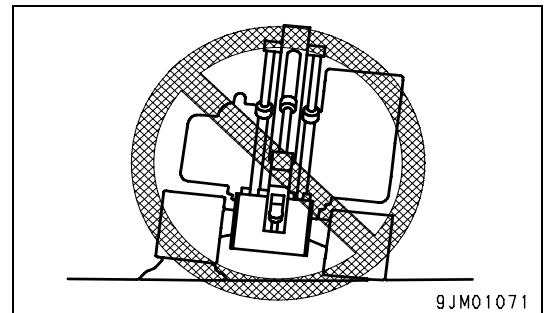

High Speed Travel

On uneven roadbeds such as rock beds or uneven roads with large rocks, travel at Lo speed. When traveling at high speed, set the idler in the forward direction.

- Press travel speed selector switch (1) to switch the travel speed. The travel speed (Lo, Mi, Hi) is displayed on the travel speed monitor (2).

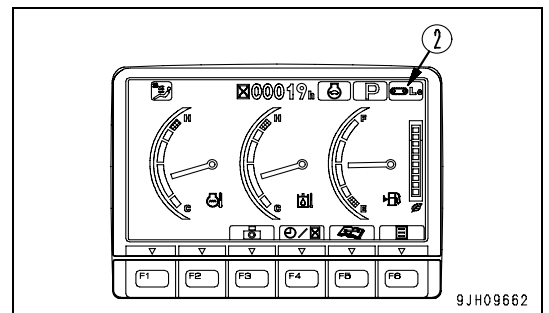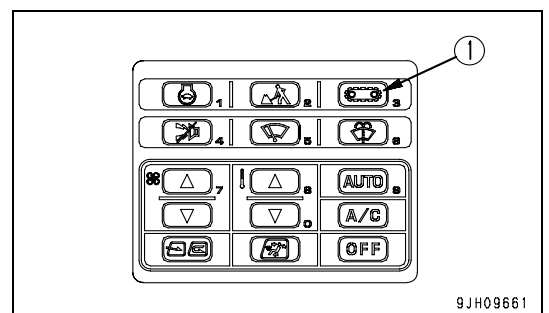


Permissible Water Depth

NOTICE


When driving the machine out of water, if the angle of the machine exceeds 15°, the rear of the upper structure will go under water, and water will be thrown up by the cooling fan. This may cause the fan to break.

Be extremely careful when driving the machine out of water.

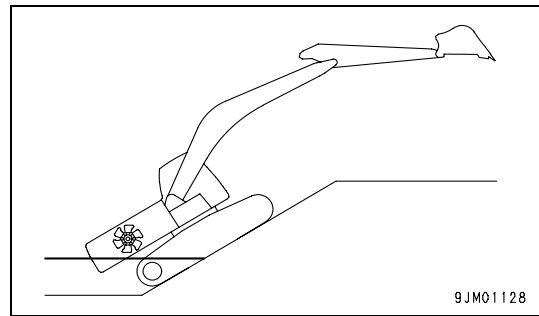

Do not drive the machine in water deeper than the center of carrier roller (1).



Supply grease to the parts which have been under water for a long time until the used grease is projected out of the bearings (around the bucket pin, in particular).

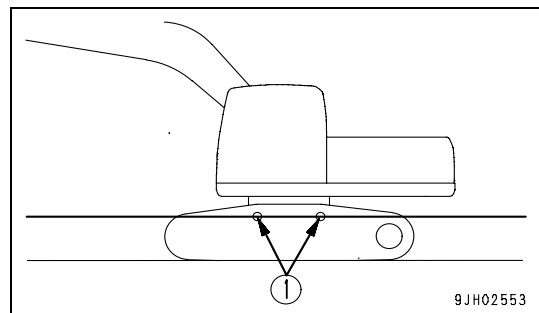


TRAVELING ON SLOPES

⚠ WARNING


- Turning or operating the work equipment when working on slopes may cause the machine to lose its balance and turn over, so avoid such operations. It is particularly dangerous to swing downhill when the bucket is loaded. If such operations have to be performed, pile soil to make a platform (A) on the slope so the machine is kept horizontal during operation.
- Do not travel up or down steep slopes. There is a danger that the machine may turn over.
- When traveling, raise the bucket approx. 20 to 30 cm from the ground. Do not travel downhill in reverse.
- Never turn on slopes or travel across slopes. Always go down to a flat place to perform these operations. It may be longer, but it will ensure safety.
- Always operate or travel in such a way that it is possible to stop safely at any time if the machine slips or becomes unstable.
- When traveling uphill, if the shoes slip or it is impossible to travel uphill using only the force of the tracks, do not use the pulling force of the arm to help the machine travel uphill. There is danger that the machine may turn over.

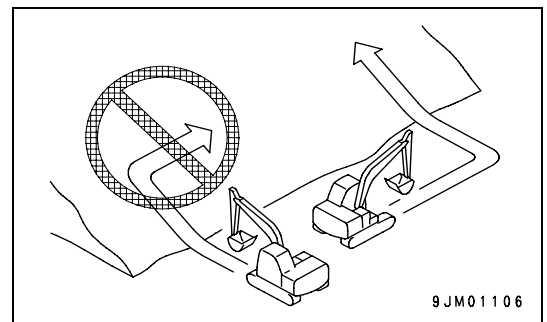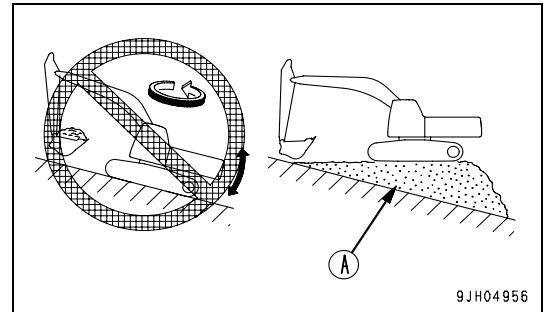


1. When traveling down steep hills, use the travel lever and fuel control dial to keep the travel speed low. When traveling down a steep hill of more than 15°, set the work equipment to the posture shown in the diagram on the right, and lower the engine speed.

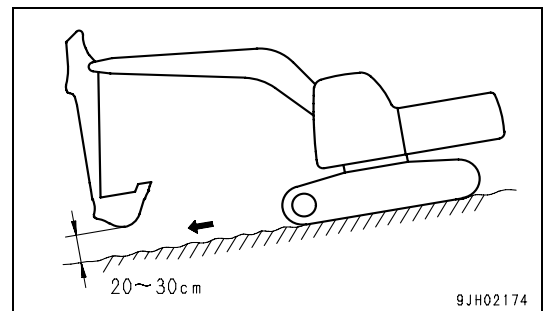

2. When traveling up a steep hill of more than 15°, set the work equipment to the posture shown in the diagram on the right.

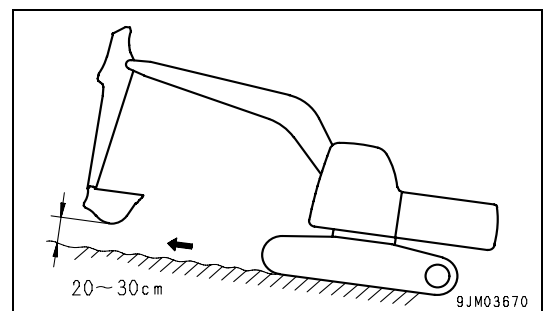

- When traveling up a steep slope, extend the work equipment to the front to improve the balance, keep the work equipment approximately 20 to 30 cm above the ground, and travel at low speed.

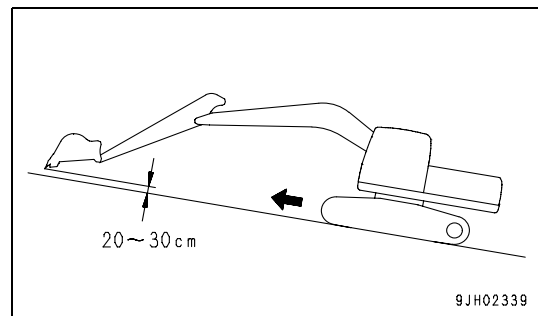

Traveling Downhill

Put the travel lever in the neutral position. This will cause the brake to be automatically applied.

Engine Stopped on Slope

If the engine stops when traveling uphill, move the travel levers to the neutral position, lower the bucket to the ground, stop the machine, then start the engine again.


Cab Doors on Slope

- If the engine stops when the machine is on a slope, never use the left work equipment control lever to carry out swing operations. The upper structure will swing under its own weight.
- Do not open or close the door when the machine is on a slope. The operating effort may suddenly change. Always keep the door locked in position when it is open and when it is closed.

ESCAPE FROM MUD

Always operate carefully to avoid getting stuck in mud. If the machine does get stuck in mud, do as follows to get the machine out.

- Place the machine push-up switch at high-pressure set position (b). This will increase the pushing power of the boom and make it easier to escape.

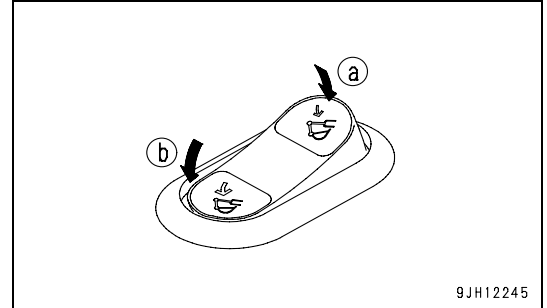


Track on One Side Stuck

NOTICE

When using the boom or arm to raise the machine, always have the bottom of the bucket in contact with the ground. The angle between the boom and arm should be 90° to 110°.


The same applies when using the bucket installed in the reverse direction.

When only one side is stuck in mud, use the bucket to raise the track, then lay boards or logs and drive the machine out.

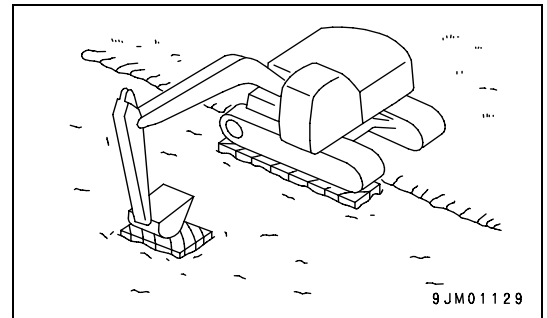

Tracks on Both Sides Stuck

When the tracks on both sides are stuck in mud and they slip, making it impossible for the machine to move, lay boards or logs as explained above, and dig the bucket into the ground in front. Then pull in the arm as in normal digging operations and put the travel levers in the FORWARD position to pull the machine out.

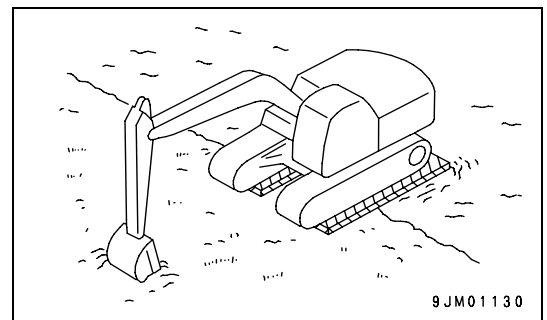

RECOMMENDED APPLICATIONS

In addition to the following, it is possible to further increase the range of applications by using various attachments.

Backhoe Work



A backhoe is suitable for excavating areas that are lower than the machine.

When the condition of the machine is as shown in the diagram on the right (angle between [bucket cylinder and link] and [arm cylinder and arm] is 90°), the maximum excavation force is obtained from the pushing force of each cylinder.

When excavating, use this angle effectively to optimize your working efficiency.

The range for excavating with the arm is from a 45° angle away from the machine to a 30° angle towards the machine.

There may be some differences depending on the excavation depth, but try to stay within the above range rather than operating the cylinder to the end of its stroke.

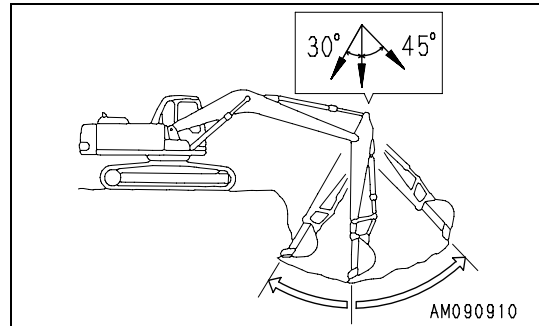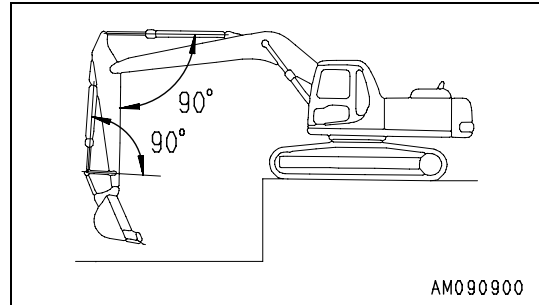


Shovel Work

NOTICE

The rock bucket (PC 400: if equipped, PC 450: standard) interferes with the arm, so it cannot be reversed to carry out excavation to the front.


A shovel is suitable for excavating at a position higher than the machine. Shovel work is performed by attaching the bucket in the reverse direction.

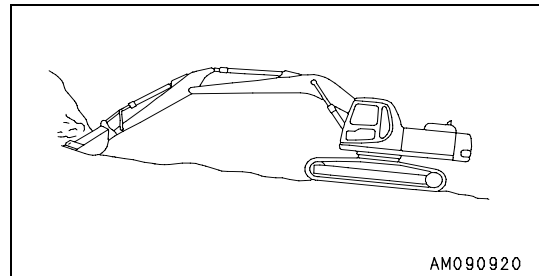

Ditching Work

Ditching work can be performed efficiently by attaching a bucket which matches the digging operation and then setting the tracks parallel to the line of the ditch to be excavated.


To excavate a wide ditch, first dig both sides and then finally remove the center portion.

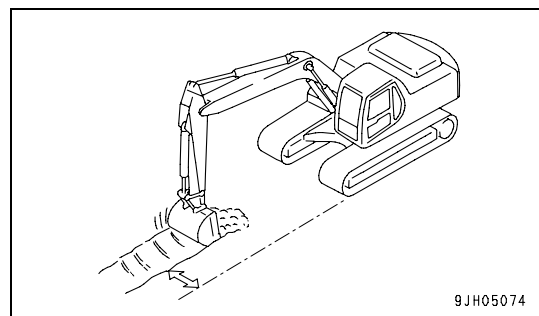

Loading Work

In places where the swing angle is narrow, work efficiency can be enhanced by locating the dump truck in a place easily visible to the operator.

Loading is easier and capacity greater if you begin from the front of the dump truck body than if loading is done from the side.

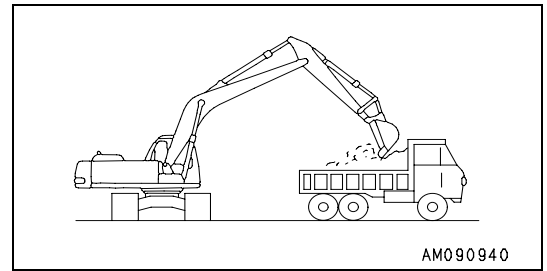

BUCKET REPLACEMENT AND INVERSION

WARNING

- When pins are knocked in with a hammer, pieces of metal may fly and cause serious injury. When carrying out this operation, always wear goggles, hard hat, gloves, and other protective equipment.
- When the bucket is removed, place it in a stable condition.
- If pins are hit with a strong force, there is a hazard that the pin may fly out and injure people in the surrounding area. Make sure that there is no one in the surrounding area before starting the operation.
- When removing the pins, do not stand behind the bucket. In addition, be extremely careful not to put your foot under the bucket while standing at the side for the work.
- When removing or inserting pins, be extremely careful not to get your fingers caught.
- Never insert your fingers into the pin holes when aligning the holes.

Stop the machine on a firm and flat surface and do the work. When performing joint work, appoint a lead and follow that person's instructions and signals.

Replacement

1. Place the bucket in contact with a flat surface.

REMARK



When removing the pins, place the bucket so that it is in light contact with the ground.

If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

NOTICE

After removing the pins, make sure that mud or sand does not get on them. Dust seals are fitted at both ends of the bushings, be careful not to damage them.

2. Remove the double nut on the stopper bolt for arm pin (A) and link pin (B), remove the bolt, pull out arm pin (A) and link pin (B), and then remove the bucket.
3. Align the arm (5) with holes (1) of the replacement bucket and the link (6) with holes (2), then insert grease-coated pins (A) and (B) into hole (1) and hole (2) respectively.

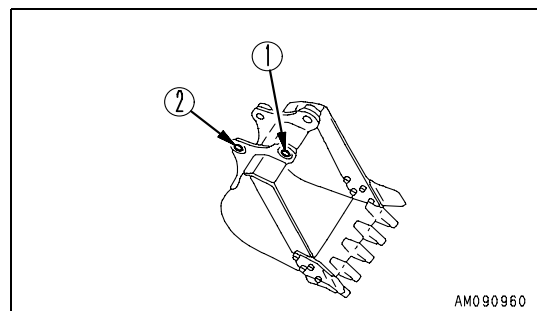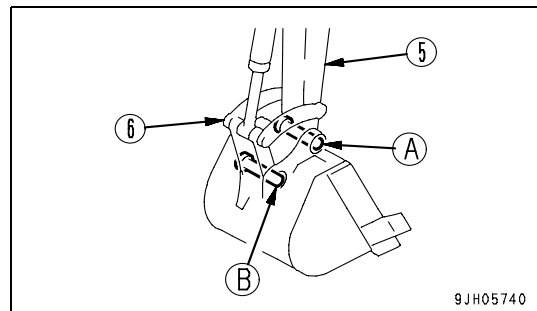



REMARK

When installing the bucket, for arm pin portion (A), fit O-ring (3) to bucket (4) in the position shown in the diagram on the right. After inserting the pin, fit it in the standard groove. For link pin portion (B), install the bucket with O-ring (3) fitted in the standard groove.

4. Install the stopper bolts and nuts for each pin, then grease the pin.

REMARK

Lubricate with grease thoroughly until the grease comes out from the end face. When replacing the bucket, replace the dust seal if it has been damaged. If a damaged seal is used without being replaced, sand and dirt may enter the pin portion and cause abnormal wear of the pin.

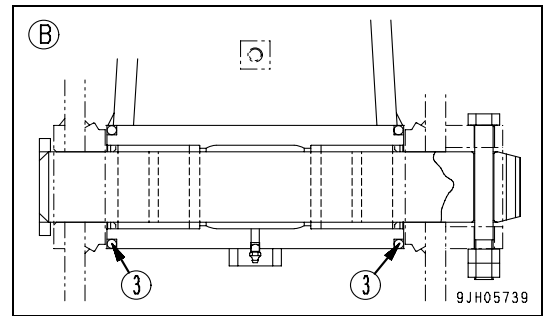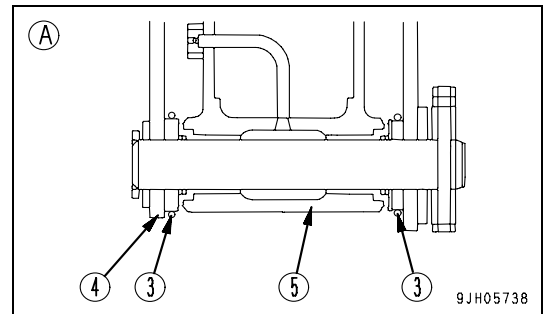

Inversion


NOTICE

The rock bucket (PC 400: if equipped, PC 450: standard) interferes with the arm, so it cannot be reversed to carry out excavation to the front.

1. Place the bucket in contact with a flat surface.

REMARK


When removing the pins, place the bucket so that it is in light contact with the ground. If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

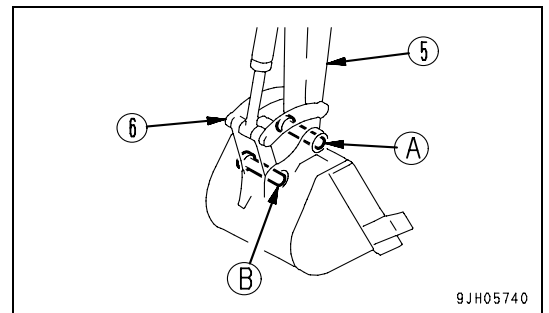


NOTICE

After removing the pins, make sure that mud or sand does not get on them. Dust seals are fitted at both ends of the bushings, be careful not to damage them.

2. Remove the double nut on the stopper bolt for arm pin (A) and link pin (B), remove the bolt, pull out arm pin (A) and link pin (B), and then remove the bucket.

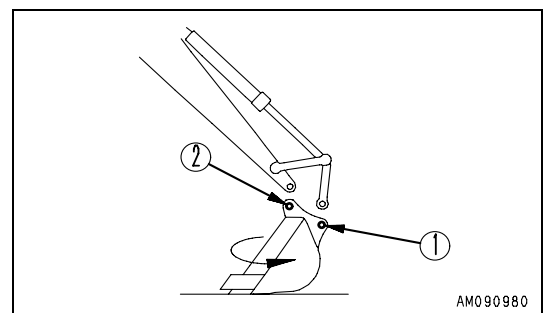

3. After removing the bucket, reverse it.
4. Align arm (5) with replacement bucket hole (1), then align link (6) with hole (2), coat pins (A) and (B) with grease, and install.

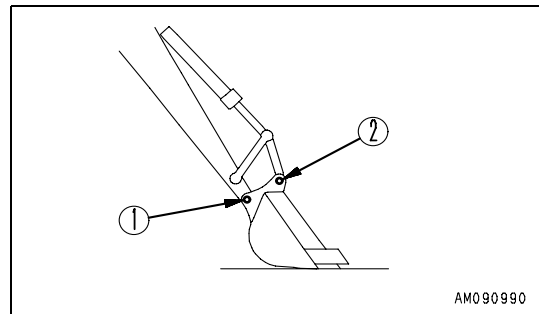

REMARK



When reversing, do not install an O-ring. Keep the O-ring in a safe place until using it next.

5. Install the stopper bolts and nuts for each pin, then grease the pin.

REMARK

Lubricate with grease thoroughly until the grease comes out from the end face.


When replacing the bucket, replace the dust seal if it has been damaged. If a damaged seal is used without being replaced, sand and dirt may enter the pin portion and cause abnormal wear of the pin.

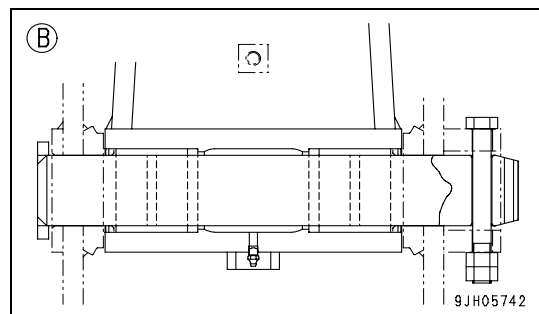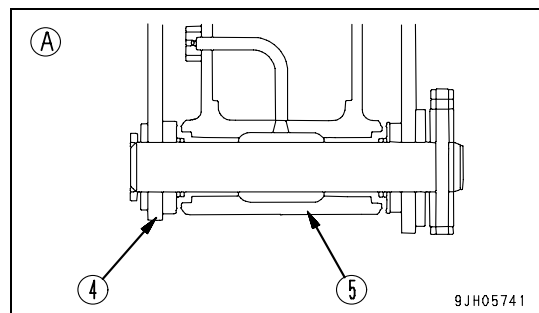


PARKING MACHINE

⚠ WARNING


- **Avoid stopping suddenly. Give yourself ample room when stopping.**
- **When stopping the machine, select flat hard ground and avoid dangerous places.**
 If it is unavoidably necessary to park the machine on a slope, insert blocks underneath the track shoes. As an additional safety measure, thrust the bucket into the ground.
- **If the control lever is touched by accident, the machine may move suddenly, and this may lead to a serious accident.**
 Before leaving the operator's compartment, always set the lock lever securely to LOCK position.

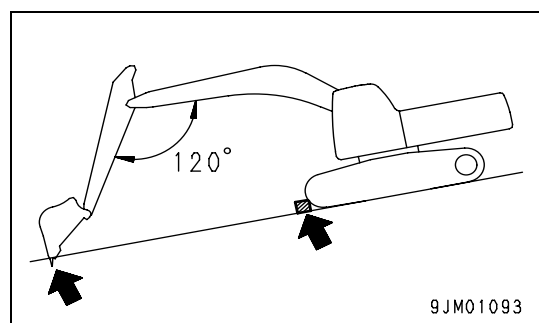

- Put left and right travel levers (1) in the neutral position.
The machine stops.

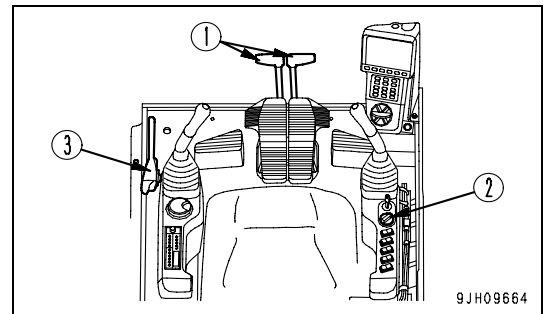


9JH09664

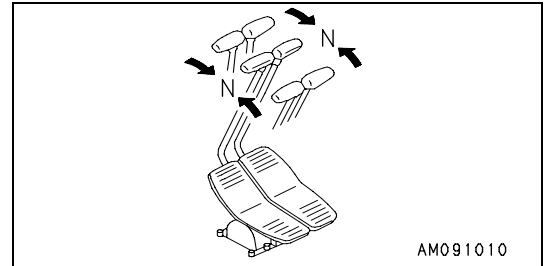


AM091010

- Turn fuel control dial (2) to low idling position (MIN) and lower the engine speed.

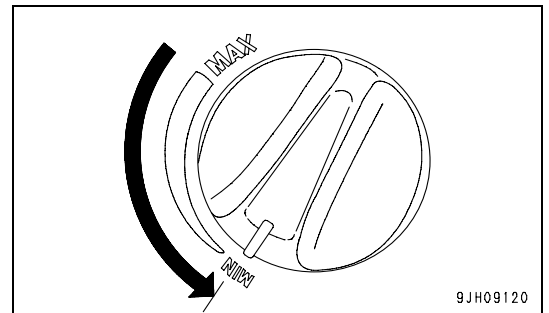


9JH09120

- Lower the bucket horizontally until the bottom touches the ground.

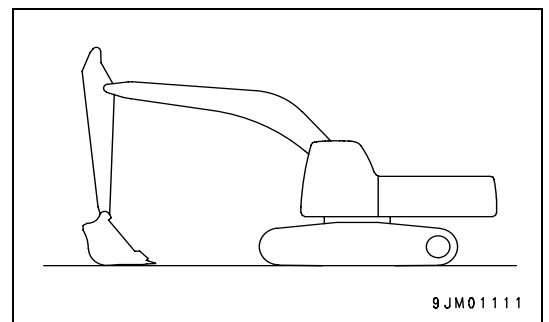


9JM01111

- Set lock lever (3) in the LOCK position (L).

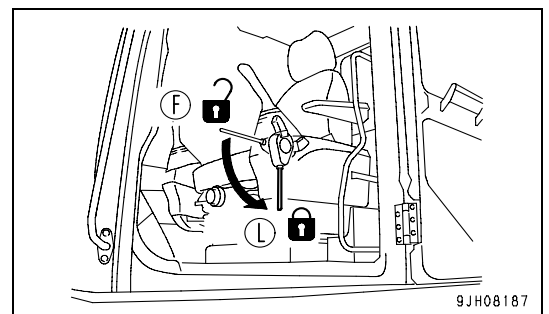

9JH08187

5. Check the engine cooling water temperature and engine oil pressure with the machine monitor.
 - If the coolant temperature gauge is in the red range, allow it to cool until the indicator enters the green range, then stop the engine. For details of the inspection and action to take, see “TROUBLES AND ACTIONS (3-189)“.
 - If the engine oil pressure monitor lights up, stop the engine immediately. For details of the inspection and action to take, see “TROUBLES AND ACTIONS (3-189)“.
6. Stop the engine. For details on the procedure for stopping the engine, see “STOPPING THE ENGINE (3-141)“.

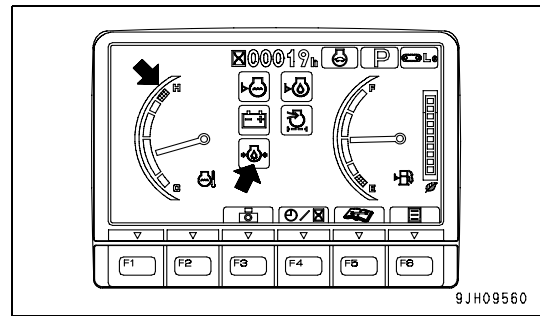

MACHINE INSPECTION AFTER DAILY WORK

1. Walk around the machine and check the work equipment, machine exterior, and undercarriage, also check for any leakage of oil or coolant. If any problems are found, repair them.
2. Fill the fuel tank.
3. Check the engine compartment for paper and debris. Clean out any paper and debris to avoid a fire hazard.
4. Remove any mud affixed to the undercarriage.



LOCKING

Always lock the following places.

- (1) Operator's cab door

Always close the window.

- (2) Fuel tank filler port
- (3) Battery box cover
- (4) Left side door of the machine
- (5) Right side door of the machine
- (6) Hydraulic tank filler port
- (7) Air conditioner FRESH filter intake port
- (8) Engine hood front cover
- (9) Engine hood rear cover

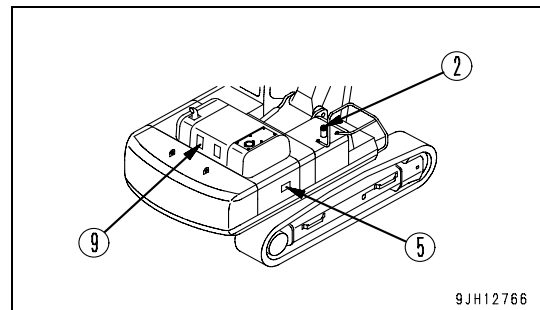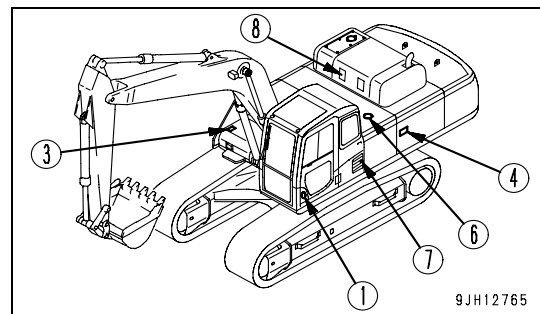

REMARK

Use the starting switch key to lock and unlock all these places.

TRANSPORTATION

When transporting the machine, observe all related laws and regulations, and be careful to assure safety.

TRANSPORTATION PROCEDURE

- Select the method of transportation to match the weight and dimensions given in “SPECIFICATIONS (PAGE 5-2)”.
Note that the weight and dimensions given in SPECIFICATIONS may differ according to the type of shoe or arm, or other attachments.
- Please consult your Komatsu distributor for details of the procedure for transporting machines with a protective guard installed for the operator's cab.

LOADING AND UNLOADING WITH TRAILER

WARNING

Always obey the following when loading or unloading the machine from a trailer.

Select firm, level ground when loading or unloading the machine.

Maintain a safe distance from the edge of the road.

Always turn the auto-deceleration switch OFF (cancel).

If the auto-deceleration switch is left ON, the machine may suddenly start moving.

Always set the travel speed switch to low speed (Lo), run the engine at low idling, and operate the machine slowly when loading or unloading.

In cold areas, carry out the warming-up operation thoroughly and make sure that the engine speed is stable before carrying out the loading or unloading operation.

Never correct your steering on the ramps. There is danger that the machine may tip over.

If necessary, drive off the ramps or back on to the trailer and correct the direction.

It is dangerous to use the work equipment for loading and unloading operations. Always use ramps.

When on the ramps, do not operate any lever except the travel lever.

The center of gravity of the machine will change suddenly at the joint between the ramps and the trailer, and there is danger of the machine losing its balance.

Travel slowly over this point.

If it is necessary to swing the work equipment on the trailer platform, the footing is unstable, so be extremely careful that the machine does not tip over.

If the work equipment is installed to the machine, pull the work equipment in, and operate slowly to prevent the machine from losing its balance.

Position a flagman to give guidance to prevent the machine from coming off the ramps and to ensure safety in the operation.



Always observe the following regarding the ramps and trailer platform.

Use ramps with ample width, length, thickness, and strength and install them at a maximum slope of 15°.

When using piled soil, compact the piled soil fully to prevent the slope face from collapsing.

Clean the machine tracks and ramps before starting in order to prevent the machine from slipping on the ramps.

There is danger of the machine slipping if there is water, snow, grease, oil, or ice on the ramp surface.

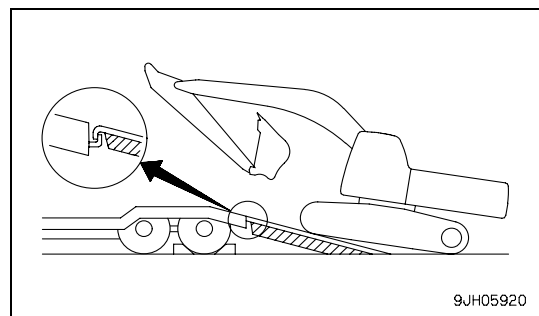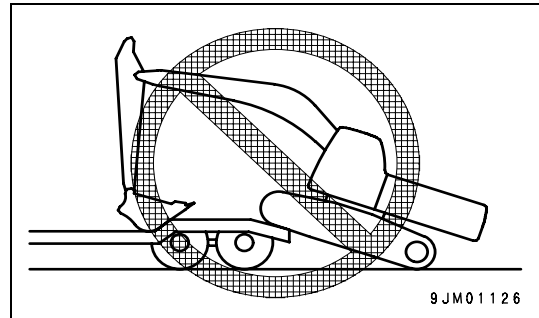

When loading or unloading, always use ramps or a platform. Proceed as follows.


Loading

1. Load and unload on firm level ground only.

Maintain a safe distance from the edge of a road.


2. Apply the trailer brakes securely, then put blocks (1) under the tires to prevent the trailer from moving.

- Set left and right ramps (2) parallel to each other and equally spaced to the left and right of center (3) of the trailer. Make angle of installation (4) a maximum of 15°. If the ramps bend a large amount under the weight of the machine, put blocks under the ramps to prevent them from bending.

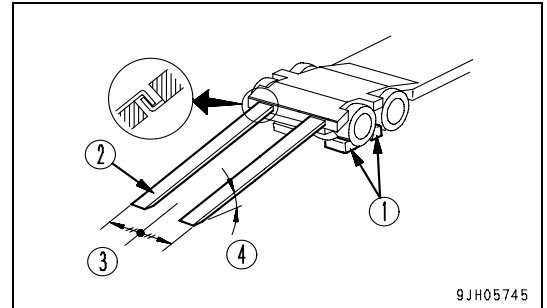


3. Turn the travel speed selector switch to low speed travel (Lo lamp lights up).

- Press travel speed selector switch (5) to switch the travel speed. The travel speed (Lo, Mi, Hi) is displayed on the travel speed monitor (6).

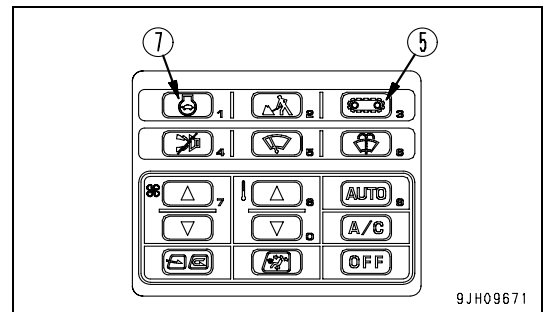

4. Turn auto-deceleration switch (7) OFF and operate the fuel control dial to set the engine speed to low idling.


- Each time auto-deceleration switch (7) is pressed, it switches OFF → ON → OFF in turn.
- When auto-deceleration switch (7) is turned OFF, the auto-deceleration monitor (8) goes out.

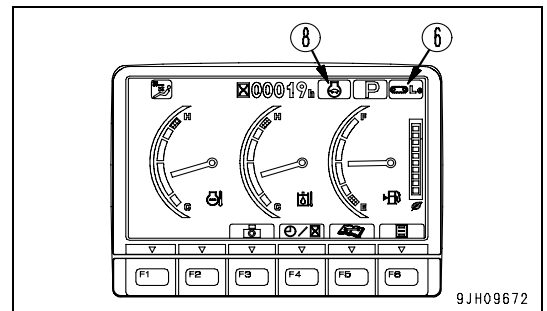

5. Turn the swing lock switch ON to apply the swing lock.

- When the swing lock switch is turned to the ON position, the swing lock monitor (9) lights up.
- (a): ON position

(b): OFF position

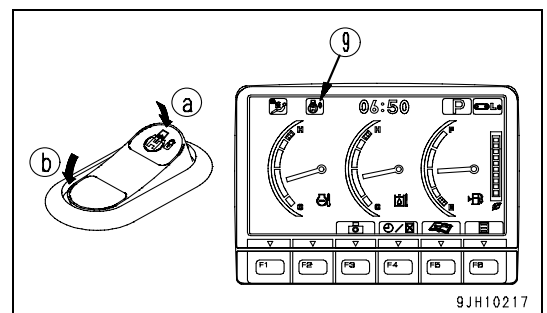

- 6. If the machine is equipped with work equipment, set the work equipment at the front, and travel forward to load it; if it has no work equipment, travel in reverse to load it.

Follow instructions and signals of a conductor particularly when traveling in reverse.

- 7. Before moving onto the ramps, make sure that the machine is positioned in a straight line with the ramps and that the center line of the machine matches that of the trailer.

Align the direction of travel with the ramps and travel slowly.

Lower the work equipment as far as possible without causing interference.

When on the ramps, operate only the travel lever. Do not operate any other lever.





- 8. When loading or unloading a machine with the work equipment installed, at the point where the tracks are on both the ramps and the ground surface, turn the swing lock switch OFF, then swing the upper structure slowly 180°.

After doing that, drive slowly in reverse and load the machine onto the trailer.


- 9. Turn the swing lock switch ON to apply the swing lock.
 - When the swing lock switch is turned to the ON position, the swing lock monitor (9) lights up.

(a): ON position

(b): OFF position

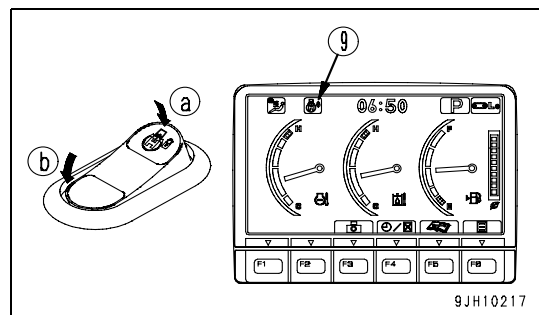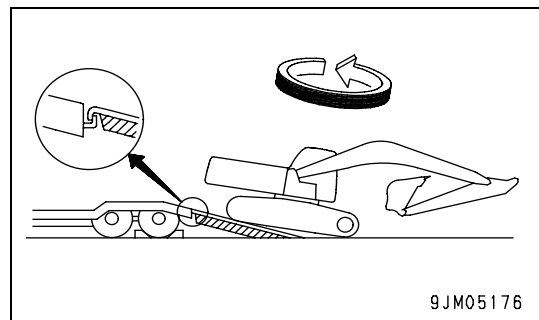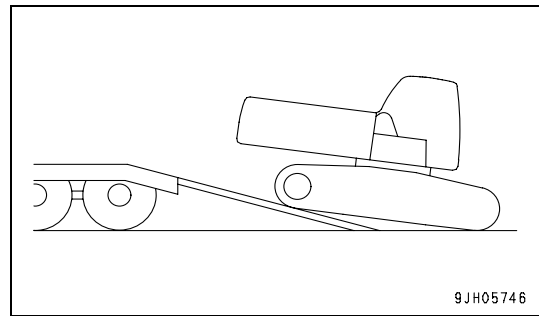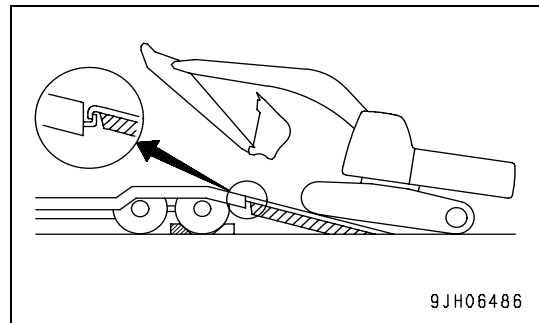

10. When the machine travels over the rear wheels of the trailer, it becomes unstable, drive slowly and carefully. (Never operate the steering.)
11. At the moment the machine passes the rear wheels, it tilts forward, be careful not to let the work equipment hit the trailer body. Drive the machine forward to the specified position, then stop the machine.
12. Lower the work equipment on top of wooden blocks.

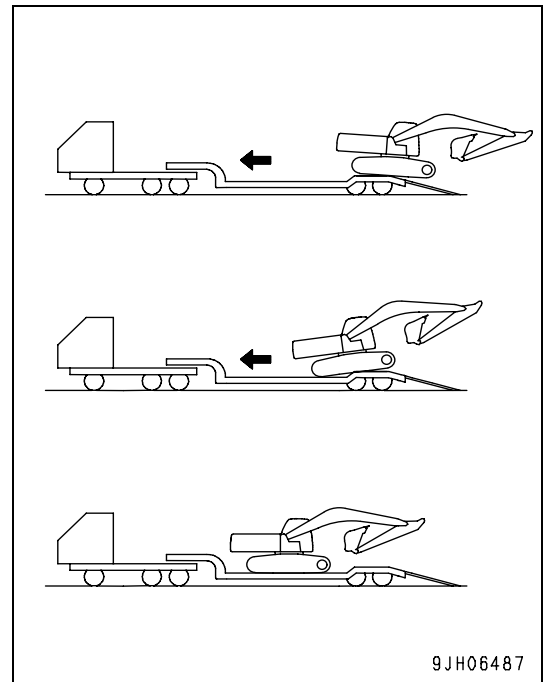


Securing Machine

NOTICE


- Stow the antenna and reassemble the mirrors so that they are within the width of the machine.
- To prevent damage to the bucket cylinder during transportation, fit a wooden block at one end of the bucket cylinder to prevent it from touching the floor.

Load the machine onto a trailer as follows:

1. Extend the bucket and arm cylinders fully, then lower the boom slowly.

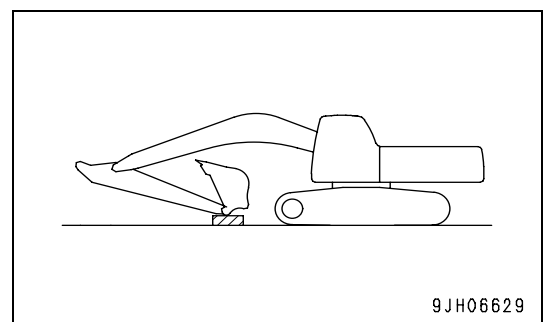


2. Set the lock lever securely to the LOCK position (L).
3. Stop the engine, then remove the key from the starting switch.
4. Close all doors, windows, and covers.
Lock the covers, caps, and doors fitted with locks.

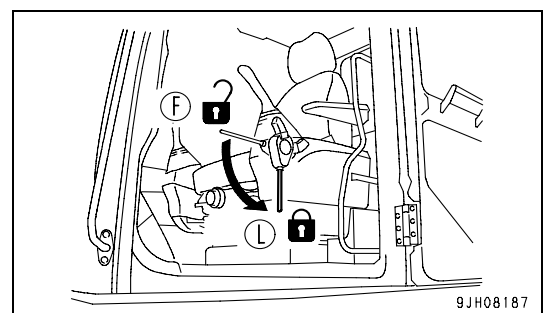


- Place blocks under both ends of the tracks to prevent the machine from moving during transportation, and secure the machine with chains or wire rope of suitable strength.

Be particularly careful to secure the machine in position so it does not slip to the side.

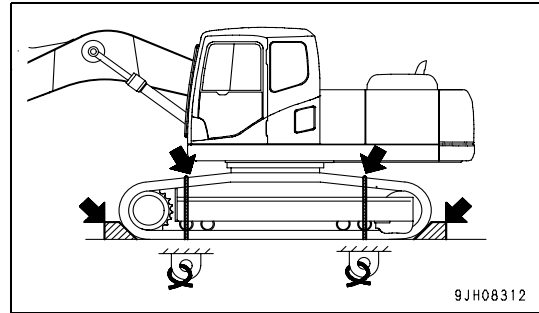

Stowing Radio Antenna

- Loosen bolt (2) of radio antenna (1) at the rear of the cab, lower the antenna, then tighten bolt (2) again to secure radio antenna (1) in position.
- When unloading the machine from the trailer and operating it, follow the opposite procedure from stowing to set radio antenna (1) vertical, then secure it in position with bolt (2).

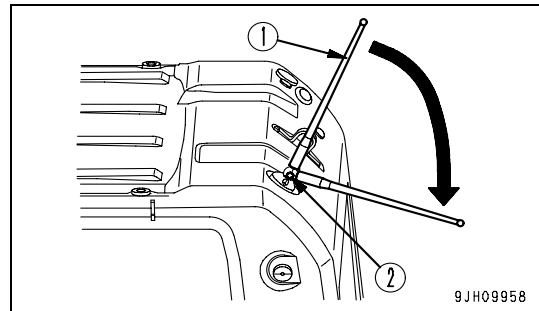


Rear View Mirrors

The mirrors are at the positions shown in the diagram on the right.

If they are damaged, or are to be removed for shipment, or are to be installed again, use the following procedure.


- After installing the mirrors, be sure to adjust them, referring to "Rear View Mirrors (3-122)".

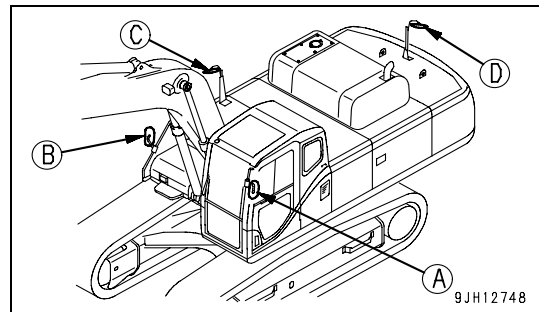

Removal


Mirror (A)

- Loosen locknut (2) of mirror (1), then remove mirror (1) from support (3).
- Loosen bolt (4) and remove support (3) and clamp (5) from the handrail.

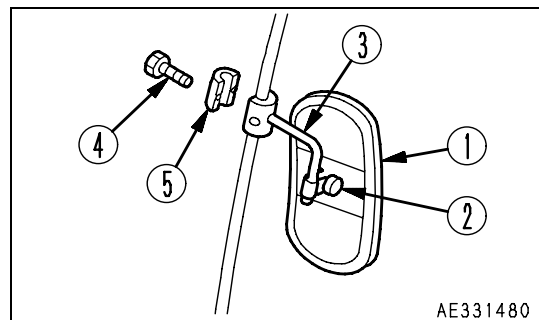

Mirror (B)


3. Loosen mounting bolt (2), then remove mirror (1) from support (3).
4. Loosen bolt (4) and remove support (3) and clamp (5) from the handrail.

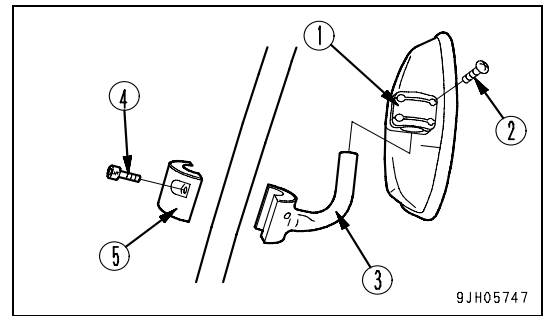

Mirrors (C), (D)

(If equipped)


5. Loosen locknut (2), then remove mirror (1) from bracket (3).
6. Remove bolt (4), then remove bracket (3) from the machine.

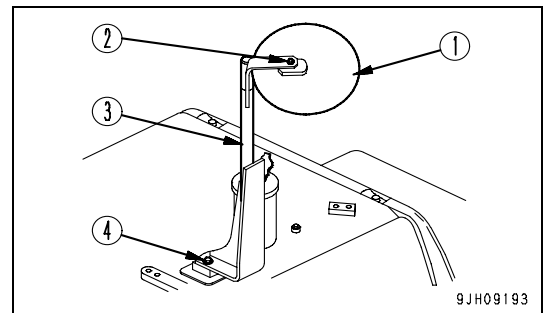

Installation


Mirror (A)

1. Install support (3) and clamp (5) to the handrail, then tighten with bolt (4).
2. Install mirror (1) to bracket (3), then tighten locknut (2).

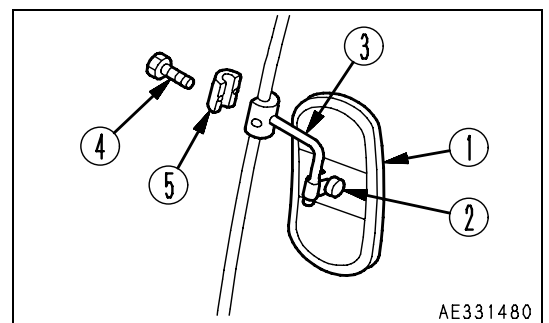

Mirror (B)


3. Install support (3) and clamp (5) to the handrail, then tighten with bolt (4).
4. Install mirror (1) to support (3), then tighten lock bolt (2).

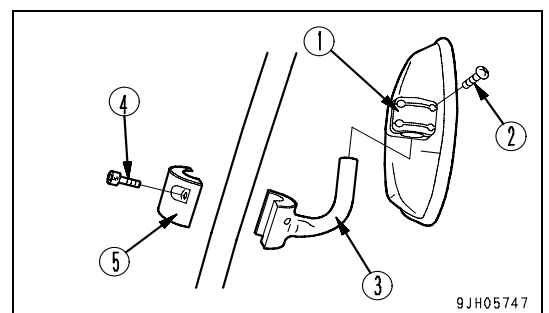

Mirrors (C), (D)


(If equipped)

5. Install bracket (3) to the machine with bolt (4).
6. Install mirror (1) to bracket (3), then tighten locknut (2).

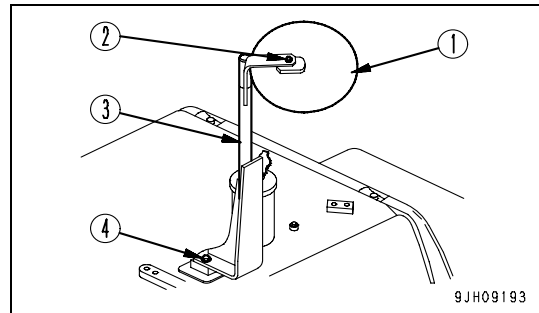


Unloading

1. Load and unload on firm level ground only. Maintain a safe distance from the edge of a road.
2. Apply the trailer brakes securely, then put blocks (1) under the tires to prevent the trailer from moving.
 - Set left and right ramps (2) parallel to each other and equally spaced to the left and right of center (3) of the trailer. Make angle of installation (4) a maximum of 15°. If the ramps bend a large amount under the weight of the machine, put blocks under the ramps to prevent them from bending.

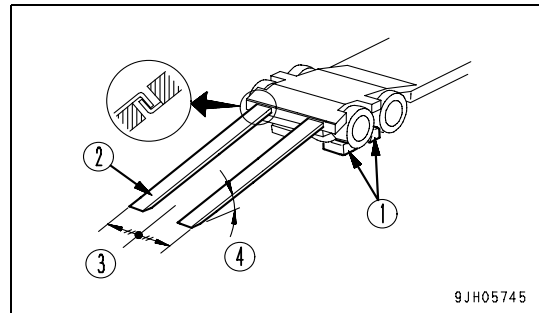


3. Remove the chains and wire ropes fastening the machine.
4. Start the engine.

Warm the engine up fully.
5. Set the lock lever to FREE position (F).

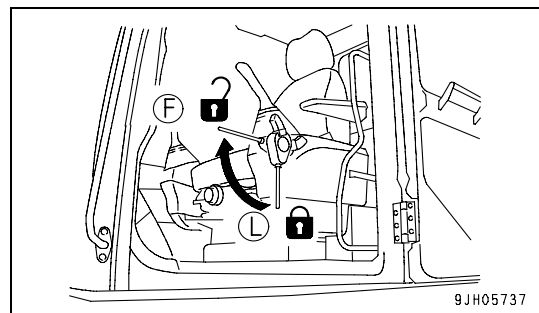


6. Turn the travel speed selector switch to low speed travel (Lo lamp lights up).

- Press travel speed selector switch (5) to switch the travel speed. The travel speed (Lo, Mi, Hi) is displayed on the travel speed monitor (6).

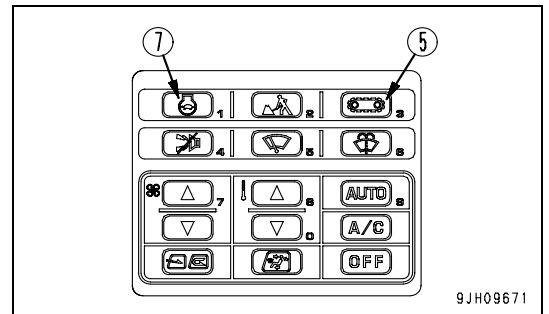


7. Turn auto-deceleration switch (7) OFF and operate the fuel control dial to set the engine speed to low idling.

- Each time auto-deceleration switch (7) is pressed, it switches OFF → ON → OFF in turn.
- When auto-deceleration switch (7) is turned OFF, the auto-deceleration monitor (8) goes out.

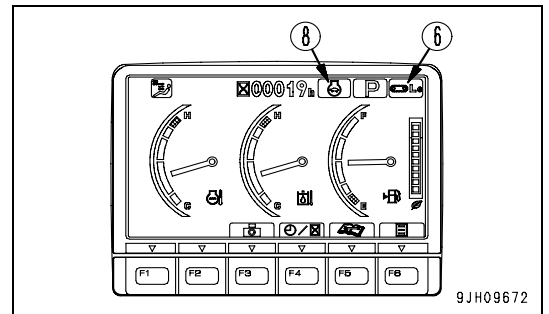


8. Raise the work equipment, pull in the arm under the boom, then move the machine slowly.

9. When the machine is horizontal on top of the rear wheels of the trailer, stop the machine.

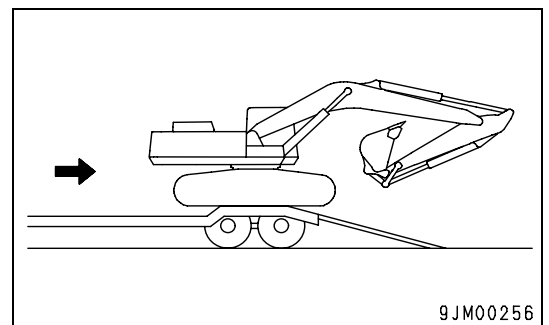


NOTICE

- **When unloading the machine, always keep the arm and boom at an angle of 90° - 110°.**
If the machine is unloaded with the arm pulled in, it will cause damage to the machine.
- **When moving onto the ramps, do not thrust the bucket into the ground. This will cause damage to the hydraulic cylinders.**

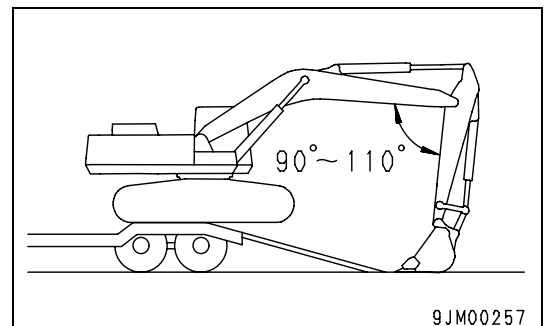

10. When moving from the rear of the trailer on to the ramps, set the angle of the arm and boom to 90° to 110°, lower the bucket to the ground, then move the machine slowly.

11. When moving down the ramps, operate the boom and arm slowly to lower the machine carefully until it is completely off the ramps.

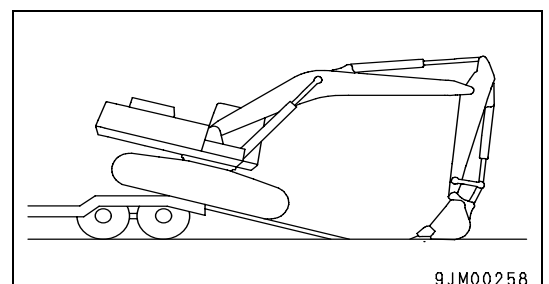

LIFTING MACHINE

WARNING

The operator carrying out the lifting operation using a crane must be a properly qualified crane operator. Never raise the machine with any worker on it. Always make sure that the wire rope is of ample strength for the weight of this machine. When lifting, keep the machine horizontal. When carrying out lifting operations, set the lock lever to the LOCK position to prevent the machine from moving unexpectedly. Never enter the area under or around a raised machine. Never try to lift the machine in any posture other than the posture given in the procedure below or using lifting equipment other than in the procedure below. There is a hazard that the machine may lose its balance.


NOTICE

This method of lifting applies to the standard specification machine. The method of lifting differs according to the attachments and options installed. For details of the procedure for machines that are not the standard specification, please consult your Komatsu distributor.


For weight, see "SPECIFICATIONS (5-2)".

When lifting the machine, carry out the operation on flat ground as follows.

1. Start the engine, then swing the upper structure so that the work equipment will be on the side of sprocket (1).
2. Extend the bucket cylinder and arm cylinder fully, then lower the work equipment to the ground as shown in the diagram on the right using the boom cylinder.

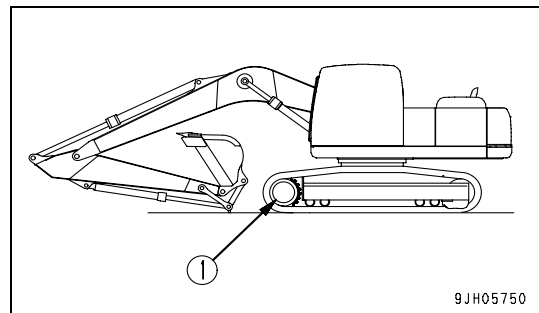

3. Set the lock lever securely to the LOCK position (L).

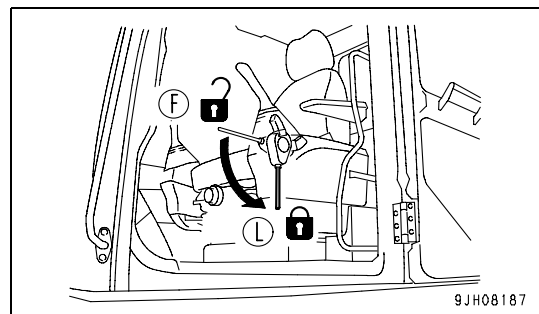


4. Stop the engine, check that there is nothing around the operator's compartment, then get off the machine. Close the cab door and front glass securely.

5. Pass wire ropes between the 1st and 2nd track rollers from the front and between the 1st and 2nd track rollers from the rear.


However, for machines equipped with a full roller guard for the track roller, pass the wire rope under the track.

6. Set the lifting angle (A) of the wire rope to 30° to 40° , then lift the machine slowly.
7. After the machine comes off the ground, check the hook condition and the lifting posture, and then lift slowly.

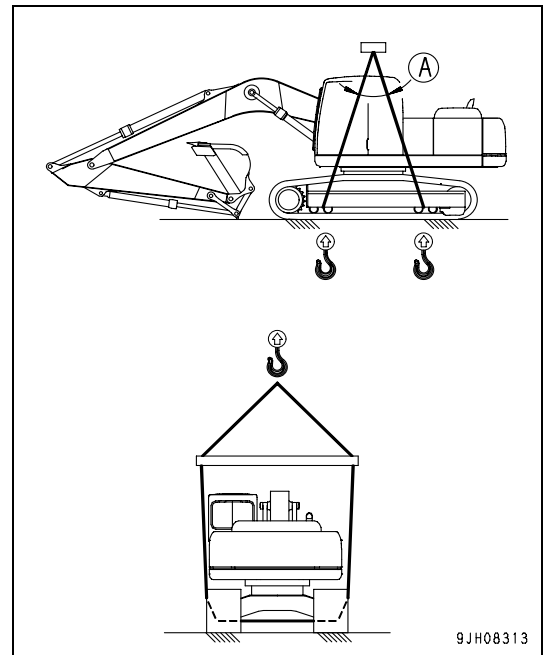

TRANSPORTATION POSTURE


This machine is separated into four kits for transportation: (1) upper structure, (2) cab, (3) work equipment, (4) others. When transporting the machine, please ask your Komatsu distributor to divide the machine up into kits.

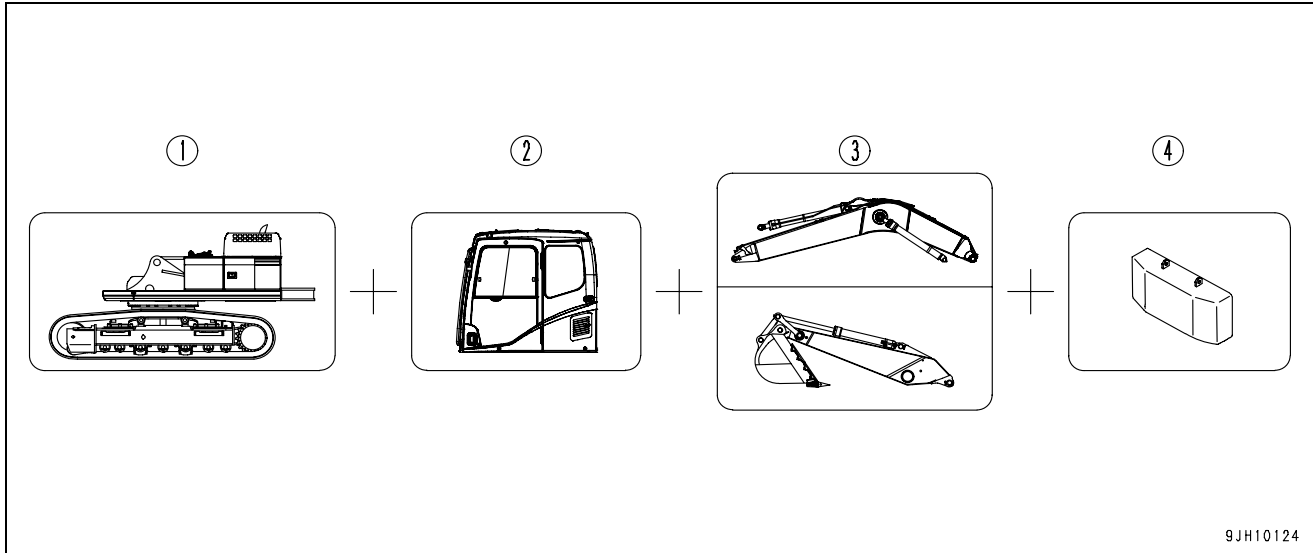

Posture for Each Unit


Upper Structure + Undercarriage

Item	Unit	PC450	PC450LC
A	mm	3,285	3,285
B	mm	5,850	6,015
Overall width	mm	3,340	3,440
Weight	kg	24,510	25,510

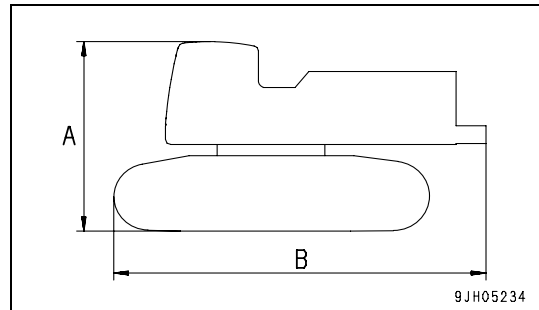


Upper Structure + Undercarriage (without cab)

Item	Unit	PC450	PC450LC
A	mm	3,205	3,205
B	mm	5,850	6,015
Overall width	mm	3,340	3,440
Weight	kg	23,940	24,940

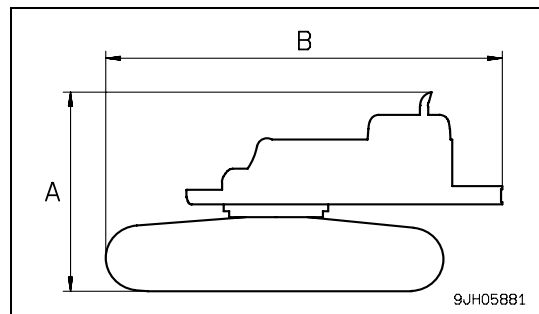

Cab


Item	Unit	PC450, PC450LC
A	mm	1,670
B	mm	1,840
Overall width	mm	1,000
Weight	kg	570

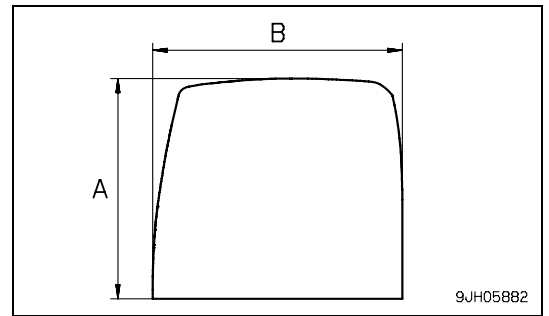

Work Equipment


● Boom

Item	Unit	PC450, PC450LC
A	mm	7,280
B	mm	1,730
Overall width	mm	985
Weight	kg	4,600

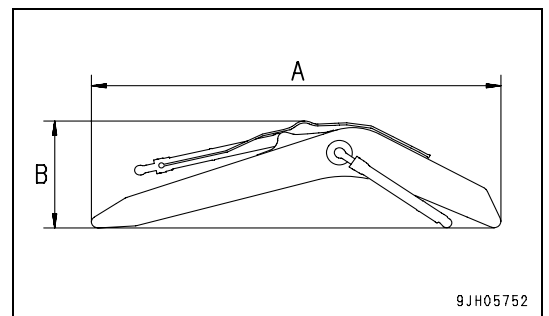

● Arm, Bucket


Item	Unit	PC450, PC450LC
A	mm	4,890
B	mm	1,950
Overall width	mm	1,620
Weight	kg	3,400

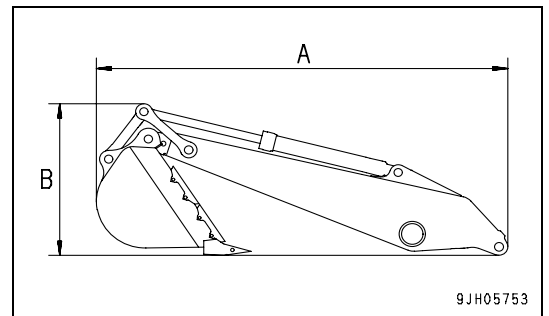

Others

● Counterweight

Item	Unit	PC450, PC450LC
A	mm	1,145
B	mm	2,996
C	mm	970
Weight	kg	9,220

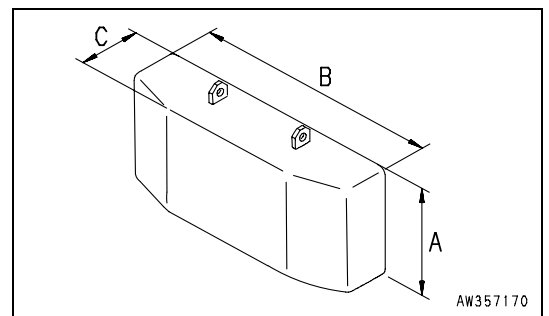




PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE

WARNING

- Never use the machine for operations with the track frame retracted.
- Never operate the cylinders suddenly when extending or retracting the track frame gauge width. It is dangerous if they are operated suddenly.
- Stop the machine on firm level ground when extending or retracting the track frame gauge width.


Reducing Track Gauge

1. Remove center frame mounting bolts (1) (front and rear: 9 each) on one side.
2. Swing the upper structure to the side where the track frame gauge is to be reduced, set it at 90° to track frame (2), then use the work equipment to jack up the track frame.
3. Set blocks (3) (20 to 30 cm wooden blocks) towards the outside of track frame (2), then use the boom cylinder to lower the machine slowly. The track frame (2) will slide and stop when it contacts the stopper.
4. Lower the machine slowly to the ground, then install 8 of removed mounting bolts (front and rear: 4 each).
 - Tightening torque: 1520 - 1910 Nm (155 - 195 kgm)
5. Follow the same procedure to retract the track frame on the other side.

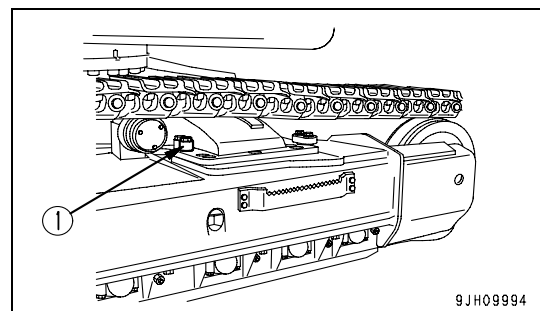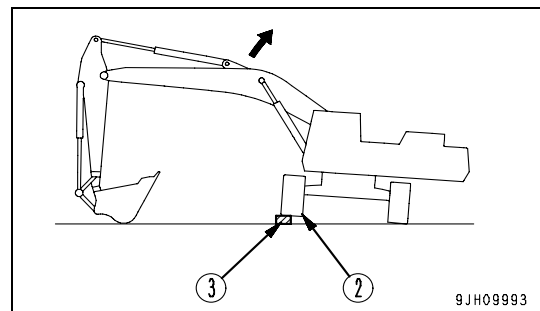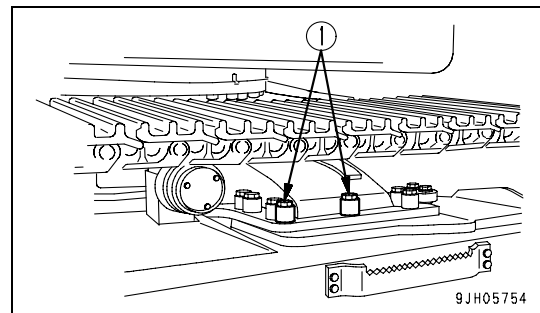

Increasing Track Gauge


1. Remove center frame mounting bolts (1) (front + rear: each 4 bolts) from the front and rear of the track frame on the side to be extended.

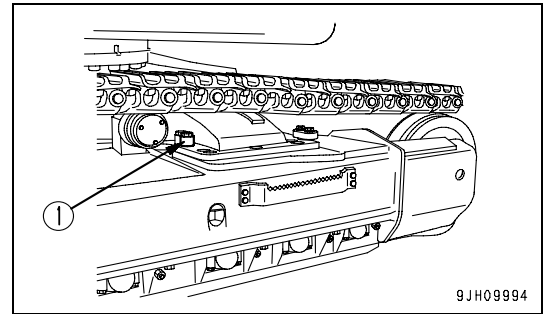


2. Swing the upper structure to the opposite side to where the track frame gauge is to be increased, set it at 90° to track frame (2), then use the work equipment to jack up the track frame.

REMARK

Height (H) of the track frame being raised should be less than 50 mm. Take care not to raise the track frame so much that the stopper bolt is distorted.

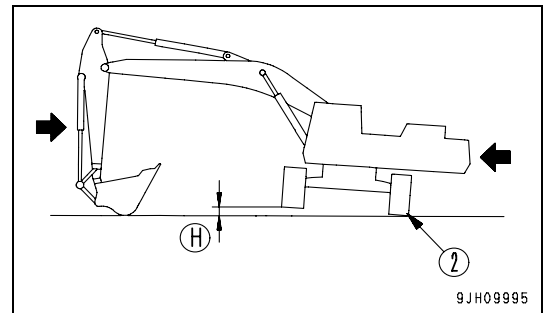

3. Using the arm, pull the machine to the front.
The track frame will slide.
4. Extend the track frame until it comes into contact with the stopper, then lower the machine slowly to the ground. Install bolts (1) (front + rear: each 9 bolts) and tighten to specified torque.
 - Tightening torque: 1520 - 1910 Nm (155 - 195 kgm)
5. Follow the same procedure to retract the track frame on the other side.

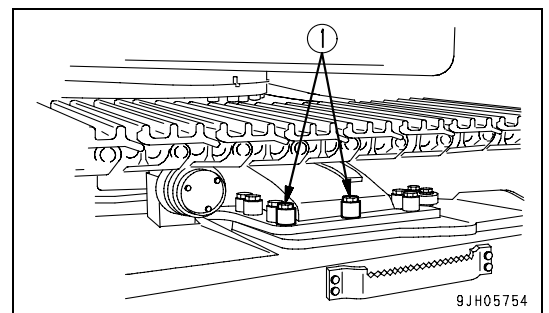

COLD WEATHER OPERATION

COLD WEATHER OPERATION INFORMATION

If the temperature becomes low, it becomes difficult to start the engine, and the coolant may freeze, so do as follows.

Fuel and Lubricants

Change to fuel and oil with low viscosity for all components. For details of the specified viscosity, see "RECOMMENDED FUEL, COOLANT, AND LUBRICANT (4-12)".

Cooling System Coolant

WARNING

- Antifreeze is toxic. Be careful not to get it into your eyes or on your skin. If it should get into your eyes or on your skin, wash it off with large amounts of fresh water and see a doctor at once.
- When changing the coolant or when handling coolant containing antifreeze that has been drained when repairing the radiator, please contact your Komatsu distributor or request a specialist company to carry out the operation. Antifreeze is toxic. Do not let it flow into drainage ditches or spray it onto the ground surface.
- Antifreeze is flammable. Do not bring any flame close. Do not smoke when handling antifreeze.

NOTICE

- Use Komatsu Supercoolant (AF-NAC) wherever available, or use permanent type antifreeze coolant.
- Never use methanol, ethanol, or propanol-based antifreeze.
- Do not use any water leakage prevention agent, either alone, or in combination with antifreeze.
- Do not mix one brand of antifreeze with a different brand.
- When using Komatsu Supercoolant (AF-NAC), there is no need to use a corrosion resistor. For details, see "CLEAN INSIDE OF COOLING SYSTEM (4-27)".
- For details of the antifreeze mixture when changing the coolant, see "CLEAN INSIDE OF COOLING SYSTEM (4-27)".

Battery

WARNING

- The battery generates flammable gas. Do not bring fire or sparks near the battery.
- Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with a large amount of water and consult a doctor.
- Battery electrolyte dissolves paint. If it gets on the bodywork, wash it off immediately with water.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is danger that the battery may explode.
- Battery electrolyte is toxic. Do not let it flow into drainage ditches or spray it on to the ground surface.

When the ambient temperature drops, the capacity of the battery will also drop. If the battery charge ratio is low, the battery electrolyte may freeze. Maintain the battery charge as close as possible to 100%. Insulate it against cold temperature to ensure the machine can be started easily the next morning.

REMARK

Measure the specific gravity and calculate the charging rate from the following conversion table.

Charging Rate (%)	Electrolyte Temperature (°C)			
	20	0	-10	-20
100	1.28	1.29	1.30	1.31
90	1.26	1.27	1.28	1.29
80	1.24	1.25	1.26	1.27
75	1.23	1.24	1.25	1.26

- As the battery capacity drastically drops in low temperatures, cover or remove the battery from the machine, store the battery in a warm place, and install it again the next morning.
- If the electrolyte level is low, add distilled water in the morning before beginning work. Do not add water after the day's work to prevent diluted electrolyte in the battery from freezing during the night.

AFTER DAILY WORK COMPLETION

WARNING

Performing idle-running of the tracks is dangerous, stay well away from the tracks.

To prevent mud, water, or the undercarriage from freezing and making it impossible for the machine to move on the following morning, observe the following precautions.

- Remove all the mud and water from the machine body. In particular, wipe the hydraulic cylinder rods clean to prevent damage to the seal caused by mud, dirt, or drops of water on the rod from getting inside the seal.


- Park the machine on hard, dry ground.

If this is impossible, park the machine on boards.

The boards prevent the tracks from freezing to the ground, and allow the machine to be moved the next morning.

- Open the drain valve and drain any water collected in the fuel system to prevent it from freezing.
- Fill the fuel tank to capacity. This minimizes moisture condensation in the tank when the temperature drops.
- After operation in water or mud, remove water from undercarriage as described below to extend undercarriage service life.

1. Swing 90° with engine at low idle and bring the work equipment to the side of the track.
2. Jack up the machine until the track is raised slightly from the ground. Rotate the track under no load. Repeat this procedure on both the left and right sides.

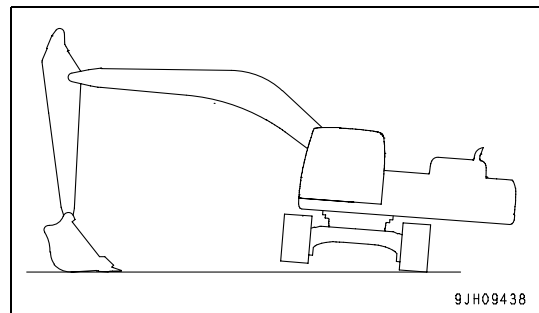

AFTER COLD WEATHER SEASON

When the season changes and the weather becomes warmer, do as follows.

- Replace the fuel and oil for all parts with oil of the viscosity specified.

For details, see "RECOMMENDED FUEL, COOLANT, AND LUBRICANT (4-12)".


LONG TERM STORAGE

BEFORE STORAGE

NOTICE

To protect the hydraulic cylinder piston rod while in storage, keep the work equipment in the posture shown at right.

(This prevents rust from developing on the piston rod)

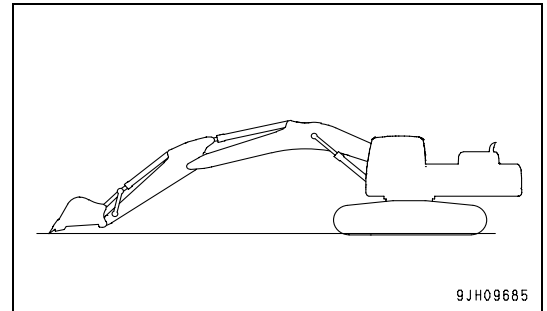

When putting the machine in storage for a long time (more than one month), do as follows.

- Clean and wash all parts, then store the machine indoors. If the machine has to be stored outdoors, select level ground and cover the machine with canvas.
- Completely fill the fuel tank. This prevents moisture from collecting.
- Lubricate and change the oil before storage.
- Coat the exposed portion of the hydraulic cylinder piston rod with grease.
- Disconnect the negative terminals of the battery and cover it or remove it from the machine and store it separately.
- Lock each control lever and pedal with the lock lever and pedal lock.
- Set the stop valve to the LOCK position on machines ready for attachments. Install the blind plugs to the elbows.
For details of the LOCK and FREE positions of the stop valve, see "ATTACHMENT REMOVAL AND INSTALLATION (6-17)".
- To prevent corrosion, be sure to fill the cooling system with Supercoolant (AF-NAC) or permanent type anti-freeze (density between 30% and 68%).

DURING STORAGE



WARNING

If it is necessary to perform the rust-prevention operation while the machine is indoors, open the doors and windows to improve ventilation and prevent gas poisoning.

- During storage, operate and move the machine for a short distance once a month so that a new film of oil will coat moving parts. At the same time, also charge the battery.
- When operating the work equipment, wipe off all the grease from the hydraulic cylinder rods.
- If the machine is equipped with an air conditioner, operate the air conditioner for 3 to 5 minutes once a month to lubricate all parts of the air conditioner compressor. Always run the engine at low idle when doing this. In addition, check the refrigerant level twice a year.

AFTER STORAGE

NOTICE

If the machine has been stored without carrying out the monthly rust-prevention operation, consult your Komatsu distributor before using it.

When using the machine after long-term storage, do as follows before using it.

- Wipe off the grease from the hydraulic cylinder rods.
- Add oil and grease at all lubrication points.
- When the machine is stored for a long period, moisture in the air will mix with the oil. Check the oil before and after starting the engine. If there is water in the oil, change all the oil.

STARTING MACHINE AFTER LONG-TERM STORAGE

When starting the engine after long-term storage, carry out the warming-up operation thoroughly. For details, see "Engine Warm Up (3-131)".

TROUBLES AND ACTIONS

RUNNING OUT OF FUEL

When starting the engine again after running out of fuel, fill with fuel, then bleed the air from the fuel system before starting the engine.

Always watch the fuel level and be careful not to run out of fuel.

If the engine has stopped because of lack of fuel, it is necessary to use the priming pump to bleed the air completely from the fuel circuit.

Procedure for Bleeding Air



CAUTION

This engine consists of higher precision parts than on the conventional fuel injection pump and nozzle, so if dirt gets in, it will cause problems. If there is any dirt stuck to the fuel line, use fuel to wash it off completely.

Be careful when opening the air bleed plug at the fuel filter head. The system is still under pressure and fuel may spurt out.




1. Loosen air bleed plug (A) at the fuel main filter head (1).
2. Loosen wing nut (4) holding lever (3) of priming pump (2).
3. Push in lever (3) repeatedly.

Check that bubbles come out with the fuel from air bleed plug (A).

4. Tighten air bleed plug (A).
Tightening torque: 4.9 to 6.9 Nm (0.5 to 0.7 kgm)
5. Tighten wing nut (4) securely to lock lever (3) in position.
Target tightening torque: 11.8 Nm (1.2 kgm)
6. Turn the key in the starting switch to the START position and start the engine.

When doing this, do not crank the starting motor continuously for more than 20 seconds. If the engine does not start, wait for at least 2 minutes, then try again. Perform this operation a maximum of 4 times.



7. If the engine does not start, repeat the operation from Step 1.

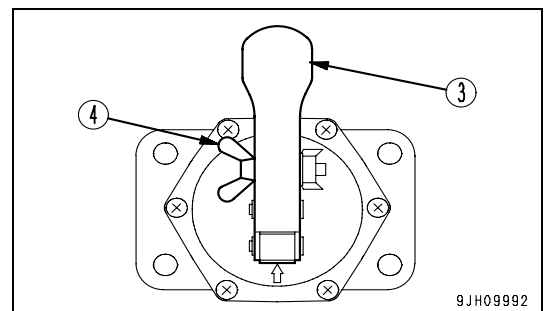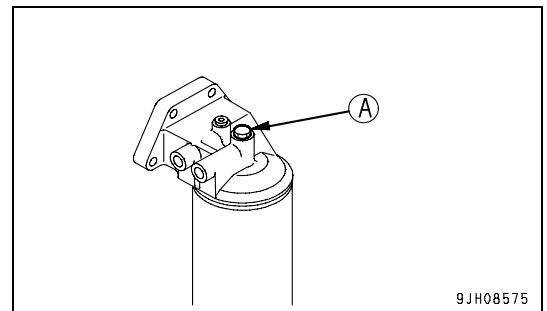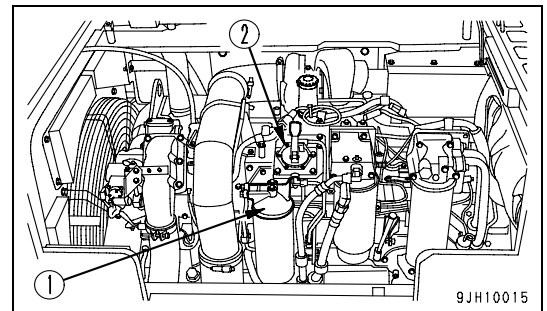

PHENOMENA THAT ARE NOT FAILURES

Note that the following phenomena are not failures:

- When the arm control lever is operated to the IN position and the work equipment is lowered under no load from a high position, the arm speed will drop momentarily when the arm is more or less at the vertical position.
- When the bucket control lever is operated to the CURL position and the work equipment is lowered under no load from a high position, the bucket speed will drop momentarily when the bucket teeth are more or less at the horizontal position.
- The bucket or arm will fluctuate by itself during heavy-duty digging operations.
- When starting or stopping the swing, noise will be emitted from the brake valve.
- When going down a steep slope at low speed, a noise will be emitted from the travel motor brake valve.

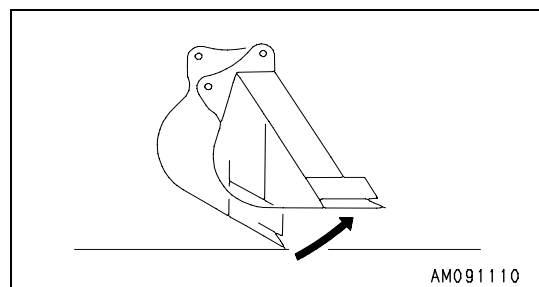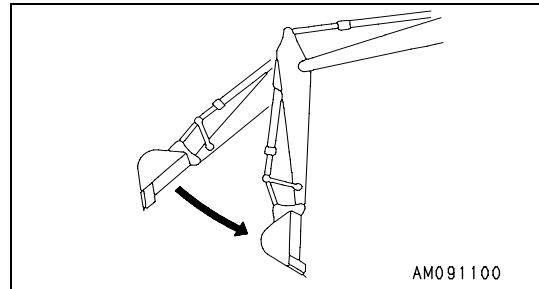

TOWING THE MACHINE

WARNING

Serious injury or death could result if a disabled machine is towed incorrectly or if there is a mistake in the selection or inspection of the wire rope.

Always check that the wire rope used for towing has ample strength for the weight of the machine being towed.


Never use a wire rope which has cut strands (A), reduced diameter (B), or kinks (C). There is danger that the rope may break during the towing operation.

Always wear leather gloves when handling wire rope.

Never tow a machine on a slope.

During the towing operation, never stand between the towing machine and the machine being towed.

Operate the machine slowly and be careful not to apply any sudden load to the wire rope.

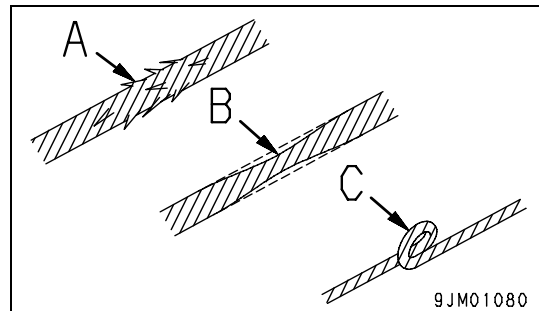



NOTICE

The maximum towing capacity for this machine is 303,030N (30,900 kgf).

Always carry out towing operations within the maximum towing capacity.

- If the machine sinks in mud and cannot get out under its own power, or if the drawbar pull of the excavator is being used to tow a heavy object, use a wire rope as shown in the diagram on the right.
- Place pieces of wood between wire ropes and body to prevent damage to ropes and body.
- Hold the wire rope level and direct it straight to the track frame.
- When towing a machine, travel at a speed of less than 1 km/h for a distance of only a few meters to a place that is suitable for carrying out repairs.

This is for use only in emergencies.

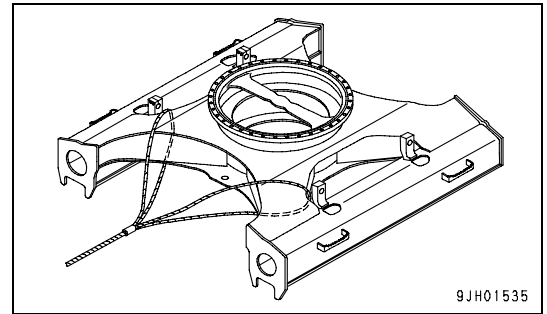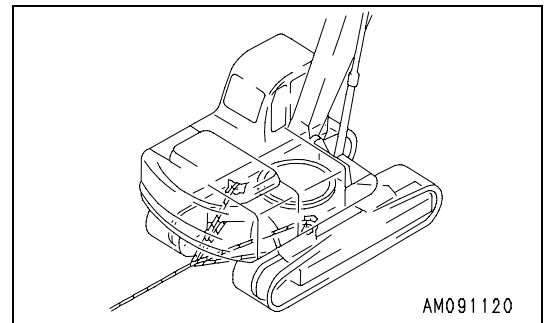


LIGHTWEIGHT TOWING HOLE

WARNING

- The shackle must always be used.
- Hold the wire rope level and direct it straight to the track frame.
- Move the machine slowly and be careful not to apply any sudden load to the wire rope.

There is a hole in the track frame to fit the shackle when towing light objects.

Permissible towing load: Max. 154,000N (16,000 kgf)

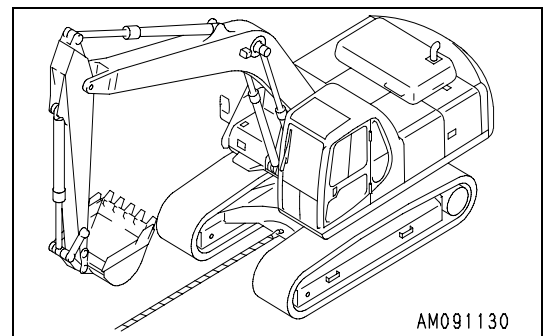

SEVERE JOB CONDITION


- When carrying out digging operations in water, if the work equipment mounting pin goes into the water, carry out greasing every time the operation is carried out.
- For heavy-duty operations and deep digging, carry out greasing of the work equipment mounting pins every time before operation.

After greasing, operate the boom, arm and bucket several times, then grease again.

DISCHARGED BATTERY

WARNING

- It is dangerous to charge a battery when mounted on a machine. Make sure that it is dismantled before charging.
- When checking or handling the battery, stop the engine and turn the starting switch key to the OFF position.
- The battery generates hydrogen gas, so there is a hazard of explosion. Do not bring lighted cigarettes near the battery, or do anything that will cause sparks.
- Battery electrolyte is dilute sulfuric acid, and it will attack your clothes and skin. If it gets on your clothes or on your skin, immediately wash it off with a large amount of water. If it gets in your eyes, wash it out with fresh water and consult a doctor.
- When handling batteries, always wear safety glasses and rubber gloves.
- When removing the battery, first disconnect the cable from the ground (normally the negative (-) terminal). When installing, install the positive (+) terminal first. If a tool touches the positive terminal and the chassis, there is danger that it will cause a spark, so be extremely careful.
- If the terminals are loose, there is danger that the defective contact may generate sparks that will cause an explosion.
- When removing or installing the terminals, check which is the positive (+) terminal and which is the negative (-) terminal.

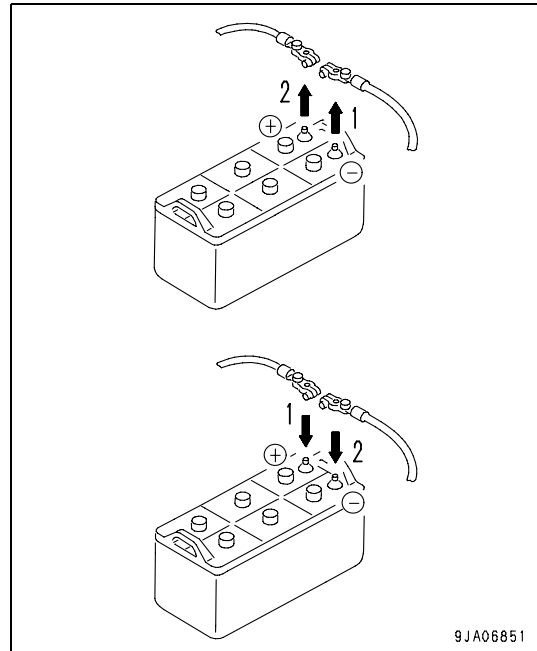


Battery Removal and Installation

- Before removing the battery, remove the ground cable (normally connected to the negative (-) terminal).
If any tool touches between the positive terminal and the chassis, there is a hazard of sparks being generated.
- When installing the battery, connect the ground cable last.
- When replacing the battery, secure it with battery hold-down.
Tightening torque: Tightening battery terminal: 9.8 to 19.6 Nm (1 to 2.0 kgm)

Battery Charges

When charging the battery, if the battery is not handled correctly, there is a hazard that the battery may explode. Always follow the instructions of "DISCHARGED BATTERY (3-192)" and the instruction manual accompanying the charger, and do as follows.

- Set the voltage of the charger to match the voltage of the battery to be charged. If the correct voltage is not selected, the charger may overheat and cause an explosion.
- Connect the positive (+) charger clip of the charger to the positive (+) terminal of the battery, then connect the negative (-) charger clip of the charger to the negative (-) terminal of the battery. Be sure to attach the clips securely.
- Set the charging current to 1/10 of the value of the rated battery capacity; when carrying out rapid charging, set it to less than the rated battery capacity.
If the charger current is too high, the electrolyte will leak or dry up, and this may cause the battery to catch fire and explode.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is a danger that this will ignite the battery electrolyte and cause the battery to explode.
- Do not use or charge the battery if the battery electrolyte level is below the LOWER LEVEL line. This may cause an explosion. Check the battery electrolyte level periodically and add distilled water to bring the electrolyte level to the UPPER LEVEL line.

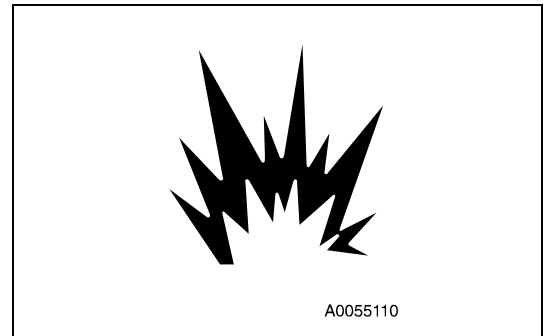


Starting Engine with Booster Cables

When starting the engine with a booster cable, do as follows.

Connecting and Disconnecting Booster Cables

WARNING

- When connecting the cables, never contact the positive (+) and negative (-) terminals.
- When starting the engine with a booster cable, always wear safety glasses.
- Be careful not to let the normal machine and problem machine contact each other. This prevents sparks from generating near the battery which could ignite the hydrogen gas given off by the battery. If hydrogen gas explodes, it could cause serious injury.
- Be careful not to make a mistake when connecting a booster cable. In the last connection (to the upper structure frame), a spark will be caused, connect the cable to a spot as far away from the battery as possible. (Avoid the work equipment, however, because it is not a good conductor)
- When removing the booster cable, exercise good care so that the booster cable clips may not contact each other, or they contact the chassis.

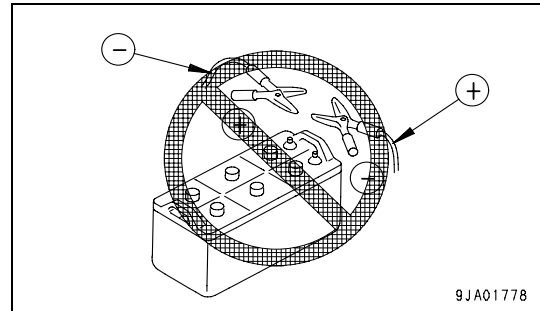

NOTICE


- The starting system for this machine uses 24V. For the normal machine, also use a 24V battery.
- The size of the booster cable and clip should be suitable for the battery size.
- The battery of the normal machine must be the same capacity as that of the engine to be started.
- Check the cables and clips for damage or corrosion.
- Make sure that the cables and clips are firmly connected.
- Check that the lock levers and parking brake levers of both machine are in the LOCK position.
- Check that each lever is in the NEUTRAL position.

Booster Cable Connection

Keep the starting switch of the normal machine and problem machine in the OFF position.

Connect the booster cable as follows, in the order of the numbers marked in the diagram.

1. Connect the clip of booster cable (A) to the positive (+) terminal of battery (C) on the problem machine.
2. Connect the clip at the other end of booster cable (A) to the positive (+) terminal of battery (D) on the normal machine.
3. Connect the clip of booster cable (B) to the negative (-) terminal of battery (D) on the normal machine.
4. Connect the other clip of booster cable (B) to the revolving frame (E) of the problem machine.

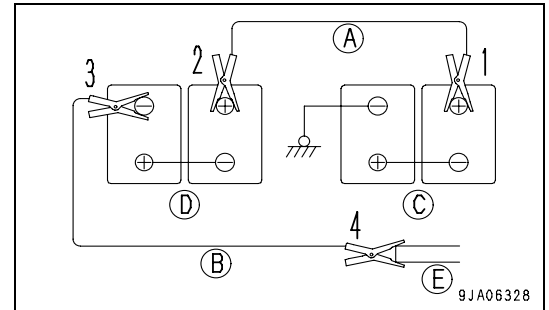

Starting the Engine

⚠ WARNING

Always check that the lock lever is set to the LOCK position, regardless of whether the machine is working normally or has failed. Check also that all the control levers are in the neutral position.


1. Make sure the clips are firmly connected to the battery terminals.
2. Start engine of the normal machine and run it at high idle speed.
3. Turn the starting switch of the problem machine to the START position and start the engine.

If the engine doesn't start at first, try again after 2 minutes or so.

Booster Cable Disconnection

After the engine has started, disconnect the booster cables in the reverse of the order in which they were connected.

1. Remove one clip of booster cable (B) from the revolving frame (E) of the problem machine.
2. Remove the clip of booster cable (B) from the negative (-) terminal of battery (D) on the normal machine.
3. Remove the clip of booster cable (A) from the positive (+) terminal of battery (D) on the normal machine.
4. Remove the clip of booster cable (A) from the positive (+) terminal of battery (C) on the problem machine.

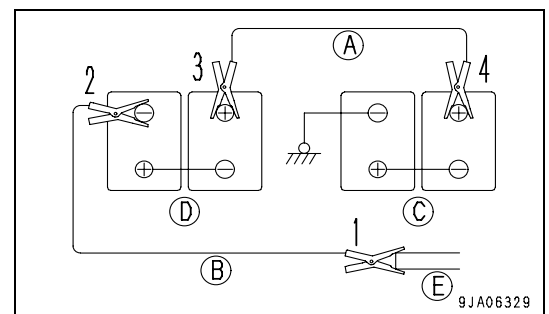

OTHER TROUBLE

Electrical System

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of problems or causes which are not listed below, contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Lamp does not glow brightly even when the engine runs at high speed	•Defective wiring, deterioration of battery	(•Check, repair loose terminals, disconnections, replace battery)
Lamp flickers while engine is running	•Loose fan belt	•Check fan belt tension, replace
Charge level monitor does not go out even when engine is running	•Defective alternator •Defective wiring	(•Replace) (•Check, repair)
Abnormal noise is generated from alternator	•Defective alternator	(•Replace)
Starting motor does not turn when starting switch is turned to ON	•Defective wiring •Defective starting motor •Insufficient battery charge	(•Check, repair) (•Replace) •Charge
Pinion of starting motor keeps going and out	•Insufficient battery charge •Defective safety relay	•Charge (•Replace)
Starting motor turns engine sluggishly	•Insufficient battery charge •Defective starting motor	•Charge (•Replace)
Starting motor disengages before engine starts	•Defective wiring, defective ring gear pinion •Insufficient battery charge	(•Check, repair) •Charge
Engine pre-heating monitor does not light	•Defective wiring •Defective heater relay •Defective monitor	(•Check, repair) (•Replace) (•Replace)
Oil pressure monitor does not light up when engine is stopped (starting switch at ON position)	•Defective monitor •Defective caution lamp switch	(•Replace) (•Replace)
Outside of electrical heater is not warm when touched by hand	•Defective wiring •Disconnection in electric heater •Defective operation of heater relay switch	(•Check, repair) (•Replace) (•Replace)

Chassis

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of problems or causes which are not listed below, contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Speed of travel, swing, boom, arm, bucket is slow	•Lack of hydraulic oil	•Add oil to specified level, see CHECK BEFORE STARTING
Pump generates abnormal noise (sucking in air)	•Clogged element in hydraulic tank strainer, lack of oil	•Clean, see EVERY 2000 HOURS SERVICE
Excessive rise in hydraulic oil temperature	•Loose fan belt •Dirty oil cooler •Lack of hydraulic oil	•Check fan belt tension, replace •Clean, see EVERY 500 HOURS SERVICE •Add oil to specified level, see CHECK BEFORE STARTING
Track comes off	•Track too loose	•Adjust track tension, see WHEN REQUIRED
Abnormal wear of sprocket		
Boom rises slowly, does not rise	•Lack of hydraulic oil	•Add oil to specified level, CHECK BEFORE STARTING
Does not swing	•Swing lock switch still applied	•Turn swing lock switch OFF

Engine


- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of problems or causes which are not listed below, contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Engine oil pressure monitor lights up	<ul style="list-style-type: none"> •Engine oil pan oil level is low (sucking in air) •Clogged oil filter cartridge •Defective tightening of oil pipe, pipe joint, oil leakage from damaged point •Defective engine oil pressure sensor •Defective monitor 	<ul style="list-style-type: none"> •Add oil to specified level, see CHECK BEFORE STARTING •Replace cartridge, see EVERY 500 HOURS SERVICE (•Check, repair) (•Replace sensor) (•Replace monitor)
Steam spurts out from top of radiator (pressure valve)	<ul style="list-style-type: none"> •Coolant level low, leakage of water •Loose fan belt 	<ul style="list-style-type: none"> •Check, add coolant, repair, see CHECK BEFORE STARTING •Check fan belt tension, adjust, replace •Change coolant, flush inside of cooling system, see WHEN REQUIRED
Radiator coolant level monitor lights up	<ul style="list-style-type: none"> •Dirt or scale accumulated in cooling system •Clogged radiator fins or damaged fins •Defective thermostat •Loose radiator filler cap (high-altitude operations) •Defective water level sensor •Defective monitor 	<ul style="list-style-type: none"> •Clean or repair, see EVERY 500 HOURS SERVICE (•Replace thermostat) •Tighten cap or replace packing (•Replace sensor) (•Replace monitor)
Engine does not start when starting motor is turned	<ul style="list-style-type: none"> •Lack of fuel •Air in fuel system •Defective fuel injection pump or defective nozzle •Starting motor cranks engine sluggishly •Engine pre-heating monitor does not light up •Defective compression (Defective valve clearance) 	<ul style="list-style-type: none"> •Add fuel, see CHECK BEFORE STARTING •Repair place where air is sucked in, see EVERY 500 HOURS SERVICE (•Replace pump or nozzle) •See ELECTRICAL SYSTEM •See ELECTRICAL SYSTEM (•Adjust valve clearance)
Exhaust gas is white or blue	<ul style="list-style-type: none"> •Too much oil in oil pan •Improper fuel 	<ul style="list-style-type: none"> •Set oil to specified level, see CHECK BEFORE STARTING •Change to specified fuel
Exhaust gas occasionally turns black	<ul style="list-style-type: none"> •Clogged air cleaner element •Defective nozzle •Defective compression •Defective turbocharger 	<ul style="list-style-type: none"> •Clean or replace, see WHEN REQUIRED (•Replace nozzle) (•See defective compression above) (•Clean or replace turbocharger)
Combustion noise occasionally make breathing sound	<ul style="list-style-type: none"> •Defective nozzle 	<ul style="list-style-type: none"> (•Replace nozzle)

Problem	Main causes	Remedy
Abnormal noise generated (combustion or mechanical)	<ul style="list-style-type: none"> •Low-grade fuel being used •Overheating •Damage inside muffler •Excessive valve clearance 	<ul style="list-style-type: none"> •Change to specified fuel •Refer to "Radiator coolant level monitor lights up" as above (•Replace muffler) (•Adjust valve clearance)

Electronic Control System

When the user code is shown on the display portion of the machine monitor, take the respective measures shown in the self-diagnosis chart below.

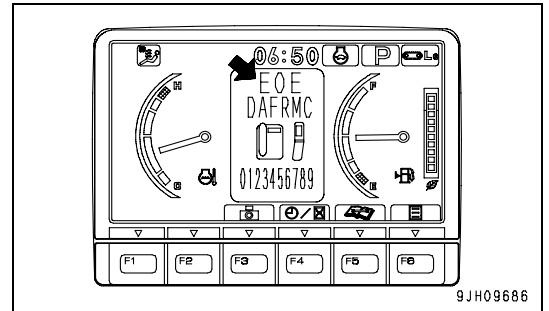

Machine Monitoring System

Monitor display	Failure mode	Action
E02	Pump control system error	When emergency pump drive switch is at the up (emergency) position, normal operations become possible, but have inspection carried out immediately. (*)
E03	Swing brake system error	Move the swing brake cancel switch up to release the brake. When applying the swing brake, operate the swing lock switch manually. Depending on the cause of the problem, it may not be possible to release it. In any case, have inspection carried out immediately. (*)
E10	Engine controller power source error Engine controller drive system circuit error (engine stopped)	Have inspection carried out immediately.
E11	Engine controller system error Output reduced to protect engine	Operate machine to a safe posture and have inspection carried out immediately.
E14	Abnormality in throttle system	Operate machine to a safe posture and have inspection carried out immediately.
E15	Engine sensor (coolant temperature, fuel pressure, oil pressure) system error	Operations are possible, but have inspection carried out immediately.
E0E	Network error	Operate machine to a safe posture and have inspection carried out immediately.

(*): For details of handling the emergency pump drive switch and swing brake cancel switch, see "Emergency Pump Drive Switch (3-73)" and "Swing Parking Brake Release Switch (3-74)".


Point of Contact to Telephone when Error Occurs

If an error screen is displayed on the monitor, the telephone number for the point of contact is displayed at the bottom of the error screen.

REMARK

If no point of contact telephone number has been registered, no telephone number is displayed.

It is necessary to register the telephone number, please ask your Komatsu distributor to carry out the registration.

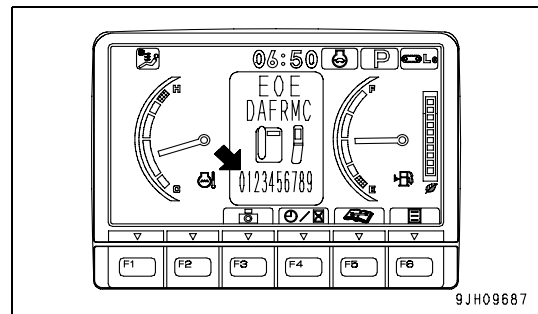

MAINTENANCE



WARNING

Please read and make sure that you understand the SAFETY section before reading this section.

MAINTENANCE INFORMATION

Do not perform any inspection and maintenance operation that is not found in this manual.

Service Meter Reading

Check the service meter reading every day to see if the time has come for any necessary maintenance to be performed.

Komatsu Genuine Replacement Parts

Use Komatsu genuine parts specified in the Parts Book as replacement parts.

Komatsu Genuine Lubricants

For lubrication of the machine, use the Komatsu genuine lubricants. Moreover use oil of the specified viscosity according to the ambient temperature.

Windshield Washer Fluid

Use automobile window washer fluid, and be careful not to let any dirt get into it.

Fresh and Clean Lubricants

Use clean oil and grease. Also, keep the containers of the oil and grease clean. Keep foreign materials away from oil and grease.

Check Drained Oil and Used Filter

After oil is changed or filters are replaced, check the old oil and filters for metal particles and foreign materials. If large quantity of metal particles or foreign materials are found, always report to the person in charge, and carry out suitable action.

Fuel Strainer

If your machine is equipped with a fuel strainer, do not remove it while fueling.

Welding Instructions

- Cut off power. Wait for approx. one minute after turning off the engine starting switch key, and then disconnect the negative (-) terminal of the battery.
- Do not apply more than 200 V continuously.
- Connect grounding cable within 1 m of the area to be welded. If grounding cable is connected near instruments, connectors, etc., the instruments may malfunction.
- If a seal or bearing happens to come between the part being welded and grounding point, change the grounding point to avoid such parts.
- Do not use the area around the work equipment pins or the hydraulic cylinders as the grounding point.

Do not Drop Things Inside Machine

- When opening inspection windows or the oil filler port of the tank to carry out inspection, be careful not to drop nuts, bolts, or tools inside the machine.
If such things are dropped inside the machine, it may cause damage and/or malfunction of the machine, and will lead to failure. If you drop anything inside the machine, always remove it immediately.
- Do not put unnecessary things in your pockets. Carry only things which are necessary for inspection.

Dusty Job Site

When working at dusty work sites, do as follows:

- Clean the radiator fins and other parts of the heat exchange equipment more frequently, and take care not to let the fins become clogged.
- Replace the fuel filter more frequently.
- Clean electrical components, especially the starting motor and alternator, to avoid accumulation of dust.
- When checking and replacing the oil or filters, move the machine to a place where there is no dust and take care to prevent dust from entering the system.

Avoid Mixing Lubricants

If a different brand or grade of oil has to be added, drain the old oil and replace all the oil with the new brand or grade of oil. Never mix different brand or grade of oil.

Locking the Inspection Covers

Lock inspection cover securely into position with the lock bar. If inspection or maintenance is performed with inspection cover not locked in position, there is a danger that it may be suddenly blow shut by the wind and cause injury to the worker.

Hydraulic System - Air Bleeding

When hydraulic equipment has been repaired or replaced, or the hydraulic piping has been removed and installed again, the air must be bled from the circuit. For details, see "BLEEDING AIR FROM HYDRAULIC SYSTEM (4-45)".

Hydraulic Hose Installation

- When removing parts at locations where there are O-rings or gasket seals, clean the mounting surface, and replace with new parts.
When doing this, be careful not to forget to assemble the O-rings and gaskets.
- When installing the hoses, do not twist them or bend them sharply. If they are installed so, their service life will be shortened extremely and they may be damaged.

Checks After Inspection and Maintenance Works

If you forget to perform the checks after inspection and maintenance, unexpected problems may occur, and this may lead to serious injury or property damage. Always do the following:

- Checks after operation (with engine stopped)
 - Have any inspection and maintenance points been forgotten?
 - Have all inspection and maintenance items been performed correctly?
 - Have any tools or parts been dropped inside the machine? It is particularly dangerous if parts are dropped inside the machine and get caught in the lever linkage mechanism.
 - Are there any leakage of coolant or oil? Have all nuts and bolts been tightened?
- Checks when operating engine
 - For details of the checks when operating the engine, see "TWO WORKERS FOR MAINTENANCE WHEN ENGINE IS RUNNING (2-36)" and pay careful attention to safety.
 - Are the inspection and maintenance items working properly?
 - Is there any leakage of fuel or oil when the engine speed is raised?

OUTLINE OF SERVICE

- Always use Komatsu genuine parts for replacement parts, grease or oil.
- When changing the oil or adding oil, do not mix different types of oil. When changing the type of oil, drain all the old oil and fill completely with the new oil. Always replace the filter at the same time. (There is no problem if the small amount of oil remaining in the piping mixes with the new oil.)
- Unless otherwise specified, when the machine is shipped from the factory, it is filled with the oil and coolant listed in the table below.

Item	Type
Engine oil pan	Engine oil EO15W40DH (Komatsu genuine parts)
Damper case	Powertrain oil TO30 (Komatsu genuine parts)
Swing machinery case	
Final drive case	
Hydraulic oil system	Powertrain oil TO10 (Komatsu genuine parts)
Radiator	Supercoolant AF-NAC (density: 30% or above) (Komatsu genuine parts)

HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC

OIL

- Oil is used in the engine and hydraulic equipment under extremely severe conditions (high temperature, high pressure), and deteriorates with use.
Always use oil that matches the grade and maximum and minimum ambient temperatures recommended in the Operation and Maintenance Manual. Even if the oil is not dirty, always change the oil at the specified interval.
- Oil corresponds to blood in the human body, always be careful when handling it to prevent any impurities (water, metal particles, dirt, etc.) from getting in.
The majority of problems with the machine are caused by the entry of such impurities.
Take particular care not to let any impurities get in when storing or adding oil.
- Never mix oils of different grades or brands.
- Always add the specified amount of oil.
Having too much oil or too little oil are both causes of problems.
- If the oil in the work equipment is not clear, there is probably water or air getting into the circuit. In such cases, please contact your Komatsu distributor.
- When changing the oil, always replace the related filters at the same time.
- We recommend you have an analysis made of the oil periodically to check the condition of the machine. For those who wish to use this service, please contact your Komatsu distributor.
- When using commercially available oil, it may be necessary to reduce the oil change interval.
We recommend that you use the Komatsu oil clinic to carry out a detailed checks of the characteristics of the oil.

FUEL

- To prevent the moisture in the air from condensing and forming water inside the fuel tank, always fill the fuel tank after completing the day's work.
- The fuel pump is a precision instrument, and if fuel containing water or dirt is used, it cannot work properly.
- Be extremely careful not to let impurities get in when storing or adding fuel.
- Always use the fuel specified for the temperature in the Operation and Maintenance Manual.
 - If the fuel is used at temperatures lower than the specified temperature (particularly at temperatures below -15°C, the fuel will solidify.
 - If the fuel is used at temperatures higher than the specified temperature, the viscosity will drop, and this may result in problems such as a drop in output.
- Before starting the engine, or when 10 minutes have passed after adding fuel, drain the sediment and water from the fuel tank.
- If the engine runs out of fuel, or if the filters have been replaced, it is necessary to bleed the air from the circuit.
- If there is any foreign material in the fuel tank, wash the tank and fuel system.

NOTICE

Always use diesel oil for the fuel.

To ensure good fuel consumption characteristics and exhaust gas characteristics, the engine mounted on this machine uses an electronically controlled high-pressure fuel injection device. This device requires high precision parts and lubrication, so if low viscosity fuel with low lubricating ability is used, the durability may drop markedly.

COOLANT AND WATER FOR DILUTION

- The coolant has the important function of preventing corrosion as well as preventing freezing. Even in the areas where freezing is not an issue, the use of antifreeze coolant is essential. Komatsu machines are supplied with Komatsu Supercoolant (AF-NAC). Komatsu Supercoolant (AF-NAC) has excellent anticorrosion, antifreeze and cooling properties and can be used continuously for 2 years or 4000 hours. Komatsu Supercoolant (AF-NAC) is strongly recommended wherever available.
- When using Komatsu Supercoolant (AF-NAC), there is no need to use a corrosion resistor. For details, see "CLEAN INSIDE OF COOLING SYSTEM (4-27)".
- When diluting the antifreeze coolant, use distilled water or tap water (soft water). Natural water, such as a river water or well water (hard water), contains large amounts of minerals (calcium, magnesium, etc.), and this makes it easier for scale to form inside the engine or radiator. Once scale is deposited inside the engine or radiator, it is extremely difficult to remove. It also causes overheating due to poor heat exchange, so when you dilute the coolant, we recommend that you use water with an overall hardness of less than 100 PPM.
- When using antifreeze, always observe the precautions given in the Operation and Maintenance Manual.
- Antifreeze coolant is flammable, so be sure to keep it away from flame.
- The ratio of Supercoolant (AF-NAC) to water differs according to the ambient temperature. For details of the ratio when mixing, see "CLEAN INSIDE OF COOLING SYSTEM (4-27)". Supercoolant (AF-NAC) may be supplied in premix. In this case, never add diluting water.
- If the engine overheats, wait for the engine to cool before adding coolant.
- If the coolant level is low, it will cause overheating, and will also cause problems with corrosion due to air entering the coolant.

GREASE

- Grease is used to prevent seizure and noises at the joints.
- This construction equipment is used under heavy-duty conditions. Always use the recommended grease and follow the change intervals and recommended ambient temperatures given in this Operation and Maintenance Manual.
- The nipples not included in the maintenance section are nipples for overhaul, so they do not need grease. If any part becomes stiff after being used for long time, add grease.
- Always wipe off all of the old grease that is pushed out when greasing. Be particularly careful to wipe off the old grease in places where sand or dirt sticking in the grease would cause wear of the rotating parts.


CARRYING OUT KOWA (Komatsu Oil Wear Analysis)

KOWA is a maintenance service that makes it possible to prevent machine failures and downtime. With KOWA, the oil is periodically sampled and analyzed. This enables early detection of wear of the machine drive parts and other problems.


We strongly recommend you to use this service. The oil analysis is carried out at actual cost, so the cost is low, and the results of the analysis are reported together with recommendations which will reduce repair costs and machine downtime.

KOWA ANALYSIS ITEMS

- Measurement of density of metal wear particles
This uses an ICP (Inductively Coupled Plasma) analyzer to measure the density of iron, copper, and other metal wear particles in the oil.

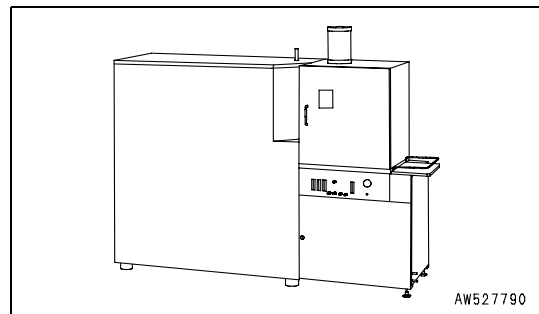

- Measurement of quantity of particles
This uses a particle quantifier index measurement machine to measure the quantity of iron particles of 5μ or more, enabling early detection of failures.

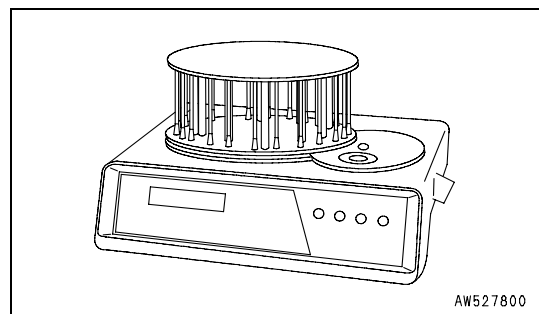

- Others
Measurements are made of items such as the ratio of water in the oil, density of the antifreeze coolant, ratio of fuel in the oil, and dynamic viscosity, enabling a highly precise diagnosis of the machine's health.

OIL SAMPLING

- Sampling interval
 - 250 hours: Engine
 - 500 hours: Other components

- Precautions when sampling
 - Make sure that the oil is well mixed before sampling.
 - Perform sampling at regular fixed intervals.
 - Do not perform sampling on rainy or windy days when water or dust can get into the oil.

For further details of KOWA, please contact your Komatsu distributor.

STORING OIL AND FUEL


- Keep indoors to prevent any water, dirt, or other impurities from getting in.
- When keeping drum cans for a long period, put the drum on its side so that the filler port of the drums is at the side to prevent moisture from being sucked in.
If drums have to be stored outside, cover them with a waterproof sheet or take other measures to protect them.
- To prevent any change in quality during long-term storage, be sure to use in the order of first in - first out (use the oldest oil or fuel first).





FILTERS


- Filters are extremely important safety parts. They prevent impurities in the fuel and air circuits from entering important equipment and causing problems.
Replace all filters periodically. For details, see the Operation and Maintenance Manual.
However, when working in severe conditions, replace the filters at shorter intervals according to the oil and fuel (sulfur content) being used.
- Never try to clean the filters (cartridge type) and use them again. Always replace with new filters.
- When replacing oil filters, check if any metal particles are attached to the old filter. If any metal particles are found, contact your Komatsu distributor.
- Do not open packs of spare filters until just before they are to be used.
- Always use Komatsu genuine filters.

EXPLANATION OF LUBRICATION CHART DECAL

KOMATSU PC400 PC450




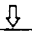
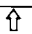


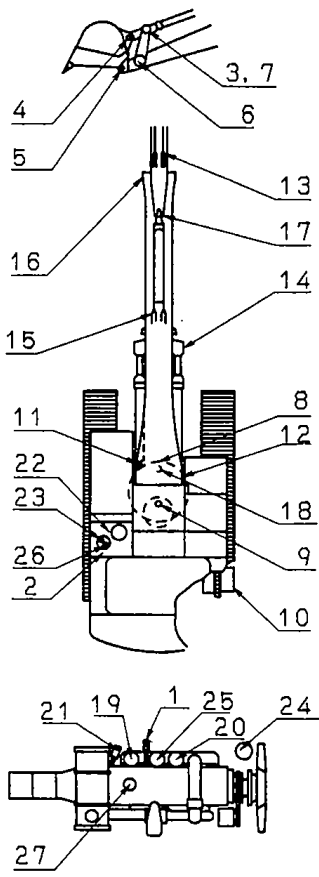


10h	1		✓	
	2			
50h	3	●		
	4	●		
	5	●		
	6	●		
250h	7	●		
	8	●		
500h	9		✓	
	10			
	11	●		
	12	●		
	13	●		
	14	●		
	15	●		
	16	●		
	17	●		
	18	●		
1000h	19			●
	20	●		●
	21		✓	
	22			●
	23			●
	24			●
2000h	25			●
	26			●
5000h	27	●		
	10		●	
	2		●	

208-00-76160

	Interval of service		Change filter
	Lubrication by greasing (G)	  (LITRES)	Amount of oil required at change (liters)
	Check oil level/change (EO)		

Key to lubrication points (to be checked)

Item	Part	Action	refer to page
1	Engine oil	Check level	3-114
2	Hydraulic oil	Check level Change oil	3-113 4-82
3	Bucket cylinder rod pin	Grease	4-48
4	Bucket-link coupling pin	Grease	4-48
5	Arm-bucket coupling pin	Grease	4-48
6	Arm link coupling pin	Grease	4-48
7	Link coupling pin	Grease	4-48
8	Swing circle	Lubricate	4-49
9	Swing machinery oil	Check level Change oil	4-65 4-71
10	Final drive oil	Check level Change oil	4-66 4-75
11	Boom cylinder foot pin	Grease	4-55
12	Boom foot pin	Grease	4-55
13	Bucket cylinder foot pin	Grease	4-54
14	Boom cylinder rod pin	Grease	4-54
15	Arm cylinder foot pin	Grease	4-54
16	Boom arm coupling pin	Grease	4-54
17	Arm cylinder rod end	Grease	4-54
18	Swing pinion	Lubricate	4-58
19	Engine oil filter & fuel water separator	Change filter	4-59
20	Fuel main filter	Change filter	4-67
21	Damper case	Check level	4-72
22	Hydraulic filter element	Change filter	4-70
23	Breather Element	Change filter	4-64
24	Corrosion resistor cartridge	Change filter	4-74
25	Fuel pre-filter	Change filter	4-55
26	Hydraulic tank additional breather element	Change element	4-73
27	Engine Oil	Change Oil	4-59

ELECTRIC SYSTEM MAINTENANCE

- It is extremely dangerous if the electrical equipment becomes wet or the covering of the wiring is damaged. This will cause an electrical short circuit and may lead to malfunction of the machine. Do not wash the inside of the operator's cab with water. When washing the machine, be careful not to let water get into the electrical components.
- Service relating to the electric system is checking fan belt tension, checking damage or wear to the fan belt and checking battery fluid level.
- Never install any electric components other than those specified by Komatsu.
- External electro-magnetic interference may cause malfunction of the control system controller, before installing a radio receiver or other wireless equipment, contact your Komatsu distributor.
- When working at the seashore, carefully clean the electric system to prevent corrosion.
- When installing electrical equipment, connect it to the special power source connector. Do not connect the optional power source to the fuse, starting switch, or battery relay.

WEAR PARTS

Replace wear parts such as the filter element or air cleaner element at the time of periodic maintenance or before they reach the wear limit. The wear parts should be replaced correctly in order to ensure more economic use of the machine. When replacing parts, always use Komatsu genuine parts.

As a result of our continuous efforts to improve product quality, the part number may change, so inform your Komatsu distributor of the machine serial number and check for the latest part number when ordering parts.

WEAR PARTS LIST

The parts in parentheses are to be replaced at the same time.

Item	Part No.	Part Name	Q'ty	Change interval
Engine oil filter	600-211-1340	Cartridge	1	Every 500 hours
Fuel filter	600-319-3520	Cartridge	1	Every 500 hours (Without additional fuel filter) Every 1000 hours (With additional fuel filter)
Additional fuel filter	600-319-3440	Cartridge	1	Every 500 hours
Hydraulic tank breather	20Y-60-21410	Element	1	Every 500 hours
Additional breather for hydraulic tank	421-60-35170	Element	1	Every 1000 hours
Corrosion resistor	600-411-1571	Cartridge	1	Every 1000 hours
Hydraulic oil filter	208-60-71122 (07000-15210)	Element (O-ring)	1 (1)	Every 1000 hours
Air cleaner	600-185-6100	Element assembly (Outer, Inner, O-ring)	1	-
Additional filter for breaker (if equipped)	208-970-5580 (07000-52011) (07000-42125)	Element (O-ring) (O-ring)	1 (1) (1)	-
Electric heater	6150-11-4821	Gasket	2	-
Line filter (if equipped)	207-60-61250 (07002-13634)	Element (O-ring)	2 (2)	-
Bucket	208-70-34211 (208-70-34200)	Vertical pin type Tooth (Pin)	5 (5)	-
	208-70-14152 (09244-03036)	Horizontal pin type Tooth (Pin)	5 (5)	
	208-70-34160 208-70-34170	Side cutter type cutter (left) cutter (right)	1 1	
	208-934-7130 113-78-21170 209-939-7110 209-939-7120	Shroud type Shroud Pin Shim Shim	4 8 16 8	

RECOMMENDED FUEL, COOLANT, AND LUBRICANT

- Komatsu genuine oils are adjusted to maintain the reliability and durability of Komatsu construction equipment and components.

In order to keep your machine in the best conditioner for long periods of time, it is essential to follow the instructions in this Operation and Maintenance Manual.

- Failure to follow these recommendations may result in shortened life or excess wear of the engine, power train, cooling system, and/or other components.
- Commercially available lubricant additives may be good for the machine, but they may also cause harm. Komatsu does not recommend any commercially available lubricant additive.
- Use the oil recommended according to the ambient temperature in the chart below.
- Specified capacity means the total amount of oil including the oil in the tank and the piping. Refill capacity means the amount of oil needed to refill the system during inspection and maintenance.
- When starting the engine in temperatures below 0°C, be sure to use the recommended multi-grade oil, even if the ambient temperature may become higher during the course of the day.
- If the machine is operated at a temperature below -20°C, a separate device is needed, so consult your Komatsu distributor.
- When the fuel sulfur content is less than 0.2%, change the engine oil according to the period inspection table given in this Operation and Maintenance Manual.

If the fuel sulfur content is more than 0.2%, change the oil according to the following table.

Sulfur content (%)	Oil change interval
Less than 0.2 %	500 hours
0.2 to 0.5 %	250 hours
0.5 and up	Not recommendable (*)

* If these fuels are used, there is danger that serious trouble may occur because of early deterioration of the engine oil or early wear of the internal parts of the engine. If the local situation makes it necessary to use these fuels, always remember the following.

- 1) Be sure to check Total Basic Number (TBN) of oil frequently by TBN handy checker etc., and change oil based on the result.
- 2) Always be aware that oil change interval is extremely shorter than standard.
- 3) Be sure to carry out periodic engine inspection by distributor's expert since change interval of periodic replacement parts and overhaul interval are also shorter.

Reservoir	Fluid type	AMBIENT TEMPERATURE		Recommended komatsu Fluids
		Min	Max	
Engine oil pan	Engine oil	-30°C	30°C	Komatsu EOS0W30 (Note 1)
		-25°C	40°C	Komatsu EOS5W40 (Note 1)
		-20°C	40°C	Komatsu EO10W30DH
		-15°C	50°C	Komatsu EO15W40DH
		0°C	40°C	Komatsu EO30DH
Swing machinery case Final drive case Damper case	Power train oil (Note. 2)	-30°C	50°C	TO30
Hydraulic system	Power train oil	-20° C	50° C	TO10
	Hydraulic oil	-20° C	50° C	HO46-HM
Grease fitting	Hyper grease (Note. 3)	-20° C	50° C	GT2-T, G2-TE
	Lithium EP grease	-20° C	50° C	G2-LI
Cooling system	Supercoolant AF-NAC (Note 4)	-30°C	50°C	AF-NAC (Note. 4)
Fuel tank	Diesel fuel	-30° C	20° C	ASTM Grade No. 1-D S15 ASTM Grade No. 1-D S500
		-10° C	50° C	ASTM Grade No. 2-D S15 ASTM Grade No. 2-D S500

- ASTM: American Society of Testing and Material

		Engine oil pan	Swing machinery case	Final drive case (Each)	Damper case	Hydraulic oil system	Cooling system	Fuel tank
Specified capacity	Liter	46	20	10.5	1.07	472	36	650
Refill capacity	Liter	37	20	10.5	1.07	248	36	-

NOTICE

Always use diesel oil for the fuel.

To ensure good fuel consumption characteristics and exhaust gas characteristics, the engine mounted on this machine uses an electronically controlled high-pressure fuel injection device. This device requires high precision parts and lubrication, so if low viscosity fuel with low lubricating ability is used, the durability may drop markedly.

Note 1: HTHS (High-Temperature High-Shear Viscosity 150°C), specified by ASTM D4741 must be equal to or higher than 3.5 mPa·S. Komatsu EOS0W30 and EOS5W40 are the most suitable oils.

Note 2: Powertrain oil has different properties from engine oil. Be sure to use the recommended oils.

Note 3: Hyper grease (G2-T, G2-TE) has a high performance.

When it is necessary to improve the lubricating ability of the grease in order to prevent squeaking of pins and bushings, the use of G2-T or G2-TE is recommended.

Note 4: Supercoolant (AF-NAC)

1) Coolant has the important function of anticorrosion as well as antifreeze.

Even in the areas where freezing is not an issue, the use of antifreeze coolant is essential.

Komatsu machines are supplied with Komatsu Supercoolant AF-NAC. Komatsu Supercoolant AF-NAC has excellent anticorrosion, antifreeze and cooling properties and can be used continuously for 2 years or 4000 hours.

Komatsu Supercoolant AF-NAC is strongly recommended wherever available.

2) For details of the ratio when diluting super coolant with water, see "CLEAN INSIDE OF COOLING SYSTEM (4-27)".

Supercoolant AF-NAC may be supplied in premix. In this case, always top off with premix solution. (never dilute with water)

3) To maintain the anticorrosion properties of Supercoolant AF-NAC, always keep the density of Supercoolant between 30% and 68%.

RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL

When using commercially available oils other than Komatsu genuine oil, consult your Komatsu distributor.

TIGHTENING TORQUE SPECIFICATIONS

TIGHTENING TORQUE LIST


⚠ CAUTION

If nuts, bolts, or other parts are not tightened to the specified torque, it will cause looseness or damage to the tightened parts, and this will cause failure of the machine or problems with operation. Always pay careful attention when tightening parts.

Unless otherwise specified, tighten the metric nuts and bolts to the torque shown in the table below.


If it is necessary to replace any nut or bolt, always use a Komatsu genuine part of the same size as the part that was replaced.

Thread diameter of bolt (a)(mm)	Width across flats (b)(mm)	Tightening torque			
		Target value		Service limit	
		Nm	kgm	Nm	kgm
6	10	13.2	1.35	11.8-14.7	1.2-1.5
8	13	31	3.2	27-34	2.8-3.5
10	17	66	6.7	59-74	6.0-7.5
12	19	113	11.5	98-123	10.0-12.5
14	22	172	17.5	153-190	15.5-19.5
16	24	260	26.5	235-285	23.5-29.5
18	27	360	37	320-400	33.0-41.0
20	30	510	52.3	455-565	46.5-58.0
22	32	688	70.3	610-765	62.5-78.0
24	36	883	90	785-980	80.0-100.0
27	41	1295	132.5	1150-1440	118.0-147.0
30	46	1720	175.0	1520-1910	155.0-195.0
33	50	2210	225.0	1960-2450	200.0-250.0
36	55	2750	280.0	2450-3040	250.0-310.0
39	60	3280	335.0	2890-3630	295.0-370.0

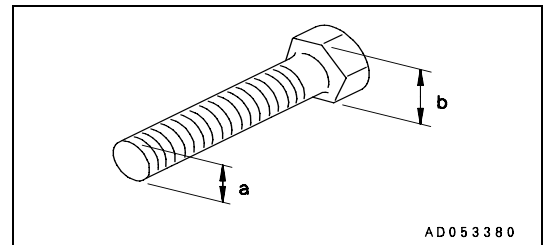

Apply the following table for Hydraulic Hose.

Thread diameter a (mm)	Width across flat b(mm)	Tightening torque [Nm (kgm)]	
		Target value	Permissible range
9/16 -18UNF	19	44 (4.5)	35 - 54 (3.5 - 5.5)
11/16 -16UN	22	74 (7.5)	54 - 93 (5.5 - 9.5)
13/16 -16UN	27	103 (10.5)	84 - 132 (8.5 - 13.5)
1 -14UNS	32	157 (16.0)	128 - 186 (13.0 - 19.0)
1-3/16 -12UN	36	216 (22.0)	177 - 245 (18.0 - 25.0)
*1-7/16-12UN -2B	41	215 (22)	176 - 234 (18 - 24)

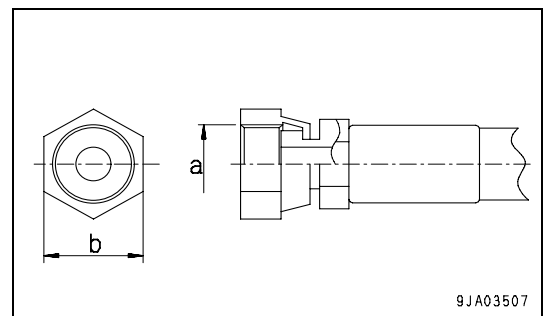

- The torques marked * indicate the tightening torques for the hoses at the top of the swivel joint.

SAFETY CRITICAL PARTS

For using the machine safely for an extended period of time, you must periodically replace the safety critical and fire prevention-related parts listed in the table of important parts.

Material quality of these parts can change as time passes and they are likely to wear out or deteriorate. However, it is difficult to determine the extent of wear or deterioration at the time of periodic maintenance. Hence, it is required to replace them with new ones regardless of their condition after a certain period of usage. This is important to ensure that these parts maintain their full performance at all times.

Furthermore, should anything abnormal be found on any of these parts, replace it with a new one even if the periodic replacement time for the part has not yet arrived.

If any of the hose clamps show deterioration like deformation or cracking, replace the clamps at the same time as the hoses.

Also perform the following checks with hydraulic hoses which need to be replaced periodically. Tighten all loose clamps and replace defective hoses, as required.

When replacing hoses, always replace O-rings, gaskets, and other such parts at the same time.

Have your Komatsu distributor replace the critical parts.

SAFETY CRITICAL PARTS LIST

No.	Safety critical parts for periodic replacement	Q'ty	Replacement interval
1	Fuel tank - block	1	Every 2 years or 4000 hours, whichever comes sooner
2	block - fuel pre-filter	1	
3	Fuel pre-filter - supply pump	1	
4	Supply pump - engine controller base	1	
5	Engine controller base - fuel main filter	1	
6	Over flow hose (supply pump - fuel tank)	1	
7	Spill hose (engine controller base - fuel tank)	1	
8	Pump outlet hose (pump - control valve)	2	
9	Work equipment hose (boom cylinder inlet port)	4	
10	Work equipment hose (bucket cylinder line, boom foot)	2	
11	Work equipment hose (bucket cylinder inlet port)	2	
12	Work equipment hose (bucket cylinder inlet port, 4.0 m arm)	2	
13	Work equipment hose (arm cylinder line, boom foot)	2	
14	Work equipment hose (arm cylinder inlet port)	2	
15	Attachment additional line hose (boom foot)	2	
16	Attachment additional line hose (boom intermediate)	2	
17	Attachment additional line hose (boom top)	2	
18	Swing line hose (swing motor inlet port)	2	
19	Main suction hose	1	
20	Gear pump suction hose	1	
21	Heater hose	2	
22	Travel line hose (control valve - swivel joint)	4	
23	Travel line hose (swivel joint - travel motor)	4	
24	Accumulator (for control circuit)	1	
25	High-pressure piping clamp	10	Every 8000 hours
26	Missing fuel spray prevention cap	12	
27	Seat belt	1	Every 3 years

MAINTENANCE SCHEDULE

If the machine is equipped with a hydraulic breaker, the maintenance schedule for some parts will be different. For details, see “MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER (4-19)” to confirm the correct maintenance schedule when carrying out maintenance.

MAINTENANCE SCHEDULE CHART

INITIAL 1000 HOURS MAINTENANCE (ONLY AFTER THE FIRST 1000 HOURS)

CHECK ENGINE VALVE CLEARANCE, ADJUST 4-79

WHEN REQUIRED

CHECK, CLEAN AND REPLACE AIR CREANER ELEMENT 4-21
 CLEAN INSIDE OF COOLING SYSTEM..... 4-27
 CHECK AND TIGHTEN TRACK SHOE BOLTS 4-30
 CHECK AND ADJUST TRACK TENSION..... 4-31
 REPLACE BUCKET TEETH (VERTICAL PIN TYPE)..... 4-33
 REPLACE BUCKET TEETH (HORIZONTAL PIN TYPE) 4-36
 REPLACE BUCKED SIDE CUTTER SHROUD 4-38
 ADJUST BUCKET CREARANCE 4-39
 CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID 4-40
 CHECK AND MAINTENANCE AIR CONDITIONER..... 4-41
 WASHING WASHABLE FLOOR..... 4-42
 CHECK GAS SPRING 4-45
 BLEEDING AIR FROM HYDRAULIC SYSTEM..... 4-45

CHECKS BEFORE STARTING

EVERY 50 HOURS MAINTENANCE

LUBRICATING 4-48

EVERY 250 HOURS MAINTENANCE

LUBRICATE SWING CIRCLE..... 4-49
 CHECK OIL LEVEL IN SWING MACHINERY CASE, ADD OIL 4-65
 CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL..... 4-66
 CHECK LEVEL OF BATTERY ELECTROLYTE 4-50
 CHECK FAN BELT, ALTERNATOR BELT TENSION, ADJUST 4-52
 CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST 4-53

EVERY 500 HOURS MAINTENANCE

LUBRICATING 4-54
 REPLACE FUEL PRE-FILTER CARTRIDGE 4-55
 CHECK SWING PINION GREASE LEVEL, ADD GREASE 4-58
 CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE 4-59
 CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTER COOLER
 FIN AND CONDENSER FINS..... 4-61
 CLEAN AIR CONDITIONER FRESH/RECIRC FILTERS 4-62
 REPLACE BREATHER ELEMENT IN HYDRAULIC TANK..... 4-64

EVERY 1000 HOURS MAINTENANCE

REPLACE FUEL MAIN FILTER CARTRIDGE..... 4-67
 REPLACE HYDRAULIC OIL FILTER ELEMENT 4-70
 CHANGE OIL IN SWING MACHINERY CASE 4-71
 CHECK OIL LEVEL IN DAMPER CASE, ADD OIL 4-72
 CHECK ALL TIGHTENING POINTS OF ENGINE EXHAUST PIPE CLAMPS 4-72
 REPLACE HYDRAULIC TANK ADDITIONAL BREATHER ELEMENT 4-73
 CHECK NITROGEN GAS CHARGE PRESSURE IN ACCUMULATOR (FOR BREAKER) 4-73
 REPLACE CORROSION RESISTOR CARTRIDGE..... 4-74

EVERY 2000 HOURS MAINTENANCE

CHANGE OIL IN FINAL DRIVE CASE 4-75
 CLEAN HYDRAULIC TANK STRAINER..... 4-76
 CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT) . 4-76
 CHECK ALTERNATOR 4-79
 CHECK ENGINE VALVE CLEARANCE, ADJUST 4-79
 CHECK VIBRATION DAMPER 4-79

EVERY 4000 HOURS MAINTENANCE

CHECK WATER PUMP 4-80
 CHECK STARTING MOTOR 4-80
 REPLACE ACCUMULATOR (FOR CONTROL CIRCUIT)..... 4-80
 CHECK FOR LOOSENESS OF HIGH-PRESSURE PIPING CLAMP, HARDENING OF RUBBER..... 4-81
 CHECK FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER 4-81

EVERY 5000 HOURS MAINTENANCE

CHANGE OIL IN HYDRAULIC TANK 4-82

EVERY 8000 HOURS MAINTENANCE

REPLACE HIGH-PRESSURE PIPING CLAMP..... 4-84
 REPLACE FUEL SPRAY PREVENTION CAP 4-84

MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER

For machine equipped with a hydraulic breaker, the hydraulic oil deteriorates faster than for normal bucket digging operations, so set the maintenance intervals as follows.

- **Replace hydraulic filter element**

On a new machine, replace the element after the first 100 to 150 hours, then carry out further replacement of the element according to the table on the right.

- **Change oil in hydraulic tank**

Change the oil according to the table on the right.

- **Replacing additional filter element for breaker (if equipped)**

Use a guideline of 250 hours for use of the breaker (operating ratio for the breaker: 50 % or more), and replace the element according to the table on the right.


X : Breaker operating ratio (%)

Y : Replacement interval (H)

(A): Hydraulic filter element

(B): Hydraulic oil

(C): Additional filter element

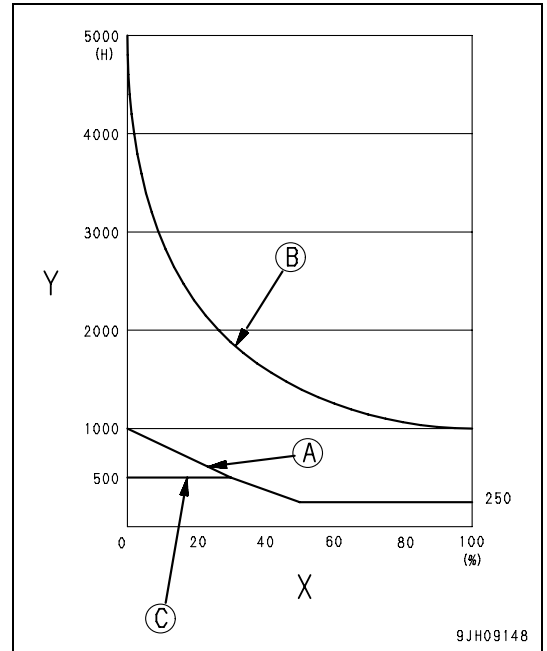

REMARK

Breaker operating ratio 100% means that only the breaker is used

Breaker operating ratio 0% means that the breaker is not used

MAINTENANCE PROCEDURE

INITIAL 1000 HOURS MAINTENANCE (ONLY AFTER THE FIRST 1000 HOURS)

Carry out the following maintenance only after the first 1000 hours of operation on new machines.

- Check engine valve clearance, adjust

Special tools are needed for inspection and maintenance, so contact your Komatsu distributor.

For details of the method of replacing or maintaining, see the section on EVERY 2000 HOURS SERVICE.

WHEN REQUIRED

CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT

⚠ WARNING


- When using compressed air, there is danger of dirt flying and causing personal injury. Always wear protective glasses, dust mask, or other protective equipment.
- When removing the outer element from the air cleaner body, it is dangerous to pull it out by force. When working in high places or where the foothold is poor, be careful not to fall because of the reaction when pulling out the outer element.

NOTICE

- Do not clean the air cleaner element until the air cleaner clogging monitor on the monitor panel light up. If the element is cleaned frequently before the air cleaner clogging monitor light up, the air cleaner will not be able to display its performance fully, and the cleaning efficiency will also go down. In addition, during the cleaning operation, more dirt stuck to the element will fall inside the inner element.
- If inspection, cleaning, or maintenance is carried out with the engine running, dirt will enter the engine and cause damage to the engine. Always stop the engine before carrying out these operations.

Checking


If air cleaner clogging monitor (1) of the monitor panel flashes, clean the air cleaner element.

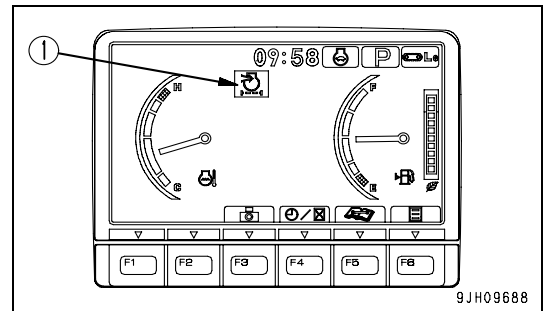

9JH09688

Replacing

- Replace element, O-ring
If the element has been used for one year, or air cleaner clogging monitor (1) on the monitor panel lights up after the element has been cleaned, replace outer element (5), inner element (6), and O-ring (8).
- Replacing vacuator valve
Replace vacuator valve (4) if it is damaged or if the rubber is markedly deformed.

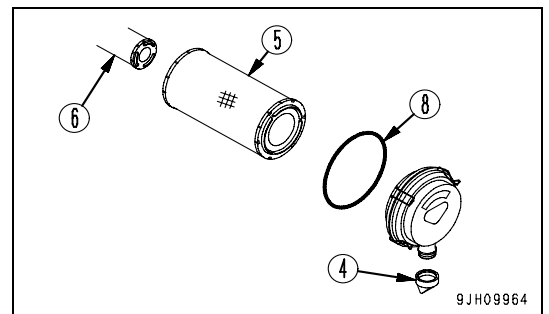


9JH09964

Cleaning Outer Element

NOTICE

Before and after cleaning the element, do not leave or keep it in direct sunlight.



1. Open the right door of the machine, remove 6 hooks (2), then remove cover (3).

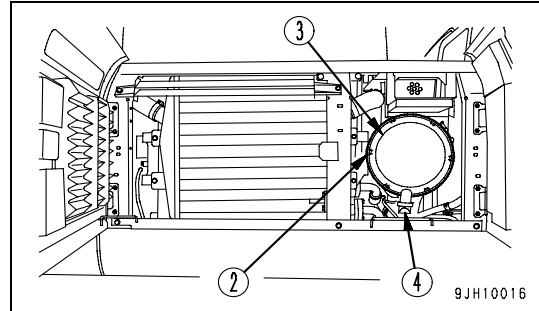

NOTICE

- Never remove the inner element (6). It will allow dirt to enter and cause failure of the engine.
- Do not use a screwdriver or other tool.


2. Hold the outer element (5), rock it lightly up and down and to the left and right, and rotate the element to the left and right to pull it out.
3. When the outer element (5) has been removed, check that the inner element has not come out of position and is not at an angle. If it is at an angle, insert your hand and push it in straight.
4. After removing the outer element (5), cover the inner element (6) with a clean cloth or tape to prevent dirt or dust from entering.
5. Wipe off or brush off the dirt stuck to cover (3) and the inside of the air cleaner body (7).
6. Remove any dirt or dust that is accumulated to evacuator valve (4) installed to cover (3).

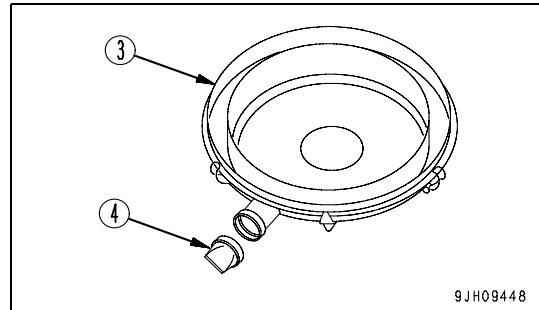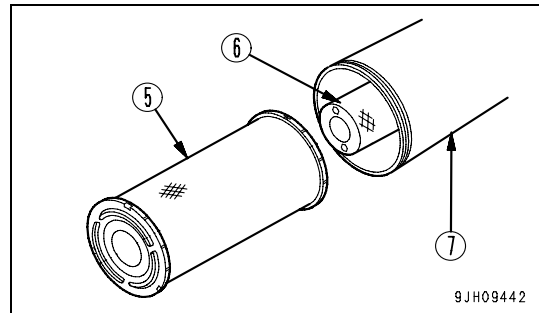

NOTICE


When cleaning the element, do not hit or beat it against anything.

7. Direct dry compressed air (less than 0.69 MPa (7 kg/cm²)) to the outer element from inside along its folds, then direct it from outside along its folds and again from inside.

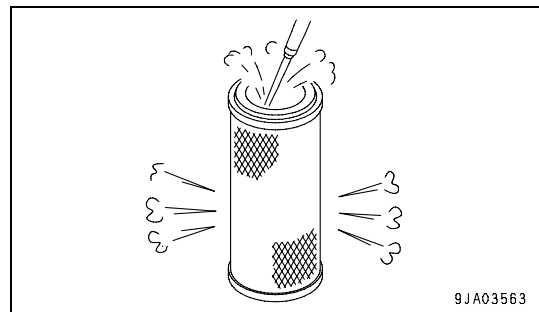

- 1) Replace the outer element which has been cleaned 6 times repeatedly or used throughout a year. Replace the inner element at the same time.
- 2) Replace both inner and outer elements when the air cleaner clogging monitor (1) lights up soon after installing the cleaned outer element even though it has not been cleaned 6 times.

8. If small holes or thinner parts are found on the element when it is checked by shining a light through it after cleaning, replace the element.

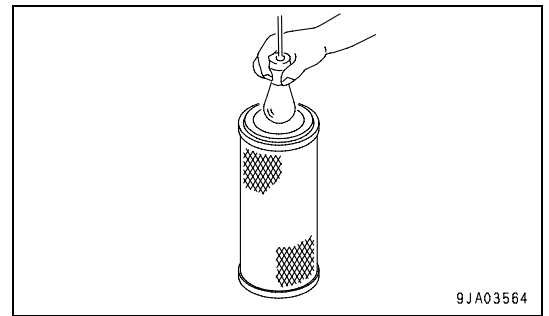

9. Remove the cloth or tape covering inner element (6).

NOTICE


- Do not use an element whose folds or gasket or seal are damaged.
- If the element or O-ring are cleaned and used again after they have been used for more than one year, it will cause problems. Do not use them again.

10. Check that there is no dirt or oil stuck to the seal portion of the new element or cleaned element. Wipe off any dirt or oil.
11. Push the outer element in straight with your hand when installing it to the air cleaner body.
If the outer element is held and rocked lightly up and down and to the left and right while pushing it in, the outer element can be inserted easily.

NOTICE

Be sure to install the air cleaner element facing in the correct direction.



Install so that the bottom of the air cleaner element cylinder (face where no hole is drilled) (B), (C) is at cover (3) end. If the direction of installation is mistaken, there is danger that it will cause breakage of the air cleaner element or serious damage to the engine.

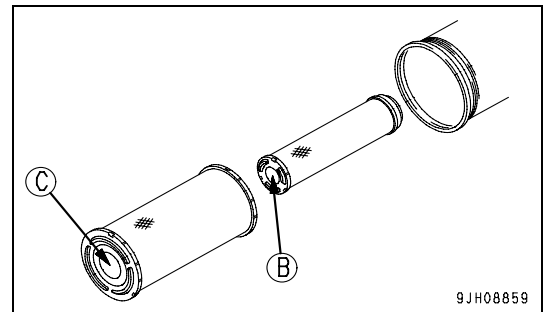

NOTICE

When inserting the element, if the rubber at the tip is swollen or the outer element is not pushed in straight, and cover (3) is assembled by force to hook (2), there is danger that the hook and air cleaner body may be damaged, so be careful when assembling.


12. Install cover (3) as follows.

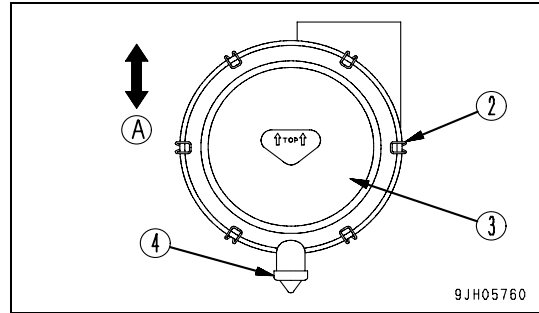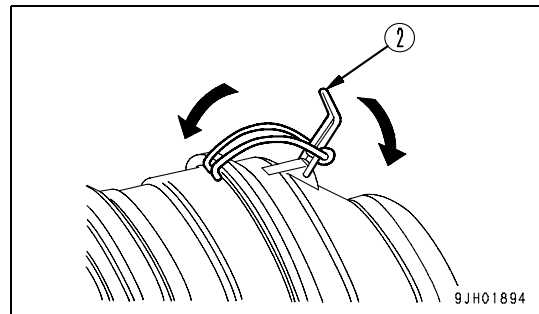

- 1) Align cover (3) with the element.
- 2) Hook the tip of hook (2) to the protruding part of the air cleaner body and lock it in position.
- 3) When locking hooks (2) in position, apply the hooks in turn on opposite sides (top, bottom, left, right) in the same way as when tightening bolts.
- 4) Always install cover (3) so that the evacuator (4) is facing the ground (A).
- 5) When cover (3) is installed, check that the clearance between the air cleaner body and cover (3) is not too large. If it is too large, install again.

Replacing Element



1. Open the right door of the machine, remove 6 hooks (2), then remove cover (3).

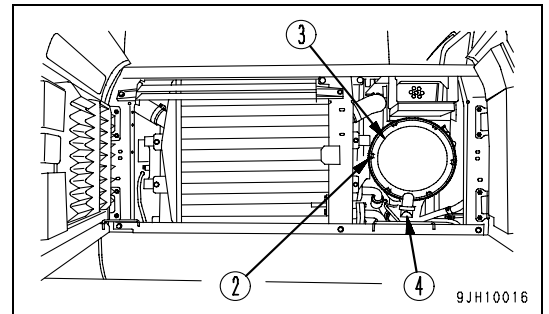

2. Hold the outer element (5), rock it lightly up and down and to the left and right, and rotate the element to the left and right to pull it out.

Do not remove inner element (6) when doing this.

3. When the outer element (5) has been removed, check that the inner element has not come out of position and is not at an angle. If it is at an angle, insert your hand and push it in straight.
4. Wipe off or brush off the dirt stuck to cover (3) and the inside of the air cleaner body (7).
5. Remove any dirt or dust that is accumulated to evacuator valve (4) installed to cover (3).

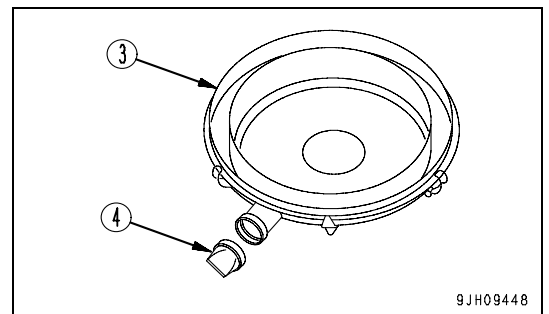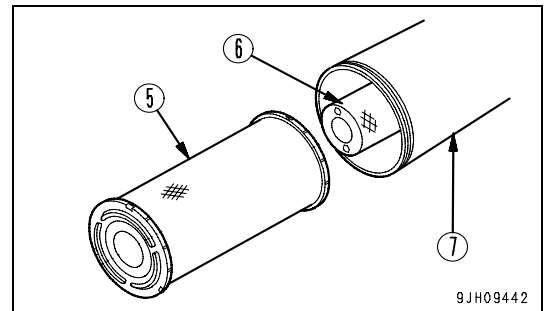

NOTICE


- The inner element must not be cleaned and used again. When replacing the outer element, replace the inner element at the same time.
- If the inner element is not installed properly and the outer element and cover are installed, there is danger that the outer element will be damaged.
- The seal portion on imitation parts lacks precision, and allows the entry of dust, which leads to damage of the engine. Do not use such imitation parts.

6. Remove inner element (6), then quickly install the new inner element.
Insert the inner element securely so that it does not move.
7. Push the new outer element (5) in straight with your hand when installing it to the air cleaner body.
If the element is held and rocked lightly up and down and to the left and right while pushing it in, the element can be inserted easily.


NOTICE

Be sure to install the air cleaner element facing in the correct direction.

Install so that the bottom of the air cleaner element cylinder (face where no hole is drilled) (B), (C) is at cover (3) end. If the direction of installation is mistaken, there is danger that it will cause breakage of the air cleaner element or serious damage to the engine.

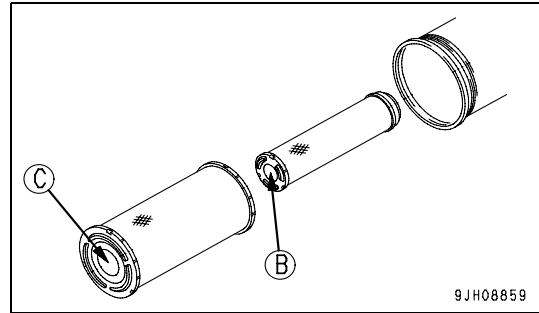



8. Replace O-ring (8) of cover (3) with a new part.

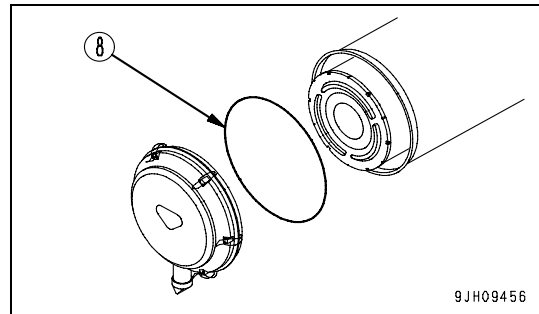

NOTICE

When inserting the element, if the rubber at the tip is swollen or the outer element is not pushed in straight, and cover (3) is assembled by force to hook (2), there is danger that the hook and air cleaner body may be damaged, so be careful when assembling.

9. Install cover (3) as follows.

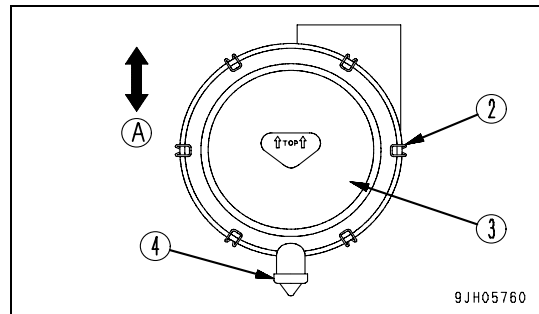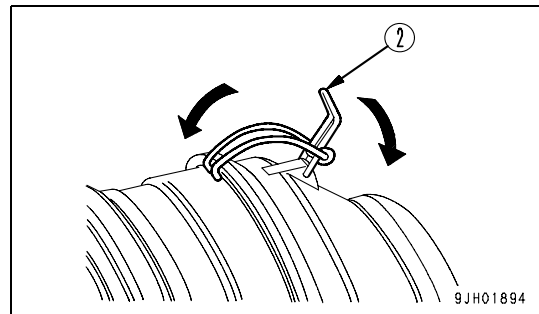

- 1) Align cover (3) with the element.
- 2) Hook the tip of hook (2) to the protruding part of the air cleaner body and lock it in position.
- 3) When locking hooks (2) in position, apply the hooks in turn on opposite sides (top, bottom, left, right) in the same way as when tightening bolts.
- 4) Always install cover (3) so that the evacuator (4) is facing the ground (A).
- 5) When cover (3) is installed, check that the clearance between the air cleaner body and cover (3) is not too large. If it is too large, install again.

CLEAN INSIDE OF COOLING SYSTEM

 WARNING

- Immediately after the engine is stopped, the coolant is at a high temperature and the radiator is under high internal pressure. If the cap is removed to drain the coolant in this condition, there is a hazard of burns. Wait for the temperature to go down, then turn the cap slowly to release the pressure before removing it.
- When starting the engine while cleaning the machine, set the lock lever in the lock position to prevent the machine from moving.
- For details of starting the engine, see “BEFORE STARTING ENGINE (3-111)” and “STARTING ENGINE (3-128)” in the OPERATION section.
- There is danger of touching the fan if the undercover is left removed. Never enter behind the machine when the engine is running.

Stop the machine on level ground when cleaning or changing the coolant.

Clean the inside of the cooling system, change the coolant and replace the corrosion resistor according to the table below.

Antifreeze coolant	Interval of cleaning inside of cooling system and changing antifreeze coolant	Replacing corrosion resistor
Komatsu supercoolant (AF-NAC)	Every two years or every 4000 hours whichever comes first	unnecessary
Permanent type antifreeze (All-season type, *)	Every year (autumn) or every 2000 hours whichever comes first	Every 1000 hours and when cleaning the inside of the cooling system and when changing coolant

*: Permanent type antifreeze shall meet the requirements of ASTM D3306-03.

The coolant has the important function of preventing corrosion as well as preventing freezing.

Even in the areas where freezing is not an issue, the use of antifreeze coolant is essential.

Komatsu machines are supplied with Komatsu Supercoolant (AF-NAC). Komatsu Supercoolant (AF-NAC) has excellent anticorrosion, antifreeze and cooling properties and can be used continuously for 2 years or 4000 hours.

Komatsu Supercoolant (AF-NAC) is strongly recommended wherever available.

When using Komatsu Supercoolant (AF-NAC), there is no need to use a corrosion resistor.

When no corrosion resistor is used, use the special cover (600-411-9000). Please consult your Komatsu distributor about the method of installing.

To maintain the anticorrosion properties of Supercoolant (AF-NAC), always keep the density of Supercoolant between 30% and 68%.

When deciding the ratio of antifreeze to water, check the lowest temperature in the past, and decide from the mixing table given below.

It is actually better to estimate and temperature about 10°C lower when deciding the mixing ratio.

The mixing ratio depends on the ambient temperature, but it should always be a minimum of 30% by volume (antifreeze/total amount of coolant x 100).

The freezing temperature of undiluted antifreeze is -15°C. Do not store undiluted antifreeze at a temperature of below -15°C.

Mixing rate of water and antifreeze

Min. atmospheric temperature	°C	Above-10	-15	-20	-25	-30	-35	-40
Amount of antifreeze	liter	10.8	13.0	14.8	16.6	18.0	19.4	20.1
Amount of water	liter	25.2	23.0	21.2	19.4	18.0	16.6	15.9
Volume ratio (%)		30	36	41	46	50	54	58

! WARNING

- **Antifreeze is flammable, so keep it away from flame. Antifreeze is toxic. When open the drain valve, be careful not to get water containing antifreeze on you. If it gets in your eyes, flush your eyes with large amount of fresh water and see a doctor at once.**
- **When changing the coolant or draining the coolant from the radiator before carrying out repairs, ask a specialist company to handle any coolant containing antifreeze, or contact your Komatsu distributor. Antifreeze is toxic, so never pour it into drainage water ditches or drain it onto the ground surface.**


Use antifreeze and appropriate water for diluting. (for details, see "COOLANT AND WATER FOR DILUTION (4-5)")

We recommend use of an antifreeze density gauge to control the mixing proportions.


Prepare a container whose capacity is larger than the specified coolant volume to catch drained coolant.

Prepare a hose to supply antifreeze coolant and water.


1. Stop the machine on level ground, then stop the engine.
2. Open the front engine hood and tighten corrosion resistor valves (1) (2 places). (Only machines equipped with corrosion resistor).

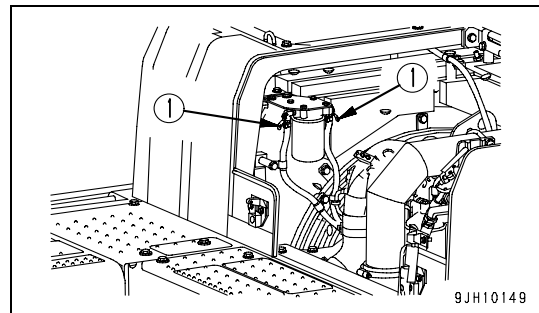


3. Remove cover (2).

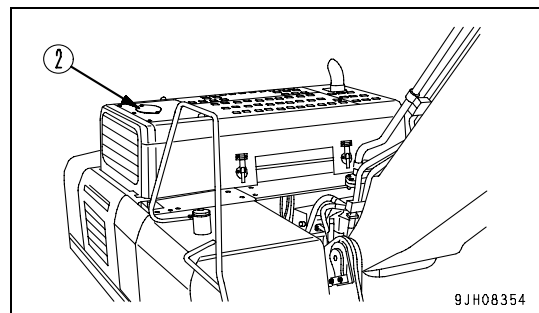

4. Check that the cooling water temperature has gone down enough to make it possible to touch the radiator cap surface by hand, then turn radiator cap (3) slowly until it contacts the stopper to release the pressure.
5. Following this, push radiator cap (3), turn it until it contacts the stopper, then remove it.

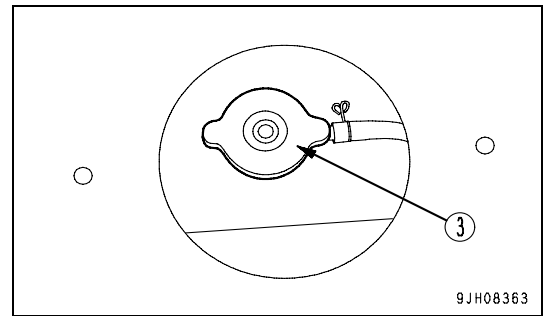



6. Remove drain valve cover (4) on the radiator side and drain valve cover (5) on the engine side.

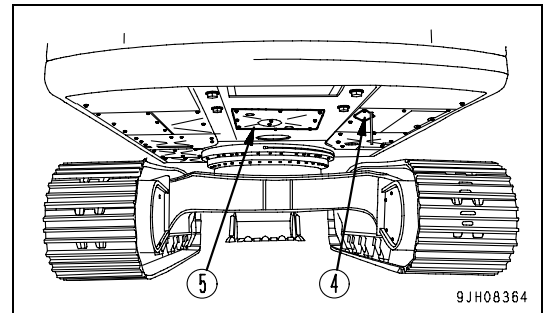

7. Set containers to catch the drained coolant under drain valve (6) on the radiator side and drain valve (7) on the engine site.


Open drain valves (6) and (7), and drain the coolant.

8. After draining the antifreeze solution, close drain valve (6), (7), then fill with clean water. After the radiator is filled with water, start and run the engine at low idling speed. After the water temperature rises above 90°C, run the engine for about 10 minutes.
9. Stop the engine and open drain valves (6), (7) to drain the water.
10. After draining the water, clean the radiator with detergent.
For the cleaning method, follow the instruction of detergent.
11. Close drain valves (6), (7).

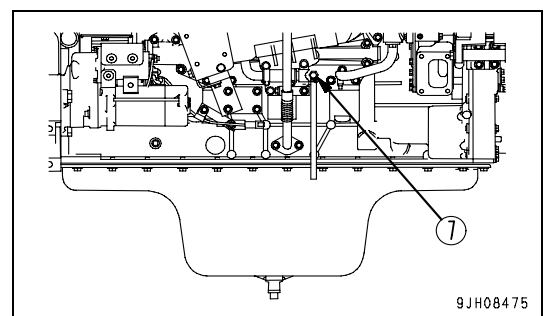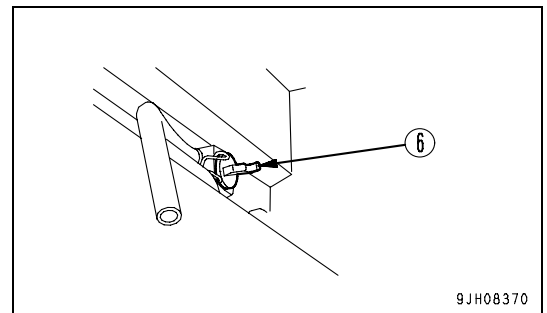


12. Install the covers (4) and (5).
13. Replace the corrosion resistor, and open valve (1). (Only machines equipped with corrosion resistor)
For details of replacement of the corrosion resistor cartridge, see "REPLACE CORROSION RESISTOR CARTRIDGE (4-74)".
14. Add coolant mixed with antifreeze until it overflows from the water filler.
Decide the proportions of antifreeze and water according to the table for the mixing rate of water and antifreeze.
15. Run the engine at low idling for 5 minutes to remove the air from the water, then run at high idling for 5 minutes. (Leave radiator cap (3) removed when doing this.)

16. Open the rear engine hood, drain the water from sub-tank (8), wash the inside of the sub-tank, then add water to a point between the FULL and LOW marks.
 - If the sub-tank is extremely dirty and it is difficult to clean, replace it with a new part.
17. Stop the engine, wait for approx. 3 minutes, add city water up to near the mouth of the filler port, then tighten radiator cap (3).
18. Install cover (2).
19. Close the engine hood.

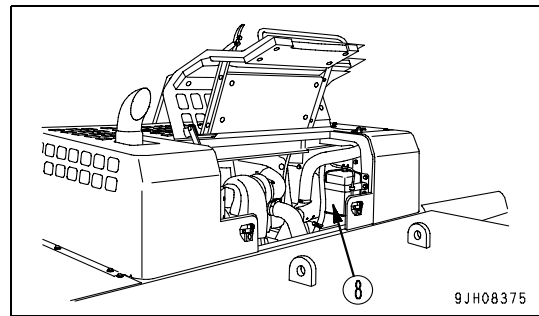


9JH08375

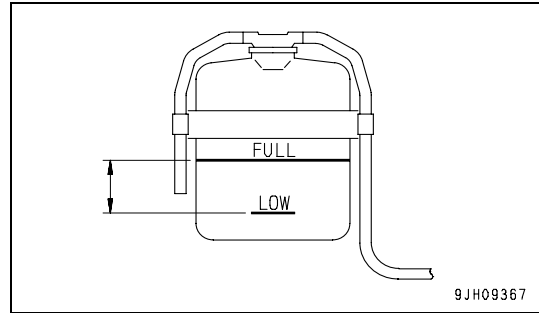

9JH09367

CHECK AND TIGHTEN TRACK SHOE BOLTS

If the machine is used with track shoe bolts (1) loose, they will break, so tighten any loose bolts immediately.

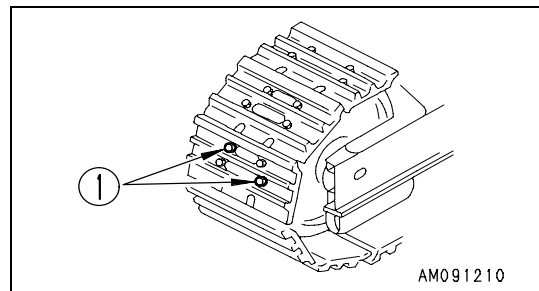


AM091210

Tightening

1. First, tighten to a tightening torque of 392 ± 39.2 Nm (40 ± 4 kgm), then check that the nut and shoe are in tight contact with the link mating surface.
2. After checking, tighten a further $120^\circ \pm 10^\circ$.

Order for Tightening

Tighten the bolts in the order shown in the diagram on the right. After tightening, check that the nut and shoe are in close contact with the link mating surface.

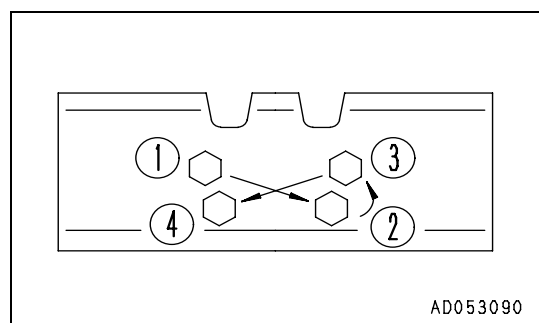

AD053090


CHECK AND ADJUST TRACK TENSION

Wear on pins and bushings of the undercarriage will vary with working conditions and type of soil, so inspect the track tension every now and then in order to maintain the standard tension.

For carrying out inspection and adjustment of track shoes, park the machine on the flat and solid ground.

Checking

1. Run the engine at low idle, then move the machine forward for a distance equal to the track length on ground, and slowly stop the machine.
2. Put on the track shoe straight wooden bar (3) which stretches from idler (1) to upper carrier roller (2).
3. Measure the maximum deflection between bottom surface of the wooden bar and top surface of the track shoe.
Deflection "a" should be 10 - 30 mm.

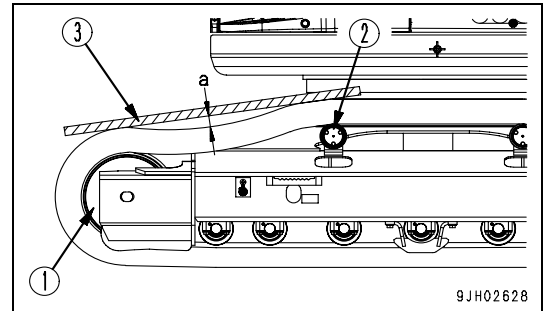

If the track tension is not at the standard value, adjust it in the following manner.


Adjustment

⚠ WARNING

There is danger of plug (1) flying out under the high internal pressure of the grease. Never loosen plug (1) more than 1 turn.

Never loosen any part other than plug (1). Never put your face in the mounting direction of plug (1).


If the track tension cannot be loosened with the procedure given here, please contact your Komatsu distributor.

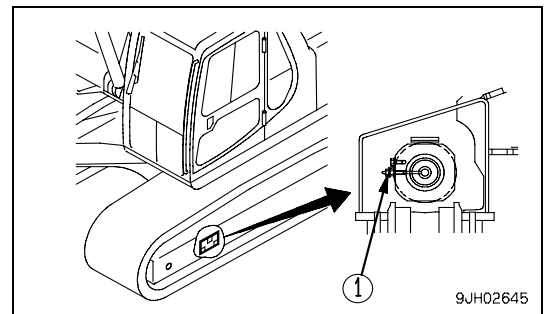


Increasing Track Tension

Prepare a grease pump.

1. Pump in grease through grease fitting (2) with a grease pump. (Grease fitting (2) forms one part with plug (1).)
2. To check if the tension is correct, run the engine at low idle, move the machine slowly forward (by an amount equal to the length of track on ground), then stop the machine.
3. Check the track tension again, and if the tension is not correct, adjust it again.

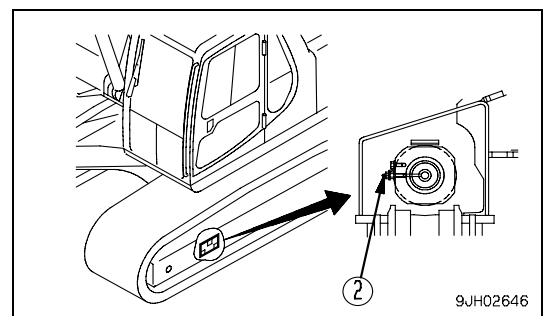

4. Continue to pump in grease until dimension (S) becomes zero (0). If the tension is still loose, the pin and bushing are excessively worn, so they must be either turned or replaced. Please contact your Komatsu distributor for repairs.

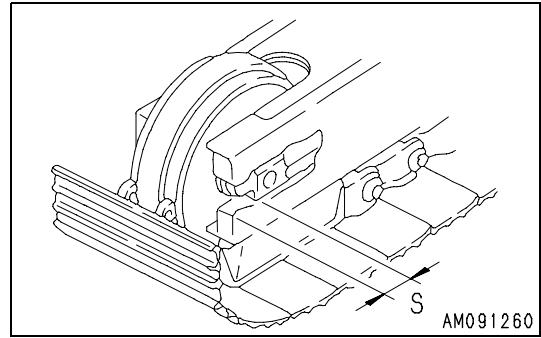


Loosening Track Tension

⚠ WARNING

It is extremely dangerous to release the grease by any method except the procedure given below. If track tension is not relieved by this procedure, contact your Komatsu distributor for repairs.

1. Loosen plug (1) gradually to release the grease.
2. When loosening plug (1), turn it a maximum of one turn.
3. If the grease does not come out smoothly, move the machine forwards and backwards a short distance.
4. Tighten plug (1).
5. To check if the tension is correct, run the engine at low idle, move the machine slowly forward (by an amount equal to the length of track on ground), then stop the machine.
6. Check the track tension again, and if the tension is not correct, adjust it again.

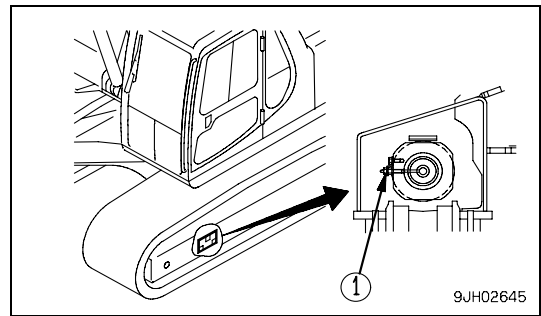


REPLACE BUCKET TEETH (VERTICAL PIN TYPE)

Replace the bucket teeth before the adapter starts to wear.


⚠ WARNING

- It is dangerous if the work equipment moves by mistake when the teeth are being replaced. Set the work equipment in a stable condition, then stop the engine and set the lock lever securely to the LOCK position.
- The pins can be knocked out only with strong force, so there is a hazard that the pin may fly out. Check that there is no one in the surrounding area.
- There is a hazard that fragments will fly during the replacement work, so always wear protective equipment like safety glasses and gloves.


1. To make it possible to knock out pin of tooth (1), put block (5) under the bottom of the bucket, and set so that the bottom surface of the bucket is horizontal.

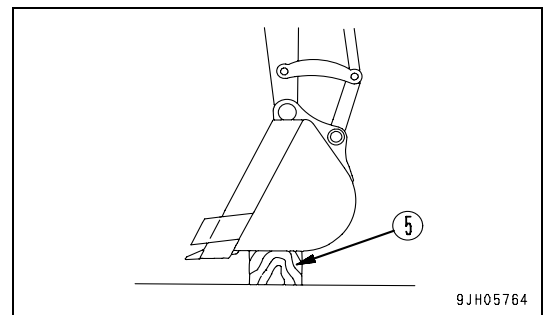

2. Check that the work equipment is in a stable condition, then set the lock lever to the LOCK position (L).

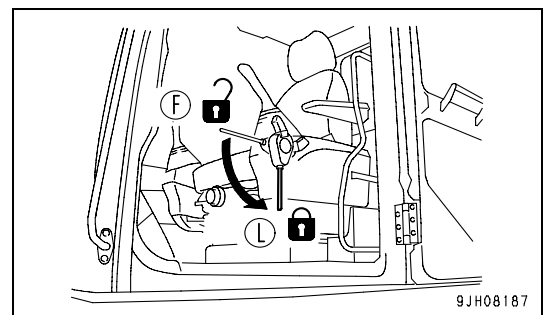


3. Use a hammer and drift to knock out lock pin (2). (If the drift is set against rubber pin lock (3) when it is hit, the rubber pin lock may break. Set it against the back of the pin.)
4. After removing lock pin (2) and rubber pin lock (3), check them.

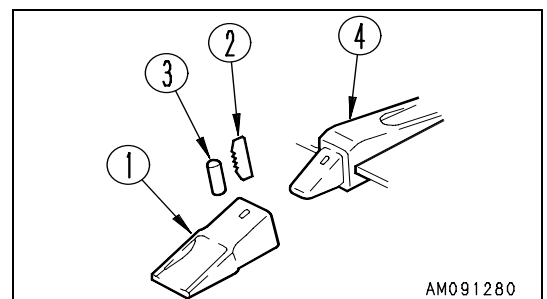


If lock pin (2) and rubber pin lock (3) are used in the condition below, it will cause tooth (1) to come off during operation. Always replace them with new parts.


- The lock pin (2) is too short.
Dimension (B) is 1/3 or more of dimension (A) when locking pin (2) is aligned with bottom face (C).

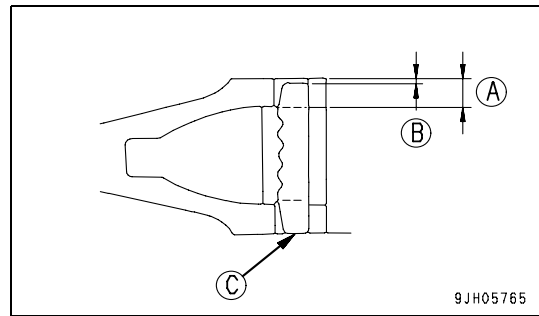


- Rubber (6) of the rubber pin lock is cut and the steel ball is about to come out.

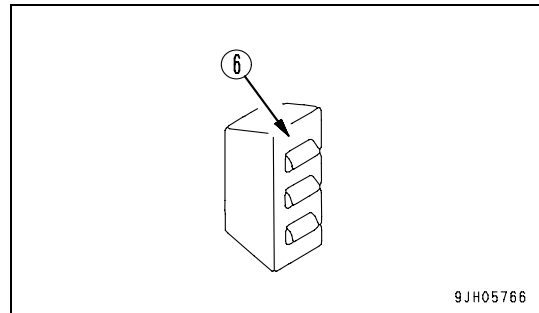

- Steel ball (7) sinks in when it is pushed by hand.

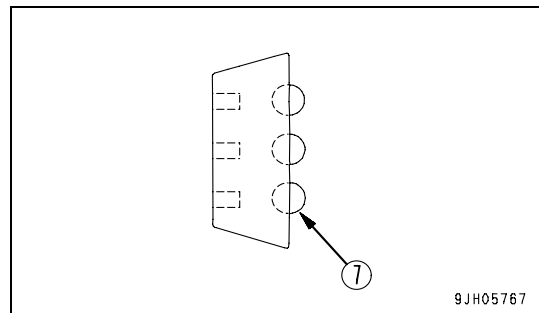

5. Clean the surface of adapter (4) and remove the soil with a knife.
6. Use your hand or a hammer to push rubber pin lock (3) into the hole of the adapter (4).
When doing this, be careful that the rubber pin lock (3) does not fly out from the adapter surface.

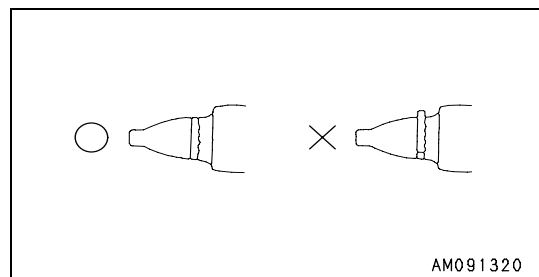



7. Clean the inside of teeth (1), then install it to adapter (4). If there is mud affixed to it or if there are protrusions, the teeth (1) will not enter the adapter properly, and there will not be proper contact at the mating portion.

8. Fit tooth (1) to adapter (4), and confirm that when the pointer is pressed strongly, the rear face of the hole for the pin of the teeth (1) is at the same level as the rear face of the hole for the pin of the adapter (4).


If the rear face of the pin hole of tooth (1) protrudes in front of the rear face of the pin hole of adapter (4), do not knock the pin in.

If this happens, there is something (C) preventing the tooth (1) from fitting completely in adapter (4), locate the problem and remove the obstruction. When tooth (1) fits completely in adapter (4), knock in lock pin (2).

9. Insert lock pin (2) in the pin hole in the tooth (1), and knock it in so that the top surface of lock pin (2) is the same height as the surface of tooth (1).
10. After replacing a bucket tooth, always check the following.

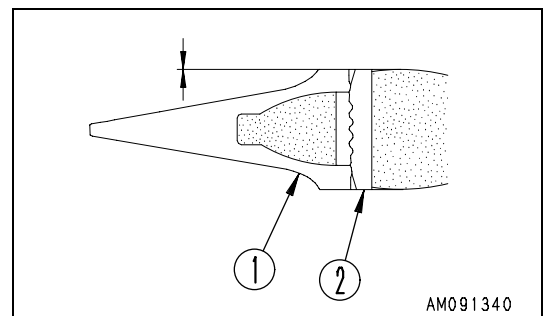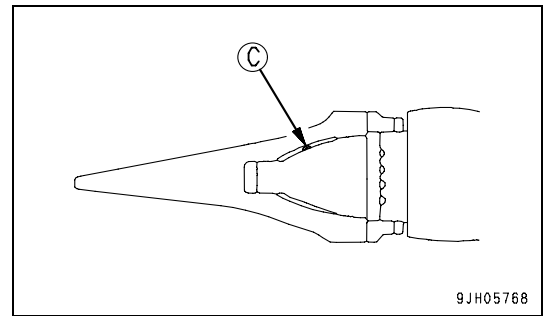

- 1) After the lock pin (2) has been knocked in completely, check that it is secured by the teeth (1) and surface.
- 2) Lightly hit lock pin (2) in the reverse direction from which it was hit in.
- 3) Lightly hit the tip of the teeth (1) from above and below, and hit its sides from right and left.

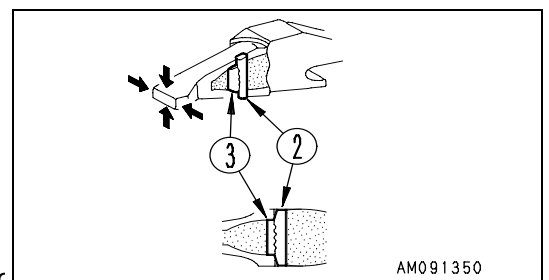

- 4) Confirm that rubber pin lock (3) and lock pin (2) are set as shown.

REMARK

If the tooth is turned, the wear will become uniform. This will extend the service life of the tooth and reduce the frequency of replacement.

When replacing the tooth, replace the rubber pin lock and lock pin with new parts at the same time. This will prevent the tooth from falling out.


REPLACE BUCKET TEETH (HORIZONTAL PIN TYPE)

Replace the bucket teeth before the adapter starts to wear.


WARNING

- It is dangerous if the work equipment moves by mistake when the teeth are being replaced. Set the work equipment in a stable condition, then stop the engine and set the lock lever securely to the LOCK position.
- The pins can be knocked out only with strong force, so there is a hazard that the pin may fly out. Check that there is no one in the surrounding area.
- There is a hazard that fragments will fly during the replacement work, so always wear protective equipment like safety glasses and gloves.


1. To make it possible to knock out pin (1) of tooth (2), put block (5) under the bottom of the bucket, and set so that the bottom surface of the bucket is horizontal.

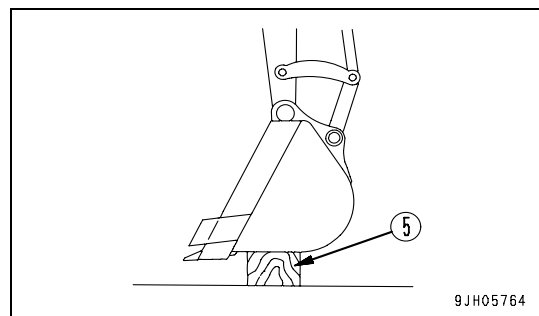

2. Check that the work equipment is in a stable condition, then set the lock lever to the LOCK position (L).

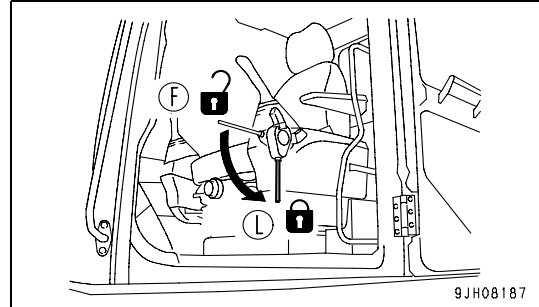


3. Place a bar on the head of pin (1), hit the bar with a hammer to knock out the pin, then remove tooth (2).

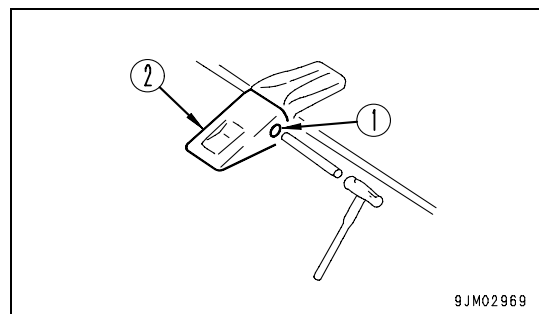

REMARK

If the bucket teeth cannot be safely removed by this method, have your Komatsu distributor replace the bucket teeth.


4. Clean the mounting face. Fit a new tooth (2) in the adapter, push in pin (1) partially by hand, then lock it with a hammer to install the tooth to the bucket.

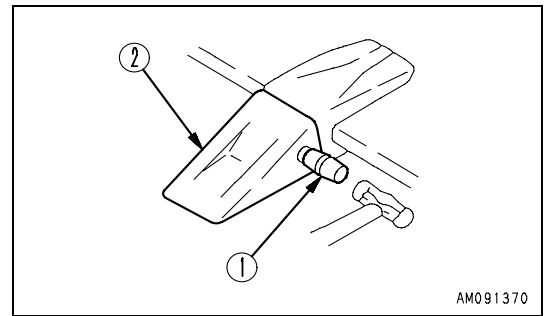

REPLACE BUCKET SIDE CUTTER, SHROUD


⚠ WARNING

- It is dangerous if the work equipment is mistakenly moved when replacing the bucket side cutters and shroud. Set the work equipment in a stable condition, stop the engine, then set lock lever securely to the LOCK position (L).
- As the locking pin is knocked out with force, there is danger that the pin may fly out. Check that there is no one near the machine.
- Broken pieces may fly during the replacement operation, so always wear safety glasses, gloves, or other protective equipment.

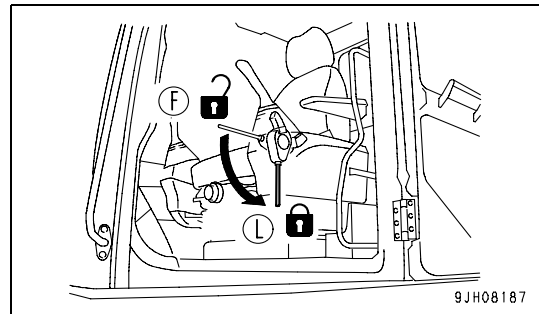


Side Cutters

Loosen mounting bolts (2), then remove side cutter (1). Replace the side cutter, bolts, and nuts with new parts. Tightening torque for bolts: 3040 to 3630 Nm (310 to 370 kgm)

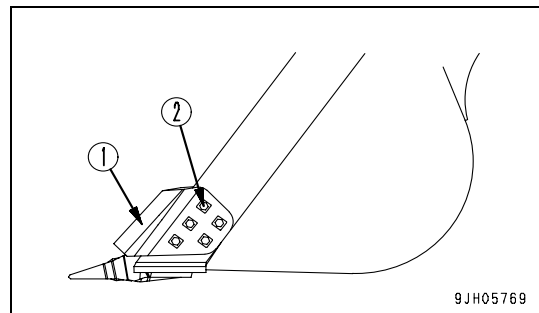

Shroud


1. Place a bar on the head of pin (1), hit the bar with a hammer to knock out the pin, then remove tooth (2).

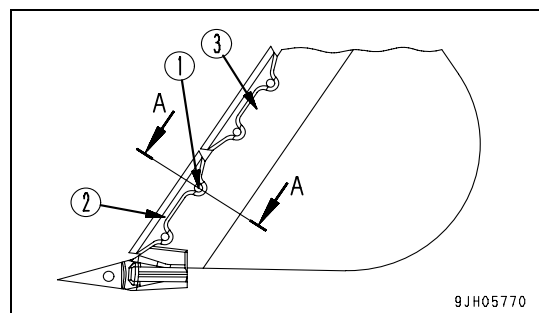

REMARK


If it cannot be removed by this method, for safety reasons, always contact your Komatsu distributor to have the replacement carried out.

2. Clean the mounting face. Fit a new shroud (2) in the adapter, push in pin (1) partially by hand, then lock it with a hammer to install the tooth to the bucket.

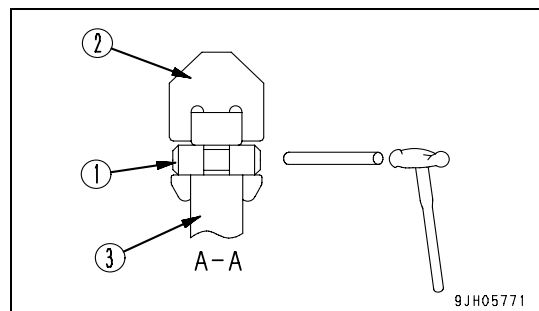


ADJUST BUCKET CLEARANCE

⚠ WARNING
 It is dangerous if the work equipment is mistakenly moved when adjusting the bucket clearance.
 Set the work equipment in a stable condition, stop the engine, then set safety lock lever securely to the LOCK position (L).

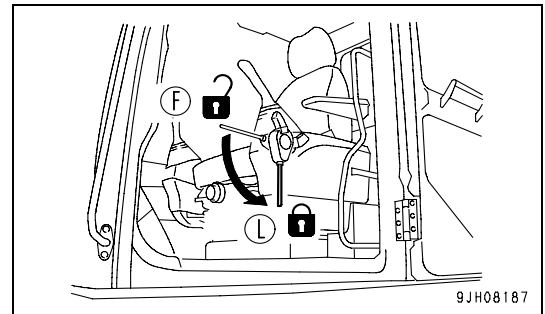

1. Set the work equipment in the position shown in the diagram on the right, then stop the engine and set the lock lever to the LOCK position (L).
2. Shift O-ring (1) and measure the amount of play "a".
 Measurement is easier if you move the bucket to one side so that all the play can be measured at one place (the right side in the diagram).
 Use a clearance gauge for easy and accurate measurement.
3. Loosen 4 plate mounting bolts (2), and loosen plate (3).
 The shim is a split type, so the operation can be carried out without removing the bolts.
4. Remove shim (4) corresponding to the amount of play "a" measured above.

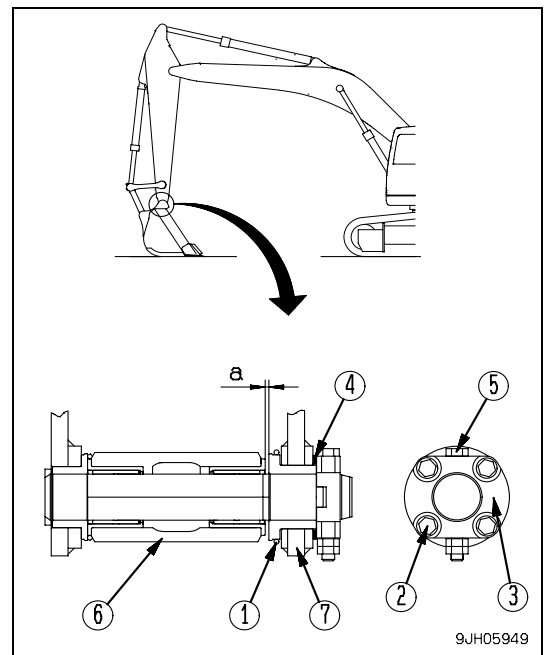

- (6) Arm
- (7) Bucket

[Example]

In the case of play of 3 mm, remove two 1.0 mm shims and one 0.5 mm shim. Play becomes 0.5 mm. For shim (4), two types of 1.0 mm and 0.5 mm are used.


When play "a" is smaller than one shim, do not carry out any maintenance.

5. Tighten the four bolts (2).
 If the bolts (2) are too stiff to tighten, pull out pin stopper bolt (5) for easier tightening.

CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID

If there is air in the window washer fluid, check the level of the fluid in window washer tank (1), and if it is low, add automobile window washer fluid.

The window washer tank (1) is at the rear left of the machine inside the door.

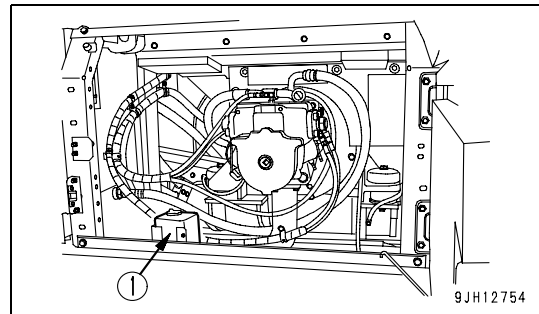

When adding fluid, be careful not to let any dust get in.

There are two types depending on the freezing temperature:

-10°C (general use) and -30°C (cold area use), select according to the area and season.

Mixture Ratio of Pure Washer Fluid and Water

The proportion differs according to the ambient temperature, so dilute the washer fluid with water to the following proportions before adding.

(Mixture ratio of washer fluid at -30°C (cold area))

Area, season	Proportions	Freezing temperature
Normal	Washer fluid 1/3: water 2/3	-10°C
Winter in cold area	Washer fluid 1/2 : water 1/2	-20°C
Winter in extremely cold area	Pure washer fluid	-30°C

CHECK AND MAINTENANCE AIR CONDITIONER



Check Level of Refrigerant (gas)

⚠ WARNING

If the refrigerant used in the air conditioner gets into your eyes or on your hands, it may cause loss of sight or frostbite. Do not touch the refrigerant. Never loosen any part of the refrigerant circuit. Do not bring any flame close to any point where the refrigerant gas is leaking.

If the level of the refrigerant (gas) is low, the cooling effect will be reduced. Run the engine at high idle, and check the flow of the refrigerant gas (R134a) in the refrigerant circuit through the sight glass (2) (inspection window) of the receiver (1) when the cooler is running at high speed.

- (A) No bubbles in refrigerant flow: Suitable
- (B) Some bubbles in flow (bubbles pass continuously): Lack of refrigerant
- (C) Colorless, transparent: No refrigerant

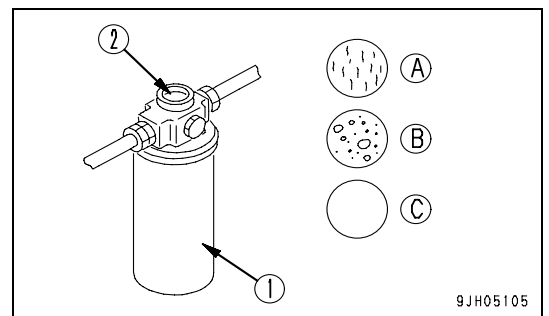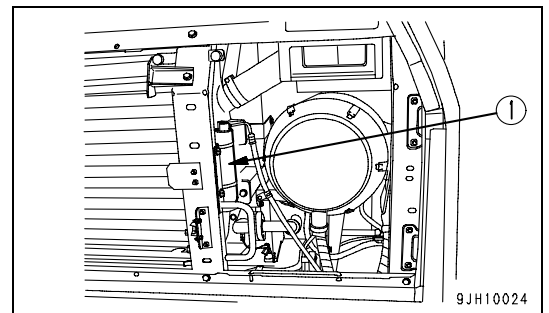

REMARK

When there are bubbles, the refrigerant gas level is low, so contact your Komatsu distributors to have refrigerant added. If the air conditioner is run with the refrigerant gas level low, it will cause damage to the compressor.

Inspection During Off Season

Even during the off-season, operate the air conditioner for 3 to 5 minutes once a month to maintain the oil film at all parts of the compressor.

Inspection and Maintenance Items

Check, maintenance items	Content of check, maintenance	Guideline for maintenance interval
Refrigerant (gas)	Charge amount	Twice a year (spring, autumn)
Air conditioner condenser	Clogged fins	Every 500 hours
Compressor	Operating condition	Every 4000 hours
V-belt	Damage, tension	Every 250 hours
Blower motor, fan	Operating condition (does it make abnormal noise?)	When required
Control mechanism	Operating condition (does it function normally?)	When required
Piping mounts	Mounting condition, looseness at tightening or connecting portions, leakage of gas, damage	When required

WASH WASHABLE FLOOR

⚠ WARNING

- When setting the machine at an angle, use strong blocks to stabilize the machine and be extremely careful when carrying out the operation.
- If the control levers are touched by mistake, the machine may suddenly move, and this may lead to a serious accident. Always set the lock lever securely to the LOCK position before standing up from the operator's seat.

NOTICE

- When carrying out this operation, be careful not to get water on the monitor and connectors inside the operator's cab.
- Never spray water above the pedestal of the operator's seat (2).
- If any water splashes on the surrounding equipment, be sure to wipe it off.


With the washable floor, it is possible to flush out the dirt on the cab floor directly with water.

Washing Washable Floor Mat

1. Stop the machine on horizontal ground, lower the bucket to the ground, and then stop the engine.
2. When washing the floor mat, use a brush to remove the dust, or direct the water onto the mat and wash it with a brush.


Method of Washing

1. Set the machine at an angle.
For details, see "Method of Setting Machine at Angle (4-44)"
2. Swing the upper structure slowly so that water drain holes (3) in the cab floor are at a low position.

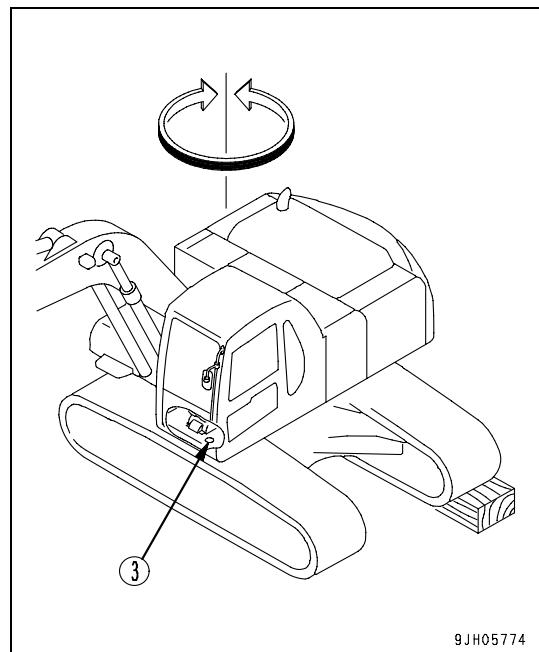


9JH05774



3. Lower the work equipment to the ground and set the machine in a stable condition.

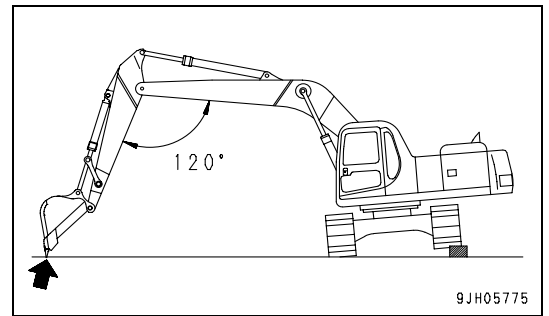

4. Set lock lever (1) to LOCK position (L) and stop the engine.

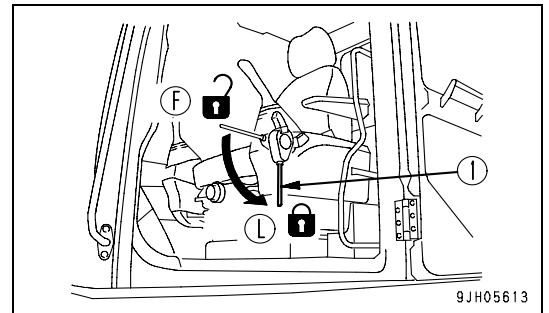

5. Remove the floor mat holder plate (4).
6. Pull the knob of floor mat holder clip (5) and remove clip (5).
7. Remove the floor mat.
8. Remove the cap from water drain hole (3).
9. Flush out the dirt on the floor directly with water through water drain hole (3).
10. After completing the washing operation, install the cap in water drain hole (3).
11. Fit the floor mat, then secure it with floor mat holder plate (4).
12. Secure the floor mat in position with the floor mat holder clip (5).

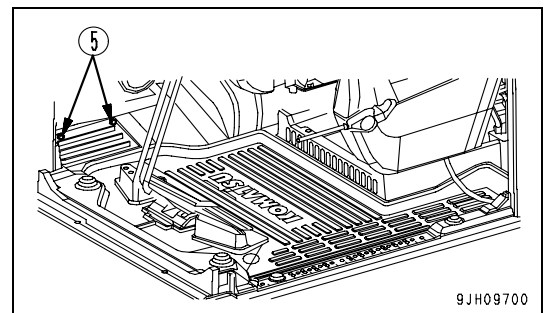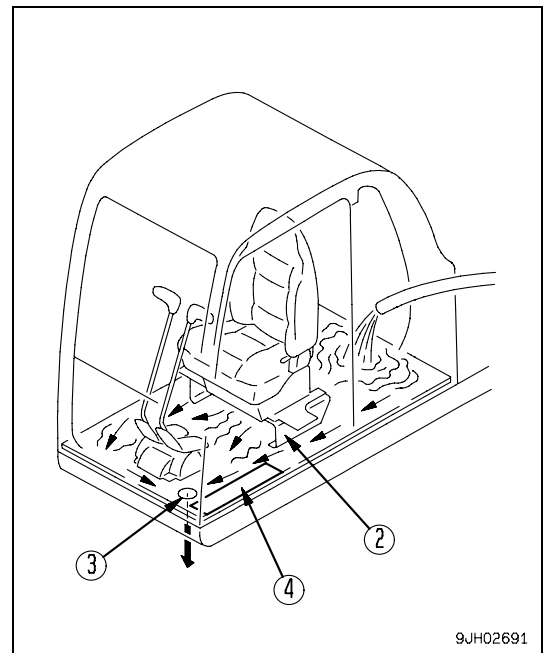

Method of Setting Machine at Angle


Method Using Slope

! WARNING

Select a solid and smooth slope.

Always put blocks under the track to prevent the machine from moving, and dig the work equipment into the ground.

1. Stop the machine so that the work equipment is on the downhill side.
2. Put blocks under the track and dig the work equipment into the ground.

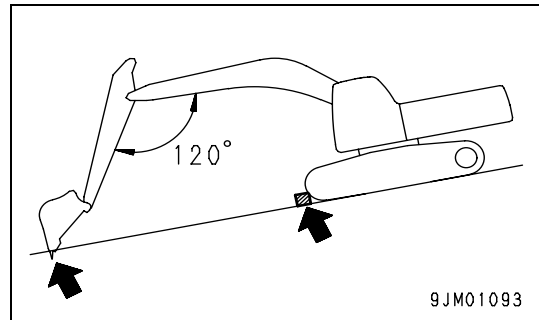


Method Using Block

! WARNING


Select a firm flat place.

Put strong blocks under the undercarriage to stabilize the machine and be extremely careful when carrying out the operation.

1. Raise the chassis with the boom and arm.
When doing this, operate the levers slowly.
2. Insert block (5) under the raised track to make the machine stable.

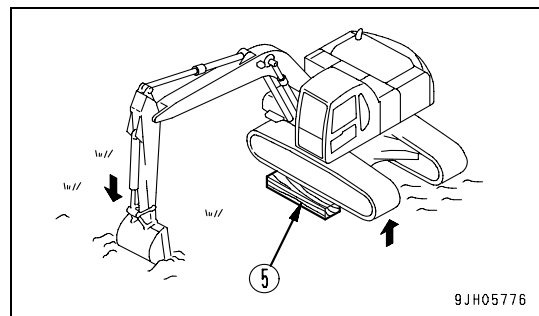

3. Raise the boom slowly and lower the machine.
When doing this, check that the machine is always stable.

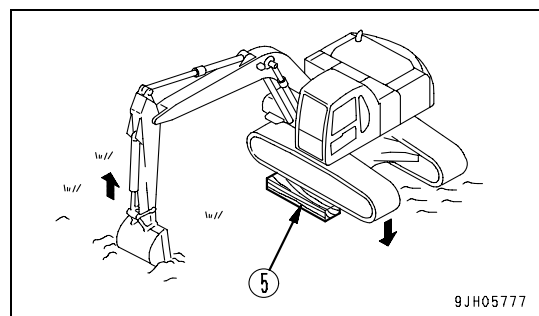


BLEEDING AIR FROM HYDRAULIC SYSTEM

For details, see “STARTING ENGINE (3-128)”. If it is necessary to refer to the items for starting the engine, moving the machine off, steering, or stopping, see the OPERATION section.

1. Bleeding air from pump

- 1) Loosen air bleeder (1) and check that oil oozes out from the air bleeder.
- 2) If the oil does not ooze out, remove the drain hose from the hydraulic pump case and fill the pump case completely with hydraulic oil through drain port (2). Hold the removed hose firmly, keeping the mouthpiece higher than the oil level in the hydraulic tank so that oil will not spill out of the hose.
- 3) After completing the air bleed operation, tighten air bleeder (1) and install the drain hose.

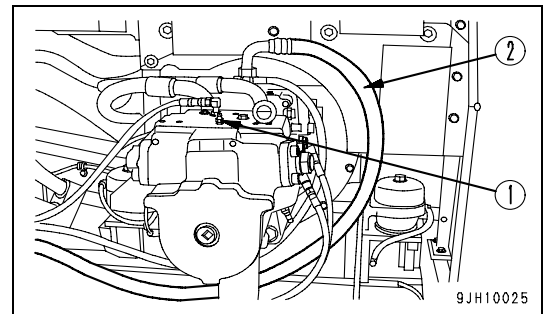

NOTICE

If the drain hose is installed first, oil will spurt out from bleeder hole (1). If the pump is operated without filling the pump case with hydraulic oil, abnormal heat will be generated and this may cause an unexpected damage to the pump.

2. Starting engine

Start the engine, referring to “STARTING ENGINE (3-128)”.
Run the engine at low idle for 10 minutes after starting, then start operations.

3. Bleeding air from cylinders

- 1) Run the engine at low idle, and extend and retract each cylinder 4 to 5 times, taking care that a cylinder is not moved to the end of its stroke. (Stop the cylinder approx. 100 mm short of its stroke end)
- 2) Next, operate each cylinder 3 to 4 times to the end of its stroke.
- 3) Finally, operate each cylinder 4 to 5 times to the end of its stroke to completely remove the air.

NOTICE

If the engine is run at high speed immediately after startup or a cylinder is pushed up to its stroke end, air taken inside the cylinder may cause damage to the piston packing.


4. Bleeding air from swing motor

- 1) Run the engine at low idling, loosen hose (3) at port S, and check that oil oozes out from port S hose (3).

NOTICE

Do not operate the swing under any circumstances.

- 2) If oil does not ooze out, stop the engine, remove port S hose (3), and fill the inside of the motor case with hydraulic oil.

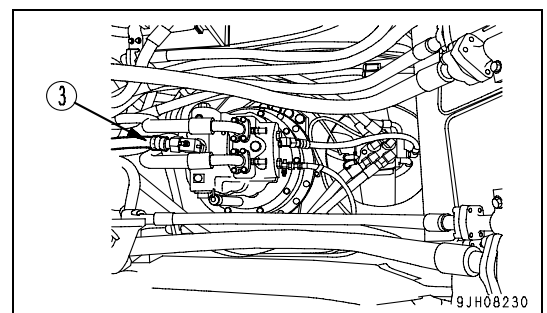


- 3) After completely bleeding the air from the swing motor, tighten port S hose (3).
- 4) Run the engine at low idle and slowly swing at least two times uniformly to the left and right. This will automatically bleed the air from the swing circuit.

NOTICE


- If the air is not bled from the swing motor, the motor bearings may be damaged.
- When replacing the travel motor safety valve, please contact your Komatsu distributor to have it replaced and to have the air bled.

5. Bleeding air from travel motor

(Bleed the air only when the oil inside the travel motor case has been drained.)

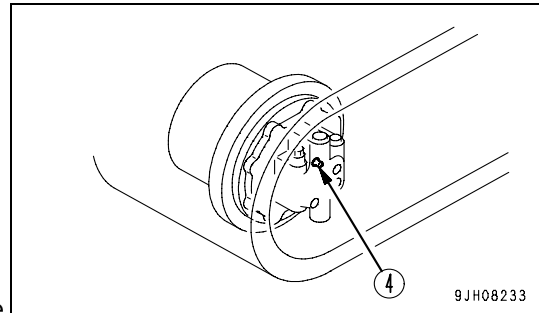

1) Run the engine at low idling, loosen air bleeder (4), and tighte

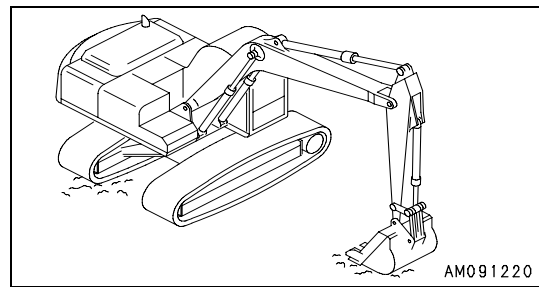

- 2) Run the engine at low idle and swing the work equipment 90° to bring it to the side of the track.
- 3) Jack up the machine until the track is raised slightly from the ground. Rotate the track under no load for 2 minutes.

Repeat this procedure on both the left and right sides.

6. Bleeding air from attachment (when installed)

If a breaker or other attachment has been installed, run the engine at low idle and operate the attachment pedal repeatedly (approx. 10 times) until the air has been bled from the attachment circuit.

NOTICE

- If the method of bleeding the air from the attachment itself is specified by the manufacturer, bleed the air according to the specified procedure.
- After completing the air bleeding operation, stop the engine, and leave the machine for 5 minutes before starting operations. This will remove the air bubbles in the oil inside the hydraulic cylinders.
- Check that there is no leakage of oil and wipe off any oil that has been spilled.
- After completing the air bleeding operation, inspect the oil level, and if the oil level is low, add oil.

CHECK BEFORE STARTING

For details of the following items, see "Checks Before Starting (3-112)" in the OPERATION section.

- Drain water and sediment from fuel tank
- Check oil level in hydraulic tank, add oil
- Check oil level in engine oil pan, add oil
- Check for water and sediment in water separator, drain water
- Check coolant level, add coolant
- Check electric wiring
- Check fuel level, add fuel
- Check working lamp switch
- Check function of horn


EVERY 50 HOURS MAINTENANCE

LUBRICATING


NOTICE

- If any abnormal noise is generated from any greasing point, carry out greasing regardless of the greasing interval.
- Carry out greasing every 10 hours for the first 50 hours on a new machine.
- After the machine was subjected to jobs in the water, be sure to grease the wet pins.


1. Set the machine to the greasing posture shown on the right, lower the work equipment to the ground, then stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

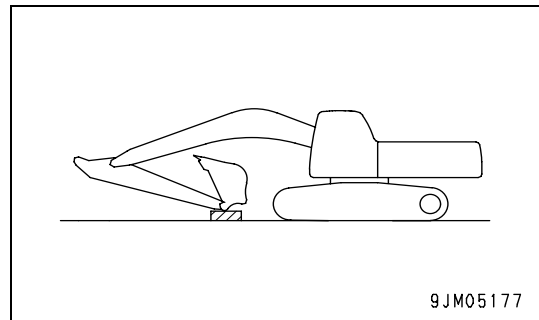

- (1) Arm-Link coupling pin (1 place)
- (2) Arm - Bucket connection pin (1 place)

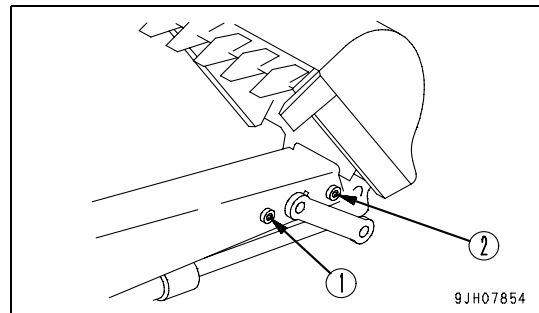

- (3) Link coupling pin (2 places)
- (4) Bucket cylinder rod pin (1 place)
- (5) Bucket-Link coupling pin (1 place)

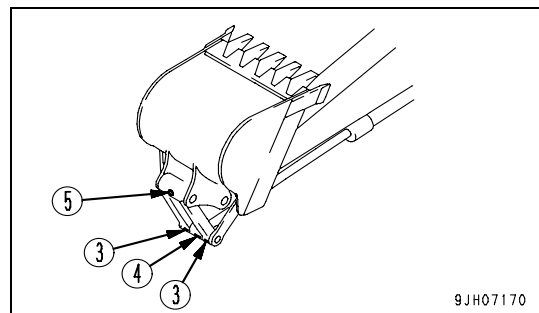


EVERY 250 HOURS MAINTENANCE

Maintenance for every 50 hours service should be carried out at the same time.

LUBRICATE SWING CIRCLE

1. Lower the work equipment to the ground.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows. (2 places)
3. After greasing, wipe off any old grease that was pushed out.

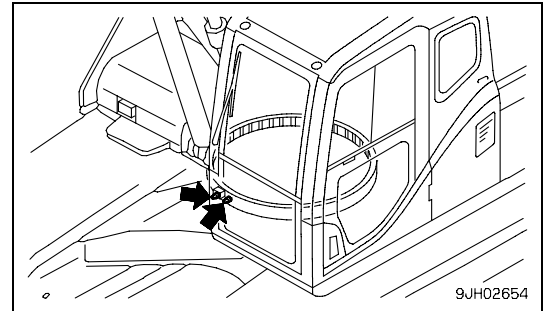

CHECK LEVEL OF BATTERY ELECTROLYTE

Carry out this procedure before operating the machine.

WARNING


- Do not use the battery if the battery electrolyte level is below the LOWER LEVEL line. This will accelerate deterioration of the inside of the battery and reduce the service life of the battery. In addition, it may cause an explosion.
- The battery generates flammable gas and there is danger of explosion, do not bring fire or sparks near the battery.
- Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with a large amount of water and consult a doctor.

NOTICE

- When adding distilled water to the battery, do not allow the battery electrolyte to go above the UPPER LEVEL line. If the electrolyte level is too high, it may leak and cause damage to the paint surface or corrode other parts.
- When adding distilled water in cold weather, add it before starting operations in the morning to prevent the electrolyte from freezing.

Inspect the battery electrolyte level at least once a month and follow the basic safety procedures given below.

Open cover (1) at the front right side of the machine. The battery is inside.

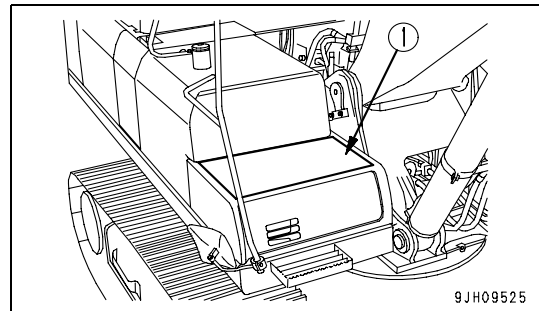


9JH09525

When Checking Electrolyte Level from Side of Battery

If it is possible to check the electrolyte level from the side of the battery, check as follows.

1. Use a wet cloth to clean the area around the electrolyte level lines and check that the electrolyte level is between the UPPER LEVEL (U.L.) and LOWER LEVEL (L.L.) lines.


If the battery is wiped with a dry cloth, static electricity may cause a fire or explosion.

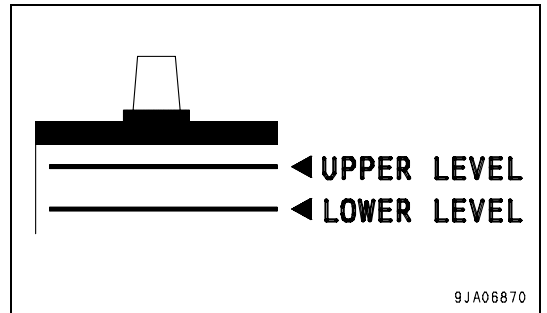

2. If the electrolyte level is below the midway point between the UPPER LEVEL (U.L.) and LOWER LEVEL (L.L.) lines, remove cap (2) and add distilled water to the U.L. line.
3. After adding distilled water, tighten cap (2) securely.

REMARK

If distilled water is added to above the UPPER LEVEL (U.L.) line, use a syringe to lower the level to the UPPER LEVEL (U.L.) line. Neutralize the removed fluid with baking soda (sodium bicarbonate), then flush it away with a large amount of water or consult your Komatsu distributor or battery maker.

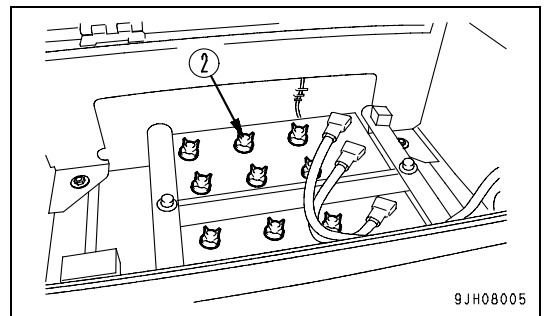



When it is Impossible to Check Electrolyte Level from Side of Battery

If it is impossible to check the electrolyte level from the side of the battery, or there is no display of the UPPER LEVEL line on the side of the battery, check as follows.

1. Remove cap (2) at the top of the battery, look through the water filler port (3), and check the electrolyte surface. If the electrolyte does not reach the sleeve (4), add distilled water so that the level reaches the bottom of the sleeve (UPPER LEVEL line) without fail.

- (A) Suitable level: Electrolyte level is up to bottom of sleeve, so surface tension causes electrolyte surface to bulge and poles appear bent.
- (B) Low: Electrolyte level is not up to bottom of sleeve, so poles appear straight and not bent.

2. After adding distilled water, tighten cap (2) securely.

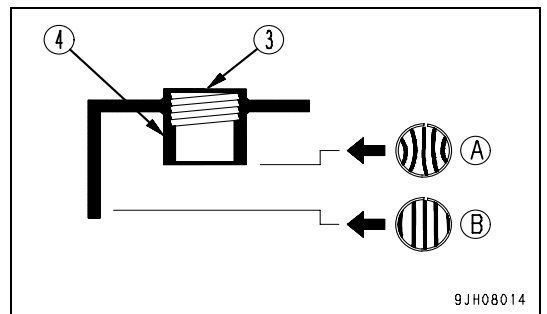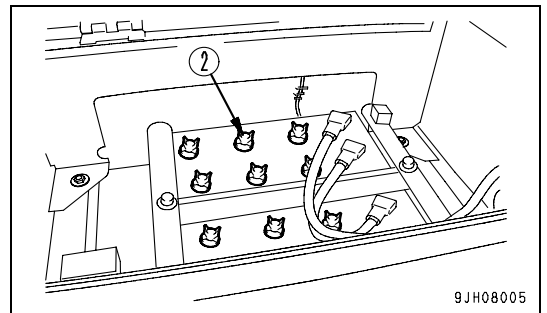

REMARK

If water is added to above the bottom tip of the sleeve, use a pipette to remove electrolyte. Neutralize the removed electrolyte with sodium bicarbonate, then flush it away with a large amount of water. If necessary, contact your Komatsu distributor or your battery maker.

When it is Possible to Use Indicator to Check Electrolyte Level



If it is possible to use an indicator to check the electrolyte level, follow the instructions given.

CHECK FAN BELT, ALTERNATOR BELT TENSION, ADJUST

Inspection

The deflection of the belt should be approx. 13 mm when pressed with a finger force of approx. 58.8N (6 kgf) at mid-point (a) between the alternator pulley and the fan pulley.

- (A): Alternator pulley
- (B): Fan pulley
- (C): Crankshaft pulley

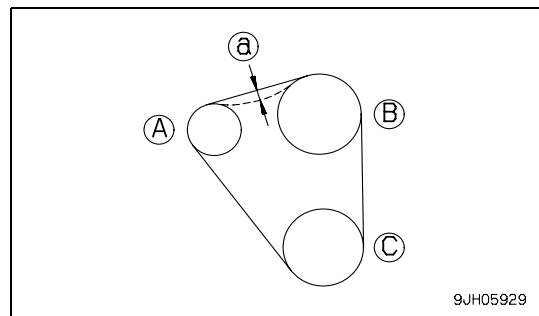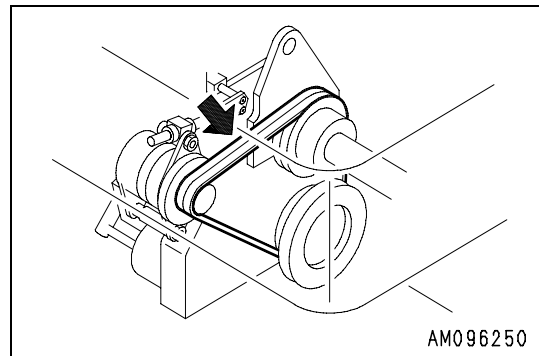

Adjustment

1. Loosen bolts and nuts (1), (2), (3).

Turn nut (4) clockwise to move alternator (5) so that the belt deflects by approx. 13 mm with applied force of approx. 6 kg (58.8 N).


2. Tighten bolts and nuts (1), (2) and (3) to secure alternator (5).

Tightening torque

Lock nut (1) and (4): 137.2 ± 53.9 Nm (14 ± 5.5 kgm)

Bolt (2): 33.3 ± 4.9 Nm (3.4 ± 0.5 kgm)

Bolt (3): 127.4 ± 19.6 Nm (13 ± 2 kgm)

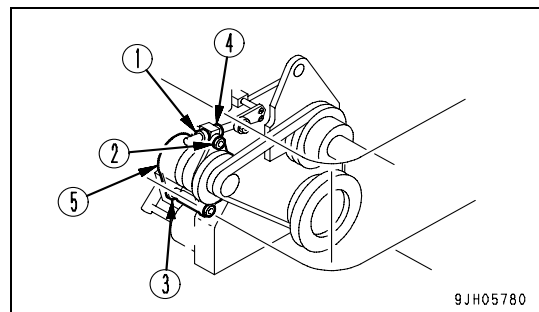

NOTICE

- Check each pulley for damage, wear of the V-groove, and wear of the V-belt. In particular, be sure to check that the V-belt is not touching the bottom of the V-groove.
- In case any of the following occurs, ask the Komatsu distributor in your territory to replace the belts with new ones.
 - ⟨ The fan belt has elongated, leaving little allowance for adjustment.
 - ⟨ A cut or crack is found on the belt.
 - ⟨ Slipping or creaking sound is heard coming from the belt.
- When the new V-belt is set, readjust it after one hour of operation.


CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST

Checking

The deflection of the belt should be 14 to 16 mm when pressed with a finger force of approx. 58.8 N (6 kgf) at mid-point (a) between the crankshaft pulley and the compressor pulley.


(A): Compressor pulley

(B): Crankshaft pulley

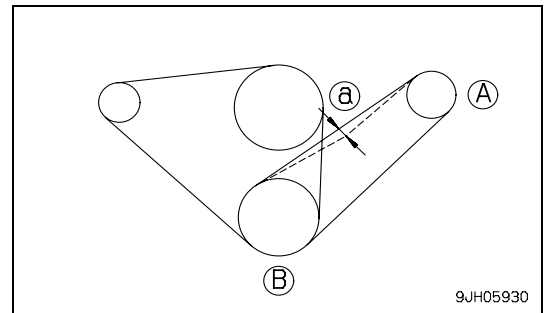


Adjustment

1. Remove guard (1).

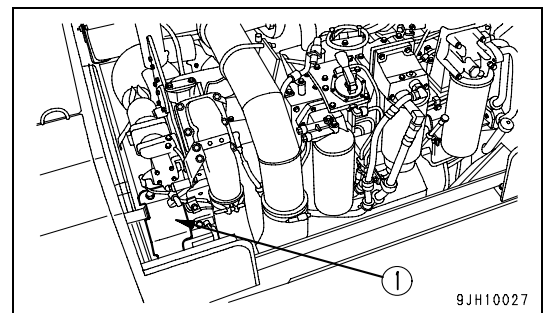

2. Loosen bolt (2) and nut (3).
3. Turn nut (4) clockwise and move compressor (5) so that the deflection of the belt is approx. 14-16 mm (at a force of approx. 6 kg).
4. When the position of the compressor is determined, tighten nut (3) and bolt (2) to lock it in position.

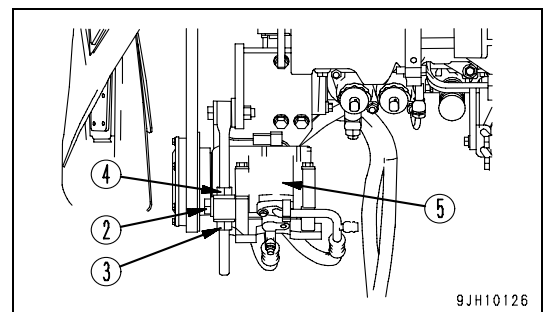

NOTICE

- Check each pulley for damage, wear of the V-groove, and wear of the V-belt. In particular, be sure to check that the V-belt is not touching the bottom of the V-groove.
- In case any of the following occurs, ask the Komatsu distributor in your territory to replace the belts with new ones.
 - 〈 The fan belt has elongated, leaving little allowance for adjustment.
 - 〈 A cut or crack is found on the belt.
 - 〈 Slipping or creaking sound is heard coming from the belt.
- When the new V-belt is set, readjust it after one hour of operation.

EVERY 500 HOURS MAINTENANCE


Maintenance for every 50 and 250 hours service should be carried out at the same time.

LUBRICATING


NOTICE

- If any abnormal noise is generated from any greasing point, carry out greasing regardless of the greasing interval.
- Carry out greasing every 10 hours for the first 50 hours on a new machine.
- After the machine was subjected to jobs in the water, be sure to grease the wet pins.
- When carrying out heavy-duty operations, such as hydraulic breaker operations, carry out the greasing every 100 hours.


1. Set the machine to the greasing posture shown on the right, lower the work equipment to the ground, then stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

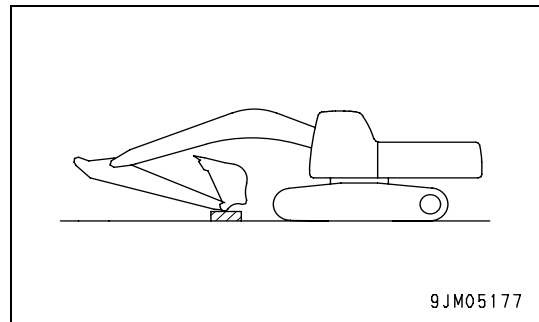


- (1) Boom cylinder rod pin (2 places)
- (2) Arm cylinder foot pin (1 places)

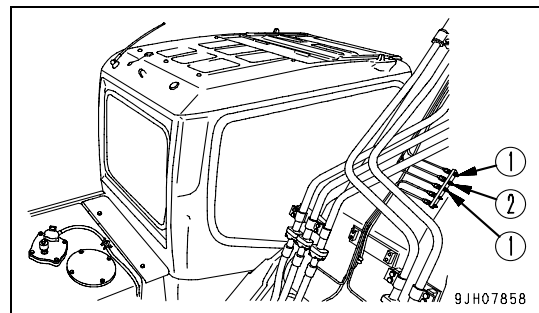


- (3) Boom-Arm coupling pin (1 place)
- (4) Arm cylinder rod end (1 place)
- (5) Bucket cylinder foot pin (1 place)

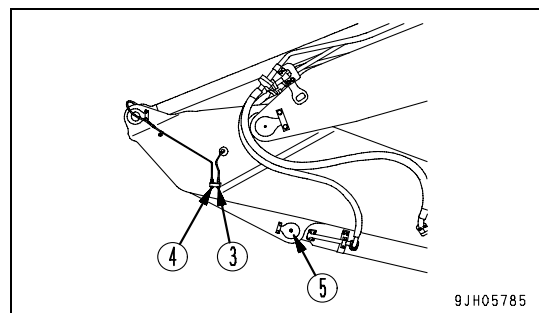

(6) Boom cylinder foot pin (2 places)

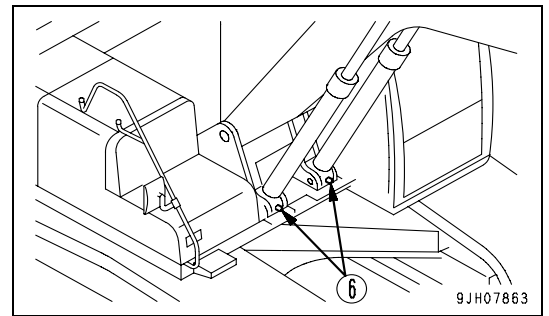

(7) Boom foot pin (2 places)

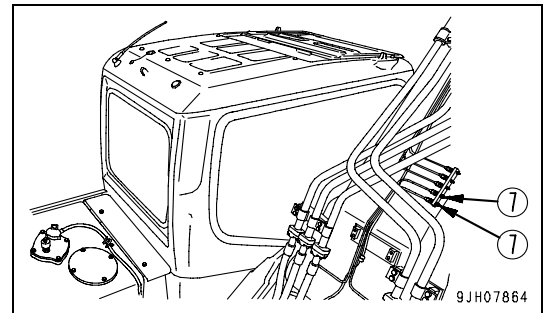

REPLACE FUEL PRE-FILTER CARTRIDGE


WARNING

- After the engine has been operated, all parts are at high temperature, so do not replace the filter immediately. Wait for all parts to cool down before starting the operation.
- High pressure is generated inside the engine fuel piping system when the engine is running. When replacing the filter, wait for at least 30 seconds after stopping the engine to let the internal pressure go down before replacing the filter.
- Do not bring any fire or flame close.

NOTICE



- Genuine Komatsu fuel filter cartridges use a special filter that has highly efficient filtering ability. When replacing the filter cartridge, always use a genuine Komatsu part.
- The common rail fuel injection system used on this machine consists of more precise parts than the conventional injection pump and nozzle. If any part other than a genuine Komatsu filter cartridge is used, dust or dirt may get in and cause problems with the injection system. Always avoid using substitute parts.
- When carrying out inspection or maintenance of the fuel system, pay more attention than normal to the entry of dirt. If dirt is stuck to any part, use fuel to wash it off completely.
- Prepare a container to catch drain fuel.
- Prepare a filter wrench

1. Turn the valve (1) at the bottom of the fuel tank to the CLOSE position (S).

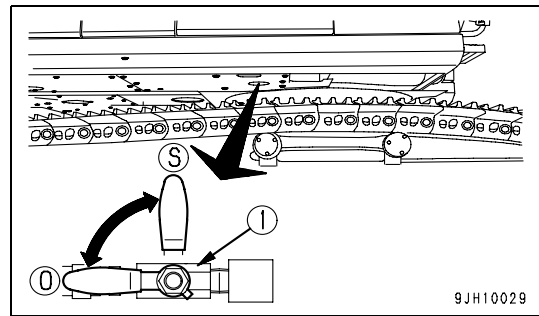

2. Open the front engine hood.
3. Set the container to catch the fuel under the filter cartridge (2).
4. Loosen drain valve (3), then drain all the water and sediment in the transparent cap (4) and also the fuel accumulated in filter cartridge (2).
5. Using a filter wrench, turn transparent cap (4) to the left to remove it. (This cap is used again.)
6. Using a filter wrench, turn filter cartridge (2) counterclockwise to remove it.
7. Remove seal (5) from transparent cap (4), then clean the cap. If transparent cap (4) is damaged, replace it with a new part.
8. Coat new seal (5) with clean fuel or oil, then install it to transparent cap (4).
9. Install transparent cap (3) to new filter cartridge (2).
 - Tightening torque for transparent cap: 10.0 Nm
10. Check that the drain valve (3) at the bottom of transparent cap (4) is tightened securely.


Tightening torque: 0.2 - 0.45 Nm (0.02 - 0.046 kgm)

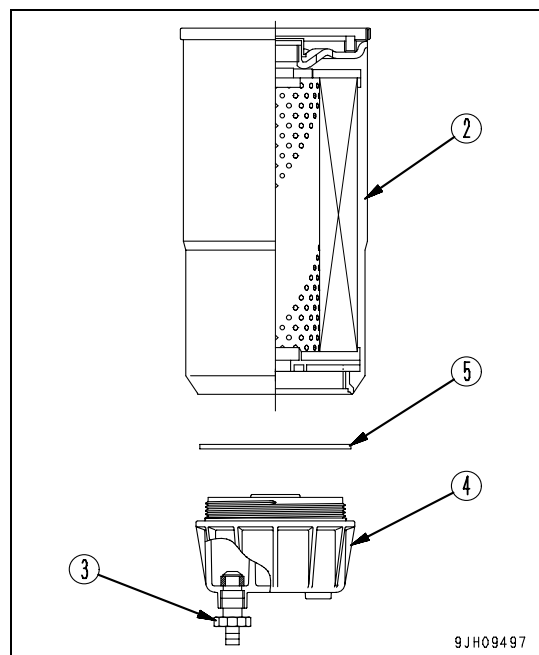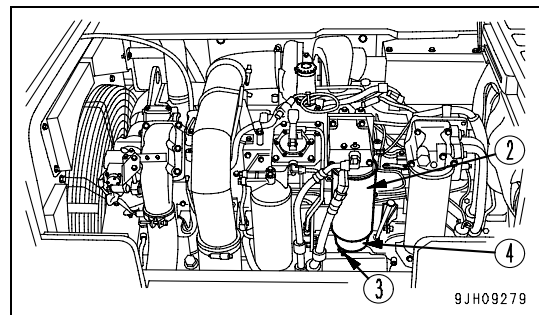

11. Clean the filter holder, fill the new filter cartridge with clean fuel, coat the packing surface thinly with oil, then install to the filter holder.

NOTICE

- When adding fuel, do not remove cap (B). Always add fuel from the 8 small holes (A) on the dirty side.
- After adding fuel, remove cap (B) and install the fuel filter.
- Always fill with clean fuel. Be careful not to let any dirt or dust get into the fuel. In particular, center portion is the clean side, so do not remove cap (B) when adding fuel. Be careful not to let dirt or dust get into center portion on the clean side.

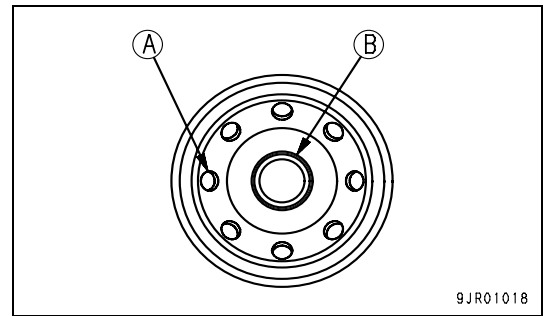


12. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it 3/4 of a turn.

If the filter cartridge is tightened too far, the packing will be damaged and this will lead to leakage of fuel. If the filter cartridge is too loose, fuel will also leak from the packing, so always tighten the correct amount.

- When tightening with a filter wrench, be extremely careful not to dent or damage the filter.


13. Turn the valve (1) at the bottom of the fuel tank to the OPEN position (O).
14. After replacing the filter cartridge, start the engine and run it at low idling for 10 minutes.

Check for leakage of fuel from the filter seal surface and transparent cap mounting. If any fuel is leaking, check the tightening of the filter cartridge. If there is still fuel leakage, repeat Steps 1 - 6 to remove the filter cartridge, and if any damage or embedded foreign material in the packing surface is found, replace it with a new cartridge and repeat Steps 7 - 14 to install it.

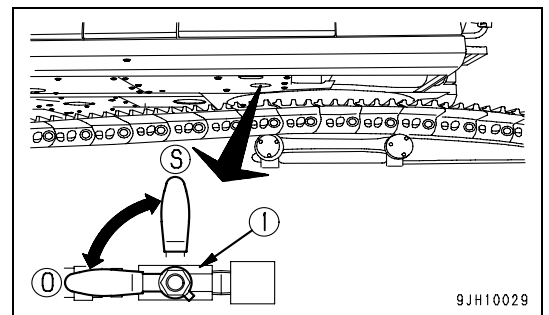

CHECK SWING PINION GREASE LEVEL, ADD GREASE


- Prepare a scale.
- 1. Swing 3 times each to the left and right, then stop the machine.
- 2. Remove bolts (1) (2 bolts) on the top of the revolving frame and remove cover (2).

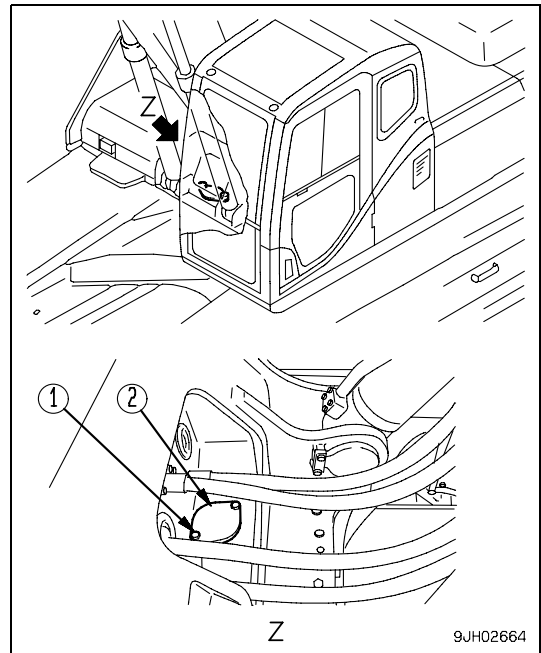

- 3. Insert scale (3) through inspection and maintenance hole (A) into the grease, and check that height (S) of the grease is at least 54 mm. If the grease level is low, add grease.
- 4. Check if the grease is milky white. If it is milky white, it is necessary to change the grease. Please contact your Komatsu distributor.

The total amount of grease is 33 liters (29.7 kg).


- 5. Install cover (2) with bolts (1).

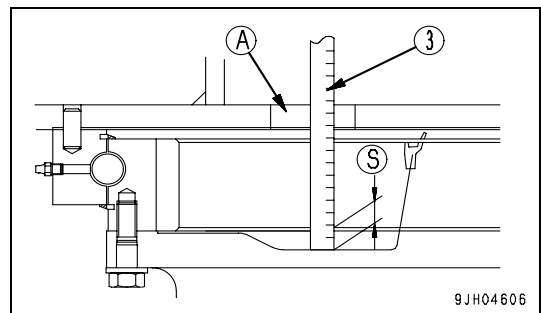


CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE

⚠ WARNING
Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

- Refill capacity: 37 liters
 - Prepare a filter wrench
1. Remove cover (1) under the machine and put a container under drain valve (P) to catch the drained oil.
 2. To prevent getting oil on yourself, lower the lever of drain valve (P) slowly, drain the oil, then raise the lever to close the valve.

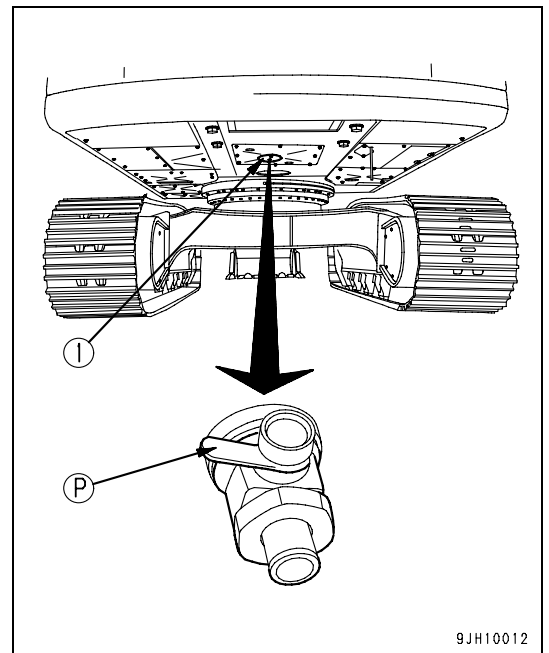

3. Open the front engine hood.
4. Using a filter wrench, turn filter cartridge (2) counterclockwise to remove it.

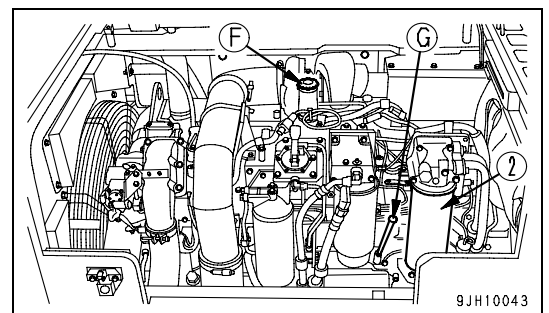


5. Clean the filter holder, fill the new filter cartridge with clean oil, coat the thread and packing surface of the new filter cartridge with clean oil (or coat it thinly with grease), then install it to the filter holder.

REMARK

Check that there is no old packing stuck to the filter holder. If there is any old packing stuck to the filter, it will cause leakage of oil.

6. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it a further 3/4 to 1 turn.

7. After replacing the filter cartridge, add oil through oil filler port (F) so that the oil level is between the H and L marks on dipstick (G).
8. Run the engine at idle for a short time, then stop the engine, and check that the oil level is between the H and L marks on the dipstick. For details, see "Check Oil Level in Engine Oil Pan, Add Oil (3-114)".
9. Install cover (1).

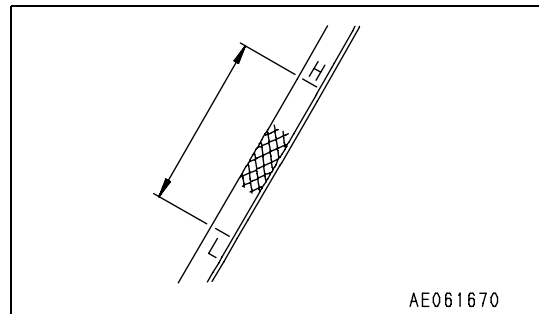


CLEAN AND INSPECT RADIATOR FINS, OIL COOLER FINS, AFTERCOOLER FINS AND CONDENSER FINS


⚠ WARNING
 If compressed air, high-pressure water, or steam hits your body directly or dirt is sent flying by the compressed air, high-pressure water, or steam, there is danger of personal injury. Always wear protective glasses, dust mask, and other protective equipment.

NOTICE
 When using compressed air for cleaning, blow it keeping some distance to avoid damaging the fins. Damage on the fins can cause water leakage and overheating. In a dusty job site, check the fins every day, regardless of the maintenance interval.



1. Remove cover (1).

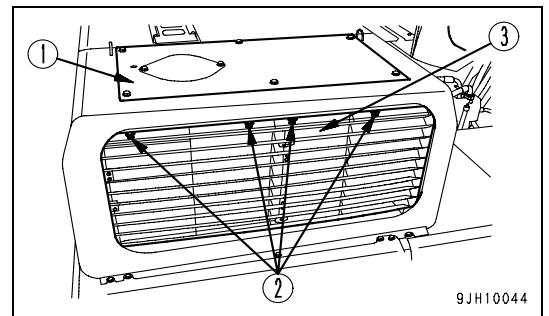

- 2. Loosen screw (2) and pull up net (3).
- 3. Clean net (3). (it is to be installed again, as instructed in the step 8.)
- 4. Remove 5 bolts (4), then move bracket (5) to the side and make a gap between radiator fins (6) and oil cooler fins (7).
- 5. Inspect the front and rear of radiator fins (6), oil cooler fins (7), after-cooler fins (8) and condenser fins (9) for dirt, dust, dry leaves, etc. Blow them away with compressed air, if any. Steam or water may be used instead of compressed air.
- 6. Check the rubber hose. Replace with a new one if the hose is found to have cracks or to be hardened by aging. In addition, check the hose clamps for looseness.

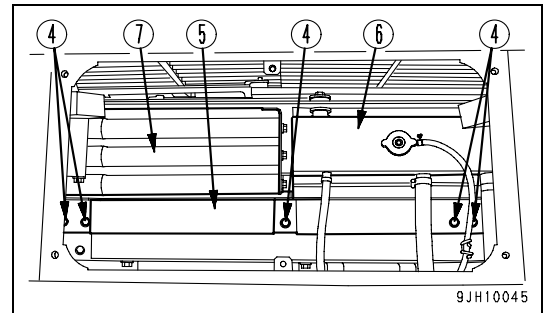

- 7. Remove undercover (10) and blow the mud, dirt, and leaves that have been cleaned off to the outside.
- 8. Push in cleaned net (3) back to the original place and secure it with screw (2).
- 9. Secure bracket (5) with bolt (4).
- 10. Remove the cover (1) and undercover (10).

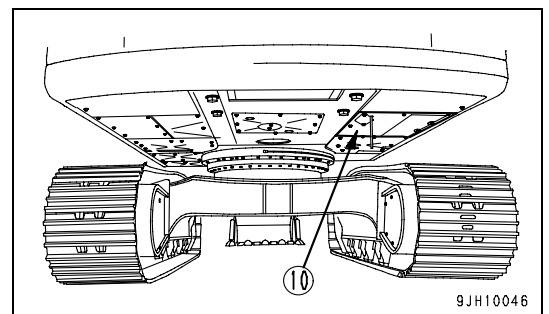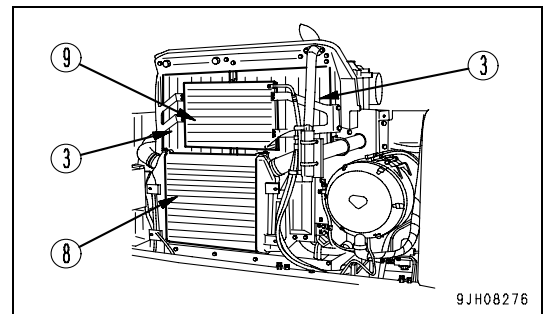

CLEAN AIR CONDITIONER FRESH/RECIRC FILTERS

WARNING

If compressed air scattered around dust and debris, there is danger of injury. Always wear protective equipment such as protective glasses and mask.

NOTICE

As a guideline, the filters should be cleaned every 500 hours, but on dusty job sites, clean the filters more frequently.

REMARK


If the filter becomes clogged, the air flow will be reduced, and there will be an abnormal noise from the air conditioner unit.

Cleaning Recirculated Air Filter

1. Remove wing bolts (1) from the inspection window at the bottom rear left on the inside of the operator's cab, then take out the recirculated air filter.
2. Clean the filter with compressed air. If there is oil on the filter, or if the filter is extremely dirty, wash it in a neutral agent. After rinsing it in water, dry it thoroughly before using it again.


Replace the filter with a new part every year. If the clogging of the filter cannot be removed by blowing with air or washing in water, replace the filter immediately.

- The RECIRC filter must be installed facing in the correct direction. Install it so that the projecting part faces the front of the machine.

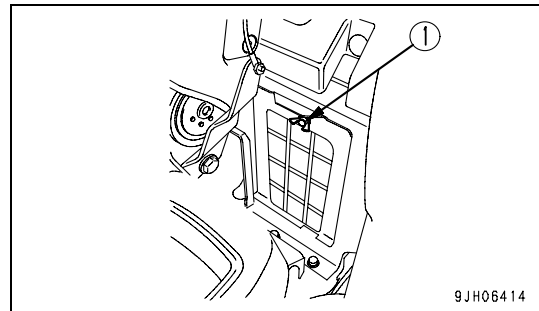


Cleaning Fresh Air Filter

1. Use the starting switch key to open cover (2) at the rear left of the operator's cab, then open cover (2) by hand and remove filter (3) inside the cover.
2. Clean the filter with compressed air. If there is oil on the filter, or if the filter is extremely dirty, wash it in a neutral agent. After rinsing it in water, dry it thoroughly before using it again.
 Replace the filter with a new part every year. If the clogging of the filter cannot be removed by blowing with air or washing in water, replace the filter immediately.
3. After cleaning, return filter (3) to its original position and close the cover. Use the starting switch key to lock the cover. Do not forget to remove the starting switch key.

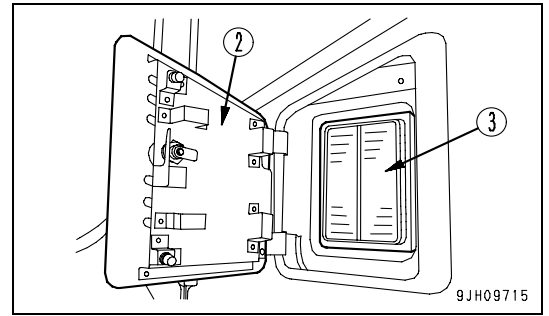

REMARK


The FRESH filter must be installed facing in the correct direction. When installing, insert the long (L) end of filter (3) into the filter case first. If the short (S) end is installed first, cover (2) will not close.

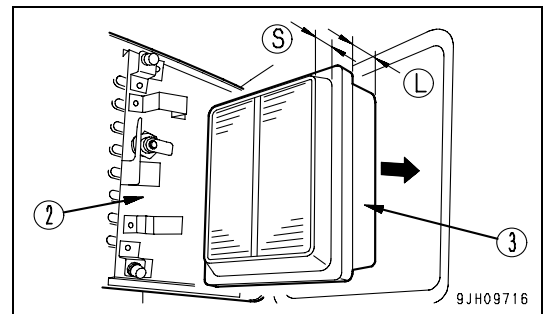


REPLACE BREATHER ELEMENT IN HYDRAULIC TANK**⚠ WARNING**

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Remove the cap of oil filler (F) at the top of the hydraulic tank.

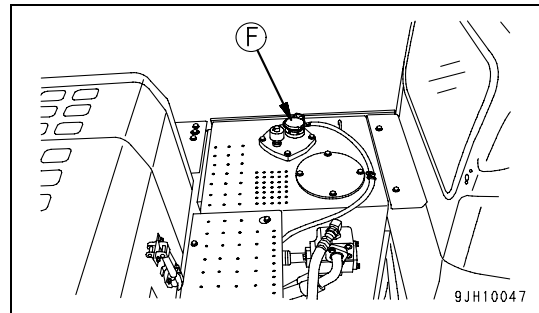




2. Replace element (1) inside the cap.

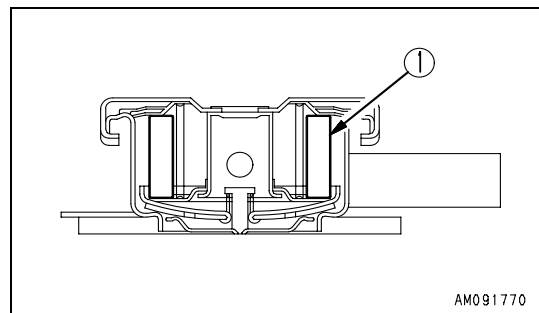

CHECK OIL LEVEL IN SWING MACHINERY CASE, ADD OIL

⚠ WARNING
Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

1. Remove dipstick (G) and wipe the oil from the dipstick with a cloth.
2. Fully insert dipstick (G) into the filler pipe.
3. Pull out dipstick (G) and check that the oil level is between the (H) and (L) marks on the dipstick.
4. If the oil does not reach the L mark on dipstick (G), add engine oil through dipstick insertion hole.
 When refilling, remove bleeding plug (1).
5. If the oil level is above the (H) mark on dipstick (G), loosen drain valve (P) and drain the excess oil.
 - When draining the oil, first pull hose (2) out from inspection hole (B), then turn the drain valve to the OPEN position.
6. After checking oil level or adding oil, insert the dipstick into the hole and install air bleeding plug (1).

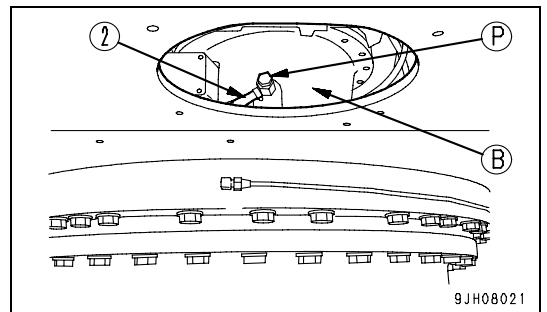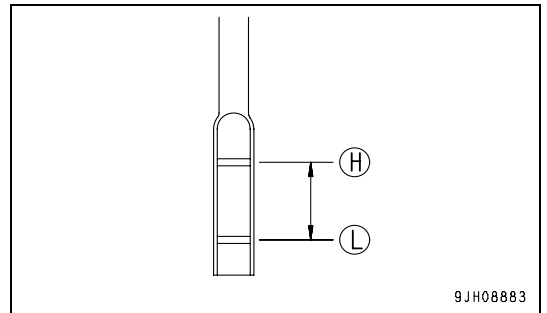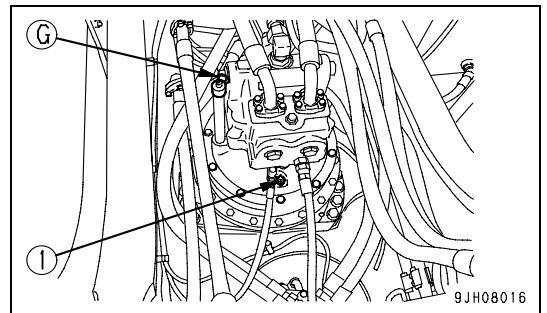

CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL


⚠ WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause serious burns. Wait for the temperature to go down before starting the operation.
- If there is still pressure remaining inside the case, the oil or plug may fly out. Loosen the plug slowly to release the pressure.

- Prepare a handle.
1. Set the TOP mark at the top, with the UP mark and plug (P) perpendicular to the ground surface.
 2. Remove plug (F) using the handle. When the oil level reaches a point 10 mm below the bottom of the plug hole, the correct amount of oil has been added.
 3. If the oil level is too low, install plug (F), operate the travel levers, and drive forward or in reverse to rotate the sprocket one turn. Then repeat Step 2 to check again.
 4. If the oil level is low, add oil through the hole of plug (F). Add oil until oil overflows from the hole of plug (F).
 5. After checking, install plug (F).
Tightening torque for plugs (F): $68.6 \pm 9.8 \text{ Nm}$ ($7 \pm 1 \text{ kgm}$)

REMARK

There are two plugs (F). Add oil through the one easier to fill oil and through which no internal gears are to be seen.

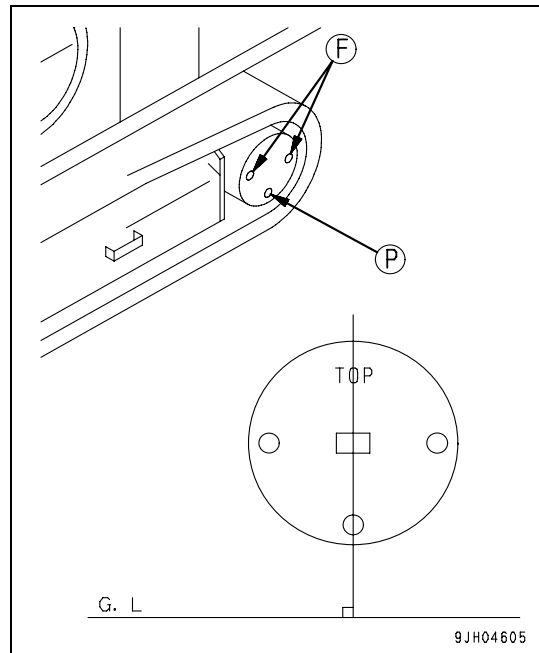

EVERY 1000 HOURS MAINTENANCE

Maintenance for every 50, 250 and 500 hours should be carried out at the same time.


REPLACE FUEL MAIN FILTER CARTRIDGE

WARNING

- After the engine has been operated, all parts are at high temperature, so do not replace the filter immediately. Wait for all parts to cool down before starting the operation.
- High pressure is generated inside the engine fuel piping system when the engine is running. When replacing the filter, wait for at least 30 seconds after stopping the engine to let the internal pressure go down before replacing the filter.
- Do not bring any fire or flame close.
- Be careful when opening the air bleed plug in the fuel filter head. It is still under pressure, so fuel may spurt out.


NOTICE

- Genuine Komatsu fuel filter cartridges use a special filter that has highly efficient filtering ability. When replacing the filter cartridge, always use a genuine Komatsu part.
 - The common rail fuel injection system used on this machine consists of more precise parts than the conventional injection pump and nozzle. If any part other than a genuine Komatsu filter cartridge is used, dust or dirt may get in and cause problems with the injection system. Always avoid using substitute parts.
 - When carrying out inspection or maintenance of the fuel system, pay more attention than normal to the entry of dirt. If dirt is stuck to any part, use fuel to wash it off completely.
- Prepare a container to catch drain fuel.
 - Prepare a filter wrench
1. Turn the valve (1) at the bottom of the fuel tank to the CLOSE position (S).

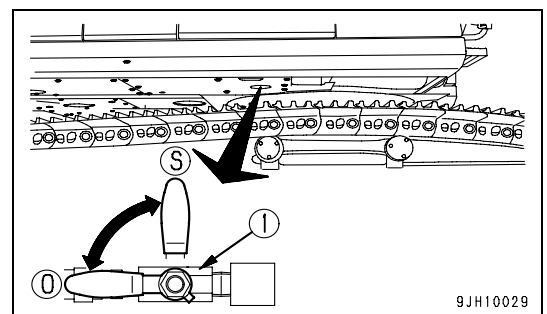

9JH10029


2. Open the front engine hood.
3. Set the container to catch the fuel under the filter cartridge (2).
4. Using a filter wrench, turn filter cartridge (2) counterclockwise to remove it.

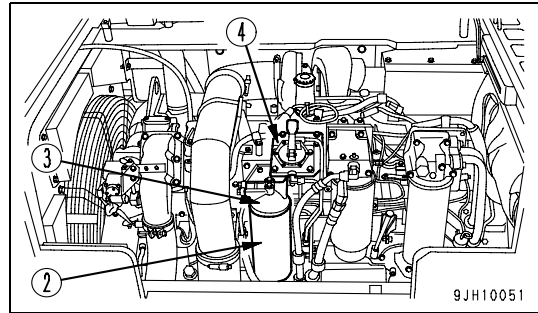

5. Clean the filter holder, coat the packing surface of the new filter cartridge thinly with oil, then install the filter cartridge to the filter holder.

NOTICE


- Do not fill the new filter cartridge with fuel.
- Remove cap (B) and install the filter cartridge.

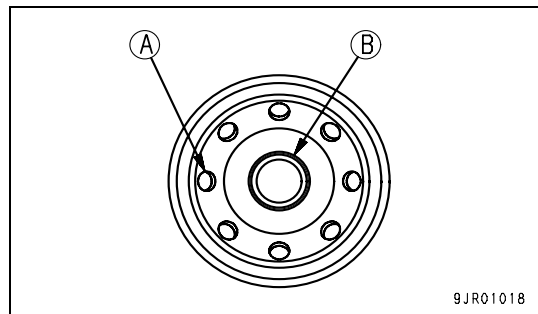

6. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it 3/4 of a turn.

If the filter cartridge is tightened too far, the packing will be damaged and this will lead to leakage of fuel. If the filter cartridge is too loose, fuel will also leak from the packing, so always tighten the correct amount.

7. Turn the valve (1) at the bottom of the fuel tank to the OPEN position (O).



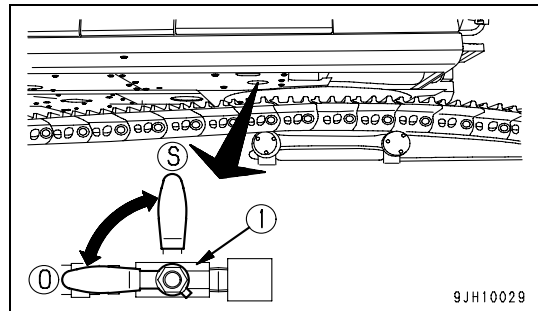


8. After completing the replacement of filter cartridge (2), bleed the air.

Bleed the air as follows:

9. Add fuel to the fuel tank until full (to FULL mark on the fuel gauge).

10. Loosen air bleed plug (C) at the fuel main filter head (3).
11. Loosen wing nut (6) holding lever (5) of priming pump (4).
12. Push in lever (5) repeatedly.
Check that bubbles come out with the fuel from air bleed plug (C).
13. Tighten air bleed plug (C).
Tightening torque: 4.9 to 6.9 Nm (0.5 to 0.7 kgm)
14. Tighten wing nut (6) securely to lock lever (5) in position.
Target tightening torque: 11.8 Nm (1.2 kgm)

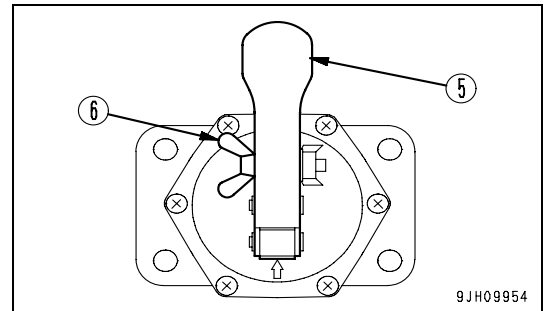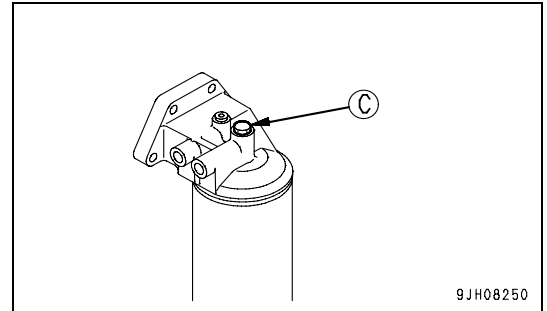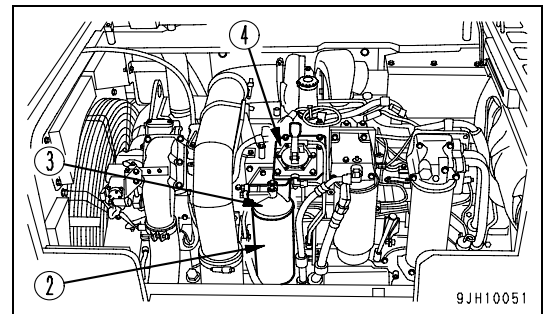

15. After replacing the filter cartridge, start the engine and run it at low idling for 10 minutes.
Check for leakage of fuel from the filter seal surface. If any fuel is leaking, check the tightening of the filter cartridge. If there is still fuel leakage, repeat Steps 1 - 4 to remove the filter cartridge, and if any damage or embedded foreign material in the packing surface is found, replace it with a new cartridge and repeat Steps 5 - 15 to install it.

REPLACE HYDRAULIC OIL FILTER ELEMENT


⚠ WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.


NOTICE

If the machine is equipped with a hydraulic breaker, the hydraulic oil will deteriorate much faster than during normal bucket operations. For details, see “MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER (4-19)” when carrying out maintenance.

1. Set the work equipment on the hard and flat ground in the maintenance posture as shown in the figure, then lower it to the ground and stop the engine.

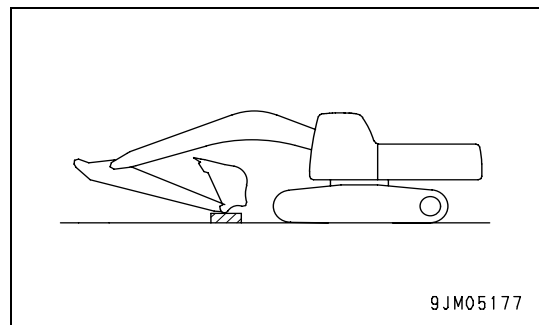


2. Remove the cap from oil filler (F), and release the internal pressure.
3. Loosen 4 bolts, then remove cover (1).
When doing this, the cover may fly out under the force of spring (2), hold the cover down when removing the bolts.
4. After removing spring (2), valve (3) and strainer (4), take out element (5).
 - Inspect the bottom of the filter case for dirt, and remove it, if any. Take good care then not to let fall the dirt into the hydraulic tank.

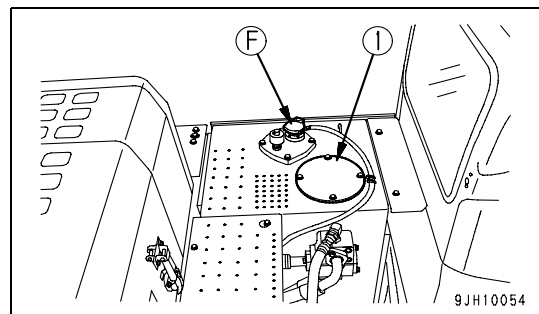

REMARK

If the mounting bolts of cover (1) loosened in Step 3 are left for approx. 5 minutes, the internal pressure inside the case will be released, so if the element is removed when the oil in the element has drained out, the amount of dripping oil will be reduced.

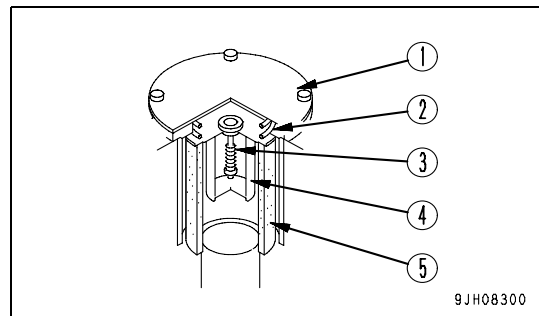

5. Clean the removed parts in flushing oil.
6. Install the new element in the place where old element (5) was installed.
7. Set valve (3), strainer (4) and spring (2) on top of the element.
8. Set cover (1) in position, push it down by hand, and install the cover with the mounting bolts.
9. Screw in the oil filler cap and install the cover.
10. To bleed the air, start the engine according to “STARTING ENGINE (3-128)” and run the engine at low idle for 10 minutes.
11. Stop the engine.

REMARK

Operate the machine after halting for more than 5 minutes to eliminate bubbles in the oil inside the tank.


12. Check for oil leakage and wipe off any spilled oil.

CHANGE OIL IN SWING MACHINERY CASE


⚠ WARNING

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.


- Refill capacity: 20 liters
- 1. Remove cover (A) of the inspection hole.
(Only demolition specification machine)

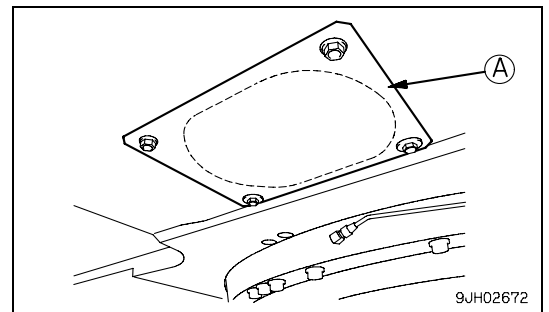

- 2. Set a container under drain valve (P) under the machine body to catch the oil.
- 3. Loosen drain valve (P) under the body, drain the oil, then tighten the drain valve again.
 - When draining the oil, first pull hose (2) out from inspection hole (B), then turn the drain valve to the OPEN position.

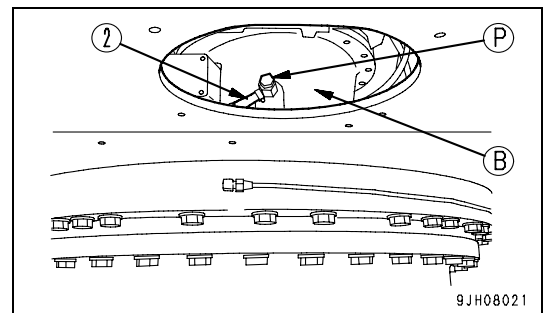

- 4. Remove dipstick (G) and air bleeding plug (1).
- 5. Add the replacement amount of oil through the insertion guide for dipstick (G).
- 6. Check the oil level. For details, see "CHECK OIL LEVEL IN SWING MACHINERY CASE, ADD OIL (4-65)".
- 7. Install air bleed plug (1).

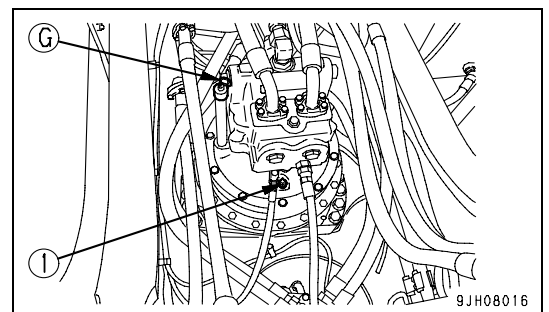

CHECK OIL LEVEL IN DAMPER CASE, ADD OIL

⚠ WARNING

Parts and oil are at high temperature immediately after the engine is stopped and may cause serious burns. Wait for the oil temperature to go down before performing this operation.

NOTICE



Park the machine on flat ground and stop the engine. After waiting for more than 30 minutes after stopping the engine, check the oil level.

1. Open the door on the left side of the machine.
2. Remove plug (P) and check that the oil is up to near the bottom of the plug hole. If the oil level is low, remove cap (F) and add oil through the oil filler port to the bottom of the hole of plug (P).

NOTICE

If excess oil is supplied, drain it to the specified amount to avoid overheating.

3. Install plug (P) and cap (F).
4. Close the door.

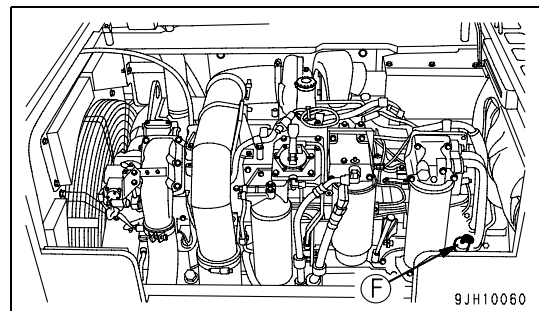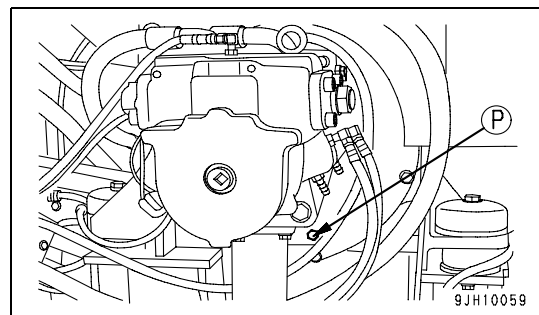

CHECK ALL TIGHTENING POINTS OF ENGINE EXHAUST PIPE CLAMPS



Please ask your Komatsu distributor to check the tightening of the clamps between the air cleaner - turbo-charger - after cooler - engine.

REPLACE HYDRAULIC TANK ADDITIONAL BREATHER ELEMENT

⚠ WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Remove nut (2) of breather assembly (1) at the top of the hydraulic tank, then remove cover (3).
2. Replace filter element (4) with a new element.
3. Install cover (3) and nut (2).

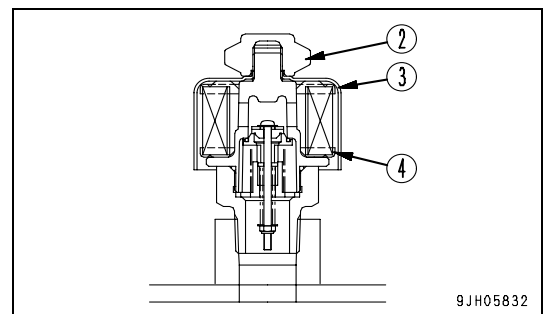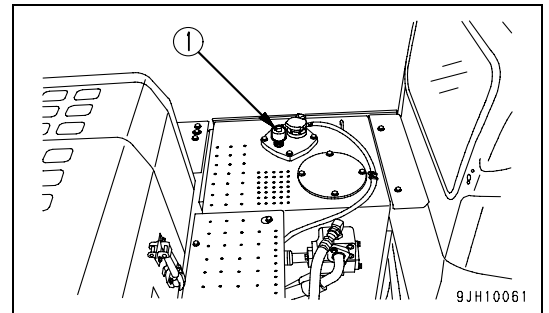

CHECK NITROGEN GAS CHARGE PRESSURE IN ACCUMULATOR (for breaker)

(If equipped)

A special tool is needed for inspecting and charging with nitrogen gas.

Have your Komatsu distributor inspect and charge the accumulator.

REPLACE CORROSION RESISTOR CARTRIDGE

(Machines equipped with corrosion resistor)

WARNING


The oil is at high temperature after the engine has been operated, so never replace the cartridge immediately after finishing operations.
Wait for the oil to cool down before replacing cartridge.

1. Open the front engine hood.
2. Screw in 2 valves (1) at the top of the corrosion resistor.
3. Using a filter wrench, turn cartridge (2) to the left to remove it.
4. Install a new filter cartridge after coating oil on its sealing face.

In the installation, turn the cartridge by two-thirds of one turn after the packing surface comes to contact with the sealing face of the cartridge stand.

A genuine Komatsu filter cartridge is recommended for use.

5. Open valves (1) (2 places).
6. Run the engine and check that there is no leakage of water from the seal surface.

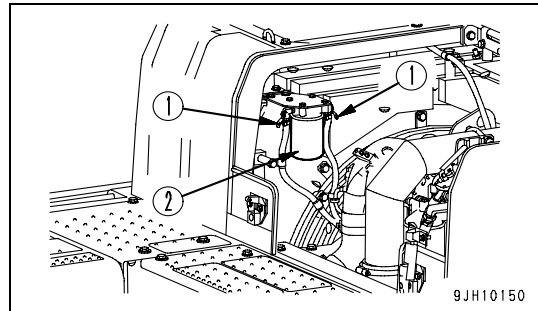

EVERY 2000 HOURS MAINTENANCE

Maintenance for every 50, 250, 500 and 1000 hours service should be carried out at the same time.

CHANGE OIL IN FINAL DRIVE CASE

WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause serious burns. Wait for the temperature to go down before starting the operation.
- If there is still pressure remaining inside the case, the oil or plug may fly out. Loosen the plug slowly to release the pressure.

- Refill capacity: each 10.5 liters
 - Prepare a handle.
1. Set the TOP mark at the top, with the TOP mark and plug (P) perpendicular to the ground surface.
 2. Set a container under plug (P) to catch the oil.
 3. Remove plugs (P) and (F) with the handle and drain the oil.

REMARK


Check the O-rings in the plugs for damage. If necessary, replace with new ones.

4. Tighten plug (P).
5. Add oil through the hole of plug (F).
6. When oil begins to overflow from the plug (F) hole, install plug (F).

Tightening torque of plugs (P) and (F):
 $68.6 \pm 9.8 \text{ Nm}$ ($7 \pm 1 \text{ kgm}$)

REMARK

There are two plugs (F). Add oil through the one easier to fill oil and through which no internal gears are to be seen.


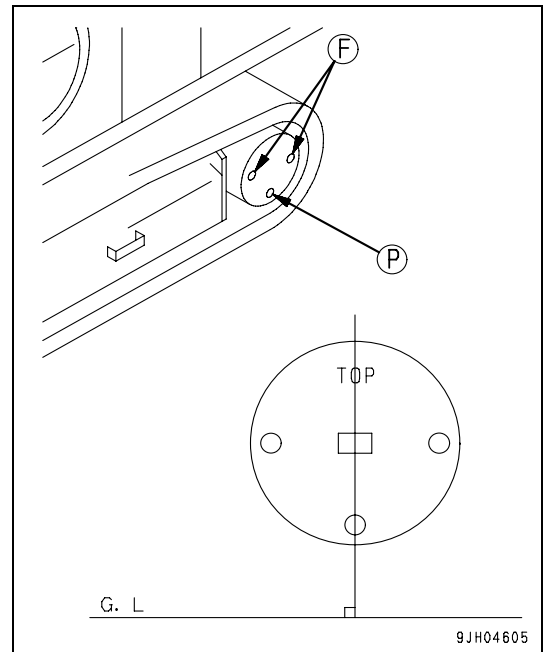


CLEAN HYDRAULIC TANK STRAINER

⚠ WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

1. Remove the cap from oil filler (F), and release the internal pressure.
2. Remove 4 bolts, then remove cover (1). When doing this, cover (1) may fly out under the force of spring (2), so keep the cover pressed down while removing the bolts.
3. Hold the top of rod (3) and pull up to remove spring (2) and strainer (4).
4. Remove all the dirt stuck to strainer (4), then wash it in flushing oil. If strainer (4) is damaged, replace it with a new part.
5. When installing, insert strainer (4) into protruding part (5) of the tank, and assemble.
6. Assemble so that the protruding part at the bottom of cover (1) holds spring (2), then tighten with the bolt.

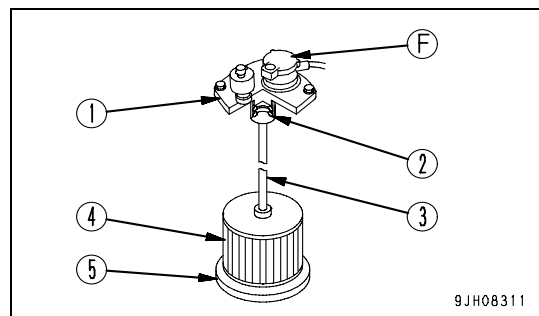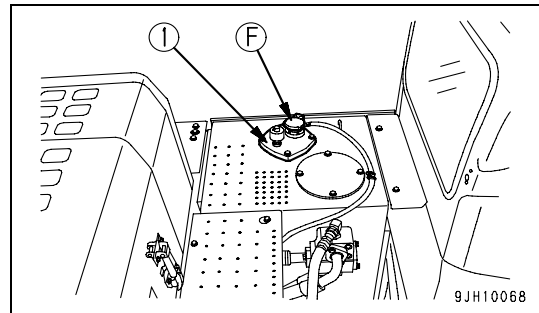

CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT)

⚠ WARNING

The accumulator is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion, which will lead to serious injury or damage. When handling the accumulator, always do as follows. The pressure in the hydraulic circuit cannot be completely removed. When removing the hydraulic equipment, do not stand in the direction that the oil spurts out when carrying out the operation. In addition, loosen the bolts slowly when carrying out the operation. Do not disassemble the accumulator. Do not bring it near flame or dispose of it in fire. Do not make holes in it or weld it. Do not hit it, roll it, or subject it to any impact. When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

NOTICE


If the nitrogen gas charge pressure in the accumulator is low and operations are continued, it will become impossible to release the remaining pressure inside the hydraulic circuit if a failure occurs on the machine.

FUNCTION OF ACCUMULATOR

The accumulator stores the pressure in the control circuit. Even after the engine is stopped, the control circuit can be operated, so the following actions are possible.

- If the control lever is operated in the direction to lower the work equipment, it is possible for the work equipment to go down under its own weight.
- The pressure in the hydraulic circuit can be released.

The accumulator is installed to the position shown in the diagram on the right.

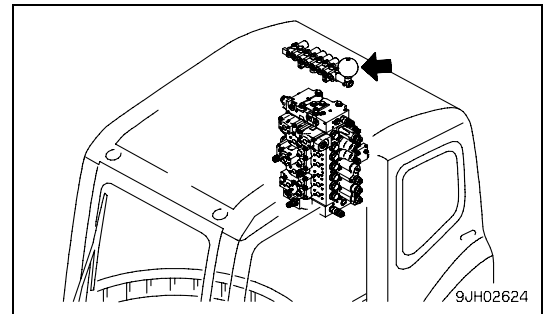


CHECKING FUNCTION OF ACCUMULATOR

⚠ CAUTION

When carrying out the inspection, check first that there is no person or obstacle in the surrounding area.

Check the nitrogen gas charge pressure as follows.


1. Stop the machine on firm, level ground.
2. Hold the work equipment in the maximum reach posture (arm fully out, bucket fully dumped) at a height (A) 1.5 m from the ground.

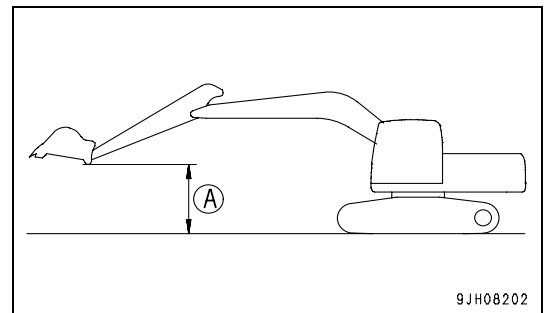


Carry out Steps 3 - 5 within 15 seconds.

When the engine is stopped, the pressure in the accumulator gradually goes down. For this reason, the check can only be carried out immediately after the engine is stopped.


3. Keep the work equipment at the maximum reach, turn the starting switch to the OFF position (A), and stop the engine.

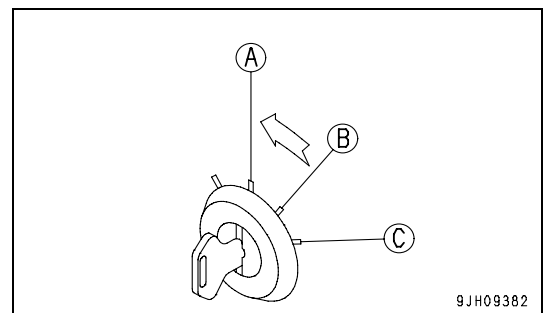

- Turn the starting switch to the ON position (B).

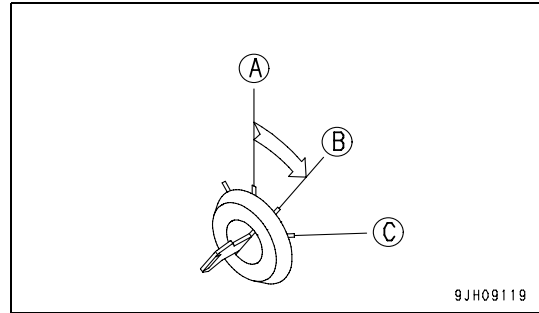


- With the lock lever at the FREE position (F), operate the work equipment control levers fully in the LOWER direction and check that the work equipment is lowered to the ground.

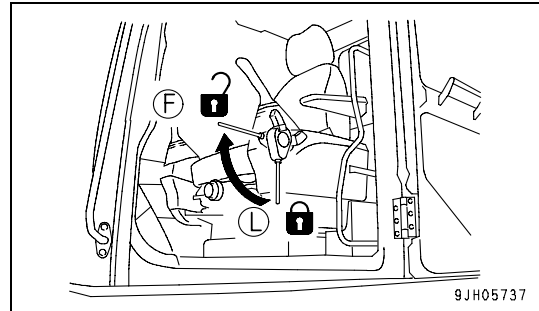

- If the work equipment goes down under its weight and contacts the ground, the accumulator is normal.

If the work equipment does not go down or stops in mid-way, the charged pressure of the gas in the accumulator for the hydraulic circuit has probably dropped.


Please contact your Komatsu distributor for inspection.

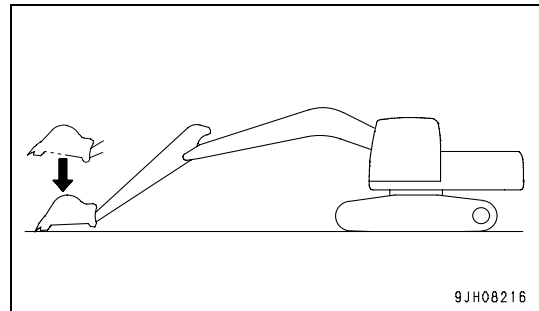

- This completes the inspection. After completion of the inspection, set the lock lever to the LOCK position and turn the starting switch to the OFF position.

METHOD OF RELEASING PRESSURE IN HYDRAULIC CIRCUIT


- Place the work equipment on the ground. Close the crusher attachment jaws, etc.
- Operate the work equipment lock lever to the LOCK position.
- Insert the lock pin for the attachment control pedal in position (c) where it is possible to operate the pedal.
(If equipped)

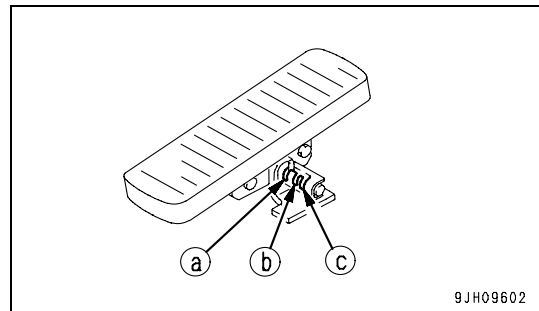


Carry out Steps 4 - 6 within 15 seconds.

When the engine is stopped, the pressure in the accumulator gradually goes down. For this reason, the release can only be carried out immediately after the engine is stopped.


4. Stop the engine.
5. Turn the starting switch to the ON position (B).

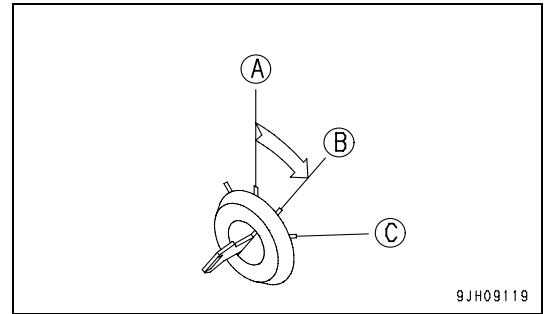

6. Set lock lever to FREE position (F), then operate the work equipment control levers and the attachment control pedal (if equipped) fully to the front, rear, left, and right to release the pressure in the control circuit.

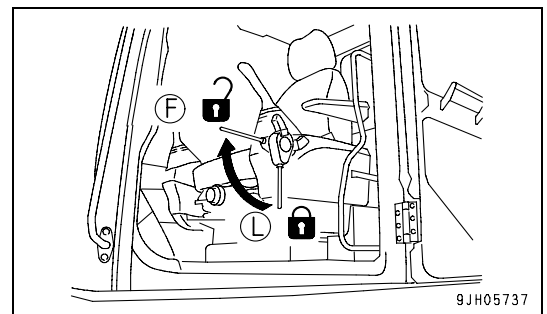

7. Set the lock lever to the LOCK position, then turn the starting switch to the OFF position.
8. Insert the lock pin in position (a) so that the attachment control pedal cannot be operated.
(If equipped)

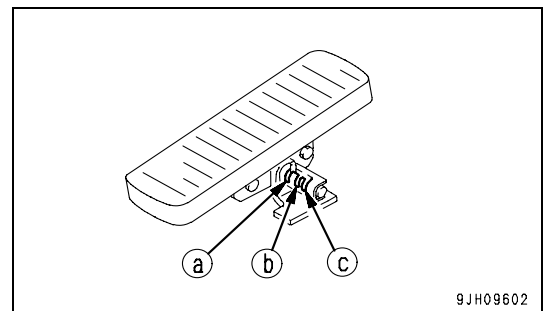

CHECK ALTERNATOR

Contact your Komatsu distributor to have the alternator checked.

If the engine is started frequently, have this inspection carried out every 1000 hours.

CHECK ENGINE VALVE CLEARANCE, ADJUST

Special tools are needed for inspection and maintenance, so contact your Komatsu distributor.

CHECK VIBRATION DAMPER

Check that there are no cracks or peeling in the outside surface of the rubber.

If any cracks or peeling are found, contact your Komatsu distributor to have the parts replaced.

EVERY 4000 HOURS MAINTENANCE

Maintenance for every 50, 250, 500, 1000 and 2000 hours service should be carried out at the same time.

CHECK WATER PUMP

Since the pulley may have play, oil may leak, water may leak, contact your Komatsu distributor for inspection, overhaul or replacement.

CHECK STARTING MOTOR

Contact your Komatsu distributor to have the starting motor checked.

If the engine is started frequently, have this inspection carried out every 1000 hours.

REPLACE ACCUMULATOR (FOR CONTROL CIRCUIT)

Replace the accumulator every 2 years or every 4000 hours, whichever comes sooner.

WARNING

The accumulator is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion, which will lead to serious injury or damage. When handling the accumulator, always do as follows. The pressure in the hydraulic circuit cannot be completely removed. When removing the hydraulic equipment, do not stand in the direction that the oil spurts out when carrying out the operation. In addition, loosen the bolts slowly when carrying out the operation.

Do not disassemble the accumulator.

Do not bring it near flame or dispose of it in fire.


Do not make holes in it or weld it.

Do not hit it, roll it, or subject it to any impact.


When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

If operations are continued after the performance of the accumulator has dropped, it will be impossible to release the remaining pressure in the hydraulic circuit if there should be a failure on the machine. Please ask your Komatsu distributor to replace the accumulator.

The accumulator is installed to the position shown in the diagram on the right.

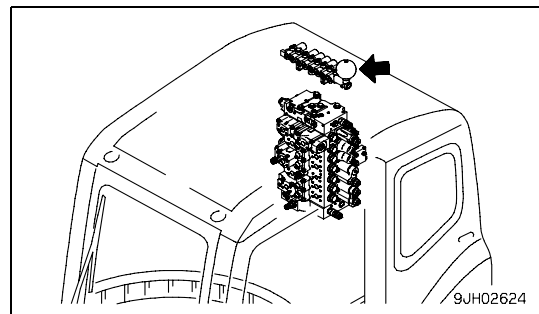


CHECK FOR LOOSENESS OF HIGH-PRESSURE PIPING CLAMP, HARDENING OF RUBBER

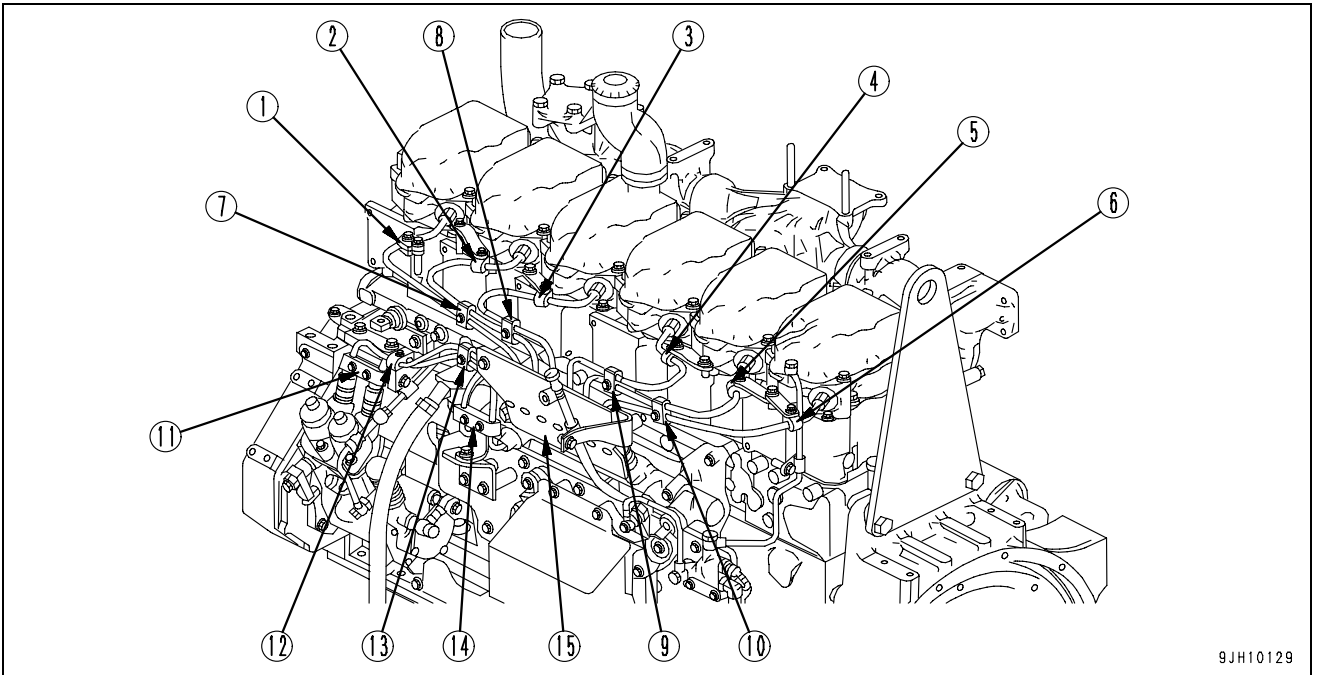

9JH10129

Check visually and touch with your fingers to check that there are no loose bolts or hardening of rubber parts at clamps (1) to (15). If there is any looseness or hardened rubber, contact your Komatsu distributor for replacement.

CHECK FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER

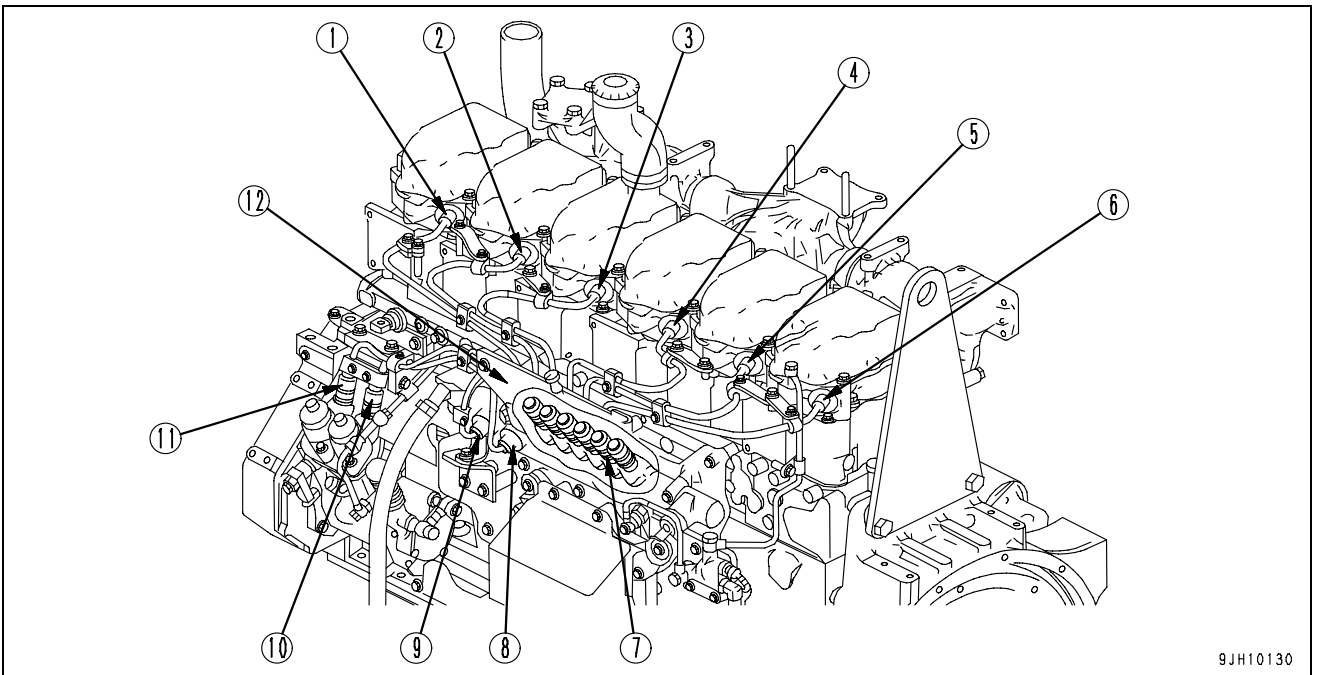

9JH10130

Check for any missing fuel spray prevention caps (1) to (11) or fuel spray prevention cover (12), and check also for any hardened rubber portions. If there are any missing caps or cover or the rubber is hardened, please contact your Komatsu distributor for repairs.

EVERY 5000 HOURS MAINTENANCE

Maintenance for every 50, 250, 500 and 1000 hours service should be carried out at the same time.

CHANGE OIL IN HYDRAULIC TANK




WARNING

- The parts and oil are at high temperature immediately after the engine is stopped, and may cause burns. Wait for the temperature to go down before starting the work.
- When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it.

NOTICE

If the machine is equipped with a hydraulic breaker, the hydraulic oil will deteriorate much faster than during normal bucket operations. For details, see “MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER (4-19)” when carrying out maintenance.

- Refill capacity: 248 liters
 - Prepare a handle (for the socket wrench).
1. Swing the upper structure so that hydraulic tank drain plug (P) and drain plug (A) at the bottom of the pump suction tube are in the middle between the left and right tracks.
 2. Retract the arm and bucket cylinders, then lower the boom and put the teeth in contact with the ground.
 3. Set the lock lever to the LOCK position and stop the engine.
4. Remove the cap of oil filler port (F) at the top of the hydraulic tank.
5. Remove the undercover(1) and (2).
 6. Set the oil container under the drain plug under the machine. Using the handle, remove drain plug (P), (A) and drain the oil. Check the O-ring installed to plug (P), (A), and if it is damaged, replace the O-ring. After draining the oil, tighten drain plug (P), (A).
 - Tightening torque of drain plug (P) and (A) 58.8 to 78.5 Nm (6 to 8 kgm)
 - When removing drain plug (P), (A), be careful not to get oil on yourself.

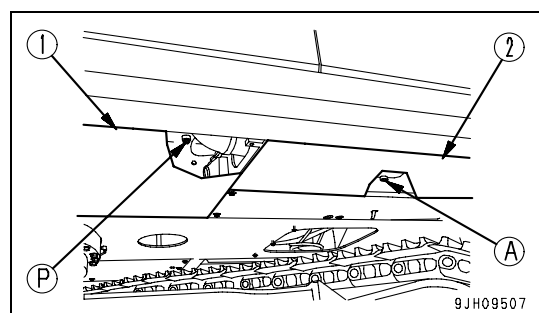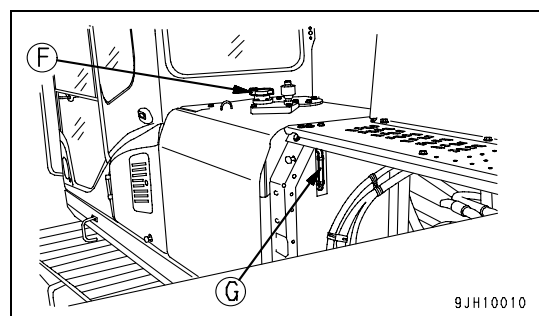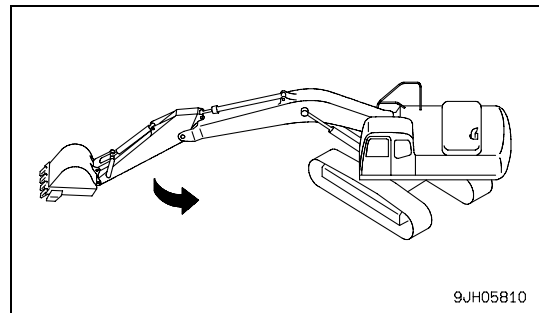

- First, remove drain plug (P) at the bottom of the tank, then remove drain plug (A) at the suction tube. If they are removed in this order, almost the same amount of oil can be drained.
7. Add the replacement amount of oil through oil filler (F). Check that the oil level is between the H and L lines on the sight gauge (G).
For details of oil level check, see "Check Oil Level in Hydraulic Tank, Add Oil (3-113)".
 8. Install the undercover (1) and (2).
 9. Bleed the air from the hydraulic circuit.
For details of the method of bleeding the air from the hydraulic circuit, see "BLEEDING AIR FROM HYDRAULIC SYSTEM (4-45)".

EVERY 8000 HOURS MAINTENANCE

Maintenance for every 50, 250, 500, 1000, 2000 and 4000 hours service should be carried out at the same time.

REPLACE HIGH-PRESSURE PIPING CLAMP

Contact your Komatsu distributor to have the engine high-pressure clamps replaced.


REPLACE FUEL SPRAY PREVENTION CAP

Contact your Komatsu distributor to have the fuel spray prevention cap replaced.

SPECIFICATIONS

SPECIFICATIONS

Item	Unit	PC450-8	PC450LC-8	PC450LCHD-8
Operating weight	kg	44,350	45,450	46,500
Bucket capacity	m ³	1.9		
Name of engine	-	KOMATSU SAA6D125E-5 diesel engine		
Rated horsepower of engine	kW (HP)/rpm	257 (345) /1,900		
A Overall length	mm	11,940	11,940	11,940
B Overall height	mm	3,635	3,635	3,635
C Overall width	mm	3,490	3,590	3,490
D Track shoe width	mm	600	700	600
E Height of cab	mm	3,250	3,250	3,250
F Radius of upper structure	mm	3,645	3,645	3,645
G Overall length of track	mm	5,055	5,355	5,376
H Tumbler center distance	mm	4,020	4,350	4,350
Min. ground clearance	mm	685	685	685
Traveling speed (Lo/Mi/Hi)	km/h	3.0/4.4/5.5		
Swing speed	rpm	9.1		

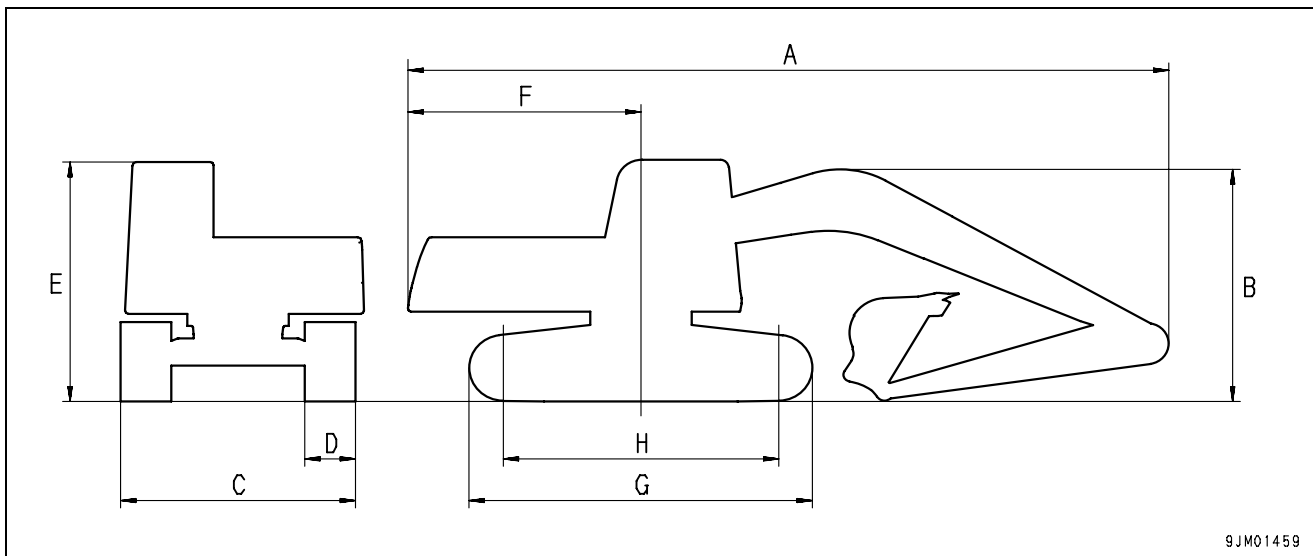


Note: The machine operating weights shown in the table above are for the following specification:

PC450-8 - 600mm shoe with 3400mm arm.

PC450LC-8 - 700mm shoe with 3400mm arm.

PC450LCHD-8 - 600mm shoe with 2400mm arm.

	Working ranges	Unit	PC450-8	PC450LC-8	PC450LCHD-8
	Arm Length	mm	3400	3400	2400
A	Max. digging reach	mm	12,025	12,025	10,713
B	Max. digging depth	mm	7,820	7,820	6,401
C	Max. digging height	mm	10,915	10,915	10,360
D	Max. vertical wall digging depth	mm	6,870	6,870	4,876
E	Max. dumping height	mm	7,565	7,565	7,067
F	Min. dump height	mm	-	-	-
G	Max. digging reached at ground level	mm	11,820	11,820	10,481

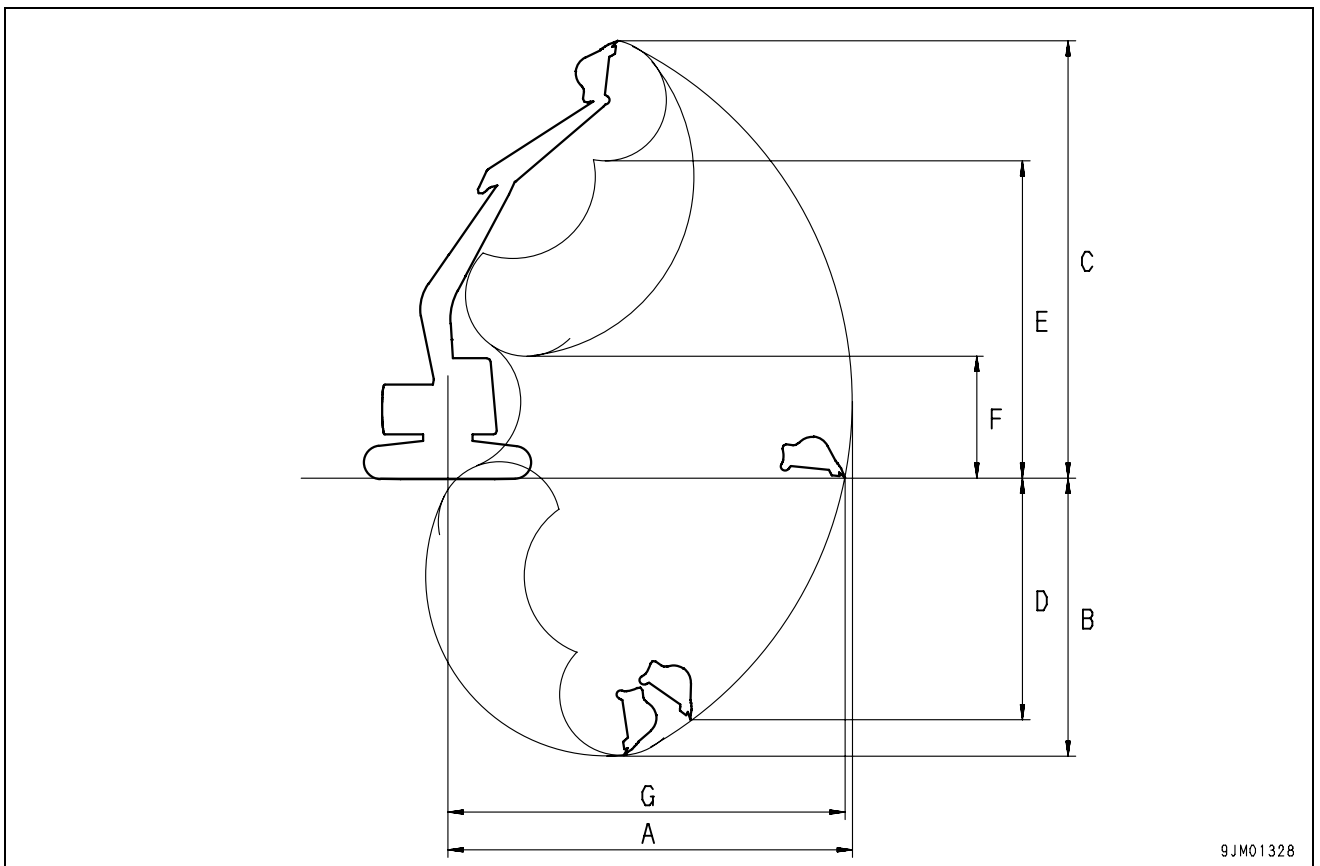

6.7m Boom - PC450-8, PC450LC-8, PC450LCHD-8

LEGEND

A : Reach from swing centre
 B : Bucket hook height

OF : Lifting capacity (rating overfront)
 OS : Lifting capacity (rating overside)

LEGEND


- (1) Position of lifting point
- (2) Arm length:
- (3) Boom length
- (4) Hydraulic pressure: 37.3 MPa

WORKING CONDITIONS:

- WITH BUCKET 1914 kg.
- IF OBJECT HANDLING IS PERFORMED WITH OTHER TOOL INSTALLED, THE WEIGHT DIFFERENCE OF THE TOOL SHALL BE DEDUCTED FROM THE VALUES OF THIS TABLE.
- WITH FULLY EXTENDED BUCKET CYLINDER.
- ON A COMPACT HORIZONTAL LEVEL GROUND.
- WITH 600 mm WIDTH SHOE.

Loads do not exceed 87% of hydraulic capacity or 75% of tipping capacity (* load limited by hydraulic capacity rather than tipping)

PC450-8

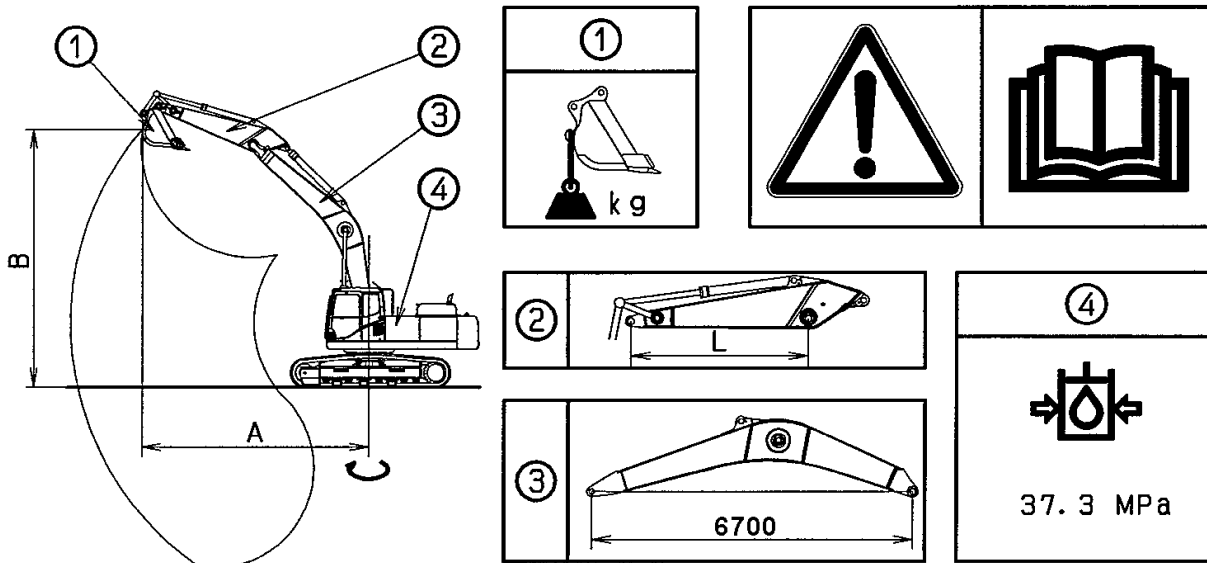













6.7m Boom - PC450-8

L	A B	kg											
		MAX		7.5m		6.0m		4.5m		3.0m		1.5m	
4.8m	6.0m	* 3200	* 3200										
	4.5m	* 3250	* 3250										
	3.0m	* 3400	* 3400	*10550	8450	*12800	12450						
	1.5m	* 3700	3450	11550	7950	*15200	11600	*21650	18700				
	0.0m	* 4100	3500	11100	7500	16200	10900	*24000	17450				
	-1.5m	* 4750	3750	10750	7200	15650	10450	*24300	16750	*12000	*12000		
	-3.0m	* 5750	4150	10600	7050	15450	10200	*23450	16600	*17600	*17600	*11150	*11150
	-4.5m	7500	5000	10600	7100	15400	10250	*21150	16750	*24850	*24850	*18350	*18350
	6.0m	* 4450	* 4450										
	4.5m	* 4550	* 4550	*10300	8750								
	3.0m	* 4800	4250	*11550	8250	*14400	12100	*19950	19400				
	1.5m	* 5200	4150	11400	7850	*16400	11350	*23600	18150				
4.0m	0.0m	* 5850	4200	11050	7500	16050	10800	*24450	17200				
	-1.5m	6800	4500	10850	7300	15700	10500	*24200	16850	*12650	*12650		
	-3.0m	7650	5100	10750	7250	15600	10400	*22450	16900	*21050	*21050	*13650	*13650
	-4.5m	* 8750	6350	10850	7350	*14550	10550	*19250	17200	*25900	*25900		
	6.0m	* 5300	* 5300	*10250	8950								
	4.5m	* 5450	5100	*11150	8650	*13300	12700						
	3.0m	* 5750	4750	11850	8250	*15400	11950	*21800	19150				
	1.5m	* 6250	4650	11400	7850	16550	11250	*24050	17800				
	0.0m	7050	4750	11100	7550	16050	10800	*23100	17200				
	-1.5m	7600	5150	10950	7400	15850	10600	*23650	17100	*12450	*12450		
	-3.0m	8750	5950	10950	7400	*15800	10650	*21300	17250	*23050	*23050		
	-4.5m	* 9000	7600	* 9350	7600	*13350	10850	*17400	*17400	*22000	*22000		
2.9m	6.0m	9500	6650	*10800	8750								
	4.5m	8400	5800	*11600	8450	*14000	12450	*18550	*18550				
	3.0m	7800	5350	11650	8050	*15950	11650						
	1.5m	7650	5200	11250	7700	16300	11050						
	0.0m	7900	5300	11000	7450	15900	10650						
	-1.5m	8600	5800	10900	7350	15750	10500	*22650	17050				
	-3.0m	10150	6850	10950	7400	*15400	10600	*19850	17250	*24100	*24100		
	-4.5m	* 9750	9300			*11600	10900	*15400	*15400	*18250	*18250		
	6.0m	10400	7300	*11600	8750	*13200	13000						
	4.5m	9150	6350	12100	8500	*14950	12350	*19850	*19850				
	3.0m	8500	5900	11700	8150	*16850	11700						
	1.5m	8350	5750	11400	7850	16400	11150						
0.0m	8650	5900	11150	7650	16100	10850							
2.4m	-1.5m	9550	6500	11100	7600	16000	10800	*21700	17500				
	-3.0m	*10800	7850	*10800	7700	*14750	10950	*18550	17550	*20150	*20150		
	-4.5m	* 9400	* 9400			*10250	*10250	*13500	*13500				

6.7m Boom - PC450LC-8

L	A B	kg												
		MAX		7.5m		6.0m		4.5m		3.0m		1.5m		
4.8m	6.0m	* 3200	* 3200											
	4.5m	* 3250	* 3250											
	3.0m	* 3400	* 3400	*10550	8550	*12800	12600							
	1.5m	* 3700	3550	*11850	8050	*15200	11750	*21650	19000					
	0.0m	* 4100	3600	12650	7650	*16850	11050	*24000	17700					
	-1.5m	* 4750	3800	12300	7350	*17400	10600	*24300	17050	*12000	*12000			
	-3.0m	* 5750	4250	12150	7200	*17100	10400	*23450	16850	*17600	*17600	*11150	*11150	
	-4.5m	* 7500	5100	*11950	7200	*15700	10450	*21150	17000	*24850	*24850	*18350	*18350	
	6.0m	* 4450	* 4450											
	4.5m	* 4550	* 4550	*10300	8850									
	3.0m	* 4800	4350	*11550	8400	*14400	12300	*19950	19650					
	1.5m	* 5200	4200	*12700	8000	*16400	11550	*23600	18400					
0.0m	* 5850	4300	12600	7650	*17500	11000	*24450	17450						
-1.5m	* 6900	4600	12400	7450	*17550	10650	*24200	17100	*12650	*12650				
-3.0m	* 8650	5200	12300	7350	*16700	10600	*22450	17150	*21050	*21050	*13650	*13650		
-4.5m	* 8750	6450	*10850	7450	*14550	10700	*19250	17450	*25900	*25900				
4.0m	6.0m	* 5300	* 5300	*10250	9100									
	4.5m	* 5450	5200	*11150	8750	*13300	12900							
	3.0m	* 5750	4850	*12250	8350	*15400	12100	*21800	19450					
	1.5m	* 6250	4750	13000	8000	*17100	11450	*24050	18100					
	0.0m	* 7100	4850	12650	7700	*17800	11000	*23100	17450					
	-1.5m	* 8450	5250	12500	7550	*17550	10800	*23650	17350	*12450	*12450			
	-3.0m	* 9550	6050	*12350	7550	*16200	10800	*21300	17500	*23050	*23050			
	-4.5m	* 9000	7700	* 9350	7750	*13350	11000	*17400	*17400	*22000	*22000			
	6.0m	* 9850	6950	*10800	9100									
	4.5m	9800	6050	*11600	8800	*14000	12900	*18550	*18550					
	3.0m	9150	5600	*12600	8400	*15950	12150							
	1.5m	9000	5450	13200	8050	*17400	11500							
0.0m	9250	5600	12900	7800	*17750	11100								
-1.5m	10100	6100	12800	7700	*17150	11000	*22650	17750						
-3.0m	*10500	7200	*11600	7750	*15400	11050	*19850	17950	*24100	*24100				
-4.5m	* 9750	9700			*11850	11300	*15400	*15400	*18250	*18250				
3.4m	6.0m	*11200	7650	*11600	9100	*13200	*13200							
	4.5m	10650	6650	*12300	8850	*14950	12800	*19850	*19850					
	3.0m	9950	6150	*13200	8500	*16850	12150							
	1.5m	9800	6000	13300	8200	*17950	11600							
	0.0m	10150	6200	13100	8000	*17950	11300							
	-1.5m	11150	6800	13050	7950	*17000	11250	*21700	18200					
	-3.0m	*10800	8200	*10800	8050	*14750	11400	*18550	18250	*20150	*20150			
	-4.5m	* 9400	* 9400			*10250	*10250	*13500	*13500					
	2.9m	6.0m	* 9850	6950	*10800	9100								
		4.5m	9800	6050	*11600	8800	*14000	12900	*18550	*18550				
		3.0m	9150	5600	*12600	8400	*15950	12150						
		1.5m	9000	5450	13200	8050	*17400	11500						
0.0m		9250	5600	12900	7800	*17750	11100							
-1.5m		10100	6100	12800	7700	*17150	11000	*22650	17750					
-3.0m		*10500	7200	*11600	7750	*15400	11050	*19850	17950	*24100	*24100			
-4.5m		* 9750	9700			*11850	11300	*15400	*15400	*18250	*18250			
2.4m		6.0m	*11200	7650	*11600	9100	*13200	*13200						
		4.5m	10650	6650	*12300	8850	*14950	12800	*19850	*19850				
		3.0m	9950	6150	*13200	8500	*16850	12150						
		1.5m	9800	6000	13300	8200	*17950	11600						
	0.0m	10150	6200	13100	8000	*17950	11300							
	-1.5m	11150	6800	13050	7950	*17000	11250	*21700	18200					
	-3.0m	*10800	8200	*10800	8050	*14750	11400	*18550	18250	*20150	*20150			
	-4.5m	* 9400	* 9400			*10250	*10250	*13500	*13500					

6.7m Boom - PC450LCHD-8

L	A B	kg												
		MAX		7.5m		6.0m		4.5m		3.0m		1.5m		
														
PC450LCHD	4.8m	6.0m	* 3200	* 3200										
		4.5m	* 3250	* 3250										
		3.0m	* 3400	* 3400	*10550	8800	*12800	*12800						
		1.5m	* 3700	3700	*11850	8300	*15200	12050	*21650	19400				
		0.0m	* 4100	3750	*12900	7850	*16850	11350	*24000	18150				
		-1.5m	* 4750	3950	12700	7550	*17400	10900	*24300	17450	*12000	*12000		
	4.0m	-3.0m	* 5750	4400	12500	7400	*17100	10700	*23450	17300	*17600	*17600	*11150	*11150
		-4.5m	* 7500	5250	*11950	7450	*15700	10700	*21150	17450	*24850	*24850	*18350	*18350
		6.0m	* 4450	* 4450										
		4.5m	* 4550	* 4550	*10300	9050								
		3.0m	* 4800	4500	*11550	8600	*14400	12600	*19950	*19950				
		1.5m	* 5200	4350	*12700	8200	*16400	11850	*23600	18850				
3.4m	0.0m	* 5850	4450	13000	7850	*17500	11250	*24450	17900					
	-1.5m	* 6900	4750	12750	7650	*17550	10950	*24200	17550	*12650	*12650			
	-3.0m	* 8650	5400	12650	7600	*16700	10850	*22450	17600	*21050	*21050	*13650	*13650	
	-4.5m	* 8750	6650	*10850	7700	*14550	11000	*19250	*17750	*25900	*25900			
	6.0m	* 5300	* 5300	*10250	9300									
	4.5m	* 5450	5350	*11150	9000	*13300	13200							
2.9m	3.0m	* 5750	5000	*12250	8600	*15400	12400	*21800	19850					
	1.5m	* 6250	4900	*13200	8200	*17100	11750	*24050	18500					
	0.0m	* 7100	5000	13000	7900	*17800	11300	*23100	17900					
	-1.5m	* 8450	5400	12850	7750	*17550	11050	*23650	17800	*12450	*12450			
	-3.0m	* 9550	6200	*12350	7750	*16200	11100	*21300	17950	*23050	*23050			
	-4.5m	* 9000	7950	* 9350	7950	*13350	11300	*17400	*17400	*22000	*22000			
2.4m	6.0m	* 9850	6950	*10800	9100									
	4.5m	9800	6050	*11600	8800	*14000	12900	*18550	*18550					
	3.0m	9150	5600	*12600	8400	*15950	12150							
	1.5m	9000	5450	13200	8050	*17400	11500							
	0.0m	9250	5600	12900	7800	*17750	11100							
	-1.5m	10100	6100	12800	7700	*17150	11000	*22650	17750					
2.4m	-3.0m	*10500	7200	*11600	7750	*15400	11050	*19850	17950	*24100	*24100			
	-4.5m	* 9750	9700			*11850	11300	*15400	*15400	*18250	*18250			
	6.0m	*11200	7650	*11600	9100	*13200	*13200							
	4.5m	10650	6650	*12300	8850	*14950	12800	*19850	*19850					
	3.0m	9950	6150	*13200	8500	*16850	12150							
	1.5m	9800	6000	13300	8200	*17950	11600							
2.4m	0.0m	10150	6200	13100	8000	*17950	11300							
	-1.5m	11150	6800	13050	7950	*17000	11250	*21700	18200					
	-3.0m	*10800	8200	*10800	8050	*14750	11400	*18550	18250	*20150	*20150			
	-4.5m	* 9400	* 9400			*10250	*10250	*13500	*13500					

7.0m Boom - PC450-8, PC450LC-8

LEGEND

A : Reach from swing centre
 B : Bucket hook height

OF : Lifting capacity (rating overfront)
 OS : Lifting capacity (rating overside)

LEGEND


- (1) Position of lifting point
- (2) Arm length:
- (3) Boom length
- (4) Hydraulic pressure: 37.3 MPa

WORKING CONDITIONS:







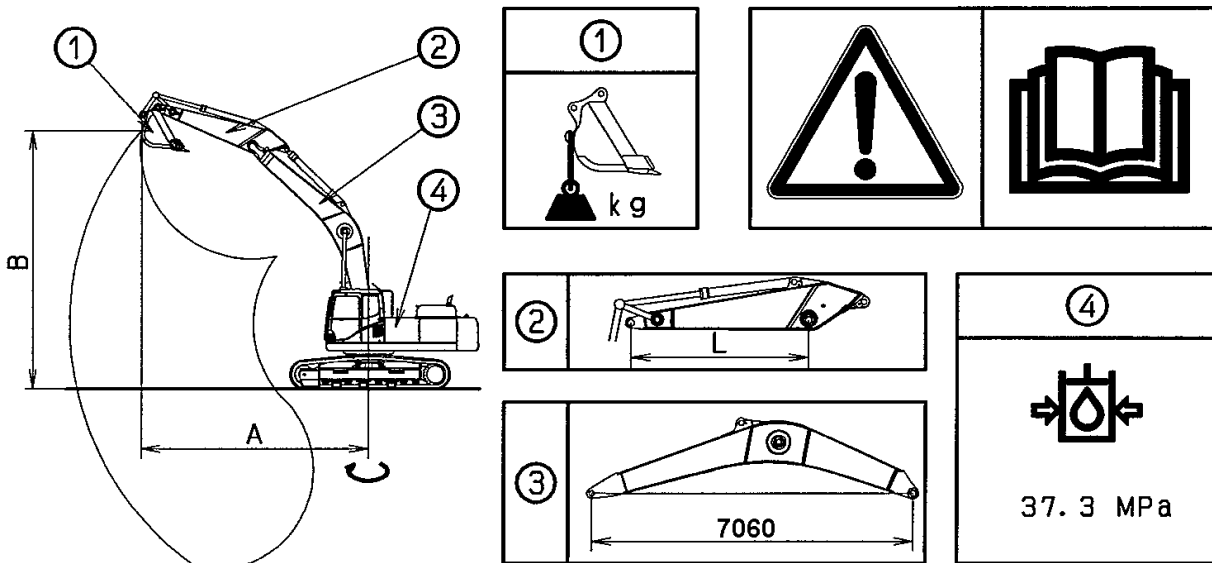


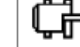

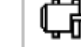
- WITH BUCKET 1914 kg (2.4m, 2.9m, 3.4m Arm), 1115 kg (4.0m Arm), 1189 kg (4.8m Arm).
- IF OBJECT HANDLING IS PERFORMED WITH OTHER TOOL INSTALLED, THE WEIGHT DIFFERENCE OF THE TOOL SHALL BE DEDUCTED FROM THE VALUES OF THIS TABLE.
- WITH FULLY EXTENDED BUCKET CYLINDER.
- ON A COMPACT HORIZONTAL LEVEL GROUND.
- WITH 600 mm WIDTH SHOE.

Loads do not exceed 87% of hydraulic capacity or 75% of tipping capacity (* load limited by hydraulic capacity rather than tipping)













PC450-8

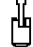

7.0m Boom - PC450-8

L	A B	Kg												
		MAX		7.5m		6.0m		4.5m		3.0m		1.5m		
														
4.8m	6.0m	* 4400	* 4400											
	4.5m	* 4500	4050											
	3.0m	* 4700	3800	*10700	8750	*13100	12700	*17750	*17750					
	1.5m	* 5050	3700	11850	8250	*15450	11800	*22150	18600					
	0.0m	* 5600	3750	11400	7800	16350	11050	*23700	17350					
	-1.5m	5850	3900	11050	7500	15850	10600	*23050	16750	*10800	*10800			
	-3.0m	6400	4300	10900	7350	15600	10400	*23650	16550	*16100	*16100	*10700	*10700	
	-4.5m	7400	5000	10850	7350	15650	10400	*21700	16750	*22650	*22650	*17500	*17500	
	4.0m	6.0m	* 5800	5350										
		4.5m	* 6000	4800	*10500	9150								
		3.0m	* 6300	4500	*11750	8650	*14700	12400	*20750	19650				
		1.5m	6400	4400	11800	8200	*16700	11600	*23250	18050				
0.0m		6500	4450	11400	7850	16300	11050	*20450	17200					
-1.5m		6850	4700	11150	7650	15950	10700	*23250	16900	*11150	*11150			
-3.0m		7650	5200	11100	7550	15850	10650	*22800	16950	*19200	*19200	*13100	*13100	
-4.5m	9100	6250	11150	7650	*15500	10750	*20100	17250	*24850	*24850				
3.4m	6.0m	* 6400	5400	* 9700	8950									
	4.5m	* 6600	4800	*10700	8550	*12900	12550							
	3.0m	6600	4450	11700	8100	*15100	11750	*21100	18650					
	1.5m	6500	4350	11250	7700	16350	11050	*16250	*16250					
	0.0m	6650	4400	10950	7400	15800	10550	*16300	*16300					
	-1.5m	7100	4750	10800	7250	15600	10400	*22000	16800					
	-3.0m	8100	5400	10750	7250	15650	10400	*21200	16950	*19850	*19850			
-4.5m	* 9300	6800	*10500	7400	*13950	10600	*18000	17100	*22750	*22750				
2.9m	6.0m	8850	6150	*10200	8750									
	4.5m	7850	5400	*11100	8350	*13600	12250	*18150	*18150					
	3.0m	7350	4950	11550	7950	*15700	11450							
	1.5m	7150	4800	11100	7550	16050	10800							
	0.0m	7350	4900	10850	7300	15650	10400							
	-1.5m	7950	5300	10700	7200	15550	10300	*22200	16750					
	-3.0m	9250	6200	10750	7250	15550	10400	*19850	17000	*21350	*21350			
-4.5m	*10050	8200	* 9100	7450	*12800	10650	*16250	*16250	*19250	*19250				
2.4m	6.0m	9700	6800	*10950	8750									
	4.5m	8550	5900	*11800	8400	*14600	12150							
	3.0m	7950	5450	11600	8000	*16600	11450							
	1.5m	7800	5300	11250	7700	16150	10900							
	0.0m	8050	5450	11000	7500	15850	10600							
	-1.5m	8800	5950	10950	7400	15800	10600	*17750	17100					
	-3.0m	10400	7050	11050	7500	*15100	10700	*18650	17300	*17750	*17750			
-4.5m	*10000	9600			*11750	11050	*14650	*14650						

7.0m Boom - PC450LC-8

L	A B	kg											
		MAX		7.5m		6.0m		4.5m		3.0m		1.5m	
													
4.8m	6.0m	* 4400	* 4400										
	4.5m	* 4500	4150										
	3.0m	* 4700	3900	*10700	8850	*13100	12850	*17750	*17750				
	1.5m	* 5050	3750	*12050	8350	*15450	11950	*22150	18800				
	0.0m	* 5600	3800	12900	7950	*17000	11200	*23700	17550				
	-1.5m	* 6350	4000	12600	7650	*17600	10750	*23050	16950	*10800	*10800		
	-3.0m	7300	4350	12400	7450	*17450	10550	*23650	16800	*16100	*16100	*10700	*10700
	-4.5m	8450	5100	12400	7450	*16300	10550	*21700	16950	*22650	*22650	*17500	*17500
	6.0m	* 5800	5400										
	4.5m	* 6000	4850	*10500	9250								
	3.0m	* 6300	4550	*11750	8750	*14700	12550	*20750	*19700				
	1.5m	* 6850	4450	*12950	8350	*16700	11750	*23250	18250				
0.0m	7350	4500	12950	8000	*17750	11200	*20450	17400					
-1.5m	7800	4750	12700	7750	*17900	10900	*23250	17100	*11150	*11500			
-3.0m	8650	5300	12600	7650	*17200	10800	*22800	17200	*19200	*19200	*13100	*13100	
-4.5m	* 9500	6350	*12000	7750	*15500	10900	*20100	17450	*24850	*24850			
3.4m	6.0m	* 6400	5500	* 9700	9050								
	4.5m	* 6600	4850	*10700	8650	*12900	12700						
	3.0m	* 7000	4550	*11850	8200	*15100	11900	*21100	18900				
	1.5m	7400	4400	12800	7800	*16850	11200	*16250	*16250				
	0.0m	7550	4500	12500	7500	*17550	10700	*16300	*16300				
	-1.5m	8100	4800	12300	7350	*17300	10550	*22000	17000				
2.9m	6.0m	* 9450	6250	*10200	8850								
	4.5m	8900	5450	*11100	8500	*13600	12400	*18150	*18150				
	3.0m	8350	5050	*12200	8050	*15700	11600						
	1.5m	8150	4900	12650	7650	*17150	10950						
	0.0m	8400	5000	12350	7400	*17450	10550						
	-1.5m	9100	5400	12250	7300	*17000	10450	*22200	17000				
2.4m	6.0m	*10350	6850	*10950	8850								
	4.5m	9650	6000	*11800	8500	*14600	12300						
	3.0m	9050	5550	*12800	8100	*16600	11600						
	1.5m	8850	5400	12750	7800	*17700	11050						
	0.0m	9150	5550	12550	7600	*17700	10750						
	-1.5m	10000	6050	12450	7550	*16900	10750	*17750	17350				
2.4m	-3.0m	*10700	7200	*11600	7600	*15100	10850	*18650	17550	*17550	*17750		
	-4.5m	*10000	9750			*11750	11100	*14650	*14650				

ATTACHMENTS AND OPTIONS



WARNING

Please read and make sure that you understand the SAFETY section before reading this section.

GENERAL PRECAUTIONS FOR SAFETY

When installing attachments or options to the machine, it is necessary to pay attention to safety. Please obey the following precautions strictly when selecting, installing, or using attachments or options.

PRECAUTIONS WHEN SELECTING

- Please consult your Komatsu distributor before installing attachments or options to the machine. Depending on the type of attachment or option, it may be necessary to install a front guard, overhead guard, or other safety structure to the machine. There may also be problems of the attachment or option hitting the operator's cab.
- Install only attachments or options authorized by Komatsu. Komatsu cannot accept any responsibility for any accident, damage, or failure caused by the use of attachments or options not authorized by Komatsu.

READ THE INSTRUCTION MANUAL THOROUGHLY

- Before installing or using any attachment or option, make sure that you thoroughly read and understand the instruction manuals for the machine and the attachment or option.
- If you lose the instruction manual or it is damaged, always obtain a new copy from the attachment manufacturer or your Komatsu distributor.

PRECAUTIONS WHEN REMOVING OR INSTALLING

When removing or installing the attachment or option, obey the following precautions, and take care to ensure safety during the operation.

- Carry out the removal and installation operation on a flat, firm ground surface.
- When the operation is carried out by two or more workers, choose the leader and follow his instructions.
- Use a crane when handling heavy objects (more than 25 kg). (The crane must be operated by a qualified operator.)
- Never go under a load raised by the crane.
- Do not carry out operations with the load kept raised by the crane. Always use a stand to prevent the load from falling.
- When removing a heavy part, consider the balance after it is removed. To prevent the machine from tipping over, set a support in position if necessary before removing the part.
- Before installing or after removing the attachment or option, set it in a stable condition to prevent it from falling over.
- For details of the removal or installation operation, please consult your Komatsu distributor.

PRECAUTIONS WHEN USING

When long or heavy work equipment is installed, remember the following precautions. Before starting operations, move the machine to a safe place and carry out a test operation to make sure that you fully understand the movement, center of gravity, and working range of the machine.

- Do not swing the work equipment if the machine is at an angle. If the work equipment is swung with the machine at an angle, there is danger that the machine will tip over.
- Always maintain a safe distance from obstacles in the surrounding area when operating. If long work equipment is installed, the working range becomes larger.
- If heavy work equipment is installed, pay careful attention to the following precautions.
 - The swing overrun (the distance the work equipment moves before completely stopping after the swing brake is applied) will be greater. There is danger of hitting objects if the swing overrun is miscalculated, so allow extra space to the swing position when swinging.
 - The hydraulic drift of the work equipment (the amount of the work equipment moves down under its own weight when it is stopped in a raised position) also becomes greater. Do not stop the work equipment in a raised position; always lower it to the ground.
 - Do not swing, lower, or stop the work equipment suddenly. There is danger that the machine may tip over.
 - Do not suddenly extend or retract the boom cylinder. The shock may cause the machine to tip over.


HYDRAULIC QUICK COUPLER PIPING

WARNING

Quick coupler operation can be dangerous. There is a risk of death to exposed persons. Follow these instructions strictly.

1. Use only quick couplers which comply with European standard EN474. In particular, it must be possible to confirm from the operator's position that the locking of the attachment or bucket has been completed.
2. Use only quick couplers which include a pilot operated check valve in the locking cylinder. This is to ensure that there is no risk of the bucket or attachment coming loose in the case of loss of hydraulic pressure. If in doubt consult the manufacturer of the quick coupler.
3. Read the instruction manual of the quick coupler carefully and follow the recommendations. If in doubt about the installation or operation consult your Komatsu dealer.
4. The pressure regulation valve (2) allows the pressure at the quick coupler to be limited according to the quick coupler manufacturer's recommendation. Check the specification of the quick coupler and ensure that the valve is set appropriately.
5. Ensure that the quick coupler is installed by a suitably qualified technician. If in doubt contact your Komatsu dealer.

LOCATIONS

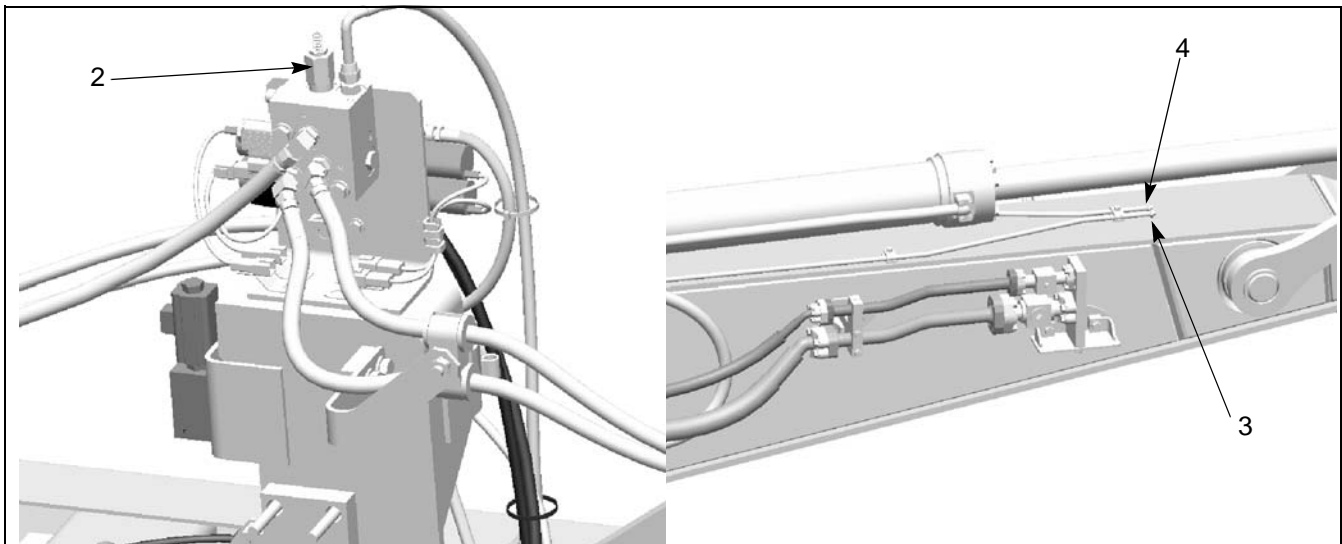

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Switch (See following page) 2. Adjustable pressure regulating valve | <ol style="list-style-type: none"> 3. Piping (quick coupler lock direction) 4. Piping (quick coupler release direction) |
|---|---|

OPERATION

To release a bucket or attachment

1. If the bucket or attachment has any hydraulic connections to the machine these must be disconnected before proceeding.


WARNING

Pressure in the system can cause injury. Follow all instructions in ATTACHMENT REMOVAL AND INSTALLATION.


2. Position the attachment on the ground safely where it is to be left. Take care that it will not roll or slide after release.
3. Operate switch (1).

NOTE: The switch has a safety lock mechanism to prevent accidental operation. Slide the lock towards you then rock the switch. The lamp on the switch will come on and a warning buzzer will sound. (NB Operation will only take place if button (2) is also pressed).

- A: When depressed at this point quick coupler deactivated [NB - LOCK bucket/attachment].
- B: When depressed at this point quick coupler is ready to be activated [NB - RELEASE bucket/attachment].

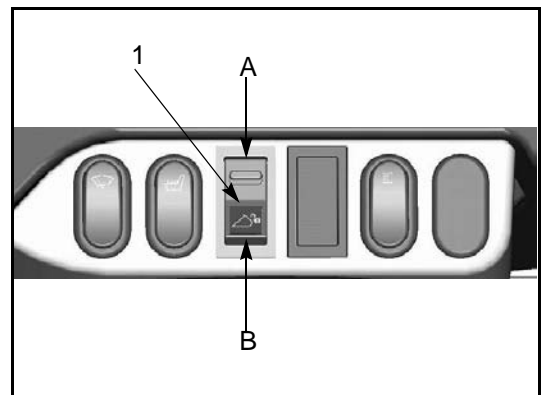

4. With switch (1) in position "B" press and hold button (2) on the left hand lever to activate quick coupler.
5. Depending on the design of the quick coupler it may be necessary to operate one of the hydraulic functions of the machine (bucket, boom, arm, or swing) to raise the pressure in the hydraulic system. If using the swing function activate the Swing Lock first (Swing Lock Switch (3-70)).
6. The quick coupler will now release the attachment/bucket.

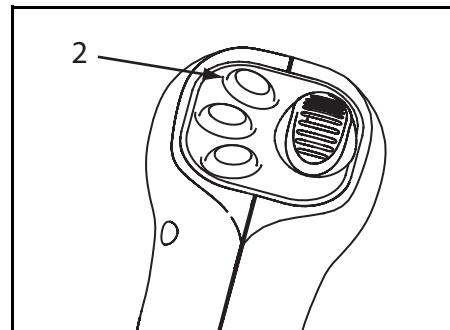

To pick up a new bucket or attachment

1. Position the quick coupler over the new bucket or attachment
2. Operate switch (1).

NOTE: The switch has a safety lock mechanism to prevent accidental operation. Slide the lock towards you then rock the switch. The lamp on the switch will come on and a warning buzzer will sound.

3. With switch (1) in position "B" press and hold button (2) on the left hand lever, to activate quick coupler.
4. Depending on the design of the quick coupler it may be necessary to operate one of the hydraulic functions of the machine (bucket, boom, arm or swing) to raise the pressure in the hydraulic system. If using the swing function activate the Swing Lock first (Swing Lock Switch (3-70)). The quick coupler will move to the 'released' position.
5. Position the quick coupler in the mating portion of the bucket or attachment, moving the bucket cylinder, arm and boom as necessary. Follow the quick coupler manufacturer's instructions.
6. Release button (2). The quick coupler will lock onto the bucket or attachment, if necessary operate one of the machine control levers to raise the system pressure. Return switch (1) to position "A" (OFF). The lamp will go off and the buzzer stop.

 **WARNING**

European safety standards require that it is possible to check the locked position of the quick coupler from the operator's position. Failure to check could cause the death of exposed persons. Check carefully that the locking of the quick coupler is complete and secure. Follow the manufacturer's instructions carefully, including the installation of any safety device, if required.

7. If the bucket or attachment needs a connection to the hydraulic system of the machine follow all instructions in ATTACHMENT REMOVAL AND INSTALLATION

 **WARNING**

Check daily that the hoses and fittings in the quick coupler piping system are in good condition. Pay particular attention to the hoses and fittings at the arm end as these can be damaged easily. In case of damage or leakage of oil stop work. Loss of oil could lead to the bucket or attachment falling and killing an exposed person. The damage or leakage must be repaired before continuing work.

This machine has a system installed to give a warning if there is a failure to maintain pressure in the quick coupler system. If the buzzer sounds in the cab make sure that the cause is clarified before continuing work. In particular check for leaks in the system. If in doubt call your Komatsu dealer.

BUCKET WITH HOOK



HOOK CONDITION

Check that there is no damage to the hook, stopper, or hook mount. If there is any problem, contact your Komatsu distributor.

PROHIBITED OPERATIONS


Operations with Care

- When carrying out lifting operations, reduce the engine speed and use the L mode (for fine-control operations).
- Depending on the posture of the work equipment, there is the danger that the wire or load may slip off the hook.
Always be careful to maintain the correct hook angle to prevent this from happening.
- Never travel the machine while lifting a load.
- If the bucket with hook is turned and used for operations, it will hit the arm during dumping operations, be careful when using it.
- If you are planning to newly install a hook, contact your Komatsu distributor.

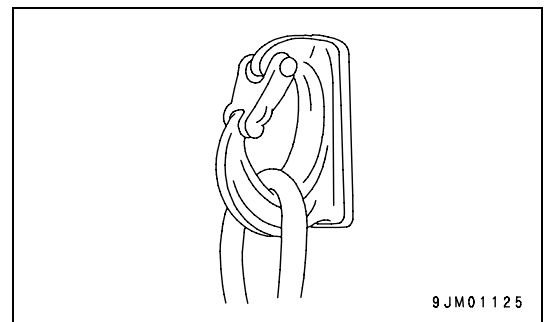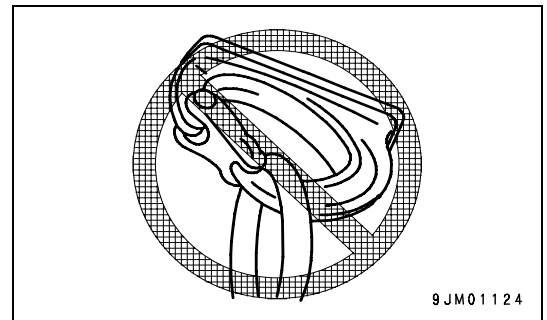

MACHINE READY FOR ATTACHMENT

LOCATIONS

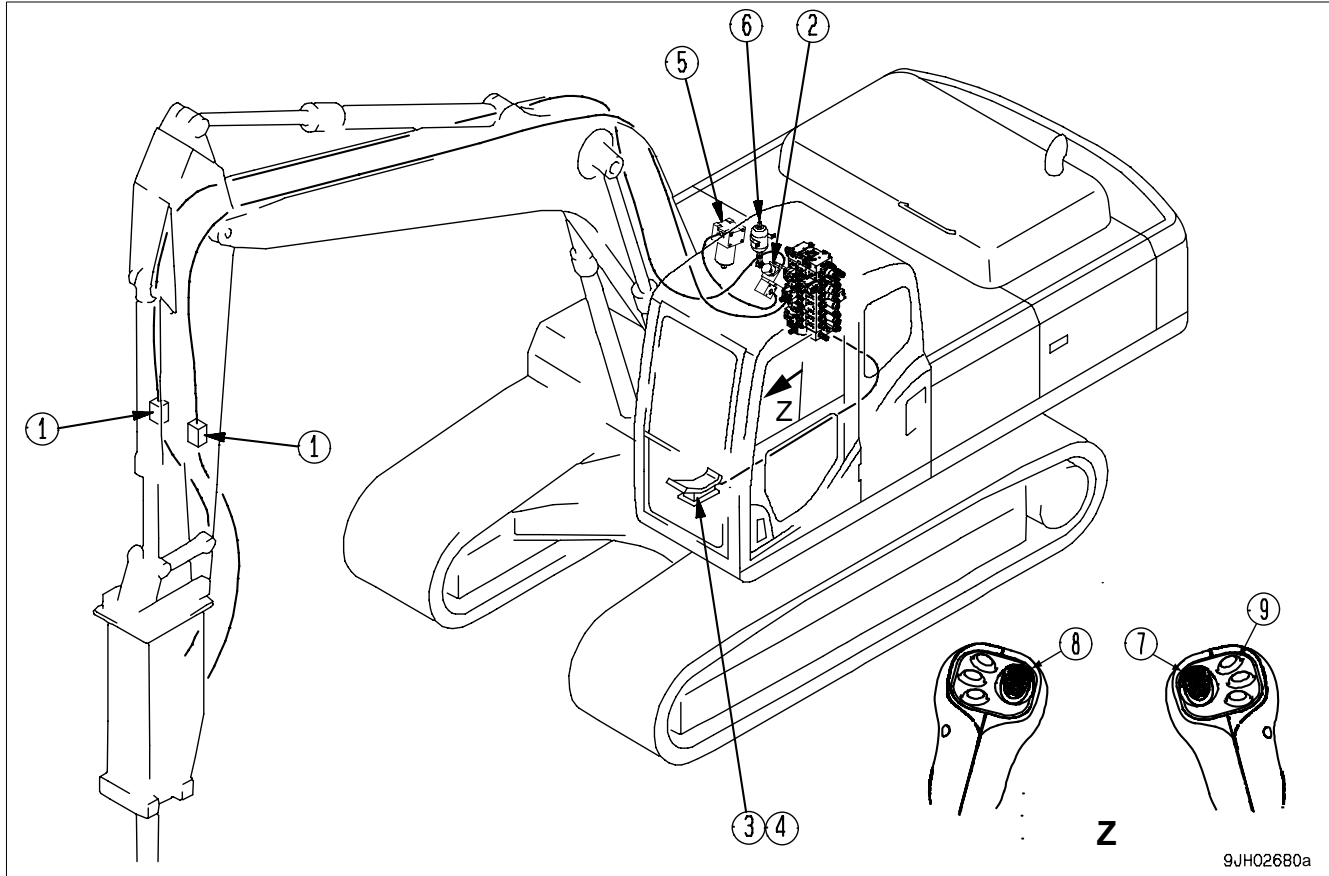

- | | |
|---|--|
| (1) Stop valve | (6) Accumulator |
| (2) Selector valve | (7) 1st Attachment proportional control switch |
| (3) Attachment control pedal | (8) 2nd Attachment proportional control switch |
| (4) Lock pin | (9) Breaker switch |
| (5) Breaker circuit additional oil filter | |


Stop Valve

This valve (1) stops the flow of the hydraulic oil.

(F) FREE: Hydraulic oil flows.

(L) LOCK: Hydraulic oil stops.

When removing or installing attachments, set this valve to the LOCK position.

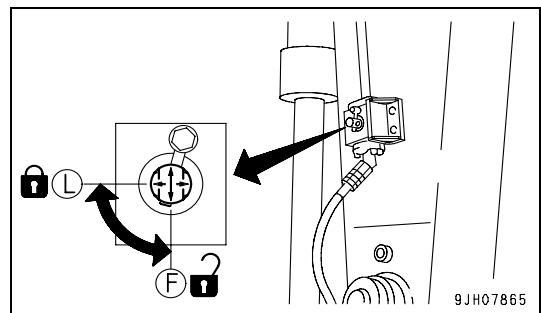


Selector Valve

This valve (2) switches the flow of hydraulic oil.

It is automatically switched according to the selected working mode. It is necessary to switch the working mode to match the attachment that is installed. For details of switching the working mode, see "HYDRAULIC CIRCUIT (6-12)".

NOTICE

If a service circuit from the attachment maker has been added, the return circuit may not switch automatically.

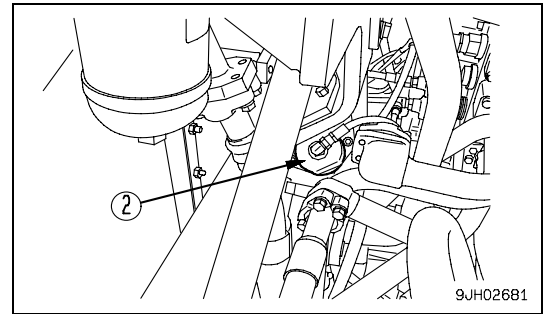

Attachment Control Pedal



WARNING

Do not carry out operations with your foot on the pedal. If the pedal is depressed by mistake, the attachment may suddenly move and cause a serious accident. Lock the pedal with the lock pin when you are not operating the attachment.

This pedal (3) is used to control the attachment.

When the front, center (neutral), and rear of the pedal are depressed, the movement of the attachment is as follows.


Hydraulic breaker

Front of pedal (A): Actuated

Center of pedal (N): Stopped

Rear of pedal (B): Stopped

Regarding other attachments, hold a meeting with the attachment maker at the time of installation to confirm the operation of the pedal and attachment before using it.

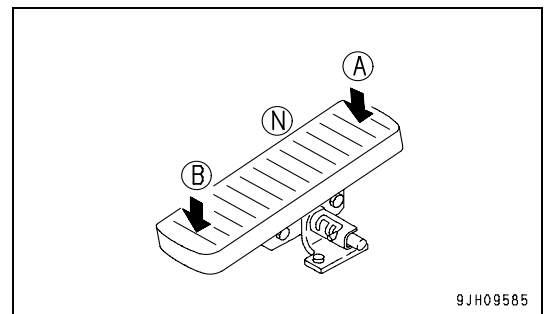

Lock Pin


This pin (4) locks the control pedal.

Position (a): Locked

Position (b): Only front of pedal can be operated to full position (rear is locked)

Position (c): Both front and rear of pedal can be operated to full position

- When not using the attachment, set the lock pin to position (a).
- When using the breaker, use the working mode selector switch on the monitor switch portion to set the working mode to B mode, and set the lock pin to position (b) when using the pedal and position (a) when using the breaker switch (9).
- When using the crusher, use the working mode selector switch on the monitor switch portion to set the working mode to ATT mode, and set the lock pin to position (c) when using the pedal and position (a) when using the rolling switch (7).

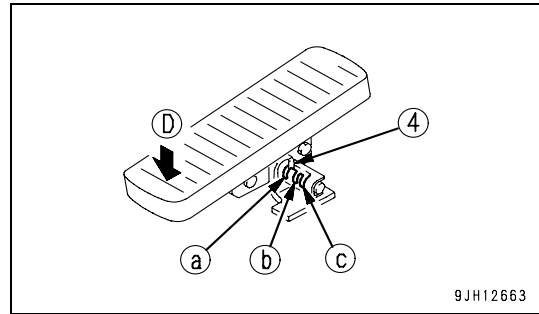


NOTICE

- **When using the breaker, if the lock pin is set to position (c) and the pedal is operated in direction (D), it will cause damage or defective operation of the breaker. To prevent this, when using the breaker, always set the lock pin to position (b).**
- **Before changing the position of the lock pin, stop the engine.**

Attachment 2 Control (if equipped).

Proportional control rolling switch.

Switch (8) operates the 2nd attachment circuit (e.g. clamshell rotation). The switch (8) is a roller proportional control switch. Rolling the switch up produces rotation in one direction, rolling down produces rotation in the opposite direction. Slight movement of the roller will give slight movement of the clamshell; full movement of the roller will give faster movement of the clamshell.

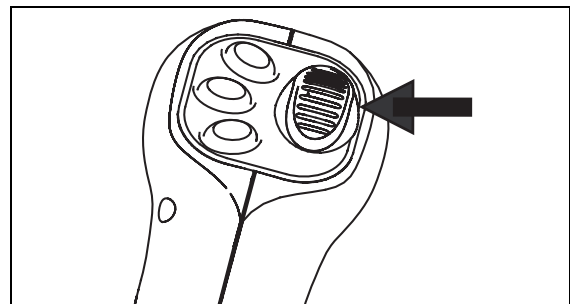

Note - If installing 2nd attachment as a field kit, ask the distributor to change monitor setting to allow 2 attachment mode.


Breaker Circuit Additional Oil Filter

This filter (5) prevents deterioration of the hydraulic oil when using a breaker.

Oil only flows when B mode is selected on the monitor.

NOTICE

Always install an additional filter in the return circuit on machines equipped with a hydraulic breaker.

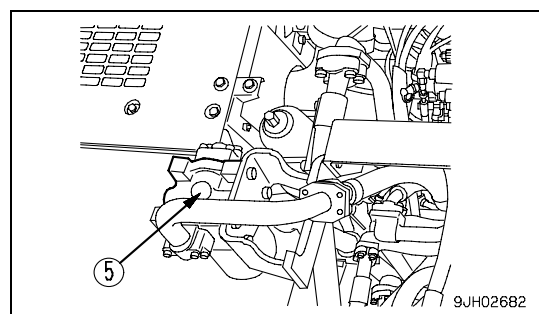

Accumulator

WARNING

The accumulator is charged with high-pressure nitrogen gas, so mistaken operation may cause an explosion, which will lead to serious injury or damage. When handling the accumulator, always do as follows. The pressure in the hydraulic circuit cannot be completely removed. When removing the hydraulic equipment, do not stand in the direction that the oil spurts out when carrying out the operation. In addition, loosen the bolts slowly when carrying out the operation.

Do not disassemble the accumulator.


Do not bring it near flame or dispose of it in fire.

Do not make holes in it or weld it.

Do not hit it, roll it, or subject it to any impact.

When disposing of the accumulator, the gas must be released. Please contact your Komatsu distributor to have this work carried out.

This accumulator (6) is installed to reduce the peak pressure in the hydraulic circuit when a breaker is used. Normally, do not touch it.

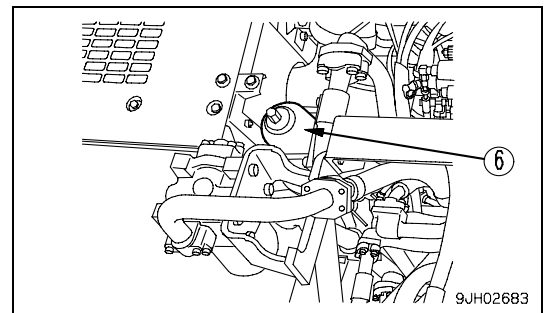

NOTICE

On machines equipped with a breaker, it is necessary to install an accumulator to the breaker piping to match the model number of the breaker manufacturer. If no accumulator is installed and the breaker is operated, the service life of the machine will be reduced. For questions about the breaker, please contact your Komatsu distributor.

For details, see “CHECK NITROGEN GAS CHARGE PRESSURE IN ACCUMULATOR (for breaker) (4-73)” or “CHECKING CHARGE PRESSURE OF NITROGEN GAS IN ACCUMULATOR (FOR CONTROL CIRCUIT) (4-76)”.

HYDRAULIC CIRCUIT

NOTICE

- It is necessary to return the return circuit directly to the return filter when a breaker is used, so use only the B mode. Do not use any other mode.
- When the machine is shipped from the factory, the standard set pressure of the safety valve in the service valve is set as follows:
 When B mode is selected: 17.2 MPa (175 kgf/cm²)
 When P or E mode is selected: 20.1 MPa (205 kgf/cm²).
 The set pressure may have to be adjusted depending on the attachment. In such cases, please ask your Komatsu distributor to carry out the adjustment.

Switching Hydraulic Circuit

- Depending on the type of attachment, set the working mode on the monitor as follows.
- The set pressure of the safety valve in the service valve and the hydraulic circuit switch is according to the working mode selected.

Attachment	Working mode	Hydraulic circuit	Set pressure of safety valve in service valve
Breaker or other attachment with one-way circuit	B mode	Return circuit automatically switched so that it does not pass through control valve	When shipped from factory : 17.2 MPa (175 kgf/cm ²)
Crusher or other attachment with two-way circuit	P mode or E mode	Return circuit automatically switched so that it passes through control valve	When shipped from factory : 20.1 MPa (205 kgf/cm ²)

Adjusting Oil Flow

Depending on the attachment, it is necessary to change the oil flow in the service circuit.

For details of setting the oil flow, see “ATTACHMENT OPERATIONS (6-21)”.

Switching Between Breaker and General Attachment

- If an attachment is installed as an option, and the mode is set to B mode:
 - (1) The system is set to the breaker operation circuit (1-way circuit).
 - (2) The hydraulic oil flowing to the breaker circuit flows to the additional filter for the breaker.
 - (3) The relief pressure valve is set to low pressure.
 Set pressure when machine is shipped from factory: 17.2 MPa (175 kgf/cm²)
 - (4) It is possible to use the selector mode to adjust the maximum oil flow.
- If an attachment is installed as an option, and the mode is set to P or E mode:
 - (1) The system is set to the crusher operation circuit (2-way circuit).
 - (2) The hydraulic oil flowing to the crusher circuit does not flow to the additional filter for the breaker.
 - (3) The relief pressure valve is set to high pressure.
 Set pressure when machine is shipped from factory: 20.1 MPa (205 kgf/cm²)
 - (4) It is possible to use the selector mode to adjust the maximum oil flow.


Hydraulic Circuit Connection

When connecting the attachment, connect the hydraulic circuit as follows.

1. Remove blind plug (1) at the end of the stop valve piping.


(Two spots on the left and right)

Be careful not to lose or damage any part that has been removed.

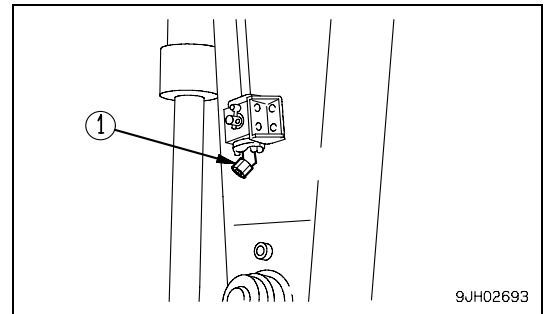


2. Connect attachment piping (2) provided by the attachment maker to the part from which the plug was removed Step 1.

For the mouthpiece size and accumulator add-on, the action to take differs according to the attachment manufacturer, so please consult your Komatsu distributor.

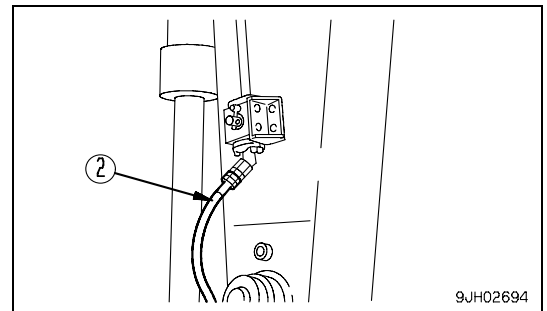

Oil Flow Path

The direction of operation of the pedal and the path of the oil flow is as shown in the diagram below.

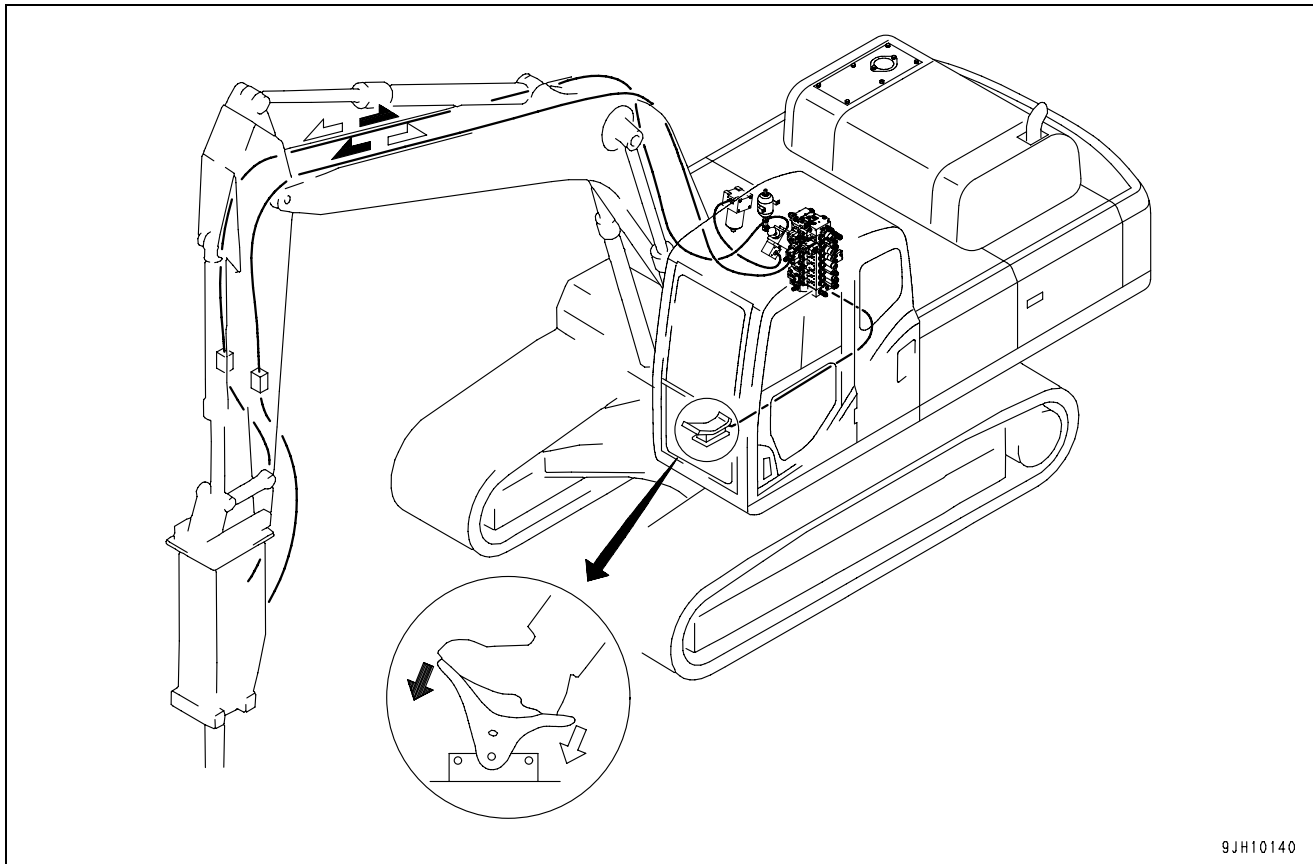


When the front of the pedal is depressed, oil flows to the piping on the left side of the work equipment; when the rear of the pedal is depressed, oil flows to the piping on the right side of the work equipment. (When a breaker is installed, only the front of the pedal can be used.)

Replace Additional Breaker Filter Element

⚠ WARNING


- The parts and oil are at high temperature after the engine is stopped, and may cause serious burns. Wait for the temperature to go down before cleaning the engine breather.
- When using compressed air, there is a hazard that dirt may be blown up and cause serious injury. Always use safety glasses, dust mask, or other protective equipment.

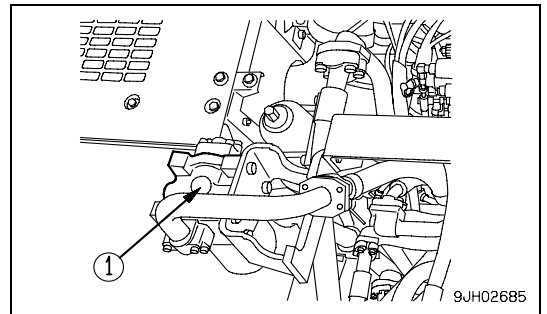



NOTICE

For details of the replacement interval for the element, “MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER (4-19)”.


- Prepare a container to catch the oil.
1. Lower the work equipment to the ground and stop the engine.

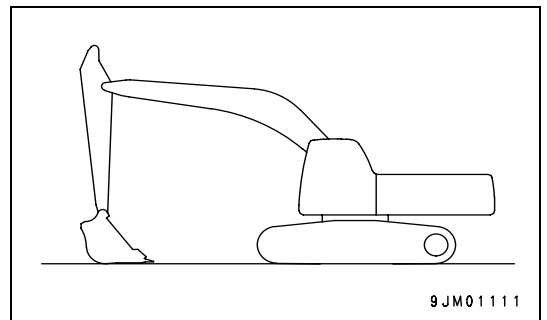


2. Turn the starting switch to the ON position (B), then set the lock lever to the FREE position (F).
3. After carrying out Step 2, operate each work equipment control lever and attachment control pedal fully to the front, rear, left, and right 2 or 3 times within 15 seconds to release the internal pressure in the hydraulic circuit.

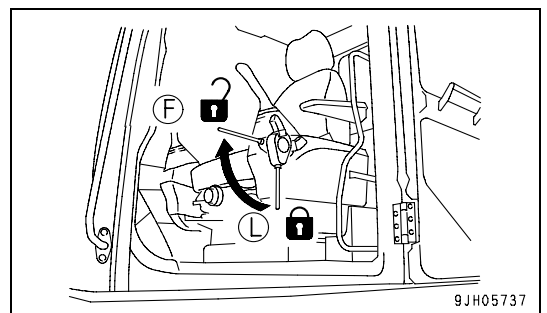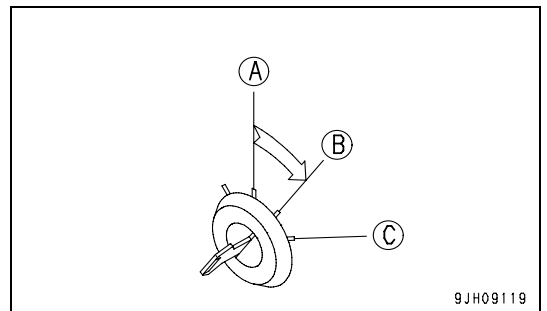

4. Set the lock lever to LOCK position (L).

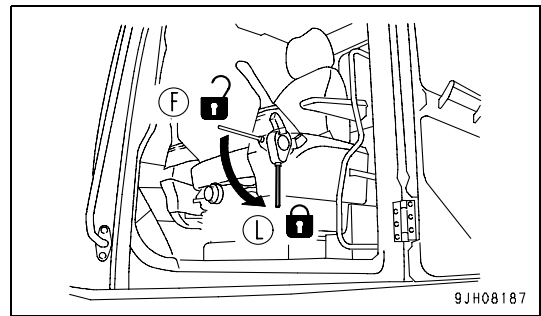

5. Loosen slowly oil filler cap (F) on top of the hydraulic tank to eliminate the internal pressure in the hydraulic circuit.

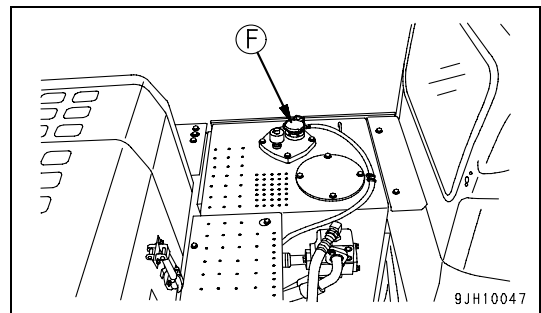

6. Place a container under the filter element to catch the oil.

7. Set a container in position to catch the drained oil, then remove plug (1) and drain the oil accumulated in filter case (2).

8. Turn filter case (2) to the left, remove it, then take out element (3).


9. Clean the removed parts, then install new element (3).

- Element (3) must be installed facing in the correct direction. Set direction (Y) with the holes in it facing up, and insert the hole in element (3) on the protruding portion inside filter head (4).

10. Install new O-ring (5) to filter case (2), then screw filter case (2) into filter head (4). When the top of filter case (2) comes into contact with the filter head, tighten it at least a further 1/2 turns.

11. Clean plug (1), then fit a new O-ring (6) to plug (1).



12. Install plug (1) to filter case (2).

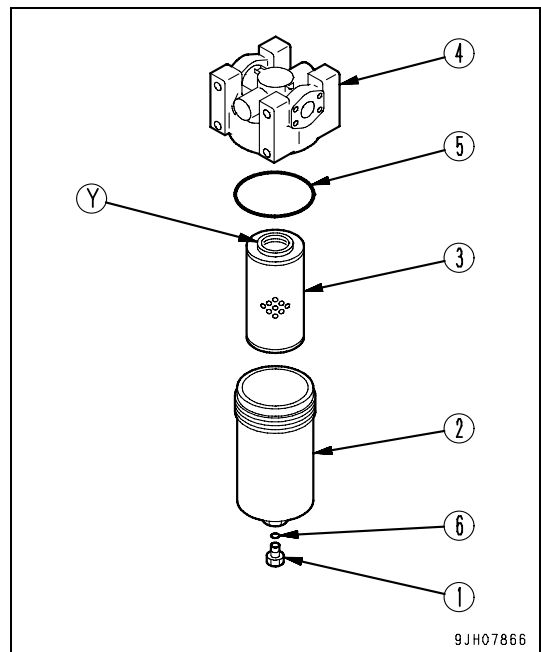


ATTACHMENT REMOVAL AND INSTALLATION

Attachment Removal


1. Lower the attachment to the ground and stop the engine.
2. Turn the starting switch to the ON position (B), then set the lock lever to the FREE position (F).
3. After carrying out Step 2, operate each work equipment control lever and attachment control pedal fully to the front, rear, left, and right 2 or 3 times within 15 seconds to release the internal pressure in the hydraulic circuit.

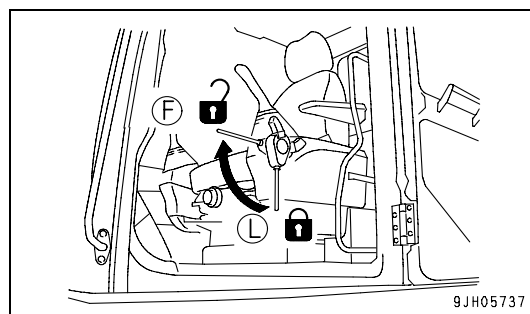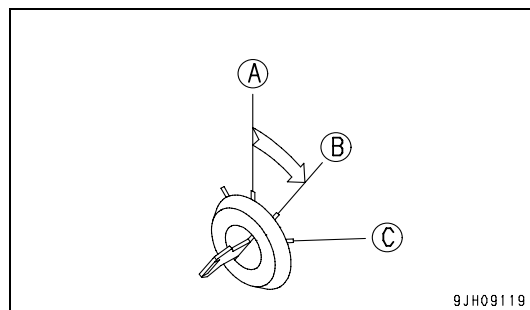

4. Set the lock lever to LOCK position (L).

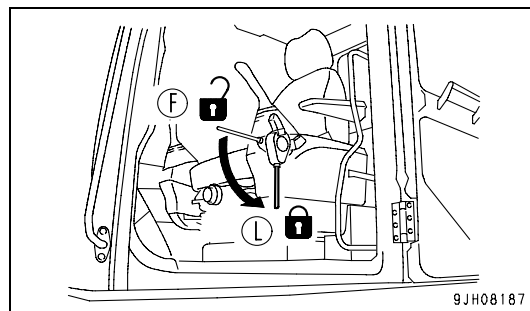


5. Loosen slowly oil filler cap (F) on top of the hydraulic tank to eliminate the internal pressure in the hydraulic circuit.

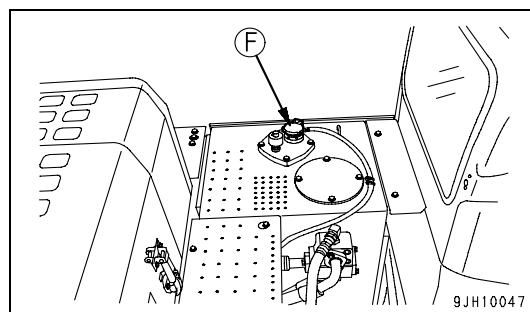

6. After checking that the oil has cooled down, turn the rotor on the stop valve installed to the piping for the inlet port and outlet port on the side face of the arm to the LOCK position (L).

7. Remove the hoses on the attachment side. Install the plugs to the two outlets.


The plugs are used to prevent the attachment from incorrect operation caused by mixing in of foreign matter. After the plugs are correctly installed, store the attachment.

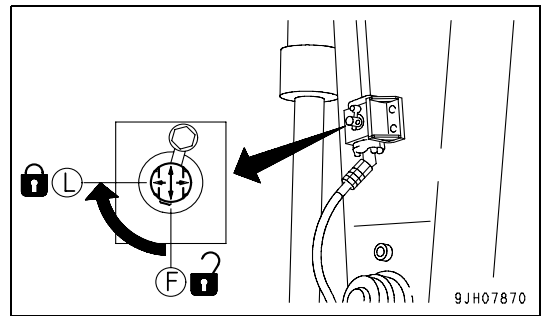

8. Pull out the mounting pins (2 places), remove the attachment, then install the bucket.

For details of the procedure for installing the bucket, see "BUCKET REPLACEMENT AND INVERSION (3-164)".

9. After installing the bucket, check the oil level in the hydraulic tank.

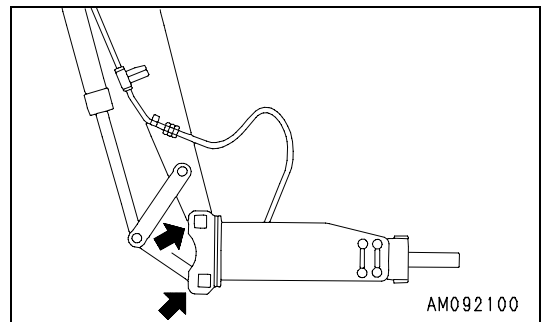


Attachment Installation

1. Remove the bucket.

For bucket dismounting procedure, see "BUCKET REPLACEMENT AND INVERSION (3-164)".



2. Place the attachment in a horizontal position, then install to the arm with pin (A) and then pin (B).

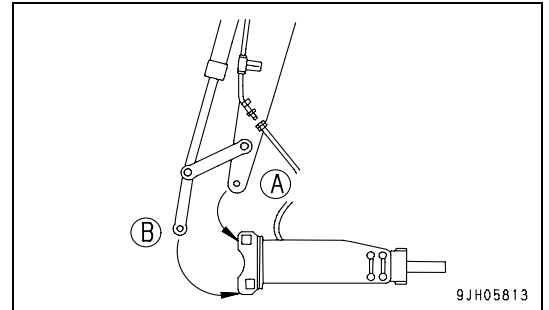


3. Lower the attachment to the ground and stop the engine.

4. Turn the starting switch to the ON position (B), then set the lock lever to the FREE position (F).


5. After carrying out Step 4, operate each work equipment control lever and attachment control pedal fully to the front, rear, left, and right 2 or 3 times within 15 seconds to release the internal pressure in the hydraulic circuit.

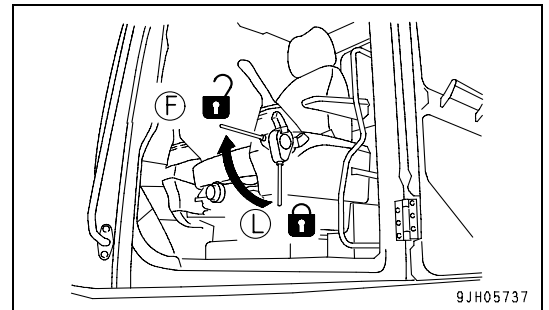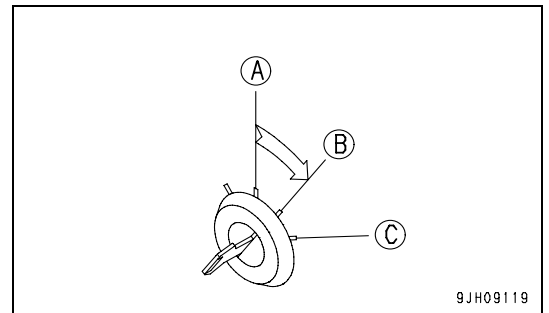

6. Set the lock lever to LOCK position (L).

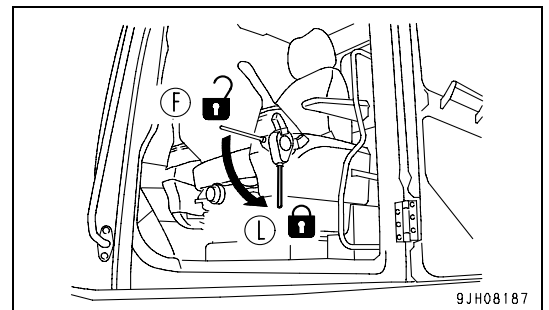

7. Loosen slowly oil filler cap (F) on top of the hydraulic tank to eliminate the internal pressure in the hydraulic circuit.

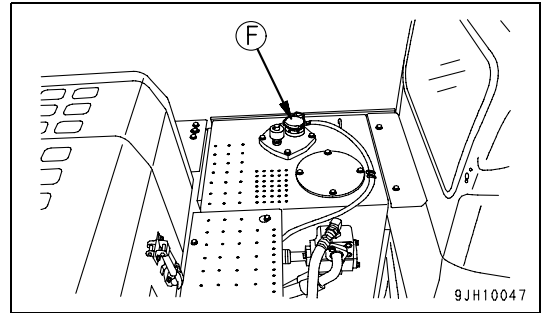


8. After confirming low oil temperature, remove the plug from the outlet and inlet port respectively.

Take care that no dust, mud etc. adheres to the hose mouthpiece portions.

If O-ring is damaged, replace it with a new one.

9. Connect the hose at the attachment side.

When doing this, check the direction of flow of the oil and be careful not to make any mistake.

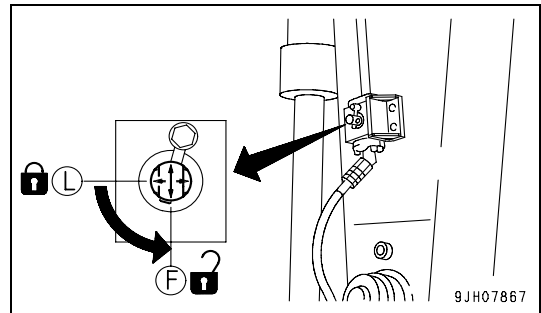

10. Turn the rotor on the stop valve installed to the piping for the inlet port and outlet port on the side face of the arm to the FREE position (F).

11. After installing the attachment, check the oil level in the hydraulic tank.

ATTACHMENT OPERATIONS

WARNING

- If the pedal is operated when the auto-deceleration is being actuated and the engine speed has dropped, the engine speed will suddenly rise, so be careful when operating.
- If you leave your foot resting on the pedal and depress the pedal by mistake, there is danger that the attachment may suddenly move and cause serious personal injury. If you do not need to operate the pedal, do not rest your foot on the pedal.
- When the attachment is not being used, set the lock pin of the pedal to the LOCK position to prevent the pedal from being operated.

The method of operating the attachment is as follows.


Operation When Using Breaker

NOTICE

When carrying out breaker operations, use the breaker mode. If the breaker mode is not used, the breaker may be damaged.

Breaker can be operated using either the breaker switch or attachment control pedal.


1. Breaker Switch - With the working mode set to B mode, press switch to operate breaker and release to stop.

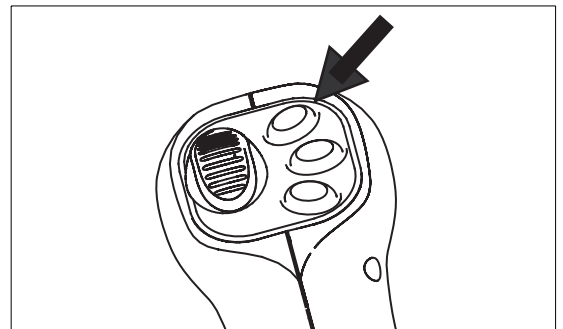

WARNING

When operating breaker using breaker switch, lock the pedal with the lock pin to avoid accidental operation.


2. Attachment Control Pedal - With the working mode set to B mode, insert the lock pin in front-only FREE position (b). Press the front of the pedal to operate the breaker.

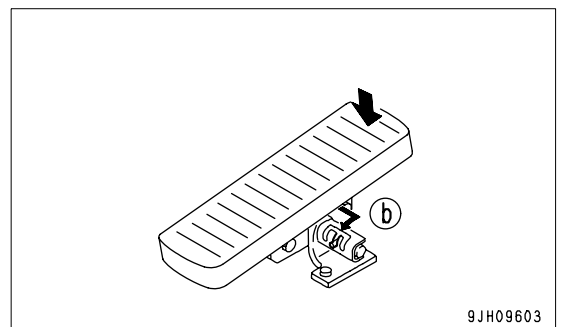


9JH09603

If the working mode pilot monitor does not display B for the breaker mode, press working mode selector switch (1) and set to the breaker mode as follows.


- When working mode selector switch (1) is pressed, the screen switches to the working mode selection screen.

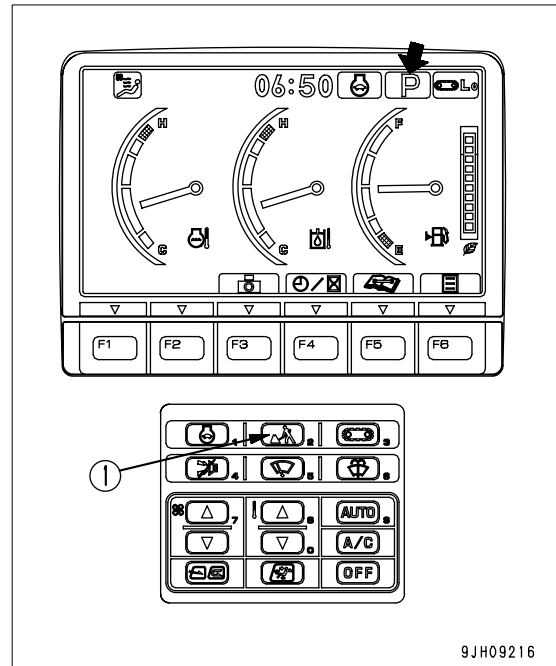

1. Press working mode selector switch (1) or press switches F3 or F4 to select breaker mode B.
2. With breaker mode B highlighted in yellow, do one of the following to accept the selection.
 - Keep working mode selector switch (1) pressed.
 - Press switch F6.
 - Leave as it is for 5 seconds.

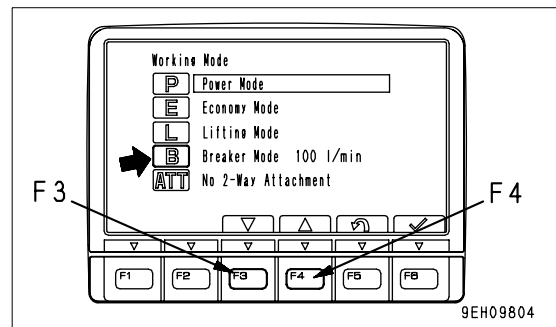

3. If the breaker mode is selected, "Really Set Breaker Mode?" is displayed on the screen. To set to the breaker mode, press switch F6.

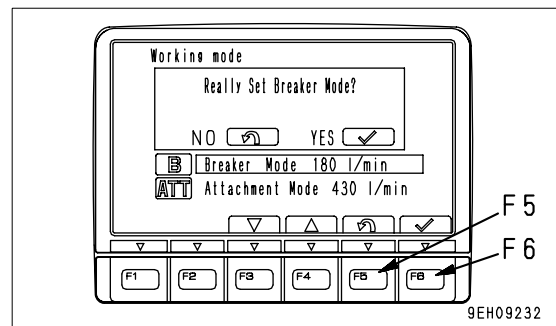

- If switch F5 is pressed, the screen returns to the working mode selection screen without changing to the breaker mode.
- If a slide arm or other special attachment is installed and the mode is switched to the breaker mode by mistake, it may lead to serious danger, such as the work equipment suddenly dropping.
- If breaker operations are carried out in a mode other than the breaker mode, the warning screen is displayed. Always carry out breaker operations in the breaker mode.

Precautions when using


- Check that the stop valve is at the FREE position.
- Check that the working mode is B mode.
For details of the path of the oil, see "HYDRAULIC CIRCUIT (6-12)".
- When considering whether it is necessary to install an accumulator for the attachment circuit, contact the attachment manufacturer and then decide.
- For other precautions when handling the breaker, follow the instruction manual from the breaker manufacturer and use the breaker correctly.
- The deterioration of the hydraulic oil when using the breaker is much faster than for normal operations, so reduce the maintenance interval for the hydraulic oil and element.
For details, see "MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER (4-19)".

Operation When Using General Attachment 1 (e.g. Crusher).

General attachment 1 can be operated using either the rolling switch on the right lever or right attachment control pedal.

1. Proportional Control Rolling Switch


With the working mode set to ATT mode - rolling the switch up produces movement of the attachment, rolling down produces opposite movement of the attachment. Slight movement of the roller will give slight movement of the attachment; full movement of the roller will give faster movement of the attachment.

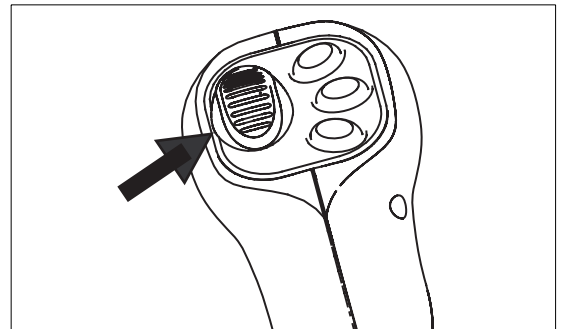**WARNING**

When operating the attachment using rolling switch, lock the pedal with the lock pin to avoid accidental operation.

2. Attachment Control Pedal

With the working mode set to ATT mode, insert the lock pin in front-and-rear FREE position (c). Press the front or rear of the pedal to operate the attachment.

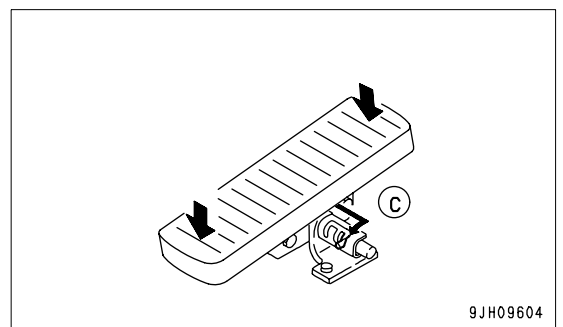


9JH09604

Working Mode Selection


6

If the working mode pilot monitor does not display ATT for the attachment mode, press working mode selector switch (1) and set to the attachment mode as follows.

- If P, E, or L mode are selected, the attachment is not actuated.

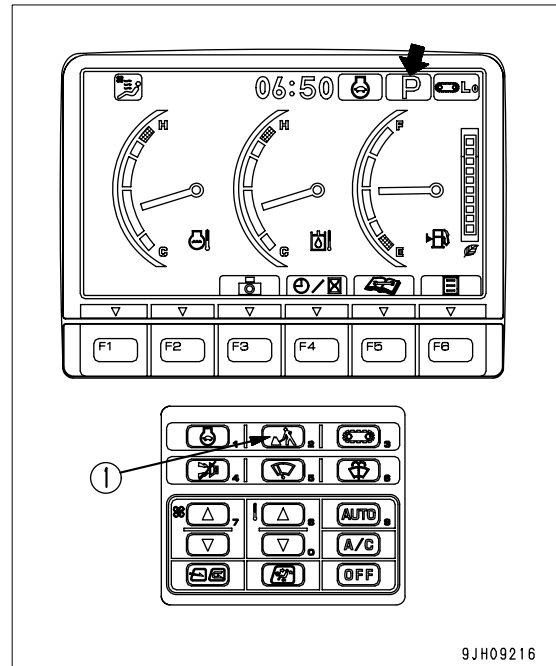

1. Press working mode selector switch (1) or press switches F3 or F4 to select attachment mode ATT.
 2. With attachment mode ATT highlighted in yellow, do one of the following to accept the selection.
 - Keep working mode selector switch (1) pressed.
 - Press switch F6.
 - Leave as it is for 5 seconds.
- On the user menu attachment setting, it is possible to make the attachment mode inactive.
 - When using the attachment mode, check that the attachment mode is active before starting operations.

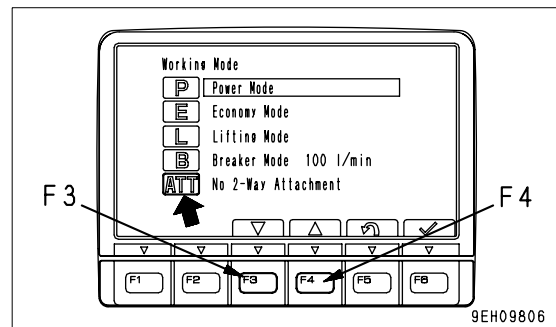

Precautions when using


- Check that the stop valve is at the FREE position.
- Check that the working mode is ATT mode.
For details of the path of the oil, see "HYDRAULIC CIRCUIT (6-12)".
- For other precautions when handling the attachment, follow the instruction manual from the attachment manufacturer and use the attachment correctly.

Operation When Using Attachment 2 (e.g clamshell rotation, crusher rotation)

Note - If installing 2nd attachment line as a field kit, ask distributor to change monitor setting to allow 2 attachments.

The switch on left lever is a roller proportional control switch. Rolling the switch up produces rotation in one direction, rolling down produces rotation in the opposite direction. Slight movement of the roller will give slight movement of the attachment; full movement of the roller will give faster movement of the attachment.

If the working mode pilot monitor does not display ATT for the attachment mode, follow the instructions, see Working Mode Selection (6-24).

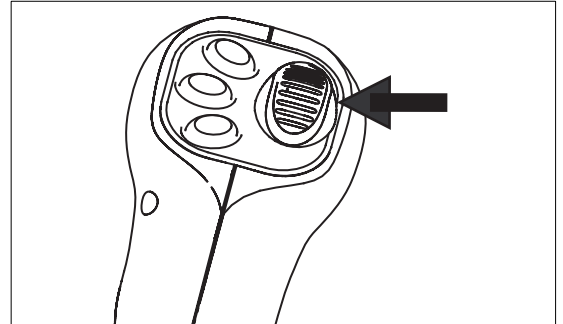

LONG TERM STORAGE

If the equipment is not to be used for a long time, do as follows.

- Set the stop valve in the LOCK condition.
- Fit a plug at the tip of the stop valve piping.
- Set the lock pin at the LOCK position.

If there is no breaker or general attachment installed, operating the pedal may cause overheating and other problems.

SPECIFICATIONS

Hydraulic specifications

- Max. flow at merge: 275 x 2 liters / min.
- Safety valve relief set pressure for service valve
 - A port: 21.6 MPa (220 kgf/cm²) (except B mode)
 - B port: 24.5 MPa (250 kgf/cm²) (except B mode)
- Safety valve cracking pressure for service valve
 - A port: 17.2 MPa (175 kgf/cm²) (except B mode)
 - B port: 20.1 MPa (205 kgf/cm²) (except B mode)
- Safety valve relief set pressure for service valve: 21.6 MPa (220 kgf/cm²) (B mode)
- Safety valve cracking pressure for service valve: 17.2 MPa (175 kgf/cm²) (B mode)

ATTACHMENT GUIDE

WARNING

- Please read the instruction manual for the attachment and the sections of this manual related to attachments and options.
- When installing any attachment or option, there may be problems with safety, so please contact your Komatsu distributor before installing.
- Installing attachments or options without consulting your Komatsu distributor may not only cause problems with safety, but may also have an adverse effect on the operation of the machine and the life of the equipment.
- Any injuries, accidents, or damage resulting from the use of unauthorized attachments or options will not be the responsibility of Komatsu.

ATTACHMENT COMBINATIONS

WARNING

Depending on the type or combination of work equipment, there is danger that the work equipment may hit the cab or machine body.

When using unfamiliar work equipment for the first time, check before starting if there is any danger of interference, and operate with caution.

PC400, PC400LC

This table lists the combination of attachments which can be installed to the long arm (standard), short arm and extension arm.

○: Material weight up to 1.8 t/m³

□: Material weight up to 1.5 t/m³

△: Material weight up to 1.2 t/m³

NOTICE

- **When the long arm is equipped, if the bucket is pulled in to the machine body, the arm interferes with the body. Operate the long arm carefully.**
- **When the boom is fully lowered during oblique digging, the boom interferes with the undercarriage. Operate the boom carefully.**

Categories of use

For general digging: Digging or loading sand, gravel, clay etc.

For light duty digging: Digging or loading dry, uncaked earth and sand, mud etc.

For loading work: Loading dry, loose earth and sand

- For digging or loading hard soil or soft rock, it is recommended that the strengthened bucket with high durability and high wear resistance be employed.

The items marked * are for when the side cutter is installed.

BUCKET AND ARM COMBINATION			ARM LENGTH				
Bucket Width	Bucket Capacity (SAE heaped)	Bucket Weight	2.4m	2.9m	3.4m	4.0m	4.8m
1,000 mm	1.34 m ³	1,450 kg	○	○	○	○	○
1,200 mm	1.69 m ³	1,650 kg	○	○	○	○	○
1,500 mm	2.20 m ³	1,940 kg	○	○	○	○	○
1,600 mm	2.40 m ³	2,040 kg	○	○	○	○	□
1,800 mm	2.76 m ³	2,180 kg	○	○	○	□	△

SELECTION OF TRACK SHOES

Select suitable track shoes to match the operating conditions.

METHOD OF SELECTING SHOES

Confirm the category from the list of uses in Table 1, then use Table 2 to select the shoe.

Categories B and C are wide shoes, so there are limitations on their use. When using these shoes, check the precautions, then investigate and study fully the conditions of use to confirm that these shoes are suitable.

When selecting the shoe width, select the narrowest shoe possible that will give the required flotation and ground pressure. If a wider shoe than necessary is used, the load on the track will increase, and this will cause the shoes to bend, links to crack, pins to break, shoe bolts to come loose, and various other problems.

Table 1

Category	Use	Precautions when using
A	Rocky ground, riverbeds, normal soil	On rough ground with large obstacles such as boulders or fallen trees, travel at low speed.
B	Normal soil, soft ground	These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees. Travel at Hi or Mi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.
C	Extremely soft ground (swampy ground)	Use the shoes only in places where the machine sinks and it is impossible to use A or B shoes. These shoes cannot be used on rough ground where there are large obstacles such as boulders or fallen trees. Travel at Hi or Mi speed only on flat ground, and if it is impossible to avoid going over obstacles, shift down and travel at half speed in Lo.
D	Paved road	Take note of low gradeability due to the flat shoes and exercise a due care.
E	Paved road	Be sure to follow the instructions set forth in the "Handling of Road Liner" section for the protection of the rubber pad shoes.

Table 2

Types of track shoe

	PC450, 450LC-8	
	Specifications	Category
Option	600 mm Triple	A
Option	700 mm Triple	B
Option	800 mm Triple	C

RECOMMENDED ATTACHMENT OPERATIONS

Below described are instructions which must be followed without fail when doing the work using a hydraulic excavator equipped with an attachment.

NOTICE


Select the optimum model of attachment for a hydraulic excavator on which it is to be mounted. Depending on machine models of hydraulic excavator, the kind of attachments or the model of specific attachments that can be mounted will vary. Hence, consult your Komatsu distributor for the selection of optimum attachments.

HYDRAULIC BREAKER


Main Applications

- Crushed rock
- Demolition work
- Road construction


This attachment can be used for a wide range of applications including demolition of buildings, breaking up road surfaces or slag, tunnel work, rock crushing and breaking operations in quarries.

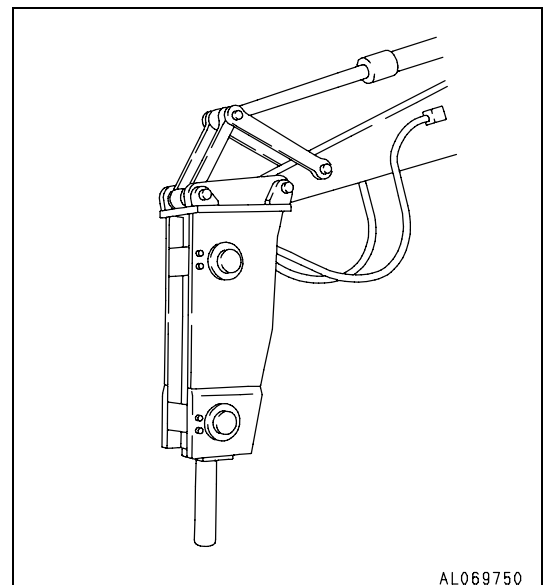


Keep the chisel pushed perpendicularly against the impact surface when carrying out breaking operations.

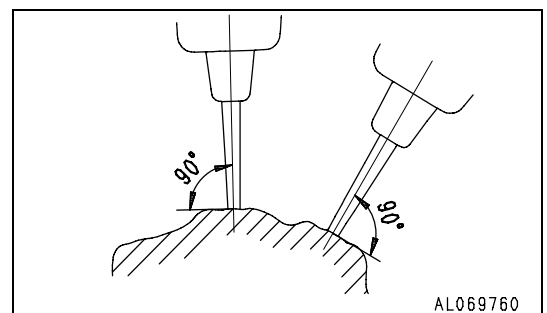


When applying impact, push the chisel against the impact surface and operate so that the chassis rises approx. 5 cm off the ground. Do not let the machine come further off the ground than this amount.

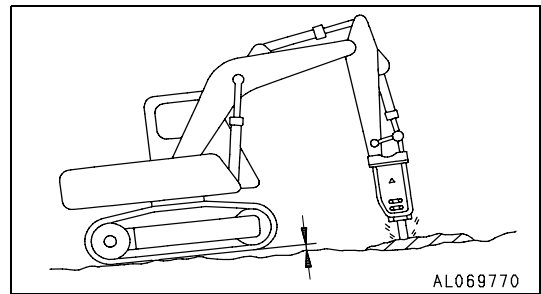


When applying continuous impact to the same impact surface, if the chisel does not penetrate or break the surface within 1 minute, change the point of impact and carry out breaking operations closer to the edge.

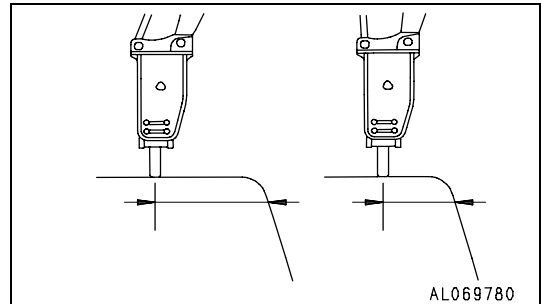

The direction of penetration of the chisel and the direction of the breaker body will gradually move out of line with each other, always adjust the bucket cylinder to keep them aligned.

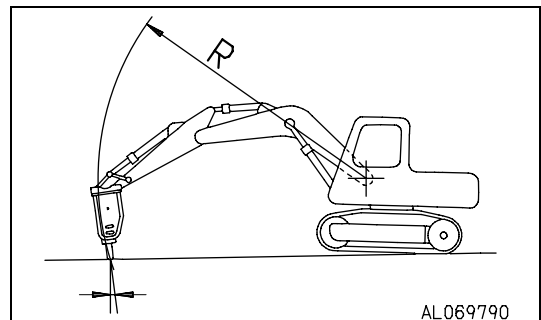

Always keep the chisel pressed against the impact surface properly to prevent using the impact force when there is no resistance.

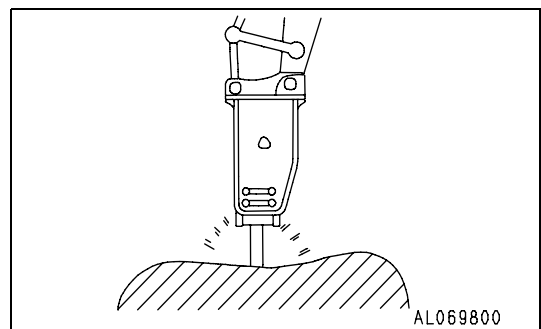


Prohibited Works


To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.

- Do not operate all cylinders to the end of their strokes. Always leave approx. 5 cm to spare.


Using the mount together in pieces of rock

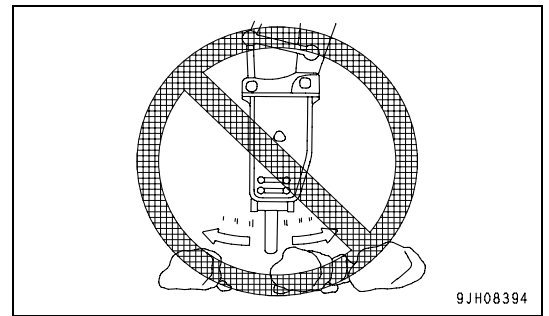


Operations using the swing force

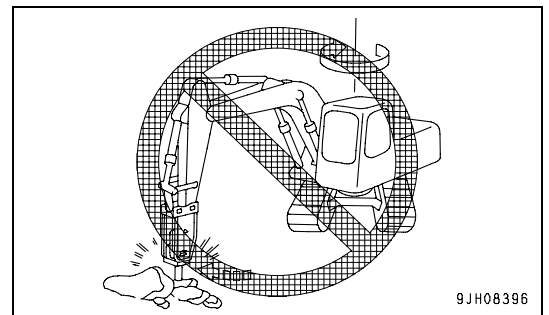


Moving the chisel while carrying out impacting operations

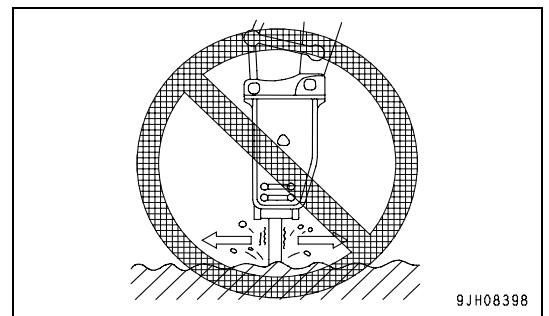


Holding the chisel horizontal or pointed up when carrying out impacting operations

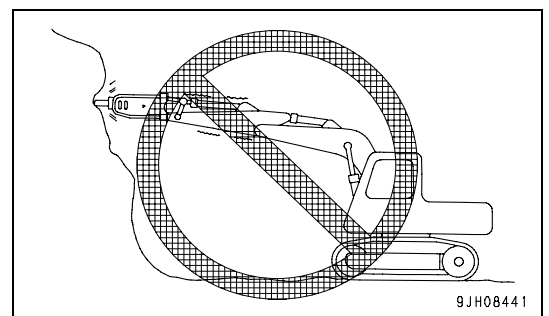


Twisting the chisel when it has penetrated the rock

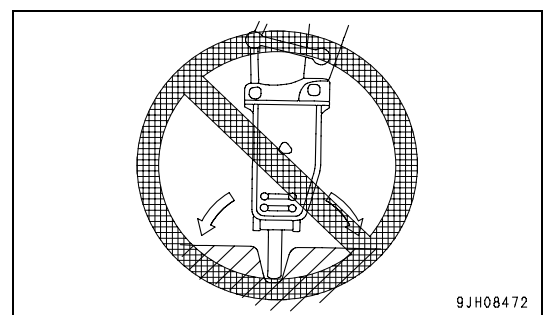

Pecking operations

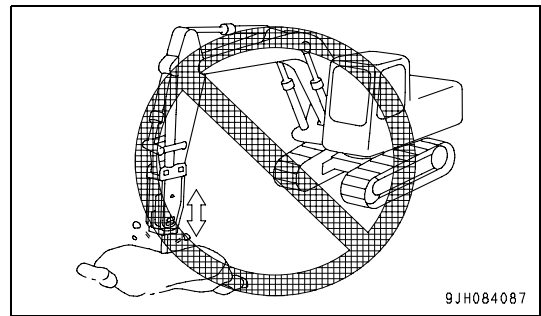


Extending the bucket cylinder fully and thrusting to raise the machine off the ground

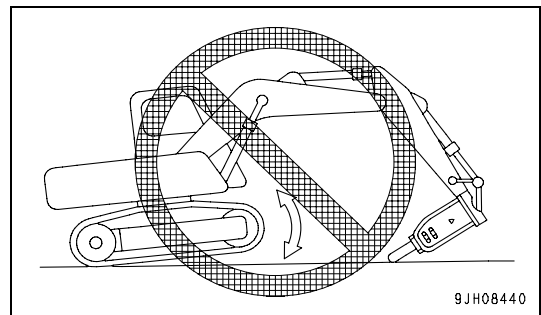



Greasing

Supply grease in the correct position.

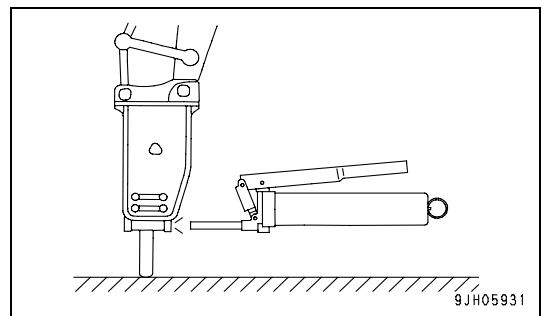

NOTICE

If the breaker is greased in an improper posture, it is filled with more grease than necessary. As a result, soil and sand will enter the hydraulic circuit and can damage the hydraulic components, while the breaker is in use. Therefore, be sure to grease the breaker, holding it in the right posture.

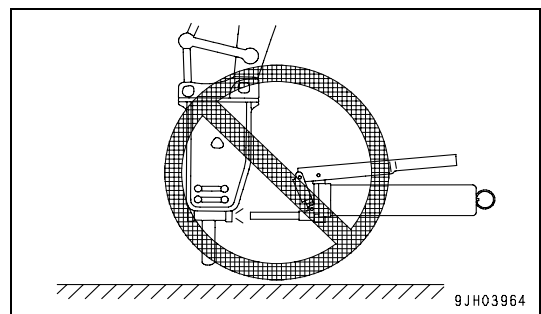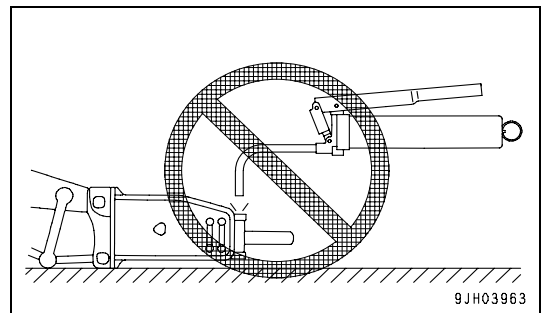

HANDLING MACHINES EQUIPPED WITH KOMTRAX

- KOMTRAX is a machine management system that uses wireless communications.
- A contract with your Komatsu distributor is necessary before the KOMTRAX system can be used. Any customers desiring to use the KOMTRAX system should consult their Komatsu distributor.
- The KOMTRAX equipment is a wireless device using radio waves, so it is necessary to obtain authorization and conform to the laws of the country or territory where the machine equipped with KOMTRAX is being used. Always contact your Komatsu distributor before selling or exporting any machine equipped with KOMTRAX.
- When selling or exporting the machine or at other times when your Komatsu distributor considers it necessary, it may be necessary for your Komatsu distributor to remove the KOMTRAX equipment or to carry out action to stop communications.
- If you do not obey the above precautions, neither Komatsu nor your Komatsu distributor can take any responsibility for any problem that is caused or for any loss that results.

BASIC PRECAUTIONS



WARNING

- **Never disassemble, repair, modify, or move the communications terminal, antenna, or cables. This may cause failure or fire on the KOMTRAX equipment or the machine itself. (Your Komatsu distributor will carry out removal and installation of KOMTRAX.)**
- **Do not allow cables or cords to become caught; do not damage or pull cables or cords by force. Short circuits or disconnected wires may cause failure or fire on the KOMTRAX equipment or the machine itself.**
- **For anyone wearing a pacemaker, make sure that the communications antenna is at least 22 cm from the pacemaker. The radio waves may have an adverse effect on the operation of the pacemaker.**


NOTICE

- **Even when the key in the starting switch of the KOMTRAX system is at the OFF position, a small amount of electric power is consumed. When putting the machine into long-term storage, take the action given in “LONG TERM STORAGE (3-187)”.**
- **Please contact your Komatsu distributor before installing a top guard or other attachment that covers the cab roof.**
- **Be careful not to get water on the communications terminal or wiring.**

The KOMTRAX system uses wireless communications, so it cannot be used inside tunnels, underground, inside buildings, or in mountain areas where radio waves cannot be received. Even when the machine is outside, it cannot be used in areas where the radio signal is weak or in areas outside the wireless communication service area. There is absolutely no need to inspect or operate the KOMTRAX communications terminal, but if any abnormality is found, please consult your Komatsu distributor.

SUPER LONG FRONT BOOM AND ARM

OPERATION INSTRUCTION

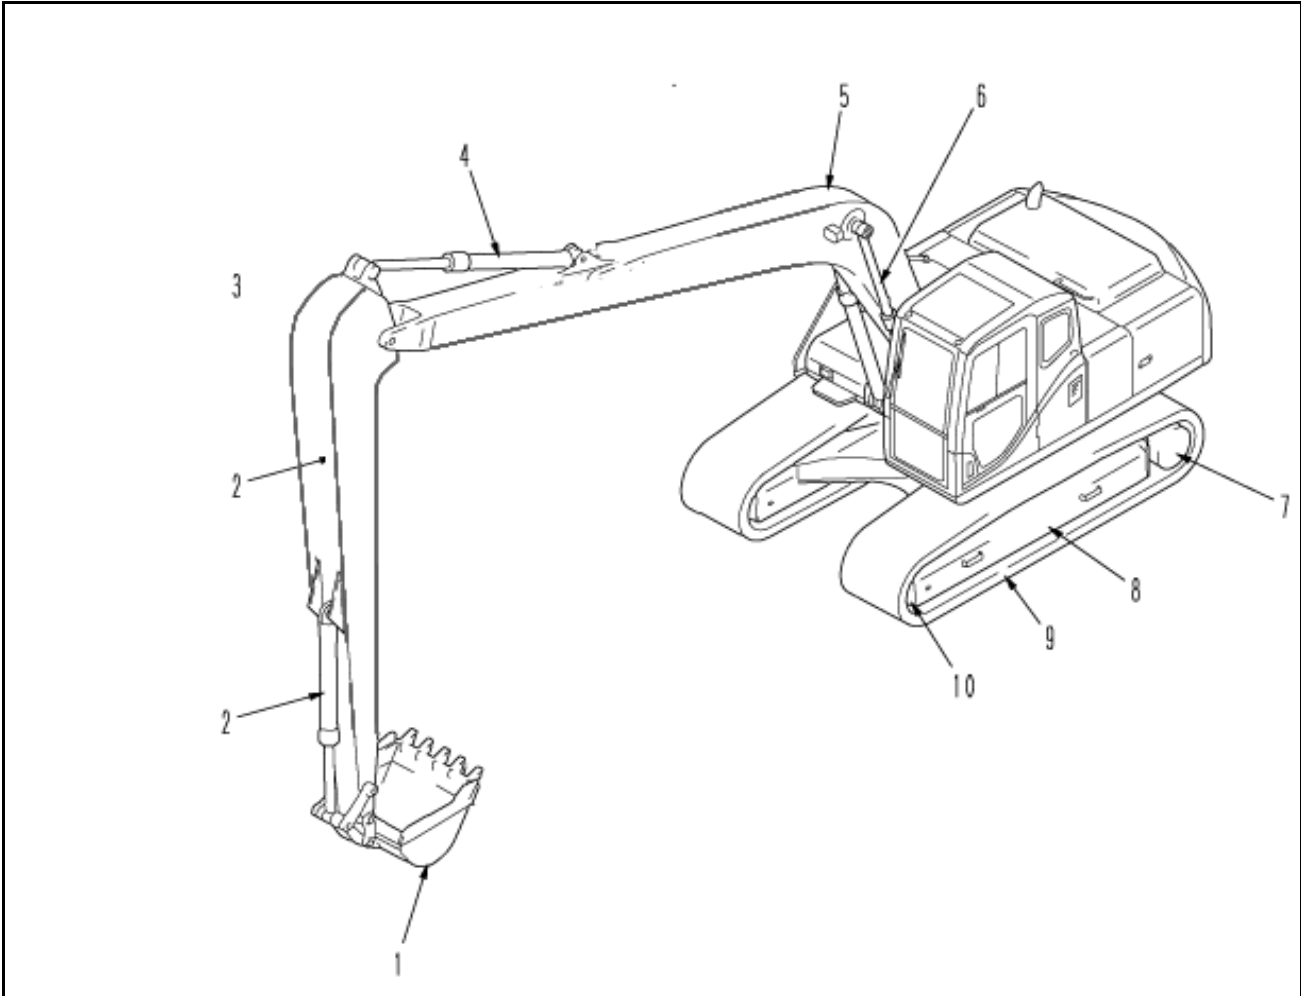

PC450LC - 8		
Track shoe (mm)	Operating weight (kg)	Ground pressure (kg/cm ²)
600mm		
700mm		
800mm		

PC450LC - 8	
Max Digging Reach (to bucket teeth) (mm)	20000

NOTE: Specifications are subject to change without notice.

WORKING MODES

The table gives an indication of the type of work and method of use recommended. Please follow these recommendations.

A. Type of work

R - Recommended work.

C - Work requiring caution.


N - Work that is not permitted.

Work	
1. Dredge rivers (specific gravity max 1.8)	R
2. Hauling, loading dry sand (sg max 1.8)	R
3. Digging, hauling piled soil (sg max 1.8)	R
4. Digging clay layers	C
5. Digging bank	C
6. Quarry work or digging bedrock	N

CHECKS BEFORE STARTING

To maximise safety when using the super long front machine and to identify any damage to the equipment early, carry out the following checks before starting the machine:

- Check daily for any loose nuts or bolts and tighten any that are found.
- Check daily for any oil leakage.
- Check all parts of the work equipment for any cracks, bending, buckling and play of the boom and arm. If any abnormality is found, contact your Komatsu distributor immediately. Locations for checking are shown below:

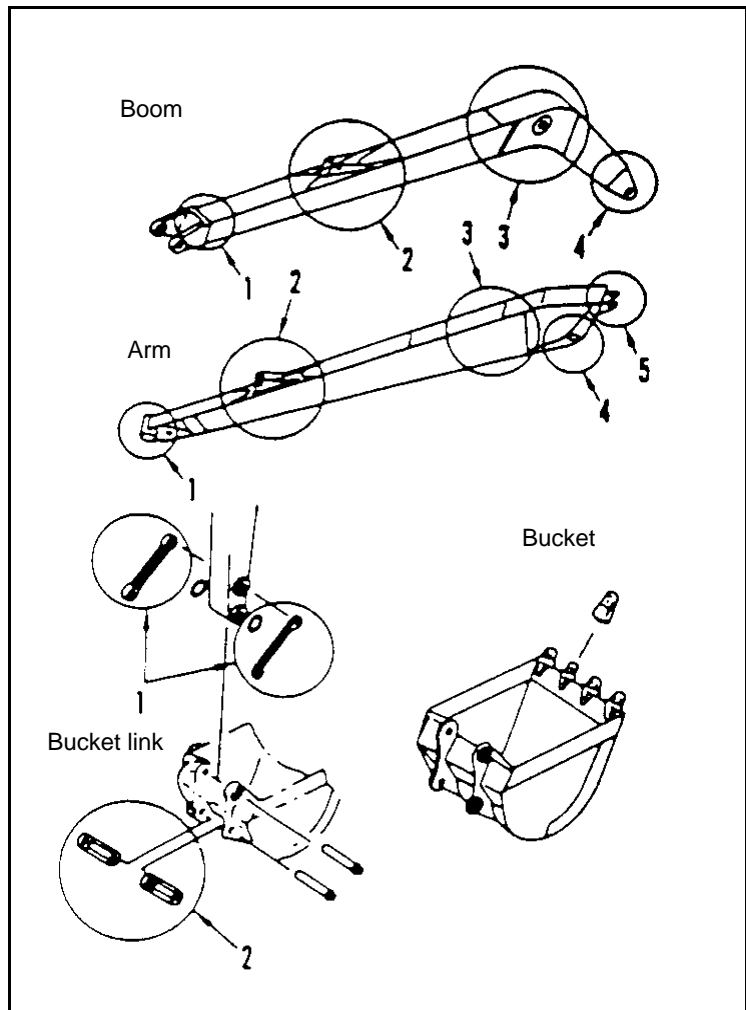

USING SUPER LONG FRONT

WARNING

NEVER slew the machine if no work equipment is fitted.

WARNING

Take care when raising the work equipment to its highest point. Make sure the machine is in a stable condition at all times.

 **CAUTION**

Always use low travel speed and avoid travelling over rough ground.

 **CAUTION**

Do not use the equipment so that the machine lifts off the ground.

 **CAUTION**

Check the stability of the long front machine carefully (left, right, front and rear) before starting work operations.

 **CAUTION**

Do not use the POWER MAX switch. Do not use in P mode.

 **CAUTION**

Do not bring any shock loading on the work equipment.

 **CAUTION**

Do not apply any side load to the bucket.

 **CAUTION**

Attachments like breakers and fork grabs may not be used.

 **CAUTION**

Use with engine throttle at 70-80% for ease of use and safety.

 **CAUTION**

Do not operate the super long front control levers in the same way as a standard excavator. The super long equipment has a higher inertia and will achieve higher velocities, causing wear and damage.

METHOD OF WORK

- Avoid operating the bucket cylinder and arm cylinder to the end of their stroke.
- Use for maximum specific gravity 1.8 tonnes/m³.
- Take care when using the super long front on soft ground. Ensure the ground has sufficient strength to support the weight of the machine with loaded bucket before commencing operations.
- Where possible, avoid using the super long front machine on slopes.
- Do not use this equipment for compacting slope faces.
- When travelling, lower the boom, pull in the arm, keep the work equipment parallel to the track and travel slowly.
- Do not use any bucket with a capacity greater than shown in this table:

Buckets which do not conform to this table must not be used.


Parameter	PC450LC - 8 20m
Max digging radius, mm	
● General Purpose Bucket, material density 1.8 ton/m ³	
● Capacity (SAE, m ³)	
● Width (mm)	
● Weight (kg)	
● General Purpose Bucket, material density 1.1 ton/m ³	
● Capacity (SAE, m ³)	
● Width (mm)	
● Weight (kg)	
● Powered attachment	
● Maximum weight at the end of the arm (kg)	
● Bucket	
● Maximum weight at the end of the arm (kg)	

Do not use any attachment which imposes vibration loading onto the equipment

WHEN TRAVELLING

- Lower the boom, pull in the arm, keep the work equipment parallel to the track and travel slowly.
- Never mount obstacles when travelling on rough ground. This may cause the machine to become unstable and overturn.

CONTROL LEVERS, PEDALS

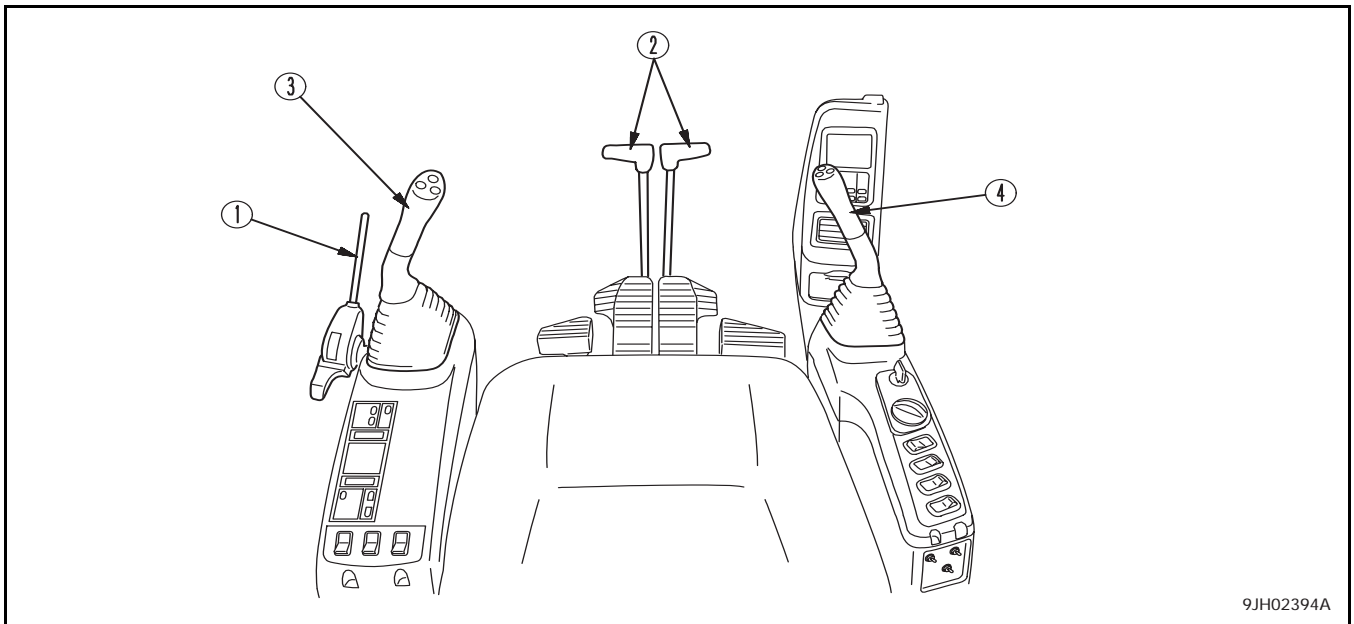

9JH02394A

- | | |
|--------------------------|----------------------------|
| (1) Safety Lock Lever | (3) Left Wrist Controller |
| (2) Travel Levers/Pedals | (4) Right Wrist Controller |


SAFETY LOCK LEVER (1)

 **WARNING**

- When leaving the operator's compartment, set the safety lock lever securely to the LOCK position. If the control levers are not locked, and they are touched by mistake, this may lead to a serious accident.
- If the safety lock lever is not placed securely in the LOCK position, the control levers may not be properly locked. Check that the situation is as shown in the diagram.
- When the safety lock lever is raised, take care not to touch the work equipment control lever. If the safety lock lever is not properly locked at the upper position, the work equipment and swing will move, creating a potentially dangerous situation.
- When the safety lock lever is lowered, take care not to touch the work equipment control lever.

This lever locks the work equipment, swing and attachment controls.

This lock lever is a hydraulic lock, so even if it is in the lock position, the work equipment control lever will move, but the work equipment and swing motor will not work.

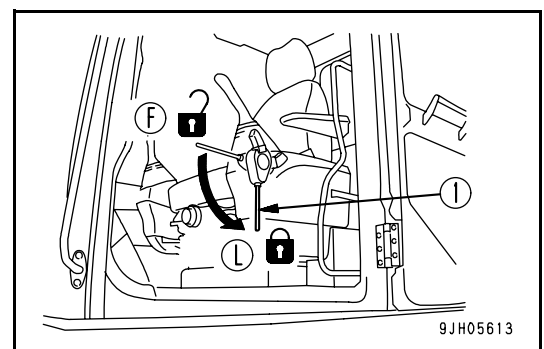


9JH05613

TRAVEL LEVERS (WITH PEDAL, AUTO-DECELERATION MECHANISM) (2)

⚠ WARNING

- Do not put your foot on the pedal unless the machine is travelling. If you leave your foot on the pedal and press it by mistake, the machine will move suddenly, and this may lead to a serious accident.
- With the track frame facing to the rear, the machine will move in the reverse direction by forward travelling and in the forward direction by reverse travelling.
- When the travel lever is used, check to see if the track frame is facing forward or backward. (If the sprocket is located to the rear, the track frame is facing forward.)

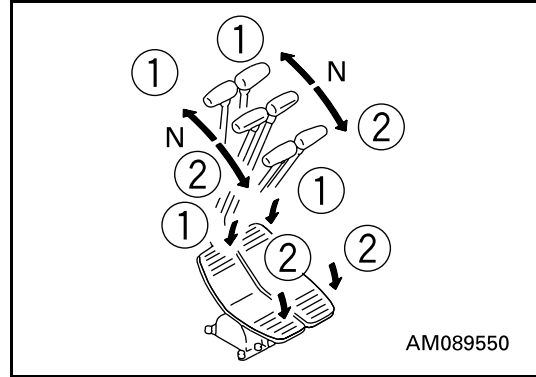

(1) FORWARD	(2) REVERSE
The lever is pushed forward	The lever is pulled back.
(The pedal is angled forward)	(The pedal is angled back)
N (Neutral): The machine stops	

() This indicates operation of the pedal.


LEFT WORK EQUIPMENT CONTROL LEVER (3)

(with auto-deceleration device)

! WARNING
 If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.

This lever is used to operate the arm and upper structure.

Arm operation	Swing operation
(A) Arm OUT	(C) Swing to right
(B) Arm IN	(D) Swing to left
N (Neutral)	

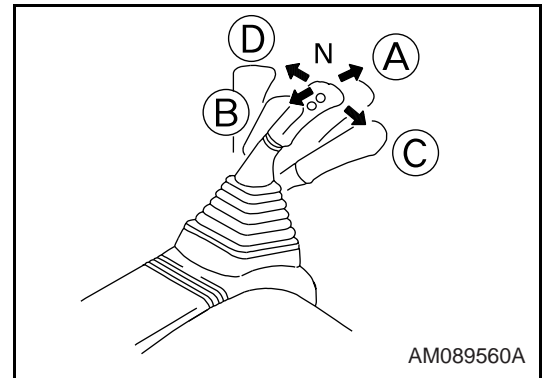

When the lever in Neutral (N) position, the upper structure and the arm will be retained in the position in which they stop.


RIGHT WORK EQUIPMENT CONTROL LEVER (4)

(with auto-deceleration device)

! WARNING
 If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.

This lever is used to operate the boom and bucket.

Boom operation	Bucket operation
(1) RAISE	(3) DUMP
(2) LOWER	(4) CURL
N (Neutral)	

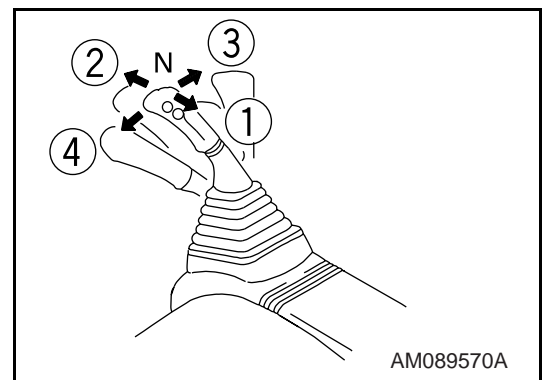

When the lever in Neutral (N) position, the boom and the bucket will be retained in the position in which they stop.

NOTICE

- For levers (2), (3) and (4), the engine speed changes as follows because of the auto-deceleration mechanism.
- When the travel lever and work equipment control levers are at neutral, even if the fuel control dial is above the mid-range position, the engine speed will drop to a mid-range speed. If any of the levers are operated, the engine speed will rise to the speed set by the fuel control dial.
- If all control levers are set to neutral, the engine speed will drop by approx. 100 rpm, and after approx. 4 seconds, the engine speed will drop to the deceleration speed (approx. 1400 rpm).



TRANSPORT & STORAGE OF SUPER LONG FRONT MACHINE

INSTALLATION OF SUPPORTING LINK


- For transportation or storage, always use the supporting link to secure the arm and boom as shown. This will help to prevent excessive force bearing on the boom and arm.
- Other precautions for transport and storage can be found in "TRANSPORTATION PROCEDURE" 3-169. of the standard machine manual.

Procedure for installing link

1. Lower the boom and extend the arm cylinder to set in the stow posture.
2. When the arm cylinder is almost at the end of the stroke, lower the boom slowly to bring the bucket or bucket link into light contact with the ground.
3. Remove the A end of the supporting link from the boom (held by a pin), then install it to the arm with the pin. When doing this, raise the boom slightly and retract the arm cylinder slightly from the end of its stroke (5 mm - 10 mm) to align the holes correctly.
4. It is dangerous to carry out this operation with the arm raised from the ground.

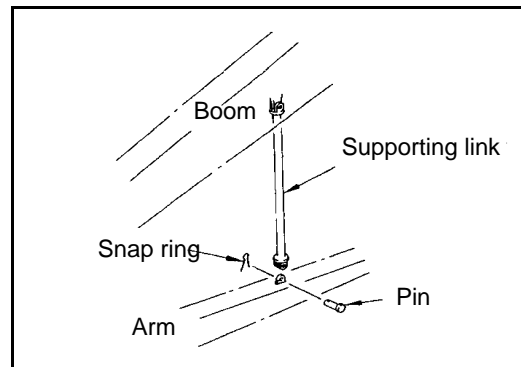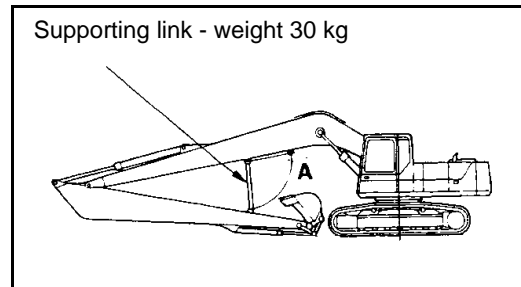

TRANSPORTATION OF SUPER LONG FRONT MACHINE



		PC450LC - 8 (20m super long front)
	Undercarriage type	LC
A	Overall shipping height (mm)	
B	Overall shipping length (mm)	
C	Transport length (mm)	
D	Track length (mm)	
E	Track length on ground (mm)	
F	Tail swing radius (mm)	
G	Machine tail height (mm)*	
H	Overall height of cab (mm)	

* to top of counterweight

WORKING RANGE OF SUPER LONG FRONT



		PC450LC - 8 (20m super long front)
A	Maximum digging height (mm)	
B	Maximum dumping height (mm)	
C	Maximum digging depth (mm)	
D	Maximum vertical wall digging depth (mm)	
E	Maximum digging depth for 2400mm level (mm)	
F	Minimum digging reach (mm)	
G	Maximum reach at ground level (mm)	
H	Minimum swing radius (mm)	
I	Maximum height of minimum swing (mm)	

LIFTING CAPACITY PC450 LC 20m SUPER LONG FRONT

⚠ WARNING

This table is provided for guidance only. The Super Long Front attachment is not intended for lifting operations. Do not exceed the maximum loading conditions described in the "METHOD OF WORK" section of this manual.

Data provided for PC450 LC 20m Super Long Front, with 800mm trackshoe including 450kg bucket.

A - Reach from swing centre

B - Bucket hook height


F - Rating over the front

S - Rating over the side

MAX - Rating at maximum reach

* - Limited by hydraulic capacity rather than rated stability.

Loads do not exceed 87% of hydraulic capacity or 75% of tipping capacity

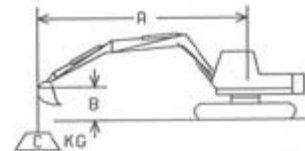

MAINTENANCE

SPECIAL SERVICE REQUIREMENTS FOR SUPER LONG FRONT WORK EQUIPMENT

 **CAUTION**

When working in water or in wet sand, use molybdenum lubricant (LM-P) for the grease.

 **WARNING**

NEVER slew the upper structure of a Super Long Front machine if the boom and arm have ben removed.

In addition to the standard service schedule, described in the main machine manual, the following servicing should be carried out:

SERVICE ITEM	Page
EVERY 50 HOURS SERVICE	
LUBRICATING	
1. Arm-Link coupling pin (1 point)	6-47
2. Arm-Bucket coupling pin (1 point)	6-47
3. Link coupling pin (2 points)	6-47
4. Bucket cylinder rod end (1 point)	6-47
5. Bucket-Link coupling pin (1 point)	6-47
CHECK EVERY 100 HOURS SERVICE	
LUBRICATING	
1. Arm cylinder foot pin (1 point)	6-48
2. Boom-Arm coupling pin (1 point)	6-48
3. Arm cylinder rod end (1 point)	6-48
4. Bucket cylinder foot pin (1 point)	6-49
5. Arm-link coupling pin (1 point)	6-49
6. Arm-bucket coupling pin (1 point)	6-49
7. Link coupling pin (2 points)	6-49
8. Bucket cylinder rod end (1 point)	6-49
9. Bucket-Link coupling pin (1 point)	6-49


EVERY 50 HOURS SERVICE

LUBRICATING


NOTICE

For the first 100 hours on new machines where the parts are setting in, carry out greasing every 10 hours.


1. Set the work equipment in the greasing posture on next page, then lower the work equipment to the ground and stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

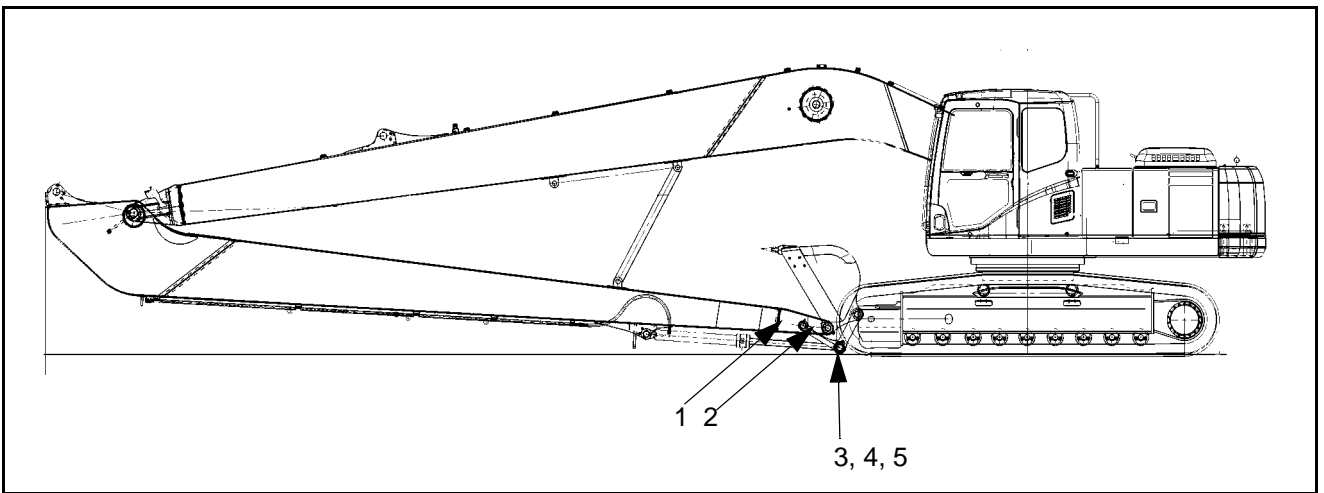

1. Arm -Link coupling pin (1 point)
2. Arm-Bucket coupling pin (1 point)

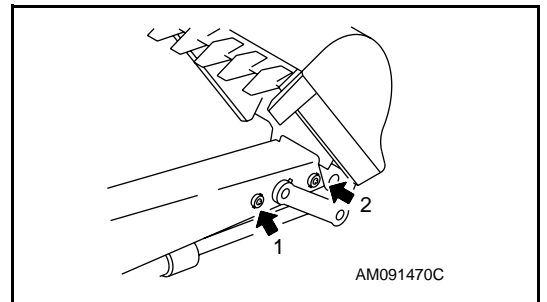

3. Link coupling pin (2 points)
4. Bucket cylinder rod end (1 point)
5. Bucket-Link coupling pin (1 point)

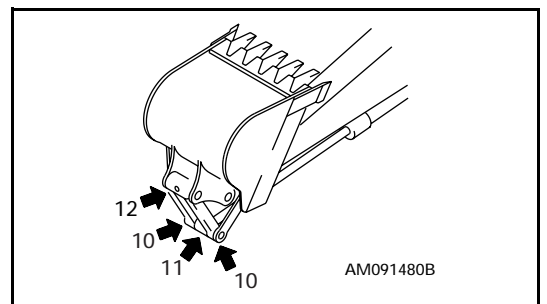


EVERY 100 HOURS SERVICE

LUBRICATING


The minimum greasing interval is 100 hours.

However, more frequent greasing will be required depending on conditions/environment

1. Set the work equipment in the greasing posture below, then lower the work equipment to the ground and stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

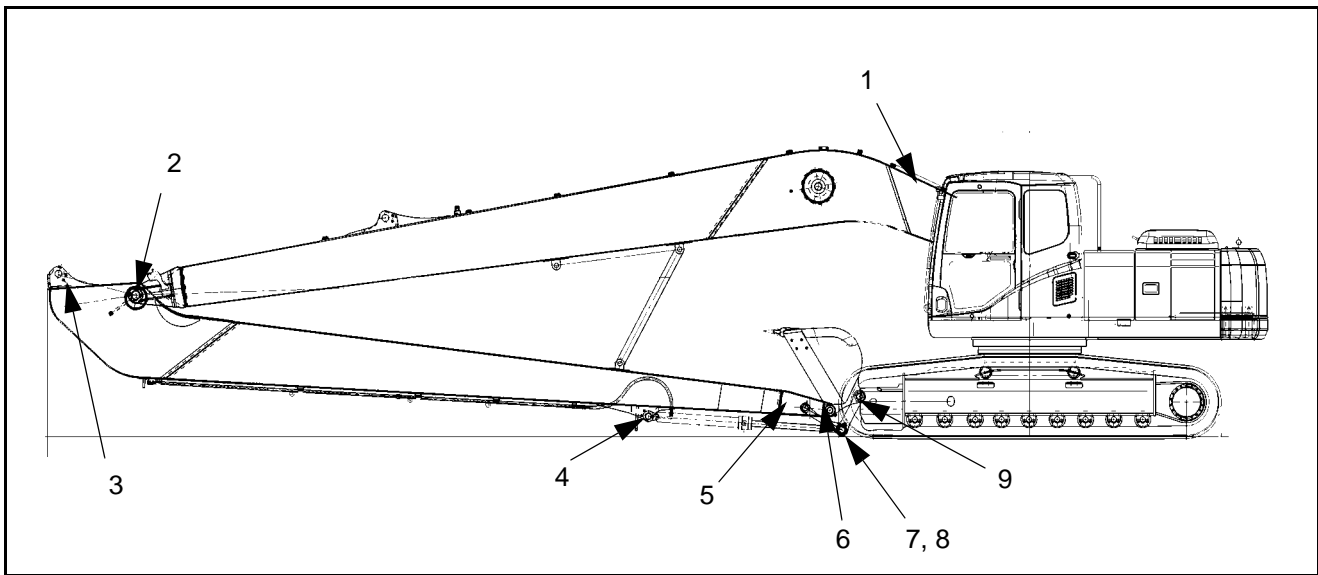


1. Arm cylinder foot pin (1 point)

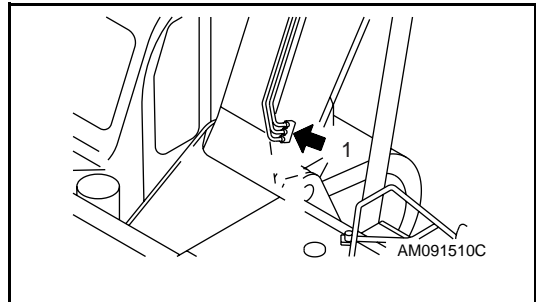


2. Boom-Arm coupling pin (1 point)


3. Arm cylinder rod end (1 point)

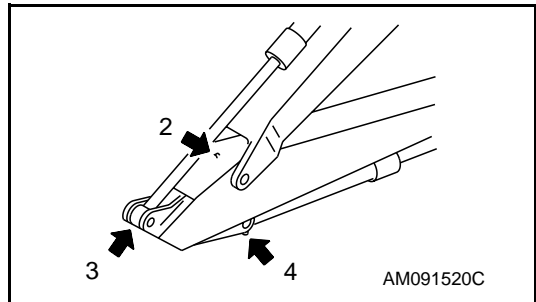

- 4. Bucket cylinder foot pin (1 point)
- 5. Arm-link coupling pin (1 point)
- 6. Arm-bucket coupling pin (1 point)

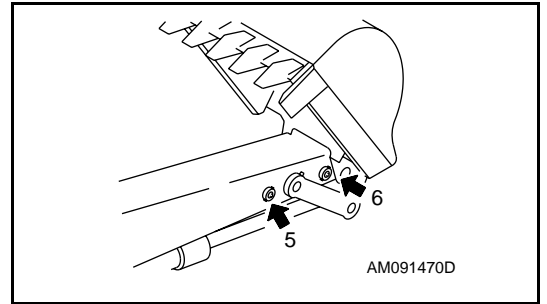

- 7. Link coupling pin (2 points)
- 8. Bucket cylinder rod end (1 point)
- 9. Bucket-Link coupling pin (1 point)

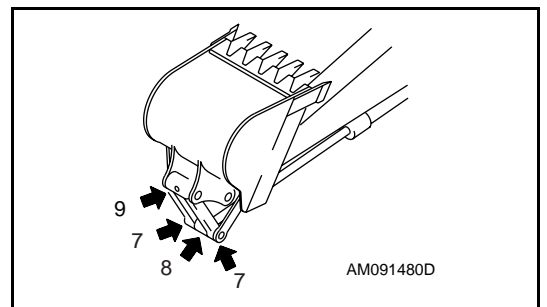

HIGH REACH DEMOLITION EQUIPMENT 27M




WARNING

Please read and make sure that you understand the safety volume of the standard machine operation and maintenance manual before reading this section.

This chapter describes only the High Reach Demolition machine. Therefore please refer to operation and maintenance section of the standard machine.

GENERAL VIEW OF MACHINE

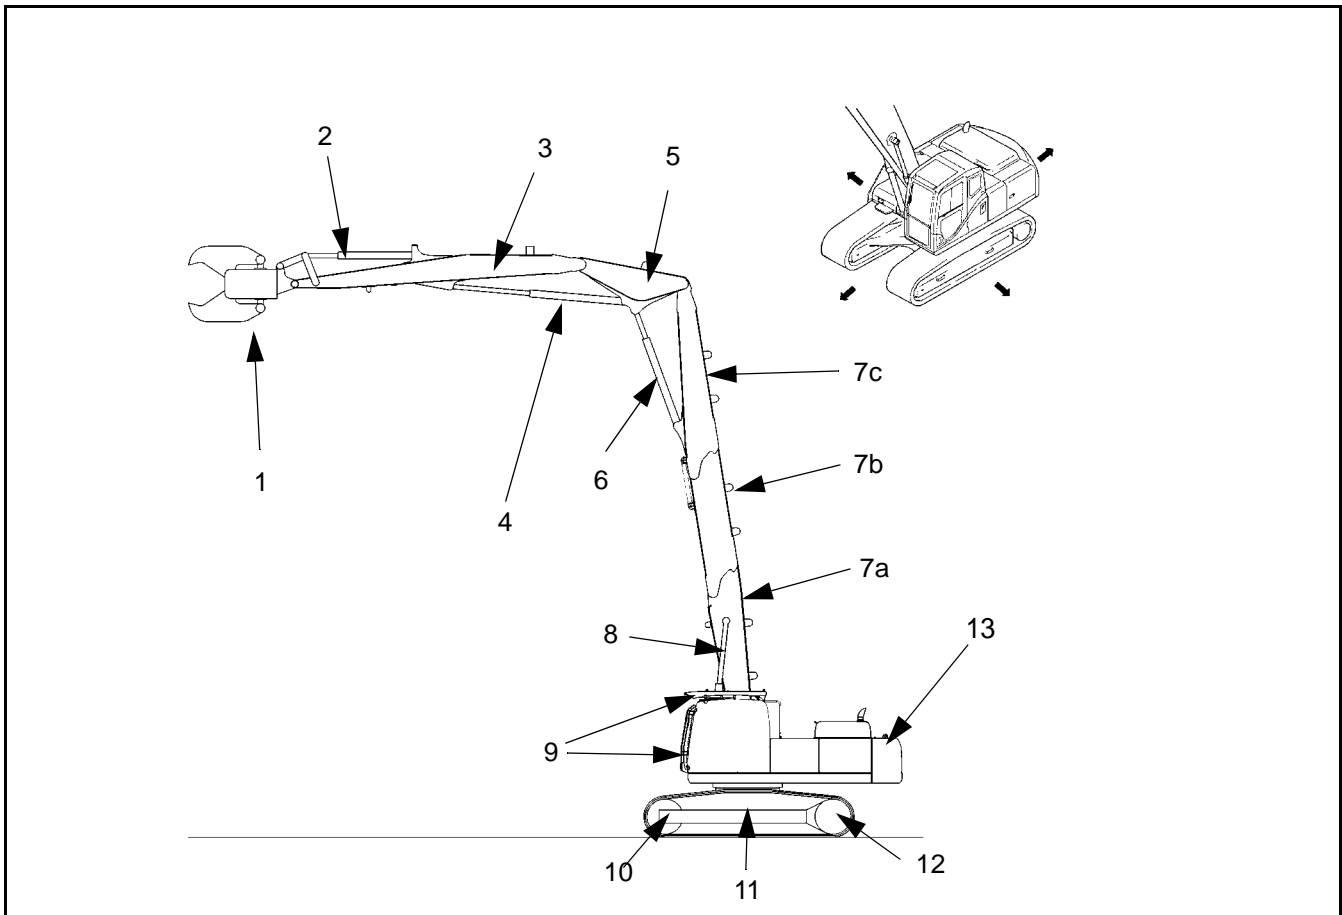

- | | |
|--------------------------------|-----------------------------------|
| (1) Attachment | (8) Boom cylinder (quantity: two) |
| (2) Bucket cylinder | (9) FOPS |
| (3) Arm | (10) Idler |
| (4) Arm cylinder | (11) Track frame |
| (5) Intermediate Link | (12) Sprocket |
| (6) Intermediate Link Cylinder | (13) Counterweight |
| (7) Boom (three sections): | |
| (7a) Boom 1 | |
| (7b) Boom 2 | |
| (7c) Boom 3 | |

CAUTION ITEMS

NOTICE

Refer to main machine manual for other Caution Items.



CAUTION

Do not use the Demolition machine for lifting operations.



CAUTION

Do not use Power Max function with High reach Demolition Equipment fitted.



CAUTION

The machine is not suitable for breaker use in any configuration. Do not use breaker mode, or breaker equipment.



CAUTION


If any lever is operated in the deceleration range, the engine speed will increase suddenly, so be careful when operating the levers.

POSITION FOR ATTACHING SAFETY LABELS

The following warning signs and safety labels are used on this machine.

- Be sure that you fully understand the correct position and content of labels.
- To ensure that the content of labels can be read properly. Be sure that they are in the correct place and always keep them clean. When cleaning them, do not use organic solvents or gasoline, there may cause the labels to peel off.
- There are also other labels in addition to the warning signs and safety labels. Handle those labels in the same way.
- If the labels are damaged, lost, or cannot be read properly, replace them with new ones. For details of the part numbers for the labels, see this manual or the actual label, and place an order with Komatsu distributor.

POSITION FOR ATTACHING SAFETY LABELS


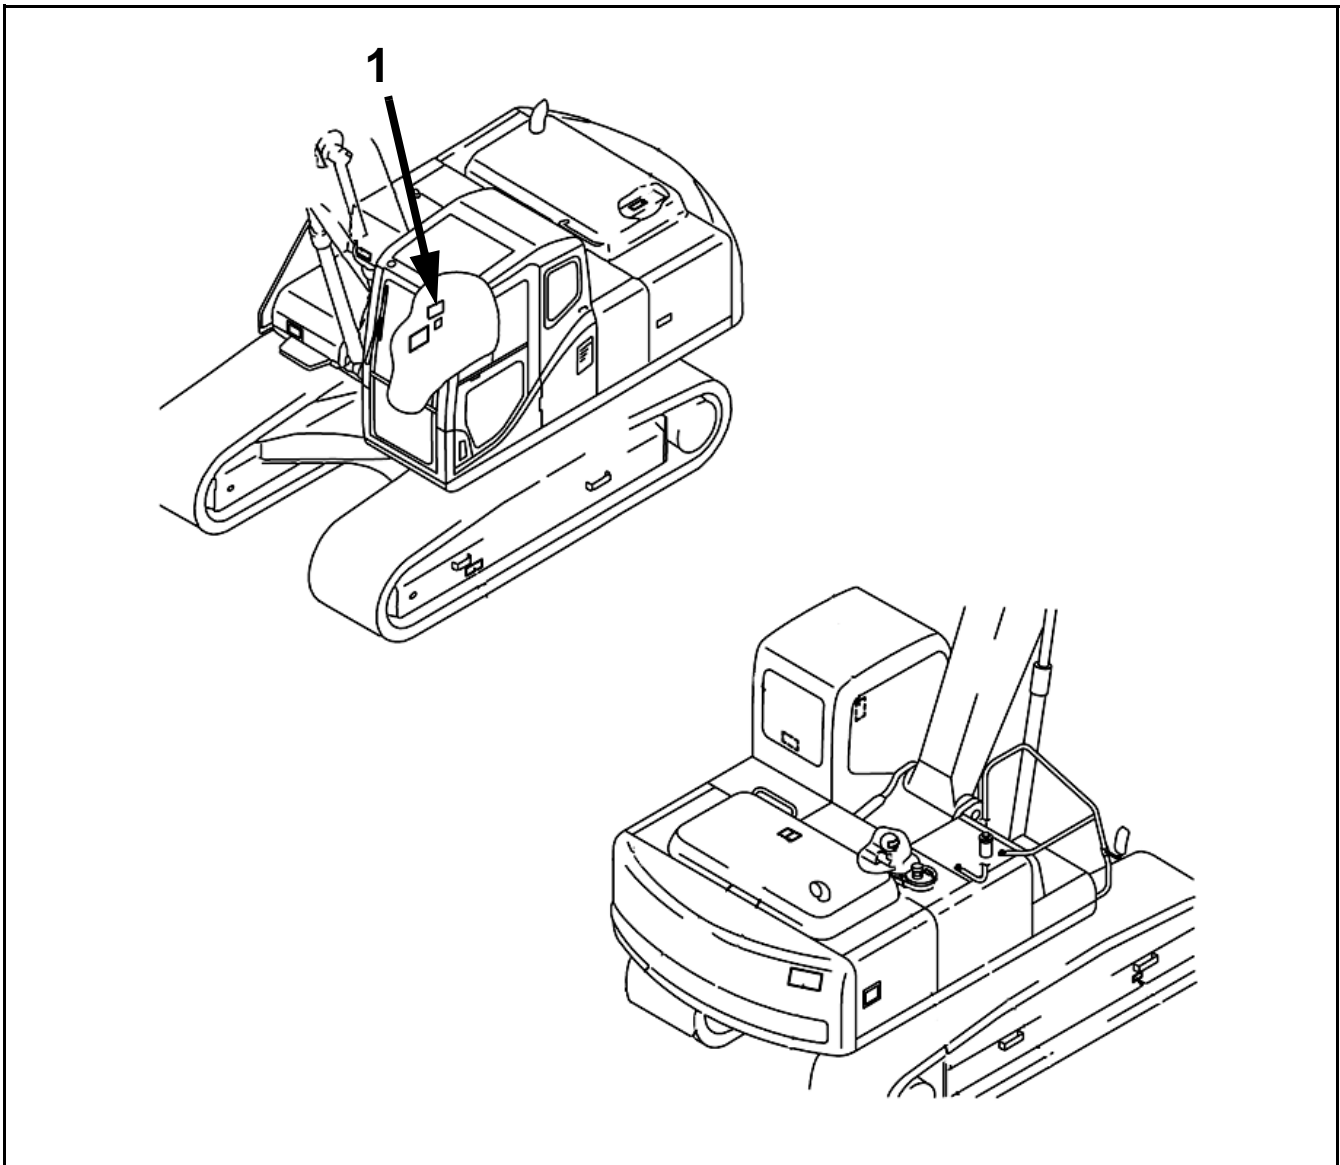


SAFETY LABELS


1. (208-00-KA110)

WARNING

- **Medium Reach Configuration (boom 2 removed).**
- **When the second boom is removed the attachment can hit the operator cab or chassis.**
- **Operate work equipment slowly and carefully to avoid any injury and damage.**

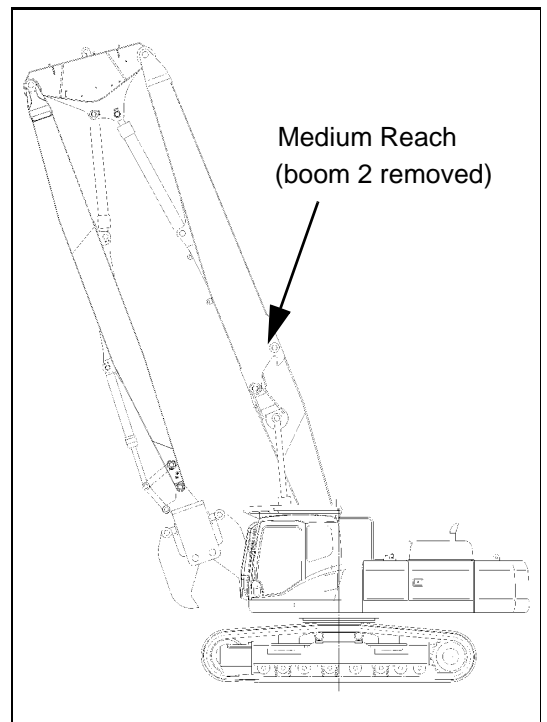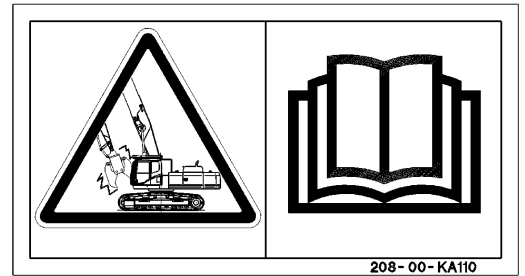

CONTROL LEVERS AND SWITCHES

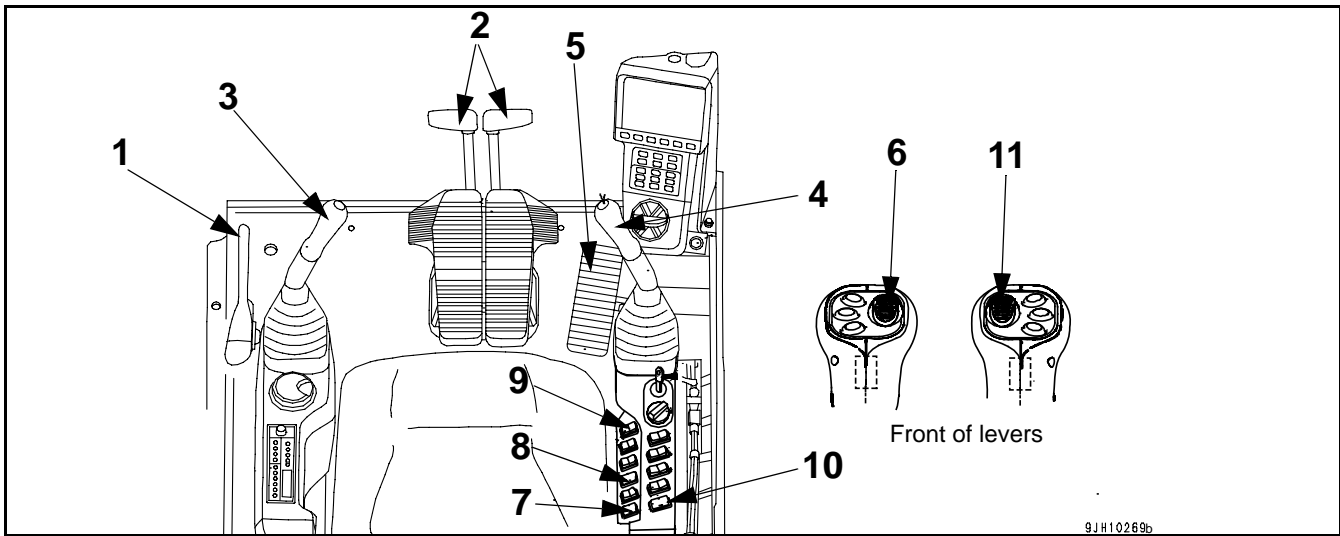

- | | |
|---|--|
| 1. Safety lock lever | 7. Tilting cab control button |
| 2. Travel levers and pedals | 8. Boom angle alarm cancel switch |
| 3. Left work equipment control lever | 9. High reach/standard configuration change switch |
| 4. Right work equipment control lever | 10. Roof wiper switch |
| 5. Mid link (high reach) 1ATT (DIG BOOM) | 11. Auxiliary crusher opening and closing (HCU-A) |
| 6. Auxiliary crusher rotation control (HCU-C) | |

SAFETY LOCK LEVER


WARNING

- When leaving the operator's compartment, set the safety lock lever securely to the LOCK position. If the safety lock lever is not at the LOCK position and the control levers are touched by mistake, it may lead to serious personal injury.
- If the safety lock lever is not placed securely at the LOCK position, the control lever may move and cause a serious accident or injury. Check that the condition of the lever is as shown in the diagram.
- When pulling the safety lock lever up, be careful not to touch the work equipment control lever.
- When pushing the safety lock lever down, be careful not to touch the work equipment control lever.

Lever (1) is a device, which locks the work, swing, and travel equipment, and attachment (if equipped) control levers.

Pull the lever up to apply the lock.


This lock lever is a hydraulic lock, so even if it is in the lock position, the work equipment control lever and travel lever will move, but the work equipment, travel motor, and swing motor will not work.

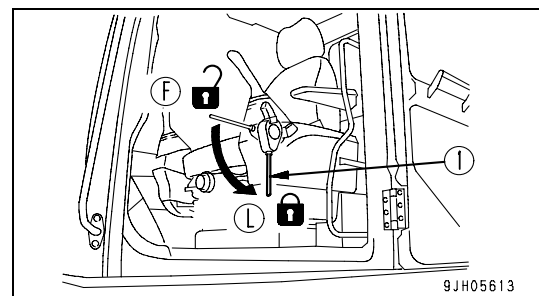

TRAVEL LEVERS

⚠ WARNING

- Do not put your foot on the pedal unless the machine is traveling. If you leave your foot on the pedal and press it by mistake, the machine will move suddenly, and this may lead to a serious accident.
- With the track frame facing to the rear, the machine will move in the reverse direction by forward traveling and in the forward direction by reverse traveling. When the travel lever is used, check to see if the track frame is facing forward or backward. (If the sprocket is located to the rear, the track frame is facing forward.)
- Be extremely careful when using the pedal for operations and travel, especially with High Reach Equipment fitted.
- Pay particular care to height limitations and machine stability.
- With High Reach Equipment fitted, only travel in the posture shown.
- Only use Lo speed mode for travel with High Reach Equipment fitted.

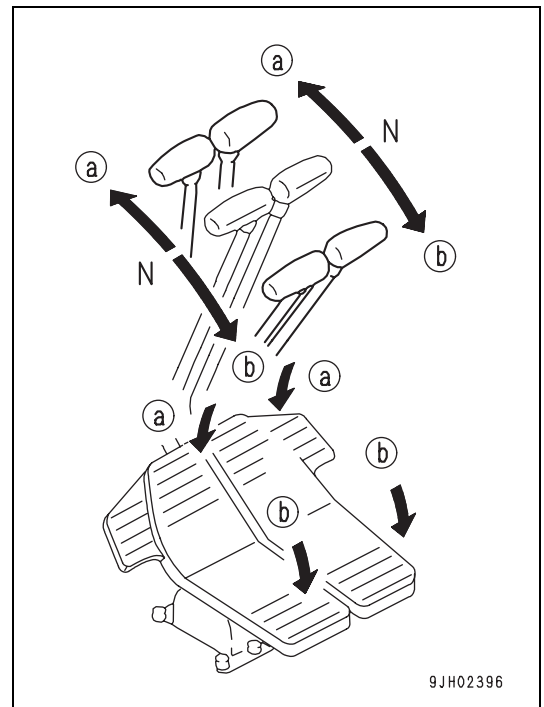

This lever (2) is used to switch the direction of travel of the machine. () shows the operation of the pedal.

(a) FORWARD:

The lever is pushed forward
(The pedal is angled forward)

(b) REVERSE:


The lever is pulled back
(The pedal is angled back)

N (Neutral): The machine stops

() : This indicates operation of the pedal.

REMARK

- Machines equipped with travel alarm (If equipped)
If the lever is shifted to the advance or reverse position from the neutral position, the alarm sounds to warn that the machine is starting to advance.
- The travel lever can use the auto-deceleration mechanism to change the engine speed as follows.
- When the travel lever and work equipment control levers are at the neutral position, even if the fuel control dial is above mid-range speed, the engine speed will go down to a mid-range speed. If one of these levers is operated, the engine speed will rise to the speed set by the fuel control dial.
- If all the control levers are at the neutral position, the engine speed goes down approx. 100 rpm, then after approx. 4 seconds, the engine speed goes down to the deceleration speed (approx. 1400 rpm).

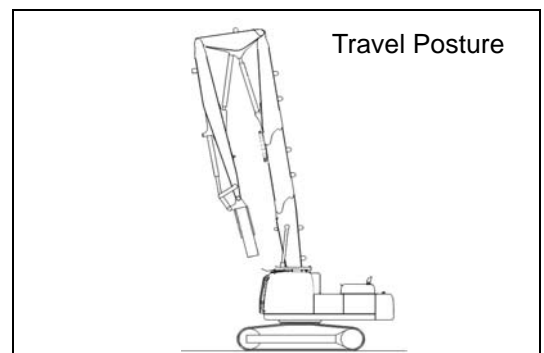

WORK EQUIPMENT CONTROL LEVERS


(with auto-deceleration device)

This Left work equipment control lever (3) is used to operate the arm and upper structure.

Arm operation / Swing operation

- (a) Arm OUT
- (b) Arm IN
- (c) Swing to right
- (d) Swing to left

N (Neutral): The upper structure and arm are held in position and do not move.

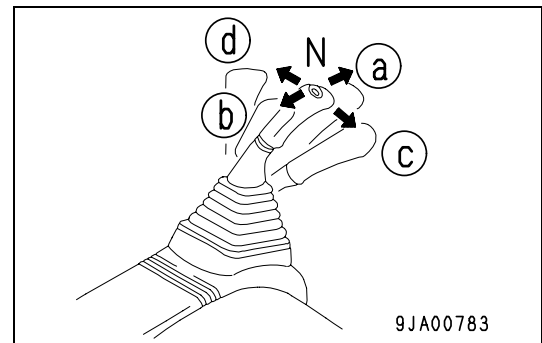

When High Reach Equipment is fitted, the Shift button (7) is used together with the left attachment control pedal (6) to control the Intermediate Link operation.

This Right work equipment control lever (4) is used to operate the boom and bucket. For machines fitted with hydraulic variable gauge undercarriage the right control lever also operates the undercarriage adjustment (in undercarriage adjustment mode)

Boom operation / Bucket operation


- (a) RAISE
- (b) LOWER
- (c) DUMP
- (d) CURL

N (Neutral): The boom and bucket are held in position and do not move.

Hydraulic variable gauge undercarriage mode

- (c) Undercarriage wider
- (d) Undercarriage narrower


N (Neutral) : Undercarriage is held in position and does not move

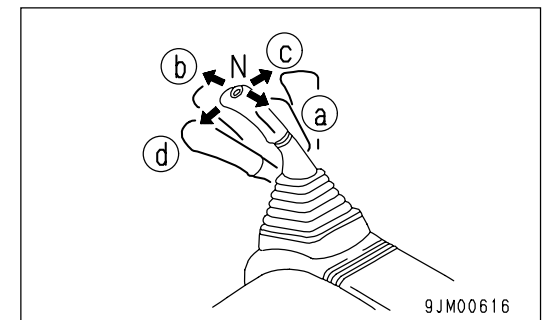

REMARK

- The engine speed for all control levers (travel, work equipment, attachment) is changed as follows by the auto-deceleration mechanism.
- When the travel lever and work equipment control levers are at the neutral position, even if the fuel control dial is above midrange speed, the engine speed will go down to a midrange speed. If one of these levers is operated, the engine speed will rise to the speed set by the fuel control dial.
- If all the control levers are at the neutral position, the engine speed goes down approx. 100 rpm, then after approx. 4 seconds, the engine speed goes down to the deceleration speed (approx. 1400 rpm).

ATTACHMENT ROTATION (with auto-deceleration)

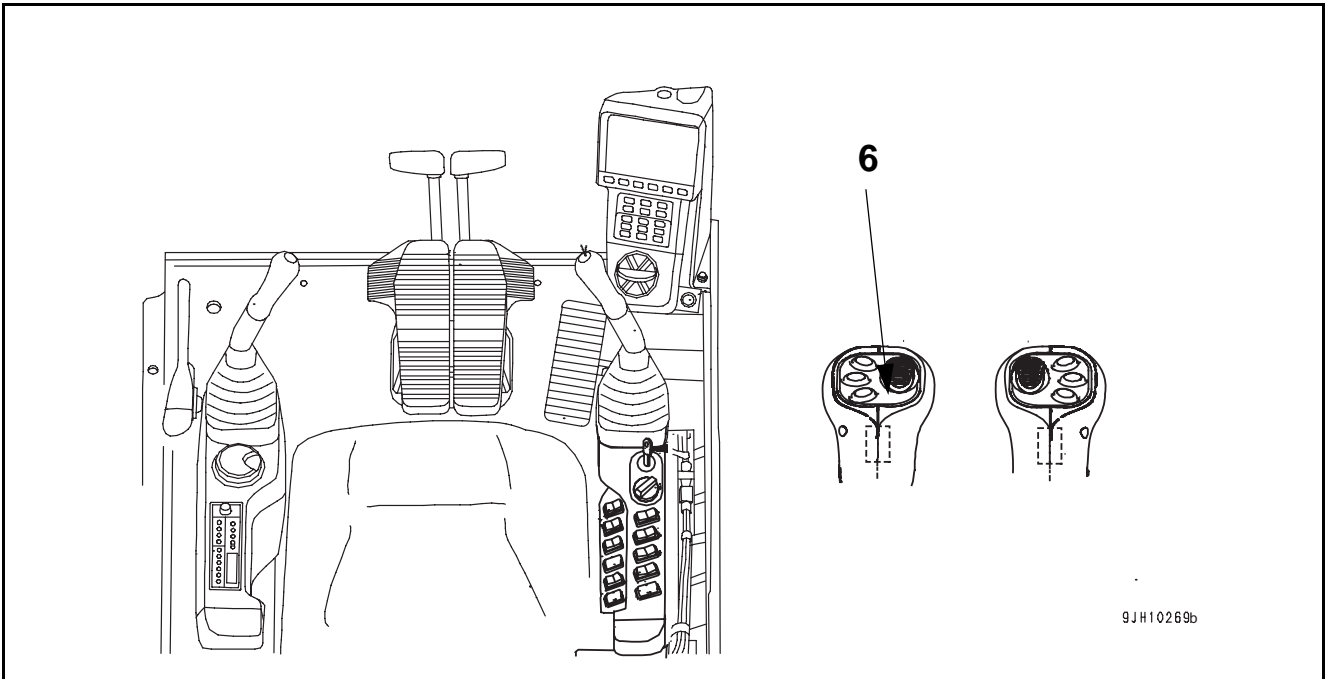

- Attachment rotates when the button (6) is operated forward or backward. Direction of rotation depends upon the type of crusher fitted.

Standard motion:

Operate switch forwards - attachment rotates clockwise

Operate switch backwards - attachment rotates anti clockwise


(A) The direction of rotation depends on the crusher.


Breaker Use

⚠ WARNING

The machine is not suitable for breaker use in any configuration. Do not use breaker mode, or breaker equipment.


See main machine operating manual for operation with breaker.

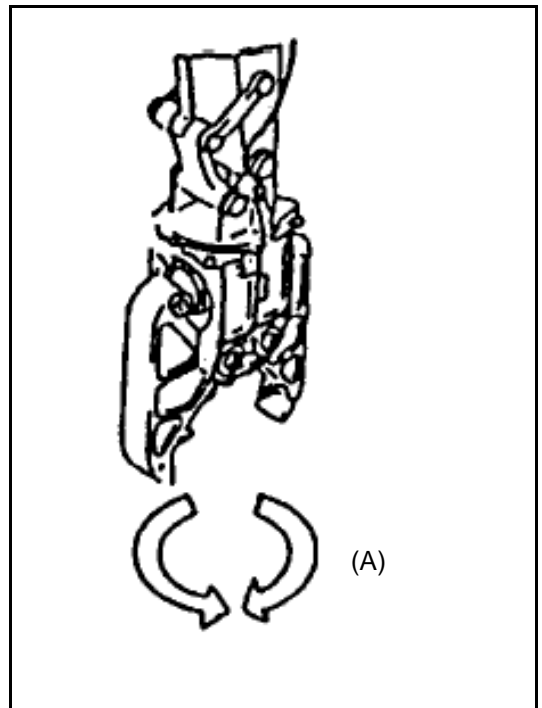

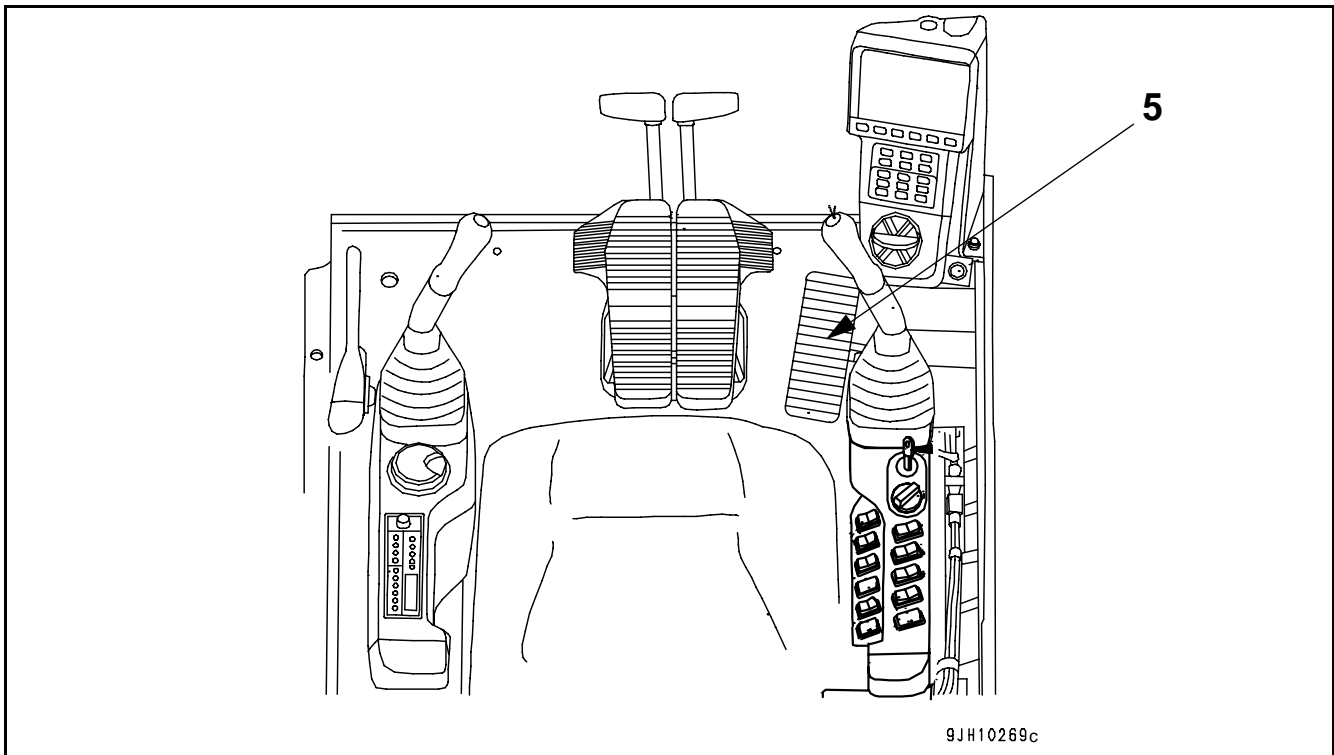
INTERMEDIATE LINK CONTROL PEDAL (with auto-deceleration)**⚠ WARNING**

- If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.
- Do not put your foot on the pedal except when operating it. If you rest your foot on the pedal during operations, and you depress the pedal by mistake, the crusher may move suddenly and cause serious damage or injury.

- Intermediate Link moves when the pedal (5) is depressed.
- When depressing pedal, intermediate link moves.
Depressing front: Link out
Depressing rear: Link in
- Screw lock pin into hole in pedal to lock (pedal is disabled).
Unscrew completely to unlock).

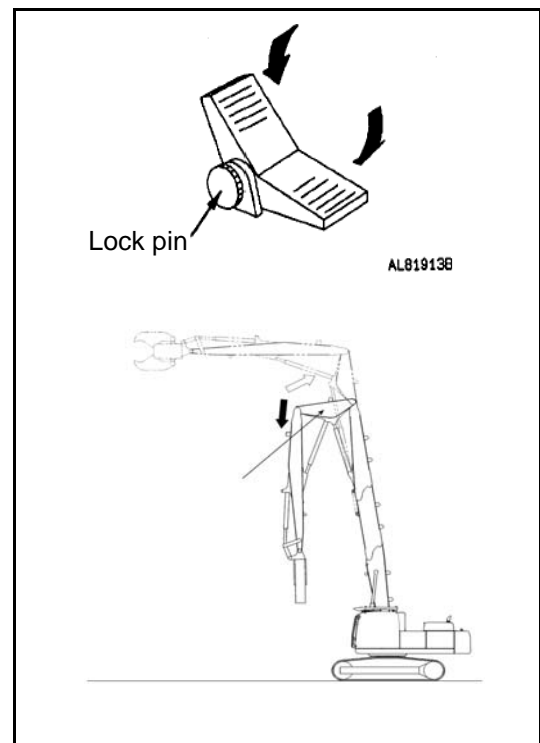


CRUSHER CONTROL FOR OPENING AND CLOSING

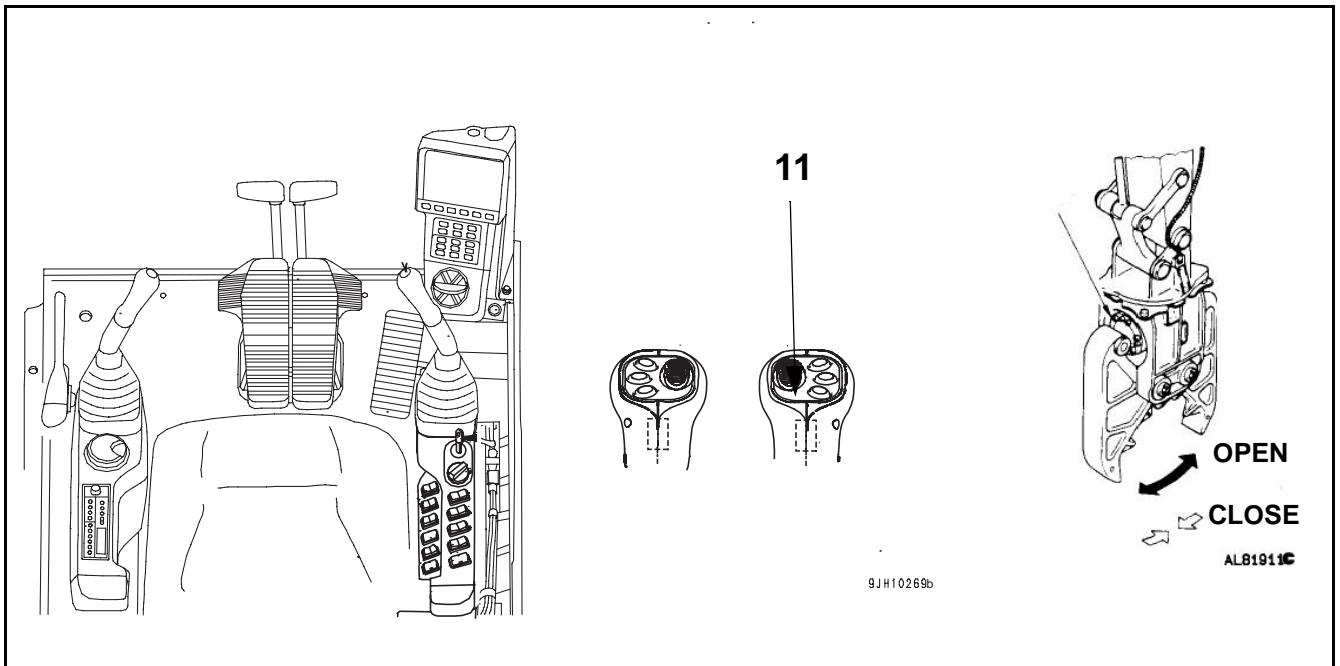


⚠ WARNING

If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.

- When the proportional control switch (11) is operated forward, the attachment is actuated in forward direction. When the rear of the switch is operated, the attachment is actuated in reverse direction.

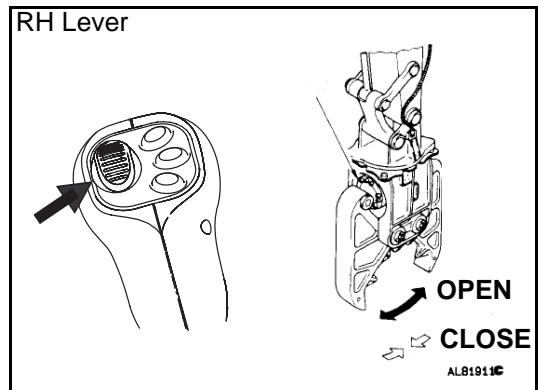

TILTING CAB MECHANISM OPERATION

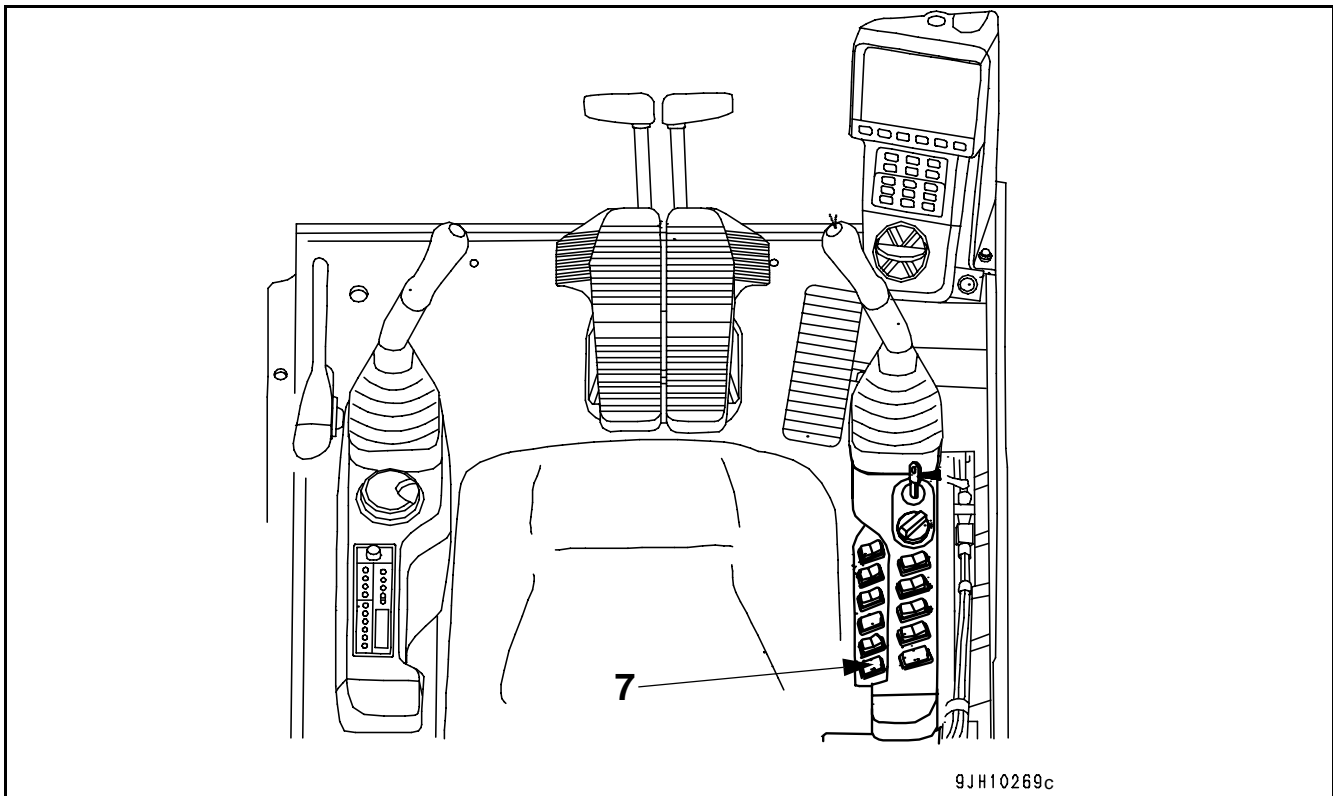

WARNING


- Do not attempt to enter or leave the cab while it is in the raised position, or while the cab is moving.
- Do not operate any other hydraulic equipment (travel, work equipment etc.) while operating the tilting mechanism.
- Make sure that the cab door is shut correctly before starting a raise or lower movement of the cab.
- Always ensure that no-one is near the cab when the cab is raising or lowering.
- Before tilting the cab up or down, make sure that there are no loose objects stored in the cab which may fall. This could cause obstruction to control or injury to the operator.

The raise/lower operation of the cab is activated by push button (7) located in the panel in front of the driver (lower section, right side)

To raise the cab press the upper end of switch (7).

To lower the cab press the lower end of switch (7).

To stop movement of the cab, release switch (7).

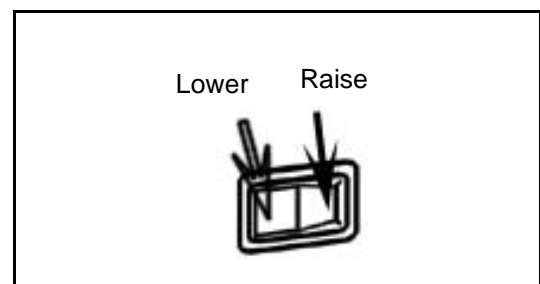



BOOM ANGLE ALARM BUZZER CANCEL SWITCH

⚠ WARNING


When carrying out checks before starting, check that the alarm buzzer sounds.

This machine is equipped with an alarm buzzer to ensure that operations can be carried out in safety. The buzzer will only sound if switch (9) is in 'DLF' mode.

- If the boom goes outside the hatched range (the red range on the boom angle gauge), the alarm buzzer will sound. If this happens, raise the boom to bring the boom angle indicator inside the green range. The alarm buzzer will then stop.
- The buzzer is fitted with a stop switch (8), but never turn this switch off during operations.

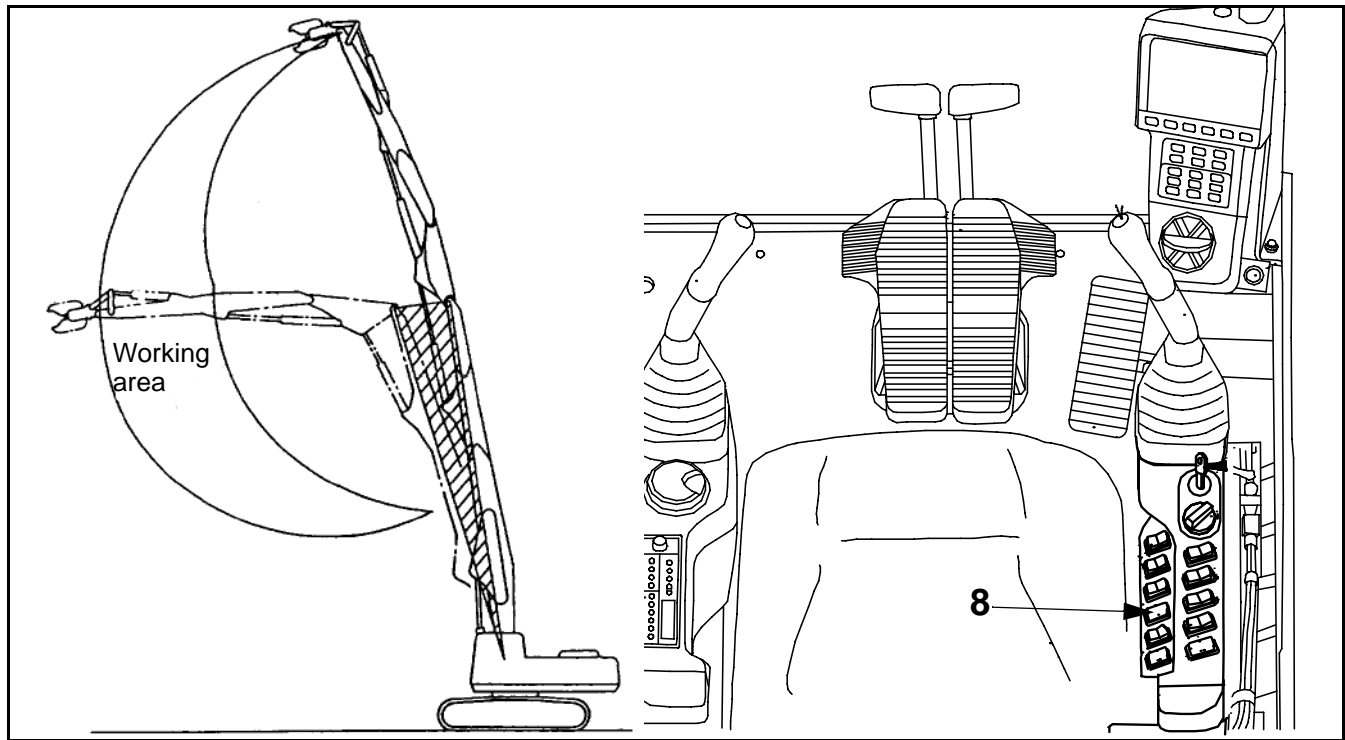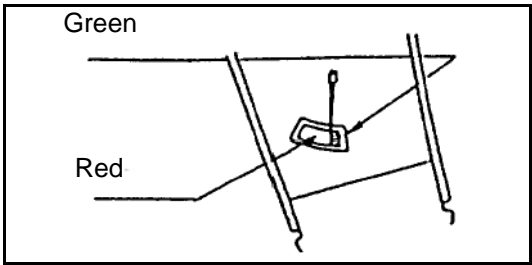


CEILING WINDOW WIPER SWITCH

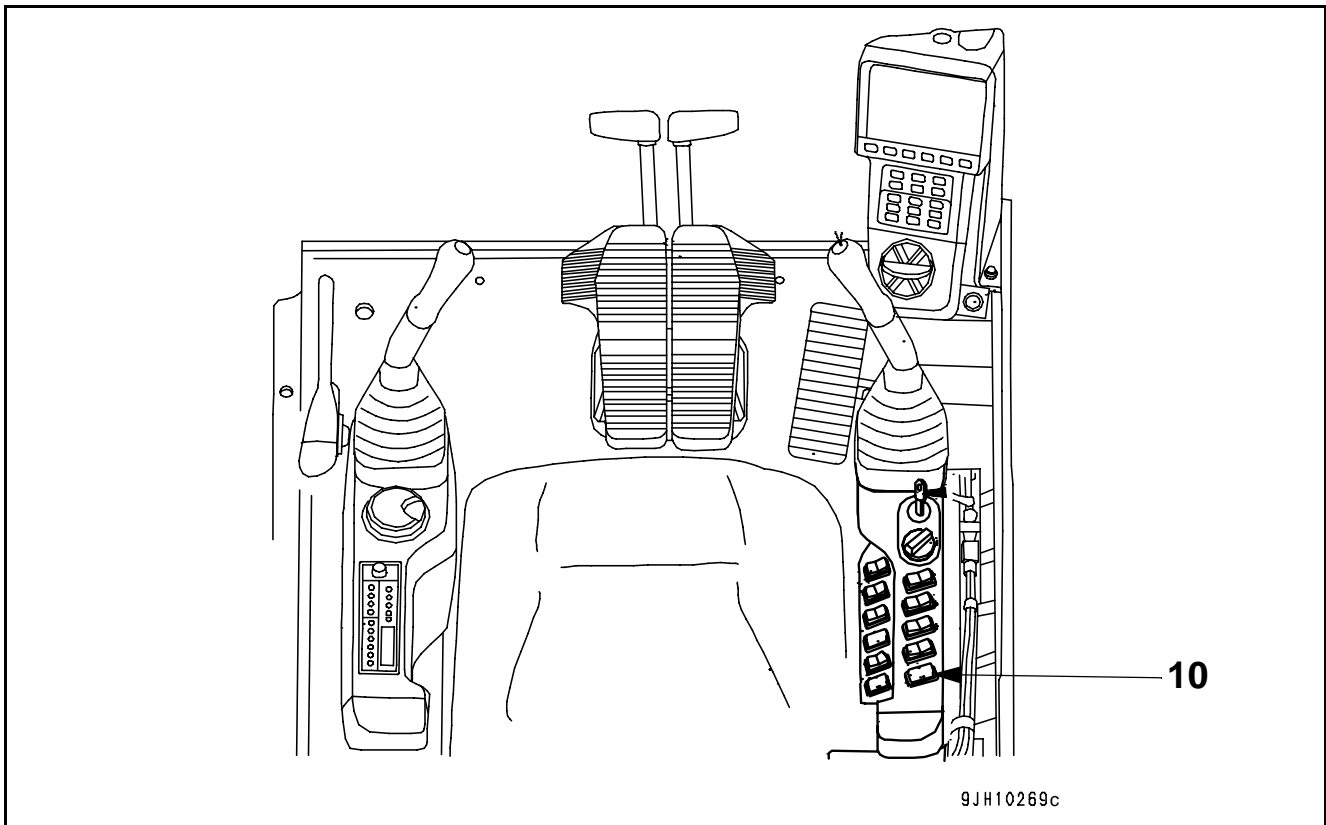


Roof Wiper Switch

This switch (8) is used to turn on the roof wiper and to operate the washer. The switch has 3 positions:

- (a) ON: is with the rear end of the switch down. The wiper is on.
- (b) ON: is with the rear end of the switch pressed and held down. The wash/wipe is on.
- (c) OFF: The wiper/washer system is off.

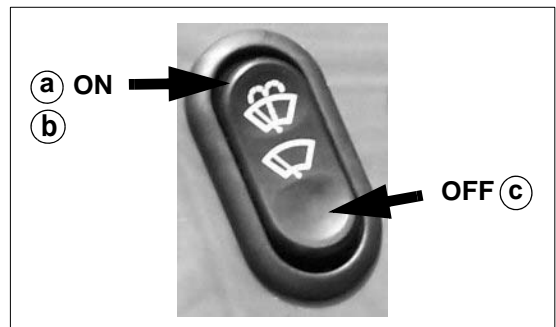

- 1. Nozzle
- 2. Ceiling window
- 3. Ceiling wiper

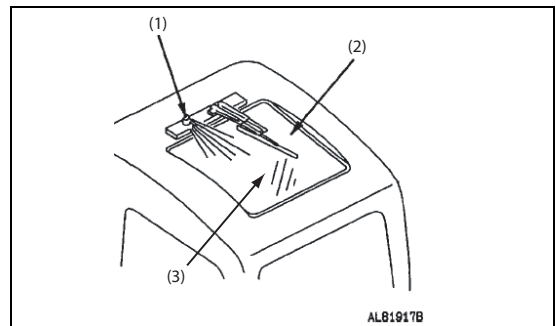


MACHINE OPERATIONS AND CONTROLS

BEFORE STARTING ENGINE

Always carry out the following inspection and maintenance before starting work each day.

- Greasing

Supply grease to the greasing points shown in the diagram.

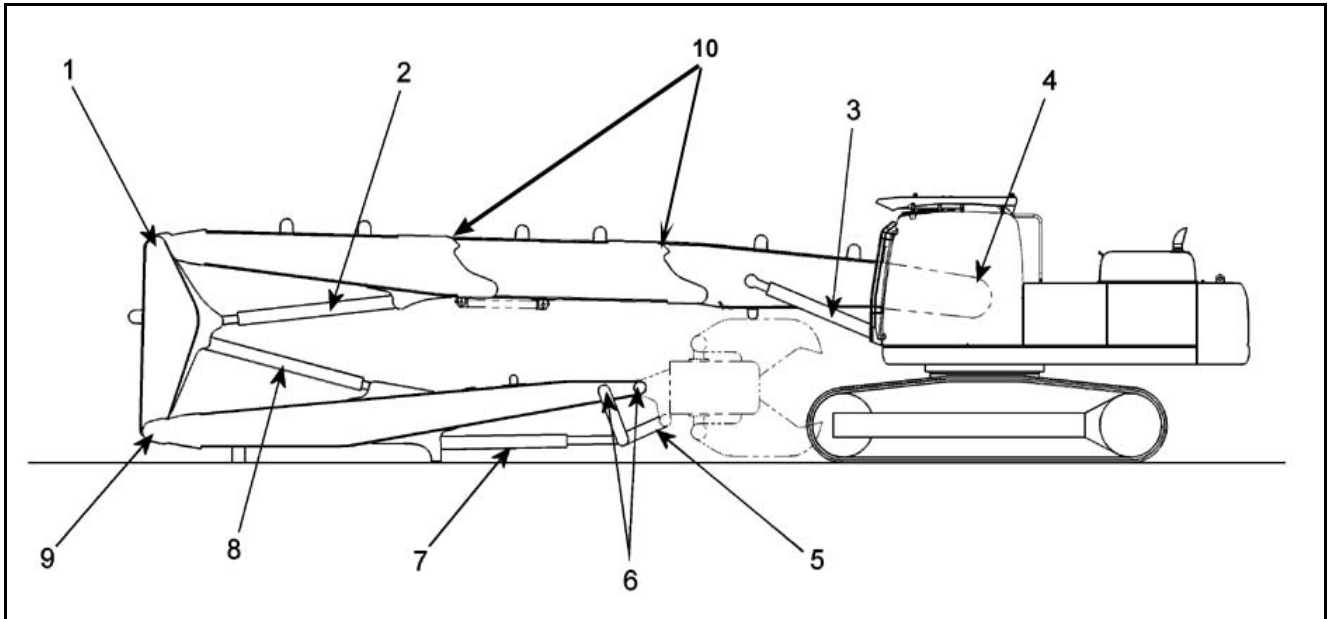

- | | |
|--|--|
| 1. Boom top pin (1 place) | 6. Arm (2 places) |
| 2. Intermediate link cylinder (2 places) | 7. Bucket cylinder (2 places) |
| 3. Boom cylinder (4 places) | 8. Arm cylinder (2 places) |
| 4. Boom foot (2 places) | 9. Intermediate link top pin (1 place) |
| 5. Link (3 places) | 10. Boom connect pins (2 places) |


- Check for cracks, furrows in the base metal.
- Check for wear and damage to the base metal.
- Perform all checks required by the basic machine manual.

FUNCTION CHECK

WARNING

Make certain that the valves on each side of the first boom section are switched to the correct mode BEFORE starting the engine. The valves control the operation of crusher rotate and the boom release pins. If the valves are operated incorrectly, death and serious damage could occur.

Position A - Attachment rotation operates.
Position B - Hydraulic pin operates.

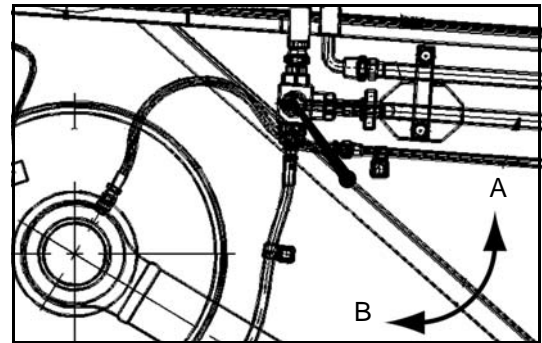

PRECAUTIONS WHEN OPERATING

- When operating the high reach demolition equipment, select a specialist operator and do not allow any other person to operate the machine.
- Check that the ground inside the operating range is flat and firm.
- Never operate the boom outside the specified working range. There is danger that the machine may overturn. As far as possible, always carry out operations to the front or rear of the tracks; do not carry out work to the left or right of the tracks.


Max. working radius to front and rear: 13 m

For details of the working range, WORKING RANGE AND USING RANGE OF BOOM (7-27)

WARNING


If work is carried out outside the specified operating range (to the front or rear of the track), the warning buzzer (continuous sound) will sound. If this happens, return the boom to a safe working range.

- Wherever possible, carry out demolition jobs as well as movements of the attachment or machine, with the machine upper structure and tracks aligned and the drive sprocket positioned at the rear.

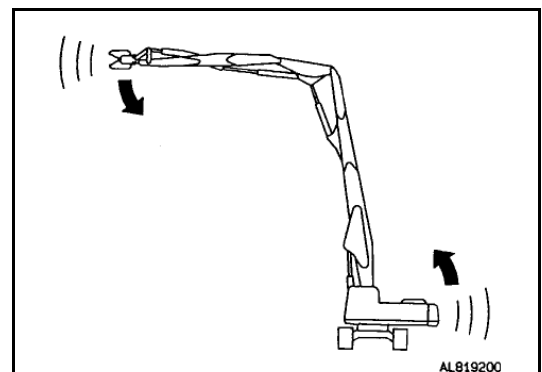


PROHIBITION OF WORK OUTSIDE SPECIFIED WORKING RANGE

- Never work outside the specified working range. If you do, the machine may fall over.

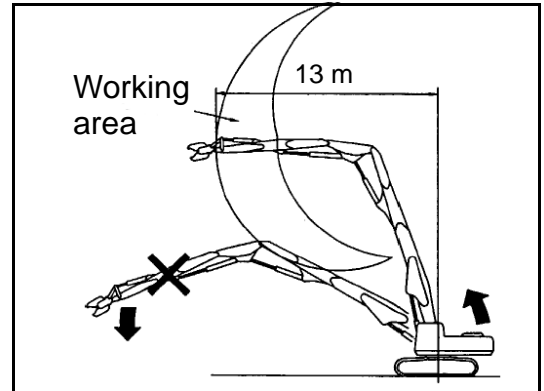


! WARNING
 To ensure long life of the work equipment, and to carry out work safely, avoid the following kinds of operation.


- Do not travel at high speed.

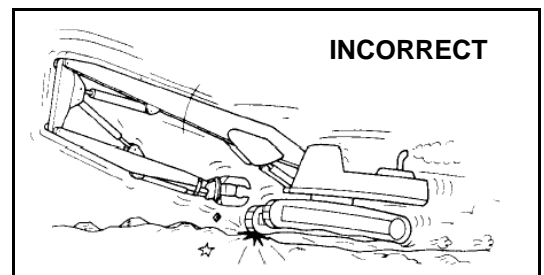


- Do not operate the control levers suddenly.

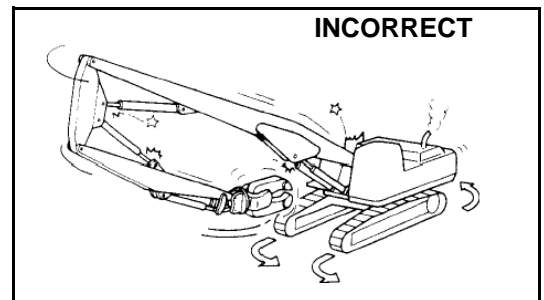


- Do not start or stop the swing suddenly.

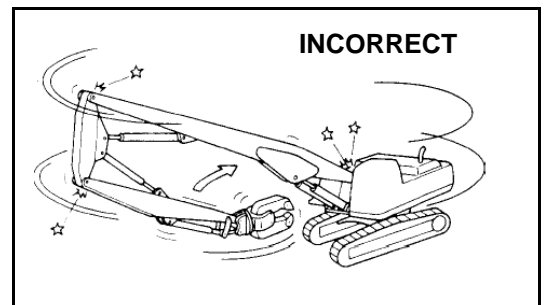


- Do not use hitting force for demolition work.

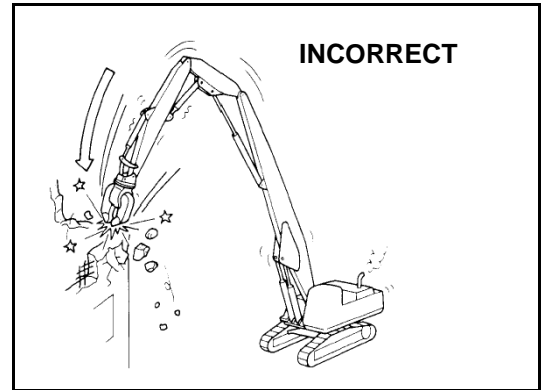


- Do not use the swing force for hitting operations.

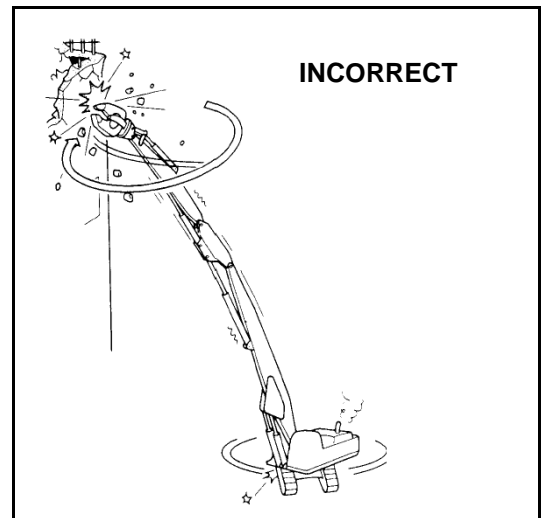


- Do not use the dropping force of the machine for operations.

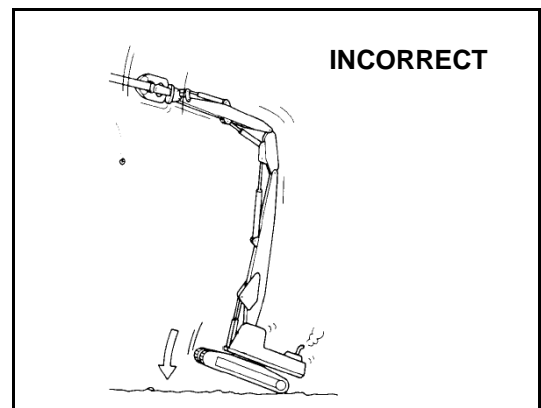


- Do not use the travel force of the machine for operations.

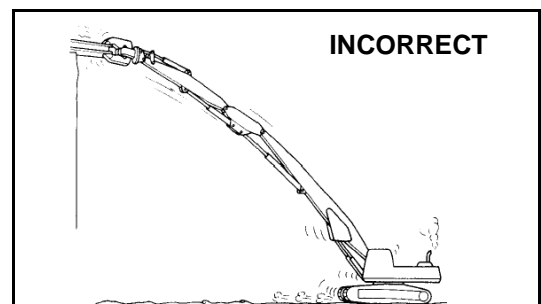


- Do not use the jaw on one side only.

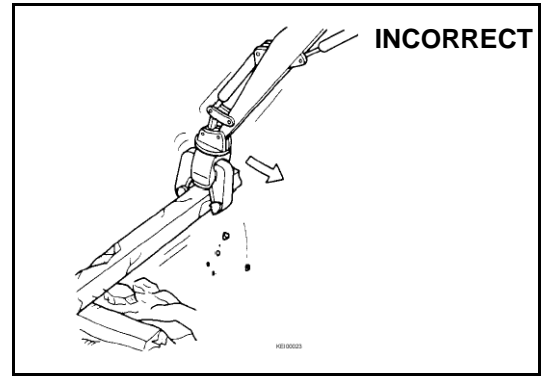

- Do not twist and crush at one blow.

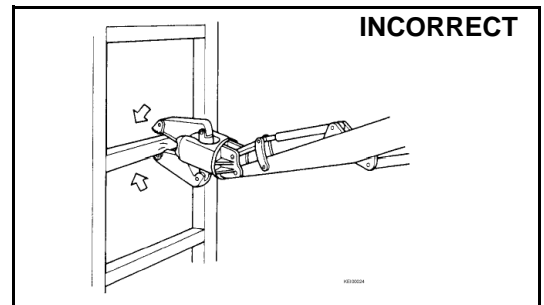


- Do not pick up objects and raise or lower them.

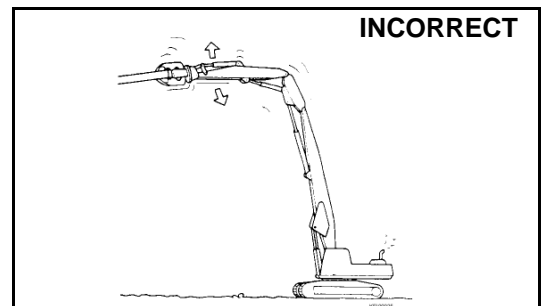


- When gripping objects, do not use cylinder to shake them.

! WARNING
If there is external force bearing on the attachment (when hitting against an object), the cylinder may come out and break, so be extremely careful when operating.

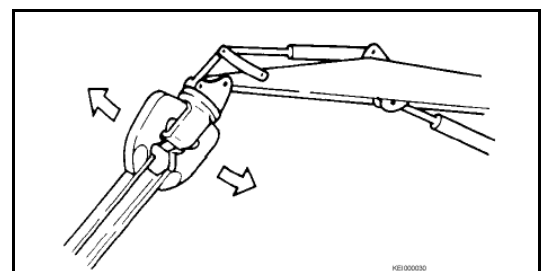

- Do not pull in the crusher with the intermediate link and arm pulled in.
The crusher will contact the boom and this may result in damage to the machine.

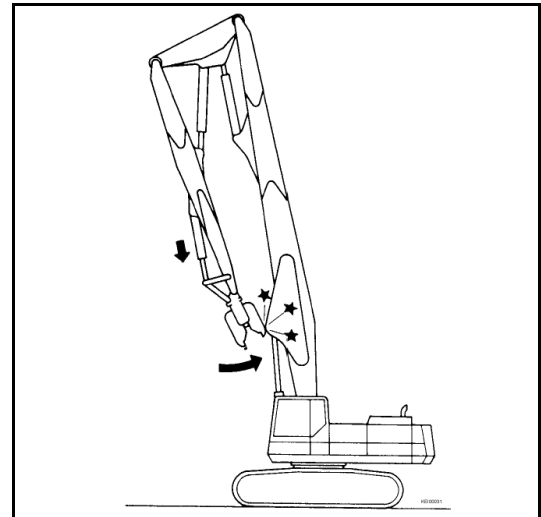

PROHIBITION OF WORK AT THE STROKE END OF A CYLINDER



Do not use the attachment with the cylinder extended or retracted all the way to its stroke end.

Leave some allowance at the stroke end when extending or retracting the cylinder.

If the machine is operated with the bucket cylinder at the extracting end, piston (1) strikes cylinder head (2). As a result, cylinder head mounting bolt (3) may become loose and the cylinder piston may come out eventually.


Confirmation and inspection before and after work.

Check the bolts of the bucket cylinder head for looseness. If any bolts loosened, tighten them to the specified torque. If any bolts have been removed, notify your Komatsu distributors.

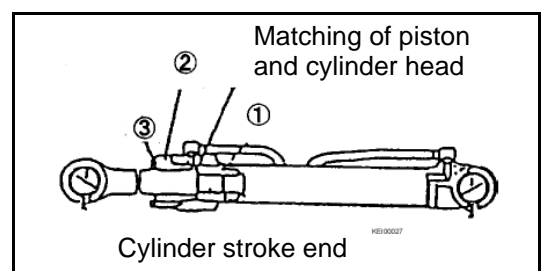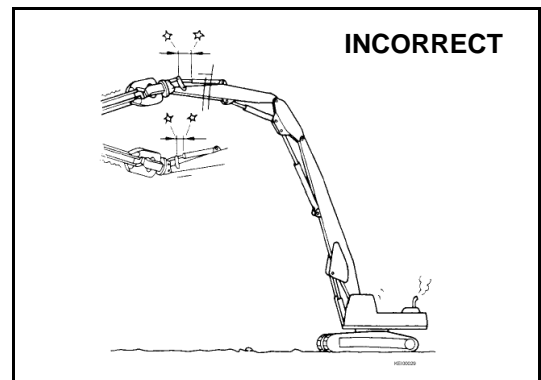

PROHIBITION OF WORK WITH HYDRAULIC BREAKER


The machine is not suitable for breaker use in any configuration. Do not install a hydraulic breaker for breaking work. If you do, the work equipment will be damaged.

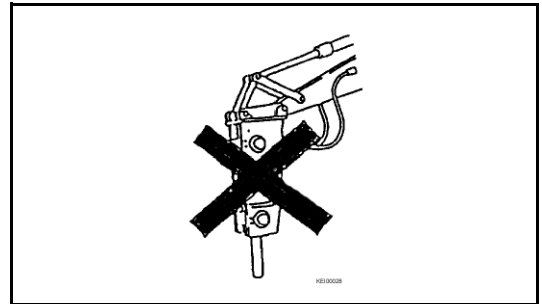

WHEN WORKING IN MEDIUM REACH CONFIGURATION

When in medium reach configuration (boom 2 removed).

- ⚠ WARNING**
- When the second boom is removed the attachment can hit the operator cab or chassis.
 - Operate work equipment slowly and carefully to avoid any injury and damage.

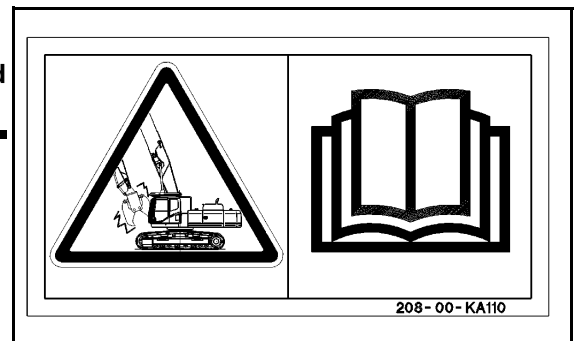


OPERATION



ADJUSTMENT OF HYDRAULIC VARIABLE GAUGE UNDERCARRIAGE, (Where Fitted)

CAUTION

There must be plenty of room available to manoeuvre the machine for adjustment of undercarriage. Make sure the operations are carried out in a flat, level, spacious area.

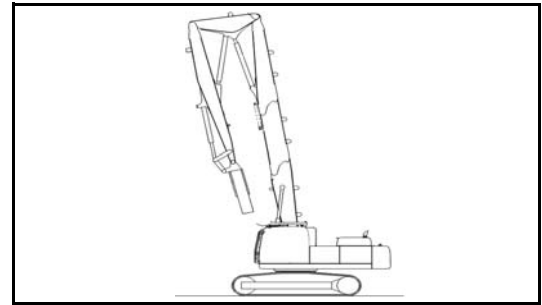

1. Park the machine in the posture shown.
2. Stop the engine and relieve the pressure in the swing circuit by moving the left wrist controller left and right.
3. Set the safety lock lever into the safe position and get out of the cab.
4. Move onto the machine upper structure, locate the valves at the swing machinery and turn the two levers until they are horizontal.
5. Return to the cab, start the engine and set the safety lock lever into the operation position.
6. Operate the SLEW function. It may be necessary to travel the machine forwards and backwards to allow the tracks to extend. If travelling is necessary, move the machine slowly and carefully, adjusting the steering controls as necessary.
Slew left - undercarriage width decreases
Slew right - undercarriage width increases
7. Make sure the trackframe is fully wide or fully narrow. Stop the machine, turn off the engine and relieve the pressure in the swing circuit as in step 2 above.
8. Set the safety lock lever into the safe position and get out of the cab.
9. Return the two valve handles at the boom foot to the vertical position.
10. The undercarriage is locked into position.

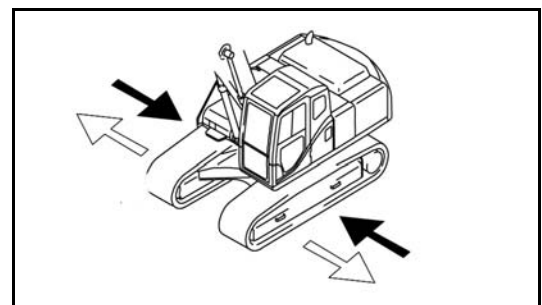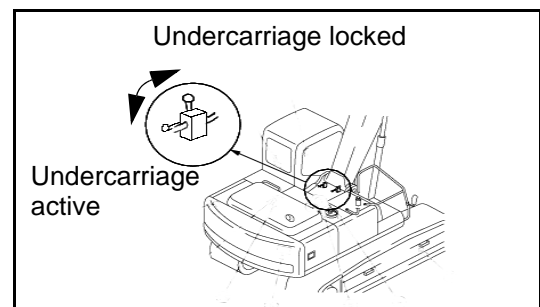

OPERATING WORK EQUIPMENT

⚠ WARNING

If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.

⚠ WARNING

Do not put your foot on the pedal except when operating it. If you rest your foot on the pedal during operations, and you depress the pedal by mistake, the attachment may move suddenly and cause serious damage or injury.





- The work equipment is operated with the left-hand work equipment lever, right-hand work equipment lever and right-hand pedal.
- The left-hand work equipment lever is used to operate the arm and swing the machine. The right-hand work equipment lever is used to operate the boom and bucket. The right-hand pedal is used to operate the intermediate link.

The movements of the levers, right-hand pedal and work equipment is shown in the figure on the right. If the levers and the right-hand pedal are released, they return to their neutral positions and the work equipment is held at the current position.


- While the machine is stopped, if the work equipment lever or the right-hand pedal is returned to the neutral position, the engine speed is set to the medium level by the auto-decelerator, even if the fuel control dial is at the FULL position.

Supplementary explanation

The work equipment can be lowered to the ground by operating the levers and right-hand pedal within 15 seconds after the engine has stopped.

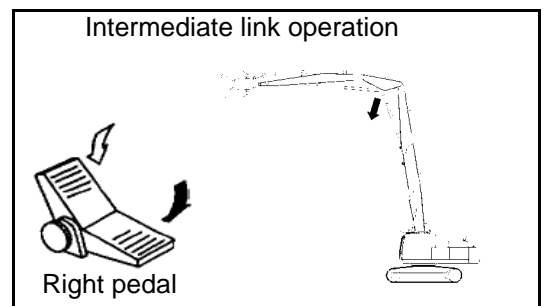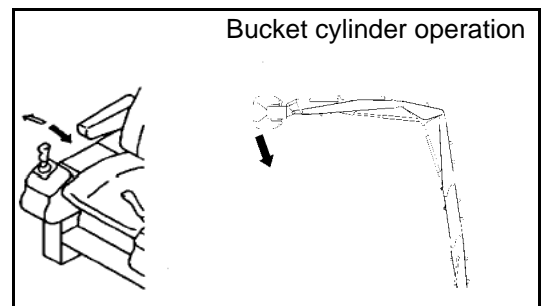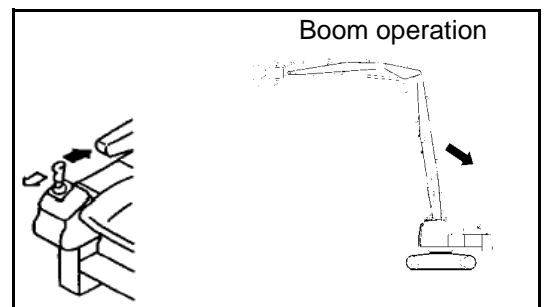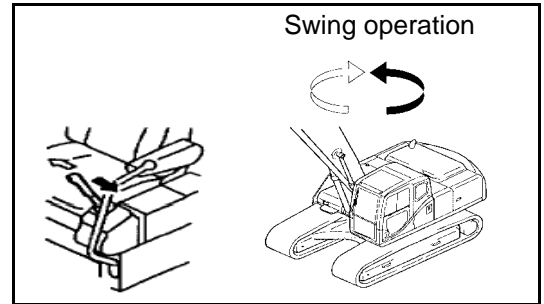

ATTACHMENT CONTROL

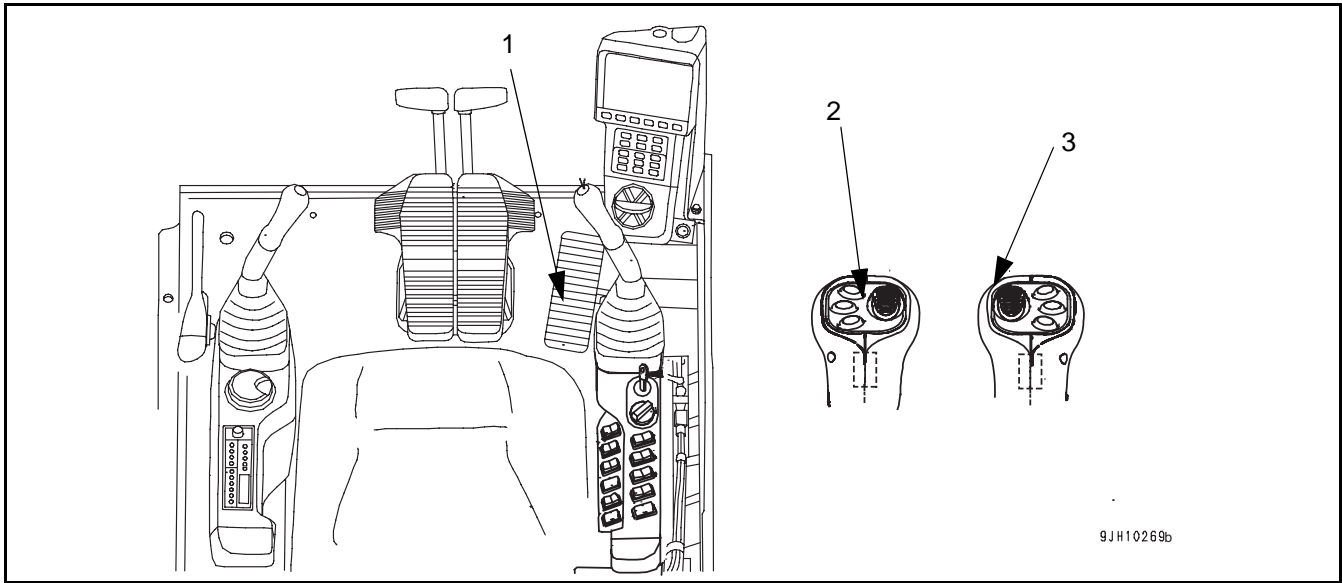

- 1. Right pedal (Intermediate link control)
- 2. Crusher rotation proportional control switch
- 3. Crusher open and close proportional control switch

⚠ WARNING


If any lever is operated when in the deceleration range, the engine speed will suddenly increase, so be careful when operating the levers.

Jaws are operated by the right wrist control lever.
 The right wrist control lever controls open/close.
 The left wrist control lever controls rotation.


- Attachment rotates when the button (2) is operated forward or backward. Direction of rotation depends upon the type of crusher fitted.

Standard motion:
 Operate switch forwards - attachment rotates clockwise
 Operate switch backwards - attachment rotates anti clockwise

(A) The direction of rotation depends on the crusher

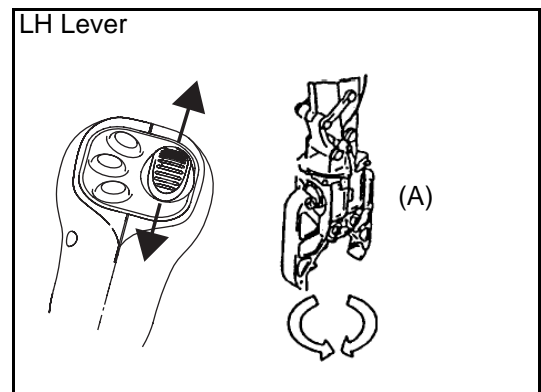

- Operation to open or close crusher

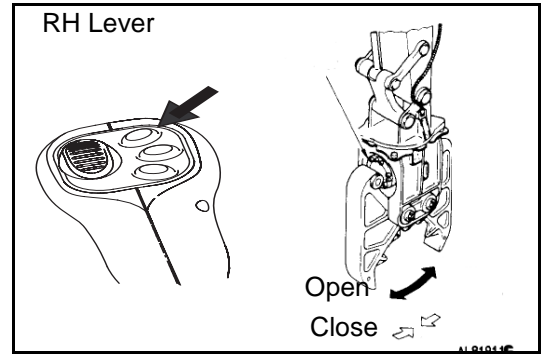


RAISING WORK EQUIPMENT


Operate the work equipment slowly. In particular, operate the work equipment as slowly as possible during lowering operations.

Operate as follows.


1. Extend boom cylinder.

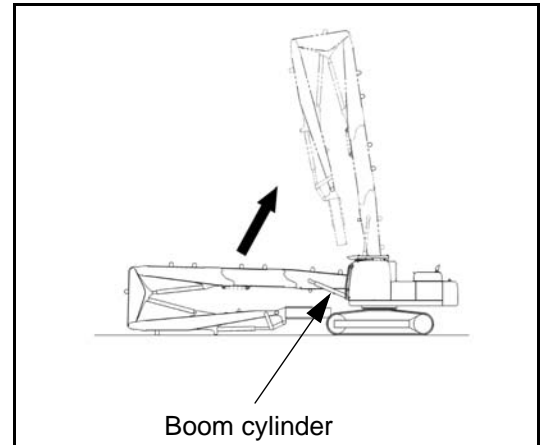

2. Extend intermediate link cylinder.

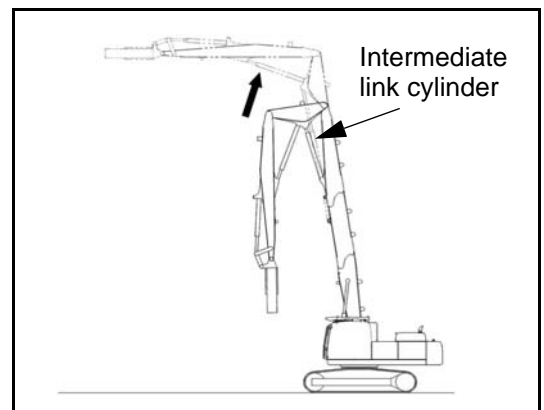

3. Extend arm cylinder.

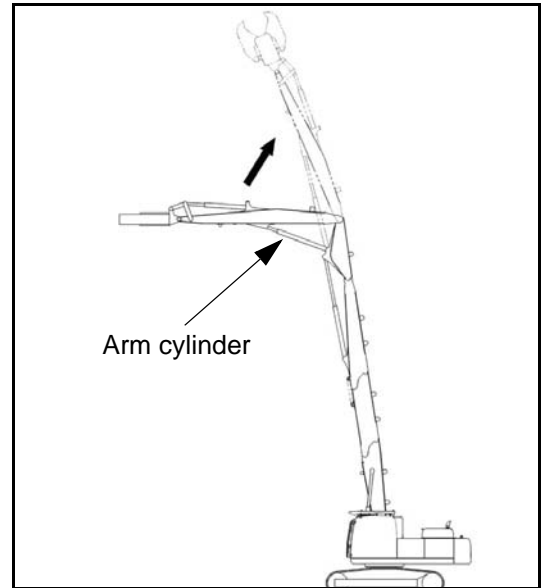


WORKING RANGE AND USING RANGE OF BOOM**⚠ WARNING**

Be sure to work in the forward and backward direction of the machine. (Set the track frame and the cab in the same direction).


Never work in the over side direction.

1. Use the boom within the hatched range (in the green range of the boom angle gauge). At this time, boom angle A is 81° and maximum working radius B is 13 m (at the arm top point).
2. When raising and lowering the crusher, retract the arm and intermediate link so that the arm top point will not exceed above working radius B (13 m).
3. Take care that the boom angle indicator does not exceed the green range.


Do not work in the red range. For raising and lowering of the crusher in this range, observe 2) above.

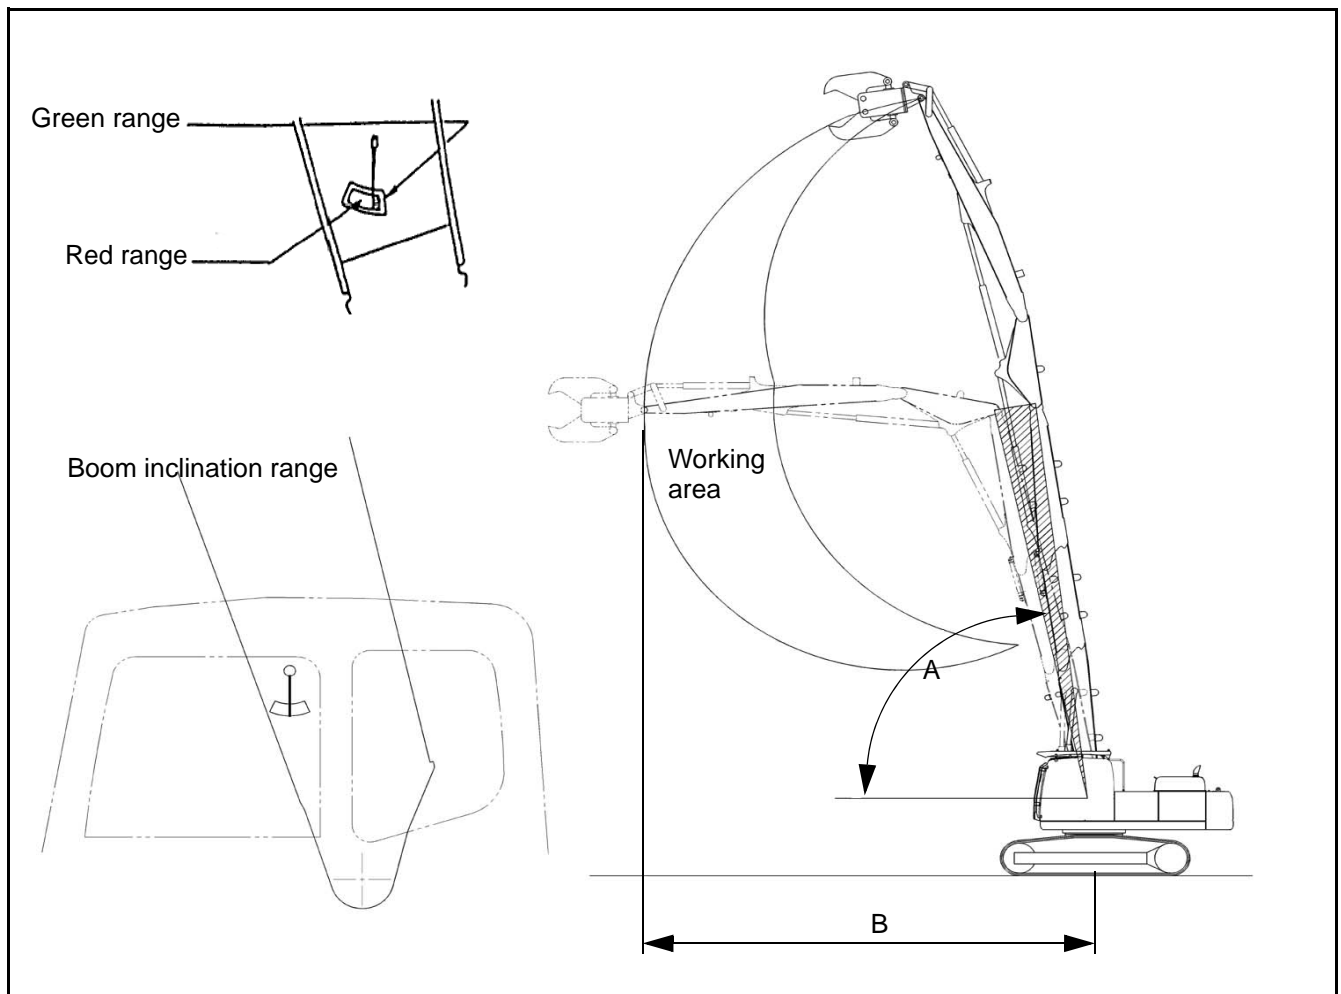


Always use the boom within the range shown by the hatched area in the diagram below. If the boom goes below posture (1), the alarm buzzer will sound. If the alarm buzzer sounds, return the boom to a position where the buzzer stops.

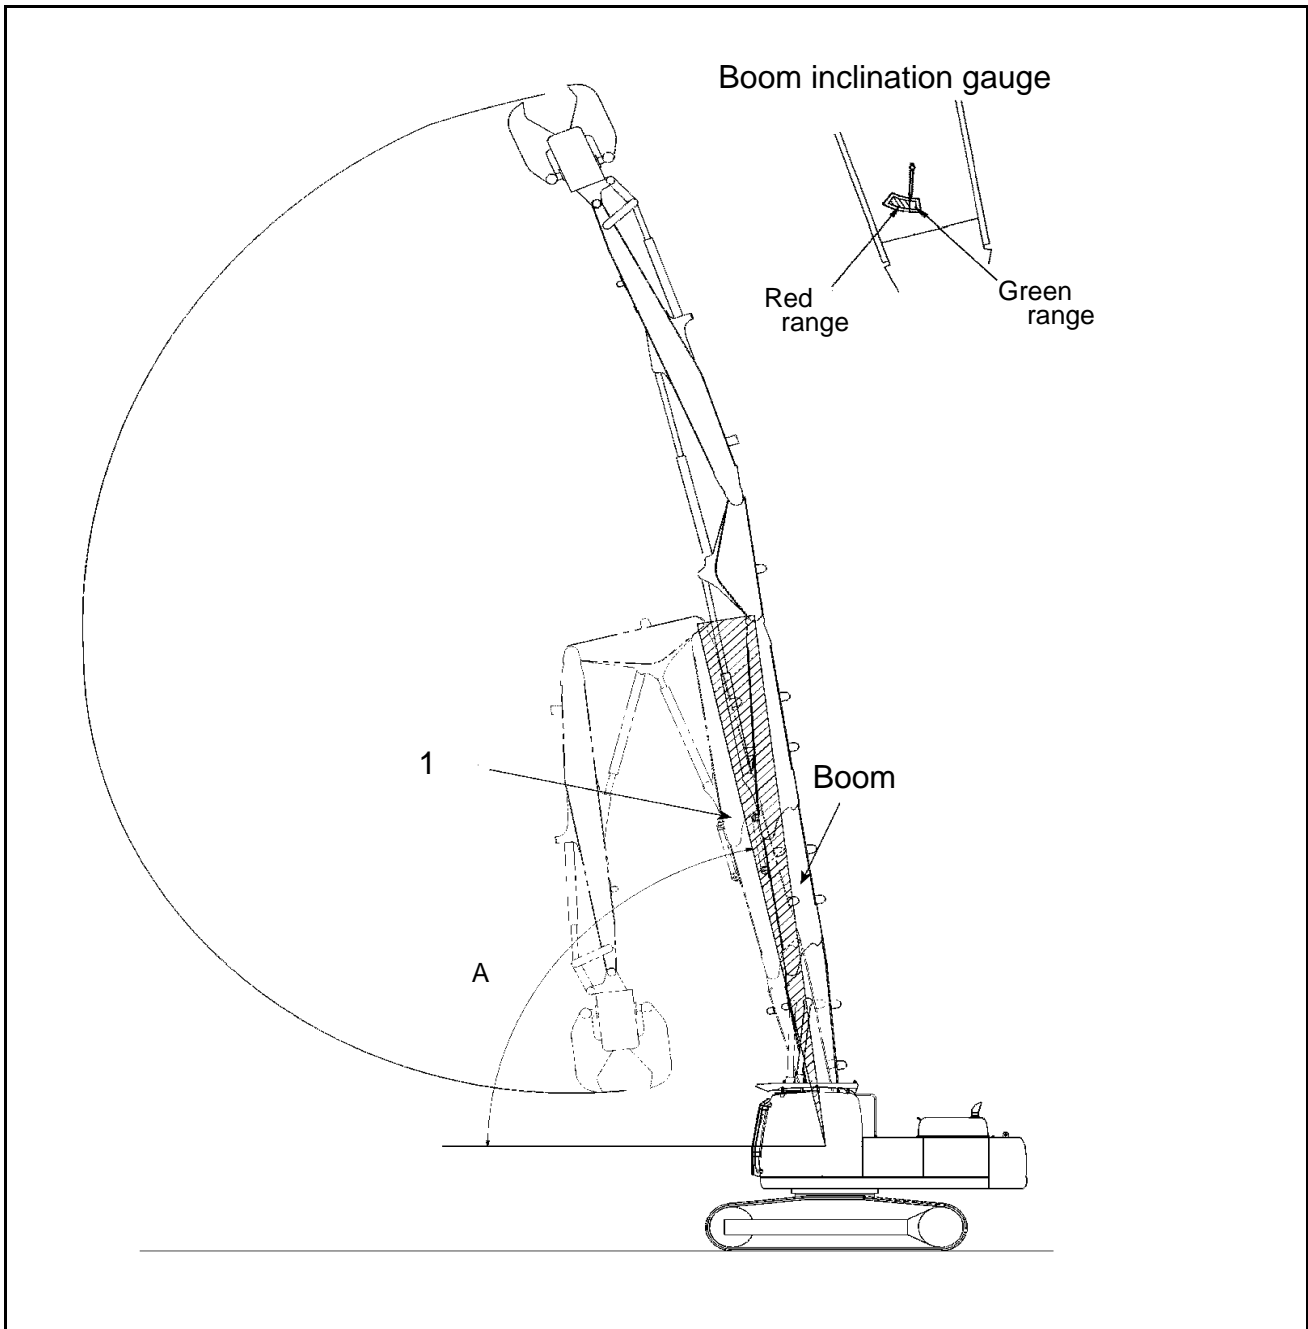

If the alarm buzzer does not sound when the boom is below the specified angle (inclination gauge in red range), make sure that the boom angle alarm buzzer switch (A) is set so that the alarm is active. If the button is set correctly, adjust the angle sensor plate as follows.

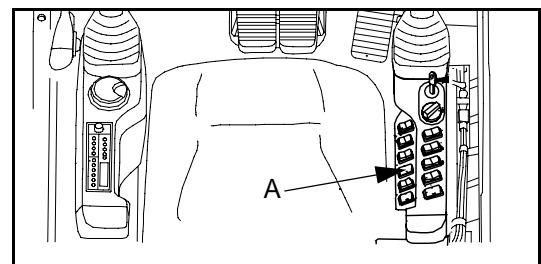

Adjustment of boom angle warning sensor.

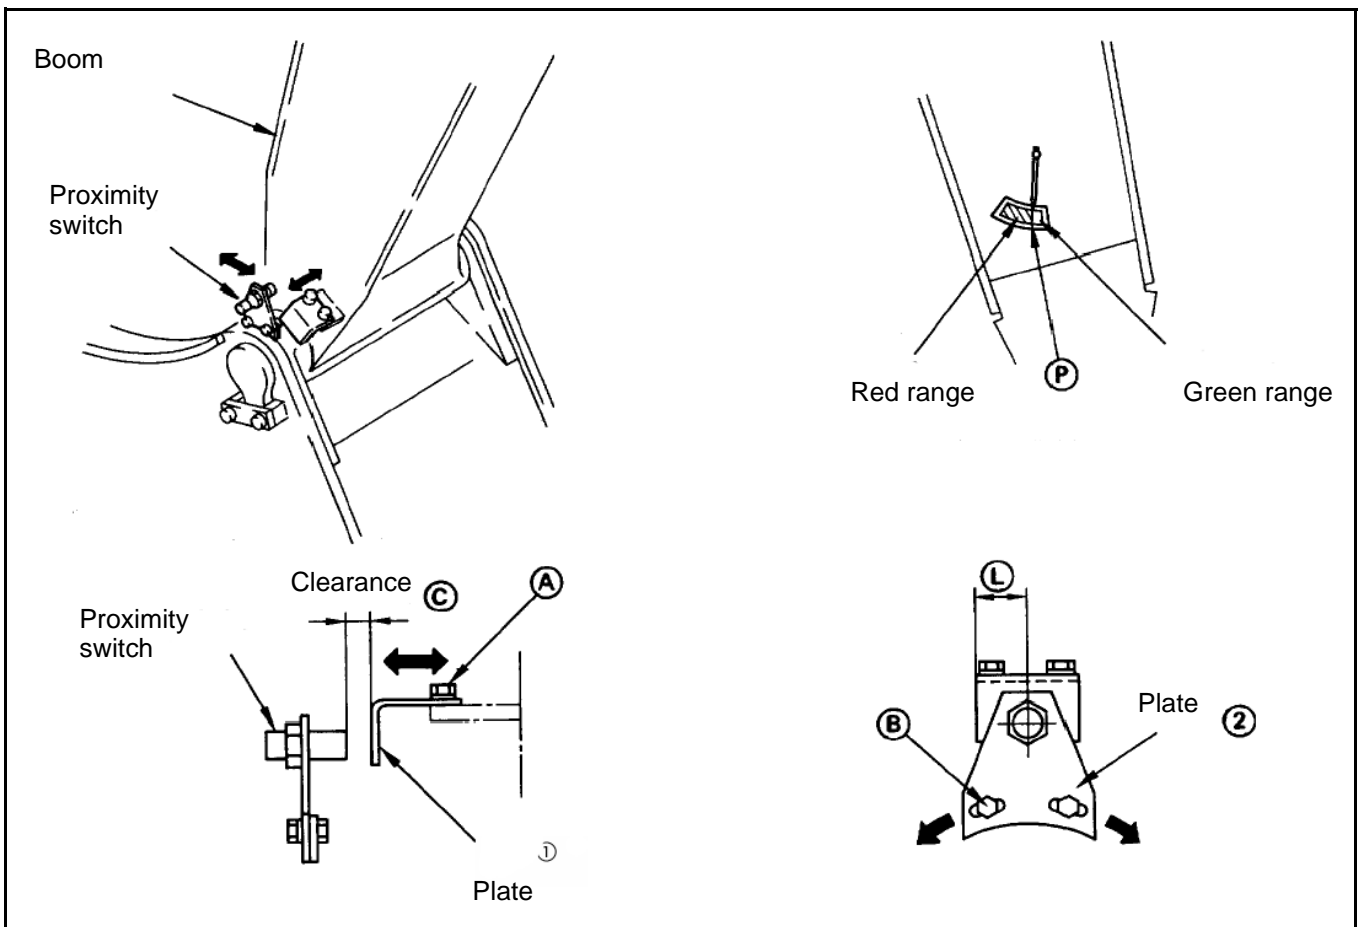

1. Loosen bolt (A) and adjust so that clearance between the proximity switch and plate (1) is 5 - 8 mm.
2. Raise the boom to the maximum height, then gradually lower it and stop the boom at the position where the indicator of the inclination gauge is on line (P) between the green range and red range.
3. Loosen bolt (B) and move plate (2) to the left or right to fix dimension (L) so that the buzzer sounds at this position.

REMARK

Set clearance so that there is no contact even when the boom is moved.

⚠ WARNING


This adjustment should only be performed by Komatsu Certified Mechanics. Failure to adjust properly may result in an unsafe operating condition.

POSTURE WHEN LEAVING MACHINE


WARNING

When leaving the operator's compartment, put the machine in the following posture for reasons of safety.

1. When leaving the machine for a long time.

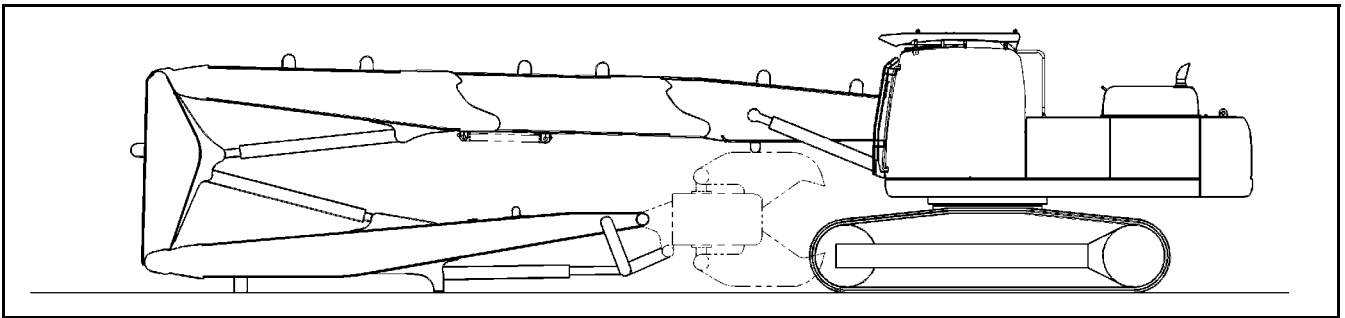

2. When leaving the machine for a short time.

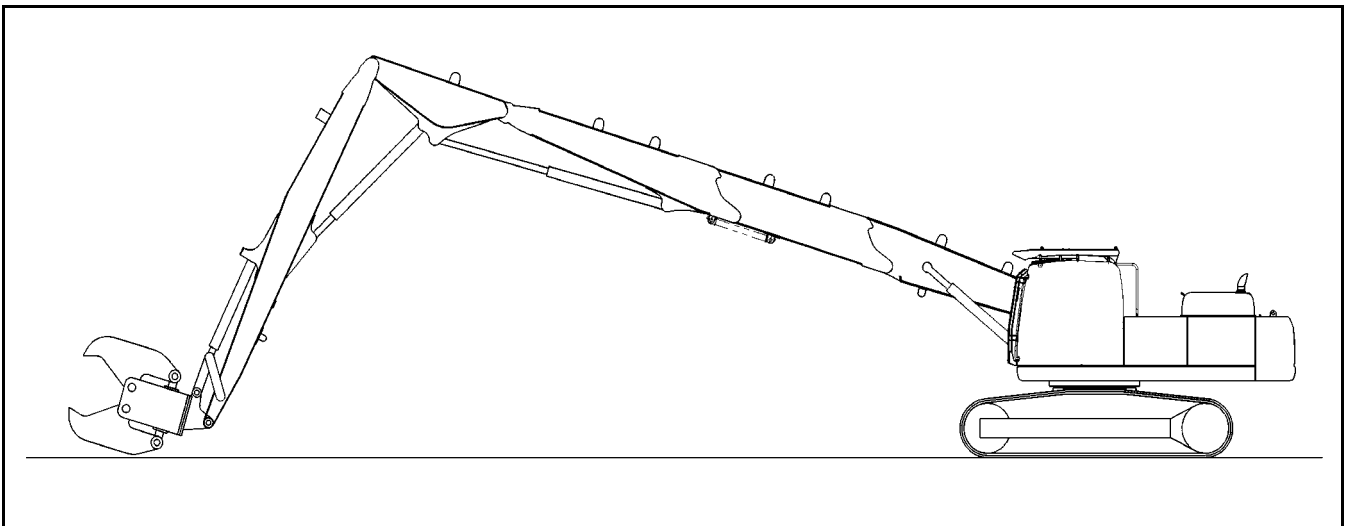

DEMOLITION DIGGING BOOM INSTALLATION AND REMOVAL

The Komatsu High Reach Demolition work equipment can be replaced by purpose built Komatsu Demolition Digging Equipment. The Demolition Digging Equipment allows easy removal and separation of demolished material.

WARNING

- Make sure that all work equipment is safely supported or held and will not fall. Attach a lifting device or support of correct rating, to allow extraction of disconnected piece when ready.
- Make sure that the supports used will support the work equipment even if accidentally pushed by the machine.
- Follow these instructions step by step, in sequence. Do not omit any of the actions. Do not perform the actions in a different order.

REMARK

A Komatsu demolition work equipment support system is available through your dealer. This system should be used to hold the demolition work equipment when it is removed.


PROCEDURE FOR INSTALLATION AND REMOVAL OF DEMOLITION DIGGING EQUIPMENT

REMOVAL OF HIGH REACH WORK EQUIPMENT


1. There must be plenty of room available to manoeuvre the machine for removal of work equipment. Make sure the operations are carried out in a flat, level, spacious area.
2. Fit the transport pin, holding the demolition equipment arm to the demolition boom.

CAUTION

With the transport pin in position, do not operate the arm or mid link. Significant damage to the machine will result.

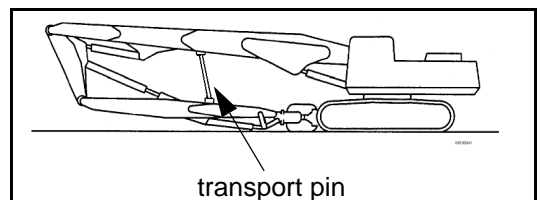

3. With the high reach work equipment in the normal travel position (see diagram), move the machine into a position where there is plenty of room to access the work equipment, even in the lowered position.
4. Carefully lower the demolition work equipment.

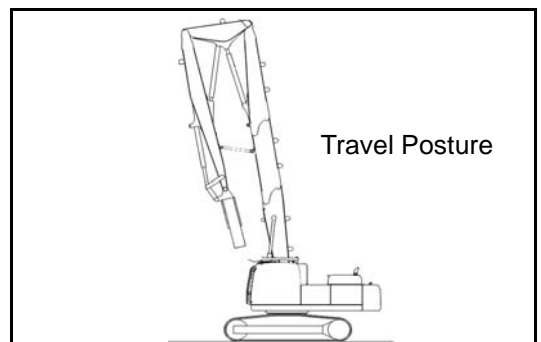

⚠ WARNING

Switch off the machine and place the supplied warning tag onto the safety lock lever.

- Assemble the work equipment support to the work equipment brackets. The demolition work equipment stand is in two sections. Each section consists of three items:

	Item	Quantity
1	Left Support	1
2	Right Support	1
3	Support Brace	2

- Insert pins (supplied with the machine) to locate the boom brackets onto the Stand brackets. (position A, B, Action 1).

⚠ WARNING

Securely fix the pins with the spring pins supplied. (position C), Action 2.

- Using suitable supports and handling equipment, assemble the Support Braces (Item 3) to the Left and Right Support (Items 1 and 2), to form the complete Stand Section, shown in the diagram. Lift the work equipment, using boom raise cylinders, so that the supports are free from the ground. Lower the equipment so that Support A settles onto the ground; Stand B will still be free of the ground.



⚠ WARNING


Securely fix the brace pins with the spring pins provided.

- Relieve the pressure in the hydraulic circuits by removing the filler cap from the hydraulic oil tank and operating the controls of the machine.

⚠ CAUTION

Make sure that all equipment is clean at all times when removing hydraulic power lines. Particularly ensure that no foreign matter enters the hydraulic circuit. When hydraulic lines are separated, make sure that all open ends are plugged.

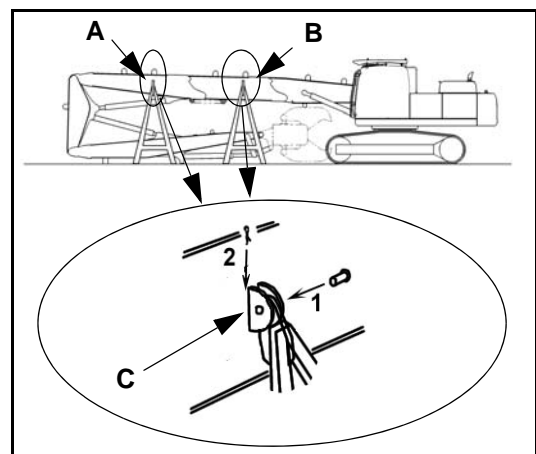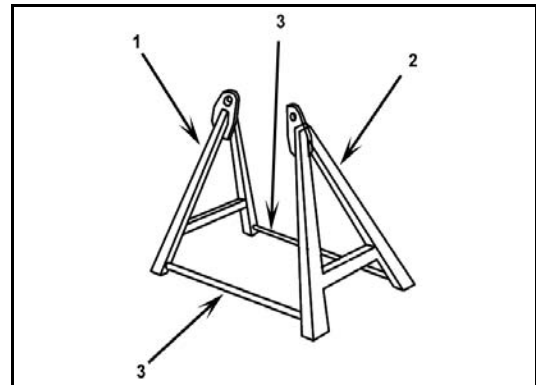

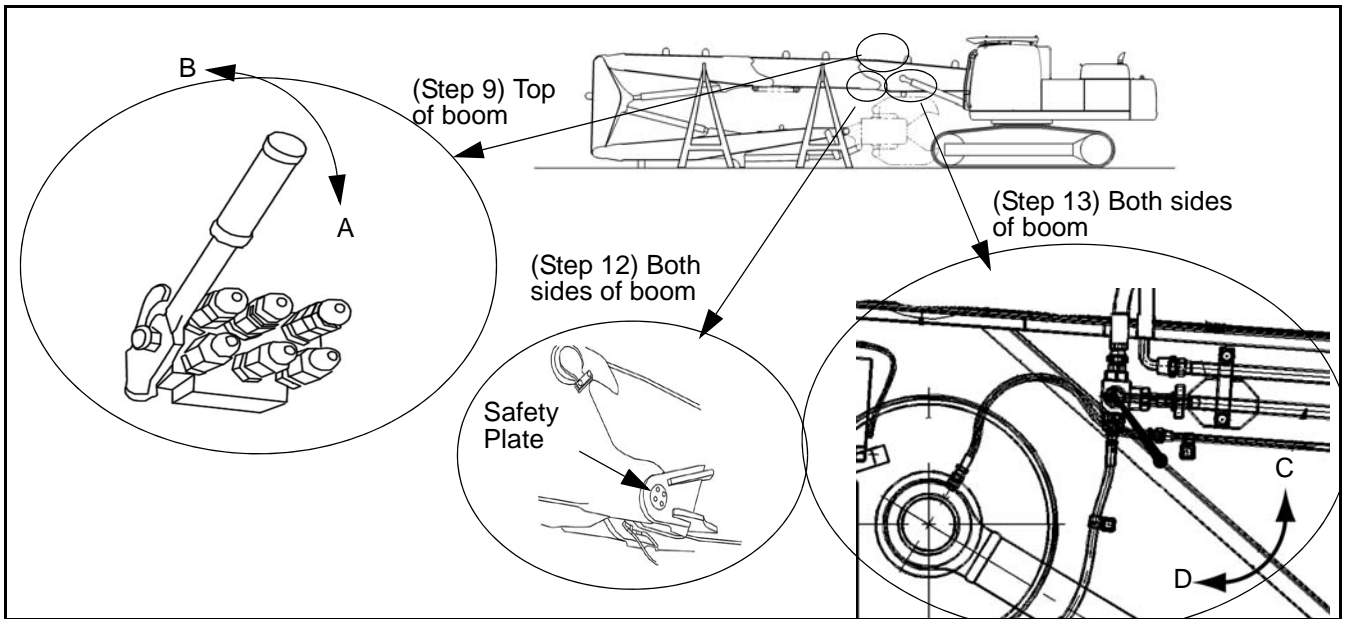


9. Disconnect the banked hydraulic connectors on the top of the demolition first boom.
(A - connect; B - disconnect).
10. Disconnect the individual hydraulic connections around the demolition first boom.
11. Separate the grease hoses and protect the exposed ends in the same way as the main hydraulic lines. Plug the open end of the tube with end fittings (heads), supplied as loose parts with the machine.
12. Remove the safety plates from the first boom release pins.
13. Open the valves on the pin retract circuit (left and right side of the demolition first boom) to allow hydraulic pressure to be applied to the retractable pins.
(C - closed - no power to pin;
D - open - retractable pin will operate)
14. Make sure that personnel are clear from the boom release pins and start the engine.

⚠ WARNING

Make sure that the changeover valve on the demolition first boom is set to "Pin Retract".

(C - no power to hydraulic pins; D - power to hydraulic pins)
(Action 13). If the changeover valves are in the wrong position, the attachment will rotate when the "retract pin" command is made.

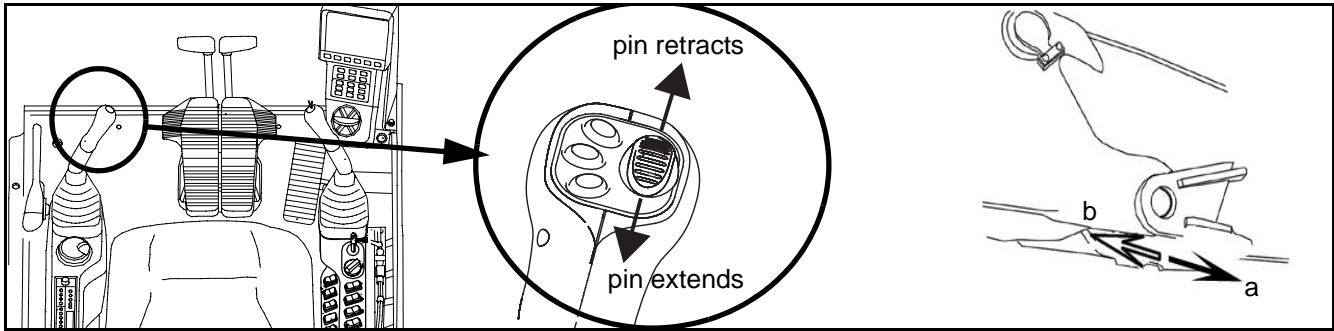

15. Operate the "Attachment Rotate" function. Left Hand (LH) button makes the pins retract, Right Hand (RH) button makes the pins extend.


⚠ CAUTION

Check that the pins are fully retracted before moving the machine.

⚠ WARNING

Never use ANY other control to cause the hydraulic pins to move. This could cause injury, damage or death.

16. Lower the first boom section to settle the Stand B onto the ground. When Stand B is settled onto the ground, simultaneously lower the first boom section and reverse the machine to disengage the upper pin from the demolition equipment. Reverse the machine away from the demolition equipment.
17. Ensure that all exposed bores, pins, hoses and tubes are thoroughly protected from corrosion and foreign matter.

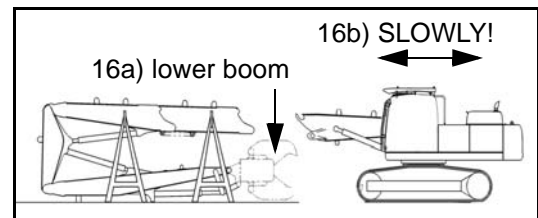


⚠ WARNING

When reversing the machine from the demolition work equipment, make sure that all operators are standing well clear of the machine and equipment.

⚠ CAUTION

Do not slew the upper structure of the high reach demolition machine with the additional counterweight installed, with only demolition boom 1 installed.

18. Using suitable lifting and support equipment, remove the additional demolition counterweight from the main demolition counterweight. Eyebolts are provided with the machine for this purpose.

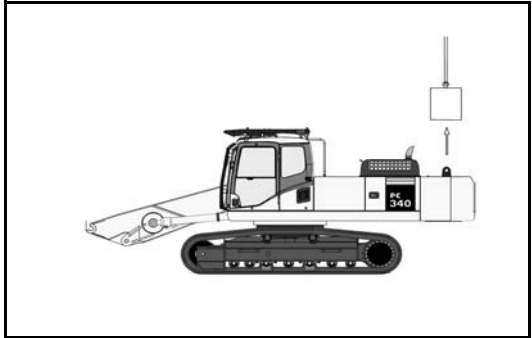

Refitting the High reach Demolition Equipment is achieved by following steps above in the reverse order (start with step 17 and finish with step 1).

⚠ CAUTION

Whenever installing work equipment, always complete the installation by purging the hydraulic circuits of air. Follow the steps in PURGING AIR PROCEDURES (7-41).


FITTING DEMOLITION DIGGING EQUIPMENT.

REMARK


It is assumed that the demolition digging equipment is complete and resting on the ground, with the boom supported by the Komatsu Digging Equipment Stand (available from your dealer).

⚠ WARNING

Make sure that all personnel are a safe distance from the digging equipment while the machine is moving.

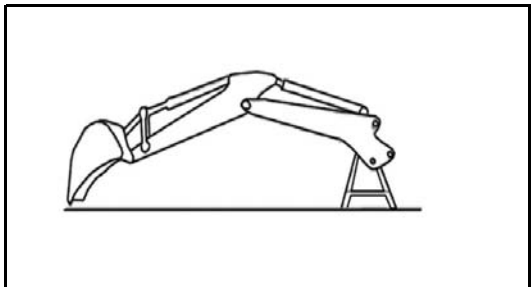

1. With the high reach equipment removed from boom 1, and demolition boom 1 attached to the base machine, manoeuvre the machine slowly towards the demolition digging boom.
2. Before arriving at the digging equipment, lower the demolition boom 1 so that the upper pin hook is able to accept the upper pin of the exposed end of the demolition dig boom.

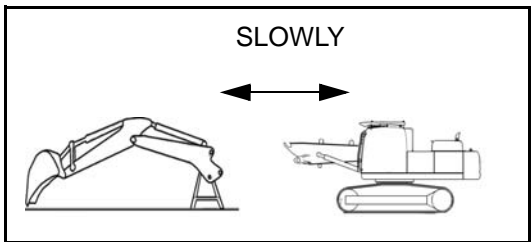

⚠ CAUTION

It is important that the machine is aligned correctly with the demolition digging equipment. Otherwise, the pins will be very difficult to fit or the equipment may fall.

REMARK


The upper pin used to connect the demolition digging boom with the demolition boom 1 should be retained in the digging boom. Make sure that the pin is correctly centralized and greased to accept the demolition first boom.

3. Make sure all of the exposed wear surfaces of the demolition digging boom and demolition first boom are clean and showing no signs of damage.


⚠ WARNING

Do not extend the boom raise cylinders to lift the Digging Equipment Support off the ground. It may cause damage and serious injury.

4. Carefully approach the digging equipment, taking care not to strike it with the machine. Raise the demolition boom 1 to connect with the upper pin of the demolition digging boom, so that the weight of the digging equipment is supported by the demolition first boom.

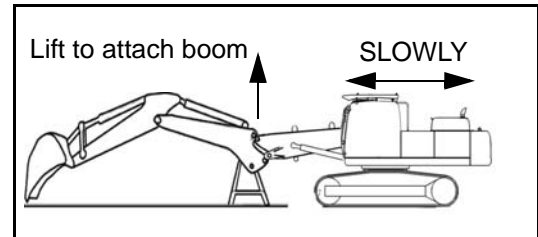

5. Withdraw the spring pins connecting the Support Braces (Item 3) of the digging equipment stand to the Left and Right Support (Items 1 and 2).
6. Withdraw the pins connecting the Support Braces (Item 3) to Left and Right Support (Item 1 and 2).
7. Withdraw the spring pins from the pins connecting the digging boom to the Left and Right Support.
8. Withdraw the pins connecting the digging boom to the Left and Right Support.

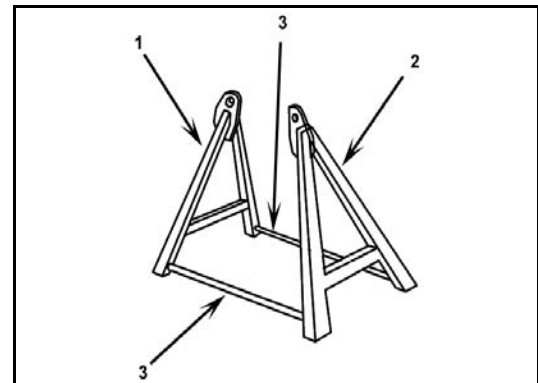


REMARK



It may be necessary to adjust the position of the boom raise cylinders to allow easy withdrawal of the pins.

9. Store the components of the work equipment stand in a safe and clean environment.
10. Raise the boom so that the digging equipment rotates around the upper pin. Continue lifting the boom until the required lower bore in the digging boom is aligned with the hydraulically adjusting pins of the demolition first boom.

⚠ WARNING

Make sure that the changeover valve on the demolition first boom is set to "Pin Retract".(C - no power to hydraulic pins; D - power to hydraulic pins).

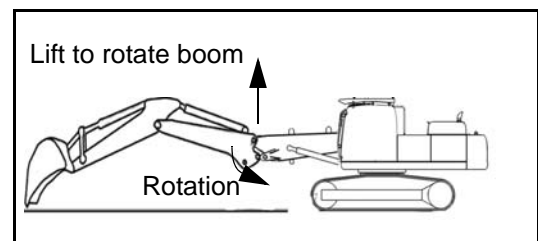

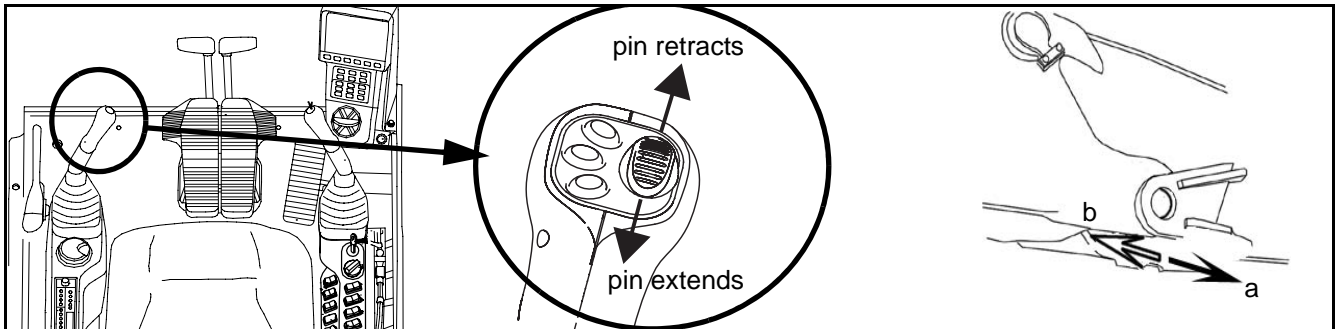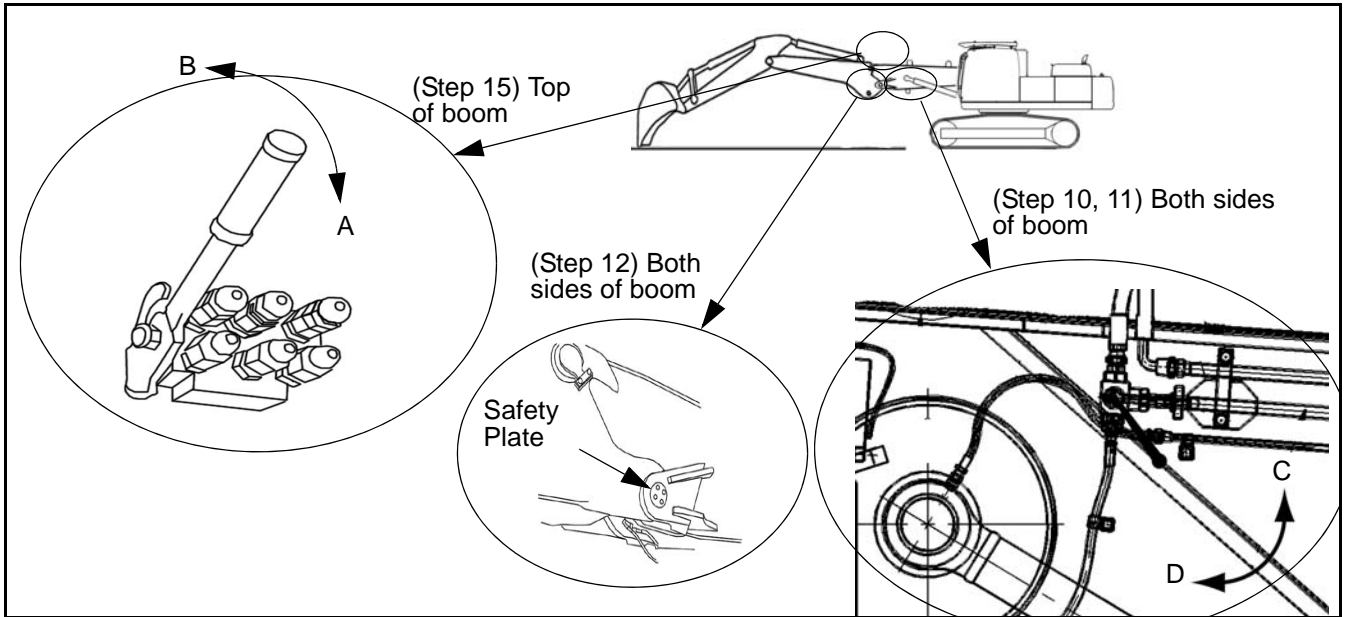

11. Operate the "Attachment Rotate" function. Left Hand (LH) button makes the pins retract, Right Hand (RH) button makes the pins extend.

⚠ CAUTION

An assistant should check the movement of the extending pins as they locate onto the digging boom. The assistant should warn the machine operator if there is a problem. Damage could occur if the pins are not correctly aligned.

⚠ WARNING

- Never use ANY other control to cause the hydraulic pins to move. This could cause injury, damage or death.
- Make sure that the assistant and all other personnel are not positioned where risk of injury can occur.

12. Attach the safety plates to the exposed ends of the adjustable pins.


13. Close the valves on the left and right side of the demolition first boom to isolate the retractable pins.

CAUTION

Before reconnecting each hose ensure no foreign matter is in the hydraulic lines and that all connections are clean.

14. Connect the individual quick connector lines, in accordance with the diagram and table.
15. Connect the banked quick connectors.
A - Connected; B - Disconnected
16. Set the Equipment change over switch in the operator cab to "standard equipment". This ensures that the arm cylinder operates correctly.

POSITION	HIGH REACH FUNCTION	DEMOLITION DIG FUNCTION
A (LEFT LOWER)	Att. Rotate	Att. Rotate
B (LEFT UPPER)	Att. Drain	Att. Drain
1 (TOP)	Mid Link cyl bottom	Not used
2 (TOP)	Arm cyl top	Arm cyl top
3 (TOP)	Bucket cyl bottom	Bucket cyl bottom
4 (TOP)	Att. Crush	Att. Crush
5 (TOP)	Att. Crush	Att. Crush
6 (TOP)	Bucket cyl top	Bucket cyl top
7 (TOP)	Arm cyl bottom	Arm cyl bottom
8 (TOP)	Mid Link cyl top	not used
C (RIGHT SIDE)	Att. Rotate	Att. Rotate
D LINK	Safety valve	Opt (safety valve)
E	Arm safety valve	Opt (arm safety valve)
F	Safety valve drain	Opt

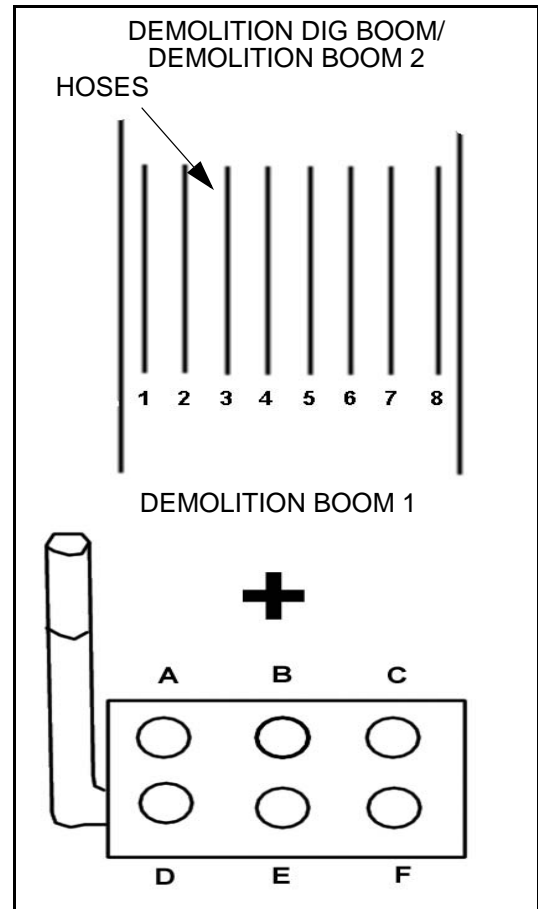

WARNING

Take care to reconnect the hydraulic lines in the correct order. Improper operation of the machine will occur if hoses are connected incorrectly.

17. Reconnect the grease lines.
18. If the digging arm is not fitted, carry out the steps in CONNECTING DIGGING ARM TO DEMOLITION DIGGING BOOM (7-39). If the digging arm is fitted, purge the hydraulic circuits of air by following the steps in PURGING AIR PROCEDURES (7-41).


REMOVAL OF DEMOLITION DIGGING EQUIPMENT.

REMARK

A Komatsu demolition digging equipment support system is available through your dealer. It is strongly recommended that this system is used to hold the demolition digging equipment when it is removed.

The procedure for removal of demolition digging equipment is similar to the procedure for removal of demolition high reach equipment.

Act in accordance with the following when removing demolition digging equipment:

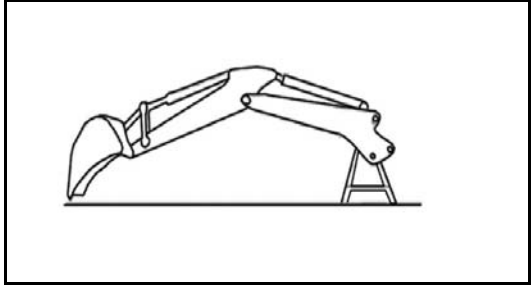

⚠ WARNING

- Never retract the boom raise cylinders when the retractable pins are retracted and the equipment is in contact with the ground.
- If the boom is lowered under these conditions, it is possible that the demolition digging equipment will disengage from the demolition first boom and fall.
- Always make sure that the digging equipment is properly supported by supports or lifting equipment of the correct rating, to prevent possibility of equipment falling.

Remember to switch the Equipment change over switch in the cab to "High Reach" when the High Reach Demolition equipment is installed.

The demolition digging equipment stand comprises only one stand section. The stand includes the items shown below:

	Item	Quantity
1	Left Support	1
2	Right Support	1
3	Support Brace	2

CONNECTING DIGGING ARM TO DEMOLITION DIGGING BOOM

REMARK

Follow procedure FITTING DEMOLITION DIGGING EQUIPMENT. (7-35) to fit the demolition digging boom.

1. Approach the dig arm, slowly and carefully.
2. Using a crane, lift the exposed end of the dig arm so that the bore of the arm is aligned with the bore of the boom.
3. Insert the pin (from left to right), to make the connection between the dig boom and the arm. Apply shims to make sure that the dig boom and the arm are a correct fit (a maximum of 0.5 mm tolerance is allowed). Shims should be fitted to the right hand end of the pin.
4. Lock pin in place with plate (left side of work equipment).
5. Remove the arm cylinder pin from the arm, by removing the plate and withdrawing pin.

⚠ DANGER

Take care to ensure all equipment is kept clean.

6. Operate the arm cylinder and boom raise so that the bore in the arm cylinder top matches the bore in the arm end. Check that the bores and pins are in good condition, cleaned and freshly greased before refitting.
7. Insert the arm cylinder pin (from left to right), to make the connection between the arm cylinder and the arm. Apply shims to ensure that the dig boom and the arm are a correct fit (a maximum of 0.5 mm tolerance is allowed). Shims should be fitted to the right hand end of the pin.
8. Lock pin in place with plate (left side of work equipment).

⚠ CAUTION

Before reconnecting each hose check that there are no foreign particles in the hydraulic lines and that all connections are clean.

9. Remove plugs from the hydraulic lines and reconnect.

⚠ WARNING

Take care to reconnect the hydraulic lines in the correct order. Improper operation of the machine will occur if hoses are connected incorrectly.


10. Reconnect the grease lines.
11. Purge the hydraulic circuits of air by following the steps in PURGING AIR PROCEDURES (7-41)

MEDIUM REACH

When in medium reach configuration(boom 2 removed).

⚠ WARNING

- When the second boom is removed the attachment can hit the operator cab or chassis.
- Operate work equipment slowly and carefully to avoid any injury and damage.

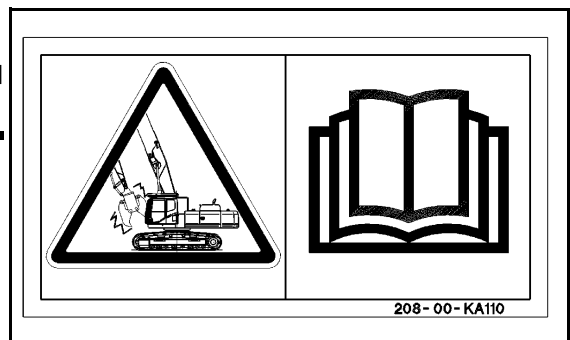

PURGING AIR PROCEDURES

PURGING PROCEDURE TO REMOVE AIR FROM HYDRAULIC CYLINDER LINES.

NOTICE

Follow this procedure whenever hydraulic circuits have been disconnected and reconnected.

1. Run the engine at low idle speed to extend and retract the cylinder 4 to 5 times. For both extension and retraction, stop the cylinder approximately 100mm before the end of the stroke.
2. In addition extend and retract the cylinder to the stroke ends 3 to 4 times.
3. Again extend and retract the cylinder 4 to 5 times to the stroke ends to completely purge air from the hydraulic circuit.
4. On completing these operations, run the engine at normal speed.


PROCEDURE FOR PURGING AIR FROM BOOM LOCK VALVE PPC CIRCUIT

WARNING

While monitoring oil temperature, loosen the cap of the hydraulic oil tank to release residual pressure (purge air) in the tank.

1. PRECAUTIONS FOR PURGING AIR FROM BOOM LOCK VALVE PPC CIRCUIT.

1. To mount the demolition high reach boom and arm, purge air from the boom lock valve PPC circuit before operating the cylinder.
2. To assemble the demolition high reach work equipment, purge air from the boom lock valve PPC circuit before the cylinder rod side work equipment is mounted.
3. To remove the PPC circuit hoses, stop the engine and operate the control levers and pedals to release residual pressure in the circuit.
4. For safety, during air purging, close the stop valve in the work equipment piping.

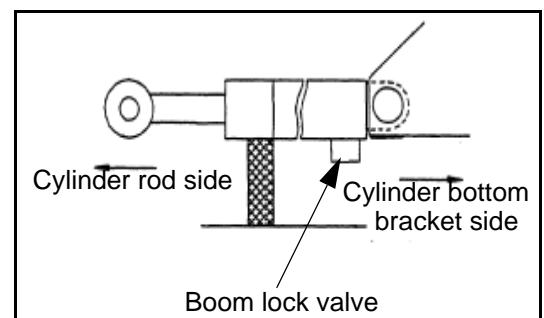

5. For pipe fittings, refer to the parts list for the high reach boom.

2. AIR PURGING OF BOOM CYLINDER LOCK VALVE

1. Air purging of pilot hose.



WARNING

To prevent accidental operation of the boom cylinder, disconnect the pilot hose of the control valve at the tee joint (DOWN side) and adapter (UP side) (position i on diagram - close to swivel joint).

- Place a blank cap or blind plug on the removed hose connectors, tee joints and adapters.

- (1) #03 (M18, P=1.5) elbow with O ring for pilot P
- (2) R=1/8" hex socket head plug for valve inner drain
- (3) #03 (M18, P=1.5) R=1/4" threaded elbow for pilot T
- (4) Plate can be mounted on either left or right side

- Remove plug 1, set boom control lever to DOWN and wait until oil flows continuously (until bubbles cease).

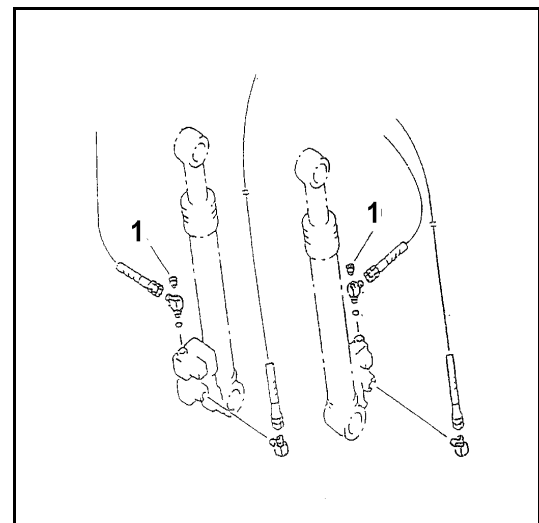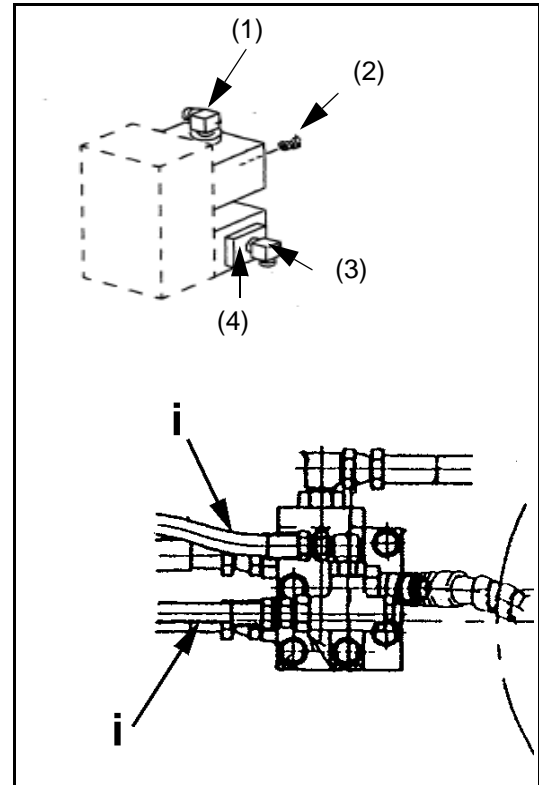

CAUTION

WHEN SELECTING THE ABOVE METHOD, WATCH OUT FOR SPURTING OIL AND PREPARE A PROTECTIVE COVER AND OIL PAN TO PREVENT THE AREA FROM BEING POLLUTED BY OIL.)

- Run the engine at half throttle speed.
 - Set the boom control lever to DOWN (at full stroke) and keep it at this position for approximately 2 minutes. Then, move the boom up and down several times.
2. Air purging of boom lock valve.
- Replace plug 1.

REMARK

Before replacing plug 1, stop the engine and release residual pressure in the piping, while monitoring oil temperature.

- Loosen the hexagonal socket headed plug (indicated in figure 1 for paragraph 5 above), using an Allen wrench.
 - Run the engine at half throttle speed.
 - Set the boom control lever to DOWN to purge air from the plug.
 - Raise and lower the boom several times until oil continuously come out (no bubbles emerge).
 - When air purging ends, tighten the plug.
3. Re connection.
- Reconnect the boom PPC hoses of the control valve so that there is no oil leakage.

REMARK

Before executing this work, stop the engine and release residual pressure in the piping, while monitoring oil temperature.

PURGING AIR FROM HYDRAULIC DRIFT PREVENTATIVE VALVE PPC CIRCUITS OF MID LINK AND ARM CYLINDER.

REMARK

Purge air in accordance with section "Purging air from hydraulic drift preventative valve PPC circuit of boom cylinder."

1. Connection of hydraulic drift preventative valve PPC circuits of mid link and arm cylinders.
 - For details of hose connections of the long boom PPC circuit, see the parts list.
 - 1 - Mid Link Safety Return Line.
 - 2 - Boom Safety Return Line.
 - 3 - Arm Safety Return Line.
2. Installation to mid link cylinder.
 - Connect hose 5 in Figure 2 to hose 6 in Figure 3, then purge air.
3. Installation to arm cylinder.
 - Connect hose 2 in Figure 2 to hose 8 in Figure 4, then purge air.


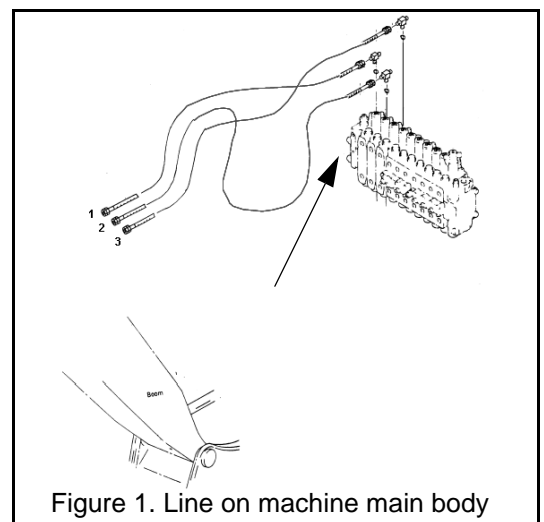


Figure 1. Line on machine main body

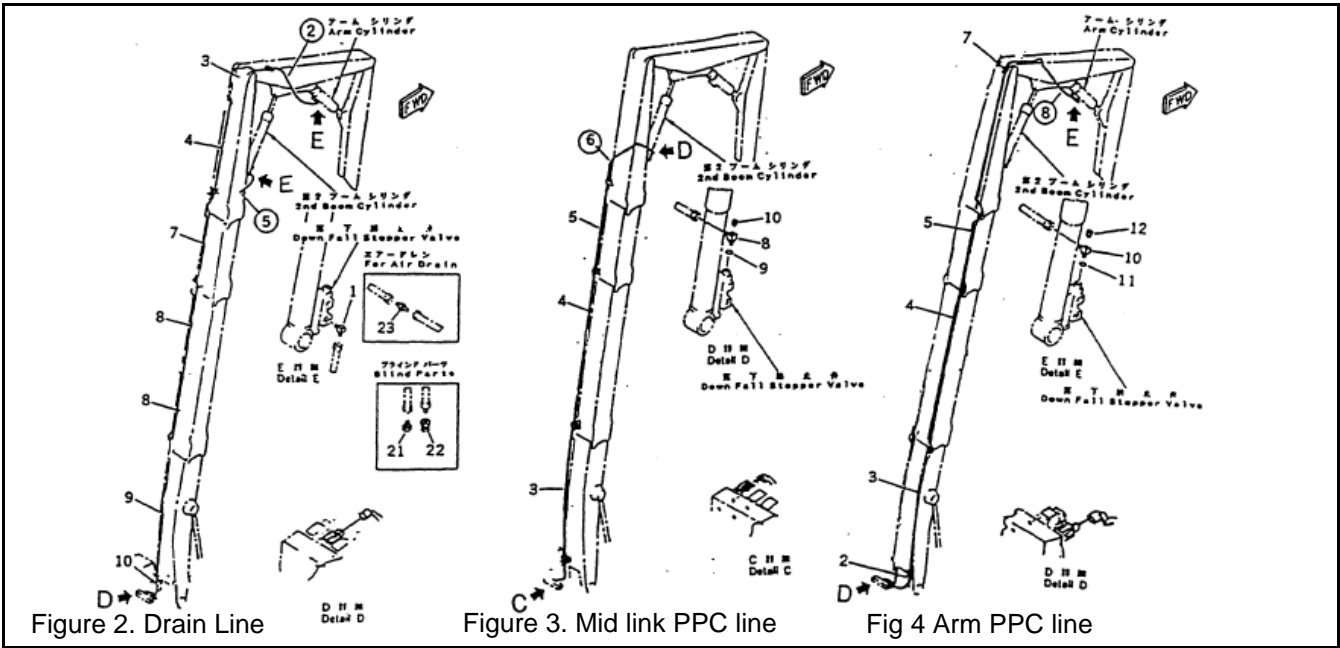


TRANSPORTATION (high reach demolition equipment fitted)

WARNING

Please read and make sure that you understand the SAFETY section before reading this section.


PROCEDURE FOR LOADING ON TO TRAILER

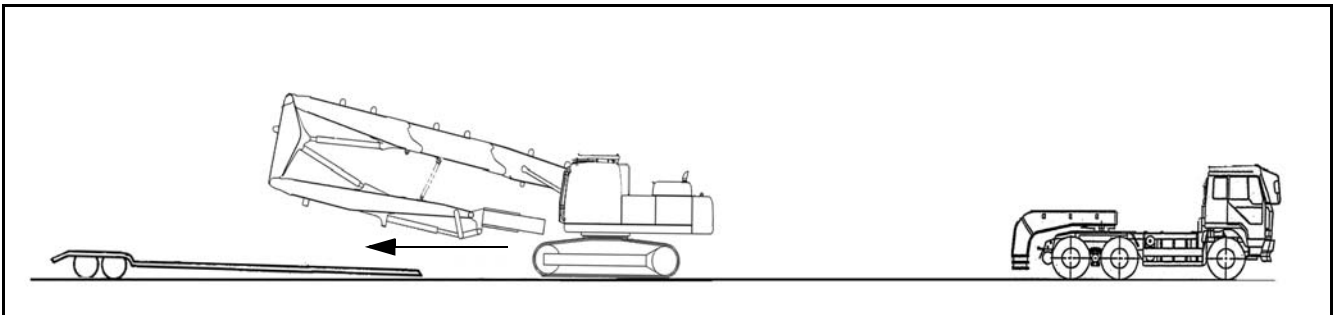


1. With the work equipment in the standard travel position, align the machine with the trailer.
2. Lower the work equipment so that it is in the posture shown above. Be careful not to strike the trailer with the demolition equipment

WARNING

The stability of the machine is reduced when the equipment is in this position. Always move the machine **EXTREMELY SLOWLY** and do not slew the machine.

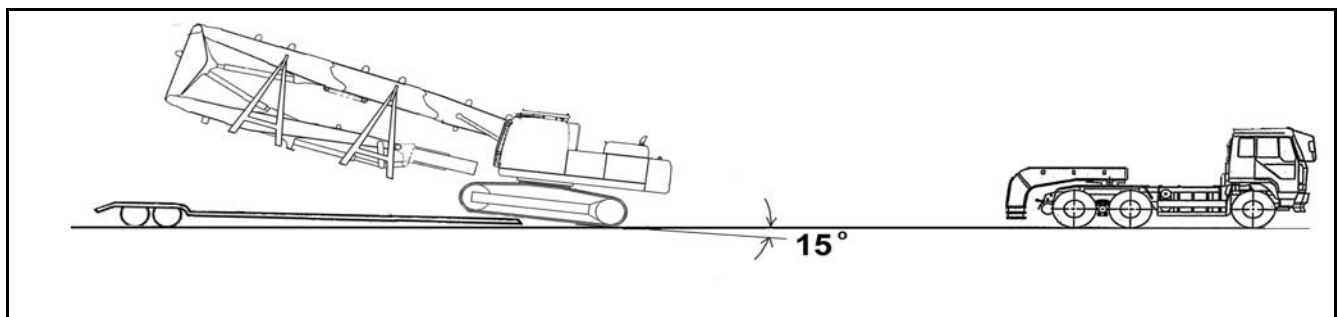

3. Make sure the trailer is firmly secured and will not move when the machine approaches.
4. Slowly mount the trailer, making sure at all times that the tracks are properly aligned with the trailer. If the machine becomes misaligned, reverse the machine from the trailer and start again. NEVER try to steer or slew the machine when it is in contact with the trailer. Do not exceed an angle of 15 degrees from the horizontal, as shown.
5. As the machine slowly travels onto the trailer, the weight of the work equipment will rock the machine onto the trailer. Gently move the machine further onto the trailer, so that it stabilises.

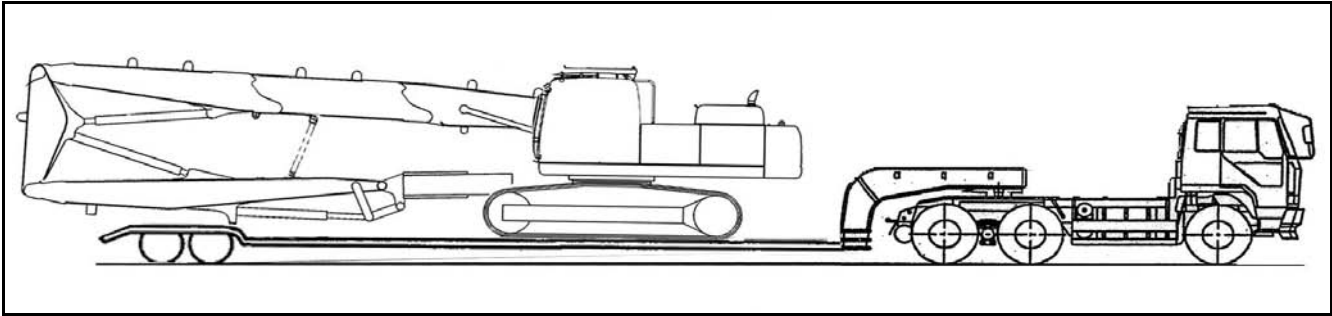

6. Carefully lower the work equipment into the parked position. Exit the cab carefully - the floor is higher above the ground than before.
7. Secure the machine and reconnect the trailer neck. If the transport pin is not already installed, install it now.

REMARK

Carry out this operation in reverse when unloading the machine from the trailer.

TRANSPORTATION (demolition digging equipment fitted)**PROCEDURE FOR LOADING ON TO TRAILER**

1. Follow the same procedure as outlined for the standard excavator (see main machine manual).


CAUTION

Make sure that the additional counterweight is removed when the demolition digging equipment is fitted.

TRANSPORTATION (high reach demolition equipment alone)**PROCEDURE FOR LOADING ON TO TRAILER**

CAUTION

It is the responsibility of the transporting company to ensure that the load is secure and safe.

This procedure includes the following basic steps:

1. Prepare the work equipment.
2. Approach the trailer.
3. Install the equipment onto the trailer.
4. Detach the work equipment and move machine away.


PREPARING HIGH REACH WORK EQUIPMENT FOR TRANSPORT

1. There must be plenty of room available to manoeuvre the machine for removal of work equipment. Make sure the operations are carried out in a flat, level, spacious area.


HIGH REACH DEMOLITION EQUIPMENT 27M TRANSPORTATION (high reach demolition equip-

- Fit the transport pin, holding the demolition equipment arm to the demolition boom.

CAUTION
 With the transport pin in position, do not operate the arm or mid link. Significant damage to the machine will result.

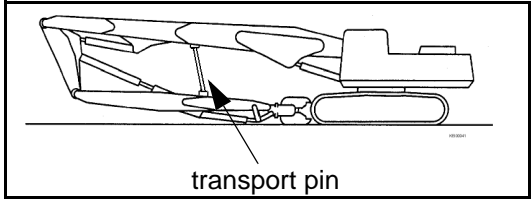


- With the high reach work equipment in the normal travel position (see diagram), move the machine into a position where there is plenty of room to access the work equipment, even in the lowered position.
- Carefully lower the demolition work equipment.

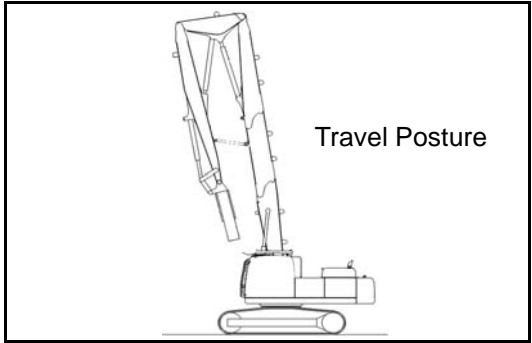

WARNING
 Switch off the machine and place the supplied warning tag onto the safety lock lever.

- Assemble the work equipment support to the work equipment brackets. The demolition work equipment stand is in two sections. Each section consists of three items:


	Item	Quantity
1	Left Support	1
2	Right Support	1
3	Support Brace	2

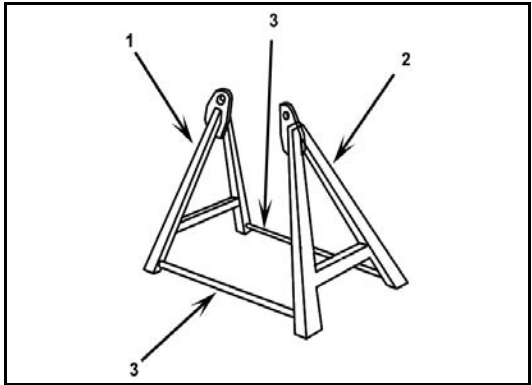

- Insert pins (supplied with the machine) to locate the boom brackets onto the Stand brackets. (position A, B, Action 1).


WARNING
 Securely fix the pins with the spring pins supplied. (position C), Action 2.

- Using suitable supports and handling equipment, assemble the Support Braces (Item 3) to the Left and Right Support (Items 1 and 2), to form the complete Stand Section, shown in the diagram.


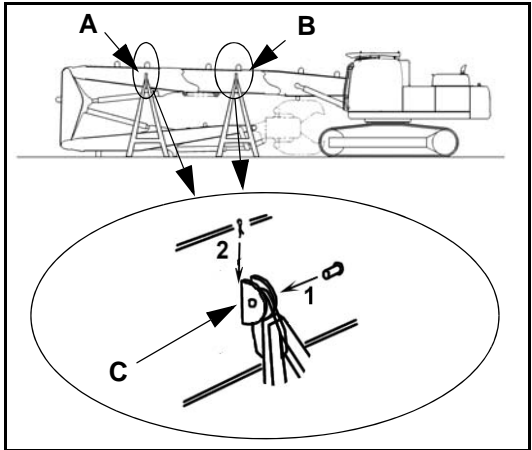


WARNING
 Securely fix the brace pins with the spring pins provided.

- Slowly lift the work equipment, so that both supports are lifted from the ground.

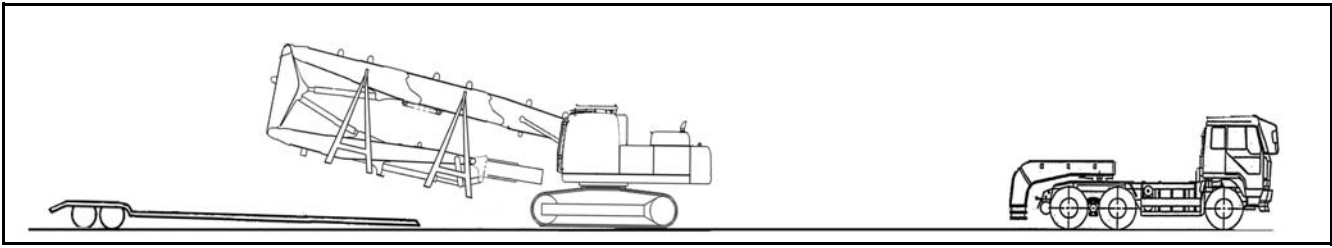APPROACH THE TRAILER

9. Make sure the trailer is firmly secured and will not move when the machine approaches. Take care not to strike the trailer with either the work equipment or the stands.
10. Slowly mount the trailer, making sure at all times that the tracks are properly aligned with the trailer. If the machine becomes misaligned, reverse the machine from the trailer and start again. NEVER try to steer or slew the machine when it is in contact with the trailer. Do not exceed an angle of 15 degrees from the horizontal, as shown.
11. As the machine slowly travels onto the trailer, the weight of the work equipment will rock the machine onto the trailer. Gently move the machine further onto the trailer, so that it stabilises.

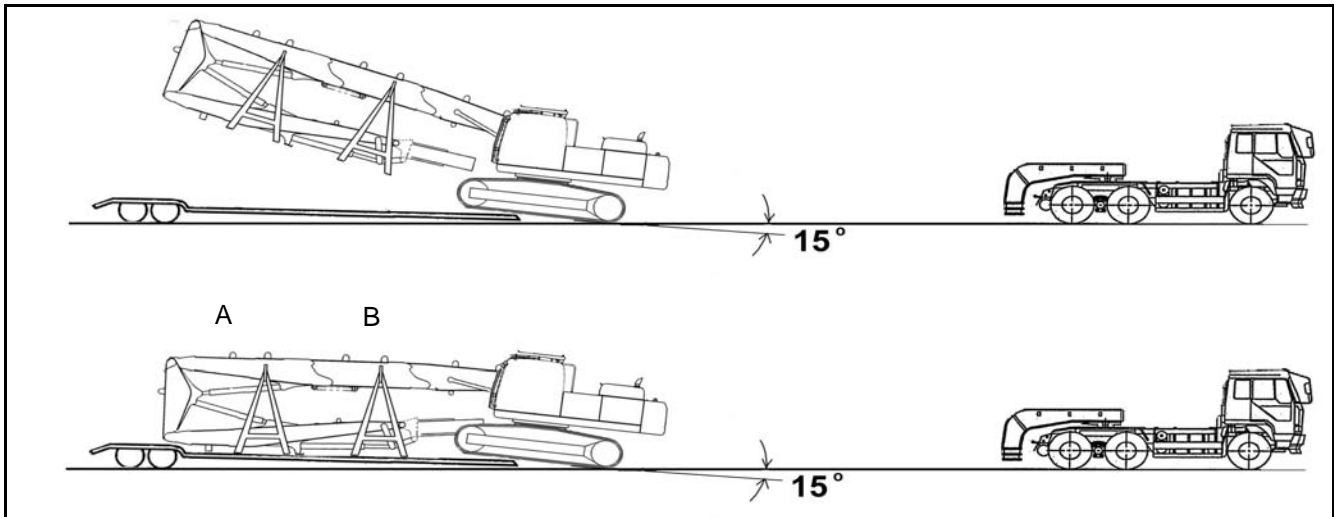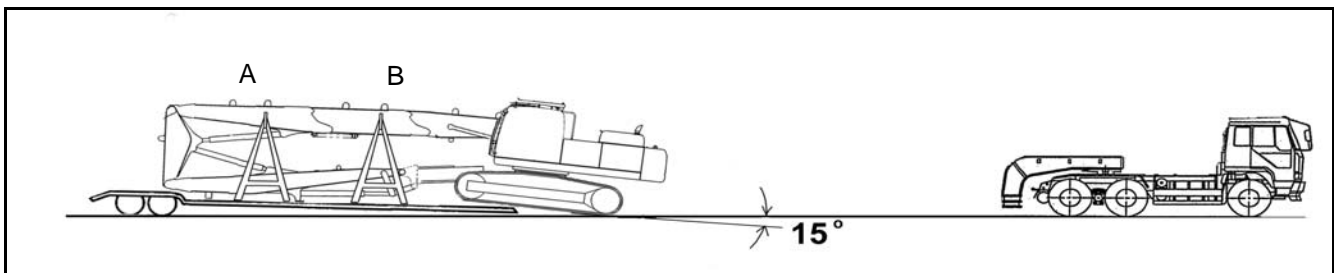**INSTALL THE EQUIPMENT ONTO THE TRAILER**


12. Carefully lower the work equipment into the trailer bed so that stand A settles onto the trailer and stand B remains lifted off the trailer.
13. Secure the work equipment to the trailer. It is the responsibility of the transporting company to ensure the load is safely stowed.

DISCONNECT THE EQUIPMENT FROM THE BASE MACHINE

14. Relieve the pressure in the hydraulic circuits by removing the filler cap from the hydraulic oil tank and operating the controls of the machine.


! CAUTION

Make sure that all equipment is clean at all times when removing hydraulic power lines. Particularly ensure that no foreign matter enters the hydraulic circuit. When hydraulic lines are separated, make sure that all open ends are plugged.

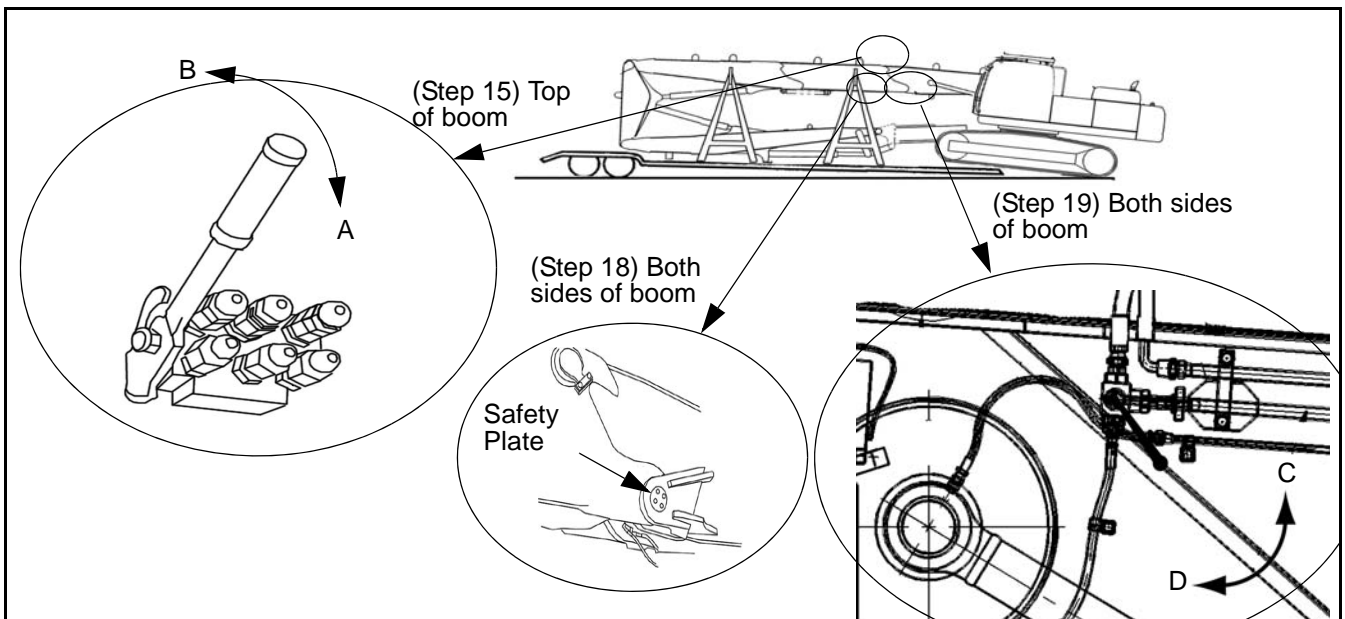

15. Disconnect the banked hydraulic connectors on the top of the demolition first boom. (A - connect; B - disconnect).
16. Disconnect the individual hydraulic connections around the demolition first boom.
17. Separate the grease hoses and protect the exposed ends in the same way as the main hydraulic lines. Plug the open end of the tube with end fittings (heads), supplied as loose parts with the machine.
18. Remove the safety plates from the first boom release pins.


19. Open the valves on the pin retract circuit (left and right side of the demolition first boom) to allow hydraulic pressure to be applied to the retractable pins.
(C - closed - no power to pin;
D - open - retractable pin will operate)
20. Make sure that personnel are clear from the boom release pins and start the engine.
21. Operate the "Attachment Rotate" function. Left Hand (LH) button makes the pins retract, Right Hand (RH) button makes the pins extend.

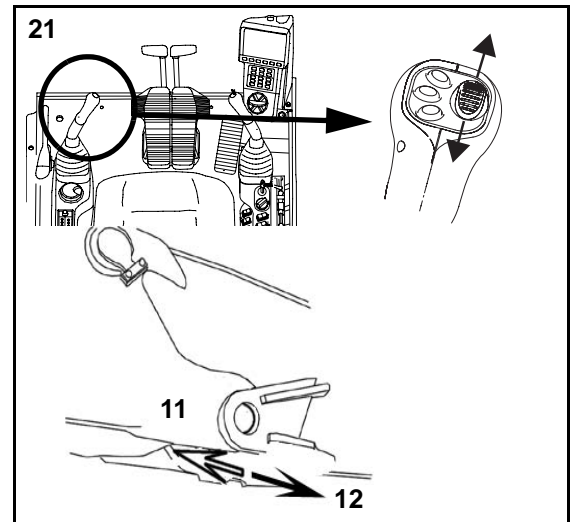

CAUTION

Check that the pins are fully retracted before moving the machine.

22. Carefully lower the first boom section to settle stand B onto the trailer. Then simultaneously lower the first boom and reverse the machine away from the demolition equipment, to disengage the upper pin.
23. Ensure that all exposed bores, pins, hoses and tubes are thoroughly protected from corrosion and foreign matter.

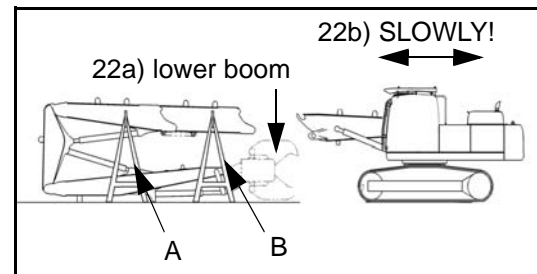

WARNING

When reversing the machine from the demolition work equipment, make sure that all operators are standing well clear of the machine and equipment.


Removing the High Reach Demolition Equipment from the trailer is achieved by following steps above in the reverse order (start with step 23 and finish with step 1).

CAUTION

Whenever installing work equipment, always complete the installation by purging the hydraulic circuits of air. Follow the steps in PURGING AIR PROCEDURES (7-41)

SPECIFICATIONS


WORKING RANGE (PC450LCD HIGH REACH)

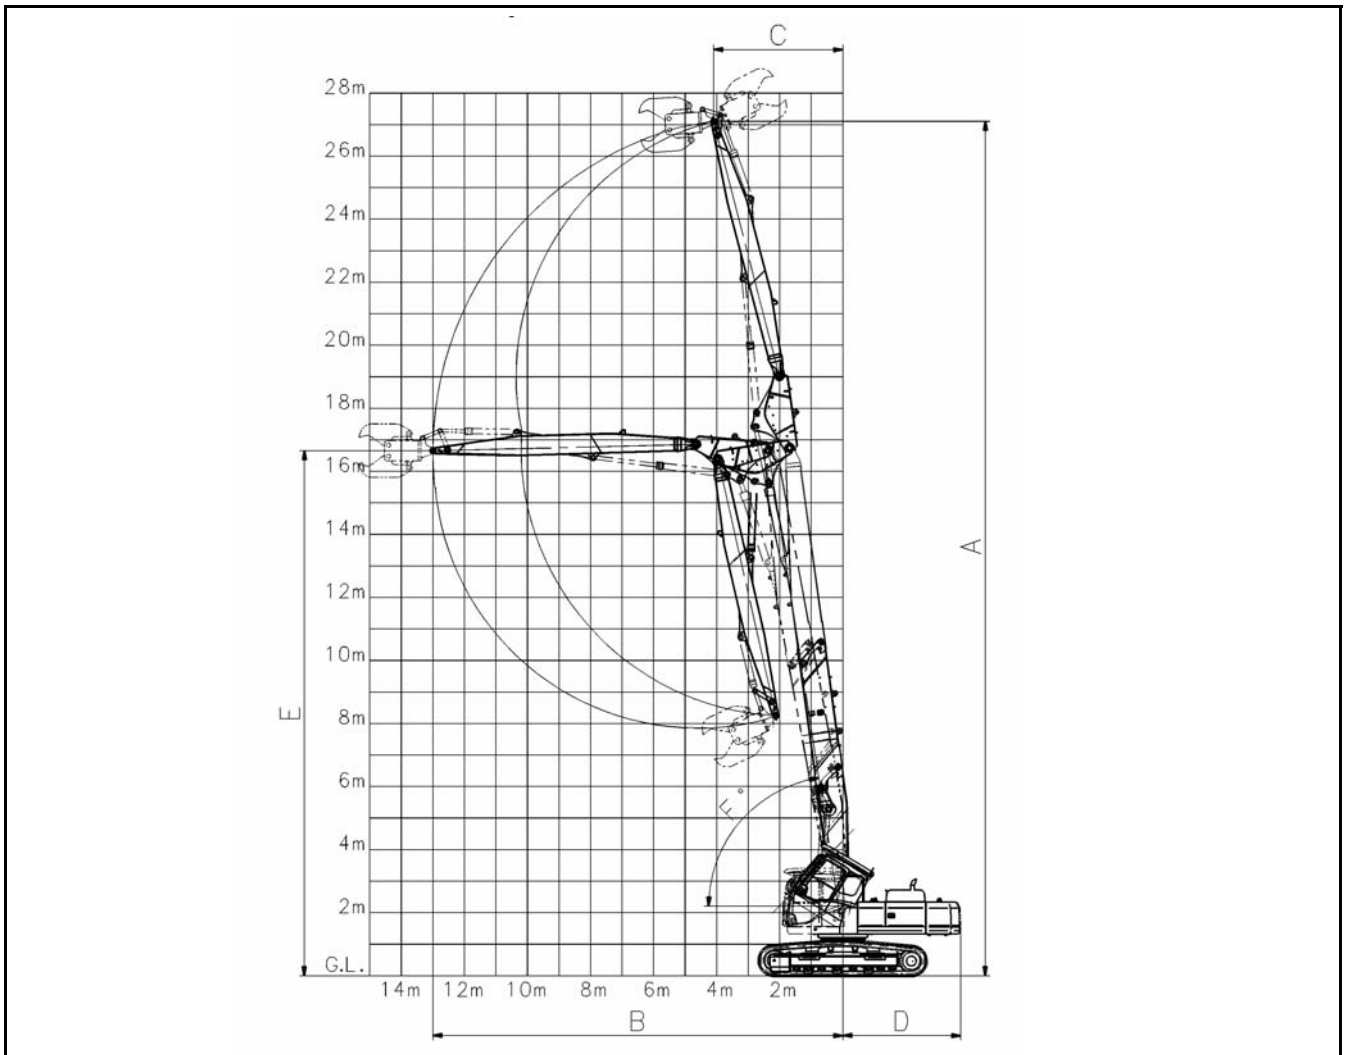

	Working ranges	Unit	HIGH REACH
A	Maximum working height (to pin at arm end)	mm	27100
B	Maximum forward reach	mm	13000
C	Minimum swing radius of arm end pin (max height)	mm	4100
D	Tail Swing radius	mm	3740
E	Height at Max. Reach	mm	16650
F	Minimum boom angle from ground	degrees	81
	Operating weight, 600mm shoes*	kg	57585
	Operating weight, 700mm shoes*	kg	57035

*Includes 2500kg demolition attachment


WORKING RANGE (PC450LCD MEDIUM REACH)

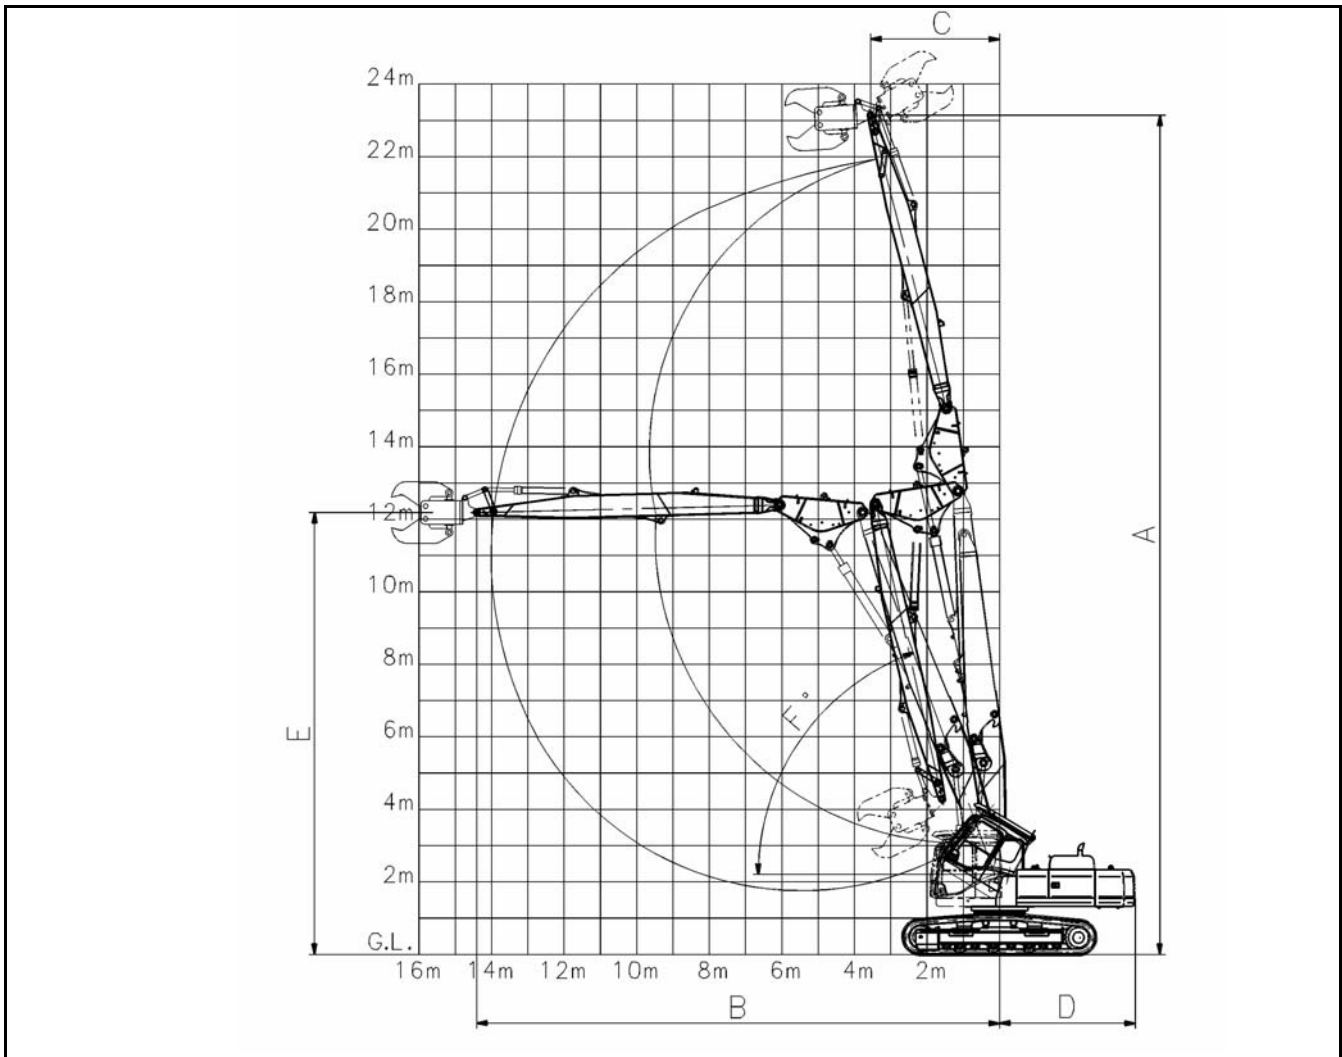

	Working ranges	Unit	MEDIUM REACH
A	Maximum working height (to pin at arm end)	mm	23140
B	Maximum forward reach	mm	14410
C	Minimum swing radius of arm end pin (max height)	mm	3550
D	Tail Swing radius	mm	3740
E	Height at Max. Reach	mm	12180
F	Minimum boom angle from ground	degrees	70
	Operating weight, 600mm shoes*	kg	54865
	Operating weight, 700mm shoes*	kg	55315

*Includes 2500kg demolition attachment


WORKING RANGE (PC450LCD LOW REACH)

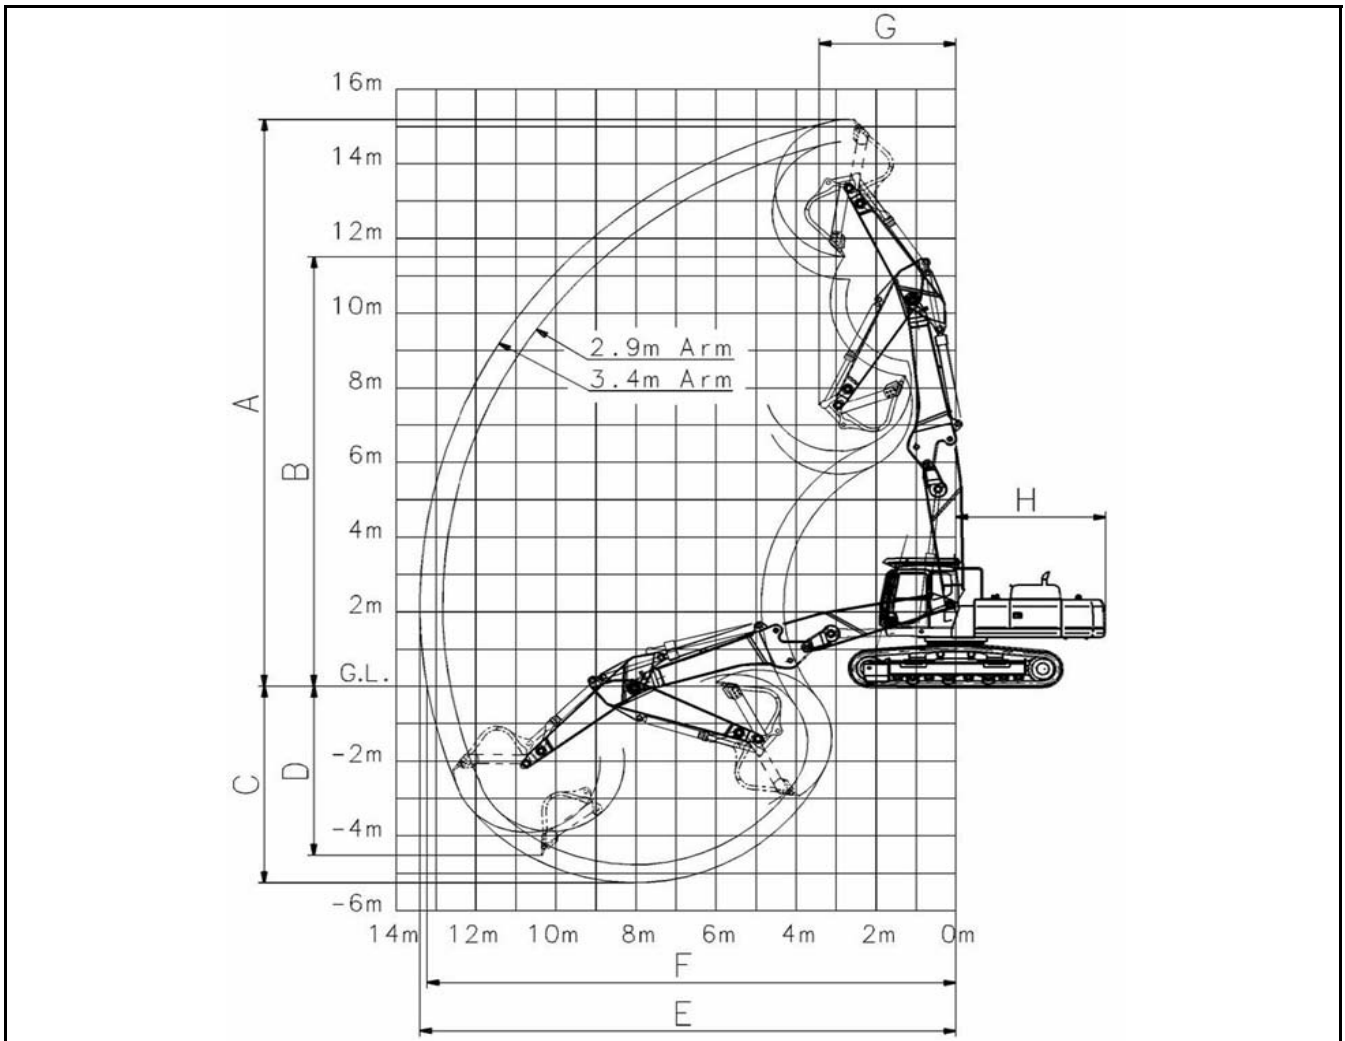

	Working ranges	Unit	2900mm arm	3400mm arm
A	Maximum working height (to bucket teeth)	mm	14580	15190
B	Maximum Dumping Height (bucket teeth)	mm	10900	11510
C	Maximum Digging Depth (bucket teeth)	mm	4775	5255
D	Maximum Vertical Wall Digging Depth	mm	4045	4520
E	Maximum Digging Reach	mm	12840	13410
F	Maximum Digging Reach at Ground Level	mm	12645	13255
G	Minimum Swing Radius (Bucket loaded)	mm	3450	3425
H	Tail Swing Radius	mm	3740	3740
	Operating weight, 600mm shoes*	kg	49285	48540
	Operating weight, 700mm shoes*	kg	49735	48990

*Includes 2180kg bucket


WORKING RANGE (PC450LCD DIGGING)

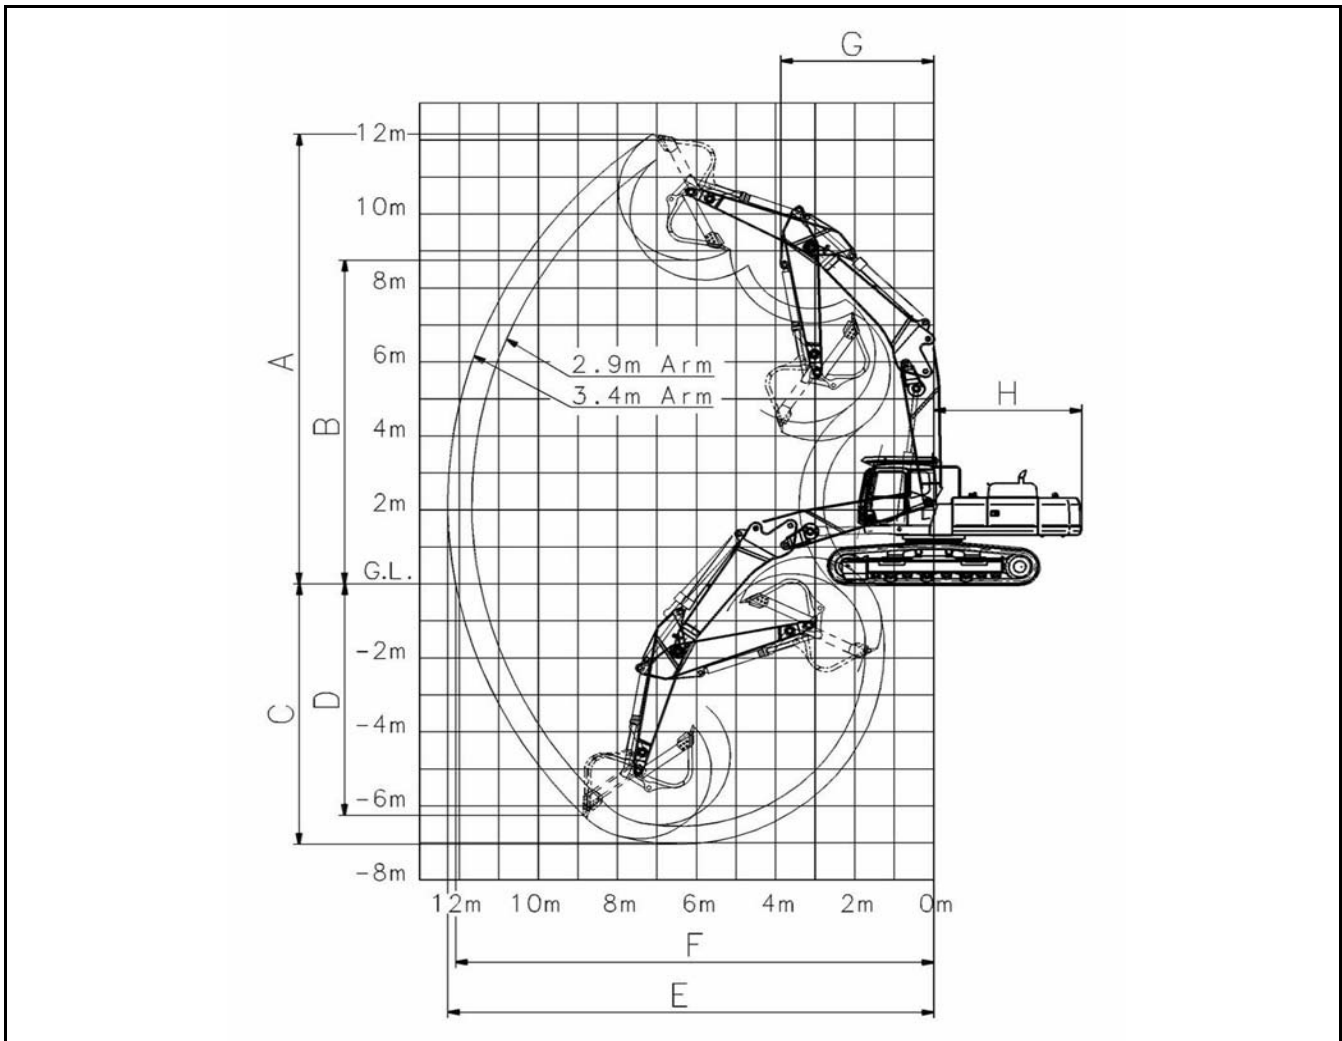

	Working ranges	Unit	2900mm arm	3400mm arm
A	Maximum working height (to bucket teeth)	mm	11470	12150
B	Maximum Dumping Height (bucket teeth)	mm	8215	8750
C	Maximum Digging Depth (bucket teeth)	mm	6555	7035
D	Maximum Vertical Wall Digging Depth	mm	5060	6255
E	Maximum Digging Reach	mm	11680	12290
F	Maximum Digging Reach at Ground Level	mm	11470	12090
G	Minimum Swing Radius (Bucket loaded)	mm	3900	3870
H	Tail Swing Radius	mm	3740	3740
	Operating weight, 600mm shoes*	kg	49285	48540
	Operating weight, 700mm shoes*	kg	49735	48990


*Includes 2180kg bucket

WEIGHTS AND DIMENSIONS

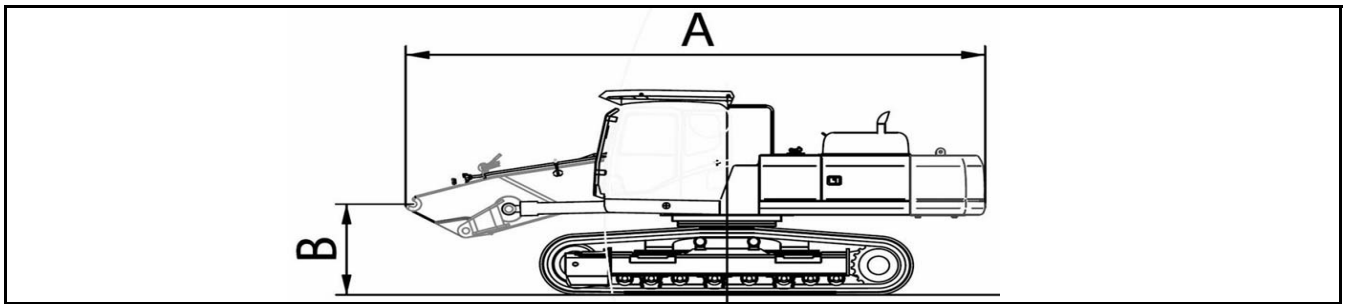

A	TRANSPORT LENGTH	8315 mm
B	MAX. BOOM HEIGHT (incl. Hyd lines)	1540 mm
	TRANSPORT WEIGHT	40155 kg*
	ADDITIONAL WEIGHT FOR HYDRAULICALLY VARIABLE UNDERCARRIAGE	7180 kg
	ADDITIONAL COUNTERWEIGHT (1460mm x 640mm x 550mm)	5280 kg

*Includes 600mm shoes

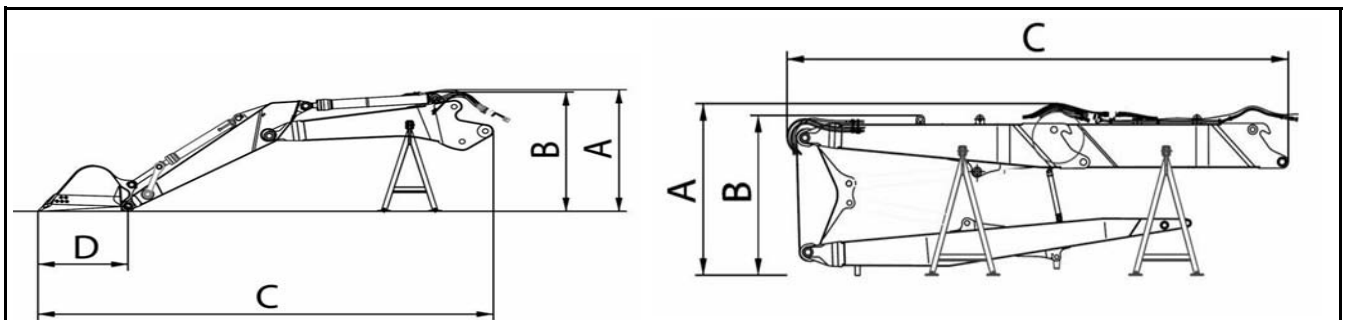


EQUIPMENT		EXCAVATION BOOM WITH ARM		HIGH REACH
		2900mm arm	3400mm arm	
A	TOTAL HEIGHT (Incl. Hydraulic lines)	3025 mm	3025 mm	3425 mm
B	HEIGHT	2980 mm	2980 mm	3250 mm
C	LENGTH	8780 mm	9330 mm	11412 mm
D	TIP RADIUS	1845 mm	1845 mm	
	SUPPORT WEIGHT	320 kg	320 kg	720 kg
	2nd BOOM WEIGHT	3125 kg	3125 kg	1720 kg
	3rd BOOM WEIGHT			2500 kg
	MID LINK WEIGHT			1050 kg
	ARM WEIGHT	1715 kg	1659 kg	1935 kg
	BUCKET WEIGHT	2180 kg	2180 kg	
	TOTAL WEIGHT (Incl Cyl & links	8605 kg	8550 kg	9370 kg

TRANSPORTATION (High and Medium Reach work equipment) - PC450LCD

The height dimensions vary according to the trailer.

Obey all state and local laws governing the weight, width and length of the load. Observe all regulations governing wide loads.

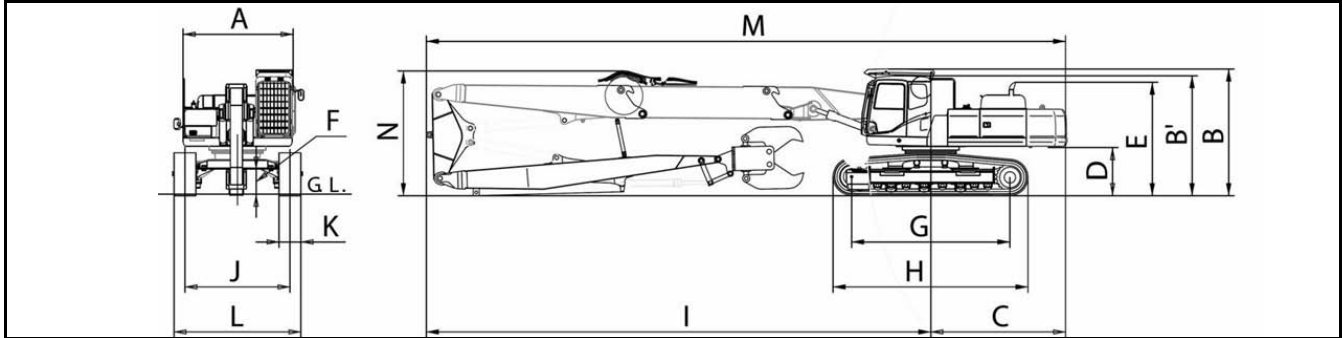


		PC450LCD-8 (with mid boom)	PC450 LCD-8 (without mid boom)
A	Overall width of Upper Structure ¹	2995mm	
B	Overall height of Cab with OPG	3485mm	
B ¹	Overall height of Cab without OPG	3265mm	
C	Tail Length	3705mm	
D	Clearance under counterweight	1320mm	
E	Machine Tail Height	3107mm	
F	Ground Clearance	685mm	
G	Track Length on ground	4350mm (HWG = 4315mm)	
H	Track Length	5355mm	
I	Swing Centre to front distance	15170mm	11165mm
J	Track Gauge	2390 - 2890 mm ² (HWG = 2280 - 3130 mm ²)	
K	Track shoe width	600mm, 700mm	
L	Overall track width with		
	600 mm shoes	2990-3490mm ²	
	700 mm shoes	3090-3590mm ²	
M	Transport Length	18870mm	14870mm
N	Maximum Boom Height	3350mm	3340mm

1 Overall width of upper structure excludes sideguards, handrails and mirrors.

2 Variable track frame in retracted - extended position

TRANSPORTATION (Digging equipment) - PC450LCD

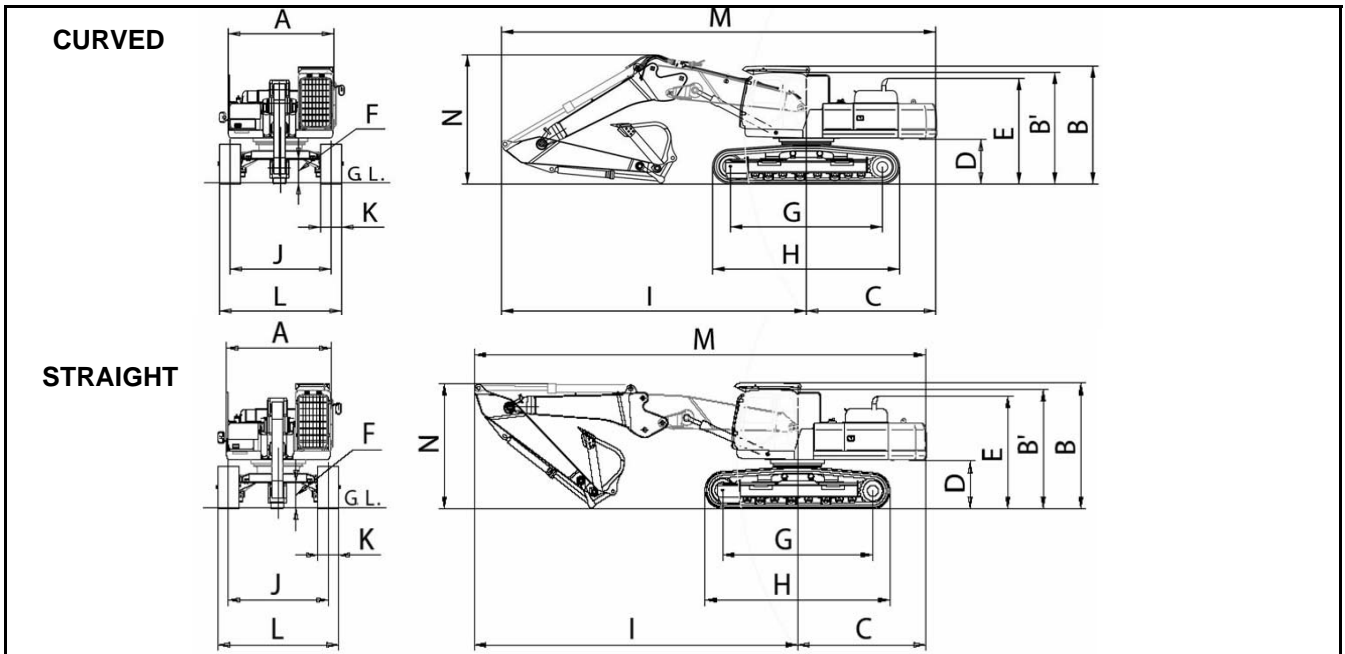

		PC450LCD-8 (curved position)		PC450 LCD-8 (straight position)	
	ARM LENGTH (MM)	2900	3400	2900	3400
A	Overall width of Upper Structure ¹	2995mm	2995mm	2995mm	2995mm
B	Overall height of Cab with OPG	3485mm	3485mm	3485mm	3485mm
B ¹	Overall height of Cab without OPG	3265mm	3265mm	3265mm	3265mm
C	Tail Length	3705mm	3705mm	3705mm	3705mm
D	Clearance under counterweight	1320mm	1320mm	1320mm	1320mm
E	Machine Tail Height	3107mm	3107mm	3107mm	3107mm
F	Ground Clearance	685mm	685mm	685mm	685mm
G	Track Length on ground	4350mm (HWG: 4315mm)	4350mm (HWG: 4315mm)	4350mm (HWG: 4315mm)	4350mm (HWG: 4315mm)
H	Track Length	5355mm	5355mm	5355mm	5355mm
I	Swing Centre to front distance	8850mm	8730mm	9390mm	9365mm
J	Track Gauge	2390 - 2890 ² (HWG: 2280 - 3130) ²	2390 - 2890 ² (HWG: 2280 - 3130) ²	2390 - 2890 ² (HWG: 2280 - 3130) ²	2390 - 2890 ² (HWG: 2280 - 3130) ²
K	Track shoe width	600mm, 700mm	600mm, 700mm	600mm, 700mm	600mm, 700mm
L	Overall track width with				
	600 mm shoes	2990-3490 ² (HWG: 2880 - 3730) ²	2990-3490 ² (HWG: 2880 - 3730) ²	2990-3490 ² (HWG: 2880 - 3730) ²	2990-3490 ² (HWG: 2880 - 3730) ²
	700 mm shoes	3090-3590 ² (HWG: 2980 - 3830) ²	3090-3590 ² (HWG: 2980 - 3830) ²	3090-3590 ² (HWG: 2980 - 3830) ²	3090-3590 ² (HWG: 2980 - 3830) ²
M	Transport Length	12555mm	12430mm	13095mm	13070mm
N	Maximum Boom Height	4030mm	3810mm	3395mm	3455mm

1 Overall width of upper structure excludes sideguards, handrails and mirrors.

2 Variable track frame in retracted - extended position

EXPLANATION OF LIFTING CAPACITY CHART

PC450LCD- 8

NOTICE

Lifting capacity information presented for information/comparison only. Machine is not intended for use as crane.

LEGEND

A : Reach from swing centre

B : Bucket hook height

OF : Lifting capacity (rating overfront)

OS : Lifting capacity (rating overside)

LEGEND

(1) Position of lifting point

(2) Arm length:

(3) Boom length


(4) Hydraulic pressure: 37.3 MPa

WORKING CONDITIONS:

- WITH BUCKET (1914 kg)^o
- IF OBJECT HANDLING IS PERFORMED WITH OTHER TOOL INSTALLED, THE WEIGHT DIFFERENCE OF THE TOOL SHOULD BE DEDUCTED FROM THE VALUES OF THIS TABLE.
- WITH FULLY EXTENDED BUCKET CYLINDER.
- ON A COMPACT HORIZONTAL LEVEL GROUND.

WITH 600 mm WIDTH SHOE.

Loads do not exceed 87% of hydraulic capacity or 75% of tipping capacity (* load limited by hydraulic capacity rather than tipping)

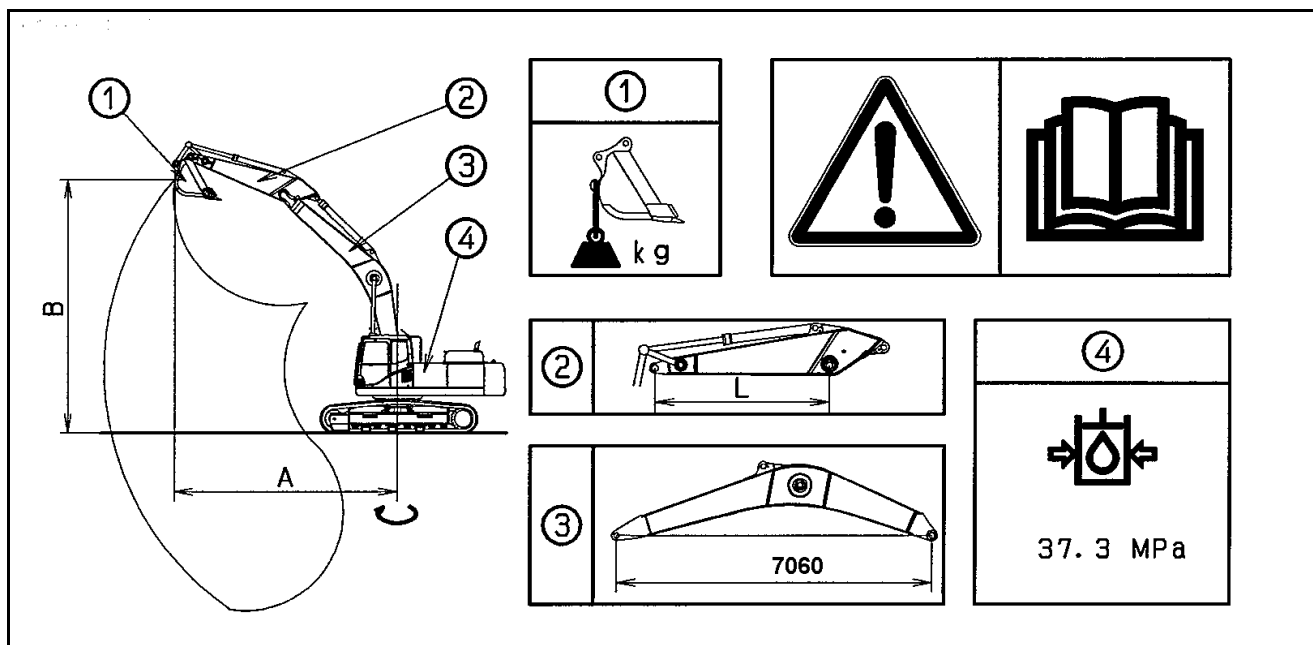

INDEX

INDEX

<A>

AFTER STARTING ENGINE3-131
 AIR CONDITIONER CONTROLS.....3-88
 ASHTRAY.....3-87
 ATTACHMENT GUIDE.....6-26
 ATTACHMENT COMBINATIONS6-26
 AUXILIARY ELECTRIC POWER.....3-105

BEFORE STARTING ENGINE3-111
 BREAKING-IN THE NEW MACHINE1-10
 BUCKET REPLACEMENT AND INVERSION.....3-164
 BUCKET WITH HOOK6-4
 HOOK CONDITION.....6-7
 PROHIBITED OPERATIONS6-7

<C>

CAP WITH LOCK3-85
 COLD WEATHER OPERATION.....3-184
 AFTER COLD WEATHER SEASON3-186
 AFTER DAILY WORK COMPLETION.....3-186
 COLD WEATHER OPERATION INFORMATION ..3-184
 CONTROL LEVERS AND PEDALS3-75
 CONTROLLER3-107
 CONTROLS AND GAUGES.....3-3

<D>

DETAILED CONTROLS AND GAUGES3-5
 DIRECTIONS OF MACHINE1-8
 DOOR LOCK3-85

<E>

ELECTRIC SYSTEM MAINTENANCE4-8
 EMERGENCY ESCAPE HAMMER3-84
 EPA REGULATIONS, ENGINE NUMBER PLATE1-11
 ESCAPE FROM MUD3-161

<F>

FIRE EXTINGUISHER.....3-108
 FOREWORD1-2
 FUSE3-106
 FUSIBLE LINK.....3-107

<G>

GENERAL OPERATION INFORMATION3-157
 GENERAL PRECAUTIONS FOR SAFETY6-2
 PRECAUTIONS WHEN REMOVING OR
 INSTALLING.....6-2
 PRECAUTIONS WHEN SELECTING6-2
 PRECAUTIONS WHEN USING6-3
 READ THE INSTRUCTION MANUAL
 THOROUGHLY6-2
 GENERAL VIEW7-51
 GENERAL VIEW CONTROLS AND GAUGES7-3,7-56
 GENERAL VIEW OF MACHINE.....7-2,7-51,7-52,7-53,7-54

GREASE PUMP HOLDER3-108

<H>

HANDLING MACHINES EQUIPPED WITH KOMTRAX6-33
 BASIC PRECAUTIONS.....6-33
 HANDLING OIL, FUEL, COOLANT, AND PERFORMING
 OIL CLINIC4-4
 HIGH REACH DEMOLITION EQUIPMENT 27M7-1

<I>

INTRODUCTION1-5

<L>

LIFTING MACHINE3-178
 LOADING AND UNLOADING WITH TRAILER3-170
 LOCKING.....3-168
 LONG TERM STORAGE.....3-187
 AFTER STORAGE3-188
 BEFORE STORAGE3-187
 DURING STORAGE.....3-187
 STARTING MACHINE AFTER LONG-TERM
 STORAGE3-188

<M>

MACHINE INSPECTION AFTER DAILY WORK.....3-168
 MACHINE OPERATION.....3-142
 MACHINE OPERATIONS AND CONTROLS3-109
 MACHINE READY FOR ATTACHMENT.....6-8
 ATTACHMENT OPERATIONS6-21
 HYDRAULIC CIRCUIT6-12
 LOCATIONS.....6-8
 LONG TERM STORAGE.....6-25
 SPECIFICATIONS.....6-25
 MACHINE VIEW ILLUSTRATIONS.....3-2
 OVERALL MACHINE VIEW3-2
 MAGAZINE BOX3-87
 MAINTENANCE INFORMATION4-2
 MAINTENANCE PROCEDURE.....4-20
 CHECK BEFORE STARTING4-47
 EVERY 1000 HOURS MAINTENANCE4-67
 EVERY 2000 HOURS MAINTENANCE4-75
 EVERY 250 HOURS MAINTENANCE4-49
 EVERY 4000 HOURS MAINTENANCE4-80
 EVERY 50 HOURS MAINTENANCE4-48
 EVERY 500 HOURS MAINTENANCE4-54
 EVERY 5000 HOURS MAINTENANCE4-82
 EVERY 8000 HOURS MAINTENANCE4-84
 WHEN REQUIRED.....4-21
 MAINTENANCE SCHEDULE4-17
 MAINTENANCE INTERVAL FOR HYDRAULIC
 BREAKER4-19
 MAINTENANCE SCHEDULE CHART4-17
 MONITORING SYSTEM.....3-5

<O>

OUTLINE OF SERVICE4-4

<P>	
PARKING MACHINE	3-166
POSITION FOR ATTACHING SAFETY LABELS.....	7-4
PROCEDURE FOR INCREASING OR REDUCING TRACK FRAME GAUGE	3-182
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE	1-11
PRODUCT INFORMATION.....	1-11
PROHIBITED OPERATIONS	3-153
<R>	
RADIO	3-100
RECOMMENDED APPLICATIONS.....	3-162
RECOMMENDED ATTACHMENT OPERATIONS.....	6-29
HYDRAULIC BREAKER.....	6-29
RECOMMENDED FUEL, COOLANT, AND LUBRICANT	4-12
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL	4-14
<S>	
SAFETY CRITICAL PARTS	4-16
SAFETY CRITICAL PARTS LIST.....	4-16
SAFETY INFORMATION.....	1-3,2-2,2-13
SAFETY LABELS	2-4,7-4
LOCATION OF SAFETY LABELS.....	2-4
SAFETY MACHINE OPERATION.....	2-22
BATTERY	2-31
LIFTING OBJECTS WITH BUCKET	2-34
OPERATION	2-24
STARTING ENGINE.....	2-22
TOWING.....	2-33
TRANSPORTATION	2-30
SAFETY MAINTENANCE INFORMATION	2-35
SERVICE METER LOCATION	1-12
SPECIFICATIONS.....	5-2
STARTING ENGINE.....	3-128
STEERING THE MACHINE.....	3-146
STOPPING THE ENGINE	3-141
SUN ROOF.....	3-78
SWINGING	3-148
SWITCHES.....	3-69,7-4
<T>	
TIGHTENING TORQUE LIST.....	4-15
TIGHTENING TORQUE SPECIFICATIONS	4-15
TOOL BOX	3-108
TRANSPORTATION.....	3-169
TRANSPORTATION POSTURE	3-180
TRANSPORTATION PROCEDURE.....	3-169
TRAVELING ON SLOPES.....	3-159
TROUBLES AND ACTIONS.....	3-189
DISCHARGED BATTERY	3-192
LIGHTWEIGHT TOWING HOLE	3-191
OTHER TROUBLE	3-196
PHENOMENA THAT ARE NOT FAILURES	3-190
RUNNING OUT OF FUEL	3-189
SEVERE JOB CONDITION.....	3-191
TOWING THE MACHINE	3-190
<V>	
VISIBILITY FROM OPERATORSSEAT'.....	1-9
<W>	
WEAR PARTS.....	4-11
WEAR PARTS LIST	4-11
WINDSHIELD	3-79
WORK EQUIPMENT CONTROLS AND OPERATIONS.....	3-149
WORKING MODE	3-151
<Y>	
Your Machine Serial Numbers And Distributor	1-12

COLOPHON

PC450,450LC,PC450LCD-7E0 GALEO HYDRAULIC EXCAVATOR

Form No. UEAM007200

©2007 KOMATSU
All Rights Reserved
Printed in Belgium 03-07
