

[Open front screen](#)

**INDUSTRIAL  
DIESEL ENGINE**

**A-4JG1  
MODEL**

**WORKSHOP MANUAL**

**ISUZU MOTORS LIMITED**

## **FOREWORD**

This Workshop Manual is designed to help you perform necessary maintenance, service, and repair procedures on applicable Isuzu industrial engines.

Information contained in this Workshop Manual is the latest available at the time of publication.

Isuzu reserves the right to make changes at any time without prior notice.

This Workshop Manual is applicable to 1999 and later models.

## **NOTICE**

Before using this Workshop Manual to assist you in performing engine service and maintenance operations, it is recommended that you carefully read and thoroughly understand the information contained in Section - 1 under the headings "General Repair Instruction" and "Notes on The Format of This Manual"

## TABLE OF CONTENTS

<b>SECTION 1.</b>	<b>GENERAL INFORMATION.....</b>	<b>1</b>
<b>SECTION 2.</b>	<b>MAINTENANCE .....</b>	<b>17</b>
<b>SECTION 3.</b>	<b>ENGINE ASSEMBLY (1) .....</b> <b>(DISASSEMBLY)</b>	<b>29</b>
<b>SECTION 4.</b>	<b>ENGINE ASSEMBLY (2) .....</b> <b>(INSPECTION AND REPAIR)</b>	<b>47</b>
<b>SECTION 5.</b>	<b>ENGINE ASSEMBLY (3) .....</b> <b>(REASSEMBLY)</b>	<b>81</b>
<b>SECTION 6.</b>	<b>LUBRICATING SYSTEM.....</b>	<b>109</b>
<b>SECTION 7.</b>	<b>COOLING SYSTEM .....</b>	<b>121</b>
<b>SECTION 8.</b>	<b>FUEL SYSTEM.....</b>	<b>127</b>
<b>SECTION 9.</b>	<b>ENGINE ELECTRICALS.....</b>	<b>141</b>
<b>SECTION 10.</b>	<b>TROUBLESHOOTING.....</b>	<b>169</b>
<b>SECTION 11.</b>	<b>SPECIAL TOOL LIST .....</b>	<b>195</b>
<b>SECTION 12.</b>	<b>REPAIR STANDARDS.....</b>	<b>199</b>
<b>SECTION 13.</b>	<b>CONVERSION TABLE.....</b>	<b>213</b>

**SECTION 1**

**GENERAL INFORMATION**

**TABLE OF CONTENTS**

<b>ITEM</b>	<b>PAGE</b>
<b>General repair instructions</b> .....	<b>2</b>
<b>Notes on the format of this manual</b> .....	<b>2</b>
<b>Main data and specifications</b> .....	<b>6</b>
<b>Tightening torque specifications</b> .....	<b>7</b>

### GENERAL REPAIR INSTRUCTIONS

1. Before performing any service operation with the engine mounted, disconnect the grounding cable from the battery.  
This will reduce the chance of cable damage and burning due to short circuiting.
2. Always use the proper tool or tools for the job at hand.  
Where specified, use the specially designed tool or tools.
3. Use genuine ISUZU parts.
4. Never reuse cotter pins, gaskets, O-rings, lock washers, and self locking nuts. Discard them as you remove them. Replace them with new ones.
5. Always keep disassembled parts neatly in groups. This will ensure a smooth reassembly operation.  
It is especially important to keep fastening parts separate. These parts vary in hardness and design, depending on their installation position.
6. All parts should be carefully cleaned before inspection or reassembly.  
Oil ports and other openings should be cleaned with compressed air to make sure that they are completely free of obstructions.
7. Rotating and sliding part surfaces should be lubricated with oil or grease before reassembly.
8. If necessary, use a sealer on gaskets to prevent leakage.
9. Nut and bolt torque specifications should be carefully followed.
10. Always release the air pressure from any machine-mounted air tank(s) before dismantling the engine or disconnecting pipes and hoses. To not do so is extremely dangerous.
11. Always check and recheck your work. No service operation is complete until you have done this.

### NOTES ON THE FORMAT OF THIS MANUAL

This Workshop Manual is applicable to ISUZU industrial engine or engines which is or are stated in the title.

When more than two engine models are dealt in the manual, such engines have common parts and components as well as data and specifications, unless otherwise specified.

1. Find the applicable section by referring to the Table of Contents at the beginning of the Manual.
2. Common technical data such as general maintenance items, service specifications, and tightening torques are included in the "General Information" section.  
The section ENGINE ASSEMBLY is an exception. This parts are divided in three sections to facilitates indexing.
3. Each section is divided into sub-sections dealing with disassembly, inspection and repair, and reassembly.

4. When the same servicing operation is applicable to several different units, the manual will direct you to the appropriate page.
5. For the sake of brevity, self-explanatory removal and installation procedures are omitted. More complex procedures are covered in detail.
6. Each service operation section in this Workshop Manual begins with an exploded view of the applicable area. A brief explanation of the notation used follows.

**Disassembly Steps - 2**

1. Water by-pass hose	10. Cylinder head gasket
2. Thermostat housing	▲ 11. Crankshaft damper pulley with dust seal
3. Water pump	12. Timing gear case cover
▲ 4. Injection nozzle holder	13. Timing gear cover
5. Glow plug and glow plug connector	14. Timing gear oil pipe
6. Cylinder head cover	15. Idler gear "B" and shaft
▲ 7. Rocker arm shaft and rocker arm	16. Idler gear "A"
8. Push rod	▲ 17. Idler gear shaft
▲ 9. Cylinder head	

Inverted Engine

- Parts marked with an asterisk (\*) are included in the repair kit.
- Parts within a square frame are to be removed and installed as a single unit, and their disassembly steps or reassembly steps are shown in the illustrations respectively.
- The number tells you the service operation sequence.
- Removal of unnumbered parts is unnecessary unless replacement is required.
- The "\* Repair Kit" indicates that a repair kit is available.
- The parts listed under "Disassembly Steps" or "Reassembly Steps" are in the service operation sequence.
- The removal or installation of parts marked with a triangle (▲) is an important operation. Detailed information is given in the text.

**GENERAL INFORMATION**

7. Below is a sample of the text of the Workshop Manual.

**4. Camshaft Timing Gear**

- 1) Install the thrust plate ①.
- 2) Apply engine oil to the bolt threads ②.
- 3) Install the camshaft timing gear with the timing mark stamped side facing out.

Camshaft Timing Gear Bolt Torque      kgf·m(lb.ft/N·m)

11.0 ± 1.0 (79.5 ± 7.2/107.8 ± 9.8)
-------------------------------------

**13. Crankshaft Rear Oil Seal**

- 1) Apply engine oil to the oil seal lip circumference and the oil seal outer circumference.
- 2) Use the oil seal installer to install the oil seal to the cylinder body.

Oil Seal Installer: 5-8840-0141-0

**14. Flywheel Housing**

- 1) Apply liquid gasket to the shaded area shown in the illustration.
- 2) Tighten the flywheel housing bolts to the specified torque a little at a time in the sequence shown in the illustration.

Flywheel Housing Bolt Torque      kgf·m(lb.ft/N·m)

M10x1.25 (0.40x0.05) Bolt	5.6±1.0 (40.5±7.2/ 54.9±9.8)
M12x1.25 (0.47x0.05) Bolt	10.5±1.0 (76.0±7.2/103.0±9.8)
M12x1.75 (0.47x0.07) Bolt	9.8±1.0 (71.0±7.2/ 96.0±9.8)

- This is the item shown in the illustration. It is marked with a triangle (▲) on the Major Components page.
- Letters and numbers contained in a circle refer to the illustration.
- Special tools are identified by the tool name and/or number. The illustration shows how the special tool is to be used.
- Symbols indicate the type of service operation or step to be performed. A detailed explanation of these symbols follows.
- Service data and specifications are given in this table.

8. The following symbols appear throughout this Workshop Manual. They tell you the type of service operation or step to perform.

- .... Removal
- .... Installation
- .... Disassembly
- .... Reassembly
- .... Alignment (marks)
- .... Directional indication
- .... Inspection
- .... Measurement
- .... Adjustment
- .... Cleaning
- .... Important operation requiring extra care
- .... Specified torque (tighten)
- .... Special tool use required or recommended (Isuzu tool or tools)
- .... Commercially available tool use required or recommended
- .... Lubrication (oil)
- .... Lubrication (grease)
- .... Sealant application

9. Measurement criteria are defined by the terms "standard" and "limit".

A measurement falling within the "standard" range indicates that the applicable part or parts are serviceable.

"Limit" should be thought of as an absolute value.

A measurement which is outside the "limit" indicates that the applicable part or parts must be either repaired or replaced.

10. Components and parts are listed in the singular form throughout the Manual.

11. Directions used in this Manual are as follows:

Front

The cooling fan side of the engine viewed from the flywheel.

Right

The right hand side viewed from the same position.

Left

The left hand side viewed from the same position.

Rear

The flywheel side of the engine.

Cylinder numbers are counted from the front of the engine.

The front most cylinder is No. 1 and rear most cylinder is the final cylinder number of the engine.

The engine's direction of rotation is counterclockwise viewed from the flywheel.



MAIN DATA AND SPECIFICATIONS

Engine Model		
Item	A-4JG1	
Engine type	Water cooled, four-cycle, in-line, overhead valve	
Combustion chamber type	Direct injection	
Cylinder liner type	Dry	
No. of cylinders - Bore x Stroke	mm(in.)	4 - 95.4 x 107
Total piston displacement	lit(cid)	3.059 (186.7)
Compression ratio (To 1)		18.6
*Engine dimensions	mm(in.)	739 x 625 x 746
Length x Width x Height		(29.1 x 24.6 x 29.4)
*Engine weight (Dry)	kg(lb.)	248 (547)
Fuel injection order		1 - 3- 4 - 2
*Fuel injection timing (B.T.D.C.)	degrees	16
Specified fuel	Diesel fuel	
Injection pump	In-line plunger, Bosch A type	
Governor	Variable speed mechanical type	
*Low idle speed	min <sup>-1</sup>	850 - 1,000
Injection nozzle	Multi-hole type	
Injection starting pressure	MPa(kgf/cm <sup>2</sup> /psi)	18.1 (185/2630)
Fuel filter type	Cartridge paper element	
Water sedimentor (if so equipped)	Sediment/water level indicating type	
Compression pressure	MPa(kgf/cm <sup>2</sup> /psi)	3.04 (31/441)
Valve clearance (at cold) Intake	mm(in.)	0.40 (0.0157)
Exhaust	mm(in.)	0.40 (0.0157)
Lubrication method	Pressurized circulation	
Oil pump	Trochoid type	
Main oil filter type	Cartridge paper element, full flow	
Partial oil filter	Not equipped	
*Lubricating oil volume	lit.(qts)	7.6 - 9.6 (8.0 - 10.1) (Oil pan)
Oil cooler (if so equipped)	Water cooled built in oil filter	
Cooling method	Pressurized forced circulation	
Coolant volume	lit.(qts)	5.0 (5.3)
Water pump	Belt driven, impeller type	
Thermostat type	Wax pellet type	
*Alternator	V-A	12 - 50
*Starter	V-kW	12 - 2.2









Specifications marked with an asterisk (\*) will vary according to engine application.

## TIGHTENING TORQUE SPECIFICATIONS

The tightening torque values given in the table below are applicable to the bolts unless otherwise specified.

## STANDARD BOLT

N·m (kgf·m)

Bolt Identification		 	
		 	
<b>M 6 × 1.0</b>	3.9 • 7.8 { 0.4 • 0.8 }	4.9 • 9.8 { 0.5 • 1.0 }	—
<b>M 8 × 1.25</b>	7.8 • 17.7 { 0.8 • 1.8 }	11.8 • 22.6 { 1.2 • 2.3 }	16.7 • 30.4 { 1.7 • 3.1 }
<b>M10 × 1.25</b>	20.6 • 34.3 { 2.1 • 3.5 }	27.5 • 46.1 { 2.8 • 4.7 }	37.3 • 62.8 { 3.8 • 6.4 }
* <b>M10 × 1.5</b>	19.6 • 33.4 { 2.0 • 3.4 }	27.5 • 45.1 { 2.8 • 4.6 }	36.3 • 59.8 { 3.7 • 6.1 }
<b>M12 × 1.25</b>	49.1 • 73.6 { 5.0 • 7.5 }	60.8 • 91.2 { 6.2 • 9.3 }	75.5 • 114.0 { 7.7 • 11.6 }
* <b>M12 × 1.75</b>	45.1 • 68.7 { 4.6 • 7.0 }	56.9 • 84.4 { 5.8 • 8.6 }	71.6 • 107.0 { 7.3 • 10.9 }
<b>M14 × 1.5</b>	76.5 • 115.0 { 7.8 • 11.7 }	93.2 • 139.0 { 9.5 • 14.2 }	114.0 • 171.0 { 11.6 • 17.4 }
* <b>M14 × 2.0</b>	71.6 • 107.0 { 7.3 • 10.9 }	88.3 • 131.0 { 9.0 • 13.4 }	107.0 • 160.0 { 10.9 • 16.3 }
<b>M16 × 1.5</b>	104.0 • 157.0 { 10.6 • 16.0 }	135.0 • 204.0 { 13.8 • 20.8 }	160.0 • 240.0 { 16.3 • 24.5 }
* <b>M16 × 2.0</b>	100.0 • 149.0 { 10.2 • 15.2 }	129.0 • 194.0 { 13.2 • 19.8 }	153.0 • 230.0 { 15.6 • 23.4 }
<b>M18 × 1.5</b>	151.0 • 226.0 { 15.4 • 23.0 }	195.0 • 293.0 { 19.9 • 29.9 }	230.0 • 345.0 { 23.4 • 35.2 }
* <b>M18 × 2.5</b>	151.0 • 226.0 { 15.4 • 23.0 }	196.0 • 294.0 { 20.0 • 30.0 }	231.0 • 346.0 { 23.6 • 35.3 }
<b>M20 × 1.5</b>	206.0 • 310.0 { 21.0 • 31.6 }	270.0 • 405.0 { 27.5 • 41.3 }	317.0 • 476.0 { 32.3 • 48.5 }
* <b>M20 × 2.5</b>	190.0 • 286.0 { 19.4 • 29.2 }	249.0 • 375.0 { 25.4 • 38.2 }	293.0 • 440.0 { 29.9 • 44.9 }
<b>M22 × 1.5</b>	251.0 • 414.0 { 25.6 • 42.2 }	363.0 • 544.0 { 37.0 • 55.5 }	425.0 • 637.0 { 43.3 • 64.9 }
* <b>M22 × 2.5</b>	218.0 • 328.0 { 22.2 • 33.4 }	338.0 • 507.0 { 34.5 • 51.7 }	394.0 • 592.0 { 40.2 • 60.4 }
<b>M24 × 2.0</b>	359.0 • 540.0 { 36.6 • 55.0 }	431.0 • 711.0 { 43.9 • 72.5 }	554.0 • 831.0 { 56.5 • 84.7 }
* <b>M24 × 3.0</b>	338.0 • 507.0 { 34.5 • 51.7 }	406.0 • 608.0 { 41.4 • 62.0 }	521.0 • 782.0 { 53.1 • 79.7 }

An asterisk (\*) indicates that the bolts are used for female threaded parts that are made of soft materials such as casting.




**GENERAL INFORMATION**

**TIGHTENING TORQUE SPECIFICATIONS**

The tightening torque values given in the table below are applicable to the bolts unless otherwise specified.

**FLANGED HEAD BOLT**

N·m (kgf·m)

Bolt Identification  Bolt Diameter × pitch (mm)			
<b>M 6 × 1.0</b>	4.6 • 8.5 { 0.5 • 0.9 }	6.6 • 12.2 { 0.6 • 1.2 }	—————
<b>M 8 × 1.25</b>	10.5 • 196 { 1.1 • 2.0 }	15.3 • 28.4 { 1.6 • 2.9 }	18.1 • 33.6 { 2.1 • 3.4 }
<b>M10 × 1.25</b>	23.1 • 38.5 { 2.4 • 3.9 }	35.4 • 58.9 { 3.6 • 6.1 }	42.3 • 70.5 { 4.3 • 7.2 }
<b>* M10 × 1.5</b>	22.3 • 37.2 { 2.3 • 3.8 }	34.5 • 57.5 { 3.5 • 5.8 }	40.1 • 66.9 { 4.1 • 6.8 }
<b>M12 × 1.25</b>	54.9 • 82.3 { 5.6 • 8.4 }	77.7 • 117.0 { 7.9 • 11.9 }	85.0 • 128.0 { 8.7 • 13.0 }
<b>* M12 × 1.75</b>	51.0 • 76.5 { 5.2 • 7.8 }	71.4 • 107.0 { 7.3 • 10.9 }	79.5 • 119.0 { 8.1 • 12.2 }
<b>M14 × 1.5</b>	83.0 • 125.0 { 8.5 • 12.7 }	115.0 • 172.0 { 11.7 • 17.6 }	123.0 • 185.0 { 12.6 • 18.9 }
<b>* M14 × 2.0</b>	77.2 • 116.0 { 7.9 • 11.8 }	108.0 • 162.0 { 11.1 • 16.6 }	116.0 • 173.0 { 11.8 • 17.7 }
<b>M16 × 1.5</b>	116.0 • 173.0 { 11.8 • 17.7 }	171.0 • 257.0 { 17.4 • 26.2 }	177.0 • 265.0 { 18.0 • 27.1 }
<b>* M16 × 2.0</b>	109.0 • 164.0 { 11.2 • 16.7 }	163.0 • 244.0 { 16.6 • 24.9 }	169.0 • 253.0 { 17.2 • 25.8 }

A bolt with an asterisk (\*) is used for female screws of soft material such as cast iron.



**SPECIAL PARTS FIXING NUTS AND BOLTS**

**Cylinder Head Cover, Cylinder Head, and Rocker Arm Shaft Bracket**

N·m (kgf·m/lb.ft)

8 - 18  
(0.8 - 1.8/5.8 - 13)

10 - 20  
(1.0 - 2.0/7.2 - 14)

49 - 59  
(5.0 - 6.0/36 - 43)


1st Step	2nd Step	3rd Step
44 - 54 (4.5 - 5.5/33 - 40)	60 - 75°	60 - 75°

Apply engine oil to thread portion



Crankshaft Bearing Cap, Connecting Rod Bearing Cap, Crankshaft Damper Pulley, Flywheel, and Oil Pan


N·m (kgf·m/lb.ft)

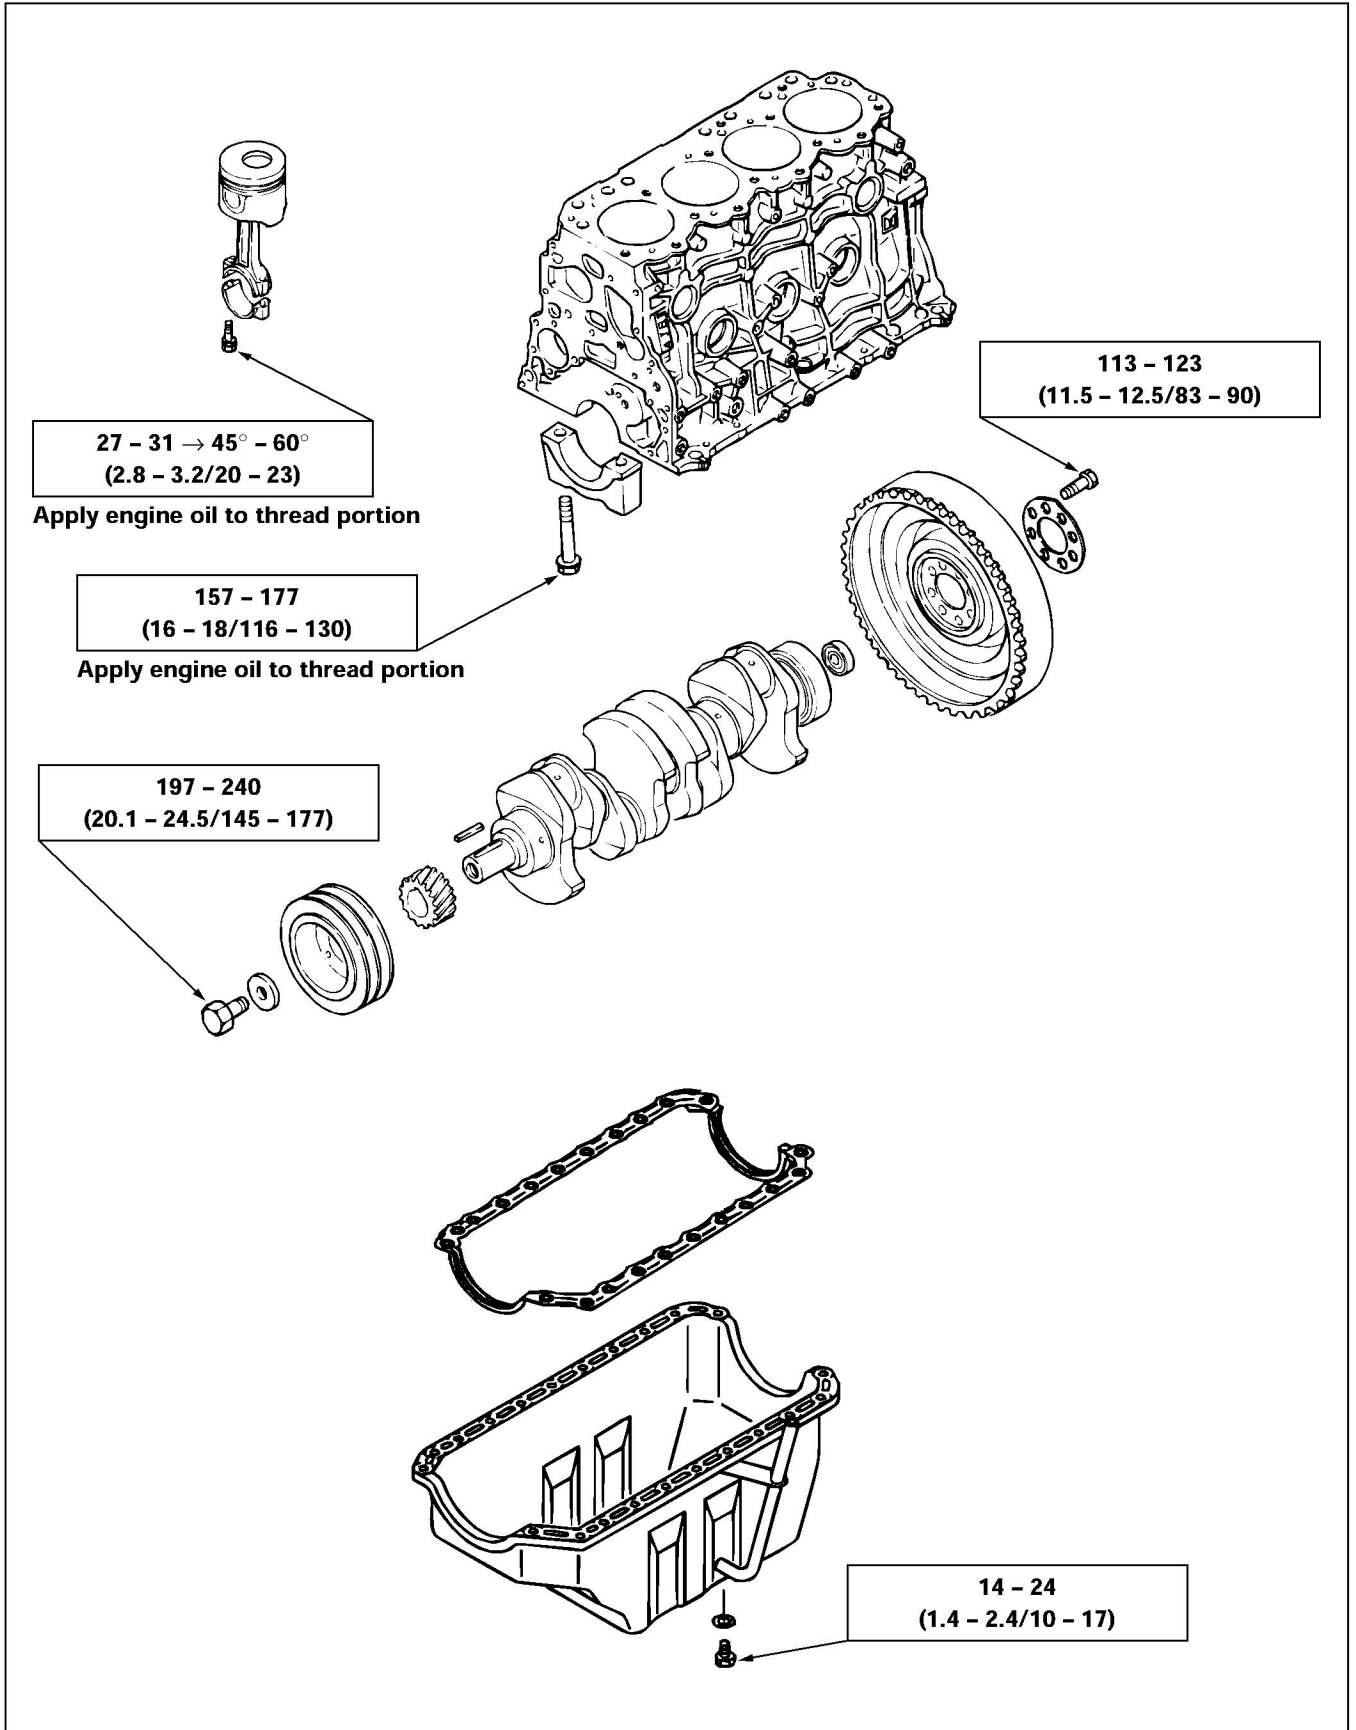



Timing Gear Case, Flywheel Housing, Camshaft, and Timing Gear


N·m (kgf·m/lb.ft)

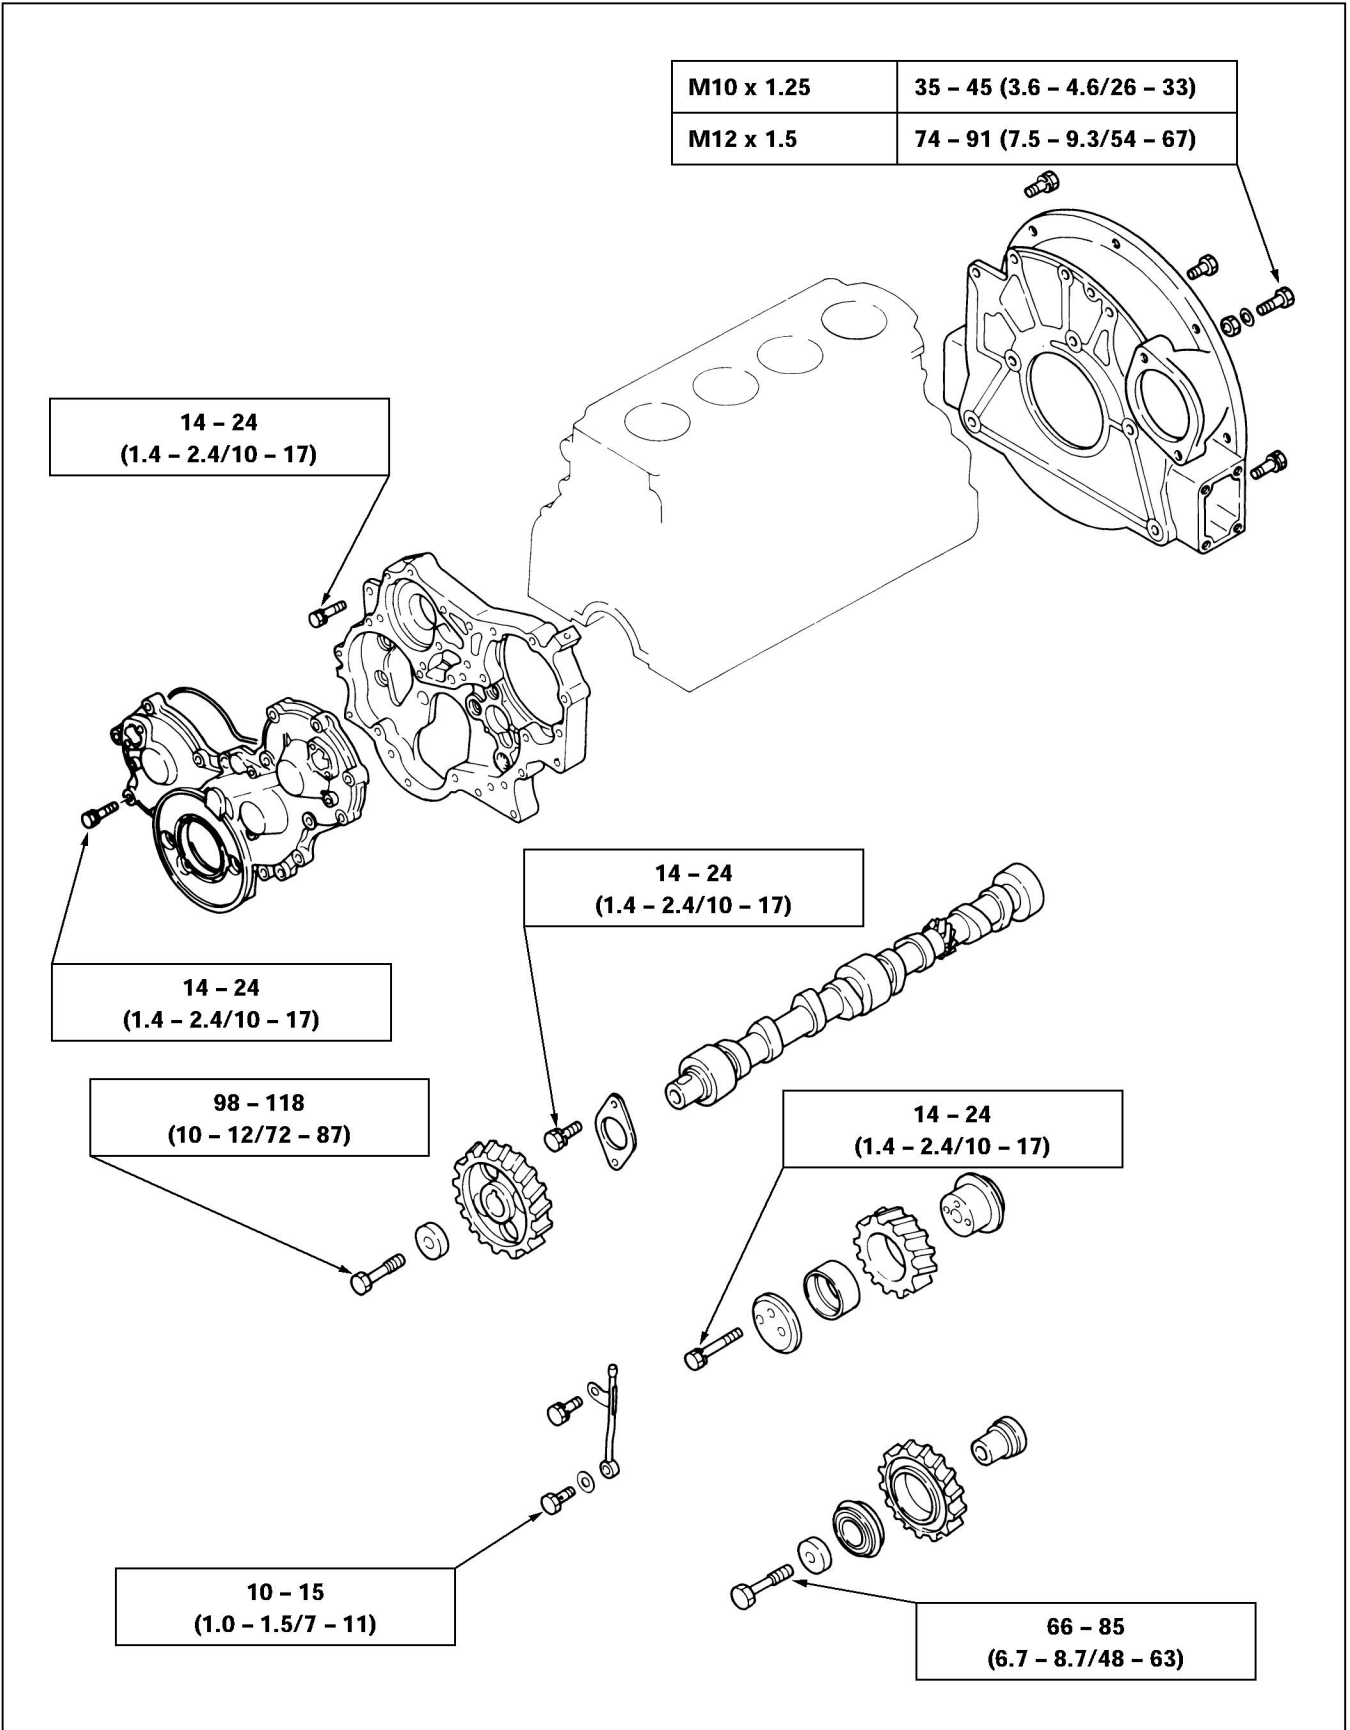



Cooling and Lubricating System


N·m (kgf·m/lb.ft)

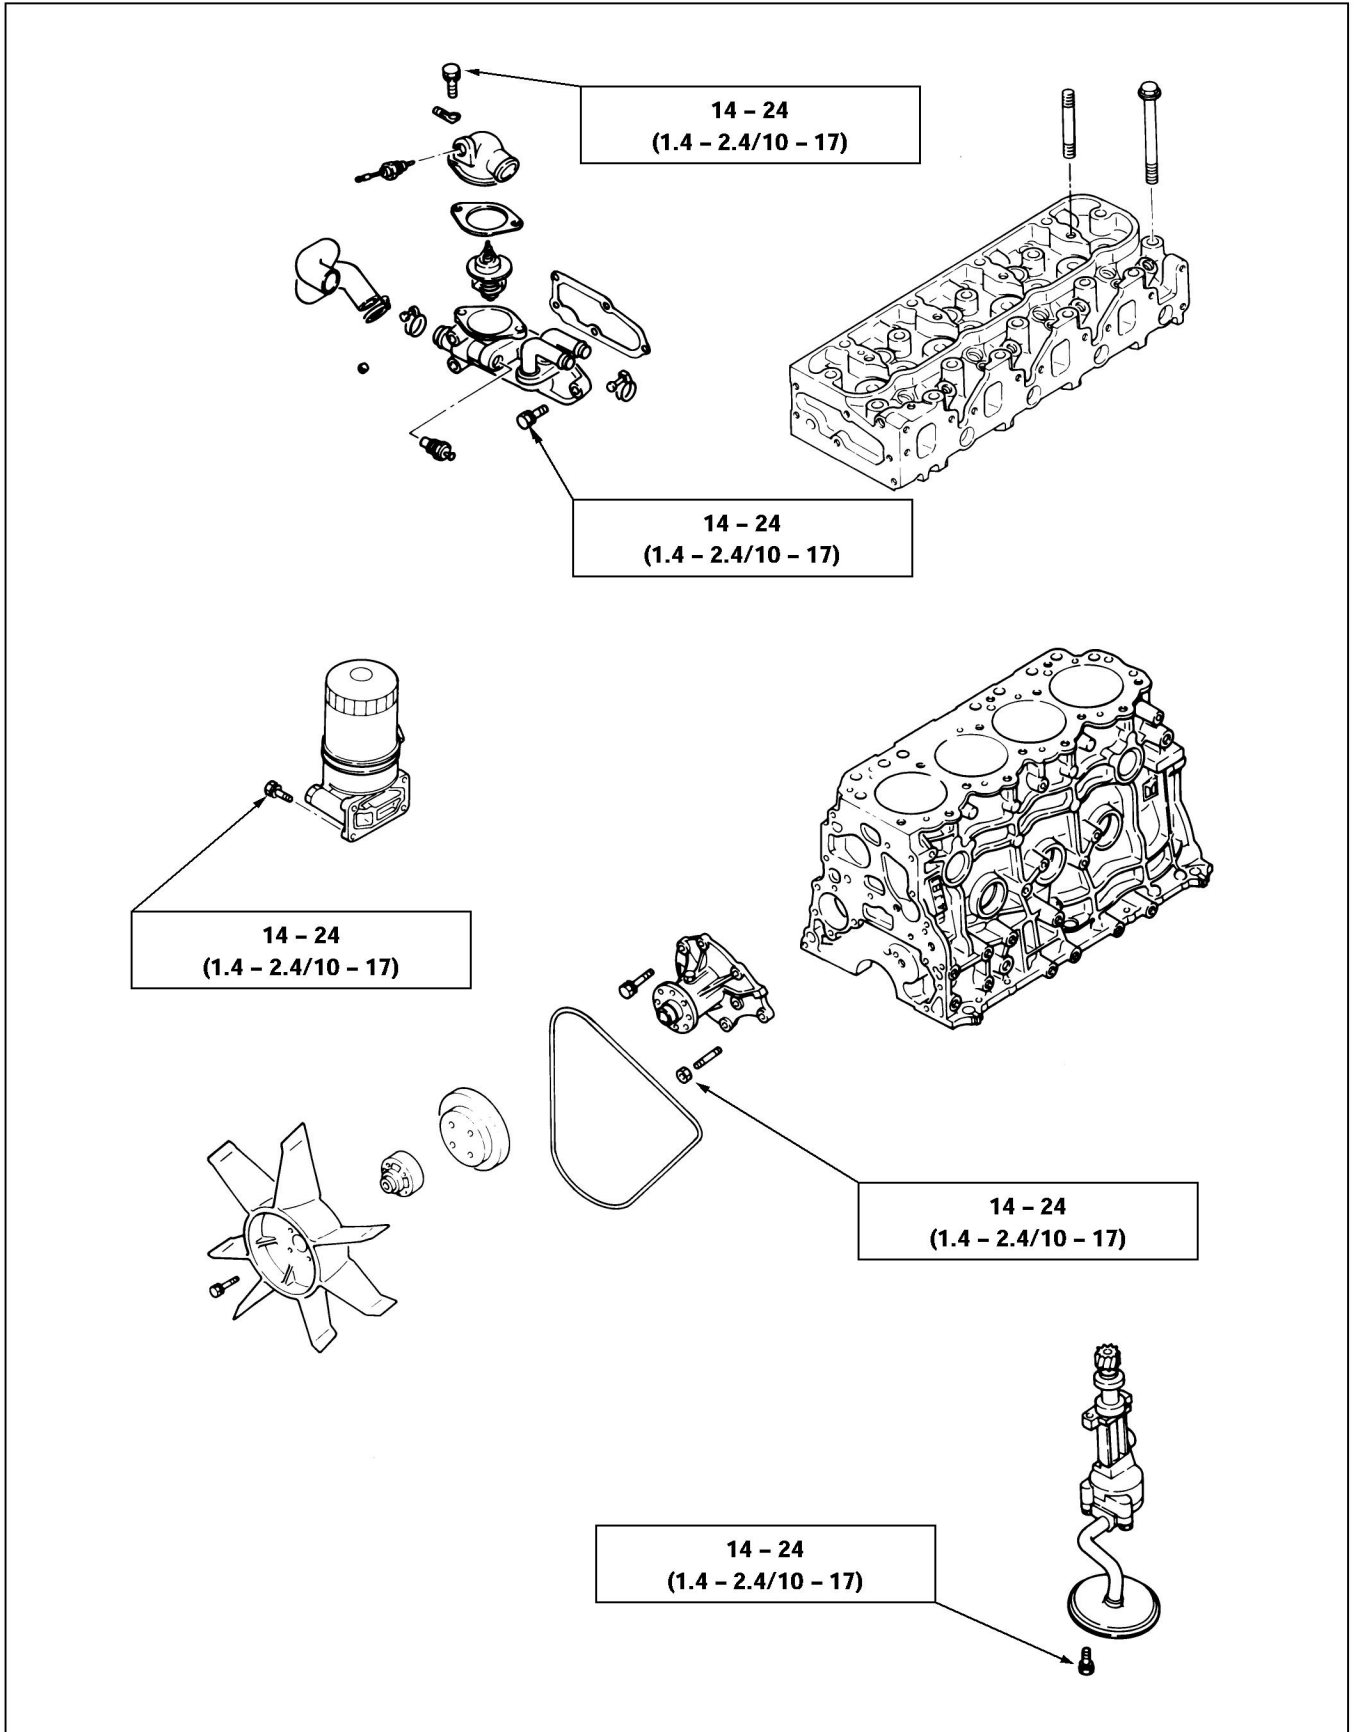



Intake and Exhaust Manifold


N·m (kgf·m/lb.ft)

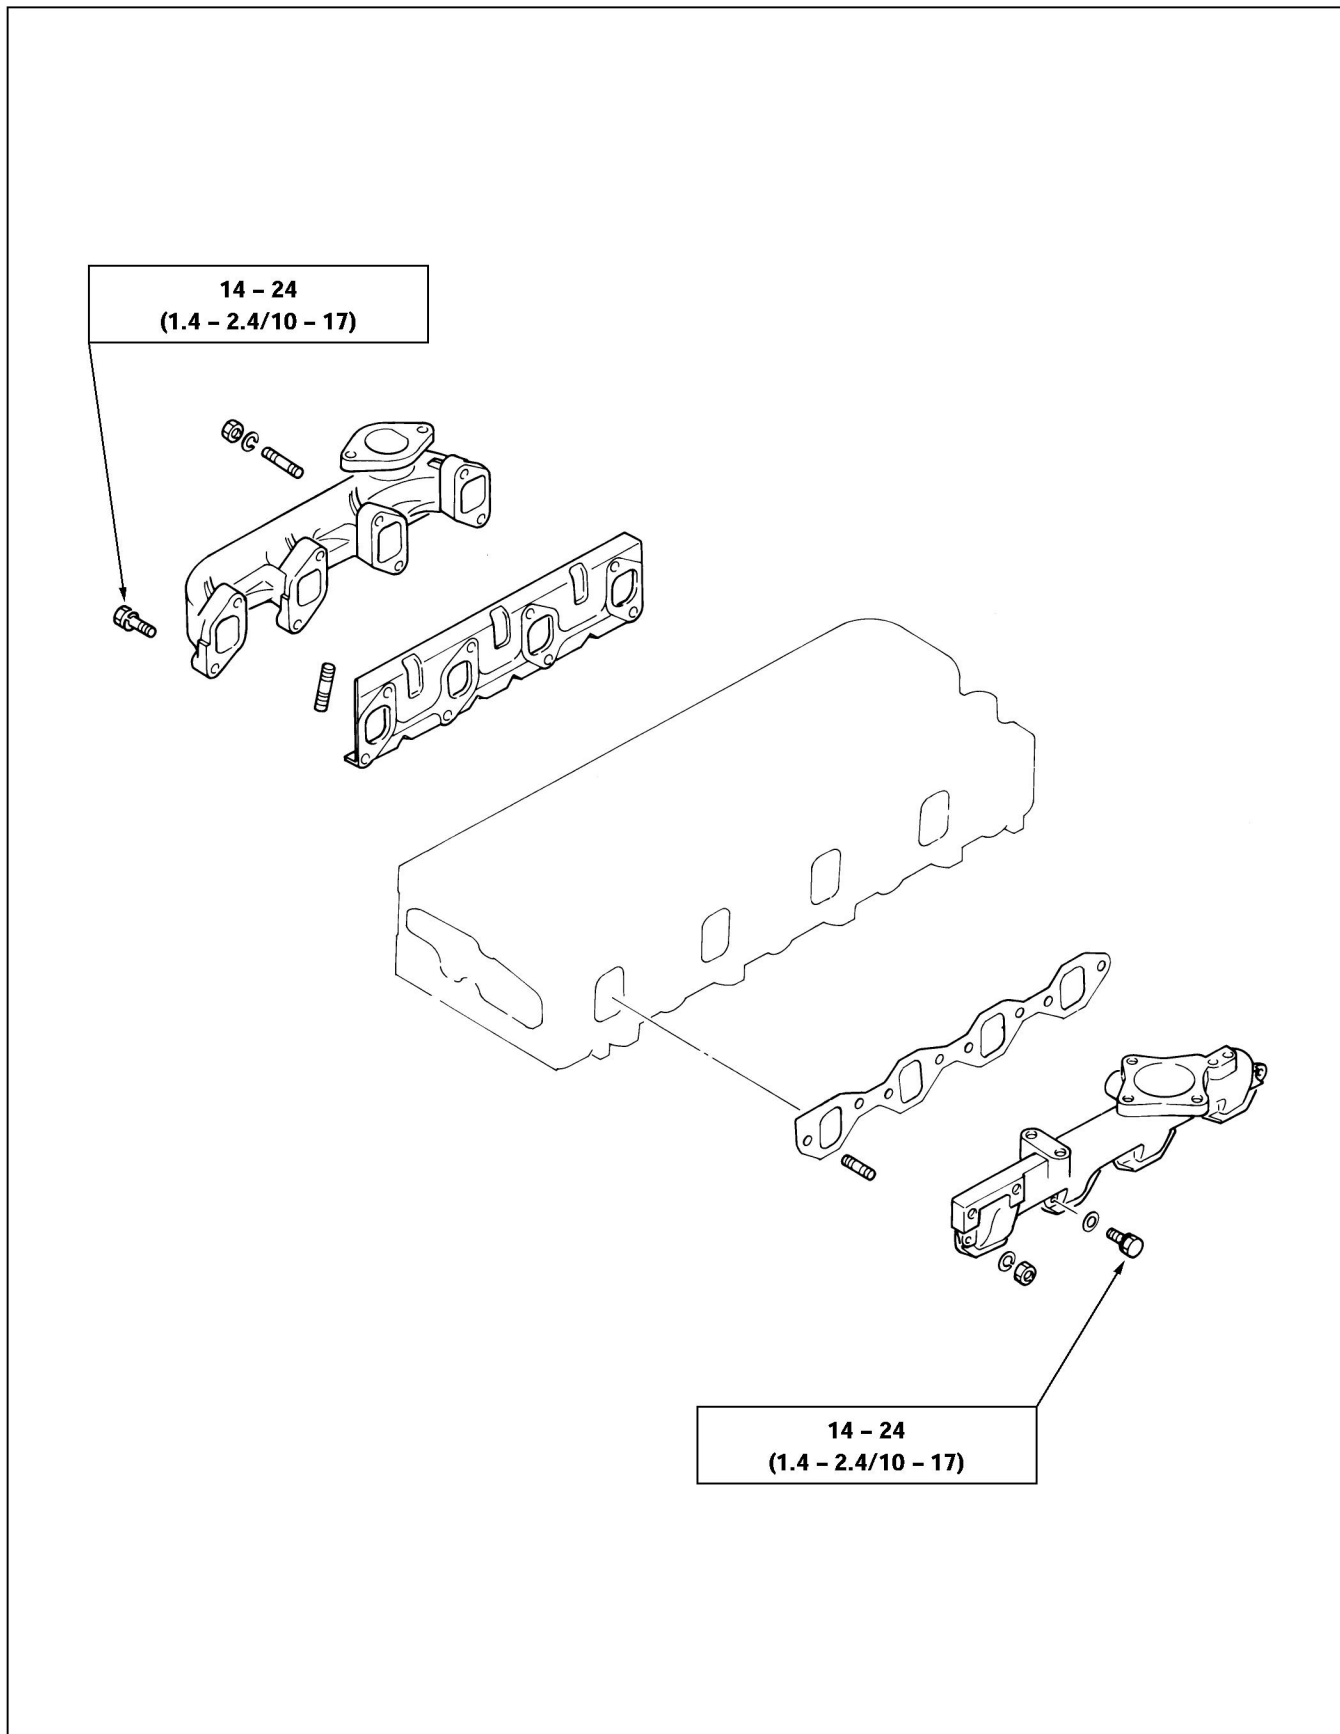






N·m (kgf·m/lb.ft)

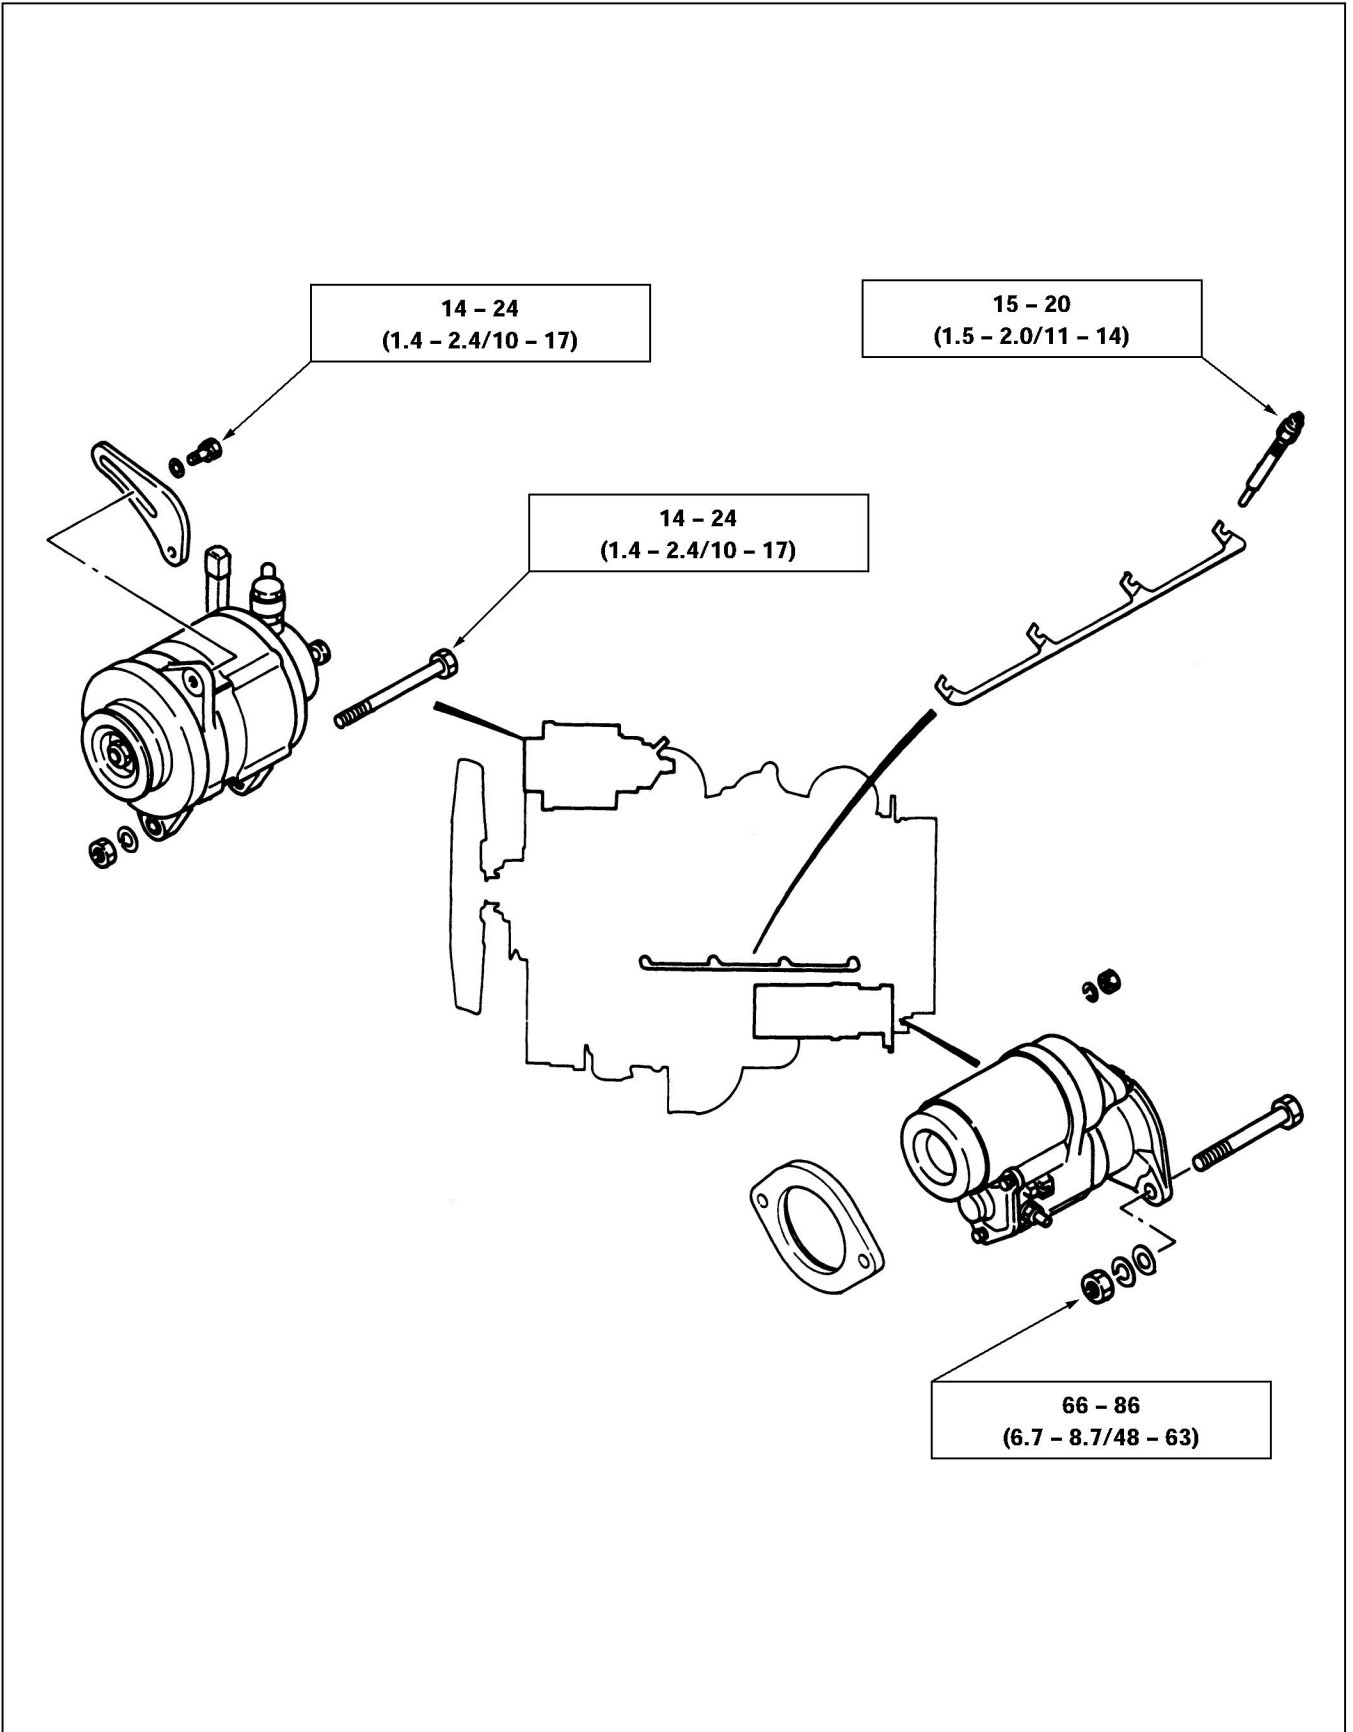



Fuel Injection System

N·m (kgf·m/lb.ft)

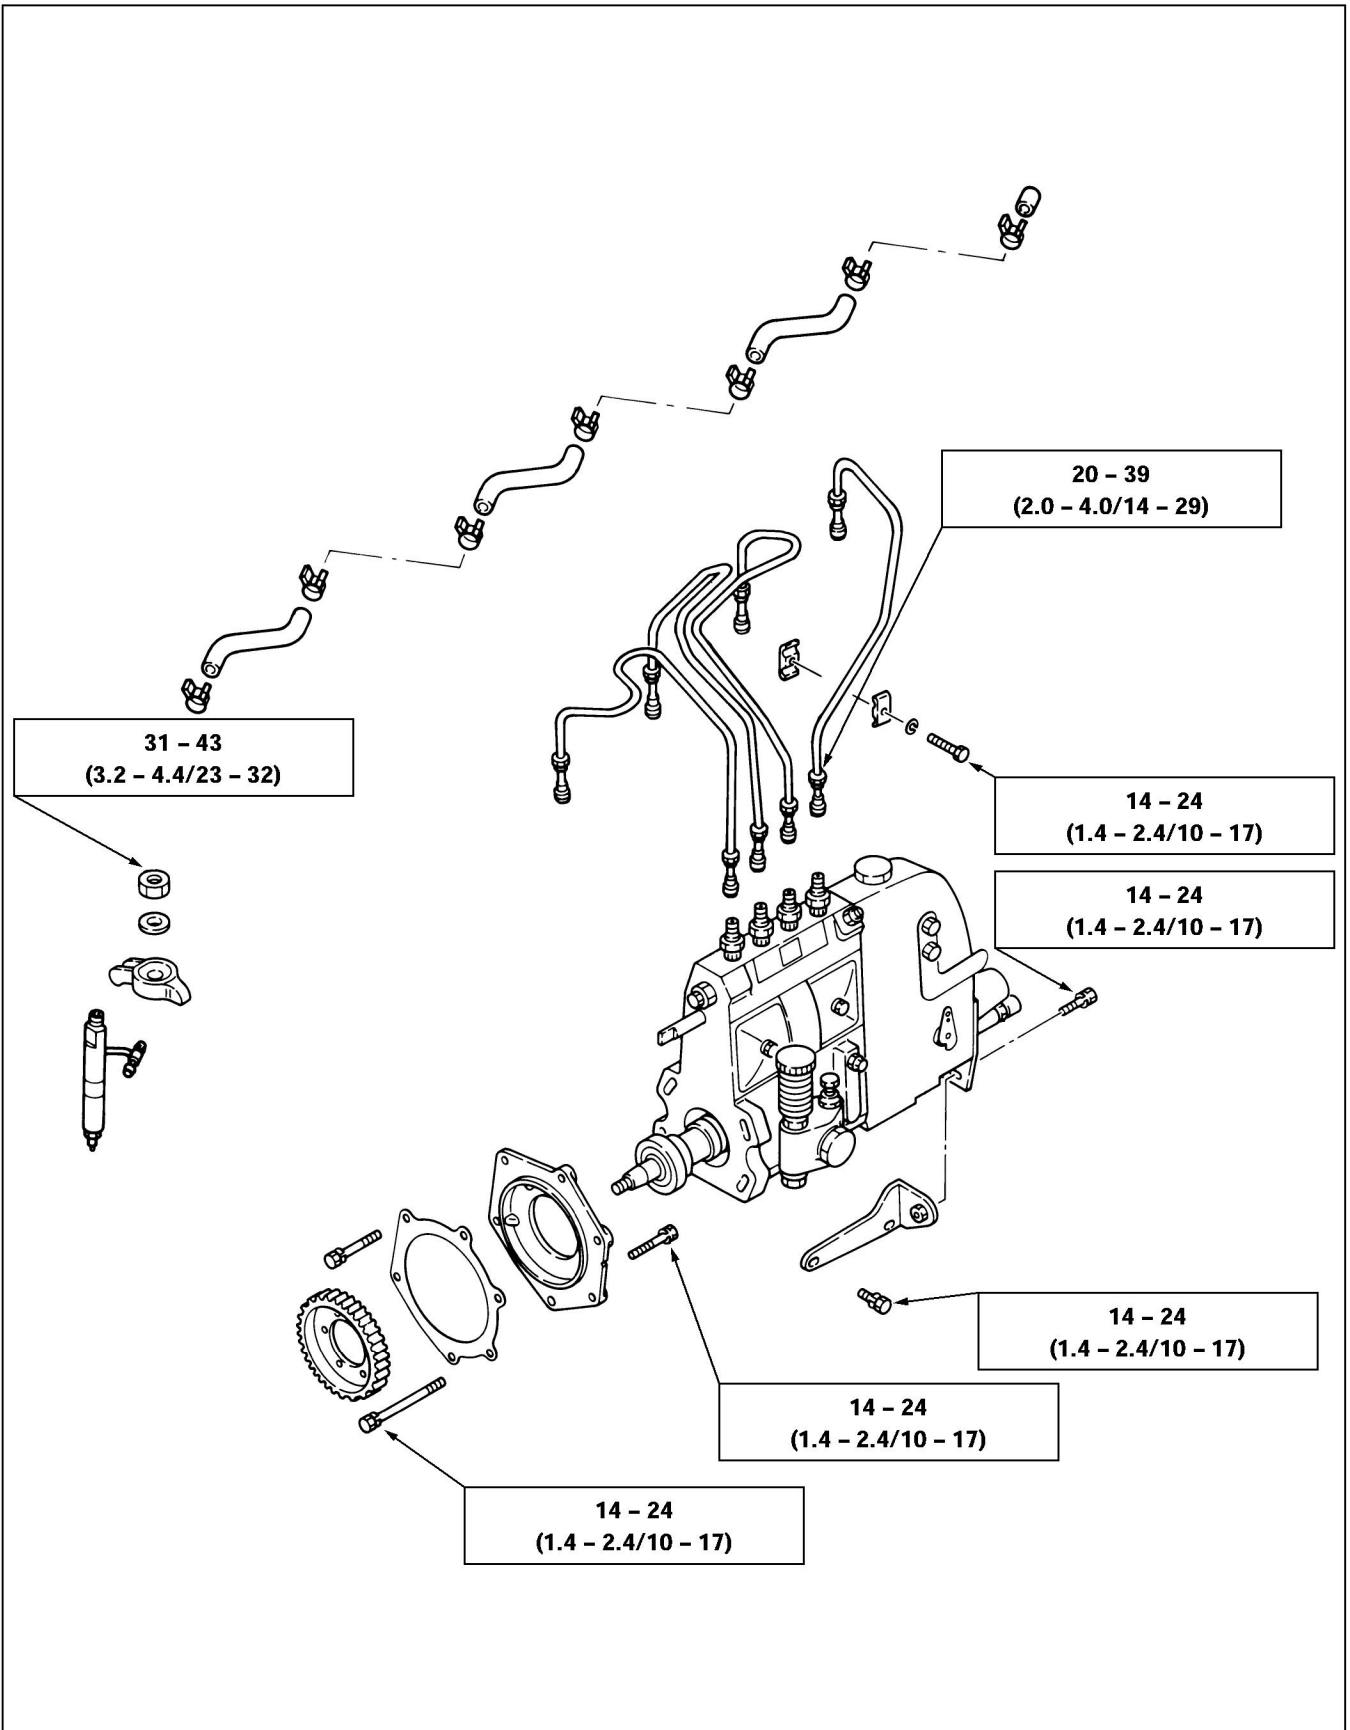

---

# MEMO

A series of horizontal dotted lines for writing.

## SECTION 2


## MAINTENANCE

## TABLE OF CONTENTS

ITEM	PAGE
Model identification .....	18
Injection pump identification .....	18
Lubricating system .....	18
Fuel system .....	19
Cooling system .....	22
Valve clearance adjustment .....	23
Injection timing .....	24
Compression pressure measurement .....	26
Recommended lubricants .....	27
Engine repair kit .....	28

## MAINTENANCE


Servicing refers to general maintenance procedures to be performed by qualified service personnel. Maintenance interval such as fuel or oil filter changes should be referred to "INSTRUCTION MANUAL".

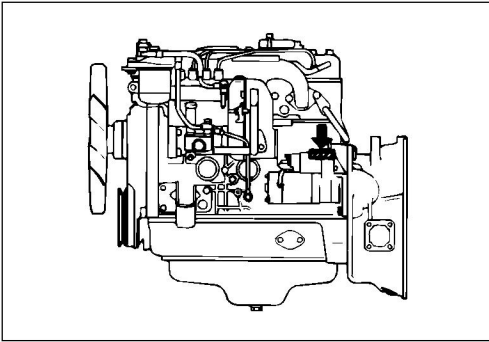

### MODEL IDENTIFICATION

#### Engine Serial Number

The engine number is stamped on the rear left hand side of the cylinder body.

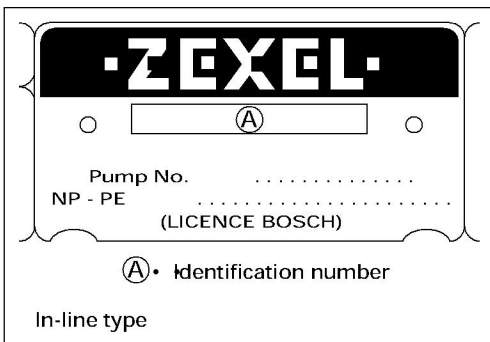

### INJECTION PUMP IDENTIFICATION

Injection volume should be adjusted after referring to the adjustment data applicable to the injection pump installed.


The injection pump identification number (A) is stamped on the injection pump identifications plate.

#### Note:

Always check the identification number before beginning a service operation.

Applicable service data will vary according to the identification number. Use of the wrong service data will result in reduced engine performance and engine damage.

- ① ZEXEL (Manufacturer of the injection pump) identification number
- ② ISUZU Parts Number

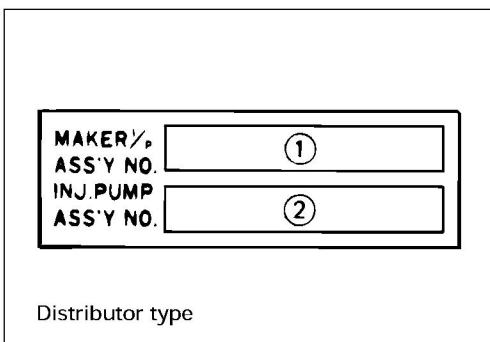

### LUBRICATING SYSTEM

#### Main Oil Filter

#### Replacement Procedure

1. Loosen the drain plug to drain the engine oil.
2. Wait a few minutes and then retighten the drain plug.
3. Loosen the used oil filter by turning it counterclockwise with a filter wrench.



Filter Wrench




4. Clean the oil cooler fitting face.

This will allow the new oil filter to seat properly.



5. Apply a light coat of engine oil to the O-ring.

6. Turn in the new oil filter until the filter O-ring is fitted against the sealing face.

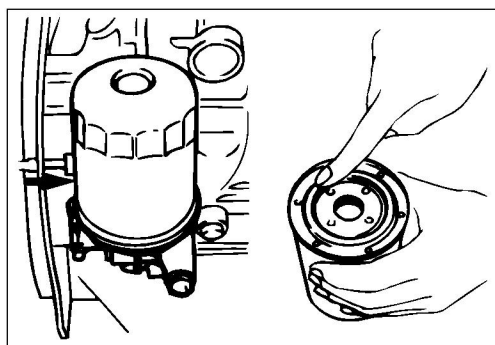


7. Use a filter wrench to turn in the filter an additional 1 and 1/4 of a turn.

Filter Wrench

8. Check the engine oil level and replenish to the specified level if required.



9. Start the engine and check for oil leakage from the main oil filter.

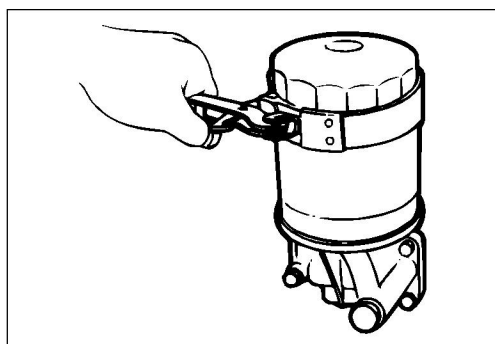

## FUEL SYSTEM


### Fuel Filter

#### Replacement Procedure




1. Loosen the used fuel filter by turning it counter-clockwise with the filter wrench.

Filter Wrench

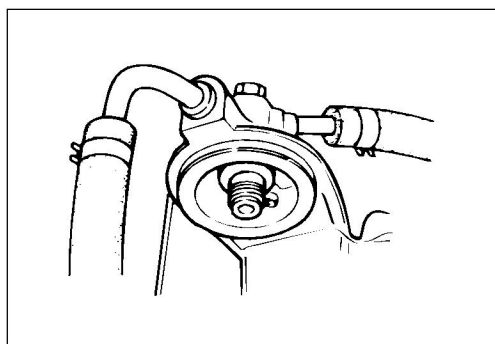

2. Clean the upper cover fitting face.

This will allow the new fuel filter to seat properly.

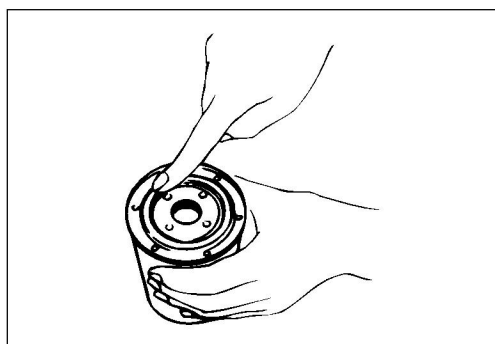

3. Apply a light coat of engine oil to the O-ring.


4. Supply fuel to the new fuel filter to facilitate bleeding.

5. Turn in the new fuel filter until the filter O-ring is fitted against the sealing face.

Be very careful to avoid fuel spillage.



6. Use a filter wrench to turn in the fuel filter an additional 1/3 to 2/3 of a turn.

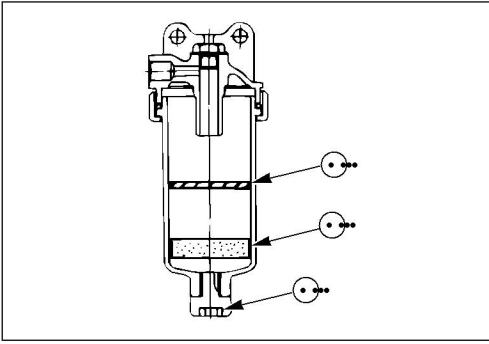

**Water Separator (Water Sedimentor)  
(Optional Equipment)**


Check the water separator float ① level.  
If the float ① has reached level ②, loosen the drain plug ③ (at the bottom side of the water separator) to drain the water.



Drain Plug Torque


N·m (kgf·m/lb.ft)

9 – 15 (0.9 – 1.5/7 – 11)
---------------------------

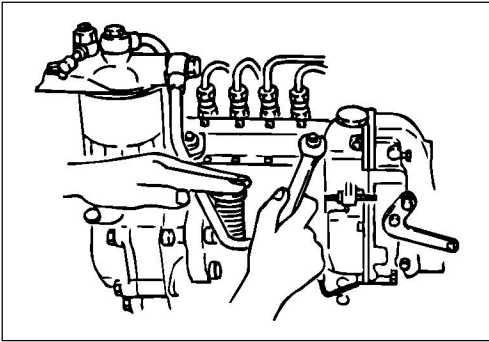






**Air Bleeding**

1. For the engine equipped with in-line type injection pump
  - 1) Loosen the priming pump cap ① on the injection pump.
  - 2) Loosen the fuel return eye bolt ② on the fuel filter.
  - 3) Operate the priming pump until there are no more bubbles visible in the fuel being discharged from the fuel return eye bolt on the fuel filter.
  - 4) Retighten the fuel return eye bolt on the fuel filter.
  - 5) Loosen the bleeder bolt ③ while operating the injection pump priming pump to check that the air has been bled completely.
  - 6) Operate the priming pump several times to check for fuel leakage around the injection pump and the fuel filter.

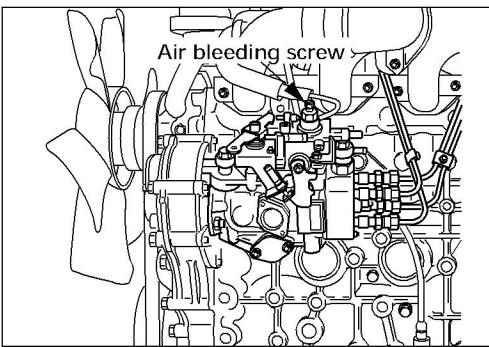

2. For the engine equipped with distributor type injection pump
  - 1) Loosen the bleeder screw on the injection pump overflow valve.
  - 2) Operate the priming pump until fuel mixed with foam flows from the bleeder screw.
  - 3) Tighten the bleeder screw.
  - 4) Operate the priming pump several times and check for fuel leakage.

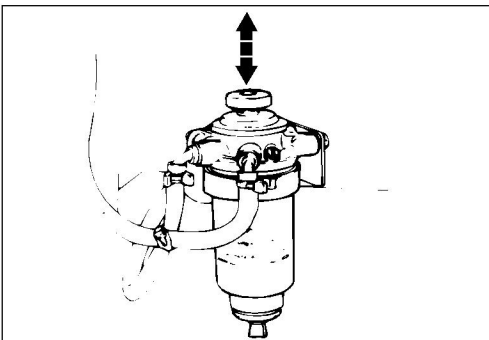

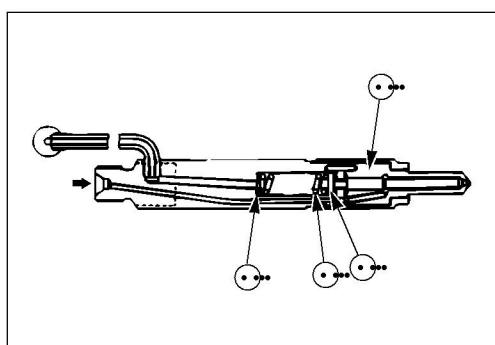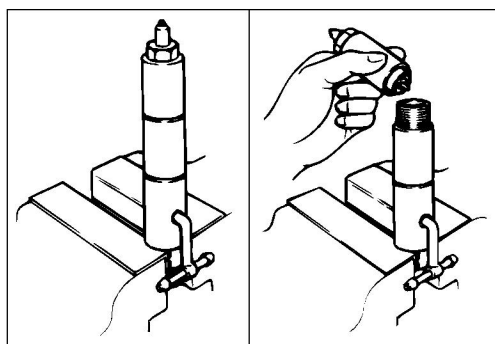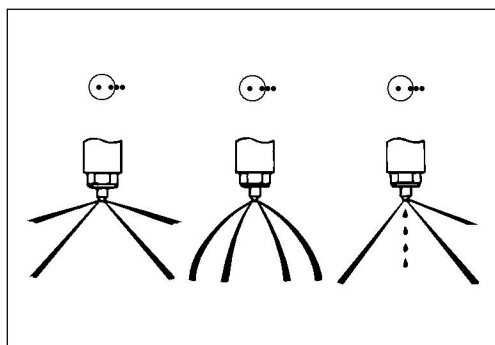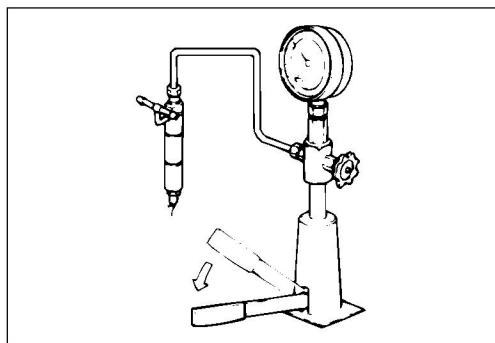

## Injection Nozzle

### Injection Nozzle Inspection

Use a nozzle tester to check the injection nozzle opening pressure and the spray condition.

If the opening pressure is above or below the specified value, the injection nozzle must be replaced or reconditioned.

If the spray condition is bad, the injection nozzle must be replaced or reconditioned.

Injection Nozzle Opening Pressure	MPa (kgf/cm <sup>2</sup> /psi)
18.1 (185/2,630)	

### Spray Condition

- (1) Correct
- (2) Incorrect (Restrictions in orifice)
- (3) Incorrect (Dripping)



### Injection Nozzle Adjustment

1. Clamp the injection nozzle in a vise.
2. Use a wrench to remove the injection nozzle retaining nut.
3. Install the injection nozzle ①, the push rod ②, the spring ③, and adjusting shim ④.

Retaining Nut Torque	N·m (kgf·m/lb.ft)
39 - 49 (4.0 - 5.0/29 - 36)	



4. Attach the injection nozzle holder to the injection nozzle tester.
5. Apply pressure to the nozzle tester to check that the injection nozzle opens at the specified pressure.


If the injection nozzle does not open at the specified pressure, install or remove the appropriate number of adjusting shims to adjust it.

Adjusting Shim Availability	mm(in.)
Range	0.1 - 0.59 (0.0039 - 0.023)

### WARNING:

TEST FLUID FROM THE INJECTION NOZZLE TESTER WILL SPRAY OUT UNDER GREAT PRESSURE. IT CAN EASILY PUNCTURE A PERSON'S SKIN. KEEP YOUR HANDS AWAY FROM THE INJECTION NOZZLE TESTER AT ALL TIMES.



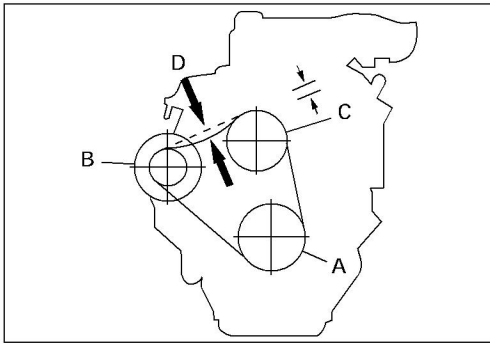


**COOLING SYSTEM**

**Cooling Fan Drive Belt**

Fan belt tension is adjusted by moving the alternator.

- A Crankshaft damper pulley
- B Alternator pulley
- C Cooling fan drive pulley
- D Depress the drive belt mid-portion with a 98 N (10 kgf/22 lb.ft) force.


Drive Belt Deflection	mm(in.)
	10.0 (0.39)

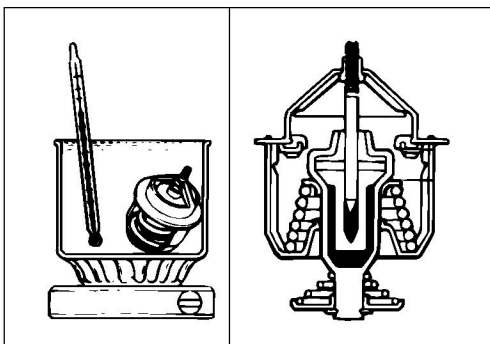

**Thermostat**

**Operating Test**

1. Completely submerge the thermostat in water.
2. Heat the water.  
Stir the water constantly to avoid direct heat being applied to the thermostat.

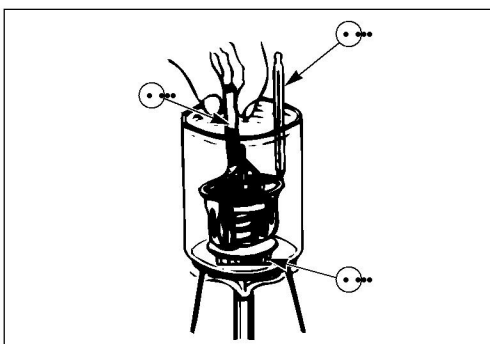

3. Check the thermostat initial opening temperature.

Thermostat Initial Opening Temperature	°C(°F)
	82 (180)




4. Check the thermostat full opening temperature.

Thermostat Full Opening Temperature	°C(°F)
	95 (203)



Valve Lift at Fully Open Position	mm(in.)
	8.0 (0.315)

- ① Thermostat
- ② Agitating Rod
- ③ Wooden Piece

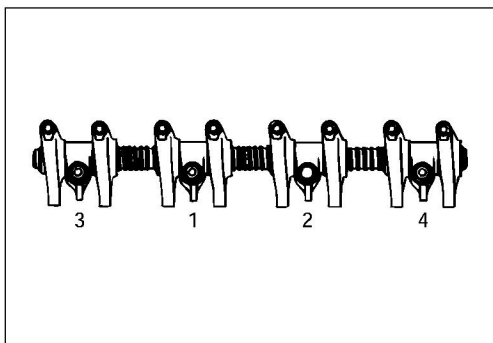

## VALVE CLEARANCE ADJUSTMENT


1. Retighten the rocker arm shaft bracket bolts in sequence as shown in the illustration.



Rocker Arm Shaft Bracket Bolt

Torque N·m (kgf·m/lb.ft)

49 – 59 (5 – 6/36 – 43)
-------------------------

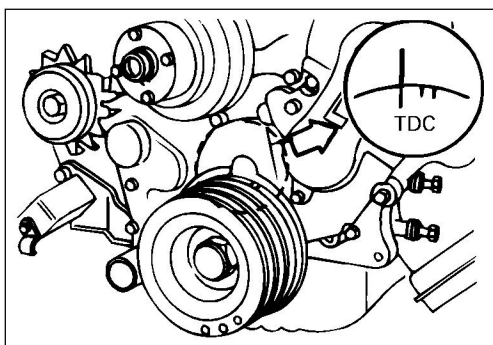


2. Bring the piston in either the No. 1 cylinder or the No. 4 cylinder to TDC on the compression stroke by turning the crankshaft until the crankshaft damper pulley TDC line is aligned with the timing pointer.

3. Check for play in the No. 1 intake and exhaust valve push rods.

If the No. 1 cylinder intake and exhaust valve push rods have play, the No. 1 piston is at TDC on the compression stroke.

If the No. 1 cylinder intake and exhaust valve push rods are depressed, the No. 4 piston is at TDC on the compression stroke.

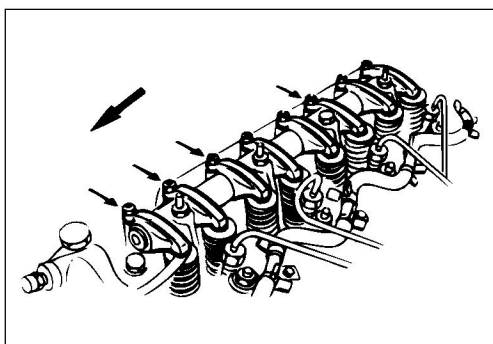


Adjust the No. 1 or the No. 4 cylinder valve clearances while their respective cylinders are at TDC on the compression stroke.

Valve Clearance mm(in.)


0.40 (0.016)
--------------

Loosen each valve clearance adjusting screw as shown in the illustration. (At TDC on the compression stroke of the No. 1 cylinder)

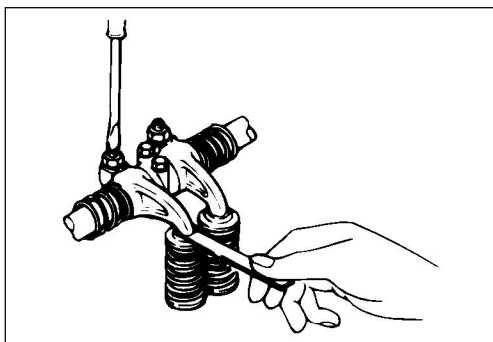

Insert a feeler gauge of the appropriate thickness between the rocker arm and the valve stem end.


4. Turn the valve clearance adjusting screw until a slight drag can be felt on the feeler gauge.
5. Tighten the lock nut securely.

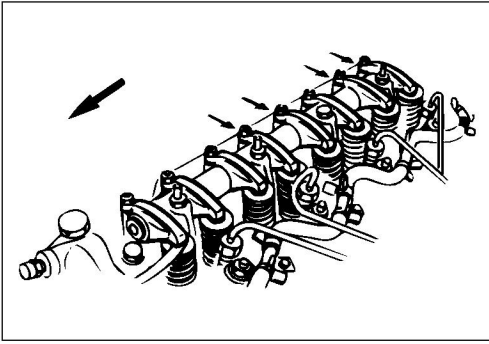

Rotate the crankshaft 360°.

Realign the crankshaft damper pulley TDC line with the timing pointer.

Adjust the clearances for the remaining valves as shown in the illustration. (At TDC on the compression stroke of the No. 4 stroke)

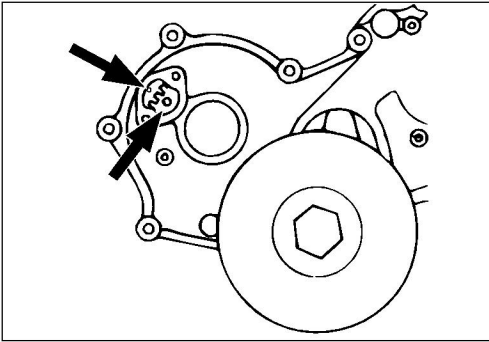

**INJECTION TIMING**

**Injection Timing Confirmation Procedure**



1. In-line type injection pump

1) Rotate the crankshaft clockwise to align the camshaft gear timing mark "O" with the timing gear case cover pointer.


The No. 1 cylinder will now be at the point where nearly injection timing.

2) Remove the No. 1 fuel injection pipe.

3) Remove the delivery valve holder ①, the delivery valve spring ②, and the delivery valve ③.

4) Tighten the delivery valve holder to the specified torque.

Delivery Valve Holder Torque	N·m (kgf·m/lb.ft)
39 – 44 (4.0 – 4.5/29 – 33)	

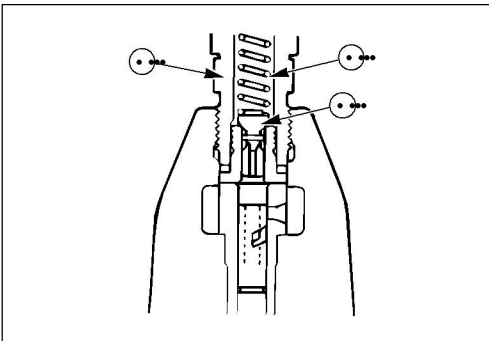


5) Operate the injection pump priming pump while slowly rotating the crankshaft until fuel stops flowing from the delivery valve holder.



6) Conform that the crankshaft damper pulley notched line is aligned with the timing gear case cover pointer.

Injection Timing (Static BTDC)

16°
-----

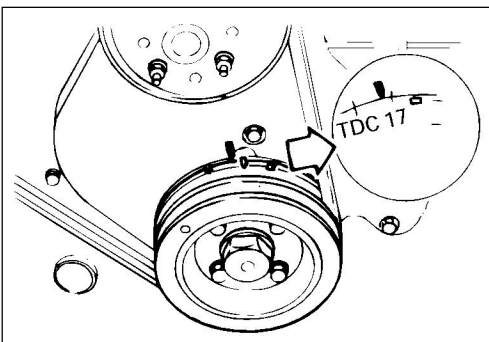

7) Remove the delivery valve holder.


8) Install the delivery valve ①, the delivery valve spring ②, and the delivery valve holder ③.

9) Tighten the delivery valve holder to the specified torque.



10) Install the fuel injection pipes and tighten them to the specified torque.



Fuel Injection Pipe Torque	N·m (kgf·m/lb.ft)
20 – 39 (2 – 4/15 – 29)	

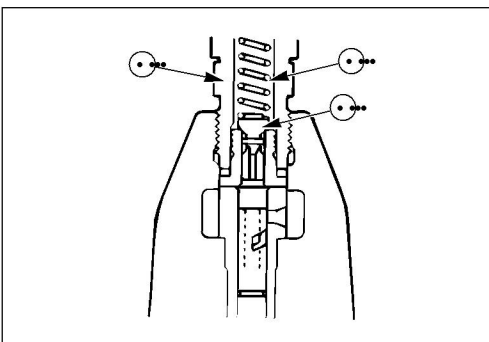

11) Operation to air breeding.

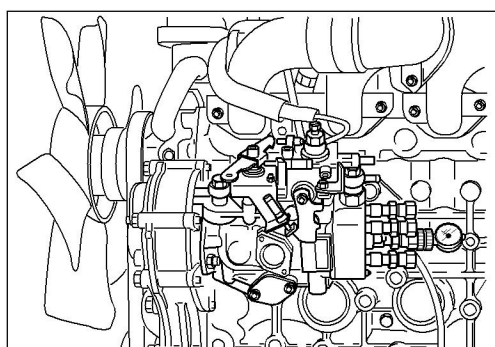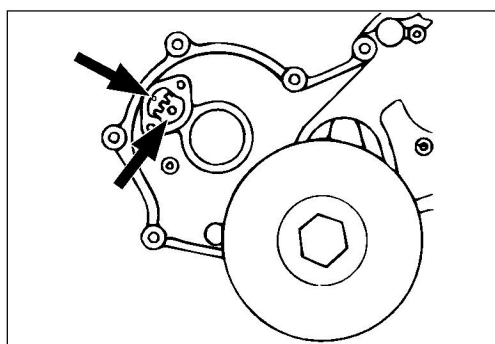

080ES002



2. Distributor type injection pump
  - 1) Rotate the crankshaft clockwise to align the camshaft gear timing mark "O" with the timing gear case cover pointer.  
The No. 1 cylinder will now be at the point where nearly injection timing.
  - 2) Remove injector pump distributor head plug.
  - 3) Fit a dial gauge and set lift to 1 mm (0.039 in).
  - 4) Set crankshaft damper pulley Top Dead Center mark about 45° before Top Dead Center from the pointer.
  - 5) Set dial gauge in the "0" position.  
Measuring device: 5-8840-0145-0
  - 6) Turn the crankshaft a little rightwise and leftwise and see if the pointer is stable in the "0" position.
  - 7) Turn the crankshaft in the normal direction and read the measuring device's indication at TDC.


Starting Timing	mm(in.)
	0.5 (0.02)

- 8) If the injection timing is outside the specified range, continue with the following steps.
- 9) Loosen the injection pump fixing nuts and bracket bolts.
- 10) Adjust the injection pump setting angle.
  - If injection timing will be advanced, move the injection pump away from the engine.
  - If injection timing will be retarded, move the injection pump toward the engine.


Tighten the pump fixing nut, adjust bolt and pump distribution head plug to the specified torque.

Pump Fixing Bolt	N·m(kgf·m/lb.ft)
	19 (1.9/14)

Injection Pump Distributor Head Plug	N·m(kgf·m/lb.ft)
	17 (1.7/12)

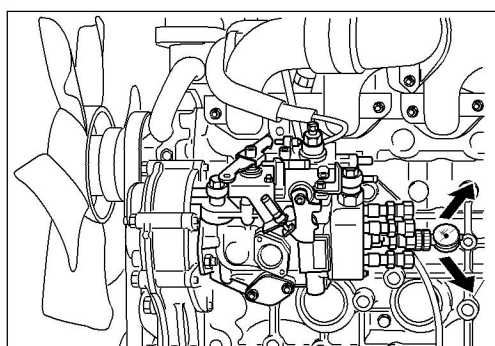

080ES003

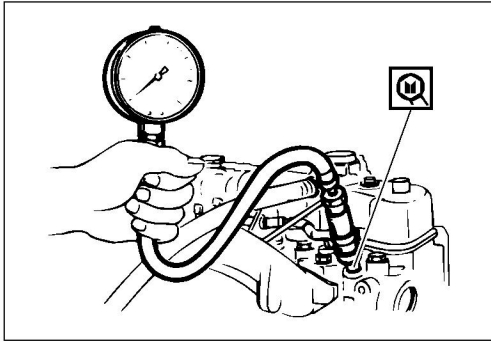

### **COMPRESSION PRESSURE MEASUREMENT**

1. Start the engine and allow it to run for several minutes to warm it up.
2. Stop the engine and cut the fuel supply.
3. Remove all of the glow plugs from the engine.



Compression Gauge :5-8840-2675-0  
Adapter :5-8840-9029-0

4. Set a compression gauge to the No. 1 cylinder glow plug hole.
5. Turn the engine over with the starter motor and take the compression gauge reading.


Compression Pressure      MPa (kgf/cm<sup>2</sup>/psi) at 200 rpm

Standard	Limit
3.04 (31/441)	2.2 (22/313)

### RECOMMENDED LUBRICANTS


ENGINE TYPE	TYPES OF LUBRICANTS
Without turbocharger	Diesel engine oil CC or CD grade
With turbocharger	Diesel engine oil CD grade

### ENGINE OIL VISCOSITY CHART

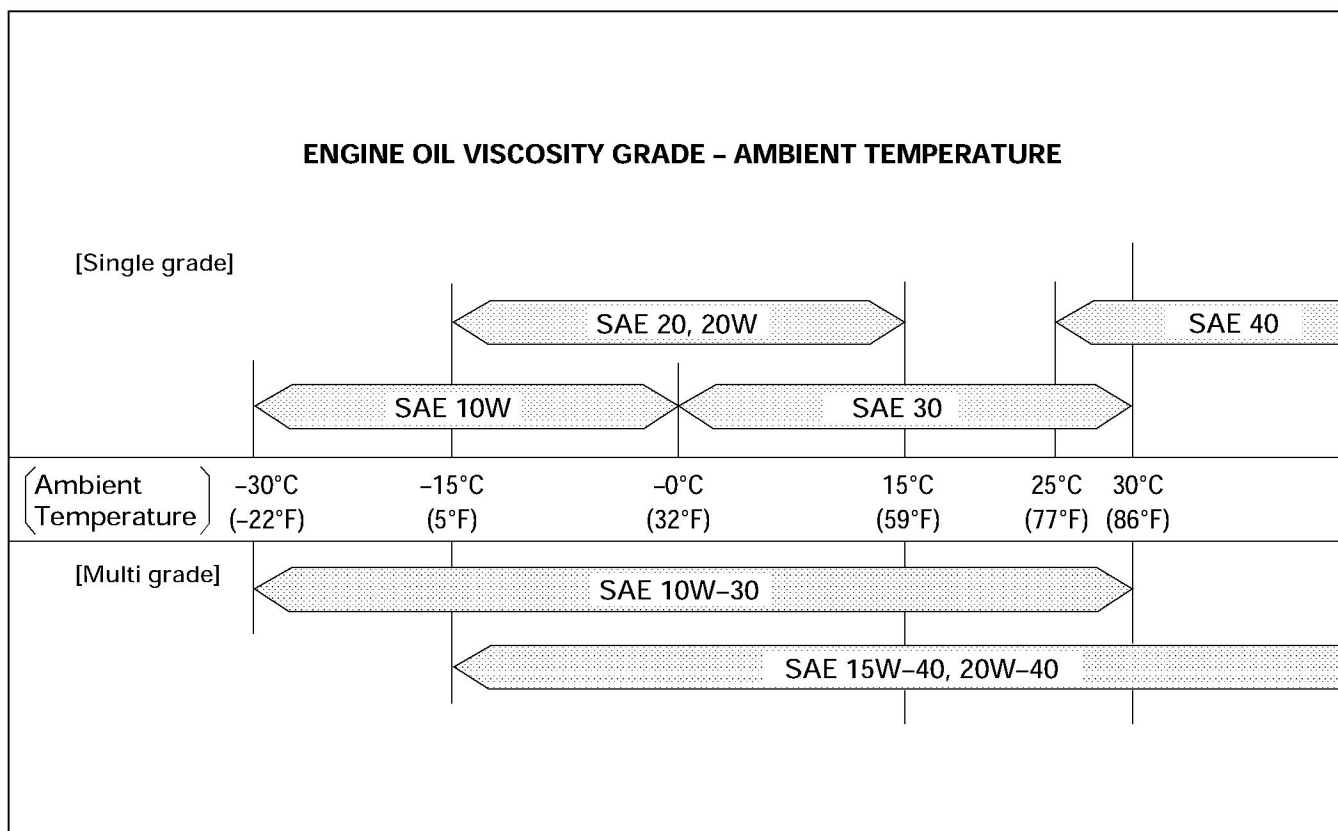

## ENGINE REPAIR KIT

All of the numbered parts listed below are included in the Engine Repair Kit.  
The gaskets marked with an asterisk (\*) are also included in the Top Overhaul Kit.

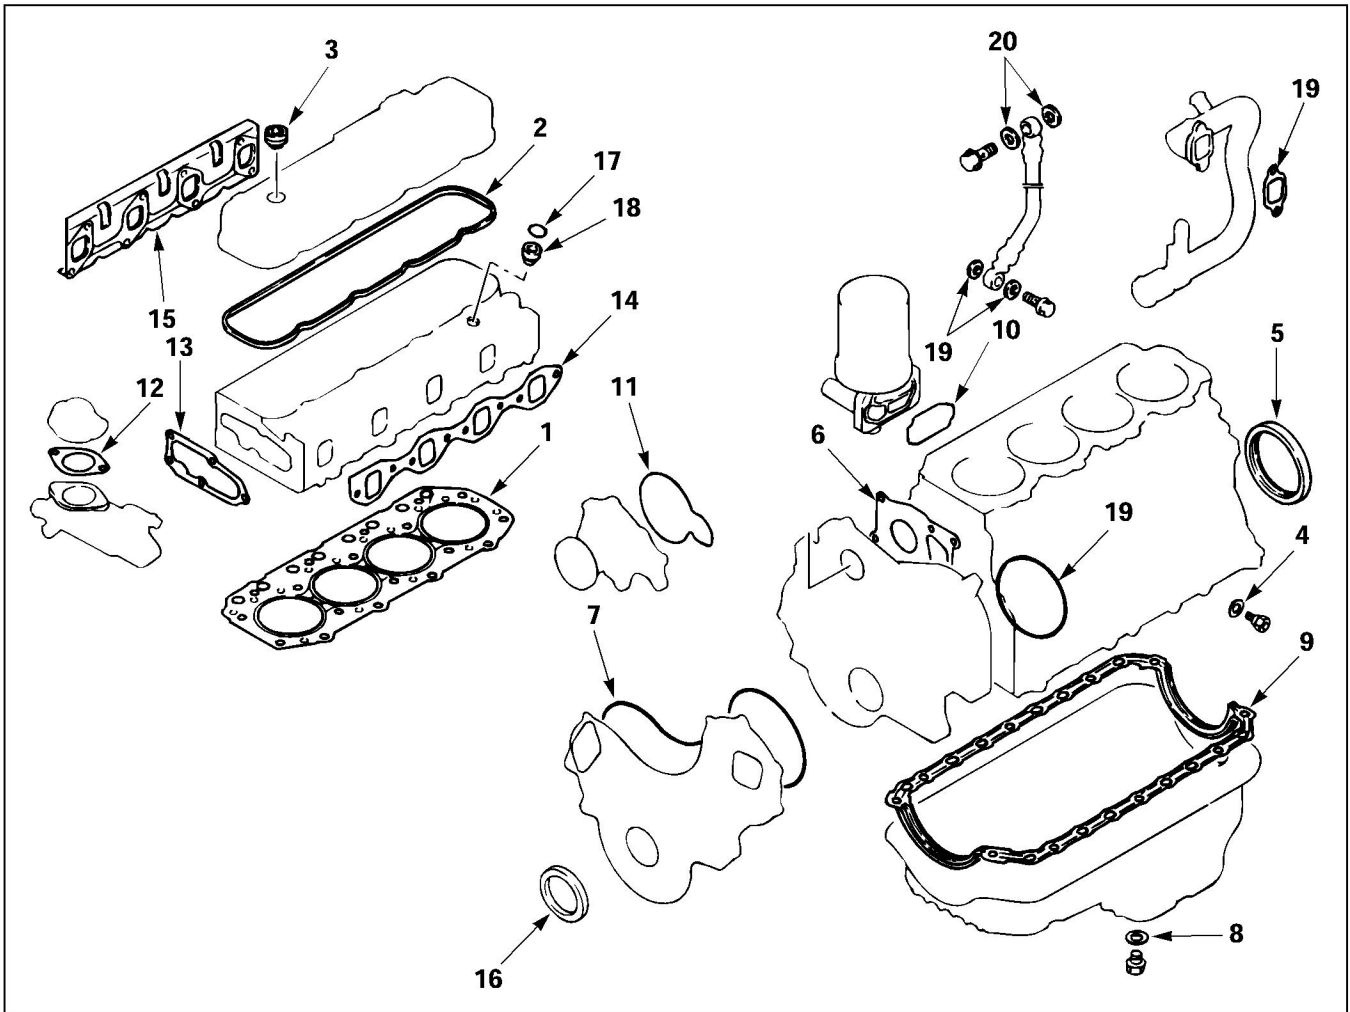

- |                                 |                                 |
|---------------------------------|---------------------------------|
| * 1. Cylinder head gasket       | 11. Water pump gasket           |
| * 2. Cylinder head cover gasket | 12. Water outlet pipe gasket    |
| * 3. Head cover cap nut gasket  | * 13. Thermostat housing gasket |
| 4. Drain cock gasket            | * 14. Intake manifold gasket    |
| 5. Crankshaft rear oil seal     | * 15. Exhaust manifold gasket   |
| 6. Gear case gasket             | 16. Crankshaft front oil seal   |
| 7. Gear case cover gasket       | * 17. Nozzle holder O-ring      |
| 8. Oil pan drain plug gasket    | * 18. Nozzle holder gasket      |
| 9. Oil pan gasket               | 19. Joint bolt gasket           |
| 10. Oil filter gasket           | 20. Vacuum pump pipe gasket     |

**SECTION 3**  
**ENGINE ASSEMBLY ( 1 )**

**TABLE OF CONTENTS**


<b>ITEM</b>	<b>PAGE</b>
<b>General description .....</b>	<b>30</b>
<b>Disassembly .....</b>	<b>31</b>



## ENGINE ASSEMBLY

### GENERAL DESCRIPTION

This illustration is based on the A-4JA1 engine in 4J series.

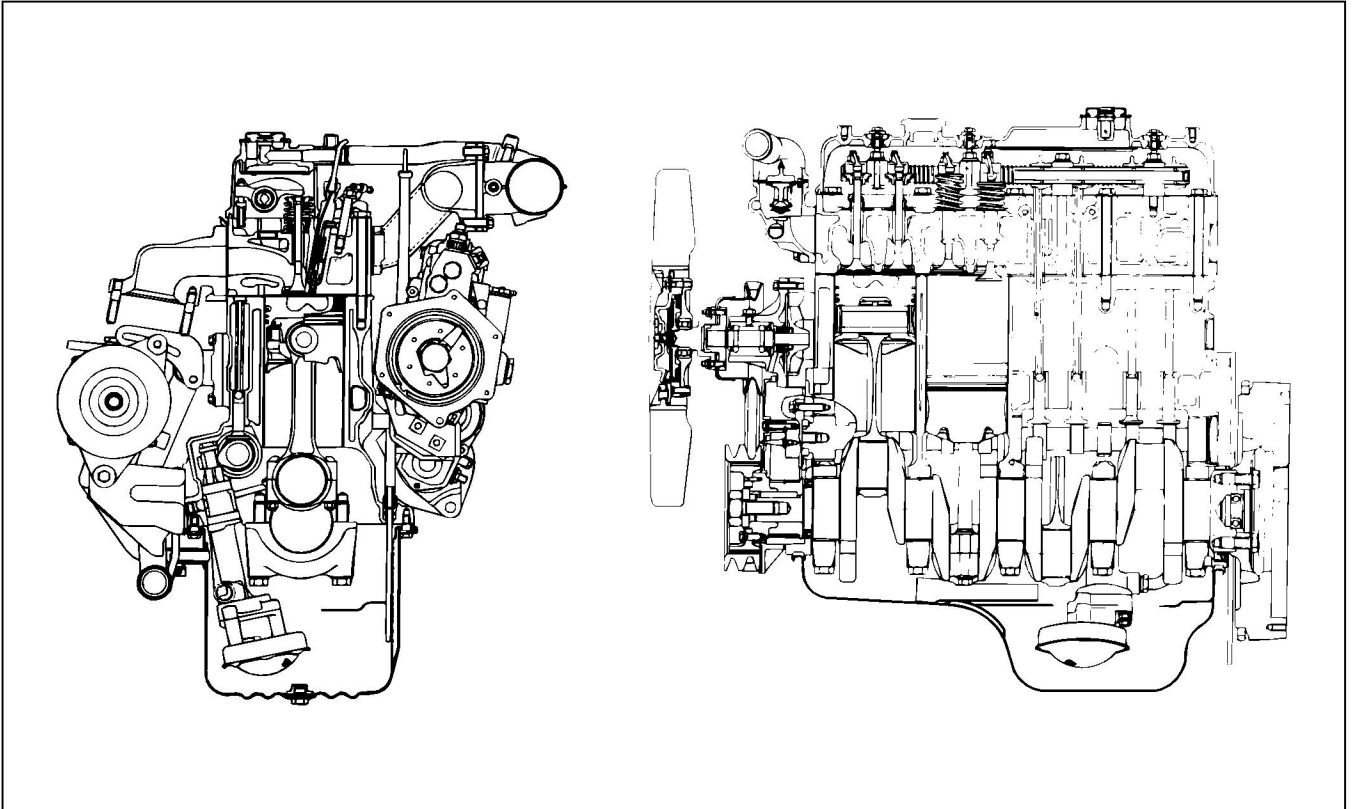

The 4J Series of industrial engines features the unique ISUZU troidal square combustion chamber. This design provides superior fuel economy for a wide range.

Auto-thermatic pistons with cast steel struts are used to reduce thermal expansion and resulting engine noise when the engine is cold.

Chrome plated dry type cylinder liners provide the highest durability.

The laminated steel sheet cylinder head gasket is very durable.

This type of gasket eliminates cylinder head bolt retightening.


The tufftrided crankshaft has a long service life. Because it is tufftrided, it cannot be reground.

The crankshaft main bearings and the connecting rod bearings are aluminum plated. These bearings are especially sensitive to foreign material such as metal scraps. It is very important that the oil ports and other related parts be kept clean and free of foreign material.



## DISASSEMBLY

These disassembly steps are based on the A-4JG1 engine.


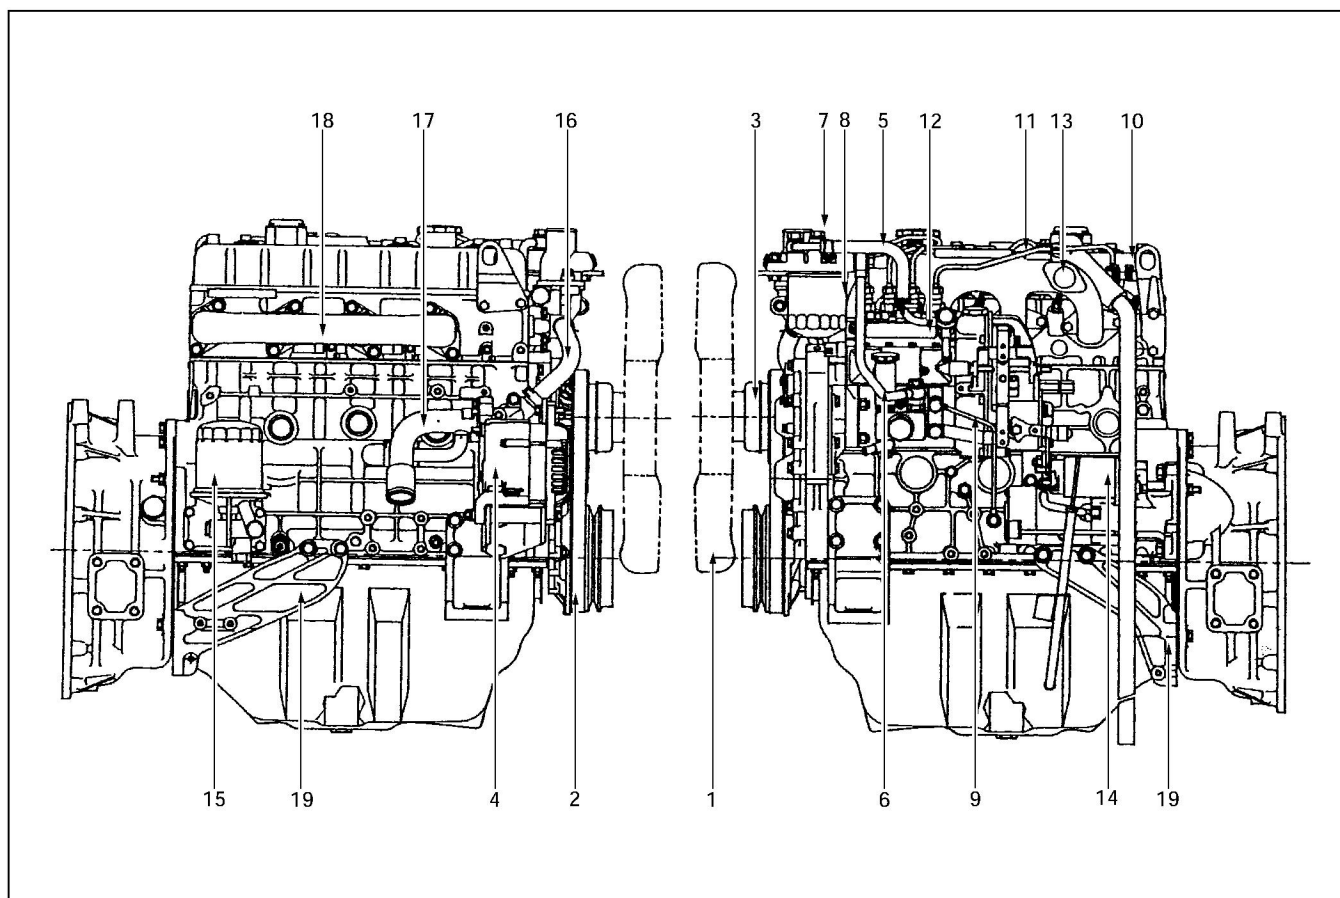


### Disassembly Steps - 1

- |   |                                     |
|---|-------------------------------------|
| 1. Cooling fan and spacer                     | 10. Fuel leak off pipe              |
| 2. Cooling fan drive belt                     | ▲ 11. Fuel injection pipe with clip |
| 3. Cooling fan drive pulley                   | ▲ 12. Injection pump                |
| 4. Alternator and adjusting plate             | 13. Intake manifold                 |
| 5. Fuel pipe (Fuel filter to injection pump)  | 14. Starter                         |
| 6. Fuel pipe (Fuel filter to feed pump)       | 15. Oil filter                      |
| 7. Fuel pipe (Fuel filter leak off)           | 16. Cooling water rubber hose       |
| 8. Fuel filter                                | 17. Cooling water intake pipe       |
| 9. Oil pipe (Injection pump to cylinder body) | ▲ 18. Exhaust manifold              |
|   | 19. Stiffner (RH & LH)              |




**Important Operations (Disassembly Steps - 1)**

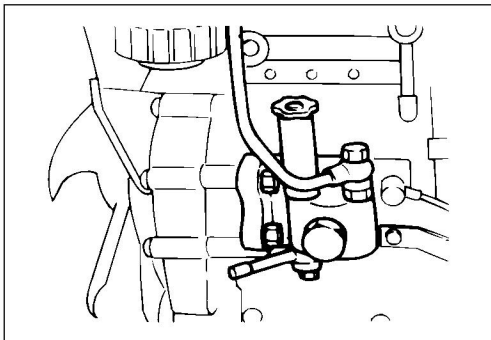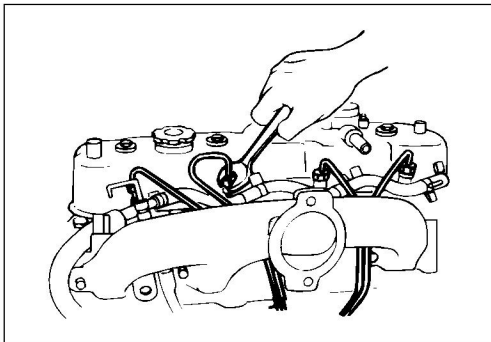

**11. Fuel Injection Pipe with Clip**

- 1) Loosen the injection pipe sleeve nuts at the delivery valve side.  
Do not apply excessive force to the injection pipes.
- 2) Loosen the injection pipe clips.
- 3) Remove the injection pipes.


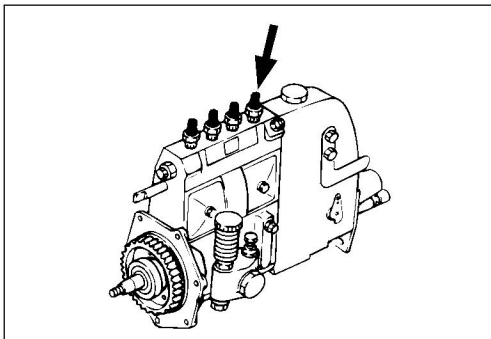


**12. Injection Pump**

- 1) Remove the six injection pump bracket bolts from the cylinder body timing gear case.
- 2) Remove the injection pump rear bracket bolts from the rear bracket.
- 3) Pull the injection pump with the injection pump timing gear free from the rear.


**Note:**

Plug the injection pump delivery holder ports with the shipping caps (or the equivalent) to prevent the entry of foreign material.

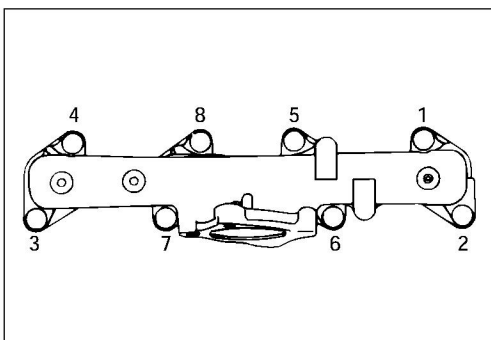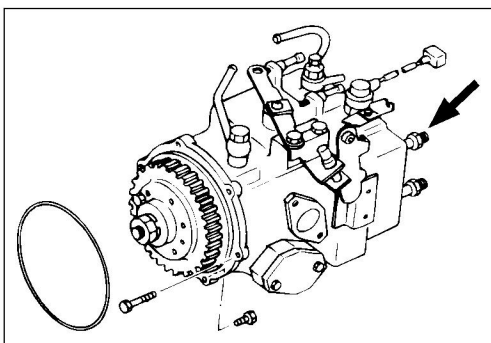

**18. Exhaust Manifold**


Loosen the exhaust manifold bolts a little at a time in the numerical order shown in the illustration.

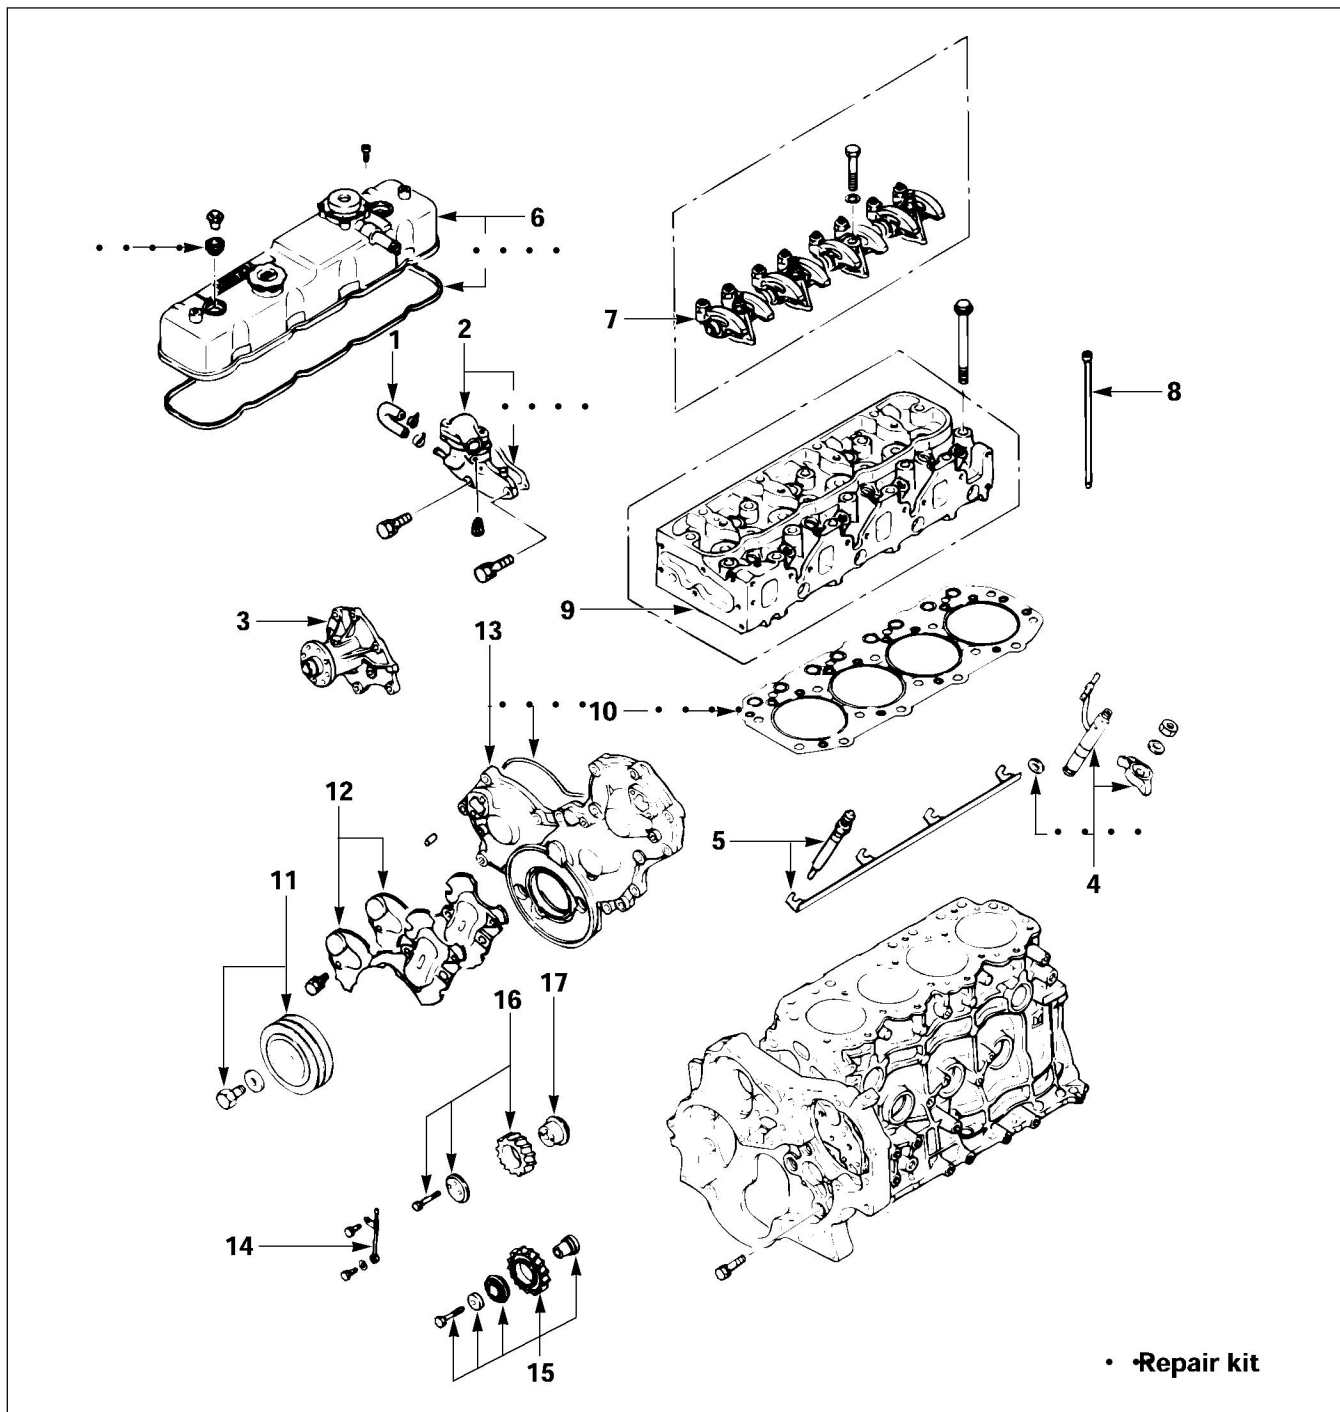

**Disassembly Steps - 2**

- 1. Water by-pass hose
- 2. Thermostat housing
- 3. Water pump
- ▲ 4. Injection nozzle holder
- 5. Glow plug and glow plug connector
- 6. Cylinder head cover
- ▲ 7. Rocker arm shaft and rocker arm
- 8. Push rod
- ▲ 9. Cylinder head
- 10. Cylinder head gasket
- ▲ 11. Crankshaft damper pulley with dust seal
- 12. Timing gear case cover (Option)
- 13. Timing gear cover
- 14. Timing gear oil pipe
- 15. Idler gear "B" and shaft
- ▲ 16. Idler gear "A"
- 17. Idler gear shaft

Inverted Engine

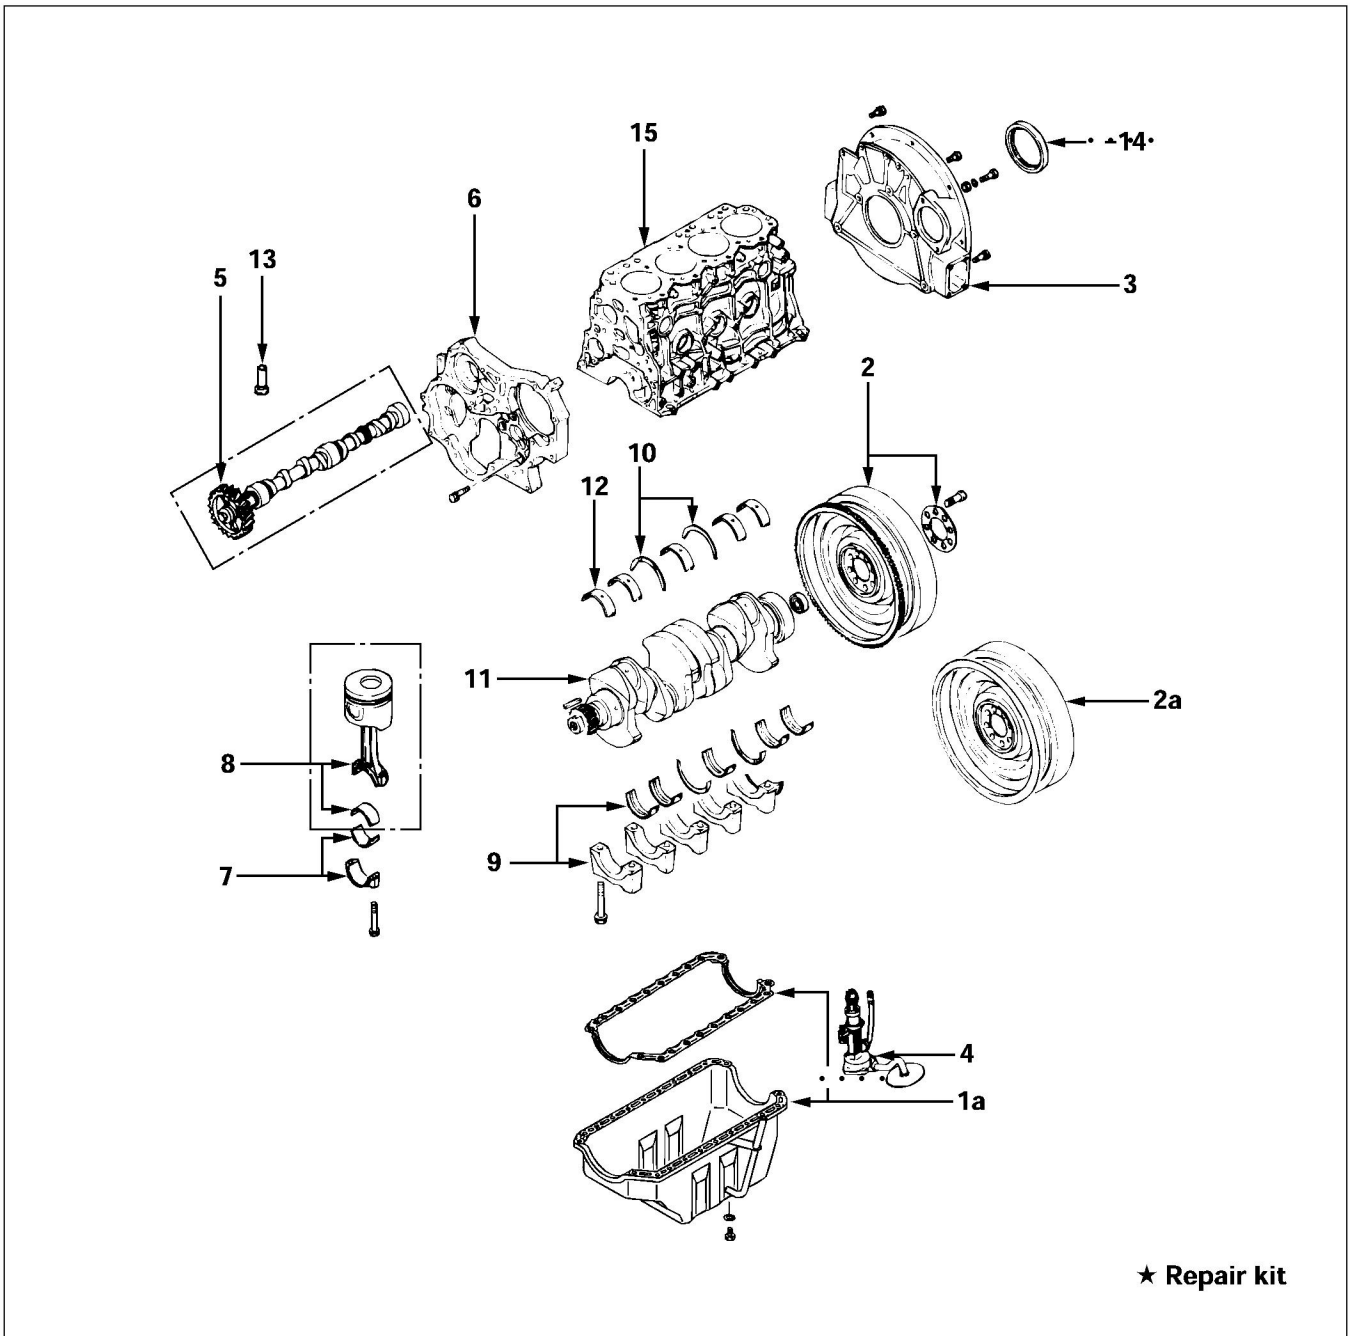


★ Repair kit

**Disassembly Steps - 3**

- 1. Oil pan
- ▲ 2. Flywheel
- 2a. Rear flywheel (If so equipped)
- 3. Flywheel housing
- 4. Oil pump with oil pipe
- ▲ 5. Camshaft with camshaft timing gear and thrust plate
- 6. Timing gear case
- ▲ 7. Connecting rod cap with lower bearing
- ▲ 8. Piston and connecting rod with upper bearing
- ▲ 9. Crankshaft bearing cap with lower bearing
- 10. Crankshaft thrust bearing
- 11. Crankshaft with crankshaft timing gear
- ▲ 12. Crankshaft upper bearing
- ▲ 13. Tappet
- 14. Crankshaft rear oil seal
- 15. Cylinder body




**Important Operations (Disassembly Steps - 2)**

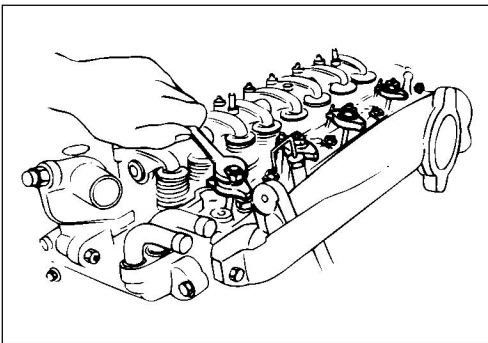


**4. Injection Nozzle Holder**

- 1) Remove the nozzle holder bracket nuts.

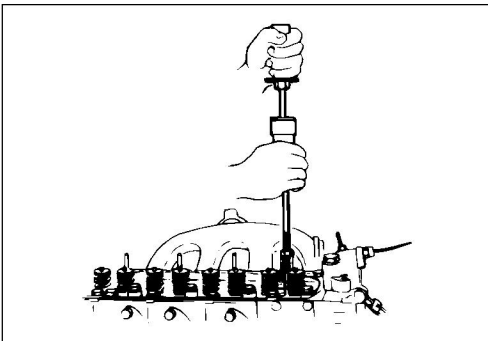

- 2) Use the nozzle holder remover and the sliding hammer to remove the nozzle holder together with the holder bracket.

Nozzle Holder Remover: 5-8840-2034-0  
Sliding Humme: 5-8840-0019-0

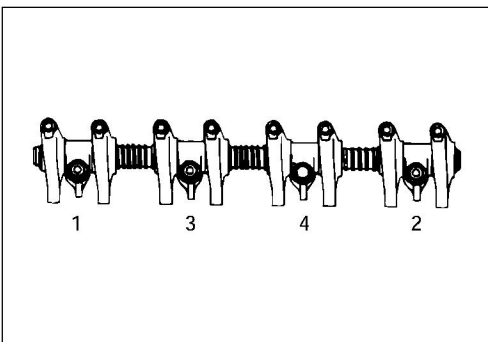


**7. Rocker Arm Shaft and Rocker Arm**

Loosen the rocker arm shaft bracket bolts in numerical order a little at a time.

**Note:**

Failure to loosen the rocker arm shaft bracket bolts in numerical order a little at a time will adversely effect the rocker arm shaft.

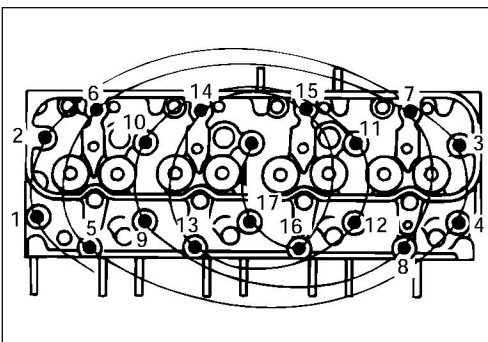


**9. Cylinder Head**

Loosen the cylinder head bolts in numerical order a little at a time.

**Note:**

Failure to loosen the cylinder head bolts in numerical order a little at a time will adversely effect the cylinder head lower surface.

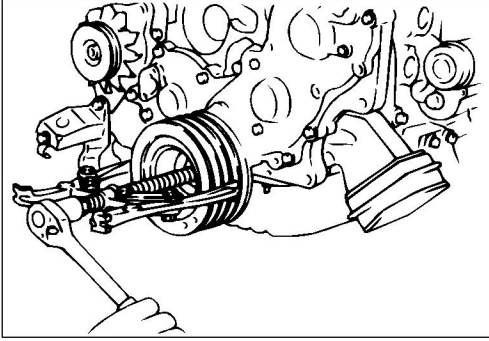

**11. Crankshaft Damper Pulley with Dust Seal**


- 1) Block the flywheel with a piece of wood to prevent it from turning.
- 2) Use the damper pulley remover to remove the damper pulley.

Damper Pulley Remover

**16. Idler Gear "A"**



Measure the camshaft timing gear backlash, the crankshaft timing gear backlash, and the idler gear "A" end play before removing the idler gear "A" and shaft.

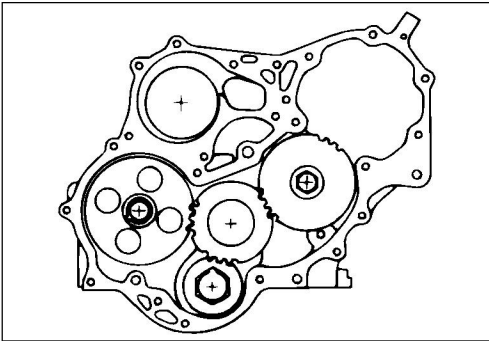


**Timing Gear Backlash Measurement**

- 1) Set a dial indicator to the timing gear to be measured.  
Hold both the gear to be checked and the adjoining gear stationary.
- 2) Move the gear to be checked as far as possible to both the right and the left.  
Take the dial indicator reading.  
If the measured value exceeds the specified limit, the timing gear must be replaced.

Timing Gear Backlash mm(in.)

GEAR	Standard
CAM • •IDLE (A)	0.032-0.060
CRANK • •IDLE (A)	0.032-0.066
IDLE (A) • •IDLE (B)	0-0.035
IDLE (B) • •INJ. PUMP	0-0.029

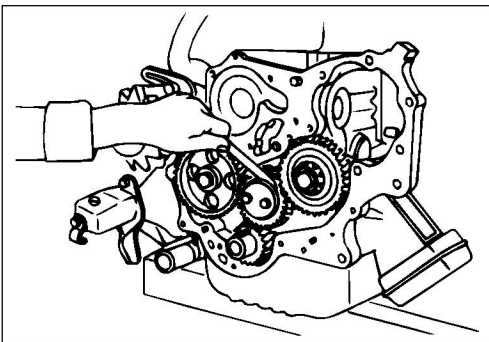

**Idler Gear "A" End Play Measurement**

Insert a feeler gauge between the idler gear and the thrust collar to measure the gap and determine the idler gear end play.


If the measured value exceeds the specified limit, the thrust collar must be replaced.

Idler Gear End Play mm(in.)

Standard	Limit
0.08 • •0.18 (0.003-0.007)	0.30 (0.012)




### Important Operations (Disassembly Steps - 3)

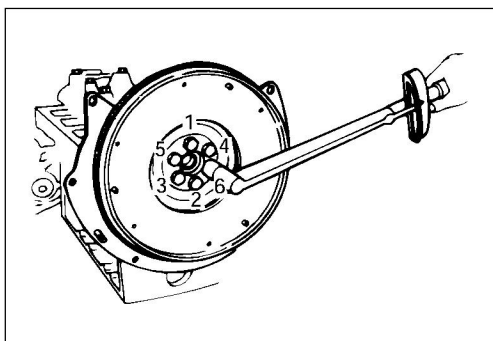

#### 2. Flywheel

- 1) Block the flywheel with a piece of wood to prevent it from turning.
- 2) Loosen the flywheel bolts a little at a time in the numerical order shown in the illustration.

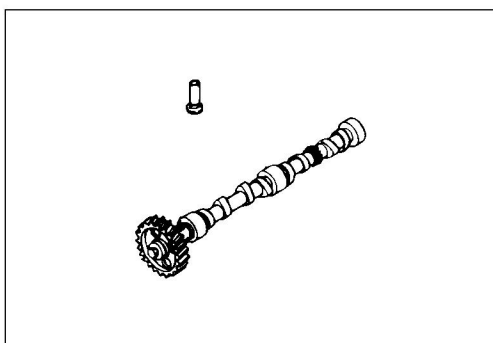


#### 5. Camshaft with Camshaft Timing Gear and Thrust Plate

- 1) Remove the thrust plate bolts.
- 2) Pull the camshaft free along with the camshaft timing gear and the thrust plate.


#### Note:

Be careful not to damage the camshaft journal, the cam, and the camshaft during the disassembly procedure.

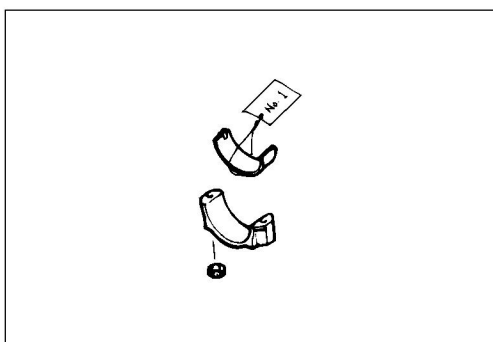


#### 7. Connecting Rod Cap with Lower Bearing

If the connecting rod lower bearings are to be reinstalled, mark their fitting positions by tagging each bearing with the cylinder number from which it was removed.

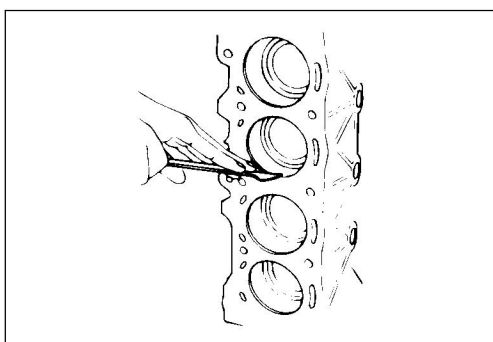






#### 8. Piston and Connecting Rod with Upper Bearing

- 1) Remove carbon deposits from the upper portion of the cylinder wall with a scraper before removing the piston and connecting rod.
- 2) Move the piston to the top of the cylinder and tap it with a hammer grip or similar object from the connecting rod lower side to drive it out.

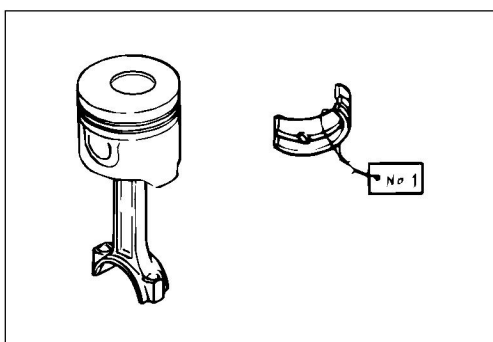

If the connecting rod upper bearings are to be reinstalled, mark their fitting positions by tagging each bearing with the cylinder number from which it was removed.



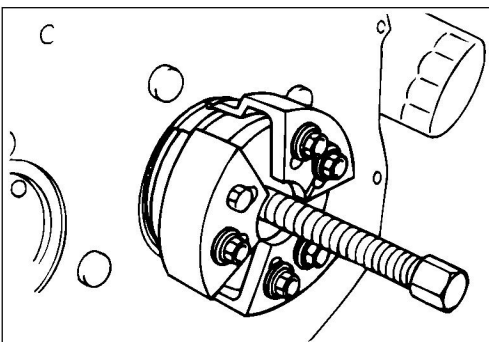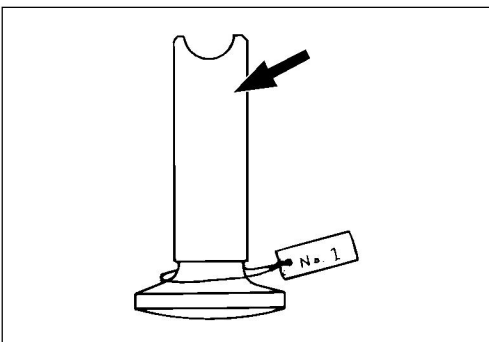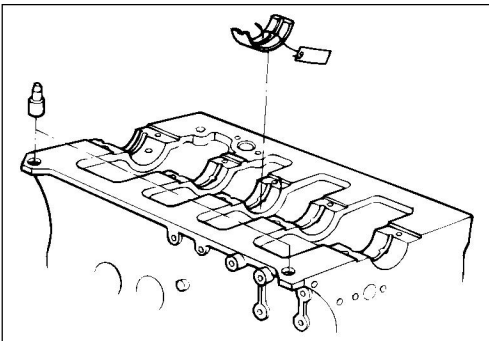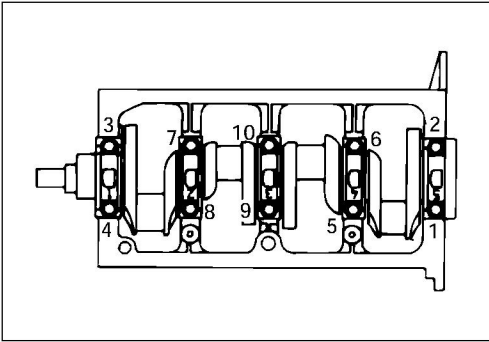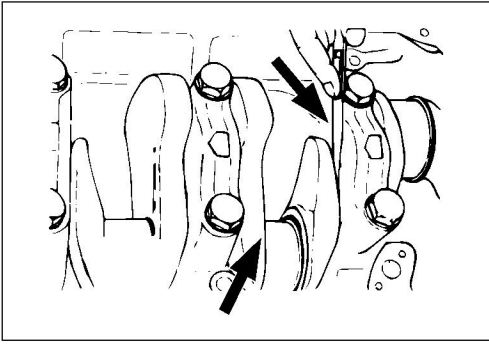

**9. Crankshaft Bearing Cap with Lower Bearing**

- 1) Measure the crankshaft end play at the center journal of the crankshaft.

Do this before removing the crankshaft bearing caps.

If the measured value exceeds the specified limit, the crankshaft thrust bearing must be replaced.

Crankshaft End Play		mm(in.)
Standard		Limit
0.10 (0.0039)		0.30 (0.0118)

- 2) Loosen the crankshaft bearing cap bolts in numerical order a little at a time.

If the crankshaft bearings are to be reinstalled, mark their fitting positions by tagging each bearing with the cylinder number from which it was removed.

**12. Crankshaft Upper Bearing**

If the crankshaft upper bearings are to be reinstalled, mark their fitting positions by tagging each bearing with the cylinder number from which it was removed.

**13. Tappet**


If the tappets are to be reinstalled, mark their fitting positions by tagging each tappet with the cylinder number from which it was removed.

**14. Crankshaft Rear Oil Seal (Axial Type)**

Remove the flywheel housing.

With the oil seal pushed in deep, install the special tool as shown in the illustration and remove the oil seal.

Oil Seal Remover: 5-8840-2360-0

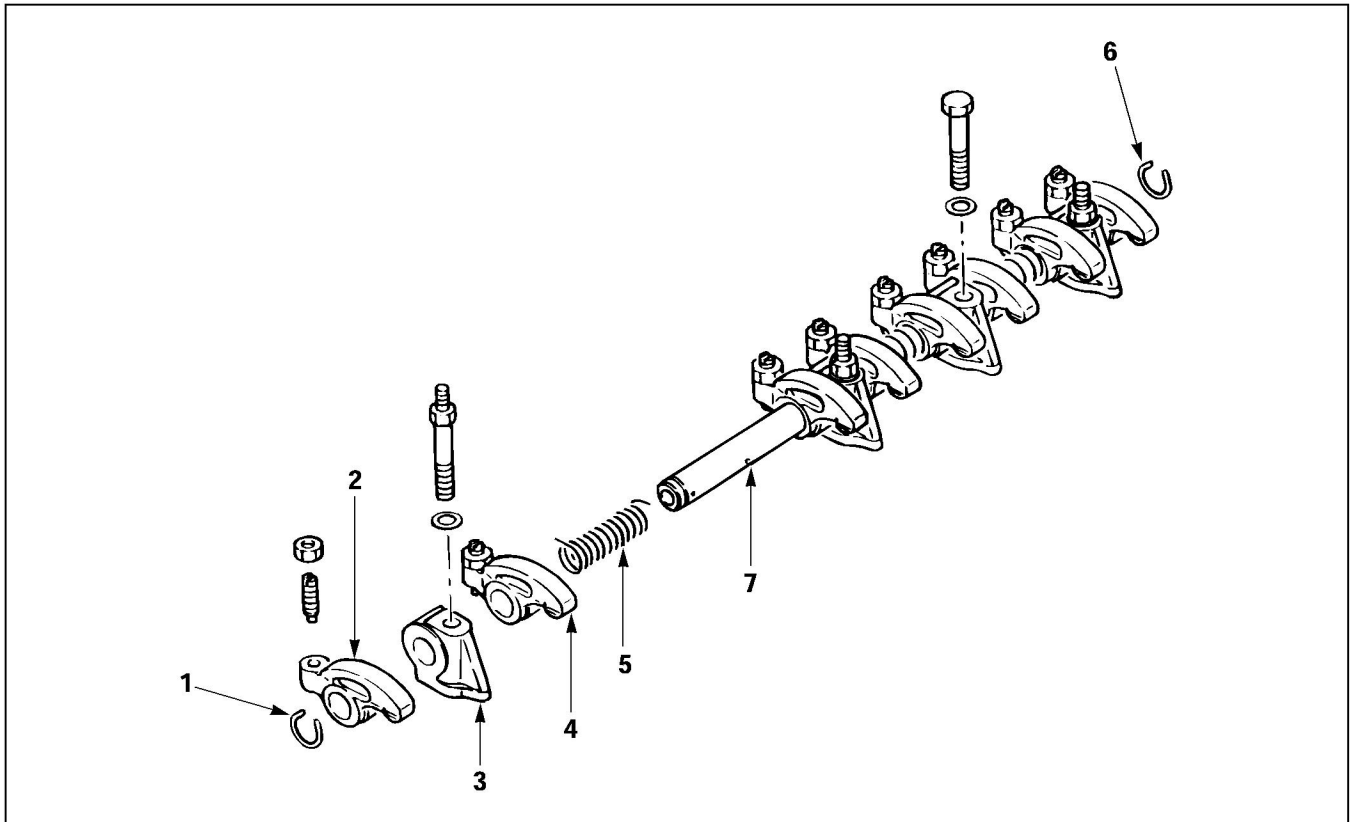**DISASSEMBLY****SINGLE UNIT****ROCKER ARM SHAFT AND ROCKER ARM****Disassembly Steps**

- ▲ 1. Rocker arm shaft snap ring
- ▲ 2. Rocker arm
- ▲ 3. Rocker arm shaft bracket
- 4. Rocker arm
- 5. Rocker arm shaft spring
- 6. Rocker arm shaft snap ring
- 7. Rocker arm shaft



## Important Operations

### 1. Rocker Arm Shaft Snap Ring


### 2. Rocker Arm

### 3. Rocker Arm Shaft Bracket

- 1) Use a pair of snap ring pliers to remove the snap rings.
- 2) Remove the rocker arms.
- 3) Remove the rocker arm shaft bracket.

If the rocker arms and rocker arm shaft brackets are to be reinstalled, mark their installation positions by tagging each rocker arm and rocker arm shaft bracket with the cylinder number from which it was removed.


## CYLINDER HEAD

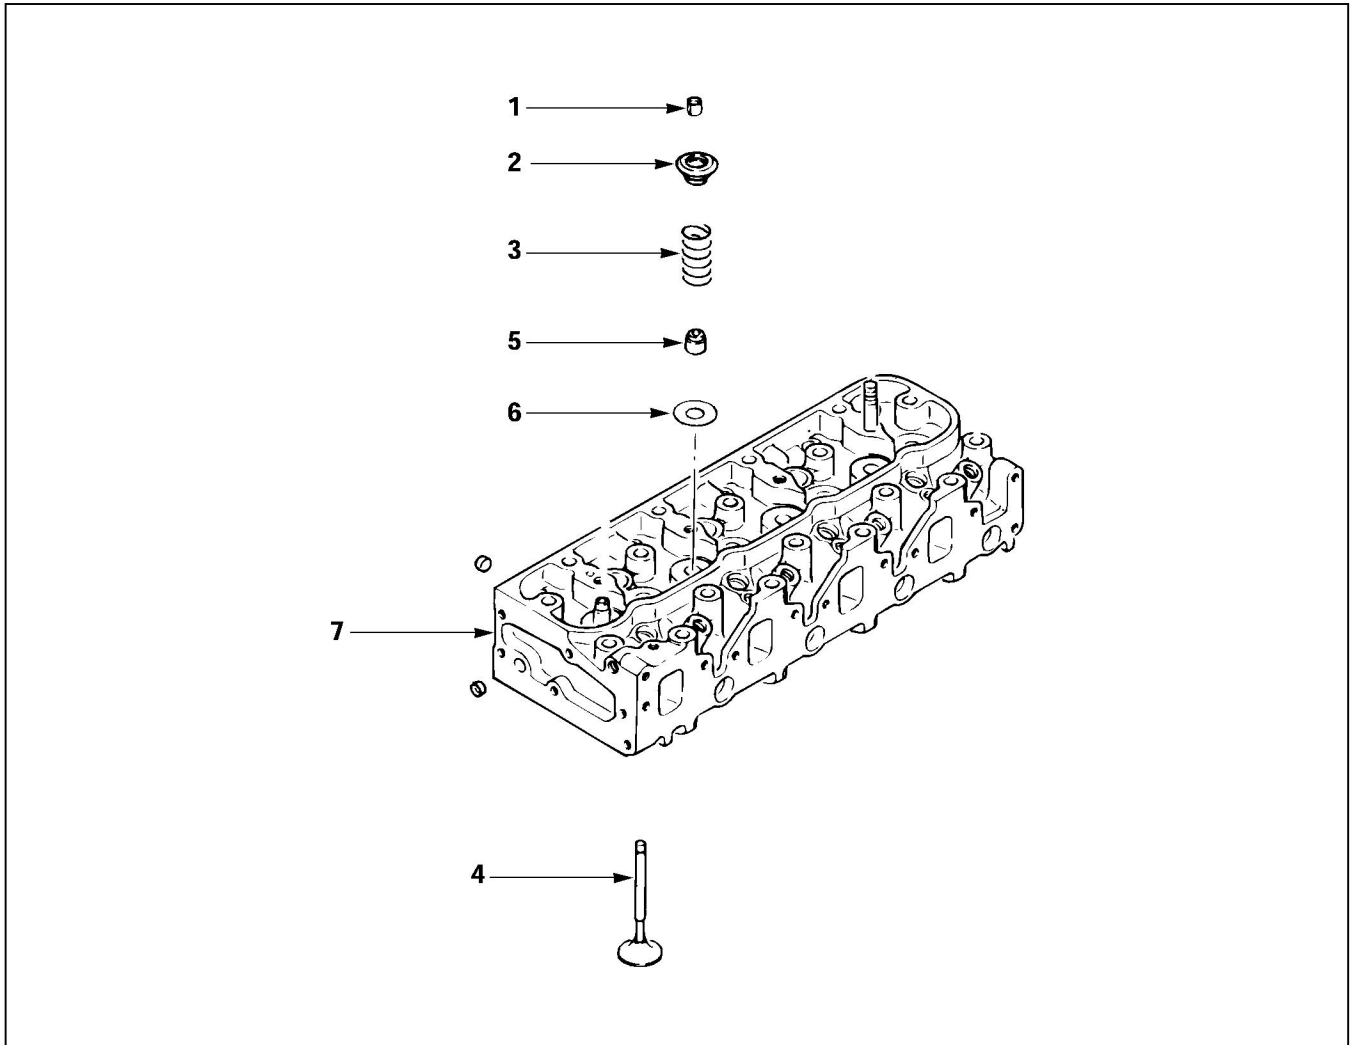**Disassembly Steps**

- ▲ 1. Split collar
- 2. Valve spring upper seat
- 3. Valve spring
- ▲ 4. Intake and exhaust valves
- 5. Valve stem oil seal
- 6. Valve spring lower washer
- 7. Cylinder head



## Important Operations

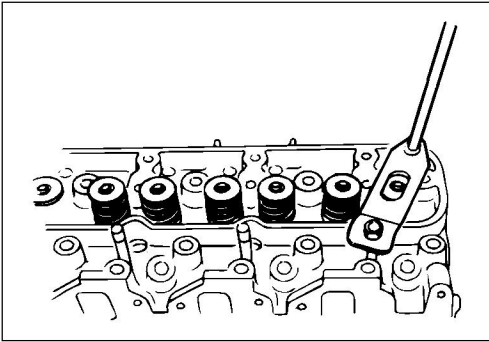


### 1. Split Collar

- 1) Place the cylinder head on a flat wooden surface.
- 2) Use the spring compressor to remove the split collar.

Do not allow the valve to fall from the cylinder head.

Spring Compressor: 9-8523-1423-0

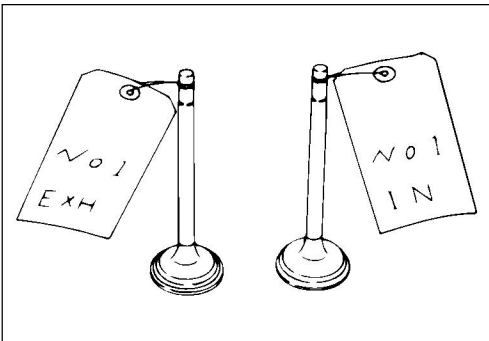

### 4. Intake and Exhaust Valve

If the intake and exhaust valves are to be reinstalled, mark their installation positions by tagging each valve with the cylinder number from which it was removed.

If there is excessive valve wear or damage, the valve must be replaced.


Refer to Page 50 of "Inspection and Repair" for the valve and valve seat insert procedure.

#### Note:


If there is excessive valve guide wear or damage, the valve guide must be replaced.

Refer to Page 49 of "Inspection and Repair" for the valve guide replacement procedure.

The valve and the valve guides must be replaced as a set. Never replace only one or the other.

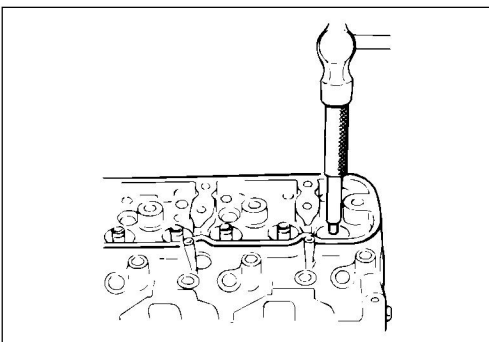


## PISTON AND CONNECTING ROD

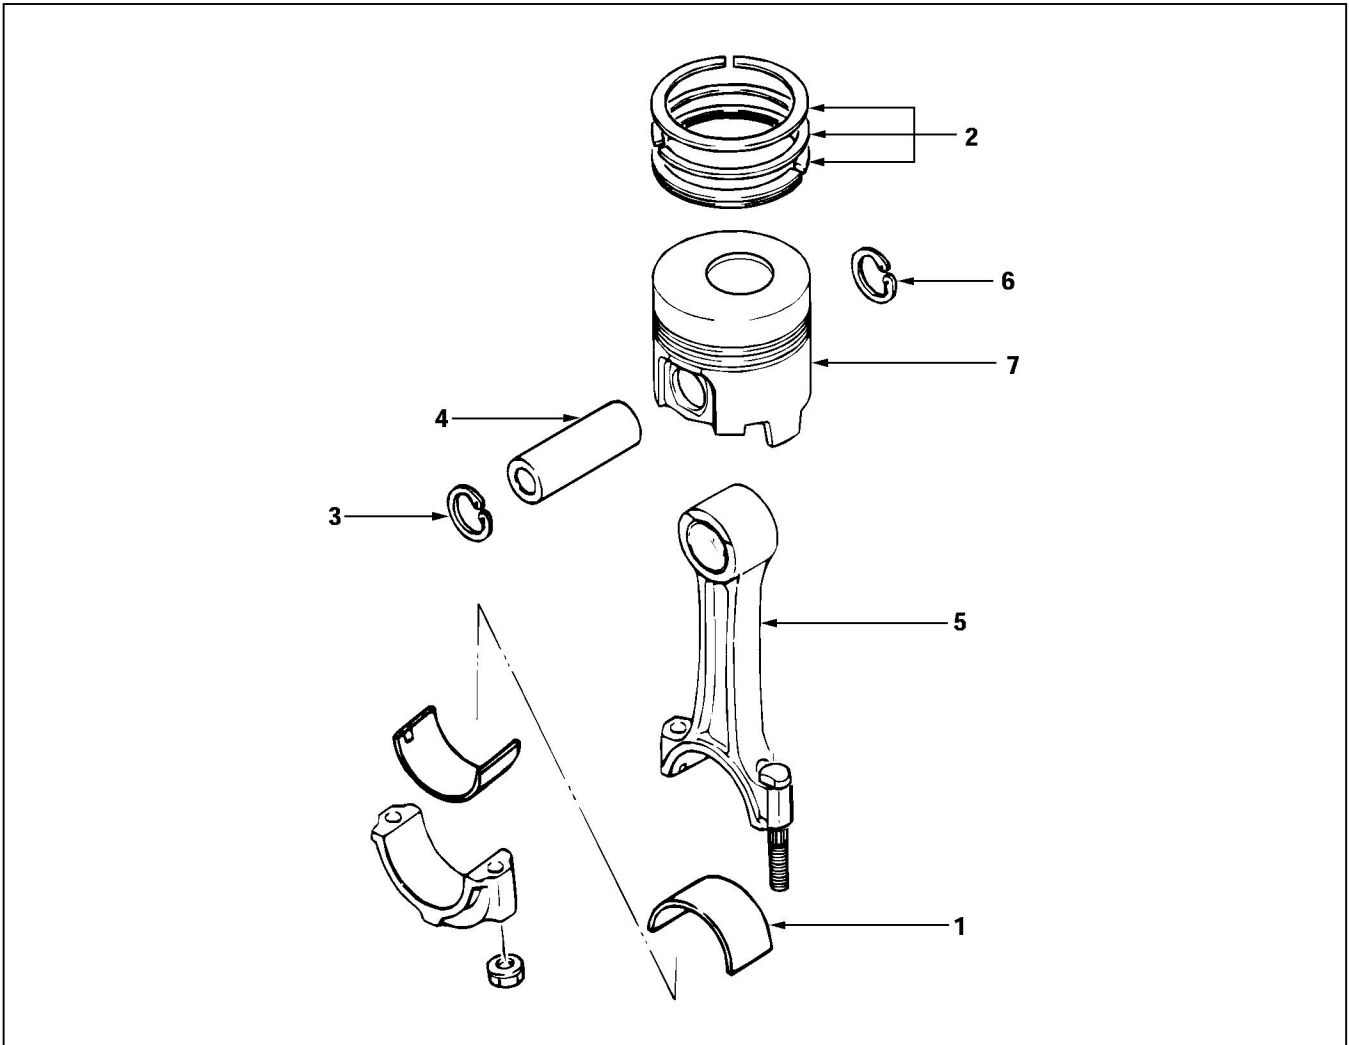**Disassembly Steps**

- ▲ 1. Connecting rod bearing
- ▲ 2. Piston ring
- ▲ 3. Piston pin snap ring
- ▲ 4. Piston pin
- ▲ 5. Connecting rod
- ▲ 6. Piston pin snap ring
- ▲ 7. Piston



**Important Operations**

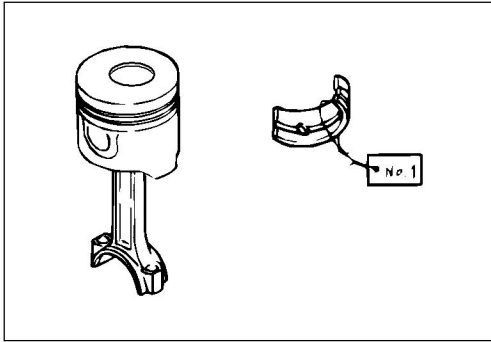

**1. Connecting Rod Bearing**

If the connecting rod bearings are to be reinstalled, mark their fitting positions by tagging each bearing with the cylinder number from which it was removed.




**2. Piston Ring**



- 1) Clamp the connecting rod in a vise.  
Take care not to damage the connecting rod.
- 2) Use a piston pin replacer to remove the piston rings.

Piston Ring Replacer

Do not attempt to use some other tool to remove the piston rings. Piston ring stretching will result in reduced piston ring tension.

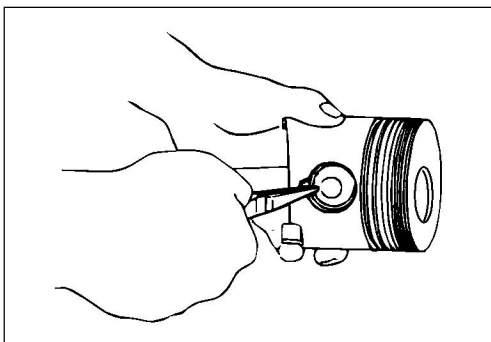


**3. Piston Pin Snap Ring**



**4. Piston Pin Snap Ring**

Use a pair of snap ring pliers to remove the piston pin snap rings.

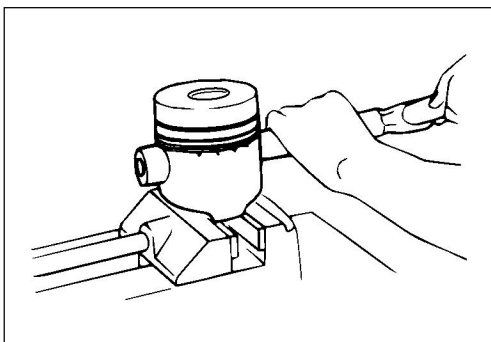


**5. Piston Pin**

**7. Piston**

Tap the piston pin out with a hammer and a brass bar.

If the pistons are to be reinstalled, mark their installation positions by tagging each piston with the cylinder number from which it was removed.

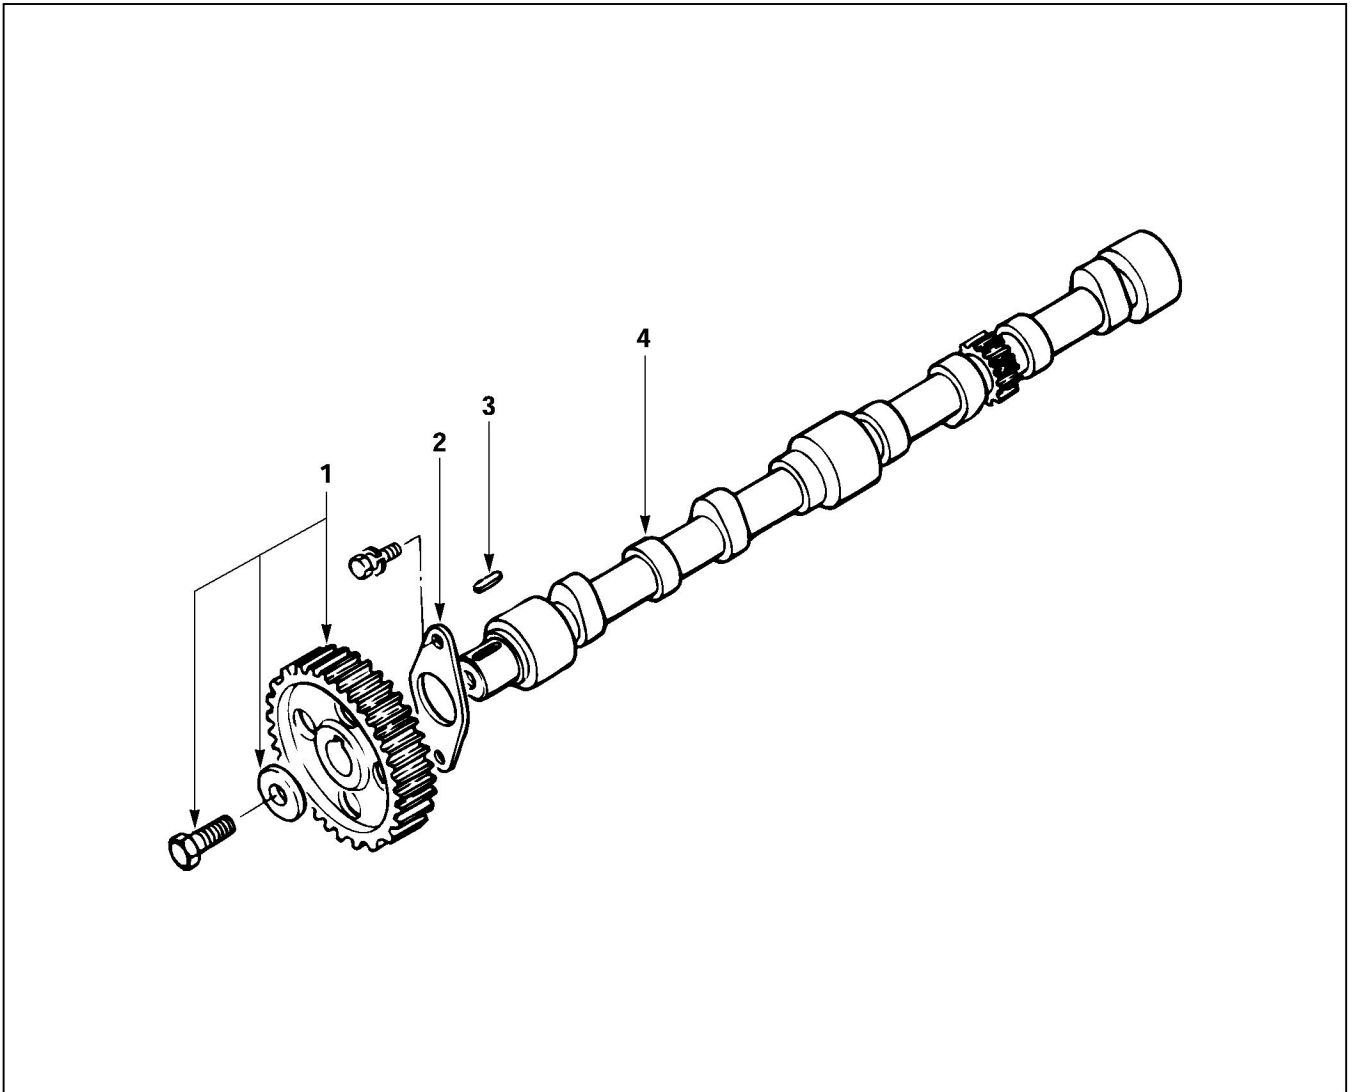
**CAMSHAFT, CAMSHAFT TIMING GEAR, AND THRUST PLATE****Disassembly Steps**

- ▲ 1. Camshaft timing gear
- ▲ 2. Thrust plate
- 3. Feather key
- 4. Camshaft






## Important Operations

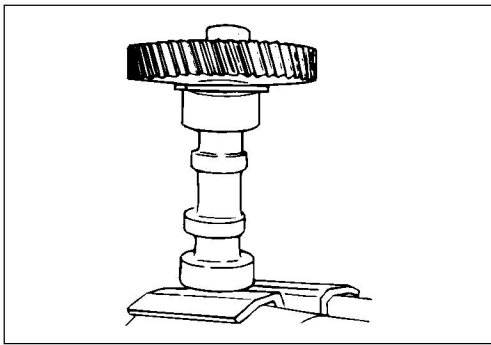

### 1. Camshaft Timing Gear

### 2. Thrust Plate

- 1) Clamp the camshaft in a vise.  
Take care not to damage the camshaft.

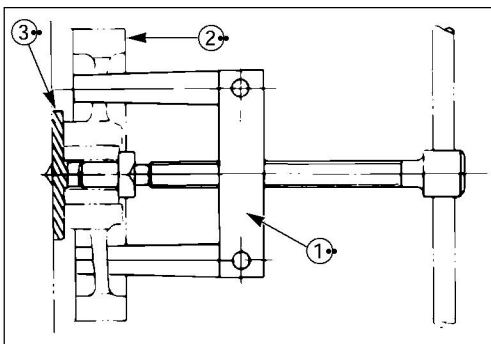

- 2) Use the universal puller ① to pull out the camshaft timing gear ② .  
Universal Puller: 5-8840-0086-0
- 3) Remove the thrust plate ③ .

**SECTION 4**  
**ENGINE ASSEMBLY ( 2 )**


**TABLE OF CONTENTS**

<b>ITEM</b>	<b>PAGE</b>
Inspection and repair .....	48



## INSPECTION AND REPAIR

Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.

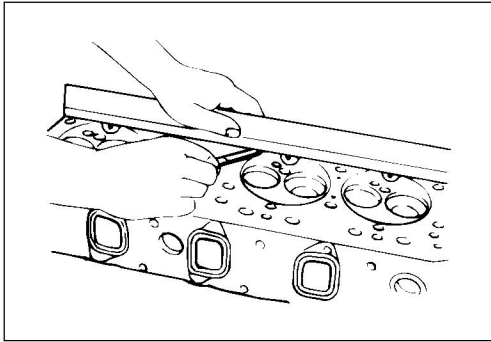


### CYLINDER HEAD

#### Cylinder Head Lower Face Warp



1. Use a straight edge and a feeler gauge to measure the four sides and the two diagonals of the cylinder head lower face.
2. Regrind the cylinder head lower face if the measured values are greater than the specified limit but less than the maximum grinding allowance.

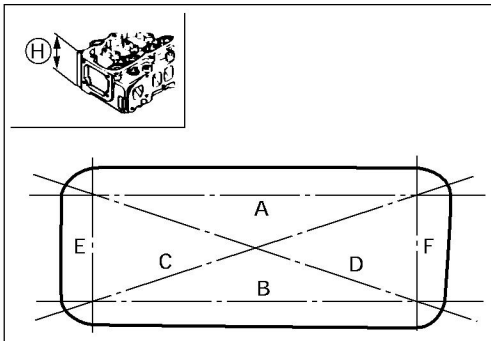

If the measured values exceed the maximum grinding allowance, the cylinder head must be replaced.

Cylinder Head Lower Face Warpage mm(in)


Standard	Limit	Maximum Grinding Allowance
0.05 (0.002) or less	0.2 (0.008)	0.3 (0.012)

Cylinder Head Height (Reference) mm(in)

Standard	Limit
91.95 (3.620) – 92.05 (3.624)	91.65 (3.60)

#### Note:

If the cylinder head lower face is reground, valve depression must be checked.

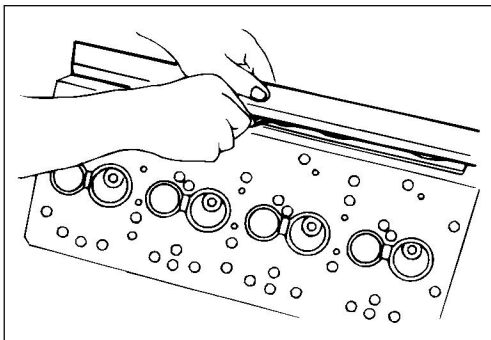

#### Exhaust Manifold Fitting Face Warp




Use a straight edge and a feeler gauge to measure the manifold cylinder head fitting face warpage.

Regrind the manifold cylinder head fitting faces if the measured values are greater than the specified limit but less than the maximum grinding allowance.

If the measured values exceed the maximum grinding allowance, the cylinder head must be replaced.

Manifold Fitting Face Warpage mm (in)

Standard	Limit	Maximum Grinding Allowance
0.05 (0.002) or less	0.2 (0.008)	0.4 (0.016)

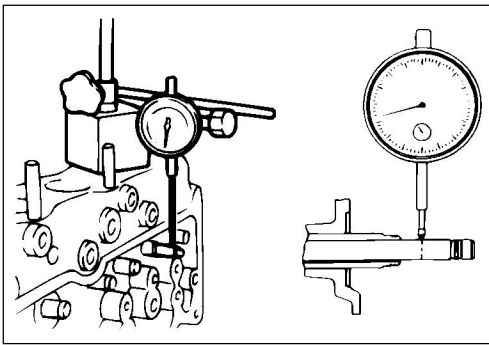

## VALVE GUIDE



### Valve Stem and Valve Guide Clearance


#### Measuring Method - I

1. With the valve stem inserted in the valve guide, set the dial indicator needle to "0".
2. Move the valve head from side to side.  
Read the dial indicator.  
Note the highest dial indication.

If the measured values exceed the specified limit, the valve and the valve guide must be replaced as a set.

Valve Stem Clearance mm(in)

	Standard	Limit
Intake Valve	0.039 – 0.069 (0.0015 – 0.0027)	0.20 (0.008)
Exhaust Valve	0.064 – 0.096 (0.0025 – 0.0038)	0.25 (0.0098)

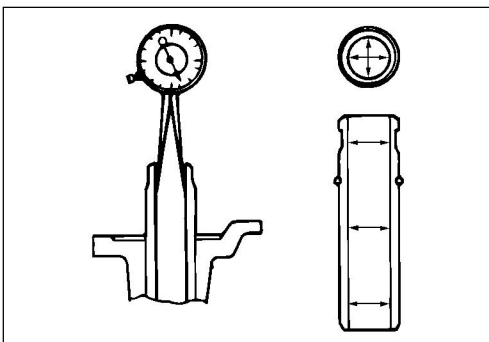

#### Measuring Method - II



1. Measure the valve stem outside diameter.  
Refer to the Item "Valve Stem Outside Diameter".
2. Use a caliper calibrator or a telescoping gauge to measure the valve guide inside diameter.

### Valve Guide Replacement





#### Valve Guide Removal

Use a hammer and the valve guide replacer to drive out the valve guide from the cylinder head lower face.



Valve Guide Replacer: 9-8523-1212-0

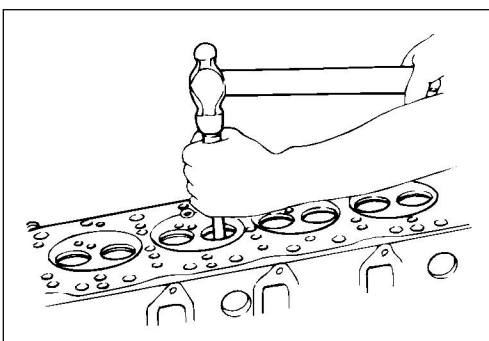


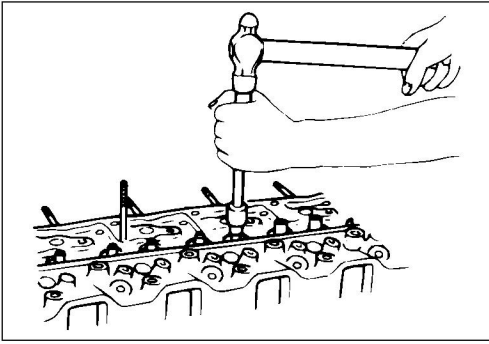

**Valve Guide Installation**

1. Apply engine oil to the valve guide outer circumference.
2. Attach the valve guide replacer to the valve guide.
3. Use a hammer to drive the valve guide into position from the cylinder head upper face.

Valve Guide Replacer: 9-8523-1212-0

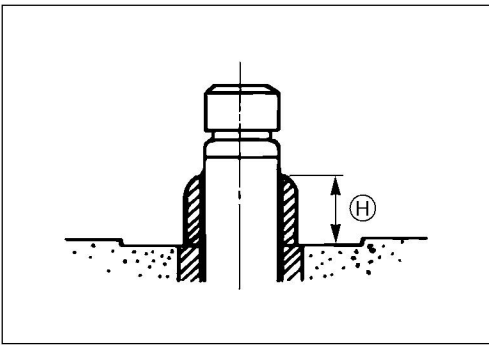

4. Measure the height of the valve guide upper end from the upper face of the cylinder head.


Valve Guide Upper End Height (H)  
(Reference)

mm(in)

13.0 (0.512)
--------------

**Note:**

If the valve guide has been removed, both the valve and the valve guide must be replaced as a set.

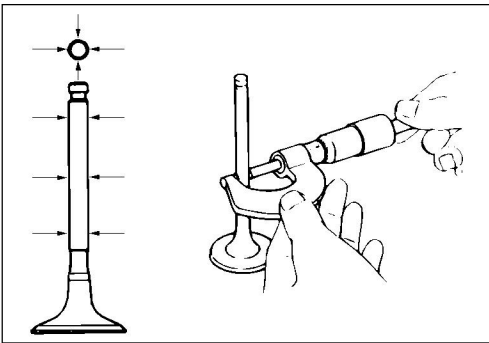

**VALVE AND VALVE SEAT INSERT**

**Valve Stem Outside Diameter**


Measure the valve stem diameter at three points.

If the measured value is less than the specified limit, the valve and the valve guide must be replaced as a set.

Valve Stem Outside Diameter

mm(in)

	Standard	Limit
Intake Valve	7.949 – 7.961 (0.3129 – 0.3134)	7.88 (0.3102)
Exhaust Valve	7.921 – 7.936 (0.3118 – 0.3124)	7.88 (0.3102)

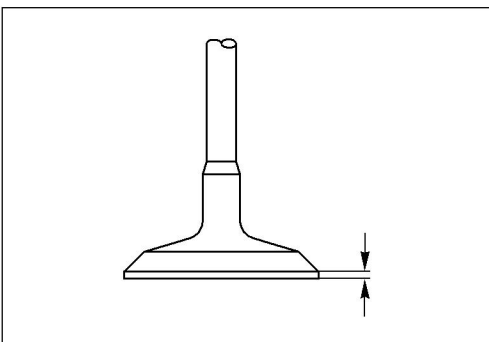

**Valve Thickness**


**Measure the valve thickness.**

If the measured value is less than the specified limit, the valve and the valve guide must be replaced as a set.

Intake and Exhaust Valve Thickness

mm(in)

	Standard	Limit
Intake Valve	1.79 (0.070)	1.1 (0.043)
Exhaust Valve	1.39 (0.055)	1.1 (0.043)

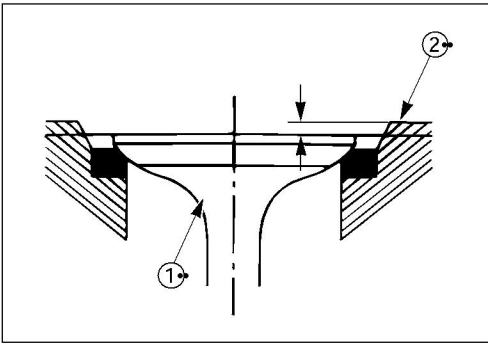


**Valve Depression**

1. Install the valve ① to the cylinder head ② .
2. Use a depth gauge or a straight edge with steel rule to measure the valve depression from the cylinder head lower surface.

If the measured value exceeds the specified limit, the valve seat insert must be replaced.

Valve Depression		mm(in)
	Standard	Limit
Intake	0.65 (0.026)	1.28 (0.050)
Exhaust	1.10 (0.043)	1.60 (0.063)

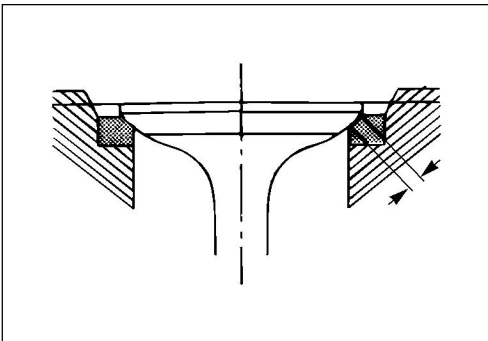

**Valve Contact Width**


1. Check the valve contact faces for roughness and unevenness.

Make smooth the valve contact surfaces.

2. Measure the valve contact width.

If the measured value exceeds the specified limit, the valve seat insert must be replaced.

Valve Contact Width		mm(in)
	Standard	Limit
Intake	1.7 (0.067)	2.2 (0.087)
Exhaust	2.0 (0.079)	2.5 (0.098)

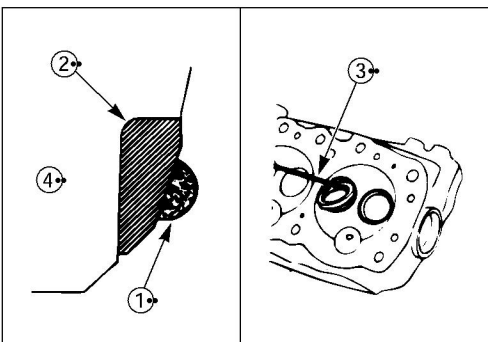

**Valve Seat Insert Replacement**

**Valve Seat Insert Removal**

1. Arc weld the entire inside circumference ① of the valve seat insert ②.


2. Allow the valve seat insert to cool for a few minutes. This will invite contraction and make removal of the valve seat insert easier.

- Use a screwdriver ③ to pry the valve seat insert free.

Take care not to damage the cylinder head ④ .



- Carefully remove carbon and other foreign material from the cylinder head insert bore.

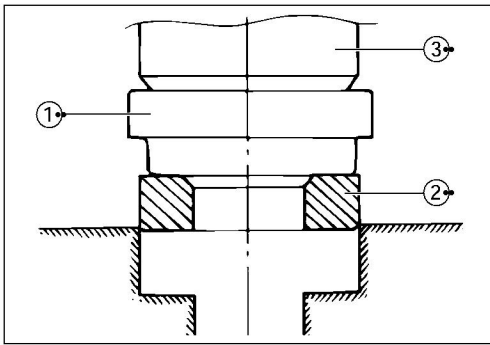

#### Valve Seat Insert Installation

- Carefully place the attachment ① (having a smaller outside diameter than the valve seat insert) on the valve seat insert ② .


#### Note:

The smooth side of the attachment must contact the valve seat insert.

- Use a bench press ③ to gradually apply pressure to the attachment and press the valve seat insert into place.

#### Note:

Do not apply an excessive amount of pressure with the bench press. Damage to the valve seat insert will result.

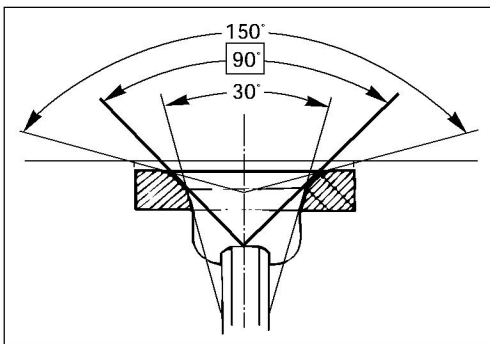

#### Valve Seat Insert Correction

- Remove the carbon from the valve seat insert surface.
- Use a valve cutter (15°, 45°, and 75° blades) to minimize scratches and other rough areas. This will bring the contact width back to the standard value.

Remove only the scratches and rough areas. Do not cut away too much. Take care not to cut away unblemished areas of the valve seat surface.


Valve Seat Angle	45°
------------------	-----

#### Note:




Use an adjustable valve cutter pilot.

Do not allow the valve cutter pilot to wobble inside the valve guide.

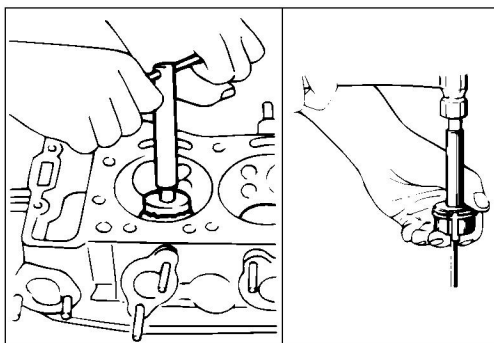

3. Apply abrasive compound to the valve seat insert surface.
4. Insert the valve into the valve guide.
5. Turn the valve while tapping it to fit the valve seat insert.
6. Check that the valve contact width is correct.
7. Check that the valve seat insert surface is in contact with the entire circumference of the valve.

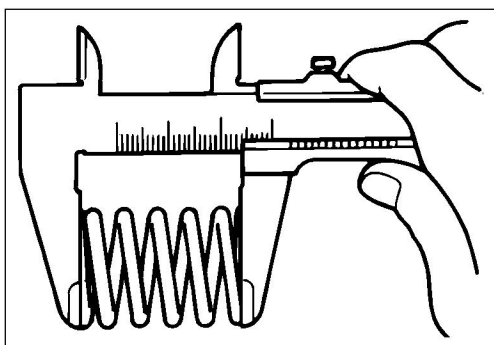

## VALVE SPRING

### Valve Spring Free Height




Use a vernier caliper to measure the valve spring free height.

If the measured value is less than the specified limit, the valve spring must be replaced.

Valve Spring Free Height mm(in)

Standard	Limit
49.7 (1.96)	48.2 (1.90)

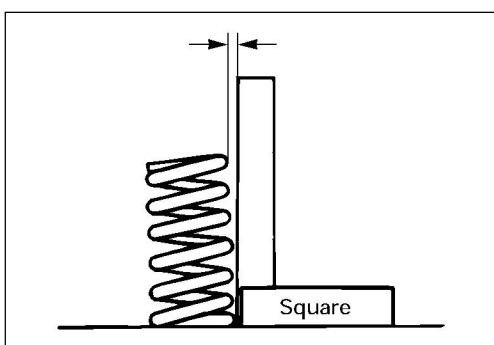

### Valve Spring Inclination




Use a surface plate and a square to measure the valve spring inclination.

If the measured value exceeds the specified limit, the valve spring must be replaced.

Valve Spring Inclination mm(in)

Standard	Limit
1.5 (0.06) or less	2.5 (0.098)

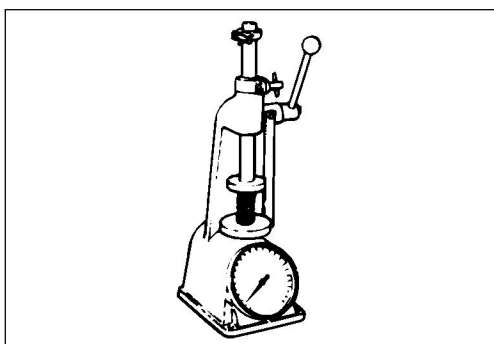

### Valve Spring Tension




Use a spring tester to measure the valve spring tension.

If the measured value is less than the specified limit, the valve spring must be replaced.

Valve Spring Tension N(kgf/lb)

Compressed Height	Standard	Limit
38.9 mm (1.53 in)	254 (25.9/57)	225 (23/51)



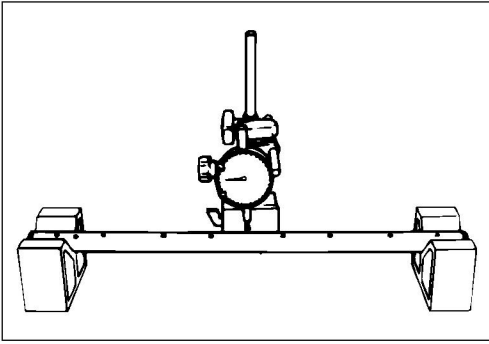

## ROCKER ARM SHAFT AND ROCKER ARM

### Rocker Arm Shaft Run-Out




1. Place the rocker arm shaft on a V-block.
2. Use a dial indicator to measure the rocker arm shaft central portion run-out.

If the run-out is very slight, correct the rocker arm shaft run-out with a bench press. The rocker arm must be at cold condition.

If the measured rocker arm shaft run-out exceeds the specified limit, the rocker arm shaft must be replaced.

Rocker Arm Shaft Run-Out mm(in)

Standard	Limit
0.2 (0.008)	0.6 (0.024)

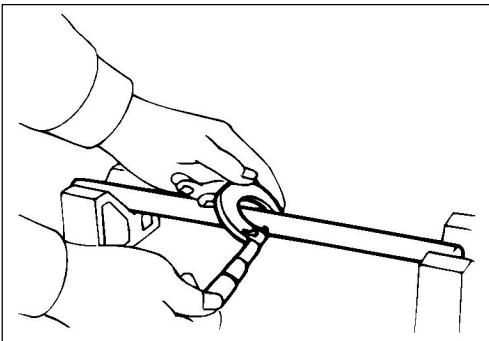

### Rocker Arm Shaft Outside Diameter




Use a micrometer to measure the rocker arm fitting portion outside diameter.

If the measured value is less than the specified limit, the rocker arm shaft must be replaced.

Rocker Arm Shaft Outside Diameter mm(in)

Standard	Limit
18.98 – 19.00 (0.747 – 0.748)	18.85 (0.742)

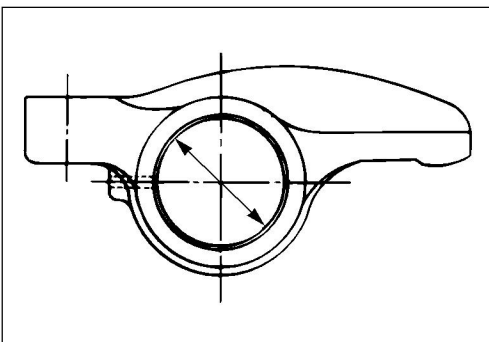

### Rocker Arm Shaft and Rocker Arm Clearance



1. Use either a vernier caliper or a dial indicator to measure the rocker arm bushing inside diameter.

Rocker Arm Bushing Inside Diameter mm(in)

Standard	Limit
19.01 – 19.03 (0.748 – 0.749)	19.05 (0.750)





2. Measure the rocker arm shaft outside diameter.

If the measured value exceeds the specified limit, replace either the rocker arm or the rocker arm shaft.

Rocker Arm and Rocker Arm Shaft Clearance mm(in)


Standard	Limit
0.01 – 0.05 (0.0004 – 0.002)	0.2 (0.008)

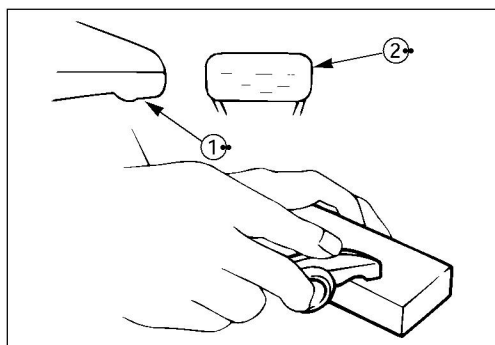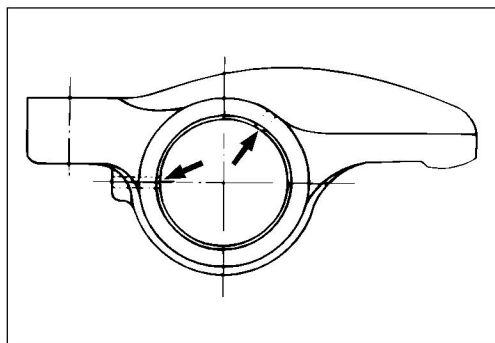

3. Check that the rocker arm oil port is free of obstructions.  
If necessary, use compressed air to clean the rocker arm oil port.

**Rocker Arm Correction**

Inspect the rocker arm valve stem contact surfaces for step wear ① and scoring ② .  
If the contact surfaces have light step wear or scoring, they may be honed with an oil stone.  
If the step wear or scoring is severe, the rocker arm must be replaced.

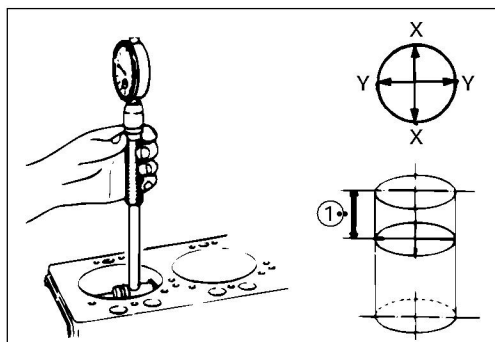

**CYLINDER BODY**

**Cylinder Liner Bore Measurement**



Use a cylinder indicator to measure the cylinder bore at measuring point ① in the thrust X - X and axial Y - Y directions of the crankshaft.


Measuring Point ① : Maximum wear portion  
[11 - 15 mm (0.43 - 0.59 in)]

If the measured value exceeds the specified limit, the cylinder liner must be replaced.

Cylinder Liner Bore		mm(in)
Standard	Limit	
95.421 - 95.460 (3.7567 - 3.7583)	95.5 (3.7598)	

**Note:**

The inside of the dry type cylinder liner is chrome plated. It cannot be rebored or honed.  
If the inside of the cylinder liner is scored or scorched, the cylinder liner must be replaced.

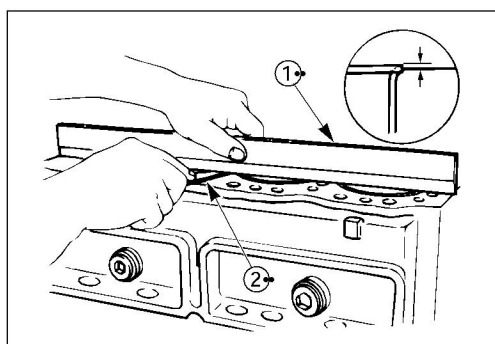


**Cylinder Liner Projection Inspection**



1. Hold a straight edge ① along the top edge of the cylinder liner to be measured.
2. Use a feeler gauge ② to measure each cylinder liner projection.

Cylinder Liner Projection		mm(in)
Standard		
0 - 0.10 (0 - 0.0039)		

The difference in the cylinder liner projection height between any two adjacent cylinders must not exceed 0.03 mm (0.0012 in).

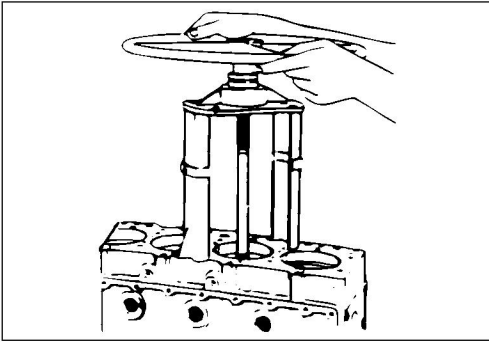

**Cylinder Liner Replacement**

**Cylinder Liner Removal**



1. Remove the cylinder body dowel.
2. Set the cylinder liner remover to the cylinder liner.
3. Check that the remover shaft ankle is firmly gripping the cylinder liner bottom edge.
4. Slowly turn the remover shaft handle counterclockwise to pull the cylinder liner free.




Cylinder Liner Remover Ankle: 5-8840-9058-0

Cylinder Liner Remover: 5-8840-9038-0


**NOTE:**

**Take care not to damage the cylinder body upper during the cylinder liner removal procedure.**

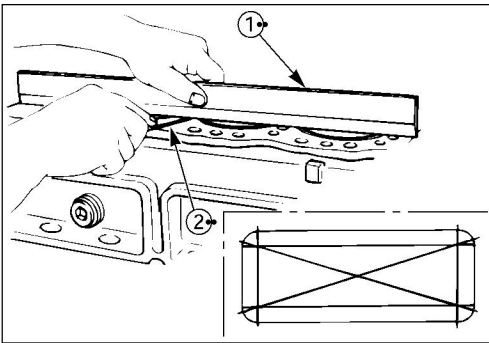

**Cylinder Body Upper Face Warpage**

1. Remove the cylinder body dowel.
2. Remove the cylinder liner.
3. Use a straight edge ① and a feeler gauge ② to measure the four sides and the two diagonals of the cylinder body upper face.

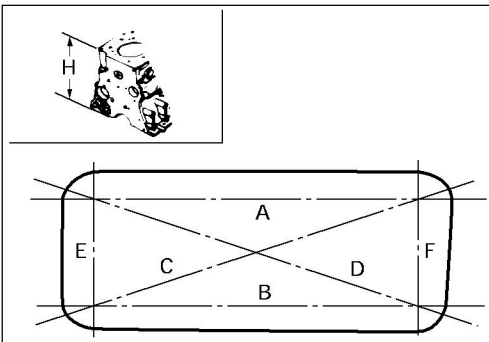

**Cylinder Body Upper Face Warpage** mm(in)


Standard	Limit
0.05 (0.002) or less	0.2 (0.008)

If the measured value is more than the limit, the cylinder body must be replaced.

**Cylinder Body Height (Reference)** mm(in)

Standard
272.945 – 273.105 (10.746 – 10.752)

4. Reinstall the cylinder liner.  
Refer to "Cylinder Body Bore Measurement".
5. Reinstall the cylinder body dowel.

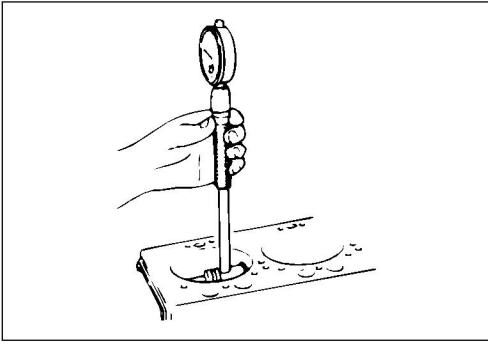


**Cylinder Liner Grade Selection**

Measure the cylinder body inside diameter and select the proper cylinder liner grade number corresponding to the cylinder body inside diameter.

Standard Fitting Interference (Reference)	mm(in)
0.001 – 0.019 (0.00004 – 0.00075)	


If the cylinder liner fitting interference is too small, engine cooling efficiency will be adversely affected.

If the cylinder liner fitting interference is too large, it will be difficult to insert the cylinder liner into the cylinder body.

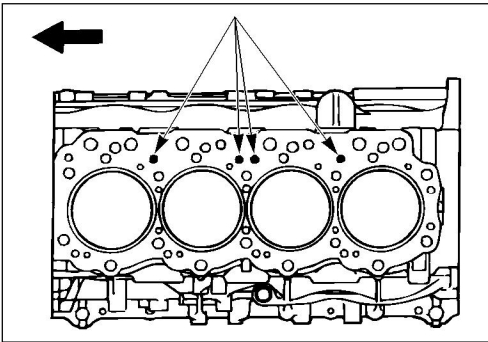

The cylinder block deck has been marked during production to indicate the correct liner sizes. The liner grade (i.e. 1, 2, 3, 4) is indicated in permanent ink.

In the case of a questionable liner marking measure the cylinder body inside diameter.

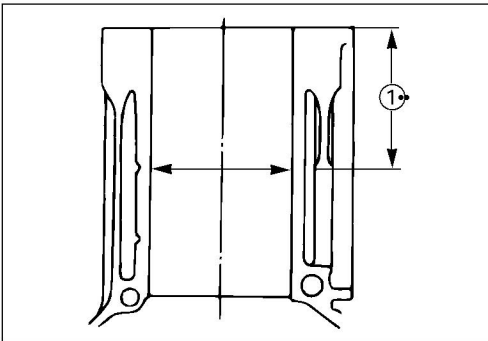


**Cylinder Body Bore Measurement**

1. Take measurements at measuring point ① across positions ("W – W"), ("X – X"), (Y – Y) and (Z – Z).

Measuring Point ① : 98 mm (3.86 in)

2. Calculate the average value of the four measurements to determine the correct cylinder grade.

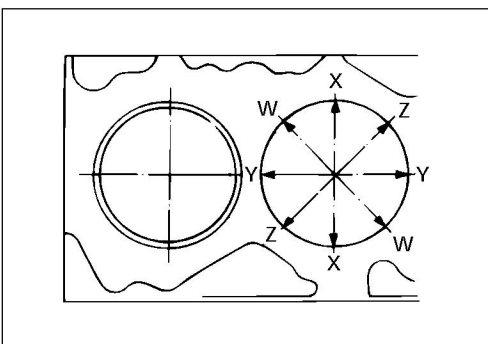

**Cylinder Liner Grade**

Nominal Dimension	Cylinder Body Bore Diameter	Liner Grade
• 97	97.001 – 97.010	1
	97.001 – 97.020	2
	97.021 – 97.030	3
	97.031 – 97.040	4




**Cylinder Liner Installation**




1. Cylinder Liner Installation Using The Special Tool.
  - 1) Use new kerosene or diesel oil to thoroughly clean the cylinder liners and bores.
  - 2) Use compressed air to blow-dry the cylinder liner and bore surfaces.

**Note:**

All foreign material must be carefully removed from the cylinder liner and the cylinder bore before installation.

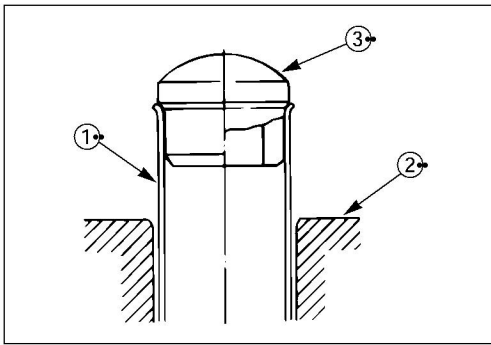

- 3) Insert the cylinder liner ① into the cylinder body ② from the top of the cylinder body.

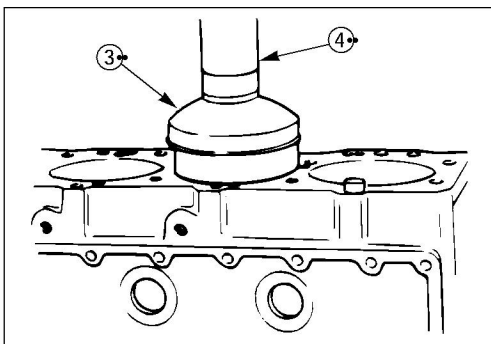

- 4) Set the cylinder liner installer ③ to the top of the cylinder liner.  
Cylinder Liner Installer: 5-8840-2313-0
- 5) Position the cylinder body so that the installer center ③ is directly beneath the bench press shaft center ④.

**Note:**

Check that the cylinder liner is set perpendicular to the bench press and that there is no wobble.

- 6) Use the bench press to apply a seating force of 500 kgf (1,102.5 lb/4,900 N) to the cylinder liner.
- 7) Apply a force of 2,500 kgf (5,512.5 lb/24,500 N) to fully seat the cylinder liner.
- 8) After installing the cylinder liner, measure the cylinder liner projection.  
Refer to "Cylinder Liner Projection Inspection".



2. Cylinder Liner Installation Using Dry Ice

If the cylinder liner is a chrome plated dry type, it is advisable to use dry ice during the installation procedure.

Cooling the cylinder liner with dry ice will cause the cylinder liner to contract, thus making installation easier.

**Note:**

It is important that the cylinder liner be inserted to the cylinder body immediately after it has been cooled.


**WARNING:**

DRY ICE MUST BE USED WITH GREAT CARE. CARELESS HANDLING OF DRY ICE CAN RESULT IN SEVERE FROSTBITE.

**Piston Selection**

Select the same grade number as the one for the cylinder liner inside diameter.

Grade of cylinder inside diameter	Grade of piston	Combination
AX	AX	OK
CX	CX	OK
AX	CX	NG
CX	AX	NG

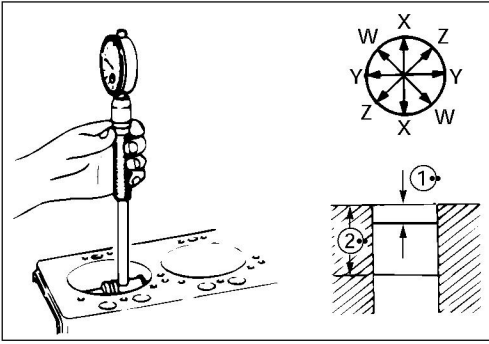

**Piston Grade Selection**

Measure the cylinder liner bore. Then select the appropriate piston grade for the installed cylinder liner.

1. Measure the cylinder liner bore.

There are two measuring points ( ① and ② ).

Measure the cylinder liner bore in four different direction (W – W, X – X, and Z – Z) at both measuring points.

Calculate the average value of the eight measurements to determine the correct cylinder liner bore.

Measuring Points ① : 20 mm (0.79 in)


② : 160 mm (6.30 in)

Cylinder Liner Bore	mm(in)
Standard	Limit
95.421 – 95.460 (3.7567 – 3.7583)	95.5 (3.7598)

Relation between Liner Bore and Piston Grade	mm(in)
Liner Bore Diameter	Piston Grade
95.421 – 95.440 (3.7567 – 3.7575)	AX
95.441 – 95.460 (3.7575 – 3.7583)	CX

**Note:**

It is most important that the correct piston grade be used. Failure to select the correct piston grade will result in engine failure.

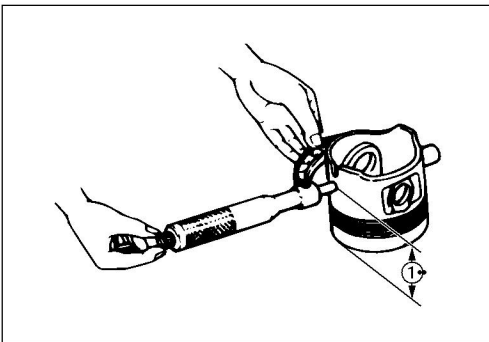

2. Measure the piston outside diameter.


Piston Measuring Point ① : 71 mm (2.79 in)

Piston Outside Diameter	mm(in)
Outside Diameter	Piston Grade for Service
95.365 – 95.384 (3.7545 – 3.7553)	AX
95.385 – 95.404 (3.7553 – 3.7561)	CX

Cylinder Liner and Piston Clearance	mm(in)
0.037 – 0.075 (0.0015 – 0.0030)	

**Note:**

:Cylinder liner kit clearances are preset. However, the cylinder liner installation procedure may result in slight decreases in cylinder liner clearances. Always measure the cylinder liner clearance after installation to be sure that it is correct.

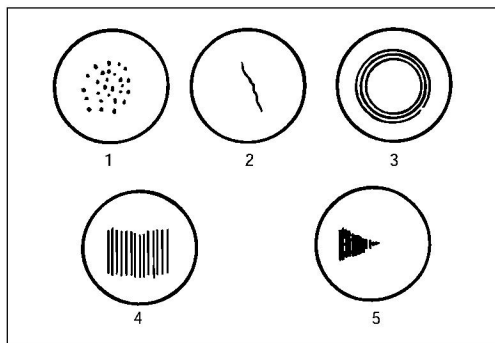

### TAPPET AND PUSH ROD


Visually inspect the tappet camshaft contact surfaces for pitting, cracking, and other abnormal conditions. The tappet must be replaced if any of these conditions are present.

Refer to the illustration at the left.

- 1 Pitting
- 2 Cracking
- 3 Normal contact
- 4 Irregular contact
- 5 Irregular contact

**Note:**

The tappet surfaces are spherical. Do not attempt to grind them with an oil stone or similar tool in an effort to repair the tappet. If the tappet is damaged, it must be replaced.

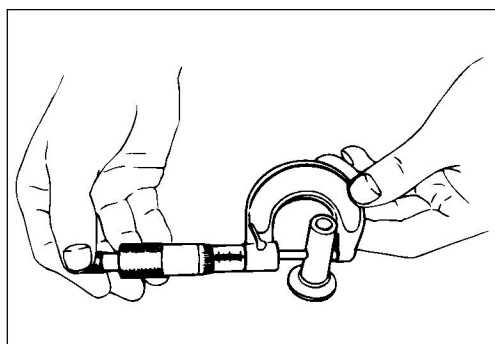


#### Tappet Outside Diameter



Measure the tappet outside diameter with a micrometer. If the measured value is less than the specified limit, the tappet must be replaced.


Tappet Outside Diameter		mm(in)
Standard	Limit	
12.97 – 12.99 (0.5106 – 0.5114)	12.95 (0.5098)	



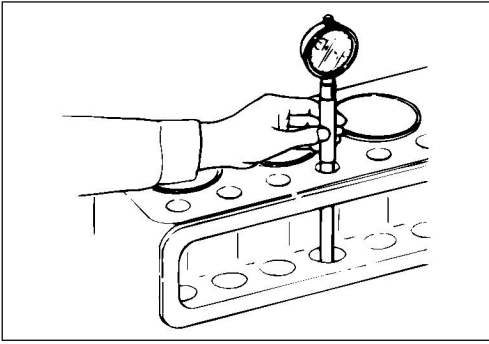

Tappet and Cylinder Body Clearance mm(in)

Standard	Limit
0.03 (0.0012)	0.1 (0.0039)

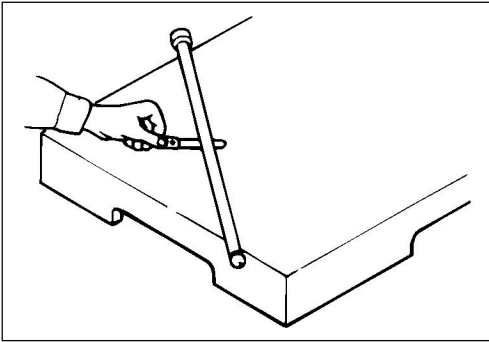

**Push Rod Curvature**

1. Lay the push rod on a surface plate.
2. Roll the push rod along the surface plate and measure the push rod curvature with a thickness gauge.  
If the measured value exceeds the specified limit, the push rod must be replaced.


Push Rod Curvature mm(in)

Limit
0.3 (0.012)

3. Visually inspect both ends of the push rod for excessive wear and damage. The push rod must be replaced if these conditions are discovered during inspection.

**CAMSHAFT**

Visually inspect the journals, the cams, the oil pump drive gear, and the camshaft bearings for excessive wear and damage. The camshaft and the camshaft bearings must be replaced if these conditions are discovered during inspection.

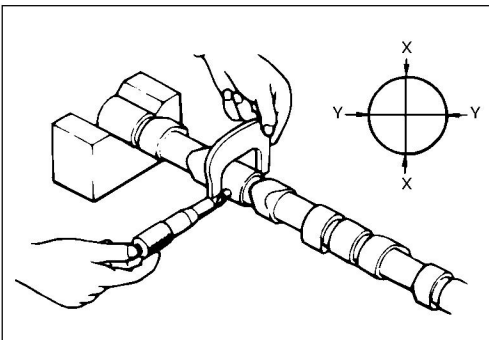


**Camshaft Journal Diameter**

Use a micrometer to measure each camshaft journal diameter in two directions ((X - X) and (Y - Y)). If the measured value is less than the specified limit, the camshaft must be replaced.

Camshaft Journal Diameter mm(in)

Standard	Limit
49.945 - 49.975 (1.9663 - 1.9675)	49.60 (1.953)

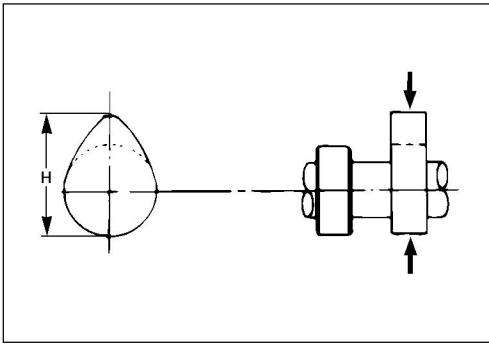


### Cam Height

Measure the cam height (H) with a micrometer. If the measured value is less than the specified limit, the camshaft must be replaced.

Cam Height (H) mm(in)

Standard	Limit
42.02 (1.65)	41.65 (1.64)

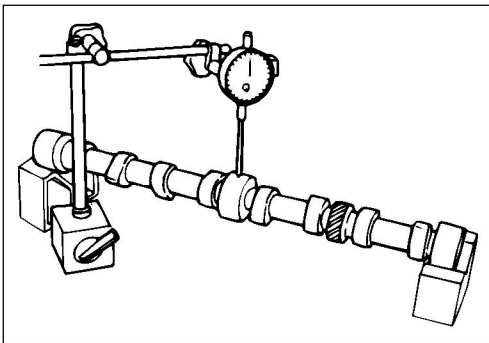


### Camshaft Run-Out

1. Mount the camshaft on V-blocks.
2. Measure the run-out with a dial indicator.

If the measured value exceeds the specified limit, the camshaft must be replaced.

Camshaft Run-Out mm(in)

Standard	Limit
0.02 (0.0008)	0.10 (0.004)

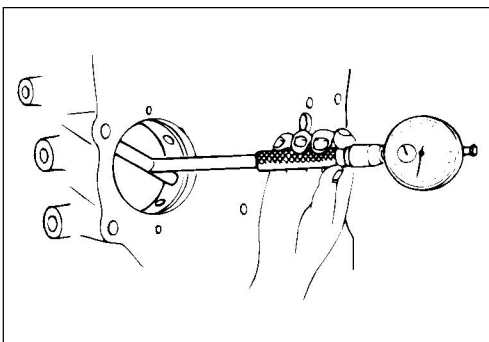

### Camshaft and Camshaft Bearing

Use an inside dial indicator to measure the camshaft bearing inside diameter.


Camshaft Bearing Inside Diameter mm(in)

Standard	Limit
50.0 – 50.03 (1.9685 – 1.9697)	50.08 (1.9716)

If the clearance between the camshaft bearing inside diameter and the journal exceeds the specified limit, the camshaft bearing must be replaced.

Camshaft Bearing Clearance mm(in)

Standard	Limit
0.025 – 0.085 (0.0010 – 0.033)	0.12 (0.005)

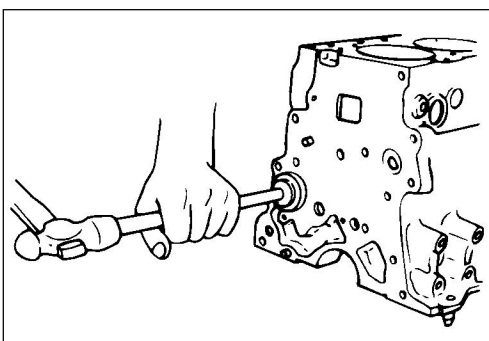


### Camshaft Bearing Replacement



#### Camshaft Bearing Removal

1. Remove the cylinder body plug plate.
2. Use the camshaft bearing replacer to remove the camshaft bearing.

Bearing Replacer: 5-8840-2038-0

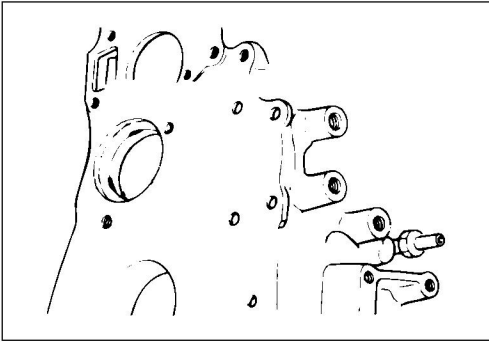


**Camshaft Bearing Installation**

1. Align the bearing oil holes with the cylinder body oil holes.
2. Use the camshaft bearing replacer installer to install the camshaft bearing.



Bearing Replacer: 5-8840-2038-0

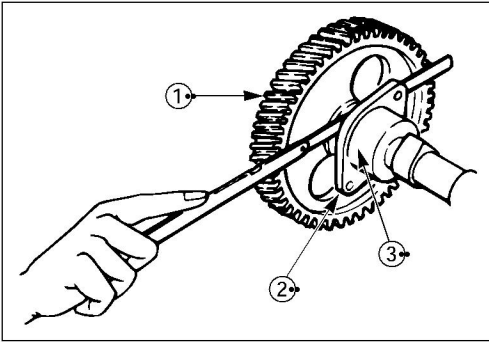


**Camshaft End Play**

1. Before removing the camshaft gear ①, push the thrust plate ② as far as it will go toward the camshaft gear ③.
2. Use a feeler gauge to measure the clearance between the thrust plate and the camshaft journal. If the measured value exceeds the specified limit, the thrust plate must be replaced.

Camshaft End Play mm(in)


Standard	Limit
0.050 – 0.114 (0.002 – 0.0045)	0.2 (0.008)

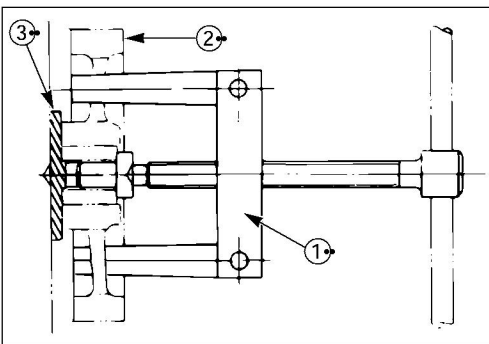

**Thrust Plate Replacement**

**Thrust Plate Removal**

1. Use the universal puller ① to remove the camshaft timing gear ② .  
Universal Puller: 5-8840-0086-0
2. Remove the thrust plate ③ .

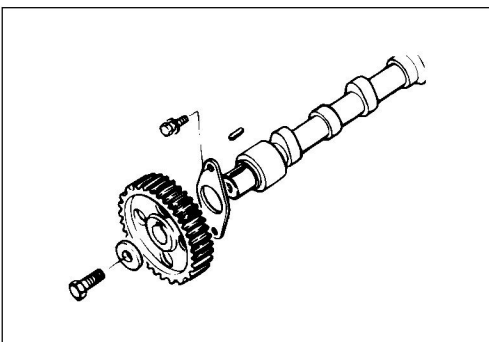

**Thrust Plate Installation**

1. Install the thrust plate.
2. Apply engine oil to the bolt setting face and the bolt threads.
3. Install the camshaft gear.



Camshaft Gear Torque N·m(kgf·m/lb.ft)

98 – 118 (10 – 12/72 – 87)
----------------------------

## CRANKSHAFT AND BEARING


Inspect the surface of the crankshaft journals and crankpins for excessive wear and damage.

Inspect the oil seal fitting surfaces for excessive wear and damage.

Inspect the oil ports for obstructions.

### Note:

To increase crankshaft strength, tufftriding (Nitriding Treatment) has been applied. Because of this, it is not possible to regrind the crankshaft surfaces.

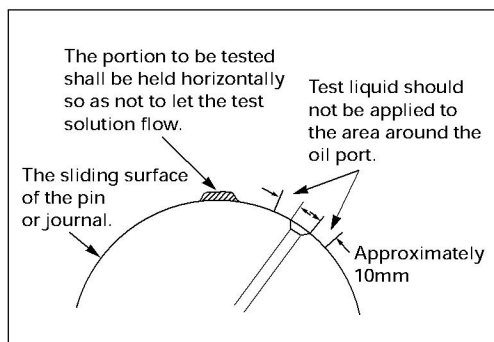

### Crankshaft Tufftriding Inspection

1. Use an organic cleaner to thoroughly clean the crankshaft. There must be no traces of oil on the surfaces to be inspected.
2. Prepare a 5 – 10% solution of ammonium cuprous chloride (dissolved in distilled water).
3. Use a syringe to apply the solution to the surface to be inspected.

Hold the surface to be inspected perfectly horizontal to prevent the solution from running.

### Note:

Do not allow the solution to come in contact with the oil ports and their surrounding area.


### Judgment

1. Wait for thirty to forty seconds.
  - If there is no discoloration after thirty or forty seconds, the crankshaft is usable.
  - If discoloration appears (the surface being tested will become the color of copper), the crankshaft must be replaced.
2. Steam clean the crankshaft surface immediately after completing the test.



### Note:

The ammonium cuprous chloride solution is highly corrosive. Because of this, it is imperative that the surfaces being tested be cleaned immediately after completing the test.

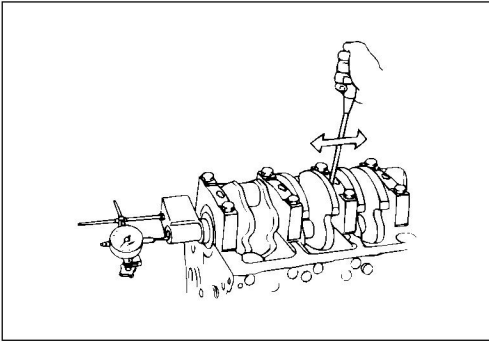


**Crankshaft Thrust Clearance**

Set the dial indicator as shown in the illustration and measure the crankshaft thrust clearance.  
If the thrust clearance exceeds the specified limit, replace the thrust bearing as a set.

mm(in)

Standard	Limit
0.10 (0.0039)	0.30 (0.0118)

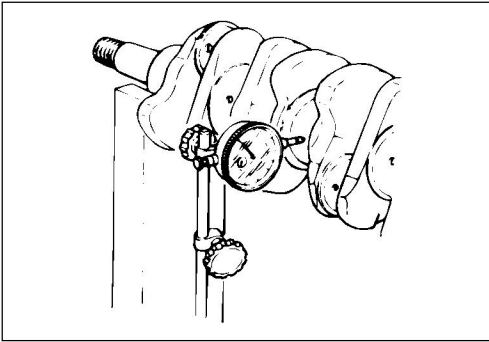


**Crankshaft Run-Out**



1. Set a dial indicator to the center of the crankshaft journal.
2. Gently turn the crankshaft in the normal direction of rotation.  
Read the dial indicator as you turn the crankshaft.  
If the measured value exceeds the specified limit, the crankshaft must be replaced.


Crankshaft Run-Out mm(in)

Standard	Limit
0.05 (0.002) or less	0.08 (0.0031)

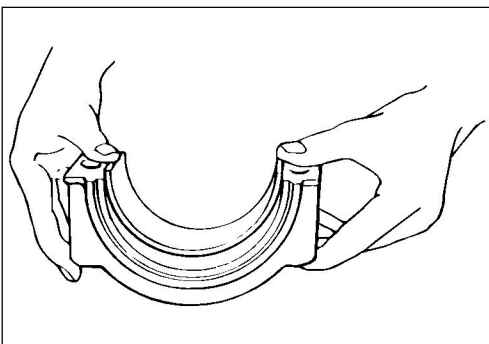

**Bearing Tension**

Check to see if the bearing has enough tension, so that a good finger pressure is needed to fit the bearing into position.

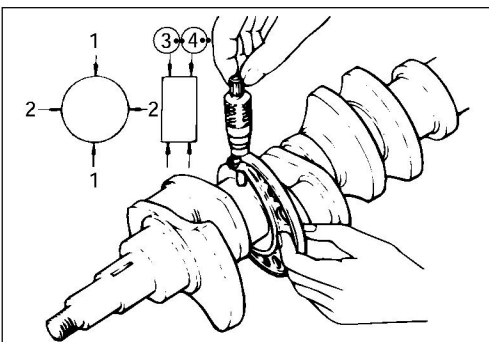

**Crankshaft Journal and Crankpin Diameter**

1. Use a micrometer to measure the crankshaft journal diameter across points ("1 - 1") and ("2 - 2").
2. Use the micrometer to measure the crankshaft journal diameter at the two points ( ③ and ④ ).
3. Repeat Steps 1 and 2 to measure the crankpin diameter.

If the measured values are less than the limit, the crankshaft must be replaced.

Crankshaft Journal Diameter mm(in)


Standard	Limit
69.917 – 69.932 (2.7526 – 2.7531)	69.910 (2.7524)

Crankpin Diameter mm(in)

Standard	Limit
52.915 – 52.930 (2.0833 – 2.0839)	52.906 (2.0829)

Crankshaft Journal and Crankpin Uneven Wear mm(in)

Standard	Limit
0.05 (0.002) or less	0.08 (0.0031)

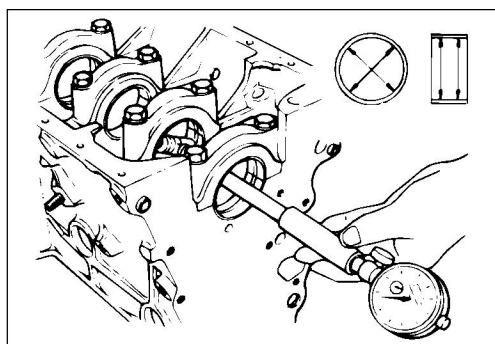

**Crankshaft Journal and Bearing Clearance**

If the clearance between the measured bearing inside diameter and the crankshaft journal diameter exceeds the specified limit, the bearing and/or the crankshaft must be replaced.

Crankshaft Bearing Cap Bolt Torque N·m(kgf·m/lb.ft)


157 – 177 (16 – 18/116 – 130)
-------------------------------



**Crankshaft brg' cap Bolt Torque**

Crankshaft Journal and Bearing Clearance mm(in)

Standard	Limit
0.031 – 0.063 (0.0012 – 0.0025)	0.11 (0.0043)

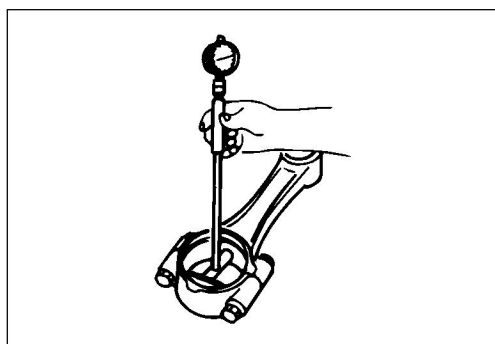

**Connecting Rod Bearing Inside Diameter**

1. Install the bearing to the connecting rod big end.
2. Tighten the bearing cap to the specified torque.

Connecting Rod Bearing Cap Bolt Torque N·m(kgf·m/lb.ft)

27 – 31 (2.8 – 3.2/20 – 23)• 45° – 60°
--



3. Use a inside dial indicator to measure the connecting rod bearing inside diameter.




**Crankpin and Bearing Clearance**

If the clearance between the measured bearing inside diameter and the crankpin exceeds the specified limit, the bearing and/or the crankshaft must be replaced.

Crankpin and Bearing Clearance mm(in)

Standard	Limit
0.029 – 0.066 (0.0011 – 0.0026)	0.10 (0.0039)

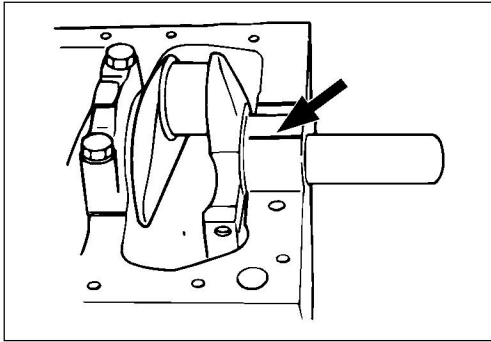


**Clearance Measurements (With Plastigage)**

**Crankshaft Journal and Bearing Clearance**



1. Clean the cylinder body, the journal bearing fitting surface, the bearing caps, and the bearings.
2. Install the bearings to the cylinder body.
3. Carefully place the crankshaft on the bearings.
4. Rotate the crankshaft approximately 30° to seat the bearing.
5. Place the Plastigage (arrow) over the crankshaft journal across the full width of the bearing.
6. Install the bearing caps with the bearing.

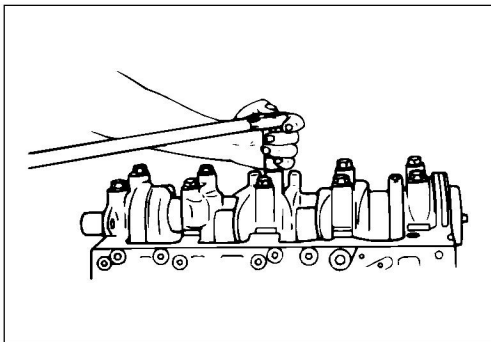

7. Tighten the bearing caps to the specified torque.


**Crankshaft Bearing Cap Bolt**

Torque N·m(kgf·m/lb.ft)

157 – 177 (16 – 18/116 – 130)
-------------------------------

Do not allow the crankshaft to turn during bearing cap installation and tightening.

8. Remove the bearing cap.

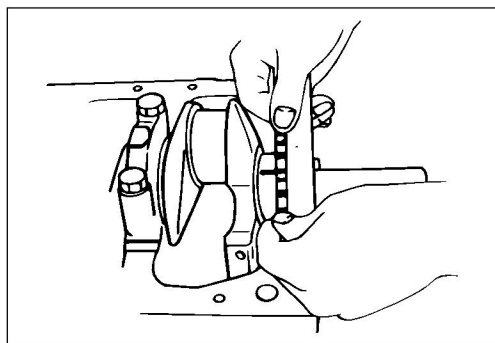

9. Compare the width of the Plastigage attached to either the crankshaft or the bearing against the scale printed on the Plastigage container.

If the measured value exceeds the limit, perform the following additional steps.



- 1) Use a micrometer to measure the crankshaft outside diameter.



- 2) Use an inside dial indicator to measure the bearing inside diameter.

If the crankshaft journal and bearing clearance exceeds the limit, the crankshaft and/or the bearing must be replaced.

Crankshaft Journal and Bearing Clearance mm(in)

Standard	Limit
0.031 – 0.063 (0.0012 – 0.0025)	0.11 (0.0043)

Crankpin and Bearing Clearance

1. Clean the crankshaft, the connecting rod, the bearing cap, and the bearings.
2. Install the bearing to the connecting rod and the bearing cap.

Do not allow the crankshaft to move when installing the bearing cap.

3. Prevent the connecting rod from moving.
4. Attach the Plastigage to the crankpin.  
Apply engine oil to the Plastigage to keep it from falling.



5. Install the bearing cap and tighten it to the specified torque.

Do not allow the connecting rod to move when installing and tightening the bearing cap.

Connecting Rod Bearing Cap Bolt

Torque N·m(kgf·m/lb.ft)

27 – 31 (2.8 – 3.2/20 – 23)• 45° – 60°
--

6. Remove the bearing cap.
7. Compare the width of the Plastigage attached to either the crankshaft or the bearing against the scale printed on the Plastigage container.

If the measured value exceeds the specified limit, perform the following additional steps.



- 1) Use a micrometer to measure the crankpin outside diameter.



- 2) Use an inside dial indicator to measure the bearing inside diameter.





If the crankpin and bearing clearance exceeds the specified limit, the crankshaft and/or the bearing must be replaced.

Crankpin and Bearing Clearance mm(in)

Standard	Limit
0.029 – 0.066 (0.0011 – 0.0026)	0.10 (0.0039)




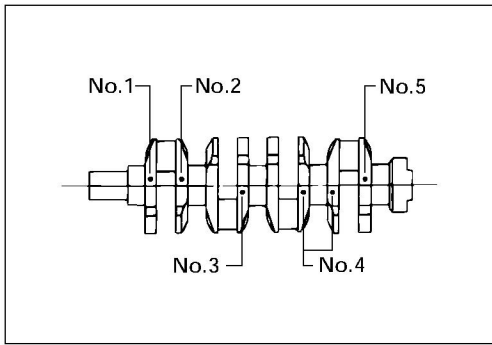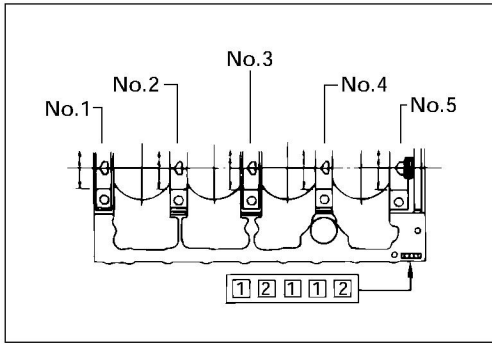

**CRANKSHAFT BEARING SELECTION**

When installing new crankshaft bearings or replacing old bearings, refer to the selection table below. Select and install the new crankshaft bearings, paying close attention to the cylinder body journal hole diameter size mark and the crankshaft journal diameter size mark.

Main Bearing Bore Diameter mm(in.)		Crankshaft Main Journal Diameter mm(in.)		Crankshaft Bearing Size Mark	Oil Clearance mm (in.)
Size Mark	Inside Diameter	Size Mark	Outside Diameter		
1	73.987 ~ 74.000 (2.9129 ~ 2.9134)	1 or -	69.927 ~ 69.932 (2.7530 ~ 2.7532)	Black	0.035 ~ 0.061 (0.0014 ~ 0.0024)
		2 or --	69.922 ~ 69.927 (2.7528 ~ 2.7530)	Blue	0.032 ~ 0.058 (0.0013 ~ 0.0023)
		3 or ---	69.917 ~ 69.922 (2.7526 ~ 2.7528)		0.037 ~ 0.063 (0.0015 ~ 0.0025)
2	73.975 ~ 73.987 (2.9124 ~ 2.9129)	1 or -	69.927 ~ 69.932 (2.7530 ~ 2.7532)	Green	0.031 ~ 0.056 (0.0012 ~ 0.0022)
		2 or --	69.922 ~ 69.927 (2.7528 ~ 2.7530)		0.036 ~ 0.048 (0.0014 ~ 0.0019)
		3 or ---	69.917 ~ 69.922 (2.7526 ~ 2.7528)	Black	0.033 ~ 0.058 (0.0013 ~ 0.0023)

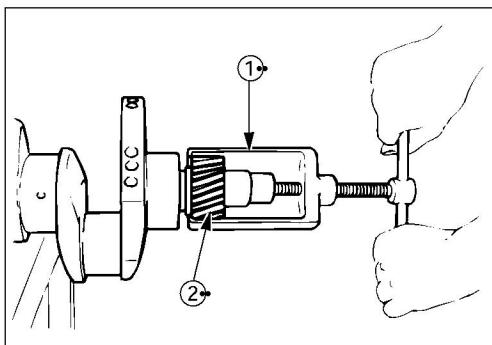

**Crankshaft Timing Gear Replacement**

**Crankshaft Timing Gear Removal**




1. Use the crankshaft gear remover ① to remove the crankshaft gear ② .



2. Remove the crankshaft feather key.

Crankshaft Timing Gear Remover: 9-8840-2057-0

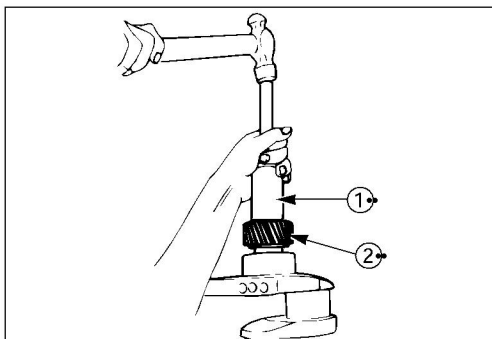

**Crankshaft Timing Gear Installation**



1. Install the crankshaft gear.



2. Use the crankshaft gear installer ① to install the crankshaft gear ② .




The crankshaft gear timing mark ("X - X") must be facing outward.

Crankshaft Gear Installer: 9-8522-0020-0

## CRANKSHAFT PILOT BEARING

Check the crankshaft pilot bearing for excessive wear and damage and replace it if necessary.

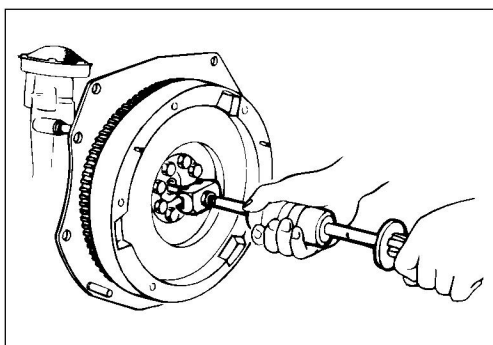

### Crankshaft Pilot Bearing Replacement


#### Crankshaft Pilot Bearing Removal

Use the pilot bearing remover to remove the pilot bearing.



Pilot Bearing Remover: 5-8840-2000-0

Sliding Hammer: 5-8840-0019-0

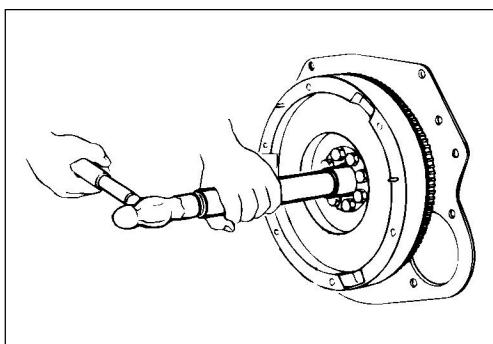

#### Crankshaft Pilot Bearing Installation


1. Place the crankshaft pilot bearing horizontally across the crankshaft bearing installation hole.
2. Tap around the edges of the crankshaft pilot bearing outer races with a brass hammer to drive the bearing into the crankshaft bearing installation hole.



Pilot Bearing Installer: 5-8522-0024-0

#### Note:

Strike only the crankshaft pilot bearing outer races with the hammer. Do not strike the bearing inner races. Bearing damage and reduced bearing service life will result.

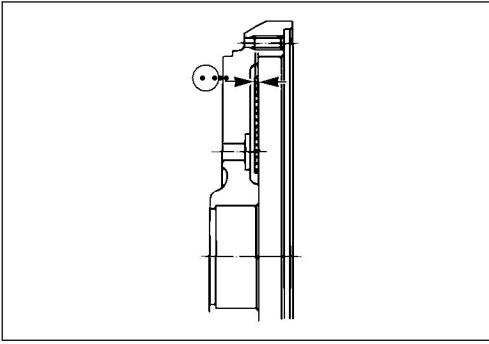

## FLYWHEEL AND RING GEAR

### Flywheel

1. Inspect the flywheel friction surface for excessive wear and heat cracks.
2. Measure the flywheel friction surface wear amount (depth)

The flywheel friction surface area actually making contact with the clutch driven plate (the shaded area in the illustration) will be smaller than the original machined surface area.

There will be a ridge on the flywheel surface area. Be sure to measure the surface wear in the area inside the ridge.

If the measured value is between the standard and the specified limit, the flywheel may be reground.

If the measured value exceeds the specified limit, the flywheel must be replaced.

Flywheel Friction Surface Depth ①	mm(in)
Limit	
1.0 (0.04) or more	


### Note:

Because a ridge is produced at the flywheel friction surface as illustrated, do not measure the friction surface wear amount at the non-ridge area but be sure to measure it at the rear-friction surface which is shown in the illustration by shaded area.

### Ring Gear

Inspect the ring gear.


If the ring gear teeth are broken or excessively worn, the ring gear must be replaced.

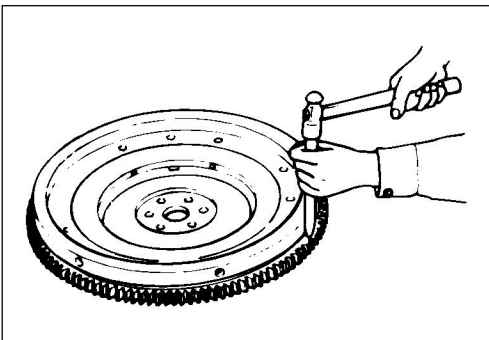

### Ring Gear Replacement

### Ring Gear Removal

Strike around the edges of the ring gear with a hammer and diesel to remove it.

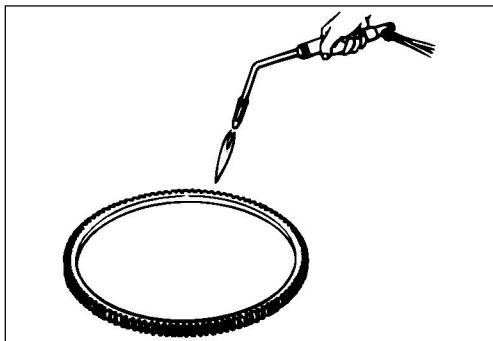

### Ring Gear Installation

1. Heat the ring gear evenly with a gas burner to invite thermal expansion.  
Do not allow the temperature of the gas burner to exceed 200°C (390°F).
2. Install the ring gear when it is sufficiently heated.  
The ring gear must be installed with the chamfer facing the clutch.

#### Note:


Another method of heating the ring gear to invite thermal expansion is to soak a rag in diesel fuel, wrap the diesel fuel soaked rag around the rim of the ring gear, and then light the rag.

## PISTON

### Piston Grade Selection and Cylinder Liner Bore Measurement



Refer to the Section "CYLINDER BODY", Item "Cylinder Liner Bore Measurement" for details on piston grade selection and cylinder or liner bore measurement.

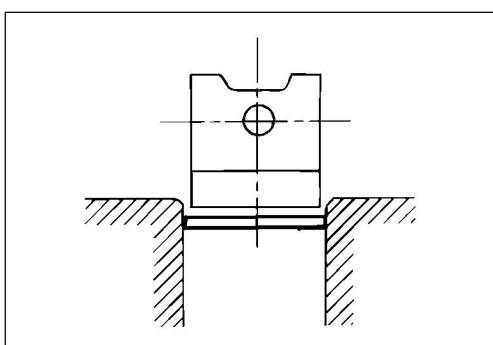

## PISTON RING

### Piston Ring Gap


1. Insert the piston ring horizontally into the cylinder liner.
2. Use a piston inserted upside down to push the piston ring into the cylinder liner until it reaches either measuring point ① or measuring point ②. Cylinder liner diameter is the smallest at these two points.

Do not allow the piston ring to slant to one side or the other. It must be perfectly horizontal.


3. Use a feeler gauge to measure the piston ring gap.

Measuring Point ① : 10 mm (0.39 in) or  
Measuring Point ② : 120 mm (4.72 in)

If the piston ring gap exceeds the specified limit, the piston ring must be replaced.

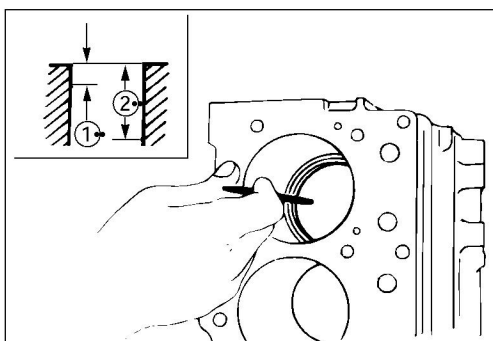

Piston Ring Gap		mm(in)
	Standard	Limit
1st Compression Ring	0.2 – 0.35 (0.008 – 0.014)	1.5 (0.059)
2nd Compression Ring	0.37 – 0.52 (0.015 – 0.020)	
Oil Ring	0.2 – 0.4 (0.008 – 0.016)	

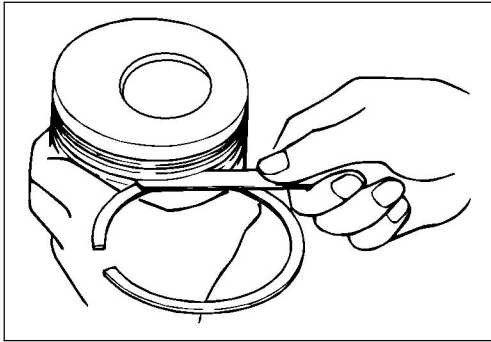

**Piston Ring and Piston Ring Groove Clearance**




Use a feeler gauge to measure the clearance between the piston ring and the piston ring groove at several points around the piston.

If the clearance between the piston ring and the piston ring groove exceeds the specified limit, the piston ring must be replaced.

Piston Ring and Piston Ring Groove Clearance		mm(in)
	Standard	Limit
1st Compression Ring	0.09 – 0.130 (0.0035 – 0.0051)	0.15 (0.006)
2nd Compression Ring	0.05 – 0.090 (0.002 – 0.0035)	
Oil Ring	0.03 – 0.07 (0.0012 – 0.0028)	



Visually inspect the piston. If a piston ring groove is damaged or distorted, the piston must be replaced.

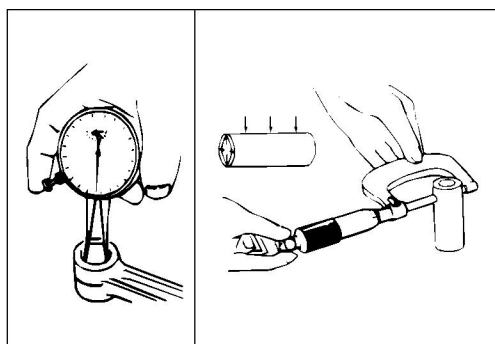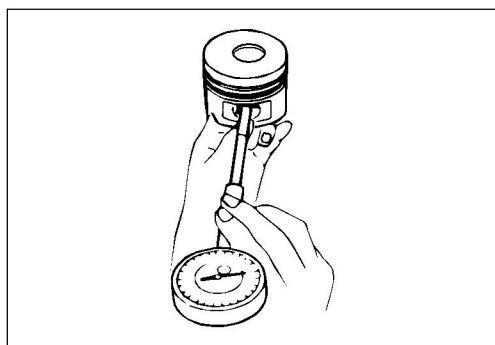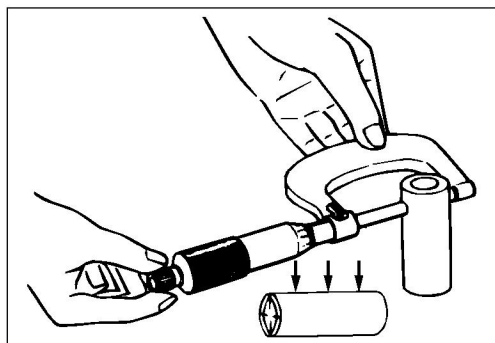

## PISTON PIN

### Piston Pin Diameter



Use a micrometer to measure the piston pin outside diameter at several points. If the measured value is less than the specified limit, the piston pin must be replaced.

Piston Pin Diameter		mm(in)
Standard	Limit	
33.995 – 34.000 (1.3384 – 1.3386)	33.97 (1.3374)	

### Piston Pin and Piston Clearance



Use an inside dial indicator to measure the piston pin hole (in the piston).

Piston Pin Hole		mm(in)
Standard		
34.004 – 34.012 (1.3387 – 1.3391)		

Piston Pin and Piston Pin Hole Clearance		mm(in)
0.004 – 0.017 (0.0002 – 0.0007)		

### Piston Pin and Connecting Rod Small End Bushing Clearance



Use a caliper calibrator and a dial indicator to measure the piston pin and connecting rod small end bushing clearance.

If the clearance between the piston pin and the connecting rod small end bushing exceeds the specified limit, replace the piston pin and/or the connecting rod bushing.

Piston Pin and Connecting Rod Small End Bushing Clearance		mm(in)
Standard	Limit	
0.008 – 0.020 (0.0003 – 0.0008)	0.05 (0.002)	

## Connecting Rod Bushing Replacement

### Connecting Rod Bushing Removal




1. Clamp the connecting rod in a vise.



2. Use the connecting rod bushing remover to remove the connecting rod bushing.

Connecting Rod Bushing Replacer

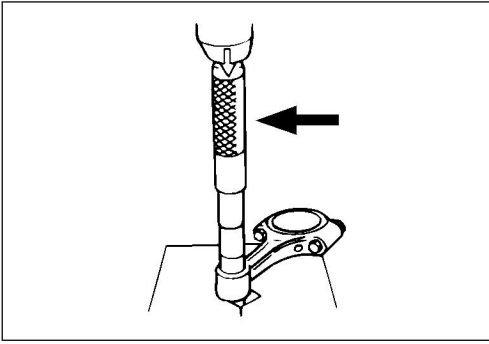


**Connecting Rod Bushing Installation**

1. Clamp the connecting rod in a vice.
2. Use the connecting rod bushing installer to install the connecting rod bushing.




Connecting Rod Bushing Replacer:

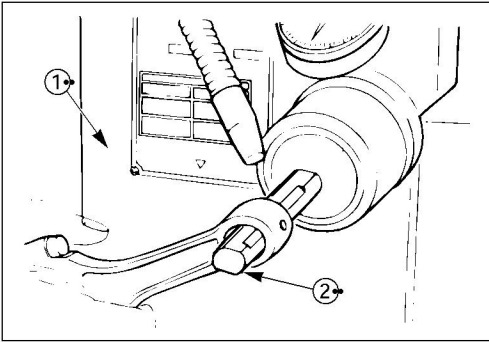

3. Use a piston pin hole grinder ① fitted with a reamer ② to ream the piston pin hole.

Inner Diameter of Small End Bushing mm(in)

Standard
34.008 – 34.015 (1.3389 – 1.3392)

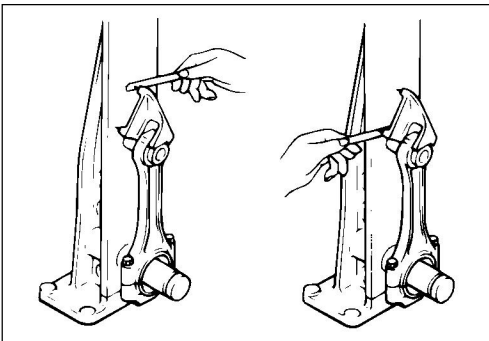

**CONNECTING ROD**

**Connecting Rod Alignment**


Use a connecting rod aligner to measure the distortion and the parallelism between the connecting rod big end hole and the connecting rod small end hole.

If either the measured distortion or parallelism exceed the specified limit, the connecting rod must be replaced.

Connecting Rod Alignment

Per Length of 100 mm (3.94 in) mm(in)

	Standard	Limit
Distortion	0.05 or Less (0.002)	0.20 (0.008)
Parallelism		0.15 (0.006)

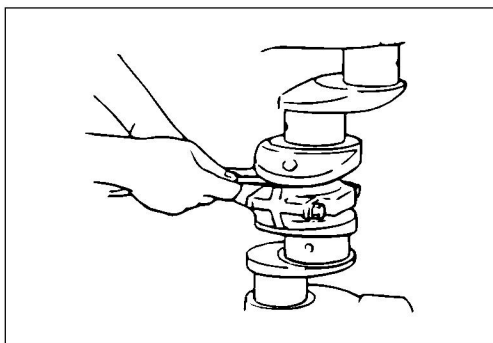


### Connecting Rod Side Face Clearance

1. Install the connecting rod to the crankpin.
2. Use a feeler gauge to measure the clearance between the connecting rod big end side face and the crankpin side face.

If the measured value exceeds the specified limit, the connecting rod must be replaced.

Connecting Rod and Crankpin Side Face Clearance

		mm(in)
Standard		Limit
0.175 – 0.290 (0.0069 – 0.0114)		0.35 (0.014)

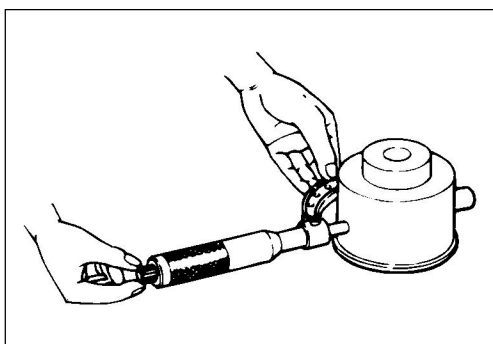

### IDLER GEAR SHAFT AND IDLER GEAR

#### Idler Gear Shaft Outside Diameter


Use a micrometer to measure the idler gear shaft outside diameter.

If the measured value is less than the specified limit, the idler gear must be replaced.

Idler Gear Shaft Outside Diameter

		mm(in)
Standard		Limit
44.95 – 44.98 (1.770 – 1.771)		44.90 (1.767)



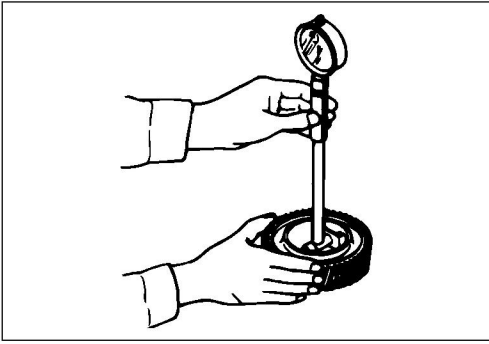

**Idler Gear "A" Inside Diameter**

1. Use an inside dial indicator to measure the idler gear


Idler Gear Inside Diameter mm(in)

Standard	Limit
45.0 – 45.03 (1.7717 – 1.7728)	45.10 (1.7756)

If the clearance between the idler gear shaft outside diameter and the idler gear inside diameter exceeds the limit, the idler gear must be replaced.

Idler Gear Shaft and Idler Gear Clearance mm(in)

Standard	Limit
0.025 – 0.085 (0.0010 – 0.0033)	0.2 (0.008)

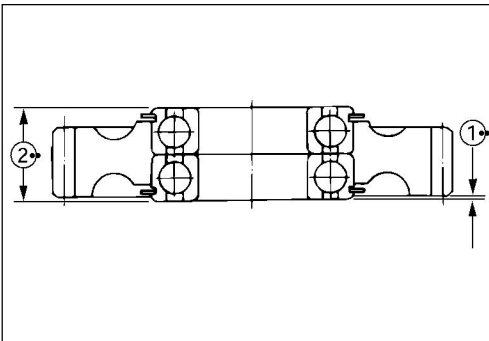

**Idler Gear "B"**

**Bearing replacement**

Use a suitable bar and a bench press or hammer.


Bearing projection amount should be within the specified height.

mm(in)

Projection	①	0.4 – 0.6 (0.016 – 0.024)
Height	②	23.7 – 24.0 (0.933 – 0.945)

**TIMING GEAR CASE COVER**

Replace the crankshaft front oil seal if it is excessively worn or damaged.

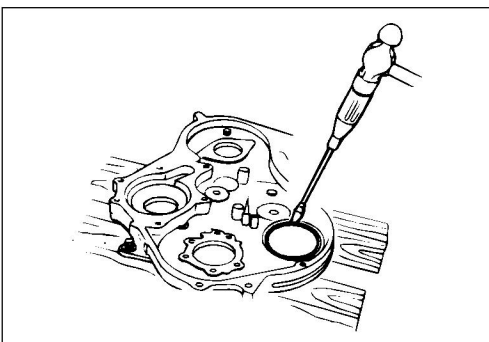


**Crankshaft Front Oil Seal Replacement**

**Oil Seal Removal**

Use a plastic hammer and a screwdriver to tap around the oil seal to free it from the gear case.

Take care not to damage the oil seal fitting surfaces.

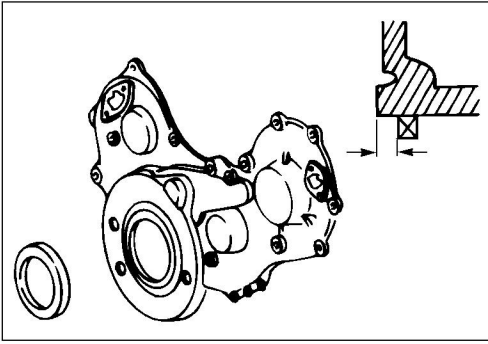

### Oil Seal Installation

1. Apply a coat of engine oil to the oil seal lip circumference.
2. Use the oil seal installer and the installer grip to insert the oil seal 1 mm (0.039 in) into the front portion of the timing gear case.

Oil Seal Installer: 5-8840-2061-0

---

# MEMO

A series of horizontal dotted lines for writing.

**SECTION 5**  
**ENGINE ASSEMBLY ( 3 )**

**TABLE OF CONTENTS**


<b>ITEM</b>	<b>PAGE</b>
Reassembly.....	82



## REASSEMBLY

### SINGLE UNIT

#### ROCKER ARM SHAFT AND ROCKER ARM

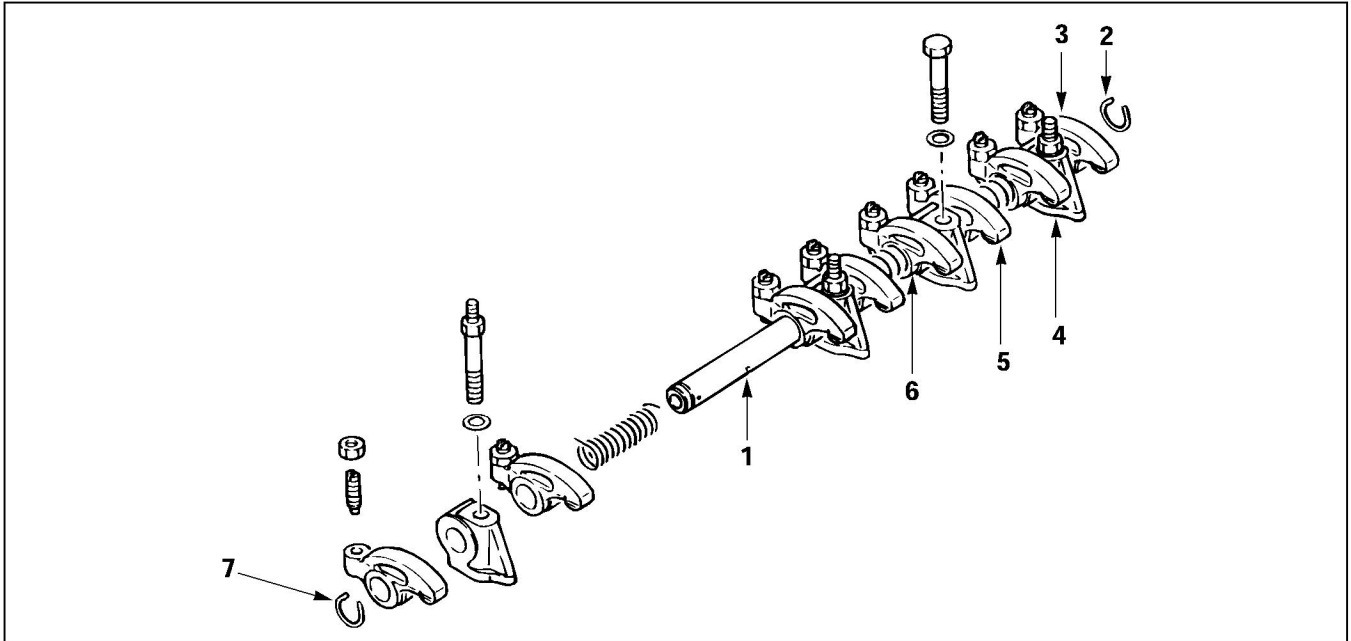


#### Reassembly Steps

- ▲ 1. Rocker arm shaft
- 2. Rocker arm shaft snap ring
- 3. Rocker arm
- 4. Rocker arm shaft bracket
- 5. Rocker arm
- 6. Rocker arm shaft spring
- 7. Rocker arm shaft snap ring




## Important Operations

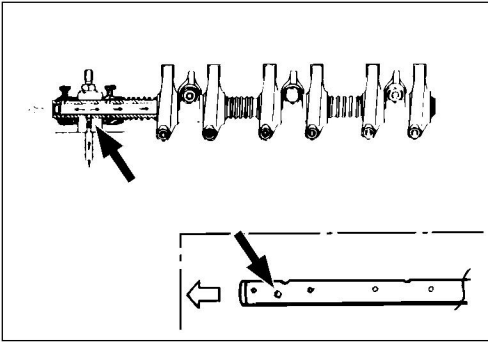

### 1. Rocker Arm Shaft

- 1) Position the rocker arm shaft with the large oil hole (Dia. 4 mm (0.157 in)) facing the front of the engine.
- 2) Install the rocker arm shaft together with the rocker arm, the rocker arm shaft bracket, and the spring.

CYLINDER HEAD

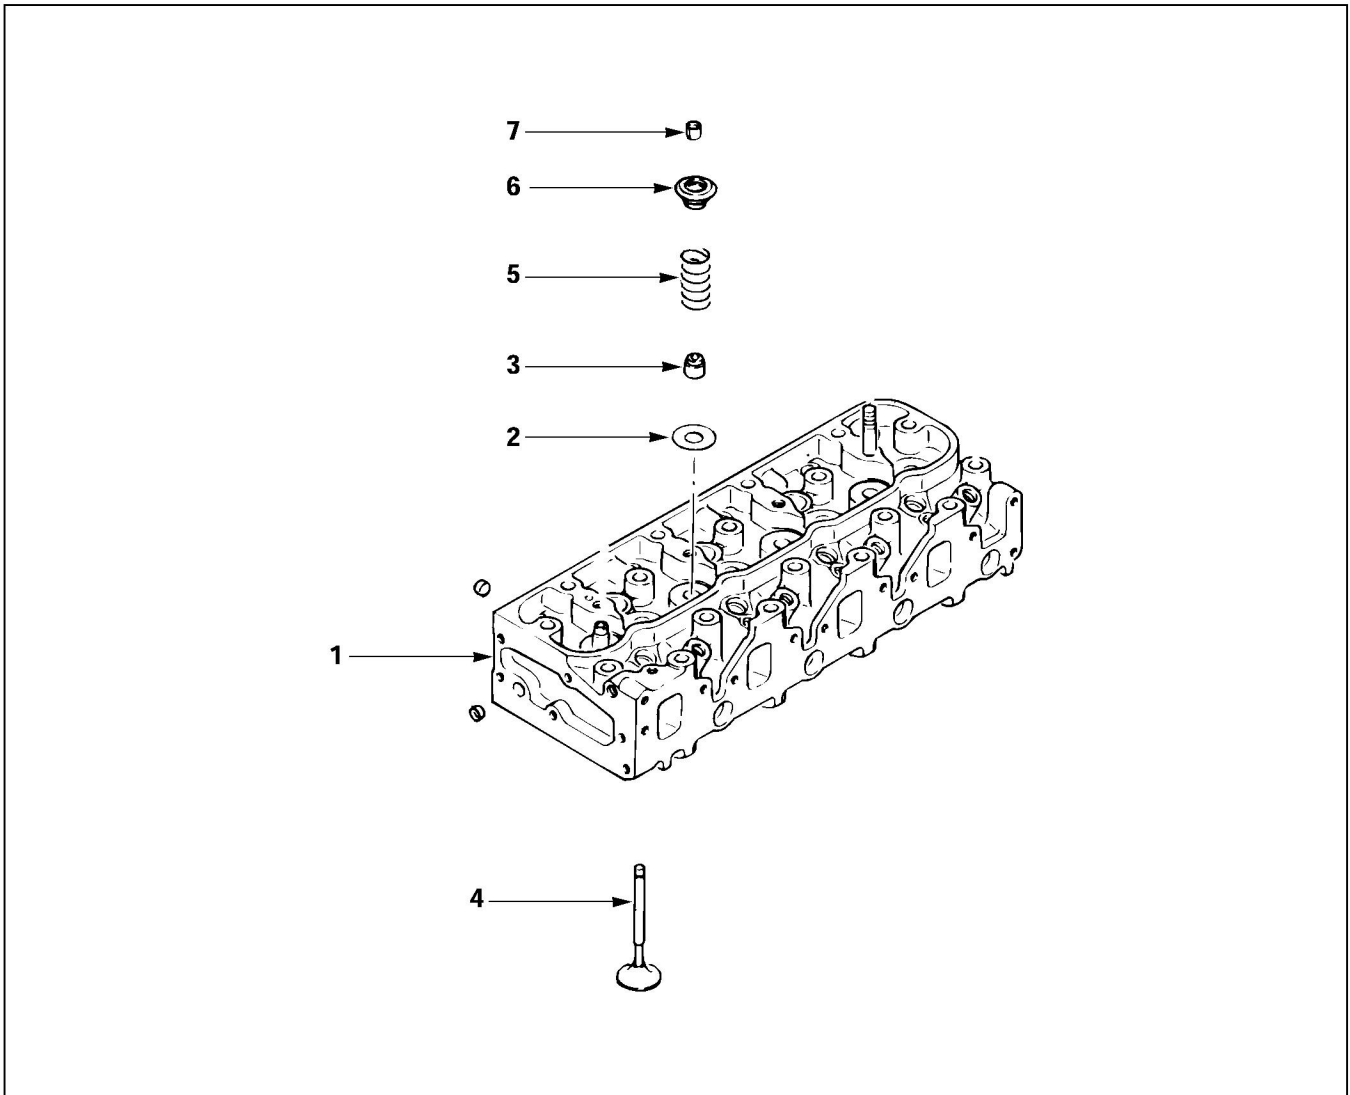


**Reassembly Steps**

- 1. Cylinder head
- ▲ 2. Valve spring lower washer
- ▲ 3. Valve stem oil seal
- ▲ 4. Intake and exhaust valve
- ▲ 5. Valve spring
- ▲ 6. Valve spring upper seat
- ▲ 7. Split collar



## Important Operations

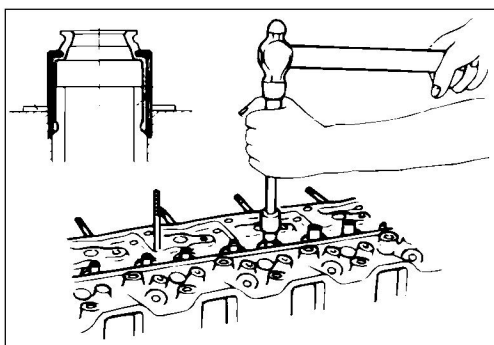

### 3. Valve Stem Oil Seal

- 1) Apply a coat engine oil to the oil seal inner face.
- 2) Use an oil seal installer to install the oil seal to the valve guide.


Oil Seal Installer: 5-8840-2033-0

### 4. Intake and Exhaust Valve



- 1) Apply a coat of engine oil to valve stem.
- 2) Install the intake and exhaust valves.
- 3) Turn the cylinder head up to install the valve springs.


Take care not to allow the installed valves to fall free.

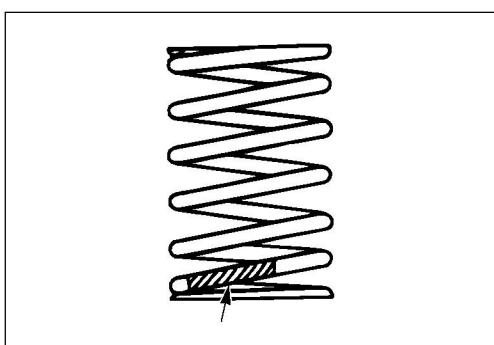

### 5. Valve Spring

- 1) Turn the cylinder head up to install the valve springs.
- 2) Install the valve springs with the fine pitched end (painted pink) facing down.

Take care not to allow the installed valves to fall free.

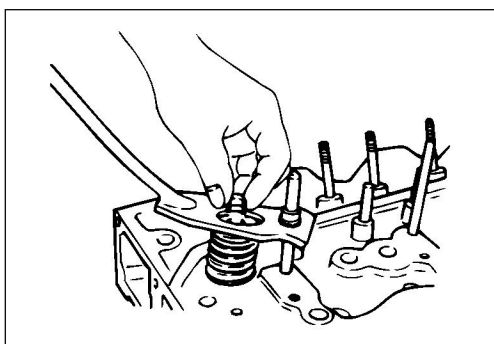


### 7. Split Collar

- 1) Use the spring compressor to push the valve spring into position.  
Spring Compressor: 9-8523-1423-0
- 2) Install the split collar to the valve stem.
- 3) Set the split collar by tapping around the bead of the collar with a rubber hammer.



PISTON AND CONNECTING ROD

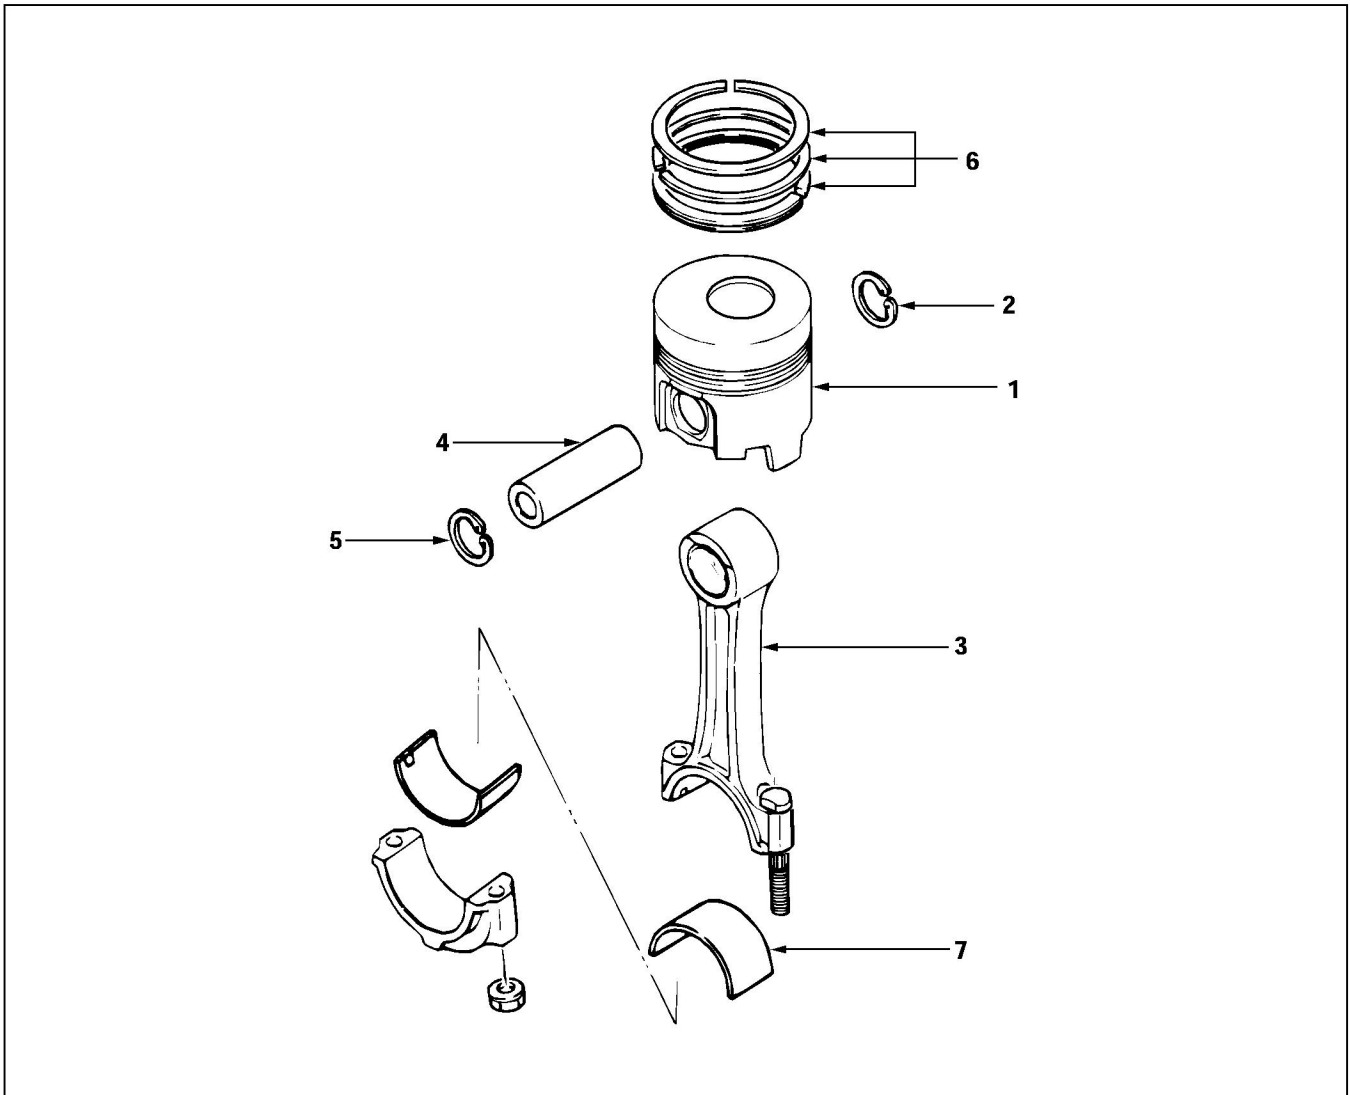


**Reassembly Steps**

- ▲ 1. Piston
- ▲ 2. Piston pin snap ring
- ▲ 3. Connecting rod
- ▲ 4. Piston pin
- ▲ 5. Piston pin snap ring
- ▲ 6. Piston ring
- ▲ 7. Connecting rod bearing




## Important Operations

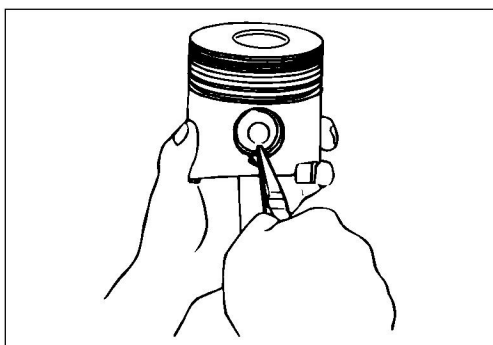


1. Piston
2. Piston pin snap ring
3. Connecting rod

- 1) Clamp the connecting rod in a vise.  
Take care not to damage the connecting rod.
- 2) Use a pair of snap ring pliers to install the piston pin snap ring to the piston.

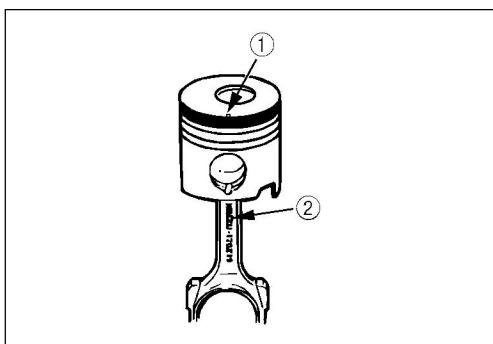


- 3) Install the piston to the connecting rod.  
The piston head front mark ① and the connecting rod "ISUZU" casting mark ② must be facing the same direction.

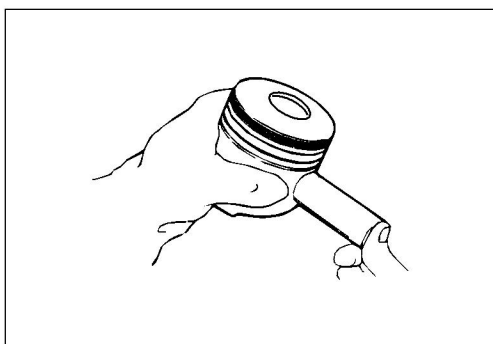


### 4. Piston pin

- 1) Apply a coat of engine oil to the piston pin and the piston pin hole.
- 2) Use your fingers to force the piston pin into the piston until it makes contact with the snap ring.

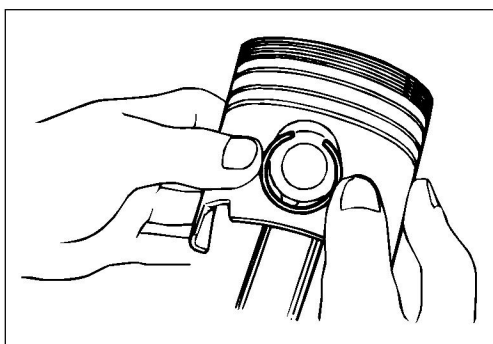

- 3) Use your fingers to force the piston pin snap ring into the piston snap ring groove.
- 4) Check that the connecting rod moves smoothly on the piston pin.

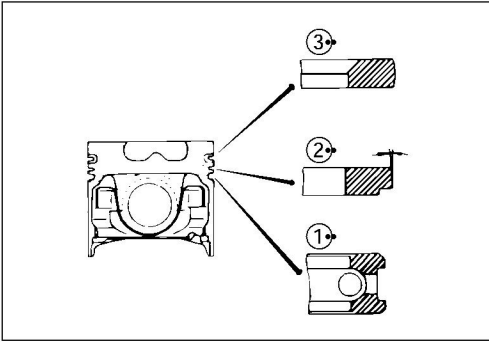

### 6. Piston Ring

- 1) Use a piston ring replacer to install the three piston rings.

Piston Ring Replacer:

Install the piston rings in the order shown in the illustration.

- ① Oil ring (Coil expander type)
- ② 2nd compression ring (Taper undercut type)
- ③ 1st compression ring (Barrel face type)

#### Note:




Install the compression rings with the stamped side facing up.

Insert the expander coil into the oil ring groove so that there is no gap on either side of the expander coil before installing the oil ring.




- 2) Apply engine oil to the piston ring surfaces.
- 3) Check that the piston rings rotate smoothly in the piston ring grooves.

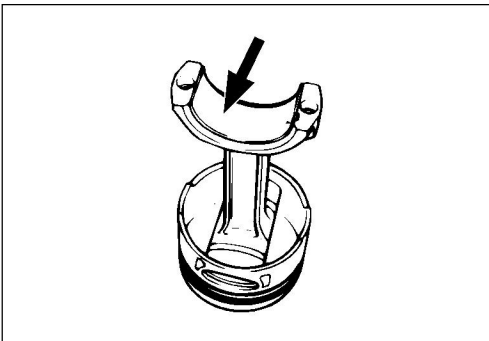

### 7. Connecting Rod Bearing


Carefully wipe any oil or other foreign material from the connecting rod bearing back face and the connecting rod bearing fitting surface.

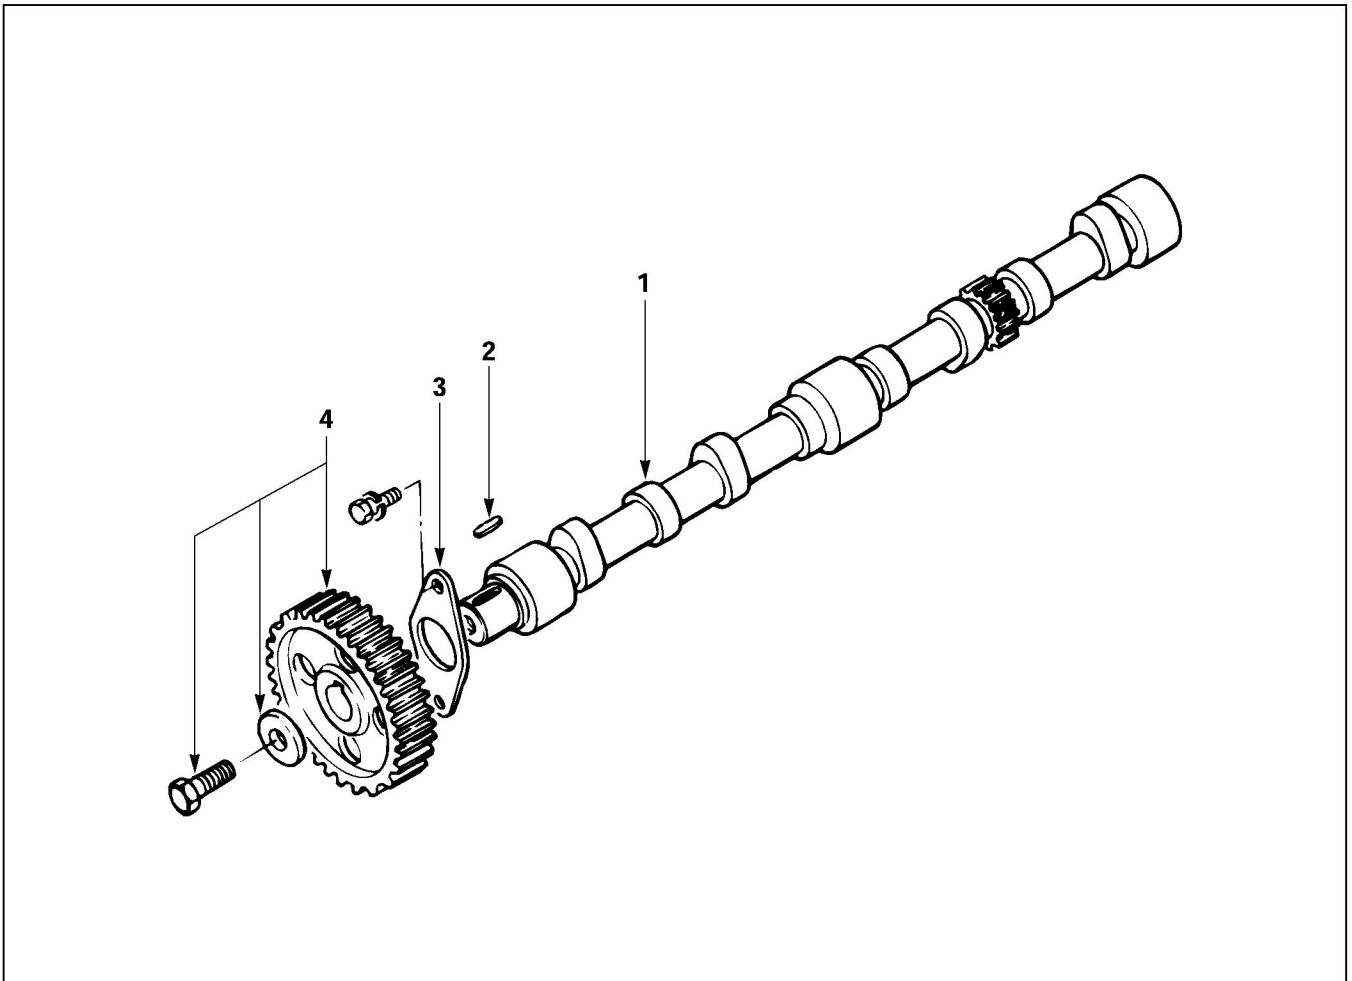**CAMSHAFT, CAMSHAFT TIMING GEAR, AND THRUST PLATE****Reassembly Steps**

1. Camshaft
2. Feather key
3. Thrust plate
- ▲ 4. Camshaft timing gear



**Important Operations**

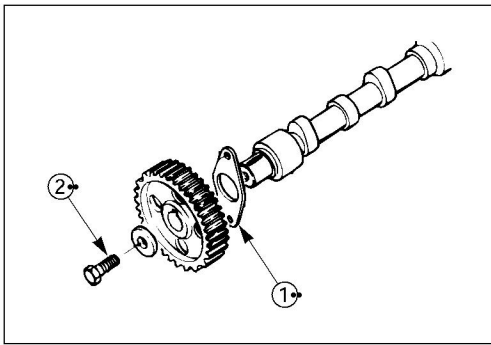

**4. Camshaft Timing Gear**

- 1) Install the thrust plate ① .
- 2) Apply engine oil to the bolt threads ② .
- 3) Install the camshaft timing gear with the timing mark stamped side facing out.




Camshaft Timing Gear Bolt Torque      N·m(kgf·m/lb.ft)

98 - 118 (10 - 12/72 - 87)
----------------------------






REASSEMBLY

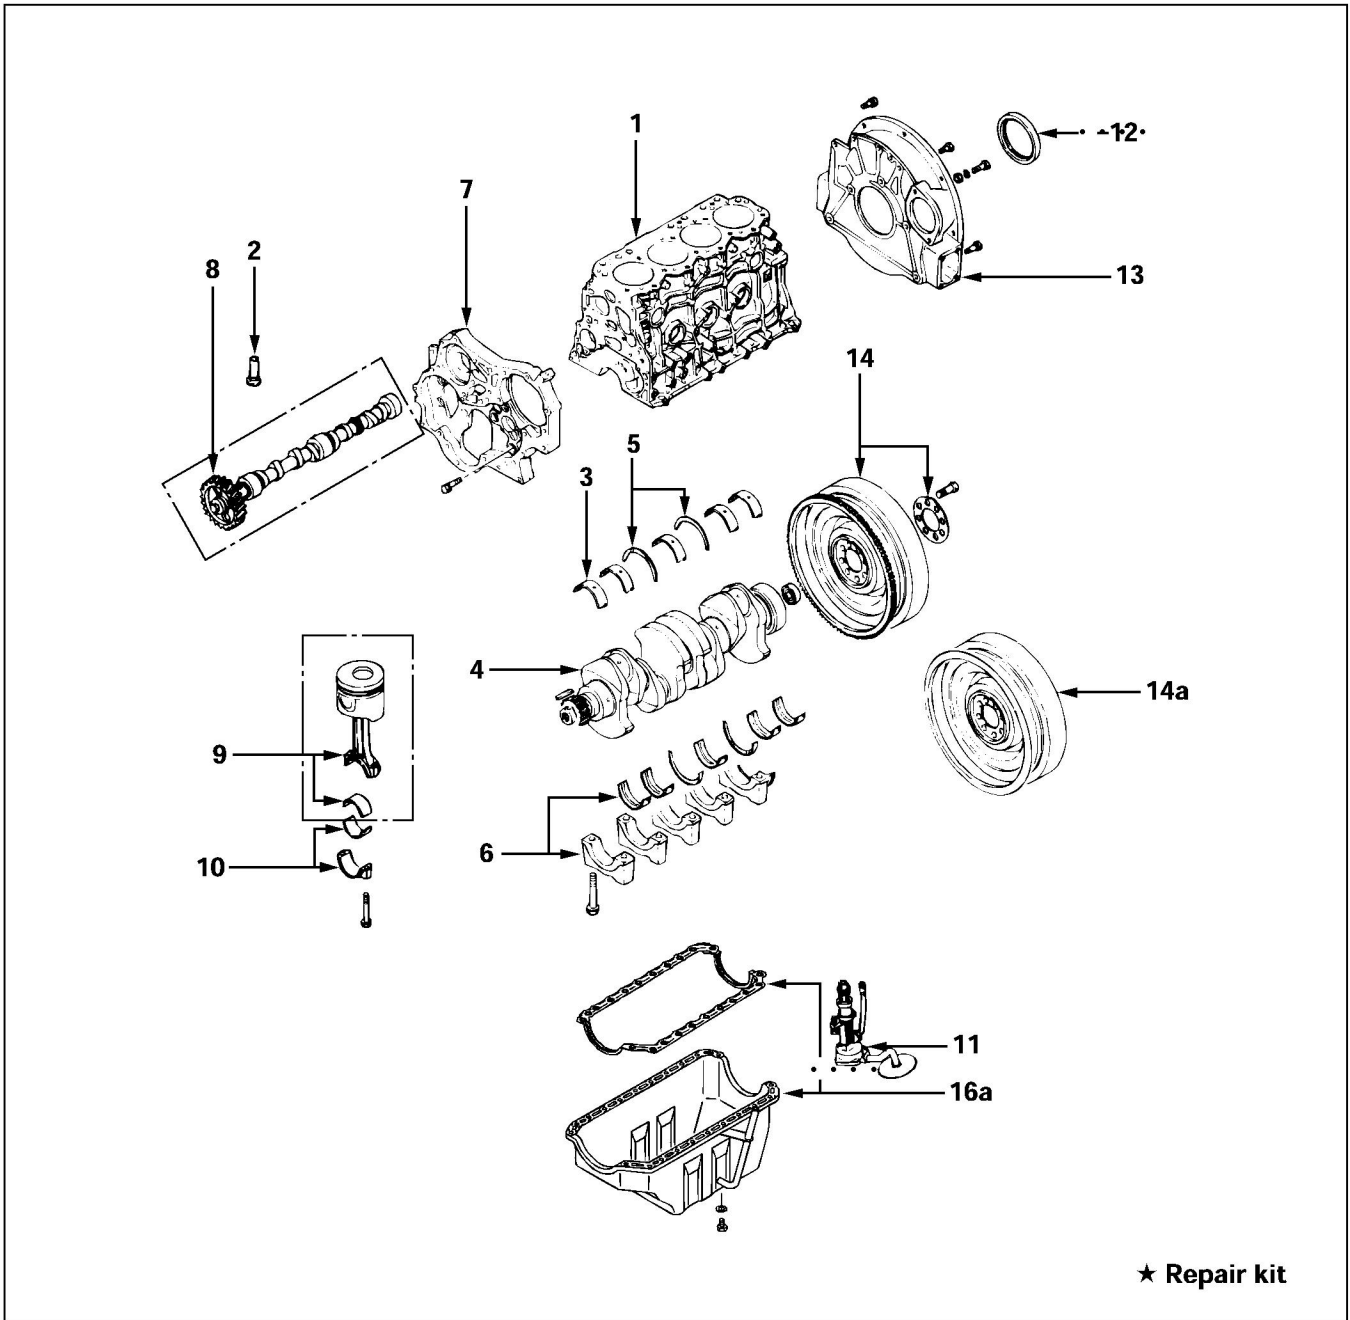

Reassembly Steps - 1

- ▲ 1. Cylinder body
- ▲ 2. Tappet
- ▲ 3. Crankshaft upper bearing
- ▲ 4. Crankshaft with crankshaft timing gear
- ▲ 5. Crankshaft thrust bearing
- ▲ 6. Crankshaft bearing cap with lower bearing
- ▲ 7. Timing gear case
- ▲ 8. Camshaft with camshaft timing gear and thrust plate
- ▲ 9. Piston and connecting rod with upper bearing
- ▲ 10. Connecting rod cap with lower bearing
- ▲ 11. Oil pump with oil pipe
- ▲ 12. Crankshaft rear oil seal
- ▲ 13. Flywheel housing
- ▲ 14. Flywheel
- ▲ 14a. Rear flywheel (If so equipped)
- ▲ 15. Oil pan

**Inverted Engine**

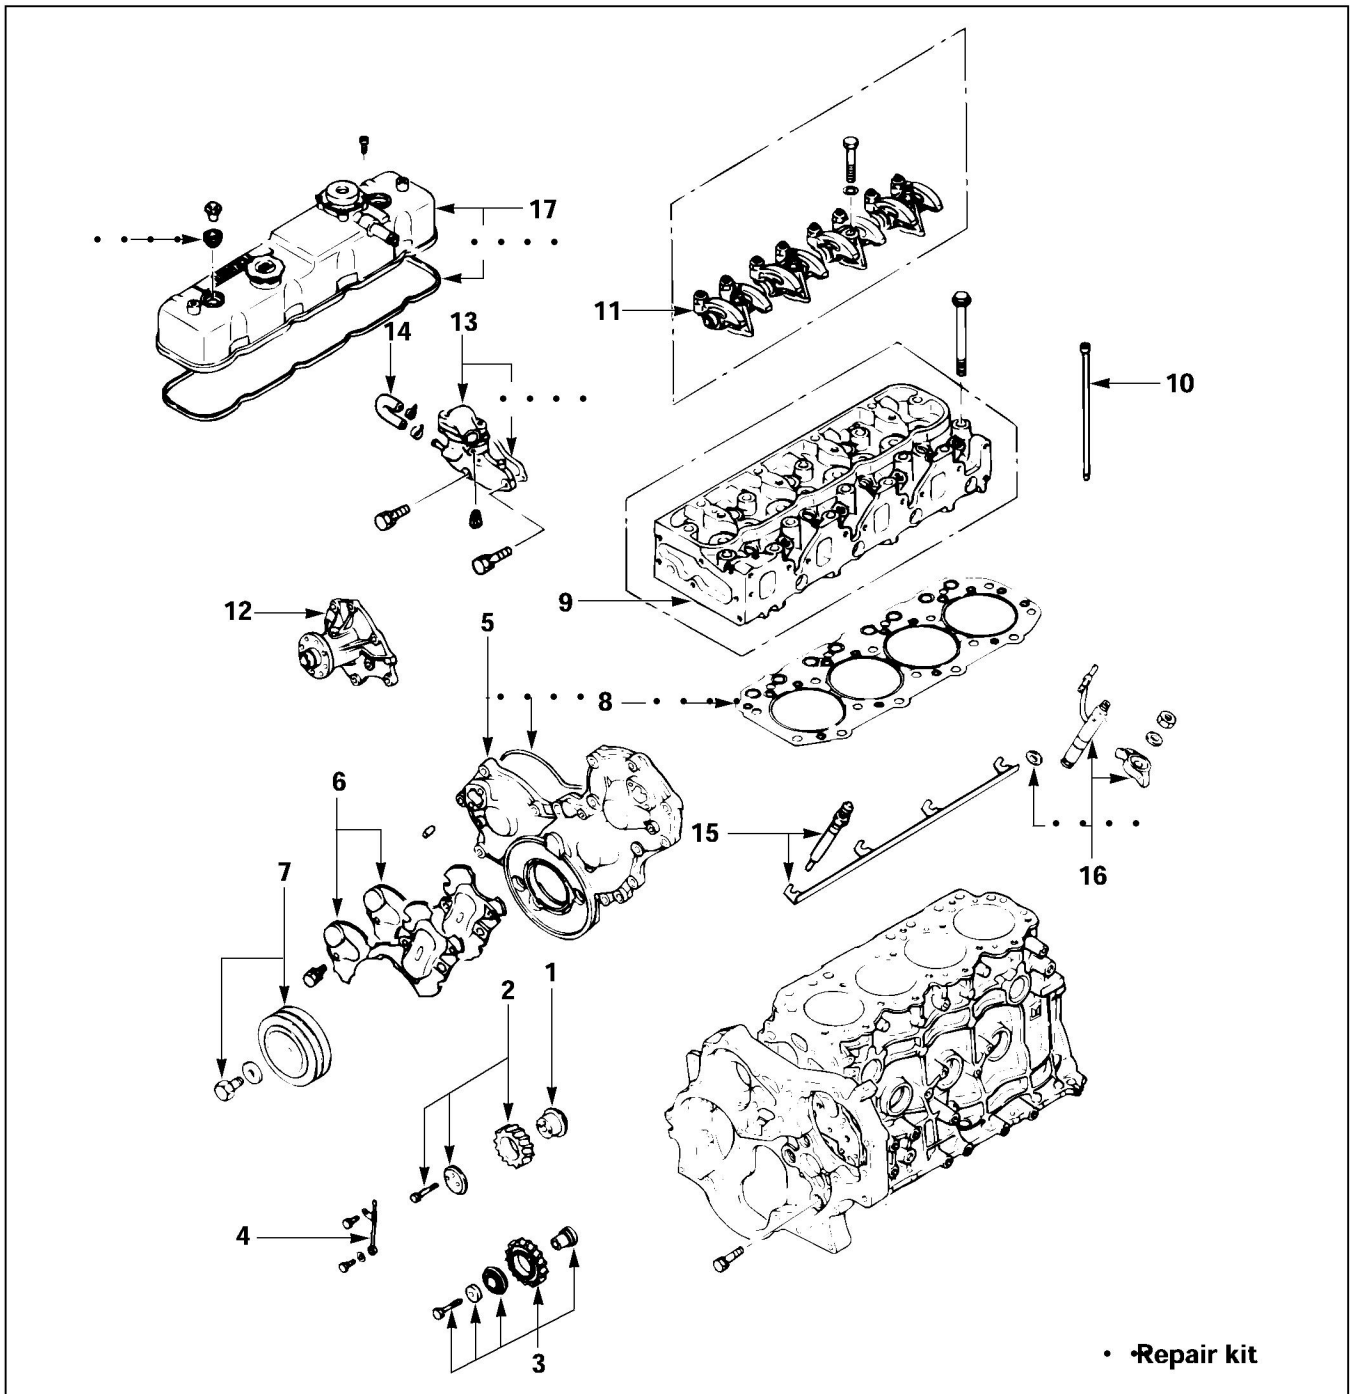


### Reassembly Steps - 2

- ▲ 1. Idler gear shaft
- ▲ 2. Idler gear "A"
- ▲ 3. Idler gear "B"
- ▲ 4. Timing gear oil pipe
- ▲ 5. Timing case cover
- ▲ 6. Timing gear case cover
- ▲ 7. Crankshaft damper pulley with dust seal
- ▲ 8. Cylinder head gasket
- ▲ 9. Cylinder head
- ▲ 10. Push rod
- ▲ 11. Rocker arm shaft and rocker arm
- ▲ 12. Water pump
- ▲ 13. Thermostat housing
- ▲ 14. Water by-pass hose
- ▲ 15. Glow plug and glow plug connector seal
- ▲ 16. Injection nozzle holder
- ▲ 17. Cylinder head cover






**Important Operations (Reassembly Steps-1)**

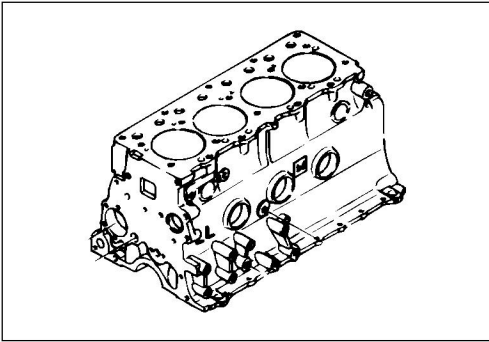

**1. Cylinder Body**

Use compressed air to thoroughly clean the inside and outside surfaces of the cylinder body, the oil holes, and the water jackets.

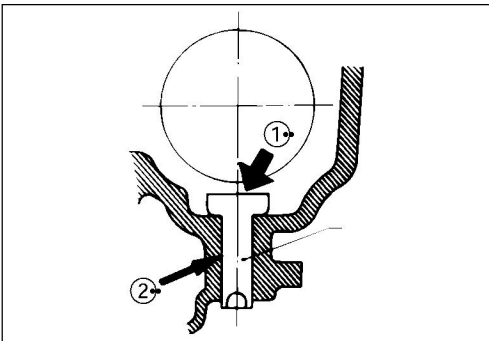


**2. Tappet**

- 1) Apply a coat of engine oil to the tappet ① and the cylinder body tappet insert holes ② .
- 2) Locate the position mark applied at disassembly (if the tappet is to be reused).

**Note:**

The tappet must be installed before the camshaft.

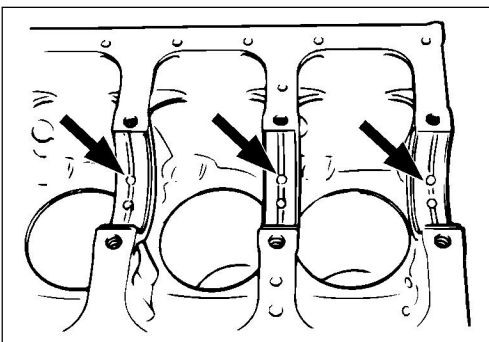

**3. Crankshaft Upper Bearing**

The crankshaft upper bearings have an oil hole and an oil groove. The lower bearings do not.

- 1) Carefully wipe any foreign material from the crankshaft upper bearing and the crankshaft upper bearing fitting surfaces.
- 2) Locate the position mark applied at disassembly if the removed crankshaft upper bearings are to be reused.




**4. Crankshaft with Crankshaft Timing Gear**

Apply an ample coat of engine oil to the crankshaft journals and the crankshaft bearing surfaces before installing the crankshaft.


**Note:**

Do not apply engine oil to the bearing back faces and the cylinder body bearing fitting surfaces.

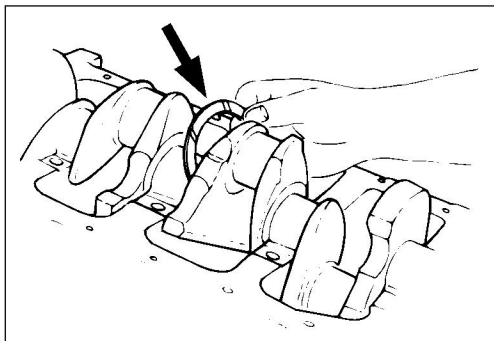

### 5. Crankshaft Thrust Bearing

- 1) Apply an ample coat of engine oil to the crankshaft thrust bearings.
  - 2) Install the crankshaft thrust bearings to the crankshaft center journal.
- The crankshaft thrust bearing oil groove must be facing the sliding face.

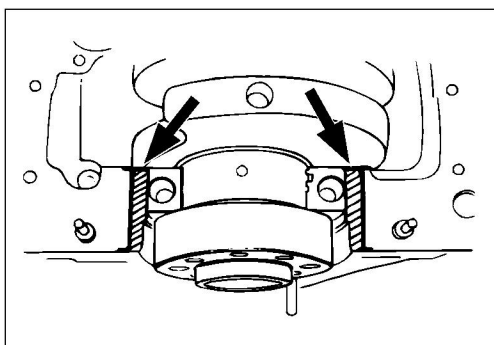


### 6. Crankshaft Bearing Cap with Lower Bearing

- 1) Apply sealant TB - 1207B or equivalent to the cylinder body No. 5 bearing cap fitting surface at the points shown in the illustration.

**Note:**


Be sure that the bearing cap fitting surface is completely free of oil before applying the silicon adhesive.  
Do not allow the silicon adhesive to obstruct the cylinder thread holes and bearings.

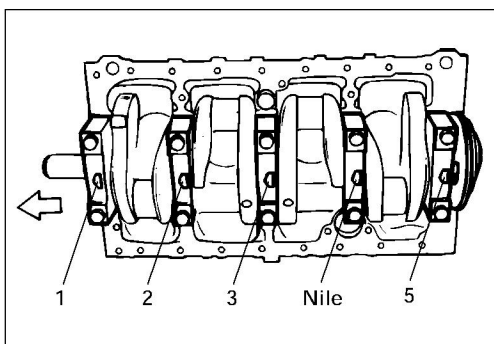

- 2) Install the bearing caps.
- The bearing cap arrow marks must be facing the front of the engine.  
The arrow mark journal number must correspond to the journal to which the bearing cap is installed.

**Note:**


The No. 4 journal bearing cap does not have a number stamped on it.

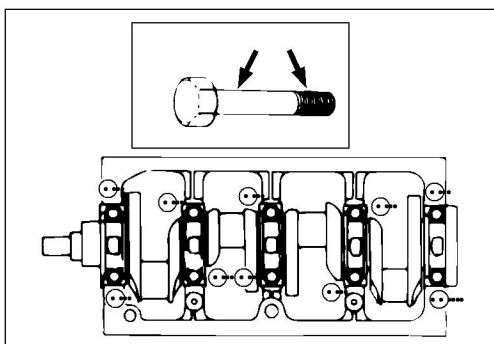

- 3) Apply a coat of engine oil to the bearing cap bolts.
- 4) Tighten the crankshaft bearing cap bolts to the specified torque a little at a time in the sequence shown in the illustration.

Crankshaft Bearing Cap Torque	N·m(kgf·m/lb.ft)
157 - 177 (16 - 18/116 - 130)	

- 5) Check to see that the crankshaft turns smoothly by rotating it manually.

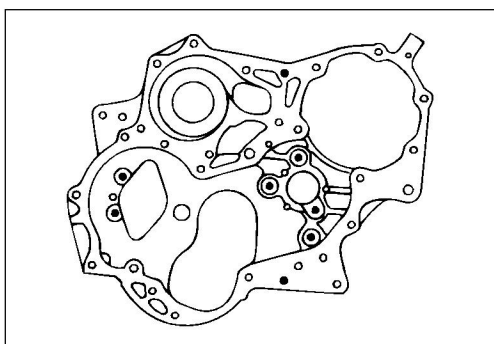


### 7. Timing Gear Case

- 1) Tighten the timing gear case with timing gear case gasket to the specified torque.

Timing Gear Case Bolt Torque	N·m(kgf·m/lb.ft)
14 - 24 (1.4 - 2.4/10 - 17)	

- 2) Cut away any excessive flash from the timing gear gasket.

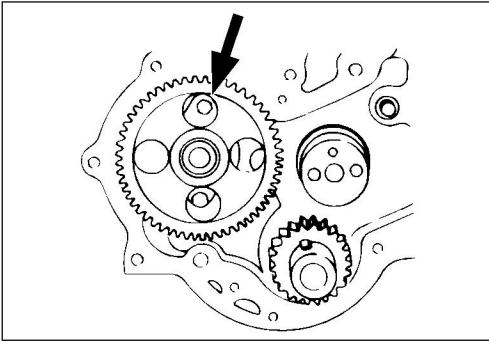


**8. Camshaft with Camshaft Timing Gear and Thrust Plate**

- 1) Apply a coat of engine oil to the camshaft and the camshaft bearings.
- 2) Install the camshaft to the cylinder body.  
Take care not to damage the camshaft bearings.
- 3) Tighten the thrust plate to the specified torque.


Thrust Plate Bolt Torque	N·m(kgf·m/lb.ft)
14 - 24 (1.4 - 2.4/10 - 17)	

- 4) Check to see that the camshaft turns smoothly by rotating it manually.

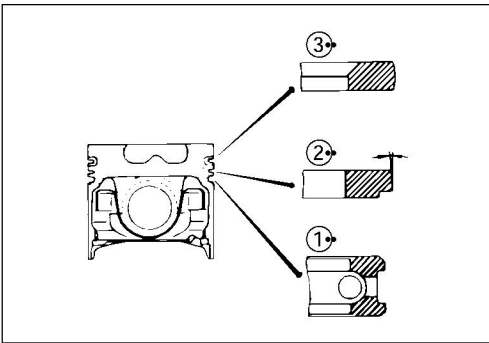

**9. Piston and Connecting Rod with Upper Bearing**  
**10. Connecting Rod Bearing Cap with Lower Bearing**

- 1) Apply a coat of engine oil to the circumference of each piston ring and piston.

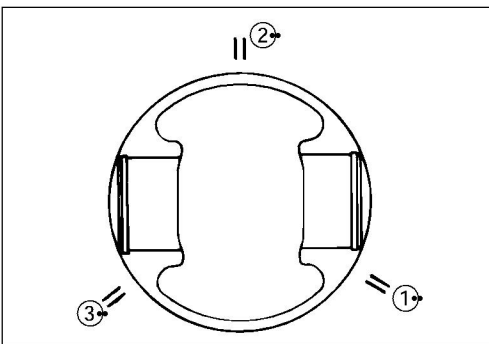


- 2) Position the piston ring gaps as shown in the illustration.

- ① 1st compression ring
- ② 2nd compression ring
- ③ Oil ring

- 3) Apply a coat of molybdenum disulfide grease to the two piston skirts.

This will facilitate smooth break-in when the engine is first started after reassembly.

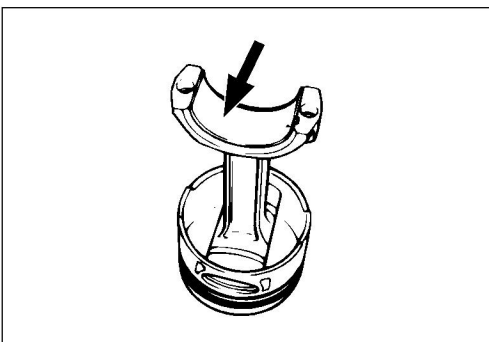


- 4) Apply a coat of engine oil to the upper bearing surfaces.

**Note:**

Do not apply engine oil to the bearing back faces and the connecting rod bearing fitting surfaces.

- 5) Apply a coat of engine oil to the cylinder wall.

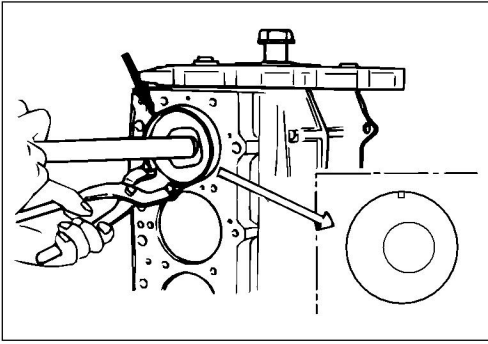


6) Position the piston head front mark so that it is facing the front of the cylinder body.

7) Use a piston ring compressor to compress the piston rings.

Piston Ring Compressor

8) Use a hammer grip to push the piston in until the connecting rod makes contact with the crankpin.

At the same time, rotate the crankshaft until the crankpin is at BDC.

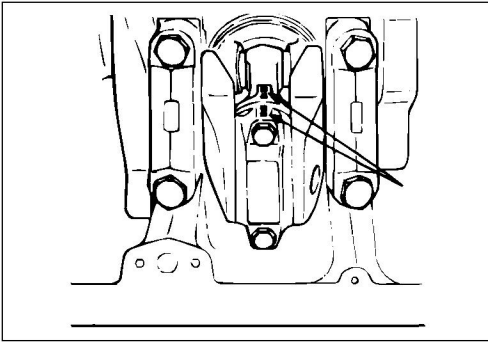


9) Install the connecting rod bearing caps.

The bearing cap front marks must be facing the front of the engine.

The bearing cap number (at the side of the bearing cap) and the connecting rod number must be the same.

**Note:**


It is absolutely essential that the bearing caps be installed in the correct direction. Reversing the bearing cap direction will result in serious engine damage.

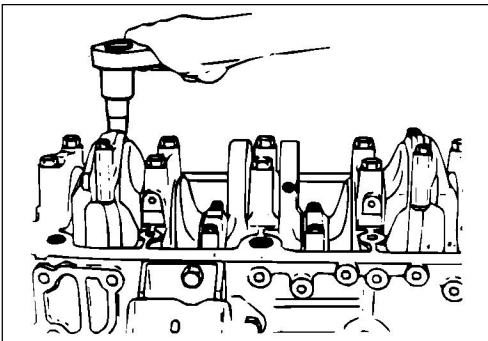

10) Apply a coat of engine oil to the threads and setting faces of each connecting rod cap bolt.

11) Tighten the connecting rod caps to the specified torque.

Connecting Rod Cap Bolt Torque	N·m(kgf·m/lb.ft)
27 - 31 (2.8 - 3.2/20 - 23) • 45° - 60°	

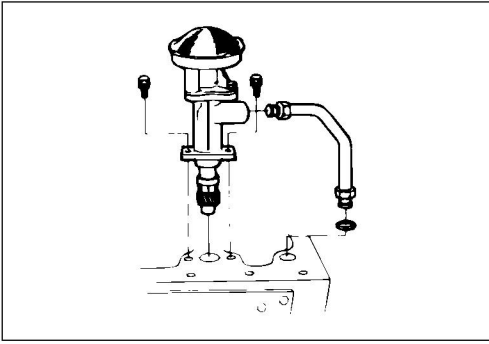


**11. Oil Pump with Oil Pipe**

Install the oil pump with the oil pipe and tighten the bolts to the specified torque.

Oil Pump Bolt Torque	N·m(kgf·m/lb.ft)
14 – 24 (1.4 – 2.4/10 – 17)	

**Note:**

Take care not to damage the O-rings when tightening the oil pipe bolts.

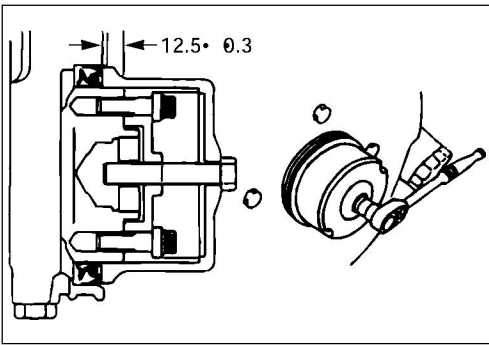


**12. Crankshaft Rear Oil Seal (Axial Type)**

- 1) Tighten the adapter to the crankshaft rear and section with 2 bolts.
- 2) Insert the oil seal into the peripheral section of adapter.
- 3) Insert the sleeve into the adapter section, and 1) tighten it with a bolt (M12 x 1.75L = 70) until the adapter section hits the sleeve.
- 4) Remove the adapter and the sleeve.
- 5) With the seal pressed in, check the dimension of the oil seal section.

Standard Dimension =  $12.5 \pm 0.3$  mm  
( $0.492 \pm 0.012$  in)

Oil Seal Installer: 5-8840-9057-0

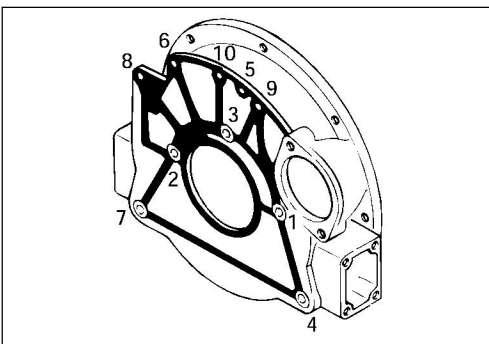


**13. Flywheel Housing**



- 1) Apply sealant to the shaded area shown in the illustration.
- 2) Tighten the flywheel housing bolts to the specified torque a little at a time in the sequence shown in the illustration.

Flywheel Housing Bolt Torque	N·m(kgf·m/lb.ft)
M10 x 1.25	35 – 45 (3.6 – 4.6/26 – 33)
M12 x 1.5	74 – 91 (7.5 – 9.3/54 – 67)

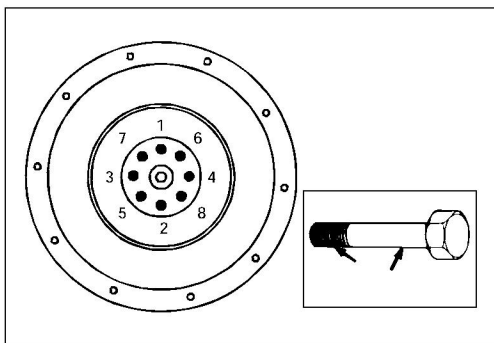


**14. Flywheel**

- 1) Block the flywheel with a piece of wood to prevent it from turning.
- 2) Apply a coat of engine oil to the threads of the flywheel bolts.
- 3) Tighten the flywheel bolts in the numerical order shown in the illustration.




Flywheel Bolt Torque	N·m(kgf·m/lb.ft)
113 – 123 (11.5 – 12.5/83 – 90)	

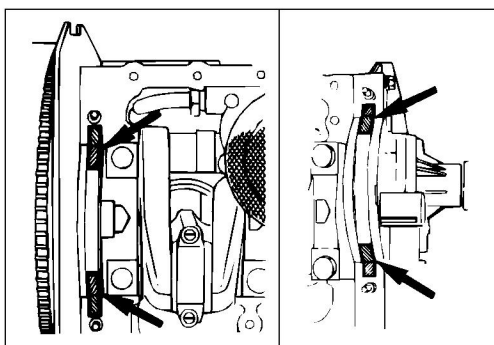


**15. Oil Pan**

- 1) Apply sealant TB – 1207B or equivalent to the No. 5 bearing cap arches, the bearing grooves, and the timing gear case arches at the positions shown in the illustration.

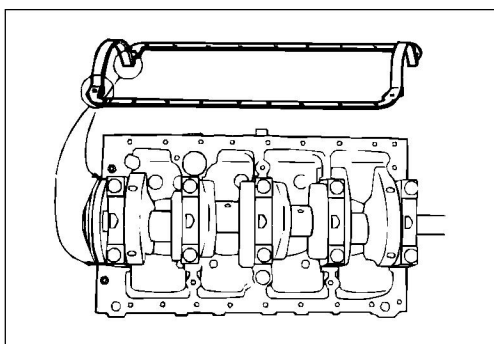

- 2) Fit the gasket rear lipped portion into the No. 5 bearing cap groove.  
Be absolutely sure that the lipped portion is fitted snugly in the groove.

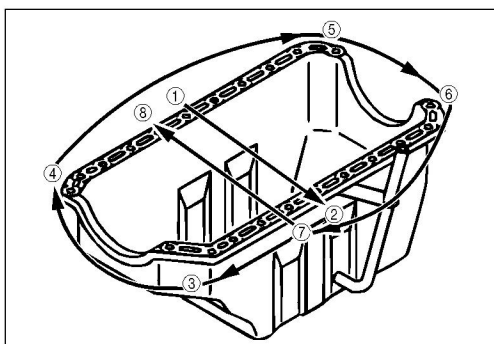


- 3) Tighten the oil pan bolts to the specified torque a little at a time in the sequence shown in the illustration.

Oil Pan Bolt Torque	N·m(kgf·m/lb.ft)
14 – 24 (1.4 – 2.4/10 – 17)	




**Important Operations (Reassembly Steps-2)**

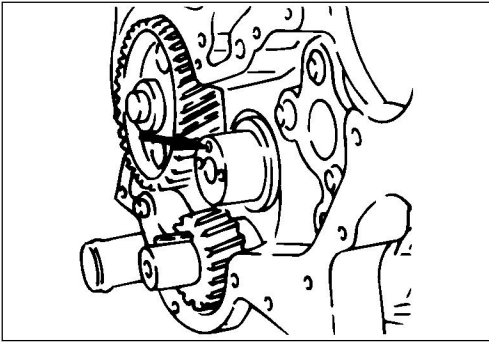


**1. Idler Gear Shaft**

The idler gear shaft oil hole must be facing up.

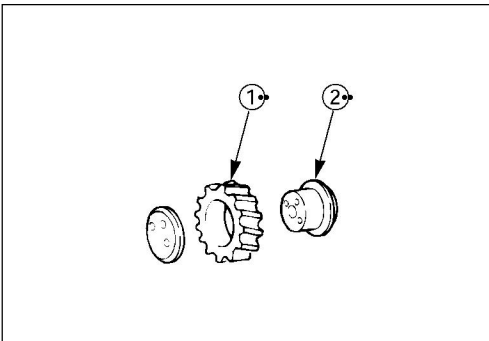

**2. Idler Gear "A"**

- 1) Apply engine oil to the idler gear ① and the idler gear shaft ② .
- 2) Position the idler gear setting marks "X" and "Y" so that they are facing the front of the engine.

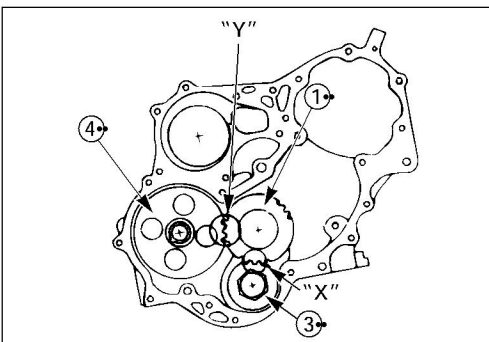


- 3) Align the idler gear "X" setting mark with the crankshaft timing gear ③ "X - X" setting mark.
- 4) Align the idler gear "Y" setting mark with the camshaft timing gear ④ "Y - Y" setting mark.
- 5) Tighten the idler gear bolt to the specified torque.



Idler Gear "A" Bolt Torque N·m(kgf·m/lb.ft)

14 - 24 (1.4 - 2.4/10 - 17)
-----------------------------

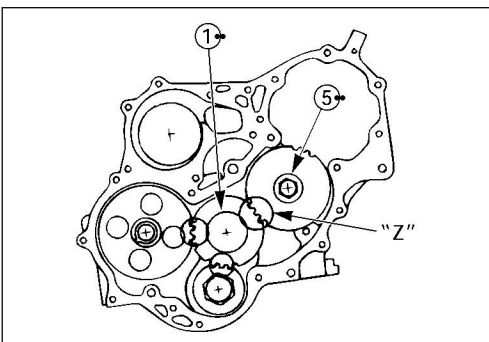


**3. Idler Gear "B"**

- 1) Apply engine oil to the idler gear and the idler gear shaft.
- 2) Align the idler gear ⑤ "Z" setting mark with the idler gear ① "Z" setting mark.



Idler Gear "B" Bolt Torque N·m(kgf·m/lb.ft)

66 - 85 (6.7 - 8.7/48 - 63)
-----------------------------

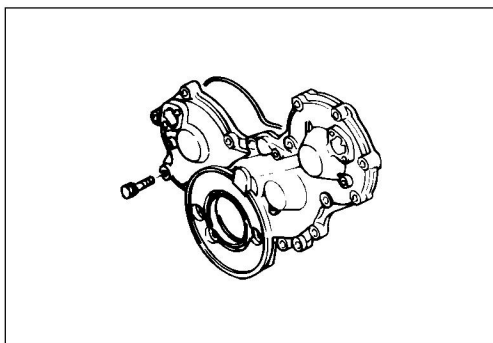


### 5. Timing Case Cover

- 1) Before installing the timing gear case, apply a 3 mm x 5 mm (0.12 in x 0.20 in) strip of sealant to the portion of the feather key indicated by the arrow in the illustration.
- 2) Check that the timing case cover O-ring is firmly inserted into the gear case groove.
- 3) Tighten the timing case cover bolts to the specified torque.



Timing Case Cover Bolt Torque N·m(kgf·m/lb.ft)

M 8 x 1.25	14 – 24 (1.4 – 2.4/10 – 17)
M12 x 1.25	65 – 85 (6.7 – 8.7/48 – 63)

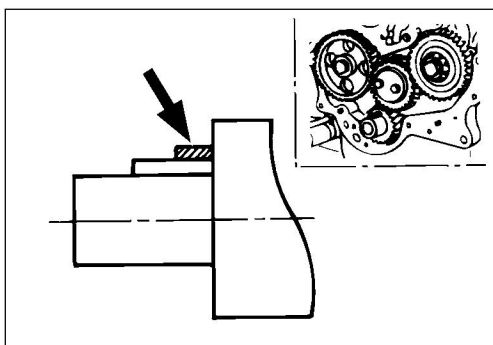

### 7. Crankshaft Damper Pulley with Dust Seal


- 1) Block the flywheel ring gear with a piece of wood to prevent it from turning.
- 2) Tighten the crankshaft damper pulley to the specified torque.



Crankshaft Damper Pulley Bolt Torque N·m(kgf·m/lb.ft)

197 – 240(20.1 – 24.5/145 – 177)
----------------------------------

Take care not to damage the crankshaft damper pulley boss.

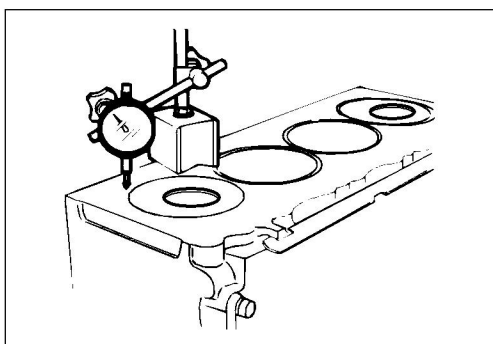


### 8. Cylinder Head Gasket

1. Carefully remove carbon deposits and gasket residue from the piston top face and the cylinder body upper surface.





**ENGINE ASSEMBLY ( 3 )**

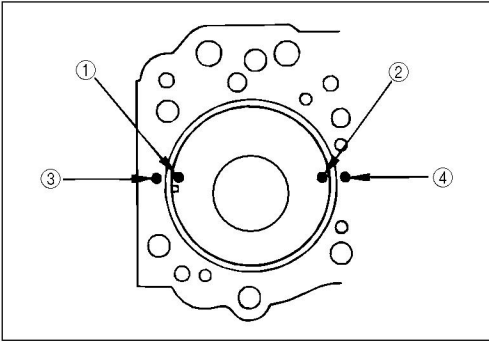

- Use a dial indicator to measure the piston head projection at measuring points ① and ③ on the piston head and measuring points ② and ④ on the cylinder body.


Do this for each cylinder.

- Note the highest measured value.

This will determine the cylinder head gasket thickness.

Piston Head Projection	mm(in)
0.758 – 0.913 (0.0298 – 0.0359)	

Piston head projection must be within the range shown in the above table.

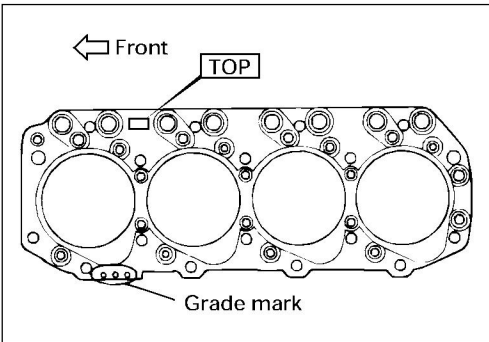

- Select a cylinder head gasket of the appropriate thickness.

The difference between the highest measured piston head projection and the lowest measured piston head projection must not exceed mm(in).  
mm(in)

Grade mark	Average piston projection	Gasket thickness (Reference)
A	0.758 – 0.812 (0.0298 – 0.0320)	1.60
B	0.813 – 0.858 (0.0320 – 0.0338)	1.65
C	0.859 – 0.914 (0.0338 – 0.0360)	1.70

- The cylinder gasket "TOP" mark must be facing up.

**9. Cylinder Head**




- Align the cylinder body dowels and the cylinder head dowel holes.

Carefully set the cylinder head to the cylinder head gasket.




- Apply engine oil to the cylinder head fixing bolt threads and setting faces.

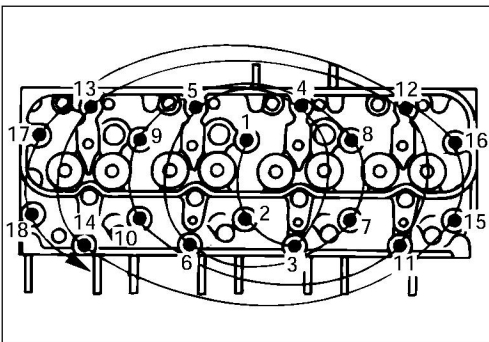

- Tighten the cylinder head bolts to the specified torque in three steps following the numerical order shown in the illustration.

Cylinder Head Bolt Torque		N·m(kgf·m/lb.ft)
1st stop	2nd stop	3rd stop
44 – 54 (4.5 – 5.5/33 – 40)	60 – 75°	60 – 75°

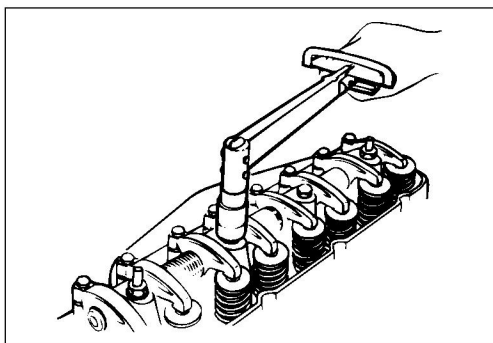


### 11. Rocker Arm Shaft and Rocker Arm



Tighten the rocker arm shaft bracket bolts in the numerical order shown in the illustration.

Rocker Arm Shaft Bracket Bolt Torque N·m(kgf·m/lb.ft)

49 – 59 (5.0 – 6.0/36 – 43)
-----------------------------

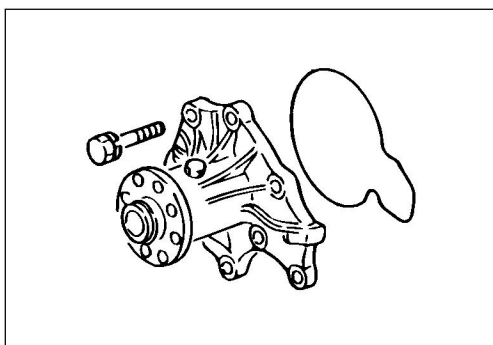

### 12. Water Pump




- 1) Temporarily tighten the water pump bolt marked with an arrow in the illustration. This bolt will be tightened to the specified torque when the alternator adjusting plate is installed.

- 2) Tighten the other water pump bolts to the specified torque.

Water Pump Bolt Torque N·m(kgf·m/lb.ft)

14 – 24 (1.4 – 2.4/10 – 17)
-----------------------------

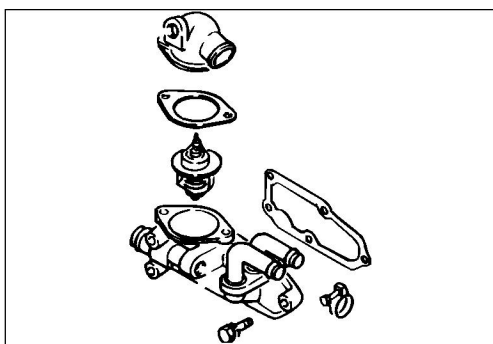

### 13. Thermostat Housing



- 1) Install the thermostat housing.
- 2) Tighten the thermostat housing bolts to the specified torque.

Thermostat Housing Bolt Torque N·m(kgf·m/lb.ft)

14 – 24 (1.4 – 2.4/10 – 17)
-----------------------------

### 15. Glow Plug and Glow Plug Connector




- 1) Tighten the glow plugs to the specified torque.

Glow Plug Torque N·m(kgf·m/lb.ft)

15 – 20 (1.5 – 2.0/11 – 14)
-----------------------------

- 2) Install the glow plug connectors.

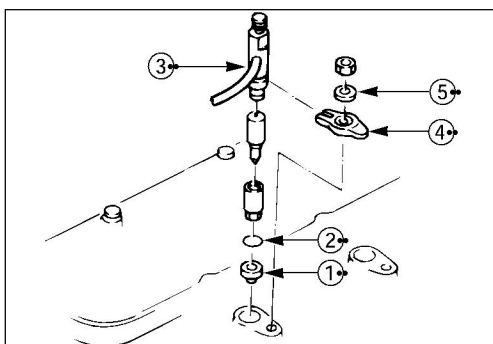

### 16. Injection Nozzle Holder




- 1) Install the injection nozzle gasket ① and the O-ring ② to the injection nozzle holder ③ .
- 2) Install the nozzle holder ③ together with the nozzle holder bracket ④ to the cylinder head.
- 3) Tighten the holder nuts with washer ⑤ to the specified torque.


Injection Nozzle Holder Nut Torque N·m(kgf·m/lb.ft)

31 – 43 (3.2 – 4.4/23 – 32)
-----------------------------

## ENGINE ASSEMBLY ( 3 )

---

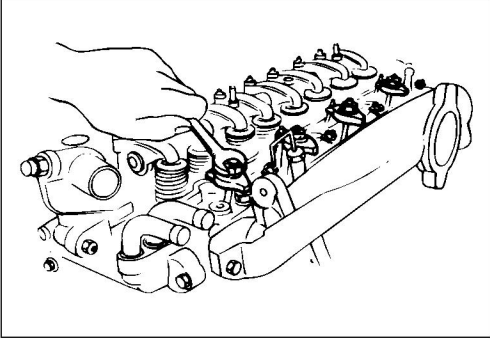

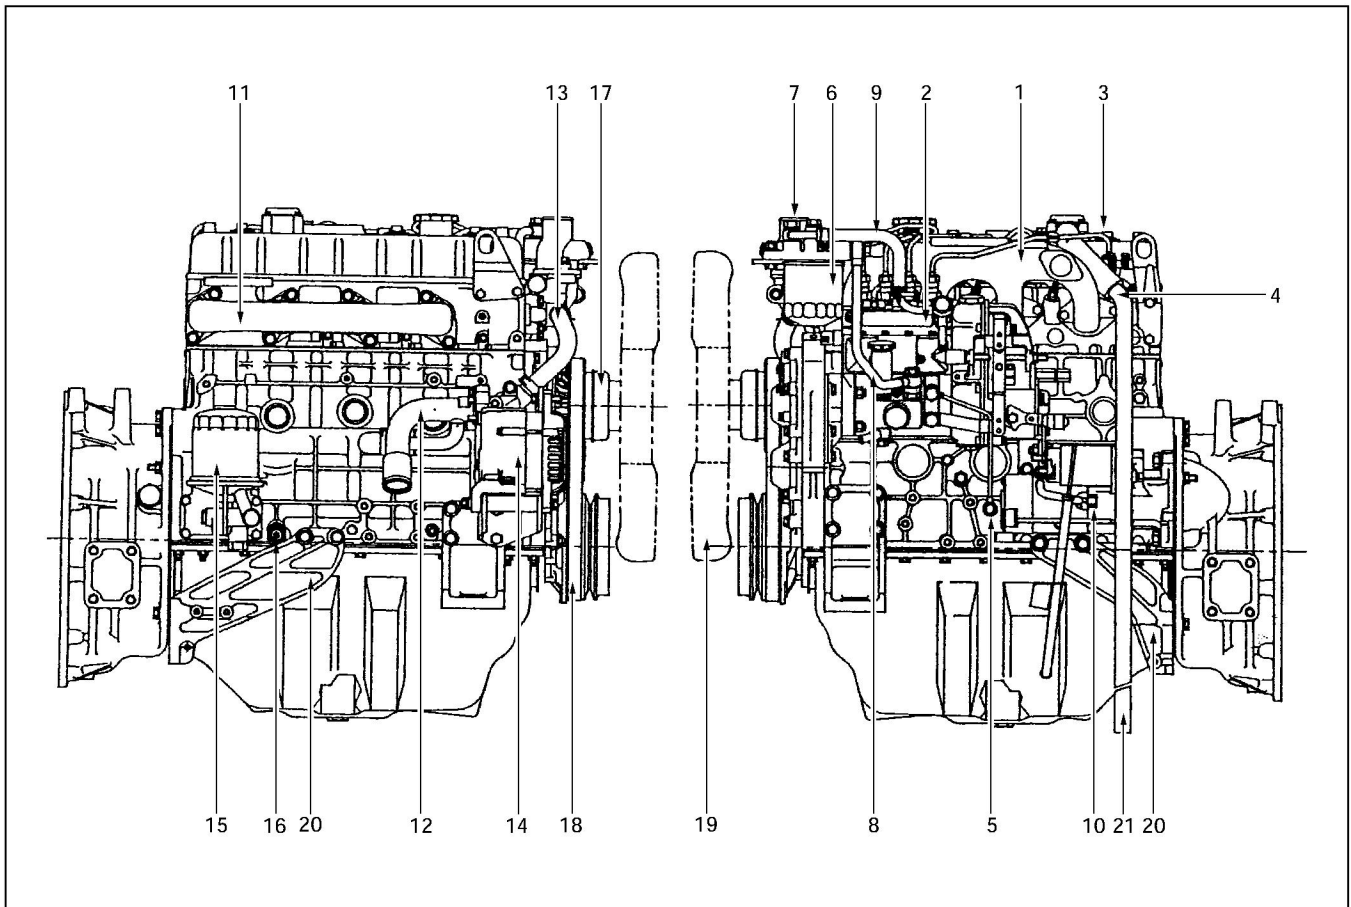


### Reassembly Steps - 3

- |   |                                      |
|---|--------------------------------------|
| ▲ 1. Intake manifold                          | ▲ 10. Starter                        |
| ▲ 2. Injection pump                           | ▲ 11. Exhaust manifold               |
| ▲ 3. Fuel injection pipe with clip            | ▲ 12. Cooling water intake pipe      |
| 4. Fuel leak off pipe                         | ▲ 13. Cooling water rubber hose      |
| 5. Oil pipe (Injection pump to cylinder body) | ▲ 14. Alternator and adjusting plate |
| 6. Fuel filter                                | ▲ 15. Oil filter                     |
| 7. Fuel pipe (Fuel filter to leak off)        | ▲ 16. Oil pressure switch            |
| 8. Fuel pipe (Fuel filter to feed pump)       | ▲ 17. Cooling fan drive pulley       |
| 9. Fuel pipe (Fuel filter to injection pump)  | ▲ 18. Cooling fan drive belt         |
|   | ▲ 19. Cooling fan and spacer         |
|   | ▲ 20. Stiffner (RH & LH)             |
|   | ▲ 21. Air breather hose              |




**Important Operations (Reassembly Steps-3)**

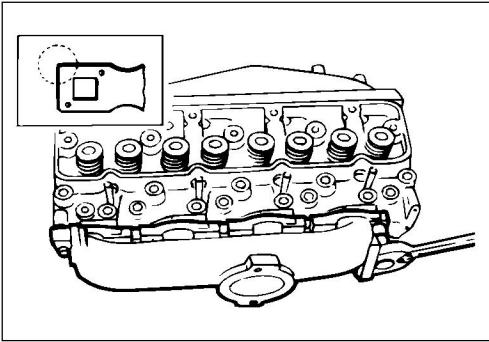


**1. Intake Manifold**

Install the intake manifold gasket with the end having the sharp corners facing the front of the engine.

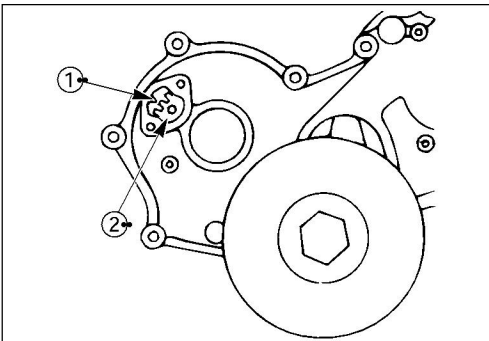

**2. Injection Pump**

1) Turn the crankshaft slowly clockwise to align the camshaft timing check hole pointer ① with the camshaft timing gear "O" mark ② .

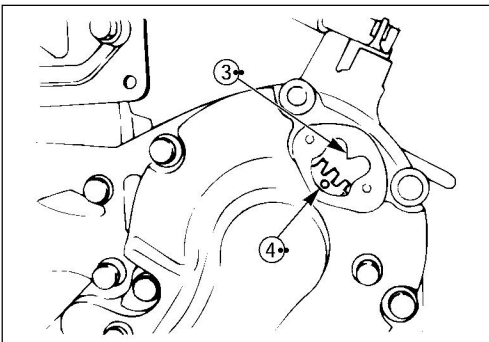


2) Install the injection pump to the timing gear case.

Align the injection pump timing check hole pointer ③ with the timing gear "O" mark ④ .

3) Temporarily tighten the injection pump bracket bolt ⑤ .

This bolt will be finally tightened after the injection pump rear bracket bolts ⑥ .

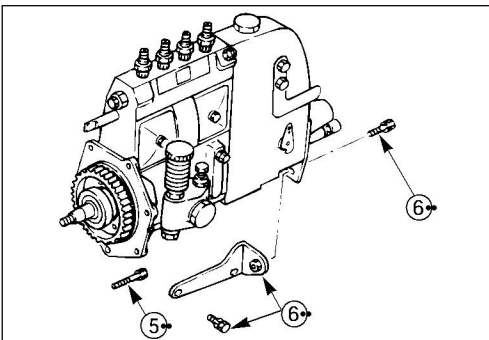

4) Tighten the injection pump rear bracket bolts to the specified torque ⑥ .

Injection Pump Rear Bracket Bolt

Torque

N·m(kgf·m/lb.ft)




14 - 24 (1.4 - 2.4/10 - 17)
-----------------------------

5) Tighten the injection pump bracket bolt ⑤ to the specified torque.

Injection Pump Bracket Bolt Torque

N·m(kgf·m/lb.ft)

14 - 24 (1.4 - 2.4/10 - 17)
-----------------------------

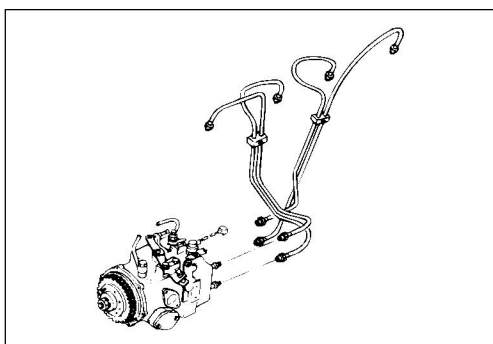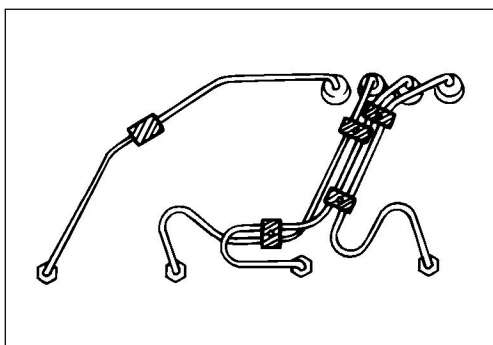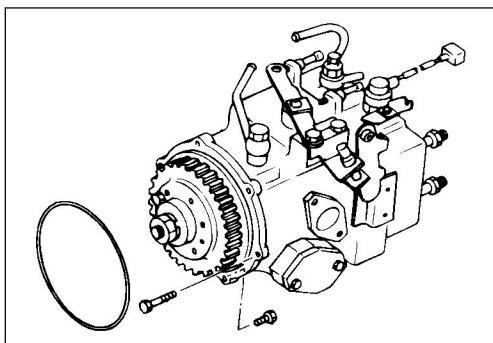

### 3. Fuel Injection Pipe with Clip

- 1) Temporarily tighten the injection pipe sleeve nut.
- 2) Set the clip in the prescribed position.

**Note:**

Make absolutely sure that the clip is correctly positioned. An improperly positioned clip will result in injection pipe breakage and fuel pulsing noise.




- 3) Tighten the injection pipe sleeve nut to the specified torque.

Injection Pipe Sleeve Nut Torque	N·m(kgf·m/lb.ft)
20 – 39 (2.0 – 4.0/14 – 29)	

### 10. Starter

Tighten the starter bolts to the specified torque.

Starter Bolt Torque	N·m(kgf·m/lb.ft)
66 – 85 (6.7 – 8.7/48 – 63)	

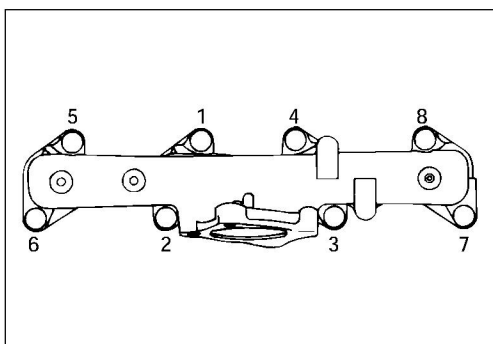

### 11. Exhaust Manifold

Tighten the exhaust manifold bolts to the specified torque a little at a time in the numerical order shown in the illustration.

Exhaust Manifold Bolt Torque	N·m(kgf·m/lb.ft)
14 – 24 (1.4 – 2.4/10 – 17)	

**14. Alternator and Adjusting Plate**



Tighten the alternator bolts and the adjusting plate bolts to the specified torque.

Alternator Bolt Torque	N·m(kgf·m/lb.ft)
14 – 24 (1.4 – 2.4/10 – 17)	



Tighten the adjusting plate bolts to the specified torque after cooling drive belt installation.


Adjusting Plate Bolt Torque	N·m(kgf·m/lb.ft)
14 – 24 (1.4 – 2.4/10 – 17)	

**15. Oil Filter**




Tighten the oil filter bolts to the specified torque.

Oil Filter Bolt Torque	N·m(kgf·m/lb.ft)
14 – 24 (1.4 – 2.4/10 – 17)	

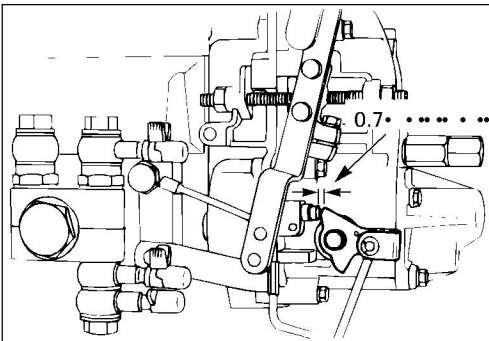

**Solenoid**

- 1) Install the solenoid, connect the link rod with the stop lever on the injection pump, and semi-tighten the fixing bolt.
- 2) Adjust the solenoid installation so that the gap between the stop lever and stopper on the injection pump is brought to within 0.7 – 1.2 mm when the solenoid valve is energized on.
- 3) Tighten the solenoid fixing bolts to the specified torque.
- 4) With the engine running on trial, be sure that the engine is stopped, when the starter switch is turned to off position.

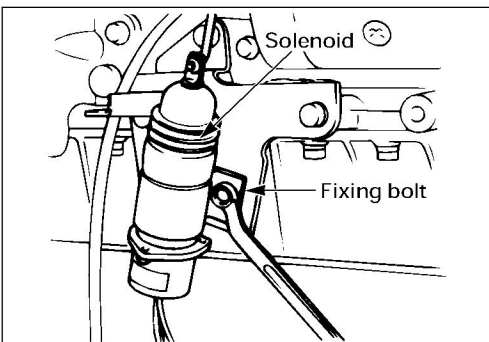

## SECTION 6

## LUBRICATING SYSTEM

## TABLE OF CONTENTS

ITEM	PAGE
Main data and specifications .....	110
General description .....	111
Oil pump .....	114
Oil filter with built-in oil cooler .....	117



**MAIN DATA AND SPECIFICATIONS**


Item	4JG1
Oil pump type	Trochoid
Delivery volume Lit(qts)/min.	17.5 (18.4)
Pump speed	1000
Delivery pressure kPa(kgf/cm <sup>2</sup> /psi)	392 (4.0/57)
Oil temperature °C(°F)	47 – 53 (116.6 – 127.4)
Engine oil	SAE 30
Oil filter type	Full flow with cartridge paper element
Regulating valve opening pressure kPa(kgf/cm <sup>2</sup> /psi)	420 – 460 (4.3 – 4.7/61 – 67)
Relief valve opening pressure kPa(kgf/cm <sup>2</sup> /psi)	79 – 118 (0.8 – 1.2/11 – 17)
Oil cooler type (if so equipped)	Water-cooled
Safety valve opening pressure kPa(kgf/cm <sup>2</sup> /psi)	225 – 265 (2.3 – 2.7/33 – 38)

## GENERAL DESCRIPTION

### LUBRICATING OIL FLOW

This illustration is based on 4J Series engine with oil cooler (option).


Lubricating oil flow may vary according to the engine specification.

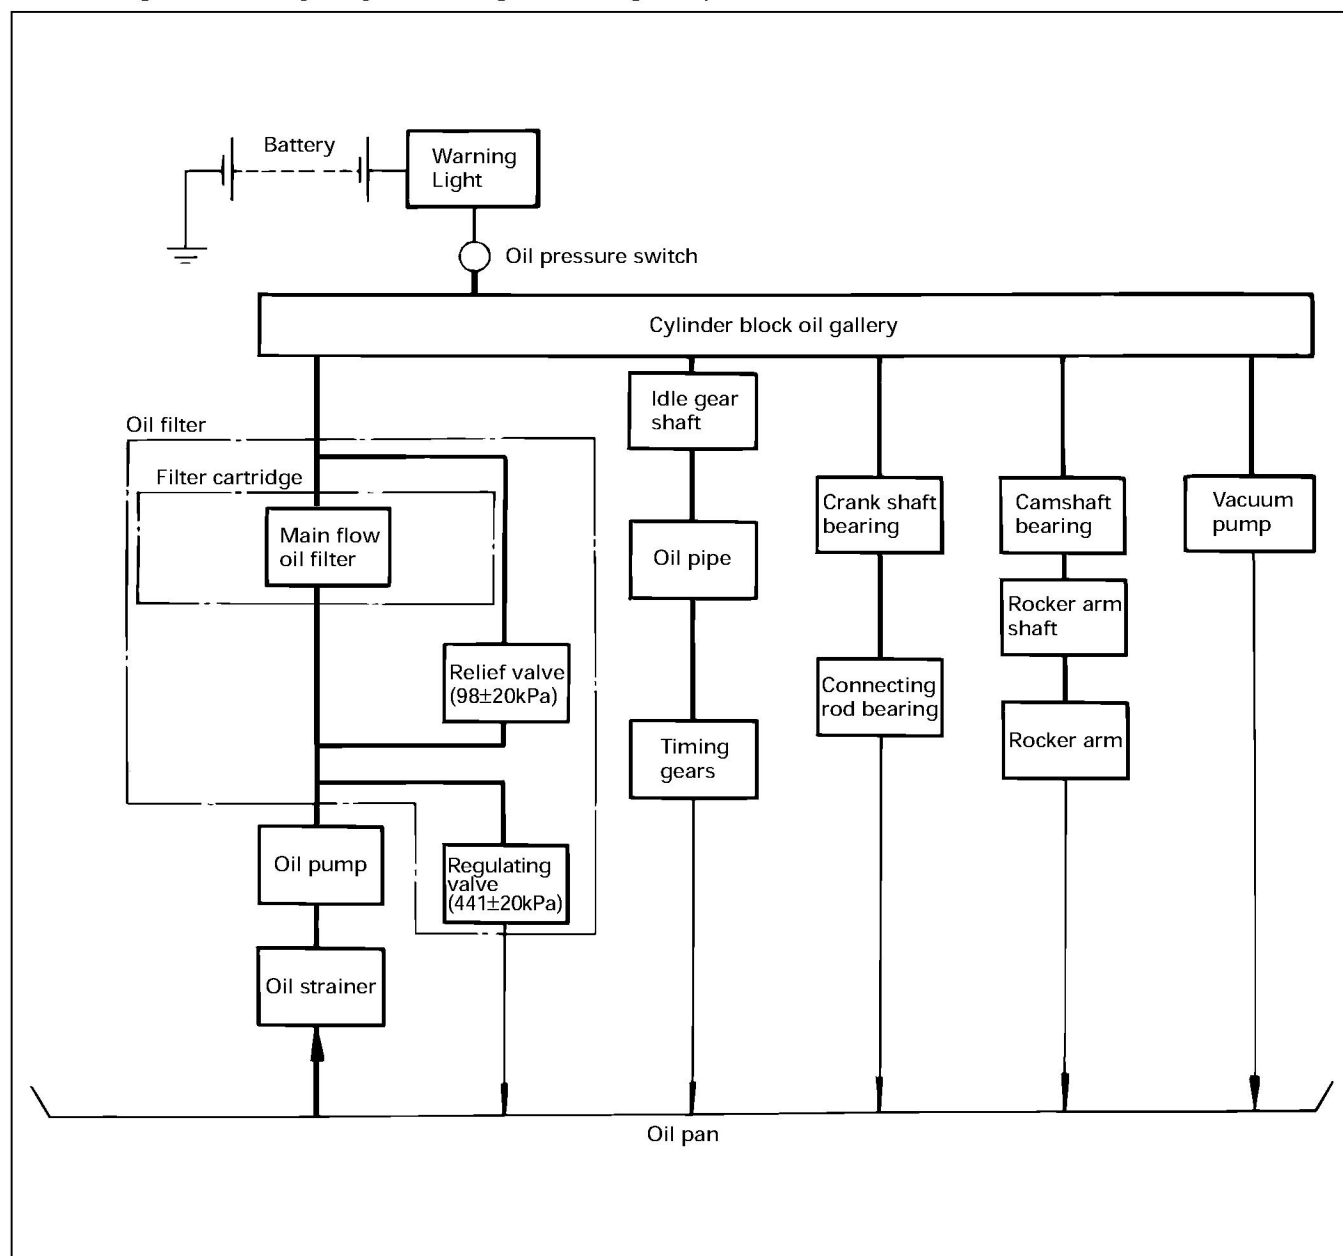

The 4J Series engine lubricating system is a full forced circulation type.


Lubricating oil is pumped from the oil pump to the cylinder body oil gallery through the oil cooler and the oil filter. It is then delivered to the vital parts of the engine from the cylinder body oil gallery.

**OIL PUMP**

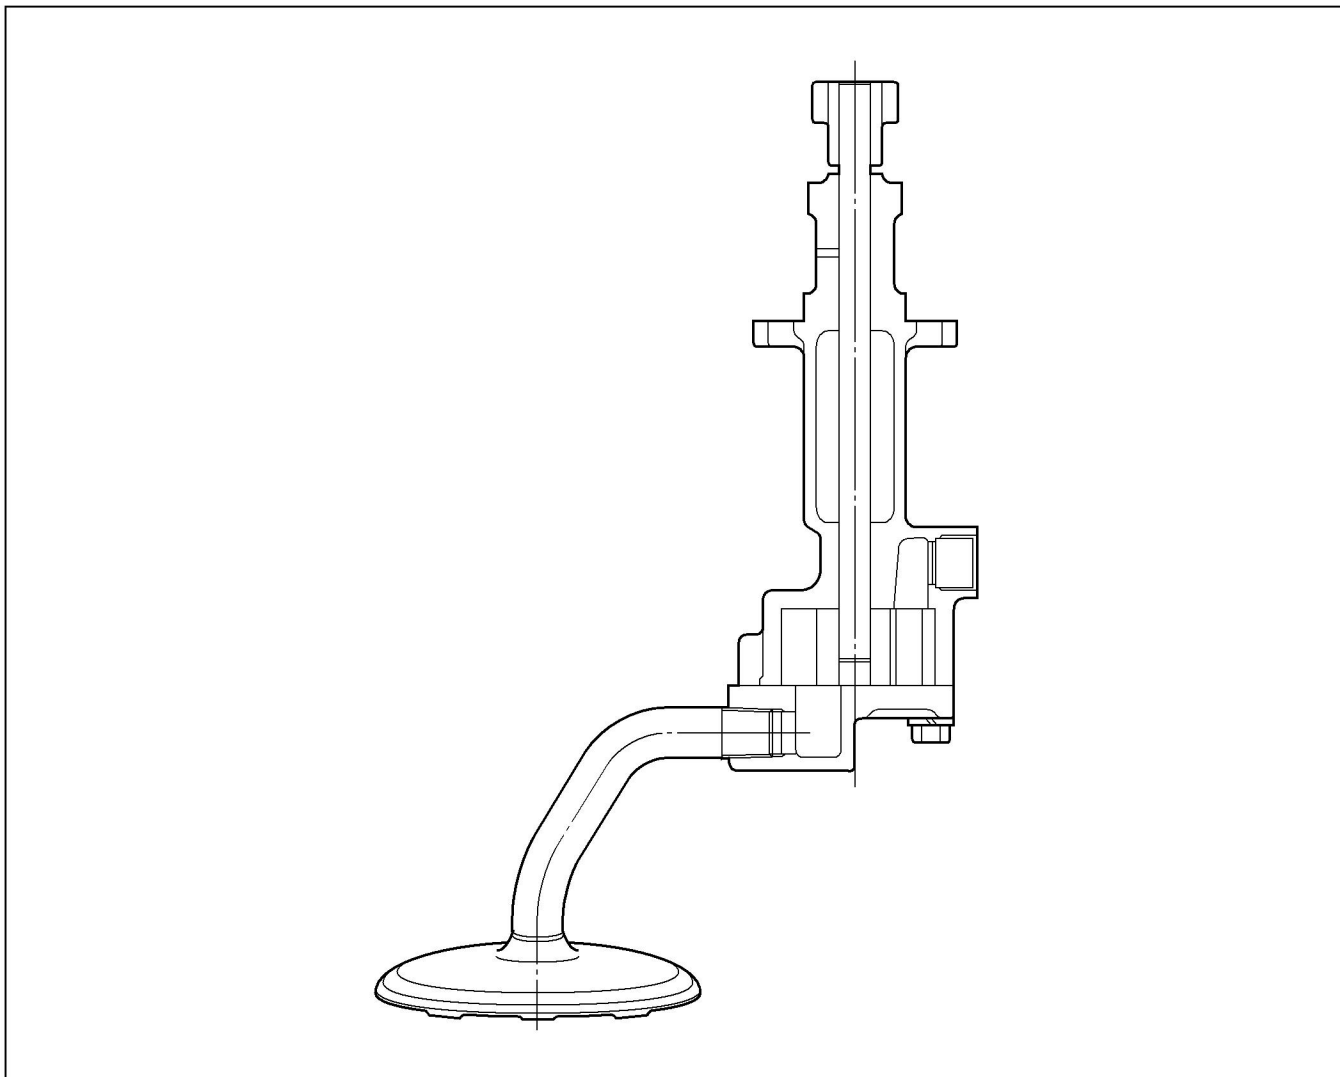


4J Series engine are equipped with a trochoid type oil pump.

**MAIN OIL FILTER**

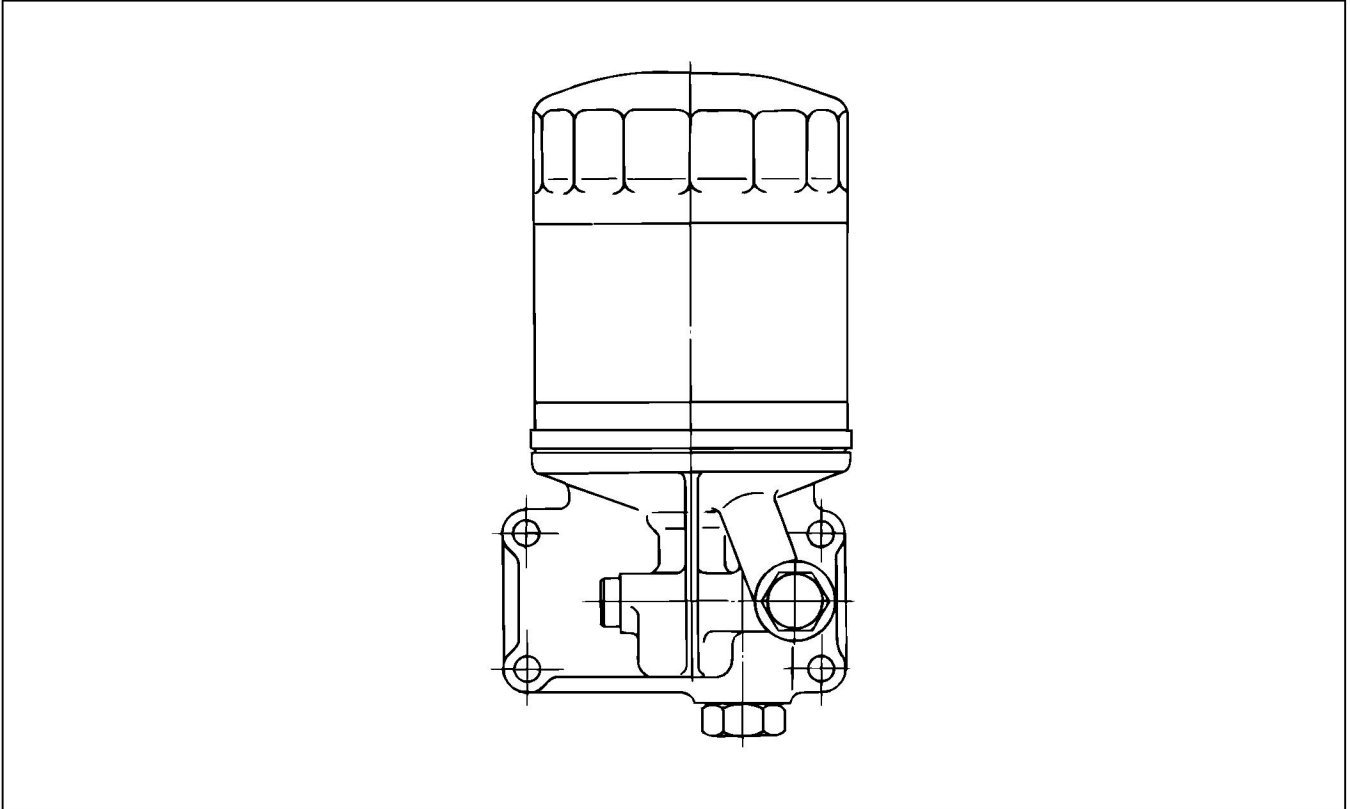


**OIL FILTER WITH BUILT-IN OIL COOLER**

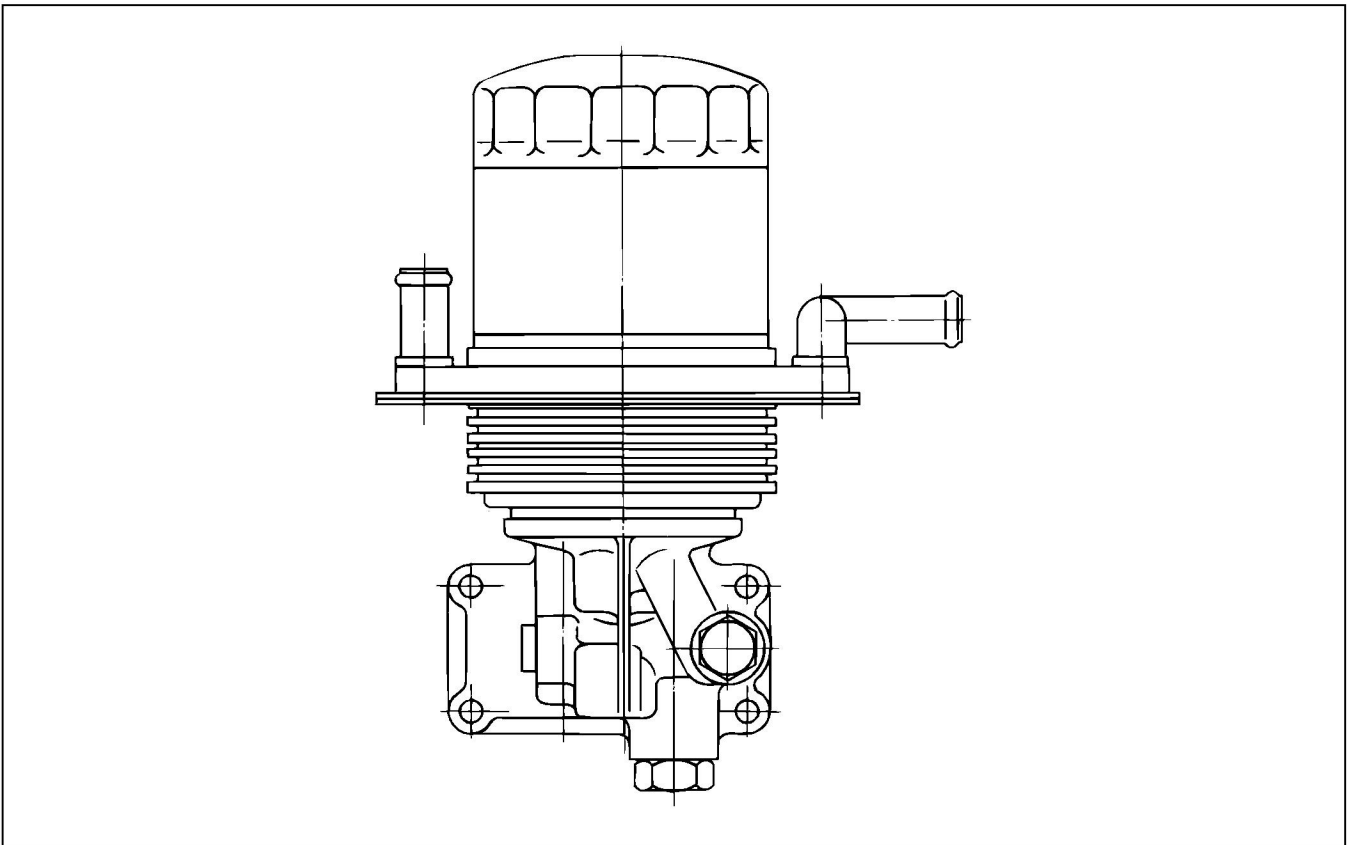

# OIL PUMP



## DISASSEMBLY

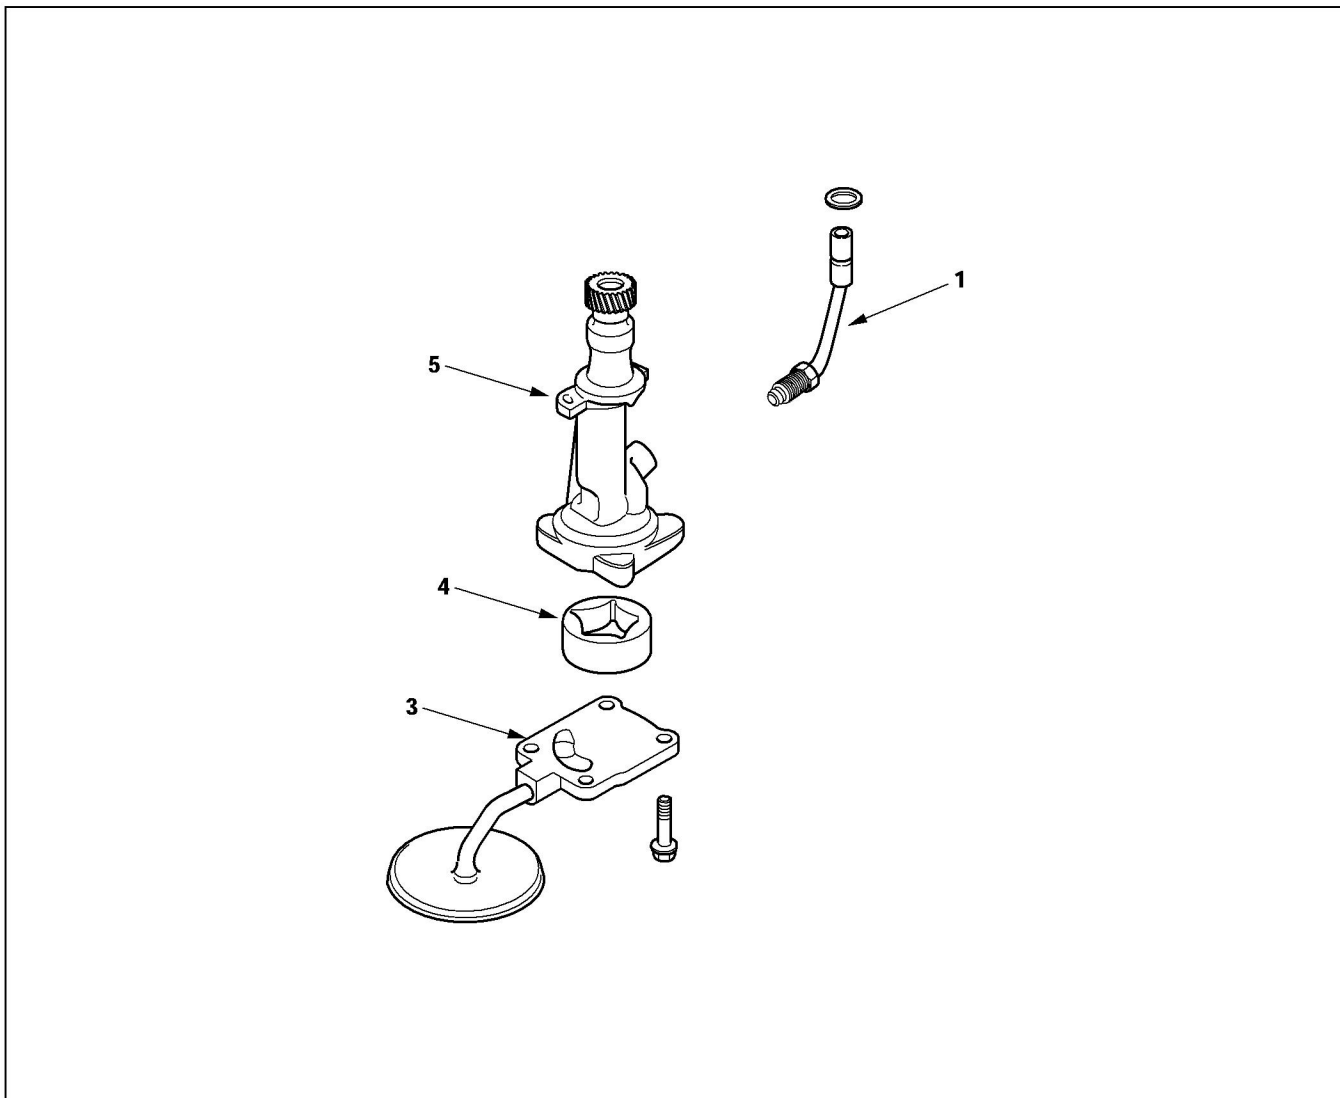

### Disassembly Steps


1. Oil pipe
2. Strainer case
3. Pump cover

4. Vane
- ▲ 5. Pump body with rotor and pinion



## INSPECTION AND REPAIR

Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.

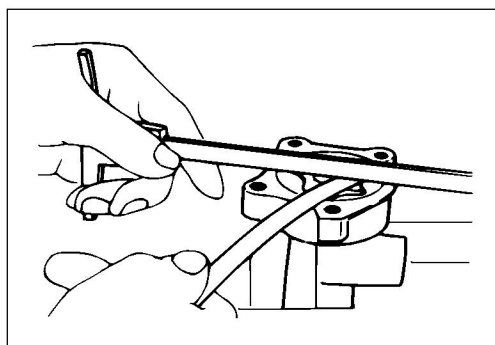


### Vane, Rotor, and Cover Clearance

Use a feeler gauge to measure the clearance between the vane, the rotor, and the cover.

If the clearance between the vane, the rotor, and the cover exceeds the specified limit, the rotor set (pin, shaft, rotor, and vane) must be replaced.

Vane, Rotor, and Cover Clearance mm(in)

Standard	Limit
0.02 – 0.07 (0.0008 – 0.0028)	0.15 (0.006)

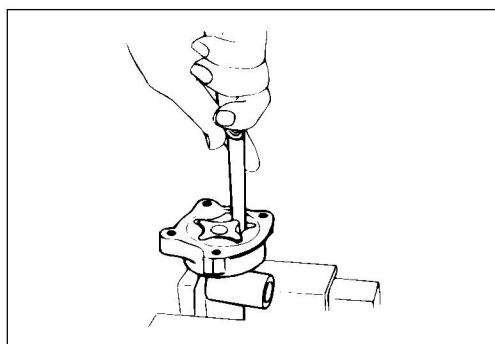


### Rotor and Vane Clearance

Use a feeler gauge to measure the clearance between the rotor and the vane.

If the clearance between the rotor and the vane exceeds the specified limit, the rotor kit (shaft, rotor, and vane) must be replaced.

Rotor and Vane Clearance mm(in)

Standard	Limit
0.14 (0.006) or less	0.20 (0.008)

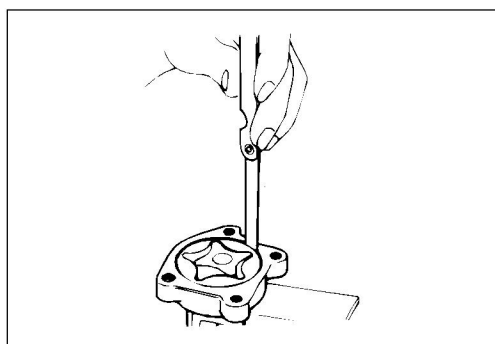

### Vane and Pump Body Clearance

Use a feeler gauge to measure the clearance between the vane and the pump body.


If the clearance between the vane and the pump body exceeds the specified limit, the entire pump assembly must be replaced.

Vane and Pump Body Clearance mm(in)

Standard	Limit
0.20 – 0.27 (0.008 – 0.011)	0.40 (0.016)




REASSEMBLY

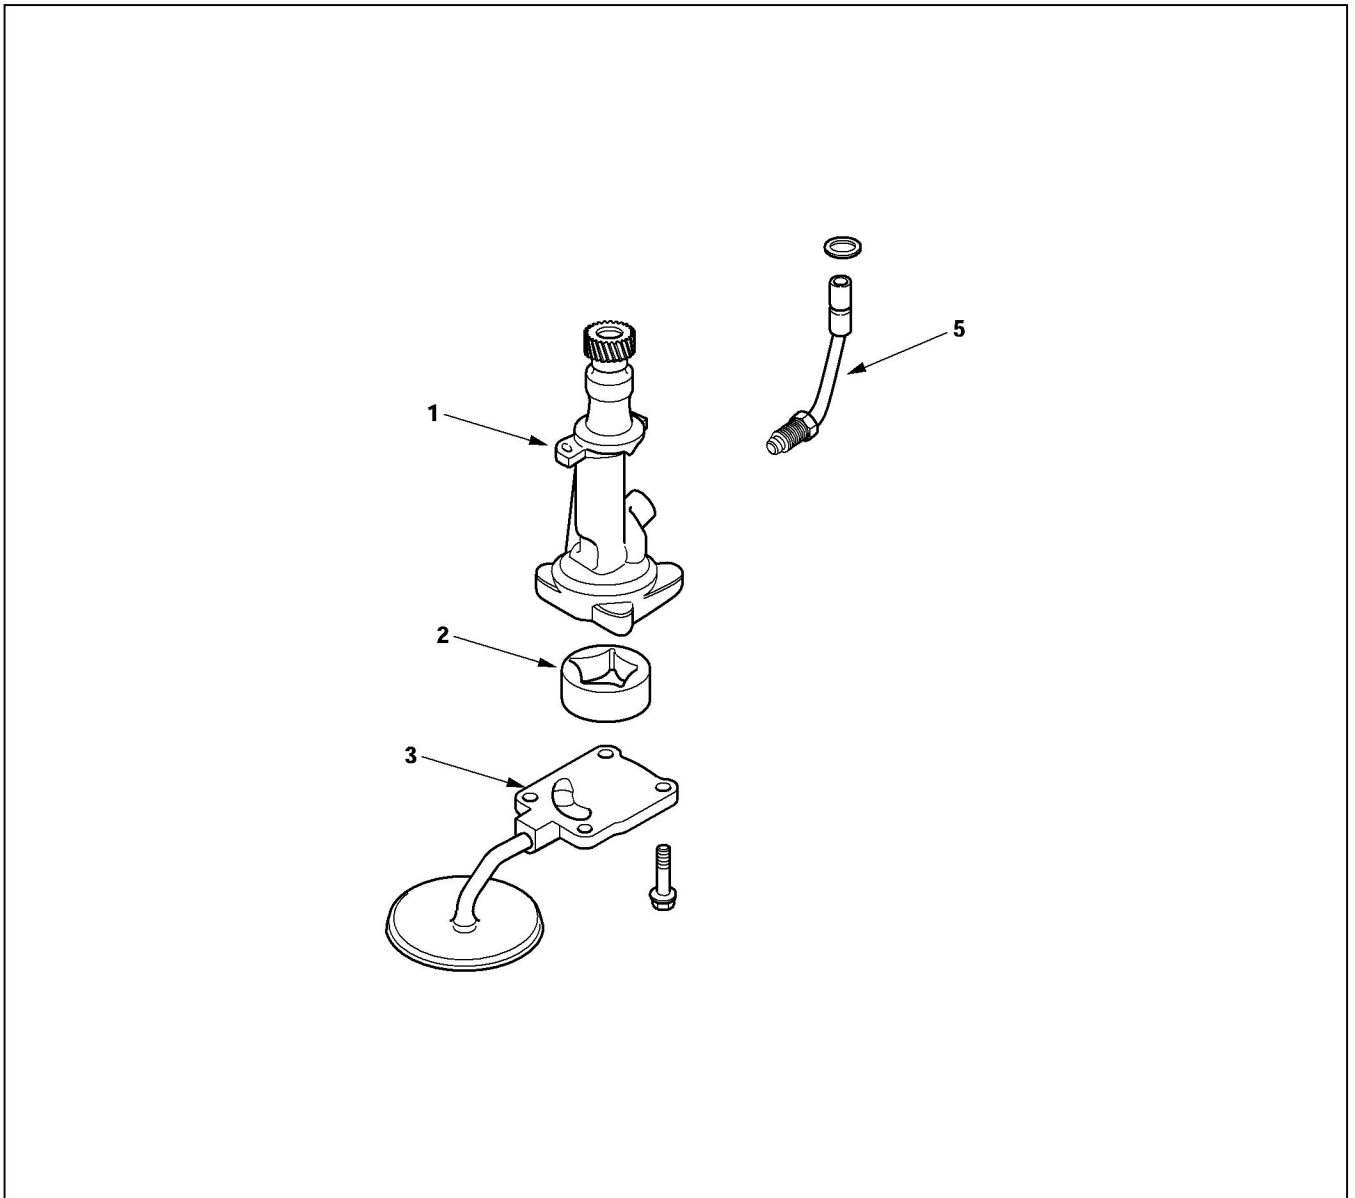

**Reassembly Steps**

- 1. Pump body with rotor and pinion
- 2. Vane
- 3. Pump cover
- 4. Strainer case
- 5. Oil pipe

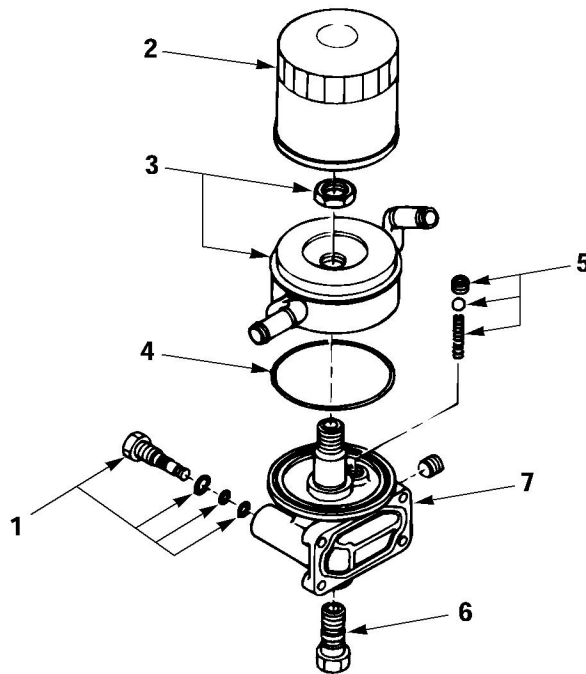**OIL FILTER WITH BUILT-IN OIL COOLER****DISASSEMBLY****Disassembly Steps**


1. Drain plug
2. Cartridge oil filter
3. Oil cooler
4. O-ring
5. Safety valve
6. Relief valve
7. Oil filter body





## INSPECTION AND REPAIR


Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.

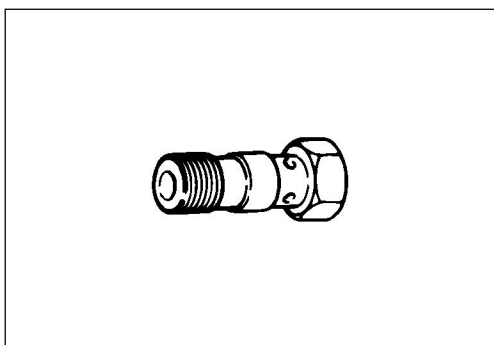

### Regulating Valve

1. Attach an oil pressure gauge to the oil gallery near the oil filter.
2. Start the engine to check the regulating valve opening pressure.

Relief Valve Opening Pressure	kPa(kgf/cm <sup>2</sup> /psi)
420 – 460 (4.3 – 4.7/61 – 67)	

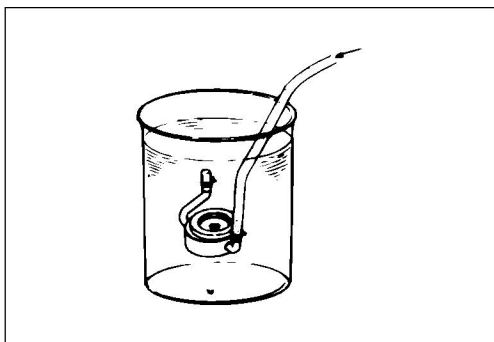


### Oil Cooler

#### Water Leakage At Water Passage

1. Plug one side of the oil cooler water passage.
2. Submerge the oil cooler in water.
3. Apply compressed air (200 kPa (2 kgf/cm<sup>2</sup>/28 psi)) to the other side of the oil cooler water passage.  
If air bubbles rise to the surface, there is water leakage.




## REASSEMBLY

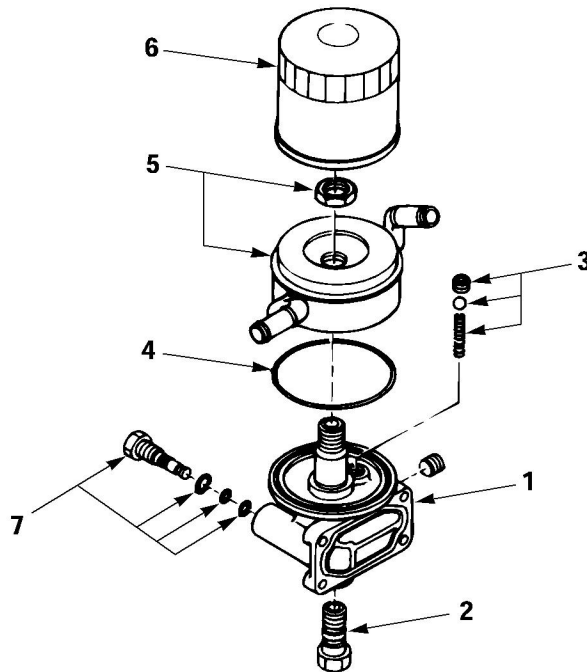**Reassembly Steps**

- 1. Oil filter body
- ▲ 2. Relief valve
- ▲ 3. Safety valve
- 4. O-ring
- ▲ 5. Oil cooler
- ▲ 6. Oil filter cartridge
- ▲ 7. Drain plug



**Important Operations**

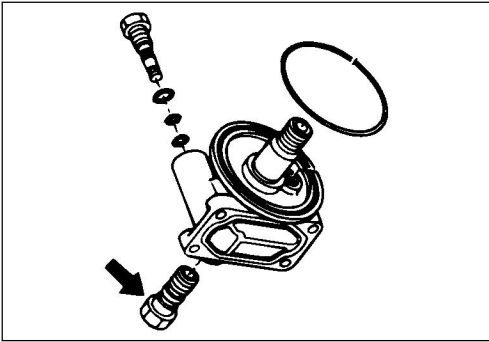


**2. Regulating Vale**



Tighten the relief valve to the specified torque.

Regulating Valve Torque	N·m(kgf·m/lb.ft)
25 – 34 (2.5 – 3.5/18 – 25)	

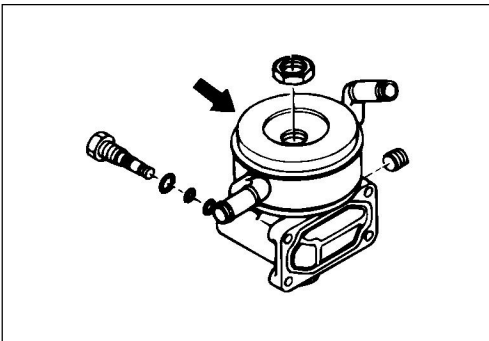


**5. Oil Cooler**

1) Align the oil filter holes with the body knock pins at installation.



2) Tighten the oil cooler to the specified torque.

Oil Cooler Torque	N·m(kgf·m/lb.ft)
25 – 34 (2.5 – 3.5/18 – 25)	

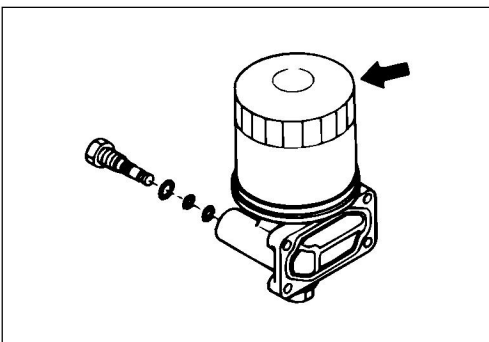


**6. Oil Filter Cartridge**



1) Apply engine oil to the O-ring.

2) Turn in the cartridge oil filter until the filter sealing face makes contact with the O-ring.

3) Turn in the cartridge oil filter an additional 1 and 1/4 of a turn.

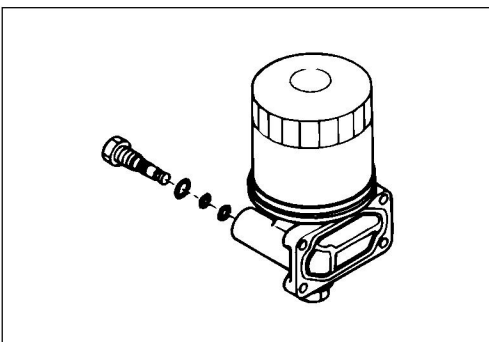

**7. Drain Plug**



Tighten the drain plug to the specified torque.

Drain Plug Torque	N·m(kgf·m/lb.ft)
20 – 30 (2.0 – 3.0/14 – 22)	

**SECTION 7**

**COOLING SYSTEM**

**TABLE OF CONTENTS**


<b>ITEM</b>	<b>PAGE</b>
<b>Main data and specifications</b> .....	<b>122</b>
<b>General description</b> .....	<b>123</b>
<b>Thermostat</b> .....	<b>125</b>

**MAIN DATA AND SPECIFICATIONS**

Item	
Water pump type	Centrifugal impeller
Pump to crankshaft speed ratio (To 1)	1.1
Delivery volume Lit(qts)/min.	100 (105.5)
Total head kPa	60
Pump speed at 3000 rpm	
Water temperature at 30°C (86°F)	
Pump bearing type	Double row shaft
Thermostat type	Wax pellet with jiggle valve
Valve initial opening temperature °C(°F)	82 (180)
Valve full opening temperature °C(°F)	95 (203)
Valve lift at fully open position mm(in.)	8.0 (0.31)

## GENERAL DESCRIPTION

### COOLANT FLOW

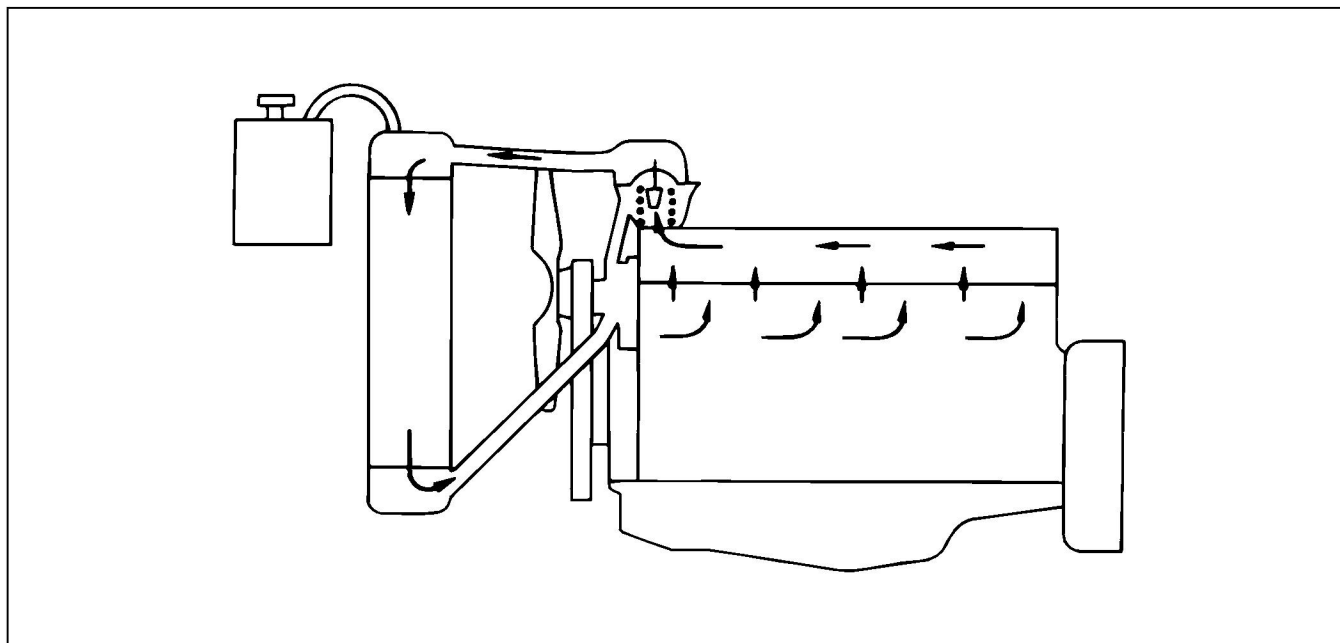


The engine cooling system consists of the radiator, the water pump, the cooling fan, and the thermostat.

To quickly increase cold engine coolant temperature for smooth engine operation, the coolant is circulated by the water pump and thermostat through the by-pass hose and back to the cylinder body. The coolant does not circulate through the radiator.

When the coolant temperature reaches 82°C (180°F), the thermostat will begin to open and a gradually increasing amount of coolant will circulate through the radiator.

The thermostat will be fully open when the coolant temperature reaches 95°C (203°F). All of the coolant is now circulating through the radiator for effective engine coolant.

**WATER PUMP**

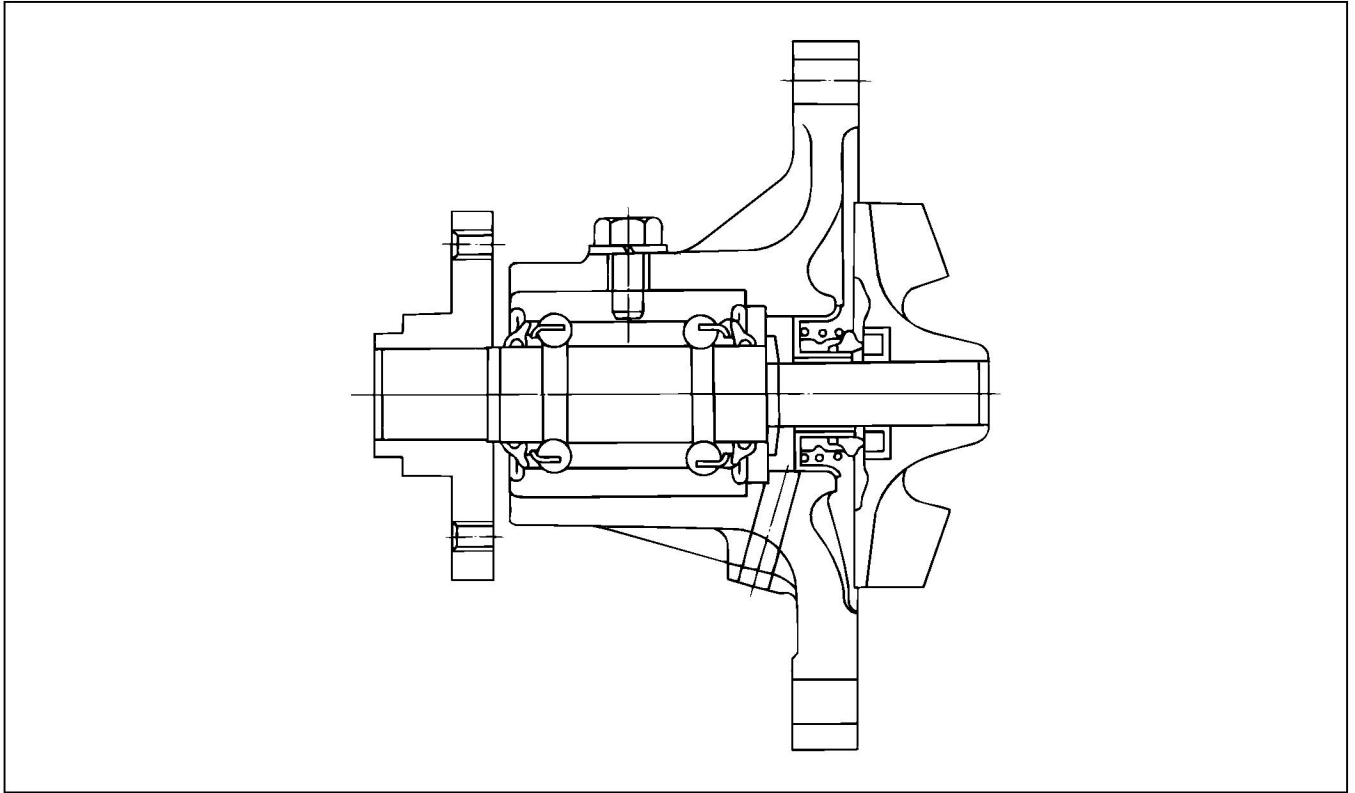


A centrifugal type water pump forcefully circulates the coolant through the cooling system.

## THERMOSTAT



### INSPECTION AND REPAIR


Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.

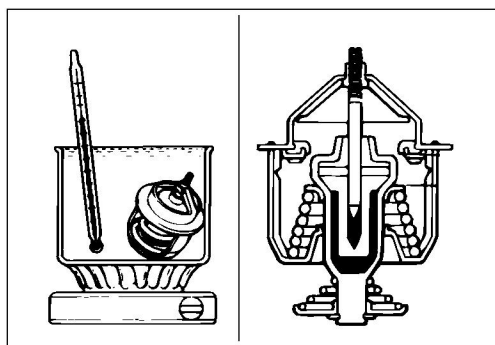

#### Operating Test

1. Completely submerge the thermostat in water.
2. Heat the water.

Stir the water constantly to avoid direct heat being applied to the thermostat.

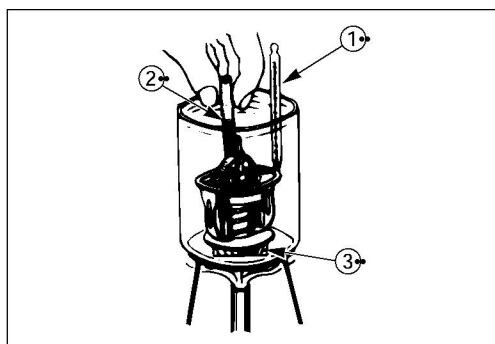

3. Check the thermostat initial opening temperature.

Thermostat Initial Opening Temperature °C(°F)

82 (180)



4. Check the thermostat full opening temperature.

Thermostat Full Opening Temperature °C(°F)

95 (203)



Valve Lift at Fully Open Position mm(in.)

8.0 (0.315)

- ① Thermostat
- ② Agitating Rod
- ③ Wooden Piece



---

# MEMO

A series of horizontal dotted lines for writing.

## SECTION 8

## FUEL SYSTEM

## TABLE OF CONTENTS


ITEM	PAGE
Main data and specifications .....	128
General description .....	129
Injection nozzle .....	132
Injection pump calibration data .....	137

**MAIN DATA AND SPECIFICATIONS**

Item	
Injection pump type	Bosch A type
Plunger outside diameter mm(in.)	9.0 (0.35)
Governor type	RSV variable speed mechanical type
Fuel feed pump type	Single action
Injection nozzle type	Hole type
Number of injection nozzle orifices	5
Injection nozzle orifice inside diameter mm(in.)	1.0 (0.039)
Injection nozzle opening pressure MPa(kg/cm <sup>2</sup> /psi)	18.1 (185/2,630)
Main fuel filter type	Cartridge paper element

## GENERAL DESCRIPTION

### FUEL FLOW

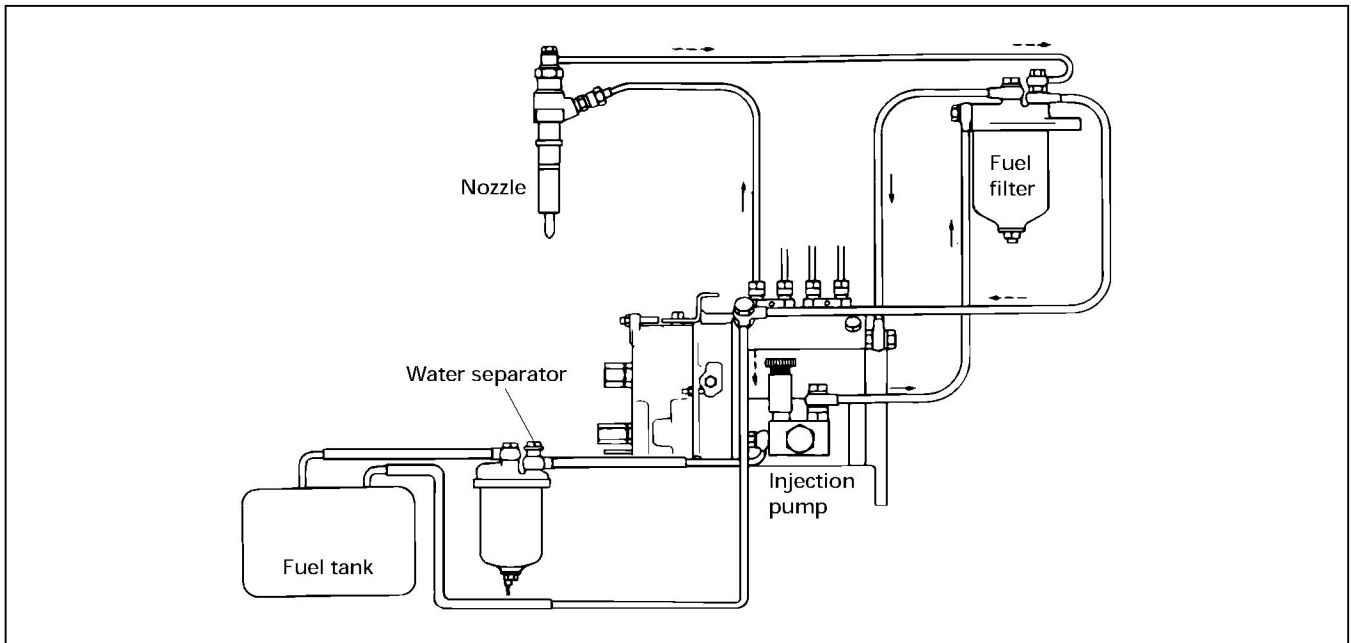


The fuel system consists of the fuel tank, the water separator (if so equipped), the fuel filter, the injection pump, and the injection nozzle.

The fuel from the fuel tank passes through the water separator and the fuel filter where water particles and other foreign material are removed from the fuel.


Fuel, fed by the injection pump plunger, is delivered to the injection nozzle in the measured volume at the optimum timing for efficient engine operation.

## INJECTION NOZZLE

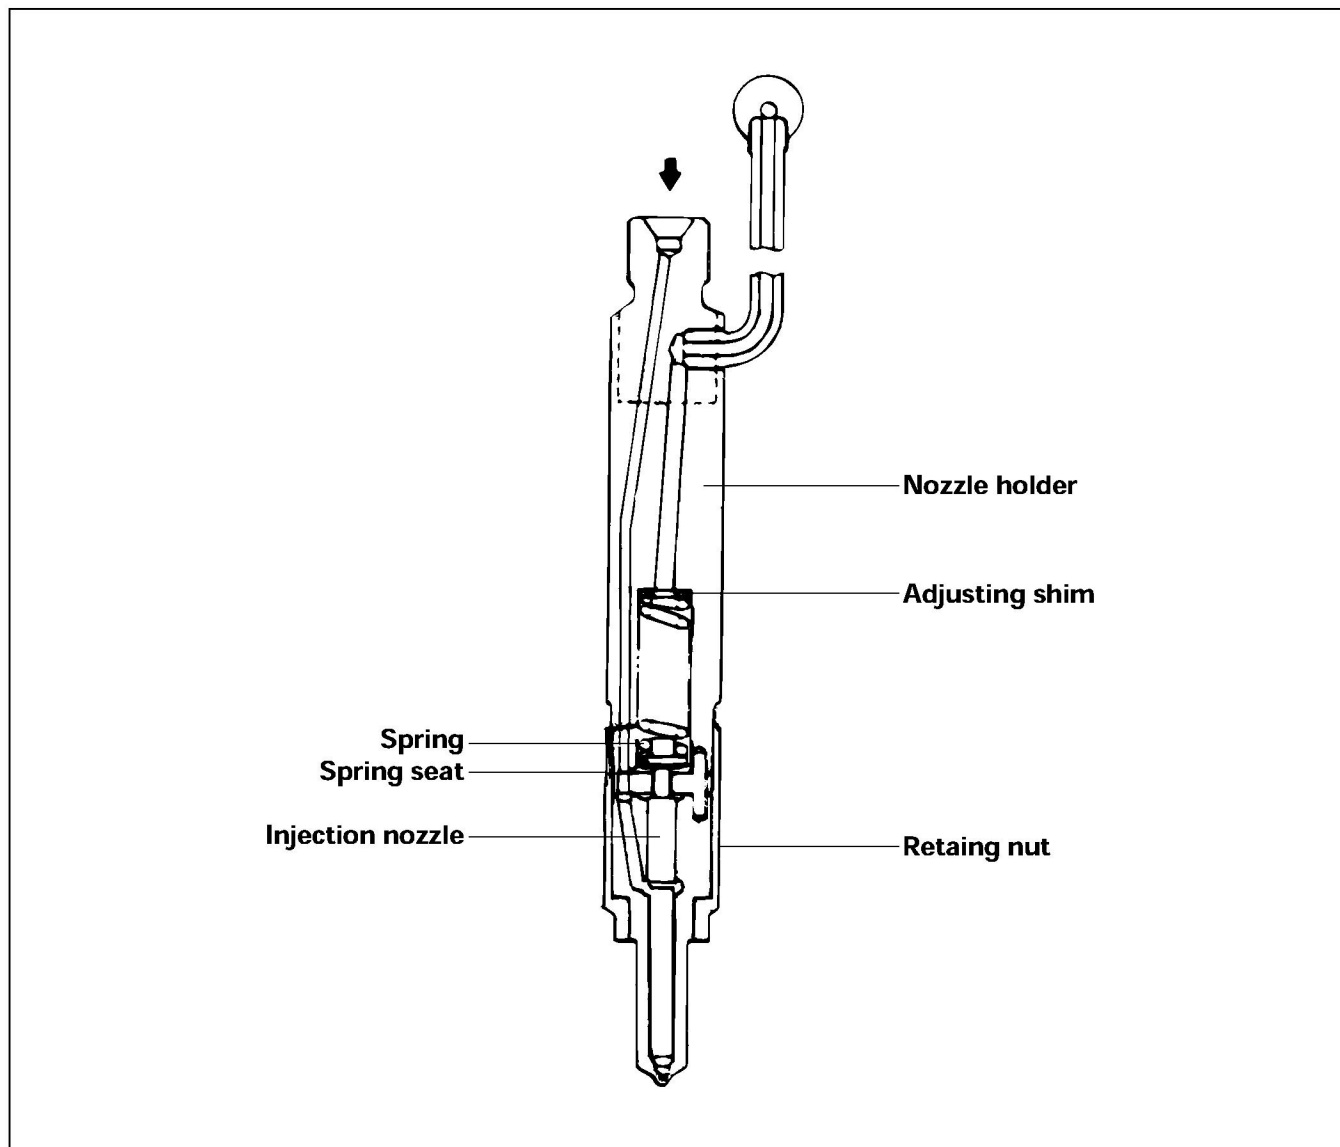

A hole (with 5 orifices) type injection nozzle is used. It consists of the nozzle body and the needle valve assembly.

The injection nozzle sprays pressurized fuel from the injection pump into the combustion chamber through the nozzle body injection orifice.

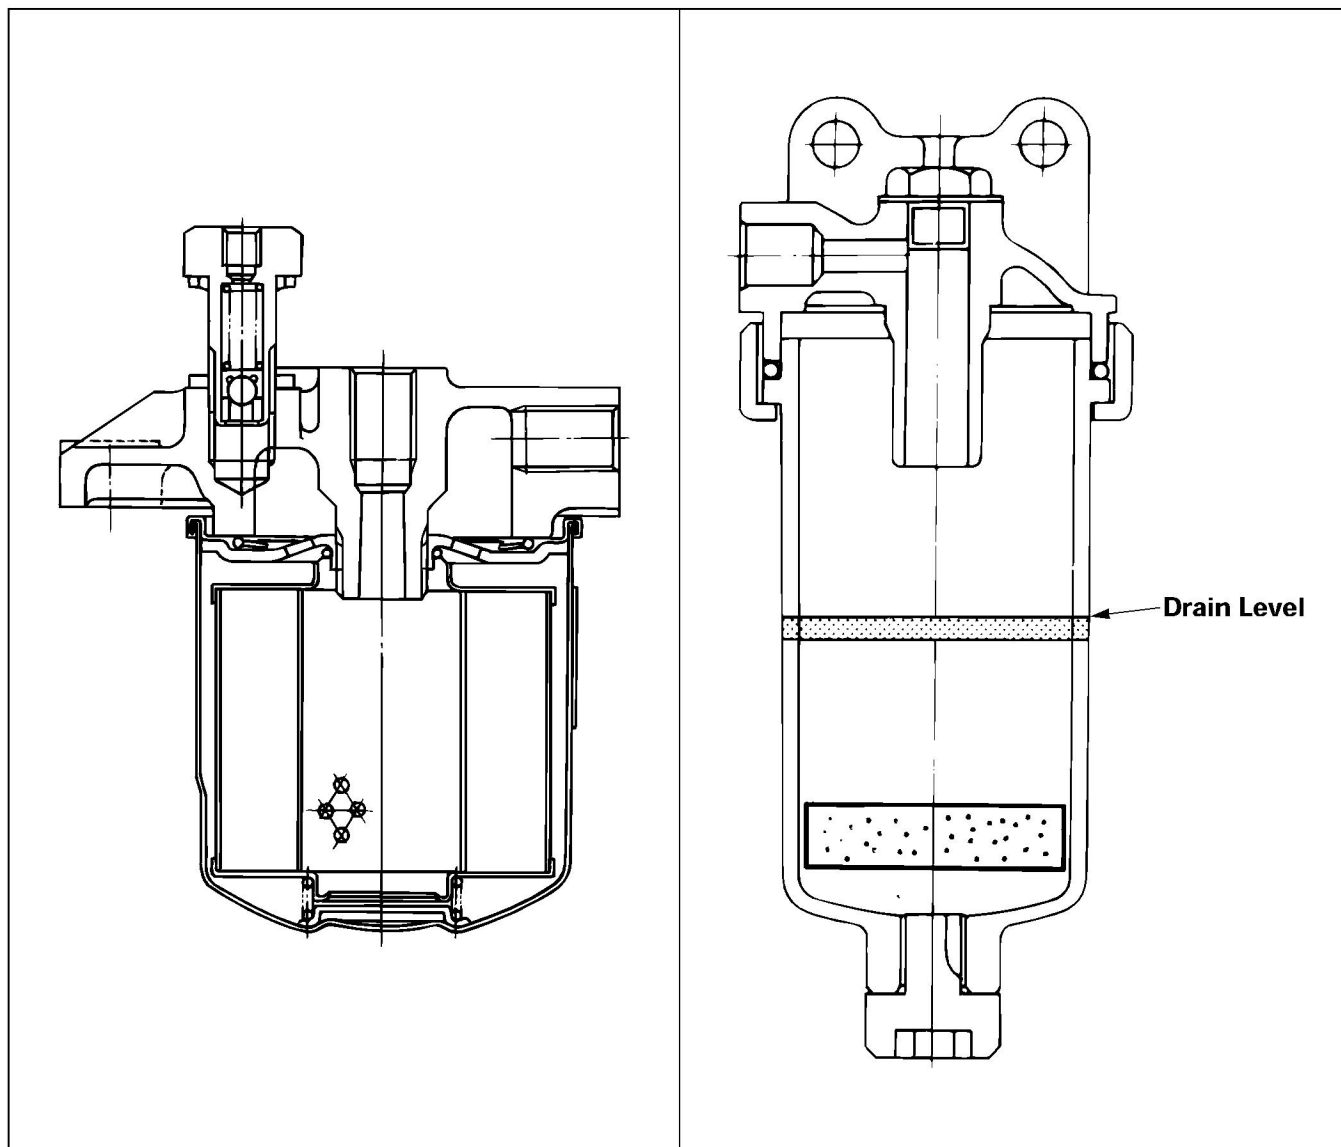**FUEL FILTER AND WATER SEPARATOR**


A cartridge type fuel filter and a water separator are used.

As the inside of the injection pump is lubricated by the fuel which it is pumping, the fuel must be perfectly clean. The fuel filter and the water separator remove water particles and other foreign material from the fuel before it reaches the injection pump.

The water separator has an internal float. When the float reaches the drain level, remind you to drain the water from the water separator.

## INJECTION NOZZLE

### DISASSEMBLY

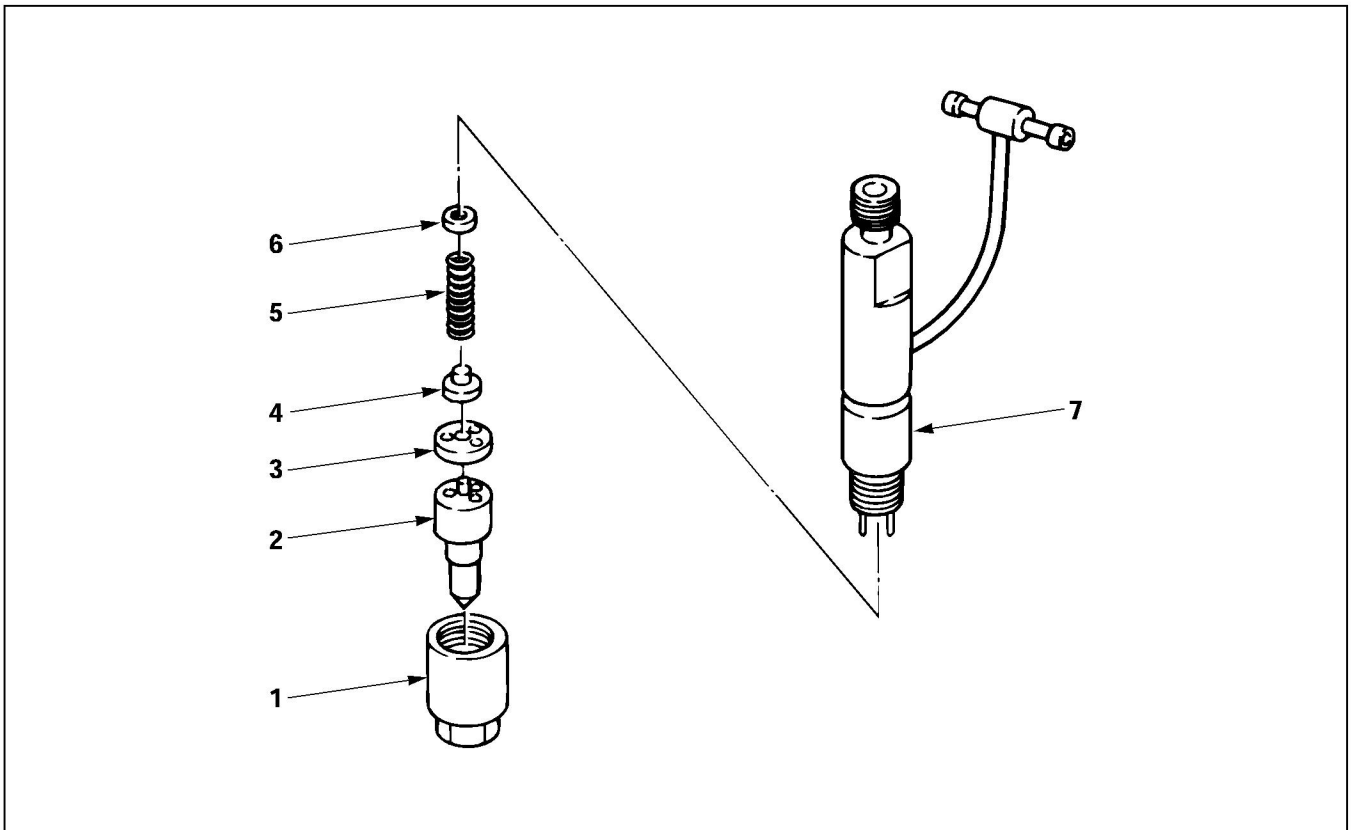


#### Disassembly Steps

1. Retaining nut
- ▲ 2. Injection nozzle
3. Spacer
4. Spring seat
5. Spring
6. Adjusting shim
7. Nozzle holder



## Important Operations

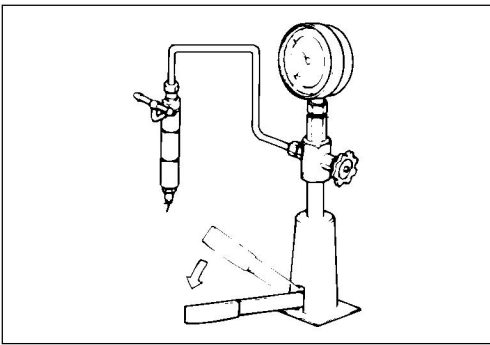


Performance this test before disassembling the injection nozzle.

- 1) Install the injection nozzle to the nozzle tester.
- 2) Use the nozzle tester to apply compressed fuel at 18.1 MPa (185 kgf/cm<sup>2</sup>/2,630 psi) to the injection nozzle.
- 3) Check the area around the nozzle seat for fuel leakage.  
If there is fuel leakage, the injection nozzle and the injection body must be replaced as a set.

### 2. Injection Nozzle

- 1) Remove the injection nozzles from the nozzle holders.  
The nozzle needle valve and nozzle body combinations must be interchangeable.
- 2) Immerse the injection nozzles in a tool tray filled with clean diesel fuel to protect them from dust.

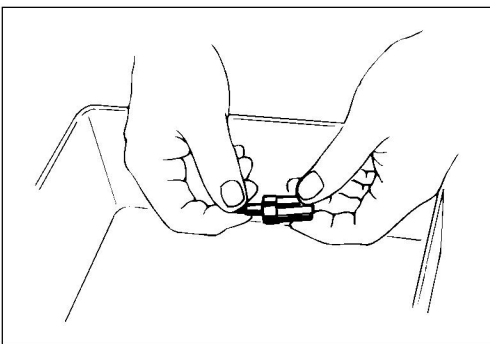






## INSPECTION AND REPAIR


Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.

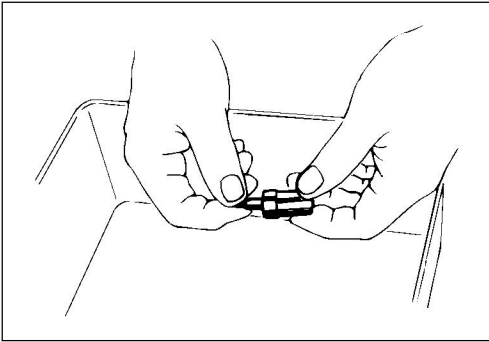

### Injection Nozzle Needle Inspection

1. Remove the nozzle needle from the nozzle body.
2. Carefully wash the nozzle needle and the nozzle body in clean diesel fuel.
3. Check that the nozzle needle moves smoothly inside the injection nozzle body.

If the nozzle needle does not move smoothly, it must be repaired (See "Nozzle Lapping Procedure" below.)

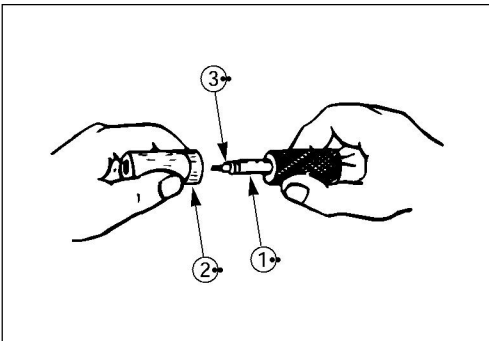

### Nozzle Lapping Procedure

1. Lap the nozzle needle ① and the nozzle body ② by applying a compound of oxidized chrome and animal oil ③.

#### Note:

Do not apply an excessive amount of the oxidized chrome and animal oil compound to the injection needle valve seat area.




2. Carefully wash the needle valve and the nozzle body in clean diesel fuel after lapping.

### Nozzle Body and Needle Valve Inspection


Check the nozzle body and the needle valve for damage and deformation.

The nozzle and body must be replaced if either of these two conditions are discovered during inspection.

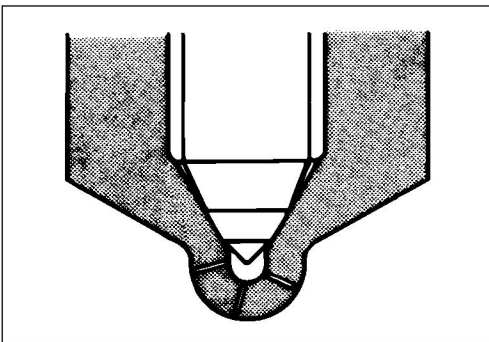



REASSEMBLY

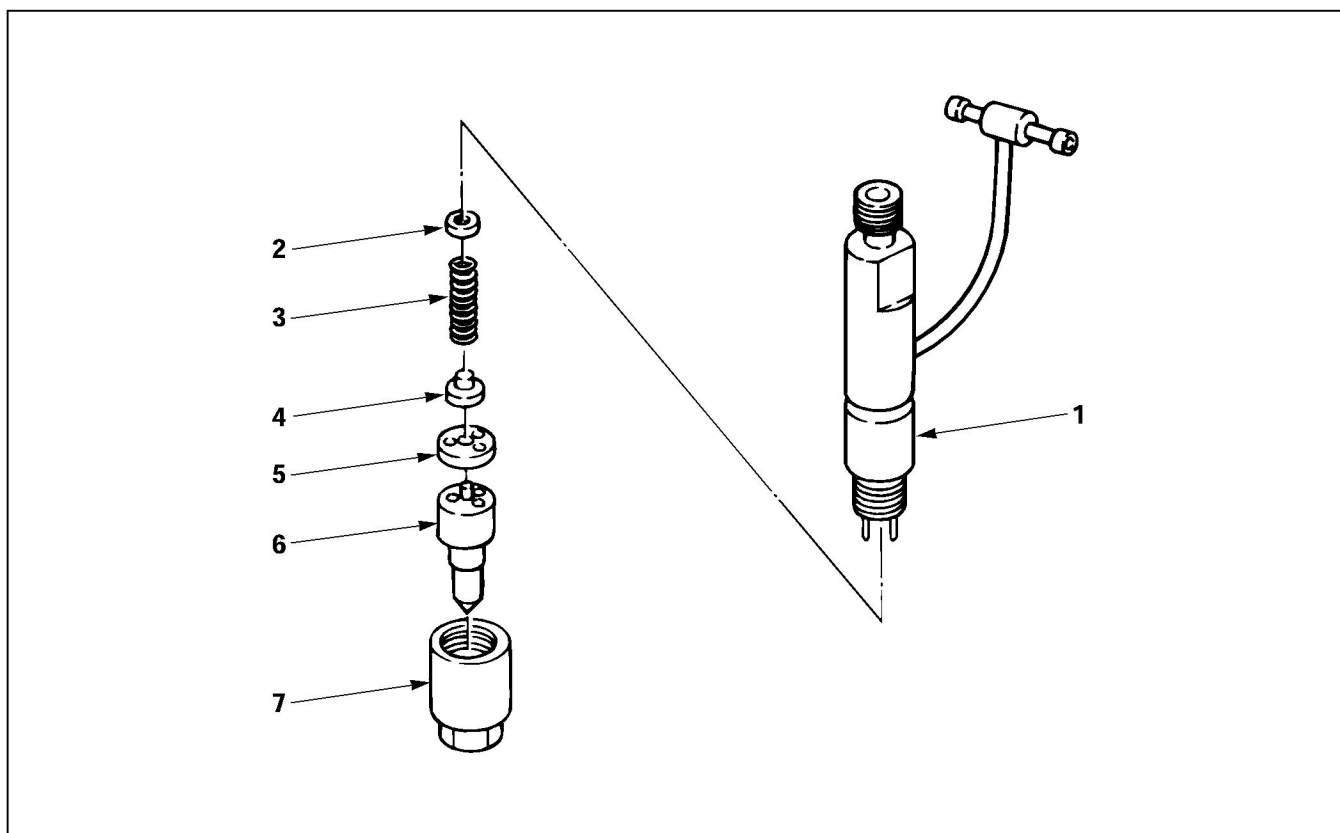

**Reassembly Steps**

- |                     |                     |
|---------------------|---------------------|
| 1. Nozzle holder    | 5. Spacer           |
| ▲ 2. Adjusting shim | 6. Injection nozzle |
| 3. Spring           | ▲ 7. Retaining nut  |
| 4. Spring seat      |                     |





**Important Operations**

**3. Adjust Shim**

Adjust Shim Availability mm(in.)

Range	0.10-0.59 (0.0039-0.0232)
-------	---------------------------

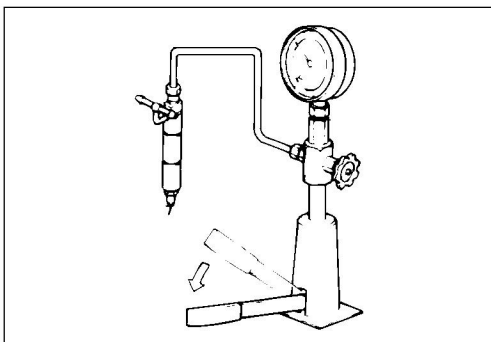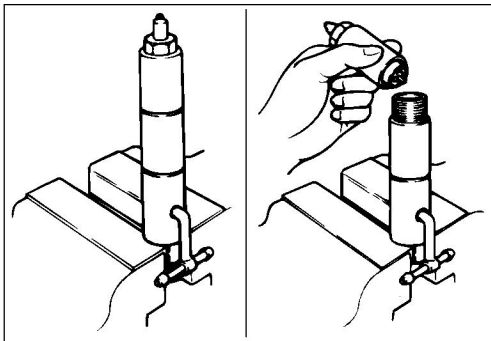

**7. Retaining Nut**



Tighten to the retaining nut to the specified torque.

Retaining Nut Torque N·m(kgf·m/lb.ft)

29 – 39 (3 – 4/22 – 29)
-------------------------

**Injection Nozzle Adjustment**




1. Attach the injection nozzle holder to the injection nozzle tester.
2. Apply pressure to the nozzle tester to check that the injection nozzle opens at the specified pressure.

If the injection nozzle does not open at the specified pressure, install or remove the appropriate number of adjusting shims to adjust it.

**WARNING:**

TEST FLUID FROM THE INJECTION NOZZLE TESTER WILL SPRAY OUT UNDER GREAT PRESSURE. IT CAN EASILY PUNCTURE A PERSON'S SKIN. KEEP YOUR HANDS AWAY FROM THE INJECTION NOZZLE TESTER AT ALL TIMES.

## INJECTION PUMP CALIBRATION DATA

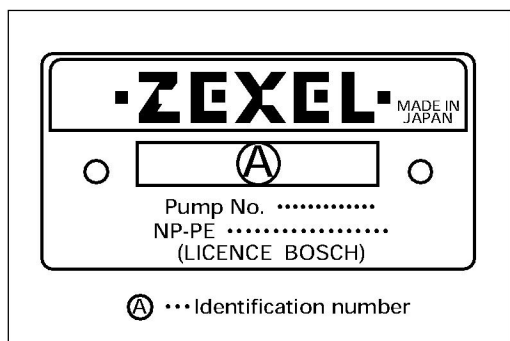

### IDENTIFICATION PLATE AND PRODUCT SERIAL NUMBER

1. Injection pump adjustment and repair should be made by the nearest ZEXEL CORPORATION or ROBERT BOSCH Authorized Service Outlet.
2. When you ask such authorized service outlet the adjustment or repair, the identification Plate and Product Serial Number will give them a necessary clue to get technical data distributed by the manufacturers previously.

Without this data, the Service Outlet will be unable to effectively service your injection pump.

If you are unable to locate the data applicable to your injection pump, please contact ISUZU MOTORS LTD through your machine supplier.

3. Do not remove the Identification Plate and Product Serial Number from the injection pump.

Keep the Identification Plate and Product Serial Number clean at all times. Do not allow it to rust or become illegible.

**Note:** Examples of test conditions and calibration data are as follows.

### TEST CONDITIONS REQUIRED FOR THE FUEL INJECTION AMOUNT ADJUSTMENT

Injection Nozzle		*ZEXEL No.: 105780-0000 Bosch Type No.: DN12SD12T
Injection Nozzle Holder		ZEXEL No.: 105780-2080 Bosch Type No.: EF8511/9
Injection Starting Pressure	MPa(kgf/cm <sup>2</sup> )	17.2 (175)
Injection Line Dimensions	mm(in.)	
Inside Diameter		2.0 (0.079)
Outside Diameter		6.0 (0.236)
Length		600.0 (23.6)
Transfer Pump Pressure		1.6 (22.75)
Testing Diesel Fuel		ISO4113 or SAE Standard Test Oil (SAEJ967D)
Operating Temperature	°C(°F)	40 – 45 (104 – 113)
Pump Rotation Direction		Clockwise (Viewed from the drive side)

**INJ. PUMP CALIBRATION DATA**

Ass'y No. 000000-0000  
 Date : 2  
 Company : ISUZU  
 No. 0-00000-000-0

ENGINE MODEL 4JB1PAW-01

Injection pump : PES4A Governor : EP/RSV Timing device :  
 000000-0000 000000-0000

**1. Test Conditions :**

Pump rotation : clockwise (viewed from drive side)  
 Nozzle : 000000-0000 No. holder : 000000-0000  
 (BOSCH Type No. DN12SD12T) (BOSCH Type No. EF8511/9A)  
 Nozzle opening pressure : 175 kgf/cm<sup>2</sup> Injection pump pressure : 1.6 kgf/cm<sup>2</sup>  
 Injection pipe : Inner Dia. 2 mm Length 600 mm  
 Test Oil : ISO4113 or SAE Standard (SAE J967d) Oil Temp. : 40<sup>+5</sup> °C  
 Overflow valve opening pressure : 1.3 kgf/cm<sup>2</sup>

**2. Injection Timing :**

Pre-stroke : No. 1 Plunger 3.3 ± 0.05 mm Note : Adjust with control rod position of mm  
 Injection order : 1  $\frac{\text{---}}{90^{\circ} \pm 30'}$  3, 1  $\frac{\text{---}}{180^{\circ} \pm 30'}$  4, 1  $\frac{\text{---}}{270^{\circ} \pm 30'}$  2 (interval : ° ± 30')  
 Plungers are numbered from the Driver side.  
 Tappet clearance : Bolt adjustment type ; More than 0.3 mm for all cylinders.  
 Shim adjustment type ; Manually rotate the camshaft 2~3 times and confirm that it rotates smoothly.

**4. Injection Quantity :**


Adjusting point	Rod Position (mm)	Pump Speed (r.p.m)	Injection Q'ty (cc/1000 strokes)	Max. var bet. cyl (%)	Fixed	Remarks
A	8.3	1,500	64 - 65	± 2.5	Lever	Basic
C	Approx. 6.6	500	9.5 - 13.5	± 15	Rack	
D	Above 14.0	100	(70 - 85)	-	Lever	

**5. Timing advance specification :**


Pump Speed (r.p.m)							
Advance Angle (deg.)							

### GOVERNOR ADJUSTMENT

#### Full Adjustment

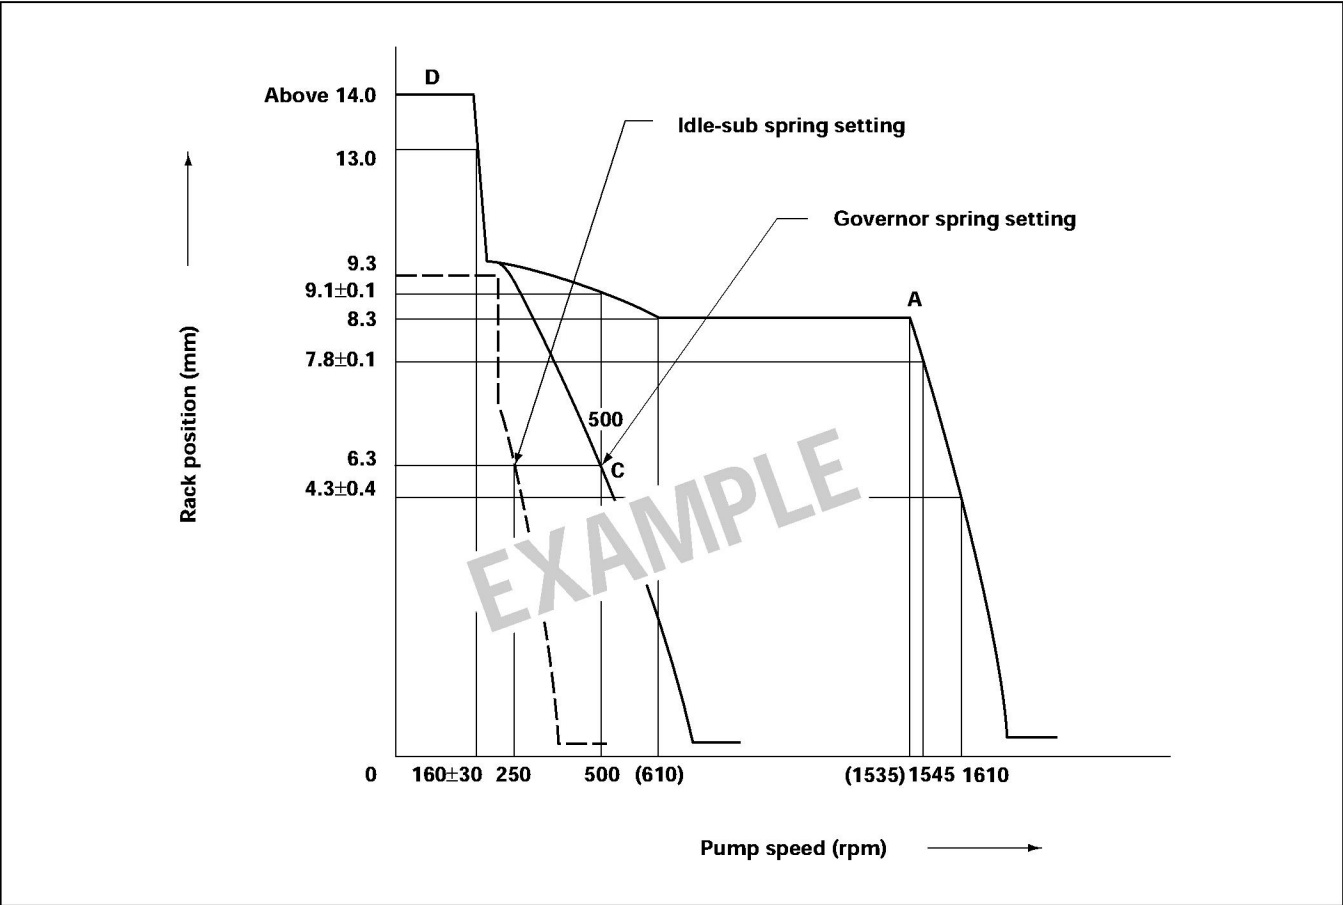

#### Speed Lever Angle

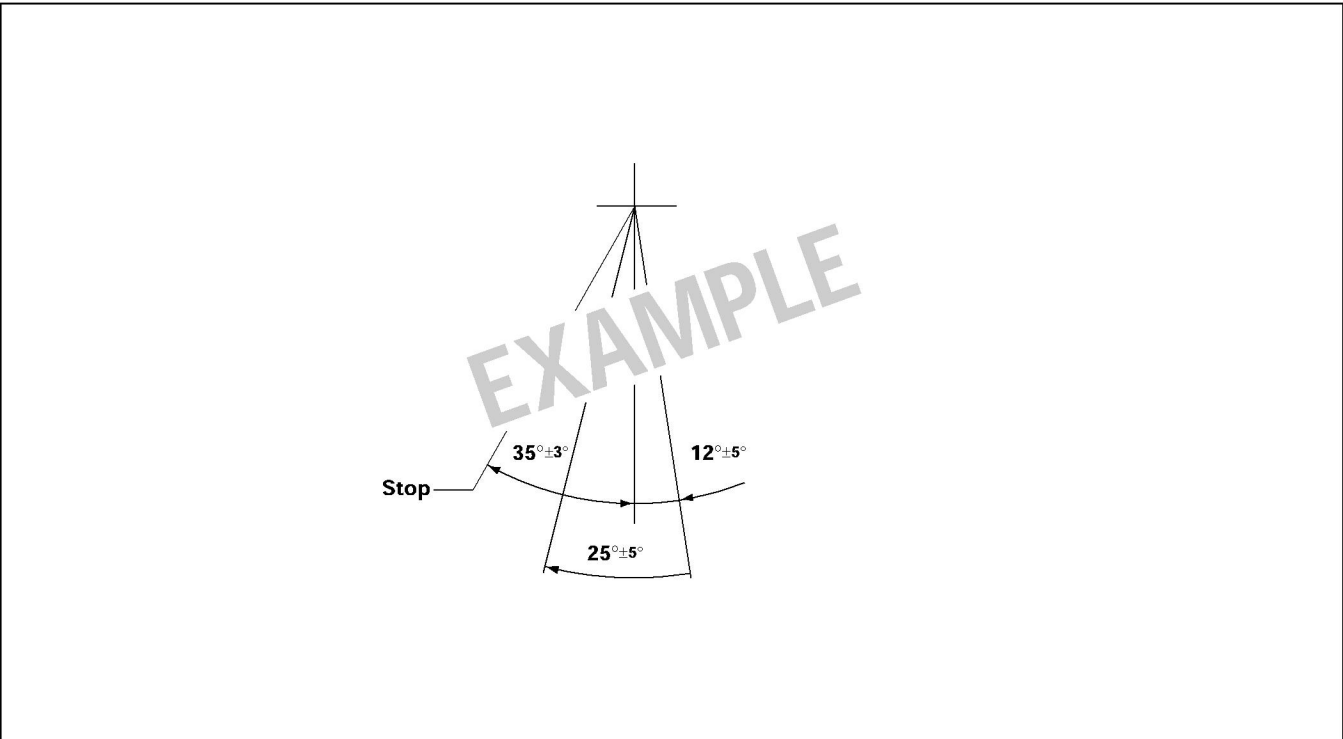

---

# MEMO

A series of horizontal dotted lines for writing.

**SECTION 9**


**ENGINE ELECTRICALS**

**TABLE OF CONTENTS**

<b>ITEM</b>	<b>PAGE</b>
<b>Starter</b> .....	<b>142</b>
<b>Alternator</b> .....	<b>157</b>



## STARTER

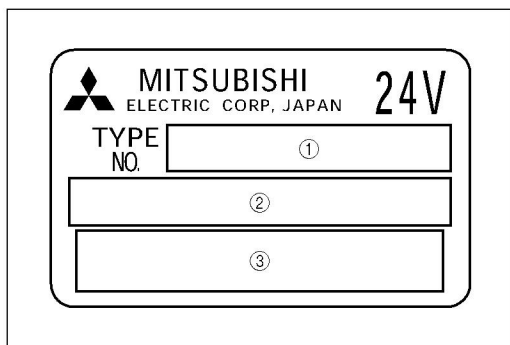

### STARTER IDENTIFICATION

MITSUBISHI starter motor is identified by name plate attached to the yoke. (Illustration)

- ① Manufacturer's type
- ② Isuzu part number
- ③ Bar code

**Note:**


Always check the identification number before beginning a service operation.

Applicable service data will vary according to the identification number. Use of the wrong service data will result in starter damage.

## MAIN DATA AND SPECIFICATION

Isuzu Part No.		897204-7130	897137-4781
Mitsubishi code No.			
Rated voltage	V	12	24
Rated output	kW	2.2	3.2
Rating	Sec	30	
Direction of rotation (Viewed from the pinion side)		Clockwise	
Clutch type		Roller	
Terminal voltage (No. Load)	V	11	23
Minimum current (No. Load)	A	140	80
Starter motor minimum operating speed (No. Load)	rpm	3800	3750
Pinion gear			
Modules		2.75	
Number of teeth		11	
Outside diameter	mm(in.)	38.5 (1.52)	
Yoke outside diameter	mm(in.)	81.6 (3.21)	
Brush length			
Standard	mm(in.)	18 (0.71)	
Limit	mm(in.)	11 (0.43)	
Brush spring standard fitting load	N(kgf)	26.7-36.1(2.7-3.7)	
Commutator			
Outside diameter			
Standard	mm(in.)	32 (1.26)	
Limit	mm(in.)	31.4 (1.24)	
Depth of undercut mica			
Standard	mm(in.)	0.5 (0.02)	
Limit	mm(in.)	0.2 (0.008)	


GENERAL DESCRIPTION

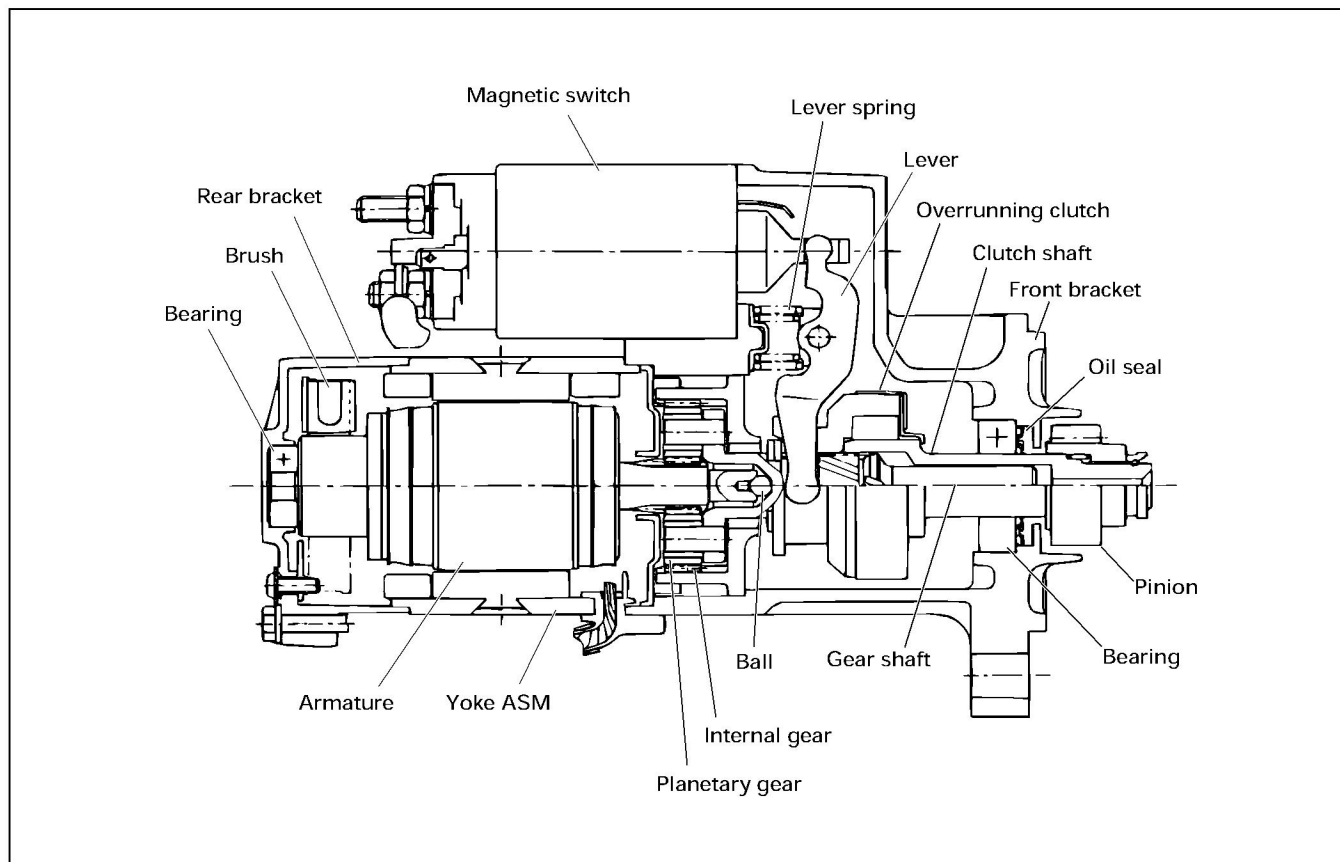



## DISASSEMBLY

Disassembly Diagram: Disassemble in numerical orders.

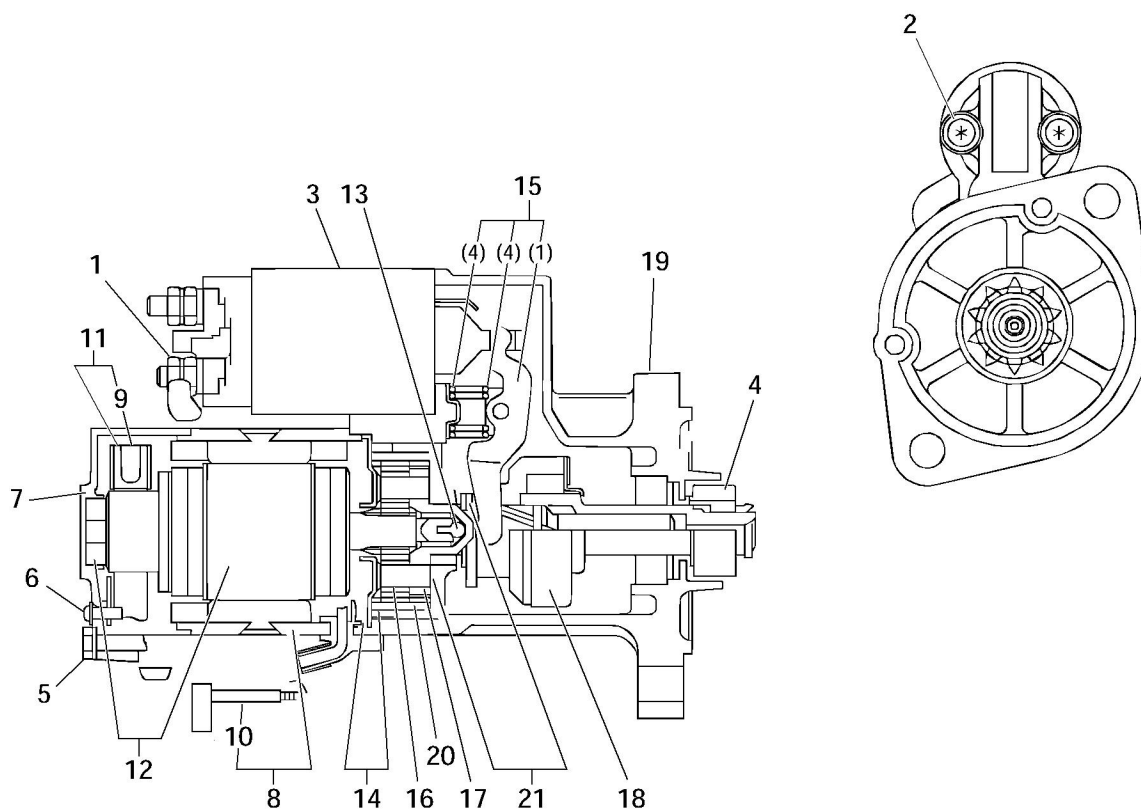

### Disassembly Steps


- |                      |                             |
|----------------------|-----------------------------|
| 1. Nut : M-Terminal  | 14. Plate & packing         |
| 2. Screw             | 15. Lever ASM               |
| 3. Magnetic switch   | (1) Lever                   |
| 4. Pinion            | (2) Packing (not described) |
| 5. Bolt              | (3) Plate (not described)   |
| 6. Screw             | (4) Lever spring            |
| 7. Rear bracket      | 16. Planetary gear          |
| 8. Yoke ASM          | 17. Gear shaft              |
| 9. Brush spring      | 18. Clutch                  |
| 10. Brush            | 19. Bracket                 |
| 11. Brush holder ASM | 20. Internal gear           |
| 12. Armature ASM     | 21. Washer                  |
| 13. Ball             |                             |

Assembly: Assemble in reverse procedure to the disassembly.




### Disassembly

When disassembling the starter motor, to make reassembling easier, mark to match the magnet switch and the yoke.

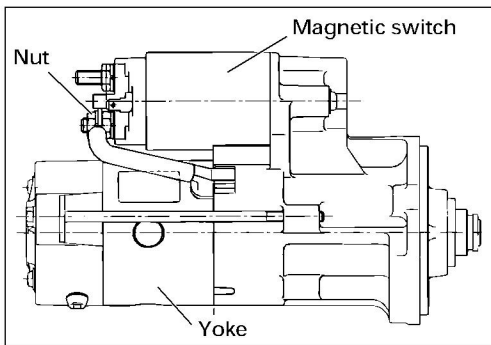

#### 1. Nut (M terminal)

Remove the nut of the magnet switch "M" terminal and then the cable.

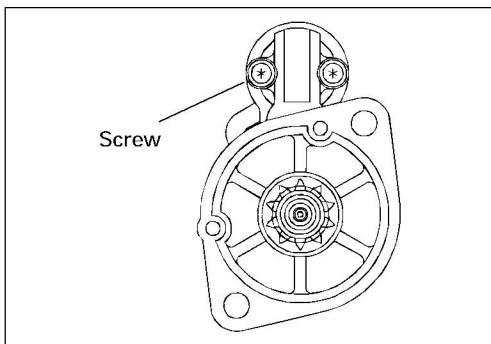

#### 2. Screw

Remove the screw.

#### 3. Magnet Switch


Remove the magnet switch and the plunger.

#### 4. Pinion


Removing the pinion requires simple tools. A set consists of 3 parts (1 bolt, 1 nut and 1 small tin plate).

These tools are not used during assembly. The pinion is assembled using the puller.

- Pull the lever with the bolt instead of the plunger and push out to where the pinion can be moved forward. In order to fix the lever and the pinion, fix the bolt to the small plate.

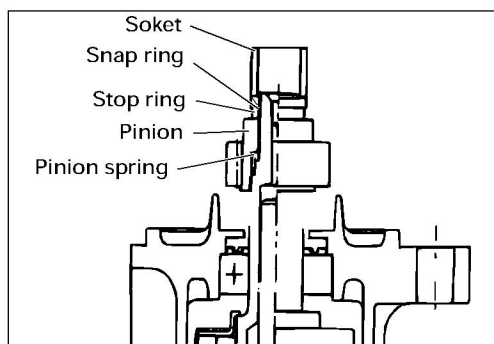

- Hold the adjustable socket on the stop ring. Hit the socket with a hammer and remove the stop ring, expose the snap ring, then remove the snap ring, the stop ring, the pinion, and the pinion snap ring.
- The snap ring is not reusable.

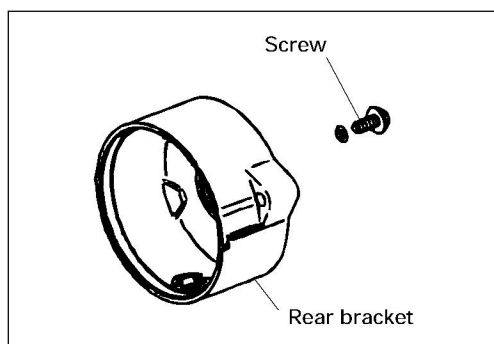


**5. Bolt**

**6. Screw and Brush holder**

Remove the bolt and the screw.

**7. Rear bracket**


Remove the rear bracket.

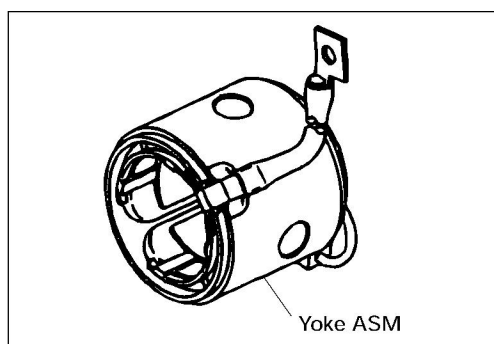

**8. Yoke ASM**

Hold the socket (major diameter 32mm) on the armature commutator and remove the yoke ASM as you slide the brush onto the socket.

- Removing this way makes reassembling easier and inspection of the brush rotation can be conducted with the brush removed from the socket.

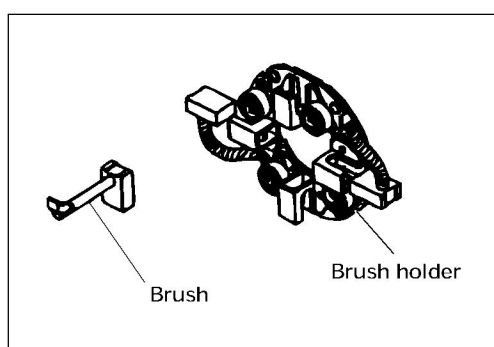


**9. Brush spring**

**10. Brush**

Pull up the brush spring and remove the brush.

**11. Brush holder**

After removing the brush, remove the brush holder.

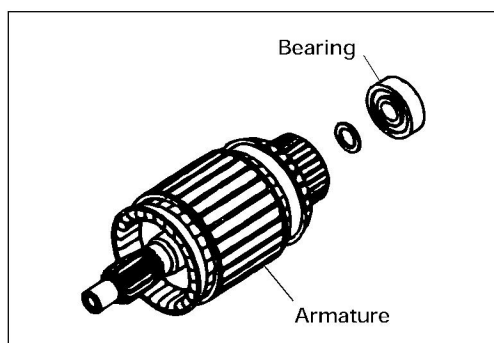


**12. Armature ASM**

Pull out the armature from the planetary gear and remove the bearing with the puller.

**13. Ball**

Be careful not to lose the ball.

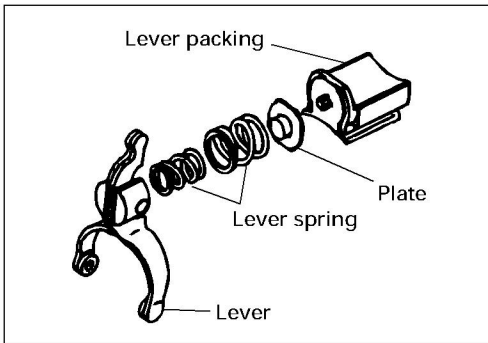


**14. Plate**

Remove the plate and the packing.

**15. Lever ASM**


Remove the lever packing, the plate and the two lever springs.

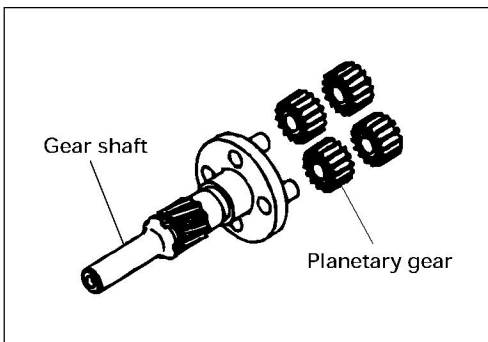

**16. Planetary gear**

Remove the four packing, the plate and the two lever springs.


**17. Gear shaft**

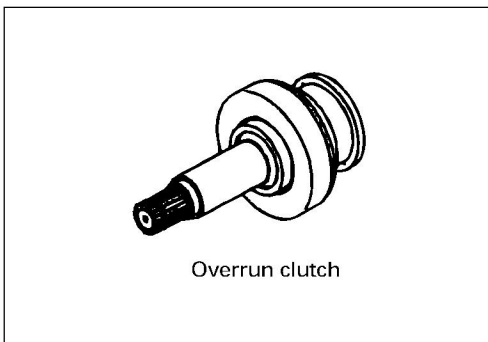

**18. Clutch; Overrun**

**19. Bracket; Front**

Put the gear shaft, the overrunning clutch and the lever together, then remove them from the front bracket.

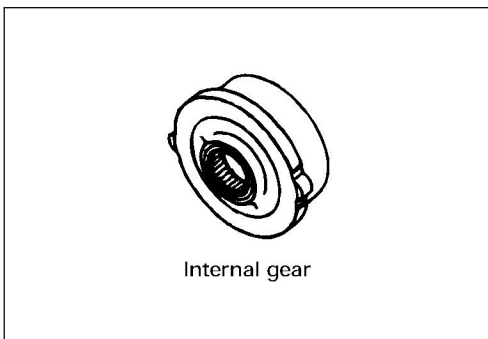

**20. Internal gear**


**21. Washer**

When the two E type washers are removed, it divides into the overrunning clutch, the internal gear, the washer and the gear shafts.



## INSPECTION AND REPAIR

Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.

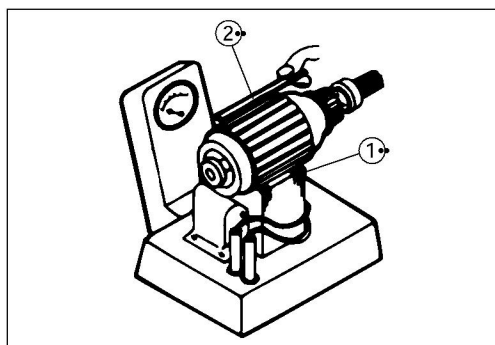


### ARMATURE

#### Armature Short Circuit Test

1. Place the armature on a growler tester ①.
2. Hold a hack saw blade ② against the armature core while slowly rotating the armature.

If the armature is short circuited, the hack saw blade will vibrate and will be attracted to the armature core.

A short circuited armature must be replaced.

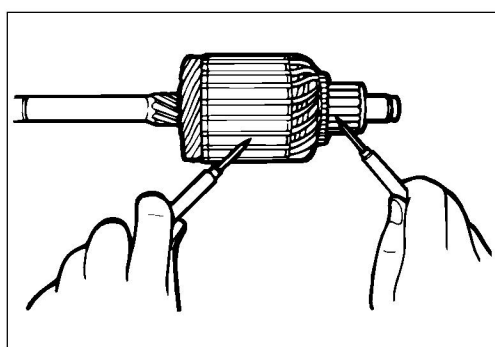


#### Armature Winding Ground Test



Check for continuity across the commutator segments and the core.

If there is continuity, the armature is internally grounded due to insulation failure and must be replaced.

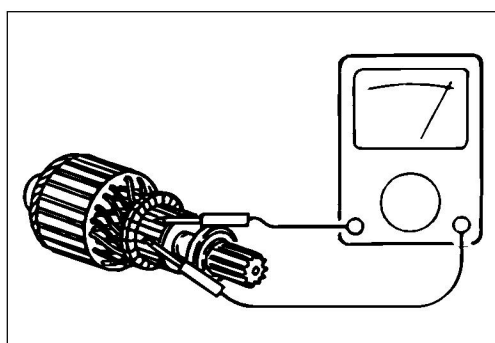


#### Armature Winding Continuity Test



Check for continuity across the commutator segment.

If there is no continuity, the armature coil is open and must be replaced.



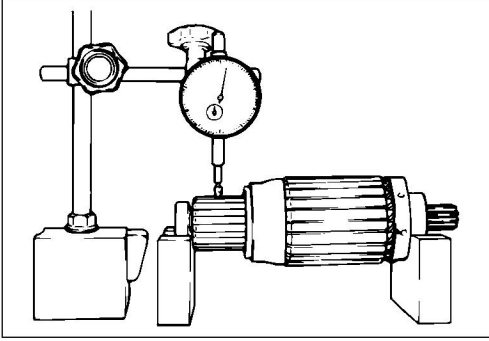

**Commutator Run-Out Test**




Use a dial indicator and a V-block to measure the commutator runout.

If the measure value exceeds the limit, the commutator must be replaced.

Commutator Run-Out mm(in.)

Standard	Limit
0.02 (0.0008)	0.05 (0.002)

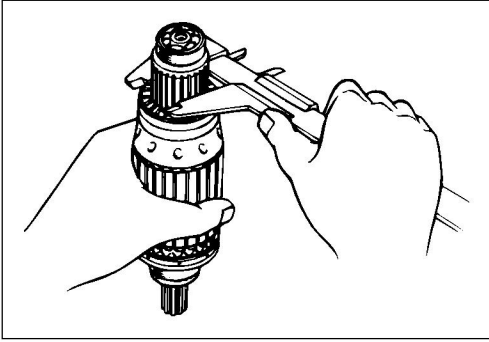

**Commutator Outside Diameter Measurement**




Use a vernier caliper to measure the commutator outside diameter.

If the measured value exceeds the limit, the armature must be replaced.

Commutator Outside Diameter mm(in.)

Standard	Limit
32 (1.26)	31.4 (1.24)

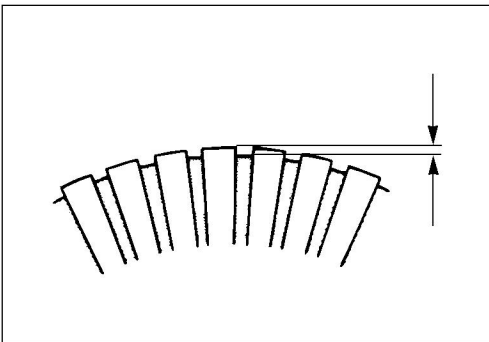

**Segment Mica Depth Measurement**




Use a depth gauge to measure the segment mica depth.

If the measured value exceeds the limit, the segment mica must be undercut.

Segment Mica Depth mm(in.)

Standard	Limit
0.5 (0.02)	0.2 (0.008)

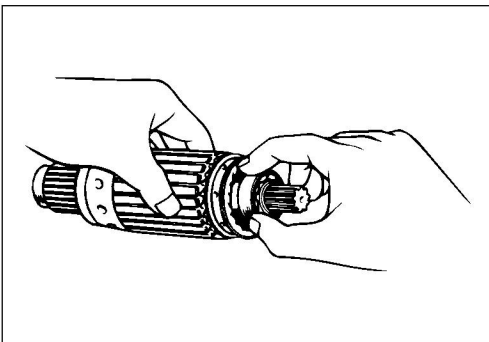


**Bearing Inspection**



Visually inspect the bearing.

If the bearing is worn or damaged, it must be replaced.

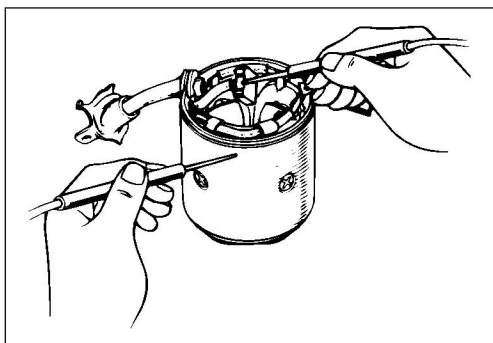

## YOKE

### Field Winding Ground Test


Use a circuit tester to check the field winding ground.

1. Touch one probe to the brush field winding end.
2. Touch the other probe to the bare surface of the yoke body.

There should be no continuity.

If there is continuity, the field windings are grounded.

Repair or replace the field windings.

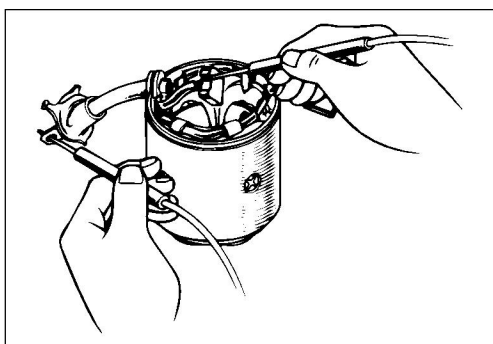

### Field Winding Continuity Test


Use a circuit tester to check the field winding continuity.

1. Touch one probe to the field winding lead wire.
2. Touch the other probe to the brush.

There should be continuity.

If there is no continuity, the field windings are open.

Repair or replace the field windings.

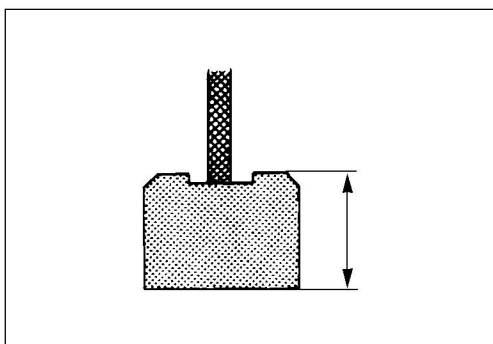

## BRUSH AND BRUSH HOLDER




### Brush Length Measurement

Use a vernier caliper to measure the brush length.

If the measured value exceeds the limit, the brush and/or the yoke must be replaced.

Brush Length mm(in.)

Standard	Limit
18 (0.71)	11 (0.43)

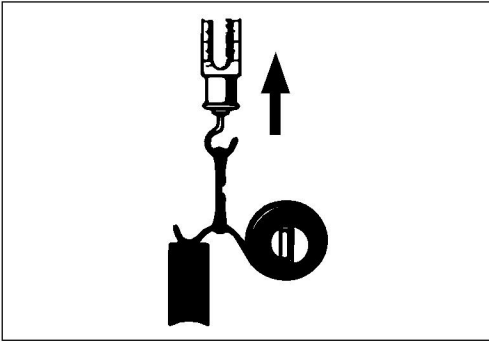


### Brush Spring Inspection

Visually check the brush spring for weakness and rusting.

Replace the brush spring if it is weak or rusted.

Use a spring balancer to measure the spring tension.

If the measured valve exceeds the limit, the brush spring must be replaced.

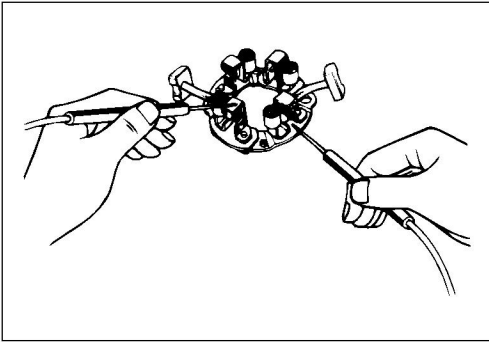


### Brush Holder Insulation Test

Use a circuit tester to check the brush holder insulation.

1. Touch one probe to the field winding lead wire.
2. Touch the other probe to the brush.


There should be no continuity.

If there is continuity, the brush holder must be repaired or replaced.

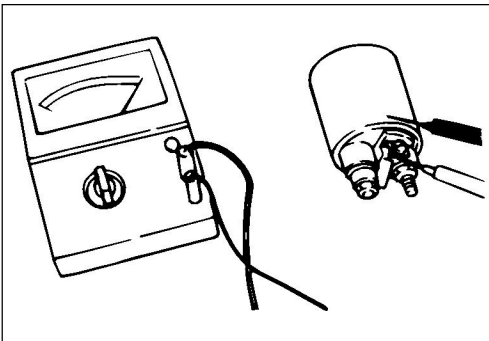

### MAGNETIC SWITCH

Check for continuity across the magnetic switch "S" terminal and coil case. If no continuity exists, the shunt coil is open and should be replaced.

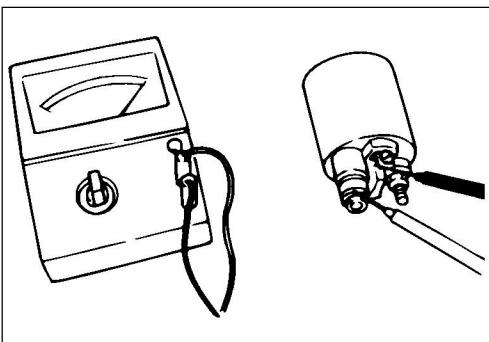

Check for continuity across magnetic switch "S" terminal and "M" terminal. If no continuity exists, series coil are open and should be replaced.

## OVERRUNNING CLUTCH AND PINION GEAR

Hold the overrunning clutch housing and turn the pinion by hand. If it turns one way with slight resistance but not the other, the condition is normal. If not, replace the overrunning clutch. If abrasions or damage is found during inspection of the pinion, replace it.


- The inside of the overrunning clutch is filled with grease. There may be a danger of spilling the grease when washed with detergent used for cleaning off oil and kerosene.

## FRONT BRACKET

If any oil spillage or damage is found during inspection of the bearing and the oil seal, replace with front bracket assembly (including bearing and oil seal).

## INTERNAL GEAR AND PLANETARY GEAR

If any abrasions or damage is found during inspection of the gear tooth, replace the internal gear or the planetary gear.

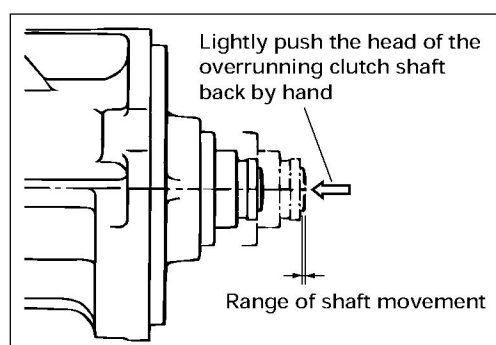

## LEVER

Inspect both ends (where it touches the overrunning clutch) of the lever for abrasion. Incomplete engagement may result if the lever is worn, making the pinion ineffective.

When the projection position of the pinion is outside the reference value, adjustment cannot be made, so replace the lever.

Projection Position of the Pinion	mm(in.)
	0.5 – 2.0



## ASSEMBLY

Although assembly is done in the reverse procedure to disassembly, some points need to be explained.


### 1. Oiling section and tightening torque

Refer to the specifications attached. (P.155)

- Recommended grease is MUL TEMP#6129 (Kyodo Yushi), Molykote RAG-650 (Dow Corning) or equivalent.

### 2. Tightening torque


Refer to the specifications attached. (P.155)

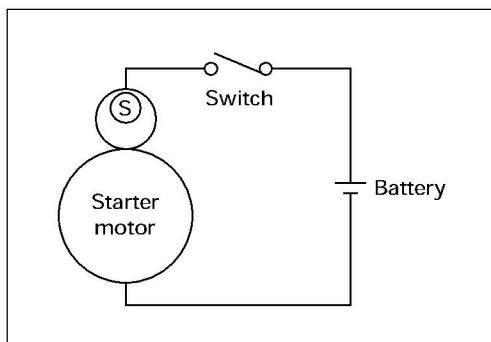

### 3. Inspection of the projection position of the pinion

After reassembling the cranking motor, inspect the projection position of the pinion.

Projection Position of the Pinion	mm(in.)
	0.5 - 2.0

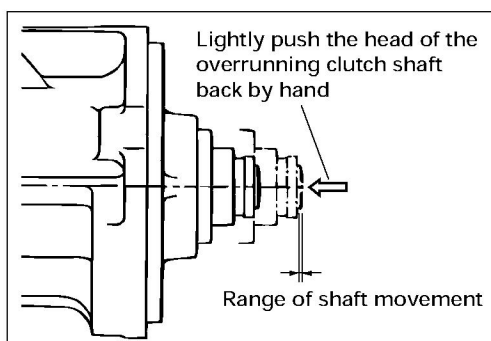


#### Measuring method

As shown in the diagram, connect the starter motor to the battery.

- When the switch is turned on, the pinion will move forward to the cranking position. At this time, the armatures may also turn, so care is needed.
- Lightly push the head of the overrunning clutch shaft by hand and measure the movement (return) of the clutch shaft.

If the value is within 0.5-2.0, it is in the normal position. If it is outside the limit, replace the lever.

## OILING SECTION AND TIGHTENING TORQUE

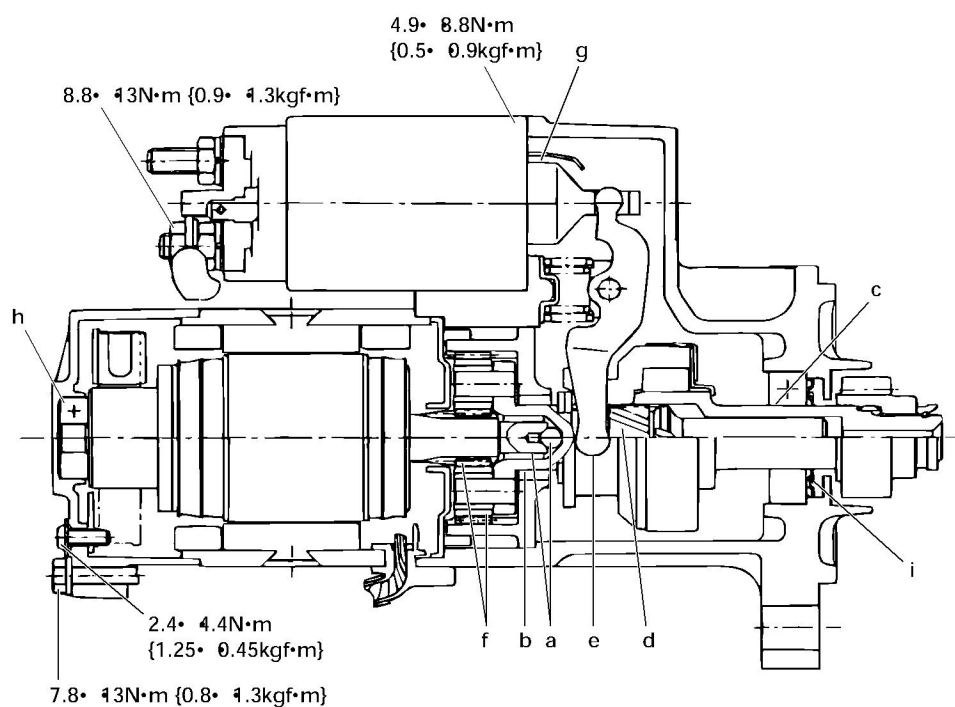


	Oiling Section	Brand name
a	Sleeve Bearing and Ball	Molycoat R AG-650
b	Sleeve Bearing	Molycoat R AG-650
c	Overrunning Clutch and Bearing	Molycoat R AG-650
d	Gear Shaft Spline	Molycoat R AG-650
e	Sliding part between lever and overrunning clutch	MULTEMP #6129
f	Armature shaft gear, Internal gear, Planetary gear	Molycoat R AG-650
g	Plunger surface	MULTEMP #6129
h	Internal and external side surface of armature bearing	MULTEMP #6129
i	Oil seal	MULTEMP #6129

## PERFORMANCE TEST

### Performance Test

The starter motor characteristics are significantly influenced by the capacity of the battery. Therefore, test by using a battery of the designated capacity.

Since a large amount of current will flow, conduct the test quickly.

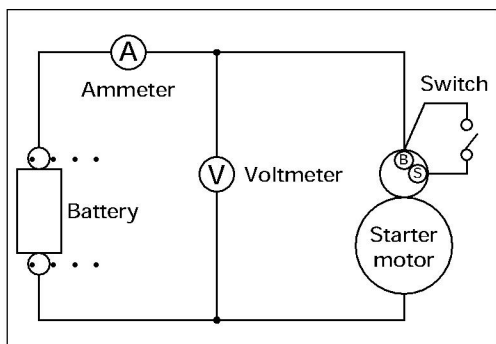



### No Load Test

Turn under no load and measure the rotational speed and voltage or current.

No-load characteristics (Standard value)

Voltage	23V
Current	80A max
Number of rotations	3,750rpm min

## ALTERNATOR

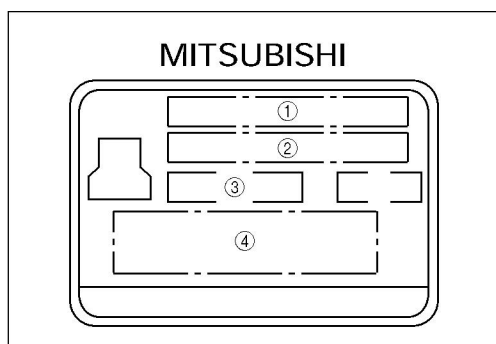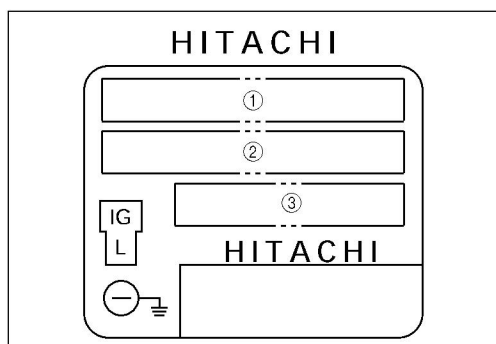

### ALTERNATOR IDENTIFICATION

Hitachi or MITSUBISHI alternators are identified by name plate attached to the rear cover. (Illustration)

- ① Isuzu part number
- ② Manufacturer's code number
- ③ Rated voltage

- ① Isuzu part number
- ② Manufacturer's name
- ③ Rated voltage
- ④ Bar code

**Note:**


Always check the identification number before beginning a service operation.

Applicable service data will vary according to the identification number. Use of the wrong service data will result alternator damaged.



## MAIN DATA AND SPECIFICATION

Engine Model to be Equipped	4J Series		
Manufacturer's name	HITACHI		mitsubishi
Isuzu Part No.	897201-2810 897228-3180	897023-2631	897182-2892
Manufacturer's Code No.	LR150	LR240-388	A002TA8383
Rated voltage	V	12	24
Rated output	A	50	40
Operating speed	rpm	1200-18000	1000-13500
Rated output at rpm	A/V/rpm	47/13.5/5000	38/27/5000
No-load output at 0 amperes	V/rpm	13.5/1200 or less	27/1000 or less
Direction of rotation (viewed from the pulley side)	Clockwise		Clockwise
Polarity grounded	Negative		Negative
Pulley diameter (P.C.D.)	mm(in.)	82 (3.23)	80 (3.15)
Coil resistance at 20°C			
Rotor coil	Ω	2.6	12.5
Stator coil	Ω	0.101	0.14
Brush length			
Standard	mm(in.)	22 (0.86)	25 (0.98)
Limit	mm(in.)	6 (0.24)	6 (0.24)
Slip ring diameter:			
Standard	mm(in.)	27 (1.06)	31.6 (1.24)
Limit	mm(in.)	26 (1.02)	30.6 (1.20)
Shaft diameter			
Front	mm(in.)	17 (0.67)	17.0 (0.67)
Rear	mm(in.)	10 (0.39)	12.0 (0.47)
Regulator(s) applicable		Built-in	
Isuzu Part No.		897184-6290	897184-6280
Manufacturer(s) code No.		TR2Z-47	A866 X 42272

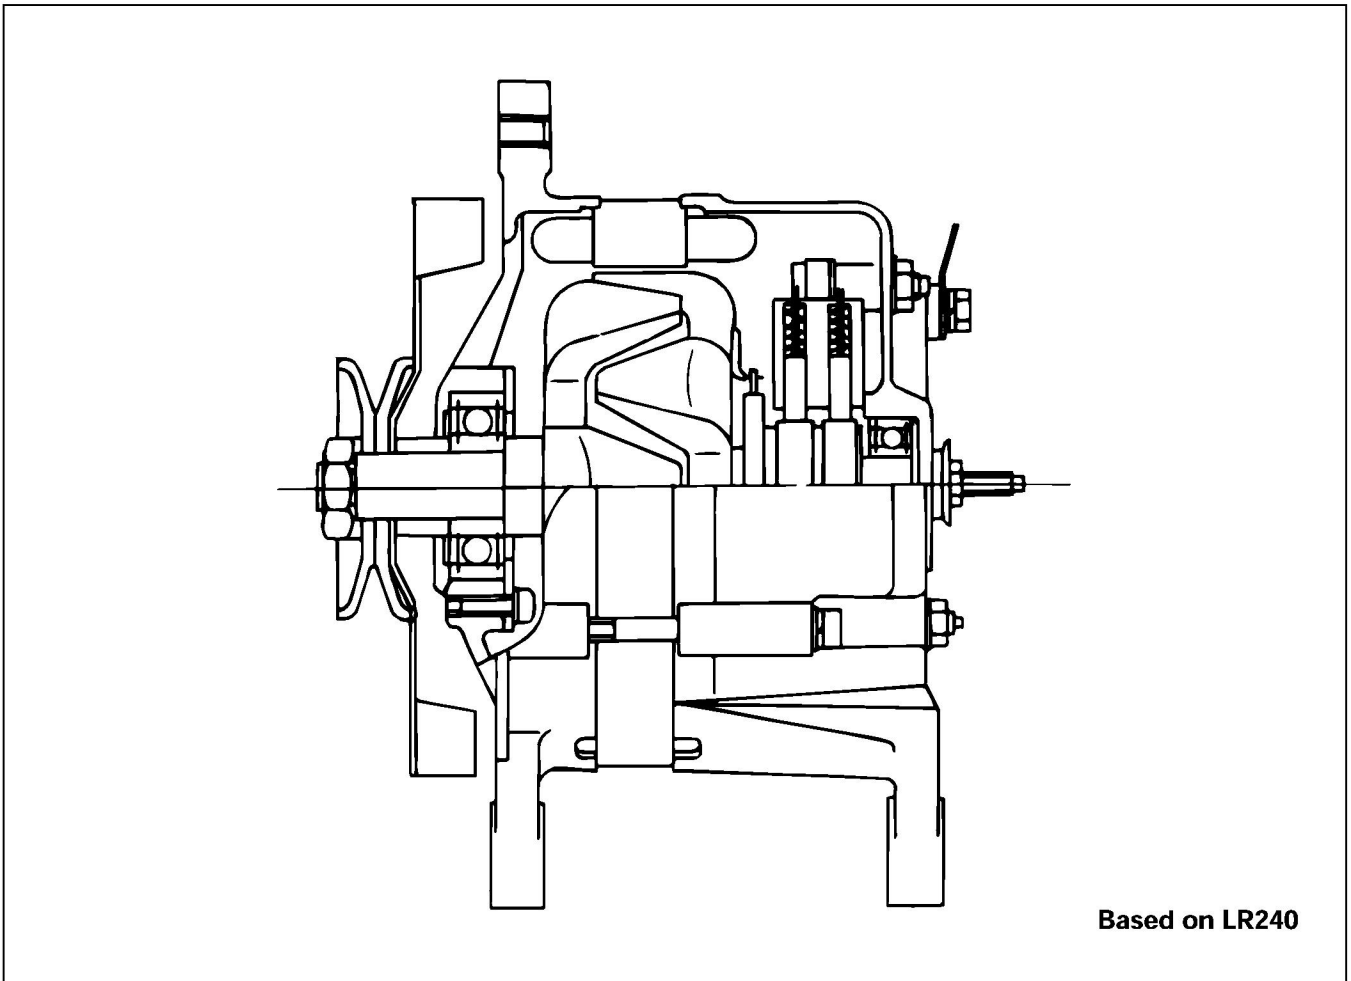**GENERAL DESCRIPTION**


The alternator consists of the front cover, the rotor, the stator, the built-in IC regulator (some engines use a Tirrell alternator with separate regulator), and the rear cover.

This small size and light weight alternator provides excellent reliability. Its simple construction makes it very easy to service. The built-in IC regulator minimizes circuit wiring.



**DISASSEMBLY**

These disassembly steps are based on the built-in IC regulator type.

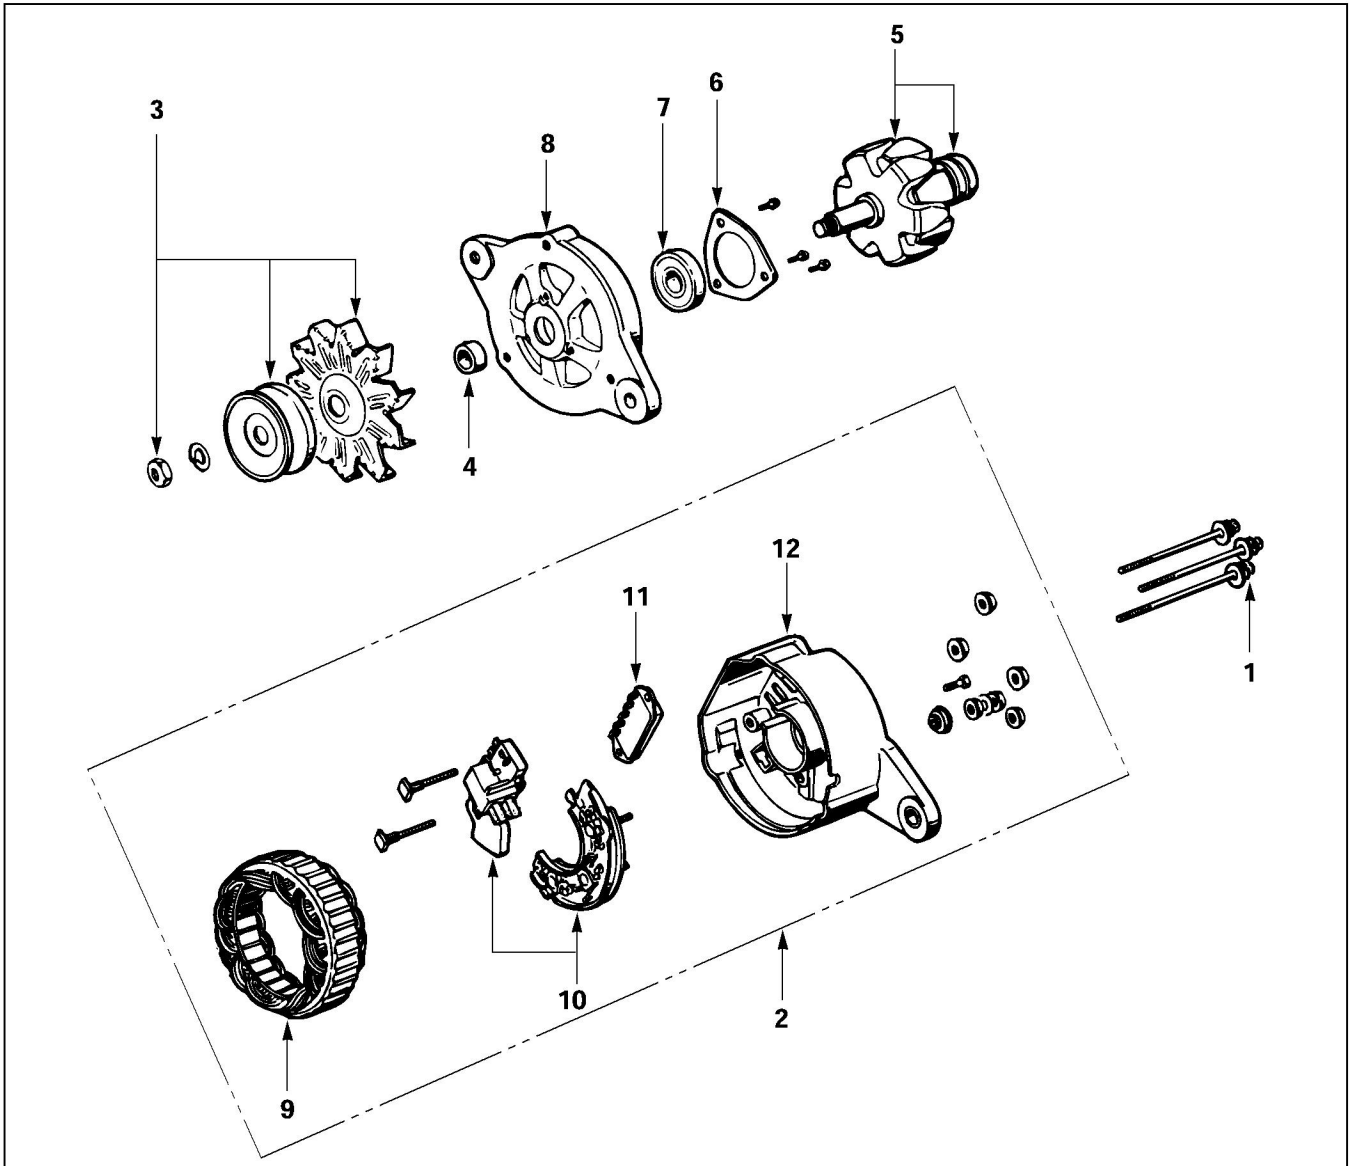


**Disassembly Steps**

- |                          |                                   |
|--------------------------|-----------------------------------|
| 1. Through bolt          | 7. Ball bearing                   |
| 2. Rear cover and stator | 8. Front cover                    |
| ▲ 3. Pulley and fan      | ▲ 9. Stator                       |
| ▲ 4. Spacer collar       | ▲ 10. Rectifier with brush holder |
| 5. Rotor with bearing    | 11. IC regulator                  |
| 6. Bearing retainer      | 12. Rear cover                    |




## Important Operations

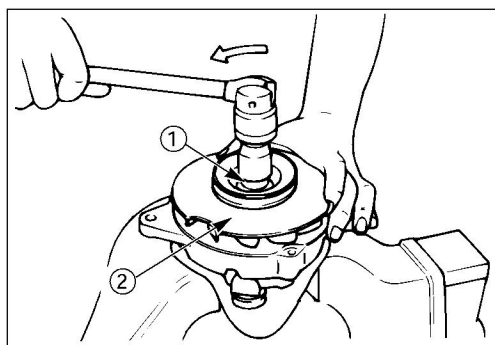


### 3. Pulley and Fan

- (1) Clamp the rotor shaft in a soft jaw vise.
- (2) Loosen the pulley lock nut ①.
- (3) Remove the pulley ② along with the spacer collar.

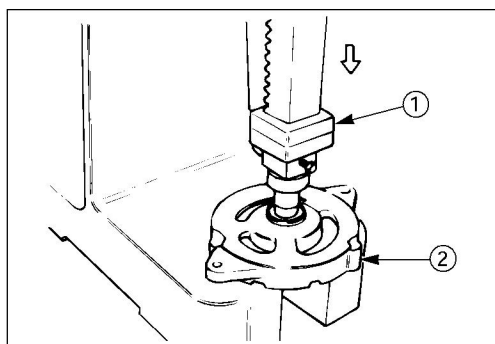

### 4. Rotor and Bearing

- (1) Use a plastic hammer or a press ① to remove the rotor from the front cover ②.
- (2) Remove the spacer collar.

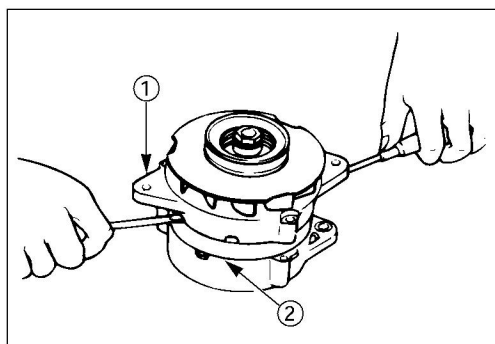


### 8. Front Cover

Use screwdrivers to pry the front cover ① from the stator ②.

#### Note:

**Do not attempt to pry the coil wires from the stator.**

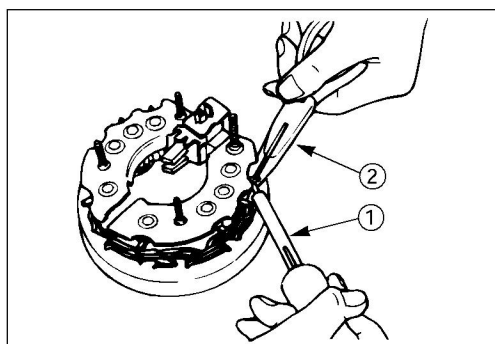

### 9. Stator

#### 10. Rectifier with Brush Holder

Use a soldering iron ① and a pair of long nose pliers ② to remove the rectifiers.

#### Note:

**Hold the rectifier leads between the rectifier and the soldering iron with the long nose pliers. This will protect the rectifier from the heat.**




## INSPECTION AND REPAIR

Make the necessary adjustments, repairs, and part replacements if excessive wear or damage is discovered during inspection.


### ROTOR AND BEARING

Check the face of the slip rings for contamination and roughness. If found to be roughened, dress with a fine sand paper (#500 – 600). If found to be contaminated, clean with a cloth saturated with alcohol.

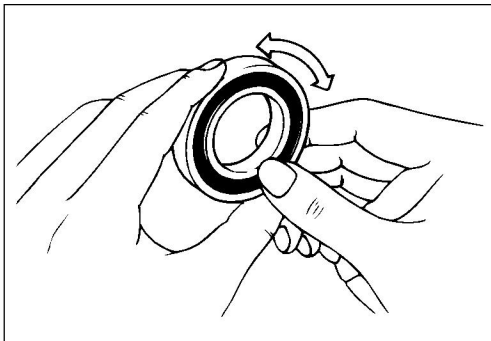

#### Ball Bearing

Check that the ball bearings rotate smoothly.  
If the ball bearings are noisy, they must be replaced.

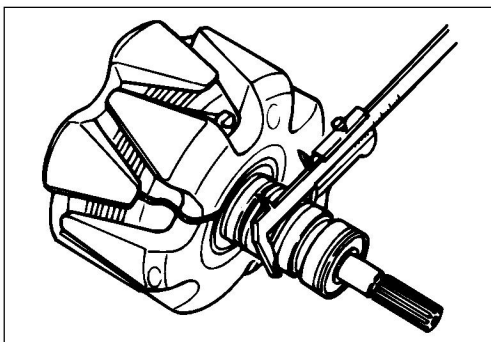


Use a vernier caliper to measure the slip ring outside diameter.

If the measured value exceeds the limit, the rotor must be replaced.

Slip Ring Outside Diameter mm(in.)

Standard	Limit
31.6 (1.24)	30.6 (1.20)

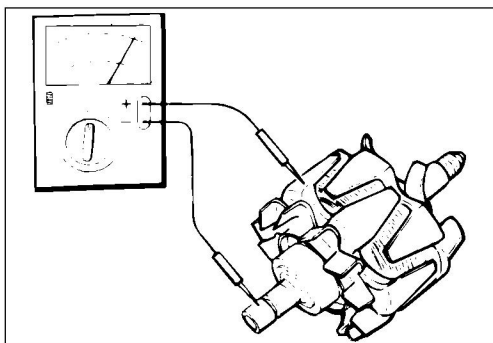

### Rotor Coil Continuity Test



Use an circuit tester to test the rotor coil continuity.


1. Touch both circuit tester probes to the rotor coil slip rings.
2. Note the circuit tester reading.

The circuit tester should register approximately 9 ohms.

3. If the circuit tester does not show continuity, check the connections between the lead wire and the slip rings.

If breaks are founded, repair and repeat the rotor coil continuity test.

If there is still no rotor coil continuity, the rotor must be replaced.

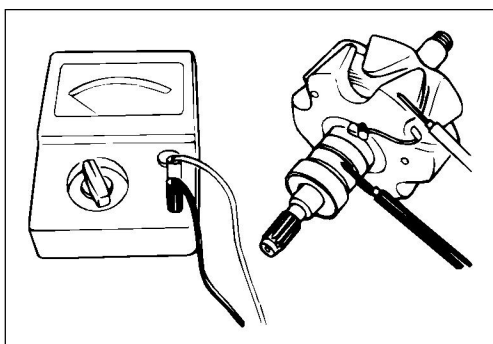

### Rotor Coil Ground Test




Use an circuit tester to test the rotor coil for grounding.

1. Touch one of the circuit tester probes to the rotor shaft.
2. Touch the other circuit tester probe to one of slip rings.
3. Note the circuit tester reading.
4. Touch the circuit tester probe to the other slip ring.
5. Note the circuit tester reading.

The circuit tester should show infinity (no needle movement) at both measuring points.

If the circuit tester does not show infinity (the needle moves) at both measuring points, the rotor is grounded and must be replaced.

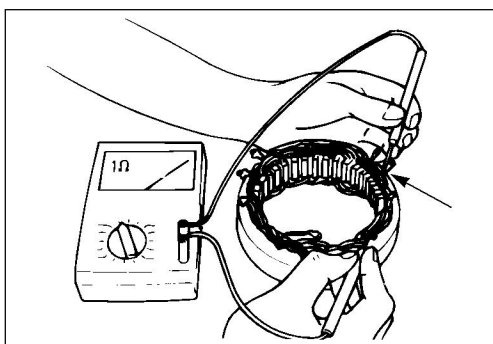

## STATOR COIL

### Stator Coil Continuity Test



Use an circuit tester to test the stator coil continuity.

1. Touch the circuit tester probes to two of the bare stator wires.
2. Note the circuit tester reading.
3. Move one of the circuit tester probes to a third wire.

4. Note the circuit tester reading.


If the two readings (Steps 2 and 4) are identical, the stator coil has continuity.

If the two circuit tester readings are different, there is no stator continuity.

5. Check the neutral junction (arrow mark) for breaks.

If breaks are found, repair and repeat the stator coil continuity test.

If there is still no stator coil continuity, the stator must be replaced.

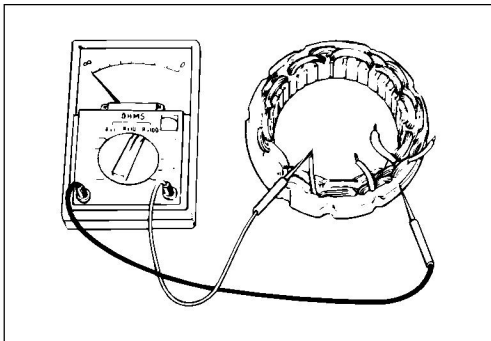

### Stator Coil Ground Test




Use an circuit tester to test the stator coil for grounding.

1. Touch one circuit tester probe to the bare metal surface of the stator.
2. Touch the other circuit tester probe to a bare stator lead wire.
3. Note the circuit tester reading.

The circuit tester should show infinity (no needle movement).

If the circuit tester shows a value other than infinity (the needle moves), the stator is grounded and must be replaced.

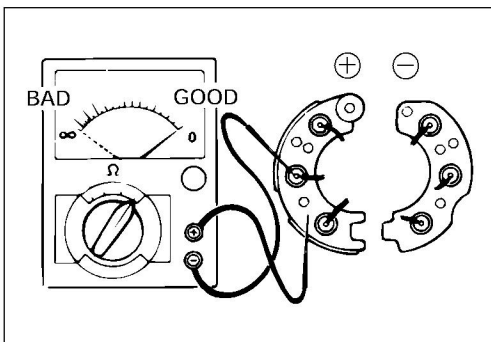

### RECTIFIER


#### Rectifier (Positive Diode) Continuity Test




Use an circuit tester to test rectifier continuity.

1. Touch the circuit tester positive probe to the rectifier holder.
2. Touch the circuit tester negative probe to each of the diode terminals in turns.

- Note the meter reading for each diode terminal.  
All of the diode should show continuity.  
If a diode shows no continuity, it is open circuit. The rectifier assembly must be replaced.

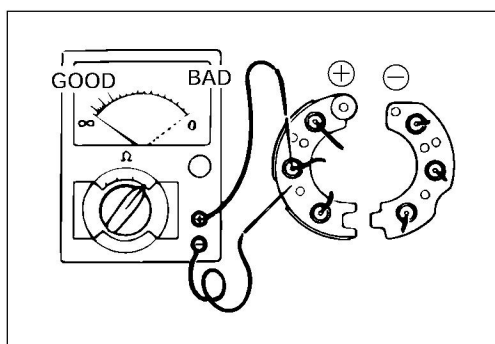

- Touch the circuit tester negative probe to the rectifier holder.
- Touch the circuit tester positive probe to each of the diode terminals in turn.
- Note the meter reading for each diode terminal.  
None of the diodes should show continuity.  
If a diode shows continuity, it is shorted. The rectifier assembly must be replaced.

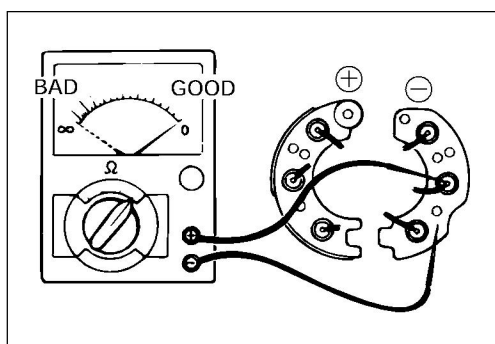


### Rectifier (Negative Diode) Continuity Test



Use a circuit tester to test the rectifier continuity.

- Touch the circuit tester negative probe to the rectifier holder.
- Touch the circuit tester positive probe to each of the diode terminals in turn.
- Note the meter reading for each diode terminal.  
All of the diode should show continuity.  
If a diode shows no continuity, it is open. The rectifier assembly must be replaced.
- Touch the circuit tester positive probe to the rectifier holder.
- Touch the circuit tester negative probe to each of the diode terminals in turn.
- Note the meter reading for each diode terminal.  
None of the diode should show continuity.  
If a diode shows continuity, it is shorted. The rectifier assembly must be replaced.

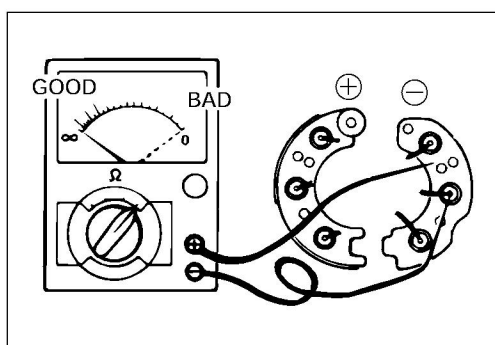


### Rectifier Assembly Replacement Procedure




Use the Rectifier Service Kit to replace the rectifier assembly in the following steps.

- Connect the three inside lead wires to the "N" terminals ①.
- Connect the three outside lead wires ② to the outside terminals.
- Wind the stator lead wires around the rectifier lead wires (included in the Rectifier Service Kit) and solder them.

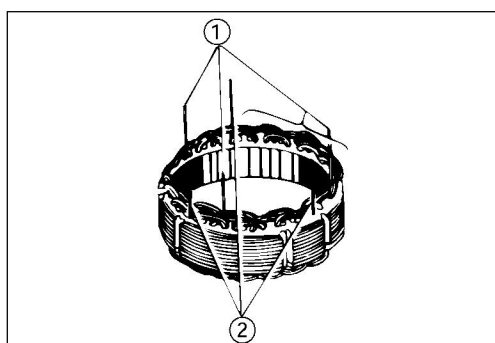



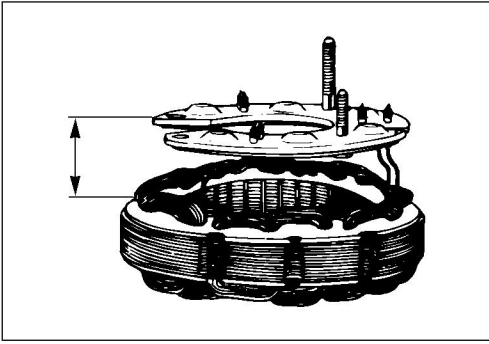


**Note:**

1. The stator lead wires must be cut to the proper length before they are connected to the rectifier lead wires. If the stator lead wires are too long or too short, trouble may occur.

Stator Lead Wire Length	mm(in.)
33.5 (1.32)	

2. Take care not to damage the rectifier paint surfaces.

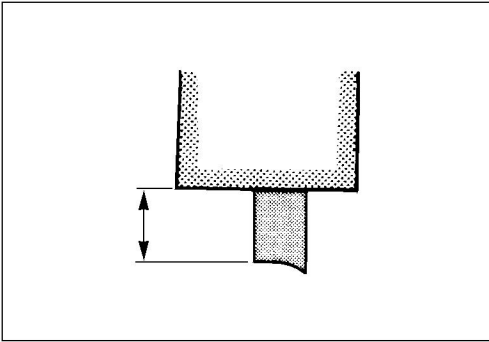

**BRUSH**

Use a vernier caliper to measure the brush.


If the measured value exceeds the limit, the brush must be replaced.

Brush Length	mm(in.)	
	Standard	Limit
897201-2810	22 (0.86)	6 (0.24)
897023-2631	25 (0.98)	6 (0.24)

Brushes are provided with a line which indicates the limit of usage.



## REASSEMBLY

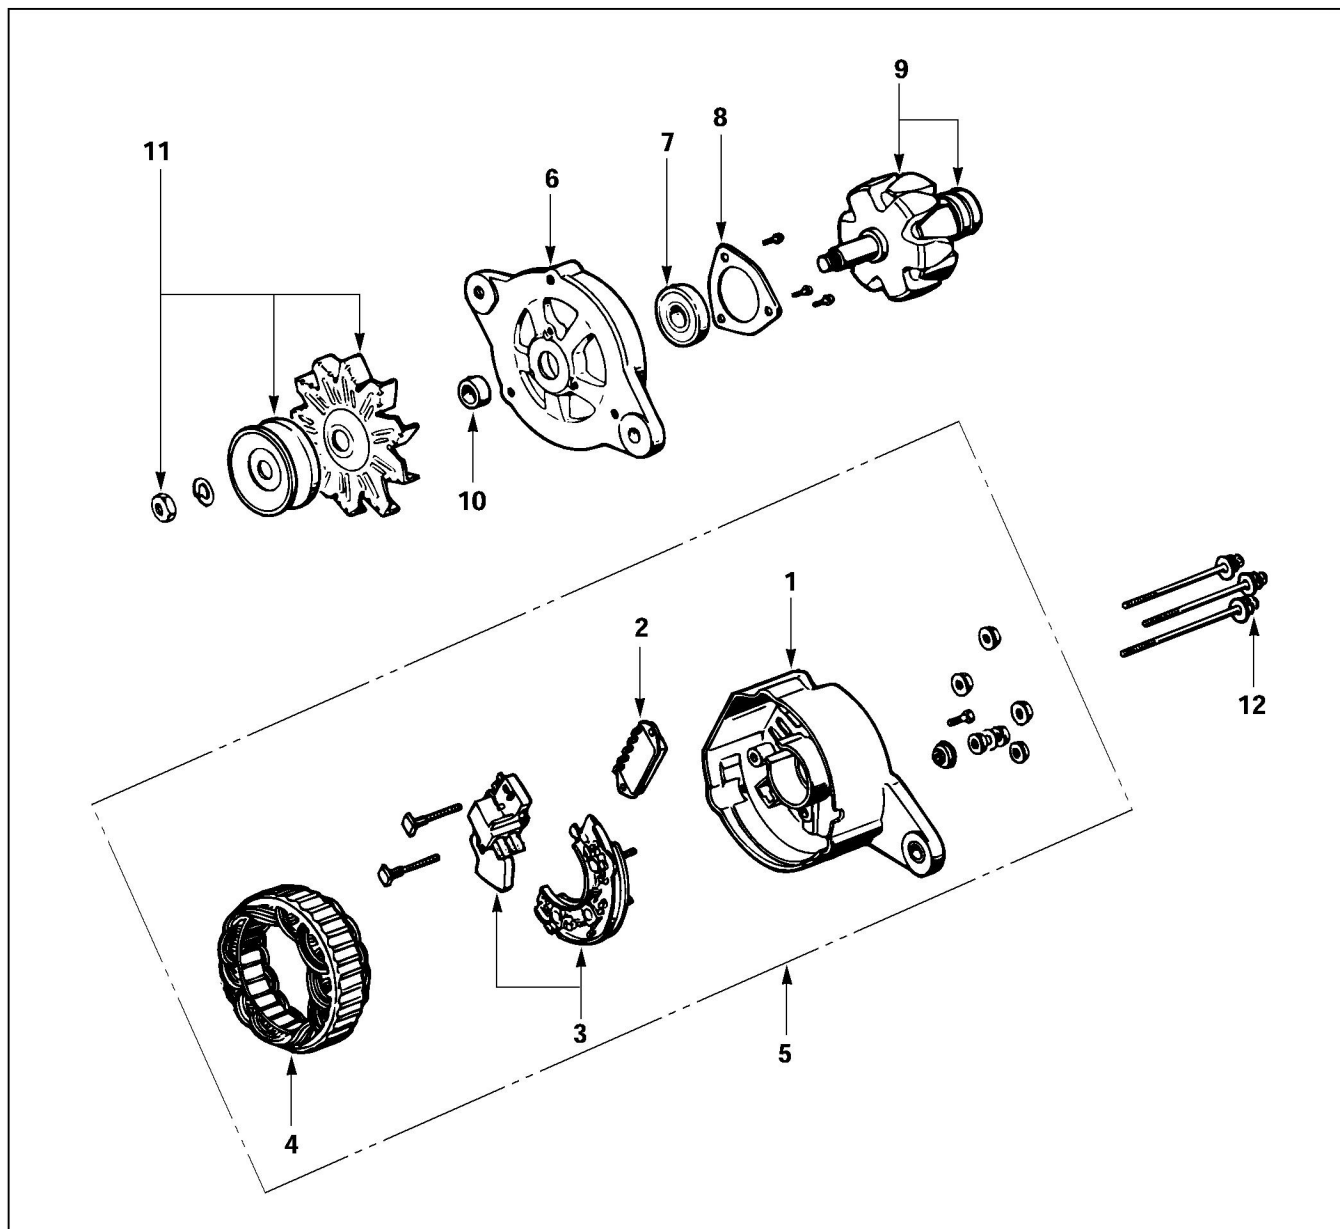


## Reassembly Steps

- |                                  |                       |
|----------------------------------|-----------------------|
| 1. Rear cover                    | ▲ 7. Ball bearing     |
| 2. IC regulator                  | 8. Bearing retainer   |
| ▲ 3. Rectifier with brush holder | 9. Rotor with bearing |
| ▲ 4. Stator                      | 10. Spacer collar     |
| 5. Rear cover and stator         | ▲ 11. Pulley and fan  |
| 6. Front cover                   | 12. Through bolt      |




**Important Operations**

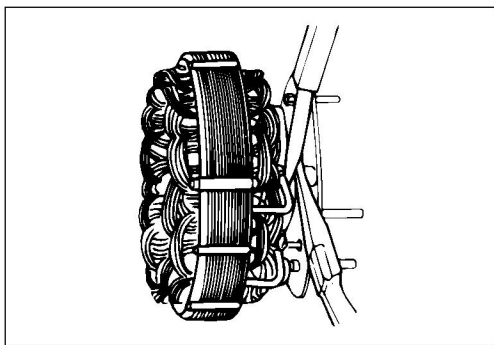

**3. Rectifier with Brush Holder**

**4. Stator**

When connecting stator coil leads and diode leads using solder, use long-nose pliers and finish the work as quickly as possible to prevent the heat from being transferred to the diodes.

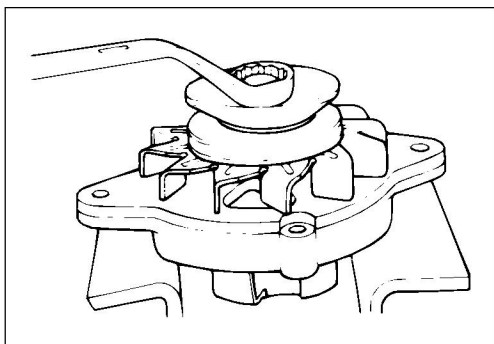

**11. Pulley and Fan**

Tighten the pulley and fan to the specified torque.



Pulley and Fan Nut Torque N·m(kgf·m/lb.ft)

49 – 64 (5.0 – 6.5/36 – 47)
-----------------------------

---

**SECTION 10**  
**TROUBLESHOOTING**

**TABLE OF CONTENTS**

<b>ITEM</b>	<b>PAGE</b>
Hard starting .....	171
Unstable idling .....	175
Insufficient power .....	178
Excessive fuel consumption .....	182
Excessive oil consumption .....	184
Overheating .....	185
White exhaust smoke .....	187
Dark exhaust smoke .....	188
Oil pressure does not rise .....	189
Abnormal engine noise .....	191

## **TROUBLESHOOTING**

Refer to this Section to quickly diagnose and repair engine problems.

Each troubleshooting chart has three headings arranged from left to right.

(1) Checkpoint (2) Trouble Cause (3) Countermeasure

This Section is divided into ten sub-sections:

1. Hard Starting
  - 1) Starter inoperative
  - 2) Starter operates but engine does not turn over
  - 3) Engine turns over but does not start
2. Unstable Idling
3. Insufficient Power
4. Excessive Fuel Consumption
5. Excessive Oil Consumption
6. Overheating
7. White Exhaust Smoke
8. Dark Exhaust Smoke
9. Oil Pressure Does Not Rise
10. Abnormal Engine Noise


# 1. HARD STARTING

## 1. STARTER INOPERATIVE

Checkpoint		Trouble Cause		Countermeasure
Neutral switch (If so equipped)	NG	Defective neutral switch	NG	Replace the neutral switch
Battery	NG	Loose battery cable terminals Poor connections due to rusting	NG	Clean and/or retighten the battery cable terminals
	NG	Battery discharged or weak	NG	Recharge or replace the battery
	NG	Fan belt loose or broken	NG	Adjust or replace the fan belt
OK				
Fusible link	NG	Fusible link shorted	NG	Replace the fusible link
OK				
Starter switch	NG	Defective starter switch or starter relay	NG	Replace the starter switch or the starter relay
OK				
Starter	NG	Defective magnetic switch or starter relay	NG	Repair or replace the magnetic switch
OK				
Starter	NG	Defective starter	NG	Repair or replace the starter motor

# 1. HARD STARTING

## 2. STARTER OPERATES BUT ENGINE DOES NOT TURN OVER

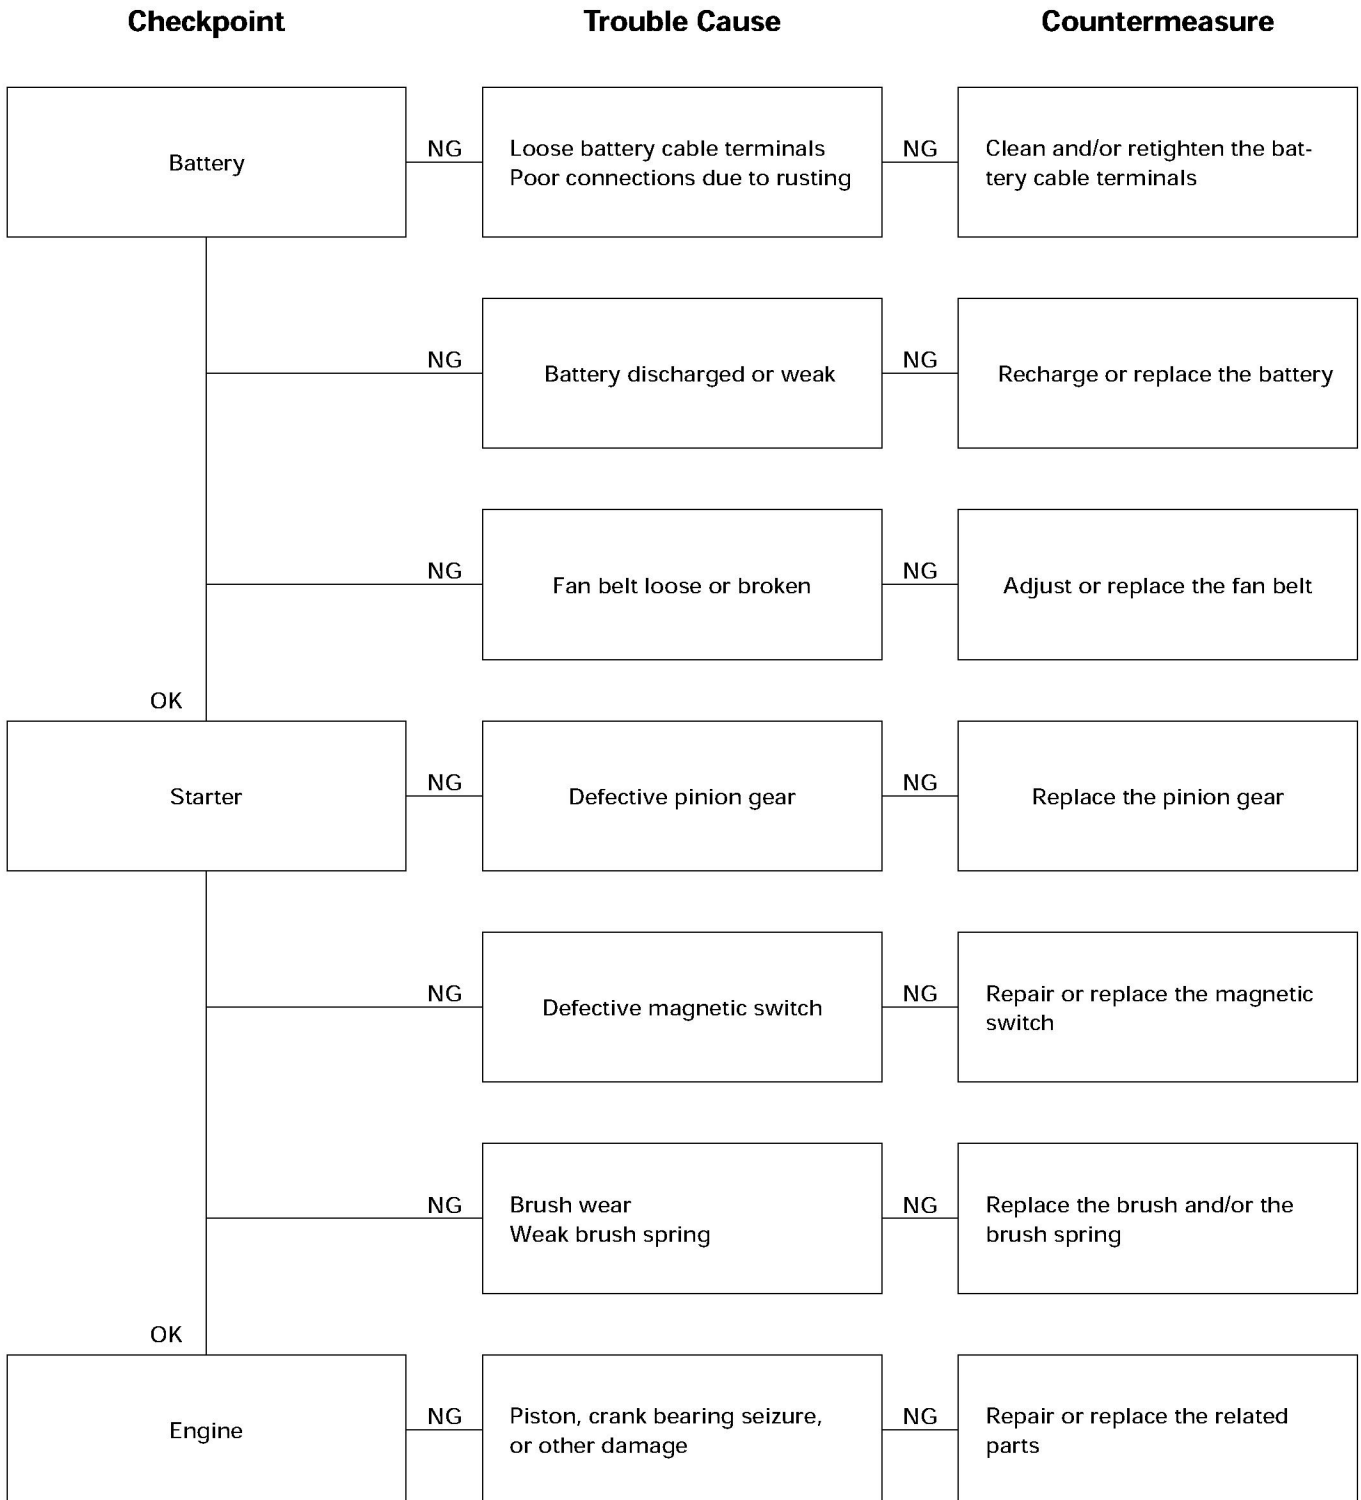

# 1. HARD STARTING

## 3. ENGINE TURNS OVER BUT DOES NOT START

Checkpoint		Trouble Cause		Countermeasure
Engine stop mechanism	NG	Defective engine stop mechanism control wire improperly adjusted (In line pump)	NG	Replace the engine stop mechanism Adjust the control wire
	NG	Defective fuel cut solenoid valve (VE pump)	NG	Replace the fuel cut solenoid valve

### FUEL IS NOT BEING DELIVERED TO THE INJECTION PUMP

Fuel	NG	Fuel tank is empty	NG	Fill the fuel tank
OK				
Fuel piping	NG	Clogged or damaged fuel lines Loose fuel line connections	NG	Repair or replace the fuel lines Retighten the fuel line connections
OK				
Fuel filter	NG	Fuel filter overflow valve does not close	NG	Repair or replace the fuel filter overflow valve
	NG	Clogged fuel filter element	NG	Replace the fuel filter element or the fuel filter cartridge
OK				
Fuel system	NG	Air in the fuel system	NG	Bleed the air from the fuel system

Continued on the next page



# 1. HARD STARTING

## 3. ENGINE TURNS OVER BUT DOES NOT START

### FUEL IS BEING DELIVERED TO THE INJECTION PUMP


Checkpoint		Trouble Cause		Countermeasure
Continued from the previous page				
OK				
Injection nozzle	NG	Injection nozzle injection starting pressure too low Improper spray condition	NG	Adjust or replace the injection nozzle
OK				
Injection pump	NG	Defective fuel injection nozzle resulting in fuel drippage after fuel injection	NG	Replace the delivery valve
	NG	Defective injection pump control rack operation	NG	Repair or replace the injection pump control rack
	NG	Injection pump plunger worn or stuck	NG	Replace the injection pump plunger assembly
OK				
Injection pump (VE pump)	NG	Injection pump drive shaft seizure or other damage	NG	Replace the injection pump drive shaft
	NG	Injection pump governor spring seizure	NG	Replace the injection pump governor spring

## 2. UNSTABLE IDLING


Checkpoint		Trouble Cause		Countermeasure
Idling system	NG	Idling improperly adjusted	NG	Adjust the idling
OK				
Fast idling speed control device	NG	Defective fast idling speed control device	NG	Repair or replace the fast idling speed control device
OK				
Accelerator control system	NG	Accelerator control system improperly adjusted	NG	Adjust the accelerator control system
OK				
Fuel system	NG	Fuel system leakage or blockage	NG	Repair or replace the fuel system
	NG	Air in the fuel system	NG	Bleed the air from the fuel system
	NG	Water particles in the fuel system	NG	Change the fuel
OK				
Fuel filter	NG	Clogged fuel filter element	NG	Replace the fuel filter element or the fuel filter cartridge

Continued on the next page

## 2. UNSTABLE IDLING

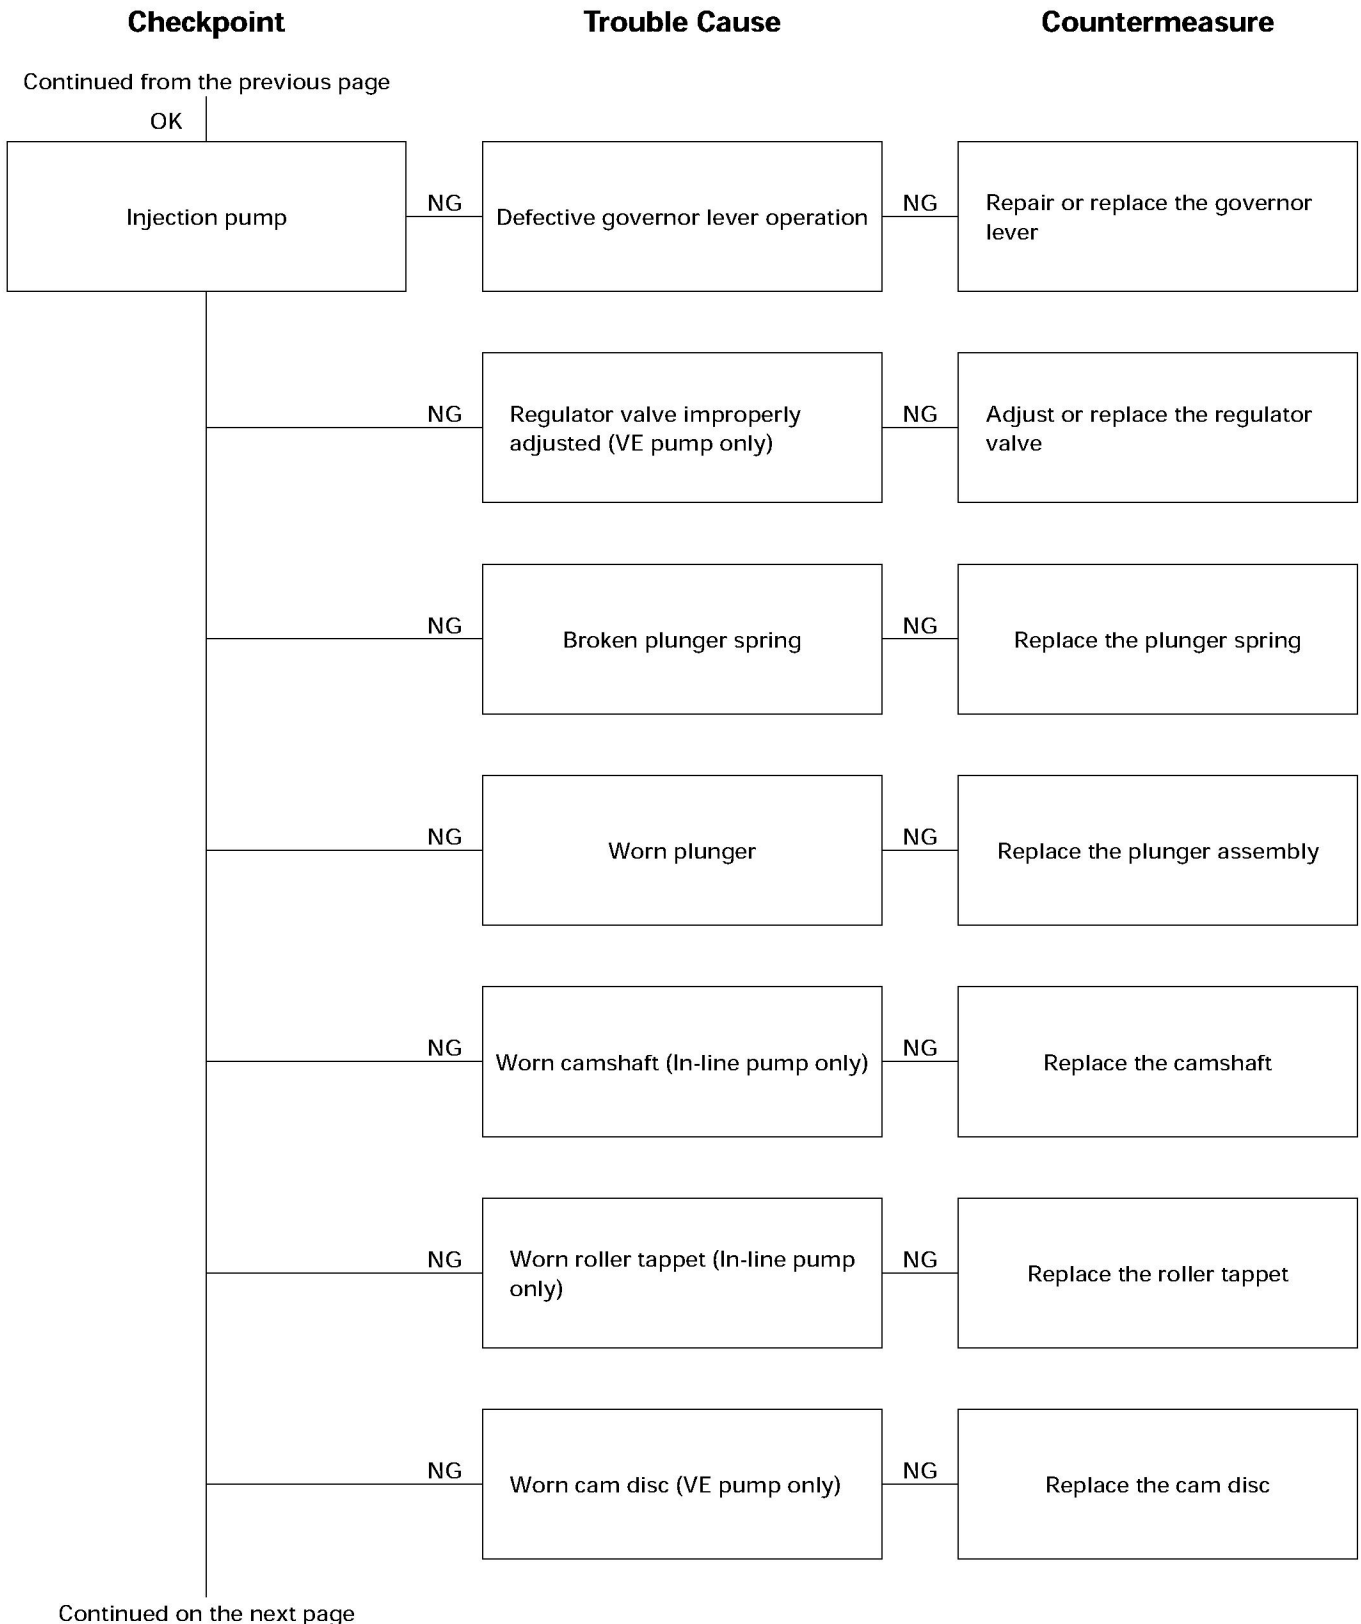

## 2. UNSTABLE IDLING

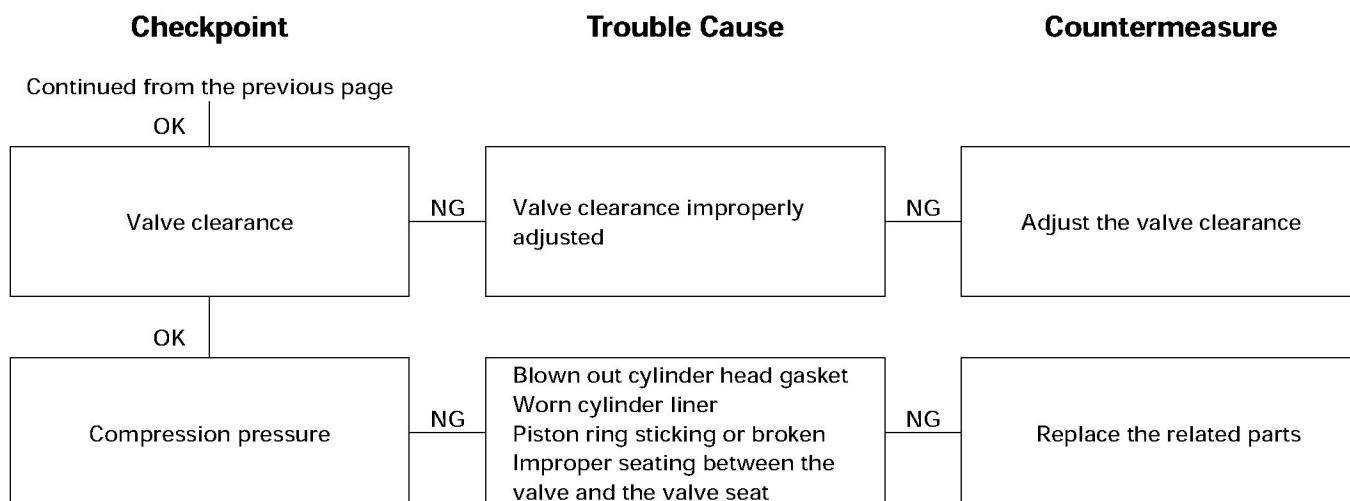

**3. INSUFFICIENT POWER**

Checkpoint	Trouble Cause	Countermeasure
Air cleaner	Clogged air cleaner element	Clean or replace the air cleaner element
OK		
Fuel	Water particles in the fuel	Replace the fuel
OK		
Fuel filter	Clogged fuel filter element	Replace the fuel filter element or the fuel filter cartridge
OK		
Fuel feed pump	Defective fuel feed pump	Repair or replace the fuel feed pump
OK		
Injection nozzle	Injection nozzle sticking	Replace the injection nozzle
Injection nozzle	Injection nozzle injection starting pressure too low Improper spray condition	Adjust or replace the injection nozzle
	OK	
Fuel injection pipes	Fuel injection pipes damaged or obstructed	Replace the fuel injection pipes


Continued on the next page

### 3. INSUFFICIENT POWER

Checkpoint	Trouble Cause	Countermeasure
Continued from the previous page OK		
Injection pump	NG Defective regulating valve (VE pump only)	NG Repair or replace the regulating valve
	NG Defective delivery valve	NG Replace the delivery valve
	NG Defective timer	NG Repair or replace the timer
	NG Worn cam disc (VE pump only)	NG Replace the cam disc
	NG Improper control lever operation	NG Adjust or replace the control lever
	NG Defective injection timing	NG Adjust the injection timing Repair or replace the injection pump timer
	NG Weak governor spring	NG Replace the governor spring

Continued on the next page

### 3. INSUFFICIENT POWER

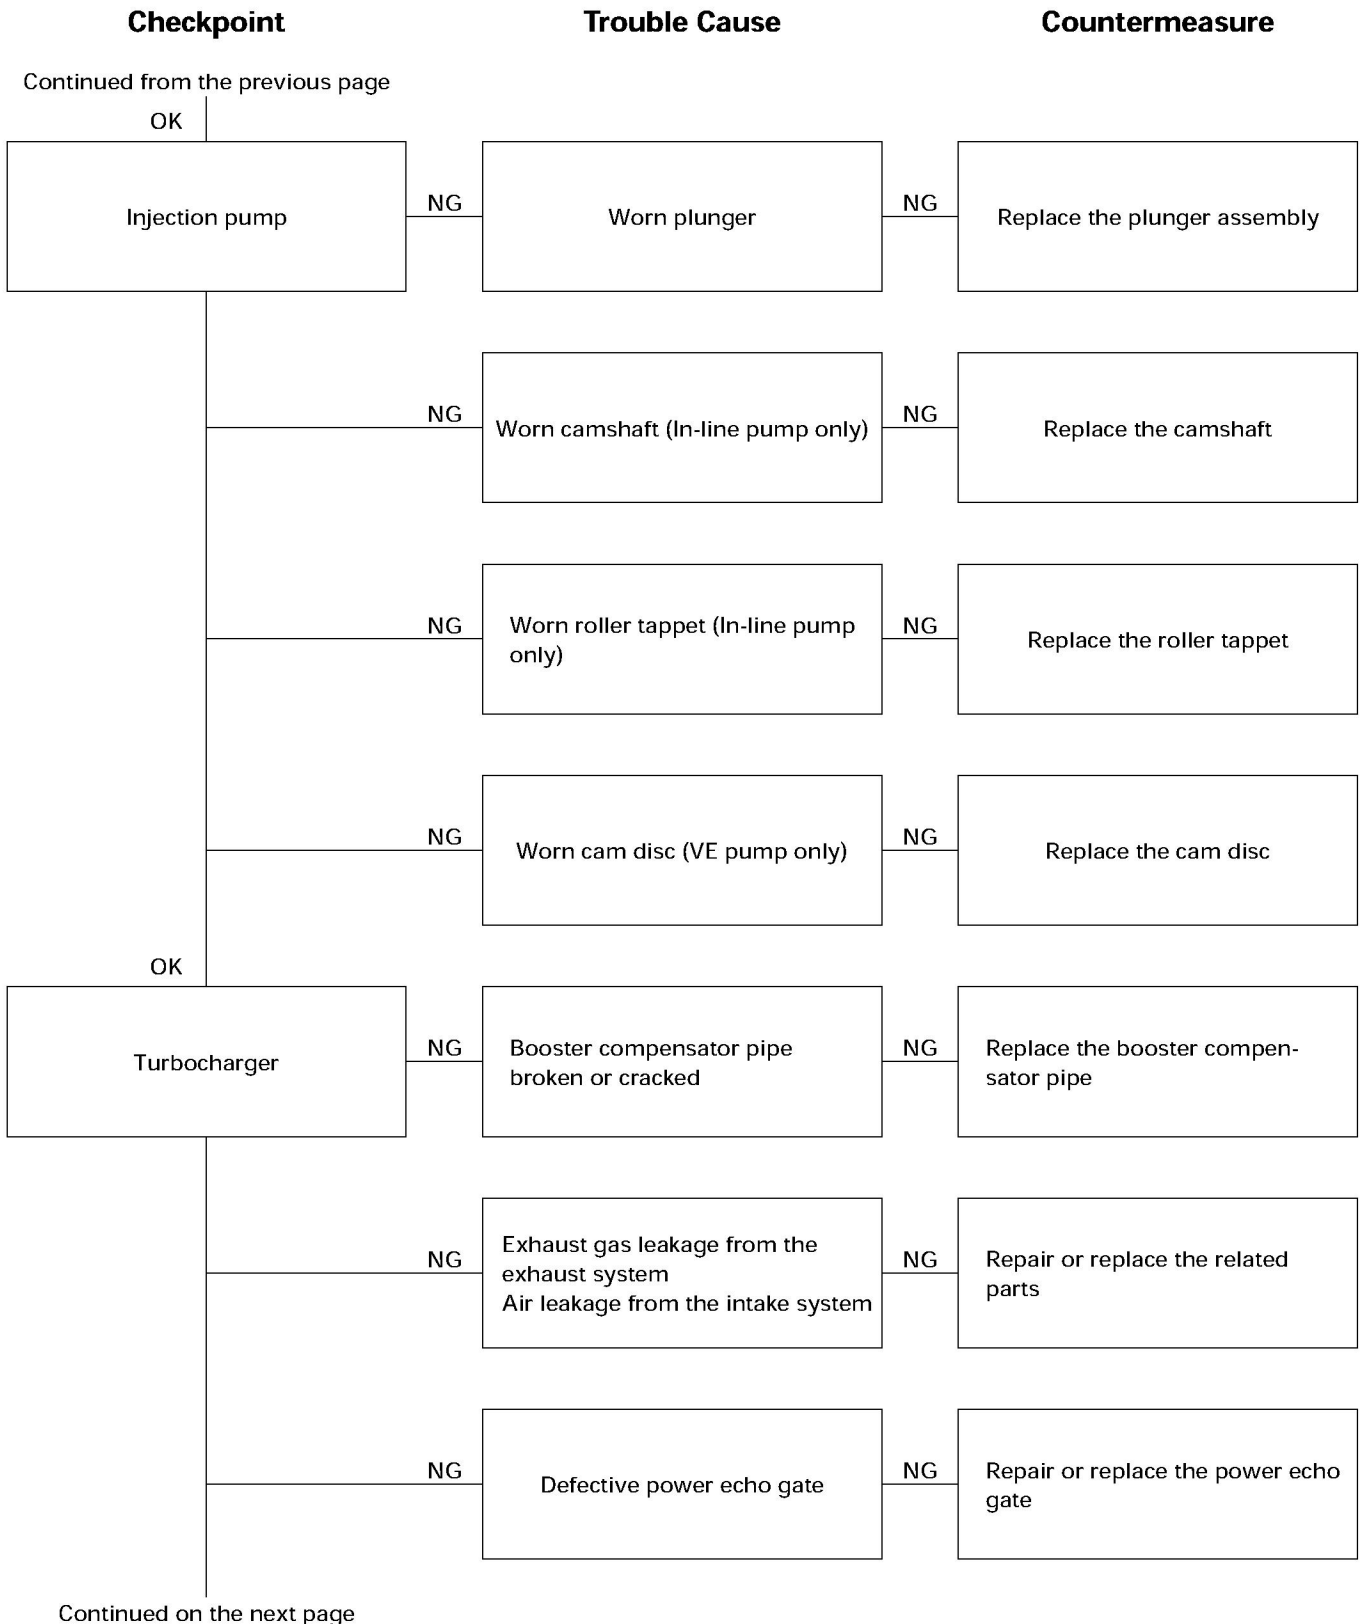

## 3. INSUFFICIENT POWER

## Checkpoint

## Trouble Cause

## Countermeasure

Continued from the previous page

OK				
Turbocharger	NG	Defective turbocharger assembly	NG	Replace the turbocharger assembly
OK				
Compression pressure	NG	Blown out cylinder head gasket Worn cylinder liner Piston ring sticking or broken Improper seating between the valve and the valve seat	NG	Replace the related parts
OK				
Valve clearance	NG	Valve clearance improperly adjusted	NG	Adjust the valve clearance
OK				
Valve spring	NG	Valve spring weak or broken	NG	Replace the valve spring
OK				
Exhaust system	NG	Exhaust pipe clogged	NG	Clean the exhaust pipe
OK				
Full load adjusting screw seal	NG	Open and improperly set adjusting screw seal	NG	Adjust and reseal the adjusting screw



### 4. EXCESSIVE FUEL CONSUMPTION

Checkpoint		Trouble Cause		Countermeasure
Fuel system	NG	Fuel leakage	NG	Repair or replace the fuel system related parts
OK				
Air cleaner	NG	Clogged air cleaner element	NG	Clean or replace the air cleaner element
OK				
Idling speed	NG	Poorly adjusted idling speed	NG	Adjust the idling speed
OK				
Injection nozzle	NG	Injection nozzle injection starting pressure too low Improper spray condition	NG	Adjust or replace the injection nozzle
OK				
Fuel injection timing	NG	Fuel injection timing improperly adjusted	NG	Adjust the fuel injection timing
OK				
Injection pump	NG	Defective delivery valve resulting is fuel drippage after fuel injection	NG	Replace the delivery valve
OK				
Turbocharger	NG	Air leakage from the turbocharger intake side	NG	Repair the turbocharger intake side

Continued on the next page

## 4. EXCESSIVE FUEL CONSUMPTION

### Checkpoint

### Trouble Cause

### Countermeasure

Continued from the previous page

OK				
Turbocharger	NG	Defective turbocharger assembly	NG	Replace the turbocharger assembly
OK				
Valve clearance	NG	Valve clearance improperly adjusted	NG	Adjust the valve clearance
OK				
Compression pressure	NG	Blown out cylinder head gasket Worn cylinder liner Piston ring sticking or broken Improper seating between the valve and the valve seat	NG	Replace the related parts
OK				
Valve spring	NG	Valve spring weak or broken	NG	Replace the valve spring

## 5. EXCESSIVE OIL CONSUMPTION


Checkpoint		Trouble Cause		Countermeasure
Engine oil	NG	Engine oil unsuitable Too much engine oil	NG	Replace the engine oil Correct the engine oil volume
OK				
Oil seal and gasket	NG	Oil leakage from the oil seal and/or the gasket	NG	Replace the oil seal and/or the gasket
OK				
Air breather	NG	Clogged air breather	NG	Clean the air breather
OK				
Inlet and exhaust valves Valve seals	NG	Defective valve seals Worn valves stems and valve guides	NG	Replace the valve seals, the valves, and the valve guides
OK				
Piston rings	NG	Piston rings worn, broken or improperly installed	NG	Replace the piston rings or properly install
OK				
Cylinder liners	NG	Cylinder lines scored or worn	NG	Replace the cylinder liners

## 6. OVERHEATING

Checkpoint		Trouble Cause		Countermeasure
Cooling water	NG	Insufficient cooling water	NG	Replenish the cooling water
OK				
Fan coupling (if so equipped)	NG	Oil leakage from the fan coupling	NG	Replace the fan coupling
OK				
Fan belt	NG	Fan belt loose or cracked causing slippage	NG	Replace the fan belt
OK				
Radiator	NG	Defective radiator cap or clogged radiator core	NG	Replace the radiator cap or clean the radiator core
OK				
Water pump	NG	Defective water pump	NG	Repair or replace the water pump
OK				
Cylinder head and cylinder body sealing cap	NG	Defective sealing cap resulting in water leakage	NG	Replace the sealing cap
OK				
Thermostat	NG	Defective thermostat	NG	Replace the thermostat

Continued on the next page


## 6. OVERHEATING

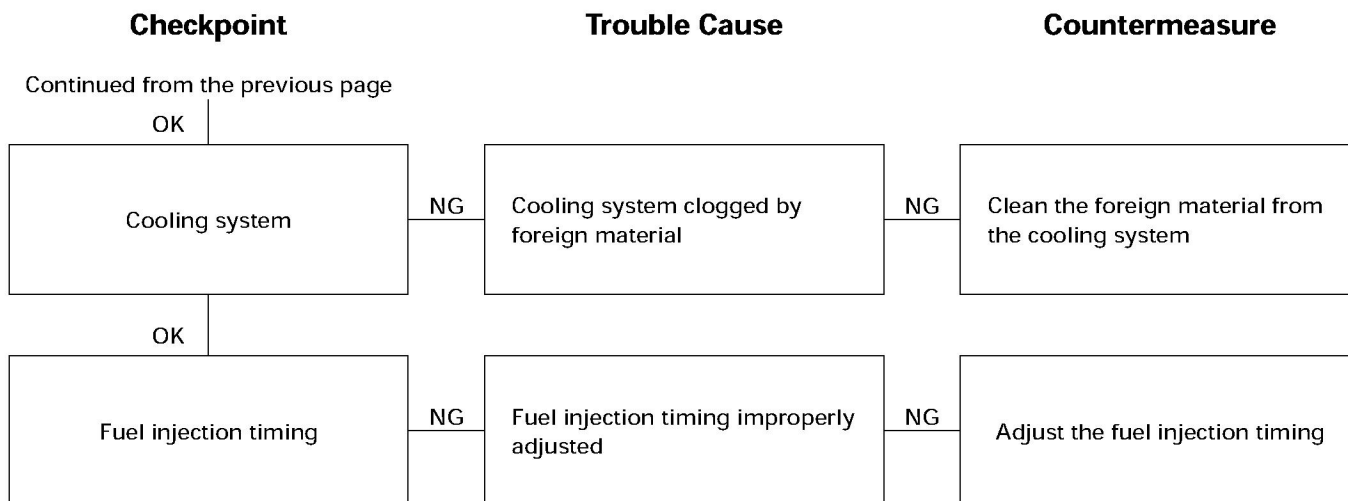

## 7. WHITE EXHAUST SMOKE

Checkpoint		Trouble Cause		Countermeasure
Fuel	NG	Water particles in the fuel	NG	Replace the fuel
OK				
Fuel injection timing	NG	Delayed fuel injection timing	NG	Adjust the fuel injection timing
OK				
Compression pressure	NG	Blown out cylinder head gasket Worn cylinder liner Piston ring sticking or broken Improper seating between the valve and the valve seat	NG	Replace the related parts
OK				
Turbocharger	NG	Defective turbocharger	NG	Replace the turbocharger
OK				
Inlet and exhaust valves Valve seals	NG	Defective valve seals Worn valves stems and valve guides	NG	Replace the valve seals, the valves, and the valve guides
OK				
Piston rings	NG	Piston rings worn, broken or improperly installed	NG	Replace the piston rings or properly install
OK				
Cylinder liners	NG	Cylinder lines scored or worn	NG	Replace the cylinder liners

## 8. DARK EXHAUST SMOKE

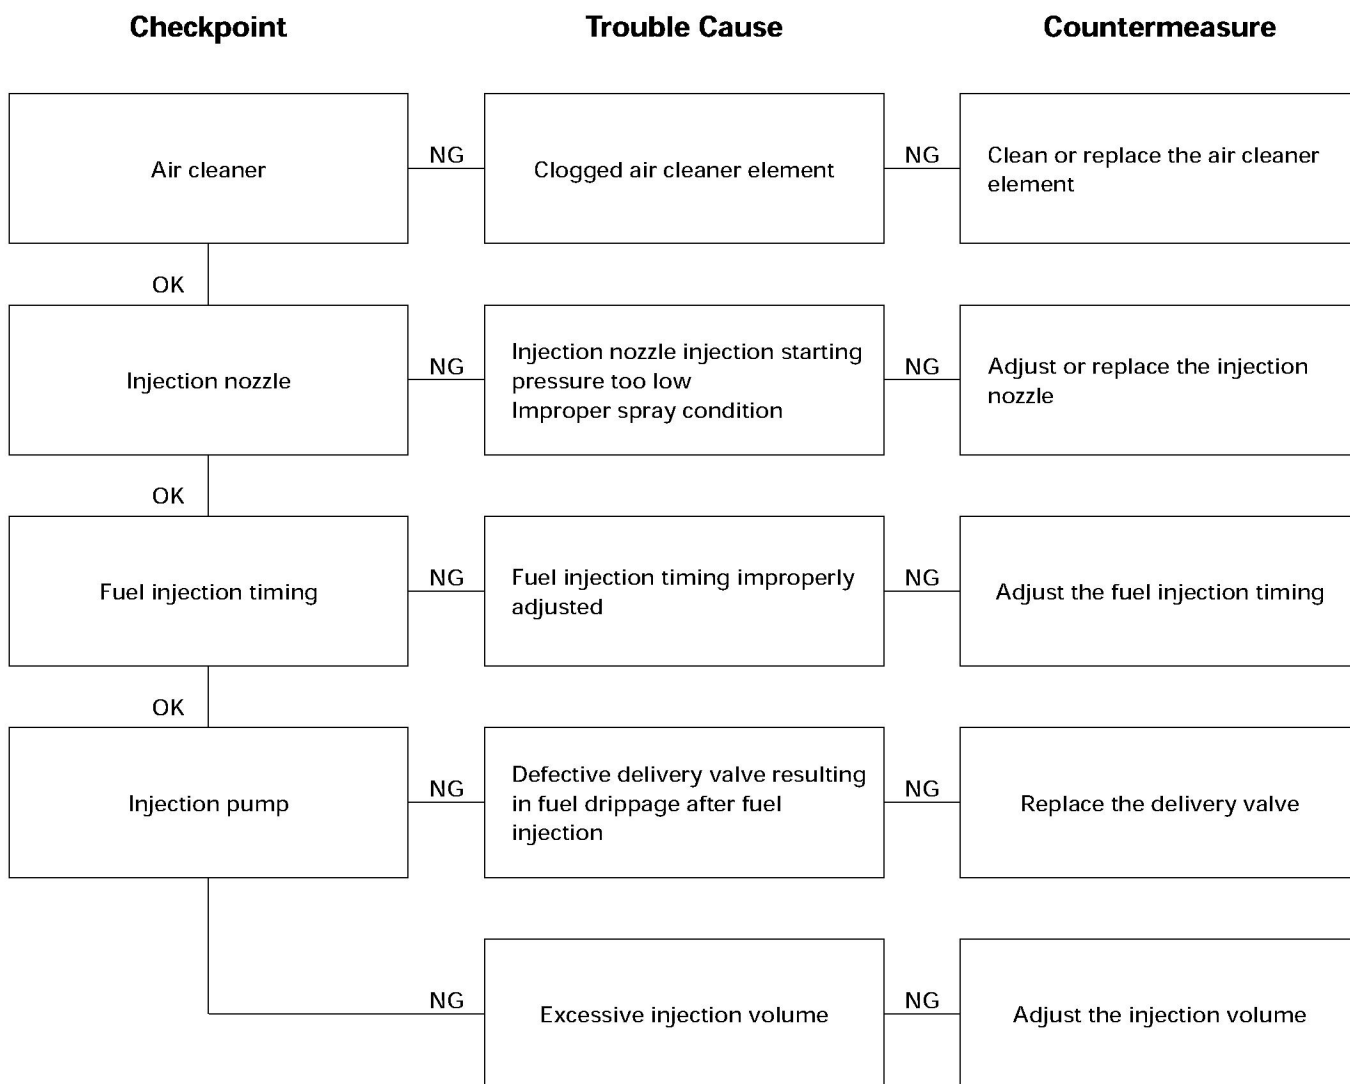


## 9. OIL PRESSURE DOES NOT RISE

Checkpoint		Trouble Cause		Countermeasure
Engine oil	NG	Improper viscosity engine oil Too much engine oil	NG	Replace the engine oil Correct the engine oil volume
OK				
Oil pressure gauge or unit Oil pressure indicator light	NG	Defective oil pressure gauge or unit Defective indicator light	NG	Repair or replace the oil pressure gauge or unit Replace the indicator light
OK				
Oil filter	NG	Clogged oil filter element	NG	Replace the oil filter element or the oil filter cartridge
OK				
Relief valve and by-pass valve	NG	Relief valve sticking and/or weak by-pass valve spring	NG	Replace the relief valve and/or the by-pass valve spring
OK				
Oil pump	NG	Clogged oil pump strainer	NG	Clean the oil pump strainer
	NG	Worn oil pump related parts	NG	Replace the oil pump related parts
OK				
Rocker arm shaft	NG	Worn rocker arm bushing	NG	Replace the rocker arm bushing

Continued on the next page



## 9. OIL PRESSURE DOES NOT RISE

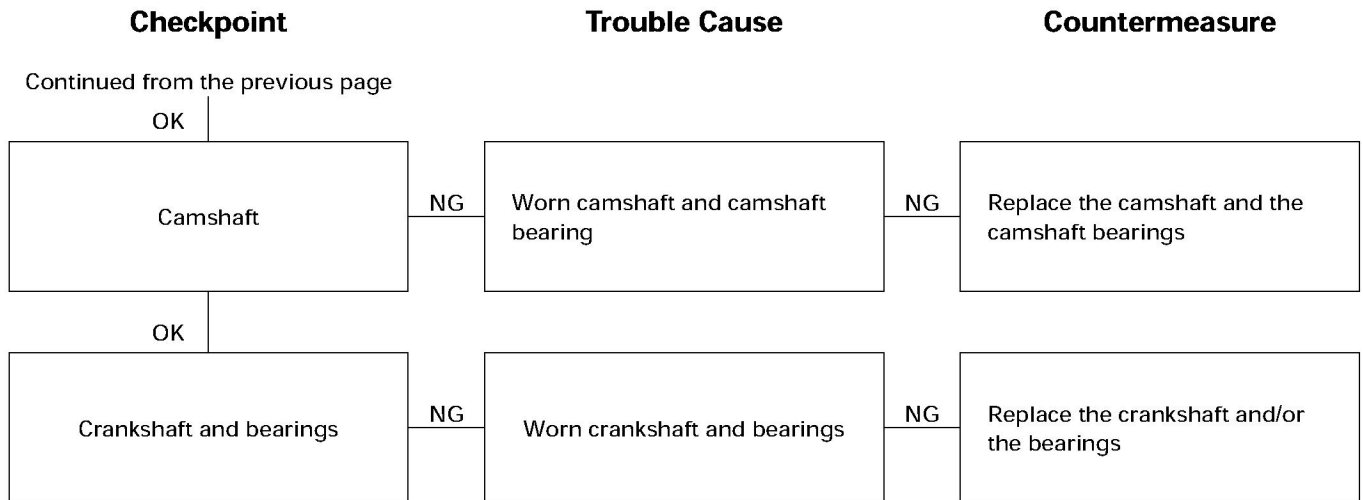

## 10. ABNORMAL ENGINE NOISE

### 1. Engine Knocking

#### Checkpoint

#### Trouble Cause

#### Countermeasure

Check to see that the engine has been thoroughly warmed up before beginning the troubleshooting procedure.

Fuel	NG	Fuel unsuitable	NG	Replace the fuel
OK				
Fuel injection timing	NG	Fuel injection timing improperly adjusted	NG	Adjust the fuel injection timing
OK				
Injection nozzle	NG	Improper injection nozzle starting pressure and spray condition	NG	Adjust or replace the injection nozzle
OK				
Compression pressure	NG	Blown out head gasket Broken piston ring	NG	Replace the head gasket or the piston ring

### 2. Gas Leakage Noise

Exhaust pipes	NG	Loosely connected exhaust pipes Broken exhaust pipes	NG	Tighten the exhaust pipe connections Replace the exhaust pipes
OK				
Injection nozzles and/or glow plugs	NG	Loose injection nozzles and/or glow plugs	NG	Replace the washers Tighten the injection nozzles and/or the glow plugs

Continued on the next page

## 10. ABNORMAL ENGINE NOISE

### 2. Gas Leakage Noise

Checkpoint	Trouble Cause	Countermeasure
Continued from the previous page		
OK		
Exhaust manifold	Loosely connected exhaust manifold and/or glow plugs	Tighten the exhaust manifold connections
OK		
Cylinder head gasket	Damaged cylinder head gasket	Replace the cylinder head gasket

### 3. Continuous Noise

Fan belt	Loose fan belt	Readjust the fan belt tension
OK		
Cooling fan	Loose cooling fan	Retighten the cooling fan
OK		
Water pump bearing	Worn or damaged water pump bearing	Replace the water pump bearing
OK		
Alternator or vacuum pump	Defective alternator or vacuum pump	Repair or replace the alternator or the vacuum pump
OK		
Valve clearance	Valve clearance improperly adjusted	Adjust the valve clearance

## 10. ABNORMAL ENGINE NOISE

### 4. Slapping Noise

Checkpoint		Trouble Cause		Countermeasure
Valve clearance	NG	Valve clearance improperly adjusted	NG	Adjust the valve clearance
OK				
Rocker arm	NG	Damaged rocker arm	NG	Replace the rocker arm
OK				
Flywheel	NG	Loose flywheel bolts	NG	Retighten the flywheel bolts
OK				
Crankshaft and thrust bearings	NG	Worn or damaged crankshaft and/or thrust bearings	NG	Replace the crankshaft and/or the thrust bearings
OK				
Crankshaft and connecting rod bearings	NG	Worn or damaged crankshaft and/or connecting rod bearings	NG	Replace the crankshaft and/or the connecting rod bearings
OK				
Connecting rod bushing and piston pin	NG	Worn or damaged connecting rod bushing and piston pin	NG	Replace the connecting rod bushing and/or the piston pin
OK				
Piston and cylinder liner	NG	Worn or damaged piston and cylinder liner Foreign material in the cylinder	NG	Replace the piston and the cylinder liner





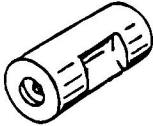





---











# MEMO

A series of horizontal dotted lines for writing.

**SECTION 11**  
**SPECIAL TOOL LIST**

## SPECIAL TOOL LIST

ITEM NO.	ILLUSTRATION	PART NO.	PARTS NAME	PAGE
1		5-8840-0145-0	Measuring Device	25
2		5-8840-2675-0	Compression Gauge	26
3		5-8840-9029-0	Compression Gauge Adapter	26
4		5-8840-0019-0	Sliding Hammer	35 71
5		5-8840-2034-0	Nozzle Holder Remover	35
6		9-8523-1423-0	Valve Spring Compressor	42 85
7		5-8840-0086-0	Camshaft Timing Gear Universal Puller	46 64
8		9-8523-1212-0	Valve Guide Replacer	49 50
9		5-8840-2313-0	Cylinder Liner Installer	58
10		5-8840-2038-0	Camshaft Bearing Replacer	63 64

ITEM NO.	ILLUSTRATION	PART NO.	PARTS NAME	PAGE
11		9-8840-2057-0	Crankshaft Timing Gear Remover	70
12		9-8522-0020-0	Crankshaft Timing Gear Installer	70
13		5-8840-2000-0	Crankshaft Pilot Bearing Remover	71
14		5-8522-0024-0	Crankshaft Pilot Bearing Installer	71
15		5-8840-2061-0	Crankshaft Front Oil Seal Installer	79
16		5-8840-2033-0	Valve Stem Oil Seal Installer	85
17		5-8840-9058-0	Cylinder Liner Remover Ankle	56
18		5-8840-9038-0	Cylinder Liner Remover	56
19		5-8840-2360-0	Rear Oil Seal Remover	38
20		5-8840-9057-0	Oil Seal Installer (Axial Type)	98



---

# MEMO

A series of horizontal dotted lines for writing.

## SECTION 12

# REPAIR STANDARDS

### TABLE OF CONTENTS

ITEM	PAGE
General rules .....	199
Repair standards chart .....	200


### General Rules

1. These tables provide standards relating the repair of the following diesel engine;
 

Model A-4JG1
2. These Repair Standards are based on inspection items, together with dimensions, assembly standards, limit values, and repair procedures.
  - (1) Nominal dimensions are the standard production values.
  - (2) Assembly standards considered to be the values used as objectives during the assembly procedures which follow repairs; as a result, they may be somewhat at variance with the assembly dimensions of a new engine.
  - (3) Limit values refer to the measured values resulting from wear, etc., beyond which a part must not be used. If a measured value falls beyond the limit value, the part involved must be repaired or replaced.
  - (4) "Repair Procedures" indicates normal repair methods.
  - (5) Unless otherwise stated, the unit of numerical values in tables should be taken to refer to millimeters, mm (in).
3. Explanation of Terms Used in Tables
  - (1) The dimension of "wear" refers to the difference between the dimensions of a part which is not worn (or the "nominal dimension" of a part without wear) and the dimension of the part suffering from the most wear (the dimension of the worn part).
  - (2) Uneven wear means the difference between the maximum and minimum wear values.
4. When repairs are requested on the overall engine, first perform bench tests to determine what parts require repairs, then perform the minimum disassembly and repairs required to correct the problems. When repairs on a specific engine part are requested, repairs to be made in reference to the relevant items in accordance with the repair standards listed in this manual.

**REPAIR STANDARDS**

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments
Time for engine disassembly and repair		Cylinder compression pressure MPa (kgf/cm <sup>2</sup> /psi)	3.04 (31/441)		2.2 (22/313)	Disassemble and repair engine	Warm engine engine speed 200 rpm (varies depending on altitude)
		Fuel consumption L/h	100%		140%		
		Lubricating oil consumption L/h	100%		200%		
Engine Body	Cylinder Body	Wear on liner bore Measured at A-A	Dia. 95.4 (3.756)		Dia 95.5 (3.760)	Upper step wear must be repaired, or replaced with standard dimension liner	(Ref) Cylinder & liner clearance 0.017 – 0.055 (0.0007 – 0.0022)
		Liner projection					
		Cylinder block upper face warpage		0 – 0.10 (0 – 0.0039)		0.20 (0.008)	Not repairable; must be replaced
		Pressure test: 3 minutes kPa (kgf/cm <sup>2</sup> /psi)		490 (5/71)		Leaks require repair or replacement	

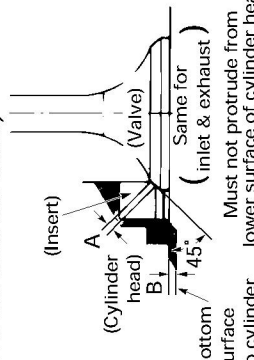Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments	
Engine Body	Cylinder Head	Valve seat depression: B (both inlet and exhaust)  <p>                         (Insert)                          A                          (Cylinder head)                          B                          Bottom surface to cylinder                          45°                          (Valve)                          Same for inlet &amp; exhaust                          Must not protrude from lower surface of cylinder head                     </p>		Inlet side 0.65 (0.029)	1.28 (0.050)	Replace insert	Valve seat angle: α Inlet side 30° Exhaust side 45°	
				Exhaust side 1.1 (0.043)	1.6 (0.063)			
			Contact width with valve seat: A		Inlet side 1.7 (0.067)	2.2 (0.087)	Repair with valve seat cutter	After repair, be sure to lap contact surfaces
				Exhaust side 2.0 (0.079)	2.5 (0.098)			
			Warpage and flatness of cylinder head lower face (mounting surface)		0.05 (0.002) or less	0.2 (0.008)	Maximum Allowable Grinding stock 0.3 (0.012)	
			Warpage of manifold mounting surface		0.05 (0.002) or less	0.2 (0.008)	repair	
	Water-pressure test, 3 minutes kPa (kgf/cm <sup>2</sup> /psi)		490 (5/71)			Leaks require repair or replacement		


**REPAIR STANDARDS**

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments				
Main Operating Parts	Pistons	Clearance with cylinder: grade position from upper face 70 mm (2.76 in)		Clearance with major axis 0.037 – 0.075 (0.0015 – 0.0030)							
		Piston pin and piston pin hole clearance		0.004 – 0.017 (0.0002 – 0.0007)		Replace piston or piston pin					
		Piston pin	Dia. 34.0 (1.34)	33.995 – 34.000 (1.3384 – 1.3386)	Dia. 33.97 (1.3374)	Replace piston pin					
	Piston Ring	Piston Ring Gap	1st compression ring		0.20 – 0.35 (0.008 – 0.014)	1.5 (0.059)	Replace rings or piston				
			2nd compression ring		0.37 – 0.52 (0.015 – 0.020)						
			Oil ring		0.20 – 0.40 (0.008 – 0.016)						
		Tension N (kgf)	1st compression ring		15.7 – 23.5 (1.6 – 2.4)	Replace					
			2nd compression ring		11.0 – 16.5 (1.1 – 1.7)						
		Piston Ring	Oil ring	Oil ring		41 – 56 (4.2 – 5.8)	Replace	Measure with expander attached			
					Clearance between piston ring and ring groove	1st compression ring				0.090 – 0.130 (0.0035 – 0.0051)	Replace rings or piston
	2nd compression ring								0.050 – 0.090 (0.002 – 0.003)		
			Oil ring		0.030 – 0.070 (0.0012 – 0.0028)	0.15 (0.006)					
			Ring gap orientation			At 120° intervals					

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments
Main Operating Parts	Crankshaft	Uneven wear on journal and pins	Journal	Dia.70(2.756)	0.09 (0.0035)	Replace	Do not attempt to grind: always replace with new parts
			Pin	Dia. 53 (2.087)	0.094 (0.0037)		
	Crankshaft	Journal and bearing spread				Use those with projection and proper arc; take care with back side fit	
		Clearance between journal and bearing		0.031 – 0.063 (0.0012 – 0.0025)	0.11 (0.0043)	Replace bearing	
	Crankshaft	Journal bearing undersize				Undersize bearings cannot be used	
		Crankshaft end play		0.10 (0.0039)	0.30 (0.0118)	Replace thrust bearings	Measure at crankshaft's No. 1 bearing thrust surface
	Crankshaft	Crankshaft runout		0.05 (0.002) or less	0.08 (0.0031)	Replace crankshaft	
		Ring gear				Perform lapping on gears with burrs; in cases of severe damage, replace.	
	Connecting Rods	Connecting rod bearing runout				Use those with projection and proper arc; take care work back side fit	
		Clearance between connecting rod bearing and crankpin		0.029 – 0.066 (0.0011 – 0.0026)	0.10 (0.0039)	Replace bearing	




**REPAIR STANDARDS**

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments	
Main Operating Parts	Connecting Rods	Contact between connecting rod bearing and crankpin				Replace parts with poor contact or abrasions	Take special care with crankpin precision	
		Clearance between small end bushing and piston pin		0.008 – 0.020 (0.0003 – 0.0008)	0.05 (0.002)	Replace bushing or pin	Sufficient gap to allow smooth rotation when holding big end	
		Connecting rod bearing undersize	Dia. 53 (2.087)					Crank must not be ground (no undersizes available)
		Connecting rod and crankpin end play		0.175 – 0.290 (0.007 – 0.0114)	0.35 (0.0138)	Replace connecting rod		
		Big end to small end hole twist (per 100 mm)		0.05 (0.002) or less	0.20 (0.008)	Repair or replace		
		Big end to small end hole parallelism (per 100 mm)		0.05 (0.002) or less	0.15 (0.006)	Repair or replace		
	Camshaft	Journal uneven wear		Dia. 50 (1.969)		0.05 (0.002)	Replace camshaft	
		Clearance between journal and bearing			0.025 – 0.085 (0.001 – 0.0033)	0.12 (0.0047)	Replace bearing	
		Journal wear		Dia. 50 (1.969)	49.945 – 49.975 (1.9663 – 1.9675)	Dia. 49.60 (1.953)	Replace camshaft	

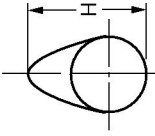Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments
Main Operating Parts	Camshaft	Cam height:	42.02 (1.65)		41.65 (1.64)	Replace camshaft	Minor step wear on cams can be repaired
							
		Camshaft runout		0.02 (0.0008) or less	0.10 (0.004)	Replace camshaft	
		Camshaft end play		0.05 – 0.114 (0.002 – 0.0045)	0.20 (0.008)	Replace thrust plate	




**REPAIR STANDARDS**

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments		
Valve System	Valves	Inlet valve stem wear	Dia. 8 (0.315)	Dia. 7.949 – 7.961 (0.3129 – 0.3134)	Dia. 7.88 (0.3102)	Replace valve			
		Exhaust valve stem wear		Dia. 7.921 – 7.936 (0.3118 – 0.3124)					
		Clearance between inlet valve stem and valve guide		0.039 – 0.069 (0.0015 – 0.0027)	0.2 (0.008)	Replace valve and valve guide together	Measure valve stem at three positions		
		Clearance between exhaust valve stem and guide		0.064 – 0.096 (0.0025 – 0.0038)	0.25 (0.0098)				
		Interference between valve guide and cylinder head			0.02 (0.0008)		Apply oil to valve guide and press in		
		Valve thickness		IN	1.79 (0.070)	1.1 (0.043)	Replace valve and valve guide together		
				EX	1.39 (0.055)				
		Valve spring		Inlet	13.0 (0.512)	254 (25.9/57)	225 (23/51)		Reference value
				Exhaust	13.0 (0.512)				
				Tension N (kgf/lb) (When compressed to installed length) 38.9 mm (1.53 in)					
		Valve spring		Free length	49.7 (1.96)		48.2 (1.90)		
				Inclination	1.5 (0.06) or less		2.5 (0.098)		
				Valve clearance (inlet & exhaust) (cold)		0.40 (0.016)	Adjust		
				Clearance between rocker arm shaft and bushing		0.01 – 0.05 (0.0004 – 0.002)	0.2 (0.008)	Replace bushing or shaft	
				Rocker arm shaft wear		Dia. 18.98 – 19.00 (0.747 – 0.748)	Dia. 18.85 (0.742)	Replace rocker arm shaft	

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments
Valve System	Tappet	Clearance between tappet and cyl. body		0.03 (0.0012)	0.10 (0.0039)	Replace tappet	
		Tappet wear	Out diameter	12.97 – 12.99 (0.5106 – 0.5114)	12.95 (0.5098)	Replace tappet	
Intake System	Air cleaner	Air cleaner element condition					Special order item from manufacturer

**REPAIR STANDARDS**

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments	
Lubricating System	Oil pressure	Lubricating oil pressure (1400 rpm) kPa (kgf/cm <sup>2</sup> /psi)		29 – 64 (3 – 4.5 /43 – 64)	196 (2/28)			
		Vane, rotor and cover clearance		0.02 – 0.07 (0.0008 – 0.0026)	0.15 (0.006)	Replace vane, rotor or cover		
	Oil pump and Relief valve	Rotor and vane clearance		0.14 (0.006) or less	0.20 (0.008)	Replace rotor set		
		Clearance between pump body and vane		0.20 – 0.27 (0.008 – 0.011)	0.40 (0.016)	Repair or replace		
		Pumping rate ( 1000 rpm, SAE #30, pumping pressure 390 kPa (4 kgf/cm <sup>2</sup> /57 psi) oil temp. 50°C (122°F) ) L/min				13		
			Clogging and damage to oil filter					Replace
	Oil filter	Regulating pressure of main oil filter relief valve	kPa (kgf/cm <sup>2</sup> /psi)		420 – 460 (4.3 – 4.7 /61 – 67)			

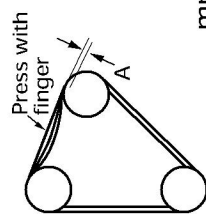Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments	
Cooling System	Water pump	Water pump ball bearing chatter (radial direction)			0.2 (0.0079)	Replace		
		Pumping rate L/min ( pumping speed 3000 rpm, water temp 30°C (86°F) Total head 60 kPa or more )		100				
		Clearance between pump impeller and pump body mm		0.3 – 1.3 (0.0118 – 0.0512)			Repair or replace if impeller and pump body are touching	
		Fan belt deflection  mm(in)		8 – 12 (0.31 – 0.47)			Adjust	(Reference) 10 kgf (22.0 lb/98N) each
		Initial thermostat operating temperature (at sea level)	82°C (180°F)	80 – 84°C (176 – 183°F)				Replace thermostat if operation is incorrect.
		Thermostat full-open temperature (at sea level)		95°C (203°F)			Temperature at which thermostat lift reaches 8mm(0.315in) or more.	
Fuel System	Piping, etc.	Clogged, cracked, loose fuel pipes, injection pipes, nozzle holders; defective seals. Fuel filter element clogging or damage				Repair or replace Replace	Cartridge type	

**REPAIR STANDARDS**

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments		
Electrical	Charge/Discharge Indication	Warning lamp indication				If warning indicator lights when engine is operating at normal speeds, check and repair electrical system.			
		Check for looseness, cuts or damaged insulation to wiring.				Repair			
	Wiring	Rotor	Shaft runout			0.1 (0.0039) or less	Replace rotor		
			Bearing chatter				Replace bearings	Rotate by hand and check for smooth rotation: no abnormal sound or resistance should be felt.	
			Thrust side chatter			0.3 (0.012)	Repair		
	Slip ring dia meter		27 (1.06)			26 (1.02)	Replace		
		Brush	Length	22 (0.86)		6 (0.23)			
	Starter 12V, 2.2 KW (Mitsubishi 897204-7130)	Loose mount					Repair		
			Brush length		18 (0.71)	11 (0.43)	Replace		
		Magnetic switch (at 20°C [68°F])	Jeries coil resistance (Ω)			—			If coil resistance value is severely abnormal, replace switch.
			Shut coil resistance (Ω)			—			
		Commutator	O.D.			Dia. 32 (1.26)	Dia. 31.4 (1.24)	Replace armature	
	Undercut depth				0.5 (0.02)	0.2 (0.008)	Repair		

Major Category	Name of Part	Inspection Item	Nominal Dimension	Assembly Standard Value	Limit	Repair Procedure	Comments
Electrical	Pre-heater	Glow plug				Replace if cut wiring or shorts are found	
	Engine run-in operation					30 minutes or more	
Final Inspection		Cylinder compression pressure MPa (kgf/cm <sup>2</sup> /psi) about 200 rpm		3.04 (31/441)	2.2 (22/313)	Inspect	Warm engine
		Difference in compression between cylinders MPa (kgf/cm <sup>2</sup> /psi) about 200 rpm			5% or less	Inspect	Warm engine
		Lubricating oil pressure kPa (kgf/cm <sup>2</sup> /psi)		294 – 441 (3 – 4.5/43 – 64)		Adjust	1400 rpm Oil Temp About 80°C (176°F)
		Output check		90% or more			When new engine output is 100%
		Fuel consumption check		110% or less			

---

# MEMO

A series of horizontal dotted lines for writing.

SECTION 13

CONVERSION TABLES

INDEX

CONTENTS	PAGE
Length .....	213
Area .....	215
Volume .....	215
Mass .....	217
Pressure .....	218
Torque .....	219
Temperature .....	220

LENGTH

MILLIMETERS TO INCHES

mm	in.	mm	in.	mm	in.	mm	in.
1	0.0394	26	1.0236	51	2.0079	76	2.9921
2	0.0787	27	1.0630	52	2.0472	77	3.0315
3	0.1181	28	1.1024	53	2.0866	78	3.0709
4	0.1575	29	1.1417	54	2.1260	79	3.1102
5	0.1969	30	1.1811	55	2.1654	80	3.1496
6	0.2362	31	1.2205	56	2.2047	81	3.1890
7	0.2756	32	1.2598	57	2.2441	82	3.2283
8	0.3150	33	1.2992	58	2.2835	83	3.2677
9	0.3543	34	1.3386	59	2.3228	84	3.3071
10	0.3937	35	1.3780	60	2.3622	85	3.3465
11	0.4331	36	1.4173	61	2.4016	86	3.3858
12	0.4724	37	1.4567	62	2.4409	87	3.4252
13	0.5118	38	1.4961	63	2.4803	88	3.4646
14	0.5512	39	1.5354	64	2.5197	89	3.5039
15	0.5906	40	1.5748	65	2.5591	90	3.5433
16	0.6299	41	1.6142	66	2.5984	91	3.5827
17	0.6693	42	1.6535	67	2.6378	92	3.6220
18	0.7087	43	1.6929	68	2.6772	93	3.6614
19	0.7480	44	1.7323	69	2.7165	94	3.7008
20	0.7874	45	1.7717	70	2.7559	95	3.7402
21	0.8268	46	1.8110	71	2.7953	96	3.7795
22	0.8661	47	1.8504	72	2.8346	97	3.8189
23	0.9055	48	1.8898	73	2.8740	98	3.8583
24	0.9449	49	1.9291	74	2.9134	99	3.8976
25	0.9843	50	1.9685	75	2.9528	100	3.9370
101	3.9764	111	4.3701	121	4.7638	131	5.1575
102	4.0157	112	4.4094	122	4.8031	132	5.1968
103	4.0551	113	4.4488	123	4.8425	133	5.2362
104	4.0945	114	4.4882	124	4.8819	134	5.2756
105	4.1339	115	4.5276	125	4.9213	135	5.3150
106	4.1732	116	4.5669	126	4.9606	136	5.3543
107	4.2126	117	4.6063	127	5.0000	137	5.3937
108	4.2520	118	4.6457	128	5.0394	138	5.4331
109	4.2913	119	4.6850	129	5.0787	139	5.4724

INCHES TO MILLIMETERS

in.	mm	in.	mm	
	1/64	0.3969	33/64	13.0969
	1/32	0.7938	17/32	13.4938
	3/64	1.1906	35/64	13.8906
1/16		1.5875	9/16	14.2875
	5/64	1.9844	37/64	14.6844
	3/32	2.3813	19/32	15.0813
	7/64	2.7781	39/64	15.4781
1/8		3.1750	5/8	15.8750
	9/64	3.5719	41/64	16.2719
	5/32	3.9688	21/32	16.6688
	11/64	4.3656	43/64	17.0656
3/16		4.7625	11/16	17.4625
	13/64	5.1594	45/64	17.8594
	7/32	5.5563	23/32	18.2563
	15/64	5.9531	47/64	18.6531
1/4		6.3500	3/4	19.0500
	17/64	6.7469	49/64	19.4469
	9/32	7.1438	25/32	19.8438
	19/64	7.5406	51/64	20.2406
5/16		7.9375	13/16	20.6375
	21/64	8.3344	53/64	21.0344
	11/32	8.7313	27/32	21.4313
	23/64	9.1281	55/64	21.8281
3/8		9.5250	7/8	22.2250
	25/64	9.9219	57/64	22.6219
	13/32	10.3188	29/32	23.0188
	27/64	10.7156	59/64	23.4156
7/16		11.1125	15/16	23.8125
	29/64	11.5094	61/64	24.2094
	15/32	11.9063	31/32	24.6063
	31/64	12.3031	63/64	25.0031
1/2		12.7000	1	25.4000



# CONVERSION TABLE

## LENGTH

### FEET TO METERS

ft.	0	1	2	3	4	5	6	7	8	9	ft.
	m	m	m	m	m	m	m	m	m	m	
---	---	0.305	0.610	0.914	1.219	1.524	1.829	2.134	2.438	2.743	---
10	3.048	3.353	3.658	3.962	4.267	4.572	4.877	5.182	5.486	5.791	10
20	6.096	6.401	6.706	7.010	7.315	7.620	7.925	8.230	8.534	8.839	20
30	9.144	9.449	9.754	10.058	10.363	10.668	10.973	11.278	11.582	11.887	30
40	12.192	12.497	12.802	13.106	13.411	13.716	14.021	14.326	14.630	14.935	40
50	15.240	15.545	15.850	16.154	16.459	16.764	17.069	17.374	17.678	17.983	50
60	18.288	18.593	18.898	19.202	19.507	19.812	20.117	20.422	20.726	21.031	60
70	21.336	21.641	21.946	22.250	22.555	22.860	23.165	23.470	23.774	24.079	70
80	24.384	24.689	24.994	25.298	25.603	25.908	26.213	26.518	26.822	27.127	80
90	27.432	27.737	28.042	28.346	28.651	28.956	29.261	29.566	29.870	30.175	90
100	30.480	30.785	31.090	31.394	31.699	32.004	32.309	32.614	32.918	33.223	100

### METERS TO FEET

m	0	1	2	3	4	5	6	7	8	9	
	ft.	ft.	ft.	ft.	ft.	ft.	ft.	ft.	ft.	ft.	
---	---	3.2808	6.5617	9.8425	13.1234	16.4042	19.6850	22.9659	26.2467	29.5276	---
10	32.8084	36.0892	39.3701	42.6509	45.9318	49.2126	52.4934	55.7743	59.0551	62.3360	10
20	65.6168	68.8976	72.1785	75.4593	78.7402	82.0210	85.3018	88.5827	91.8635	95.1444	20
30	98.4252	101.7060	104.9869	108.2677	111.5486	114.8294	118.1102	121.3911	124.6719	127.9528	30
40	131.2336	134.5144	137.7953	141.0761	144.3570	147.6378	150.9186	154.1995	157.4803	160.7612	40
50	164.0420	167.3228	170.6037	173.8845	177.1654	180.4462	183.7270	187.0079	190.2887	193.5696	50
60	196.8504	200.1312	203.4121	206.6929	209.9738	213.2546	216.5354	219.8163	223.0971	226.3780	60
70	229.6588	232.9396	236.2205	239.5013	242.7822	246.0630	249.3438	252.6247	255.9055	259.1864	70
80	262.4672	265.7480	269.0289	272.3097	275.5906	278.8714	282.1522	285.4331	288.7139	291.9948	80
90	295.2756	298.5564	301.8373	305.1181	308.3990	311.6798	314.9606	318.2415	321.5223	324.8032	90
100	328.0840	331.3648	334.6457	337.9265	341.2074	344.4882	347.7690	351.0499	354.3307	357.6116	100

### MILES TO KILOMETERS

miles	0	1	2	3	4	5	6	7	8	9	
	km	km	km	km	km	km	km	km	km	km	
---	---	1.609	3.219	4.828	6.437	8.047	9.656	11.265	12.875	14.484	---
10	16.093	17.703	19.312	20.921	22.531	24.140	25.750	27.359	28.968	30.578	10
20	32.187	33.796	35.406	37.015	38.624	40.234	41.843	43.452	45.062	46.671	20
30	48.280	49.890	51.499	53.108	54.718	56.327	57.936	59.546	61.155	62.764	30
40	64.374	65.983	67.592	69.202	70.811	72.420	74.030	75.639	77.249	78.858	40
50	80.467	82.077	83.686	85.295	86.905	88.514	90.123	91.733	93.342	94.951	50
60	96.561	98.170	99.779	101.389	102.998	104.607	106.217	107.826	109.435	111.045	60
70	112.654	114.263	115.873	117.482	119.091	120.701	122.310	123.919	125.529	127.138	70
80	128.748	130.357	131.966	133.576	135.185	136.794	138.404	140.013	141.622	143.232	80
90	144.841	146.450	148.060	149.669	151.278	152.888	154.497	156.106	157.716	159.325	90
100	160.934	162.544	164.153	165.762	167.372	168.981	170.590	172.200	173.809	175.418	100

### KILOMETERS TO MILES

km	0	1	2	3	4	5	6	7	8	9	
	miles	miles	miles	miles	miles	miles	miles	miles	miles	miles	
---	---	0.621	1.243	1.864	2.485	3.107	3.728	4.350	4.971	5.592	---
10	6.214	6.835	7.456	8.078	8.699	9.321	9.942	10.563	11.185	11.806	10
20	12.427	13.049	13.670	14.292	14.913	15.534	16.156	16.777	17.398	18.020	20
30	18.641	19.262	19.884	20.505	21.127	21.748	22.369	22.991	23.612	24.233	30
40	24.855	25.476	26.098	26.719	27.340	27.962	28.583	29.204	29.826	30.447	40
50	31.069	31.690	32.311	32.933	33.554	34.175	34.797	35.418	36.039	36.661	50
60	37.282	37.904	38.525	39.146	39.768	40.389	41.010	41.632	42.253	42.875	60
70	43.496	44.117	44.739	45.360	45.981	46.603	47.224	47.845	48.467	49.088	70
80	49.710	50.331	50.952	51.574	52.195	52.816	53.438	54.059	54.681	55.302	80
90	55.923	56.545	57.166	57.787	58.409	59.030	59.652	60.273	60.894	61.516	90
100	62.137	62.758	63.380	64.001	64.622	65.244	65.865	66.487	67.108	67.729	100

AREA

SQUARE INCHES TO SQUARE CENTIMETERS

in <sup>2</sup>	0	1	2	3	4	5	6	7	8	9	in <sup>2</sup>
	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	cm <sup>2</sup>	
---	---	6.452	12.903	19.355	25.806	32.258	38.710	45.161	51.613	58.064	---
10	64.516	70.968	77.419	83.871	90.322	96.774	103.226	109.677	116.129	122.580	10
20	129.032	135.484	141.935	148.387	154.838	161.290	167.742	174.193	180.645	187.096	20
30	193.548	200.000	206.451	212.903	219.354	225.806	232.258	238.709	245.161	251.612	30
40	258.064	264.516	270.967	277.419	283.870	290.322	296.774	303.225	309.677	316.128	40
50	322.580	329.032	335.483	341.935	348.386	354.838	361.290	367.741	374.193	380.644	50
60	387.096	393.548	399.999	406.451	412.902	419.354	425.806	432.257	438.709	445.160	60
70	451.612	458.064	464.515	470.967	477.418	483.870	490.322	496.773	503.225	509.676	70
80	516.128	522.580	529.031	535.483	541.934	548.386	554.838	561.289	567.741	574.192	80
90	580.644	587.096	593.547	599.999	606.450	612.902	619.354	625.805	632.257	638.708	90
100	645.160	651.612	658.063	664.515	670.966	677.418	683.870	690.321	696.773	703.224	100

SQUARE CENTIMETERS TO SQUARE INCHES

cm <sup>2</sup>	0	1	2	3	4	5	6	7	8	9	cm <sup>2</sup>
	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	in <sup>2</sup>	
---	---	0.155	0.310	0.465	0.620	0.775	0.930	1.085	1.240	1.395	---
10	1.550	1.705	1.860	2.015	2.170	2.325	2.480	2.635	2.790	2.945	10
20	3.100	3.255	3.410	3.565	3.720	3.875	4.030	4.185	4.340	4.495	20
30	4.650	4.805	4.960	5.115	5.270	5.425	5.580	5.735	5.890	6.045	30
40	6.200	6.355	6.510	6.665	6.820	6.975	7.130	7.285	7.440	7.595	40
50	7.750	7.905	8.060	8.215	8.370	8.525	8.680	8.835	8.990	9.145	50
60	9.300	9.455	9.610	9.765	9.920	10.075	10.230	10.385	10.540	10.695	60
70	10.850	11.005	11.160	11.315	11.470	11.625	11.780	11.935	12.090	12.245	70
80	12.400	12.555	12.710	12.865	13.020	13.175	13.330	13.485	13.640	13.795	80
90	13.950	14.105	14.260	14.415	14.570	14.725	14.880	15.035	15.190	15.345	90
100	15.500	15.655	15.810	15.965	16.120	16.275	16.430	16.585	16.740	16.895	100

VOLUME

CUBIC INCHES TO CUBIC CENTIMETERS

in <sup>3</sup>	0	1	2	3	4	5	6	7	8	9	in <sup>3</sup>
	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	cm <sup>3</sup> (cc)	
---	---	16.387	32.774	49.161	65.548	81.935	98.322	114.709	131.097	147.484	---
10	163.871	180.258	196.645	213.032	229.419	245.806	262.193	278.580	294.967	311.354	10
20	327.741	344.128	360.515	376.902	393.290	409.677	426.064	442.451	458.838	475.225	20
30	491.612	507.999	524.386	540.773	557.160	573.547	589.934	606.321	622.708	639.095	30
40	655.483	671.870	688.257	704.644	721.031	737.418	753.805	770.192	786.579	802.966	40
50	819.353	835.740	852.127	868.514	884.901	901.289	917.676	934.063	950.450	966.837	50
60	983.224	999.611	1015.998	1032.385	1048.772	1065.159	1081.546	1097.933	1114.320	1130.707	60
70	1147.094	1163.482	1179.869	1196.256	1212.643	1229.030	1245.417	1261.804	1278.191	1294.578	70
80	1310.965	1327.352	1343.739	1360.126	1376.513	1392.900	1409.288	1425.675	1442.062	1458.449	80
90	1474.836	1491.223	1507.610	1523.997	1540.384	1556.771	1573.158	1589.545	1605.932	1622.319	90
100	1638.706	1655.093	1671.481	1687.868	1704.255	1720.642	1737.029	1753.416	1769.803	1786.190	100

CUBIC CENTIMETERS TO CUBIC INCHES

cm <sup>3</sup> (cc)	0	1	2	3	4	5	6	7	8	9	cm <sup>3</sup> (cc)
	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	in <sup>3</sup>	
---	---	0.0610	0.1220	0.1831	0.2441	0.3051	0.3661	0.4272	0.4882	0.5492	---
10	0.6102	0.6713	0.7323	0.7933	0.8543	0.9153	0.9764	1.0374	1.0984	1.1594	10
20	1.2205	1.2815	1.3425	1.4035	1.4646	1.5256	1.5866	1.6476	1.7086	1.7697	20
30	1.8307	1.8917	1.9527	2.0138	2.0748	2.1358	2.1968	2.2579	2.3190	2.3799	30
40	2.4409	2.5020	2.5630	2.6240	2.6850	2.7460	2.8071	2.8681	2.9291	2.9901	40
50	3.0512	3.1122	3.1732	3.2342	3.2952	3.3563	3.4173	3.4783	3.5393	3.6004	50
60	3.6614	3.7224	3.7834	3.8444	3.9055	3.9665	4.0275	4.0885	4.1496	4.2106	60
70	4.2716	4.3326	4.3937	4.4547	4.5157	4.5767	4.6377	4.6988	4.7598	4.8208	70
80	4.8818	4.9429	5.0039	5.0649	5.1259	5.1870	5.2480	5.3090	5.3700	5.4310	80
90	5.4921	5.5531	5.6141	5.6751	5.7362	5.7972	5.8582	5.9192	5.9803	6.0413	90
100	6.1023	6.1633	6.2243	6.2854	6.3464	6.4074	6.4684	6.5295	6.5905	6.6515	100

**CONVERSION TABLE**

**VOLUME**

**GALLONS (U.S.) TO LITERS**

U.S. gal.	0	1	2	3	4	5	6	7	8	9	U.S.gal.
	liters	liters	liters	liters	liters	liters	liters	liters	liters	liters	
---	---	3.7854	7.5709	11.3563	15.1417	18.9271	22.7126	26.4980	30.2834	34.0688	---
10	37.8543	41.6397	45.4251	49.2105	52.9960	56.7814	60.5668	64.3523	68.1377	71.9231	10
20	75.7085	79.4940	83.2794	87.0648	90.8502	94.6357	98.4211	102.2065	105.9920	109.7774	20
30	113.5628	117.3482	121.1337	124.9191	128.7045	132.4899	136.2754	140.0608	143.8462	147.6316	30
40	151.4171	155.2025	158.9879	162.7734	166.5588	170.3442	174.1296	177.9151	181.7005	185.4859	40
50	189.2713	193.0568	196.8422	200.6276	204.4131	208.1985	211.9839	215.7693	219.5548	223.3402	50
60	227.1256	230.9110	234.6965	238.4819	242.2673	246.0527	249.8382	253.6236	257.4090	261.1945	60
70	264.9799	268.7653	272.5507	276.3362	280.1216	283.9070	287.6924	291.4779	295.2633	299.0487	70
80	302.8342	306.6196	310.4050	314.1904	317.9759	321.7613	325.5467	329.3321	333.1176	336.9030	80
90	340.6884	344.4738	348.2593	352.0447	355.8301	359.6156	363.4010	367.1864	370.9718	374.7573	90
100	378.5427	382.3281	386.1135	389.8990	393.6844	397.4698	401.2553	405.0407	408.8261	412.6115	100

**LITERS TO GALLONS (U.S.)**

liters	0	1	2	3	4	5	6	7	8	9	liters
	gal.	gal.	gal.	gal.	gal.	gal.	gal.	gal.	gal.	gal.	
---	---	0.2642	0.5283	0.7925	1.0567	1.3209	1.5850	1.8492	2.1134	2.3775	---
10	2.6417	2.9059	3.1701	3.4342	3.6984	3.9626	4.2268	4.4909	4.7551	5.0193	10
20	5.2834	5.5476	5.8118	6.0760	6.3401	6.6043	6.8685	7.1326	7.3968	7.6610	20
30	7.9252	8.1893	8.4535	8.7177	8.9818	9.2460	9.5102	9.7744	10.0385	10.3027	30
40	10.5669	10.8311	11.0952	11.3594	11.6236	11.8877	12.1519	12.4161	12.6803	12.9444	40
50	13.2086	13.4728	13.7369	14.0011	14.2653	14.5295	14.7936	15.0578	15.3220	15.5861	50
60	15.8503	16.1145	16.3787	16.6428	16.9070	17.1712	17.4354	17.6995	17.9637	18.2279	60
70	18.4920	18.7562	19.0204	19.2846	19.5487	19.8129	20.0771	20.3412	20.6054	20.8696	70
80	21.1338	21.3979	21.6621	21.9263	22.1904	22.4546	22.7188	22.9830	23.2471	23.5113	80
90	23.7755	24.0397	24.3038	24.5680	24.8322	25.0963	25.3605	25.6247	25.8889	26.1530	90
100	26.4172	26.6814	26.9455	27.2097	27.4739	27.7381	28.0022	28.2664	28.5306	28.7947	100

**GALLONS (IMP.) TO LITERS**

Imp gal.	0	1	2	3	4	5	6	7	8	9	Imp gal.
	liters	liters	liters	liters	liters	liters	liters	liters	liters	liters	
---	---	4.5459	9.0918	13.6377	18.1836	22.7295	27.2754	31.8213	36.3672	40.9131	---
10	45.4590	50.0049	54.5508	59.0967	63.6426	68.1885	72.7344	77.2803	81.8262	86.3721	10
20	90.9180	95.4639	100.0098	104.5557	109.1016	113.6475	118.1934	122.7393	127.2852	131.8311	20
30	136.3770	140.9229	145.4688	150.0147	154.5606	159.1065	163.6524	168.1983	172.7442	177.2901	30
40	181.8360	186.3819	190.9278	195.4737	200.0196	204.5655	209.1114	213.6573	218.2032	222.7491	40
50	227.2950	231.8409	236.3868	240.9327	245.4786	250.0245	254.5704	259.1163	263.6622	268.2081	50
60	272.7540	277.2999	281.8458	286.3917	290.9376	295.4835	300.0294	304.5753	309.1212	313.6671	60
70	318.2130	322.7589	327.3048	331.8507	336.3966	340.9425	345.4884	350.0343	354.5802	359.1261	70
80	363.6720	368.2179	372.7638	377.3097	381.8556	386.4015	390.9474	395.4933	400.0392	404.5851	80
90	409.1310	413.6769	418.2228	422.7687	427.3146	431.8605	436.4064	440.9523	445.4982	450.0441	90
100	454.5900	459.1359	463.6818	468.2277	472.7736	477.3195	481.8654	486.4113	490.9572	495.5031	100

**LITERS TO GALLONS (IMP.)**

liters	0	1	2	3	4	5	6	7	8	9	liters
	gal.	gal.	gal.	gal.	gal.	gal.	gal.	gal.	gal.	gal.	
---	---	0.2200	0.4400	0.6599	0.8799	1.0999	1.3199	1.5399	1.7598	1.9798	---
10	2.1998	2.4198	2.6398	2.8597	3.0797	3.2997	3.5197	3.7397	3.9596	4.1796	10
20	4.3996	4.6196	4.8396	5.0595	5.2795	5.4995	5.7195	5.9395	6.1594	6.3794	20
30	6.5994	6.8194	7.0394	7.2593	7.4793	7.6993	7.9193	8.1393	8.3592	8.5792	30
40	8.7992	9.0192	9.2392	9.4591	9.6791	9.8991	10.1191	10.3391	10.5590	10.7790	40
50	10.9990	11.2190	11.4390	11.6589	11.8789	12.0989	12.3189	12.5389	12.7588	12.9788	50
60	13.1988	13.4188	13.6388	13.8587	14.0787	14.2987	14.5187	14.7387	14.9586	15.1786	60
70	15.3986	15.6186	15.8386	16.0585	16.2785	16.4985	16.7185	16.9385	17.1584	17.3784	70
80	17.5984	17.8184	18.0384	18.2583	18.4783	18.6983	18.9183	19.1383	19.3582	19.5782	80
90	19.7982	20.0182	20.2382	20.4581	20.6781	20.8981	21.1181	21.3381	21.5580	21.7780	90
100	21.9980	22.2180	22.4380	22.6579	22.8779	23.0979	23.3179	23.5379	23.7578	23.9778	100

MASS

POUNDS TO KILOGRAMS

lbs.	0	1	2	3	4	5	6	7	8	9	lbs.
	kg	kg	kg	kg	kg	kg	kg	kg	kg	kg	
---	---	0.454	0.907	1.361	1.814	2.268	2.722	3.175	3.629	4.082	---
10	4.536	4.990	5.443	5.897	6.350	6.804	7.257	7.711	8.165	8.618	10
20	9.072	9.525	9.979	10.433	10.886	11.340	11.793	12.247	12.701	13.154	20
30	13.608	14.061	14.515	14.970	15.422	15.876	16.329	16.783	17.237	17.690	30
40	18.144	18.597	19.051	19.504	19.958	20.412	20.865	21.319	21.772	22.226	40
50	22.680	23.133	23.587	24.040	24.494	24.948	25.401	25.855	26.308	26.762	50
60	27.216	27.669	28.123	28.576	29.030	29.484	29.937	30.391	30.844	31.298	60
70	31.751	32.205	32.659	33.112	33.566	34.019	34.473	34.927	35.380	35.834	70
80	36.287	36.741	37.195	37.648	38.102	38.555	39.009	39.463	39.916	40.370	80
90	40.823	41.277	41.731	42.184	42.638	43.091	43.545	43.998	44.452	44.905	90
100	45.359	45.813	46.267	46.720	47.174	47.627	48.081	48.534	48.988	49.442	100

KILOGRAMS TO POUNDS

kg	0	1	2	3	4	5	6	7	8	9	kg
	lbs.	lbs.	lbs.	lbs.	lbs.	lbs.	lbs.	lbs.	lbs.	lbs.	
---	---	2.205	4.409	6.614	8.818	11.023	13.228	15.432	17.637	19.842	---
10	22.046	24.251	26.455	28.660	30.865	33.069	35.274	37.479	39.683	41.888	10
20	44.092	46.297	48.502	50.706	52.911	55.116	57.320	59.525	61.729	63.934	20
30	66.139	68.343	70.548	72.753	74.957	77.162	79.366	81.571	83.776	85.980	30
40	88.185	90.390	92.594	94.799	97.003	99.208	101.413	103.617	105.822	108.026	40
50	110.231	112.436	114.640	116.845	119.050	121.254	123.459	125.663	127.868	130.073	50
60	132.277	134.482	136.687	138.891	141.096	143.300	145.505	147.710	149.914	152.119	60
70	154.324	156.528	158.733	160.937	163.142	165.347	167.551	169.756	171.960	174.165	70
80	176.370	178.574	180.779	182.984	185.188	187.393	189.597	191.802	194.007	196.211	80
90	198.416	200.621	202.825	205.030	207.234	209.439	211.644	213.848	216.053	218.258	90
100	220.462	222.667	224.871	227.076	229.281	231.485	233.690	235.895	238.099	240.304	100

KILOGRAMS TO NEWTON

kgf	0	1	2	3	4	5	6	7	8	9	kgf
	N	N	N	N	N	N	N	N	N	N	
---	---	9.81	19.61	29.42	39.23	49.03	58.84	68.65	78.45	88.26	---
10	98.07	107.87	117.68	127.49	137.29	147.10	156.91	166.71	176.52	186.33	10
20	196.13	205.94	215.75	225.55	235.36	245.17	254.97	264.78	274.59	284.39	20
30	294.20	304.01	313.81	323.62	333.43	343.23	353.04	362.85	372.65	382.46	30
40	392.27	402.07	411.88	421.69	431.49	441.30	451.11	460.91	470.72	480.53	40
50	490.33	500.14	509.95	519.75	529.56	539.37	549.17	558.98	568.79	578.59	50
60	588.40	598.21	608.01	617.82	627.63	637.43	647.24	657.05	666.85	676.66	60
70	686.47	696.27	706.08	715.89	725.69	735.50	745.31	755.11	764.92	774.73	70
80	784.53	794.34	804.15	813.95	823.76	833.57	843.37	853.18	862.99	872.79	80
90	882.60	892.41	902.21	912.02	921.83	931.63	941.44	951.25	961.05	970.86	90
100	980.67	990.47	1000.28	1010.08	1019.89	1029.70	1039.50	1049.31	1059.12	1068.92	100

NEWTON TO KILOGRAMS

N	0	10	20	30	40	50	60	70	80	90	N
	kgf	kgf	kgf	kgf	kgf	kgf	kgf	kgf	kgf	kgf	
---	---	1.020	2.039	3.059	4.079	5.099	6.118	7.138	8.158	9.177	---
100	10.197	11.217	12.237	13.256	14.276	15.296	16.316	17.335	18.355	19.375	100
200	20.394	21.414	22.434	23.454	24.473	25.493	26.513	27.532	28.552	29.572	200
300	30.592	31.611	32.631	33.651	34.670	35.690	36.710	37.730	38.749	39.769	300
400	40.789	41.809	42.828	43.848	44.868	45.887	46.907	47.927	48.947	49.966	400
500	50.986	52.006	53.025	54.045	55.065	56.085	57.104	58.124	59.144	60.163	500
600	61.183	62.203	63.223	64.242	65.262	66.282	67.302	68.321	69.341	70.361	600
700	71.380	72.400	73.420	74.440	75.459	76.479	77.499	78.518	79.538	80.558	700
800	81.578	82.597	83.617	84.637	85.656	86.676	87.696	88.716	89.735	90.755	800
900	91.775	92.795	93.814	94.834	95.854	96.873	97.893	98.913	99.933	100.952	900
1000	101.972	102.992	104.011	105.031	106.051	107.071	108.090	109.110	110.130	111.149	1000

**CONVERSION TABLE**

**PRESSURE**

**POUNDS PER SQUARE INCHES TO KILOGRAMS PER SQUARE CENTIMETERS**

lb/in <sup>2</sup>	0	1	2	3	4	5	6	7	8	9	lb/in <sup>2</sup>
(psi)	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	(psi)
---	---	0.0703	0.1406	0.2109	0.2812	0.3515	0.4218	0.4921	0.5625	0.6328	---
10	0.7031	0.7734	0.8437	0.9140	0.9843	1.0546	1.1249	1.1952	1.2655	1.3358	10
20	1.4061	1.4764	1.5468	1.6171	1.6874	1.7577	1.8280	1.8983	1.9686	2.0389	20
30	2.1092	2.1795	2.2498	2.3201	2.3904	2.4607	2.5311	2.6014	2.6717	2.7420	30
40	2.8123	2.8826	2.9529	3.0232	3.0935	3.1638	3.2341	3.3044	3.3747	3.4450	40
50	3.5154	3.5857	3.6560	3.7263	3.7966	3.8669	3.9372	4.0075	4.0778	4.1481	50
60	4.2184	4.2887	4.3590	4.4293	4.4996	4.5700	4.6403	4.7106	4.7809	4.8512	60
70	4.9215	4.9918	5.0621	5.1324	5.2027	5.2730	5.3433	5.4136	5.4839	5.5543	70
80	5.6246	5.6949	5.7652	5.8355	5.9058	5.9761	6.0464	6.1167	6.1870	6.2573	80
90	6.3276	6.3979	6.4682	6.5386	6.6089	6.6792	6.7495	6.8198	6.8901	6.9604	90
100	7.0307	7.1010	7.1713	7.2416	7.3119	7.3822	7.4525	7.5228	7.5932	7.6635	100

**KILOGRAMS PER SQUARE CENTIMETERS TO POUNDS PER SQUARE INCHES**

kgf/cm <sup>2</sup>	0	1	2	3	4	5	6	7	8	9	kgf/cm <sup>2</sup>
	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	lb/in <sup>2</sup> (psi)	
---	---	14.22	28.45	42.67	56.89	71.12	85.34	99.56	113.78	128.01	---
10	142.23	156.45	170.68	184.90	199.12	213.35	227.57	241.79	256.01	270.24	10
20	284.46	298.68	312.91	327.13	341.35	355.58	369.80	384.02	398.24	412.47	20
30	426.69	440.91	455.14	469.36	483.58	497.81	512.03	526.25	540.47	554.70	30
40	568.92	583.14	597.37	611.59	625.81	640.04	654.26	668.48	682.70	696.93	40
50	711.15	725.37	739.60	753.82	768.04	782.27	796.49	810.71	824.93	839.16	50
60	853.38	867.60	881.83	896.05	910.27	924.50	938.72	952.94	967.16	981.39	60
70	995.61	1009.83	1024.06	1038.28	1052.50	1066.73	1080.95	1095.17	1109.39	1123.62	70
80	1137.84	1152.06	1166.29	1180.51	1194.73	1208.96	1223.18	1237.40	1251.62	1265.85	80
90	1280.07	1294.29	1308.52	1322.74	1336.96	1351.19	1365.41	1379.63	1393.85	1408.08	90
100	1422.30	1436.52	1450.75	1464.97	1479.19	1493.42	1507.64	1521.86	1536.08	1550.31	100

**KILOGRAMS PER SQUARE CENTIMETERS TO KILO PASCAL**

kgf/cm <sup>2</sup>	0	1	2	3	4	5	6	7	8	9	kgf/cm <sup>2</sup>
	KPa	KPa	KPa	KPa	KPa	KPa	KPa	KPa	KPa	KPa	
---	---	98.1	196.1	294.2	392.3	490.3	588.4	686.5	784.5	882.6	---
10	980.7	1078.7	1176.8	1274.9	1372.9	1471.0	1569.1	1667.1	1765.2	1863.3	10
20	1961.3	2059.4	2157.5	2255.5	2353.6	2451.7	2549.7	2647.8	2745.9	2843.9	20
30	2942.0	3040.1	3138.1	3236.2	3334.3	3432.3	3530.4	3628.5	3726.5	3824.6	30
40	3922.7	4020.7	4118.8	4216.9	4314.9	4413.0	4511.1	4609.1	4707.2	4805.3	40
50	4903.4	5001.4	5099.5	5197.5	5295.6	5393.7	5491.8	5589.8	5687.9	5785.9	50
60	5884.0	5982.1	6080.1	6178.2	6276.3	6374.4	6472.4	6570.5	6668.6	6766.6	60
70	6864.7	6962.7	7060.8	7158.9	7256.9	7355.0	7453.1	7551.1	7649.2	7747.3	70
80	7845.3	7943.4	8041.5	8139.5	8237.6	8335.7	8433.7	8531.8	8629.9	8727.9	80
90	8826.0	8924.1	9022.1	9120.2	9218.3	9316.3	9414.4	9512.5	9610.5	9708.6	90
100	9806.7	9904.7	10002.8	10100.8	10198.9	10297.0	10395.1	10493.1	10591.2	10689.2	100

**KILO PASCAL TO KILOGRAMS PER SQUARE CENTIMETERS**

KPa	0	100	200	300	400	500	600	700	800	900	KPa
	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	kgf/cm <sup>2</sup>	
---	---	1.020	2.039	3.059	4.079	5.099	6.118	7.138	8.158	9.177	---
1000	10.197	11.217	12.237	13.256	14.276	15.296	16.316	17.335	18.355	19.375	1000
2000	20.394	21.414	22.434	23.454	24.473	25.493	26.513	27.532	28.552	29.572	2000
3000	30.592	31.611	32.631	33.651	34.670	35.690	36.710	37.730	38.749	39.769	3000
4000	40.789	41.809	42.828	43.848	44.868	45.887	46.907	47.927	48.947	49.966	4000
5000	50.986	52.006	53.025	54.045	55.065	56.085	57.104	58.124	59.144	60.163	5000
6000	61.183	62.203	63.223	64.242	65.262	66.282	67.302	68.321	69.341	70.361	6000
7000	71.380	72.400	73.420	74.440	75.459	76.479	77.499	78.518	79.538	80.558	7000
8000	81.578	82.597	83.617	84.637	85.656	86.676	87.696	88.716	89.735	90.755	8000
9000	91.775	92.795	93.814	94.834	95.854	96.873	97.893	98.913	99.933	100.952	9000
10000	101.972	102.992	104.011	105.031	106.051	107.071	108.090	109.110	110.130	111.149	10000

**TORQUE**

**FOOT POUNDS TO KILOGRAMMETERS**

ft. lbs.	0	1	2	3	4	5	6	7	8	9	ft. lbs.
	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	
---	---	0.138	0.277	0.415	0.553	0.691	0.830	0.968	1.106	1.244	---
10	1.383	1.521	1.659	1.797	1.936	2.074	2.212	2.350	2.489	2.627	10
20	2.765	2.903	3.042	3.180	3.318	3.456	3.595	3.733	3.871	4.009	20
30	4.148	4.286	4.424	4.562	4.701	4.839	4.977	5.115	5.254	5.392	30
40	5.530	5.668	5.807	5.945	6.083	6.221	6.360	6.498	6.636	6.774	40
50	6.913	7.051	7.189	7.328	7.466	7.604	7.742	7.881	8.019	8.157	50
60	8.295	8.434	8.572	8.710	8.848	8.987	9.125	9.263	9.401	9.540	60
70	9.678	9.816	9.954	10.093	10.231	10.369	10.507	10.646	10.784	10.922	70
80	11.060	11.199	11.337	11.475	11.613	11.752	11.890	12.028	12.166	12.305	80
90	12.443	12.581	12.719	12.858	12.996	13.134	13.272	13.411	13.549	13.687	90
100	13.826	13.964	14.102	14.240	14.379	14.517	14.655	14.793	14.932	15.070	100

**KILOGRAMMETERS TO FOOT POUNDS**

kgf-m	0	1	2	3	4	5	6	7	8	9	kgf-m
	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	ft. lbs.	
---	---	7.23	14.47	21.70	28.93	36.17	43.40	50.63	57.86	65.10	---
10	72.33	79.56	86.80	94.03	101.26	108.50	115.73	122.96	130.19	137.43	10
20	144.66	151.89	159.13	166.36	173.59	180.83	188.06	195.29	202.52	209.76	20
30	216.99	224.22	231.46	238.69	245.92	253.16	260.39	267.62	274.85	282.09	30
40	289.32	296.55	303.79	311.02	318.25	325.49	332.72	339.95	347.18	354.42	40
50	361.65	368.88	376.12	383.35	390.58	397.82	405.05	412.28	419.51	426.75	50
60	433.98	441.21	448.45	455.68	462.91	470.15	477.38	484.61	491.84	499.08	60
70	506.31	513.54	520.78	528.01	535.24	542.48	549.71	556.94	564.17	571.41	70
80	578.64	585.87	593.11	600.34	607.57	614.81	622.04	629.27	636.50	643.74	80
90	650.97	658.20	665.44	672.67	679.90	687.14	694.37	701.60	708.83	716.07	90
100	723.30	730.53	737.77	745.00	752.23	759.47	766.70	773.93	781.16	788.40	100

**KILOGRAMMETERS TO NEWTONMETERS**

kgf-m	0	1	2	3	4	5	6	7	8	9	kgf-m
	N-m	N-m	N-m	N-m	N-m	N-m	N-m	N-m	N-m	N-m	
---	---	9.81	19.61	29.42	39.23	49.03	58.84	68.65	78.45	88.26	---
10	98.07	107.87	117.68	127.49	137.29	147.10	156.91	166.71	176.52	186.33	10
20	196.13	205.94	215.75	225.55	235.36	245.17	254.97	264.78	274.59	284.39	20
30	294.20	304.01	313.81	323.62	333.43	343.23	353.04	362.85	372.65	382.46	30
40	392.27	402.07	411.88	421.69	431.49	441.30	451.11	460.91	470.72	480.53	40
50	490.33	500.14	509.95	519.75	529.56	539.37	549.17	558.98	568.79	578.59	50
60	588.40	598.21	608.01	617.82	627.63	637.43	647.24	657.05	666.85	676.66	60
70	686.47	696.27	706.08	715.89	725.69	735.50	745.31	755.11	764.92	774.73	70
80	784.53	794.34	804.15	813.95	823.76	833.57	843.37	853.18	862.99	872.79	80
90	882.60	892.41	902.21	912.02	921.83	931.63	941.44	951.25	961.05	970.86	90
100	980.67	990.47	1000.28	1010.08	1019.89	1029.70	1039.51	1049.31	1059.12	1068.93	100

**NEWTONMETERS TO KILOGRAMMETERS**

N-m	0	10	20	30	40	50	60	70	80	90	N-m
	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	kgf-m	
---	---	1.020	2.039	3.059	4.079	5.099	6.118	7.138	8.158	9.177	---
100	10.197	11.217	12.236	13.256	14.276	15.296	16.315	17.335	18.355	19.374	100
200	20.394	21.414	22.433	23.453	24.473	25.493	26.512	27.532	28.552	29.571	200
300	30.591	31.611	32.630	33.650	34.670	35.690	36.709	37.729	38.749	39.768	300
400	40.788	41.808	42.827	43.847	44.867	45.887	46.906	47.926	48.946	49.965	400
500	50.985	52.005	53.024	54.044	55.064	56.084	57.103	58.123	59.143	60.162	500
600	61.182	62.202	63.221	64.241	65.261	66.281	67.300	68.320	69.340	70.359	600
700	71.379	72.399	73.418	74.438	75.458	76.478	77.497	78.517	79.537	80.556	700
800	81.576	82.596	83.615	84.635	85.655	86.675	87.694	88.714	89.734	90.753	800
900	91.773	92.793	93.812	94.832	95.852	96.872	97.891	98.911	99.931	100.950	900
1000	101.970	102.990	104.009	105.029	106.049	107.069	108.088	109.108	110.128	111.147	1000

**CONVERSION TABLE**

**TEMPERATURE**

**FAHRENHEIT TO CENTIGRADE**

°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C
-60	-51.1	-2	-18.9	56	13.3	114	45.6	172	77.8	230	110.0	288	142.2	346	174.4
-58	-50.0	0	-17.8	58	14.4	116	46.7	174	78.9	232	111.1	290	143.3	348	175.6
-56	-48.9	2	-16.7	60	15.6	118	47.8	176	80.0	234	112.2	292	144.4	350	176.7
-54	-47.8	4	-15.6	62	16.7	120	48.9	178	81.1	236	113.3	294	145.6	352	177.8
-52	-46.7	6	-14.4	64	17.8	122	50.0	180	82.2	238	114.4	296	146.7	354	178.9
-50	-45.6	8	-13.3	66	18.9	124	51.1	182	83.3	240	115.6	298	147.8	356	180.0
-48	-44.4	10	-12.2	68	20.0	126	52.2	184	84.4	242	116.7	300	148.9	358	181.1
-46	-43.3	12	-11.1	70	21.1	128	53.3	186	85.6	244	117.8	302	150.0	360	182.2
-44	-42.2	14	-10.0	72	22.2	130	54.4	188	86.7	246	118.9	304	151.1	362	183.3
-42	-41.1	16	-8.9	74	23.3	132	55.6	190	87.8	248	120.0	306	152.2	364	184.4
-40	-40.0	18	-7.8	76	24.4	134	56.7	192	88.9	250	121.1	308	153.3	366	185.6
-38	-38.9	20	-6.7	78	25.6	136	57.8	194	90.0	252	122.2	310	154.4	368	186.7
-36	-37.8	22	-5.6	80	26.7	138	58.9	196	91.1	254	123.3	312	155.6	370	187.8
-34	-36.7	24	-4.4	82	27.8	140	60.0	198	92.2	256	124.4	314	156.7	372	188.9
-32	-35.6	26	-3.3	84	28.9	142	61.1	200	93.3	258	125.6	316	157.8	374	190.0
-30	-34.4	28	-2.2	86	30.0	144	62.2	202	94.4	260	126.7	318	158.9	376	191.1
-28	-33.3	30	-1.1	88	31.1	146	63.3	204	95.6	262	127.8	320	160.0	378	192.2
-26	-32.2	32	0.0	90	32.2	148	64.4	206	96.7	264	128.9	322	161.1	380	193.3
-24	-31.1	34	1.1	92	33.3	150	65.6	208	97.8	266	130.0	324	162.2	382	194.4
-22	-30.0	36	2.2	94	34.4	152	66.7	210	98.9	268	131.1	326	163.3	384	195.6
-20	-28.9	38	3.3	96	35.6	154	67.8	212	100.0	270	132.2	328	164.4	386	196.7
-18	-27.8	40	4.4	98	36.7	156	68.9	214	101.1	272	133.3	330	165.6	388	197.8
-16	-26.7	42	5.6	100	37.8	158	70.0	216	102.2	274	134.4	332	166.7	390	198.9
-14	-25.6	44	6.7	102	38.9	160	71.1	218	103.3	276	135.6	334	167.8	392	200.0
-12	-24.4	46	7.8	104	40.0	162	72.2	220	104.4	278	136.7	336	168.9	400	204.4
-10	-23.3	48	8.9	106	41.1	164	73.3	222	105.6	280	137.8	338	170.0	410	210.0
-8	-22.2	50	10.0	108	42.2	166	74.4	224	106.7	282	138.9	340	171.1	420	215.6
-6	-21.1	52	11.1	110	43.3	168	75.6	226	107.8	284	140.0	342	172.2	430	221.1
-4	-20.0	54	12.2	112	44.4	170	76.7	228	108.9	286	141.1	344	173.3	440	226.7

**CENTIGRADE TO FAHRENHEIT**

°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F	°C	°F
-50	-58.0	-18	-0.4	14	57.2	46	114.8	78	172.4	110	230.0	142	287.6	174	345.2
-49	-56.2	-17	1.4	15	59.0	47	116.6	79	174.2	111	231.8	143	289.4	175	347.0
-48	-54.4	-16	3.2	16	60.8	48	118.4	80	176.0	112	233.6	144	291.2	176	348.8
-47	-52.6	-15	5.0	17	62.6	49	120.2	81	177.8	113	235.4	145	293.0	177	350.6
-46	-50.8	-14	6.8	18	64.4	50	122.0	82	179.6	114	237.2	146	294.8	178	352.4
-45	-49.0	-13	8.6	19	66.2	51	123.8	83	181.4	115	239.0	147	296.6	179	354.2
-44	-47.2	-12	10.4	20	68.0	52	125.6	84	183.2	116	240.8	148	298.4	180	356.0
-43	-45.4	-11	12.2	21	69.8	53	127.4	85	185.0	117	242.6	149	300.2	181	357.8
-42	-43.6	-10	14.0	22	71.6	54	129.2	86	186.8	118	244.4	150	302.0	182	359.6
-41	-41.8	-9	15.8	23	73.4	55	131.0	87	188.6	119	246.2	151	303.8	183	361.4
-40	-40.0	-8	17.6	24	75.2	56	132.8	88	190.4	120	248.0	152	305.6	184	363.2
-39	-38.2	-7	19.4	25	77.0	57	134.6	89	192.2	121	249.8	153	307.4	185	365.0
-38	-36.4	-6	21.2	26	78.8	58	136.4	90	194.0	122	251.6	154	309.2	186	366.8
-37	-34.6	-5	23.0	27	80.6	59	138.2	91	195.8	123	253.4	155	311.0	187	368.6
-36	-32.8	-4	24.8	28	82.4	60	140.0	92	197.6	124	255.2	156	312.8	188	370.4
-35	-31.0	-3	26.6	29	84.2	61	141.8	93	199.4	125	257.0	157	314.6	189	372.2
-34	-29.2	-2	28.4	30	86.0	62	143.6	94	201.2	126	258.8	158	316.4	190	374.0
-33	-27.4	-1	30.2	31	87.8	63	145.4	95	203.0	127	260.6	159	318.2	191	375.8
-32	-25.6	0	32.0	32	89.6	64	147.2	96	204.8	128	262.4	160	320.0	192	377.6
-31	-23.8	1	33.8	33	91.4	65	149.0	97	206.6	129	264.2	161	321.8	193	379.4
-30	-22.0	2	35.6	34	93.2	66	150.8	98	208.4	130	266.0	162	323.6	194	381.2
-29	-20.2	3	37.4	35	95.0	67	152.6	99	210.2	131	267.8	163	325.4	195	383.0
-28	-18.4	4	39.2	36	96.8	68	154.4	100	212.0	132	269.6	164	327.2	196	384.8
-27	-16.6	5	41.0	37	98.6	69	156.2	101	213.8	133	271.4	165	329.0	197	386.6
-26	-14.8	6	42.8	38	100.4	70	158.0	102	215.6	134	273.2	166	330.8	198	388.4
-25	-13.0	7	44.6	39	102.2	71	159.8	103	217.4	135	275.0	167	332.6	199	390.2
-24	-11.2	8	46.4	40	104.0	72	161.6	104	219.2	136	276.8	168	334.4	200	392.0
-23	-9.4	9	48.2	41	105.8	73	163.4	105	221.0	137	278.6	169	336.2	210	410.0
-22	-7.6	10	50.0	42	107.6	74	165.2	106	222.8	138	280.4	170	338.0	220	428.0
-21	-5.8	11	51.8	43	109.4	75	167.0	107	224.6	139	282.2	171	339.8	230	446.0
-20	-4.0	12	53.6	44	111.2	76	168.8	108	226.4	140	284.0	172	341.6	240	464.0
-19	-2.2	13	55.4	45	113.0	77	170.6	109	228.2	141	285.8	173	343.4	250	482.0

Copyright reserved for this manual may not be reproduced or copied, in whole or in part, without the written consent of ISUZU MOTORS LIMITED.

---

**WORKSHOP MANUAL (INDUSTRIAL)**

**A-4JG1**

(IDE-2320)

**Issued by**

**ISUZU MOTORS LIMITED**

POWERTRAIN SERVICE & PARTS

POWERTRAIN OPERATIONS

6-26-1, Minami-oi, Shinagawa-ku, Tokyo, 140-8722, Japan

TEL 03-5471-1111

---

First edition Aug., 1999

107-02K



**ISUZU**