Operation & Maintenance Manual

PC12R₋₈ PC15R₋₈

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC12R-10001 and up PC15R-10001

⚠ WARNING –

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.



1. FOREWORD

This manual provides rules and guidelines which will help you use this machine safely and effectively. Keep this manual handy and have all personnel read it periodically. If this manual has been lost or has become dirty and can not be read, request a replacement manual from Komatsu or your Komatsu distributor.

If you sell the machine, be sure to give this manual to the new owners.

Continuing improvements in the design of this machine can lead to changes in detail which may not be reflected in this manual. Consult Komatsu or your Komatsu distributor for the latest available information of your machine or for questions regarding information in this manual.

This manual may contain attachments and optional equipment that are not available in your area. Consult Komatsu or your Komatsu distributor for those items you may require.

MARNING ————

- Improper operation and maintenance of this machine can be hazardous and could result in serious injury or death.
- Operators and maintenance personnel should read this manual thoroughly before beginning operation or maintenance.
- Some actions involved in operation and maintenance of the machine can cause a serious accident, if they are not done in a manner described in this manual.
- The procedures and precautions given in this manual apply only to intended uses of the machine.
 If you use your machine for any unintended uses that are not specifically prohibited, you must
 be sure that it is safe for you and others. In no event should you or others engage in prohibited
 uses or actions as described in this manual.
- Komatsu delivers machines that comply with all applicable regulations and standards of the
 country to which it has been shipped. If this machine has been purchased in another country or
 purchased from someone in another country, it may lack certain safety devices and specifications
 that are necessary for use in your country. If there is any question about whether your product
 complies with the applicable standards and regulations of your country, consult Komatsu or your
 Komatsu distributor before operating the machine.
- The description of safety is given in SAFETY INFORMATION on page 0-4 and in SAFETY from page 1-1.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Wash hands after handling.

EMISSION CONTROL WARRANTY

EMISSION CONTROL WARRANTY STATEMENT (APPLIES TO CANADA ONLY)

1. Products Warranted

Komatsu America International Company, Komatsu Mining Systems Inc. and Komatsu Utility Corporation (collectively "Komatsu") produce and/or market products under brand names of Komatsu, Dresser, Dressta, Haulpak and Galion. This emissions warranty applies to new engines bearing the Komatsu name installed in these products and used in Canada in machines designed for industrial off-highway use. This warranty applies only to these engines produced on or after January 1, 2000. This warranty will be administered by Komatsu distribution in Canada.

2. Coverage

Komatsu warrants to the ultimate purchaser and each subsequent purchaser that the engine is designed, built and equipped so as to conform, at the time of sale by Komatsu, with all U.S. Federal emission regulations applicable at the time of manufacture and that it is free from defects in workmanship or material which would cause it not to meet these regulations within five years or 3,000 hours of operation, whichever occurs first, as measured from the date of delivery of the engine to the ultimate purchaser.

3. Limitations

Failures, other than those resulting from defects in materials or workmanship, are not covered by this warranty. Komatsu is not responsible for failures or damage resulting from what Komatsu determines to be abuse or neglect, including, but not limited to: operation without adequate coolant or lubricants; over fueling; over speeding; lack of maintenance of lubricating, cooling or intake systems; improper storage, starting, warm-up, nun-in or shutdown practices; unauthorized modifications of the engine. Komatsu is also not responsible for failures caused by incorrect fuel or by water, dirt or other contaminants in the fuel. Komatsu is not responsible for non-engine repairs, "downtime" expense, related damage, fines, all business costs or other losses resulting from a warrantable failure.

KOMATSU IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This warranty, together with the express commercial warranties, are the sole warranties of Komatsu. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICUAL PURPOSE.

GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS

ÉNONCÉ DE GARANTIE SUR LE CONTRÔLE DES ÉMISSIONS (APPLICABLE AU CANADA SEULEMENT):

1. Produits garantis:

Komatsu America International Company, Komatsu Mining Systems Inc. et Komatsu Utility Corporation (collectivement Komatsu) produisent et/ou font la mise en marché de produits portant les noms de marque Komatsu, Dresser, Dressta, Haulpak et Galion. Cette garantie sur les émissions s'applique à tous les nouveaux moteurs portant le nom Komatsu, installés dans ces produits et utilisés au Canada dans des machines conçues pour utilisation industrielle nonroutière. Cette garantie s'applique seulement sur les moteurs produits à partir du 1er Janvier 2000. Cette garantie sera administrée par la distribution de Komatsu au Canada.

2. Couverture:


Komatsu garantit à l'acheteur ultime et chaque acheteur subséquent que le moteur est conçu, construit et équipé en toute conformité, au moment de la vente par Komatsu, avec toutes les Réglementations fédérales américaines sur les émissions applicables au moment de la fabrication et qu'il est exempt de défauts de construction ou de matériaux qui auraient pour effet de contrevenir à ces réglementations en dedans de 5 ans ou 3000 heures d'opération, mesuré à partir de la date de livraison du moteur au client ultime.

3. Limitations:

Les bris, autres que ceux résultant de défauts de matériaux ou de construction, ne sont pas couverts par cette Garantie. Komatsu n'est pas responsable pour bris ou dommages résultant de ce que Komatsu détermine comme étant de l'abus ou négligence, incluant mais ne se limitant pas à: l'opération sans lubrifiants ou agent refroidissants adéquats; la suralimentation d'essence; la survitesse; le manque d'entretien des systèmes de lubrification, de refroidissement ou d'entrée; de pratiques non-propices d'entreposage, de mise en marche, de réchauffement, de conditionnement ou d'arrêt; les modifications non-autorisées du moteur. De plus, Komatsu n'est pas responsable de bris causés par de l'essence inadéquate ou de l'eau, des saletés ouautres contaminants dans l'essence. Komatsu n'est pas responsable des réparations non-reliées au moteur, des dépenses encourues suite aux temps d'arrêts, des dommages relatifs, amendes, et de tout autre coût d'affaires ou autres pertes résultant d'un bris couvert par la garantie.

KOMATSU N'EST PAS RESPONSABLE DES INCIDENTS OU DOMMAGES CONSÉQUENTS.

Cette garantie, ainsi que les garanties expresses commerciales, sont les seules garanties de Komatsu. IL N'Y A AUCUNE AUTRE GARANTIE, EXPRESSE OU SOUS-ENTENDUE, MARCHANDABLE OU PROPICE A UNE UTILISATION PARTICULIÈRE.

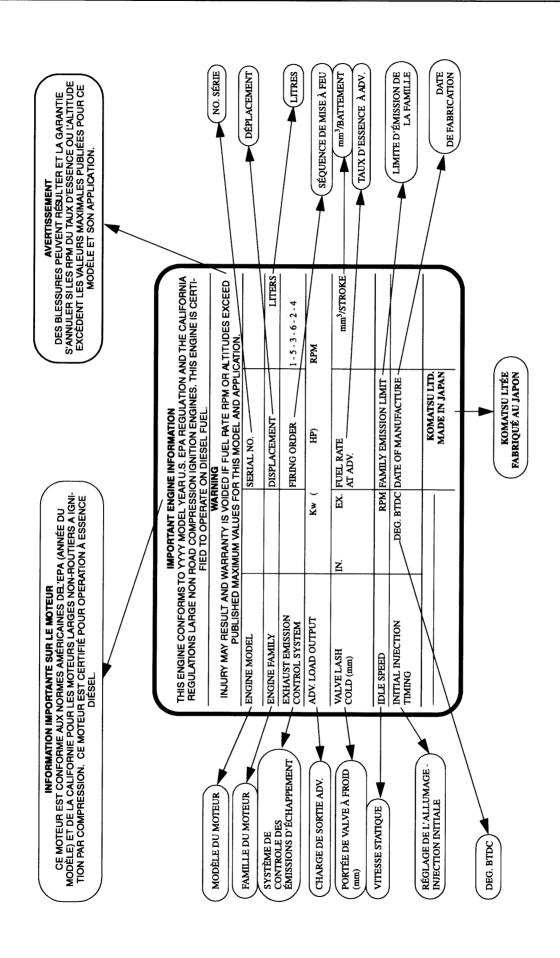

ENGINE DATAPLATE - ENGLISH / FRENCH

2. SAFETY INFORMATION

Most accidents are caused by the failure to follow fundamental safety rules for the operation and maintenance of machines. To avoid accidents, read, understand and follow all precautions and warnings in this manual and on the machine before performing operation and maintenance.

To identify safety messages in this manual and on machine labels, the following signal words are used.



This word is used on safety messages and safety labels where there is a high probability of serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage to the machine.



This word is used on safety messages and safety labels where there is a potentially dangerous situation which could result in serious injury or death if the hazard is not avoided. These safety messages or labels usually describe precautions that must be taken to avoid the hazard. Failure to avoid this hazard may also result in serious damage to the machine.



 This word is used on safety messages and safety labels for hazards which could result in minor or moderate injury if the hazard is not avoided. This word might also be word for hazards where the only result could be damage to the machine.

NOTICE

 This word is used for precautions that must be taken to avoid actions which could shorten the life of the machine.

Safety precautions are described in SAFETY from page 1-1.

Komatsu cannot predict every circumstance that might involve a potential hazard in operation and maintenance. Therefore the safety messages in this manual and on the machine may not include all possible safety precautions. If any procedures or actions not specifically recommended or allowed in this manual are used, you must be sure that you and others can do such procedures and actions safely and without damaging the machine. If you are unsure about the safety of some procedures, contact Komatsu distributor.

3. INTRODUCTION

3.1 INTENDED USE

This Komatsu HYDRAULIC EXCAVATOR is designed to be used mainly for the following work:

- Digging work
- Smoothing work
- Ditching work
- Loading work

See the section "12.13 WORK POSSIBLE USING HYDRAULIC EXCAVATOR" for further details.

3.2 FEATURES

- Arm with built-in breaker with easy removal and installation of chisel
- PPC (hydraulic pilot) control lever for accurate operations
- Wide range of attachments for superb versatility

3.3 BREAKING IN THE MACHINE

Your Komatsu machine has been thoroughly adjusted and tested before shipment.

However, operating the machine under severe conditions at the beginning can adversely affect the performance and shorten the machine life.

Be sure to break in the machine for the initial 100 hours (as indicated by the service meter.) During breaking in:

- Idle the engine for 5 minutes after starting it up.
- Avoid operation with heavy loads or at high speeds.
- Avoid sudden starts, sudden acceleration, sudden steering and sudden stops except in cases of emergency.


The precautions given in this manual for operating, maintenance, and safety procedures are only those that apply when this product is used for the specified purpose. If the machine is used for a purpose that is not listed in this manual, Komatsu cannot bear any responsibility for safety. All consideration of safety in such operations is the responsibility of the user.

Operations that are prohibited in this manual must never be carried out under any circumstances.

4. LOCATION OF PLATES, TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR


4.1 MACHINE SERIAL NO. PLATE POSITION

On the left front of the frame.

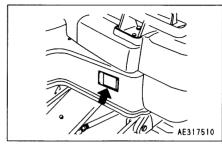

4.2 ENGINE SERIAL NO. PLATE POSITION

On the upper side of the engine cylinder head cover

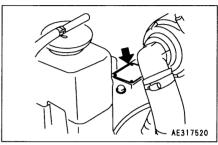

4.3 TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR

Machine serial No.:	
Engine serial No.:	
Distributor name:	
Address:	Phone:
Service personnel for your machine:	
	Phone:

REMARKS

5. CONTENTS

1.	Forev	vord	0- 1
2.	Safet	y information	0- 4
3.	Introd	luction	0- 5
4.	Locat	ion of plates, table to enter serial No. and distributor	0- 6
S	AFET	4	
6.	Gene	ral precautions	1- 2
7.	Preca	utions during operation	1- 7
	7.1	Before starting engine	1- 7
	7.2	After starting engine	1- 9
	7.3	Transportation	1-16
	7.4	Battery	1-17
	7.5	Towing	1-19
8.	Preca	utions for maintenance	1-20
	8.1	Before carrying out maintenance	1-20
	8.2	During maintenance	1-24
9.	Positi	on for attaching safety labels	1-29
OI	PERA	TION	
10.	Gene	ral view	2- 2
	10.1	General view of machine	2- 2
	10.2	General view of controls and gauges	2- 3
11.	Expla	nation of components	2- 4
	11.1	Machine monitor	2- 4
	11.2	Switches	2- 7
	11.3	Control levers and pedals	2- 9
	11.4	Engine food	2-13
	11.5	Operator's seat	2-14
	11.6	Manual storage space • Tool box	2-14
	11.7	Battery hook	2-14
	11.8	Front window (for machine equipped with cab (option))	2-15
	11.9	Door lock (for machine equipped with cab (option))	2-17
		Hammer for emergency escape (for machine equipped with cab (option))	2-18
		Cap, cover with lock	2-18
		Fuse	2-20
		Fusible link	2-20

5. CONTENTS

12.	Opera	ntion	2-21
	12.1	Check before starting engine	2-21
	12.2	Starting engine	2-28
	12.3	Operations and checks after starting engine	2-31
	12.4	Moving machine off	2-33
	12.5	Steering machine	2-36
	12.6	Stopping machine	2-38
	12.7	Swinging	2-39
	12.8	Operation of work equipment	2-40
	12.9	Prohibitions for operation	2-41
	12.10	Precautions for operation	2-44
		Precautions when traveling up or down hills	2-45
	12.12	How to escape from mud	2-47
	12.13	Work possible using hydraulic excavator	2-48
	12.14	Replacement of bucket	2-50
	12.15	Parking machine	2-51
	12.16	Check after finishing work	2-52
		Stopping engine	2-52
	12.18	Check after stopping engine	2-53
	12.19	Locking	2-53
	12.20	Handling rubber shoes (rubber shoes only)	2-54
13.	Trans	portation	2-60
	13.1	Loading, unloading work	2-60
	13.2	Precautions for loading	2-62
	13.3	Precautions for transportation	2-62
	13.4	Method of lifting machine	2-63
14.	Cold v	weather operation	2-64
		Precautions for low temperature	2-64
	14.2		2-66
	14.3	After cold weather	2-66
15.	Lona-	term storage	2-67
	15.1	Before storage	2-67
	15.2	During storage	2-68
	15.3	After storage	2-68
16	T	leshooting	2-69
	լ բույր		
	16.1	Phenomena that are not failures	2-69
	16.1 16.2		2-69 2-69

MAINTENANCE

17.	7. Guides to maintenance	3- 2
18.	B. Outlines of service	3- 4
	18.1 Outline of oil, fuel, coolant	
	18.2 Outline of electric system	
	18.3 Outline of hydraulic system	
19.). Wear parts list	3- 8
20.). Use of fuel, coolant and lubricants according to ambient temperature	3- 9
21.	Standard tightening torques for bolts and nuts	3-13
	21.1 Introduction of necessary tools	3-13
	21.2 Torque list	3-14
22 .	2. Periodic replacement of safety critical parts	3-15
23.	B. Maintenance schedule chart	3-17
	23.1 Maintenance schedule chart	
	23.2 Maintenance interval when using hydraulic breaker	3-19
24.	l. Service Procedure	3-20
	24.1 Initial 250 hours service	
	24.2 When required	
	24.3 Check before starting	
	24.4 Every 100 hours service	3-43
	24.5 Every 250 hours service	
	24.6 Every 500 hours service	
	24.7 Every 1000 hours service	
	24.8 Every 2000 hours service	
SP	PECIFICATIONS	
25	: Charifications	4 0

OPTIONS, ATTACHMENTS

26.	Gene	ral precautions	5-	2
	26.1	Precautions related to safety	5-	2
		Precautions when installing attachments		3
27.	Using	seat belt	5-	4
		Seat belt	5-	4
28.	Hand	ing bucket with hook	5-	6
	28.1	Checking for damage to bucket with hook	5-	6
		Prohibited operations	5-	6
		Precautions during operations	5-	6
29.	Hand	ling 2-way piping	5-	7
		Switching between 1-way and 2-way		7
		Operating pedal		7
30.	Introd	luction of optional parts and attachments	5-	8
	30.1	Introduction of optional parts and attachments		8
	30.2	Selection of track shoes	5-	9
	30.3	Combinations table of attachments	5-1	10
		Precautions for operating with hydraulic breaker	5-1	11
		Operation of quick breaker arm		14

SAFETY

– 🛕 WARNING –

Read and follow all safety precautions. Failure to do so may result in serious injury or death.


This safety section also contains precautions for optional equipment and attachments.

SAFETY RULES

- Only trained and authorized personnel can operate and maintain the machine.
- Follow all safety rules, precautions and instructions when operating or performing maintenance on the machine.
- Do not operate the machine if you are not feeling well, or if you are taking medicine which will make you sleepy, or if you have been drinking. Operating in such a condition will adversely affect your judgement and may lead to an accident.
- When working with another operator or with a person on worksite traffic duty, be sure that all personnel understand all hand signals that are to be used.
- Always follow all rules related to safety.


SAFETY FEATURES

- Be sure that all guards and covers are in their proper position. Have guards and covers repaired if damaged.
- Use safety features such as safety lock levers ① and the seat belt properly.
- Never remove any safety features. Always keep them in good operating condition.
 Safety lock lever → See "12.15 PARKING MACHINE".
 Seat belt → See "27 USING SEAT BELT".
- Improper use of safety features could result in serious bodily injury or death.

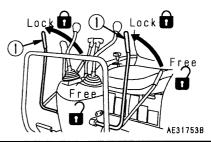

CLOTHING AND PERSONAL PROTECTIVE ITEMS

- Avoid loose clothing, jewelry, and loose long hair. They can catch on controls or in moving parts and cause serious injury or death.
- Also, do not wear oily clothes, because they are flammable.
- Wear a hard hat, safety glasses, safety shoes, mask or gloves when operating or maintaining the
 machine. Always wear safety goggles, hard hat and heavy gloves if your job involves scattering
 metal chips or minute materials particularly when driving pins with a hammer and when cleaning
 the air cleaner element with compressed air. Check also that there is no one near the machine.
- Check that all protective equipment functions properly before using.

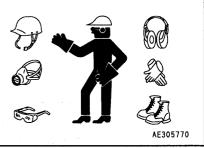

UNAUTHORIZED MODIFICATION

Any modification made without authorization from Komatsu can create hazards. Before making a modification, consult your Komatsu distributor. Komatsu will not be responsible for any injury or damage caused by any unauthorized modification.


ALWAYS APPLY LOCK WHEN LEAVING OPERATOR'S SEAT

 When standing up from the operator's seat, always place the safety lock levers ① securely in the LOCK position. If you accidentally touch the levers when they are not locked, the work equipment may suddenly move and cause serious injury or damage.

• When leaving the machine, lower the blade and ripper completely to the ground, set the safety lock levers ① to the LOCK position, then stop the engine. Use the key to lock all the equipment. Always remove the key and take it with you.

Work equipment posture → See "12.15 PARKING MACHINE".


Locking → See "12.19 LOCKING"

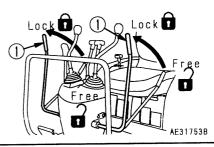


MOUNTING AND DISMOUNTING

- Never jump on or off the machine. Never get on or off a moving machine.
- When getting on or off the machine, always face the machine and use the handrails and steps.
- Never hold any control levers or lock levers when getting on or off the machine.
- To ensure safety, always maintain three-point contact (both feet and one hand, or both hands and one foot) with the handrails and steps to ensure that you support yourself.
- If there is any oil, grease, or mud on the handrails or steps, wipe it off immediately. Always keep these parts clean. Repair any damage and tighten any loose bolts.
- Never stand on the engine hood, which is slippery and dangerous.
- When getting on or off the machine, or when moving along the top of the track, if you hold the handrail inside the door when moving on top of the track shoe, and the door lock is not locked securely, the door may move and cause you to fall.
 Always lock the door securely.

Method of locking door → See "11.9 DOOR LOCK".

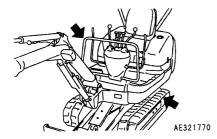

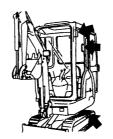

AE317540



AL187320

PRECAUTIONS FOR OPENING AND CLOSING SLIDING DOOR

It is very dangerous if fingers are caught in the sliding door.

Open and close the sliding door with its knob.

When closing the sliding door, in particular, take care not to get your fingers and hand caught between it and the cab pillar.

FIRE PREVENTION FOR FUEL AND OIL

Fuel, oil, and antifreeze can be ignited by a flame. Fuel is particularly flammable and can be hazardous.

Always observe the following:

- Keep any flame or lighted cigarette away from flammable fluids.
- Stop the engine and do not smoke when refueling.
- Tighten all fuel and oil caps securely.
- Use well-ventilated areas for adding or storing oil and fuel.
- Keep oil and fuel in the determined place and do not allow unauthorized persons to enter.









A0055030

A0055040

PRECAUTIONS WHEN HANDLING AT HIGH TEMPERATURE

- Immediately after operations are stopped, the engine oil and hydraulic oil are at high temperature and are still under pressure. Attempting to remove the cap, drain the oil or water, or replace the filters may lead to serious burns. Always wait for the temperature to go down, and follow the specified procedures when carrying out these operations.
- To prevent hot water from spurting out, stop the engine, wait for the water to cool, then loosen
 the cap slowly to relieve the pressure before removing the cap.
 (When checking if the water temperature has gone down, put your hand near the front face of the
 radiator and check the air temperature. Be careful not to touch the radiator.)
- To prevent hot oil from spurting out, stop the engine, wait for the oil to cool, then loosen the cap slowly to relieve the pressure before removing the cap.
 (When checking if the oil temperature has gone down, put your hand near the front face of the hydraulic tank and check the air temperature. Be careful not to touch the hydraulic tank.)



ASBESTOS DUST HAZARD PREVENTION

Asbestos dust can be hazardous to your health if it is inhaled.

Komatsu does not use asbestos in its products, but if you handle materials containing asbestos fibers, follow the guidelines given below:

- Never use compressed air for cleaning.
- Use water to keep down the dust when cleaning.
- If there is danger that there may be asbestos dust in the air, operate the machine from an upwind position whenever possible.
- Use an approved respirator if necessary.



A0055060

CRUSHING OR CUTTING PREVENTION

Do not enter, or put your hand or arm or any other part of your body between movable parts such as the work equipment and cylinders, or between the machine and work equipment.

If the work equipment is operated, the clearance will change and this may lead to serious damage or personal injury.

If it is necessary to go between movable parts, always lock the levers and be sure that the work equipment cannot move. For details, see "8. PRECAUTIONS FOR MAINTENANCE".



A0066090

FIRE EXTINGUISHER AND FIRST AID KIT

Always follow the precautions below to prepare for action if any injury or fire should occur.

- Be sure that fire extinguishers have been provided and read the labels to ensure that you know how to use them.
- Provide a first aid kit at the storage point. Carry out periodic checks and add to the contents if necessary.
- Know what to do in the event of a fire or injury.
- Decide the phone numbers of persons (doctor, ambulance, fire station, etc.) to contact in case of an emergency. Post these contact numbers in specified places and make sure that all personnel know the numbers and correct contact procedures.



PRECAUTIONS FOR ATTACHMENTS

- When installing and using an optional attachment, read the instruction manual for the attachment and the information related to attachments in this manual.
- Do not use attachments that are not authorized by Komatsu or your Komatsu distributor. Use of unauthorized attachments could create a safety problem and adversely affect the proper operation and useful life of the machine.
- Any injuries, accidents, product failures resulting from the use of unauthorized attachments will
 not be the responsibility of Komatsu.

VENTILATION FOR ENCLOSED AREAS

Exhaust fumes from the engine can kill.

- If it is necessary to start the engine within an enclosed area, or you handle fuel, flushing oil, or paint, open the doors and windows to ensure that you provide adequate ventilation to prevent gas poisoning.
- If opening the doors and windows still does not provide adequate ventilation, set up fans.



A0055060

PRECAUTIONS WITH CAB GLASS

If by mistake the cab glass on the work equipment side should crack, there is danger of direct contact between the operator's body and the work equipment. This is extremely dangerous. If the glass is cracked, stop operations immediately and replace the glass.

EMERGENCY EXIT FROM OPERATOR'S CAB

- If it should become impossible to open the door, break the window glass with the attached hammer, then escape.
- When escaping, remove the broken pieces of the glass from the sash so that you will not cut yourself with them. Take care not to slip on the broken and scattered pieces.

Part No. of hammer: 20U-54-25910

Escaping method → See "11.10 HAMMER FOR EMERGENCY ESCAPE".






AE301610

7.1 BEFORE STARTING ENGINE

SAFETY AT WORKSITE

- Before starting operations, thoroughly check the area for any unusual conditions that could be dangerous.
- Check the terrain and condition of the ground at the worksite, and determine the best and safest method of operation.
- Make the ground surface as hard and horizontal as possible before carrying out operations.
 If the jobsite is dusty, spray water before starting operations.
- If you need to operate on a road, protect pedestrians and cars by designating a person for worksite traffic duty or by installing fences and putting up No Entry signs around the worksite.
- If water lines, gas lines, or high-voltage electrical lines may be buried under the worksite, contact each utility and identify their locations. Be careful not to sever or damage any of these lines.
- Check the ground condition and the depth and flow of water before operating in water or crossing a river. NEVER be in water which is in excess of the permissible water depth.

Permissible water depth → See "12.10 PRECAUTIONS FOR OPERATION".

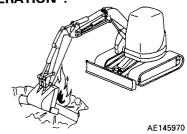

CHECKS BEFORE STARTING ENGINE

Carry out the following checks before starting the engine at the beginning of the days work. Failure to carry out these checks may lead to serious injury or damage.

Completely remove all flammable materials accumulated around the engine and battery, return
all fuel containers to their proper place, remove all parts and tools from the operator's compartment, and remove any dirt from the mirrors, handrails, and steps.

Walk-around checks → See "12.1.1 WALK-AROUND CHECK".

 Check the coolant level, fuel level, and oil level in the hydraulic tank, check for clogging of the air cleaner, and check the electric wiring.

Checks before starting → See "12.1.2 CHECK BEFORE STARTING".

- Adjust the operator's seat to a position where it is easy to carry out operations, and check for wear or damage to the seat belt and seat belt mounting equipment.
- Check that the gauges work properly, and check that the control levers are all at the NEUTRAL position.

Method of checking operation of gauges →

See "12.1.3 OPERATIONS AND CHECKS BEFORE STARTING ENGINE".

• Check that the mirrors and window glass provide a clear view.


If the above inspections show any abnormality, carry out repairs immediately.



WHEN STARTING ENGINE

- Walk around your machine again just before mounting it, and check for people and objects that might be in the way.
- Never start the engine if a warning tag has been attached to the blade control lever.
- When starting the engine, sound the horn as an alert.
- Start and operate the machine only while seated.
- An additional worker may ride in the machine only when sitting in the passenger seat. Do not allow anyone to ride on the machine body.
- Do not short circuit the starting motor circuit to start the engine. It is not only dangerous, but will also cause damage to the equipment.



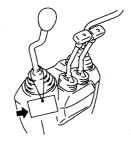

AL067371

7.2 AFTER STARTING ENGINE

CHECKS AFTER STARTING ENGINE

Failure to carry out the checks properly after starting the engine will lead to delays in discovery of abnormalities, and this may lead to serious injury or damage to the machine.

When carrying out the checks, use a wide area where there are no obstructions. Do not allow anyone near the machine.

- Check the operation of the gauges and equipment, and check the operation of the blade, ripper, brakes, travel system, and steering system.
- Checks for any abnormality in the sound of the machine, vibration, heat, smell, or gauges; check also that there is no leakage of air, oil, or fuel.
- If any abnormality is found, carry out repairs immediately.
 If the machine is used when it is not improper condition, it may lead to serious injury or damage to the machine.

PRECAUTIONS WHEN STARTING OFF


Check the direction of the track frame before operating the travel

 When the blade is at the rear of the machine, the operation of the travel lever is reversed, so operate the machine carefully.
 Method of steering machine → See "12.4 MOVING MACHINE OFF".

Before moving the machine off, check again that there are no persons or obstacles in the surrounding area.

- When moving the machine off, sound the horn to warn people in the surrounding area.
- Always sit in the operator's seat when driving the machine.
- Fasten your seat belt securely.
- The operator must not let any other person sit anywhere except in the assistant's seat.
- Always close the door of the operator's cab and check that the door is locked in position securely.

Travel in reverse direction

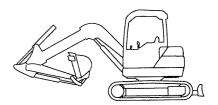

AE145981



AE305800

CHECK WHEN CHANGING DIRECTION

To prevent serious injury or death, always do the following before moving the machine or doing the leveling work.

- Before changing between forward and reverse, reduce speed and stop the machine.
- Before operating the machine, sound the horn to warn people in the area.
- Check that there is no one near the machine. Be particularly careful to check behind the machine.
- When operating in areas that may be hazardous or have poor visibility, designate a person to direct worksite traffic.
- Ensure that no unauthorized person can come within the direction of turning or direction of travel. Always be sure to carry out the above precautions even when the machine is equipped with a mirrors.






PRECAUTIONS WHEN TRAVELING

- Never turn the key in the starting switch to the OFF position when traveling.
 It is dangerous if the engine stops when the machine is traveling, because it becomes impossible to operate the steering.
- It is dangerous to look around you when operating. Always concentrate on your work.
- It is dangerous to drive too fast, or to start suddenly, stop suddenly, turn sharply, or zigzag.
- If you find any abnormality in the machine during operation (noise, vibration, smell, incorrect gauges, air leakage, oil leakage, etc.), move the machine immediately to a safe place and look for the cause.
- Set the work equipment to a height of 40 50 cm (16 20 in) from the ground level and travel on level ground.
- When traveling, do not operate the work equipment control levers. If the work equipment control levers have to be operated, never operate them suddenly.
- Do not operate the steering suddenly. The work equipment may hit the ground surface and cause the machine to lose its balance, or may damage the machine or structures in the area.
- When traveling on rough ground, travel at low speed, and avoid sudden changes in direction.
- Avoid traveling over obstacles as far as possible. If the machine has to travel over an obstacle, keep the work equipment as close to the ground as possible and travel at low speed. Never travel over obstacles which make the machine tilt strongly (10° or more).
- When traveling or carrying out operations, always keep your distance from other machines or structures to avoid coming into contact with them.
- NEVER be in water which is in excess of the permissible water depth.
 Permissible water depth → See "12.10 PRECAUTIONS FOR OPERATION".


AK067210

 When passing over bridges or structures on private land, check first that the structure is strong enough to support the mass of the machine. When traveling on public roads, check first with the relevant authorities and follow their instructions.

INCORRECT

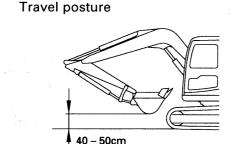

(16 - 20in)

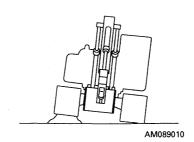


TRAVELING ON SLOPES

- Traveling on slopes could result in the machine tipping over or slipping to the side.
- When traveling on slopes, keep the blade approximately 20 30 cm (8 12 in) above the ground.
 In case of emergency, quickly lower the bucket to the ground to help the machine to stop.
- Do not turn on slopes or travel across slopes. Always go down to a flat place to perform these
 operations.

Method of traveling on slopes → See "12.11 PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS".


- Do not travel on grass, fallen leaves, or wet steel plates. Even slight slopes may cause the machine
 to slip to the side, so travel at low speed and make sure that the machine is always traveling
 directly up or down the slope.
- If the engine stops on a slope, place the travel lever at the neutral position and lower the bucket to the ground. Do not operate the steering. There is danger that the machine will turn under its own weight.

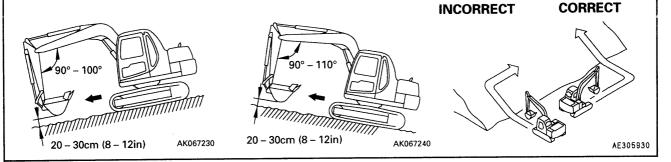

PROHIBITED OPERATIONS

- Do not dig the work face under an overhang. This may cause the overhang to collapse and fall on top of the machine.
- Do not carry out deep digging under the front of the machine. The ground under the machine may collapse and cause the machine to fall. Take emergencies into consideration and set with the travel motor at the rear and the track (undercarriage) at right angles to the road shoulder before digging to enable the machine to move back quickly. If the ground under the machine collapses and there is no time to drive in reverse, do not suddenly raise the arm and boom. In some cases, it may in fact be safer to lower the arm and boom.
- Do not swing the work equipment to the side when it is carrying a heavy load. The stability to the side is less than the stability to the front, so there is danger that the machine may turn over.
- Limits on use

To prevent accidents caused by breakage of the work equipment or tipping over of the machine under excessive load, do not use the machine in excess of its capacity. Always be sure to keep within the maximum specified load and safe angle determined for the structure.

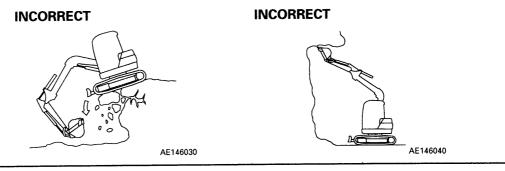

PRECAUTIONS WHEN OPERATING

- Be careful not to approach too close to the edge of cliffs.
- Carry out only work that is specified as the purpose of the machine. Carrying out other operations will cause breakdowns.

Specified operations → See "12.13 WORK POSSIBLE USING HYDRAULIC EXCAVATOR".

- Do the following to ensure good visibility.
 - When operating in dark places, turn on the working lamps and front lamps, and install lighting at the jobsite if necessary.
 - Do not carry out operations in fog, mist, snow, or heavy rain, or other conditions where the visibility is poor. Wait for the weather to clear so that visibility is sufficient to carry out work.
- Always do as follows to prevent the work equipment from hitting other objects.
 - When operating in tunnels, under bridges, under electric wires, or other places where the height is limited, be extremely careful not to let the bucket, boom, or arm hit anything.
 - To prevent accidents caused by hitting other objects, always operate the machine at a speed which is safe for operation, particularly in confined spaces, indoors, and in places where there are other machines.
 - Never pass the bucket over the head of any worker or over the operator's cab on a dump truck.




AE305810

DO NOT GO CLOSE TO HIGH-VOLTAGE CABLES

- Do not let the machine touch overhead electric cables. Even going close to high-voltage cables can cause electric shock. Always maintain the safe distance given below between the machine and the electric cable.
- To prevent accidents, always do as follows.
 - On jobsites where there is danger that the machine may touch the electric cables, consult the
 electricity company before starting operations to check that the actions determined by the
 relevant laws and regulations have been taken.
 - Wear rubber shoes and gloves. Lay a rubber sheet on top of the operator's seat, and be careful
 not to touch the chassis with any exposed part of your body.
 - Use a signalman to give warning if the machine approaches too close to the electric cables.
 - If the work equipment should touch the electric cable, the operator should not leave the operator's compartment.
 - When carrying out operations near high voltage cables, do not let anyone come close to the machine.
 - Check with the electricity company about the voltage of the cables before starting operations.
 - · Keep the following safety distance between the machine and an electric cable.

	Voltage	Min. safety distance
w age	100 • 200 V	2 m
Low voltage	6,600 V	2 m
	22,000 V	3 m
Itag	66,000 V	4 m
0 <	154,000 V	5 m
high	187,000 V	6 m
Very high voltage	275,000 V	7 m
Š	500,000 V	11 m

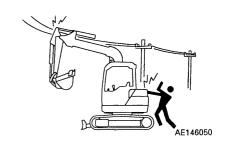

OPERATE CAREFULLY ON SNOW

- When working on snow or icy roads, even a slight slope may cause the machine to slip to the side, so always travel at low speed and avoid sudden starting, stopping, or turning. There is danger of slipping particularly on uphill or downhill slopes.
- With frozen road surfaces, the ground becomes soft when the temperature rises, so the travel
 conditions become unstable. In such cases be extremely careful when traveling.
- When there has been heavy snow, the road shoulder and objects placed beside the road are buried in the snow and cannot be seen, so always carry out operations carefully.
 - When traveling on snow-covered slopes, never apply the brakes suddenly. Reduce the speed and use the engine as a brake while applying the foot brake intermittently (depress the brake intermittently several times). If necessary, lower the bucket to the ground to stop the machine.
- The load varies greatly according to the characteristics of the snow, so adjust the load accordingly and be careful not to let the machine slip.

WORKING ON LOOSE GROUND

- Do not operate the machine on soft ground. It is difficult to get the machine out again.
- Avoid operating your machine too close to the edge of cliffs, overhangs, and deep ditches. If these
 areas collapse under the mass or vibration of your machine, it could fall or tip over and this could
 result in serious injury or death. Remember that the soil after heavy rain, blasting, or earthquakes
 is weakened in these areas.
- Earth laid on the ground and the soil near ditches is loose. It can collapse under the mass or vibration of your machine and cause your machine to tip over.
- Install the head guard (FOPS) when working in areas where there is danger of falling stones.
- Install the ROPS and wear the seat belt when working in areas where there is danger of falling rocks or of the machine turning over.

PRECAUTIONS WHEN WORKING ON SLOPES

- When working on slopes, there is danger that the machine may lose its balance and turn over when the swing or work equipment are operated. Always carry out these operations carefully.
- Do not swing the work equipment from the uphill side to the downhill side when the bucket is loaded. This operation is dangerous.
- If the machine has to be used on a slope, pile the soil to make a platform that will keep the machine as horizontal as possible.

Piled soil on slope → See "12.11 PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS".

INCORRECT

CORRECT

PARKING MACHINE


- Park the machine on level ground where there is no danger of falling rocks or landslides, or of flooding if the land is low, and lower the work equipment to the ground.
- If it is necessary to park the machine on a slope, set blocks under the tracks to prevent the machine from moving, then dig the work equipment into the ground.
- After stopping the engine, operate the right work equipment control lever several times to the RAISE and LOWER positions to release the remaining pressure in the hydraulic circuit.
- When parking on public roads, provide fences, signs, flags, or lights, and put up any other necessary signs to ensure that passing traffic can see the machine clearly, and park the machine so that the machine, flags, and fences do not obstruct traffic.

Parking procedure → See "12.15 PARKING MACHINE".

• When leaving the machine, set the safety lock lever ① to the LOCK position, stop the engine, and use the key to lock all the equipment. Always remove the key and take it with you.

Work equipment posture → See "12.15 PARKING MACHINE". Locks → See "12.19 LOCKING".

Always close the door of the operator's compartment.

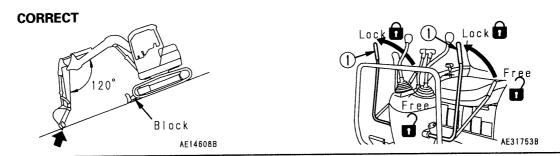


PRECAUTIONS IN COLD AREAS

- After completing operations, remove all water, snow, or mud stuck to the wiring harness, connector ①, switches, or sensors, and cover these parts.
 If the water freezes, it will cause malfunctions of the machine when it is next used, which may lead to unexpected accidents.
- Carry out the warming-up operation thoroughly. If the machine is not thoroughly warmed up before the control levers are operated, the reaction of the machine will be slow, and this may lead to unexpected accidents.
- Operate the control levers to relieve the hydraulic pressure (raise to above the set pressure for the hydraulic circuit and release the oil to the hydraulic tank) to warm up the oil in the hydraulic circuit. This ensures good response from the machine and prevents malfunctions.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is danger that this will ignite the battery.

 When charging or starting the engine with a different power source, melt the battery electrolyte and check for leakage of battery electrolyte before starting.

Battery charge rate → See "14. COLD WEATHER OPERATION".

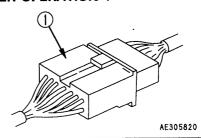

7.3 TRANSPORTATION

PRECAUTIONS FOR TRANSPORTATION

- When transporting the machine, follow the relevant rules and regulations, and take steps to ensure safety.
- When selecting the transportation route, take into consideration the maximum width, height, and weight of the machine when loaded on the trailer.

Height, width, weight when loaded → See "13. TRANSPORTATION".

- When passing over bridges or structures on private land, check first that the structure is strong enough to support the weight of the machine. When traveling on public roads, check first with the relevant authorities and follow their instructions.
- For machines equipped with a cab, always lock the door securely.
- The machine can be divided into units for transportation, so please contact your Komatsu distributor when transporting.

Transportation posture → See "13. TRANSPORTATION".

7.4 BATTERY

BATTERY HAZARD PREVENTION

Battery electrolyte contains sulphuric acid, and batteries generate hydrogen gas, so mistaken handling can lead to serious injury or fire. For this reason, always observe the following precautions.

- Never bring any lighted cigarette or flame near the battery.
- When working with batteries, ALWAYS wear safety glasses and rubber gloves.
- If you spill acid on your clothes or skin, immediately flush the area with large amounts of water.
- Battery acid could cause blindness if splashed into the eyes. If acid gets into your eyes, flush them immediately with large quantities of water and see a doctor at once.
- If you accidentally drink electrolyte, drink a large quantity of water or milk, beaten egg or vegetable oil. Call a doctor or poison prevention center immediately.
- Before working with batteries, stop the engine and turn the starting switch to the OFF position.
- Avoid short-circuiting the battery terminals (between the positive

 terminal and negative
 terminal) through accidental contact with metal objects, such as tools.
- When installing the battery, connect the positive

 terminal first, and when removing the battery, disconnect the negative

 terminal (ground side) first.
- When removing or installing, check which is the positive
 terminal and negative
 terminal, and tighten the nuts securely.
 If the battery electrolyte is near the LOWER LEVEL, add distilled water. Do not add distilled water above the UPPER LEVEL.
- When cleaning the top surface of the battery, wipe it with a damp cloth. Never use gasoline, thinner, or any other organic solvent or cleaning agent.
- Tighten the battery caps securely.
- If the battery electrolyte is frozen, do not charge the battery or start the engine with a different power source. There is danger that this will ignite the battery.
 When charging or starting the engine with a different power source, melt the battery electrolyte and check for leakage of battery electrolyte before starting.
- Always remove the battery from the chassis before charging it.







A0055110


STARTING WITH BOOSTER CABLES

If any mistake is made in the method of connecting the booster cables, it may cause a fire, so always do as follows.

- Carry out the starting operation with two workers (with one worker sitting in the operator's seat).
- When starting from another machine, do not allow the two machines to touch.
- When connecting the booster cables, turn the starting switch OFF for both the normal machine and problem machine.
- Be sure to connect the positive \oplus cable first when installing the booster cables. Disconnect the ground or negative \ominus cable first when removing them.
- The final ground connection is the connection of the ground to the engine block of the problem machine. However, this will cause sparks, so be sure to connect it as far as possible from the battery.

Starting procedure when using booster cables → See "16.3 IF BATTERY IS DISCHARGED".

• When removing the booster cables, be careful not to let the booster cable clips touch each other or to let the clips touch the machine.

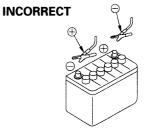

A0067320

CHARGING BATTERY

If the battery is handled incorrectly when it is being charged, there is danger that the battery may explode, so follow the instructions in HANDLING BATTERY and in the instruction manual for the charger, and always observe the following precautions.

- Carry out the charging in a well-ventilated place, and remove the battery caps. This disperses the hydrogen gas and prevents explosion.
- Set the voltage on the charger to match the voltage on the battery to be charged. If the voltage setting is wrong, it will cause the charger to overheat and catch fire, and this may lead to an explosion.
 - Connect the positive \oplus charging clip of the charger to the positive \oplus terminal of the battery, then connect the negative \ominus charging clip to the negative \ominus terminal of the battery. Be sure to tighten both terminals securely.
- If the battery charge is less than 1/10 of the rated charge, and high speed charging is carried out, set to a value below the rated capacity of the battery.
 - If there is an excessive flow of charging current, it may cause leakage or evaporation of the electrolyte, which may catch fire and explode.

INCORRECT




A0055110

AE146090

7.5 TOWING

WHEN TOWING

- Injury or death could result if a disabled machine is towed incorrectly or if there is a mistake in the selection of the wire rope, so always do as follows.
- Do not tow in a different way from the method given in the section "16.2 METHOD OF TOWING MACHINE".
- Always wear leather gloves when handling wire rope.
- When carrying out the preparation for towing with another worker, agree on signals before starting the operation.
- If the engine on the problem machine will not start or there is a failure in the brake system, please contact your Komatsu distributor for repairs.
- It is dangerous to tow a machine on a slope, so choose a place where there is a gradual slope. If there is no place with a gradual slope, carry out work to make the slope as small as possible.
- If a problem machine is towed by another machine, ALWAYS use a wire rope with a sufficient towing capacity for the weight of the problem machine.
- Do not use a wire rope which has cut strands (A), kinks (B), or reduced diameter (C).

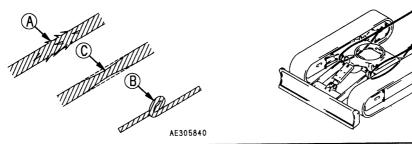

7.6 LIFTING OPERATIONS

PROHIBITIONS FOR LIFTING OPERATIONS

Do not use the work equipment to carry out lifting operations.

In particular, do not do the following.

- Do not weld a hook to the bucket to lift a load.
- Do not fit a wire rope to the bucket teeth to lift a load.
- Do not wind a wire rope directly around the boom or arm to lift a load.

7.7 WINDOW WASHER FLUID

TYPE OF WINDOW WASHER FLUID

Use window washer fluid of ethyl alcohol type.

The vapor of window washer fluid of methyl alcohol type may contain elements harmful to humans. Since the window washer fluid tank is installed inside the machine, use window washer fluid of ethyl alcohol type.

8.1 BEFORE CARRYING OUT MAINTENANCE

NOTIFICATION OF FAILURE

Carrying out maintenance not described in the Komatsu operation and maintenance manual may lead to unexpected failures.


Please contact your Komatsu distributor for repairs.

WARNING TAG

- ALWAYS attach the "DO NOT OPERATE" warning tag to the blade control lever in the operator's
 cab to alert others that you are working on the machine. Attach additional warning tags around
 the machine if necessary.
- If others start the engine, or touch or operate the blade control lever while you are performing service or maintenance, you could suffer serious injury or death.

Warning tag Part No. 09963-03000




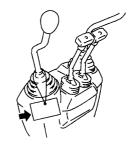

AI 067371

CLEAN BEFORE INSPECTION AND MAINTENANCE

- Clean the machine before carrying out inspection and maintenance. This will ensure that dirt does not get into the machine and will also ensure that maintenance can be carried out safely.
- If inspection and maintenance are carried out with the machine still dirty, it will be difficult to find the location of problems, and there is also the danger that you will get dirty or mud in your eyes, and that you will slip and injure yourself.
- When washing the machine, always do as follows.
 - · Wear non-slip shoes to prevent yourself from slipping on the wet surface.
 - When using high-pressure steam to wash the machine, always wear protective clothing.
 This will protect you from being hit by high-pressure water, and cutting your skin or getting mud or dust into your eyes.
 - Do not spray water directly on to the electrical system (sensors, connectors) ①. If water gets into the electrical system, there is danger that it will cause defective operation and malfunction.

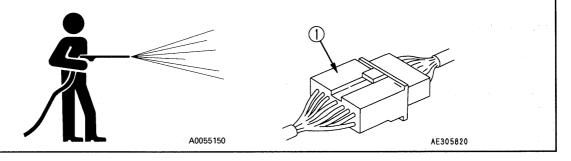

KEEP WORK PLACE CLEAN AND TIDY

Do not leave hammers or other tools lying around in the work place. Wipe up all grease, oil, or other substances that will cause you to slip. Always keep the work place clean the tidy to enable you to carry out operations safely.

If the work place is not kept clean and tidy, there is danger that you will trip, slip, or fall over and injure yourself.

APPOINT LEADER WHEN WORKING WITH OTHERS

When repairing the machine or when removing and installing the work equipment, appoint a leader and follow his instructions during the operation.

When working with others, misunderstandings between workers can lead to serious accidents.

RADIATOR WATER LEVEL


- When inspecting the radiator water level, stop the engine, and wait for the engine and radiator to cool down. Check the water level in the sub-tank. Under normal conditions, do not open the radiator cap.
- If there is no sub-tank, or the radiator cap must be removed, always do as follows.
- Wait for the radiator water temperature to go down before checking the water level.
 (When checking if the water temperature has gone down, put your hand near the engine or radiator and check the air temperature. Be careful not to touch the radiator or engine.)
- Release the internal pressure before removing the radiator cap, and remove the radiator cap slowly.






STOP ENGINE BEFORE CARRYING OUT INSPECTION AND MAINTENANCE

- When carrying out inspection and maintenance, park the machine on level ground where there
 is no danger of falling rocks or land slides, or of flooding if the land is low, then lower the work
 equipment to the ground and stop the engine.
- Operate the right work equipment control lever several times to the RAISE and LOWER positions to release the remaining pressure in the hydraulic circuit, then set safety lock lever ① to the LOCK position.
- Put blocks under the track to prevent the machine from moving.
- The worker carrying out the maintenance should be extremely careful not to touch or get caught in the moving parts.

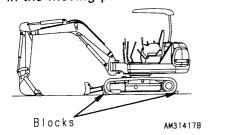



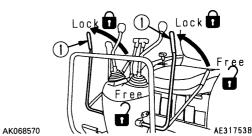

PROPER TOOLS

Use only tools suited to the task. Using damaged, low quality, faulty, or makeshift tools could cause personal injury.

Broken pieces of chisels or hammers could fly into your eyes and blind you.

Tools → See "21.1 INTRODUCTION OF NECESSARY TOOLS".



PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS

Hoses and other parts of the fuel, hydraulic, and brake system are critical parts for ensuring safety, so they must be replaced periodically.

Replacement of safety critical parts requires skill, so please ask your Komatsu distributor to carry out replacement.

- Replace these components periodically with new ones, regardless of whether or not they appear to be defective.
 - These components deteriorate over time, and can cause fire because of oil leakage or failure in the work equipment system.
- Replace or repair any such components if any defect is found, even though they have not reached the time specified.

Replacement of safety critical parts →

See "22. PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS".

USE OF LIGHTING

- When checking fuel, oil, or battery electrolyte, always use lighting with anti-explosion specifications.
 - If such lighting equipment is not used, there is danger of explosion.
- If work is carried out in dark places without installing lighting, there is danger of injury, so always install proper lighting.
- Even if it is dark, do not use a lighter or flame instead of lighting. There is danger of starting a
 fire, and if the battery gas ignites, it may cause an explosion.
- When using the machine as the power supply for the lighting, follow the instructions in this Operation and Maintenance Manual.



PREVENTION OF FIRE

There is danger of the fuel and battery gas catching fire during maintenance, so always follow the precautions below when carrying out maintenance.

- Store fuel, oil, grease, and other flammable materials away from flame.
- Use non-flammable materials as the flushing oil for cleaning parts. Do not use diesel oil or gasoline. There is danger that they will catch fire.
- Never smoke when carrying out inspection or maintenance. Always smoke in the prescribed place.
- When checking fuel, oil, or battery electrolyte, always use lighting with anti-explosion specifications. Never use lighters or matches as lighting.
- When carrying out grinding or welding operations on the chassis, remove any flammable materials to a safe place.
- Be sure that a fire extinguisher is present at the inspection and maintenance point.



A0055020

8.2 DURING MAINTENANCE

PERSONNEL

Only authorized personnel can service and repair the machine. Do not allow unauthorized personnel into the area. If necessary, employ an observer.

Extra precaution should be used when grinding, welding, and using a sledge-hammer.

ATTACHMENTS

- Appoint a leader before starting removal or installation operations for attachments.
- Do not allow anyone other than the workers close to the machine or attachment.
- Place attachments that have been removed from the machine in a safe place so that they do not fall. Put a fence around the attachments, and set up No Entry signs to prevent unauthorized persons from coming close.



A0055130

WORK UNDER THE MACHINE

- Stop the machine on firm, level ground, and always lower all work equipment to the ground before performing service or repairs under the machine.
- Always block the track shoes securely.
- It is extremely dangerous to work under the machine if the track shoes are off the ground and the machine is supported only by the work equipment. Never work under the machine if the machine is poorly supported.



A0055140

WORK ON TOP OF MACHINE

- When carrying out maintenance on top of the machine, make sure that the footholds are clean and free of obstructions, and follow the precautions below to prevent yourself from falling.
 - · Do not spill oil or grease.
 - Do not leave tools lying around.
 - Mind your step when you are walking.
- Never jump down from the machine. When getting on or off the machine, always use the steps and handrails, and maintain three-point contact (both feet and one hand or both hands and one foot) at all times.
- Use protective equipment if necessary.



LOCKING INSPECTION COVERS


When carrying out maintenance with the inspection cover open, lock it securely with a lock bar. If maintenance is carried out with the inspection cover open and not locked in position, it may close suddenly if knocked or blown by the wind, and may cause injury to the operator.

MAINTENANCE WITH ENGINE RUNNING

To prevent injury, do not carry out maintenance with the engine running. If maintenance must be carried out with the engine running, carry out the operation with at least two workers and do as follows.

- One worker must always sit in the operator's seat and be ready to stop the engine at any time.
 All workers must maintain contact with the other workers.
- When carrying out operations near rotating parts, there is danger of being caught in the parts, so be extremely careful.
- When cleaning inside the radiator, set safety lock lever ① to the LOCK position to prevent the work equipment from moving.
- Do not touch any control levers. If any control lever must be operated, always give a signal to the other workers to warn them to move to a safe place.
- Never touch the fan blade or fan belt with any tool or any part of your body. There is danger of serious injury.



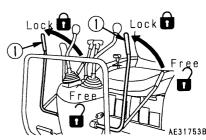


DO NOT DROP TOOLS OR PARTS INSIDE MACHINE

- When opening the inspection window or tank oil filler to carry out inspection, be careful not to drop any nuts, bolts, or tools inside the machine.
 If such parts are dropped into the machine, it will cause breakage of the machine, mistaken operation, and other failures. If you drop any part into the machine, always be sure to remove it from the machine.
- When carrying out inspection, do not carry any unnecessary tools or parts in your pocket.

PRECAUTIONS WHEN USING HAMMER

When using a hammer, always wear safety glasses, safety helmet, and other protective clothing, and put a brass bar between the hammer and the part being hammered.

If hard metal parts such as pins, edges, teeth, or bearings are hit with a hammer, there is danger that broken pieces might fly into your eyes and cause injury.

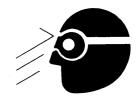

AE305880

REPAIR WELDING

Welding operations must always be carried out by a qualified welder and in a place equipped with a proper equipment. Gas is generated, and there is danger of fire or electrocution when carrying out welding, so never allow any unqualified personnel to carry out welding.

The qualified welder must follow the precautions given below.

- Disconnect the battery terminals to prevent explosion of the battery.
- Remove the paint from the place being welded to prevent gas from being generated.
- If hydraulic equipment or piping, or places close to these are heated, flammable vapor or spray will be generated, and there is danger of this catching fire, so avoid applying heat to such places.
- If heat is applied directly to rubber hoses or piping under pressure, they may suddenly burst, so cover them with fireproof sheeting.
- Always wear protective clothing.
- Ensure that there is good ventilation.
- Clear up any flammable materials, and make sure that there is a fire extinguisher at the workplace.

PRECAUTIONS WITH BATTERY

When repairing the electrical system or when carrying out electrical welding, remove the negative terminal of the battery to stop the flow of current.

Handling battery → See "16.3 IF BATTERY IS DISCHARGED".



WHEN ABNORMALITY IS LOCATED

- If any abnormality is found during inspection, always carry out repairs. In particular, if the machine is used when there is any abnormality in the brakes or work equipment systems, it may lead to serious accident.
- Depending on the type of failure, please contact your Komatsu distributor for repairs.

RULES TO FOLLOW WHEN ADDING FUEL OR OIL

If any flame is brought close to fuel or oil, there is danger that it will catch fire, so always follow the precautions below.

- Stop the engine when adding fuel or oil.
- Do not smoke.
- Spilled fuel and oil may cause you to slip, so always wipe it up immediately.
- Always tighten the cap of the fuel and oil fillers securely.
- Always add fuel and oil in a well-ventilated place.










A0055040

PRECAUTIONS WHEN USING HIGH-PRESSURE GREASE TO ADJUST TRACK TENSION

- Grease is pumped into the track tension adjustment system under high pressure.

 If the specified procedure for maintenance is not followed when making adjustment, valve ① may fly out and cause damage or personal injury.
- When loosening grease drain valve ①, never loosen it more than one turn.
- Never put your face, hands, feet, or any other part of your body directly in front of any grease drain valve.

Adjusting track tension → See "24.2 WHEN REQUIRED".

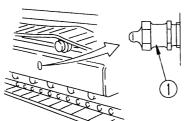



AB307180

HANDLING HIGH-PRESSURE HOSES

- If oil or fuel leaks from high-pressure hoses, it may cause fire or defective operation, which may lead to personal injury or damage. If any damaged hoses or loose bolts are found, stop work and contact your Komatsu distributor for repairs.
- Replacing high-pressure hoses requires a high level of skill, and the torque is determined according to the type of hose and size, so please do not carry out replacement yourself. Ask your Komatsu distributor to carry out replacement.

PRECAUTIONS WITH HIGH-PRESSURE OIL

When inspecting or replacing high-pressure piping or hoses, always check that the pressure in the hydraulic circuit has been released. If the circuit is still under pressure, it will lead to serious injury or damage, so always do as follows.

- For details of the method of releasing the pressure, see "8.1 BEFORE CARRYING OUT MAINTE-NANCE, STOP ENGINE BEFORE CARRYING OUT INSPECTION AND MAINTENANCE". Never carry out inspection or replacement before releasing the pressure completely.
- Wear safety glasses and leather gloves.
- If there is any leakage from the piping or hoses, the piping, hoses, and the surrounding area will be wet, so check for cracks in the piping and hoses and for swelling in the hoses.
 If it is difficult to locate the leakage, always please contact your Komatsu distributor for repairs.
- If you are hit by a jet of high-pressure oil, consult a doctor immediately for medical attention.





A0055190

PRECAUTIONS WHEN CARRYING OUT MAINTENANCE AT HIGH TEMPERATURE

Immediately after stopping operations, the engine coolant, oil at all parts, the exhaust manifold, and the muffler are at high temperature.

In this condition, if the cap is removed, or the oil is drained, or the filters are replaced, this may result in burns or other injury. Wait for the temperature to go down, then carry out the inspection and maintenance in accordance with the procedures given in this manual.

Cleaning inside of cooling system → See "24.2 WHEN REQUIRED".

Checking coolant level, oil level in hydraulic tank \rightarrow see "24.3 CHECK BEFORE STARTING".

Checking lubricating oil level, adding oil → see "24.3-7 PERIODIC MAINTENANCE".

Changing oil, replacing filters → see "24.5-8 PERIODIC MAINTENANCE".



CHECKS AFTER INSPECTION AND MAINTENANCE

Failure to carry out inspection and maintenance fully, or failure to check the function of various maintenance locations may cause unexpected problems and may even lead to personal injury or damage, so always do as follows.

- Checks when engine is stopped
 - Have all the inspection and maintenance locations been checked?
 - · Have all the inspection and maintenance items been carried out correctly?
 - Have any tools or parts dropped inside the machine? It is particularly dangerous if they get caught in the lever linkage.
 - · Has water and oil leakage been repaired? Have bolts been tightened?
- Checks when engine is running
 For details of checks when the engine is running, see "8.2 DURING MAINTENANCE, MAINTENANCE WITH ENGINE RUNNING", and be extremely careful to ensure safety.
- Do the inspection and maintenance locations work normally?
- Is there any oil leakage when the engine speed is raised and load is applied to the hydraulic system?

WASTE MATERIALS

To prevent pollution, particularly in places where people or animals are living, always follow the procedures given below.

- Never dump waste oil in a sewer system, rivers, etc.
- Always put oil drained from your machine in containers. Never drain oil directly onto the ground.
- Obey appropriate laws and regulations when disposing of harmful objects such as oil, fuel, coolant, solvent, filters, and batteries.

INCORRECT




9. POSITION FOR ATTACHING SAFETY LABELS

Always keep these labels clean. If they are lost or damage, attach them again or replace them with a new label.

There are other labels in addition to the safety labels listed as follows, so handle them in the same way.

Safety labels may be available in languages other than English. To find out what labels are available, contact your Komatsu distributor.

9.1 POSITION FOR ATTACHING SAFETY LABELS

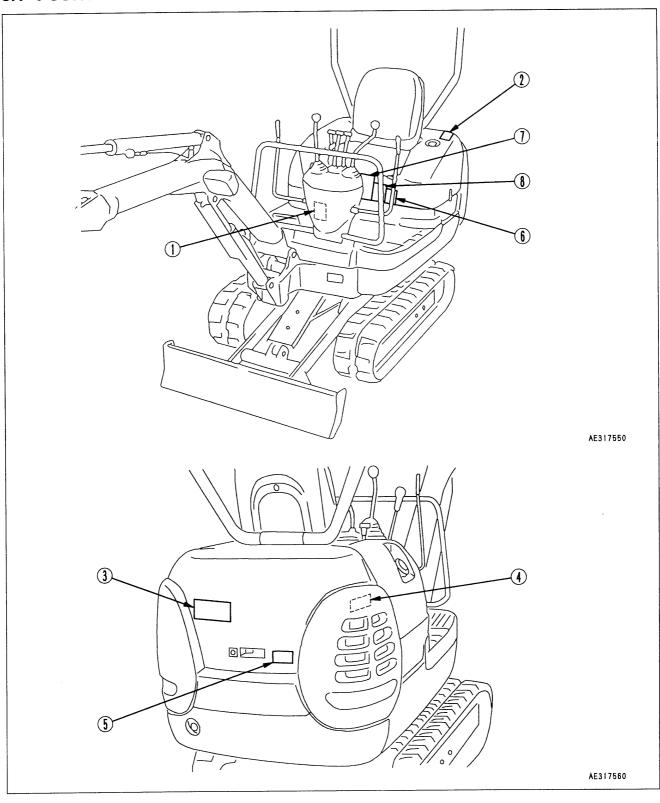

1. Warnings for operation, inspection and maintenance (09651-03001)



WARNING

Improper operation and maintenance can cause serious injury or death.

Read manual and labels before operation and maintenance. Follow instructions and warnings in manual and in labels on machine.

Keep manual in machine cab near operator. Contact Komatsu distributor for a replacement manual.

- 09651-03001

2. Warnings for high temperature hydraulic oil (09653-03001)



WARNING

Hot oil hazard.

To prevent hot oil from spurting out:

- Turn engine off.
- Allow oil to cool.
- Slowly loosen cap to relieve pressure before removing.

- 09653-03001

3. Keeping out of turning area (20M-98-73130)



4. Warning for hot water (09668-03001)



WARNING

Hot water hazard.

To prevent hot water from spurting out:

- Turn engine off.
- Allow water to cool.
- Slowly loosen cap to relieve pressure before removing.

— 09668-03001 **•**

5. Warnings when opening or closing engine hood (21W-98-21480)



6. Warnings for leaving operator's seat (09654-03001)



To avoid hitting unlocked operation levers, lower equipment to ground and move SAFETY LOCK LEVER (located near seat) to LOCK position before standing up from operator's seat.

Sudden and unwanted machine movement can cause serious injury or death.

- 09654-03001

7. Warnings before operating machine (09802-33000)



To prevent SEVERE INJURY or DEATH. Do the following before moving machine or its attachments:

- Honk horn to alert people nearby.
- Be sure no one is on or near machine or in swing area.
- Rotate cab for full view of travel path if it can be done safely.
- Use spotter if view is obstructed. Follow above even if machine equipped with travel alarm and mirrors.

- 09802-33000 ·

8. Warnings when adjusting track tension (09657-03001)



WARNING

High pressure hazard at track adjuster.

When adjusting track tension, never open plug more than one turn

Turning further could cause injury from flying plug and grease.


See manual for adjustment instructions.

09657-03001


OPERATION

10.1 GENERAL VIEW OF MACHINE

If directions are indicated in this section, they refer to the directions shown by the arrows in the diagram below.

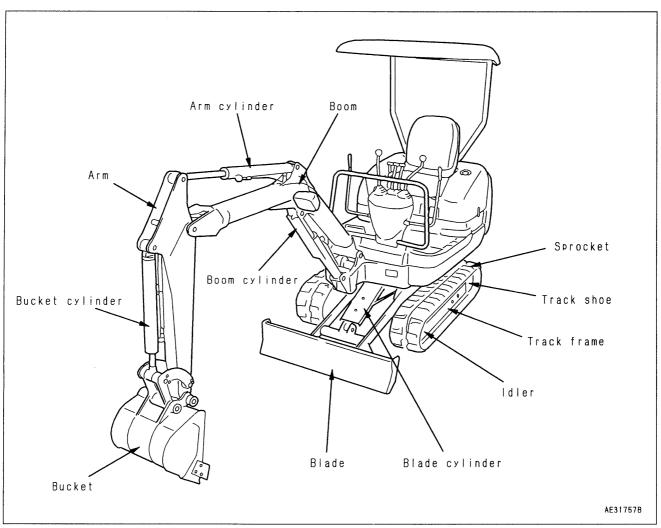

10.2 GENERAL VIEW OF CONTROLS AND GAUGES

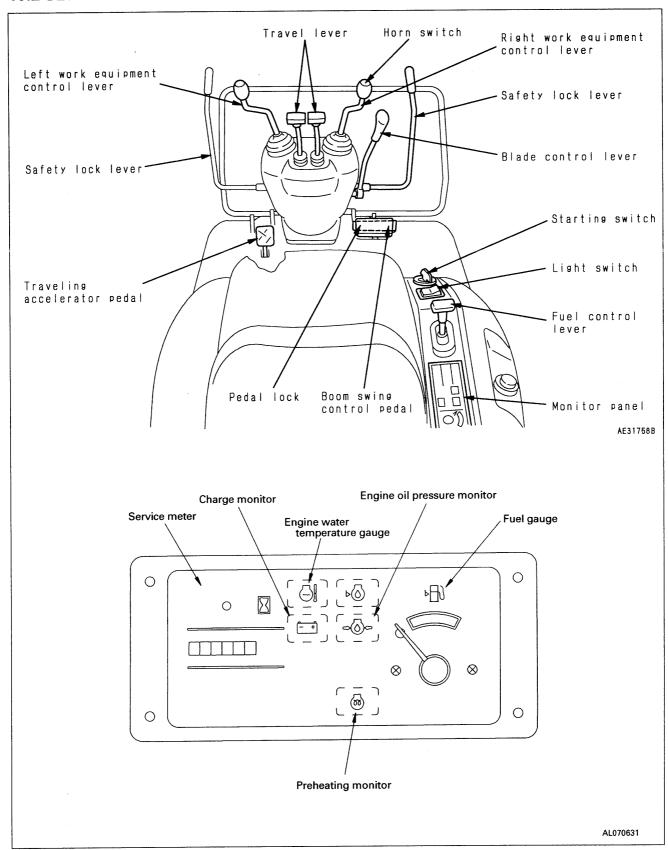


11. EXPLANATION OF COMPONENTS

The following is an explanation of the devices needed for operating the machine.

To carry out suitable operations correctly and safely, it is important to understand fully the methods of operating the equipment and the meanings of the displays.

11.1 MACHINE MONITOR

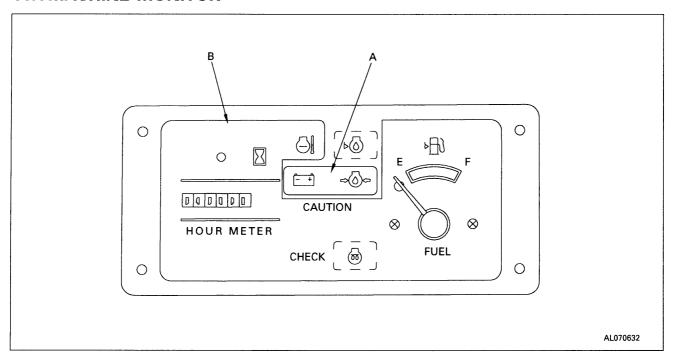

NOTICE

When carrying out checks before starting, do not simply rely on the monitor. Always refer to the periodic maintenance items or "12. OPERATION" to carry out the checks.

A. EMERGENCY STOP ITEMS (11.1.1)

- 🛕 CAUTION -


If these monitor items flash, stop operations immediately, then check and repair the appropriate location.

These are items which need to be observed while the engine is running. If any abnormality occurs, items which need to be repaired immediately are displayed.

If there is any abnormality, the appropriate monitor lamp will flash to indicate the location of the abnormality.

B. METER DISPLAY PORTION (11.1.2)

This portion consists of service meter, engine water temperature gauge, fuel gauge and pre-heating monitor.

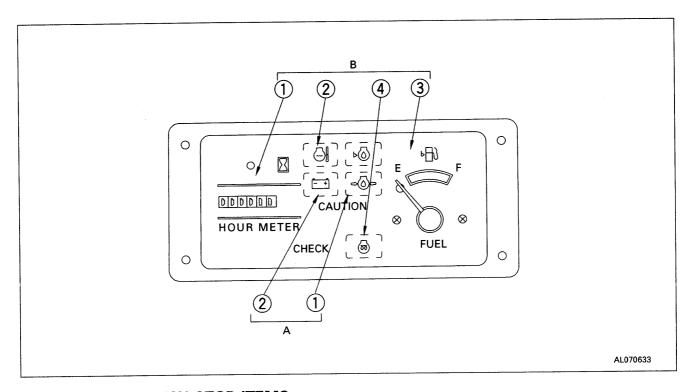

11.1.1 A: EMERGENCY STOP ITEMS



If any monitor lamp flashes, stop the engine or run it at low idling, and take the following actions.

1. ENGINE OIL PRESSURE

If the engine oil pressure drops below the normal pressure, the monitor lamp flashes. At this item, stop the engine and inspect it according to "16.4 OTHER TROUBLE."

REMARK

When the engine is started or stopped with the starting switch at the ON position, the lamp may light up, but this does not indicate any abnormality.


2. CHARGE LEVEL


This monitor indicates an abnormality in the charging system while the engine is running.

If the monitor lamp flashes, check charging. If any abnormality is found, see "16.4 OTHER TROUBLE".

REMARK

When the engine is started or stopped with the starting switch at the ON position, the lamp may light up, but this does not indicate any abnormality.

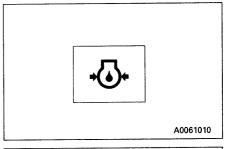

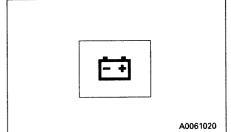

11.1.2 B: METER DISPLAY PORTION


1. SERVICE METER

This meter shows the total operation hours of the machine. Set the periodic maintenance intervals using this display.

The service meter advances while the engine is running - even if the machine is not traveling.

While the engine is running, operation display ① at the top inside of the meter will light to show that the meter is advancing.

The meter will advance by 1 for each hour of operation regardless of the engine speed.

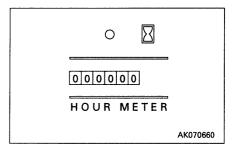


2. ENGINE WATER TEMPERATURE GAUGE

This displays the engine cooling water temperature.

If the engine water temperature is normal, this lamp remains off during operation.

If the engine overheats, this lamp lights up. In this case, idle the engine at low speed until this lamp goes off.

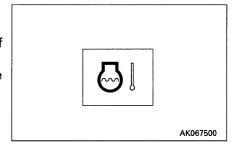

3. FUEL GAUGE

This shows the fuel level in the fuel tank. During normal operation, the lamp should light up in the green range.


If the lamp in the red range flashes during operation, there is less than 5 liters of fuel remaining, so check and add fuel.


The correct level may not be displayed for a short time after the starting switch is turned to the ON position, but this is not an abnormality.

4. ENGINE PRE-HEATING MONITOR


This monitor lamp indicates the pre-heating time required when starting the engine at an ambient temperature below 0°C.

The monitor lamp lights when the starting switch is turned to HEAT position and flashes after about 18 seconds to show that the pre-heating is completed.

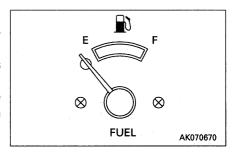

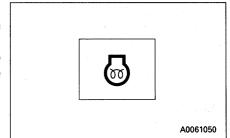

11.2 SWITCHES

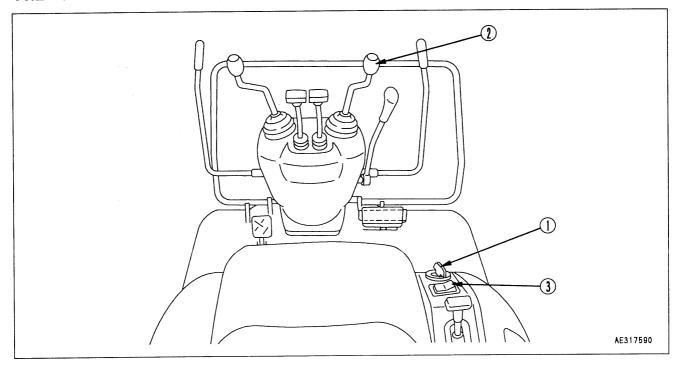

1. STARTING SWITCH

This switch is used to start or stop the engine.

OFF position

The key can be inserted or withdrawn. The switches for the electric system are all turned off and the engine is stopped.

ON position


Electric current flows in the charging and lamp circuits. Keep the starting switch key at the ON position while the engine is running.

START position

This is the engine-start position. Keep the key at this position during cranking. Immediately after starting the engine, release the key which will automatically return to the ON position.


HEAT (preheat) position

When starting the engine in winter, set the key to this position. When the key is set to the HEAT position, the pre-heating monitor lights up. Keep the key at this position until the monitor lamp flashes. Immediately after the pre-heating monitor flashes, release the key. The key automatically returns to the OFF position. Then, start the engine by turning the key to the START position.

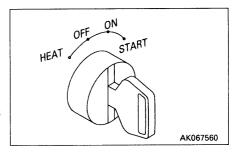

2. HORN BUTTON


When the button at the tip of the right work equipment control lever is pressed, the horn will sound.

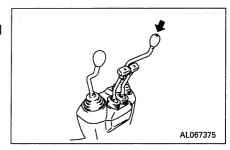


3. CAB LAMP SWITCH

ON position: The headlight and instrument lamp light up.

OFF position: All lamps go off.

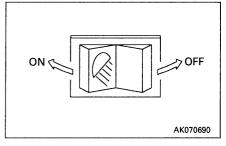


11.3 CONTROL LEVERS AND PEDALS

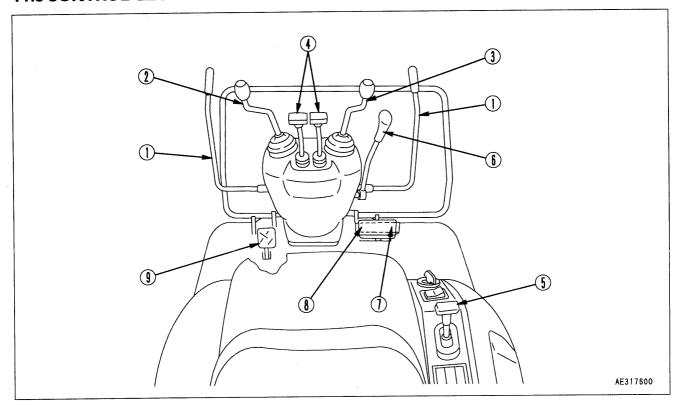

1. LOCK LEVER (FOR LEFT AND RIGHT WORK EQUIPMENT LEVERS)



- When leaving the operator's compartment, set the safety lever securely to the LOCK position. If the gear shift lever is not locked, and it is touched by mistake, this may lead to a serious accident.
- If the safety lever is not placed securely in the LOCK position, the control lever may not be properly locked.
 Check that the situation is as shown in the diagram.

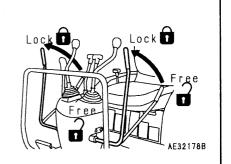




Even when the lock lever is in the lock position, it does not lock the travel, swing and blade.

- 🛕 WARNING —

When the safety lock lever is lowered, take care not to touch the work equipment control lever.

This lever locks the work equipment control systems.

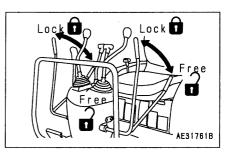

2. LEFT WORK EQUIPMENT CONTROL LEVER

This lever is used to operate the arm and upper structure.

Swing operation

Arm operation


A Swing to right

© Arm IN

B Swing to left

Arm OUT

N (Neutral): The upper structure and arm stop and are held in the same position.

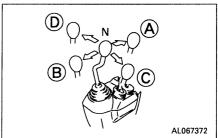

3. RIGHT WORK EQUIPMENT CONTROL LEVER

This lever is used to operate the boom and bucket.

Boom operation

Bucket operation


① RAISE

③ DUMP

② LOWER

4 CURL

N (Neutral): The boom and bucket stop and are held in the same position.

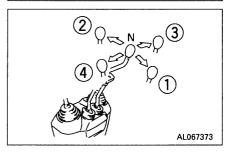


4. TRAVEL LEVERS

• WARNING -

When the track frame is facing the rear, the direction of the travel operation is reversed.

Before operating the travel lever, check if the track frame is facing the front or the rear.

(The track frame is facing the front if the sprocket is at the rear.)

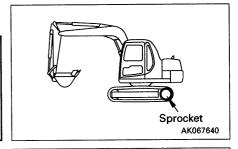

NOTICE

This lever is not locked even when the lock lever is at the LOCK position, so when not traveling, be careful not to touch this lever.

① FORWARD:

The lever is pushed forward.

② REVERSE:

The lever is pulled back.


N (Neutral): The machine stops.



5. FUEL CONTROL LEVER

This lever is used to control the engine speed and output.

- ① Low idling position: Push the lever fully.
- ② High idling position: Pull the lever fully.

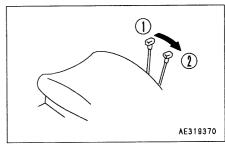


6. BLADE CONTROL LEVER

NOTICE

This lever is not locked even when the lock lever is at the LOCK position, so when not operating the blade, be careful not to touch this lever.

This lever is used to control the blade.


- ① LOWER
- ② RAISE
- N (Neutral): The blade is held in the same position.

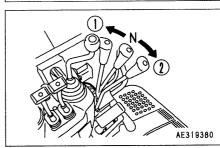

7. BOOM SWING CONTROL PEDAL

This pedal is used to swing the boom.

- 1: Boom swings to the right.
- 2: Boom swings to the left.
- N (Neutral): Boom is stopped and held in this position.

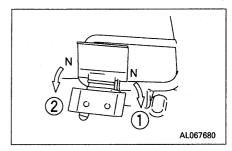


8. PEDAL LOCK (For boom swing pedal)



When boom swing operation is not required, lock the boom with the pedal lock.


If the operation pedal is accidentally pressed while it is not locked, a serious accident may occur.

This device is used to lock the boom swing pedal. If the plate is laid over the pedal, the pedal is locked.

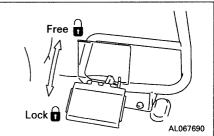

9. TRAVELING ACCELERATOR PEDAL

If the pedal is depressed, the machine speed will increase.

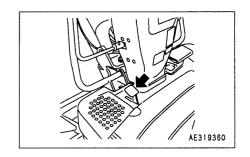


11.4 ENGINE HOOD


- 🛕 WARNING -

When carrying out inspection or maintenance inside the engine hood, always use the hood support lever to keep the engine hood open.


1. Push engine hood lock button.

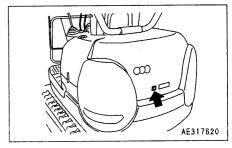

2. Push up the hood until it clicks, and it is secured.

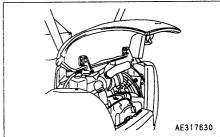


3. When closing the hood, push it up and pull the ring, then lower it.

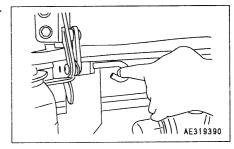


NOTICE

Always keep the hood locked except when opening the hood. It is possible to check if the lock is applied by looking at the direction of the key groove in the lock button.

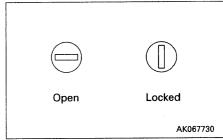


11.5 OPERATOR'S SEAT

If the lever is pulled, the seat bracket is unlocked and the seat can be turned.

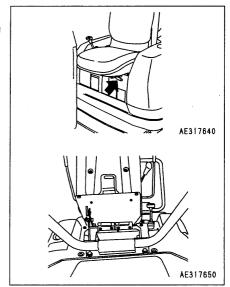


11.6 MANUAL STORAGE SPACE • TOOL BOX

Manual storage space and tool box are under operator's seat. For use, turn the seat up. (Refer 11.5 "Operator's Seat".)

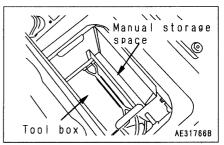

11.7 BATTERY HOOK

This is used for dismounting of battery. When storing, keep this in tool box. When this is kept near battery, it is damaged.

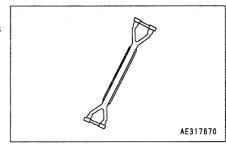

11.8 FRONT WINDOW (FOR MACHINE EQUIPPED WITH CAB (OPTION))

- A WARNING -

When opening the front window, always hold the grip firmly with both hands and pull up. If you use only one hand, your hand may slip and get caught.


It is possible to store (pull up) the front window (top) in the roof of the operator's compartment.


When opening

WARNING

When the front window is open, there is danger that it will fall, so always lock it with left and right lock pins (A).

- 1. Stop the machine on flat ground, lower the work equipment to the ground, and stop the engine.
- 2. Set the lock lever for the work equipment control levers securely to the LOCK position.

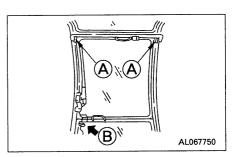


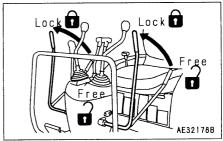



3. Disconnect the wiring for the wiper motor from socket B.

NOTE


If it is attempted to open the front window without disconnecting the wiring, the wiring will be torn off.

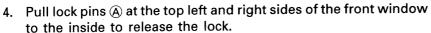

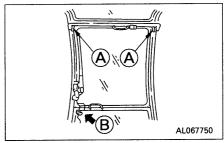


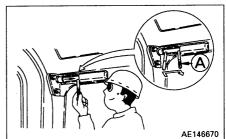

5. From the inside of the operator's cab, hold the bottom grip with the left hand and the top grip with the right hand, pull up the window, and push it in fully until it is locked by catch ©.

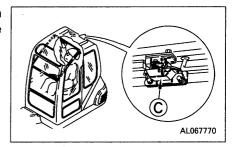

6. Lock with lock pins (A) on the left and right sides.

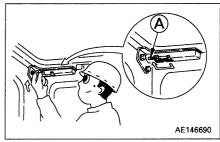


When closing


WARNING

When closing the window, lower it slowly and be careful not to get your hand caught.


- 1. Stop the machine on flat ground, lower the work equipment to the ground, and stop the engine.
- 2. Set the lock lever for the work equipment control levers securely to the LOCK position.

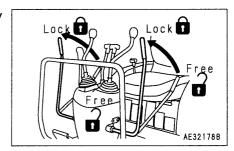


3. Release lock pins (A).

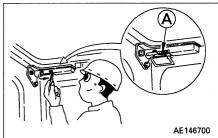

4. Hold the grip at the bottom of the front window with your left hand and the grip at the top with your right hand, release the lock of catch © with your right thumb, then pull the top grip slowly and lower the front window. When releasing the lock of catch ©, push release lever © in the direction of the arrow to release the lock.

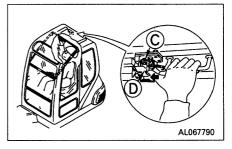


- 5. Lock securely with lock pins (A) at the left and right sides.
- 6. Connect the wiper motor wiring to socket (B).

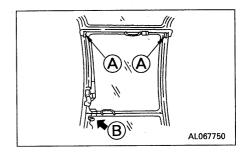


Removing front window (bottom)

With the front window open, remove lock pin (E), and the bottom part of the front window can be removed.

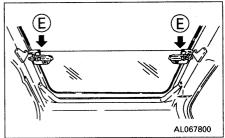


Store the removed bottom part of the front window at the rear of the operator's cab.

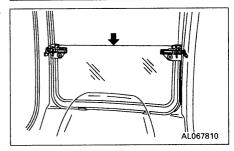

11.9 DOOR LOCK (FOR MACHINE EQUIPPED WITH CAB (OPTION))


Use the door lock to fix the door in position after opening it.

- 1. The door will become fixed in place when it is pressed against catch ①.
- When unlocking the door, pull lever ② on the left side of the operator's seat to release the catch. When fixing the door, fix it firmly to the catch.

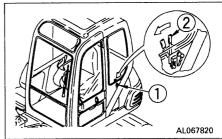

11.10 HAMMER FOR EMERGENCY ESCAPE (FOR MACHINE EQUIPPED WITH CAB (OPTION))


In case it becomes impossible to open the door, a hammer ① to be used for escape from the cab is installed.

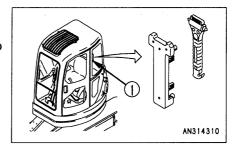

When escaping, break the window glass with hammer ①.

NOTICE

When escaping, remove the broken pieces of the glass from the sash so that you will not cut yourself with them. Take care not to slip on the broken and scattered pieces.

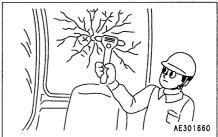


11.11 CAP, COVER WITH LOCK

The fuel filler and engine hood are fitted with locks. Use the starting switch key to lock or unlock these places.

11.11.1 METHOD OF OPENING AND CLOSING CAP WITH LOCK


Toopen the cap

- 1. Insert the key into the cap.
- 2. Turn the key clockwise, align the match mark on the cap with the rotor groove, then remove the cap.

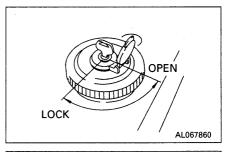


To lock the cap

- 1. Turn the cap into place.
- 2. Turn the key and take the key out.

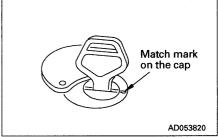

Insert the key as far as it will go. If the key is turned before it is inserted all the way, it may break.

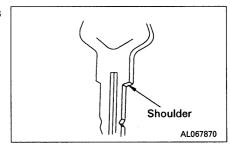

11.11.2 METHOD OF OPENING AND CLOSING COVER WITH LOCK (cover with lock)

To open the cover (locked cover)

- 1. Insert the key
- 2. Turn it counterclockwise and open the cover by pulling the cover grip.

To lock the cover

- 1. Close the cover and insert the key.
- 2. Turn the key clockwise and take the key out.

11.12 FUSE

Loosen the screw indicated by the arrow, and remove the tool box.


NOTICE

Before replacing a fuse, be sure to turn off the starting switch.

The fuses protect the electrical equipment and wiring from burning out.


If the fuse becomes corroded or white powder can be seen, or the fuse is loose in the fuse holder, replace the fuse.

Replace a fuse with another of the same capacity.

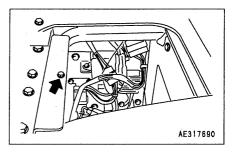

Fuse capacity and circuit name

No.	Fuse capacity	Circuit name
1	10 A	Horn, Working lamp
2	20 A	Engine control system
3	5 A	Monitor and electromagnetic pump
4	20 A	Engine control system
(5)	5 A	Monitor control system

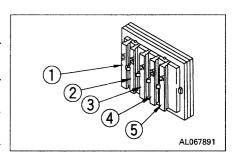


11.13 FUSIBLE LINK

The fusible link is installed to the battery case.

When the starting switch is turned on, if the power is not applied, fusible link ① may be broken. Check the fusible link and replace if necessary.

REMARK

A fusible link is a large fuse installed to a circuit where a large current flows. Similarly to a common fuse, it protects the electric parts and wiring from burning caused by an abnormal current.

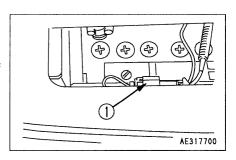


12.1 CHECK BEFORE STARTING ENGINE

12.1.1 WALK-AROUND CHECK

- 🛕 WARNING-

If you open the engine hood, always lock the hood in position securely with hood support lever.

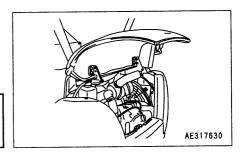


- 🛕 WARNING -

Leakage of oil or fuel, or accumulation of flammable material around high temperature parts, such as the engine muffler may cause fire.

Check carefully, and if any abnormality is found, repair it or contact your Komatsu distributor.

Before starting the engine, look around the machine and under the machine to check for loose nut or bolts, or leakage of oil, fuel, or coolant, and check the condition of the work equipment and hydraulic system. Check also for loose wiring, play, and collection of dust at places which reach high temperatures.

Always carry out the items in this section before starting the engine each day.

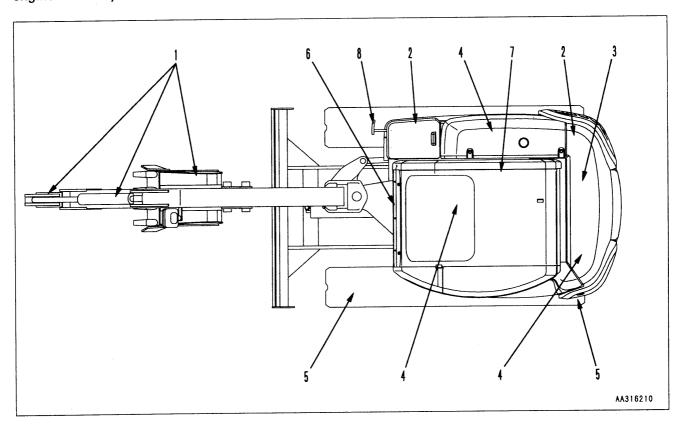

1. Check for damage, wear, play in work equipment, cylinders, linkage, hoses

Check that there are no cracks, excessive wear, or play in the work equipment, cylinders, linkage, or hoses. If any abnormality is found, repair it.

2. Remove dirt and dust from around engine, battery, radiator

Check if there is any dirt or dust accumulated around the engine or radiator. Check also if there is any flammable material (dead leaves, twigs, grass, etc.) accumulated around the battery or high temperature engine parts, such as the engine muffler or turbocharger. Remove all such dirt or flammable material.

3. Check for leakage of water or oil around engine

Check that there is no leakage of oil from the engine or leakage of water from the cooling system. If any abnormality is found, repair it.

4. Check for oil leakage from hydraulic equipment, hydraulic tank, hoses, joints

Check that there is no oil leakage. If any abnormality is found, repair the place where the oil is leaking.

5. Check the undercarriage (track, sprocket, idler, guard) for damage, wear, loose bolts, or leakage of oil from rollers

6. Check for leakage of grease from grease piping

Check that there is no leakage or staining with grease. If any abnormality is found, repair the place where the grease is leaking.

7. Check for damage to gauges, monitor, loose bolts

Check that there is no damage to the gauges and monitor in the operator's cab. If any abnormality is found, replace the parts. Clean off any dirt on the surface.

8. Check bucket with hook for damage

Check the hook, catcher and hook foot for damage. If damage is found, contact your Komatsu distributor for repair.

12.1.2 CHECK BEFORE STARTING


Always carry out the items in this section before starting the engine each day.

CHECK COOLANT LEVEL, ADD WATER

MARNING-


Do not open the radiator cap unless necessary. When checking the coolant, always check the radiator reserve tank when the engine is cold.


- 1. Open the engine food and check that the cooling water level is between the FULL and LOW marks on radiator reserve tank ① (shown in the diagram on the right). If the water level is low, add water through the water filler of reserve tank ① to the FULL level.
- 2. After adding water, tighten the cap securely.
- 3. If the reserve tank becomes empty, first inspect for water leaks and then fill the radiator and the reserve tank with water.

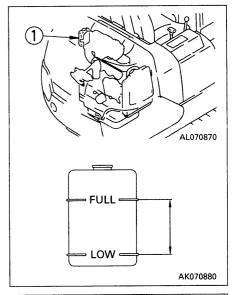

CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL

- 1. Open the engine hood and lock it securely with the hood support lever.
- 2. Remove dipstick (a) and wipe the oil off with a cloth.
- 3. Insert dipstick @ fully in the oil filler pipe, then take it out again.
- The oil level should be between the H and L marks on dipstick G.
 If the oil level is below the L mark, add engine oil through oil filler F.
- 5. If the oil is above the H mark, drain the excess engine oil from drain plug P, and check the oil level again.

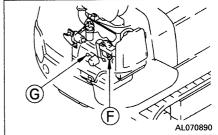

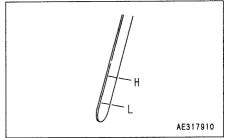

NOTICE

For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

6. If the oil level is correct, tighten the oil filler cap securely and close the engine hood.

REMARK

When checking the oil level after the engine has been operated, wait for at least 15 minutes after stopping the engine before checking.

If the machine is at an angle, make it horizontal before checking.

CHECK FUEL LEVEL, ADD FUEL



When adding fuel, never let the fuel overflow. This may cause a fire. If spilling fuel, thoroughly clean up any spillage.


- 1. Confirm that fuel gauge @ reads full.

Fuel capacity: 19 \ell (5.0 US gal, 4.2 UK gal)

3. After adding fuel, tighten the cap securely.

NOTICE


For details of the fuel to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

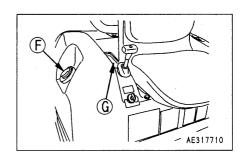

REMARK

If breather hole ① on the cap is clogged, the pressure in the tank will drop and fuel will not flow.

Clean the hole from time to time.

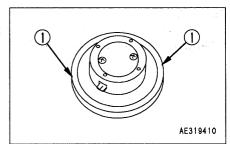

CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL

- A WARNING -

- When removing the oil filler cap, oil may spurt out, so turn the cap slowly to release the internal pressure before removing the cap.
- If oil has been added to above the H mark, stop the engine and wait for the hydraulic oil to cool down, then drain the excess oil from the drain plug.
- If the work equipment is not in the condition shown in the diagram on the right, start the engine, run the engine at low speed, retract the arm and bucket cylinders, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.
- 2. Check sight gauge © on the right side of the machine. The oil level is normal if between the H and L marks.



Do not add oil if the level is above the H line. This will damage the hydraulic equipment and cause the oil to spurt out.

3. If the level is below the L mark, remove the upper cover of the hydraulic tank and add oil through oil filler F.




For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".


REMARK


The oil level will vary depending upon the oil temperature.

Accordingly, use the following as a guide:

- Before operation: around L level (Oil temperature 10 to 30°C (50 to 86°F))
- Normal operation: around H level (Oil temperature 50 to 80°C (122 to 176°F))

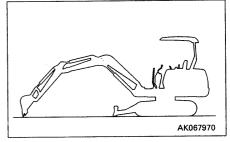

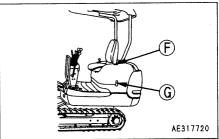

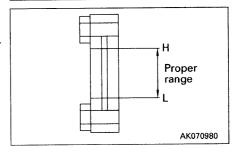


CHECK FUEL FILTER ELEMENT (WITH WATER SEPARATOR)

If red ring ① in the fuel filter is at the bottom of case ②, no water is in the fuel filter.

If red ring ① is floating, water is filled up to the bottom of the ring. in this case, drain the water according to the following procedure.

Prepare the filter wrench for the fuel filter.

- 1. Open the engine hood.
- 2. Turn handle ③ to the CLOSE position.
- 3. Loosen ring ④ with the filter wrench and remove case ② to drain the water from the case.
- 4. Set case 2 and tighten ring 4.
- 5. Referring to "24.2.3 DRAIN WATER AND SEDIMENT FROM FUEL TANK", drain the water and sediment from the fuel tank.

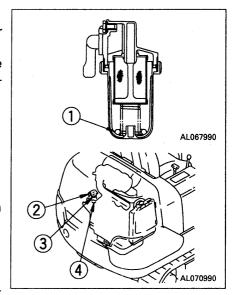


(1)

12.1.3 OPERATIONS AND CHECKS BEFORE STARTING ENGINE

- 🛕 WARNING -

If the control lever is touched by accident, the work equipment or the machine may move suddenly. When leaving the operator's compartment, always set the safety lock lever securely to the LOCK position.

- 1. Check that safety lock lever ① is at the LOCK position.
- 2. Check the position of each lever.

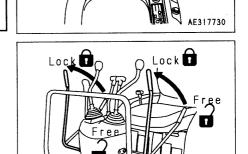


- 3. Insert the key in starting switch ②, turn the key to the ON position, then carry out the following checks.
- (1) The following monitors and gauges will light up for approx. 3 sec.
 - Charge level monitor 3
 - Engine water temperature gauge 4
 - Fuel gauge (5)


If the monitors or gauges do not light up, there is probably a broken bulb or disconnection in the monitor wiring, so contact your Komatsu distributor for repairs.

After approx. 3 sec, the following gauges will remain on and the other monitors will go out.

- Engine water temperature gauge 4
- Fuel gauge ⑤

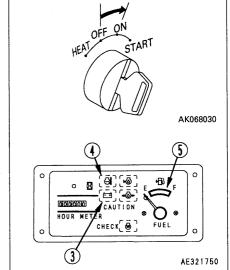

- (2) Turn lamp switch (6) to turn on the head lamps and working lamp.
 - If the lamps do not light up, there is probably a broken bulb or disconnection in the wiring, so contact your Komatsu distributor for repairs.
- (3) Push the horn switch 7 and check that the horn sounds.

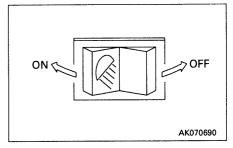

12.2 STARTING ENGINE

12.2.1 NORMAL STARTING


· 🛕 WARNING -

Check that there are no persons or obstacles in the surrounding area, then sound the horn and start the engine.


NOTICE

Do not keep the starting motor rotating continuously for more than 20 seconds.


If the engine will not start, wait for at least 2 minutes before trying to start the engine again.

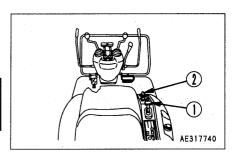

1. Pull fuel control lever ① to the center position between LOW IDLING and HIGH IDLING.

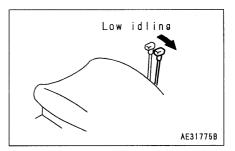


2. Turn the key in starting switch ② to the START position. The engine will start.

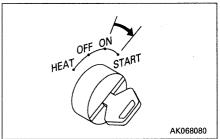

3. When the engine starts, release the key in starting switch ②. The key will return automatically to the ON position.

REMARK

When the engine is warm, it is possible to start the engine with the fuel control lever at the low idling position.

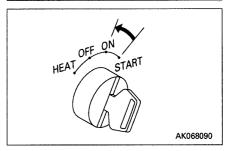

12.2.2 STARTING IN COLD WEATHER

- 🛕 WARNING -


Check that there are no persons or obstacles in the surrounding area, then sound the horn and start the engine.

NOTICE


Do not keep the starting motor rotating continuously for more than 20 seconds.

If the engine fails to start, repeat steps from 2 and after waiting for about 2 minutes.

When starting in low temperatures, do as follows.

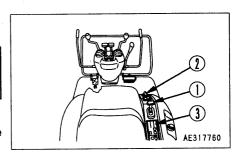

1. Pull fuel control lever ① to HIGH IDLING.

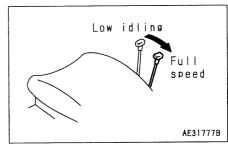


2. Hold the key in starting switch ② at the HEAT position, and check that preheating monitor ③ lights up.


After approx. 18 seconds, preheating monitor ③ goes out to inform that the preheating is completed.

REMARK


The monitor and gauge also light up when the key is at the HEAT position, but this does not indicate any abnormality.

3. When preheating monitor ③ goes out, turn the key in starting switch ② to the START position to start the engine.

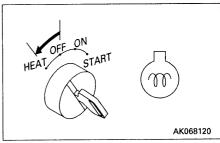


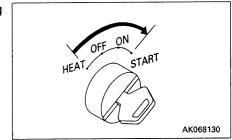

4. When the engine starts, release the key in starting switch ②. The key will return automatically to the ON position.

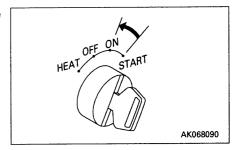

5. When the engine speed rises, set the fuel control lever immediately to the low idling position.

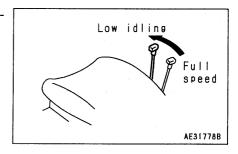

12.3 OPERATIONS AND CHECKS AFTER STARTING ENGINE

- 🛕 WARNING -

- Emergency stop
 - If there has been any abnormal actuation or trouble, turn the starting switch key to the OFF position. The electrical system and engine will stop. Then contact your Komatsu distributor for inspection.
- If the work equipment is operated without warming the machine up sufficiently, the response of the work equipment to the movement of the control lever will be slow, and the work equipment may not move as the operator desires, so always carry out the warming-up operation. Particularly in cold areas, be sure to carry out the warming-up operation fully.

NOTICE

The most suitable temperature for the hydraulic oil is $50 - 80^{\circ}$ C, but in order to extend the life of the machine, the temperature must be raised to at least 20°C before starting work.

NOTICE

Do not suddenly operate the levers when the hydraulic oil temperature is below 20°C (68°F).


NOTICE

Do not suddenly accelerate the engine before the warming-up operation is completed.


Do not run the engine at low idling or high idling continuously for more than 20 minutes.

If it is necessary to run the engine at idling, apply a load from time to time or run the engine at a mid-range speed.


After starting the engine, do not immediately start operations. First, carry out the following operations and checks.

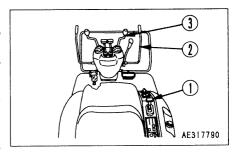

1. Pull fuel control lever ① to the center position between LOW IDLING and HIGH IDLING and run the engine at medium speed for about 5 minutes with no load.

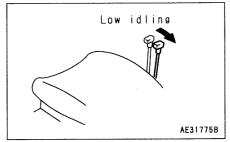

2. Set safety lock lever ② to the FREE position, and raise the bucket from the ground.

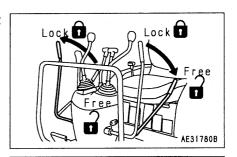



3. Operate the bucket control lever ③ to the DUMP or CURL position, run the engine for approx. 5 minutes, and carry out the warming up operation until the hydraulic oil temperature is above 20°C (68°F).

NOTICE


When the work equipment is retracted, take care that it does not interfere with the machine body or ground.

- 4. After carrying out the warming-up operation, check that each gauge and monitor lamp is in the following condition.
 - Engine water temperature gauge 4. OUT
 - Fuel gauge ⑤. Inside green range
 - Engine oil pressure monitor (6). OUT
 - Charge level monitor (7). OUT
 - Engine pre-heating monitor ®. OUT

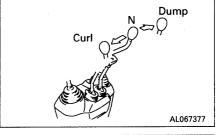

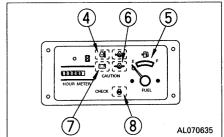

- 5. Check that there is no abnormal exhaust gas color, noise, or vibration. If any abnormality is found, repair it.
- 6. Set safety lock lever ② to the LOCK position and check that it is impossible to operate the swing and work equipment with the left and right work equipment control levers.

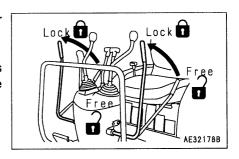



12.4 MOVING MACHINE OFF


12.4.1 MOVING MACHINE FORWARD

– 🛕 WARNING –


- Before operating the travel levers, check the direction of the track frame. If the sprocket is at the front, the operation of the travel levers is reversed.
- When moving off, check that the area around the machine is safe, and sound the horn before moving.
- Clear all personnel from the machine and the area.
- Clear all obstacles from the path of the machine.

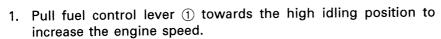

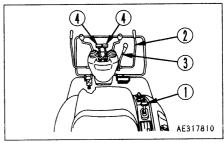


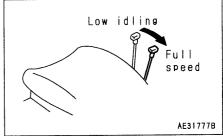


2. Set safety lock lever ② in the FREE position, fold the work equipment, and raise it 40 – 50 cm (16 to 20 in) from the ground.

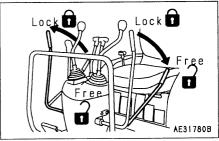


3. Pull blade control lever 3 to raise the blade.

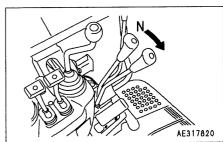

- 4. Operate right and left travel levers 4 as follows.
- When the blade is at the front of the machine Push levers 4 forward slowly to move the machine off.
- When the blade is at the rear of the machine Pull levers 4 backward slowly to move the machine off.

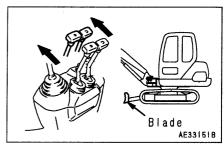

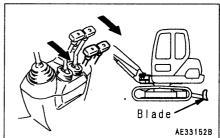



12.4.2 MOVING MACHINE BACKWARD




- A WARNING -

- Before operating the travel levers, check the direction of the track frame. If the sprocket is at the front, the operation of the travel levers is reversed.
- When moving off, check that the area around the machine is safe, and sound the horn before moving.
- Clear all personnel from the machine and the area.
- Clear all obstacles from the path of the machine.
- Use extreme care when reversing the machine. Note there is an blind spot behind the machine.
- 1. Pull fuel control lever 1 towards the high idling position to increase the engine speed.

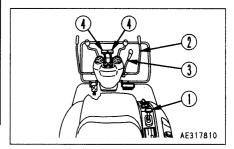


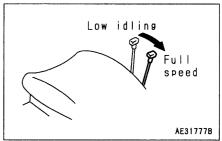


2. Set safety lock lever ② in the FREE position, fold the work equipment, and raise it 40-50 cm (16 to 20 in) from the ground.

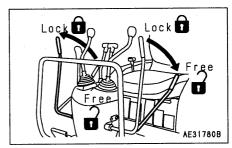


3. Pull blade control lever ③ to raise the blade. (Only machines with blade specification)

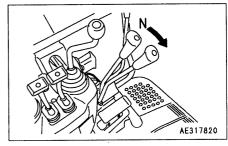

- 4. Operate right and left travel levers (4) as follows.
- When the blade is at the front of the machine
 Pull levers 4 backward slowly to move the machine off.

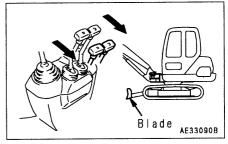

When the blade is at the rear of the machine
 Push levers 4 forward slowly to move the machine off.

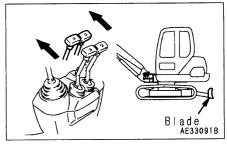

12.5 STEERING MACHINE

12.5.1 STEERING (CHANGING DIRECTION)


WARNING

Before operating the travel levers, check the position of the sprocket. If the blade is at the rear, the operation of the travel levers is reversed.

Use the travel levers to change direction.

Avoid sudden changes of direction as far as possible. In particular, when carrying out counter-rotation (spin turn), stop the machine first before turning.

Operate two travel levers (1) as follows.

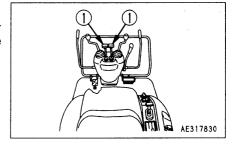


Changing direction of machine when stopped

When turning to the left:

Push the right travel lever forward to travel left when traveling forward; and pull it back to turn left when traveling in reverse.

REMARK

When turning to the right, operate the left travel lever in the same way.

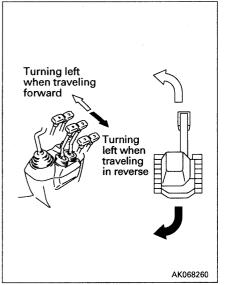


Steering when traveling (left and right travel levers both operated in same direction)

When turning to the left:

If the left travel lever is returned to the neutral position, the machine will turn to the left.

REMARK

When turning to the right, operate the right travel lever in the same way.

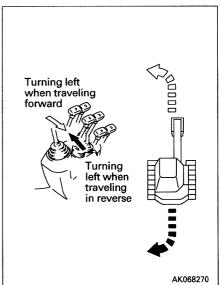


When making counter-rotation turn (spin turn)

When turning left using counter-rotation, pull the left travel lever back and push the right travel lever forward.

REMARK

When turning right using counter-rotation, pull the right travel lever back and push the left travel lever forward.

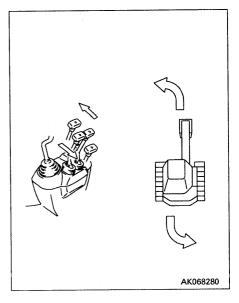


12.6 STOPPING MACHINE

- A CAUTION -

 Avoid stopping suddenly. Give yourself ample room when stopping.


WARNING

 When stopping the machine, select flat hard ground and avoid dangerous places. If it is unavoidably necessary to park the machine on a slope, insert blocks underneath the track shoes. As an additional safety measure, thrust the bucket into the ground.

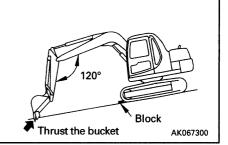



WARNING -

If the control lever is touched by accident, the work equipment or the machine may move suddenly, and this may lead to a serious accident. Before leaving the operator's compartment, always set the safety lock lever securely to the LOCK position.

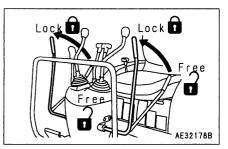

1. Put the left and right travel levers ① in the neutral position, then stop the machine.

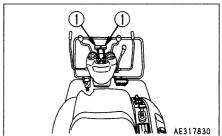


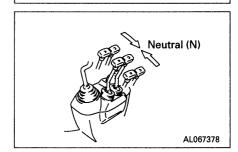


12.7 SWINGING

- A WARNING -

When operating the swing, check that the area around the machine is safe.

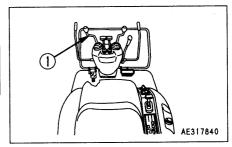

1. Operate left work equipment control lever ① to swing the upper structure.

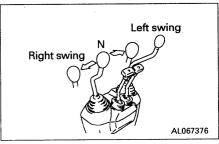



12.8 OPERATION OF WORK EQUIPMENT


The work equipment is operated with the left and right work equipment levers, boom swing control pedal and blade control lever.


The left work equipment lever is used for arm operation and swinging, the right work equipment lever for boom and bucket operation, the boom swing control pedal for swinging the boom, and the blade control lever for operating the blade.


The movements of the lever and work equipment are as shown in the drawings on the right. When the levers are released, they automatically return to the neutral position and the work equipement is held in place.

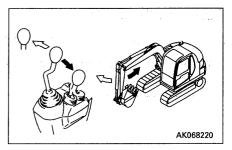


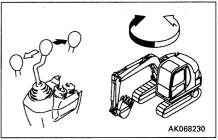

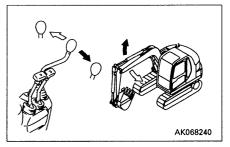

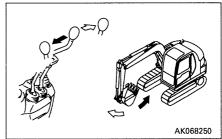

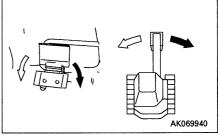

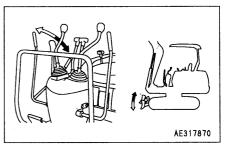

12.9 PROHIBITIONS FOR OPERATION

- 🛕 WARNING -


- If it is necessary to operate the work equipment control lever when the machine is traveling, stop the machine before operating the work equipment control lever.
- Never operate the machine on a rock bed (hard or soft rock).

Prohibited operations using swing force

Do not use the swing force to compact soil or break earth mounds or walls.


When swinging, do not dig the bucket teeth into the soil.

These operations will damage the work equipment.

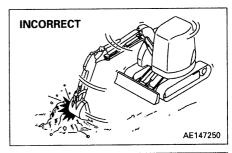


Prohibited operations using travel force

Do not leave the bucket dug into the ground and use the travel force to excavate. This will bring excessive force to bear on the rear of the machine.

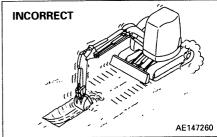


Precautions when operating hydraulic cylinders to end of stroke

If the cylinder is operated to the end of its stroke during operations, force will be brought to bear on the stopper inside the cylinder, and this will reduce the life of the machine. To prevent this, always leave a small safety margin when operating the cylinders.

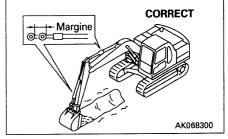


Prohibited operations using dropping force of bucket

Do not use the dropping force of the bucket as a pickaxe, breaker, or pile driver. This will bring excessive force to bear on the rear of the machine, and will not only damage the machine, but is also dangerous.

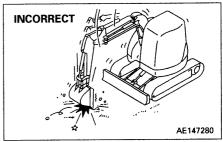

Prohibited operations using dropping force of machine

Do not use the dropping force of the machine for digging.

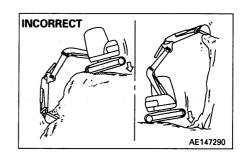


Digging rocky ground

It is better to excavate hard rocky ground after breaking it up by some other means. This will not only reduce damage to the machine but make for better economy.


Avoid hitting blade

Be careful not to hit the blade against rocks or boulders. This will cause premature damage to the blade or cylinders.

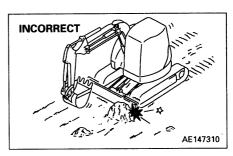


Be careful when folding in work equipment.

When folding in the work equipment to the travel or transportation posture, be careful not to let the bucket hit the blade.

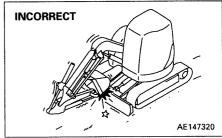


Support blade on both sides

When using the blade as an outrigger, never support the machine with only one end of the blade.

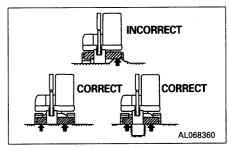

Be careful of blade during backhoe operations


When carrying out deep digging operations with the blade at the front, be careful not to let the boom cylinder hit the blade. Always position the blade at the back unless it is needed at the front.

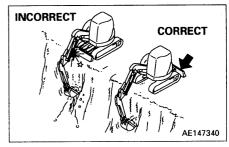

12.10 PRECAUTIONS FOR OPERATION

PRECAUTIONS WHEN TRAVELING

When traveling over obstacles such as boulders or tree stumps, the machine (in particular, the undercarriage) is subjected to a large shock, so reduce the travel speed and travel over the obstacle at the center of the tracks. As far as possible, remove such obstacles or avoid traveling over them.

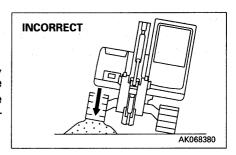


PERMISSIBLE WATER DEPTH NOTICE


When driving the machine out of water, if the angle of the machine exceeds 15°, the rear of the upper structure will go under water, and water will be thrown up by the radiator fan. This may cause the fan to break.

Be extremely careful when driving the machine out of water.

Do not immerse the machine in water by more than the permissible depth (under center of carrier roller 1).

In addition, for parts that have been immersed in water for a long time, pump in grease until the old grease comes out from the bearings. (Around the bucket pins)

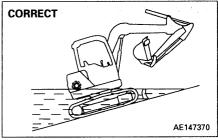


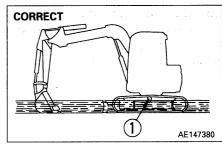



12.11 PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS


AWARNING —

- When traveling, raise the bucket approx. 20 30 cm (8 12 in) from the ground.
 Do not travel downhill in reverse.
- When traveling over ridges or other obstacles, keep the work equipment close to the ground and travel slowly.
- It is dangerous to turn on slopes or to travel across slopes.
 Always go down to a flat place to perform these operations.
 It may be longer, but it will ensure safety.
- If the machine starts to slide or loses stability, lower the bucket immediately and brake the machine.
- Turning or operating the work equipment when working on slopes may cause the machine to lose its balance and turn over, so avoid such operations. It is particularly dangerous to swing downhill when the bucket is loaded. If such operations have to be carried out, pile soil to make platform on the slope so that the machine can be kept horizontal when operating.
- Do not travel on slopes of over 30° as there is danger that the machine may overturn.

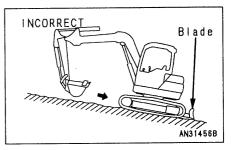

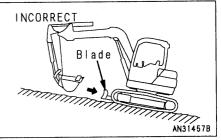

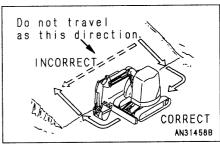


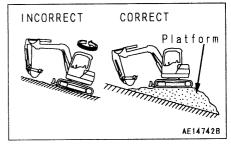


1) When traveling down steep hills, use the travel lever and fuel control lever to keep the travel speed low. When traveling down slopes of more than 15°, set the work equipment in the posture shown in the figure on the right, and lower the engine speed.

REMARK

Drive down slopes with the blade on the upper side. If the machine travels down with the blade on the lower side, the tracks are loosened and they may jump over the pitch.

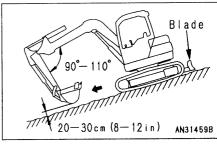

2) When traveling up a steep hill of more than 15°, set the work equipment in the posture shown in the diagram on the right.

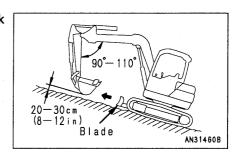

Braking when traveling downhill

To brake the machine during downhill runs, put the travel lever in the neutral position. This will cause the brake to be automatically applied.

If shoes slip

When traveling uphill, if the shoes slip or it is impossible to travel uphill using the force of the track only, it is possible to use the pulling force of the arm to help the machine travel uphill.

If engine stops

If the engine stops when traveling uphill, move the travel levers to the neutral position, lower the bucket to the ground, stop the machine, then start the engine again.

Precautions on slopes

If the engine stops when the machine is on a slope, never use the left work equipment control lever to carry out swing operations. The upper structure will swing under its own weight.

12.12 HOW TO ESCAPE FROM MUD

Always operate carefully to avoid getting stuck in mud. If the machine does get stuck in mud, use the following procedures to get the machine out.


12.12.1 WHEN ONE SIDE IS STUCK

When only one side is stuck in mud, use the bucket to raise the track, then lay boards or logs and drive the machine out. If necessary, put a board under the bucket also.

NOTICE


When using the boom or arm to raise the machine, always have the bottom of the bucket in contact with the ground. (Never push with the teeth). The angle between the boom and arm should be 90° to 110°.



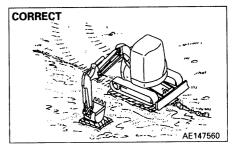

12.12.2 WHEN BOTH SIDES ARE STUCK

When the tracks on both sides are stuck in mud and the machine will not move, lay boards as explained above, and dig the bucket into the ground in front. Then pull in the arm as in normal digging operations and put the travel levers in the FORWARD position to pull the machine out.

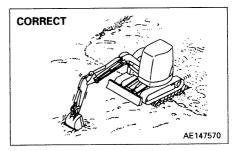

12.13 WORK POSSIBLE USING HYDRAULIC EXCAVATOR

In addition to the following, it is possible to further increase the range of applications by using various attachments.


12.13.1 BACKHOE WORK


When condition of the machine is as shown in the diagram at right, each cylinders maximum pushing excavation force is obtained when the bucket cylinder and link, arm cylinder and arm are at 90°.

When excavating, use this angle effectively to optimize your work efficiency.

The range for excavating with the arm is from a 45° angle away from the machine to a 30° toward the machine.

There may be some differences depending on the excavation depth, but try to use within the above range rather than going all the way to the extreme end of the cylinder stroke.

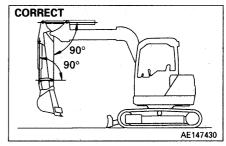


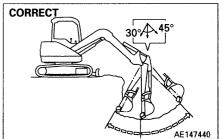

12.13.2 DITCHING WORK

Ditching work can be performed efficiently by attaching a bucket to match the width of the ditch and then setting the tracks parallel to the line of the ditch to be excavated.


To excavate a wide ditch, first dig out both sides and then finally remove the center portion.

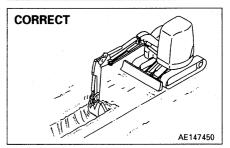

12.13.3 LOADING WORK


In places where the swing angle is small, work efficiency can be enhanced by locating the dump truck in a place easily visible to the operator.

Loading is easier and capacity greater if you begin from the front of the dump truck body than if loading is done from the side.

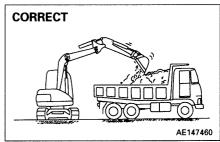


12.13.4 SMOOTHING WORK

When refilling after excavation and when smoothing the ground surface, use the blade.

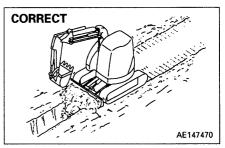

12.13.5 SIDE DITCHING

The machine can be used for side ditching in a confined worksite by combining the swing and boom swing operations.

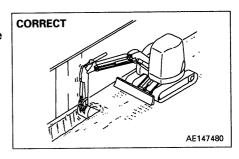

12.14 REPLACEMENT OF BUCKET

· 🕰 WARNING -

- When knocking the pin in with a hammer, metal particles may fly and cause serious injury, particularly if they get into your eyes. When carrying out this operation, always wear goggles, helmet, gloves, and other protective equipment.
- When the bucket is removed, place it in a stable condition.

Stop the machine on a firm, flat surface. When performing joint work, make clear signals to each other and work carefully for safety's sake.

REPLACEMENT

Place the bucket in contact with a flat surface, then pull out pins

 and

REMARK


When removing the pins, place the bucket so that it is in light contact with the ground.

If the bucket is lowered strongly to the ground, the resistance will be increased and it will be difficult to remove the pins.

NOTICE


After removing the pins, make sure that they do not become contaminated with sand or mud and that the seals of bushing on both sides do not become damaged.

2. Align the arm with holes ① and the link with holes ②, then coat with grease and install pins (A) and (B).

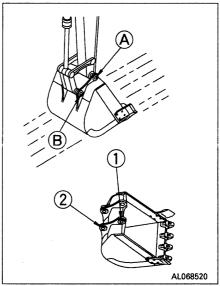

REMARK

When installing the bucket, the O-rings are easily damaged, so fit the O-rings on the boss of the arm end as shown in the diagram. When knocking the pin, move the O-ring down to the regular groove.

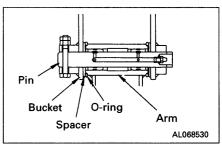


12.15 PARKING MACHINE

— 🛕 CAUTION -

Avoid stopping suddenly. Give yourself ample room when stopping.


WARNING

When stopping the machine, select flat hard ground and avoid dangerous places. If it is unavoidably necessary to park the machine on a slope, insert blocks underneath the track shoes. As an additional safety measure, thrust the bucket into the ground.

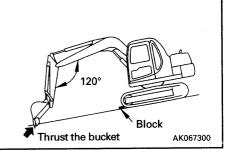


- 🛕 WARNING -


If the control lever is touched by accident, the work equipment or the machine may move suddenly, and this may lead to a serious accident. Before leaving the operator's compartment, always set the safety lock lever securely to LOCK position.

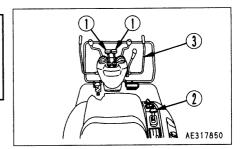


1. Put left and right travel levers ① in the neutral position.

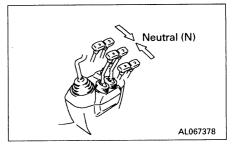


2. Lower the engine speed to low idling by fuel control lever 2.

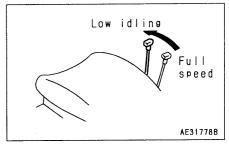

- 3. Lower the bucket horizontally until the bottom touches the ground.
- 4. Lower the blade to the ground.

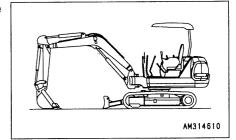


5. Set safety lock lever 3 in the LOCK position.

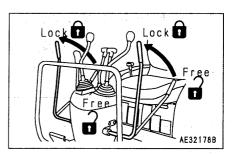

12.16 CHECK AFTER FINISHING WORK

Check the engine water temperature, engine oil pressure and fuel level on the monitor.

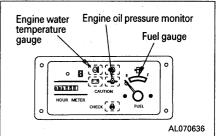


12.17 STOPPING ENGINE

NOTICE


If the engine is abruptly stopped before it has cooled down, engine life may be greatly shortened. Consequently, do not abruptly stop the engine apart from an emergency.

In particular, if the engine has overheated, do not abruptly stop it but run it at medium speed to allow it to cool gradually, then stop it.

1. Run the engine at low idling speed for about 5 minutes to allow it to gradually cool down.

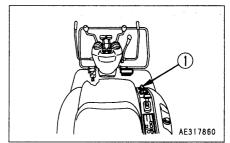

- 2. Turn the key in starting switch ① to the OFF position and stop the engine.
- 3. Remove the key from starting switch ①.

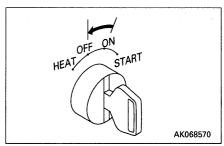

12.18 CHECK AFTER STOPPING ENGINE

- 1. Walk around the machine and check the work equipment, paintwork, and undercarriage, and check also for leakage of oil or water. If any abnormalities are found, repair them.
- 2. Fill the fuel tank.
- 3. Check the engine compartment for paper and debris. Clean out any paper and debris to avoid a fire hazard.
- 4. Remove any mud stuck to the undercarriage.


12.19 LOCKING


Always lock the following places.

- 1 Fuel tank filler port
- 2 Engine hood

REMARK

Use the starting switch key to open and close all these places.

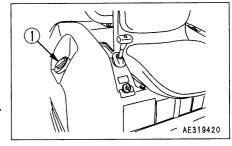

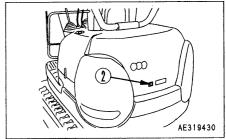

12.20 HANDLING RUBBER SHOES (RUBBER SHOES ONLY)

12.20.1 SKILLFUL USE OF RUBBER SHOES

Rubber shoes have excellent properties that are not found in metal shoes. However, if they are used in the same way as metal shoes, full use cannot be made of their advantages. Be sure to operate with rubber shoes in a way that matches the condition of the jobsite and the nature of the work.

Comparison of rubber shoes and metal shoes

	Rubber shoes	Metal shoes	
Little vibration	Excellent	Average	
Smooth travel	Excellent	Good	
Little noise	Excellent	Average	
No damage to paved surface	Excellent	Average	
Easy to handle	Excellent	Average	
Easily damaged	Average	Excellent	
Strong drawbar pull	Excellent	Excellent	

Considering the properties of the material used, rubber shoes offer various advantages. However, their weak point is lack of strength. Therefore, it is important to understand the advantages of rubber shoes, and to follow the precautions regarding handling and prohibited work. This will extend the life of the rubber shoes and will enable the machine to display the advantages of rubber shoes to the maximum. Before using rubber shoes, always read "12.20.3 PRECAUTIONS WHEN USING RUBBER SHOES".

12.20.2 WARRANTY FOR RUBBER SHOES

It is important to inspect and maintain the tracks at the correct tension. Furthermore, these shoes must not be used near objects where they are likely to suffer damage, such as the corners of steel plates, U-shaped grooves, and blocks, on crushed rock or the sharp edges of rocks, iron beams or scrap iron.

If the customer carries out prohibited work or does not follow the precautions for operation, the damage resulting from the customer's mistaken use of the machine shall not be included in the scope of the warranty.

12.20.3 PRECAUTIONS WHEN USING RUBBER SHOES Prohibited work

Do not carry out the following types of work.


- Carrying out operations and steering on crushed rock, extremely rough hard rock, steel beams, scrap iron, or near the edges of steel plates will cause damage to the rubber shoes.
- In places such as riverbeds where there are large numbers of large and small boulders, the stones may get caught and damage the rubber shoes or make the shoes come off. If dozing operations are carried out when the shoes slip, this will also reduce the life of the rubber shoes.
- Be careful not to get oil, fuel, or chemical solvent on the rubber shoes. If such a substance should get on the shoes, remove it immediately. Furthermore, do not travel on road surfaces where oil has collected.
- When putting the machine into long-term storage (3 months or more), store the machine indoors where it is protected from direct sunlight or rain.
- Do not use the machine in high temperature areas, such as areas where there is burning wood, steel plate that have been left under the hot sun, or places where asphalt is being laid.
- Do not move the machine with the crawler on one side raised using the work equipment. This will cause damage to the rubber shoes and may cause the shoes to come off.

12.20.4 PRECAUTIONS WHEN USING


Be careful of the following points when carrying out work.

- Avoid carrying out counterrotation turns on concrete surfaces.
- Avoid making sudden changes in direction. This may cause premature wear or damage to the rubber shoes.
- Avoid operating the steering when traveling over places where there is a big difference in height. When traveling over obstacles or places where there is a difference in height, drive the machine at right angles to the obstacles to prevent the shoes from coming off.
- If the machine has been raised using the bucket, lower it slowly.
- Avoid doing work with materials that produce oil when crushed (soya beans, corn, or vegetables squeezed for oil), or wash the machine after using it.
- Avoid handling materials that will attach the adhesion of the steel core such as salt, ammonium sulphate, potassium chloride, potassium sulphate, calcium superphospate; or wash the machine after use.
- The adhesion of the core will be attacked by salt, so avoid using the machine in coastal areas.
- When handling salt, sugar, wheat, or soya beans, if there is any deep cut in the rubber shoes, these substances may get into the lugs or cut portion of the rubber, so always repair the rubber before use.
- Do not carry out work that involves scraping against walls or concrete embankments.
- Rubber shoes slip extremely easily on snow or frozen roads. Be careful not to slip when traveling or working on slopes.
- The properties of rubber shoes change when working in extremely cold places, and this will reduce the life of the rubber shoe.
- Because of the properties of rubber, use the rubber shoes within a range of -25°C - +55°C (-13°F - 131°F).


- When working, be careful not to damage the rubber shoes with the bucket.
- To prevent the shoes from coming off, always maintain the correct tension. If the tracks are slack, the shoes will come off under the following conditions. Even when the tension is correct, be extremely careful when carrying out these operations.
- 1. When traveling over curbs, rocks, or places where there is a big difference in level (approx. 20 cm (8 in)), do not turn the machine. When traveling over such objects, always travel at right angles to the object.

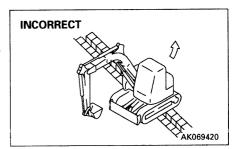


 When traveling in reverse up a slope, do not turn when moving from flat ground onto the slope.
 If it is necessary to turn on slopes, be sure to turn gradually.

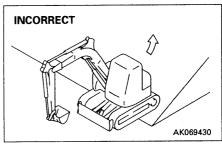

3. Avoid traveling along the edge of a slope or on rough ground with the track on one side raised (with the machine tilting at angle of more than approx. 10°), and one side on the flat ground. To avoid damage to the rubber shoes, travel with both tracks on flat ground.

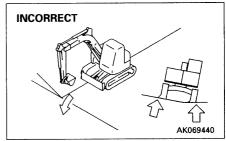


4. In Items 1 – 3, if the rubber track is loose, avoid turning in the posture in the diagram.

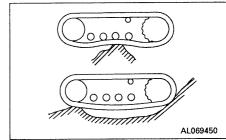


(Mechanism of rubber shoe coming off track)


 When traveling over an obstacle, a gap is formed between the track roller and the rubber shoe.
 In this condition, the rubber shoe may come off.

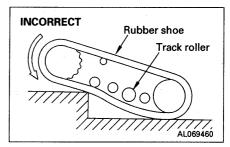


2) If the machine travels further in reverse, a gap is formed among the track roller, idler and the rubber shoe.

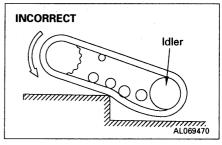


- When turning in a condition where the rubber shoe cannot move to the side because of the object it is passing over, or because of some other object.
- When the idler or track roller are out of alignment with the core because of movement of the rubber shoe out of alignment.

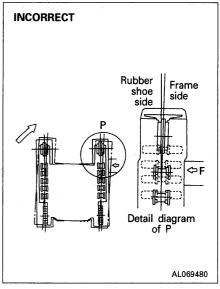

If the machine travels in reverse in this condition, the rubber shoe will come off.

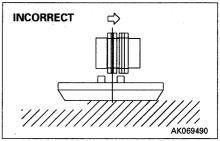

 If the machine is turned in this condition, the rubber shoe will come off.

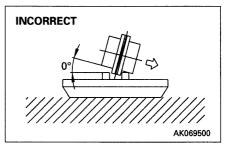

12.20.5 TESTING AND ADJUSTING MACHINE EQUIPPED WITH RUBBER SHOES

Carry out testing and adjusting of machines equipped with rubber shoes according to the chart. For details, see "23.1 MAINTENANCE SCHEDULE CHART".

When transporting the machine, observe all related laws and regulations, and be careful to assure safety.

13.1 LOADING, UNLOADING WORK

- 🕰 WARNING -


- Loading or unloading the machine can be a dangerous operation, so be particularly careful.
 When loading or unloading the machine, run the engine at low idling and travel at low speed.
- Make sure the ramp has sufficient width, length and thickness to enable the machine to be safely loaded and unloaded.
 If the ramp sags appreciably, reinforce it with blocks, etc.
- When loading and unloading the machine, park the trailer on a flat firm roadbed. Keep a fairly long distance between the road shoulder and the machine.
- Remove the mud from the undercarriage to prevent the machine from slipping to the side on slopes.
 Be sure the ramp surface is clean and free of grease, oil, ice and loose materials.
- Never change the direction of travel when on the ramps. If it is necessary to change direction, drive off the ramps and correct the direction, then drive on to the ramps again.
- When turning the machine on the trailer, the machine's footing is unstable, so carry out the operation slowly.
- Always check that the door on the cab is locked, regardless of whether it is open or closed.
 Do not open or close the door on ramps or on a platform.
 This may cause a sudden change in the operating force.

When loading or unloading, always use ramps or a platform and carry out the operations as follows.


 Properly apply the brakes on the trailer and insert blocks beneath the tires to ensure that it does not move. Then fix the ramps in line with the centers of the trailer and the machine. Be sure that the two sides are at the same level as one another.

Make the angle of the ramps a maximum of 15°.

Set the distance between the ramps to match the center of the tracks.

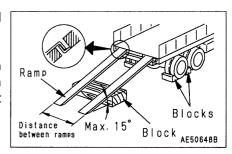

2. Lower the engine speed using the fuel control lever.

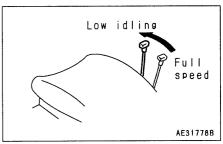


3. Set in the direction of the ramps, lower the work equipment as far as possible without letting it hit the trailer, then travel slowly to load or unload the machine.

When on ramps, do not depress the traveling accelerator pedal.

When on the ramps, do not operate any lever other than the travel lever.

4. Load the machine correctly in the specified position on the trailer.

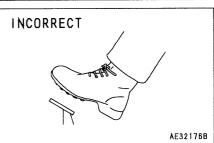

REMARK

When the work equipment is installed, load the machine from the front; when the work equipment is not installed, load the machine from the rear.


13.2 PRECAUTIONS FOR LOADING


- 🛕 WARNING –

When loading the machine, park the trailer on a flat firm roadbed. Keep a fairly long distance between the road shoulder and the machine.


After loading to the specified position, secure the machine as follows.

- 1. Lower the brade.
- Fully extend the bucket and arm cylinders, then slowly lower the boom.
- 3. Stop the engine and remove the key from the starting switch.
- 4. Lock all the control levers securely with the safety lock lever.

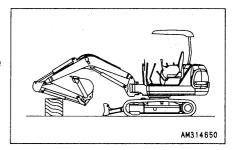

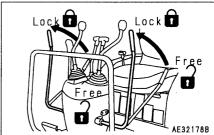

5. When transporting the machine, place rectangular timber underneath the front and rear track shoes to prevent the machine from moving about. Also, hold it down with chains or rope. Be particularly careful to ensure that the machine does not slip sideways.

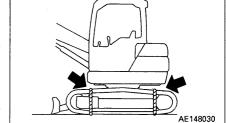

NOTICE

When transporting the machine, place rectangular timber under one end of the bucket cylinder to prevent it touching the ground, thereby saving it from possible damage.

13.3 PRECAUTIONS FOR TRANSPORTATION



Determine the route for transporting the machine by taking into account the width, height and weight of the machine.

Obey all state and local laws governing the weight, width and length of a load. Observe all regulations governing wide loads.

13.4 METHOD OF LIFTING MACHINE

- 🛕 WARNING --

- Never raise the machine with any worker on it.
- Always make sure that the wire rope used for lifting the machine is of ample strength for the weight of the machine.
- Never try to lift the machine in any posture other than the posture given in the procedure below.
 - There is danger that the machine may lose its balance.
- The machine must never be raised with the undercarriage turned.
- When lifting the machine, be careful of the position of the center of gravity and always maintain the balance.

When lifting the machine, carry out the operation as follows on flat ground.

For machines equipped with a blade, raise the blade before lifting the machine.


- 1. Place the blade to the rear of the machine.
- 2. Extract the bucket cylinder, arm cylinder and bucket cylinder to the end. Set the work equipment control levers to the neutral position and set the safety lock lever to the LOCK position.
- 3. Raise the blade to be end.
- 4. Set the boom swing operation to the neutral position without swinging the boom, then lock the pedal.
- 5. Remove the canopy and incline the operator's seat forward.
- 6. Install shackles to both ends of the blade and the hanging bracket of the boom (three places), then install the wire ropes to them securely. Be sure to use all three brackets.


REMARK

Be sure to apply protectors to the parts which the wire ropes will touch. The proper length of each wire rope is as follows.

	Wire A	Wire B	
L (mm)	1700 (68 in)	3000 (120 in)	
Pieces/machine	1	2	

- 7. When hanging up the machine, adjust the hanging angle of the wire ropes to $30 40^{\circ}$.
- 8. After the machine leaves the ground, stop lifting. After the machine is stabilized, lift it up slowly.

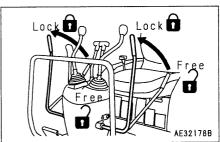

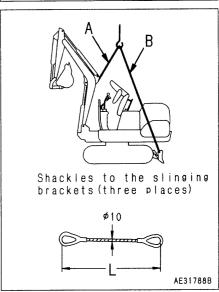

14. COLD WEATHER OPERATION

14.1 PRECAUTIONS FOR LOW TEMPERATURE

If the temperature becomes low, it becomes difficult to start the engine, and the coolant may freeze, so do as follows.

14.1.1 FUEL AND LUBRICANTS

Change to fuel and oil with low viscosity for all components. For details of the specified viscosity, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

14.1.2 COOLANT



Keep antifreeze fluid away from an open flame. Never smoke when using antifreeze.

NOTICE

- Never use methanol, ethanol or propanol based antifreeze.
- Absolutely avoid using any water leak preventing agent irrespective of whether it is used independently or mixed with an antifreeze.
- Do not mix one antifreeze with a different brand.

For details of the antifreeze mixture when changing the coolant, see "24.2 WHEN REQUIRED".

Use a Permanent Antifreeze (ethylene glycol mixed with corrosion inhibitor, antifoam agent, etc.) meeting the standard requirements as shown below. With permanent antifreeze, no change of coolant is required for a year. If it is doubtful that an available antifreeze meets the standard requirements, ask the supplier of that antifreeze for information.

Standard requirements for permanent antifreeze

- FEDERAL STANDARD O-A-548D

REMARK

Where no permanent antifreeze is available, an ethylene glycol antifreeze without corrosion inhibitor may be used only for the cold season. In this case, clean the cooling system twice a year (in spring and autumn). When refilling the cooling system, add antifreeze in autumn, but do not add any in spring.

14.1.3 BATTERY

MARNING

- To avoid gas explosions, do not bring fire or sparks near the battery.
- Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with large amounts of water, and consult a doctor.

When the ambient temperature drops, the capacity of the battery will also drop. If the battery charge ratio is low, the battery electrolyte may freeze. Maintain the battery charge as close as possible to 100%, and insulate it against cold temperature so that the machine can be started easily the next morning.

REMARK

Measure the specific gravity and calculate the rate of charge from the following conversion table.

Temp. of fluid Rate of charge	20°C (68°F)	0°C (32°F)	–10°C (14°F)	–20°C (–4°F)
100%	1.28	1.29	1.30	1.31
90%	1.26	1.27	1.28	1.29
80%	1.24	1.25	1.26	1.27
75%	1.23	1.24	1.25	1.26

14.2 PRECAUTIONS AFTER COMPLETION OF WORK

To prevent mud, water, or the undercarriage from freezing and making it impossible for the machine to move on the following morning, always observe the following precautions.

- Mud and water on the machine body should be completely removed. This is to prevent damage to the seal caused by mud or dirt getting inside the seal with frozen drops of water.
- Park the machine on hard, dry ground. If this is impossible, park
 the machine on wooden boards. The boards help protect the
 tracks from being freezed in soil and the machine can start next
 morning.
- Open the drain valve and drain any water collected in the fuel system to prevent it from freezing.
- As the battery capacity drops markedly in low temperatures, cover the battery or remove it from the machine, keep it in a warm place, and install it again the next morning.
- If electrolyte level is found low, add distilled water in the morning before beginning work. Do not add the water after the day's work so as to prevent fluid in the battery from freezing in the night.

14.3 AFTER COLD WEATHER

When season changes and the weather becomes warmer, do as follows.

 Replace the fuel and oil for all parts with oil of the viscosity specified.

NOTICE

For details, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

 If for any reason permanent antifreeze cannot be used, and an ethyl glycol base antifreeze (winter, one season type) is used instead, or if no antifreeze is used, drain the cooling system completely, then clean out the inside of the cooling system thoroughly, and fill with fresh water.

15. LONG-TERM STORAGE

15.1 BEFORE STORAGE


NOTICE

To protect the cylinder rod when the machine is not being used, set the work equipment in the posture shown in the diagram.

(This prevents rusting of the cylinder rod)

When putting the machine in storage for a long time, do as follows.

- After every part is washed and dried, the machine shall be housed in a dry building. Never leave it outdoors. In case it is indispensable to leave it outdoors, park the machine on the well-drained concrete and cover it with canvas etc.
- Completely fill the fuel tank, lubricate and change the oil before storage.
- Apply a thin coat of grease to metal surface of the hydraulic piston rods.
- Disconnect the negative terminals of the battery and cover it, or remove it from the machine and store it separately.
- If the ambient temperature is expected to drop below 0°C, always add antifreeze to the cooling water.
- Lock each control lever and pedal with the lock lever and pedal lock.

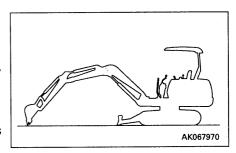

15.2 DURING STORAGE



If it is unavoidably necessary to carry out the rustpreventive operation while the machine is indoors, open the doors and windows to improve ventilation and prevent gas poisoning.

Operate the engine and move the machine for a short distance once a month so that a new film of oil will be coated over movable parts and component surfaces. At the same time, also charge the battery.

Also carry out cooler operation in the case of machines equipped with an air conditioner.

15.3 AFTER STORAGE

NOTICE

If the machine is stored without carrying out the monthly rust prevention operation, request your Komatsu distributor for service.

Carry out the following procedure when taking the machine out of long-term storage.


- Wipe off the grease from the hydraulic cylinder rods.
- Add oil and grease to all places.

16. TROUBLESHOOTING


16.1 PHENOMENA THAT ARE NOT FAILURES

Note that the following phenomena are not failures:

1. When the arm is pulled in, the speed of movement will drop momentarily when the arm is more or less vertical.

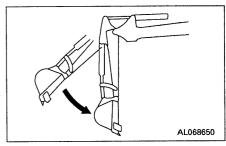

- 2. The arm speed will drop momentarily when the bucket teeth are more or less horizontal.
- 3. When starting or stopping the swing, noise will be emitted from the brake valve.
- 4. When going down a steep slope at low speed, a noise will be emitted from the travel motor.

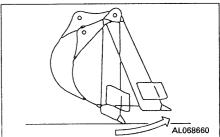


16.2 METHOD OF TOWING MACHINE



When towing the machine, use a wire rope that has ample strength for the weight of the machine that is being towed.

If the machine sinks in mud and cannot get out under its own power, or if the drawbar pull of the excavator is being used to tow a heavy object, use a wire rope as shown in the diagram on the right. Place pieces of wood between wire ropes and body to prevent damage to ropes and body.

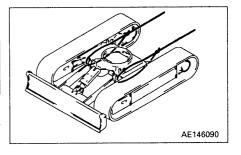

16.3 IF BATTERY IS DISCHARGED

WARNING -

- When checking or handling the battery, stop the engine and turn the starting switch key to the OFF position before starting.
- Before starting the engine, wipe off the dust from the top of the battery with a wet cloth.
- The battery generates hydrogen gas, so there is danger of explosion. Do not bring lighted cigarettes near the battery, or do anything that will cause sparks.
- Battery electrolyte is dilute sulphuric acid, and it will attack your clothes and skin. If it gets on your clothes or on your skin, wash it immediately off with large amounts of water. If it gets in your eyes, wash it out with fresh water, and consult a doctor.
- When handling battery, always wear protective goggles.
- When removing the battery, first disconnect the cable from the ground (normally, from the negative — terminal). When installing, install the positive

 terminal first. If a tool touches the cable connecting the positive terminal and the chassis, there is danger that it will cause sparks.
- If the terminals are loose, there is danger that the defective contact may generate sparks that will cause an explosion. When installing the terminals, install them tightly.
- When removing or installing, check which is the positive ⊕ terminal and negative ⊕ terminal.
- If the battery is replaced, secure it. If it is not secured, its terminals may be loosened and sparks will be made.


16.3.1 REMOVING AND INSTALLING BATTERY


- When removing the battery, disconnect the grounded cable (from the negative
 — terminal side, in general) first. If the positive
 — terminal and the machine body is touched by a tool, etc., dangerous sparks will be made.
 - When removing the battery from the machine, use the battery hook which is stored in the tool box.
- When installing the battery, connect the grounded cable at last.
- After the battery is replaced, secure it with battery fixfure ①. Tightening torque of mounting nut ②


Nut and fixture	Double nut	
2.45 – 3.43 N•m	14.7 – 34 N•m	
{0.25 - 0.35 kgf·m, 1.8 - 2.5 lbft}	{1.5 - 3.5 kgf·m, 10.8 - 25.3 lbft}	

NOTICE

Secure the battery, and confirm that it does not move. If it moves, secure it again.

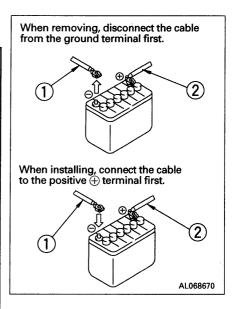

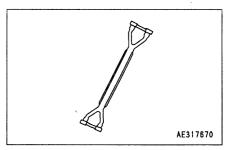

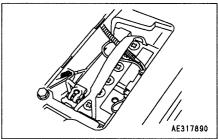

16.3.2 STARTING ENGINE WITH BOOSTER CABLE

When starting the engine with a booster cable, do as follows:

Precautions when connecting and disconnecting booster cable

- 🛕 WARNING -

- When connecting the cables, never contact the positive ⊕ and negative ⊕ terminals.
- When starting the engine with a booster cable, always wear safety glasses.
- Be careful not to let the normal machine and problem machine contact each other. This prevents sparks from generating near the battery which could ignite the hydrogen gas given off by the battery. If hydrogen gas explodes, it could cause serious injury.
- Make sure that there is no mistake in the booster cable connections. The final connection is to the revolving frame, but sparks will be generated when this is done, so connect to a place as far as possible from the battery. (However, avoid connecting the cable to the work equipment, as conduction is poor.)
- Use care when removing the cables from the machine that has been started. Do not allow the cable ends to contact each other or the machine, to avoid hydrogen explosion.

INCORRECT A0067321

NOTICE

- The size of the booster cable and clip should be suitable for the battery size.
- The battery of the normal machine must be the same capacity as that of the engine to be started.
- Check the cables and clips for damage or corrosion.
- Make sure that the cables and clips are firmly connected.

Charging battery while still mounted on machine

- There is danger that an abnormal voltage may be applied to the alternator and damage it, so remove the wires from the battery terminals when charging.
- Remove all the battery filler caps when charging to release the gas that is generated.
- If the battery overheats (the electrolyte exceeds 45°C (113°F)), stop the charging temporarily.
- After completing charging, stop the charging immediately. If charging is continued after the charging is completed, the following problems will occur.
 - 1) Overheating of battery
 - 2) Reduction in battery electrolyte level
 - 3) Problems with battery
- When connecting the battery, be sure to connect the wires properly. Never connect (⊕ to ⊖ or ⊖ to ⊕). Connecting the wires wrongly will cause damage to the alternator and other parts.
- Except when checking the battery electrolyte level or measuring the specific gravity, always remove the cables connected to the battery before handling the battery.

Connecting the booster cables


Keep the starting switch at the OFF position.

Connect the booster cable as follows, in the order of the numbers marked in the diagram.

- 1. Make sure that the starting switches of the normal machine and problem machine are both at the OFF position.
- 2. Connect one clip of booster cable (A) to the positive (+) terminal of the problem machine.
- 3. Connect the other clip of booster cable A to the positive + terminal of the normal machine.
- 4. Connect one clip of booster cable ${\mathbb B}$ to the negative ${\mathbb D}$ terminal of the normal machine.
- 5. Connect the other clip of booster cable ® to the engine block of the problem machine.

Starting the engine


- 1. Make sure the clips are firmly connected to the battery terminals.
- 2. Start the engine of the normal machine and keep it to run at high idling speed.
- 3. Turn the starting switch of the problem machine to the START position and start the engine. If the engine doesn't start at first, try again after 2 minutes or so.

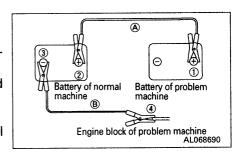

Disconnecting the booster cables

After the engine has started, disconnect the booster cables in the reverse of the order in which they were connected.

- 1. Remove one clip of booster cable ® from the engine block of the problem machine.
- 2. Remove the other clip of booster cable ® from the negative \ominus terminal of the normal machine.
- 3. Remove one clip of booster cable A from the positive + terminal of the normal machine.
- 4. Remove the other clip of booster cable A from the positive + terminal of the problem machine.

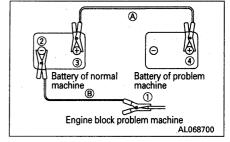

16.4 OTHER TROUBLE 16.4.1 ELECTRICAL SYSTEM

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of abnormalities or causes which are not listed below, please contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy	
Lamp does not glow brightly even when the engine runs at high speed	Defective wiringDefective adjustment of fan belt tension	 (Check, repair loose terminals, disconnections) Adjust fan belt tension For details, see EVERY 250 	
Lamp flickers while engine is running		HOURS SERVICE	
Charge level monitor does not go out even when engine is running	Defective alternatorDefective wiring	(• Replace) (• Check, repair)	
Abnormal noise is generated from alternator	Defective alternator	(● Replace)	
Starting motor does not turn when starting switch is turned to ON	 Defective wiring Defective starting motor Insufficient battery charge Defective safety relay 	(Check, repair) (Replace) Charge (Replace)	
Pinion of starting motor keeps going in and out	Insufficient battery chargeDefective safety relay	Charge(• Replace)	
Starting motor turns engine sluggishly	Insufficient battery chargeDefective starting motor	• Charge (• Replace)	
Starting motor disengages before engine starts	Defective wiringInsufficient battery charge	(• Check, repair) • Charge	
Pre-heating monitor does not light	 Defective wiring Defective heater relay Defective monitor Disconnected glow plug 	(Check, repair) (Replace) (Replace) (Replace)	
Oil pressure monitor does not light up when engine is stopped (starting switch at ON position)	Defective monitor	(● Replace)	
Outside of electrical heater is not warm when touched by hand	Defective wiringDisconnection in electric heater	(• Check, repair) (• Replace)	
	Defective operation of heater relay switch	(● Replace)	

16.4.2 CHASSIS

- (): Always contact your Komatsu distributor when dealing with these items.
- In cases of abnormalities or causes which are not listed below, please contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Speed of travel, swing, boom, arm, bucket is slow	Lack of hydraulic oil	Add oil to specified level, see CHECK BEFORE STARTING
Pump generates abnormal noise	 Clogged element in hydraulic tank strainer Lack of hydraulic oil 	Clean, see EVERY 2000 HOURS SERVICE Add oil to specified level
Excessive rise in hydraulic oil temperature	Loose fan beltDirty oil coolerLack of hydraulic oil	 Adjust fan belt tension, see EVERY 250 HOURS SERVICE Clean, see EVERY 500 HOURS SERVICE Add oil to specified level, see CHECK BEFORE STARTING
Track comes off Abnormal wear of sprocket	Track too loose	Adjust track tension, see WHEN REQUIRED

16.4.3 ENGINE

- (): Always contact your Komatsu distributor when dealing with these items.
 In cases of abnormalities or causes which are not listed below, please contact your Komatsu distributor for repairs.

Problem	Main causes	Remedy
Engine oil pressure monitor lights up	 Engine oil pan oil level is low (sucking in air) Clogged oil filter cartridge Defective tightening of oil pipe joint, oil leakage from damaged part Defective engine oil pressure sensor 	 Add oil to specified level, see CHECK BEFORE STARTING Replace cartridge, see EVERY 500 HOURS SERVICE (Check, repair)
Steam is emitted from top part of radiator (pressure valve) Red range of engine water temperature gauge lights up	 Cooling water level low, water leakage Loosen fan belt Dirt or scale accumulated in cooling system Clogged radiator fin or damaged fin Defective thermostat Loose radiator filler cap (high altitude operation) 	 Add cooling water, repair, see WHEN REQUIRED Adjust fan belt tension, see EVERY 250 HOURS SERVICE Change cooling water, clean inside of cooling system, see WHEN REQUIRED Clean or repair, see EVERY 500 HOURS SERVICE (• Replace thermostat) Tighten cap or replace packing
Engine does not start when starting motor is turned	 Lack of fuel Air in fuel system Defective fuel injection pump or nozzle Starting motor cranks engine sluggishly Preheating monitor does not light up Defective engine stop solenoid Defective compression Defective valve clearance 	Add fuel, see CHECK BEFORE STARTING Repair place where air is sucked in, see EVERY 500 HOURS SERVICE (• Replace pump or nozzle) See ELECTRICAL SYSTEM (o Adjust valve clearance)

ENGINE (cont'd) (16.4.3)

Problem	Main causes	Remedy
Exhaust gas is white or blue	Too much oil in oil pan	 Add oil to specified level, see CHECK BEFORE STARTING
	Improper fuel	Change to specified fuel
Exhaust gas occasionally turns black	 Clogged air cleaner element Defective nozzle Defective compression 	 Clean or replace, see WHEN REQUIRED (• Replace nozzle) (• See defective compression above)
Combustion noise occasionally makes breathing sound	Defective nozzle	(• Replace nozzle)
Abnormal noise generated (combustion or mechanical)	Low grade fuel being usedOverheating	 Change to specified fuel Refer to "Red range of engine water temperature gauge lights up"
	Damage inside mufflerExcessive valve clearance	(• Replace muffler) (• Adjust valve clearance)

MAINTENANCE

17. GUIDES TO MAINTENANCE

Do not carry out any inspection and maintenance operation that is not given in this manual.

Perform maintenance work on hard, flat ground.

Check service meter:

Check the service meter reading every day to see if the time has come for any necessary maintenance to be carried out.

Komatsu genuine replacement parts:

Use Komatsu genuine parts specified in the Parts Book as replacement parts.

Komatsu genuine oils:

Use Komatsu genuine oils and grease. Choose oils and grease with proper viscosities specified for ambient temperature.

Always use clean washer fluid:

Use automobile window washer fluid and be careful not to let any dirt get into it.

Always use clean oil and grease:

Use clean oil and grease. Also, keep containers of the oil and grease clean. Keep foreign materials away from oil and grease.

Keeping the machine clean:

Always keep the machine clean. This makes is easier to find parts causing problems. Keep in particular grease fittings, breathers and oil level gauges clean and avoid foreign matters from getting in them.

Be careful of hot water and oil:

Draining hot oils and coolants and removing their filters immediately after the engine stops are hazardous. Allow the engine to cool.

If the oil has to be drained when it is cold, warm up the oil to a suitable temperature (approx. $20 - 40^{\circ}$ C) before draining it.

Checking foreign materials in drained oil and on filter:

After oil is changed or filters are replaced, check the oil and filters for metallic particles and foreign materials. If large quantities of metallic particles or foreign materials are found, consult your Komatsu distributor.

Fuel strainer:

If your machine is equipped with a fuel strainer, do not remove it while fueling.

Oil change:

Check or change oils in the places where dust is scarce to keep foreign materials away from oils.

Warning tag:

Attach the warning tag to the starting switch or other appropriate control lever to avoid someone who is not aware of the circumstances from starting the engine.

Obey precautions:

During the operation, always obey the precautions on the safety label attached to the machine.

Welding instructions:

- Turn off the engine starting switch.
- Do not apply more than 200 V continuously.
- Connect grounding the cable within 1 m from the area to be welded.
- Avoid seals or bearings from being between the area to be welded and the position of grounding point.
- Do not use the area around the work equipment pins or the hydraulic cylinders as the grounding point.

Fire prevention:

Use nonflammable cleaner or light oil for cleaning parts. Keep flame or cigarette light away from light

Clamp faces:

When O-rings or gaskets are removed, clean the clamp faces and replace the O-rings and gaskets with new ones. Be sure to fit O-rings and gaskets when assembling.

Objects in your pockets:

Keep your pockets free of loose objects which can fall out and drop into the machinery; especially when you work on the machinery while bending over it.

Checking undercarriage:

When working in rocky areas, check for damage to the undercarriage and for looseness, flaws, wear and damage in bolts and nuts. Loosen the track tension a little when working in such areas.

Precautions when washing machine:

- Never spray steam or water directly on the connectors and mechatronics parts.
- Do not allow water to get on the monitors and controllers.
- Never spray steam or water directly at the radiator or oil cooler portions.

Pre-and post-work checks:

Before starting work in mud, rain, snow or at seashore, check plugs and valves for tightness. Wash the machine immediately after the work to protect components from rusting. Lubricate components more frequently than usual. Be sure to lubricate work equipment pins daily if they are submerged in water.

Dusty worksites:

When working at dusty worksites, do as follows:

- Clean the air cleaner at shorter intervals than specified.
- Clean the radiator core frequently to avoid clogging.
- Clean and replace the fuel filter frequently.
- Clean electrical components, especially the starting motor and alternator, to avoid accumulation of dust.

Avoid mixing oils:

Never mix oils of different brands. If you have only oil which is a different brand from the one that is used in the machine, do not add it but replace all the oil.

18. OUTLINES OF SERVICE

- Use Komatsu genuine parts for replacement.
- When changing or adding oil, do not use a different type of oil.
- Unless otherwise specified, the oil and coolant used at the time of shipment from the factory are as shown in the table below.

Item	Kind of fluid
Engine oil pan	SAE 10W-30 API classification CD
Final drive case	SAE 30 API classification CD
Hydraulic tank	SAE 10W API classification CD
Fuel tank	ASTM D975 No. 2 (However, ASTM D975 No. 1 is used for the winter season (October to March)
Radiator	Komatsu Super Coolant (AF-ACL) 30% added to water

18.1 OUTLINE OF OIL, FUEL, COOLANT

18.1.1 OIL

 Oil is used in the engine and work equipment under extremely severe conditions (high temperature, high pressure), and it deteriorates with use.
 Always use oil that matches the grade and temperature for use given in the Operation and

Maintenenance Manual. Even if the oil is not dirty, always replace the oil after the specified interval.

- Oil corresponds to blood in the human body, so always be careful when handling it to prevent any impurities (water, metal particles, dirt, etc.) from getting in.
 The majority of problems with machine are caused by the entry of such impurities.
 Take particular care not to let any impurities get in when storing or adding oil.
- Never mix oils of different grades or brands.
- Always add the specified amount of oil.
 Having too much oil or too little oil are both causes of problems.
- If the oil in the work equipment is not clear, there is probably water or air getting into the circuit.
 In such cases, please contact your Komatsu distributor.
- When changing the oil, always replace the related filters at the same time.
- We recommend you to have an analysis made of the oil periodically to check the condition of the machine. For those who wish to use this service, please contact your Komatsu distributor.

18.1.2 FUEL

- The fuel pump is a precision instrument, and if fuel containing water or dirt is used, it cannot work properly.
- Be extremely careful not to let impurities get in when storing or adding fuel.
- Always use the fuel specified in the Operation and Maintenance Manual.
 Fuel may congeal depending on the temperature when it is used (particularly in low temperature below-15°C), so it is necessary to change to a fuel that matches the temperature.
- To prevent the moisture in the air from condensing and forming water inside the fuel tank, always fill the fuel tank after completing the day's work.
- Before starting the engine, or when 10 minutes have passed after adding fuel, drain the sediment and water from the fuel tank.
- If the engine runs out of fuel, or if the filters have been replaced, it is necessary to bleed the air from the circuit.

18.1.3 COOLANT

- River water contains large amounts of calcium and other impurities, so if it is used, scale will stick to the engine and radiator, and this will cause defective heat exchange and overheating.
 Do not use water that is not suitable for drinking.
- When using anti-freeze, always observe the precautions given in the Operation and Maintenance Manual.
- Komatsu machines are supplied with Komatsu original anti-freeze in the coolant when the machine is shipped.

This anti-freeze is effective in preventing corrosion of the cooling system.

The anti-freeze can be used continuously for two years or 4000 hours. Therefore, it can be used as it is even in hot areas.

- Anti-freeze is inflammable, so be extremely careful not to expose it to flame or fire.
- The proportion of anti-freeze to water differs according to the ambient temperature.
 For details of the mixing proportions, see "24.2.2 CLEAN INSIDE OF COOLING SYSTEM."
- If the engine overheats, wait for the engine to cool before adding coolant.
- If the coolant level is low, it will cause overheating and will also cause problems with corrosion from the air in the coolant.

18.1.4 GREASE

- Grease is used to prevent twisting and noise at the joints.
- The nipples not included in the maintenance section are nipples for overhaul, so they do not need grease.
 - If any part becomes stiff after being used for long time, add grease.
- Always wipe off all of the old grease that is pushed out when greasing. Be particularly careful to wipe
 off the old grease in places. Where sand or dirt sticking in the grease would cause wear of the rotating
 parts.

18.1.5 STORING OIL AND FUEL

- Keep indoors to prevent any water, dirt, or other impurities from getting in.
- When keeping drum cans for a long period, put the drum on its side so that the filler port of the drum can is at the side. (To prevent moisture from being sucked in)
 If drum cans have to be stored outside, cover them with a waterproof sheet or take other measures to protect them.
- To prevent any change in quality during long-term storage, be sure to use in the order of first infirst out (use the oldest oil or fuel first).

18.1.6 FILTERS

- Filters are extremely important safety parts. They prevent impurities in the fuel and air circuits from entering important equipment and causing problems.
 Replace all filters periodically. For details, see the Operation and Maintenance Manual.
 However, when working in severe conditions, it is necessary to consider replacing the filters at shorter intervals according to the oil and fuel (sulfur content) being used.
- Never try to clean the filters (cartridge type) and use them again. Always replace with new filters.
- When replacing oil filters, check if any metal particles are stuck to the old filter. If any metal particles
 are found, please contact your Komatsu distributor.
- Do not open packs of spare filters until just before they are to be used.
- Always use Komatsu genuine filters.

18.2 OUTLINE OF ELECTRIC SYSTEM

- If the wiring gets wet or the insulation is damaged, the electric system leaks and this could result in hazardous malfunction of the machine.
- Services relating to the electric system are (1) check of fan blet tension, (2) check of damage or wear
 in the fan belt and (3) check of battery fluid level.
- Never remove or disassemble any electric components installed in the machine.
- Never install any electric components other than these specified by Komatsu.
- Be careful to keep the electric system free of water when washing the machine or when it rains.
- When working on the seashore, carefully clean the electric system to prevent corrosion.

18.3 OUTLINE OF HYDRAULIC SYSTEM

- During operation and immediately after operation is ended, the temperature of the hydraulic system still remains high.
 - In addition, high hydraulic pressure is applied to the system. Take care when inspecting and maintaining the hydraulic system.
 - Stop the machine on level ground, lower the bucket to the ground, then set so that there is no pressure applied to the cylinder circuit.
 - o Always stop the engine.
 - Immediately after operations, the hydraulic oil and lubricating oil are at high temperature and high pressure, so wait for the oil temperature to go down before starting maintenance. Even when the temperature goes down, the circuit may still be under internal pressure, so when loosening the plug or screw, or the hose joint, do not stand in front of the part. Loosen it slowly to release the internal pressure before removing it.
 - When carrying out inspection or maintenance of the hydraulic circuit, always bleed the air from the hydraulic tank to remove the internal pressure.
- Periodic maintenance includes the inspection of the hydraulic oil level, replacement of the filter and refilling of hydraulic oil.
- When the high pressure hose, etc. is removed, check the O-ring for damage. If necessary, replace
- After the hydraulic filter element and strainer are cleaned or replaced, or after the hydraulic system
 is repaired or replaced or the hydraulic piping is removed, bleed air from the hydraulic circuit.

19. WEAR PARTS LIST

Wear parts such as the filter element, bucket tooth, etc. are to be replaced at the time of periodic maintenance or before their abrasion limits.

The wear parts should be changed correctly in order to use the machine economically.

For part change, Komatsu genuine parts of excellent quality should be used.

When ordering parts, please check the part number in the parts book.

The parts in parentheses are to be replaced at the same time.

Item	Part No.	Part Name	Q'ty	Replacement frequency
Hydraulic oil filter	21U-60-11320	Cartridge	1	Every 250 hours service
Engine oil filter	YM119305-35150	Oil filter assembly	1	Every 500 hours service
Fuel filter	119810-55650 (YM102103-55520)	Element (O-ring)	1 (1)	Every 500 hours service
Feed pump pre-filter	129052-55630	Filter	1	Every 500 hours service
Air cleaner	119655-12560	Element	1	_
Bucket (PC12R)	20W-70-15130 (02090-10850) (02290-10813)	Tooth (Bolt) (Nut)	3 (6) (6)	
Ducket (I C12II)	20M-70-75140 20M-70-75130 (01675-31234) (01803-21213)	Cutting edge (right) Cutting edge (left) (Bolt) (Nut)	(6) (6)	
	20W-70-15130 (02090-10850) (02290-10813)	Tooth (Bolt) (Nut)	(8) (8)	
Bucket (PC15R)	20M-70-75140 20M-70-75130 (01675-31234) (01803-21213)	Cutting edge (right) Cutting edge (left) (Bolt) (Nut)	1 1 (6) (6)	-

20.USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE

PROPER SELECTION OF FUEL, COOLANT AND LUBRICANTS

KIND OF		AMBIENT TEMPERATURE					CAPACITY				
RESERVOIR	FLUID	-22 -30	-4 -20	14 -10	32 0	50 10	68 20	86 30	104°F 40°C	Specified	Refill
Engine oil pan	Engine oi			SAE	SAE	101	N-30			3 ℓ 0.78 US gal 0.66 UK gal	3 ℓ 0.78 US gal 0.66 UK gal
Final drive case (each)	Engine oil				S	AE	30			0.3 £ 0.08 US gal 0.07 UK gal	0.3 <i>l</i> 0.08 US gal 0.07 UK gal
Hydraulic system	Engine oil				S	λE 1	0W			24 <i>l</i> 6.24 US gal 5.28 UK gal	22 ℓ 5.81 US gal 4.84 UK gal
Fuel tank	Diesel fuel		*1		AS	TM I)975	No.2		19 ℓ 5.02 US gal 4.18 UK gal	_
Cooling system	Water	Ad	d ant	tifreez	е					3.4 £ 0.90 US gal 0.75 UK gal	-

%1: ASTM D975 No. 1

REMARK

 When fuel sulphur content is less than 0.5%, change oil in the oil pan every periodic maintenance hours described in this manual.
 Change oil according to the following table if fuel sulphur content is above 0.5%.

Fuel sulphur content	Change interval of oil in engin oil pan		
0.5 to 1.0%	1/2 of regular interval		
Above 1.0%	1/4 of regular interval		

- When starting the engine in an atmospheric temperature of lower than 0°C, be sure to use engine oil of SAE10W, SAE10W-30 and SAE15W-40, even though an atmospheric temperature goes up to 10°C more or less in the day time.
- Use API classification CD as engine oil and if API classification CC, reduce the engine oil change interval to half.
- There is no problem if single grade oil is mixed with multigrade oil (SAE10W-30, 15W-40), but be sure to add single grade oil that matches the temperature in the table.
- We recommend Komatsu genuine oil which has been specifically formulated and approved for use in engine and hydraulic work equipment applications.

Specified capacity: Total amount of oil including oil for components and oil in piping.

Refill capacity: Amount of oil needed to refill system during normal inspection and maintenance.

ASTM: American Society of Testing and Material

SAE: Society of Automotive Engineers API: American Petroleum Institute

No.	Supplier	Engine Oil [CD or CE] SAE10W, 30, 40 10W30, 15W40 (The 15W40 oil marked * is CE.)	Gear Oil [GL-4 or GL-5] SAE80, 90, 140	Grease [Lithium-Base] NLGI No. 2	Anti-freeze Coolant [Ethylene Glycol Base] Permanent Type
1	KOMATSU	EO10-CD EO30-CD EO10-30CD EO15-40CD	GO90 GO140	G2-LI G2-LI-S	AF-ACL AF-PTL AF-PT (Winter, one season type)
2	AGIP	Diesel sigma S Super dieselmulti- grade *Sigma turbo	Rotra MP	GR MU/EP	-
3	АМОСО	*Amoco 300	Multi-purpose gear oil	RYKON prenium grease	_
4	ARCO	*Arcofleet S3 plus	Arco HD gear oil	Litholine HEP 2 Arco EP moly D	-
5	ВР	Vanellus C3	Gear oil EP Hypogear EP	Energrease LS-EP2	Antifreeze
6	CALTEX	*RPM delo 400 RPM delo 450	Universal thuban Universal thuban EP	Marfak all purpose 2 Ultra-duty grease 2	AF engine coolant
7	CASTROL	*Turbomax *RX super CRD	EP EPX Hypoy Hypoy B Hypoy C	MS3 Spheerol EPL2	Anti-freeze
8	CHEVRON	*Delo 400	Universal gear	Ultra-duty grease 2	-
9	CONOCO	*Fleet motor oil	Universal gear lubricant	Super-sta grease	***
10	ELF	Multiperformance 3C Performance 3C	_	Tranself EP Tranself EP type 2	Glacelf
11	EXXON (ESSO)	Essolube D3 *Essolube XD-3 *Essolube XD-3 Extra *Esso heavy duty Exxon heavy duty	Gear oil GP Gear oil GX	Beacon EP2	All season coolant
12	GULF	Super duty motor oil *Super duty plus	Multi-purpose gear lubricant	Gulfcrown EP2 Gulfcrown EP special	Antifreeze and coolant
13	MOBIL	Delvac 1300 *Delvac super 10W-30, 15W-40	Mobilube GX Mobilube HD	Mobilux EP2 Mobilgrease 77 Mobilgrease special	_

No.	Supplier	Engine Oil [CD or CE] SAE10W, 30, 40 10W30, 15W40 (The 15W40 oil marked * is CE.)	Gear Oil [GL-4 or GL-5] SAE80, 90, 140	Grease [Lithium-Base] NLGI No. 2	Anti-freeze Coolant [Ethylene Glycol Base] Permanent Type
14	PENNZOIL	*Supreme duty fleet motor oil	Multi-purpose 4092 Multi-purpose 4140	Multi-purpose white grease 705 707L White – bearing grease	Anti-freeze and summer coolant
15	PETROFINA	FINA kappa TD	FINA potonic N FINA potonic NE	FINA marson EPL2	FINA tamidor
16	SHELL	Rimula X	Spirax EP Spirax heavy duty	Alvania EP grease	_
17	SUN	-	Sunoco GL5 gear oil	Sunoco ultra prestige 2EP Sun prestige 742	Sunoco antifreeze and summer coolant
18	TEXACO	*Ursa super plus Ursa premium	Multigear	Multifak EP2 Starplex 2	Code 2055 startex antifreeze coolant
19	TOTAL	Rubia S *Rubia X	Total EP Total transmission TM	Multis EP2	Antigel/antifreeze
20	UNION	*Guardol	MP gear lube LS	Unoba EP	-
21	VEEDOL	*Turbostar *Diesel star MDC	Multigear Multigear B Multigear C	_	Antifreeze

21. STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS

21.1 INTRODUCTION OF NECESSARY TOOLS

The following tools are needed when carrying out maintenance.

No.	Name of tool	Part No.	Remarks
1	Wrench set	09000-30006	Applicable width across flats (S1-S2) 8mm - 10mm 12mm - 14mm 13mm - 17mm 19mm - 22mm 24mm - 27mm 30mm - 32mm
2	Screwdriver	YM104200-92350	Interchangeable flat-head and cross-head type
3	Filter wrench	YM171051-92760	For fuel filter cartridge
4	Filter wrench	YM119332-92751	For engine oil filter cartridge
5	Grease pump	07952-70002	For greasing work
6	Nozzle	07951-21022	For rubber shoe (For the machine equipped with rubber shoes)
7	Grease cartridge	07950-90403	(Lithium base grease, 400 g)
8	Funnel	21R-98-11130	<u>-</u>

If any of the above tools are broken, please order them from your Komatsu distributor.

21.2 TORQUE LIST


Unless otherwise specified, tighten the metric bolts and nuts to the torque shown in the table.

The tightening torque is determined by the width across the flats **b** of the nut and bolt.

If it is necessary to replace any nut or bolt, always use a Komatsu genuine part of the same size as the part that was replaced.

Nm (newton meter): 1Nm = 0.1 kgm

= 0.74 lbft

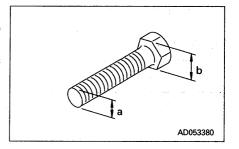

Thread diameter of bolt (mm) (a)	Width across flat (mm) (b)	(T	H) AD054300	
	,	N•m	kgf•m	lbft
6	10	13.2 ± 1.4	1.35 ± 0.15	9.73 ± 1.03
8	13	31.4 ± 2.9	3.2 ± 0.3	23.2 ± 2.1
10	17	65.7 ± 6.8	6.7 ± 0.7	48.5 ± 5.0
12	19	112 ± 9.8	11.5 ± 1.0	82.6 ± 7.2
14	22	177 ± 19	18.0 ± 2.0	131 ± 14
16	24	279 ± 29	28.5 ± 3	206 ± 21
18	27	383 ± 39	39 ± 3	282 ± 29
20	30	549 ± 58	56 ± 6	405 ± 43
22	32	745 ± 78	76 ± 8	549 ± 58
24	36	927 ± 98	94.5 ± 10	684 ± 72
27	41	1320 ± 140	135 ± 15	973 ± 100
30	46	1720 ± 190	175 ± 20	1270 ± 140
33	50	2210 ± 240	225 ± 25	1630 ± 180
36	55	2750 ± 290	280 ± 30	2030 ± 210
39	60	3280 ± 340	335 ± 35	2420 ± 250

NOTICE

When tightening panels or other parts having tightening fixtures made of plastic, be careful not to use excessive tightening torque: doing so will damage the plastic parts.

22. PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS

To ensure safety at all times when operating or driving the machine, the user of the machine must always carry out periodic maintenance. In addition, to further improve safety, the user should also carry out periodic replacement of the parts given in the table. These parts are particularly closely connected to safety and fire prevention.

With these parts, the material changes as time passed, or they easily wear or deteriorate. However, it is difficult to judge the condition of the parts simply by periodic maintenance, so they should always be replaced after a fixed time has passed, regardless of their condition. This is necessary to ensure that they always maintain their function completely.

However, if these parts show any abnormality before the replacement interval has passed, they should be repaired or replaced immediately.


If the hose clamps show any deterioration, such as deformation or cracking, replace the clamps at the same as the hoses.

When replacing the hoses, always replace the O-rings, gaskets, and other such parts at the same time.

Ask your Komatsu distributor to replace the safety critical parts.

SAFETY CRITICAL PARTS

No.	Safety critical parts for periodic replacement		Q'ty	Replacement interval	
1	Fuel hose (fuel tank – pre-filter)		1		
2	Fuel hose (pre-filter – feed pump)		1		
3	Fuel hose (feed pump – fuel filter)		1		
4	Fuel hose (fuel filter – injection pump)		1		
5	Fuel hose (fuel filter – fuel tank)		1	Every 2 years or 4000 hours, whichever comes sooner	
6	Spill hose (among nozzles)		2		
7	Spill hose (nozzle – injection pump)		1		
8	Hydraulia haaa (main numn daliyan)	PC12R	1		
O	Hydraulic hose (main pump delivery)	PC15R	1		
9	Seat belt (option)		1	Every 3 years	

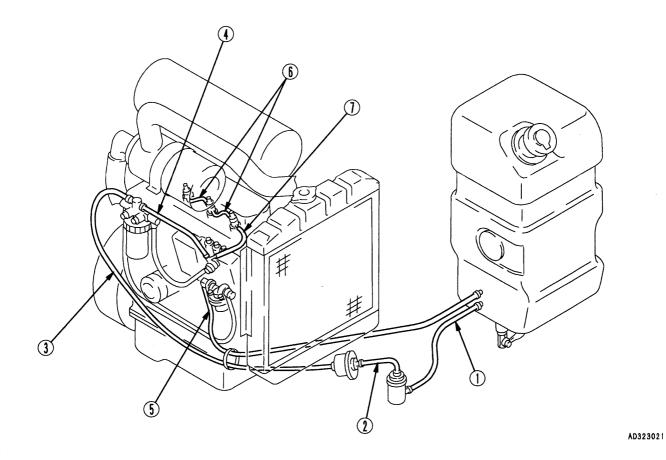

23. MAINTENANCE SCHEDULE CHART

23.1 MAINTENANCE SCHEDULE CHART


SERVICE ITEM	PAGE
INITIAL 250 HOURS SERVICE (only after the first 250 hours)	
Check engine valve clearance, adjust	3-57
WHEN REQUIRED	
Check, clean and replace air cleaner element	3-21
Clean inside of cooling system	3-23
Drain water, sediment from fuel tank	3-27
Check electric wirings	3-27
Check rubber shoes (Machine equipped with rubber shoes)	3-28
Check and adjust track tension (Machine equipped with rubber shoes)	3-30
Replace rubber shoes (Machine equipped with rubber shoes)	3-32
Check and adjust track tension (Machine equipped with steel shoes) (option)	3-35
Replace bucket teeth	3-38
CHECK BEFORE STARTING	
Check coolant level, add water	3-39
Check oil level in engine oil pan, add oil	3-39
Check fuel level, add fuel	3-40
Check oil level in hydraulic tank, add oil	3-41
Check fuel filter element (With water separator)	3-42
EVERY 100 HOURS SERVICE	
Lubricating	3-43
Swing pinion (1 point)	3-43
Swing circle (1 point)	3-43
Bucket – Link coupling pin (1 point)	3-43
Arm – Bucket coupling pin (1 point)	3-43
EVERY 250 HOURS SERVICE	
Change oil in engine oil pan	3-44
Check level of battery electrolyte	3-45
Replace hydraulic filter element	3-46
Check fan belt tension, adjust	3-47
Check oil level in final drive case, add oil	3-48
EVERY 500 HOURS SERVICE	
Replace engine oil filter cartridge	3-49
Clean, check radiator fins	3-51
Replace fuel filter element (With water separator)	3-52
Replace feed pump pre-filter	3-53

SERVICE ITEM	PAGE
EVERY 1000 HOURS SERVICE	
Change oil in final drive case	3-54
EVERY 2000 HOURS SERVICE	
Check oil in hydraulic tank, clean strainer	3-55
Check alternator, starting motor	3-57
Check engine valve clearance, adjust	3-57

23.2 MAINTENANCE INTERVAL WHEN USING HYDRAULIC BREAKER

For machines equipped with a hydraulic breaker, the hydraulic oil deteriorates faster than for normal bucket digging operations, so set the maintenance intervals as follows.

- Replacing hydraulic filter element
 On new machines, replace the element after the first 100 to 150
 hours, then carry out further replacement of the element according to the table on the right.
- Changing oil in hydraulic tank
 Change the oil according to the table on the right.

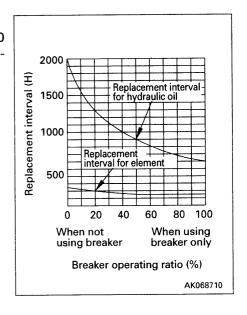

24. SERVICE PROCEDURE

24.1 INITIAL 250 HOURS SERVICE

Carry out the following maintenance only after the first 250 hours.

CHECK ENGINE VALVE CLEARANCE, ADJUST

For details of the method of replacing or maintaining, see the section on 2000 HOURS SERVICE.

24.2 WHEN REQUIRED


24.2.1 CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT

WARNING -

- Never clean or replace the air cleaner element with the engine running.
- When using pressured air to clean the element, wear safety glasses or goggles to protect the eyes.


Inspection


If dust indicator 1 becomes red, clean the air cleaner element.

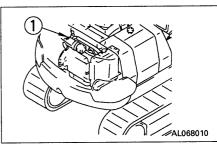


Cleaning method of cleaner element

- 1. Open the engine hood at the rear of the machine.
- 2. Remove pin ② of the air cleaner band, and pull the air cleaner toward you.
- 3. Remove clip ③, then remove dust cup ④ and element.
- 4. Throw away the dust in the cup and clean its inside.
- 5. Clean the inside of the body of the air cleaner.
- 6. Blow dry compressed air (less than 0.69 MPa (7 kg/cm², 100 psi)) from the inside of the element along the pleats. Then, blow from the outside along the pleats. Blow from inside again.

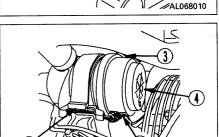

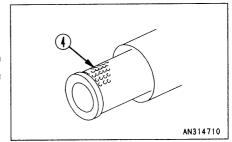

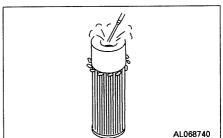

AE319440


7. If small holes or thinner parts are found on the element when it is checked with an electric bulb after cleaning, replace the element.

NOTICE


Do not use an element whose folds or gasket or seal are damaged.

When cleaning the element, do not hit it or beat it against something.

Wrap up unused elements and store them in a dry area.

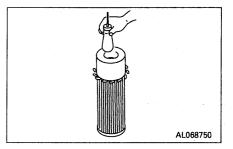



8. Install the cleaned element and dust cup with the arrow up.

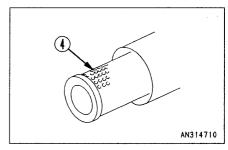

Replacement of air cleaner element

- 1. Open the engine hood at the rear of the machine.
- 2. Remove pin ② of the air cleaner band, and pull the air cleaner toward you.
- 3. Remove clip ③, then remove dust cup ④ and element.
- 4. Clean the inside of the body of the air cleaner.
- 5. Set a new element and install the dust cup, then secure them with the clip.
- 6. Secure the body of the air cleaner with pin 2.

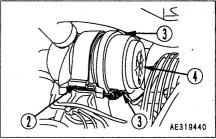

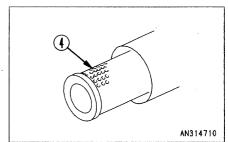

24.2.2 CLEAN INSIDE OF COOLING SYSTEM

– 🛕 WARNING –

- Soon after the engine has been stopped, the coolant is hot and can cause personal injury. Allow the engine to cool before draining water.
- Since cleaning is performed while the engine is running, it is very dangerous to enter the rear side of the machine as the machine may suddenly start moving. There is also danger of touching the fan when the engine hood is open. While the engine is running, never enter the rear side of the machine.
- Never remove the radiator cap when the engine is at operating temperature. At operating temperature, the coolant is under pressure. Steam blowing up from the radiator could cause personal injury. Allow the engine to cool until the radiator filler cap is cool enough to touch with your hand. Remove the filler cap slowly to allow pressure to be relieved.
- Clean the inside of the cooling system, change the coolant and add corrosion resistant KI-2 (powder) according to the table below.

Kind of coolant	Cleaning inside of cooling system and changing coolant	Adding corrosion resistant KI (in hard water areas)		
Permanent type antifreeze (All season type)	Every year (autumn) or every 2000 hours whichever comes first	Every 1000 hours and when cleaning the inside of the cooling system and when changing coolant.		
Non permanent type antifreeze containing ethylene glycol (Winter, one season type)	Every 6 months (spring, autumn) (Drain antifreeze in spring, add antifreeze in autumn)			
When not using antifreeze	Every 6 months or every 1000 hours whichever comes first			

- Stop the machine on level ground when cleaning or changing the coolant.
- Use a permanent type of antifreeze.
 If, for some reason, it is impossible to use permanent type antifreeze, use an antifreeze containing ethylene glycol.
- To restrict the formation of rust and scale in hard water areas, add Komatsu genuine corrosion resistant KI-2 (powder) to the cooling water.

Never use commercial available anti-corrosive agents (made by Fleetguard, etc.).

 When deciding the ratio of antifreeze to water, check the lowest temperature in the past, and decide from the mixing rate table given below.

It is actually better to estimate a temperature about 10°C (50°F) lower when deciding the mixing rate.

Mixing rate of water and antifreeze

Min. atmospheric temperature	°C	5	-10	-15	-20	-25	-30
	°F	23	14	5	-4	-13	-22
Amount of antifreeze	ℓ	0.8	1.1	1.2	1.4	1.6	1.7
	US gal	0.20	0.29	0.32	0.37	0.42	0.44
	UK gal	0.17	0.24	0.26	0.31	0.35	0.37
Amount of water	ℓ	2.6	2.3	2.2	2.0	1.8	1.7
	US gal	0.68	0.61	0.58	0.53	0.48	0.44
	UK gal	0.57	0.51	0.48	0.44	0.40	0.37

- **A**WARNING —

Antifreeze is flammable, so keep it away from any flame.

- Use city water for the cooling water.
 If river water, well water or other such water supply must be used, contact your Komatsu distributor.
- We recommend use of an antifreeze density gauge to control the mixing proportions.

- 🛕 WARNING —


When removing drain plug, avoid pouring coolant on yourself.

- Prepare a container to catch drained coolant: Min 5ℓ (1.32 US gal, 1.1 UK gal) capacity.
- Prepare a water inlet hose.
- 1. Turn radiator cap ① slowly to remove it.
- 2. Set a container to catch the coolant under drain valve ② and drain plug ③. Open drain valve ② at the bottom of the radiator to drain the water. Remove drain plug ③ in the cylinder block when draining the water.
- 3. After draining the water, close drain valve ② and drain plug ③, and fill with city water.
- 4. Open drain valve ② and drain plug ③, run the engine at low idling, and flush water through the system for 10 minutes.

When doing this, adjust the speed of filling and draining the water so that the radiator is always full.
While flushing water through the system, watch carefully that the water inlet hose does not come out of the radiator water filler.

- 5. After flushing, stop the engine, open drain valve ② and drain plug ③, then close it again after all the water has drained out.
- 6. After draining the water, clean with a flushing agent. We recommend use of a Komatsu genuine cleaning agent. For details of the cleaning method, see the instructions given with the cleaning agent.
- 7. After cleaning, open drain valve ② and drain plug ③ to drain all the cooling water, then close them and fill slowly with clean water.
- 8. When the water comes up to near the water filler port, open drain valve ② and drain plug ③, run the engine at low idling, and continue to run water through the system until clean colorless water comes out.

When doing this, adjust the speed of filling and draining the water so that the radiator is always full.

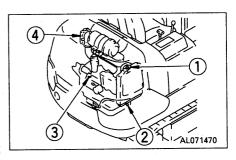


- When the water is completely clean, stop the engine, close drain valve ②, wrap the drain plug with seal tape, then close drain plug ③.
- 10. Add cooling water until it overflows from the water filler.
- 11. To remove the air in the cooling water, run for five minutes at low idling, then for another five minutes at high idling.

 When doing this, leave radiator cap ① off.
- 12. After draining off the cooling water of reserve tank 4, clean the inside of the reserve tank and refill the water between FULL and LOW level.
- 13. Stop the engine, wait for about three minutes, add cooling water up to near the radiator water filler port, then tighten cap ①.

24.2.3 DRAIN WATER, SEDIMENT FROM FUEL TANK

Open valve 1 at the bottom of the tank and drain the water and sediment collected at the bottom of the tank together with the fuel.

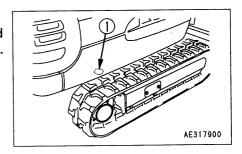

24.2.4 CHECK ELECTRIC WIRINGS



If fuses are frequently blown or if there are traces of short circuit on the electrical wiring, locate the cause and carry out repair.

Check for damage of the fuse and any sign of disconnection or short circuit in the electric wiring. Check also for loose terminals and tighten any loose parts. Check the following points carefully.

- Battery
- Starting motor
- Alternator

Please contact your Komatsu distributor for investigation and correction of the cause.

- AWARNING -

Accumulation of flammable material (dead leaves, twigs, grass, etc.) around the battery may cause fire, so always check and remove such material.


When carrying out walk-around checks or checks before starting, always check if there is any accumulation of flammable material around the battery, and remove such flammable material.

24.2.5 CHECK RUBBER SHOES (MACHINE EQUIPPED WITH RUBBER SHOES)


If the rubber shoes are in the following condition, they must be repaired or replaced, so please contact your Komatsu distributor for repair or replacement.

Height of lug

• If lug height "a" is reduced by wear, the drawbar pull will drop. If "a" is less than 5 mm (0.2 in), replace with a new part.

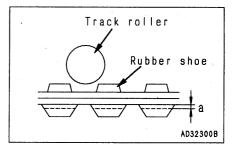


 If the lug wears and the steel cord inside the shoe is exposed for two links or more, replace with a new part.

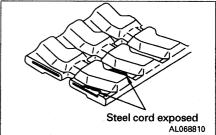


Cuts in rubber shoe steel cord

If more than half of the steel cord layer on one side is cut, replace with a new part.

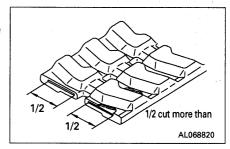

Separation of rubber shoe core


If the rubber core has separated at one place or more, replace with a new part.

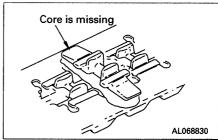

Rubber shoe tension

If the rubber shoe is still slack even when grease is pumped in, replace with a new part or replace the seal inside the cylinder.

If the track tension can only be increased to a level where the rubber shoe may come off, there may be not only elongation of the rubber shoe but also damage to the grease cylinder.

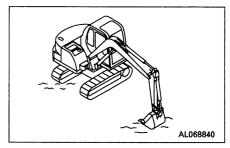


Cracks in rubber shoe

If the cracks between the rubber shoe lugs increase to a size of approx. 60 mm (2.36 in) the rubber shoe must be repaired. Even if the track is small and short, if the steel cord can be seen inside, carry out repairs immediately.

If the length is less than 30 mm (1.18 in) or the depth of the crack is less than 10 mm (0.39 in), there is no particular need to carry out repairs.

When making judgement whether to replace, repair, or continue using rubber shoes, please contact your Komatsu distributor.

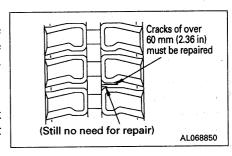

24.2.6 CHECK AND ADJUST TRACK TENSION (MACHINE EQUIPPED WITH RUBBER SHOES)

AWARNING —


Carry out this operation with two workers. The operator must move the machine in accordance with the signals from the other worker. The track tension is checked with the chassis raised, so it is extremely dangerous if the machine is lowered by mistake during the inspection. Never move the machine while anyone is carrying out measurements.

The wear of the rubber shoe will vary with the working conditions and type of soil. Therefore, it is necessary to inspect the wear and track tension frequently.


In particular, when installing new parts, carry out the initial inspection after 30 hours of use.

Inspeciton

1. Set the connection (M mark) of the rubber shoe at the top midway between the two axles.

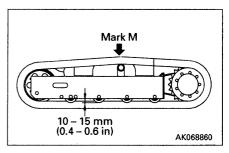

Raise the chassis with the boom and arm. When doing this, operate the levers slowly.

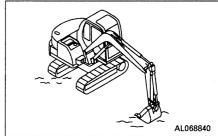


3. The standard tension is a clearance of 10 - 15 mm (0.40 - 0.60 in) between the flange of track roller.

At this time, measure the following track rollers.

PC12R: Second track roller from sprocket

PC15R: Third track roller from sprocket

If the rubber track is loose and the machine is operated, the track may come off, or there will be premature wear of the core.

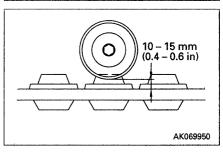

If the track tension is not at the standard value, adjust it in the following manner.


Adjustment

MARNING

Grease inside the adjusting mechanism is under high pressure. Grease coming from valve ③ under pressure can penetrate the body causing injury or death. For this reason, do not loosen valve ③ more than one turn. Do not loosen any part other than valve ③.

If the track tension is not relieved by this procedure, please contact your Komatsu distributor.

- When increasing tension
- Prepare a grease gun
- 1. Loosen two bolts and remove cover ①.
- 2. Pump in grease through grease fitting 2.
- 3. To check that the correct tension has been achieved, move the machine backwards and forwards.
- 4. Check the track tension again, and if the tension is not correct, adjust it again.
- 5. If the tension is yet loose after applying pressurized injection of grease, it is necessary to replace the rubber shoes or seal inside of cylinder. Consult your Komatsu distributor for repair.

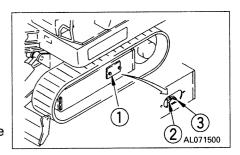

When loosening tension



It is extremely dangerous to release the grease by any method except the procedure given below. If the track tension is not relieved by this procedure, please contact your Komatsu distributor.

- 1. Loosen two bolts and remove cover (1).
- 2. Loosen valve 3 gradually to release the grease.
- Turn valve (3) a maximum of two turn.
- 4. If the grease does not come out smoothly, move the machine backwards and forwards a short distance.
- Tighten valve (3).
- To check that the correct tension has been achieved, move the machine backwards and forwards.
- 7. Check the track tension again, and if the tension is not correct, adjust it again.

24.2.7 REPLACE RUBBER SHOES (MACHINE EQUIPPED WITH RUBBER SHOES)





- 🕰 WARNING --

Carry out this operation with two workers. The operator must move the machine in accordance with the signals from the other worker. The track is replaced with the chassis raised, so it is extremely dangerous if the machine is lowered by mistake while the track is being replaced. During the replacement operation, operate only the track that is being replaced. Do not operate any other part.

Grease inside the adjusting mechanism is under high pressure. Grease coming from valve 3 under pressure can penetrate the body causing injury or death. For this reason, do not loosen valve ③ more than one turn. Do not loosen any part other than valve ③.

If the track tension is not relieved by this procedure, please contact your Komatsu distributor.

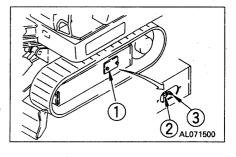

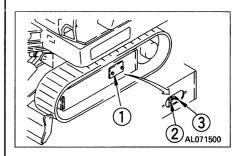


Prepare the following:

- Grease gun
- Steel pipe


REMOVAL OF RUBBER SHOE


- 🛕 WARNING -

- It is extremely dangerous to release the grease by any method except the procedure given below. If the track tension is not relieved by this procedure, please contact your Komatsu distributor.
- Check that all the grease has been released before rotating the sprocket to remove the rubber shoe.
- Raise the chassis with the boom and arm.
 When doing this, operate the levers slowly.

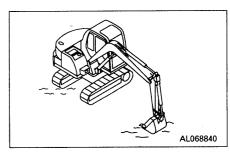


- 2. Loosen two bolts and remove cover ①.
- 3. Loosen valve 3 gradually to release the grease.
- 4. Turn valve ③ a maximum of two turn.
- 5. Fit the steel pipes inside the rubber shoe, rotate the sprocket in reverse, so that the steel pipes make the rubber shoe come up from the idler, then slide to the side to remove.

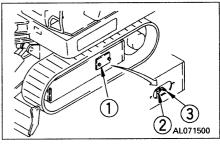

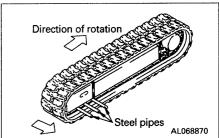


INSTALLATION OF RUBBER SHOE


Raise the chassis with the boom and arm.
 When doing this, operate the levers slowly.

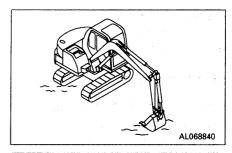


- 2. Mesh the rubber shoe with the sprocket and fit it over the idler.
- 3. Rotate the sprocket in reverse, then push in the rubber shoe and stop the rotation.

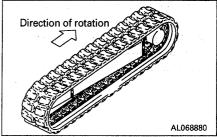

4. Mesh a steel pipe with the rubber shoe, then rotate the sprocket again and fit the rubber shoe securely on the idler.

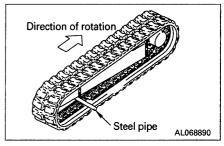

- 5. Stop the rotation, and check that the rubber shoe is securely fitted to the sprocket and idler.
- 6. Adjust the tension of the rubber shoe. For details, see "24.2.6 CHECK AND ADJUST TRACK TENSION".
- 7. Check that the track tension is correct and that the rubber shoe is correctly meshed on the sprocket and idler, then lower the machine to the ground.

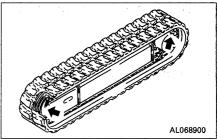

24.2.8 CHECK AND ADJUST TRACK TENSION (MACHINE EQUIPPED WITH STEEL SHOES)

- 🛕 WARNING --


Carry out this operation with two workers. The operator must move the machine in accordance with the signals from the other worker. The track tension is checked with the chassis raised, so it is extremely dangerous if the machine is lowered by mistake during the inspection. Never move the machine while anyone is carrying out measurements.

The wear of pins and bushings on the undercarriage will vary with the working conditions and soil properties. It is thus necessary to continually inspect the track tension so as to maintain the standard tension.

Carry out the check and adjustment under the same conditions as when operating (on jobsites where the track becomes clogged with mud, measure with the track clogged with mud).

Inspection


Raise the chassis with the boom and arm.
 When doing this, operate the levers slowly.

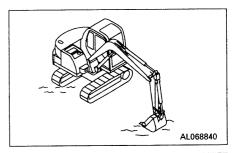

2. Measure the clearance between the tread surface of the track roller and the roller contact surface of the track shoe at a position that is safe even if the chassis should come down.

Standard clearance: 10 - 20 mm (0.4 - 0.8 in)

Places to measure 2nd track roller from sprocket

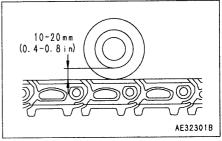


If the track tension is not at the standard value, adjust it in the following manner.

Adjustment


WARNING -

Grease inside the adjusting mechanism is under high pressure. Grease coming from valve ③ under pressure can penetrate the body causing injury or death. For this reason, do not loosen valve ③ more than one turn. Do not loosen any part other than valve ③.

If the track tension is not relieved by this procedure, please contact your Komatsu distributor.

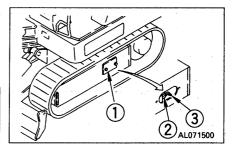

- When increasing tension
- Prepare a grease gun
- 1. Loosen two bolts and remove cover (1).
- 2. Pump in grease through grease fitting 2).
- 3. To check that the correct tension has been achieved, move the machine backwards and forwards.
- 4. Check the track tension again, and if the tension is not correct, adjust it again.
- Continue to pump in grease until S becomes 0 mm (0.0 in). If the tension is still loose, the pin and bushing are excessively worn, so they must be either turned or replaced. Please contact your Komatsu distributor.

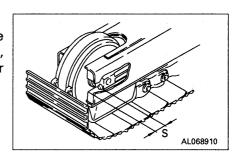


• When loosening tension



It is extremely dangerous to release the grease by any method except the procedure given below. If the track tension is not relieved by this procedure, please contact your Komatsu distributor.

- 1. Loosen valve 3 gradually to release the grease.
- 2. Turn valve ③ a maximum of one turn.
- 3. If the grease does not come out smoothly, move the machine backwards and forwards a short distance.
- 4. Tighten valve 3.
- 5. To check that the correct tension has been achieved, move the machine backwards and forwards.
- 6. Check the track tension again, and if the tension is not correct, adjust it again.

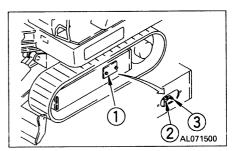


24.2.9 REPLACE BUCKET TEETH

Replace the teeth before the adapter starts to wear.

AWARNING

It is dangerous if the work equipment moves by mistake when the teeth are being replaced. Set the work equipment in a stable condition, then stop the engine and apply the locks securely to the levers.

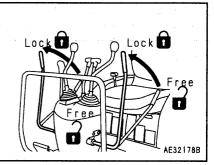


1. Set a block under the bottom face of the bucket, check that the work equipment is in a stable condition, then set the safety lock lever to the LOCK position.


Set so that the bottom face of the bucket is horizontal.

- 2. Remove bolt and nut 1) and 2), then remove tooth 3).
- 3. Install a new tooth to the bucket.

Bolt tightening torque: 167 \pm 20 Nm (17 \pm 2 kgm, 123 \pm 14 lbft)

After operating for several hours, retighten the tooth mounting bolt.

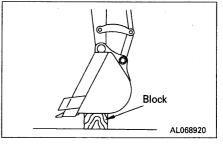

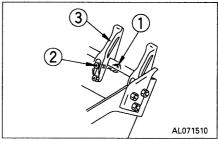


24.3 CHECK BEFORE STARTING

24.3.1 CHECK COOLANT LEVEL, ADD WATER

- AWARNING -

Do not open the radiator cap unless necessary. When checking the coolant, always check the radiator reserve tank when the engine is cold.

- Open the engine food and check that the cooling water level is between the FULL and LOW marks on radiator reserve tank ① (shown in the diagram on the right).
 If the water level is low, add water through the water filler of reserve tank ① to the FULL level.
- 2. After adding water, tighten the cap securely.
- 3. If the reserve becomes empty, first inspect for water leaks and then fill the radiator and the reserve tank with water.

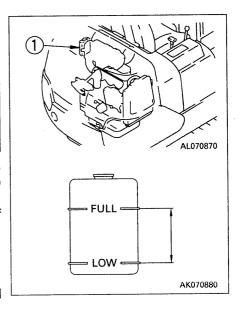



24.3.2 CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL

- 1. Open the engine hood and lock it securely with the hood support lever.
- 2. Remove dipstick @ and wipe the oil off with a cloth.
- 3. Insert dipstick @ fully in the oil filler pipe, then take it out again.
- The oil level should be between the H and L marks on dipstick ⑤.
 If the oil level is below the L mark, add engine oil through oil filler ⑥.



For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

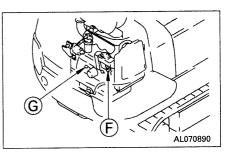

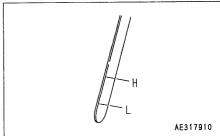

- 5. If the oil is above the H mark, drain the excess engine oil from drain valve (P), and check the oil level again.
- 6. If the oil level is correct, tighten the oil filler cap securely and close the engine hood.

REMARK

When checking the oil level after the engine has been operated, for at least 15 minutes after stopping the engine before checking. If the machine is at an angle, make it horizontal before checking.

24.3.3 CHECK FUEL LEVEL, ADD FUEL

AWARNING –

When adding fuel, never let the fuel overflow. This may cause a fire. If spilling fuel, thoroughly clean up any spillage.

- 1. Confirm that fuel gauge @ reads full.
- 2. If the fuel gauge reads E, supply fuel through fuel filler (F).

Fuel capacity: 19 ℓ (5.0 US gal, 4.2 UK gal)

NOTICE


For details of the fuel to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".


3. After adding fuel, tighten the cap securely.



REMARK

If breather hole ① on the cap is clogged, the pressure in the tank will drop and fuel will not flow.
Clean the hole from time to time.

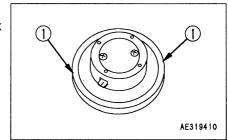


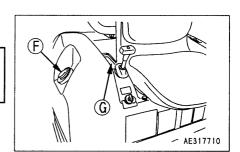

24.3.4 CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL

– 🛕 WARNING -

- When removing the oil filler cap, oil may spurt out, so turn the cap slowly to release the internal pressure before removing the cap.
- If oil has been added to above the H mark, stop the engine and wait for the hydraulic oil to cool down, then drain the excess oil from the drain plug.
- 1. If the work equipment is not in the condition shown in the diagram on the right, start the engine run the engine at low speed, retract the arm and bucket cylinders, then lower the boom, set the bucket teeth in contact with the ground, and stop the engine.

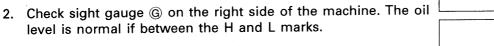

Do not add oil if the level is above the H line. This will damage the hydraulic equipment and cause the oil to spurt out.

3. If the level is below the L mark, remove the upper cover of the hydraulic tank and add oil through oil filler F.




NOTICE


For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".


REMARK

The oil level will vary depending upon the oil temperature. Accordingly, use the following as a guide:

- Before operation: around L level (Oil temperature 10 to 30°C (50 to 86°F))
- Normal operation: around H level (Oil temperature 50 to 80°C (122 to 176°F))

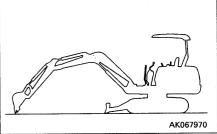

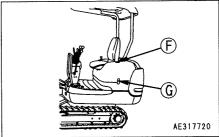

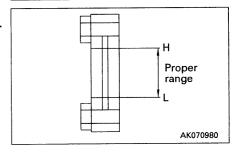


24.3.5 CHECK FUEL FILTER ELEMENT (WITH WATER SEPARATOR)

If red ring 1 in the fuel filter is at the bottom of case 2, no water is in the fuel filter.

If red ring ① is floating, water is filled up to the bottom of the ring. in this case, drain the water according to the following procedure.

Prepare the filter wrench for the fuel filter.

- 1. Open the engine hood.
- 2. Turn handle ③ to the CLOSE position.
- 3. Loosen ring 4 with the filter wrench and remove case 2 to drain the water from the case.
- 4. Set case 2 and tighten ring 4.
- 5. Referring to "24.2.3 DRAIN WATER AND SEDIMENT FROM FUEL TANK", drain the water and sediment from the fuel tank.

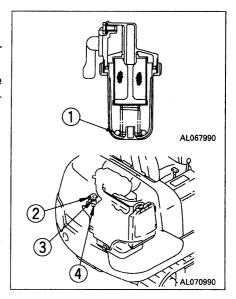


24.4 EVERY 100 HOURS SERVICE 24.4.1 LUBRICATING

- 1. Set the work equipment in the greasing posture below, then lower the work equipment to the ground and stop the engine.
- 2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
- 3. After greasing, wipe off any old grease that was pushed out.
- 1. Swing pinion (1 point)
- 2. Swing circle (1 point)
- 3. Bucket Link coupling pin (1 point)
- 4. Arm Bucket coupling pin (1 point)

A WARNING -

When lubricating the swing pinion, turn the chassis little by little and apply grease through the grease fitting.

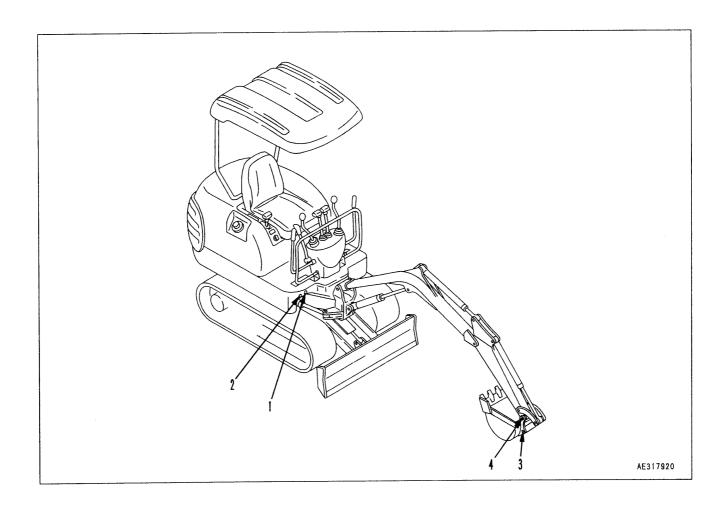

24.5 EVERY 250 HOURS SERVICE


24.5.1 CHANGE OIL IN ENGINE OIL PAN

- 🕰 WARNING --

The oil is at high temperature after the engine has been operated, so never change the oil immediately after finishing operations. Wait for the oil to cool down before changing it.

Prepare the following.

- Container to catch drained oil: Min. 4 ℓ capacity
- Refill capacity: 3 ℓ (0.78 US gal, 0.66 UK gal)
- Filter wrench for engine oil filter cartridge
- 1. Set a container to catch the oil immediately under the drain plug at the bottom of the machine.
- 2. Remove drain plug P slowly to avoid getting oil on yourself, and drain the oil.
- 3. Check the drained oil, and if there are excessive metal particles or foreign material, please contact your Komatsu distributor.
- 4. Install drain plug P.
- 5. After replacing the filter cartridge, add engine oil through oil filler (F) until the oil level is between the H and L marks on the dipstick.

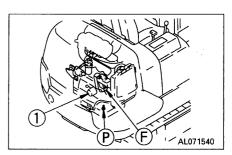

NOTICE

For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

 Run the engine at idling for a short time, then stop the engine, and check that the oil level is between the H and L marks on the dipstick. For details, see "24.3.2 CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL".

NOTICE

Even if the machine has not been operated for 250 hours, the oil and filter cartridge must be replaced when the machine has been operated for 6 months.

In the same way, even if the machine has not been operated for 6 months, the oil and filter cartridge must be replaced when the machine has been operated for 250 hours.

24.5.2 CHECK LEVEL OF BATTERY ELECTROLYTE

– 🛕 WARNING –

- To avoid gas explosions, do not bring fire or sparks near the battery.
- Battery electrolyte is dangerous. If it gets in your eyes or on your skin, wash it off with large amounts of water, and consult a doctor.


Carry out this check before operating the machine.


- 1. Remove the floor cover on left side and open the battery case cover.
- 2. Remove cap ①, and check that the electrolyte is at the specified level (10 to 12 mm (0.40 to 0.47 in) above the plate). If the electrolyte level is low, add distilled water to the specified level.

If the battery electrolyte is spilled, have dilute sulphuric acid added.

3. Clean the air hole in the battery cap, then tighten the cap securely.

When adding distilled water in cold weather, add it before starting operations in the morning to prevent the electrolyte from freezing.

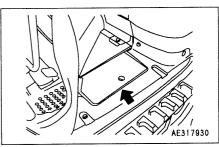

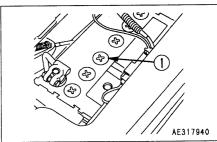

24.5.3 REPLACE HYDRAULIC FILTER ELEMENT


- 🕰 WARNING --


When removing the oil filler cap, turn it slowly to release the internal pressure before removing it.


- 1. Fold the operator's seat forward.
- 2. Remove the cap from oil filler (F), and release the internal pressure.
- 3. Using a filter wrench, turn filter cartridge ① counterclockwise to remove it.
- 4. Clean the filter holder, coat the seal surface of the new filter cartridge with engine oil (or coat it thinly with grease), and install the cartridge to the filter holder.
- 5. When installing, tighten until the packing surface contacts the seal surface of the filter holder, then tighten it a further 1/2 to 3/4 of a turn.
- 6. Extend the boom, arm, and bucket cylinders fully as shown in the diagram on the right, remove the oil filler cap, then fit it again and pressurize the tank.

When the hydraulic breaker is installed, the hydraulic oil deteriorates earlier than in normal bucket digging work.

The first element replacement should be at 100 to 150 hours for new machines. Thereafter, replace the element according to the table on the right.

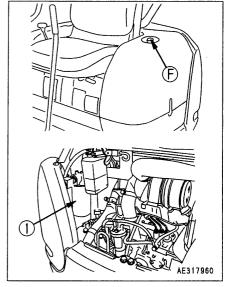


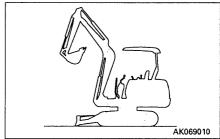

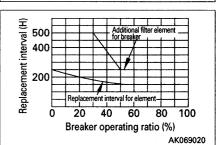

24.5.4 CHECK FAN BELT TENSION, ADJUST Checking


The belt should normally deflect by about 10-15 mm (0.4-0.6 in) when pressed with the finger (with a force of approx. 6 kg (13 lb)) at a point midway between the crankshaft pulley and fan pulley.

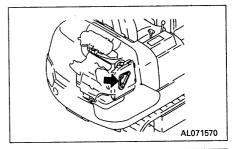


Adjusting

Prepare the following.

- Bar
- Wooden block
- 1. Insert a bar between alternator ① and the cylinder block to fix alternator ① in position. When fixing alternator ① in position, insert a wooden block between the bar and alternator ① to prevent damage to the alternator.
- 2. Loosen bolts and nuts 2, 3 and 4.
- 3. Move alternator 1 with a bar so that the deflection of the belt is 10-15 mm (0.4 0.6 in) (approx. 6 kg (13 lb)).
- 4. Tighten the bolts and nuts ②, ③ and ④ to fix alternator ① in position.
- 5. Check each pulley for damage, wear of the V-groove, and wear of the V-belt. In particular, be sure to check that the V-belt is not touching the bottom the V-groove.
- 6. If the belt is stretched, leaving no allowance for adjustment, or if it is cut or cracked, please contact your Komatsu distributor for replacement.

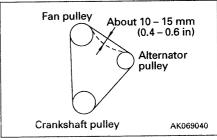

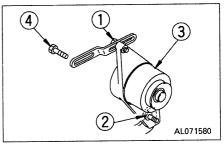

24.5.5 CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL


-AWARNING -

- The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before starting the operation.
- If there is still pressure remaining inside the case, the oil or plug may fly out.

Loosen the plug slowly to release the pressure.

Prepare the following.

- Container to catch drained oil
- Hexagon wrench (Width across flats: 4 mm, 8 mm)
- 1. Set so that the 2 level plugs ① are horizontal to the ground surface and drain plug ② is at the bottom position.
- 2. Remove either of plugs ①. If the oil is not filled up to the bottom of the plug hole, supply engine oil (CD SAE30, regardless of the temperature) through the plug hole.

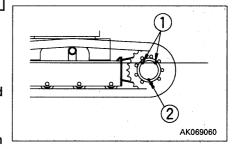

NOTICE

For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

24.6 EVERY 500 HOURS SERVICE

Maintenance for every 100 and 250 hours service should be carried out at the same time.

24.6.1 REPLACE ENGINE OIL FILTER CARTRIDGE


WARNING

The oil is at high temperature after the engine has been operated, so never change the oil immediately after finishing operations. Wait for the oil to cool down before changing it.

Change oil in engine pan with this maintenance.

Prepare the following.

- Container to catch drained oil: Min. 4 ℓ capacity
- Refill capacity: 3 ℓ (0.78 US gal, 0.66 UK gal)
- Filter wrench for engine oil filter cartridge
- 1. Set a container to catch the oil immediately under the drain plug at the bottom of the machine.
- 2. Remove drain plug P slowly to avoid getting oil on yourself, and drain the oil.
- 3. Check the drained oil, and if there are excessive metal particles or foreign material, please contact your Komatsu distributor.
- 4. Install drain plug P.
- 5. Using a filter wrench, turn filter cartridge ① counterclockwise to remove it.
 In particular, if this operation is carried out immediately after stopping the engine, a large amount of oil will come out, so wait for 10 minutes before starting the operation.
- 6. Clean the filter holder, coat the packing surface of a new filter cartridge with engine oil (or coat it thinly with grease), then install it to the filter holder.

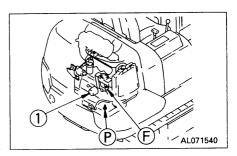

- 7. When installing; tighten until the packing surface contacts the seal surface of the filter holder, then tighten it up 1/2 to 3/4 of a turn.
- 8. After replacing the filter cartridge, add engine oil through oil filler (F) until the oil level is between the H and L marks on the dipstick.

NOTICE

For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

 Run the engine at idling for a short time, then stop the engine, and check that the oil level is between the H and L marks on the dipstick. For details, see "24.3.2 CHECK OIL LEVEL IN ENGINE OIL PAN, ADD OIL".

24.6.2 CLEAN, CHECK RADIATOR FINS


-AWARNING -


If the compressed air, steam, or water hit your body directly, there is danger of injury. Always wear protective glasses, mask, and safety shoes.

- 1. Open the engine food.
- 2. Use compressed air to blow off the mud, dirt, or leaves clogging radiator fins.

At the same time, clean the net in front of the oil cooler. Clean the condenser fins on machines equipped with the air conditioner.

Steam or water may be used instead of compressed air.

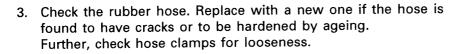

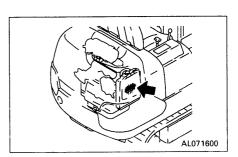

NOTICE

To prevent damage to the fins, apply compressed air from an appropriate distance. Damaged fins may cause water leakage or overheating. In a dusty site, check the fins daily, irrespective of the maintenance interval.

24.6.3 REPLACE FUEL FILTER ELEMENT (WITH WATER SEPARATOR)

A WARNING -

- Engine is at high temperature immediately after the machine has been operated. Wait for engine to cool down before replacing the filter.
- Do not bring fire or sparks near the fuel.

Prepare the following.

- Filter wrench for fuel filter element
- Container to catch drained fuel
- 1. Set the container to catch the fuel under the filter element.
- 2. Using the filter wrench, loosen ring (1), then take out element.
- 3. Wash element cup ② in light oil or in a cleaning oil and install a new element.



When replacing a fuel filter element, replace the filter O-ring at the same time.

4. After replacing the fuel filter element, bleed the air. The air in the fuel circuit can be bled only by turning the starting motor with the starting switch. Bleed the air according to the following procedures.


Normal air bleeding procedure

- (1) Add fuel to the fuel tank until full (to FULL mark on the fuel gauge).
- (2) Set the fuel control lever at the low idling (MIN) position.
- (3) Turn the starting switch key to the START position and hold for 15 to 20 seconds.
 - The cranking will stop during this time, but the air is automaticallyd if the key is kept at the START position.
- (4) When the starting switch key is returned to the OFF position then turned to START again, the engine will start.

REMARK

When the engine has run out of fuel, carry out the same procedure and crank the engine for 15 - 20 seconds.


Repeat this operation 6 times to bleed the air.

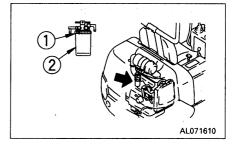


24.6.4 REPLACE FEED PUMP PRE-FILTER

- 🛕 WARNING —

- Do not replace the pre-filter just after stopping the engine, since each part is still hot. Wait until each part has cooled.
- After replacing the pre-filter, connect the fuel hoses securely so that fuel will not leak.
- Do not bring an open flame near the pre-filter.
- Prepare a fuel receiving container.
- 1. Set a fuel receiving container under the pre-filter ①.
- 2. Set the fuel control lever to the low idling position.
- 3. Remove pre-filter 1) from clamp 2).
- 4. Loosen clamp 3 and remove fuel hose 4 from pre-filter 1.
- 5. Loosen clamp (5) and remove fuel hose (6) from pre-filter (1).
- 6. Connect fuel hoses 4 and 6 of new pre-filter 1, then secure them with clamps 3 and 5.
- 7. Install pre-filter 1 to clamp 2.
- 8. After replacing the pre-filter, bleed air. For the air bleeding procedure, see "24.6.3 REPLACE FUEL FILTER (WITH WATER SEPARATOR)".

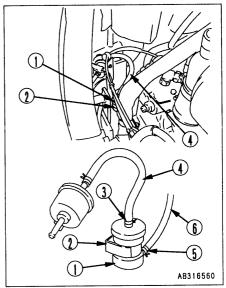

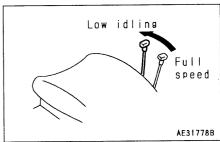

24.7 EVERY 1000 HOURS SERVICE

Maintenance for every 100, 250 and 500 hours should be carried out at the same time.

24.7.1 CHANGE OIL IN FINAL DRIVE CASE

WARNING -


- The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before carrying out maintenance.
- If there is still pressure remaining inside the case, the oil or plug may fly out.

Loosen the plug slowly to release the pressure.

Prepare the following.

- Container to catch drained oil: Min. 0.3 ℓ capacity
- Refill capacity: 0.3 \(\ell \) (0.08 US gal, 0.07 UK gal)
- Hexagon wrench (Width across flats: 4 mm, 8 mm)

- 1. Set so that the 2 level plugs ① are horizontal to the ground surface and drain plug ② is at the bottom position.
- 2. Remove plug 2 and drain the oil, then tighten plug 2 again.
- Add engine oil through plug hole ① to the specified level. After adding oil, check the oil level. For details, see "24.5 EVERY 250 HOURS SERVICE."

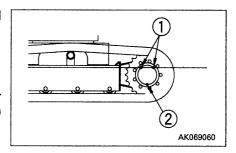

NOTICE

For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

24.8 EVERY 2000 HOURS SERVICE

Maintenance for every 100, 250, 500 and 1000 hours should be carried out at the same time.


24.8.1 CHANGE OIL IN HYDRAULIC TANK, CLEAN STRAINER

- 🛕 WARNING –


The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before changing the oil. When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it carefully.

Prepare the following


- Container to catch drained oil: Min. 22 ℓ capacity
- Refill, capacity: 22 ℓ (5.81 US gal, 4.84 UK gal)
- Prepare a handle for the socket wrench set.
- Retract the arm and bucket cylinders to the stroke end, then lower the boom and put the bucket teeth in contact with the ground.
- 2. Lower the blade to the ground.

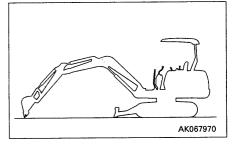


3. Remove the cover over the hydraulic tank and remove the cap of oil filler (F).

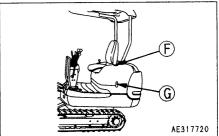

When removing drain plug $\ensuremath{\mathbb{P}}$, be careful not to get oil on yourself.

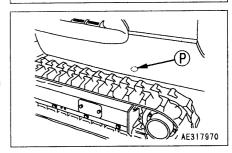

- 5. Loosen hose band 1) and bolt 2), then remove flange 3).
- Remove the dirt stuck to strainer (4), then wash it in clean diesel oil or flushing oil.
 If strainer (4) is damaged, replace it with a new one.
- 7. Add the specified amount of engine oil through oil filler port (F). Check that the oil level is between H and L on the sight gauge.

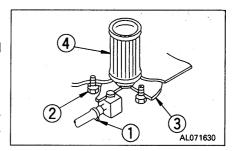



NOTICE

For details of the oil to use, see "20. USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE".

- 8. Pressurize hydraulic tank
 - Extend the boom, arm and bucket cylinders fully as shown in the diagram on the right, remove the oil filler cap, then install the cap and pressurize the inside of the tank.


After changing the oil, place all the control levers at neutral, and run the engine at low idling for approx. 2-3 minutes before starting work.

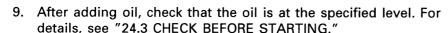

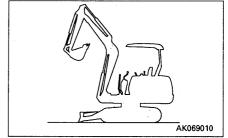

NOTICE

When the hydraulic breaker is installed, the hydraulic oil deteriolrates earlier than in normal bucket digging work. Therefore, replace the hydraulic oil according to the table at the right.

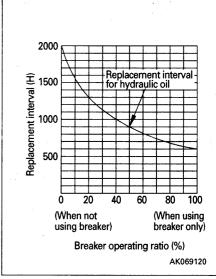

24.8.2 CHECK ALTERNATOR, STARTING MOTOR

The brush may be worn, or the bearing may have run out of grease, so contact your Komatsu distributor for inspection or repair. If the engine is started frequently, carry out inspection every 1000 hours.

24.8.3 CHECK ENGINE VALVE CLEARANCE, ADJUST

As special tool is required for removing and adjusting the parts, you shall request Komatsu distributor for service.


SPECIFICATIONS

25. SPECIFICATIONS

PC12R


		Rubber shoe	Steel shoe
WEIGHT			
Operating weight (without operator)		1220 kg (2756 lb)	1260 kg (2778 lb)
PERFORMANCE			
Bucket capacity (standard bucket) SAE/CE		0.04 m³ (0.05 cu.yd)/0.035 m³	
Width of operating (Standard bucket)	(Without side cutter)	350 mm (13.8 in)	
	(With side cutter)	400 mm (15.7 in)	
Travel speed		4.0 km/h (2.4 MPH)	2.1 km/h (1.26 MPH)
Swing speed		8.7 rpm	
• Track shoe		200 mm (8 in)	230 mm (9.06 in)
ENGINE			
Model		Komatsu 3D68E-3G diesel engine	
Flywheel horsepower		10.3 kW (14 HP)/2450 rpm	
Starting motor		12 V 1.0 kW	
Alternator		12 V 20 A	
Battery		12 V 45 Ah x 1 Piece	

PC12R

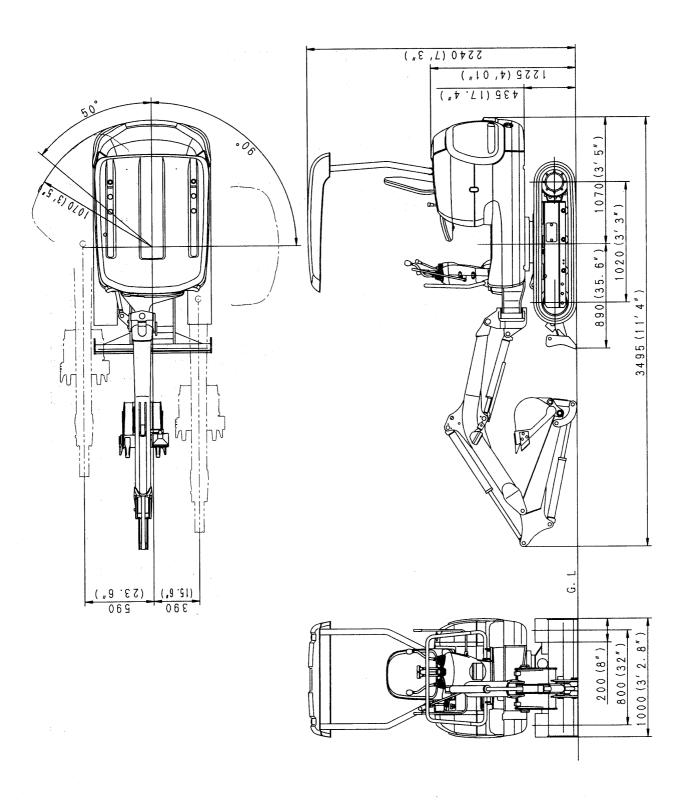

AD317980

PC12R

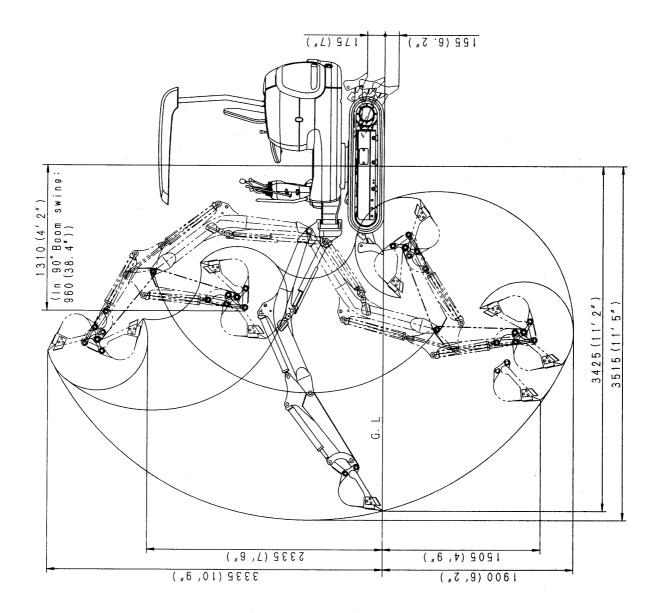


AD31935B

PC15R


		Rubber shoe	Steel shoe
WEIGHT			
Operating weight (without operator)		1375 kg (3032 lb)	1415 kg (3120 lb)
PERFORMANCE			
Bucket capacity (stan	dard bucket) SAE/CE	0.04 m³ (0.05 cu.yd)/0.035 m³	
Width of operating	(Without side cutter)	350 mm (13.8 in)	
(Standard bucket)	(With side cutter)	400 mm (15.7 in)	
Travel speed		4.7 km/h (2.8 MPH)	2.5 km/h (1.5 MPH
 Swing speed 		8.7 rpm	
• Track shoe		230 mm (9.06 in)	230 mm (9.06 in)
ENGINE			
Model		Komatsu 3D68E-3	BH diesel engine
Flywheel horsepower		11.2 kW (15.2 HP)/2600 rpm	
Starting motor		12 V 1.0 kW	
Alternator		12 V 20 A	
Battery		12 V 45 Ah x 1 Piece	

PC15R

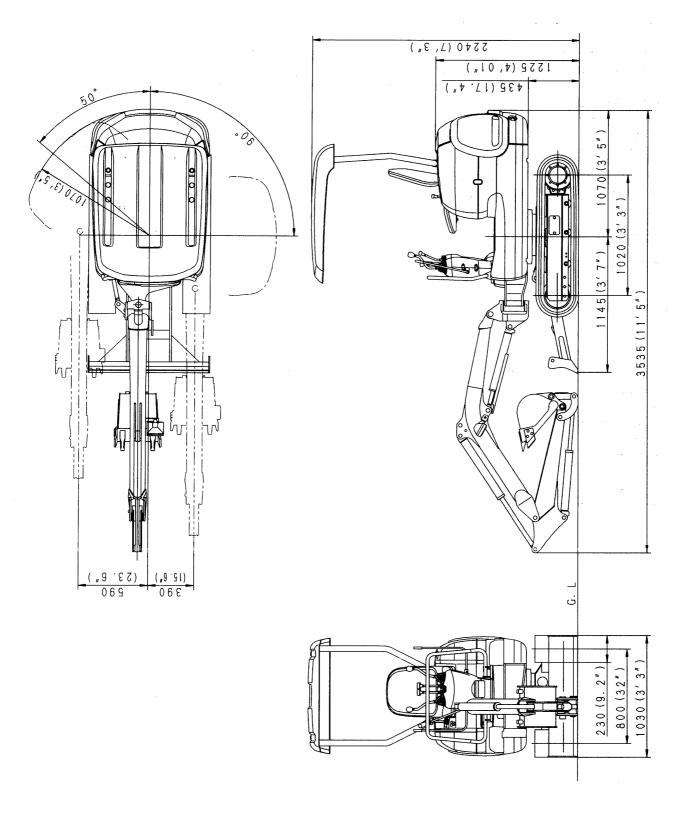

AD318000

PC15R

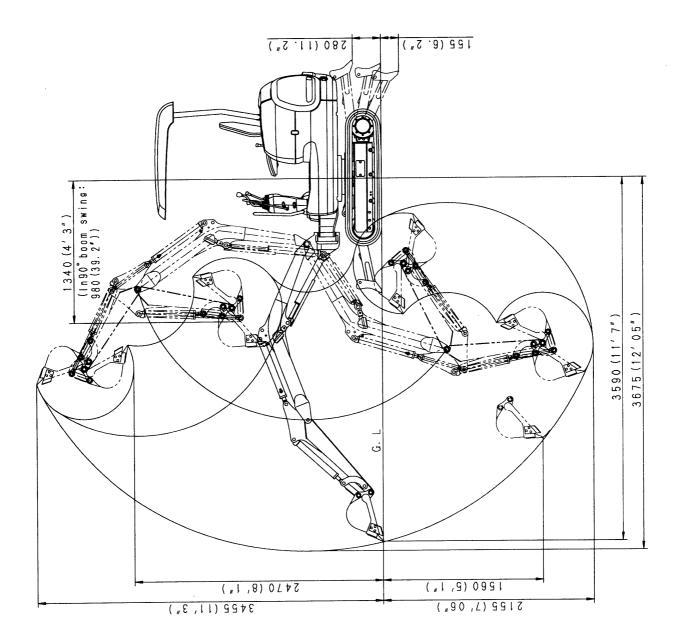

AD31799B

OPTIONS, ATTACHMENTS

26.1 PRECAUTIONS RELATED TO SAFETY

If attachments or options other than those authorized by Komatsu are installed, this will not only affect the life of the machine, but will also cause problems with safety.

When installing attachments not listed in this Operation and Maintenance Manual, please contact your Komatsu distributor first.

If you do not contact Komatsu, we cannot accept any responsibility for any accident or failure.

MARNING -

Precautions for removal and installation operations

When removing or installing attachments, obey the following precautions and take care to ensure safety during the operation.

- Carry out the removal and installation operations on a flat, firm ground surface.
- When the operation is carried out by two or more workers, determine signals and follow these during the operation.
- When carrying heavy objects (more than 25 kg (55 lb)), use a crane.
- When removing heavy parts, always support the part before removing it.
 When lifting such heavy parts with a crane, always pay careful attention to the position of the center of gravity.
- It is dangerous to carry out operations with the load kept suspended. Always set the load on a stand, and check that it is safe.
- When removing or installing attachments, make sure that they are in a stable condition and will not fall over.
- Never go under a load suspended from a crane.

 Always stand in a position that is safe even if the load should fall.

NOTICE

Qualifications are required to operate a crane. Never allow the crane to be operated by an unqualified person.


For details of the removal and installation operations, please contact your Komatsu distributor.


26.2 PRECAUTIONS WHEN INSTALLING ATTACHMENTS


WARNING -

Long work equipment reduces the stability of the chassis, so if the swing is operated on a slope, or when going down a steep hill, the machine may lose its balance and overturn. The following operations are particularly dangerous, so never operate the machine in these ways.

- Going downhill with the work equipment raised
- Traveling across slopes
- Swinging the upper structure on slopes

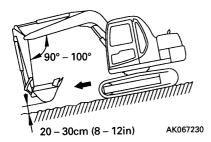

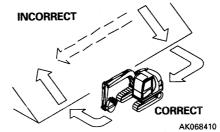

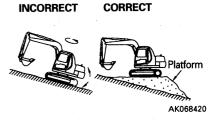

 If heavy work equipment is installed, the overrun of the swing becomes greater (the distance from the point where the operator operates the control levers to stop the swing to the point where the upper structure stops completely), so there is danger of mistaking the distance and hitting something.

Always operate so that there is an ample margin to the stopping point. Furthermore, the hydraulic drift also becomes larger (when the work equipment is stopped in mid-air, it will gradually move down under its own weight).

Always follow the correct procedure when installing the boom and arm. If the correct procedure
is not followed, this may lead to serious damage or injury, so please consult your Komatsu
distributor before carrying out installation.

If long work equipment is installed, the working range will suddenly become larger, so there is danger of mistaking the distance and hitting something.

Always operate the work equipment so that there is ample space from any obstacles in the area.

27.1 SEAT BELT


MARNING

- Before fastening the seat belt, inspect the securing brackets and belt for abnormal conditions.
 Replace any worn or damaged seat belt or the securing brackets.
- Adjust and fasten the seat belt before operating the machine.
- Always use seat belt when operating the machine.
- Do not use seat belt with either half of the belt kinked.

27.1.1 FASTEN THE BELT AND REMOVE IT

- 1. Adjust the seat so that the operator still feels that there is sufficient knee room when fully depressing the pedal while seated, with the operator's back against the backrest.
- 2. After adjusting the seat position, sit in the seat. Grip buckle ① and tongue ② in each hand and insert tongue ② into buckle ①. Confirm by pulling the belt that the tongue is securely locked to the buckle.
- 3. When removing the belt, raise the tip of buckle ① lever to release it


Fasten belt along your body without kinking it. Adjust the lengths of the belt on both the buckle and the tongue sides so that the buckle is located at the mid-point of your body front.

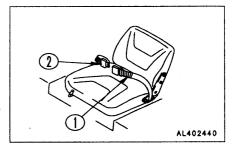

27.1.2 ADJUST THE BELT LENGTH

To shorten the blet

Pull the free end of the belt on either the buckle body or tongue side.

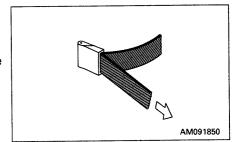


To lengthen the belt

Pull the belt while holding it at a right angle to buckle or tongue.

Inspect bolts and fittings on the chassis for tightness. Retighten any loose bolts to 20 to 29 Nm (2 to 3 kgm, 15 to 20 lbft) torque.

If the seat is scratched or frayed or if any of the fittings are broken or deformed from long service, replace the seat belt immediately.

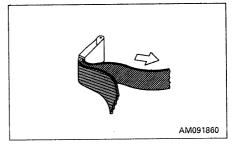

28. HANDLING BUCKET WITH HOOK

28.1 CHECKING FOR DAMAGE TO BUCKET WITH HOOK


Check that there is no damage to the hook, stopper, or hook mount. If any abnormality is found, please contact your Komatsu distributor.


28.2 PROHIBITED OPERATIONS


The standard work equipment must not be used for lifting loads. If this machine is to be used for lifting loads, it is necessary to install the special bucket with hook.

28.3 PRECAUTIONS DURING OPERATIONS

- When carrying out lifting operations, reduce the engine speed.
- Depending on the posture of the work equipment, there is danger that the wire or load may slip off the hook. Always be careful to maintain the correct hook angle to prevent this from happening.
- Never steer the machine while lifting a load.
- If the bucket with hook is turned and used for operations, it will hit the arm during dumping operations, so be careful when using it.
- Loads suspended must not exceed the limit indicated in the "LIFTING CAPACITY TABLE" stuck on the right-side lower portion of the driver's seat.
- If you wish to install a hook in the future, please contact your Komatsu distributor.

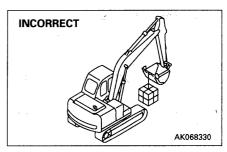

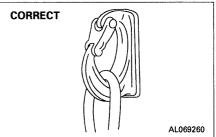

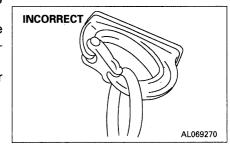

29. HANDLING 2-WAY PIPING

The 2-way piping is used when actuating attachments, such as the auger or crusher, which require switching the oil flow in two directions.

It can also be used for the breaker, or other attachments in which only one direction is needed for the oil flow.


29.1 SWITCHING BETWEEN 1-WAY AND 2-WAY


- 1. Remove the right half of the floor mat.
- 2. Use a 9 mm (0.35 in) wrench to turn notch 1 inside the cover and switch it between 1-way and 2-way.

Direction of notch

2-way: Auger and other attachments requiring oil flow in two directions.

1-way: Breaker and other attachments requiring oil flow in one direction.

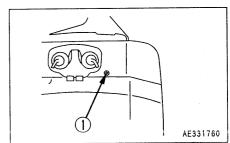

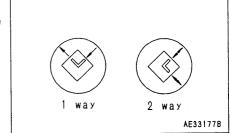



29.2 OPERATING PEDAL

A CAUTION-

When using 1-way, even if the pedal is depressed in the direction of B, there will be no supply of high pressure oil from D.

- When the pedal is depressed in direction A, high pressure oil is supplied from C.
- 2. When the pedal is depressed in direction B, high pressure oil is supplied from D. (2-way

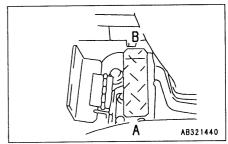

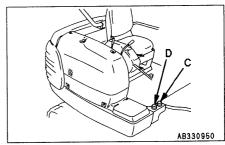

30. INTRODUCTION OF OPTIONAL PARTS AND ATTACHMENTS

30.1 INTRODUCTION OF OPTIONAL PARTS AND ATTACHMENTS

PC12R

	Part No.	Remarks
Standard bucket (W=400)	20M-70-75100	_
Narrow bucket (W=300)	20M-926-7100	_
Wide bucket (W=450)	20W-70-25100	_
Strengthen bucket (W=400)	_	_
Strengthen bucket (W=450)		
Seat belt	-	-

PC15R

	Part No.	Remarks
Standard bucket (W=450)	20W-70-25100	_
Narrow bucket (W=300)	20M-926-7100	_
Narrow bucket (W=400)	20W-70-75100	_
Strengthen bucket (W=400)		_
Strengthen bucket (W=450)	_	_
Stump-cut bucket (S)	20W-70-28410	_
Stump-cut bucket (L)	20W-70-28420	
Seat belt	_	

30.2 SELECTION OF TRACK SHOES (STEEL SHOE)

Select suitable track shoes to match the operating conditions.

Category	Use	Precautions when using
A	Rocky ground, riverbeds, normal soil	On rough ground with large obstacles such as boulders or fallen trees, travel at low speed.

	Specifications	Category
Standard	230 (9") Double grouser	А

30.3 COMBINATIONS TABLE OF ATTACHMENTS

The long arm and standard arm can be combined with the buckets according to the following table.

If the long arm is installed and the bucket is fully pulled toward the machine, it interferes with the machine body. Avoid this operation.

When lowering the boom while digging diagonally, it interferes with the undercarriage. Take care.

Classification of uses

For general digging:

Digging and loading of ordinary soil such as

sand, gravel, clay, etc.

For light digging:

Digging and loading of dry and loose soil,

sand, etc.

For loading:

Loading of dry and crumbled soil and sand.

Judgment

○: Usable

 \triangle : Usable for light work only

X: Unusable

PC12R

	Capacity (m³)	Opening width (mm)	Application	Standard arm	Long arm
Standard bucket	0.04	400	For general digging	0	Х
Narrow bucket	0.022	300	For narrow digging	0	0
Wide bucket	0.044	450	For loading	\triangle	Х

PC15R

	Capacity (m³)	Opening width (mm)	Application	Standard arm	Long arm
Standard bucket	0.044	450	For general digging	0	Х
Narrow bucket	0.022	300	For narrow digging	0	0
Narrow bucket	0.04	400	For narrow digging	0	Х

30.4 PRECAUTIONS FOR OPERATING WITH HYDRAULIC BREAKER

-A WARNING-

When using the hydraulic breaker, put on.
Put on a helmet, safety shoes, ear plugs, etc. For certain works, be sure to wear dust mask, protective goggles, gloves, etc.

Select the hydraulic breaker matched to the machine body.


 Use the hydraulic breaker we specify. For selection of the models, consult one of our distributors.

30.4.1 MAIN APPLICABLE APPLICATIONS


- Crushing stones
- o Demolition of buildings
- Road works

The hydraulic breaker can be used widely for demolishing buildings, breaking roads, tunnel construction, breaking slag, crushing stone, breaking rocks, etc.


Press the chisel at right angles at the point to be broken.

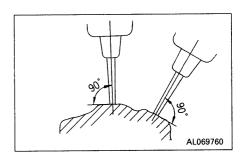


When producing impact, press the chisel against the point to be broken and lift the machine body about 5 cm (2 in). Do not lift the machine body more than necessity.

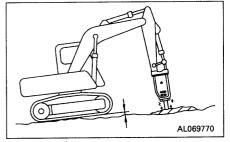


If the chisel cannot break or go through the point to be broken after producing impact for one minute continuously, change the breaking point and break the end of the block.

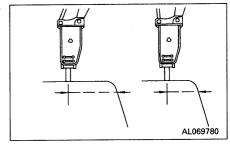

As the chisel is driven, it deviates from the direction of the breaker. Correct it's direction with the bucket cylinder.

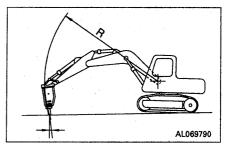

Press the chisel against the point to be broken correctly, so that it will not produce impact in the air.

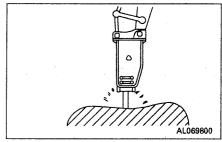


30.4.2 WRONG USES


To ensure that the machine has a long life, and to ensure that operations are carried out in safety, do not operate the machine in any of the following ways.

Do not operate the cylinder to the end of its stroke.
 Always leave approx. 5 cm (2 in) to spare.


Collect rocks with the mounting section

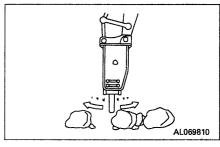


Work with swing force

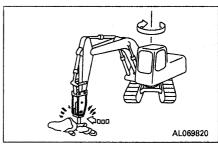


Move the chisel while it is producing impact

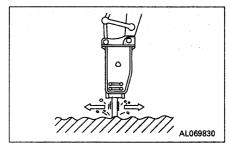


Produce impact horizontally or upward

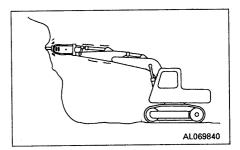


Incline the chisel after it goes through the ground

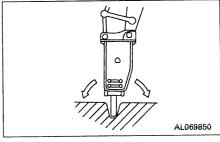


Pick the ground

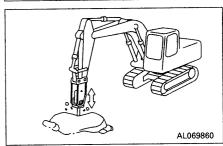

Lift the machine body with the bucket cylinder extracted to the end

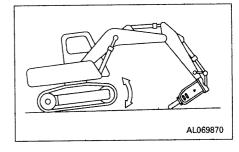

30.5 OPERATION OF QUICK BREAKER ARM

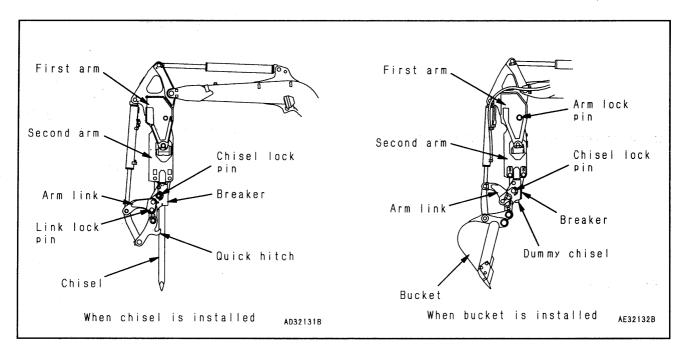

The quick breaker arm is used for breaking work with the bucket removed.

30.5.1 INSTALLATION OF CHISEL

- WARNING


- Be sure to insert lock pin ① securely.
 If this pin is not inserted, chisel lock pin ② will come out because of the breaking vibration and the chisel may come out during operation.
- If the direction of a chisel is different from the cut for chisel, it cannot be locked.
- If lock pin ① is not inserted securely, the chisel may fall by itself.


When installing and removing the chisel, be sure to hold it by hand securely and do not put your foot, etc. under it.

-A CAUTION-


If pin ③ is pulled out when the bucket is at a certain angle, the bucket turns around pin ④. Take care when removing pin ③.

1. Set the bucket angle as shown in the figure at right. Pull up the ring of lock pin ⑤, and remove lock pin ⑥, then pull out pin ③.

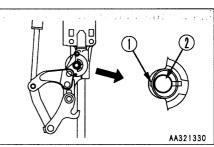


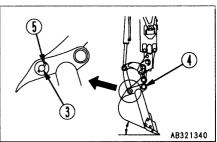


2. Lower the bucket to the ground and retract the bucket cylinder, then remove pin 4 from quick hitch 6.

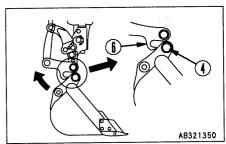


- 3. Install spacer ⑦ in tool box and insert link pin ③ after matching the hole of spacer ⑦ and the hole of link pin ③. And then insert lock pin ⑤ and push down the ring of lock pin ⑤.
- 4. Pull up the ring of lock pin ®, and remove pin ®, then pull out arm lock pin ⑨.
- 5. Match hole (a) of the breaker to link hole (b) by operating the bucket cylinder, and install arm lock pin (9) and lock pin (8).

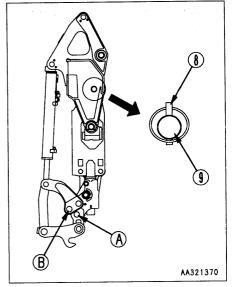


Extract the arm cylinder to the end and set the second arm horizontally by operating the bucket cylinder, then operate the boom control lever to bring the chisel to a position at which it can be removed easily.

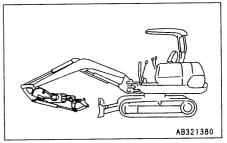


7. Pull up the ring and remove lock pin ①.

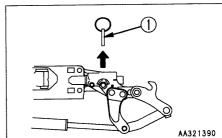


8. Pull out chisel lock pin 2 and remove dummy chisel 10.

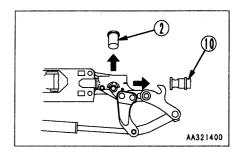

9. Match the sliding surface of the chisel to the pin, and insert the chisel in the breaker.

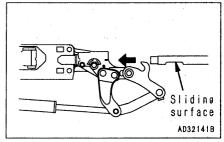

Install chisel lock pin ② and lock pin ①, then push down lock pin
 to lock securely.

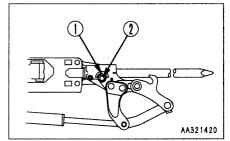

30.5.2 PRECAUTIONS FOR WORKING WITH QUICK BREAKER

· WARNING-


When using the breaker, put on protectors. Put on a helmet, safety shoes, ear plugs, etc. For certain works, be sure to wear dust mask, protective goggles, gloves, etc.

Main applications


Crushing stones Demolition of buildings Road works

The breaker can be used widely for demolishing buildings, breaking roads, tunnel construction, breaking slag, crushing stone, breaking rocks, etc.


If the chisel cannot break or go through the point to be broken after producing impact for one minute continuously, change the breaking point and break the end of the block.

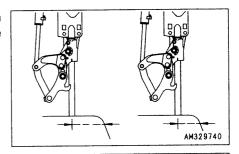

As the chisel is driven, it deviates from the direction of the breaker. Correct it direction with the bucket cylinder.

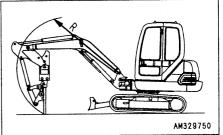

Press the chisel against the point to be broken correctly, so that it will not produce impact in air.

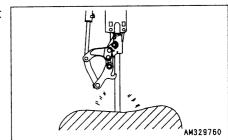


Wrong uses


Do not use the breaker as shown below for longer life of the machine and safer work.

Do not move the cylinder to the stroke end, but give a margin of about 5cm to it.


Collect rocks with the mounting section

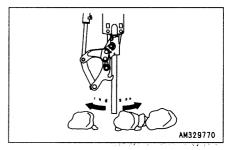

Work with swing force

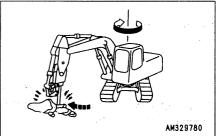


Move the chisel while it is producing impact

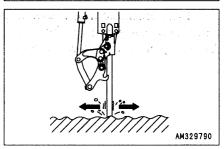


Commence of the second second second


Produce impact horizontally or upward

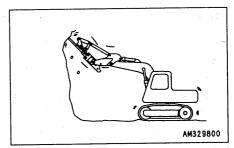


Incline the chisel after it goes through the ground

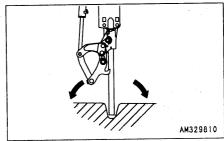


Pick the ground

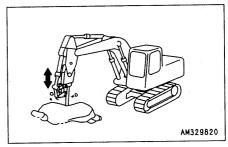

Use the breaker with arm lock pin ① inserted and link lock pin ② removed

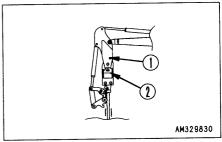

Use the breaker with arm lock pin ① removed and link lock pin ② inserted

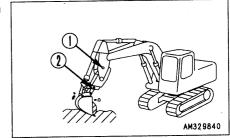


30.5.3 OPERATING PROCEDURE WITH BREAKER

· WARNING-

When the breaker is not used, lock it by locking the pedal. Lock the pedal by placing the plate on it. If the operator touches the operation pedal unnecessarily while it is not locked, a serious accident may result.

When using the breaker, put on protectors gears.

Put on a helmet, safety shoes, ear plugs, etc. For certain works, be sure to wear dust mask, protective goggles, gloves, etc.

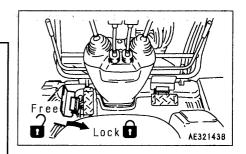

A CAUTION-


Do not produce impact to one point continuously for more than one minute. The oil may overheat.


Breaking operation

Operate the breaker: Press the pedal toward A (toward this side).

REMARK

Even if the pedal is pressed toward B, the breaker does not work. For higher breaking force, aim the point to be broken and lift up the front part of the machine by lowering the boom (up to 5 cm (2 in)) to apply the weight of the machine.

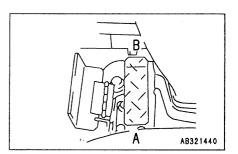

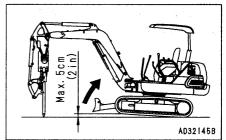


Working range of breaker

The working range of the breaker can be widened as shown in the figure at right by operating the arm cylinder and bucket cylinder.


(Unit: mm (in))

	Α	В	С
PC12R, 15R	890 (35.6)	450 (18)	280 (11)

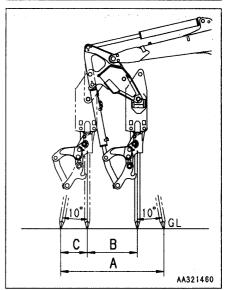


30.5.4 PRECAUTIONS FOR WORKING WITH BREAKER

Set the chisel at right angles to the point to be broken.

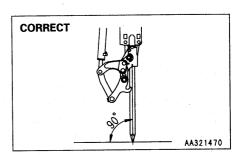


If the chisel is applied on a bias, the impact force of the breaker is not transferred to the point to be broken sufficiently. Limit the inclination angle of the chisel to 10°.

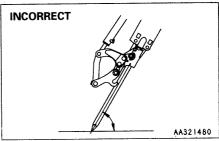

If the chisel is applied on a bias, it is inclined and the impact force is not applied. If the chisel is inclined (the impacts become weak), set it at right angles to the point to be broken by operating the arm.

REMARK

Operate the left-hand work equipment control lever finely by moving it lightly to set the chisel vertically.

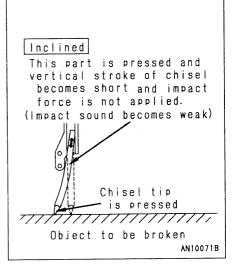

30.5.5 INSTALLATION OF BUCKET


-**A** Warning-

Install lock pin 1 securely.


If it is not inserted, chisel lock pin ② may come out while the bucket is used and the dummy chisel may come off.

If lock pin (1) is not inserted securely, the chisel may fall by itself. When installing and removing the chisel, be sure to hold it by hand securely and do not put your foot, etc. under it.


1. Extract the arm cylinder to the end and set the second arm horizontally by operating the bucket cylinder, then operate the boom control lever to bring the chisel to a position at which it can be removed easily.

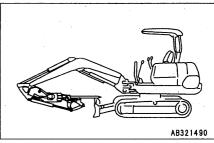


2. Pull up the ring and remove lock pin 1).

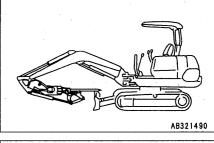


3. Pull out chisel lock pin 2 and remove chisel 3.

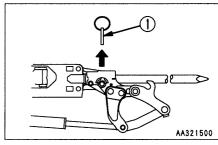


4. Insert dummy chisel 4 in the breaker.

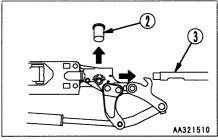


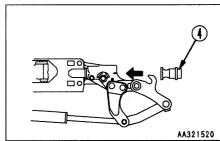

5. Install chisel lock pin ② and lock pin ①, then push down the ring of lock pin ① to lock securely.

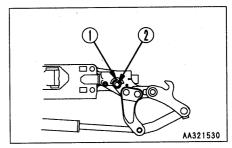


- 6. Set first arm ⑤ and second arm ⑥ vertically by operating the arm cylinder and bucket cylinder.
- 7. Match arm locking holes (A) of first arm (5) and second arm (6) to each other by operating the bucket cylinder, then install pin (7) and lock pin (8) and lower the ring.

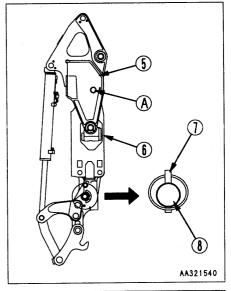


8. Pull up the ring of lock pin (9), and remove lock pin (9) and pull out pin (10), then remove spacer (11).

When pulling out pin (10), hold spacer (11) by hand. Store spacer (11) in the tool box.

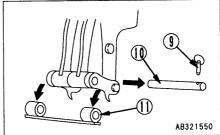


- 9. Retract the bucket cylinder. Retract the arm cylinder so that quick hitch (3) will be inserted in bucket pin (2).
- 10. Confirm that quick hitch (3) is securely inserted in bucket pin (2). Extract the bucket cylinder until quick hitch (3) is directed down by above 30 degrees.

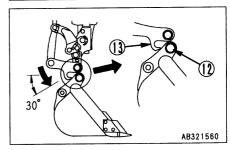


11. Raise the boom slowly to raise the bucket to a position at which pin (4) can be inserted easily.

Operate the bucket cylinder to match hole (4) of the bucket link, and insert pin (4) and lock pin (5), then lower the ring to lock securely.

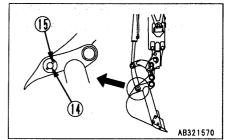

30.5.6 PRECAUTIONS FOR WORKING WITH BUCKET

Install dummy chisel ① so that soil will not enter the chisel fitting part. For installation of the dummy chisel, see "30.5.5 INSTALLATION OF BUCKET".

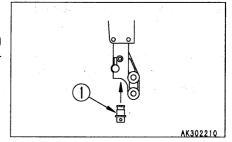

30.5.7 STORAGE OF CHISEL AND DUMMY CHISEL




Before installing the chisel and dummy chisel, wipe soil off them with a cloth.

Install the chisel and dummy chisel in the chisel holder installed to the back of the blade.


• Storage of chisel

Match the sliding surface of the chisel to the bars (2 pieces), and fit it to the springs.

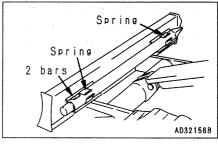

• Storage of dummy chisel

Fit the dummy chisel to the right-hand spring.

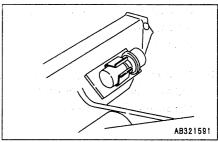

30.5.8 CHECK BEFORE STARTING


Check breaker arm bracket mounting bolts for looseness

Check bolts ① (three pieces) securing the bracket for looseness, and tighten them if necessary.

Bolt size: 24 x 1.5


Tightening torque: 0.82 - 1.03 kN·m (84 - 105 kgf·m)

Target: 0.93 kN·m (94.5 kgf·m)

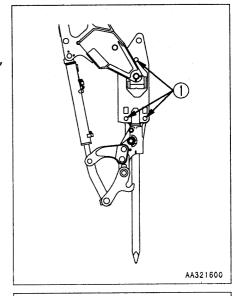


Supply grease to moil point

Since moil point 1 (chisel fitting part) is kept contact with the chisel, it may be seized. Before starting the work, supply grease to it 4-5 times.

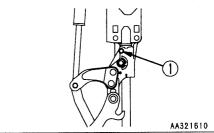


Supply grease to connecting pins of first arm and second arm (2 places)

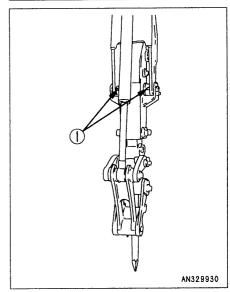

30.5.9 EVERY 100 HOURS SERVICE

Supply grease

- 1. Breaker/Link connecting pin (1 place)
- 2. Link connecting pin (1 place)
- 3. Breaker cylinder rod end (1 place)
- 4. Breaker/Quick hitch connecting pin (1 place)
- 5. Link/Quick hitch connecting pin (1 place)

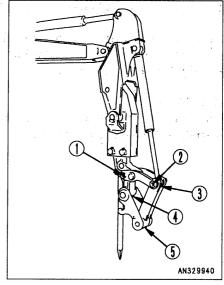


30.5.10 MAINTENANCE PERIOD OF CONSUMABLE PARTS

For the replacement of hydraulic oil filter element and hydraulic oil, see "23.2 MAINTENANCE INTERVAL WHEN USING HYDRAULIC BREAKER".


Replace seals and packing in breaker

Replace the seals and packing in the breaker according to the table shown at right.

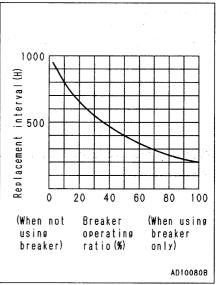

Quick breaker arm on PC12R, 15R-8

- Dimension in parenthesis means PC12R.
- Dimension with mark is the same PC12R as PC15R.

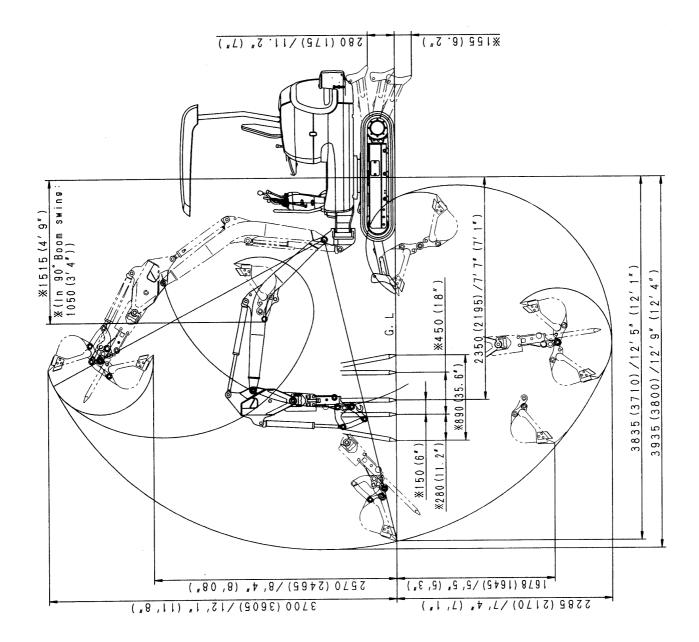

AD32303B

C12R-8, PC15R-8, HYDRAULIC EXCAVATOR	
orm No. SEAM015102T	
	©2000 KOMATSU All Rights Reserved Printed in Japan 06-00 (01-1)